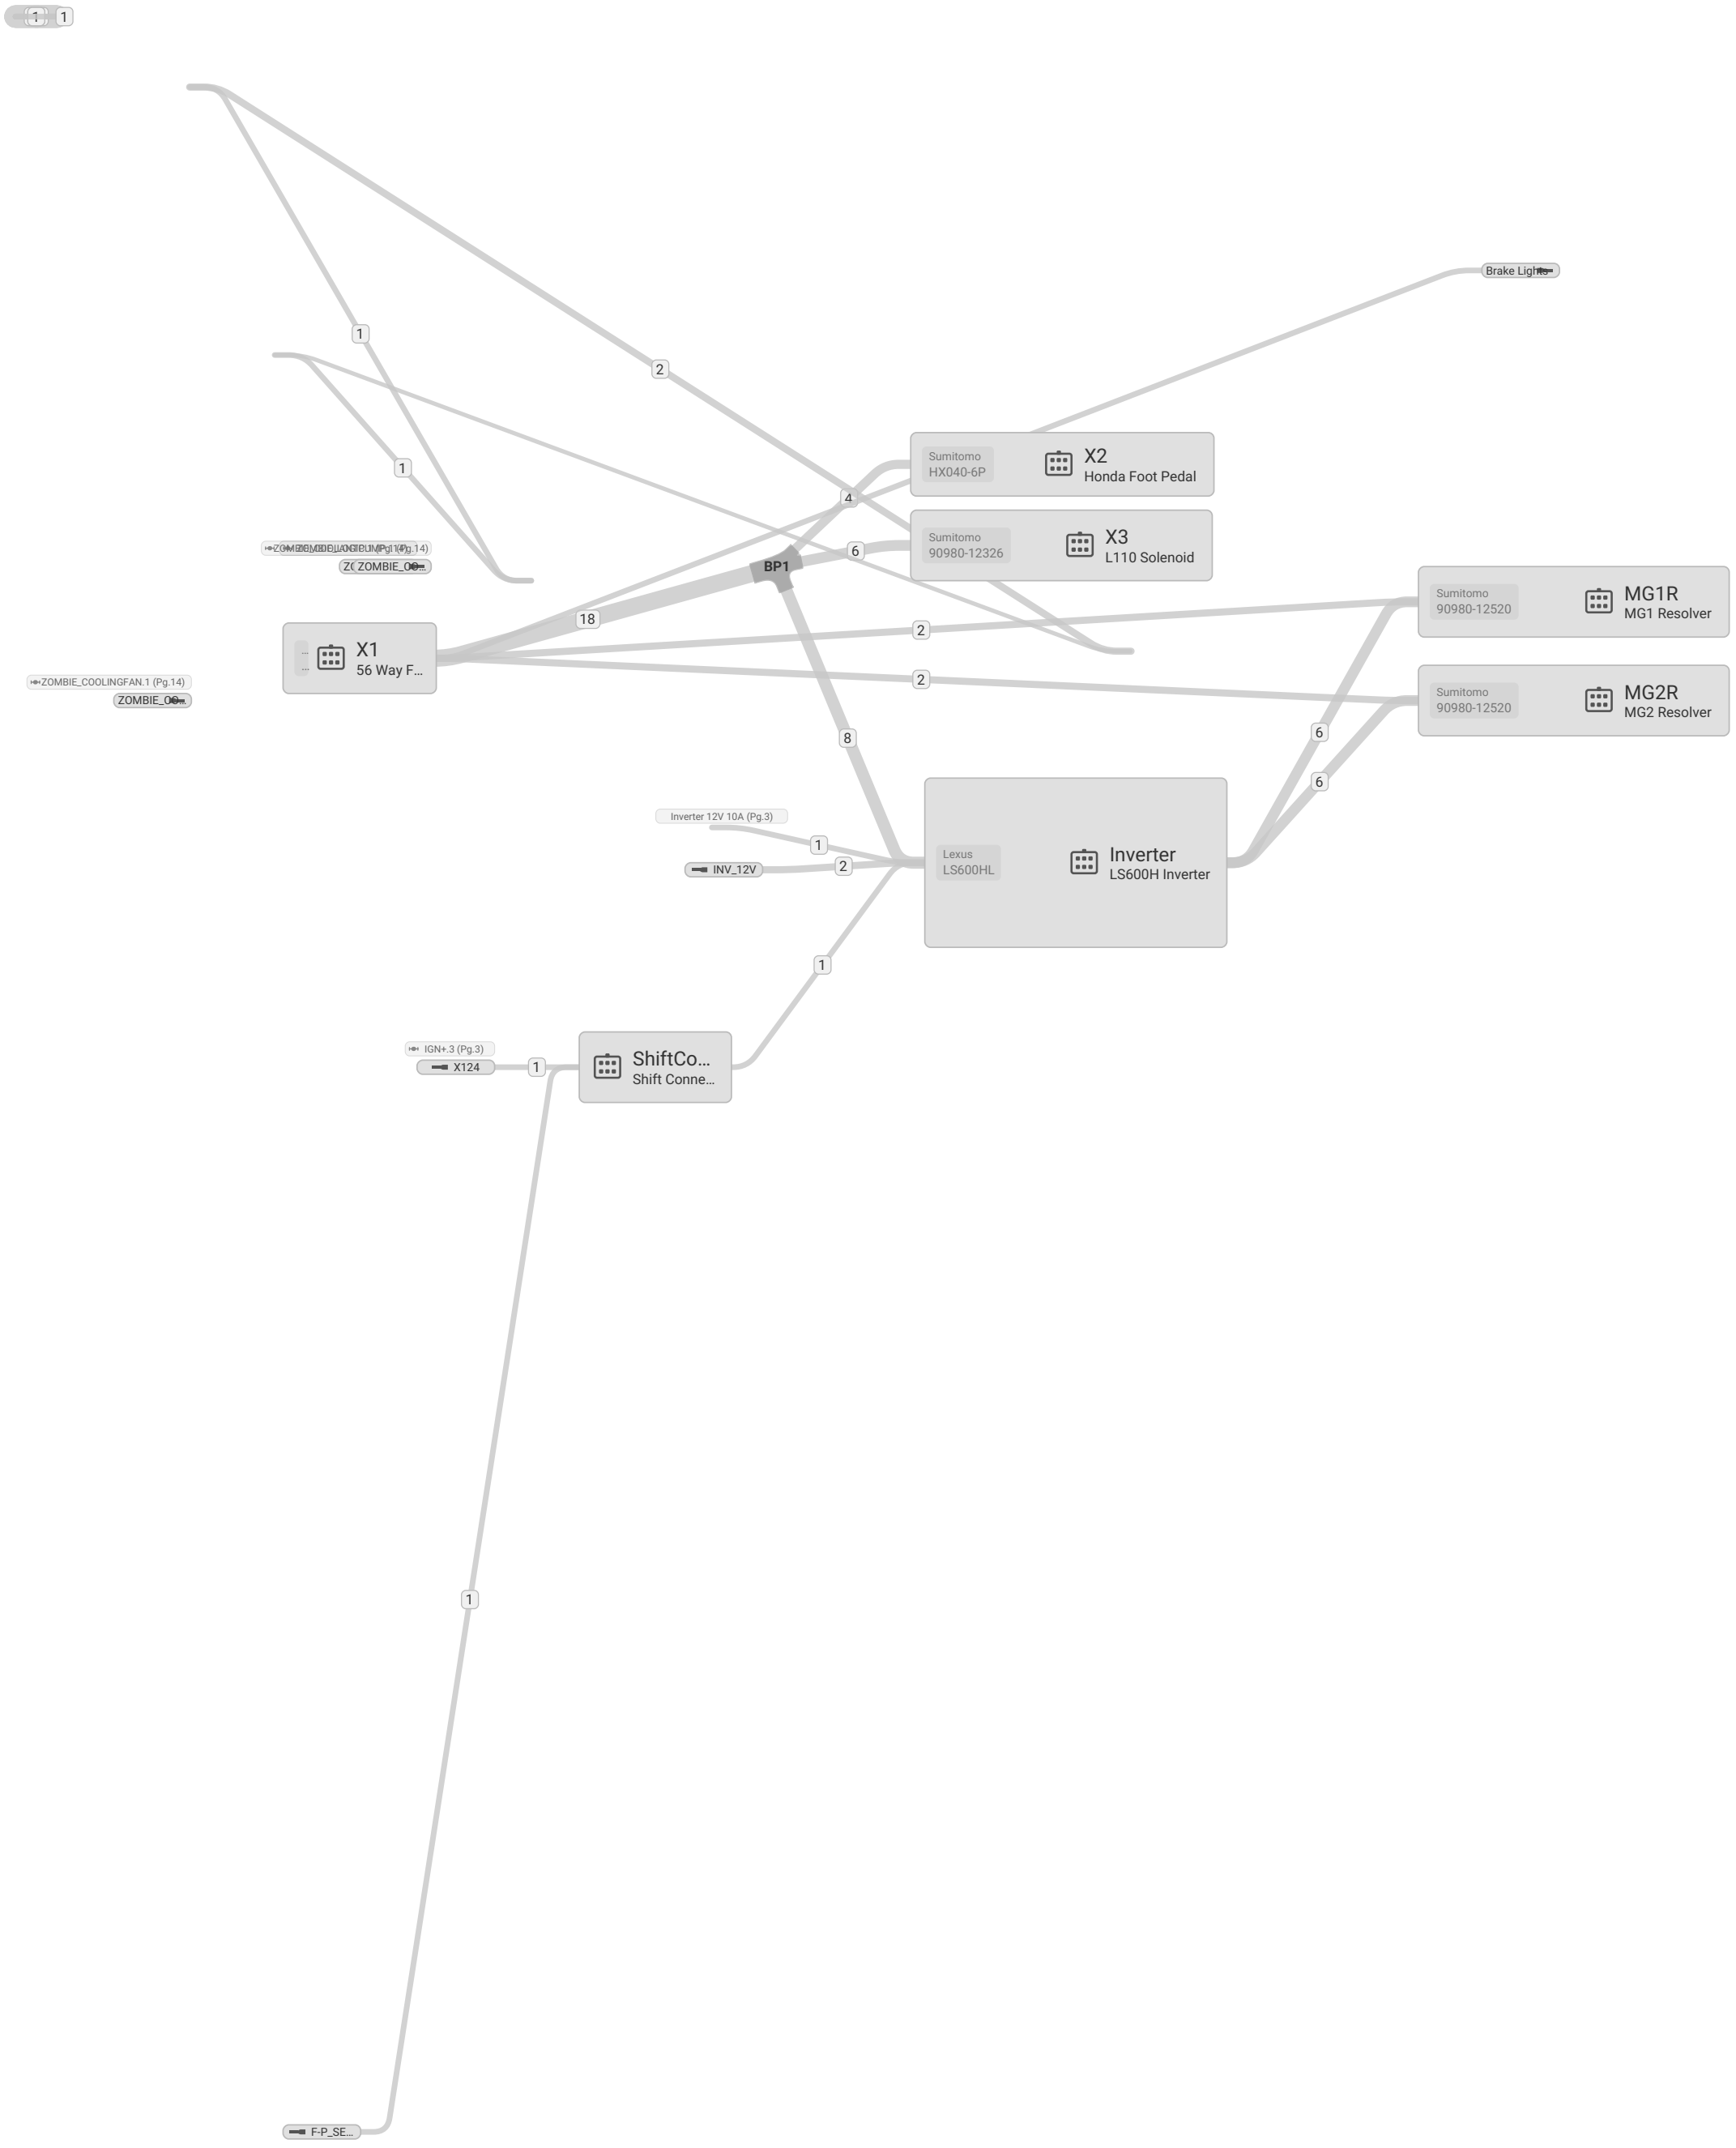
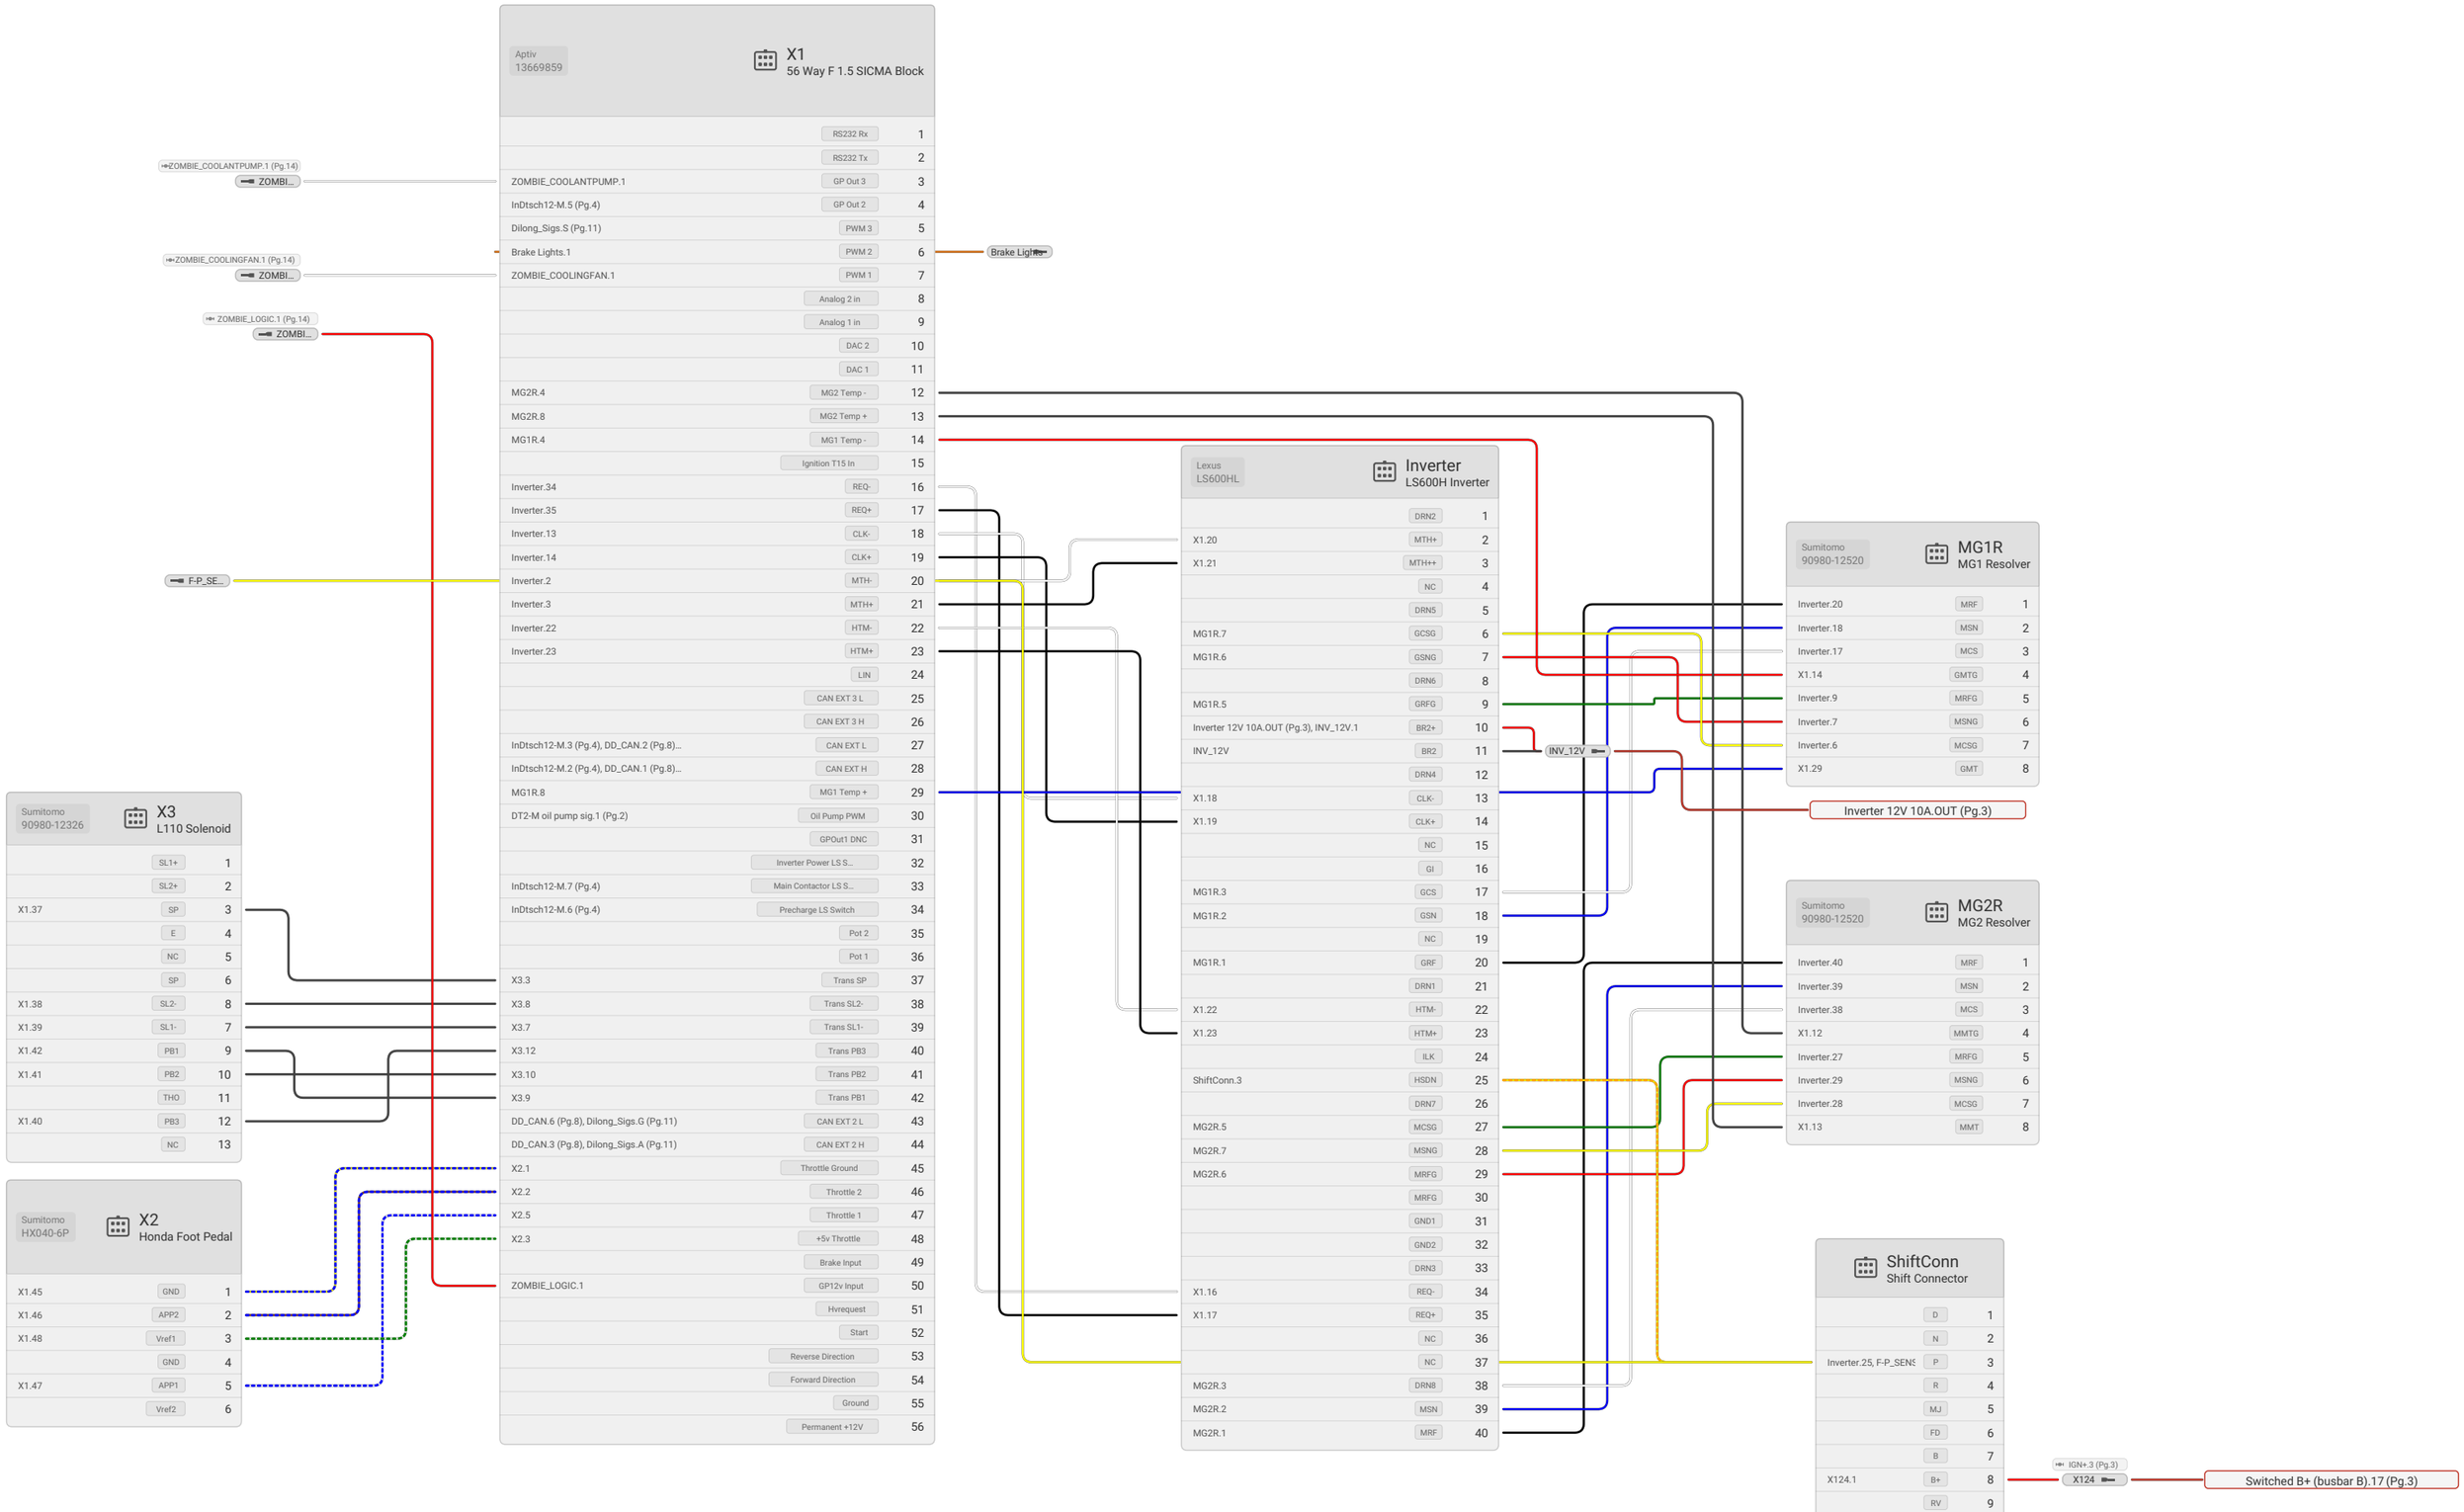
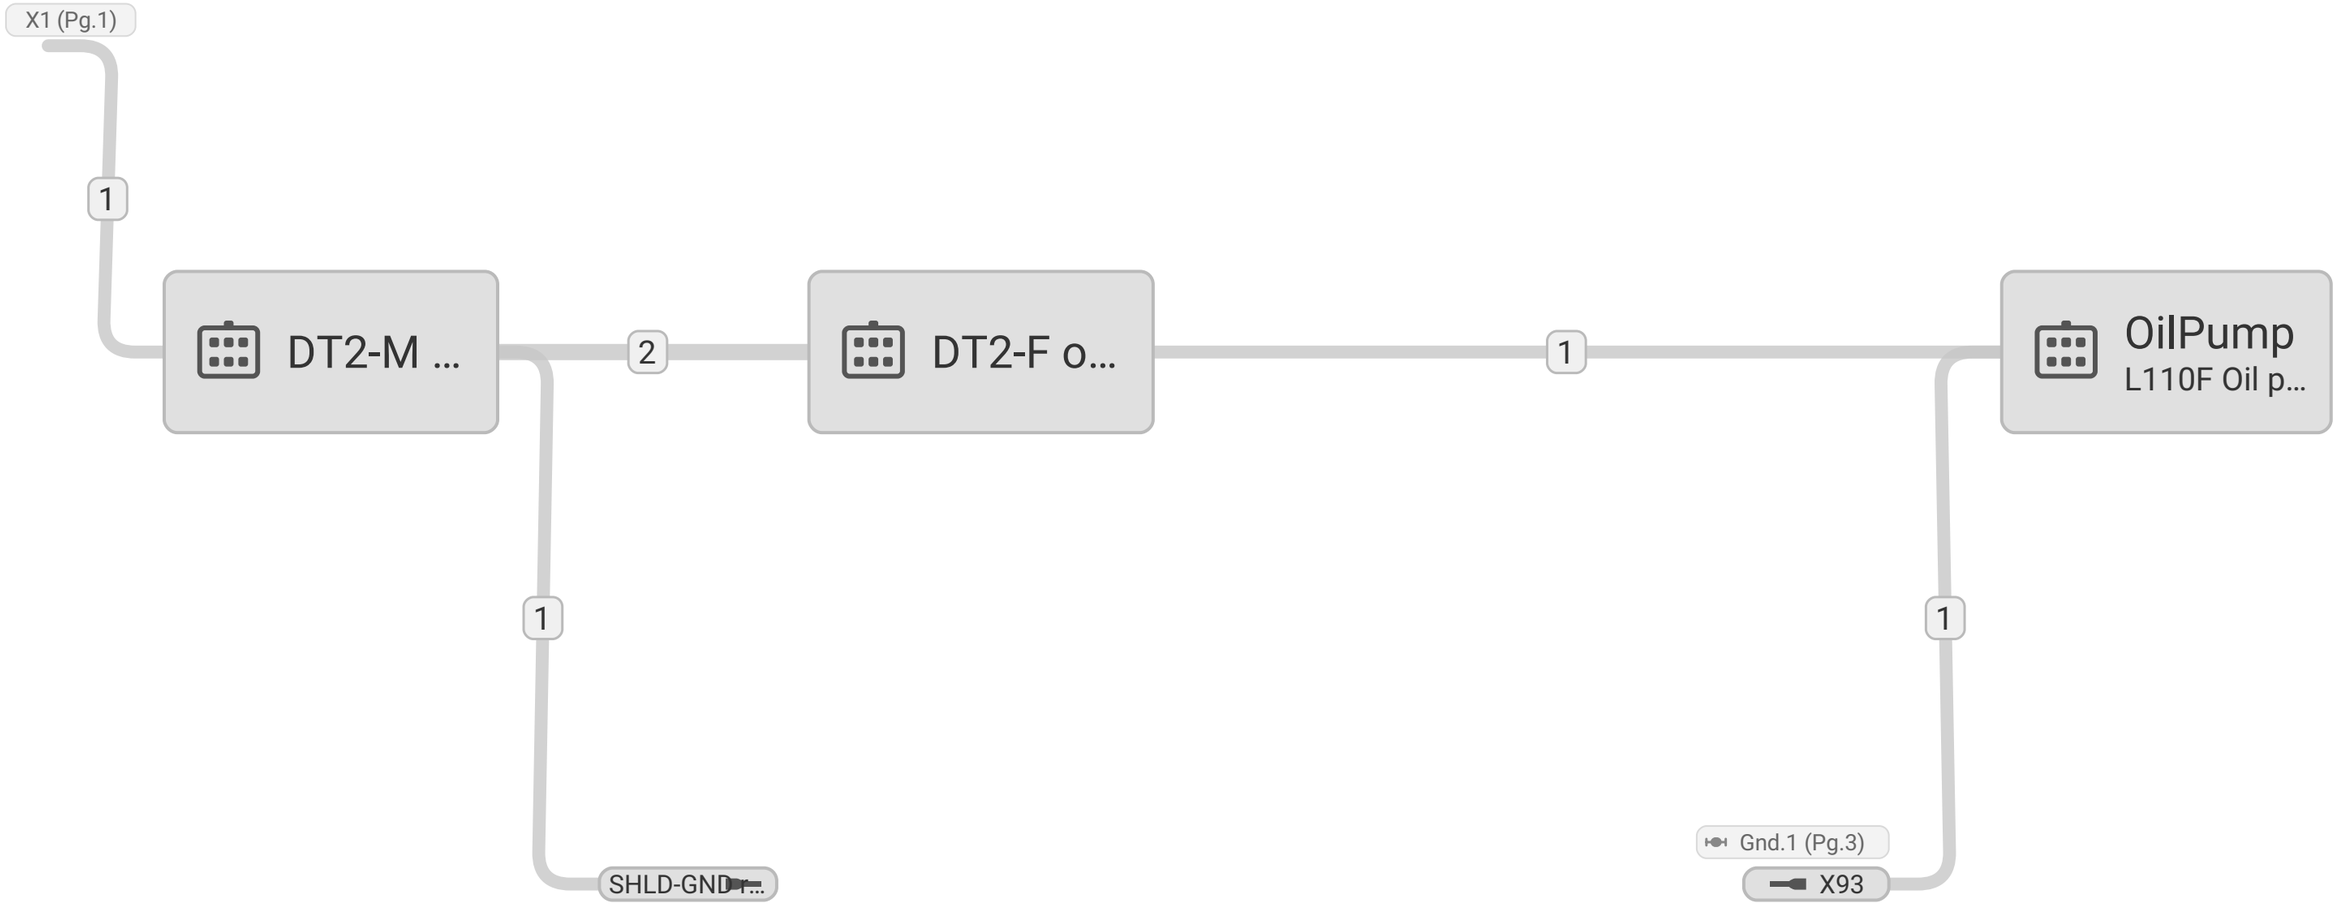
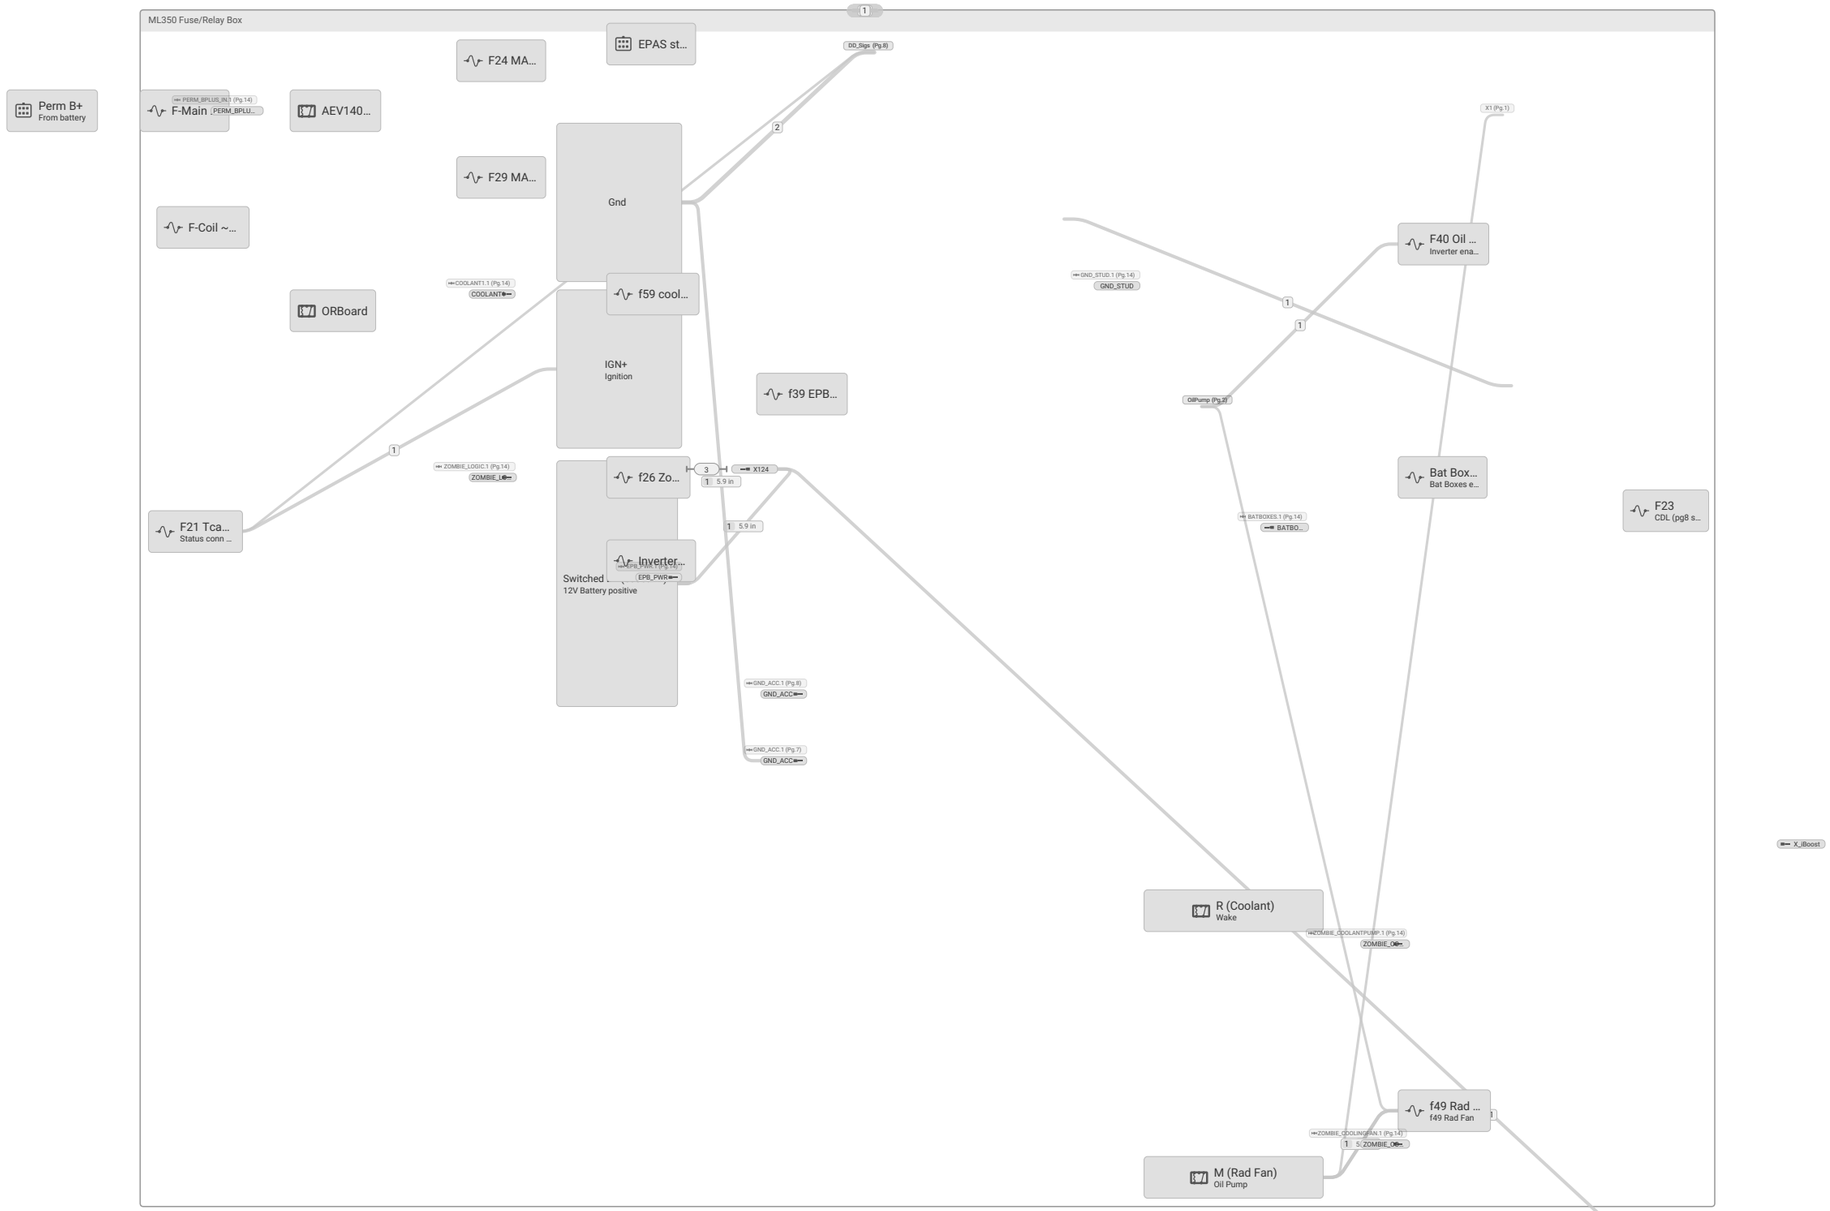
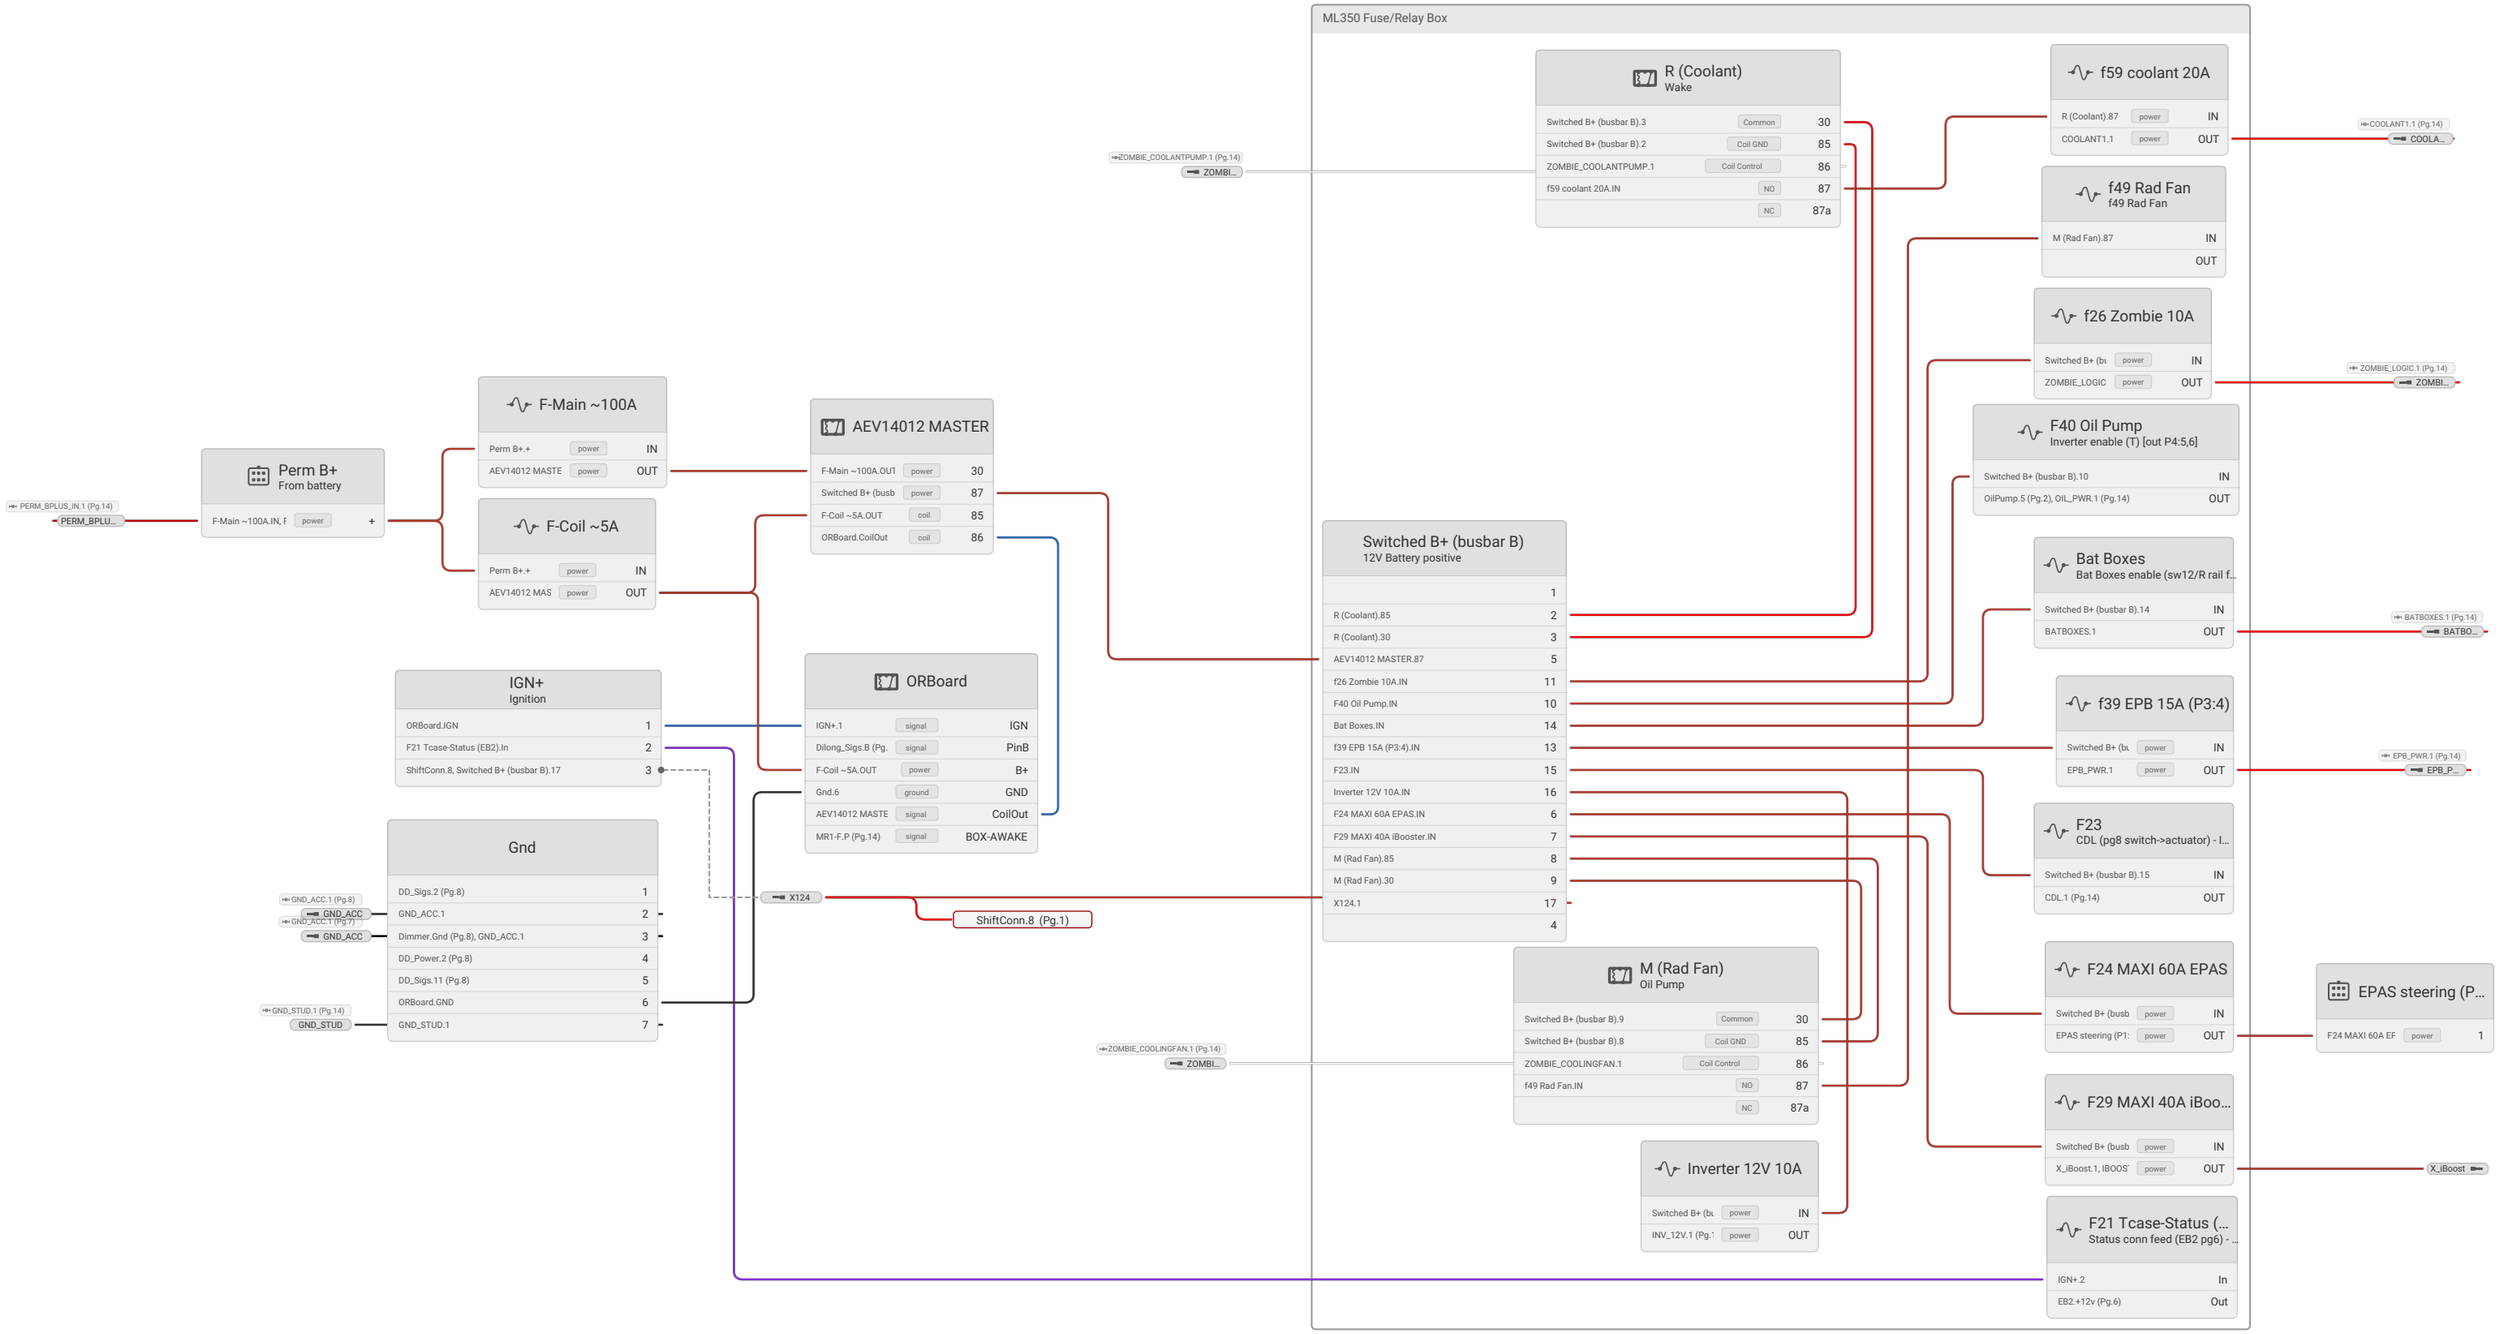

Brake Light
Sumitomo
HX040-6P
X2
Honda Foot Pedal
Sumitomo
90980-12326
X3
L110 Solenoid
BP1
Sumitomo
90980-12520
MG1R
MG1 Resolver
Sumitomo
90980-12520
MG2R
MG2 Resolver
X1
56 Way F...
ZOMBIE_COOLINGFAN.1 (Pg.14)
Inverter 12V 10A (Pg.3)
INV_12V
Lexus
LS600HL
Inverter
LS600H Inverter
IGN+.3 (Pg.3)
X124
ShiftCo...
Shift Conne...
F-P_SE...


Aptiv
13669859
X1
56 Way F 1.5 SICMA Block
RS232 Rx 1
RS232 Tx 2
ZOMBIE_COOLANTPUMP.1 3
InDtsch12-M.5 (Pg.4) GP Out 2 4
Dilong_Sigs.S (Pg.11) PWM 3 5
Brake Lights.1 PWM 2 6
ZOMBIE_COOLINGFAN.1 PWM 1 7
Analog 2 in 8
Analog 1 in 9
DAC 2 10
DAC 1 11
MG2R.4 MG2 Temp - 12
MG2R.8 MG2 Temp + 13
MG1R.4 MG1 Temp - 14
Ignition T15 In 15
Inverter.34 REQ- 16
Inverter.35 REQ+ 17
Inverter.13 CLK- 18
Inverter.14 CLK+ 19
Inverter.2 MTH- 20
Inverter.3 MTH+ 21
Inverter.22 HTM- 22
Inverter.23 HTM+ 23
LIN 24
CAN EXT 3 L 25
CAN EXT 3 H 26
InDtsch12-M.3 (Pg.4), DD_CAN.2 (Pg.8)... CAN EXT L 27
InDtsch12-M.2 (Pg.4), DD_CAN.1 (Pg.8)... CAN EXT H 28
MG1R.8 MG1 Temp + 29
DT2-M oil pump sig.1 (Pg.2) Oil Pump PWM 30
GPOut1 DNC 31
Inverter Power LS S... 32
InDtsch12-M.7 (Pg.4) Main Contactor LS S... 33
InDtsch12-M.6 (Pg.4) Precharge LS Switch 34
Pot 2 35
Pot 1 36
X3.3 Trans SP 37
X3.8 Trans SL2- 38
X3.7 Trans SL1- 39
X3.12 Trans PB3 40
X3.10 Trans PB2 41
X3.9 Trans PB1 42
DD_CAN.6 (Pg.8), Dilong_Sigs.G (Pg.11) CAN EXT 2 L 43
DD_CAN.3 (Pg.8), Dilong_Sigs.A (Pg.11) CAN EXT 2 H 44
X2.1 Throttle Ground 45
X2.2 Throttle 2 46
X2.5 Throttle 1 47
X2.3 +5v Throttle 48
Brake Input 49
ZOMBIE_LOGIC.1 GP12v Input 50
Hvrequest 51
Start 52
Reverse Direction 53
Forward Direction 54
Ground 55
Permanent +12V 56
ZOMBIE_COOLANTPUMP.1 (Pg.14)
ZOMBI...
ZOMBIE_COOLINGFAN.1 (Pg.14)
ZOMBI...
ZOMBIE_LOGIC.1 (Pg.14)
ZOMBI...
F-P_SE...
Brake Light
Sumitomo
90980-12326
X3
L110 Solenoid
SL1+ 1
SL2+ 2
X1.37 SP 3
E 4
NC 5
SP 6
X1.38 SL2- 8
X1.39 SL1- 7
X1.42 PB1 9
X1.41 PB2 10
THO 11
X1.40 PB3 12
NC 13
Sumitomo
HX040-6P
X2
Honda Foot Pedal
X1.45 GND 1
X1.46 APP2 2
X1.48 Vref1 3
GND 4
X1.47 APP1 5
Vref2 6
Lexus
LS600HL
Inverter
LS600H Inverter
DRN2 1
X1.20 MTH+ 2
X1.21 MTH++ 3
NC 4
DRN5 5
MG1R.7 GCSG 6
MG1R.6 GSNG 7
DRN6 8
MG1R.5 GRFG 9
Inverter 12V 10A.OUT (Pg.3), INV_12V.1 BR2+ 10
INV_12V BR2 11
DRN4 12
X1.18 CLK- 13
X1.19 CLK+ 14
NC 15
GI 16
MG1R.3 GCS 17
MG1R.2 GSN 18
NC 19
MG1R.1 GRF 20
DRN1 21
X1.22 HTM- 22
X1.23 HTM+ 23
ILK 24
ShiftConn.3 HSDN 25
DRN7 26
MG2R.5 MCSG 27
MG2R.7 MSNG 28
MG2R.6 MRFG 29
MRFG 30
GND1 31
GND2 32
DRN3 33
X1.16 REQ- 34
X1.17 REQ+ 35
NC 36
NC 37
MG2R.3 DRN8 38
MG2R.2 MSN 39
MG2R.1 MRF 40
INV_12V
Sumitomo
90980-12520
MG1R
MG1 Resolver
Inverter.20 MRF 1
Inverter.18 MSN 2
Inverter.17 MCS 3
X1.14 GMTG 4
Inverter.9 MRFG 5
Inverter.7 MSNG 6
Inverter.6 MCSG 7
X1.29 GMT 8
Inverter 12V 10A.OUT (Pg.3)
Sumitomo
90980-12520
MG2R
MG2 Resolver
Inverter.40 MRF 1
Inverter.39 MSN 2
Inverter.38 MCS 3
X1.12 MMTG 4
Inverter.27 MRFG 5
Inverter.29 MSNG 6
Inverter.28 MCSG 7
X1.13 MMT 8
ShiftConn
Shift Connector
D 1
N 2
Inverter.25, F-P_SENS P 3
R 4
MJ 5
FD 6
B 7
X124.1 B+ 8
RV 9
IGN+.3 (Pg.3)
X124
Switched B+ (busbar B).17 (Pg.3)

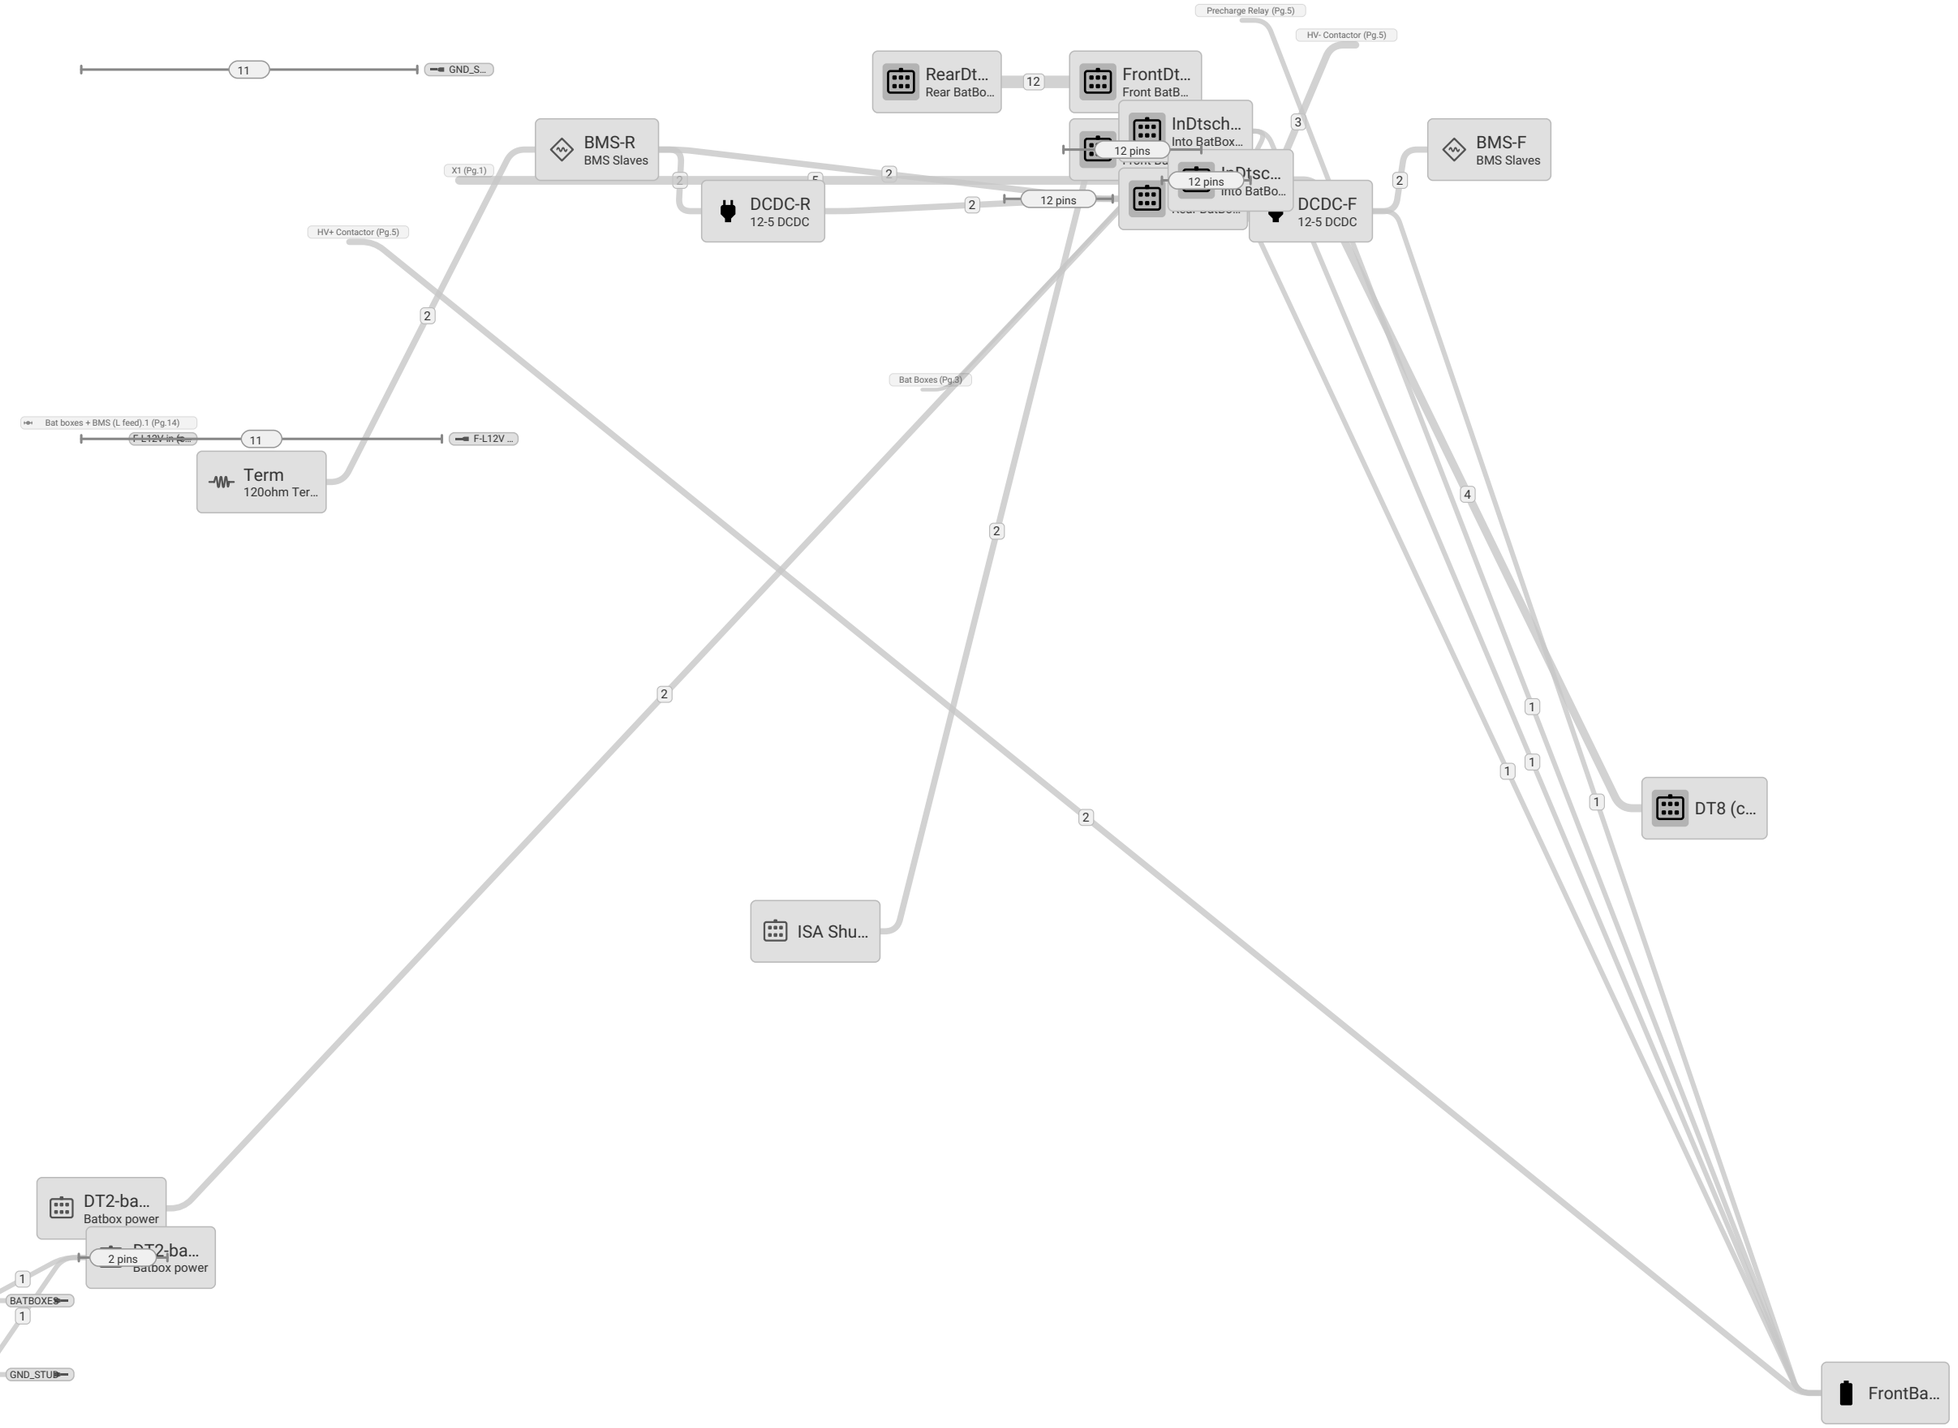

X1 (Pg.1)
1
DT2-M ...
2
DT2-F o...
1
OilPump
L110F Oil p...
1
1
SHLD-GND-...
Gnd.1 (Pg.3)
X93


DT2-M oil pump sig
DT2-F oil pun
PWM (green,...
1
DT2-F oil pun
SHLD (black...
2
DT2-F oil pump sig
OilPump.6, D
PWM (wh...
1
DT2-M oil pu
SHLD (b...
2
OilPump
L110F Oil pump connector
1
2
3
4
F40 Oil Pump.(
+12V
5
DT2-F oil pump
PWMin
6
PWMout
7
8
9
10
11
X93.1
CaseGND
12
Gnd.1 (Pg.3)
X93
SHLD-GND

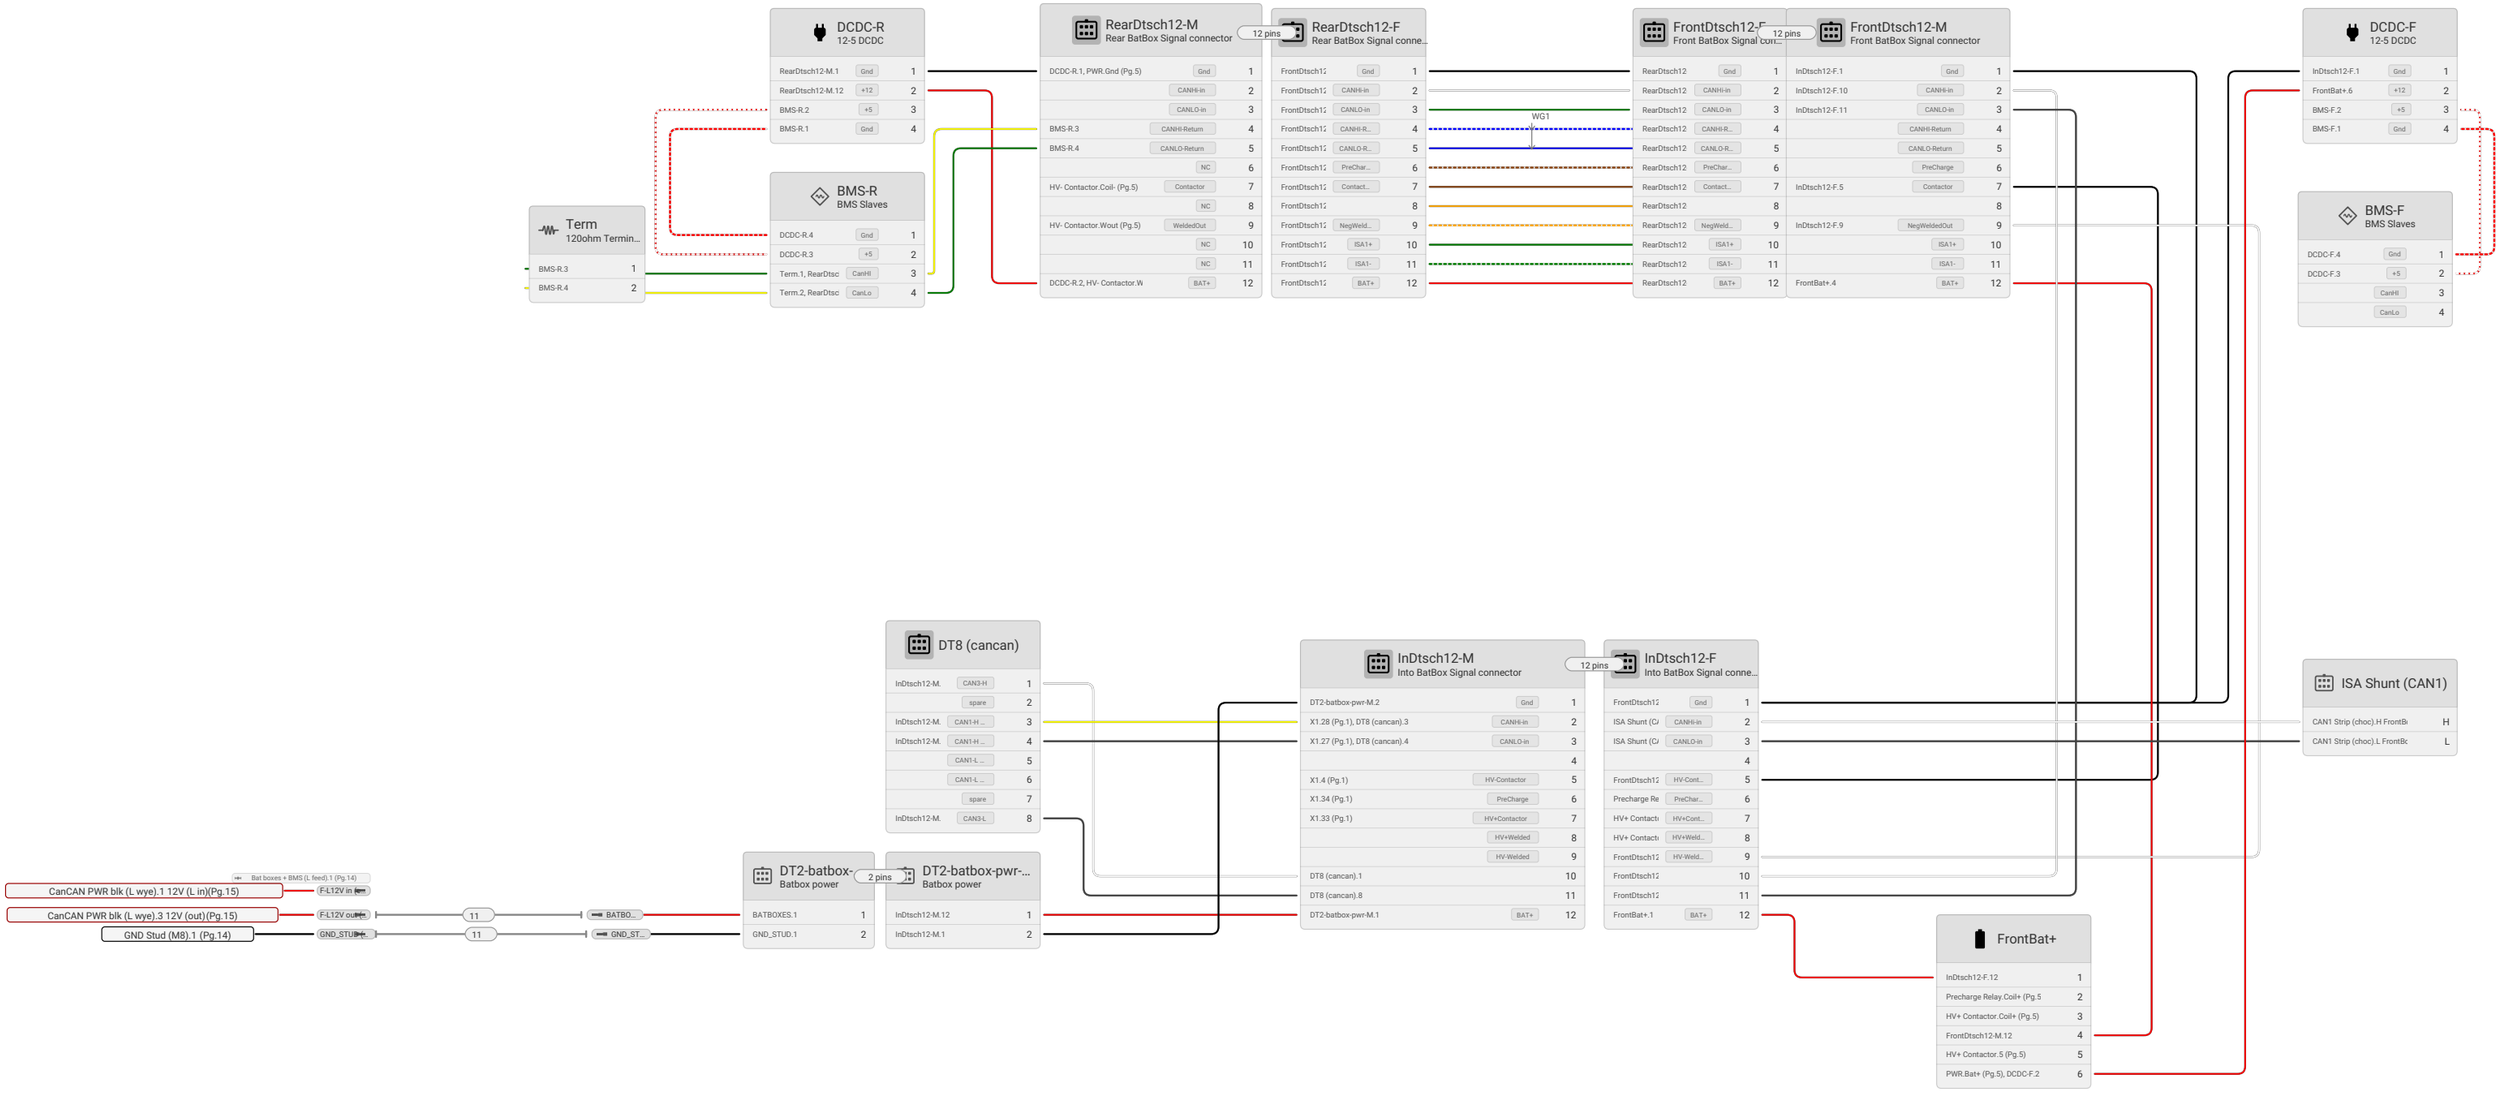

ML350 Fuse/Relay Box
Perm B+
From battery
F-Main
AEV140...
F24 MA...
EPAS st...
F29 MA...
F-Coil ~...
ORBoard
Gnd
IGN+
Ignition
f59 cool...
f39 EPB...
f26 Zo...
Inverter...
F21 Tca...
Status conn ...
Switched
12V Battery positive
F40 Oil ...
Inverter ena...
Bat Box...
Bat Boxes e...
F23
CDL (pg8 s...
R (Coolant)
Wake
M (Rad Fan)
Oil Pump
f49 Rad ...
f49 Rad Fan
X_IBoost



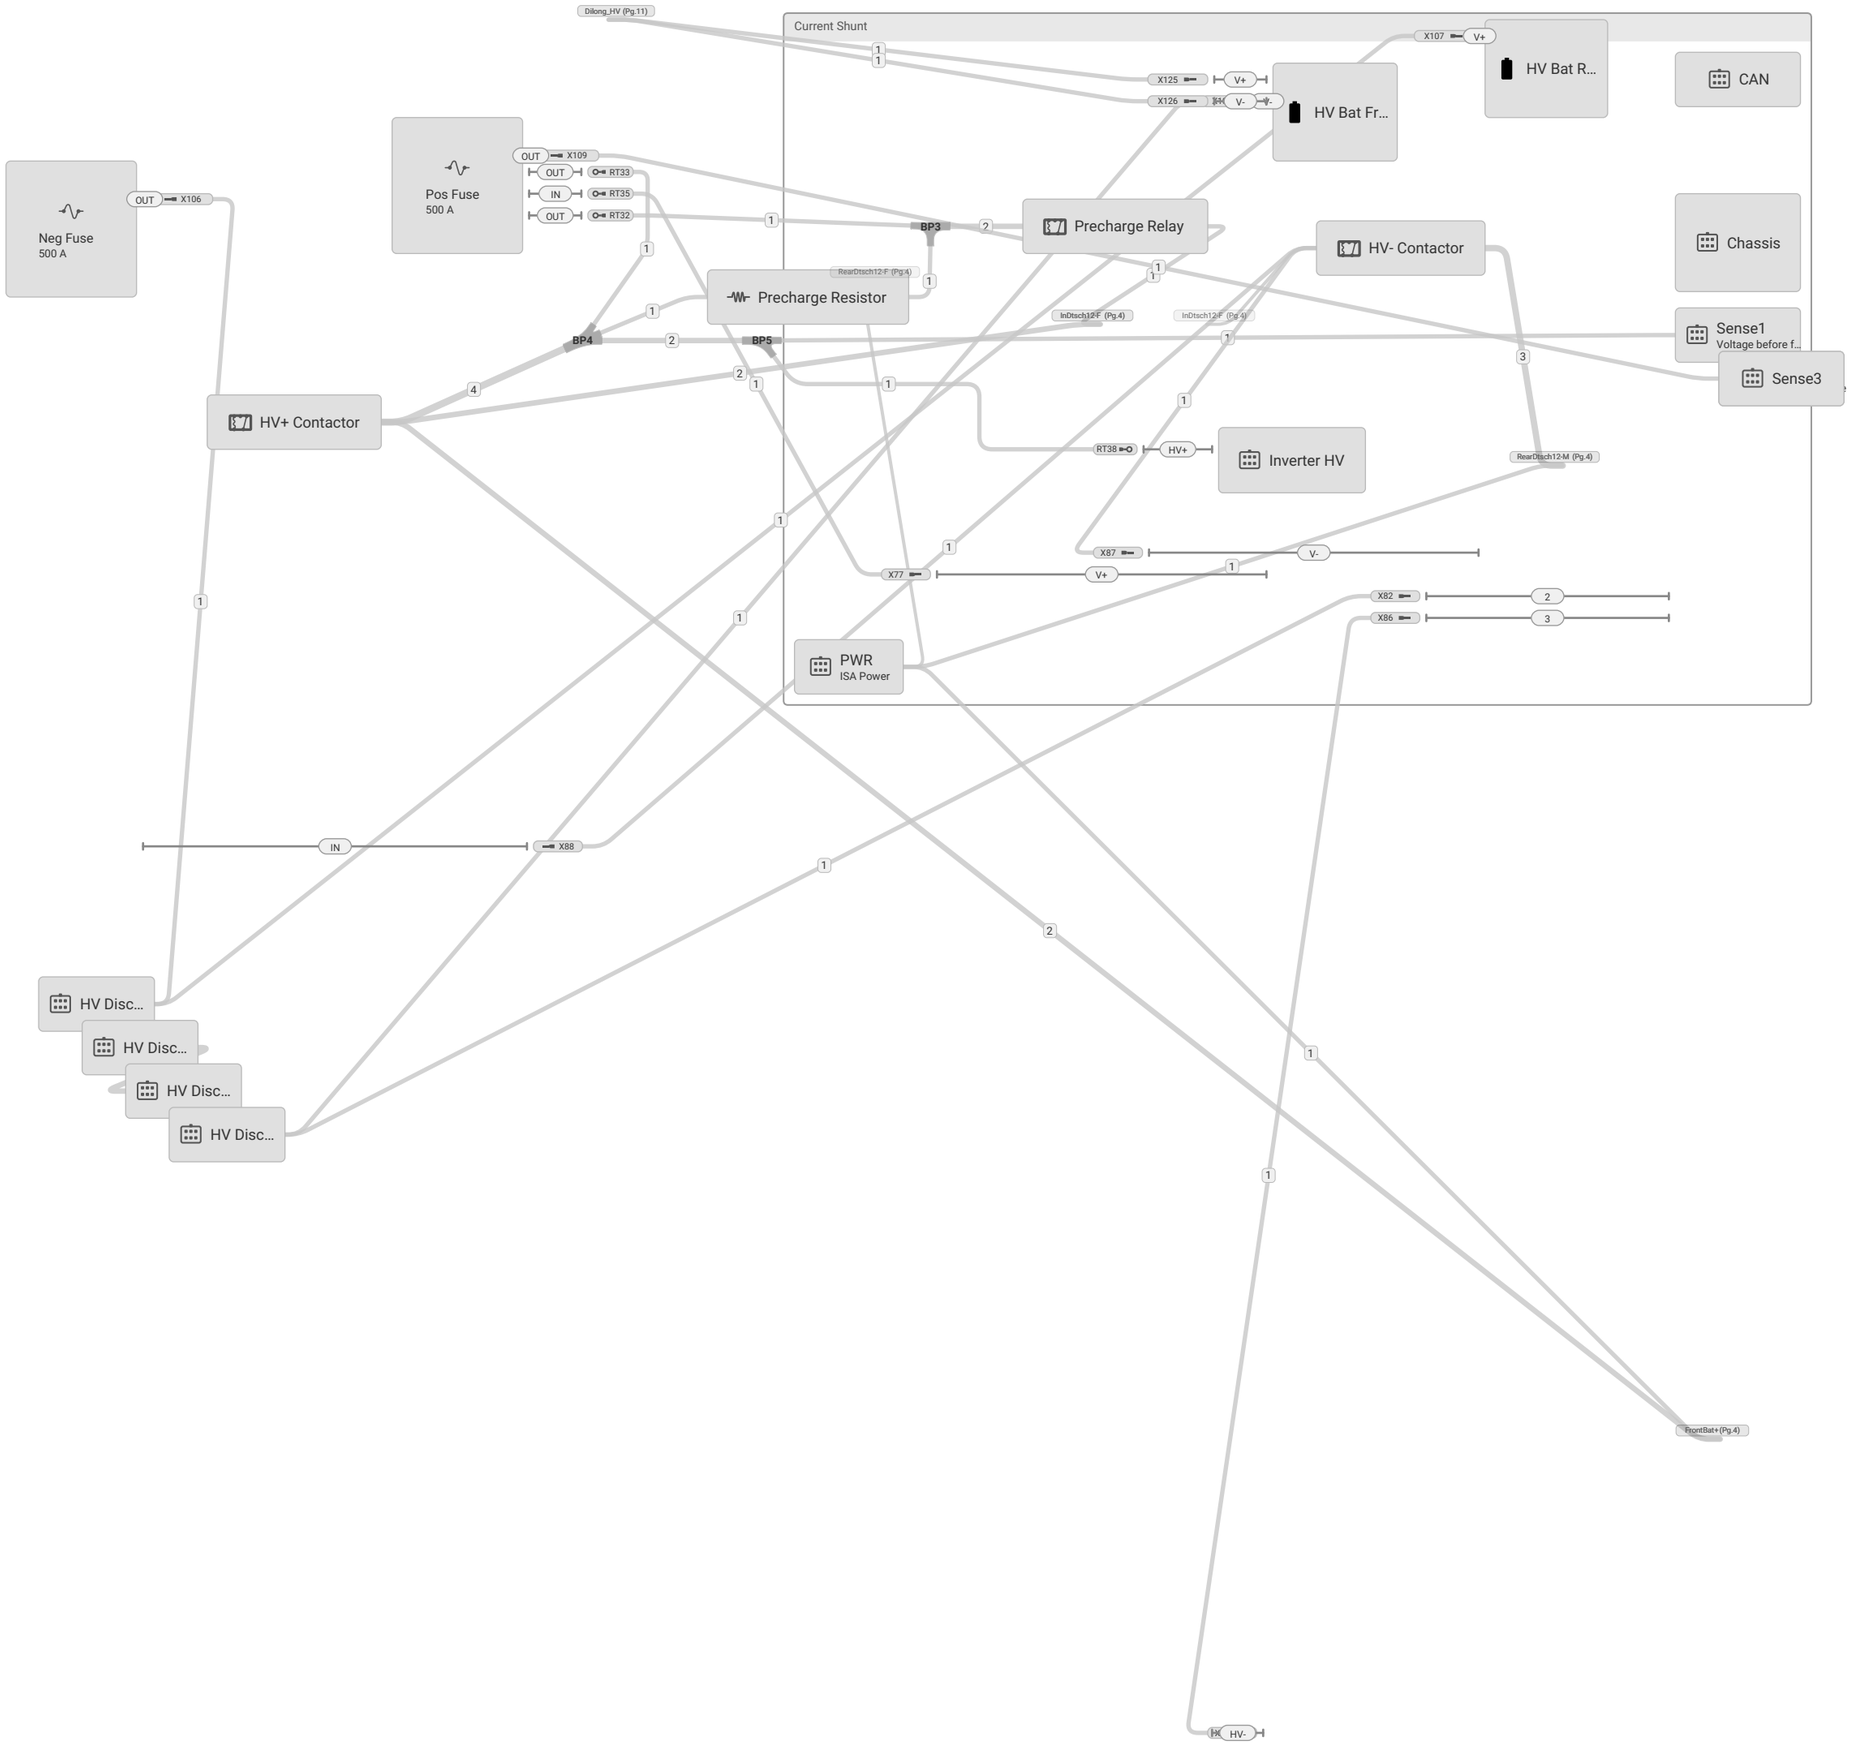
FuseRelay Panel — Schematic



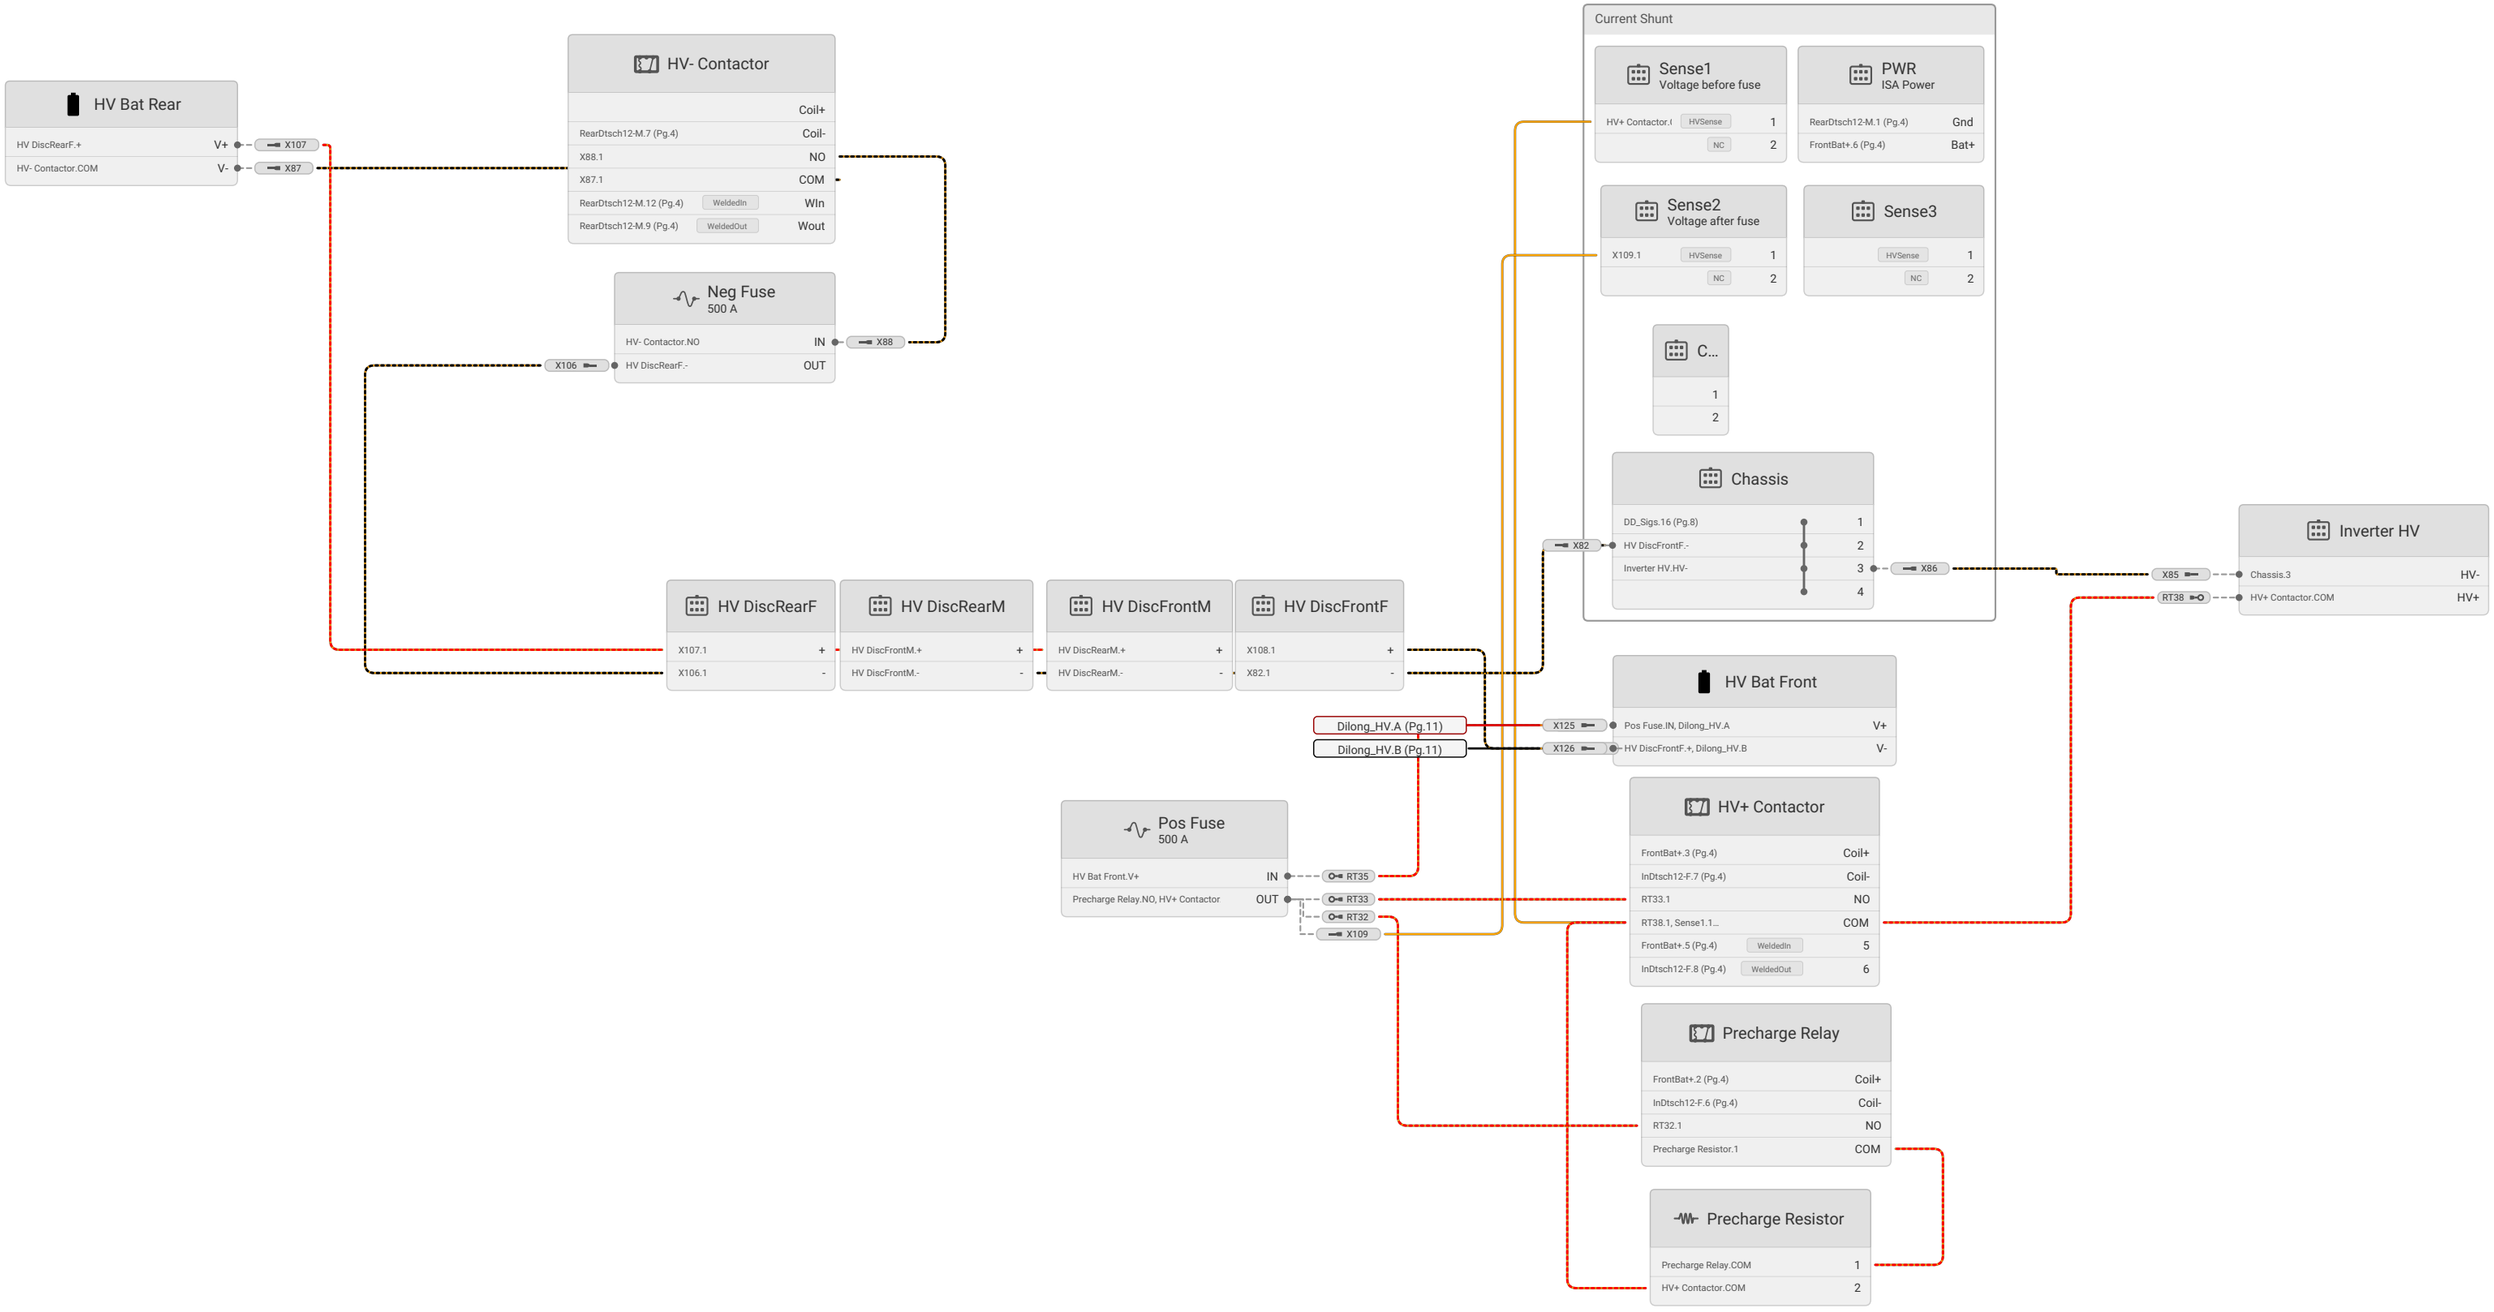
Battery box LV — Layout

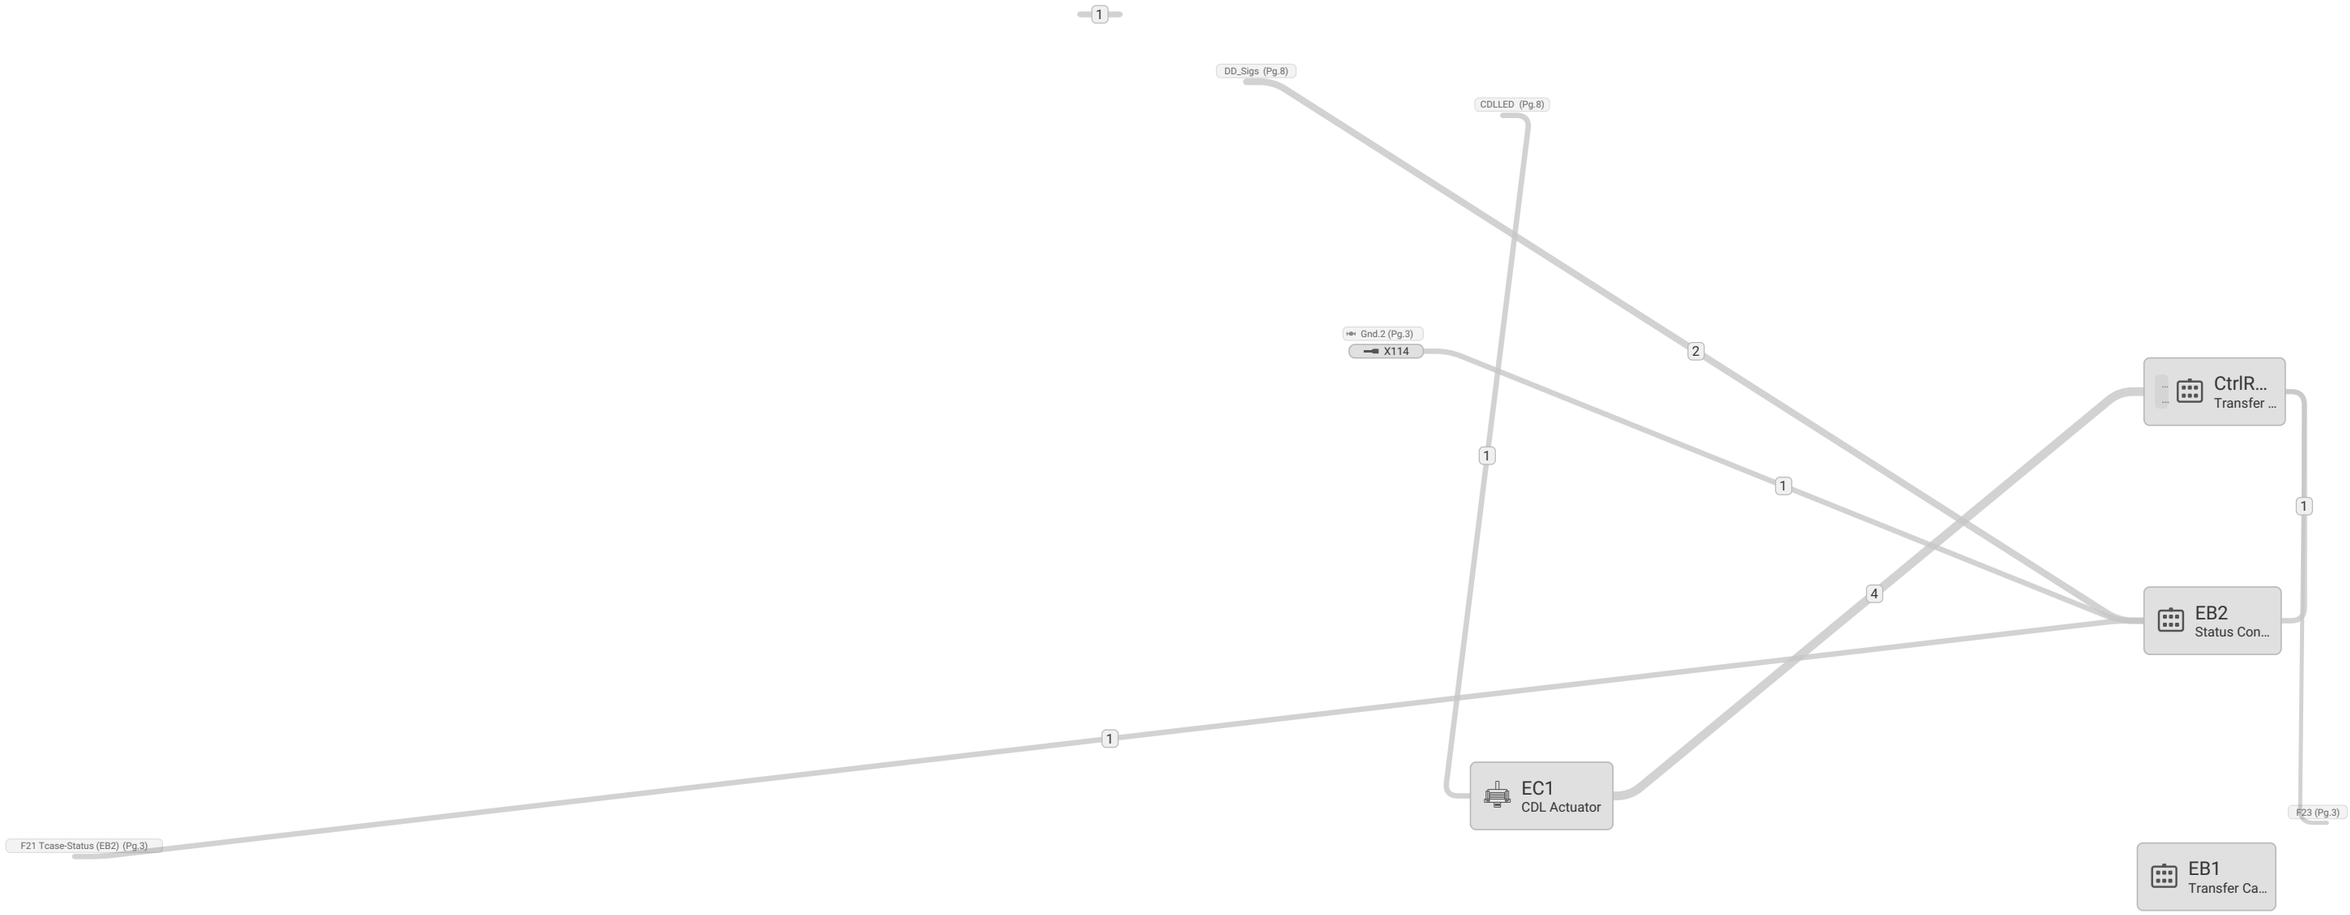


Battery box LV — Schematic



HV Batteries — Layout


HV Bat Rear
HV DiscRearF.+
V+
X107
HV- Contactor.COM
V-
X87
HV- Contactor
Coil+
RearDtsch12-M.7 (Pg.4)
Coil-
X88.1
NO
X87.1
COM
RearDtsch12-M.12 (Pg.4)
WeldedIn
WIn
RearDtsch12-M.9 (Pg.4)
WeldedOut
Wout
Neg Fuse
500 A
HV- Contactor.NO
IN
X88
X106
HV DiscRearF.-
OUT
HV DiscRearF
X107.1
+
X106.1
-
HV DiscRearM
HV DiscFrontM.+
+
HV DiscFrontM.-
-
HV DiscFrontM
HV DiscRearM.+
+
HV DiscRearM.-
-
HV DiscFrontF
X108.1
+
X82.1
-
Current Shunt
Sense1
Voltage before fuse
HV+ Contactor.(
HVSense
1
NC
2
PWR
ISA Power
RearDtsch12-M.1 (Pg.4)
Gnd
FrontBat+.6 (Pg.4)
Bat+
Sense2
Voltage after fuse
X109.1
HVSense
1
NC
2
Sense3
HVSense
1
NC
2
C...
1
2
Chassis
DD_Sigs.16 (Pg.8)
1
X82
HV DiscFrontF.-
2
Inverter HV.HV-
3
X86
4
Inverter HV
X85
Chassis.3
HV-
RT38
HV+ Contactor.COM
HV+
HV Bat Front
Dilong_HV.A (Pg.11)
X125
Pos Fuse.IN, Dilong_HV.A
V+
Dilong_HV.B (Pg.11)
X126
HV DiscFrontF.+, Dilong_HV.B
V-
Pos Fuse
500 A
HV Bat Front.V+
IN
RT35
Precharge Relay.NO, HV+ Contactor
OUT
RT33
RT32
X109
HV+ Contactor
FrontBat+.3 (Pg.4)
Coil+
InDtsch12-F.7 (Pg.4)
Coil-
RT33.1
NO
RT38.1, Sense1.1...
COM
FrontBat+.5 (Pg.4)
WeldedIn
5
InDtsch12-F.8 (Pg.4)
WeldedOut
6
Precharge Relay
FrontBat+.2 (Pg.4)
Coil+
InDtsch12-F.6 (Pg.4)
Coil-
RT32.1
NO
Precharge Resistor.1
COM
Precharge Resistor
Precharge Relay.COM
1
HV+ Contactor.COM
2


1
DD_Sigs (Pg.8)
CDLLED (Pg.8)
2
Gnd.2 (Pg.3)
X114
1
1
4
1
CtrlR...
Transfer ...
CDL.1 (Pg.14)
CDL
EB2
Status Con...
1
EC1
CDL Actuator
F21 Tcase-Status (EB2) (Pg.3)
F23 (Pg.3)
EB1
Transfer Ca...

CtrlRelay
Toyota 89531-...
Transfer Case control relay

EC1.3	Motor1	1
	Gnd	2
EB2.+12V, CDL.1	Sw12v+	3
EC1.2	Motor2	4
EC1.6	Pos1	5
	NC	6
CDLSw.1 (Pg.8)	Lock	7
	NC	8
CDLSw.3 (Pg.8)	Unlock	9
EC1.5	Pos2	10

CDL.1 (Pg.14)
CDL

EC1
CDL Actuator

		1
CtrlRelay.4	Motor2	2
CtrlRelay.1	Motor1	3
CDLLED.2 (Pg.8)	IndicatorGnd	4
CtrlRelay.10	Pos2	5
CtrlRelay.5	Pos1	6

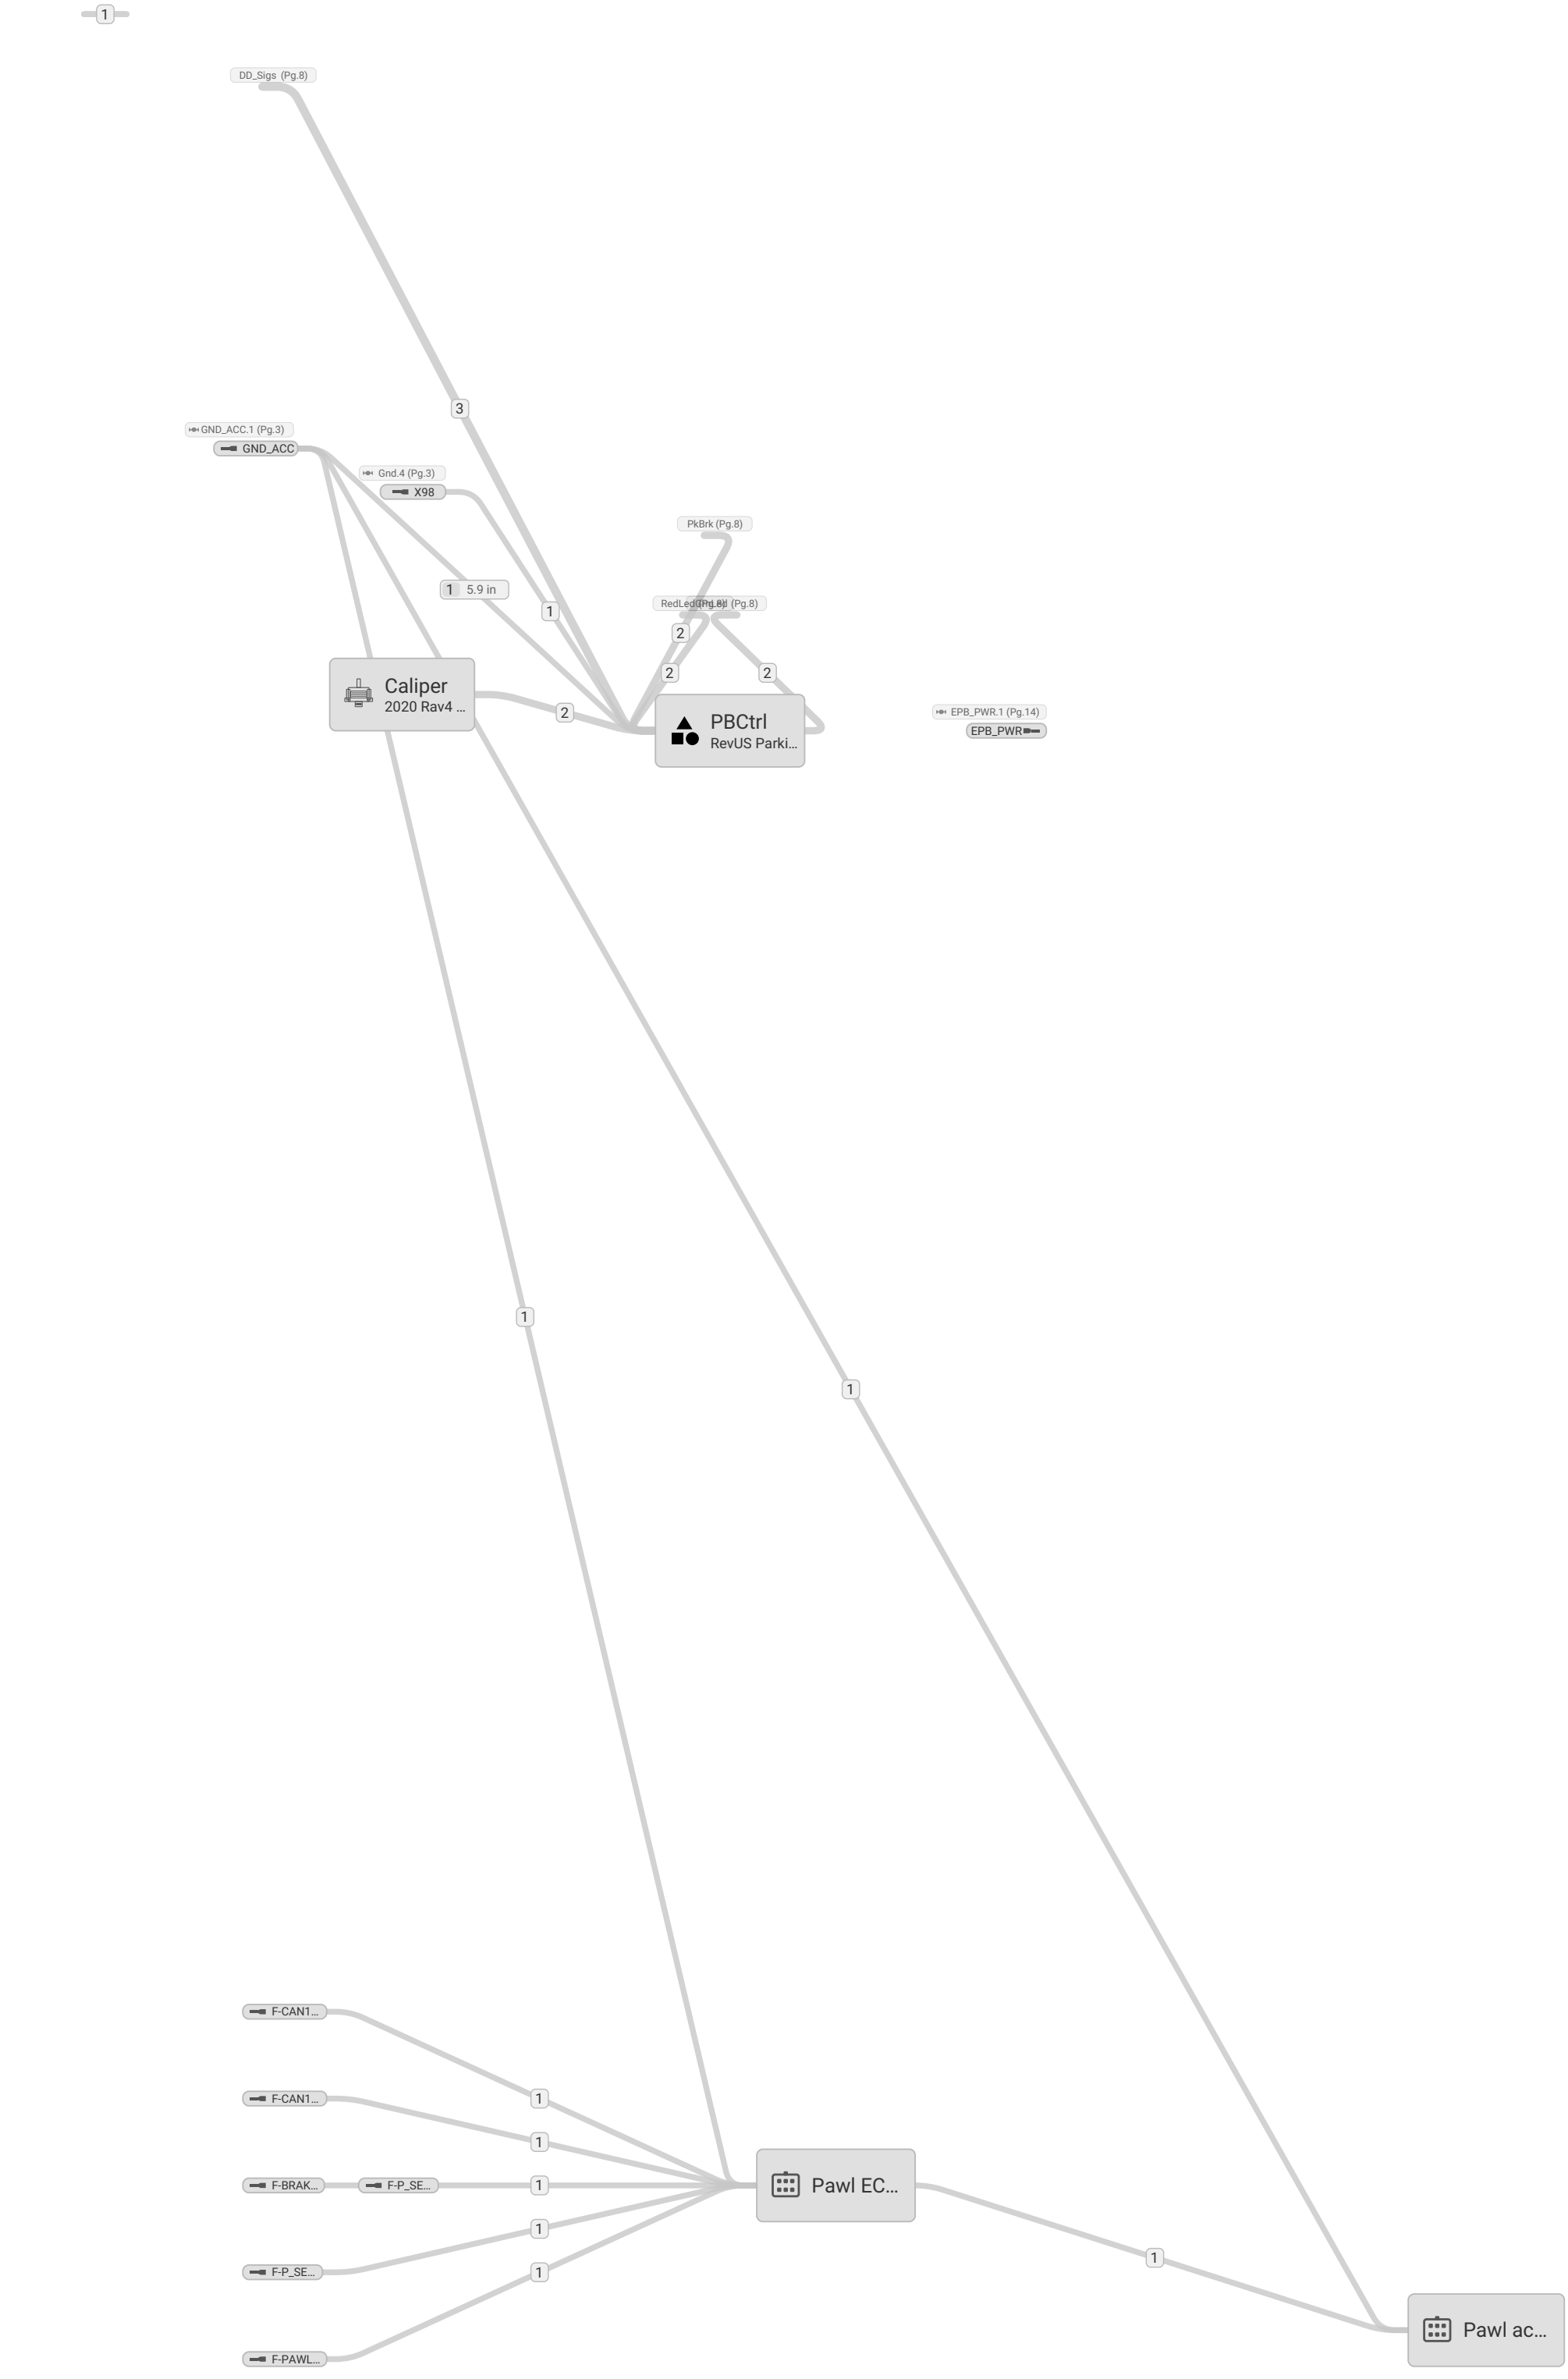
EB1
Transfer Case L4 Position

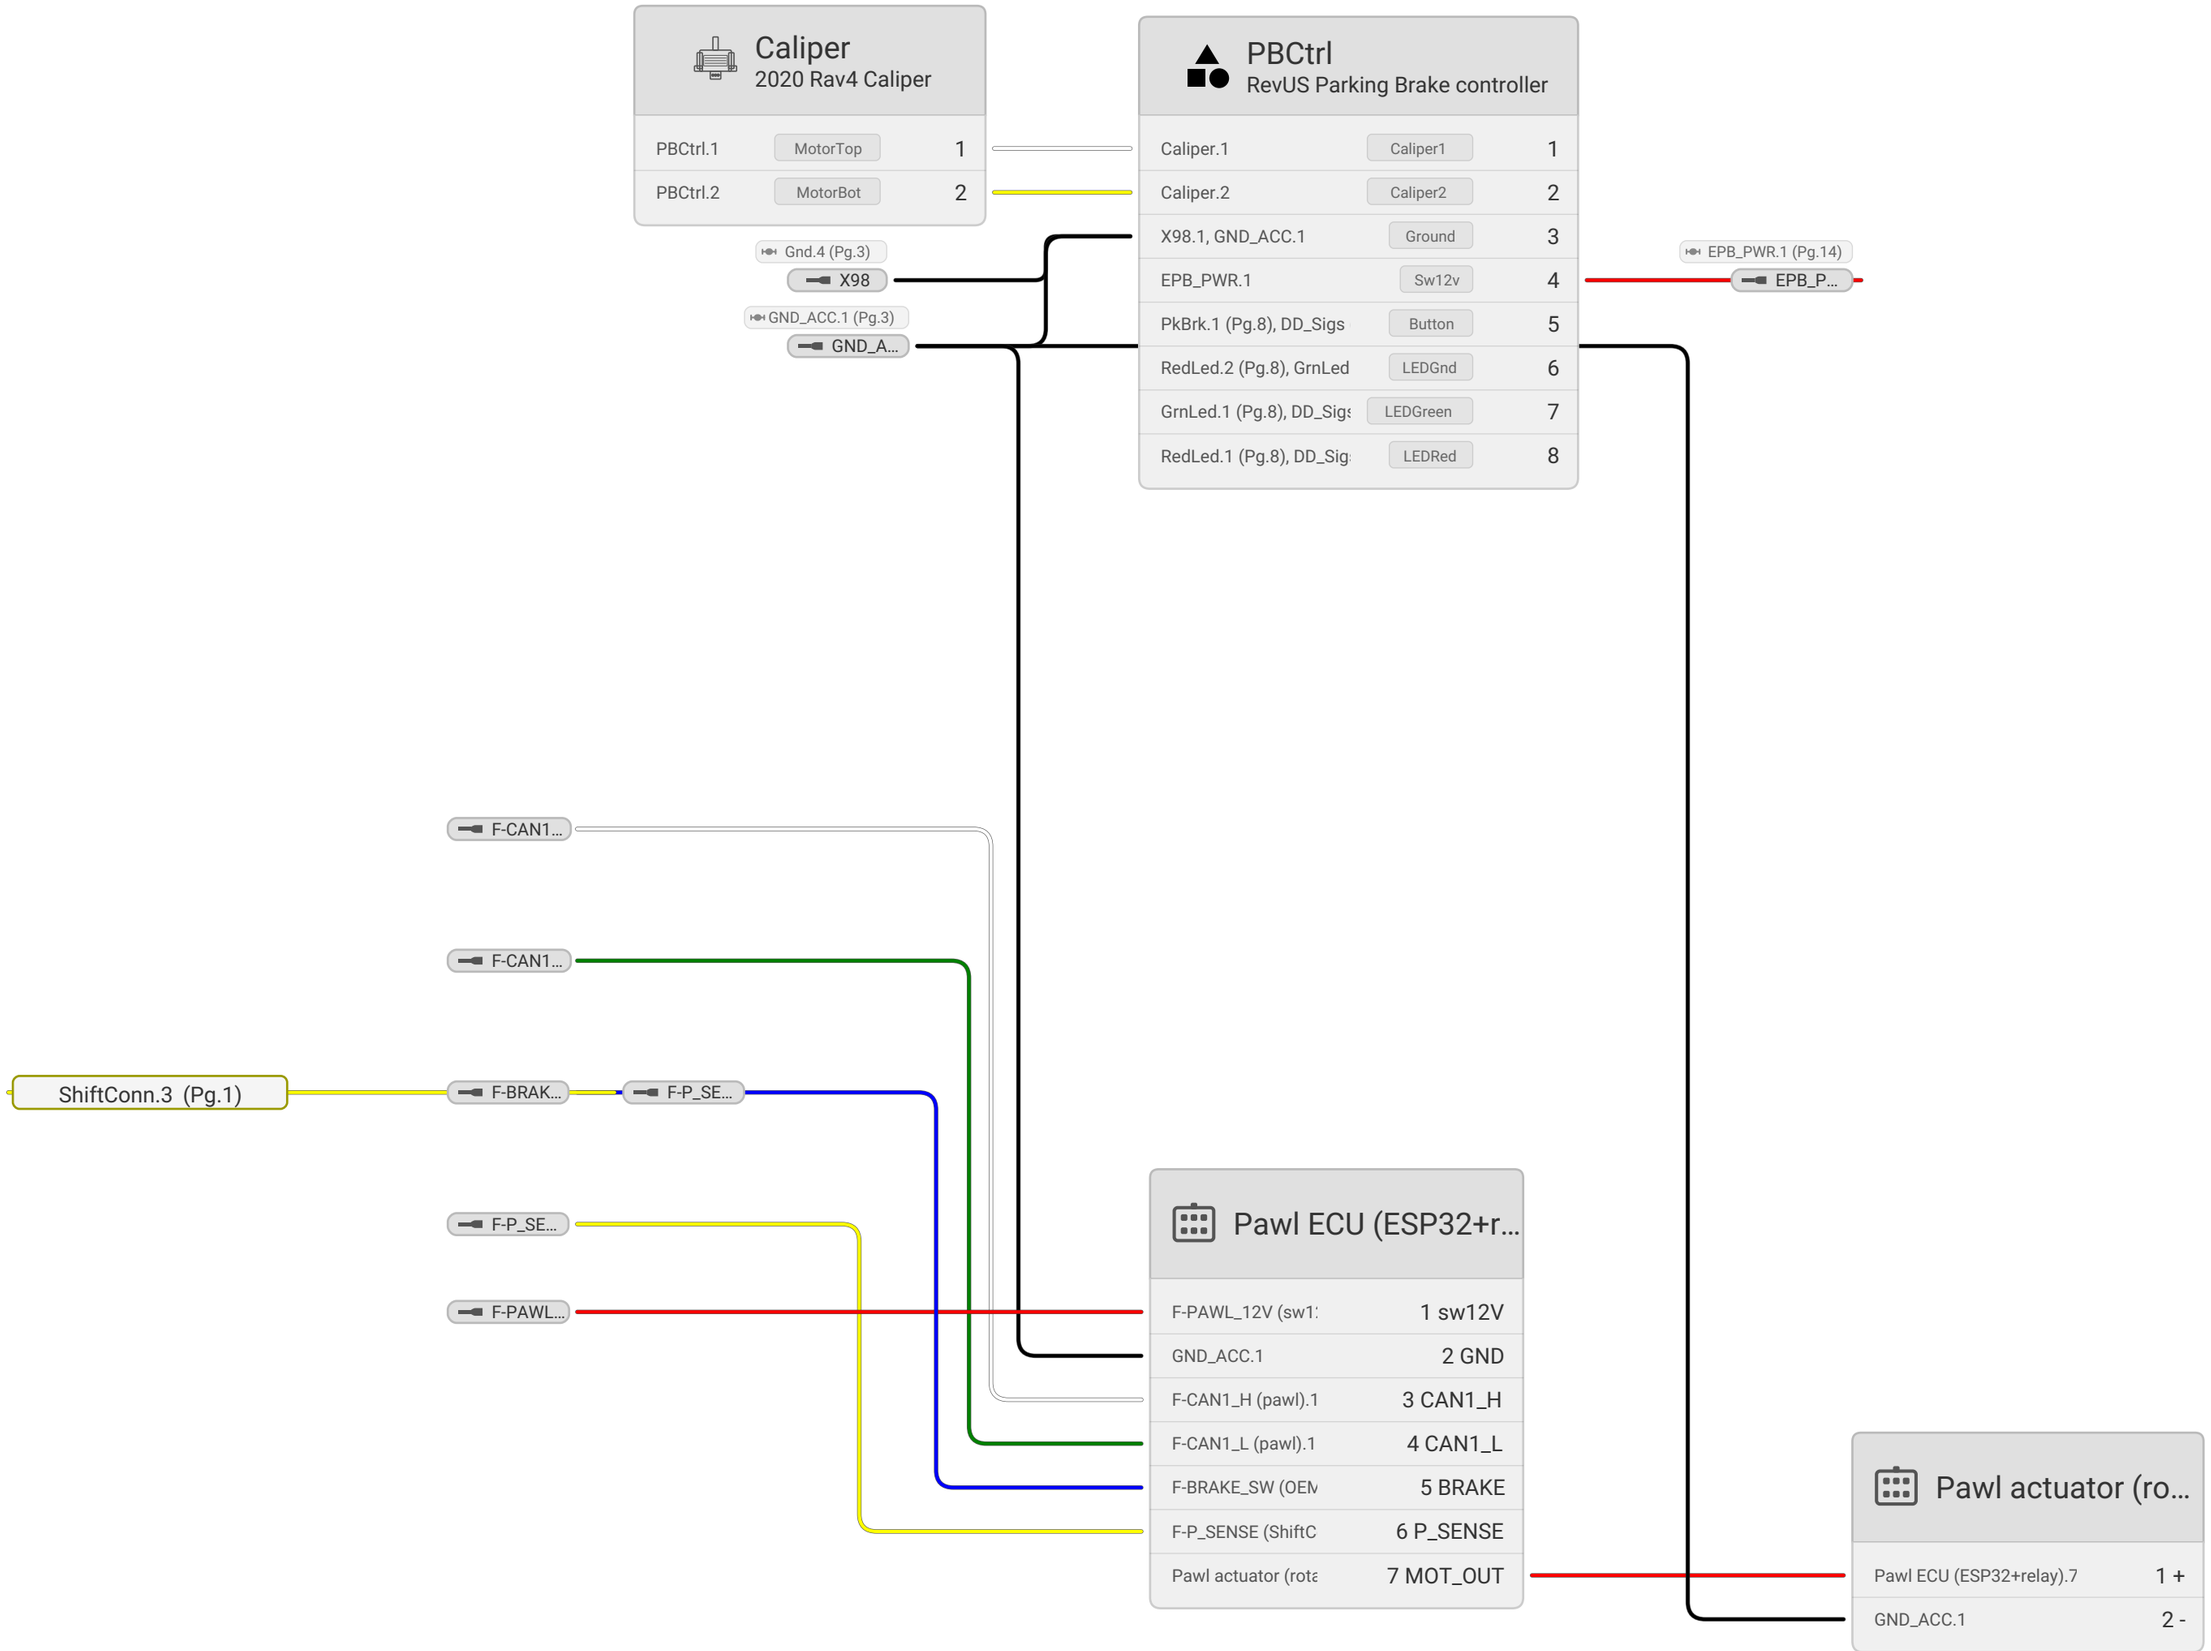
DD_Sigs.8 (P	TCASE_L...	2

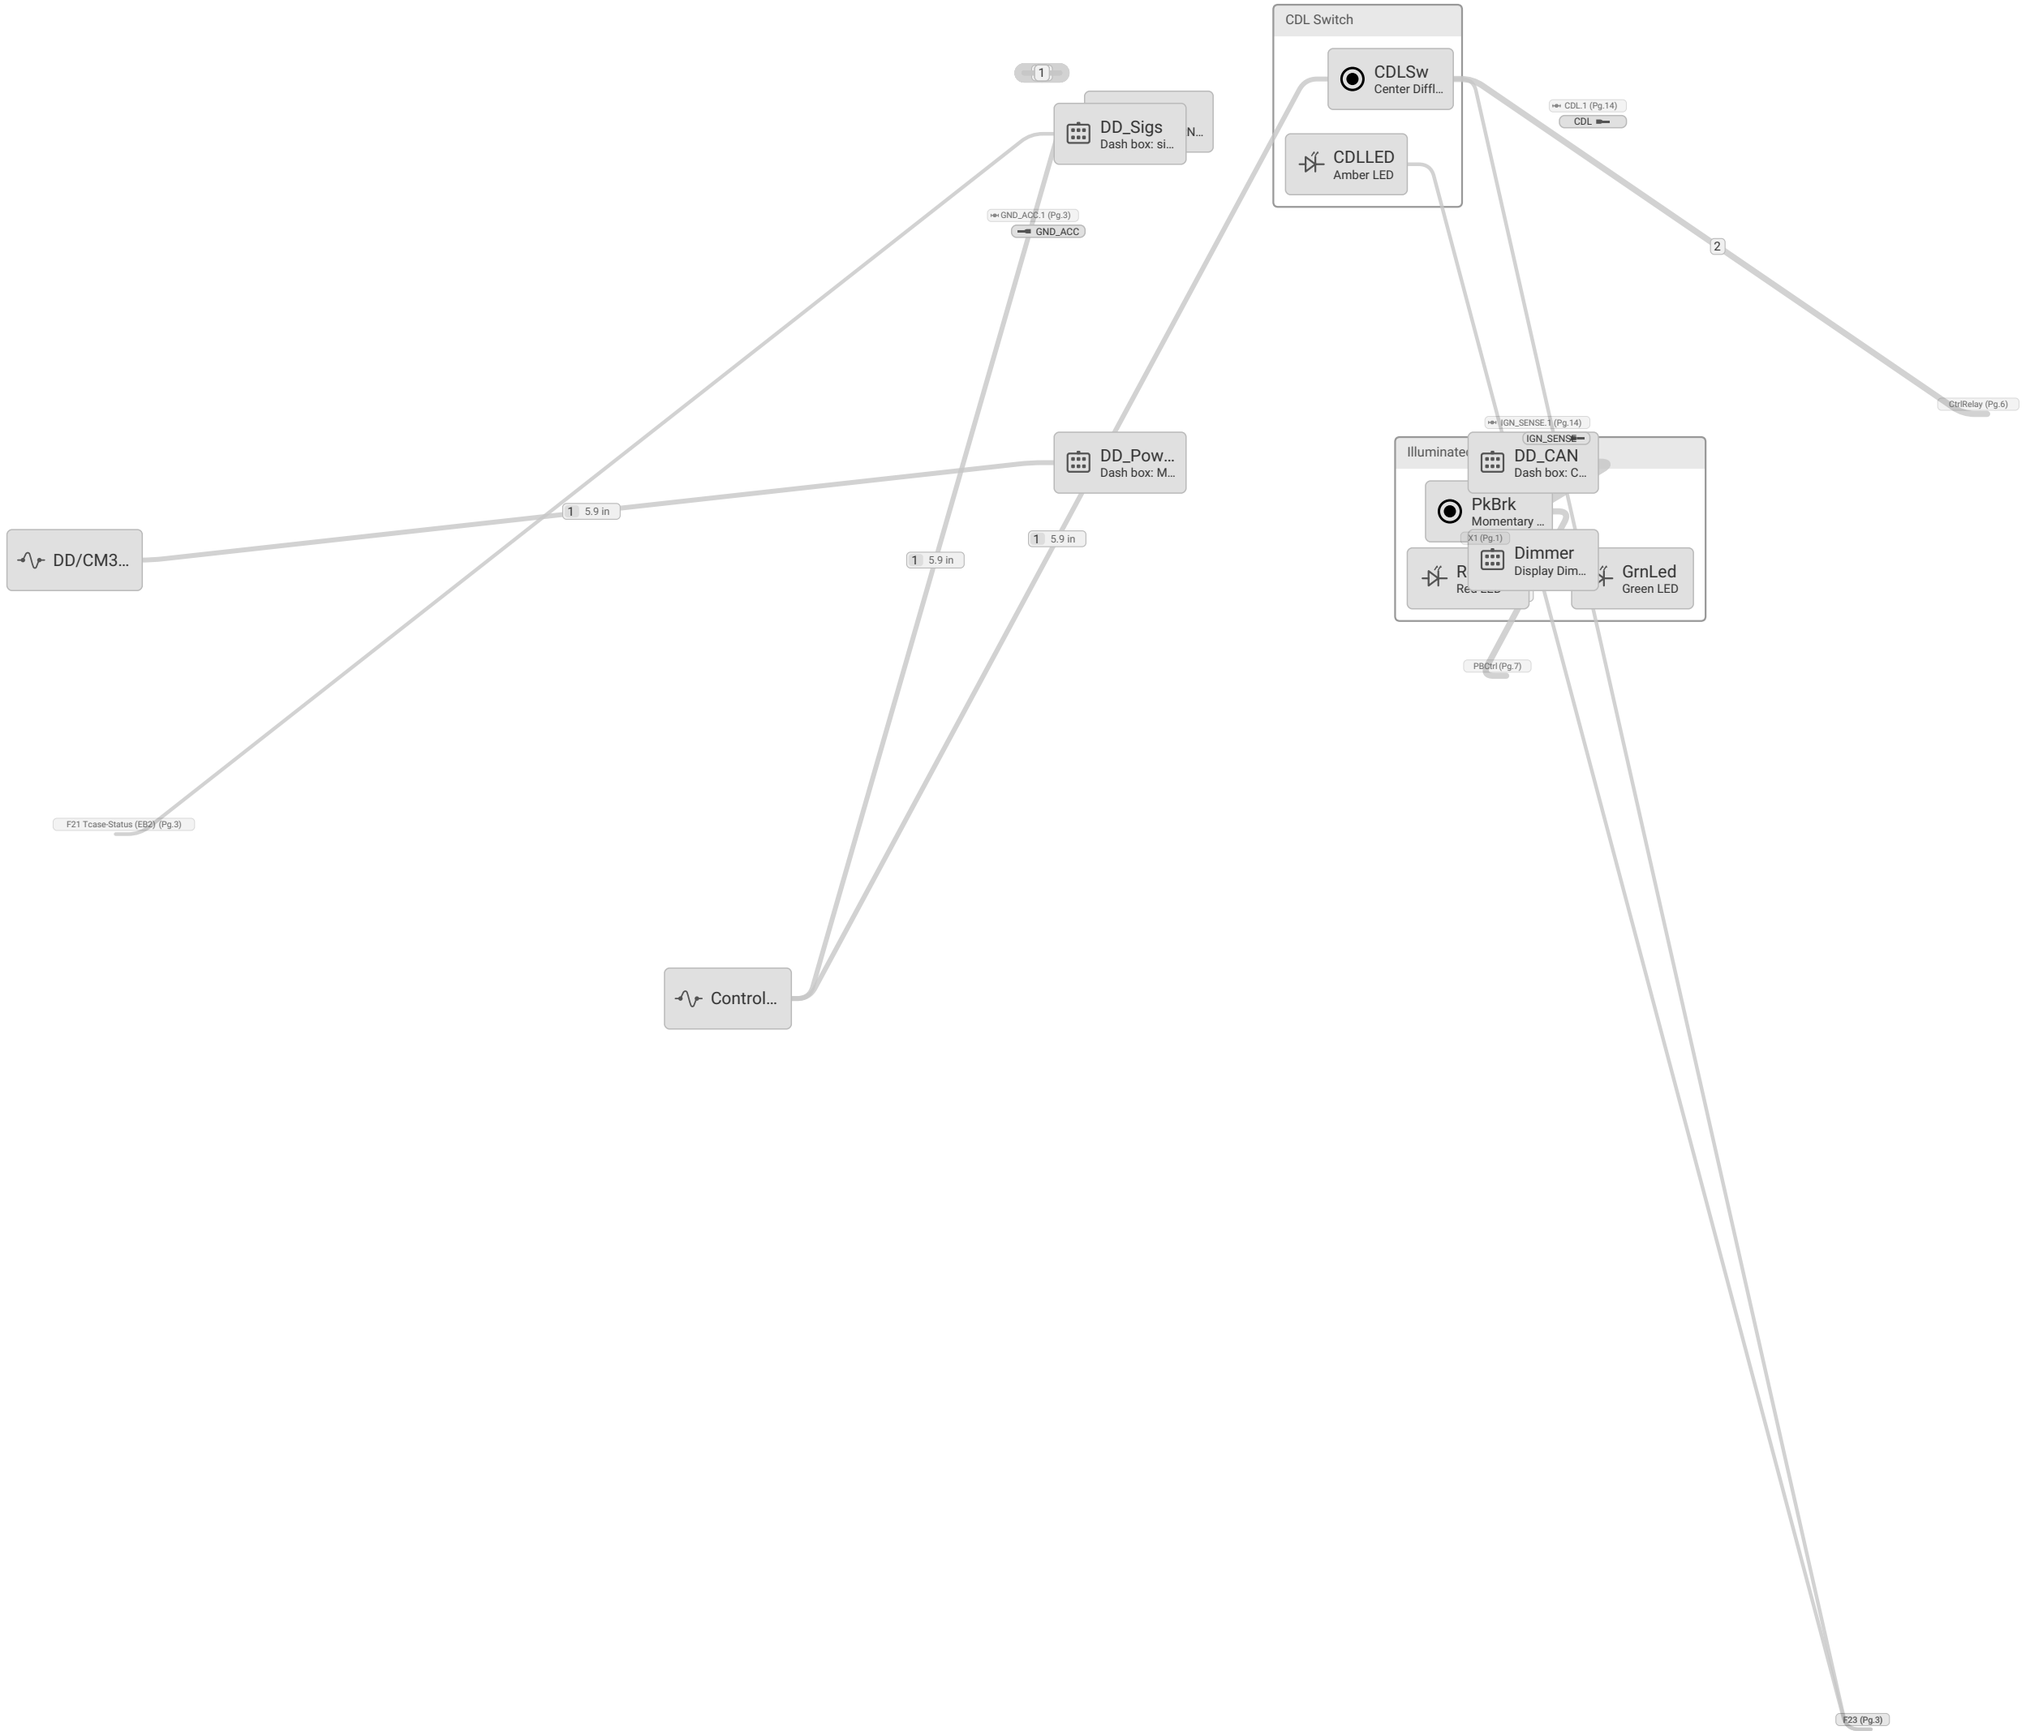
EB2
Status Connector

CtrlR	+12v	+12V
DD_S	4WD Ind...	4WD
DD_S	VSS	VSS
	NC	NC
	Neutral	Neutral
X114	GND	GND
F21	+12	+12v
	RevLt	RevLt

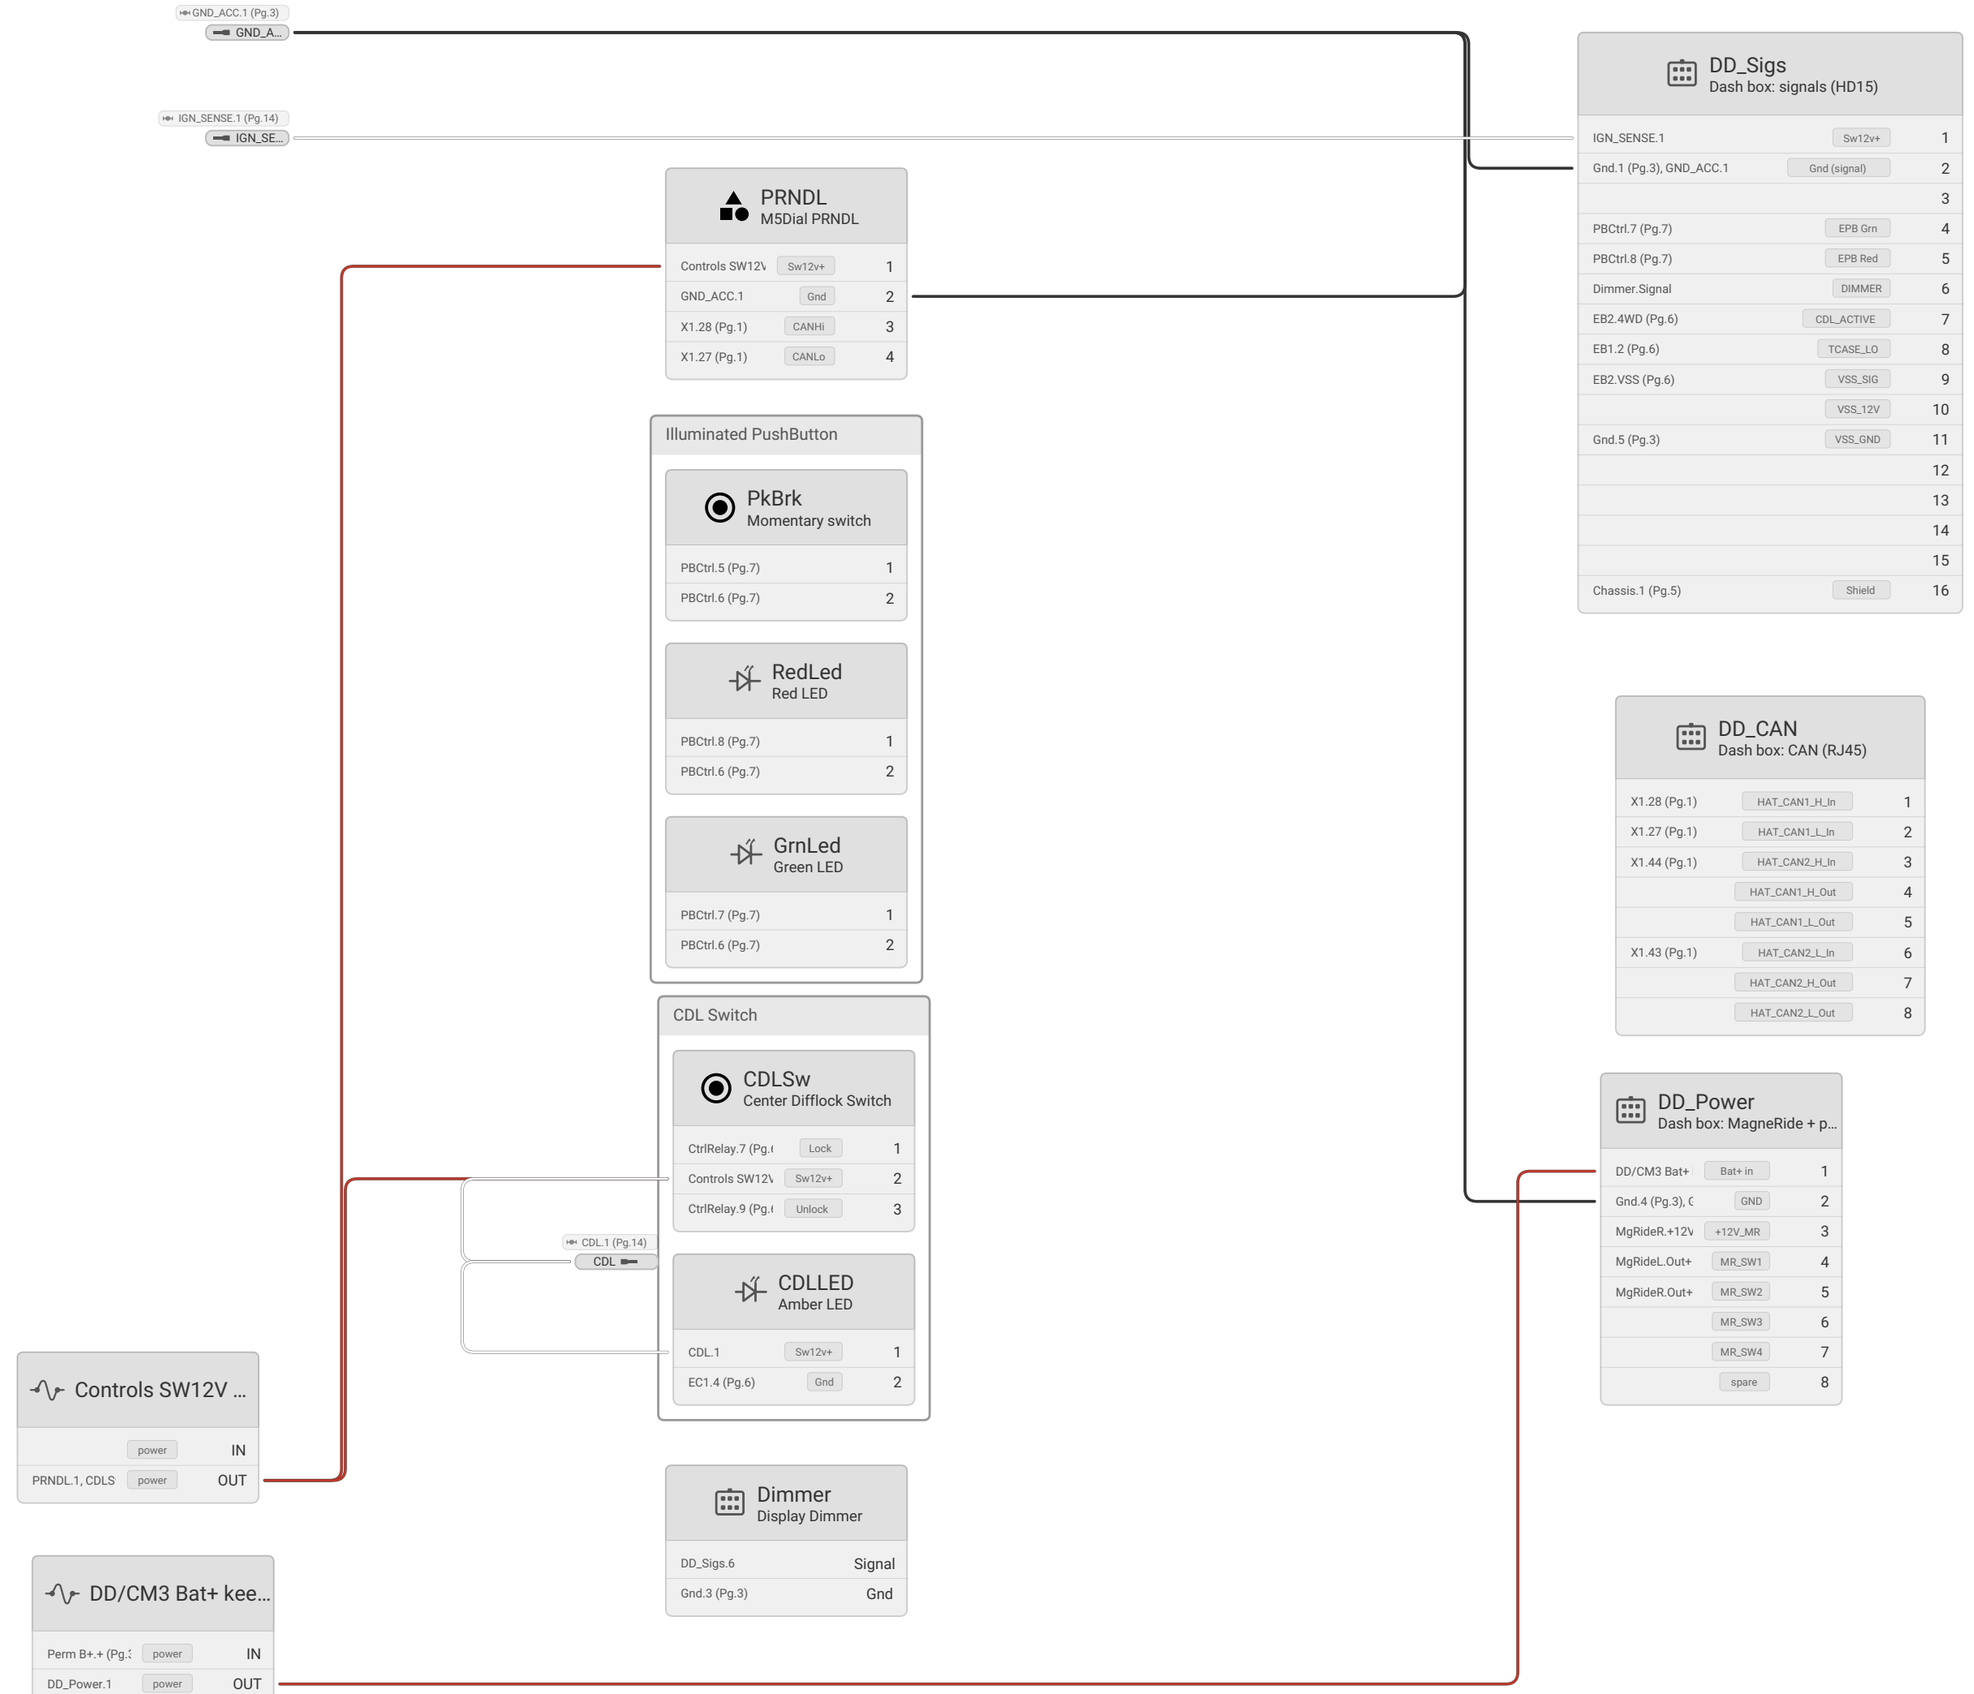
Gnd.2 (Pg.3)
X114


1
DD_Sigs (Pg.8)
3
GND_ACC.1 (Pg.3)
GND_ACC
Gnd.4 (Pg.3)
X98
PkBrk (Pg.8)
1
5.9 in
1
RedLedCtrl (Pg.8)
2
2
2
Caliper
2020 Rav4 ...
2
PBCtrl
RevUS Parki...
EPB_PWR.1 (Pg.14)
EPB_PWR
1
1
1
F-CAN1...
F-CAN1...
F-BRAK...
F-P_SE...
F-P_SE...
F-PAWL...
1
1
1
1
Pawl EC...
1
Pawl ac...

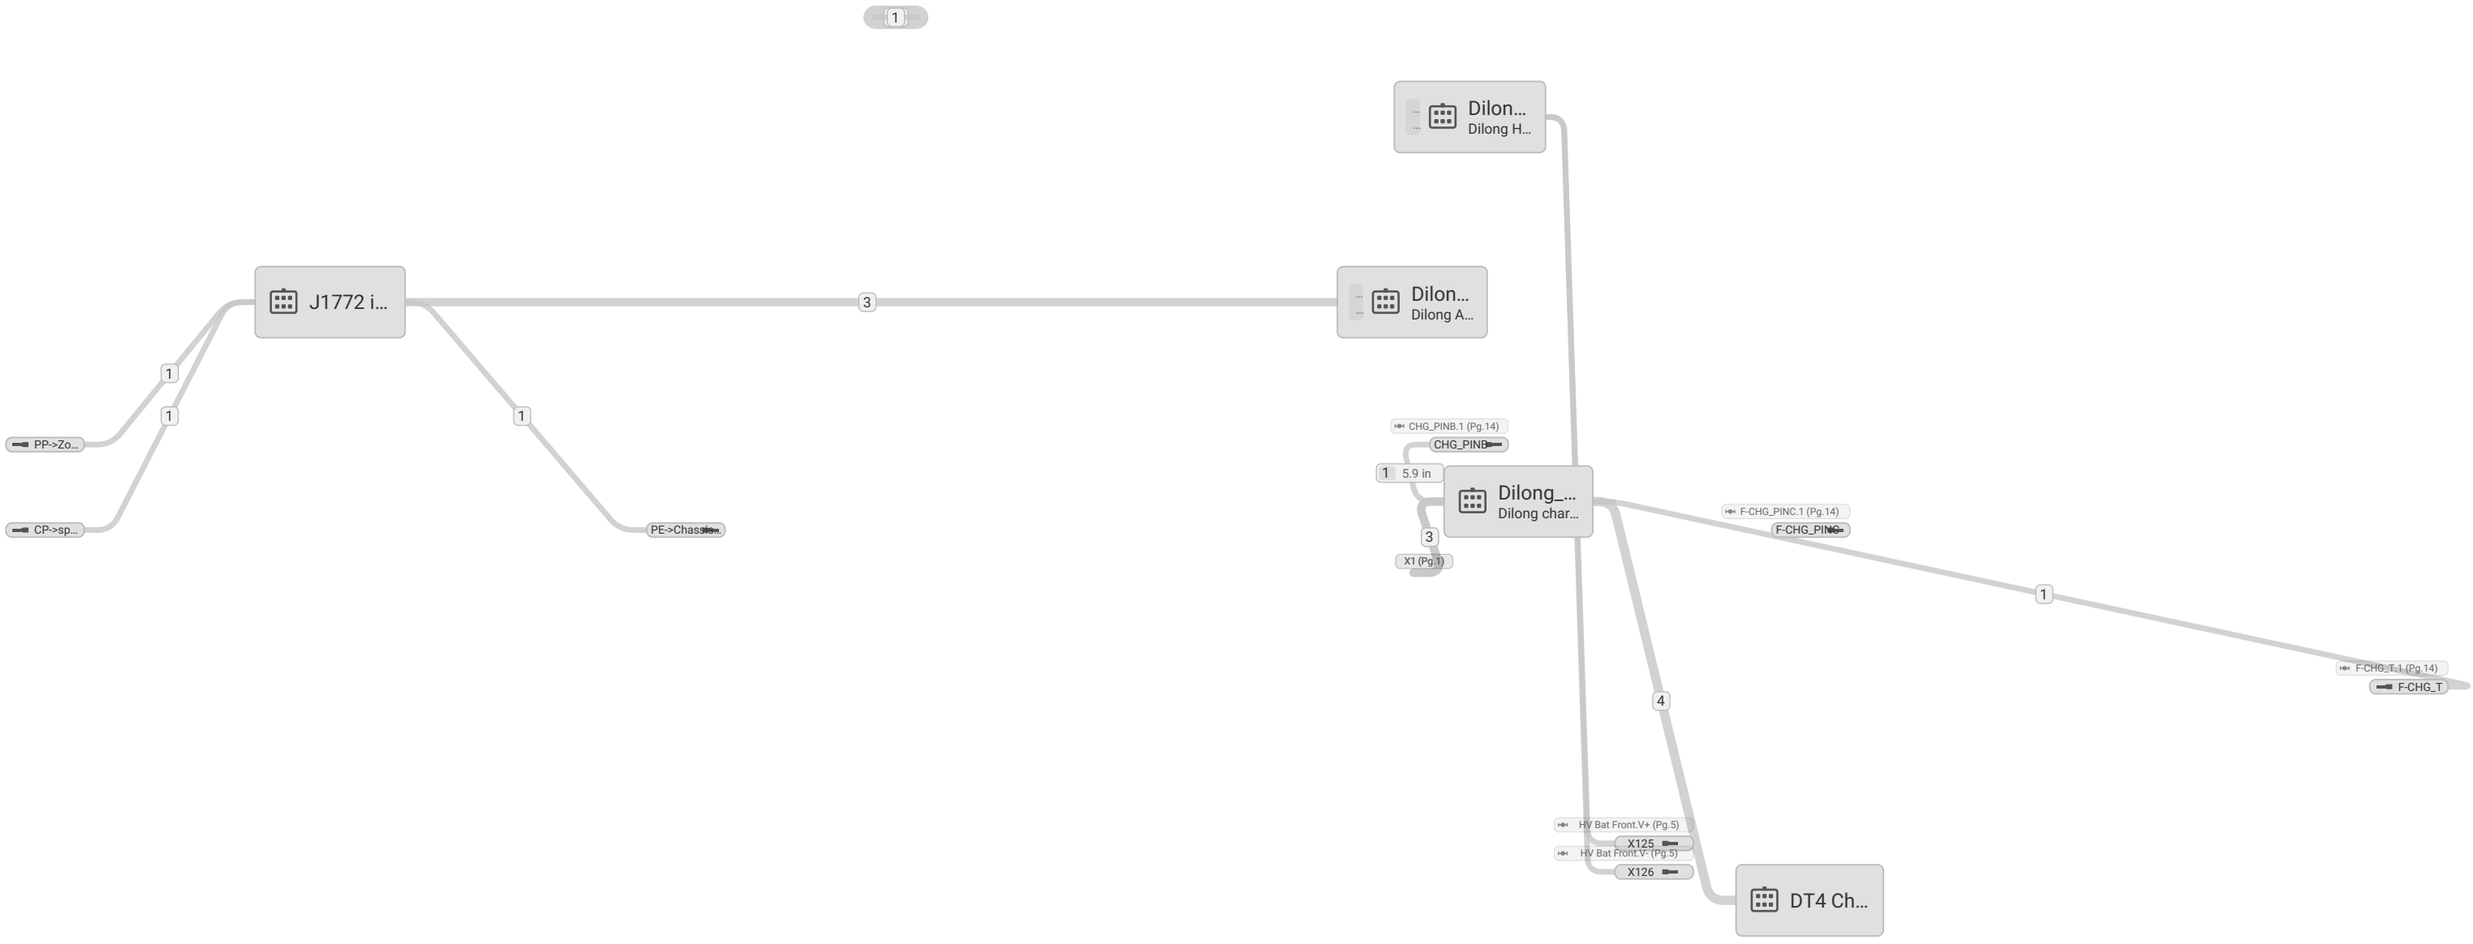

Caliper
2020 Rav4 Caliper
PBCtrl.1
MotorTop
1
PBCtrl.2
MotorBot
2
PBCtrl
RevUS Parking Brake controller
Caliper.1
Caliper1
1
Caliper.2
Caliper2
2
X98.1, GND_ACC.1
Ground
3
EPB_PWR.1
Sw12v
4
PkBrk.1 (Pg.8), DD_Sigs
Button
5
RedLed.2 (Pg.8), GrnLed
LEDGnd
6
GrnLed.1 (Pg.8), DD_Sigs
LEDGreen
7
RedLed.1 (Pg.8), DD_Sig
LEDRed
8
Gnd.4 (Pg.3)
X98
GND_ACC.1 (Pg.3)
GND_A...
EPB_PWR.1 (Pg.14)
EPB_P...
F-CAN1...
F-CAN1...
ShiftConn.3 (Pg.1)
F-BRAK...
F-P_SE...
F-P_SE...
F-PAWL...
Pawl ECU (ESP32+r...
F-PAWL_12V (sw1:
1 sw12V
GND_ACC.1
2 GND
F-CAN1_H (pawl).1
3 CAN1_H
F-CAN1_L (pawl).1
4 CAN1_L
F-BRAKE_SW (OEM
5 BRAKE
F-P_SENSE (ShiftC
6 P_SENSE
Pawl actuator (rota
7 MOT_OUT
Pawl actuator (ro...
Pawl ECU (ESP32+relay).7
1 +
GND_ACC.1
2 -



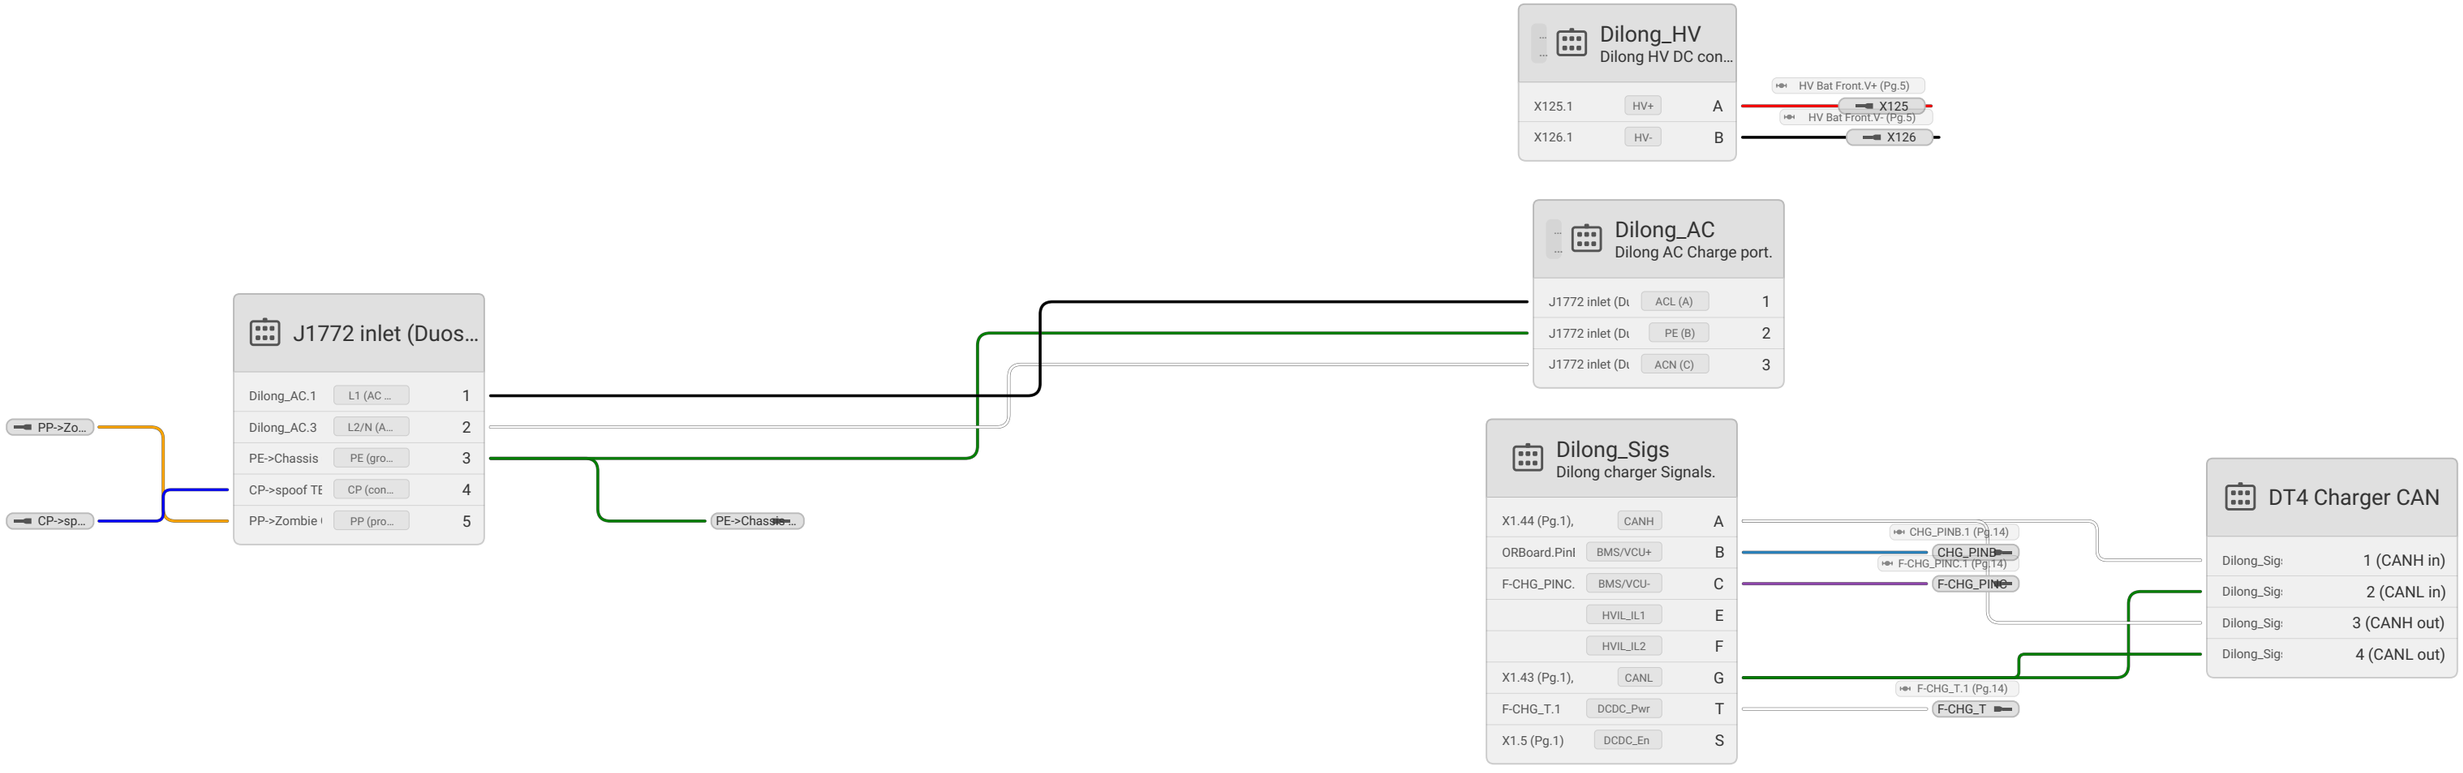
Controls — Layout

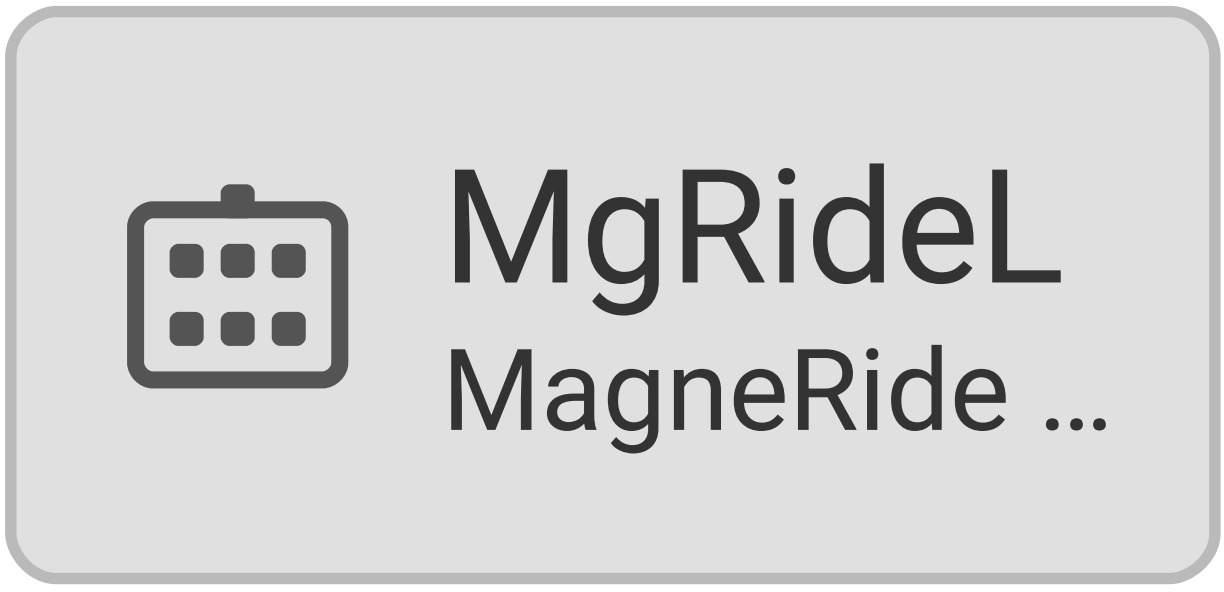

GND_ACC.1 (Pg.3)
GND_A...
IGN_SENSE.1 (Pg.14)
IGN_SE...
PRNDL
M5Dial PRNDL
Controls SW12V
Sw12v+
1
GND_ACC.1
Gnd
2
X1.28 (Pg.1)
CANHi
3
X1.27 (Pg.1)
CANLo
4
Illuminated PushButton
PkBrk
Momentary switch
PBCtrl.5 (Pg.7)
1
PBCtrl.6 (Pg.7)
2
RedLed
Red LED
PBCtrl.8 (Pg.7)
1
PBCtrl.6 (Pg.7)
2
GrnLed
Green LED
PBCtrl.7 (Pg.7)
1
PBCtrl.6 (Pg.7)
2
CDL Switch
CDLSw
Center Difflock Switch
CtrlRelay.7 (Pg.
Lock
1
Controls SW12V
Sw12v+
2
CtrlRelay.9 (Pg.
Unlock
3
CDL.1 (Pg.14)
CDL
CDLLED
Amber LED
CDL.1
Sw12v+
1
EC1.4 (Pg.6)
Gnd
2
Controls SW12V ...
power
IN
PRNDL.1, CDLS
power
OUT
DD/CM3 Bat+ kee...
Perm B+.+ (Pg.
power
IN
DD_Power.1
power
OUT
Dimmer
Display Dimmer
DD_Sigs.6
Signal
Gnd.3 (Pg.3)
Gnd
DD_Sigs
Dash box: signals (HD15)
IGN_SENSE.1
Sw12v+
1
Gnd.1 (Pg.3), GND_ACC.1
Gnd (signal)
2
3
PBCtrl.7 (Pg.7)
EPB Grn
4
PBCtrl.8 (Pg.7)
EPB Red
5
Dimmer.Signal
DIMMER
6
EB2.4WD (Pg.6)
CDL_ACTIVE
7
EB1.2 (Pg.6)
TCASE_LO
8
EB2.VSS (Pg.6)
VSS_SIG
9
VSS_12V
10
Gnd.5 (Pg.3)
VSS_GND
11
12
13
14
15
Chassis.1 (Pg.5)
Shield
16
DD_CAN
Dash box: CAN (RJ45)
X1.28 (Pg.1)
HAT_CAN1_H_In
1
X1.27 (Pg.1)
HAT_CAN1_L_In
2
X1.44 (Pg.1)
HAT_CAN2_H_In
3
HAT_CAN1_H_Out
4
HAT_CAN1_L_Out
5
X1.43 (Pg.1)
HAT_CAN2_L_In
6
HAT_CAN2_H_Out
7
HAT_CAN2_L_Out
8
DD_Power
Dash box: MagneRide + p...
DD/CM3 Bat+
Bat+ in
1
Gnd.4 (Pg.3), G
GND
2
MgRideR.+12V
+12V_MR
3
MgRideL.Out+
MR_SW1
4
MgRideR.Out+
MR_SW2
5
MR_SW3
6
MR_SW4
7
spare
8

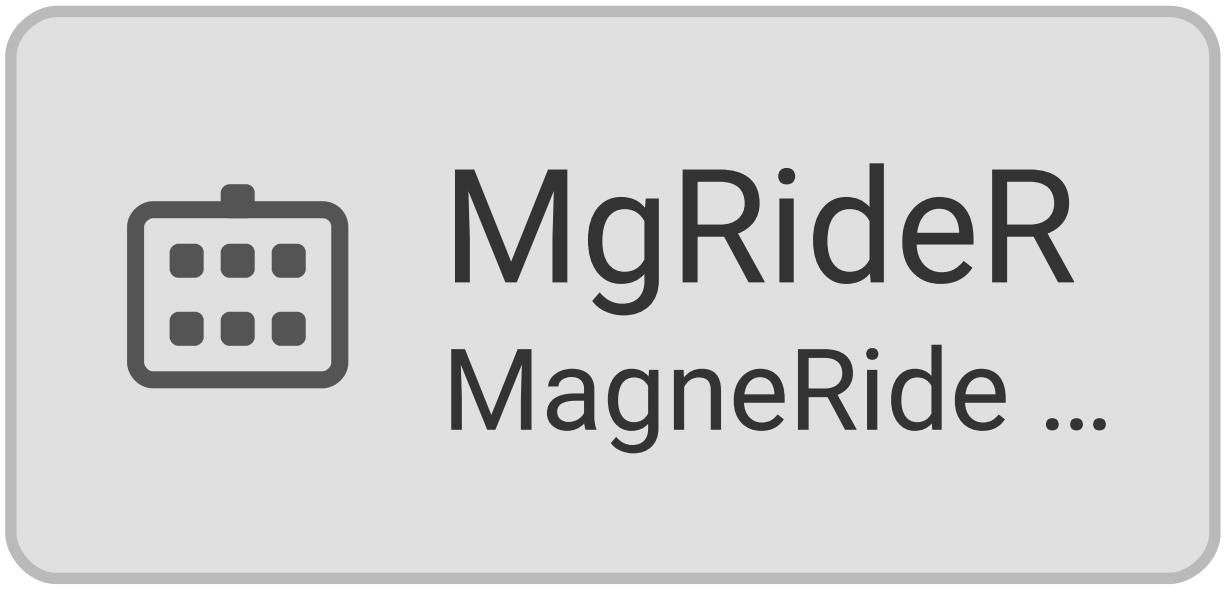
EPAS — Schematic



Charger — Layout


Dilong_HV
Dilong HV DC con...
X125.1
HV+
A
X126.1
HV-
B
HV Bat Front.V+ (Pg.5)
X125
HV Bat Front.V- (Pg.5)
X126
Dilong_AC
Dilong AC Charge port.
J1772 inlet (D
ACL (A)
1
J1772 inlet (D
PE (B)
2
J1772 inlet (D
ACN (C)
3
J1772 inlet (Duos...
Dilong_AC.1
L1 (AC ...
1
Dilong_AC.3
L2/N (A...
2
PE->Chassis
PE (gro...
3
CP->spoof TE
CP (con...
4
PP->Zombie
PP (pro...
5
PP->Zo...
CP->sp...
PE->Chassis...
Dilong_Sigs
Dilong charger Signals.
X1.44 (Pg.1),
CANH
A
ORBoard.Pinl
BMS/VCU+
B
F-CHG_PINC.
BMS/VCU-
C
HVIL_IL1
E
HVIL_IL2
F
X1.43 (Pg.1),
CANL
G
F-CHG_T.1
DCDC_Pwr
T
X1.5 (Pg.1)
DCDC_En
S
CHG_PINB.1 (Pg.14)
CHG_PINB
F-CHG_PINC.1 (Pg.14)
F-CHG_PINC
F-CHG_T.1 (Pg.14)
F-CHG_T
DT4 Charger CAN
Dilong_Sig:
1 (CANH in)
Dilong_Sig:
2 (CANL in)
Dilong_Sig:
3 (CANH out)
Dilong_Sig:
4 (CANL out)


MgRideL
MagneRide …


MgRideR
MagneRide …

MgRideL

MagneRide Left Shock

DD_Power.4 (Pg.8)	Out+
DD_Power.3 (Pg.8)	+12V_MR

MgRideR

MagneRide Right Shock

DD_Power.5 (Pg.8)	Out+
DD_Power.3 (Pg.8)	+12V_MR

1

Cooling…
Cooling Pu…

RADFAN_PWR.1 (Pg.14)

1 5.9 k…

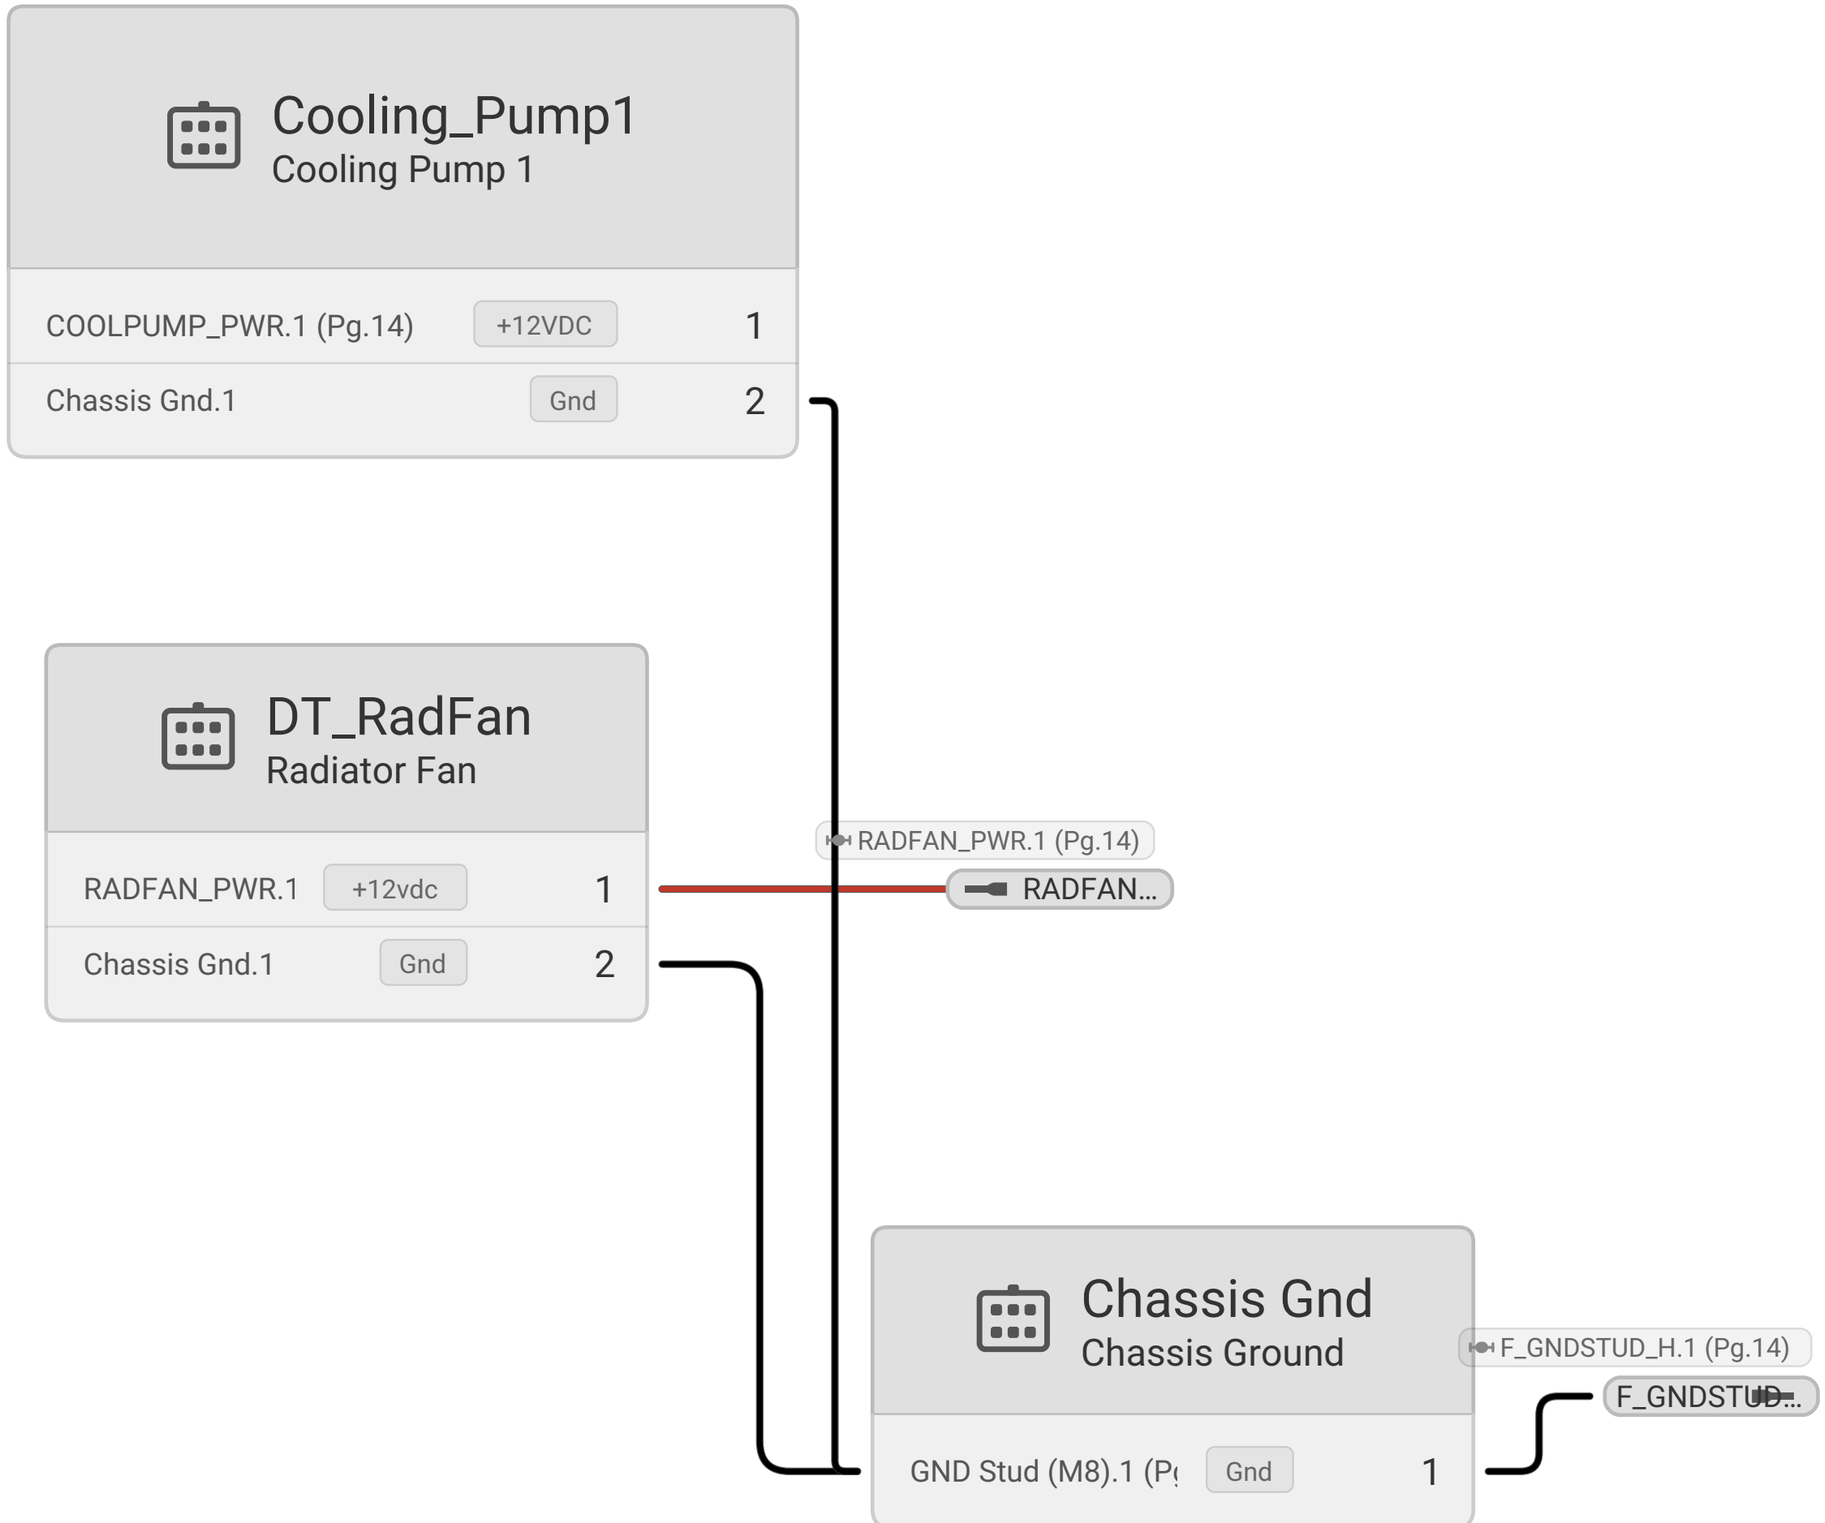
RADFAN_PWR

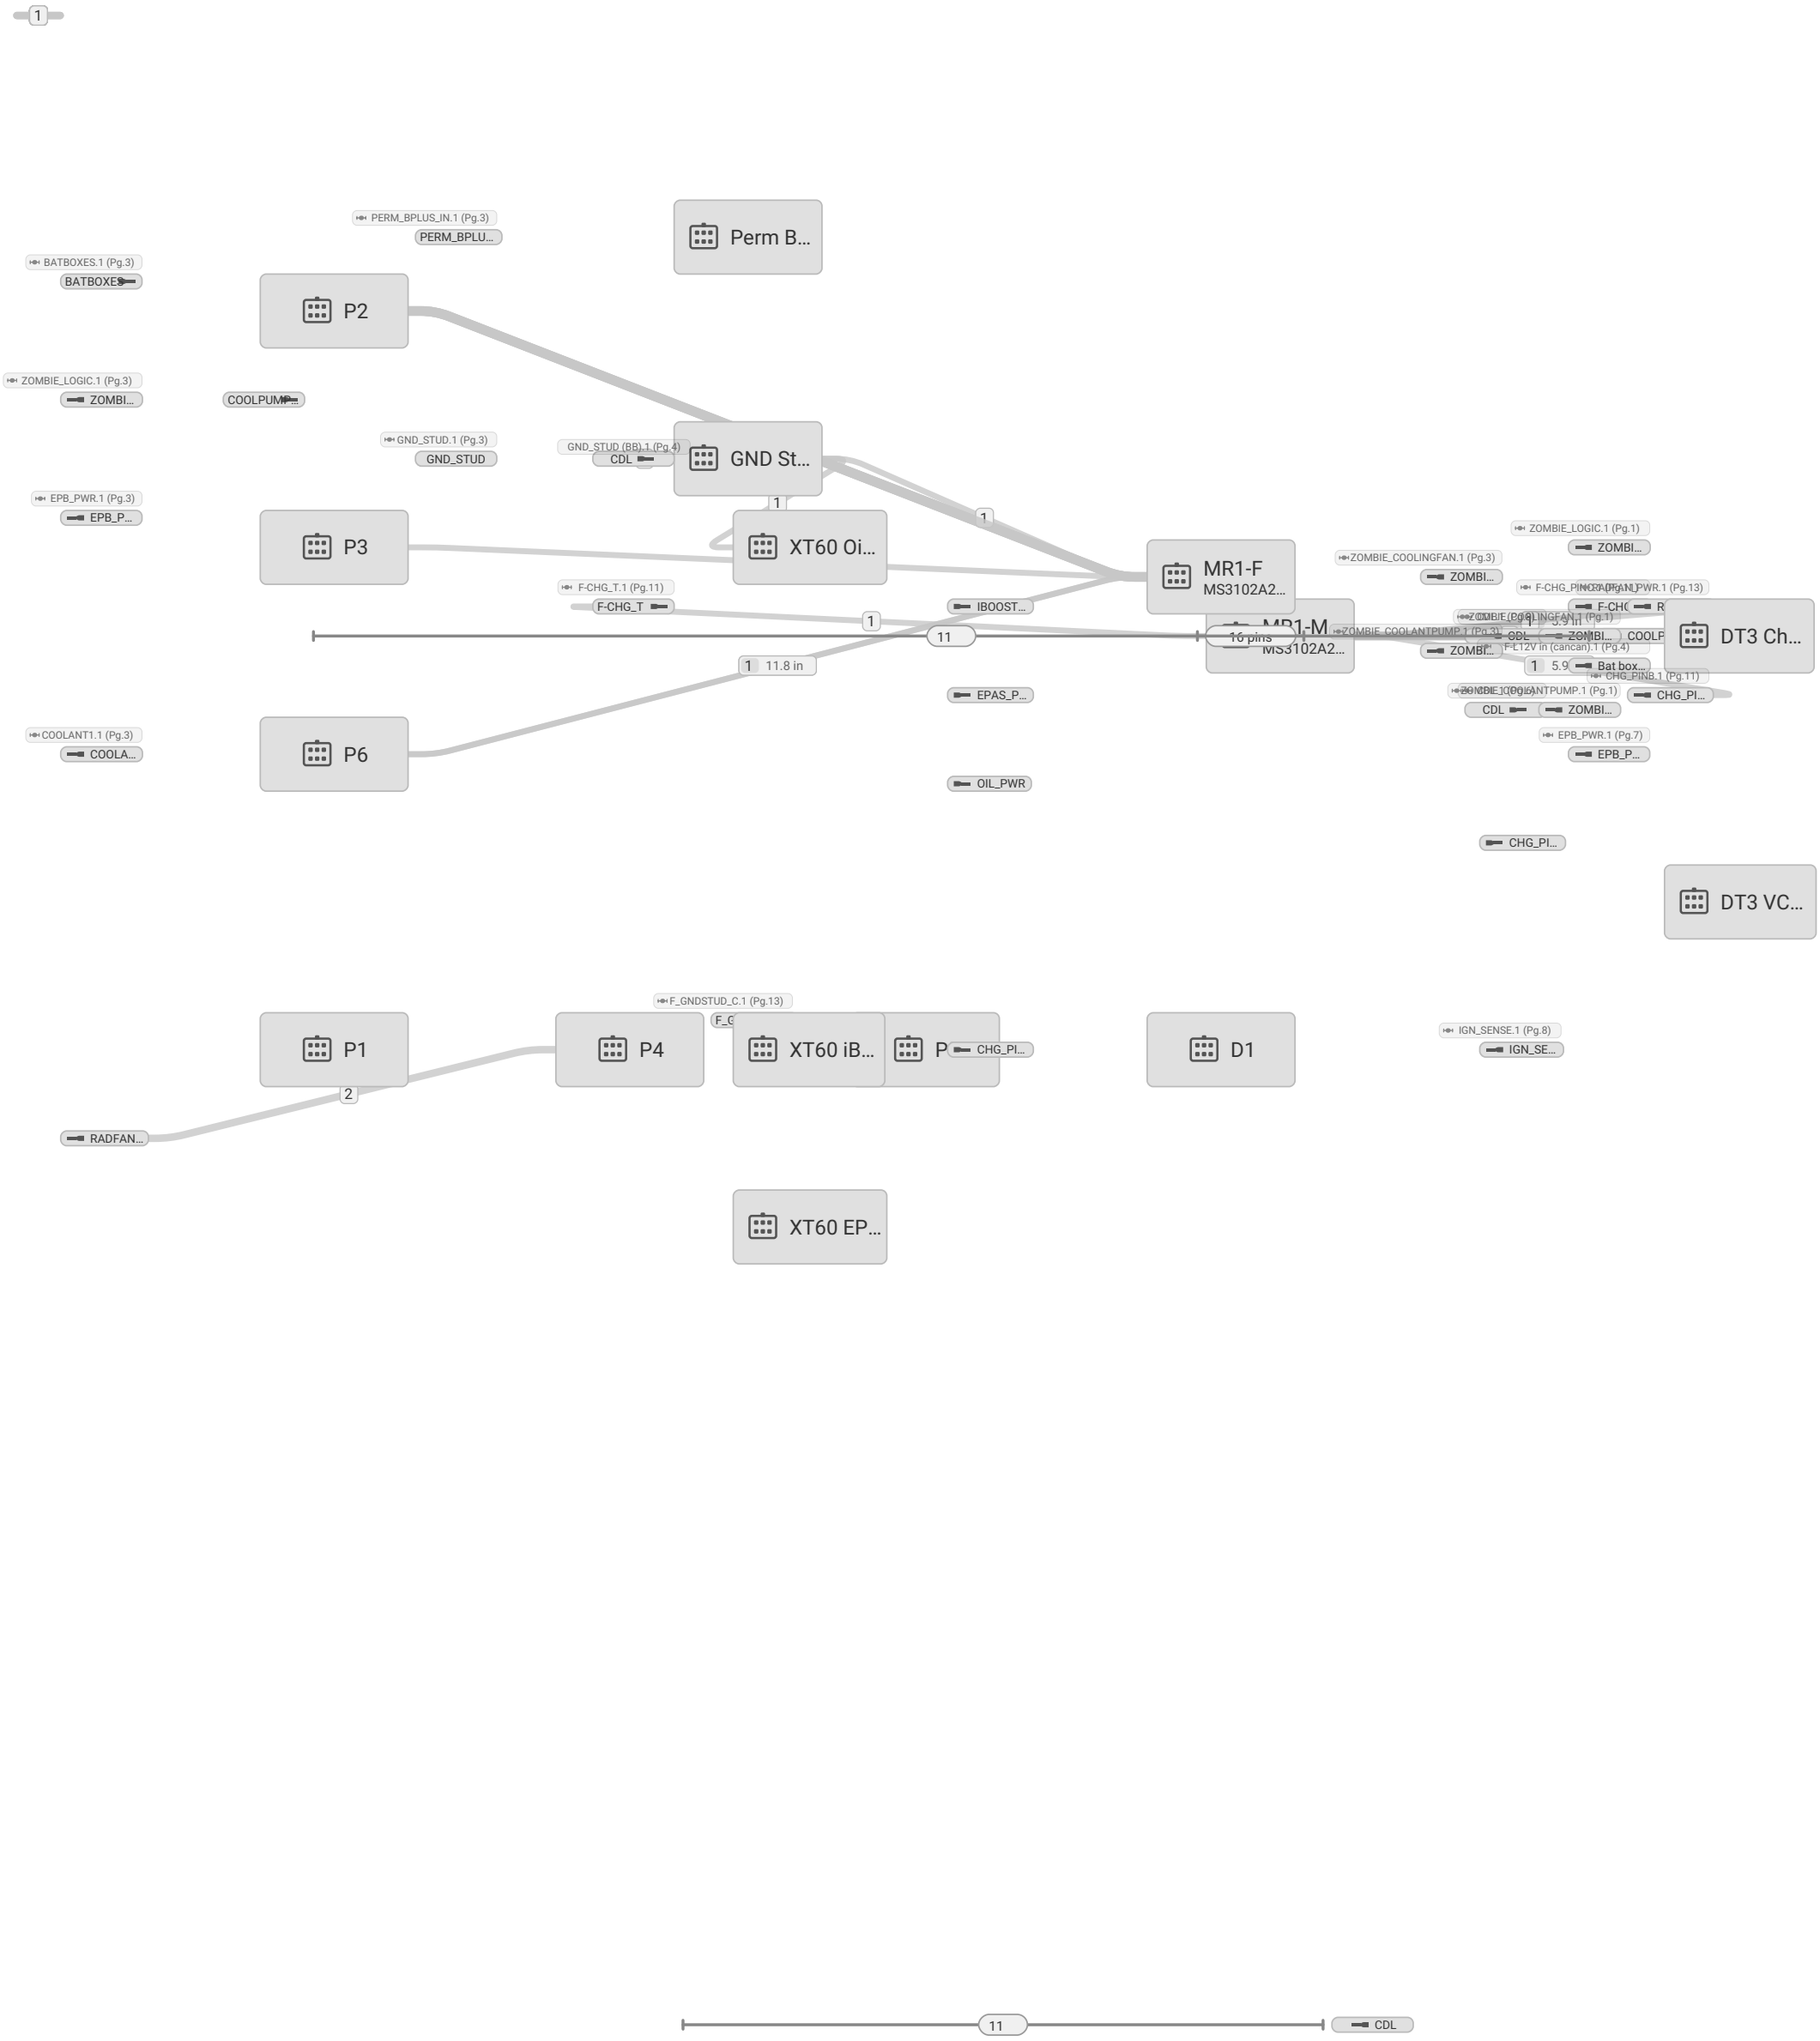
DT_Rad…
Radiator Fan

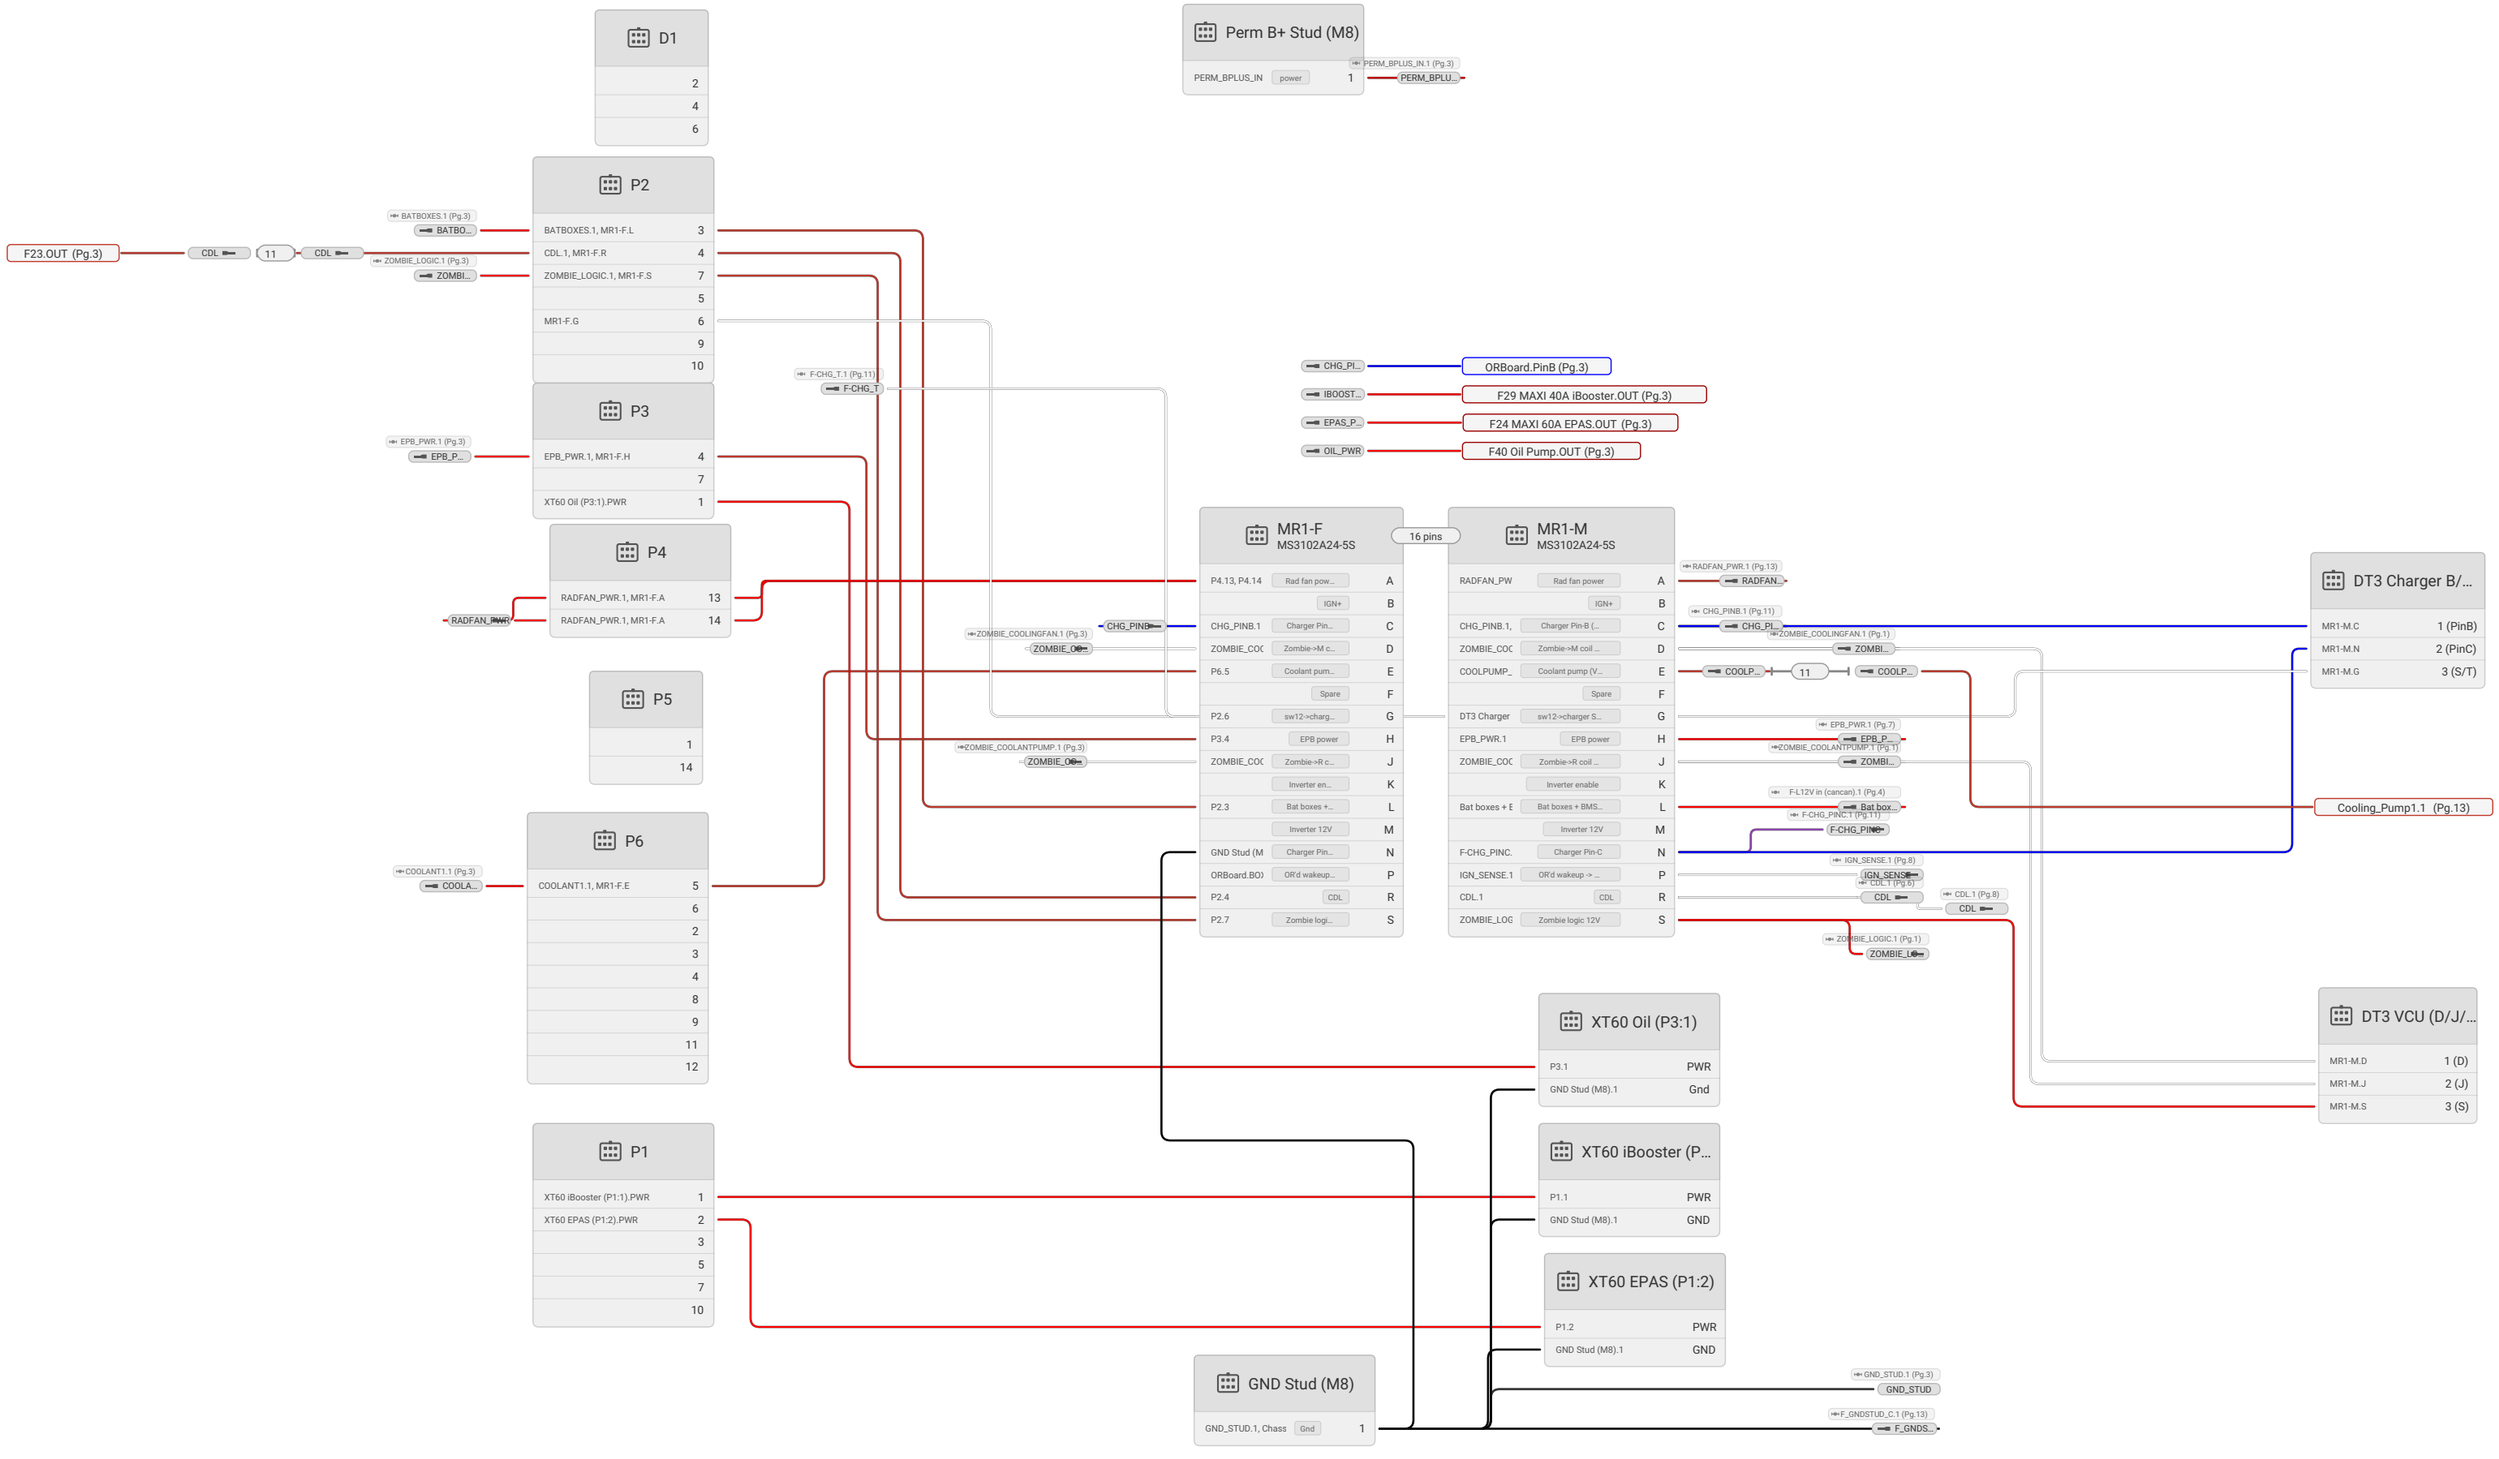
Chassis…
Chassis Gro…

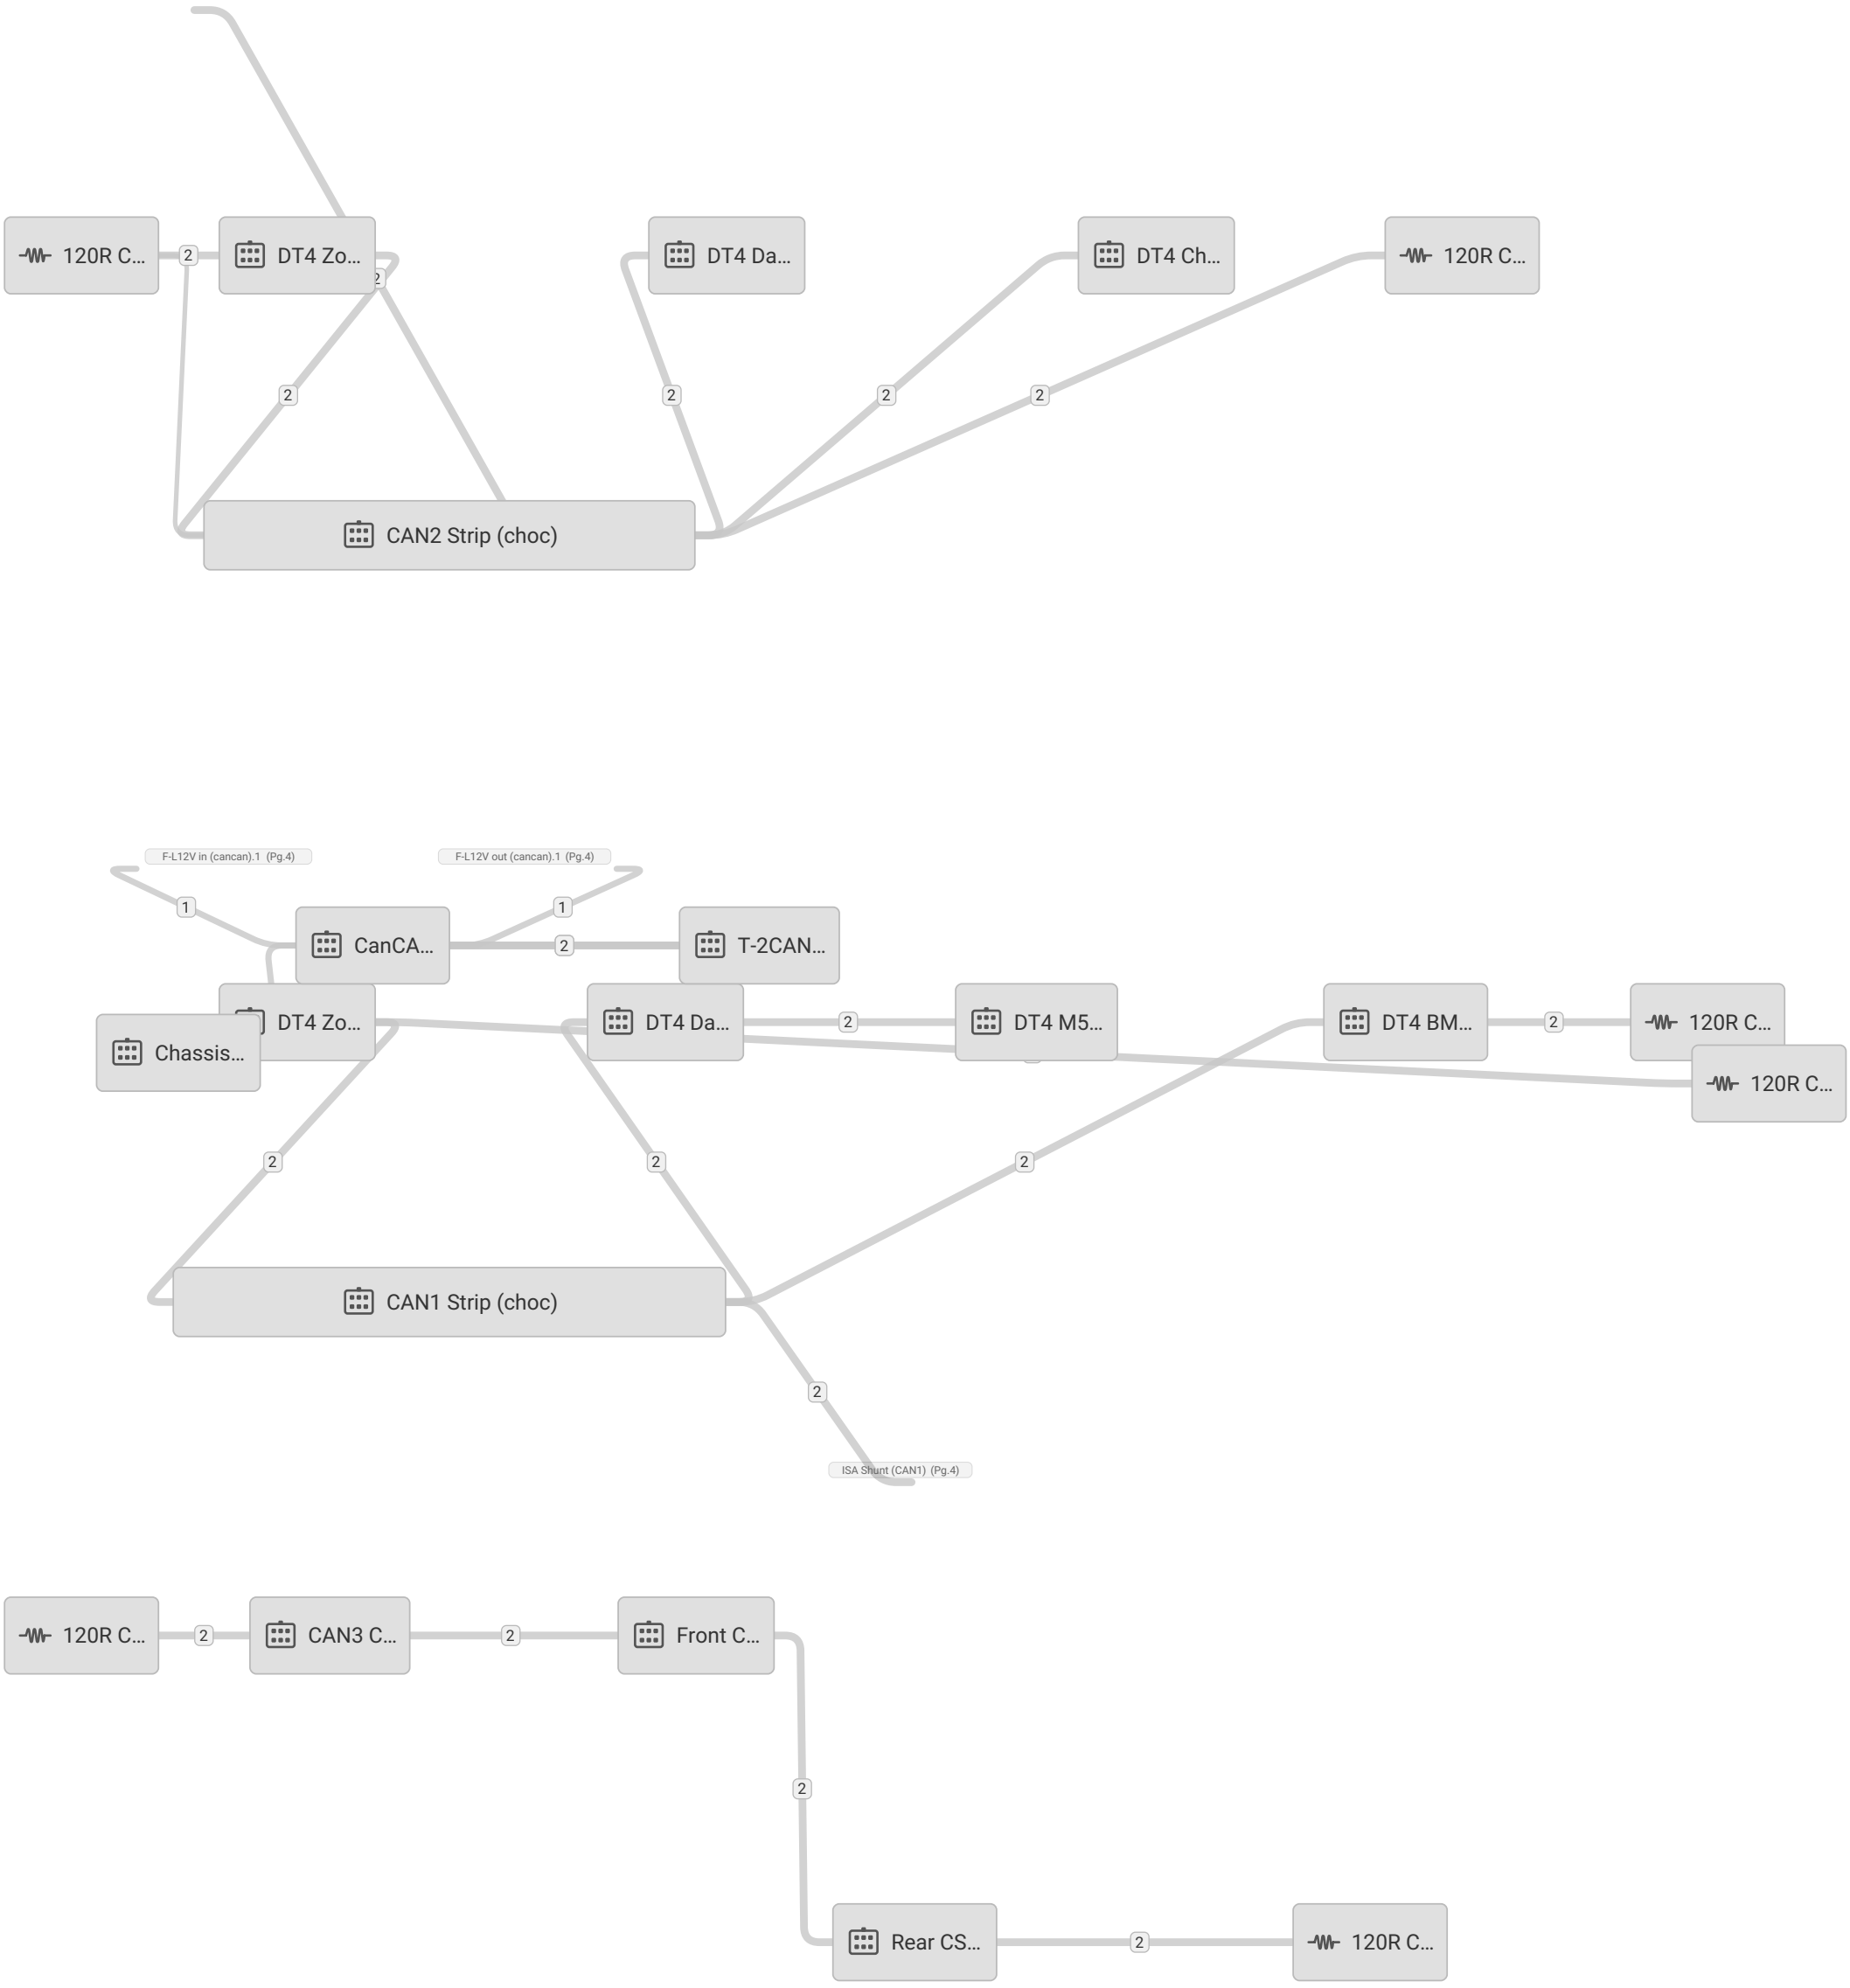
F_GNDSTUD_H.1 (Pg.14)

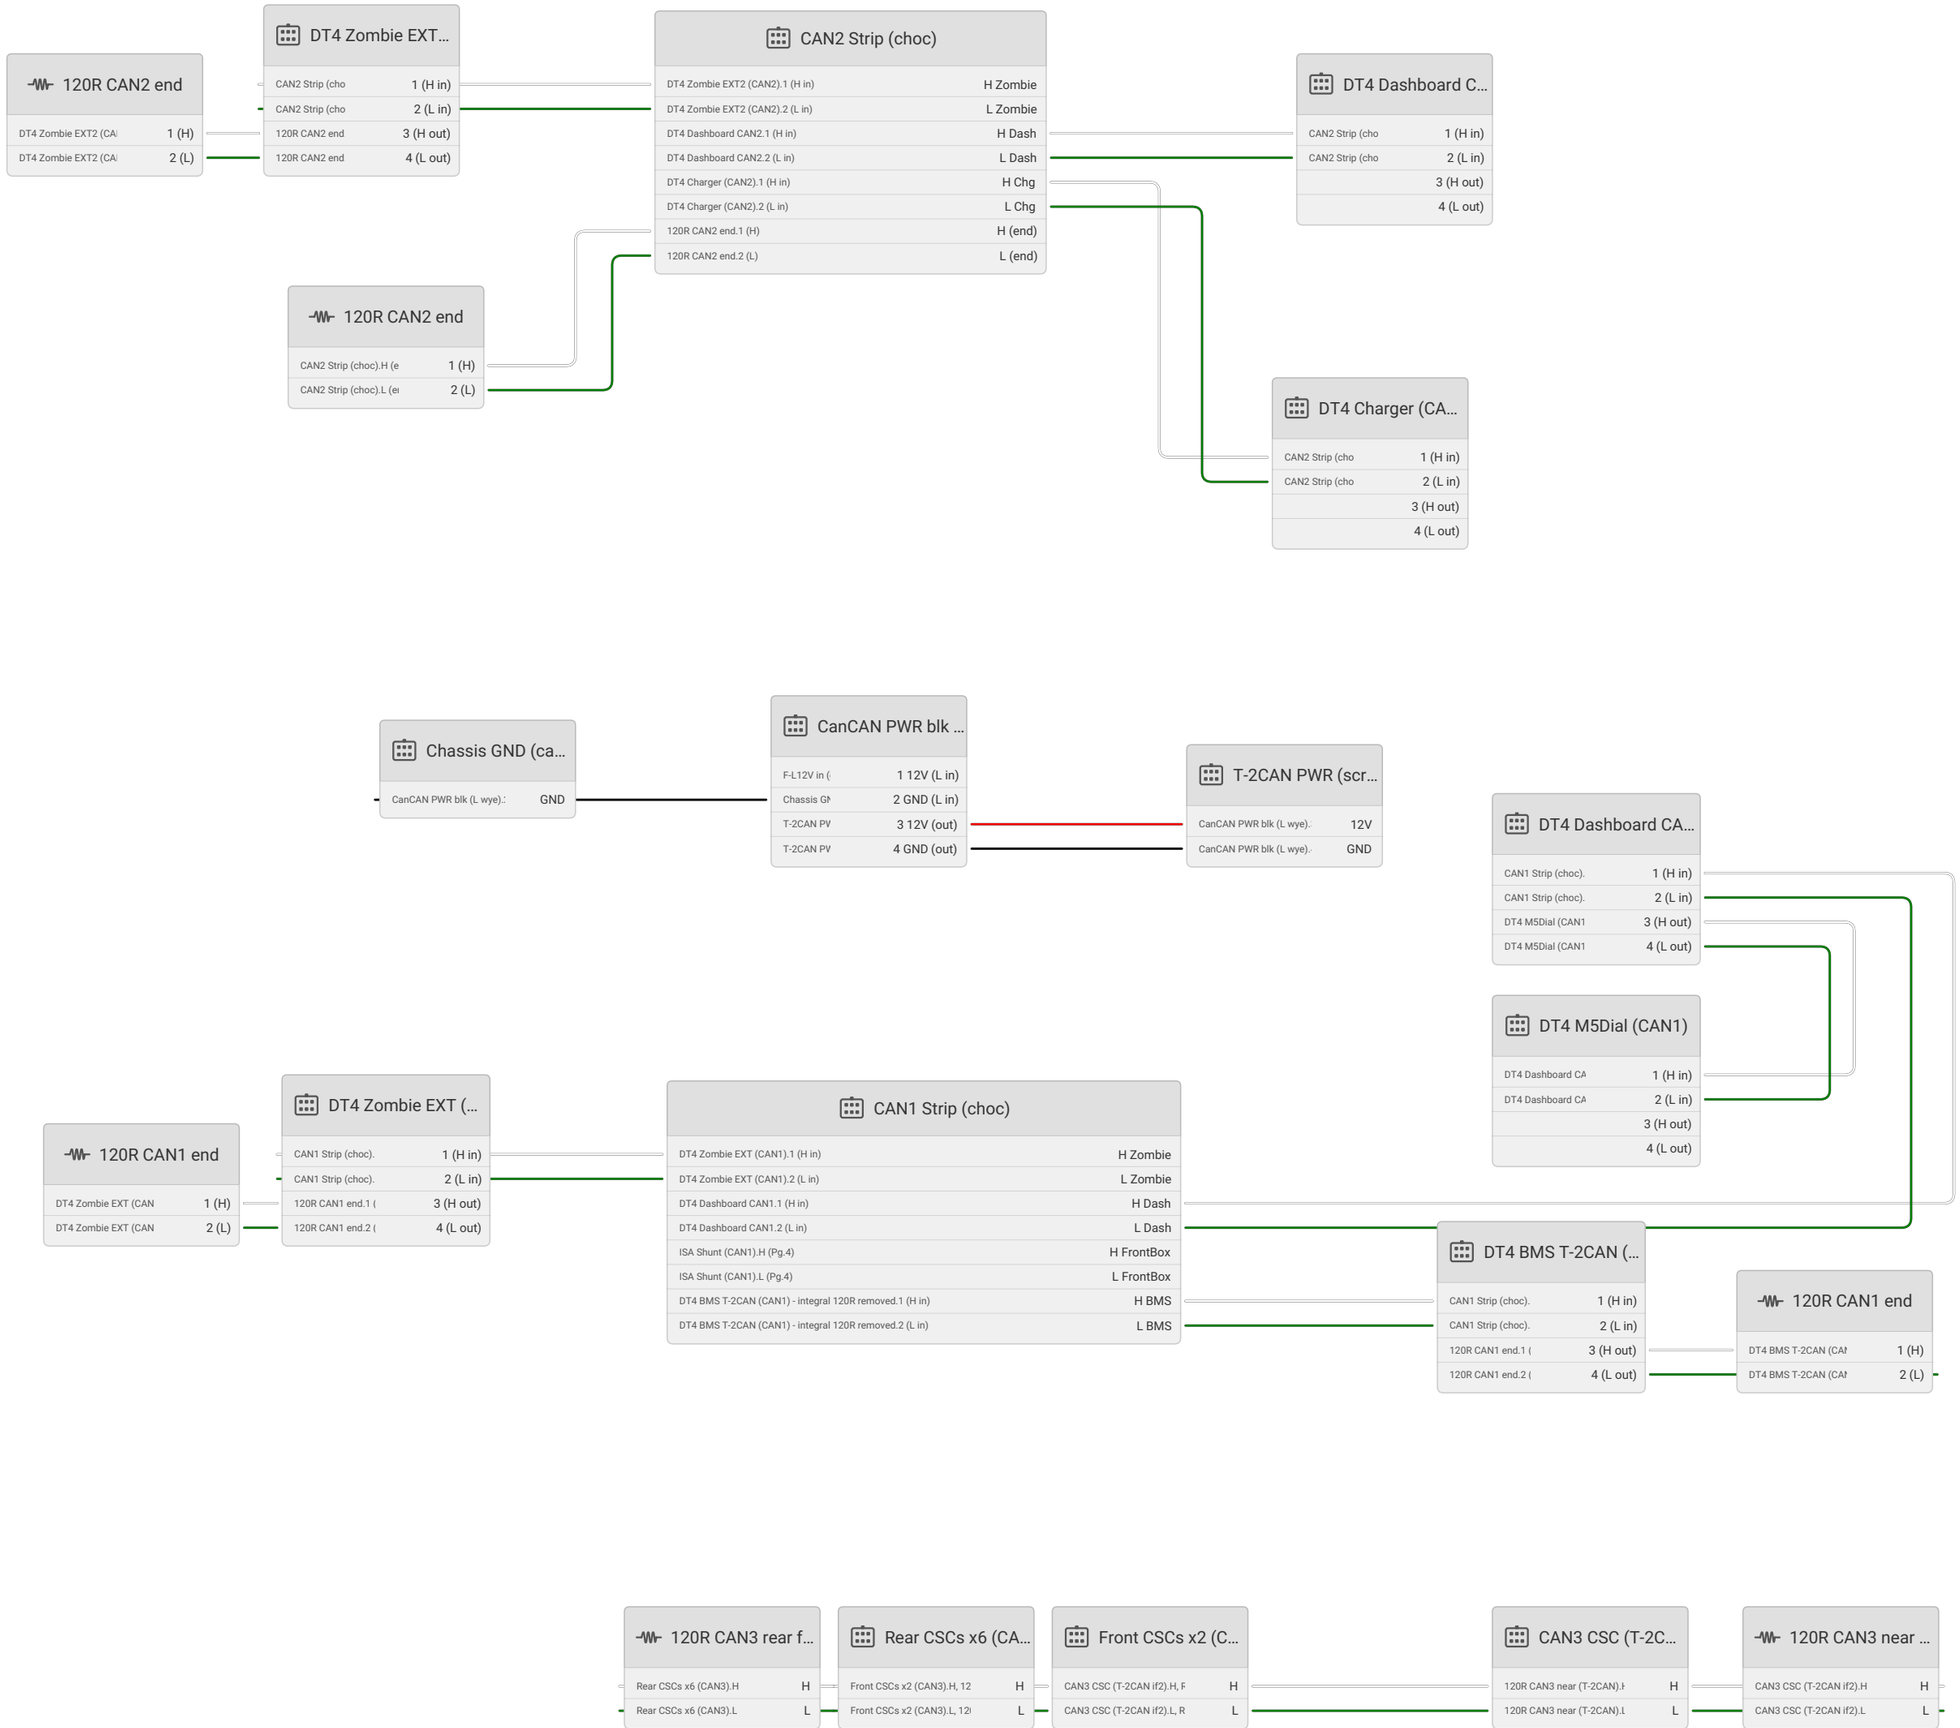
F_GNDS…


Cooling_Pump1
Cooling Pump 1
COOLPUMP_PWR.1 (Pg.14)
+12VDC
1
Chassis Gnd.1
Gnd
2
DT_RadFan
Radiator Fan
RADFAN_PWR.1
+12vdc
1
Chassis Gnd.1
Gnd
2
RADFAN_PWR.1 (Pg.14)
RADFAN...
Chassis Gnd
Chassis Ground
GND Stud (M8).1 (P
Gnd
1
F_GNDSTUD_H.1 (Pg.14)
F_GNDSTUD...


1
PERM_BPLUS_IN.1 (Pg.3)
PERM_BPLU...
Perm B...
BATBOXES.1 (Pg.3)
BATBOXES
P2
ZOMBIE_LOGIC.1 (Pg.3)
ZOMBI...
COOLPUMP...
GND_STUD.1 (Pg.3)
GND_STUD
GND_STUD (BB).1 (Pg.4)
CDL
GND St...
EPB_PWR.1 (Pg.3)
EPB_P...
P3
XT60 Oi...
F-CHG_T.1 (Pg.11)
F-CHG_T
IBOOST...
MR1-F
MS3102A2...
ZOMBIE_LOGIC.1 (Pg.1)
ZOMBI...
ZOMBIE_COOLINGFAN.1 (Pg.3)
ZOMBI...
F-CHG_PINCA(PGA).1 (Pg.13)
F-CHG_PWR.1 (Pg.13)
11
16 pins
MR1-M
MS3102A2...
ZOMBIE_COOLANTPUMP.1 (Pg.3)
CDL
ZOMBI...
COOLP...
F-L12V in (cancan).1 (Pg.4)
ZOMBI...
1 11.8 in
1 5.9 in
Bat box...
CHG_PINB.1 (Pg.11)
CHG_PI...
EPAS_P...
ZOMBIE_COOLANTPUMP.1 (Pg.1)
CDL
ZOMBI...
COOLANT1.1 (Pg.3)
COOLA...
P6
EPB_PWR.1 (Pg.7)
EPB_P...
OIL_PWR
CHG_PI...
DT3 Ch...
DT3 VC...
F_GNDSTUD_C.1 (Pg.13)
P1
P4
XT60 iB...
P
CHG_PI...
D1
IGN_SENSE.1 (Pg.8)
IGN_SE...
2
RADFAN...
XT60 EP...
11
CDL


D1
2
4
6
Perm B+ Stud (M8)
PERM_BPLUS_IN power 1
PERM_BPLUS_IN.1 (Pg.3)
PERM_BPLU...
P2
BATBOXES.1, MR1-F.L 3
CDL.1, MR1-F.R 4
ZOMBIE_LOGIC.1, MR1-F.S 7
5
MR1-F.G 6
9
10
BATBOXES.1 (Pg.3)
BATBO...
F23.OUT (Pg.3)
CDL
11
CDL
ZOMBIE_LOGIC.1 (Pg.3)
ZOMBI...
F-CHG_T.1 (Pg.11)
F-CHG_T
P3
EPB_PWR.1, MR1-F.H 4
7
XT60 Oil (P3:1).PWR 1
EPB_PWR.1 (Pg.3)
EPB_P...
CHG_PI...
ORBoard.PinB (Pg.3)
IBOOST...
F29 MAXI 40A iBooster.OUT (Pg.3)
EPAS_P...
F24 MAXI 60A EPAS.OUT (Pg.3)
OIL_PWR
F40 Oil Pump.OUT (Pg.3)
P4
RADFAN_PWR.1, MR1-F.A 13
RADFAN_PWR.1, MR1-F.A 14
RADFAN_PWR
MR1-F
MS3102A24-5S
16 pins
MR1-M
MS3102A24-5S
P4.13, P4.14 Rad fan pow... A
IGN+ B
CHG_PINB.1 Charger Pin... C
ZOMBIE_COC Zombie->M c... D
P6.5 Coolant pum... E
Spare F
P2.6 sw12->charg... G
P3.4 EPB power H
ZOMBIE_COC Zombie->R c... J
Inverter en... K
P2.3 Bat boxes +... L
Inverter 12V M
GND Stud (M Charger Pin... N
ORBoard.BO OR'd wakeup... P
P2.4 CDL R
P2.7 Zombie logi... S
RADFAN_PW Rad fan power A
IGN+ B
CHG_PINB.1, Charger Pin-B (... C
ZOMBIE_COC Zombie->M coil ... D
COOLPUMP_ Coolant pump (V... E
Spare F
DT3 Charger sw12->charger S... G
EPB_PWR.1 EPB power H
ZOMBIE_COC Zombie->R coil ... J
Inverter enable K
Bat boxes + E Bat boxes + BMS... L
Inverter 12V M
F-CHG_PINC. Charger Pin-C N
IGN_SENSE.1 OR'd wakeup -> ... P
CDL.1 CDL R
ZOMBIE_LOG Zombie logic 12V S
ZOMBIE_COOLINGFAN.1 (Pg.3)
ZOMBIE_O...
CHG_PINB
ZOMBIE_COOLANTPUMP.1 (Pg.3)
ZOMBIE_O...
RADFAN_PWR.1 (Pg.13)
RADFAN...
CHG_PINB.1 (Pg.11)
CHG_PI...
ZOMBIE_COOLINGFAN.1 (Pg.1)
ZOMBI...
COOLP...
11
COOLP...
EPB_PWR.1 (Pg.7)
EPB_P...
ZOMBIE_COOLANTPUMP.1 (Pg.1)
ZOMBI...
F-L12V in (cancan).1 (Pg.4)
Bat box...
F-CHG_PINC.1 (Pg.11)
F-CHG_PINC
IGN_SENSE.1 (Pg.8)
IGN_SENS...
CDL.1 (Pg.6)
CDL
CDL.1 (Pg.8)
CDL
ZOMBIE_LOGIC.1 (Pg.1)
ZOMBIE_L...
DT3 Charger B/...
MR1-M.C 1 (PinB)
MR1-M.N 2 (PinC)
MR1-M.G 3 (S/T)
Cooling_Pump1.1 (Pg.13)
DT3 VCU (D/J/...
MR1-M.D 1 (D)
MR1-M.J 2 (J)
MR1-M.S 3 (S)
P5
1
14
P6
COOLANT1.1, MR1-F.E 5
6
2
3
4
8
9
11
12
COOLANT1.1 (Pg.3)
COOLA...
P1
XT60 iBooster (P1:1).PWR 1
XT60 EPAS (P1:2).PWR 2
3
5
7
10
XT60 Oil (P3:1)
P3.1 PWR
GND Stud (M8).1 Gnd
XT60 iBooster (P...
P1.1 PWR
GND Stud (M8).1 GND
XT60 EPAS (P1:2)
P1.2 PWR
GND Stud (M8).1 GND
GND Stud (M8)
GND_STUD.1, Chass Gnd 1
GND_STUD.1 (Pg.3)
GND_STUD
F_GNDSTUD_C.1 (Pg.13)
F_GNDS...


120R C...
DT4 Zo...
DT4 Da...
DT4 Ch...
120R C...
CAN2 Strip (choc)
F-L12V in (cancan).1 (Pg.4)
F-L12V out (cancan).1 (Pg.4)
CanCA...
T-2CAN...
Chassis...
DT4 Zo...
DT4 Da...
DT4 M5...
DT4 BM...
120R C...
120R C...
CAN1 Strip (choc)
ISA Shunt (CAN1) (Pg.4)
120R C...
CAN3 C...
Front C...
Rear CS...
120R C...


120R CAN2 end
DT4 Zombie EXT2 (CA 1 (H)
DT4 Zombie EXT2 (CA 2 (L)
DT4 Zombie EXT...
CAN2 Strip (cho 1 (H in)
CAN2 Strip (cho 2 (L in)
120R CAN2 end 3 (H out)
120R CAN2 end 4 (L out)
CAN2 Strip (choc)
DT4 Zombie EXT2 (CAN2).1 (H in) H Zombie
DT4 Zombie EXT2 (CAN2).2 (L in) L Zombie
DT4 Dashboard CAN2.1 (H in) H Dash
DT4 Dashboard CAN2.2 (L in) L Dash
DT4 Charger (CAN2).1 (H in) H Chg
DT4 Charger (CAN2).2 (L in) L Chg
120R CAN2 end.1 (H) H (end)
120R CAN2 end.2 (L) L (end)
DT4 Dashboard C...
CAN2 Strip (cho 1 (H in)
CAN2 Strip (cho 2 (L in)
3 (H out)
4 (L out)
120R CAN2 end
CAN2 Strip (choc).H (e 1 (H)
CAN2 Strip (choc).L (e 2 (L)
DT4 Charger (CA...
CAN2 Strip (cho 1 (H in)
CAN2 Strip (cho 2 (L in)
3 (H out)
4 (L out)
Chassis GND (ca...
CanCAN PWR blk (L wye).: GND
CanCAN PWR blk ...
F-L12V in (1 12V (L in)
Chassis GN 2 GND (L in)
T-2CAN PV 3 12V (out)
T-2CAN PV 4 GND (out)
T-2CAN PWR (scr...
CanCAN PWR blk (L wye).: 12V
CanCAN PWR blk (L wye).: GND
DT4 Dashboard CA...
CAN1 Strip (choc). 1 (H in)
CAN1 Strip (choc). 2 (L in)
DT4 M5Dial (CAN1 3 (H out)
DT4 M5Dial (CAN1 4 (L out)
DT4 M5Dial (CAN1)
DT4 Dashboard CA 1 (H in)
DT4 Dashboard CA 2 (L in)
3 (H out)
4 (L out)
120R CAN1 end
DT4 Zombie EXT (CAN 1 (H)
DT4 Zombie EXT (CAN 2 (L)
DT4 Zombie EXT (...
CAN1 Strip (choc). 1 (H in)
CAN1 Strip (choc). 2 (L in)
120R CAN1 end.1 (3 (H out)
120R CAN1 end.2 (4 (L out)
CAN1 Strip (choc)
DT4 Zombie EXT (CAN1).1 (H in) H Zombie
DT4 Zombie EXT (CAN1).2 (L in) L Zombie
DT4 Dashboard CAN1.1 (H in) H Dash
DT4 Dashboard CAN1.2 (L in) L Dash
ISA Shunt (CAN1).H (Pg.4) H FrontBox
ISA Shunt (CAN1).L (Pg.4) L FrontBox
DT4 BMS T-2CAN (CAN1) - integral 120R removed.1 (H in) H BMS
DT4 BMS T-2CAN (CAN1) - integral 120R removed.2 (L in) L BMS
DT4 BMS T-2CAN (...
CAN1 Strip (choc). 1 (H in)
CAN1 Strip (choc). 2 (L in)
120R CAN1 end.1 (3 (H out)
120R CAN1 end.2 (4 (L out)
120R CAN1 end
DT4 BMS T-2CAN (CAN 1 (H)
DT4 BMS T-2CAN (CAN 2 (L)
120R CAN3 rear f...
Rear CSCs x6 (CAN3).H H
Rear CSCs x6 (CAN3).L L
Rear CSCs x6 (CA...
Front CSCs x2 (CAN3).H, 12 H
Front CSCs x2 (CAN3).L, 12 L
Front CSCs x2 (C...
CAN3 CSC (T-2CAN if2).H, F H
CAN3 CSC (T-2CAN if2).L, R L
CAN3 CSC (T-2C...
120R CAN3 near (T-2CAN).I H
120R CAN3 near (T-2CAN).L L
120R CAN3 near ...
CAN3 CSC (T-2CAN if2).H H
CAN3 CSC (T-2CAN if2).L L