
HPL *ink* IPTV E2+ Radio

Instrukcja obsługi / User manual

Dwujęzyczny przewodnik po programie na Android TV. Część polska znajduje się u góry dokumentu, pełna wersja angielska poniżej.

Platforma

Android TV / Google TV

Wydanie

v3.14 19.09.2026

Źródła

M3U, Xtream, Enigma2, radio

Sterowanie

pilot TV + panel w przeglądarce

Zasada oznaczeń: **TV** oznacza czynność na telewizorze. **PANEL** oznacza czynność w przeglądarce komputera lub telefonu, na adresie pokazanym na ekranie TV.

Wydanie dokumentu: ta instrukcja opisuje HPL IPTV E2+ Radio v3.14 z 19.09.2026. Ekran aktywacji jest w języku angielskim. Język reszty programu i panelu podąża za językiem telewizora (polski albo angielski).

English user manual

1. What the program is	9. Browser panel
2. Program activation	10. Adding sources
3. First start	11. Films and series
4. Sources screen	12. Phone remote
5. Channel list	13. Remote keys
6. Player	14. Panel settings
7. Internet radio	15. Manual EPG matching
8. Guide on the TV	16. Troubleshooting

1. What the program is

HPL IPTV E2+ Radio is an Android TV app. It plays IPTV channels, Enigma2 tuners and internet radio. Playlists, EPG, films and settings are added from a computer or phone through a browser panel — the same PC that runs HPL ink Enigma2+ IPTV, or any other browser on the home network.

- M3U / M3U8 playlist from a URL.
- Xstream Codes account (server, port, user, password).
- Enigma2 tuner with OpenWebif — bouquets, stream and guide from the receiver.
- Internet radio from an M3U playlist (URL or a file from the computer).
- XMLTV guide, films and series from the playlist, favourites, history, reminders and backup.



Networks: the TV, computer and phone must be on the same local network. The panel and the activation page are not a public website — they work only at home, at the address shown on the TV.

What is new since version 2.96

New	Where	Described in
The guide while watching — a whole day of programmes for the channel you are watching, as an overlay. Picture and sound keep running underneath, and the list opens on the programme that is on right now	Player 	chapter 6
Watch history on the TV — in the long  menu in the player, and under  in the radio. An overlay as well, so nothing is interrupted	Player, Radio 	chapter 6

New	Where	Described in
Tuner disk recordings in the panel — a separate tab: folder by folder, straight from the decoder, with date, length and channel. The Play button starts the recording on the TV and the neighbouring recordings become the playlist	Recordings PANEL	chapter 9
Three poster sizes in Movies on the TV — small, medium, large. Medium is the previous layout. The change applies the next time you open the Movies screen	Settings TV	chapter 14
Series posters fetched from TMDb — a series whose provider gave no working image gets a poster found by title. Requires a TMDb key in Settings	Series PANEL	chapter 11
Many more series in the panel — names with the episode number in the middle, not only at the end, are recognised now. The same series from two playlists is one card	Series PANEL	chapter 11
Next unwatched episode straight from the poster — without opening the series window. Shown only where something is actually left	Series, Start PANEL	chapter 11
The channel list while watching reads as tiles — each channel has its own background and a thin programme progress bar under the title	Player TV	chapter 6
The panel refreshes itself after an update — an open browser tab reloads when the TV receives a new version	Panel PANEL	chapter 9
A second bar in the panel — the search field and the buttons moved below the tabs, so nothing overlaps on a narrow screen	Panel PANEL	chapter 9
The TV list shows what is playing — the channel name stands next to each TV, without switching to it	Panel PANEL	chapter 9
Tonight on the Start tab — programmes on favourite channels between 19:00 and 23:00, whatever the current time is	Start PANEL	chapter 9
Three poster sizes in the panel — in Movies and Series, shared by both tabs	Movies, Series PANEL	chapter 11
Free space on the tuner disk in Recordings — in the bar next to the folder path	Recordings PANEL	chapter 9
A bold clock in the OSD , and the <i>Previous channel</i> entry removed from the long OK menu — going back to the previous channel still works with the RED key	Player TV	chapter 6

What is new since version 2.75

New	Where	Described in
One playback status bar — a frozen picture, each repair attempt and the end of the attempts are reported in <i>one</i> place at the top of the screen. Previously the same fault produced two messages, in two places and two colours	Player 	chapter 6
A "Recordings" button on the start screen — with an Enigma2 tuner selected, the <i>Movies</i> button turns into a red <i>Recordings</i> button and goes straight to the decoder disk	Sources 	chapter 4
Free space on the tuner disk — at the bottom of the Recordings screen and next to the Enigma2 source in the panel settings	Recordings  	chapter 5
You can see what you have watched — a watched movie tile is dimmed and carries a green tick. The grid refreshes itself when you come back from the player	Movies 	chapter 11
Continue watching — a start screen button resumes the last unfinished movie exactly where it stopped	Sources 	chapter 4
Search inside recordings — the current folder first, then the rest, without walking the folder tree	Recordings 	chapter 5
A reminder can switch the channel — when the programme has already started, the reminder offers to tune to its channel	Reminders 	chapter 4
A gaps filter — shows channels <i>without a logo</i> and <i>without a guide</i> , that is, what is still left to fill in. It combines with favourites and with search	Channels / Radio 	chapter 9
Progress of an unfinished movie in the history — a bar and the time as  . Live channels and finished movies have no bar	History 	chapter 9
A readable programme progress bar — moved to the second line of the TV bar and five times longer than before	TV bar 	chapter 9
Three sizes for the full-screen programme description — a smaller font fits longer descriptions without scrolling	Settings  	chapter 14
Subtitle size on the picture — for text subtitles; the largest step hands control back to the television's own setting	Settings  	chapter 14
Panel settings in three cards , with a search box — the single long page with twelve sections is gone	Settings 	chapter 14

New	Where	Described in
Channel list density (comfortable or compact), a PLAYING marker on the channel shown on the television and hiding of empty tabs	Panel PANEL	chapter 9
A clearer OSD — the programme description left the overlay (it lives in the full-screen description), the channel name and programme title are larger, "Next" sits at the right edge and the progress bar is thicker	Player TV	chapter 6
One highlight colour — neon green on every screen, including the places where orange was still left	whole program TV	—
Calmer operation — less memory used on large lists, the panel and the phone remote no longer pile up hanging requests on the television, the radio stops reconnecting in circles to a broken station, and the guide download has an upper size limit	whole program	chapter 16

What is new since version 2.43

New	Where	Described in
Recordings from the tuner disk — folders and recordings from the Enigma2 box, with seeking as in a film	Channels TV	chapter 5
New sources screen — a clock, a description of the highlighted source under the list, a bigger remote QR code, and the <i>Last watched</i> and <i>Reminders</i> buttons	Sources TV	chapter 4
Channel list in three columns — bouquets, channels and a card with the current programme, its hours, description and what comes next	Channels TV	chapter 5
„Remind me" button on the programme card — a reminder for the next programme without opening the search	Channels TV	chapter 5
Reminder list on the TV — review and delete without a computer	Sources TV	chapter 4
Settings on the TV — the same as in the panel, operated with the remote	Sources TV	chapter 14
Text size in channel lists — three steps, for a TV standing far from the sofa	Settings TV PANEL	chapter 14
Films with posters on the TV — the VOD catalogue with covers, operated with the remote	Films TV	chapter 11
Full bouquet name above the list — long names no longer get cut off	Channels TV	chapter 5

New	Where	Described in
„ Search everywhere “ covers every source — results taken in turns, with the real number of hits	Panel PANEL	chapter 9
The panel recognises films exactly as the TV does — no more differences between the browser list and the screen	Panel PANEL	chapter 11
A Recordings folder field for the Enigma2 source — when recordings sit outside the default folder	Panel PANEL	chapter 10

What is new since version 2.17

New	Where	Described in
Everything without colour keys — a screen menu and a menu under a long press of OK . A remote with no colours and no INFO now reaches every function	Channels, Player, Radio TV	chapter 13
„ Later “ panel — three upcoming programmes, one minute before the current one ends	Player TV	chapter 6
Advance notice of a reminder — a corner bar 5, 10, 15 or 30 minutes before the programme	Player TV	chapter 14
Programme info for another channel — from the tile bar, with the up key	Player TV	chapter 6
New sources screen — two columns, remote QR code and panel address next to the list	Sources TV	chapter 4
Queued job progress shown in the panel; the update card shows version and size before downloading	Panel PANEL	chapter 14
A comma in the title no longer loses the group or the name of a VOD item	Panel PANEL	chapter 11
Gentler picture recovery after the stream freezes	Player TV	chapter 16

What is new since version 2.13

New	Where	Described in
Program update — check for and install a newer version from an address you provide, on request	Panel PANEL	chapter 14

New	Where	Described in
Remote QR code on the TV screen — your phone becomes the remote even with the computer switched off	Sources TV	chapter 12

What is new since version 1.87

New	Where	Described in
Right opens a strip of channel tiles — logo, name and the programme on air now	Player TV	chapter 6
Left opens the bouquet of the channel you are watching; left / right move between bouquets	Player TV	chapter 6
A red dot under the OSD clock when a reminder is waiting	Player TV	chapter 6
A heads-up about the next programme a few minutes before it starts	Player TV	chapter 6
The guide imports itself once a day and yields to playback	Guide TV	chapter 8
“Pick up where you left off” tiles and a list of pending reminders on the Start page	Panel PANEL	chapter 9
Hiding bouquets you never watch	Panel PANEL	chapter 14
Guide status: how many programmes, how far ahead it runs, and a clear button	Panel PANEL	chapter 14

Activation, adding sources, the phone remote and the panel tabs work exactly as in version 1.87. The OSD changed as well: the channel name is red, and the logo now sits in the middle of the field to its left.

2. Program activation

On the first start the program does not open the source list. The TV shows only the **ACTIVATION REQUIRED** screen. That screen is in English. Until a valid activation code is entered, the rest of the program stays closed.

An activation code from one television will not work on another.

Easiest path — a computer

The activation code is long. Pasting it in a computer browser is easier than typing with the TV remote.

1. Address

On the TV, read **OPEN THIS ADDRESS ON A COMPUTER**, e.g.

`http://192.168.1.50:8091/activate`.

2. Request code

Open the address in a browser and select **Copy code**.

3. Send

Send the copied code to

`hplink.soft@proton.me`.

4. Activate

Paste the code you receive into **ACTIVATION CODE** and select **Activate**.

Use this exact subject line:

`HPL IPTV E2+ Radio activation`

A successful activation shows *Activated. The program is starting on the TV*. The television then opens the normal sources screen. Later starts do not show this screen again.

The same steps on the TV

If no computer is at hand, the same fields are on the TV screen:

- **DEVICE ID** — a short identifier in the form `HPL-XXXX-XXXX-XXXX`.
- **REQUEST CODE** — the long code to send.
- **Copy code** — copies the request code (when the TV has a clipboard).
- **ACTIVATION CODE** — field for the code you receive.
- **Activate** — submits the code.
- **Close program** — closes the app.

This code is not valid for this device. means the pasted code does not match this television. Check that you sent the request code from this device and that you pasted the entire code you received, with nothing cut off.

Other versions: hplspam1-jpg.github.io/HPL-ink-Software

Network during activation: the `/activate` address works only when the TV is on the local network. If the TV shows `no network connection`, connect Wi-Fi or a cable and start the program again.

3. First start

Requirements

- A television or box with Android TV / Google TV, Android 8.0 or newer.
- The same local network for the TV, computer and phone.
- For IPTV: an M3U/M3U8 playlist or Xstream Codes details from the provider.
- For Enigma2: a receiver with OpenWebif enabled on the same network.
- For radio: an M3U playlist at a URL or a `.m3u` file from the computer (6 MB maximum).
- Optional TMDb API v3 key — only for descriptions, ratings and original titles. Posters come from the playlist.

After activation

1. The TV shows the sources screen and a large panel address, e.g. `http://192.168.1.50:8091/?token=...`.
2. Copy the **entire** address, including the `token` parameter.
3. Open it in a browser on the computer.
4. In the panel, under **Settings**, add the first source.
5. Go back to the TV and open that source to load the list.

Important: an address without `token` will not open the panel. When adding a second TV, always paste the full address from its screen.

4. Sources screen TV

This is the first screen after activation. The drawing below is a UI diagram and contains no real address or token.

The screen has **two columns**. A **clock** sits at the right end of the header. On the left: the *YOUR SOURCES* heading, the list, and **one line below it** with the address, the guide date and the result of the last test — always for the highlighted source. On the right: a card with the **remote QR code**, a card with the **panel address**, and three buttons. At the bottom: key hints, the **Films** and **Settings** buttons, and the version number.

YOUR SOURCES

M3U playlist >
 Xstream Codes >
 Enigma2 tuner >
 Internet radio >

REMOTE ON YOUR PHONE

QR code · scan it with your phone

BROWSER CONTROL PANEL

http://192.168.x.x:8091/?token=*****

Refresh

Last watched

Reminders

Films

Settings


- **Refresh** — reloads the source list.
- **Last watched** — starts the channel that played last. The shortest way from switching the TV on to a picture: no need to open a source and look for the channel.
- **Reminders** — the list of scheduled reminders: programme title, channel, day and time. Those set to switch the channel by themselves carry the note *the app will switch the channel*. **OK** asks and deletes, **BACK** returns. Reminders are **created** elsewhere — on the programme card in the channel list or in the guide search.
- **Films** — the catalogue of films and series from the playlist, with covers (chapter 11).
- **Settings** — the same as in the panel, operated with the remote (chapter 14).
- **OK** opens a source. Holding **OK** asks to delete it.
- **INFO** or **GREEN** tests the selected source; the result appears in the line below the list.

Scanning the QR code with a phone opens the remote on it — no computer needs to be running.

Until you add a source in the panel, the list is empty. Sources are not added on the TV.

5. Channel list **TV**

After opening a source the screen splits into **three columns**: bouquets on the left, channels in the middle, and the **current programme card** on the right. Above the channel list stands the **full name of the bouquet** the cursor is on — long names do not fit in the narrow column.

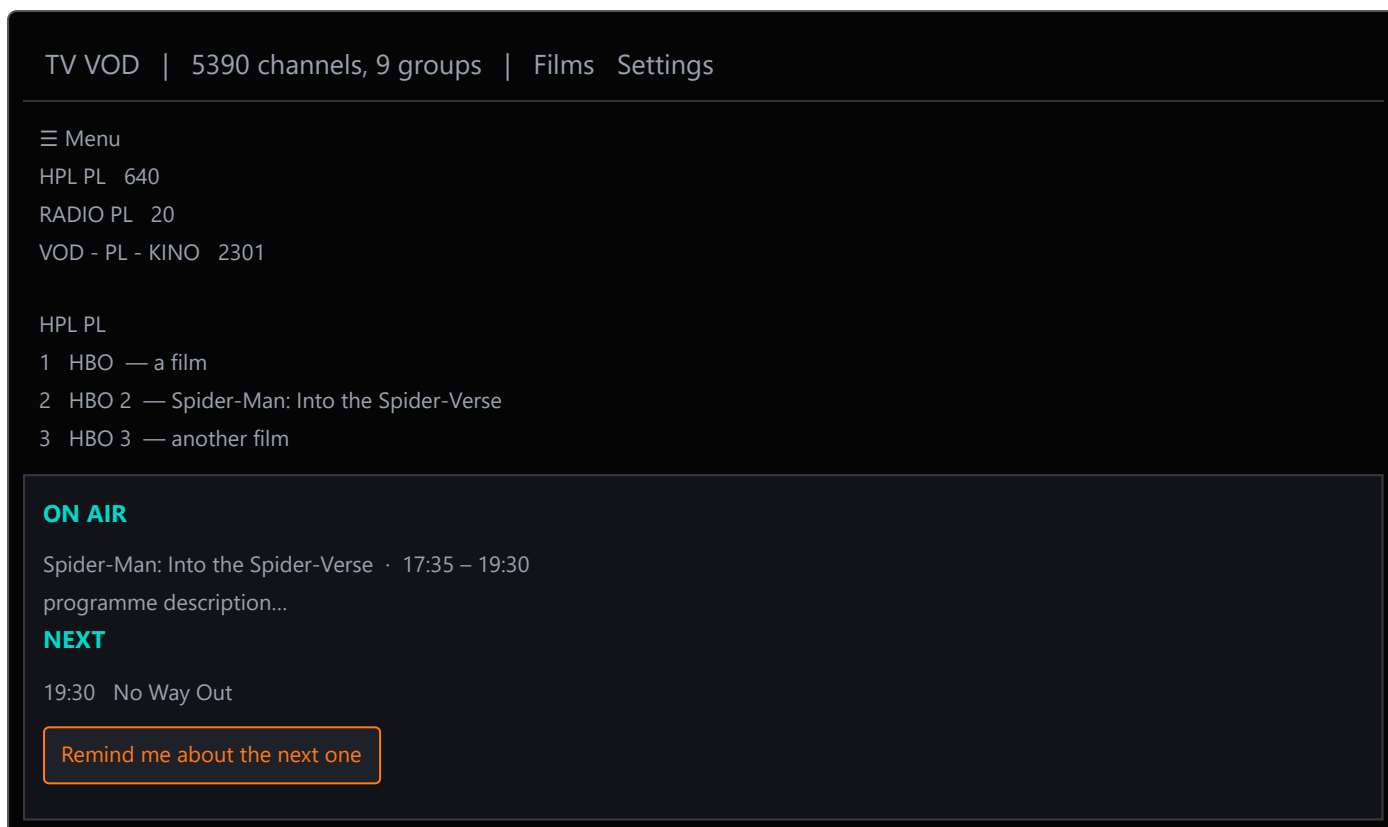

The card on the right shows the programme from the channel under the cursor: logo, title, hours, a progress bar, the description and — below — **NEXT** with the time and title of the following programme.

Under it sits the **Remind me about the next one** button. The **right** arrow from any row of the list leads straight to it, and **left** returns to the same channel you came from. sets the reminder — the label changes to **✓ Reminder set** and another removes it. On a channel without a guide the button is dimmed and says what is missing. A reminder **notifies**; it does not switch the channel by itself.

Two menus instead of colour keys. Above the bouquet list sits **Menu** — you reach it with the **up** arrow from the first bouquet, opens it. Inside are things concerning the whole screen: *EPG import*, *Refresh list*, and — for a tuner — *Tuner recordings*. Things concerning a single channel — *Guide* and *Favourites* — sit under **holding** **on the channel**, so it is clear what they apply to. The colour keys in the table below still work as shortcuts.

In the header, next to the channel count, sit the **Settings** button and — depending on the source — **Films** for an IPTV playlist or the red **Recordings** for an Enigma2 tuner.

Recordings from the tuner disk

An Enigma2 box records onto its own disk. The program can use it — **these are not films from an IPTV playlist** and have nothing to do with the Films tab.

There are two ways in: the **Recordings** button in the header of the tuner channel list, or **Menu** → **Tuner recordings**.

- The screen looks like the folder view on the box: folders first, then recordings **newest first**, each with the date, length and the channel it was recorded from.

- **OK** opens a folder or plays. **BACK** goes one folder up and puts the cursor where you left it; from the first folder it leaves the screen.
- A recording plays like a film: seeking works, and the end of the file ends playback.
- The program starts from the folder set in the **Recordings folder** field of the source (chapter 10); an empty field means the box default.

How much room is left. At the bottom right of the screen the program shows the free space on the decoder disk, for example *993.9 GB wolne z 1.8 TB*. When the box has several disks it reports the one the recordings actually live on. The same figure appears in the panel, next to the Enigma2 source, under the **Recordings folder** field. While you are watching from that same tuner the program does not ask it anything — it shows the remembered value, or nothing at all, so as not to take work away from the decoder during a film.

Empty does not mean „no recordings“. A box in standby answers with an empty list. If the screen says there are none and you know there are — wake the box up and come back.

Key	Action
OK	Play the selected channel.
Search	Searches a channel name or a programme title in the guide (7 days).
GREEN	EPG (XMLTV) import for this source. An Enigma2 tuner provides the guide itself and needs no import.
BLUE	Fetches the playlist from the provider again.
YELLOW	Adds or removes the channel from favourites. The ★ Favourites group appears in the group list.
INFO or RED	Opens the guide for the selected channel. With no EPG the TV suggests an XMLTV import.

Search on the TV has two modes: **Channel** (names) and **In the guide** (programme titles for 7 days). **OK** on the field opens the keyboard, **BACK** hides it.

When the TV stands far from the sofa, the text in this list can be enlarged — see chapter 14.

6. Player **TV**

A channel opens full screen. The OSD shows the channel logo, **the channel name in red**, the programme title, broadcast times and a progress bar. It hides after a moment and returns with **OK** or **INFO** — called up by a key it stays twice as long as the one that appears by itself after a channel change.

The bottom OSD line shows **which playlist** is playing: the word **IPTV** plus the first two words of the source name — the source “TV VOD 12.2026” gives **IPTV TV VOD**. A tuner shows just **Enigma2**. Next to it sit the colour key

hints and the item **hold OK — picture**.

Key	Action
CH+ / CH- or up / down	Next / previous channel.
OK / INFO	OSD. On a film, also pause and resume. It acts on key release , so it does not clash with the long press.
Hold OK	Player menu: audio track, subtitles, programme info, Guide , picture ratio, scheduled reminders and watch history .
Left	Channel list (zapper) — it opens on the bouquet of the channel you are watching . On a film — back 30 s.
Right	Strip of channel tiles. On a film — forward 30 s.
RED	Return to the previously watched channel.
GREEN	Audio track selection.
YELLOW	Full description of the current programme. Up / down scrolls the text.
BLUE	Subtitle selection.
BACK	Closes an overlay; if none is open, closes the player.

In the zapper list, up / down selects a row, **OK** plays it, **left and right move to the neighbouring bouquet** — the channel you are watching keeps playing — and **BACK** closes the list. A hint with this set sits under the bouquet name.

Tile strip — the right key

On a live channel **right** slides a strip of tiles in at the bottom of the screen. Each tile carries the channel logo, its name and the programme on air there right now. The picture keeps playing underneath.

- **Right / left** moves the selection. While the strip is open, left does *not* open the channel list.
- **OK** plays the selected channel, **BACK** closes the strip.
- The strip walks the **current bouquet** and stops at its ends. For other bouquets use the list under the left key.
- Opening the strip fetches nothing from the network — logos and the guide come from the TV's own memory.
- **Up shows the full programme description for the channel under the cursor** — not for the one you are watching. You are watching HBO, you move across to Canal+ and the up key tells you what is on Canal+. **YELLOW** does the same. **BACK** closes the description and returns to the strip, so several channels can be checked one after another.

The reminder dot and the next-programme notice

- A **red dot under the clock** in the OSD means at least one reminder is waiting. It shows on every channel and goes out only when the last pending reminder has fired. What exactly is waiting is listed on the panel's Start page.
- The **next-programme notice** appears in the corner of the screen a few minutes before that programme starts. How far ahead is set in the panel (chapter 14); it can also be switched off.
- **Advance notice of a reminder** — on the same corner bar, 5, 10, 15 or 30 minutes before a programme you asked to be reminded about: *In 10 min · channel name* plus the title. With a longer lead time the bar stays for twenty seconds instead of ten. The lead time is set in the panel (chapter 14); zero means no advance notice.
- **The reminder itself** arrives a minute before the programme — on the same bar, in the same shape, except that instead of „In 10 min" it says *Now*, or *Switching* when the reminder is set to change the channel for you.

The „Later" panel — three upcoming programmes

One minute before the current programme ends, a list of the **next three items in the guide** for that channel appears at the right edge for ten seconds — time and title. The first item, the one about to start, is highlighted.

- **OK** or **BACK** closes the panel at once.
- The panel can be switched off for good in the panel settings (chapter 14).
- Nothing is fetched from the network — the data comes from the guide stored on the TV.
- A dropped stream is retried several times. If the same folder has a backup link, the program switches to it and shows a failover notice. When there is no replacement it says so: *no backup link for this channel*.
- Film position is stored. The next opening resumes from that point.
- If the picture freezes or the channel does not respond after the retries, a message with the attempt count is shown.
- A minute of healthy picture clears the memory of failed links — after a short network overload the program has somewhere to switch again.

Player menu — hold OK

Holding **OK** opens the **Player menu**. It gathers everything that used to need a colour key:

- **Audio track** — the same list as under **GREEN**.
- **Subtitles** — as under **BLUE**; the *Off* entry always comes first.
- **Programme info** — as under **YELLOW**.
- **Guide** — *a whole day of programmes for the channel you are watching*, the same schedule as the guide opened from the channel list. It opens as an overlay: picture and sound keep running underneath, and the list starts on the programme that is on right now, so there is no scrolling from the morning. Up and down scroll it, **BACK** returns to watching. A channel with no guide data shows a message instead of an empty list.
- **Picture ratio** — described below.
- **Scheduled reminders** — the list of what is waiting, with a film as well.
- **Watch history** — the channels and stations you opened recently, with the time. **OK** on an entry tunes to it *in the same screen*, without stopping the picture. An entry whose source no longer exists shows a message and stays on the list — it is a record of what happened, not a task to perform.

With a film the programme info and the guide drop out: a film has no schedule.

The "Previous channel" entry was removed from this menu in version 3.13 as redundant. Going back to the previously watched channel still works with the **RED** key and from the browser panel.

Picture ratio

The last entry of the **Player menu** (hold **OK**). It works on a live channel and on a film. The active mode is marked.

Mode	What it does
Stretch (as before)	The picture fills the whole screen. The default, and the behaviour known from earlier versions.
Fit — whole picture	The whole frame is visible, with bars at the top and bottom or at the sides.
Zoom — no bars	The screen is filled without distortion; the edges of the frame go past the screen.

The choice is stored, shared by all channels, and survives a channel change and a restart of the program.

16:9 material looks the same in every mode — there is nothing to fit. The difference shows on cinema films and on old 4:3 channels.

When the picture stops or the network drops

- **The picture froze while the sound keeps playing.** The program counts the frames actually drawn on the screen. When none arrives for a dozen or so seconds it rebuilds the connection on its own. Such a freeze used to pass unnoticed, because the time counter kept moving along with the sound.
- **One bar says it all**, at the top of the screen, framed in red. Its upper line changes: *picture stopped* → *attempt 2 of 3* → *after 3 attempts*. Below it stands a sentence saying what the program is doing right now: *Restoring the picture*, *Trying another link* or *The picture is not coming back*. The bar disappears by itself after ten seconds — it stays only when the program cannot move on without outside help: no network, and no backup link.
- **The network dropped.** After a lost Wi-Fi connection or a router restart the same bar says *no network* / *Waiting for the network*. The program does not burn through its retries and does not declare the channel dead. When the network returns it shows *Network is back · resuming playback* and picks the picture up again — without leaving the channel. Radio behaves the same way, and the browser panel comes back up after the TV changes address.

7. Internet radio TV

History under the **INFO** key. In the radio, **INFO** opens the same history as the long **OK** menu in the video player — the radio screen has no such menu. Pressing **INFO** again closes the overlay, and so does **BACK**. Choosing a TV channel from the list closes the radio and switches to the picture.

A radio source opens a station list, not a TV channel list.

- **OK** — play the selected station.
- **Hold OK** — add or remove the station from favourites.
- **≡ Menu** above the group list (up arrow from the first group) — *Refresh list*.
- Shortcuts for a remote with colours: **BLUE** — refresh the playlist, **YELLOW** — favourites.

In the radio player: **OK** pause, up / down change station, left / right volume, **BACK** return to the list. A clock is shown, and the bitrate when the station provides it.

Radio reacts to the network like the channel player: after a lost connection it waits with *No network · waiting for a connection* and resumes the station by itself once the network is back.

8. Guide on the TV TV

INFO on the channel list opens the full schedule for one channel. Programmes are grouped by day. **OK** on an item can play the channel now or set a reminder. A reminder can also switch the TV at the start time.

The guide refreshes itself once a day. Never while you are watching — the job waits in a queue and starts when nobody is watching. If an import is already running and you start a channel, it stops at the nearest step and returns to the queue. A television switched off for a few days catches up at its next start.


A manual XMLTV import is started with **GREEN** on the channel list or with the button in the panel. Download, name matching and storage run on the TV in the background and may take a few minutes. An Enigma2 tuner needs no import — the guide comes from OpenWebif. Radio does not use the TV guide.

An interrupted import no longer wipes the guide New programmes go to a holding area first, and the old guide lives until the whole file has been read correctly. The swap happens in one step. A dropped network or a damaged XMLTV file therefore leaves the guide as it was — not empty or half filled. While importing, the program also clears programmes older than half a day and further away than eight days.

A channel the automatic matching cannot recognise by name can be assigned to an XMLTV entry by hand, from the panel — see chapter 15.

9. Browser panel PANEL

The panel is the page opened from the address on the TV screen. Its language follows the app language on the television, not the browser language.

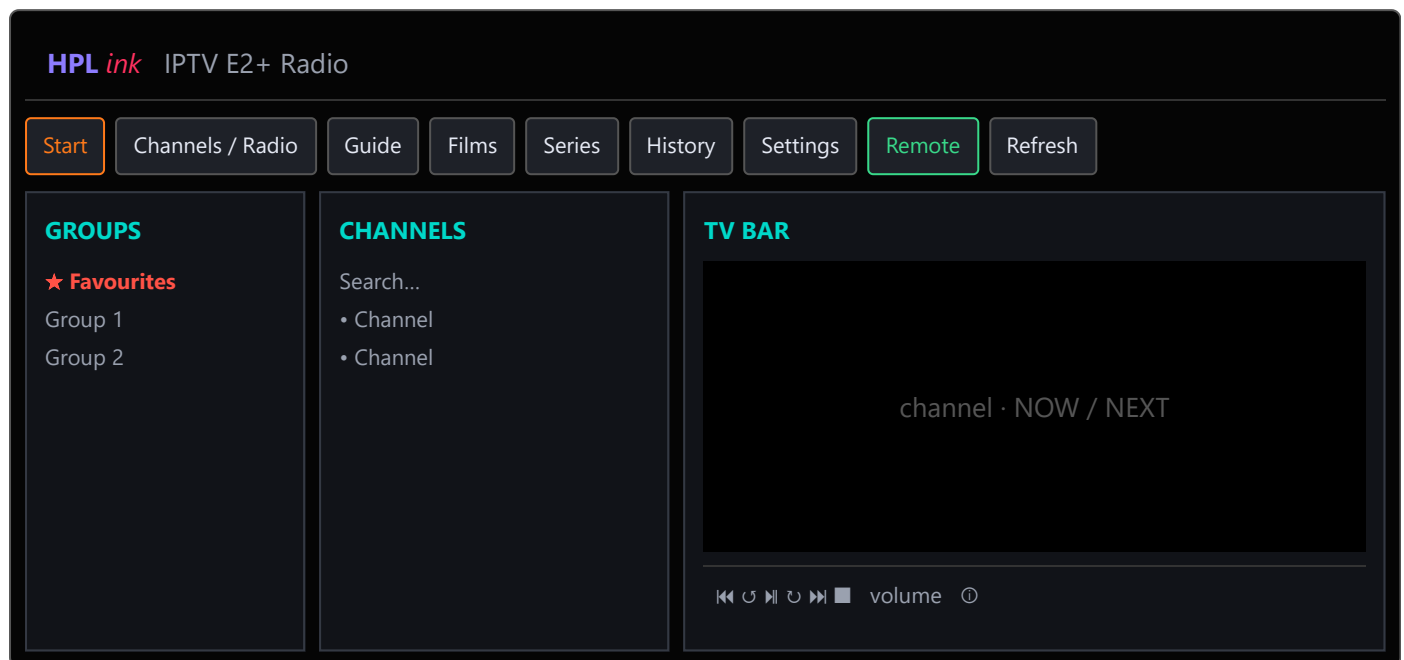

Tabs

- **Start** — at the top, **Pick up where you left off** tiles: the last channel and the last radio station, one click plays them on the TV. Below them a list of **pending reminders** with a cross to delete one — shown only when something is waiting, which is exactly when the red dot glows in the OSD. Then: now on favourites, continue watching, series in progress, to watch and recently added.
- **Channels / Radio** — groups, list, favourites filter and an all-sources switch.
- **Guide** — EPG grid, timeline shift, programme search over 7 days.
- **Films** and **Series** — poster wall from the playlist.
- **Recordings** — the contents of the Enigma2 tuner disk, folder by folder, straight from the decoder. Each recording shows the date, the length and the channel it was saved from; folders go deeper and **▲ up** goes back. The **Play** button starts the recording on the TV, and the recordings from the same folder become the playlist, so channel skipping in the player walks the neighbouring recordings. The bar next to the path shows the **free space on the disk**. The tab appears with an Enigma2 source.
- **History** — recently watched items, with a clear action.
- **Settings** — sources, TV sets, EPG, backup, TMDb, QR remote.

TV bar

The top bar shows the selected TV, the current channel, the programme and a recording mark when the Enigma2 tuner is recording. Buttons: previous / next channel, back and forward 30 s (films), pause, stop, volume, mute and ⓘ — show the panel on the TV. The seek slider appears for films only.

The **Source** list switches the playlist. **Refresh** fetches the list from the TV into the browser again. **Search everywhere** (**Ctrl+K**) covers channels, films and series from **every fetched source at once**. Results are taken **in turns**, a few from each source, so no single list fills the whole window. The counter shows how many items were found, and the group heading says „showing 40 of 102" when the rest did not fit. The microphone button starts voice control in browsers that support it.

Several TV sets: one panel can control several televisions. Switching TV also changes lists and the guide, because each TV has its own sources.

Starting the program from the computer

The panel answers only while the program **is running on the television**. The panel server lives inside the program, so with the application closed there is nobody to take the command — which is why starting it from the computer uses the **television's own IP control**, not our panel.

Step 1 — on the television **TV**

1. Press **HOME** and open **Settings**.
2. Find **BRAVIA Settings** → **IP control**. On some releases the path reads **Network** → **Home network setup** → **IP control**.
3. Turn **remote control** on.
4. Set **Authentication** to **Pre-Shared Key** and enter your own key, for example **hp1**. This is a password for controlling the television — do not reuse a password you use elsewhere.

Step 2 — in the PC program

1. Enter the same key in the **TV pre-shared key** field of the TV profile. The key is encrypted for the current Windows account, just like the panel token.
2. Press **Fetch from TV** — the program downloads the list of applications installed on the television.
3. Pick **HPL IPTV E2+ Radio** from the list and save the profile. You choose once; the application id is not hard-coded, because one television may hold several variants of the program.
4. From now on the **Start the program on the television** button opens the application without reaching for the remote.

The television must be on. IP control does not wake it from standby — with the set off the button reports that the television is in standby. The computer and the television must be on the same home network.

After the television is disconnected from power the IP control setting may return to its default. If the button stops working, check **Step 1** first — the pre-shared key sometimes has to be entered again.

Sending a new version from the computer

The **Send a new version to the TV** button in the PC program (from version 1.10) installs a chosen **.apk** file straight from the computer's disk, with no server and no cable. The computer serves the file over the home network for a moment and hands the TV its address — the television does the rest itself.

- The application **must be open** on the TV; it is the one that accepts the command. If it is closed, use **Start the program on the TV** first.
- Before sending, the program shows which version is on the TV and which one will be installed.
- The TV verifies the checksum and the package **signature**, and you still confirm the installation with the remote — exactly as with an update from an address.
- On first use Windows may ask about the firewall: allow it for the **private network**.

10. Adding sources PANEL

In **Settings** → **Sources** → **Add a source** choose the type and fill in the fields. After adding, open the source on the TV to load the list.

M3U playlist

1. Type: **M3U playlist**.
2. Name, e.g. "Home list".
3. Playlist address, e.g. `http://server/list.m3u`.
4. Optional EPG (XMLTV) address.
5. **Add**.

Xtream Codes

1. Type: **Xtream Codes**.
2. Server address, port (usually 80), user and password from the provider.
3. Optional EPG address.
4. **Add**.

Enigma2 tuner

1. Host

Receiver address on the local network.

2. Port

OpenWebif, usually 80.
User and password if authentication is on.

3. Stream

Stream port, usually 8001.

4. Recordings

Recordings folder — optional, see below.

5. Add

Open the source on the TV — bouquets will load.

The **Recordings folder** is a path **on the tuner**, not a folder on the computer — for example `/media/hdd/movie/`. An empty field means the folder the box considers current. Enter your own when recordings and films sit elsewhere, for instance on a second disk. The program reads the list from it when the Recordings screen is opened.

From the panel, an Enigma2 programme can be scheduled as a recording on the tuner. The TV asks for confirmation, and the receiver must accept the timer.

Internet radio

- **URL address** — an M3U playlist on the network.
- **.m3u file from the computer** — the file is checked and stored in the app on the TV. Limit 6 MB. The file must contain valid `#EXTINF` entries.

Privacy: adding or browsing a list does not open every stream. A provider connection is made when an item is played or when a playlist / EPG / logo is fetched.

11. Films and series PANEL

The **Films** and **Series** tabs show items that the playlist marks as VOD (paths or metadata such as `/movie/` and `/series/`). Posters come from the playlist. A TMDb key in Settings adds the description, rating and original title only after an item is opened.

- Sorting: newest, oldest, playlist order, most episodes (series).
- Filters: with poster only, to watch.
- The **+** badge on a poster marks an item to watch.
- In series: folders → series → season → episode. **Next unwatched** resumes from the first unwatched episode.
- **Play on the TV** starts the item on the selected television.

The VOD filter in Settings hides these items on the ordinary channel list so they do not mix with live TV.

Only IPTV lists are taken into account — M3U and Xstream playlists. An Enigma2 tuner has no VOD catalogue, and name-based recognition could take ordinary channels such as „Polsat Seriale HD" for films. That is why the Films button does not appear for a tuner source; its place is taken by Recordings. The panel and the TV recognise films by **the same rule**, so the list in the browser matches what is on the screen.

Films on the TV TV

The same catalogue can be opened without a computer: the **Films** button sits on the sources screen and in the channel list header. The screen shows a **grid of posters**, the folder selector above it, and the full title of the highlighted item below — on the tile it is trimmed to two lines.

- The list comes from the **TV's own memory**: this screen does not contact the provider. When the memory is empty it says so, instead of downloading tens of megabytes unasked.
- `OK` plays, `BACK` returns.
- **What you have watched is visible at a glance**: the tile of a film you have already seen is **dimmed** and carries a **green tick** in the corner. The grid refreshes itself when you come back from the player, so the mark appears straight away. A film *stopped halfway* does not count as watched — that one is waiting to be finished, and the **Continue watching** button on the sources screen resumes it.

12. Phone remote PANEL

The QR code sits in two places: in the **panel settings** and — since version 2.16 — **on the sources screen of the television**, next to the panel address, labelled “REMOTE ON YOUR PHONE”. The second one matters more than it sounds: with the computer switched off the phone is the only remote left, and there is nowhere else to read the address from.

Scan the code with a phone on the same network — a separate, narrow remote opens in the phone browser.

- TV and source selection.
- Current channel, EPG and a film seek slider.
- Previous / next, pause, ± 30 s, stop, mute, volume, panel on the TV.
- Tabs: favourites, folders, recent, search.

The **Remote** button in the panel header opens the same window on the computer.

iPhone: when Safari refuses to open the page Safari on iOS 26 does not open `http://` addresses that arrive **from another app** — from the camera after scanning a code, for example — and shows “*the request was for an HTTP URL, only HTTPS URLs are allowed*”. Press and hold the camera banner, choose **Copy Link** and paste it into Safari's address bar; a pasted address opens normally. Another browser works straight away. The code itself is correct; the program runs over plain HTTP on your home network, because HTTPS would need a certificate installed by hand on every phone.

13. Remote keys — summary

A remote without colour keys. New televisions often come with two remotes, and the smaller one used day to day frequently has neither colour buttons nor an `INFO` key. Since version 2.75 **every** function is reachable with ordinary keys: the arrows, `OK` and a long press of `OK`. The colour keys still work — they are shortcuts, not the only way in.

Screen	Key	Action
Sources	<code>OK</code>	Open the source. Hold to delete.
Sources	<code>INFO</code> / <code>GREEN</code>	Connection test; the result appears in the line below the list.
Sources	Right → <code>OK</code>	Column buttons: <i>Refresh</i> , <i>Last watched</i> , <i>Reminders</i> .
Sources	Down → <code>OK</code>	Bottom bar: <i>Films</i> and <i>Settings</i> .
Channels	<code>OK</code>	Play.
Channels	Right	The Remind me about the next one button on the programme card. Left returns to the same channel.

Screen	Key	Action
Channels	Hold OK	Channel menu: guide for this channel, add or remove from favourites.
Channels	Up above the bouquets → OK	≡ Screen menu: import EPG, refresh the list, and for a tuner also recordings.
Channels — Enigma2 tuner	The Recordings button	Folders and recordings from the box disk. OK — folder or play, BACK — one folder up.
Channels	GREEN / BLUE / YELLOW	Shortcuts: import EPG / refresh list / favourites.
Channels	INFO / RED	Shortcut to the channel guide.
Player	Up / down / CH±	Change channel.
Player	OK	Information bar (OSD). With a film — pause.
Player	Hold OK	Player menu: audio track, subtitles, programme info, guide, picture ratio, reminders, watch history.
Player	Left	Channel list of the current bouquet, or –30 s in a film.
Player	Right	Tile bar, or +30 s in a film.
Player	RED / GREEN / YELLOW / BLUE	Shortcuts: previous channel / audio / programme info / subtitles.
Channel list in the player	Left / right	Neighbouring bouquet.
Tile bar	Left / right, OK , BACK	Choose a channel, play it, close the bar.
Tile bar	Up new	Programme info for the channel under the cursor — not the one being watched. YELLOW does the same.
Programme info	Up / down, BACK	Scroll the text, close.
Radio	OK	Listen.
Radio — station list	Hold OK	Add or remove the station from favourites.
Radio — station list	Up above the groups → OK	≡ Screen menu: refresh the list.
Radio — playback	Up / down, left / right	Station, volume.
Browser panel	Ctrl+K	Search everywhere.

14. Settings

PANEL

TV

The same settings are on the television. The **Settings** button sits on the sources screen and in the channel list header, and the screen is operated with the remote. No computer is needed — the panel offers the same, only more comfortably for longer entries such as addresses or the TMDb key.

- 1. Text size in channel lists.** Three steps: *normal*, *large*, *very large*. Applies to the list opened while watching with the left key and to the full channel screen. Both the channel name and the programme name grow. **The larger the text, the fewer entries fit on screen** — hence the names of the steps. The change takes effect the next time the list is drawn; just close and open it again, no restart needed. The default keeps the previous size.
- 2. Remote on your phone.** QR code and remote page address. The phone must be on the same network.
- 3. TV sets.** Add another TV by pasting the full address from its screen, including `token`. The television serving this page is always available as “This TV”.
- 4. Media keys.** Pause and seek keys on the keyboard control the TV even when the browser is minimised. They take those keys from other programs — turn the option off if that gets in the way. A click on the page may be required if the browser blocked audio.
- 5. TMDb key.** API v3 key for descriptions and ratings. Posters work without a key.
- 6. Sources.** List, add and delete. Deleting a source also clears its list and EPG on the TV.
- 7. Backup.** Downloads a JSON file with sources, local radio playlists, favourites, history, VOD positions, manual EPG matches and program settings. The file also contains the login details stored with your sources — keep it safe. Restore replaces the current data. File limit: 10 MB.
- 8. Program update.** An address field and a **Check** button. The address should point at a small `update.json` file holding the latest version number, the package address, a checksum and a description of the changes. The program contacts that address **only when you press the button** — never on its own. The result of the check shows **the version that is waiting next to the one installed, the package size and the list of changes** — before anything is downloaded. When a newer version exists, **Download and install** fetches the package, verifies the checksum and the **signature** (a package signed with a different key is rejected), and hands it to the Android installer, which asks for confirmation **on the TV screen**. A silent install is not possible; the television must also allow the program to install packages once.
- 9. Bouquets.** The bouquets of the selected source with a channel count each. An unticked bouquet disappears from the channel list on the TV, from bouquet switching while watching and from the rail in the Channels tab. Its channels **stay** in search, in favourites and in Films — the point is shorter lists, not hiding part of your own playlist.
- 10. TV guide. Fetch EPG for the selected source** starts an XMLTV import on the TV. Below it sits the **Manual EPG matching** card — described in chapter 15.

- 11. Channel and radio station list.** Fetch the playlist from the provider again (same as the blue remote key). Below the divider: hiding VOD items on the channel list, the **next-programme notice** — how many minutes ahead it should appear, or "off", the **„Later" panel** — whether to show three upcoming programmes a minute before the current one ends (chapter 6), and the **advance notice of a reminder** — 5, 10, 15 or 30 minutes before a programme you asked to be reminded about; "off" leaves only the reminder itself, a minute before.
- 12. Guide stored on the TV.** How many programmes for how many channels sit in the database, how much space they take and **how far ahead the guide runs** — that is, when it needs refreshing. The **Clear the guide** button removes programmes and automatic matches; **manual matches are kept** and come back into play at the next import.
- 13. Storage.** The TV (channel logos and film posters, each with its own limit) and this browser (a copy of the lists so the panel opens instantly) are listed separately. Clearing browser storage deletes nothing on the TV.

15. Manual EPG matching PANEL

The program matches a channel to the guide by name. On most channels that is enough, but a handful always remain whose provider name has nothing in common with the name in the XMLTV file — such a channel shows *no EPG data* even after a correct import. From this version you can point it at the right entry by hand.

The **Manual EPG matching** card is in **Settings** → **TV guide**, below the import button. It applies to the source selected in the panel header; radio does not use it.

HPL ink Settings — Manual EPG matching

Matched 1312 of 1397 · manual 3

CHANNEL FROM THE SOURCE	CHANNEL IN XMLTV
Type part of the channel name • TVP HD → no match • TVN HD → TVN (96%) Quality 96% · automatic · TVN	Type the EPG channel name • TVP HD [tvp.hd.pl] • TVP 1 HD [tvp1.hd.pl] Save mapping Restore automatic

1. Find the channel

Type part of the name in the left field. The list shows what the channel is matched to, or *no match*.

2. Check the quality

Below the list is a percentage and the matching method: *exact*, *automatic* or *manual*.

3. Point at an entry

Find the right XMLTV channel in the right field and select **Save mapping**.

4. Fetch the EPG

Run the import again — only then do that channel's programmes reach the database.

- The card header gives the balance: how many channels of the source have a guide and how many were matched by hand.
- The right list is the catalogue of channels from the imported XMLTV file, with the identifier in square brackets. The search box above it is pre-filled with the name of the selected channel.
- **Restore automatic** removes the manual decision for the selected channel and hands it back to the automatic matching.
- Manual assignments win over the automatic ones and **survive later EPG imports**. Only deleting the source clears them.
- They also go into the backup and come back when it is restored.

When the guide appears at once and when only after an import: HD and SD channels of the same broadcaster share one set of programmes. If the XMLTV entry you pick is already used by another channel, the guide shows immediately. If not, the programmes arrive with the next import.

16. Troubleshooting

The ACTIVATION REQUIRED screen returns or the code is rejected

- Send the request code copied from **this** television.
- Use the exact subject `HPL IPTV E2+ Radio activation`.
- Paste the entire code you received, with no trailing space and nothing cut off.
- A code from another television will not work on this one.

The panel does not open

1. Check that the app is running on the TV — the panel works only then.
2. The computer and the TV must be on the same network. Turn off Wi-Fi client isolation on the router.
3. Paste the full address from the screen, including `token`.
4. If the TV shows a red message that the panel is not working, start the app again.

The source is there, but the list is empty

Open the source on the TV or use **Fetch the selected playlist again** in the panel. The panel keeps a copy of the list in the browser; adding a source does not load the channels by itself.

No EPG

- IPTV / Xstream: enter an XMLTV address on the source and run the import (green on the TV or the button in Settings).
- Enigma2: the guide should come from the receiver. Check OpenWebif and that a bouquet is loaded.
- Radio has no TV guide.

One channel has no guide while the rest do

Usually it is the name: different at the provider than in the XMLTV file, so the automatic matching has nothing to recognise the channel by. Open **Settings** → **TV guide** → **Manual EPG matching**, point at the right entry and run the import once more — chapter 15.

The picture freezes or the channel does not respond

The program retries the stream on its own. If the folder has a backup link, it switches to it. Check the provider account, the number of concurrent connections, and whether the same address plays in VLC on a computer.

The message *No picture detected. Restoring the picture* means the picture stopped while the sound kept playing and the program is rebuilding the connection — nothing to do. The message *No network · waiting for a connection* means the problem is with Wi-Fi or the router; the program returns to the picture by itself once the network is back.

The picture is stretched or has bars

Hold in the player and change the mode: **Fit** shows the whole frame with bars, **Zoom** fills the screen at the cost of the edges, **Stretch** is the default. On 16:9 material all three modes give the same picture.

A film does not start, but a TV channel does

Check that the account includes VOD and that the playlist has separate film paths. The VOD filter in Settings does not block the Films / Series tabs in the panel, nor the Films screen on the TV — it only cleans the channel list.

Film descriptions are missing

Posters do not need TMDb. Descriptions and ratings need an API v3 key in Settings and internet access in the browser.

The phone remote does not control the TV

The phone must be on the same network. Scan the code again from the panel that is currently open. Check that the remote has the correct television selected.