EUROCOPTER
AN EADS COMPANY

# AS 350
# B3



# Chapter 05
# MASTER SERVICING MANUAL (MSM)

Issue date : 2010.09.29
Revision 003 : 2012.02.20

EUROCOPTER
Direction Technique Support
Aéroport International Marseille Provence 13725 Marignane Cedex FRANCE
Contact: *Directive.Technical-Support@eurocopter.com*

**IMPORTANT NOTE**

The practical value of this manual depends entirely upon it being updated correctly by the operator.

The successive revisions should be recorded on the relevant page of the manual.

# HIGHLIGHTS OF THE REVISION

## 1 GENERAL

- Check that the content of the sections is in accordance with the "List Of Effective Document Unit" (LOEDU).
- Return the acknowledgement card.

## 2 OUTLINE OF THE REVISION

The revision is codified as follows:

- Revision 003: 2012.02.20.

## 3 DETAILED DESCRIPTION

The title of the manual at the top right hand side of the revised pages is modified.

**D.U. 05-10-00 updated**

ATA 65-20 TAIL GEARBOX

- 65/20/00/000/000/127, TGB, 2400 FH//288 M: Task deleted.
- 65/20/00/000/000/330, TGB, 3000 FH//288 M: MP/N added.

**End of the Document Unit**

# RECORD OF REVISIONS

| Rev. No. | Issue Date | Inserted Date | Inserted Name |
|---|---|---|---|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Rev. No. | Issue Date | Inserted Date | Inserted Name |
|---|---|---|---|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

# LOEDU

## 1 Update

Refer to the **"Update of the MSM" Document Unit**

## 2 "Type" Column Code

**N**-New, to be inserted
**R**-Revised, to be replaced
**D**-Destroyed, to be deleted
- (No code) Unchanged with respect to the previous issue

| D.U. | Type | Date | D.U. | Type | Date |
|---|---|---|---|---|---|
| TITLE | N | 2012.02.20 | 05-20-00 | - | 2010.09.29 |
| HIGHLIGHTS OF THE REVISION | N | 2012.02.20 | 05-20-01 | - | 2011.10.20 |
| LOEDU | N | 2012.02.20 | 05-21-00 | - | 2011.10.20 |
| TABLE OF CONTENTS | N | 2012.02.20 | 05-21-01 | - | 2011.10.20 |
| TECHNICAL PUBLICATIONS | - | 2010.09.29 | 05-21-02 | - | 2011.10.20 |
| GLOSSARY | - | 2011.05.26 | 05-22-00 | - | 2011.10.20 |
| STRUCTURE OF THE MSM | - | 2011.10.20 | 05-22-01 | - | 2011.10.20 |
| UPDATE OF THE MSM | - | 2010.09.29 | 05-22-02 | - | 2011.10.20 |
| BREAKDOWN OF THE MSM | - | 2011.10.20 | 05-23-00 | - | 2011.10.20 |
| USE OF THE MSM | - | 2011.05.26 | 05-23-01 | - | 2011.10.20 |
| OPTIONAL EQUIPMENT | - | 2010.09.29 | 05-23-02 | - | 2011.10.20 |
| SB INCORPORATED | - | 2011.05.26 | 05-24-02 | - | 2010.09.29 |
| 05-10-00 | R | 2012.02.20 | 05-25-00 | - | 2011.10.20 |
| 05-11-00 | - | 2011.10.20 | 05-26-00 | - | 2011.10.20 |
| 05-12-00 | - | 2011.10.20 | | | |

**End of the Document Unit**

# TABLE OF CONTENTS

**TITLE**

**HIGHLIGHTS OF THE REVISION**

1 GENERAL

2 OUTLINE OF THE REVISION

3 DETAILED DESCRIPTION

**TECHNICAL PUBLICATIONS**

1 THE DOCUMENTATION

2 OPERATING DOCUMENTS

3 MAINTENANCE DOCUMENTS

4 IDENTIFICATION DOCUMENTS

5 SPECIAL DOCUMENTS

6 VENDOR'S DOCUMENTS

**GLOSSARY**

**STRUCTURE OF THE MSM**

1 GENERAL STRUCTURE OF THE MSM

2 BREAKDOWN OF THE MSM

2.1 Identification of the DUs

2.2 Task codes

2.3 List Of Effective Document Units (LOEDU)

3 CLASSIFICATION OF INFORMATION

**UPDATE OF THE MSM**

1 REVISION OF THE MSM

2 UPDATE OF THE MSM

2.1 Update procedure

2.2 Identification of the modifications

3 EFFECTIVITY

**BREAKDOWN OF THE MSM**

1 PURPOSE OF THE MSM

2 CHANGES TO THE MSM

3 HELICOPTER MAINTENANCE

4 TYPES OF MAINTENANCE

5 DEFINITION OF THE MAINTENANCE MODES

5.1 Hard time maintenance

**TITLE**

5.2 On-Condition maintenance

5.3 Condition monitoring maintenance

6 EFFECTIVITY - RESPONSIBILITY

7 MAINTENANCE INTERVAL

7.1 Daily checks

7.1.1 Cold weather and very cold weather routine check

7.1.2 Check of Optional Installations

7.2 Supplementary inspection (S)

7.3 Additional inspection (F)

7.4 Basic inspection (T or A)

7.5 Major inspection (C)

**USE OF THE MSM**

1 ADAPTATION OF THE MSM

2 INFORMATION FEEDBACK FROM THE OPERATOR TO THE MANUFACTURER

3 IN-SERVICE MONITORING

3.1 Airframe monitoring

3.2 Monitoring of components

3.3 Specific case of elastomer hoses

4 COMPONENT PART NUMBERS

4.1 Definition

4.2 Part Number followed by a suffix

4.3 Applicability of the limits

4.4 Changes to Part Numbers

5 LIMITS

5.1 Flight Hours

5.2 Calendar time

5.2.1 Airframe initial aging date

5.2.2 Initial aging date for components

5.3 Cycles

5.4 Periodic and Perform Once limits

5.5 Performance interval

5.6 Specific and severe atmospheric operating conditions

5.7 Maximum limit value

5.7.1 Definition of the margin

**TITLE**

5.7.2 Application of the margin

5.7.3 Specification of the margin

5.7.4 Example of how the margin is used

6 TRANSFER OF A COMPONENT FROM ONE HELICOPTER VERSION TO ANOTHER HELICOPTER VERSION

6.1 Ecureuil family helicopter versions concerned by the transfer

6.2 Components NOT subject to in-service monitoring (condition monitoring)

6.3 Components subject to in-service monitoring

6.3.1 Components subject to a service life limit (SLL)

6.3.2 Components subject to a time between overhauls (TBO), an operating time limit (OTL) or on-condition monitoring (OC)

6.3.3 Application rules

7 RECORDING

8 MAINTENANCE CODES (MC)

9 CONTENT OF A TASK

**OPTIONAL EQUIPMENT**

1 COMPATIBILITY / INCOMPATIBILITY

2 TABLE OF APPROVED OPTIONAL INSTALLATIONS

**SB INCORPORATED**

**End of the Document Unit**

# TECHNICAL PUBLICATIONS

## 1 THE DOCUMENTATION

The technical documentation intended for operators is mainly broken down into five groups:

## 2 OPERATING DOCUMENTS

- **The Master Servicing Manual (MSM)** is intended particularly for those responsible for helicopter maintenance. It specifies the maintenance limits.
- **The Airworthiness Limitations Section (ALS)** is intended for those responsible for helicopter maintenance. It defines the mandatory limits and checks.
- **The FLight Manual (FLM)** is intended for flight crews. It specifies the limits, standard and emergency procedures and helicopter performance data.
- **The Master Minimum Equipment List (MMEL)** specifies the minimum list of equipment necessary for flight.

## 3 MAINTENANCE DOCUMENTS

- **The Aircraft Maintenance Manual (AMM)** specifies the maintenance procedures necessary to service the helicopter.
- **The System Description Section (SDS)** comprises part 1 of the AMM and explains how the systems operate.
- **The Structural Repair Manual (SRM)** is used to identify and protect materials, and to repair or replace structural components, mechanical components and blades.
- **The standard practices manual (MTC)** combines all the general know-how and knowledge necessary regarding implementation, maintenance, checks, standard repairs and technical and safety instructions and storage conditions.
- **The Wiring Diagram Manual (WDM)** combines all the helicopter wiring diagrams.
- **The Special Index Modification (SIM)** lists the applicable modifications and their corresponding SBs where applicable.

## 4 IDENTIFICATION DOCUMENTS

- **The Illustrated Parts Catalog (IPC)** contains all the spare parts necessary to ensure continued serviceability of the helicopter.

  **The tools catalog (ICO)** contains all the tools necessary to ensure continued serviceability of the helicopter.

## 5 SPECIAL DOCUMENTS

- **Service Bulletins (SB)**, **Alert Service Bulletins (ASB)** and **Emergency Alert Service Bulletins (EASB)** are intended to inform the operators of instructions introduced following new events (incidents, modifications, etc.). These documents supplement the helicopter documents and are incorporated in the latter by updates if necessary.
- **Information Notices (IN)** and **Safety Information Notices (SIN)** are documents issued for information. Their purpose is to remind operators of existing maintenance procedures, or to inform them of changes validated by Eurocopter and undergoing introduction.

## 6 VENDOR'S DOCUMENTS

- This documentation comprises the following vendor's manuals: **Vendor's Service Bulletins (SBV)**, **Engine Maintenance Manual (EMM)** and **Component Maintenance Manual (CMM)**.

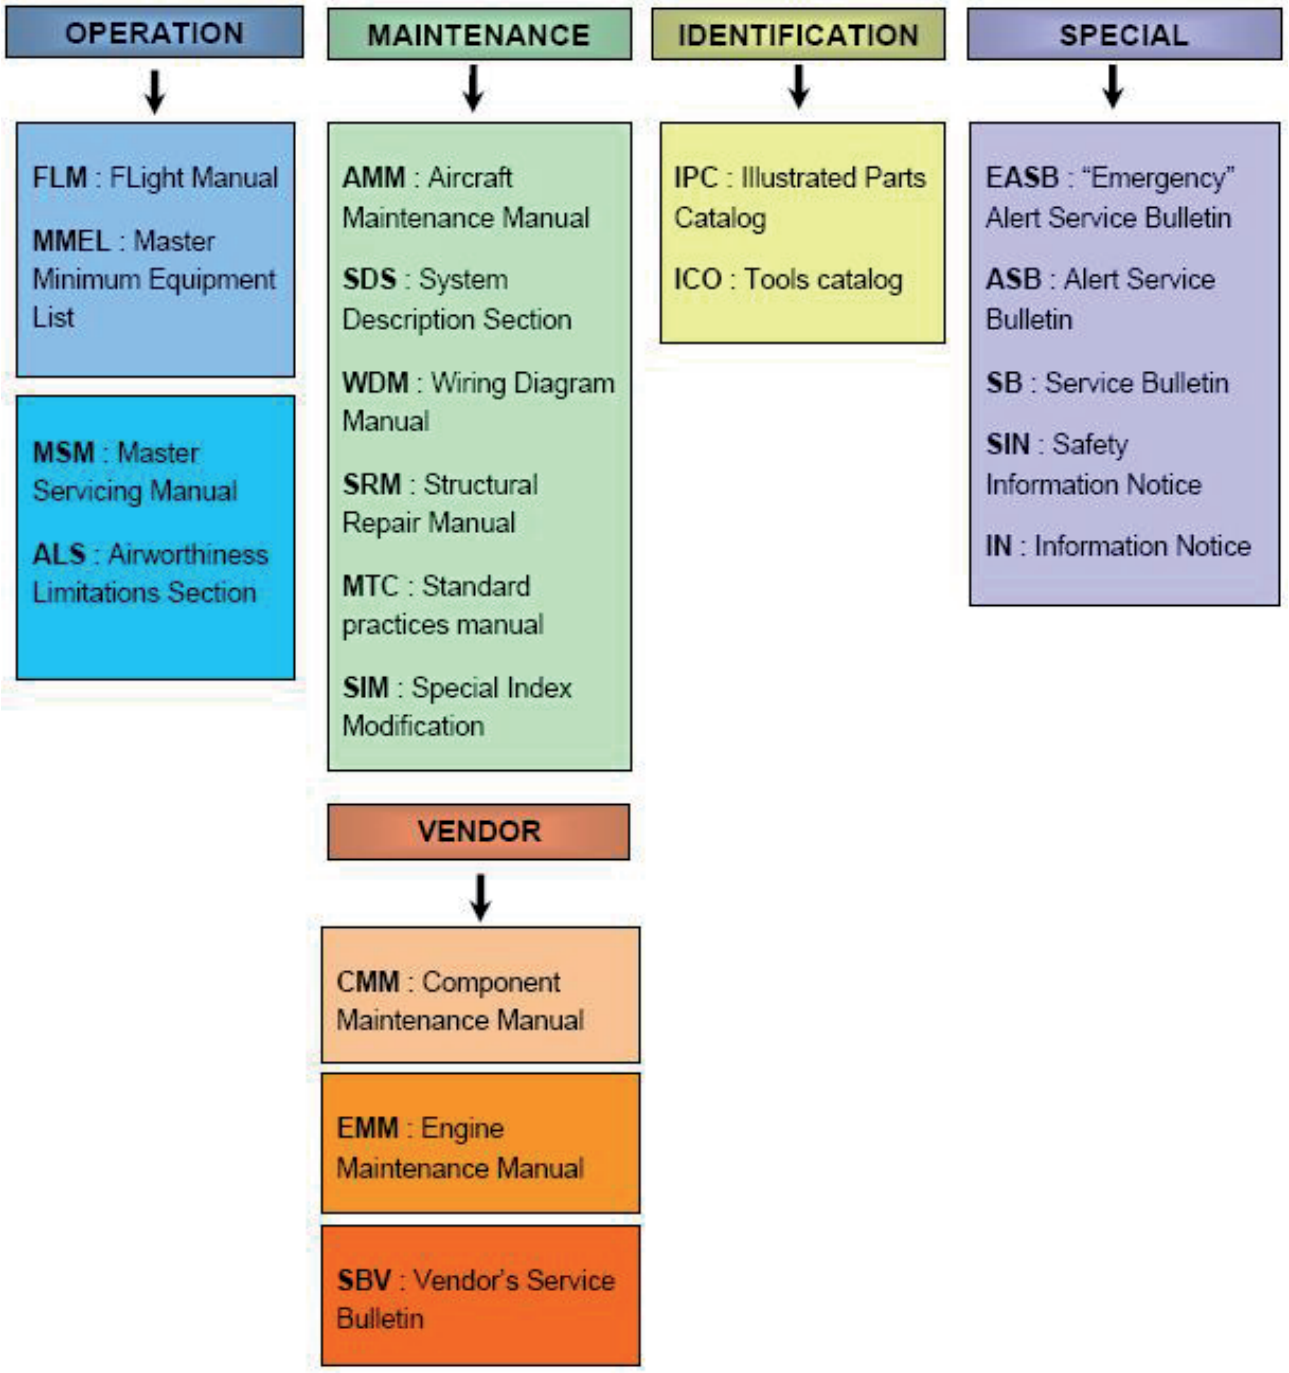



*Figure 1*

**End of the Document Unit**

# GLOSSARY

| | |
|---|---|
| (-): | Not indicated |
| &: | Applied at each limit (and) |
| //: | First of the limits reached (or) |
| §: | Paragraph |
| A: | Basic inspection with a cAlendar limit |
| ALF: | Check After the Last Flight of the day |
| ALL MP/N: | ALL Manufacturer Part Numbers |
| ALS: | Airworthiness Limitations Section |
| AMM: | Aircraft Maintenance Manual |
| ASB: | Alert Service Bulletin |
| BFF: | Check Before the First Flight of the day |
| C: | Major inspection with a Calendar limit |
| CLN: | CLeaNing |
| CM: | Condition Monitoring |
| CMM: | Component Maintenance Manual |
| CSS: | Chapter / Section / Subject |
| D: | Day |
| DI: | Detailed Inspection |
| DRN: | DRaiNing |
| DS: | DiScard |
| DU: | Document Unit |
| EASA: | European Aviation Safety Agency |
| ED: | Expiry Date |
| EMM: | Engine Maintenance Manual |
| EXC: | EXCept |
| F: | FAA inspection |
| FAA: | Federal Aviation Administration |
| FC: | Fonctional Check |
| FH: | Flight Hour |
| FLM: | FLight Manual |
| FM: | Log card |
| FS: | Frequency Start |
| FT: | Functional Test |
| G: | Major inspection with an hour-based time limit |
| GR: | Ground Run |
| GRT: | Spread-out major inspection |
| GVI: | General VIsual check (Visual inspection with access equipment and standard tools) |
| HC: | Hoist Cycle |
| HT: | Hard Time maintenance |
| LOEDU: | List Of Effective Document Units |
| LC: | Landing Cycle |

| | |
|---|---|
| LUB: | LUBrication |
| M: | Month |
| MC: | Maintenance Code |
| MGB: | Main Gear Box |
| MMEL: | Master Minimum Equipment List |
| MP/N: | Manufacturer Part Number |
| MRH: | Main Rotor Hub |
| MSM: | Master Servicing Manual |
| NPT: | New Proof Test |
| OC: | On Condition |
| OPT: | OPTion |
| OTL: | Operating Time Limit |
| P/N: | Part Number |
| PO: | Perform Once |
| RC: | Roping Cycle |
| RIG: | RiggInG |
| RS: | ReStoration |
| RTQ: | Readjustment of the TorQue loading |
| S: | Supplementary inspection |
| SB: | Service Bulletin |
| SC: | Sling Cycle |
| SDI: | Special Detailed Inspection |
| SLL: | Service Life Limit |
| S/N: | Serial Number |
| T: | Basic Technical inspection with an hour-based time limit |
| TA: | Turn Around check |
| TBO: | Time Between Overhauls |
| TC: | Torque Cycle |
| TCK: | Torque ChecK |
| TGB: | Tail Gear Box |
| TL: | Type of Limit |
| TRH: | Tail Rotor Hub |
| TSI: | Time Since Installation |
| TSM: | Time Since Manufacture |
| VC: | Visual Check |
| VLV: | Inspection associated with the flights of the day. |
| Y: | Year |
| WC: | Work Card |
| WGH: | WeiGHing |

**End of the Document Unit**

# STRUCTURE OF THE MSM

## 1 GENERAL STRUCTURE OF THE MSM

The Maintenance Program (MSM) is broken down into two parts.

The first part comprises general information which explains how the MSM operates and how it must be used.

The second part which defines the scheduled maintenance comprises the following sections:

- 05-10-00, which lists the components subject to a Time Between Overhauls (TBO), as well as the corresponding limits.
- 05-11-00, which lists the components subject to an Operating Time Limit (OTL), as well as the corresponding limits.
- 05-12-00, which lists the components subject to On Condition (OC) maintenance, whose inspection interval are given in section 05-20, 05-21, 05-22, 05-23, 05-24, 05-25, 05-26 of the MSM.
- 05-20-00 (daily check), 05-20-01 (periodic interval 10 FH).
- 05-21-00 (periodic interval 150 FH//12 M), 05-21-01 (periodic interval 150 FH) and 05-21-02 (periodic interval 12 M).
- 05-22-00 (periodic interval 600 FH//24 M), 05-22-01 (periodic interval 600 FH) and 05-22-02 (periodic interval 24 M).
- 05-23-00 (periodic interval 1200 FH//48 M), 05-23-01 (periodic interval 1200 FH) and 05-23-02 (periodic interval 48 M).
- 05-24-02 (periodic interval 144 M).
- 05-25-00 (specific periodic interval).
- 05-26-00 (one-off time limits to be complied with a limited number of times).

These sections specify the maintenance operations to be performed on the helicopter, periodically or a limited number of times, regardless of the operating conditions.

## 2 BREAKDOWN OF THE MSM

The various parts of the MSM are presented in the form of Document Units (DUs).

### 2.1 Identification of the DUs

Each DU is unique and is identified by the following:

- The title of the manual at the top right hand side of the page,
- The effectivity (helicopter type and version) marked at the bottom left hand side of the page,
- The date code of the DU at the bottom left hand side of the page below the effectivity (format: year.month.day),
- The number or title of the DU at the bottom right hand side of the page,
- The page number at the bottom right hand side of the page.

The end of each Document Unit is identified by " End of the Document Unit" on the last page.

### 2.2 Task codes

The DUs in sections 05-10-00, 05-11-00, 05-12-00, 05-20-0x, 05-21-0x, 05-22,0x, 05-23-0x, 05-24-02, 05-25-00, 05-26-00 comprise maintenance tasks. These tasks are identified by a unique code specific to EUROCOPTER, comprising a group of 15 characters.

Example:




*Figure 1*

The first four digits (**22/10**/00/000/000/000) correspond to the ATA chapter/section breakdown.

The fifth and sixth digit (22/10/**00**/000/000/000) are used to subdivide an ATA chapter/section comprising several subjects into individual subjects.

The seventh to fifteenth digit (22/10/00/**000/000/000**) are used to identify the tasks per ATA chapter/section/subject.

### 2.3 List Of Effective Document Units (LOEDU)

The LOEDU specifies the following information, for each DU, in a table:

- The Document Unit (DU): this column specifies the number of the DU or the title of the DU (example: 05-20-00).
- The type: this column is coded with the letter "R" if the DU is revised, "D" if the DU is destroyed, "N" if the DU is new, or has no code for DUs which are unchanged.
- The date: this column indicates the DU date code.

## 3 CLASSIFICATION OF INFORMATION

The DUs in sections 05-10-00, 05-11-00, 05-12-00, 05-20-0x, 05-21-0x, 05-22-0x, 05-23-0x, 05-24-02, 05-25-00 and 05-26-00 are classed in increasing order according to ATA 100 numbering.

**End of the Document Unit**

# UPDATE OF THE MSM

## 1 REVISION OF THE MSM

The MSM is revised approximately every 6 months.

The MSM cover page bears the issue date code (first issue), the current revision number taken in chronological order followed by the revision date code (example: Issue date: 2010.01.30, Revision 002: 2010.07.30, the last applicable revision is revision 002 with a date code of 2010.07.30).

The date code marked on the new or revised DUs corresponds to the revision date code marked on the cover page.

## 2 UPDATE OF THE MSM

### 2.1 Update procedure

The user is responsible for updating his documentation each time he receives a revision or a new issue from the manufacturer. The MSM is updated using the new LOEDU which specifies which DU must be inserted (new DU), replaced (revised DU) or removed (deleted DU). A deleted DU is issued with the wording "DU TO BE REMOVED FROM THE MANUAL" in the revision concerned.

Once the MSM has been updated, the date code of each DU indicated at the bottom right hand side of each page must correspond with the LOEDU.

The beginning of the MSM includes a "HIGHLIGHTS OF THE REVISION" page which explicitly summarizes the modifications made to each revision or new issue.

**NOTE**

*After updating, the "RECORD OF REVISIONS" page at the beginning of the MSM must be completed (date, name and signature).*

### 2.2 Identification of the modifications

Modifications are identified by a revision mark in the form of a vertical line in the right hand margin of the page.

Revision marks are not used in the following DUs:

- LOEDU,
- Table of contents,
- Highlights of the revision,
- Glossary.

## 3 EFFECTIVITY

The operator must check the effectivity of the MSM used (correctly updated) for the helicopter concerned.

The effectivity (helicopter type and version) is indicated on the cover page and is repeated at the bottom of each page comprising the MSM DUs.

**End of the Document Unit**

# BREAKDOWN OF THE MSM

## 1 PURPOSE OF THE MSM

The maintenance program (MSM) is drawn up by the helicopter manufacturer and specifies all the maintenance operations to be performed by the operator.

It specifies all the maintenance operations and limits recommended by the helicopter manufacturer, to ensure continued airworthiness, operational availability and performance of the helicopter (*), in all its varied operating missions.

For the maintenance operations and limits assigned to the engine components, refer to the engine manufacturer's documentation.

(*) Helicopter (type/version) defined by EUROCOPTER.

## 2 CHANGES TO THE MSM

The MSM is modified by the manufacturer according to changes in helicopter definition and operational feedback.

## 3 HELICOPTER MAINTENANCE

Helicopter maintenance consists in applying all the operations specified in the various sections of the MSM.

It must be performed by personnel with the required qualifications.

Maintenance includes the monitoring, servicing and reconditioning of a helicopter's components, as specified in the various manuals, taking into account the information that the manufacturer makes known to the operator via Alert Service Bulletins, Service Bulletins, Safety Information Notice, Information Notice etc.

## 4 TYPES OF MAINTENANCE

**Preventive Maintenance:**

Preventive maintenance consists of all the scheduled, and generally repetitive, operations to check and maintain a given operating condition.

**Corrective Maintenance:**

Corrective maintenance consists of all the operations that are performed after detection of a failure or anomaly in order to re-establish the initial operating condition.

**Remedial Maintenance:**

Remedial maintenance consists of all the operations initiated to permanently correct an anomaly, and to partially or wholly eliminate the preventive and corrective maintenance.

The preventive maintenance is given in the maintenance program.

## 5 DEFINITION OF THE MAINTENANCE MODES

There are three main maintenance modes:

- Hard time maintenance.
- On-condition maintenance.
- Condition monitoring maintenance.

The modes (defined below) differ mainly in how the replacement (or repair) of a component with a serviceable component is initiated. With the first two modes, the aim is to replace (or repair) the component before it fails, whereas in the third mode, to replace it after it fails.

## 5.1 Hard time maintenance

A component subject to hard time maintenance must be removed at the latest when it reaches its limit.

There are three types of hard time maintenance limits:

- **Service Life Limit (SLL)**

  The SLL is an airworthiness limitation.

  Components which are essential for operating safety which are subject to undetectable damage due to the loads they withstand, are covered by a Service Life Limit. These components must be removed from service when the specified limit is reached.

  These limits are listed in chapter 04.

- **Operating Time Limit (OTL)**

  Components whose possible failure would have lesser consequences on flight safety than components with a Service Life Limit, are assigned an Operating Time Limit. These components must be removed from service when the specified limit is reached.

- **Time Between Overhauls (TBO)**

  A TBO is assigned to a complete assembly. The interval corresponds to the operating time permitted before an overhaul is performed in a specialized workshop. The overhaul allows the assembly to be returned to service for a new period.

  The interval corresponds to a period during which any increase in damage cannot be detected by routine maintenance (example: internal corrosion, fretting leading to the loosening of bolted assemblies, etc.).

**NOTE**

*The time limits assigned to components guarantee flight safety with regard to the flight load fatigue alteration of components with no external deterioration. These time limits are not a commercial guarantee because a component may be removed due to wear, fretting corrosion or scoring, etc., before the expiry of the time limits.*

*The only warranty applicable to the helicopter and any component is the warranty included in the Sales Contract for the helicopter and the components.*

## 5.2 On-Condition maintenance

A component subject to On-Condition maintenance must be inspected periodically to confirm:

- that there is no damage,
- or that the damage found is within the removal or maintenance criteria specified in the documentation.

In both cases, the component is kept in service until the next inspection. The component must be removed from service when it reaches the criterion for removal, or made serviceable again as per the instructions given in the documentation.

The visual inspection is aimed at the overall external appearance of the component (no distortion, failure, cracks, scratches, signs of heating or wear, etc.), which would modify its original condition.

STANDING INSTRUCTIONS RELATIVE TO CONDITION: Surface deterioration and deterioration to protection and paint on all helicopter components must be examined and treated without delay in accordance with the applicable instructions (criteria, then reworking).

### 5.3 Condition monitoring maintenance

A component is subject to condition monitoring only after its failure (which has no impact on flight safety) has been detected. Such failures are detected during maintenance or in service. These components are not listed in the MSM.

**NOTE**

*Some components can be subject to several maintenance modes, for example, an OTL during which a condition check (OC) is to be performed.*

## 6 EFFECTIVITY - RESPONSIBILITY

The limits assigned to the component part numbers listed in the MSM are applicable to material:

- acquired directly from EUROCOPTER or through the EUROCOPTER subsidiaries or distribution network,
- purchased from the equipment vendors listed in our spare part catalogs, either directly or through their own distribution network.

In all cases, the manufacturing source is specified in the "airworthiness document" (JAA Form One or equivalent).

EUROCOPTER will not carry out repairs on components which were procured other than through the EUROCOPTER distribution network.

**WARNING**

**IT IS PROHIBITED TO REUSE PARTS, EQUIPMENT OR ASSEMBLIES, COMING FROM A HELICOPTER WHICH HAS INVOLVED IN AN ACCIDENT, WITHOUT FORMAL TECHNICAL APPROVAL FROM THE EUROCOPTER CUSTOMER TECHNICAL SUPPORT DEPARTMENT.**

**REMINDER: THE AIR ACCIDENT INVESTIGATION BOARD OF THE COUNTRY CONCERNED IS RESPONSIBLE FOR CLASSING AN EVENT AS AN ACCIDENT.**

## 7 MAINTENANCE INTERVAL

### 7.1 Daily checks

The purpose of the daily checks is to ensure the serviceability of the aircraft for the flights of the day.

The daily checks are broken down as follows:

- **Check before the first flight of the day (BFF)**

  The purpose of this check is to confirm the airworthiness of the aircraft once it has been positioned on the takeoff area after elimination of possible anomalies that have been reported by the pilot in the aircraft log book and that are liable to affect the safety level of the aircraft. The interval between this check and the first of the day should be as short as possible.

- **Turn-around check (TA)**

  The turn-around check is intended to confirm the short-term serviceability of the aircraft further to the preceding flight (checking the levels and mission related particular features etc.).

- **Check after the last flight of the day (ALF)**

  The check after the last flight of the day is intended to confirm the serviceability of the aircraft for the flights scheduled for the next flying day.

  The interval between two ALF checks should not exceed 10 flying hours.

These checks are intended to ensure that the helicopter is serviceable for flights and must be performed by:

- a qualified mechanic,

or

- a pilot or a flight engineer qualified by the operator's maintenance organization.




**If in doubt or if an anomaly is detected, the pilot or the flight engineer must call on the head of maintenance in order to perform the maintenance operations.**

In compliance with the criteria specified in Maintenance Manual, the mechanic will decide:

- Either to authorize flights while monitoring the defective component (in such a case the mechanic must inform the pilot of the criteria which must be observed to continue the flights of the day),
- or to carry out the remedial actions before resuming flights.

**Acceptance of an aircraft by the pilot and/or when a modification is embodied on the aircraft:**

The mechanic or the person in charge of the maintenance engineering must inform the pilot on a routine basis of:

- any modification to the definition that has been embodied on the aircraft,
- any possible change in the limit interval of the component modified.

### 7.1.1 Cold weather and very cold weather routine check

According to the lowest temperatures reached, a supplementary program is defined in the AMM.

#### 7.1.2 Check of Optional Installations

The detailed program is specified in the AMM 05-40-00, 6-2.

### 7.2 Supplementary inspection (S)

The supplementary inspection must be performed:

- every 150 FH without exceeding 12 months.

The inspection focuses on the condition of the components with short inspection intervals (less than the basic inspection).

### 7.3 Additional inspection (F)

Certain regulatory authorities require an inspection complying with the provisions of FAR 43-11 under certain conditions (e.g. renewal of Certificate of Airworthiness, change of owner, 100 FH inspection, etc.).

Far (or type "F") inspection (cf Work Card AMM 05-32-00, 6-1). This inspection is basically similar to the 100 FH interval operations.

### 7.4 Basic inspection (T or A)

The basic inspection comprises checks associated with:

- operation, to be performed every 600 FH (called T inspection) or every 24 months (called A inspection).

The basic inspection includes:

- condition monitoring of the components and systems by functional tests,
- inspection of the condition of the components which have a direct impact on the airworthiness of the helicopter.

It is aimed at checking the overall condition of the helicopter through detailed visual checks of the systems and equipment (no distortion, failure, cracks, scratches, corrosion, signs of heating, wear, impacts, etc.).

**NOTE**

*At each inspection, make sure:*

*- that no additional action has recently been specified by the manufacturer by way of an Alert Service Bulletin or Service Bulletin, etc.,*

*- that no interval or limit has been modified by way of an Alert Service Bulletin or Service Bulletin, etc.,*

*- that no interval or limit specified by the MSM has been reached.*

*The limits (TBO, OTL, SLL) specified in MSM section 05-10-00, 05-11-00 and ALS section 04-10-00 must also be taken into account where necessary in order to replace components which must be replaced before the next inspection.*

### 7.5 Major inspection (C)

The major inspection interval is 144 months.

The major inspection interval must be observed independently from the basic inspection interval.

**Recommendations concerning helicopter utilization rates**

At 144 months, for helicopters with a relatively low utilization rate, and in addition to the major inspection operations, it is recommended to perform the content of the basic inspection and its multiples as well as all the operations outside the inspection cycle, even if the limits do not coincide exactly, in order to start a full cycle.

The major inspection is focused on detailed monitoring if the entire aircraft. Following this inspection, the airframe is released for another 144 months of operation.

**End of the Document Unit**

# USE OF THE MSM

## 1 ADAPTATION OF THE MSM

The maintenance program (MSM) presents the limits for the maintenance operations recommended by the manufacturer.

It can be used as is or it can be adapted by each operator according to his operational needs on the condition he has the approval of his aviation authorities and that he complies with the interval for each maintenance operation.

## 2 INFORMATION FEEDBACK FROM THE OPERATOR TO THE MANUFACTURER

The operator must inform his local aviation authorities and the aircraft manufacturer of any significant anomalies discovered in operation or in maintenance, particularly when the component in question is maintained by condition monitoring.

This feedback can be essential for maintaining airworthiness (refer to chapter 04 – DU: USE OF THE ALS - §: "Occurrence reporting").

This is also applicable in case of an accident.

## 3 IN-SERVICE MONITORING

### 3.1 Airframe monitoring

The in-service monitoring of the airframe must be recorded in the helicopter logbook.

### 3.2 Monitoring of components

All the components listed in section 05-10-00, 05-11-00, 05-12-00 of the MSM are to be monitored in service, unless "not to be monitored in service" is specifically mentioned in the task.

The in-service monitoring of components consists in recording the date of installation, the number of flight hours and/or the calendar time and/or the cycles logged on the equipment log card **(FM)**.

If the component does not have a log card (component monitored via the log card of its higher assembly or component without a serial number, etc.), before installation, the operator must organize his documentation in order to comply with the inspection intervals and limits relating to this component (refer to Standard Practices Manual Work Card 20.08.05.101).

These records must be kept if the component is transferred from one helicopter to another.

All the documentation must be organized to enable recording of all the parameters used to comply with the limits.

### 3.3 Specific case of elastomer hoses

The operator must calculate the aging of elastomer hoses for rejection in accordance with the instructions of Standard Practices Manual (MTC) Work Card 20.09.01.902.

The operator must create a follow-up document (log card for example) in order to comply with the operating time limits.

## 4 COMPONENT PART NUMBERS

### 4.1 Definition

- **Manufacturer Part Number (MP/N)**: This is the identification number of the component marked on the identification plate or directly on the component.

- **EUROCOPTER Part Number (P/N)**: This is Eurocopter's part number which is associated with the manufacturer's part number (MP/N) for components which are not manufactured by Eurocopter.

The part numbers of the components or dynamic components which are given in the MSM are the manufacturer's part numbers (MP/N).

In the case of components which are not manufactured by Eurocopter, the MP/N is followed by the associated P/N (in brackets).

Example:

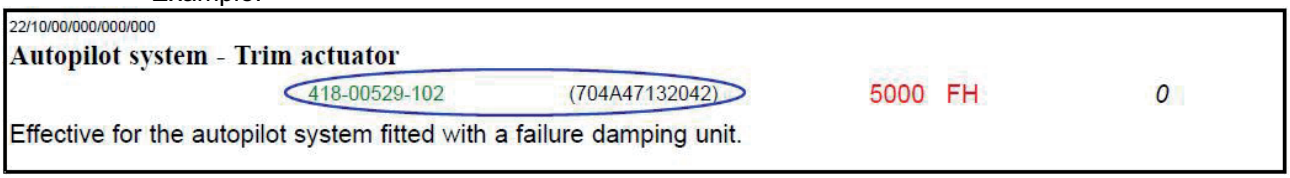



*Figure 1*

In some cases the MP/N is not specified, in this case it is replaced by a hyphen.

### 4.2 Part Number followed by a suffix

In some cases, the MP/N can be assigned a suffix (example: MP/N 350A31-1831-04**M**), used for spares to indicate the installation of an optional component or a specific configuration.

These MP/Ns with a suffix generally do not appear in the MSM.

The limit applicable to an MP/N with a suffix is identical to that of the same MP/N without a suffix.

Example: the limit given for assembly MP/N 350A31-1831-04 is valid for assembly MP/N 350A31-1831-04 and assembly MP/N 350A31-1831-04M.

### 4.3 Applicability of the limits

The limit(s) specified for the first MP/N are valid for all the other MP/Ns listed in the same task.

Example:

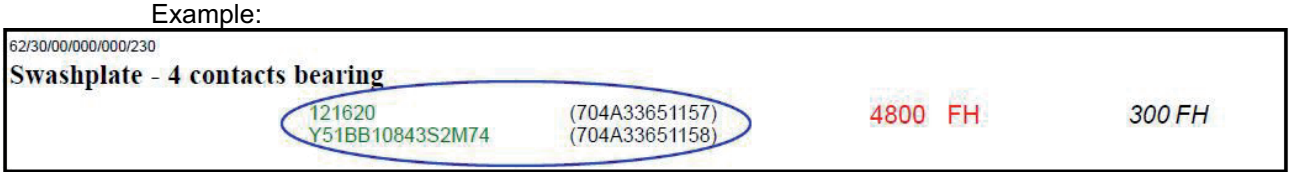



*Figure 1*

### 4.4 Changes to Part Numbers

Unless otherwise stated, the time limits and inspections apply to the component whose part number is listed in the MSM and to its future changes, including those not already indicated in this section. In this case, contact the EUROCOPTER technical support department to confirm the installation effectivity of the dash number.

## 5 LIMITS

A component or a maintenance operation can be subject to one or more limits, expressed in:

- flight hours,
- calendar time,
- cycles.

### 5.1 Flight Hours

- Flight Hours (FH), are counted from takeoff to landing.

## 5.2 Calendar time

Calendar time can be expressed:

- in Months (M),
- in Days (D),
- Before the First Flight of the day (BFF),
- Turn Around check (TA),
- After the Last Flight of the day (ALF),
- from the date marked on the equipment label (ED: Expiry Date).

### 5.2.1 Airframe initial aging date

The helicopter airframe initial aging date to be taken into account is the date marked on the helicopter identification plate.

### 5.2.2 Initial aging date for components

- The initial aging date for a component and a dynamic component to be taken into account is generally the date of first installation or first destorage, to be recorded on the equipment log card. In this case, there are no other specifications in the MSM tasks.

  The storage time before installation is therefore not to be taken into account on the condition that storage was in accordance with the applicable documentation, except for the following specific cases.

- For some components, the aging date to be taken into account is the date of manufacture marked on the Log Card (FM). In this case, TSM (Time Since Manufacture) is specified in each task concerned in the MSM.

Specific cases:

Components or dynamic components are sometimes subject to a limit since installation and a limit since manufacture. In this case, both limits followed by TSI (Time Since Installation) and TSM (Time Since Manufacture) are indicated, as per the following example:

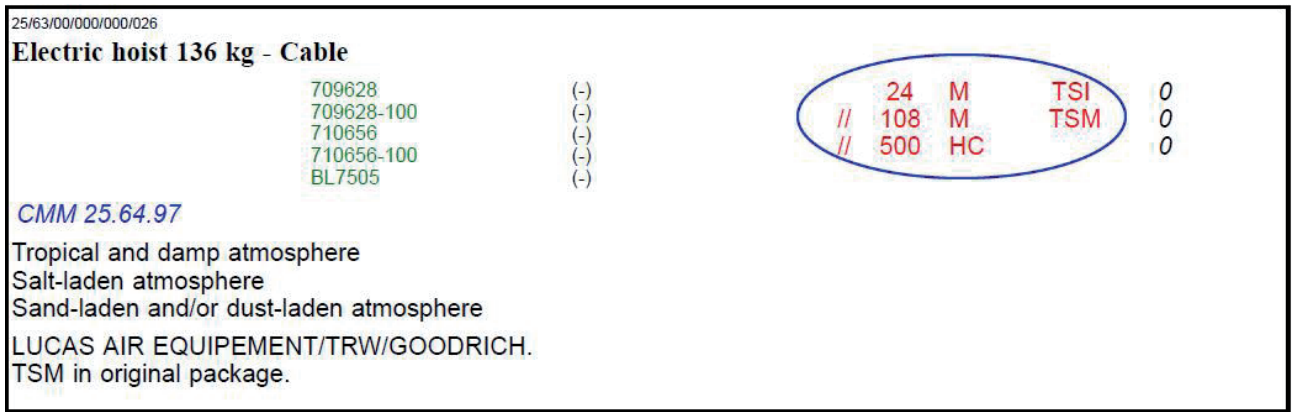



*Figure 1*

**NOTE**

*If there is no log card, when the component arrives in the stores, it is advisable to create a "Follow-up Sheet" and to fill out the helicopter logbook when the component is installed. When the component is installed on the helicopter, the applicable date is the date of manufacture marked on the component's identification plate.*

**NOTE**

*Dynamic components, which have been subject to work in a specialized workshop or long-term storage in accordance with the applicable instructions during this period, may be subject to an extension to this calendar time limit.*

*In this case the operator must make a request with the EUROCOPTER Technical Support Department and obtain approval from the manufacturer and the Airworthiness Authorities.*

## 5.3 Cycles

According to the component, the cycles can be expressed either as:

- **Takeoff/landing cycles**: LC (Landing Cycle)

  1 LC = 1 takeoff/landing.

- **Sling cycles**: SC (Sling Cycle)

  1 SC = 1 release with load on ground and 3 SC = 1 release in flight (load not on the ground).

- **Roping cycles**: RC (Roping Cycle)

  1 RC = 1 rope release or 4 commando drops without rope release.

- **Hoisting cycles**: HC (Hoist Cycle)

  1 HC =

  - In flight, one downward movement + one upward movement, whatever the length of cable and load involved.

  - On the ground, one downward movement of 5 meters or more and one equivalent upward movement, whatever the load involved.

## 5.4 Periodic and Perform Once limits

The limits specified in section 05-2x-0x of the MSM must be complied with:

- **Periodically**: the maintenance operation must be performed at the latest when the indicated limit is reached.

**NOTE**

*For operational reasons, the maintenance operation can be performed before the limit is reached, however, the maximum interval between two maintenance operations must be complied with.*

or

- **Once only**: the maintenance operation must be performed once only, when the indicated limit is reached.

  It must not be performed before the limit is reached.

  These maintenance operations are identified by a dotted line around the task and by code PO (Perform Once) in front of the limit value.

These operations can be performed either:

- After installation of a component removed from the same helicopter,

- After the introduction to service of a new, overhauled or repaired component,

- After installation of a component originating from another helicopter,

- Each time after the component is installed.

The start of the maintenance operation is specified on a routine basis in each task concerned.

Example:

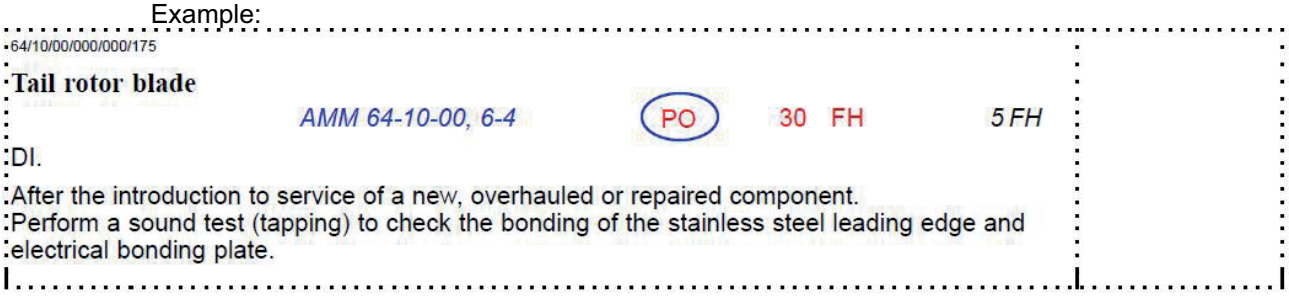



*Figure 1*

## 5.5 Performance interval

Some components and maintenance operations are assigned several performance limits separated by the **"//" or "&" sign**.

In the case of limits separated by the **"//" sign**, **the maintenance operation must be performed when the first limit is reached**.

The next limit at which the component is to be rejected or the maintenance operation is to be performed will once again be the first limit reached.

In the case of limits separated by the "&" sign, the maintenance operation must be performed at each limit indicated.

Example 1:

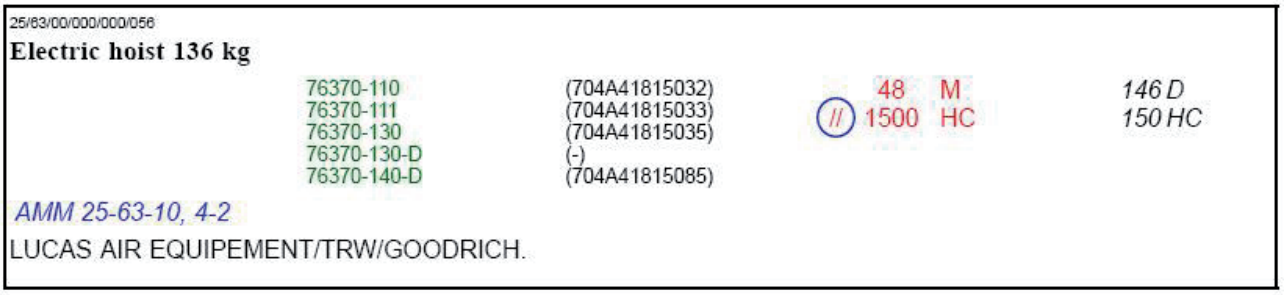



*Figure 1*

Section 05-10-00

. An electric hoist performs 1000 HC over a period of 48M (TSI). The first limit reached by the electric hoist therefore is 48 M; it must be removed for overhaul (TBO) and returned to service for another period.

. After overhaul, the electric hoist is installed on a helicopter and then performs 1500 HC in 24 M(TSI). The first limit reached by the electric hoist is therefore 1500 HC. It must therefore be removed for another overhaul (TBO).

Example 2:




*Figure 1*

Section 05-26-00

The maintenance operation must be performed once at 60 M and once at 96 M after installation. The maintenance operation must be repeated only if the component is removed then reinstalled or replaced.

## 5.6 Specific and severe atmospheric operating conditions

Certain specific and severe climatic conditions are considered as specific operating conditions. This concerns the use of helicopters in the following conditions:

- Tropical and damp atmosphere:

  . Combination of high ambient temperatures and humidity levels (from +28°C (+82.4°F) and 75% relative humidity).

- Salt-laden atmosphere:

  . Ship-based or,

  . Based for more than 50% of its time less than 1 km from the coast or,

  . Spending more than 50% of its time in offshore flight at low altitude (below 1,000 feet).

- Sand- and/or dust-laden atmosphere:

  . Sand-laden wind and/or landing on sandy ground.

- Cold weather:

  . Temperatures observed or forecast from -10°C to -30°C (+14°F to -22°F).

- Very cold weather:

  . Temperatures observed or forecast from -30°C to -40°C (-22°F to -40°F).

The scheduled maintenance relating to these operating conditions is covered with all the MSM tasks.

These operating conditions require not only the operations specified in the MSM and standard maintenance operations, but also the preventive measures recommended in **AMM task 12-30-00, 3-4**. Since the interval is not specified, the operator must reapply the measures according to his own experience in the corresponding conditions.

## 5.7 Maximum limit value

The maximum limit value represents the limit not to be exceeded. No tolerance is permitted on the maximum limit value.

The maximum limit value equals to a limit value + margin value.

### 5.7.1 Definition of the margin

To introduce "flexibility" into maintenance planning in order to compensate for unpredictable situations (e.g. unforeseeable increase in the helicopter utilization rate), Eurocopter defines a value, called "margin", to be added to a limit value.

This margin, added to the limit value to which it is applicable, results in the maximum limit value (limit value + margin value) to be taken into account for two consecutive inspections.

### 5.7.2 Application of the margin

The margin can be used repetitively for each limit value interval (refer to figure which follows).

However, to maintain certain "flexibility" in maintenance planning, Eurocopter recommends to plan the maintenance operation using the limit value without taking the margin into account.

### 5.7.3 Specification of the margin

The margin value and its units are specified as shown in the following example.

Example:

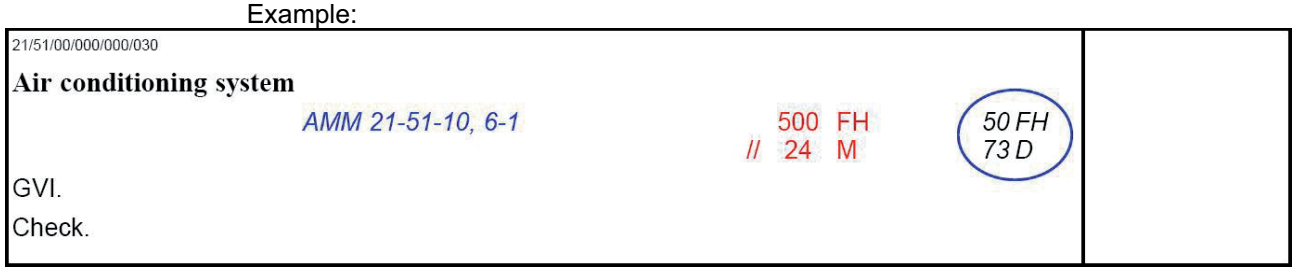



*Figure 1*

No units are specified when the margin equals zero.

### 5.7.4 Example of how the margin is used

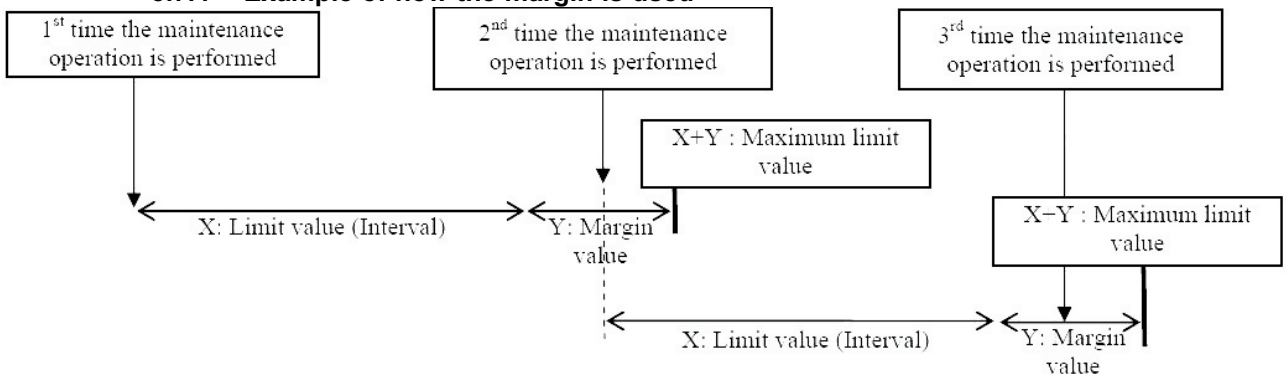



*Figure 1*

X is the limit value for performing the maintenance operation and Y is the margin value added to the limit value.

After using the first margin value (partially or completely), the next maintenance operation is to be performed again within the X+Y interval, that is to say before the next maximum limit value.

# 6 TRANSFER OF A COMPONENT FROM ONE HELICOPTER VERSION TO ANOTHER HELICOPTER VERSION

## 6.1 Ecureuil family helicopter versions concerned by the transfer

The versions concerned by component transfer are identified in the following table:

| Ecureuil family | Civil versions |
|---|---|
| AS 350 | B, BA, BB, B1, B2, B3, D |
| AS 355 | E, F, F1, F2, N, NP |
| EC 130 | B4 |




**Transfer between military and civil versions is prohibited.**

## 6.2 Components NOT subject to in-service monitoring (condition monitoring)

Components which are not to be monitored in service can be transferred between all the versions.

## 6.3 Components subject to in-service monitoring

### 6.3.1 Components subject to a service life limit (SLL)

The transfer rules are defined in chapter 04 (ALS).

### 6.3.2 Components subject to a time between overhauls (TBO), an operating time limit (OTL) or on-condition monitoring (OC)

6.3.2.1 Authorization to Transfer

**General case**

The transfer of a component (part or assembly) included in section 05-10-00 or 05-11-00 or 05-12-00, from helicopter version "x" to helicopter version "y", is authorized only if the following conditions are met simultaneously:

- both helicopter versions "x" and "y" must be listed in the table above. The transfer of components originating from any other version or any other type of helicopter is forbidden,
- the part number of the component to be transferred is listed in section 05-10-00 or 05-11-00 or 05-12-00 of helicopter version "x" and in section 05-10-00 or 05-11-00 or 05-12-00 of helicopter version "y",

### 6.3.3 Application rules

If transfer is authorized, comply with the following application rules:

6.3.3.1 Components subject to TBO and OTL (Section 05-10-00 and 05-11-00)

If the limits (flight hours and/or cycles and/or calendar time) are exactly the same on aircraft version "x" and "y", continue counting the flight hours and/or cycles and/or calendar time on aircraft version "y".

If the limits in flight hours and/or cycles and/or calendar time on aircraft version "x" and version "y" are different , convert the flight hours and/or cycles and/or calendar time already logged (since new or since last overhaul) in accordance with the calculation rule applicable to the life limit, defined in chapter 04 (DU: "USE OF THE ALS" - §: "Calculation rules"). Then continue counting the flight hours and/or cycles and or calendar time and add them to the value obtained after applying the calculation rule.

CAUTION

**When the flight time of a component subject to a life limit (SLL) or an operating time limit (OTL) is converted following a transfer, the operator must check that the life limit or the operating time limit of the component allows the higher assembly to reach its TBO.**

**If this is not the case, the assembly must be removed when the life limit (SLL) or the operating time limit (OTL) of the component is reached.**

6.3.3.2 Components Subject to On-Condition (OC) Maintenance (Section 05-12-00)

If the inspection intervals (flight hours and/or torque cycles and/or calendar time) for the component are identical on version aircraft "x" and version aircraft "y", continue counting the flight hours and/or torque cycles and/or calendar time on version aircraft "y".

If the inspection intervals are different on aircraft version "x" and aircraft version "y", perform the inspection when the component is transferred, then comply with the inspection interval specific to version aircraft "y".

## 7 RECORDING

In all cases record the transfer information and calculation on the equipment log card of the component concerned.

An individual log card must be drawn up if the component has been monitored via the log card of its higher assembly.

## 8 MAINTENANCE CODES (MC)

To make it easier to perform the maintenance operations, each maintenance operation included in section 05-20 and 04-20 is identified by one or mode codes as listed below:

- LUBrication/SerViCing **(LUB/SVC)**

  This includes work such as routine lubrication and servicing, filling/topping-up of oils, fluids, liquids and checking of pressures.

- Visual Check **(VC)**

  Visual inspection, without removal of the physical condition of certain components such as oil levels, tire wear, accumulator pressure, etc.

- General VIsual check **(GVI)**

  A general visual check is a visual inspection, without removal, to detect and assess deterioration or incorrect operation of a component or assembly. This check may require access equipment, ladders or platforms, and inspection means, mirror, light or screwdriver. The doors and hatches are opened or removed in order to access the components.

- Detailed Inspection **(DI)**

  A detailed inspection is an inspection to detect and assess deterioration or incorrect operation of a component or assembly. This inspection may require access equipment, ladders, platforms and

specific tools, and may require removal of the component or assembly. The doors and hatches are open or removed.

- Special Detailed Inspection **(SDI)**

  A special detailed inspection is an inspection to detect and assess deterioration or incorrect operation of a component or assembly. This inspection may require a specific process such as dye penetrant inspection, radiography, etc.

- Functional Test **(FT)**

  A functional test/check is a test which is performed to determine whether one or more functions of a system operate within stipulated limits. Normally this test is performed without the removal of components and using a maintenance tool.

- CLeaNing **(CLN)**

  To remove dirt and/or foreign bodies from a system or surface. Cleaning may require removal of the component, such as for a filter for example.

- DiScard **(DS)**

  A component is withdrawn from service at a specified limit. Discarding normally applies to parts such as cartridges, containers, cylinders, batteries, etc.

- ReStoration **(RS)**

  This work involves restoring a component to a specific standard. Restoration can vary from cleaning or replacing detail parts to a complete overhaul.

- Readjustment of the TorQque loading (Retorque) **(RTQ)**

  Readjustment is a maintenance procedure which consists in applying the tightening torque to an assembly, without checking its value.

- Torque ChecK **(TCK)**

  The aim of the torque check procedure is to check that the tightening torque of the assembly is not below the specified minimum value.

- WeiGHing **(WGH)**

  The aim is to remove the equipment in order to weigh it using scales, to check its integrity and to make sure that there are no losses.

- New Proof Test **(NPT)**

  The aim is to perform a proof pressure test to check that there are no leaks.

- DRaiNing **(DRN)**

  Draining/replenishing consists in replacing all the fluid, liquid, oil or fuel in a component.

- Ground Run **(GR)**

  A ground run consists in checking certain parameters of a component or a function with the rotor spinning or dynamically after operation.

- RiggInG **(RIG)**

  Rigging consists in adjusting a control channel or a set of components which must have an operating range in operation.

## 9 CONTENT OF A TASK

**Section 05-1x-00**

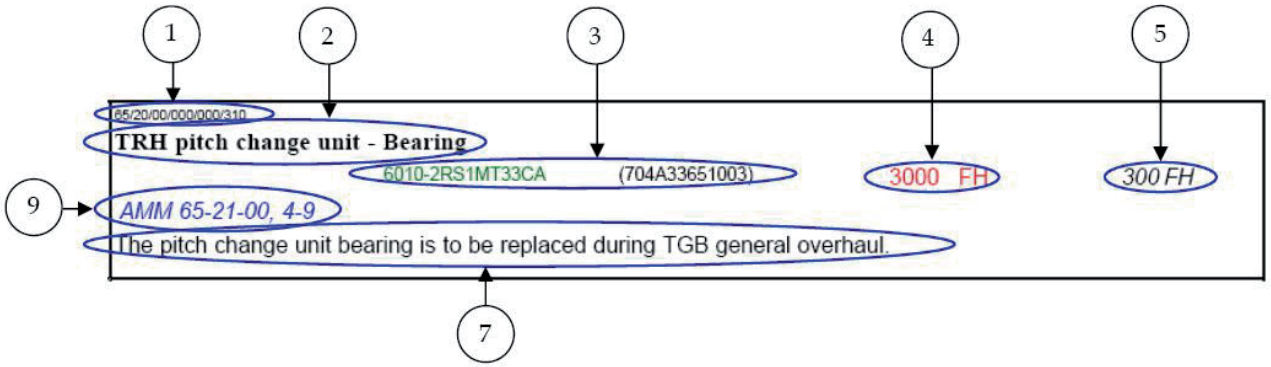



*Figure 1*

**Section 05-2x-0x**

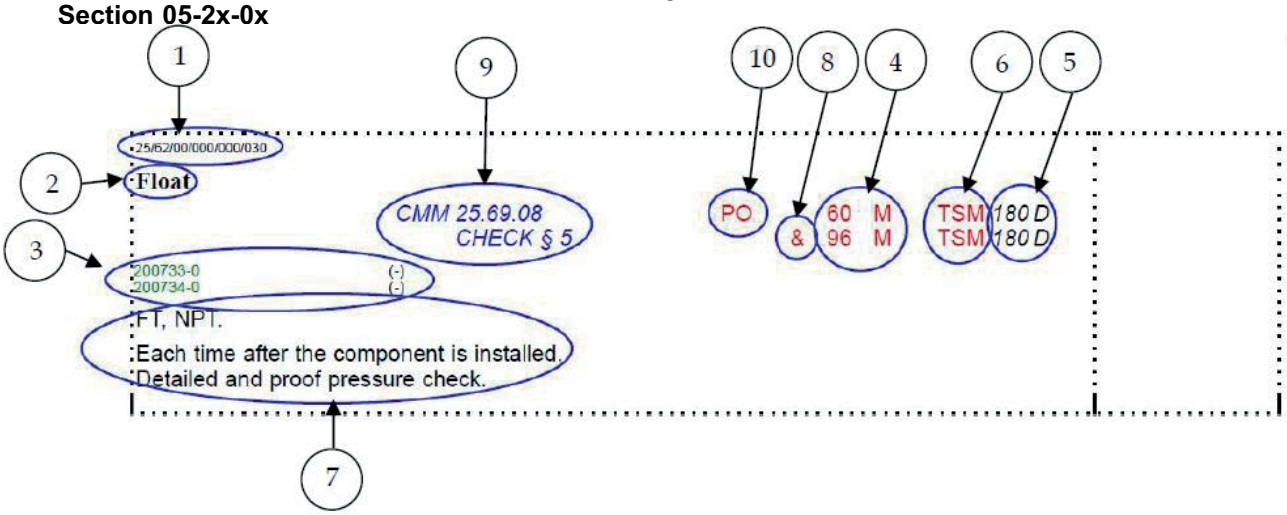



*Figure 1*

**End of section**

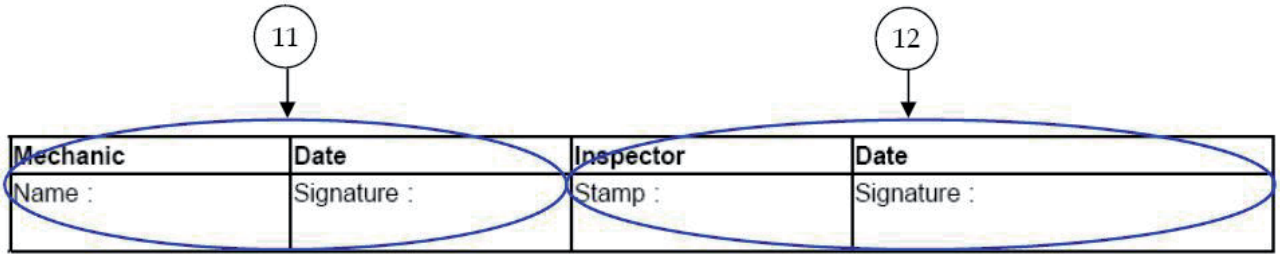



*Figure 1*

- 1 - Task number (refer to the "STRUCTURE OF THE MSM" DU in § 2.2)
- 2 - Designation
- 3 - Equipment manufacturer's part number and EUROCOPTER's management number (refer to § 4)

- 4 - Limit value(s) and unit(s) (refer to § 5.1 / 5.2 / 5.3)
- 5 - Margin value(s) and unit(s) (refer to § 5.7)
- 6 - Start of the limit (TSI, TSM) if necessary (refer to § 5.2.1 / 5.2.2)
- 7 - Comments if necessary
- 8 - //: or - &: et (se référer au § 5.5)
- 9 - Reference documentation AMM, CMM, ...
- 10 - Perform Once operation (refer to § 5.4)
- 11 - Mechanic: Date, name and signature
- 12 - Inspector: Date, stamp and signature

**End of the Document Unit**

# OPTIONAL EQUIPMENT

## 1 COMPATIBILITY / INCOMPATIBILITY

A helicopter can be equipped with various optional items. There can be incompatibilities between certain optional installations which can appear at two levels:

**At operational level:**

- In this case, incompatibilities between optional items are specified in the Flight Manual.

**At installation on the helicopter:**

- Either the helicopter can be equipped with two optional installations but not at the same time: there is an installation incompatibility.
- Or the two installations can be installed together on the condition that one of them is modified: this is called conditional compatibility.

The following table lists all the approved optional installations with their incompatibilities, conditional compatibilities, or effects on operation, as specified in a Flight Manual Supplement.

## 2 TABLE OF APPROVED OPTIONAL INSTALLATIONS

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 01 | All | Dual controls with or without autopilot without twist grip | 25, 26, 39, 44, 45 | |
| 02 | All | Lateral visibility of standard fwd doors | 28, 29, 97 | |
| 03 | All | Hour meter | | |
| 04 | All | Pilot’s windshield wiper | | |
| 05 | All | Copilot’s windshield wiper | 08 | |
| 06 | All | Cabin heating | | |
| 07 | All | Cold weather starting | | |

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 08 | All | Air conditioning system (freon) | 05, 25, 26, 38, 65, 72, 91 | |
| 09 | All | Fuel anti-icing | | |
| 10 | All | Engine washing, cowlings closed | | |
| 11 | All | High landing gear | 17, 95 | 56 |
| 12 | All | Cable cutter | 50 | |
| 14 | All | Fuel flowmeter | | |
| 15 | All | Emergency floatation gear | 17, 18, 90, 93, 94 | 32, 33, 91, 92 |
| 16 | All | Life-rafts | 21, 25, 26, 44, 45, 48, 49, 50, 96 | 90 |
| 17 | B - BA - B1 - B2 - D | Float type landing gear | 11, 15, 18, 22, 23, 35, 36, 37, 41, 54, 55, 56, 72, 91, 92, 95 | 90, 70, 71 |
| 18 | All | Ski installation (SEFA) | 15, 17, 41 | 91 |
| 19 | All | Sand filter | | |
| 20 | All | Main and tail rotor blades: reinforced protection against erosion | | |
| 21 | All | Ferry flight fuel tank installation | 16, 25, 26, 34, 43, 44, 45, 50, 90, 92 | 22, 23, 32, 33, 41, 68, 72 |

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 22 | All | External load carrying installation with dynamometer (Cargo-sling 750 kg) | 17, 23, 41, 72 | 21, 25, 26, 32, 33, 44, 45, 46, 47 |
| 23 | All | External load carrying installation with dynamometer (Cargo-swing 906 and 1160 kg) | 17, 22, 41, 72, 95 | 21, 25, 26, 32, 33, 44, 45, 46, 47 |
| 24 | All | Rear view mirror | 92 | |
| 25 | All | Ambulance role lower stretcher (litter) | 01, 08, 16, 21, 34, 39, 43, 44, 45, 49, 90, 92 | 22, 23, 32, 33, 41, 72 |
| 26 | All | Ambulance role upper stretcher (litter) | 01, 08, 16, 21, 34, 39, 43, 44, 45, 49, 90, 92 | 22, 23, 32, 33, 41, 72 |
| 27 | All | Self-sealing fuel tank | | |
| 28 | All | Aft LH sliding door | 02 | |
| 29 | All | Aft RH sliding door | 02, 92, 97 | |
| 30 | All | Sliding window on aft LH sliding door | | |
| 31 | All | Sliding window on aft RH sliding door | | |
| 32 | All | AIR EQUIPMENT electric hoist (136 kg - Cable 40 m) | 33 | 15, 21, 22, 23, 25, 26, 41, 43, 44, 45, 46, 47, 90, 91, 92 |
| 33 | All | BREEZE electric hoist (136 kg - Cable 33,5 m) | 32 | 15, 21, 22, 23, 25, 26, 41, 43, 44, 45, 46, 47, 90, 91, 92 |
| 34 | All | Drip pan | 21, 25, 26, 43, 50, 90, 92 | 68 |

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 35 | All | LOCATOR search light | 17 | |
| 36 | All | Swivelling landing light | 17, 72 | |
| 37 | All | External loud speakers | 17, 41, 72 | |
| 38 | All | Illuminating flares | 08 | |
| 39 | All | Twist grip throttle control on pilot's/copilot's collective pitch levers | 01, 25, 26, 44, 45 | |
| 40 | All | Power takeoff on MGB (32 Kw) | | |
| 41 | All | SIMPLEX crop spraying installation | 17, 18, 22, 23, 37, 53, 72, 91, 92, 95 | 21, 25, 26, 32, 33, 44, 45, 46, 47, 203 |
| 43 | All | Arm rests for 3 aft seats | 21, 25, 26, 34, 90, 92 | 32, 33 |
| 44 | All | Forward 2-place bench seat with low back | 01, 16, 21, 25, 26, 39, 45, 49, 50, 96 | 22, 23, 32, 33, 41, 72, 90 |
| 45 | All | Forward 2-place bench seat with high back | 01, 16, 21, 25, 26, 39, 44, 49, 50, 96 | 22, 23, 32, 33, 41, 72, 90 |
| 46 | All | IFR screens with trimming | | 22, 23, 32, 33, 41, 72 |
| 47 | All | IFR screens without trimming | | 22, 23, 32, 33, 41, 72 |
| 48 | All | Pilot's seat with low or high back | 16 | |

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 49 | All | Copilot's seat with low or high back | 16, 25, 26, 44, 45 | |
| 50 | All | HEULIEZ luxurious fittings and upholstery | 12, 16, 21, 34, 44, 45, 90, 92, 96, 97 | |
| 52 | All | Main rotor blade folding system | | |
| 53 | All | Heavy weather mooring | 41, 72 | |
| 54 | All | Marine lashing | 17 | |
| 55 | All | Handling on loose ground | 17 | |
| 56 | All | Small wheel under tail skid (low type landing gear only) | 17, 72 | 11 |
| 59 | All | Radio rack for LH baggage hold | 72 | |
| 60 | All | JOLLIET JE2 emergency locator transmitter in the tail | | |
| 65 | All | Hydraulic system ground connector | 08 | |
| 66 | All | Cabin fire extinguisher | | |
| 67 | All | Strobe light on horizontal stabilizer | | |
| 68 | All | Paying passenger transport for day/night VFR operation | | 21, 34 |

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 70 | All | SFIM 85T31 3-AXIS autopilot | | 17 |
| 71 | All | SFIM 85T31 3-AXIS autopilot with failure passivation unit | | 17 |
| 72 | All | Water bomber | 08, 17, 22, 23, 36, 37, 41, 53, 56, 59, 95 | 21, 25, 26, 44, 45, 46, 47, 90, 91, 92, 203 |
| 90 | All | 7,62 mm machine gun, door-mounted in cabin, LH side | 15, 21, 25, 26, 34, 43, 44, 45, 50, 94 | 16, 17, 32, 33, 72, 91, 92, 93 |
| 91 | All | Rocket launcher + CROUZET head-up display type 100 | 08, 15, 17, 41, 93, 95 | 18, 32, 33, 72, 90, 92, 94 |
| 92 | All | M621 20 mm axial cannon, RH side + CROUZET head-up display type 100 | 15, 17, 21, 24, 25, 26, 29, 34, 41, 43, 50, 90, 94, 95 | 32, 33, 72, 91, 93 |
| 93 | All | TOW missiles | 15, 91 | 90, 92, 94 |
| 94 | All | M621 20 mm door mounted cannon in cabin, LH side | 15, 90, 91, 92 | 93 |
| 95 | All | Low skid landing gear | 11, 17, 23, 41, 72, 91, 92 | |
| 96 | All | Pilot's/copilot's seat armor plating | 16, 44, 45, 50 | |
| 97 | All | RH sliding door, opening for cannon | 02, 29, 50 | |
| 200 | All | Type 1 gyro instrument | 205 | |
| 201 | All | VHF/AM No. 1 | | |

| ITEM | EFFECTIVITY | DESCRIPTION | INSTALLATION INCOMPATIBLE | INSTALLATION CONDITIONAL |
|---|---|---|---|---|
| 202 | All | VOR/LOC | | |
| 203 | All | ADF | | 41, 72 |
| 204 | All | ICS | | |
| 205 | All | Type 2 gyro instrument | 200 | |
| 206 | All | 250 VA AC power system | 207 | |
| 207 | All | 10 VA AC power system | 206 | |
| 208 | All | VHF/AM No. 2 | | |
| 209 | All | VOR/LOC/GLIDE | | |
| 210 | All | Marker | | |
| 211 | All | RMI | | |
| 212 | All | DME | | |
| 213 | All | HF/SSB (BLU) | | |
| 214 | All | Radio altimeter | | |
| 215 | All | Transponder | | |
| 216 | All | Encoding altimeter | | |

**End of the Document Unit**

# SB INCORPORATED

EUROCOPTER is required to issue Service Bulletins (SB) subsequent to new events (incidents, etc).

The information contained in the SBs is incorporated in the MSM if, and only if:

The SB contains new periodic checks, or modifies the existing MSM limitations.

The table below specifies for each SB incorporated:

- the number of the SB and its revision number,
- the subject of the SB,
- the ATA chapter/section concerned,
- the date on which the SB is incorporated in the MSM.

| SB No. | Subject | ATA | Date incorporated |
|---|---|---|---|
| 05.00.35 | Check of the attachment areas of the heat shield of the tail rotor drive shaft forward fairing | 53-50 | 02.05 |
| 05.00.37 | Checking tail servocontrol eye endfitting for correct locking | 67-30 | 2002.05.14 |
| 05.00.40 | Tail rotor blade skin check | 64-10 | 2002.07.16 |
| 67.00.22 | Dual locking of tail rotor servocontrol | 67-30 | 2002.07.23 |
| 55.00.09 | Check of fin attachment frame | 53-10 | 2002.12.10 |
| 65.00.43 | Tail rotor pitch change plate – Four-contact bearing | 65-20 | 2003.05.13 |
| 63.00.13 | Modified tightening torque of the MGB input bevel gear nut | 63-20 | 2003.09.16 |
| 05.00.43 | Check of the rear frame | 53-10 | 2004.02.04 |
| 29.00.04R1 | Lubrication of the splines on the hydraulic pump drive shaft | 29-10 | 2004.01.27 |

| SB No. | Subject | ATA | Date incorporated |
|---|---|---|---|
| 05.00.33 | Check for absence of rotation of the bearing spacer of the tail rotor rotating plate | 65-20 | 2004.03.15 |
| 05.00.45R1 | Replacement of hydraulic fluid in cold weather | 29-00 | 2004.10.22 |
| 05.00.41R2 | Check of the sliding door aft guide roller and middle rail | 52-90 | 2006.09.01 |
| 05.00.46 | Check of the upper and lower vertical fin spars | 55-20 | 2004.11.22 |
| 05.22 | Calendar time limit for the dynamic components | 60-00 | 1992.04.07 |
| 05.00.31R1 | Check of upper and lower fin attachment screws and spar fittings | 55-20 | 2000.05.25 |
| 29.00.07 | Improvement of the "hydraulic cut off" function | 29-10 | 2004.03.23 |
| 05.00.52 | Life raft kit check | 25-69 | 2007.08.31 |
| 29.00.10 | Hydraulic power – Replacement of the hydraulic hoses | 29-10 | 2008.05.28 |
| 55.00.16R1 | Improvement of the attachment strength for upper and lower fin skids | 55-20 | 2008.12.22 |
| 05.00.56R1 | Emergency floatation gear cover | 25-62 | 2009.07.20 |
| 05.00.50R1 | Collective pitch and yaw pitch anticipator potentiometers | 76-00 | 2011.05.26 |

| SB No. | Subject | ATA | Date incorporated |
|---|---|---|---|
| 05.00.57R1 | Check of the yaw load compensator accumulator charging pressure | 29-10 | 2011.05.26 |
| 29.00.10R2 | Replacement of the Hydraulic Hoses | 29-10 | 2011.05.26 |
| 67.00.37R2 | New collective lever hooking lock | 67-10 | 2011.05.26 |
| 53.00.34 | Containment box structure installation for RH cabin vibration damper | 53-00 | 2011.05.26 |

**End of the Document Unit**

# 05-10-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 22 | AUTO FLIGHT |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 35 | OXYGEN |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 71 | TOWER PLANT |
| ATA 80 | ENGINE STARTING |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

21/51/20/000/000/000

**Freon air conditioning system - Compressor**

| | | | |
|---|---|---|---|
| 5-AS350-34 | (-) | 1200 FH | *0* |

21/51/20/000/000/010

**Freon air conditioning system - Compressor**

| | | | |
|---|---|---|---|
| 350A500-5 | (-) | 1200 FH | *120 FH* |

## 22 - AUTO FLIGHT

### 22-10 OPT - TRIM ACTUATOR DETECTION

22/10/00/000/000/000

**Autopilot system - Trim actuator**

| | | | |
|---|---|---|---|
| 418-00529-102 | (704A47132042) | 5000 FH | *0* |

Effective for the autopilot system fitted with a failure damping unit.

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-63 HOISTS ELECTRICAL

25/63/00/000/000/056

**Electric hoist 136 kg**

| | | | | |
|---|---|---|---|---|
| 76370-110 | (704A41815032) | | 48 M | *146 D* |
| 76370-111 | (704A41815033) | // | 1500 HC | *150 HC* |
| 76370-130 | (704A41815035) | | | |
| 76370-130-D | (-) | | | |
| 76370-140-D | (704A41815085) | | | |

*AMM 25-63-10, 4-2*

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.

25/63/00/000/000/058

**Electric hoist 450 lbs**

| | | | | |
|---|---|---|---|---|
| BL2970023 | (704A41815056) | | 60 M | *180 D* |
| | | // | 2000 HC | *200 HC* |

*AMM 25-63-11, 4-2*

BREEZE.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

25/63/00/402/000/000

**Electric hoist 136 kg**

| | | | | | |
|---|---|---|---|---|---|
| BL16600-12<br>BL16600-180-2<br>BL16600-90 | (-)<br>(-)<br>(704A41815019) | 36 M<br>// 2000 HC | TSM | *109 D*<br>*200 HC* |

*AMM 25-63-10, 4-2*

ERC BREEZE.
TSM or General Overhaul.

## 25-80 OPT - SLING AND ACCESSORY

25/80/00/000/000/005

**Load release unit hook**

| | | | | |
|---|---|---|---|---|
| 17149-1 | (704A41811012) | 36 M<br>// 5000 SC | | *90 D*<br>*300 SC* |

*AMM 25-92-00, 4-1*

Storage limit (original package): 60 M.

## 25-81 OPT - SWING AND ACCESSORY

25/81/11/000/000/000

**Load release unit hook**

| | | | | |
|---|---|---|---|---|
| AS21-5-7 | (704A41811029) | 60 M<br>// 1500 SC | | *180 D*<br>*150 SC* |

*AMM 25-91-01, 4-1*

1 load release, load touching the ground = 1 SC.
1 load release in flight (load not touching the ground) = 3 SC.
1 load release without using the cargo hook = 0 SC.
Absolute limit for being sent for overhaul: 120 M (TSM).
Storage limit (original package): 60 M.

25/81/12/000/000/000

**1400 kg cargo swing - Onboard load release unit**

| | | | | |
|---|---|---|---|---|
| 52802351 | (704A41811035) | 60 M<br>// 1000 OPH | | *180 D*<br>*100 OPH* |

OPH = Operating hours logged with underslung loads.
Apply a factor of 2 to the operating hours (OPH) logged in the following conditions:
- Sand-laden and/or dust-laden atmosphere,
- Logging operation,
- Load above 1200 kg (2646 lbs).

Absolute limit for being sent for overhaul: 120 M (TSM).
Storage limit (original package): 60 M.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

## 35 - OXYGEN

### 35-30 OXYGEN

35/30/00/000/000/000

**Oxygen cylinder**

| | | | | |
|---|---|---|---|---|
| GLF311-1 | (-) | 60 M | TSM | *0* |

*CMM 35.30.01*

Proof test.
To be returned to the manufacturer or to an approved workshop.

## 63 - ROTOR DRIVE (S)

### 63-20 MAIN GEARBOX

63/20/00/000/000/250

**Bevel reduction gear**

| | | | |
|---|---|---|---|
| 350A32-0310-00 | (-) | 2000 FH | *200 FH* |
| 350A32-0310-01 | (-) | // 288 M | *180 D* |

*AMM 63-21-00, 4-7*

63/20/00/000/000/253

**Bevel reduction gear**

| | | | |
|---|---|---|---|
| 350A32-0310-02 | (-) | 3000 FH | *300 FH* |
| | | // 288 M | *180 D* |

*AMM 63-21-00, 4-7*

63/20/00/000/000/254

**Bevel reduction gear**

| | | | |
|---|---|---|---|
| 350A32-0350-02 | (-) | 3000 FH | *300 FH* |
| | | // 288 M | *180 D* |

*AMM 63-21-00, 4-7*

OP 3082: Twin hydraulic system.

63/20/00/000/000/257

**Bevel reduction gear**

| | | | |
|---|---|---|---|
| 350A32-0350-00 | (-) | 2000 FH | *200 FH* |
| | | // 288 M | *180 D* |

*AMM 63-21-00, 4-7*

OP 3082: Twin hydraulic system.

63/20/00/000/000/320

**Epicyclic reduction gear**

| | | | |
|---|---|---|---|
| 350A32-0120-00 | (-) | 3000 FH | *300 FH* |
| | | // 288 M | *180 D* |

*AMM 63-21-00, 4-7*

| Task Number<br>Description/Remarks | MP/N (PN) | | Type of limit: TBO | Margin |
|---|---|---|---|---|
| 63/20/00/000/000/435<br>**Oil pump** | 350A32-0400-00 | (-) | 3000 FH<br>// 288 M | *300 FH*<br>*180 D* |
| *AMM 63-21-00, 4-4*<br>PRE MOD 077175 | | | | |
| 63/20/00/000/000/445<br>**Oil pump** | 350A32-0400-00 | (-) | 3500 FH<br>// 288 M | *300 FH*<br>*180 D* |
| *AMM 63-21-00, 4-4*<br>POST MOD 077175 | | | | |
| 63/20/00/000/000/550<br>**Free wheel unit** | 0.292.90.020.0 | (704A43622004) | 4000 FH | *0* |

## 65 - TAIL ROTOR DRIVE

### 65-20 TAIL GEARBOX

| | | | | |
|---|---|---|---|---|
| 65/20/00/000/000/125<br>**TGB** | 350A33-0200-06 | (-) | 3000 FH<br>// 288 M | *300 FH*<br>*180 D* |
| *AMM 65-21-00, 4-1*<br>Must not be installed on helicopters with optional all-up weight extension installation: OP 3369. | | | | |
| 65/20/00/000/000/330<br>**TGB** | 350A33-0200-07<br>350A33-0210-00 | (-)<br>(-) | 3000 FH<br>// 288 M | *300 FH*<br>*180 D* |
| *AMM 65-21-00, 4-1* | | | | |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

67/30/00/402/000/000

**Servocontrol, main**

| | | | | |
|---|---|---|---|---|
| SC5081 | (704A44831123) | 3000 FH | | 300 FH |
| SC5081-1 | (704A44831137) | // 240 M | TSM | 180 D |
| SC5081-2 | (704A44831159) | | | |
| SC5082 | (704A44831124) | | | |
| SC5082-1 | (704A44831136) | | | |
| SC5082-2 | (704A44831160) | | | |
| SC5083 | (704A44831141) | | | |
| SC5083-1 | (704A44831161) | | | |
| SC5084 | (704A44831140) | | | |
| SC5084-1 | (704A44831162) | | | |

*AMM 67-32-00, 4-1*

TSM or General Overhaul.

67/30/00/402/000/025

**Servocontrol, main**

| | | | | |
|---|---|---|---|---|
| SC8042 | (704A44831102) | 3000 FH | | 300 FH |
| SC8043 | (704A44831103) | // 240 M | TSM | 180 D |

*AMM 67-31-00, 4-1*

TSM or General Overhaul.
POST OP 3082 or POST OP 3346: Installation of a twin hydraulic power system.

67/30/00/402/000/040

**Servocontrol, main**

| | | | | |
|---|---|---|---|---|
| AC64182 | (704A44831062) | 1800 FH | | 180 FH |
| AC66442 | (704A44831065) | // 240 M | TSM | 180 D |
| AC67030 | (704A44831093) | | | |
| AC67034 | (704A44831095) | | | |
| AC67244 | (704A44831112) | | | |
| AC67246 | (704A44831113) | | | |

*AMM 67-32-00, 4-1*

TSM or General Overhaul.

67/30/00/403/000/000

**Servocontrol, tail**

| | | | | |
|---|---|---|---|---|
| SC5071 | (704A44831125) | 3000 FH | | 300 FH |
| SC5071-1 | (704A44831138) | // 240 M | TSM | 180 D |
| SC5072 | (704A44831142) | | | |

*AMM 67-33-00, 4-1*

TSM or General Overhaul.

67/30/00/403/000/031

**Servocontrol, tail**

| | | | | |
|---|---|---|---|---|
| AC66436 | (704A44831063) | 1800 FH | | 180 FH |
| AC67032MOD2 | (704A44831094) | // 240 M | TSM | 180 D |
| AC67032MOD6 | (704A44831115) | | | |

*AMM 67-33-00, 4-1*

TSM or General Overhaul.

| Task Number<br>Description/Remarks | MP/N (PN) | | Type of limit: TBO | | Margin |
|---|---|---|---|---|---|
| 67/30/00/403/000/033<br>**Servocontrol, tail** | AC67032 | (704A44831094) | 1800 FH<br>// 240 M | TSM | *180 FH*<br>*180 D* |
| *AMM 67-33-00, 4-1*<br>TSM or General Overhaul.<br>Effective for any modification to the servocontrol. | | | | | |

## 71 - TOWER PLANT

### 71-61 OPT - SAND-FILTER

| | | | | |
|---|---|---|---|---|
| 71/61/01/601/000/020<br>**Sand filter** | QB0390<br>QB0550<br>QB0550-01 | (350A54022901)<br>(704A41650010)<br>(-) | 120 M | *180 D* |

## 80 - ENGINE STARTING

### 80-00 STARTING

| | | | | |
|---|---|---|---|---|
| 80/00/00/000/000/000<br>**Starter generator** | 515-030<br>524-031 | (704A46101018)<br>(704A46101011) | 2400 FH | *100 FH* |
| *AMM 24-31-00, 4-1* | | | | |
| 80/00/00/402/000/050<br>**Starter generator** | 150SG122Q | (704A46101020) | 1600 FH | *160 FH* |
| *AMM 24-31-00, 4-1* | | | | |
| 80/00/00/402/000/070<br>**Starter generator** | 200SGL130Q | (704A46101023) | 1200 FH | *120 FH* |
| *AMM 24-31-00, 4-1* | | | | |

**End of the Document Unit**

# 05-11-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 28 | FUEL SYSTEM |
| ATA 33 | LIGHTING SYSTEM |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |

**End of the Document Unit**

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

# 21 - AIR CONDITIONING

## 21-51 AIR CONDITIONING

21/51/20/000/000/015

**Freon air conditioning system - Poly "V" belt**

| | | | | | |
|---|---|---|---|---|---|
| 5PK668 | (-) | 72 | M | | *180 D* |

21/51/20/000/000/020

**Freon air conditioning system - Belt**

| | | | | | |
|---|---|---|---|---|---|
| 451400003 | (-) | 1200 | FH | | *120 FH* |
| | // | 72 | M | | *180 D* |

# 25 - EQUIPMENTS AND FURNISHINGS

## 25-00 EQUIPMENT AND FURNISHING

25/00/00/000/000/000

**Belt and harness - Strap**

| | | | | | |
|---|---|---|---|---|---|
| ALL MP/N | (-) | 120 | M | TSM | *180 D* |

OTL for belt straps and harness pilot/copilot/passengers/operator.
It is advisable to record the follow up of this equipment in the aircraft log book.

## 25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/10/401/000/060

**Cylinder**

| | | | | | |
|---|---|---|---|---|---|
| 200740-0 | (-) | 180 | M | TSM | *0* |
| 200740-1 | (-) | | | | |
| 200740-2 | (704A42693012) | | | | |

Return the equipment to an approved repairer for General Overhaul and replacement of the bare cylinder.

25/62/10/401/000/090

**Float, LH**

| | | | | | |
|---|---|---|---|---|---|
| 200733-0 | (-) | 120 | M | TSM | *0* |
| 218569-0 | (-) | | | | |

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/120

**Float, RH**

| | | | | | |
|---|---|---|---|---|---|
| 200734-0 | (-) | 120 | M | TSM | *0* |
| 218570-0 | (-) | | | | |

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/130

**RH outer cover**

| | | | | | |
|---|---|---|---|---|---|
| 200736-0 | (-) | 120 | M | TSM | *180 D* |
| 218572-0 | (-) | | | | |

*AMM 25-67-00, 4-1*

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

25/62/10/401/000/140

**LH outer cover**

| | | | | | | |
|---|---|---|---|---|---|---|
| 200735-0 | (-) | 120 | M | TSM | *180 D* |
| 218571-0 | (-) | | | | |

*AMM 25-67-00, 4-1*

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

## 25-63 HOISTS ELECTRICAL

25/63/00/000/000/026

**Electric hoist 136 kg - Cable**

| | | | | | | |
|---|---|---|---|---|---|---|
| 709628 | (-) | | 24 | M | TSI | *0* |
| 709628-100 | (-) | // | 84 | M | TSM | *0* |
| 710656 | (-) | // | 500 | HC | | *0* |
| 710656-100 | (-) | | | | | |
| BL7505 | (-) | | | | | |

*CMM 25.64.97*

Tropical and damp atmosphere
Salt-laden atmosphere
Sand-laden and/or dust-laden atmosphere

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM in original package.

25/63/00/000/000/029

**Electric hoist 136 kg - Cable**

| | | | | | | |
|---|---|---|---|---|---|---|
| 709628 | (-) | | 48 | M | TSI | *0* |
| 709628-100 | (-) | // | 108 | M | TSM | *0* |
| 710656 | (-) | // | 500 | HC | | *0* |
| 710656-100 | (-) | | | | | |
| BL7505 | (-) | | | | | |

*CMM 25.64.97*

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM in original package.

25/63/00/000/000/035

**Electric hoist 450 lbs - Cable**

| | | | | | | |
|---|---|---|---|---|---|---|
| BL12606-1 | (-) | | 500 | HC | | *0* |

*CMM 25.61.00*

BREEZE.

25/63/00/000/000/040

**Electric hoist 136 kg - Pyrotechnic cartridge**

| | | | | | | |
|---|---|---|---|---|---|---|
| 20CF4D | (-) | | 36 | M | TSI | *0* |
| BL7811 | (-) | // | 60 | M | TSM | *0* |
| Y-1265-12-1 | (-) | | | | | |

*AMM 25-63-10, 4-3*

EQUIPEMENT/TRW/GOODRICH for MP/N 20CF4D.
ERC BREEZE for MP/N BL7811 & MP/N Y-1265-12-1.
TSM in original package.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

25/63/00/402/000/025

**Electric hoist 450 lbs - Pyrotechnic cartridge**

| | | | | | | |
|---|---|---|---|---|---|---|
| Y126581 | (704A38710039) | 36 | M | TSI | 0 |
| | | // 108 | M | TSM | 0 |

*AMM 25-63-11, 4-3*

BREEZE.
TSM in original package.

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

25/66/00/000/000/005

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| JE2-1978-3 | (N6742450122) | | ED | | 0 |
| JE2-1978-3NG | (-) | | | | |

JOLLIET JE2/JE2NG.
NOTE: Replacement of dry-cell unit for all transmissions exceeding 1 hour.

25/66/00/000/000/025

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| 56995-0101 | (-) | | ED | | 0 |
| | | // 1 | OPH | | 0 |

ELT 910 NARCO.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/00/000/000/060

**Battery**

| | | | | | |
|---|---|---|---|---|---|
| 810-418A | (-) | 24 | M | TSM | 0 |

N15F210B DUKANE.

25/66/00/000/000/070

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| ELT90A2560102001 | (-) | 48 | M | TSM | 0 |
| | | // 1 | OPH | | 0 |

*CMM 25.61.02*

ELT 96-406 SOCATA. MP/N ELT96A2560000000.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/34/000/000/000

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| S1820516-99 | (-) | | ED | | 0 |
| | | // 1 | OPH | | 0 |

*CMM 25.63.05*

KANNAD 406 AF.
KANNAD 121AF-H.
KANNAD 406AF-H.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

## 26 - FIRE PROTECTION

### 26-22 OPT - EXTINGUISHER, FIRE, CABIN

26/22/00/000/000/000

**Cabin fire extinguisher**

| | | | | | | |
|---|---|---|---|---|---|---|
| H1 | (704A32810007) | 120 | M | TSM | 0 |
| H1-0150101S | (704A32810009) | | | | |
| H1-10 | (704A32810003) | | | | |
| H1-10AIR | (704A32810008) | | | | |
| H1-CODE0150101A | (704A32810009) | | | | |
| P2H | (704A32810006) | | | | |

26/22/01/000/000/000

**Cabin fire extinguisher**

| | | | | | | |
|---|---|---|---|---|---|---|
| PLA863520-00 | (T262M50T0002) | 60 | M | TSM | 0 |

## 28 - FUEL SYSTEM

### 28-41 INDICATING

28/41/00/000/000/010

**Digital flowmeter - Battery**

| | | | | | | |
|---|---|---|---|---|---|---|
| LS210PS30 | (-) | | 24 | M | TSI | 73 D |
| PS30 | (-) | // | 36 | M | TSM | 109 D |
| PS30LS210 | (-) | | | | | |

FAURE/HERMANN.

## 33 - LIGHTING SYSTEM

### 33-45 OPT - SEARCHLIGHT

33/45/03/000/000/000

**Searchlight - Gimbal**

| | | | | | |
|---|---|---|---|---|---|
| 019059-XX | (-) | 84 | M | | 180 D |
| 021716-XX | (-) | | | | |

SPECTROLAB SX16.

33/45/03/000/000/010

**Searchlight - Gimbal**

| | | | | | |
|---|---|---|---|---|---|
| 022955-XX | (-) | 120 | M | | 180 D |

SPECTROLAB SX16.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

## 62 - ROTOR (S)

### 62-30 MAIN ROTOR MAST

62/30/00/000/000/230

**Swashplate - 4 contacts bearing**

| | | | |
|---|---|---|---|
| 121620<br>Y51BB10843S2M74 | (704A33651157)<br>(704A33651158) | 4800 FH | *300 FH* |

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/150

**Hydraulic pump - Belt**

| | | | |
|---|---|---|---|
| FILONTYPEFO<br>ULTRALUGTYPEL1 | (704A33690004)<br>(704A33690003) | 600 FH | *0* |

63/10/00/000/000/160

**Hydraulic pump - Poly "V" belt**

| | | | |
|---|---|---|---|
| POLY-V 597K4 | (-) | 1800 FH<br>// 72 M | *180 FH*<br>*180 D* |

63/10/00/000/000/180

**Hydraulic pump - Drive bearing**

| | | | |
|---|---|---|---|
| 593733<br>AB13547S1<br>F-594448<br>TTS6225 | (704A33651206)<br>(704A33651208)<br>(-)<br>(704A33651207) | 3600 FH<br>// 72 M | *300 FH*<br>*180 D* |

### 63-20 MAIN GEARBOX

63/20/00/000/000/045

**Oil filter - Filter element**

| | | | |
|---|---|---|---|
| CH48108<br>FA01315A | (-)<br>(7050A3632296) | 600 FH<br>// 24 M | *60 FH*<br>*73 D* |

63/20/00/000/000/560

**Free wheel**

| | | | |
|---|---|---|---|
| 9.560.90.123.0 | (-) | 4000 FH | *0* |

Fitted to the assembly free wheel: MP/N 0.292.90.020.0.

63/20/00/000/000/570

**Front ball bearing of free wheel**

| | | | |
|---|---|---|---|
| 9.606.65.100.1 | (-) | 4000 FH | *0* |

Fitted to the assembly free wheel: MP/N 0.292.90.020.0.

63/20/00/000/000/580

**Rear ball bearing of free wheel**

| | | | |
|---|---|---|---|
| 9.606.68.100.1 | (-) | 4000 FH | *0* |

Fitted to the assembly free wheel: MP/N 0.292.90.020.0.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

63/20/00/000/000/590

**Rear ball bearing of the assembly free wheel**

| | | | |
|---|---|---|---|
| 9.606.49.060.6 | (-) | 4000 FH | *0* |

Fitted to the assembly free wheel: MP/N 0.292.90.020.0.

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE

65/10/00/000/000/100

**Tail rotor drive shaft - Greasable bearing**

| | | | |
|---|---|---|---|
| 593404 | (704A33651181) | 3600 FH | *300 FH* |
| 83A851BC3 | (704A33651143) | // 60 M | *180 D* |
| P9107NPP7 | (704A33651111) | | |

*AMM 65-11-00, 4-1*
*AMM 65-11-00, 4-5*

### 65-20 TAIL GEARBOX

65/20/00/000/000/305

**TRH pitch change unit - Greasable bearing**

| | | | |
|---|---|---|---|
| 704A33-651-210 | (-) | 3000 FH | *300 FH* |

65/20/00/000/000/315

**TRH pitch change unit - Bearing**

| | | | |
|---|---|---|---|
| 6010-2RS1MT33CA | (704A33651003) | 2700 FH | *270 FH* |

*AMM 65-21-00, 4-9*

The pitch change unit bearing is to be replaced during TGB General Overhaul.

**End of the Document Unit**

# 05-12-00

| D.U. | TITLE |
|---|---|
| ATA 24 | ELECTRICAL POWER |
| ATA 28 | FUEL SYSTEM |
| ATA 34 | NAVIGATION |
| ATA 35 | OXYGEN |
| ATA 47 | WEAPONS ELECTRONICS |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |

**End of the Document Unit**

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | |
|---|---|---|
| 24/31/00/000/000/005<br>**Battery** | 150CH-1 | (7050A4243027) |
| 24/31/00/000/000/008<br>**Battery** | 151CH-1 | (7050A4243040) |

## 28 - FUEL SYSTEM

### 28-20 FUEL DISTRIBUTION

| | | |
|---|---|---|
| 28/20/00/000/000/042<br>**Fuel pump** | P94B12-209 | (704A44510042) |

## 34 - NAVIGATION

### 34-25 GYRO HORIZON

| | | |
|---|---|---|
| 34/25/00/000/000/020<br>**Stand-by battery** | EE0033<br>EE0033A | (704A46140000)<br>(704A46140000) |

## 35 - OXYGEN

### 35-30 OXYGEN

| | | |
|---|---|---|
| 35/30/00/000/000/020<br>**Oxygen mask** | MRAM-019 | (704A42210007) |

## 47 - WEAPONS ELECTRONICS

### 47-50 FLIR INSTALLATION

| | | |
|---|---|---|
| 47/50/10/000/000/010<br>**Flir** | 3205562 | (-) |

Star SAFIRE II.
Replacement of the turret desiccant cartridge.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

## 62 - ROTOR (S)

### 62-20 MAIN ROTOR HEAD

62/20/00/403/000/006

**Vibration damper, spring type**

| | |
|---|---|
| 350A31-0033-06 | (-) |

If the vibration level deteriorates, check the anti-vibrator as per task 62-21-00, 6-11 (AMM).

### 62-30 MAIN ROTOR MAST

62/30/00/000/000/015

**Main rotor shaft**

| | |
|---|---|
| 350A37-0004-02 | (-) |

62/30/00/000/000/020

**Main rotor shaft**

| | |
|---|---|
| 355A37-0006-00 | (-) |

OP 3082: Twin hydraulic system.

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/035

**Engine-to-MGB coupling assembly**

| | |
|---|---|
| ALL MP/N | (-) |

### 63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/070

**MGB suspension cross bar**

| | |
|---|---|
| ALL MP/N | (-) |

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

64/10/00/000/000/005

**Tail rotor assy**

| | |
|---|---|
| ALL MP/N | (-) |

64/10/00/000/000/020

**Tail rotor blade - Laminated pitch half-bearing**

| | |
|---|---|
| 579063 | (704A33633116) |
| 579153 | (704A33633261) |
| 704A33-6330-91 | (-) |

Must not be mixed on a tail rotor blade assembly.
Record replacement of laminated half-bearing on the FM of the blade assembly.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

# 65 - TAIL ROTOR DRIVE

## 65-10 TAIL ROTOR DRIVE

65/10/00/000/000/050

**Tail rotor drive shaft assembly**

| | |
|---|---|
| ALL MP/N | (-) |

## 65-20 TAIL GEARBOX

65/20/00/000/000/298

**TRH pitch change unit**

| | |
|---|---|
| 350A33-2004-05 | (-) |
| 350A33-2004-06 | (-) |
| 350A33-2030-00 | (-) |

65/20/00/000/000/420

**TRH laminated hinge**

| | |
|---|---|
| 563-073 | (704A33633078) |

Must not be mixed on the same hub.
Record replacement of laminated hinge on the TGB log card.

65/20/00/000/000/425

**TRH laminated hinge**

| | |
|---|---|
| 579-091 | (704A33633171) |

Must not be mixed on the same hub.
Record replacement of laminated hinge on the TGB log card.
Delivered in pairs: MP/N 350A33-2153-00.

65/20/00/401/000/265

**TRH**

| | |
|---|---|
| 350A33-2119-05 | (-) |

**End of the Document Unit**

# 05-20-00

| D.U. | TITLE |
|---|---|
| ATA 05 | TIME LIMITS/MAINTENANCE CHECKS |
| ATA 65 | TAIL ROTOR DRIVE |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

**BFF**
**TA**
**ALF**

## 05 - TIME LIMITS/MAINTENANCE CHECKS

## 05-21 DAILY CHECK

| | |
|---|---|
| 05/21/00/601/000/000<br>**Check before the first flight of the day (BFF)**<br>*AMM 05-40-00, 6-4* *0*<br>VC.<br>Note: Maintenance operations can be carried out by an aircrew member, aircraft commander or flight engineer. | |
| 05/21/00/602/000/000<br>**Turnaround check (TA)**<br>*AMM 05-40-00, 6-5* *0*<br>VC.<br>Note: Maintenance operations can be carried out by an aircrew member, aircraft commander or flight engineer. | |
| 05/21/00/603/000/000<br>**Check after the last flight of the day (ALF)**<br>*AMM 05-40-00, 6-6* *0*<br>GVI.<br>Note: Maintenance operations can be carried out by an aircrew member, aircraft commander or flight engineer. | |
| 05/21/00/604/000/000<br>**Inspection of optional equipment**<br>*AMM 05-40-00, 6-2*<br>DI, FT. | |
| 05/21/00/605/000/000<br>**Daily check in cold weather**<br>*AMM 05-40-00, 6-3*<br>GVI, FT, GR. | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 65 - TAIL ROTOR DRIVE

## 65-20 TAIL GEARBOX

| | |
|---|---|
| 65/20/00/000/000/382<br>**TRH pitch change unit - Baffle/Spacer (ALF)**<br>*AMM 05-40-00, 6-6* *0*<br>POST MOD 076554 & PRE MOD 076550<br>GVI.<br>Paint index marks alignment check.<br>Note: Maintenance operations can be carried out by an aircrew member, aircraft commander or flight engineer. | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-20-01

| D.U. | TITLE |
|---|---|
| ATA 62 | ROTOR (S) |
| ATA 64 | TAIL ROTOR |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 10 FH

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

| | |
|---|---|
| 62/10/20/601/000/020<br>**Main rotor blade**<br>*AMM 62-11-00, 6-3* *1 FH*<br>GVI.<br>Sand-laden and/or dust-laden atmosphere<br>Check for erosion.<br>In the event of intensive operation in heavily sand-laden areas, all the necessary measures should be taken to ensure optimum operation of the aircraft, if necessary, by shortening the suggested intervals. | |

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | |
|---|---|
| 64/10/00/000/000/220<br>**Tail rotor blade**<br>*AMM 64-10-00, 6-1* *1 FH*<br>GVI.<br>Sand-laden and/or dust-laden atmosphere<br>Check for erosion.<br>In the event of intensive operation in heavily sand-laden areas, all the necessary measures should be taken to ensure optimum operation of the aircraft, if necessary, by shortening the suggested intervals. | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-21-00

| D.U. | TITLE |
|---|---|
| ATA 63 | ROTOR DRIVE (S) |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 150 FH // 12 M

## 63 - ROTOR DRIVE (S)

## 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | |
|---|---|---|---|
| 63/10/00/000/000/060<br>**Flexible coupling**<br>VC.<br>Visual check. | *AMM 63-11-00, 6-18* | *15 FH*<br>*36 D* | |
| 63/10/00/000/000/065<br>**Hydraulic pump**<br>DI.<br>Drive-belt and bearing check. | *AMM 63-11-00, 6-2*<br>*AMM 63-11-00, 6-15* | *15 FH*<br>*36 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-21-01

| D.U. | TITLE |
|---|---|
| ATA 29 | HYDRAULIC POWER |
| ATA 53 | FUSELAGE |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 71 | TOWER PLANT |
| ATA 76 | ENGINE CONTROLS |
| ATA 77 | ENGINE INDICATING |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|

## 150 FH

## 29 - HYDRAULIC POWER

### 29-10 MAIN HYDRAULIC SINGLE GENERATION

| | | | |
|---|---|---|---|
| 29/10/10/501/000/000<br>**Single hydraulic generation system - Servocontrol**<br>POST MOD 073263<br>DI.<br>Check of the electrical system part. | *AMM 29-10-00, 5-1* | *15 FH* | |

## 53 - FUSELAGE

### 53-10 CANOPY

| | | | |
|---|---|---|---|
| 53/10/00/000/000/080<br>**Transmission deck**<br>CLN, GVI.<br>Check. | *AMM 53-10-00, 6-1* | *15 FH* | |
| 53/10/01/000/000/000<br>**Tail rotor drive shaft bearing bracket mounts**<br>GVI.<br>Visual check of the bearing bracket mounts. | *AMM 53-31-00, 6-4* | *15 FH* | |

## 62 - ROTOR (S)

### 62-20 MAIN ROTOR HEAD

| | | | |
|---|---|---|---|
| 62/20/00/000/000/190<br>**Starflex star**<br>GVI.<br>Checking the central area. | *AMM 62-21-00, 6-1* | *15 FH* | |
| 62/20/00/000/000/195<br>**Starflex star - Bush and swivel bearing**<br>DI.<br>Visual check and radial play check. | *AMM 62-21-00, 6-2* | *15 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 63 - ROTOR DRIVE (S)

### 63-20 MAIN GEARBOX

| | | |
|---|---|---|
| 63/20/00/000/000/065<br>**Spectrometric Oil Analysis Program (SOAP)**<br>*AMM 60-00-00, 6-1*<br>SDI.<br>The sample must be taken during the inspection nearest to each due time.<br>Oil monitoring using SOAP is optional. | *15 FH* | |

### 63-30 MGB MOUNT AND ATTACHMENT

| | | |
|---|---|---|
| 63/30/00/000/000/100<br>**MGB suspension cross bar**<br>*AMM 63-31-00, 6-5*<br>GVI.<br>Check of laminated stops without removal. | *15 FH* | |

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE

| | | |
|---|---|---|
| 65/10/00/000/000/003<br>**Tail rotor drive shaft**<br>*AMM 65-11-00, 6-1*<br>*AMM 65-11-00, 6-13*<br>*AMM 65-11-00, 6-14*<br>*AMM 65-11-00, 6-15*<br>*AMM 65-21-00, 6-20*<br>GVI.<br>Condition check. | *15 FH* | |

### 65-20 TAIL GEARBOX

| | | |
|---|---|---|
| 65/20/00/000/000/055<br>**Spectrometric Oil Analysis Program (SOAP)**<br>*AMM 60-00-00, 6-1*<br>SDI.<br>The sample must be taken during the inspection nearest to each due time.<br>Oil monitoring using SOAP is optional. | *15 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 71 - TOWER PLANT

### 71-61 OPT - SAND-FILTER

| | | | |
|---|---|---|---|
| 71/61/01/601/000/010<br>**Sand filter**<br>FT.<br>Checking the sand filter installation indication on the VEMD. | *AMM 71-61-10, 5-1* | *15 FH* | |

## 76 - ENGINE CONTROLS

### 76-00 ENGINE CONTROLS

| | | | |
|---|---|---|---|
| 76/00/00/000/000/030<br>**Engine fuel flow control - Twist grip**<br>POST MOD 073222<br>FT.<br>Functional check of the solenoid of the twist grip. | *AMM 76-12-02, 6-1* | *15 FH* | |

## 77 - ENGINE INDICATING

### 77-00 ENGINE INDICATING

| | | | |
|---|---|---|---|
| 77/00/00/601/000/000<br>**FADEC unit**<br>FT.<br>FADEC self-test. | *AMM 73-20-00, 6-1* | *15 FH* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-21-02

| D.U. | TITLE |
|---|---|
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 34 | NAVIGATION |
| ATA 35 | OXYGEN |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 12 M

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | |
|---|---|---|---|
| 24/31/00/000/000/060<br>**Battery**<br>150CH-1<br>DI.<br>Check. | (7050A4243027) | *CMM 24.33.96*<br>*CHECK § 2.C* | *36 D* | |
| 24/31/00/000/000/065<br>**Battery**<br>151CH-1<br>DI.<br>Check. | (7050A4243040) | *CMM 24.33.96*<br>*CHECK § 2.C* | *36 D* | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-62 OPT - EMERGENCY FLOATATION GEAR

| | | | |
|---|---|---|---|
| 25/62/00/000/000/010<br>**Emergency floatation gear**<br>200733-0<br>200734-0<br>GVI, FT.<br>12M: TSM interval.<br>Maintenance. | (-)<br>(-) | *CMM 25.69.08*<br>*CHECK § 4* | *36 D* | |
| 25/62/00/000/000/070<br>**Emergency floatation gear frangible discs**<br>DI.<br>Test.<br>Check to be performed on and from initial installation. | | *AMM 25-67-00, 5-2* | *36 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 25/62/00/000/000/080<br>**Cylinder**<br>200740-0 (-)<br>200740-1 (-)<br>200740-2 (704A42693012)<br>DI, WGH.<br>Cylinders weighing operation or pressure check.<br>Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0 and 218570-0.<br>Interval between 2 weighing operations or pressure check.<br>Check to be performed on and from initial installation. | *CMM 25.69.11*<br>*CHECK § 2* | *36 D* | |
| 25/62/00/000/000/100<br>**Emergency floatation gear**<br>218569-0 (-)<br>218570-0 (-)<br>DI, FT.<br>12M: TSM interval.<br>Maintenance. | *CMM 25.69.40*<br>*CHECK § 4* | *36 D* | |

## 25-69 LIFE-RAFT

| | | | |
|---|---|---|---|
| 25/69/10/401/000/010<br>**Life-raft**<br>210155-X (-)<br>DI, FT, WGH.<br>Check, life raft tightness testing, cylinder weighing. | *CMM 25.64.01* | *36 D* | |

## 25-81 OPT - SWING AND ACCESSORY

| | | | |
|---|---|---|---|
| 25/81/12/000/000/030<br>**Onboard load release unit**<br>CLN, GVI.<br>Cleaning and checking. | *CMM 25.50.99* | *36 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 26 - FIRE PROTECTION

### 26-22 OPT - EXTINGUISHER, FIRE, CABIN

| | | | |
|---|---|---|---|
| 26/22/01/000/000/020<br>**Cabin fire extinguisher**<br>PLA863520-00 (T262M50T0002)<br>WGH.<br>12M: TSM interval.<br>Weighing. | *AMM 26-21-00, 6-2* | *36 D* | |

## 34 - NAVIGATION

### 34-25 GYRO HORIZON

| | | | |
|---|---|---|---|
| 34/25/00/000/000/010<br>**Stand-by horizon - Stand-by battery**<br>EE0033 (704A46140000)<br>EE0033A (704A46140000)<br>FT.<br>Check and charge the battery. | *AMM 24-33-00, 5-2* | *36 D* | |

## 35 - OXYGEN

### 35-30 OXYGEN

| | | | |
|---|---|---|---|
| 35/30/00/000/000/010<br>**Oxygen mask**<br>MRAM-019 (704A42210007) | *CMM 35.17.16.2* | *36 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-22-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 22 | AUTO FLIGHT |
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 28 | FUEL SYSTEM |
| ATA 29 | HYDRAULIC POWER |
| ATA 30 | ICE AND RAIN PROTECTION |
| ATA 32 | LANDING GEAR |
| ATA 33 | LIGHTING SYSTEM |
| ATA 34 | NAVIGATION |
| ATA 52 | DOORS |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 71 | TOWER PLANT |
| ATA 76 | ENGINE CONTROLS |
| ATA 77 | ENGINE INDICATING |
| ATA 79 | ENGINE OIL |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 600 FH // 24 M

## 21 - AIR CONDITIONING

### 21-21 VENTILATION/DEMISTING

| | | | |
|---|---|---|---|
| 21/21/00/000/000/000<br>**Heating pipe**<br>DI.<br>P2 installation.<br>Check of the condition of the heat insulation and to make sure that there is no corrosion on the visible parts.<br>If necessary, replace the pipes in accordance with task 21-21-00, 4-2 (AMM). | *AMM 21-21-00, 6-1* | *60 FH*<br>*73 D* | |

## 22 - AUTO FLIGHT

### 22-10 OPT - TRIM ACTUATOR DETECTION

| | | | |
|---|---|---|---|
| 22/10/00/000/000/020<br>**Autopilot system**<br>DI.<br>System check. | *AMM 22-00-02, 6-1* | *60 FH*<br>*73 D* | |

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | |
|---|---|---|---|
| 24/31/00/000/000/010<br>**Battery temperature sensor**<br>FT.<br>Battery temperature test warning. | *AMM 24-33-00, 5-1* | *60 FH*<br>*73 D* | |
| 24/31/00/000/000/090<br>**Electrical power**<br>DI.<br>Check:<br>- battery,<br>- electrical master box,<br>- starter generator-ground power receptacle. | *AMM 24-00-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

# 25 - EQUIPMENTS AND FURNISHINGS

## 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/040<br>**Pilot and copilot seats**<br>DI.<br>Play check. | *AMM 25-21-00, 6-1* | *60 FH*<br>*73 D* | |

## 25-62 OPT - EMERGENCY FLOATATION GEAR

| | | | |
|---|---|---|---|
| 25/62/00/000/000/060<br>**Emergency floatation gear**<br>GVI, FT.<br>System check. | *AMM 25-67-00, 5-1* | *60 FH*<br>*73 D* | |

## 25-63 HOISTS ELECTRICAL

| | | | |
|---|---|---|---|
| 25/63/00/601/000/000<br>**Electric hoist**<br>DI.<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH/ERC BREEZE.<br>System check. | *AMM 25-63-10, 6-1*<br>*AMM 25-63-11, 6-1* | *60 FH*<br>*73 D* | |

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

| | | | |
|---|---|---|---|
| 25/66/00/000/000/015<br>**Emergency locator transmitter**<br>DI.<br>JOLLIET JE2/JE2NG.<br>On board system check. | *AMM 25-66-04, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 25/66/00/000/000/035<br>**Emergency locator transmitter**<br>DI.<br>ELT 910 NARCO.<br>Installation check. | *AMM 25-66-07, 6-1* | *60 FH*<br>*73 D* | |
| 25/66/00/000/000/130<br>**Emergency locator transmitter**<br>ELT96A2560000000 (704A45737043)<br>DI, FT.<br>SOCATA.<br>Check. | *AMM 25-66-08, 6-1* | *60 FH*<br>*73 D* | |
| 25/66/34/000/000/030<br>**Emergency locator transmitter**<br>DI, FT.<br>KANNAD 406 AF.<br>KANNAD 121 AF-H.<br>KANNAD 406 AF-H.<br>Installation check. | *AMM 25-66-02, 6-1* | *60 FH*<br>*73 D* | |

## 25-80 OPT - SLING AND ACCESSORY

| | | | |
|---|---|---|---|
| 25/80/00/000/000/009<br>**Load release unit hook**<br>17149-1 (704A41811012)<br>RIG.<br>Dynamometer calibration. | *AMM 25-92-00, 5-3* | *60 FH*<br>*73 D* | |

## 25-81 OPT - SWING AND ACCESSORY

| | | | |
|---|---|---|---|
| 25/81/00/000/000/065<br>**Load release unit hook**<br>14027-4 (704A41811013)<br>14027-7 (704A41811030)<br>S1609-6 (704A41811027)<br>RIG.<br>Dynamometer calibration. | *AMM 25-91-00, 5-3* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 25/81/11/000/000/020<br>**Load release unit hook**<br>AS21-5-7 (704A41811029)<br>RIG.<br>Dynamometer calibration. | *AMM 25-91-01, 5-3* | *60 FH*<br>*73 D* | |
| 25/81/12/000/000/050<br>**Onboard load release unit**<br>RIG.<br>Dynamometer calibration. | *AMM 25-91-01, 5-3* | *60 FH*<br>*73 D* | |

## 26 - FIRE PROTECTION

### 26-10 FIRE DETECTION

| | | | |
|---|---|---|---|
| 26/10/00/000/000/040<br>**Hermetic fire detector**<br>DI.<br>Condition and continuity check. | *AMM 26-11-00, 6-2* | *60 FH*<br>*73 D* | |

## 28 - FUEL SYSTEM

### 28-00 FUEL SYSTEM

| | | | |
|---|---|---|---|
| 28/00/00/000/000/000<br>**Fuel system**<br>DI.<br>Check. | *AMM 28-00-00, 6-1* | *60 FH*<br>*73 D* | |
| 28/00/00/402/000/000<br>**Fuel system - Tank**<br>DI.<br>Check. | *AMM 28-11-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 28/00/00/502/000/000<br>**Fuel tank**<br>GVI.<br>Checking straps tension. | *AMM 28-11-00, 5-1* | *60 FH*<br>*73 D* | |

## 28-10 FUELING ASSY

| | | | |
|---|---|---|---|
| 28/10/00/000/000/000<br>**Strainer**<br>POST MOD 073034<br>CLN.<br>Cleaning. | *AMM 28-11-00, 4-4* | *60 FH*<br>*73 D* | |
| 28/10/00/000/000/020<br>**Fuel system - Fuel shut-off valve**<br>FT.<br>Functional test. | *AMM 28-21-00, 5-2* | *60 FH*<br>*73 D* | |

## 28-20 FUEL DISTRIBUTION

| | | | |
|---|---|---|---|
| 28/20/00/000/000/035<br>**Fuel filter**<br>FT.<br>Fuel filter pre-clogging indication functional test. | *AMM 28-00-00, 5-1* | *60 FH*<br>*73 D* | |

## 28-40 FUEL CONTROLS AND MONITORING

| | | | |
|---|---|---|---|
| 28/40/00/000/000/010<br>**Capacitive gauges**<br>DI.<br>Check of full and low level. | *AMM 28-41-00, 5-1*<br>*AMM 28-41-00, 5-2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 29 - HYDRAULIC POWER

### 29-00 HYDRAULIC POWER

| | | | |
|---|---|---|---|
| 29/00/00/000/000/020<br>**Hydraulic system**<br>DI.<br>Check of the level and the condition of the tank. | *AMM 29-00-00, 3-3* | *60 FH*<br>*73 D* | |

### 29-10 MAIN HYDRAULIC SINGLE GENERATION

| | | | |
|---|---|---|---|
| 29/10/10/302/000/000<br>**Accumulator**<br>DI, SVC.<br>Test and check. | *AMM 29-00-00, 3-7* | *60 FH*<br>*73 D* | |

## 30 - ICE AND RAIN PROTECTION

### 30-42 WINDSCREEN WIPER

| | | | |
|---|---|---|---|
| 30/42/00/601/000/000<br>**Windshield wiper arm - Attachment**<br>GVI, LUB.<br>Check for absence of axial and vertical play.<br>Lubrication of the windshield wiper arm drive spindle. | *AMM 30-42-00, 6-1* | *60 FH*<br>*73 D* | |

## 32 - LANDING GEAR

### 32-13 SKID LANDING GEAR

| | | | |
|---|---|---|---|
| 32/13/00/601/000/000<br>**Skid landing gear**<br>DI, FT.<br>Check. | *AMM 32-11-00, 6-1*<br>*AMM 32-11-00, 6-4* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 32/13/00/603/000/000<br>**Skid type landing gear**<br>DI.<br>Check attachment points of the hydraulic absorbers. | *AMM 32-11-00, 6-5* | *60 FH*<br>*73 D* | |

## 33 - LIGHTING SYSTEM

### 33-00 LIGHTING SYSTEM

| | | | |
|---|---|---|---|
| 33/00/00/000/000/000<br>**External light**<br>DI.<br>Check of the lighting system. | *AMM 33-00-00, 6-1* | *60 FH*<br>*73 D* | |

## 34 - NAVIGATION

### 34-00 NAVIGATION

| | | | |
|---|---|---|---|
| 34/00/00/000/000/000<br>**Navigation system**<br>DI.<br>Check. | *AMM 34-00-00, 6-1* | *60 FH*<br>*73 D* | |

### 34-21 GYROMAGNETIC COMPASS

| | | | |
|---|---|---|---|
| 34/21/00/000/000/000<br>**Pilot's and copilot's gyroscopic and directional horizon**<br>FT.<br>Test. | *AMM 34-20-00, 5-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 52 - DOORS

### 52-10 CREW AND PASSENGERS DOOR

| | | | |
|---|---|---|---|
| 52/10/00/501/000/000<br>**Crew door**<br>FT.<br>Jettison check. | *AMM 52-11-00, 5-1* | *60 FH*<br>*73 D* | |
| 52/10/00/601/000/000<br>**Crew door**<br>DI.<br>Check. | *AMM 52-11-00, 6-1* | *60 FH*<br>*73 D* | |

### 52-30 CARGO DOOR

| | | | |
|---|---|---|---|
| 52/30/00/000/000/000<br>**Cargo door**<br>DI, FT.<br>Check. | *AMM 52-31-00, 5-1*<br>*AMM 52-31-00, 6-1* | *60 FH*<br>*73 D* | |

### 52-90 SLIDING DOOR

| | | | |
|---|---|---|---|
| 52/90/00/000/000/000<br>**Sliding door**<br>DI.<br>Check. | *AMM 52-12-00, 6-1*<br>*AMM 56-11-00, 6-4* | *60 FH*<br>*73 D* | |
| 52/90/00/000/000/020<br>**Sliding door**<br>DI.<br>Replacement of the rubber washer of the front upper roller.<br>Check of the fuselage. | *AMM 52-12-00, 4-3* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 53 - FUSELAGE

### 53-00 FUSELAGE

| | | | |
|---|---|---|---|
| 53/00/00/000/000/060<br>**Structure**<br>CLN.<br>Cleaning of the helicopter. | *AMM 12-30-00, 3-1* | *60 FH*<br>*73 D* | |
| 53/00/00/601/000/000<br>**Fuselage**<br>DI.<br>Detailed check. | *AMM 53-00-00, 6-1* | *60 FH*<br>*73 D* | |

### 53-10 CANOPY

| | | | |
|---|---|---|---|
| 53/10/00/000/000/010<br>**Windshield**<br>GVI.<br>Check for cracks. | *AMM 56-11-00, 6-2*<br>*AMM 56-11-00, 6-3* | *60 FH*<br>*73 D* | |
| 53/10/00/000/000/070<br>**Cabin vibrator absorber blade support**<br>RTQ, GVI.<br>Check. | *AMM 53-32-00, 6-1* | *60 FH*<br>*73 D* | |
| 53/10/00/000/000/075<br>**Box**<br>POST MOD 073325<br>DI.<br>Check. | *AMM 53-32-00, 6-2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 55 - STABILIZER

### 55-10 HORIZONTAL STABILIZER

| | | | |
|---|---|---|---|
| 55/10/00/000/000/020<br>**Horizontal stabilizer**<br>Check. | *AMM 55-11-00, 6-1* | *60 FH*<br>*73 D* | |

### 55-20 VERTICAL FINS ASSY

| | | | |
|---|---|---|---|
| 55/20/00/000/000/010<br>**Upper and lower fin**<br>GVI, TCK.<br>Check. | *AMM 55-20-00, 6-2* | *0*<br>*0* | |

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

| | | | |
|---|---|---|---|
| 62/10/20/601/000/010<br>**Main rotor blade**<br>DI.<br>Check.<br>Check every 25 FH for 100 FH, if a defect (inside the limits) is found: blade skin separation or blade leading edge stainless steel strip separation, cracks in the stainless steel leading edge. If no development is noted during this period, return to the normal inspection cycle. | *AMM 62-11-00, 6-1* | *60 FH*<br>*73 D* | |

### 62-20 MAIN ROTOR HEAD

| | | | |
|---|---|---|---|
| 62/20/00/000/000/070<br>**MRH**<br>DI.<br>Check with the blades installed. | *AMM 62-21-00, 6-1*<br>*AMM 62-21-00, 6-2*<br>*AMM 62-21-00, 6-3*<br>*AMM 62-21-00, 6-4* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 62/20/00/000/000/075<br>**MRH**<br>DI.<br>Complementary check with the blades removed. | *AMM 62-21-00, 6-5*<br>*AMM 62-21-00, 6-6*<br>*AMM 62-21-00, 6-7*<br>*AMM 62-21-00, 6-8*<br>*AMM 62-21-00, 6-9*<br>*AMM 62-21-00, 6-10* | *60 FH*<br>*73 D* | |

## 62-30 MAIN ROTOR MAST

| | | | |
|---|---|---|---|
| 62/30/00/000/000/030<br>**Pitch change rod**<br>TCK.<br>Tightening torque check. | *AMM 62-33-00, 4-1* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/065<br>**Main rotor shaft**<br>DI, TCK.<br>Check of the apparent higher part. | *AMM 62-31-00, 6-1*<br>*AMM 62-31-00, 6-2*<br>*AMM 62-31-00, 6-4* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/310<br>**Scissor link**<br>TCK.<br>Play check. | *AMM 62-33-00, 6-3* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/330<br>**Diapason scissor link**<br>TCK.<br>Play check. | *AMM 62-33-00, 6-2* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/340<br>**MRH - Upper casing attachment bolts/Flared housing**<br>TCK.<br>Tightening torque check. | *AMM 62-31-00, 4-3* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 62/30/00/601/000/000<br>**Pitch change link**<br>DI.<br>Detailed check. | *AMM 62-33-00, 6-1* | *60 FH*<br>*73 D* | |
| 62/30/00/601/000/010<br>**Swashplate**<br>DI.<br>Check. | *AMM 62-32-00, 6-7* | *60 FH*<br>*73 D* | |

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | |
|---|---|---|---|
| 63/10/00/000/000/000<br>**Hydraulic pump - Spline**<br>POST MOD 079561 & POST MOD 079558<br>LUB.<br>Greasing. | *AMM 63-11-00, 6-3* | *60 FH*<br>*73 D* | |
| 63/10/00/000/000/050<br>**Hydraulic pump - Belt**<br>POST MOD 079555<br>RIG.<br>Tension check. | *AMM 63-11-00, 6-2* | *60 FH*<br>*73 D* | |
| 63/10/00/000/000/080<br>**Hydraulic pump - Bearing**<br>POST MOD 079558 // POST MOD 079566<br>DI, LUB.<br>Check and greasing. | *AMM 63-11-00, 6-15* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|

## 63-20 MAIN GEARBOX

| | | | |
|---|---|---|---|
| 63/20/00/000/000/080<br>**Mineral oil**<br>POST MOD 077174<br>DRN.<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard. | *AMM 12-10-00, 3-1* | *60 FH*<br>*73 D* | |

## 63-23 ROTOR BRAKE

| | | | |
|---|---|---|---|
| 63/23/00/000/000/000<br>**Rotor brake micro switch**<br>DI.<br>Check. | *AMM 63-51-00, 5-1* | *60 FH*<br>*73 D* | |

## 63-30 MGB MOUNT AND ATTACHMENT

| | | | |
|---|---|---|---|
| 63/30/00/000/000/010<br>**Suspension bar**<br>704A33-633-035 (-)<br>704A33-633-036 (-)<br>704A33-633-262 (-)<br>FDT14193 (704A33633074)<br>FDT14194 (704A33633075)<br>DI.<br>Check. | *AMM 63-32-00, 6-1*<br>*AMM 63-32-00, 6-2* | *60 FH*<br>*73 D* | |

## 63-51 ROTOR BRAKE

| | | | |
|---|---|---|---|
| 63/51/00/000/000/000<br>**Rotor brake micro switch**<br>DI.<br>Check. | *AMM 63-51-00, 5-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 63/51/00/000/000/010<br>**Rotor brake - Fuel shut-off ball type control**<br>FT.<br>Test without removal. | *AMM 63-52-00, 5-1* | *60 FH*<br>*73 D* | |
| 63/51/00/000/000/050<br>**Rotor brake**<br>DI.<br>Check. | *AMM 63-51-00, 6-1* | *60 FH*<br>*73 D* | |

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | | | |
|---|---|---|---|
| 64/10/00/000/000/050<br>**Additional tuning weights**<br>DI.<br>Check. | *AMM 64-10-00, 6-1* | *60 FH*<br>*73 D* | |
| 64/10/00/000/000/080<br>**Tail rotor blade**<br>DI.<br>Check with removal the rotors.<br>- Should spar blade delaminate or crack, a check is to be performed every 25 FH over 100 FH.<br>- If bellow distortion is detected, the check must be carried out every 100 FH over 500 FH.<br>If no development is noted during these periods, return to the normal inspection cycle. | *AMM 64-10-00, 6-1*<br>*AMM 64-10-00, 6-2*<br>*AMM 64-10-00, 6-3*<br>*AMM 64-10-00, 6-5* | *10 FH*<br>*73 D* | |
| 64/10/00/000/000/270<br>**Protector**<br>POST MOD OP0478<br>TCK.<br>Tightening torque check. | *AMM 32-70-00, 4-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

# 65 - TAIL ROTOR DRIVE

## 65-10 TAIL ROTOR DRIVE

| | | | |
|---|---|---|---|
| 65/10/00/000/000/010<br>**Tail rotor drive shaft**<br>GVI, TCK.<br>Maintenance. | *AMM 65-11-00, 6-1*<br>*AMM 65-11-00, 6-3*<br>*AMM 65-11-00, 6-6*<br>*AMM 65-11-00, 6-7* | *60 FH*<br>*73 D* | |
| 65/10/00/000/000/020<br>**Tail rotor drive shaft - Greasable bearing**<br>593404 (704A33651181)<br>LUB.<br>Greasing. | *AMM 65-11-00, 3-1* | *60 FH*<br>*73 D* | |

## 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/035<br>**Mineral oil**<br>DRN.<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) upon oil replacement. | *AMM 12-10-00, 3-1* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/100<br>**Blade horn unit**<br>TCK.<br>Readjustment of the tightening torque check. | *AMM 65-21-00, 4-12* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/302<br>**TRH pitch change unit**<br>Check. | *AMM 65-21-00, 6-9*<br>*AMM 65-21-00, 6-16* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 65/20/00/000/000/307<br>**TRH pitch change unit - Greasable bearing**<br>704A33-651-210 (-)<br>POST MOD 076550<br>DI, LUB.<br>Check bearing for friction points and greasing. | *AMM 65-21-00, 3-1*<br>*AMM 65-21-00, 6-8B* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/490<br>**Pitch change links**<br>DI.<br>Check. | *AMM 65-21-00, 6-11* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/495<br>**Pitch change links**<br>DI.<br>Check. | *AMM 65-21-00, 6-21* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/500<br>**Tail rotor shaft**<br>GVI.<br>Check. | *AMM 65-21-00, 6-19* | *60 FH*<br>*73 D* | |
| 65/20/00/601/000/030<br>**Control lever**<br>350A33-1525-01 (-)<br>DI.<br>Check. | *AMM 65-21-00, 6-12* | *60 FH*<br>*73 D* | |
| 65/20/00/601/000/050<br>**Control lever**<br>DI.<br>Check. | *AMM 64-10-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 65/20/00/603/000/010<br>**TGB**<br>TCK.<br>Tightening torque check. | *AMM 65-21-00, 6-18* | *60 FH*<br>*73 D* | |

## 67 - ROTOR FLIGHT CONTROLS

### 67-10 MAIN ROTOR CONTROL

| | | | |
|---|---|---|---|
| 67/10/00/000/000/000<br>**Collective lever lock and "low pitch" locking tab**<br>PRE MOD 073237<br>GVI.<br>Check. | *AMM 67-12-00, 6-1* | *60 FH*<br>*73 D* | |
| 67/10/00/000/000/010<br>**Main rotor flight controls**<br>GVI.<br>Check. | *AMM 67-10-00, 6-1* | *60 FH*<br>*73 D* | |

### 67-20 TAIL ROTOR CONTROL

| | | | |
|---|---|---|---|
| 67/20/00/000/000/000<br>**Tail rotor flight controls**<br>GVI, FT.<br>Check. | *AMM 67-21-00, 6-1* | *60 FH*<br>*73 D* | |

### 67-30 SERVOCONTROL

| | | | |
|---|---|---|---|
| 67/30/00/000/000/010<br>**Yaw channel trim system**<br>FT.<br>Installation of a simple hydraulic power system.<br>Sealing check. | *AMM 67-34-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 67/30/00/402/000/015<br>**Main servocontrol**<br>FT.<br>POST OP3082 or OP3346: Optional installation of double hydraulic power system.<br>Check for correct operation of the load detector of the RH servocontrol. | *AMM 67-31-00, 5-1* | *60 FH*<br>*73 D* | |
| 67/30/00/402/000/060<br>**Servocontrol, main**<br>TCK.<br>Tightening torque check of attaching bolts. | *AMM 67-32-00, 4-1*<br>*MTC 20.02.05.404* | *60 FH*<br>*73 D* | |
| 67/30/00/501/000/000<br>**Load compensator system**<br>FT.<br>POST OP3082 or OP3346: Installation of a twin hydraulic power system.<br>Test. | *AMM 67-34-00, 5-1*<br>*AMM 67-34-00, 6-1* | *60 FH*<br>*73 D* | |
| 67/30/00/602/000/000<br>**Servocontrol - Twin hydraulic system**<br>TCK.<br>Play check. | *AMM 67-31-00, 6-2* | *60 FH*<br>*73 D* | |
| 67/30/00/602/000/010<br>**Servocontrol - Single hydraulic system**<br>TCK.<br>Play check. | *AMM 67-32-00, 6-2* | *60 FH*<br>*73 D* | |

## 71 - TOWER PLANT

### 71-00 POWER PLANT

| | | | |
|---|---|---|---|
| 71/00/00/000/000/000<br>**Engine control**<br>DI.<br>Check of the condition and the attachments. | *AMM 71-00-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|

## 71-61 OPT - SAND-FILTER

| | | | |
|---|---|---|---|
| 71/61/01/601/000/000<br>**Sand filter**<br>GVI, FT.<br>System check. | *AMM 71-61-10, 6-1* | *60 FH*<br>*73 D* | |

# 76 - ENGINE CONTROLS

## 76-20 EMERGENCY SHUTDOWN

| | | | |
|---|---|---|---|
| 76/20/00/501/000/000<br>**Fuel shut-off control**<br>55103G (-)<br>FT.<br>Test of fuel shutt-off valve. | *AMM 76-21-00, 5-1* | *60 FH*<br>*73 D* | |
| 76/20/00/501/000/010<br>**Emergency shut down - Fuel shut-off ball type control**<br>FT.<br>Test without removal. | *AMM 76-21-00, 5-1* | *60 FH*<br>*73 D* | |
| 76/20/00/501/000/020<br>**Fuel shut-off control - Snap wire**<br>DI.<br>Check. | *AMM 76-21-00, 5-1* | *60 FH*<br>*73 D* | |

# 77 - ENGINE INDICATING

## 77-00 ENGINE INDICATING

| | | | |
|---|---|---|---|
| 77/00/00/000/000/000<br>**Engine emergency governing system "EBCAU"**<br>FT, GR.<br>Engine ARRIEL 2B1.<br>Check. | *FLM Section 8.3.2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 79 - ENGINE OIL

## 79-00 LUBRICATION

| | |
|---|---|
| 79/00/00/601/000/000<br>**Power plant**<br>*AMM 79-00-00, 6-1* *60 FH 73 D*<br>DI.<br>Check of the condition, attachment and cleanliness of the tank and the lubricating system. | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-22-01

| D.U. | TITLE |
|---|---|
| ATA 33 | LIGHTING SYSTEM |
| ATA 62 | ROTOR (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 77 | ENGINE INDICATING |
| ATA 80 | ENGINE STARTING |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|

## 600 FH

## 33 - LIGHTING SYSTEM

### 33-45 OPT - SEARCHLIGHT

| | | | |
|---|---|---|---|
| 33/45/03/000/000/040<br>**Searchlight**<br>FT.<br>SPECTROLAB SX16.<br>Equipment test. | *AMM 33-45-03, 5-1* | *60 FH* | |
| 33/45/03/000/000/050<br>**Searchlight - Fan/Brushes**<br>DI.<br>SPECTROLAB SX16.<br>Check. | *CMM 33.45.96* | *60 FH* | |
| 33/45/03/000/000/060<br>**Searchlight - Junction box**<br>DI.<br>SPECTROLAB SX16.<br>Check. | *CMM 33.45.96* | *60 FH* | |

## 62 - ROTOR (S)

### 62-30 MAIN ROTOR MAST

| | | | |
|---|---|---|---|
| 62/30/00/000/000/055<br>**Rod end-fitting**<br>12-6891P (704A34114039)<br>12-6892P (704A34114041)<br>XEM-RE-8RSA8 (704A34114047)<br>XEM-RE-8RSA8G (704A34114048)<br>POST MOD 076163<br>DI.<br>Measure the play at bearings. | *AMM 62-33-00, 6-1* | *60 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | | | |
|---|---|---|---|
| 64/10/00/000/000/060<br>**Blanking cap**<br>DI.<br>Check. | *AMM 64-10-00, 6-1* | *60 FH* | |

## 65 - TAIL ROTOR DRIVE

### 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/603/000/000<br>**Casing - Attachment bolt**<br>TCK.<br>Tightening torque check. | *AMM 65-21-00, 6-18* | *60 FH* | |

## 77 - ENGINE INDICATING

### 77-00 ENGINE INDICATING

| | | | |
|---|---|---|---|
| 77/00/00/501/000/000<br>**FADEC unit**<br>FT.<br>Engine ARRIEL 2B1.<br>FADEC test channel "B". | *AMM 73-20-00, 5-1* | *60 FH* | |

## 80 - ENGINE STARTING

### 80-00 STARTING

| | | | |
|---|---|---|---|
| 80/00/00/000/000/005<br>**Starter generator**<br>515-030 (704A46101018)<br>524-031 (704A46101011)<br>GVI.<br>Checking brushes. | *AMM 24-31-02, 6-1* | *60 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-22-02

| D.U. | TITLE |
|---|---|
| ATA 24 | ELECTRICAL POWER |
| ATA 29 | HYDRAULIC POWER |
| ATA 52 | DOORS |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|

## 24 M

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | |
|---|---|---|---|
| 24/31/00/000/000/070<br>**Battery**<br>150CH-1 (7050A4243027)<br>RS, FT.<br>General Overhaul. | *CMM 24.33.96*<br>*CHECK § 2.D*<br>*CHECK § 2.E*<br>*CHECK § 2.F* | *73 D* | |
| 24/31/00/000/000/075<br>**Battery**<br>151CH-1 (7050A4243040)<br>DI.<br>General Overhaul. | *CMM 24.33.96*<br>*CHECK § 2.D*<br>*CHECK § 2.E*<br>*CHECK § 2.F* | *73 D* | |
| 24/31/00/000/000/080<br>**Battery**<br>CLN.<br>Battery compartment cleaning. | *AMM 24-33-00, 2-1* | *73 D* | |

## 29 - HYDRAULIC POWER

### 29-00 HYDRAULIC POWER

| | | | |
|---|---|---|---|
| 29/00/00/000/000/010<br>**Hydraulic system**<br>DRN.<br>Salt-laden atmosphere<br>Drain and fill. | *AMM 29-00-00, 3-6* | *0* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 52 - DOORS

## 52-90 SLIDING DOOR

| | |
|---|---|
| 52/90/00/000/000/005<br>**Sliding door**<br>*AMM 56-11-00, 6-5* *73 D*<br>GVI.<br>Check of the sliding doors glasses dropping. | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-23-00

| D.U. | TITLE |
|---|---|
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 76 | ENGINE CONTROLS |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 1200 FH // 48 M

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | |
|---|---|---|---|
| 63/10/00/000/000/100<br>**Engine-to-MGB coupling assembly**<br>*AMM 63-11-00, 6-1*<br>*AMM 63-11-00, 6-4*<br>*AMM 63-11-00, 6-5*<br>*AMM 63-11-00, 6-6*<br>*AMM 63-11-00, 6-7*<br>*AMM 63-11-00, 6-9*<br>*AMM 63-11-00, 6-11*<br>*AMM 63-11-00, 6-12*<br>*AMM 63-11-00, 6-16*<br>*AMM 63-11-00, 6-17*<br>POST MOD 079555 & POST MOD 079558<br>DI.<br>Check. | | *120 FH*<br>*146 D* | |

### 63-20 MAIN GEARBOX

| | | | |
|---|---|---|---|
| 63/20/00/000/000/035<br>**Synthetic oil**<br>*AMM 12-10-00, 3-1*<br>DRN.<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard. | | *120 FH*<br>*146 D* | |

## 65 - TAIL ROTOR DRIVE

### 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/020<br>**Synthetic oil**<br>*AMM 12-10-00, 3-1*<br>DRN.<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) upon oil replacement. | | *120 FH*<br>*146 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

| | | | |
|---|---|---|---|
| 67/30/00/404/000/000<br>**Load compensator assy - Lever**<br><br>DI.<br>Check. | *AMM 67-34-00, 6-2* | *120 FH*<br>*146 D* | |

## 76 - ENGINE CONTROLS

### 76-00 ENGINE CONTROLS

| | | | |
|---|---|---|---|
| 76/00/00/000/000/020<br>**Engine fuel flow control**<br><br>PRE MOD 073261<br>FT, RIG.<br>Setting the control. | *AMM 76-12-02, 5-1*<br>*AMM 76-12-02, 5-3* | *120 FH*<br>*146 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-23-01

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 76 | ENGINE CONTROLS |
| ATA 80 | ENGINE STARTING |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 1200 FH

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/020<br>**Front seats with shock absobers**<br>DI.<br>Check. | *CMM 25.11.73*<br>*25.11.73-200-003* | *120 FH* | |

## 76 - ENGINE CONTROLS

### 76-30 TWIST GRIP FUEL FLOW CONTROL

| | | | |
|---|---|---|---|
| 76/30/12/000/000/000<br>**Twist grip - Load spring**<br>350A27-3249-24 (-)<br>POST MOD 073261<br>DS.<br>Replacement of the load spring. | *AMM 76-12-03, 4-2* | *120 FH* | |

## 80 - ENGINE STARTING

### 80-00 STARTING

| | | | |
|---|---|---|---|
| 80/00/00/000/000/010<br>**Starter generator**<br>515-030 (704A46101018)<br>524-031 (704A46101011)<br>DS.<br>Replacing bearings and brushes. | *CMM 80.19.02*<br>*CMM 80.19.06* | *120 FH* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-23-02

| D.U. | TITLE |
|---|---|
| ATA 32 | LANDING GEAR |
| ATA 60 | GENERAL - MECHANICS SYSTEMS |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 48 M

## 32 - LANDING GEAR

## 32-13 SKID LANDING GEAR

| | | | |
|---|---|---|---|
| 32/13/00/601/000/020<br>**Skid landing gear**<br>DI.<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Check. | *AMM 32-11-00, 6-3* | *146 D* | |

## 60 - GENERAL - MECHANICS SYSTEMS

## 60-00 GENERAL - MECHANICS SYSTEMS

| | | | |
|---|---|---|---|
| 60/00/00/000/000/100<br>**Transmission components - Main rotor drive / Tail rotor drive**<br>DI.<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Operation to be carried out after having logged 96 M after initial setting to service or since the last General Overhaul. | *AMM 05-60-00, 6-1* | *146 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-24-02

| D.U. | TITLE |
|---|---|
| ATA 05 | TIME LIMITS/MAINTENANCE CHECKS |
| ATA 67 | ROTOR FLIGHT CONTROLS |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 144 M

## 05 - TIME LIMITS/MAINTENANCE CHECKS

## 05-29 PREPARATION FOR THE MAJOR INSPECTION

| | | |
|---|---|---|
| 05/29/00/601/000/000<br>**Preparation for the major inspection**<br>*AMM 05-24-00, 6-1* *180 D*<br>DI. | | |

## 67 - ROTOR FLIGHT CONTROLS

## 67-00 ROTORS FLIGHT CONTROLS

| | | |
|---|---|---|
| 67/00/00/000/000/070<br>**Rotors flight control**<br>*AMM 67-00-00, 6-2* *180 D*<br>DI.<br>Detailed check of flight controls. | | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-25-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 28 | FUEL SYSTEM |
| ATA 29 | HYDRAULIC POWER |
| ATA 32 | LANDING GEAR |
| ATA 33 | LIGHTING SYSTEM |
| ATA 47 | WEAPONS ELECTRONICS |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 60 | GENERAL - MECHANICS SYSTEMS |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 80 | ENGINE STARTING |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

| | | | | |
|---|---|---|---|---|
| 21/51/20/000/000/025<br>**Freon air conditioning system**<br>GVI.<br>Visual inspection of the system. | *AMM 21-51-10, 6-1* | 100 FH<br>// 12 M | *10 FH*<br>*36 D* | |
| 21/51/20/000/000/030<br>**Freon air conditioning system**<br>DI, FT, CLN.<br>Detailed check of the installation. | *AMM 21-51-10, 6-2* | 500 FH<br>// 24 M | *50 FH*<br>*73 D* | |
| 21/51/20/000/000/040<br>**Freon air conditioning system**<br>FT.<br>Check for correct operation if not used during 1 month. | *AMM 21-51-10, 5-1* | 1 M | *3 D* | |

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | | |
|---|---|---|---|---|
| 24/31/00/000/000/050<br>**Battery**<br>150CH-1<br>DI.<br>Check. | *CMM 24.33.96*<br>*CHECK § 2.B*<br>(7050A4243027) | 6 M | *18 D* | |
| 24/31/00/000/000/055<br>**Battery**<br>151CH-1<br>DI.<br>Check. | *CMM 24.33.96*<br>*CHECK § 2.B*<br>(7050A4243040) | 6 M | *18 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

## 25-10 COCKPIT

| | | | | |
|---|---|---|---|---|
| 25/10/11/000/000/000<br>**Pilot and copilot seats**<br>GVI.<br>Check. | *AMM 25-21-00, 6-1* | 100 FH | *10 FH* | |
| 25/10/11/000/000/010<br>**Front seats with shock absorbers**<br>DI.<br>SICMA 159.<br>Detailed check. | *CMM 25.11.73*<br>*25.11.73-200-004* | 1800 FH | *180 FH* | |
| 25/10/11/000/000/030<br>**Front seats with shock absorbers - Rails**<br>DI.<br>SICMA 159.<br>Check. | *AMM 25-21-00, 6-2* | 1800 FH | *180 FH* | |

## 25-62 OPT - EMERGENCY FLOATATION GEAR

| | | | | |
|---|---|---|---|---|
| 25/62/10/401/000/070<br>**Cylinder**<br>200740-0 (-)<br>200740-1 (-)<br>NPT.<br>36M: TSM interval.<br>Proof test.<br>Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0, 218570-0.<br>1 OPH = 1 utilization (ditching or untimely percussion of the inflation cylinder).<br>To be returned to the manufacturer or to an approved workshop. | | 36 M<br>// 1 OPH | *0*<br>*0* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

25/62/10/401/000/110

**Cylinder**

| | | | |
|---|---|---|---|
| | 60 | M | *0* |
| // | 1 | OPH | *0* |

200740-2 (704A42693012)

NPT.

60M: TSM interval.
Proof test.
Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0, 218570-0.
1 OPH = 1 utilization (ditching or untimely percussion of the inflation cylinder).
To be returned to the manufacturer or to an approved workshop.

## 25-63 HOISTS ELECTRICAL

25/63/00/000/000/005

**Electric hoist 136 kg - Brake assembly**

| | | | |
|---|---|---|---|
| *CMM 25.64.97* | 6 | M | *18 D* |
| // | 50 | HC | *5 HC* |

LUB.

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
Grease the brake assembly.

25/63/00/000/000/010

**Electric hoist 136 kg - Electric unit**

| | | | |
|---|---|---|---|
| *CMM 25.64.97* | 100 | HC | *10 HC* |

DI.

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
Resistance check.

25/63/00/000/000/015

**Electric hoist 136 kg - Squib**

| | | | |
|---|---|---|---|
| *AMM 25-63-10, 6-2* | 6 | M | *18 D* |

DI.

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
Check.

25/63/00/000/000/020

**Electric hoist 136 kg - Guiding fork**

| | | | |
|---|---|---|---|
| *CMM 25.64.97* | 750 | HC | *75 HC* |

709595 (-)
709595-100 (-)

DS.

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
Replacement.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 25/63/00/000/000/024<br>**Electric hoist**<br>GVI.<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Check the anti-corrosion protection of the cable. | *CMM 25.64.97* | 6 M | *18 D* | |
| 25/63/00/000/000/025<br>**Electric hoist**<br>DI, FT.<br>ERC BREEZE.<br>Check. | *CMM 25.69.61* | 6 M | *18 D* | |
| 25/63/00/000/000/060<br>**Electric hoist 136 kg**<br>GVI, FT.<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Check :<br>- Operation of the limit switches.<br>- The condition of the cable.<br>- The unwinding and the winding of the cable.<br>- The hook.<br>- Lubrification/Lubrification if necessary. | *CMM 25.64.97* | 6 M<br>// 50 HC | *18 D*<br>*5 HC* | |
| 25/63/00/000/000/070<br>**Electric hoist 450 lbs**<br>DI, FT.<br>BREEZE.<br>Check that the hook rotates freely, check the condition of the cable, check the operation of the cable extraction mechanism. | *CMM 25.61.00* | 50 HC | *0* | |
| 25/63/00/602/000/000<br>**Electric hoist - Pyrotechnic cartridge**<br>DI.<br>ERC BREEZE.<br>Check. | *AMM 25-63-10, 6-2* | 6 M | *0* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 25/63/00/602/000/010<br>**Electric hoist - Cable**<br>DI, FT.<br>ERC BREEZE.<br>Check. | *CMM 25.69.61* | 6 M<br>// 50 HC | *18 D*<br>*5 HC* | |

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

| | | | | |
|---|---|---|---|---|
| 25/66/00/000/000/010<br>**Emergency locator transmitter**<br>FT.<br>JOLLIET JE2 AND JE25 NG.<br>Fonctional tests. | *AMM 25-66-04, 5-1* | 6 M | *18 D* | |
| 25/66/00/000/000/030<br>**Emergency locator transmitter**<br>FT.<br>ELT 910 NARCO.<br>Fonctional tests. | *AMM 25-66-07, 5-1* | 6 M | *18 D* | |
| 25/66/00/000/000/100<br>**Emergency locator transmitter**<br>N15F210B (704A45737011)<br>CLN, GVI.<br>DUKANE 210B.<br>Clean and check. | *CMM 25.69.73*<br>*Section III § 3,2* | 3 M | *9 D* | |
| 25/66/00/000/000/120<br>**Emergency locator transmitter**<br>ELT96A2560000000 (704A45737043)<br>FT.<br>SOCATA.<br>Emergency locator transmitter self-test (3 consecutive phases). | *AMM 25-66-08, 5-1* | 6 M | *18 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 25/66/34/000/000/020<br>**Emergency locator transmitter**<br>FT.<br>KANNAD 406 AF.<br>KANNAD 121 AF-H.<br>KANNAD 406 AF-H.<br>Emergency locator transmitter autotest. | *AMM 25-66-02, 5-1* | 1 M | *3 D* | |

## 25-69 LIFE-RAFT

| | | | | |
|---|---|---|---|---|
| 25/69/10/401/000/000<br>**Life-raft**<br>206994-0<br>DI, FT, WGH.<br>Check, life raft tightness testing, cylinder weighing. | *CMM 25.69.71*<br>(-) | 6 M | *18 D* | |
| 25/69/10/401/000/020<br>**Cylinder**<br>NPT.<br>Cylinders to be proof tested by the manufacturer or by an approved workshop.<br>Intervals counted from the date of the last proof test.<br>Fitted to the assemblies: MP/N 206994-0, 210155-X. | *AMM 25-69-10, 4-1* | 60 M | *0* | |

## 25-80 OPT - SLING AND ACCESSORY

| | | | | |
|---|---|---|---|---|
| 25/80/00/000/000/007<br>**Load release unit hook**<br>17149-1<br>GVI, RIG, FT.<br>Inspection and test. | *AMM 25-92-00, 6-1*<br>(704A41811012) | 24 M<br>// 500 SC | *73 D*<br>*50 SC* | |

## 25-81 OPT - SWING AND ACCESSORY

| | | | | |
|---|---|---|---|---|
| 25/81/00/000/000/060<br>**Control mechanical release**<br>FT.<br>Functional test. | *AMM 25-91-01, 5-1* | 7 D | *0* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 25/81/11/000/000/005<br>**Frame, 1400 kg cargo swing**<br>PRE MOD 072820<br>GVI.<br>Check for elongation of holes. | *AMM 25-91-01, 6-1* | 100 FH | *10 FH* | |
| 25/81/11/000/000/010<br>**Load release unit hook**<br>AS21-5-7 (704A41811029)<br>GVI, RIG, FT.<br>Check and test. | *AMM 25-91-01, 6-1* | 24 M<br>// 500 SC | *73 D*<br>*50 SC* | |
| 25/81/12/000/000/020<br>**Onboard load release unit**<br>CLN, GVI.<br>Sand-laden and/or dust-laden atmosphere<br>Clean and check. | *CMM 25.50.99* | 1 M | *3 D* | |
| 25/81/12/000/000/040<br>**Onboard load release unit**<br>GVI, RIG, FT.<br>OPH = Operating hours logged with underslung loads.<br>Check and test. | *AMM 25-91-01, 6-1* | 24 M<br>// 350 OPH | *73 D*<br>*35 OPH* | |

## 26 - FIRE PROTECTION

### 26-10 FIRE DETECTION

| | | | | |
|---|---|---|---|---|
| 26/10/00/000/000/000<br>**Hermetic fire detector**<br>DI.<br>Checking the engine fire detector opening threshold. | *AMM 26-11-00, 6-1* | 3600 FH | *300 FH* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 26-22 OPT - EXTINGUISHER, FIRE, CABIN

| | | | | |
|---|---|---|---|---|
| 26/22/00/000/000/020<br>**Cabin fire extinguisher**<br>WGH.<br>Weigh the cylinders.<br>- CMM 26.21.99 = MP/N P2H, MP/N H1.<br>- CMM 26.22.99 = MP/N H1-code 0150101A, MP/N H1-0150101S.<br>- CMM 26.24.04 = MP/N H1-10AIR, MP/N H1-10. | *CMM 26.21.99*<br>*CMM 26.22.99*<br>*CMM 26.24.04* | 6 M | *18 D* | |

# 28 - FUEL SYSTEM

## 28-00 FUEL SYSTEM

| | | | | |
|---|---|---|---|---|
| 28/00/00/502/000/010<br>**Fuel tank**<br>SVC.<br>Tropical and damp atmosphere<br>Fungus treatment. | *MTC 20.08.06.401* | 3 M | *9 D* | |

## 28-92 OPT - FERRY FUEL TANK

| | | | | |
|---|---|---|---|---|
| 28/92/00/000/000/000<br>**Ferry fuel tank**<br>330A87-1310-04 (-)<br>DI.<br>Checking the electrical bonding. | *AMM 28-91-00, 4-1* | 96 M | *180 D* | |

# 29 - HYDRAULIC POWER

## 29-00 HYDRAULIC POWER

| | | | | |
|---|---|---|---|---|
| 29/00/00/000/000/000<br>**Hydraulic system**<br>DRN.<br>Drain and fill. | *AMM 29-00-00, 3-6* | 2500 FH<br>// 48 M | *0*<br>*0* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 29-10 MAIN HYDRAULIC SINGLE GENERATION

| | | | | |
|---|---|---|---|---|
| 29/10/10/302/000/020<br>**Accumulator - Yaw compensator**<br>DI.<br>Check. | *AMM 29-00-00, 3-5* | 100 FH<br>// 6 M | *10 FH*<br>*18 D* | |
| 29/10/10/404/000/000<br>**Single hydraulic generation system - Hose**<br>DS.<br>Replacement. | *AMM 29-10-00, 4-1* | 5000 FH<br>// 72 M | *300 FH*<br>*180 D* | |
| 29/10/10/601/000/050<br>**Hydraulic pump - Drive shaft**<br>DI.<br>Visual check and greasing splines. | *AMM 63-11-00, 6-3* | 100 FH<br>// 6 M | *10 FH*<br>*18 D* | |

# 32 - LANDING GEAR

## 32-00 LANDING GEAR

| | | | | |
|---|---|---|---|---|
| 32/00/00/000/000/010<br>**Landing gear shock absorber**<br>DI, FT.<br>Detailed check. | *AMM 32-11-00, 5-1*<br>*AMM 32-11-00, 6-1* | 5400 FH | *300 FH* | |

## 32-13 SKID LANDING GEAR

| | | | | |
|---|---|---|---|---|
| 32/13/00/601/000/010<br>**Skid landing gear**<br>DI, FT.<br>Detailed check. | *AMM 32-11-00, 6-1*<br>*AMM 32-11-00, 6-3*<br>*AMM 32-11-00, 6-4* | 5400 FH | *300 FH* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 33 - LIGHTING SYSTEM

### 33-45 OPT - SEARCHLIGHT

| | | | | |
|---|---|---|---|---|
| 33/45/03/000/000/020<br>**Searchlight**<br>CLN, DI.<br>SPECTROLAB SX16.<br>Check. | *AMM 33-45-03, 6-2* | 300 FH | *30 FH* | |
| 33/45/03/000/000/030<br>**Searchlight**<br>GVI.<br>SPECTROLAB SX16.<br>Check. | *AMM 33-45-03, 6-1* | 100 FH | *10 FH* | |

## 47 - WEAPONS ELECTRONICS

### 47-50 FLIR INSTALLATION

| | | | | |
|---|---|---|---|---|
| 47/50/10/000/000/000<br>**Flir**<br>SVC.<br>Star SAFIRE II.<br>Bleeding and nitrogen filling of the turret. | *AMM 47-50-10, 3-2* | 2 M | *6 D* | |
| 47/50/10/000/000/020<br>**Flir**<br>VC.<br>Star SAFIRE II.<br>Turret desiccant cartridge check. | *AMM 47-50-10, 3-1* | 1 M | *3 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 53 - FUSELAGE

### 53-00 FUSELAGE

| | | | | |
|---|---|---|---|---|
| 53/00/00/000/000/000<br>**Corrosion preventive bead**<br>SVC.<br>Tropical and damp atmosphere<br>Check. | *AMM 12-30-00, 3-4* | 150 FH<br>// 6 M | *15 FH*<br>*18 D* | |
| 53/00/00/000/000/010<br>**Corrosion preventive bead**<br>SVC.<br>Salt-laden atmosphere<br>Check.<br>After hovering or low-altitude flight, this operation should be carried out during the ALF check. | *AMM 12-30-00, 3-4* | 150 FH<br>// 6 M | *15 FH*<br>*18 D* | |
| 53/00/00/000/000/020<br>**Protection by spraying**<br>SVC.<br>Tropical and damp atmosphere | *AMM 12-30-00, 3-4A*<br>*AMM 12-30-00, 3-4B* | 7 D | *0* | |
| 53/00/00/000/000/030<br>**Protection by spraying**<br>SVC.<br>Salt-laden atmosphere<br>After hovering or low-altitude flight, this operation should be carried out during the ALF check. | *AMM 12-30-00, 3-4A*<br>*AMM 12-30-00, 3-4B* | 7 D | *0* | |
| 53/00/00/000/000/040<br>**Structure**<br>CLN.<br>Salt-laden atmosphere<br>Washing the structure with fresh water.<br>After hovering or low-altitude flight, this operation should be carried out during the ALF check. | *AMM 12-30-00, 3-1* | 7 D | *0* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 53/00/00/000/000/050<br>**Structure - Doors, fairings, panels**<br>CLN, LUB.<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Sand-laden and/or dust-laden atmosphere<br>Cleaning and greasing. | *AMM 12-30-00, 3-4* | 7 D | *0* | |

## 53-10 CANOPY

| | | | | |
|---|---|---|---|---|
| 53/10/00/000/000/030<br>**Tail boom-to-fuselage junction**<br>TCK.<br>Check. | *AMM 53-31-00, 6-1* | 2500 FH<br>// 72 M | *250 FH*<br>*180 D* | |

# 55 - STABILIZER

## 55-00 TAIL UNIT

| | | | | |
|---|---|---|---|---|
| 55/00/00/000/000/050<br>**Fins**<br>DI, TCK, FT.<br>Detailed check. | *AMM 55-20-00, 6-2* | 5400 FH | *300 FH* | |

## 55-20 VERTICAL FINS ASSY

| | | | | |
|---|---|---|---|---|
| 55/20/00/000/000/000<br>**Upper and lower fin**<br>PRE MOD 073012<br>GVI, TCK.<br>Check. | *AMM 55-20-00, 6-2* | 100 FH | *0* | |
| 55/20/00/000/000/030<br>**Upper and lower fin**<br>GVI.<br>Check of skin. | *AMM 55-20-00, 6-1* | 100 FH | *10 FH* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 60 - GENERAL - MECHANICS SYSTEMS

### 60-00 GENERAL - MECHANICS SYSTEMS

| | | | | |
|---|---|---|---|---|
| 60/00/00/000/000/120<br>**Transmission components - Main rotor drive / Tail rotor drive**<br>DI.<br>Operation to be carried out after having logged 144 M after initial setting to service or since the last General Overhaul. | *AMM 05-60-00, 6-1* | 72 M | *180 D* | |

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

| | | | | |
|---|---|---|---|---|
| 62/10/00/000/000/005<br>**Skin**<br>GVI.<br>Check the skin in the area between 900 mm and the blade tip. | *AMM 62-11-00, 6-3* | 100 FH | *10 FH* | |
| 62/10/00/302/000/000<br>**Main rotor blade**<br>CLN.<br>Tropical and damp atmosphere<br>Cleaning the blades. | *AMM 62-11-00,3-1* | 25 FH | *2 FH* | |
| 62/10/00/302/000/010<br>**Main rotor blade**<br>CLN.<br>Salt-laden atmosphere<br>Cleaning the blades.<br>After hovering or low-altitude flight, this operation should be carried out during the ALF check. | *AMM 62-11-00, 3-1* | 25 FH | *2 FH* | |
| 62/10/00/401/000/000<br>**Blade pin**<br>LUB.<br>Greasing. | *AMM 62-11-00, 3-3* | 600 FH<br>// 6 M | *60 FH*<br>*18 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 62/10/00/401/000/010<br>**Blade pin**<br>LUB.<br>Tropical and damp atmosphere<br>Greasing. | *AMM 62-11-00, 3-3* | 150 FH<br>// 3 M | *15 FH*<br>*9 D* | |
| 62/10/00/401/000/020<br>**Blade pin**<br>LUB.<br>Salt-laden atmosphere<br>Greasing.<br>After hovering or low-altitude flight, this operation should be carried out during the ALF check. | *AMM 62-11-00, 3-3* | 150 FH<br>// 3 M | *15 FH*<br>*9 D* | |
| 62/10/10/602/000/000<br>**External protection of main rotor blades**<br>LUB.<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Sand-laden and/or dust-laden atmosphere<br>Greasing of bushes and pins. | *AMM 62-11-00, 3-3* | 1 M | *3 D* | |

## 62-20 MAIN ROTOR HEAD

| | | | | |
|---|---|---|---|---|
| 62/20/00/604/000/000<br>**Vibration damper, spring type**<br>DI.<br>Check. | *AMM 62-21-00, 6-11* | 3000 FH<br>// 72 M | *300 FH*<br>*180 D* | |

## 62-30 MAIN ROTOR MAST

| | | | | |
|---|---|---|---|---|
| 62/30/00/000/000/040<br>**Chips detector**<br>GVI.<br>Check. | *AMM 60-00-00, 6-2* | 100 FH | *10 FH* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 62/30/00/000/000/050<br>**Rod end-fitting**<br>350A37-1508-00<br>350A37-1508-01<br>350A37-1508-02<br>350A37-1508-03<br>350A37-1508-04<br>350A37-1508-05<br>GVI.<br>Measure the play at bearings. | *AMM 62-33-00, 6-1*<br>(-)<br>(-)<br>(-)<br>(-)<br>(-)<br>(-) | 100 FH | *10 FH* | |
| 62/30/00/000/000/085<br>**Main rotor shaft**<br>350A37-1076-XX<br>DI.<br>Check of the lower part of the rotor shaft. | *AMM 62-31-00, 6-1*<br>(-) | 72 M | *180 D* | |
| 62/30/00/000/000/095<br>**Main rotor shaft**<br>350A37-1290-XX<br>DI.<br>Check of the lower part of the rotor shaft. | *AMM 62-31-00, 6-1*<br>(-) | 72 M | *180 D* | |
| 62/30/00/000/000/163<br>**Swashplate**<br>LUB.<br>Greasing the bearing. | *AMM 62-32-00, 3-1* | 100 FH | *10 FH* | |
| 62/30/00/000/000/210<br>**Swashplate**<br>VC, DI.<br>Visual check of the guide and swivel bearing.<br>Detailed check of the swashplate. | *AMM 62-32-00, 6-1*<br>*AMM 62-32-00, 6-2*<br>*AMM 62-32-00, 6-3* | 300 FH | *30 FH* | |
| 62/30/00/000/000/320<br>**Bush and scissors attachment bolt**<br>LUB.<br>Sand-laden and/or dust-laden atmosphere<br>Greasing. | *AMM 62-33-00, 4-1* | 100 FH | *10 FH* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 63 - ROTOR DRIVE (S)

## 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | | |
|---|---|---|---|---|
| 63/10/00/000/000/010<br>**Engine-to-MGB coupling assembly**<br>*AMM 63-11-00, 6-1*<br>*AMM 63-11-00, 6-4*<br>*AMM 63-11-00, 6-5*<br>*AMM 63-11-00, 6-6*<br>*AMM 63-11-00, 6-7*<br>*AMM 63-11-00, 6-9*<br>*AMM 63-11-00, 6-11*<br>*AMM 63-11-00, 6-12*<br>*AMM 63-11-00, 6-16*<br>*AMM 63-11-00, 6-17*<br>PRE MOD 079555 // PRE MOD 079558<br>DI.<br>Check. | | 1000 FH<br>// 48 M | *100 FH*<br>*146 D* | |
| 63/10/00/000/000/072<br>**Hydraulic pump - Spline**<br>*AMM 63-11-00, 6-3*<br>PRE MOD 079561<br>LUB.<br>Greasing. | | 100 FH<br>// 12 M | *10 FH*<br>*36 D* | |
| 63/10/00/000/000/073<br>**Hydraulic pump - Belt**<br>*AMM 63-11-00, 6-2*<br>PRE MOD 079555<br>RIG.<br>Tension check. | | 500 FH<br>// 24 M | *50 FH*<br>*73 D* | |
| 63/10/00/000/000/075<br>**Hydraulic pump - Bearing**<br>*AMM 63-11-00, 6-15*<br>PRE MOD 079558<br>DI.<br>Check. | | 500 FH<br>// 24 M | *50 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 63/10/00/000/000/190<br>**Hydraulic pump - Spline**<br>POST MOD 079561 & PRE MOD 079558<br>LUB.<br>Greasing. | *AMM 63-11-00, 6-3* | 500 FH<br>// 24 M | *50 FH*<br>*73 D* | |

## 63-20 MAIN GEARBOX

| | | | | |
|---|---|---|---|---|
| 63/20/00/000/000/010<br>**Chip detector**<br>GVI.<br>Check. | *AMM 60-00-00, 6-2* | 100 FH | *10 FH* | |
| 63/20/00/000/000/025<br>**Mineral oil**<br>PRE MOD 077174<br>DRN.<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard. | *AMM 12-10-00, 3-1* | 500 FH<br>// 24 M | *50 FH*<br>*73 D* | |
| 63/20/00/000/000/467<br>**Input bevel gear assembly**<br>PRE MOD 077203<br>RTQ.<br>Readjust the tightening torque of the rotor brake flange/input bevel gear assembly attachment nut. | *AMM 63-51-00, 4-2* | 500 FH | *50 FH* | |

## 63-30 MGB MOUNT AND ATTACHMENT

| | | | | |
|---|---|---|---|---|
| 63/30/00/000/000/060<br>**MGB suspension cross bar**<br>DI.<br>Check with removal. | *AMM 63-31-00, 6-1*<br>*AMM 63-31-00, 6-3*<br>*AMM 63-31-00, 6-4* | 3000 FH<br>// 72 M | *300 FH*<br>*180 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 63-40 INDICATING SYSTEM

| | | | | |
|---|---|---|---|---|
| 63/40/00/000/000/000 | | | | |
| **Oil temperature warning system** | | | | |
| | *AMM 63-42-00, 5-1* | 2400 FH | *240 FH* | |
| | *AMM 63-42-00, 5-2* | // 72 M | *180 D* | |
| DRN, DI, FT. | | | | |
| Check. | | | | |

# 64 - TAIL ROTOR

## 64-10 TAIL ROTOR BLADE

| | | | | |
|---|---|---|---|---|
| 64/10/00/000/000/230 | | | | |
| **Tail rotor blade** | | | | |
| | *AMM 64-10-00, 3-1* | 25 FH | *2 FH* | |
| CLN. | | | | |
| Tropical and damp atmosphere<br>Salt-laden atmosphere | | | | |
| Cleaning. | | | | |

# 65 - TAIL ROTOR DRIVE

## 65-20 TAIL GEARBOX

| | | | | |
|---|---|---|---|---|
| 65/20/00/000/000/000 | | | | |
| **Chips detector** | | | | |
| | *AMM 60-00-00, 6-2* | 100 FH | *10 FH* | |
| GVI. | | | | |
| Check. | | | | |
| 65/20/00/000/000/142 | | | | |
| **Casing** | | | | |
| | *AMM 65-21-00, 6-13* | 1200 FH | *120 FH* | |
| | *AMM 65-21-00, 6-14* | // 24 M | *73 D* | |
| 350A33-1090-02 | (-) | | | |
| GVI. | | | | |
| Visual check. | | | | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 65/20/00/000/000/270<br>**Pitch change unit - Swivel bearing**<br>350A33-2004-02 (-)<br>350A33-2004-03 (-)<br>350A33-2004-05 (-)<br>350A33-2004-06 (-)<br>350A33-2030-00 (-)<br>POST MOD 075544<br>DI.<br>Check. | *AMM 65-21-00, 6-16* | 100 FH | *10 FH* | |
| 65/20/00/000/000/370<br>**TRH pitch change unit - Labyrinth seal - Lock washer**<br>POST MOD 076536<br>GVI.<br>Check. | *AMM 65-21-00, 6-15* | 100 FH | *10 FH* | |
| 65/20/00/601/000/000<br>**Hinge bearing**<br>POST MOD 076523<br>GVI.<br>Check. | *AMM 65-21-00, 6-10* | 1200 FH<br>// 24 M | *120 FH*<br>*73 D* | |
| 65/20/00/601/000/020<br>**Pitch control lever**<br>350A33-1524-00 (-)<br>350A33-1526-00 (-)<br>DI.<br>Check. | *AMM 65-21-00, 6-12* | 1200 FH<br>// 24 M | *120 FH*<br>*73 D* | |

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 67/30/00/406/000/000<br>**Servocontrol, tail - Hose**<br>DS.<br>Replacement. | *AMM 67-33-00, 8-1* | 5000 FH<br>// 72 M | *300 FH*<br>*180 D* | |

| Task Number<br>Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 80 - ENGINE STARTING

### 80-00 STARTING

| | | | | |
|---|---|---|---|---|
| 80/00/00/402/000/080<br>**Starter generator**<br>150SG122Q<br>200SGL130Q<br>DI.<br>Checking brushes. | *AMM 24-31-01, 6-1*<br>(704A46101020)<br>(704A46101023) | 300 FH | *30 FH* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-26-00

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 28 | FUEL SYSTEM |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 60 | GENERAL - MECHANICS SYSTEMS |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |

**End of the Document Unit**

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/00/000/000/030

**Float**

| | | | | | | |
|---|---|---|---|---|---|---|
| *CMM 25.69.08* | PO | | 60 | M | TSM | *180 D* |
| *CHECK § 5* | | & | 96 | M | TSM | *180 D* |

200733-0 (-)
200734-0 (-)

FT, NPT.

Detailed and proof pressure check.

25/62/00/000/000/140

**Float**

| | | | | | | |
|---|---|---|---|---|---|---|
| *CMM 25.69.40* | PO | | 60 | M | TSM | *180 D* |
| *CHECK § 5* | | & | 96 | M | TSM | *180 D* |

218569-0 (-)
218570-0 (-)

DI, FT.

Detailed and proof pressure check.

## 28 - FUEL SYSTEM

### 28-00 FUEL SYSTEM

28/00/00/502/000/020

**Fuel tank**

| | | | | | | |
|---|---|---|---|---|---|---|
| *AMM 28-11-00, 5-1* | PO | | 3 | FH | | *7 FH* |

GVI.

Each time after the component is installed.
Checking straps tension and position.

## 53 - FUSELAGE

### 53-10 CANOPY

53/10/00/000/000/020

**Tail boom-to-fuselage junction**

| | | | | | | |
|---|---|---|---|---|---|---|
| *AMM 53-31-00, 6-1* | PO | | 30 | FH | | *5 FH* |
| | | & | 600 | FH | | *10 FH* |

TCK.

Each time after the component is installed.
Check.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

53/10/00/000/000/065

**Cabin anti-vibrator mount**

| | | | | |
|---|---|---|---|---|
| *AMM 53-32-00, 6-1* | PO | 2 | FH | *8 FH* |

RTQ.

Each time after the component is installed.
Readjustment of the tightening torque load on the attachment bolts blade/mount.

## 55 - STABILIZER

### 55-20 VERTICAL FINS ASSY

55/20/00/000/000/020

**Upper and lower fin**

| | | | | |
|---|---|---|---|---|
| *AMM 55-20-00, 4-1* | PO | 2 | FH | *8 FH* |
| *AMM 55-20-00, 4-2* | & | 10 | FH | *10 FH* |

RTQ.

Each time after the component is installed.
Readjustement of torque value of the screws attaching the fin spars to the frame and of the screws attaching the fins to the tail boom.

## 60 - GENERAL - MECHANICS SYSTEMS

### 60-00 GENERAL - MECHANICS SYSTEMS

60/00/00/000/000/000

**MGB assembly - TGB assembly**

| | | | | |
|---|---|---|---|---|
| *AMM 05-60-00, 6-1* | PO | 96 | M | *180 D* |
| | & | 144 | M | *180 D* |
| | & | 192 | M | *180 D* |
| | & | 240 | M | *180 D* |

DI.

Tropical and damp atmosphere
Salt-laden atmosphere

Check.

60/00/00/000/000/040

**MGB assembly - TGB assembly**

| | | | | |
|---|---|---|---|---|
| *AMM 05-60-00, 6-1* | PO | 144 | M | *180 D* |
| | & | 216 | M | *180 D* |

DI.

Check.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

# 62 - ROTOR (S)

## 62-10 MAIN ROTOR BLADE

62/10/00/000/000/000

**Skin**

| | | | | |
|---|---|---|---|---|
| *AMM 62-11-00, 6-3* | PO | 25 FH | *5 FH* | |

GVI.

After the introduction to service of a new, overhauled or repaired component,
Check the skin in the area between 900 mm and the blade tip.

62/10/20/601/000/060

**Main rotor blade**

| | | | | |
|---|---|---|---|---|
| *AMM 62-11-00, 6-3* | PO | 25 FH | *5 FH* | |
| | | & 150 FH | *10 FH* | |
| | | & 300 FH | *10 FH* | |
| | | & 450 FH | *10 FH* | |

DI.

After the introduction to service of a new, overhauled or repaired component,
Check.

## 62-20 MAIN ROTOR HEAD

62/20/00/000/000/060

**MRH**

| | | | | |
|---|---|---|---|---|
| *AMM 62-21-00, 4-1*<br>*AMM 62-21-00, 4-2*<br>*AMM 62-21-00, 4-3*<br>*AMM 62-21-00, 4-4* | PO | 2 FH | *8 FH* | |

| | |
|---|---|
| 355A31-0001-03 | (-) |
| 355A31-0001-04 | (-) |
| 355A31-0001-06 | (-) |
| 355A31-0001-07 | (-) |
| 355A31-0001-08 | (-) |
| 355A31-0001-09 | (-) |
| 355A31-0002-00 | (-) |
| 355A31-0002-01 | (-) |

TCK.

Each time after the component is installed.
Tightening torque check: mast/hub coupling, spherical thrust bearing/sleeves, frequency adapters/sleeve, pitch change rod attachment bolts.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 62-30 MAIN ROTOR MAST

62/30/00/000/000/025

**Main rotor shaft**

| | | | | |
|---|---|---|---|---|
| *AMM 62-31-00, 4-1*<br>*AMM 62-33-00, 4-1* | PO | 2 FH | *8 FH* | |

TCK.

Each time after the component is installed.
Tightening torque check: rotating and non-rotating scissors bolts, flared housing/epicyclic reduction gear/upper casing attachment bolts, swashplate guide-to-upper casing attachment bolts.

# 63 - ROTOR DRIVE (S)

## 63-20 MAIN GEARBOX

63/20/00/000/000/000

**MGB - Magnetic plug with electric detection system**

| | | | | |
|---|---|---|---|---|
| *AMM 05-40-00, 6-6* | PO | 10 FH | *2 FH* | |
| | | & 20 FH | *3 FH* | |
| | | & 30 FH | *5 FH* | |

GVI.

After the introduction to service of a new, overhauled or repaired component,
After installation of a component removed from the same helicopter,
Check to be performed during the ALF check nearest the due time in question.

63/20/00/000/000/020

**Mineral/Synthetic oil**

| | | | | |
|---|---|---|---|---|
| *AMM 12-10-00, 3-1* | PO | 30 FH | *5 FH* | |

DRN.

After the introduction to service of a new, overhauled or repaired component,
Oil change.
Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard.

63/20/00/000/000/050

**Spectrometric Oil Analysis Program (SOAP)**

| | | | | |
|---|---|---|---|---|
| *AMM 60-00-00, 6-1* | PO | 1 FH | *2 FH* | |

SDI.

After the introduction to service of a new, overhauled or repaired component,
First sampling on completion of the first ground run.
Oil monitoring using SOAP is optional.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

63/20/00/000/000/055

**Spectrometric Oil Analysis Program (SOAP)**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-1* | PO | 10 FH | *2 FH* |
| | | & 25 FH | *3 FH* |
| | | & 50 FH | *5 FH* |

SDI.

After the introduction to service of a new, overhauled or repaired component,
The sample must be taken during the inspection nearest to each due time.
Oil monitoring using SOAP is optional.

63/20/00/000/000/070

**MGB**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-2* | PO | 30 FH | *5 FH* |

GVI.

After the introduction to service of a new, overhauled or repaired component,
Check after installation.

## 63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/000

**Suspension bar**

| | | | |
|---|---|---|---|
| *AMM 63-32-00, 4-1* | PO | 2 FH | *8 FH* |

TCK.

Each time after the component is installed.
Tightening torque check.

# 64 - TAIL ROTOR

## 64-10 TAIL ROTOR BLADE

64/10/00/000/000/010

**Tail rotor blade**

| | | | |
|---|---|---|---|
| *AMM 64-10-00, 6-1* | PO | 150 FH | *15 FH* |

DI.

After the introduction to service of a new, overhauled or repaired component.
Check.

64/10/00/000/000/090

**TRH**

| | | | |
|---|---|---|---|
| *AMM 64-10-00, 8-22*<br>*AMM 65-21-00, 4-12* | PO | 2 FH | *8 FH* |

RTQ.

Each time after the component is installed.
Readjustement of the tightening torque check of the blade horn unit and the additional tuning weights.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

64/10/00/000/000/180

**Tracking fingers**

| | | | | |
|---|---|---|---|---|
| *AMM 64-10-00, 8-3* | PO | 1 FH | *2 FH* | |

GVI.

After the introduction to service of a new, overhauled or repaired component,
After installation of a component originating from another helicopter,
Mandatory check after first flight following installation.
Visual check the safetying of the tracking finger lock plate.

64/10/00/000/000/185

**Tracking fingers**

| | | | | |
|---|---|---|---|---|
| *AMM 64-10-00, 8-3* | PO | 10 FH | *2 FH* | |

GVI.

After the installation to service of a new, overhauled or repaired component,
After installation of a component originating from another helicopter,
Visual check the safetying of the tracking finger lock plate.

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE

65/10/00/000/000/030

**Tail rotor drive shaft**

| | | | | |
|---|---|---|---|---|
| *AMM 65-11-00, 5-1* | PO | 150 FH | *15 FH* | |

FT, GR.

Each time after the component is installed.
Balance check after each removal/installation the shaft.

65/10/00/000/000/170

**Forward shaft**

| | | | | |
|---|---|---|---|---|
| *AMM 65-11-00, 4-2* | PO | 2 FH | *8 FH* | |

GVI.

Each time after the component is installed.
Play check between the flange and the fairing.

### 65-20 TAIL GEARBOX

65/20/00/000/000/010

**TGB - Magnetic plug with electric detection system**

| | | | | |
|---|---|---|---|---|
| *AMM 05-40-00, 6-6* | PO | 10 FH | *2 FH* | |
| | | & 20 FH | *3 FH* | |
| | | & 30 FH | *5 FH* | |

GVI.

After the introduction to service of a new, overhauled or repaired component,
Check to be performed during the ALF check nearest the due time in question.

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|
| 65/20/00/000/000/040<br>**Spectrometric Oil Analysis Program (SOAP)** | *AMM 60-00-00, 6-1* | PO 1 FH | *2 FH* | |
| SDI.<br>After the introduction to service of a new, overhauled or repaired component,<br>First sampling on completion of the first ground run.<br>Oil monitoring using SOAP is optional. | | | | |
| 65/20/00/000/000/045<br>**Spectrometric Oil Analysis Program (SOAP)** | *AMM 60-00-00, 6-1* | PO 10 FH<br>& 25 FH<br>& 50 FH | *2 FH*<br>*3 FH*<br>*5 FH* | |
| SDI.<br>After the introduction to service of a new, overhauled or repaired component,<br>The sample must be taken during the inspection nearest to each due time.<br>Oil monitoring using SOAP is optional. | | | | |
| 65/20/00/000/000/060<br>**Running-in oil** | *AMM 65-21-00, 6-17* | PO 150 FH | *15 FH* | |
| DRN.<br>Oil change.<br>If Tail Gear Box is new or overhauled, change running-in oil. | | | | |
| 65/20/00/000/000/070<br>**TGB** | *AMM 65-21-00, 6-17* | PO 2 FH | *8 FH* | |
| GVI.<br>Each time after the component is installed.<br>Check. | | | | |
| 65/20/00/000/000/080<br>**Attachment bolt** | *AMM 65-21-00, 6-18* | PO 2 FH | *8 FH* | |
| TCK.<br>Each time after the component is installed.<br>Tightening torque check. | | | | |

| Task Number<br>Description/ Remarks | Documentation | Interval | Margin | Initial |
|---|---|---|---|---|

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

67/30/00/402/000/050

**Servocontrol, main**

*AMM 67-32-00, 6-1* PO 15 FH *3 FH*

AC64182 (704A44831062)

FT.

After the introduction to service of a new, overhauled or repaired component,
Loads check.

67/30/00/402/000/070

**Servocontrol, main**

*AMM 67-32-00, 4-1*
*MTC 20.02.05.404* PO 2 FH *8 FH*

RTQ.

Each time after the component is installed.
Readjust the tightening torque of attaching bolts.

67/30/00/403/000/040

**Servocontrol, tail**

*AMM 67-33-00, 6-2* PO 15 FH *3 FH*

AC66436 (704A44831063)

FT.

After the introduction to service of a new, overhauled or repaired component,
Loads check.

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**