CHAPTER 53 — FUSELAGE

CONTENTS — MAINTENANCE PROCEDURES

Paragraph Number	Title	Chapter/Section Number	Page Number
	FUSELAGE		
53-1	Fuselage	53-00-00	3
53-2	Description	53-00-00	3
53-3	Forward fuselage	53-00-00	3

FIGURES

Figure Number	Title	Page Number
53-1	Model 412 SAR helicopter	4
53-2	Model 412 SAR forward fuselage	5

FUSELAGE

FUSELAGE

53-1. FUSELAGE.

53-2. DESCRIPTION.

The fuselage (figure 53-1) consists of forward fuselage and tailboom. Maintenance data for the fuselage and tailboom is contained in BHT-412-MM maintenance manual.

53-3. FORWARD FUSELAGE.

Avionics and weather radar equipment is contained in the nose compartment (figure 53-2). Upper and lower hinged nose compartment doors provides access to the electrical compartments. For maintenance of avionics and weather radar equipment, refer to Chapters 95 through 98 of this supplement.


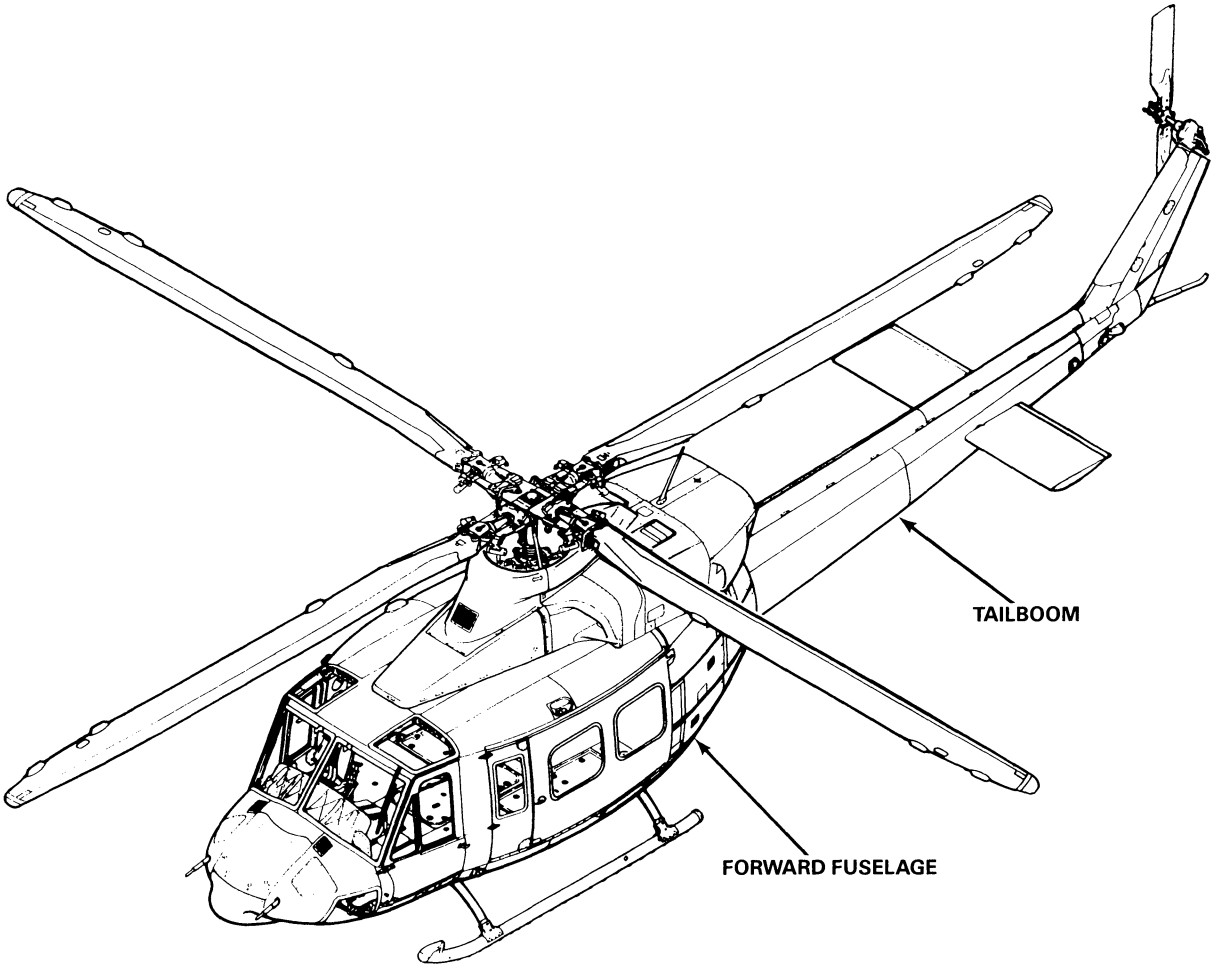


Figure 53-1. Model 412 SAR helicopter

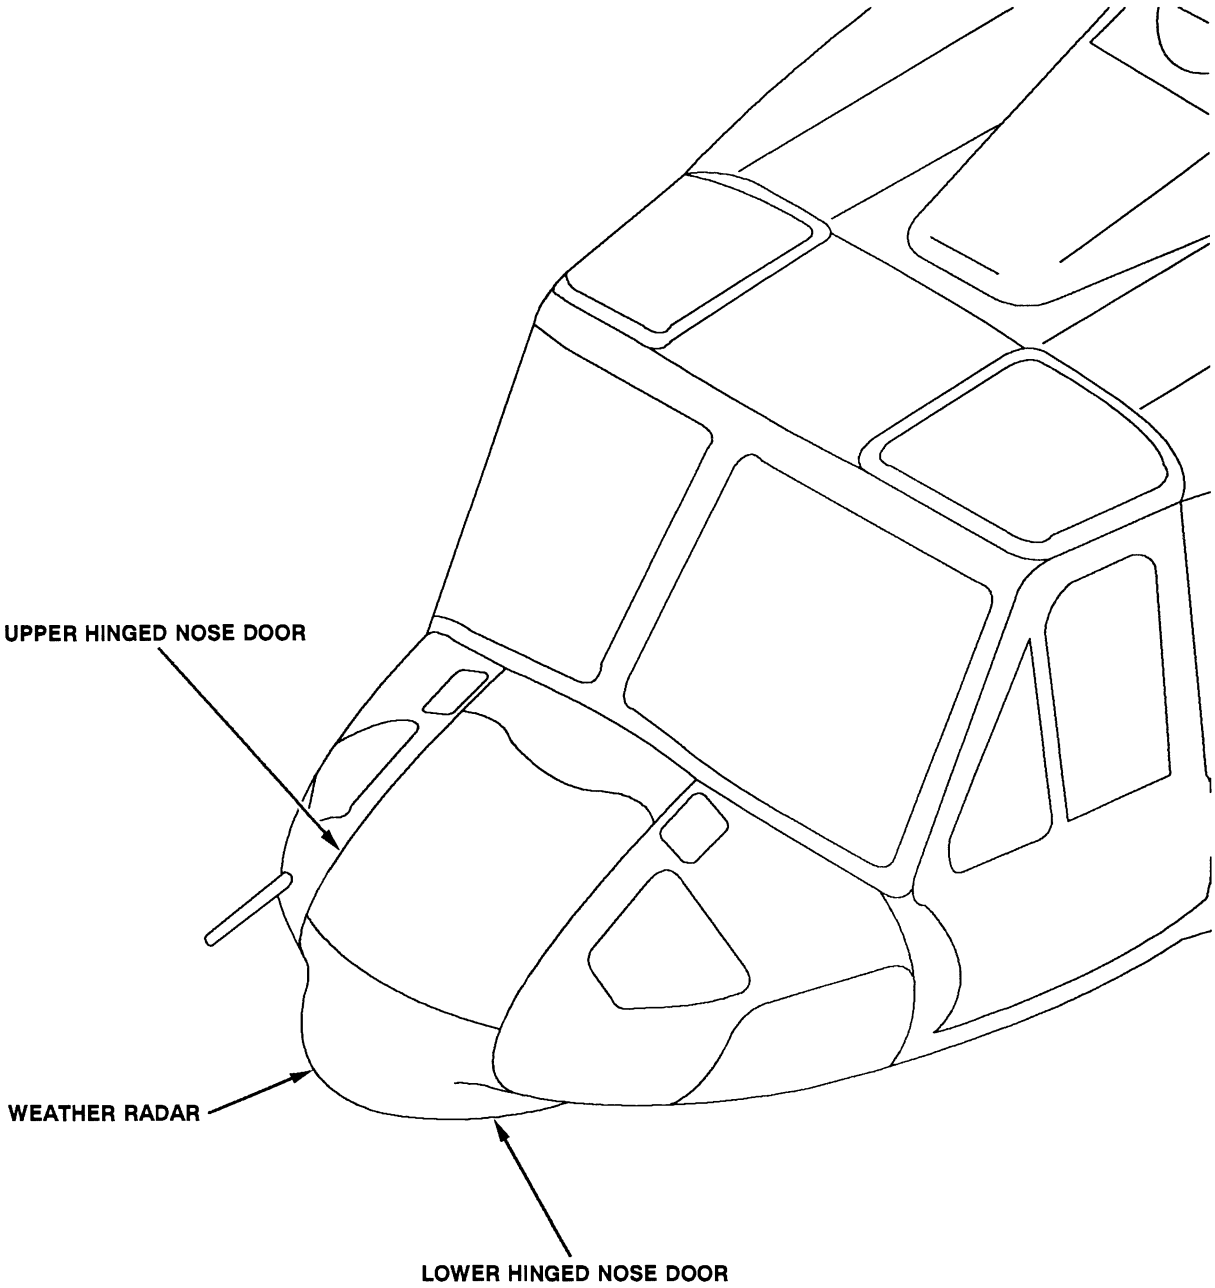

412-M/S-53-2
C0000

Figure 53-2. Model 412 SAR forward fuselage