CHAPTER

32

LANDING GEAR

CHAPTER 32
LANDING GEAR

CH-SE-SU	Schem	Page	Sheet	Date
32-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
32-CONTENTS				
		1		Apr 23/2025
		2		Dec 24/2024
32-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
32-31-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
32-31-12				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
32-31-15				
		1		Apr 23/2025
32-35-11				
		1		May 15/2024
32-41-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
32-42-11				
		1	1	May 15/2024
			2	May 15/2024
32-42-12				
		1		May 15/2024
32-44-11				
		1		May 15/2024
32-46-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
32-49-11				
		1	1	May 15/2024
			2	May 15/2024
32-51-11				
		1		May 15/2024
32-64-11				
		1	1	May 15/2024
32-64-11 (cont)				
			2	May 15/2024
32-64-12				
		1	1	Dec 24/2024
			2	May 15/2024
32-64-21				
		1		May 15/2024
32-64-31				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 32
LANDING GEAR

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
LANDING GEAR CONTROL SYSTEM						
AIR/GND SYSTEM 1 & LEVER LATCH	32-31-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS	32-31-12		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
LANDING GEAR LEVER CTRL	32-31-15		1		Apr 23/2025	ALL
ALTERNATE EXTENSION						
ALTERNATE LANDING GEAR EXTENSION SYSTEM	32-35-11		1		May 15/2024	ALL
ANTISKID BRAKE SYSTEM						
ANTISKID SYSTEM	32-41-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
AUTOBRAKE SYSTEM						
AUTOBRAKE SYSTEM	32-42-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ANTISKID AUTOBRAKE COMMUNICATION INTERFACES	32-42-12		1		May 15/2024	ALL
PARKING BRAKE SYSTEM						
PARKING BRAKE SYSTEM	32-44-11		1		May 15/2024	ALL
BRAKE TEMPERATURE MONITORING SYSTEM						
LG BRAKE TEMPERATURE MONITOR SYSTEM	32-46-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
TIRE PRESSURE INDICATION SYSTEM (TPIS)						
TIRE PRESSURE INDICATION	32-49-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
NOSE WHEEL STEERING SYSTEM						
NOSE GEAR STEERING	32-51-11		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 32
LANDING GEAR

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
LANDING GEAR POSITION INDICATING AND WARNING SYSTEM						
LANDING GEAR POSITION INDICATING SYSTEM 1	32-64-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
LANDING GEAR POSITION INDICATING SYSTEM 2	32-64-12		1	1	Dec 24/2024	ALL
				2	May 15/2024	ALL
LANDING GEAR WARNING	32-64-21		1		May 15/2024	ALL
PSEU ARINC 429 INTERFACES	32-64-31		1		May 15/2024	ALL


ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 32
LANDING GEAR

CH-SE-SU	Title
32-31-11	AIR/GND SYSTEM 1 & LEVER LATCH
32-31-12	AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS
32-35-11	ALTERNATE LANDING GEAR EXTENSION SYSTEM
32-42-12	ANTISKID AUTOBRAKE COMMUNICATION INTERFACES
32-41-11	ANTISKID SYSTEM
32-42-11	AUTOBRAKE SYSTEM
32-31-15	LANDING GEAR LEVER CTRL
32-64-11	LANDING GEAR POSITION INDICATING SYSTEM 1
32-64-12	LANDING GEAR POSITION INDICATING SYSTEM 2
32-64-21	LANDING GEAR WARNING
32-46-11	LG BRAKE TEMPERATURE MONITOR SYSTEM
32-51-11	NOSE GEAR STEERING
32-44-11	PARKING BRAKE SYSTEM
32-64-31	PSEU ARINC 429 INTERFACES
32-49-11	TIRE PRESSURE INDICATION

32-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

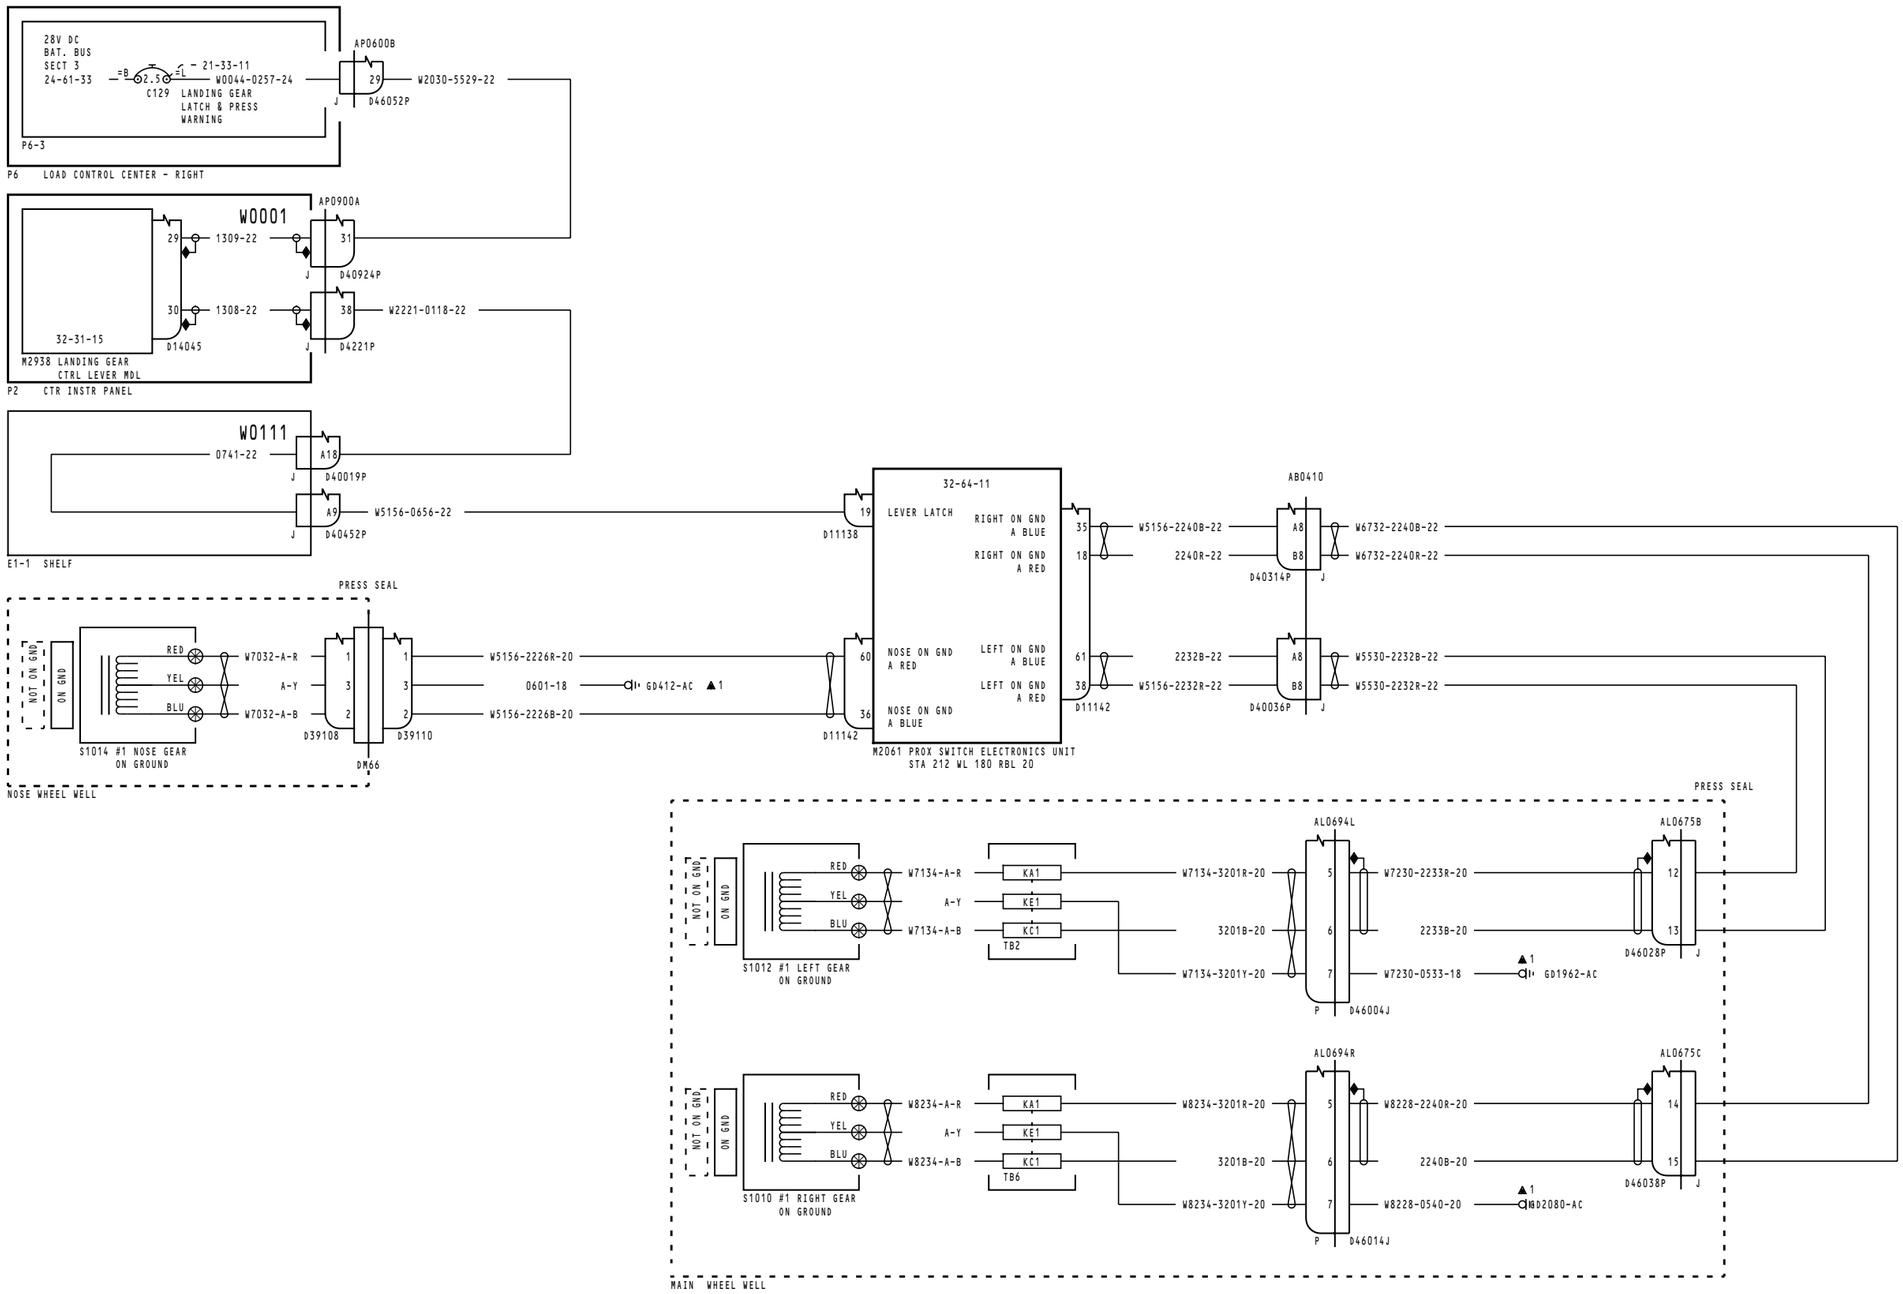

ECCN 9E991 BOEING PROPRIETARY - See title page for details


32-31-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B

7

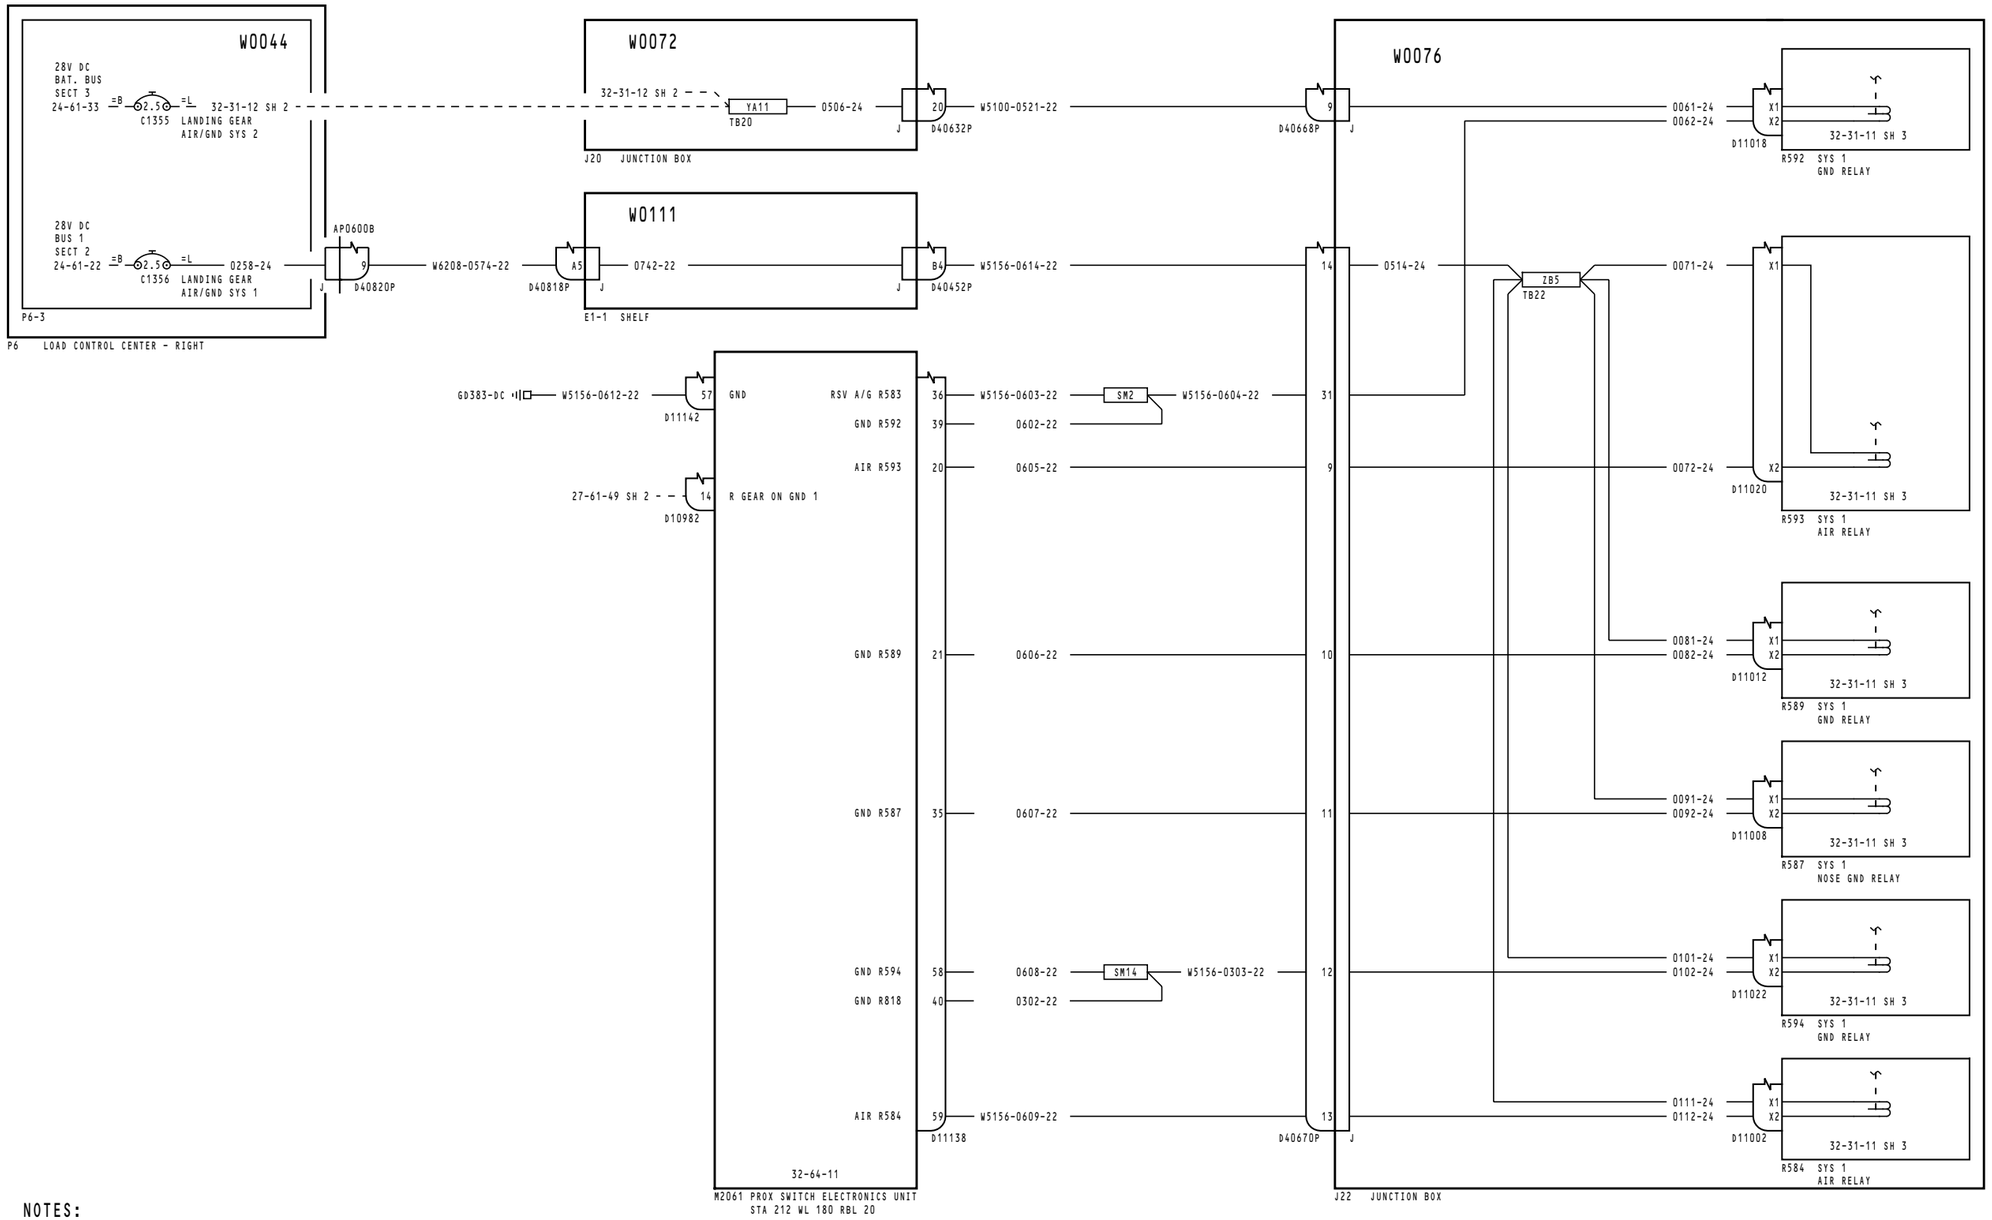


NOTES:


ALL	AIR/GND SYSTEM 1 & LEVER LATCH
	D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-31-11
Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

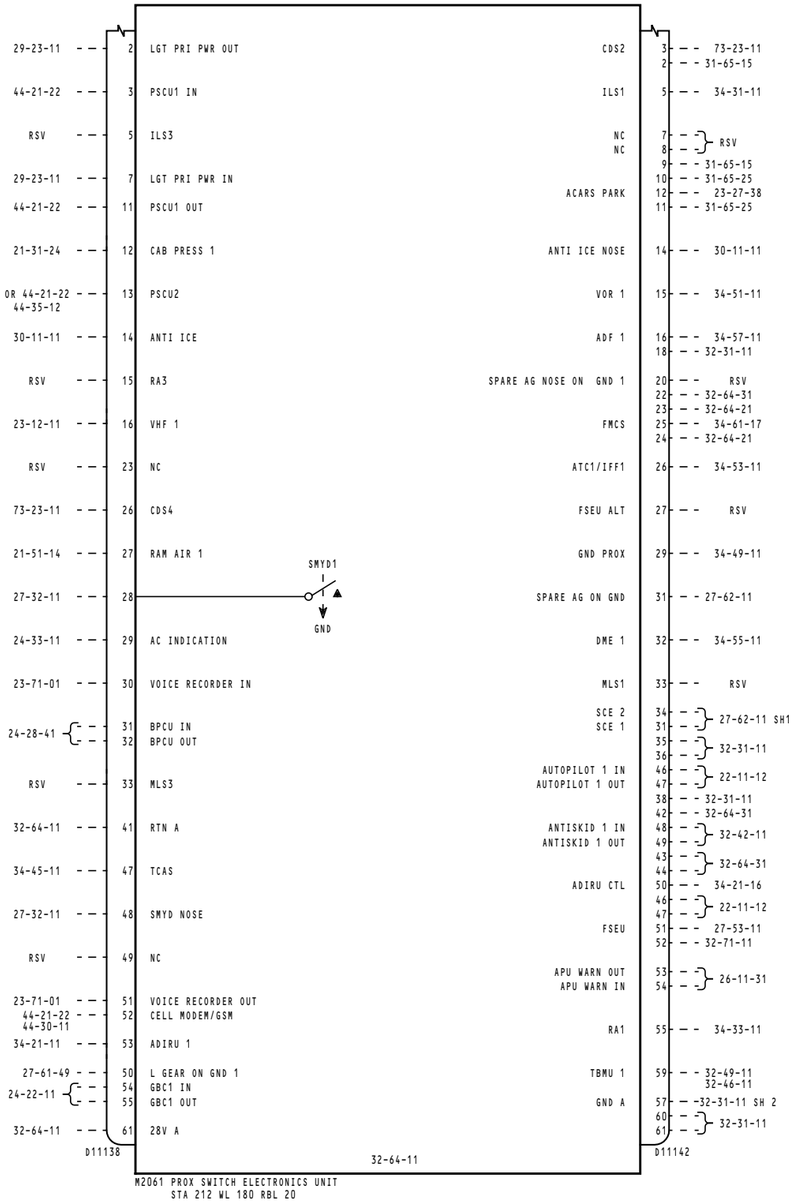

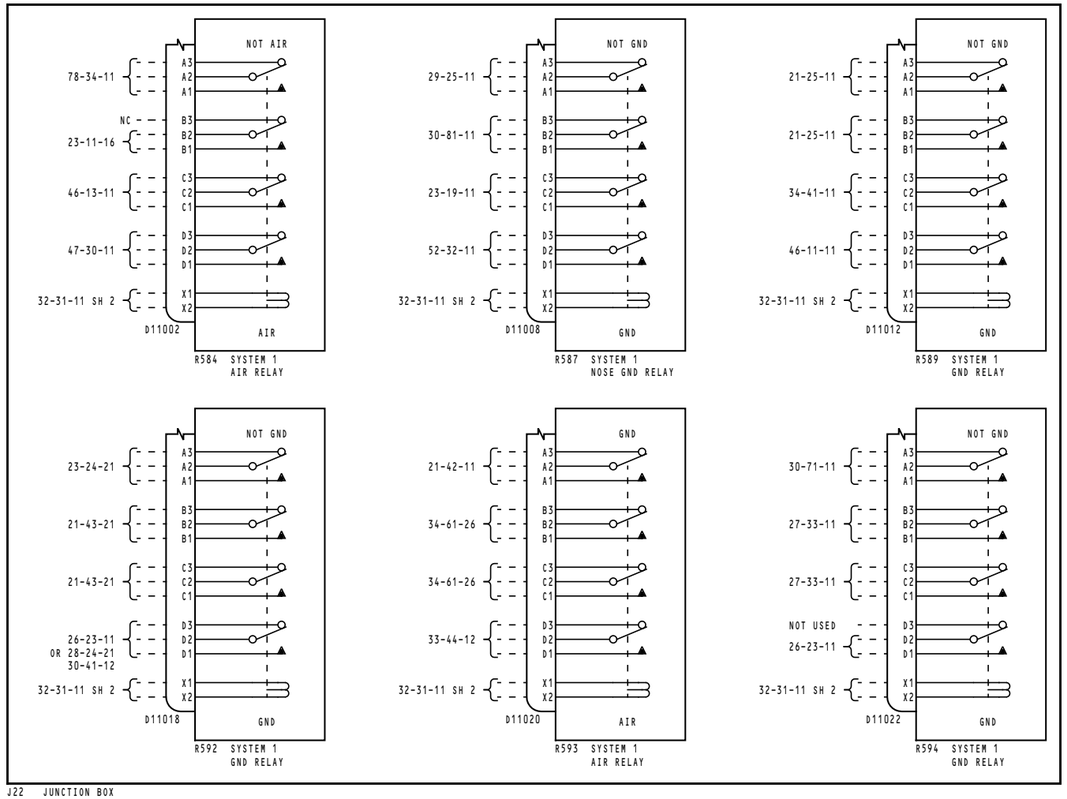

J22 JUNCTION BOX


NOTES:

THE DIAGRAM REFERENCES REPRESENT A MAXIMUM CONFIGURATION. FOR INDIVIDUAL AIRPLANES, SEE REF. DIAGRAM FOR ACTUAL CONF.

32-31-11

Page 1
Sheet 3
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

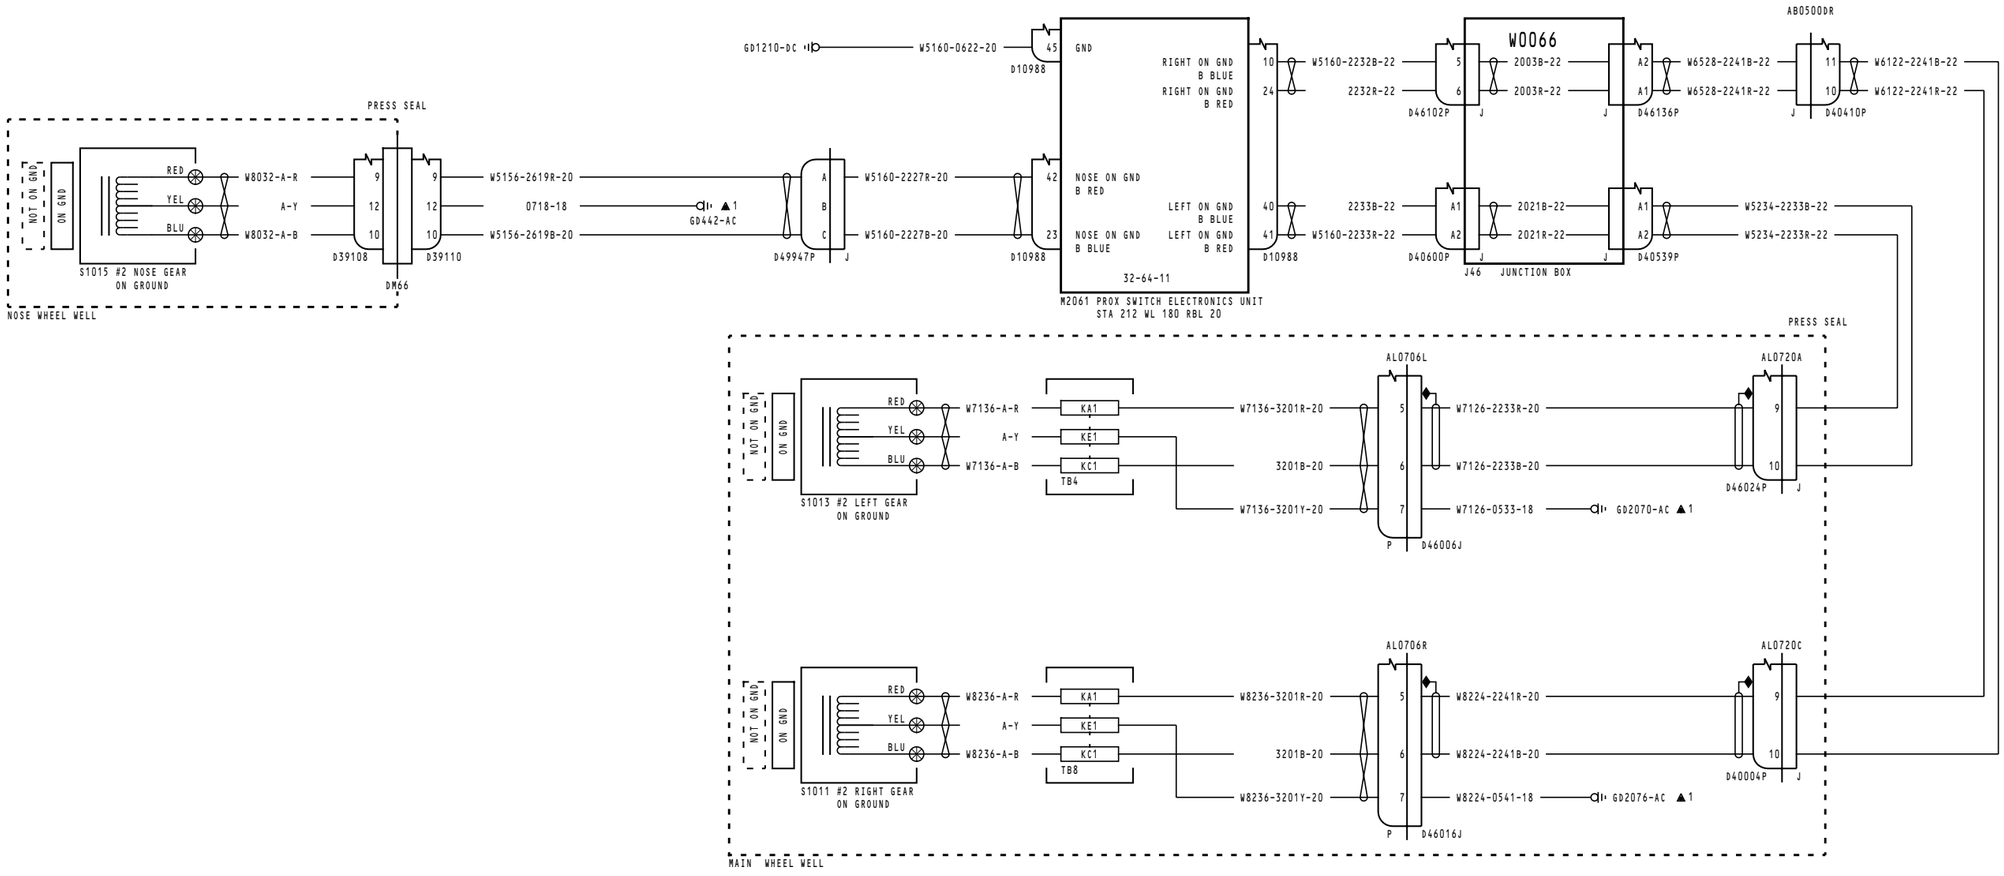


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-31-12

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
26

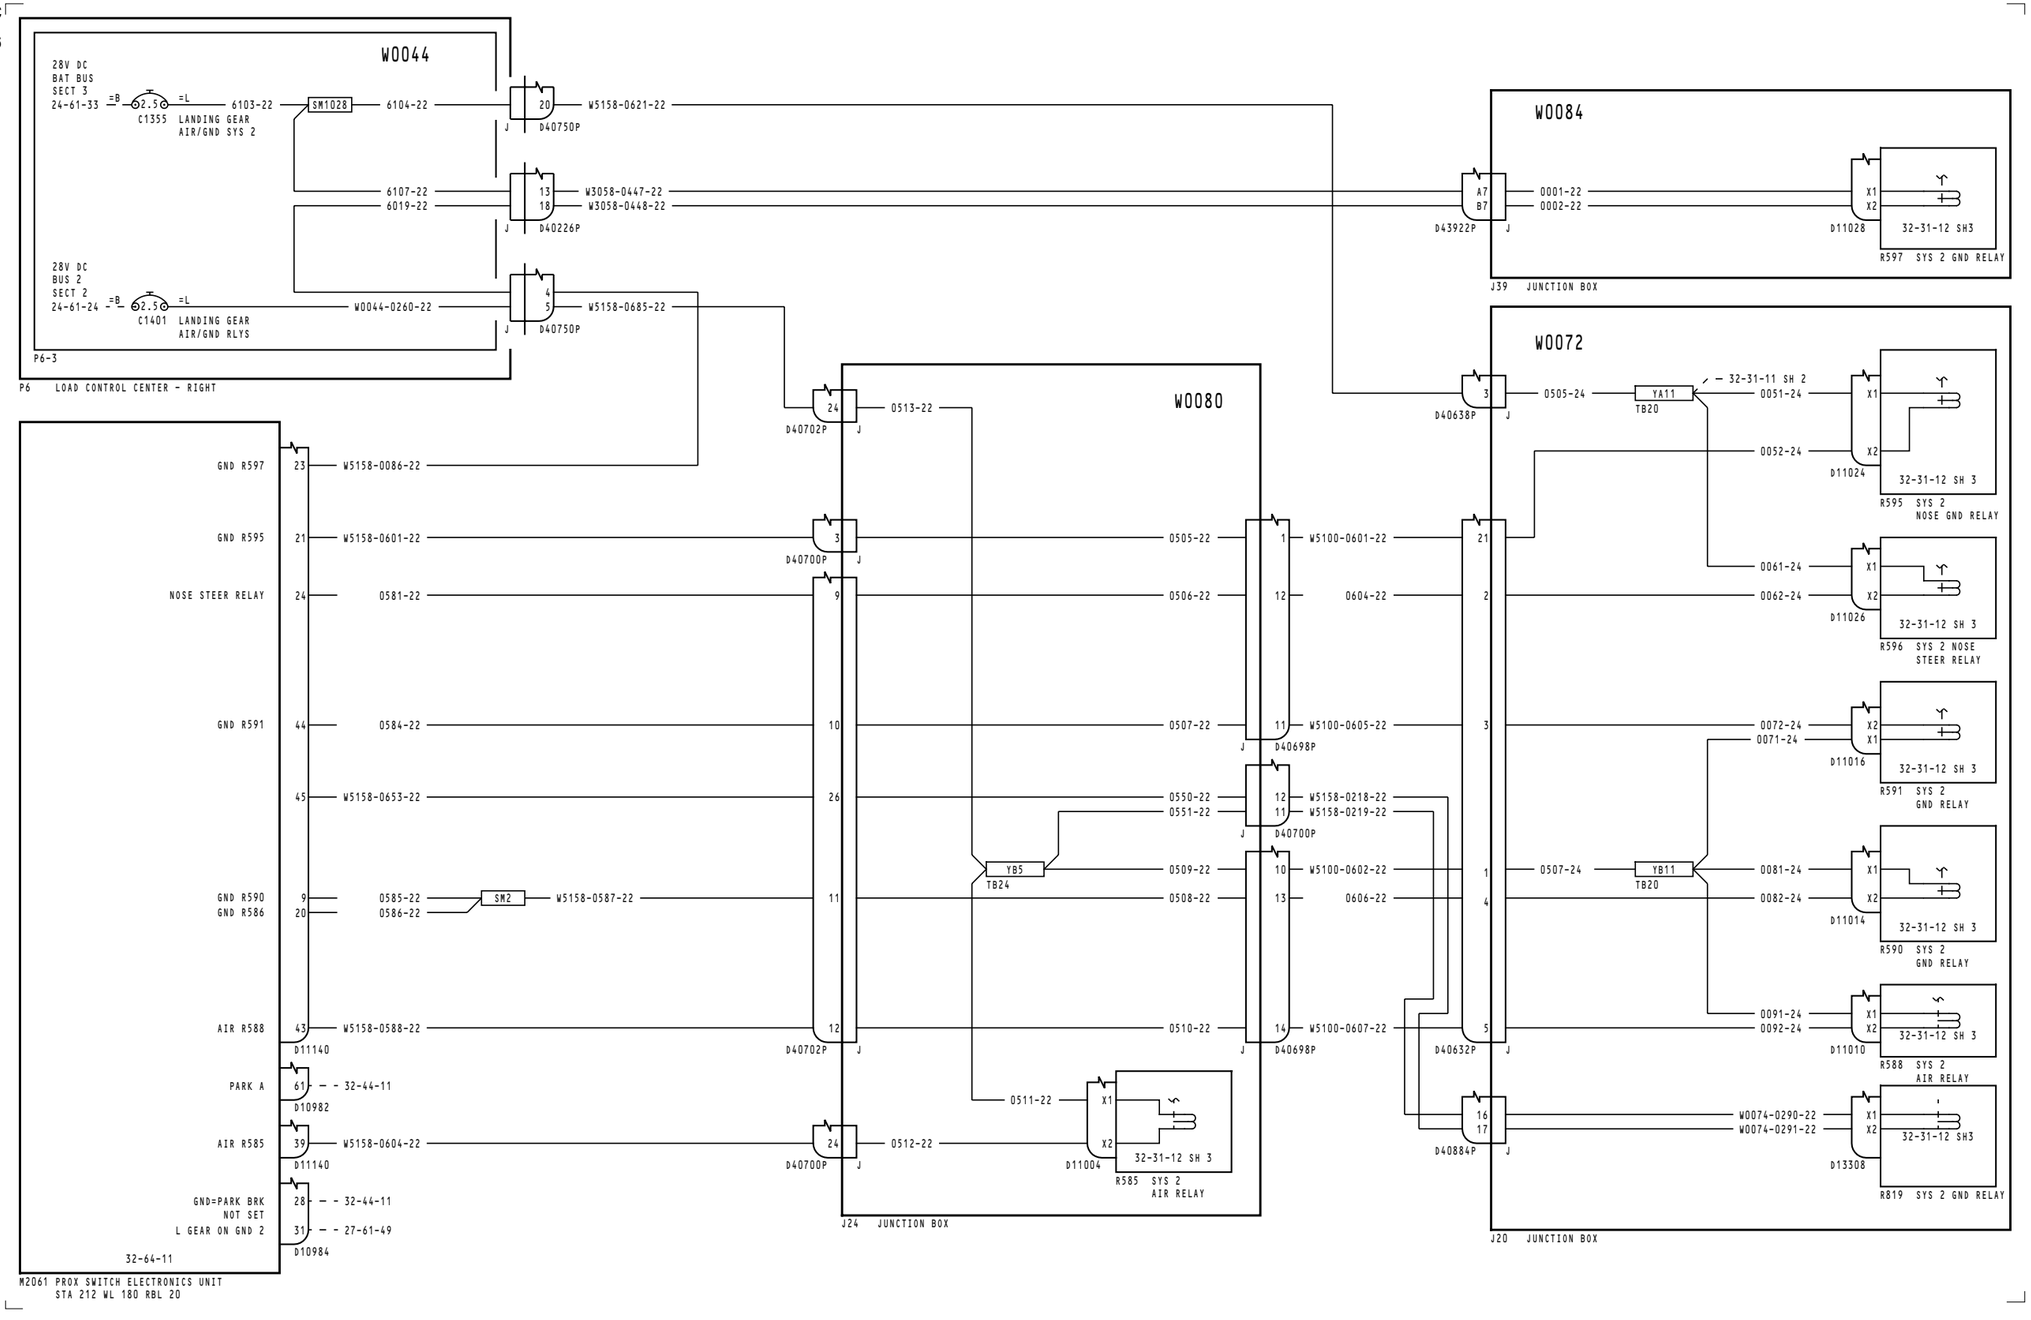

ALL


AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details


32-31-12

Page 1
Sheet 2
May 15/2024

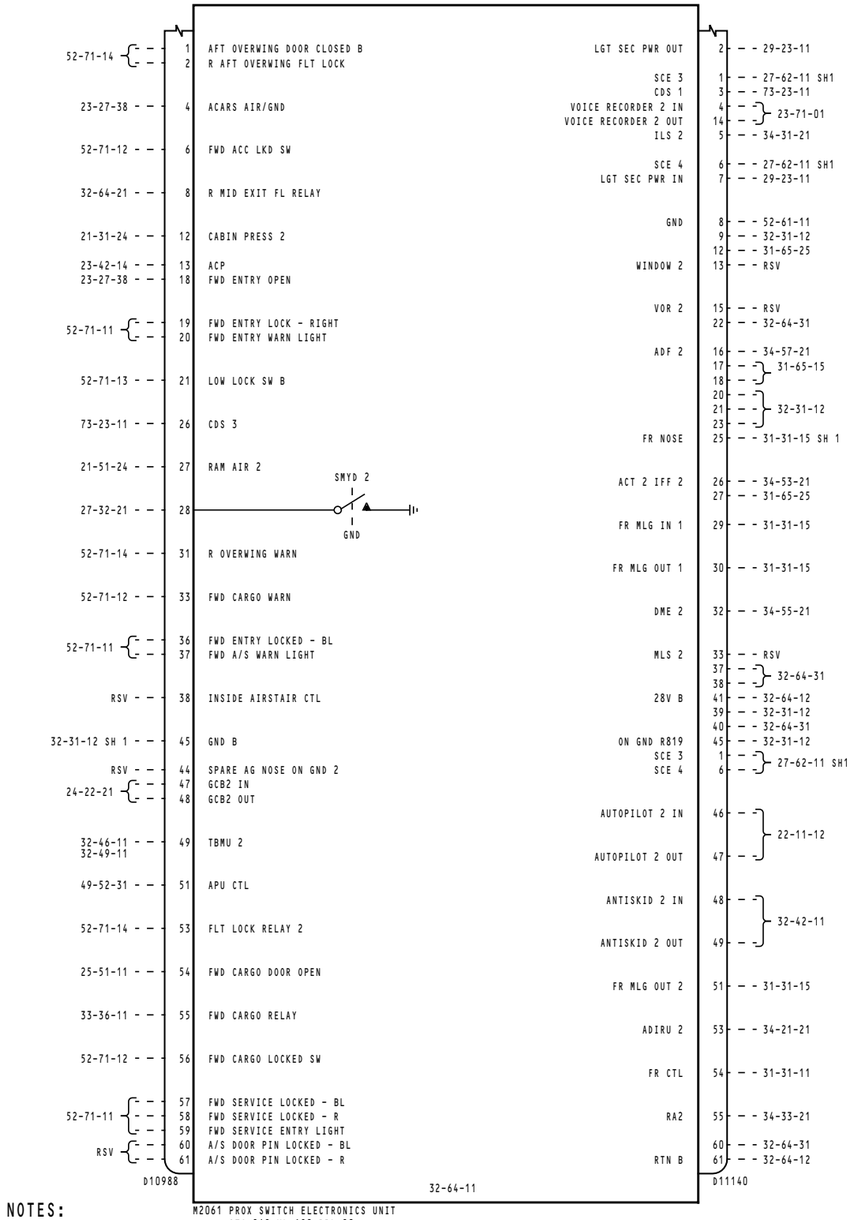


NOTES:


THE DIAGRAM REFERENCES REPRESENT A MAXIMUM CONFIGURATION. FOR INDIVIDUAL AIRPLANES, SEE REF. DIAGRAM FOR ACTUAL CONF.

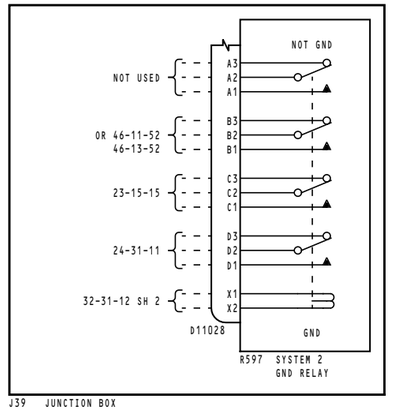

J39 JUNCTION BOX

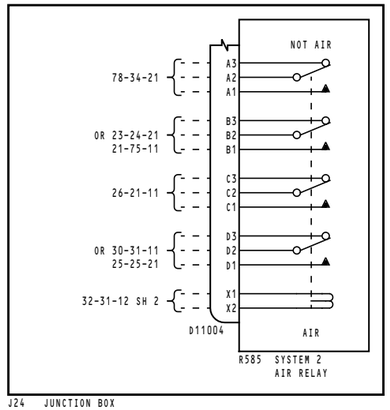

J24 JUNCTION BOX

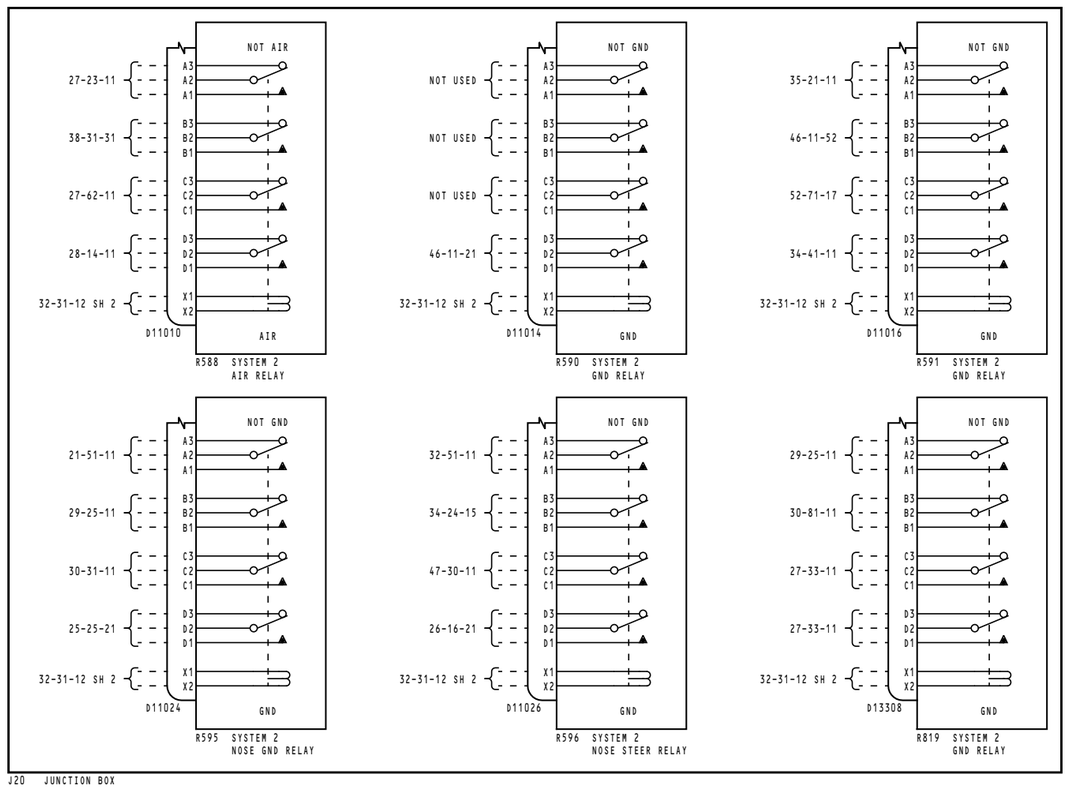

J20 JUNCTION BOX


ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

32-31-12

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

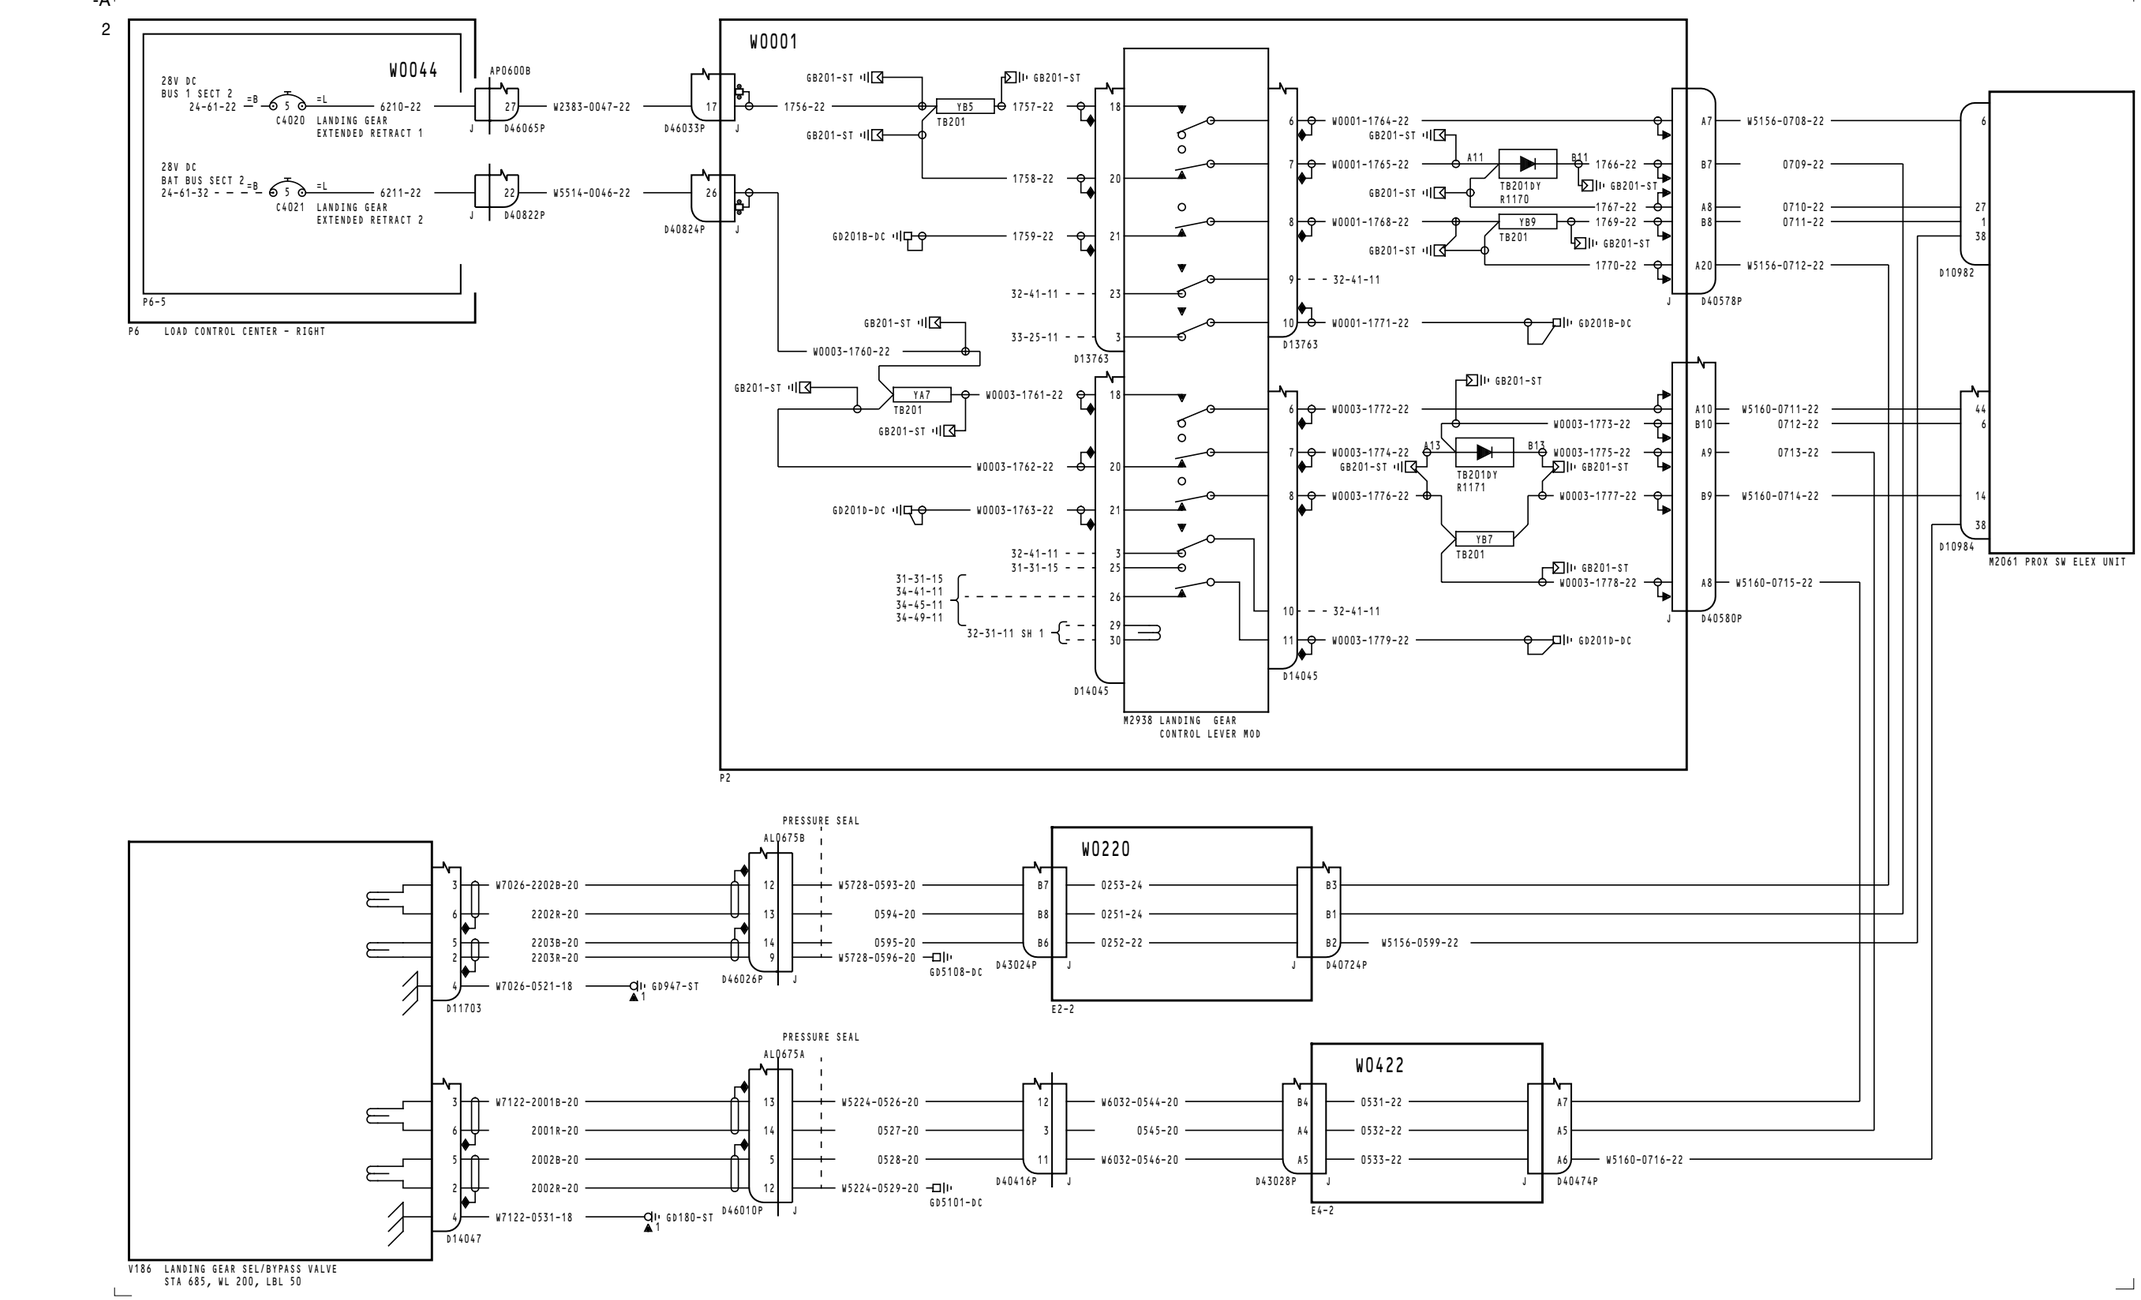

ECCN 9E991 BOEING PROPRIETARY - See title page for details


32-31-15

Page 1

Apr 23/2025

737-8 WIRING DIAGRAM MANUAL

-D
8

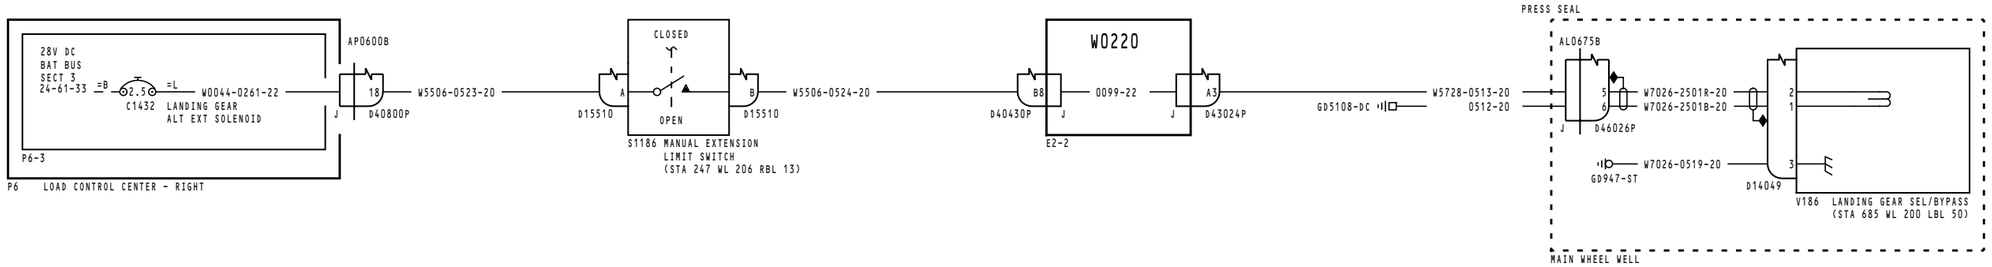


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-35-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

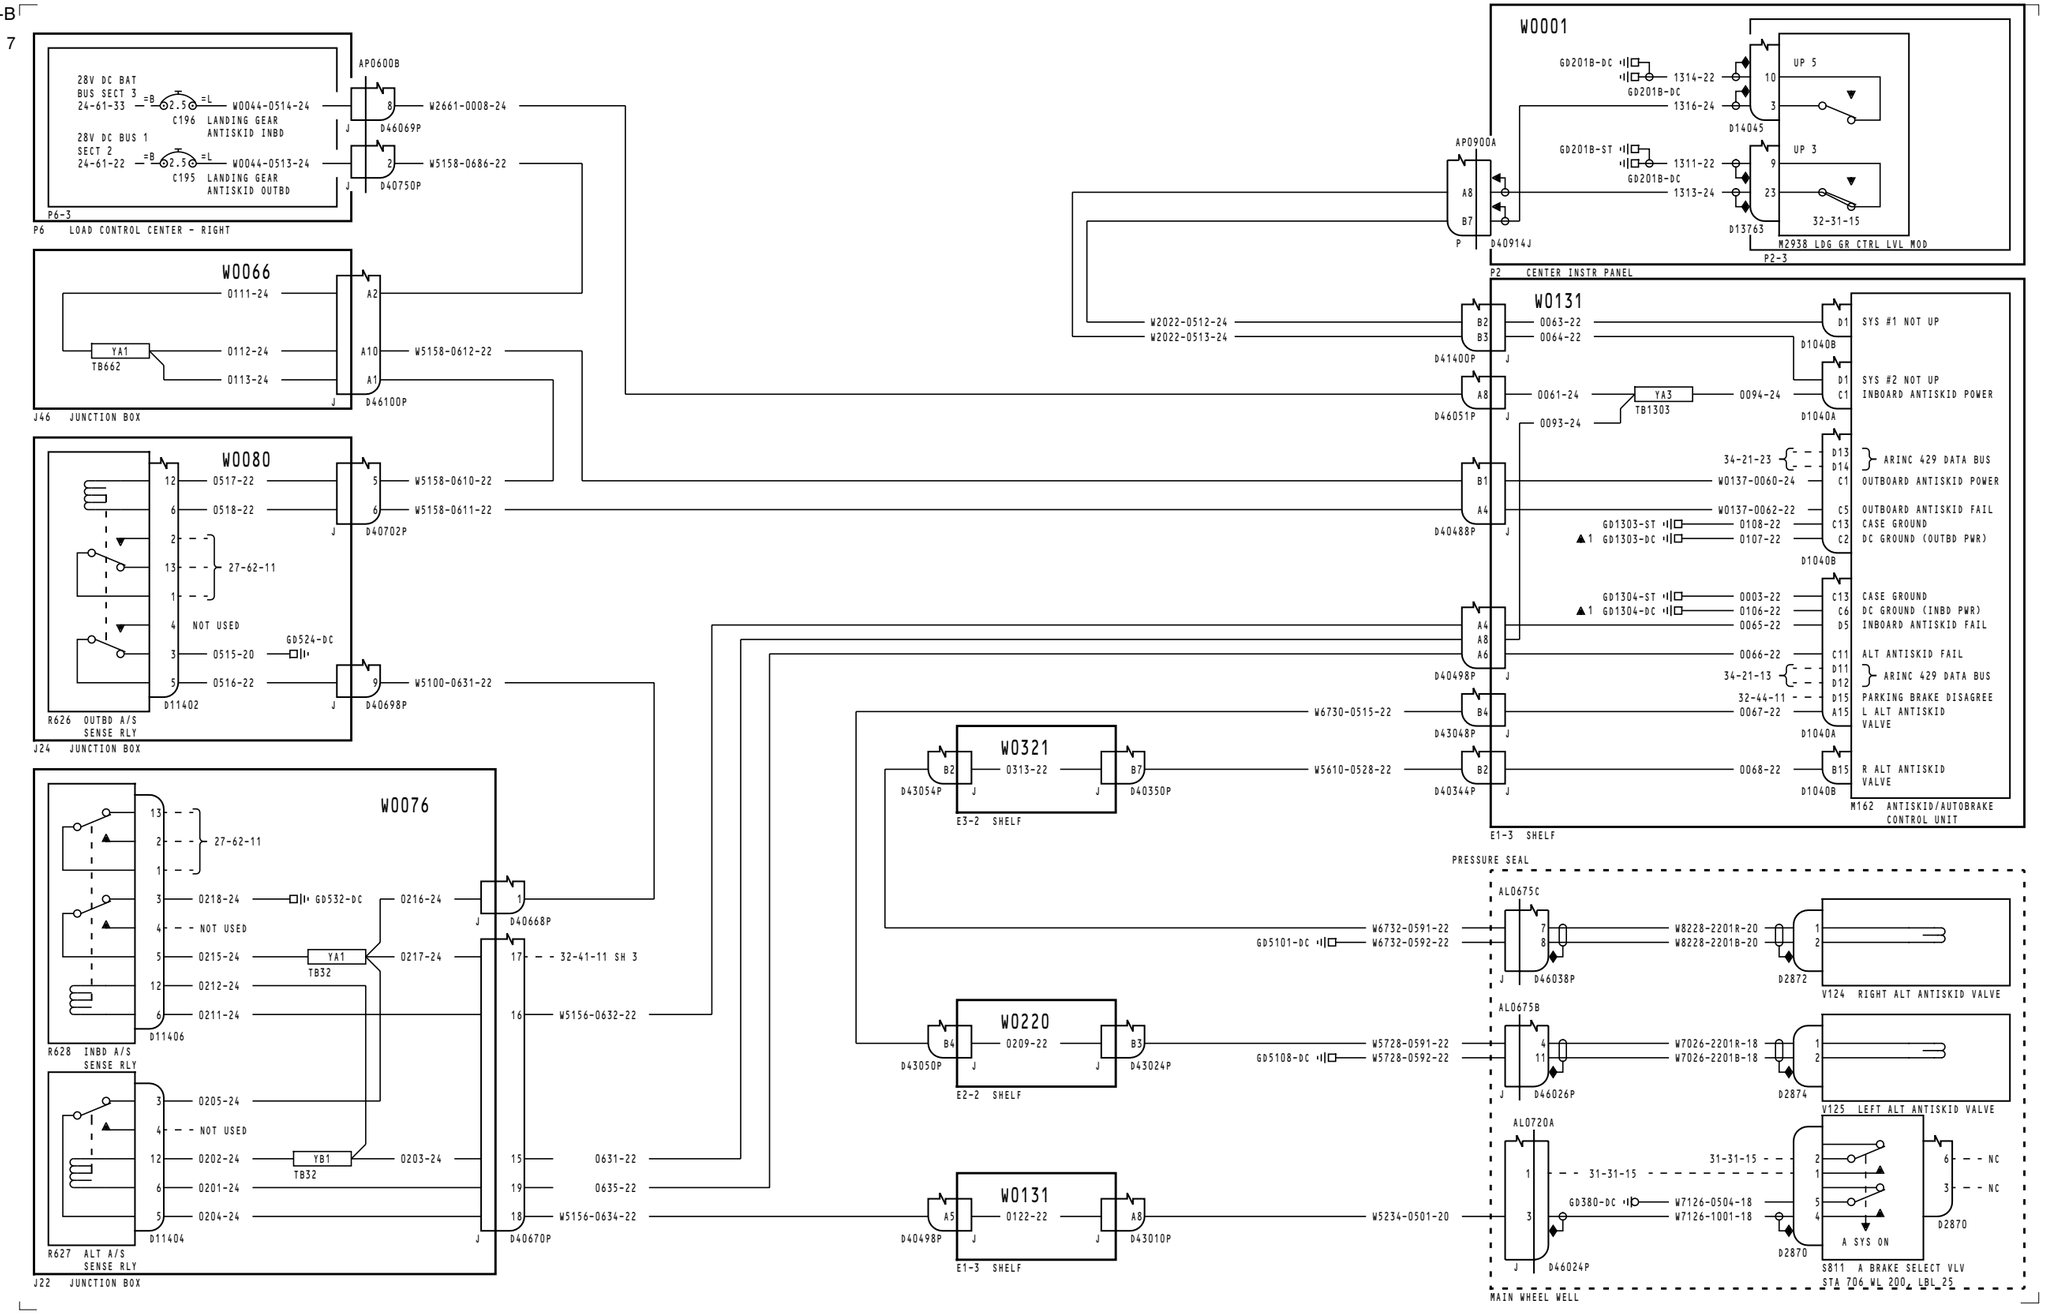

ALL

ANTISKID SYSTEM

D280AM1215

32-41-11

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-41-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

22

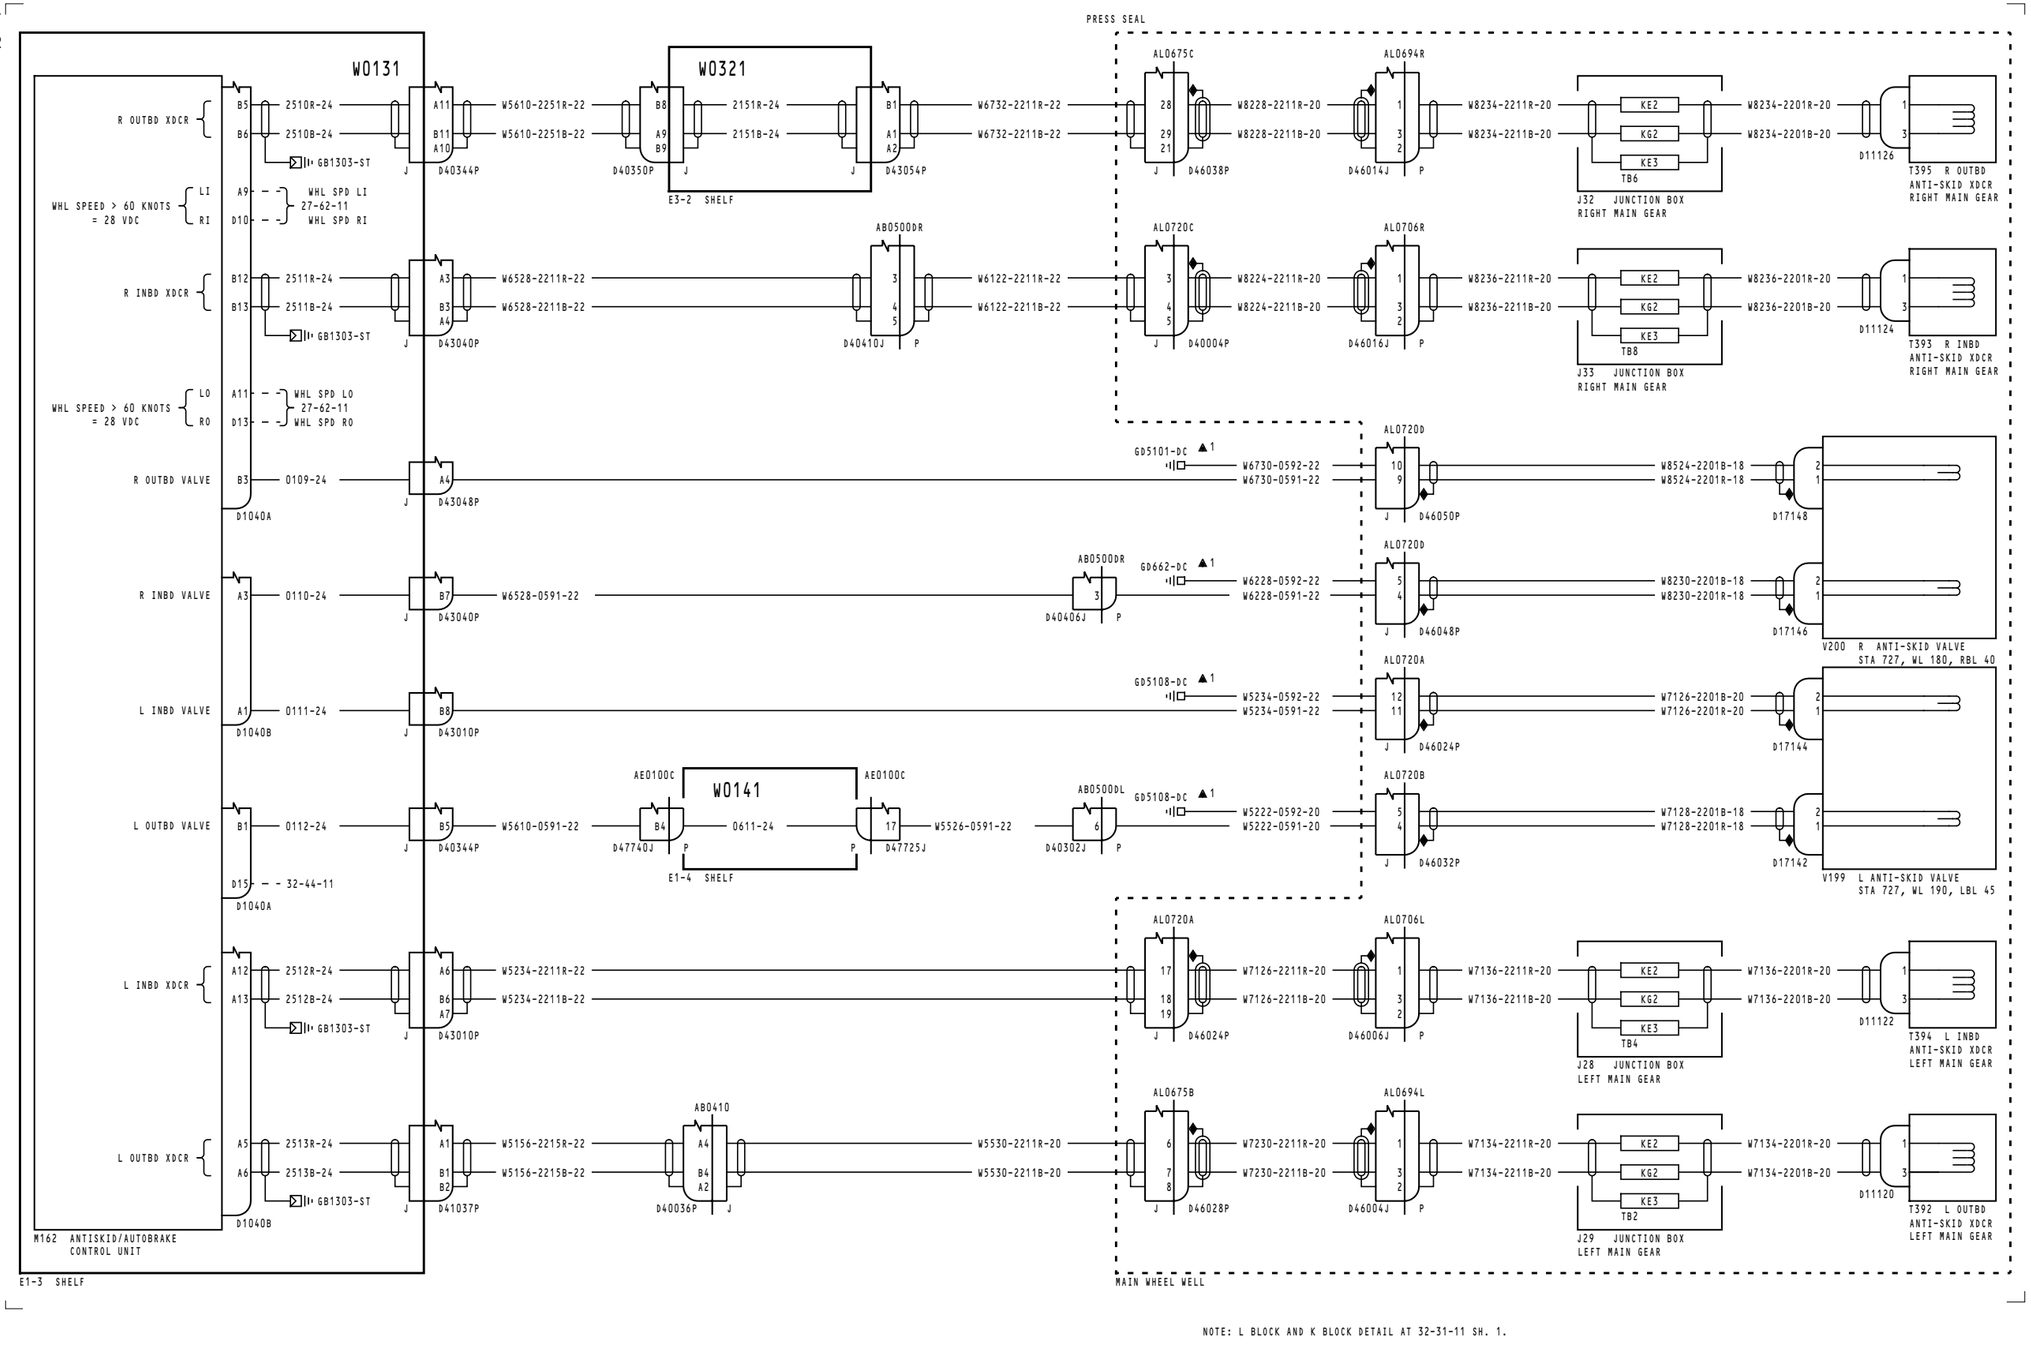

NOTE: L BLOCK AND K BLOCK DETAIL AT 32-31-11 SH. 1.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-41-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL




ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-41-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

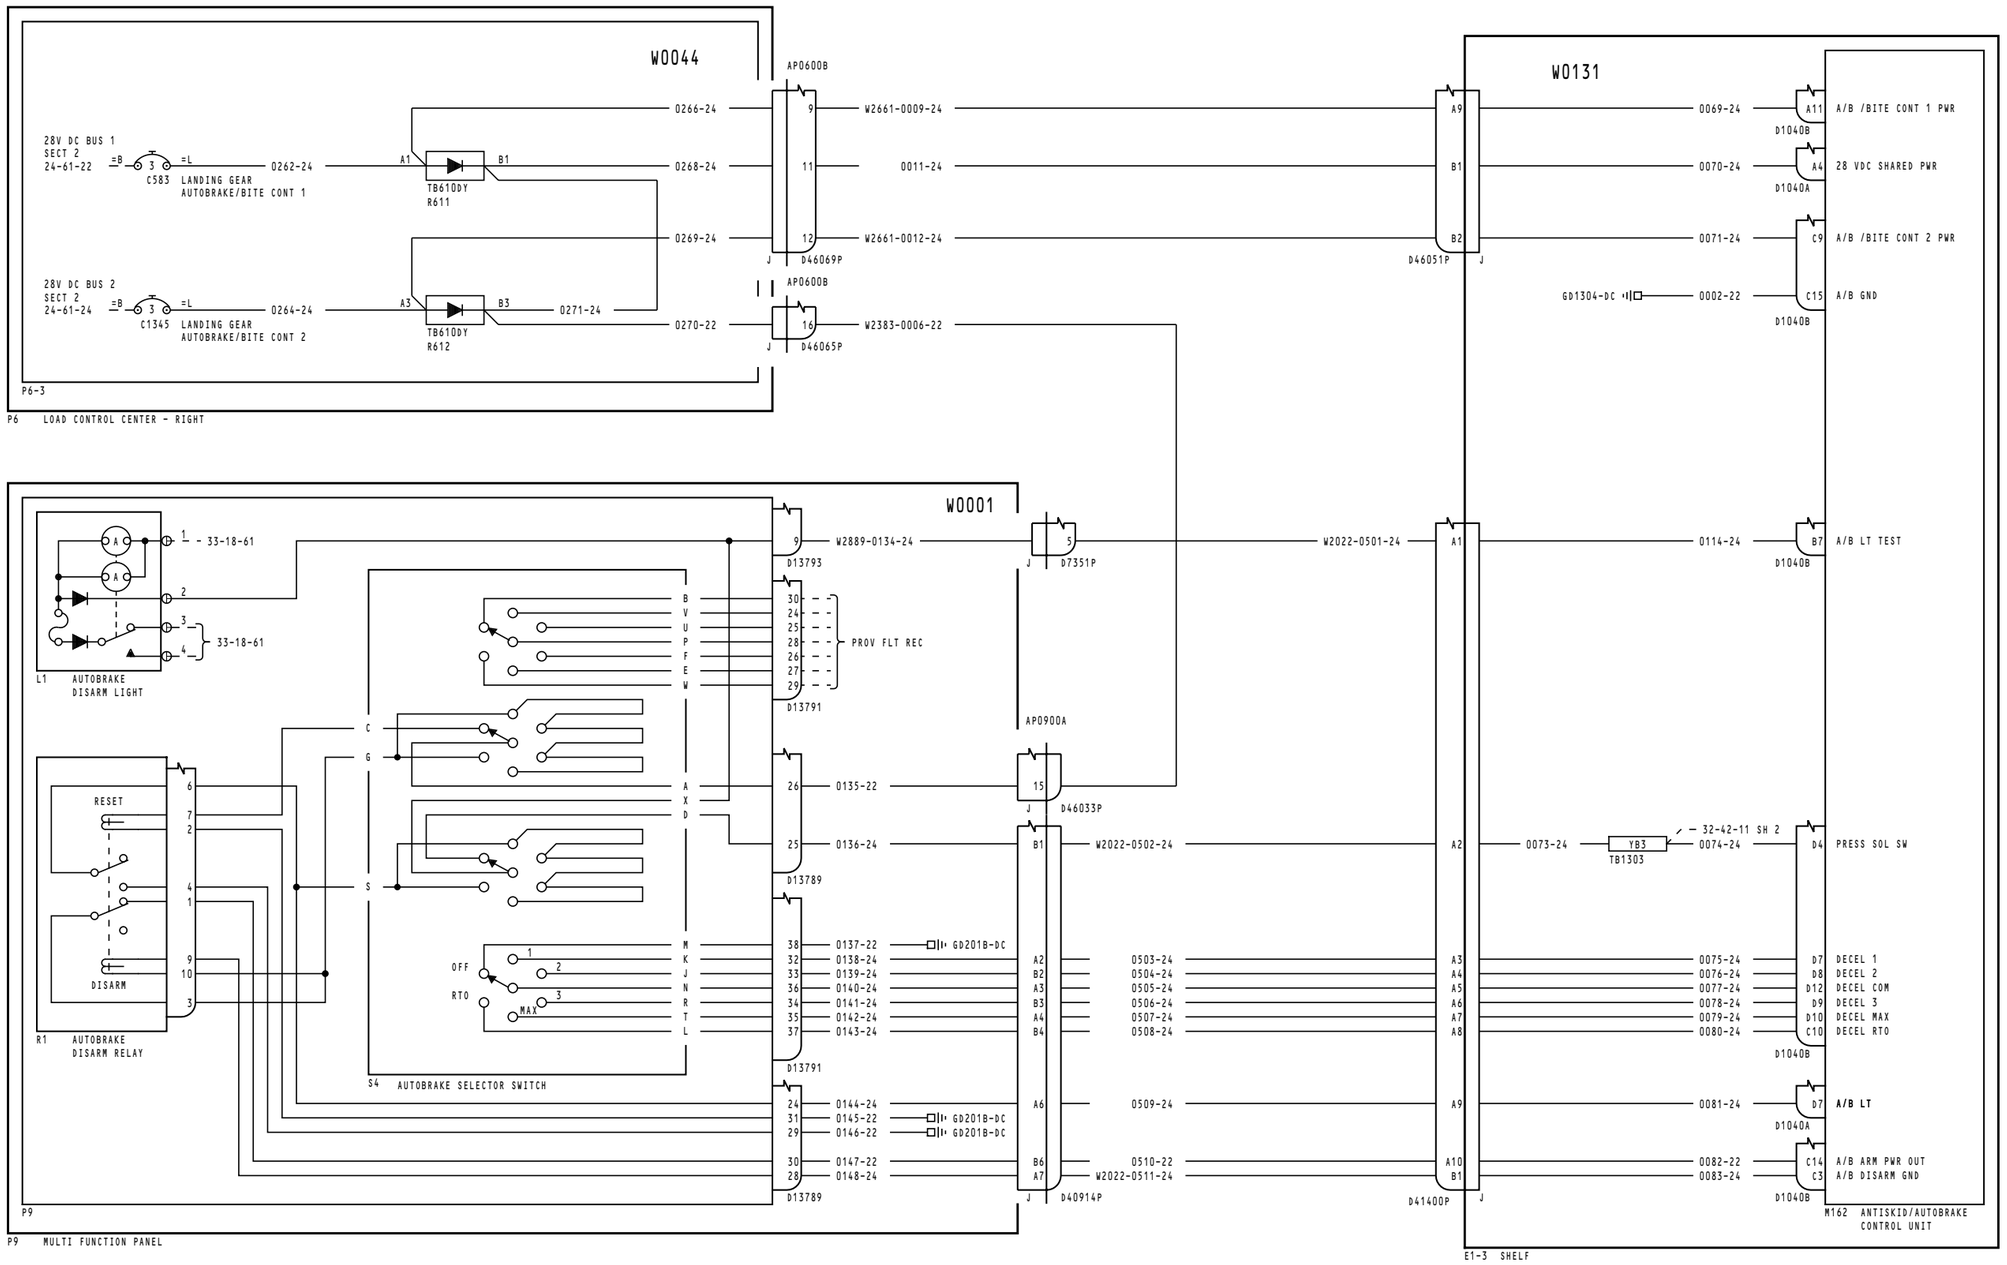


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-42-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
10

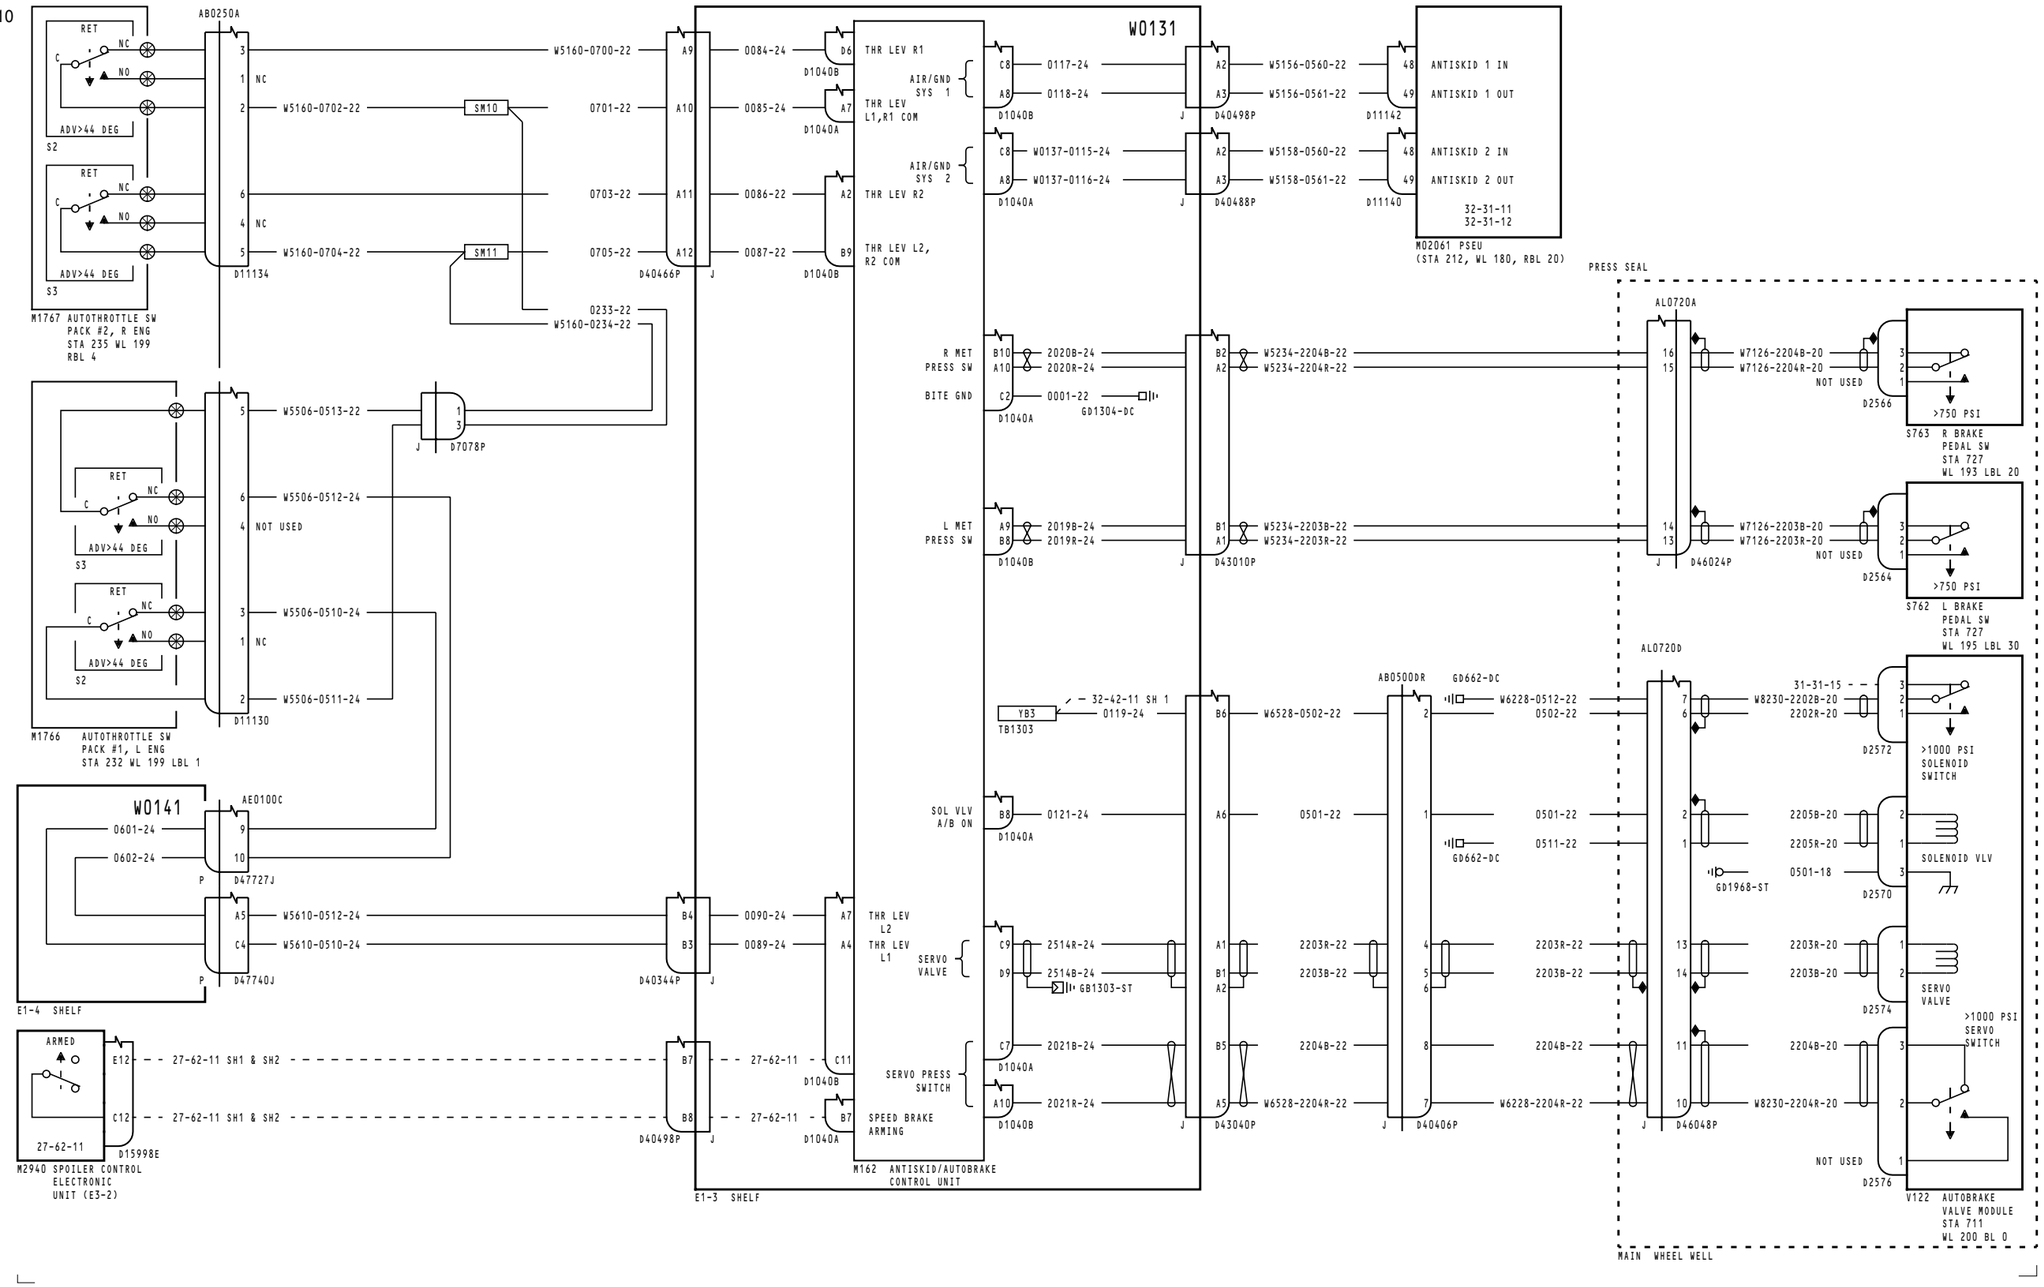


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-42-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

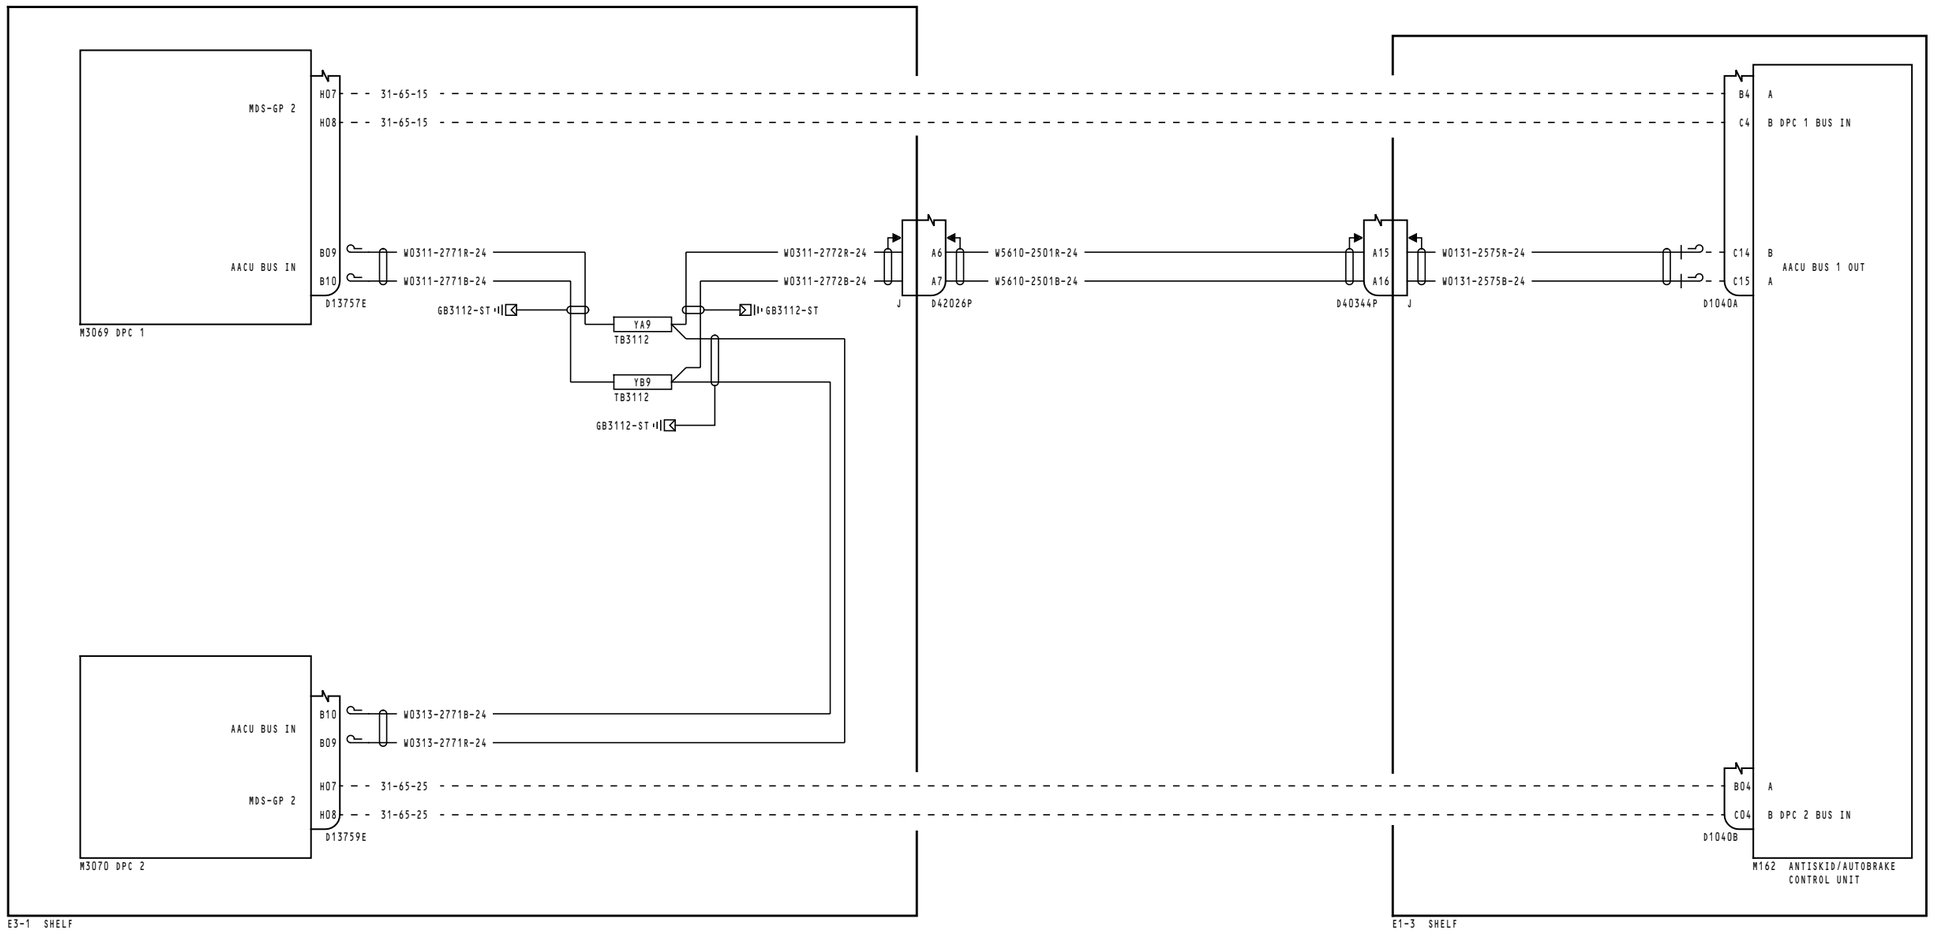

ECCN 9E991 BOEING PROPRIETARY - See title page for details


32-42-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
34

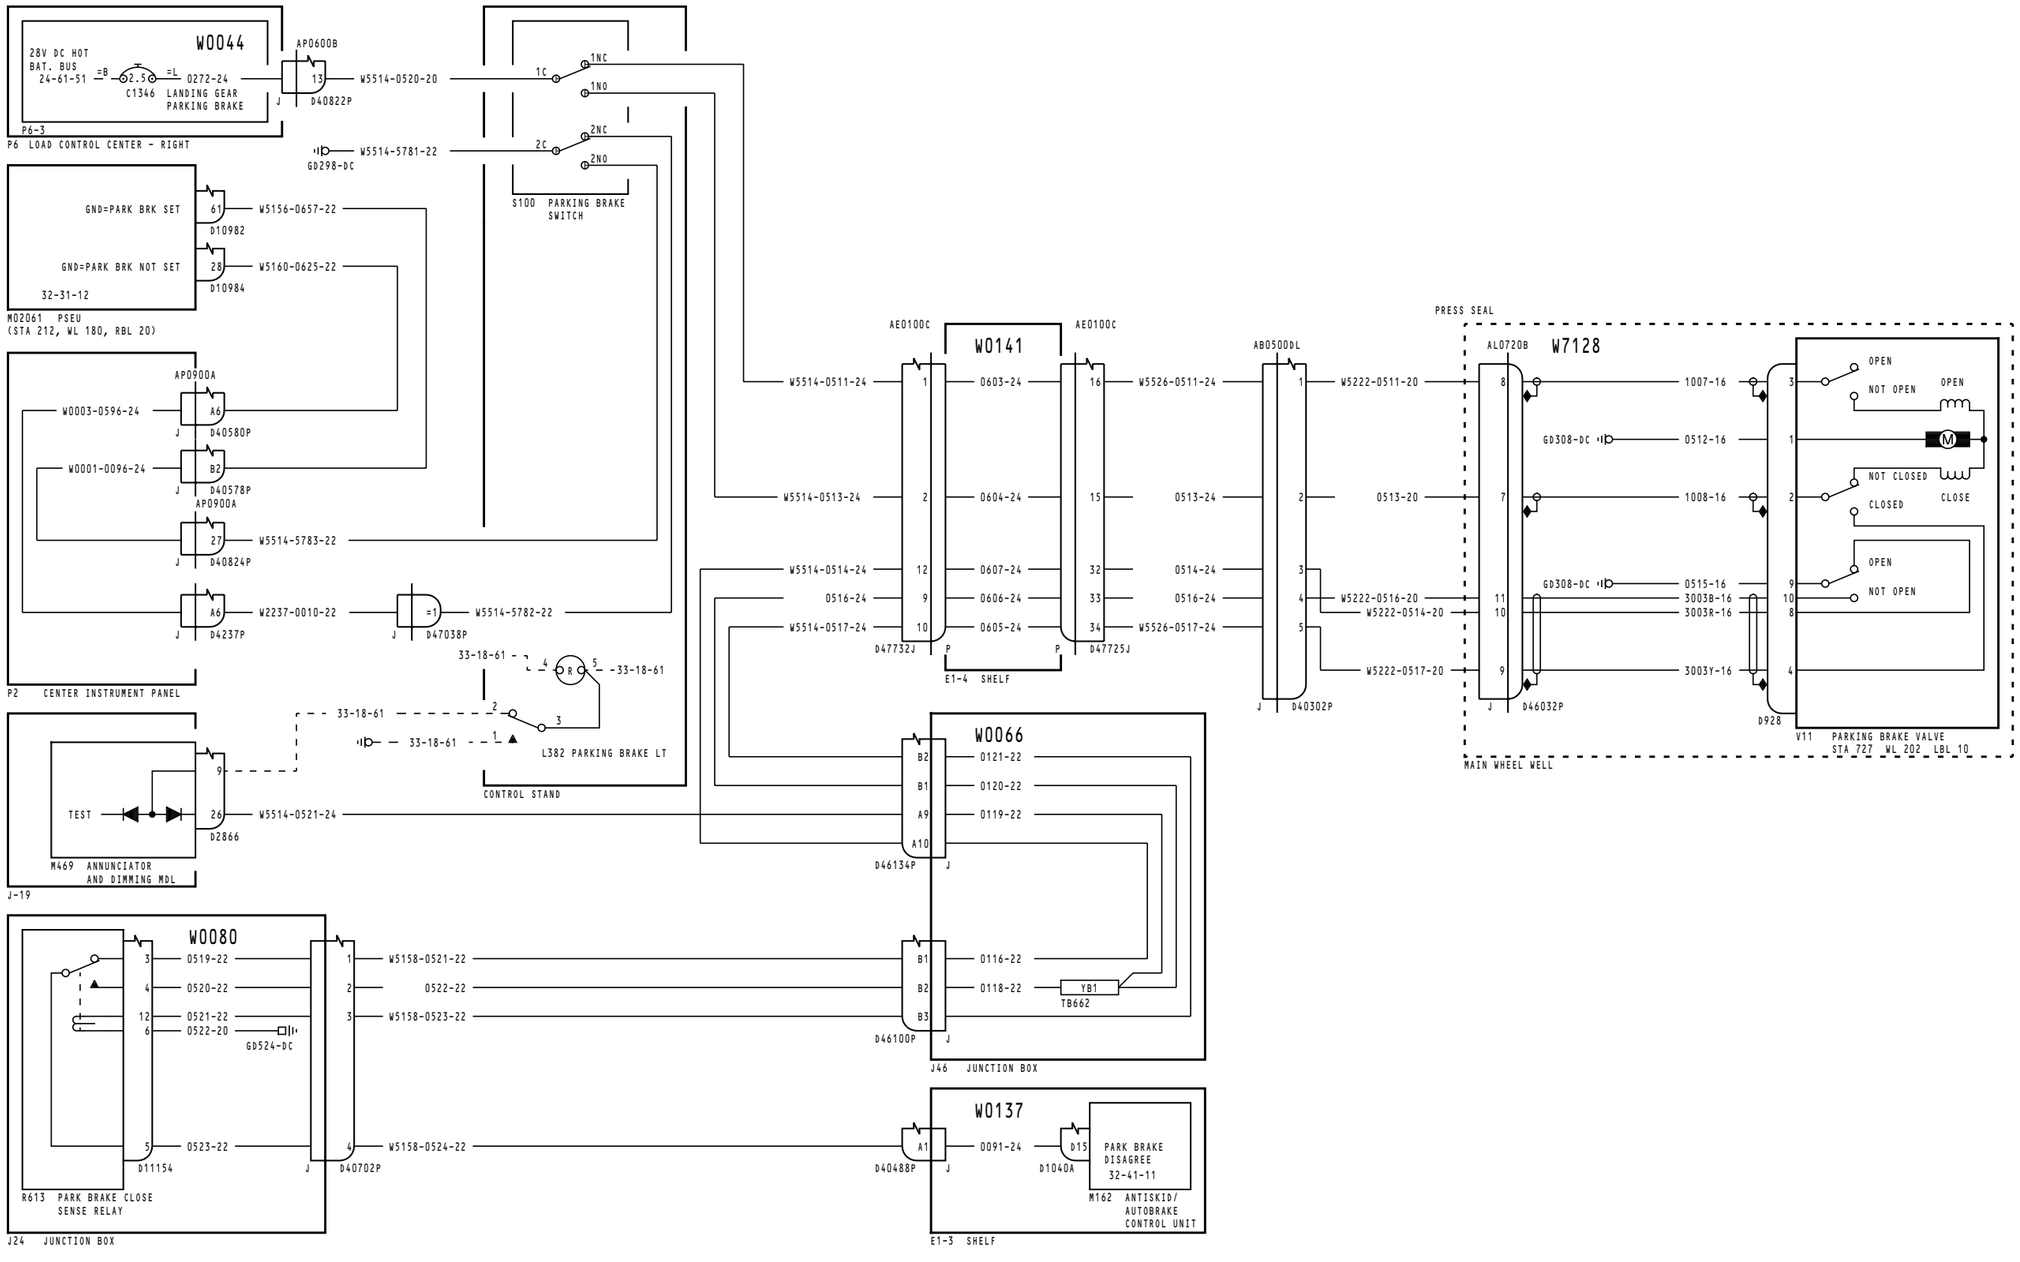

32-44-11


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

22

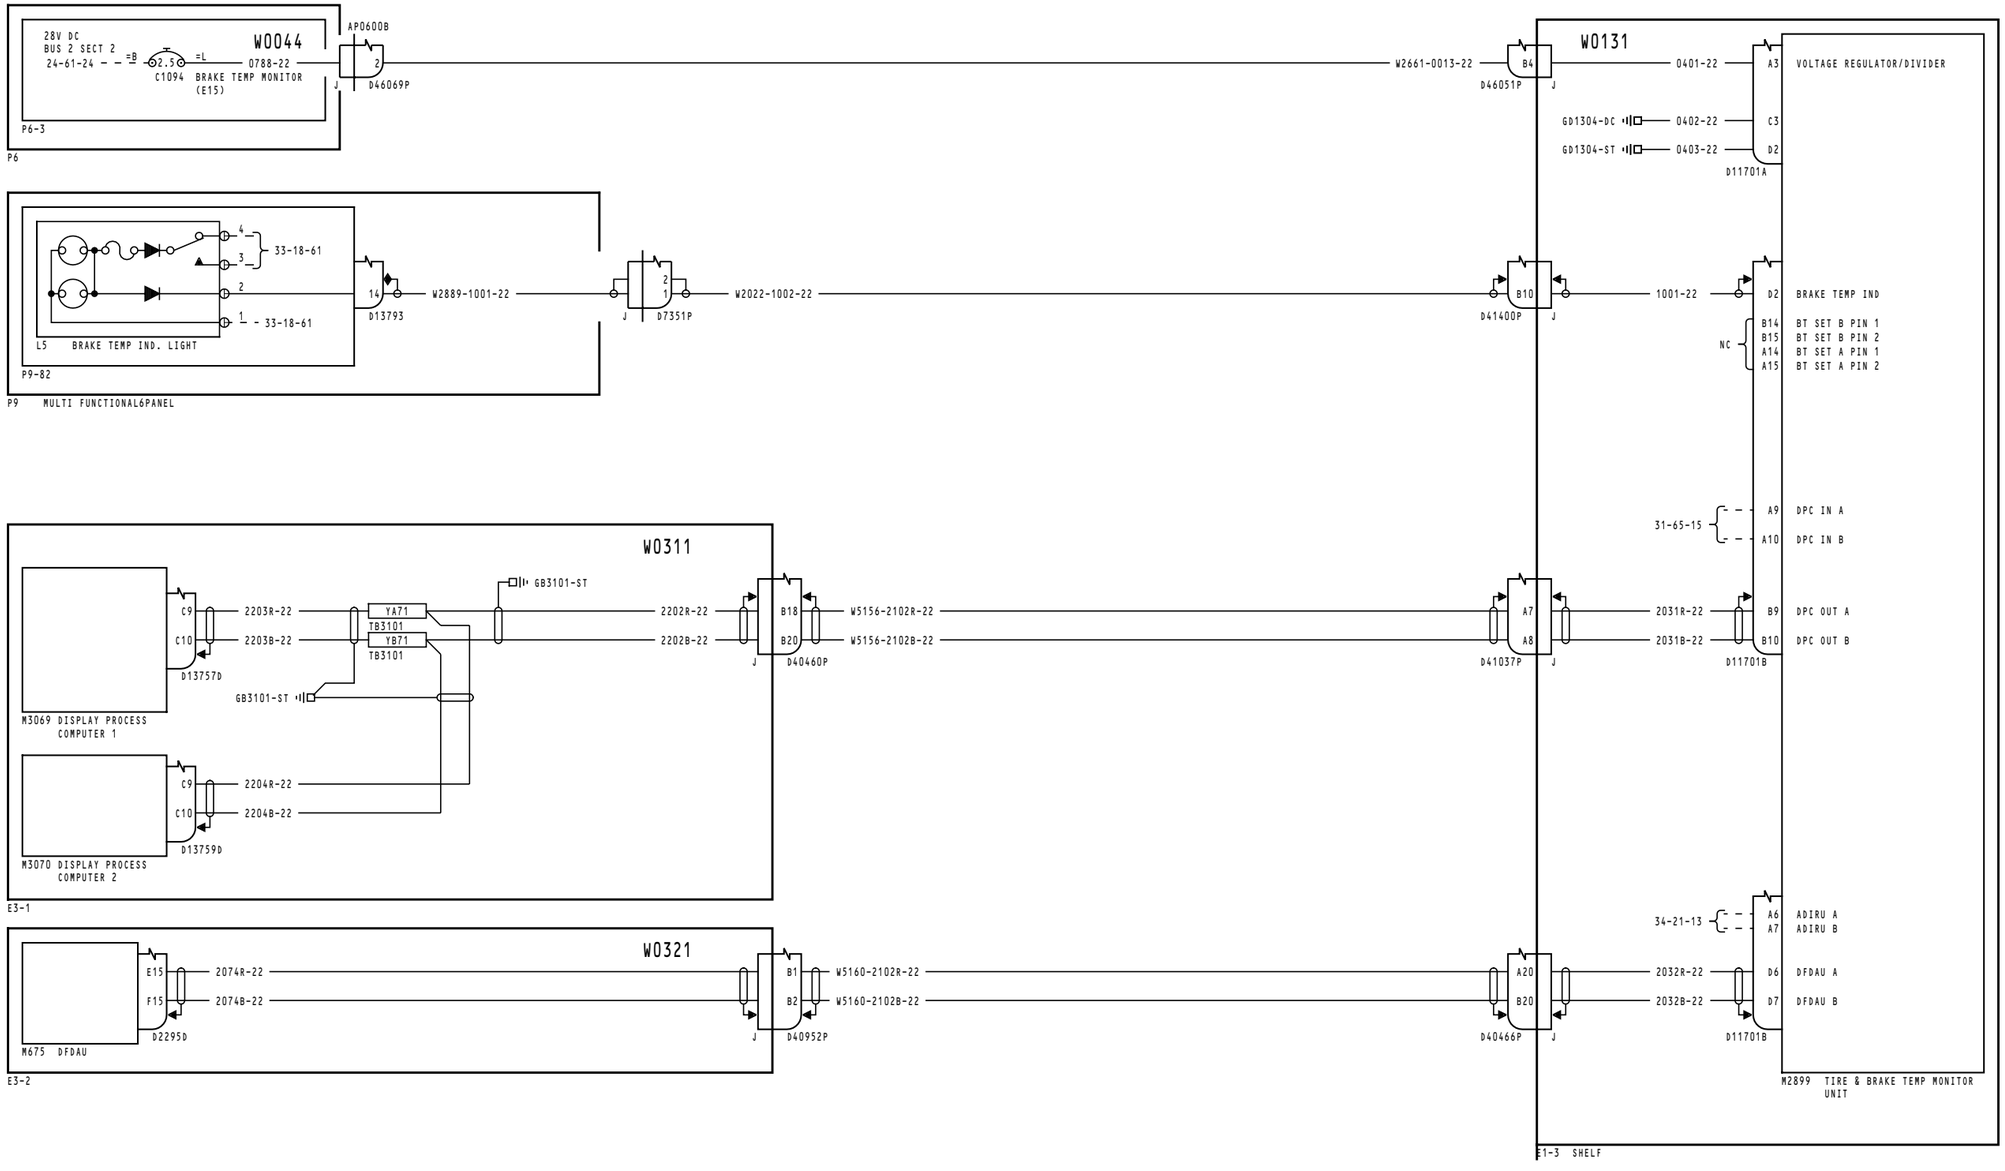

ALL

LG BRAKE TEMPERATURE MONITOR SYSTEM

D280AM1215

32-46-11


Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-46-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

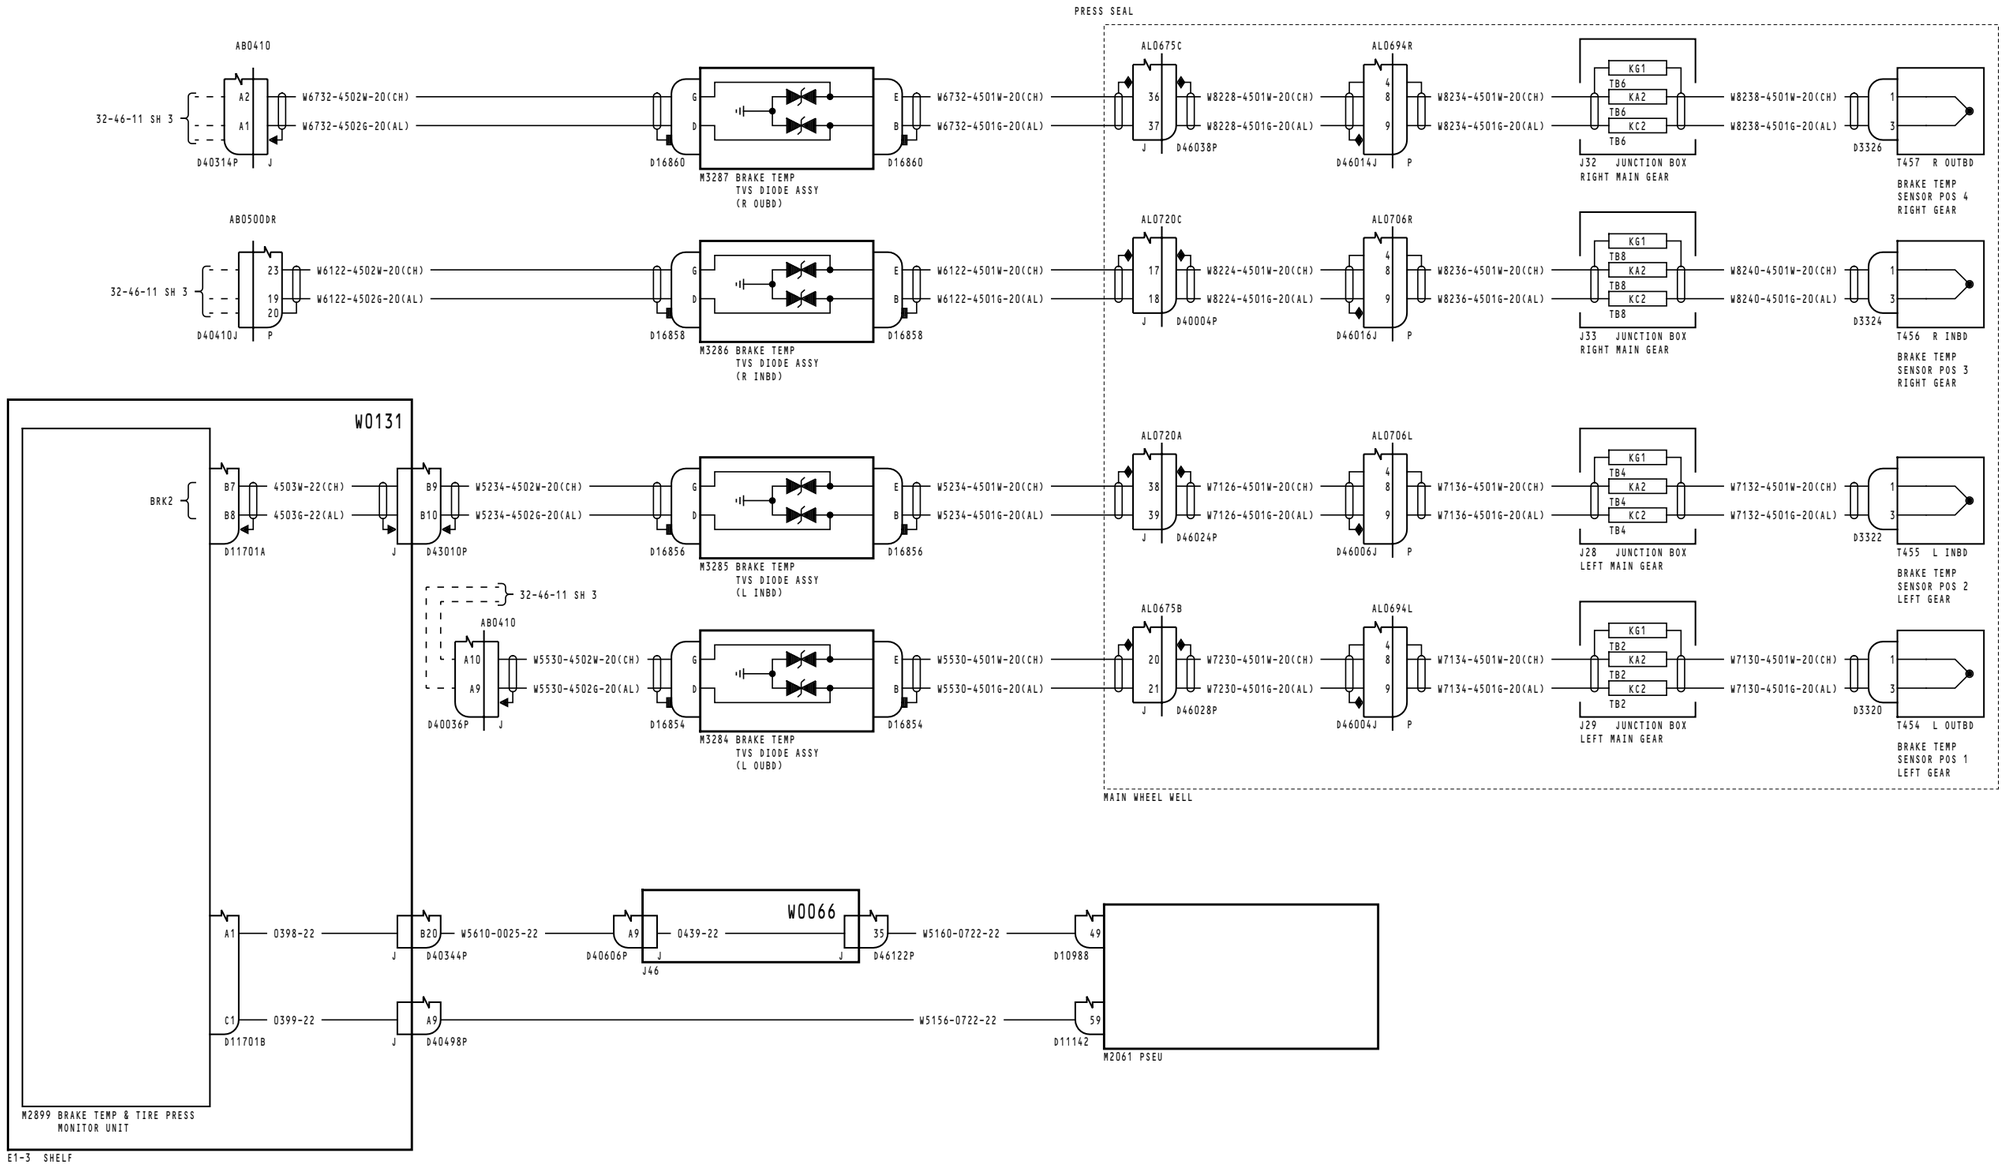

ECCN 9E991 BOEING PROPRIETARY - See title page for details


32-46-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A


1

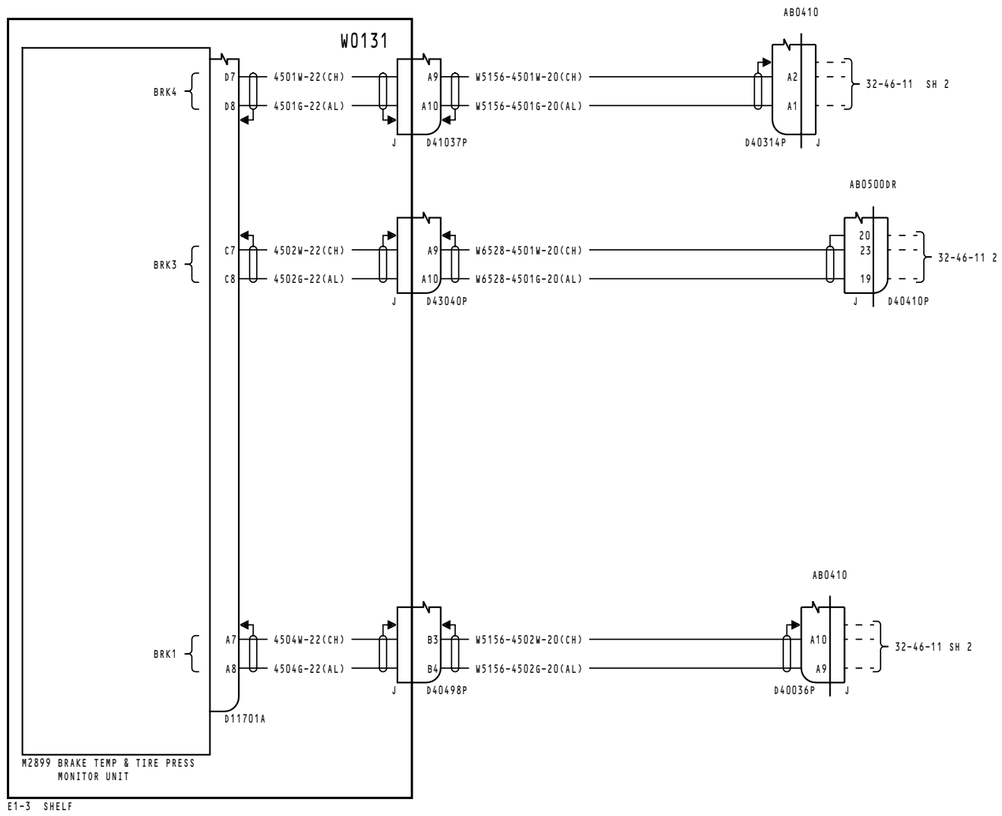

ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-46-11

Page 1
Sheet 3
May 15/2024

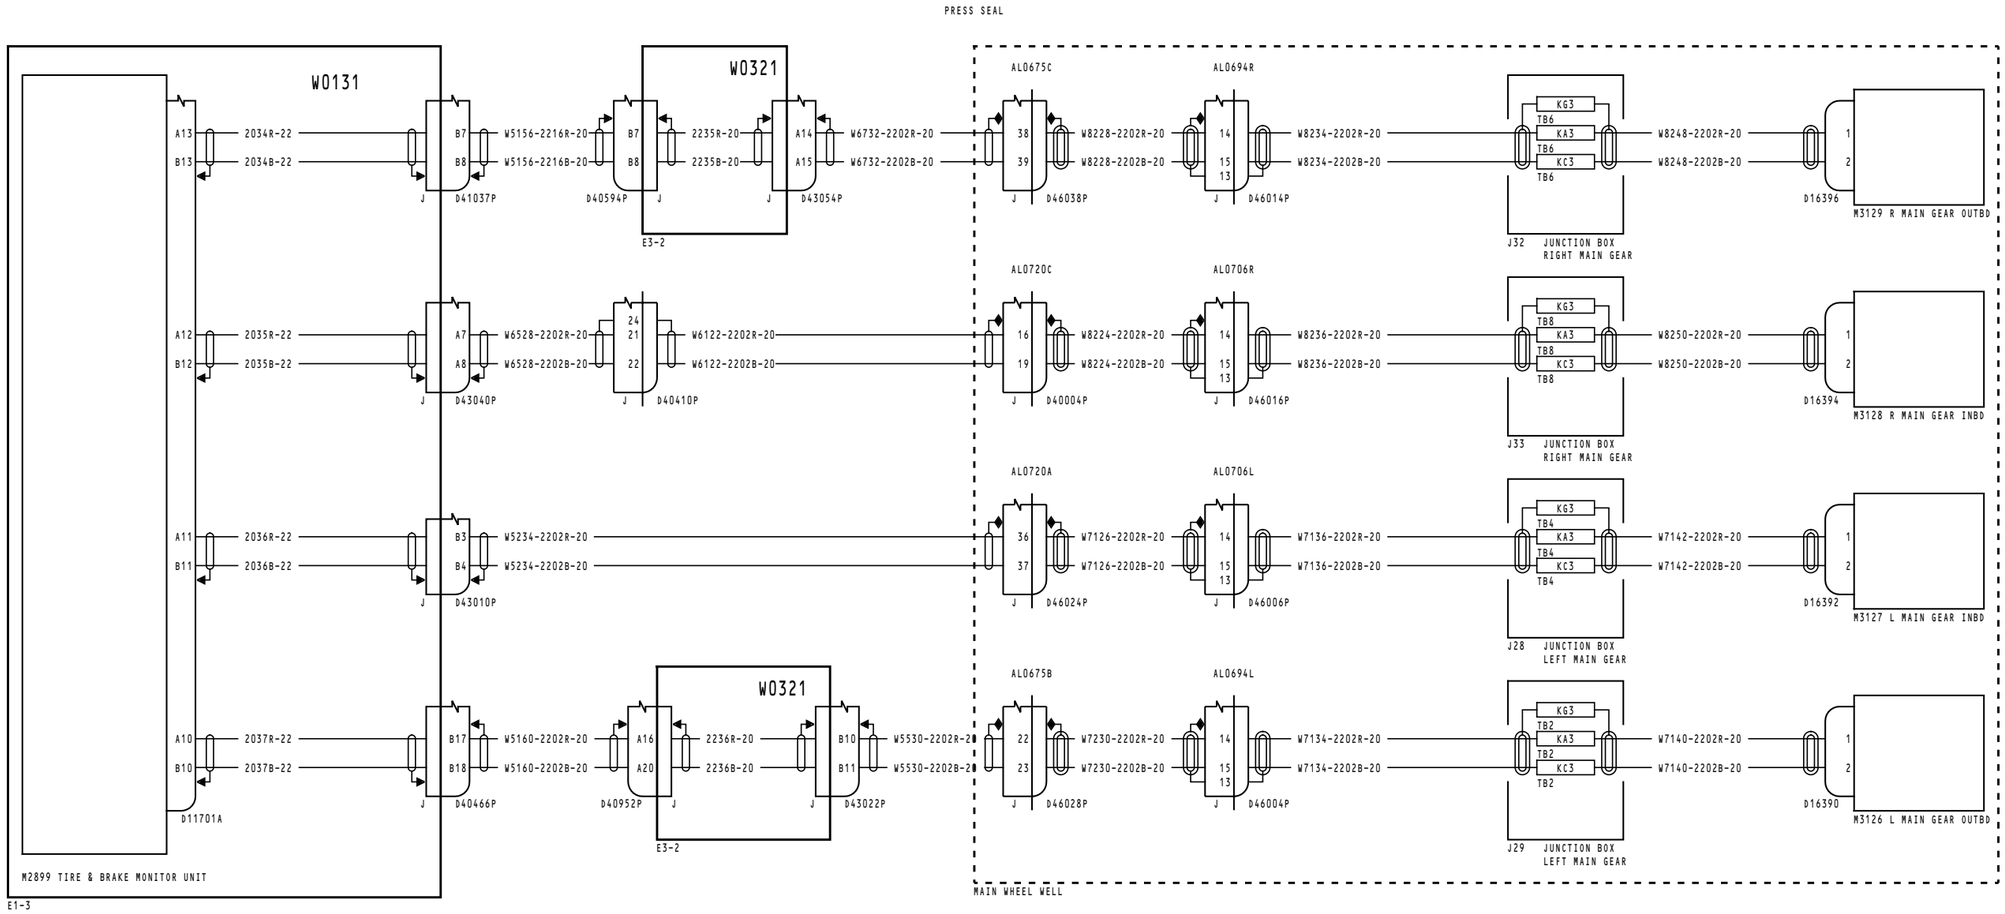


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-49-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
3

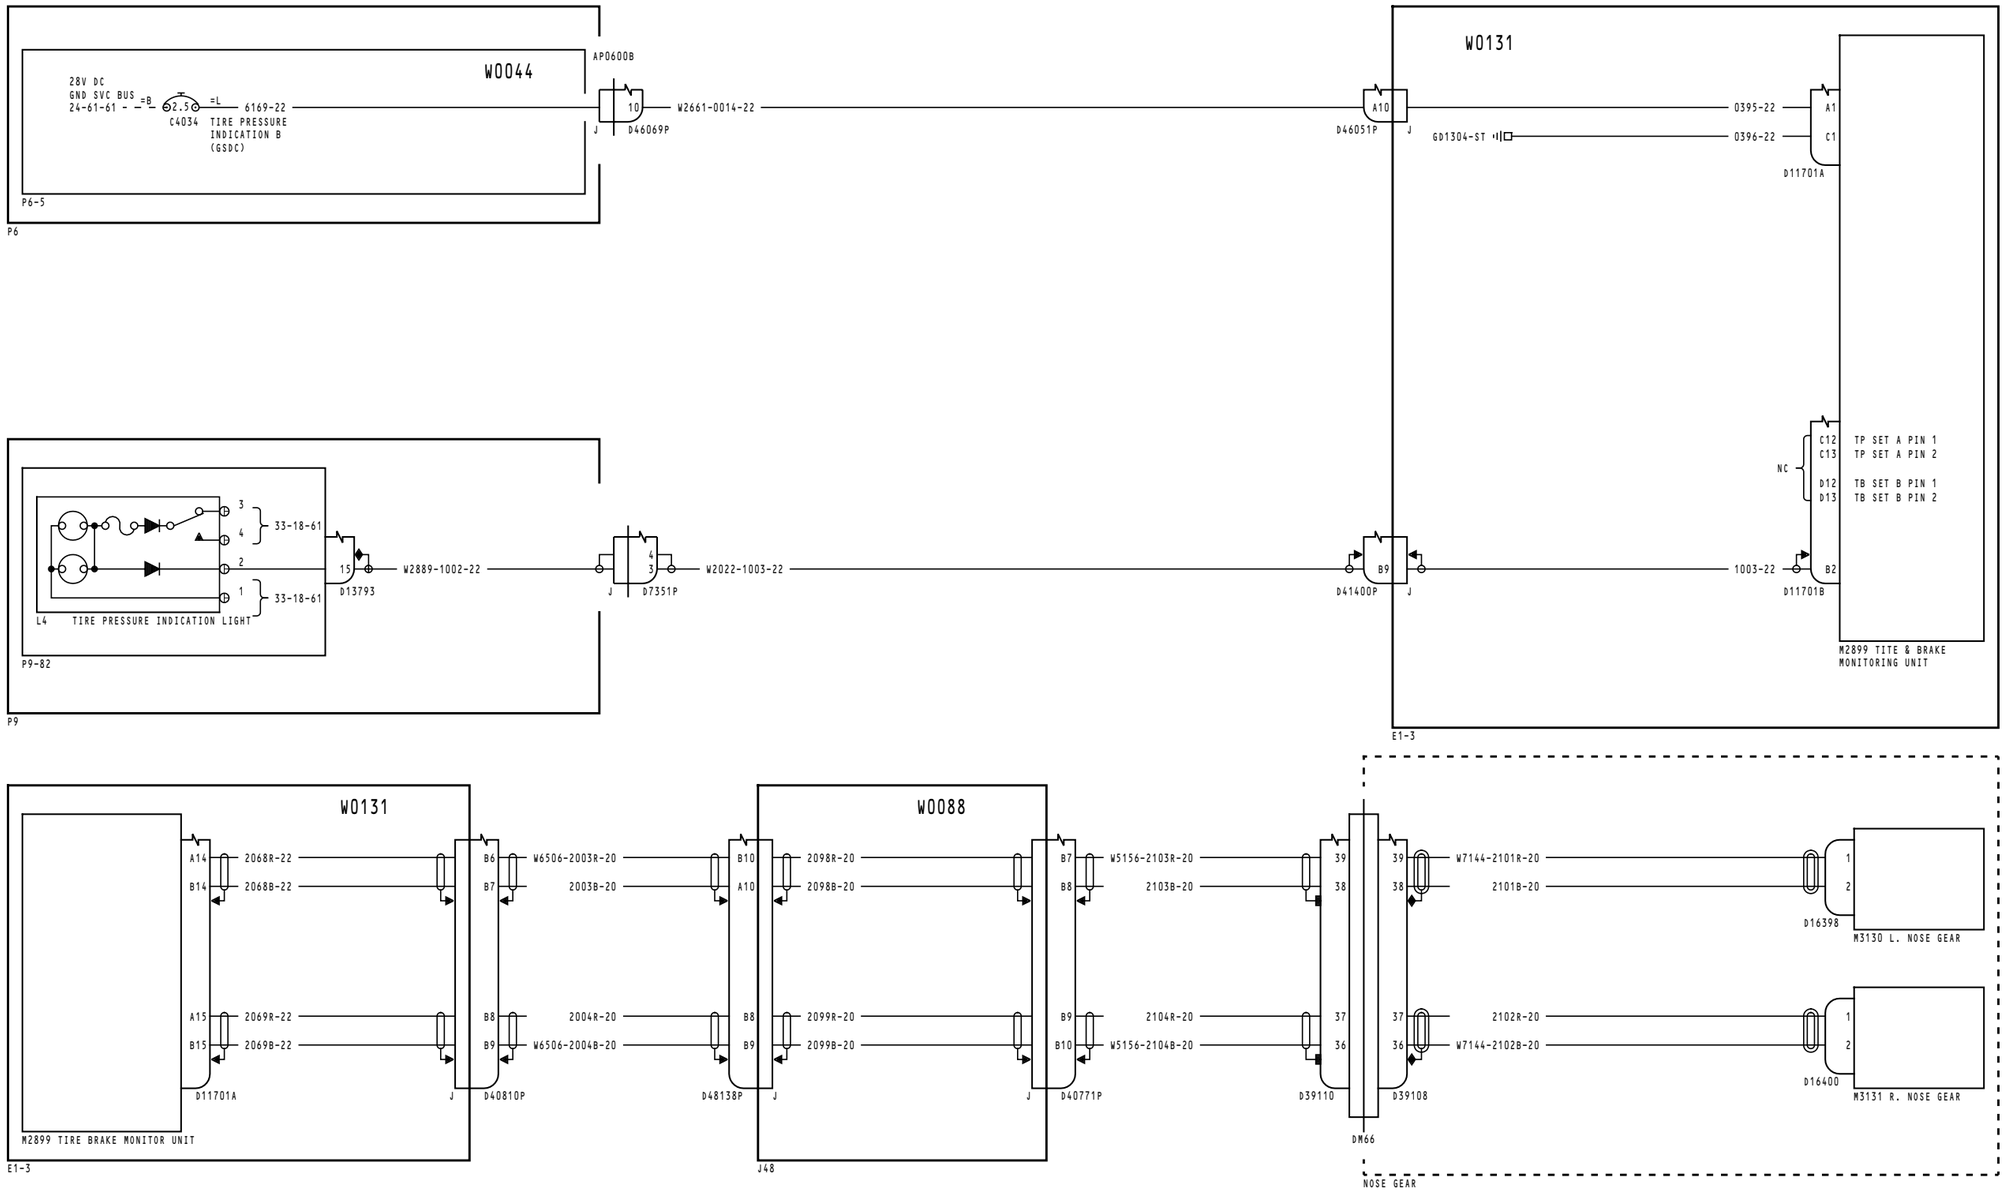


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-49-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

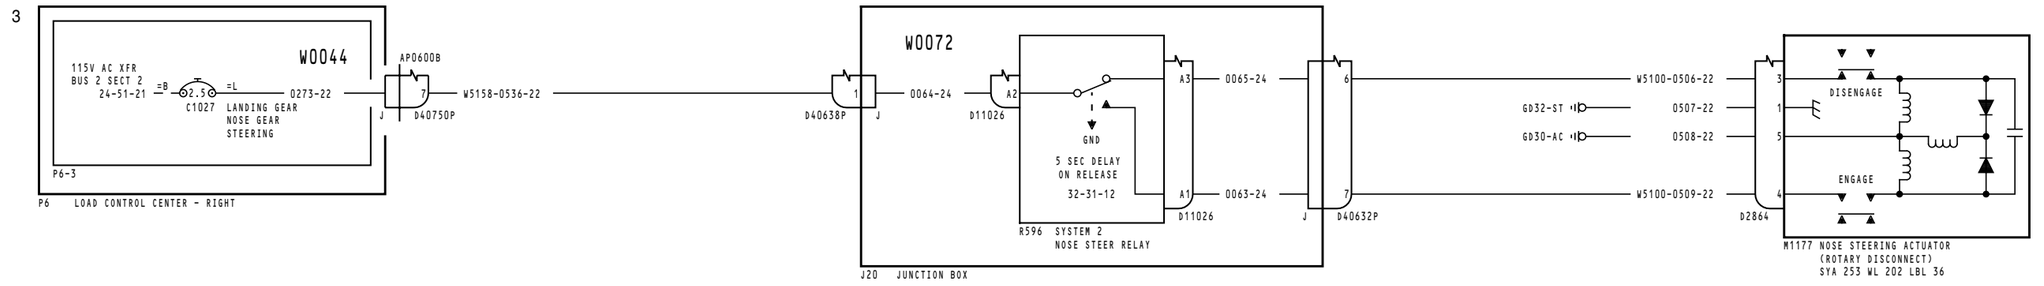


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-51-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

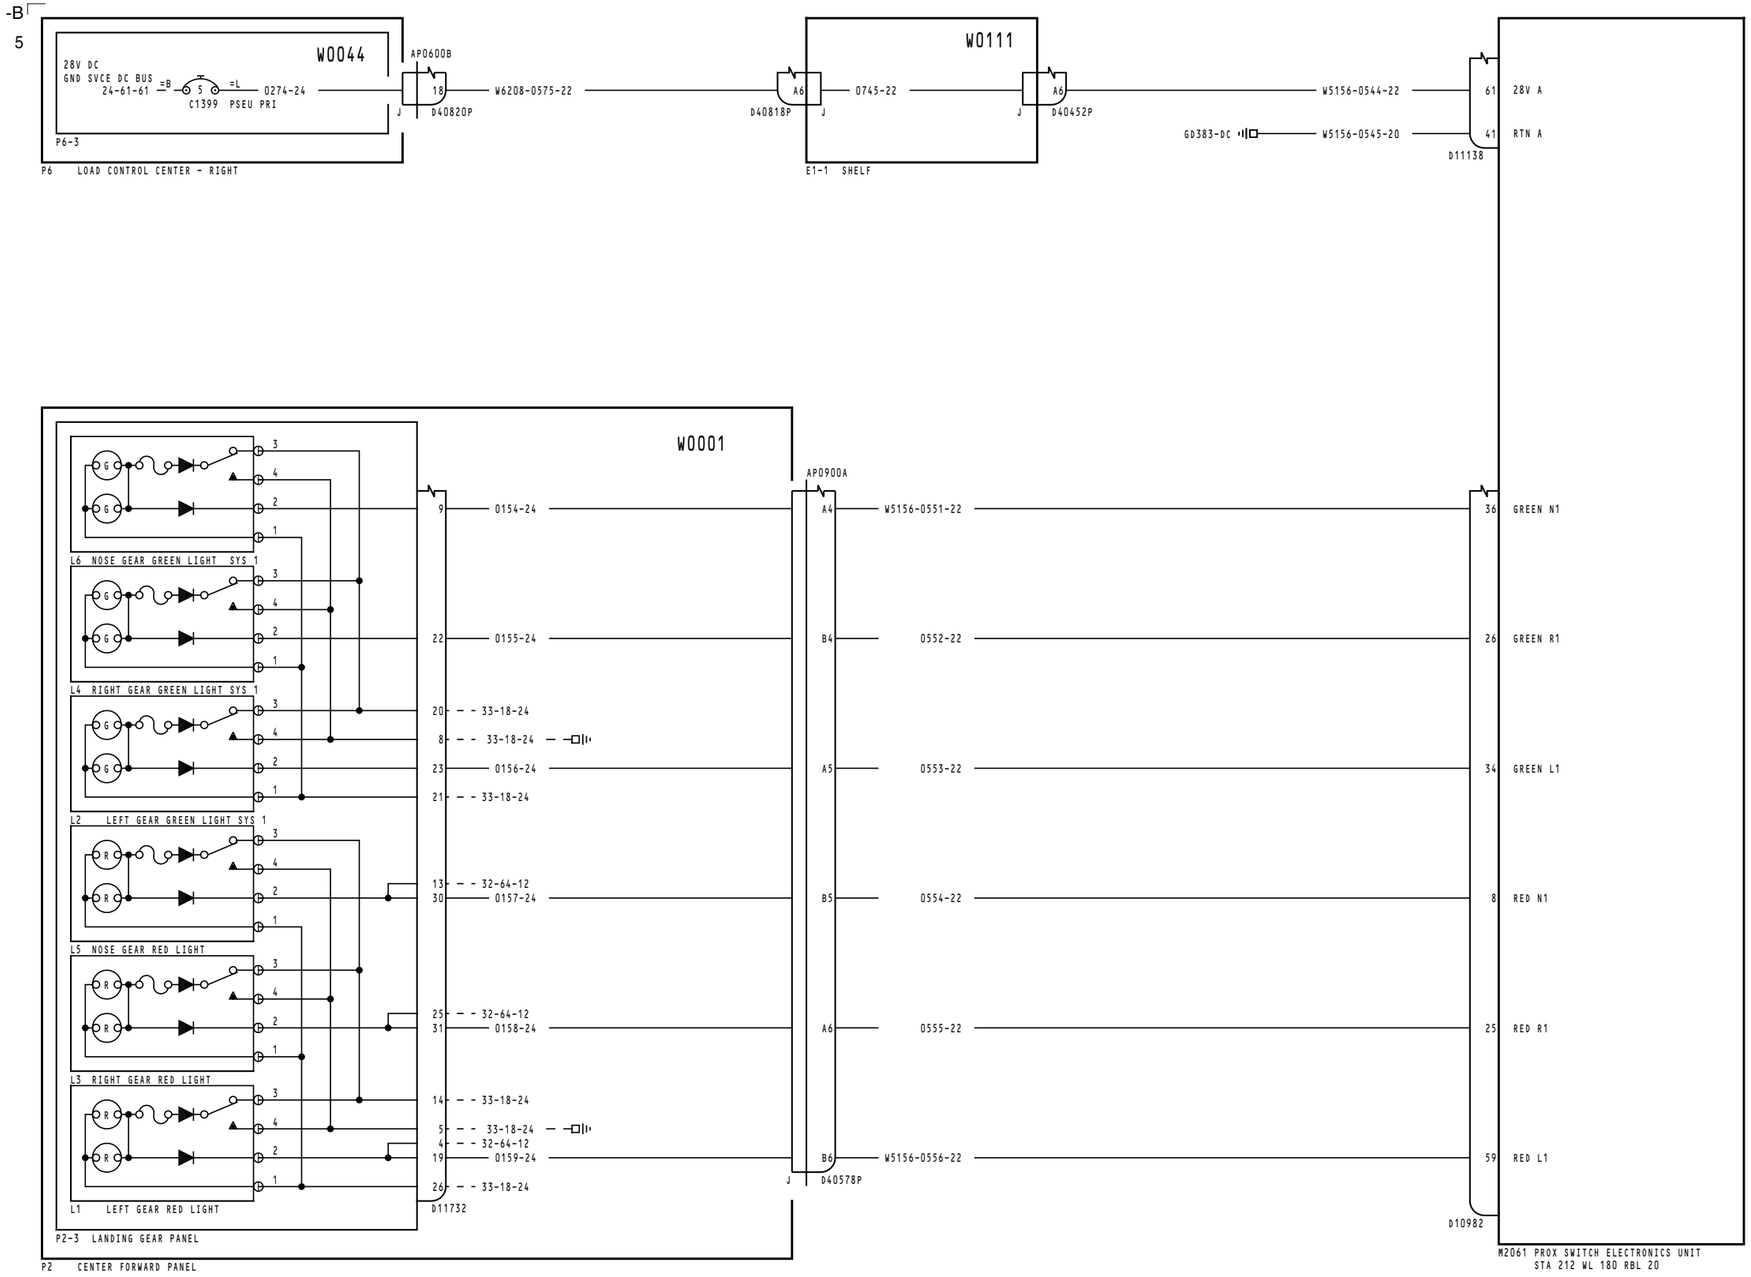

ECCN 9E991 BOEING PROPRIETARY - See title page for details


32-64-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-E

72

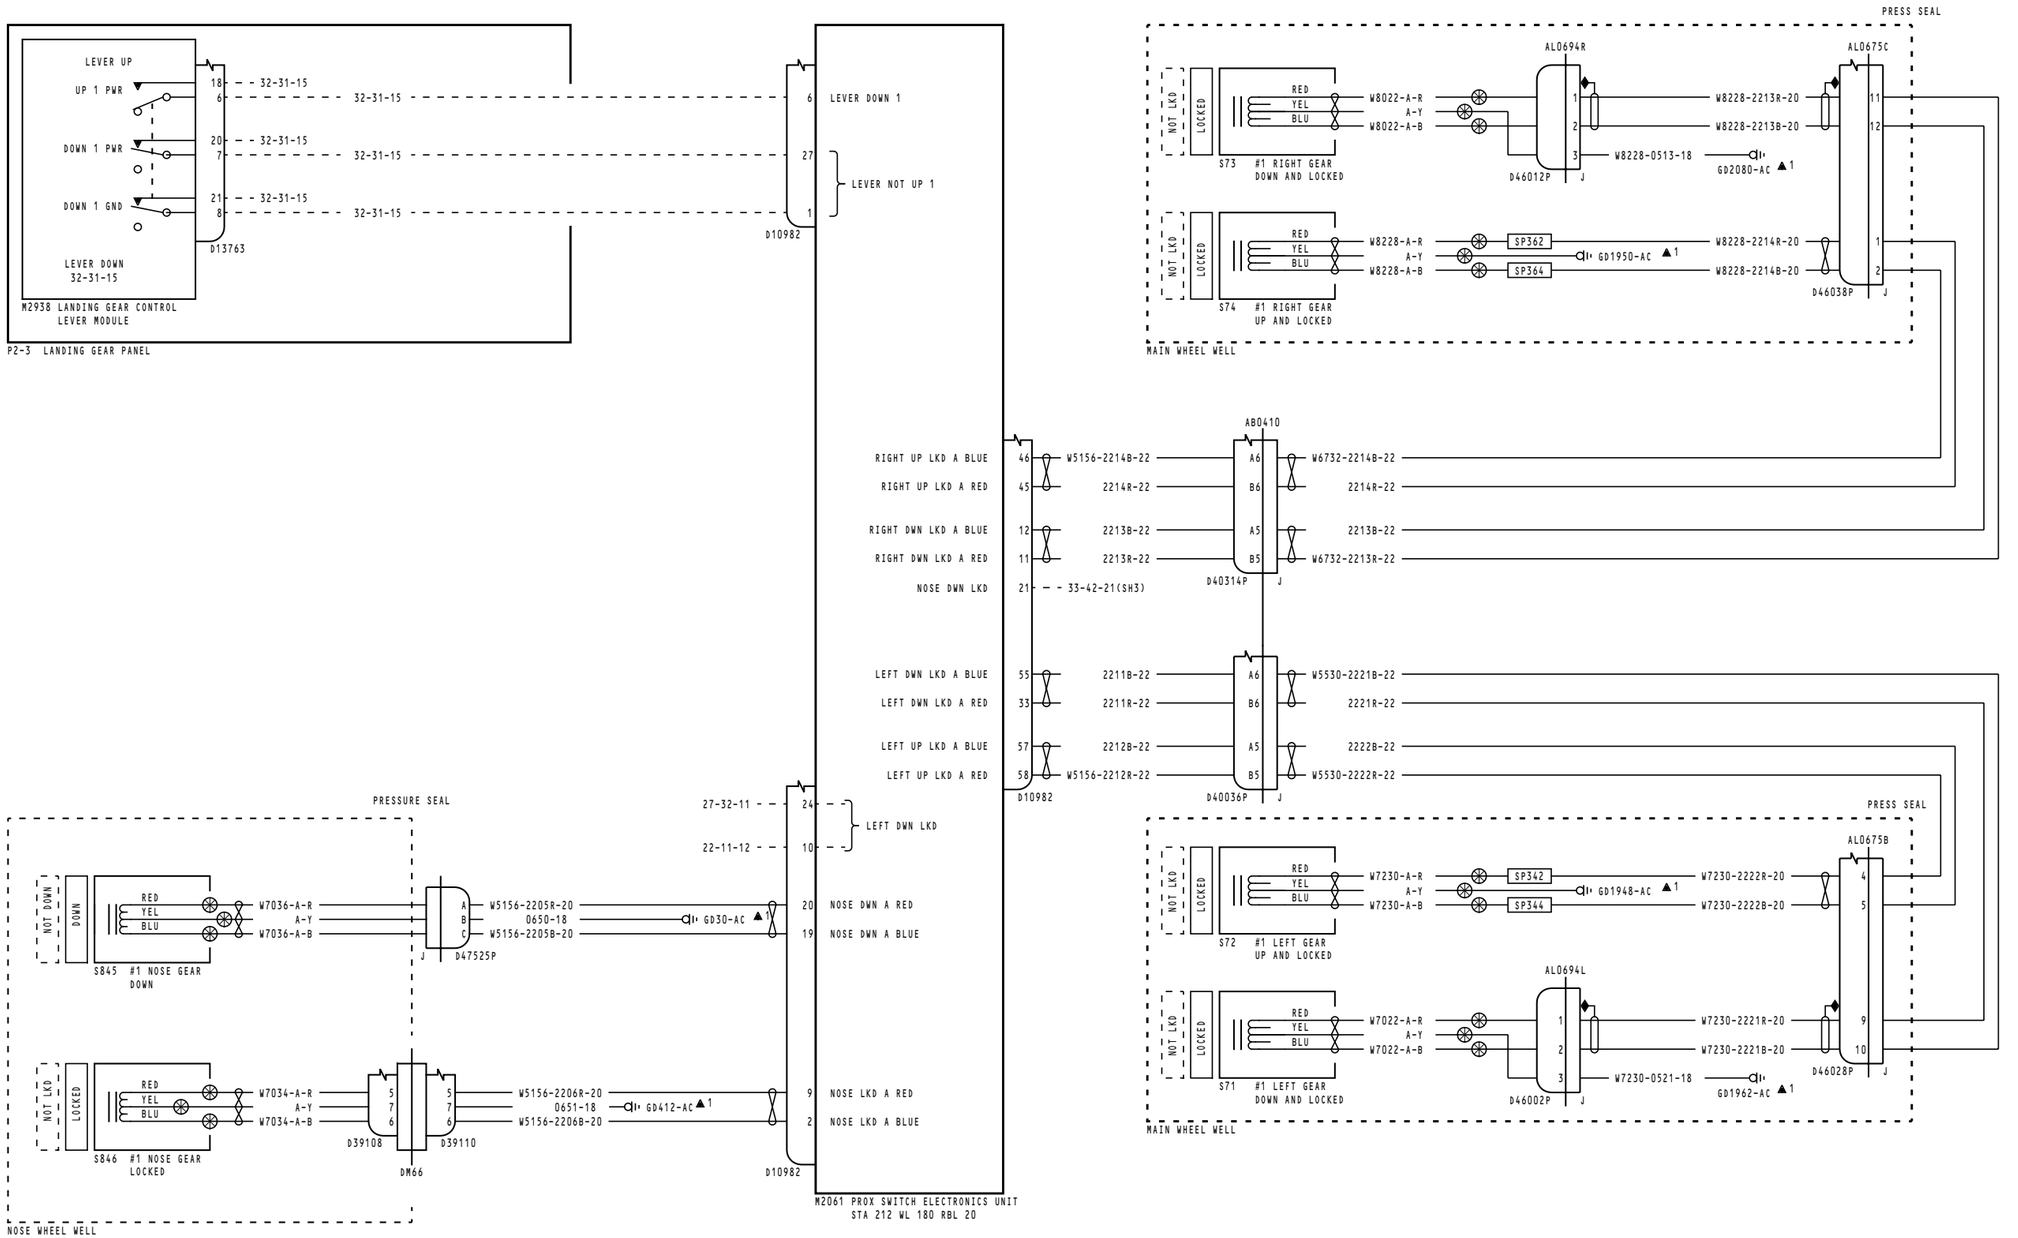


32-64-11

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C
4

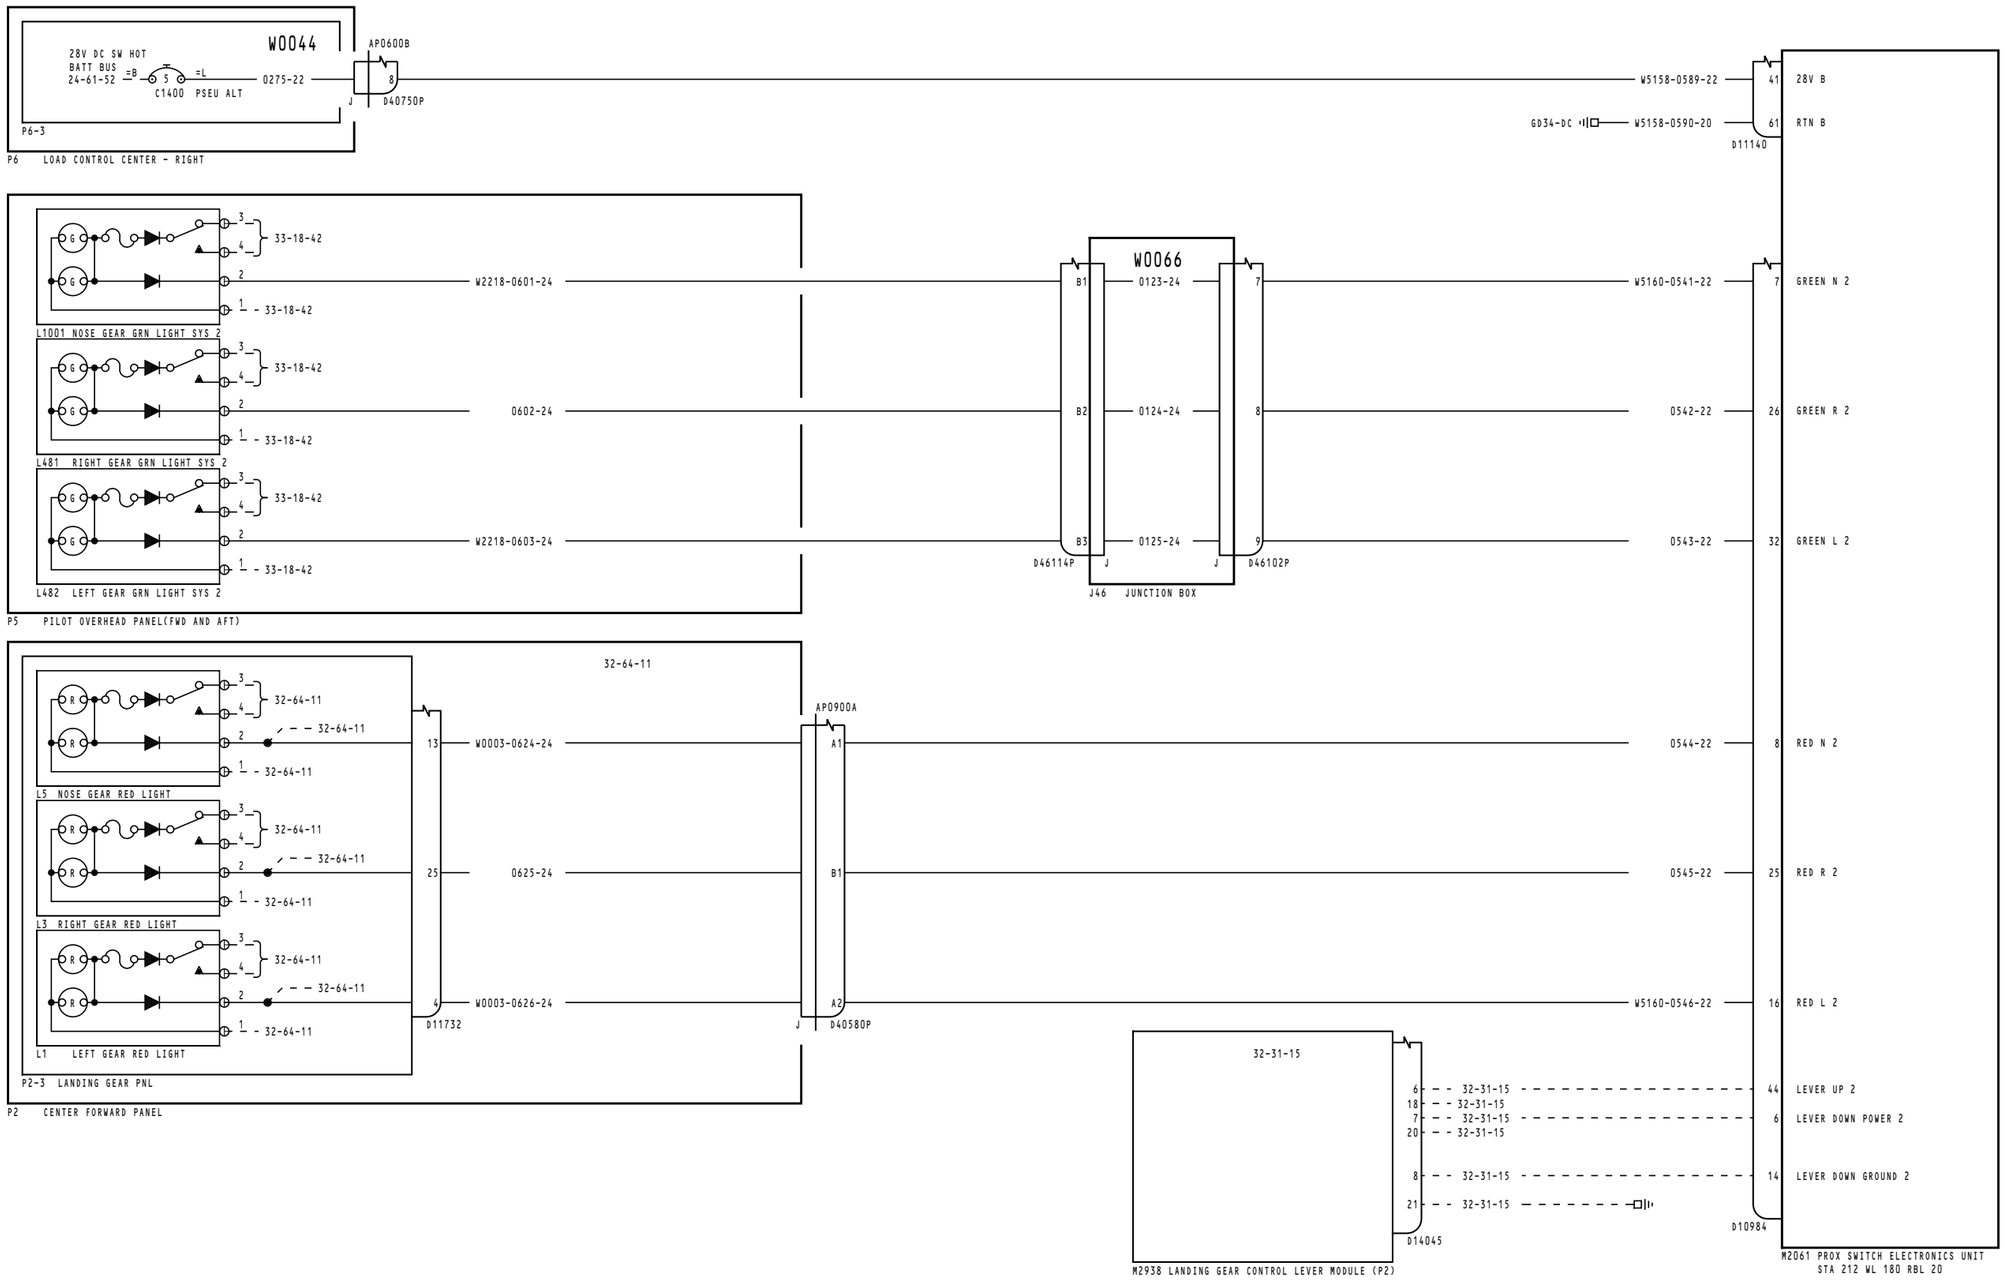


ECCN 9E991 BOEING PROPRIETARY - See title page for details

32-64-12

Page 1
Sheet 1
Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

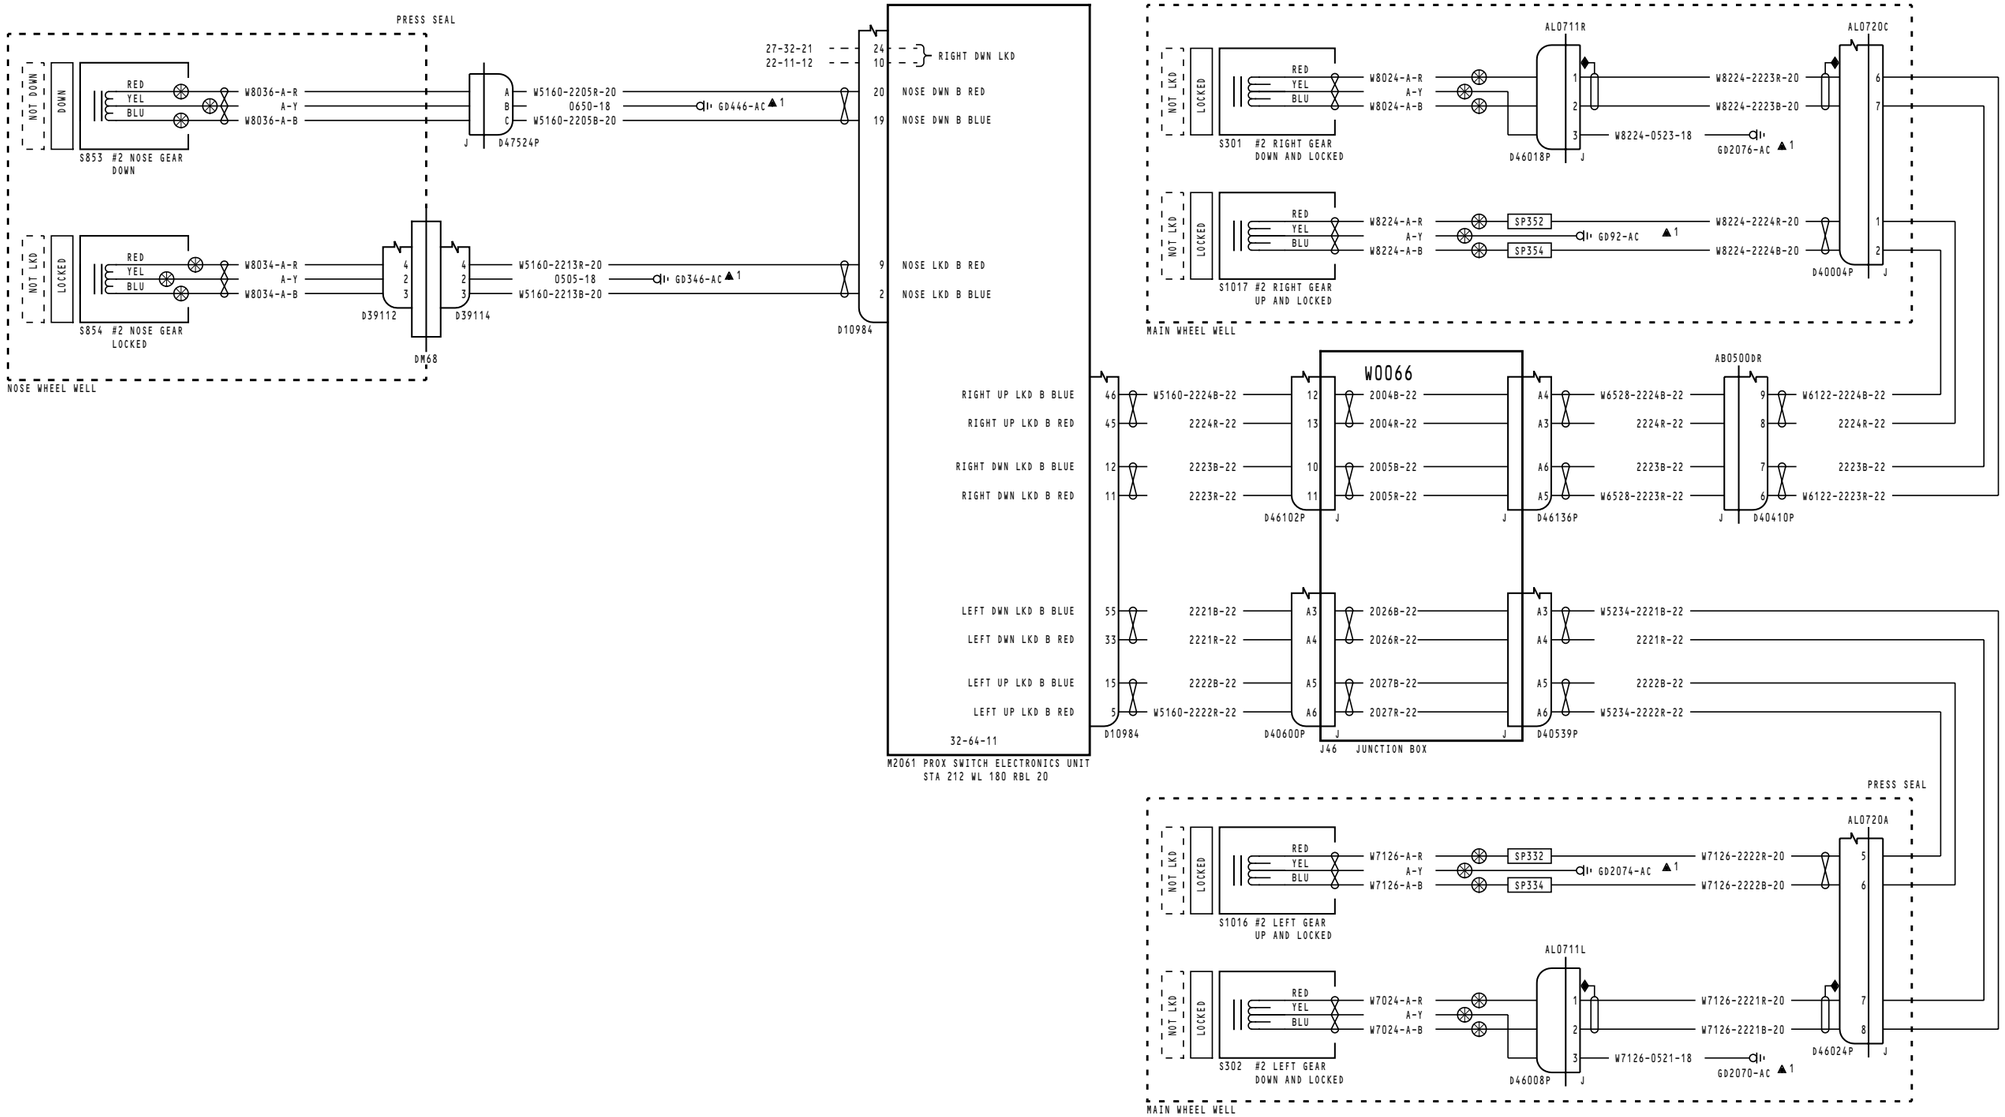


32-64-12

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

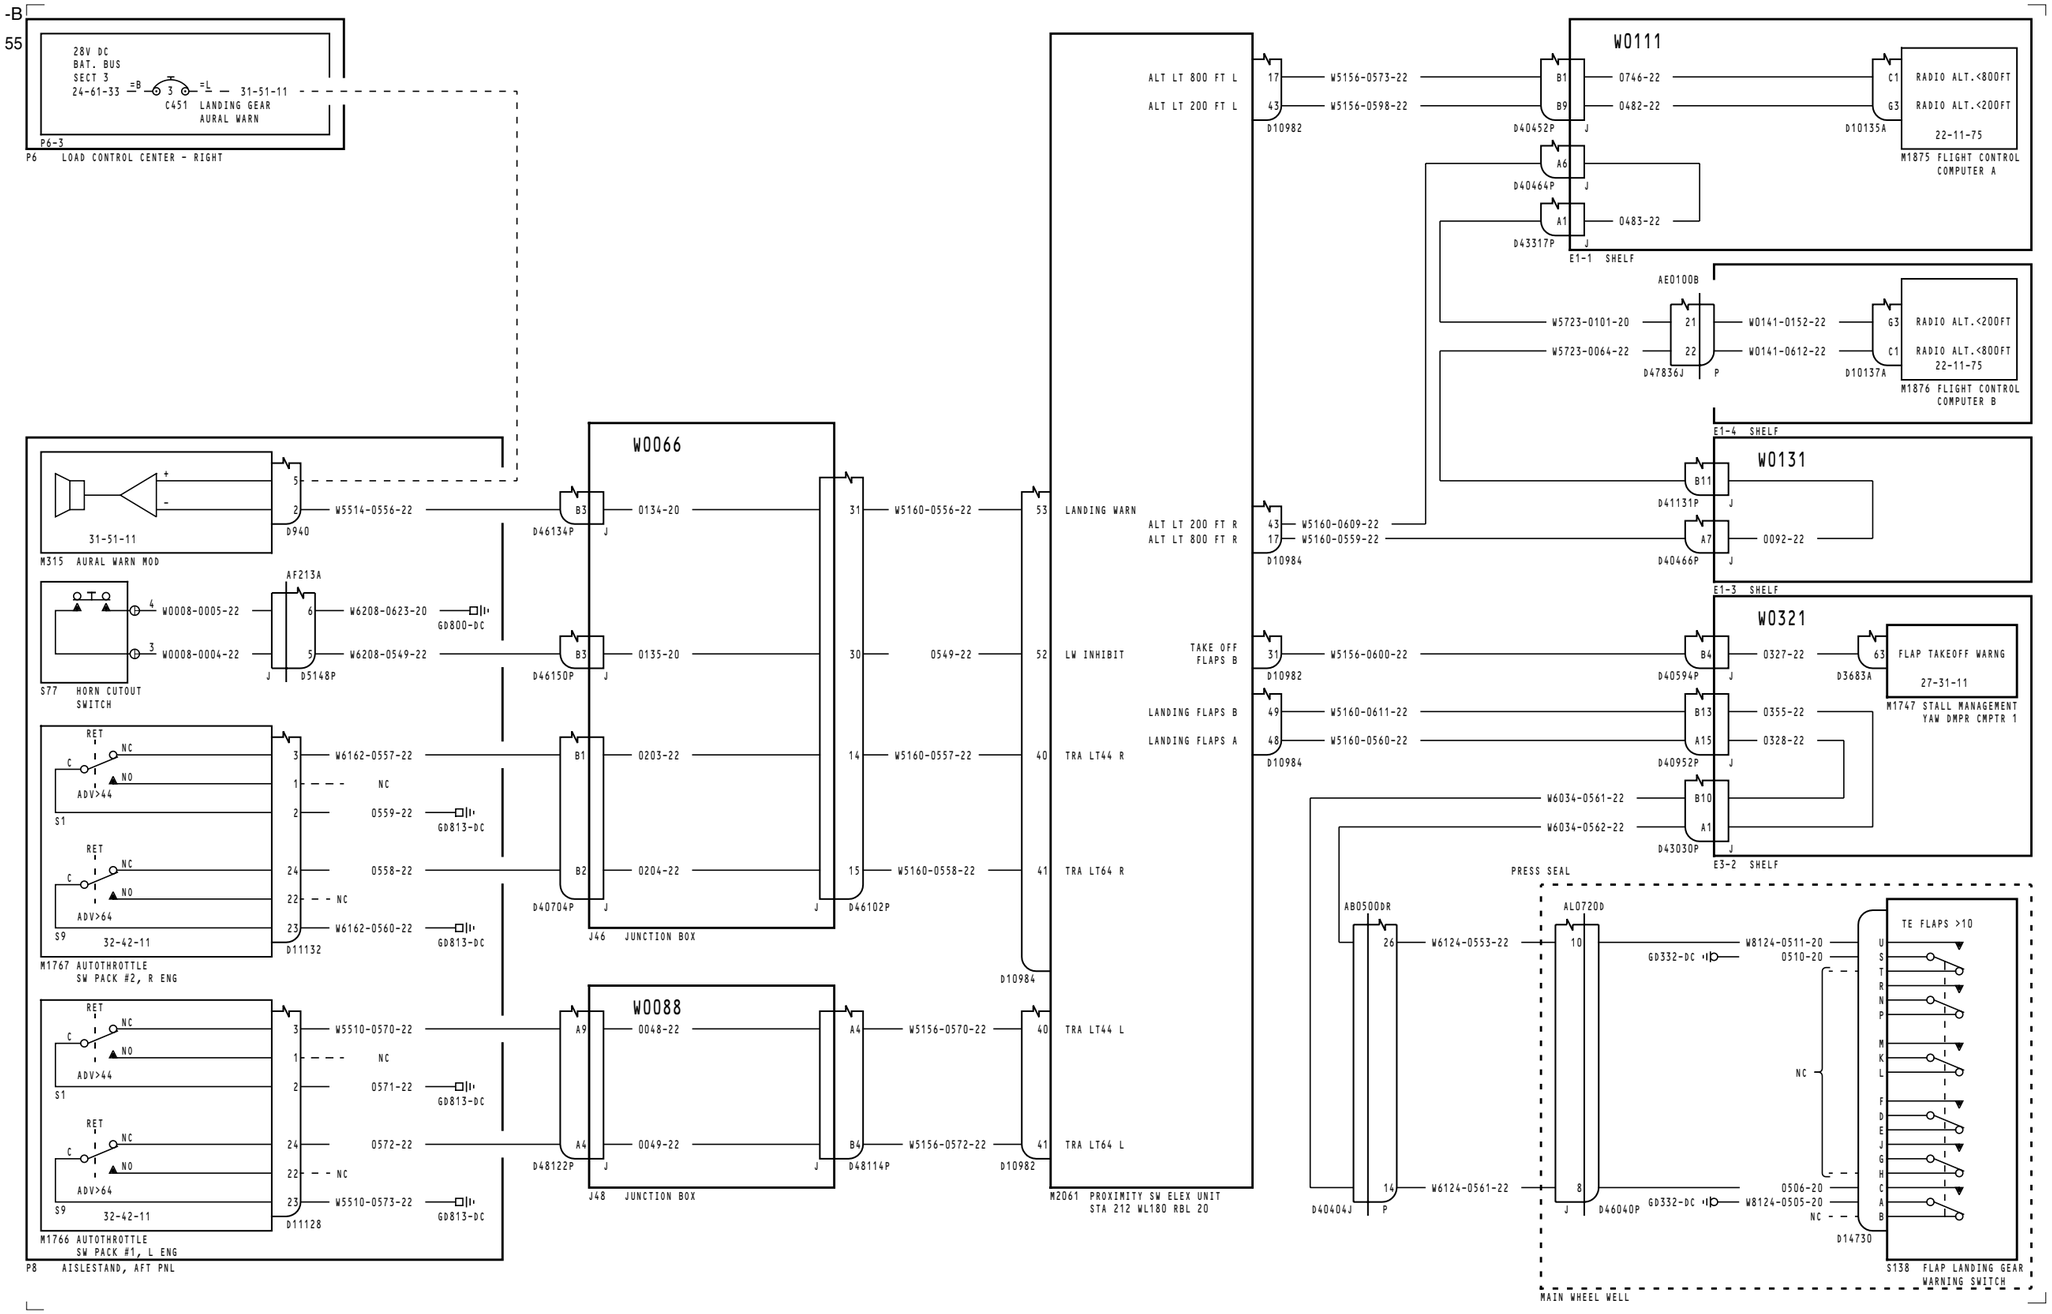


ALL	LANDING GEAR WARNING	D280AM1215

32-64-21
Page 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

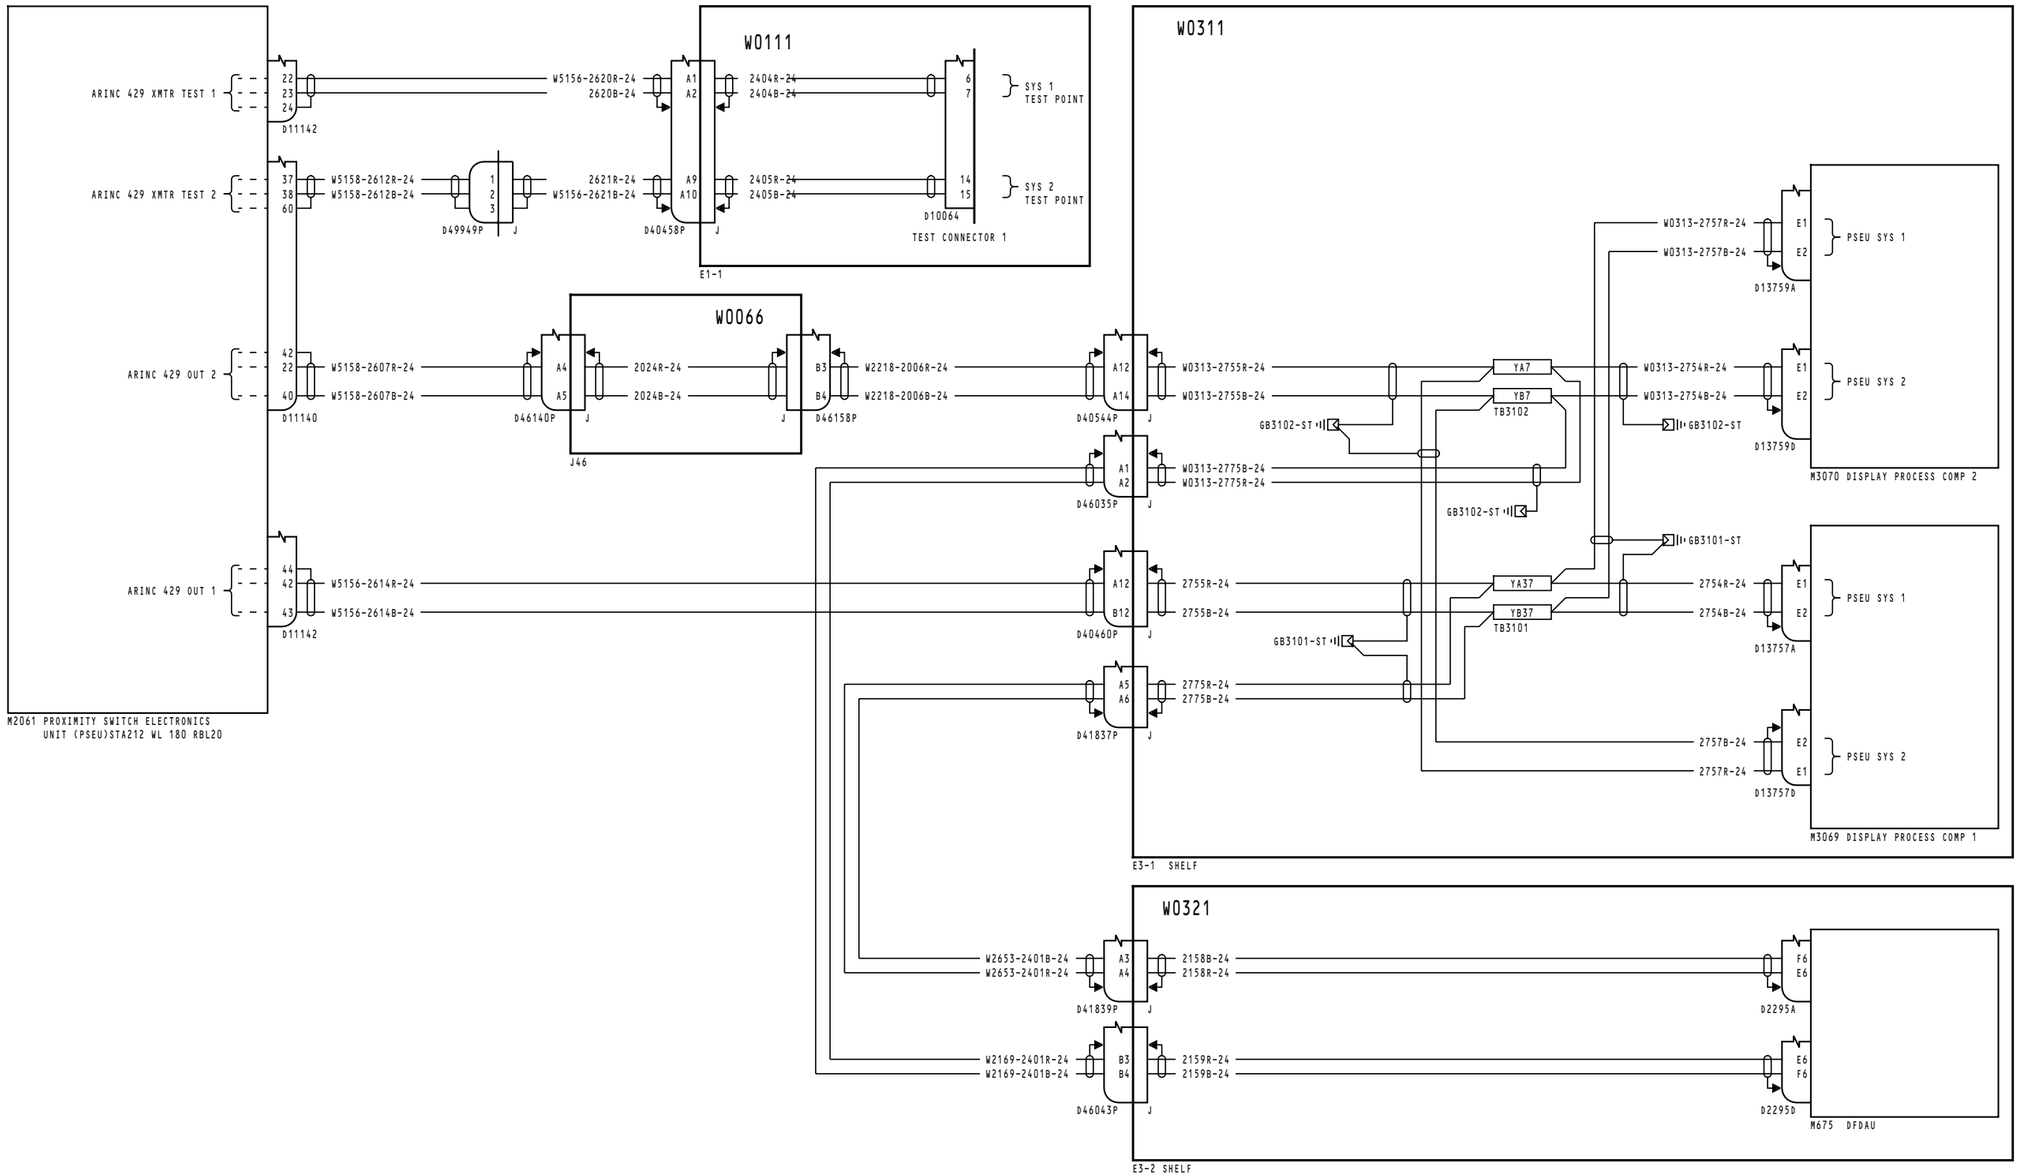

32-64-31

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details