# CHAPTER

# 33

# LIGHTS

# CHAPTER 33
# LIGHTS


| CH-SE-SU | Schem | Page | Sheet | Date |
|---|---|---|---|---|
| **33-EFFECTIVE PAGES** | | | | |
| | | 1 thru 3 | | Nov 14/2025 |
| | | 4 | | BLANK |
| **33-CONTENTS** | | | | |
| | | 1 | | May 15/2024 |
| | | 2 | | May 15/2024 |
| | | 3 | | May 15/2024 |
| | | 4 | | May 15/2024 |
| | | 5 | | May 28/2025 |
| | | 6 | | May 15/2024 |
| **33-ALPHABETICAL INDEX** | | | | |
| | | 1 | | May 15/2024 |
| | | 2 | | May 15/2024 |
| | | 3 | | May 15/2024 |
| | | 4 | | BLANK |
| **33-00-01** | | | | |
| | | 1 | | May 15/2024 |
| **33-11-11** | | | | |
| | | 1 | | May 15/2024 |
| **33-11-21** | | | | |
| | | 1 | | May 15/2024 |
| **33-11-31** | | | | |
| | | 1 | | May 15/2024 |
| **33-11-32** | | | | |
| | | 1 | | May 15/2024 |
| **33-11-33** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-11-41** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-12-11** | | | | |
| | | 1.1 | | May 15/2024 |
| **33-12-12** | | | | |
| | | 1 | | May 15/2024 |
| **33-14-11** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-14-12** | | | | |
| | | 1 | | May 15/2024 |
| **33-17-11** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-11** | | | | |
| | | 1 | 1 | May 15/2024 |
| 33-18-11 (cont) | | | | |
| | | | 2 | May 15/2024 |
| **33-18-21** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-18-22** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-24** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-31** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-32** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-33** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-34** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-18-35** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-36** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-37** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-41** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-42** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-51** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-61** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-18-62** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-63** | | | | |
| | | 1 | | May 15/2024 |
| **33-18-64** | | | | |
| | | 1 | | May 15/2024 |
| **33-21-11** | | | | |
| | | 1 | | May 15/2024 |
| **33-21-12** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-22-11** | | | | |
| | | 1 | | May 15/2024 |


A = Added, R = Revised, D = Deleted, O = Overflow



ECCN 9E991 BOEING PROPRIETARY - See title page for details

| CH-SE-SU | Schem | Page | Sheet | Date |
|---|---|---|---|---|
| 33-22-21 | | | | |
| | | 1 | | May 15/2024 |
| 33-22-22 | | | | |
| | | 1 | | May 15/2024 |
| 33-22-31 | | | | |
| | | 1 | | May 15/2024 |
| 33-22-32 | | | | |
| | | 1 | | May 15/2024 |
| 33-22-41 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| 33-22-51 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| 33-23-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-23-12 | | | | |
| | | 1 | | May 15/2024 |
| 33-23-21 | | | | |
| | | 1 | | May 15/2024 |
| 33-23-22 | | | | |
| | | 1 | | May 15/2024 |
| 33-23-31 | | | | |
| | | 1 | | May 15/2024 |
| 33-24-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-24-21 | | | | |
| | | 1 | | May 15/2024 |
| 33-24-22 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| 33-25-11 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| 33-25-21 | | | | |
| | | 1 | | May 15/2024 |
| 33-25-22 | | | | |
| | | 1 | | May 15/2024 |
| 33-25-31 | | | | |
| | | 1 | | May 15/2024 |
| 33-25-32 | | | | |
| | | 1 | | May 15/2024 |
| 33-25-41 | | | | |
| | | 1 | | May 15/2024 |
| 33-26-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-26-21 | | | | |
| | | 1 | | May 15/2024 |
| 33-26-31 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| | | | 3 | May 15/2024 |
| 33-26-51 | | | | |
| | | 1 | | May 15/2024 |
| 33-27-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-27-21 | | | | |
| | | 1 | | May 15/2024 |
| 33-27-22 | | | | |
| | | 1 | | May 15/2024 |
| 33-27-31 | | | | |
| | | 1 | | May 15/2024 |
| 33-27-32 | | | | |
| | | 1 | | May 15/2024 |
| 33-27-41 | | | | |
| | | 1 | | May 15/2024 |
| 33-29-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-32-11 | | | | |
| | | 1 | | Dec 24/2024 |
| 33-33-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-34-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-35-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-36-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-36-12 | | | | |
| | | 1 | | May 15/2024 |
| 33-41-11 | | | | |
| | | 1 | | May 15/2024 |
| 33-42-21 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 28/2025 |
| | | | 3 | May 15/2024 |
| 33-43-11 | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| 33-44-11 | | | | |
| | | 1 | | May 15/2024 |


A = Added, R = Revised, D = Deleted, O = Overflow



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS

| CH-SE-SU | Schem | Page | Sheet | Date |
|---|---|---|---|---|
| **33-44-12** | | | | |
| | | 1 | | May 15/2024 |
| **33-49-11** | | | | |
| | | 1 | | May 15/2024 |
| **33-51-11** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-51-12** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-51-13** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-51-14** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |
| **33-51-21** | | | | |
| | | 1 | | May 15/2024 |
| **33-51-22** | | | | |
| | | 1 | | May 15/2024 |

| CH-SE-SU | Schem | Page | Sheet | Date |
|---|---|---|---|---|

A = Added, R = Revised, D = Deleted, O = Overflow



ECCN 9E991 BOEING PROPRIETARY - See title page for details

# CHAPTER 33
# LIGHTS


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| **LIGHTS** | | | | | | |
| LAMP USAGE CHART | 33-00-01 | | 1 | | May 15/2024 | ALL |
| **INSTRUMENT AND PANEL LIGHTS** | | | | | | |
| CAPTAIN'S INSTRUMENT PANEL LIGHTING | 33-11-11 | | 1 | | May 15/2024 | ALL |
| FIRST OFFICER'S INSTRUMENT PANEL LIGHTING | 33-11-21 | | 1 | | May 15/2024 | ALL |
| CAPTAIN'S AND FIRST OFFICER'S CENTER INSTR PANEL LIGHTING | 33-11-31 | | 1 | | May 15/2024 | ALL |
| STANDBY INSTRUMENT AND PANEL LIGHTS - CAPT, F/O, CENTER PANELS | 33-11-32 | | 1 | | May 15/2024 | ALL |
| STANDBY INSTRUMENT AND PANEL LIGHTS - CONTROL STAND | 33-11-33 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| PILOT'S CONTROL STAND LIGHTING | 33-11-41 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| **OVERHEAD INSTRUMENT PANEL** | | | | | | |
| OVERHEAD INSTRUMENT PANEL LIGHTS - PART ONE | 33-12-11 | | 1.1 | | May 15/2024 | ALL |
| OVERHEAD INSTRUMENT PANEL LIGHTS - PART TWO | 33-12-12 | | 1 | | May 15/2024 | ALL |
| **FLIGHT COMPARTMENT LIGHTS** | | | | | | |
| PILOT'S BACKGROUND LIGHTS | 33-14-11 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| DOME LTG, CONTROL STAND FLOOD LTG, STBY COMPASS LTG, & C/B PNL LTG | 33-14-12 | | 1 | | May 15/2024 | ALL |
| **FLIGHT CREW LIGHTS** | | | | | | |
| MAP, FLIGHT KIT AND READING LIGHTS | 33-17-11 | | 1 | | May 15/2024 | ALL |
| **MASTER DIM AND TEST SYSTEM** | | | | | | |
| MASTER DIM & TEST SYSTEM - POWER & CONTROL | 33-18-11 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, CAPT | 33-18-21 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, F/O | 33-18-22 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, CENTER RIGHT | 33-18-24 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 1 | 33-18-31 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 2 | 33-18-32 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 3 | 33-18-33 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 4 | 33-18-34 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 5 | 33-18-35 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 6 | 33-18-36 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 7 | 33-18-37 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - AFT OVERHEAD PANEL, GROUP 1 | 33-18-41 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - AFT OVERHEAD PANEL, GROUP 2 | 33-18-42 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - GLARESHIELD PANEL, GROUP 1 | 33-18-51 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 1 | 33-18-61 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 2 | 33-18-62 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 3 | 33-18-63 | | 1 | | May 15/2024 | ALL |
| MASTER DIM & TEST SYSTEM- AISLE STAND PANEL, GROUP 4 | 33-18-64 | | 1 | | May 15/2024 | ALL |
| **WINDOW LIGHTS** | | | | | | |
| WINDOW LIGHTS CONTROL | 33-21-11 | | 1 | | May 15/2024 | ALL |
| WINDOW LIGHTS | 33-21-12 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| **CEILING LIGHTS** | | | | | | |
| CEILING LIGHTS CONTROL | 33-22-11 | | 1 | | May 15/2024 | ALL |
| CEILING LIGHTS - LEFT FORWARD | 33-22-21 | | 1 | | May 15/2024 | ALL |
| CEILING LIGHTS - LEFT AFT | 33-22-22 | | 1 | | May 15/2024 | ALL |
| CEILING LIGHTS - RIGHT FORWARD | 33-22-31 | | 1 | | May 15/2024 | ALL |
| CEILING LIGHTS - RIGHT AFT | 33-22-32 | | 1 | | May 15/2024 | ALL |
| CEILING WASH LIGHTS-LEFT | 33-22-41 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| CEILING WASH LIGHTS-RIGHT | 33-22-51 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| **READING LIGHTS** | | | | | | |
| PASS READING LIGHTS- LEFT FORWARD | 33-23-11 | | 1 | | May 15/2024 | ALL |
| PASS READING LIGHTS- LEFT AFT | 33-23-12 | | 1 | | May 15/2024 | ALL |
| PASS READING LIGHTS- RIGHT FORWARD | 33-23-21 | | 1 | | May 15/2024 | ALL |
| PASS READING LIGHTS- RIGHT AFT | 33-23-22 | | 1 | | May 15/2024 | ALL |
| READING LIGHTS- PASS SERVICE UNIT | 33-23-31 | | 1 | | May 15/2024 | ALL |
| **COVE LIGHTS** | | | | | | |
| COVE LIGHTS CONTROL | 33-24-11 | | 1 | | May 15/2024 | ALL |
| COVE LIGHTS-FWD | 33-24-21 | | 1 | | May 15/2024 | ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| COVE LIGHTS-AFT | 33-24-22 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| **PASSENGER SIGNS** | | | | | | |
| PASS SIGN - CONTROL | 33-25-11 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| PASS SIGNS - LEFT FORWARD | 33-25-21 | | 1 | | May 15/2024 | ALL |
| PASS SIGNS - LEFT AFT | 33-25-22 | | 1 | | May 15/2024 | ALL |
| PASS SIGNS - RIGHT FORWARD | 33-25-31 | | 1 | | May 15/2024 | ALL |
| PASS SIGNS - RIGHT AFT | 33-25-32 | | 1 | | May 15/2024 | ALL |
| NO SMOKING/FASTEN SEAT BELT SIGNS - PASS SERVICE UNIT | 33-25-41 | | 1 | | May 15/2024 | ALL |
| **WORK LIGHTS** | | | | | | |
| ATTENDANT WORK LIGHTS | 33-26-11 | | 1 | | May 15/2024 | ALL |
| GALLEY LIGHTS | 33-26-21 | | 1 | | May 15/2024 | ALL |
| LAVATORY LIGHTS AND SIGNS | 33-26-31 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| | | | | 3 | May 15/2024 | ALL |
| CLOSET LIGHTS | 33-26-51 | | 1 | | May 15/2024 | ALL |
| **PASSENGER AND LAVATORY CALL LIGHTS** | | | | | | |
| PASSENGER AND LAVATORY CALL CONTROL | 33-27-11 | | 1 | | May 15/2024 | ALL |
| PASSENGER AND LAVATORY CALL - LEFT FORWARD | 33-27-21 | | 1 | | May 15/2024 | ALL |
| PASSENGER AND LAVATORY CALL - LEFT AFT | 33-27-22 | | 1 | | May 15/2024 | ALL |
| PASSENGER AND LAVATORY CALL - RIGHT FORWARD | 33-27-31 | | 1 | | May 15/2024 | ALL |
| PASSENGER AND LAVATORY CALL - RIGHT AFT | 33-27-32 | | 1 | | May 15/2024 | ALL |
| PASSENGER AND LAVATORY CALL - PASS SERVICE UNIT | 33-27-41 | | 1 | | May 15/2024 | ALL |
| **ENTRY LIGHTS** | | | | | | |
| ENTRY LIGHTS | 33-29-11 | | 1 | | May 15/2024 | ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

# CHAPTER 33
# LIGHTS


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| **WHEEL WELL LIGHTS** | | | | | | |
| SERVICE LIGHTING - WHEEL WELLS | 33-32-11 | | 1 | | Dec 24/2024 | ALL |
| **AIR CONDITIONING COMPARTMENT LIGHTS** | | | | | | |
| SERVICE LIGHTING - AIR CONDITIONING COMPARTMENT | 33-33-11 | | 1 | | May 15/2024 | ALL |
| **ELECTRONIC EQUIPMENT COMPARTMENT LIGHTS** | | | | | | |
| SERVICE LIGHTING - EQUIPMENT RACK FORWARD LOWER COMPARTMENT | 33-34-11 | | 1 | | May 15/2024 | ALL |
| **ACCESSORY COMPARTMENT LIGHTS** | | | | | | |
| SERVICE LIGHTING - ACCESSORY COMPARTMENT | 33-35-11 | | 1 | | May 15/2024 | ALL |
| **CARGO COMPARTMENT LIGHTS** | | | | | | |
| SERVICE LIGHTING - CARGO COMPARTMENT - FWD | 33-36-11 | | 1 | | May 15/2024 | ALL |
| SERVICE LIGHTING - CARGO COMPARTMENT - AFT | 33-36-12 | | 1 | | May 15/2024 | ALL |
| **WING ILLUMINATION LIGHTS** | | | | | | |
| EXTERIOR LIGHTS - WING SCANNING | 33-41-11 | | 1 | | May 15/2024 | ALL |
| **LANDING LIGHTS** | | | | | | |
| LANDING TAXI AND RUNWAY TURNOFF LIGHTING SYSTEMS | 33-42-21 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 28/2025 | ALL |
| | | | | 3 | May 15/2024 | ALL |
| **POSITION LIGHTS** | | | | | | |
| EXTERIOR LIGHTS - POSITION | 33-43-11 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| **ANTI-COLLISION LIGHTS** | | | | | | |
| EXTERIOR LIGHTS - ANTICOLLISION - RED | 33-44-11 | | 1 | | May 15/2024 | ALL |
| EXTERIOR LIGHTS - ANTICOLLISION - WHITE | 33-44-12 | | 1 | | May 15/2024 | ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| **LOGO LIGHTS** | | | | | | |
| EXTERIOR LIGHTS STABILIZER (LOGO) FLOOD LIGHTS | 33-49-11 | | 1 | | May 15/2024 | ALL |
| **EMERGENCY LIGHTS** | | | | | | |
| EMERGENCY EXIT LIGHTS - CONTROL | 33-51-11 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| EMERGENCY EXIT LIGHTS - FORWARD | 33-51-12 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| EMERGENCY EXIT LIGHTS - MID | 33-51-13 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| EMERGENCY EXIT LIGHTS - AFT | 33-51-14 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |
| EMERGENCY EXIT LIGHT - FWD - FLOOR PROXIMITY | 33-51-21 | | 1 | | May 15/2024 | ALL |
| EMERGENCY EXIT LIGHTS - AFT - PROXIMITY | 33-51-22 | | 1 | | May 15/2024 | ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| CH-SE-SU | Title |
|---|---|
| 33-26-11 | ATTENDANT WORK LIGHTS |
| 33-11-31 | CAPTAIN'S AND FIRST OFFICER'S CENTER INSTR PANEL LIGHTING |
| 33-11-11 | CAPTAIN'S INSTRUMENT PANEL LIGHTING |
| 33-22-22 | CEILING LIGHTS - LEFT AFT |
| 33-22-21 | CEILING LIGHTS - LEFT FORWARD |
| 33-22-32 | CEILING LIGHTS - RIGHT AFT |
| 33-22-31 | CEILING LIGHTS - RIGHT FORWARD |
| 33-22-11 | CEILING LIGHTS CONTROL |
| 33-22-41 | CEILING WASH LIGHTS-LEFT |
| 33-22-51 | CEILING WASH LIGHTS-RIGHT |
| 33-26-51 | CLOSET LIGHTS |
| 33-24-11 | COVE LIGHTS CONTROL |
| 33-24-22 | COVE LIGHTS-AFT |
| 33-24-21 | COVE LIGHTS-FWD |
| 33-14-12 | DOME LTG, CONTROL STAND FLOOD LTG, STBY COMPASS LTG, & C/B PNL LTG |
| 33-51-21 | EMERGENCY EXIT LIGHT - FWD - FLOOR PROXIMITY |
| 33-51-14 | EMERGENCY EXIT LIGHTS - AFT |
| 33-51-22 | EMERGENCY EXIT LIGHTS - AFT - PROXIMITY |
| 33-51-11 | EMERGENCY EXIT LIGHTS - CONTROL |
| 33-51-12 | EMERGENCY EXIT LIGHTS - FORWARD |
| 33-51-13 | EMERGENCY EXIT LIGHTS - MID |
| 33-29-11 | ENTRY LIGHTS |
| 33-44-11 | EXTERIOR LIGHTS - ANTICOLLISION - RED |
| 33-44-12 | EXTERIOR LIGHTS - ANTICOLLISION - WHITE |
| 33-43-11 | EXTERIOR LIGHTS - POSITION |
| 33-41-11 | EXTERIOR LIGHTS - WING SCANNING |
| 33-49-11 | EXTERIOR LIGHTS STABILIZER (LOGO) FLOOD LIGHTS |
| 33-11-21 | FIRST OFFICER'S INSTRUMENT PANEL LIGHTING |
| 33-26-21 | GALLEY LIGHTS |
| 33-00-01 | LAMP USAGE CHART |
| 33-42-21 | LANDING TAXI AND RUNWAY TURNOFF LIGHTING SYSTEMS |
| 33-26-31 | LAVATORY LIGHTS AND SIGNS |
| 33-17-11 | MAP, FLIGHT KIT AND READING LIGHTS |
| 33-18-41 | MASTER DIM & TEST SYSTEM - AFT OVERHEAD PANEL, GROUP 1 |
| 33-18-42 | MASTER DIM & TEST SYSTEM - AFT OVERHEAD PANEL, GROUP 2 |
| 33-18-61 | MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 1 |
| 33-18-62 | MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 2 |
| 33-18-63 | MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 3 |


## 33-ALPHABETICAL INDEX



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| CH-SE-SU | Title |
|---|---|
| 33-18-31 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 1 |
| 33-18-32 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 2 |
| 33-18-33 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 3 |
| 33-18-34 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 4 |
| 33-18-35 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 5 |
| 33-18-36 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 6 |
| 33-18-37 | MASTER DIM & TEST SYSTEM - FWD OVERHEAD PANEL, GROUP 7 |
| 33-18-51 | MASTER DIM & TEST SYSTEM - GLARESHIELD PANEL, GROUP 1 |
| 33-18-21 | MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, CAPT |
| 33-18-24 | MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, CENTER RIGHT |
| 33-18-22 | MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, F/O |
| 33-18-11 | MASTER DIM & TEST SYSTEM - POWER & CONTROL |
| 33-18-64 | MASTER DIM & TEST SYSTEM- AISLE STAND PANEL, GROUP 4 |
| 33-25-41 | NO SMOKING/FASTEN SEAT BELT SIGNS - PASS SERVICE UNIT |
| 33-12-11 | OVERHEAD INSTRUMENT PANEL LIGHTS - PART ONE |
| 33-12-12 | OVERHEAD INSTRUMENT PANEL LIGHTS - PART TWO |
| 33-23-12 | PASS READING LIGHTS- LEFT AFT |
| 33-23-11 | PASS READING LIGHTS- LEFT FORWARD |
| 33-23-22 | PASS READING LIGHTS- RIGHT AFT |
| 33-23-21 | PASS READING LIGHTS- RIGHT FORWARD |
| 33-25-11 | PASS SIGN - CONTROL |
| 33-25-22 | PASS SIGNS - LEFT AFT |
| 33-25-21 | PASS SIGNS - LEFT FORWARD |
| 33-25-32 | PASS SIGNS - RIGHT AFT |
| 33-25-31 | PASS SIGNS - RIGHT FORWARD |
| 33-27-22 | PASSENGER AND LAVATORY CALL - LEFT AFT |
| 33-27-21 | PASSENGER AND LAVATORY CALL - LEFT FORWARD |
| 33-27-41 | PASSENGER AND LAVATORY CALL - PASS SERVICE UNIT |
| 33-27-32 | PASSENGER AND LAVATORY CALL - RIGHT AFT |
| 33-27-31 | PASSENGER AND LAVATORY CALL - RIGHT FORWARD |
| 33-27-11 | PASSENGER AND LAVATORY CALL CONTROL |
| 33-14-11 | PILOT'S BACKGROUND LIGHTS |
| 33-11-41 | PILOT'S CONTROL STAND LIGHTING |
| 33-23-31 | READING LIGHTS- PASS SERVICE UNIT |
| 33-35-11 | SERVICE LIGHTING - ACCESSORY COMPARTMENT |
| 33-33-11 | SERVICE LIGHTING - AIR CONDITIONING COMPARTMENT |
| 33-36-12 | SERVICE LIGHTING - CARGO COMPARTMENT - AFT |
| 33-36-11 | SERVICE LIGHTING - CARGO COMPARTMENT - FWD |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| CH-SE-SU | Title |
|---|---|
| 33-34-11 | SERVICE LIGHTING - EQUIPMENT RACK FORWARD LOWER COMPARTMENT |
| 33-32-11 | SERVICE LIGHTING - WHEEL WELLS |
| 33-11-32 | STANDBY INSTRUMENT AND PANEL LIGHTS - CAPT, F/O, CENTER PANELS |
| 33-11-33 | STANDBY INSTRUMENT AND PANEL LIGHTS - CONTROL STAND |
| 33-21-12 | WINDOW LIGHTS |
| 33-21-11 | WINDOW LIGHTS CONTROL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-L
1

## FLIGHT COMPARTMENT [1]

ANNUNCIATOR AND WARNING LIGHTS:

| FUNCTION | LAMP NO. | APPROX QTY | VENDOR CODE |
|---|---|---|---|
| ALTIMETER AND RATE OF CLIMB | 10-61800-1101 | 1 | 81205 |
| ALTITUDE CLEARANCE | 310-2/-3 | 2 | 08806 |
| ANNUN-AUTO FLIGHT STATUS | 10-62058-6 | 2 | 13499 |
| BRAKE TEMP | 10-61803-479 | 1 | |
| EMERG EXIT UNARMED | 387, 387AS15, MS25237-387 | 2 | 08806 |
| EQUIP COOLING EXHAUST OFF | 10-61803-12 | 1 | 81205 |
| EQUIP COOLING SUPPLY OFF | 10-61803-12 | 1 | 81205 |
| EXT PWR CONN | NE51H | 1 | 08806 |
| EXT PWR NOT IN USE | MS25231-313 | 1 | 08806 |
| FIRE WARNING | 1864 | 2 | 08806 |
| HEADING REF SWITCH | 10-61800-1601 | 1 | 81205 |
| INOP IND | 10-61803-186 | 1 | 81205 |
| LAVATORY SMOKE INDICATOR | 10-61803-416 | 1 | 81205 |
| LTG CONTROL PNL | 10-61800-536 | 1 | 81205 |
| MAIN GEAR SYS 2, LEFT | 10-61803-50 | 1 | 81205 |
| MAIN GEAR SYS 2, RIGHT | 10-61803-49 | 1 | 81205 |
| MASTER CAUTION | 1864 | 3 | 08806 |
| MASTER CAUTION DISPLAY | 737AS15 | 24 | 08806 |
| NOSE GEAR SYS 2 | 10-61803-48 | 1 | 81205 |
| PA IN USE | 10-61803-397 | 1 | 81205 |
| PARKING BRAKE | 1864, 387 | 1 | 08806 |
| PSEU FAULT | 10-61803-469 | 1 | |
| REMOTE PTT SWITCH CAPT | 10-61800-751 | 1 | 81205 |
| REMOTE PTT SWITCH F/O | 10-61800-750 | 1 | 81205 |
| REPEAT PARKING BRAKE | LH73/1 | 1 | 196906 |
| STAB TRIM CAPT | 10-61800-740 | 1 | 81205 |
| STAB TRIM F/O | 10-61800-741 | 1 | 81205 |
| STAB TRIM/DOOR UNLOCK | 10-61800-537 | 1 | 81205 |

PANELS AND DISPLAYS:

| | | | |
|---|---|---|---|
| ACARS VOICE/DATA SWITCH PNL | 69-73032-6 | 1 | 81205 |
| ATTENDANT PANEL-AFT | 417A6110-2 | 1 | 81205 |
| ATTENDANT PANEL-FWD | 417A6110-1 | 1 | 81205 |
| AUDIO SELECT PANEL-CAPTAIN | 10-62090-() | 1 | 81205 |
| AUDIO SELECT PANEL-F/O | 10-62090-() | 1 | 81205 |
| AUDIO SELECT PANEL-OBSERVER | 10-62090-() | 1 | 81205 |
| CREW EMER EVAC SIGNAL PNL | 10-61803-() | 1 | 81590 |
| CREW EMER EVAC SIGNAL PNL | 1N5061 | 1 | |
| DISPLAY UNIT | S243W001-() | 6 | 58960 |
| DOOR WARNING ANNUNCIATOR PNL | 233A3207-() | 1 | |
| EFIS PANEL | S242A801-2100 | 2 | 58960 |
| FLT RCDR AND MACH AIRSPEED WARN PNL | 69-37325-135 | 1 | 81205 |
| STALL WARNING PANEL | 69-75978-1 | 1 | 81205 |

AREA AND MISC LIGHTING:

| | | | |
|---|---|---|---|
| CABIN LIGHT | 1691 | 1 | 08806 |
| CABIN LIGHT | 1864 | 3 | 08806 |
| CAPT CALL LIGHT | 387, 387AS15, MS25237-387 | 2 | 08806 |
| CHART LIGHT | S232W500-6 | 1 | 72914 |
| CLIPBOARD | S232W500-6 | 2 | 72914 |
| CONTROL STAND | 1665 | 1 | 08806 |
| EF-2C FLASHLIGHT SYSTEM | A1-14-0002-200 | 3 | 55827 |
| FLIGHT KITS | 1864 | 2 | 08806 |
| FLOODLIGHT-GLARESHIELD | S233W810-3 | 1 | 81205 |
| FLOODLIGHT-MAIN PANEL, CAPT | S233W810-9 | 1 | 81205 |
| FLOODLIGHT-MAIN PANEL, CENTER | S233W810-4 | 1 | 81205 |
| FLOODLIGHT-MAIN PANEL, F/O | S233W810-10 | 1 | 81205 |
| FLOODLIGHT-OXYGEN MASK STOWAGE | S233W810-7 | 2 | 81205 |
| MAP LIGHTS | 1619 | 1 | 72914 |
| MAP LIGHTS | 1691, MS35478-1691 | 2 | 08806 |
| MAP LIGHTS | 9204 | 4 | 68045 |
| P5 DOME LIGHT | 90-42301-1 | 1 | 51074 |
| P5 MISC. HORIZONTAL | 90-42301-1 | 1 | 51074 |
| P5 MISC. VERTICAL | 90-42301-1 | 1 | 51074 |
| P6 CIRCUIT BREAKER PANEL | 15-0121-2 | 1 | 72914 |
| P6 CIRCUIT BREAKER PANEL | BACS16A-2 | 2 | 81205 |
| P18 CIRCUIT BREAKER PANEL | 15-0121-1 | 1 | 72914 |
| P18 CIRCUIT BREAKER PANEL | 69-43850-1 | 1 | 72914 |
| READING LIGHTS | 1864 | 2 | 08806 |
| WHITEDOME | 2233 | 5 | 08806 |

## FLIGHT COMPARTMENT [1]

INDICATORS:

| FUNCTION | LAMP NO. | APPROX QTY | VENDOR CODE |
|---|---|---|---|
| CABIN ALTITUDE AND DIFFERENTIAL PRESSURE | 10-60726-6 | 1 | 81205 |
| CABIN RATE OF CLIMB | 10-60755-6 | 1 | 81205 |
| CLOCK | 60B00303-105 | 2 | 82227 |
| CLOCK | S231W130-3 | 2 | K0100 |
| CREW OXYGEN PRESSURE | 10-60735-1 | 1 | 81205 |
| DUAL PRESSURE | S231T245-4 | 1 | 61349 |
| EXHAUST GAS TEMPERATURE APU | 10-62190-3 | 1 | 81205 |
| FLAP POSITION | 10-61926-5 | 1 | 81205 |
| FUEL TEMPERATURE | 10-60521-2 | 1 | 81205 |
| HYDRAULIC BRAKE PRESSURE | S231W210-2 | 1 | 81205 |
| RADIO ALTIMETER | 066-50007-0101 | 2 | 13499 |
| RADIO MAGNETIC | S242T403-207 | 1 | 03483 |
| RUDDER TRIM | 10-62035-2 | 1 | 81205 |
| SELECTOR-CABIN TEMPERATURE | 607400-1-1 | 2 | 70210 |
| STANDBY ALTIMETER/AIRSPEED | WL102AMS3 | 1 | 35012 |
| STANDBY ATTITUDE | 501-1657-02 | 1 | JET |
| STANDBY ATTITUDE | S231A121-1 | 1 | SFENA |
| TEMPERATURE | 162BL902 | 1 | 35918 |
| YAW DAMPER SURFACE POSITION | 10-60775-6 | 1 | 81205 |

## PASSENGER COMPARTMENT [1]

| FUNCTION | LAMP NO. | APPROX QTY | VENDOR CODE |
|---|---|---|---|
| AISLE | 1317 | 23 | 08806 |
| CEILING LIGHT | 303, MS15570-303 | 1 | 08806 |
| DIM ENTRY LAMP | 1864 | 3 | 08806 |
| DIM ENTRY LAMP | 1873F | 2 | 08806 |
| DOOR SILL LIGHT | 1317 | 1 | 08806 |
| EMERGENCY CEILING LIGHT | 1317 | 3 | 81205 |
| EMERGENCY HATCH | 1317 | 4 | 08806 |
| EMERGENCY HATCH | 5106CW/WW | 4 | 08805 |
| EMERGENCY HATCH | 0L-3071BPE/GPL | 48 | S3774 |
| ENTRY | F032/BCAC/WW,/CW | 2 | 08805 |
| ENTRY | FB024/830,/841 | 4 | 3E097 |
| EXIT INDICATOR | 36155/-1 | 48 | S3774 |
| EXIT INDICATOR | LP-7265-001 | 4 | S3774 |
| EXIT INDICATOR | 0L-3071BPE/GPL | 50 | S3774 |
| EXIT LOCATOR | 0L-387BP/GPL | 5 | 08806 |
| EXIT LOCATOR | 0L-3071BPE/GPL | 90 | 53774 |
| EXIT LOCATOR | 0L-628BPE/GPL | 8 | 53774 |
| EXIT LOCATOR | S479W220-103 | 1 | 81205 |
| EXIT, MID AISLE | 0L-3071BPE/GPL | 108 | 53774 |
| EXIT, MID AISLE | S479W220-103 | 3 | 81205 |
| EXIT, MID-FWD | 0L-3071BPE/GPL | 36 | 53774 |
| EXIT, OVERDOOR | 0L-3071BPE/GPL | 72 | 53774 |
| EXIT, OVERDOOR | 0L-628BPE/GPL | 20 | 53774 |
| EXIT, OVERWING | 0L-3071BPE/GPL | 48 | 53774 |
| FLASHLIGHT ALMP 2C | A1-14-0002-200 | 6 | 55827 |
| GALLEY | FB016/830,/841 | 3 | 3E097 |
| LAV | 1251, MS15570-1251 | 11 | 81205 |
| LAV INOP/TEST SWITCH LAMP | AML91LA85 | 11 | 91929 |
| LAV MIRROR LAMP | 5106WW | 26 | 81205 |
| LAV OCCUPY | S417A548-1 | 4 | 81205 |
| LAV THRESHOLD | 3051F | 1 | 08806 |
| MDL-AISLE INDICATOR | 0L-3071BPEGPL | 7 | S3774 |
| NIGHT LIGHT | S417N502-3 | 1 | 72914 |
| NO SMOKING FASTEN SEAT BELTS SIGN | 7387 | 96 | 08806 |
| PASSENGER READING LAMP | 9204 | 48 | 68045 |
| PROXIMITY LIGHT | BR9644-11 | 2 | 81205 |
| PROXIMITY LIGHT | 0L-3071BPEGPL | 7 | S3774 |
| PROXIMITY LIGHT | S479W230-6/7 | 2 | |
| SIDEWALL LIGHTS | 5106WW | 4 | 08806 |
| SIDEWALL LIGHTS | 5113WW | 2 | 08806 |
| SIDEWALL LIGHTS | F18T5CWRS,WWRS | 34 | 52343 |
| STERILE LIGHT | 327, MS25237-327 | 1 | 81590 |
| THRESHOLD, FWD | 3051F | 1 | 08806 |
| WORK LIGHT | 1308 | 4 | S5006 |

## EXTERIOR LIGHTS [1]

| FUNCTION | LAMP NO. | APPROX QTY | VENDOR CODE |
|---|---|---|---|
| ANTI-COLLISION | 55-2211 | 2 | 72914 |
| ESCAPE SLIDE | 767 | 5 | 08806 |
| LANDING-MAIN FIXED | Q4559X | 2 | 08806 |
| LANDING-MAIN RETRACTABLE | Q4559X | 2 | 08806 |
| LOGO LIGHTS | HLX64621 | 2 | 08805 |
| NOSE GEAR TAXI | 4551,4554 | 1 | 08806 |
| OVERWING ESCAPE | 767 | 6 | 08806 |
| OVERWING ESCAPE GROUND ILLUM-L | S283A325-9 | 1 | 81205 |
| OVERWING ESCAPE GROUND ILLUM-R | S283A325-10 | 1 | 81205 |
| RUNWAY TURNOFF | 4551 | 2 | 08806 |
| TAIL STROBE | 30-0909-201 | 1 | 72914 |
| WING ILLUMINATION | HLX64621 | 3 | 01TJ3 |
| WINGLET | HLX64621 | 4 | 01TJ3 |
| WING TIP-AFT | HLX64621 | 4 | 01TJ3 |
| WING TIP-FWD | HLX64621 | 4 | 01TJ3 |

## CARGO COMPARTMENT [1]

| | | | |
|---|---|---|---|
| AFT CARGO COMPARTMENT | 2233 | 9 | 08806 |
| AFT CARGO DOOR SILL | 1665 | 1 | 08806 |
| FWD CARGO COMPARTMENT | 2233 | 9 | 08806 |
| FWD CARGO COMPARTMENT | 2233 | 3 | 81205 |
| FWD CARGO DOOR SILL | 1665 | 1 | 08806 |
| FWD CARGO DOOR SILL | 15-0093-5 | 1 | 72914 |
| MAIN DECK CARGO | 10-61803 | 1 | 81205 |
| MAIN DECK CARGO DOOR THRESHOLD LIGHT | S283A307-1 | 2 | 81205 |

## SERVICE COMPARTMENTS [1]

| | | | |
|---|---|---|---|
| A/C COMPARTMENT | 1665 | 9 | 08806 |
| ACCESSORY LIGHTS | 1665 | 2 | 08806 |
| APU | 1665 | 2 | 08806 |
| E/E RACK | 1665 | 4 | 08806 |
| FUEL CONTROL STATION PRESSURE PANEL | 1864 | 3 | 72914 |
| FWD LOWER | 1665 | 3 | 08806 |
| MAIN GEAR INSPECTION | 1665 | 2 | 08806 |
| MAIN WHEEL WELL | 3011,MS25235-3011 | 2 | 08806 |
| NOSE WHEEL WELL FLOOD | 3011,MS25235-3011 | 1 | 08806 |
| OUTBOARD REFUELING PANEL | MS25069-1495 | 3 | 72914 |
| SENSOR FOUL LIGHT | 21393-001 | 1 | 81205 |
| TAIL CONE | 1665 | 1 | 08806 |

NOTES:

[1] THIS PAGE IS FOR REFERENCE ONLY. IT PROVIDES THE AVAILABLE LAMP PART NUMBERS FOR THE FUNCTIONS DESCRIBED. SEE THE EQUIPMENT LIST FOR THE PART NUMBER ACTUALLY INSTALLED.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-00-01

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
23

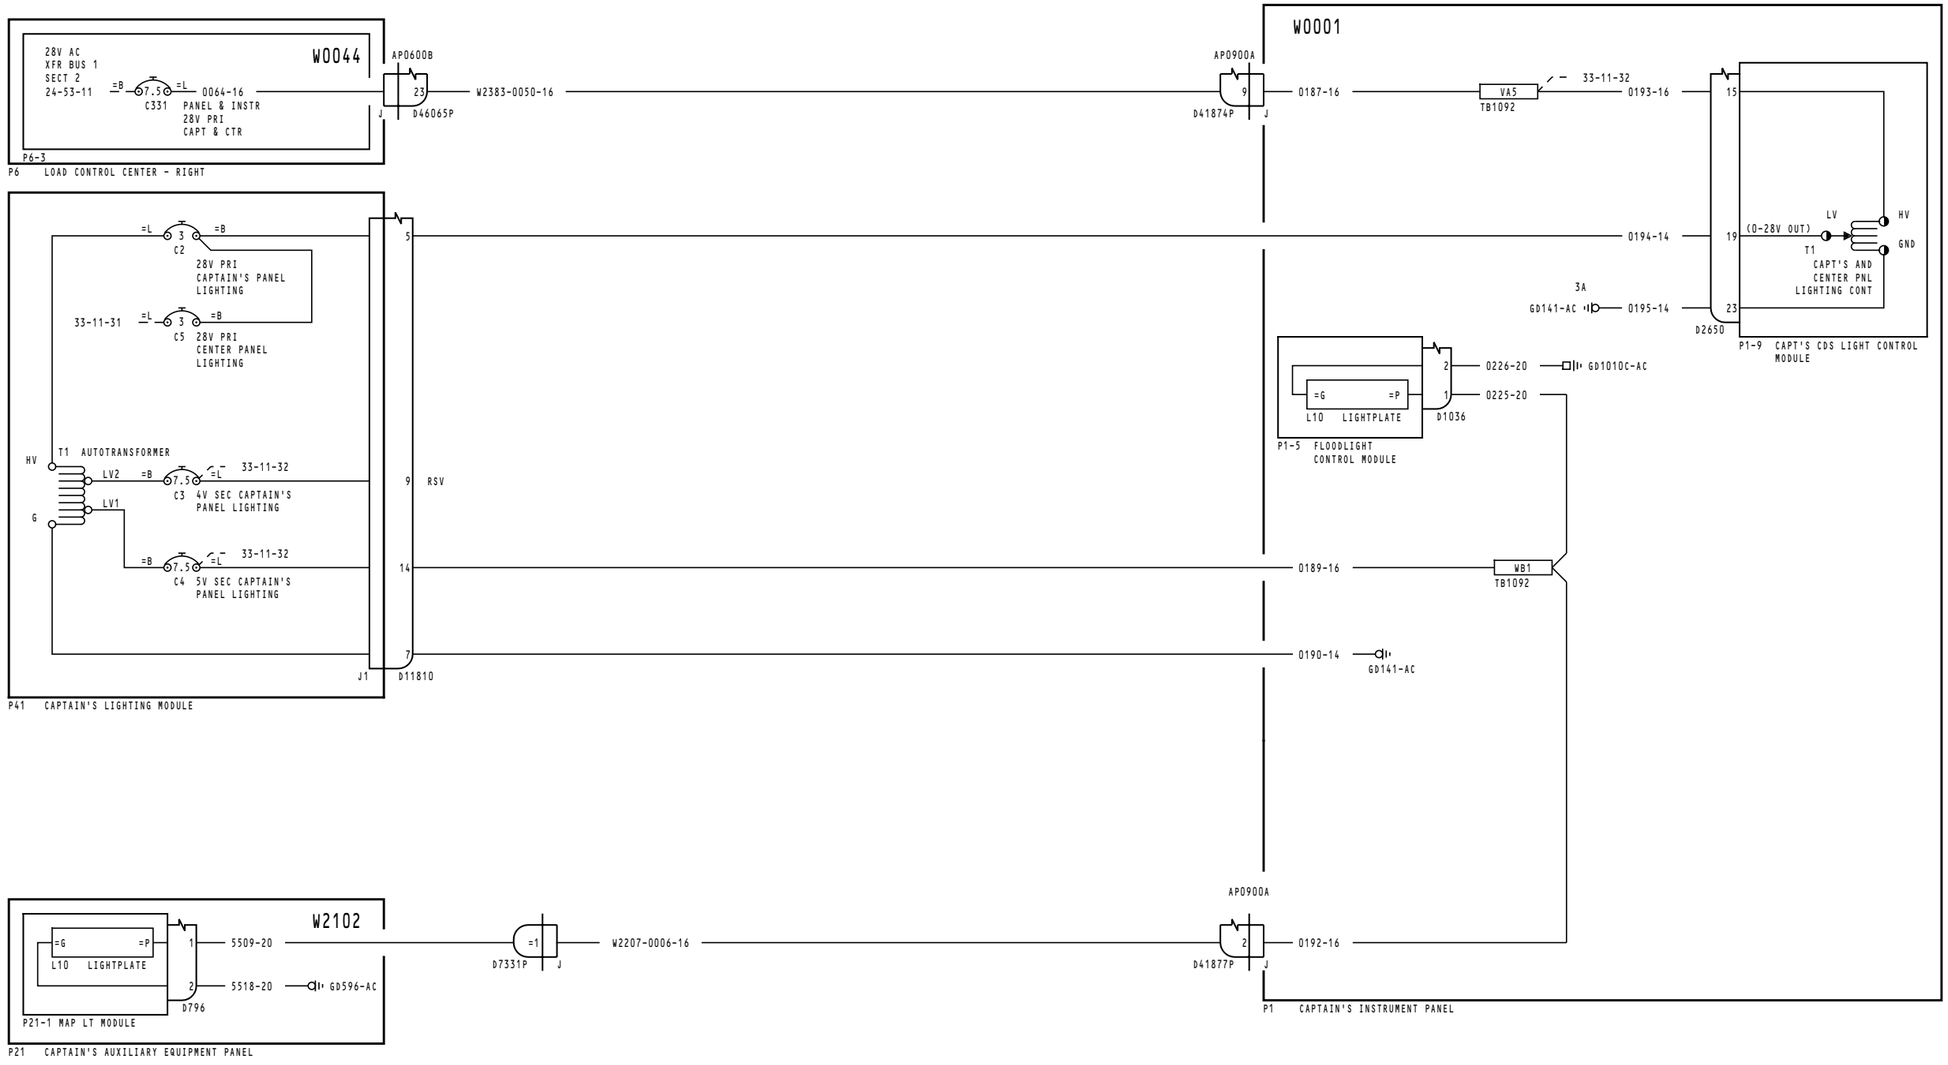




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-11-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
45

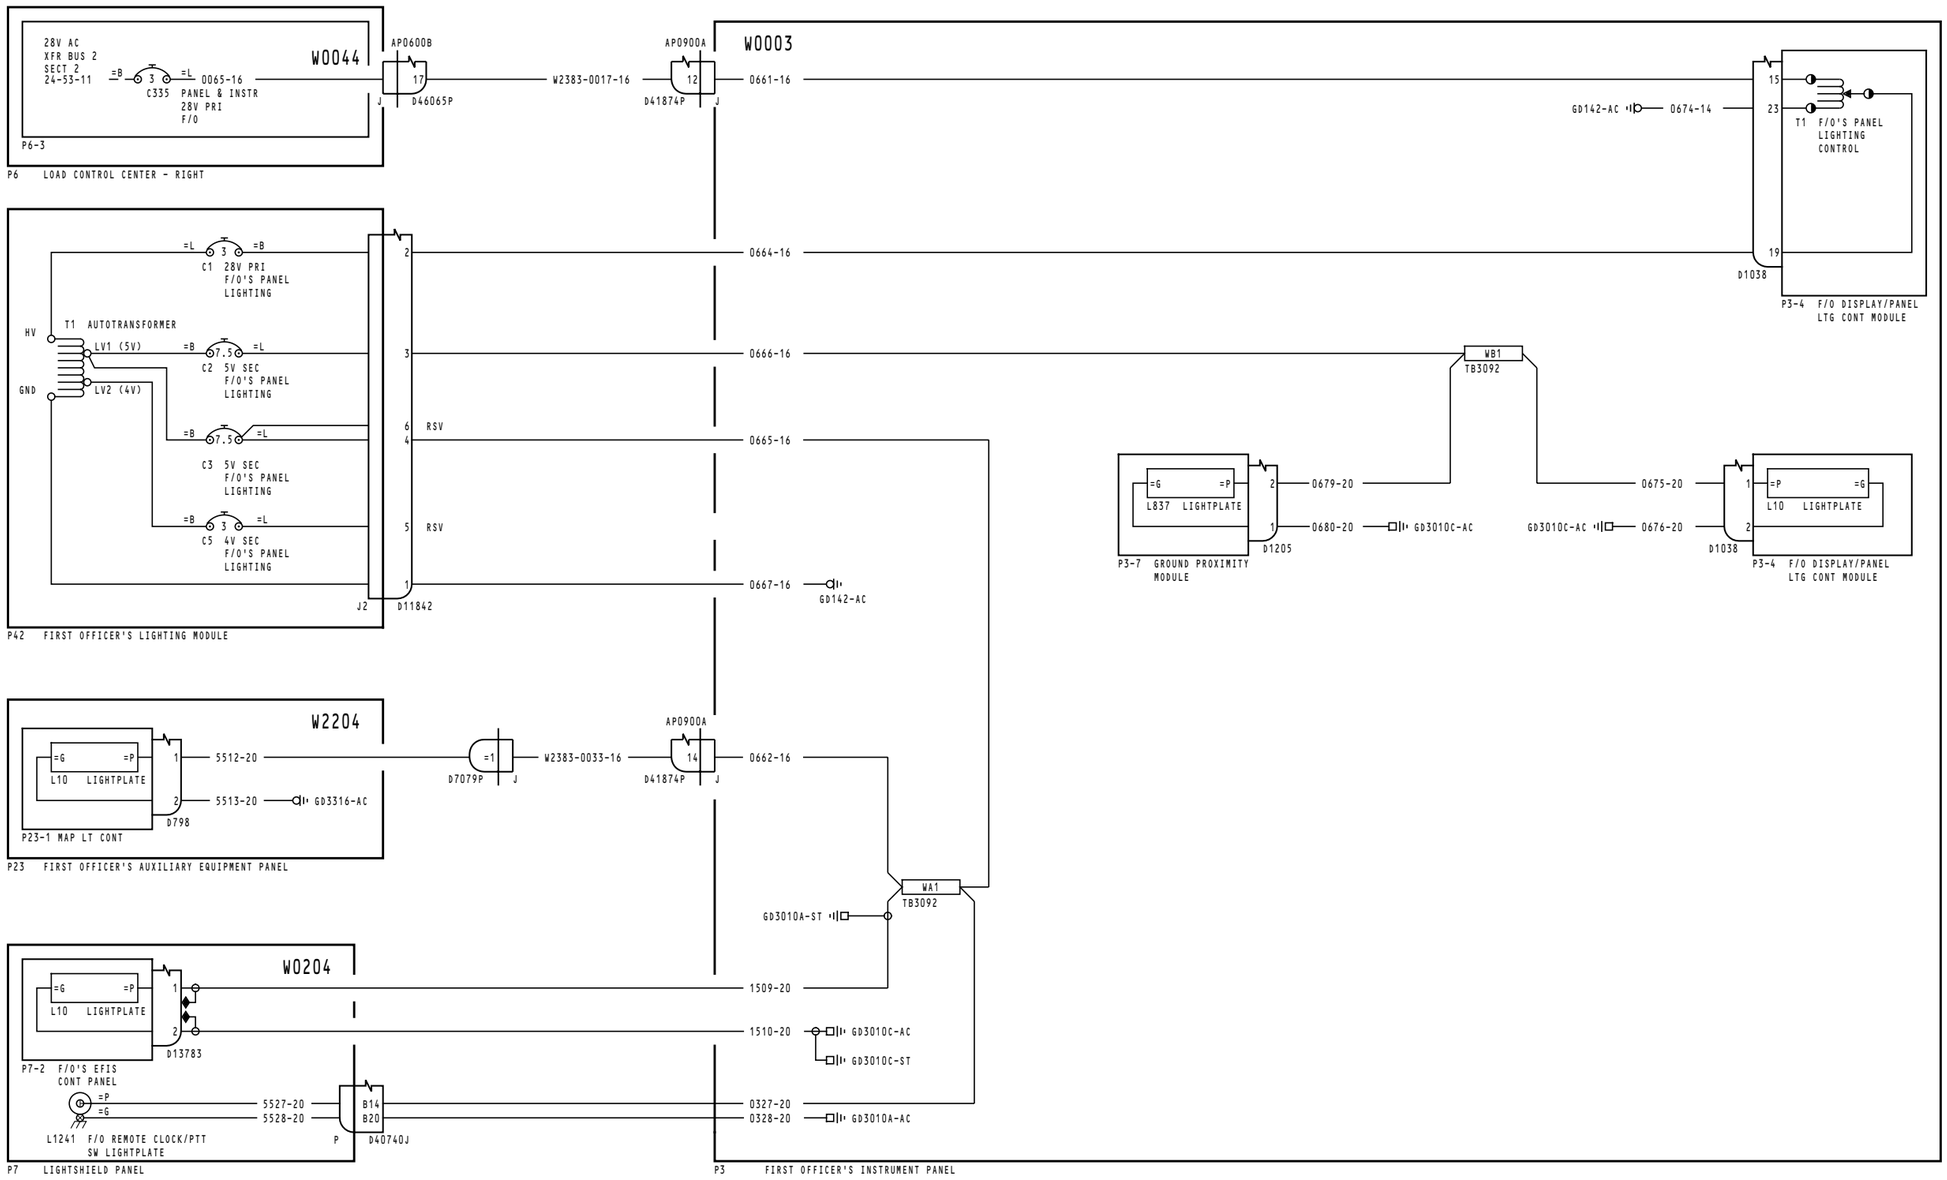


SAME AS CONFIGURATION 67



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-11-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL



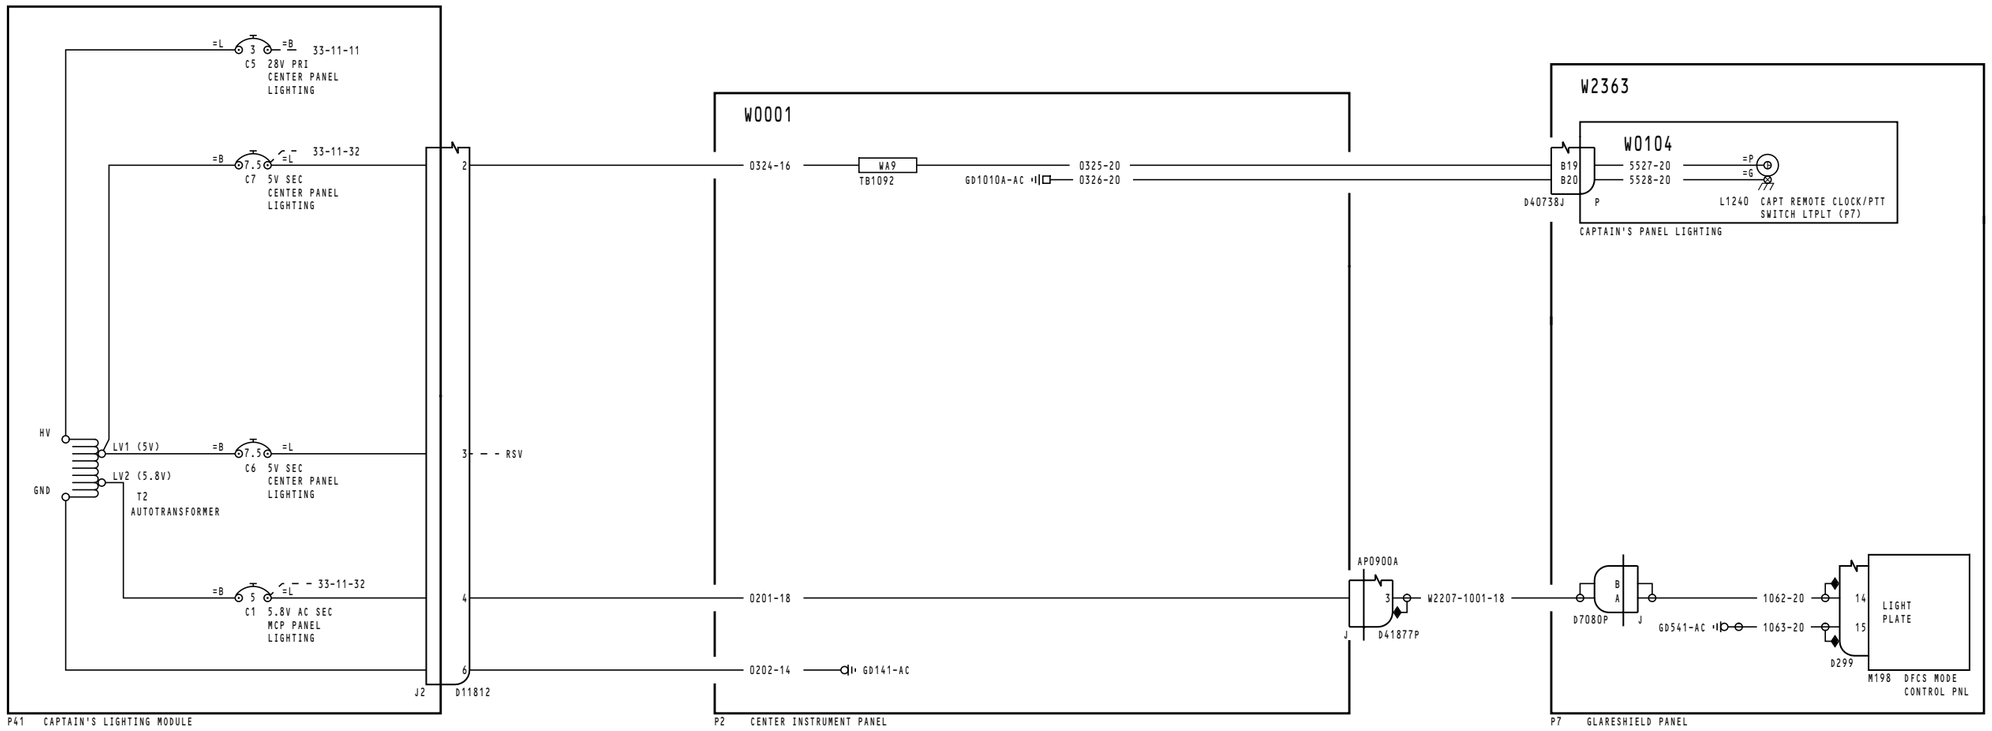




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-11-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
52

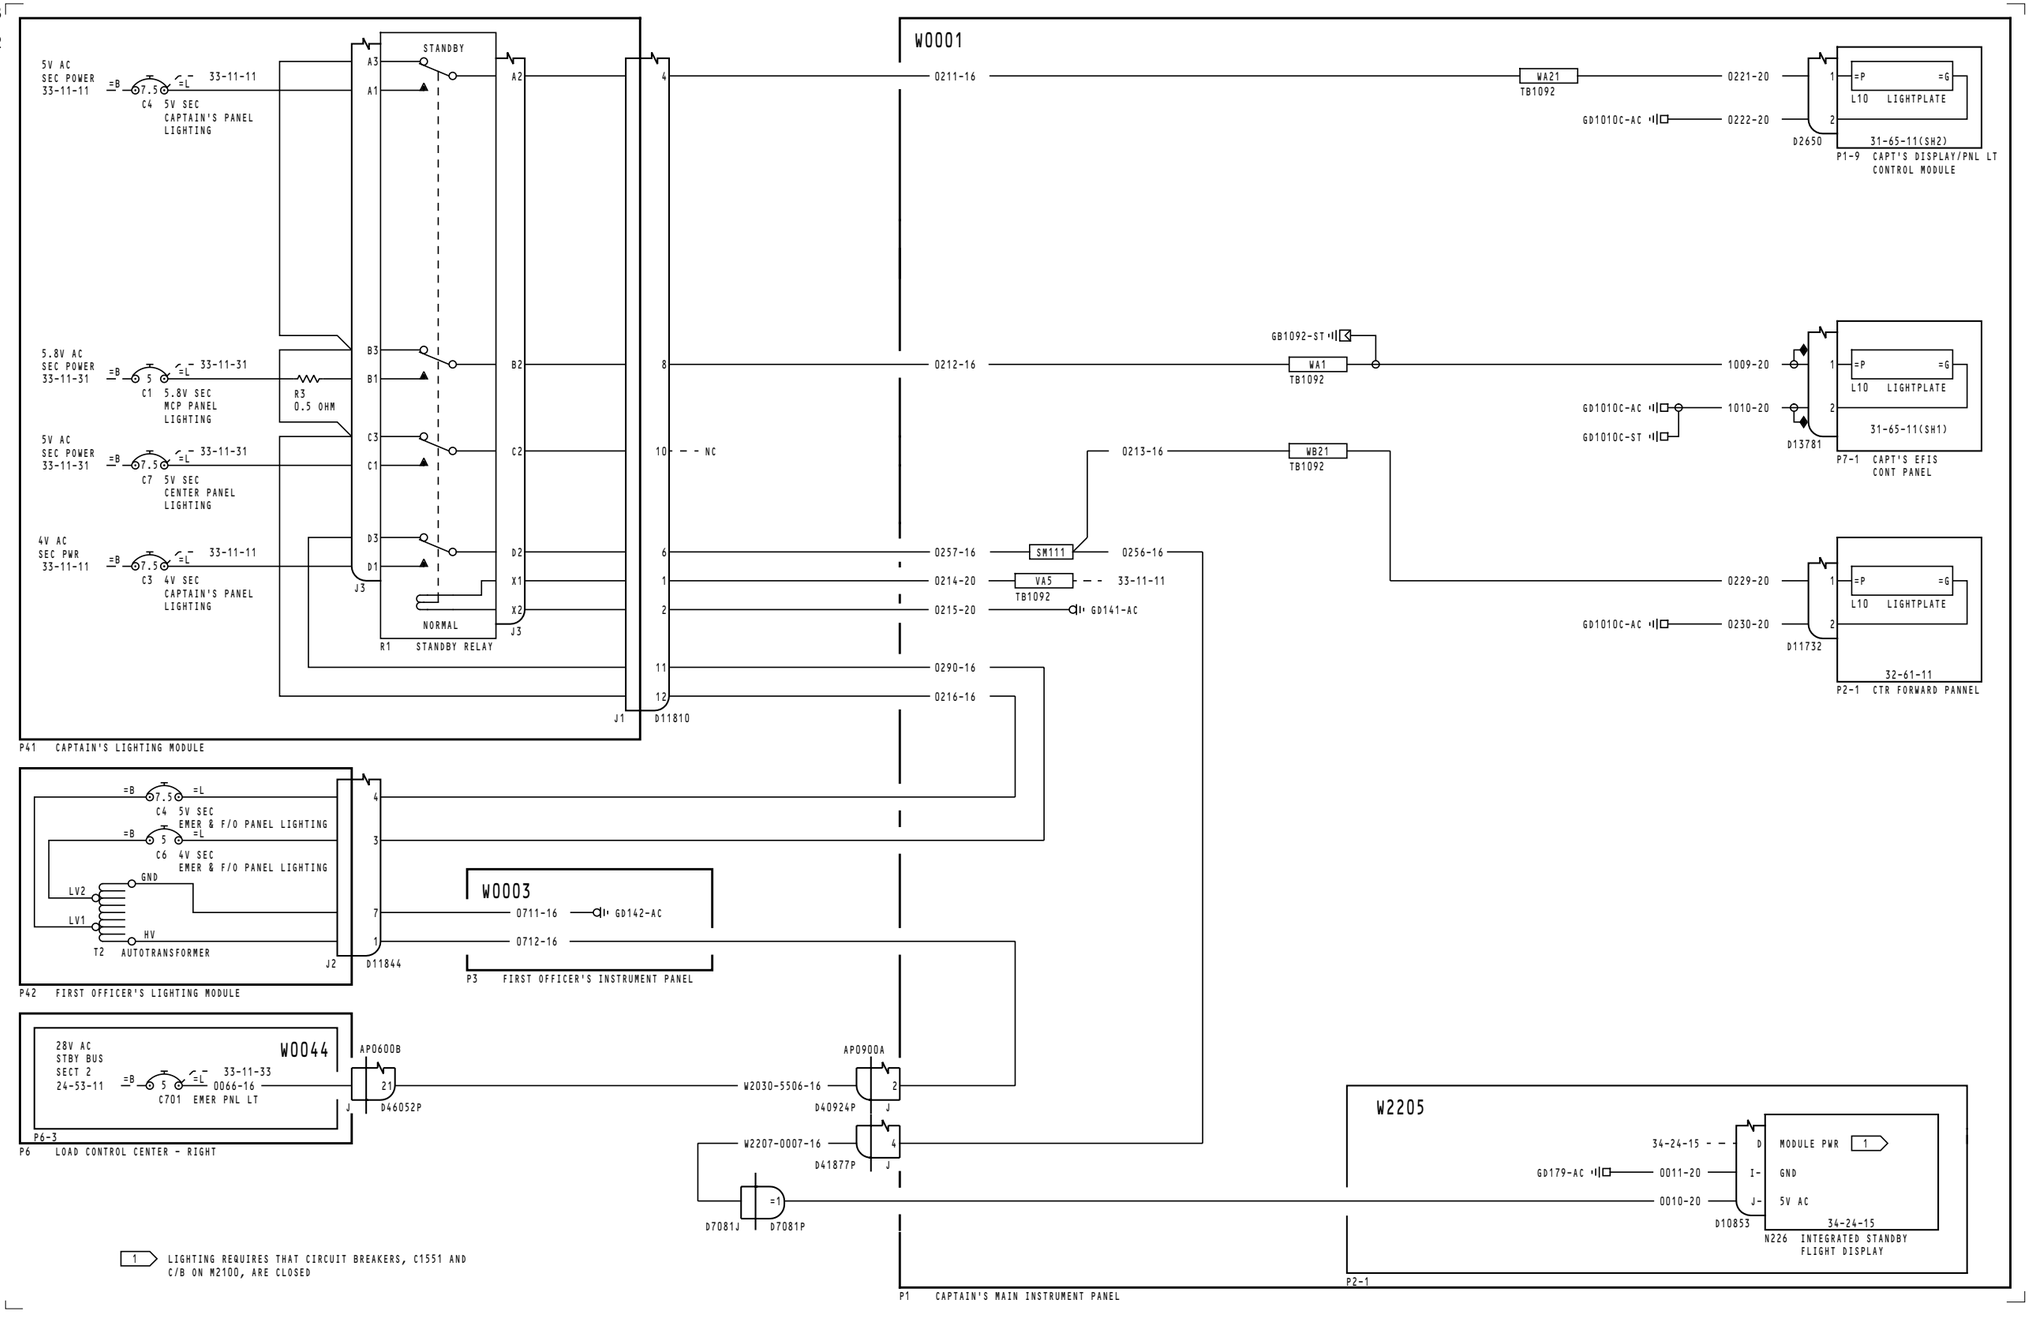




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-11-32

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
207

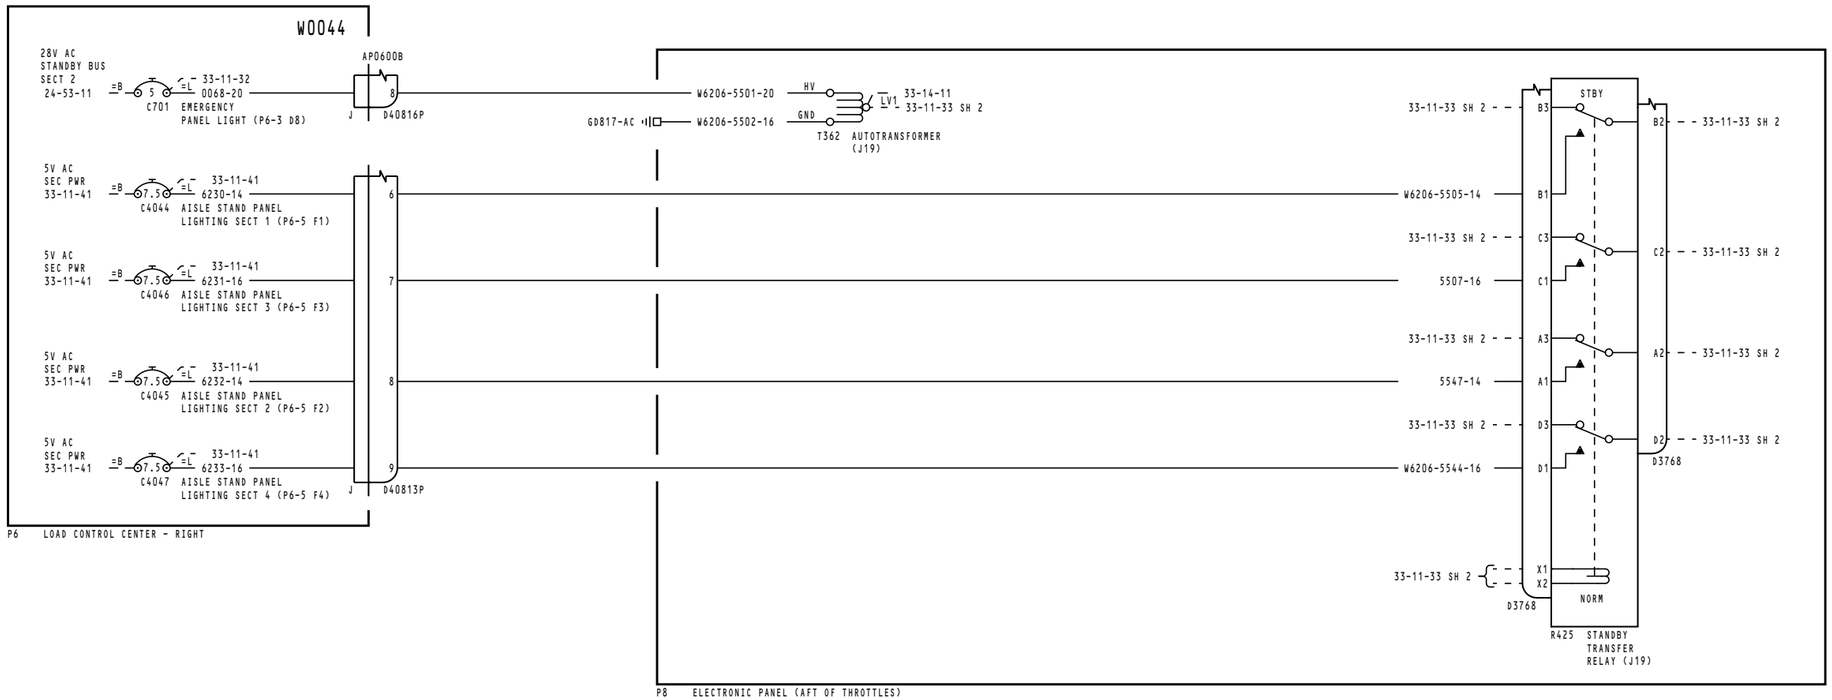





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-11-33

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

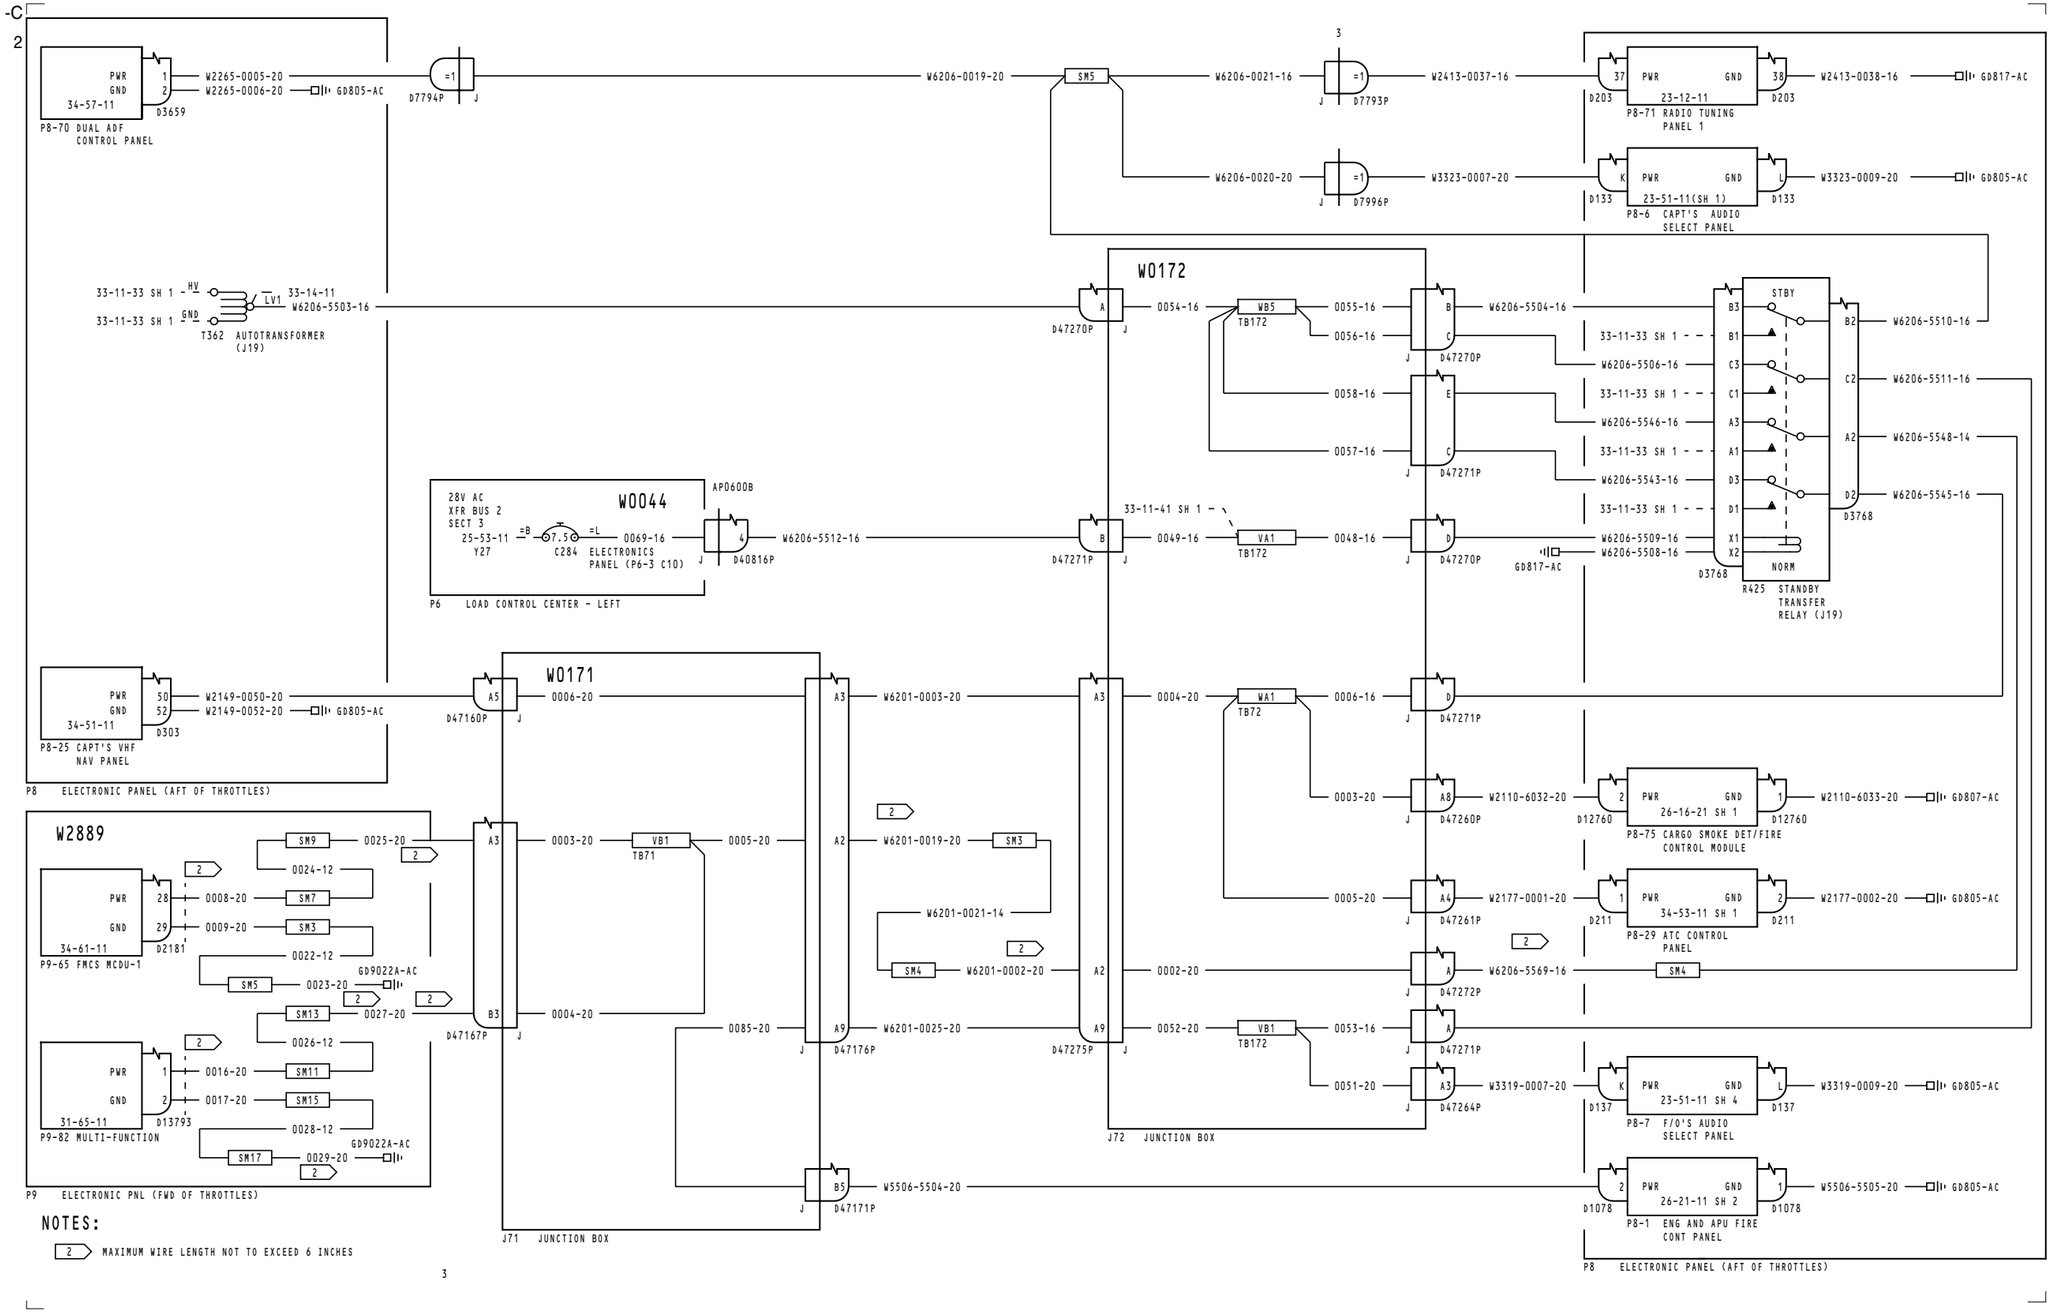





33-11-33

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C
586

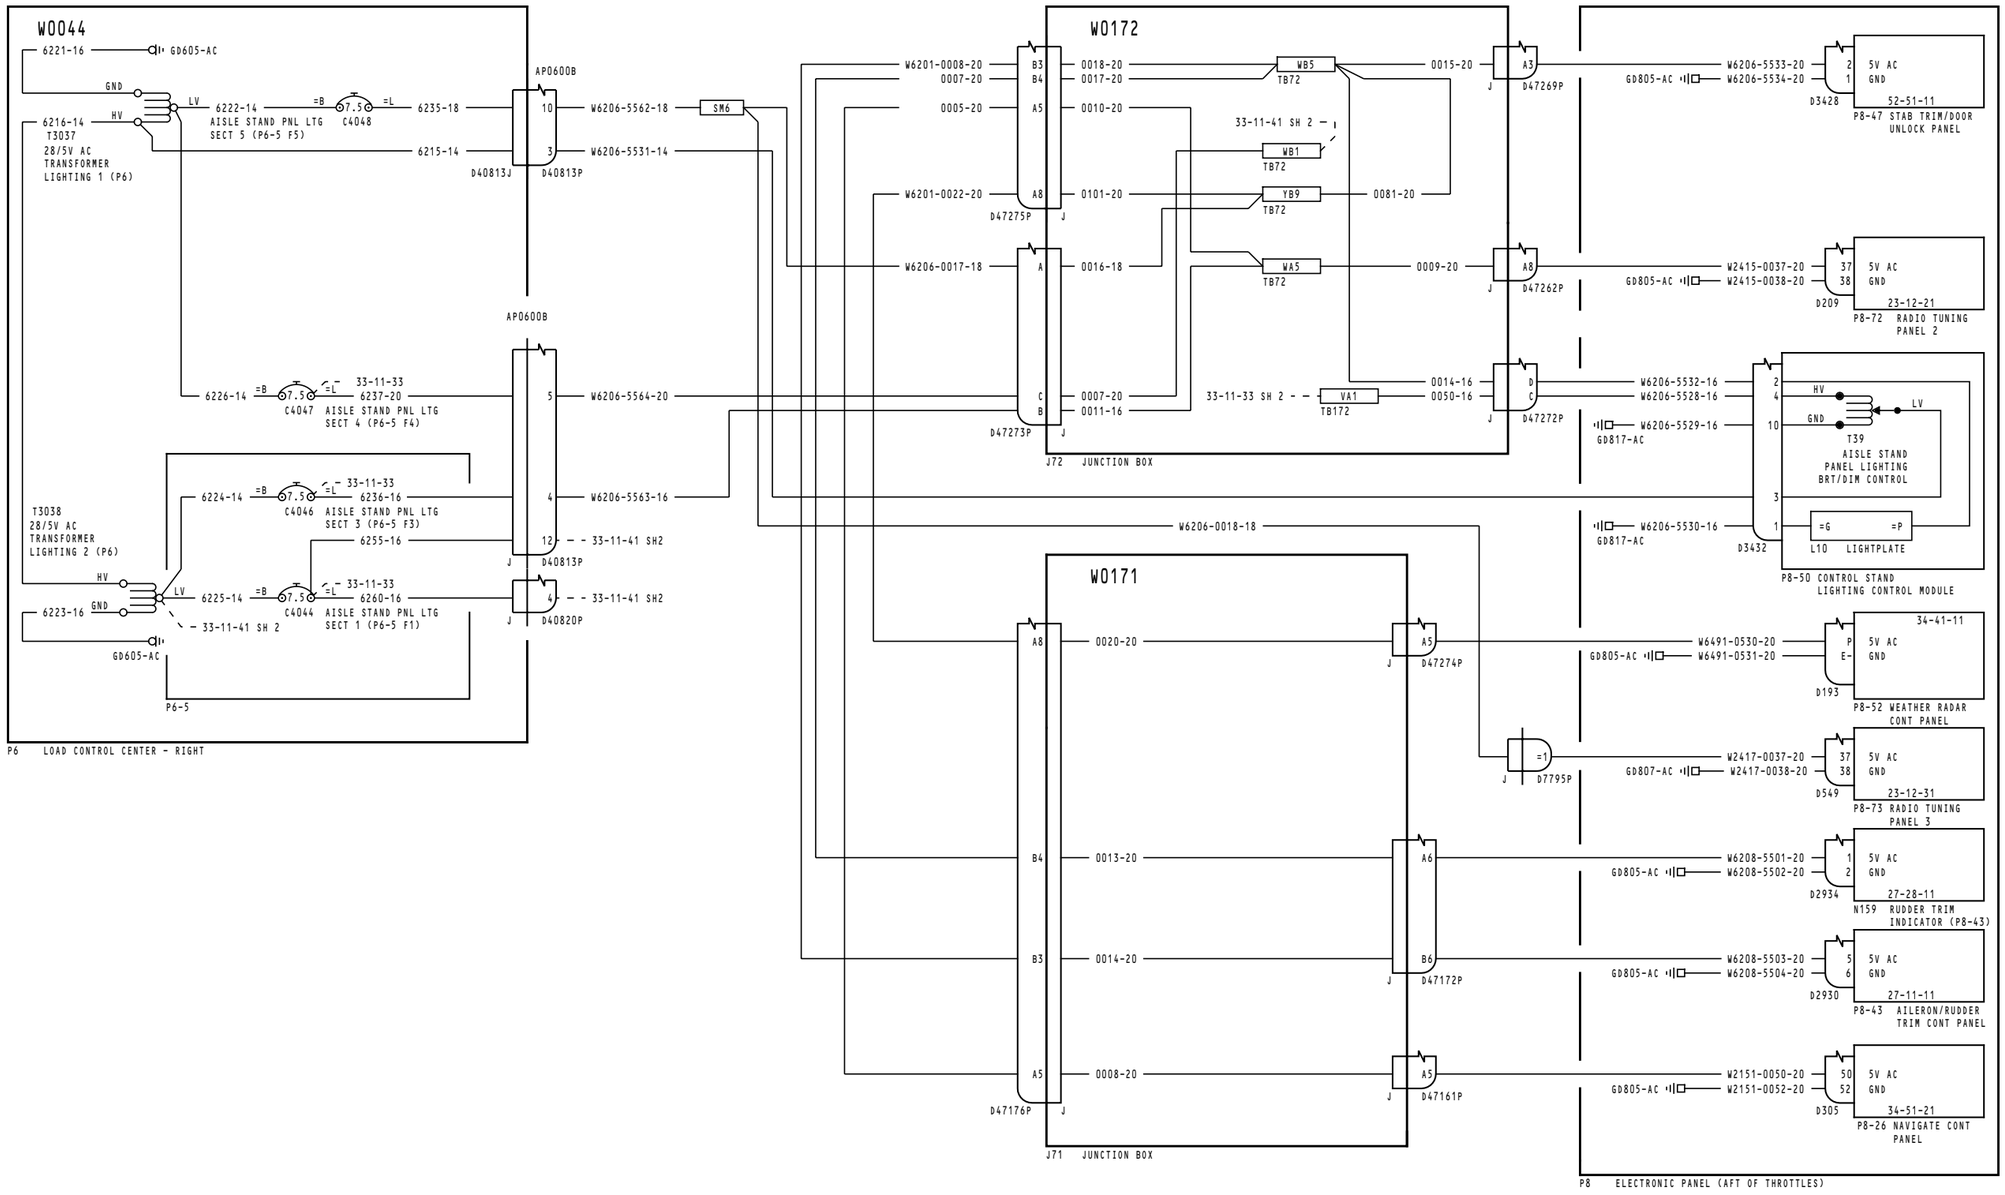


1

**ALL**

**PILOT'S CONTROL STAND LIGHTING**

D280AM1215

**33-11-41**

Page 1
Sheet 1
May 15/2024


**33-11-41**

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
121

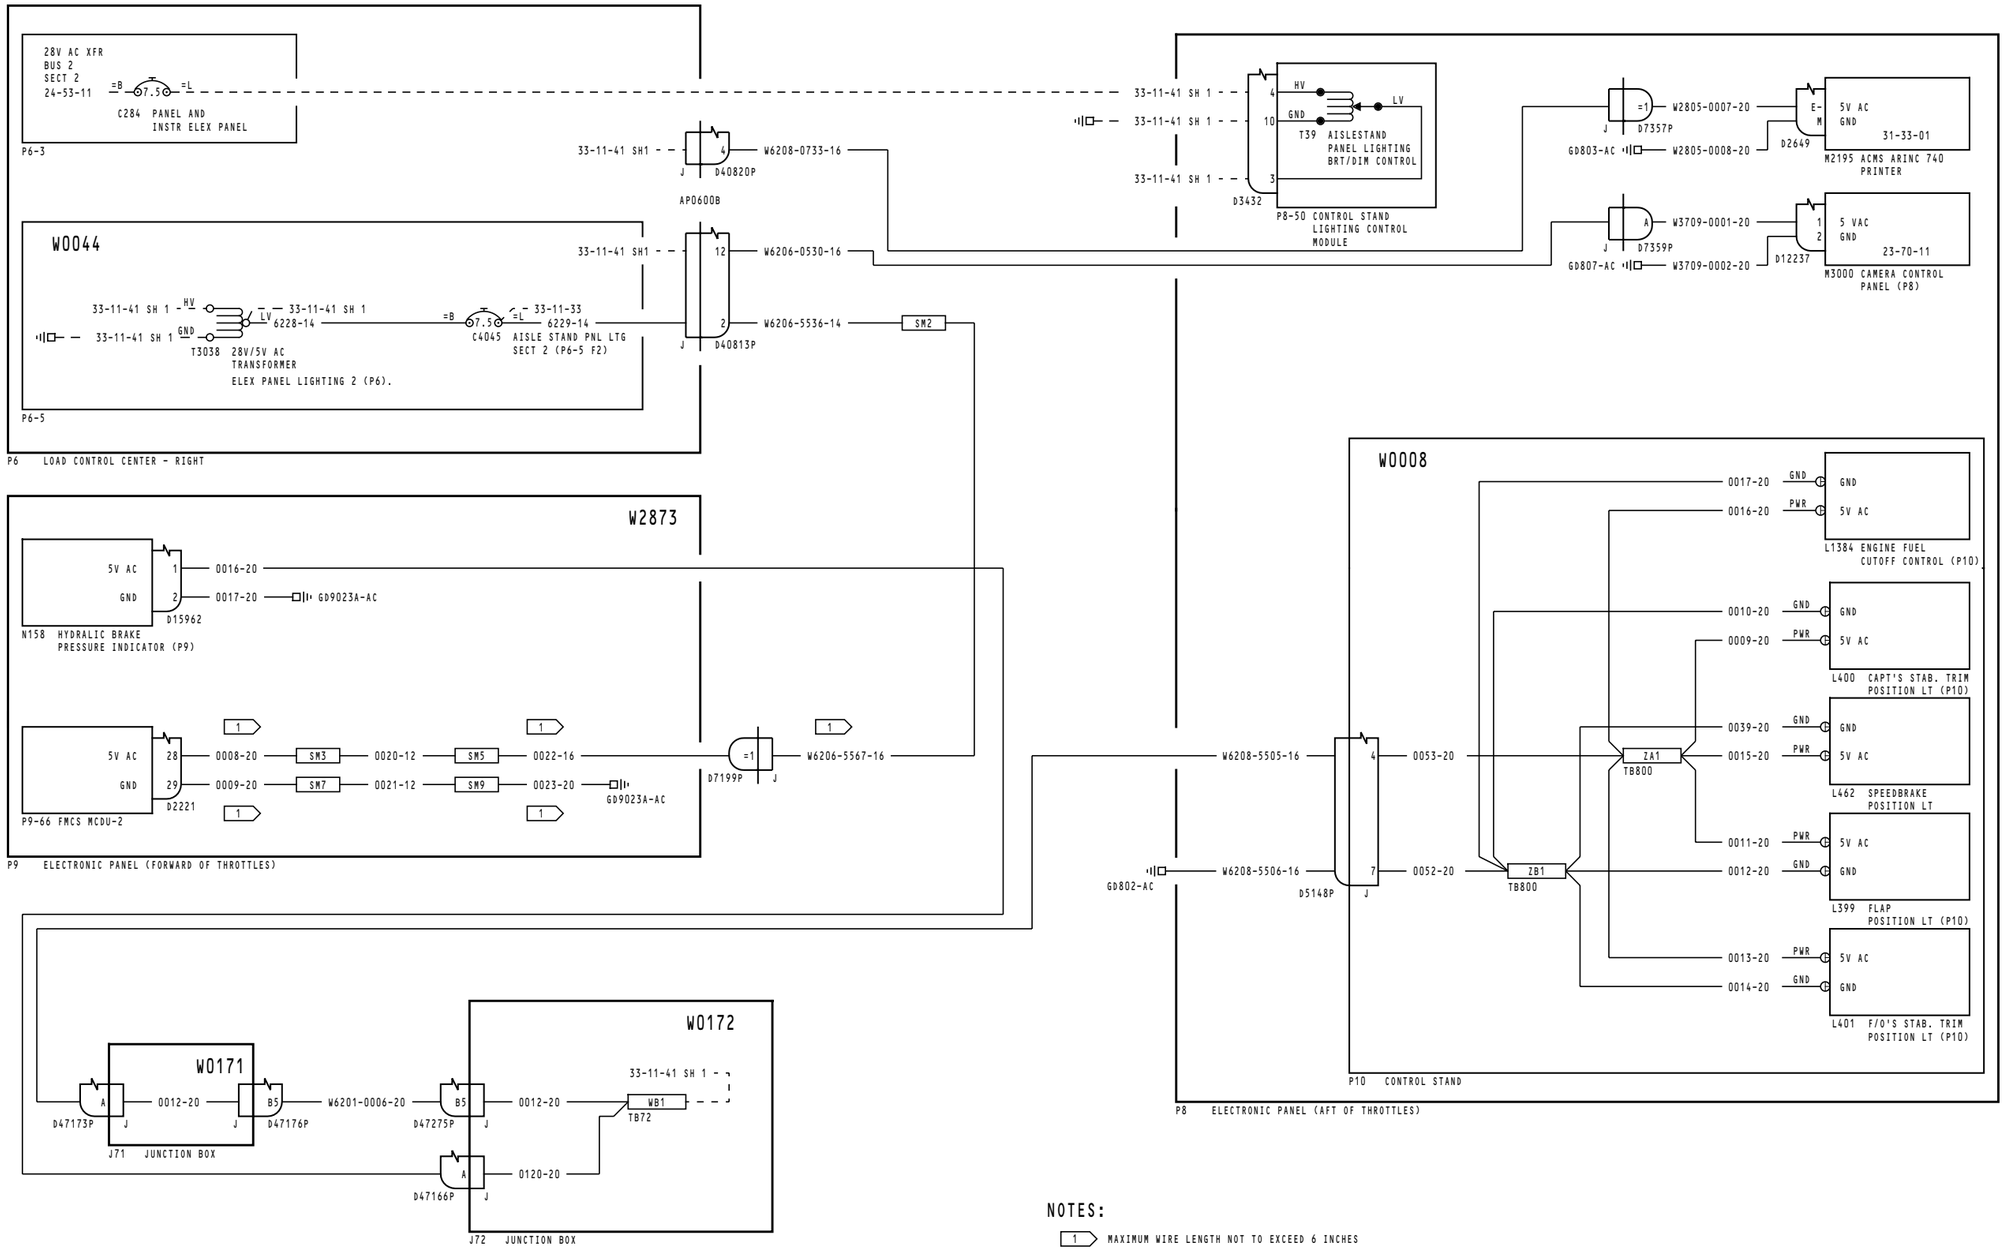


ALL

**PILOT'S CONTROL STAND LIGHTING**

D280AM1215

**33-11-41**

Page 1
Sheet 2
May 15/2024

**33-11-41**


Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C

131

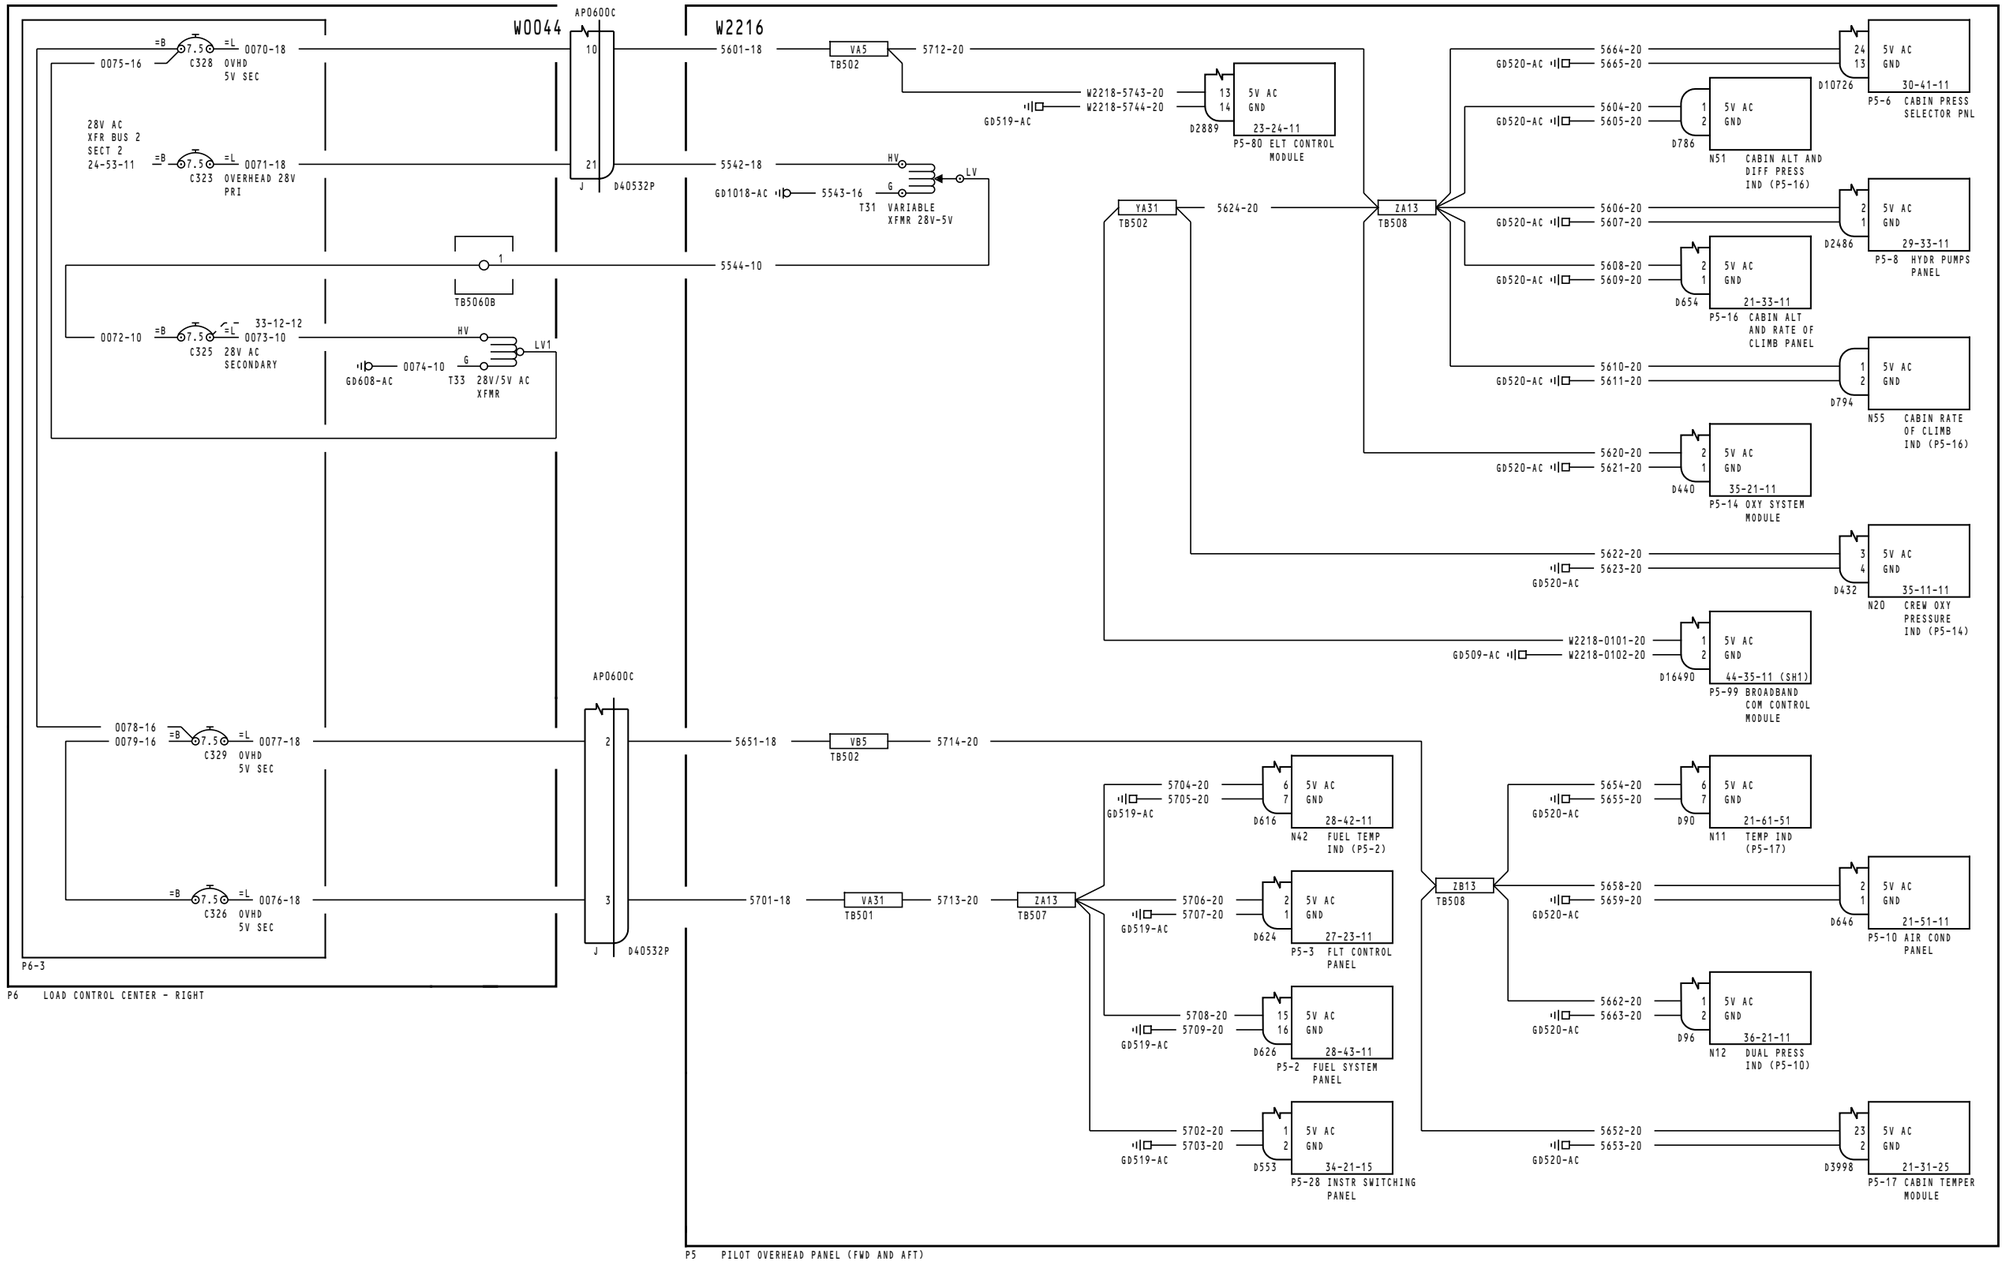




Incorporates SB 44-1020


33-12-11

Page 1.1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

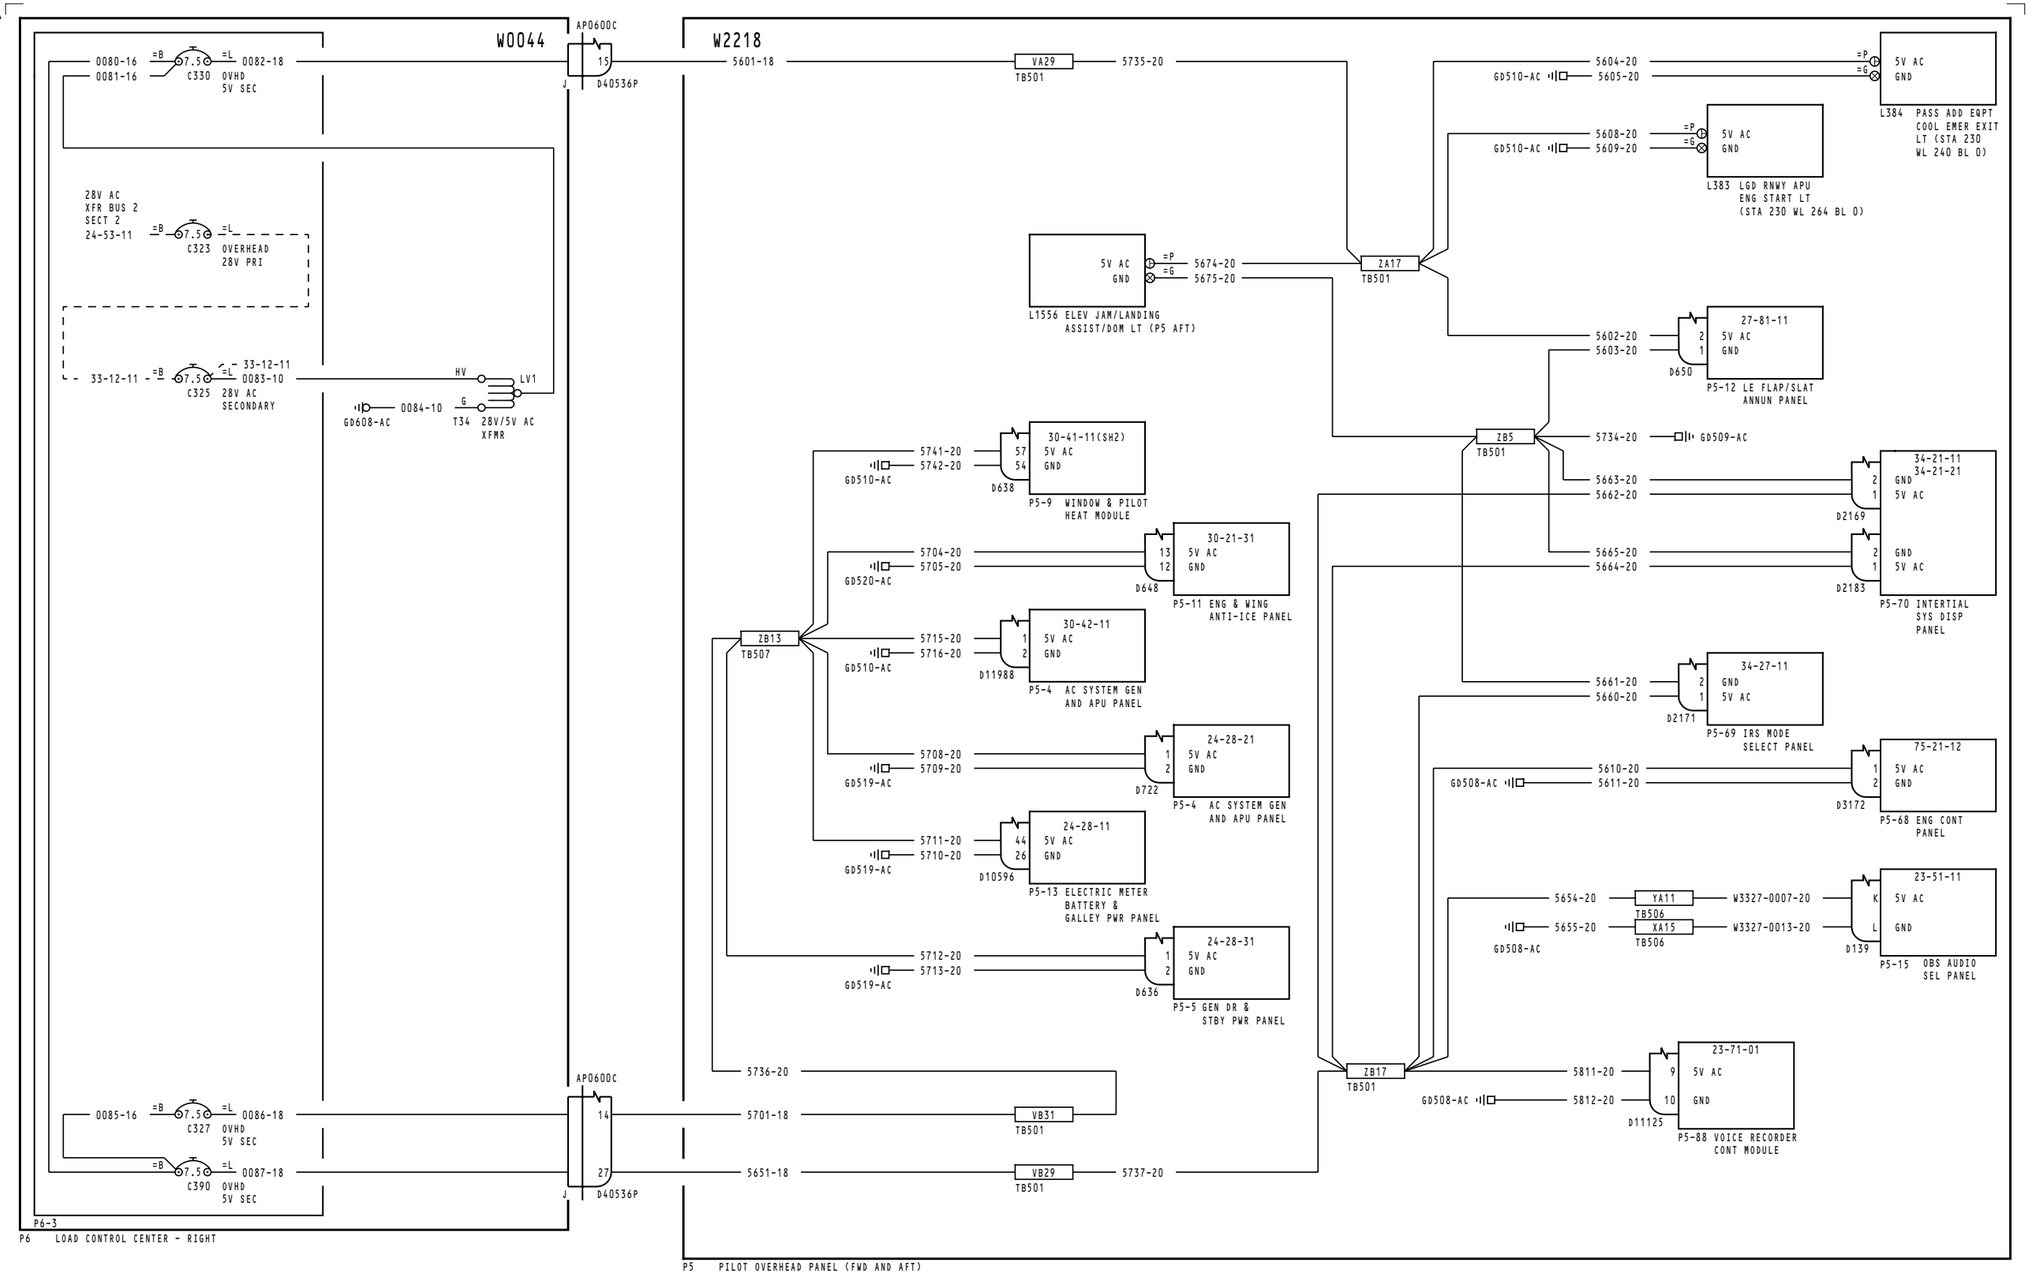




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-12-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL



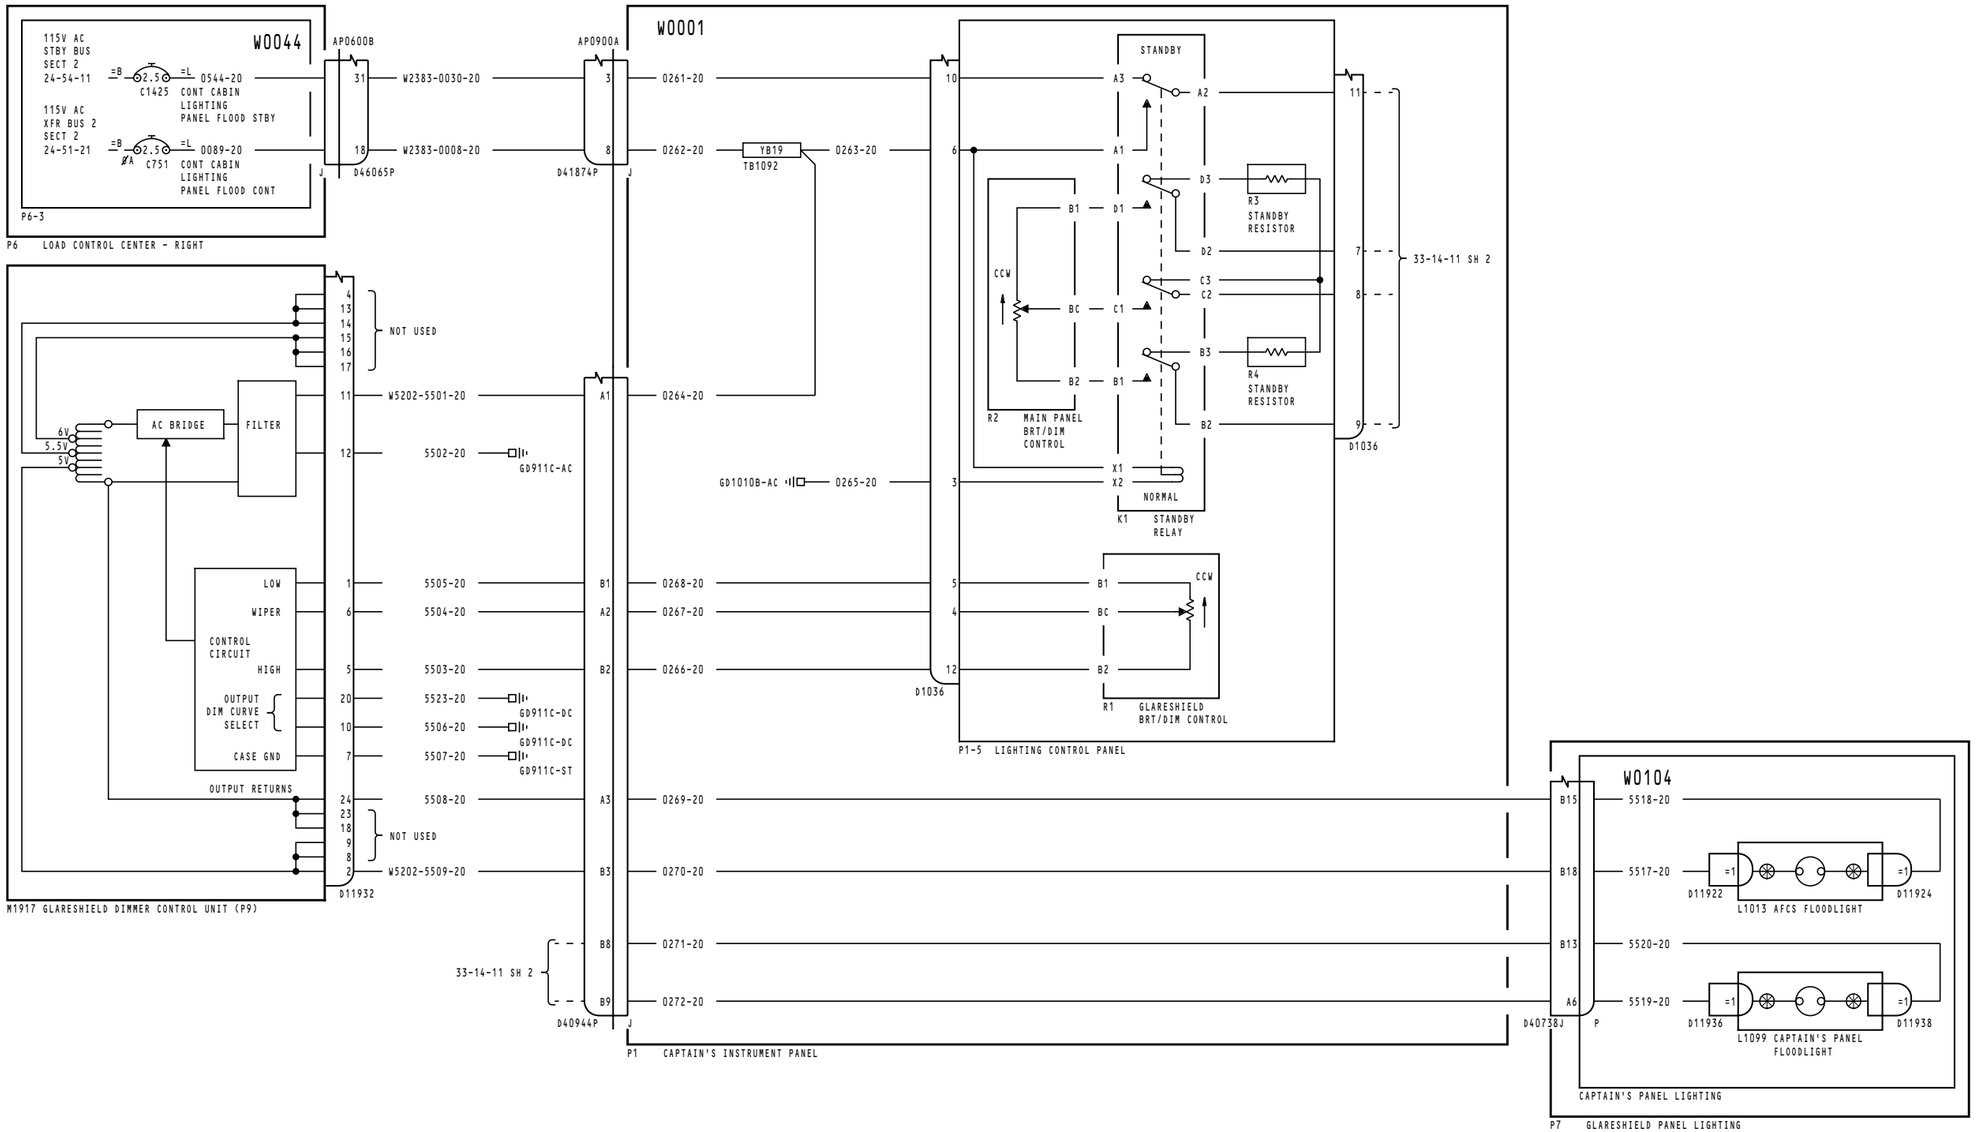


USE BMS 13-58 OR EQUIVALENT WIRE.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-14-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

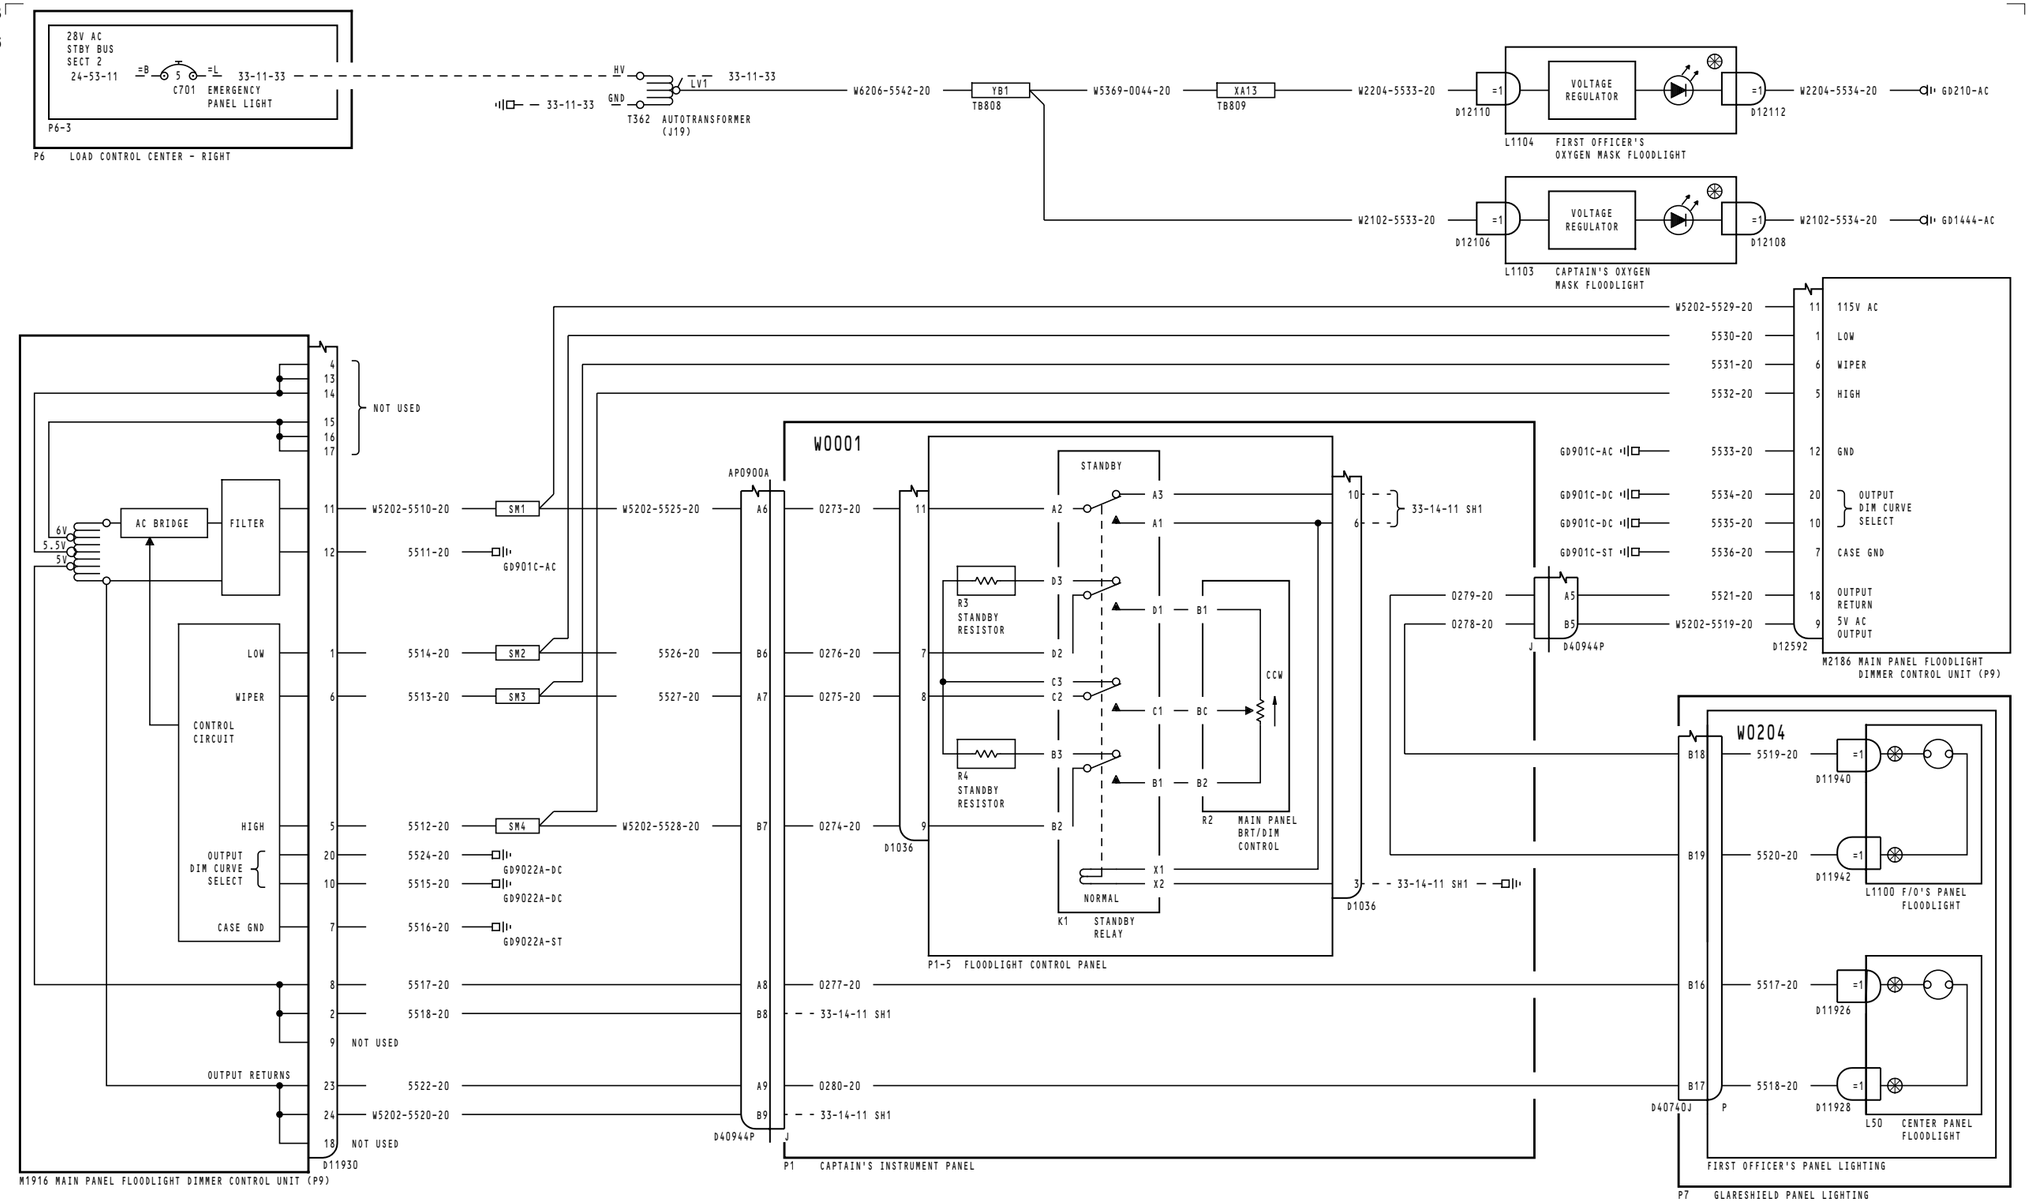


USE BMS 13-58 OR EQUIVALENT WIRE.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-14-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

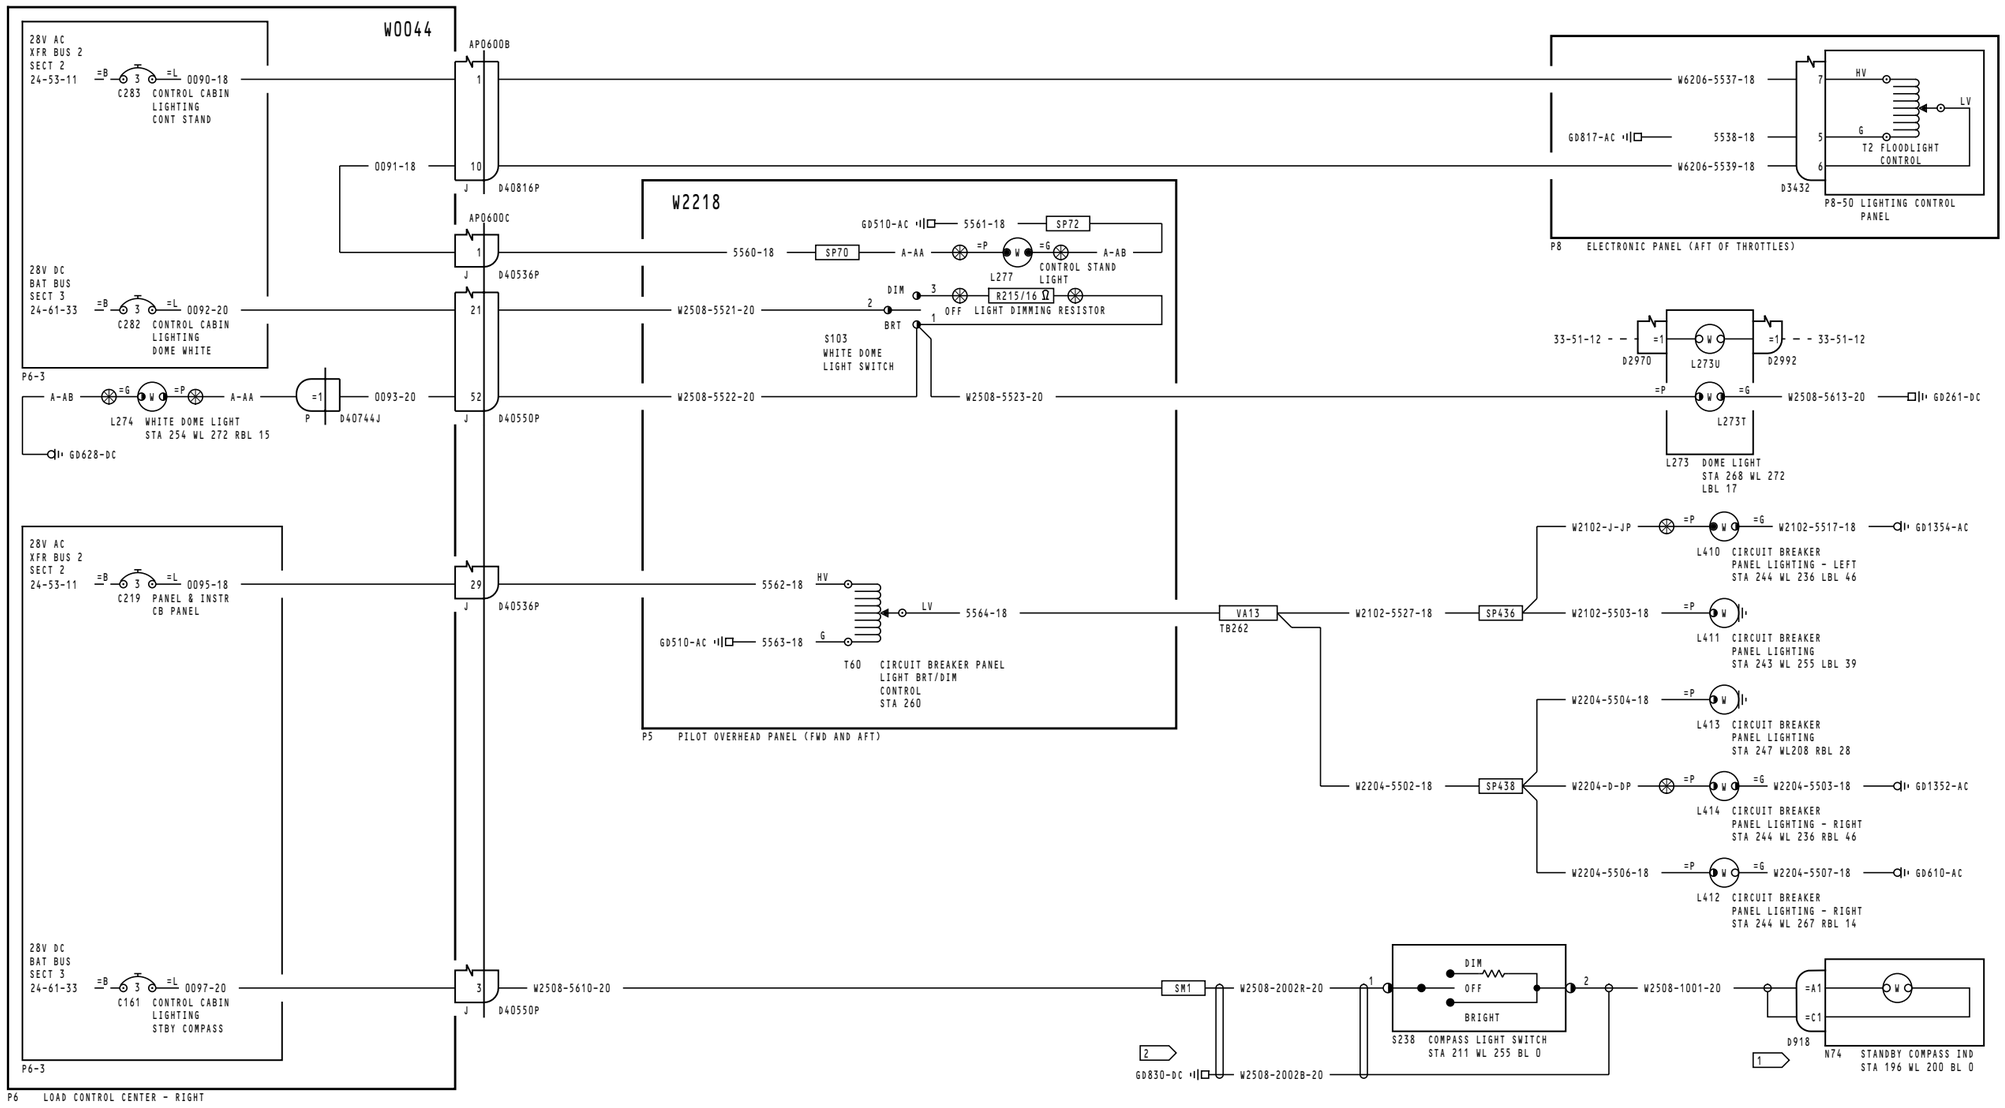


NOTES:

1. D918 IS COAXIAL PLUG
2. WIRES IN CABLE MAY BE UN-TWISTED FOR NO MORE 12 INCHES TO REACH SM1 AND/OR GD830.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-14-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

27

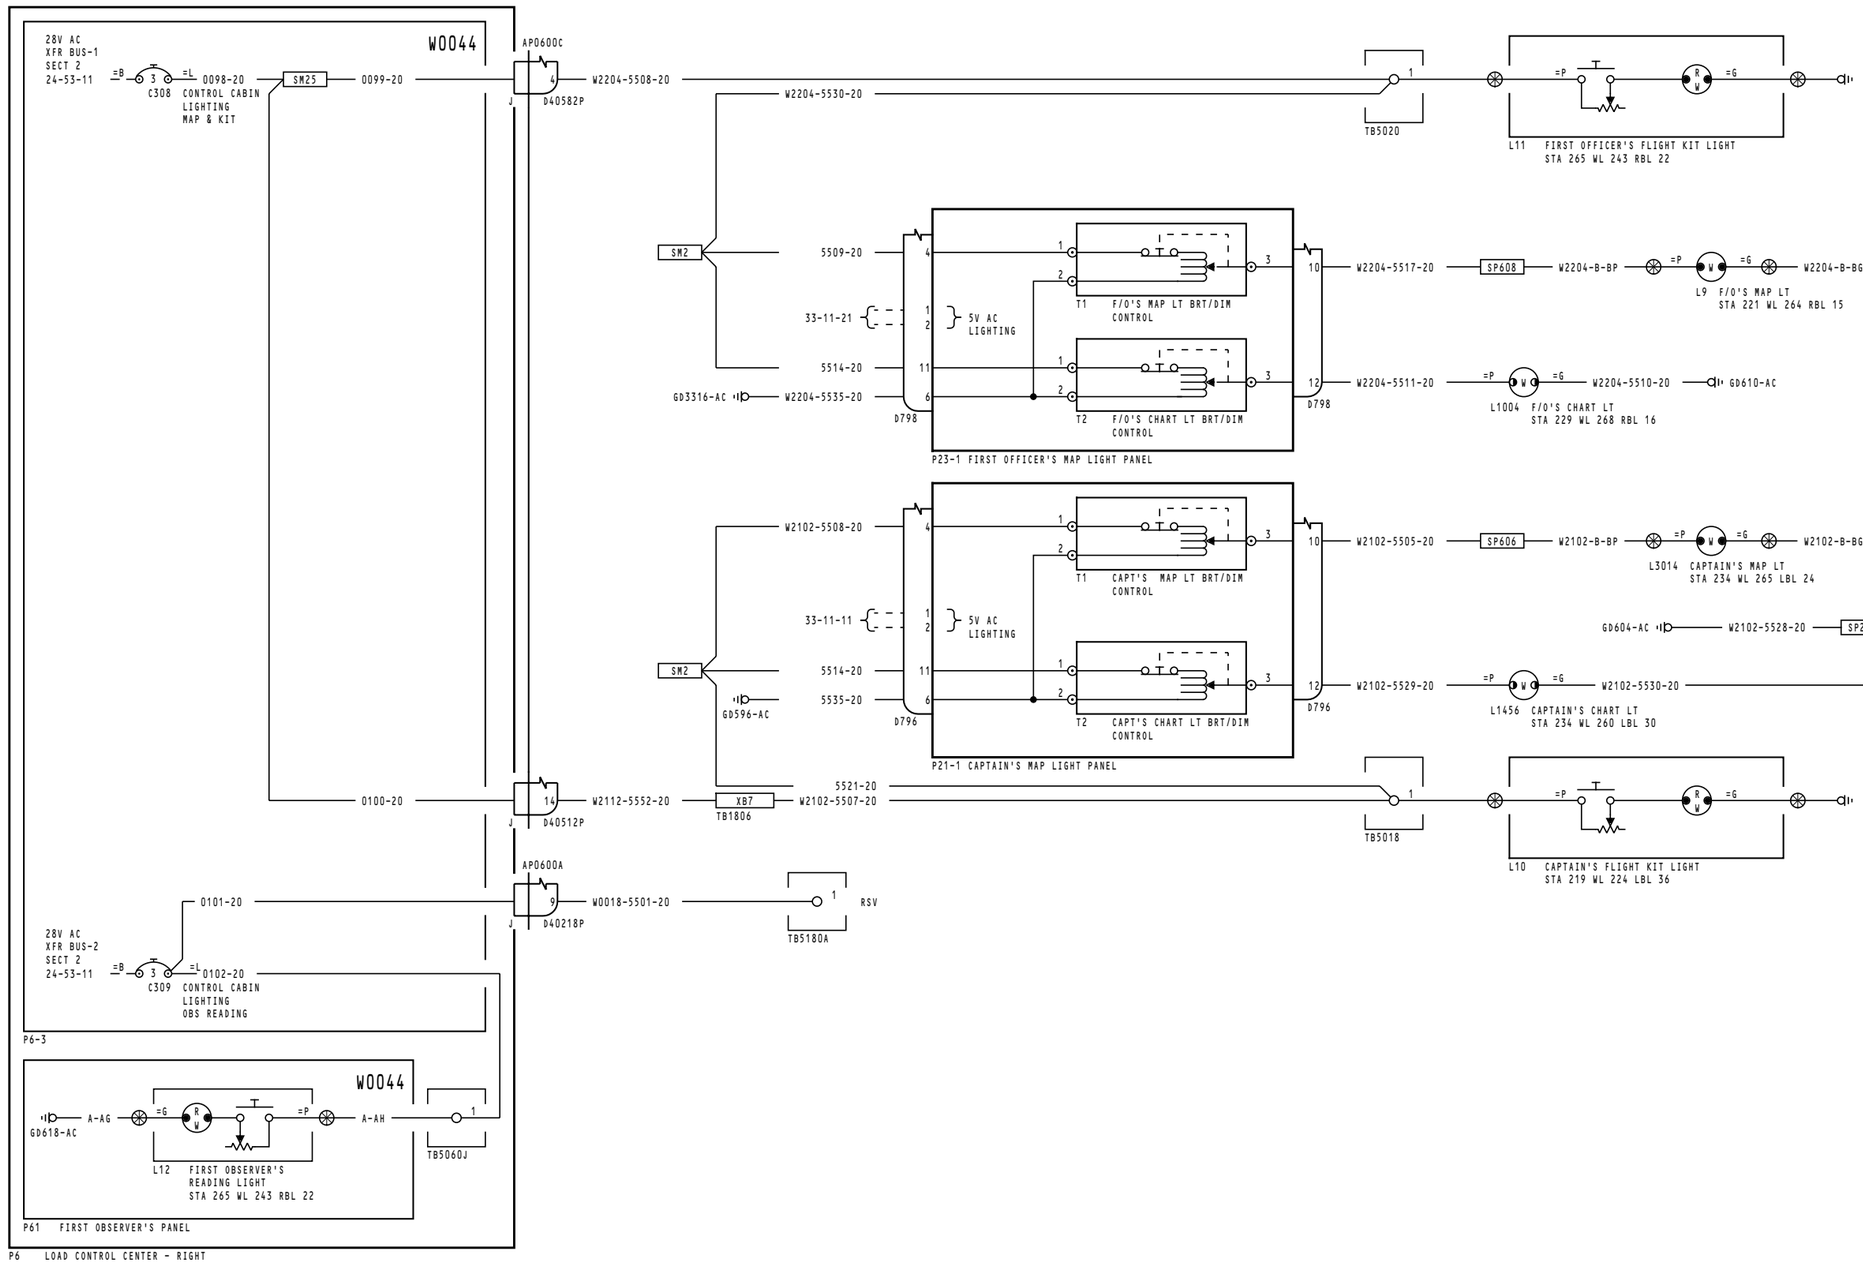




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-17-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
17

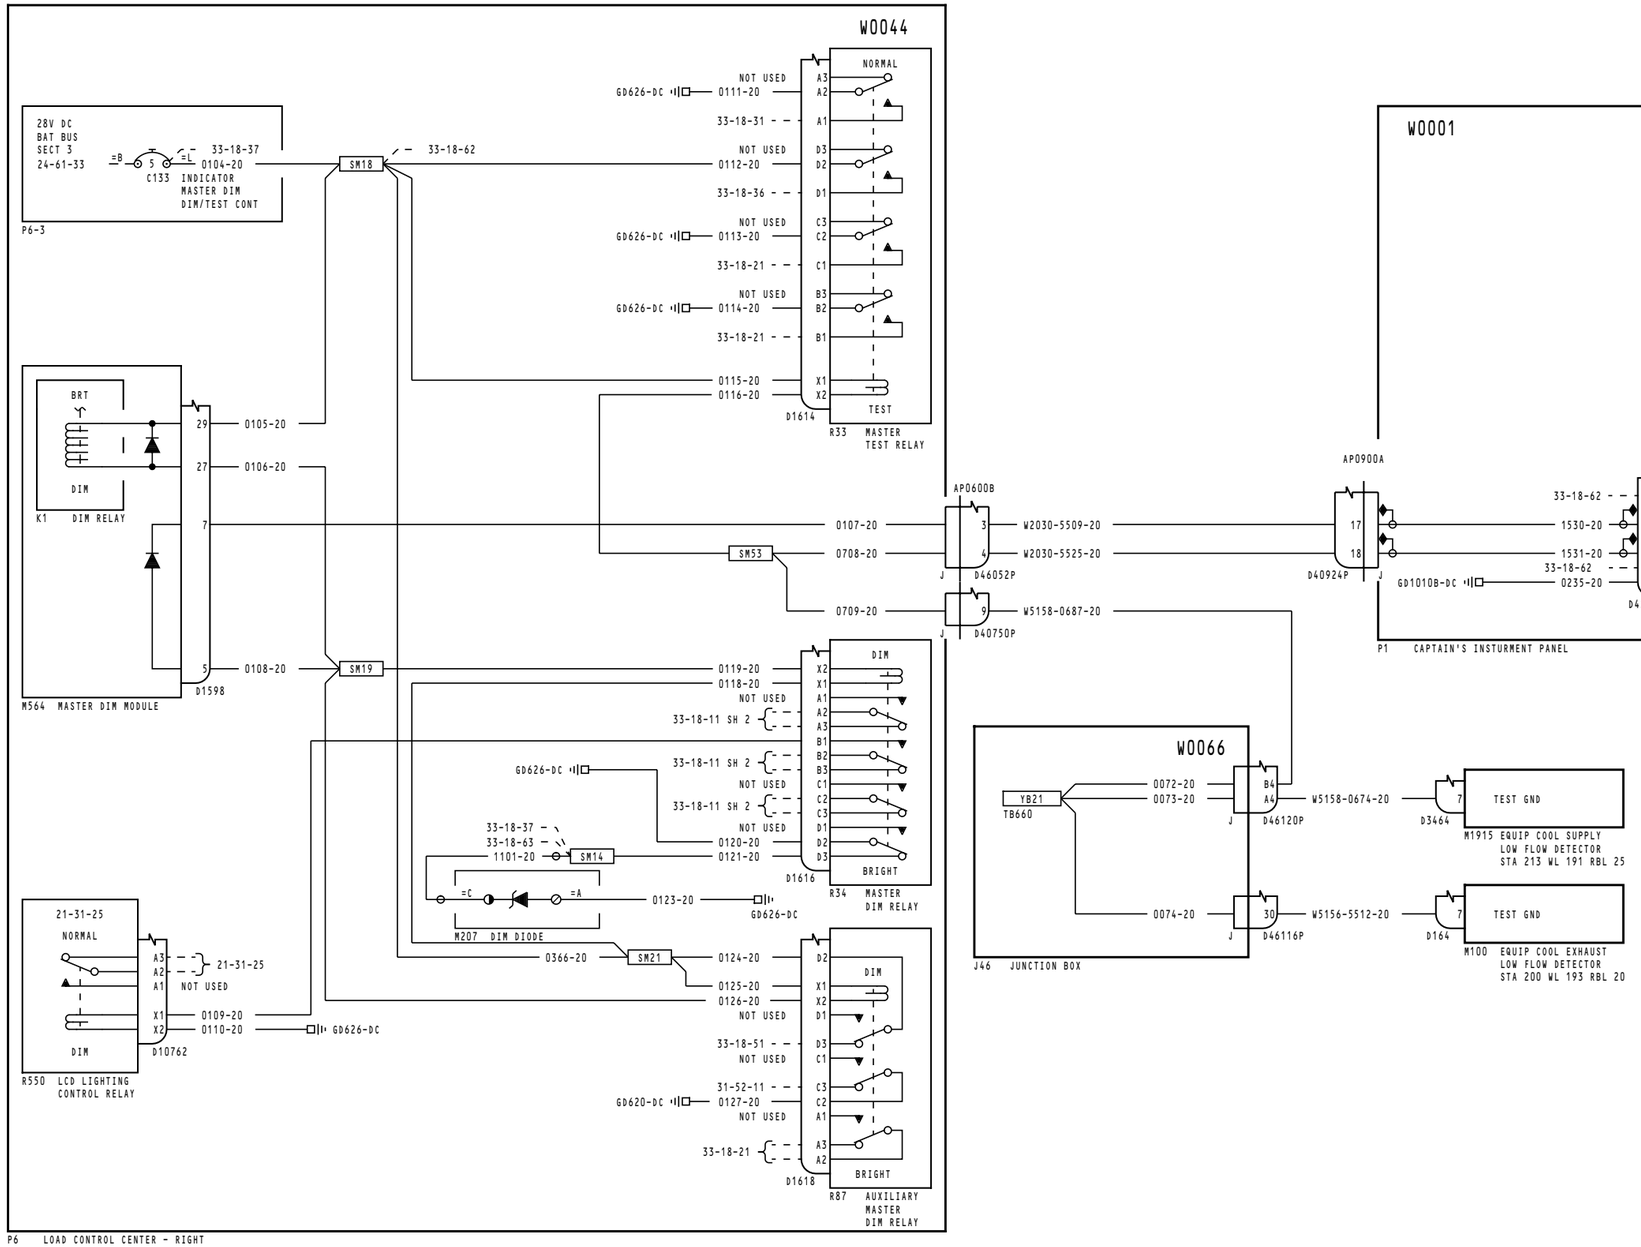





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
14

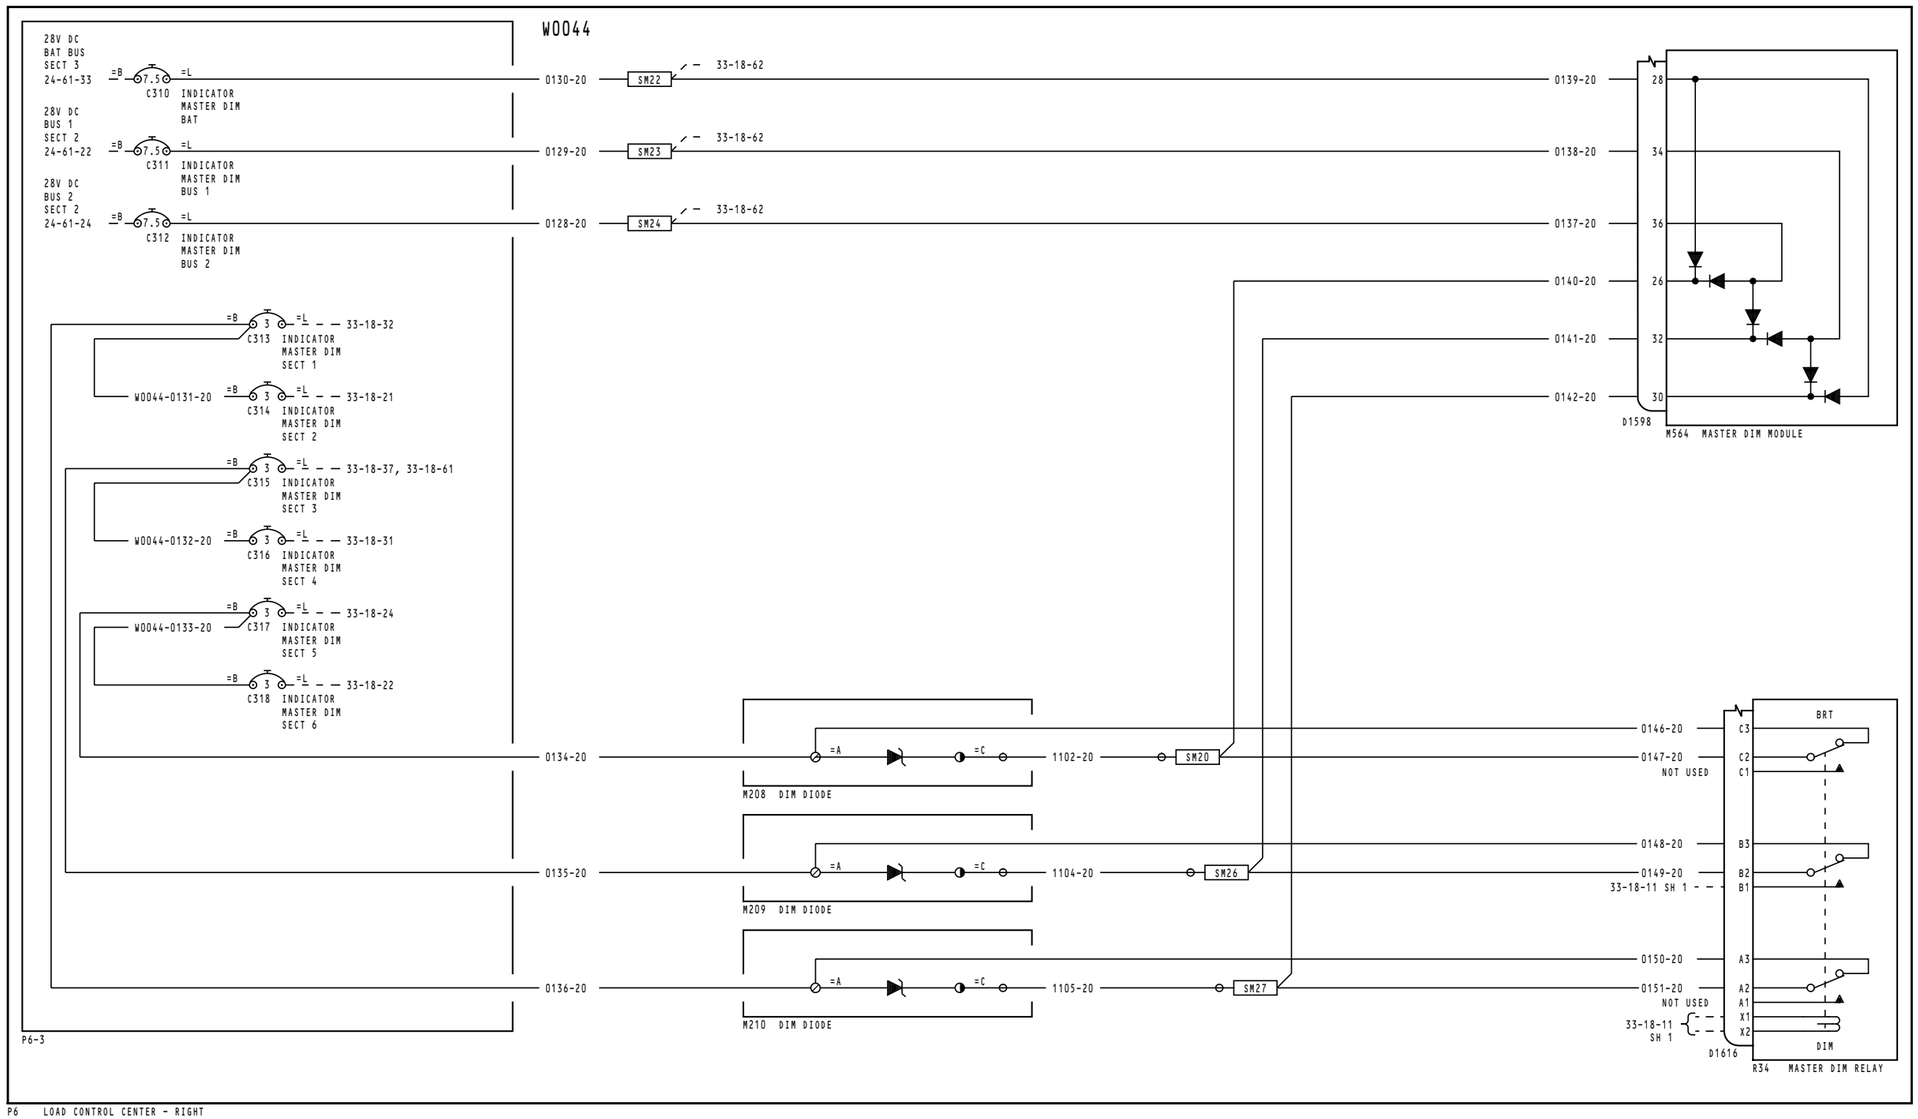





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

47

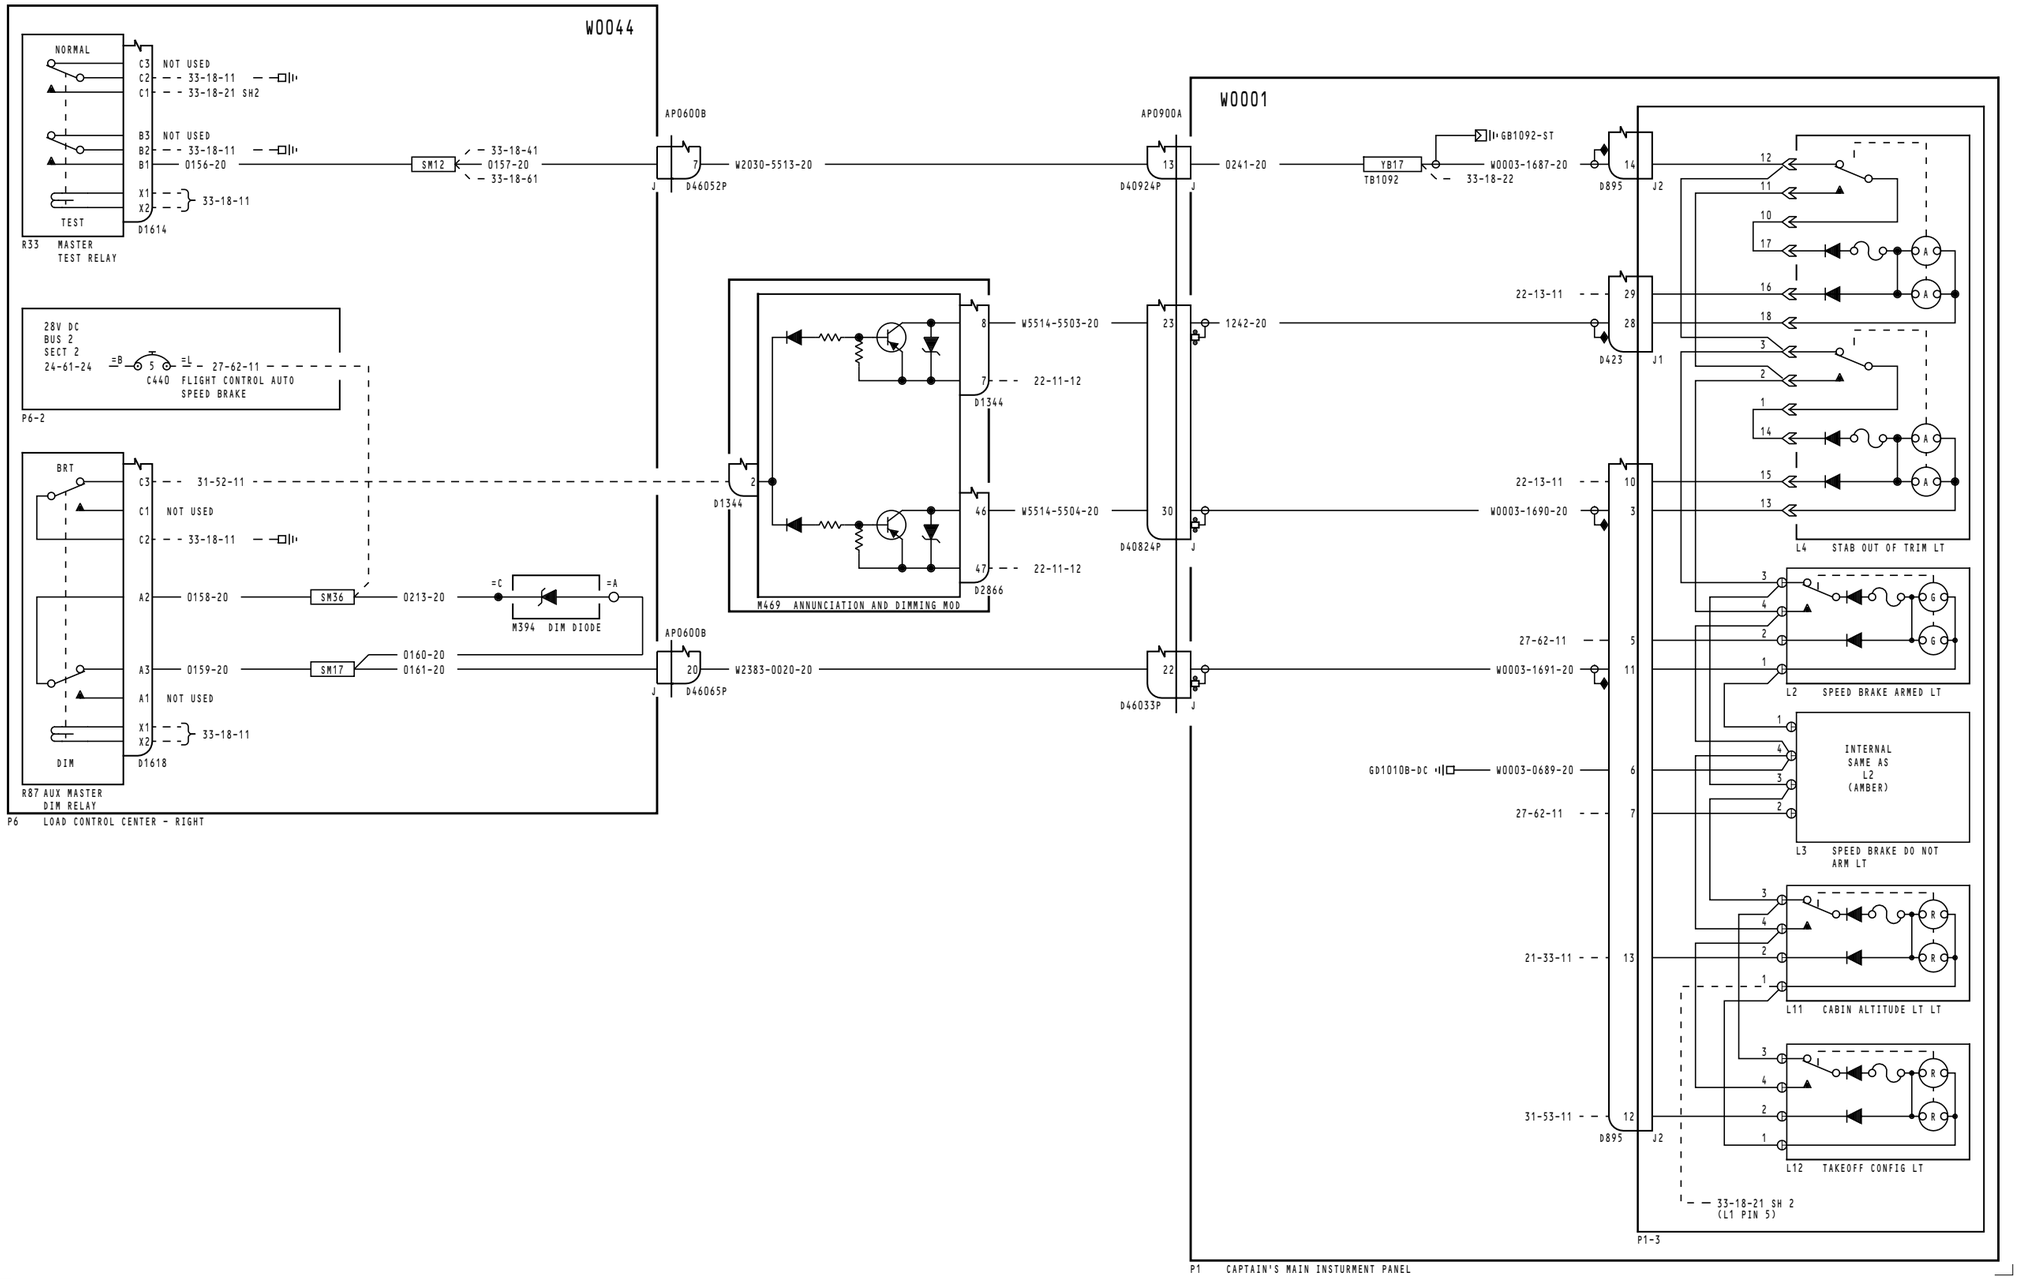



| | |
|---|---|
| **ALL** | **MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, CAPT** |
| | D280AM1215 |



**33-18-21**

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

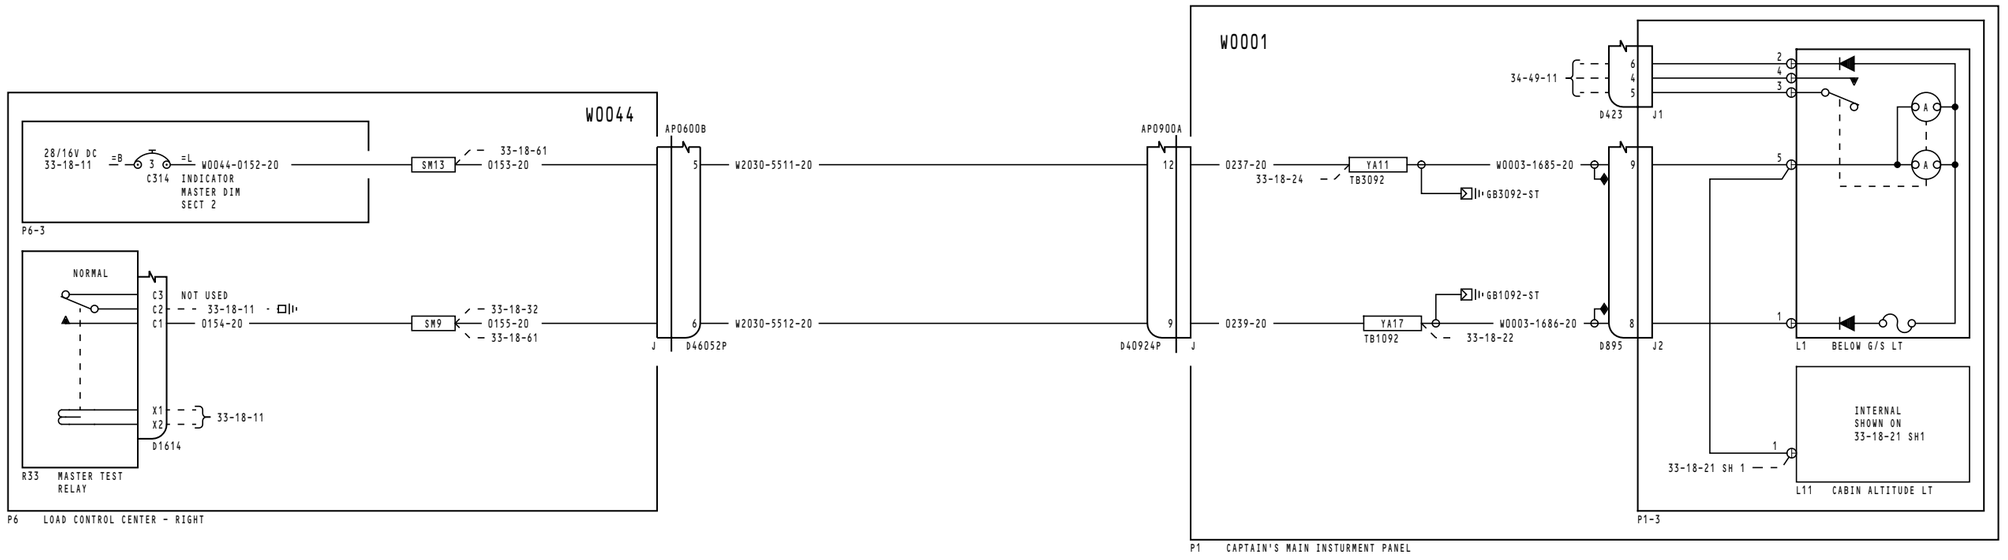





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
120

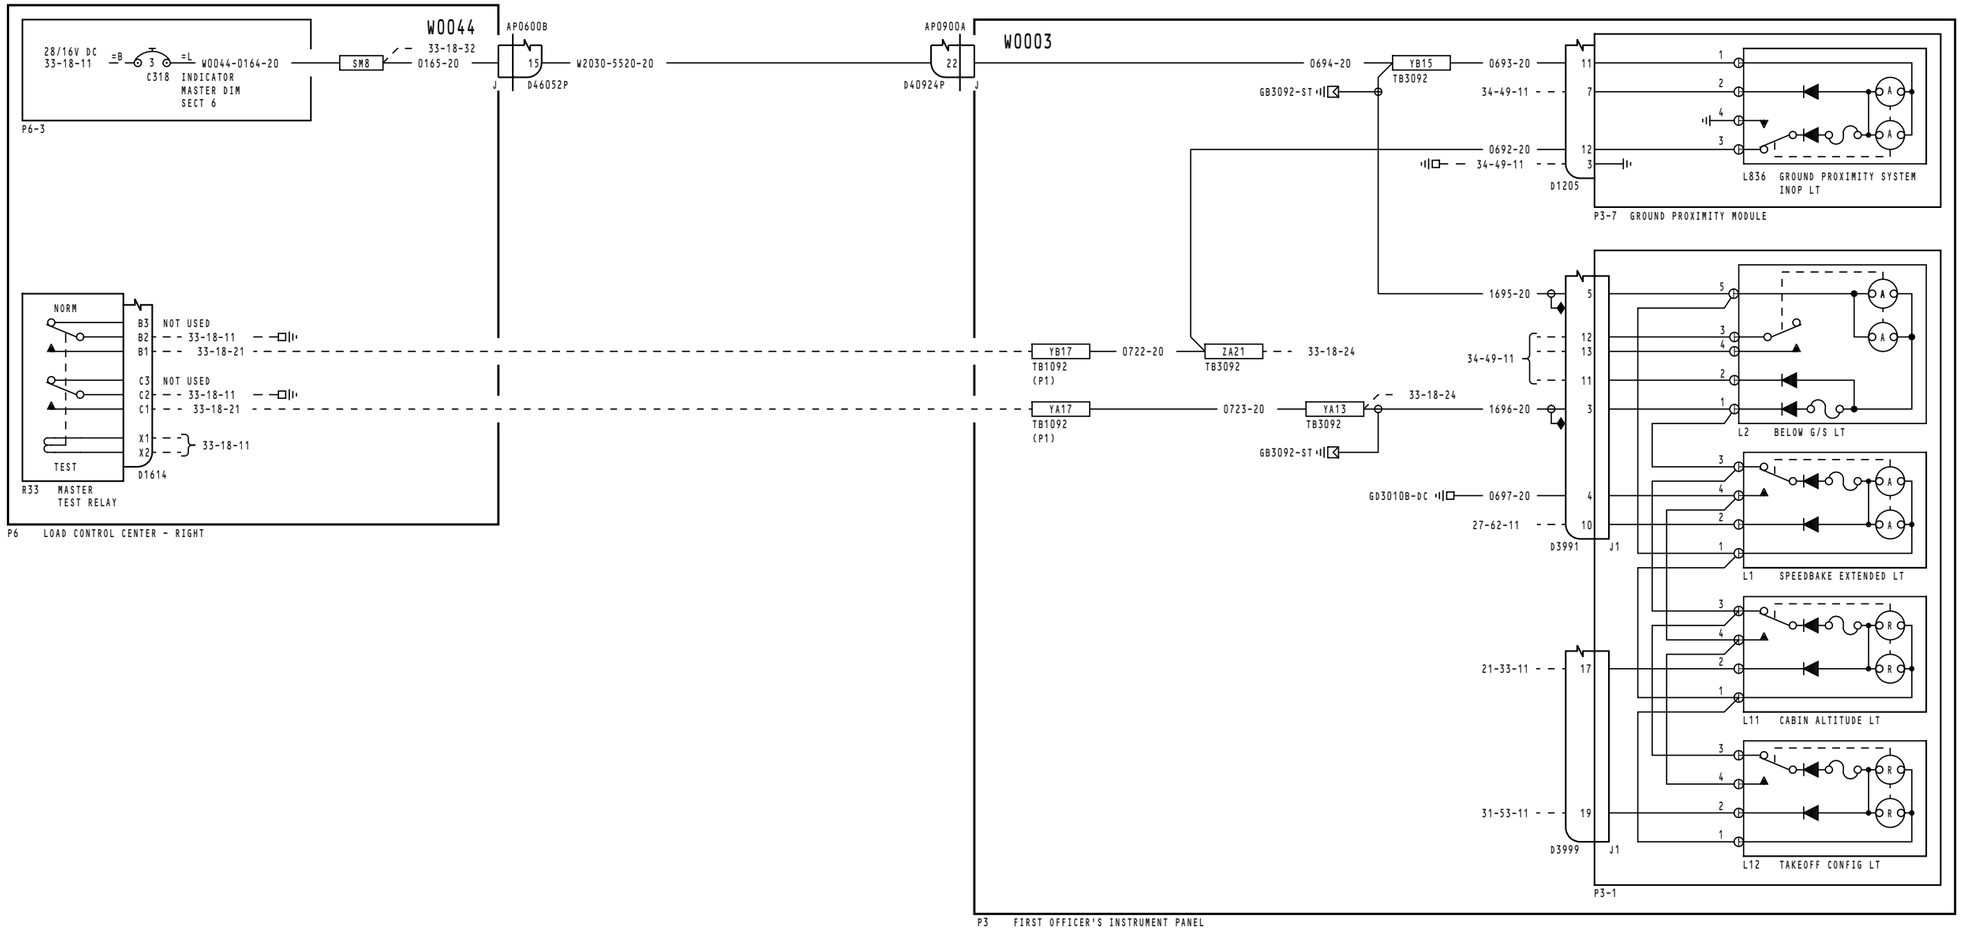




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-22

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
3

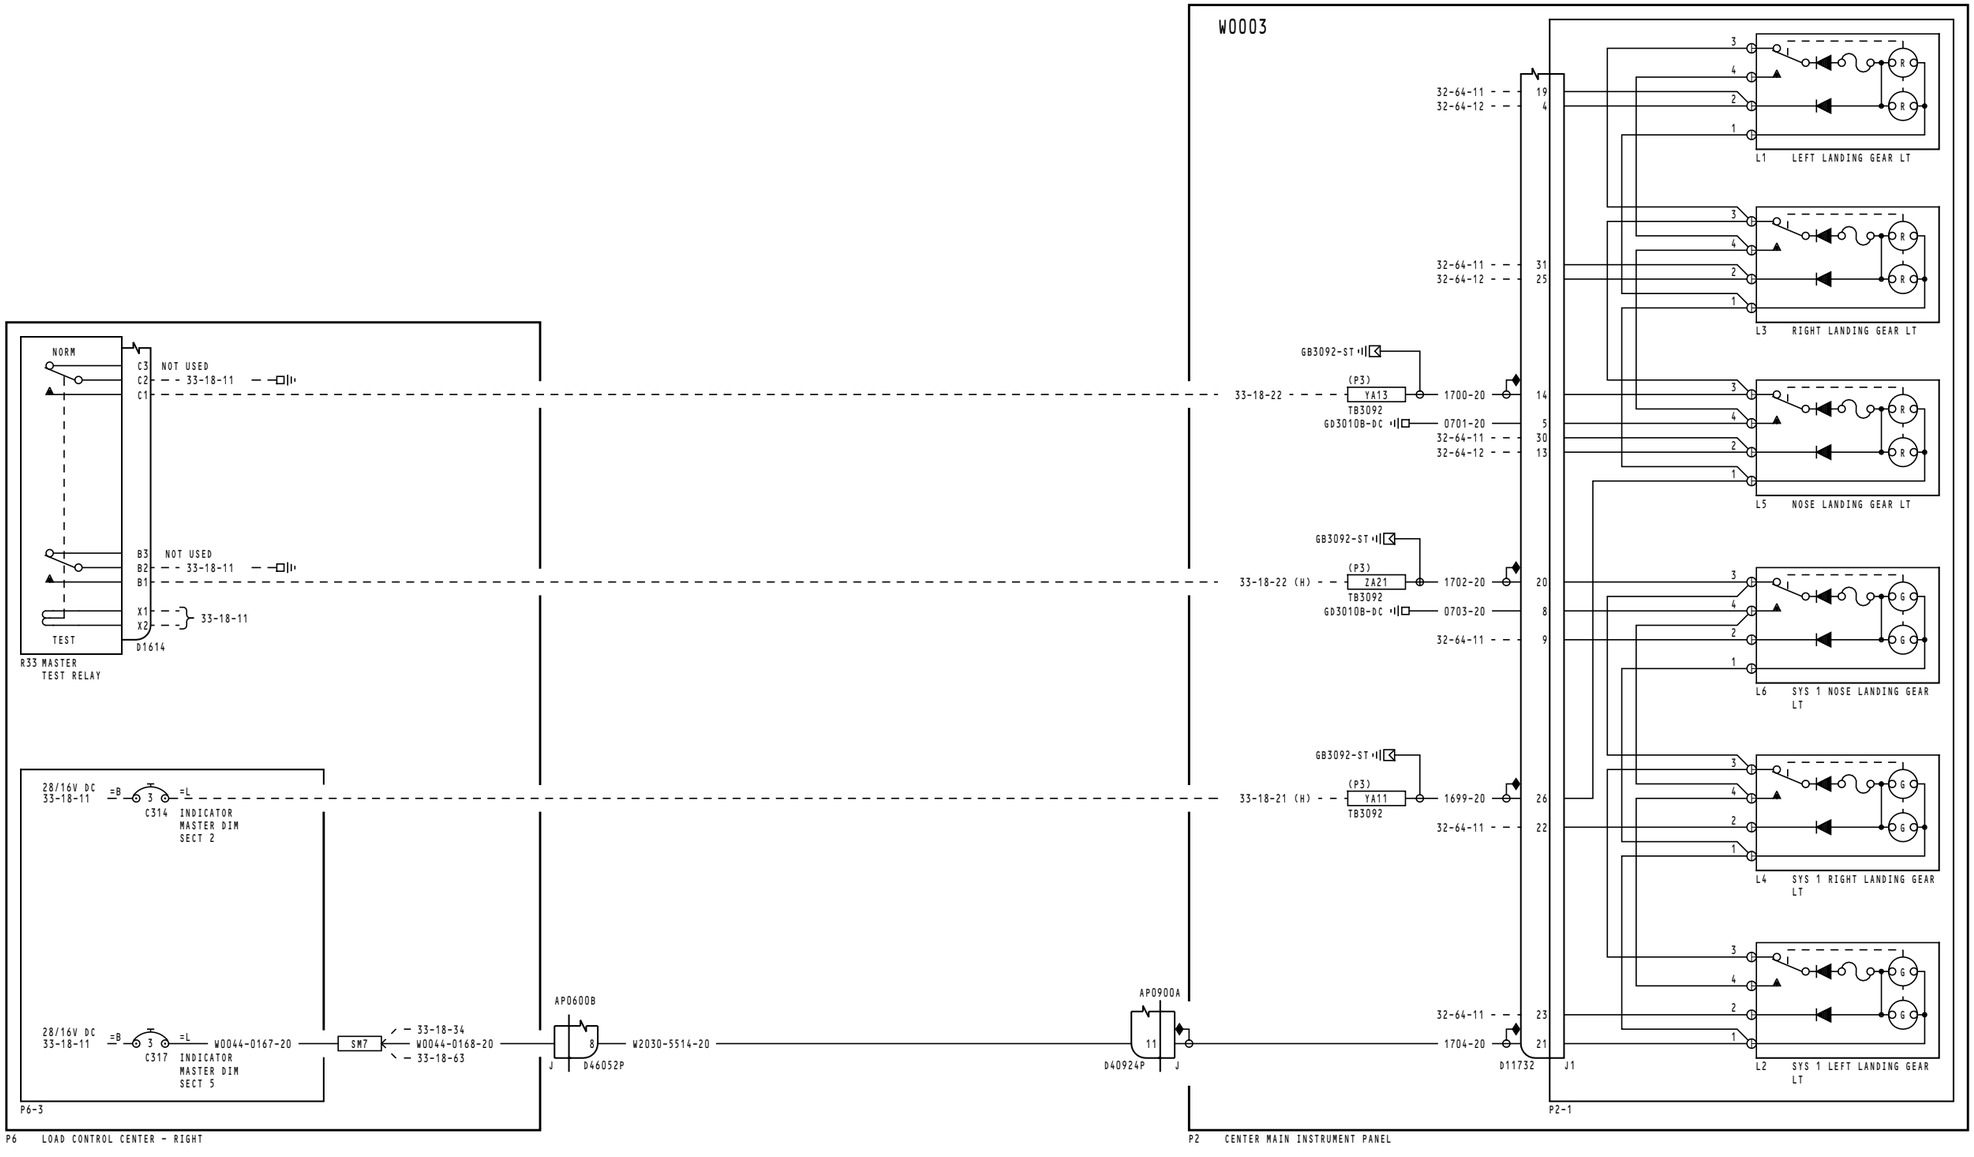


ALL

**MASTER DIM & TEST SYSTEM - MAIN INSTRUMENT PANEL, CENTER RIGHT**

D280AM1215



ECCN 9E991 BOEING PROPRIETARY - See title page for details


**33-18-24**

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
42

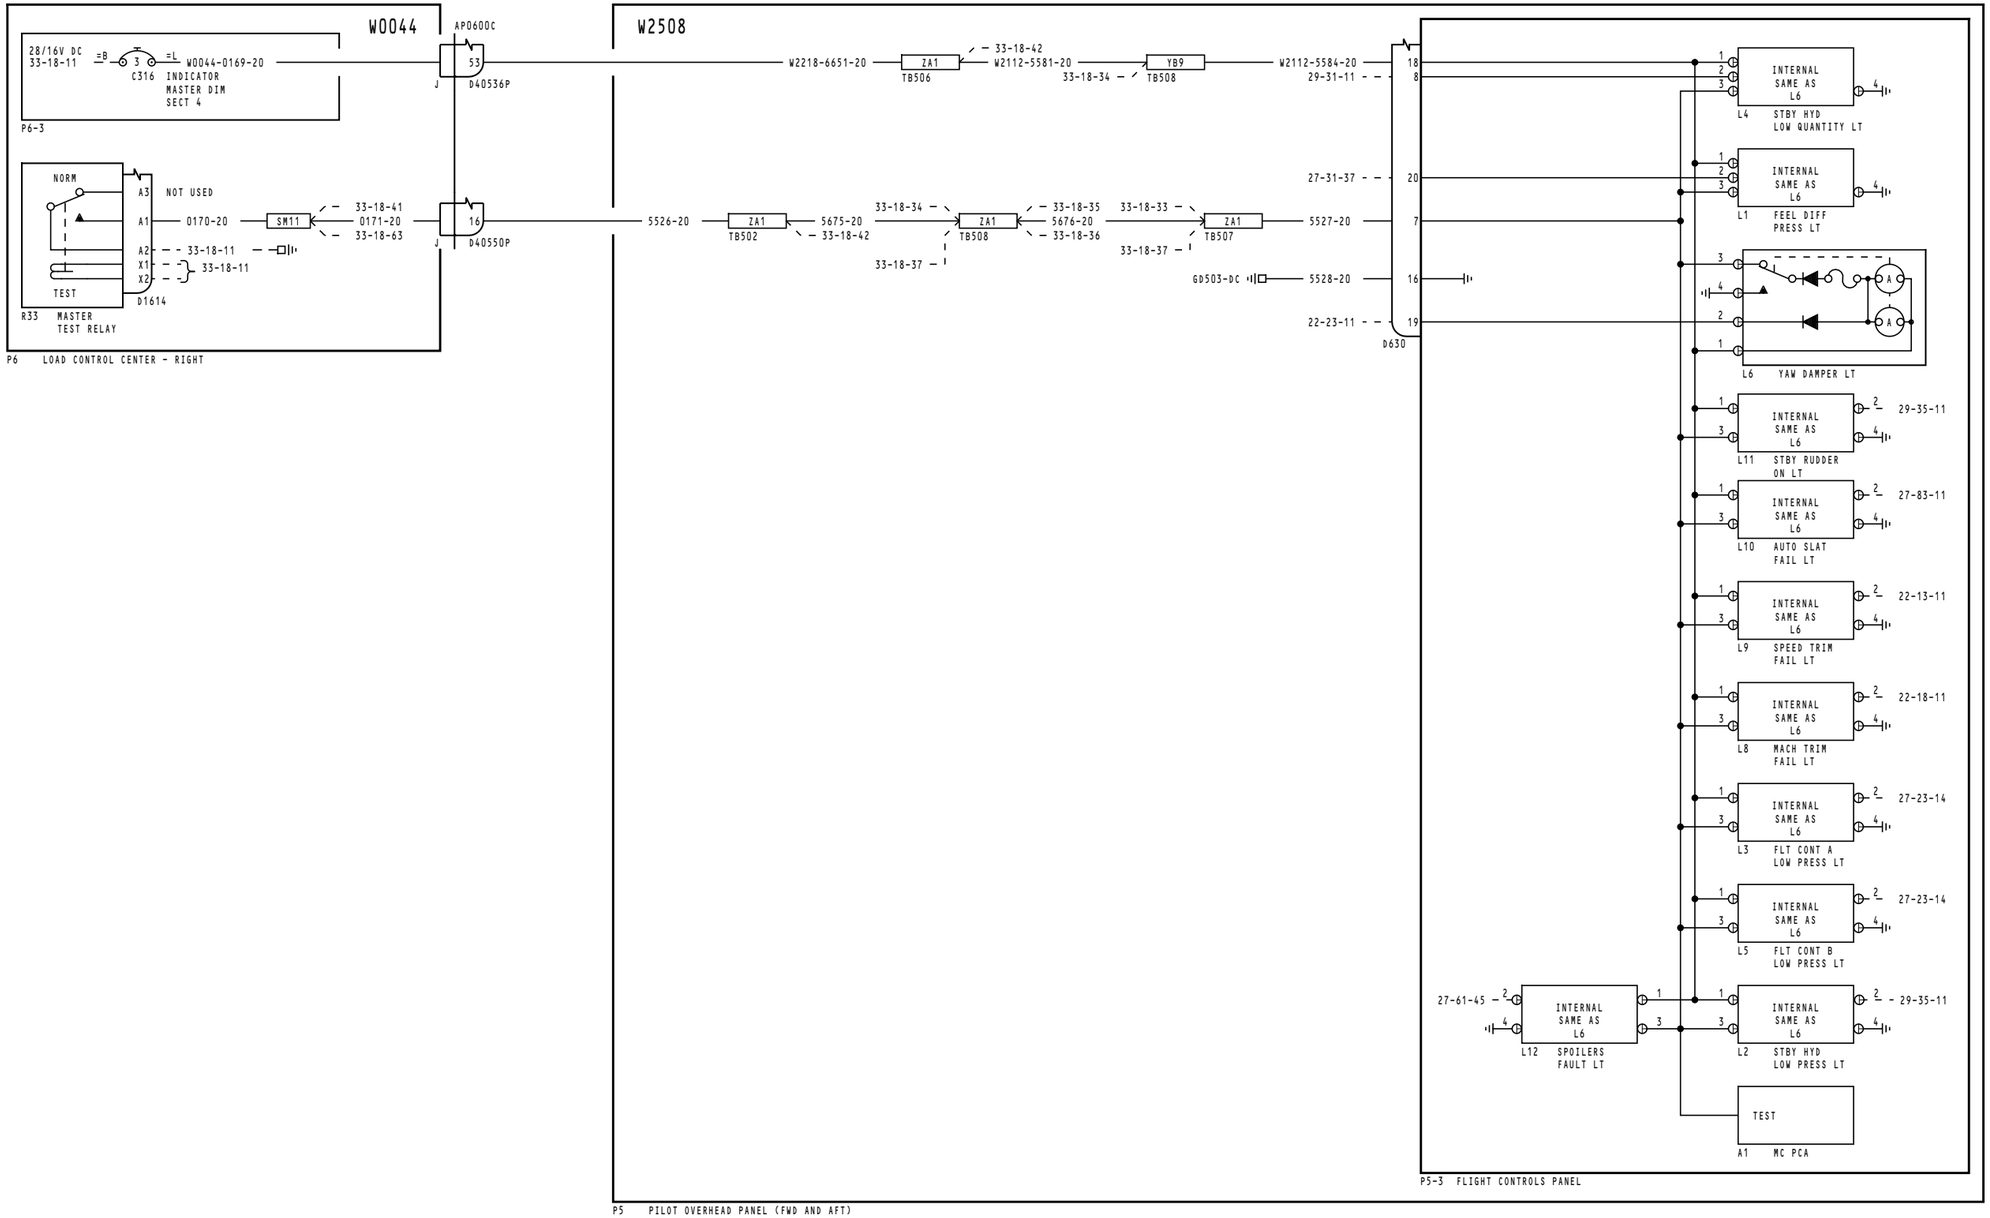





33-18-31

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

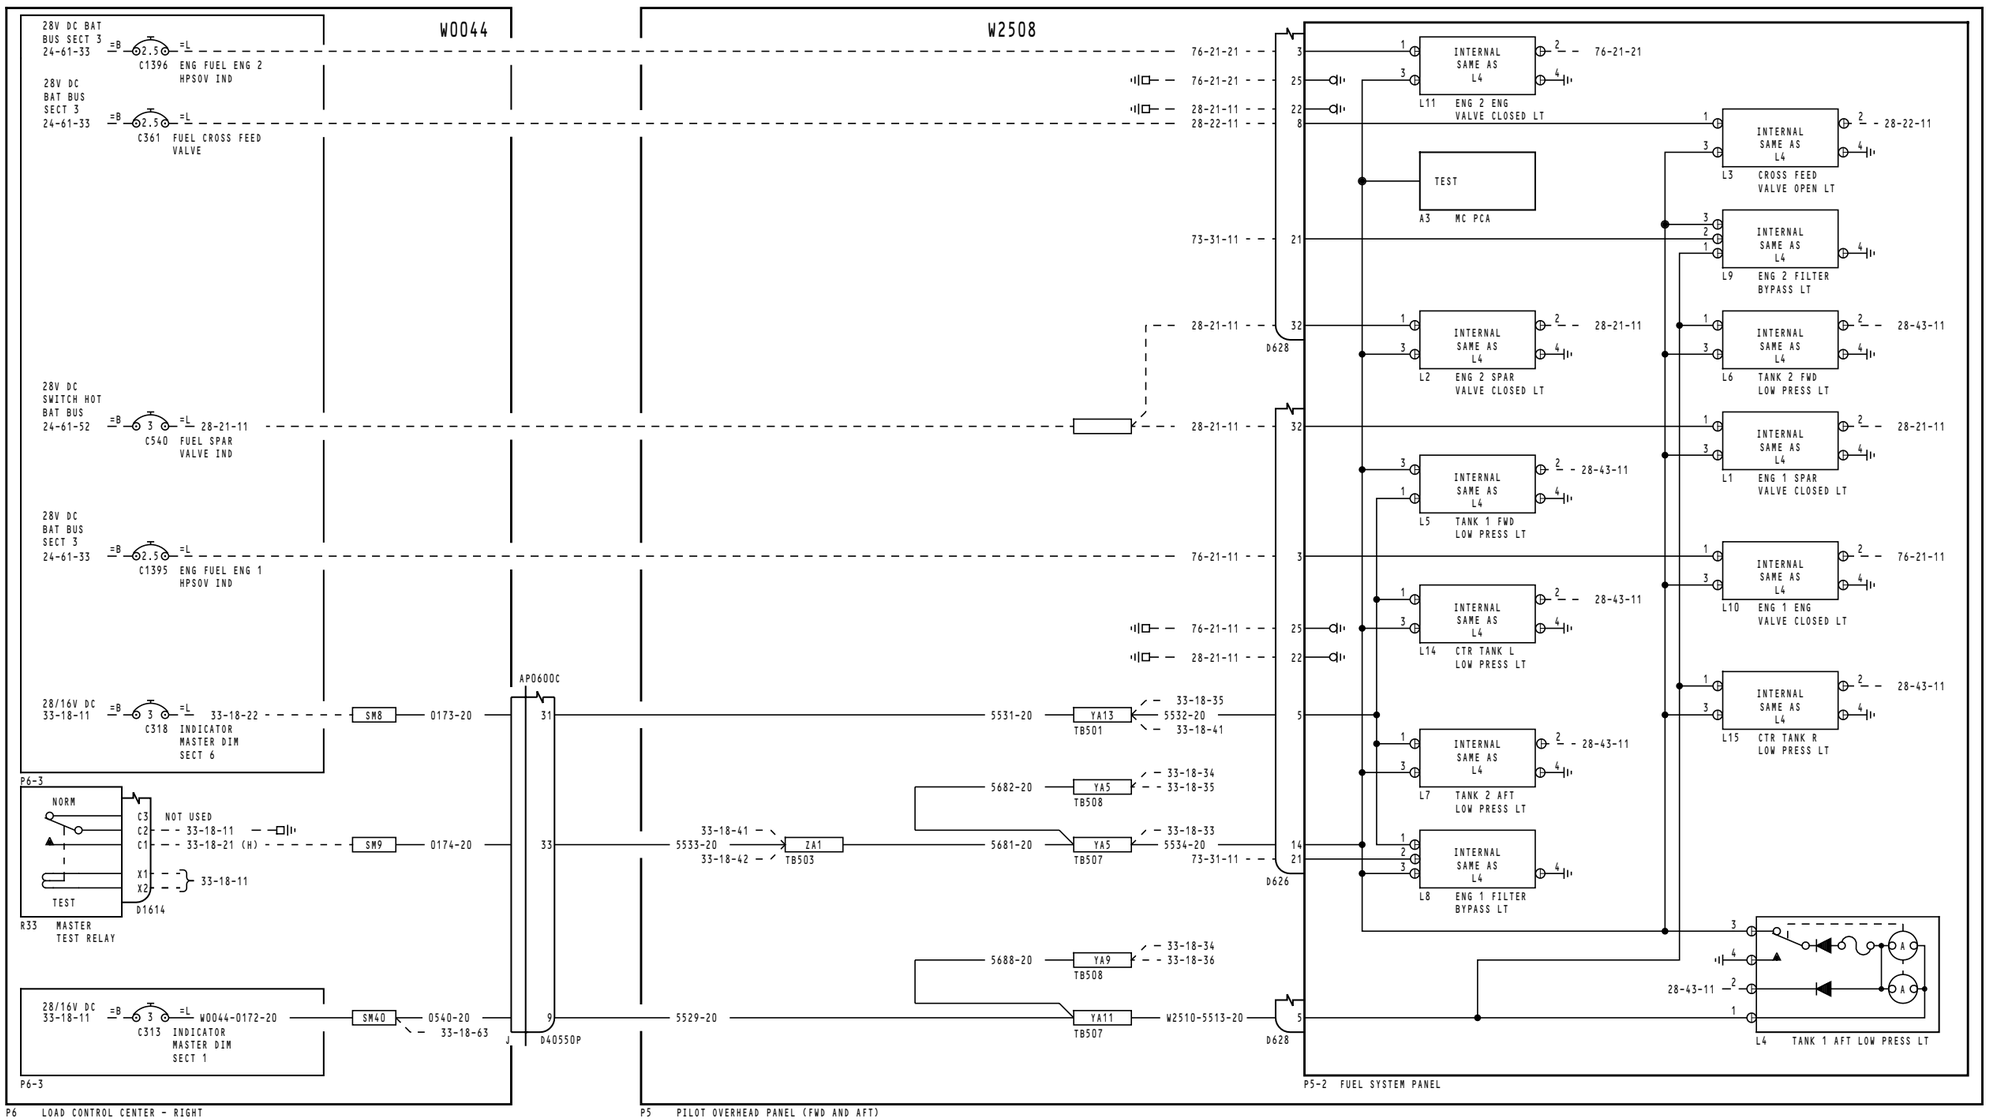





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-32

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

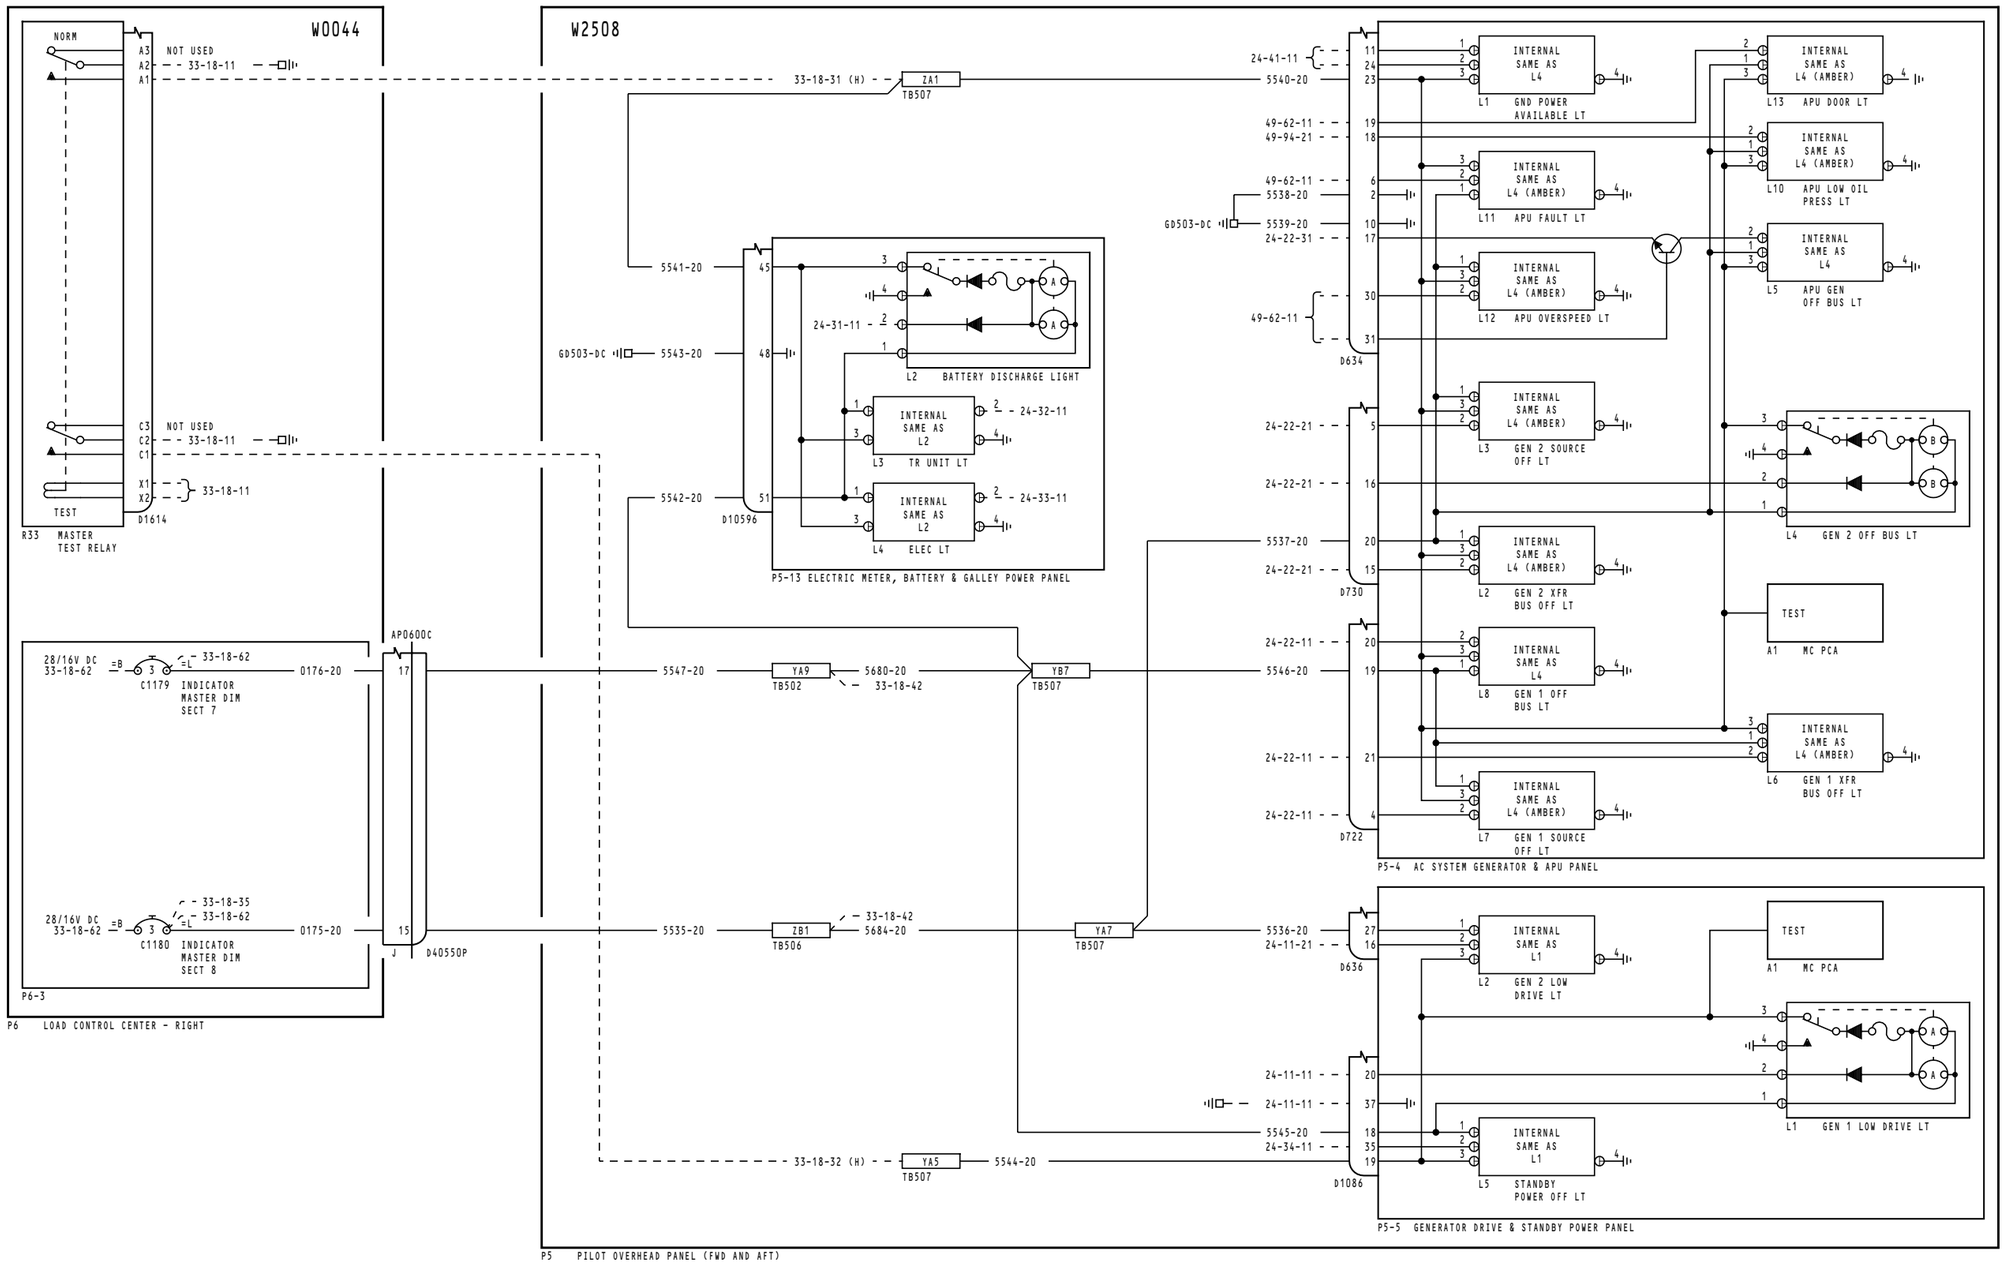




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-33

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

12

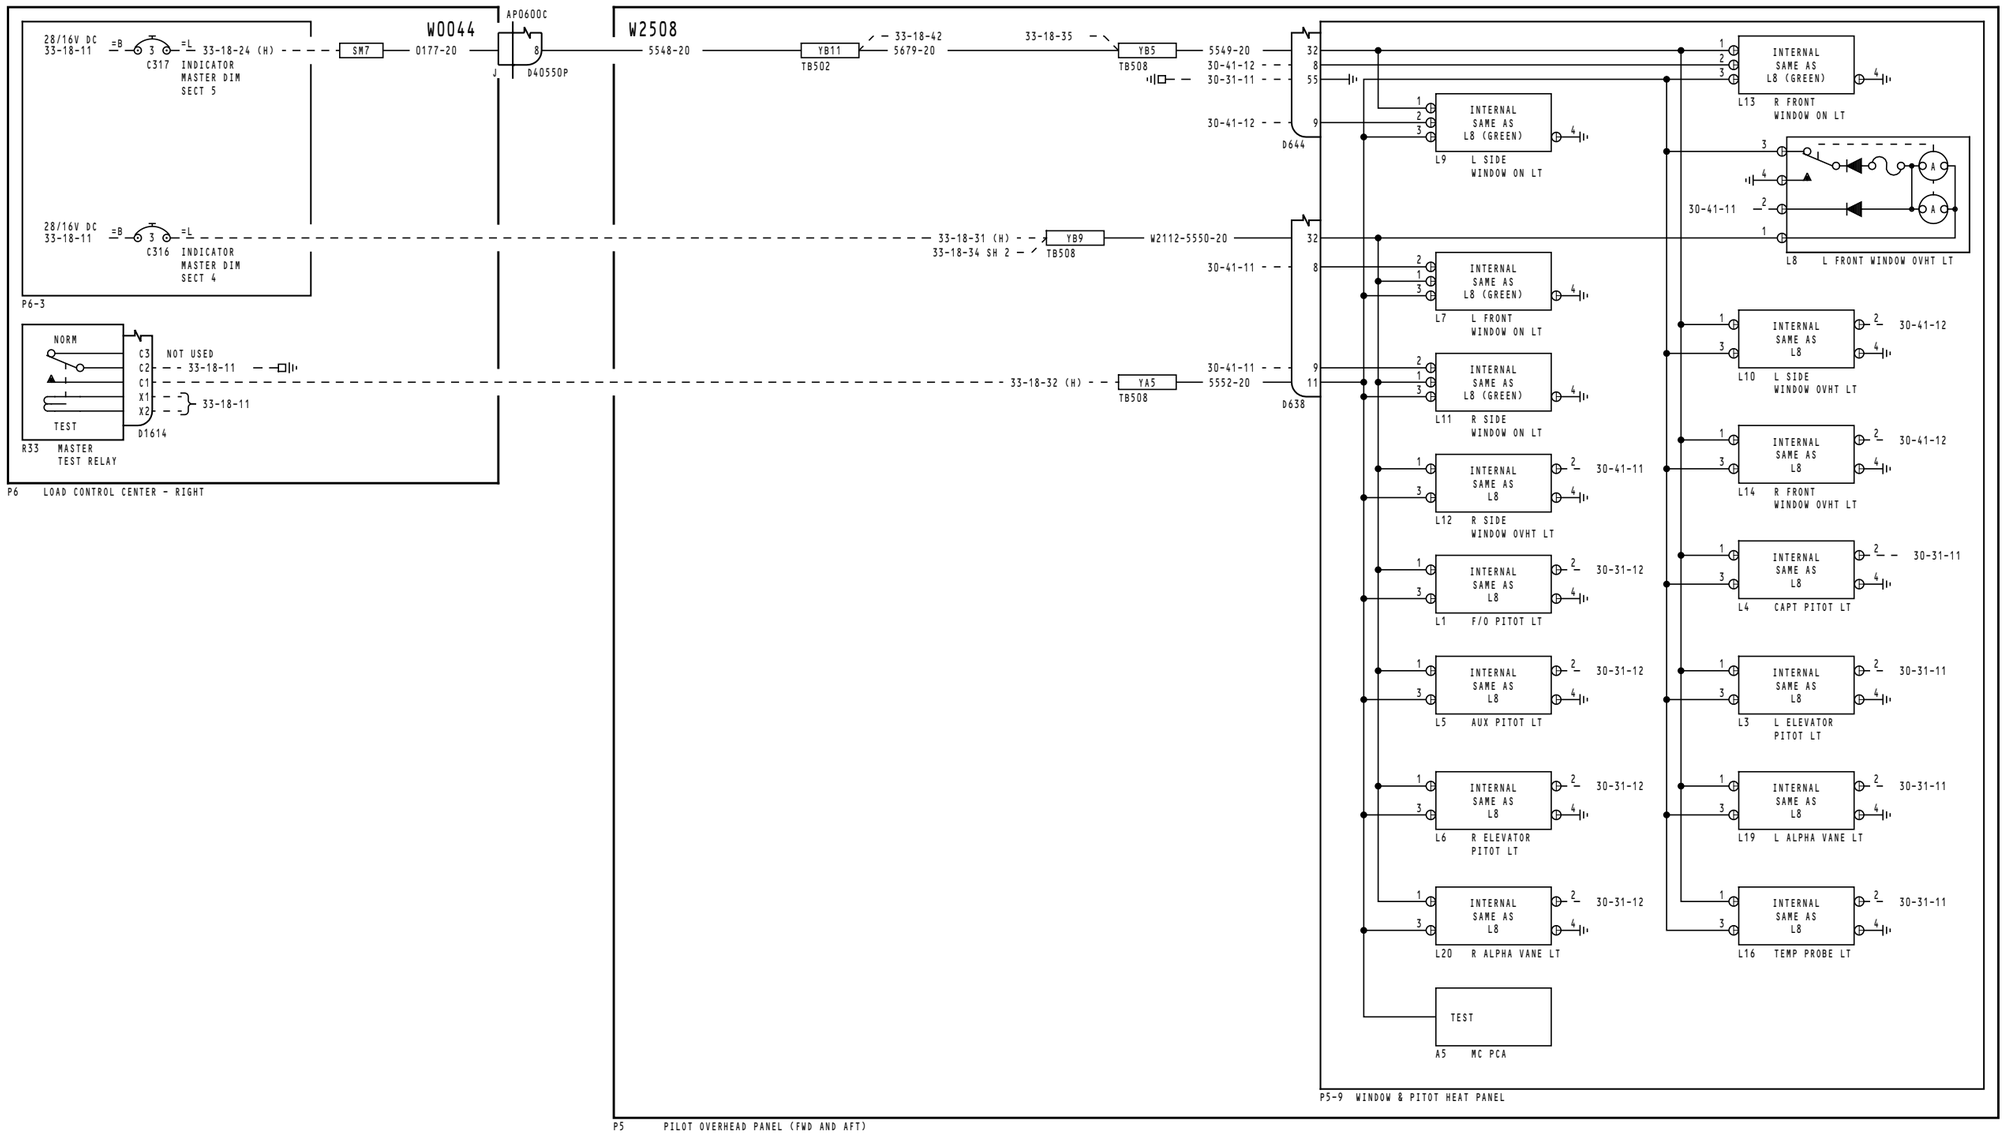





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-34

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

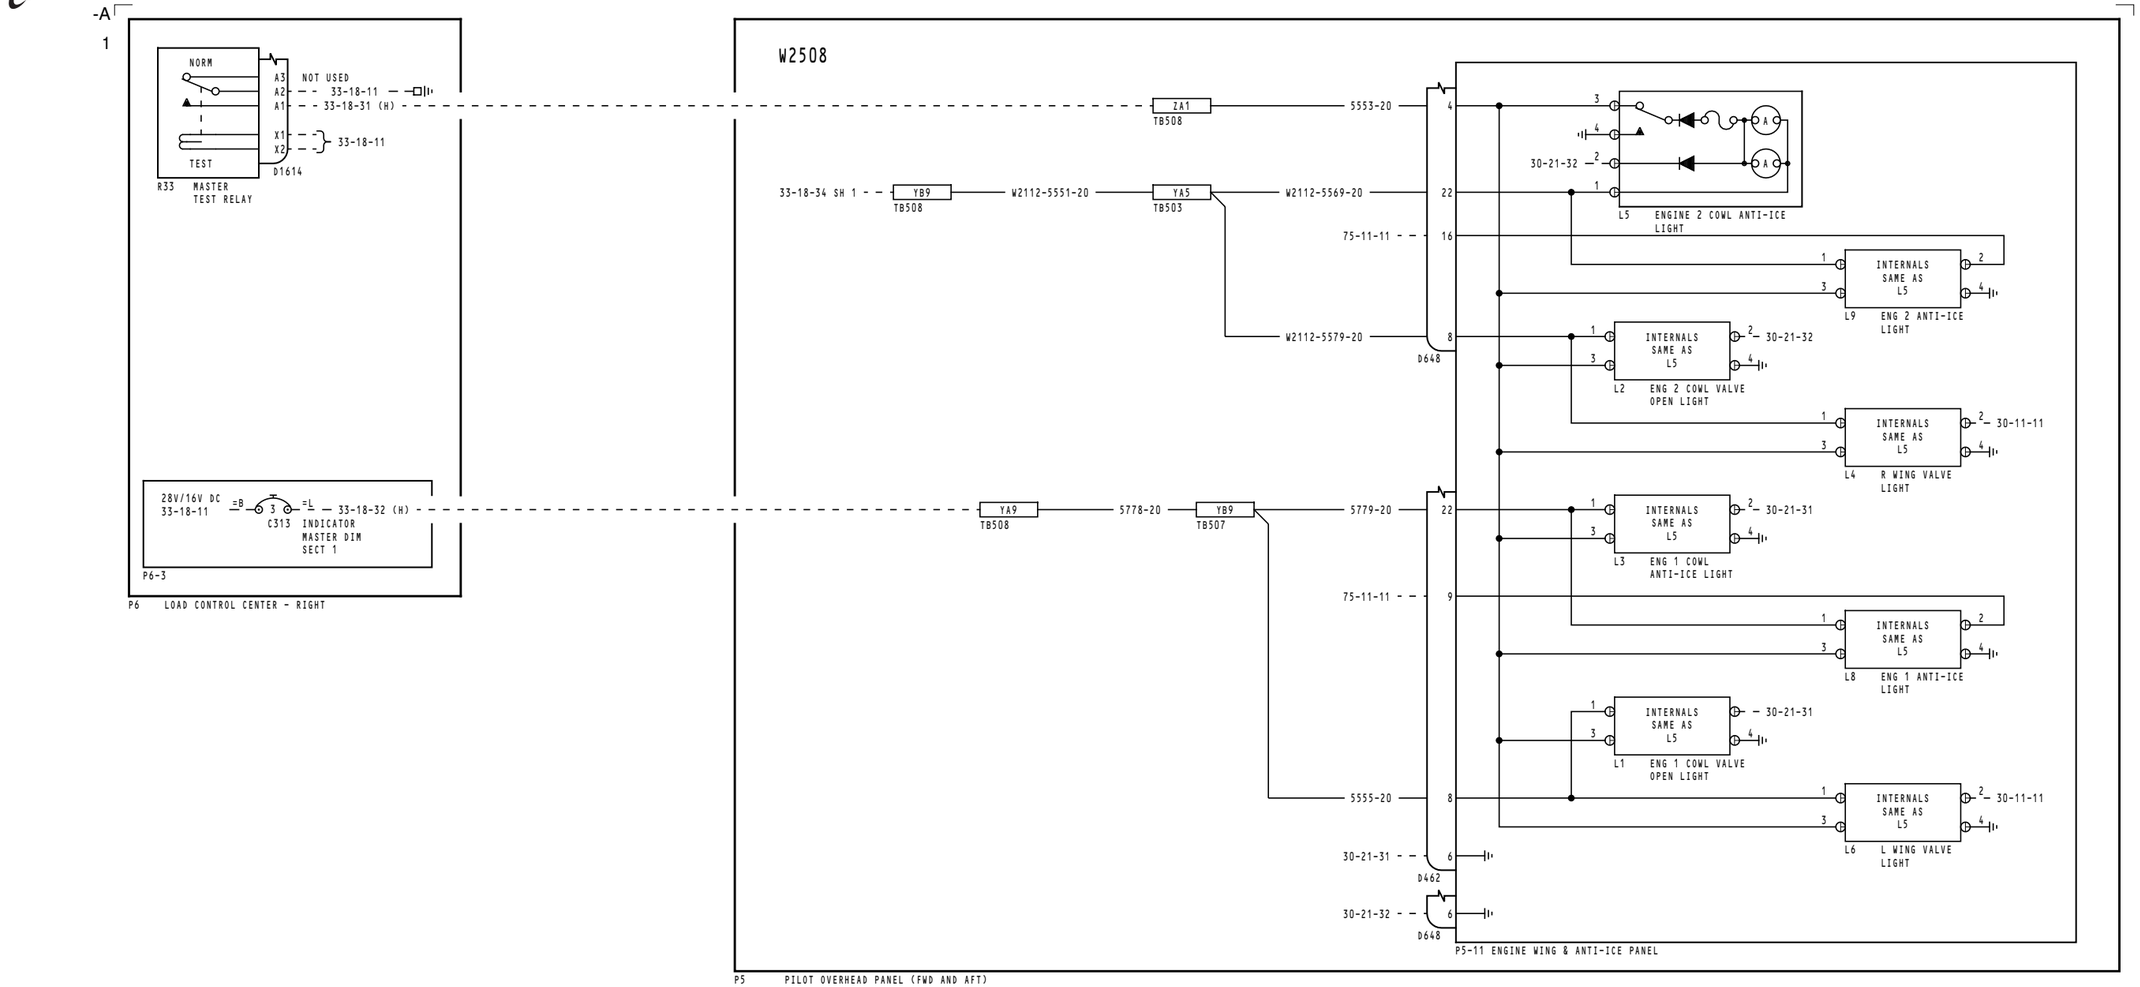





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-34

Page 1
Sheet 2
May 15/2024

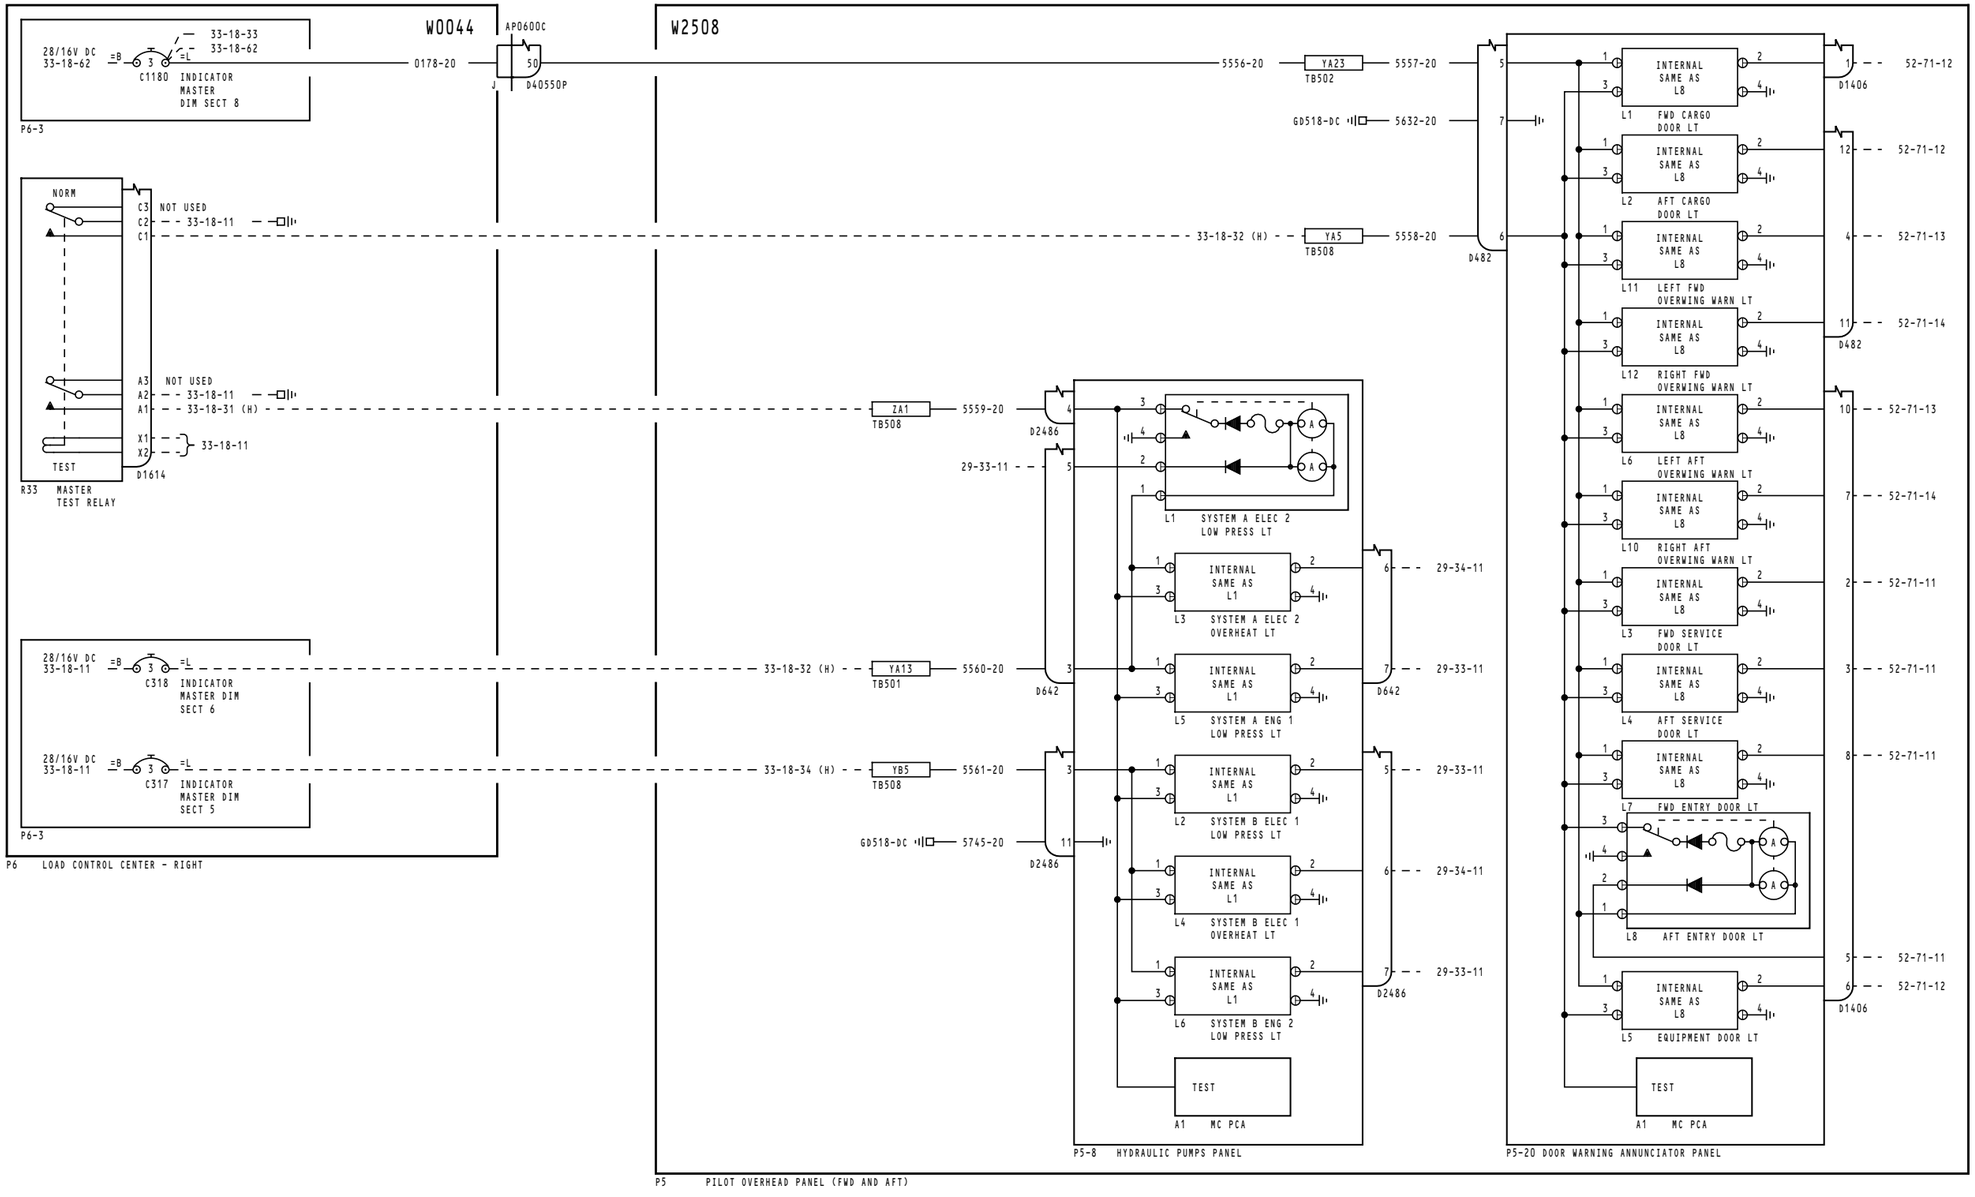




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-35

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
13

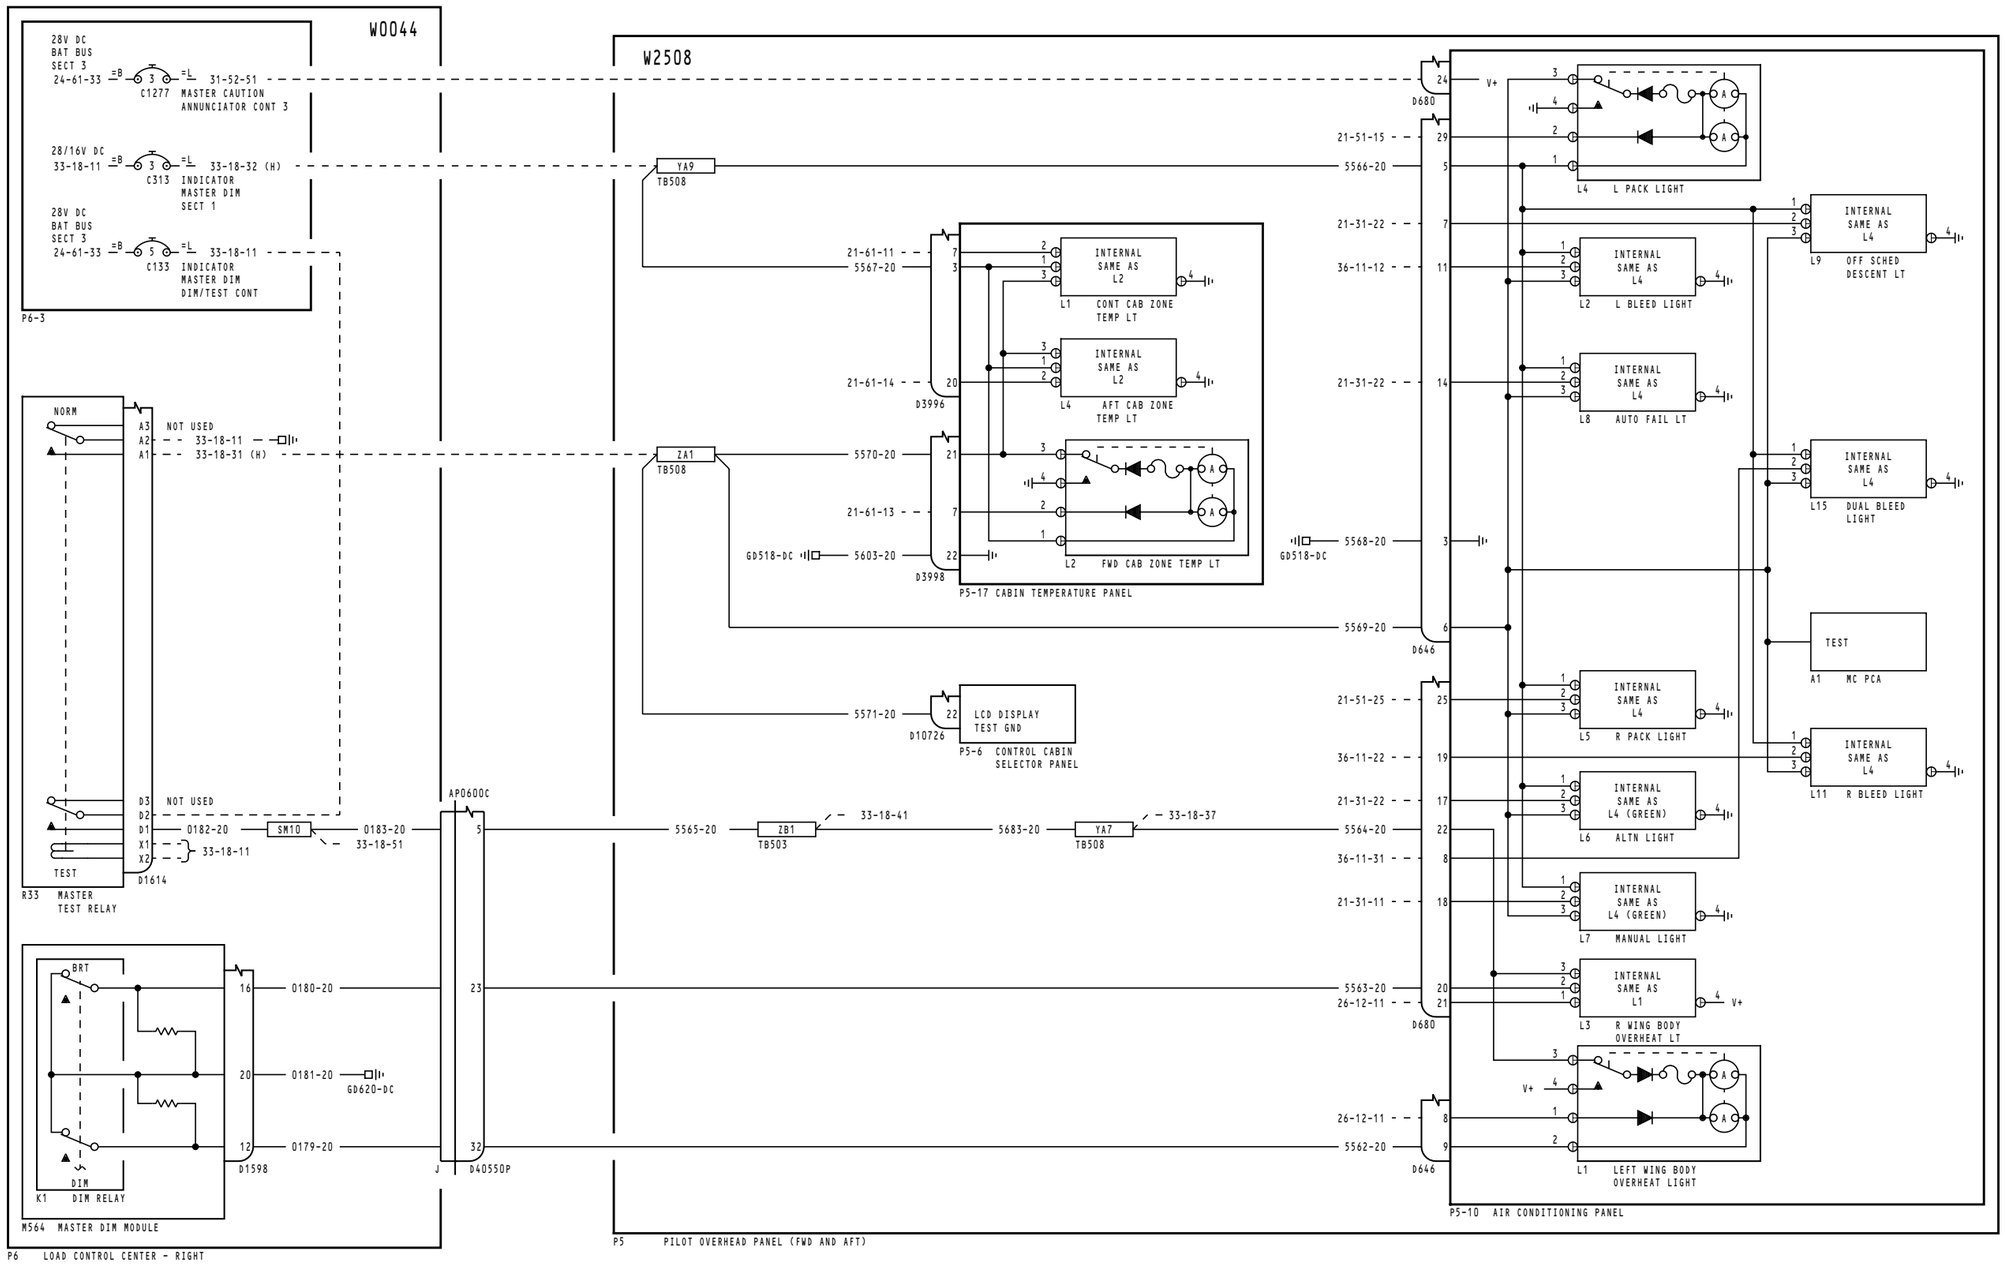





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-36

Page 1

May 15/2024

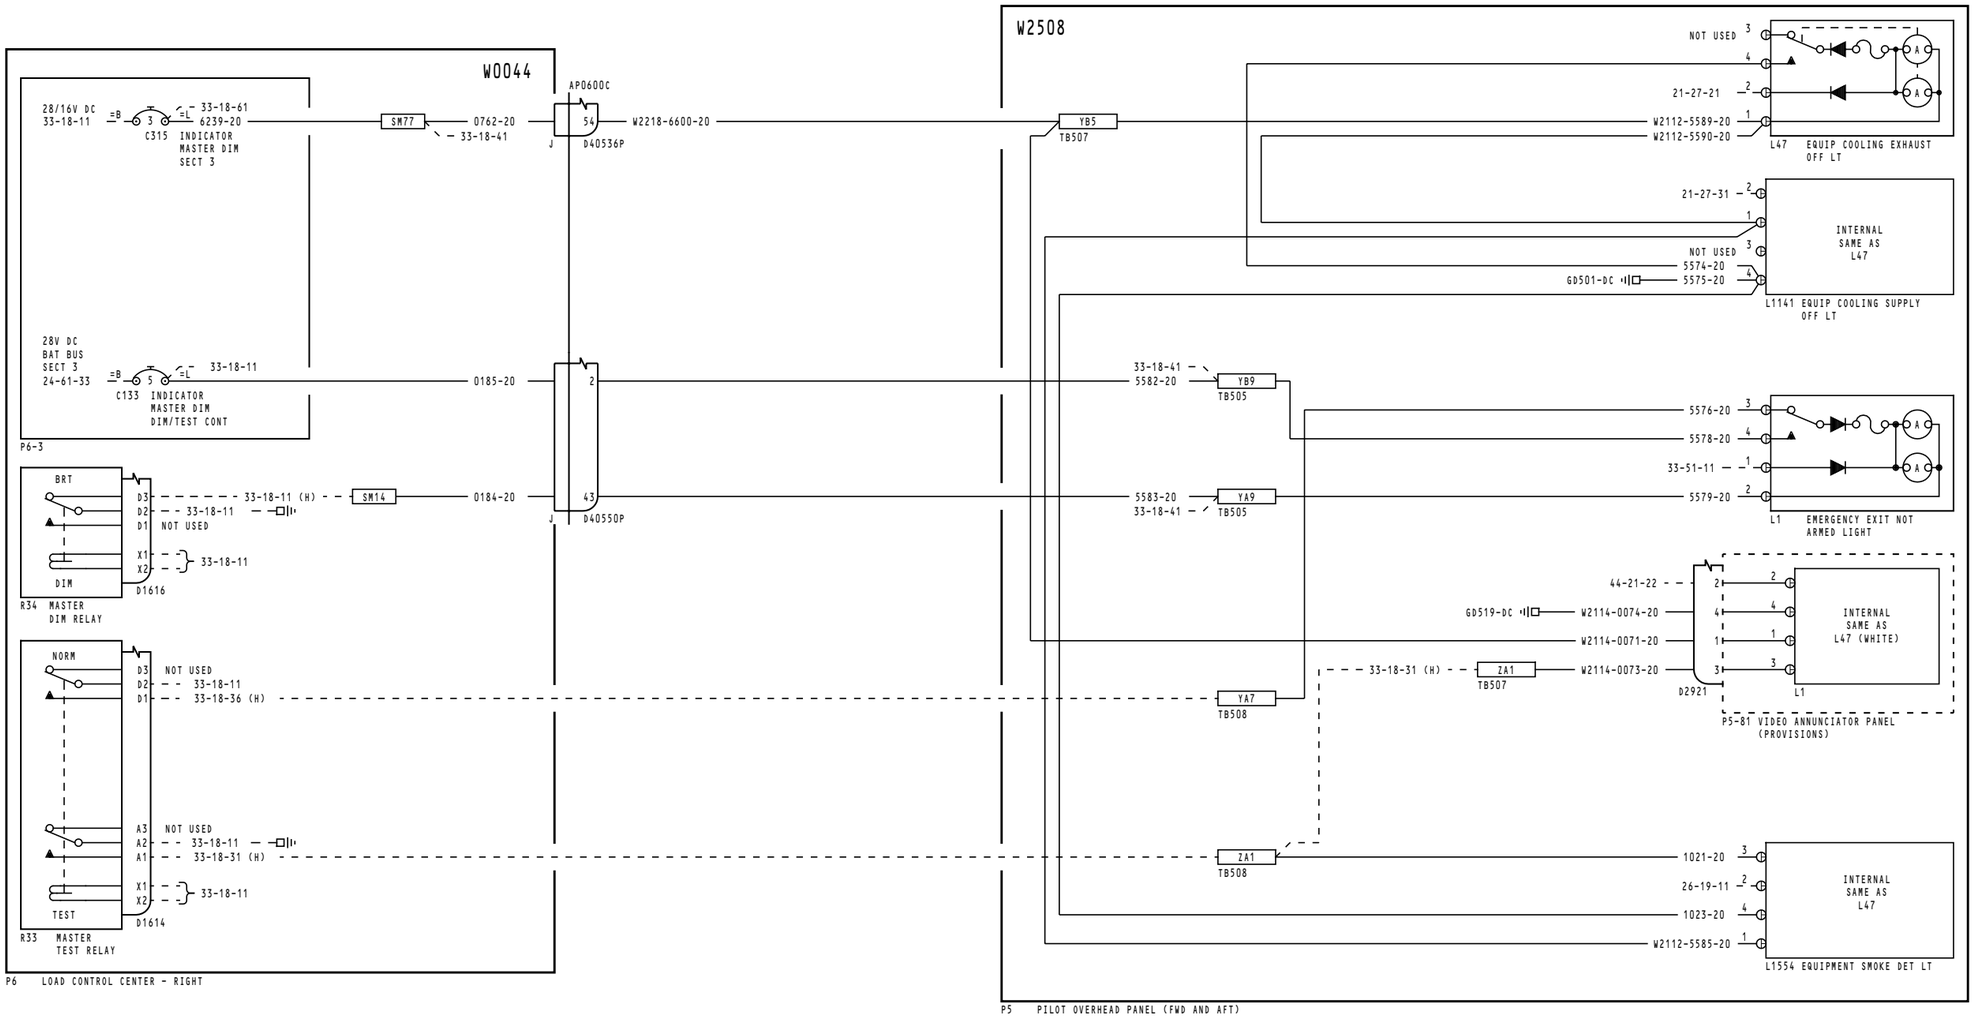





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-37


Page 1

May 15/2024

-B
19

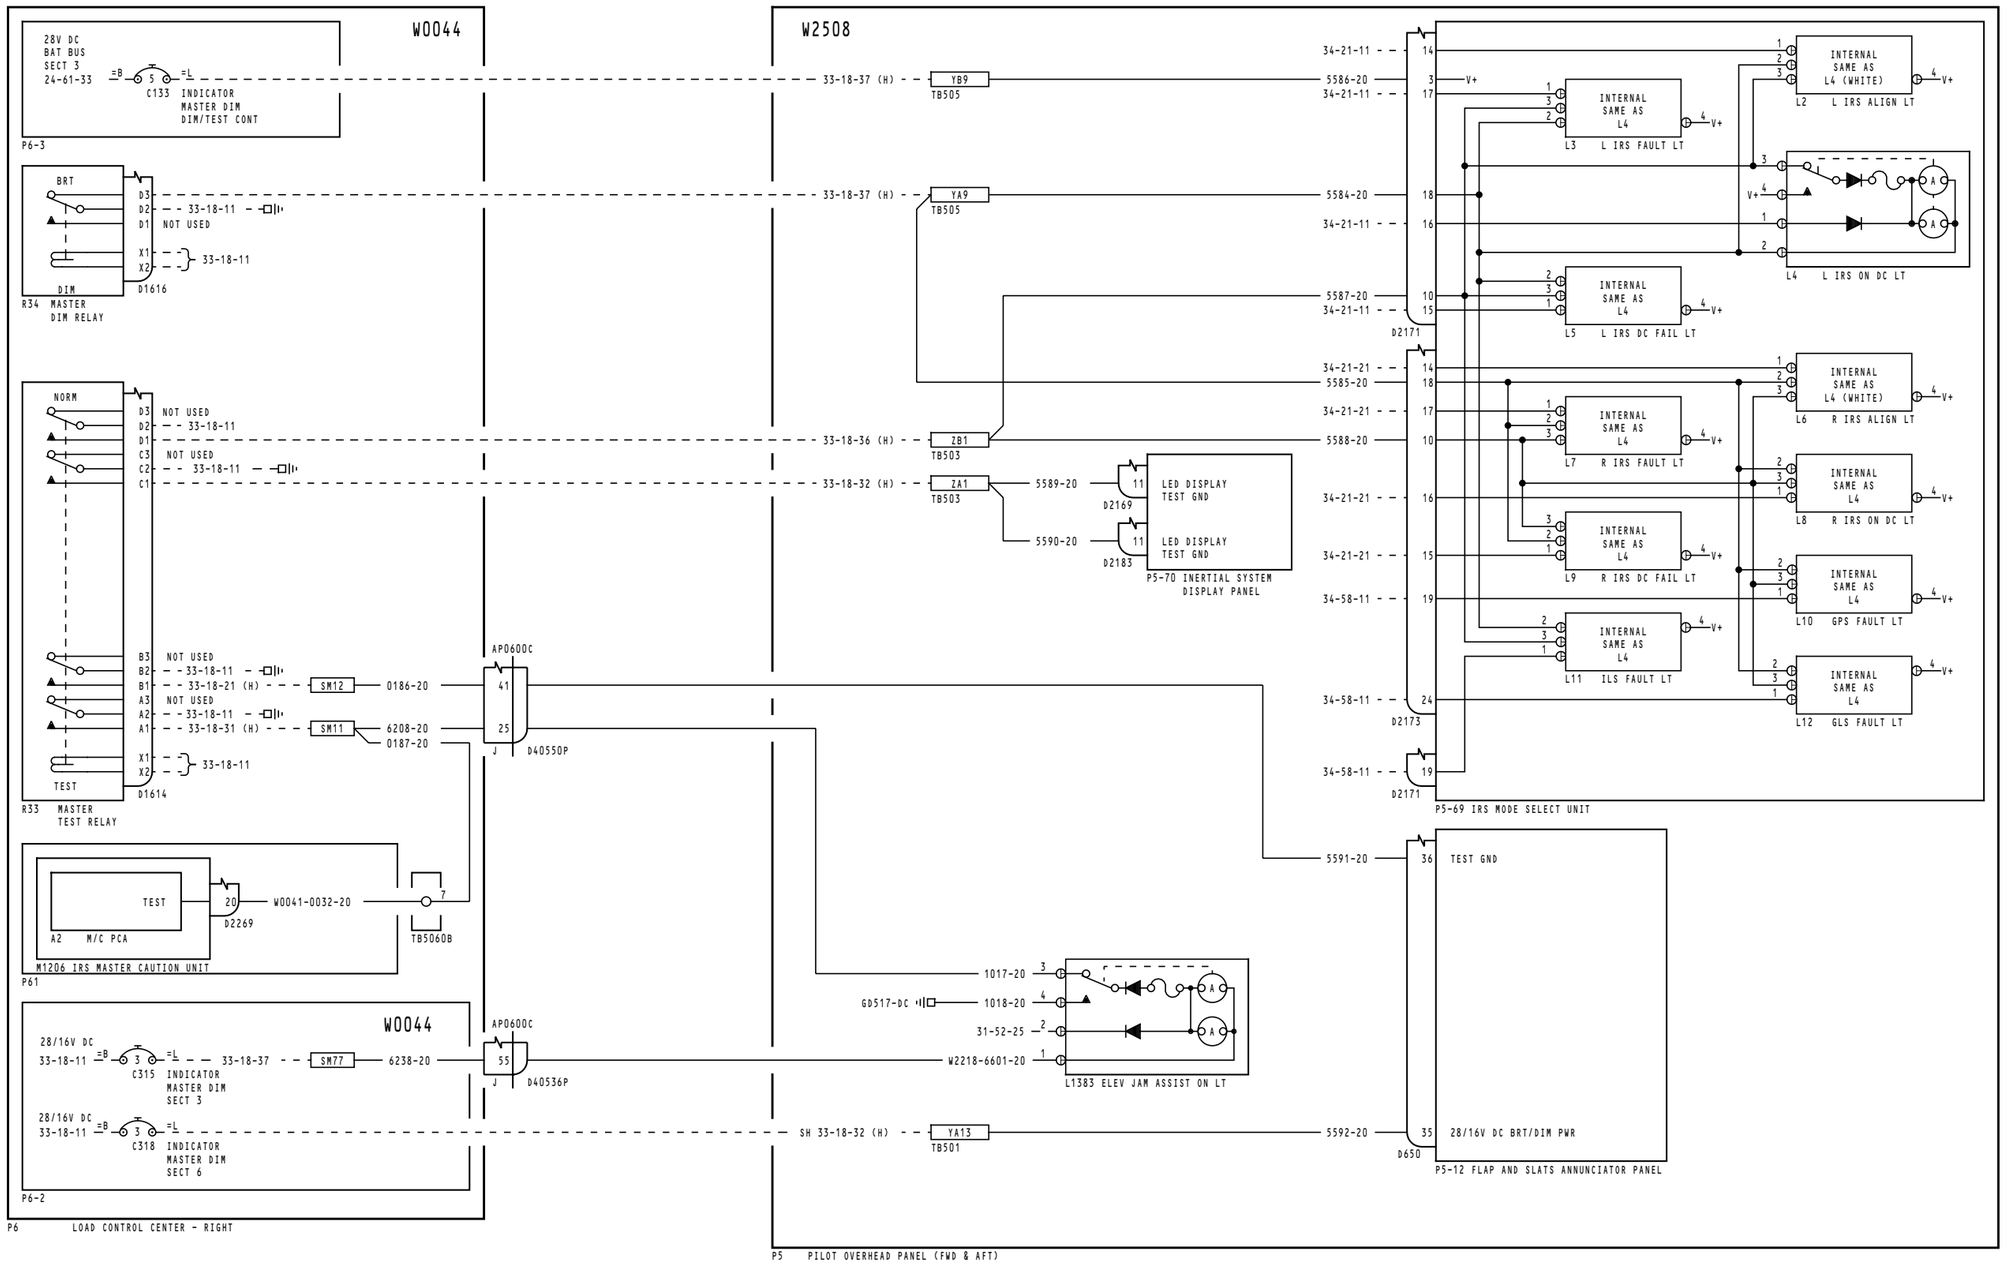
W0044
28V DC BAT BUS SECT 3 24-61-33
=B
5
=L
C133 INDICATOR MASTER DIM DIM/TEST CONT
P6-3
BRT
DIM
R34 MASTER DIM RELAY
D1616
NORM
TEST
R33 MASTER TEST RELAY
D1614
NOT USED
33-18-11
33-18-21 (H)
33-18-31 (H)
33-18-32 (H)
33-18-36 (H)
33-18-37 (H)
SM12
SM11
SM77
0186-20
6208-20
0187-20
6238-20
AP0600C
J D40550P
TEST
A2 M/C PCA
D2269
W0041-0032-20
TB5060B
M1206 IRS MASTER CAUTION UNIT
P61
28/16V DC
C315 INDICATOR MASTER DIM SECT 3
C318 INDICATOR MASTER DIM SECT 6
P6-2
P6 LOAD CONTROL CENTER - RIGHT
W2508
YB9
YA9
ZB1
ZA1
TB505
TB503
5589-20
5590-20
D2169
D2183
LED DISPLAY TEST GND
P5-70 INERTIAL SYSTEM DISPLAY PANEL
1017-20
1018-20
31-52-25
GD517-DC
W2218-6601-20
L1383 ELEV JAM ASSIST ON LT
SH 33-18-32 (H)
YA13
TB501
5592-20
D650
28/16V DC BRT/DIM PWR
P5-12 FLAP AND SLATS ANNUNCIATOR PANEL
34-21-11
5586-20
5584-20
5587-20
D2171
34-21-21
5585-20
5588-20
34-58-11
5591-20
D2173
INTERNAL SAME AS L4
INTERNAL SAME AS L4 (WHITE)
L2 L IRS ALIGN LT
L3 L IRS FAULT LT
L4 L IRS ON DC LT
L5 L IRS DC FAIL LT
L6 R IRS ALIGN LT
L7 R IRS FAULT LT
L8 R IRS ON DC LT
L9 R IRS DC FAIL LT
L10 GPS FAULT LT
L11 ILS FAULT LT
L12 GLS FAULT LT
P5-69 IRS MODE SELECT UNIT
TEST GND
P5 PILOT OVERHEAD PANEL (FWD & AFT)

737-8 WIRING DIAGRAM MANUAL

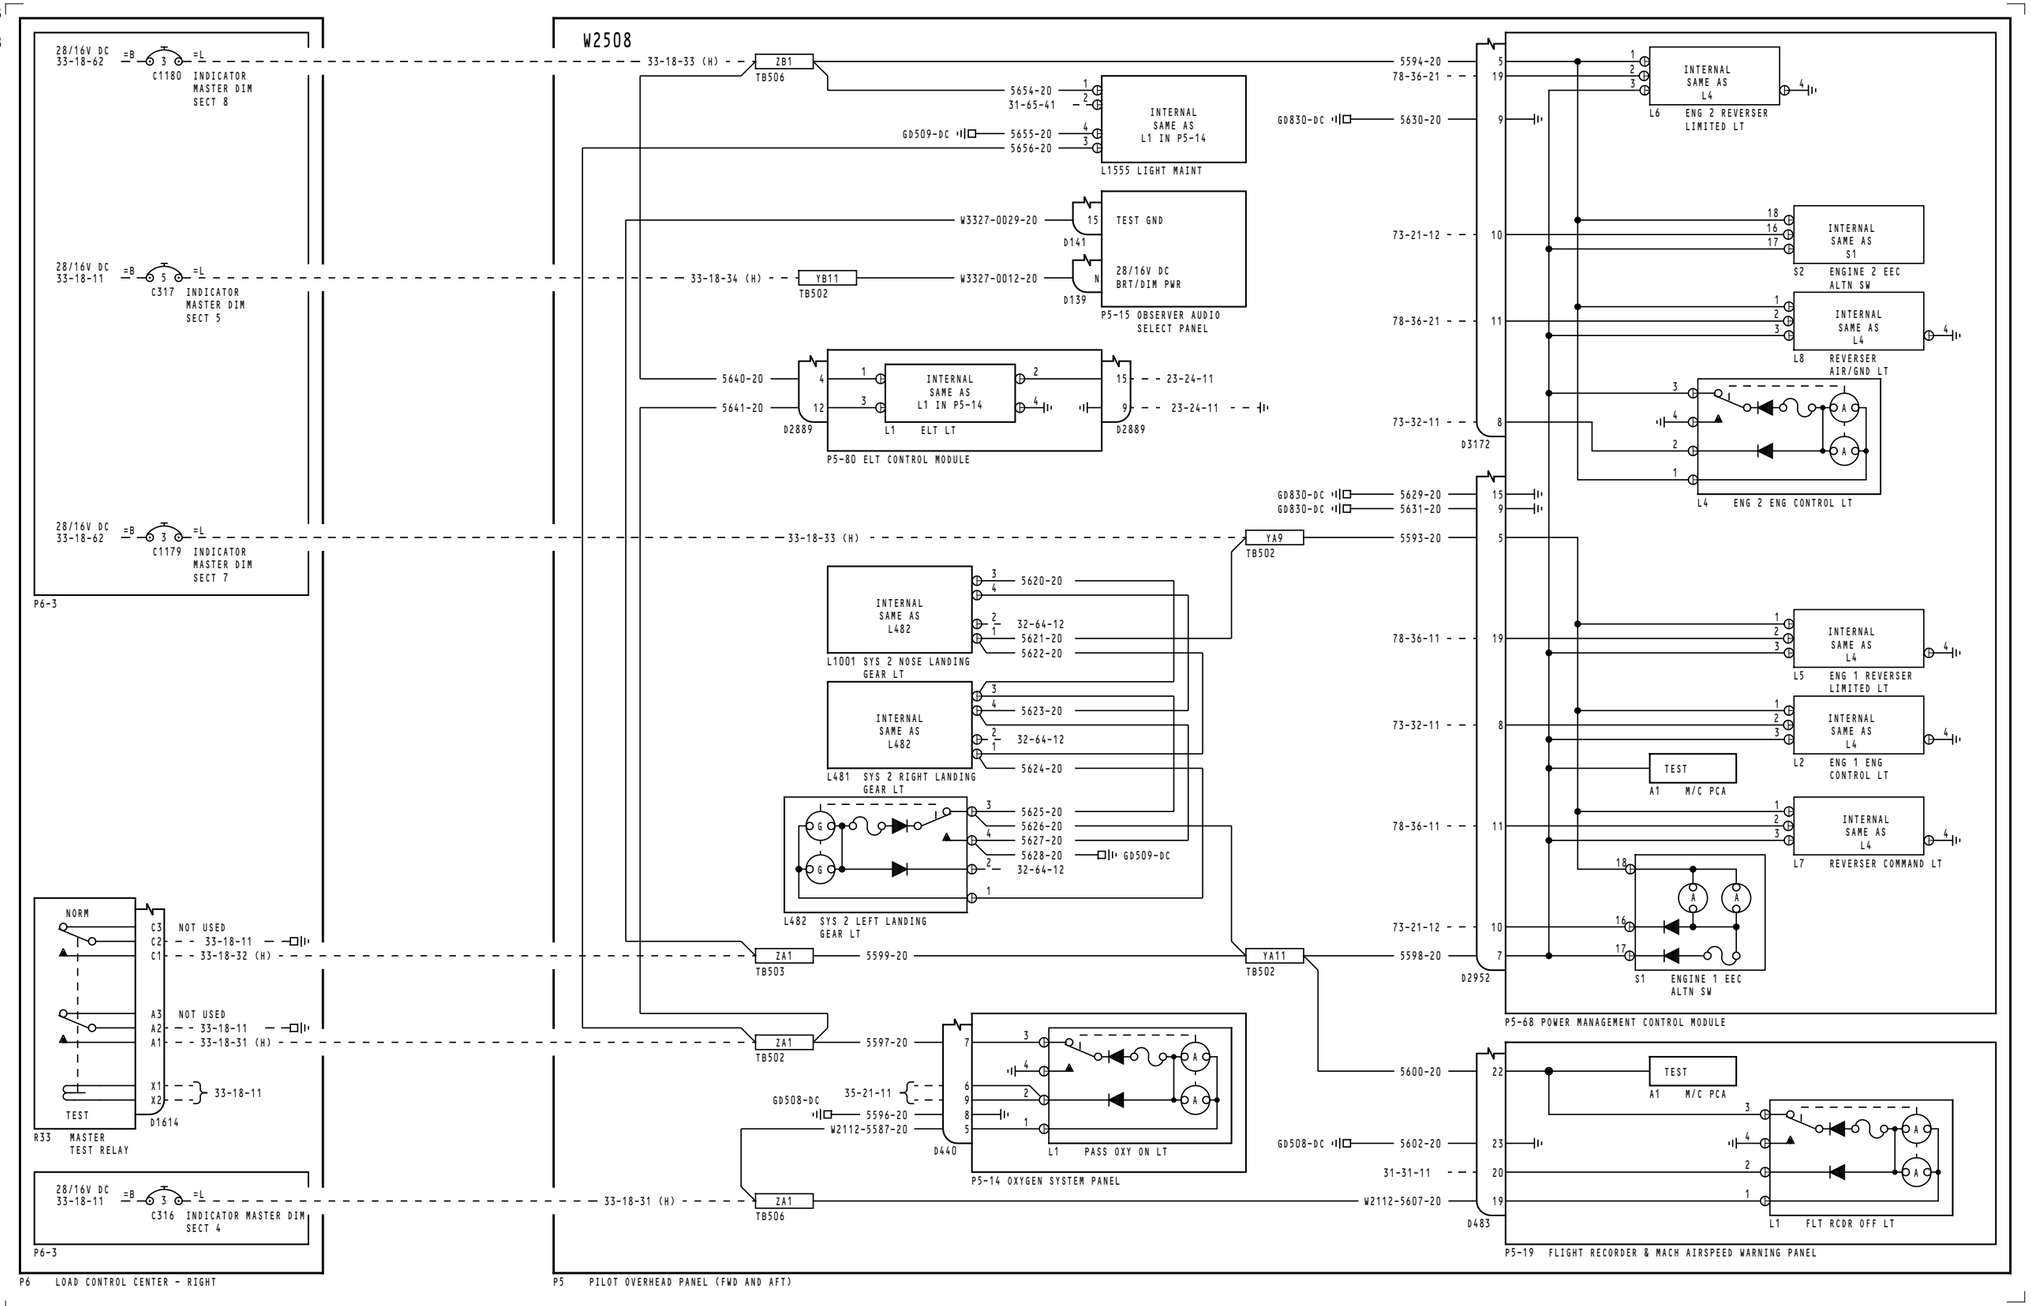




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-42

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
12

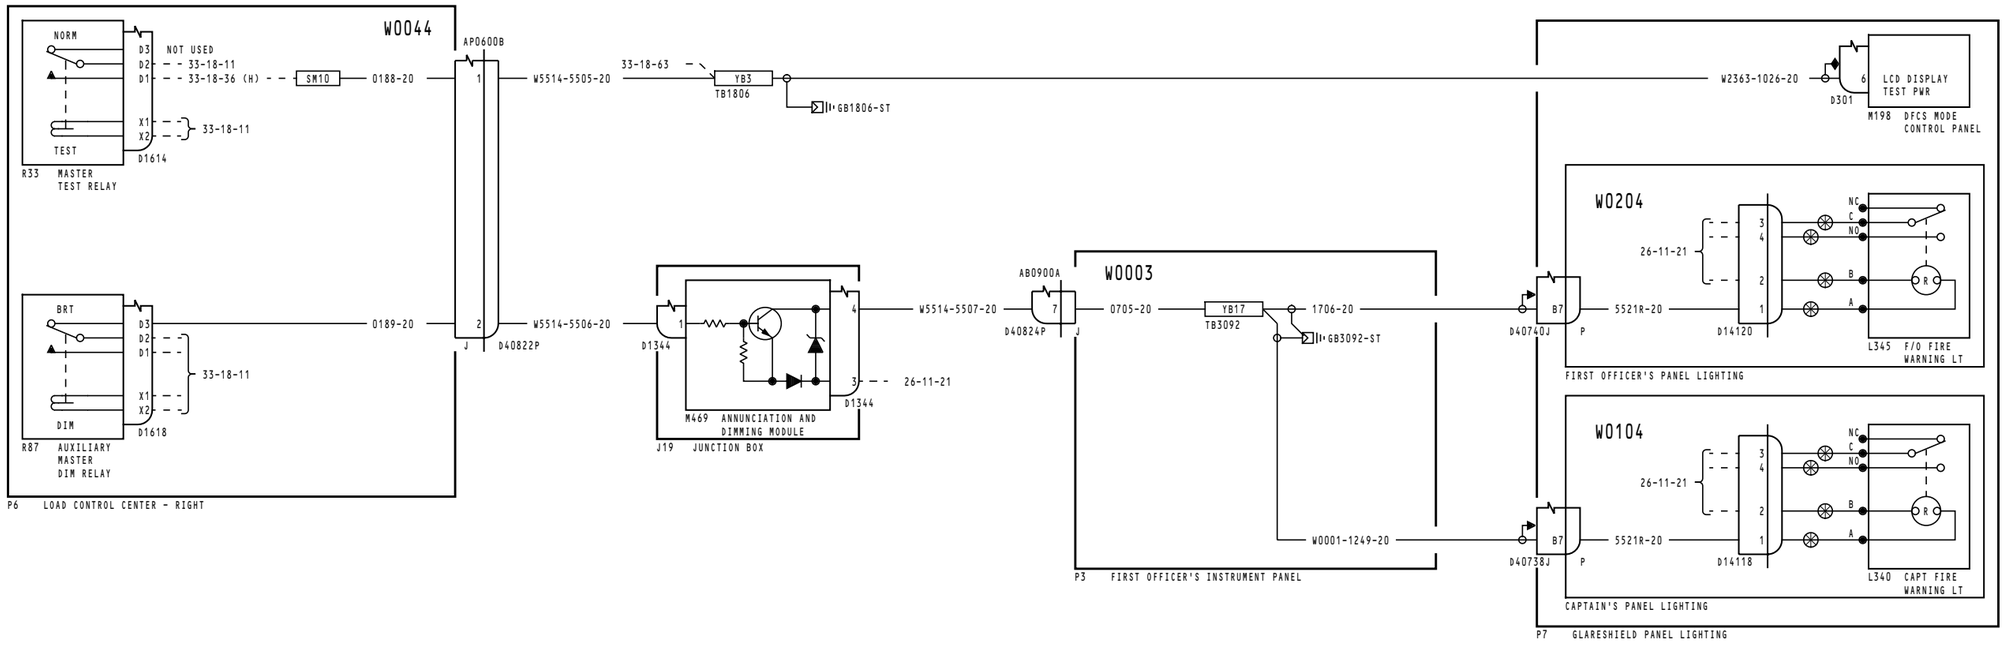




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-51

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

243

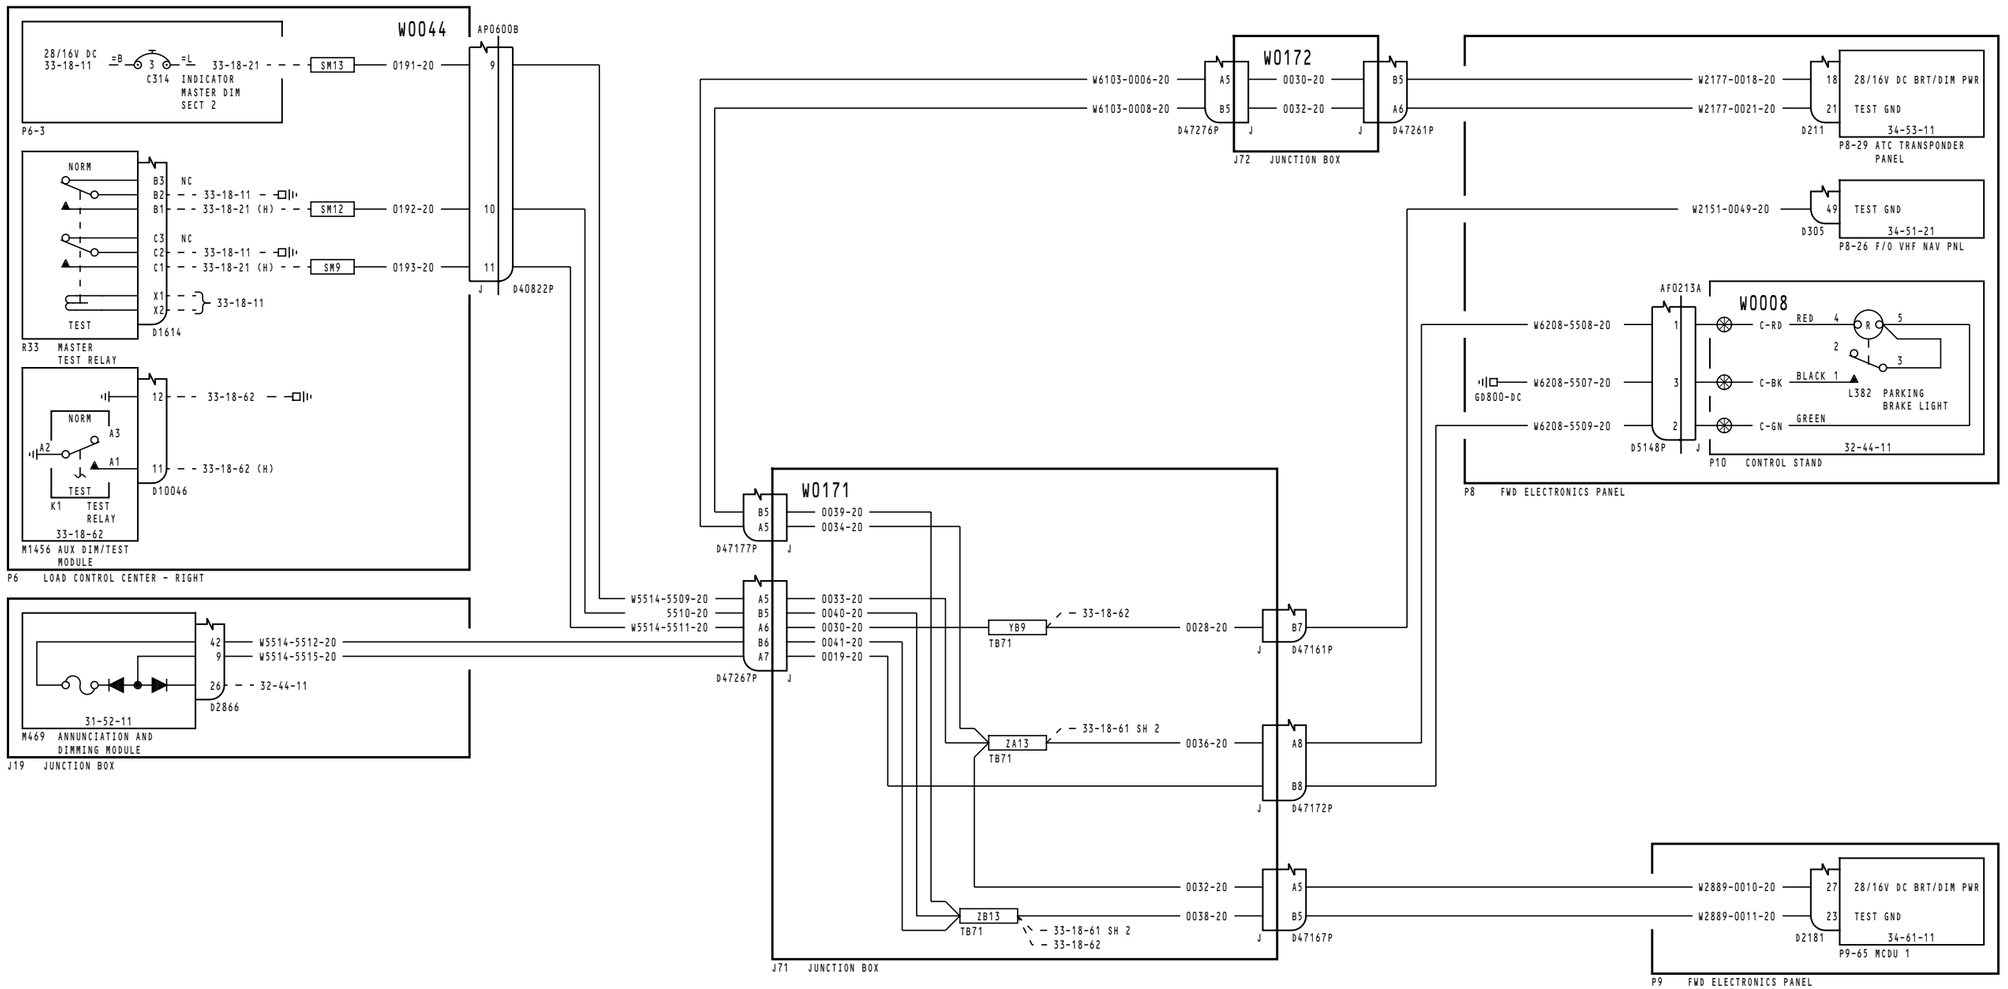





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-18-61

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

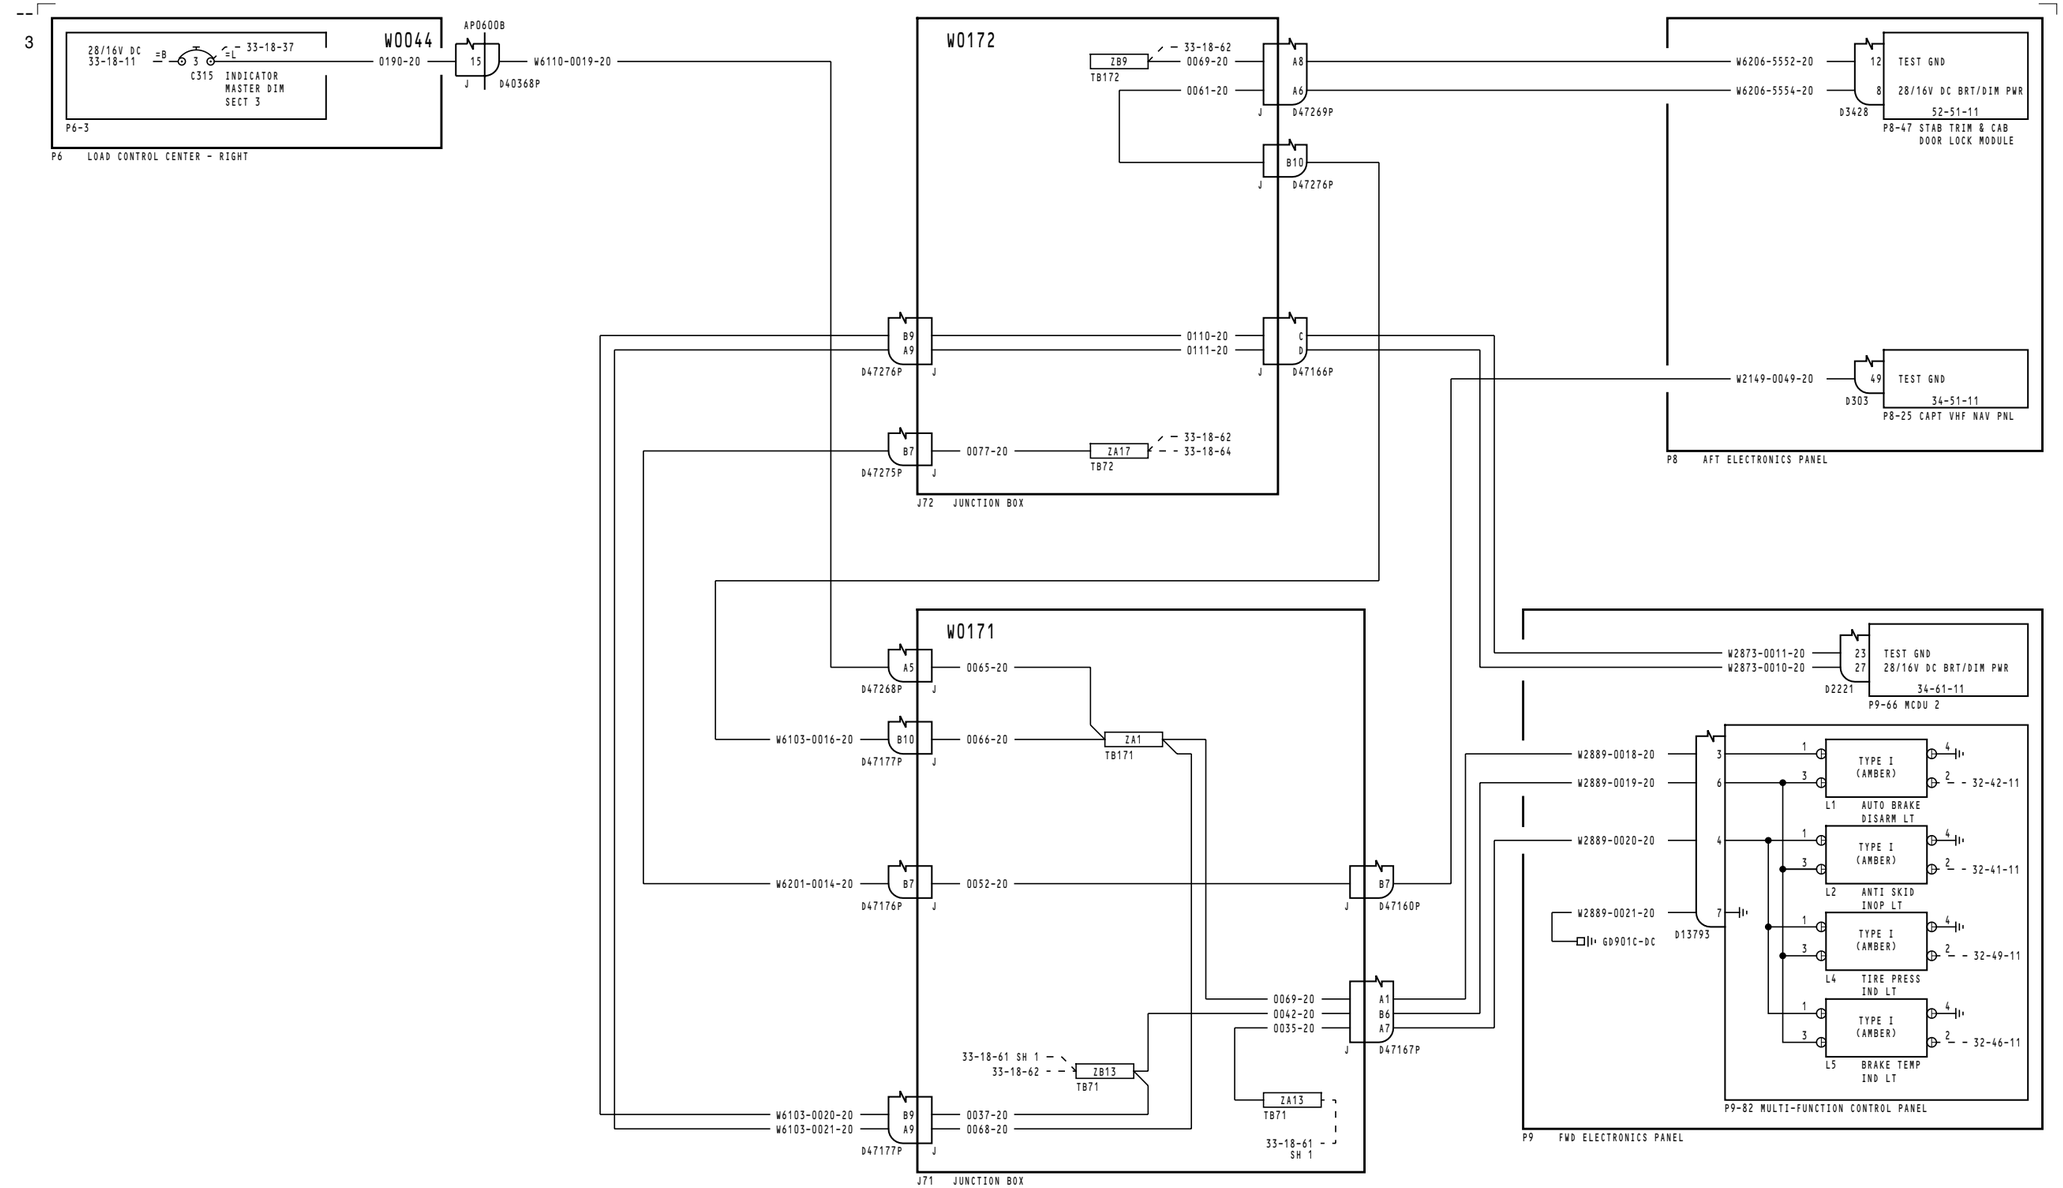




33-18-61


Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A

521

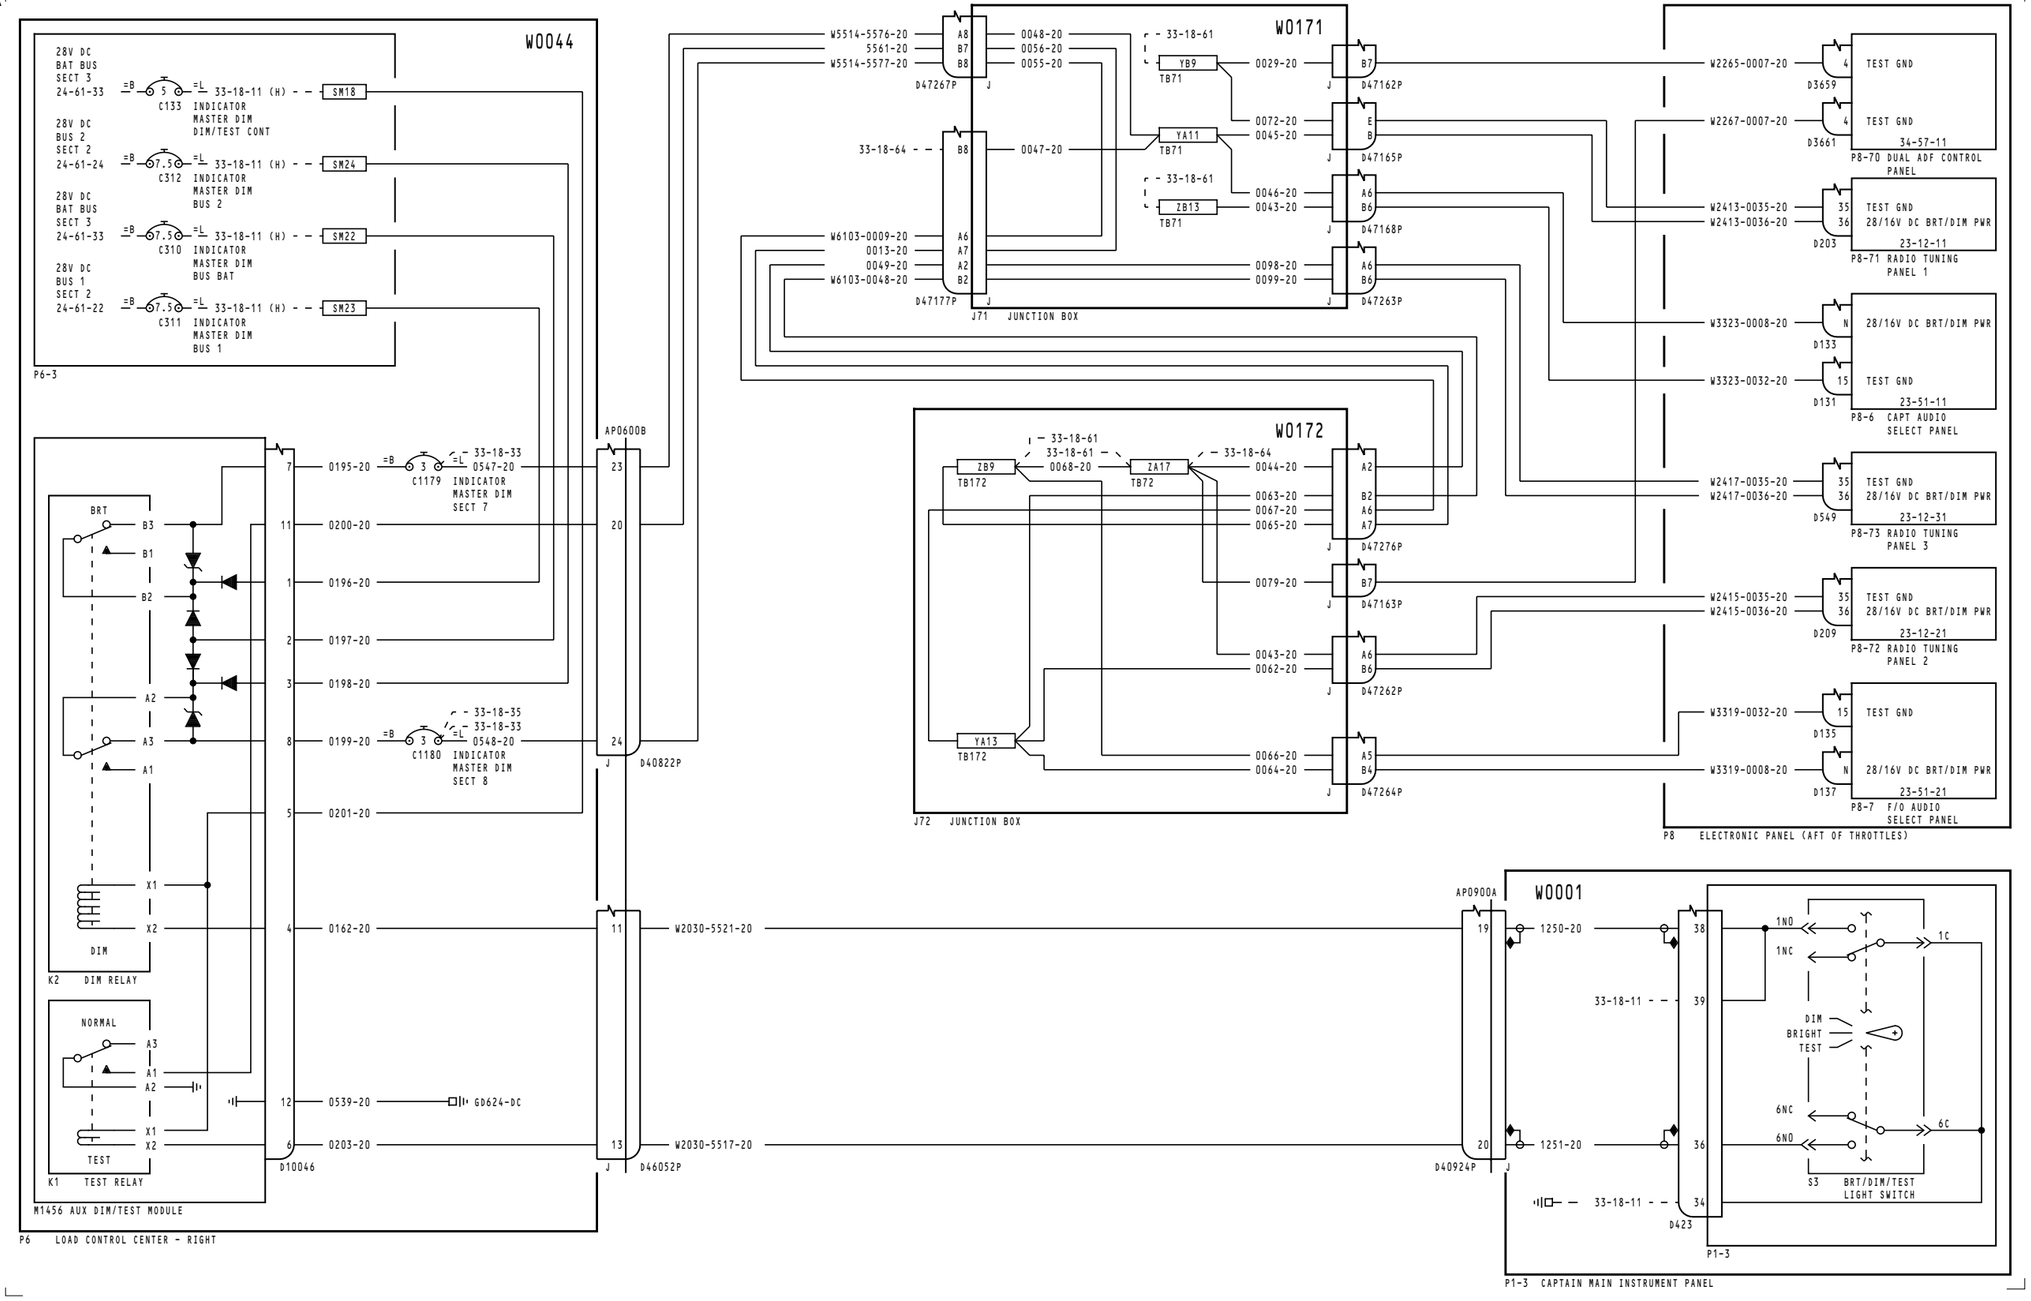


**ALL**

**MASTER DIM & TEST SYSTEM - AISLE STAND PANEL, GROUP 2**

D280AM1215

**33-18-62**

Page 1

May 15/2024


**33-18-62**

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

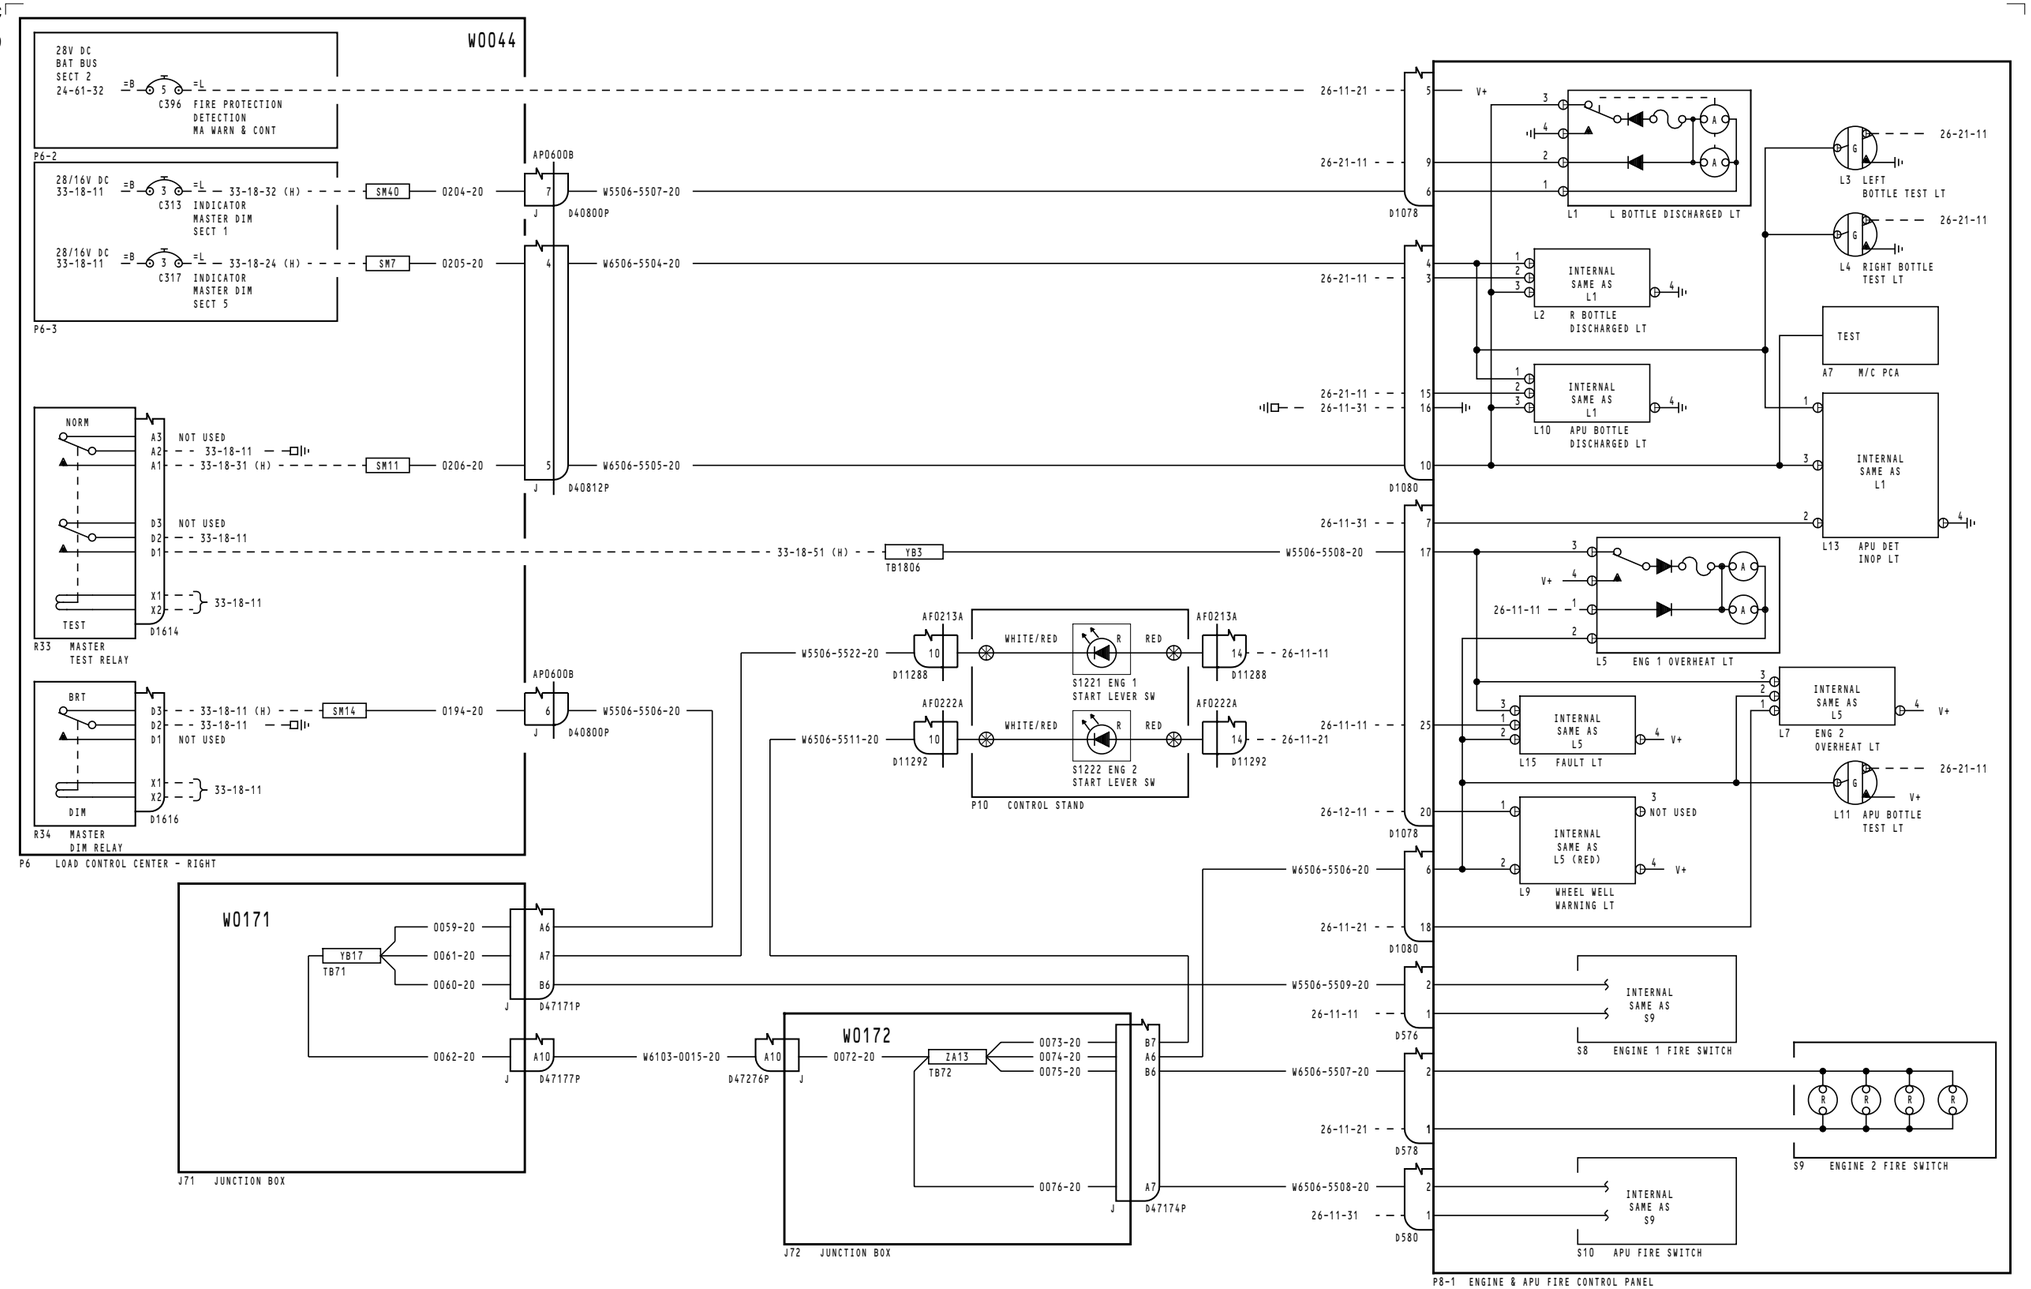




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-63

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
15

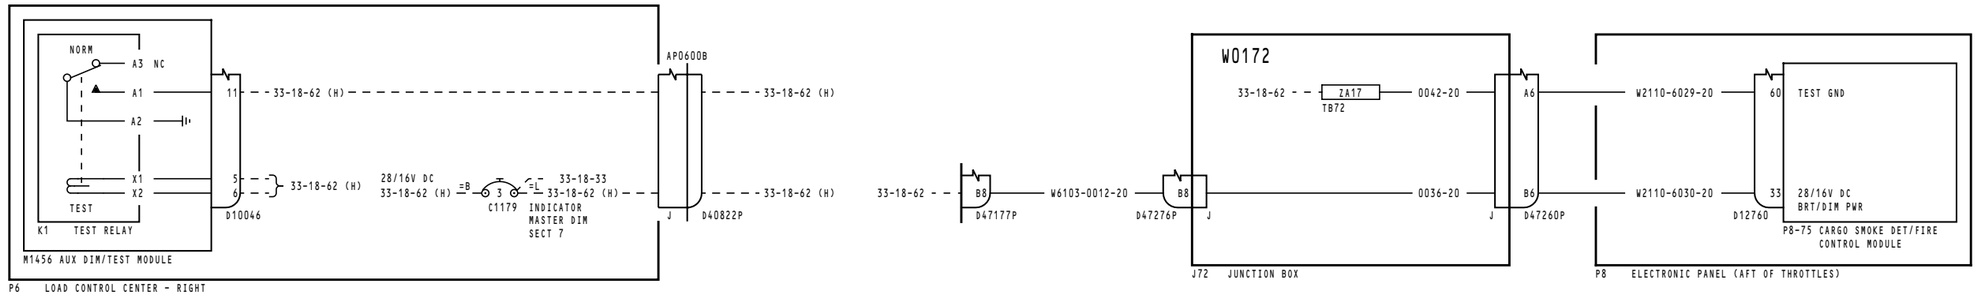




ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-18-64

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

37

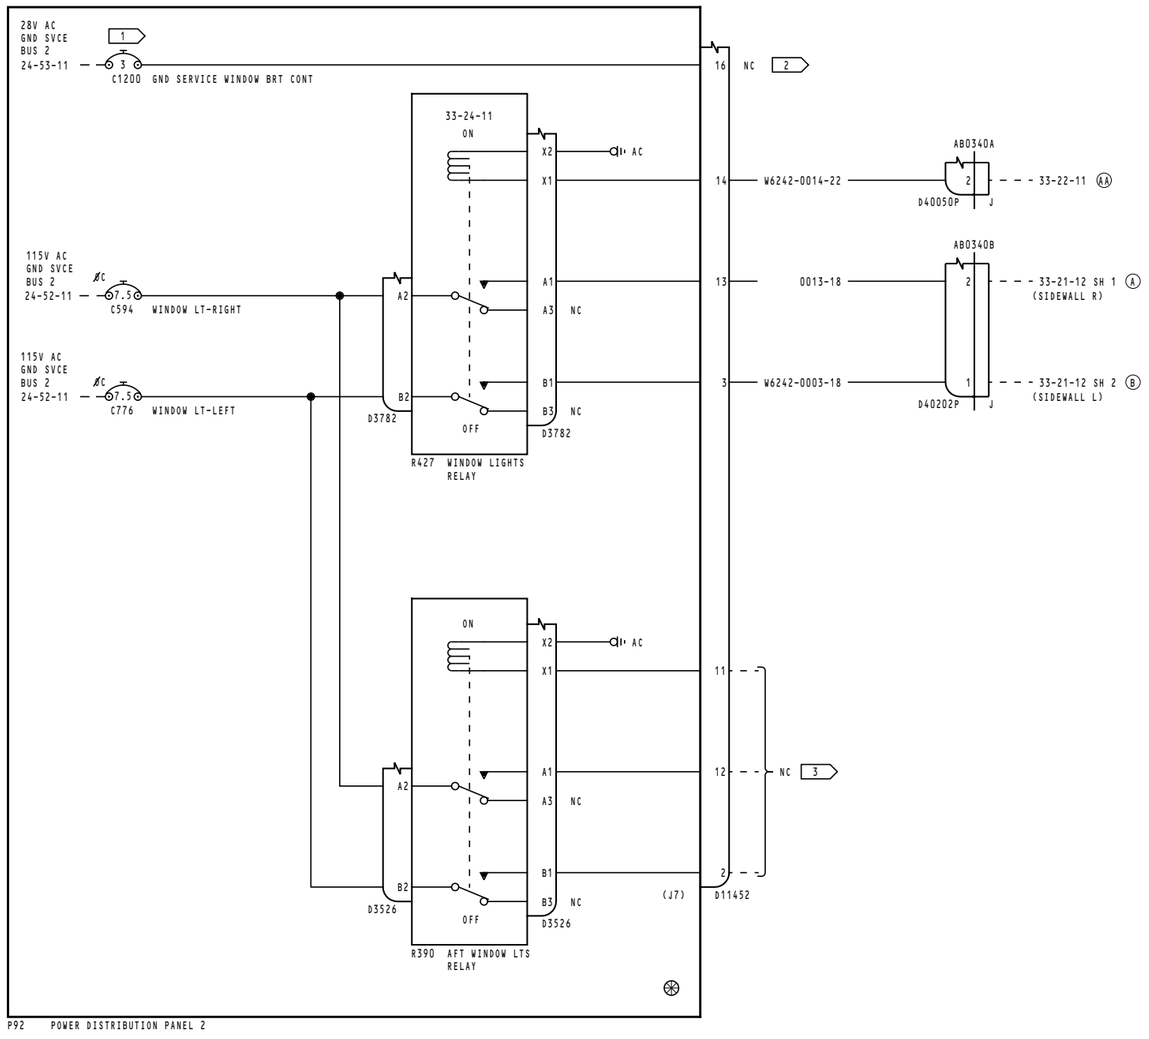


NOTES:

1. COLLAR AND LABEL "INOP"
2. NOT USED FOR LED LIGHTING, LEGACY CONNECTION
3. RESERVED FOR FLOURESCENT LIGHTING



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-21-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
83

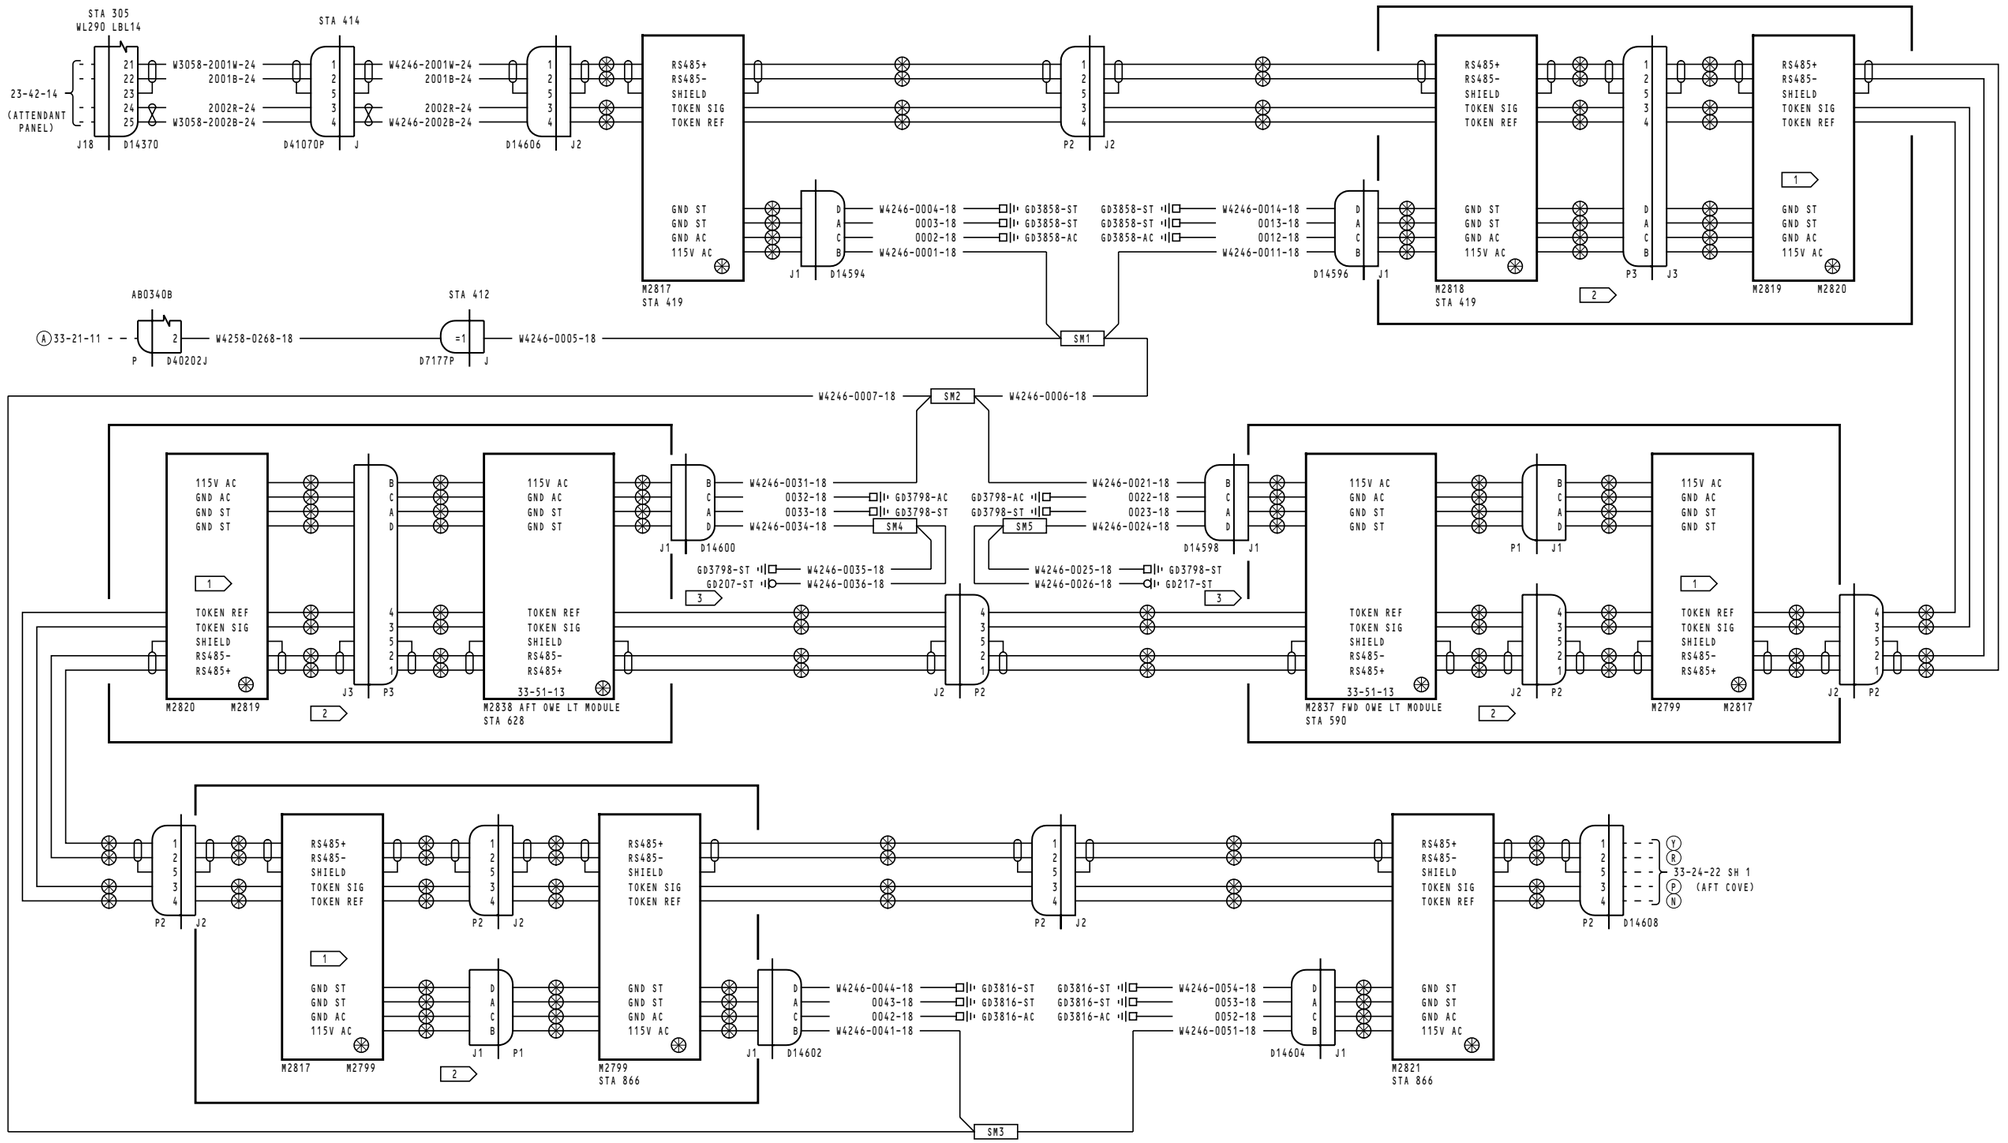


NOTES:

1. INCLUDES MULTIPLE LRUS
2. NO MORE THAN SIX 35 INCH SIDEWALL LIGHTS AND ONE OWE CAN BE DAISY CHAINED - INTERNAL LIGHT TRACE LIMITATION.
3. AC RAIL GROUND

NOTES:

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. TOTAL LENGTH OF GROUND WIRES FROM CONNECTOR TO GROUND BLOCK OR LUG NOT TO EXCEED 7.5 FEET TO SUPPORT EMI REQUIREMENTS.
3. 6V DC ONLY CONNECTED ON M2837 & M2838 EMER LTG FUNC FOR HATCH HANDLE
4. FUSES ARE NOT REPLACEABLE
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

RIGHT SIDE




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-21-12

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL



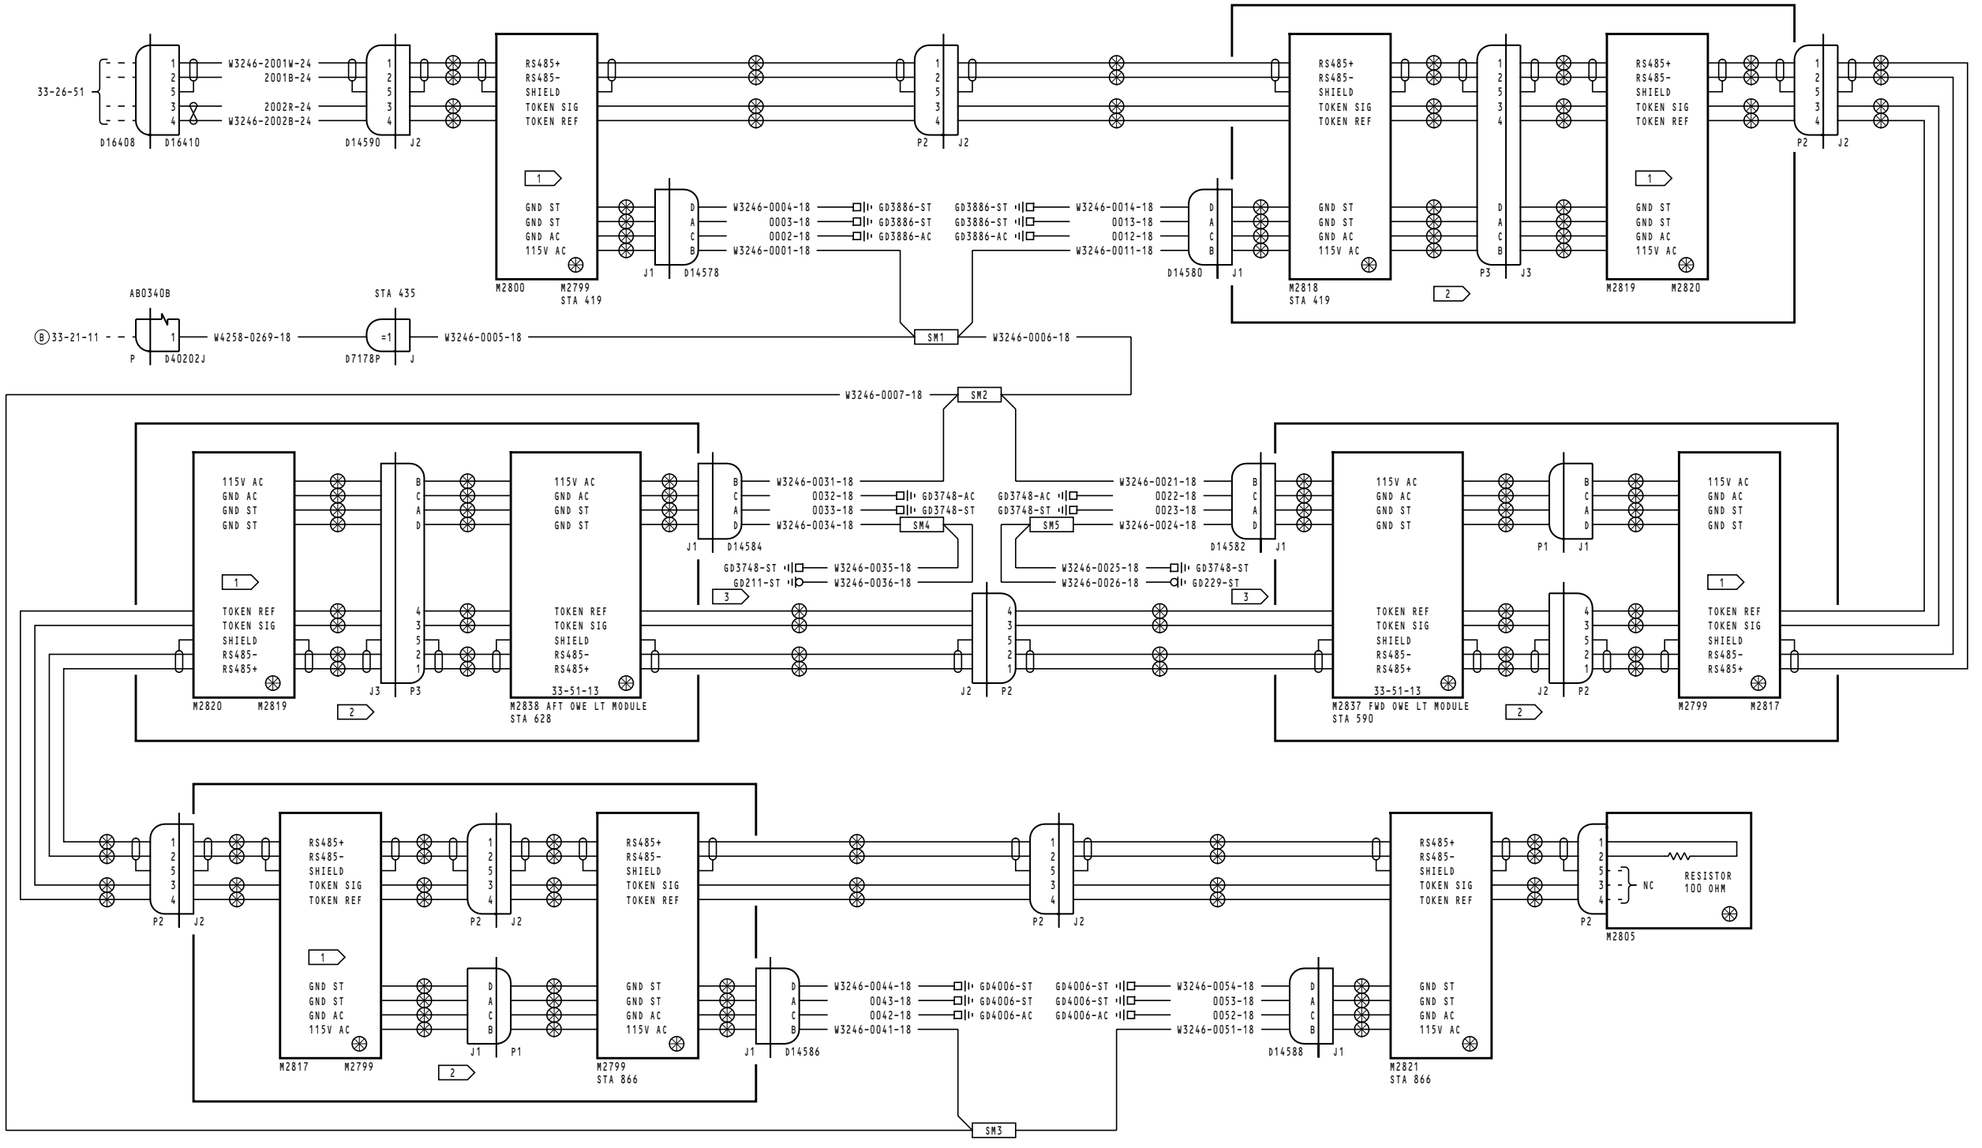


NOTES:

1. INCLUDES MULTIPLE LRUS
2. NO MORE THAN SIX 35 INCH SIDEWALL LIGHTS AND ONE OWE CAN BE DAISY CHAINED - INTERNAL LIGHT TRACE LIMITATION.
3. AC RAIL GROUND

NOTES:

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. TOTAL LENGTH OF GROUND WIRES FROM CONNECTOR TO GROUND BLOCK OR LUG NOT TO EXCEED 7.5 FEET TO SUPPORT EMI REQUIREMENTS.
3. 6V DC ONLY CONNECTED ON M2837 & M2838 EMER LTG FUNC FOR HATCH HANDLE
4. FUSES ARE NOT REPLACEABLE
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

LEFT SIDE




33-21-12

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
97

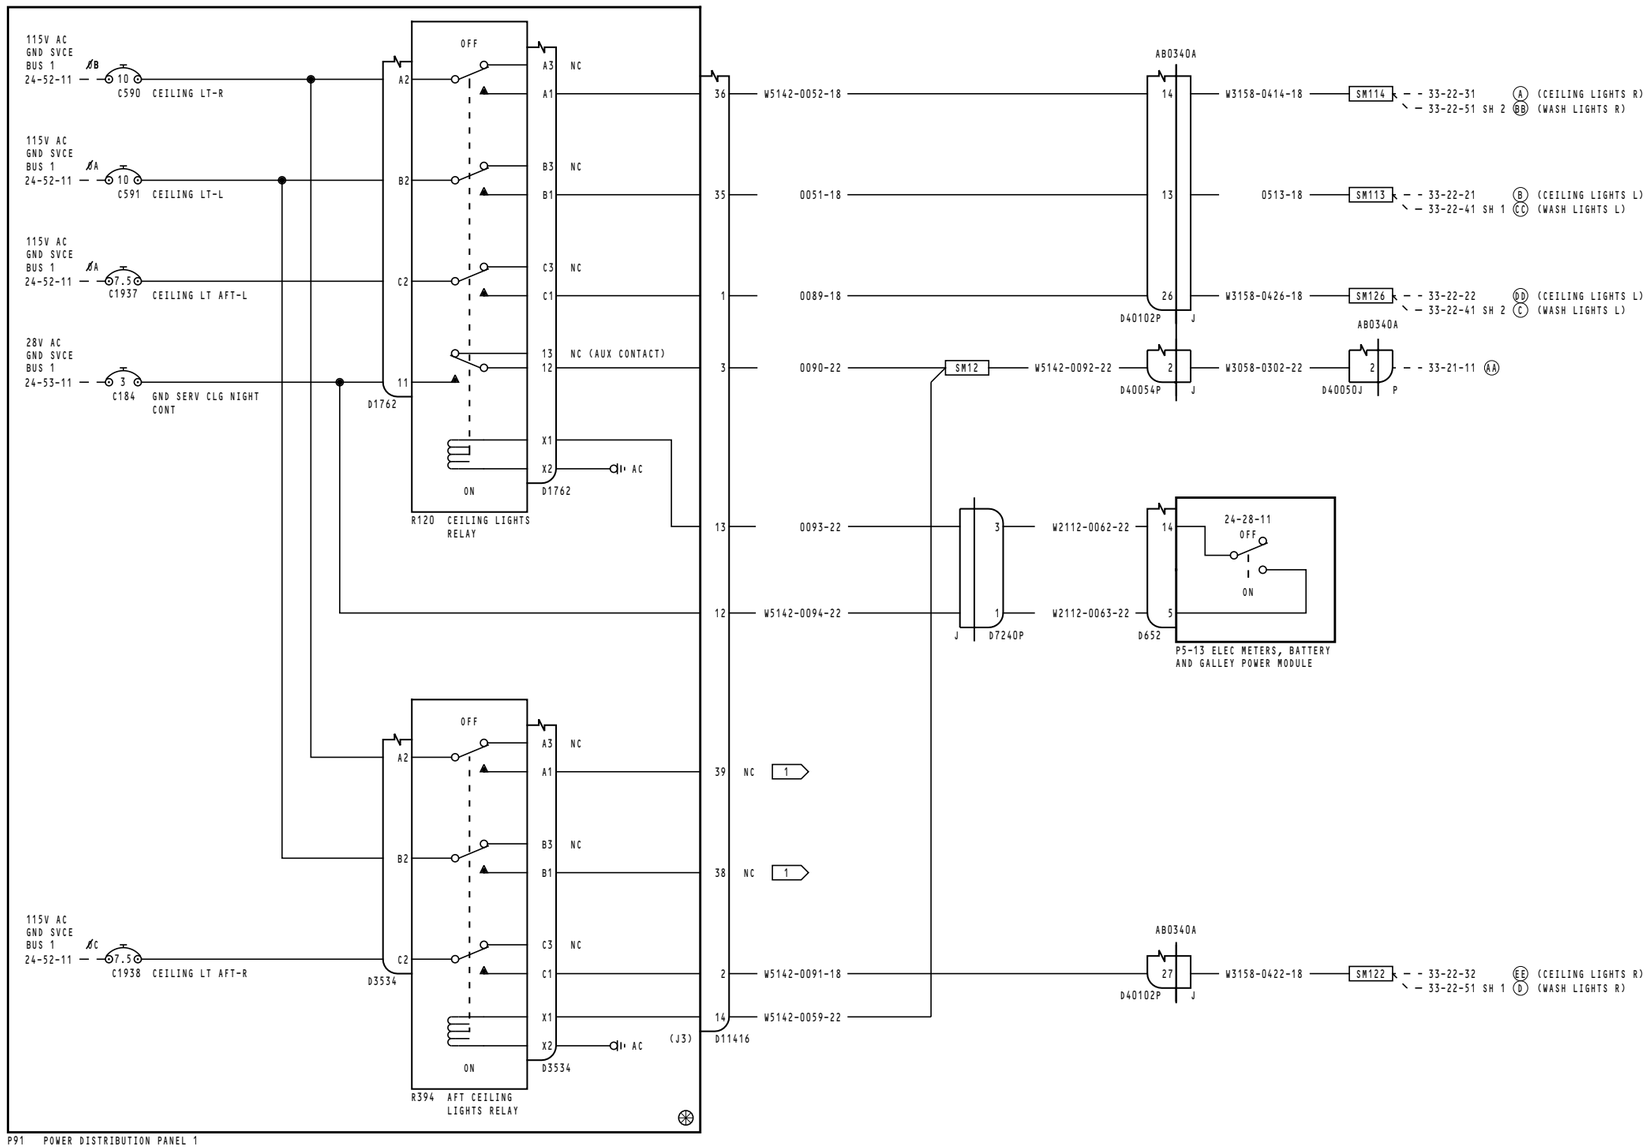


NOTES:

1 RESERVED FOR FLOURESCENT LIGHTING.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-22-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL



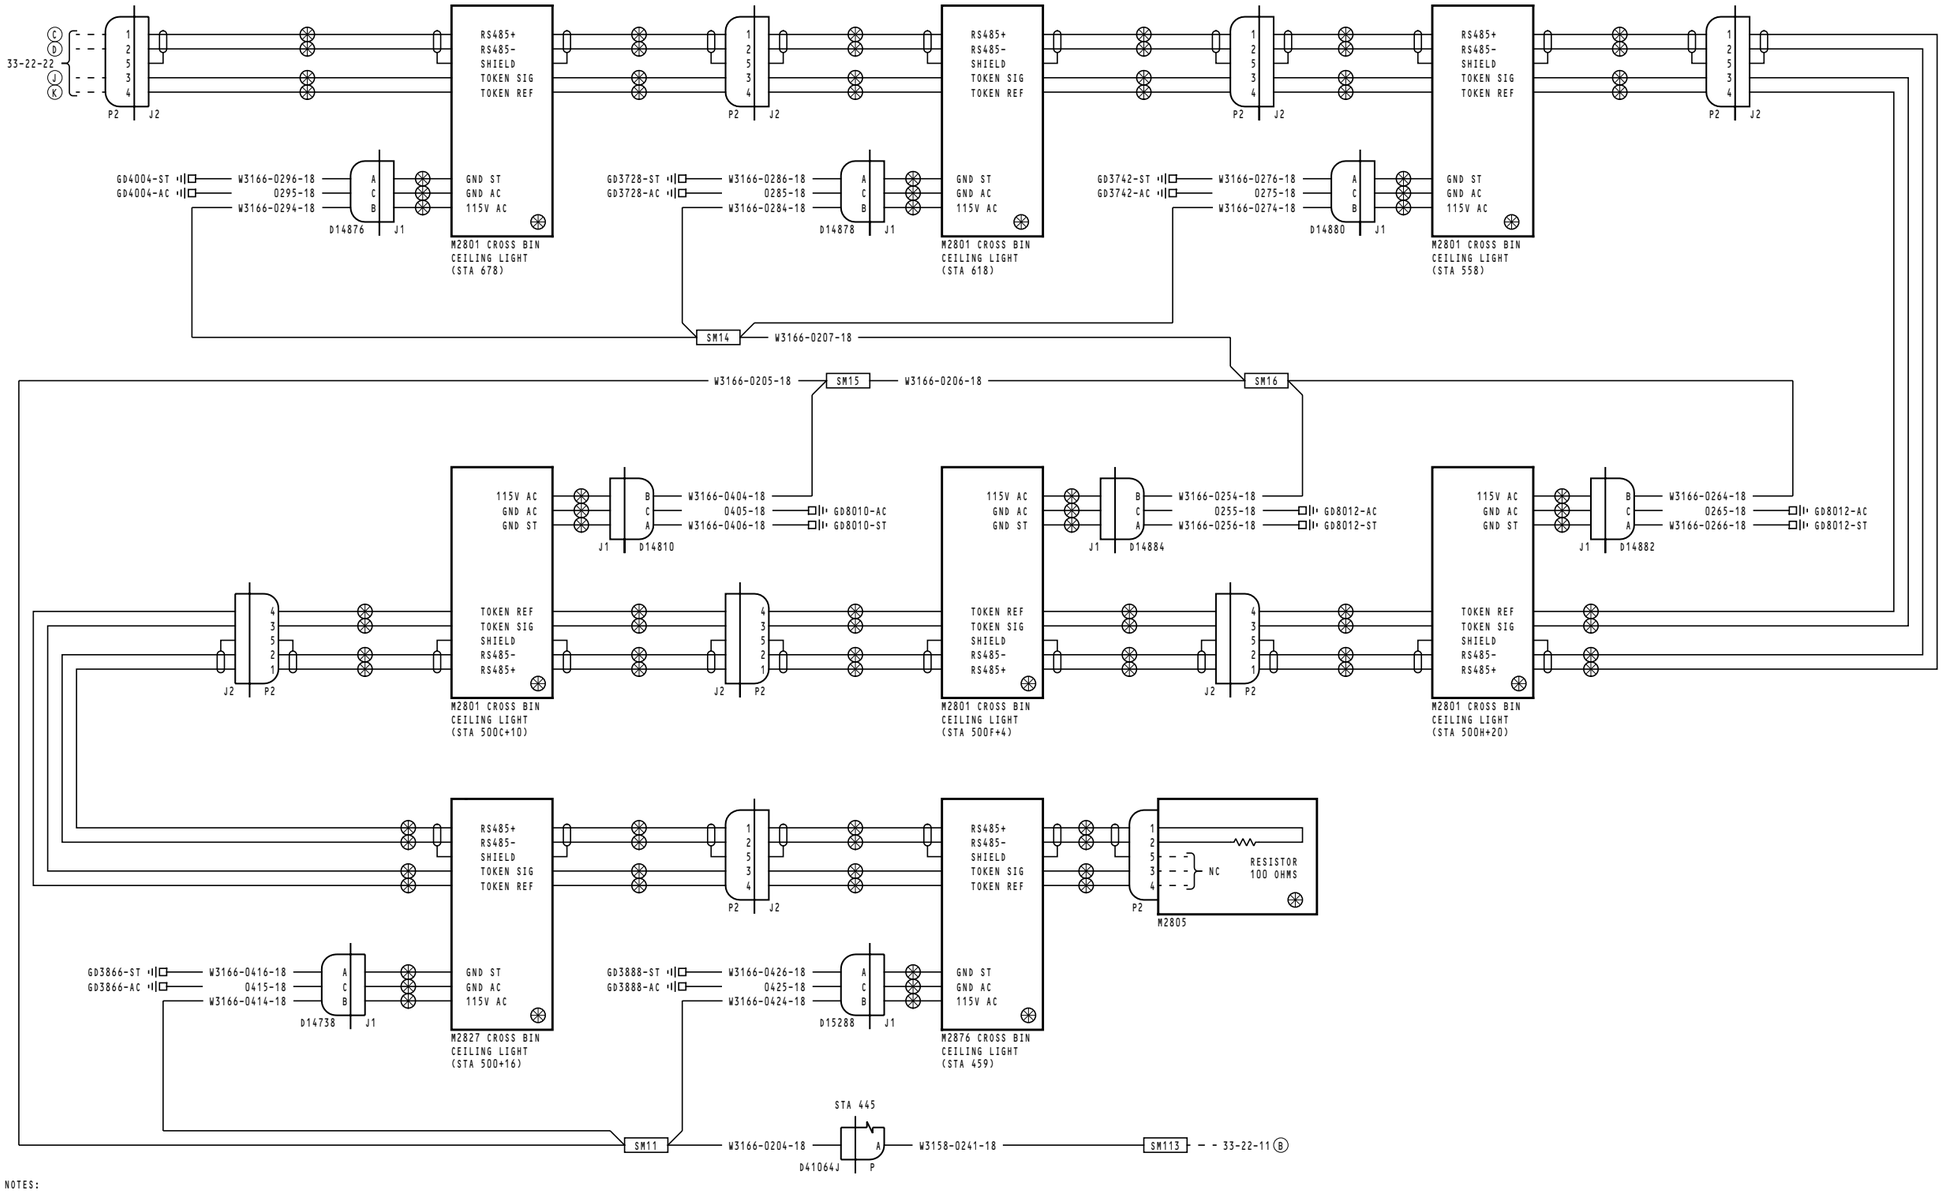


NOTES:

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

CROSS BIN LIGHTS, LEFT SIDE, FWD




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-22-21

Page 1

May 15/2024

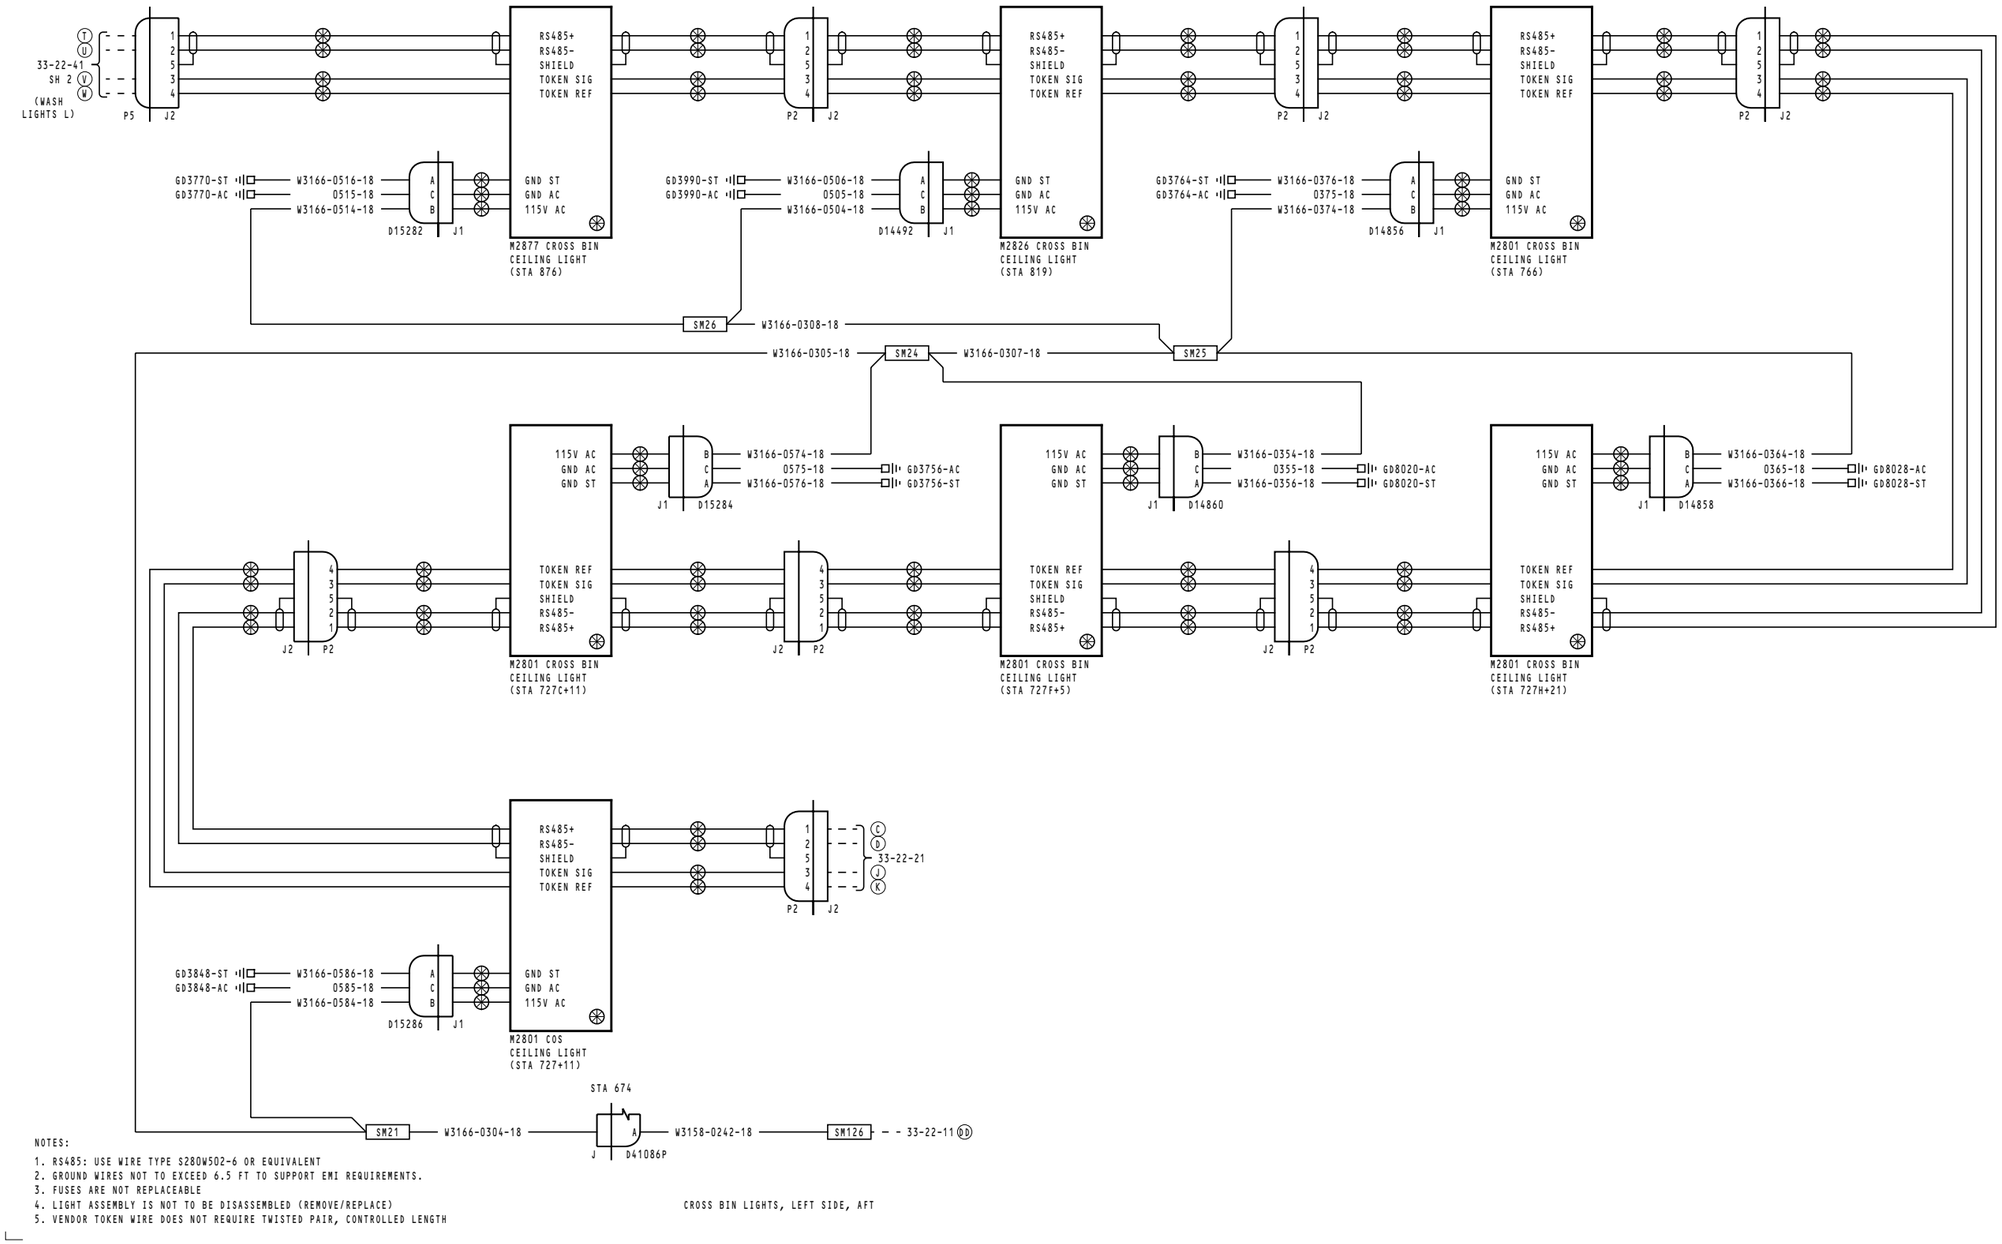




33-22-22


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL



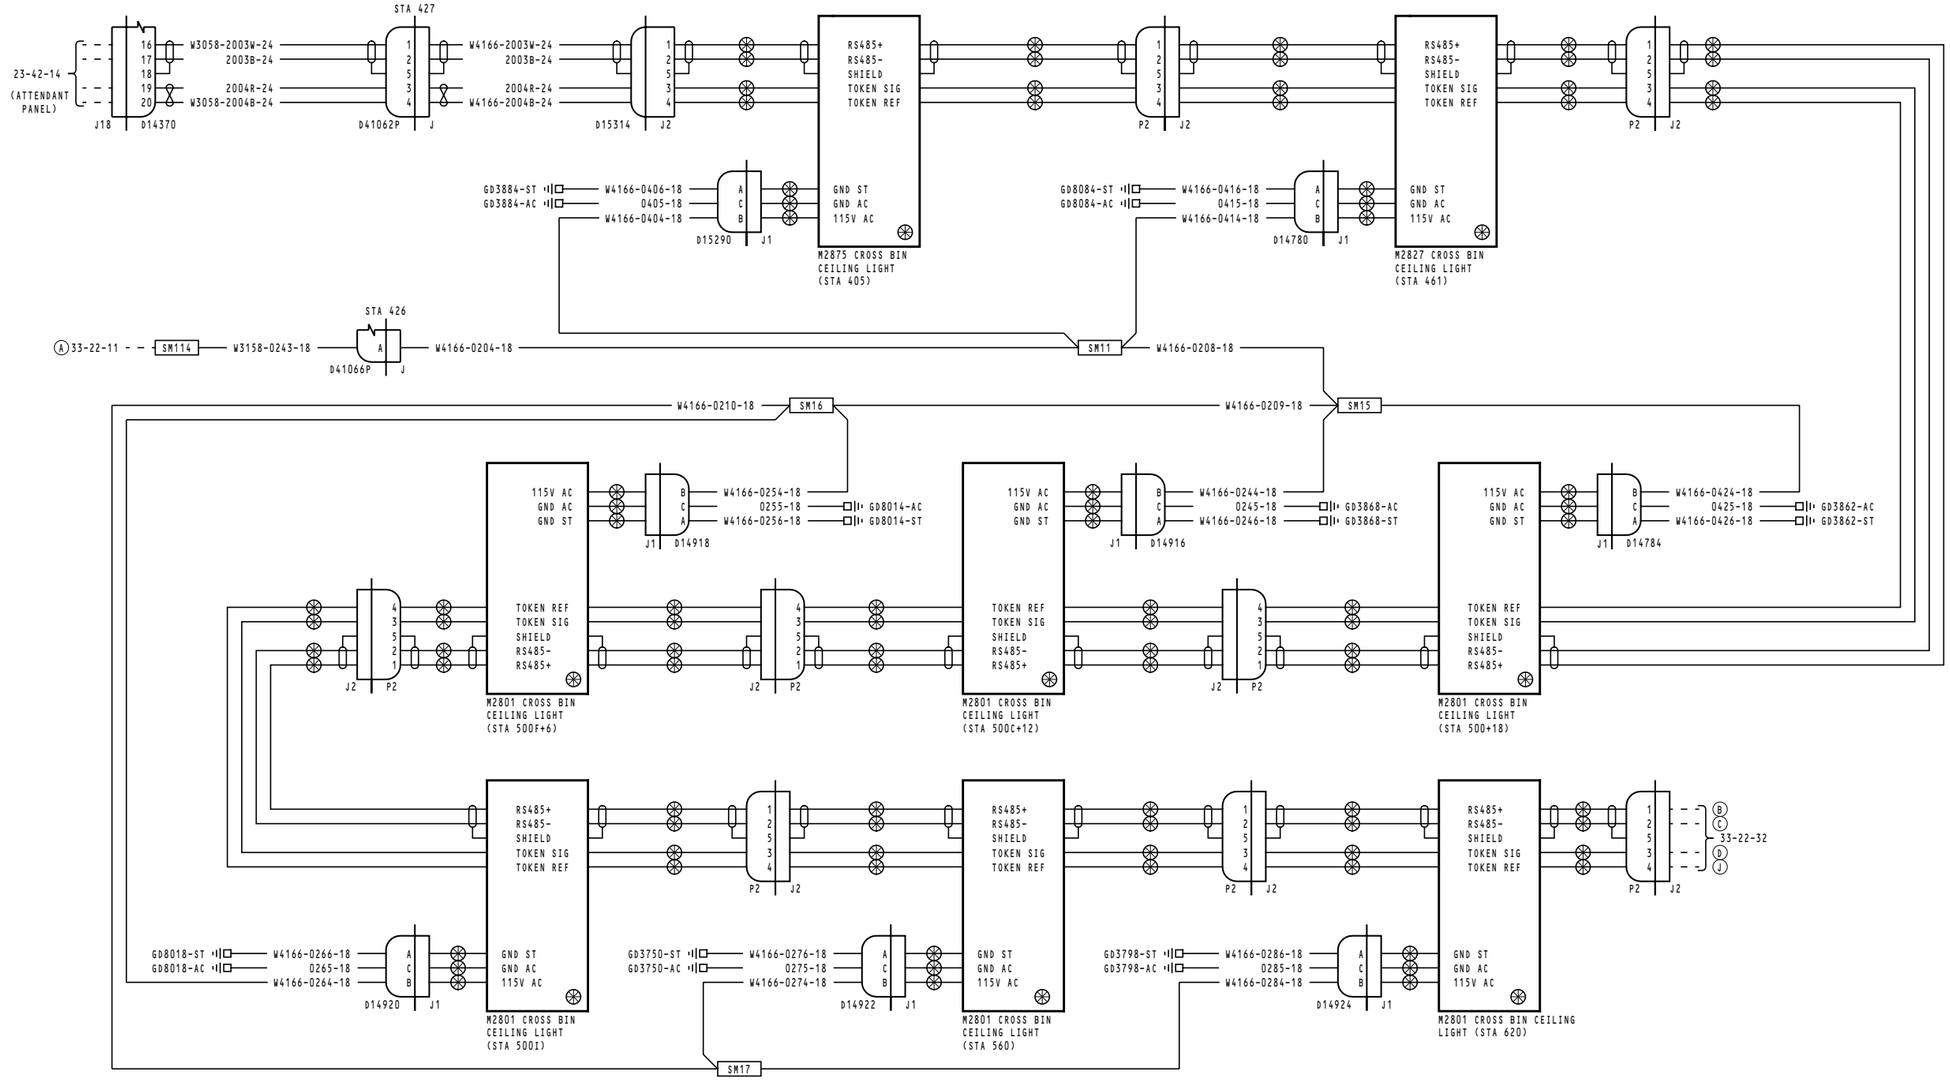


NOTES:

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

CROSS BIN LIGHTS, RIGHT SIDE, FWD




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-22-31

Page 1


May 15/2024

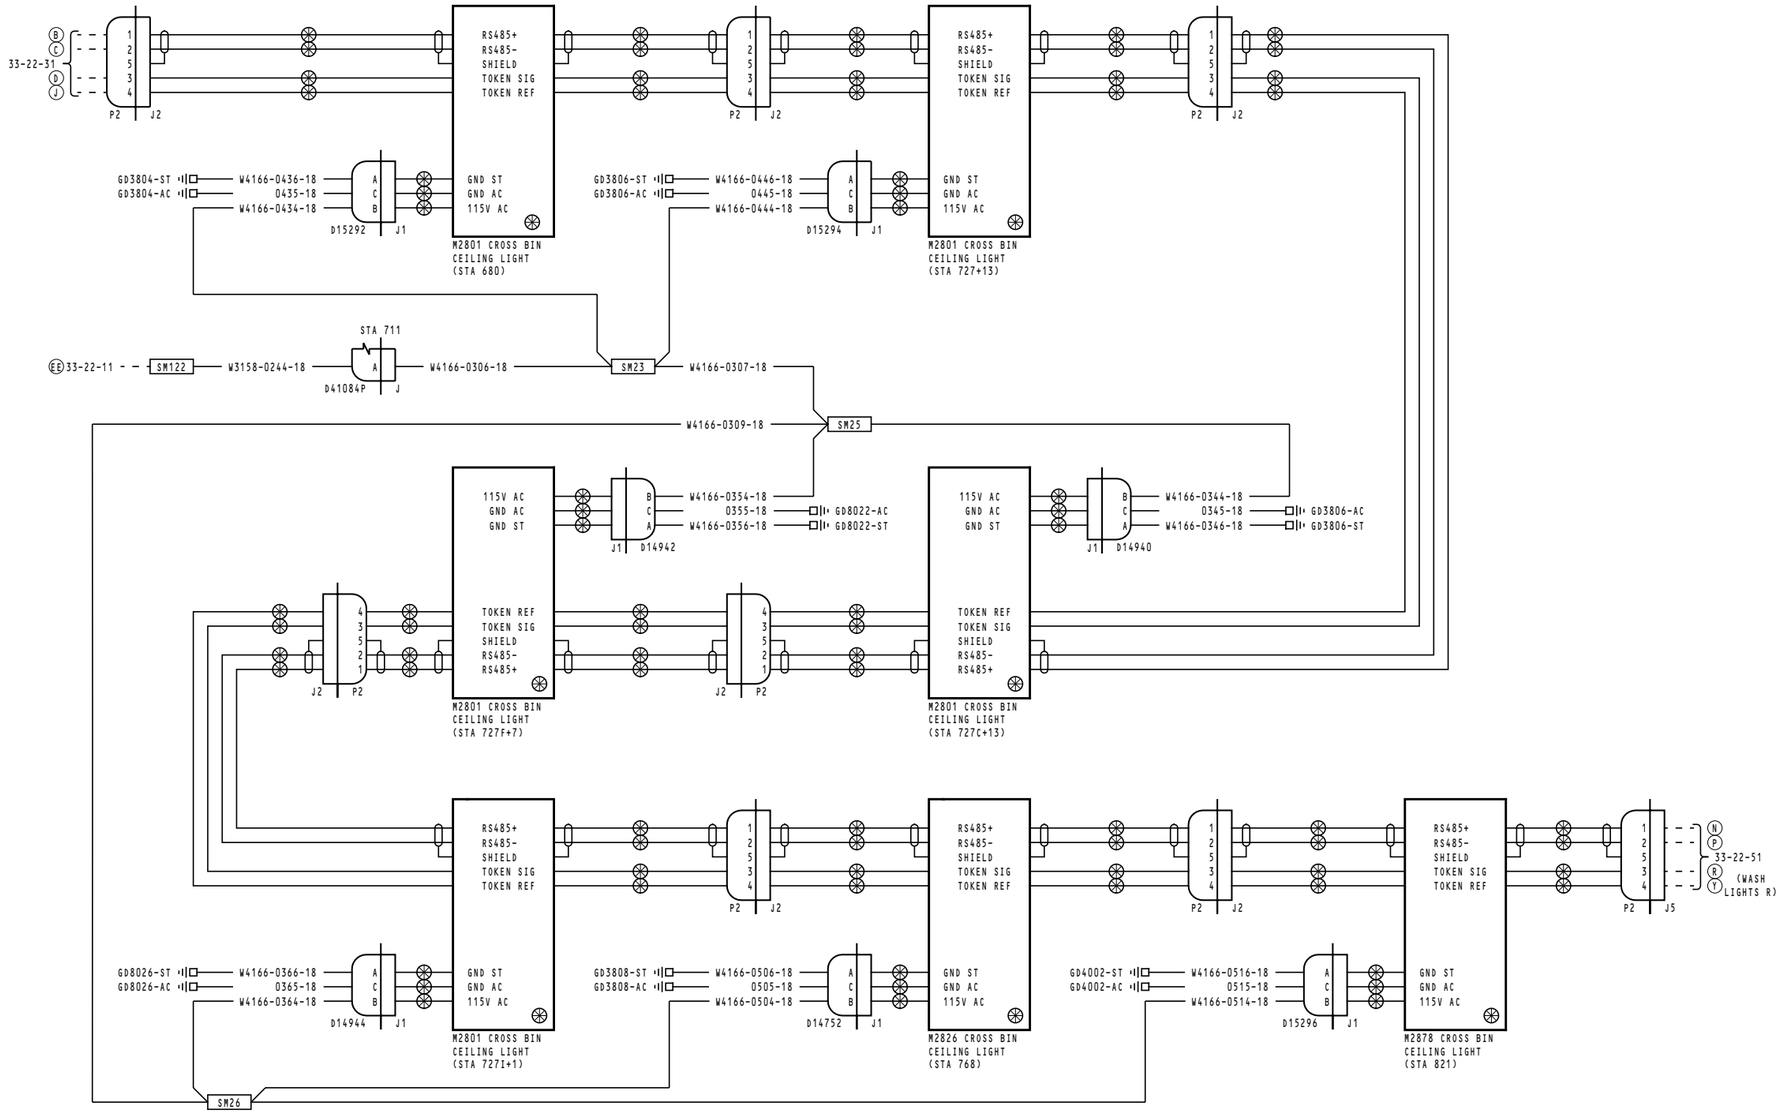


NOTES:

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

CROSS BIN LIGHTS, RIGHT SIDE, AFT

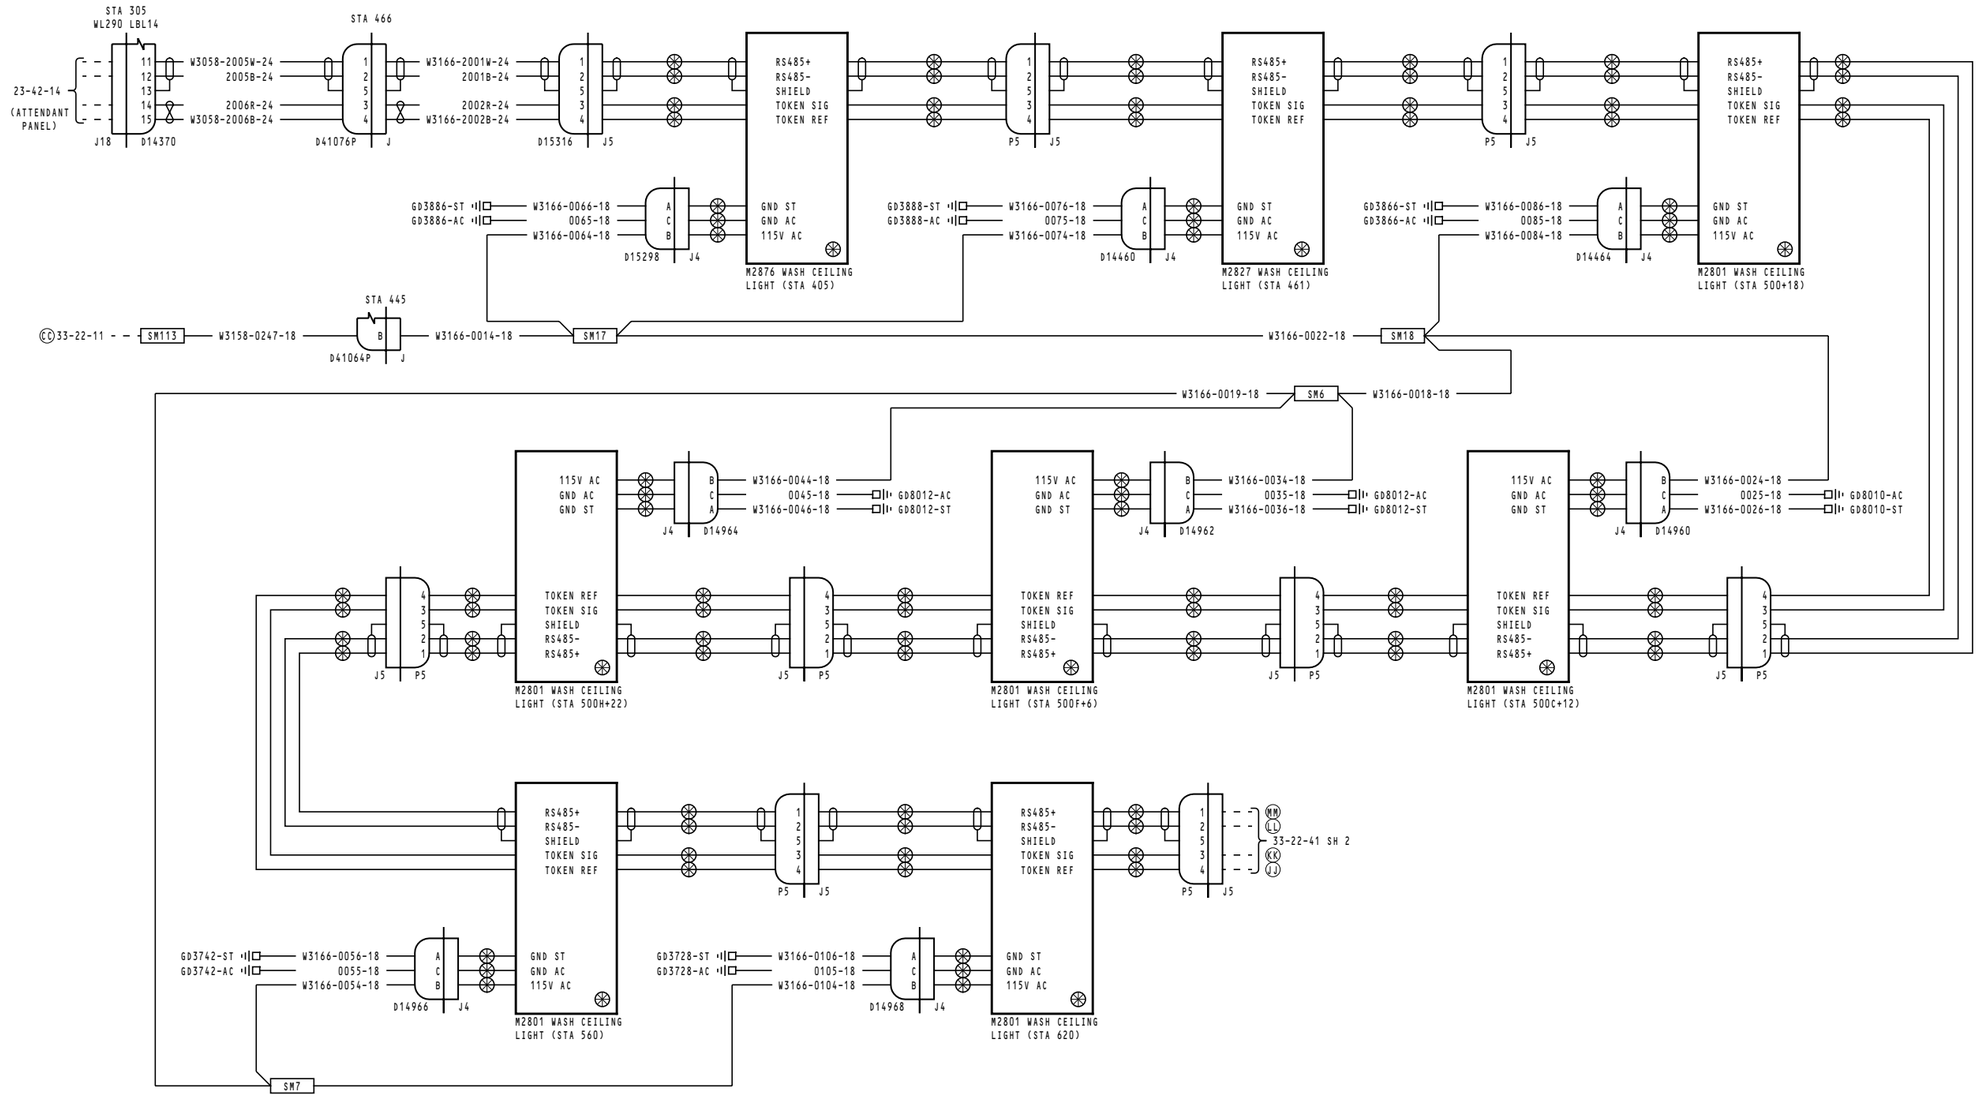


NOTES:
1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

WASH LIGHTS, LEFT SIDE, FWD




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-22-41

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

18

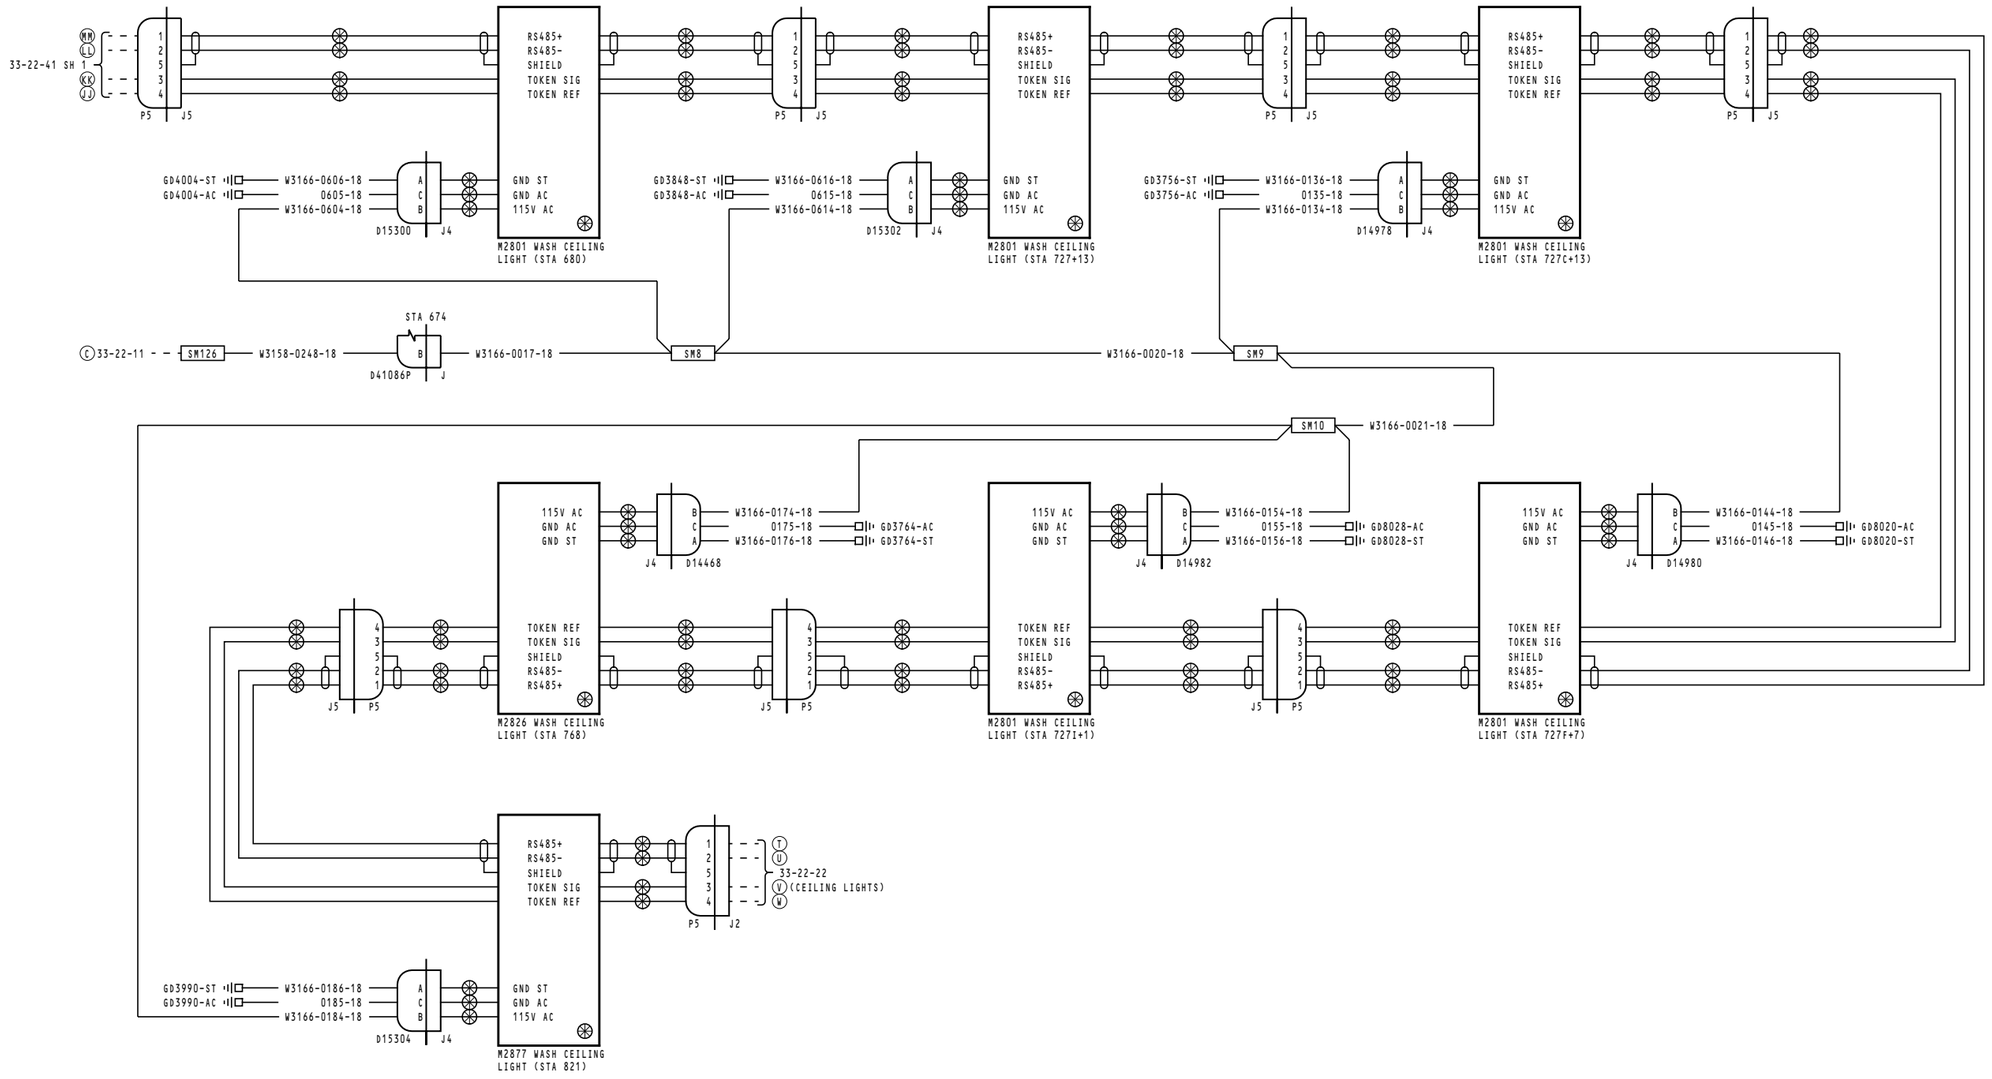


NOTES:

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

WASH LIGHTS, LEFT SIDE, AFT




33-22-41

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

22

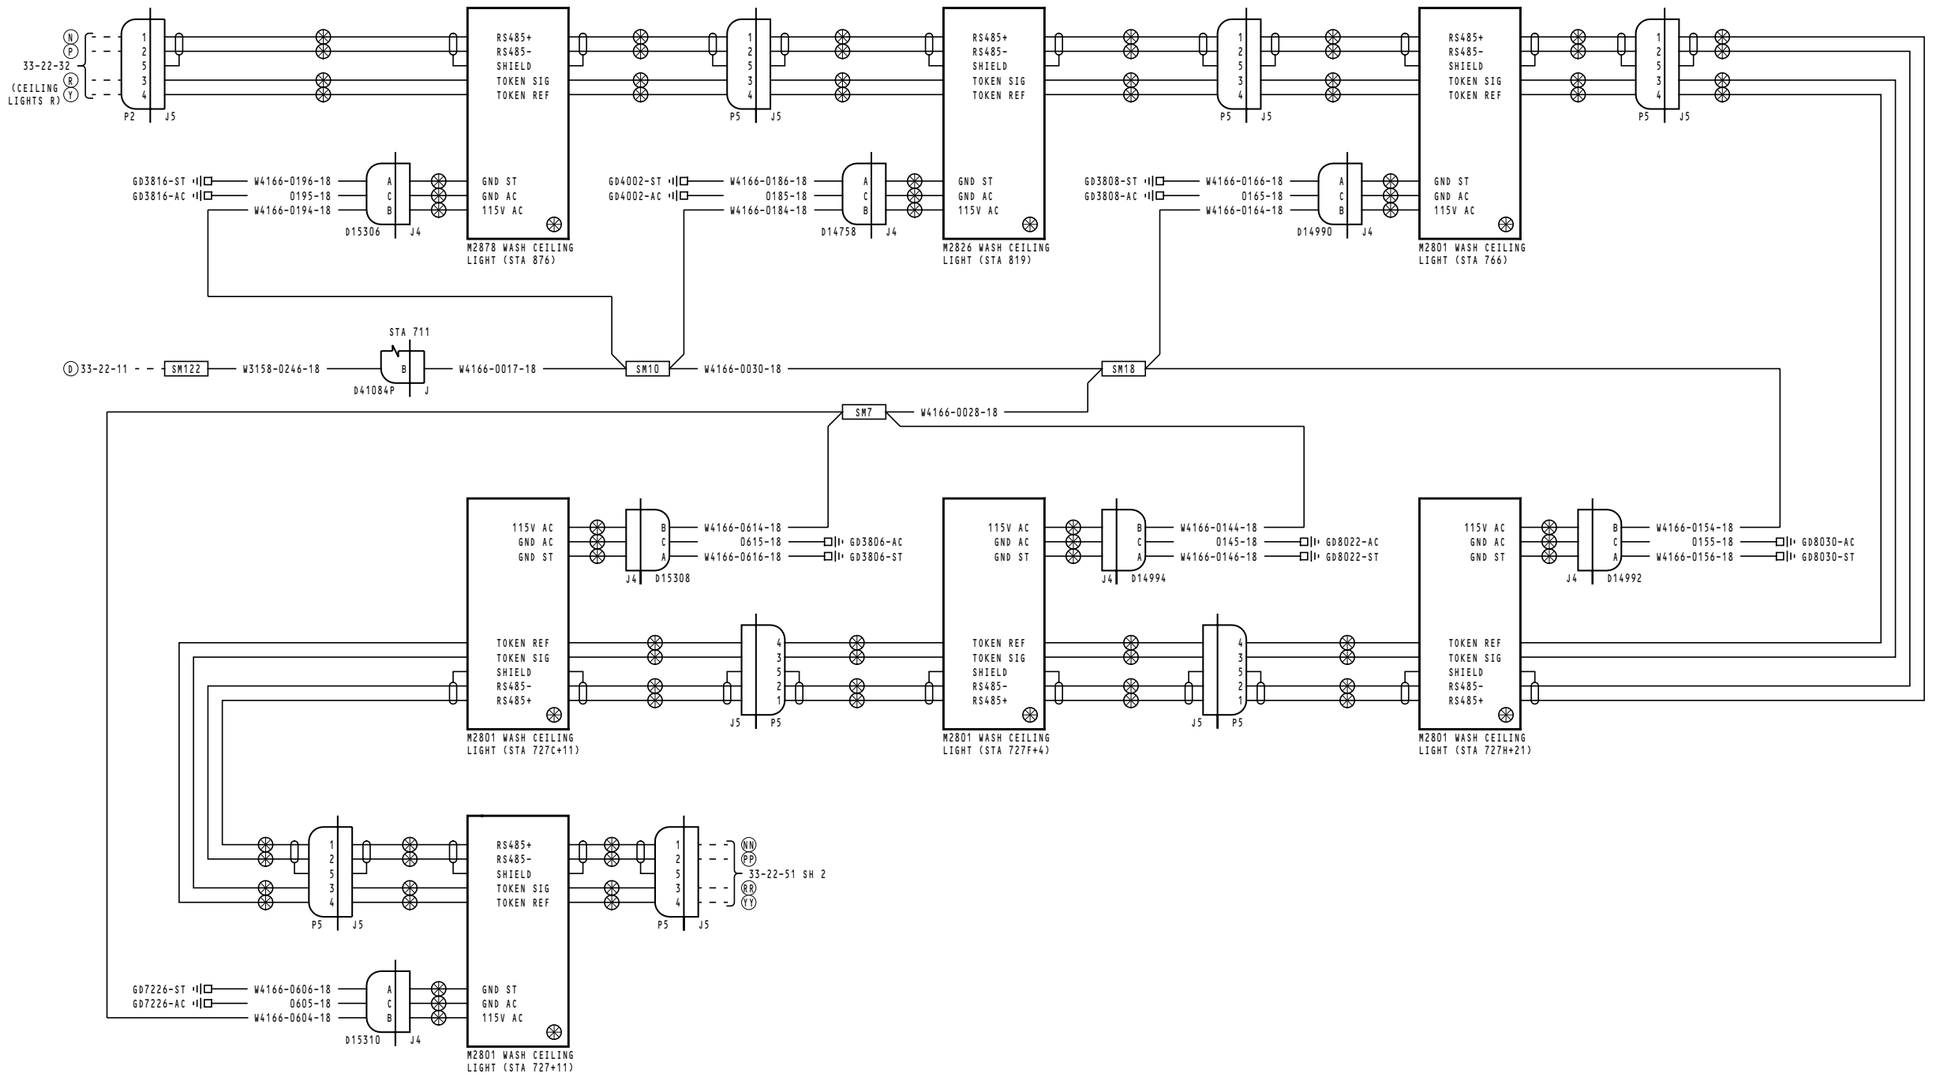


NOTES:
1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

WASH LIGHTS, RIGHT SIDE, AFT

ALL

CEILING WASH LIGHTS-RIGHT

D280AM1215

33-22-51

Page 1
Sheet 1
May 15/2024


33-22-51

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

20

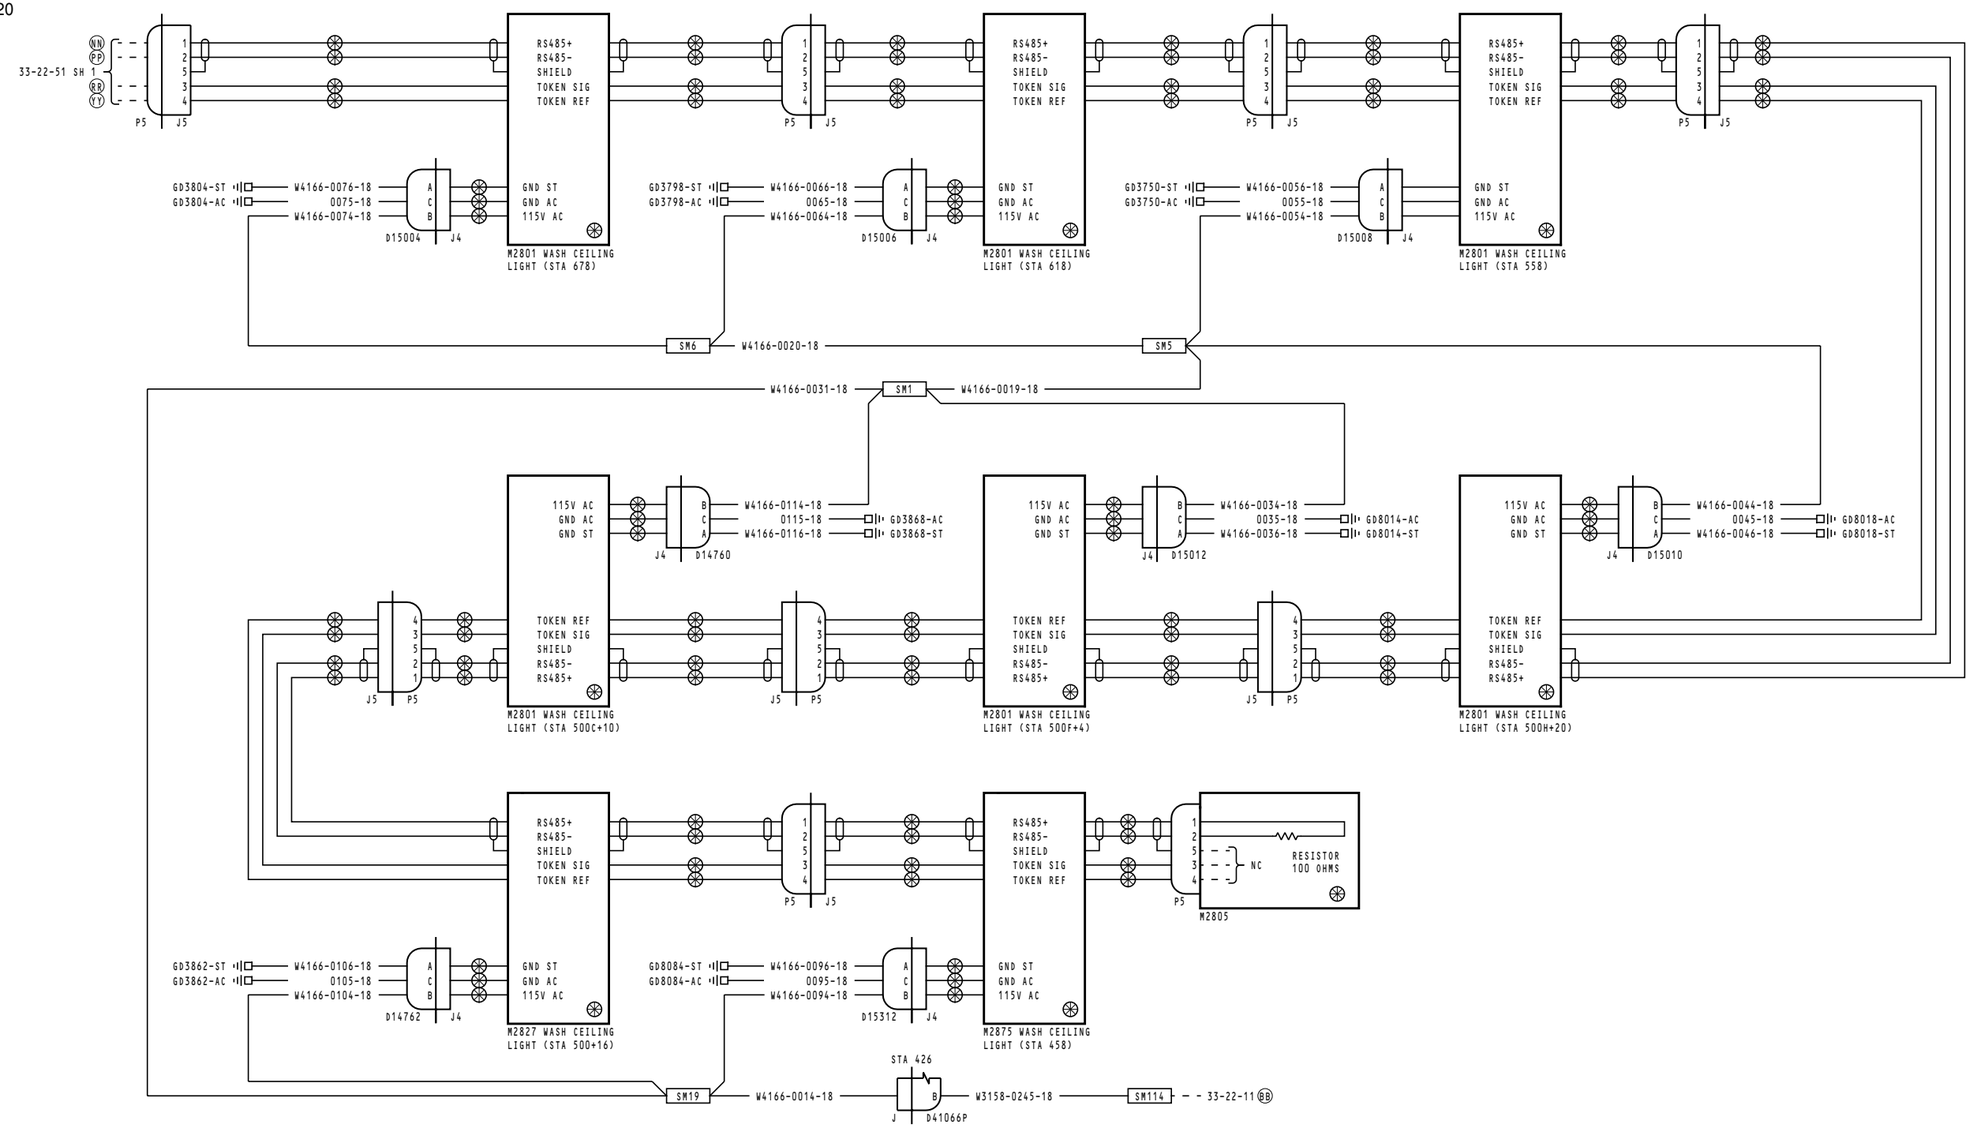


**NOTES:**

1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. GROUND WIRES NOT TO EXCEED 6.5 FT TO SUPPORT EMI REQUIREMENTS.
3. FUSES ARE NOT REPLACEABLE
4. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
5. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

WASH LIGHTS, RIGHT SIDE, FWD




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-22-51

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

11

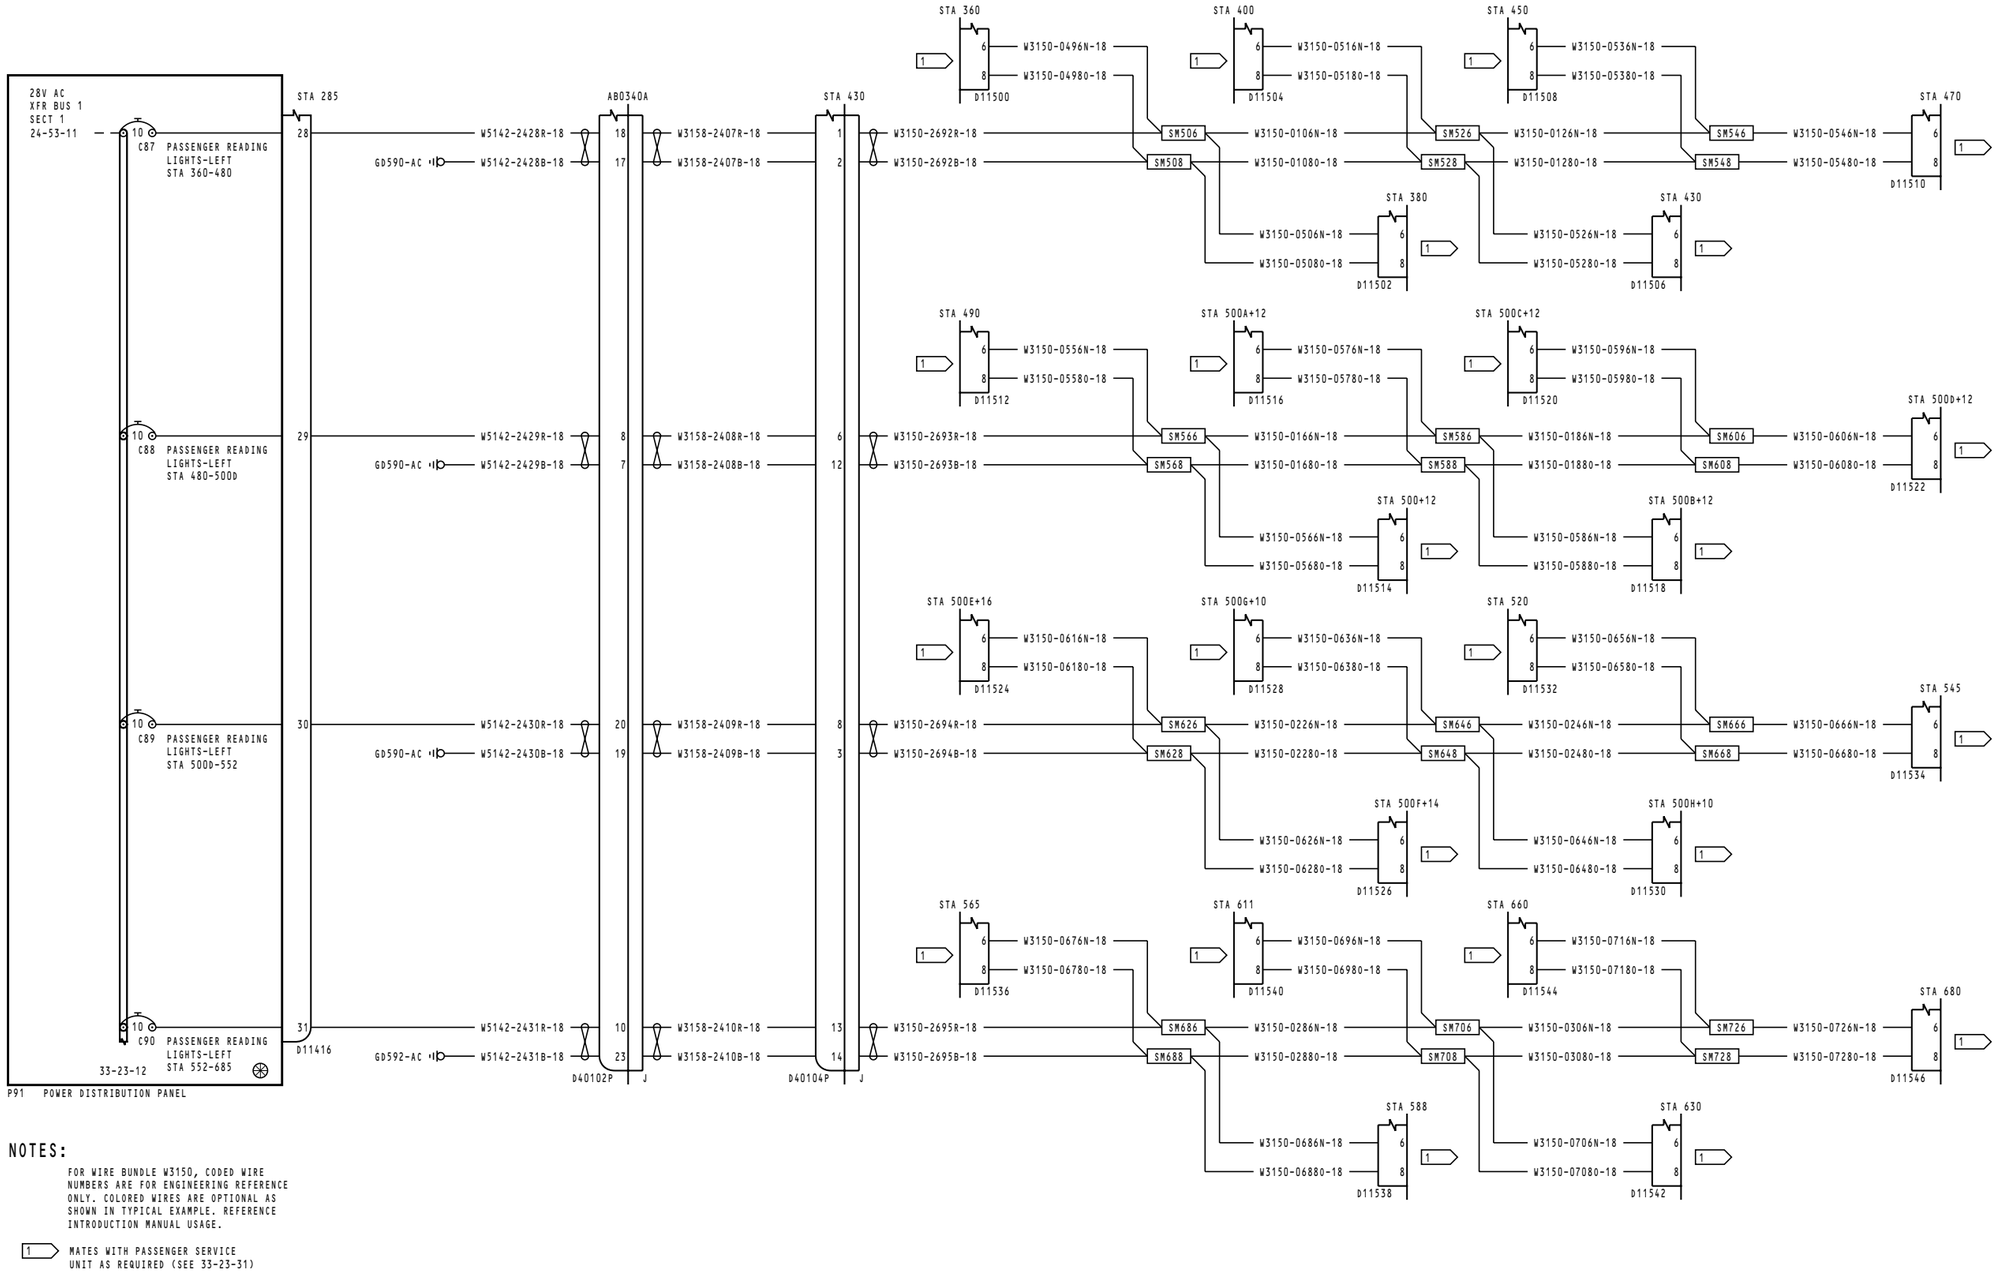


NOTES:

FOR WIRE BUNDLE W315D, CODED WIRE NUMBERS ARE FOR ENGINEERING REFERENCE ONLY. COLORED WIRES ARE OPTIONAL AS SHOWN IN TYPICAL EXAMPLE. REFERENCE INTRODUCTION MANUAL USAGE.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED (SEE 33-23-31)




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-23-11

Page 1

May 15/2024

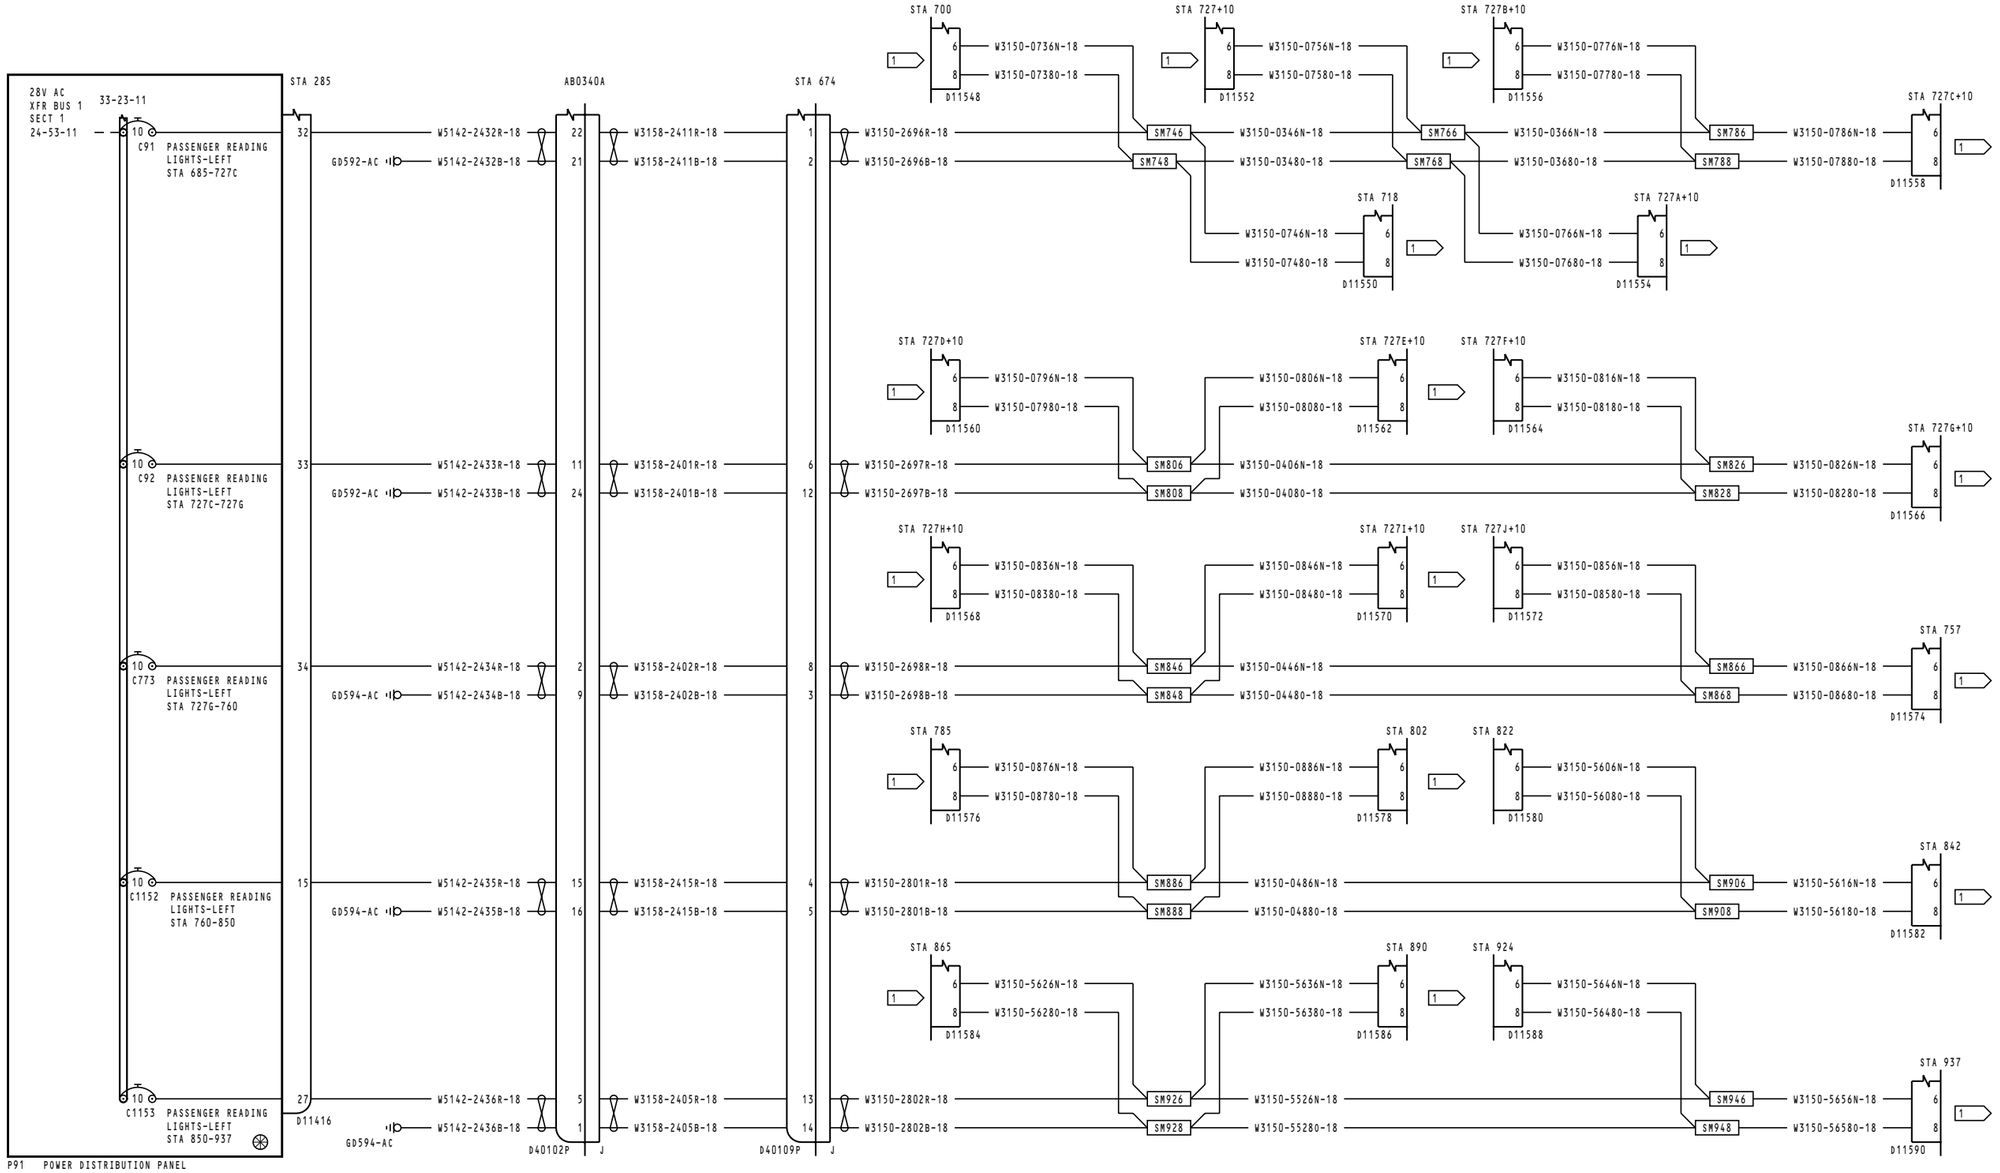



NOTES: FOR WIRE BUNDLE W3150, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES FOR THIS BUNDLE ONLY.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-23-31)

737-8 WIRING DIAGRAM MANUAL



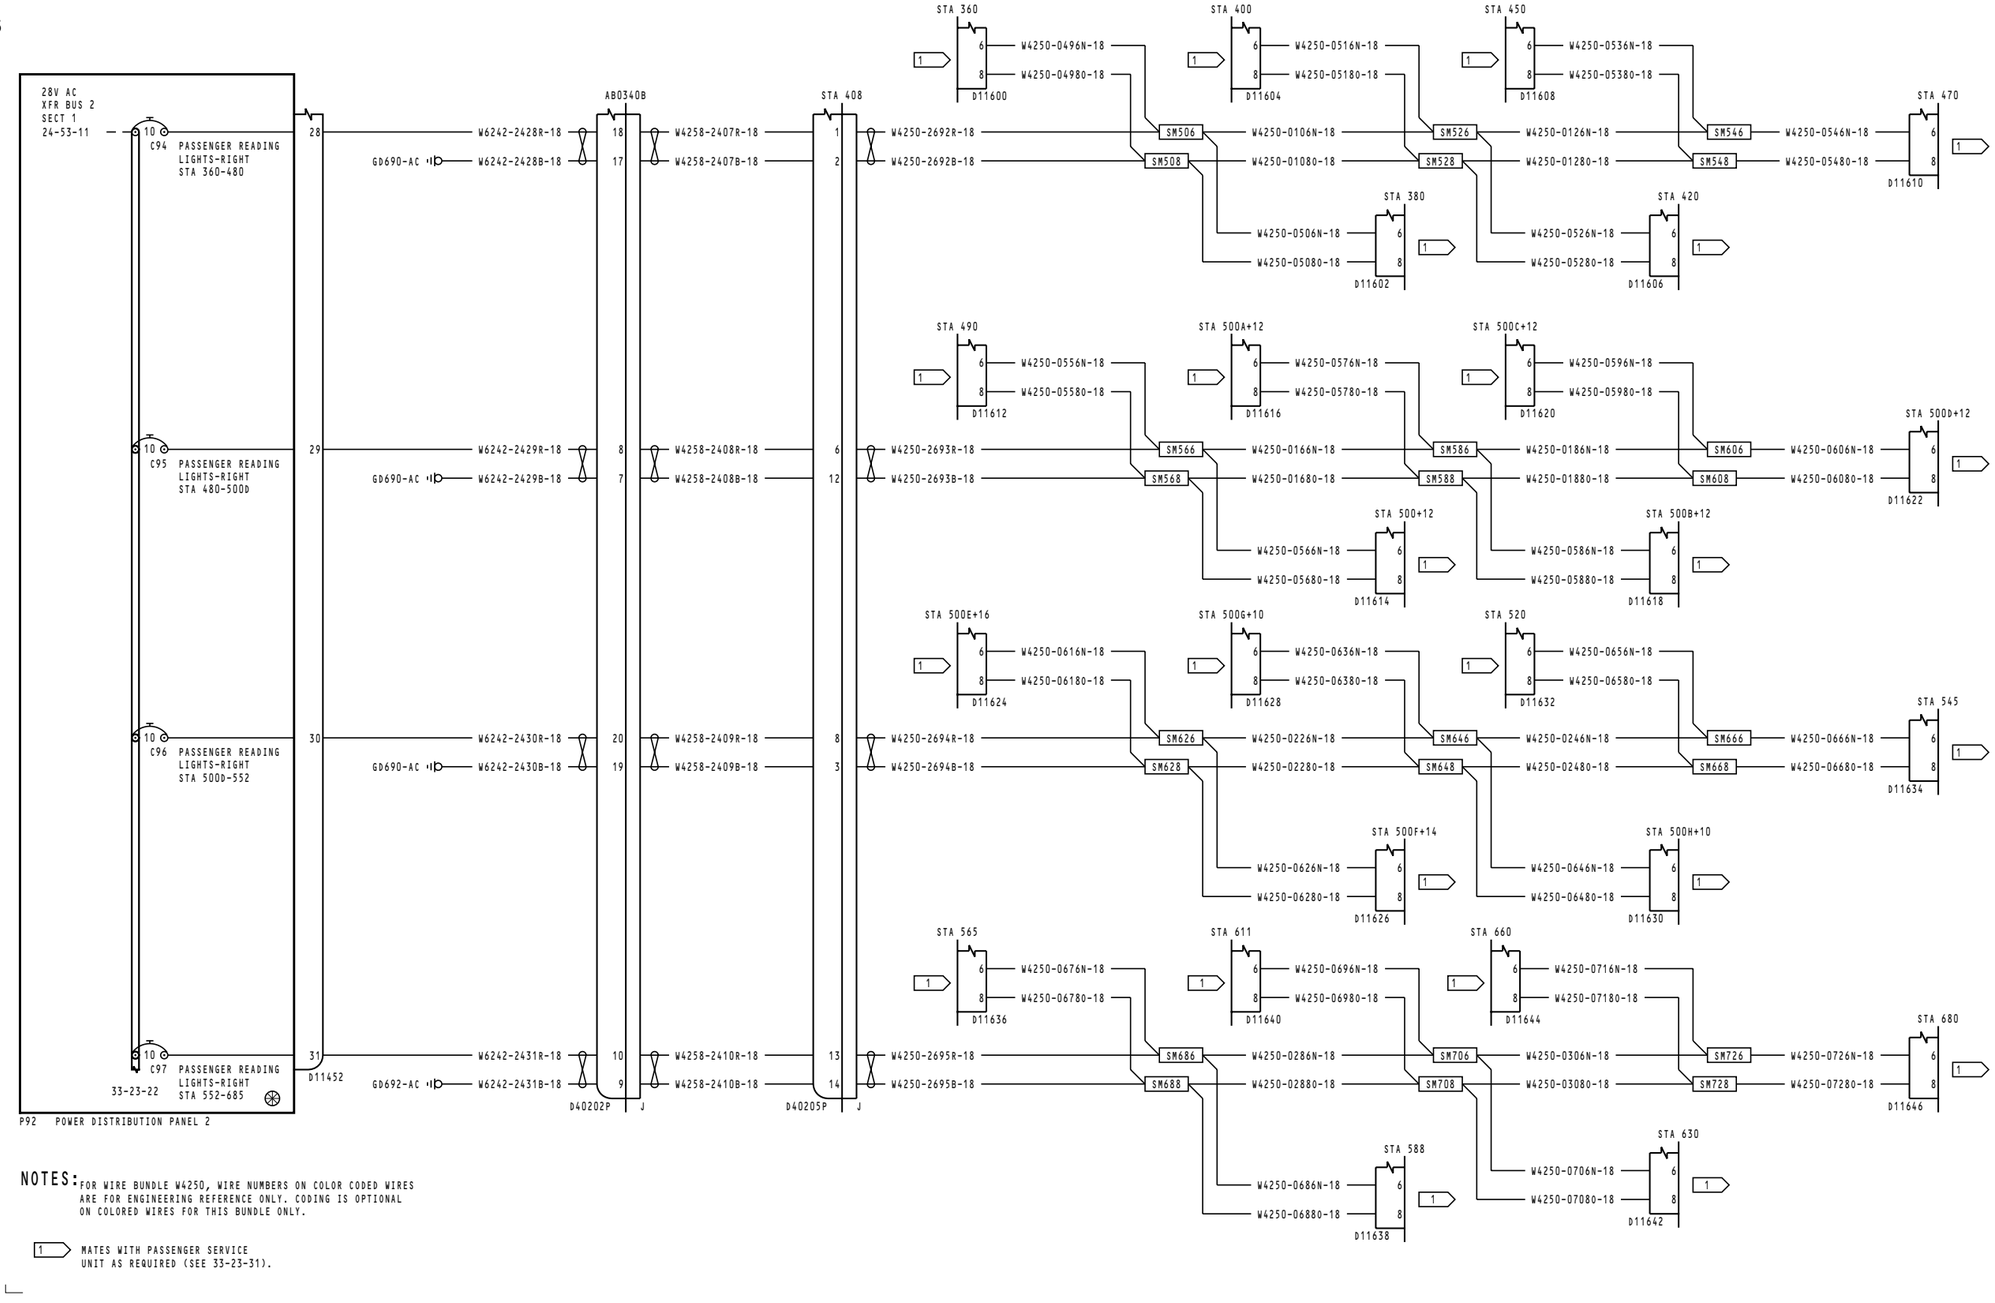


NOTES: FOR WIRE BUNDLE W4250, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES FOR THIS BUNDLE ONLY.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED (SEE 33-23-31).



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-23-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

15

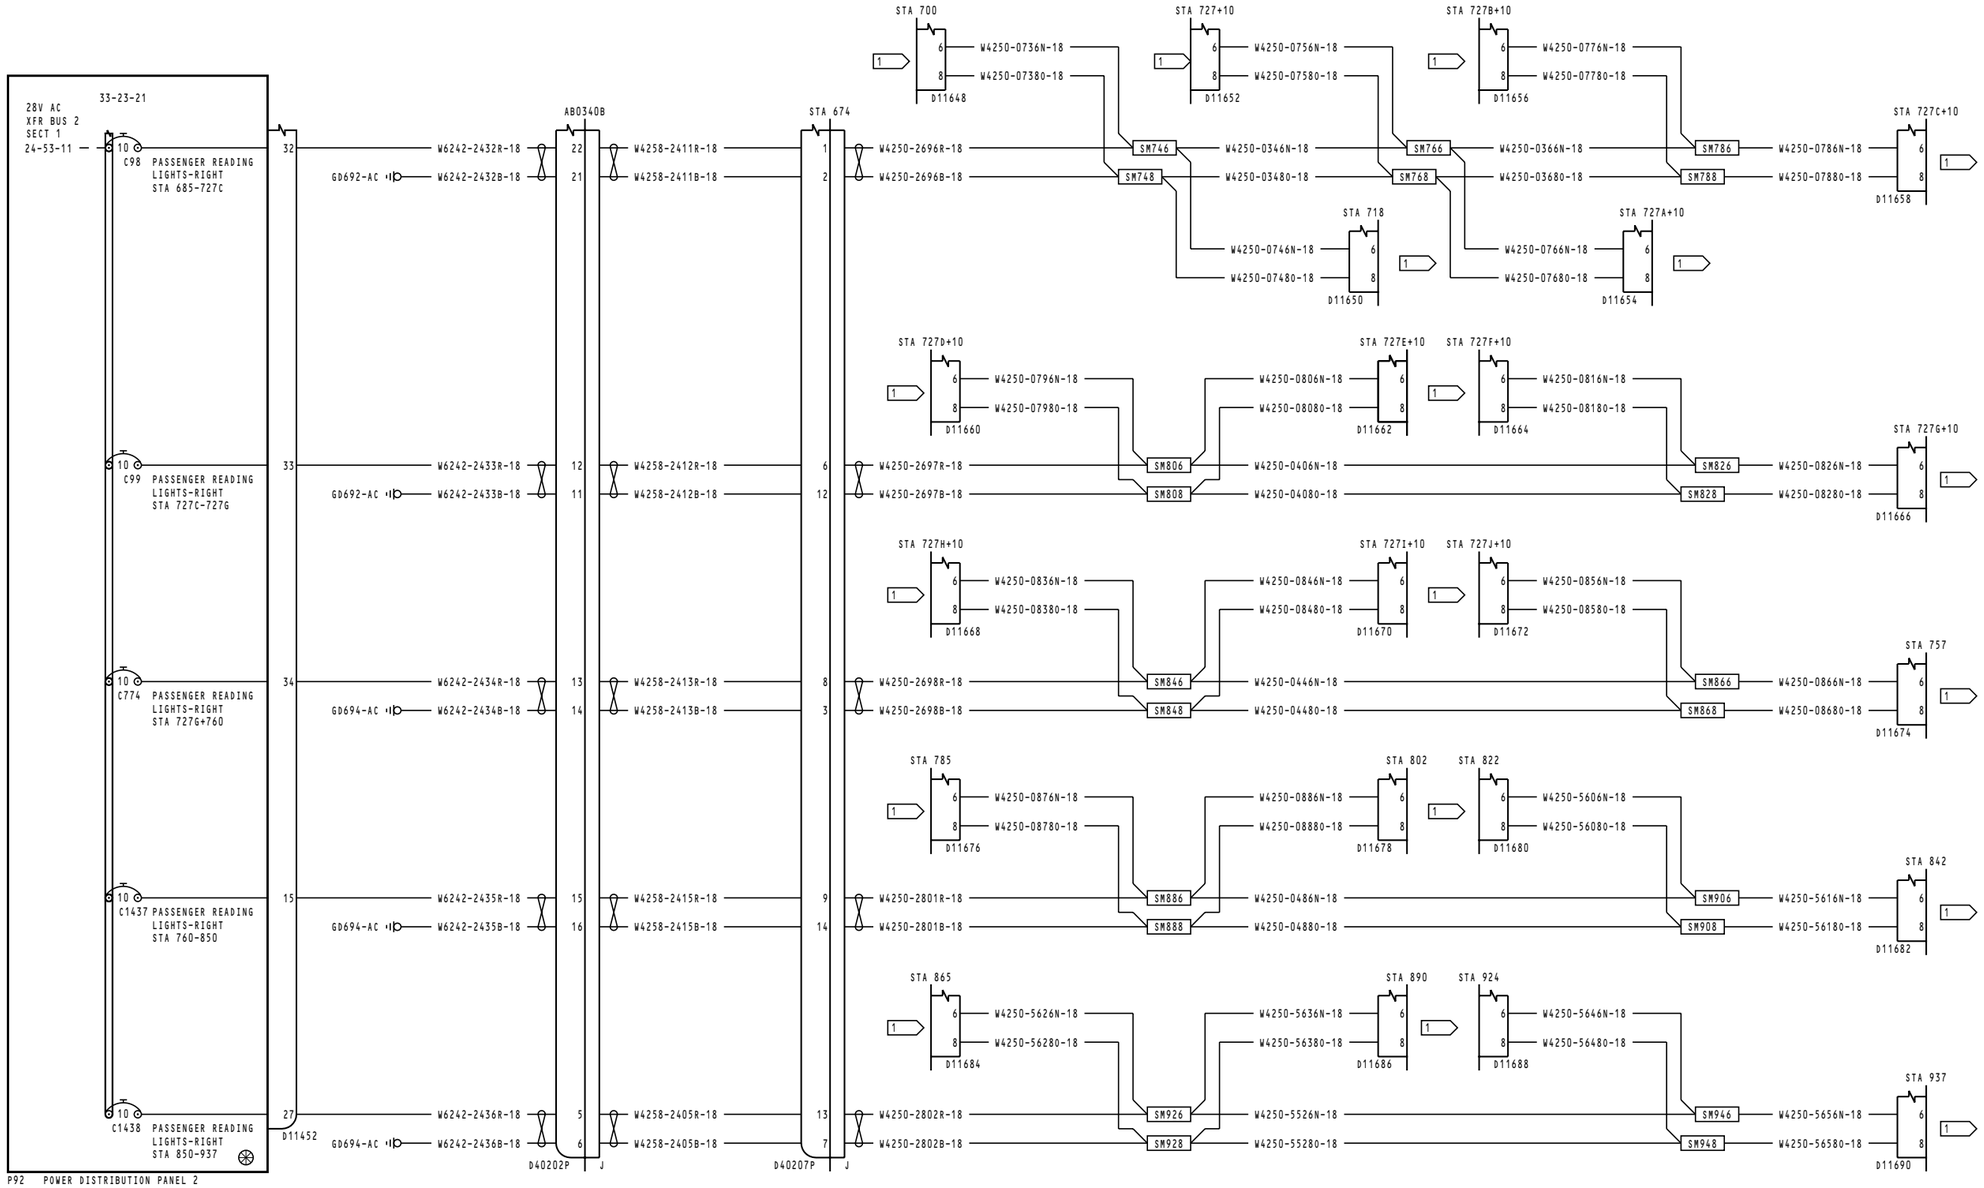


NOTES:
FOR WIRE BUNDLE W4250, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES FOR THIS BUNDLE ONLY.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED.(SEE 33-23-31)



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-23-22

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

8

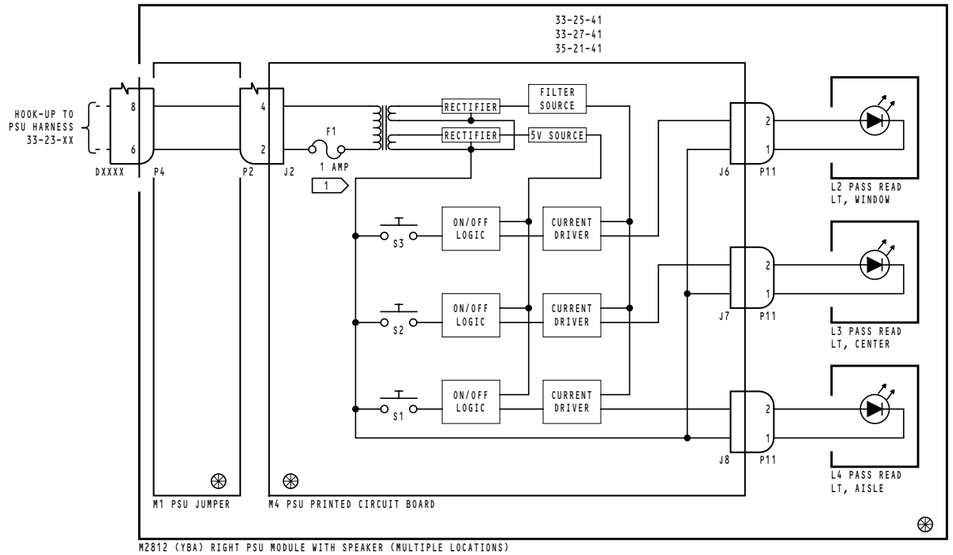


M2812 (YBA) RIGHT PSU MODULE WITH SPEAKER (MULTIPLE LOCATIONS)
M2884 (YBD) LEFT PSU MODULE WITH SPEAKER (MULTIPLE LOCATIONS)

NOTES:

1 FUSE IS REPLACEABLE



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-23-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
8

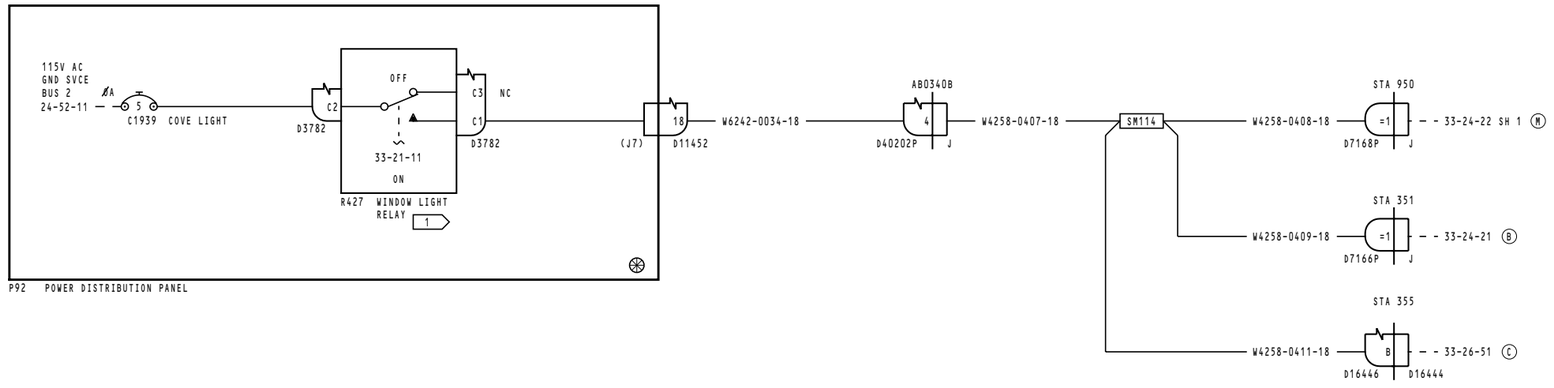


NOTES:

1 LEGACY RELAY NAME USED FOR NEW SYSTEM

ALL

COVE LIGHTS CONTROL

D280AM1215

33-24-11

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-24-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
5

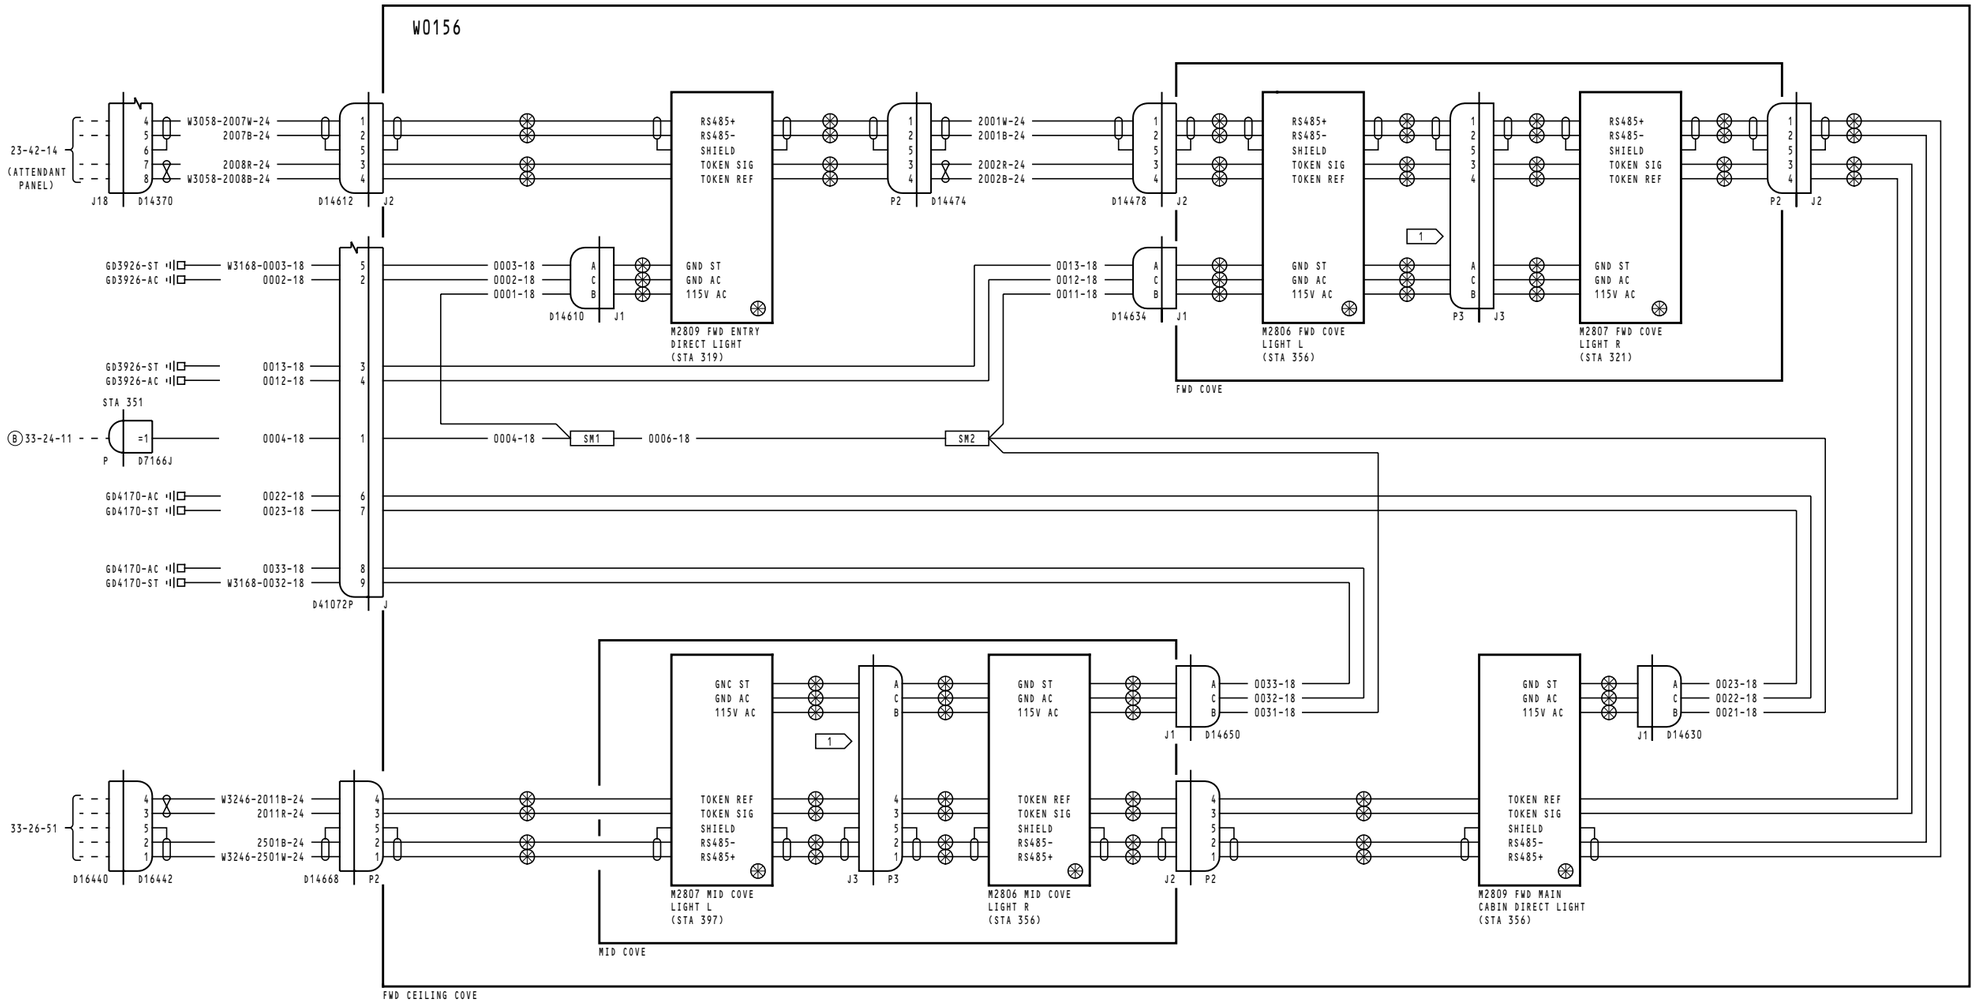


NOTES:

1 PIN "D" IS NOT USED

NOTES:
1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. TOTAL LENGTH OF GROUND WIRES FROM CONNECTOR TO GROUND BLOCK NOT TO EXCEED 10.5 FEET TO SUPPORT EMI REQUIREMENTS.
3. DATABUS 485 RUNS THROUGH PINS 1 & 2
4. FUSES ARE NOT REPLACEABLE
5. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
6. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-24-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
2

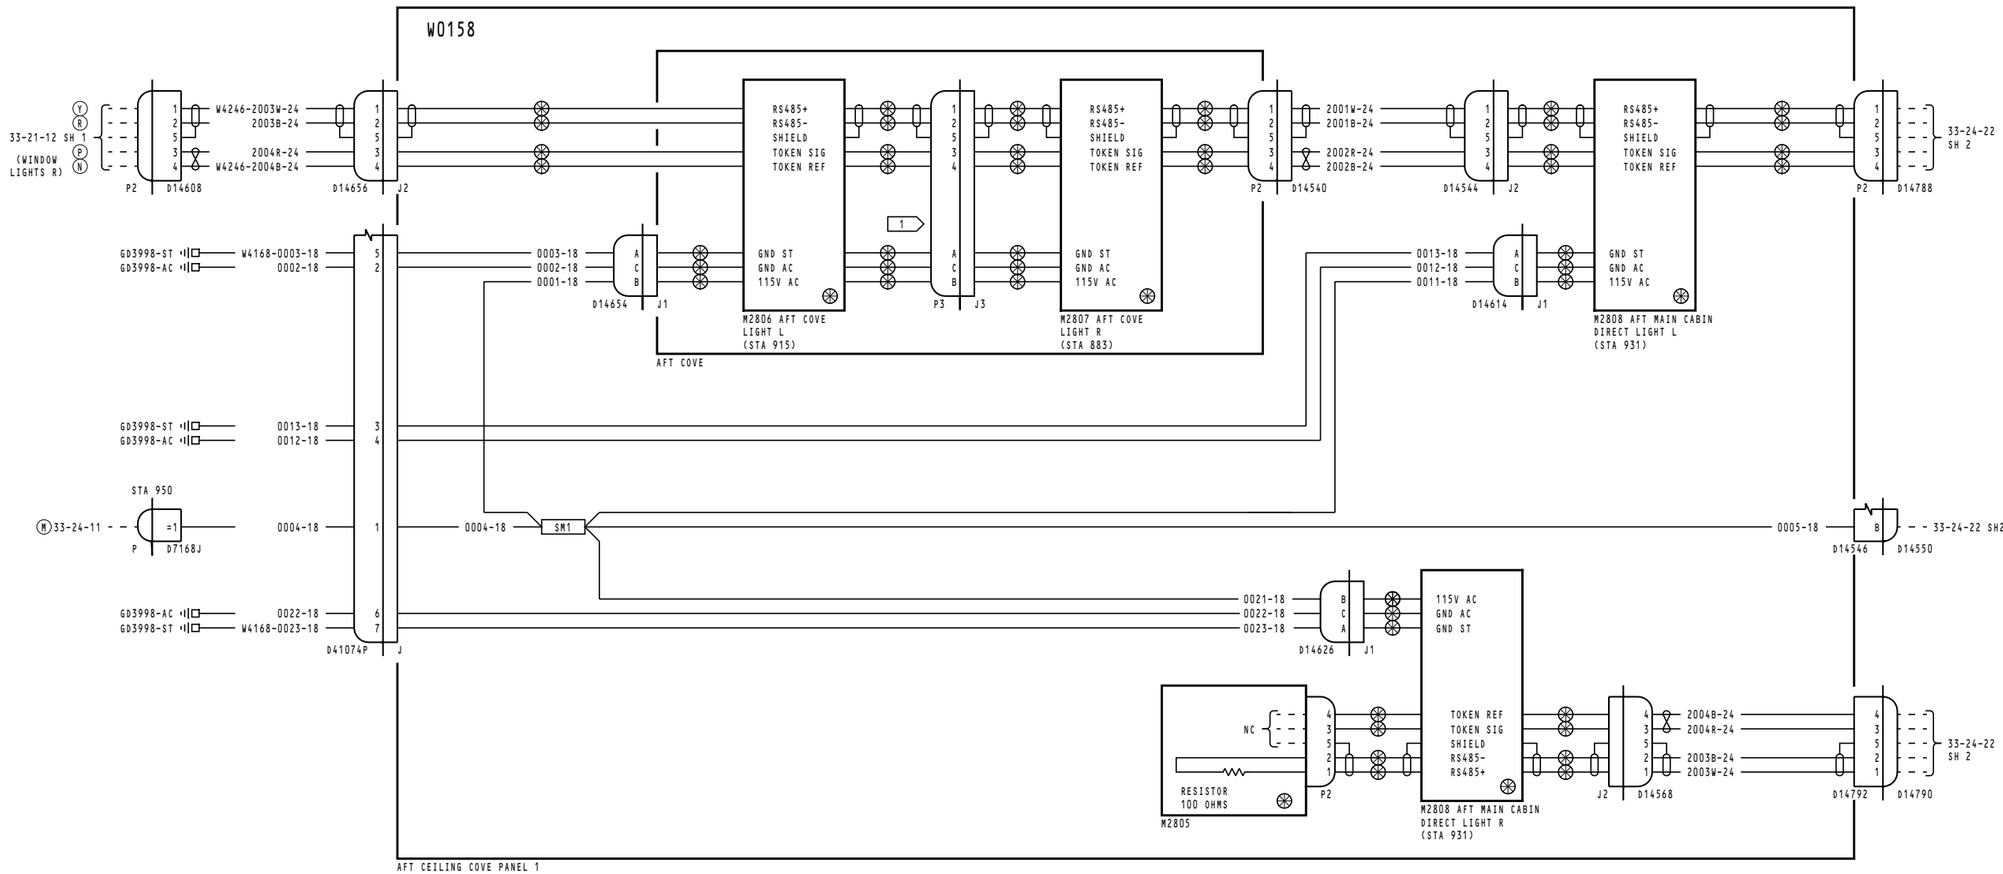


NOTES:

1 PIN "D" IS NOT USED


NOTES:
1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. TOTAL LENGTH OF GROUND WIRES FROM CONNECTOR TO GROUND BLOCK NOT TO EXCEED 20 FEET TO SUPPORT EMI REQUIREMENTS.
3. DATABUS 485 RUNS THROUGH PINS 1 & 2
4. FUSES ARE NOT REPLACEABLE
5. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
6. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH



ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-24-22


Page 1
Sheet 1
May 15/2024

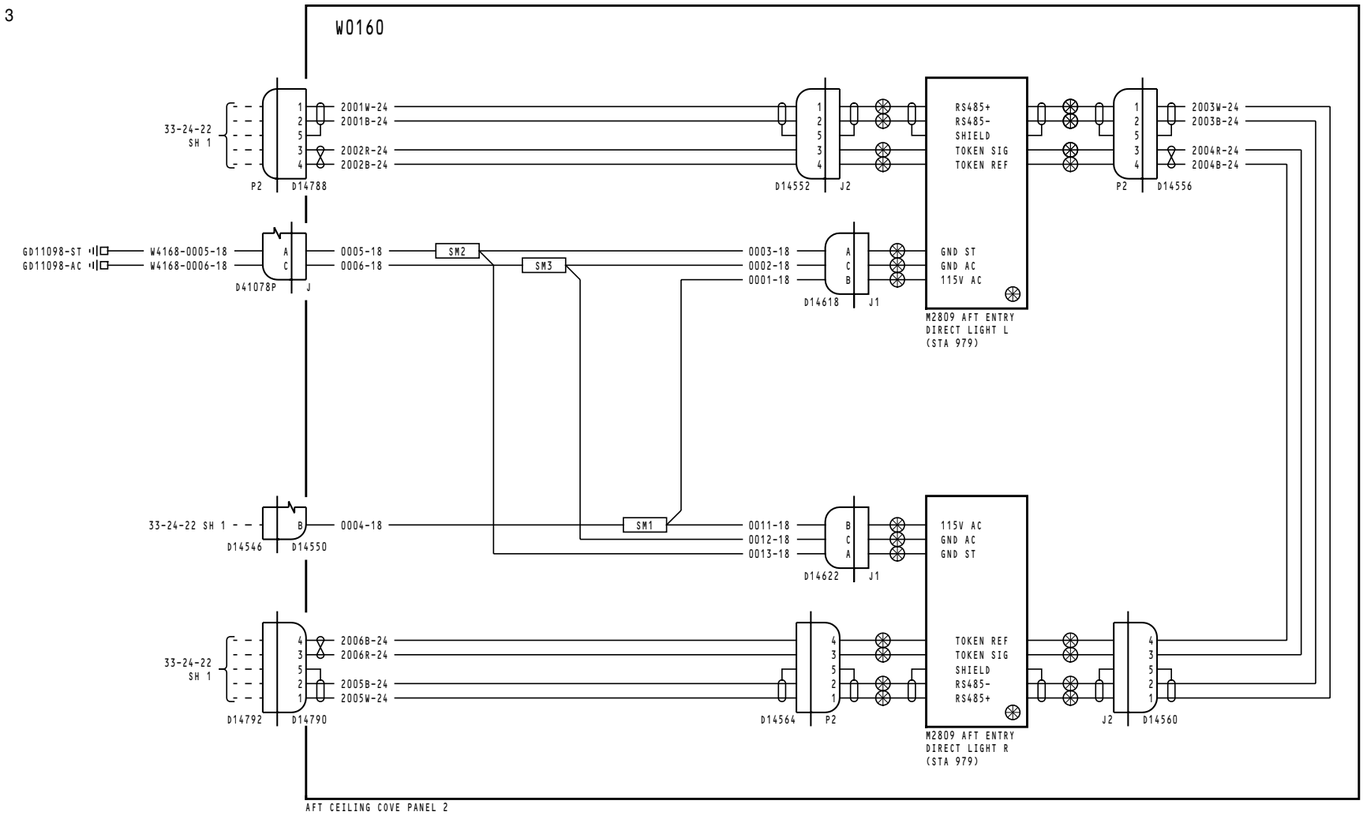


NOTES:
1. RS485: USE WIRE TYPE S280W502-6 OR EQUIVALENT
2. TOTAL LENGTH OF GROUND WIRES FROM CONNECTOR TO GROUND BLOCK
   NOT TO EXCEED 6.5 FEET TO SUPPORT EMI REQUIREMENTS.
3. DATABUS 485 RUNS THROUGH PINS 1 & 2
4. FUSES ARE NOT REPLACEABLE
5. LIGHT ASSEMBLY IS NOT TO BE DISASSEMBLED (REMOVE/REPLACE)
6. VENDOR TOKEN WIRE DOES NOT REQUIRE TWISTED PAIR, CONTROLLED LENGTH

737-8 WIRING DIAGRAM MANUAL

240

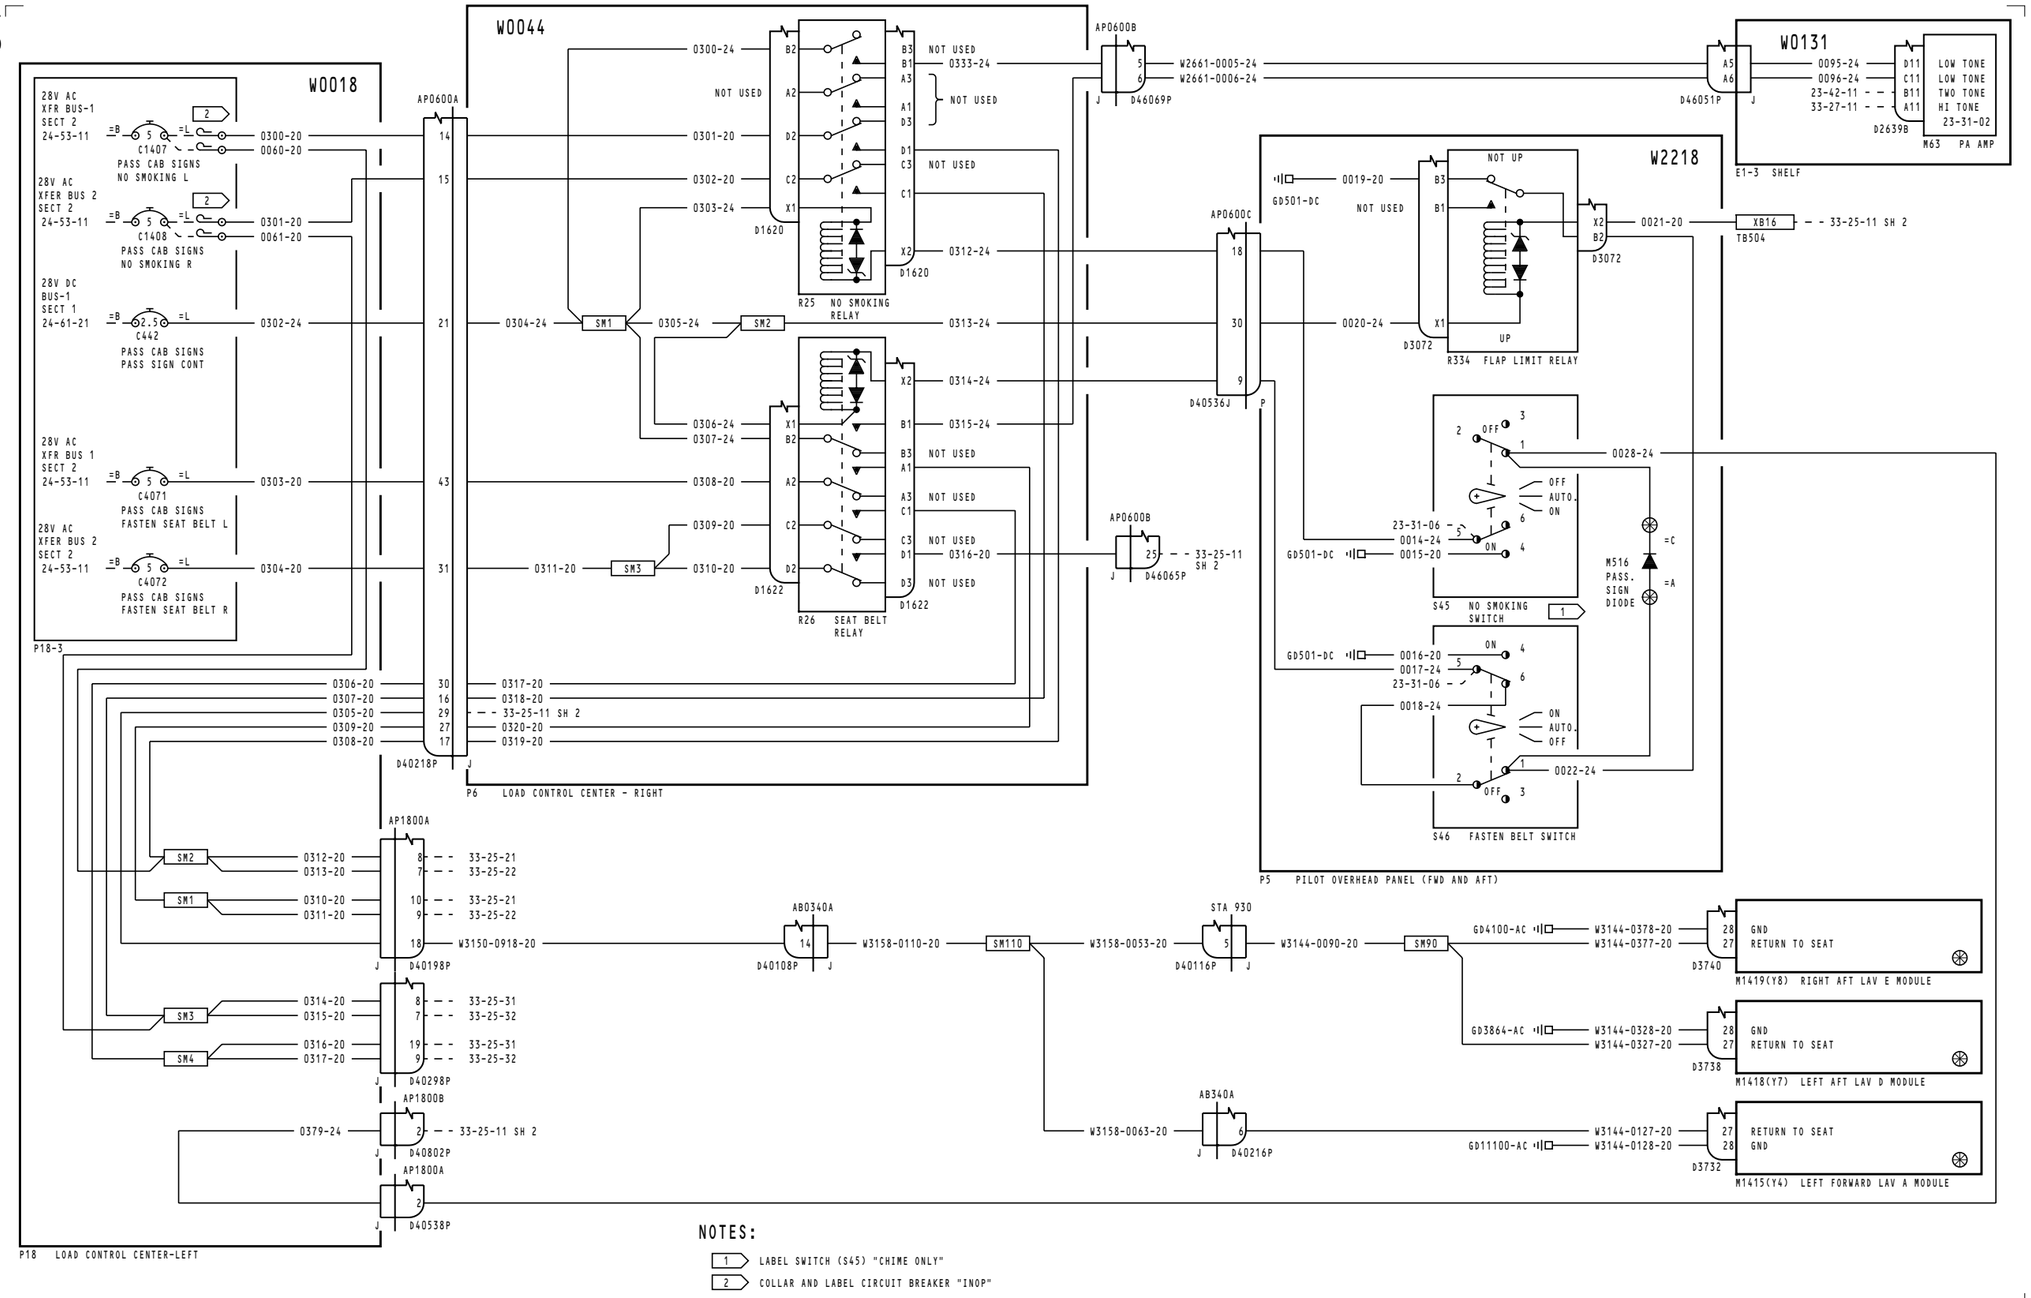


NOTES:

1. LABEL SWITCH (S45) "CHIME ONLY"
2. COLLAR AND LABEL CIRCUIT BREAKER "INOP"




33-25-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
32

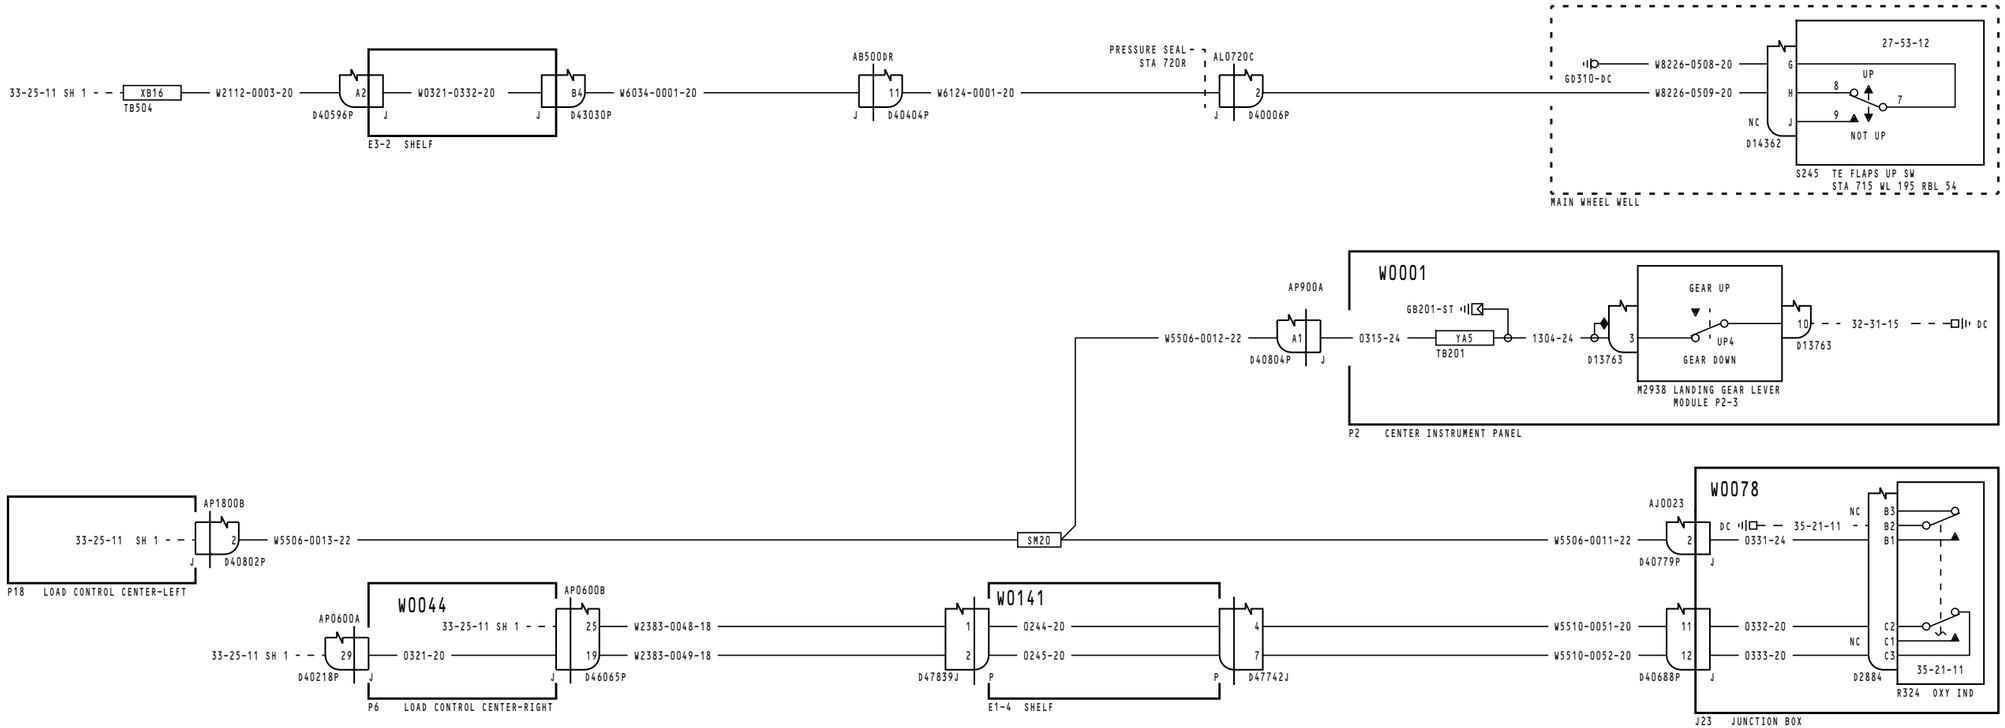





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-25-11

Page 1
Sheet 2
May 15/2024

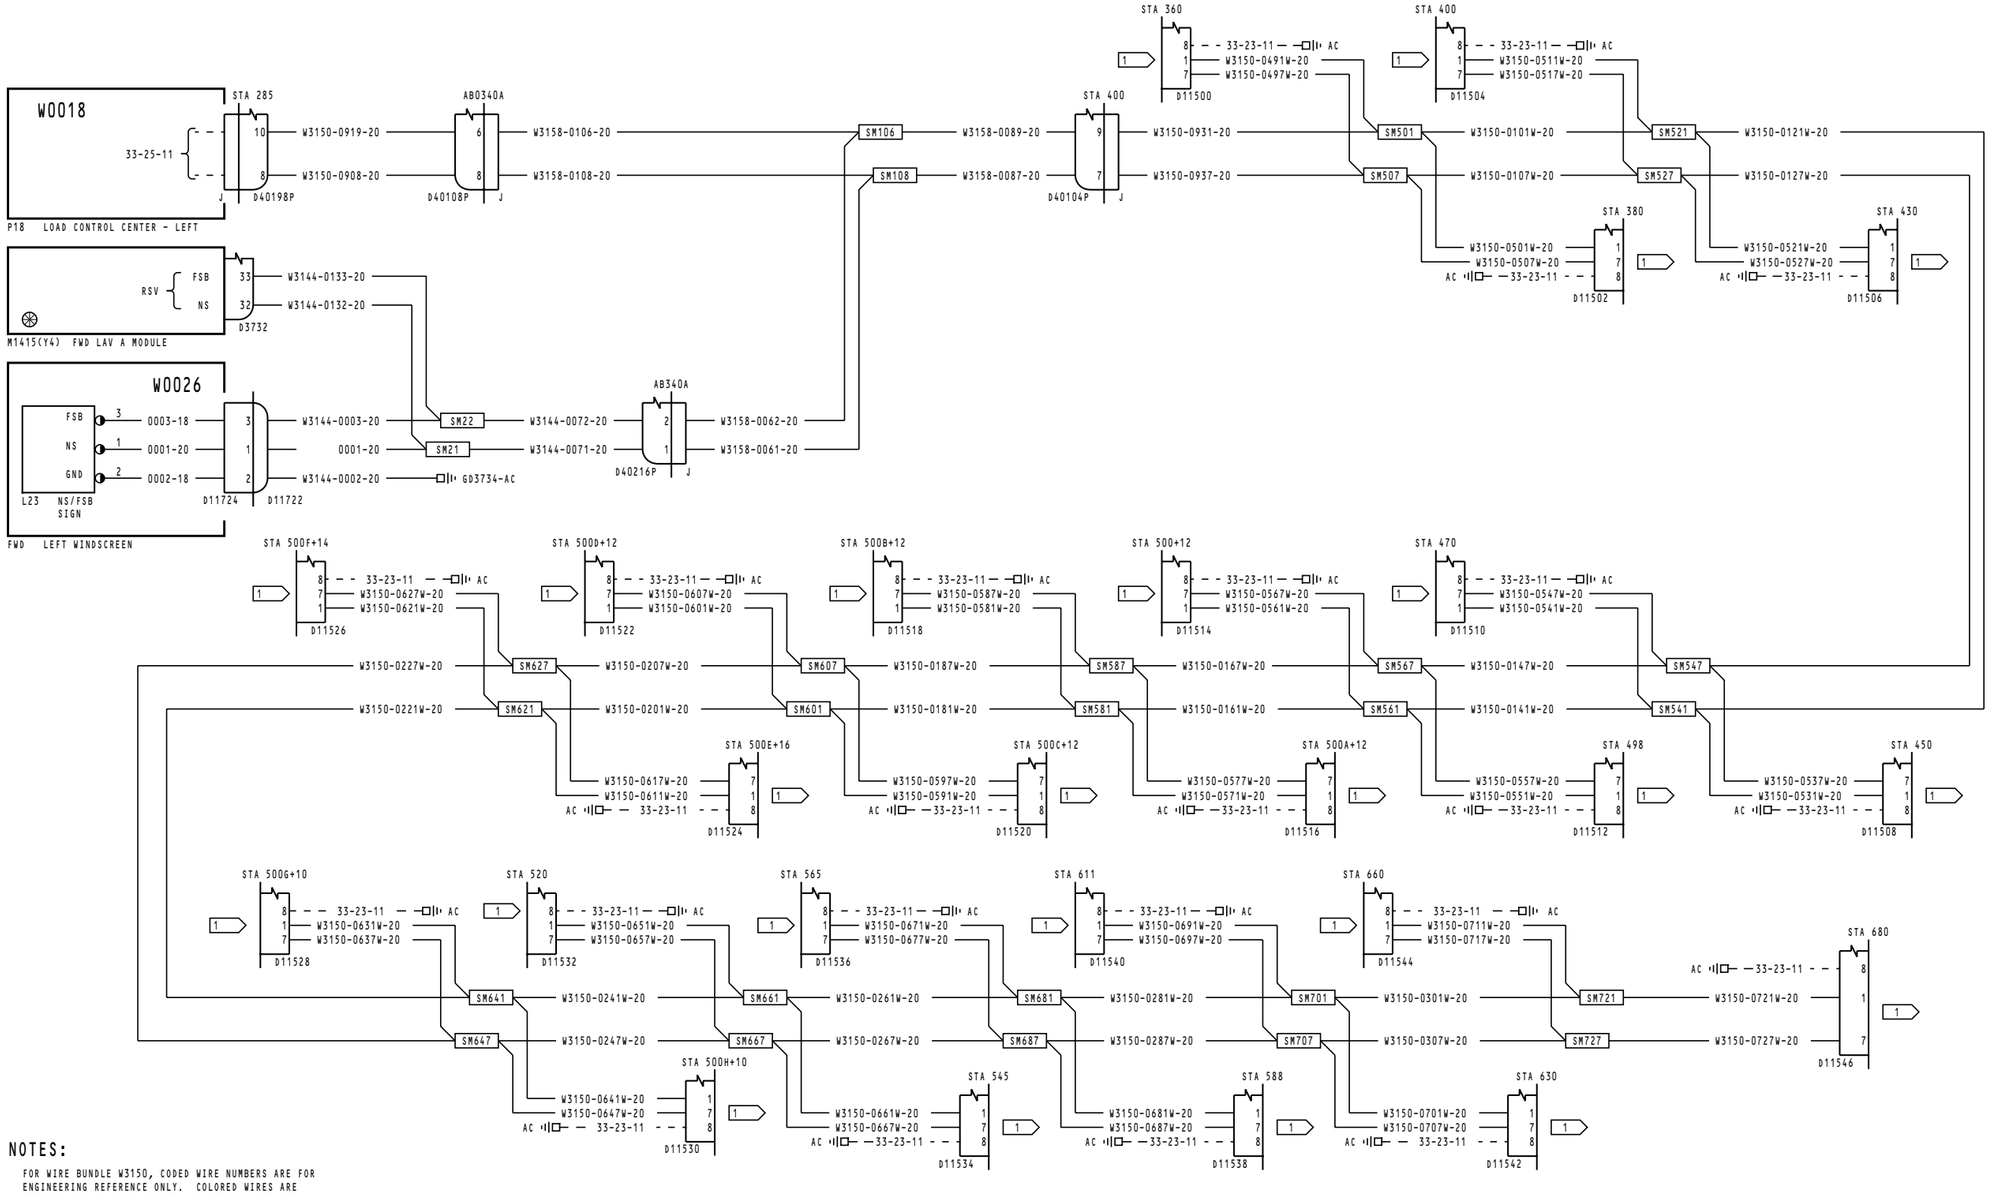


NOTES:

FOR WIRE BUNDLE W3150, CODED WIRE NUMBERS ARE FOR ENGINEERING REFERENCE ONLY. COLORED WIRES ARE OPTIONAL AS SHOWN IN TYPICAL EXAMPLE. REFERENCE INTRODUCTION MANUAL USAGE.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-25-41)



33-25-21


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
69

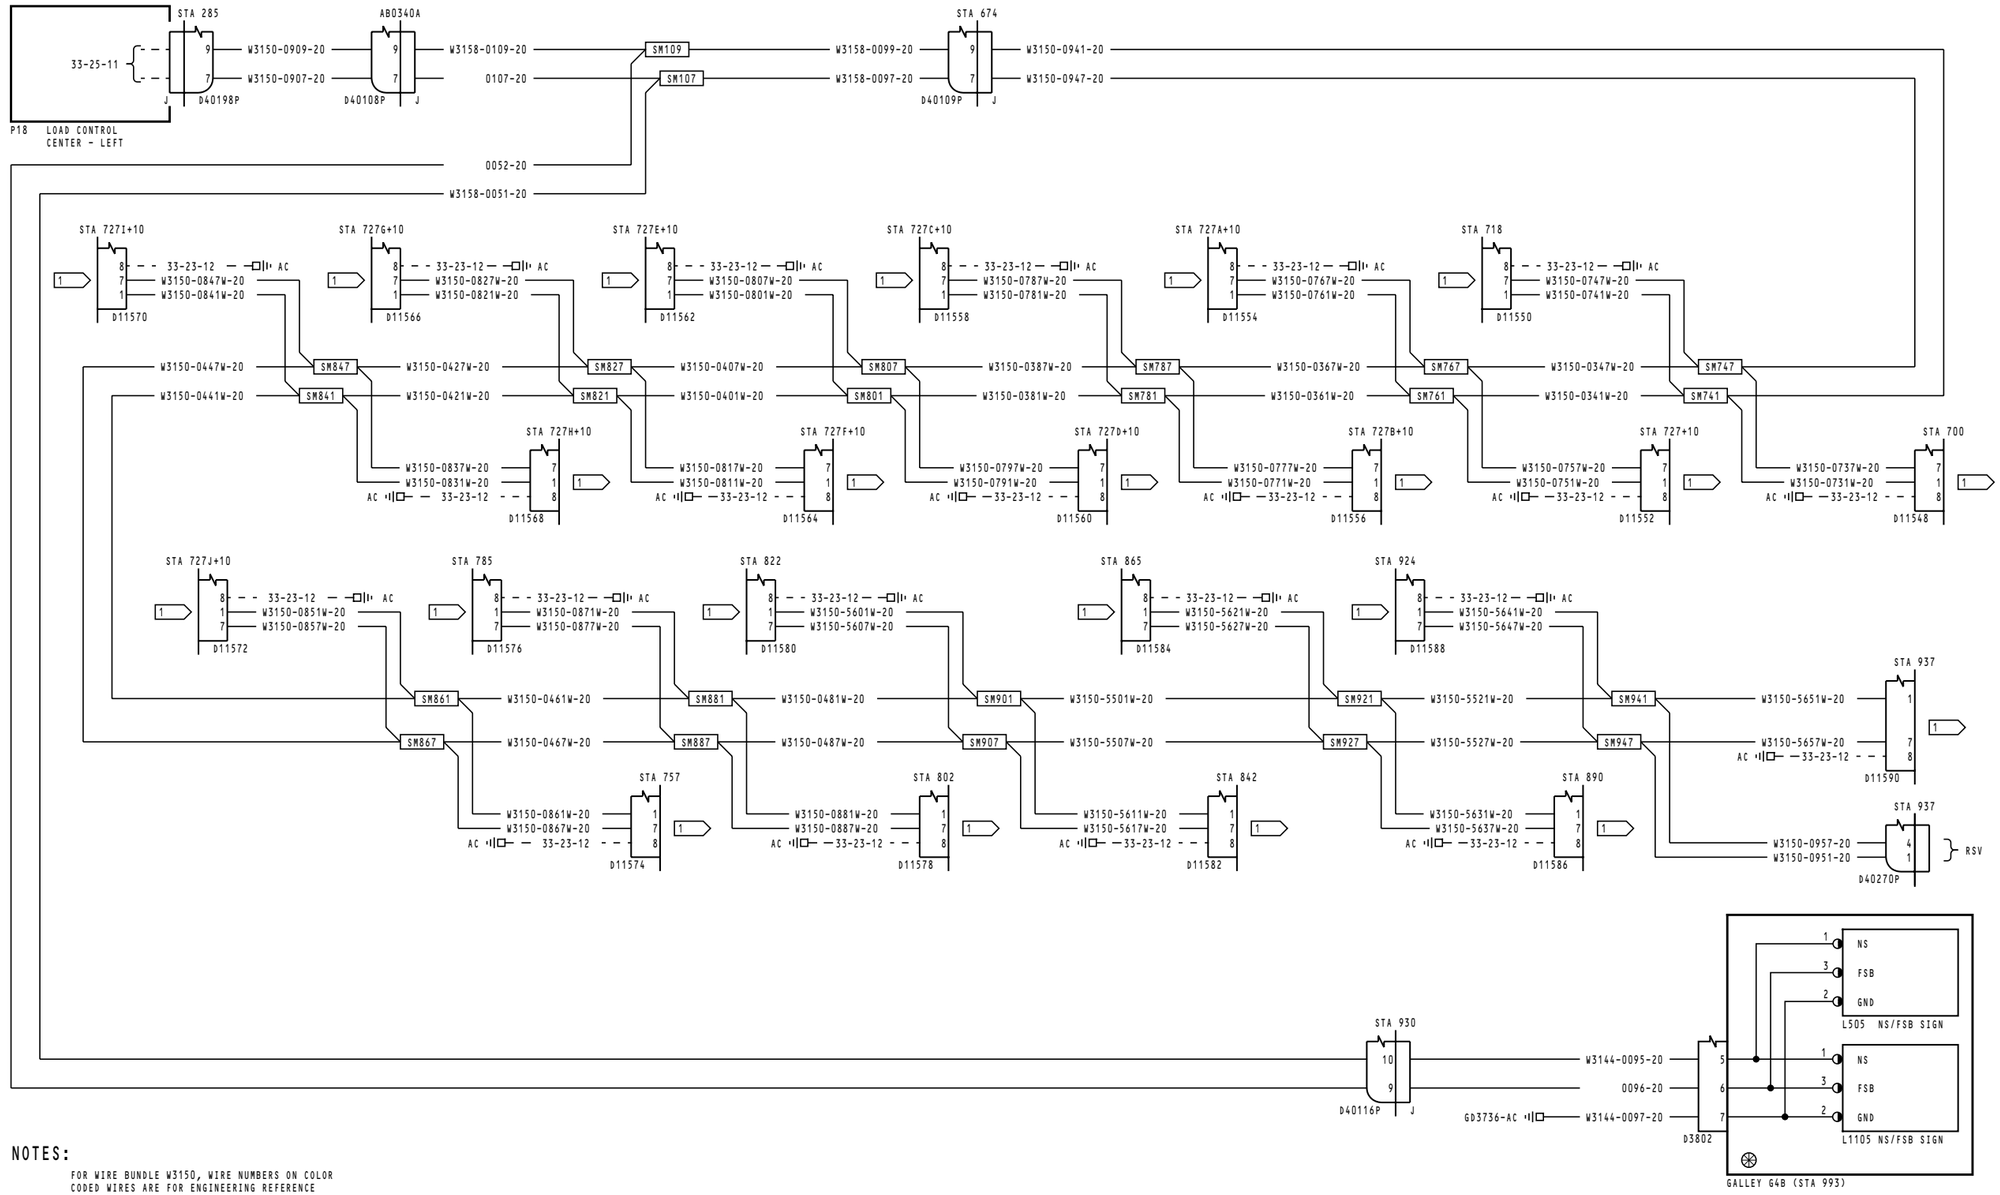


NOTES:

FOR WIRE BUNDLE W315D, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-25-41).




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-25-22

Page 1

May 15/2024

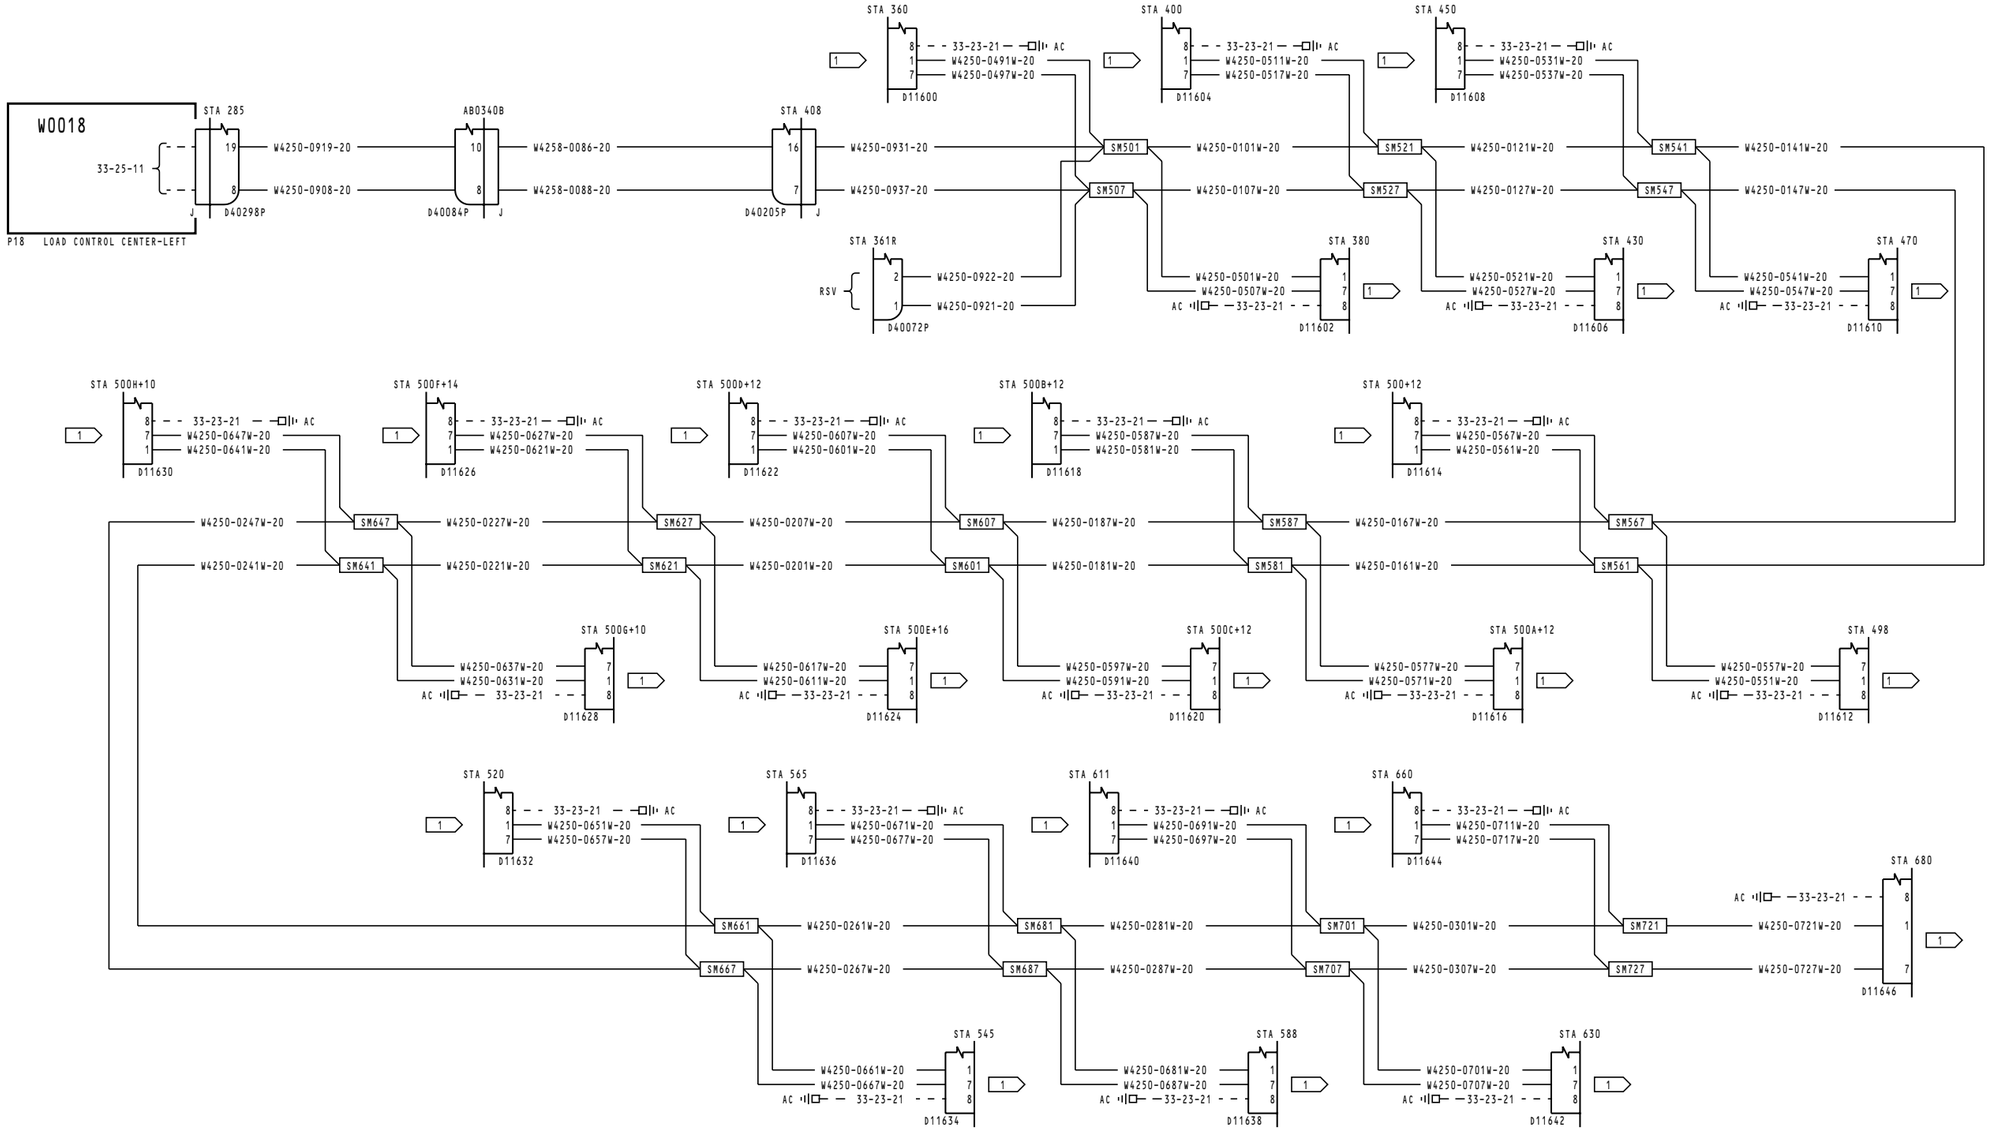


**NOTES:** FOR WIRE BUNDLE W4250, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-25-41)



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-25-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
35

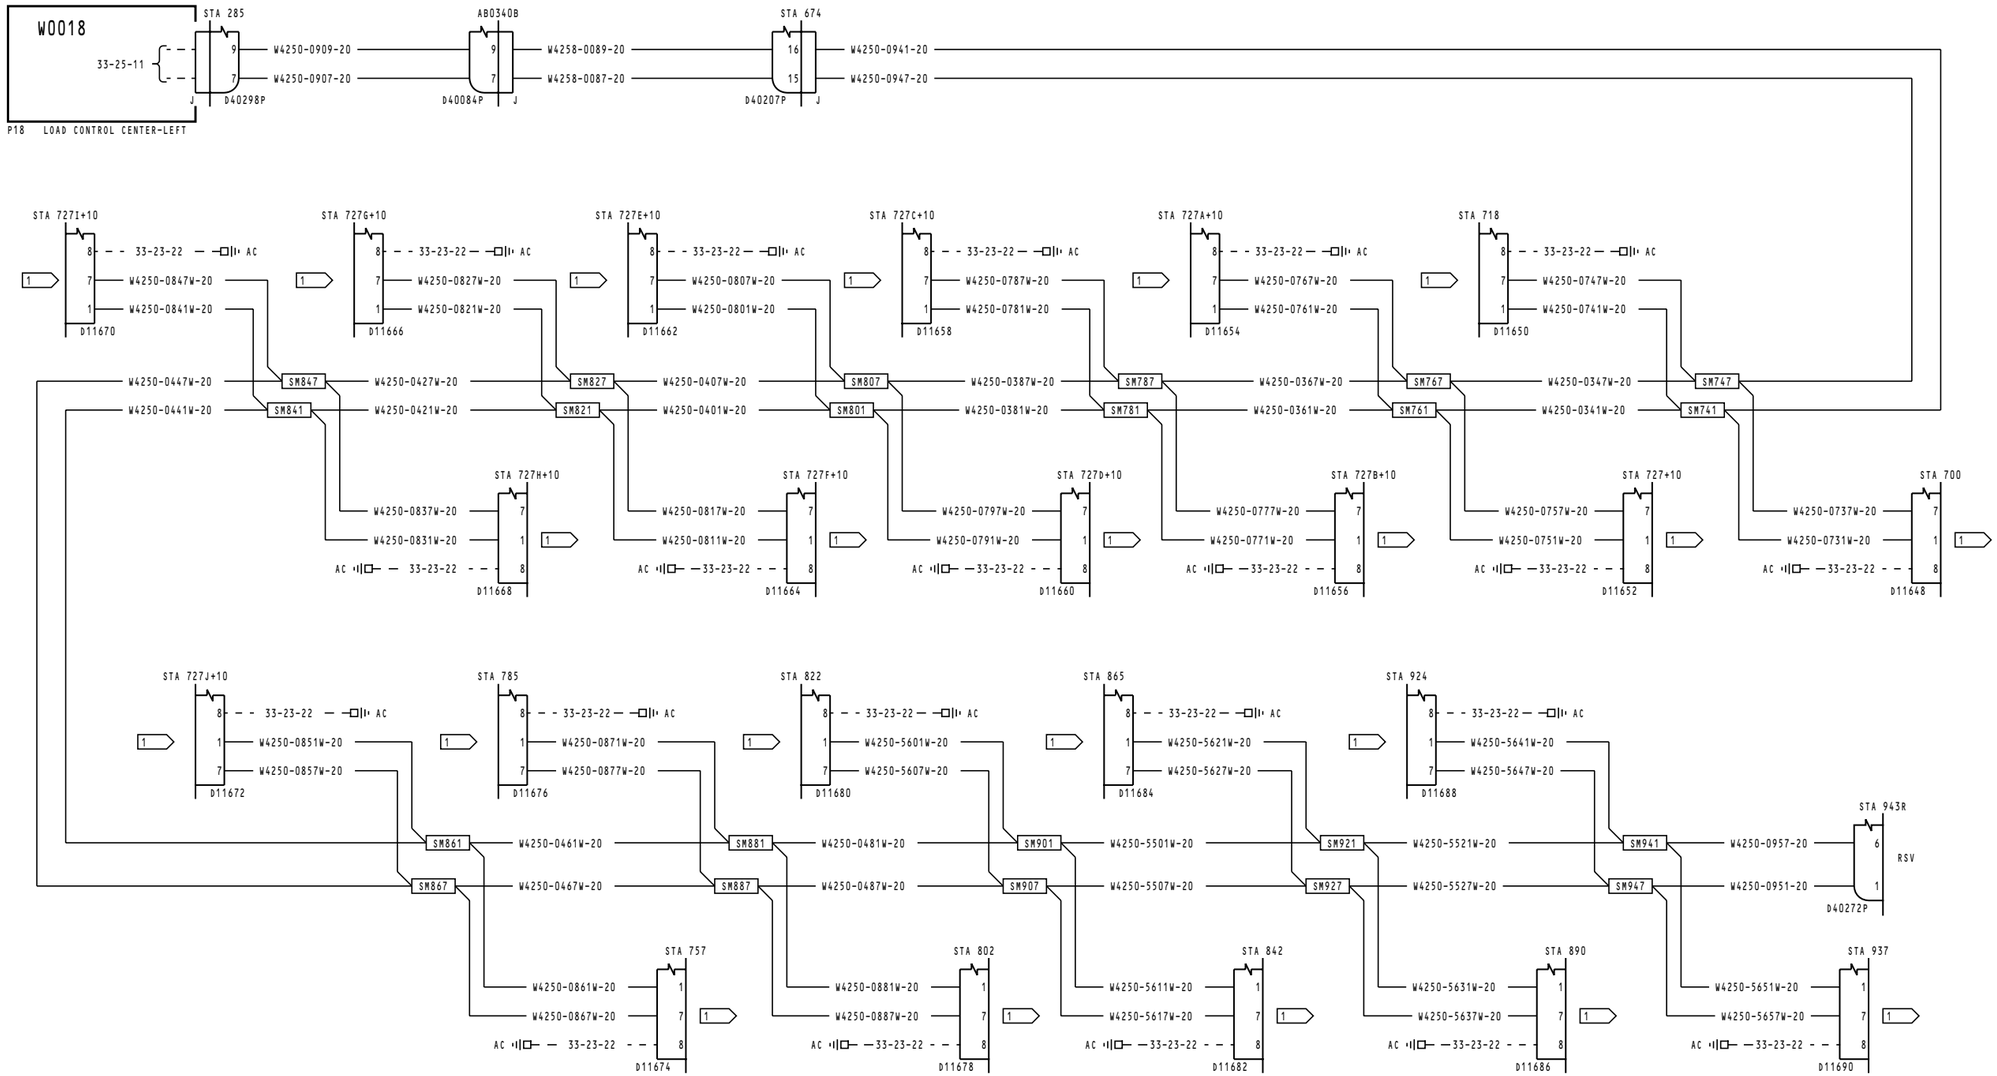


NOTES:

FOR WIRE BUNDLE W4250, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLOR CODED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-25-41).



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-25-32

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

7

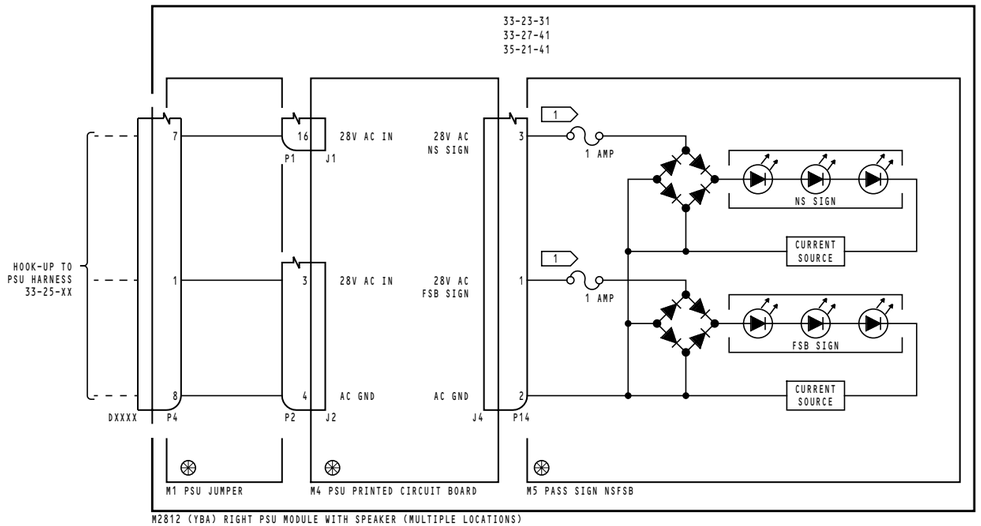


M2812 (YBA) RIGHT PSU MODULE WITH SPEAKER (MULTIPLE LOCATIONS)
M2884 (YBD) LEFT PSU MODULE WITH SPEAKER (MULTIPLE LOCATIONS)

NOTES:

1 FUSES ARE NON REPLACEABLE

ALL

**NO SMOKING/FASTEN SEAT BELT SIGNS - PASS SERVICE UNIT**

D280AM1215




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-25-41

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

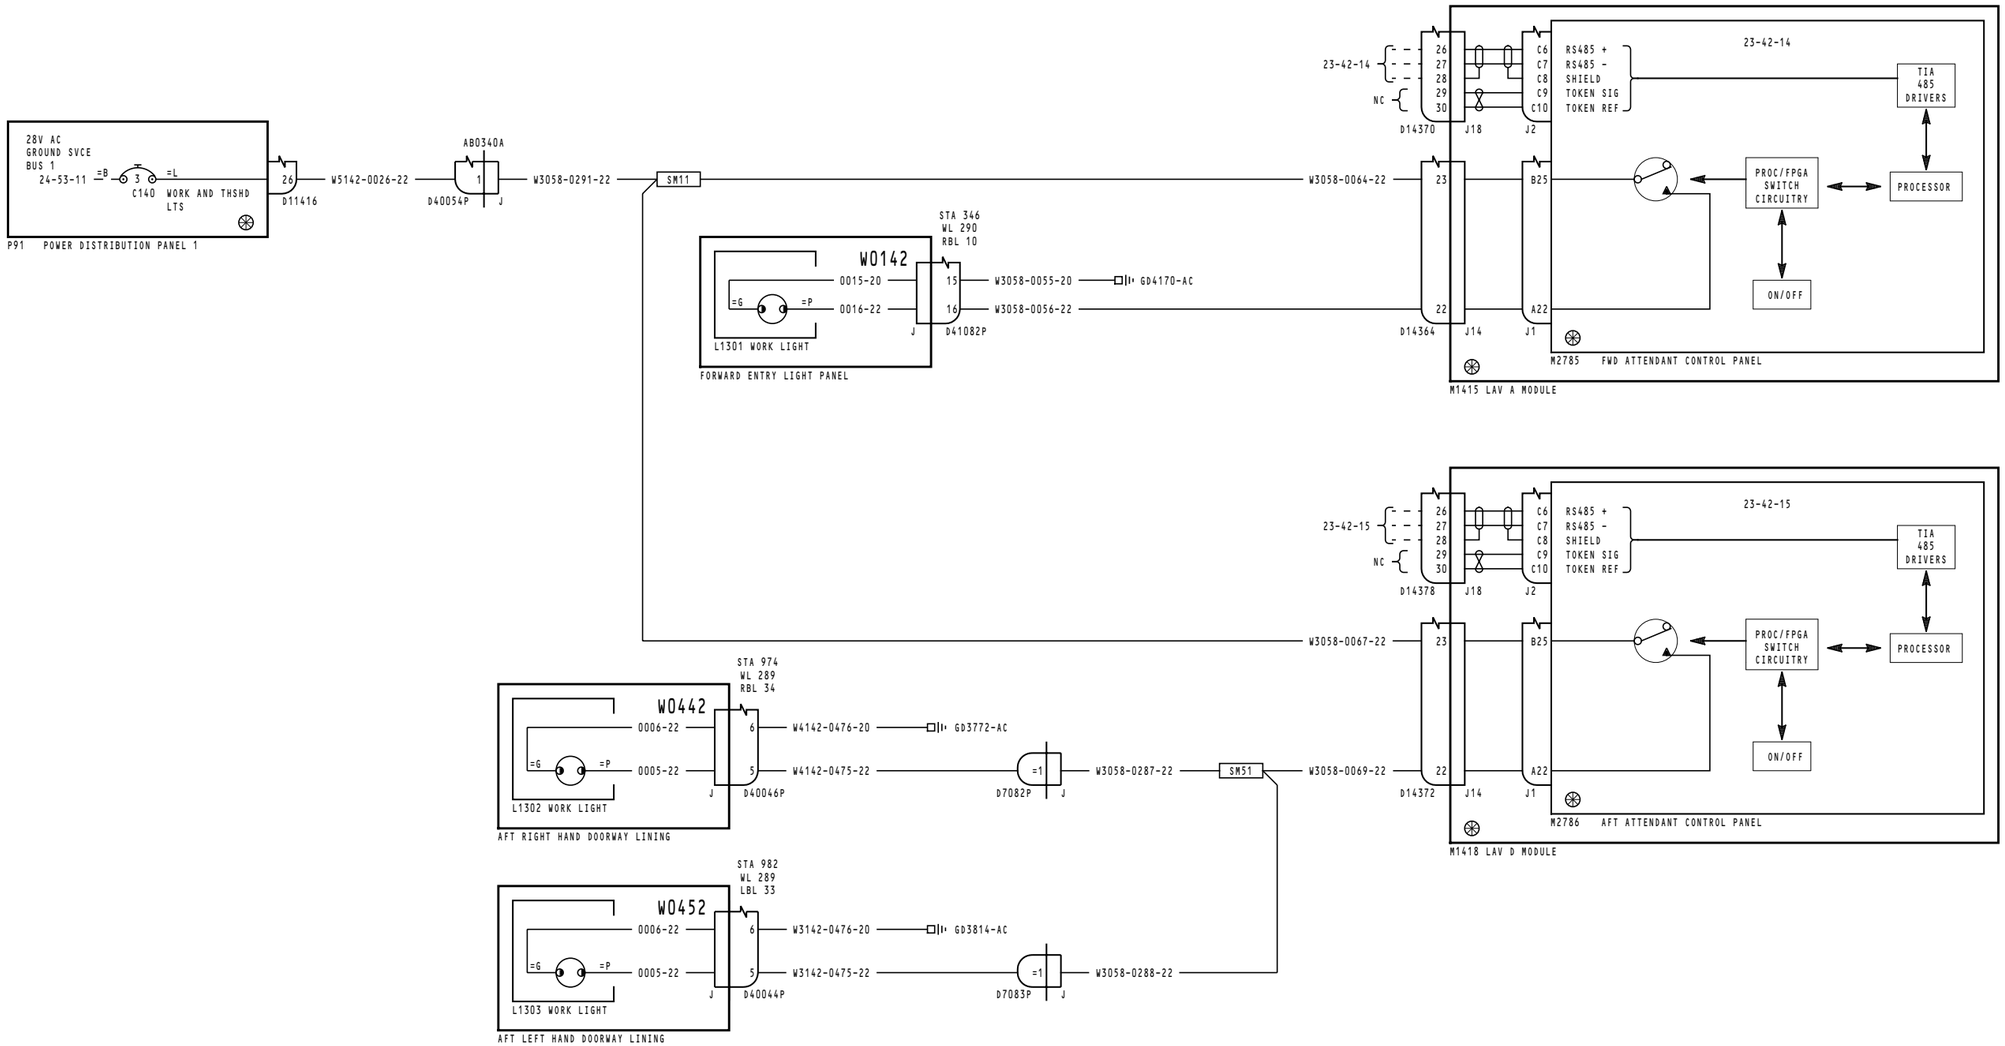




33-26-11


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

39

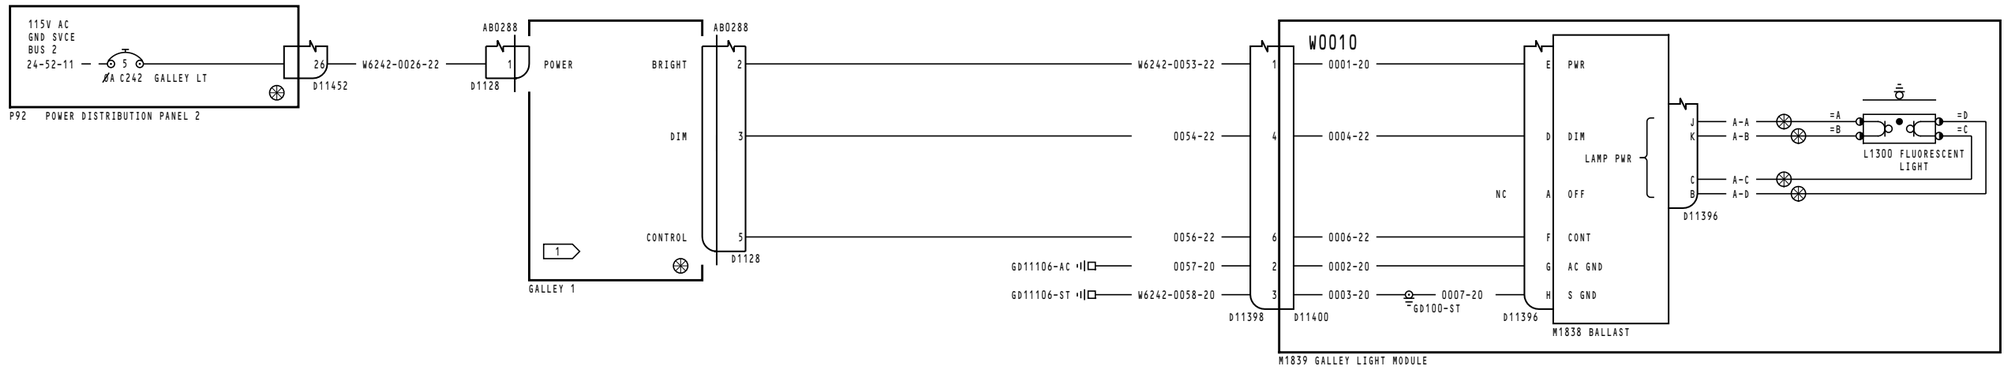


NOTES:

1. EITHER A 3 POSITION TOGGLE OR ROTARY SWITCH OR A 2 PUSH BUTTON SWITCH (ON/OFF & BRIGHT/DIM) WILL BE USED TO CONTROL GALLEY G1 LIGHT.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-26-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL



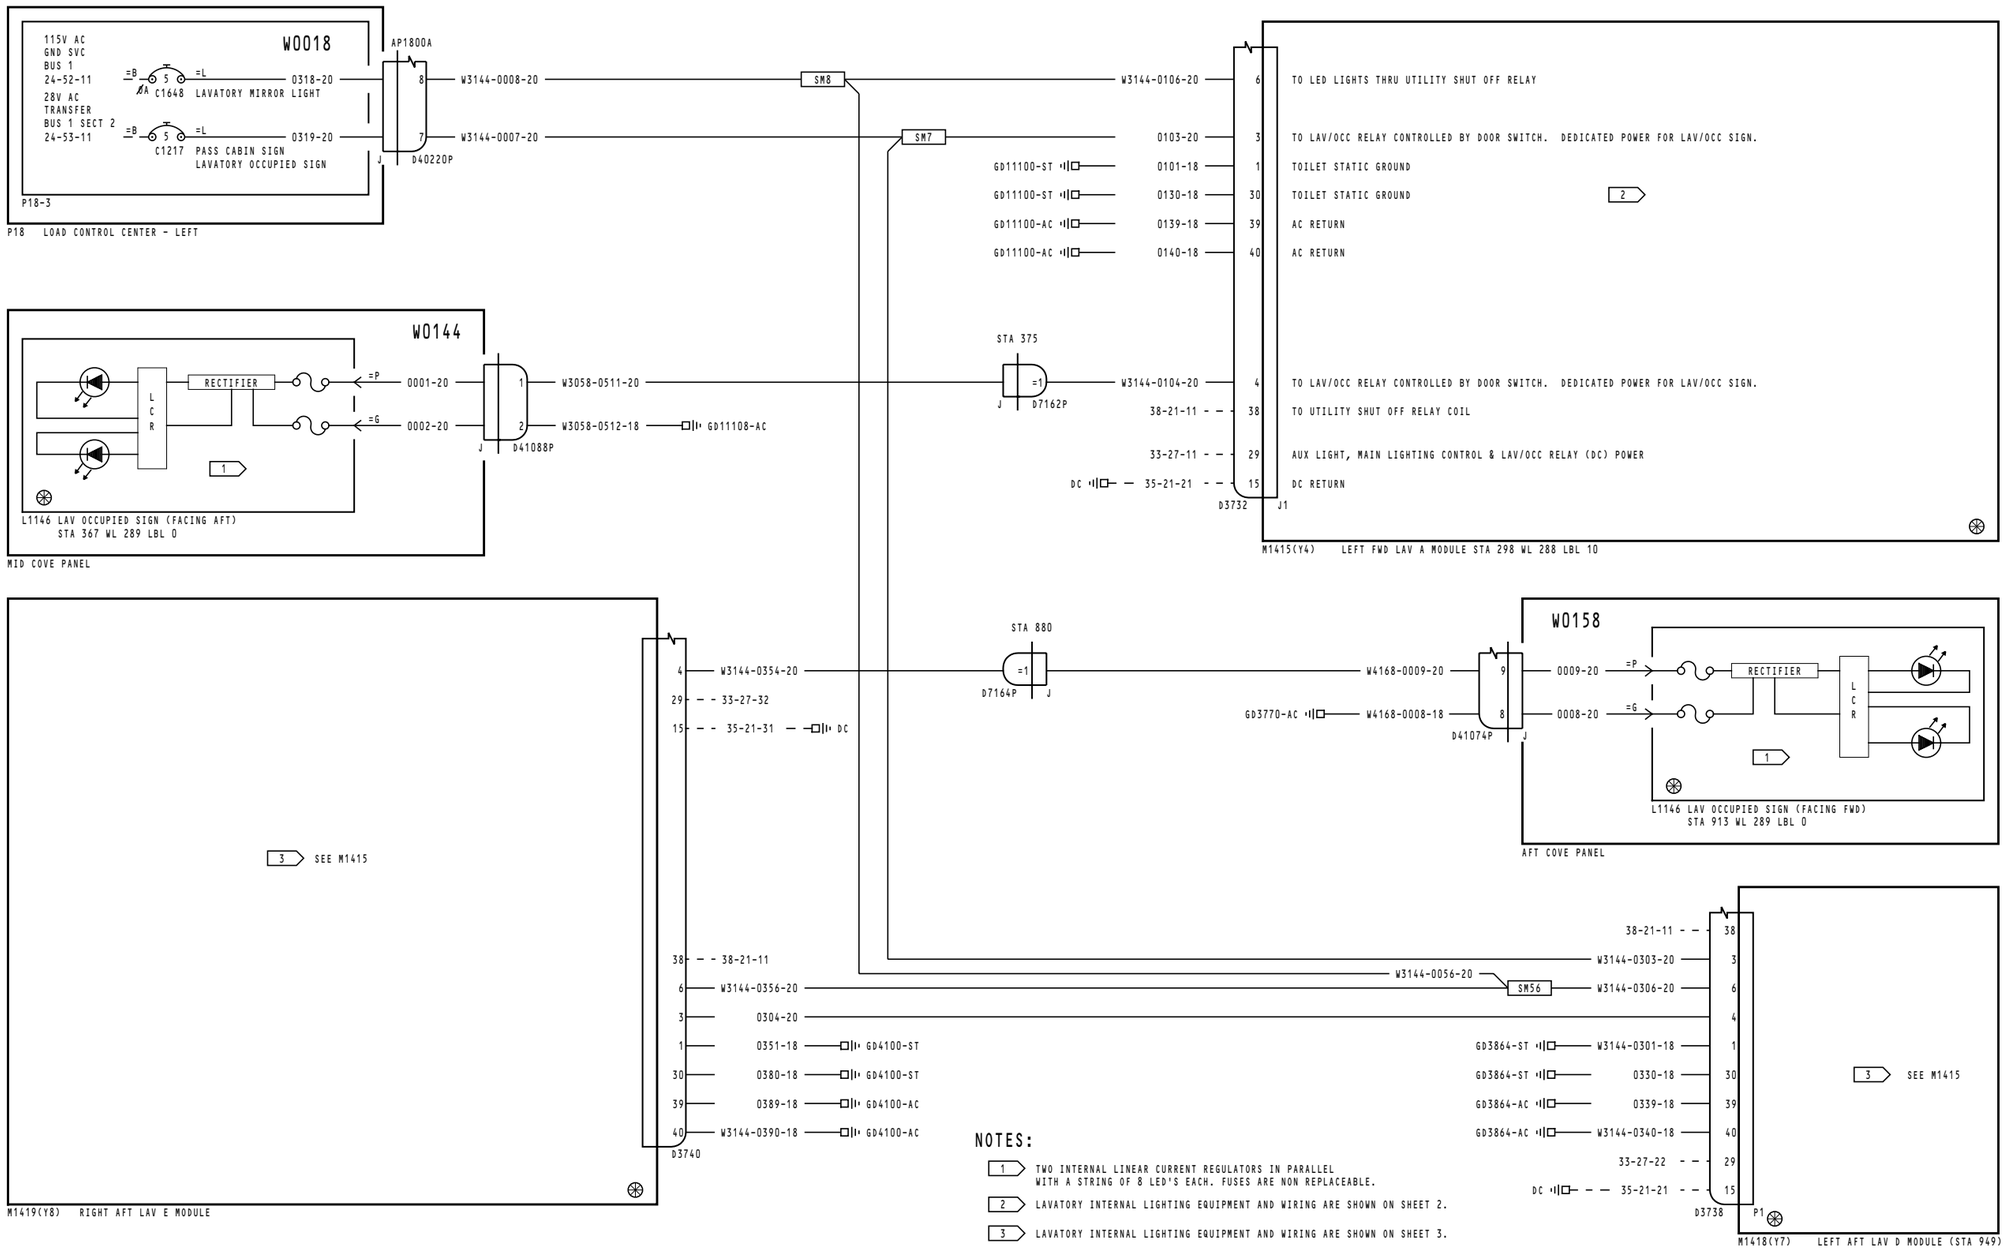





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-26-31

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

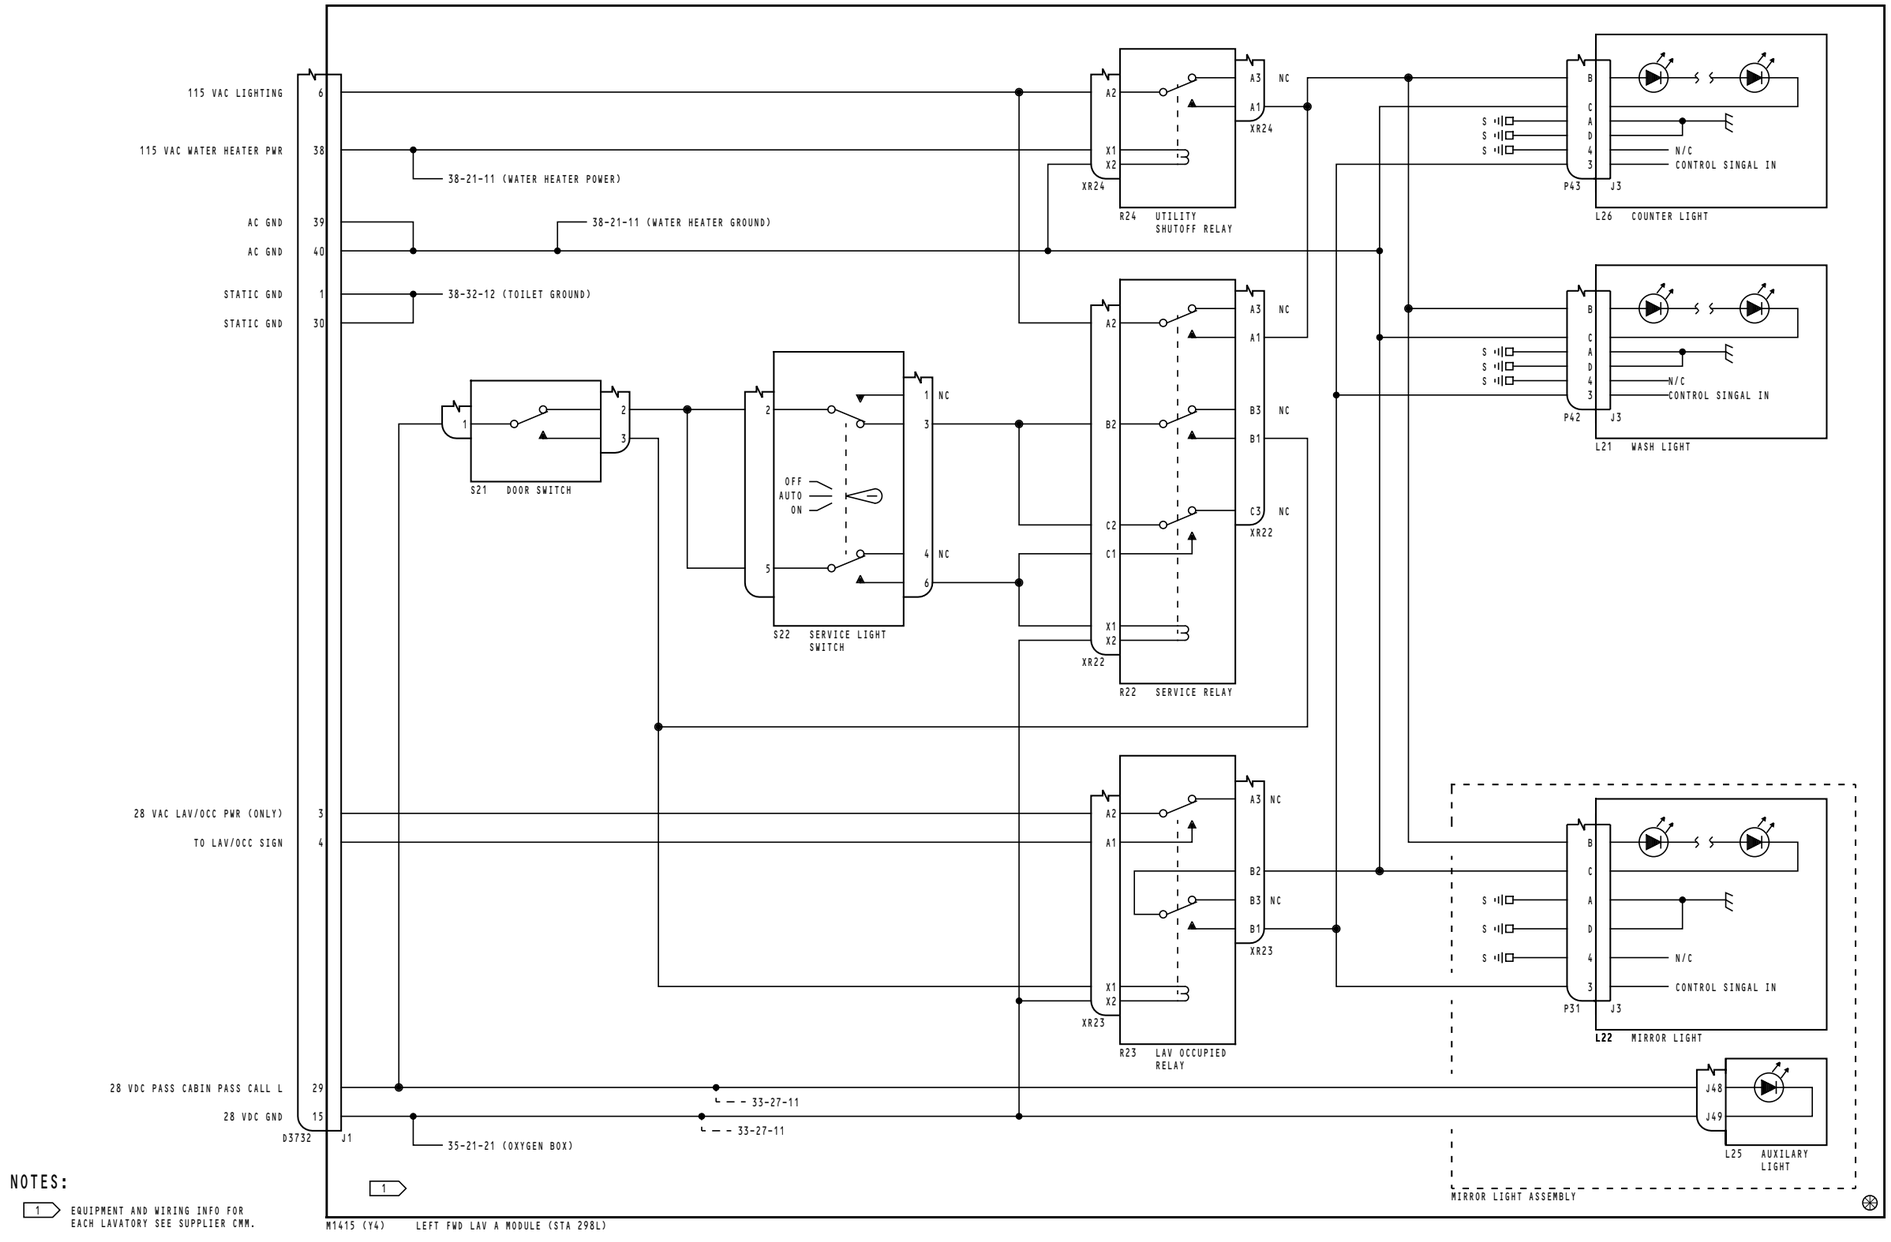





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-26-31

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

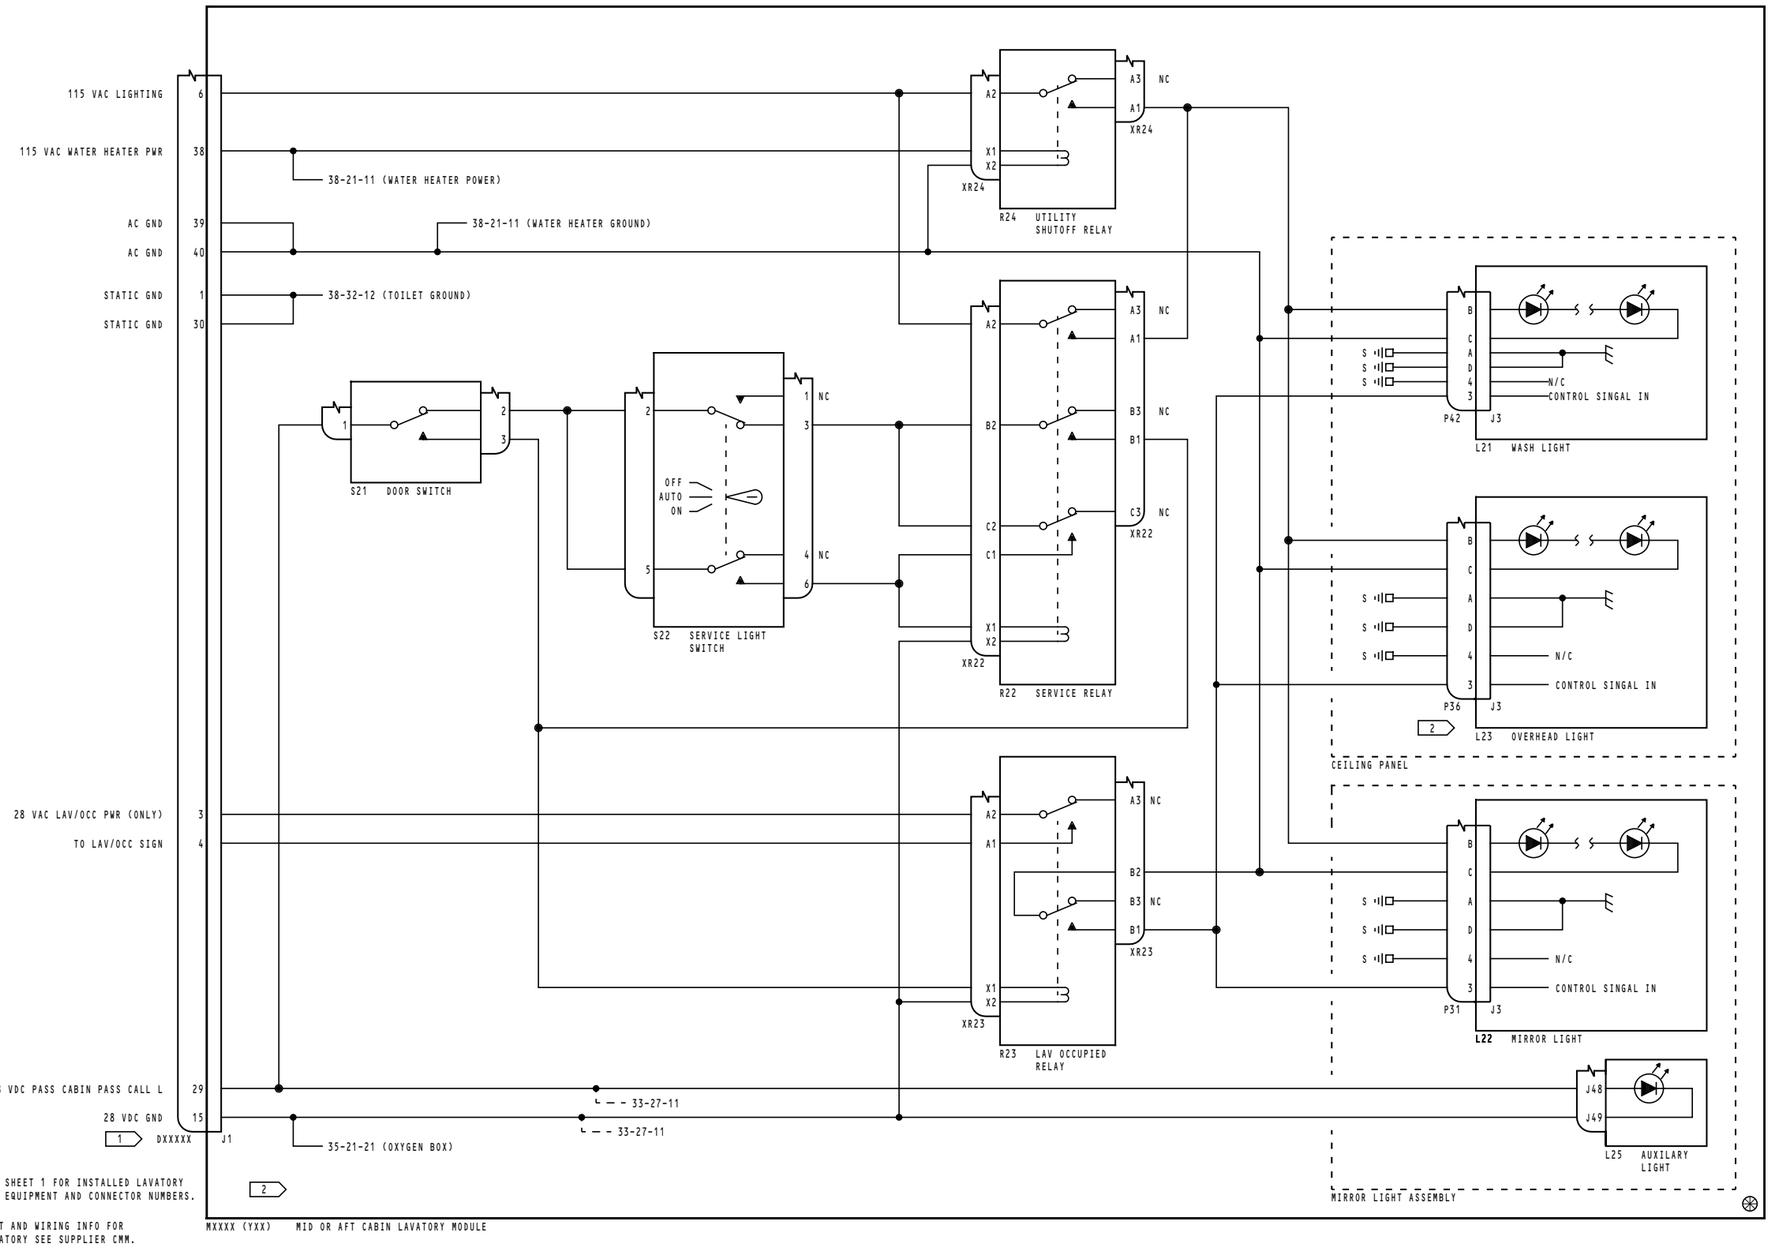




33-26-31
Page 1
Sheet 3
May 15/2024
ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL



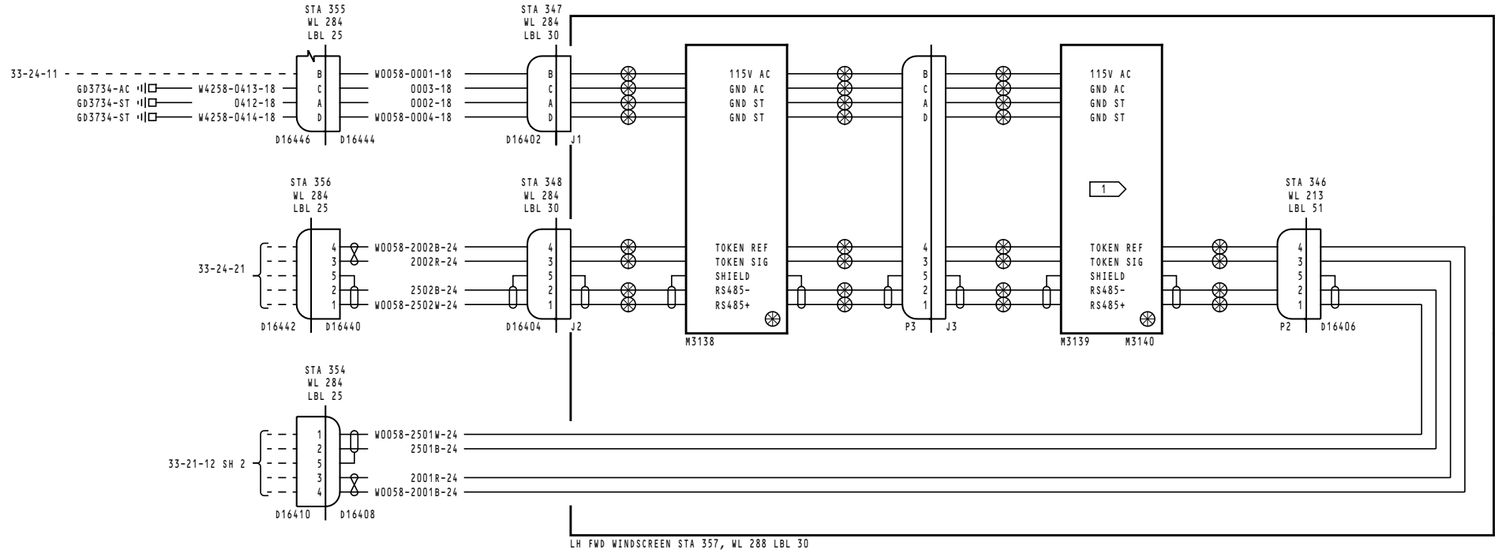


NOTES:

1 INCLUDES MULTIPLE LRUS

NOTES: GROUND WIRES NOT TO EXCEED 7.5 FEET TO SUPPORT EMI REQUIREMENTS.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-26-51

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
134

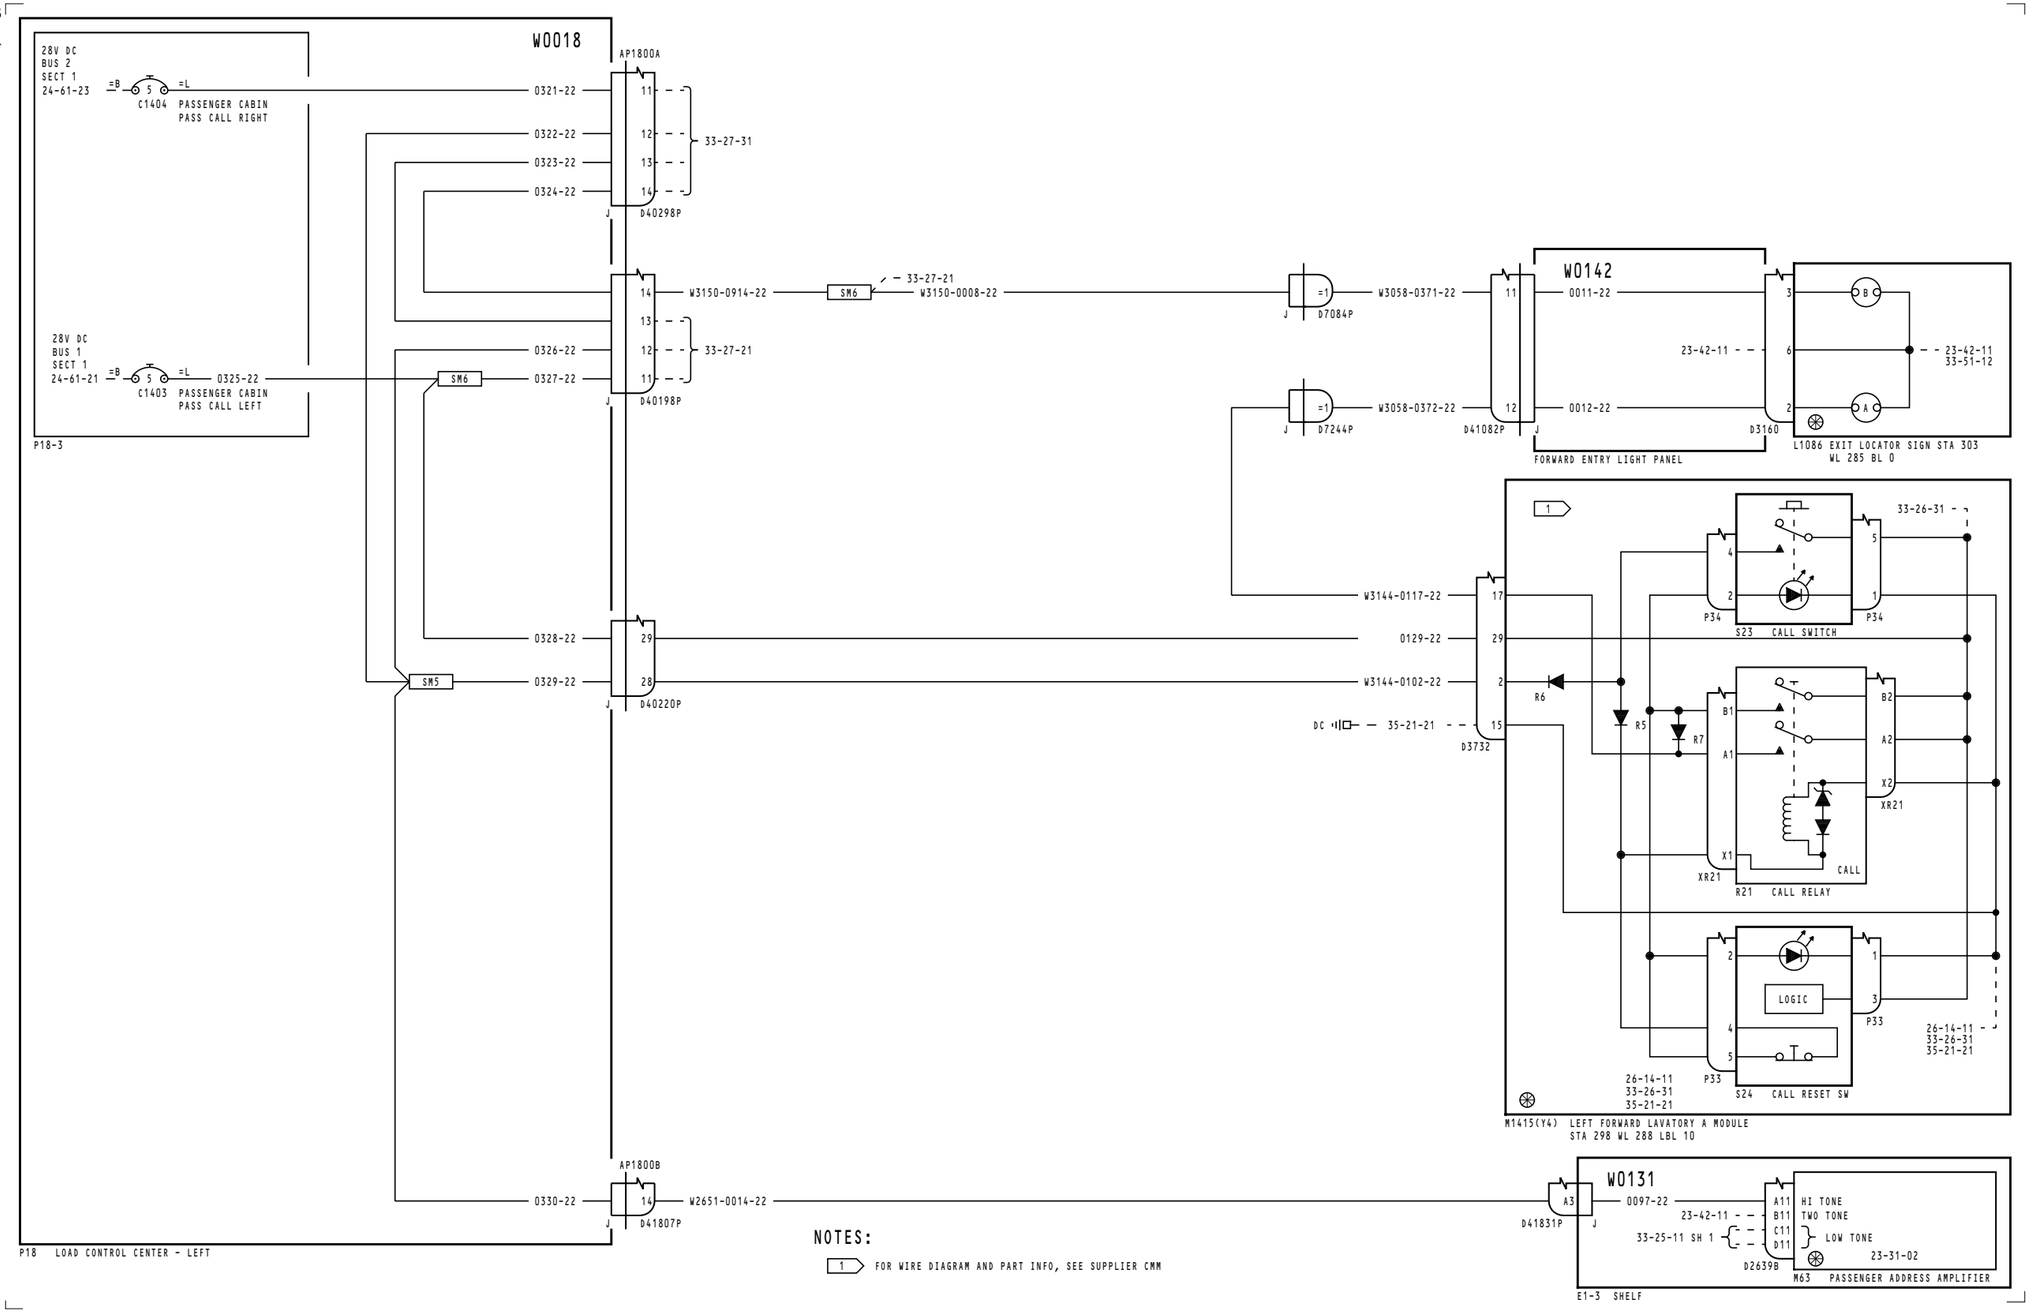





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-27-11

Page 1

May 15/2024

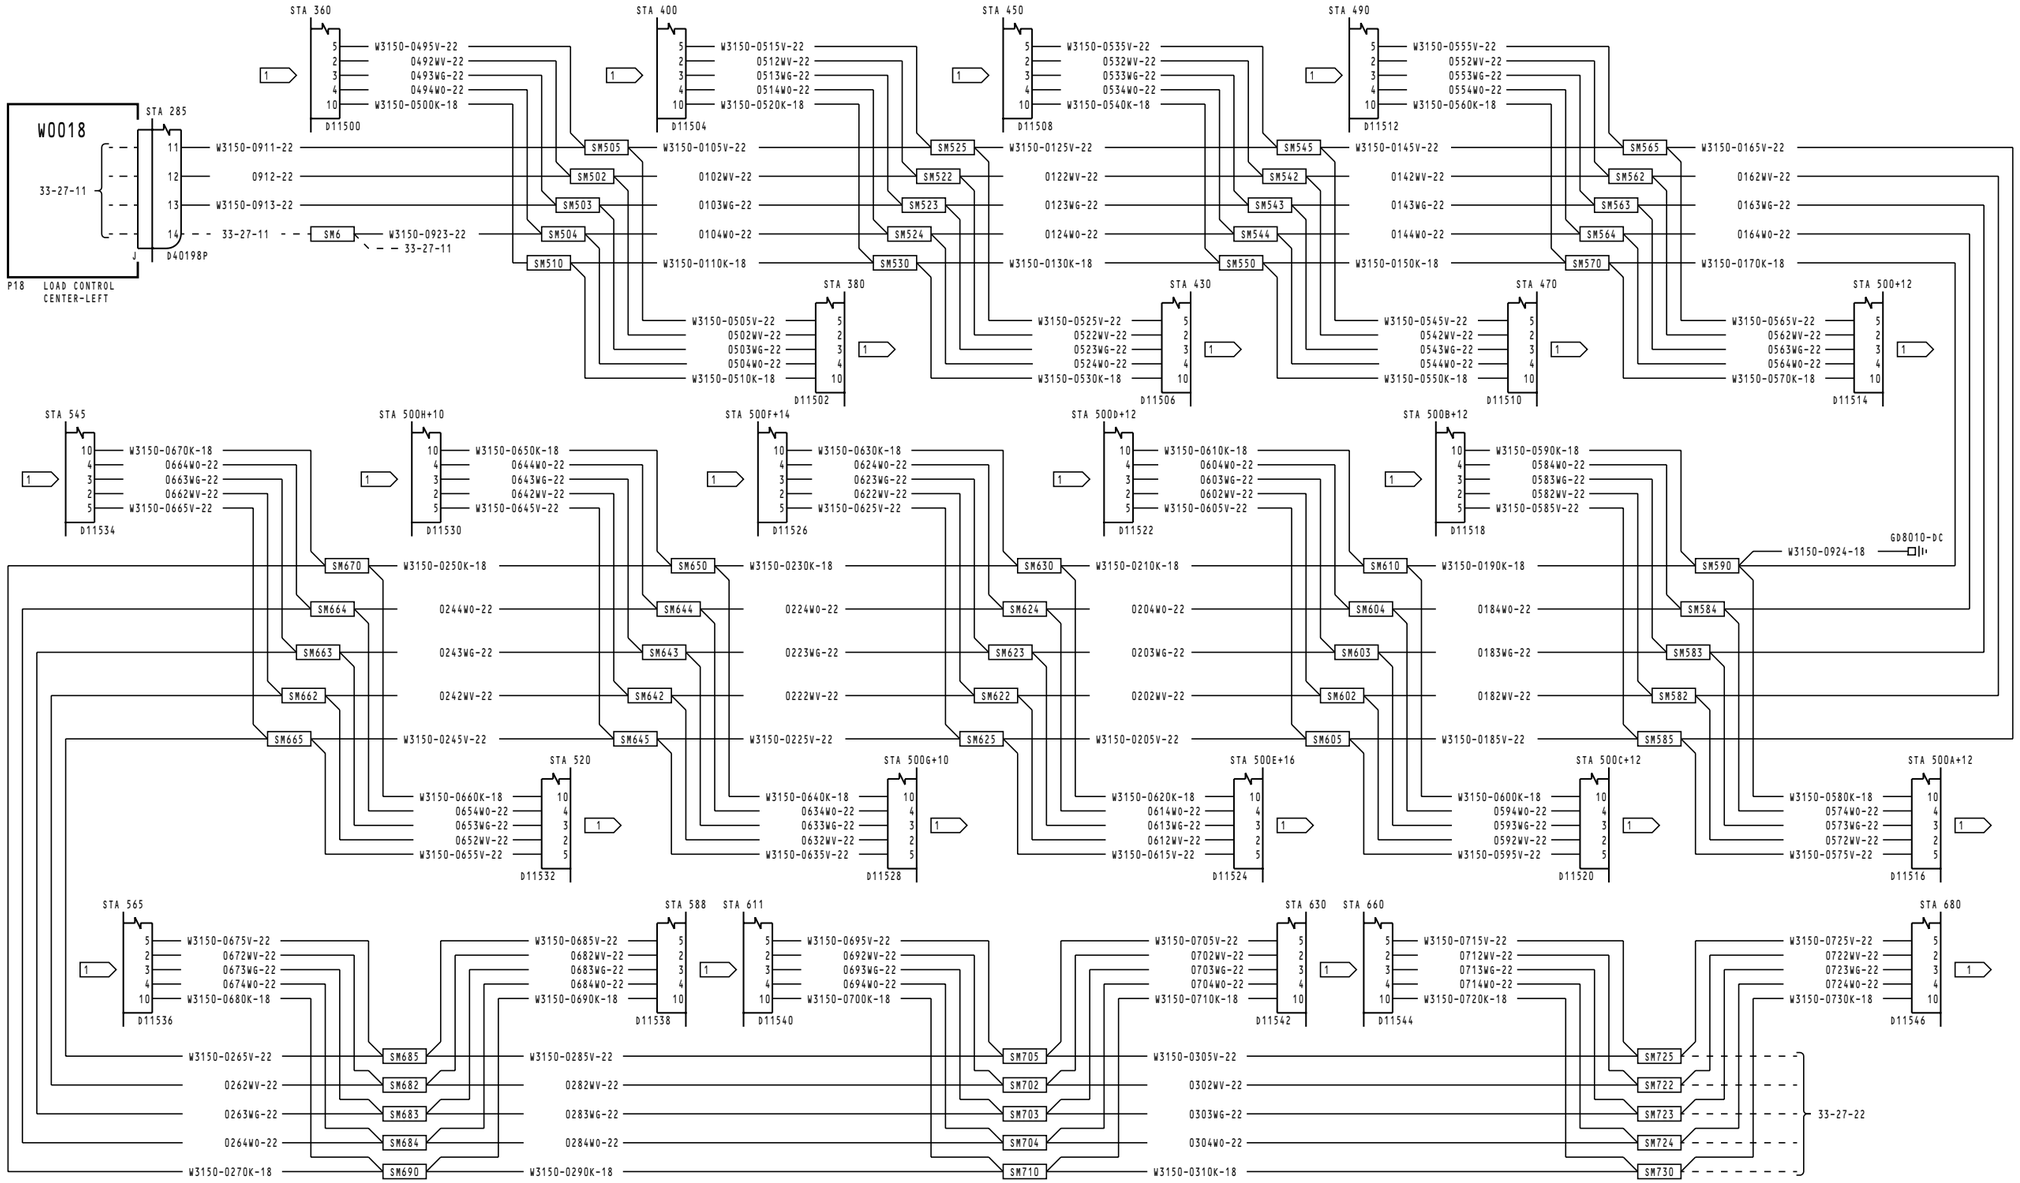


NOTES:

FOR WIRE BUNDLE W3150, WIRE NUMBERS ON COLORED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-27-41).



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-27-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL



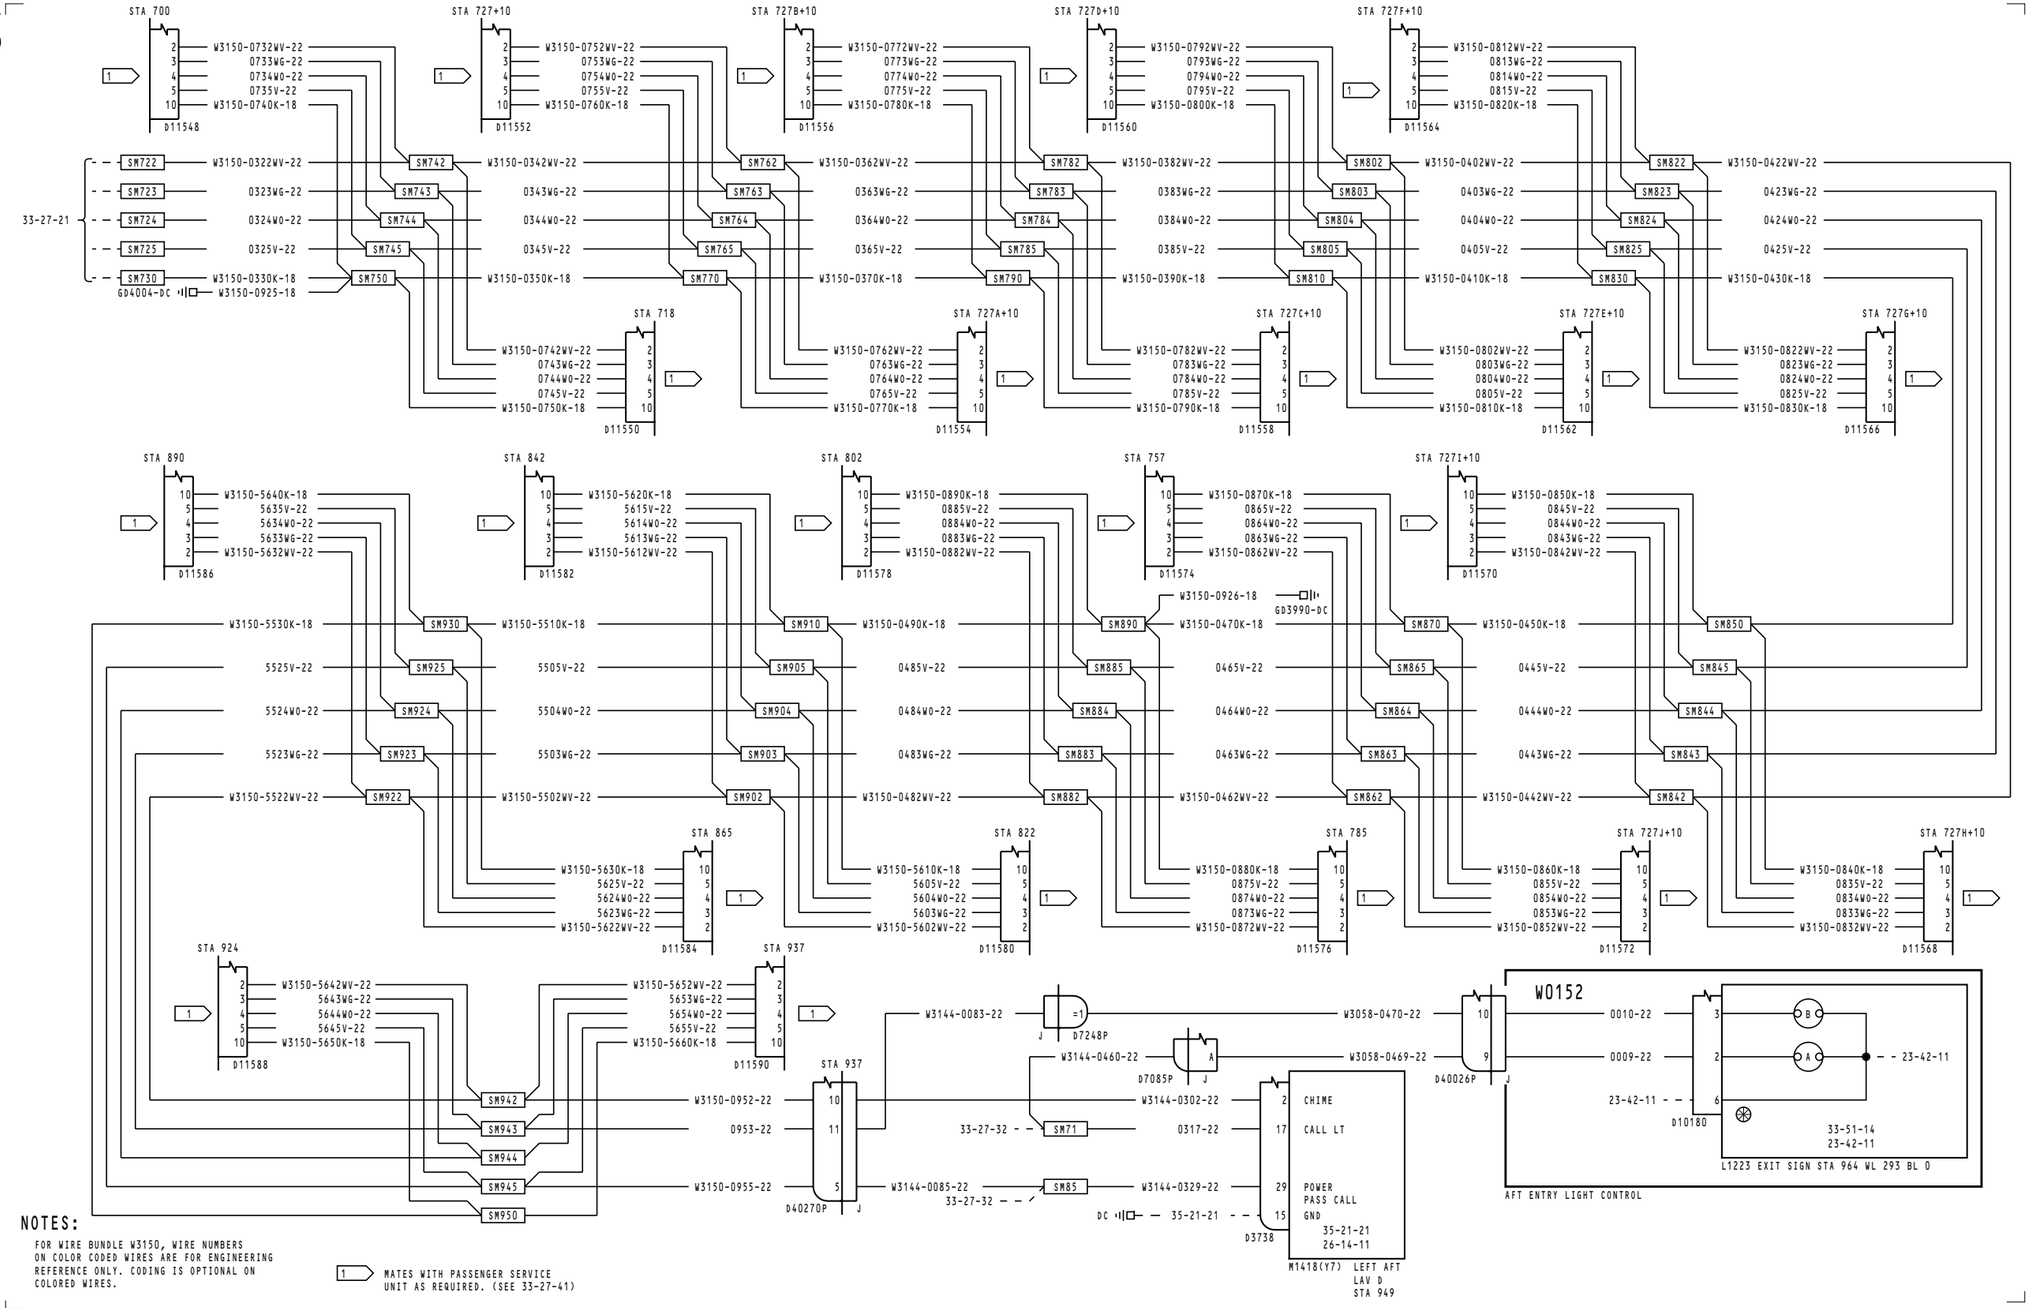


NOTES:

FOR WIRE BUNDLE W315O, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-27-41)



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-27-22

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

6

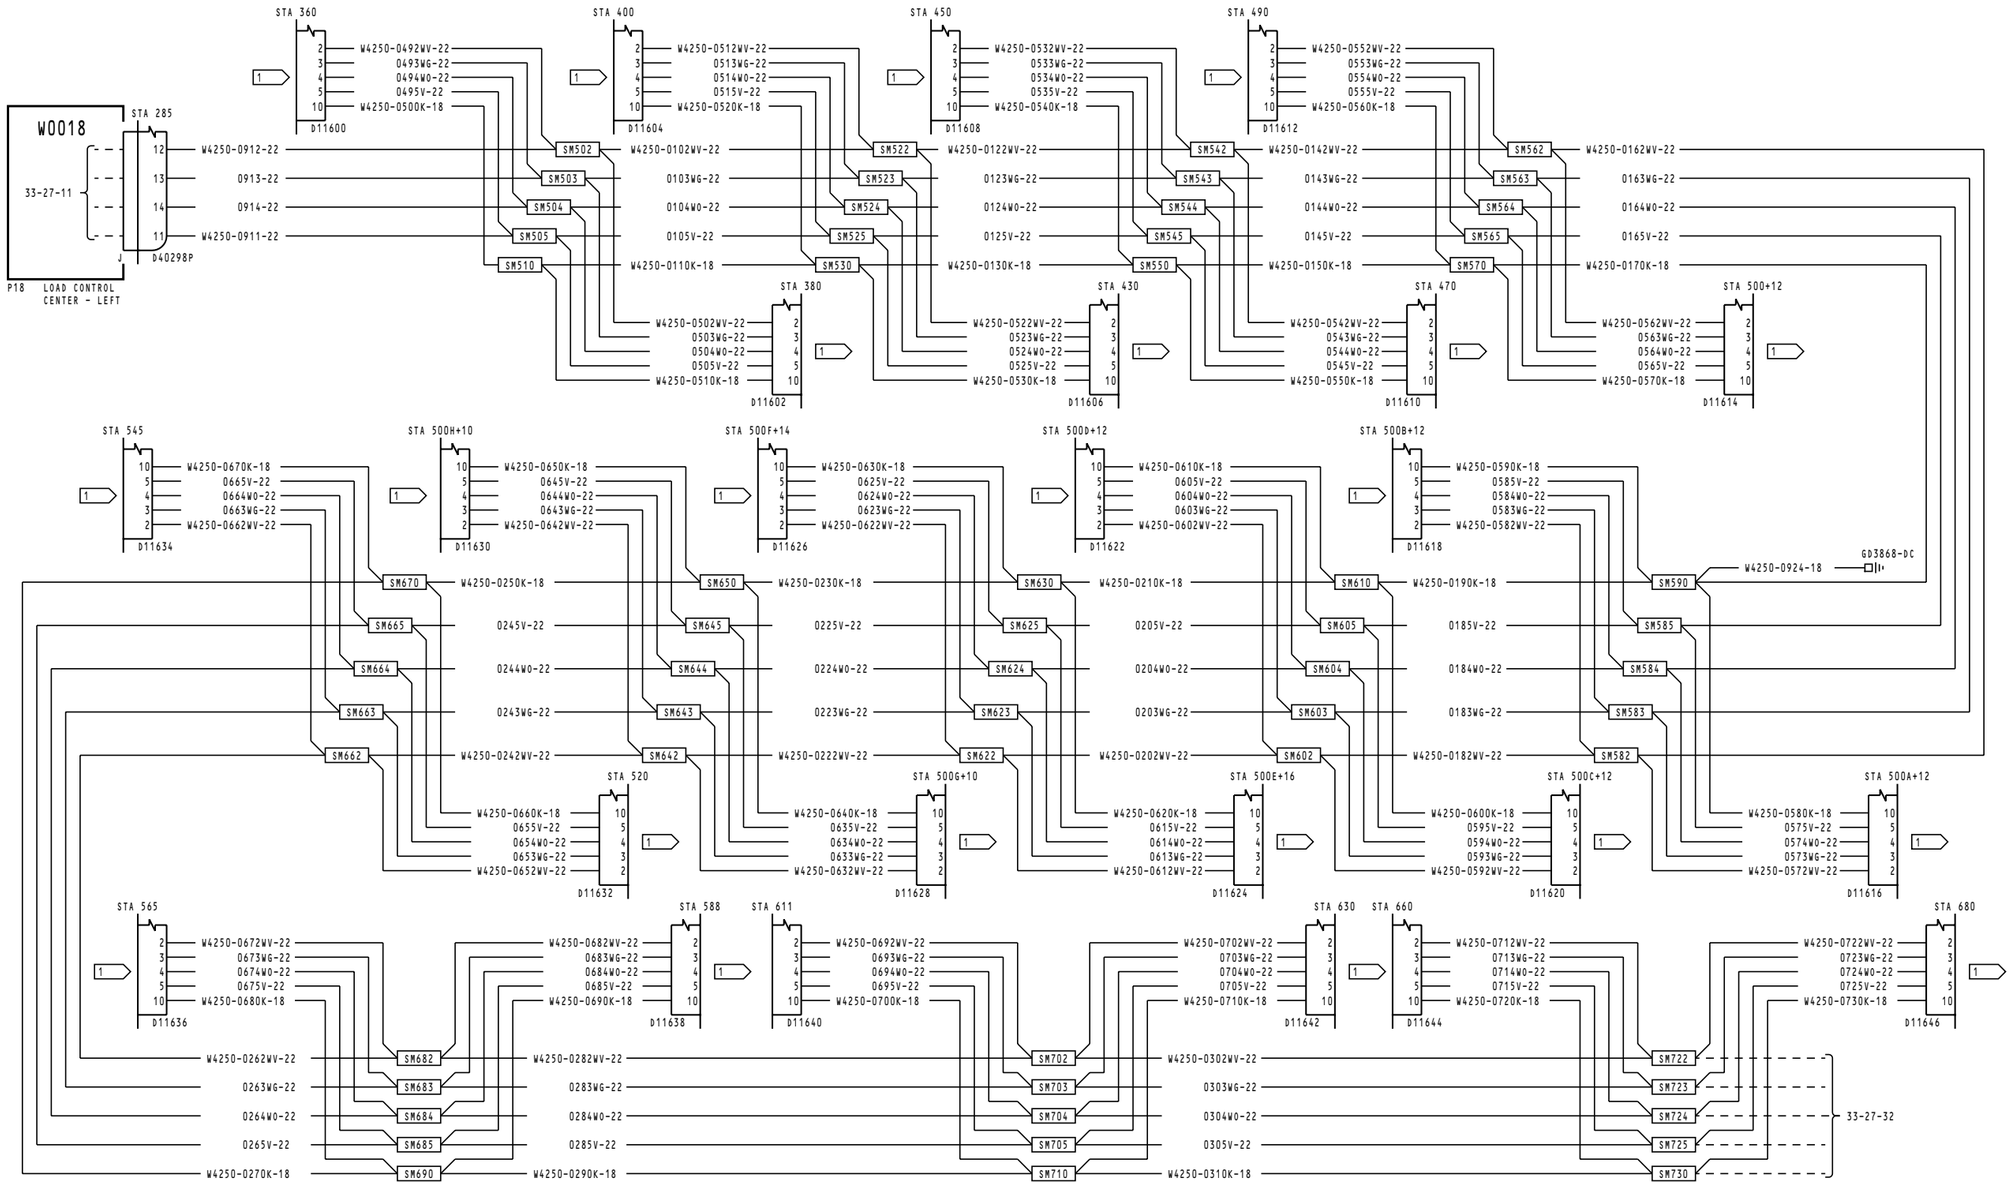


NOTES:

FOR WIRE BUNDLE W4250, WIRE NUMBERS ON COLOR CODED WIRES ARE FOR ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-27-41)



33-27-31


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
45

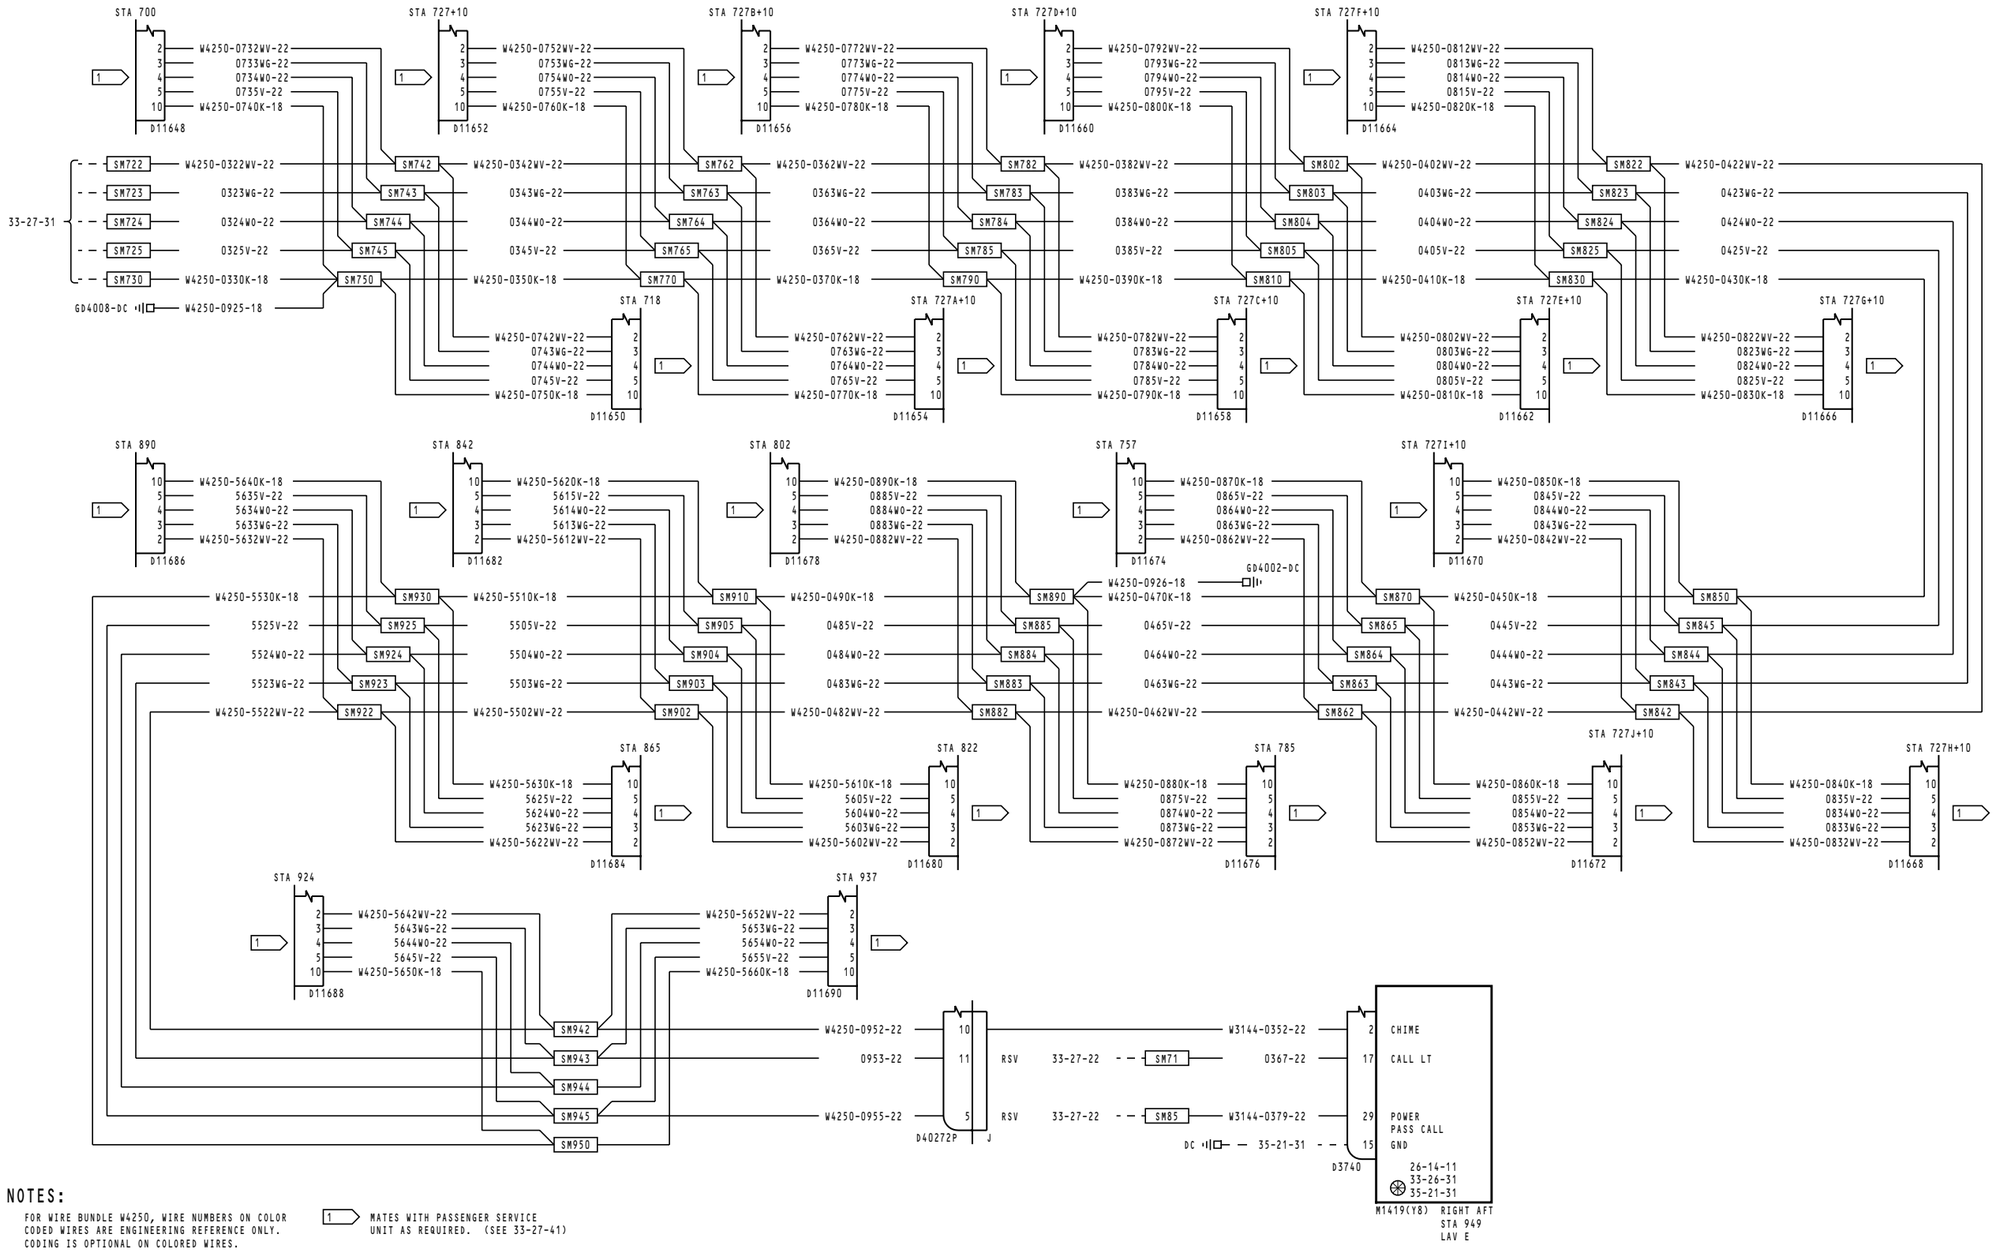


NOTES:

FOR WIRE BUNDLE W4250, WIRE NUMBERS ON COLOR CODED WIRES ARE ENGINEERING REFERENCE ONLY. CODING IS OPTIONAL ON COLORED WIRES.

1 MATES WITH PASSENGER SERVICE UNIT AS REQUIRED. (SEE 33-27-41)



ECCN 9E991 BOEING PROPRIETARY - See title page for details



33-27-32

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

9

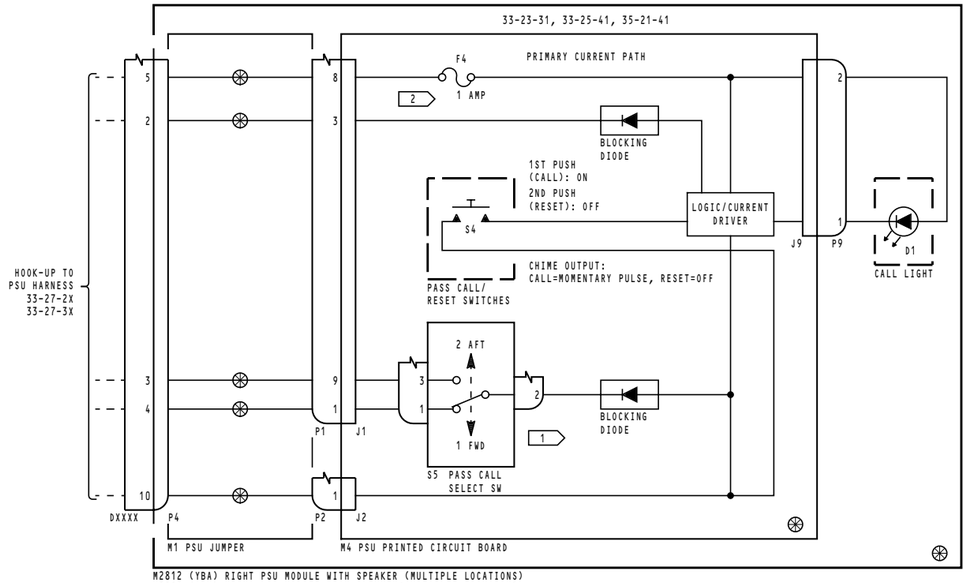


M2812 (YBA) RIGHT PSU MODULE WITH SPEAKER (MULTIPLE LOCATIONS)
M2884 (YBD) LEFT PSU MODULE WITH SPEAKER (MULTIPLE LOCATIONS)

NOTES:

1. FOR MULTI CLASS CONFIGURATION:
   MOVE SWITCH S5 TO POSITION 1 FOR PSUS FWD OF CLASS PARTITION
   MOVE SWITCH S5 TO POSITION 2 FOR PSUS AFT OF CLASS PARTITION
   FOR SINGLE CLASS CONFIGURATION:
   MOVE SWITCH S5 TO POSITION 1 FOR FWD HALF OF PSUS
   MOVE SWITCH S5 TO POSITION 2 FOR AFT HALF OF PSUS
2. FUSE IS REPLACEABLE



33-27-41

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A

89

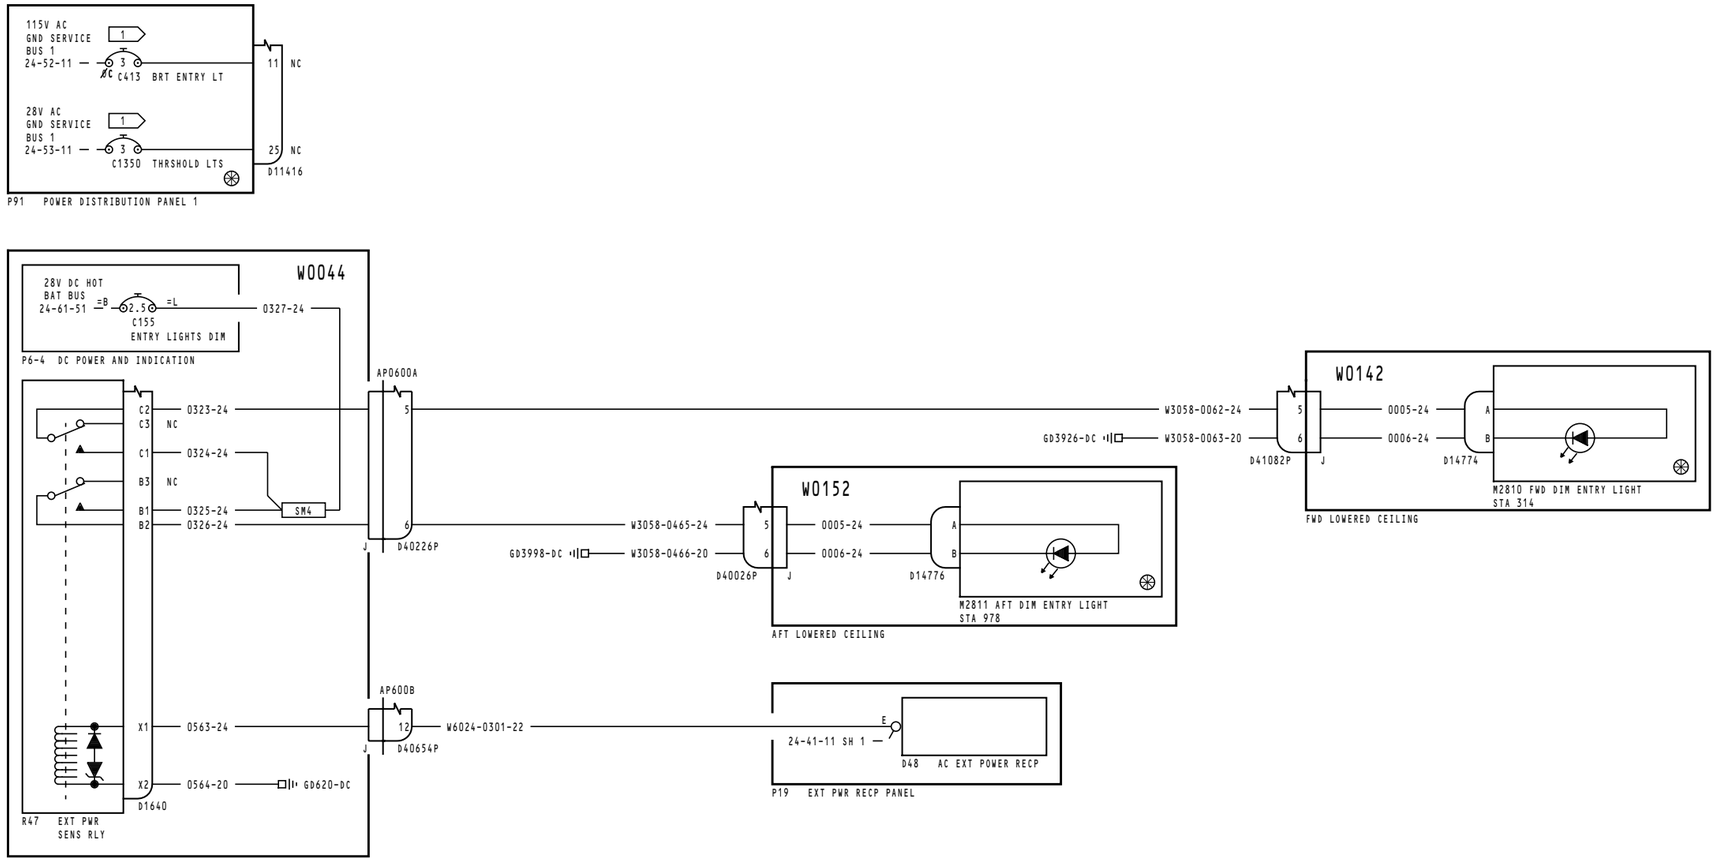


NOTES:

1 COLLAR AND LABEL INOP



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-29-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-H
6

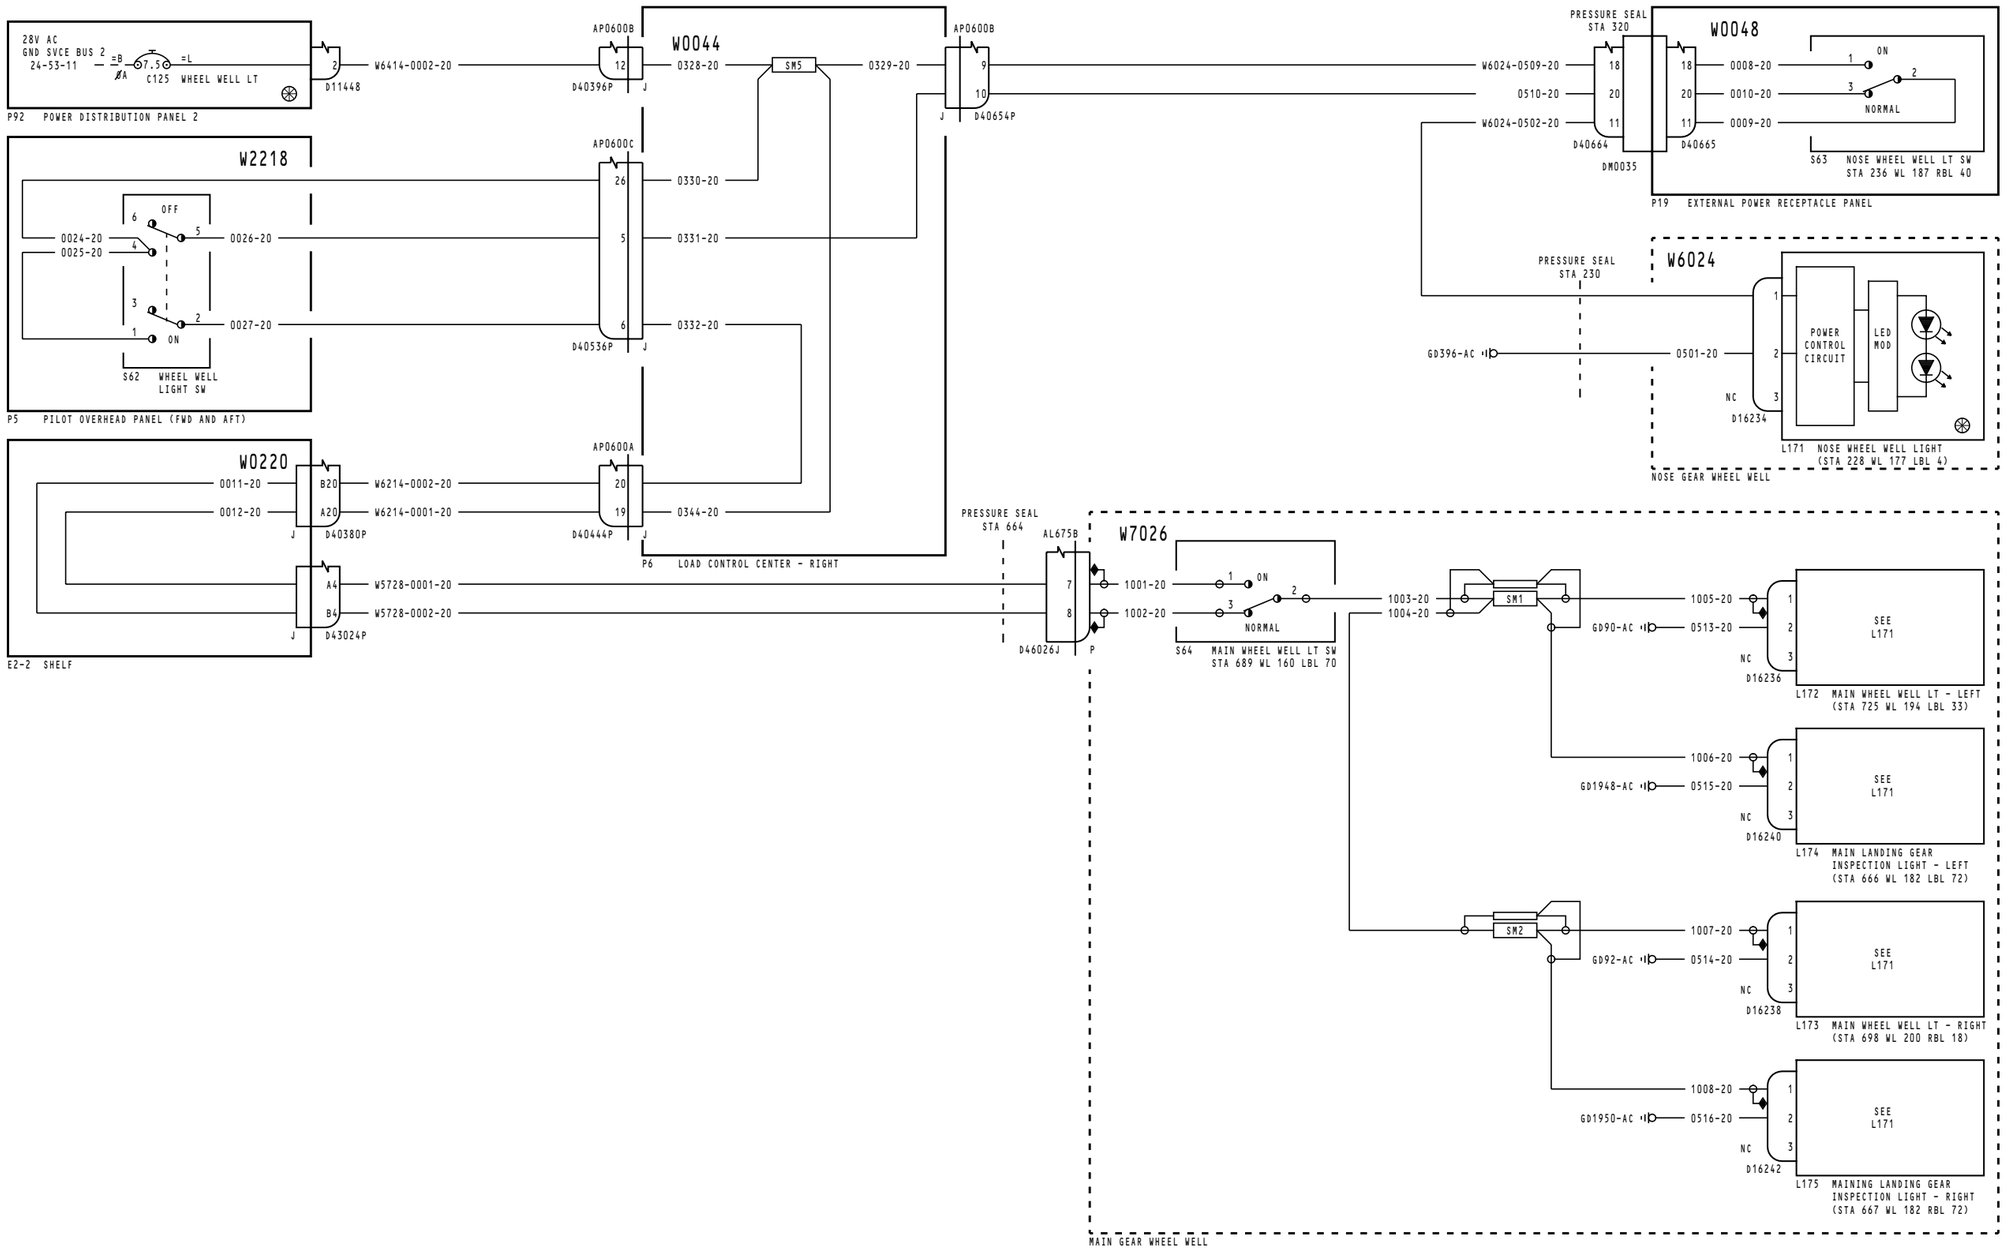





33-32-11

Page 1

Dec 24/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

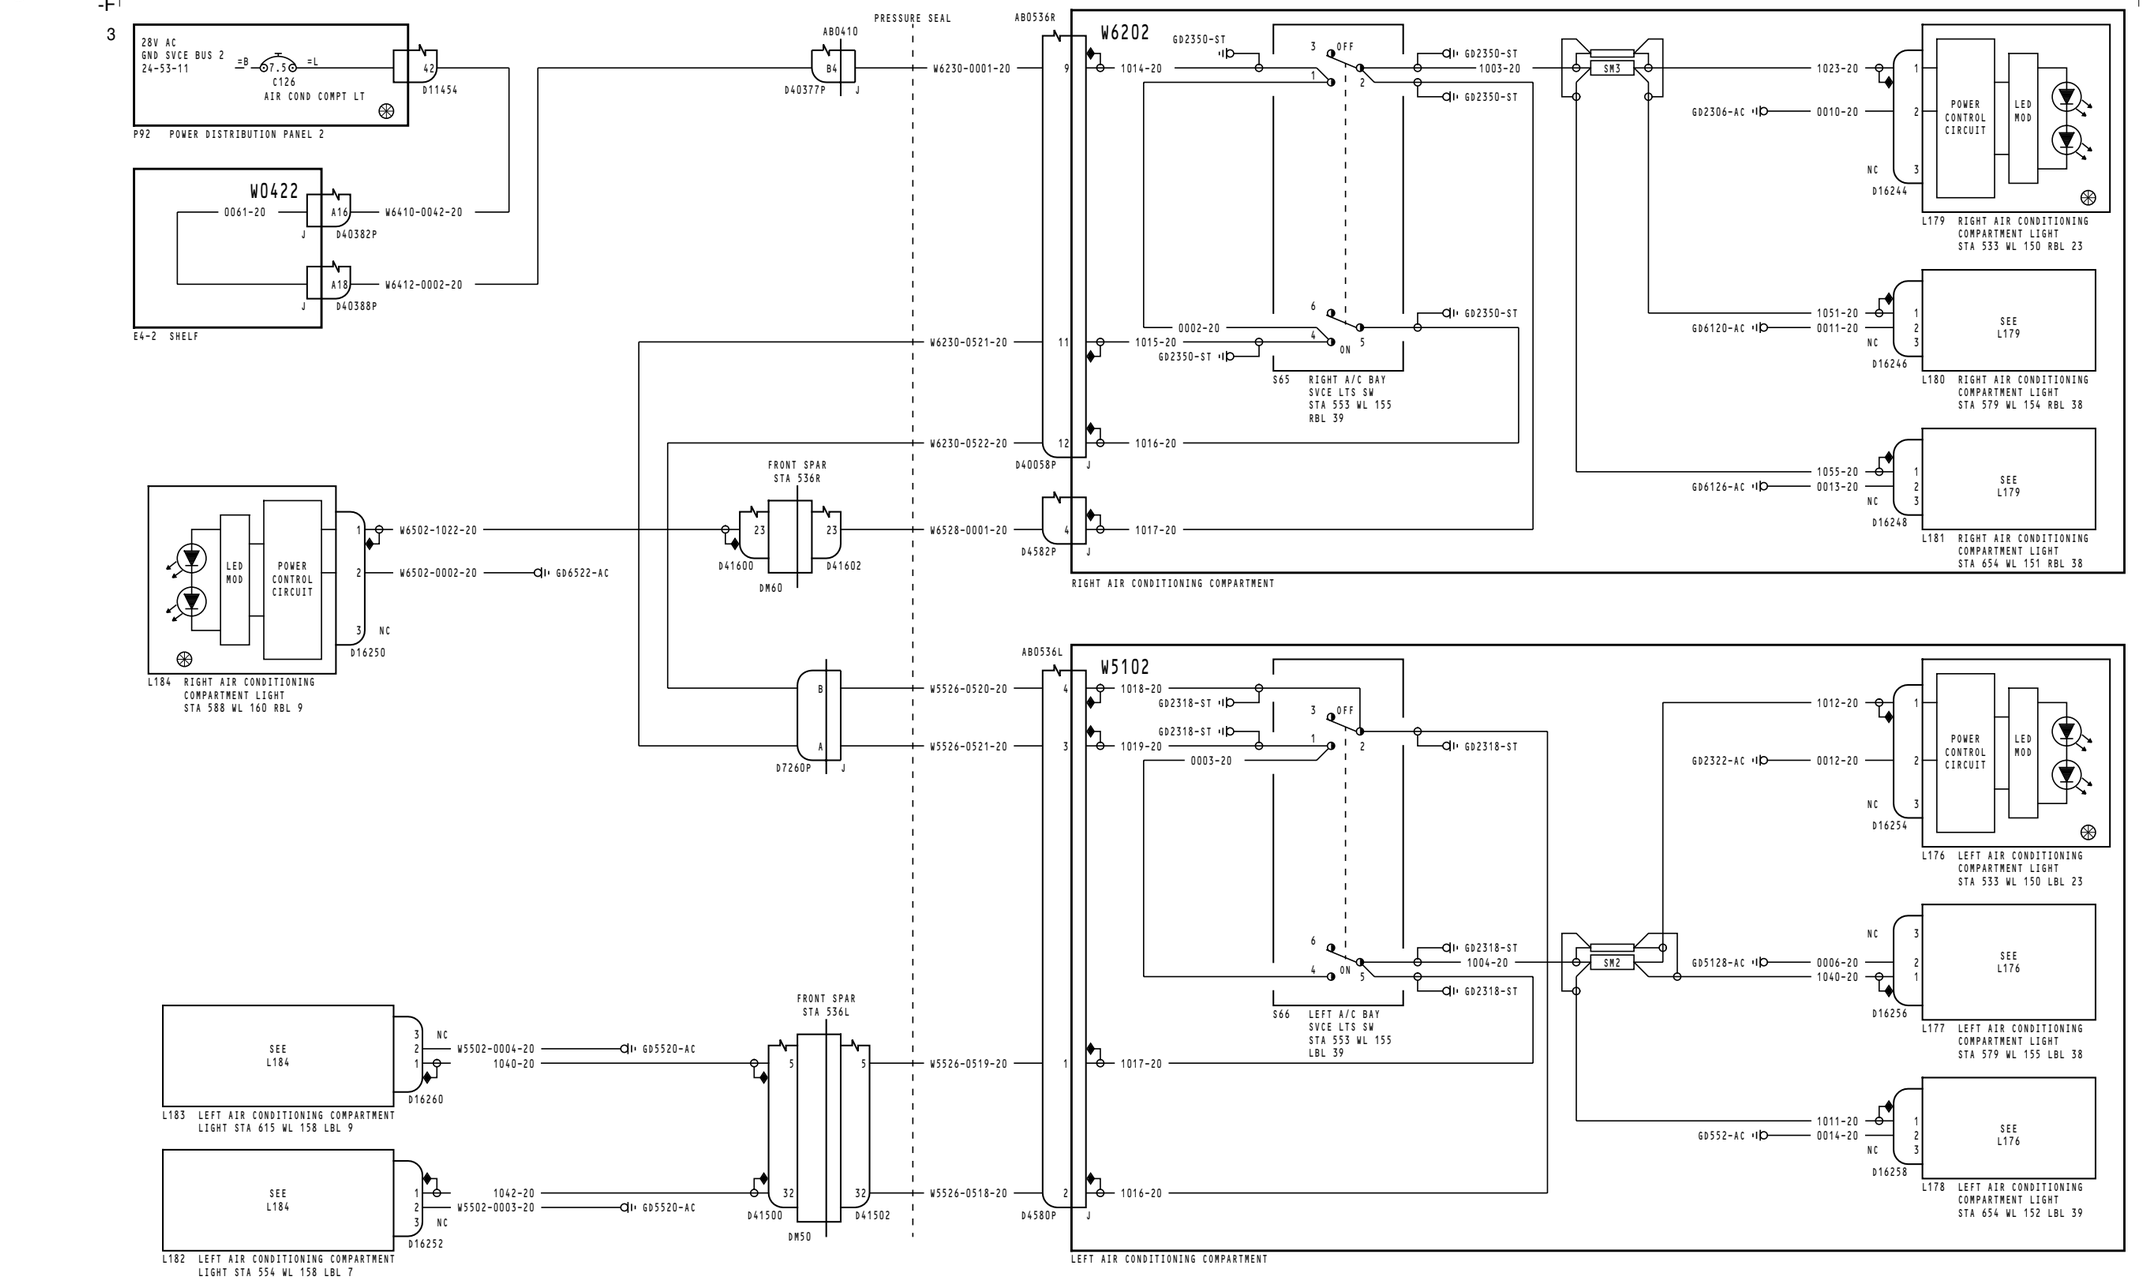





33-33-11

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

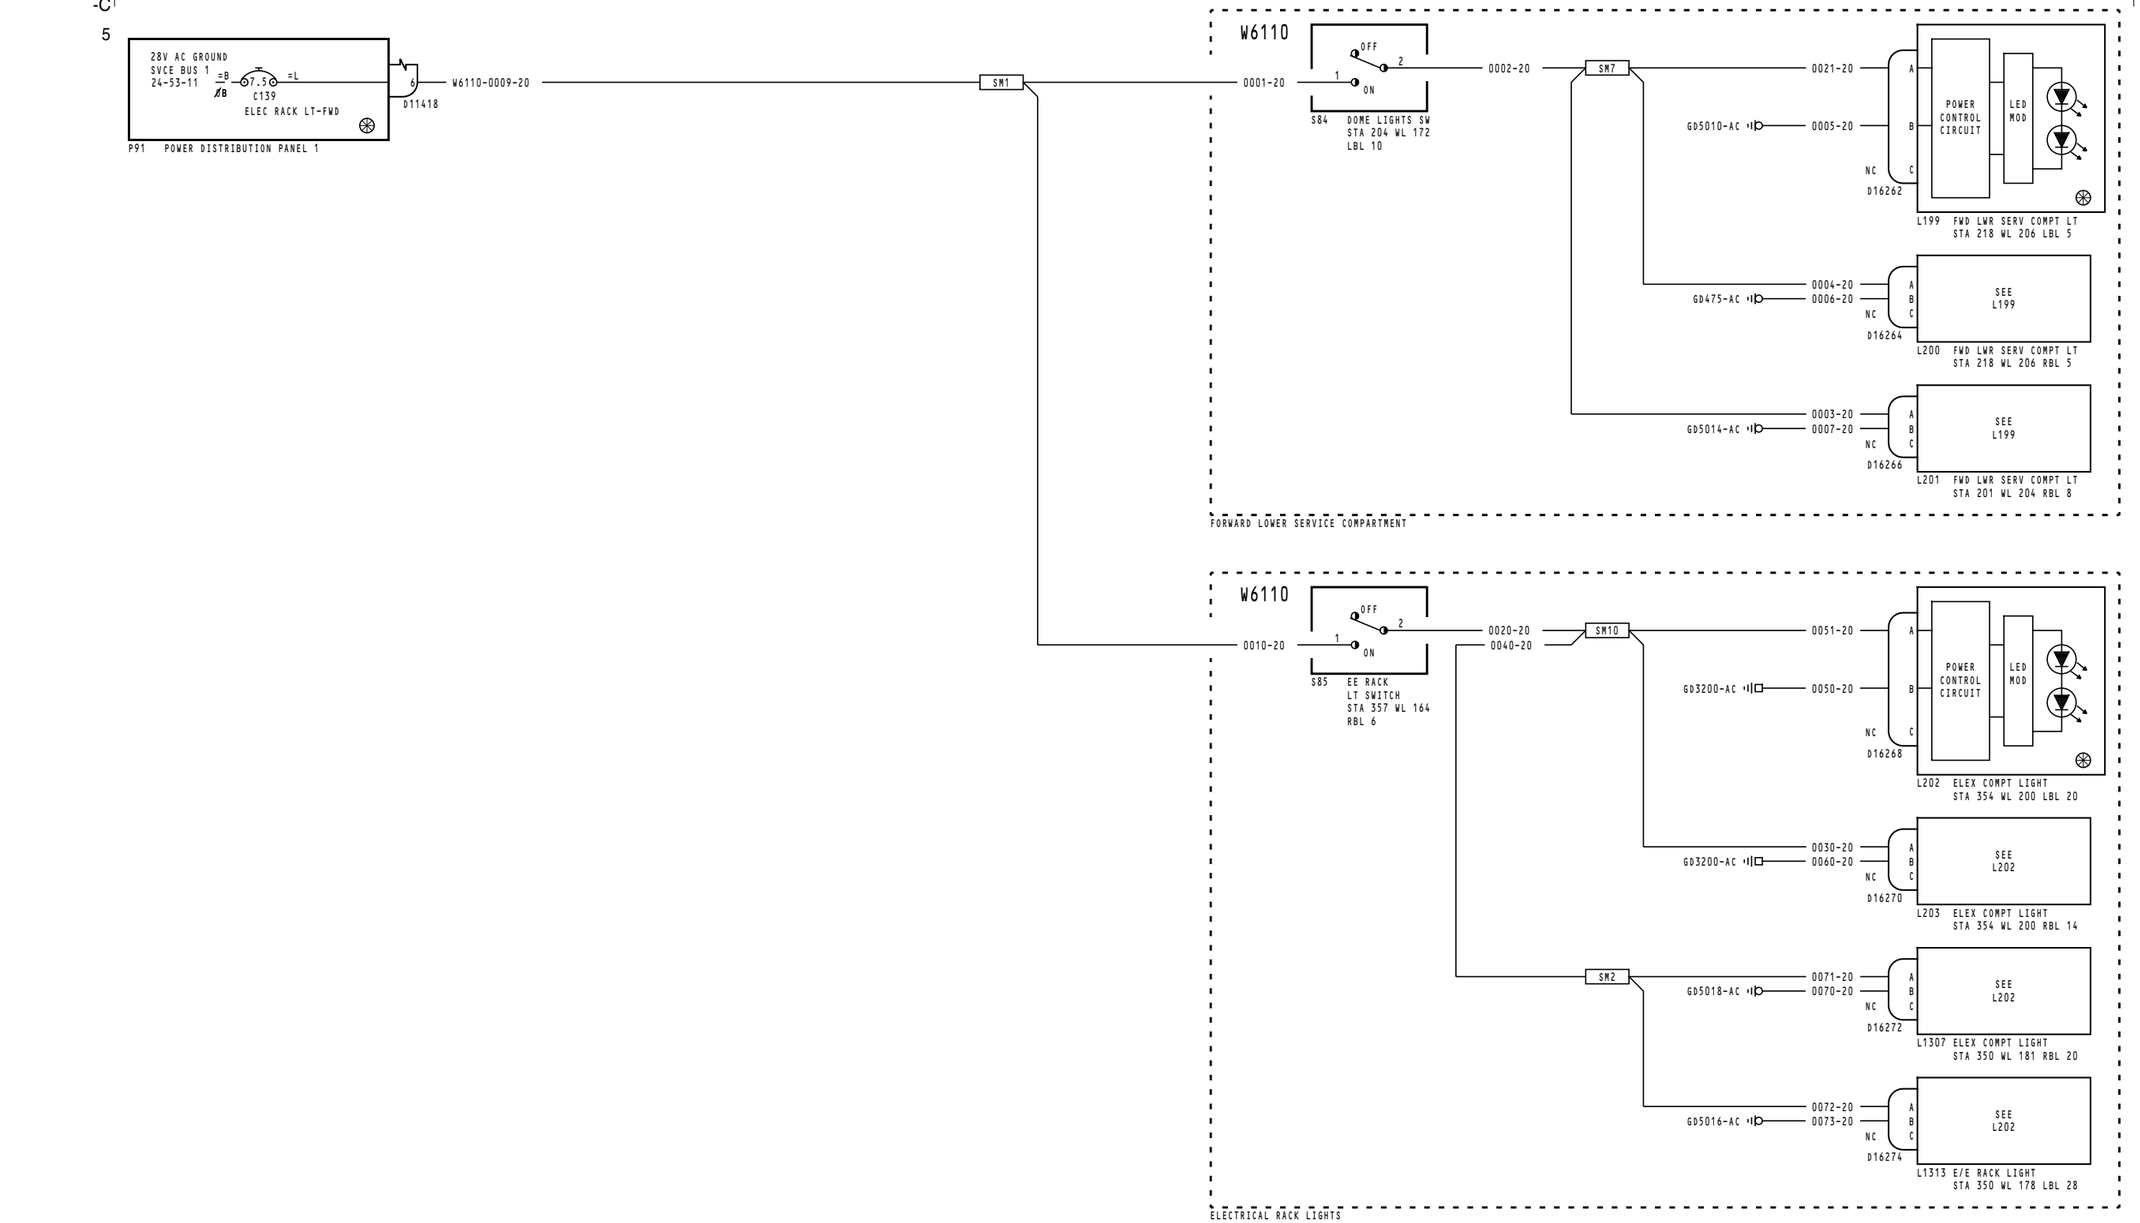




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-34-11


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-E

14

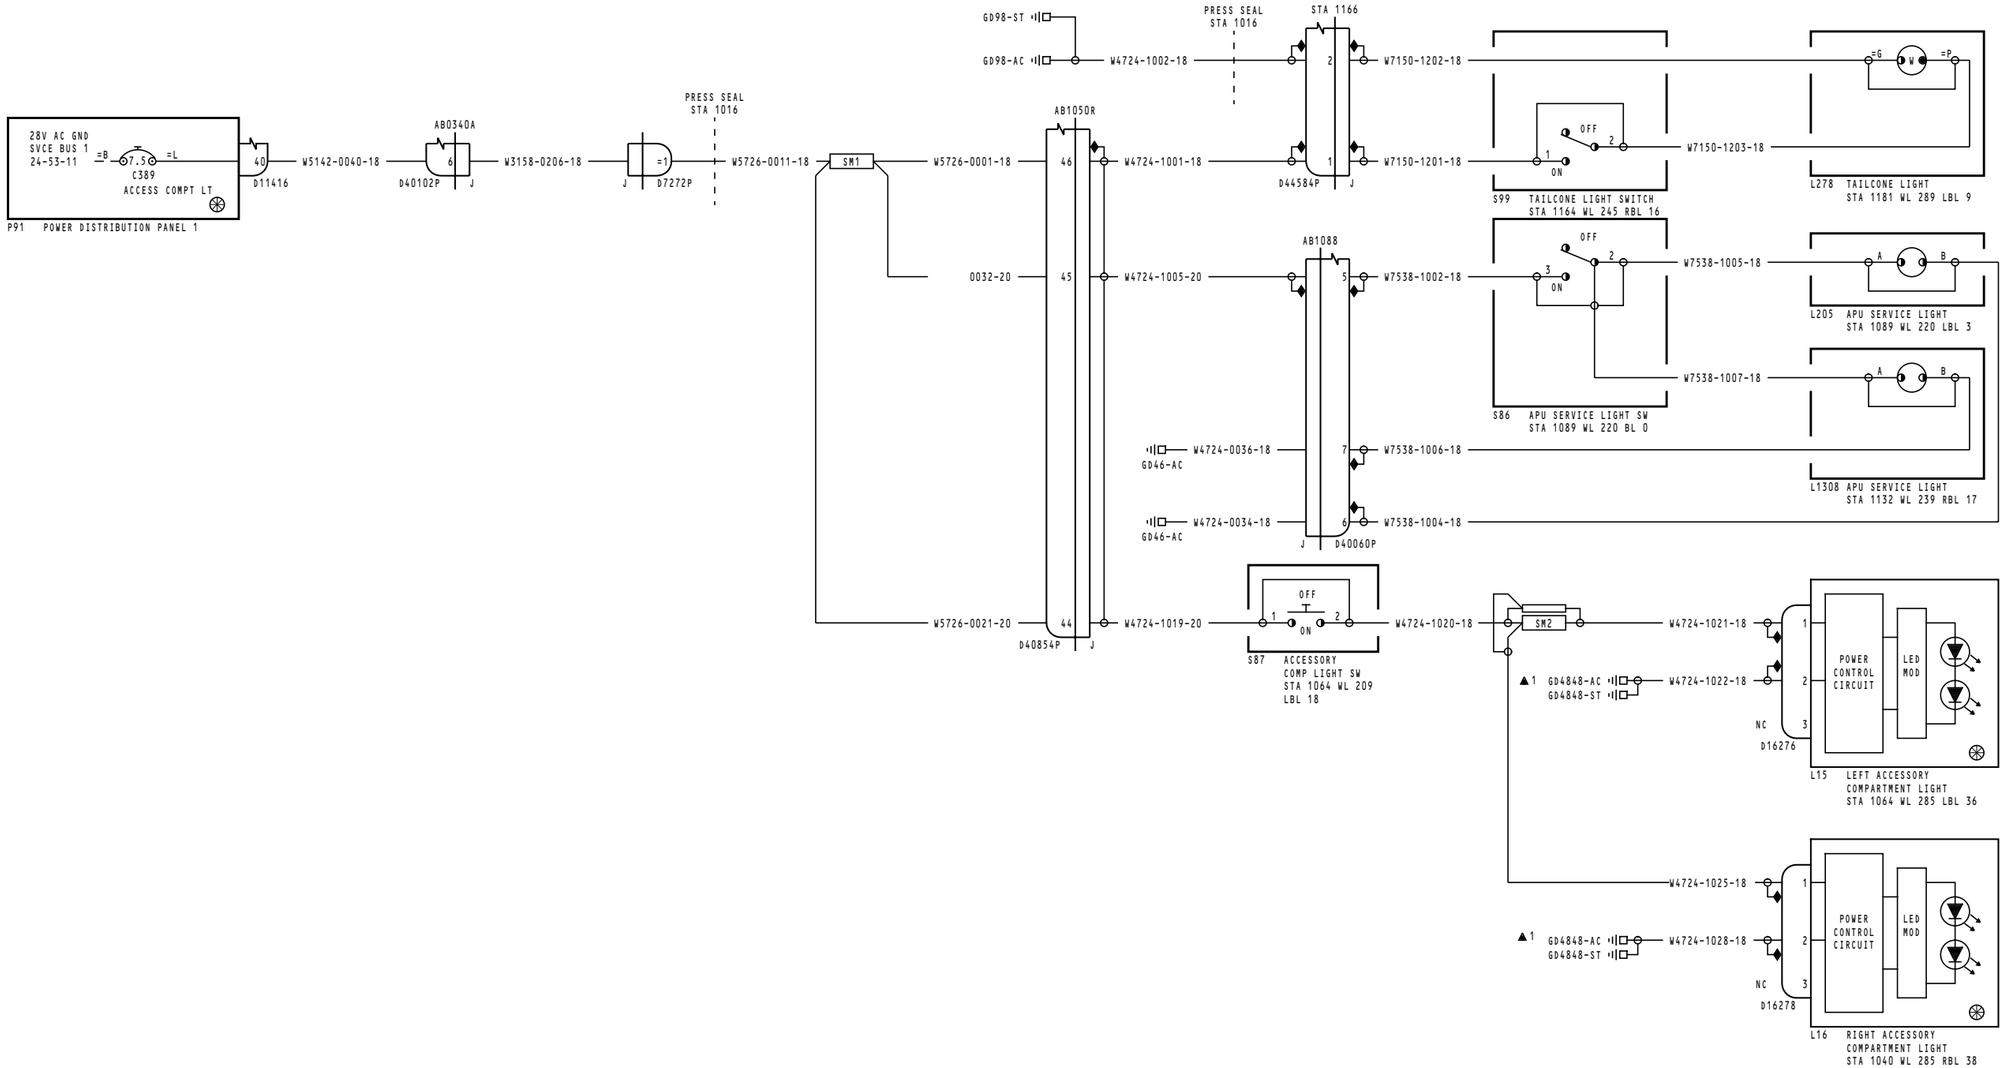


LN1*: THESE WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 100 FT.




33-35-11

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

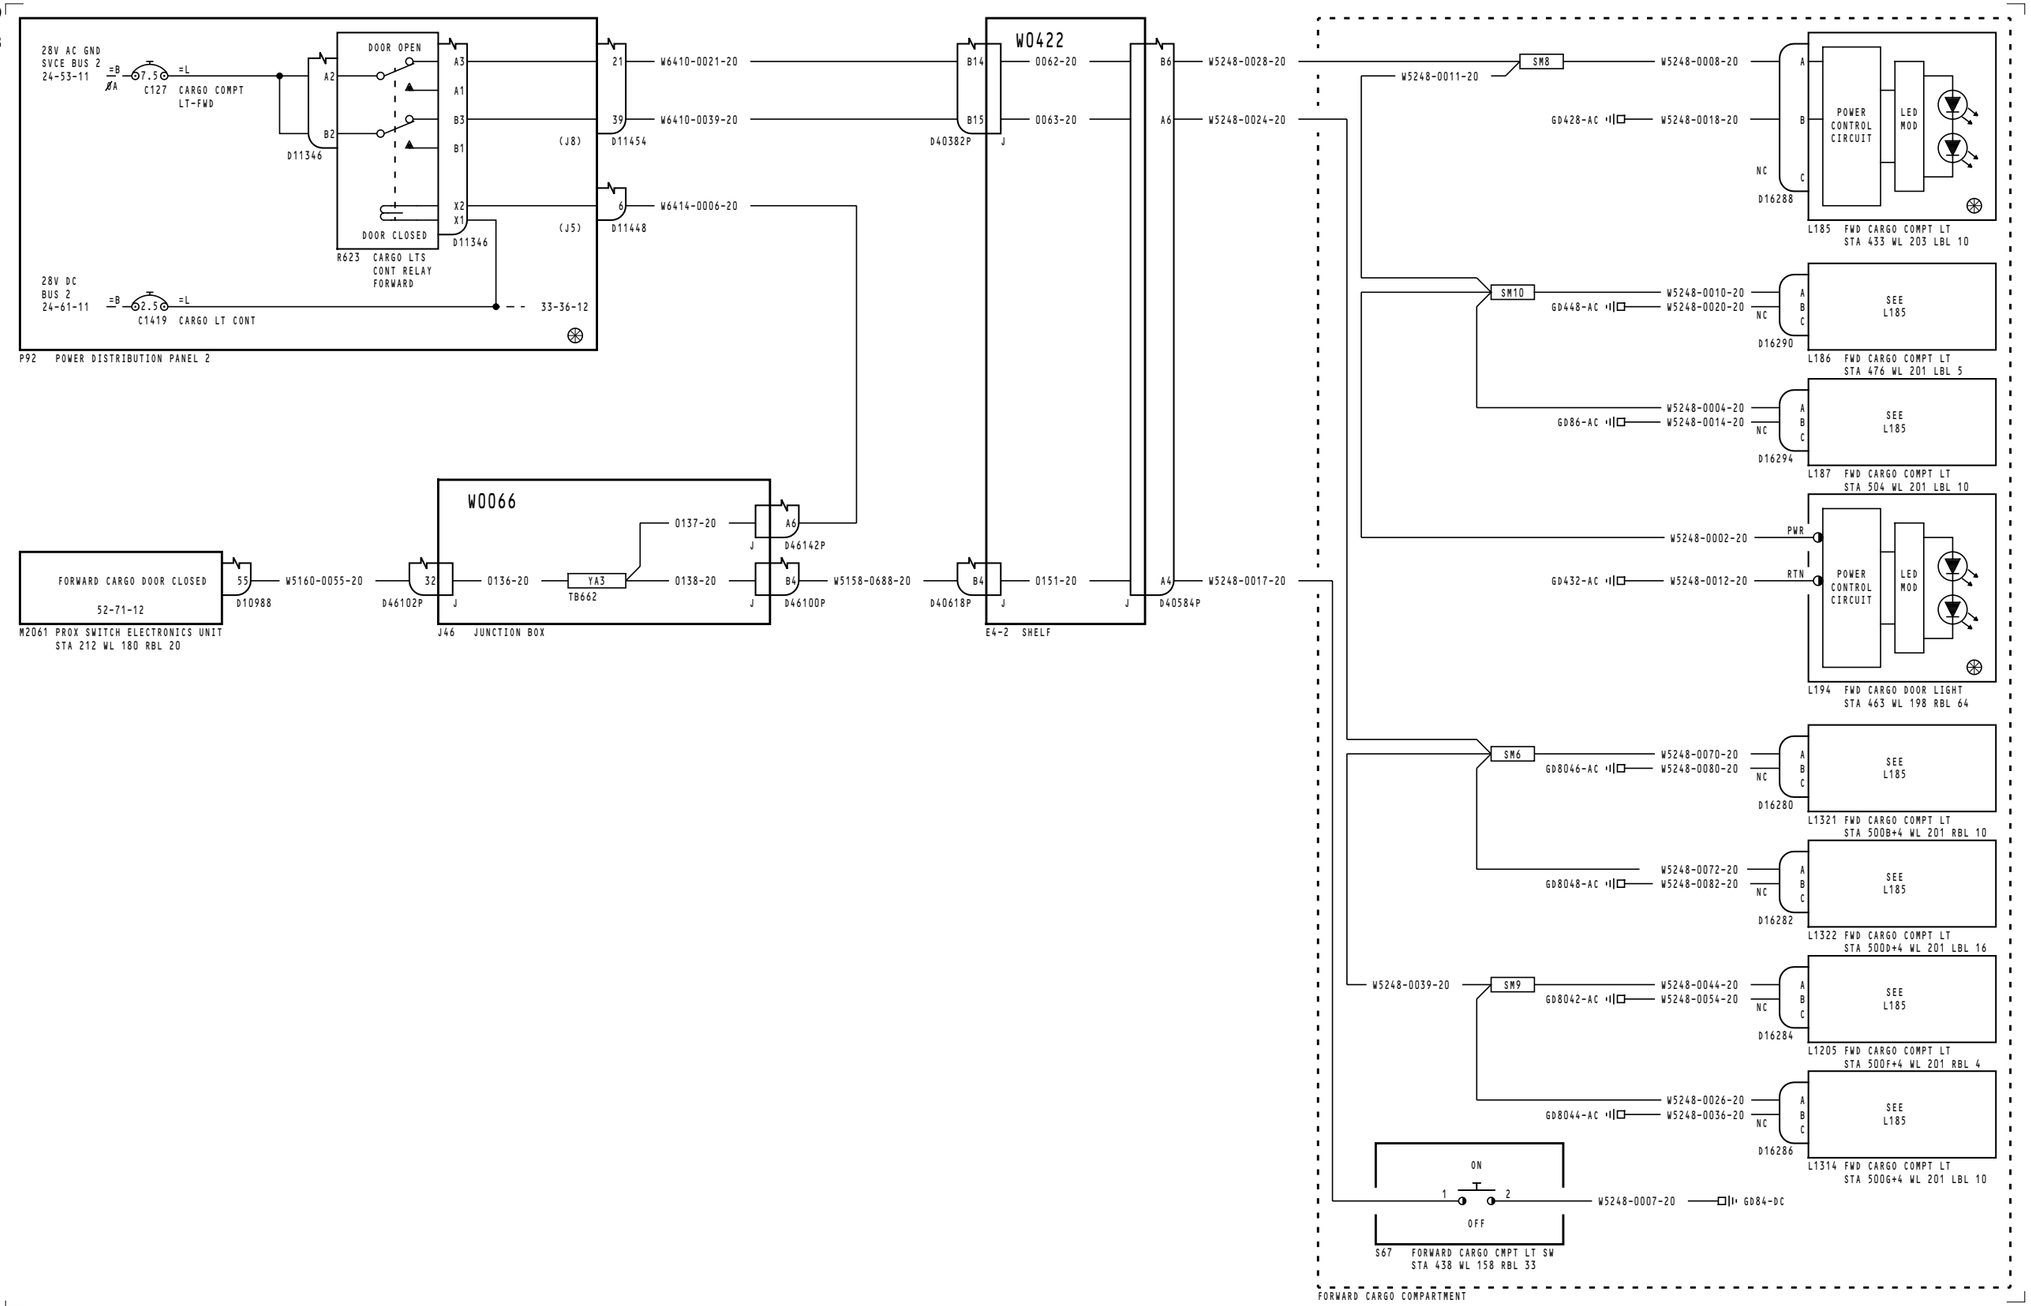




33-36-11


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-E
7

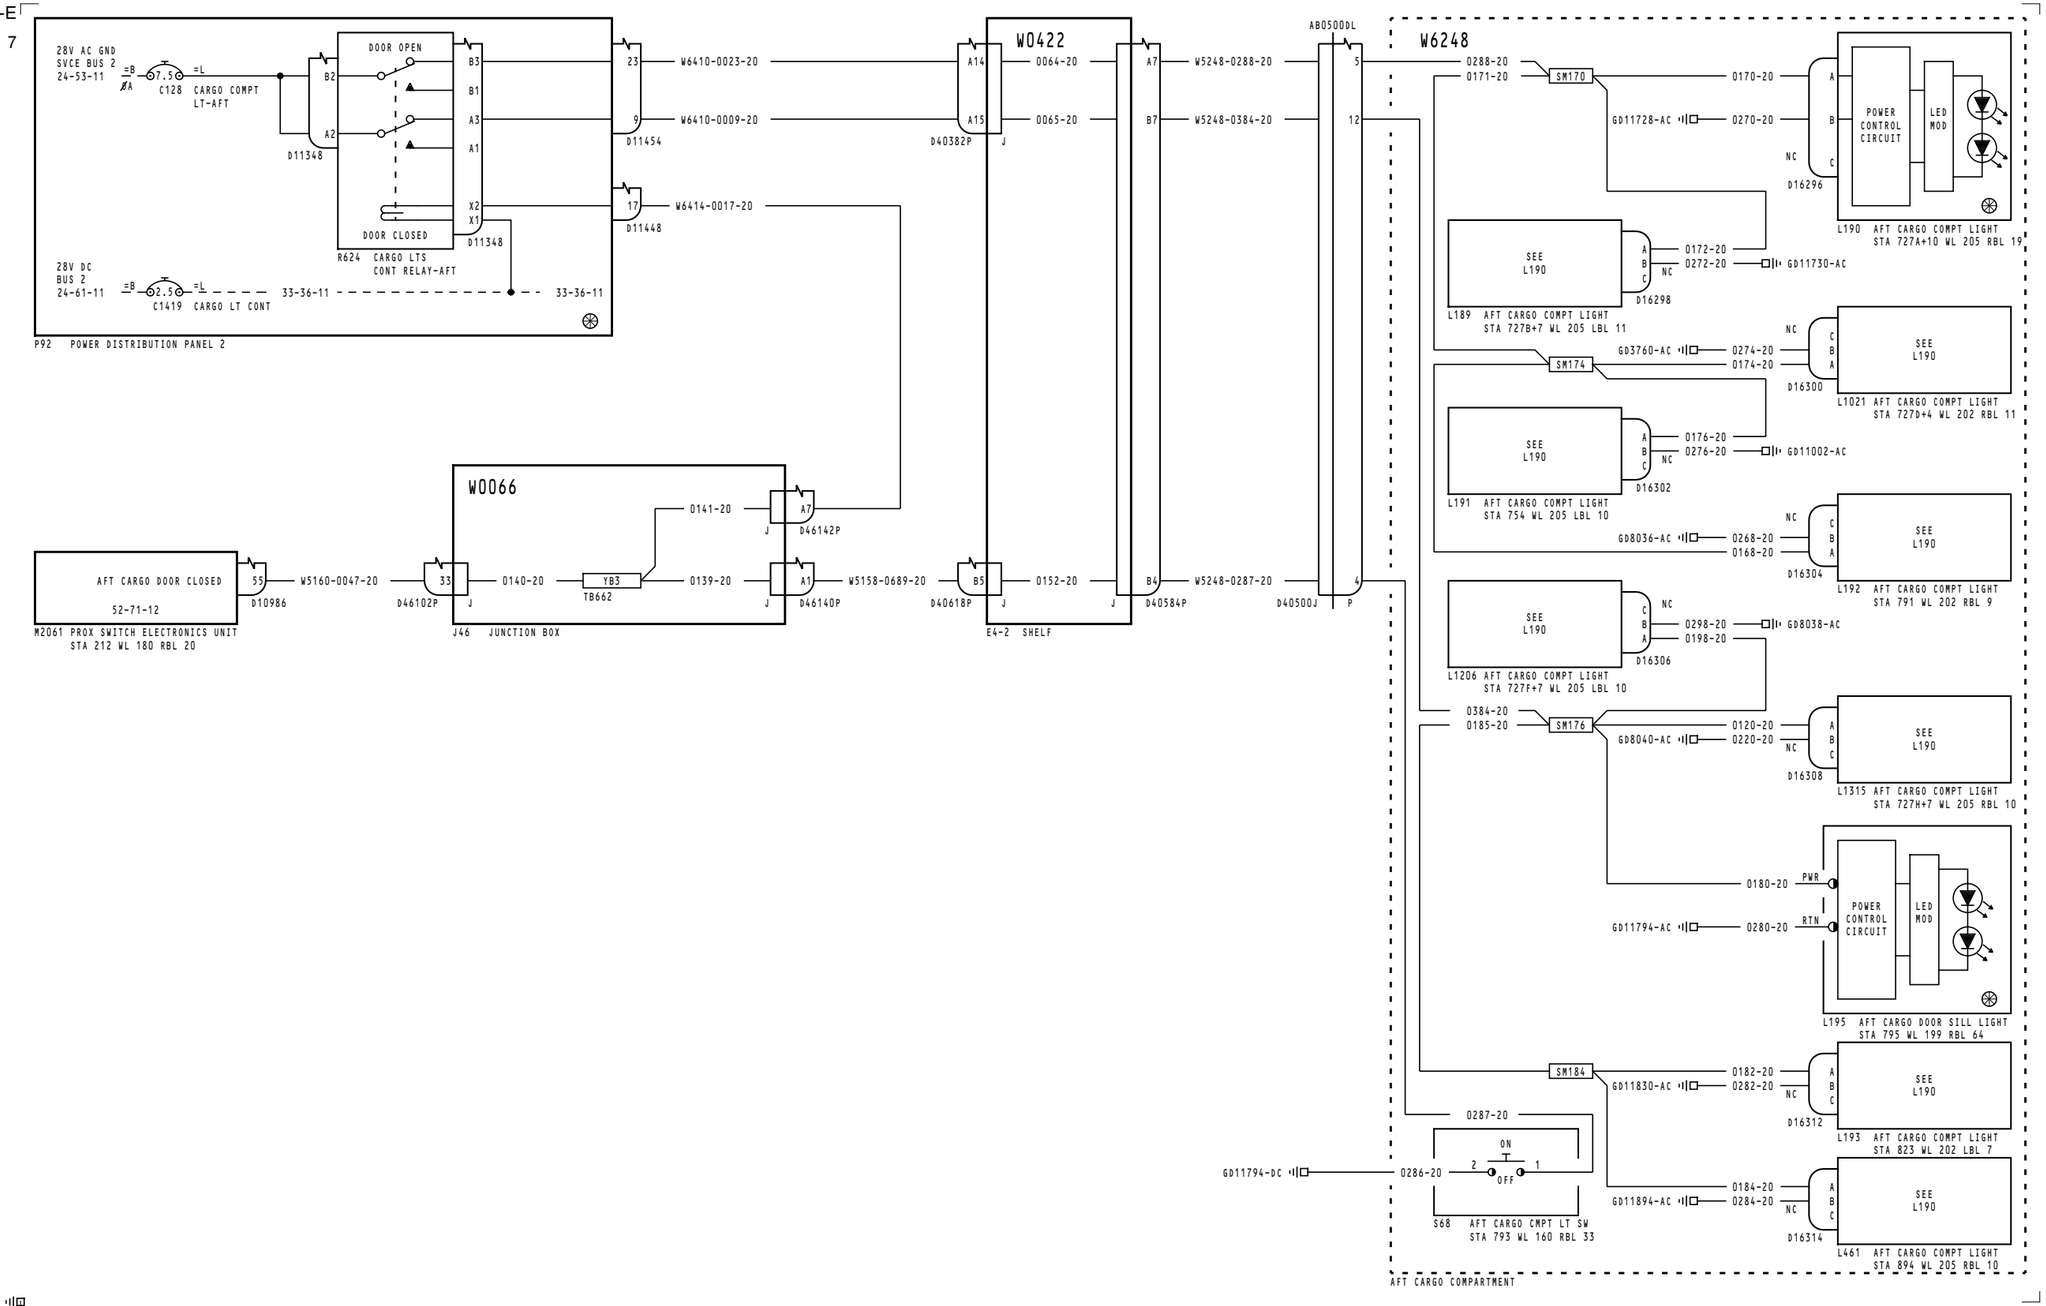





33-36-12

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

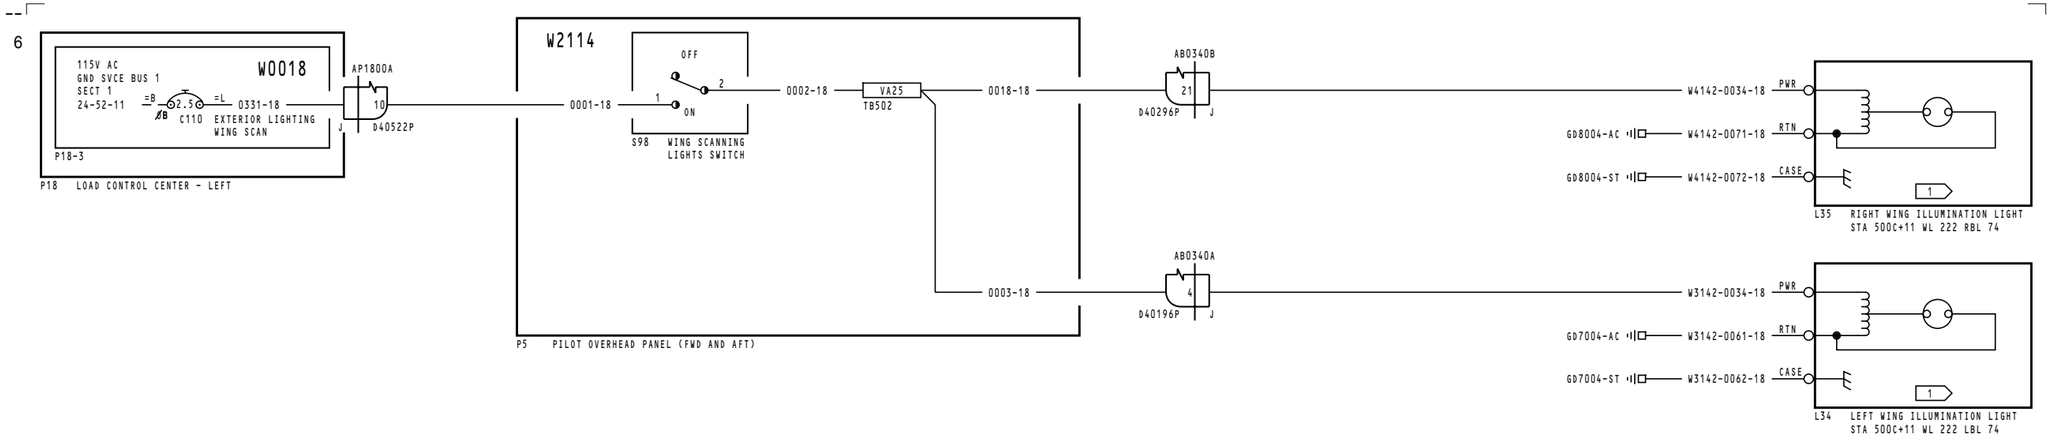


NOTES:

1 TRANSFORMER LOCATED WITHIN PRESSURIZED AREA




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-41-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

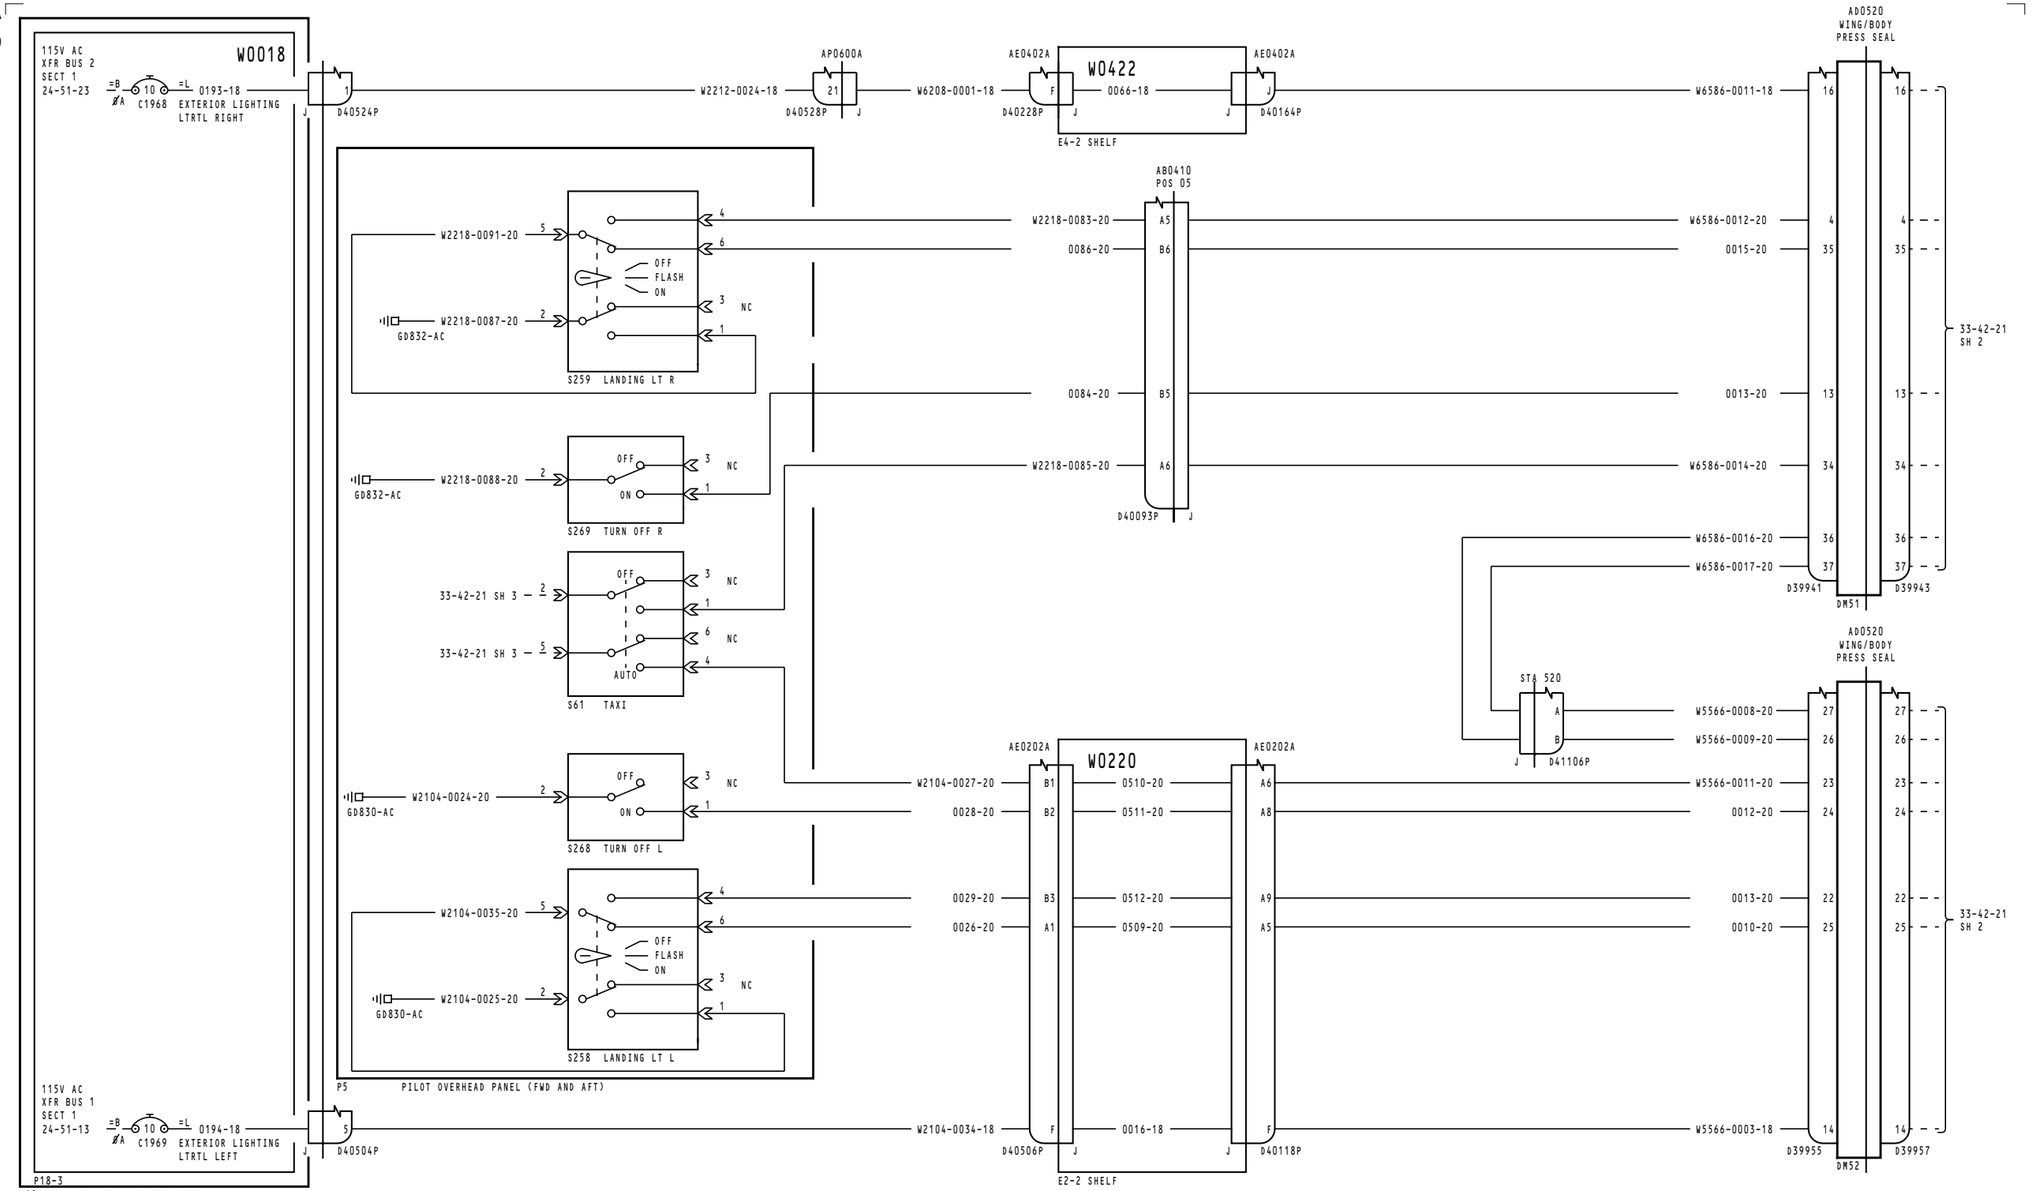


S258 & S259 SWITCH CIRCUIT

| OFF | FLASH | ON |
|---|---|---|
| 2-3, 5-6 | 1-2, 5-6 | 1-2, 4-5 |

RN1* THESE WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 66 FT.

LN1* THESE WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 66 FT.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-42-21

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

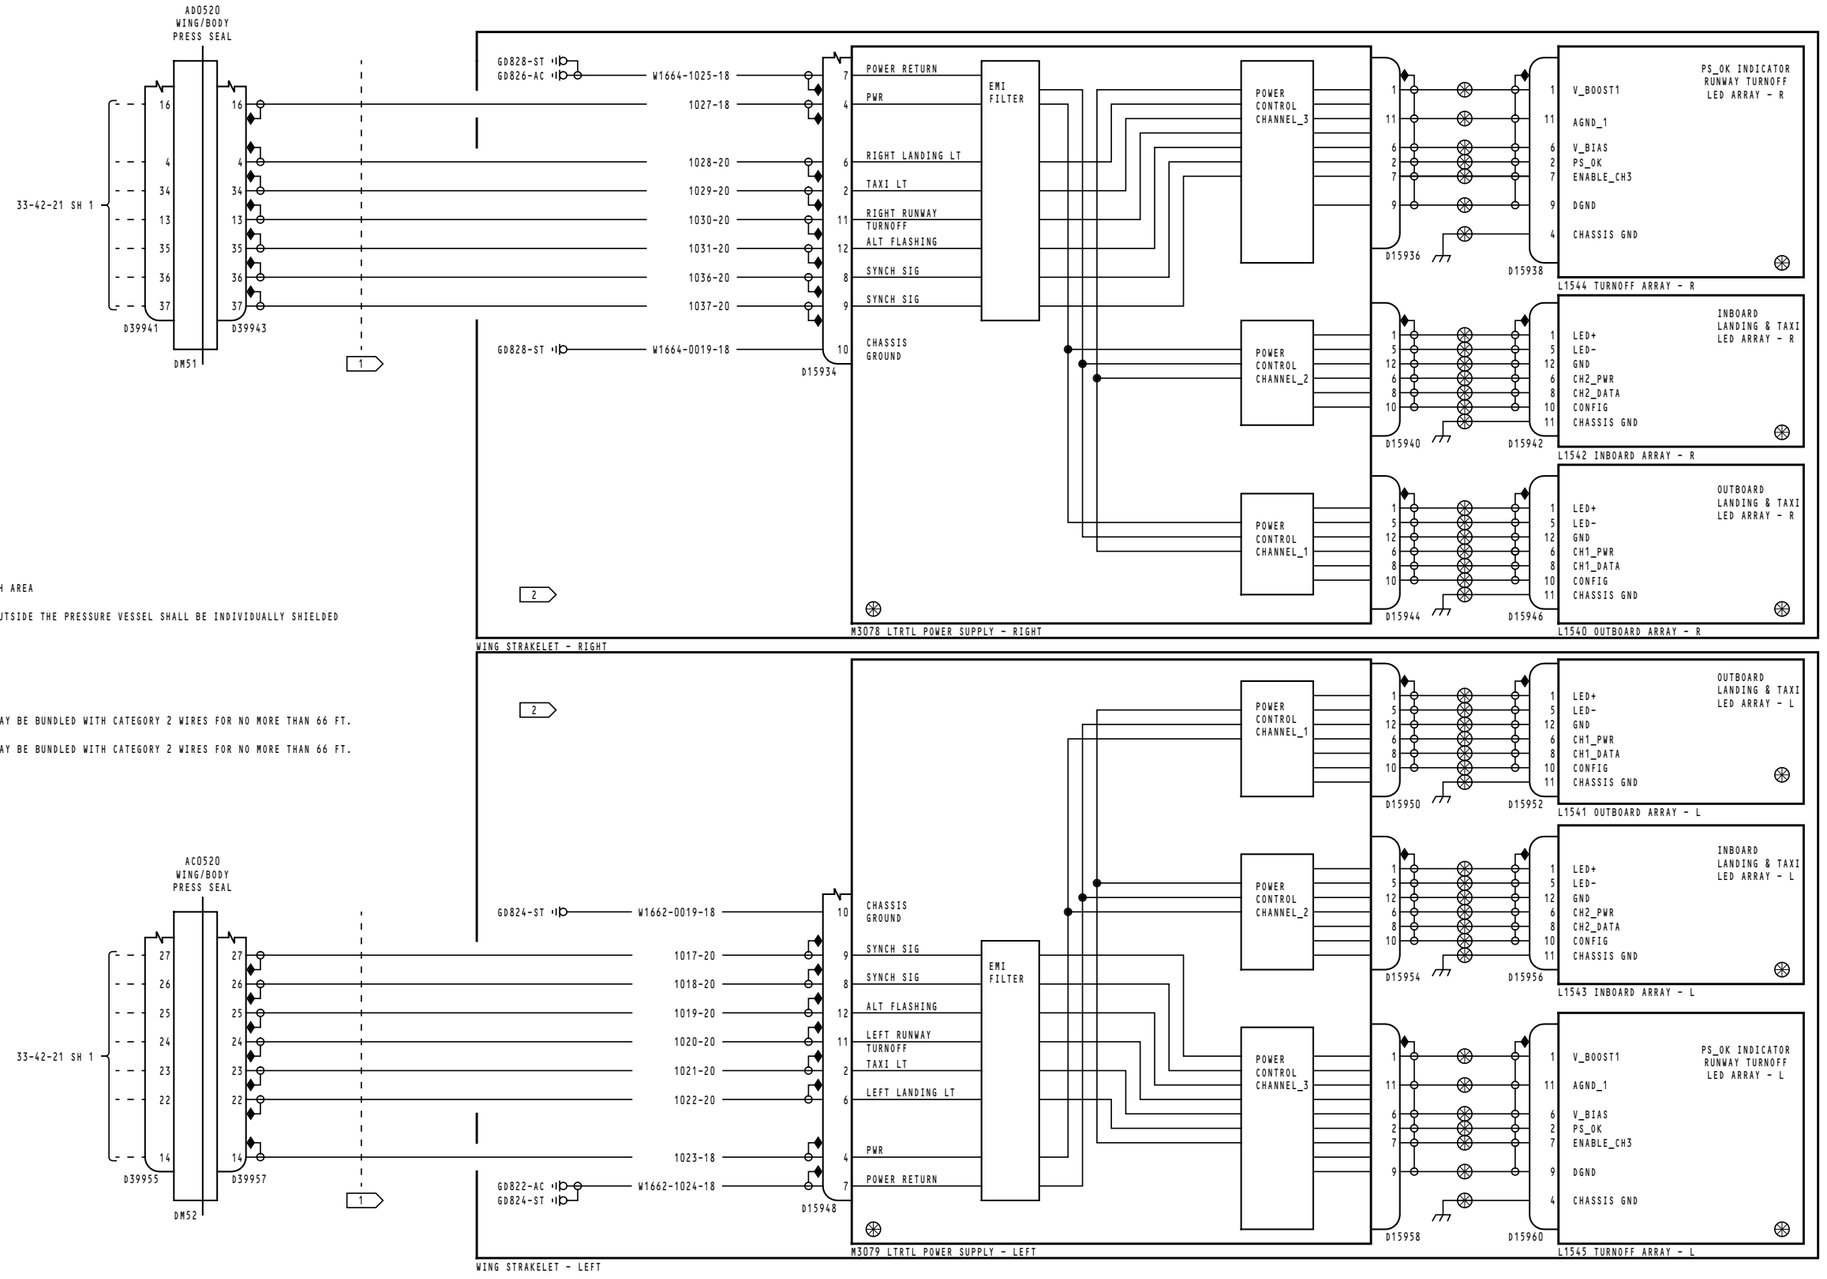


NOTES:

1. PASS THROUGH AREA
2. ALL WIRES OUTSIDE THE PRESSURE VESSEL SHALL BE INDIVIDUALLY SHIELDED

RN1* THESE WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 66 FT.

LN1* THESE WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 66 FT.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-42-21

Page 1
Sheet 2
May 28/2025

737-8 WIRING DIAGRAM MANUAL

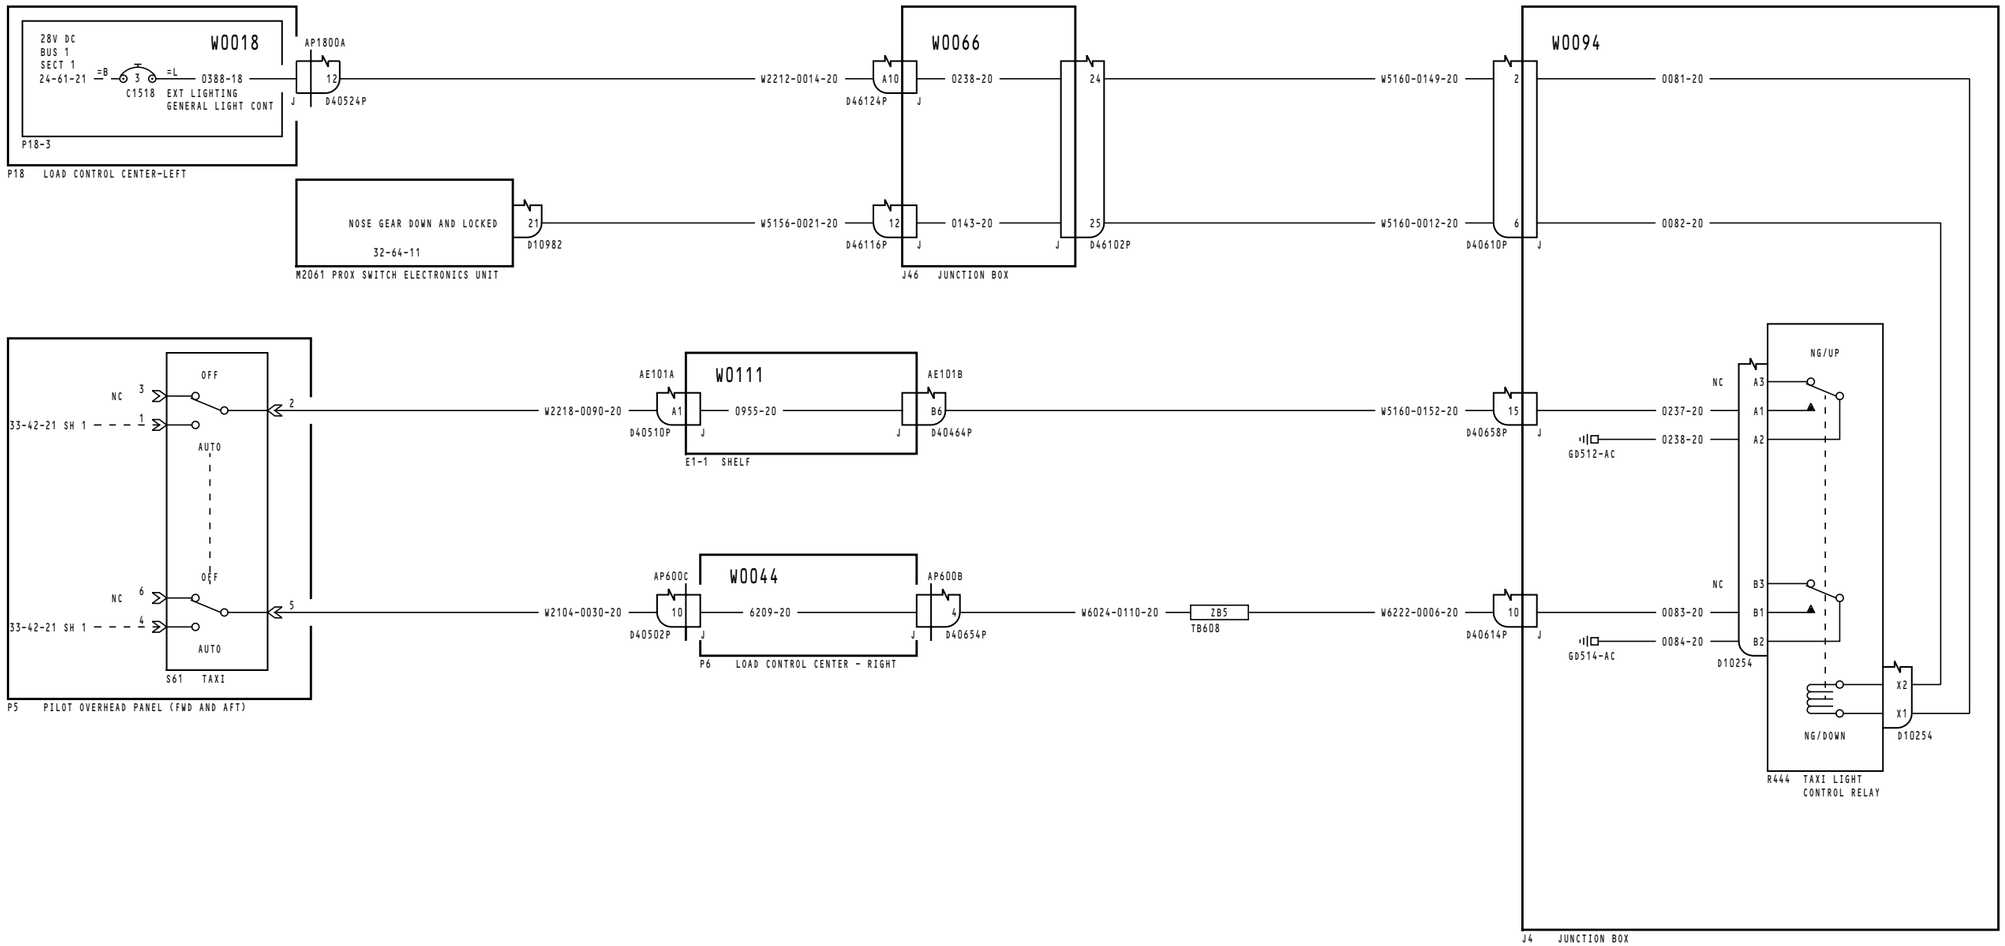


NOTES:

A P/N 39029/1-101, TERM TYPE BH




33-42-21

Page 1
Sheet 3
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
21

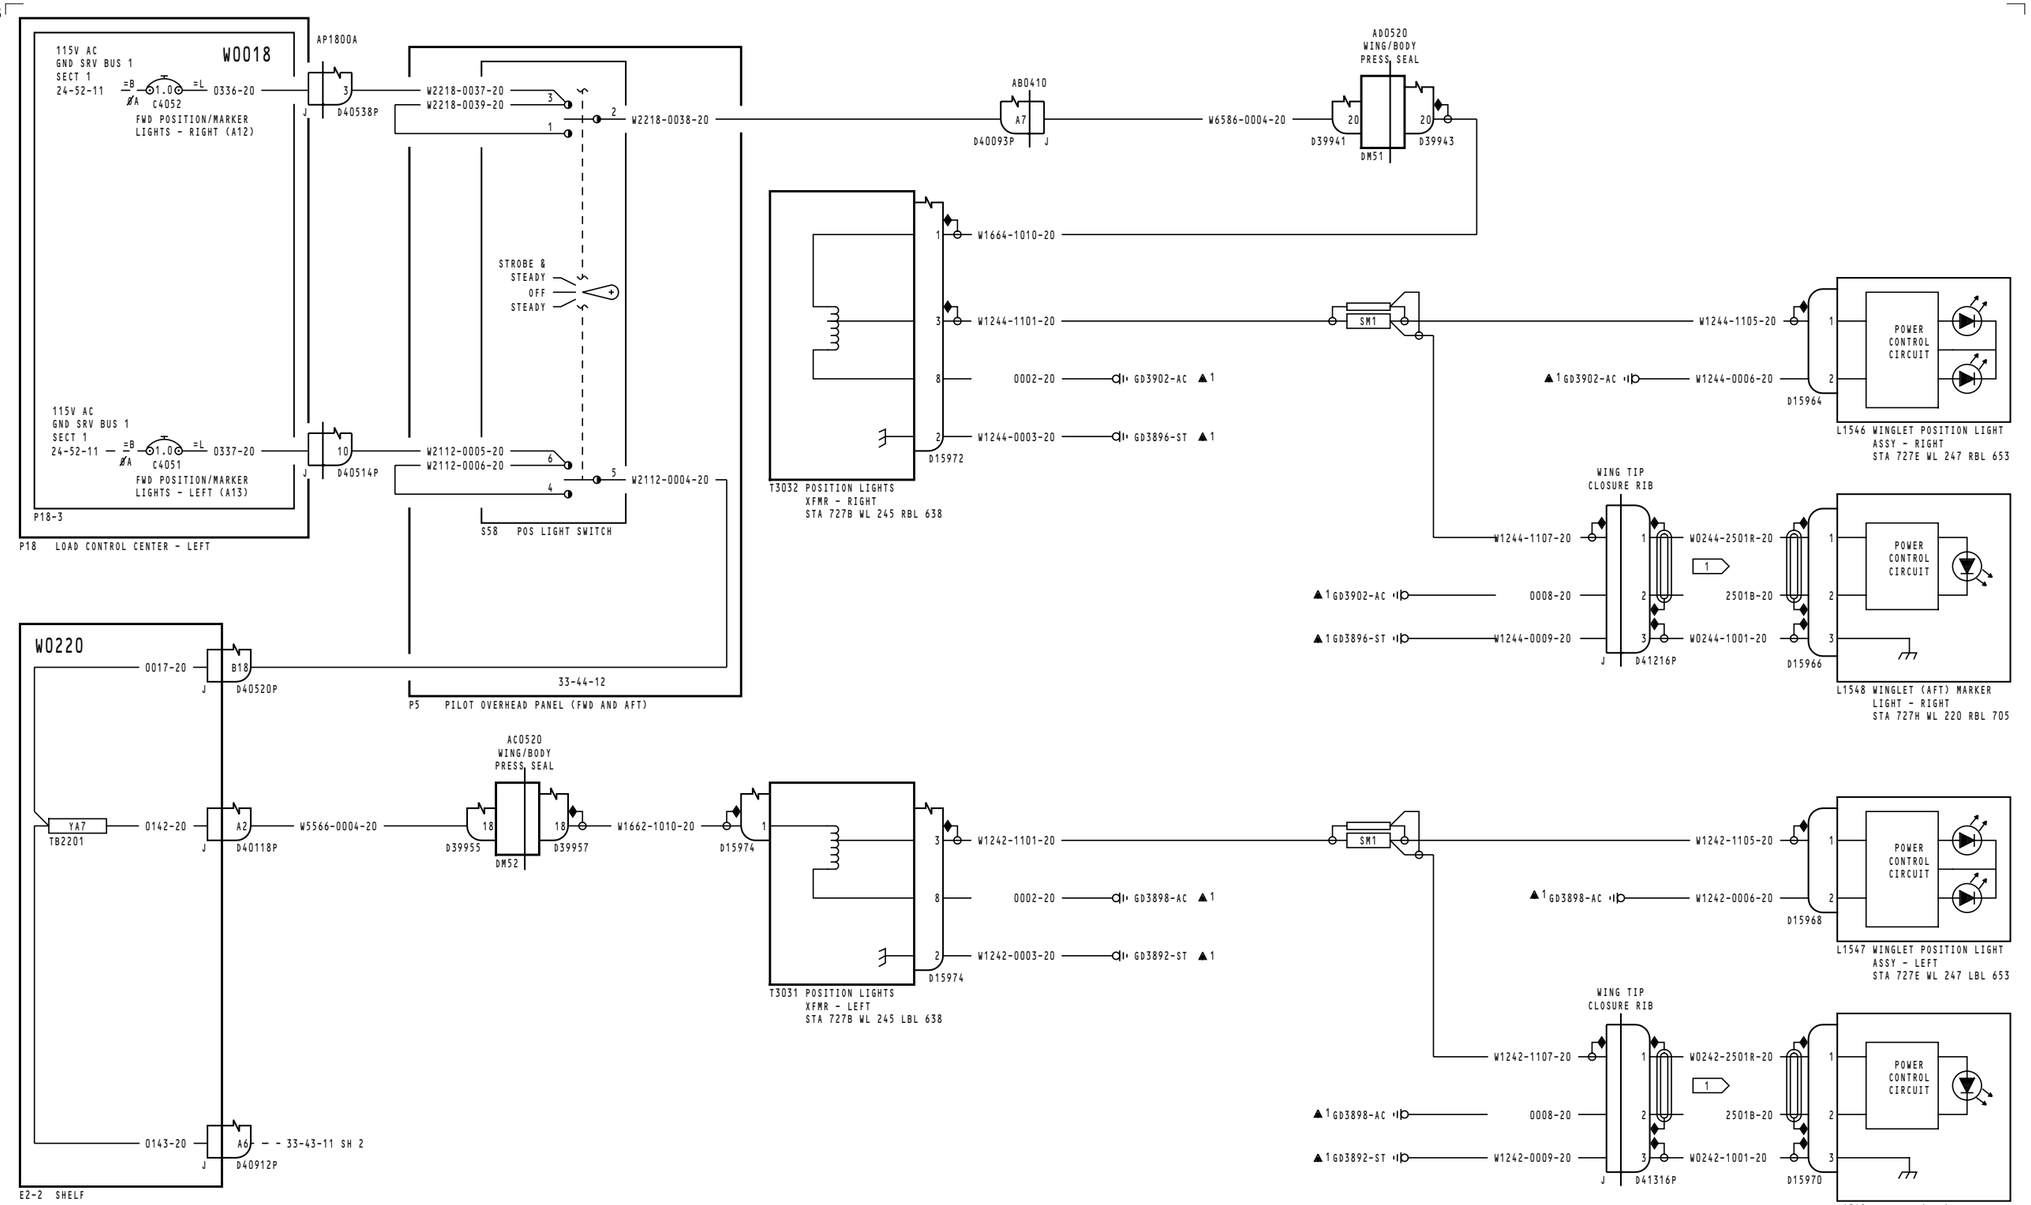


NOTES:

1. USE DOUBLE SHIELDED CABLE FROM LIGHT EQUIPMENT TO WING TIP CLOSURE RIB, EXCEPT FOR CHASSIS GROUNDS.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-43-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

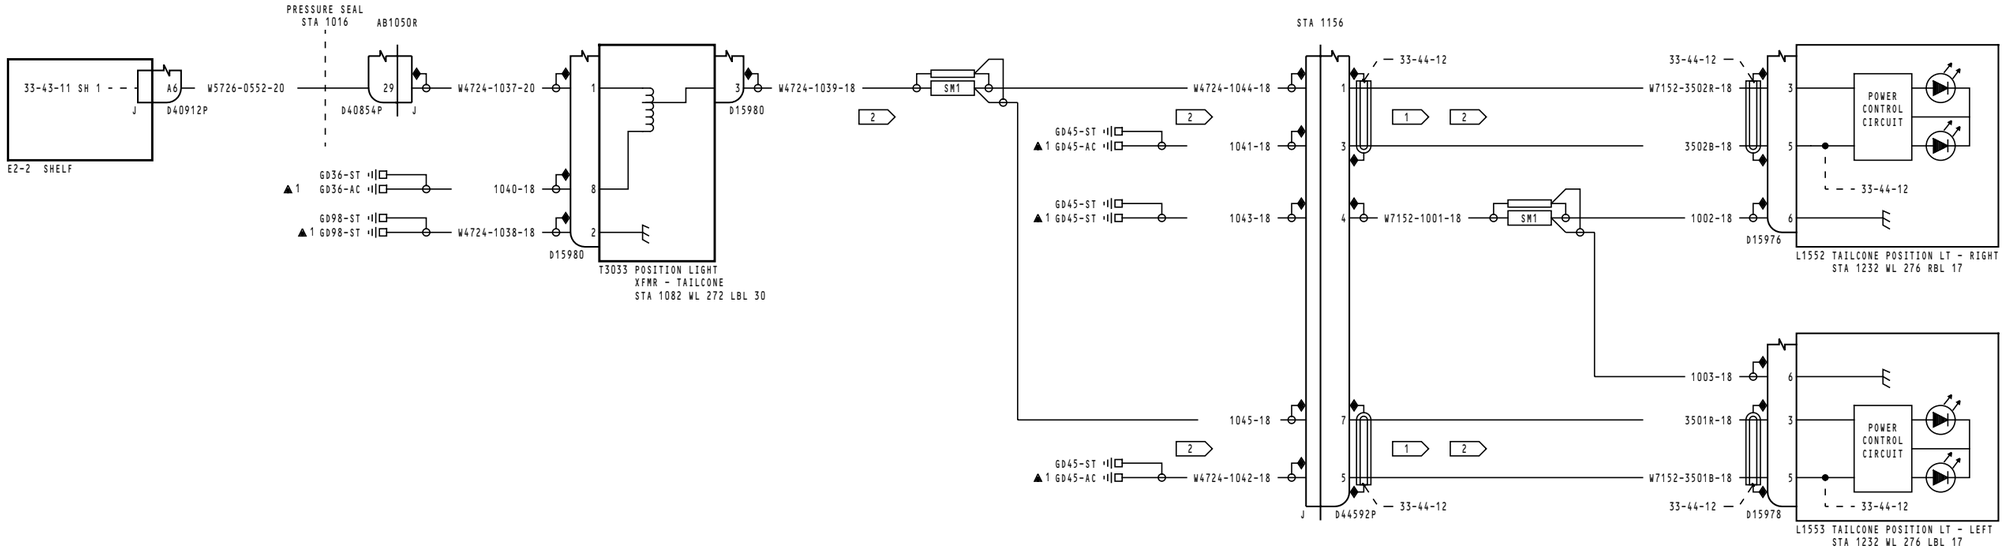


NOTES:

1. USE DOUBLE SHIELDED CABLE FROM LIGHT EQUIPMENT TO DISCONNECT BRACKET (STA 1156), EXCEPT CHASSIS GROUNDS.
2. THESE CATEGORY 1 WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 18 FEET.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-43-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
17

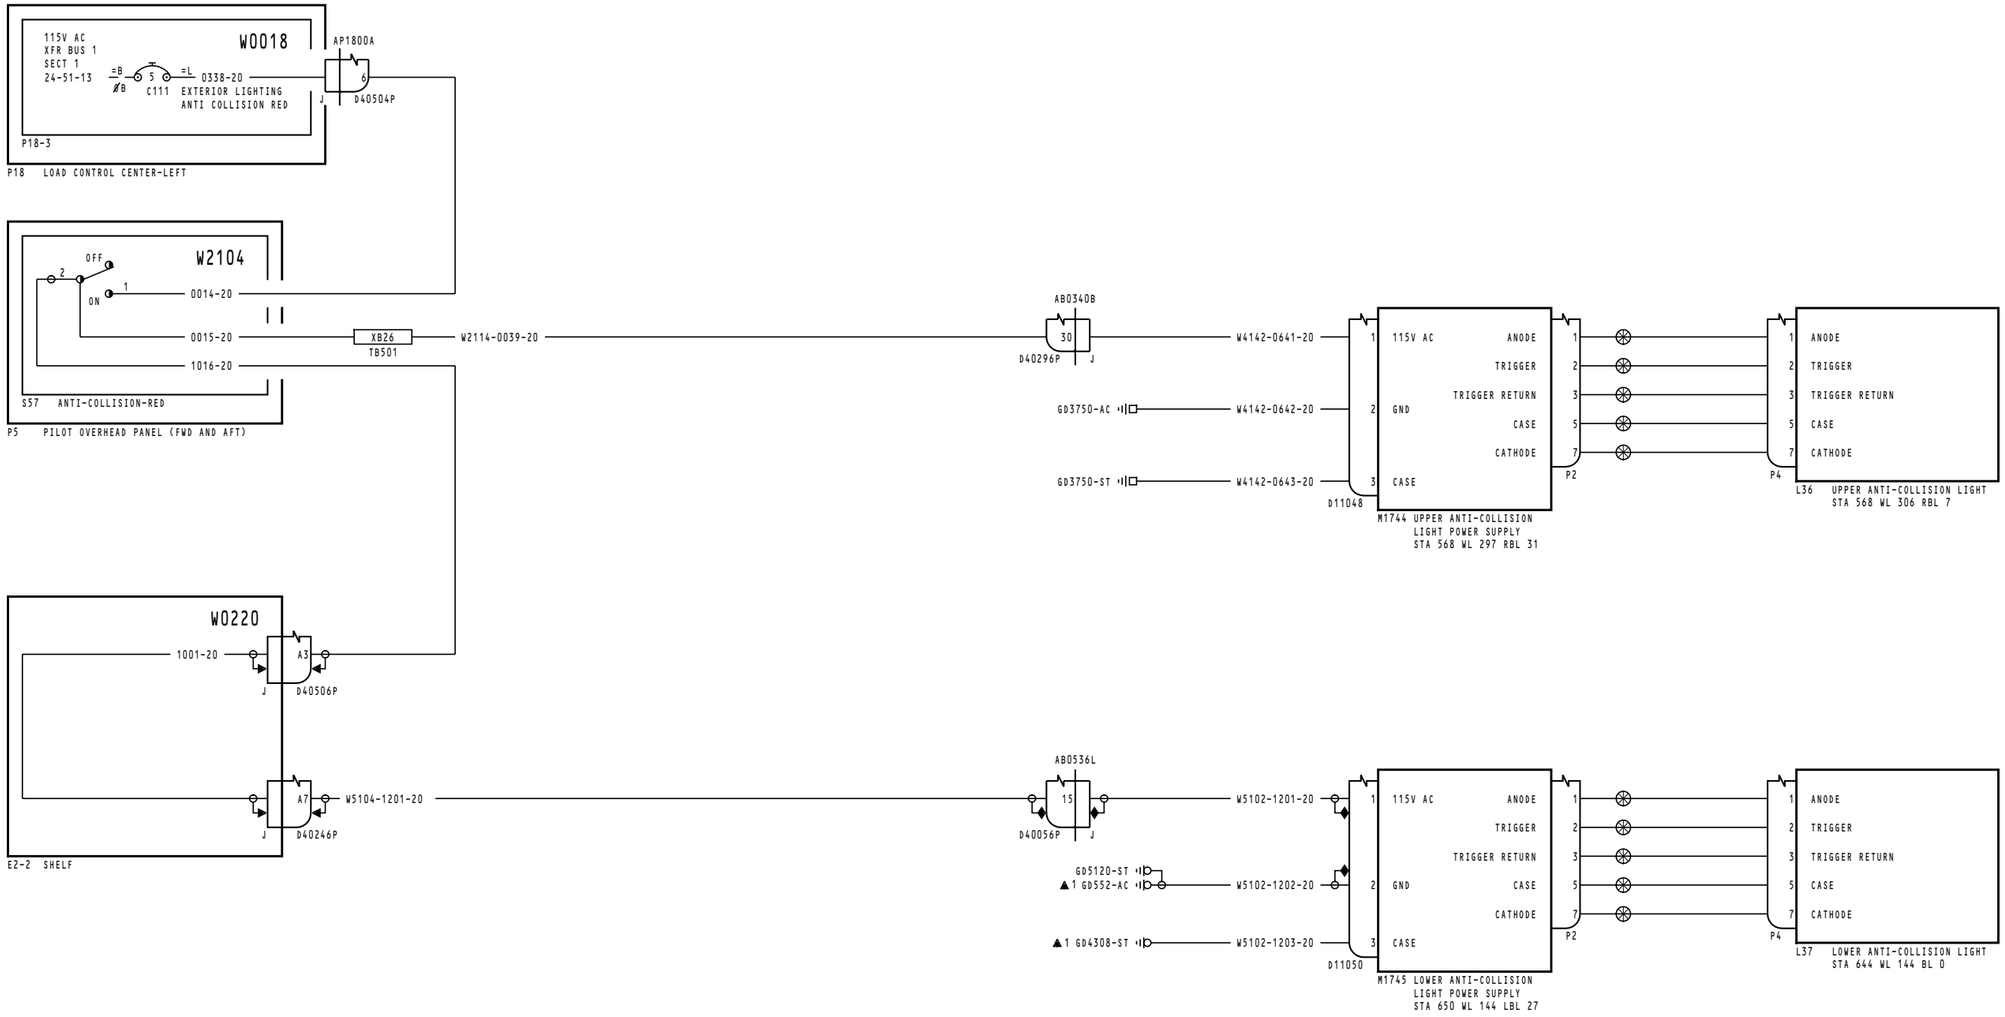


NN1*: THIS WIRE MAY BE BUNDLED WITH CATEGORY 2 WIRES IF SHIELDED,
OR NO MORE THAN 80 FEET IF UNSHIELDED.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-44-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-F
118

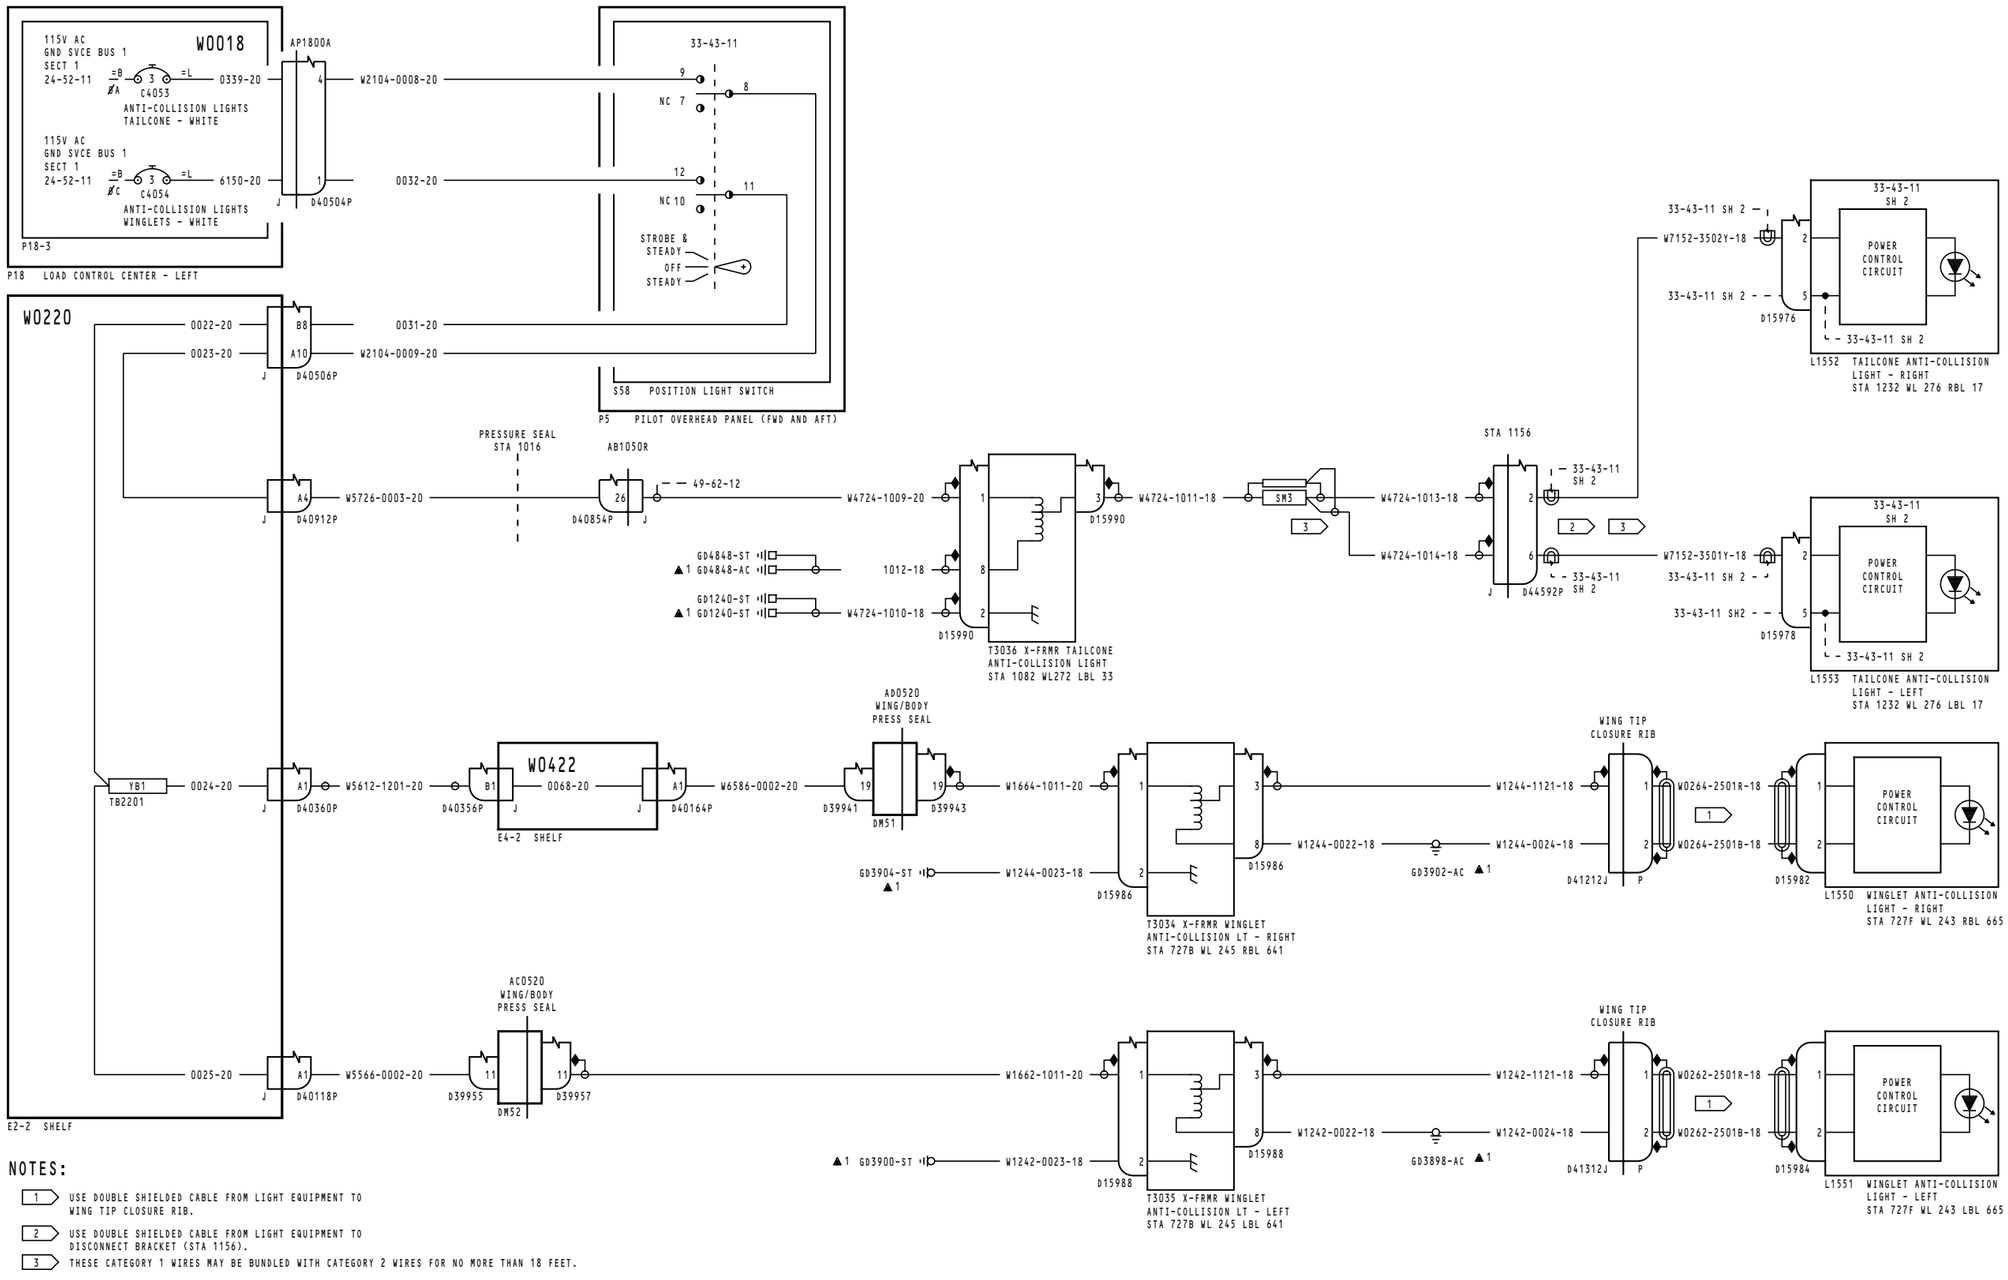


NOTES:

1. USE DOUBLE SHIELDED CABLE FROM LIGHT EQUIPMENT TO WING TIP CLOSURE RIB.
2. USE DOUBLE SHIELDED CABLE FROM LIGHT EQUIPMENT TO DISCONNECT BRACKET (STA 1156).
3. THESE CATEGORY 1 WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 18 FEET.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-44-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
22




NOTES:

NN1* THESE WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 104FT



ECCN 9E991 BOEING PROPRIETARY - See title page for details


33-49-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
49

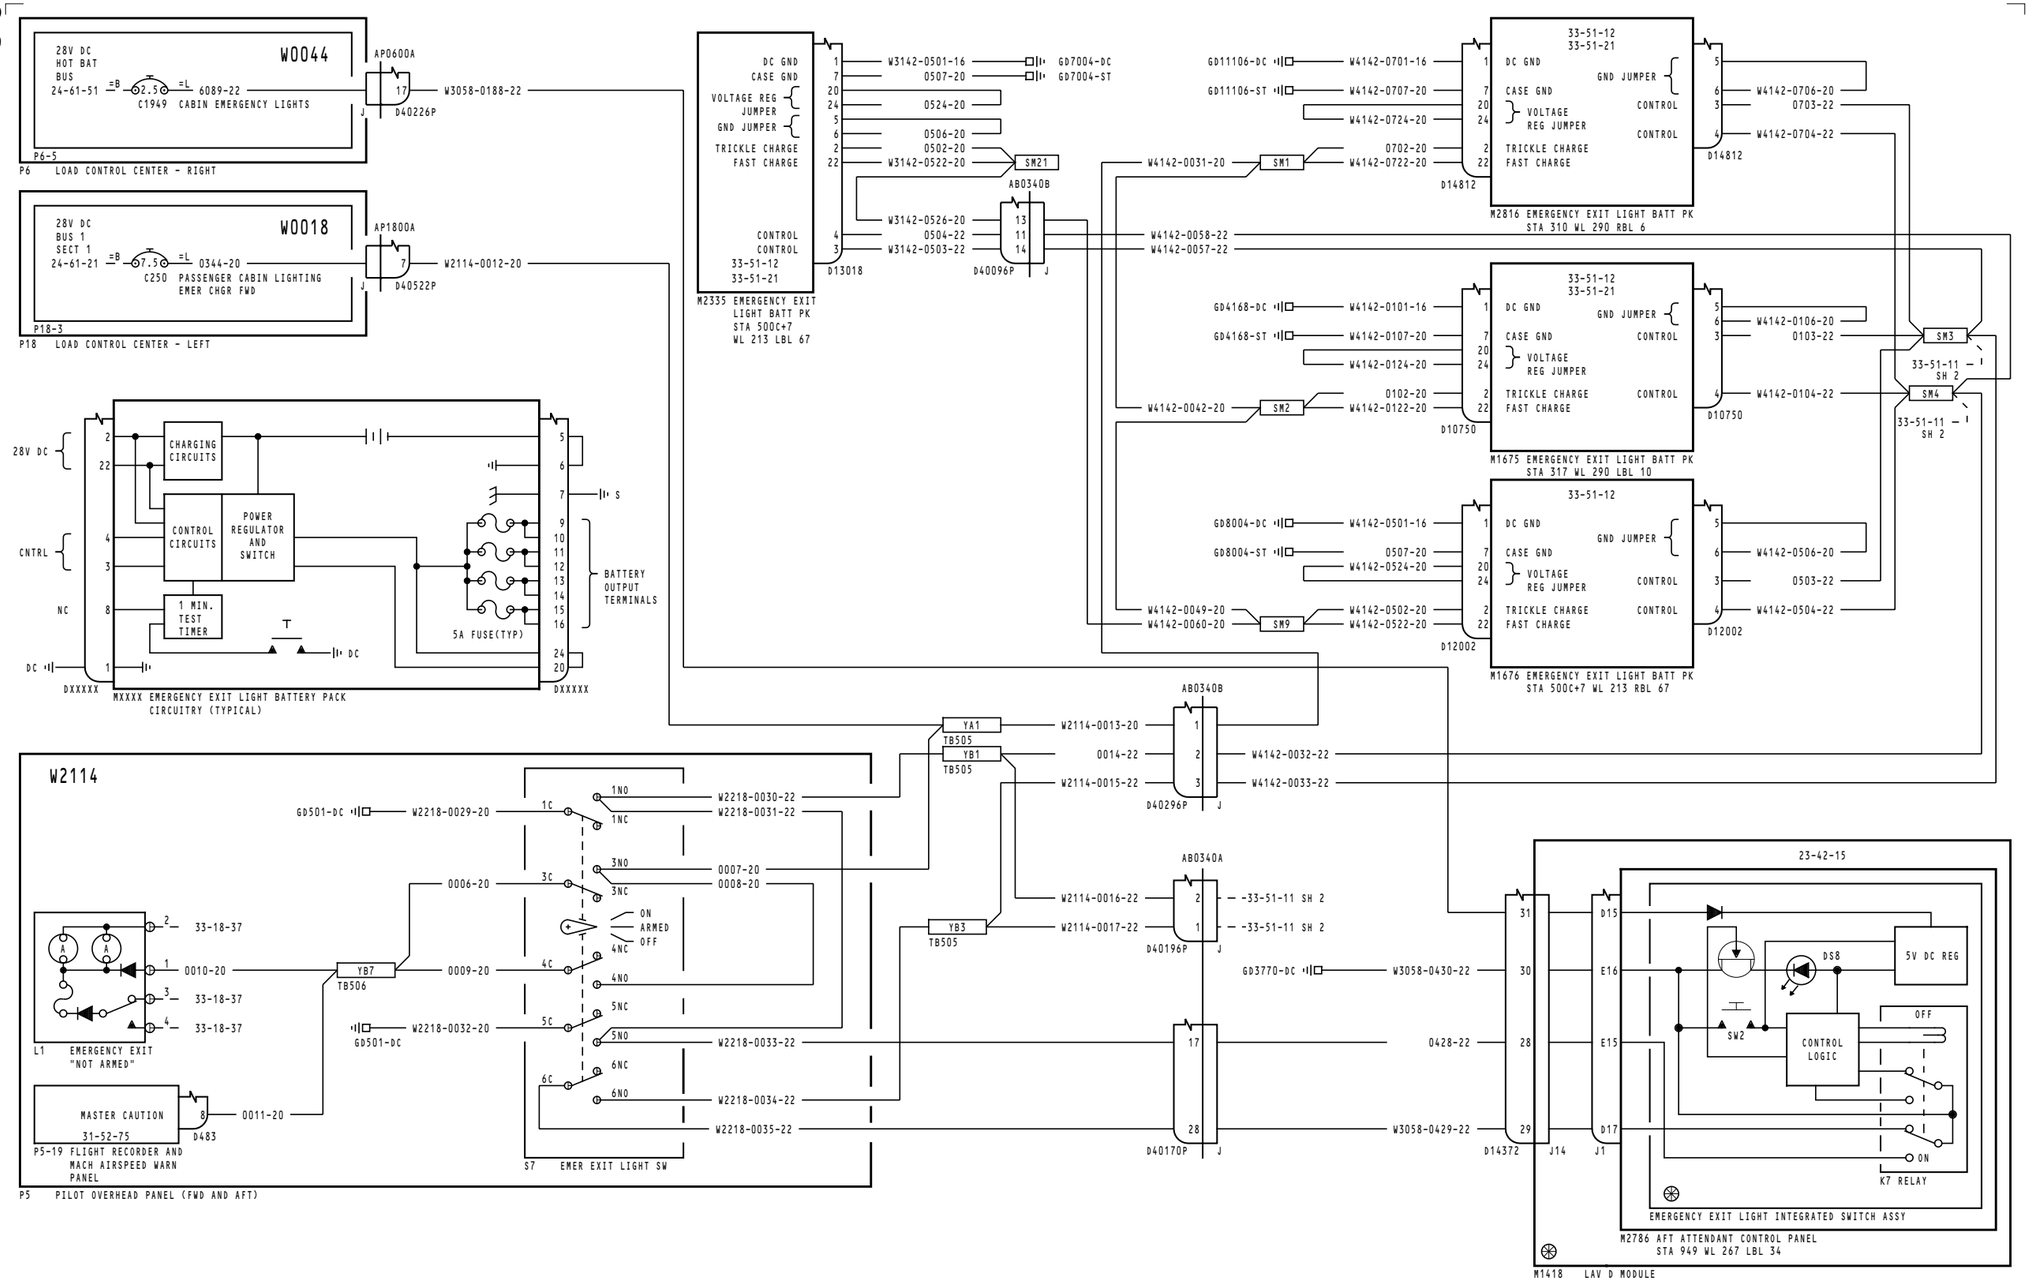





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

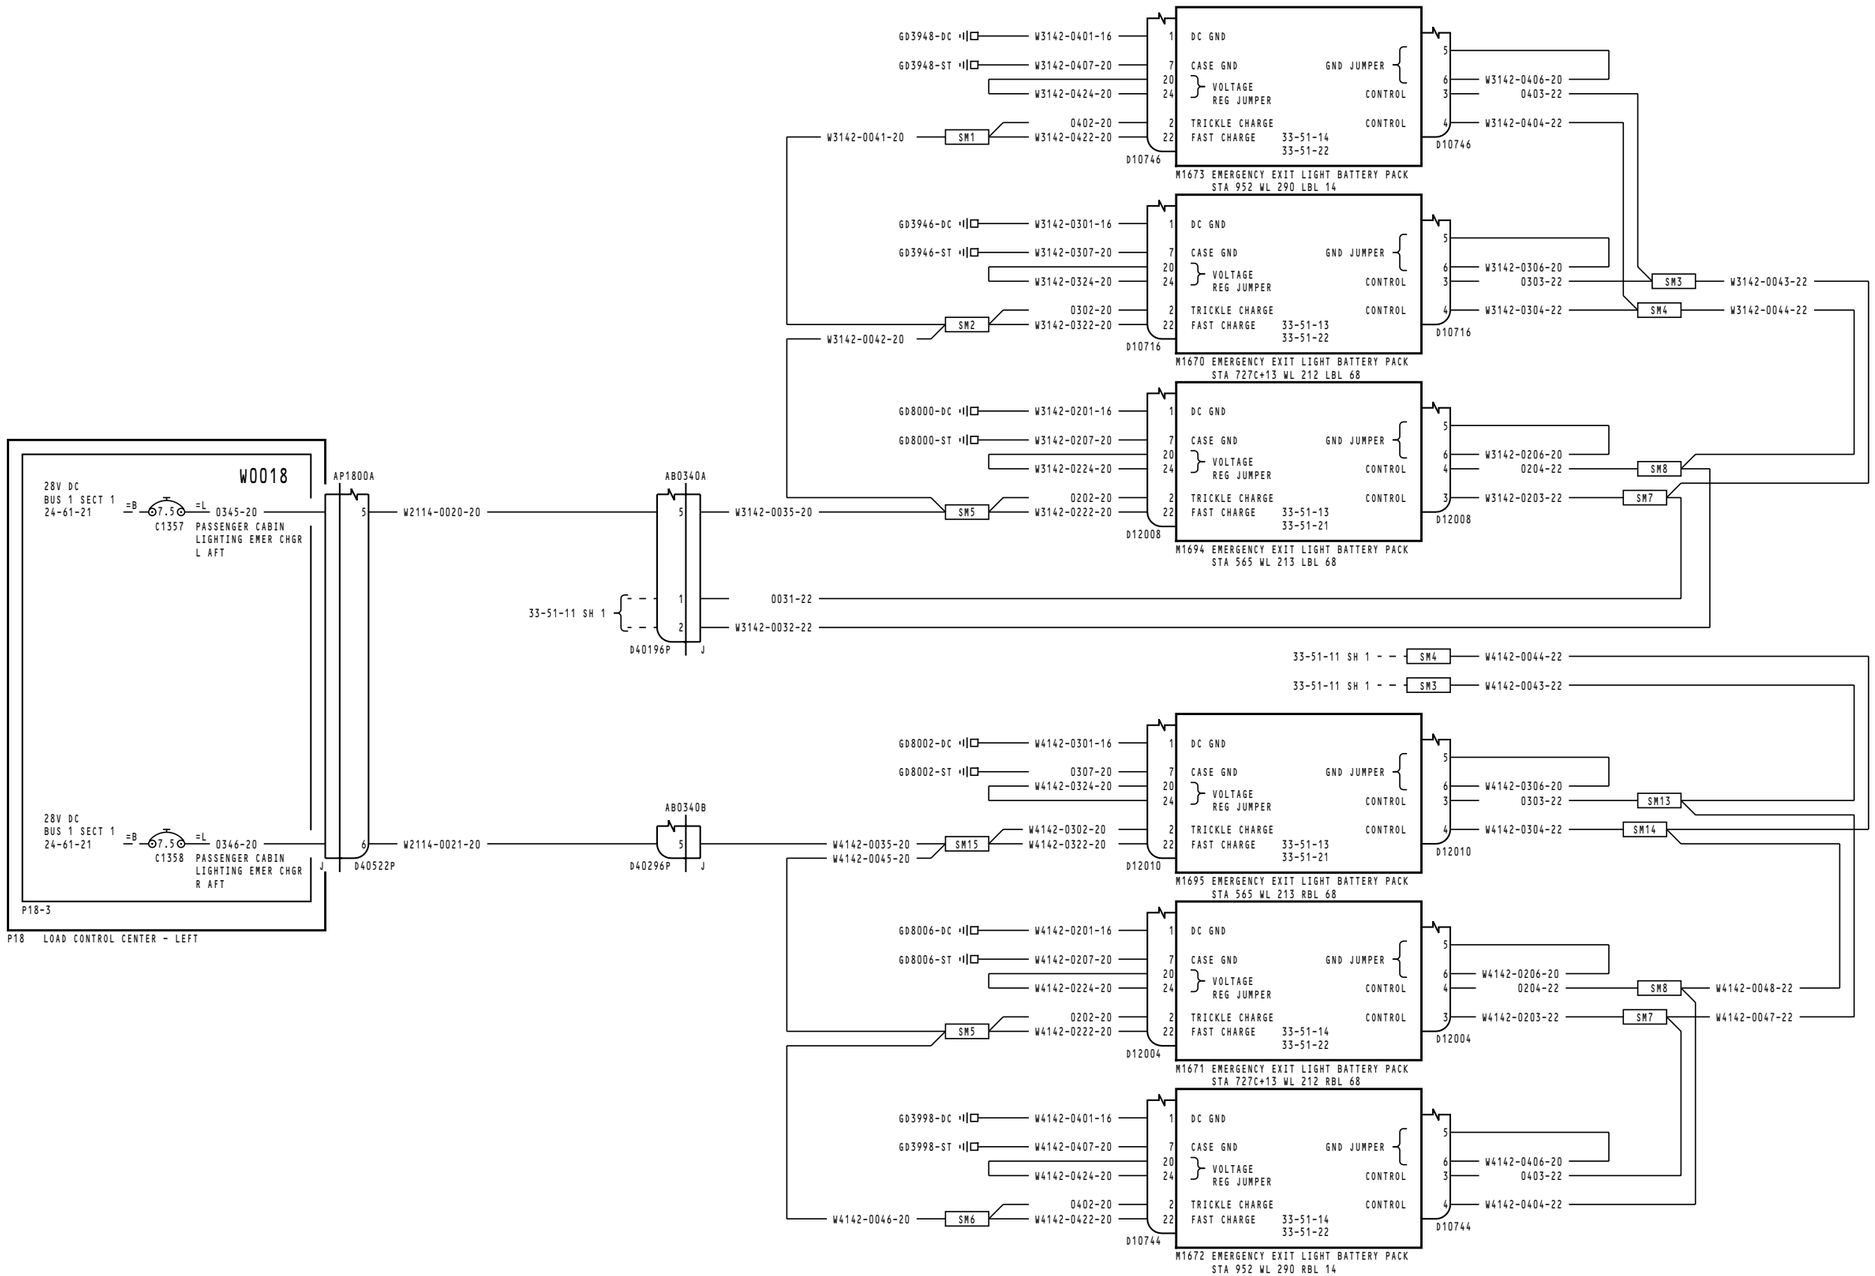





ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
112

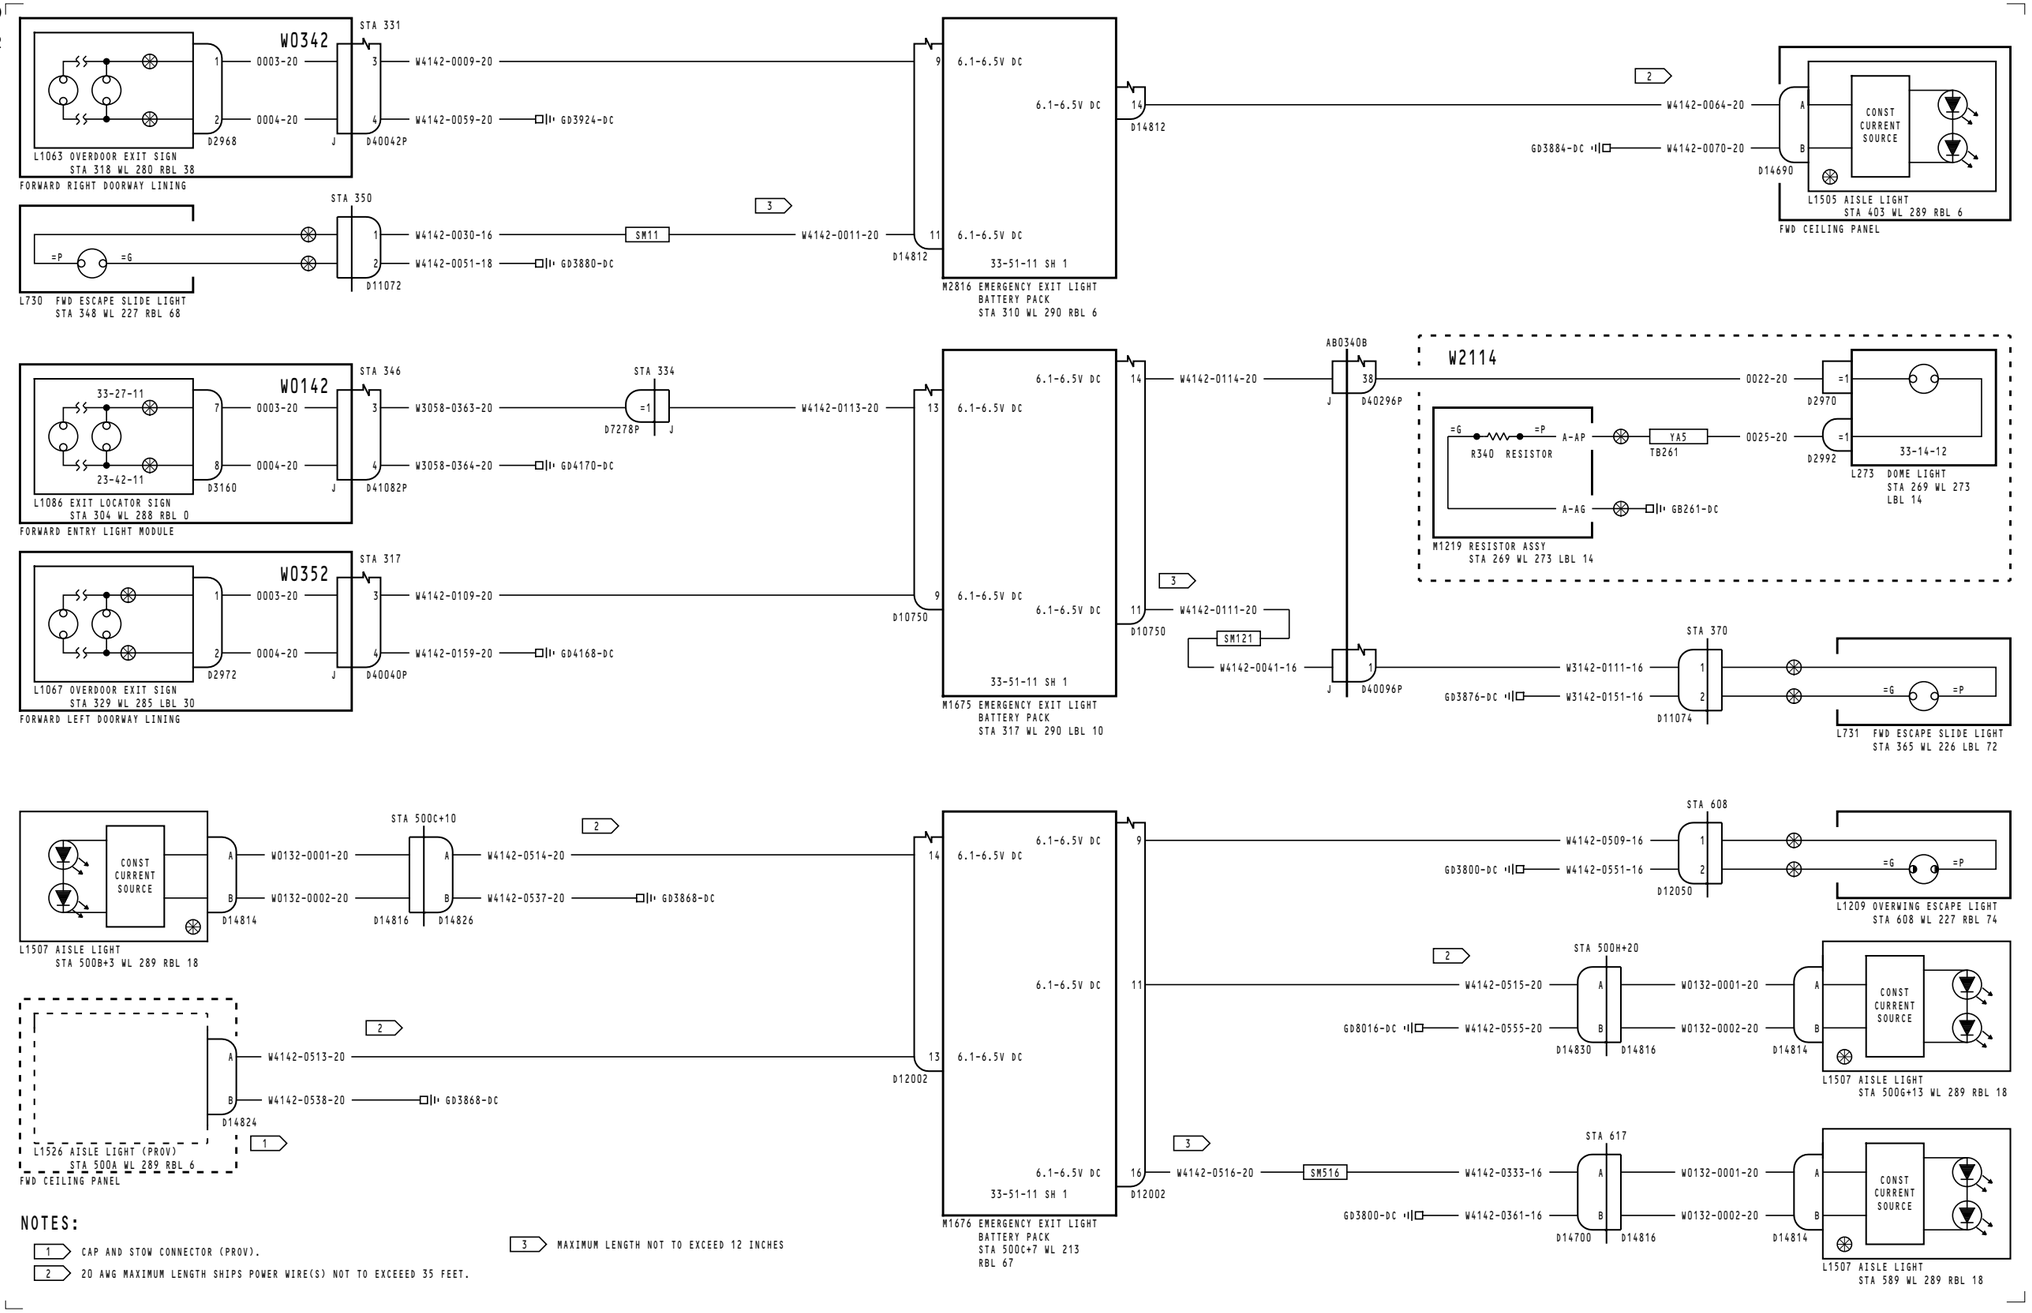


NOTES:

1. CAP AND STOW CONNECTOR (PROV).
2. 20 AWG MAXIMUM LENGTH SHIPS POWER WIRE(S) NOT TO EXCEEED 35 FEET.
3. MAXIMUM LENGTH NOT TO EXCEED 12 INCHES



ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-12

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL




NOTES:

1. CAP AND STOW CONNECTOR (PROV)
2. 20 AWG MAXIMUM LENGTH SHIPS POWER WIRE(S) NOT TO EXCEEED 35 FEET.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-12

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

119

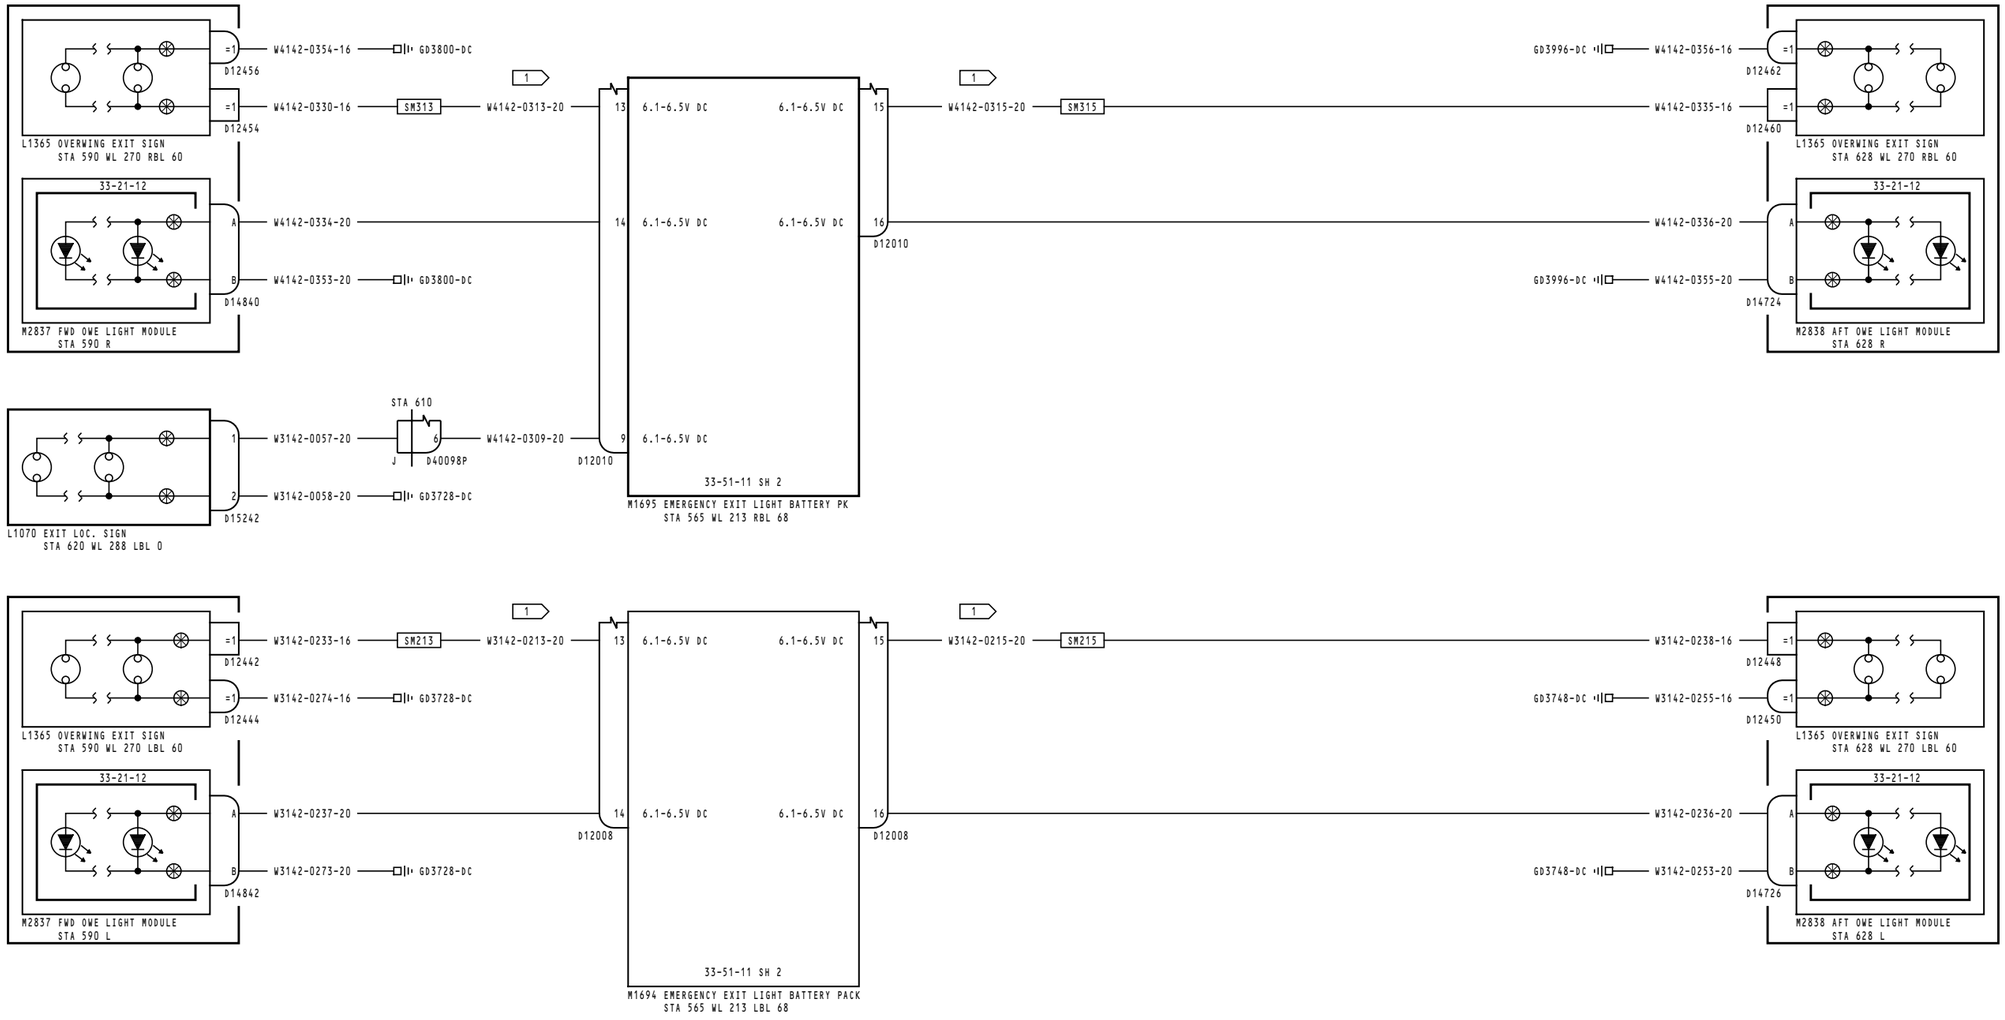


NOTES:

1 MAXIMUM LENGTH NOT TO EXCEED 12 INCHES.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-13

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
93

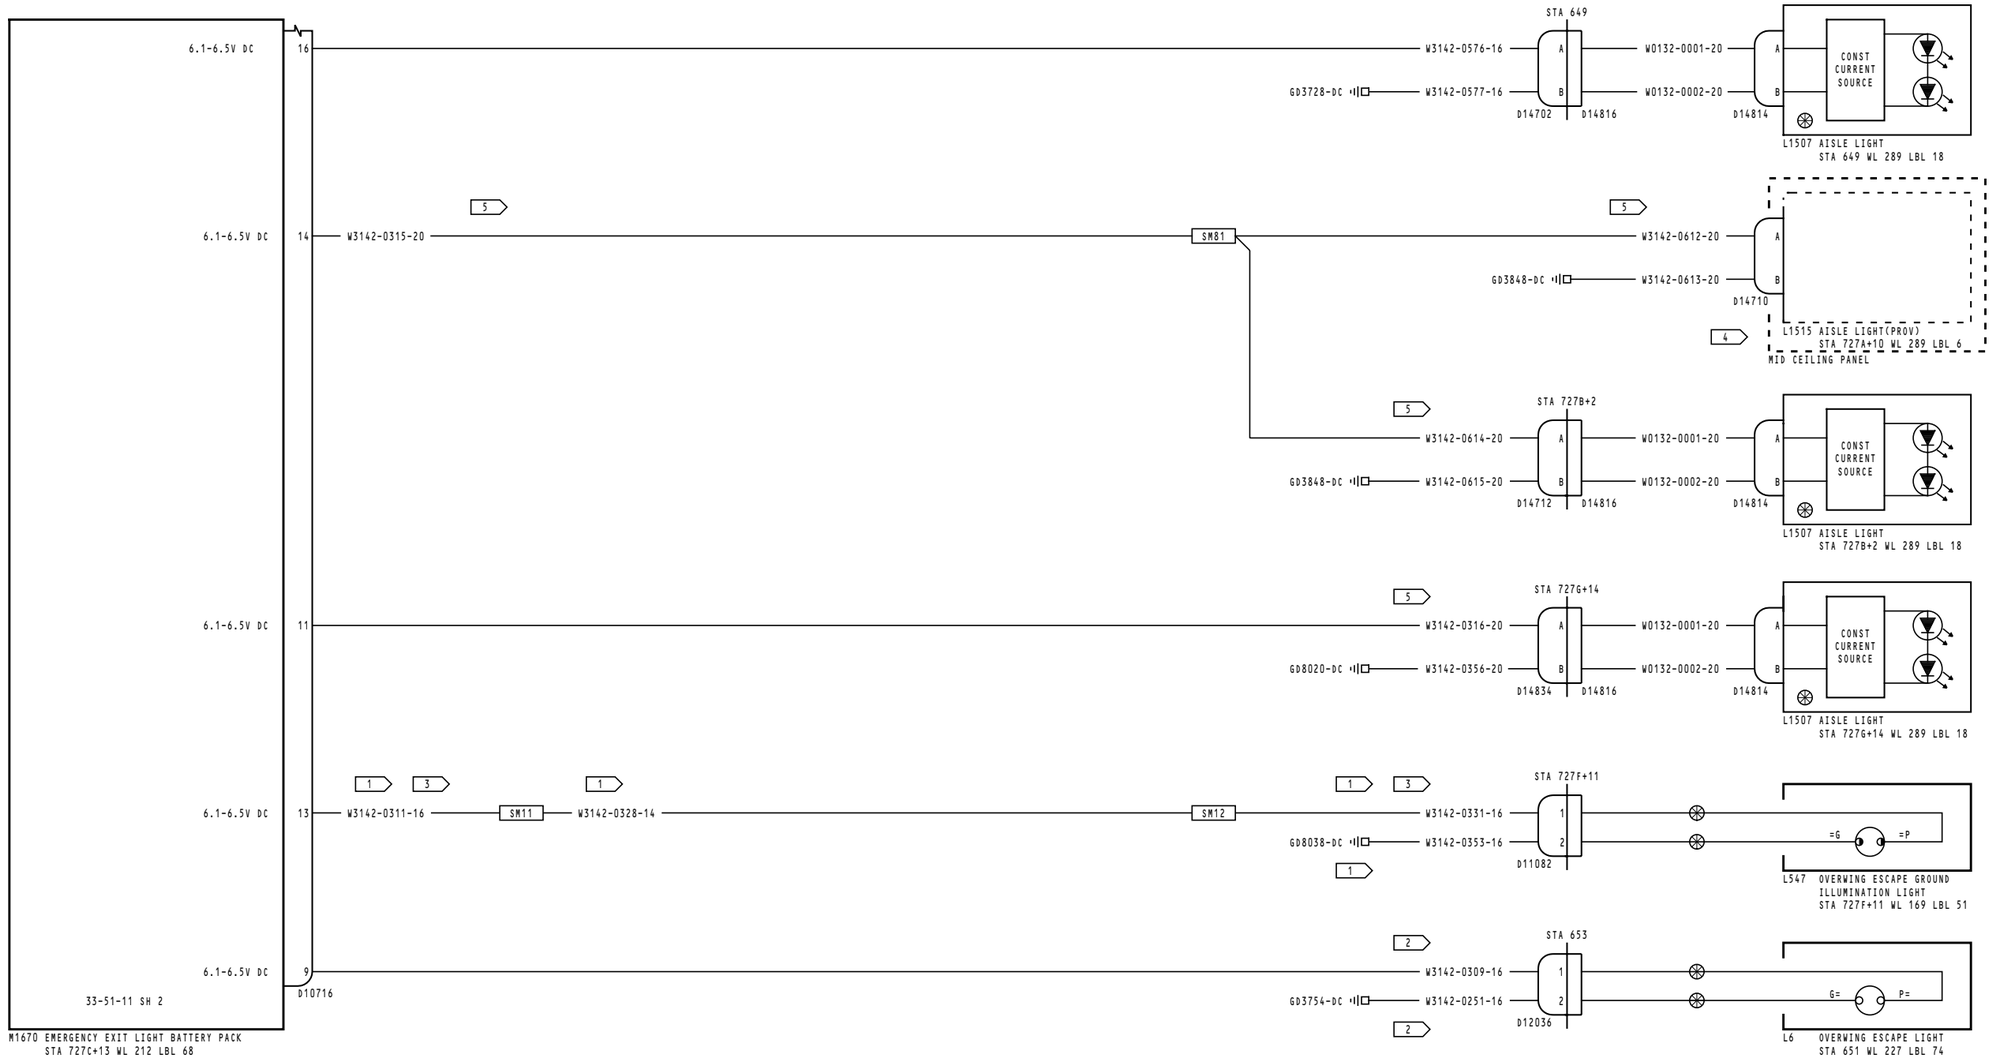


NOTES:

1. CRITICAL LENGTH (PWR+GND) NOT TO EXCEED 49 FEET.
2. CRITICAL LENGTH (PWR+GND) NOT TO EXCEED 36 FEET.
3. MAXIMUN LENGTH SHOULD NOT EXCEED 12 INCHES.
4. CAP AND STOW CONNECTOR (PROV).
5. 20 AWG MAXIMUM LENGTH SHIPS POWER WIRE(S) NOT TO EXCEEED 35 FEET.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-13

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
65

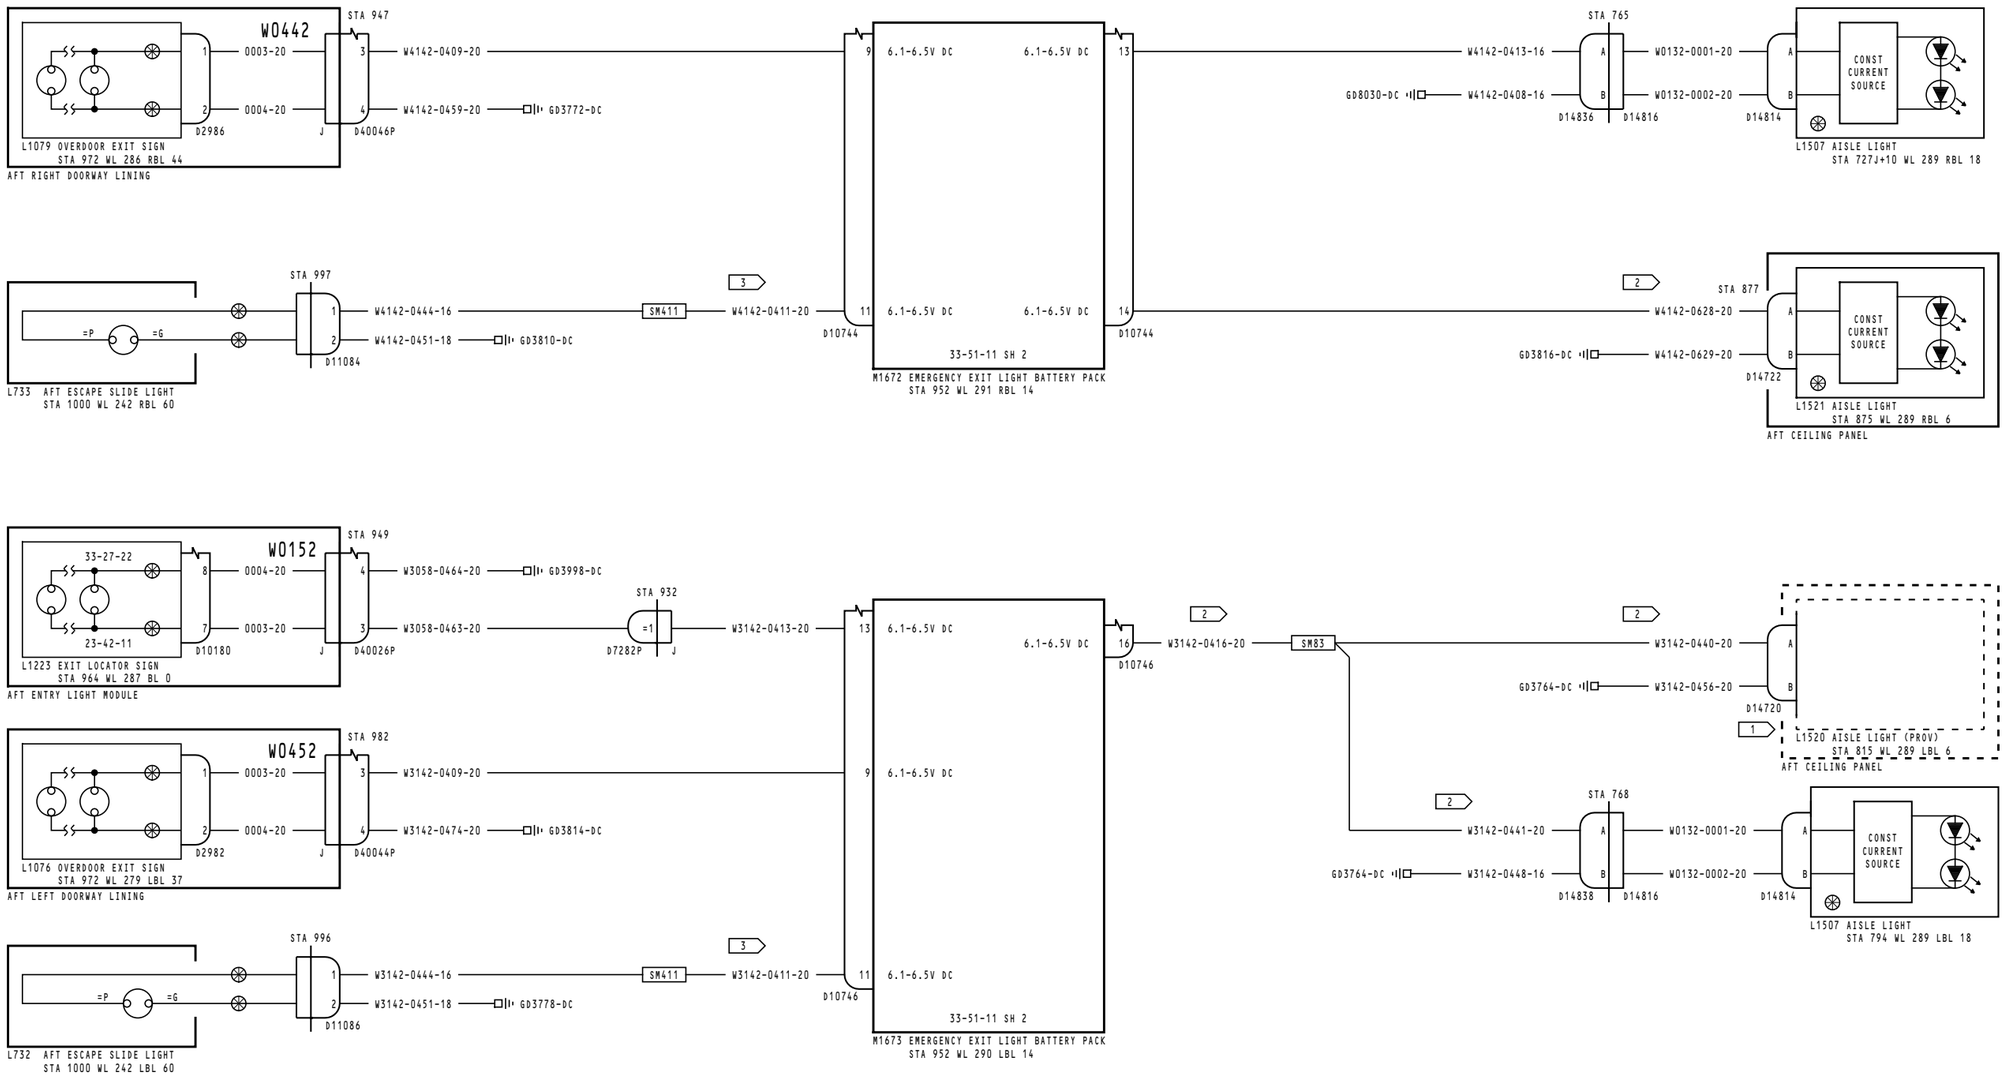


NOTES:


1. CAP AND STOW CONNECTOR (PROV.)
2. 20 AWG MAXIMUM LENGTH SHIPS POWER WIRE(S) NOT TO EXCEEED 35 FEET.
3. MAXIMUM LENGTH NOT TO EXCEED 12 INCHES.



33-51-14

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

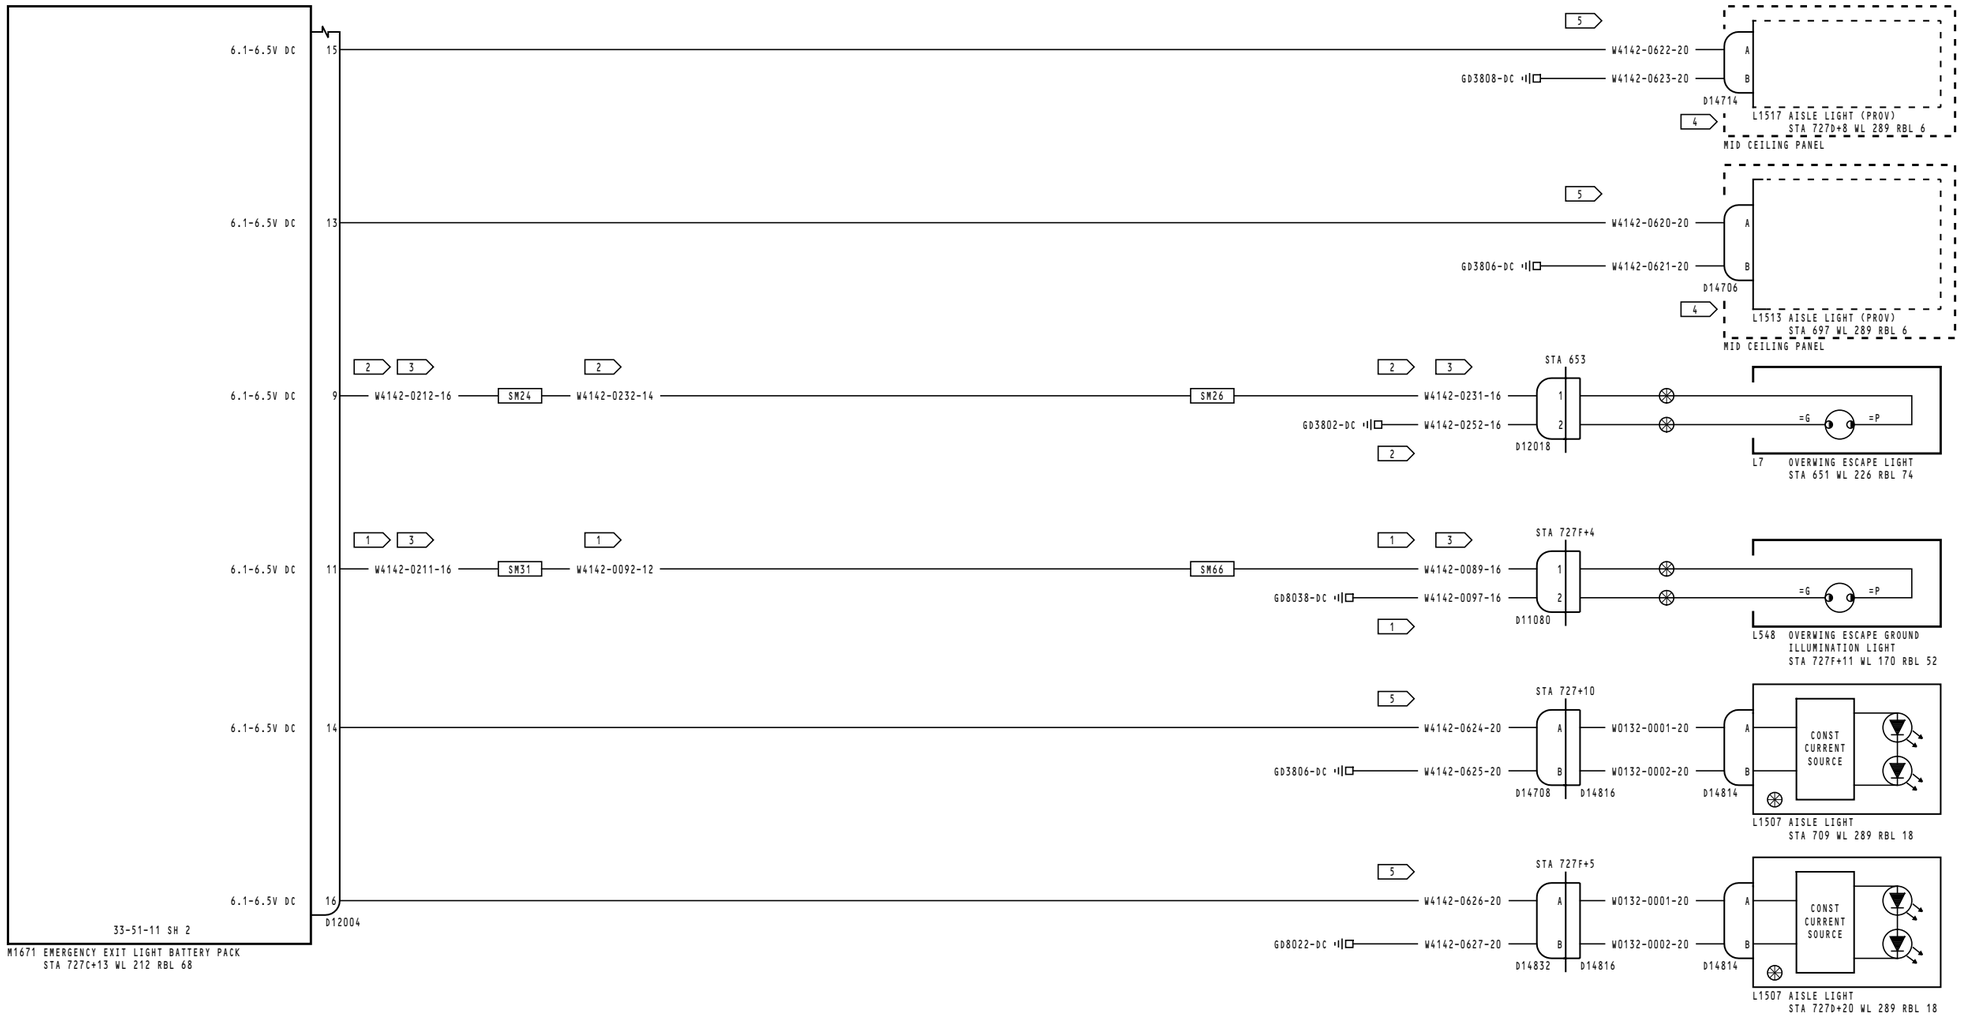


NOTES:

1. CRITICAL LENGTH (PWR + GND WIRE) IS NOT TO EXCEED 71 FT.
2. CRITICAL LENGTH (PWR + GND WIRE) IS NOT TO EXCEED 46 FT.
3. MAXIMUM LENGTH NOT TO EXCEED 12 INCHES
4. CAP AND STOW CONNECTOR (PROV)
5. 20 AWG MAXIMUM LENGTH SHIPS POWER WIRE(S) NOT TO EXCEEED 35 FEET.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-14

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

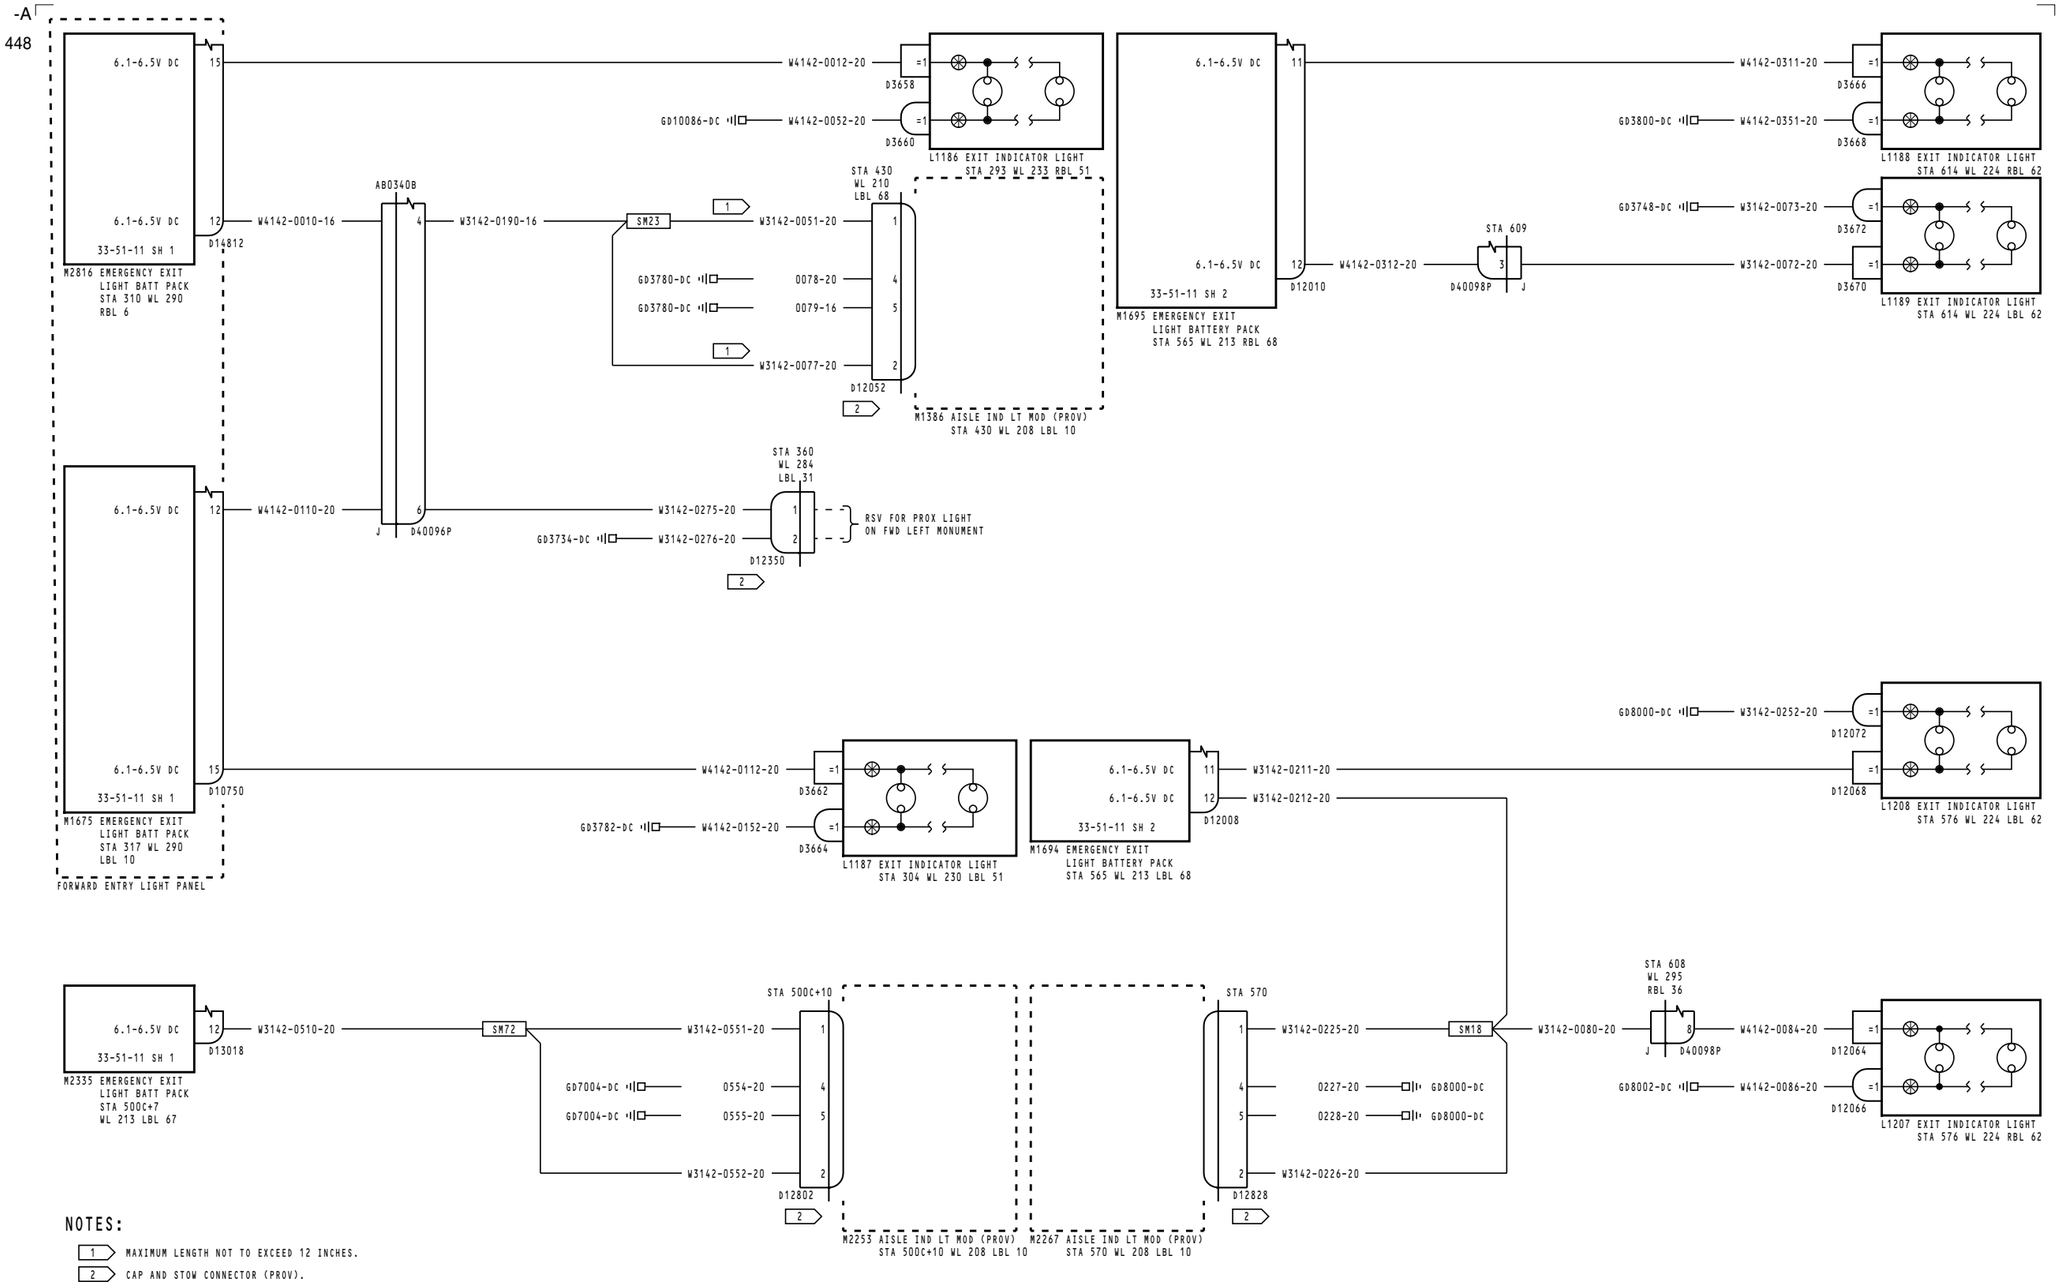




33-51-21


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
418

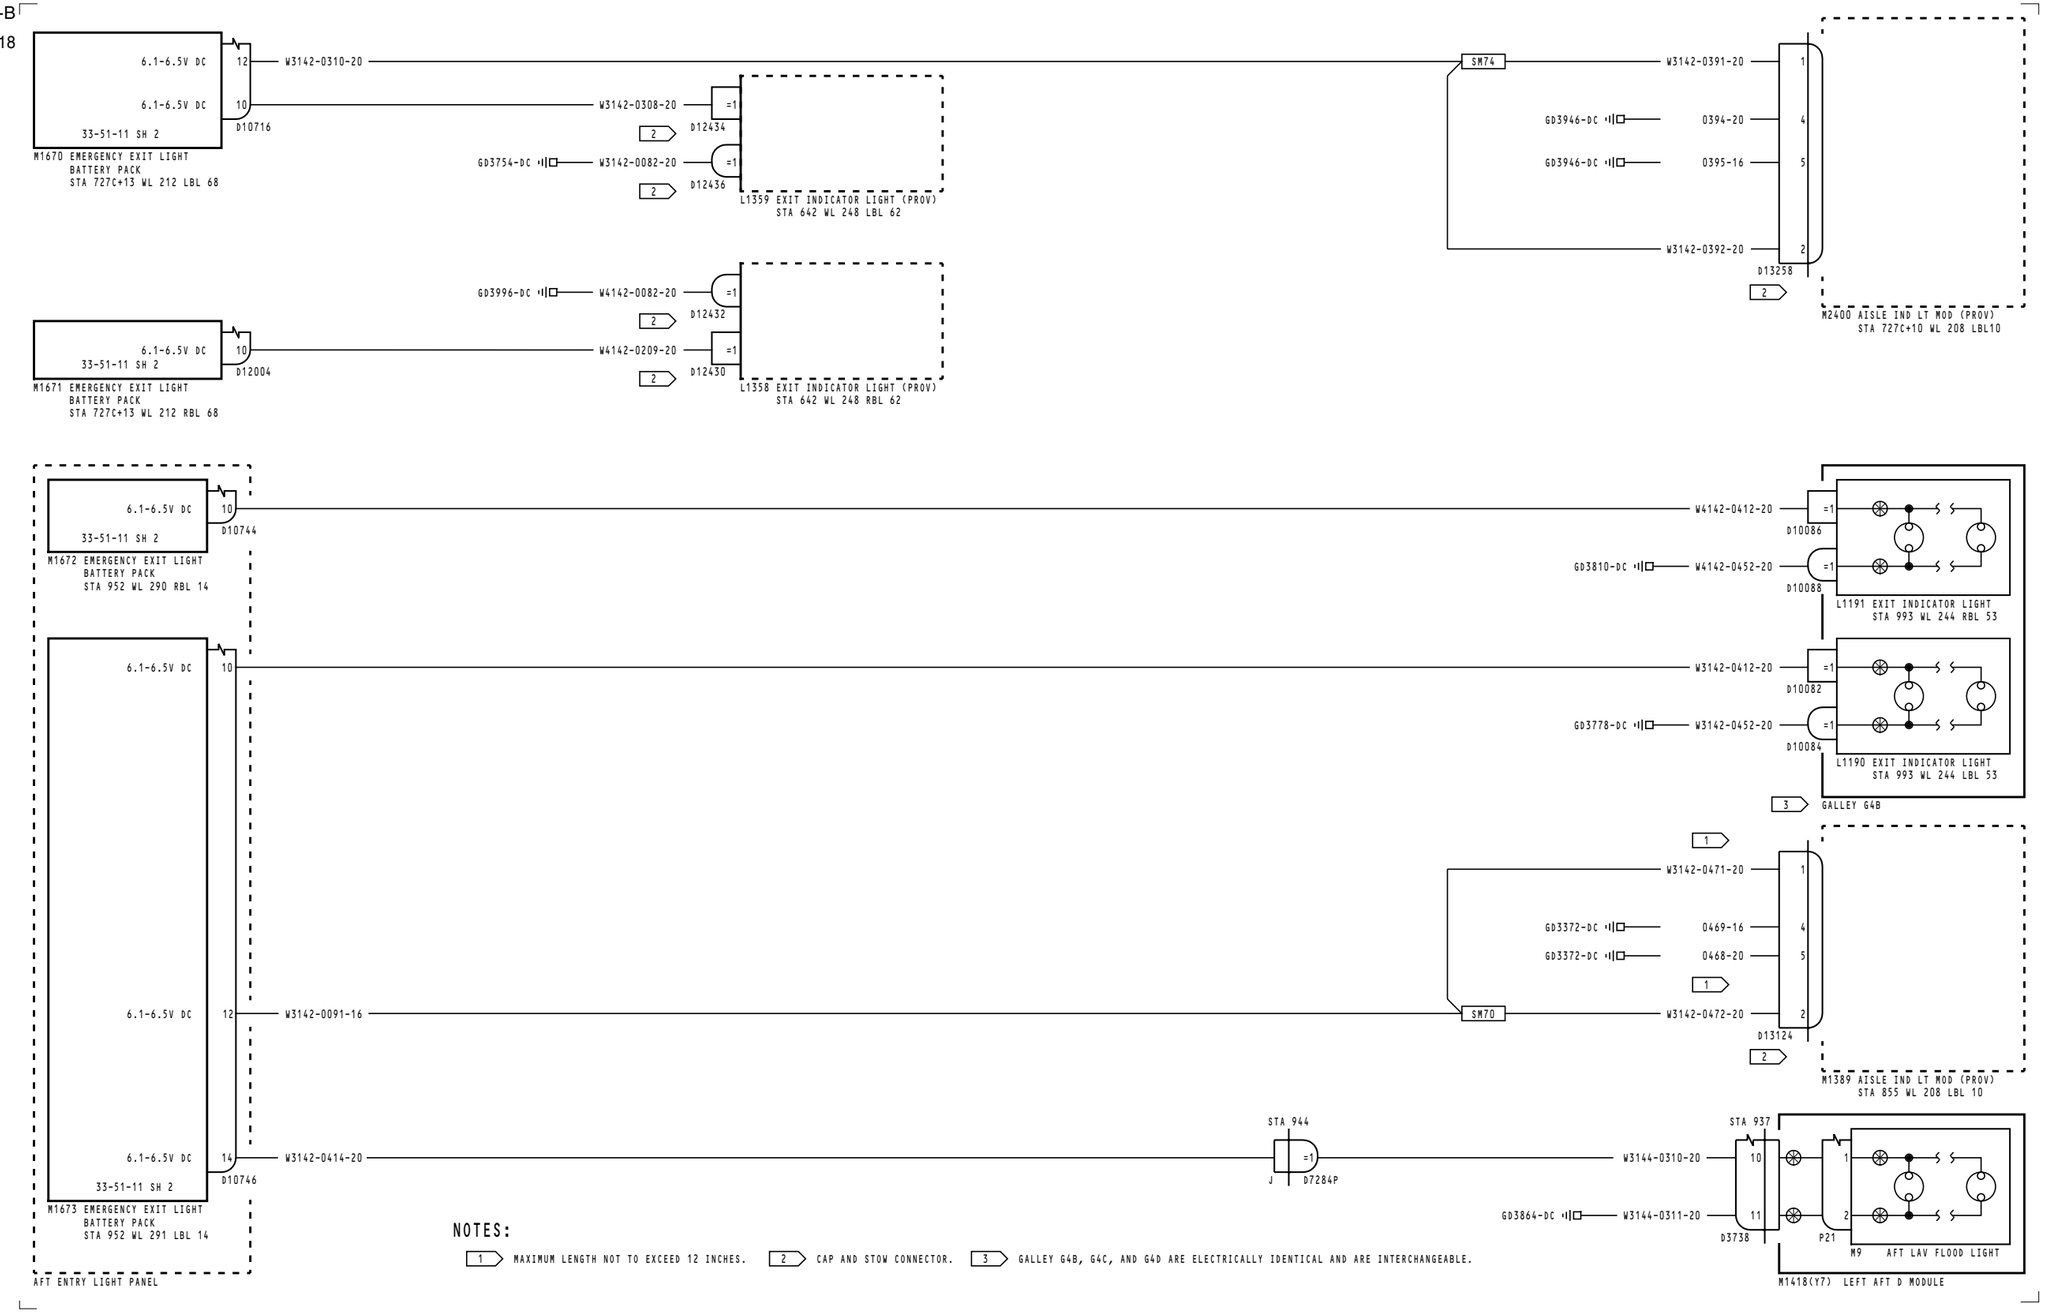


NOTES:

1. MAXIMUM LENGTH NOT TO EXCEED 12 INCHES.
2. CAP AND STOW CONNECTOR.
3. GALLEY G4B, G4C, AND G4D ARE ELECTRICALLY IDENTICAL AND ARE INTERCHANGEABLE.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

33-51-22

Page 1

May 15/2024