CHAPTER

34

NAVIGATION

CHAPTER 34
NAVIGATION

CH-SE-SU	Schem	Page	Sheet	Date
34-EFFECTIVE PAGES				
		1 thru 2		Nov 14/2025
34-CONTENTS				
	R	1		Nov 14/2025
		2		Sep 15/2025
		3		Sep 15/2025
		4		May 15/2024
34-ALPHABETICAL INDEX				
		1		May 15/2024
		2		May 15/2024
34-16-11				
		1		May 15/2024
34-16-21				
		1		May 15/2024
34-21-11				
		1		May 15/2024
34-21-12				
	R	1		Nov 14/2025
34-21-13				
		1.1	1	May 15/2024
			2	May 15/2024
34-21-14				
		1.1	1	May 15/2024
			2	May 15/2024
34-21-15				
		1		May 15/2024
34-21-16				
		1		May 15/2024
34-21-21				
		1		May 15/2024
34-21-22				
	R	1		Nov 14/2025
34-21-23				
		1	1	May 15/2024
			2	May 15/2024
34-21-24				
		1	1	May 15/2024
			2	May 15/2024
34-24-15				
		1		May 15/2024
34-31-11				
		1	1	May 15/2024
			2	May 15/2024
34-31-21				
		1	1	May 15/2024
			2	May 15/2024
34-32-11				
		1		May 15/2024
34-33-11				
		1	1	Sep 15/2025
			2	May 15/2024
34-33-21				
		1	1	Sep 15/2025
			2	May 15/2024
34-41-11				
		1	1	May 15/2024
			2	May 15/2024
			3	Dec 24/2024
34-45-11				
		1		May 15/2024
34-45-21				
		1	1	May 15/2024
			2	May 15/2024
34-49-11				
		1	1	Dec 24/2024
			2	Sep 15/2025
			3	May 15/2024
			4	May 15/2024
34-51-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
34-51-21				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
34-51-41				
		1	1	Apr 23/2025
			2	May 15/2024
			3	Apr 23/2025
			4	May 15/2024
34-53-11				
		1	1	May 15/2024
			2	May 28/2025
34-53-21				
		1	1	May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CH-SE-SU	Schem	Page	Sheet	Date
34-53-21 (cont)				
			2	May 28/2025
34-53-31				
		1		Dec 24/2024
34-55-11				
		1	1	May 15/2024
			2	May 15/2024
34-55-21				
		1	1	Sep 15/2025
			2	May 15/2024
34-57-11				
		1	1	May 15/2024
			2	May 15/2024
34-57-21				
		1	1	May 15/2024
			2	May 15/2024
34-58-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
34-58-21				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
34-61-11				
		1	1	May 15/2024
			2	May 15/2024
34-61-12				
		1		May 15/2024
34-61-13				
		1		May 15/2024
34-61-14				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
34-61-15				
		1.1	1	May 15/2024
			2	May 15/2024
34-61-16				
		1		May 15/2024
34-61-17				
		1		May 15/2024
34-61-18				
		1		May 15/2024
34-61-19				
		1	1	May 15/2024
			2	May 15/2024
34-61-21				
		1		May 15/2024
34-61-22				
		1		May 15/2024
34-61-23				
		1	1	May 15/2024
			2	May 15/2024
34-61-26				
		1		May 15/2024
34-61-27				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 34
NAVIGATION

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
OVERSPEED WARNING						
AIR DATA INERTIAL REFERENCE SYSTEM OVERSPEED TEST LEFT	34-16-11		1		May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM OVERSPEED TEST RIGHT	34-16-21		1		May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS)						
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT CONTROL & WARNING	34-21-11		1		May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT SYSTEM INPUTS	34-21-12		1		Nov 14/2025	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT IR OUTPUTS	34-21-13		1.1	1	May 15/2024	ALL
				2	May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT ADR OUTPUTS	34-21-14		1.1	1	May 15/2024	ALL
				2	May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM - IR SIGNAL SWITCHING	34-21-15		1		May 15/2024	ALL
ADIRS - NO COOLING AND "ON DC" OPERATION WARNING	34-21-16		1		May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT CONTROL & WARNING	34-21-21		1		May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT SYSTEM INPUTS	34-21-22		1		Nov 14/2025	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT IR OUTPUTS	34-21-23		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT ADR OUTPUTS	34-21-24		1	1	May 15/2024	ALL
				2	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 34
NAVIGATION

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
STANDBY ATTITUDE REFERENCE SYSTEM						
INTEGRATED STANDBY FLIGHT DISPLAY SYSTEM	34-24-15		1		May 15/2024	ALL
INSTRUMENT LANDING SYSTEM (ILS)						
MMR - ILS NO. 1	34-31-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
MMR - ILS NO. 2	34-31-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
MARKER BEACON SYSTEM						
MARKER BEACON	34-32-11		1		May 15/2024	ALL
LOW RANGE RADIO ALTIMETER (LRRA) SYSTEM						
RADIO ALTIMETER SYSTEM -1	34-33-11		1	1	Sep 15/2025	ALL
				2	May 15/2024	ALL
RADIO ALTIMETER SYSTEM -2	34-33-21		1	1	Sep 15/2025	ALL
				2	May 15/2024	ALL
WEATHER RADAR SYSTEM						
WEATHER RADAR	34-41-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	Dec 24/2024	ALL
TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS)						
TCAS POWER AND DISPLAY	34-45-11		1		May 15/2024	ALL
TCAS ANTENNA/INTERFACE	34-45-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
GROUND PROXIMITY WARNING SYSTEM						
GROUND PROXIMITY WARNING	34-49-11		1	1	Dec 24/2024	ALL
				2	Sep 15/2025	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
VOR SYSTEM						
VOR NO. 1	34-51-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 34
NAVIGATION

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
VOR NO. 2	34-51-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
VOR/ILS INSTRUMENT TRANSFER SWITCHING	34-51-41		1	1	Apr 23/2025	ALL
				2	May 15/2024	ALL
				3	Apr 23/2025	ALL
				4	May 15/2024	ALL
ATC SYSTEM						
ATC TRANSPONDER 1	34-53-11		1	1	May 15/2024	ALL
				2	May 28/2025	ALL
ATC TRANSPONDER 2	34-53-21		1	1	May 15/2024	ALL
				2	May 28/2025	ALL
ATC ANTENNA SELECT	34-53-31		1		Dec 24/2024	ALL
DISTANCE MEASURING SYSTEM (DME) SYSTEM						
DME NO. 1	34-55-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
DME NO. 2	34-55-21		1	1	Sep 15/2025	ALL
				2	May 15/2024	ALL
AUTOMATIC DIRECTION FINDER (ADF) SYSTEM						
ADF-1	34-57-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ADF-2	34-57-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
GLOBAL POSITIONING SYSTEM (GPS)						
GLOBAL POSITIONING SYSTEM SENSOR UNIT NO.1	34-58-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
GLOBAL POSITIONING SYSTEM SENSOR UNIT NO.2	34-58-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 34
NAVIGATION

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
FLIGHT MANAGEMENT COMPUTER SYSTEM (FMCS)						
FMCS POWER AND DISPLAY	34-61-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
FMCS SWITCHING AND INTER-SYSTEM BUS	34-61-12		1		May 15/2024	ALL
FMCS ARINC 429 INPUTS	34-61-13		1		May 15/2024	ALL
FMCS GENERAL OUTPUT BUSES FMC-01 AND FMC-02	34-61-14		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
FMCS OUTPUT BUSSES FMC-08 AND FMC-09	34-61-15		1.1	1	May 15/2024	ALL
				2	May 15/2024	ALL
FMCS MESSAGE AND FAIL STATUS	34-61-16		1		May 15/2024	ALL
FMCS ANALOG DISCRETES	34-61-17		1		May 15/2024	ALL
FMCS/DATA LOADER INTERFACE	34-61-18		1		May 15/2024	ALL
FMCS PROGRAM PINS	34-61-19		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
FMCS/MCDU INTERFACE WITH ACARS	34-61-21		1		May 15/2024	ALL
FMCS BITE PRINTER AND PORTABLE CDU RECEPTACLES	34-61-22		1		May 15/2024	ALL
CDU/MCDU INTERFACE	34-61-23		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
CDU/MCDU/DATA LOADER INTERFACE	34-61-26		1		May 15/2024	ALL
FMCS ETHERNET INTERFACE	34-61-27		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 34
NAVIGATION

CH-SE-SU	Title
34-57-11	ADF-1
34-57-21	ADF-2
34-21-16	ADIRS - NO COOLING AND "ON DC" OPERATION WARNING
34-21-14	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT ADR OUTPUTS
34-21-11	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT CONTROL & WARNING
34-21-13	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT IR OUTPUTS
34-21-12	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT SYSTEM INPUTS
34-21-24	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT ADR OUTPUTS
34-21-21	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT CONTROL & WARNING
34-21-23	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT IR OUTPUTS
34-21-22	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT SYSTEM INPUTS
34-21-15	AIR DATA INERTIAL REFERENCE SYSTEM - IR SIGNAL SWITCHING
34-16-11	AIR DATA INERTIAL REFERENCE SYSTEM OVERSPEED TEST LEFT
34-16-21	AIR DATA INERTIAL REFERENCE SYSTEM OVERSPEED TEST RIGHT
34-53-31	ATC ANTENNA SELECT
34-53-11	ATC TRANSPONDER 1
34-53-21	ATC TRANSPONDER 2
34-61-23	CDU/MCDU INTERFACE
34-61-26	CDU/MCDU/DATA LOADER INTERFACE
34-55-11	DME NO. 1
34-55-21	DME NO. 2
34-61-17	FMCS ANALOG DISCRETES
34-61-13	FMCS ARINC 429 INPUTS
34-61-22	FMCS BITE PRINTER AND PORTABLE CDU RECEPTACLES
34-61-27	FMCS ETHERNET INTERFACE
34-61-14	FMCS GENERAL OUTPUT BUSES FMC-01 AND FMC-02
34-61-16	FMCS MESSAGE AND FAIL STATUS
34-61-15	FMCS OUTPUT BUSSES FMC-08 AND FMC-09
34-61-11	FMCS POWER AND DISPLAY
34-61-19	FMCS PROGRAM PINS
34-61-12	FMCS SWITCHING AND INTER-SYSTEM BUS
34-61-18	FMCS/DATA LOADER INTERFACE
34-61-21	FMCS/MCDU INTERFACE WITH ACARS
34-58-11	GLOBAL POSITIONING SYSTEM SENSOR UNIT NO.1
34-58-21	GLOBAL POSITIONING SYSTEM SENSOR UNIT NO.2
34-49-11	GROUND PROXIMITY WARNING
34-24-15	INTEGRATED STANDBY FLIGHT DISPLAY SYSTEM
34-32-11	MARKER BEACON

34-ALPHABETICAL INDEX


ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 34
NAVIGATION

CH-SE-SU	Title
34-31-11	MMR - ILS NO. 1
34-31-21	MMR - ILS NO. 2
34-33-11	RADIO ALTIMETER SYSTEM -1
34-33-21	RADIO ALTIMETER SYSTEM -2
34-45-21	TCAS ANTENNA/INTERFACE
34-45-11	TCAS POWER AND DISPLAY
34-51-11	VOR NO. 1
34-51-21	VOR NO. 2
34-51-41	VOR/ILS INSTRUMENT TRANSFER SWITCHING
34-41-11	WEATHER RADAR

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

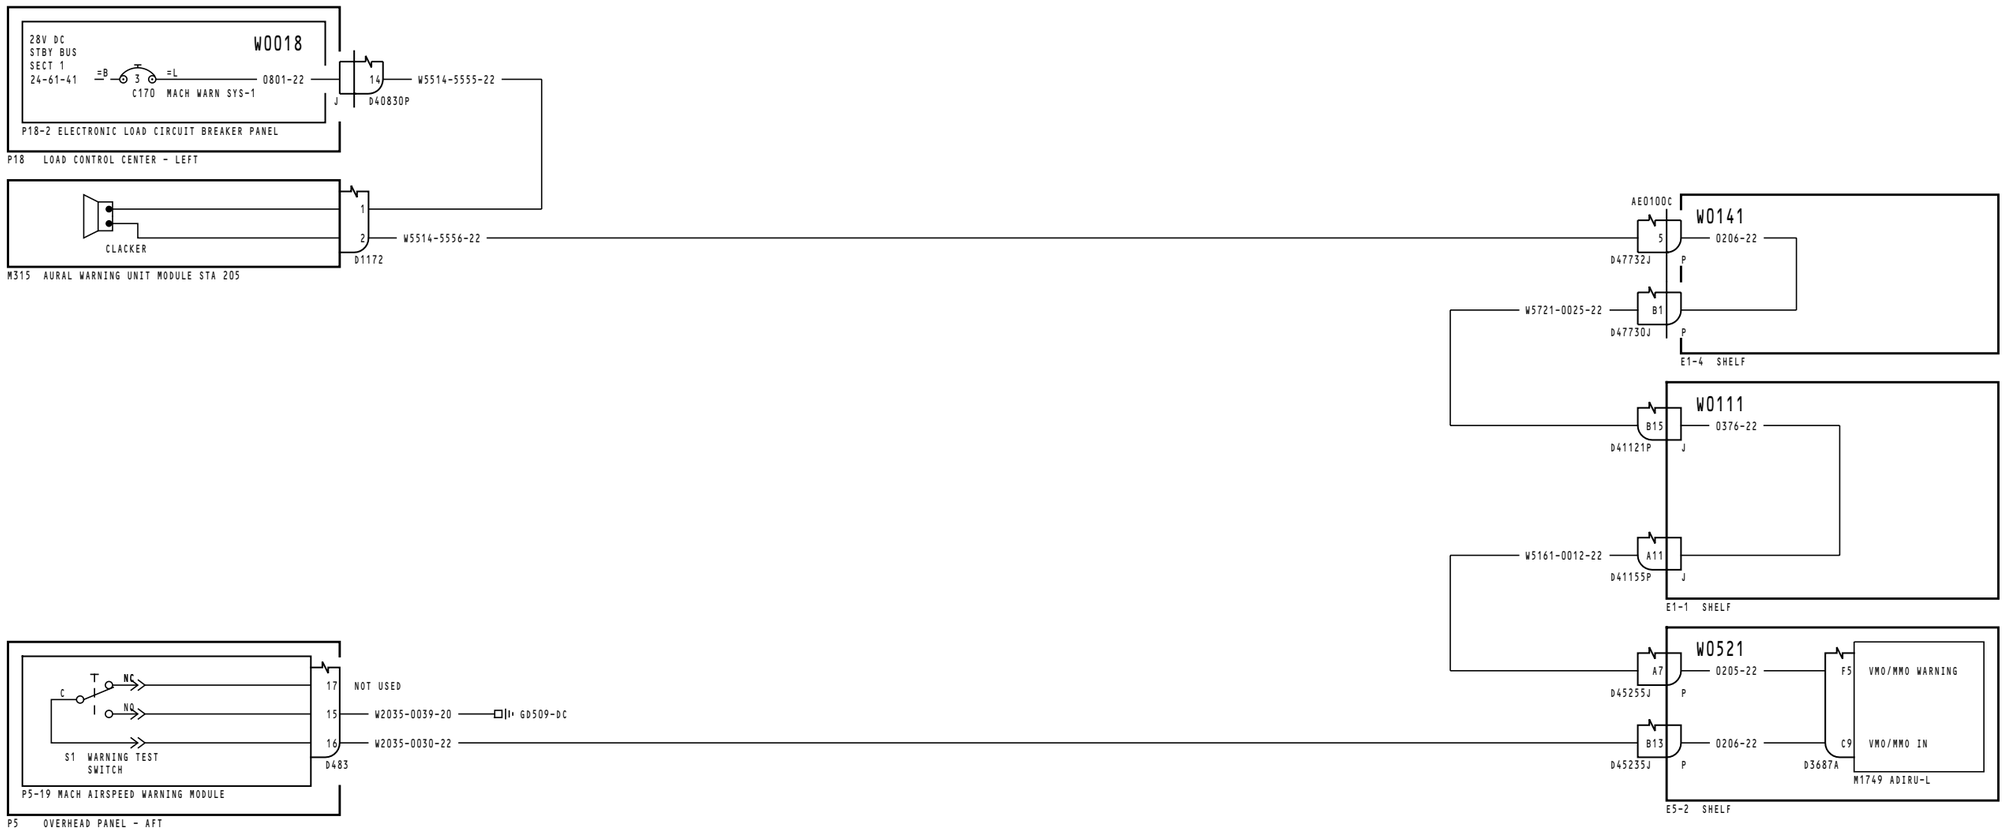


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-16-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

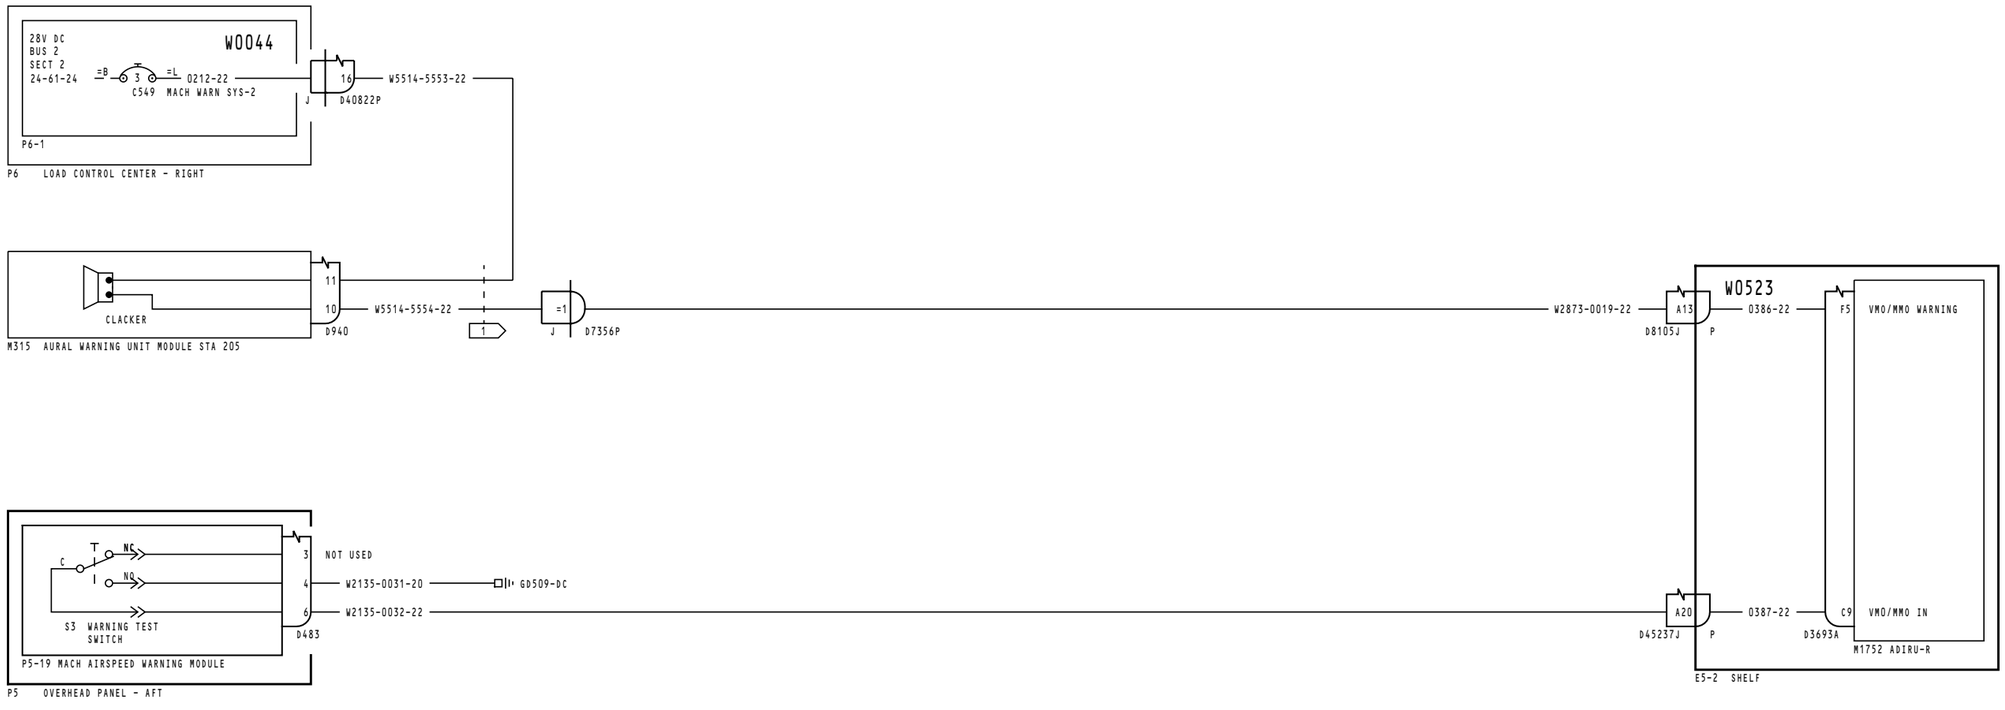

NOTES:

1 WIRES(S) MAY BE ROUTED TOGETHER THE LAST 14 INCHES INTO THE M315 MODULE.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-16-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
209

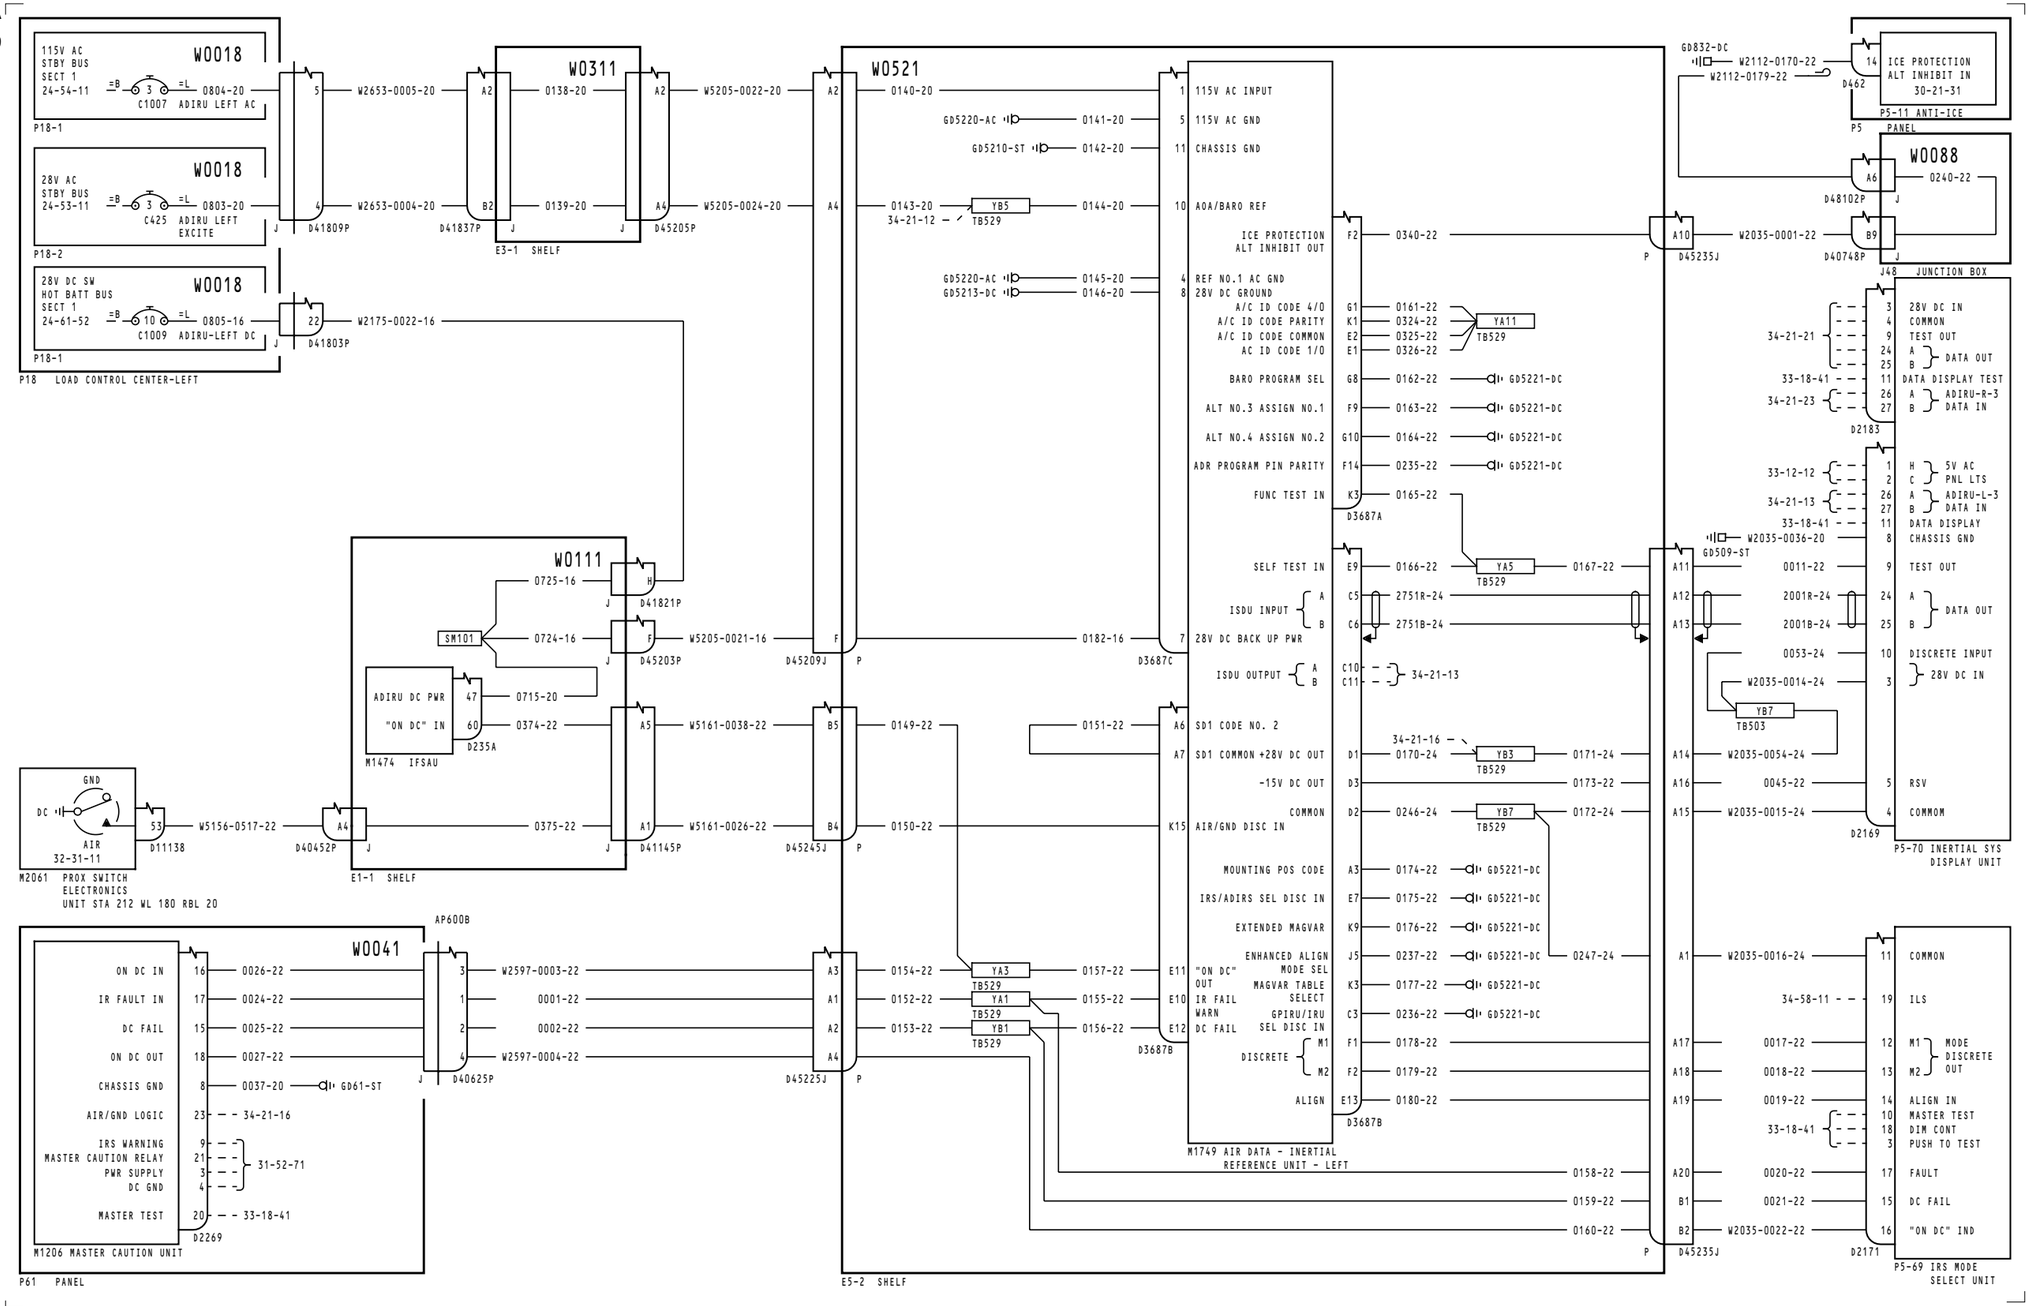

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-21-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
17

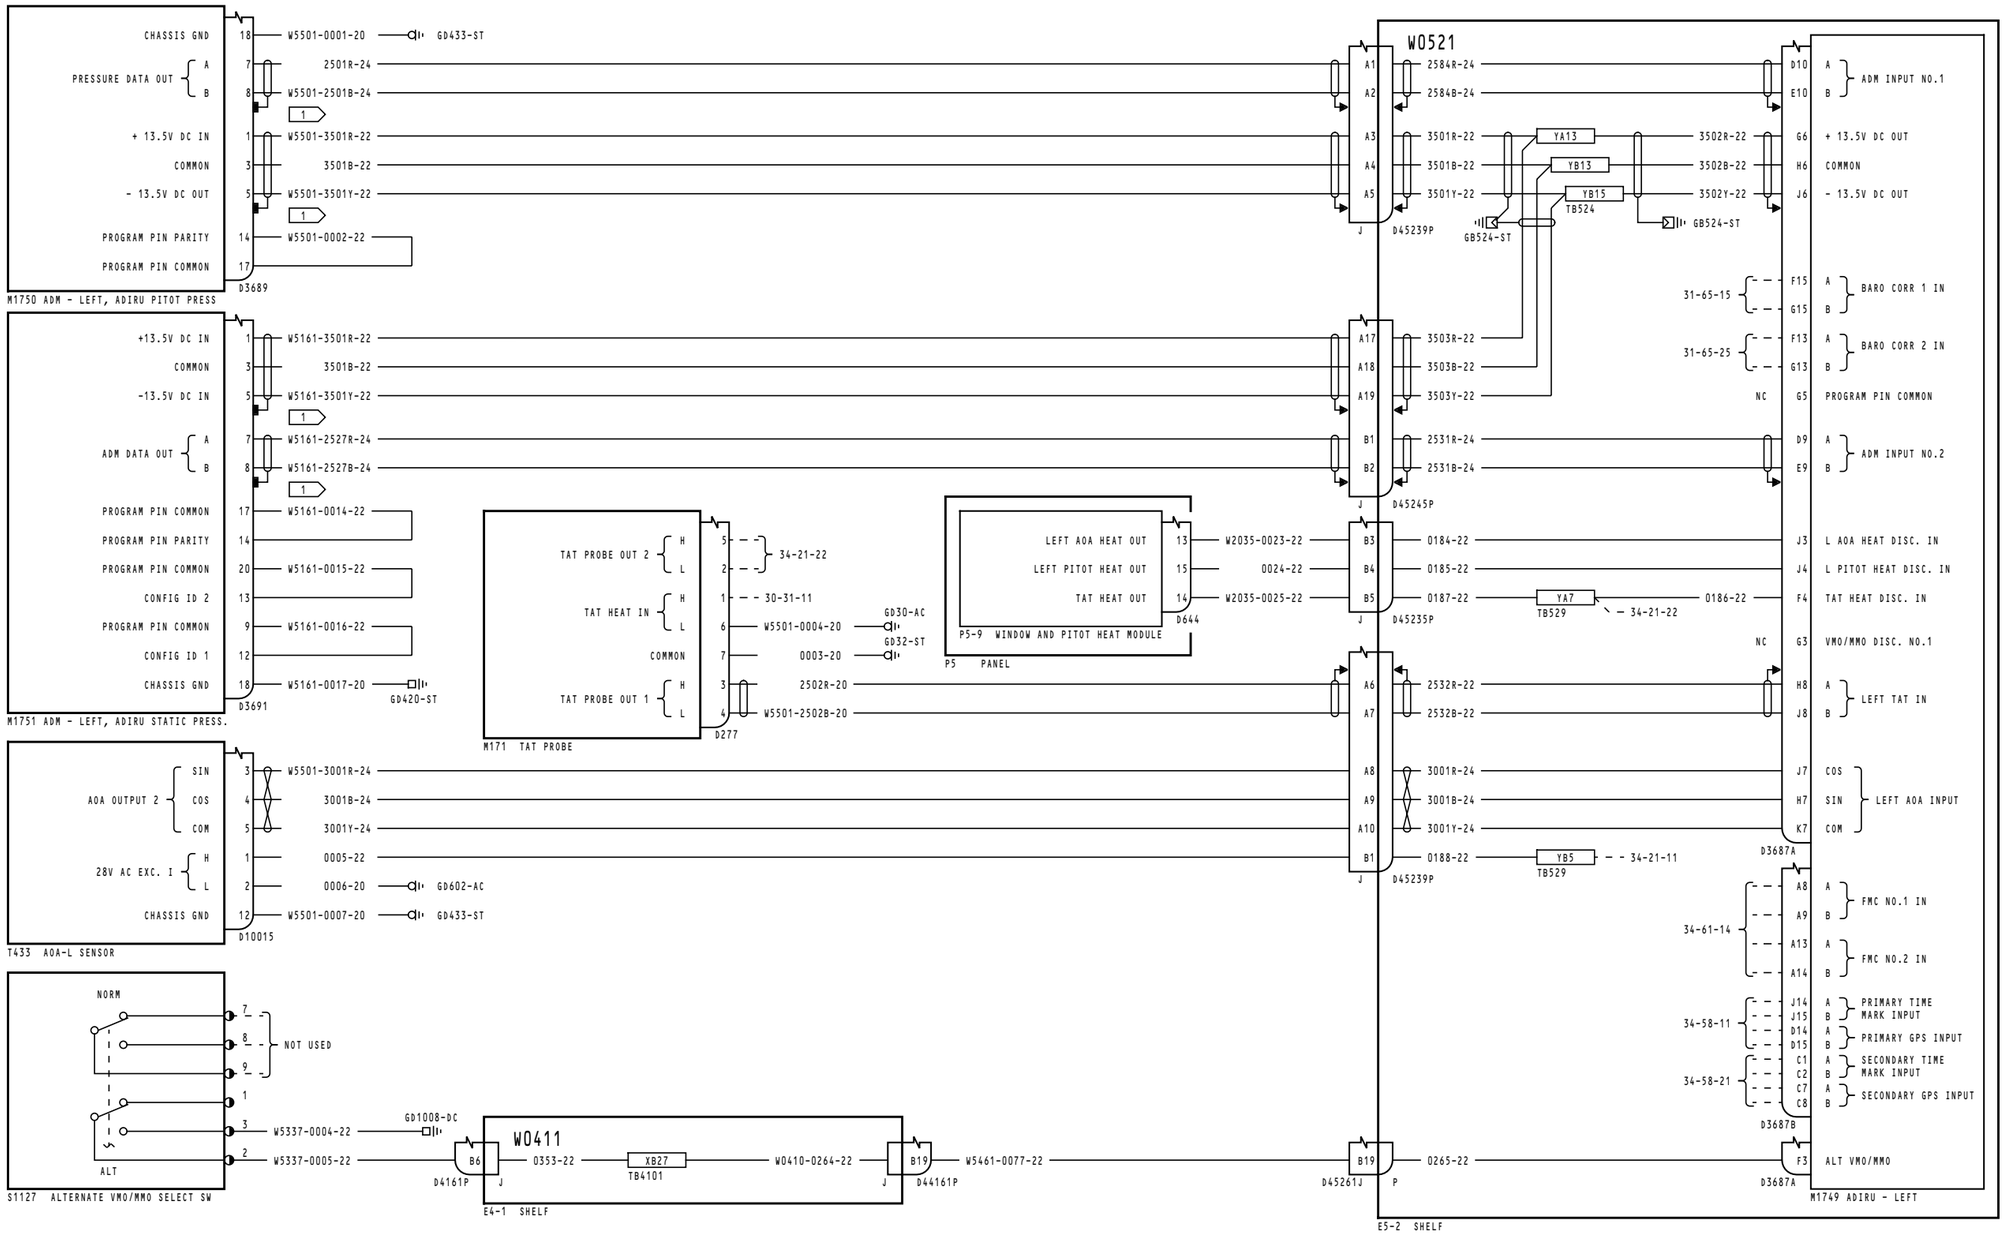

NOTES: 1 LIMIT PIG-TAILS TO < 3 INCH LENGTH

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-21-12

Page 1

Nov 14/2025

737-8 WIRING DIAGRAM MANUAL


-B
793

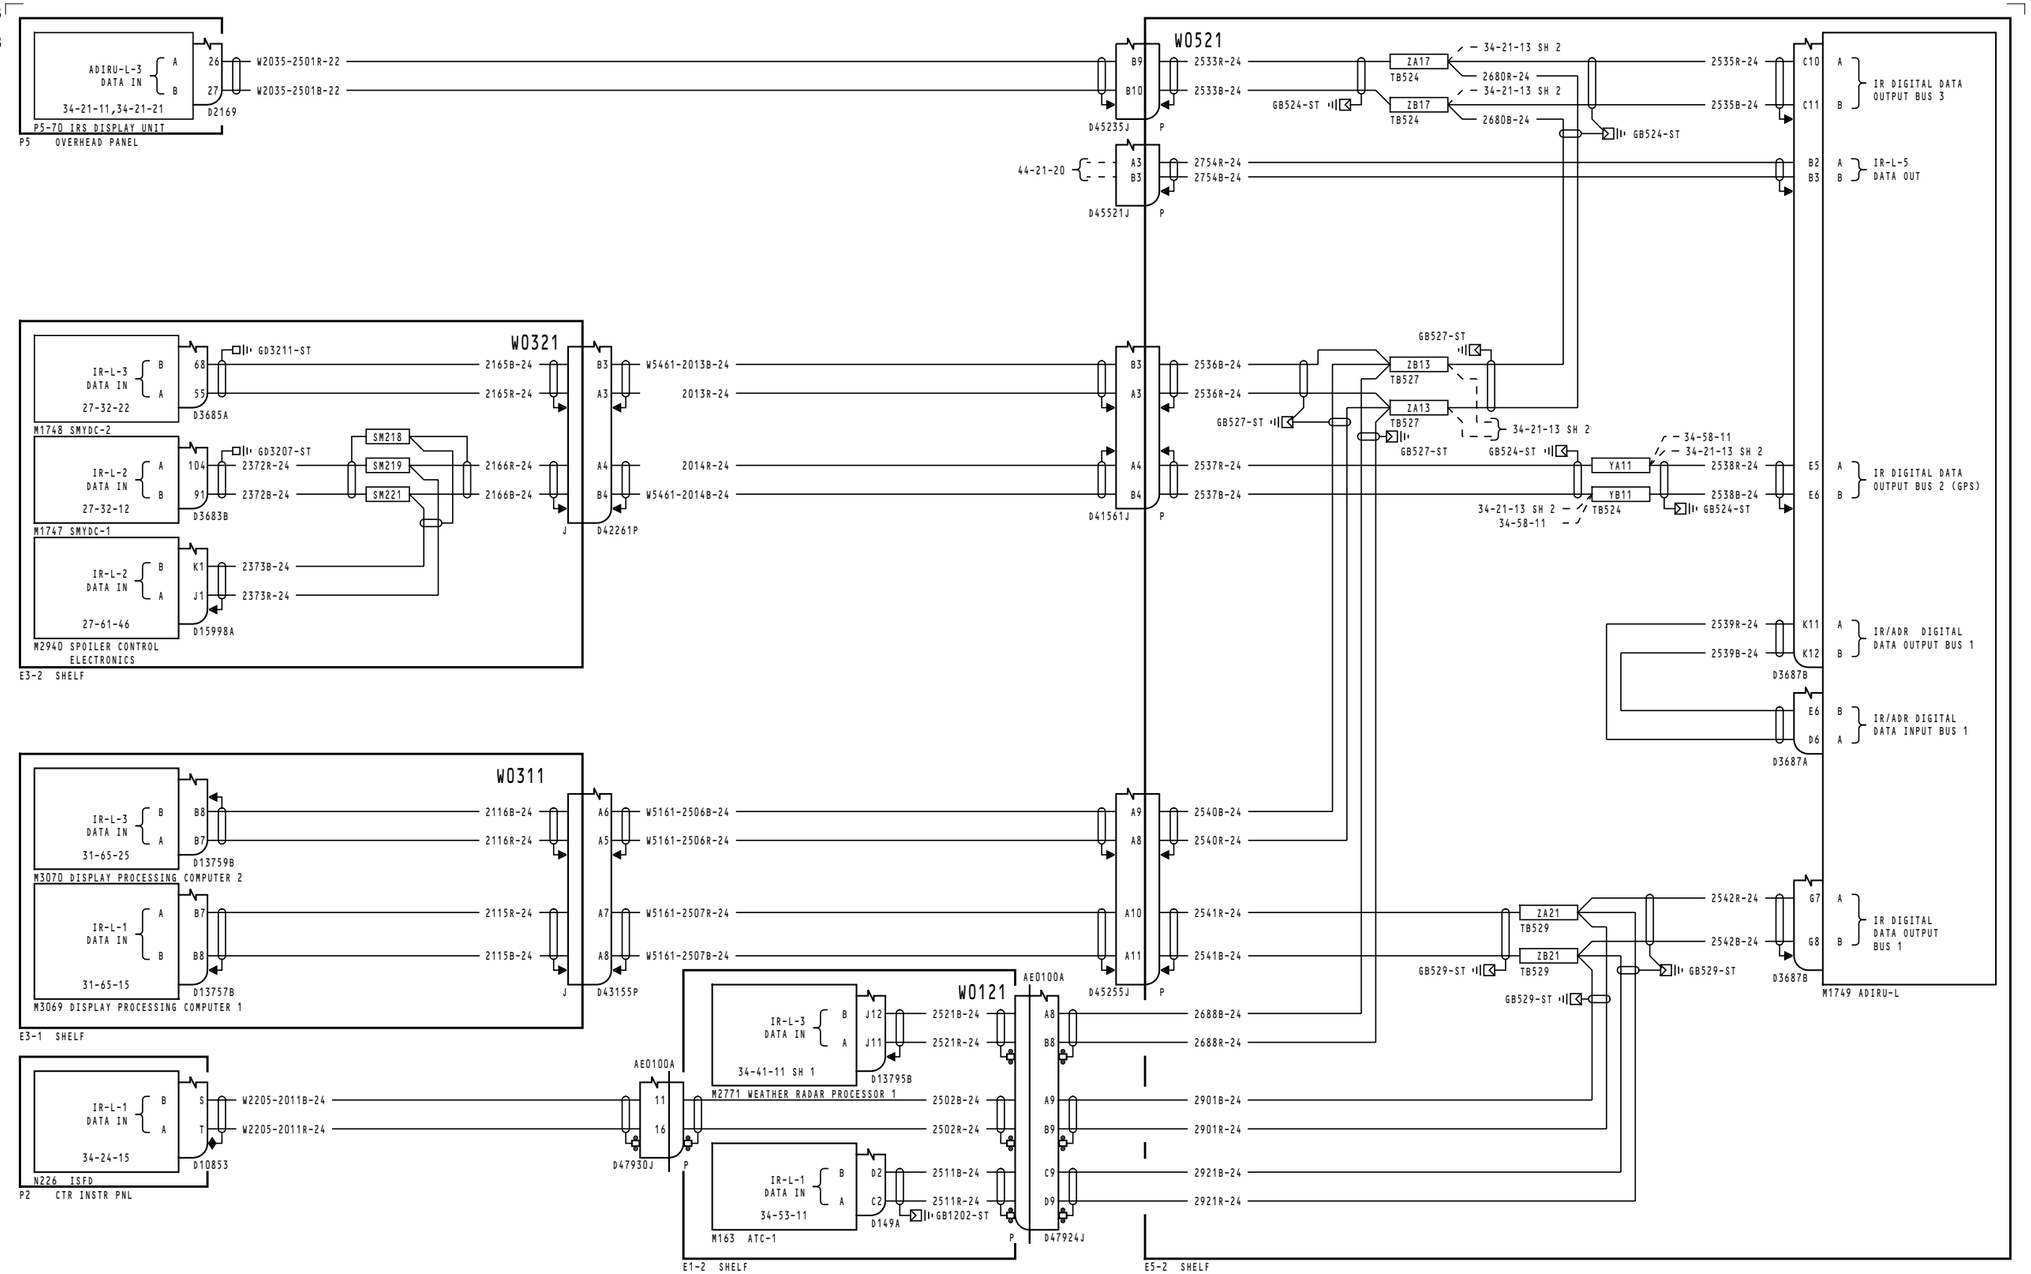

ALL	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT IR OUTPUTS	34-21-13	Incorporates SB 44-1020	34-21-13
	D280AM1215	Page 1.1 Sheet 1 May 15/2024		Page 1.1 Sheet 1 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

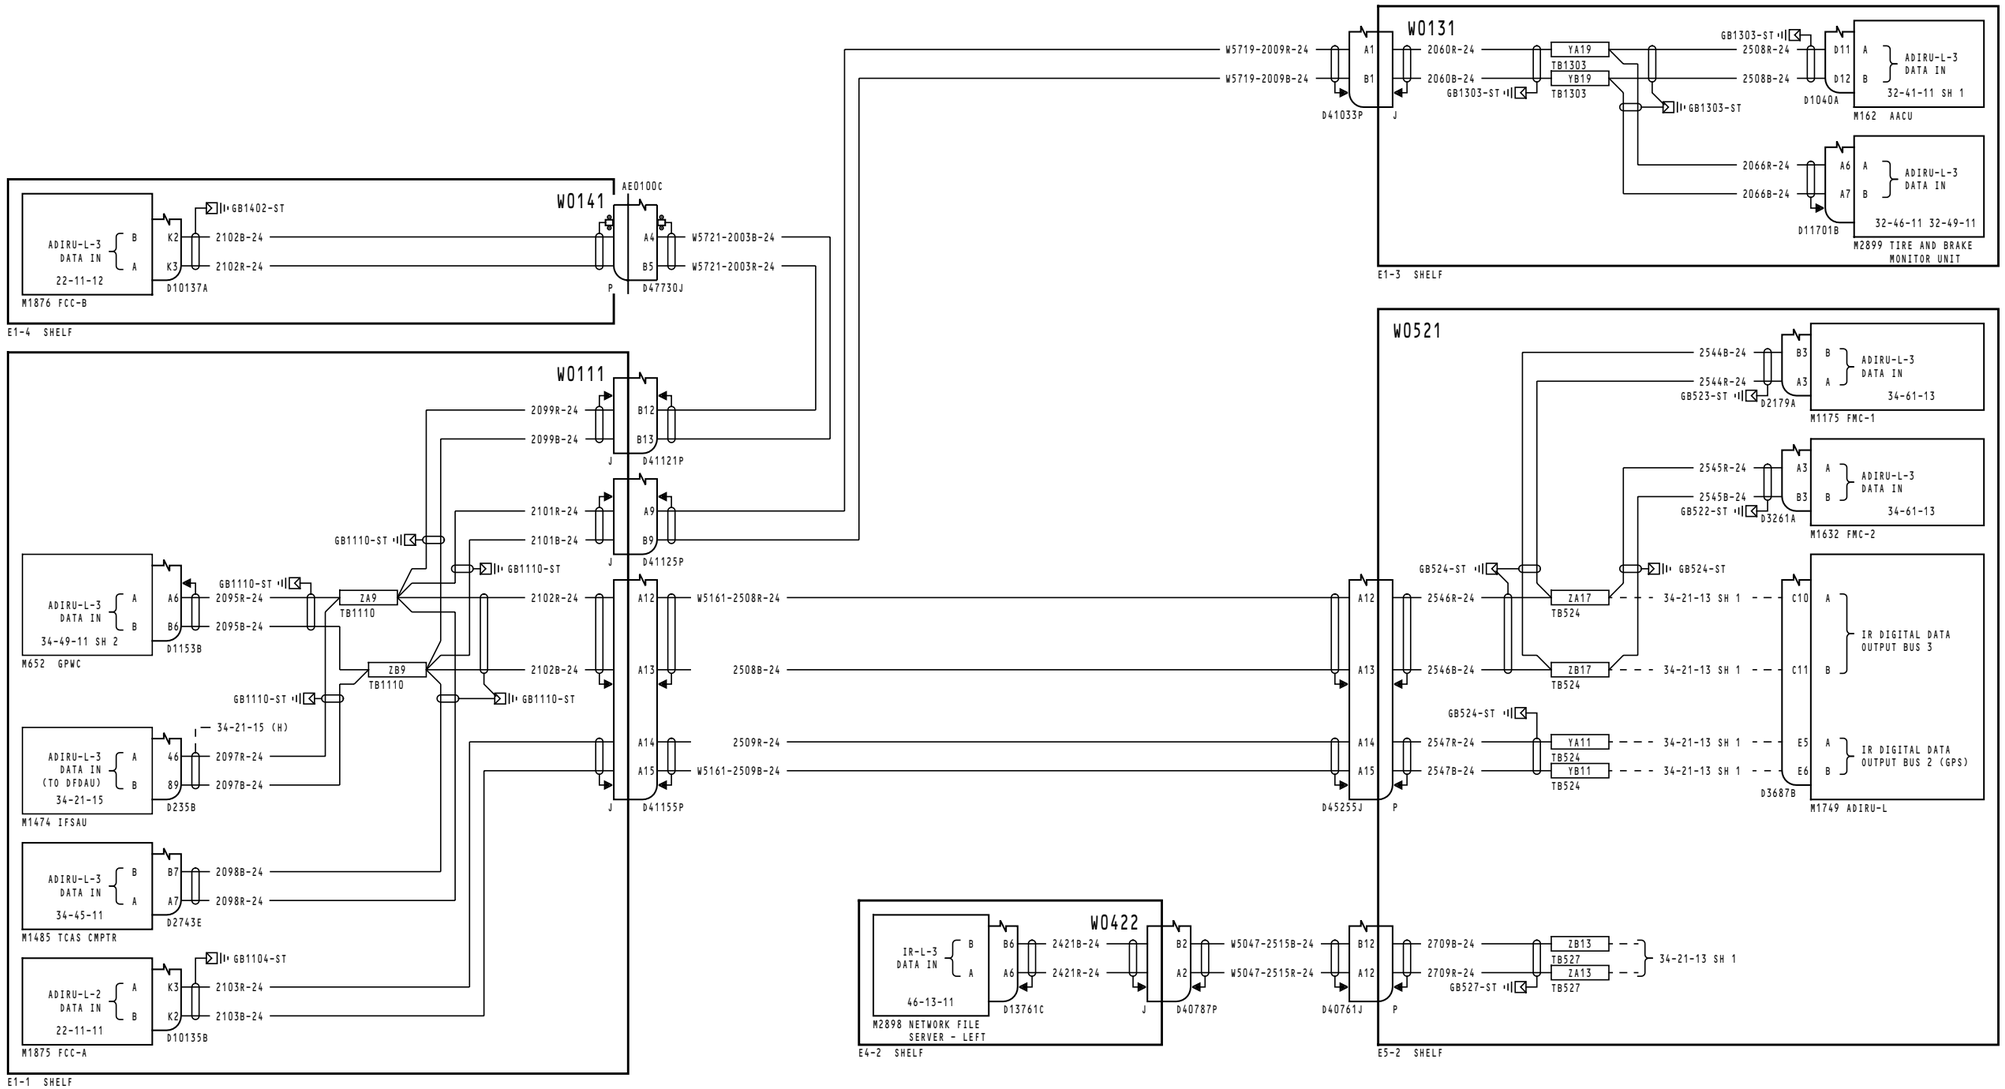


34-21-13

Page 1.1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

87

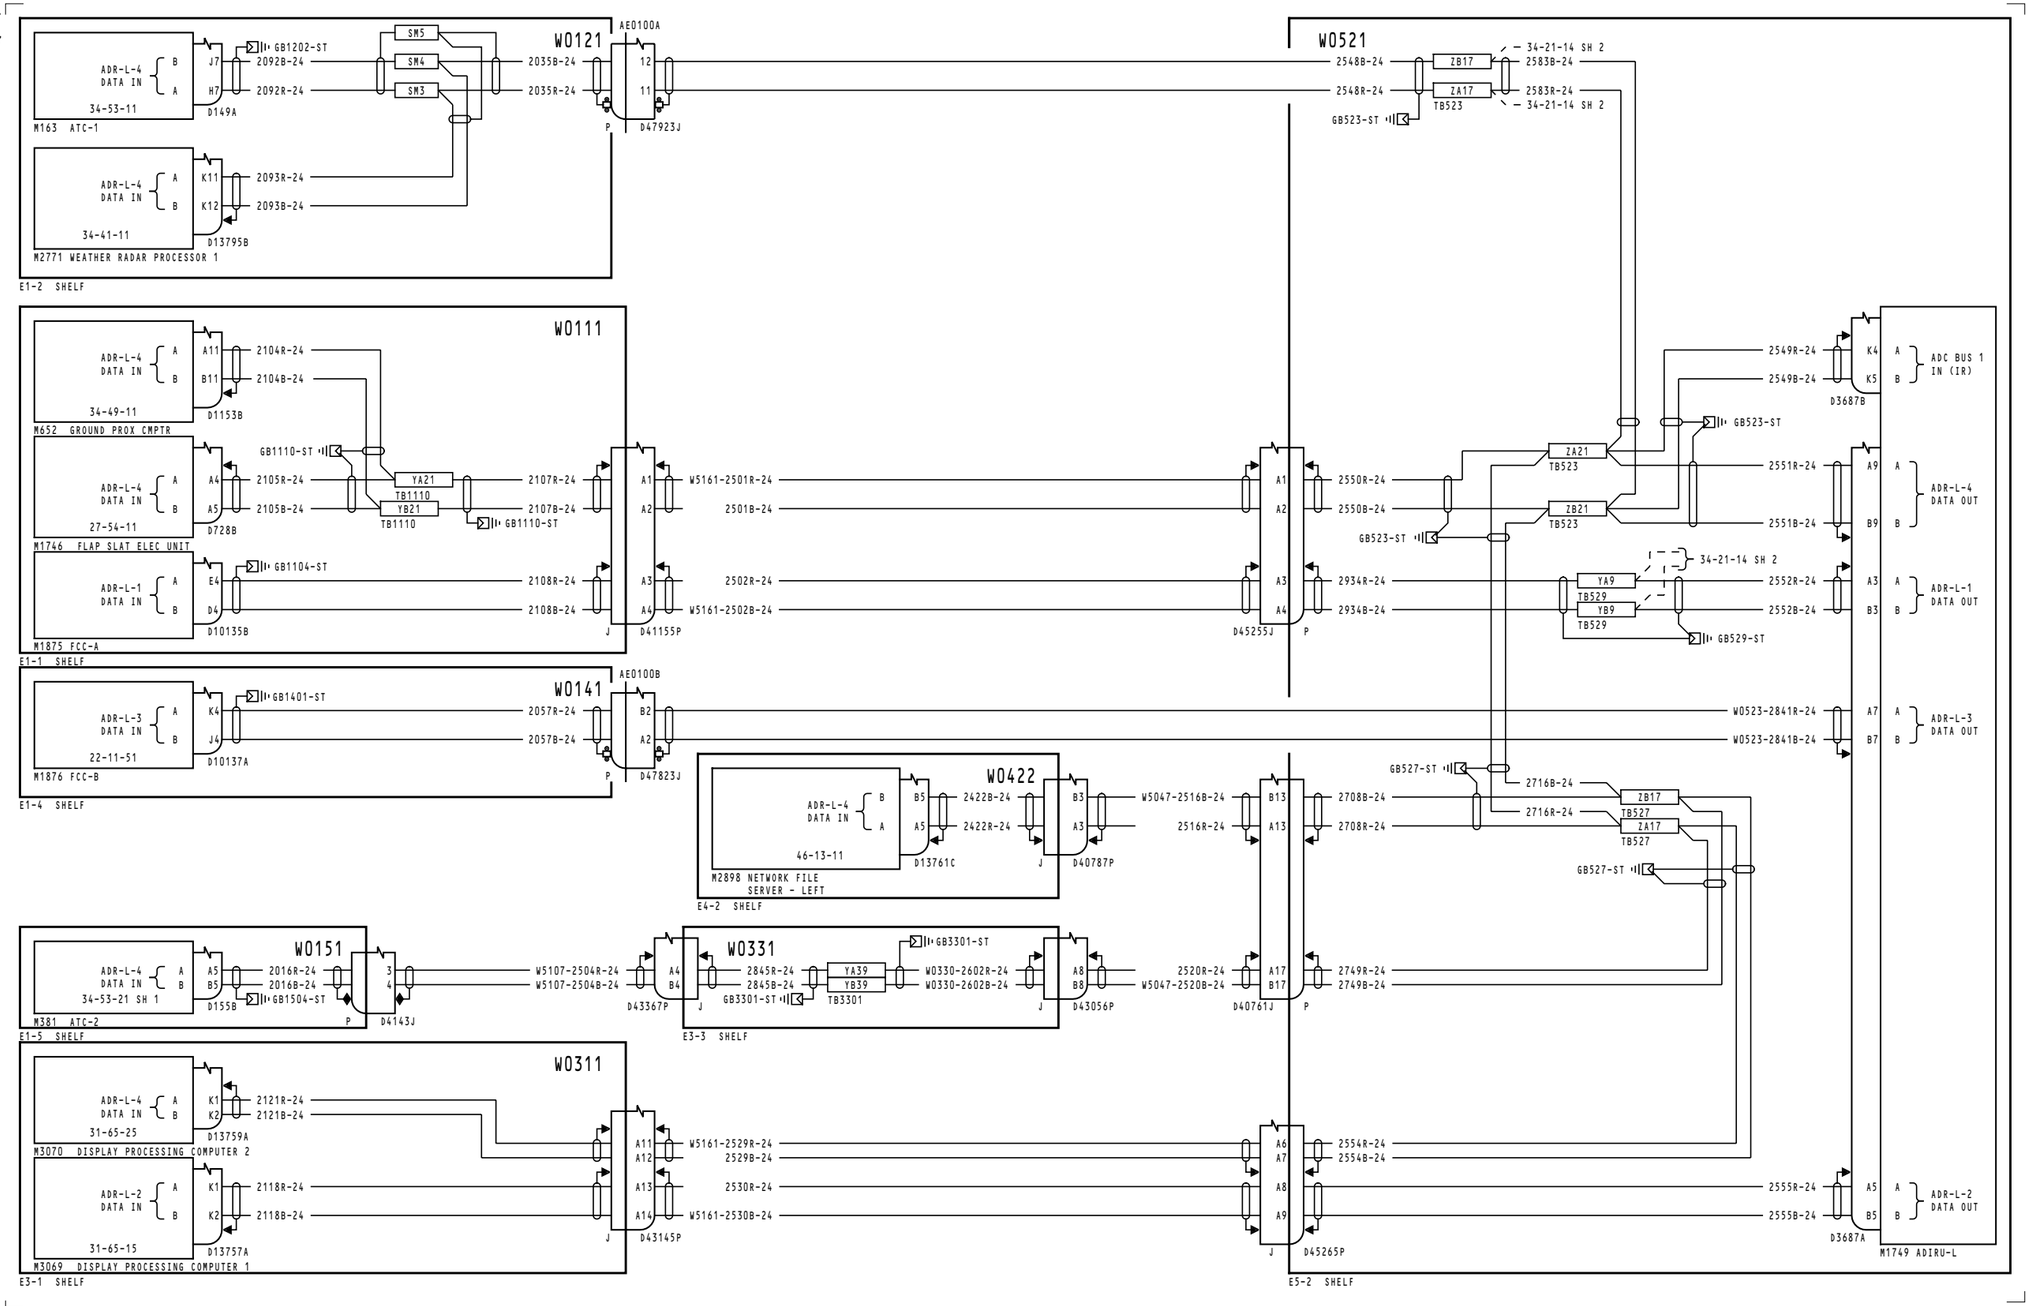


ALL	AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - LEFT ADR OUTPUTS D280AM1215	34-21-14 Page 1.1 Sheet 1 May 15/2024	34-21-14 Page 1.1 Sheet 1 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
349

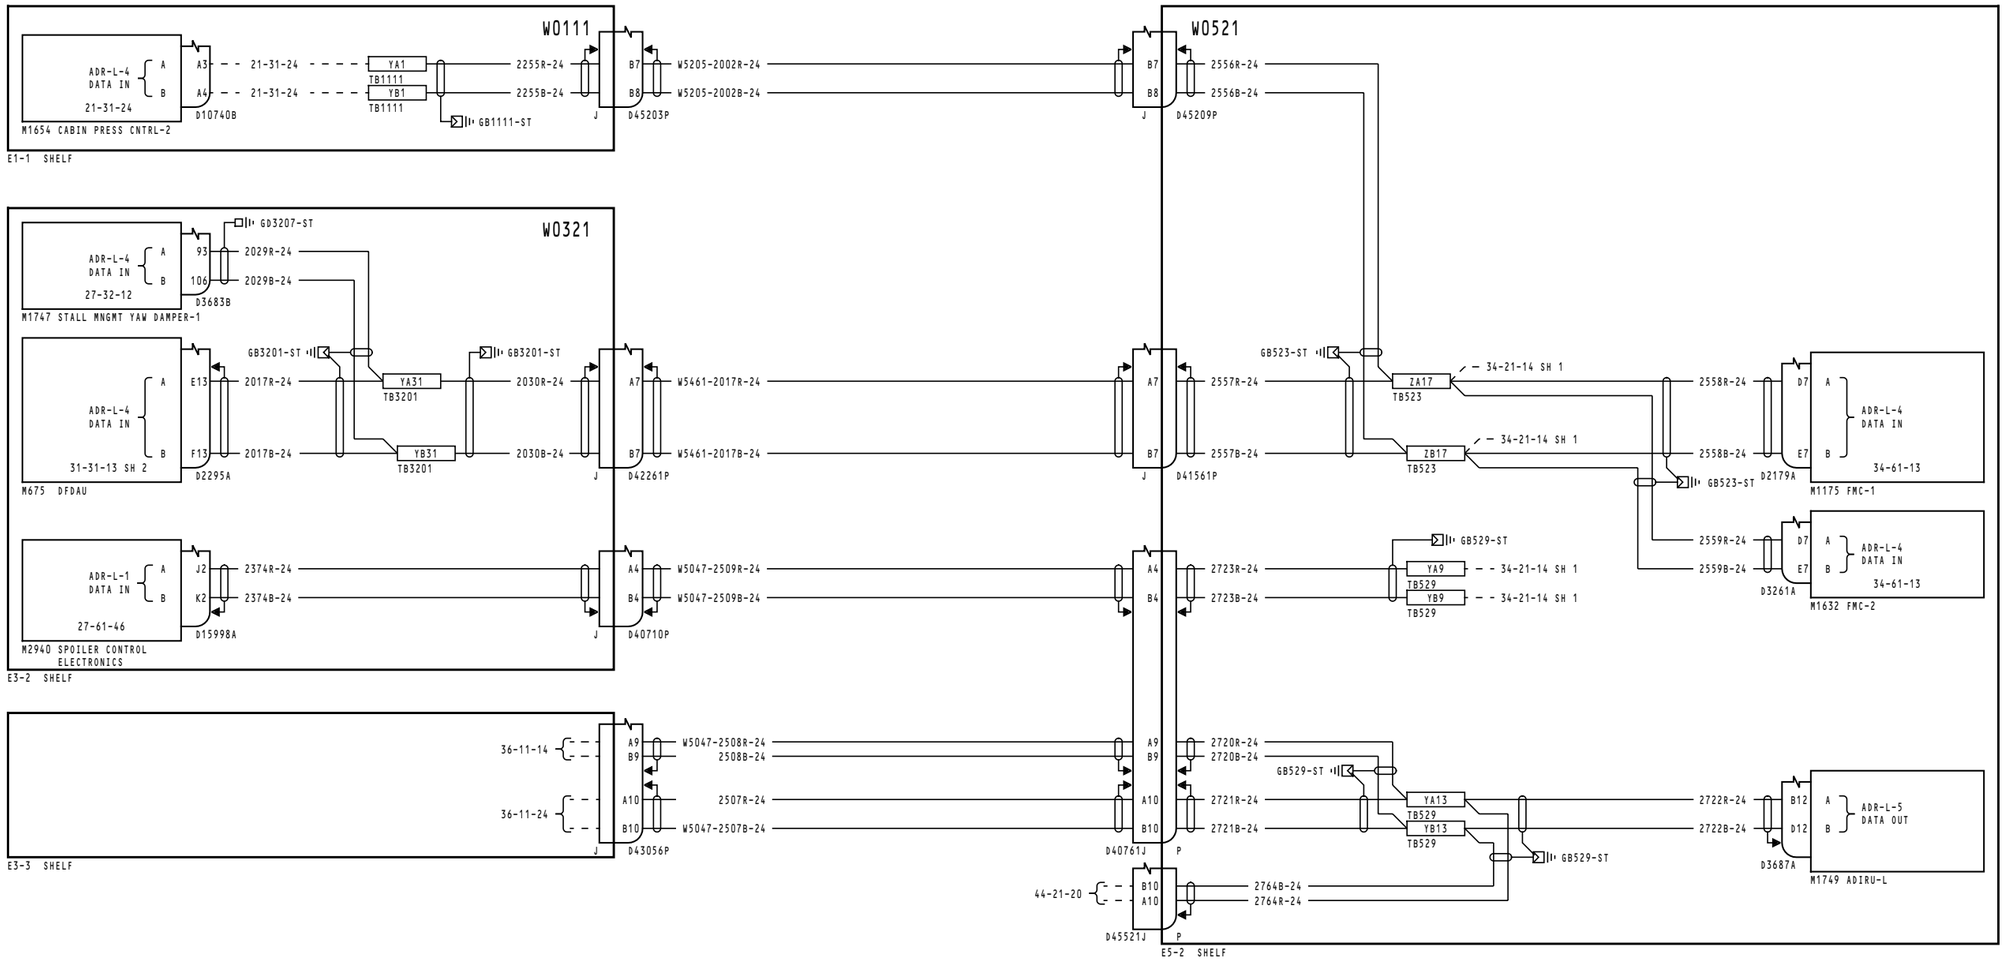


34-21-14

Page 1.1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

30

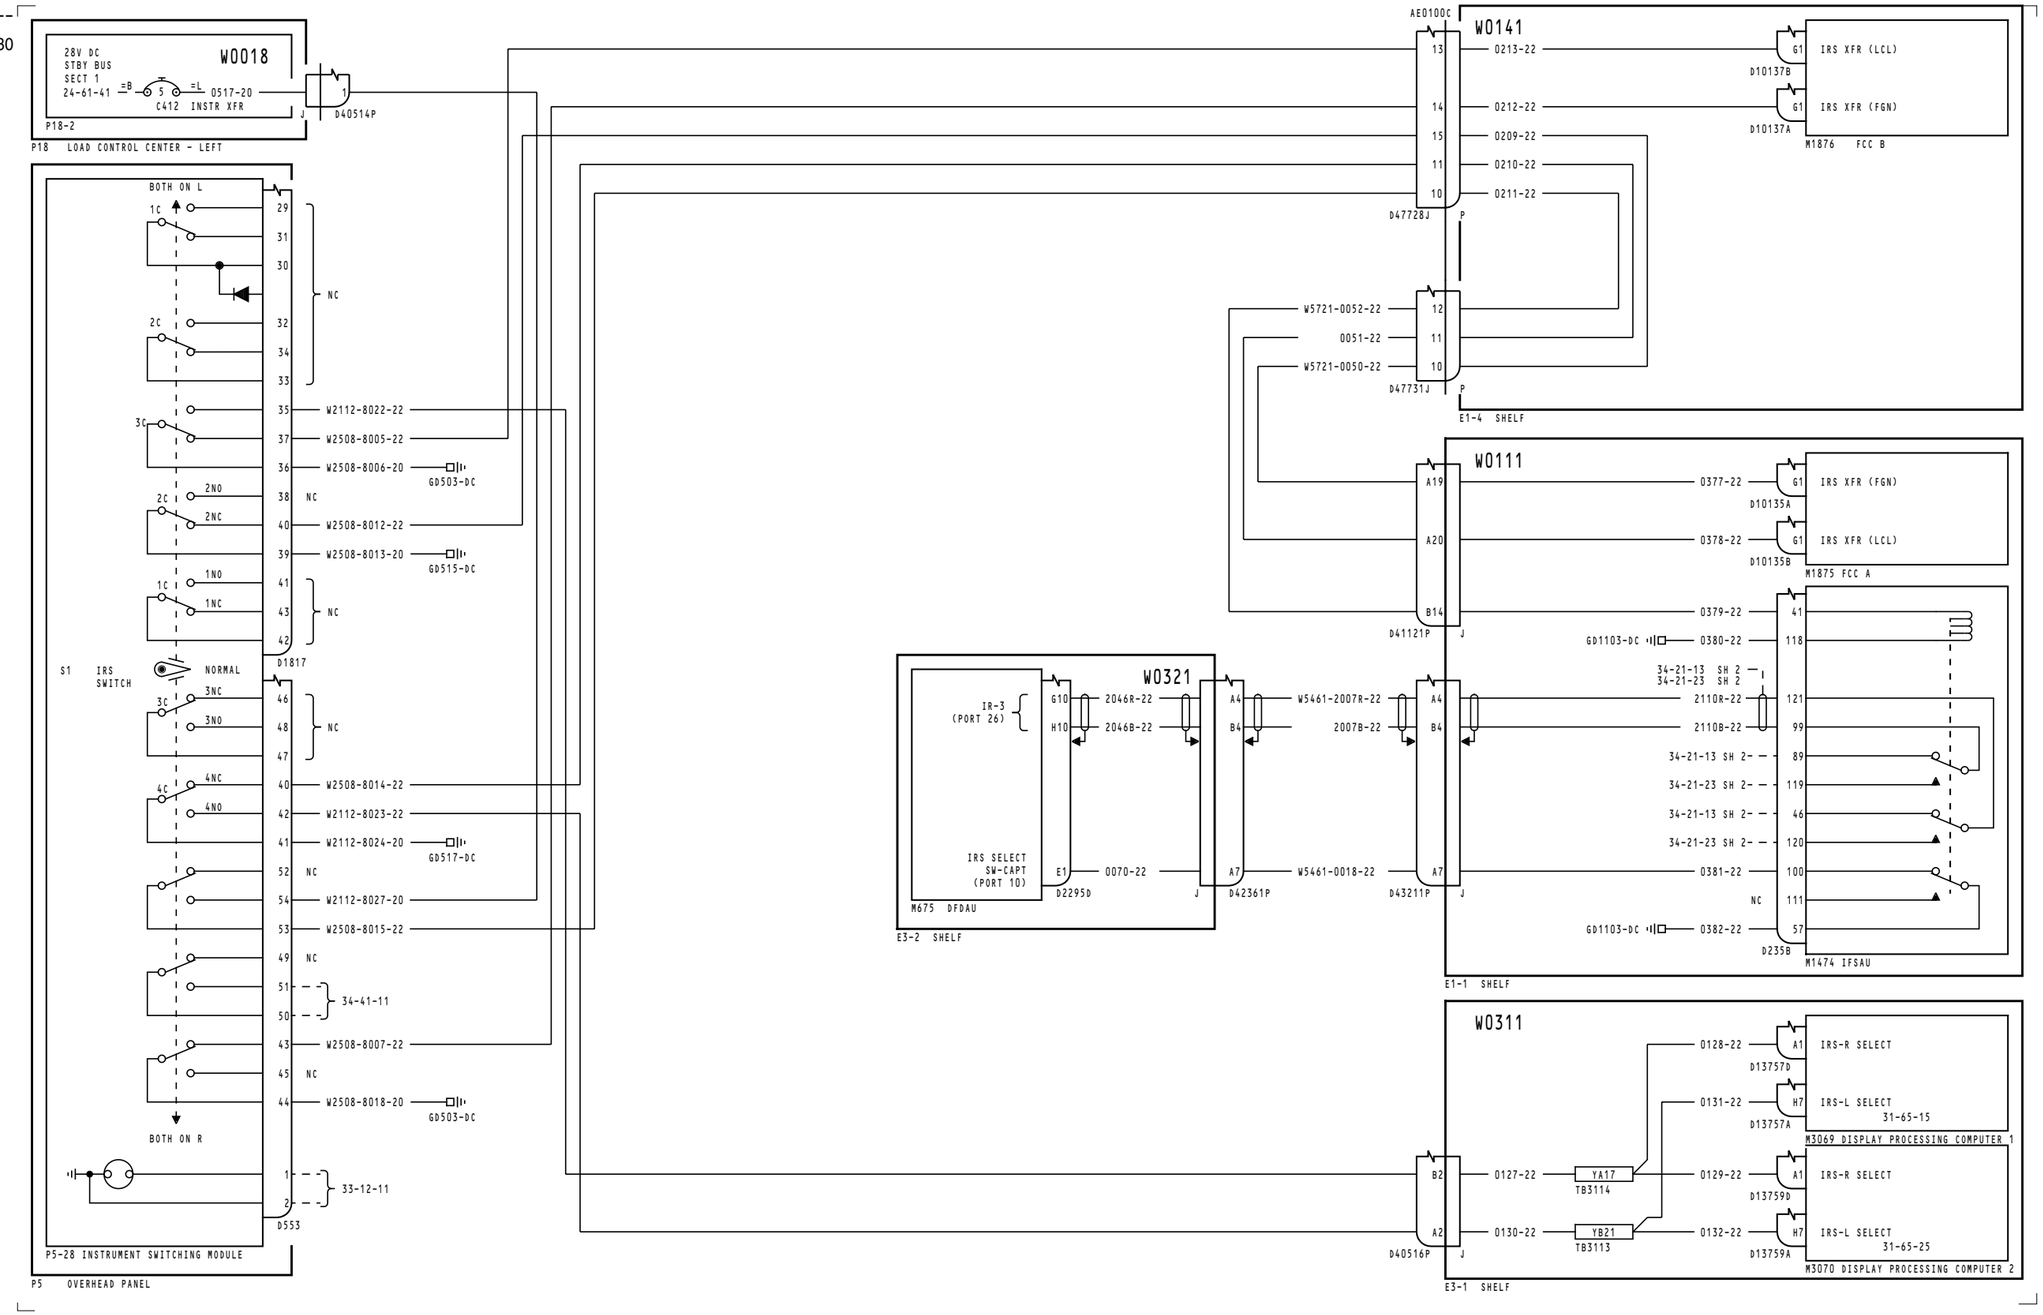


34-21-15

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

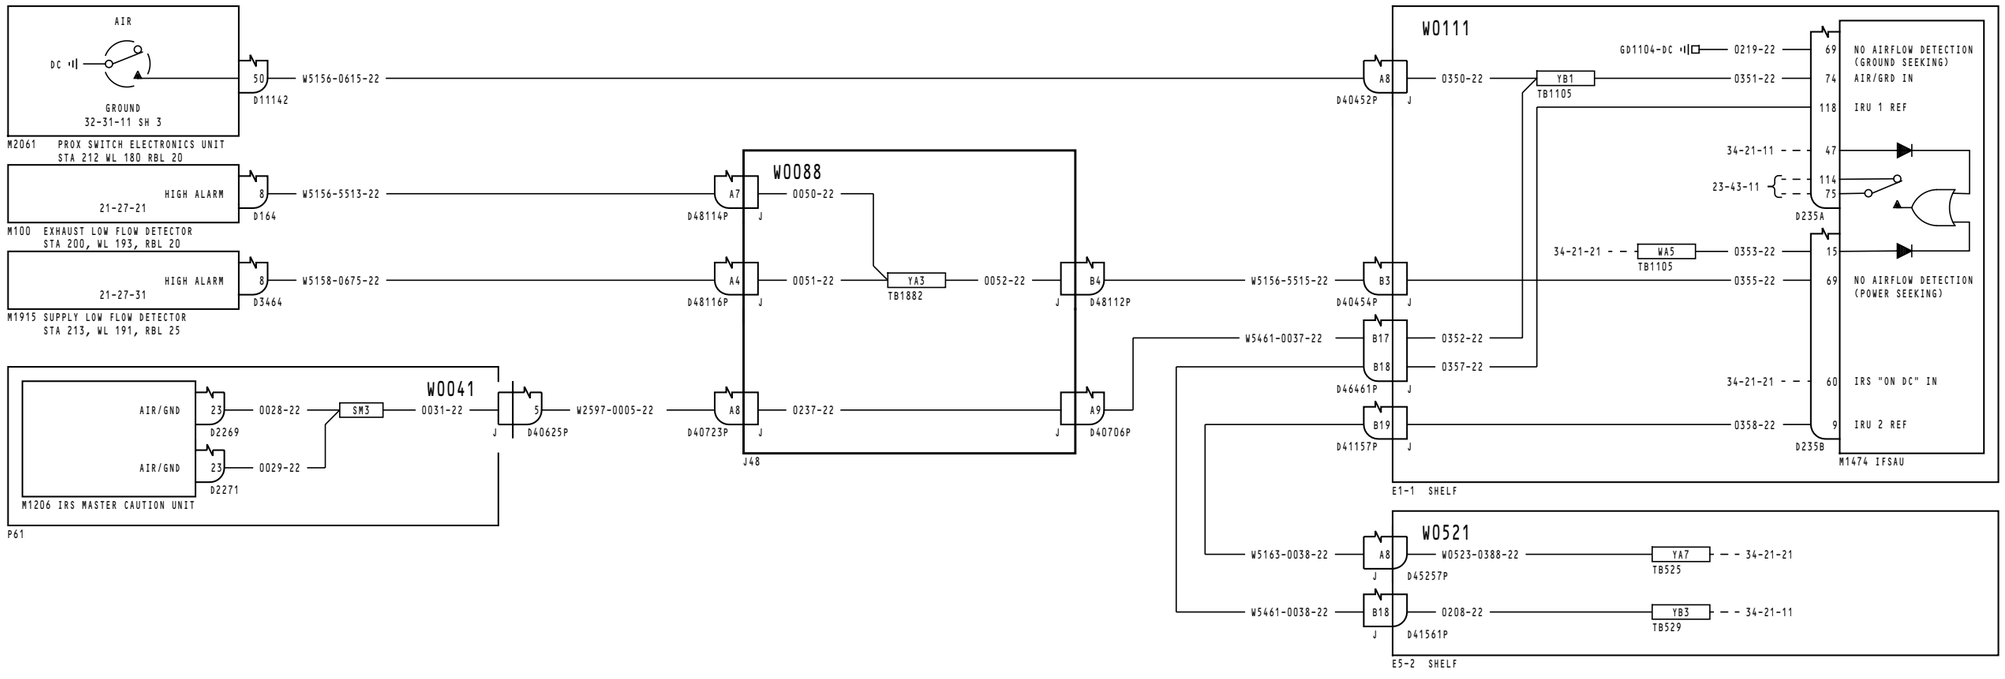


ALL	ADIRS - NO COOLING AND "ON DC" OPERATION WARNING D280AM1215	34-21-16 Page 1 May 15/2024

34-21-16
Page 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
173

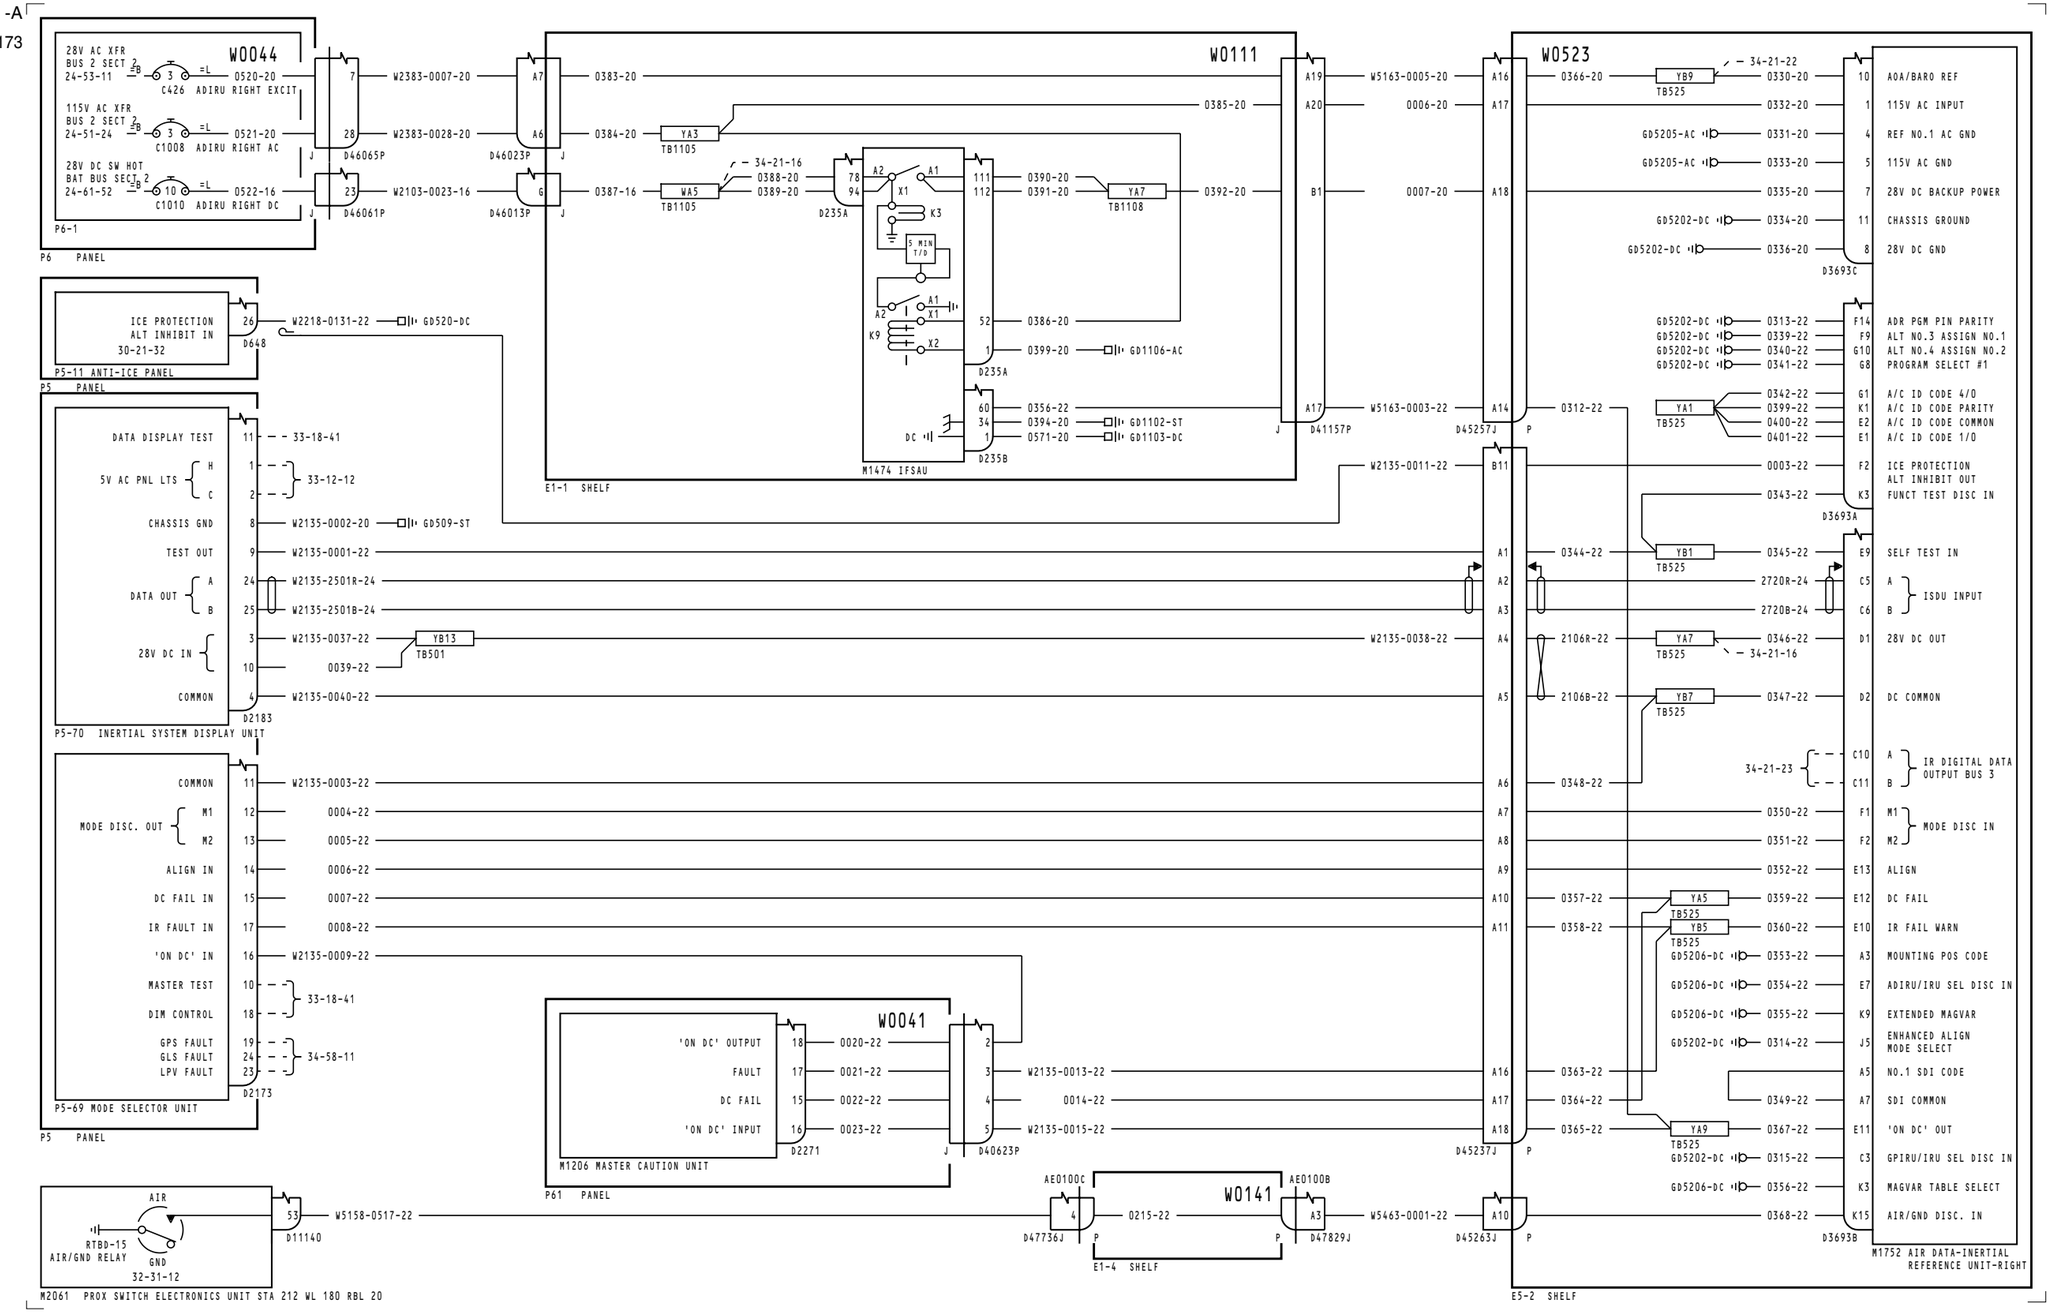

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-21-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
23

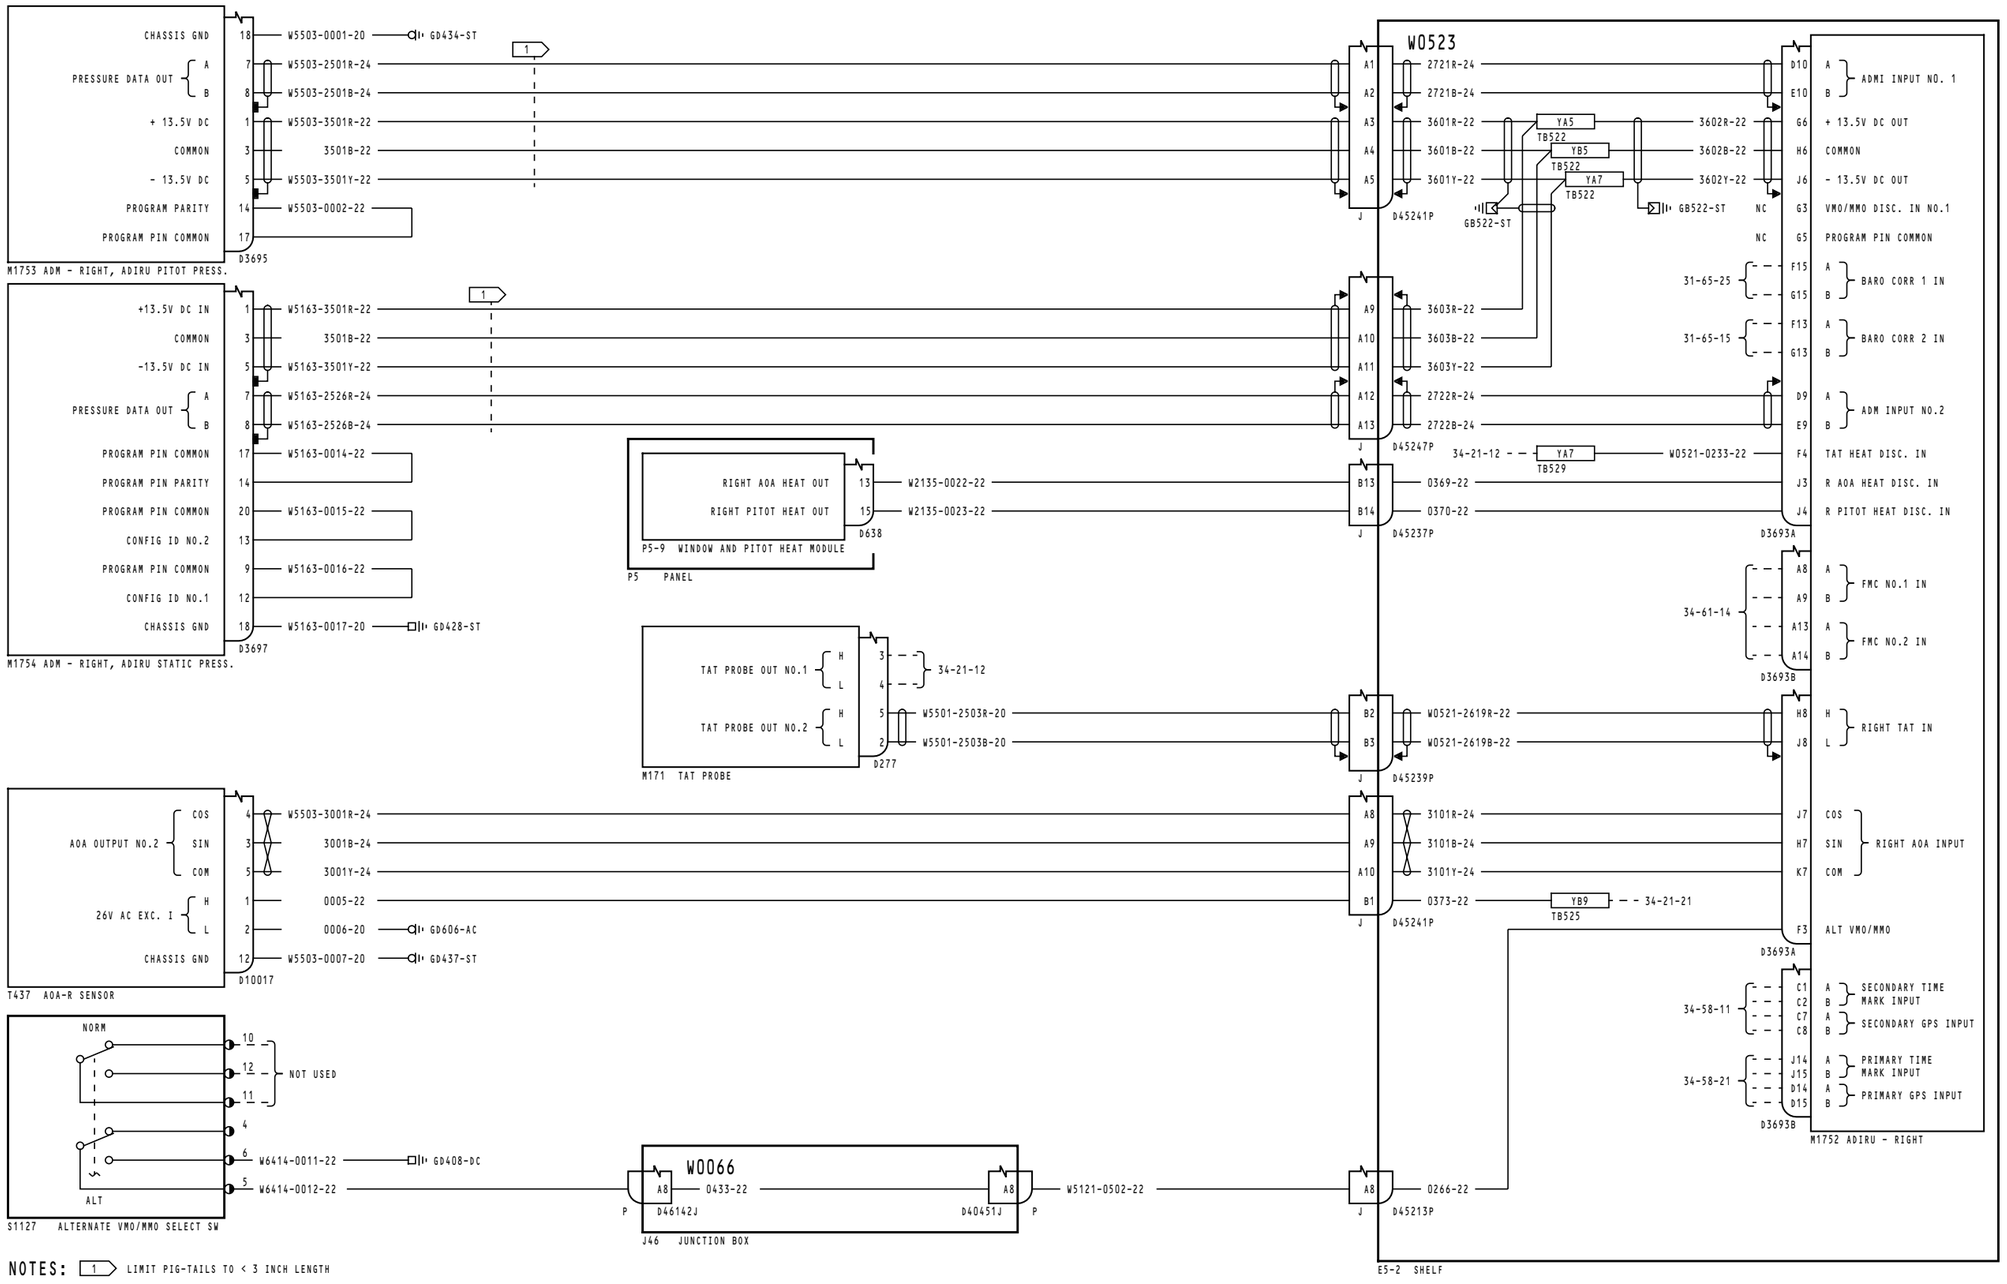

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-21-22

Page 1

Nov 14/2025

737-8 WIRING DIAGRAM MANUAL

289

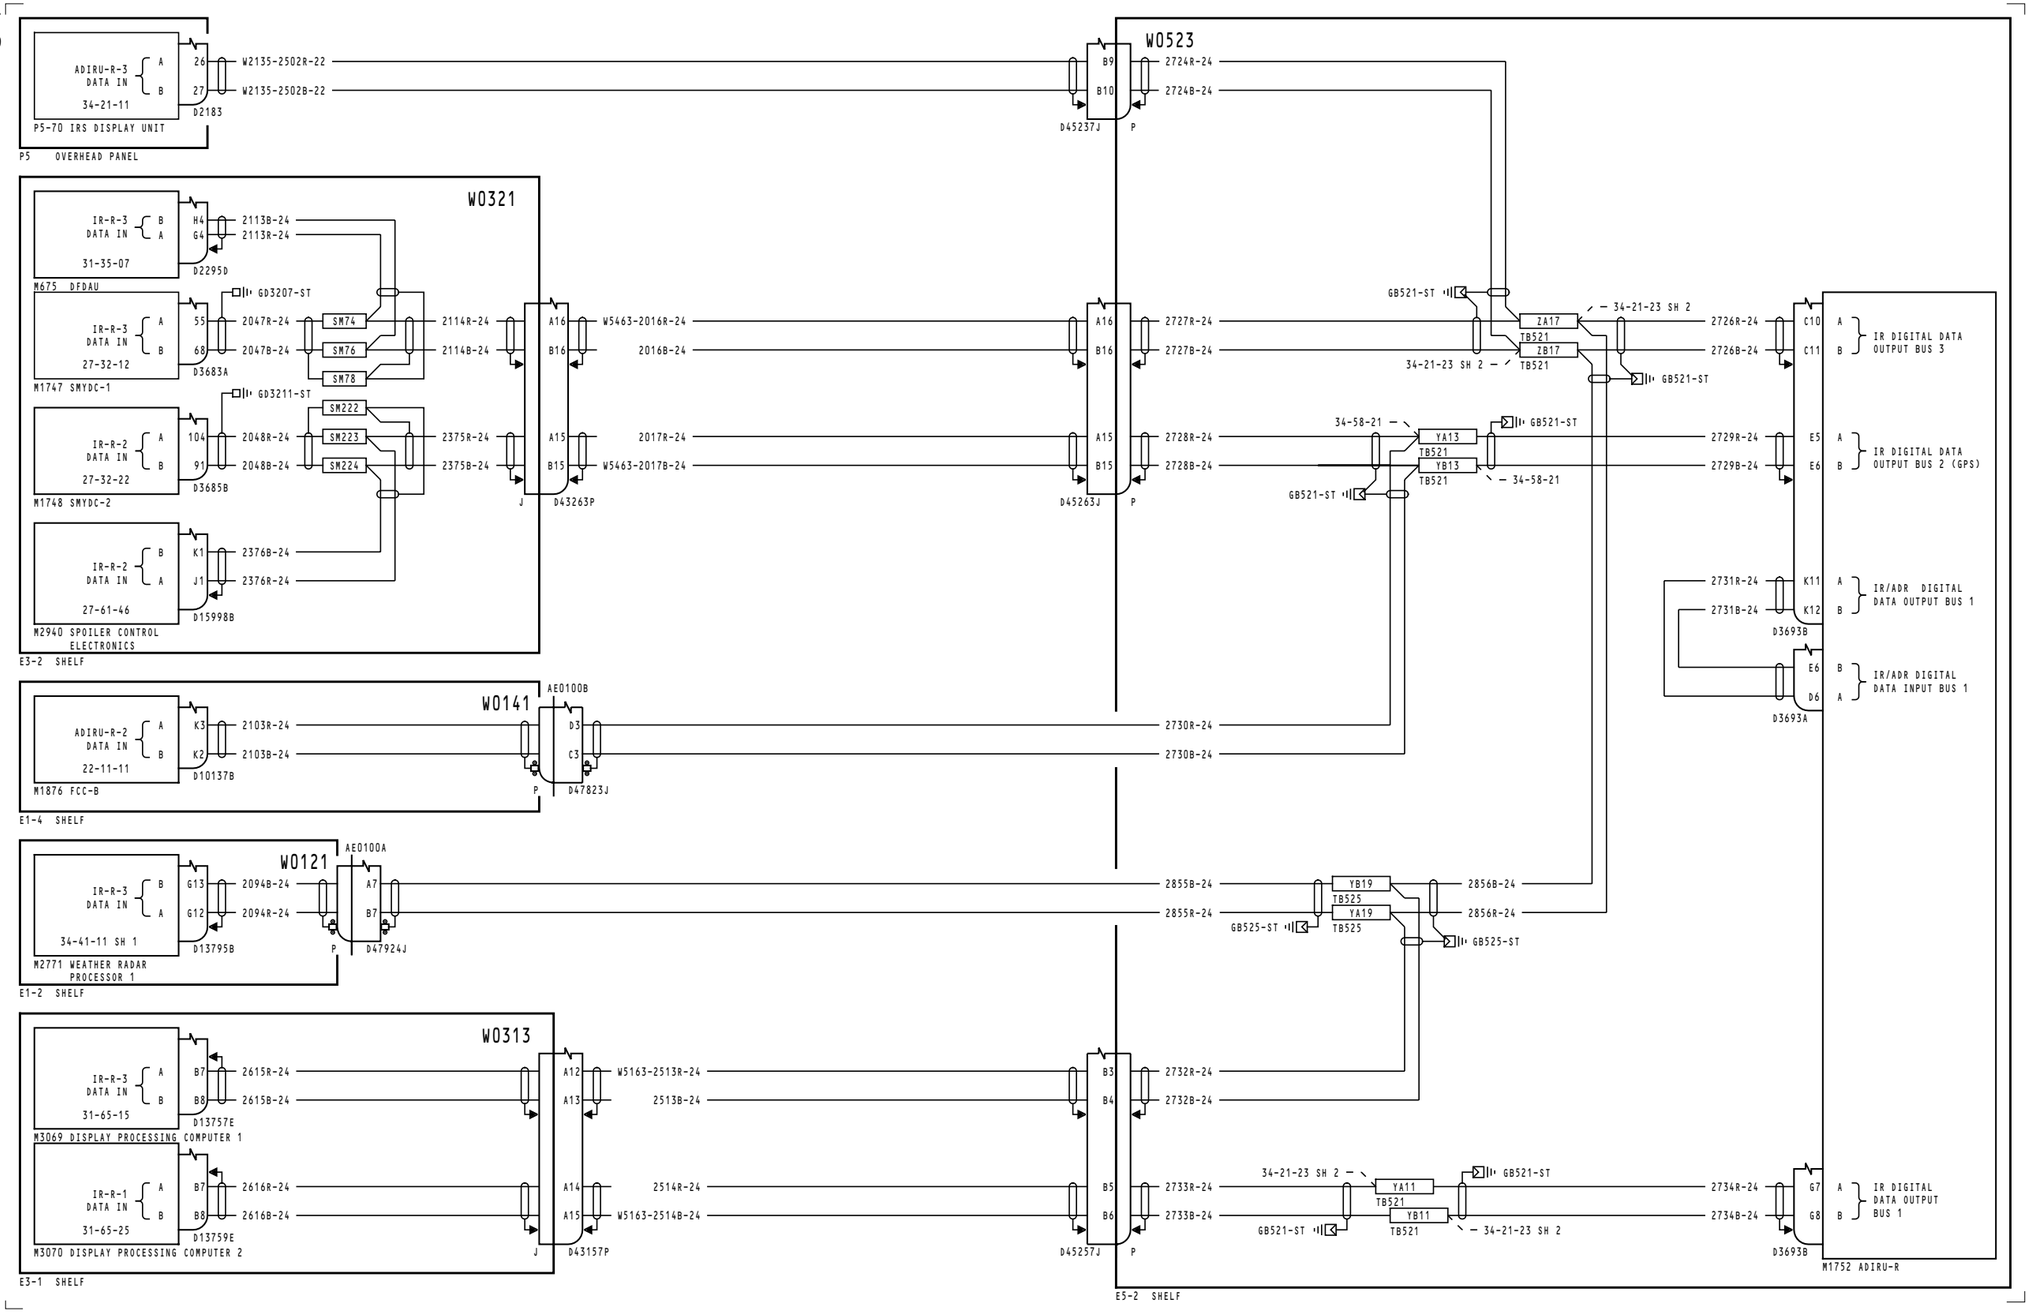

ALL

AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS) - RIGHT IR OUTPUTS

D280AM1215

34-21-23

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-21-23

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A

228

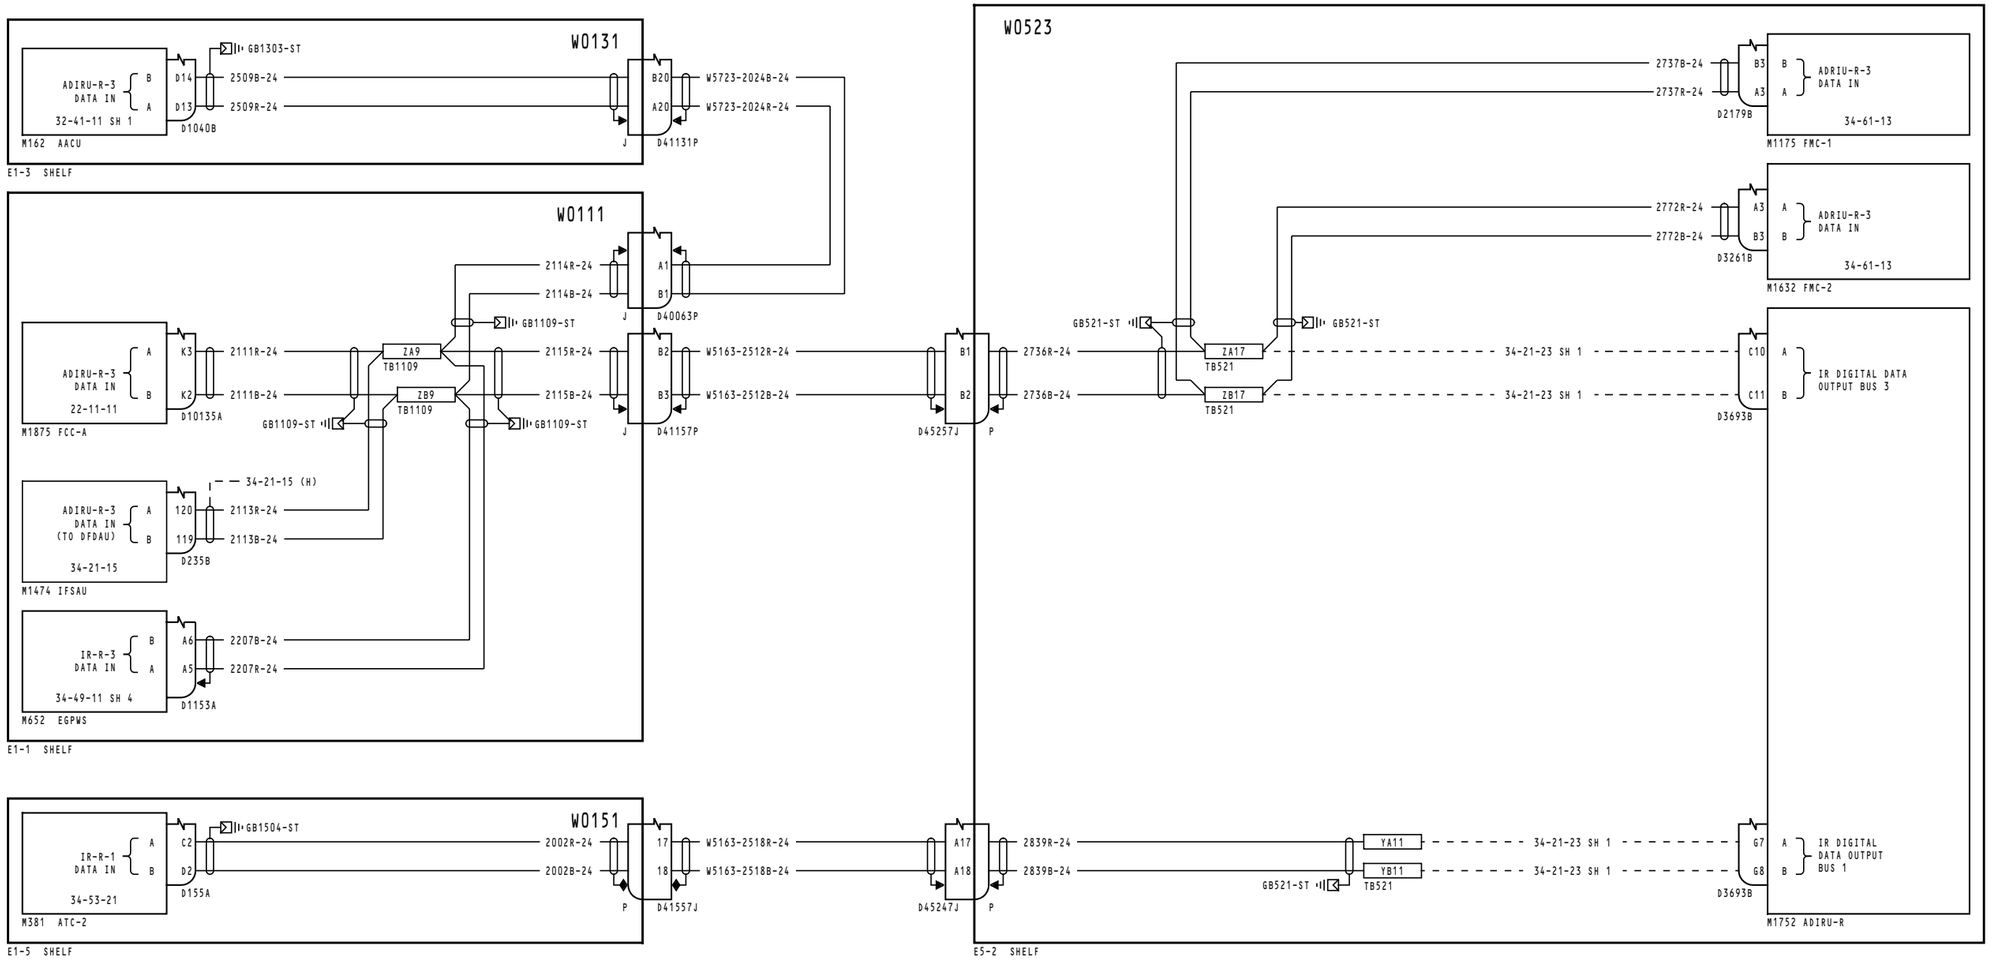


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-21-23

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

133

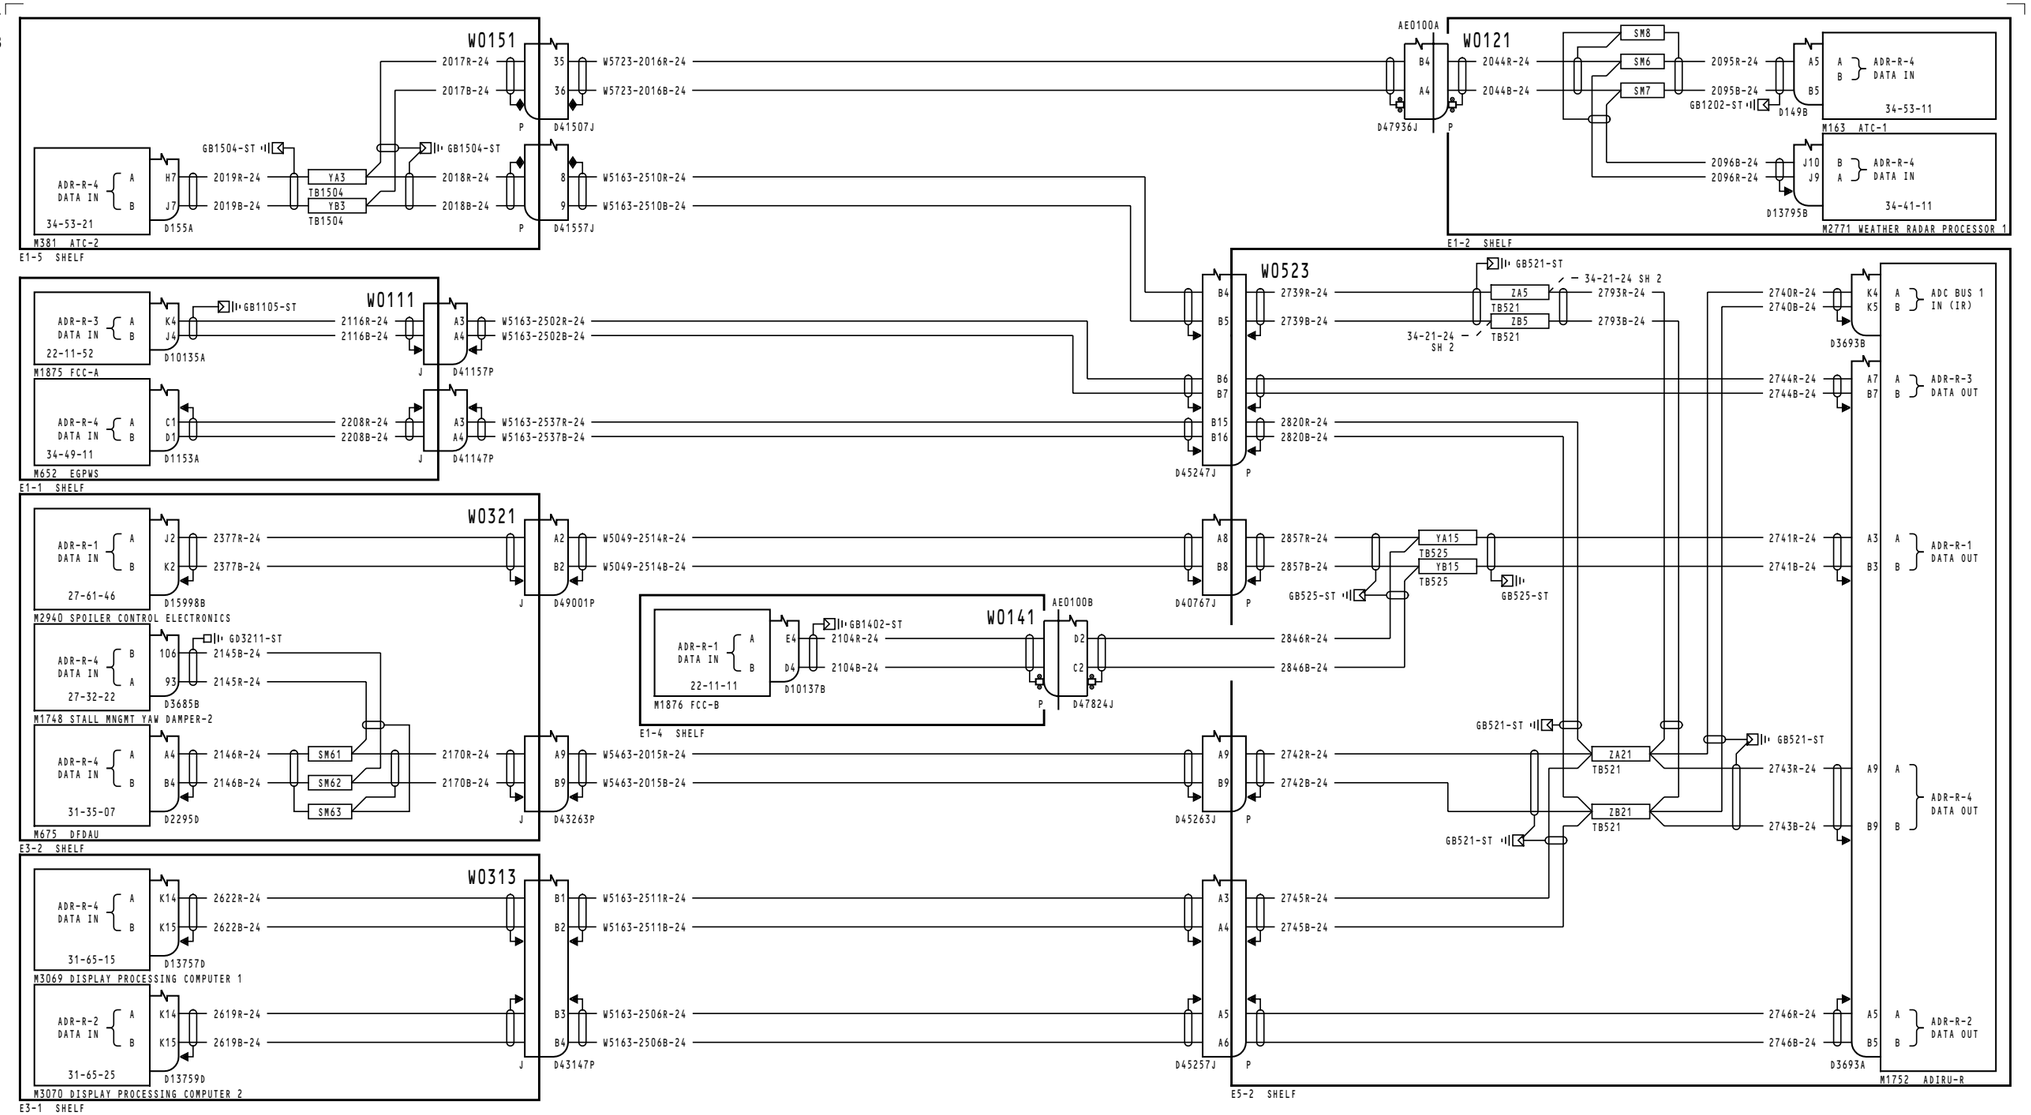


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-21-24

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

168

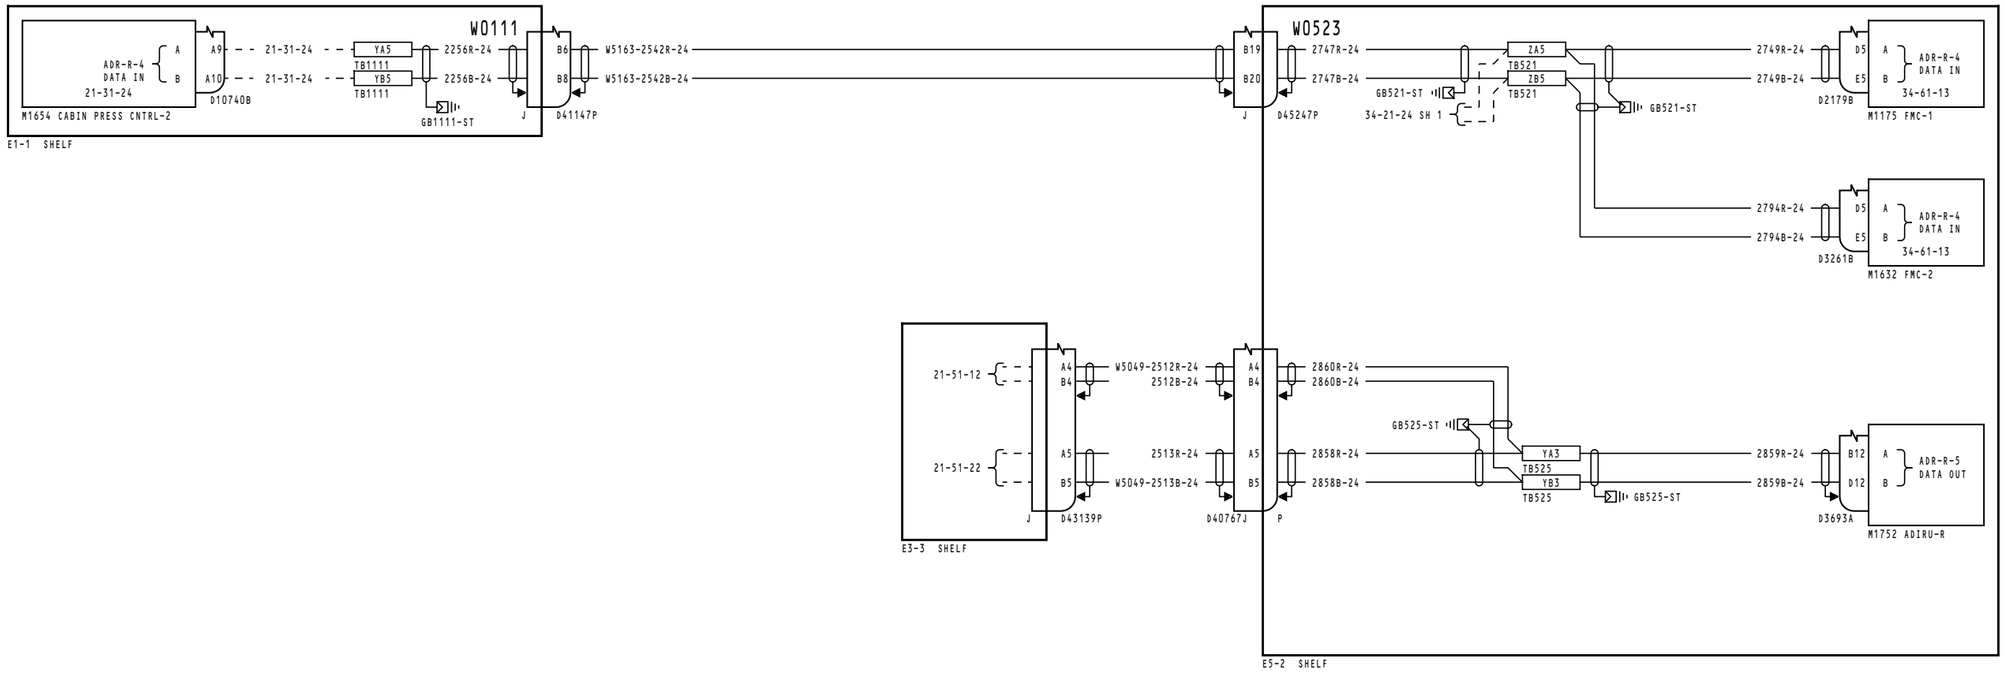


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-21-24

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

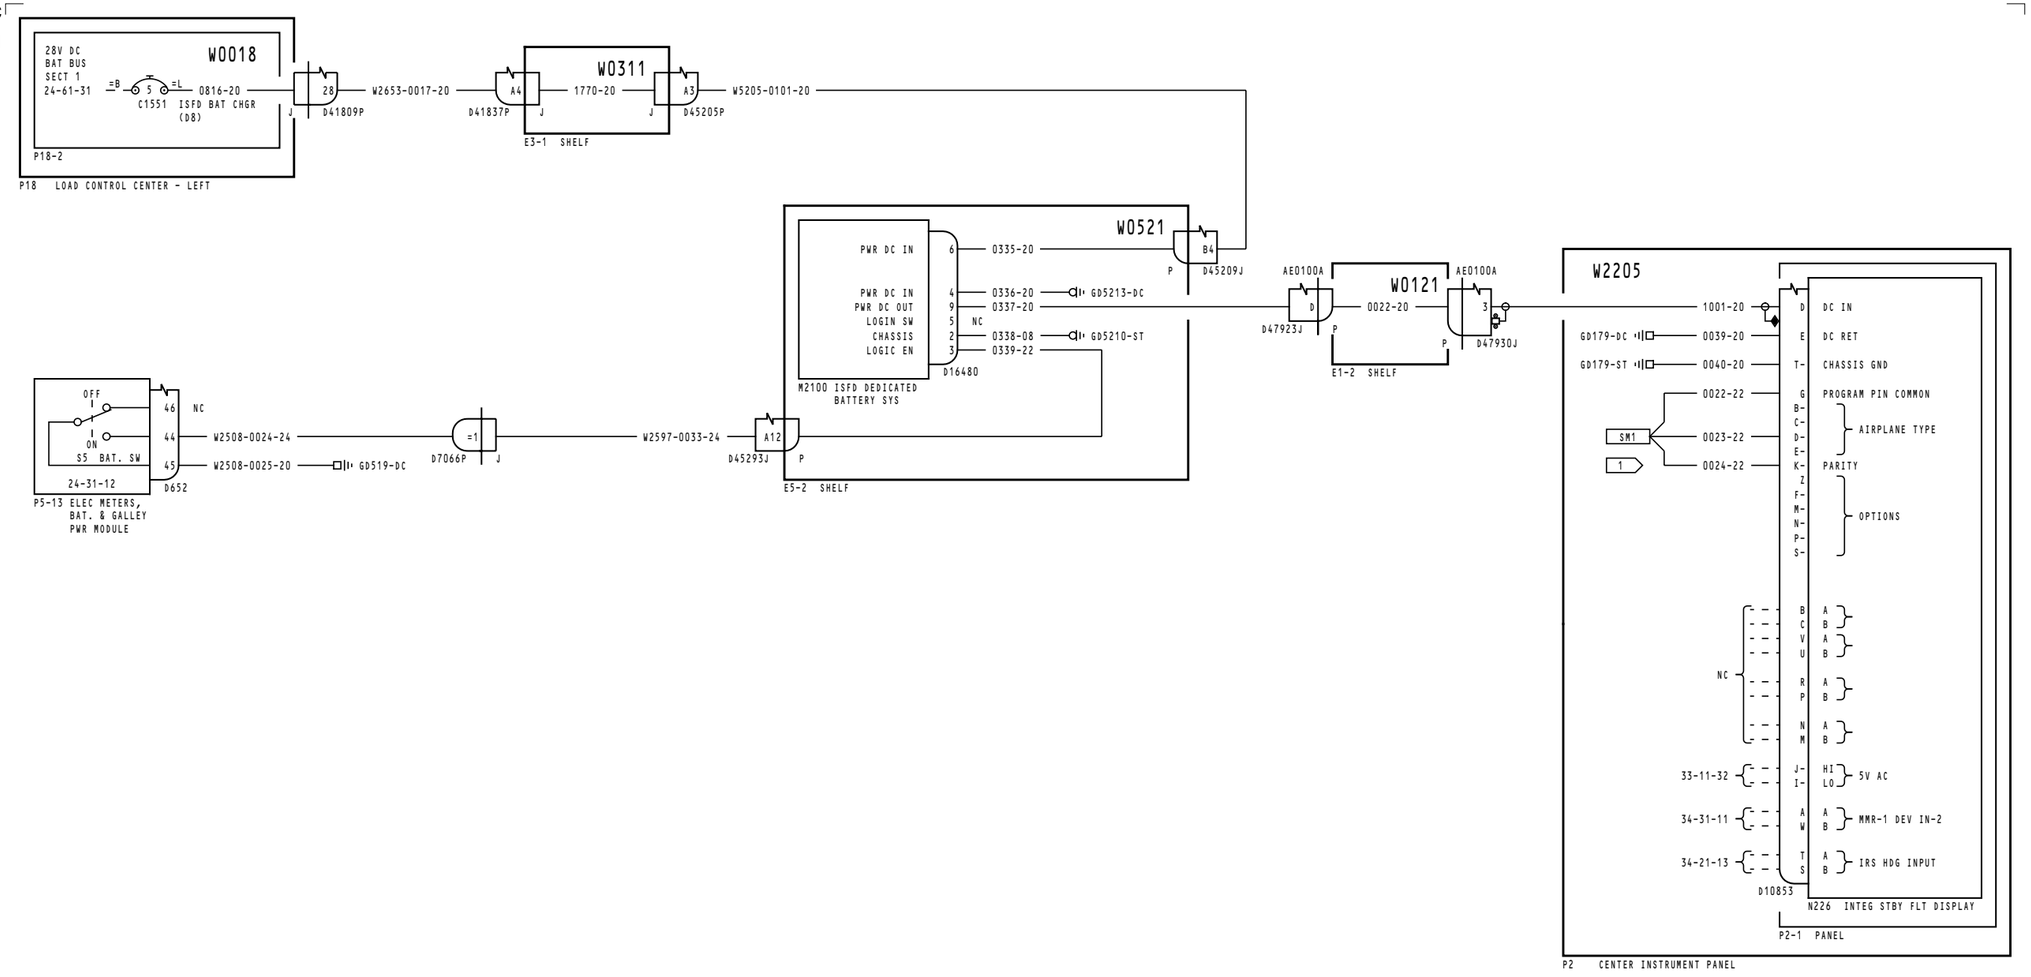

NOTES:


1. THE LENGTH OF EACH PROGRAM PIN WIRE SHALL NOT EXCEED 7 INCHES.

34-24-15


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

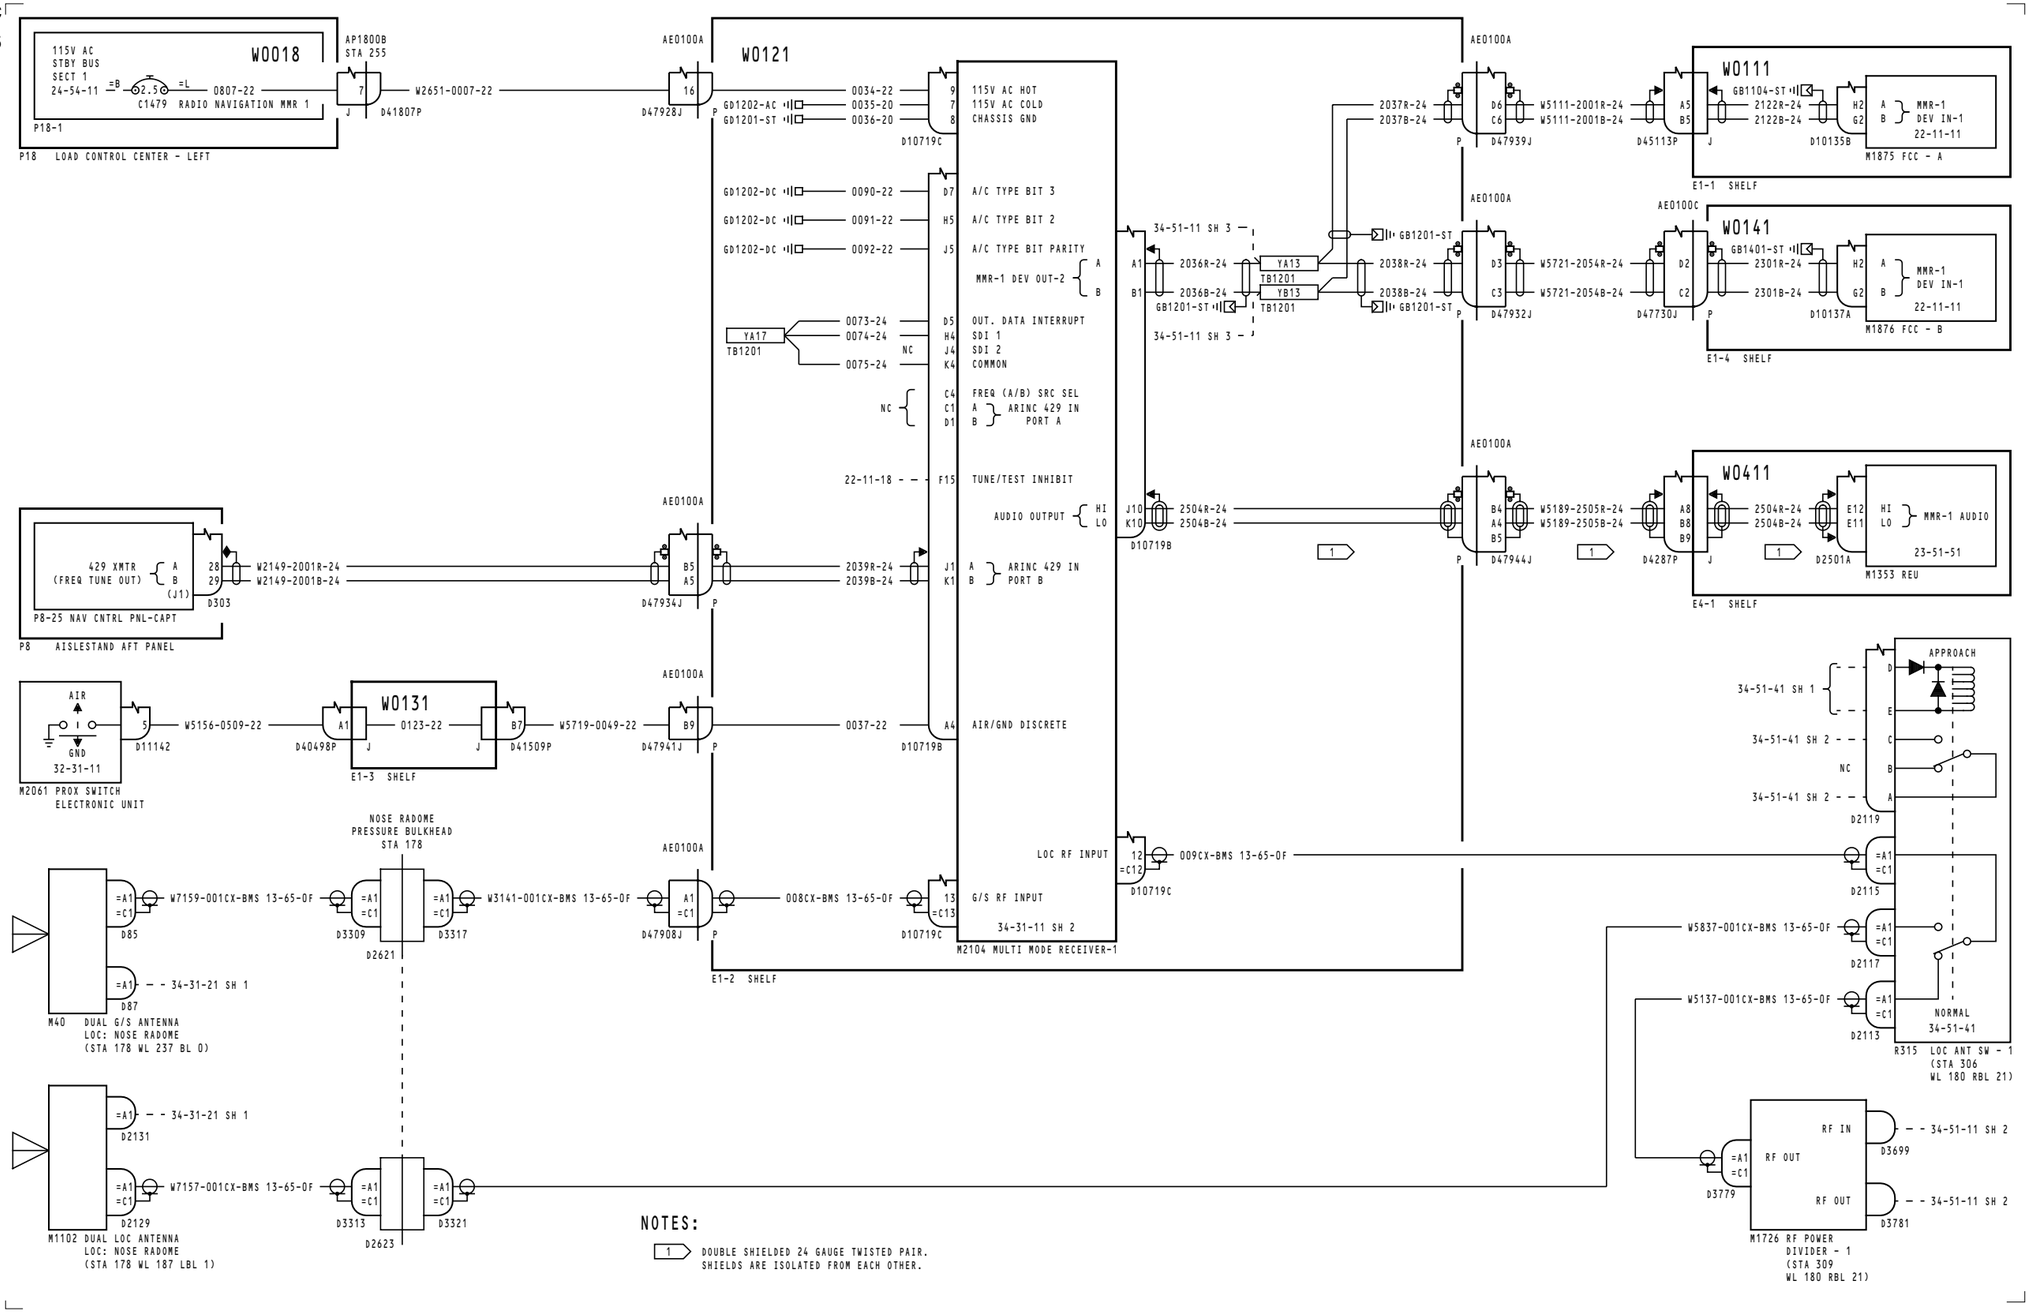

ECCN 9E991 BOEING PROPRIETARY - See title page for details

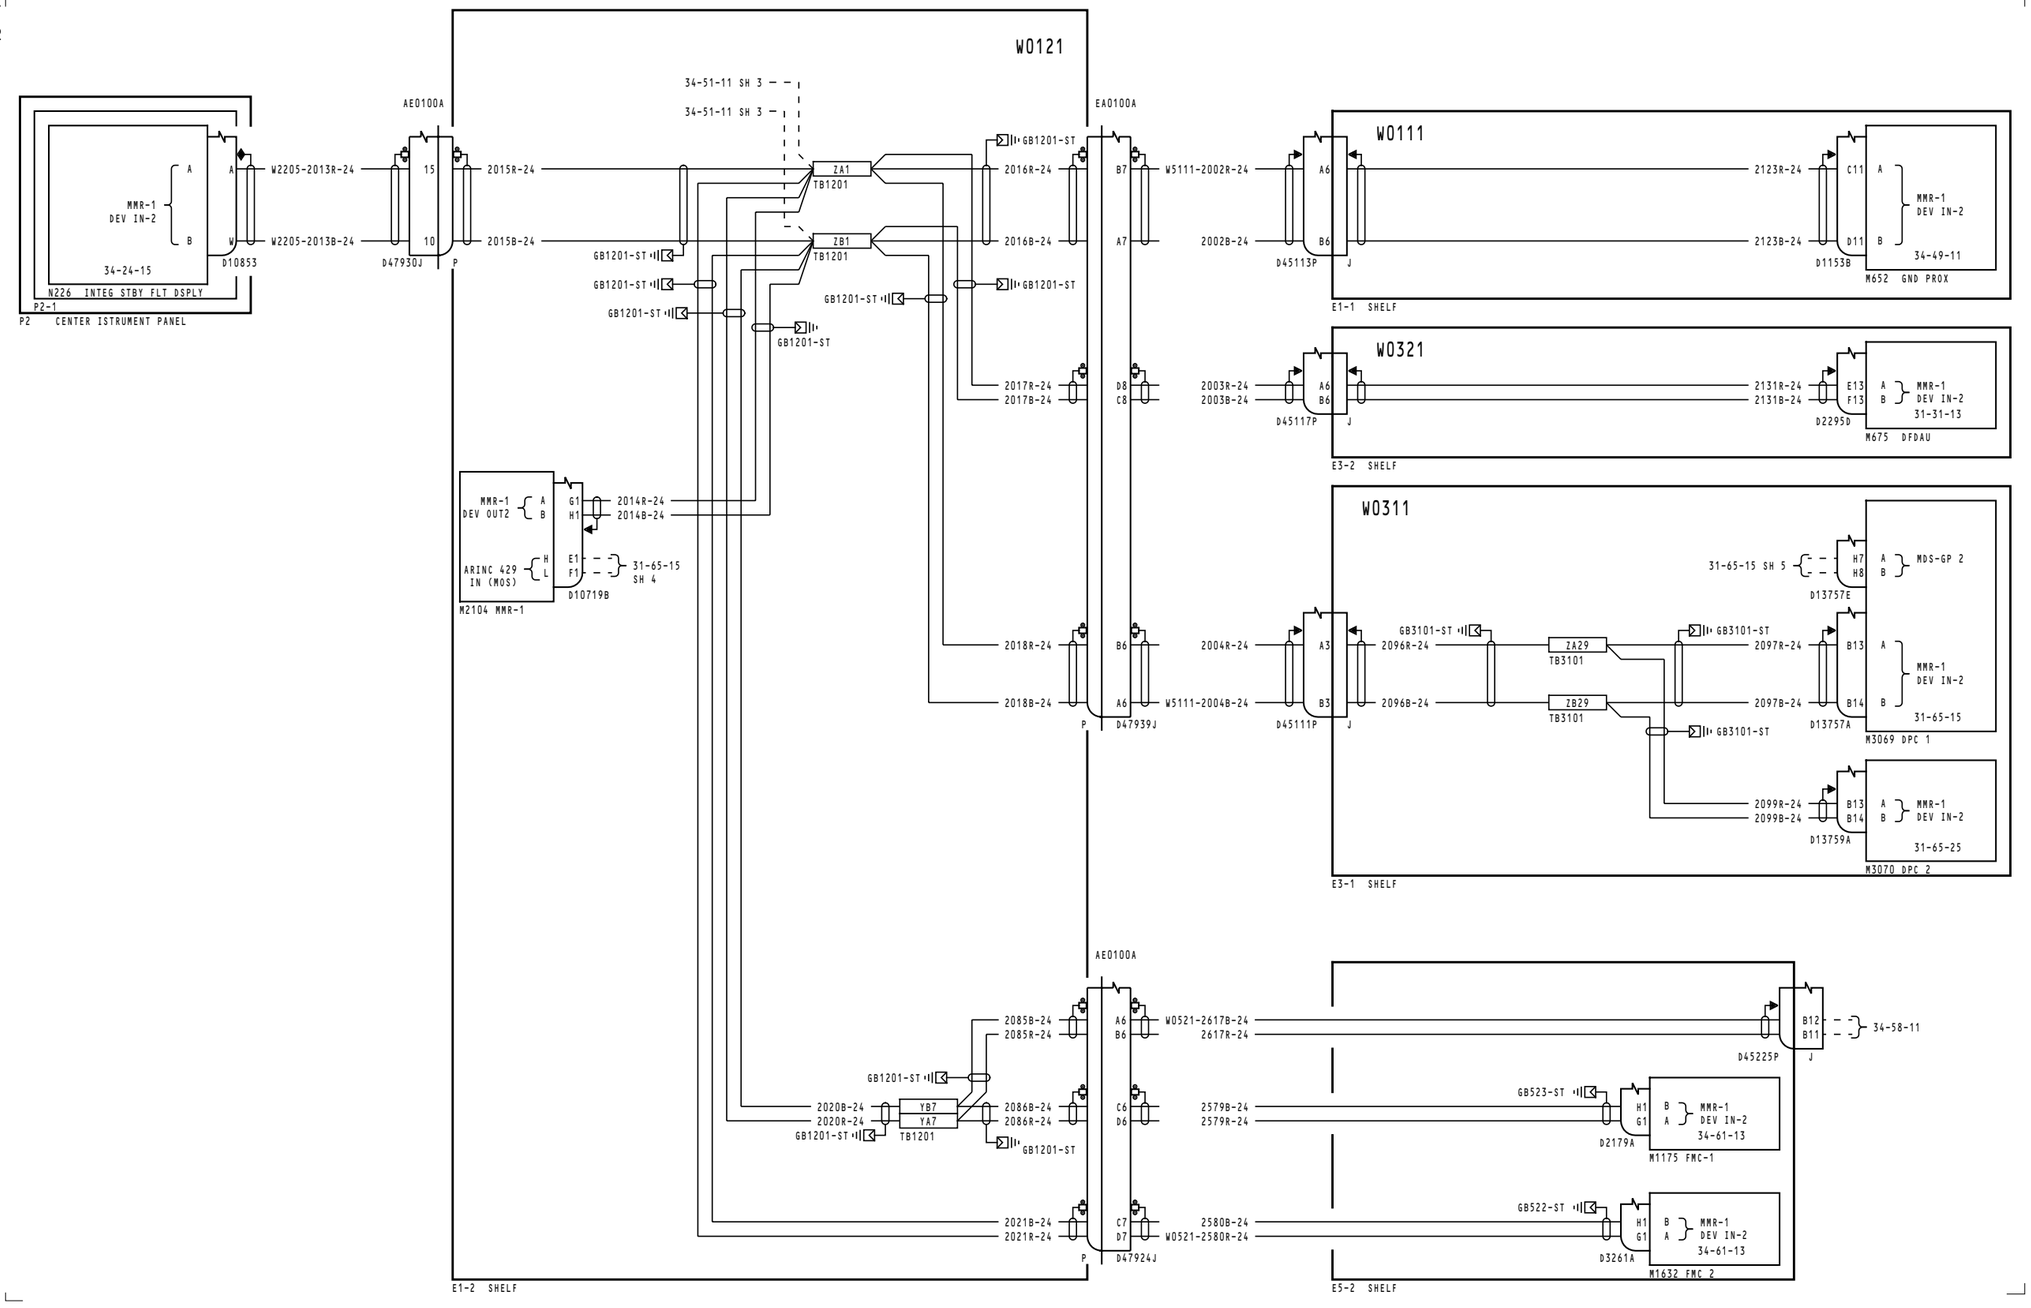


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-31-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
49

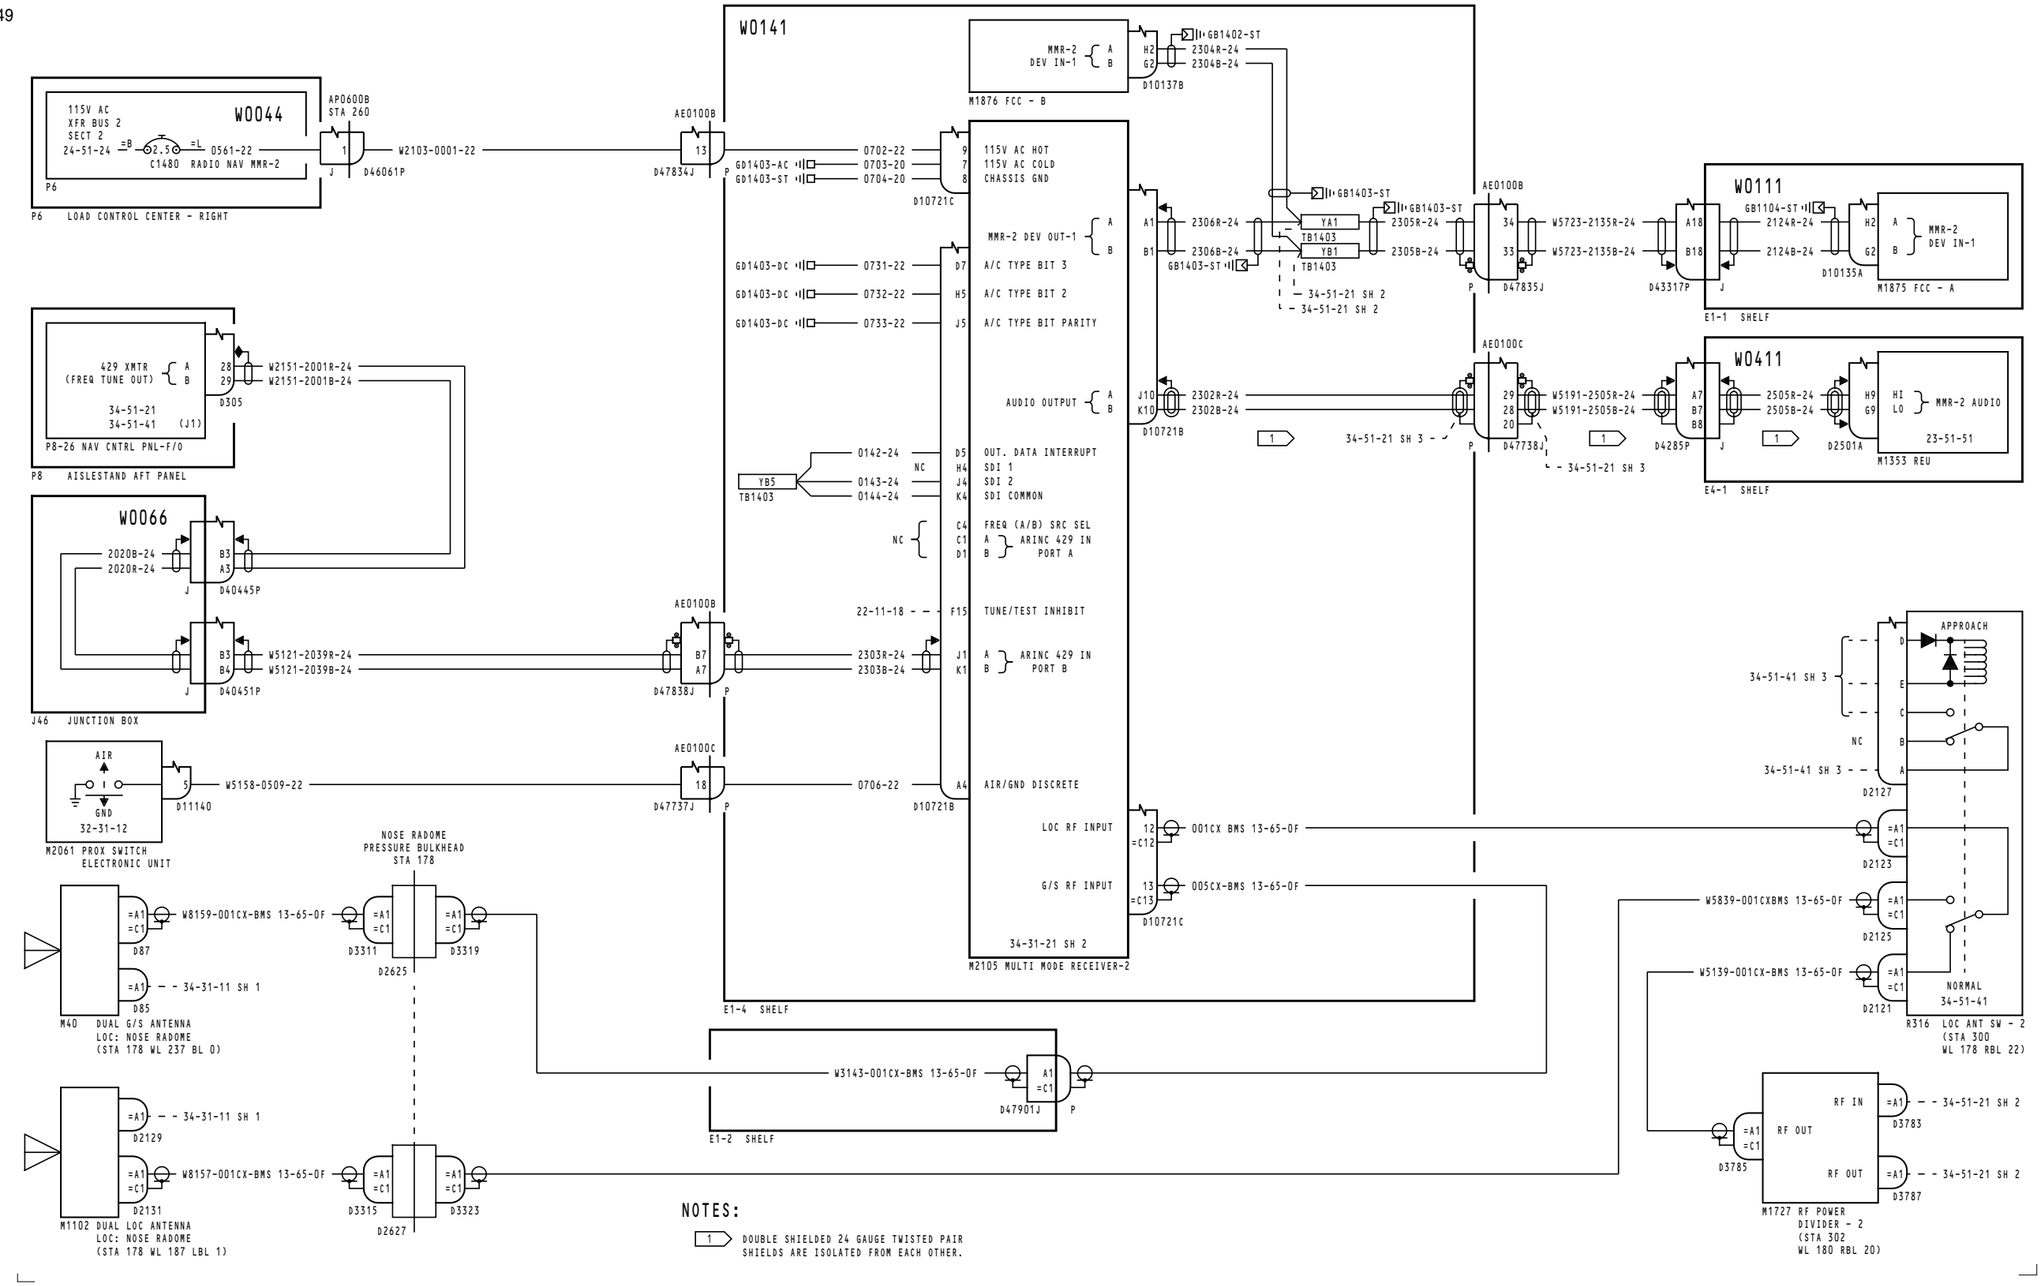

ALL	MMR - ILS NO. 2
	D280AM1215

34-31-21


Page 1
Sheet 1
May 15/2024

34-31-21

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

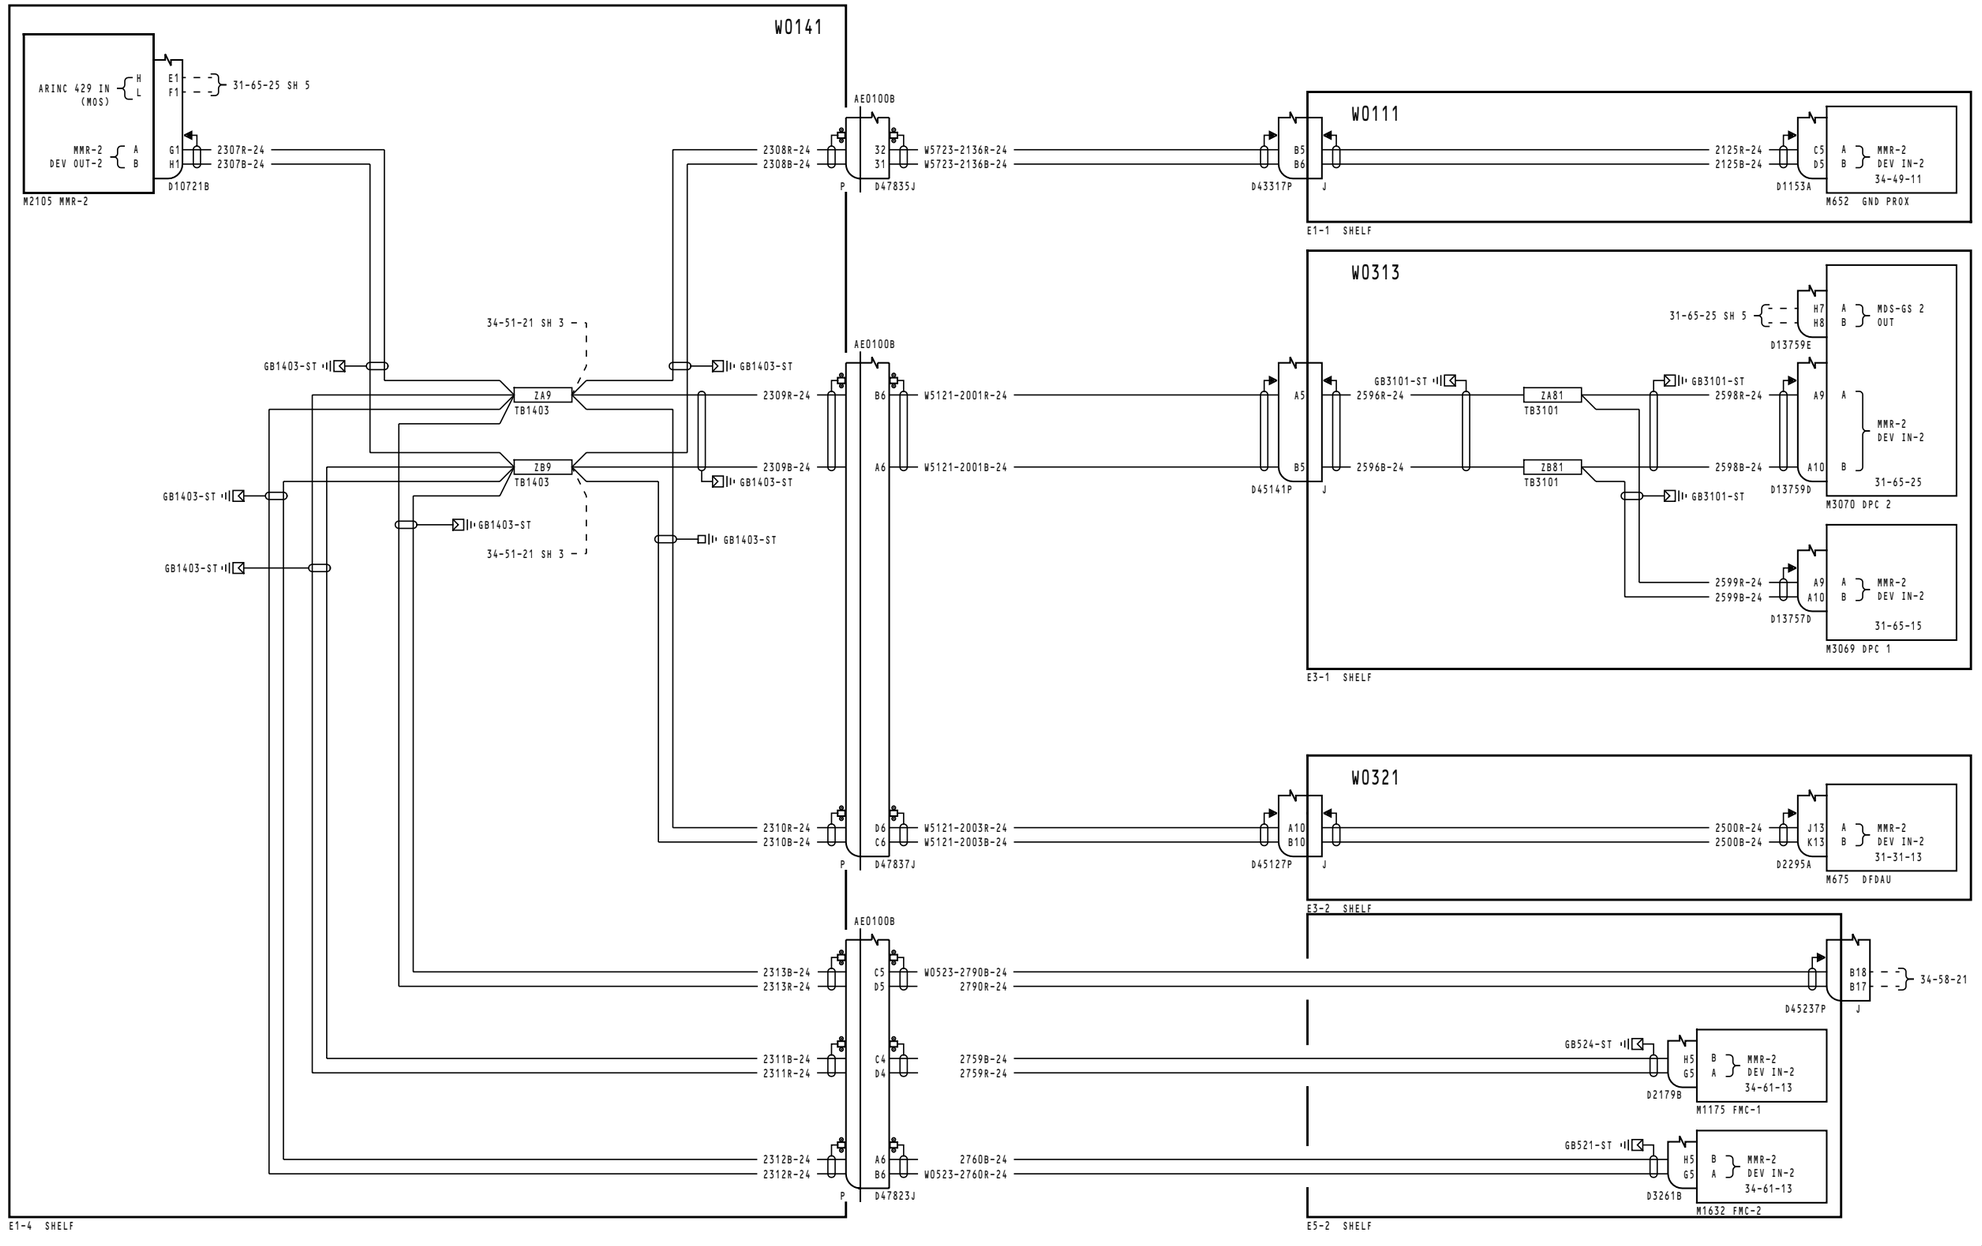


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-31-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

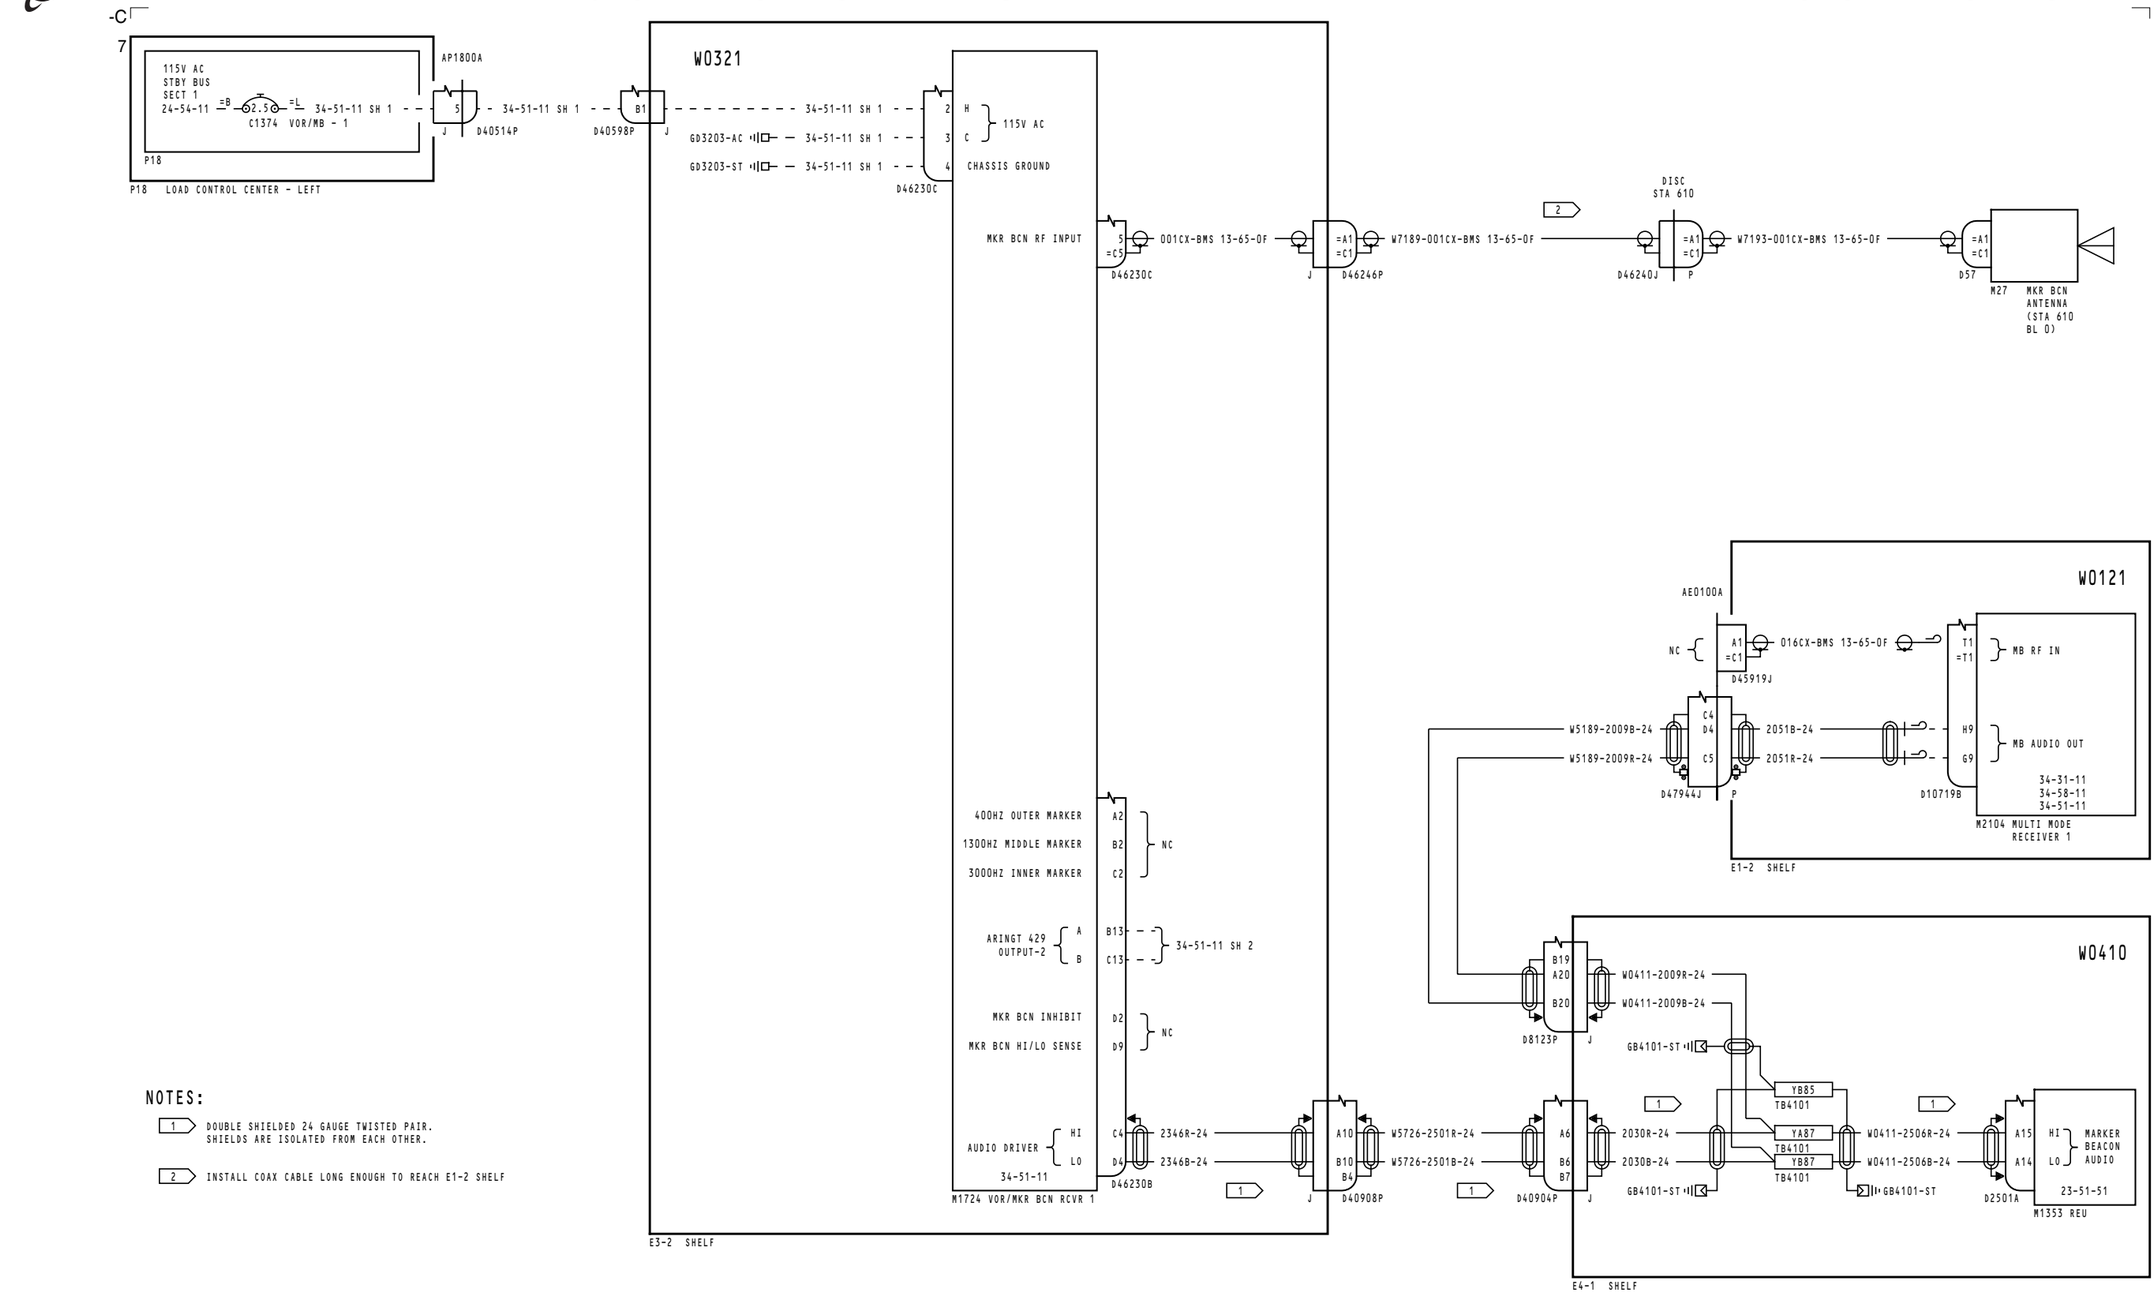

NOTES:

1. DOUBLE SHIELDED 24 GAUGE TWISTED PAIR. SHIELDS ARE ISOLATED FROM EACH OTHER.
2. INSTALL COAX CABLE LONG ENOUGH TO REACH E1-2 SHELF


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-32-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

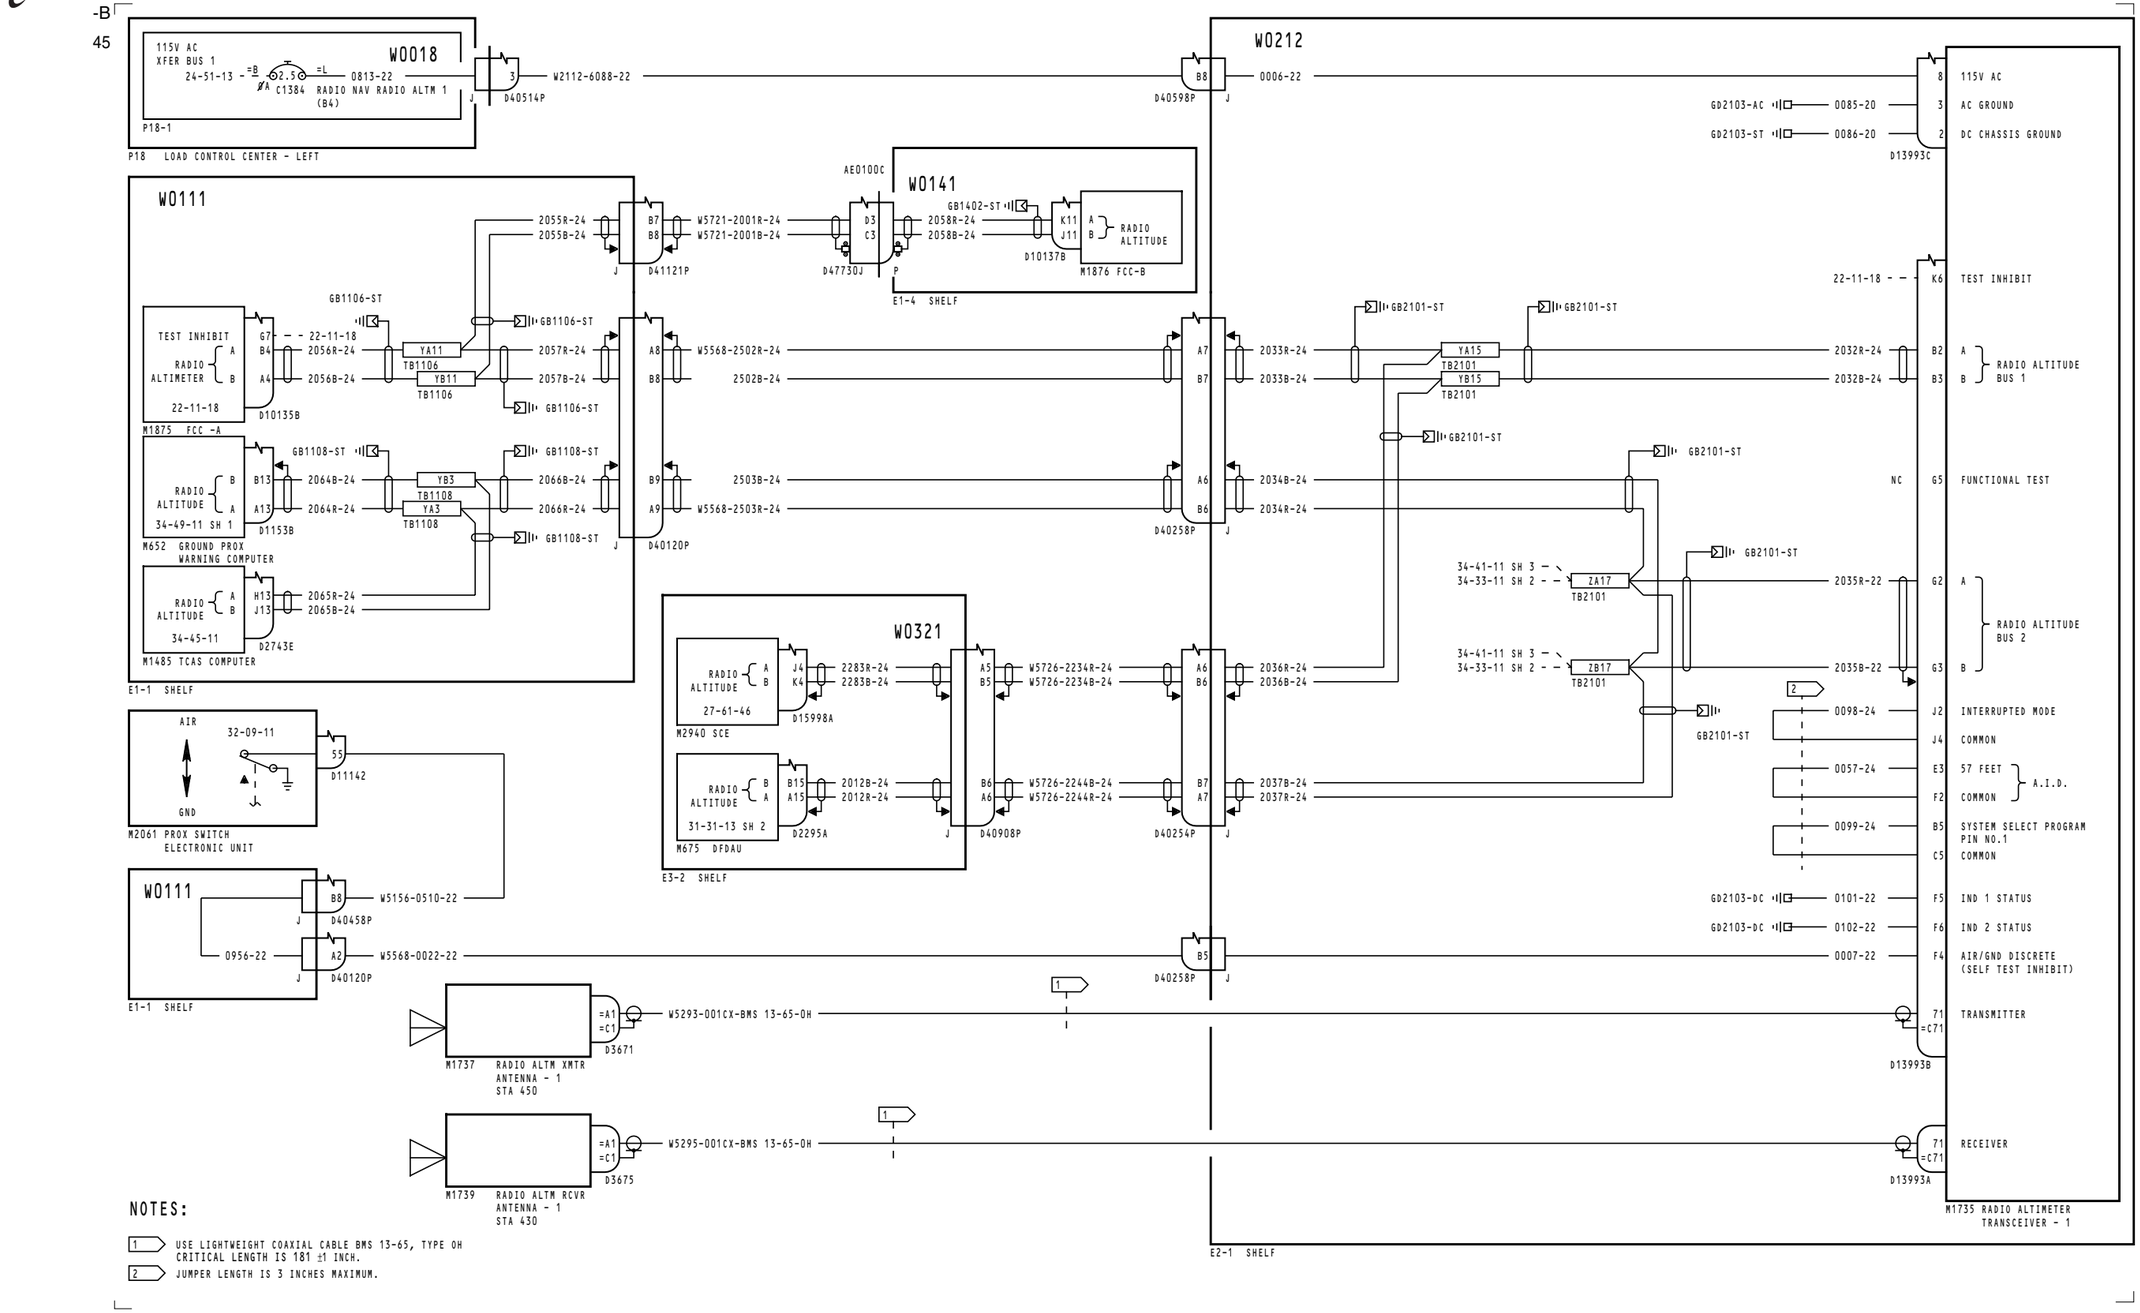


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-33-11

Page 1
Sheet 1
Sep 15/2025

737-8 WIRING DIAGRAM MANUAL

-A
3

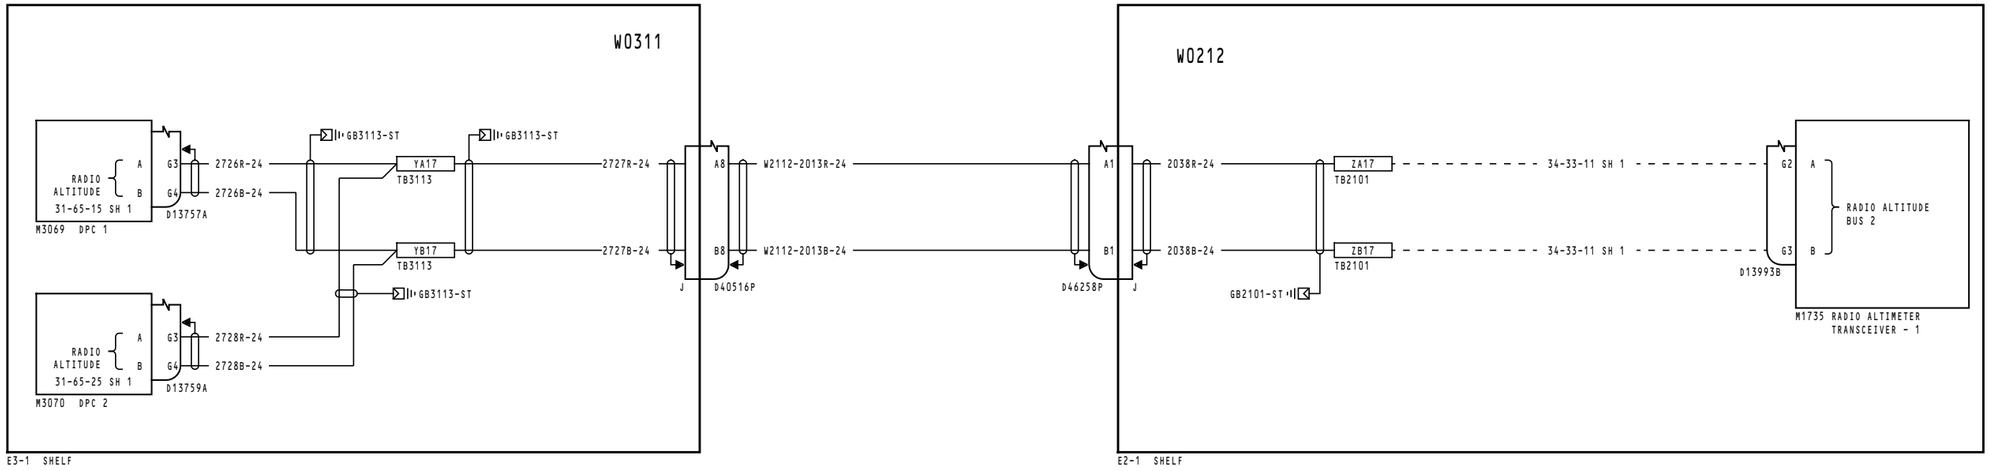


34-33-11

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
48

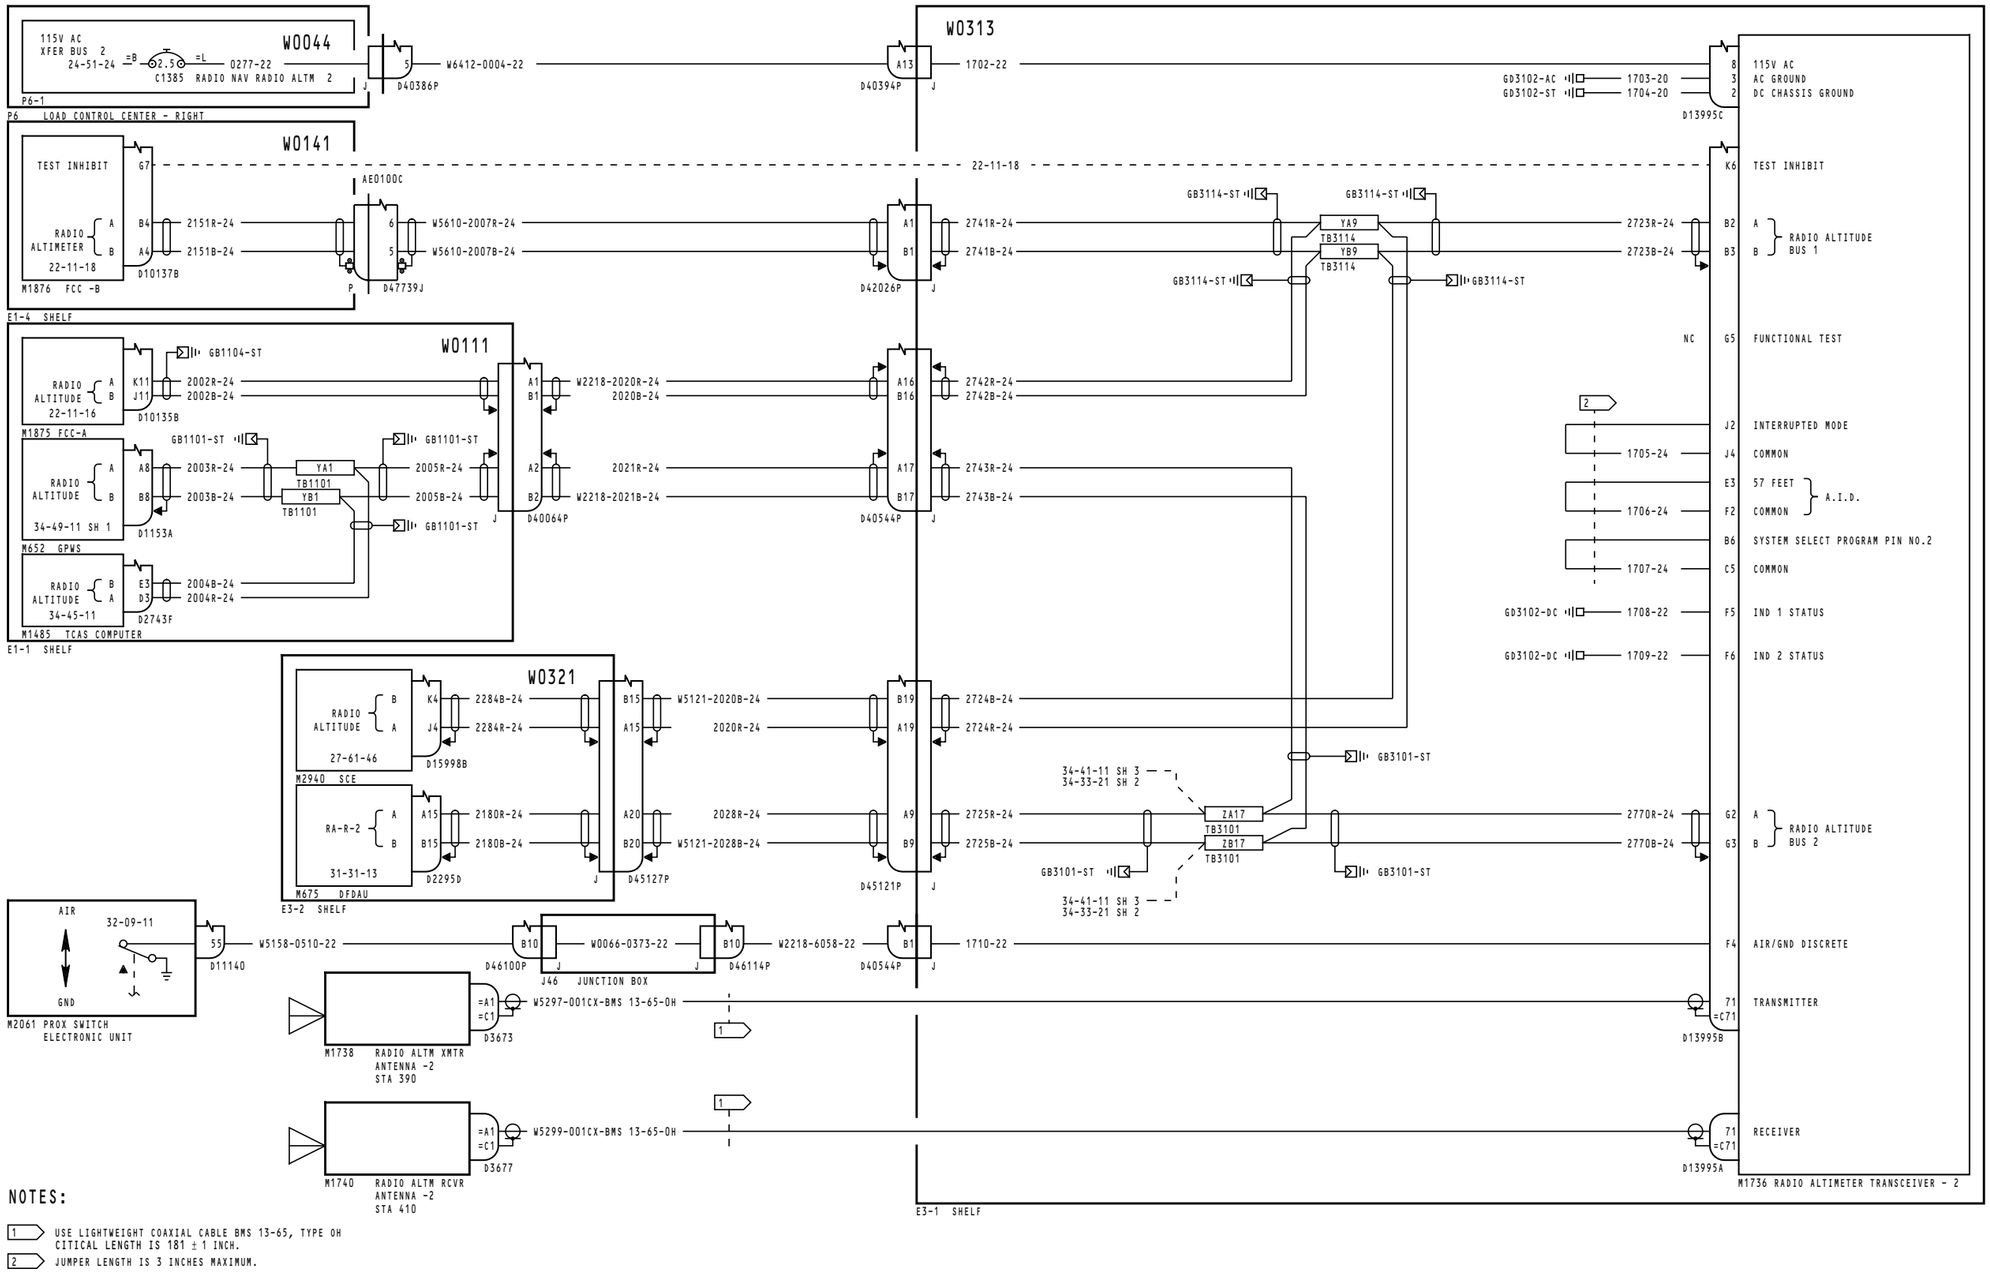

NOTES:

1. USE LIGHTWEIGHT COAXIAL CABLE BMS 13-65, TYPE OH CITICAL LENGTH IS 181 ± 1 INCH.
2. JUMPER LENGTH IS 3 INCHES MAXIMUM.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-33-21

Page 1
Sheet 1
Sep 15/2025

737-8 WIRING DIAGRAM MANUAL

-A
1

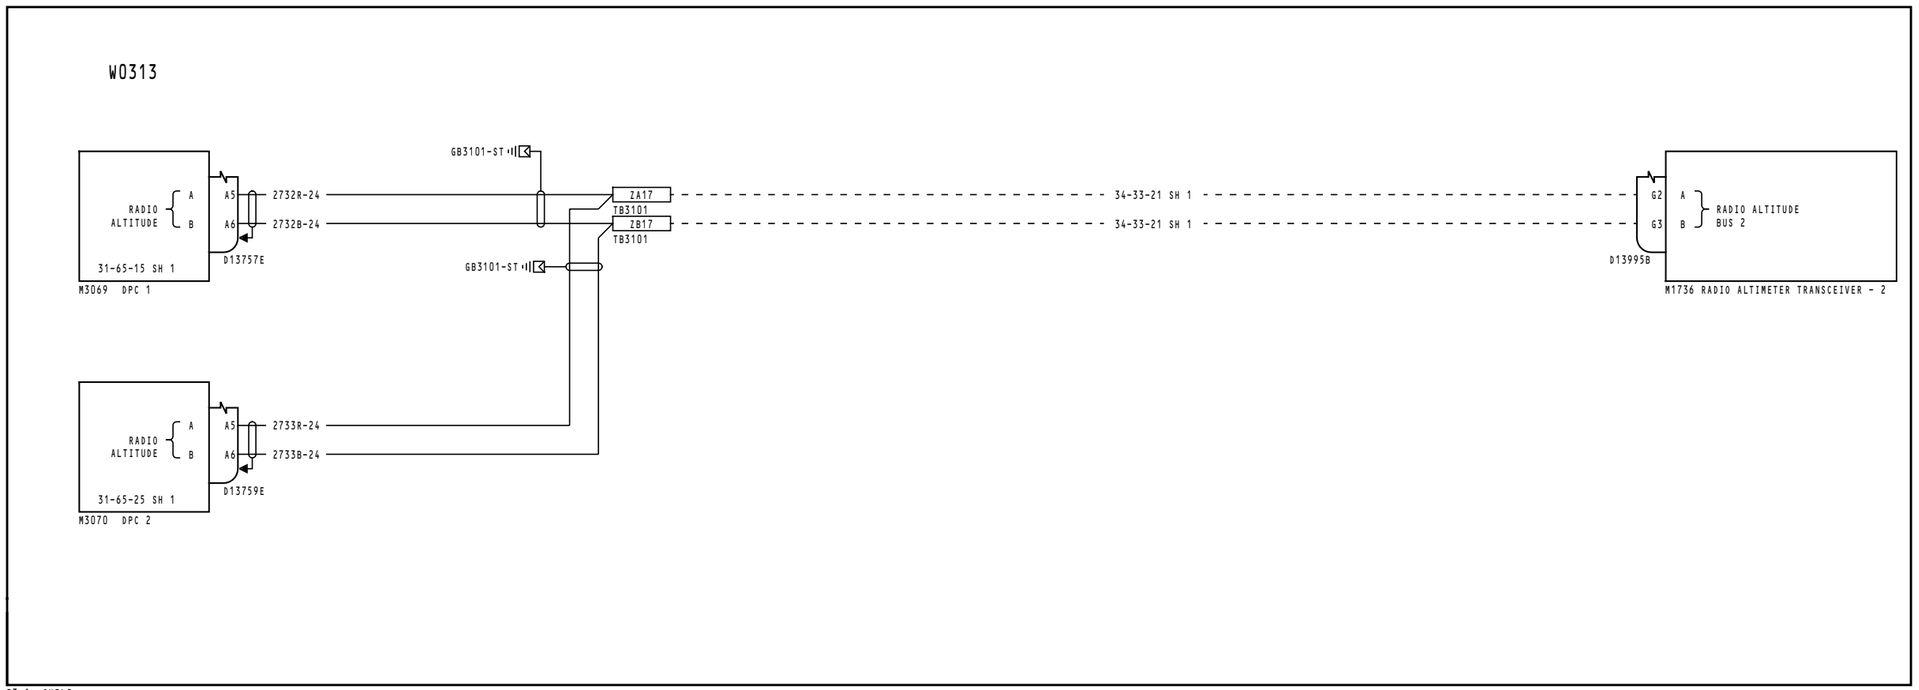


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-33-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

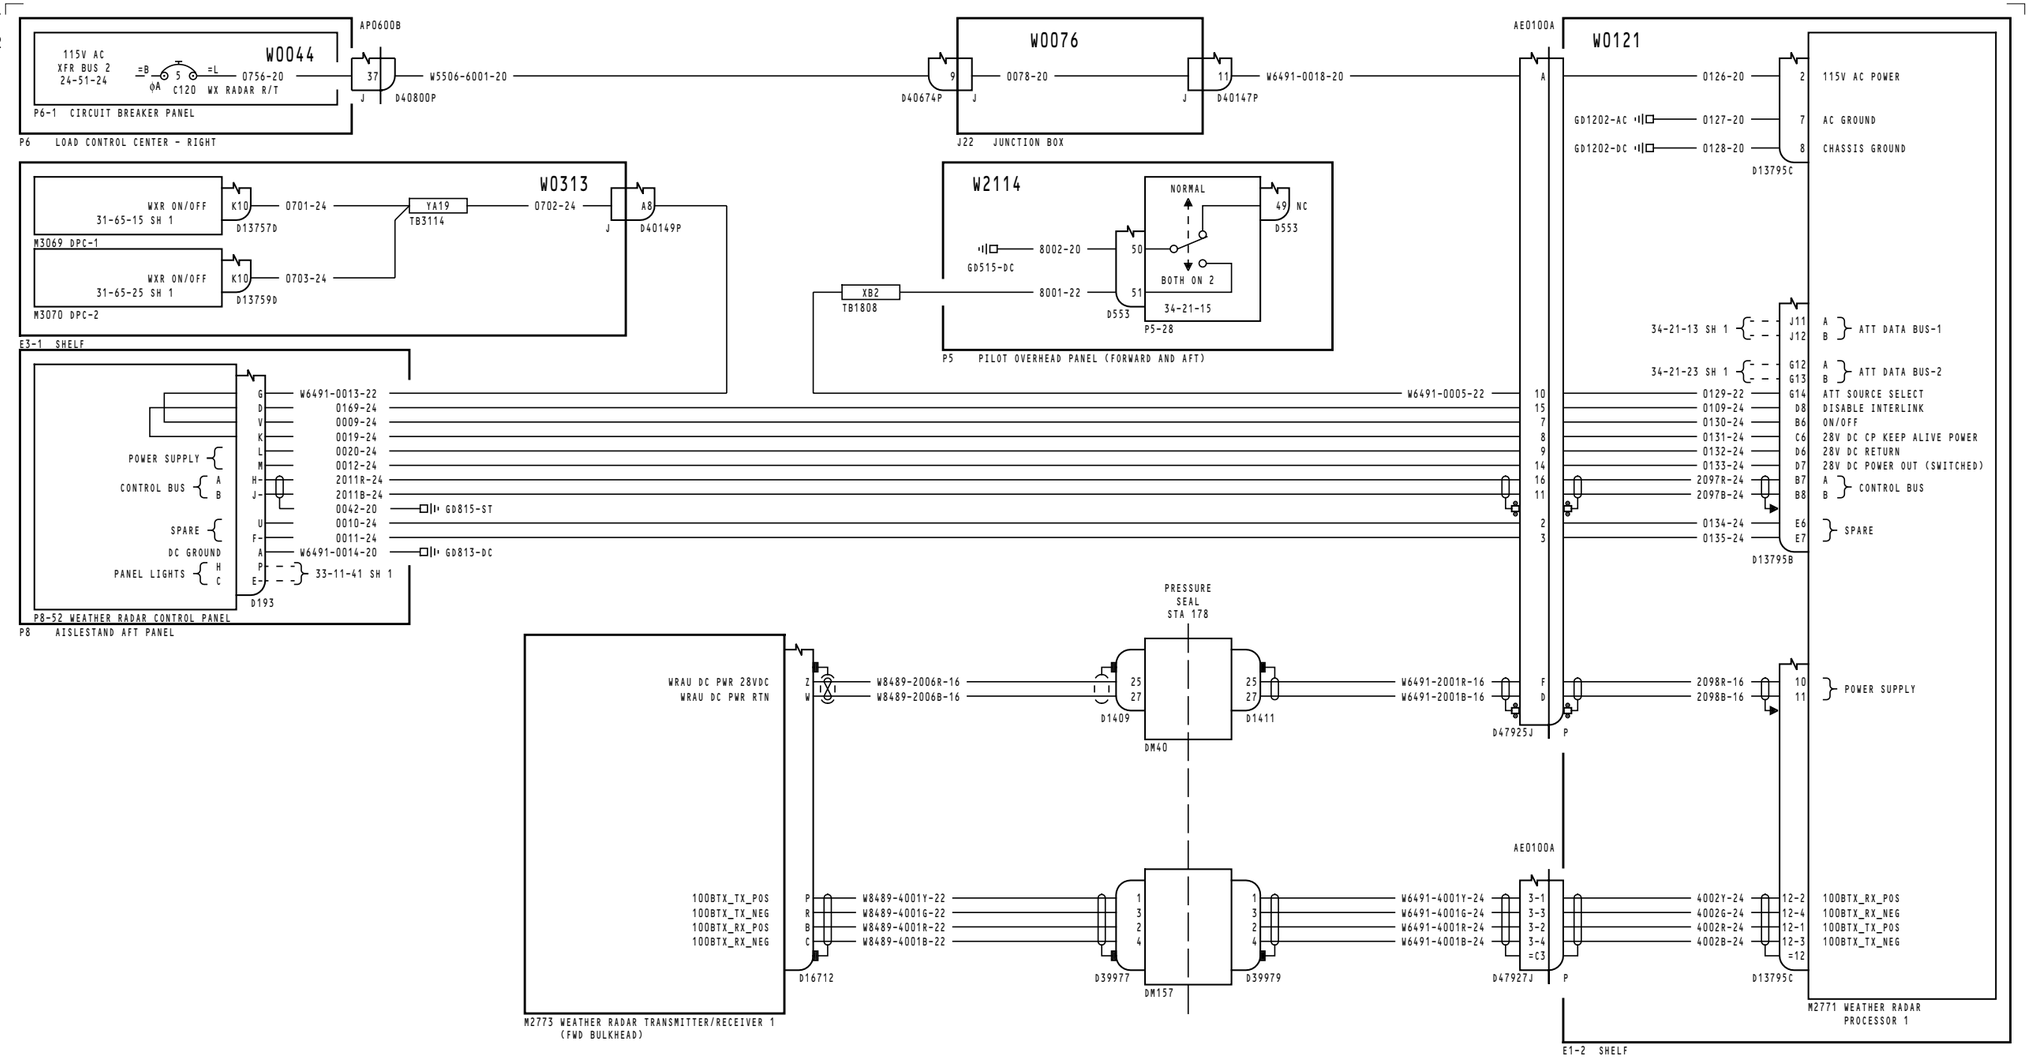

NOTES:

1. BRAID BACC3108-2E
2. 22 AWG WIRE OUTSIDE OF THE PRESSURE SEAL


34-41-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

63

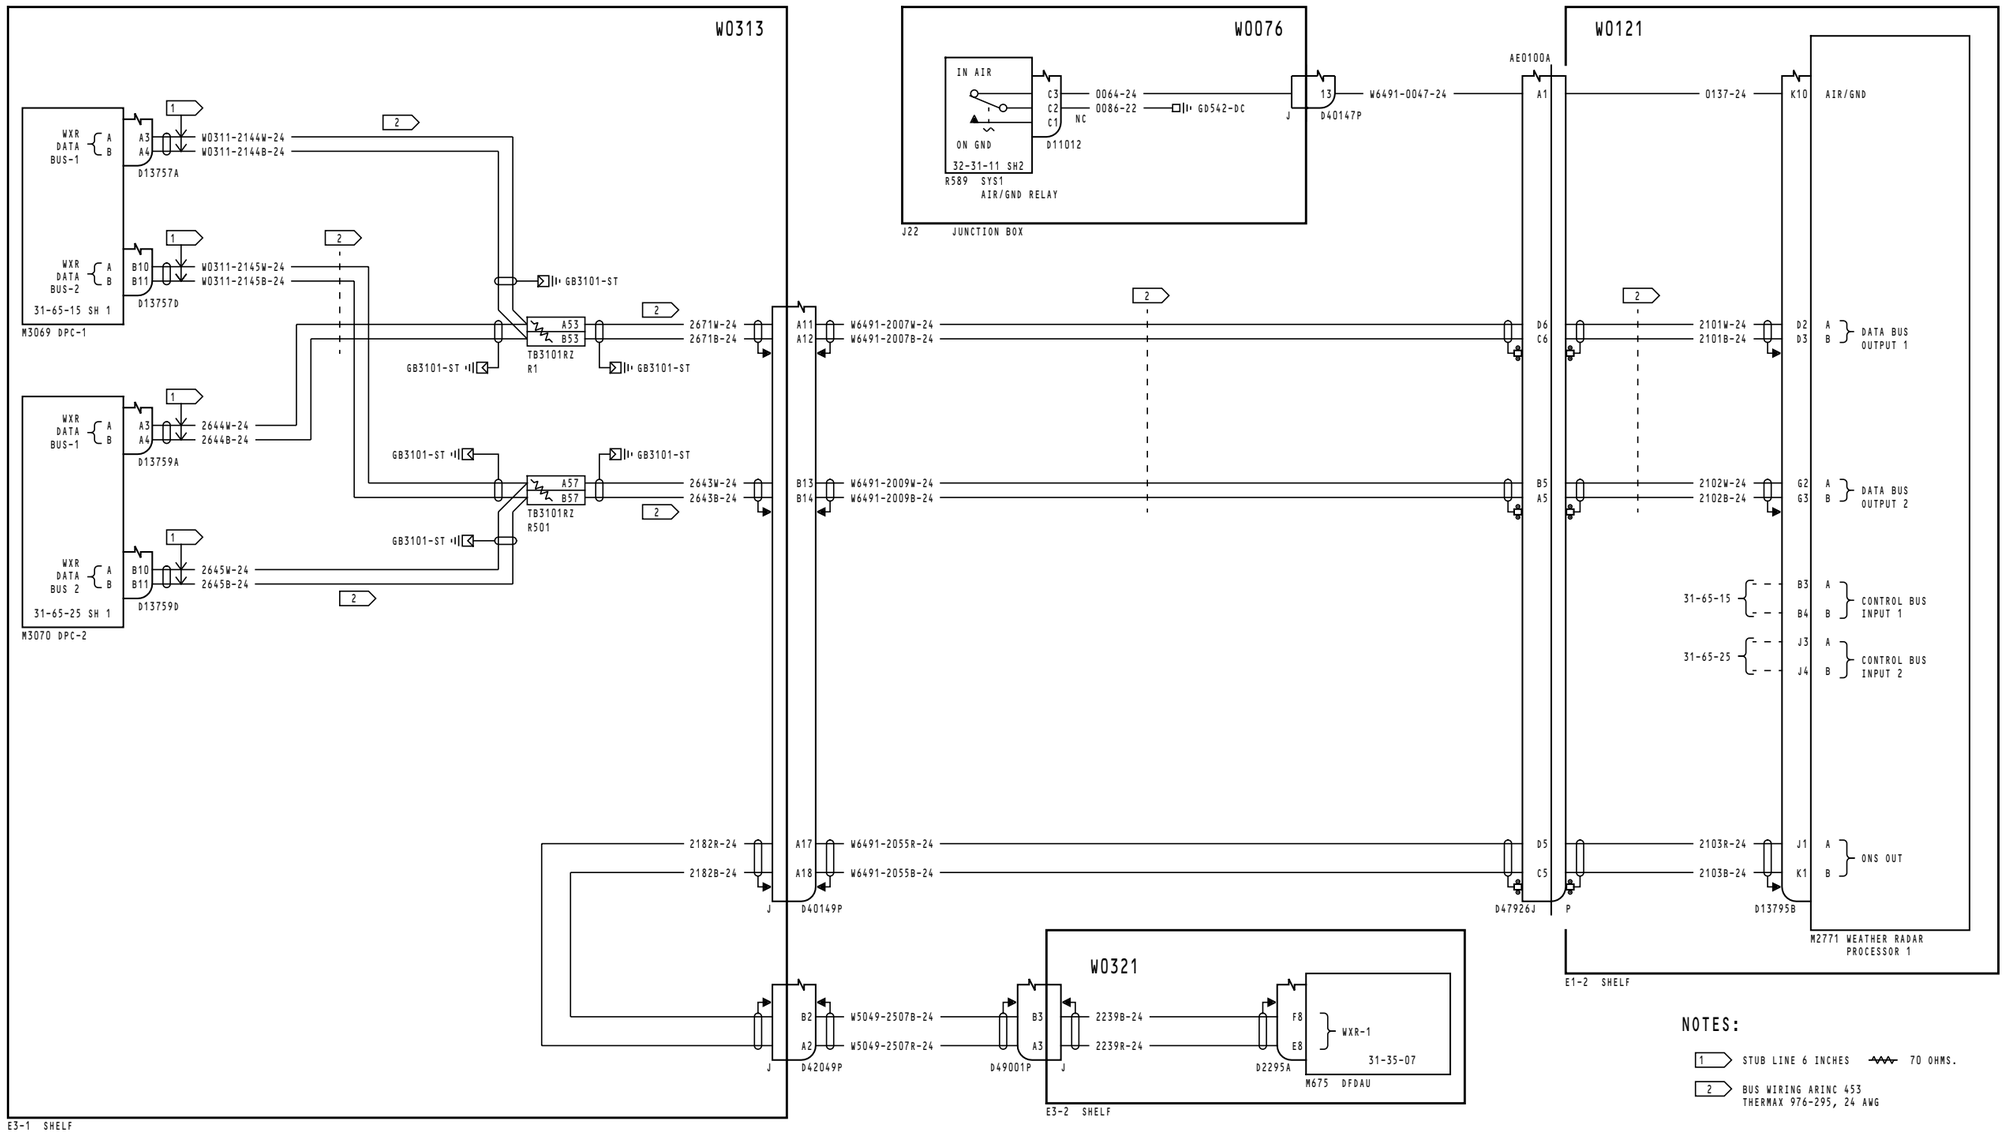


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-41-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

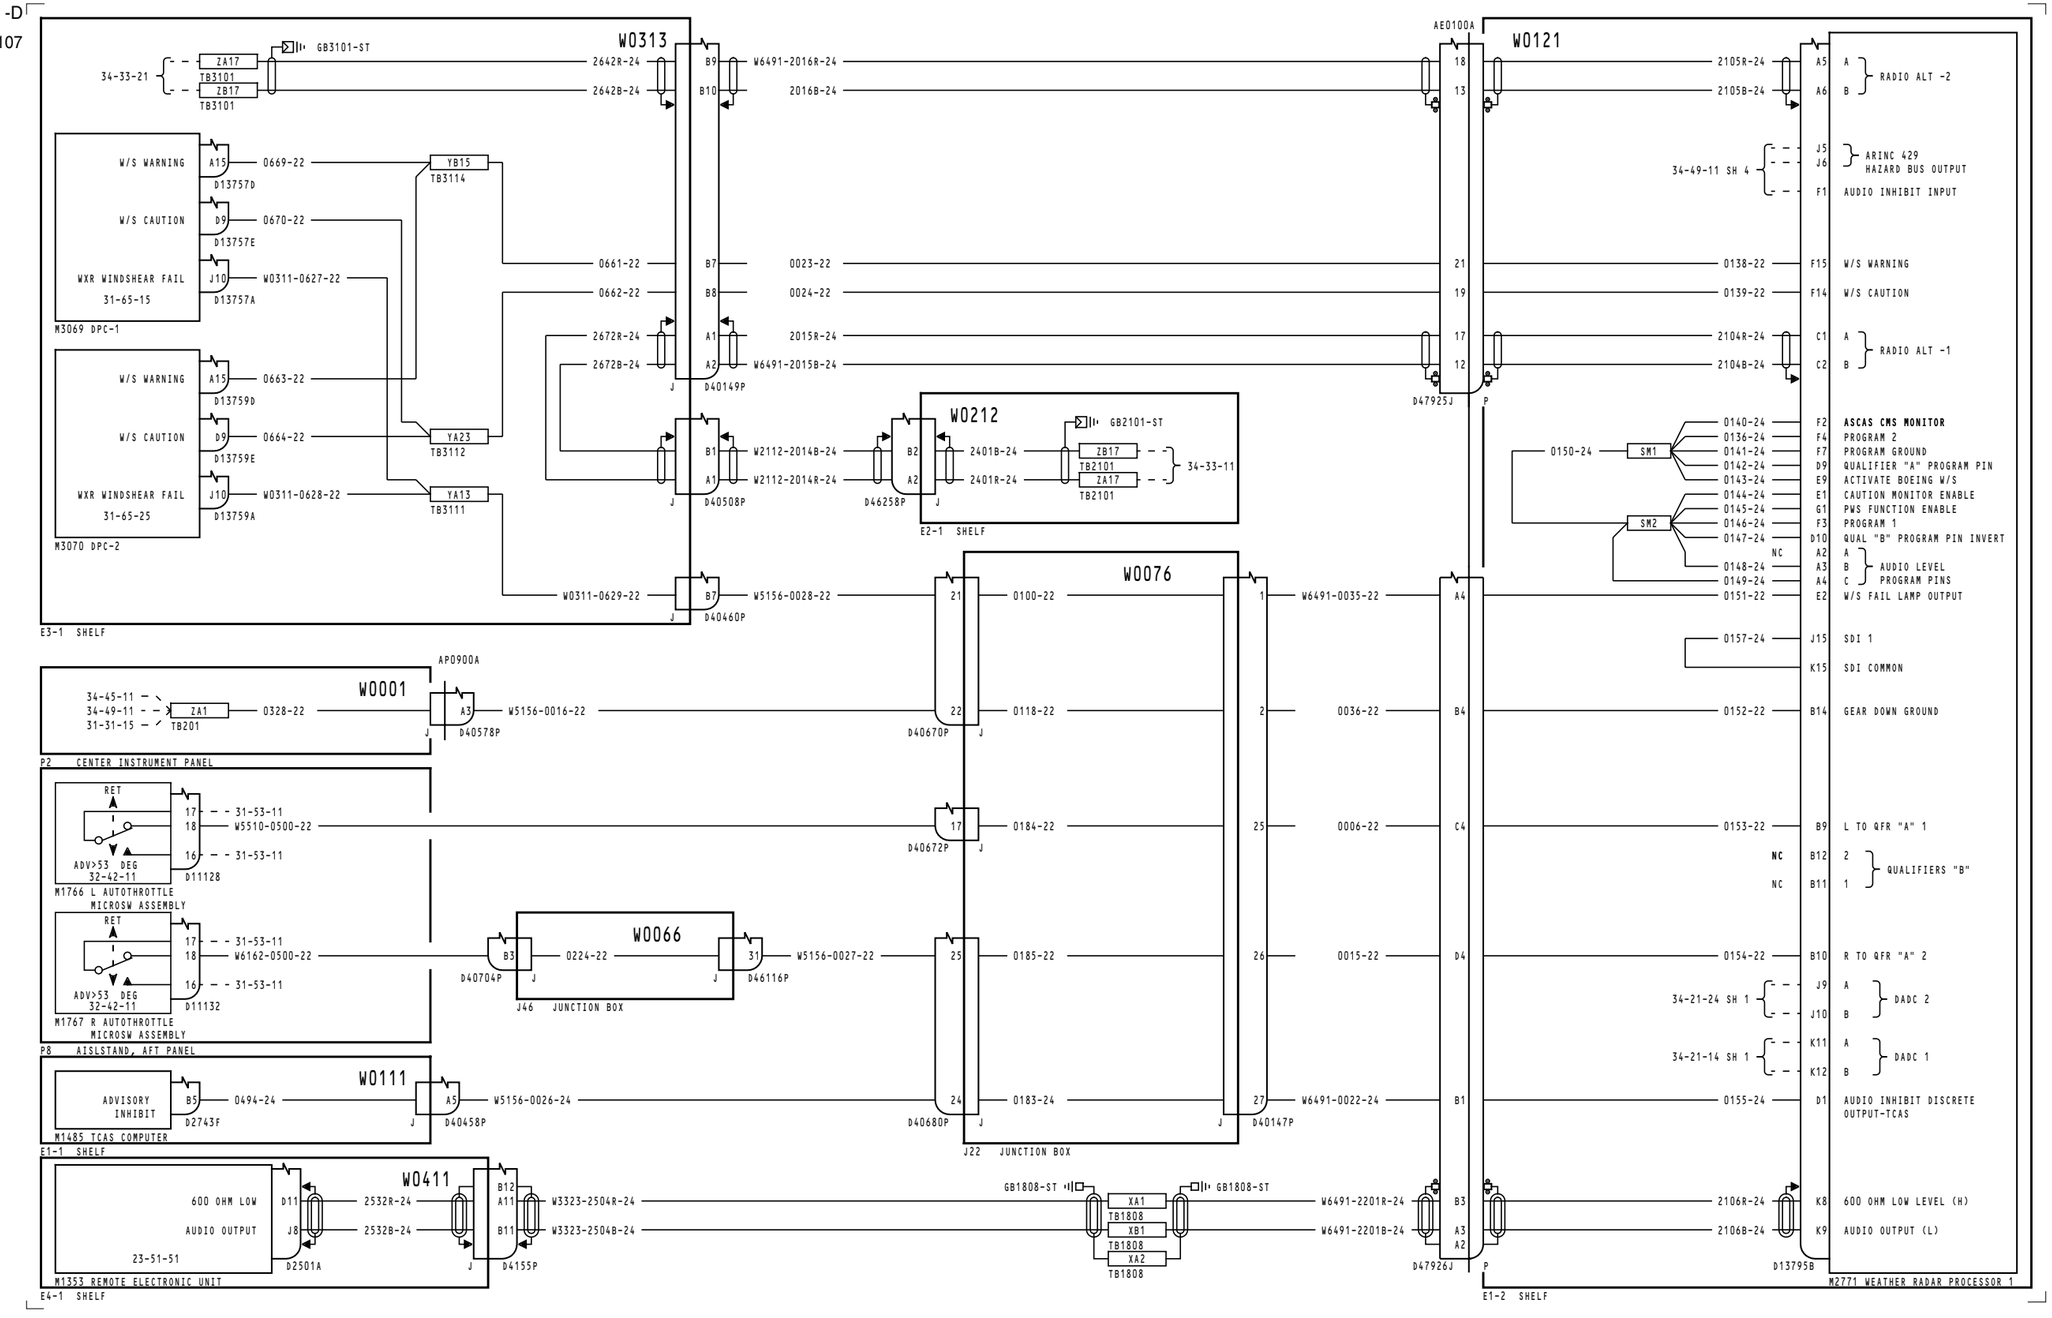

ALL

WEATHER RADAR

D280AM1215

34-41-11

Page 1
Sheet 3
Dec 24/2024


34-41-11

Page 1
Sheet 3
Dec 24/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
62

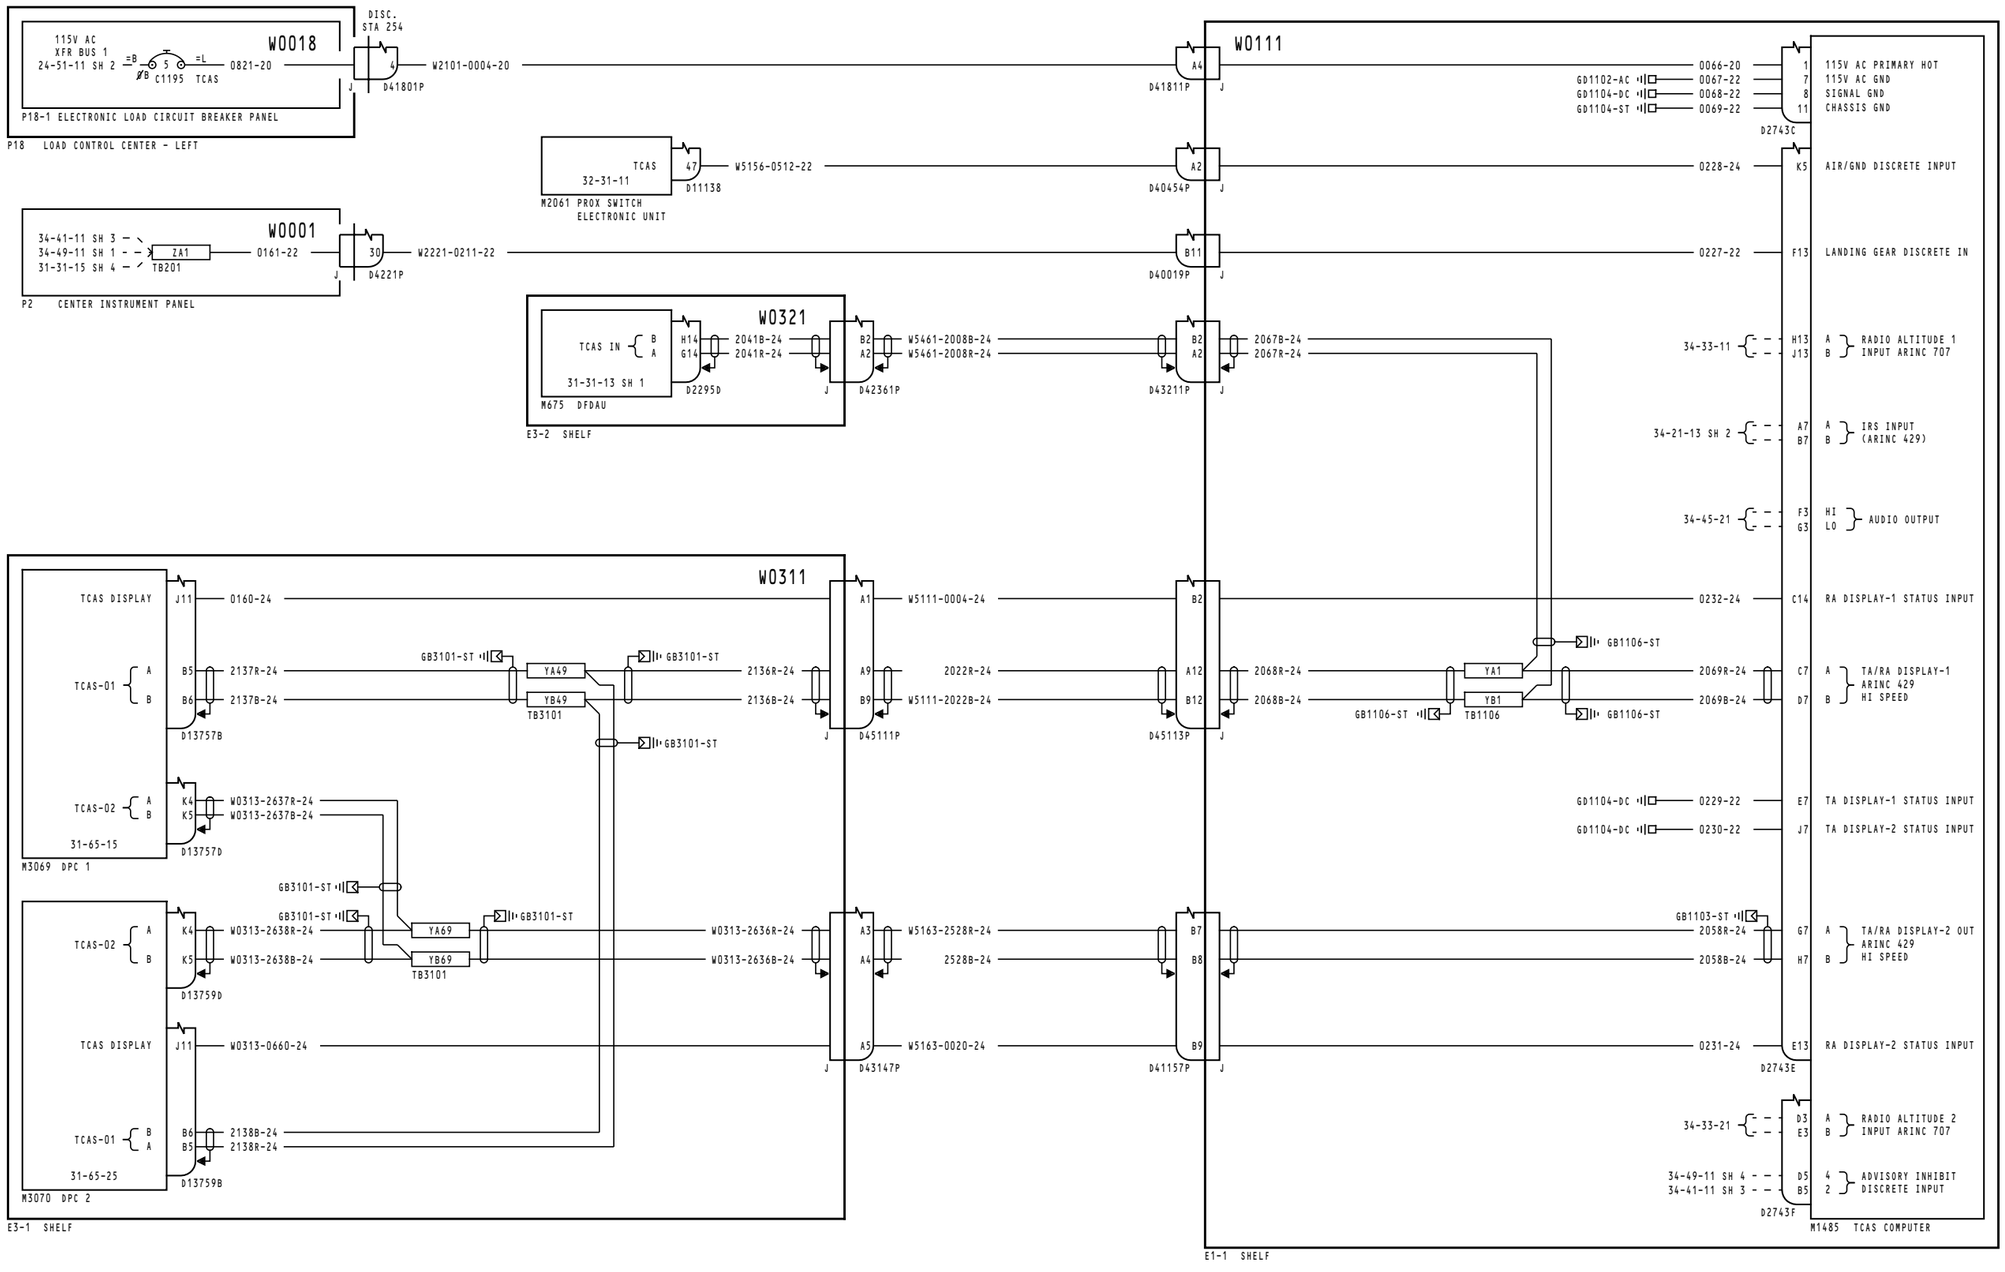


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-45-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

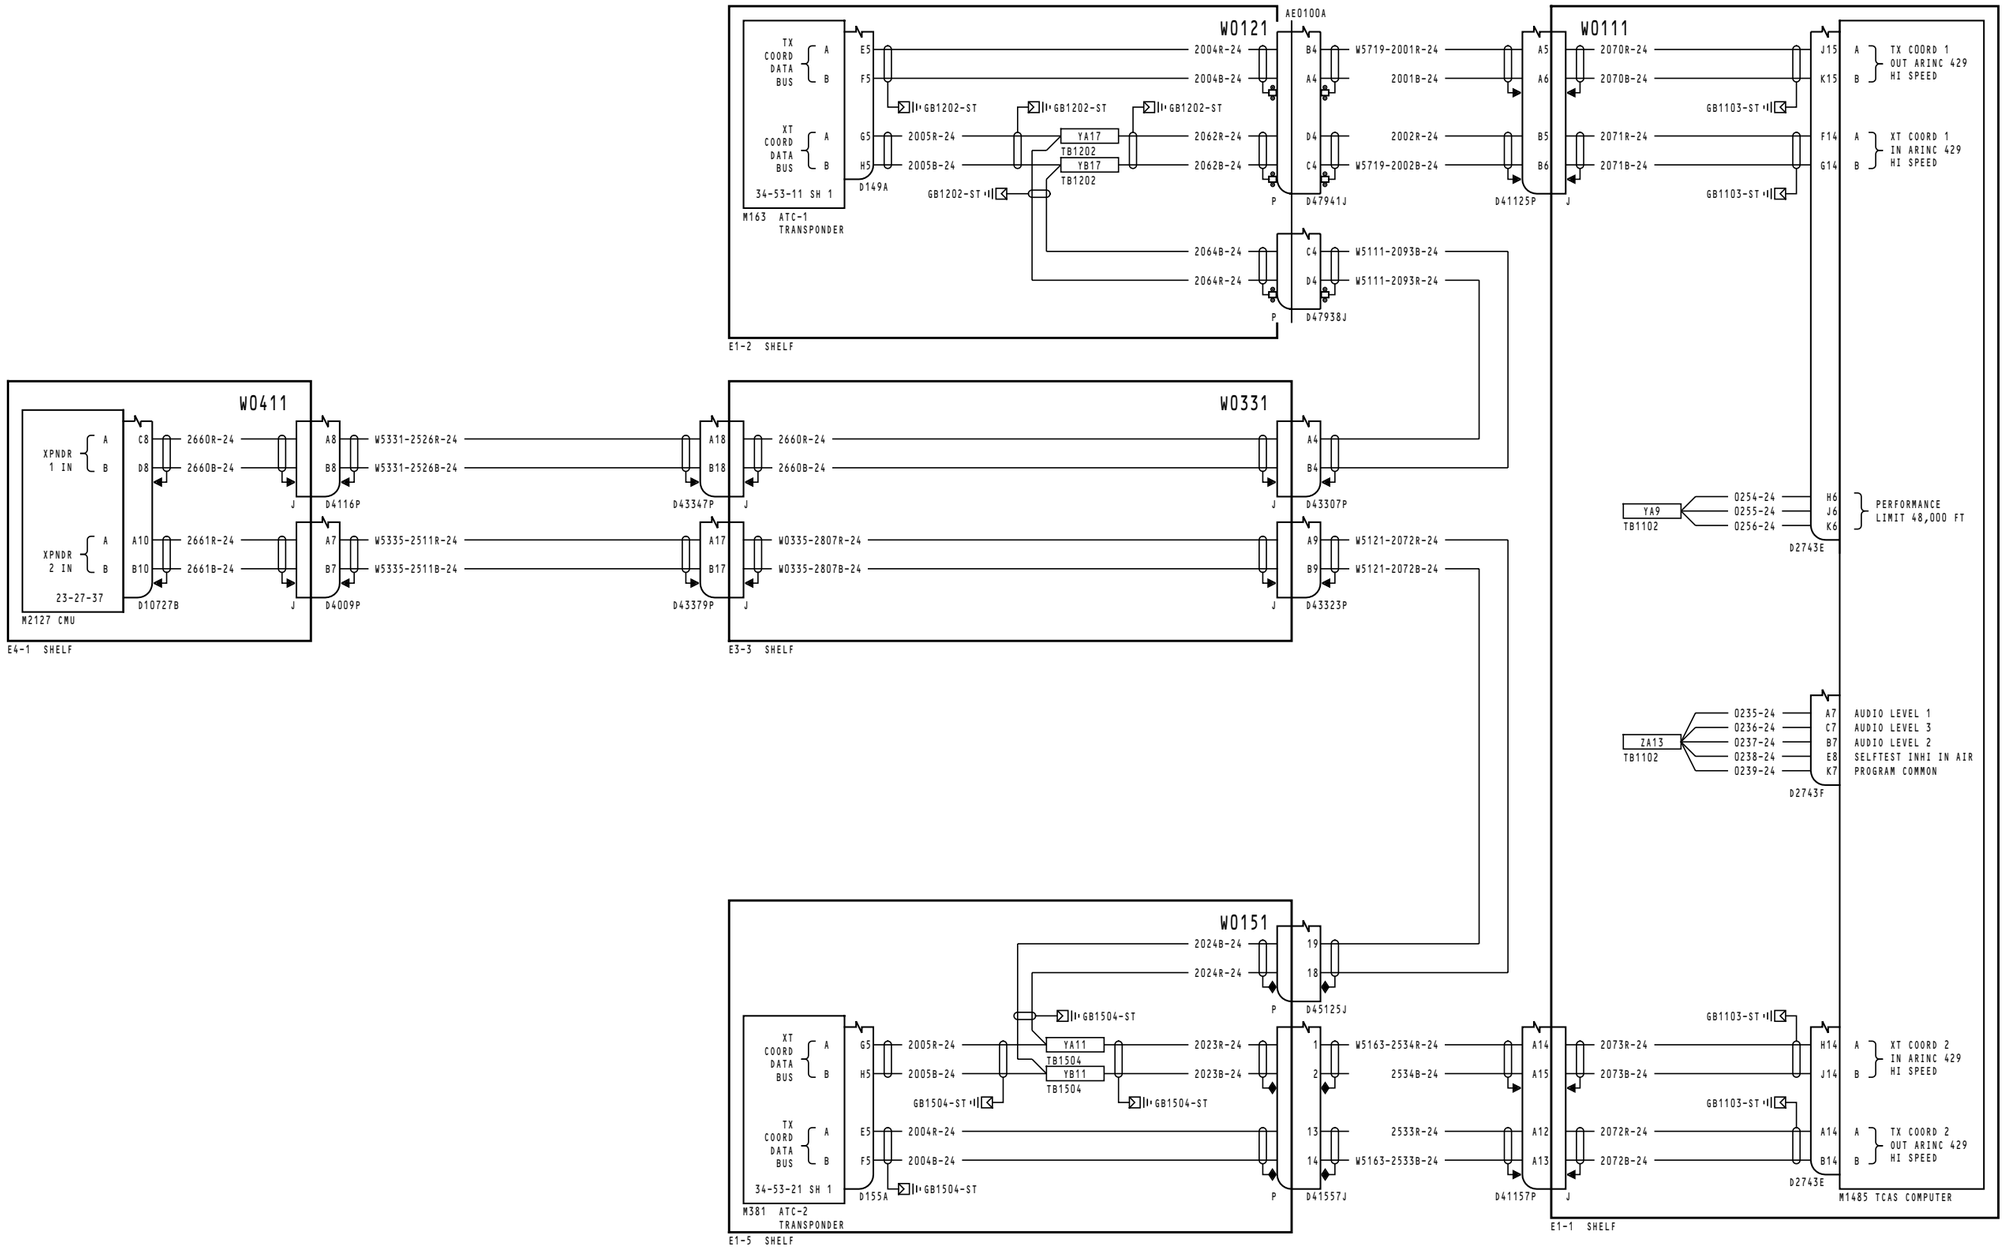

ALL

TCAS ANTENNA/INTERFACE

D280AM1215

34-45-21

Page 1
Sheet 1
May 15/2024


34-45-21

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

35

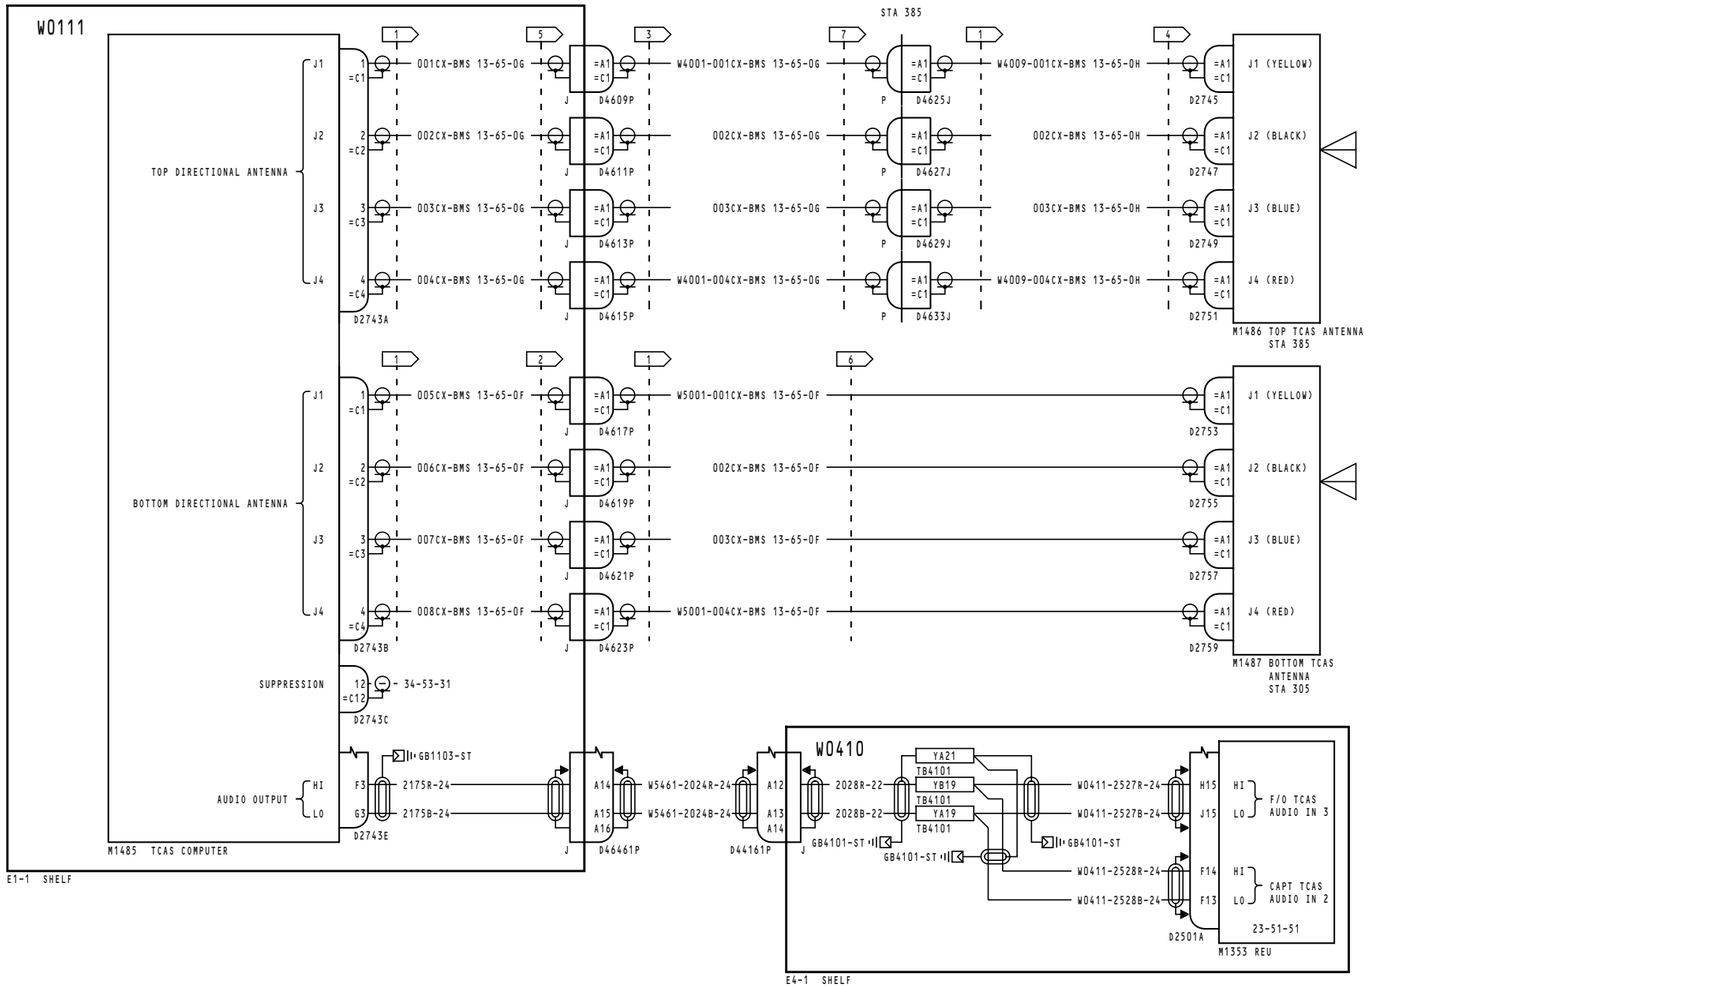


NOTES:

1. BALANCED ASSEMBLY. ALL FOUR CABLES MUST BE OF EQUAL LENGTH PLUS OR MINUS 1/2 INCH.
2. MAX. CABLE LENGTH 2 FEET MIN. CABLE LENGTH 1.5 FEET.
3. BALANCED ASSEMBLY. ALL FOUR CABLES MUST BE OF EQUAL LENGTH PLUS 0 OR MINUS 1/2 INCH.
4. MAX. CABLE LENGTH 3 FEET MIN. CABLE LENGTH 1.5 FEET.
5. MAX. CABLE LENGTH 2 FEET.
6. MAX. CABLE LENGTH 18 FEET MIN. CABLE LENGTH 12 FEET 9 INCHES.
7. MAX. CABLE LENGTH 24 FEET 8 INCHES, MIN. CABLE LENGTH 20 FEET.

34-45-21

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

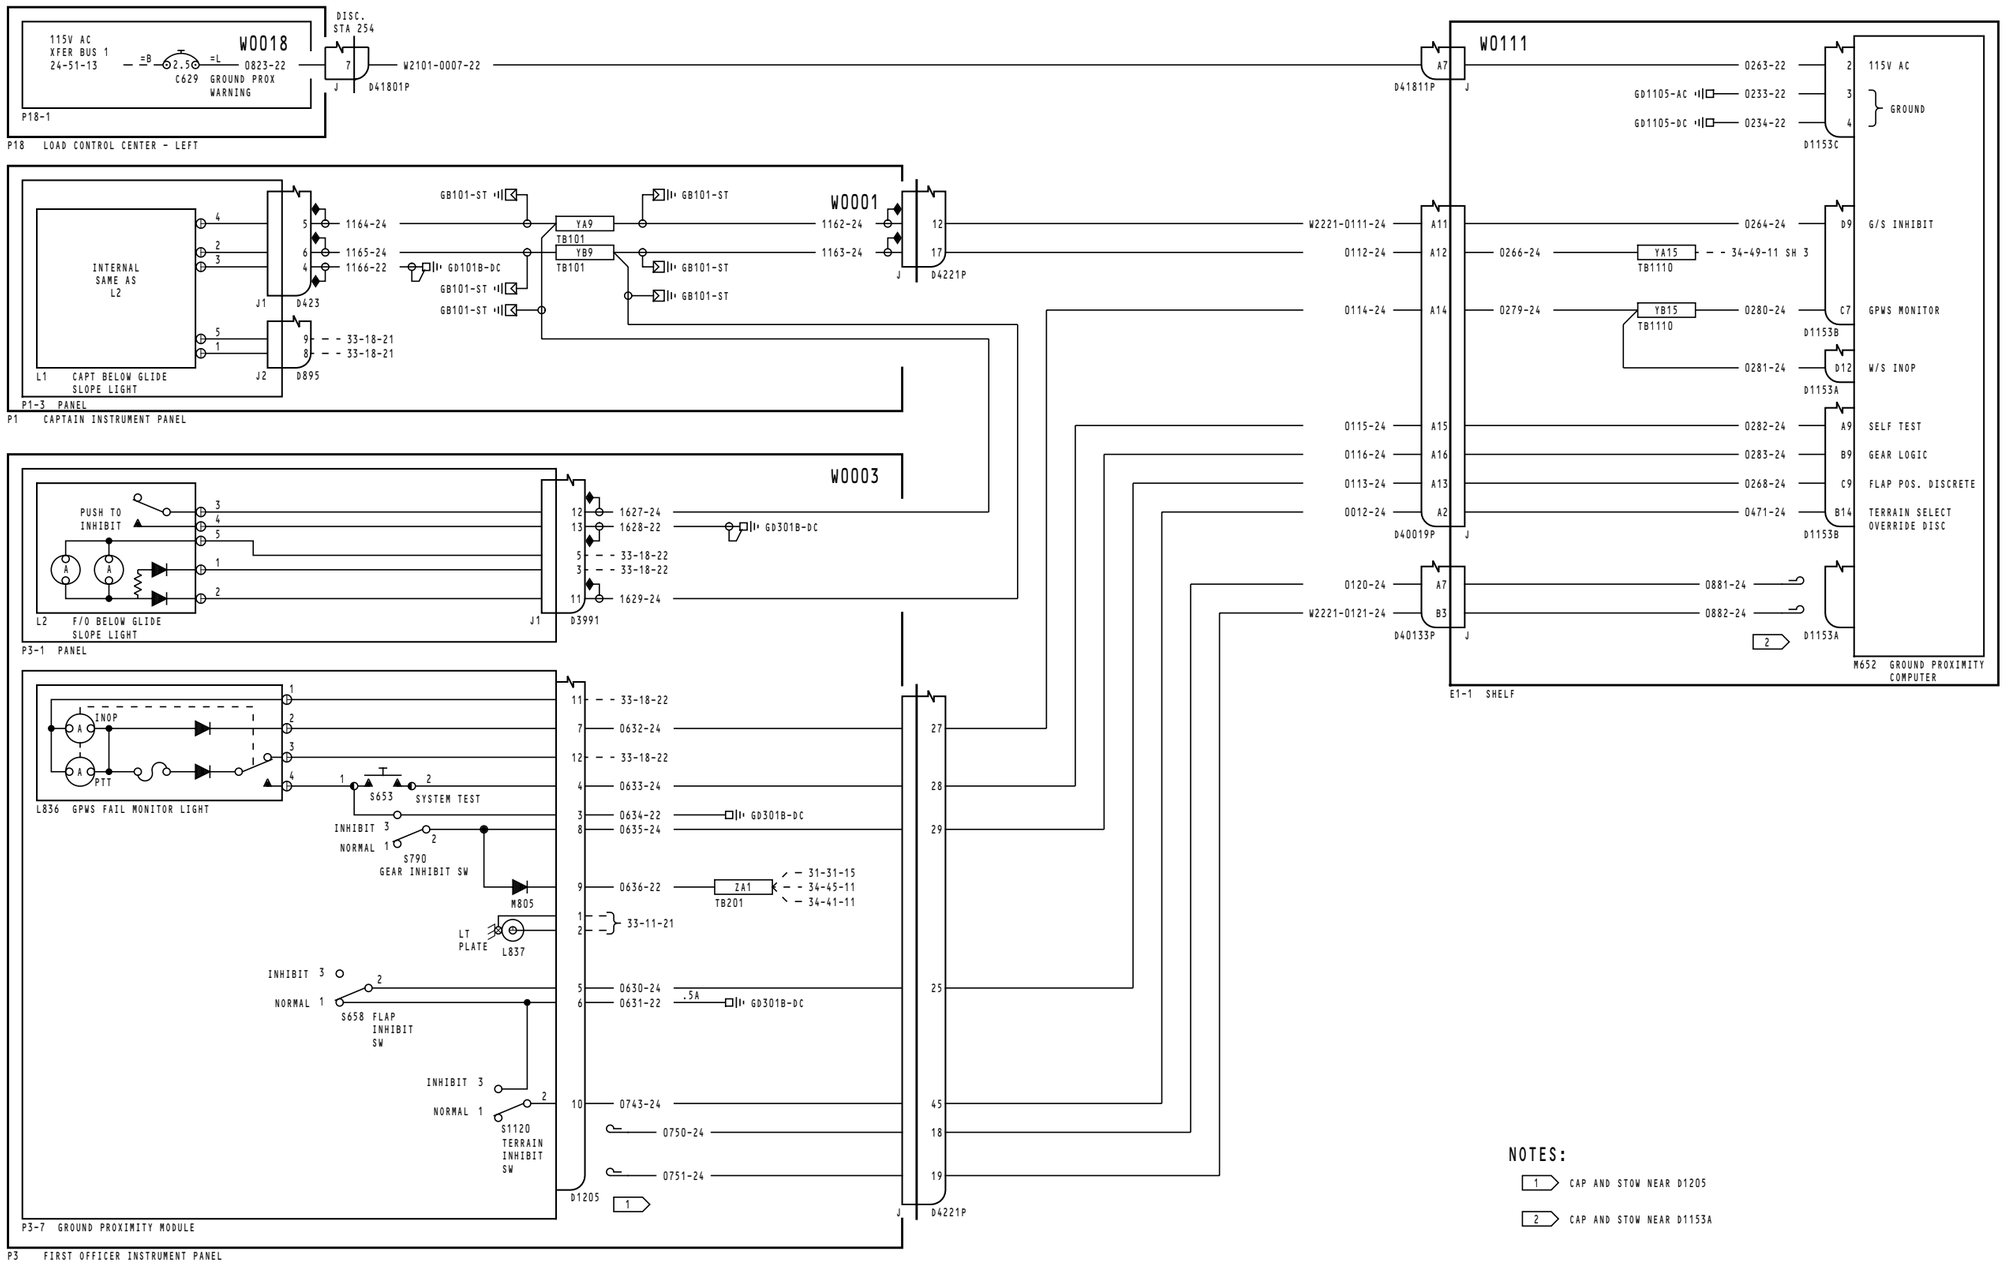

NOTES:

1. CAP AND STOW NEAR D1205
2. CAP AND STOW NEAR D1153A


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-49-11

Page 1
Sheet 1
Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

-A
38

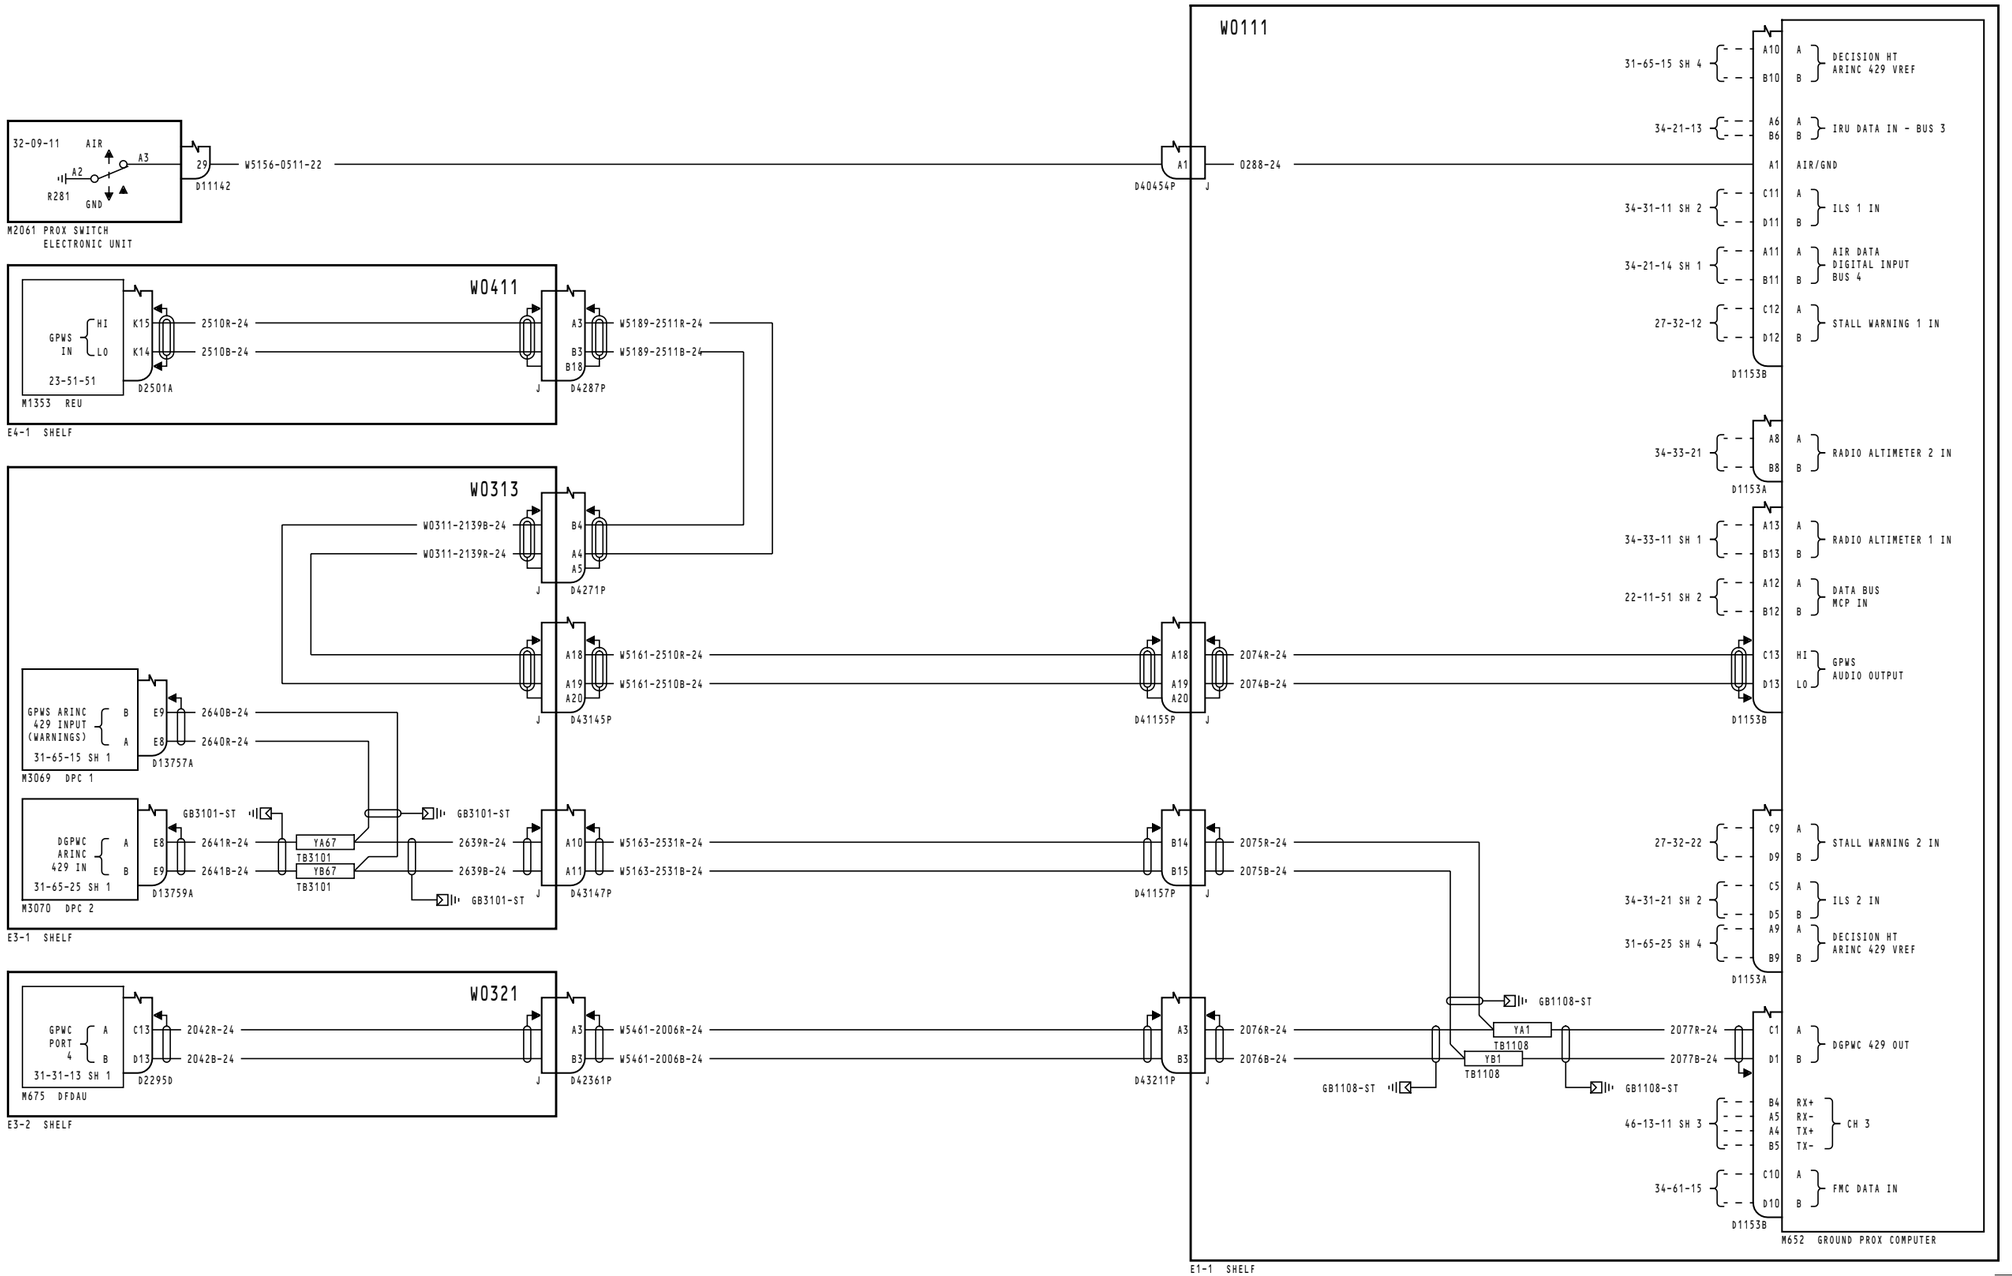


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-49-11

Page 1
Sheet 2
Sep 15/2025

737-8 WIRING DIAGRAM MANUAL

1136

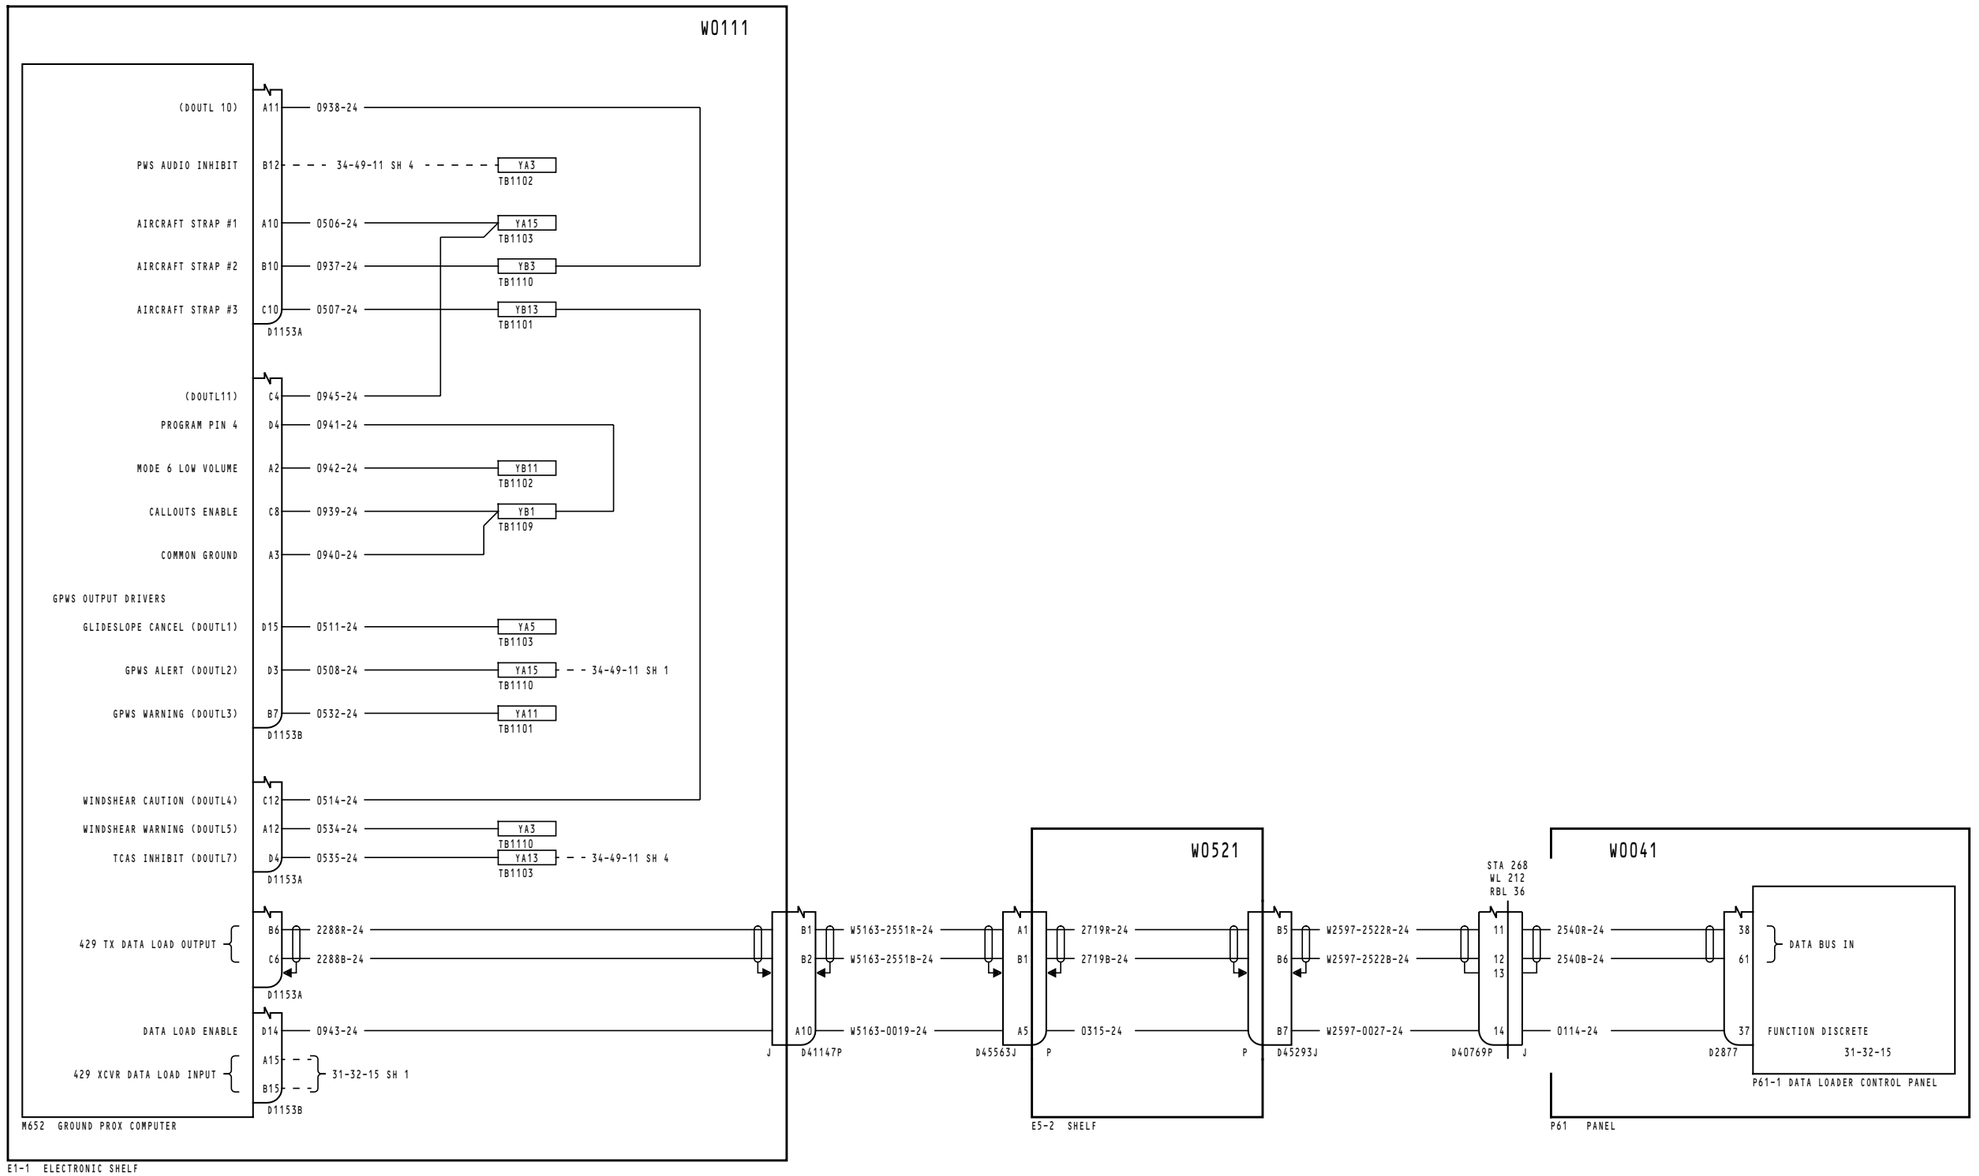


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-49-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

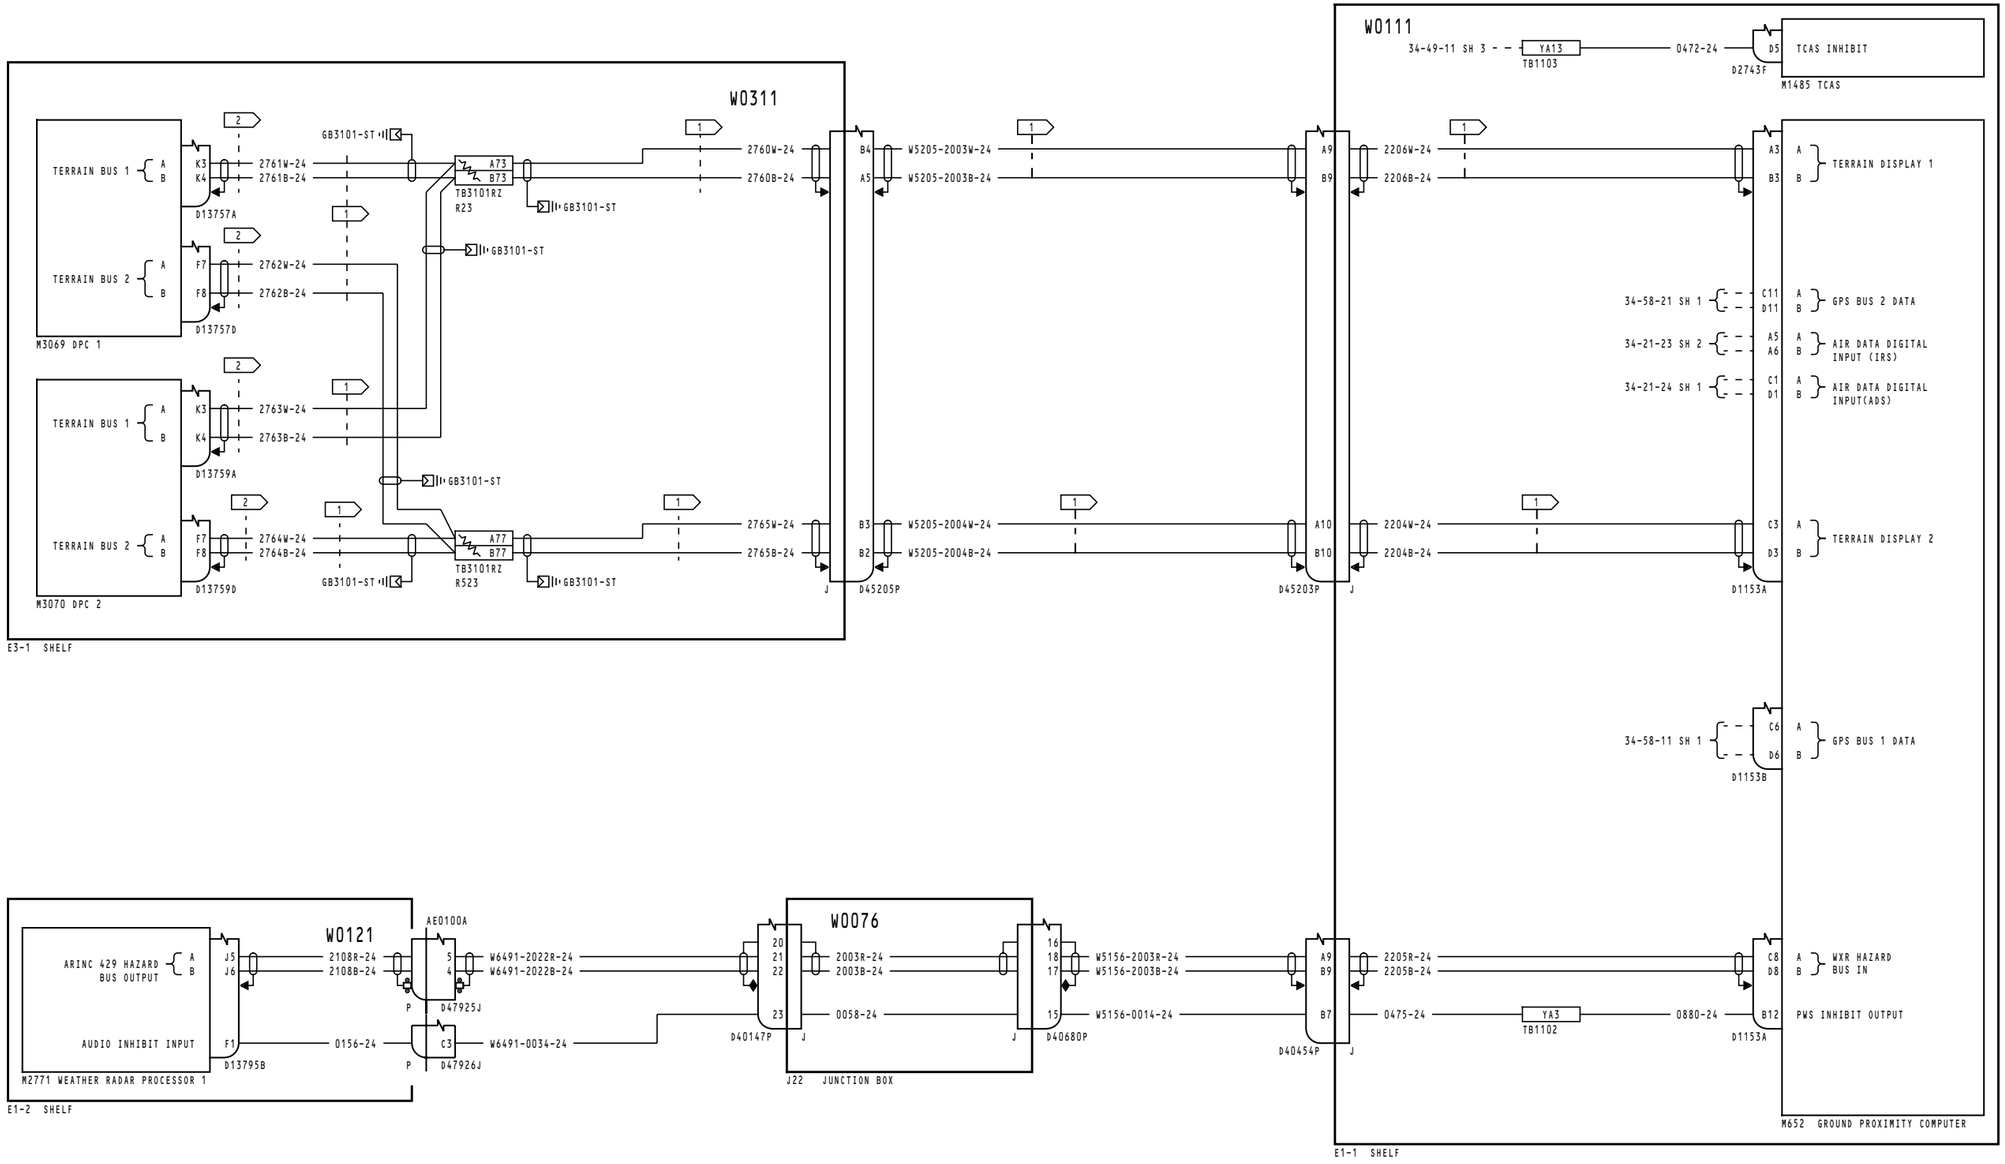

NOTES:

1. BUS WIRING, ARINC 453, THERMAX 976-295, 24 AWG.
2. STUB LINE 6 INCHES RESISTOR 70 OHMS.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-49-11

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL


-C
26

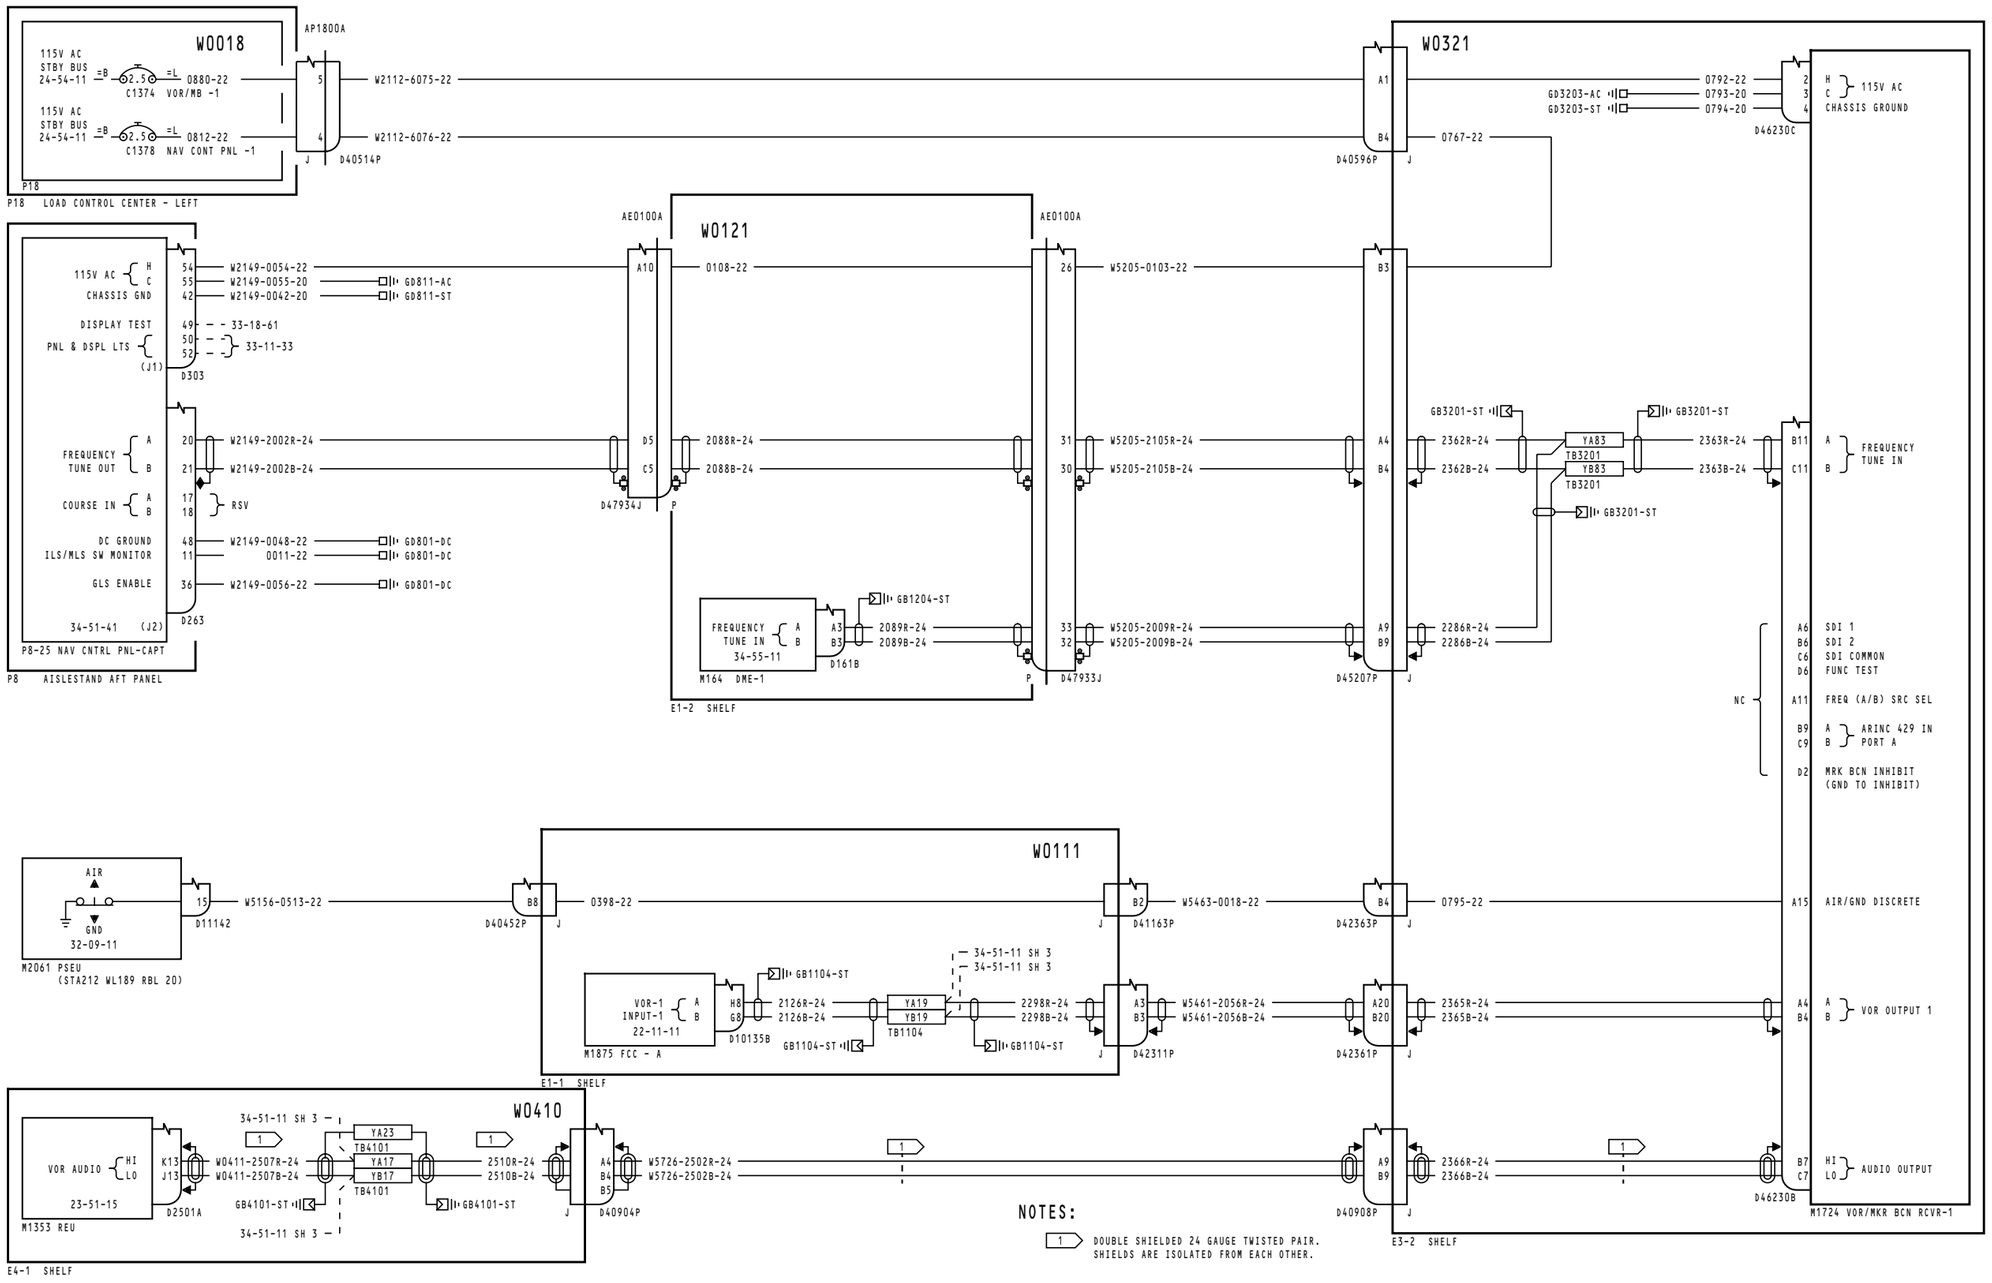

ALL	VOR NO. 1	34-51-11	34-51-11
	D280AM1215	Page 1 Sheet 1 May 15/2024	Page 1 Sheet 1 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


737-8 WIRING DIAGRAM MANUAL

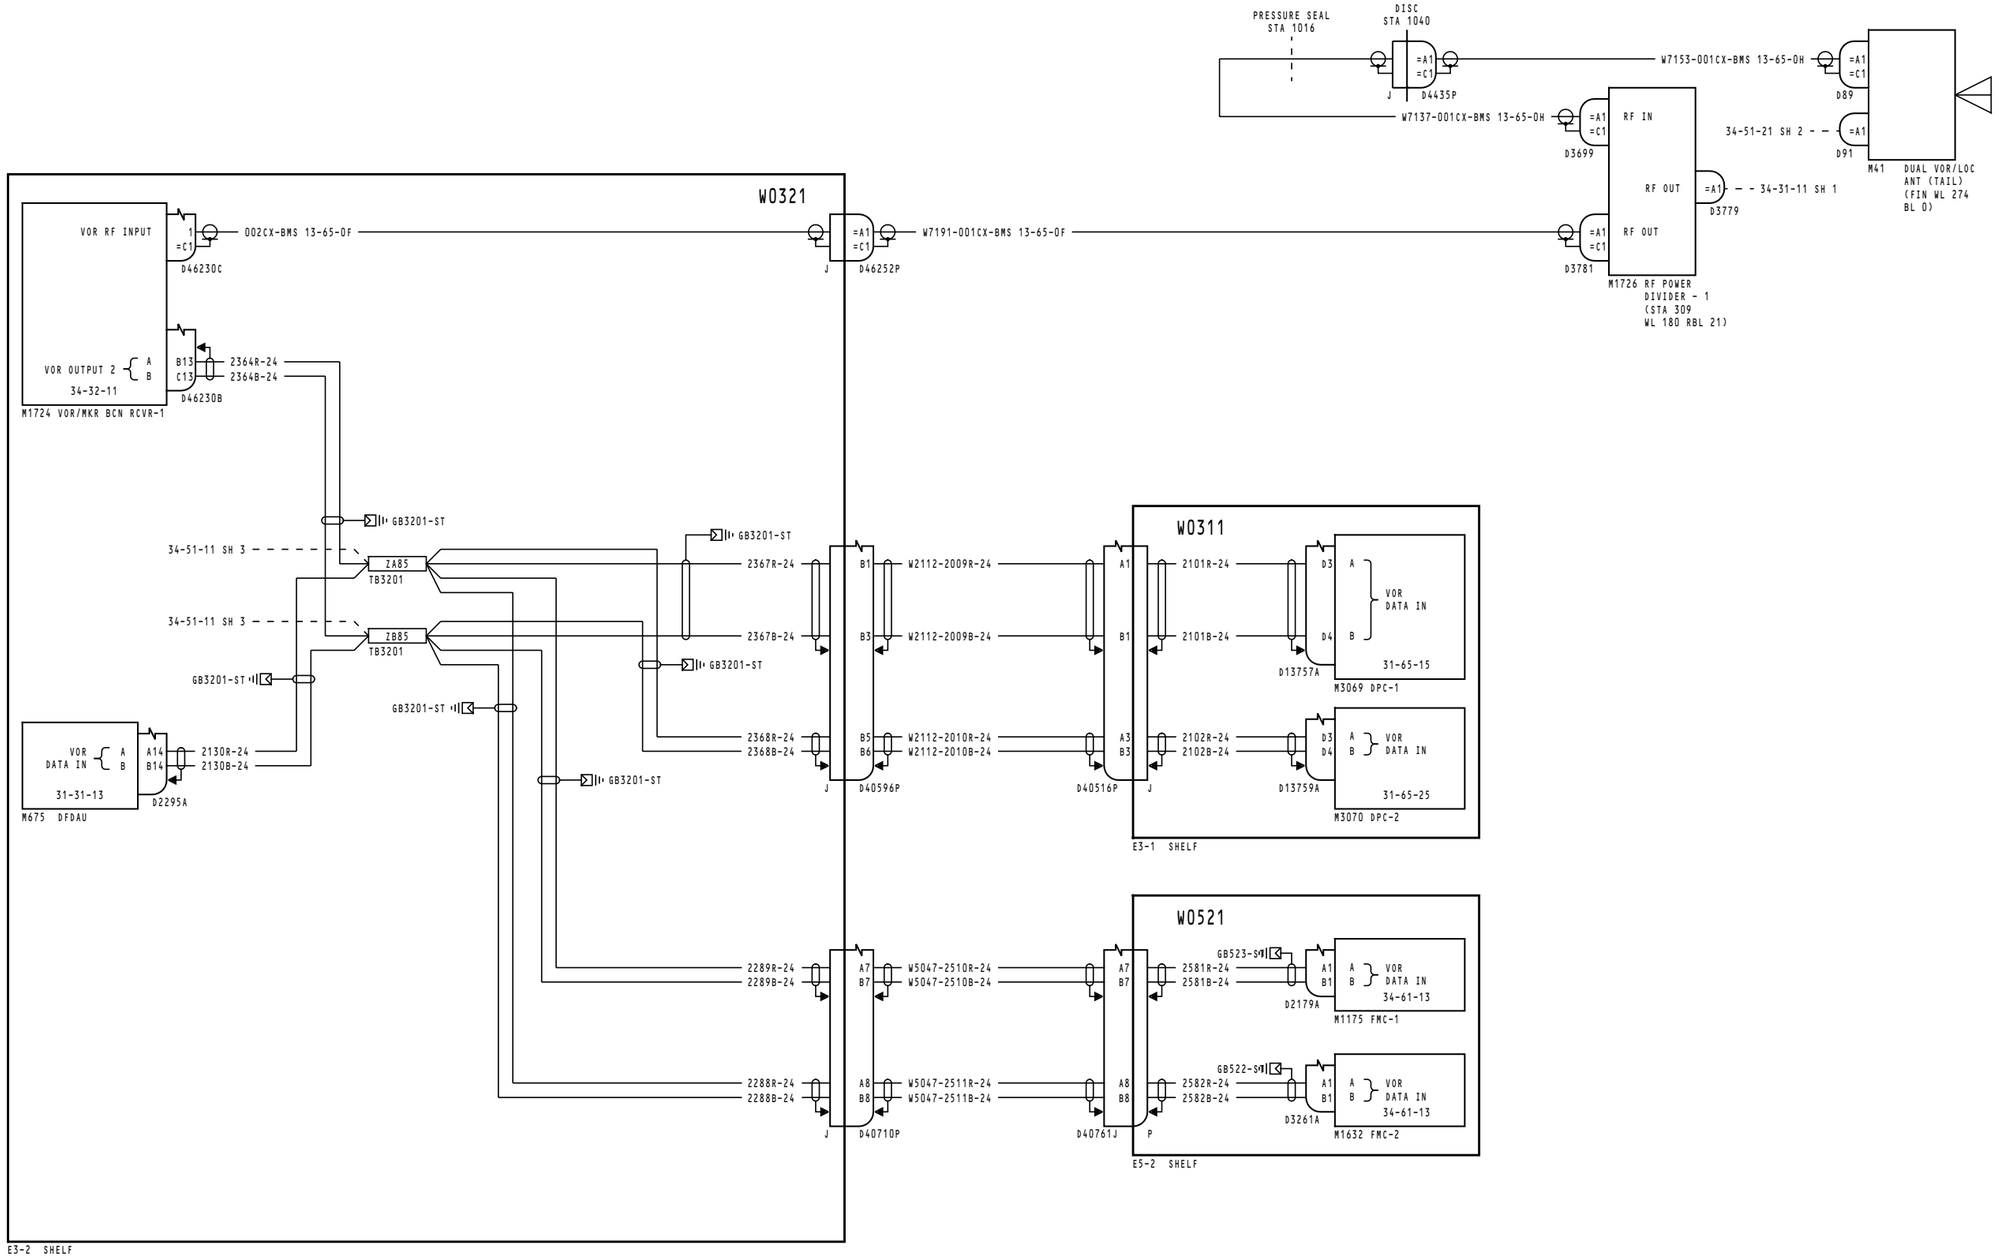

34-51-11
Page 1
Sheet 2
May 15/2024
ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


-A
6

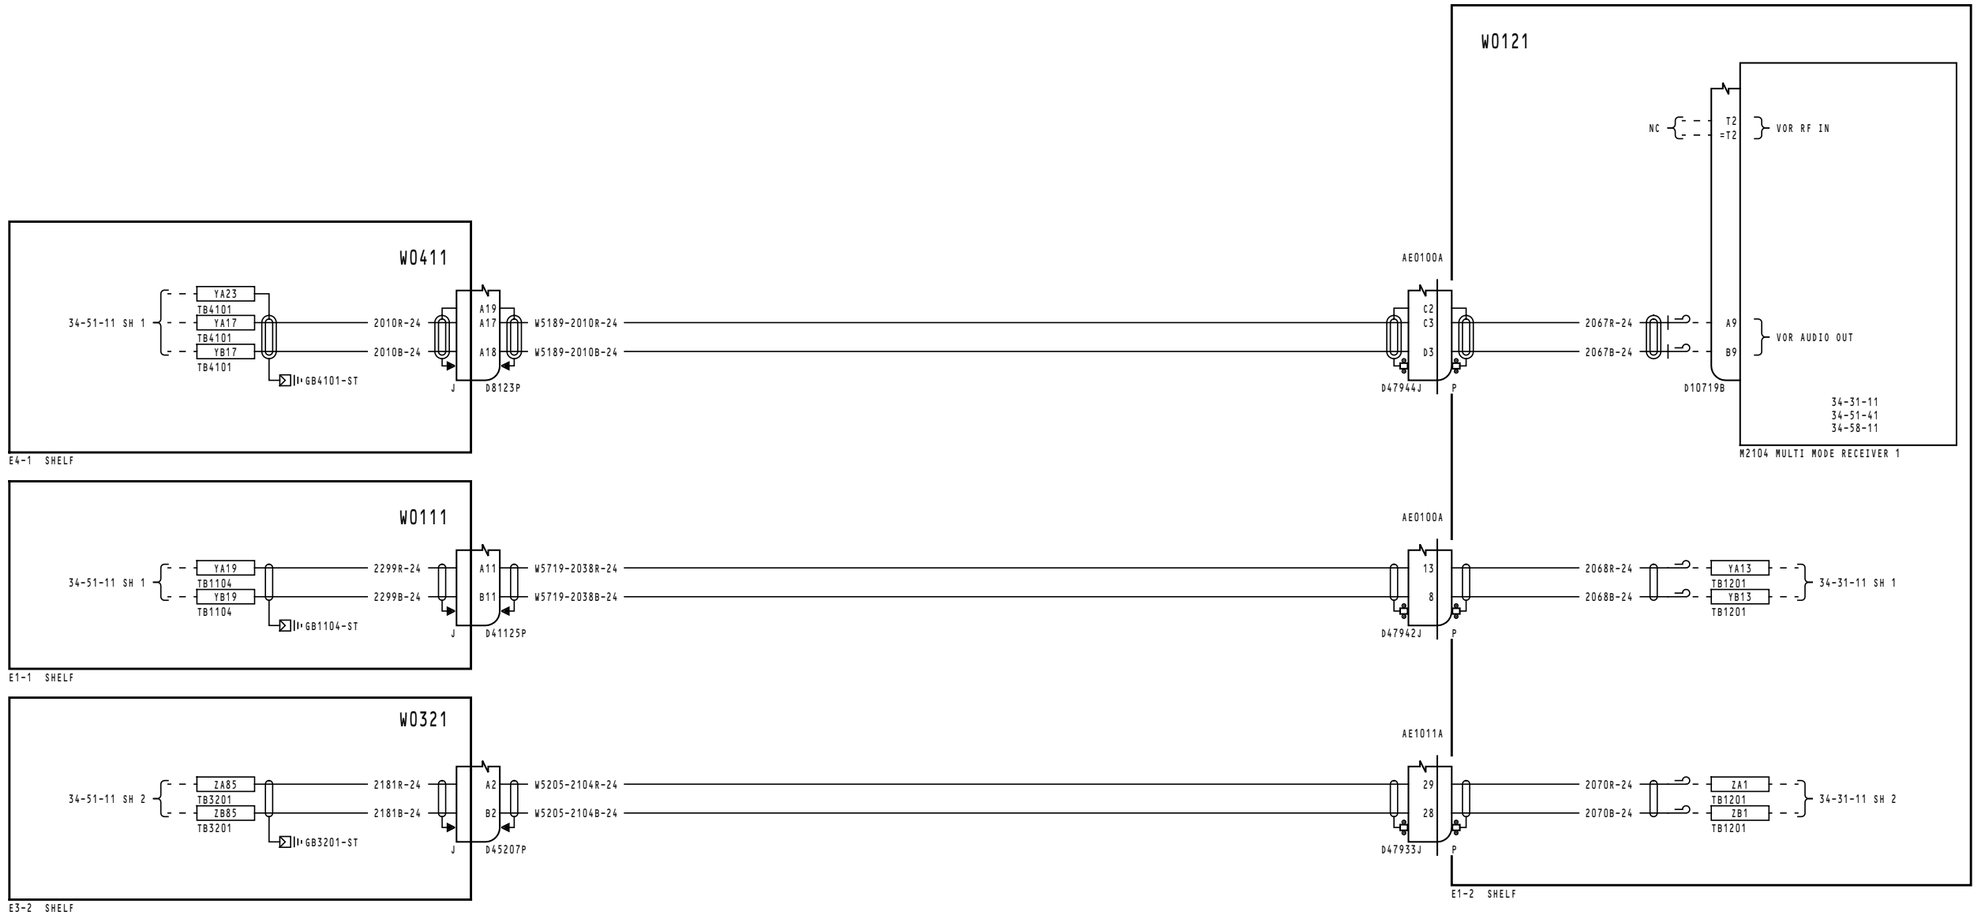

ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-51-11

Page 1
Sheet 3
May 15/2024

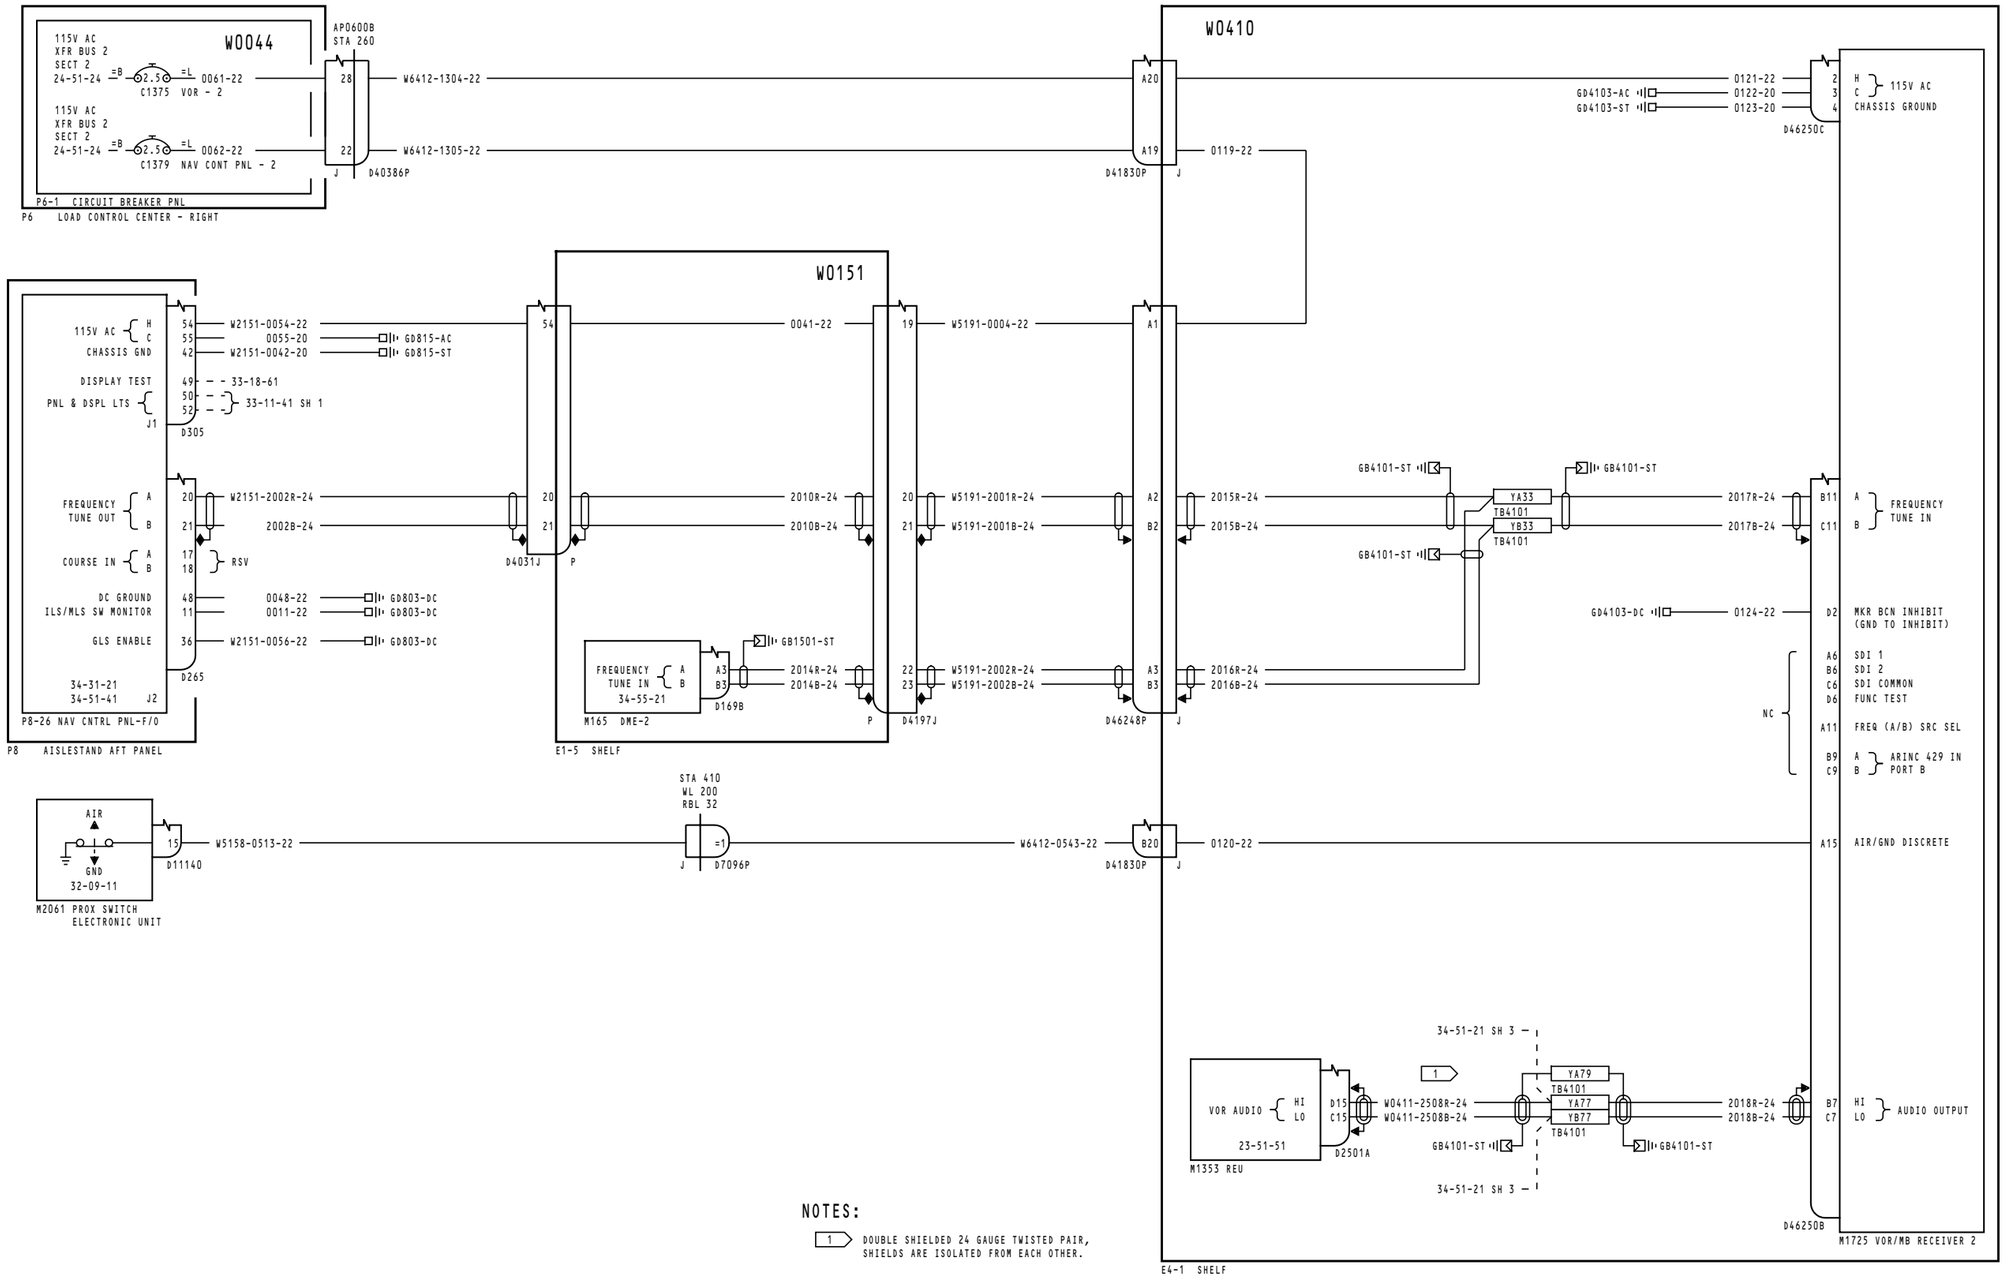

NOTES:

1. DOUBLE SHIELDED 24 GAUGE TWISTED PAIR, SHIELDS ARE ISOLATED FROM EACH OTHER.

ALL


VOR NO. 2

D280AM1215

34-51-21
Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

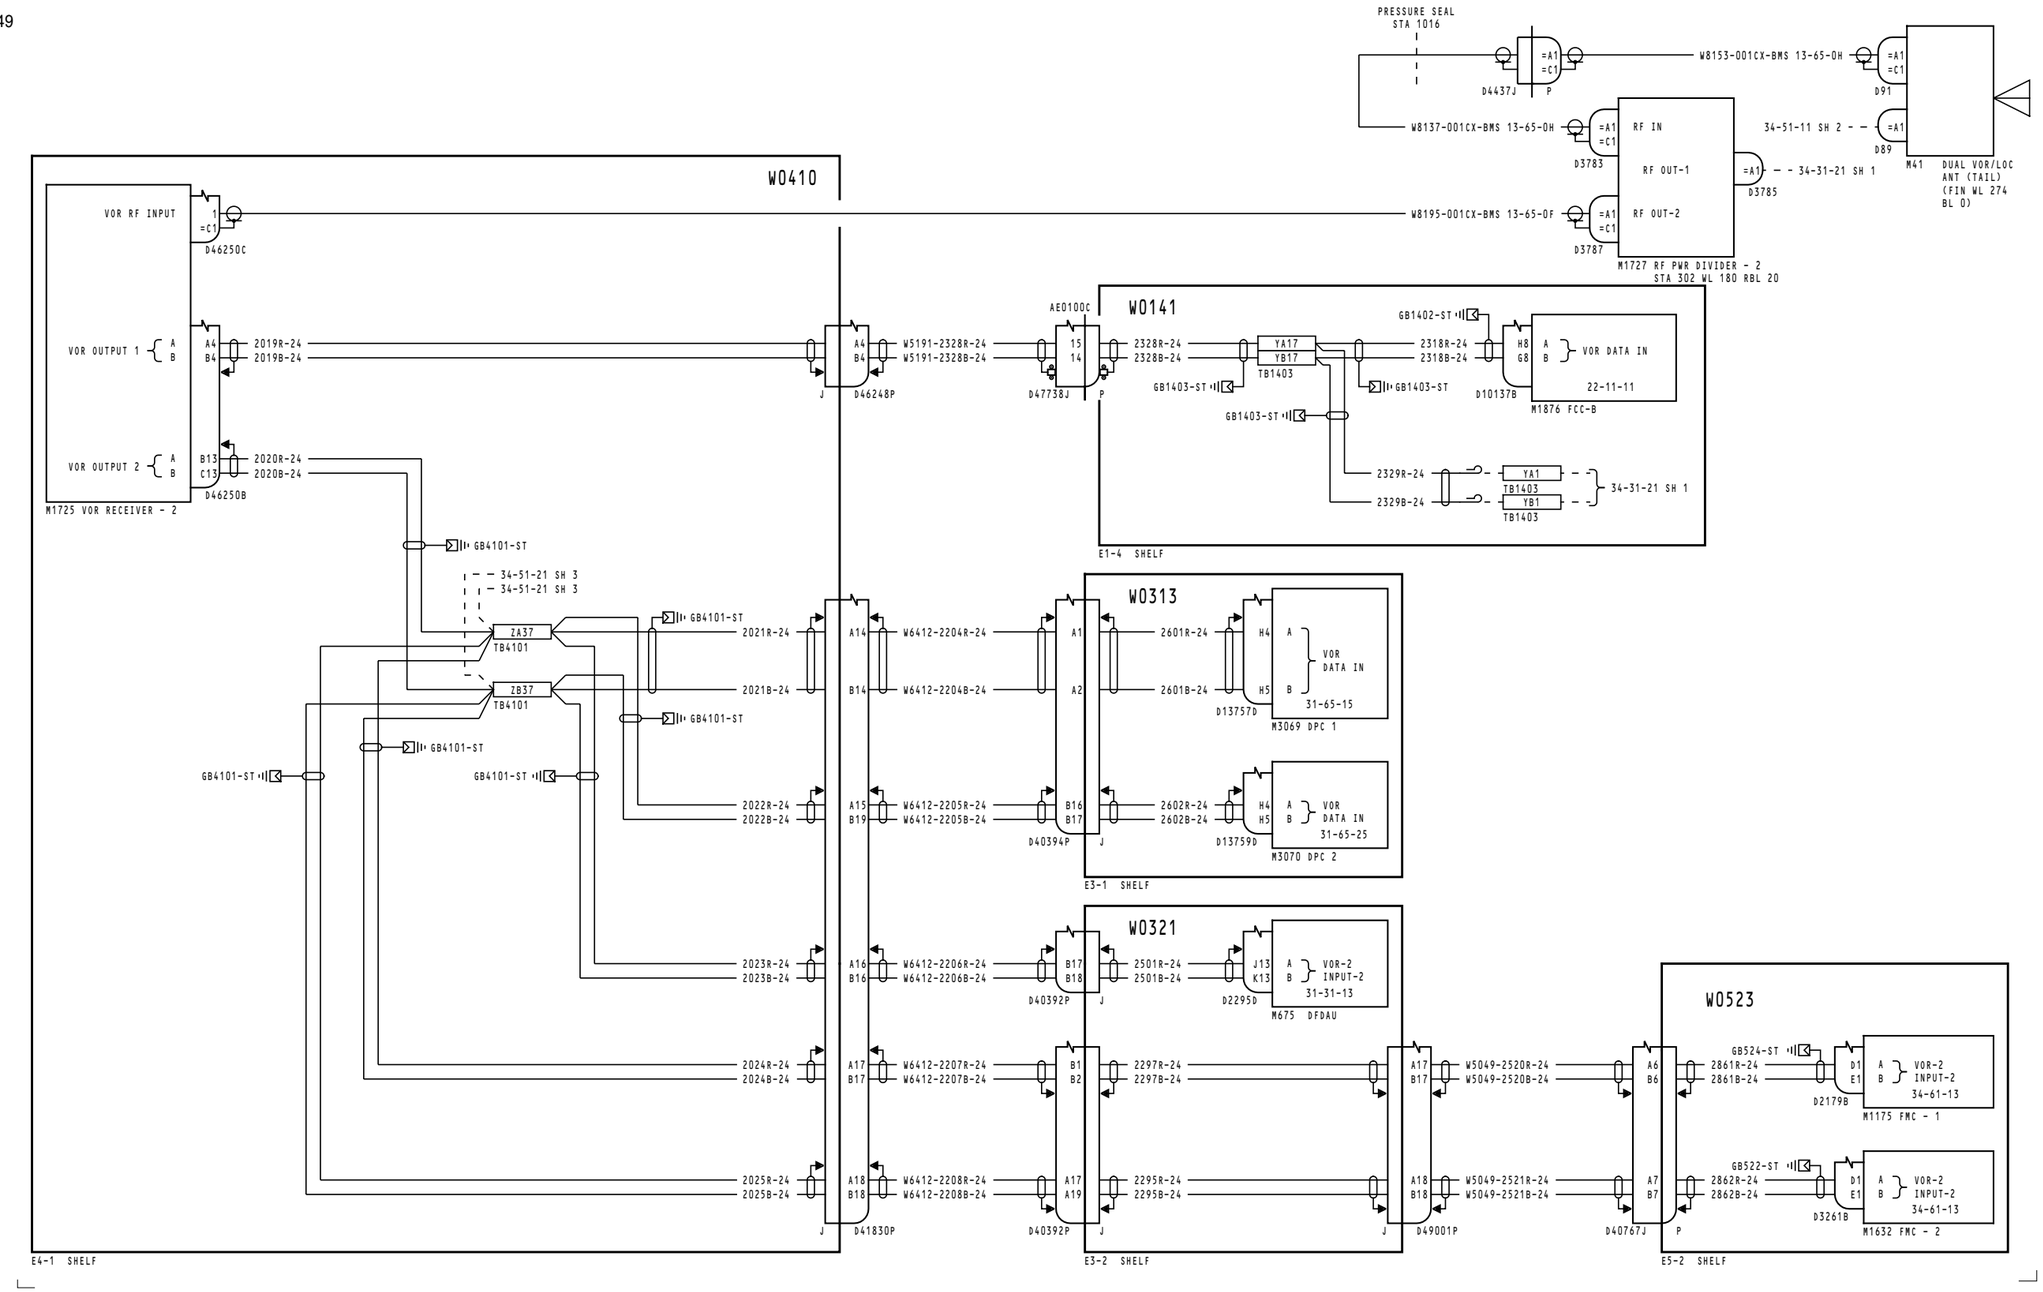


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-51-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

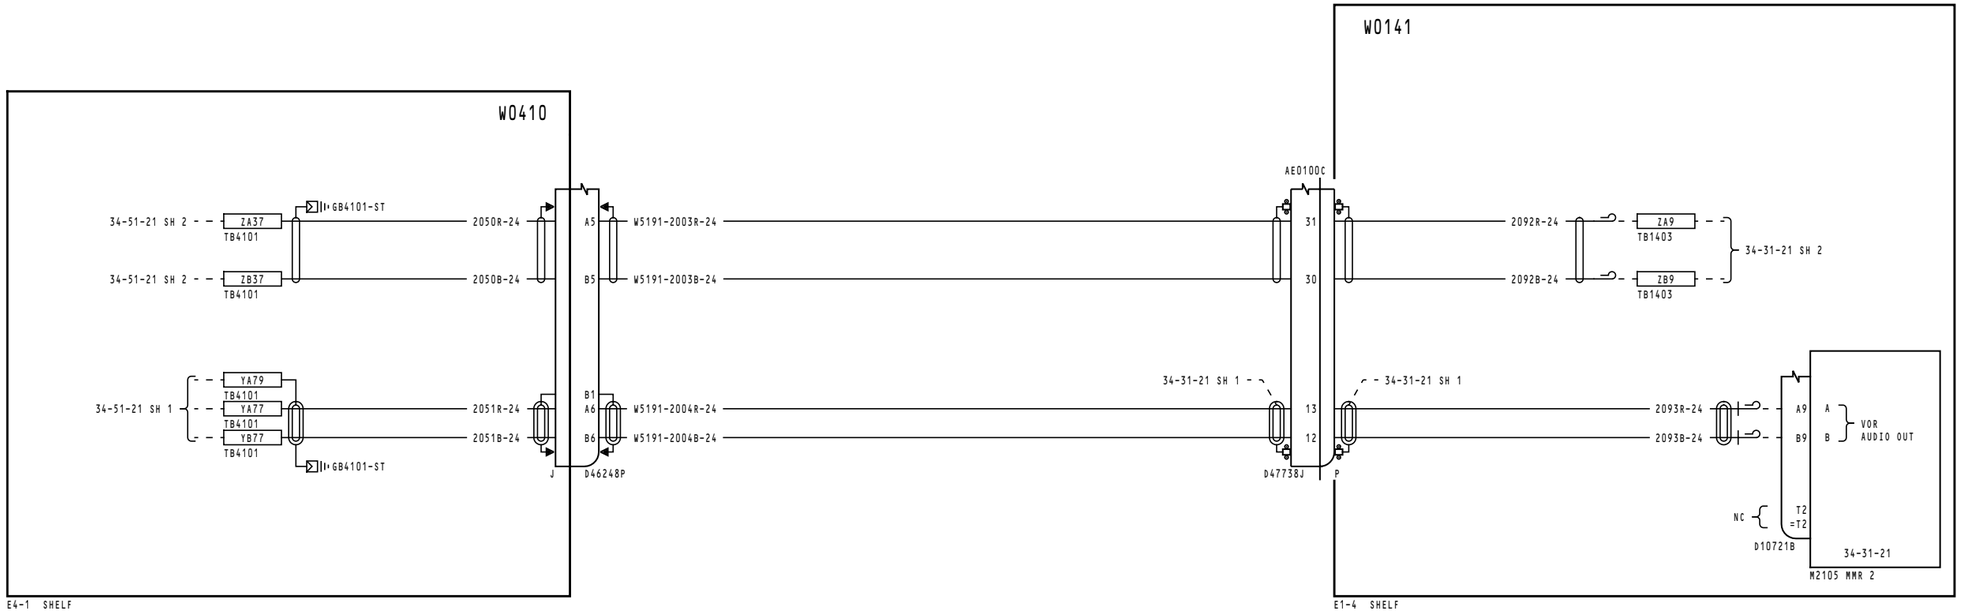


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-51-21

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
56

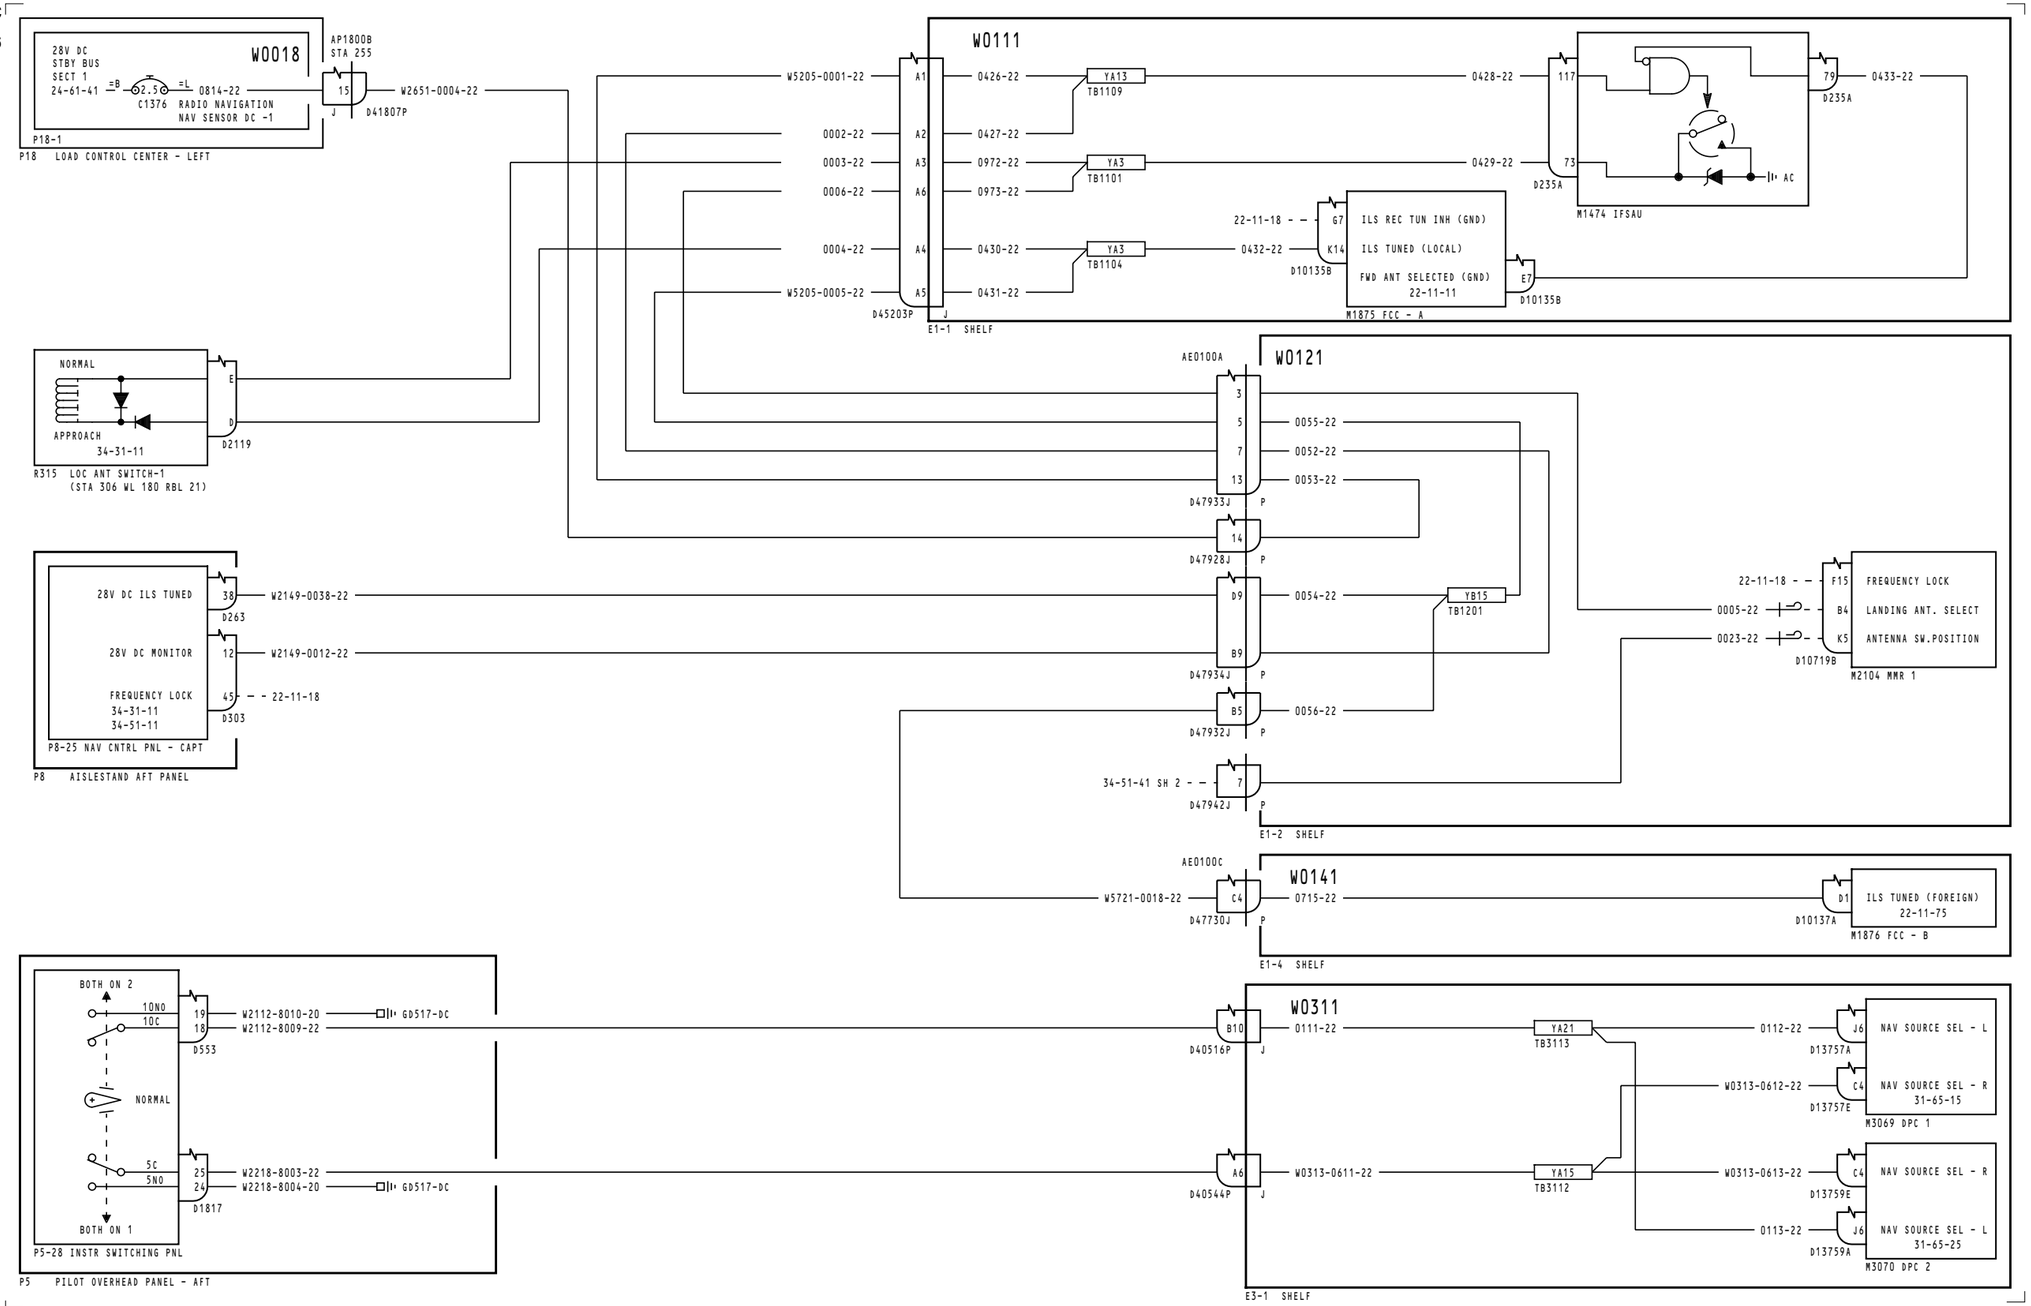

ALL

VOR/ILS INSTRUMENT TRANSFER SWITCHING

D280AM1215

34-51-41

Page 1
Sheet 1
Apr 23/2025


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-51-41

Page 1
Sheet 1
Apr 23/2025

737-8 WIRING DIAGRAM MANUAL

-C
63

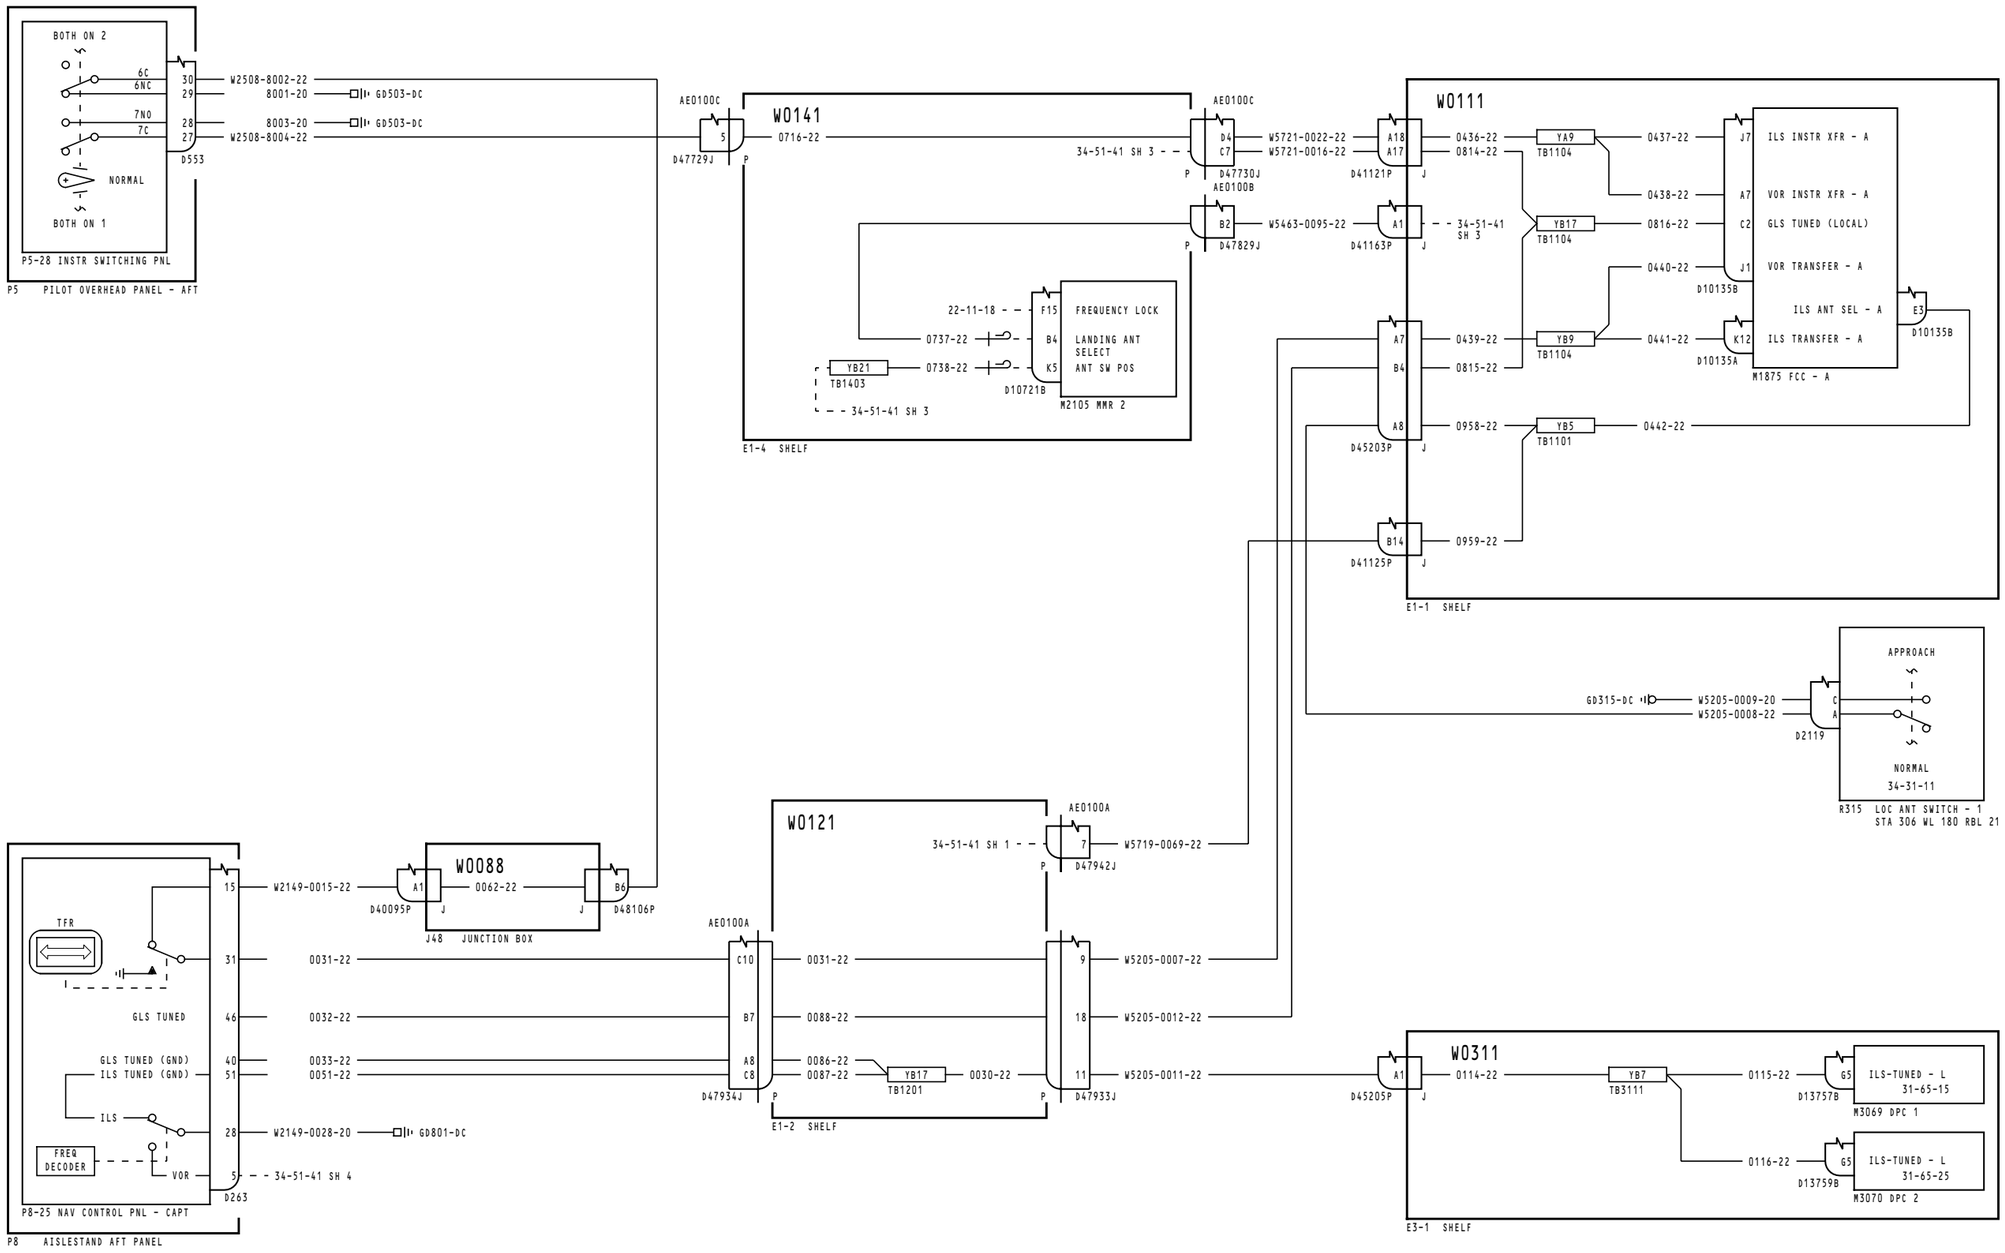


ALL	VOR/ILS INSTRUMENT TRANSFER SWITCHING
	D280AM1215

34-51-41
Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

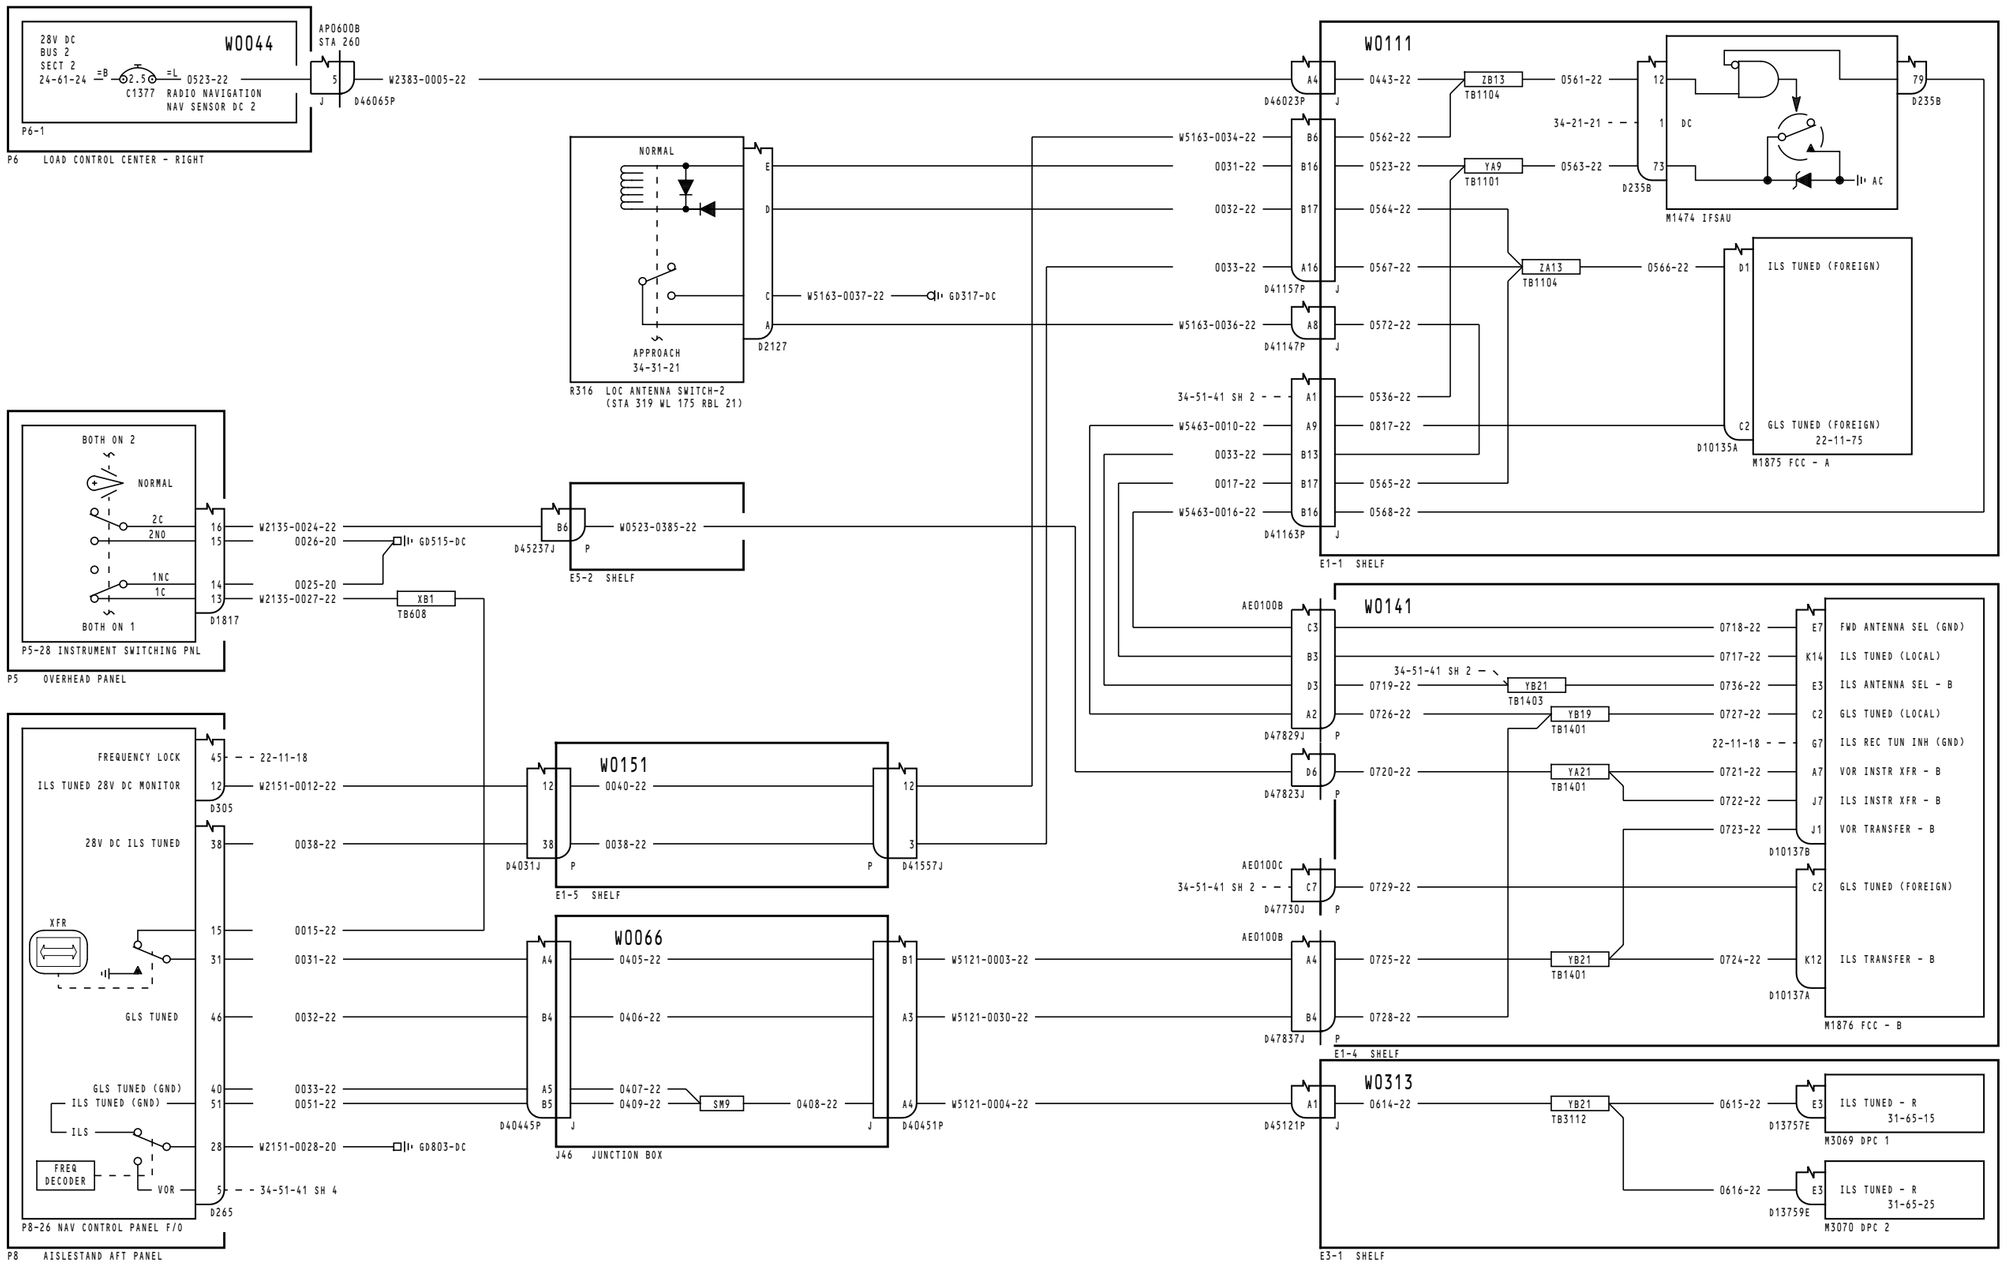


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-51-41

Page 1
Sheet 3
Apr 23/2025

737-8 WIRING DIAGRAM MANUAL

1

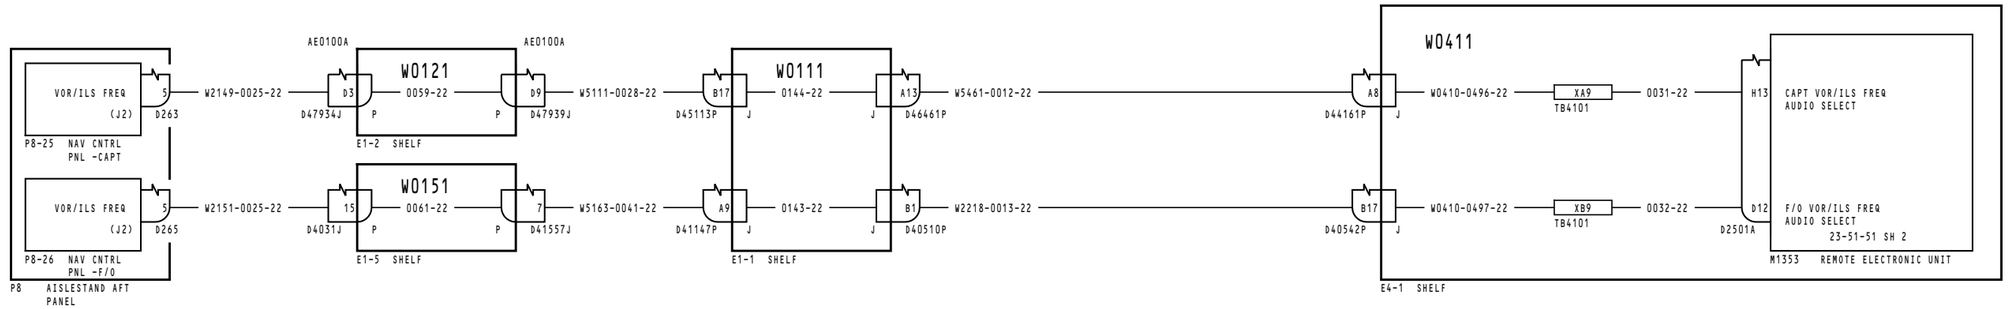


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-51-41

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL


-C
326

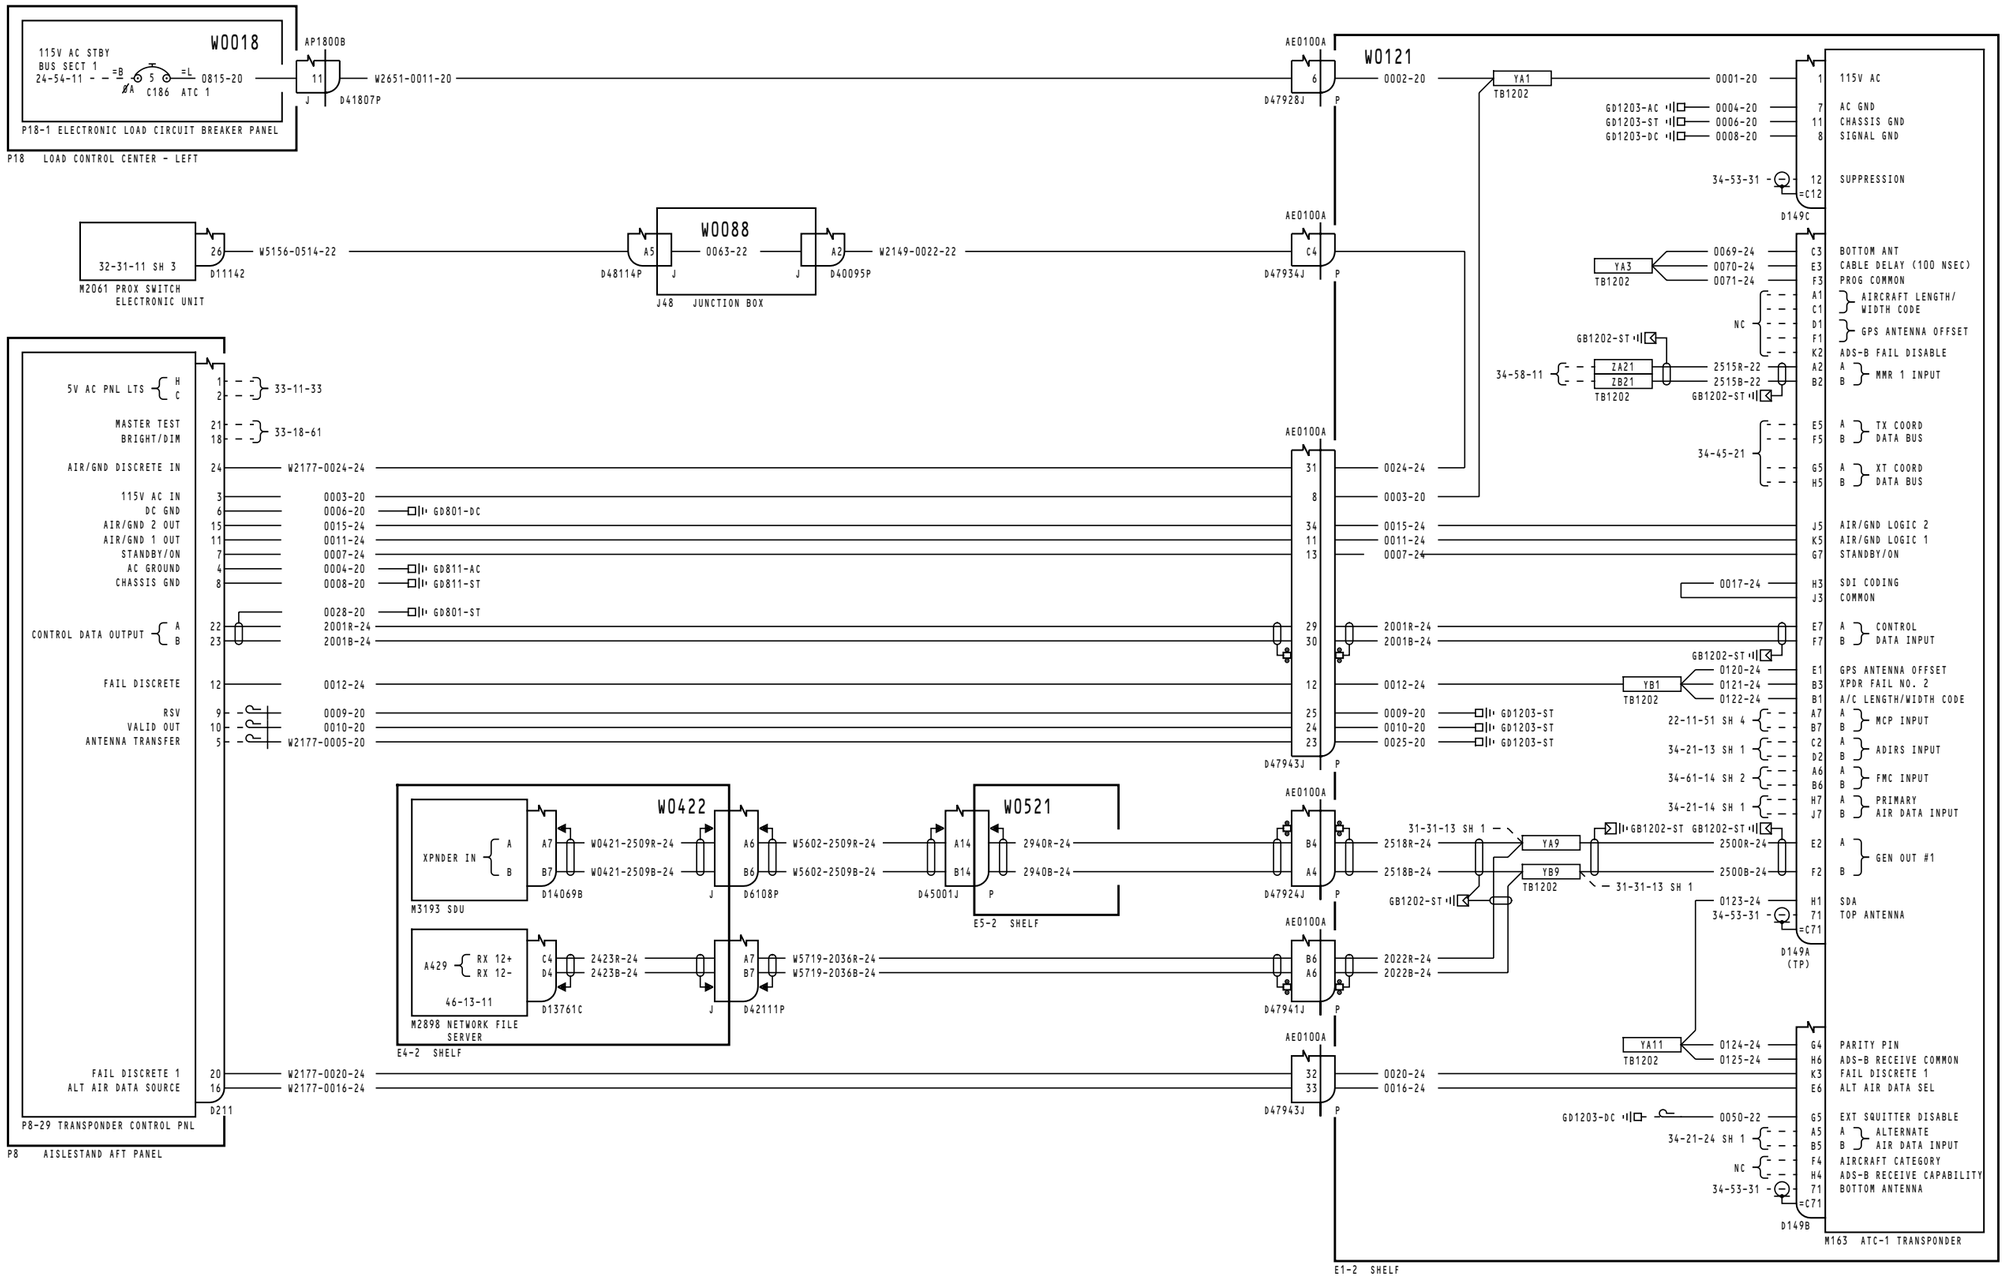

34-53-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

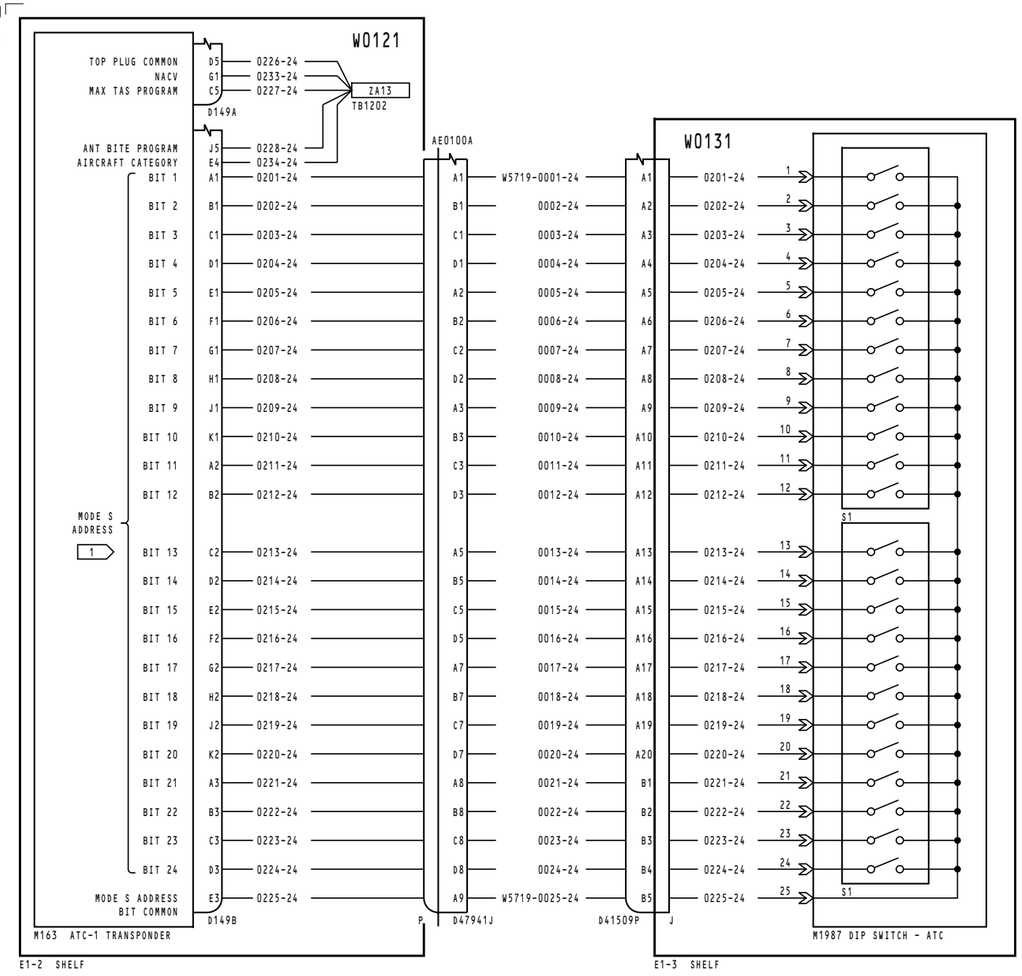

NOTES:

1 SEE CHART FOR SWITCH POSITION
LOGIC "1" SWITCH IS ON (CLOSED)
LOGIC "0" SWITCH IS OFF (OPEN)

1

ADDRESS BIT			M1987																						
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
AIRPLANE	MODE 'S' CODE		D149B AND M1987S1																						
	REGISTRY	OCTAL	A1	B1	C1	D1	E1	F1	G1	H1	J1	K1	A2	B2	C2	D2	E2	F2	G2	H2	J2	K2	A3	B3	C3	D3
1A307	EI-FYG	2312 7627	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1	1	0	0	1	0	1	1	1
1A308	EI-FYH	2312 7656	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1	1	0	1	0	1	1	1	0
1A309	LN-BKA	2174 2704	0	1	0	0	0	1	1	1	1	1	0	0	0	1	0	1	1	1	0	0	0	1	0	0
1A310	LN-BKB	2171 4506	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	1	0	1	0	0	0	1	1	0
1A311	LN-BKC	2171 4464	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	1	0	0	1	1	0	1	0	0
1A312	EI-FYI	2312 7710	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1	1	1	0	0	1	0	0	0
1A313	LN-BKD	2171 4352	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	1	1	1	0	1	0	1	0
1A314	LN-BKE	2171 4227	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	1	0	0	1	0	1	1	1
1A315	LN-BKF	2171 4061	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	0	0	1	1	0	0	0	1
1A316	SE-RTA	2254 5201	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	0	1
1A317	SE-RTB	2254 5202	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	1	0
1A318	SE-RTC	2254 5203	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	1	1
1A319	EI-GZA	2312 6363	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	0	1	1
1A321	EI-GZB	2312 6364	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	1	0	0
1A323	EI-GZC	2312 6365	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	1	0	1
1A324	EI-GZF	2312 6370	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	1	0	0	0
1A325	EI-GZE	2312 6367	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	1	1	1

737-8 WIRING DIAGRAM MANUAL


34-53-11

Page 1
Sheet 2
May 28/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
207

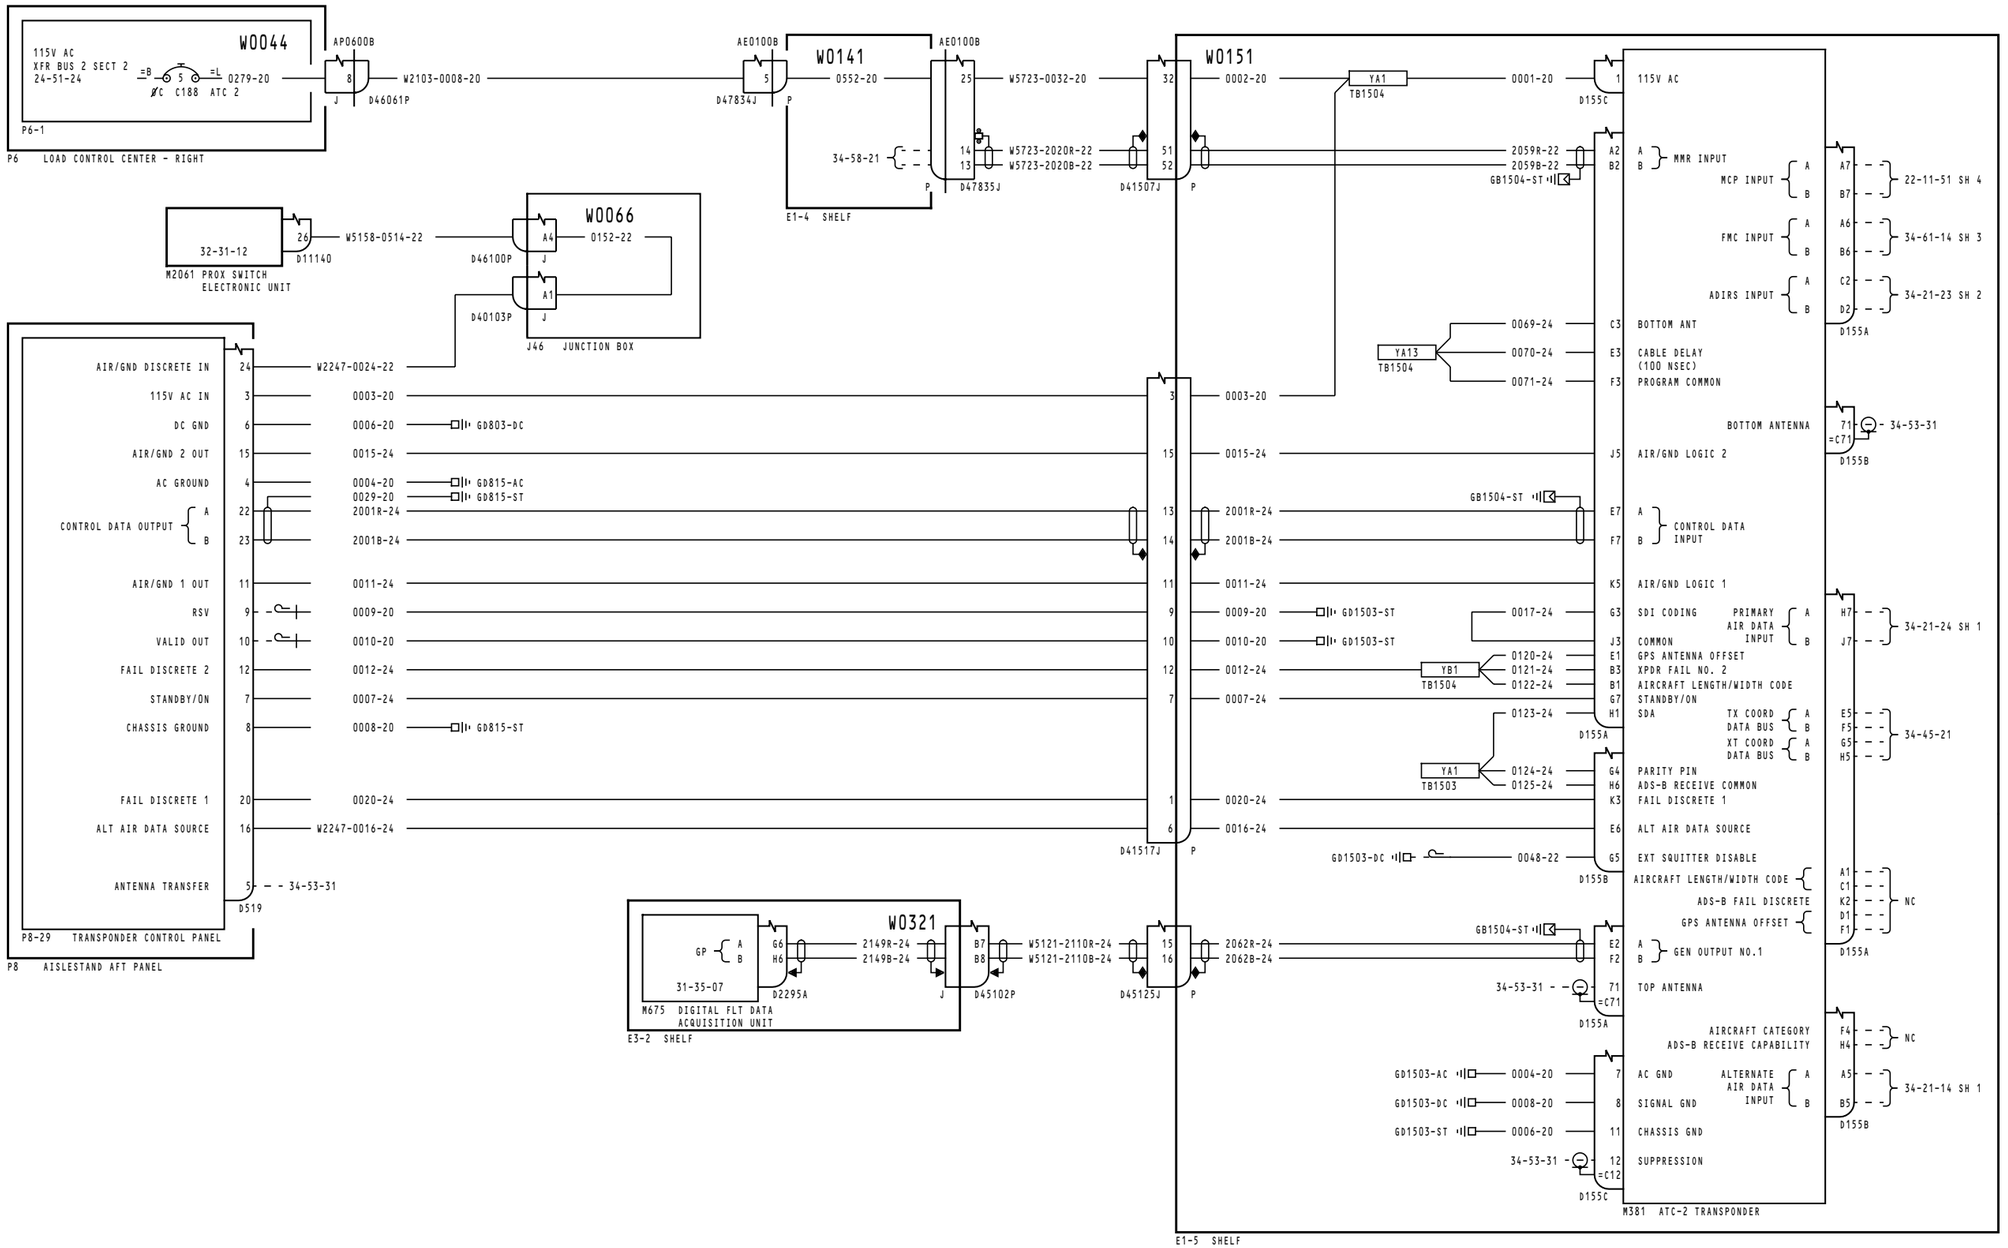


34-53-21

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

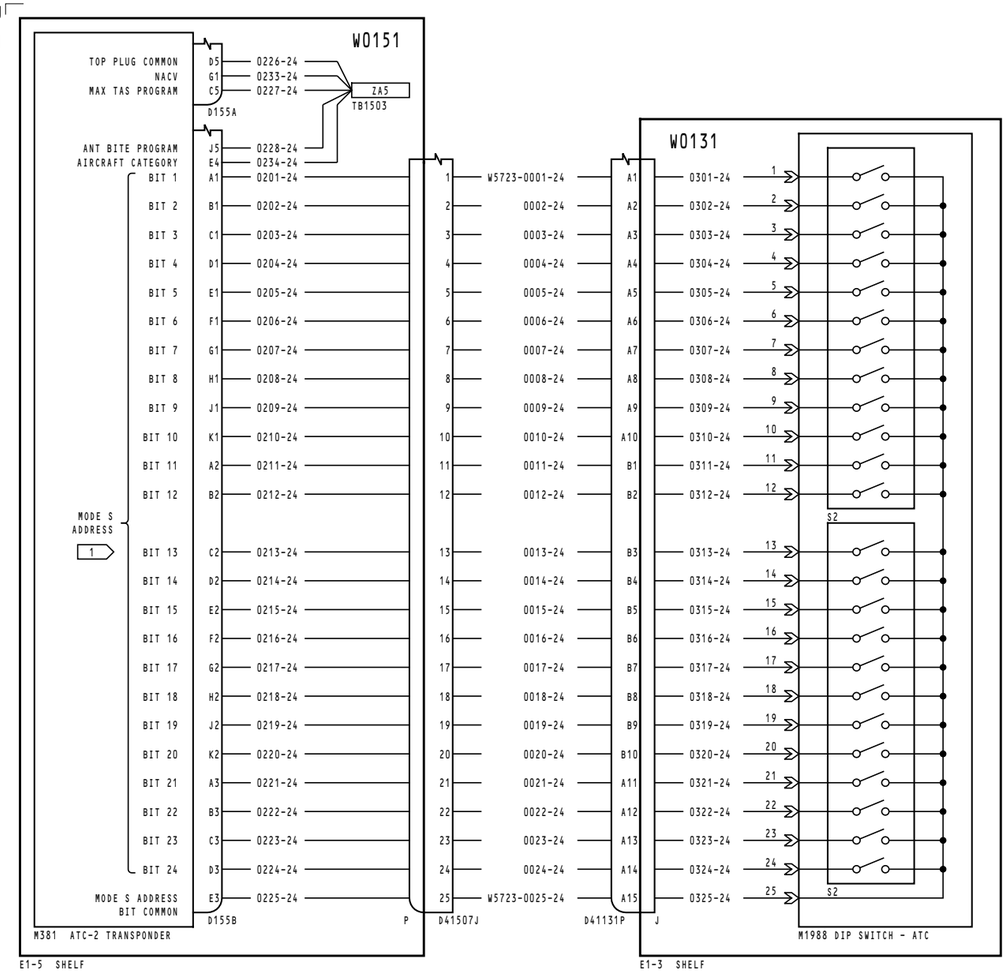

NOTES:

1 SEE CHART FOR SWITCH POSITION
LOGIC "1" SWITCH IS ON (CLOSED)
LOGIC "0" SWITCH IS OFF (OPEN)

1


ADDRESS BIT			M1988																						
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
AIRPLANE	MODE 'S' CODE		D155B AND M1988S2																						
	REGISTRY	OCTAL	A1	B1	C1	D1	E1	F1	G1	H1	J1	K1	A2	B2	C2	D2	E2	F2	G2	H2	J2	K2	A3	B3	C3	D3
1A307	EI-FYG	2312 7627	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1	1	0	0	1	0	1	1	1
1A308	EI-FYH	2312 7656	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1	1	0	1	0	1	1	1	0
1A309	LN-BKA	2174 2704	0	1	0	0	0	1	1	1	1	1	0	0	0	1	0	1	1	1	0	0	0	1	0	0
1A310	LN-BKB	2171 4506	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	1	0	1	0	0	0	1	1	0
1A311	LN-BKC	2171 4464	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	1	0	0	1	1	0	1	0	0
1A312	EI-FYI	2312 7710	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1	1	1	0	0	1	0	0	0
1A313	LN-BKD	2171 4352	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	1	1	1	0	1	0	1	0
1A314	LN-BKE	2171 4227	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	1	0	0	1	0	1	1	1
1A315	LN-BKF	2171 4061	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	0	0	1	1	0	0	0	1
1A316	SE-RTA	2254 5201	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	0	1
1A317	SE-RTB	2254 5202	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	1	0
1A318	SE-RTC	2254 5203	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	1	1
1A319	EI-GZA	2312 6363	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	0	1	1
1A321	EI-GZB	2312 6364	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	1	0	0
1A323	EI-GZC	2312 6365	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	1	0	1
1A324	EI-GZF	2312 6370	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	1	0	0	0
1A325	EI-GZE	2312 6367	0	1	0	0	1	1	0	0	1	0	1	0	1	1	0	0	1	1	1	1	0	1	1	1

34-53-21

Page 1
Sheet 2
May 28/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

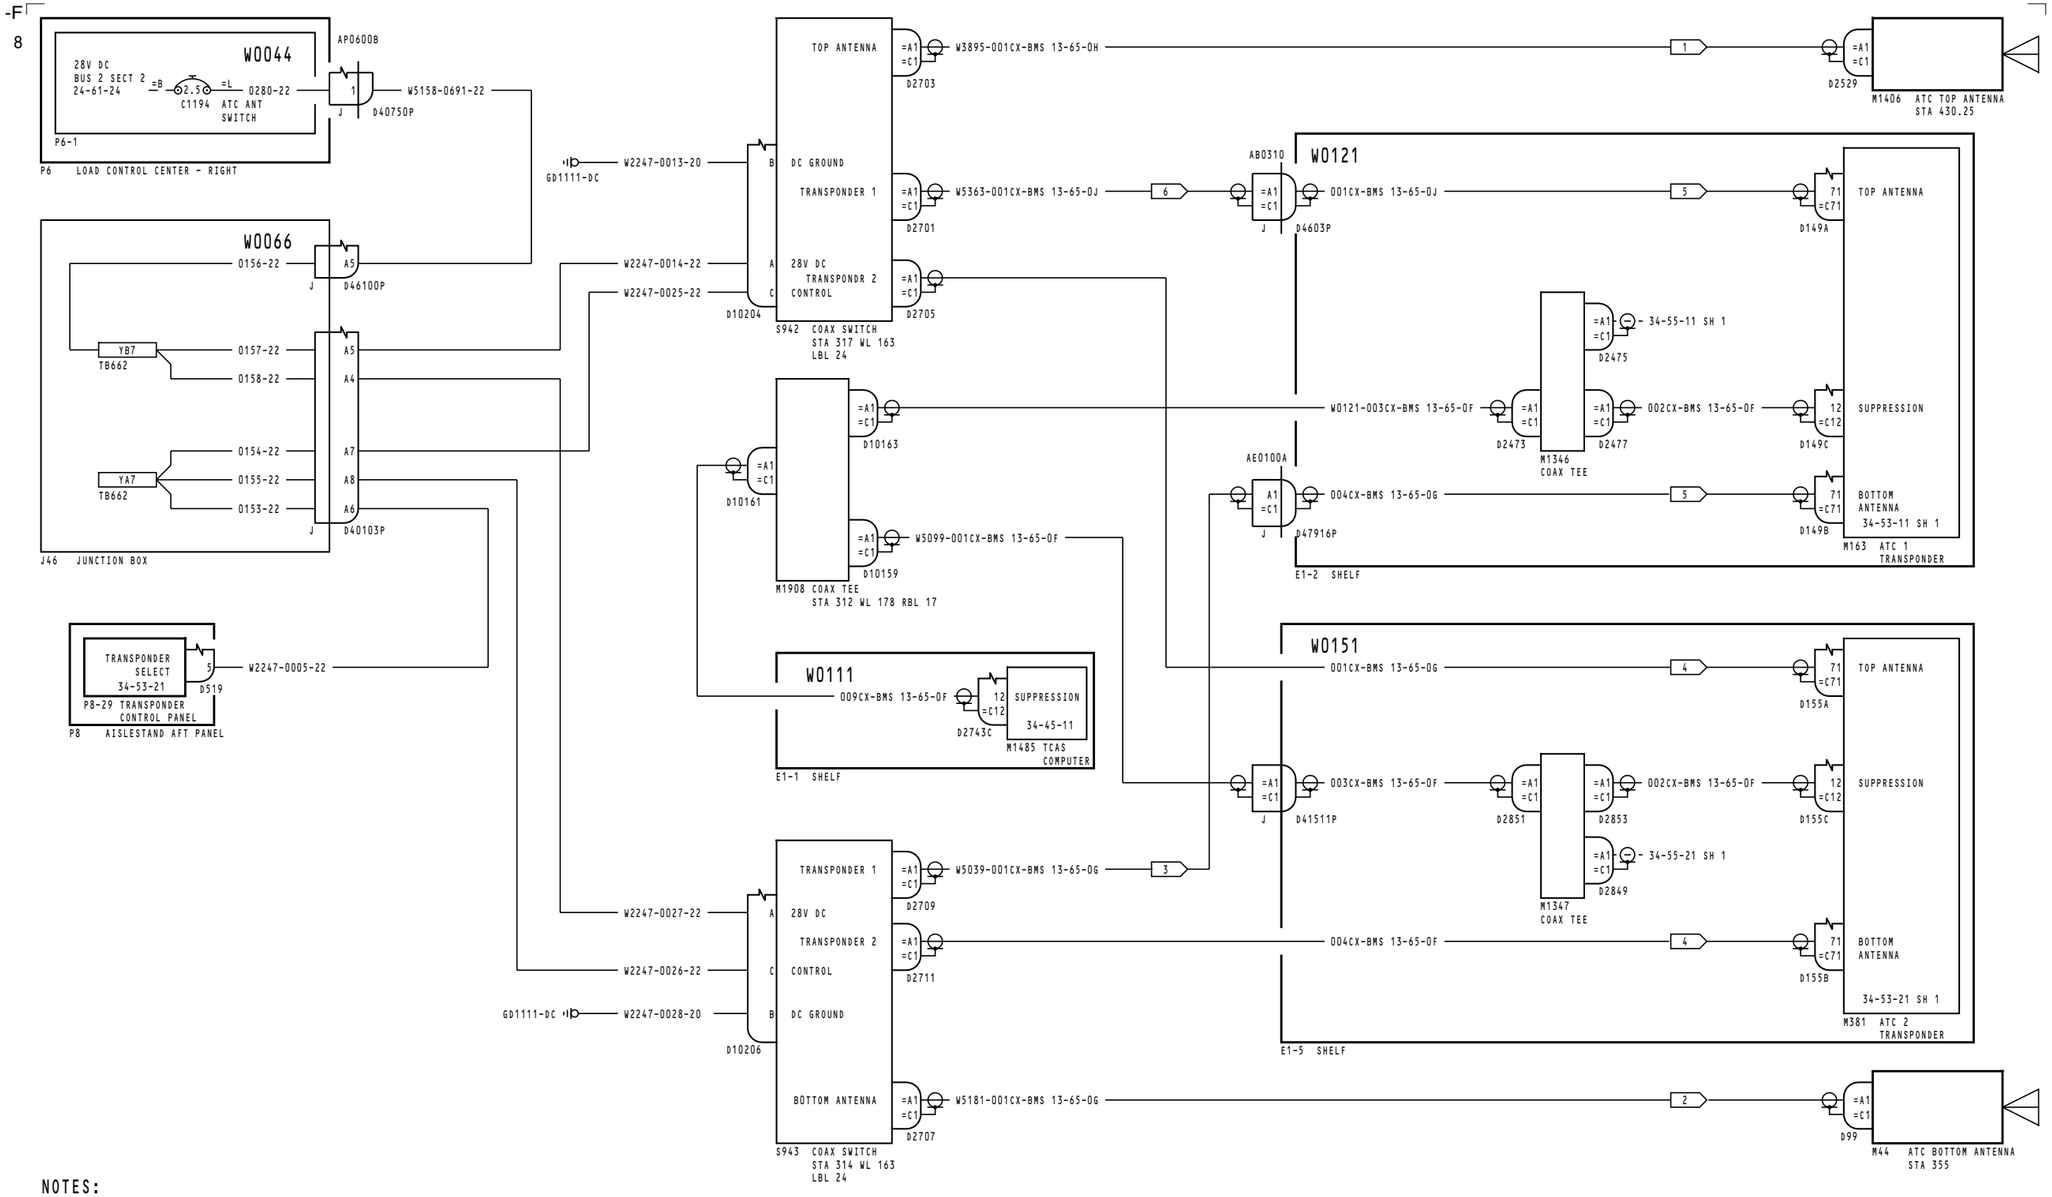

NOTES:

1. MAX LENGTH 29 FEET AND 6 INCHES.
2. MAX LENGTH 6 FEET AND 6 INCHES.
3. MAX LENGTH 8 FEET AND 1 INCH.
4. MAX LENGTH 2 FEET 7 INCHES.
5. MAX LENGTH 3 FEET AND 6 INCHES.
6. MAX LENGTH 8 FEET AND 1 INCH.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-53-31

Page 1

Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

-B
70

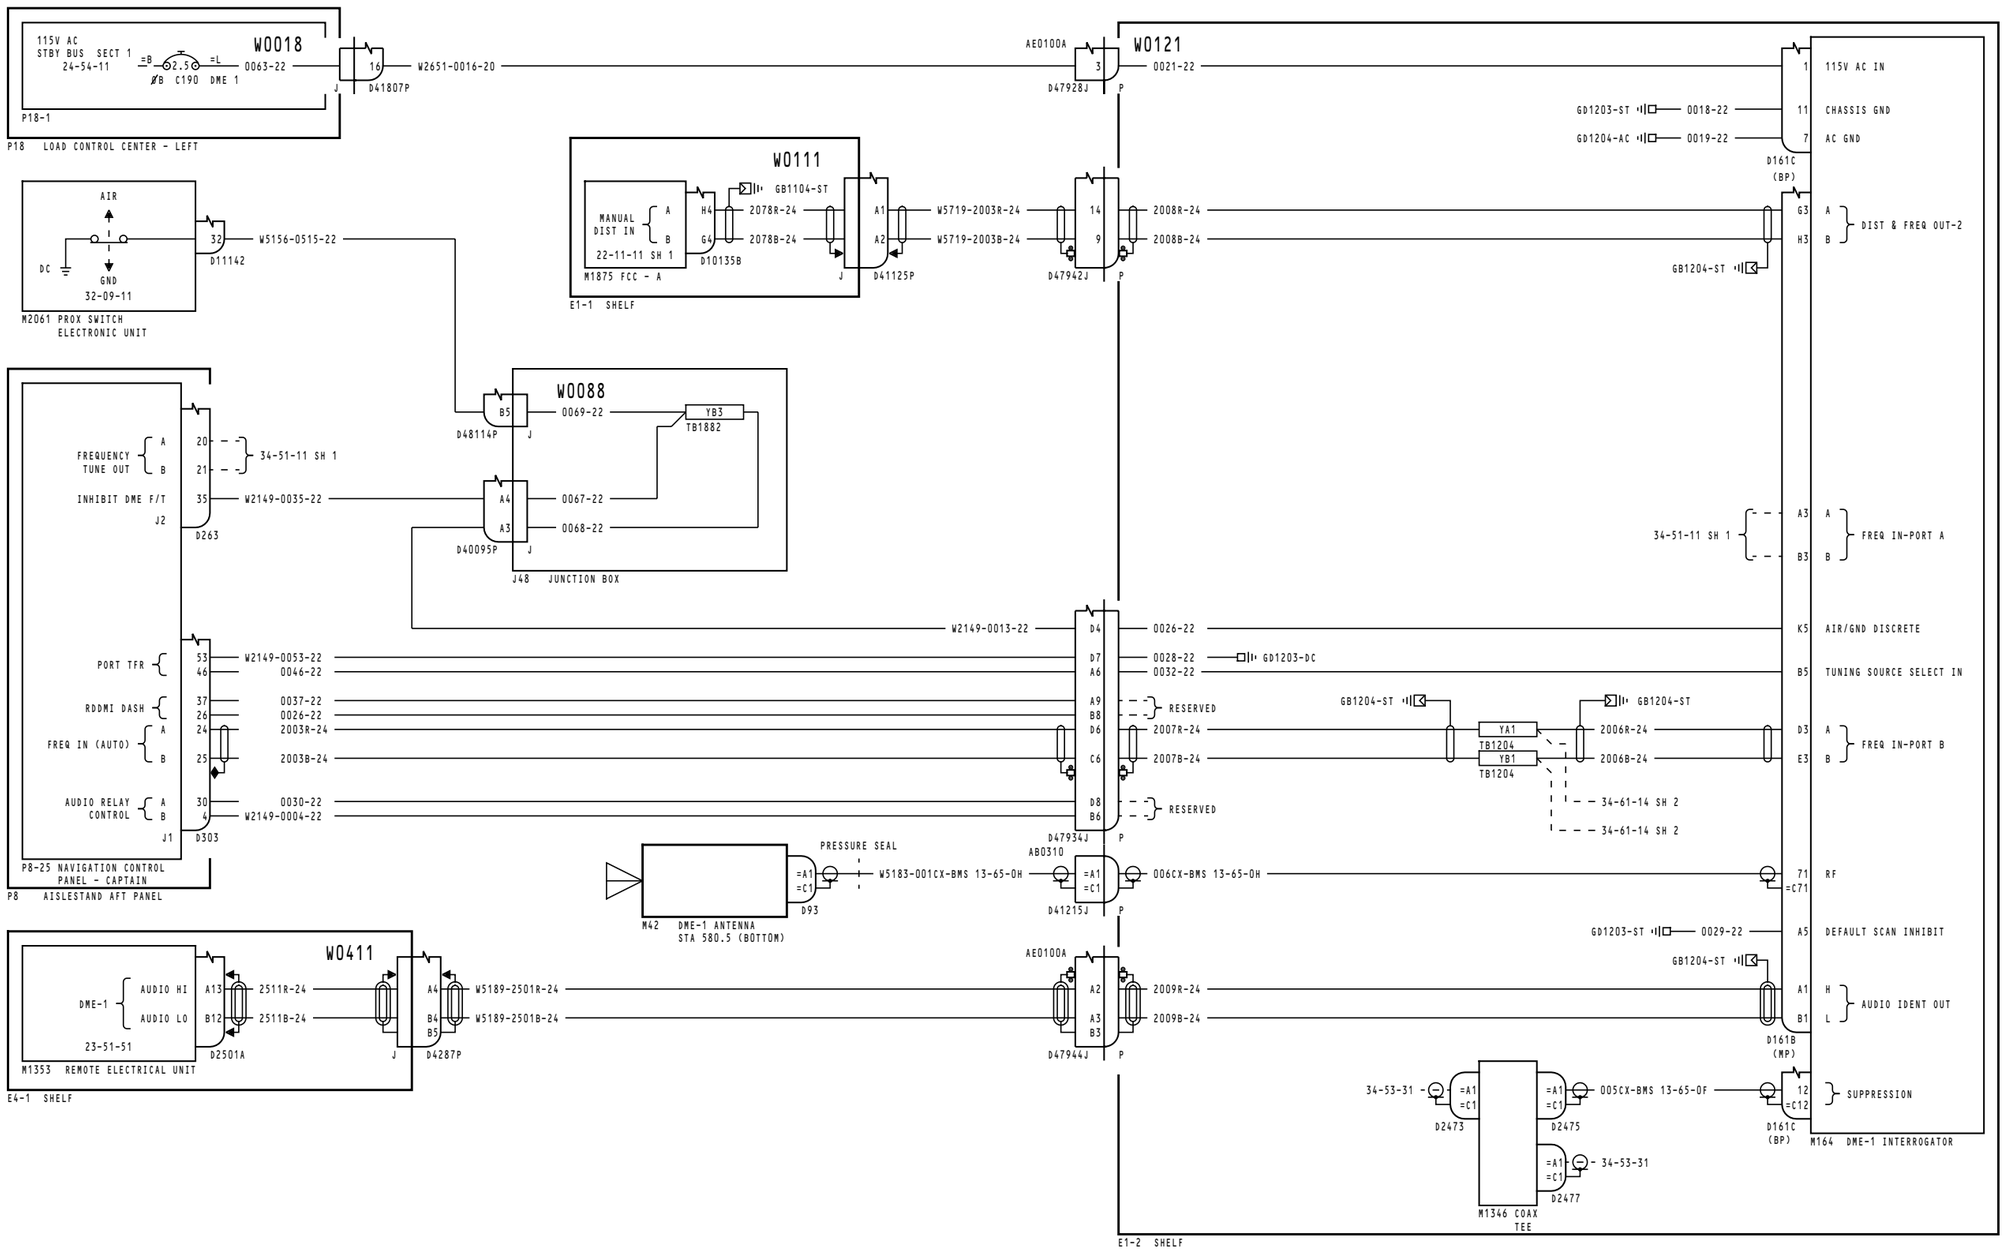


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-55-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

62

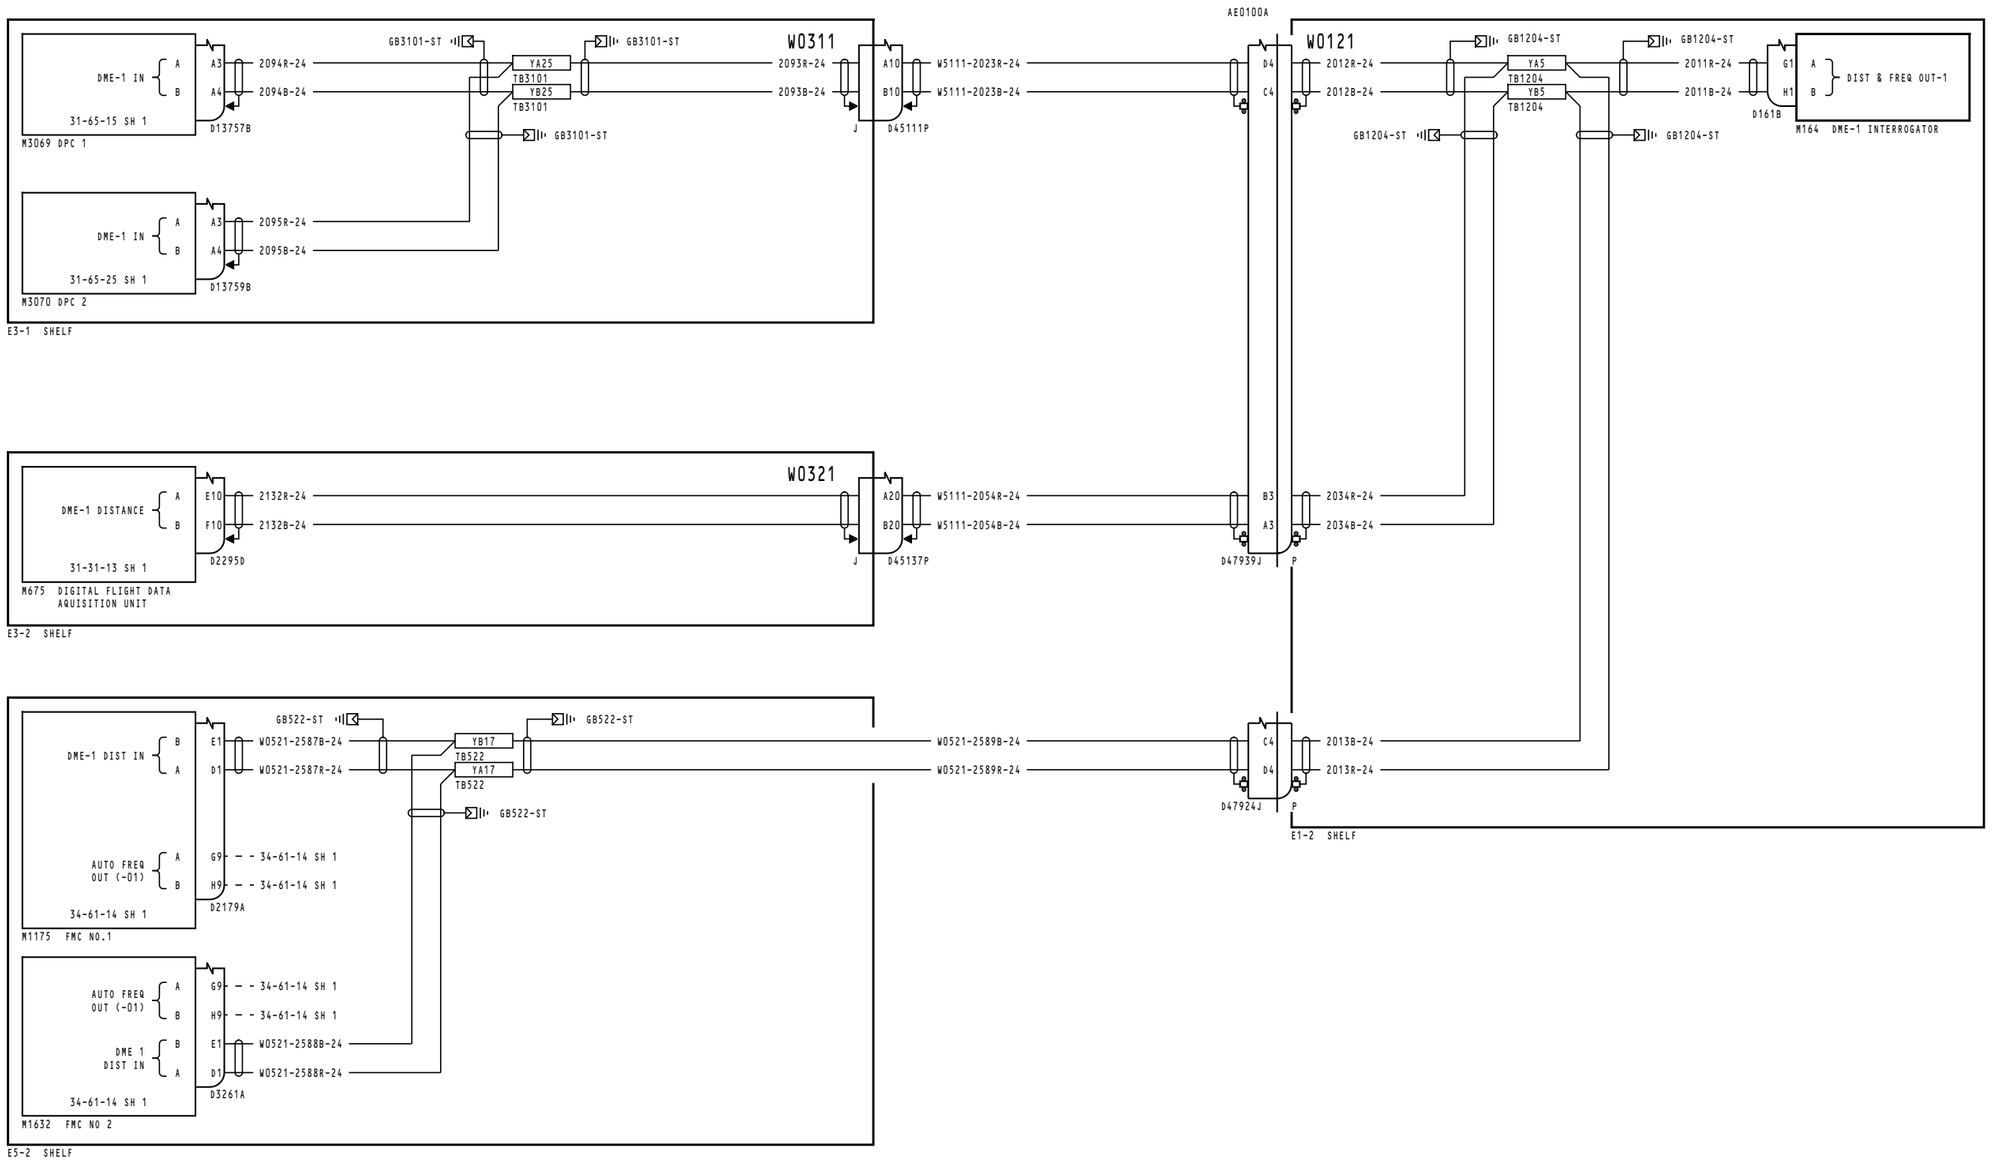


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-55-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
33

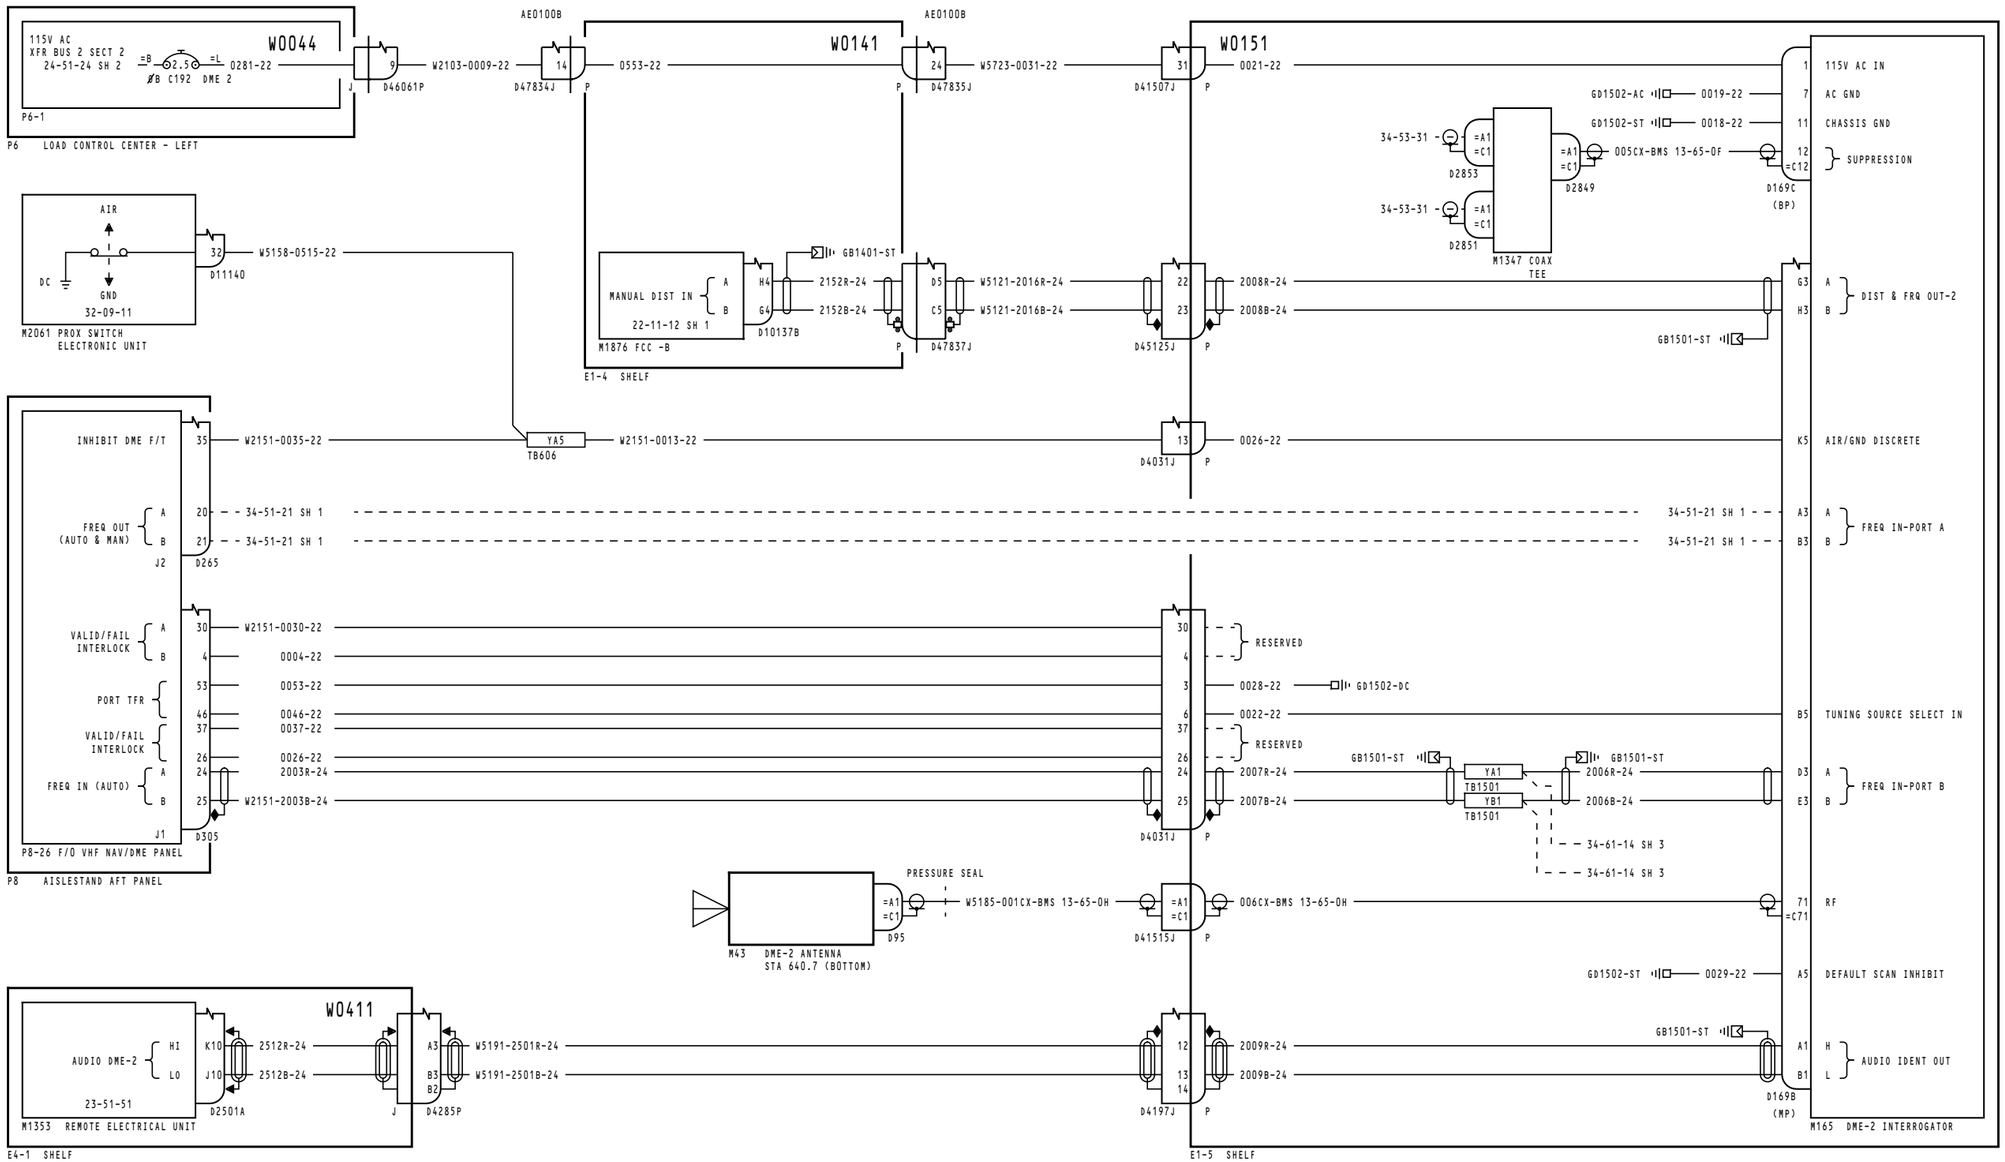


ALL	DME NO. 2	34-55-21	34-55-21
	D280AM1215	Page 1 Sheet 1 Sep 15/2025	Page 1 Sheet 1 Sep 15/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
36

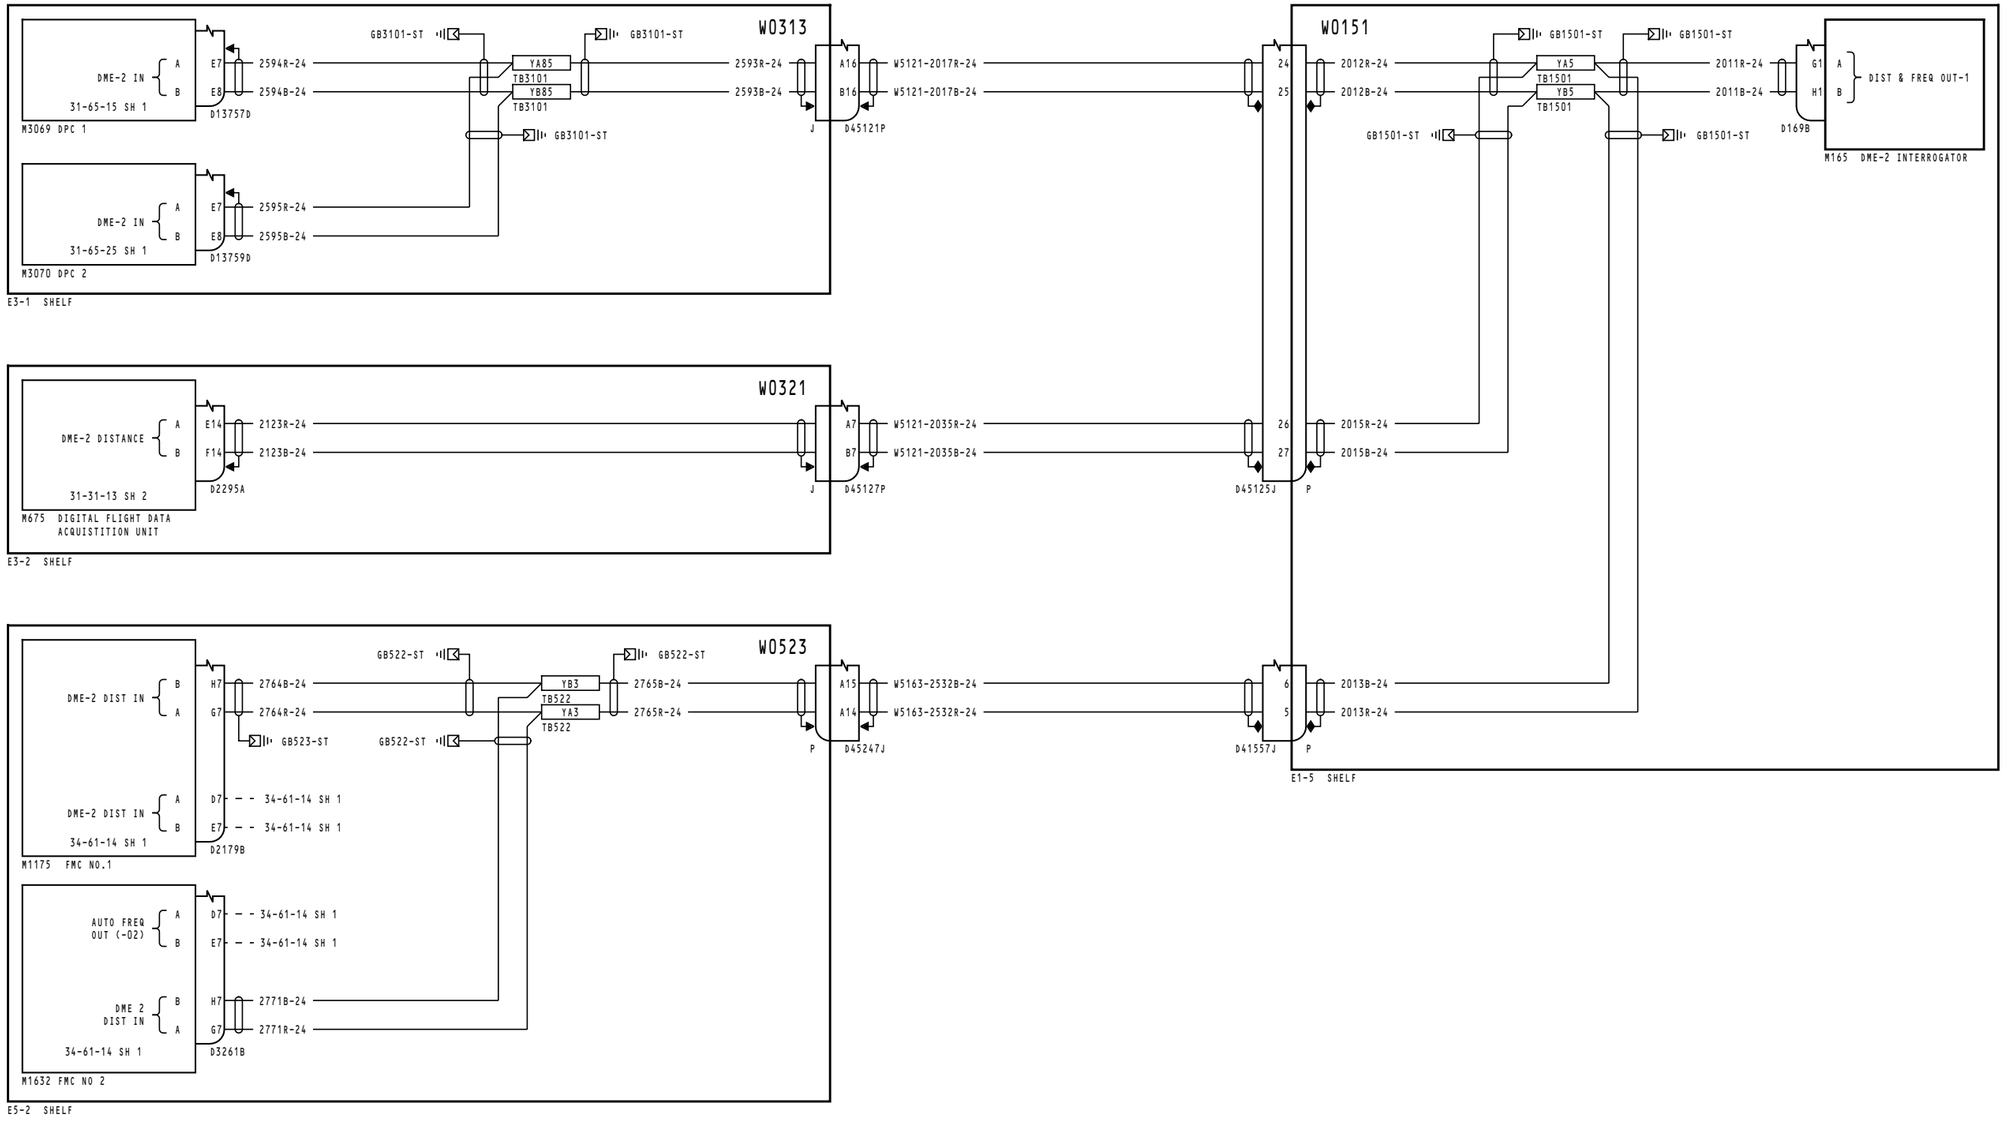


34-55-21

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
88

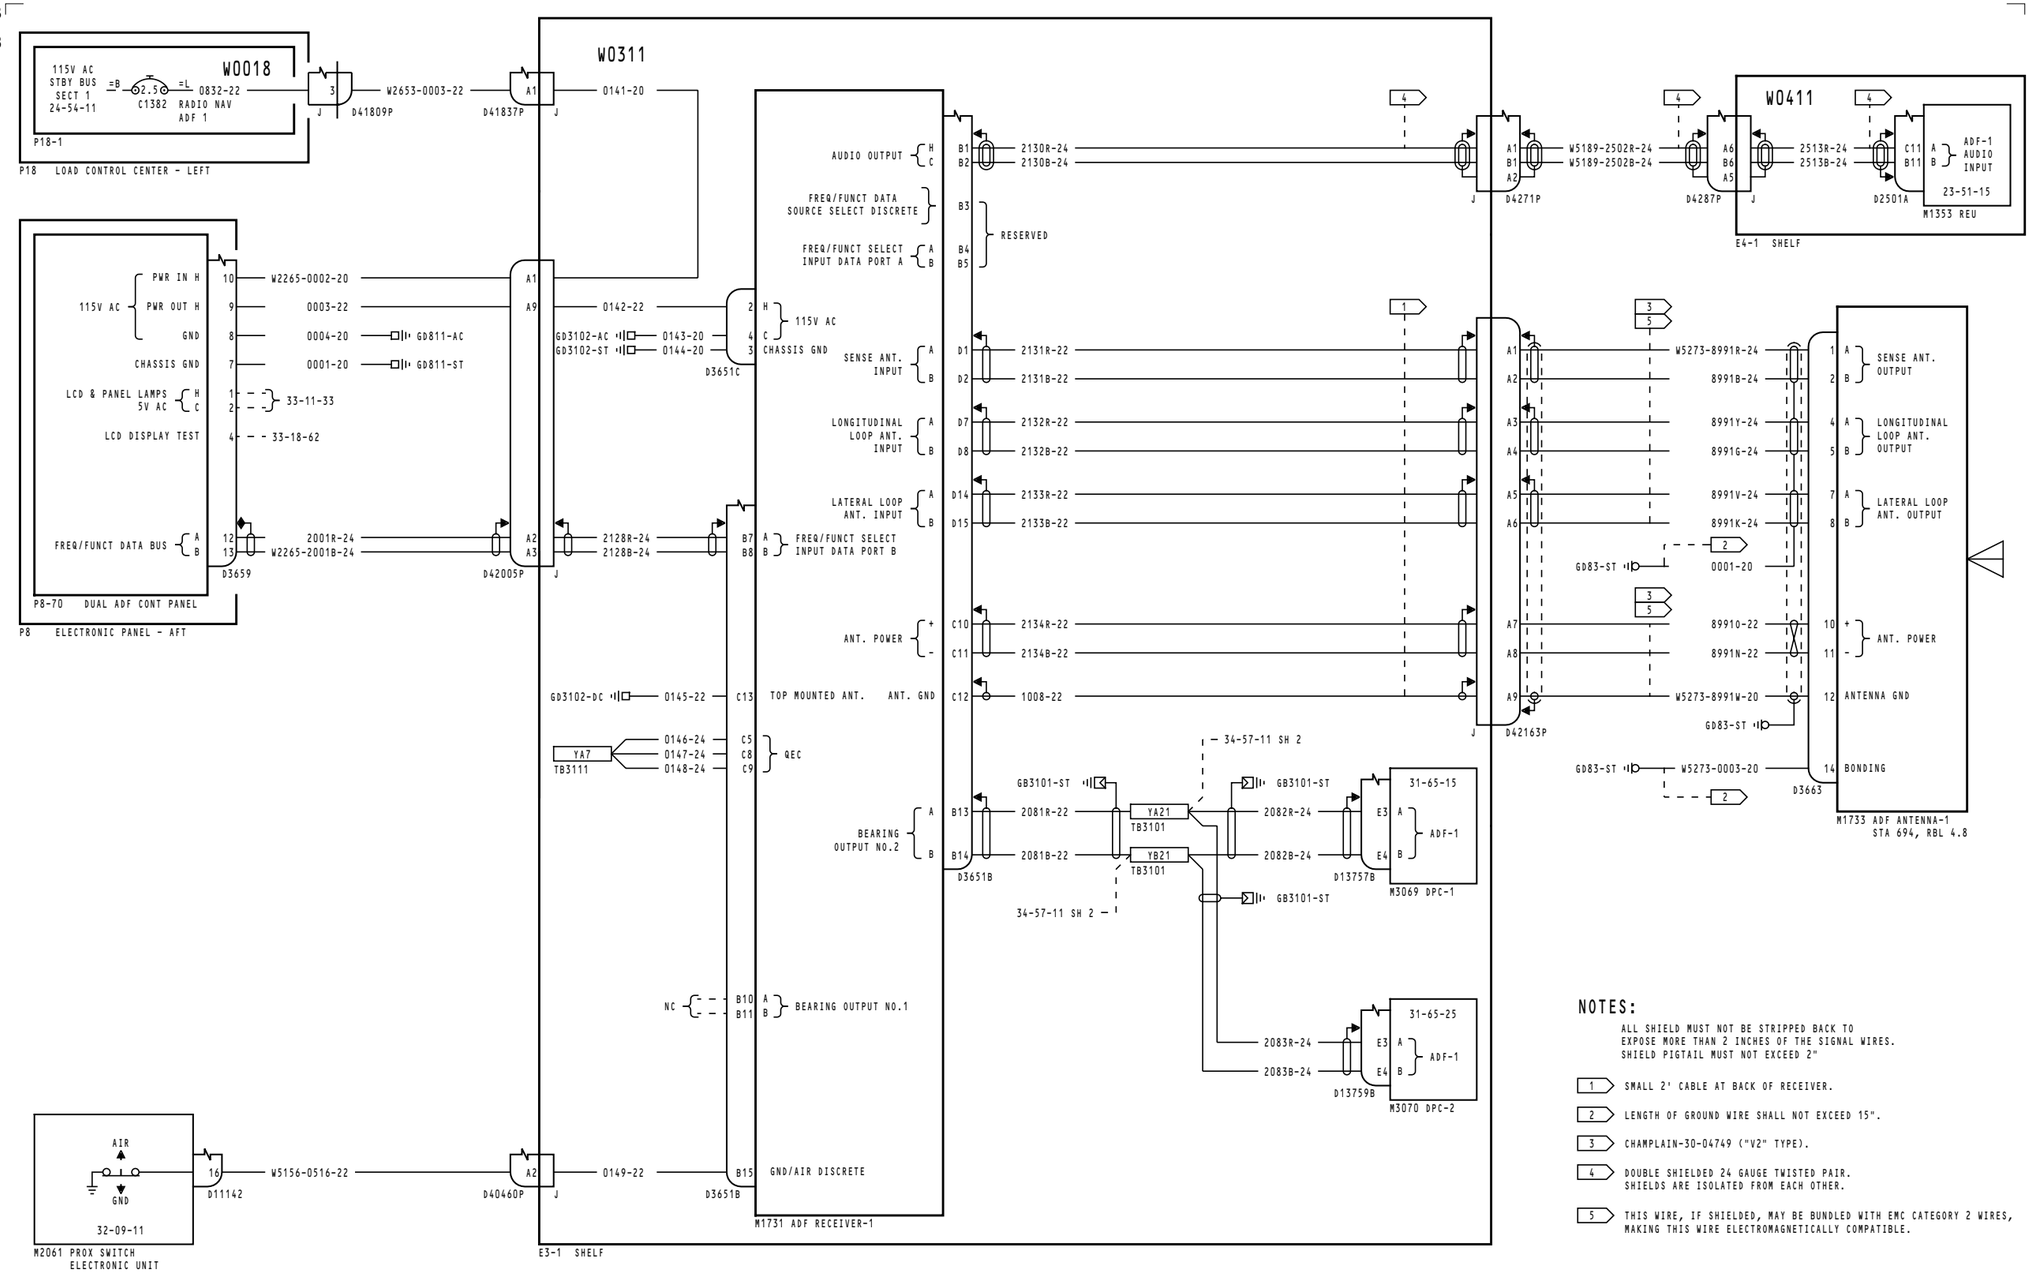

NOTES:

ALL SHIELD MUST NOT BE STRIPPED BACK TO EXPOSE MORE THAN 2 INCHES OF THE SIGNAL WIRES. SHIELD PIGTAIL MUST NOT EXCEED 2"

1. SMALL 2' CABLE AT BACK OF RECEIVER.
2. LENGTH OF GROUND WIRE SHALL NOT EXCEED 15".
3. CHAMPLAIN-30-04749 ("V2" TYPE).
4. DOUBLE SHIELDED 24 GAUGE TWISTED PAIR. SHIELDS ARE ISOLATED FROM EACH OTHER.
5. THIS WIRE, IF SHIELDED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES, MAKING THIS WIRE ELECTROMAGNETICALLY COMPATIBLE.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-57-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
4

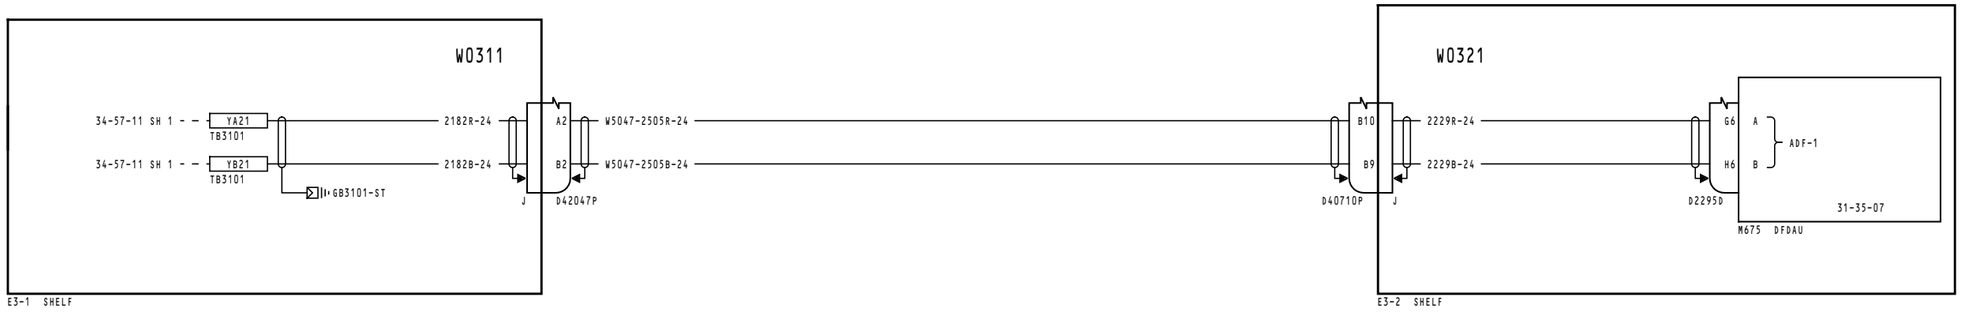

ALL

ADF-1

D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-57-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
131

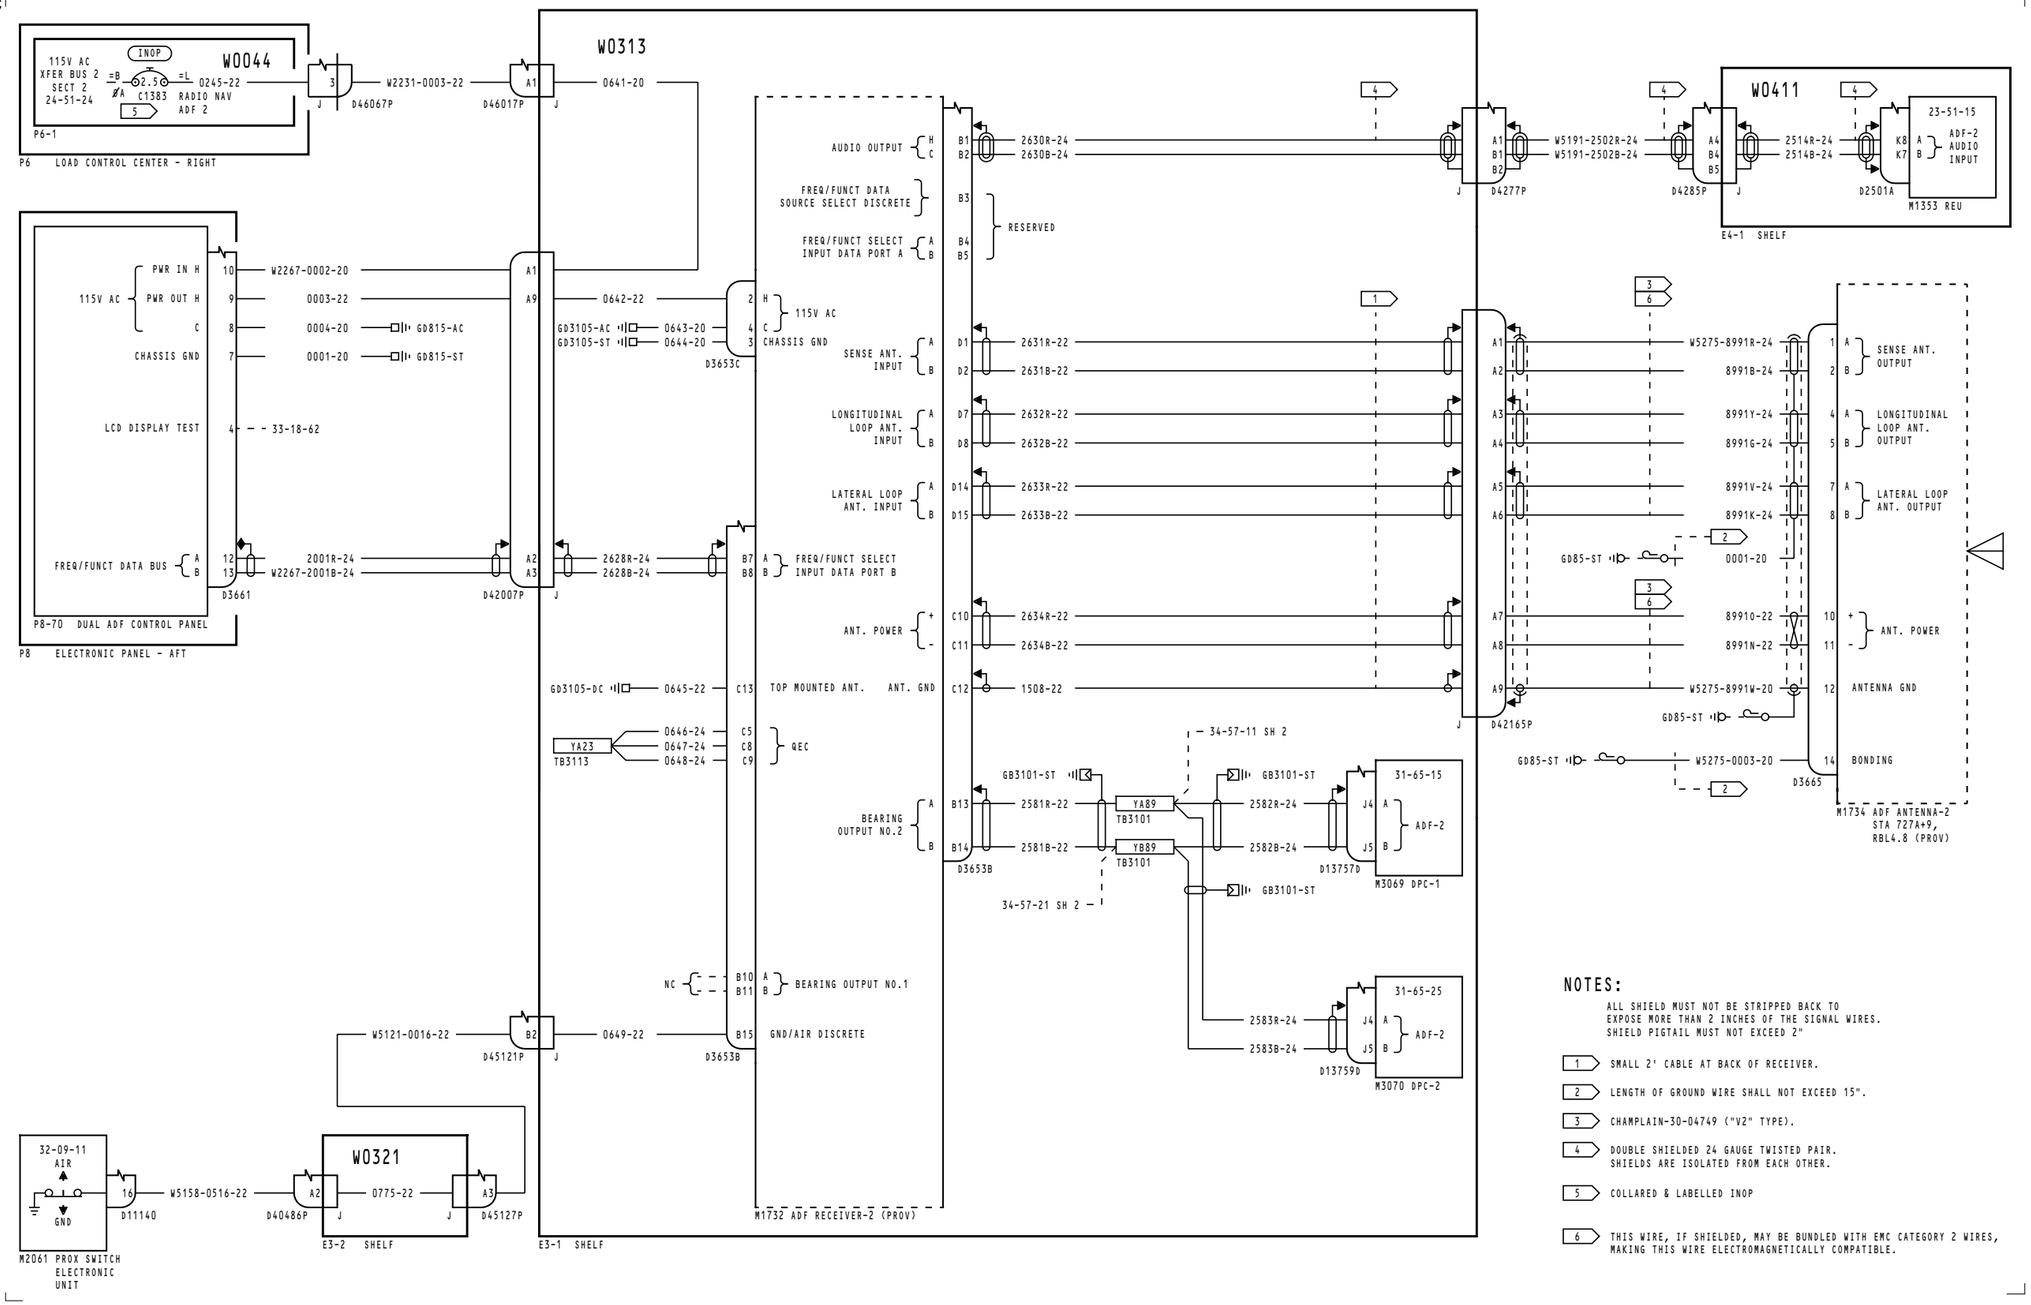

NOTES:

ALL SHIELD MUST NOT BE STRIPPED BACK TO EXPOSE MORE THAN 2 INCHES OF THE SIGNAL WIRES. SHIELD PIGTAIL MUST NOT EXCEED 2"

1. SMALL 2' CABLE AT BACK OF RECEIVER.
2. LENGTH OF GROUND WIRE SHALL NOT EXCEED 15".
3. CHAMPLAIN-30-04749 ("V2" TYPE).
4. DOUBLE SHIELDED 24 GAUGE TWISTED PAIR. SHIELDS ARE ISOLATED FROM EACH OTHER.
5. COLLARED & LABELLED INOP
6. THIS WIRE, IF SHIELDED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES, MAKING THIS WIRE ELECTROMAGNETICALLY COMPATIBLE.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-57-21

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

5

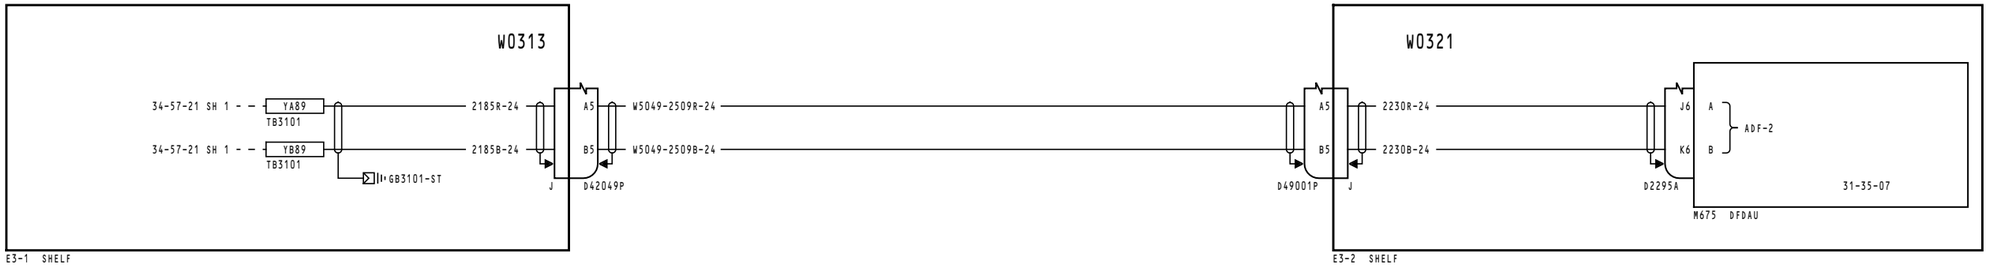

ALL

ADF-2

D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-57-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
472

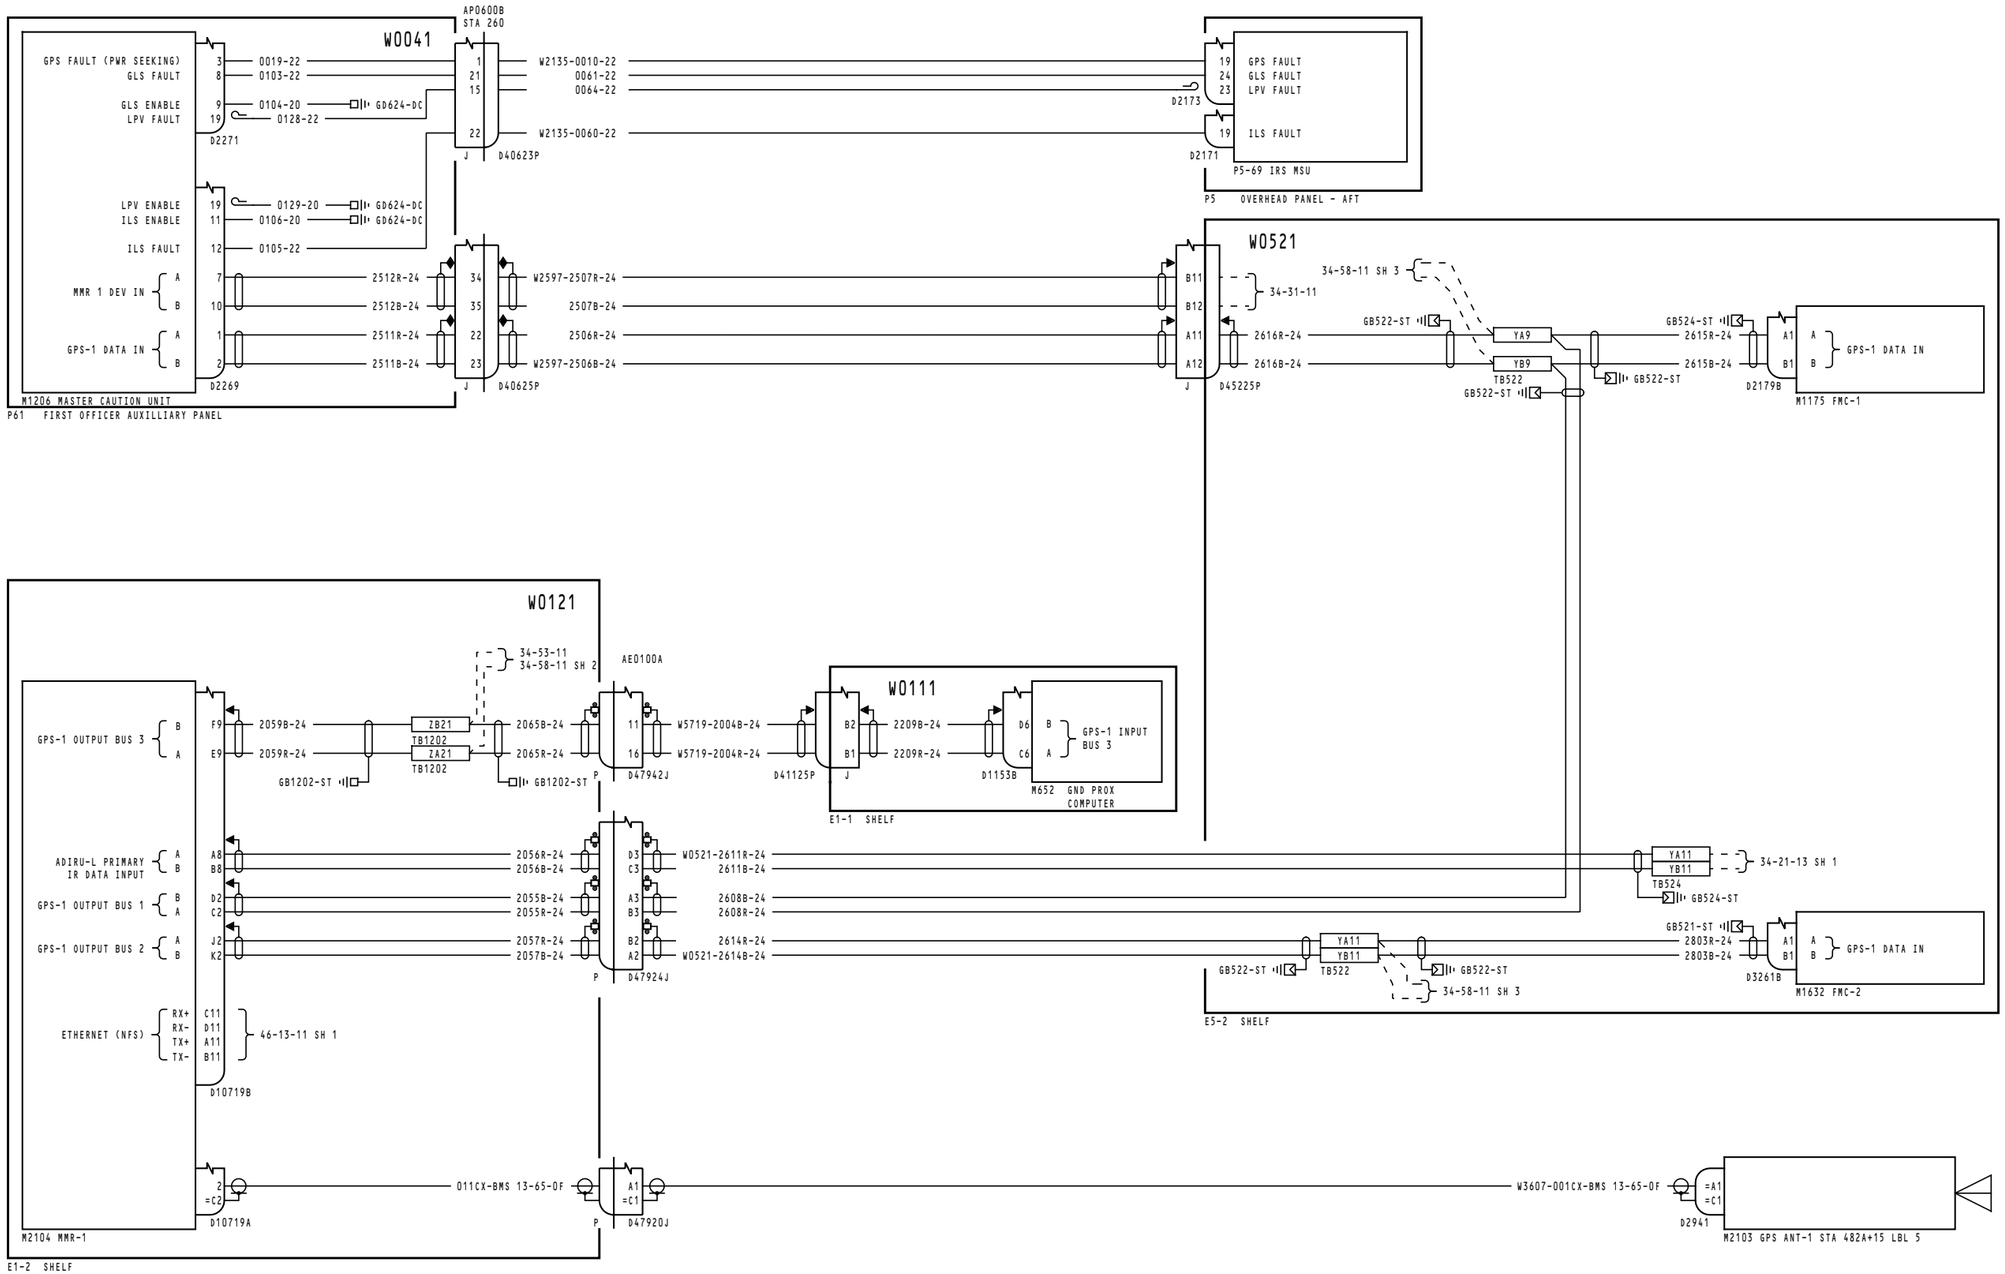


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-58-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

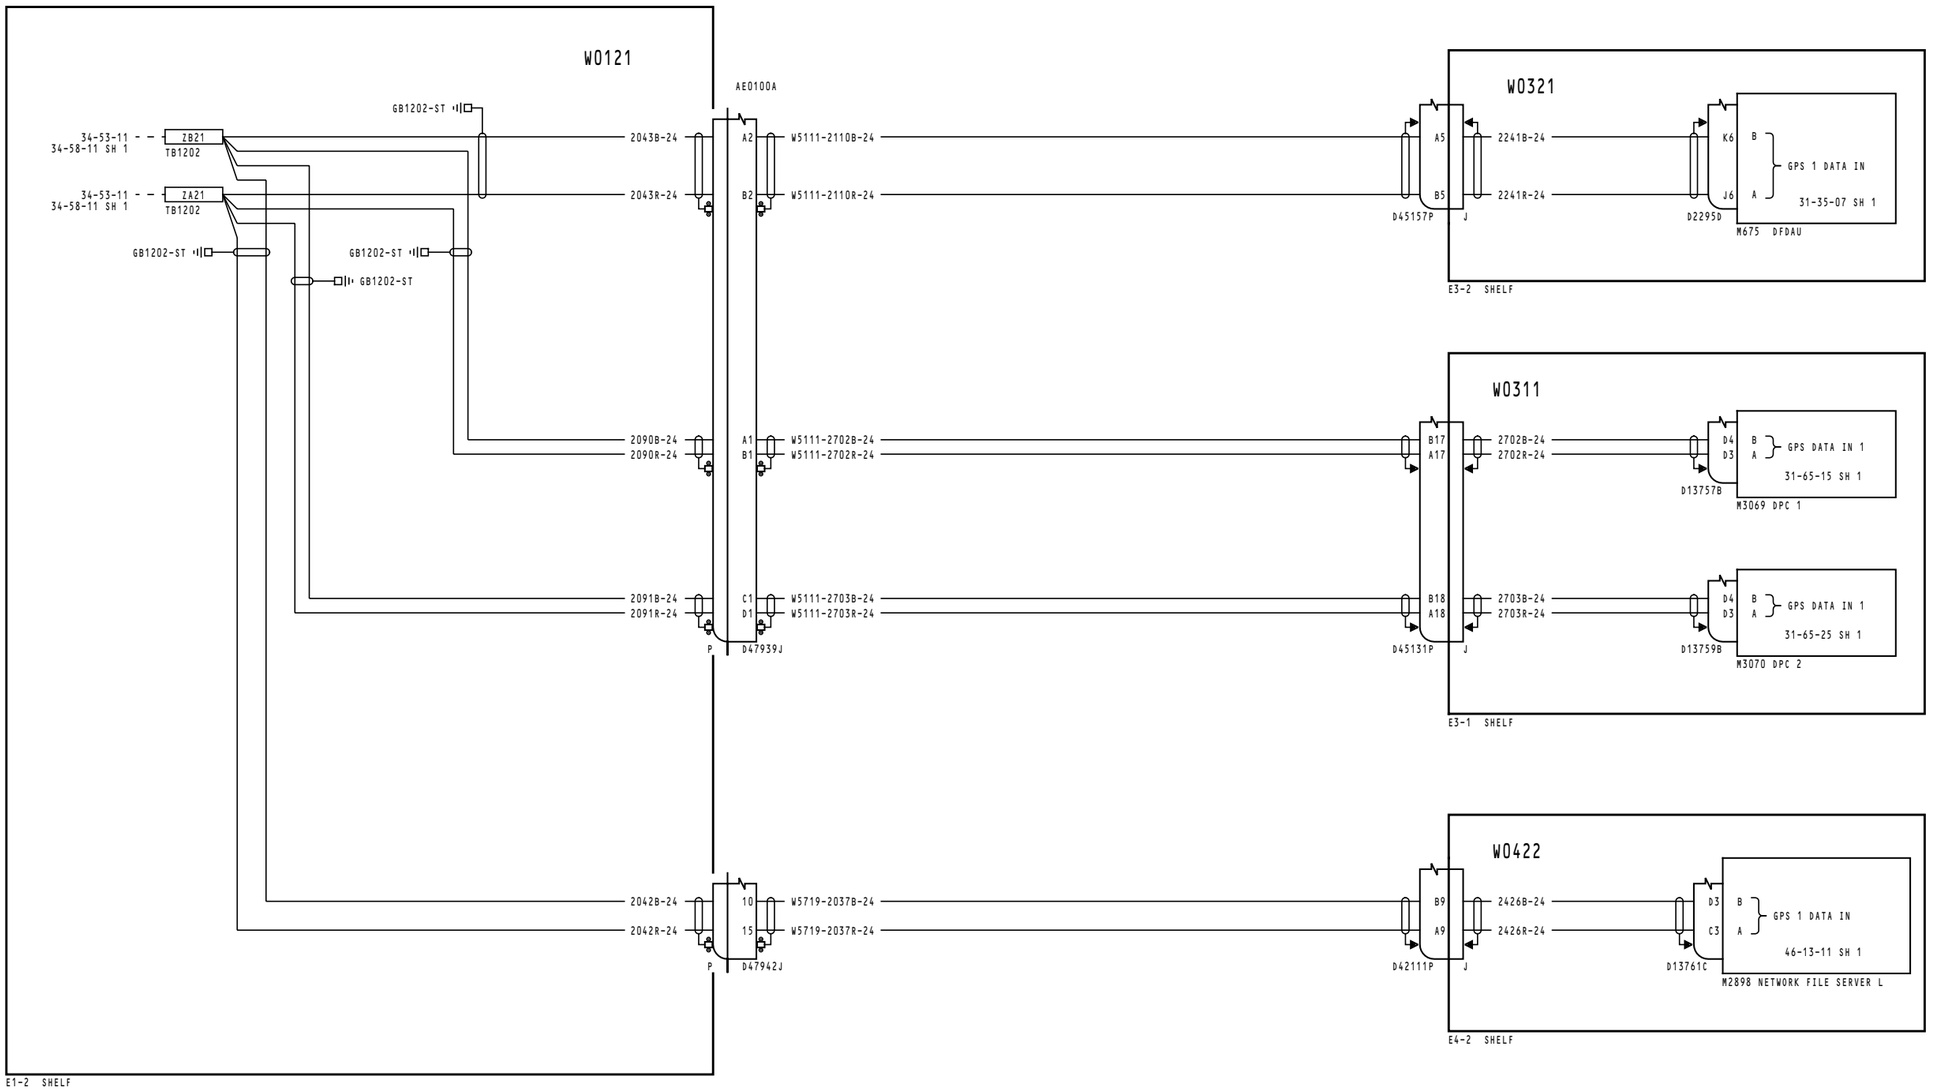

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-58-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A

4

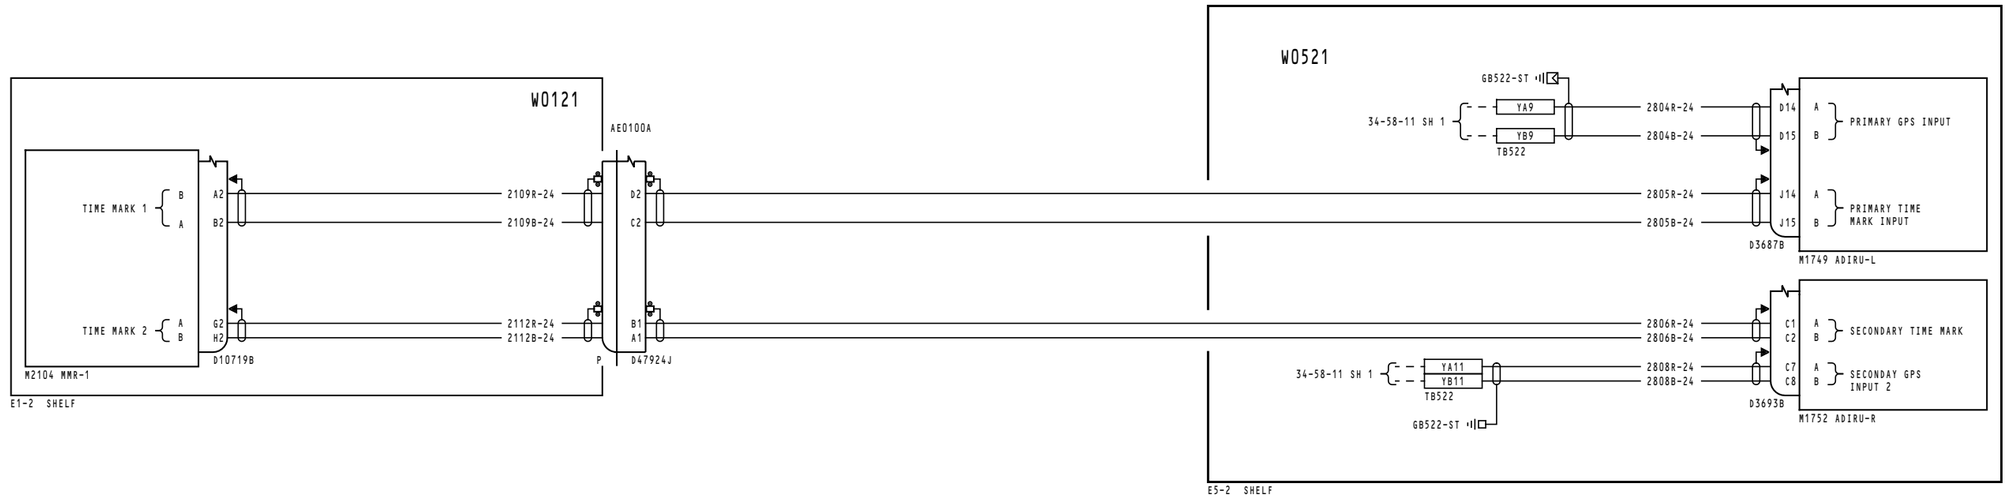

ALL

GLOBAL POSITIONING SYSTEM SENSOR UNIT NO.1

D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-58-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
354

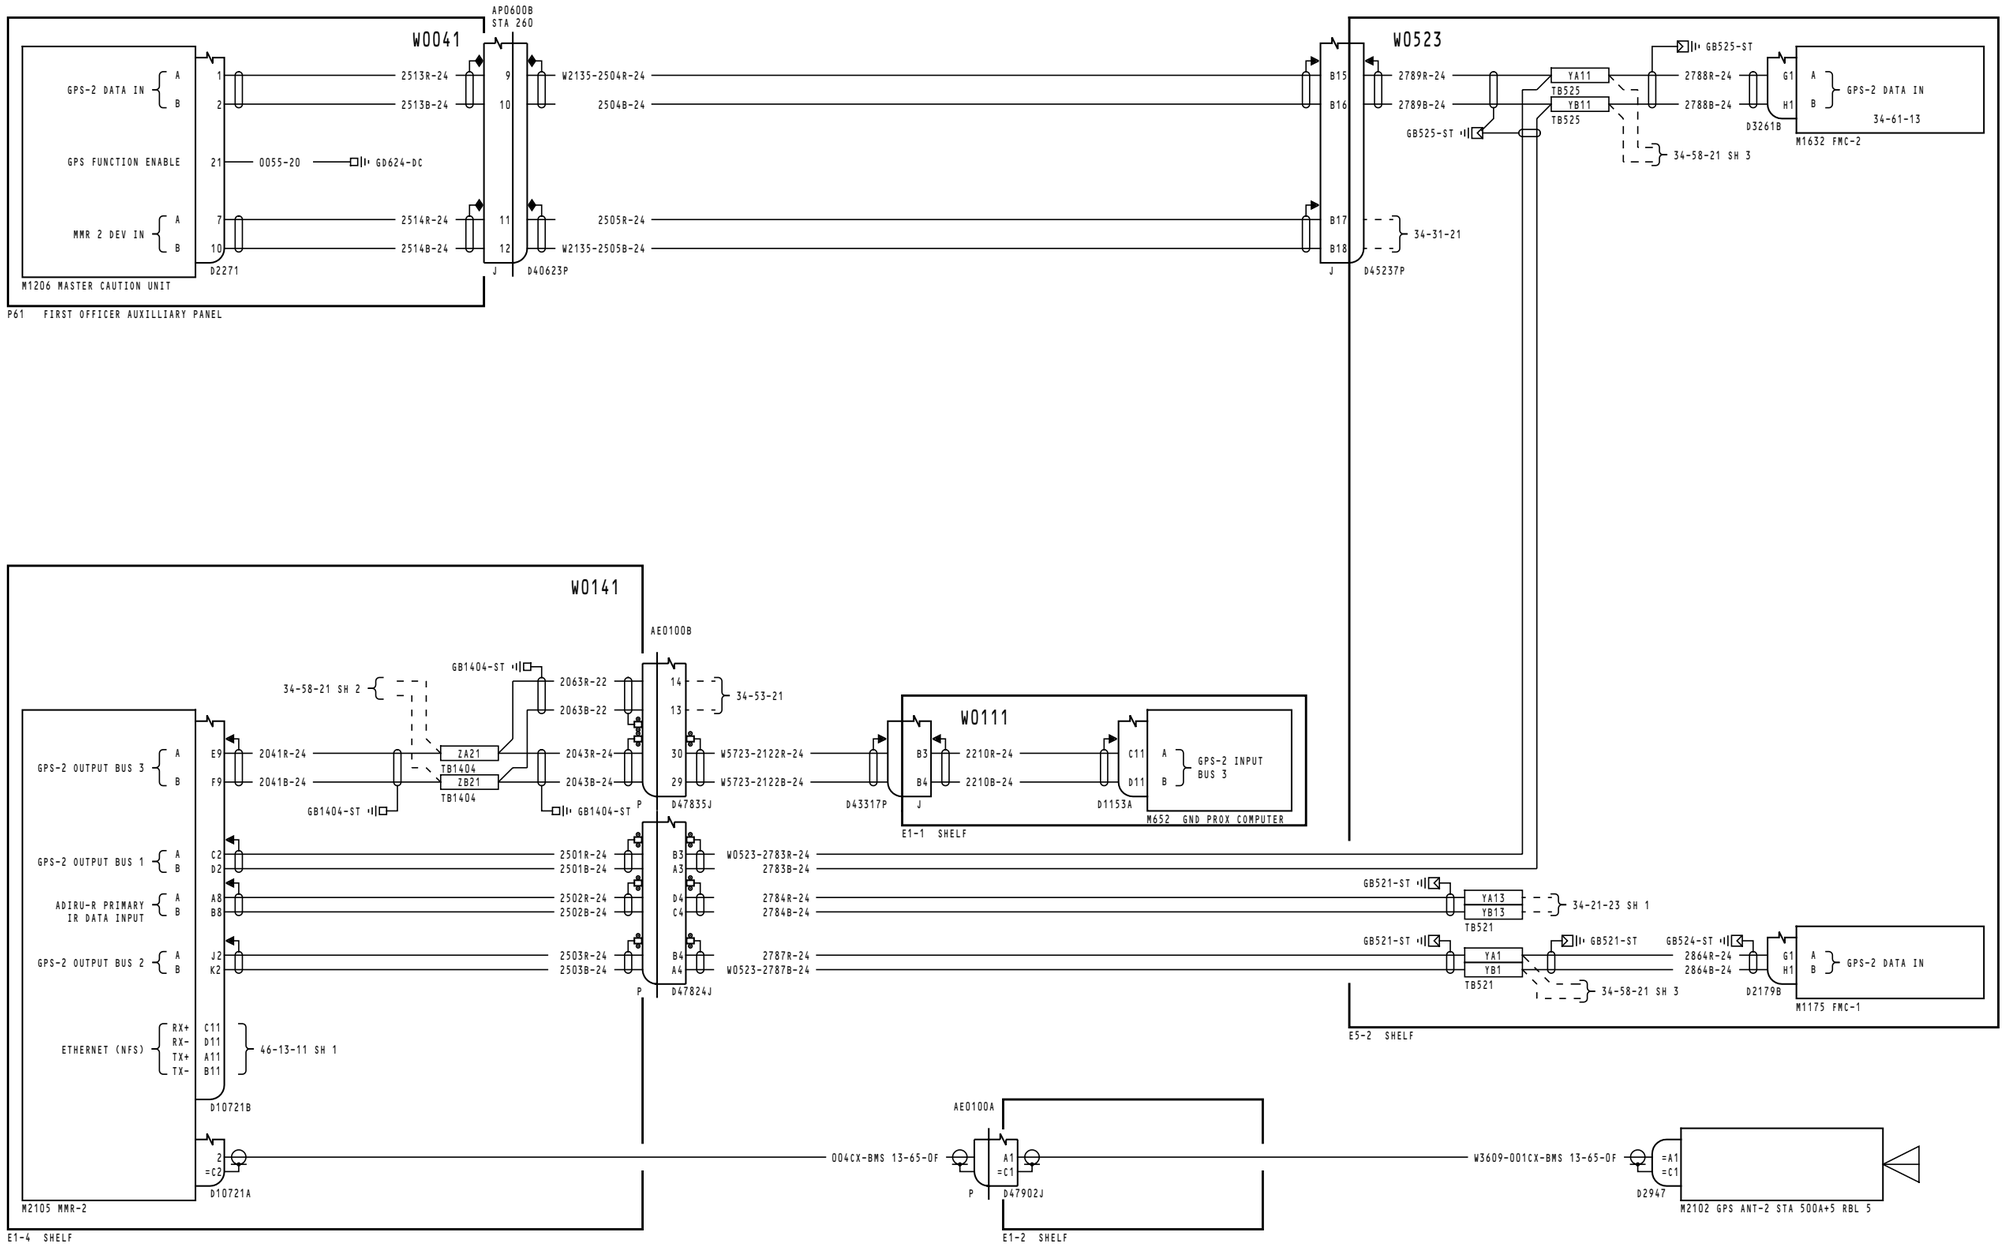

34-58-21

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
14




ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-58-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

8

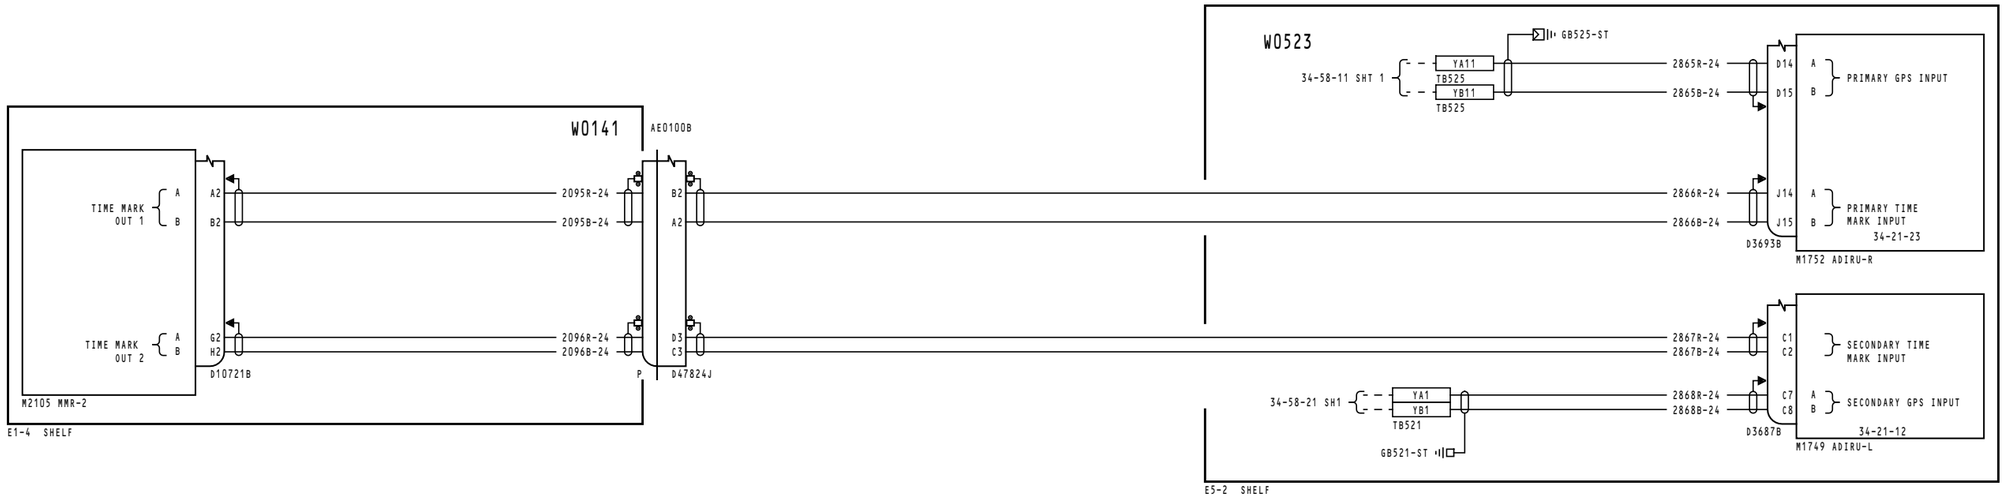


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-58-21

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

263

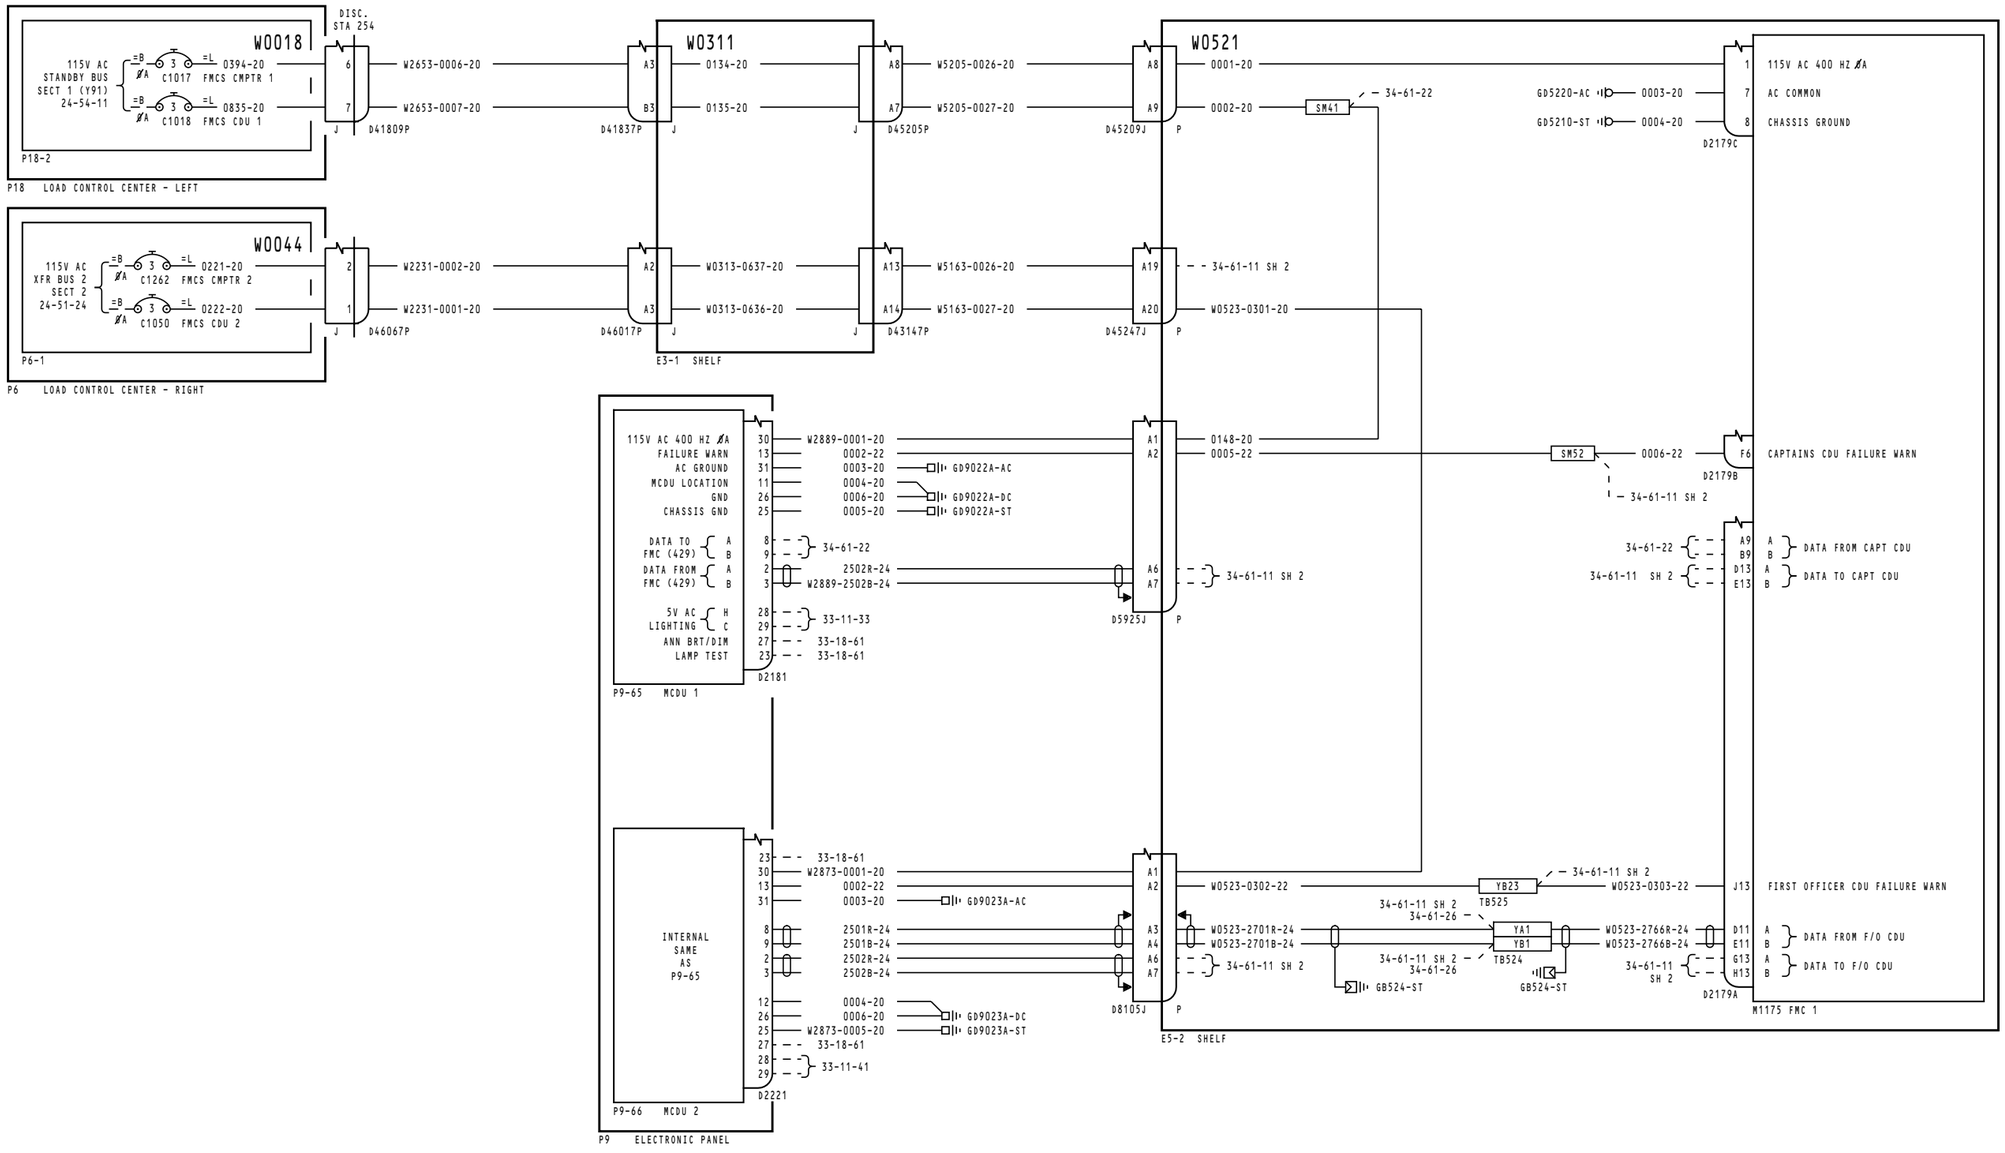


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

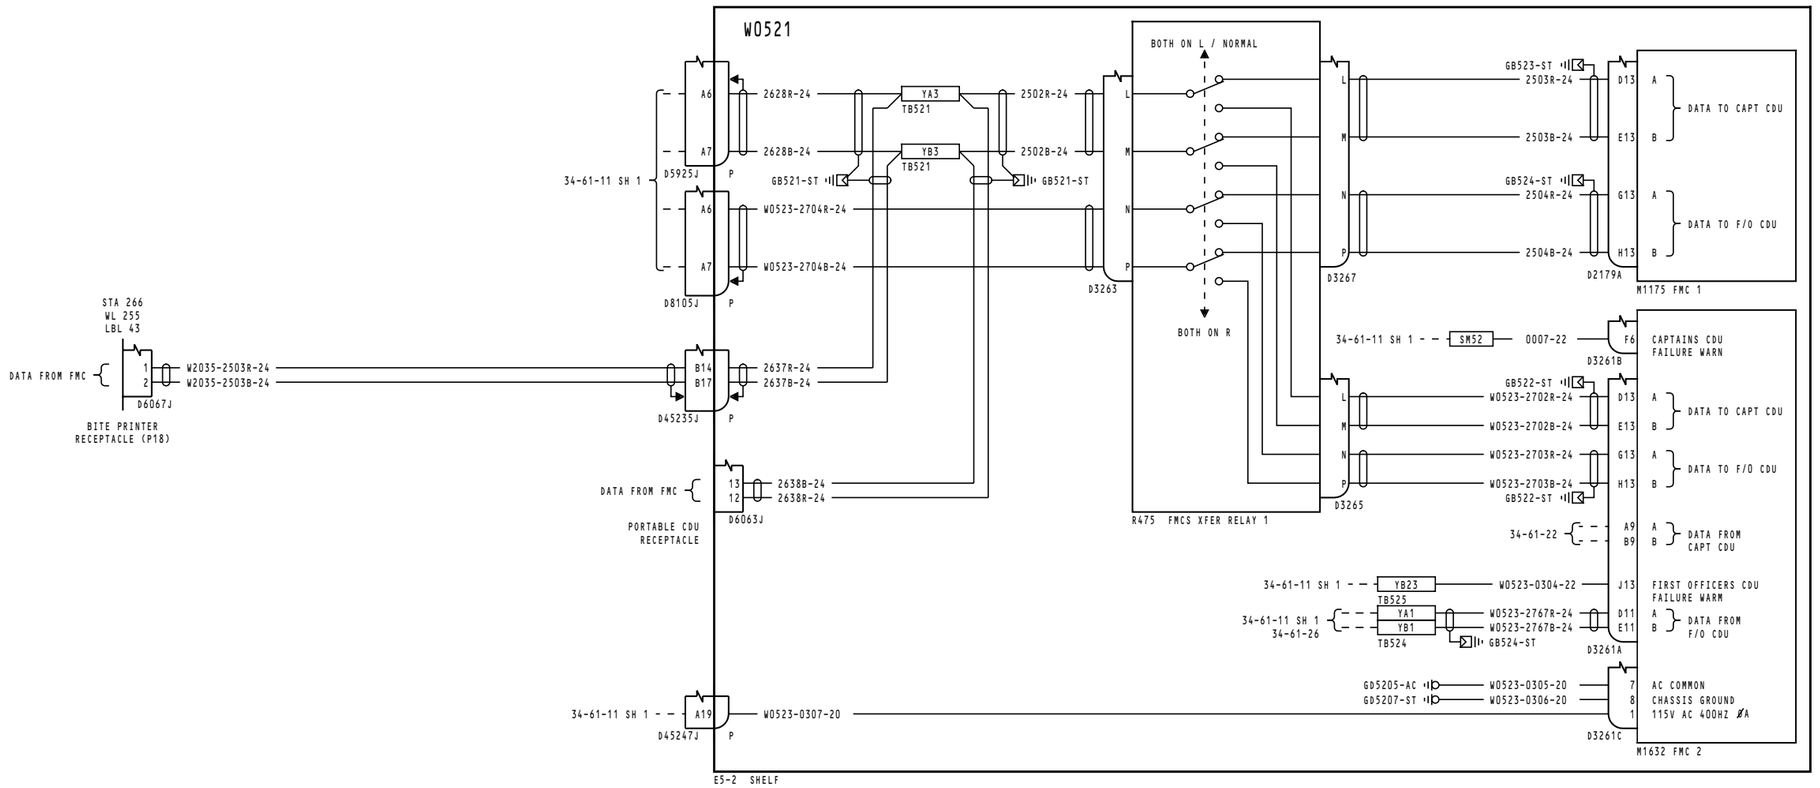


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

130

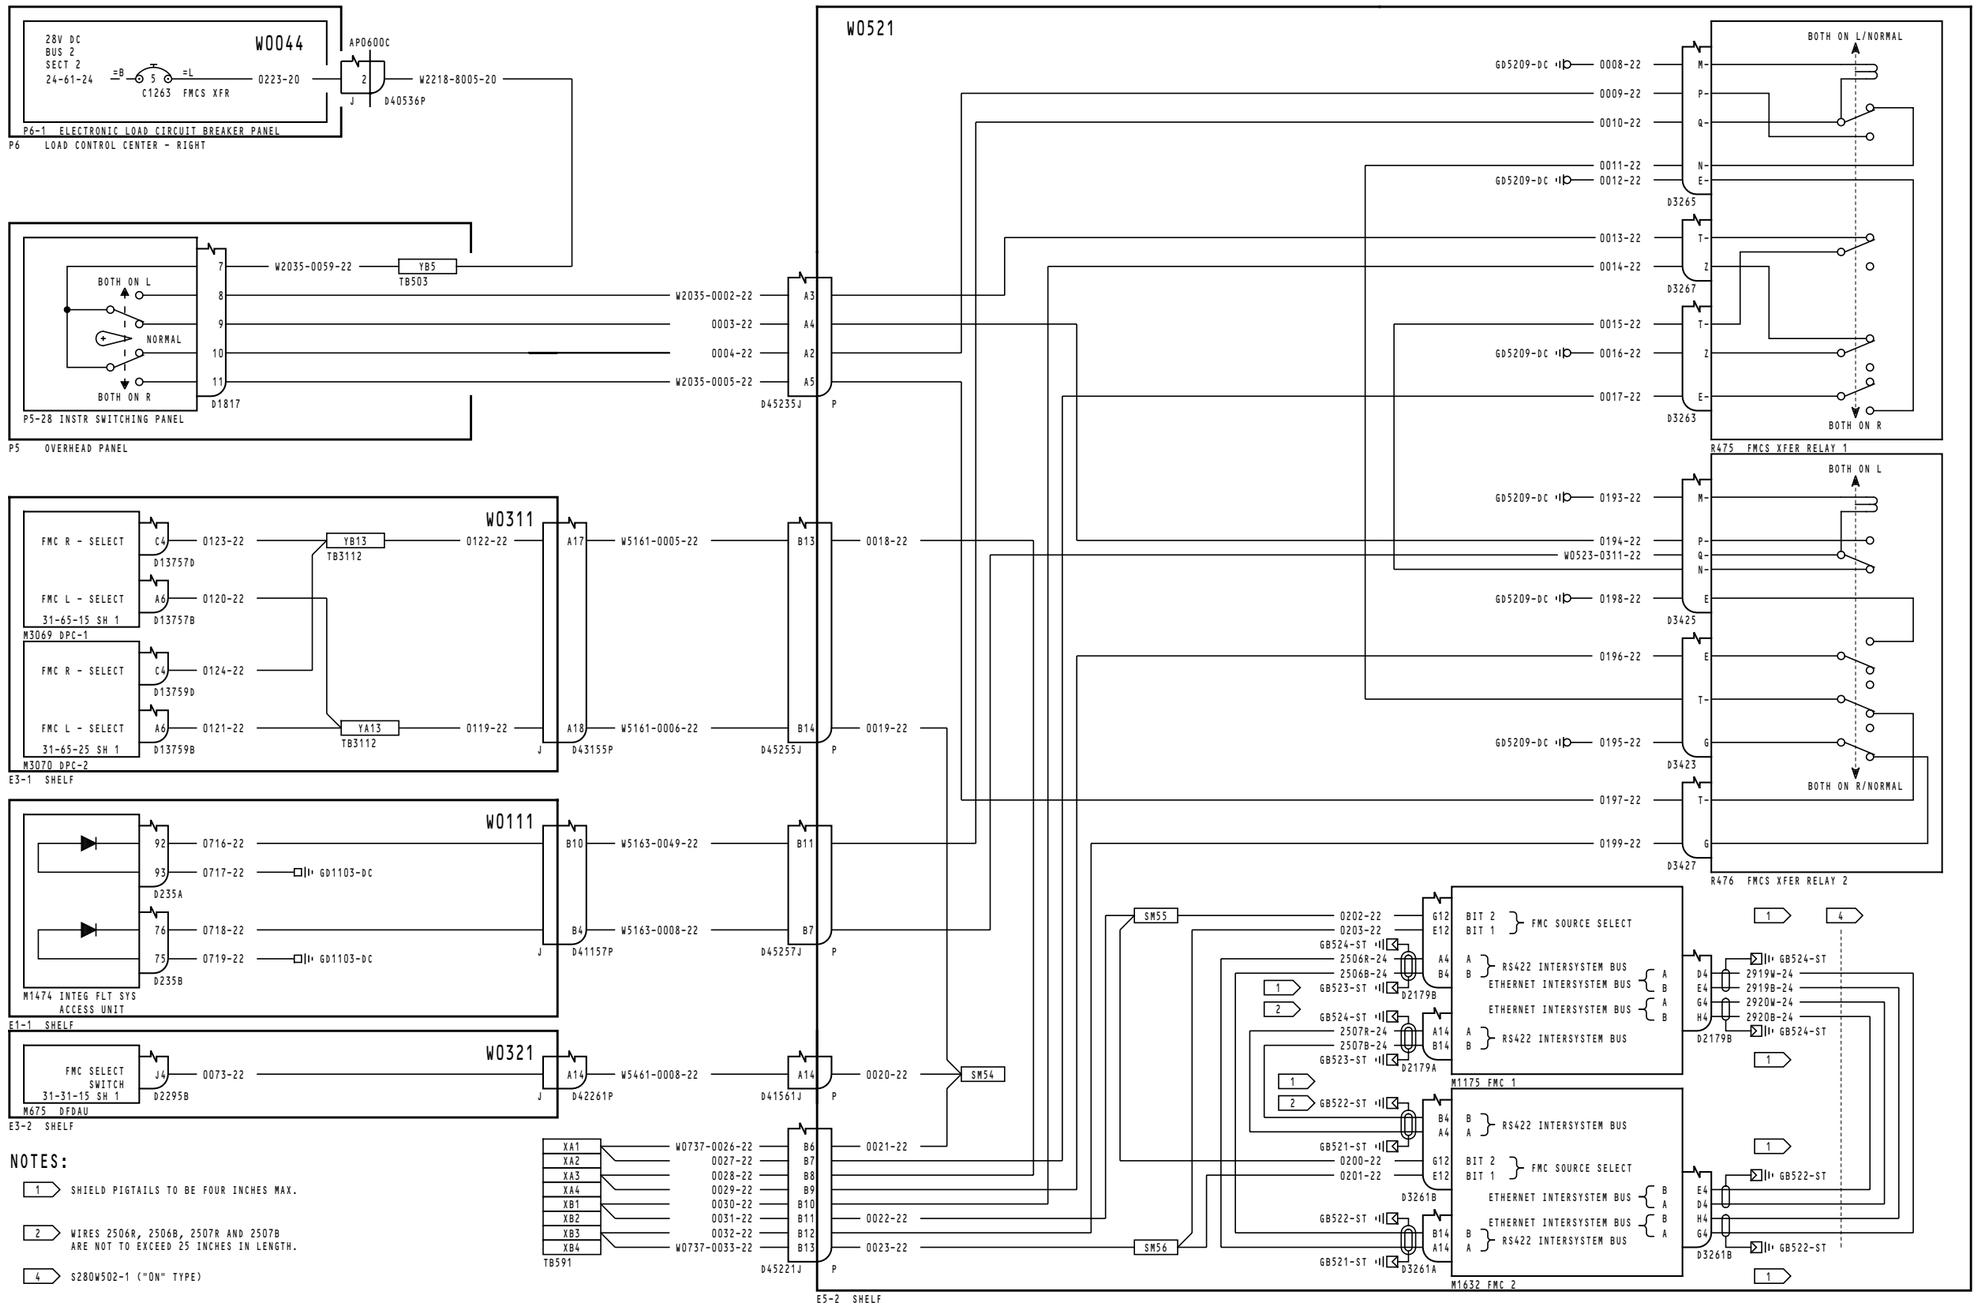

ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL




E5-2 SHELF

ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-13

Page 1

May 15/2024

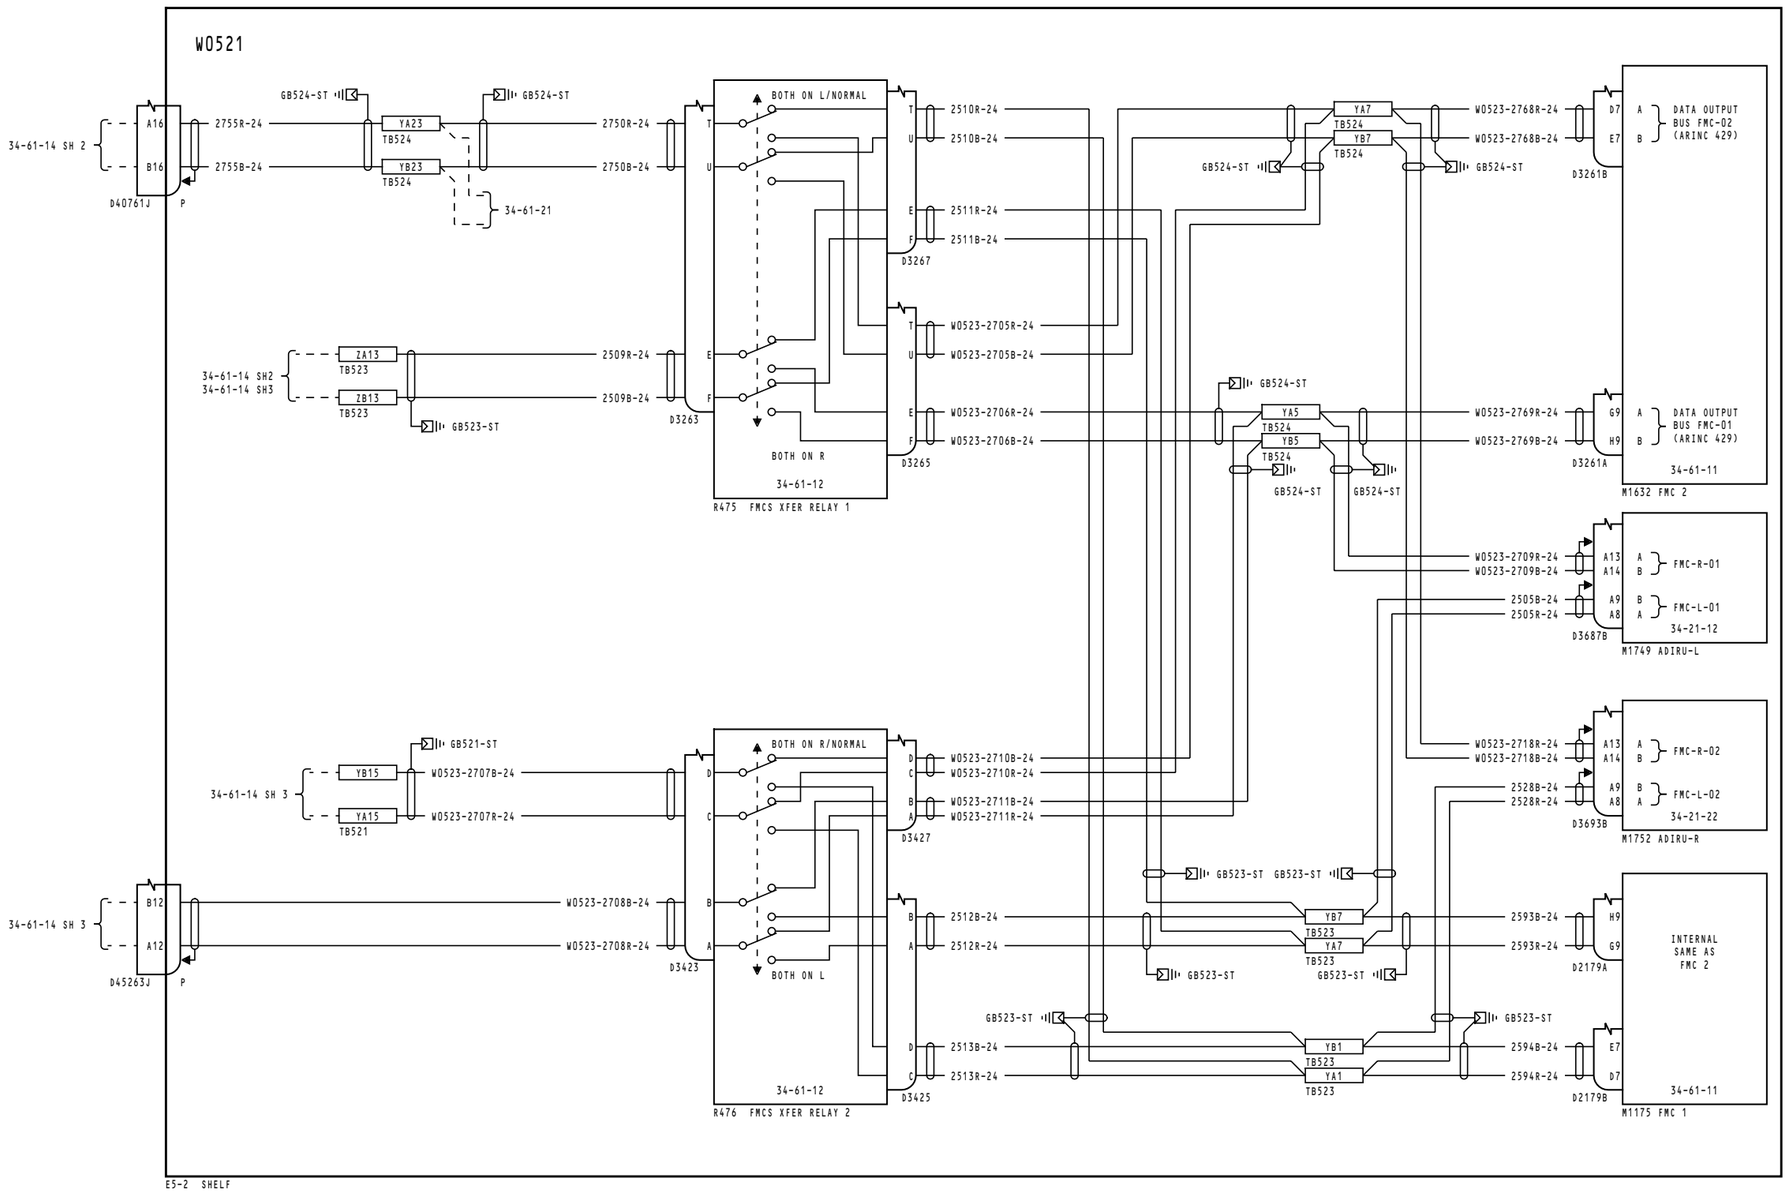

ECCN 9E991 BOEING PROPRIETARY - See title page for details


737-8 WIRING DIAGRAM MANUAL

34-61-14

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

101

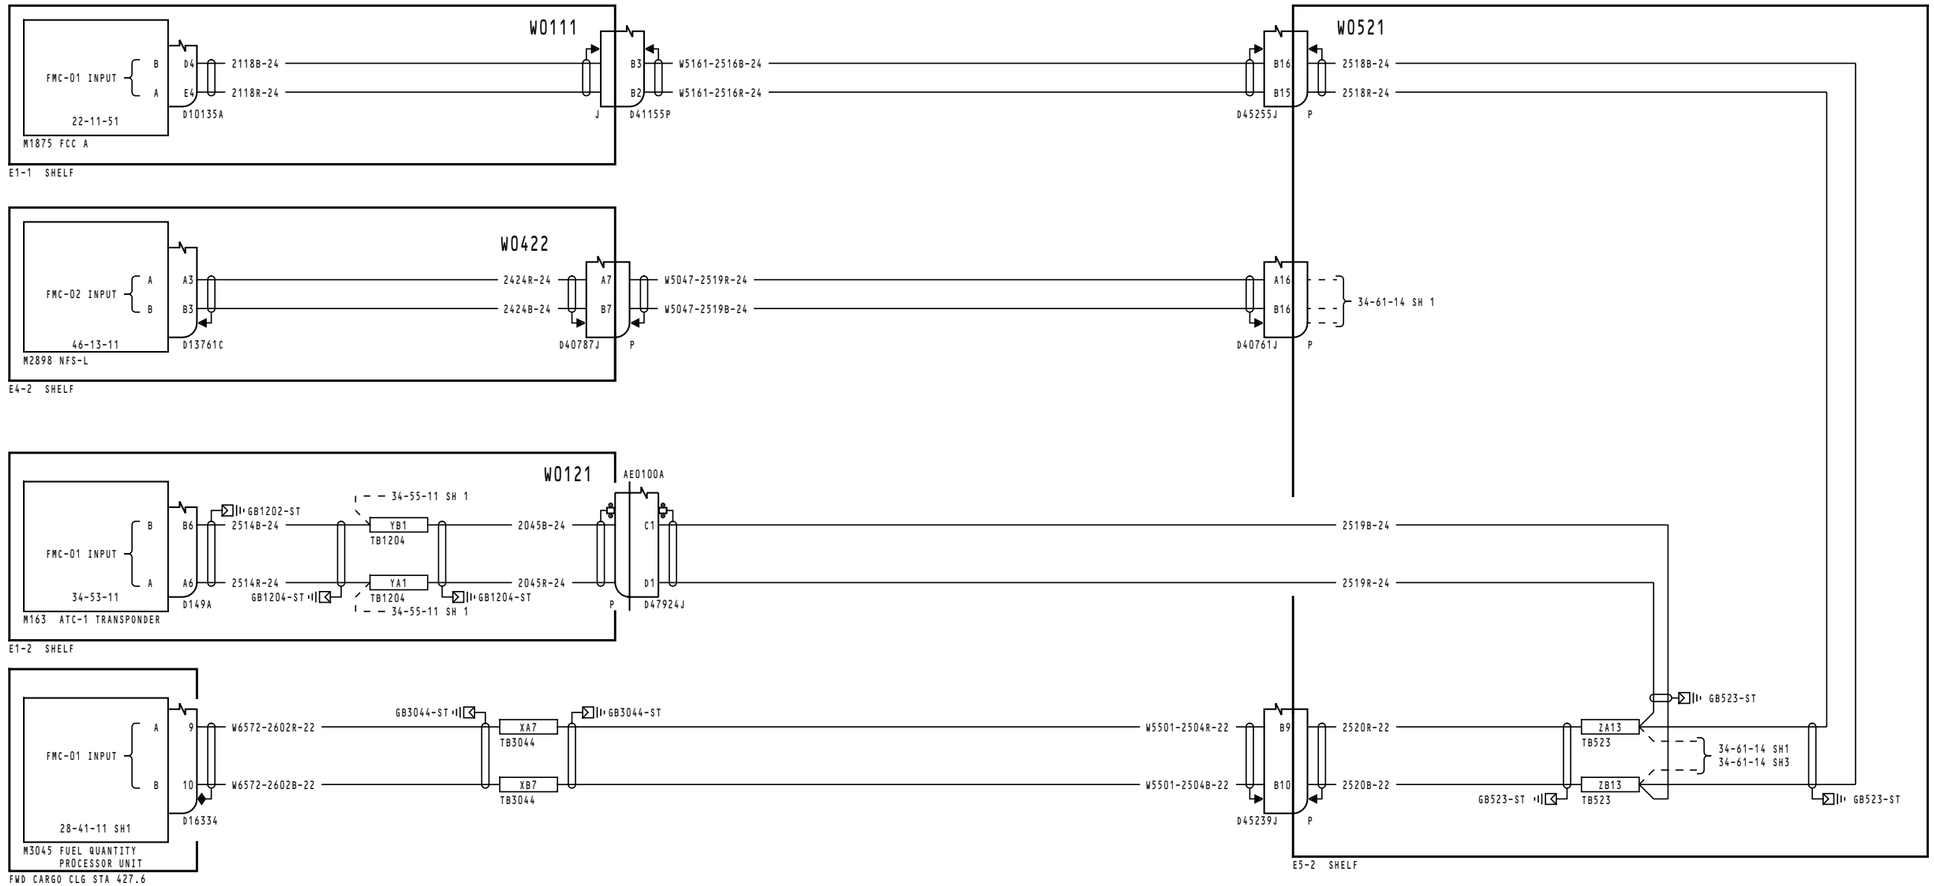


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-14

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

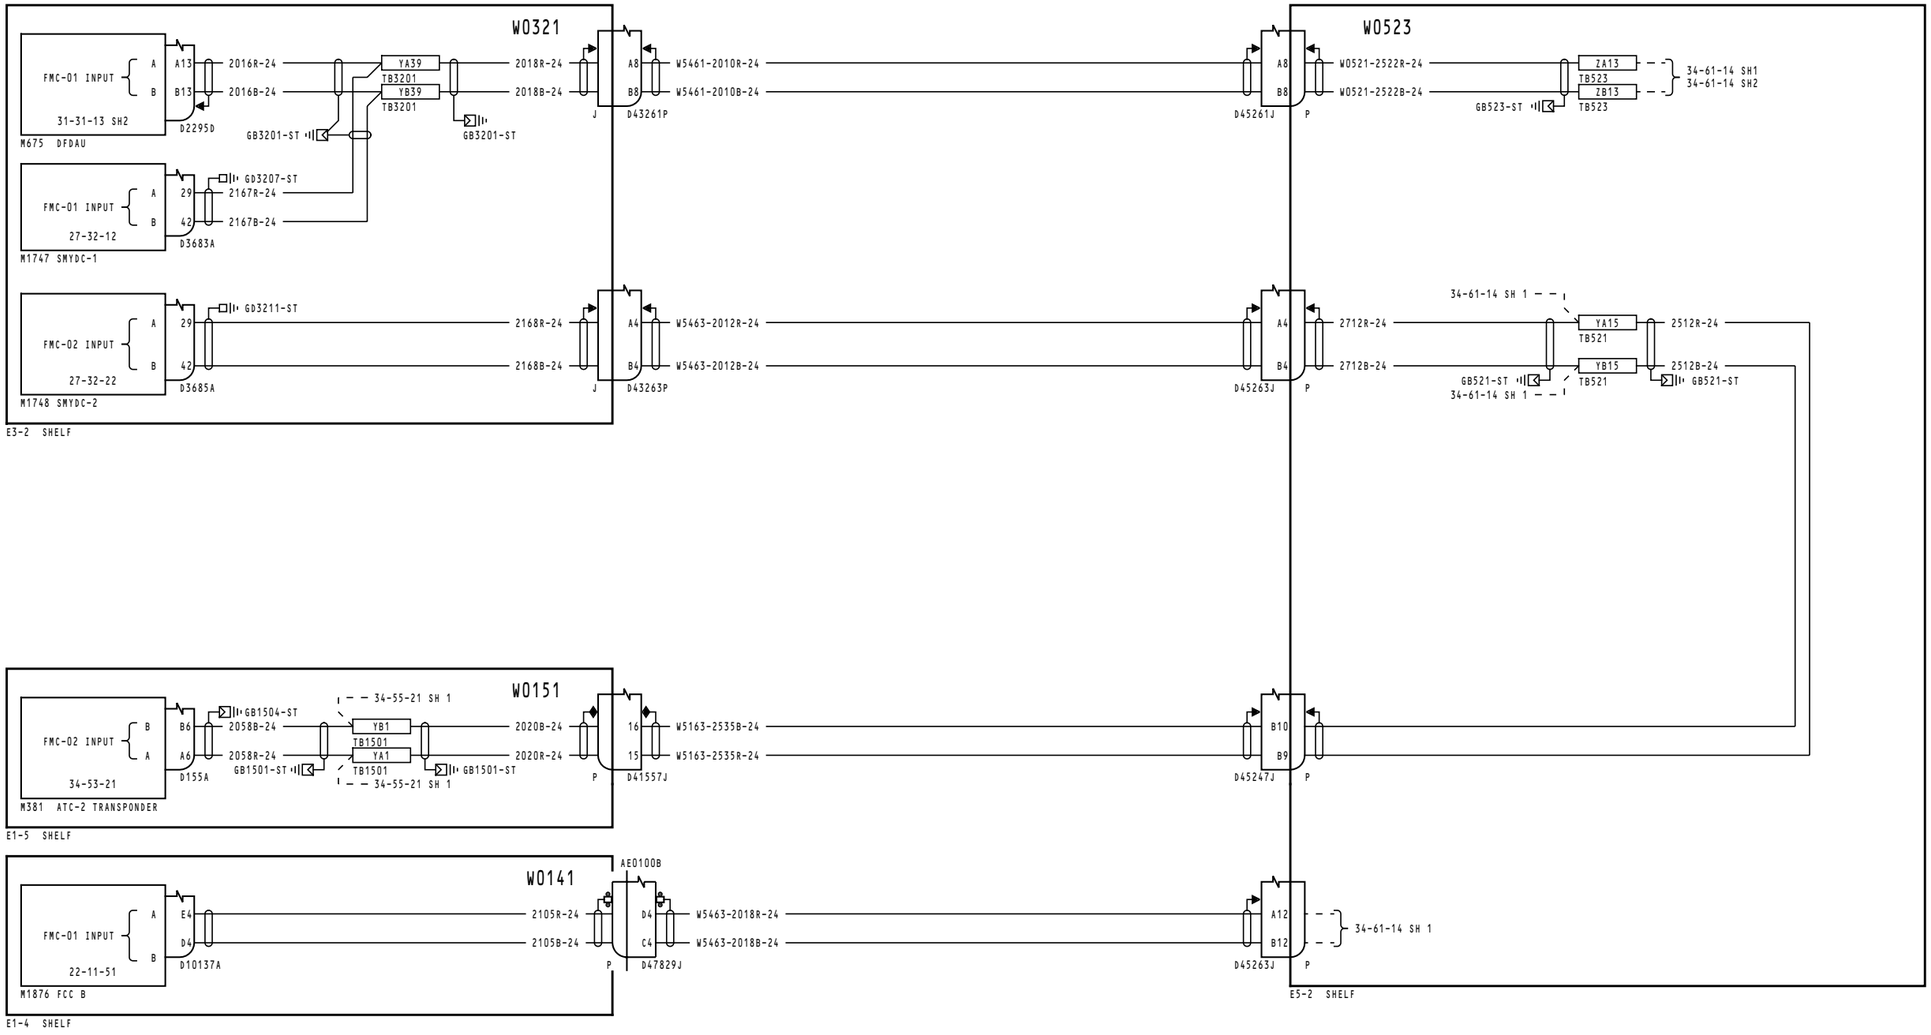


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-14

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

196

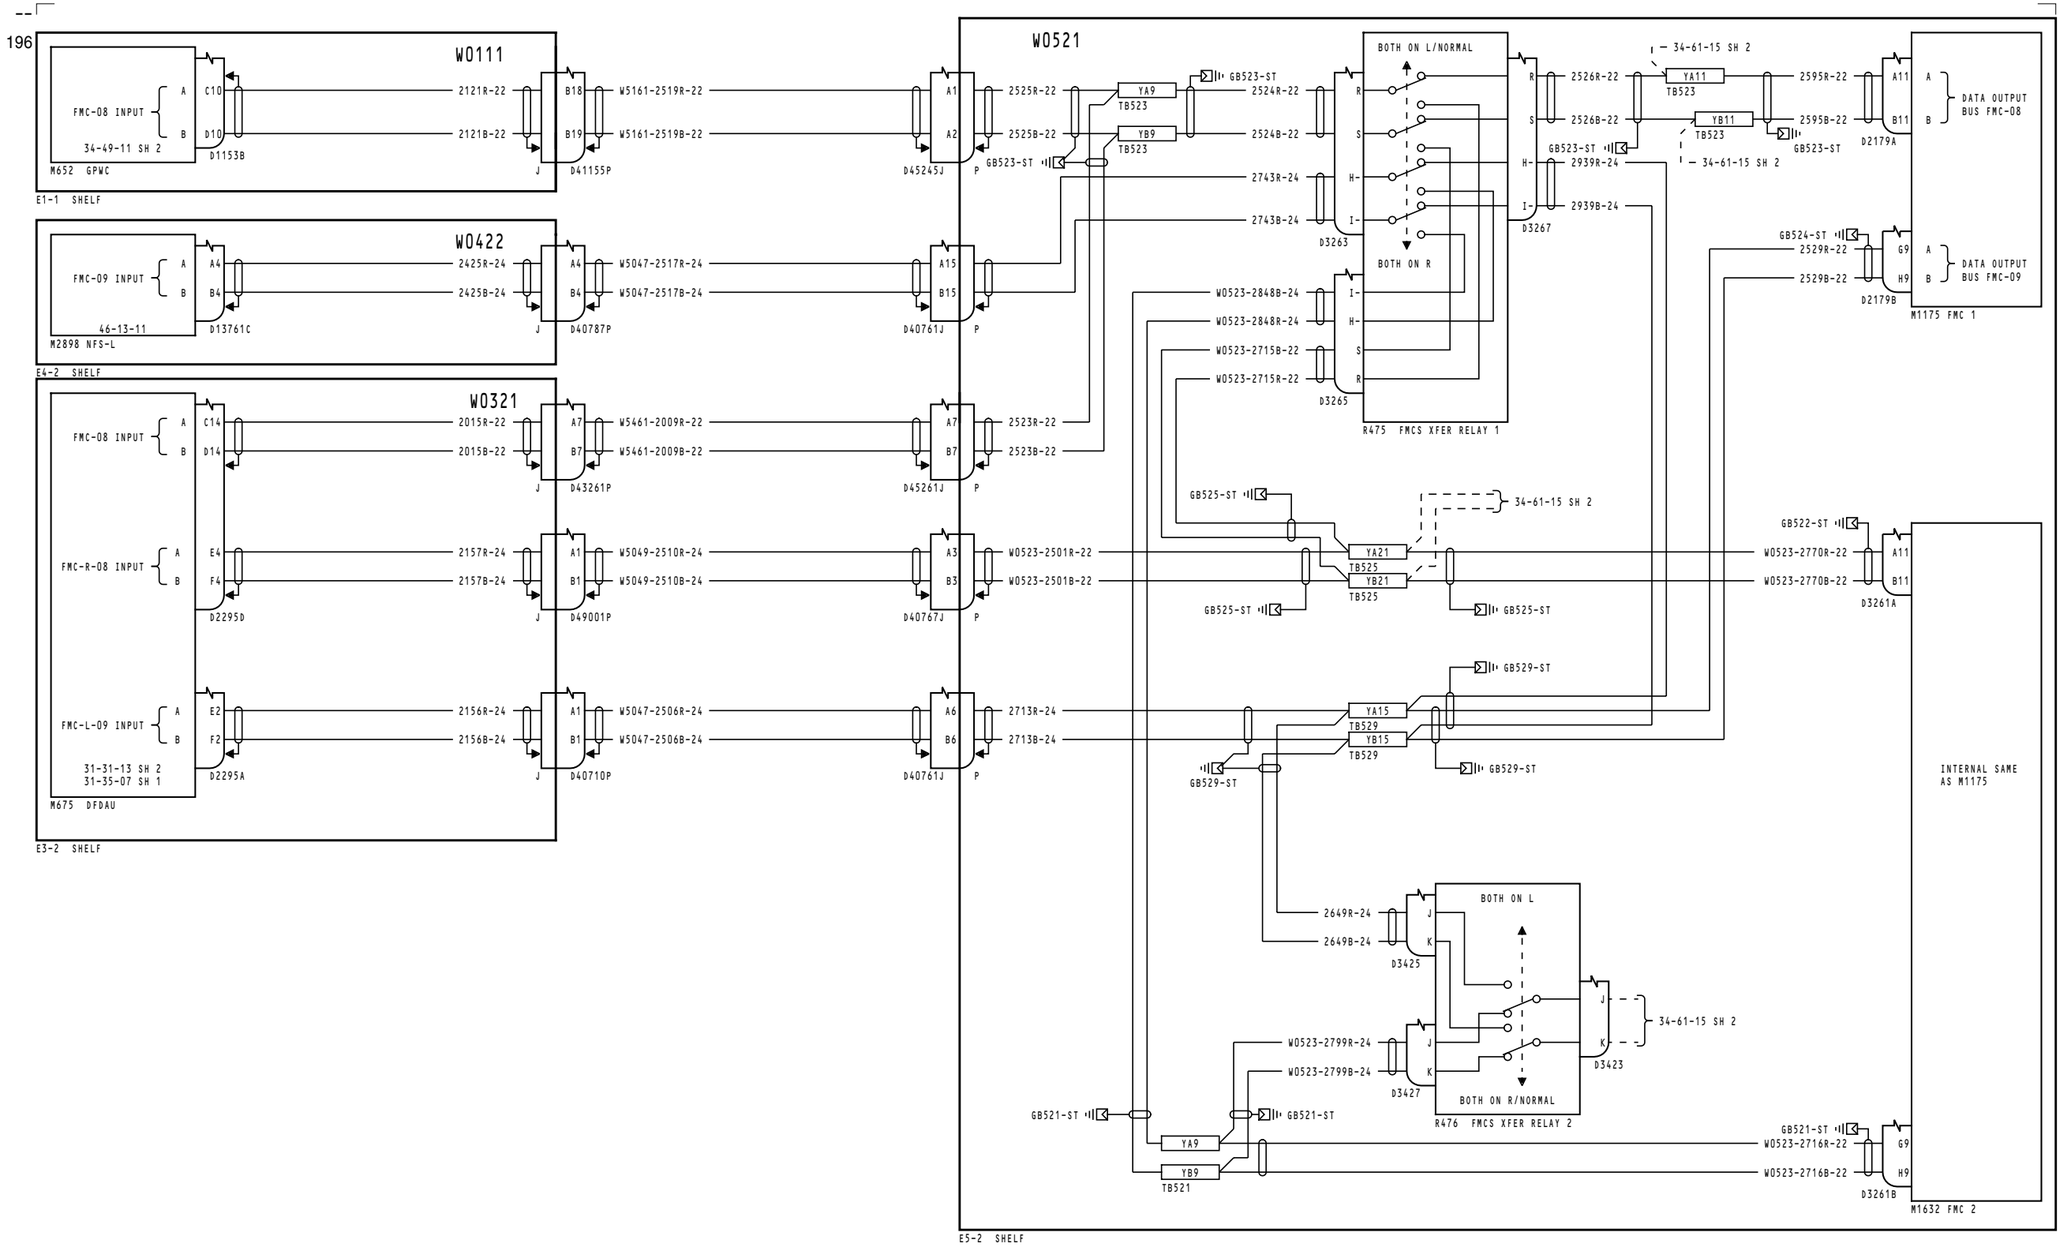


34-61-15

Page 1.1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

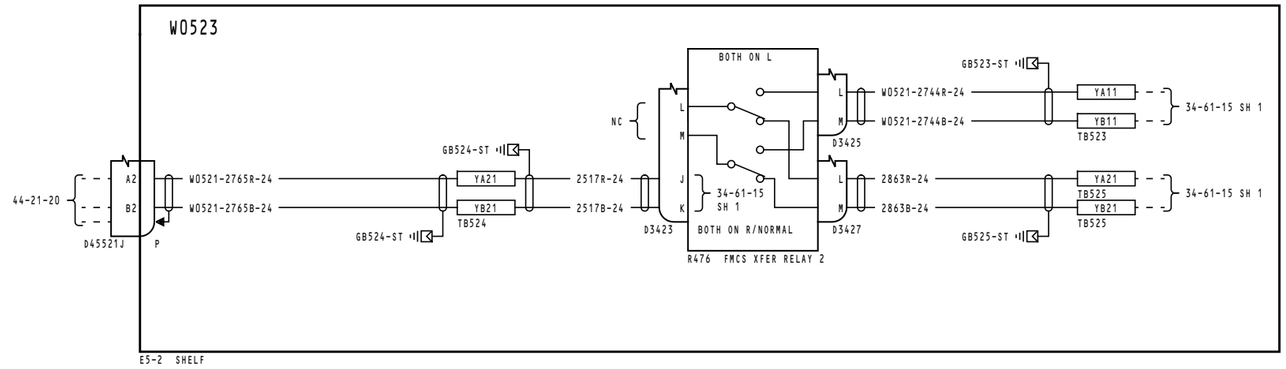

ALL

FMCS OUTPUT BUSSES FMC-08 AND FMC-09

D280AM1215

34-61-15


Page 1.1
Sheet 2
May 15/2024

Incorporates SB
44-1020

34-61-15

Page 1.1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

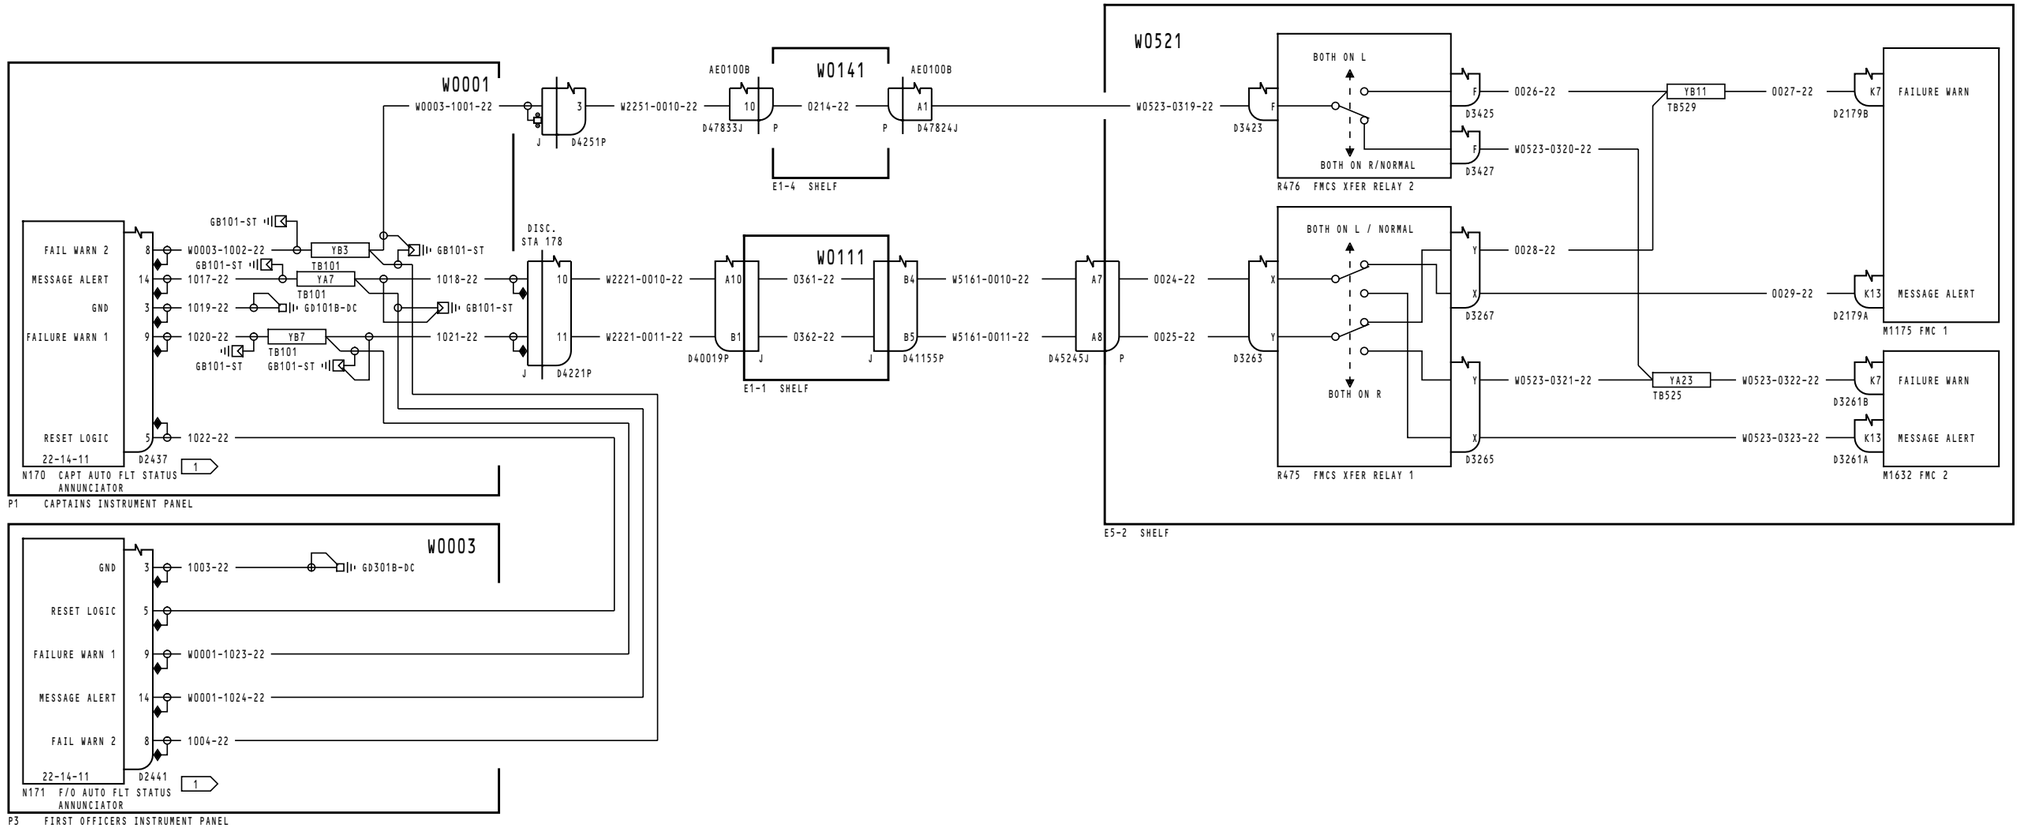

NOTES:


1 WIRES TO EQUIPMENT WITHIN 1 FOOT OF THE FLIGHT DECK WINDOW MUST BE SHIELDED AND GROUNDED.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-16


Page 1

May 15/2024

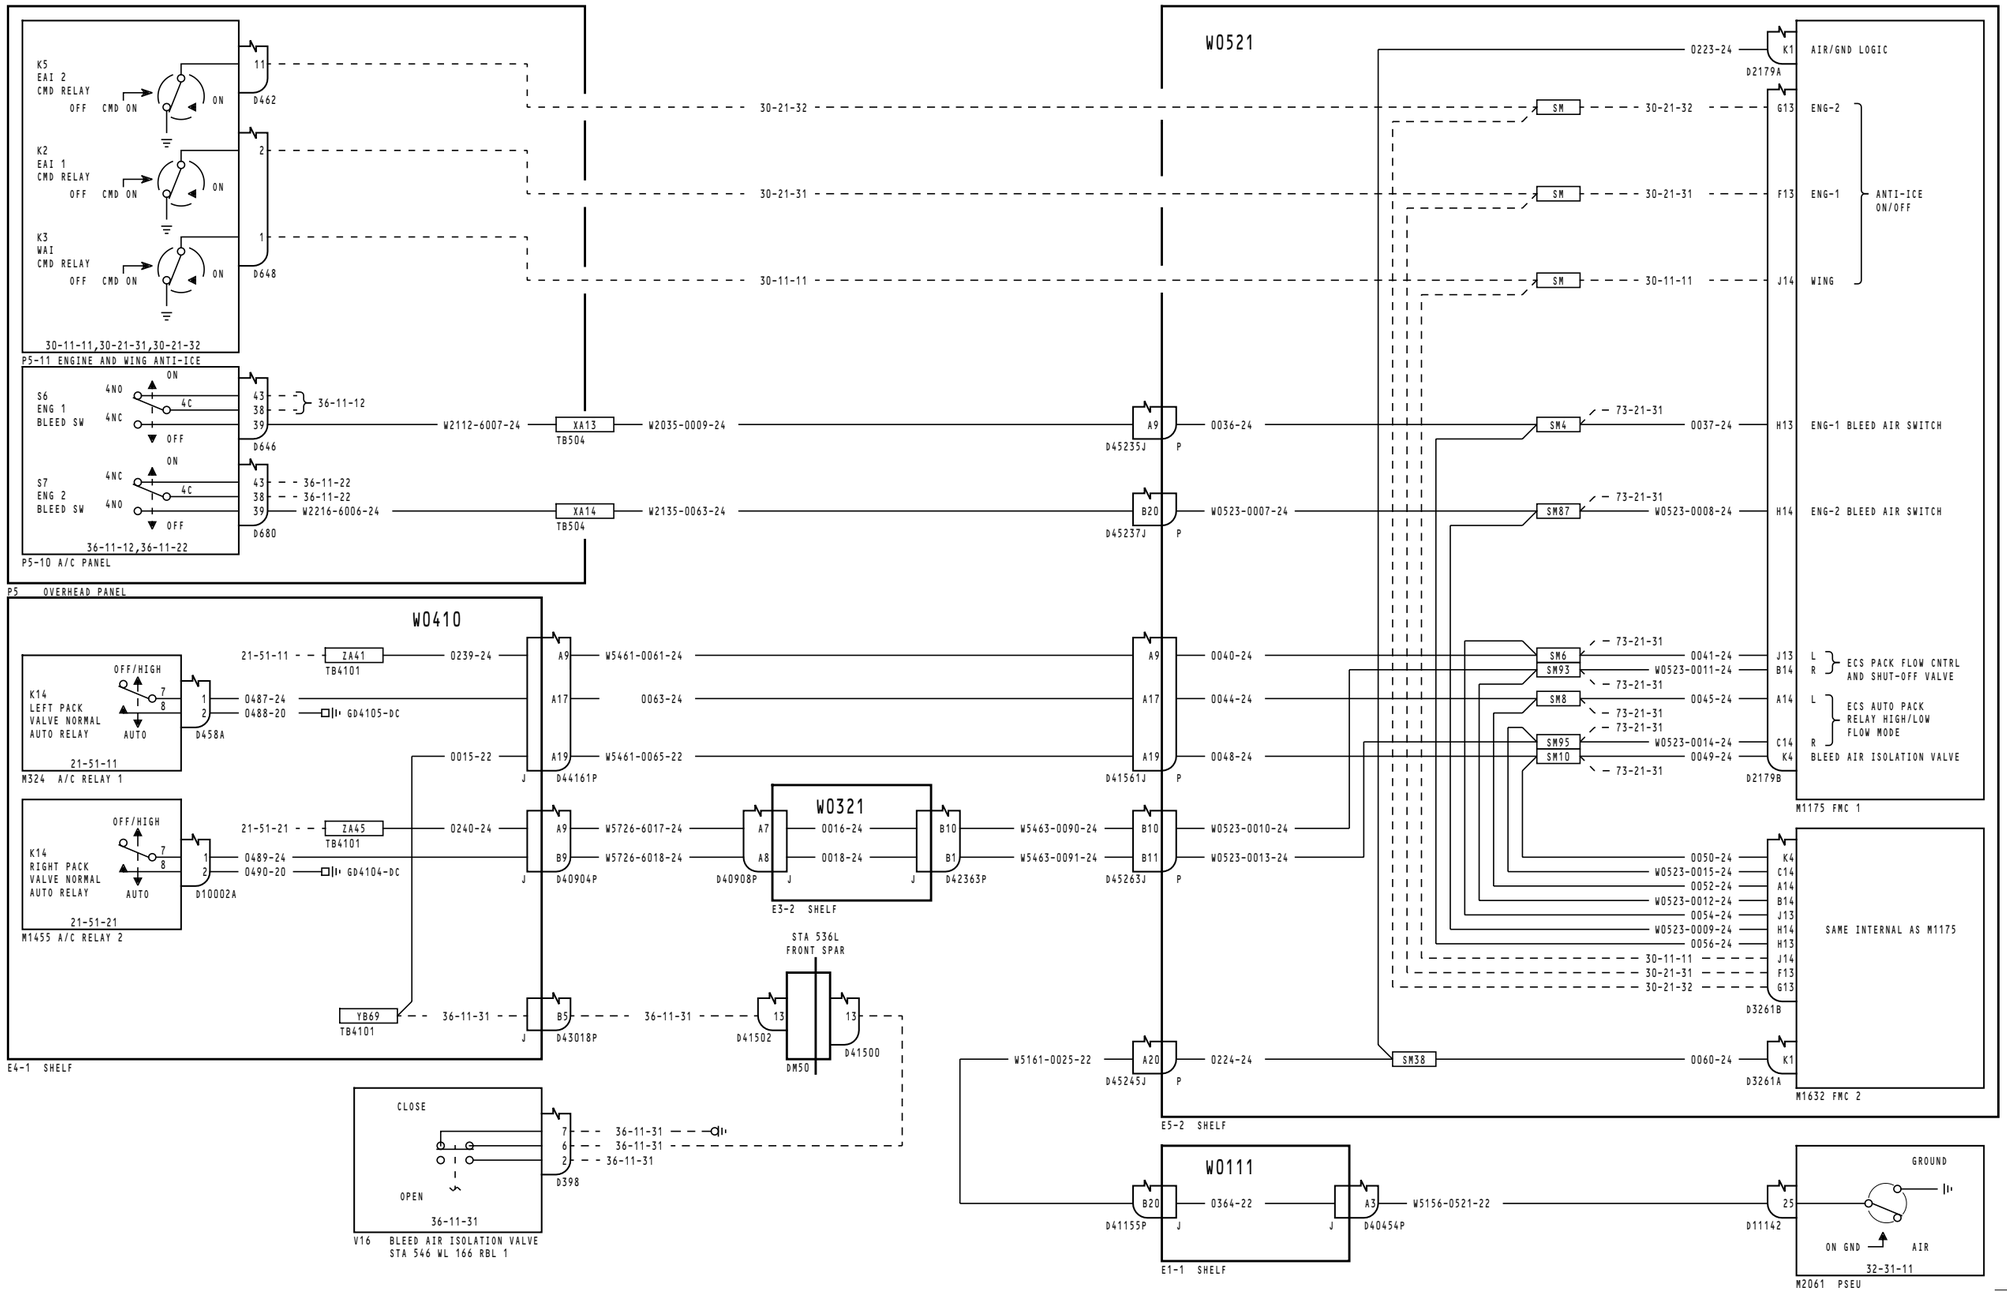

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

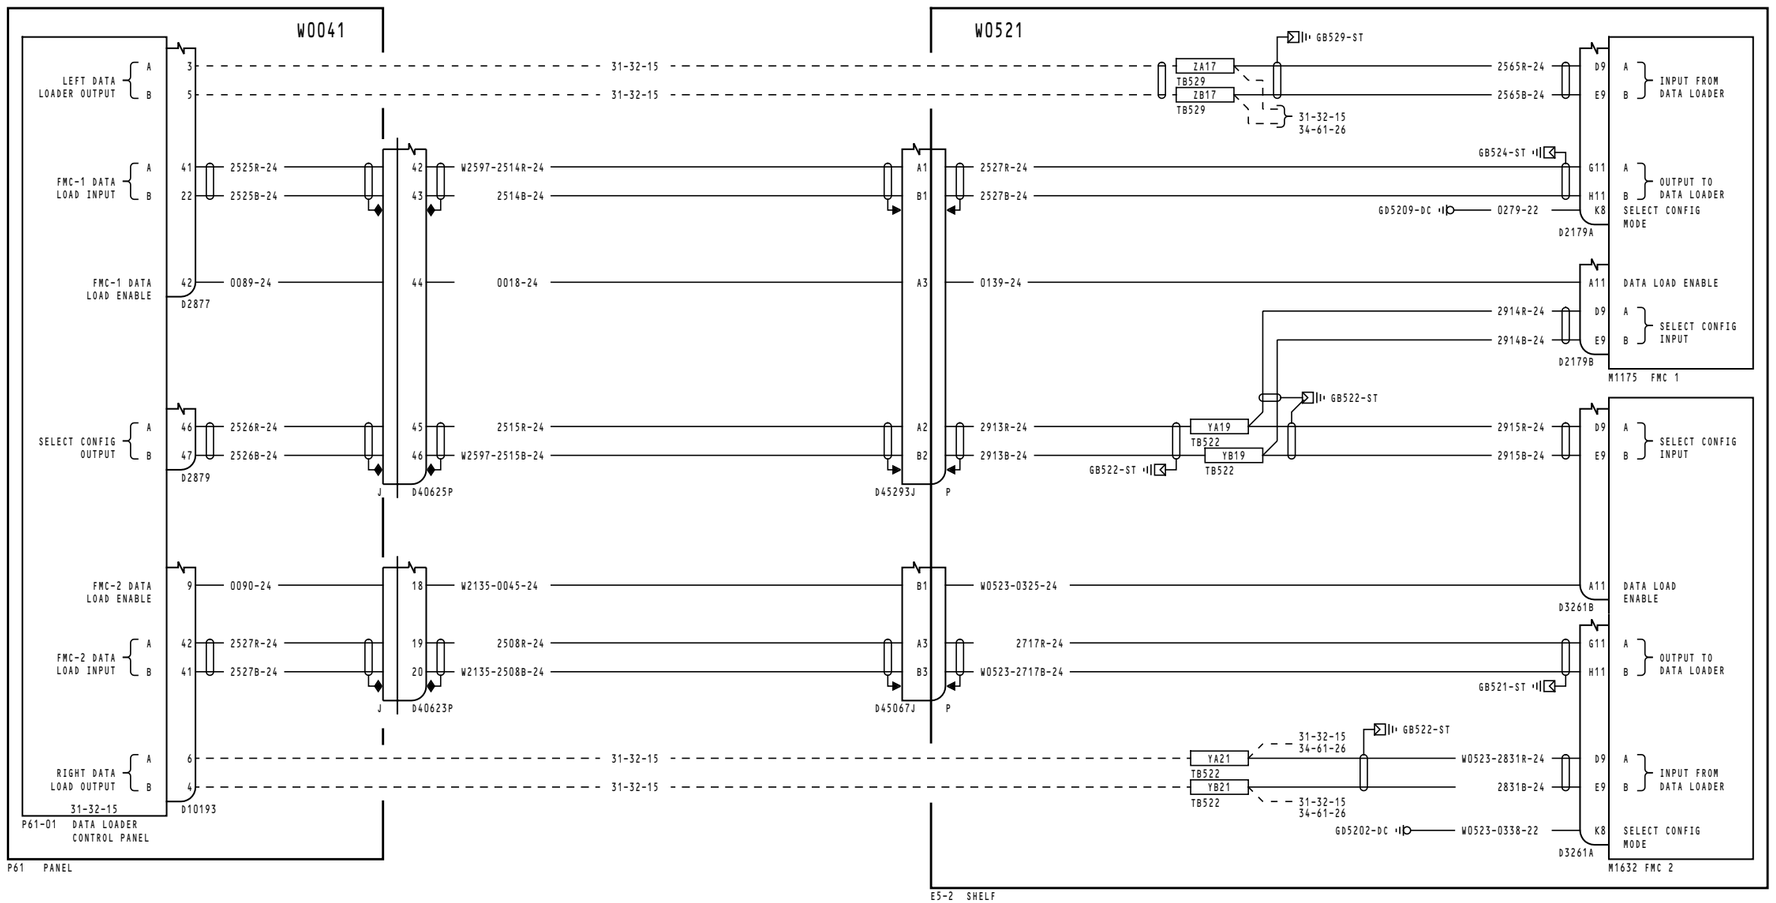

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-61-18

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

1108

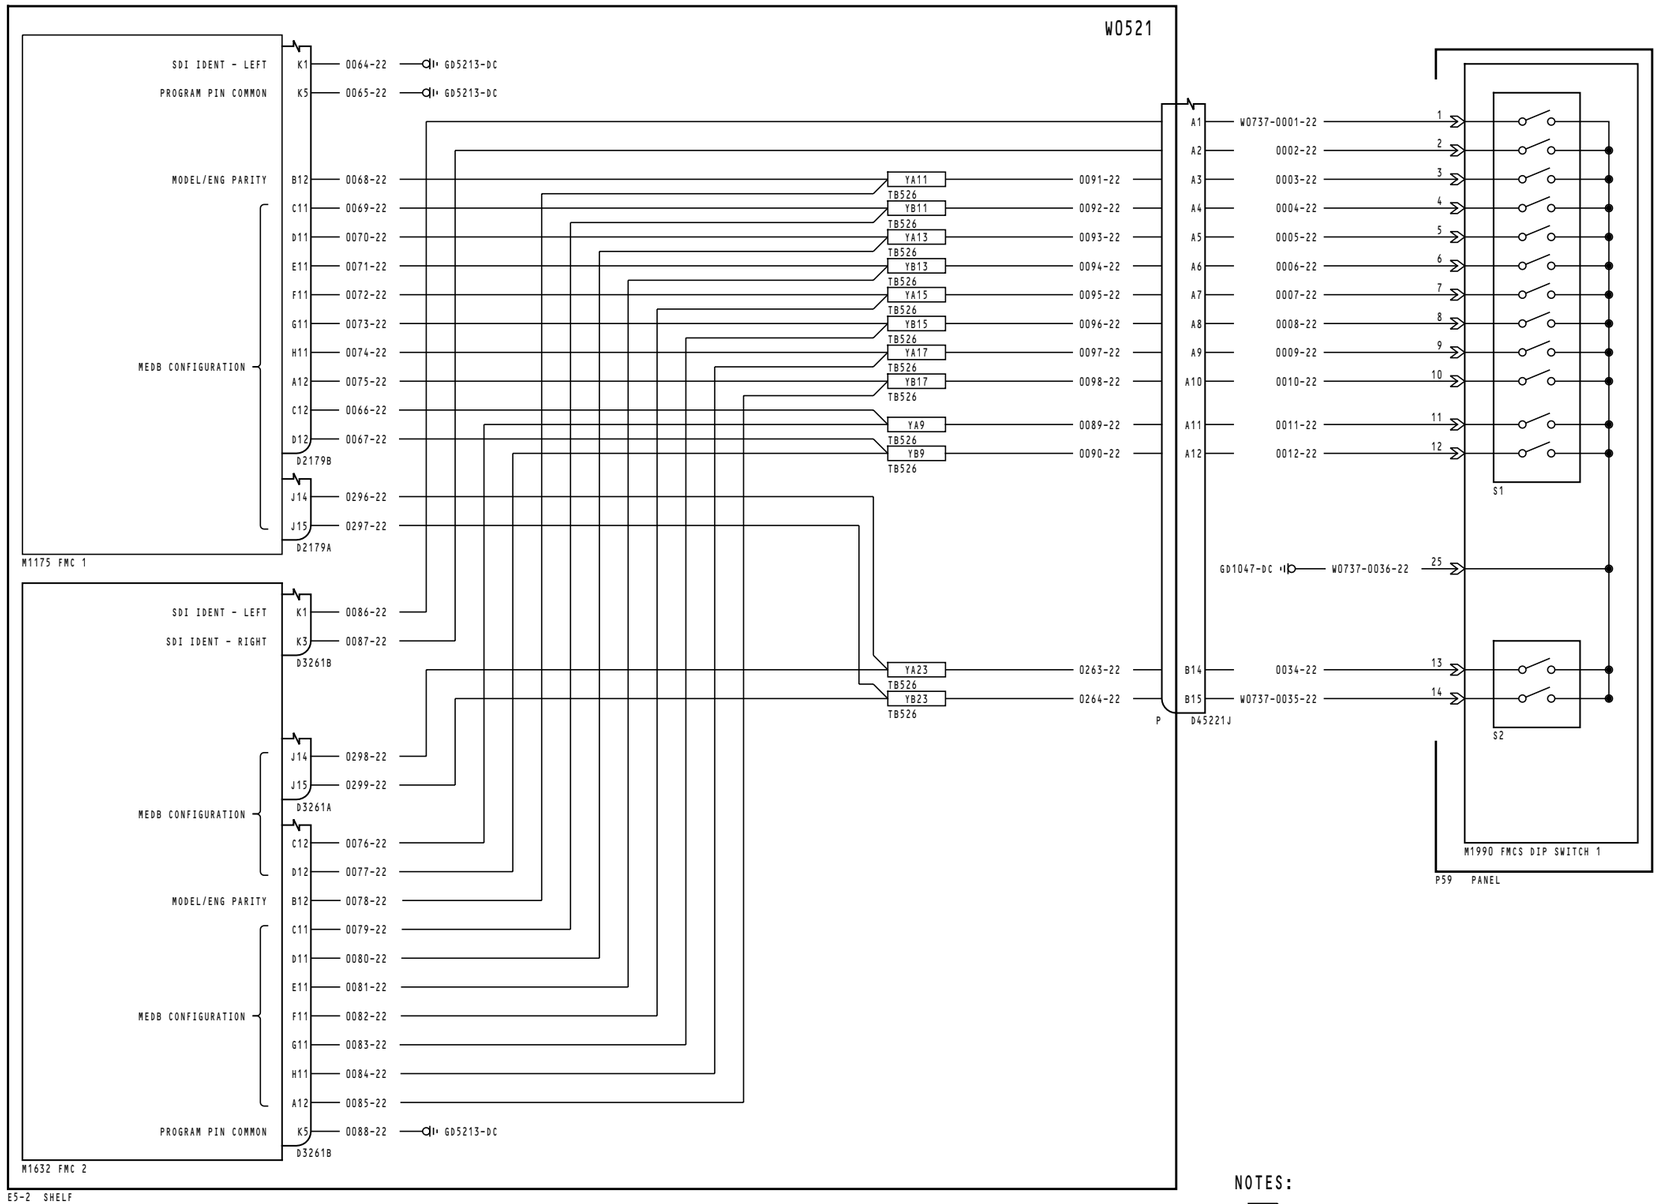

1

DIP SWITCH SETTINGS

SWITCH NO.	SWITCH POSITION
1	0
2	1
3	0
4	0
5	0
6	0
7	0
8	0
9	0
10	0
11	1
12	1
13	0
14	1

NOTES:

1 FOR EACH BIT DESIGNATED AS "0"
SET THE CORRESPONDING SWITCH TO "OFF"
FOR EACH BIT DESIGNATED AS "1"
SET THE CORRESPONDING SWITCH TO "ON"
(FOR ANY UNUSED SWITCH, SET TO "OFF")

ALL

FMCS PROGRAM PINS

D280AM1215

34-61-19

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-19

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

1132

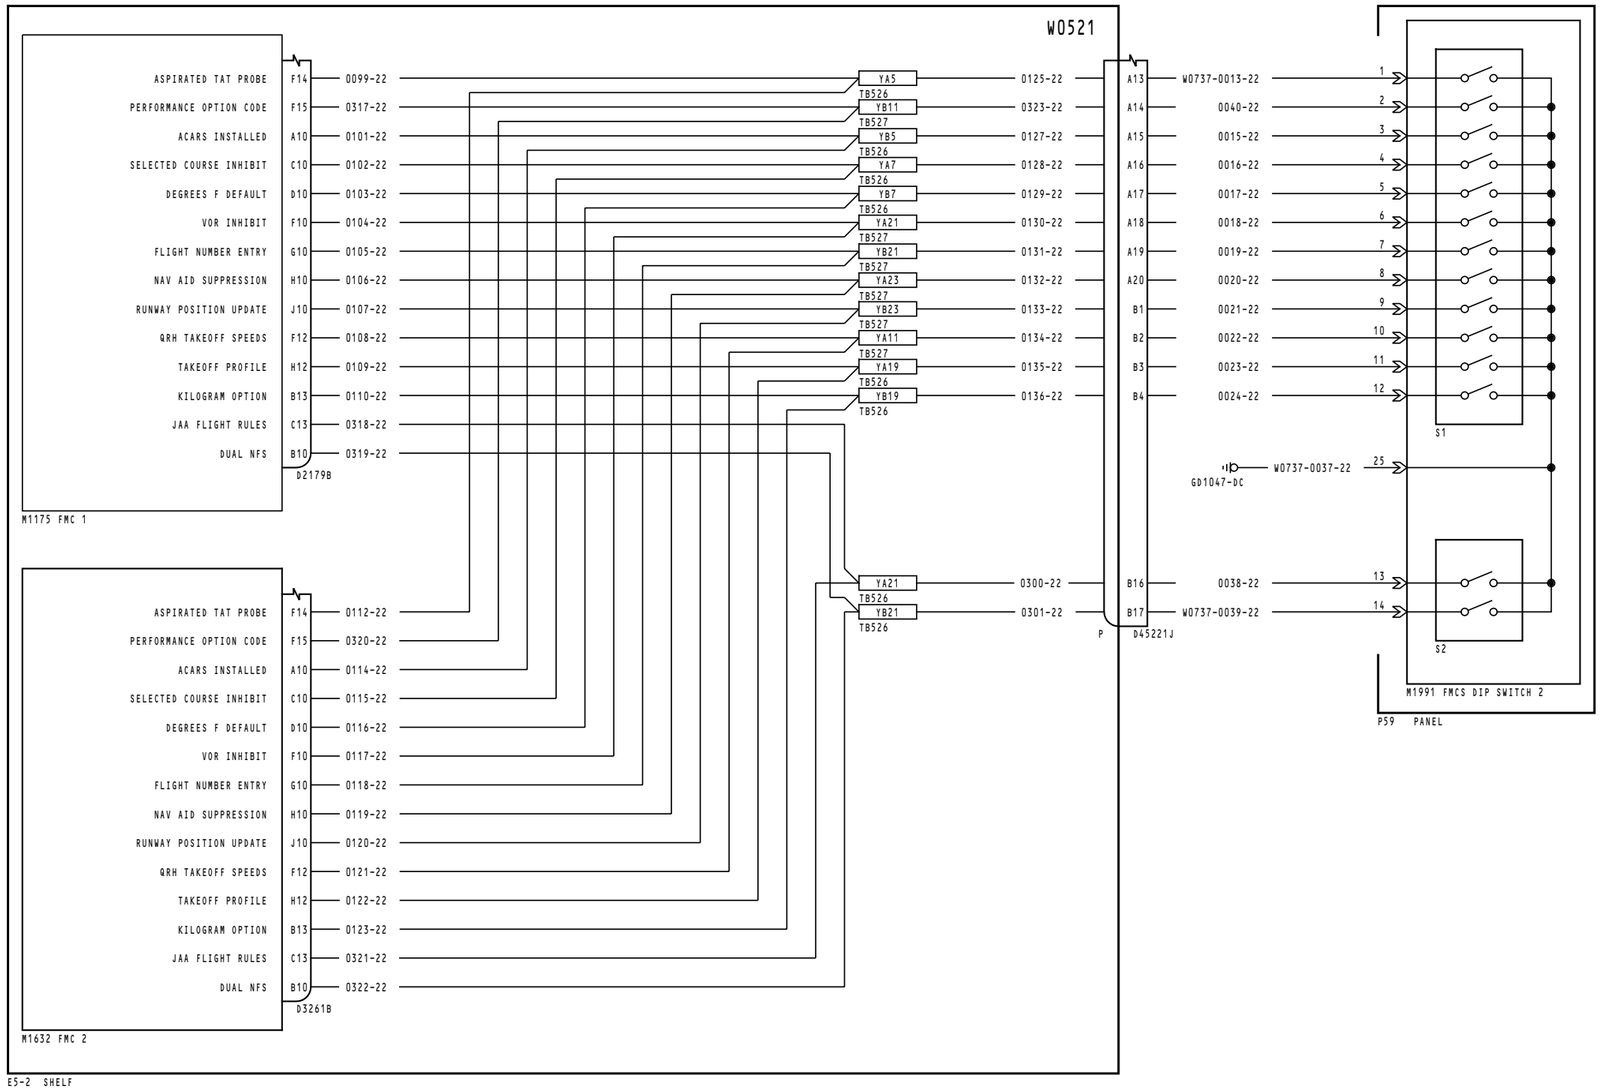

1

DIP SWITCH SETTINGS	
SWITCH NO.	SWITCH POSITION
1	0
2	1
3	1
4	0
5	0
6	0
7	1
8	1
9	1
10	0
11	1
12	1
13	1
14	0


NOTES:

1 FOR EACH BIT DESIGNATED AS "0"
SET THE CORRESPONDING SWITCH TO "OFF"
FOR EACH BIT DESIGNATED AS "1"
SET THE CORRESPONDING SWITCH TO "ON"
(FOR ANY UNUSED SWITCH, SET TO "OFF")

ECCN 9E991 BOEING PROPRIETARY - See title page for details


34-61-19

Page 1
Sheet 2
May 15/2024

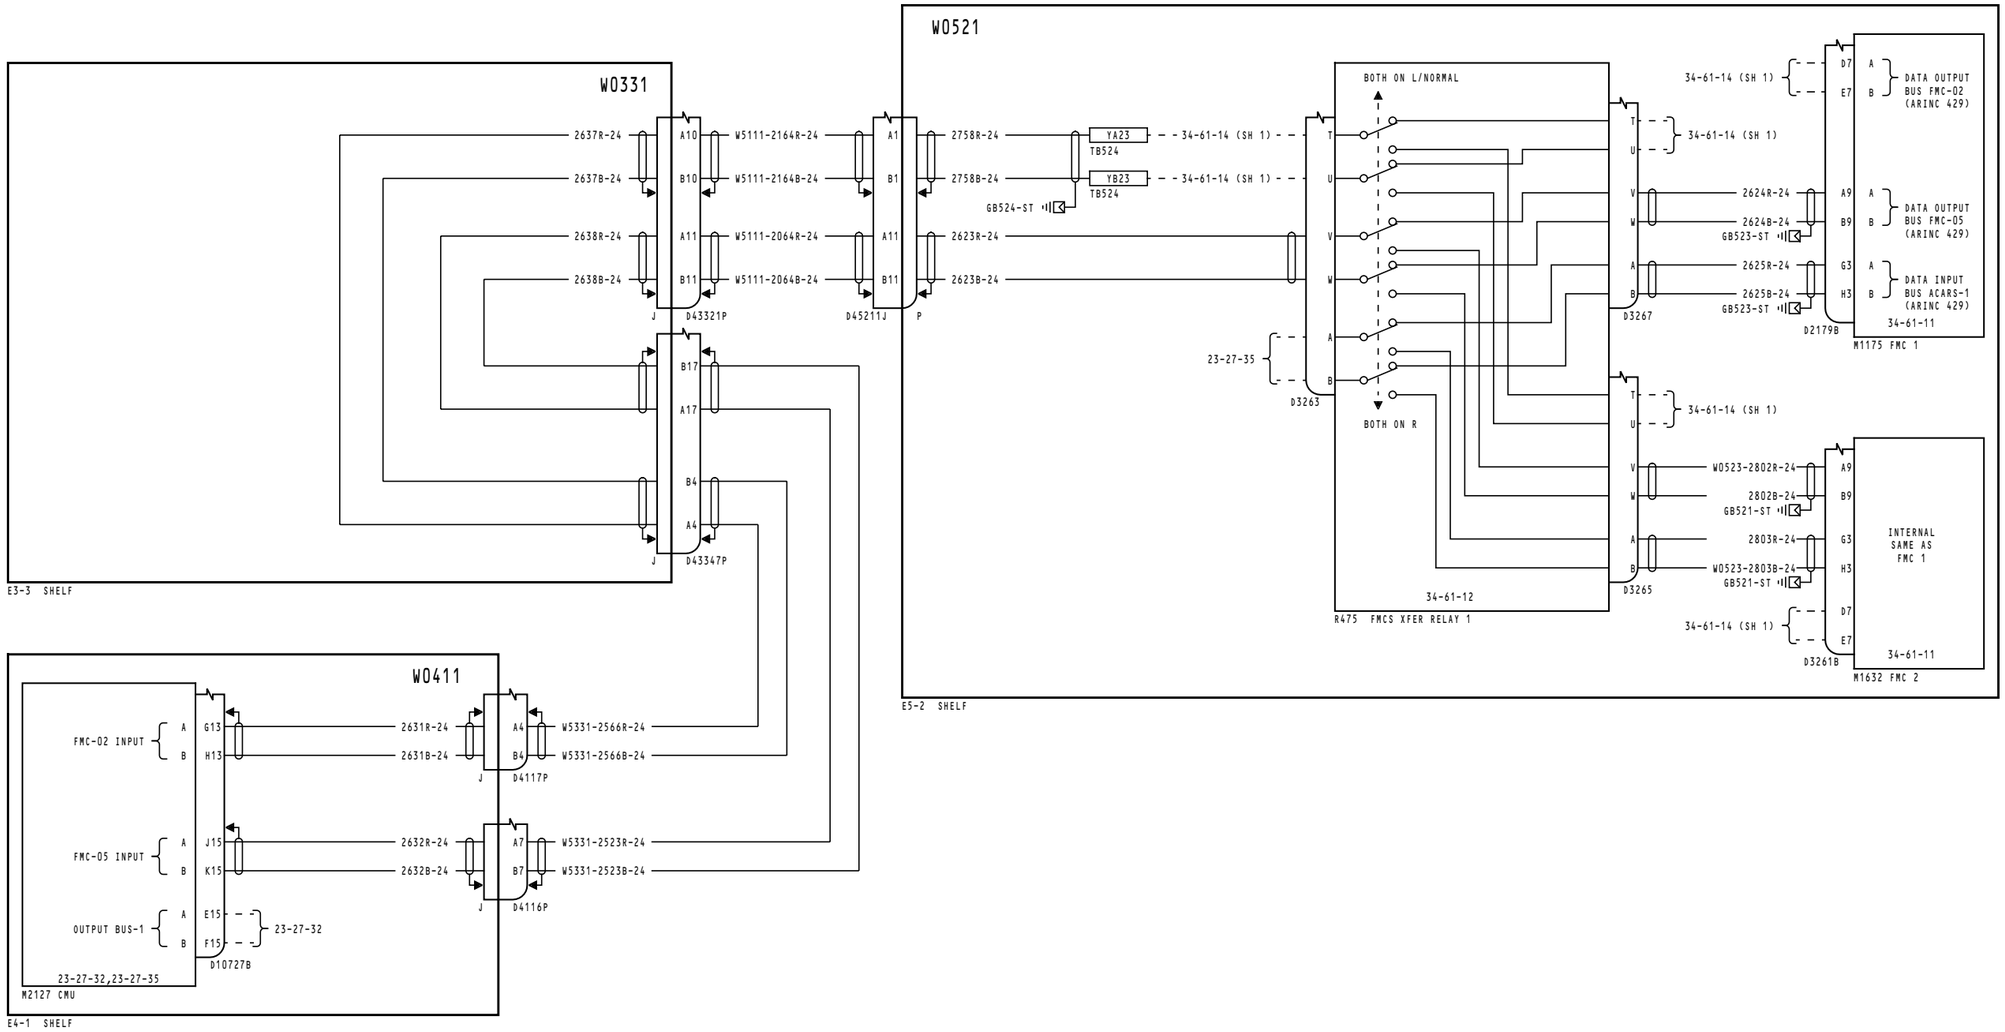
W0331
2637R-24
2637B-24
2638R-24
2638B-24
A10
B10
A11
B11
W5111-2164R-24
W5111-2164B-24
W5111-2064R-24
W5111-2064B-24
J
D43321P
A1
B1
A11
B11
D45211J
P
2758R-24
2758B-24
2623R-24
2623B-24
YA23
YB23
TB524
GB524-ST
34-61-14 (SH 1)
B17
A17
B4
A4
D43347P
E3-3 SHELF
W0521
BOTH ON L/NORMAL
BOTH ON R
23-27-35
D3263
34-61-12
R475 FMCS XFER RELAY 1
T
U
V
W
A
B
D3267
D3265
D3261B
2624R-24
2624B-24
2625R-24
2625B-24
GB523-ST
W0523-2802R-24
2802B-24
GB521-ST
2803R-24
W0523-2803B-24
D7
E7
G3
H3
A9
B9
DATA OUTPUT BUS FMC-02 (ARINC 429)
DATA OUTPUT BUS FMC-05 (ARINC 429)
DATA INPUT BUS ACARS-1 (ARINC 429)
D2179B
M1175 FMC 1
INTERNAL SAME AS FMC 1
M1632 FMC 2
E5-2 SHELF
W0411
FMC-02 INPUT
FMC-05 INPUT
OUTPUT BUS-1
G13
H13
J15
K15
E15
F15
2631R-24
2631B-24
2632R-24
2632B-24
D10727B
23-27-32
23-27-32,23-27-35
M2127 CMU
D4117P
D4116P
W5331-2566R-24
W5331-2566B-24
W5331-2523R-24
W5331-2523B-24
E4-1 SHELF

737-8 WIRING DIAGRAM MANUAL

97

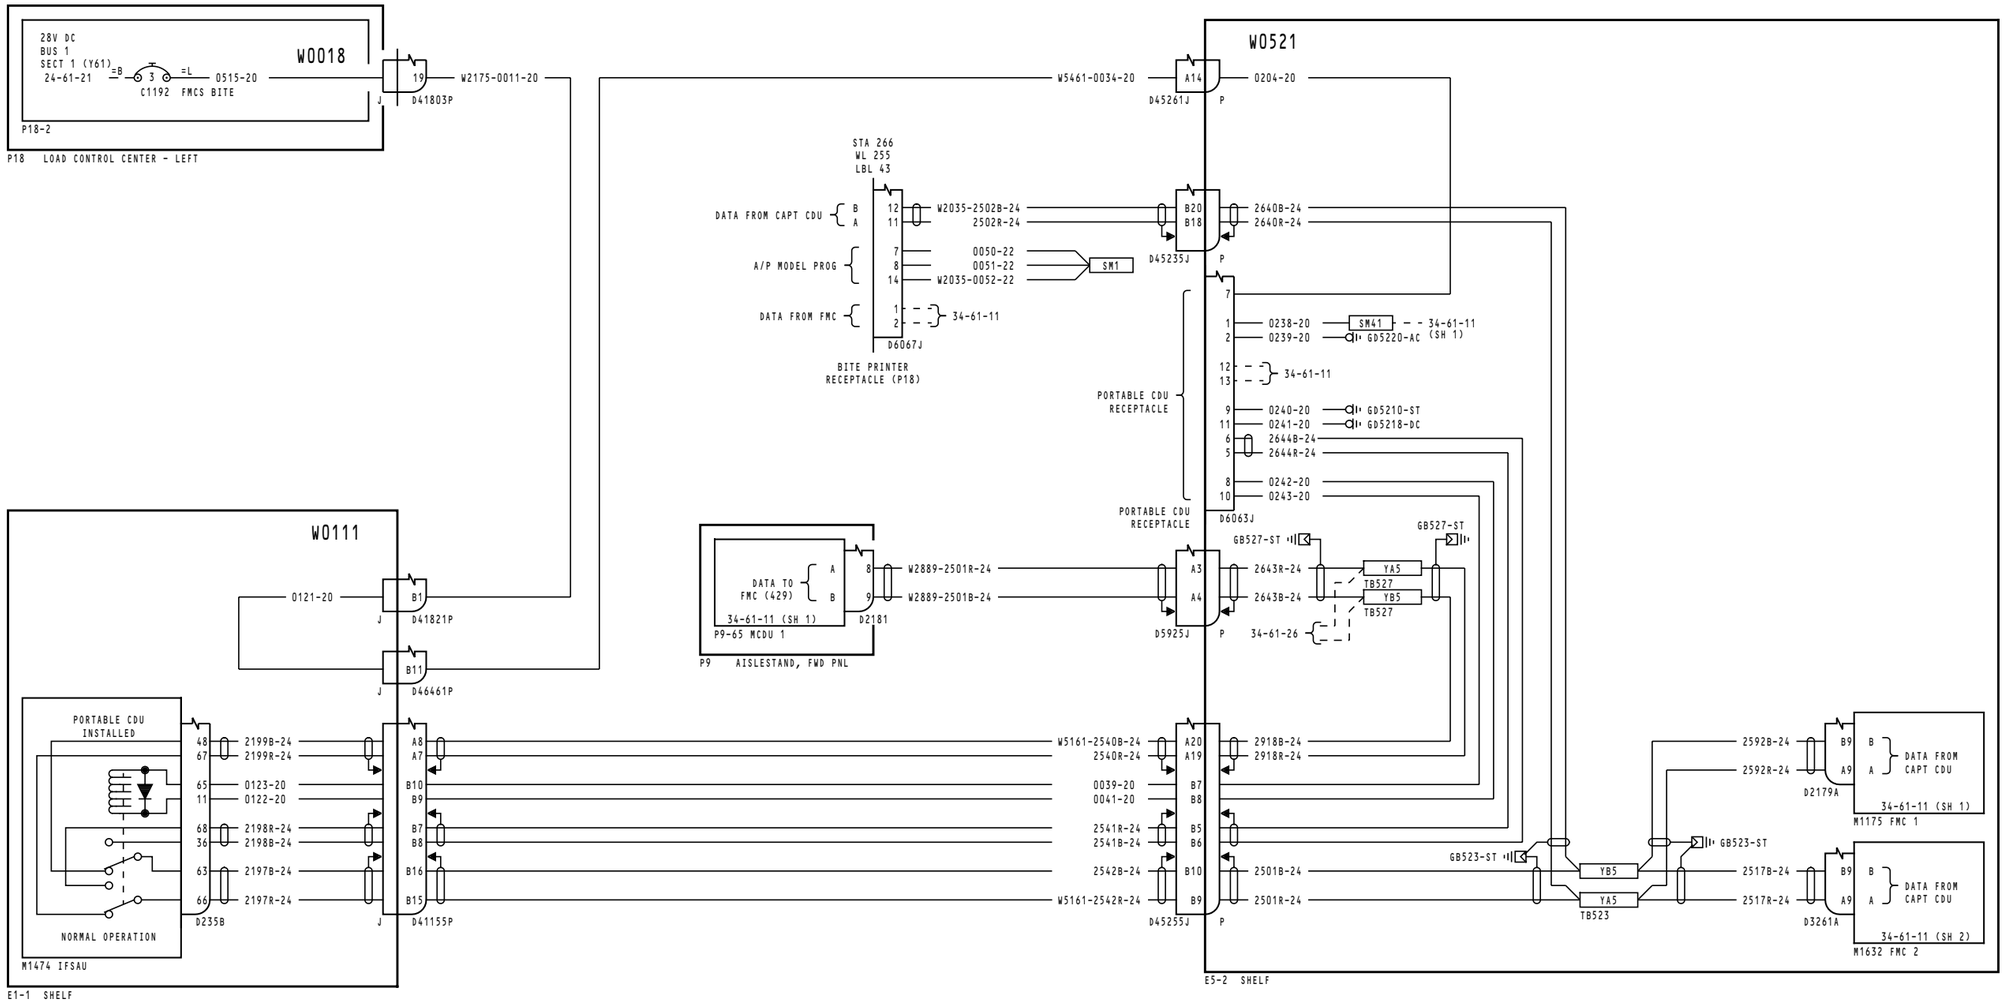


34-61-22

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

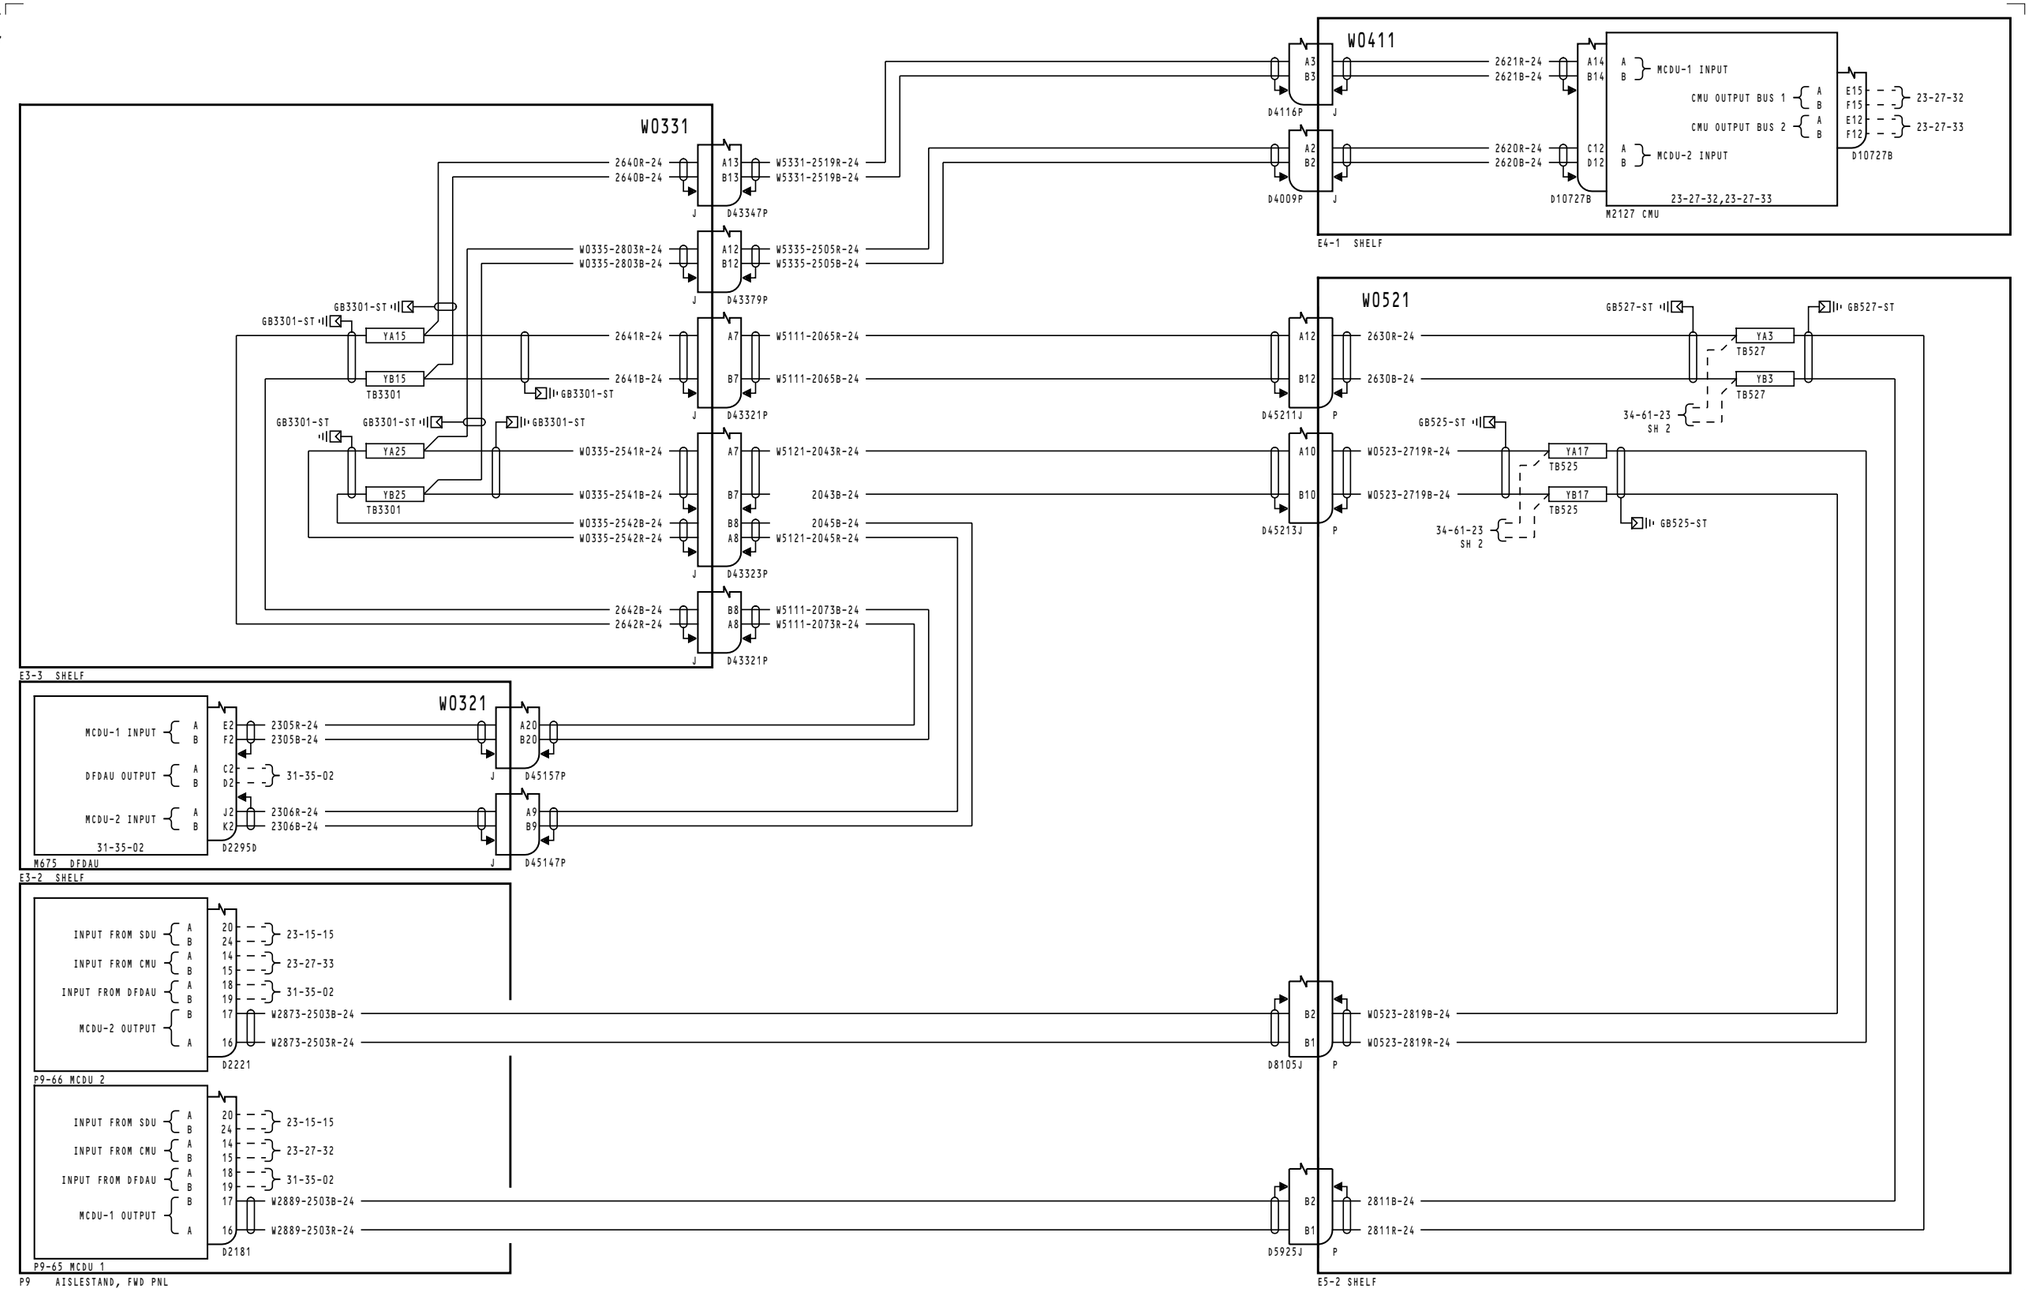

ALL

CDU/MCDU INTERFACE

D280AM1215

34-61-23

Page 1
Sheet 1
May 15/2024


34-61-23

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

42

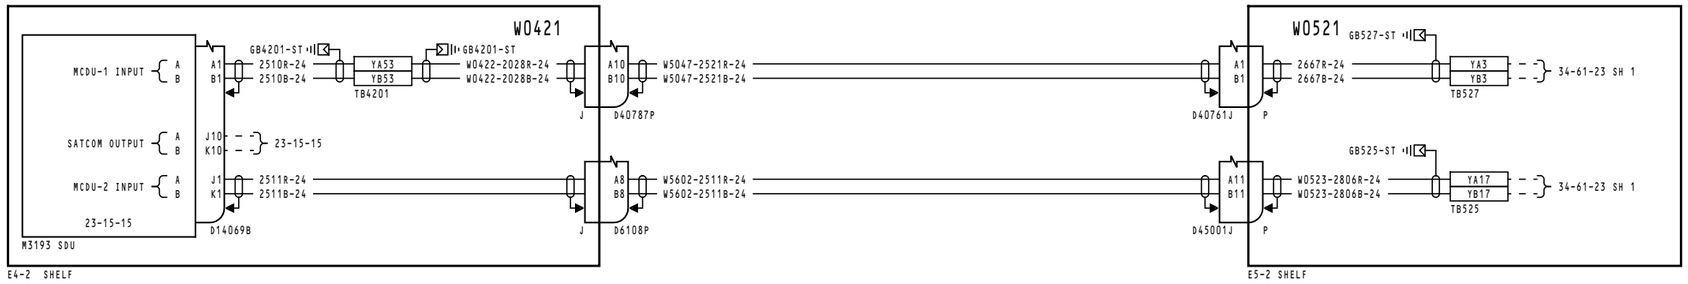


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-23

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

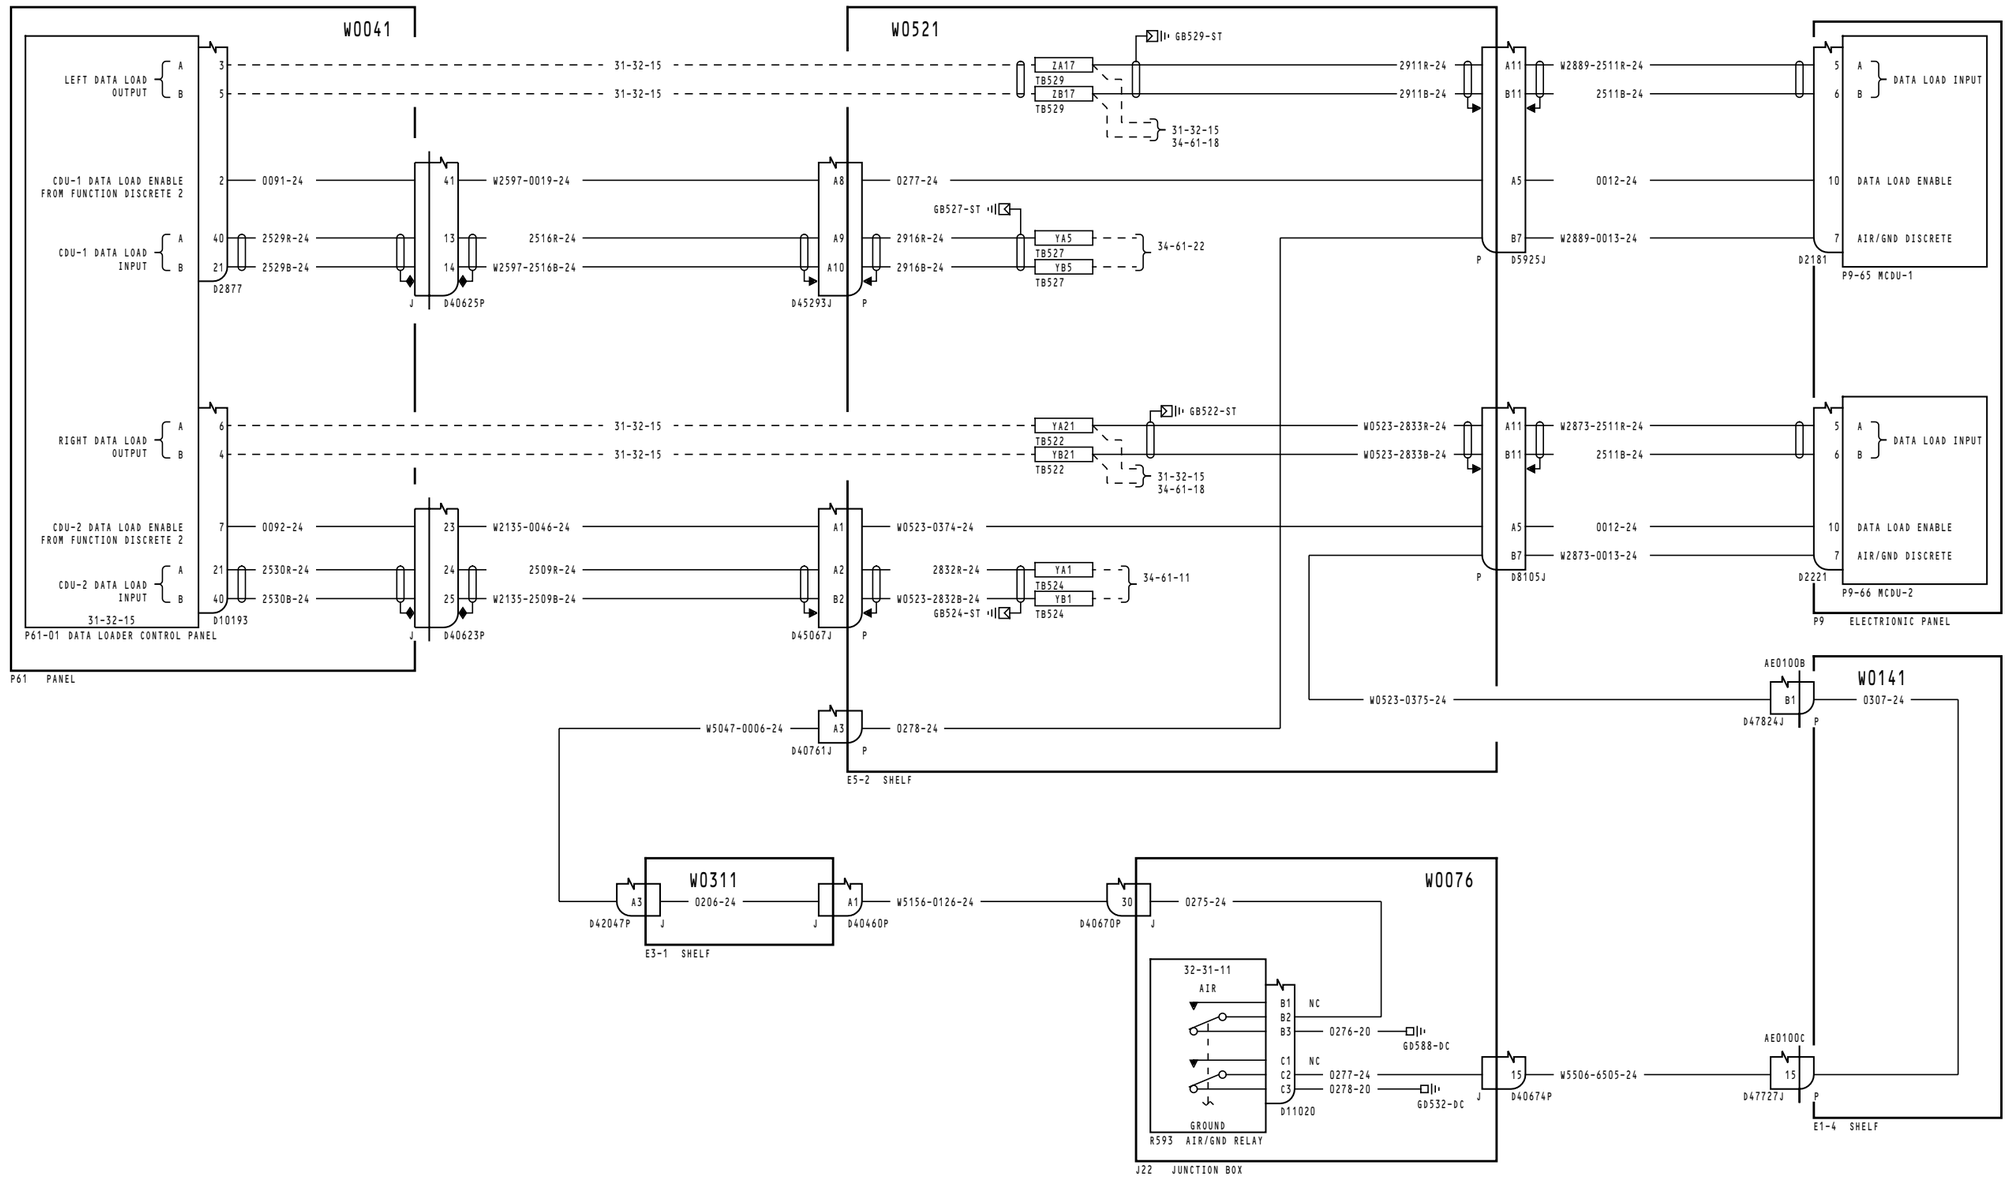


ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-26

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

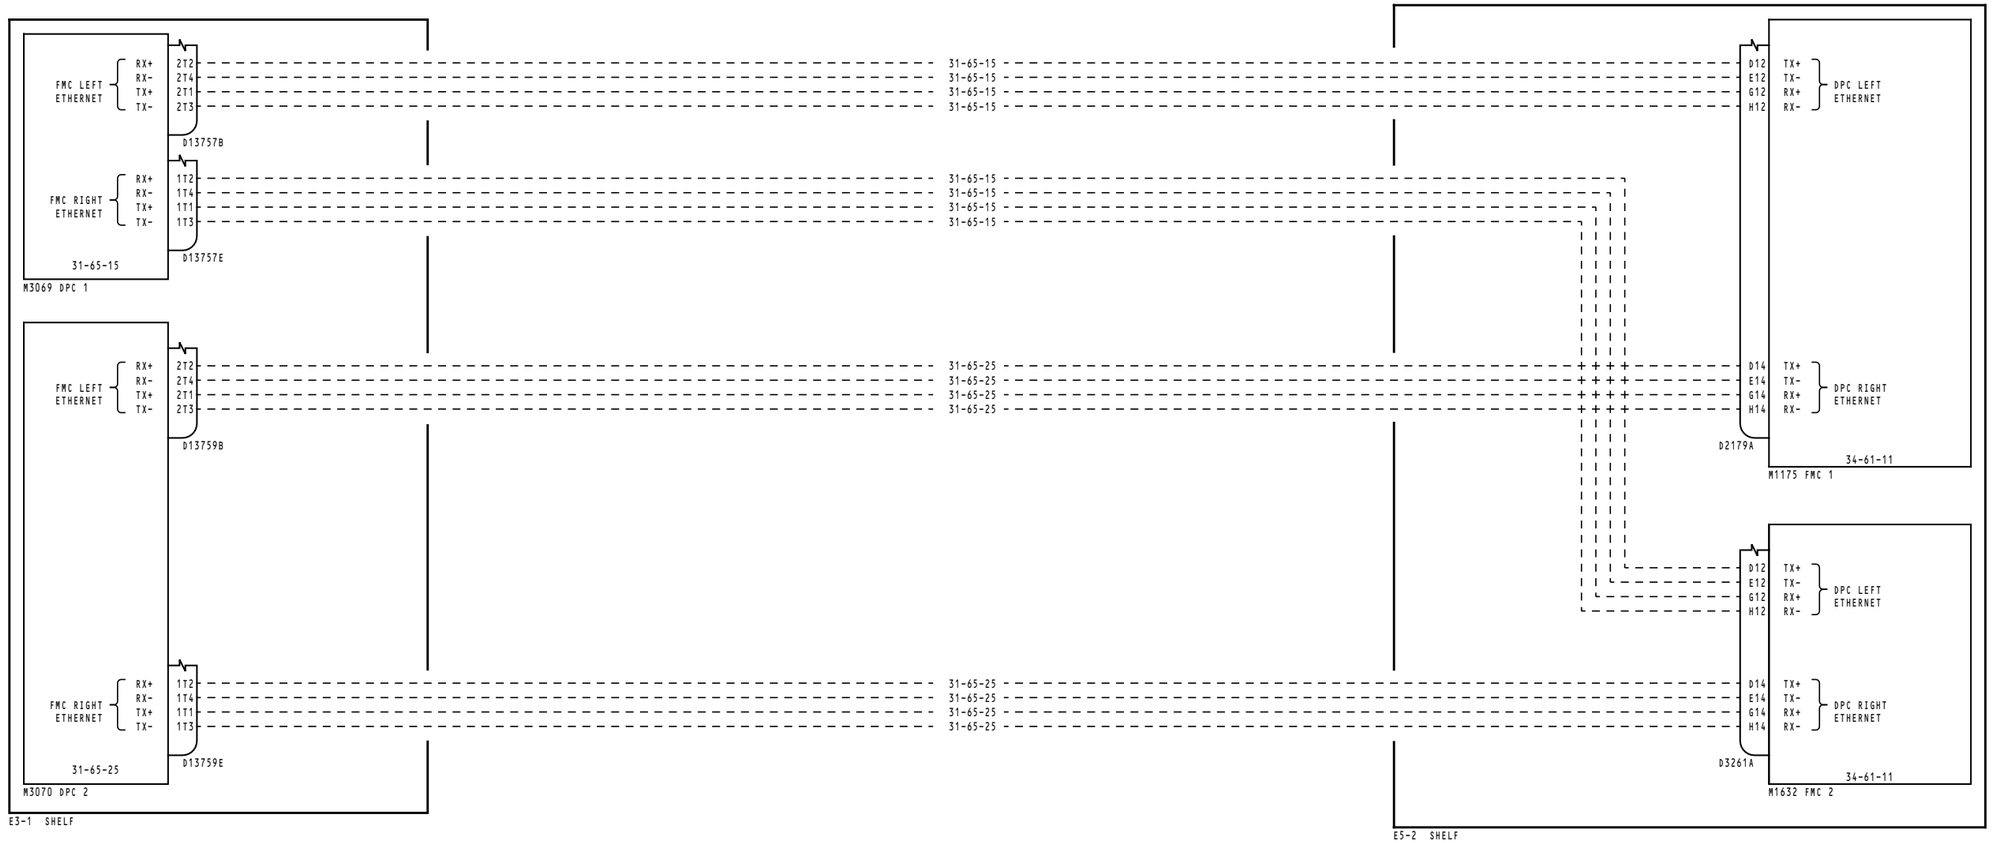

ECCN 9E991 BOEING PROPRIETARY - See title page for details

34-61-27

Page 1

May 15/2024