CHAPTER

52

DOORS

CHAPTER 52
DOORS

CH-SE-SU	Schem	Page	Sheet	Date
52-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
52-CONTENTS				
		1		May 15/2024
		2		BLANK
52-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
52-51-11				
		1		May 15/2024
52-71-11				
		1		May 15/2024
52-71-12				
		1		May 15/2024
52-71-13				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
52-71-14				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 52
DOORS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
CREW DOOR						
CONTROL CABIN DOOR LOCK	52-51-11		1		May 15/2024	ALL
DOOR WARNING SYSTEM						
DOOR WARNING SYSTEM - ENTRY AND SERVICE	52-71-11		1		May 15/2024	ALL
DOOR WARNING SYSTEM - CARGO AND EQUIPMENT	52-71-12		1		May 15/2024	ALL
DOOR WARNING OVERWING - LEFT OVERWING	52-71-13		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
DOOR WARNING OVERWING - RIGHT OVERWING	52-71-14		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 52
DOORS


CH-SE-SU	Title
52-51-11	CONTROL CABIN DOOR LOCK
52-71-13	DOOR WARNING OVERWING - LEFT OVERWING
52-71-14	DOOR WARNING OVERWING - RIGHT OVERWING
52-71-12	DOOR WARNING SYSTEM - CARGO AND EQUIPMENT
52-71-11	DOOR WARNING SYSTEM - ENTRY AND SERVICE

52-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

16

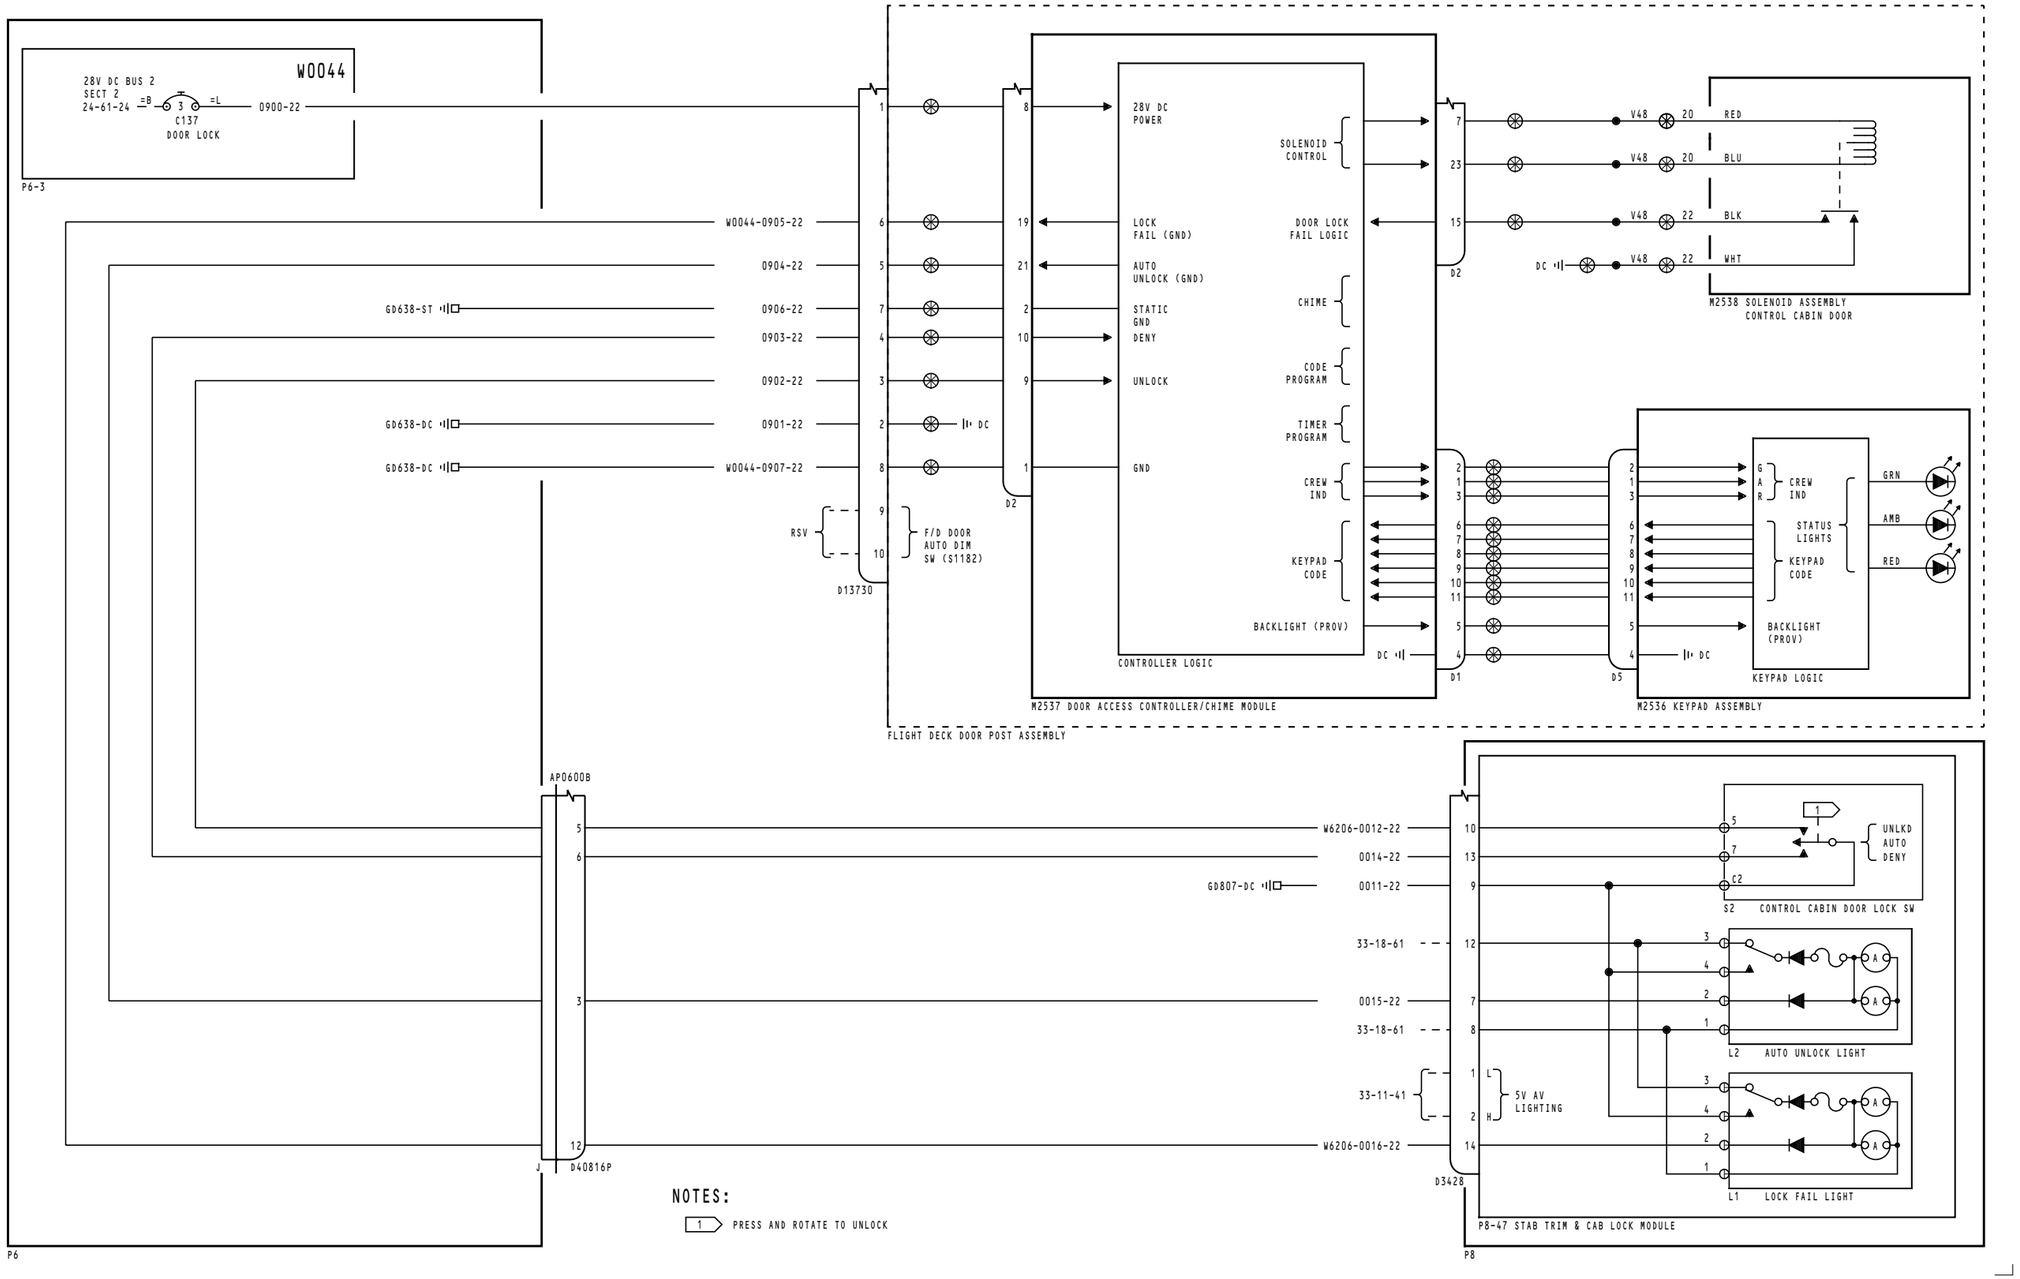


NOTES:

1 PRESS AND ROTATE TO UNLOCK

ALL	CONTROL CABIN DOOR LOCK	52-51-11	
	D280AM1215	Page 1	
		May 15/2024	

ECCN 9E991 BOEING PROPRIETARY - See title page for details

52-51-11
Page 1
May 15/2024

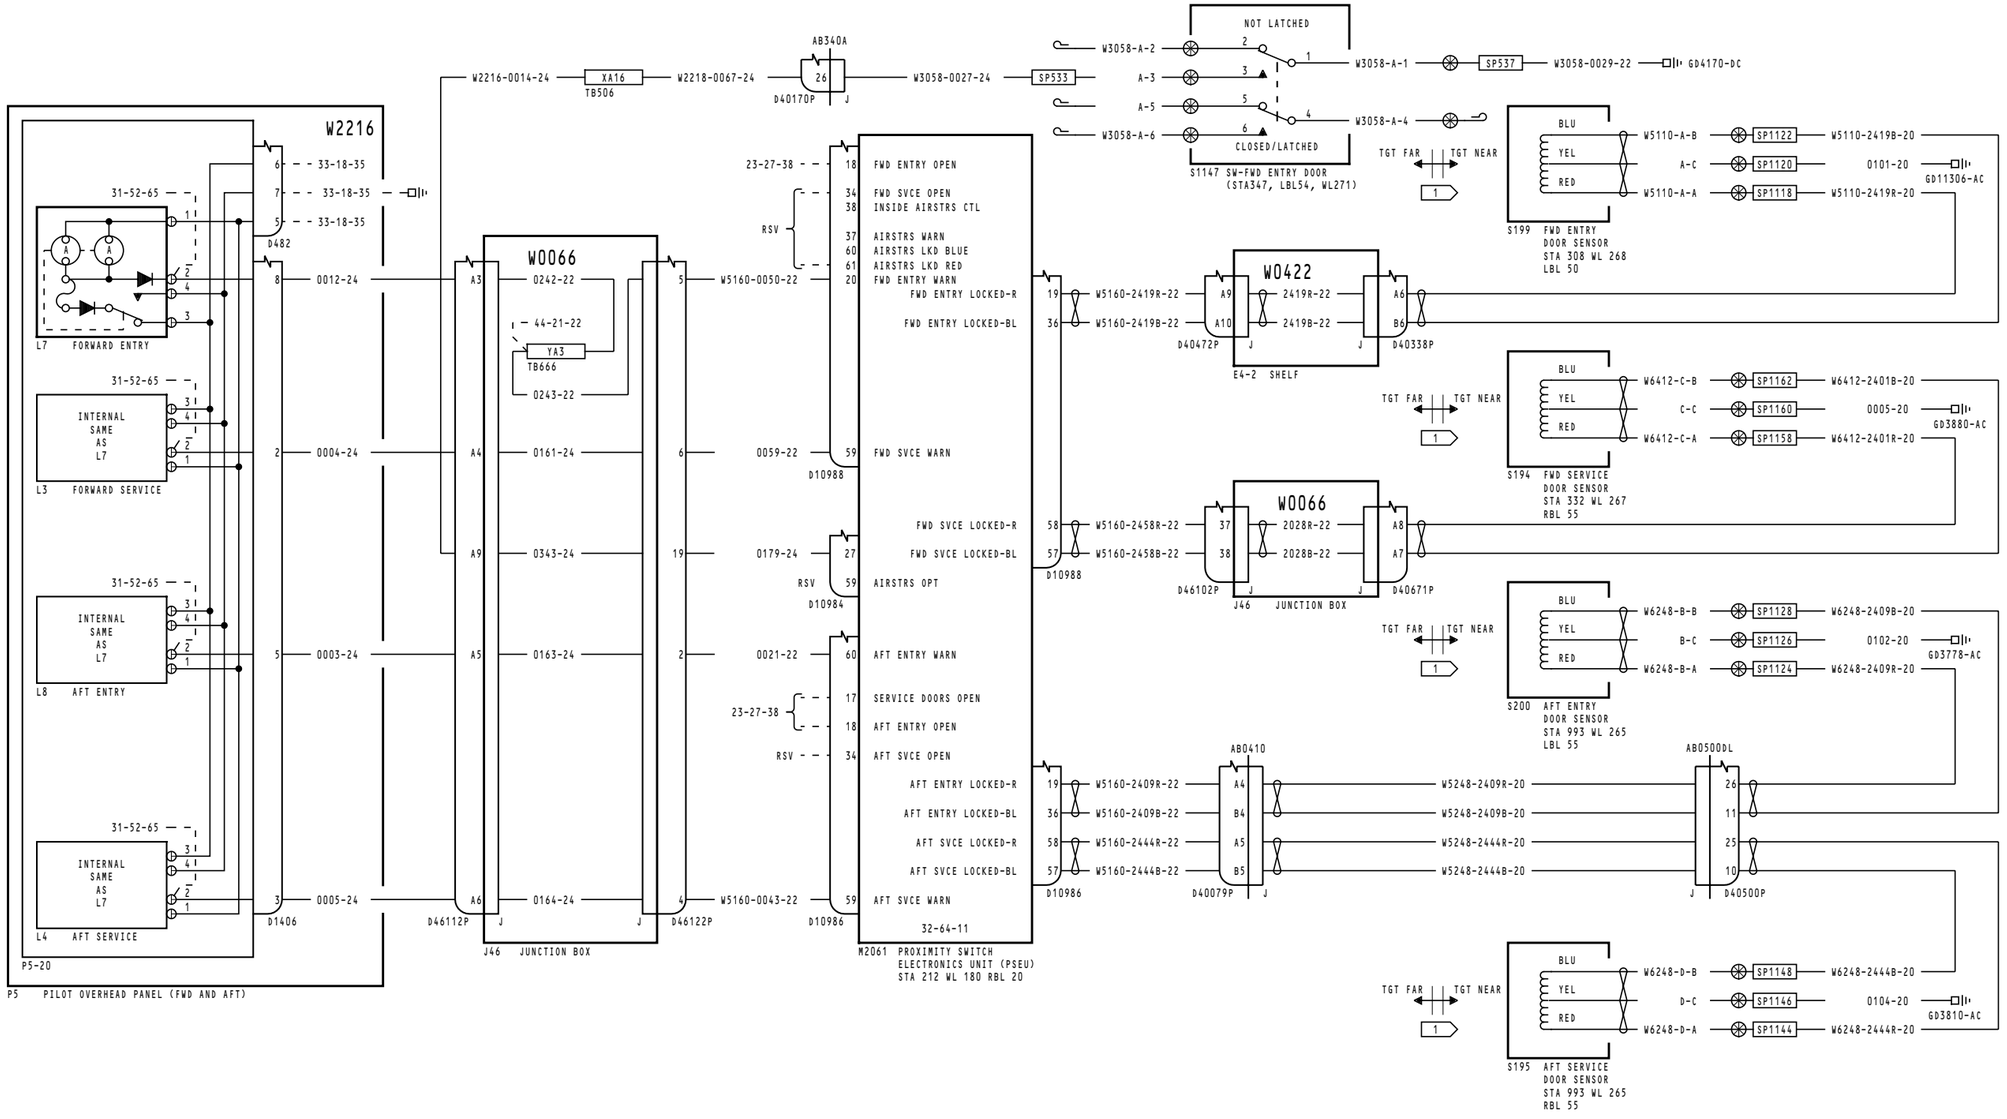

NOTES:

1. TARGET FAR = DOOR OPEN
   TARGET NEAR = DOOR CLOSED

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


52-71-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
105

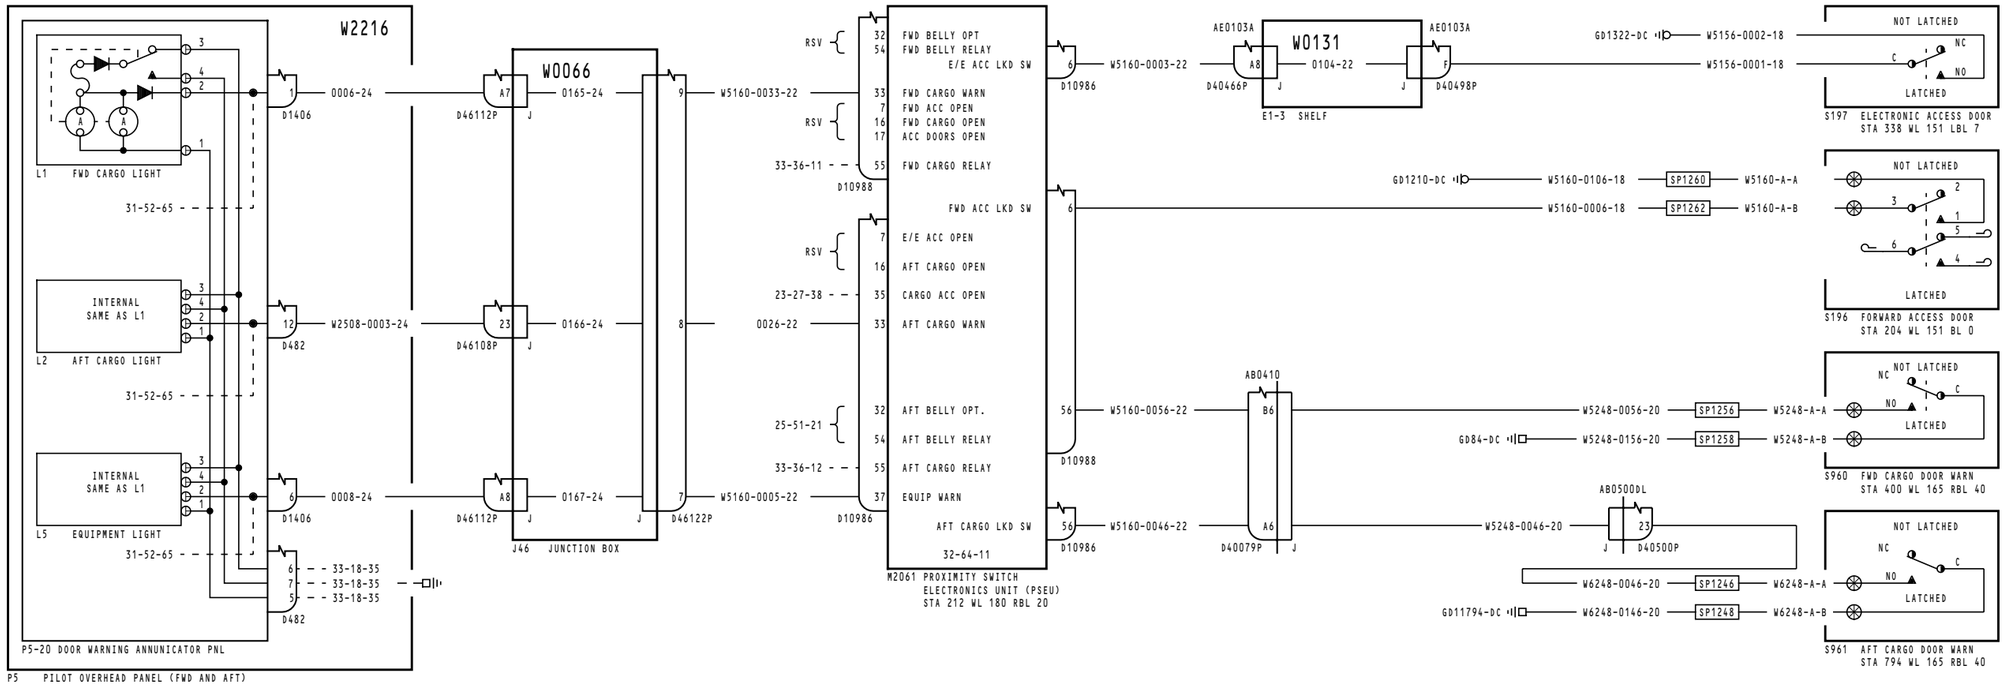

ECCN 9E991 BOEING PROPRIETARY - See title page for details


52-71-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
13

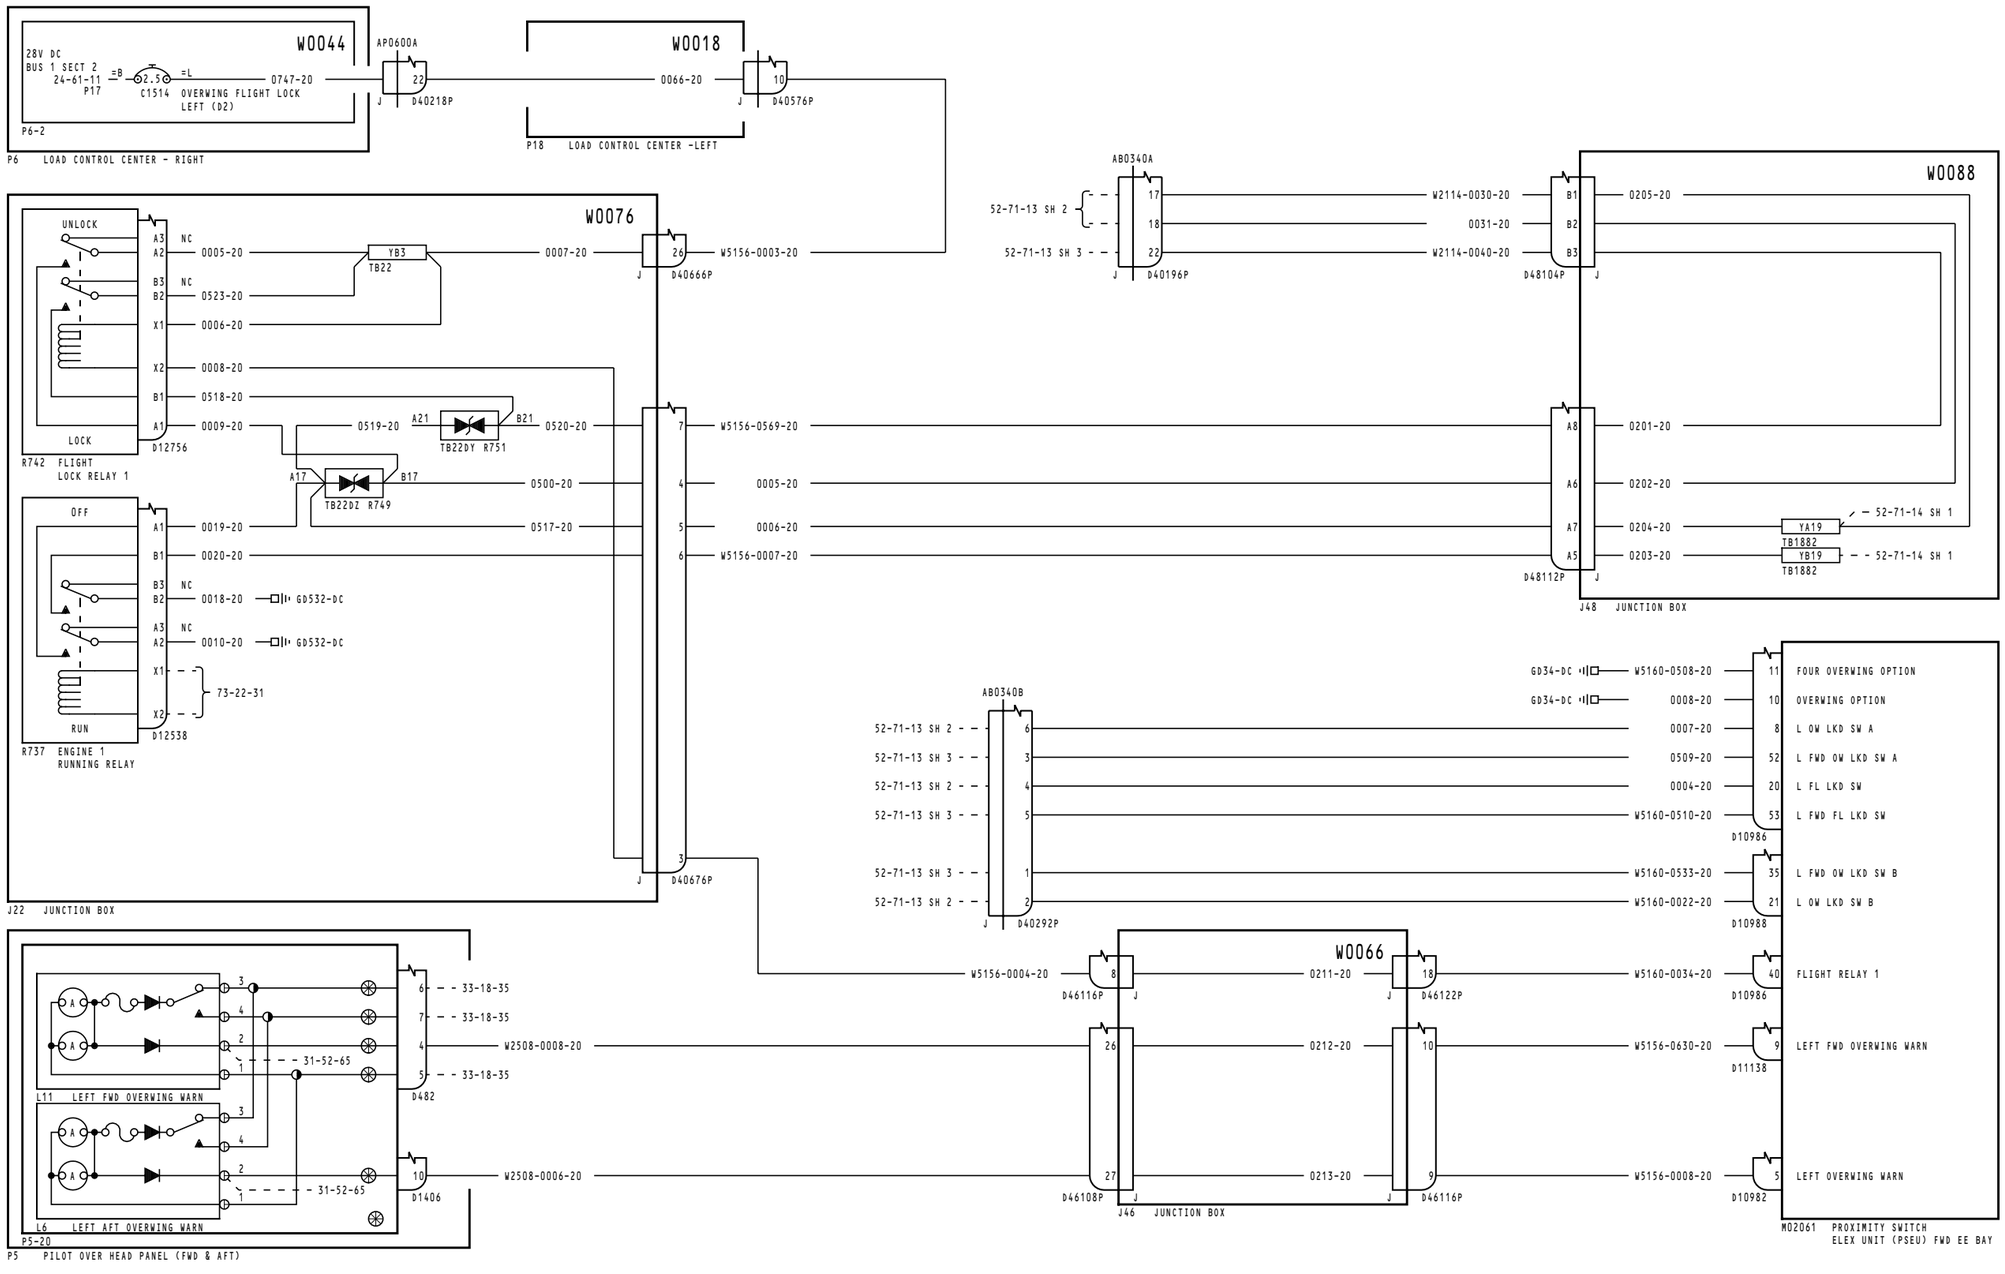

ALL

DOOR WARNING OVERWING - LEFT OVERWING

D280AM1215

52-71-13

Page 1
Sheet 1
May 15/2024


52-71-13

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
14

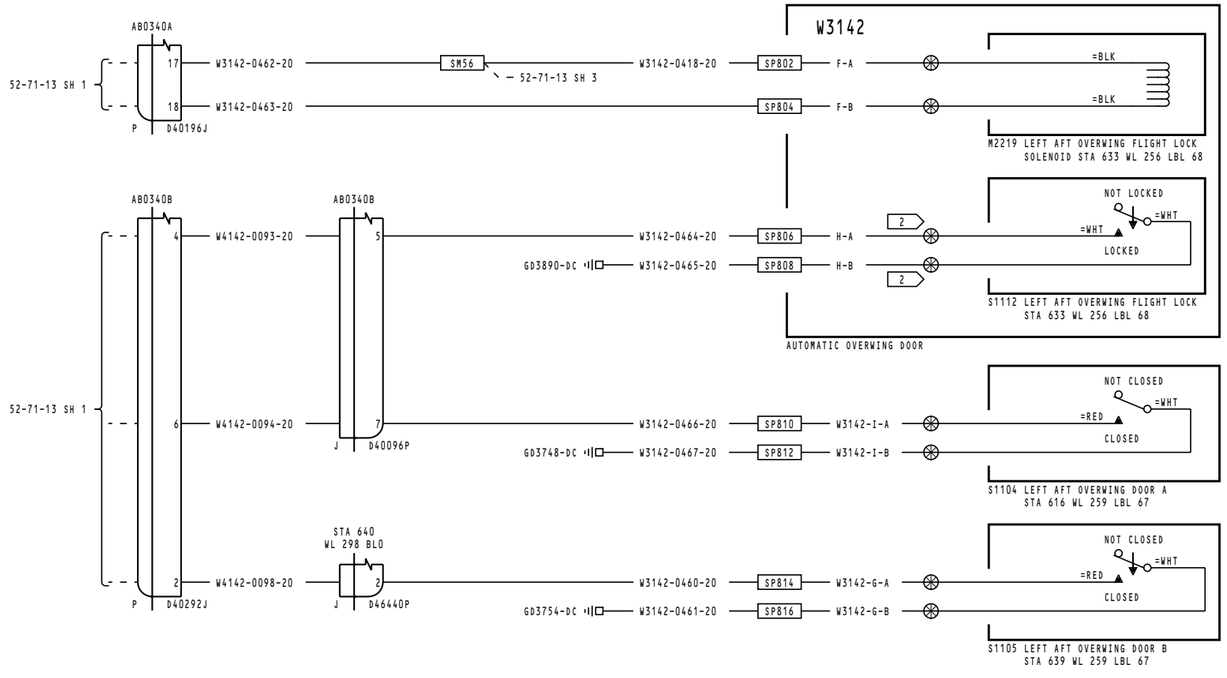

2 IF VENDOR WIRE IS 22 GAUGE PER BMS 13-80 TYPE 1 CLASS 1 WIRE GREEN


ECCN 9E991 BOEING PROPRIETARY - See title page for details

52-71-13

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
2

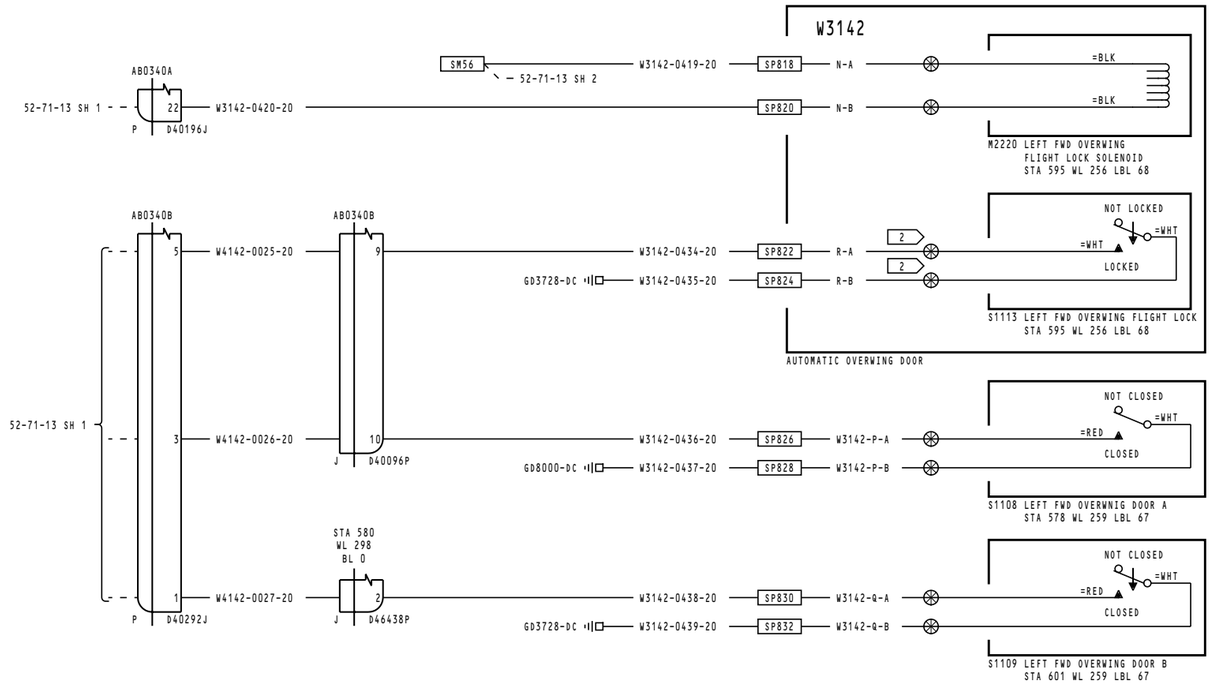

2 IF VENDOR WIRE IS 22 GAUGE PER BMS 13-80 TYPE 1 CLASS 1 WIRE GREEN


ECCN 9E991 BOEING PROPRIETARY - See title page for details

52-71-13

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
19

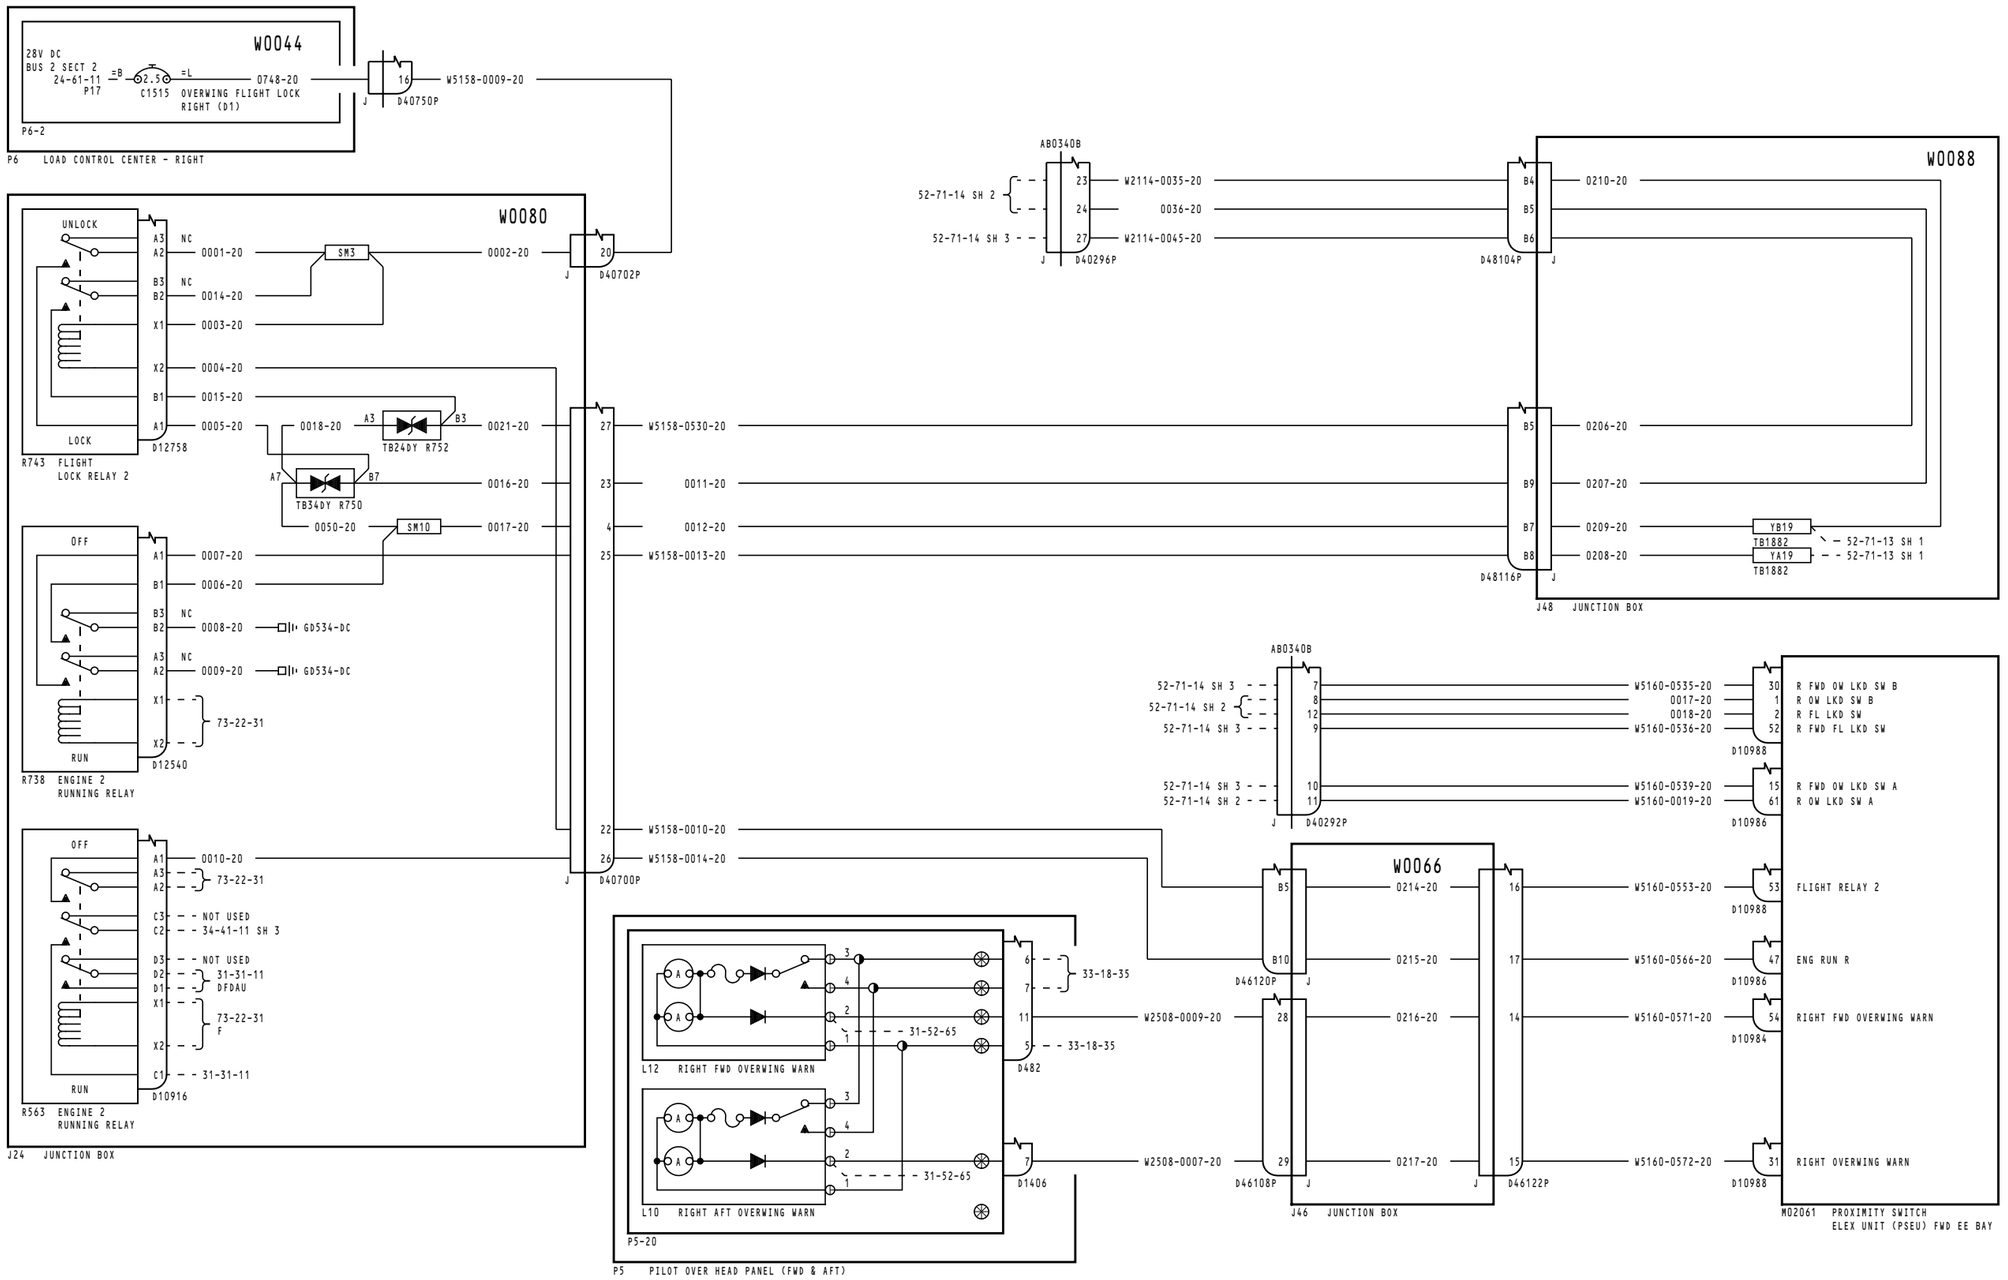

ALL

DOOR WARNING OVERWING - RIGHT OVERWING

D280AM1215

52-71-14

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

52-71-14

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
6

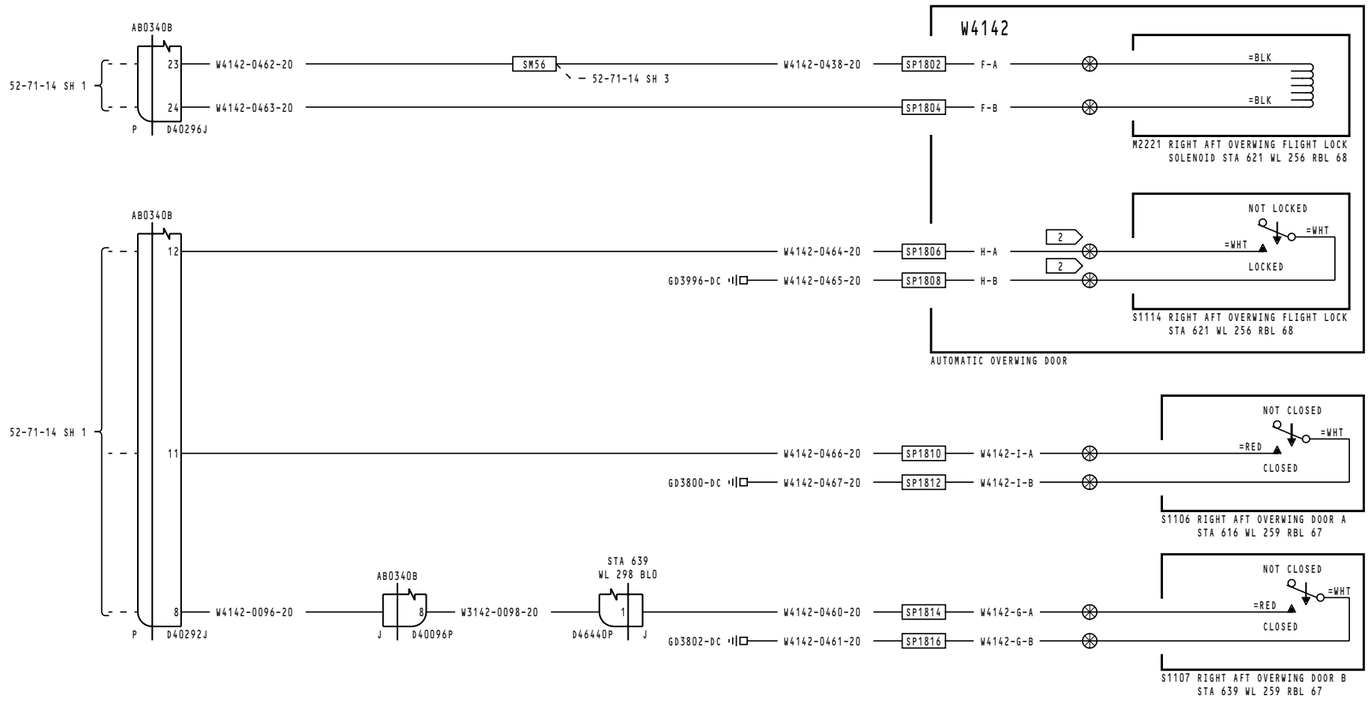

2 IF VENDOR WIRE IS 22 GAUGE PER BMS 13-60 TYPE 1 CLASS 1 WIRE GREEN


ECCN 9E991 BOEING PROPRIETARY - See title page for details

52-71-14

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
2

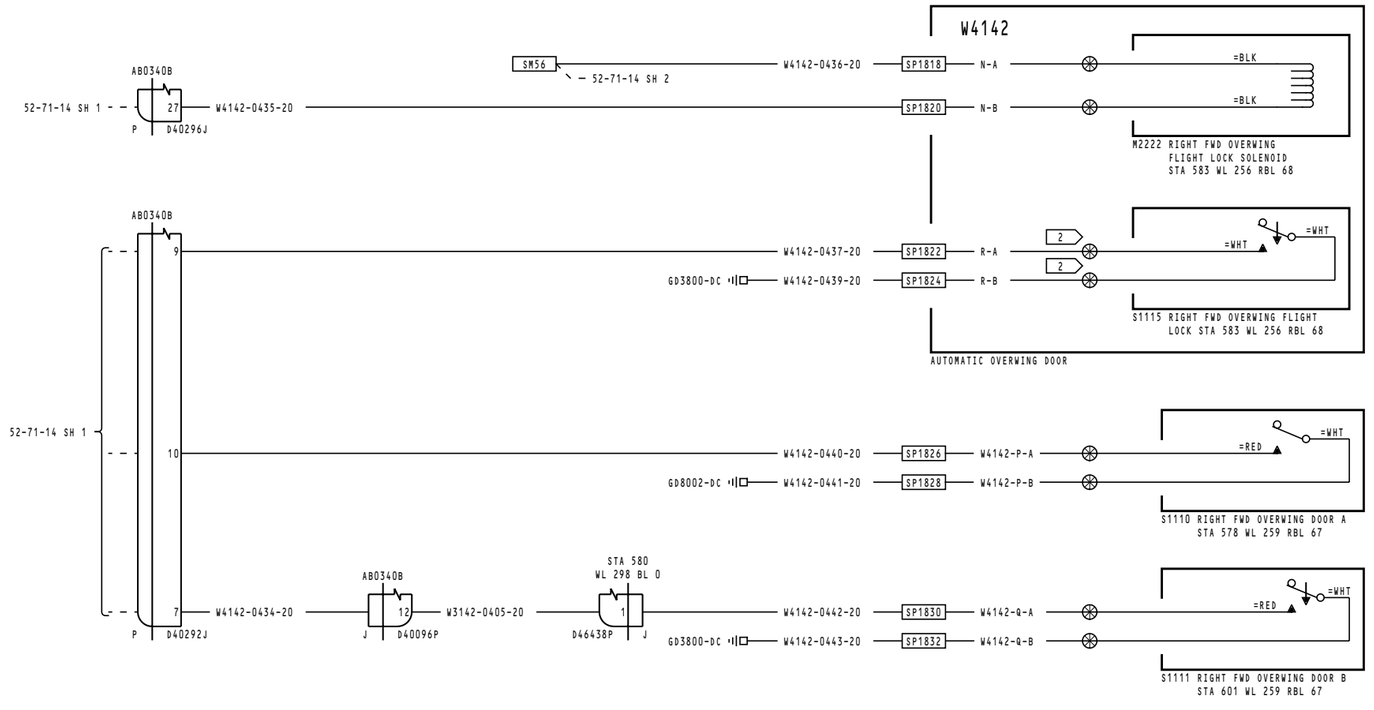

2 IF VENDOR WIRE IS 22 GAUGE PER BMS 13-60 TYPE 1 CLASS 1 WIRE GREEN

ALL

DOOR WARNING OVERWING - RIGHT OVERWING

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details

52-71-14

Page 1
Sheet 3
May 15/2024