# CHAPTER 80

# STARTING

# CHAPTER 80
# STARTING


| CH-SE-SU | Schem | Page | Sheet | Date |
|---|---|---|---|---|
| **80-EFFECTIVE PAGES** | | | | |
| | | 1 | | Nov 14/2025 |
| | | 2 | | BLANK |
| **80-CONTENTS** | | | | |
| | | 1 | | May 15/2024 |
| | | 2 | | BLANK |
| **80-ALPHABETICAL INDEX** | | | | |
| | | 1 | | May 15/2024 |
| | | 2 | | BLANK |
| **80-11-11** | | | | |
| | | 1 | 1 | May 15/2024 |
| | | | 2 | May 15/2024 |


A = Added, R = Revised, D = Deleted, O = Overflow



ECCN 9E991 BOEING PROPRIETARY - See title page for details

# CHAPTER 80
# STARTING


| Title | CH-SE-SU | Schem | Page | Sheet | Date | Effectivity |
|---|---|---|---|---|---|---|
| **ENGINE STARTING SYSTEM** | | | | | | |
| ENGINE STARTING SYSTEM | 80-11-11 | | 1 | 1 | May 15/2024 | ALL |
| | | | | 2 | May 15/2024 | ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 80
## STARTING


| CH-SE-SU | Title |
|---|---|
| 80-11-11 | ENGINE STARTING SYSTEM |

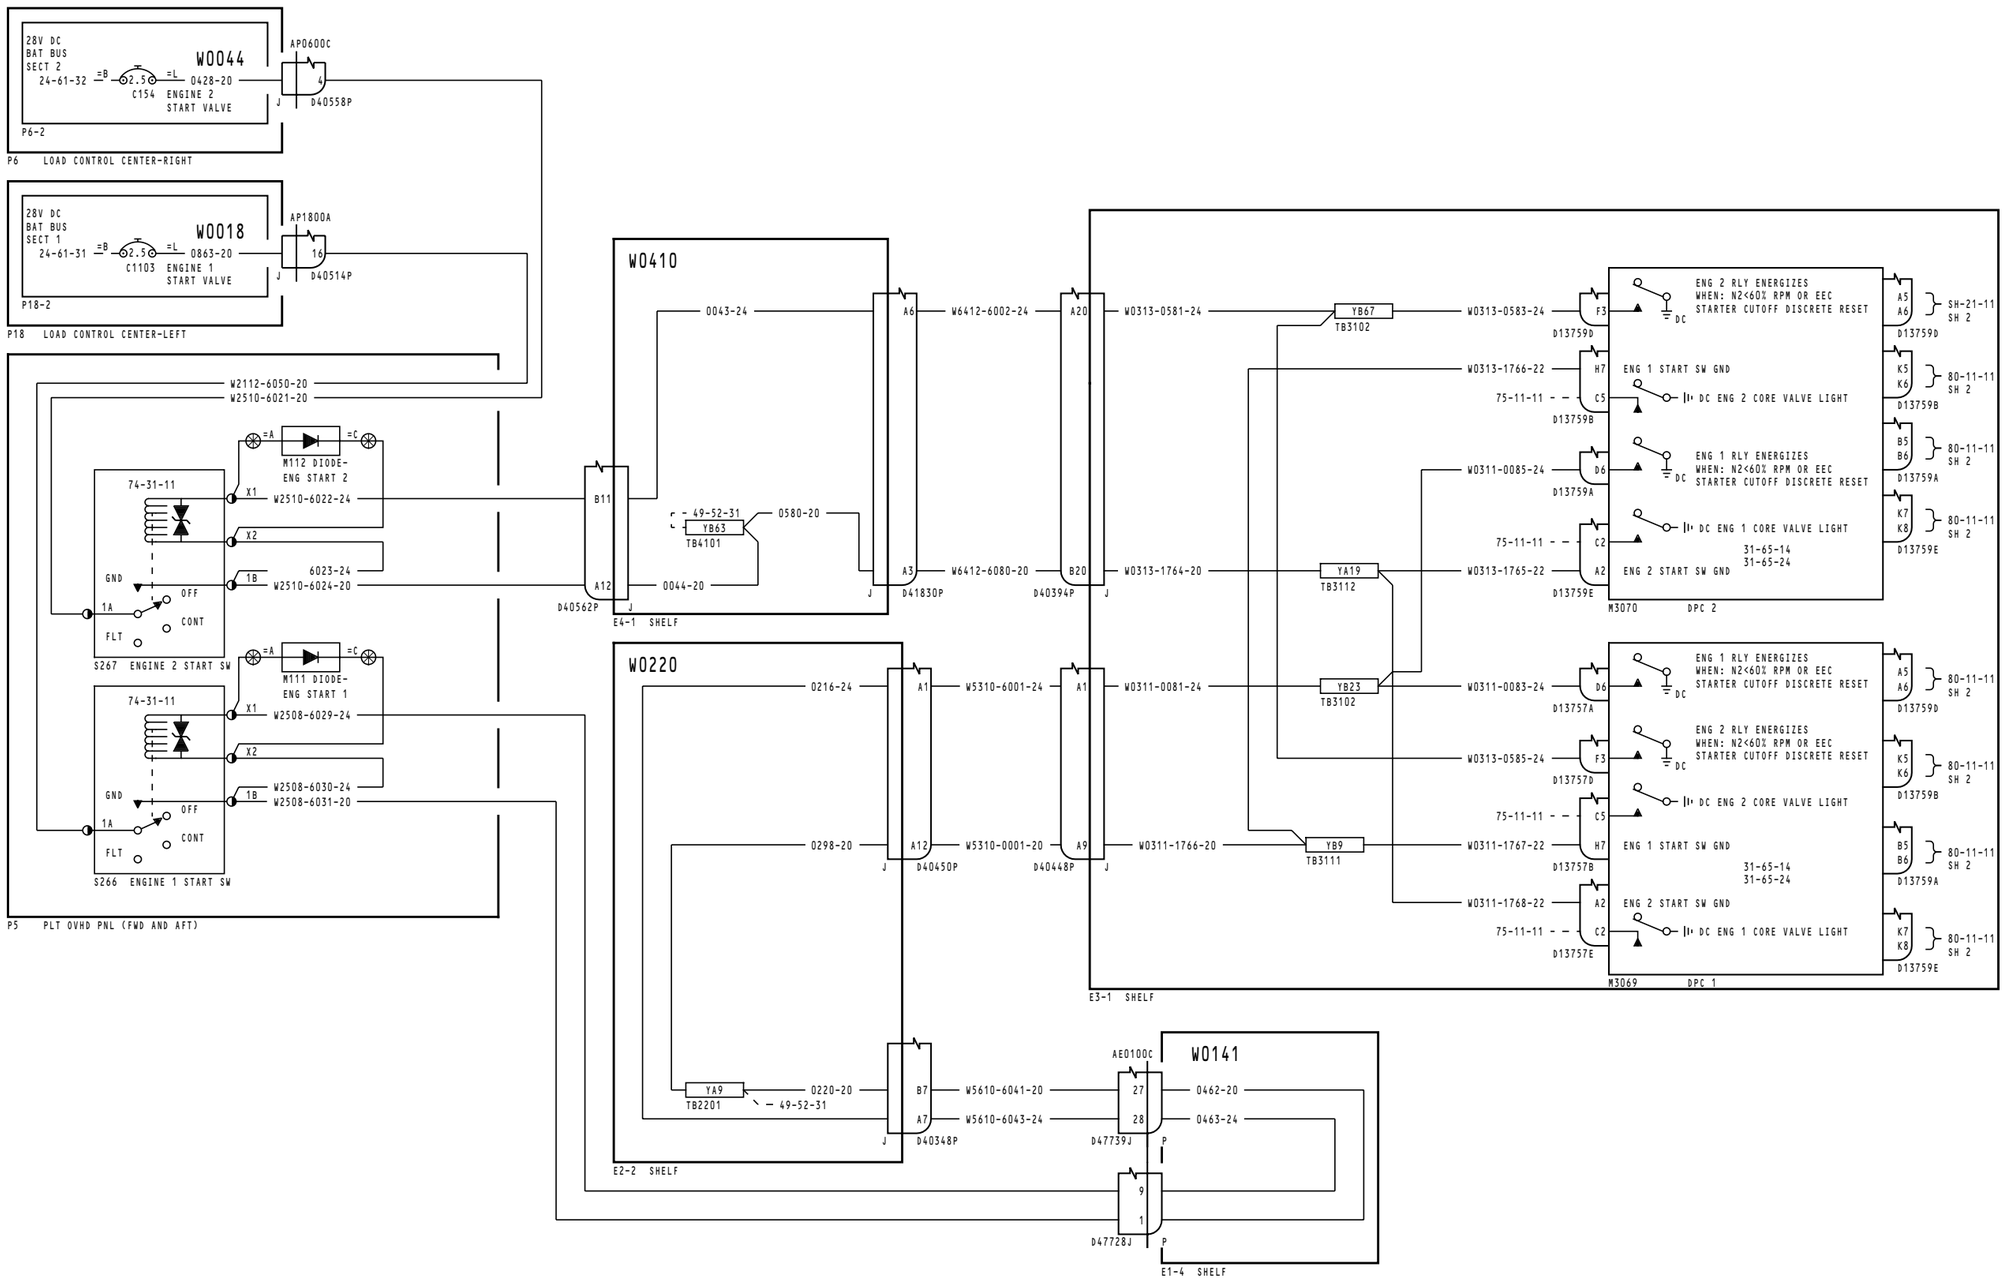

# 80-ALPHABETICAL INDEX



ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

12





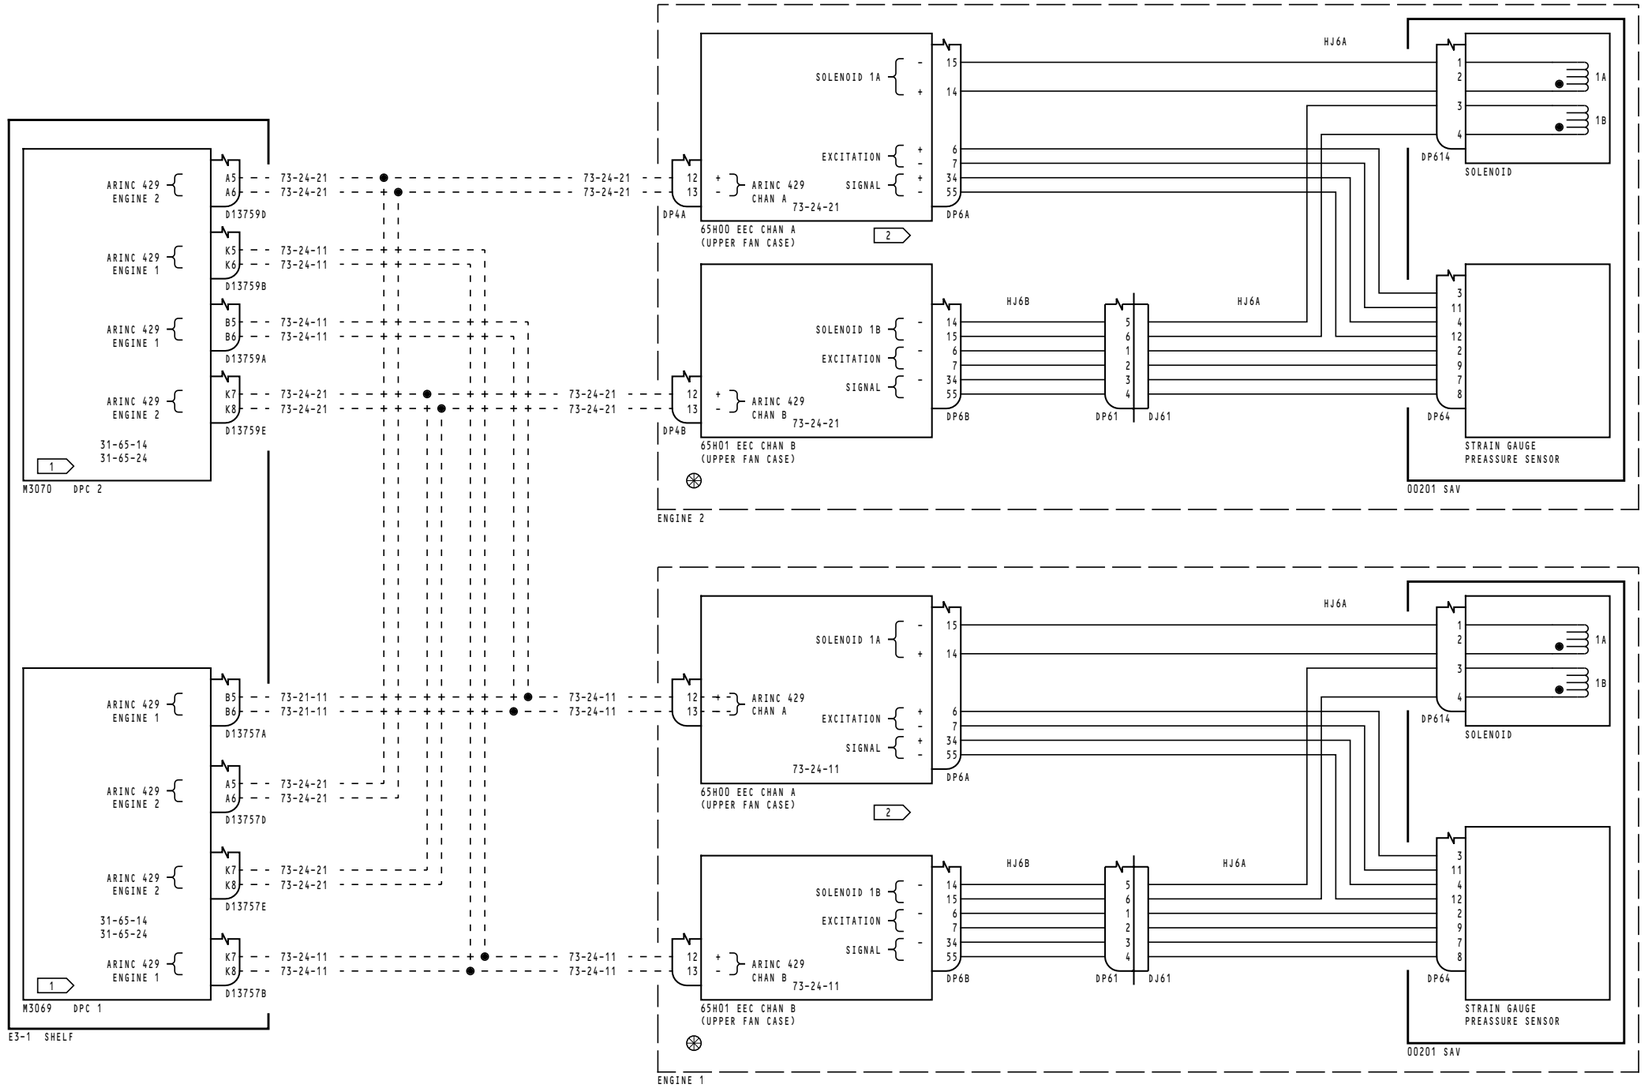

ECCN 9E991 BOEING PROPRIETARY - See title page for details

80-11-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
1




NOTES:

1 SEE SHEET 1 FOR INTERNAL INFORMATION

2 CROSSLINK CONNECTIONS BETWEEN 65H00 AND 65H01 SHOWN ON 73-21-12



ECCN 9E991 BOEING PROPRIETARY - See title page for details

80-11-11

Page 1
Sheet 2
May 15/2024