CHAPTER

91

CHARTS

CHAPTER 91
CHARTS

CH-SE-SU	Schem	Page	Sheet	Date
91-EFFECTIVE PAGES				
		1 thru 2		Nov 14/2025
91-CONTENTS				
		1		Apr 23/2025
		2		May 15/2024
		3		May 15/2024
		4		BLANK
91-ALPHABETICAL INDEX				
		1		May 15/2024
		2		May 15/2024
91-00-01				
		1		May 15/2024
91-00-02				
		1		May 15/2024
91-01-01				
		1		May 15/2024
91-01-02				
		1		May 15/2024
91-01-03				
		1		May 15/2024
91-01-04				
		1		May 15/2024
91-01-05				
		1		Apr 23/2025
91-01-06				
		1		May 15/2024
91-01-07				
		1		May 15/2024
91-02-01				
		1		May 15/2024
91-02-02				
		1		May 15/2024
91-02-03				
		1		May 15/2024
91-02-05				
		1	1	May 15/2024
			2	May 15/2024
91-02-06				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
			5	May 15/2024
			6	May 15/2024
91-02-06 (cont)				
			7	May 15/2024
91-02-07				
		1		May 15/2024
91-02-08				
		1		May 15/2024
91-02-09				
		1		May 15/2024
91-02-15				
		1		May 15/2024
91-02-18				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
91-02-19				
		1		May 15/2024
91-02-21				
		1		May 15/2024
91-02-23				
		1		May 15/2024
91-02-28				
		1		May 15/2024
91-02-41				
		1		May 15/2024
91-02-42				
		1		May 15/2024
91-02-61				
		1		May 15/2024
91-02-91				
		1		May 15/2024
91-02-92				
		1		May 15/2024
91-03-01				
		1		May 15/2024
91-03-02				
		1		May 15/2024
91-03-03				
		1		May 15/2024
91-03-04				
		1		May 15/2024
91-03-05				
		1		May 15/2024
91-03-06				
		1		May 15/2024
91-03-13				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 91
CHARTS

CH-SE-SU	Schem	Page	Sheet	Date
91-03-14				
		1		May 15/2024
91-04-01				
		1		May 15/2024
91-04-02				
		1		May 15/2024
91-04-04				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
91-04-05				
		1		May 15/2024
91-04-06				
		1	1	May 15/2024
			2	May 15/2024
91-04-07				
		1		May 15/2024
91-04-08				
		1		May 15/2024
91-04-10				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
91-04-12				
		1		May 15/2024
91-04-13				
		1	1	May 15/2024
			2	May 15/2024
91-04-14				
		1		May 15/2024
91-04-15				
		1	1	May 15/2024
			2	May 15/2024
91-06-01				
		1	1	May 15/2024
			2	May 15/2024

CH-SE-SU	Schem	Page	Sheet	Date

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 91
CHARTS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
MISCELLANEOUS						
AIRPLANE STATION BODY & VERTICAL STABLISER	91-00-01		1		May 15/2024	ALL
AIRPLANE STATION WING & HORIZONTAL STABLIZER	91-00-02		1		May 15/2024	ALL
GENERAL LOCATIONS						
WIRE ZONE	91-01-01		1		May 15/2024	ALL
MAJOR RACEWAYS	91-01-02		1		May 15/2024	ALL
FLIGHT DECK PANEL LOCATION	91-01-03		1		May 15/2024	ALL
PANEL LOCATIONS	91-01-04		1		May 15/2024	ALL
RACK AND JUNCTION BOX LOCATION	91-01-05		1		Apr 23/2025	ALL
DISCONNECT BRACKET LOCATION	91-01-06		1		May 15/2024	ALL
ANTENNA LOCATION	91-01-07		1		May 15/2024	ALL
CIRCUIT BREAKER PANELS						
P1 - MAIN CAPTAIN PANEL	91-02-01		1		May 15/2024	ALL
P2 - CENTER INSTRUMENT PANEL	91-02-02		1		May 15/2024	ALL
P3 - MAIN FIRST OFFICER PANEL	91-02-03		1		May 15/2024	ALL
P5 - PILOT OVERHEAD PANEL	91-02-05		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
P6 - TERMINAL STRIPS, CIRCUIT BREAKER PANELS & EQUIPMENT	91-02-06		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
				5	May 15/2024	ALL
				6	May 15/2024	ALL
				7	May 15/2024	ALL
P7 - MAIN CENTER PANEL	91-02-07		1		May 15/2024	ALL
P8 - AFT ELECTRONIC PANEL	91-02-08		1		May 15/2024	ALL
P9 - FORWARD CONSOLE PANEL	91-02-09		1		May 15/2024	ALL
P15 - FUELING PANEL	91-02-15		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 91
CHARTS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
P18 - CIRCUIT BREAKER PANEL	91-02-18		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
P19 - EXTERNAL POWER RECEPTACLE PANEL	91-02-19		1		May 15/2024	ALL
P21 - CAPTAIN AUXILIARY PANEL	91-02-21		1		May 15/2024	ALL
P23 - FIRST OFFICER AUXILIARY PANEL	91-02-23		1		May 15/2024	ALL
P28 - APU FIRE CONTROL PANEL	91-02-28		1		May 15/2024	ALL
P41 - P1 AND P2 5V LIGHTING PANEL	91-02-41		1		May 15/2024	ALL
P42 - P3 5V LIGHTING PANEL	91-02-42		1		May 15/2024	ALL
P61 - DATA LOADER CONTROL PANEL	91-02-61		1		May 15/2024	ALL
P91 - POWER DISTRIBUTION PANEL 1	91-02-91		1		May 15/2024	ALL
P92 - POWER DISTRIBUTION PANEL 2	91-02-92		1		May 15/2024	ALL
RACKS						
E1 RACK	91-03-01		1		May 15/2024	ALL
E2 RACK	91-03-02		1		May 15/2024	ALL
E3 RACK	91-03-03		1		May 15/2024	ALL
E4 RACK	91-03-04		1		May 15/2024	ALL
E5 RACK	91-03-05		1		May 15/2024	ALL
E6 RACK	91-03-06		1		May 15/2024	ALL
P13 - FORWARD ATTENDANTS PANEL	91-03-13		1		May 15/2024	ALL
P14 - AFT ATTENDANTS PANEL	91-03-14		1		May 15/2024	ALL
DISCONNECT BRACKETS						
MAIN INSTRUMENT PANEL CONTROL STAND BRACKETS	91-04-01		1		May 15/2024	ALL
P6 AND P18 BRACKETS	91-04-02		1		May 15/2024	ALL
E1 SHELF BRACKETS	91-04-04		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 91
CHARTS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
E2-1 AND E2-2 BRACKETS	91-04-05		1		May 15/2024	ALL
E3 BRACKETS	91-04-06		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
E4-1 AND E4-2 BRACKETS	91-04-07		1		May 15/2024	ALL
E5 BRACKETS	91-04-08		1		May 15/2024	ALL
E6 SHELF BRACKETS	91-04-10		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
FORWARD UPPER FUSELAGE BRACKETS	91-04-12		1		May 15/2024	ALL
WING AND WING BODY ENGINE WALL BRACKETS	91-04-13		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
MAIN WHEEL WELL BRACKETS	91-04-14		1		May 15/2024	ALL
AFT BODY BRACKETS	91-04-15		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
PROGRAM PIN						
PROGRAM PIN SWITCH/ CODING SWITCH LOCATIONS	91-06-01		1	1	May 15/2024	ALL
				2	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 91
CHARTS

CH-SE-SU	Title
91-04-15	AFT BODY BRACKETS
91-00-01	AIRPLANE STATION BODY & VERTICAL STABLISER
91-00-02	AIRPLANE STATION WING & HORIZONTAL STABLIZER
91-01-07	ANTENNA LOCATION
91-01-06	DISCONNECT BRACKET LOCATION
91-03-01	E1 RACK
91-04-04	E1 SHELF BRACKETS
91-03-02	E2 RACK
91-04-05	E2-1 AND E2-2 BRACKETS
91-04-06	E3 BRACKETS
91-03-03	E3 RACK
91-03-04	E4 RACK
91-04-07	E4-1 AND E4-2 BRACKETS
91-04-08	E5 BRACKETS
91-03-05	E5 RACK
91-03-06	E6 RACK
91-04-10	E6 SHELF BRACKETS
91-01-03	FLIGHT DECK PANEL LOCATION
91-04-12	FORWARD UPPER FUSELAGE BRACKETS
91-04-01	MAIN INSTRUMENT PANEL CONTROL STAND BRACKETS
91-04-14	MAIN WHEEL WELL BRACKETS
91-01-02	MAJOR RACEWAYS
91-02-01	P1 - MAIN CAPTAIN PANEL
91-03-13	P13 - FORWARD ATTENDANTS PANEL
91-03-14	P14 - AFT ATTENDANTS PANEL
91-02-15	P15 - FUELING PANEL
91-02-18	P18 - CIRCUIT BREAKER PANEL
91-02-19	P19 - EXTERNAL POWER RECEPTACLE PANEL
91-02-02	P2 - CENTER INSTRUMENT PANEL
91-02-21	P21 - CAPTAIN AUXILIARY PANEL
91-02-23	P23 - FIRST OFFICER AUXILIARY PANEL
91-02-28	P28 - APU FIRE CONTROL PANEL
91-02-03	P3 - MAIN FIRST OFFICER PANEL
91-02-41	P41 - P1 AND P2 5V LIGHTING PANEL
91-02-42	P42 - P3 5V LIGHTING PANEL
91-02-05	P5 - PILOT OVERHEAD PANEL
91-02-06	P6 - TERMINAL STRIPS, CIRCUIT BREAKER PANELS & EQUIPMENT
91-04-02	P6 AND P18 BRACKETS

91-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details


CHAPTER 91
CHARTS

CH-SE-SU	Title
91-02-61	P61 - DATA LOADER CONTROL PANEL
91-02-07	P7 - MAIN CENTER PANEL
91-02-08	P8 - AFT ELECTRONIC PANEL
91-02-09	P9 - FORWARD CONSOLE PANEL
91-02-91	P91 - POWER DISTRIBUTION PANEL 1
91-02-92	P92 - POWER DISTRIBUTION PANEL 2
91-01-04	PANEL LOCATIONS
91-06-01	PROGRAM PIN SWITCH/ CODING SWITCH LOCATIONS
91-01-05	RACK AND JUNCTION BOX LOCATION
91-04-13	WING AND WING BODY ENGINE WALL BRACKETS
91-01-01	WIRE ZONE

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


TYPICAL CROSS SECTION

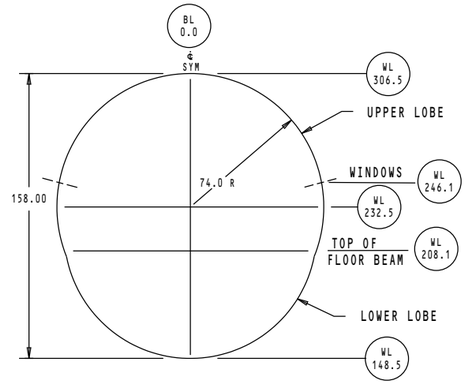


REAR VIEW

ABOVE WL208.1 UPPER LOBE TYPICAL FROM STA 480 TO STA 808
BELOW WL 208.1 LOWER LOBE TYPICAL FROM STA 390 TO 540
AND FROM STA 727 TO STA 730

VERTICAL STABILIZER

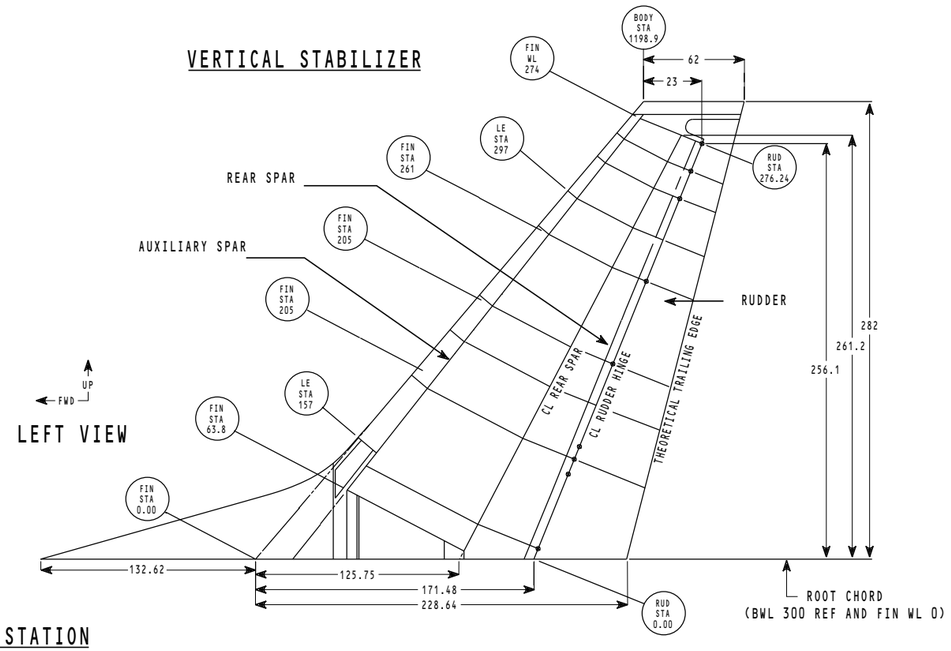

BODY STATION

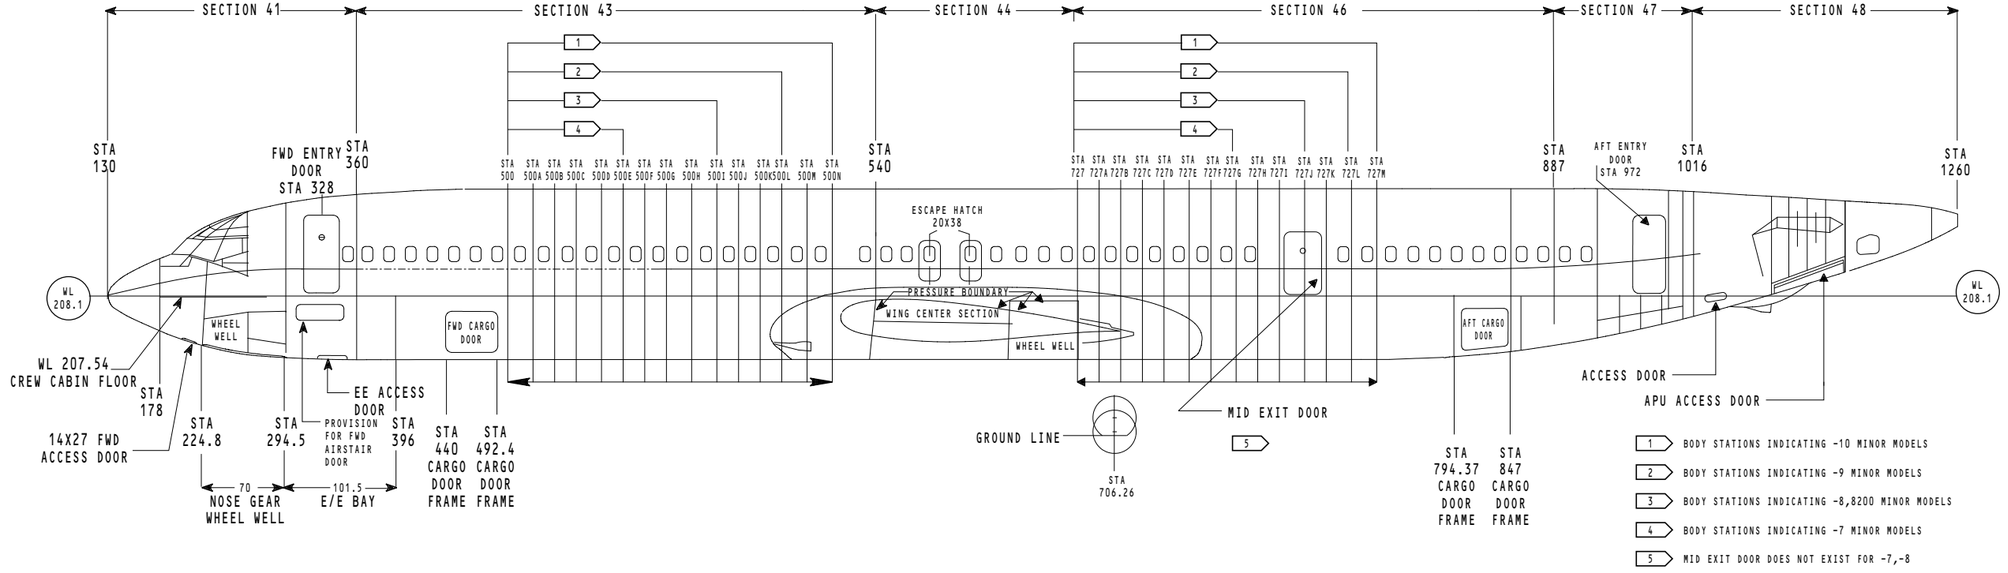

91-00-01

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


737-8 WIRING DIAGRAM MANUAL

2

WING STATIONS

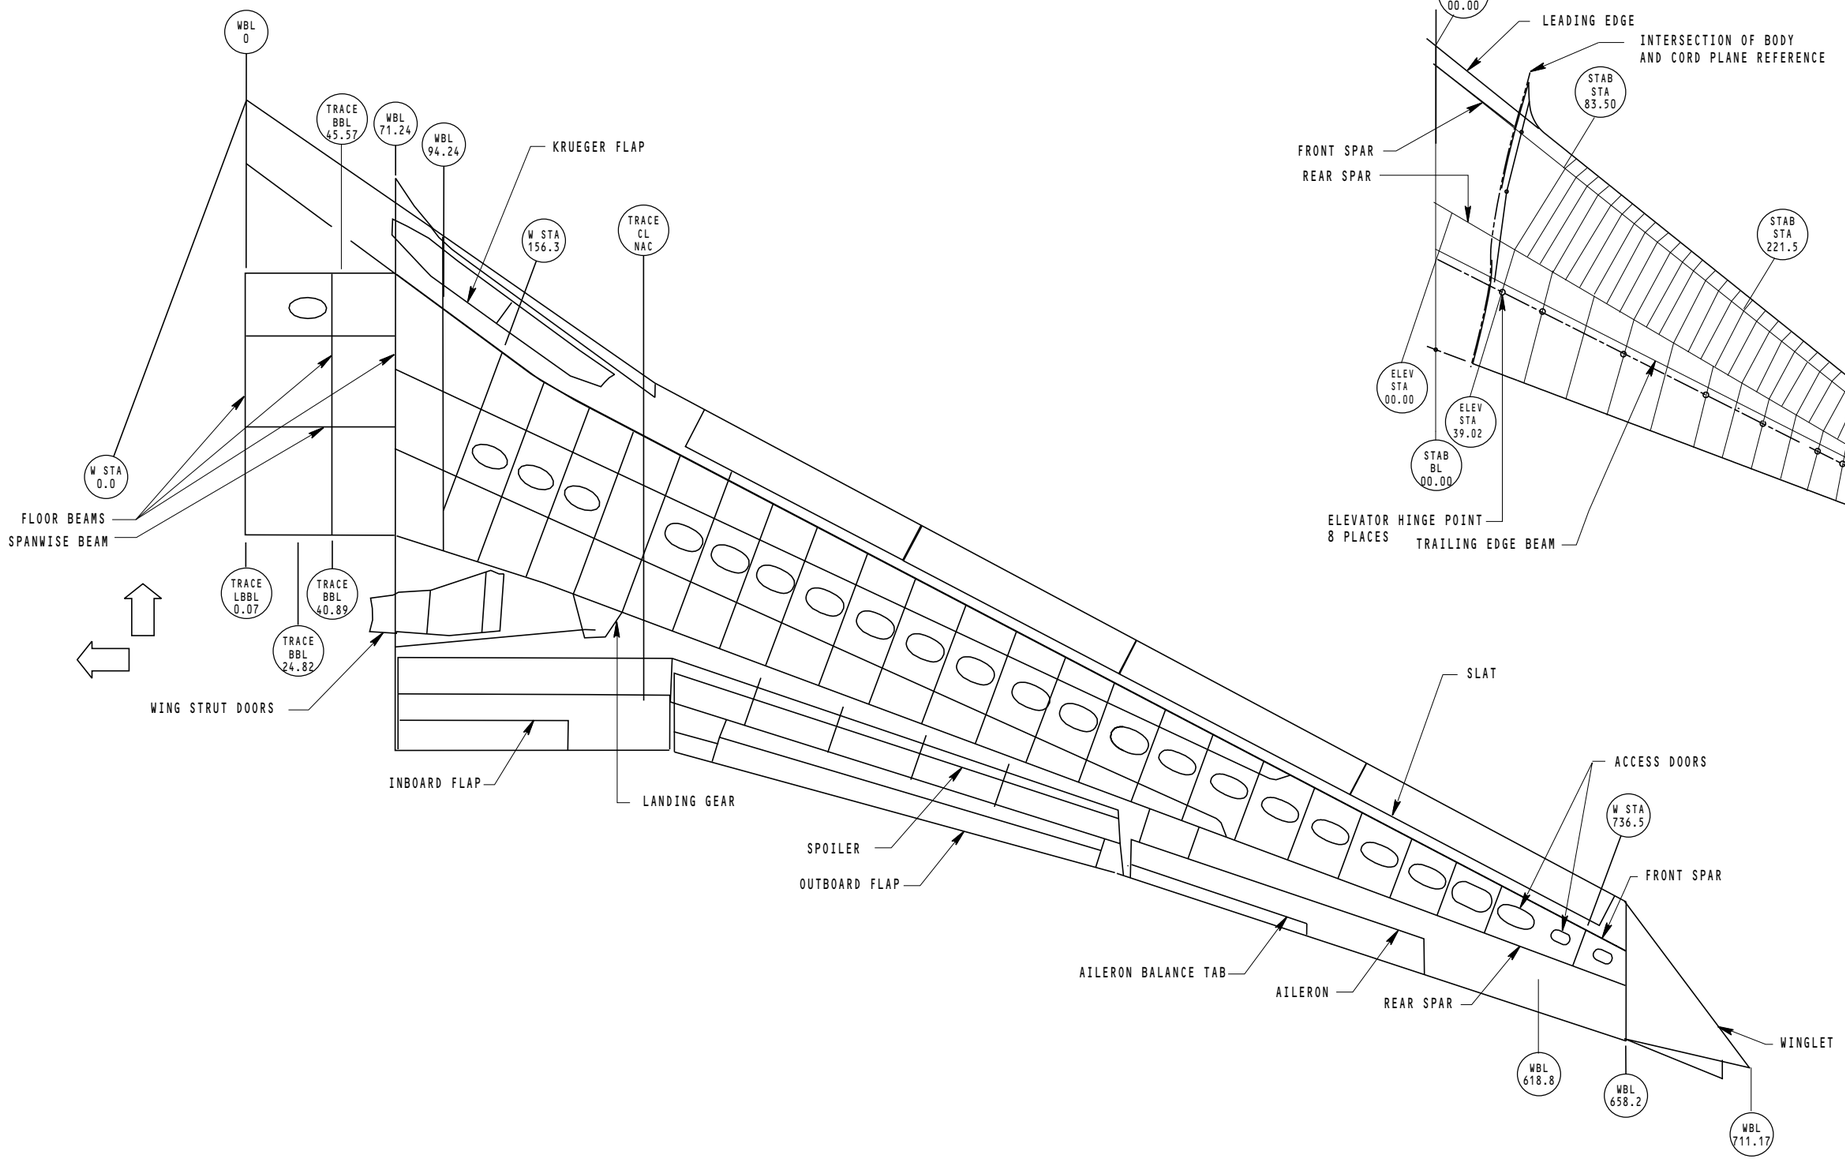

HORIZONTAL STABILIZER

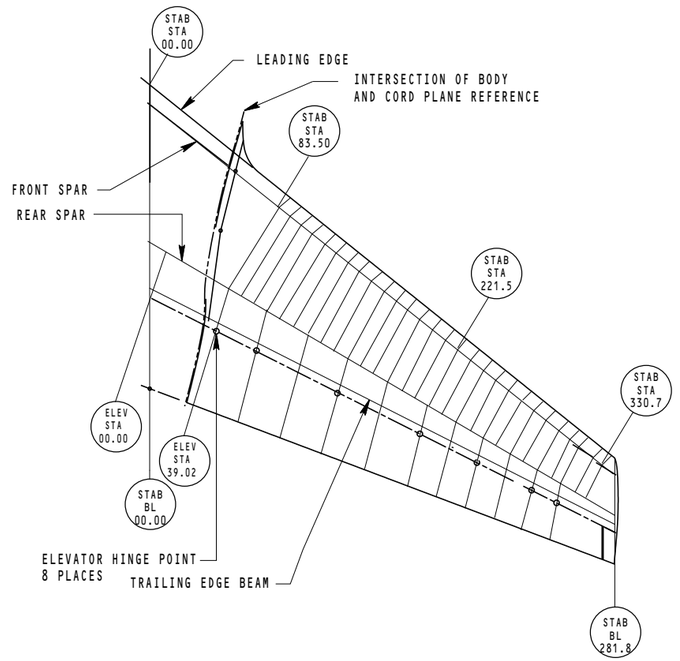


ALL	AIRPLANE STATION WING & HORIZONTAL STABLIZER D280AM1215	91-00-02 Page 1 May 15/2024

91-00-02
Page 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

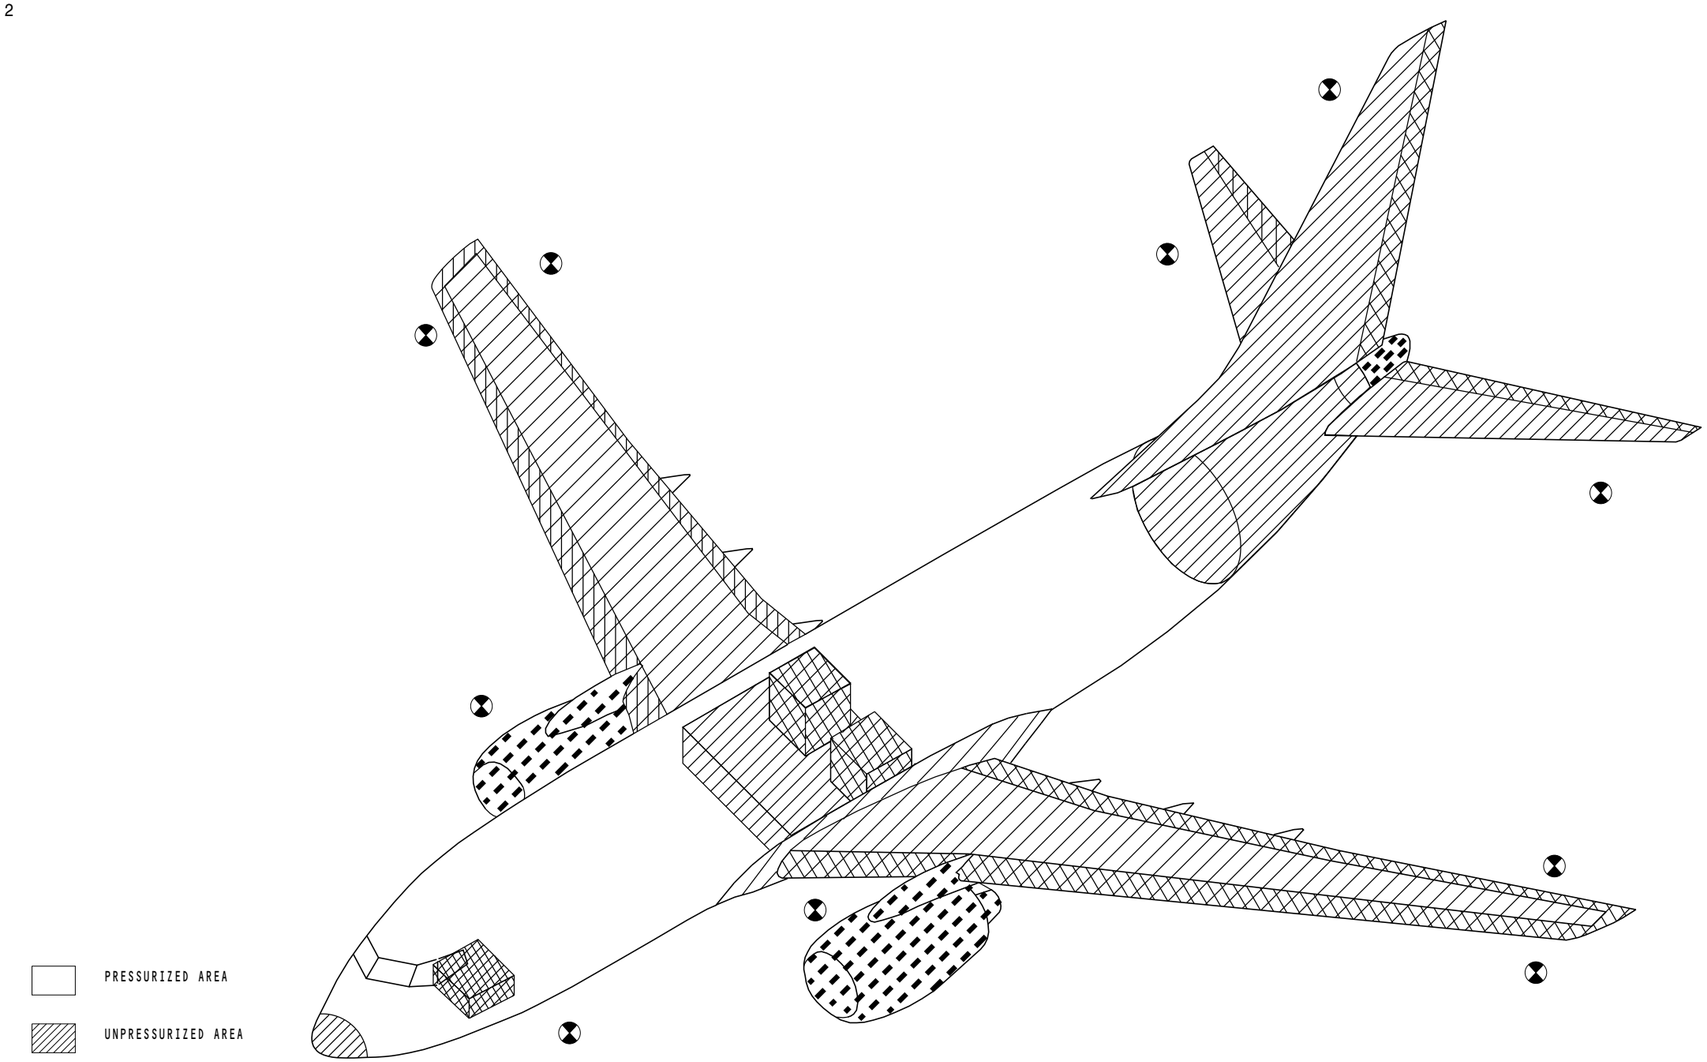

ALL

WIRE ZONE

D280AM1215

91-01-01

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-01-01

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

1

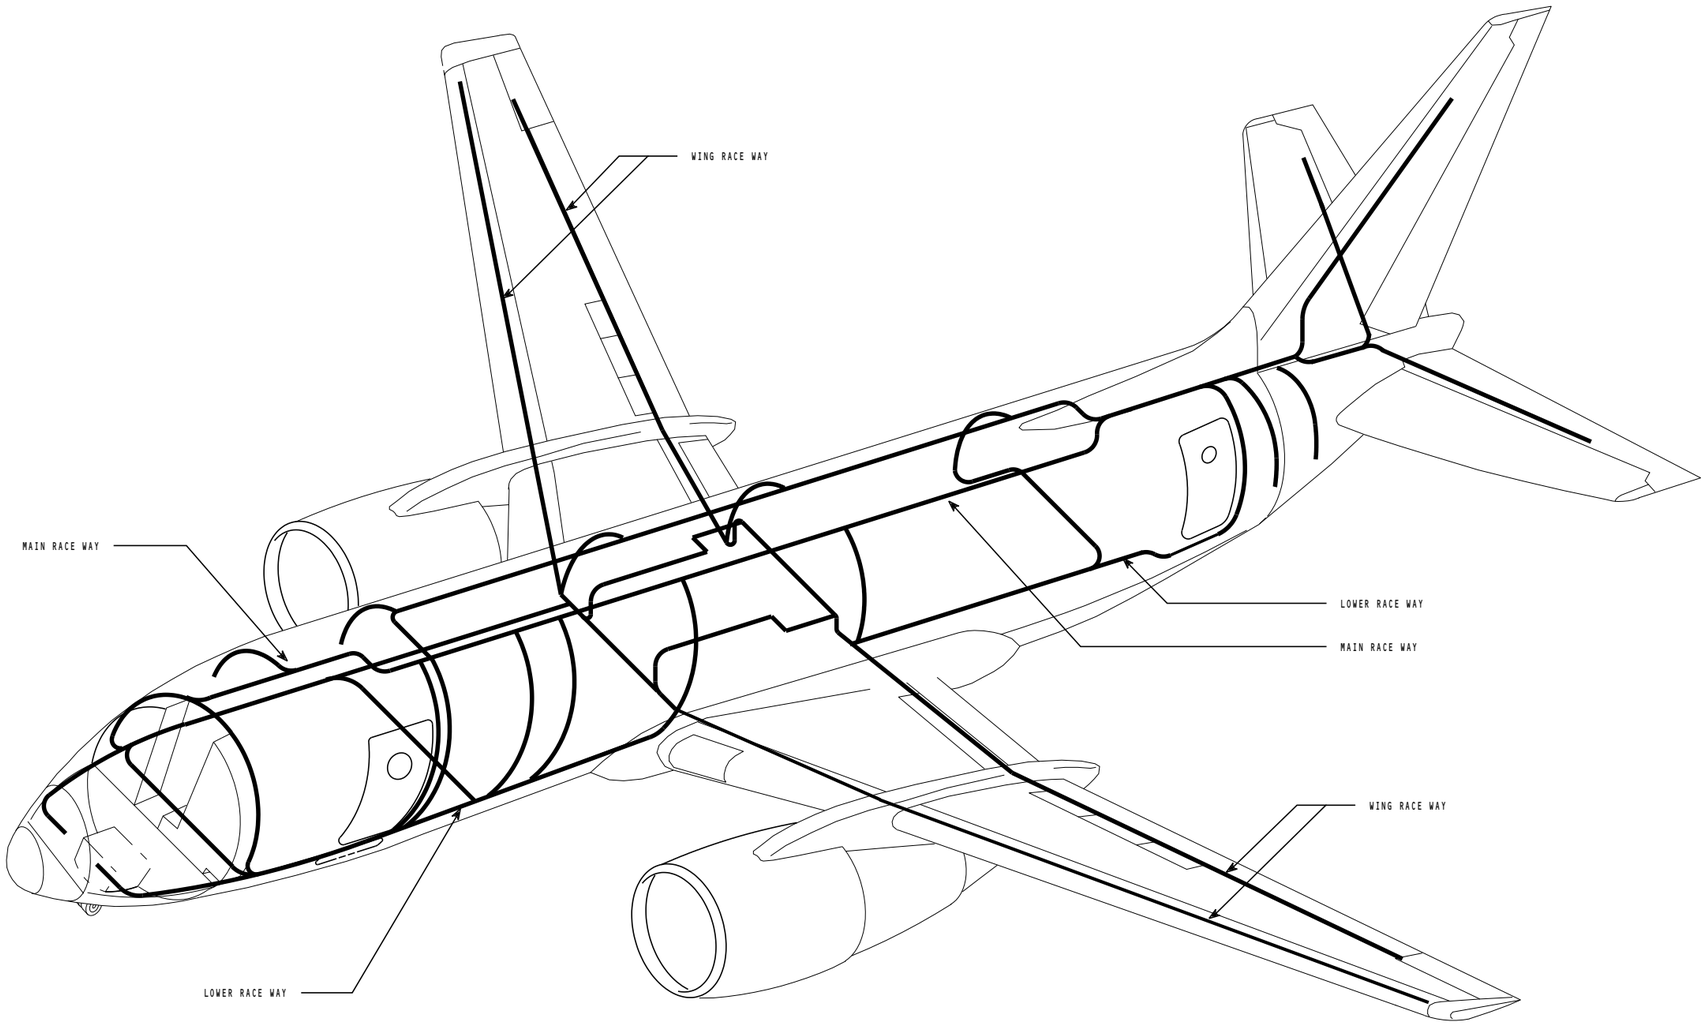

ALL

MAJOR RACEWAYS

D280AM1215

91-01-02

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-01-02

Page 1

May 15/2024

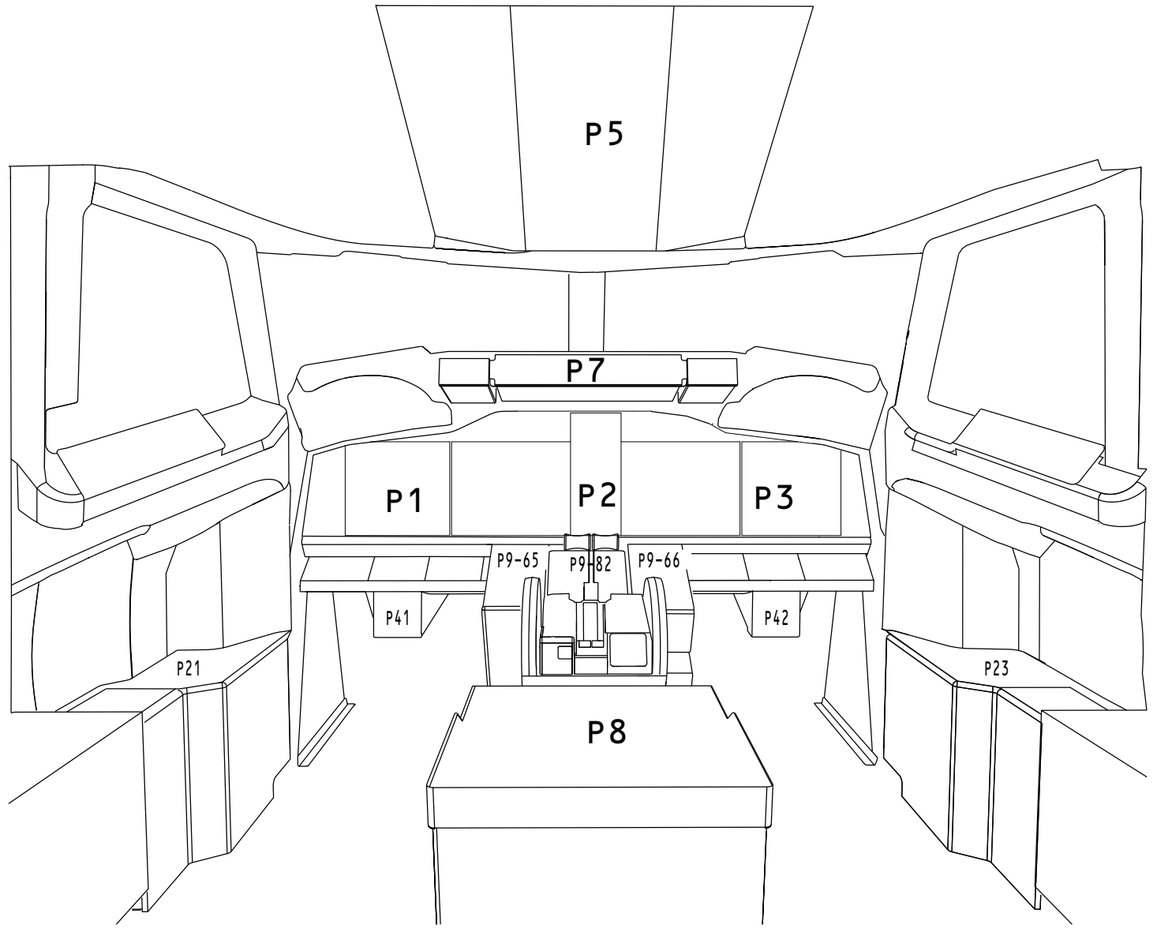

737-8 WIRING DIAGRAM MANUAL

PANEL DIAGRAM TABLE

PANEL	DESCRIPTION	DIAGRAM
P1	CAPTAIN INSTRUMENT PANEL	91-02-01
P2	CENTER INSTRUMENT PANEL	91-02-02
P3	FIRST OFFICER INSTRUMENT PANEL	91-02-03
P5	PILOT OVERHEAD PANEL	91-02-05
P7	GLARESHIELD PANEL	91-02-07
P8	AISLESTAND, AFT PANEL	91-02-08
P9-65	CAPTAIN FMCS CDU	91-02-09
P9-66	FIRST OFFICER FMCS CDU	91-02-09
P9-82	MULTI-FUNCTION PANEL	91-01-03
P21	CAPTAIN MAP LIGHT PANEL	91-02-21
P23	FIRST OFFICER MAP LIGHT PANEL	91-02-23
P41	P1 AND P2 5V LIGHTING	91-02-42
P42	P3 5V LIGHTING	

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-01-03

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

2

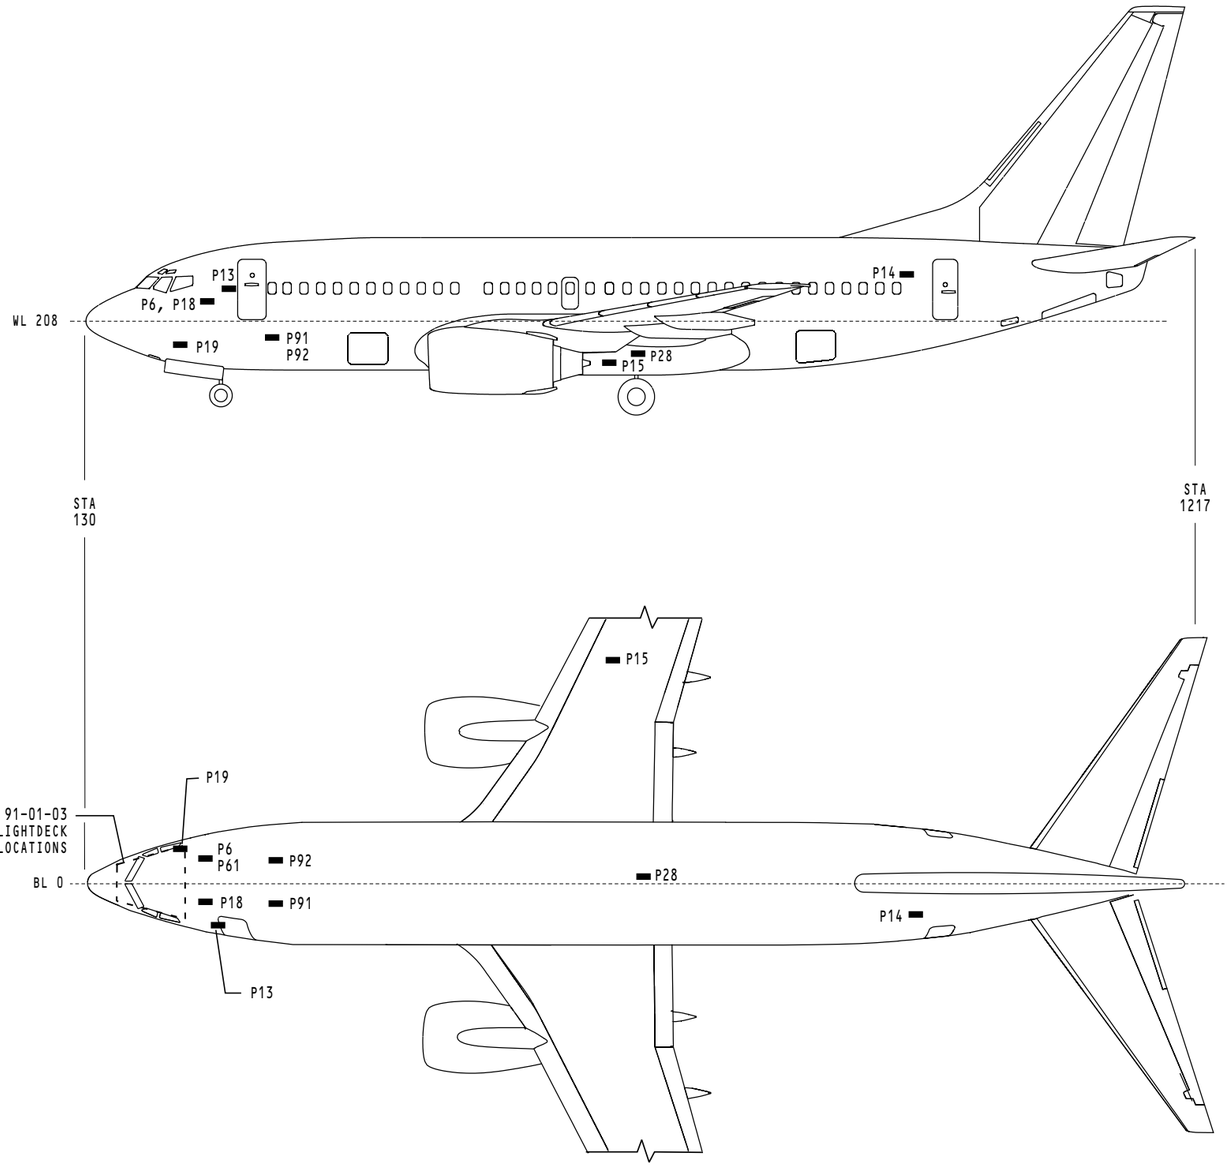

PANEL DIAGRAM TABLE

PANEL	DESCRIPTION	DIAGRAM
P6	CENTER/RIGHT LOAD CONTROL PANEL	91-02-06
P13	FORWARD ATTENDANT PANEL	91-03-13
P14	AFT ATTENDANT PANEL	91-03-14
P15	WING FUELING PANEL	91-02-15
P18	LEFT LOAD CONTROL PANEL	91-02-18
P19	EXTERNAL POWER RECEPTACLE PANEL	91-02-19
P28	APU FIRE CONTROL PANEL	91-02-28
P61	DATA LOADER CONTROL PANEL	91-02-61
P91	LEFT POWER DISTRIBUTION PANEL	91-02-91
P92	RIGHT POWER DISTRIBUTION PANEL	91-02-92


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-01-04

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

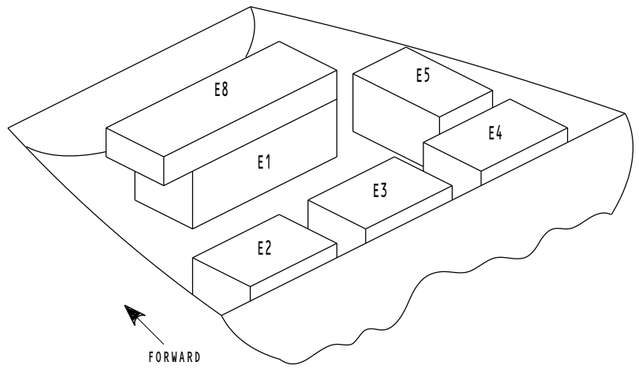

E/E BAY
SCALE: NONE

RACK LOCATION & DIAGRAM TABLE


RACK	DESCRIPTION	STA	WL	BL	DIAGRAM
E1-1	SHELF	302	177	-3.6	91-03-01
E1-2	SHELF	302	165	0	91-03-01
E1-3	SHELF	302	165	-3.6	91-03-01
E1-4	SHELF	302	156	0	91-03-01
E1-5	SHELF	302	156	-3.6	91-03-01
E2-1	SHELF	368	191	-20	91-03-02
E2-2	SHELF	368	182	-20	91-03-02
E3-1	SHELF	368	191	0	91-03-03
E3-2	SHELF	368	182	0	91-03-03
E3-3	SHELF	368	173	0	91-03-03
E4-1	SHELF	368	191	16	91-03-04
E4-2	SHELF	368	182	16	91-03-04
E5-1	(1) SHELF	324	197	27	91-03-05
E5-2	SHELF	324	173	27	91-03-05
E6-1	(1) SHELF	868	195	33	91-03-06
E6-2	(1) SHELF	868	182	33	91-03-06
E6-3	(1) SHELF	877	177	32	91-03-06
E8-1	(1) SHELF	302	198	-3.6	91-03-08

JUNCTION BOX LOCATION TABLE

JUNCTION BOX	DESCRIPTION	STA	WL	BL
J4	JUNCTION BOX	280	167	R025
J9	JUNCTION BOX	365	165	L032
J11	JUNCTION BOX	900	185	R030
J19	JUNCTION BOX	254	207	L003
J20	JUNCTION BOX	268	166	L025
J22	JUNCTION BOX	259	180	L020
J23	JUNCTION BOX	345	160	L020
J24	JUNCTION BOX	259	180	R020
J39	JUNCTION BOX	359	166	L020
J46	JUNCTION BOX	263	177	R031
J48	JUNCTION BOX	263	177	L033
J71	JUNCTION BOX	224	178	L24
J72	JUNCTION BOX	224	178	R24

PROXIMITY SWITCH ELECTRICAL UNIT (PSEU)

MODULE NUMBER	DESCRIPTION	STA	WL	BL
M2061	MODULE-PSEU	212	180	R020

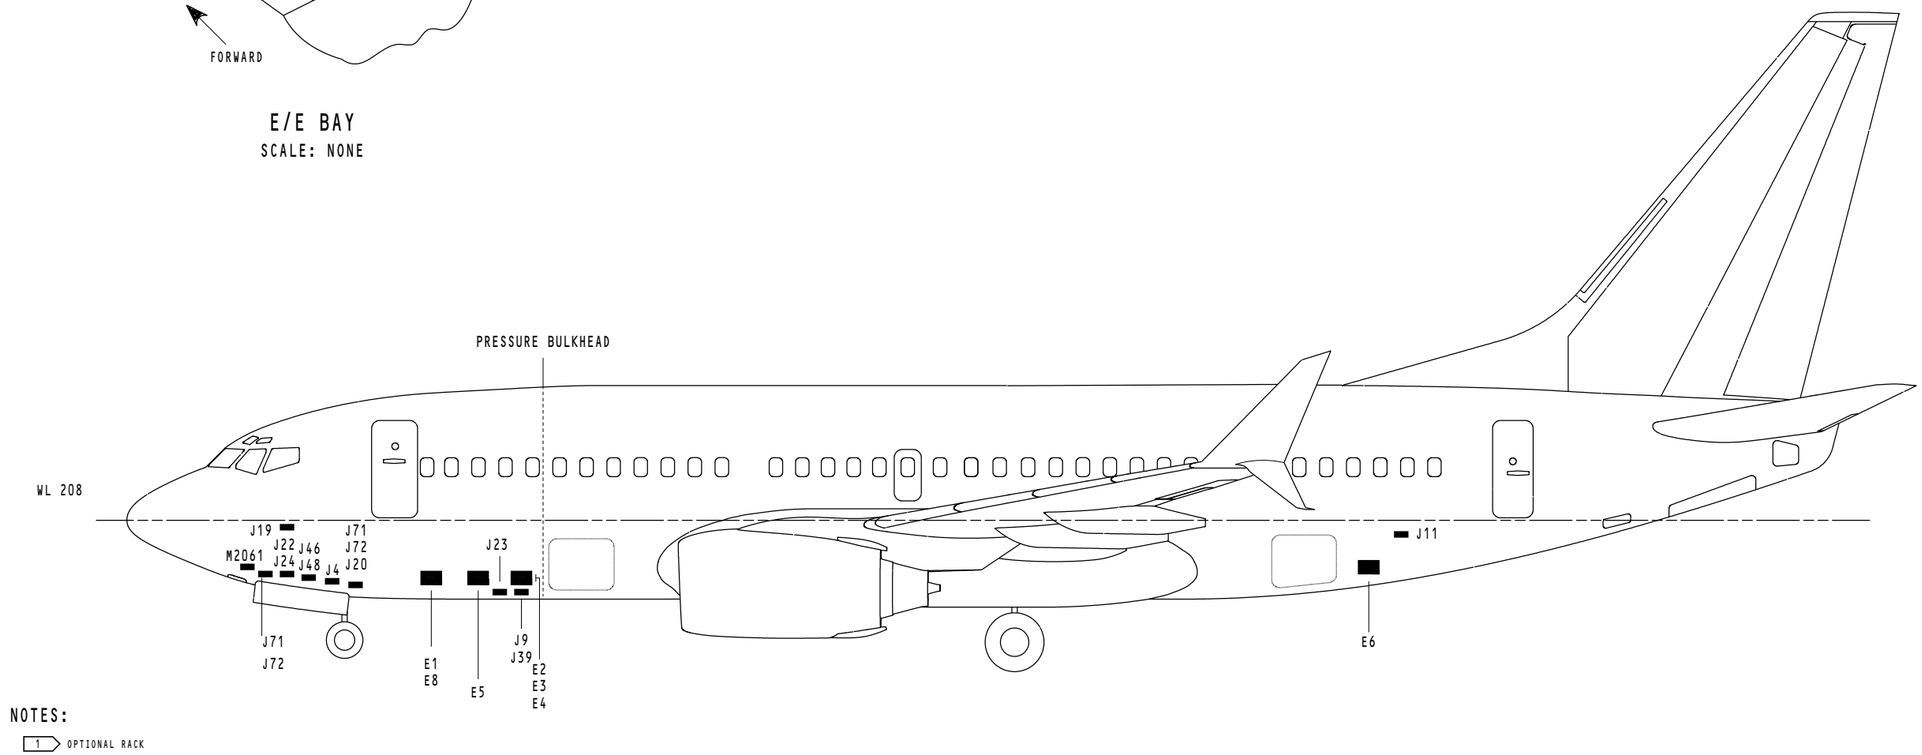

NOTES:
(1) OPTIONAL RACK

ALL

RACK AND JUNCTION BOX LOCATION

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-01-05
Page 1
Apr 23/2025

737-8 WIRING DIAGRAM MANUAL

3 EACH DISCONNECT BRACKET IS ASSIGNED A NUMBER THAT IDENTIFIED THE BRACKET APPROXIMATE LOCATION:
EACH DISCONNECT BRACKET WILL BE CODED PER THE FOLLOWING SYSTEM

EXAMPLE: AE0536L


A E 0536 L

- L — BRACKET SECTION. CAN BE A BRACKET IDENTIFIER AS WELL AS STATION IDENTIFIER
- 0536 — STATION LOCATION
  - 0536 = STATION 0530-0539
- E — MAJOR AREA CODE
  - B - MAIN BODY
  - C - L-LOWER QUADRANT BODY
  - D - R-LOWER QUADRANT BODY
  - E - EQUIPMENT RACK AREA
  - F - FLIGHT DECK AREA
  - L - WHEEL WELL
  - P - PANEL
  - S - FIREWALL/STRUT
  - T - TAIL
  - W - WING
- A — REF: DESIGNATOR A

EXAMPLE AE0536L

LEFT SIDE DISCONNECT
BRACKET LOCATION BETWEEN STATION 530 AND 539
IN THE EQUIPMENT RACK AREA

EACH DISCONNECT BRACKET FOLLOWED BY DIAGRAM NUMBER CONFIGURATION AND CUT OUT SIZES
WHICH INCLUDES THE BRACKET CONFIGURATION AND CUT OUT SIZES.

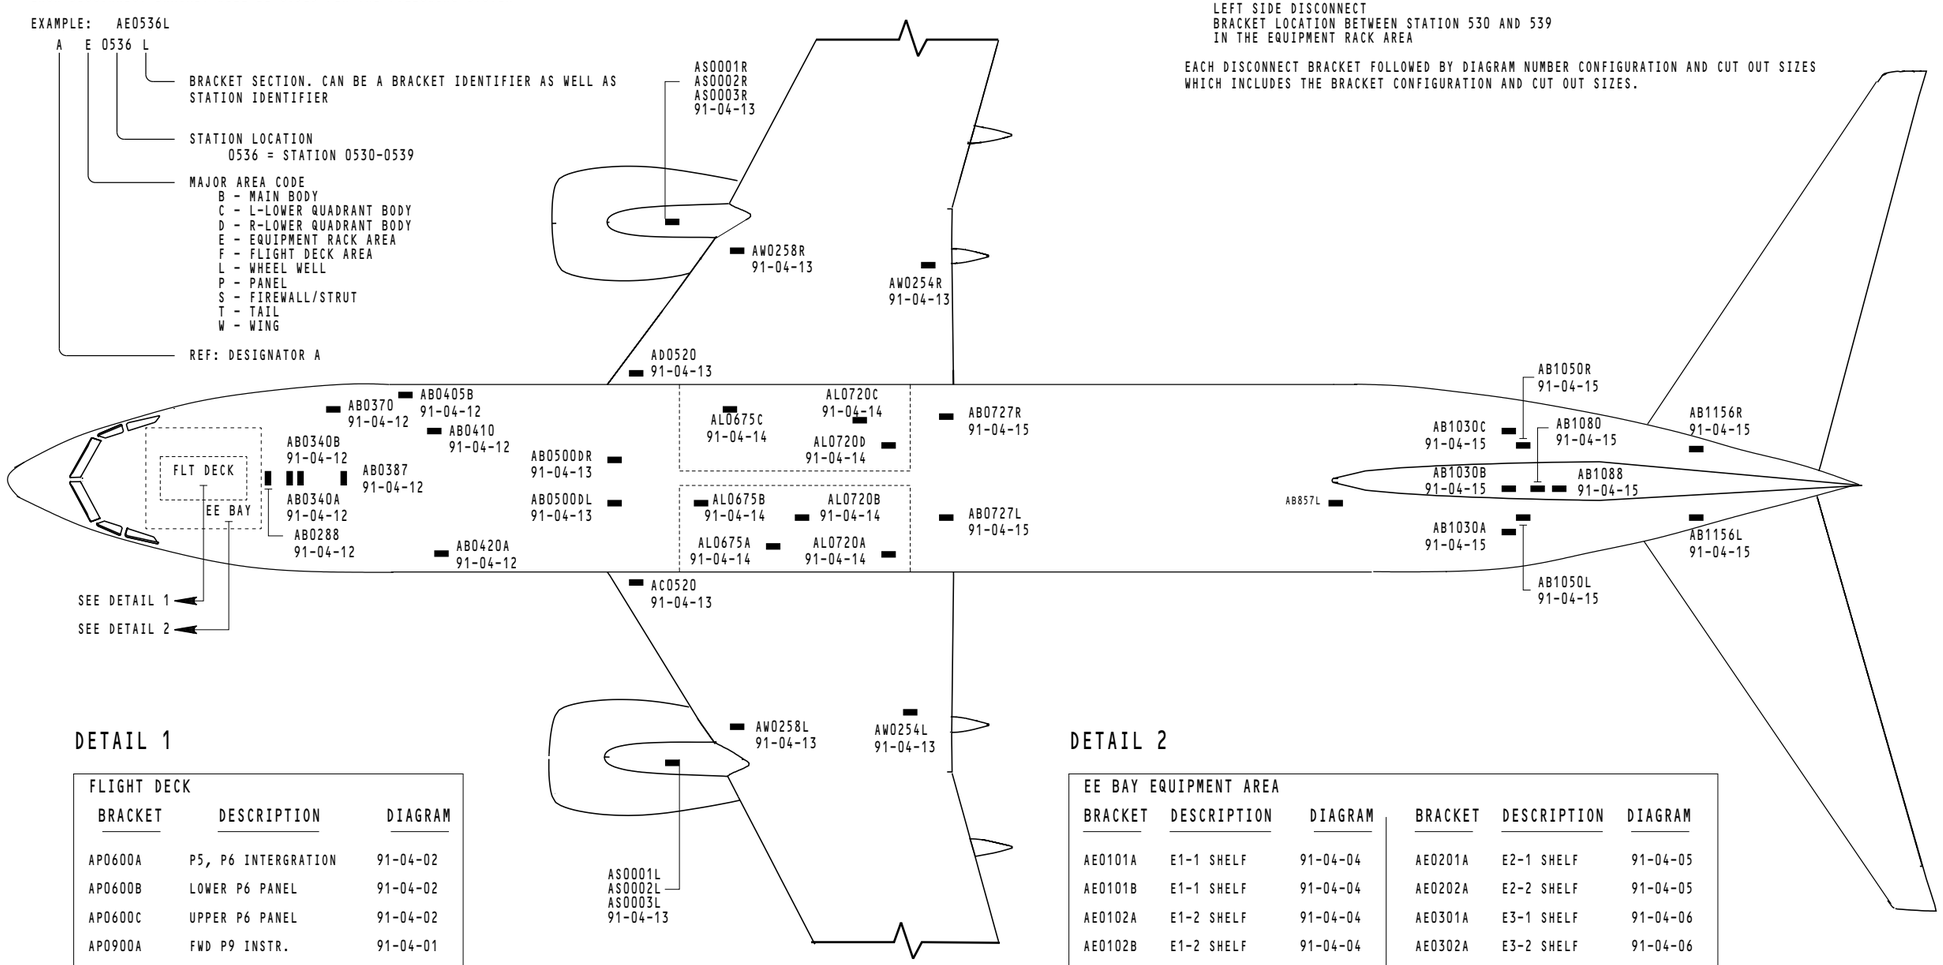

DETAIL 1

FLIGHT DECK

BRACKET	DESCRIPTION	DIAGRAM
AP0600A	P5, P6 INTERGRATION	91-04-02
AP0600B	LOWER P6 PANEL	91-04-02
AP0600C	UPPER P6 PANEL	91-04-02
AP0900A	FWD P9 INSTR.	91-04-01
AP1800A	P5, P18 INTERGRATION	91-04-02
AP1800B	LOWER P18 PANEL	91-04-02
AF0213A	AISLE CONTROL STAND	91-04-02
AF0222A	AISLE CONTROL STAND	91-04-01

DETAIL 2

EE BAY EQUIPMENT AREA


BRACKET	DESCRIPTION	DIAGRAM	BRACKET	DESCRIPTION	DIAGRAM
AE0101A	E1-1 SHELF	91-04-04	AE0201A	E2-1 SHELF	91-04-05
AE0101B	E1-1 SHELF	91-04-04	AE0202A	E2-2 SHELF	91-04-05
AE0102A	E1-2 SHELF	91-04-04	AE0301A	E3-1 SHELF	91-04-06
AE0102B	E1-2 SHELF	91-04-04	AE0302A	E3-2 SHELF	91-04-06
AE0103A	E1-3 SHELF	91-04-04	AE0303A	E3-3 SHELF	91-04-06
AE0104A	E1-4 SHELF	91-04-04	AE0401A	E4-1 SHELF	91-04-07
AE0105A	E1-5 SHELF	91-04-04	AB0401D	E4-1 SHELF	91-04-07
			AE0402A	E4-2 SHELF	91-04-07
			AE0502A	E5 SHELF	91-04-08

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-01-06

Page 1

May 15/2024

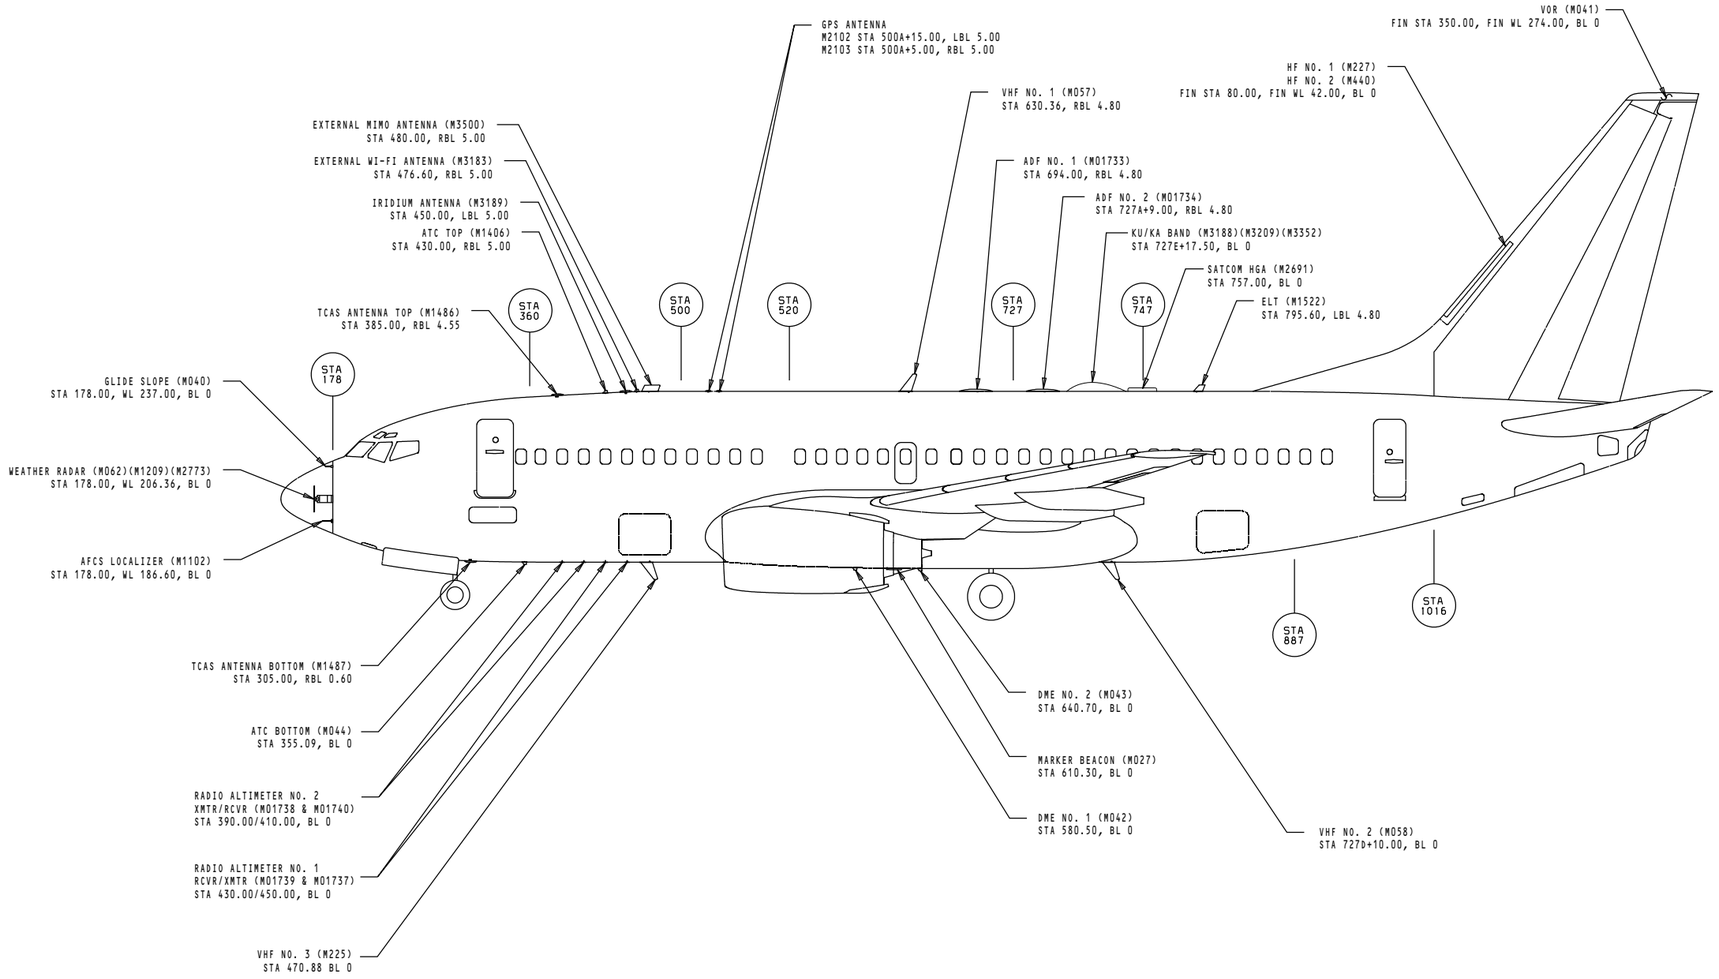

NOTES:

1. TYPICAL AIRPLANE CONFIGURATION ANTENNA LOCATIONS ARE THE SAME FOR MINOR MODELS 737-7, 737-8, 737-8200, 737-9, 737-10 SOME DEPICTED ANTENNAS ARE OPTIONAL FOR SOME CUSTOMERS


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-01-07

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

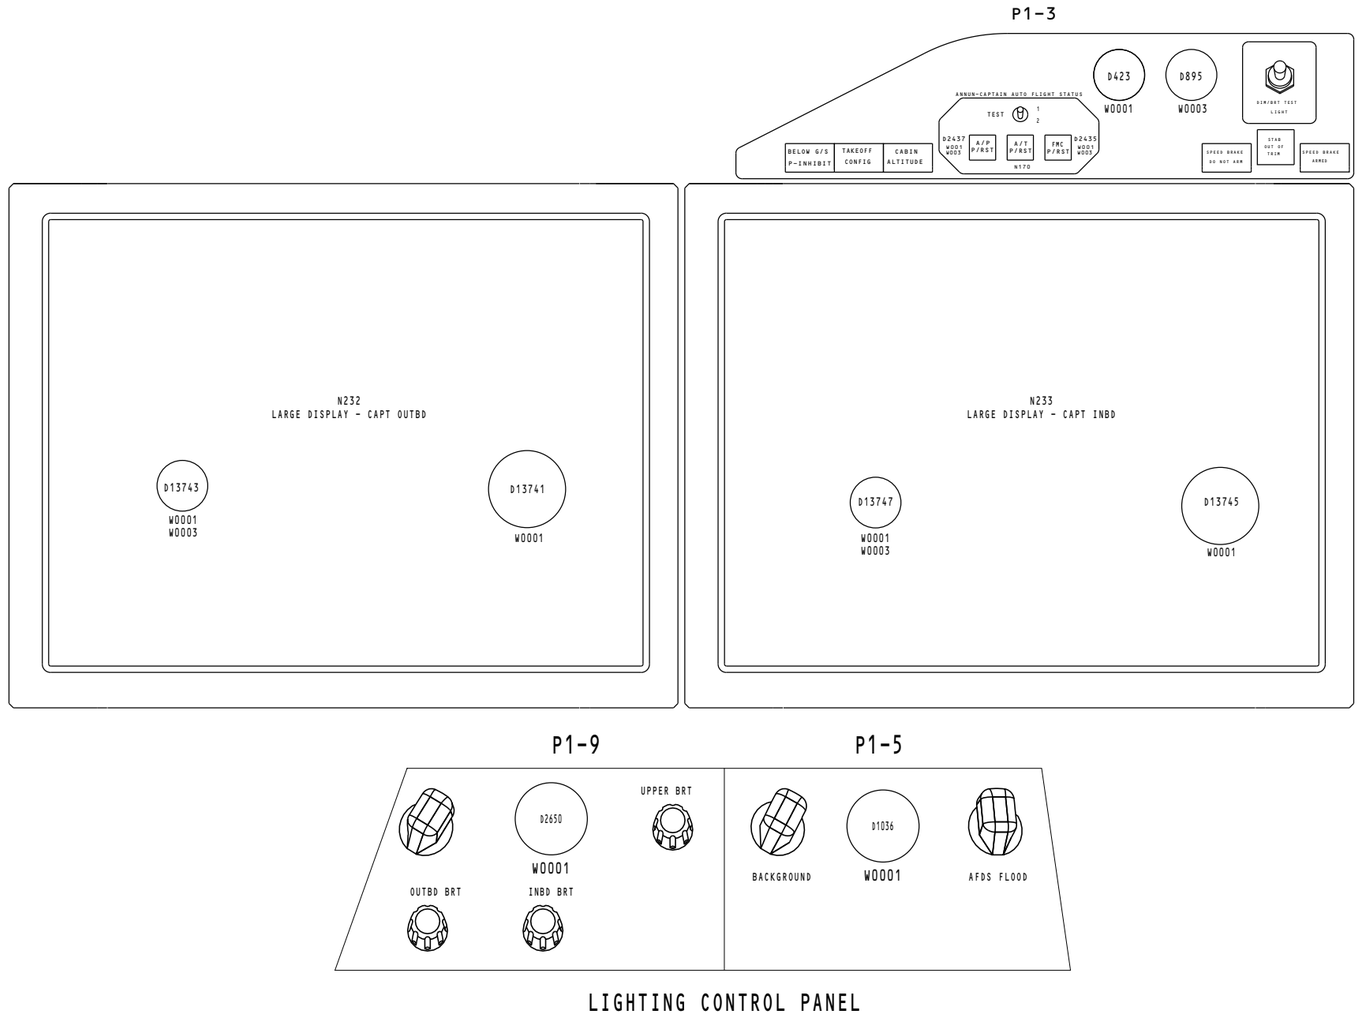

LIGHTING CONTROL PANEL

ALL	**P1 - MAIN CAPTAIN PANEL** D280AM1215

91-02-01

Page 1

May 15/2024

91-02-01


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

P2

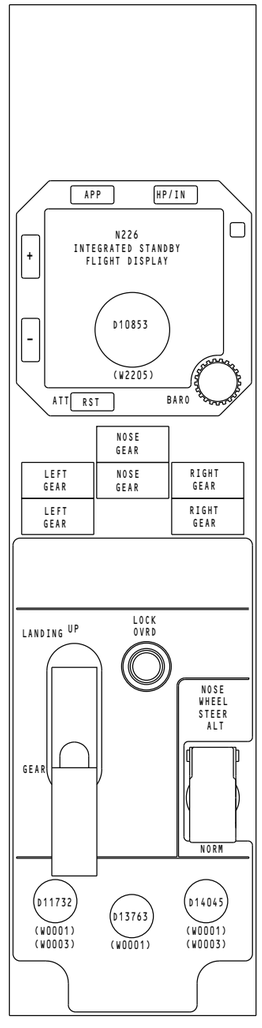

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-02-02


Page 1


May 15/2024

737-8 WIRING DIAGRAM MANUAL

6

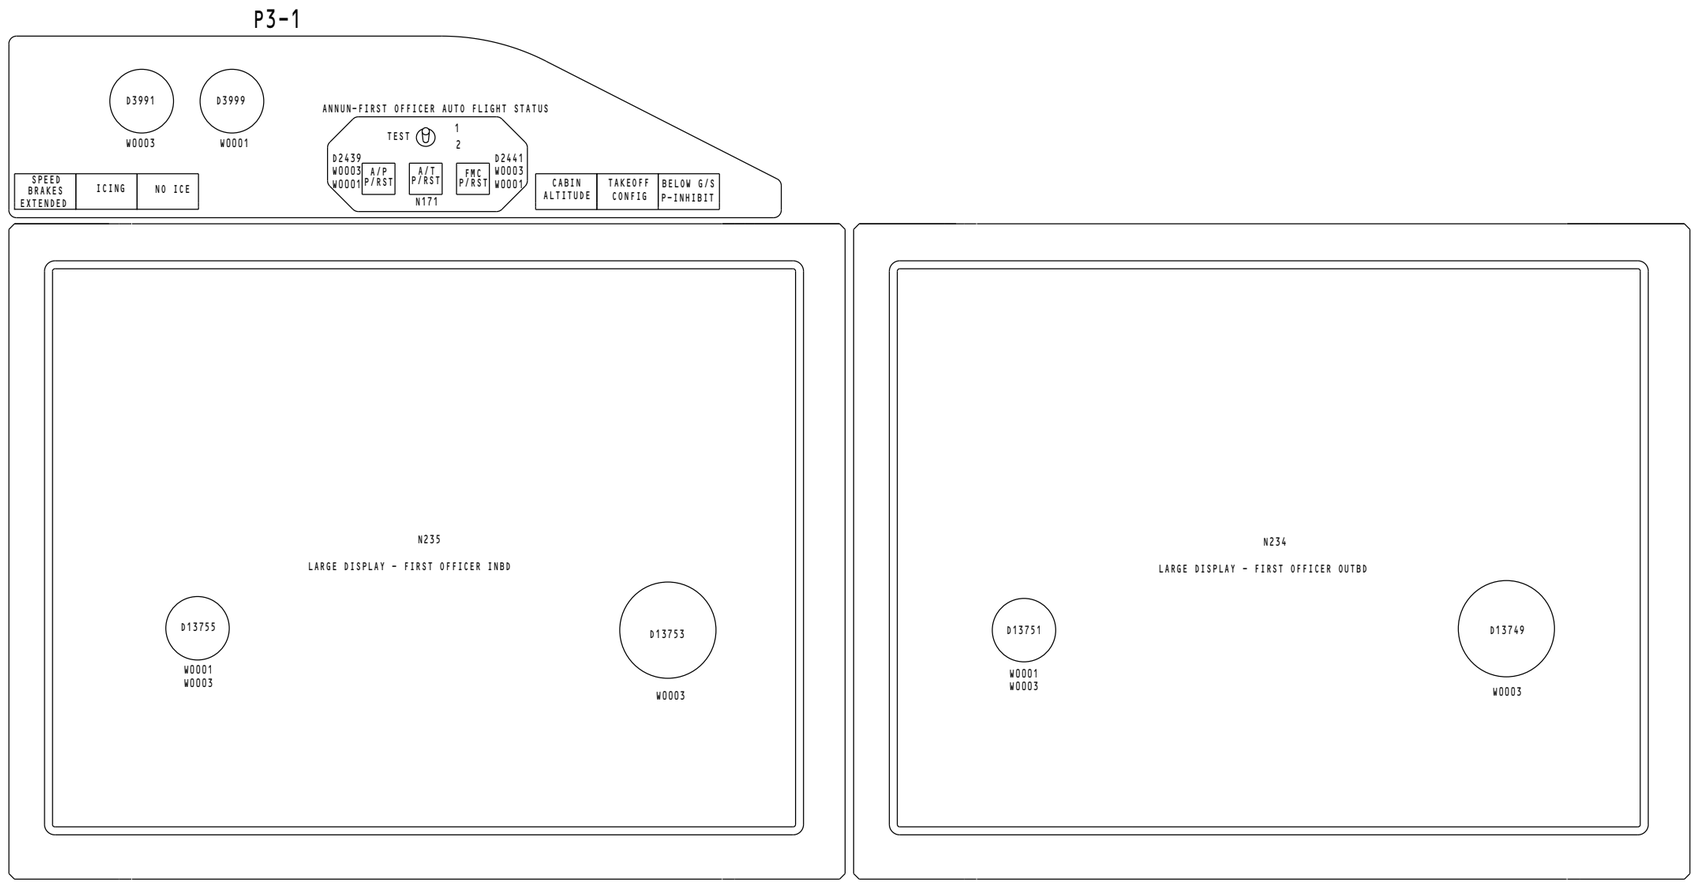

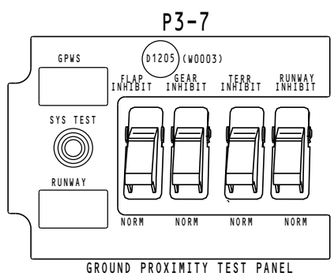

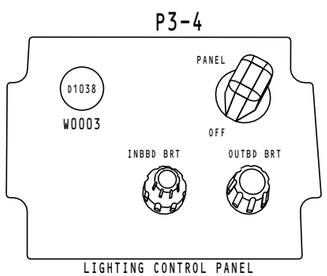

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-02-03

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL


-A
413

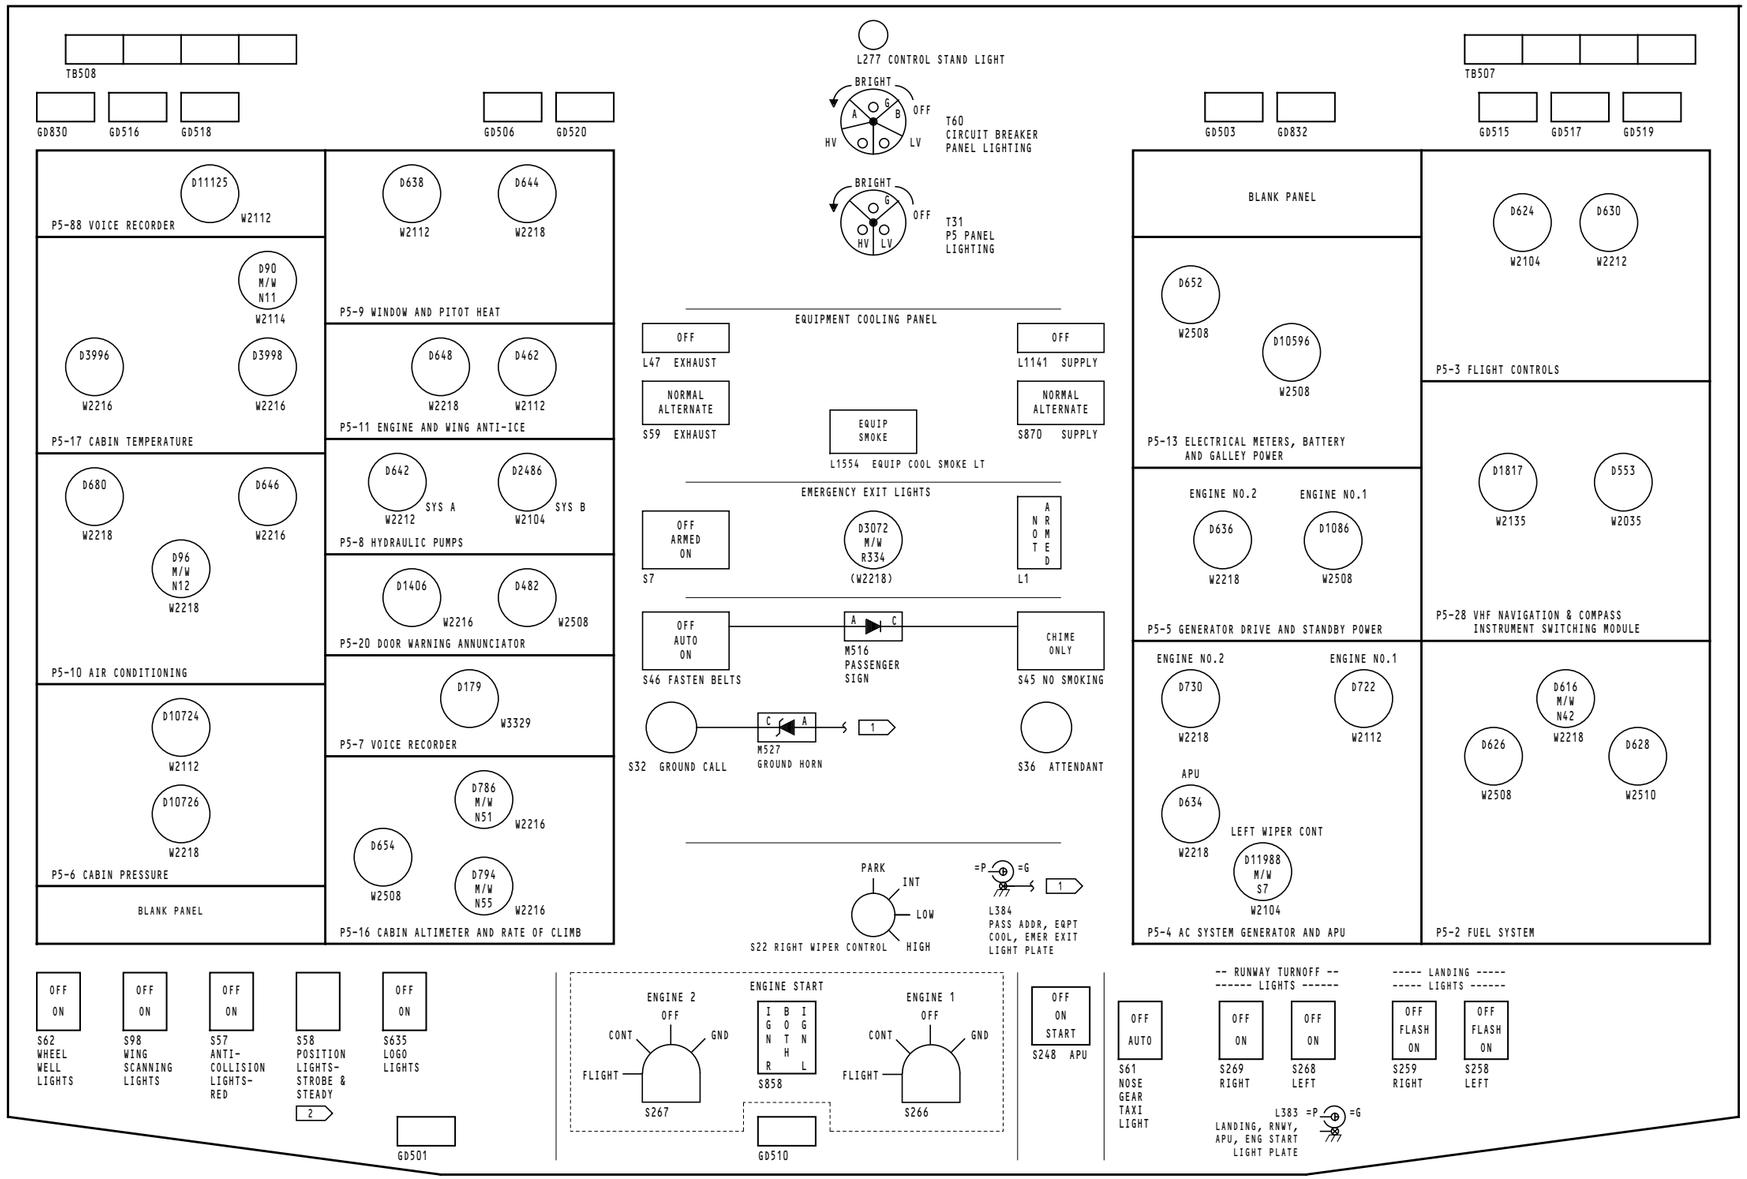

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-05


Page 1
Sheet 1
May 15/2024

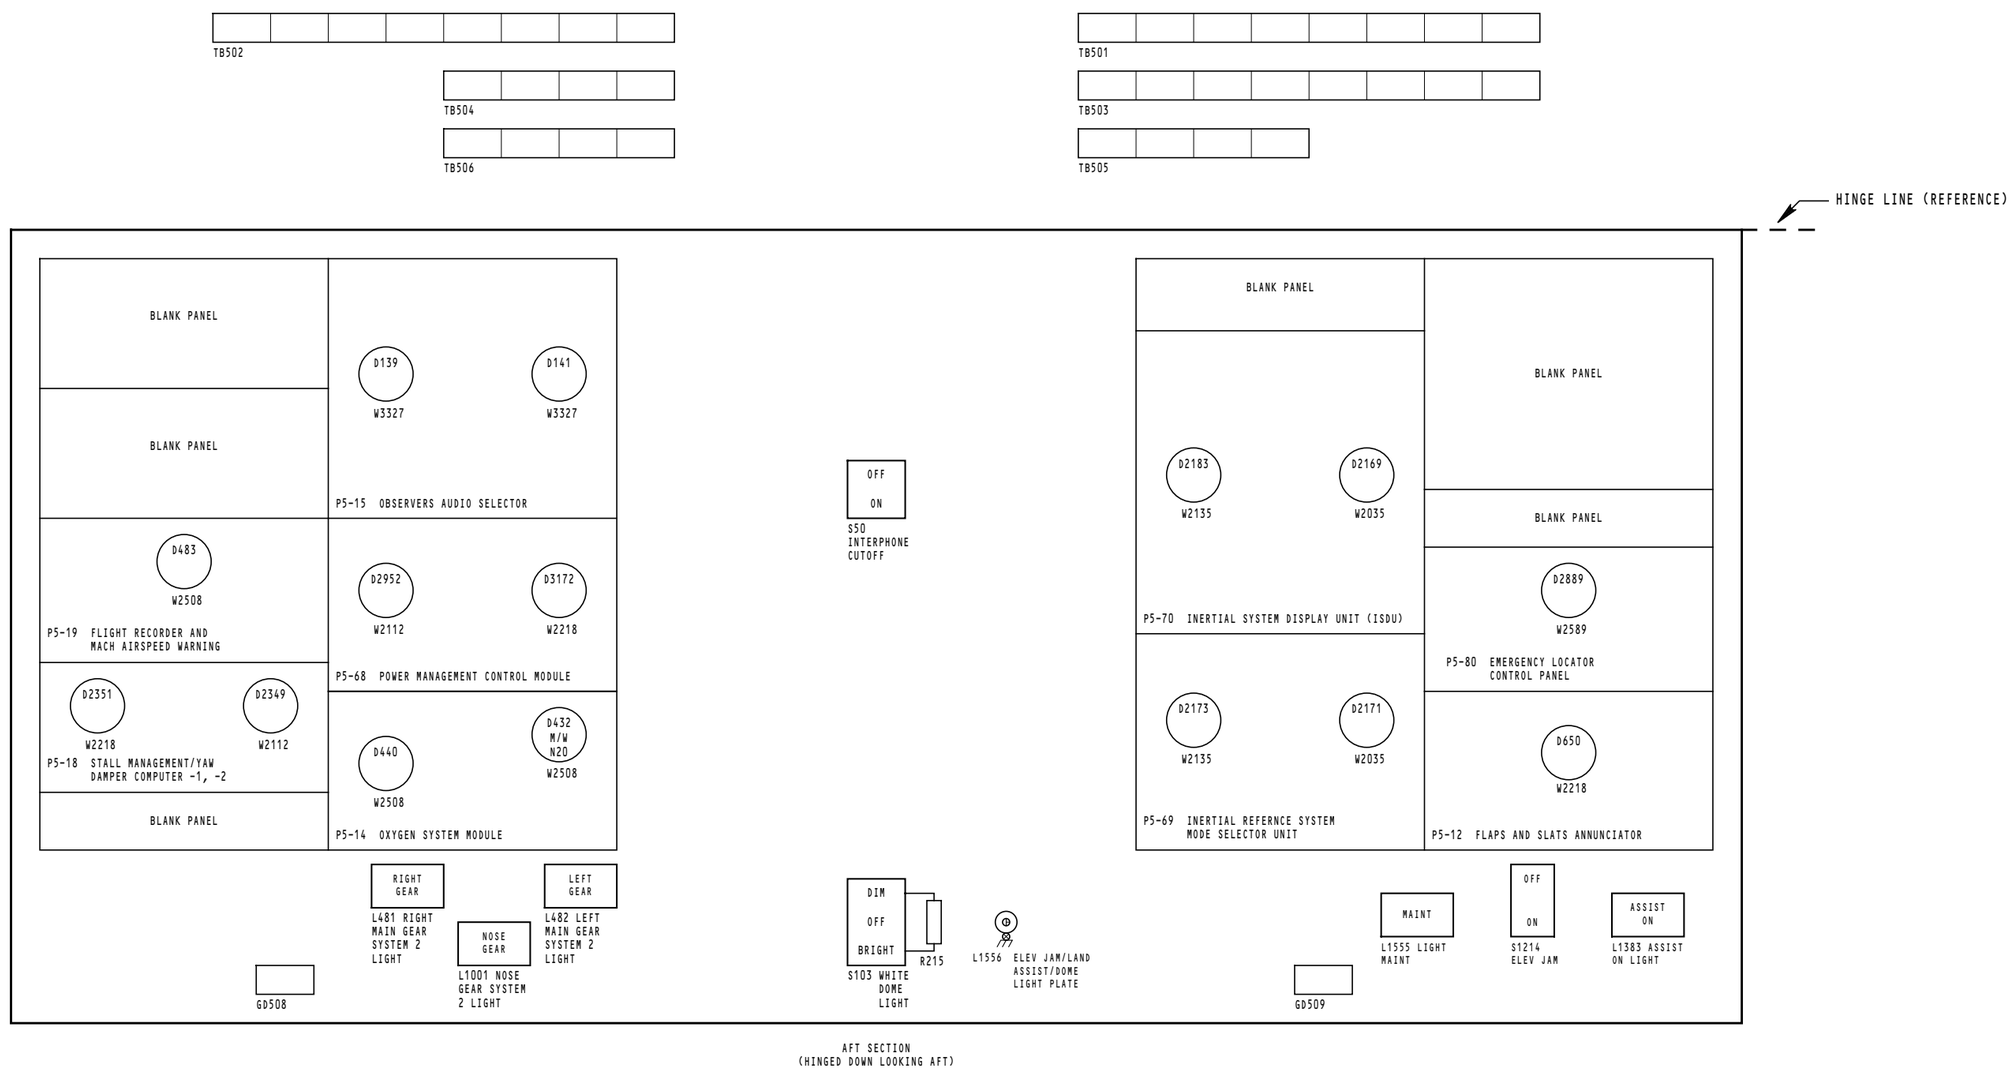


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-05

Page 1
Sheet 2
May 15/2024

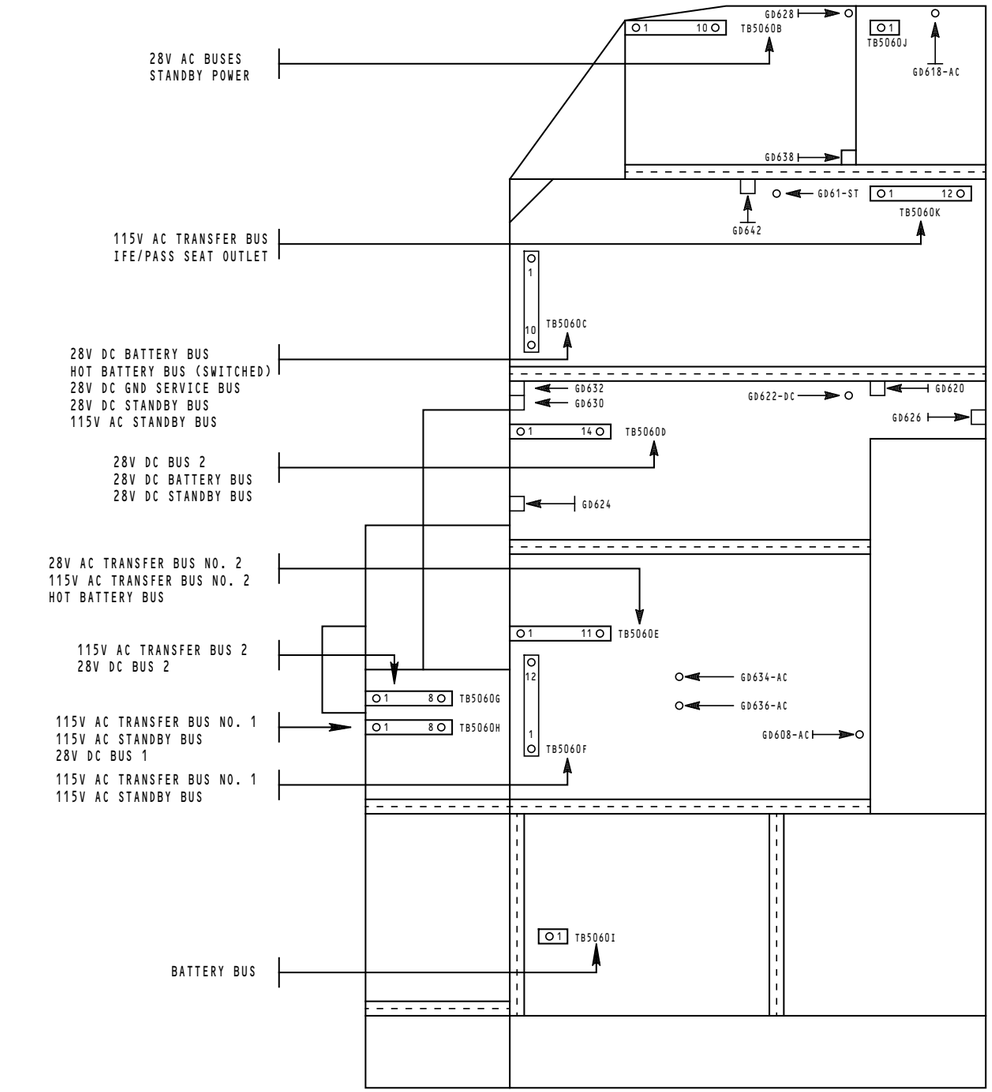

NOTES: - - - - - HINGE LINE

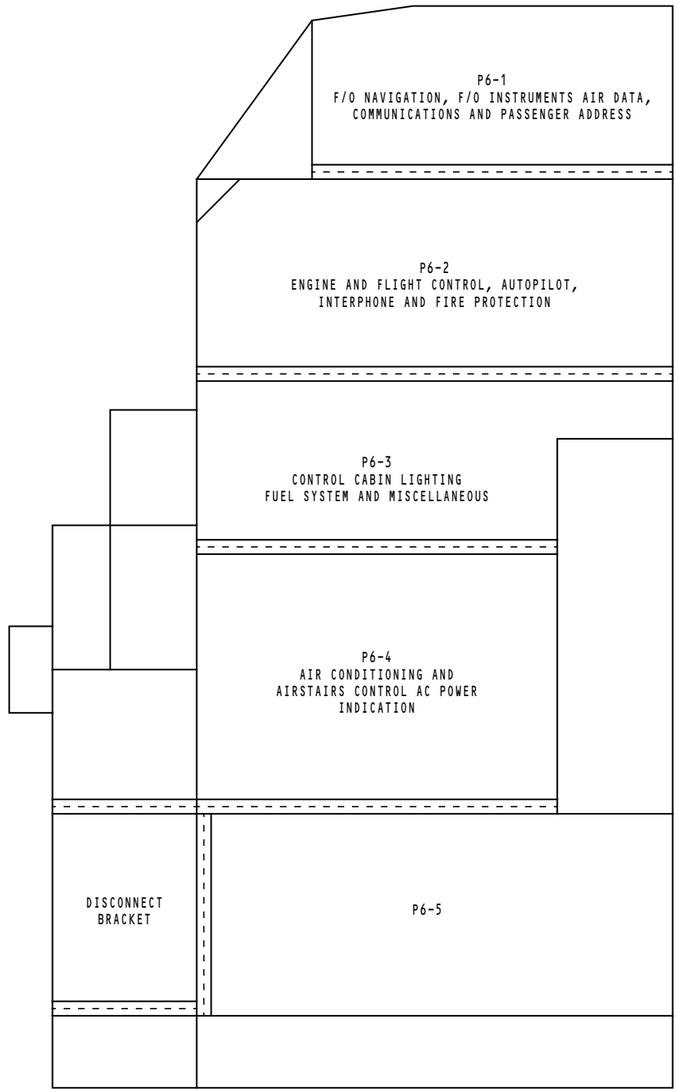


FRONT VIEW OF PANEL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-06

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

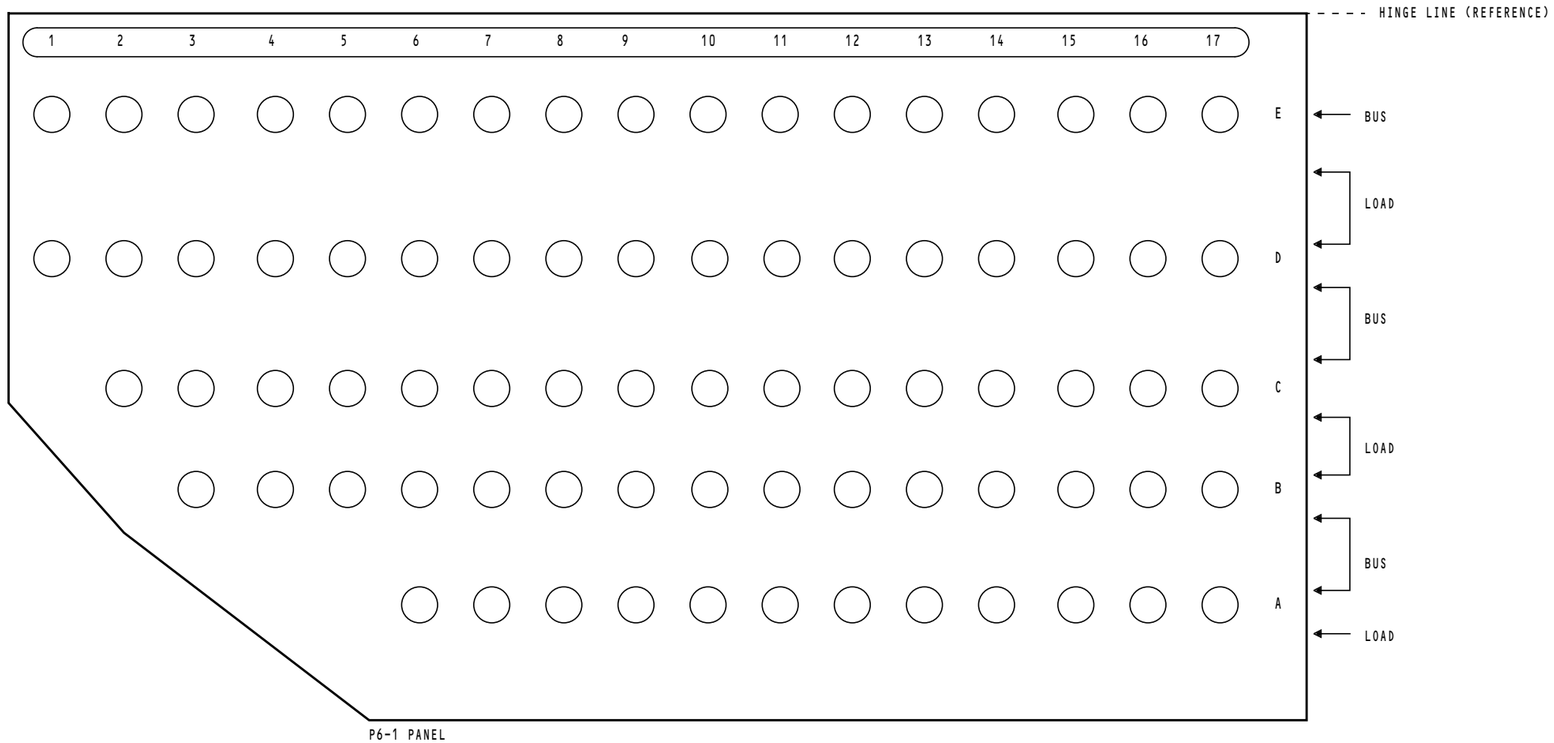

PANEL SHOWN IN THE OPEN POSITION

NOTES: FOR PANEL DISCONNECT BRACKETS AND CONNECTOR POSITIONS, REFER TO 91-04-XX.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-06

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

3

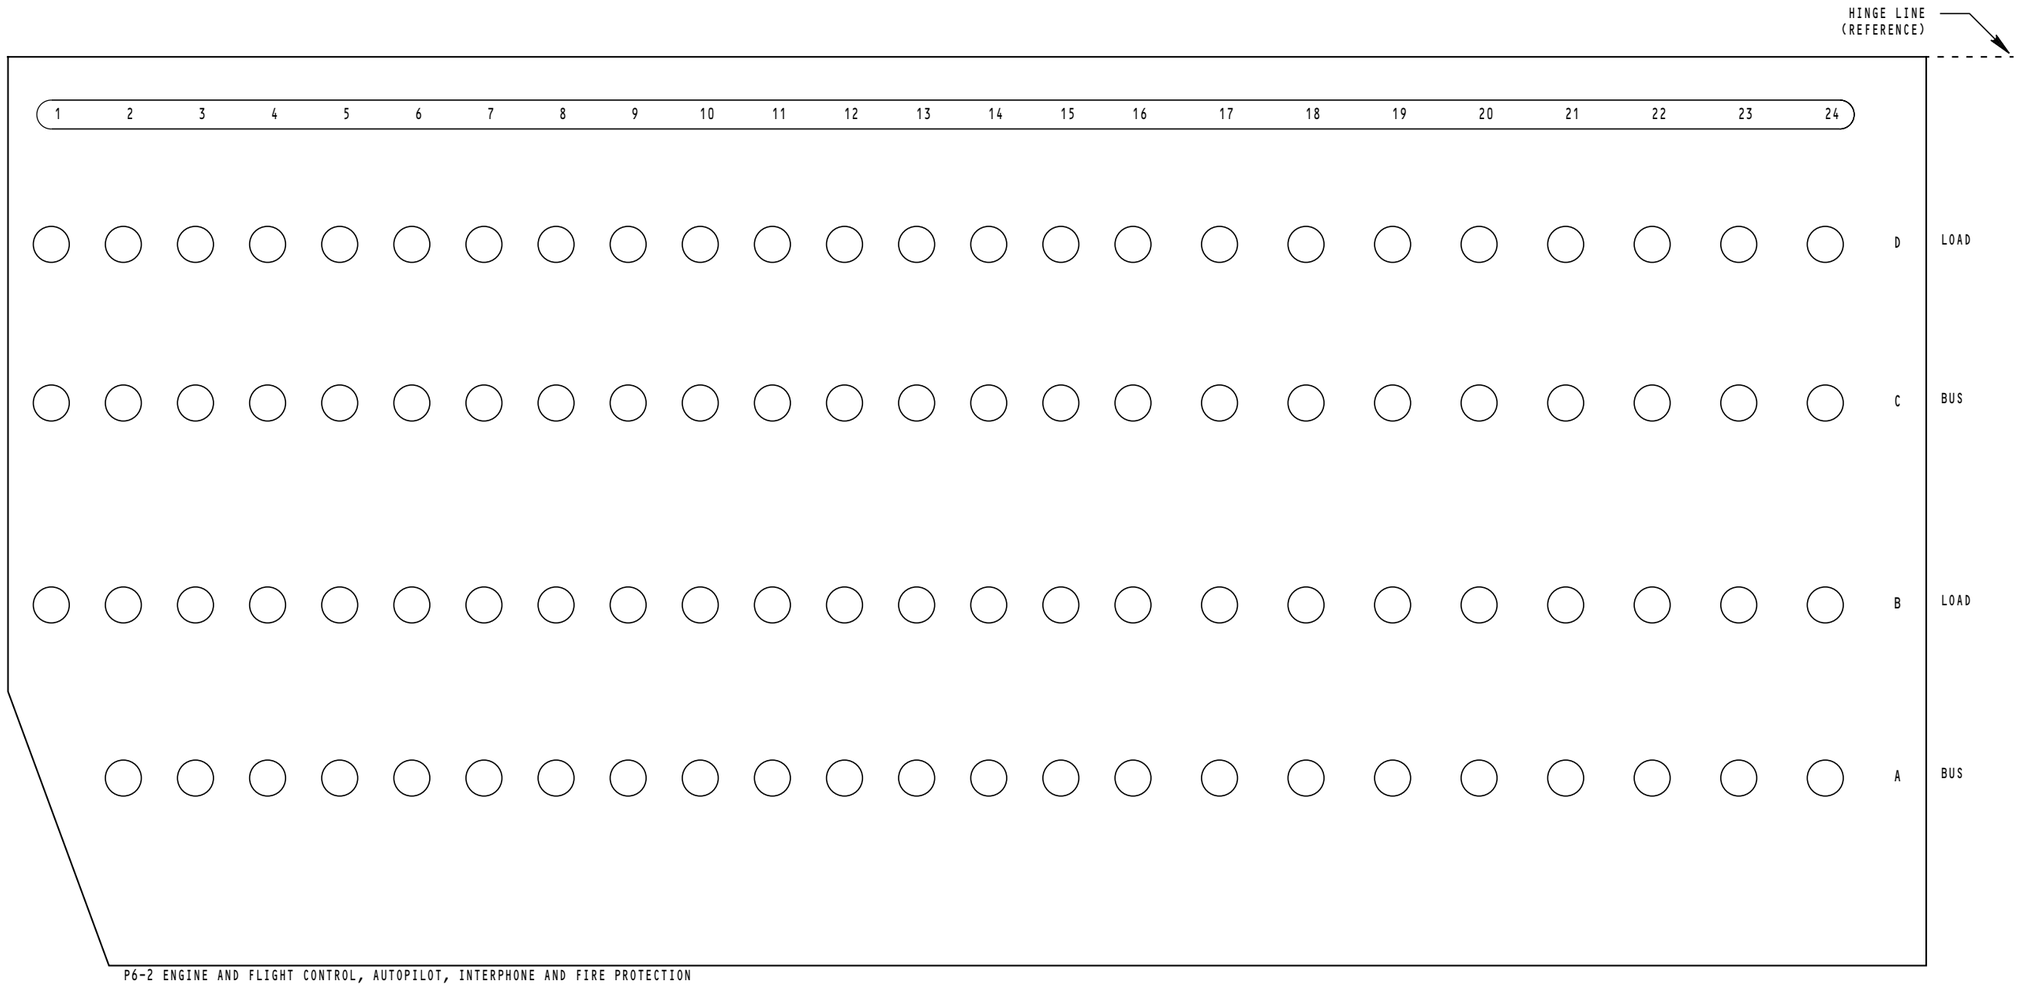

PANEL SHOWN IN THE OPEN POSITION

NOTES: TO REFER TO ASSOCIATED WIRES OR EQUIPMENT, SEE HOOK-UP CHARTS OR EQUIPMENT LIST AND WIRING DIAGRAMS OF THIS DRAWING.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-06

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

2

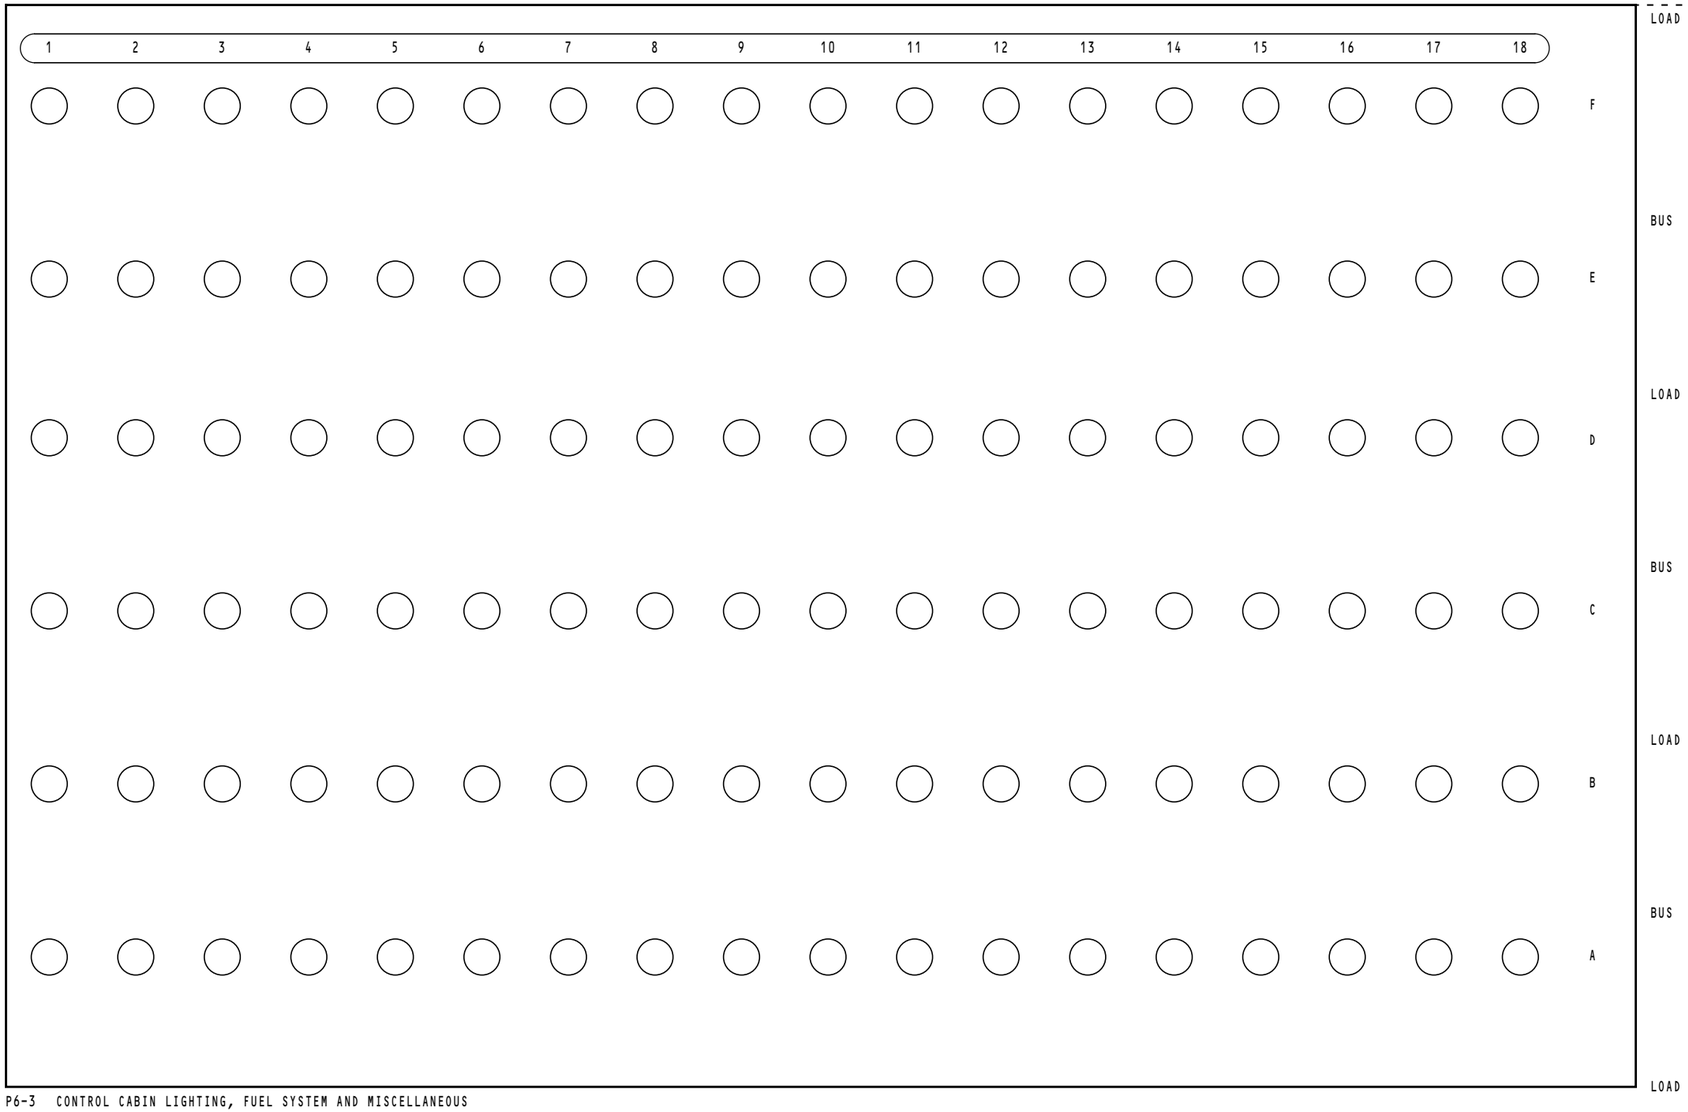

P6-3 CONTROL CABIN LIGHTING, FUEL SYSTEM AND MISCELLANEOUS

PANEL SHOWN IN THE OPEN POSITION

NOTES: TO REFER TO ASSOCIATED WIRES OR EQUIPMENT, SEE HOOK-UP CHARTS OR EQUIPMENT LISTS AND WIRING DIAGRAMS OF THE DRAWING


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-06

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

1

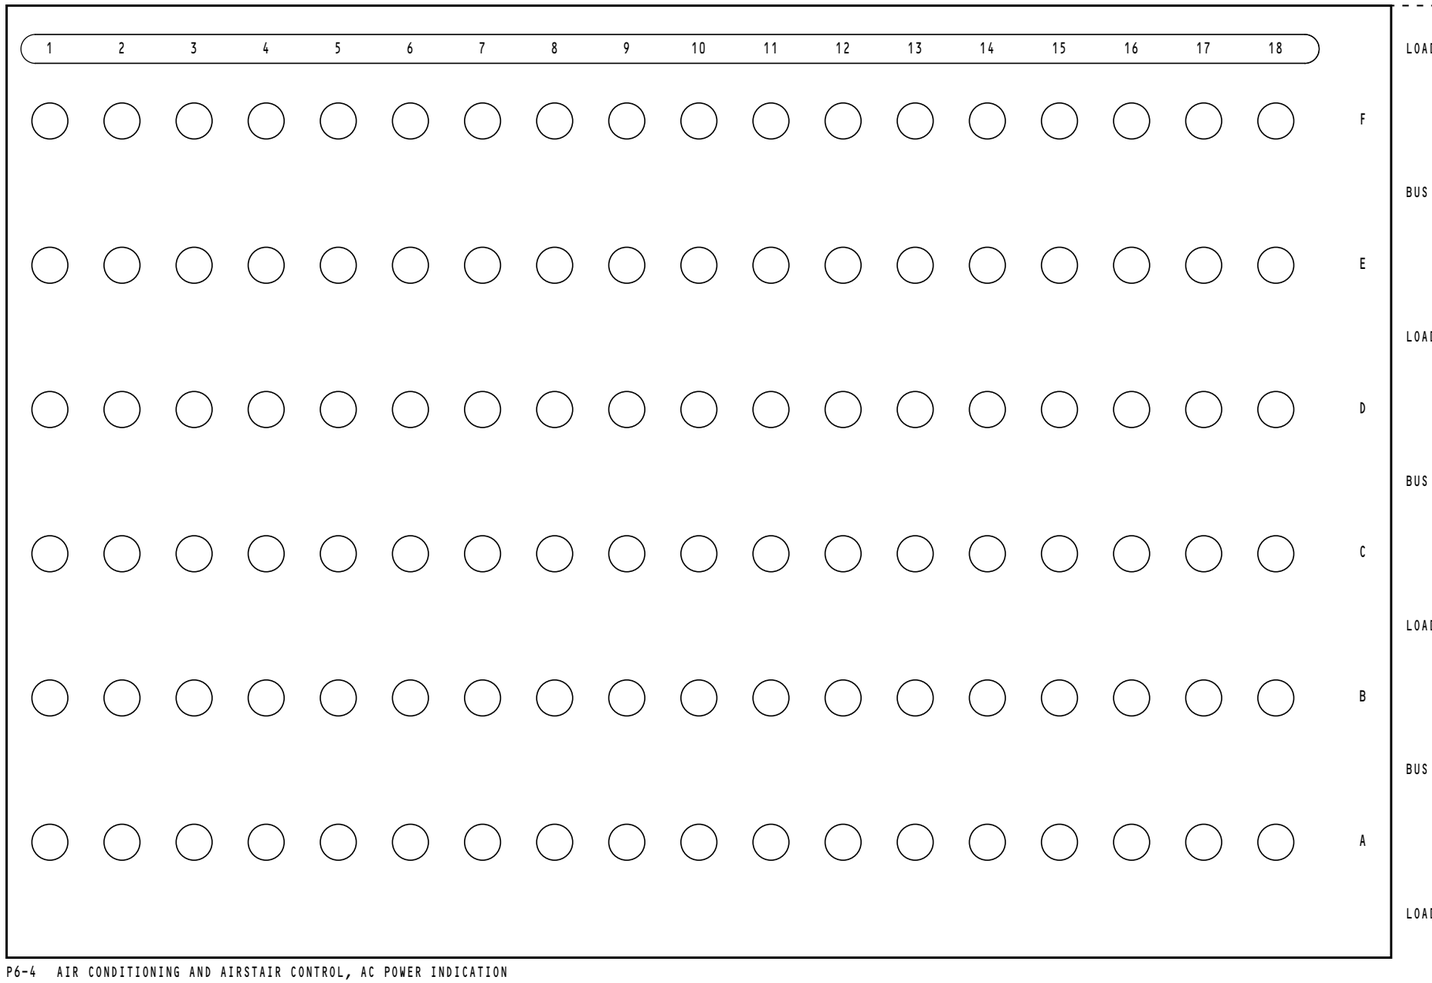

P6-4 AIR CONDITIONING AND AIRSTAIR CONTROL, AC POWER INDICATION


PANEL SHOWN IN THE OPEN POSITION

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-06

Page 1
Sheet 5
May 15/2024

737-8 WIRING DIAGRAM MANUAL

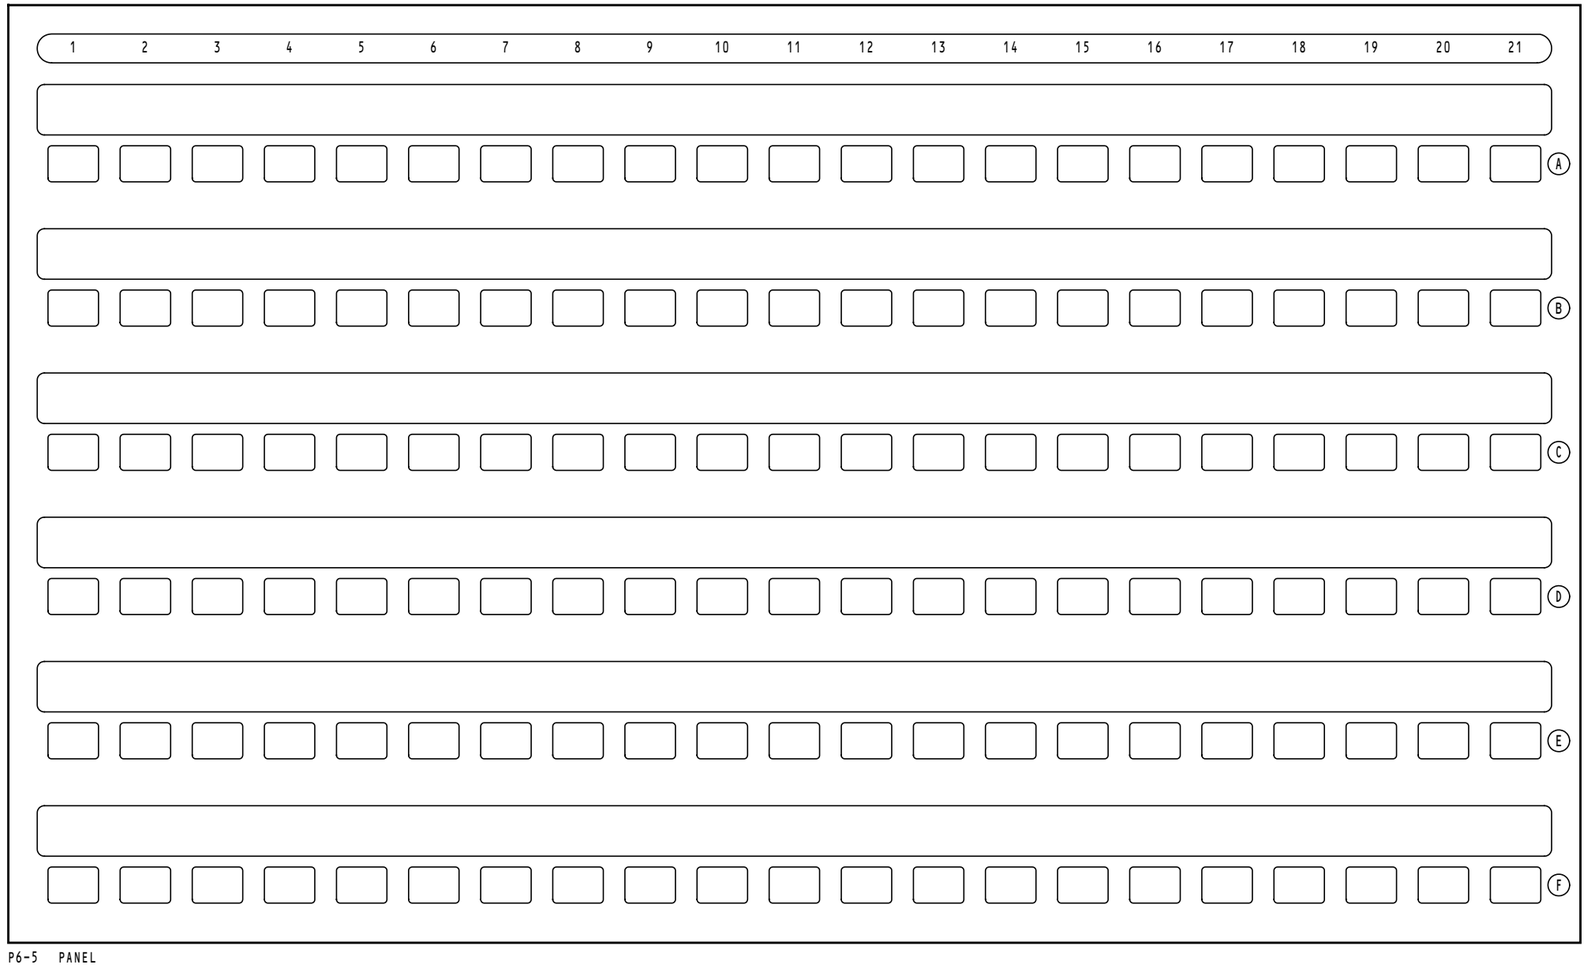

P6-5 PANEL

PANEL SHOWN IN OPEN POSITION


NOTES:

TO REFER TO ASSOCIATED WIRES OR EQUIPMENT SEE HOOK-UP CHARTS OR EQUIPMENT LIST AND WIRING DIAGRAMS OF THE DRAWING.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-06

Page 1
Sheet 6
May 15/2024

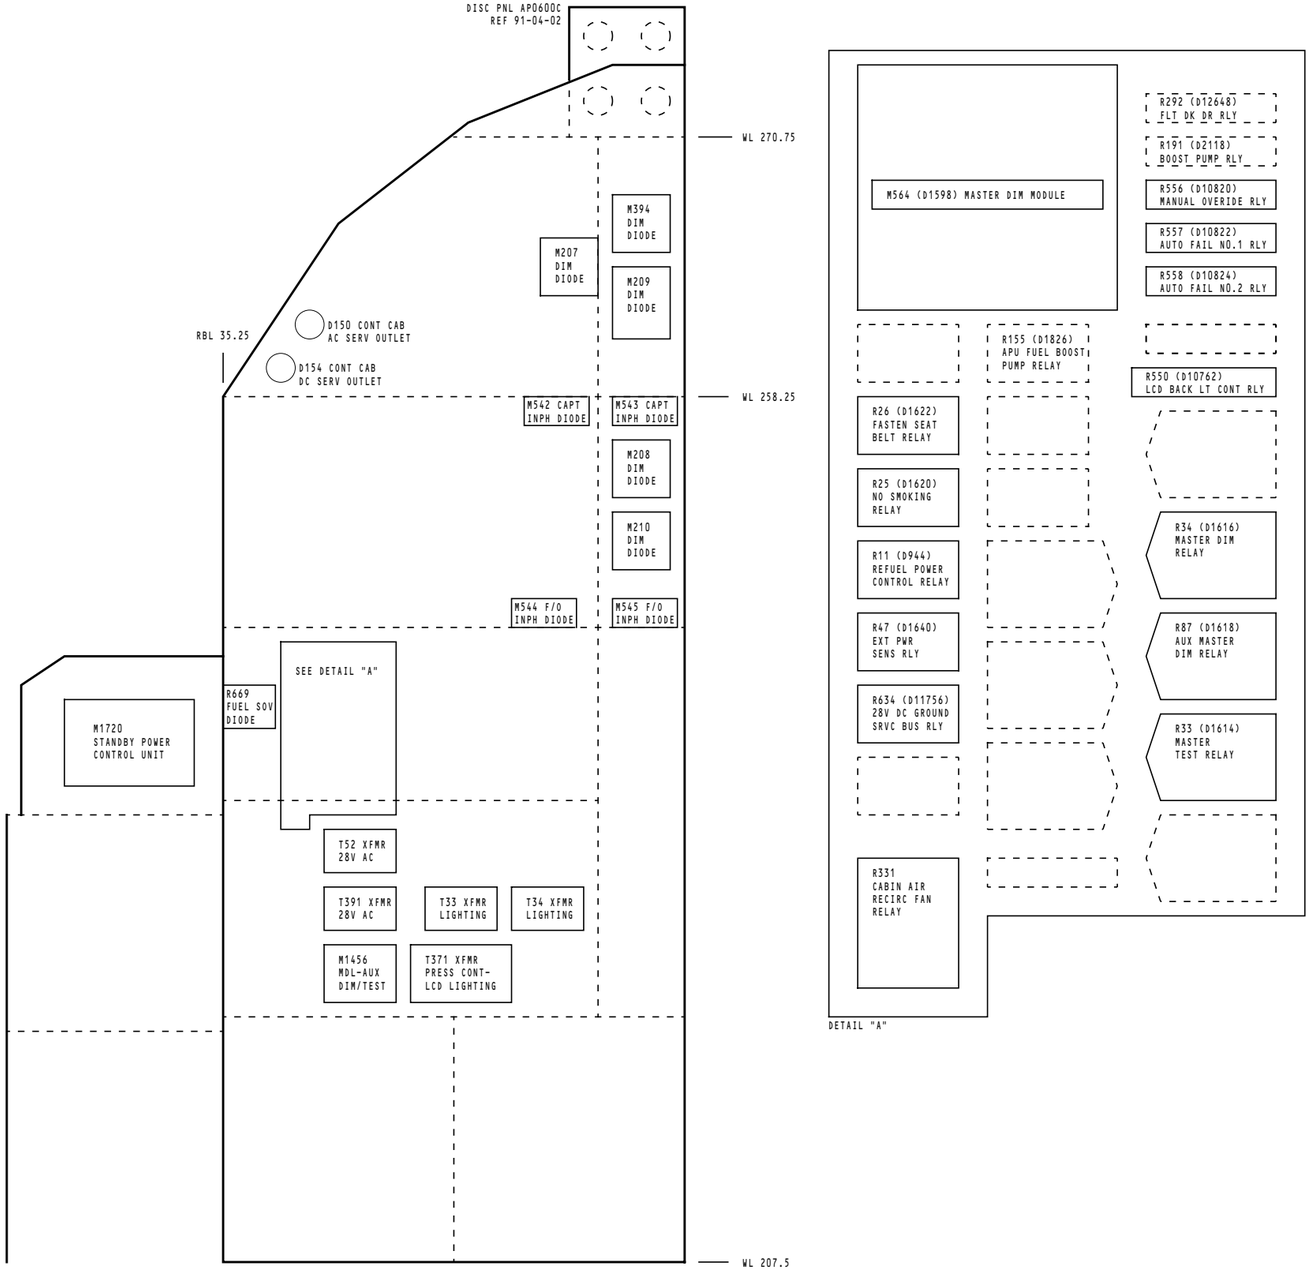


ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

91-02-06

Page 1
Sheet 7
May 15/2024

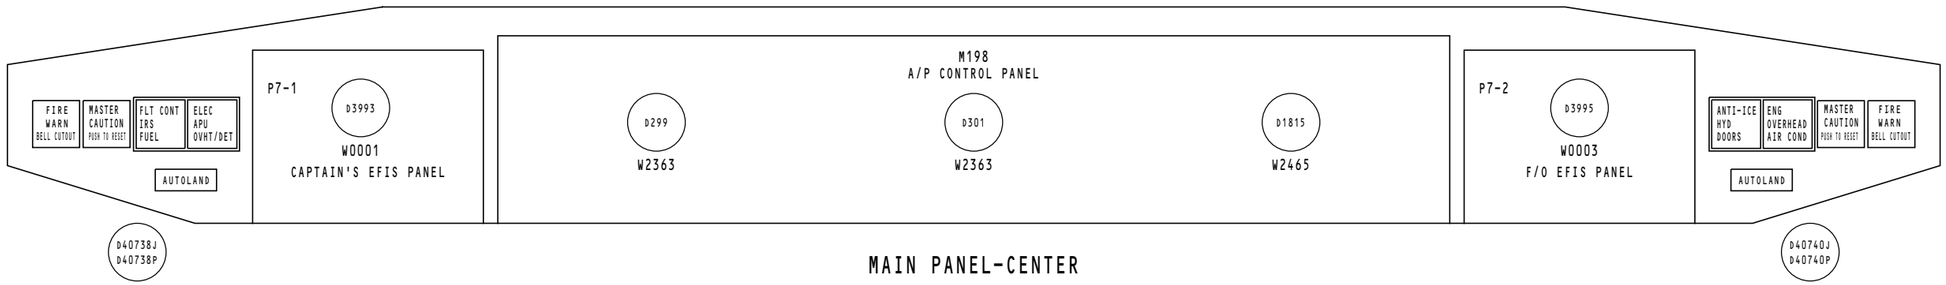


ALL

P7 - MAIN CENTER PANEL

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-07
Page 1
May 15/2024

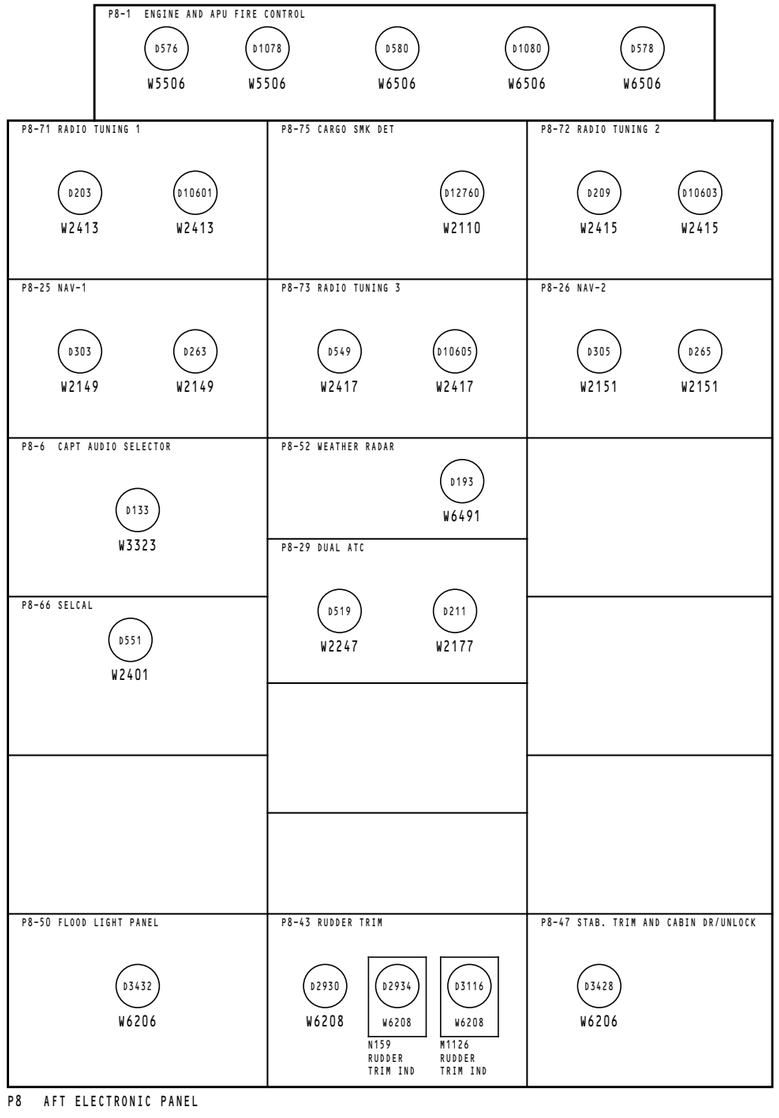

NOTES:
- THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED
- FOR PANEL DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX
- 1 R425 MOUNTED AT BOTTOM BEHIND P8
- 2 R384 AND S149 LOCATED IN THE CONTROL STAND (OUTBOARD SIDE)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

91-02-08


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

2

P9-82

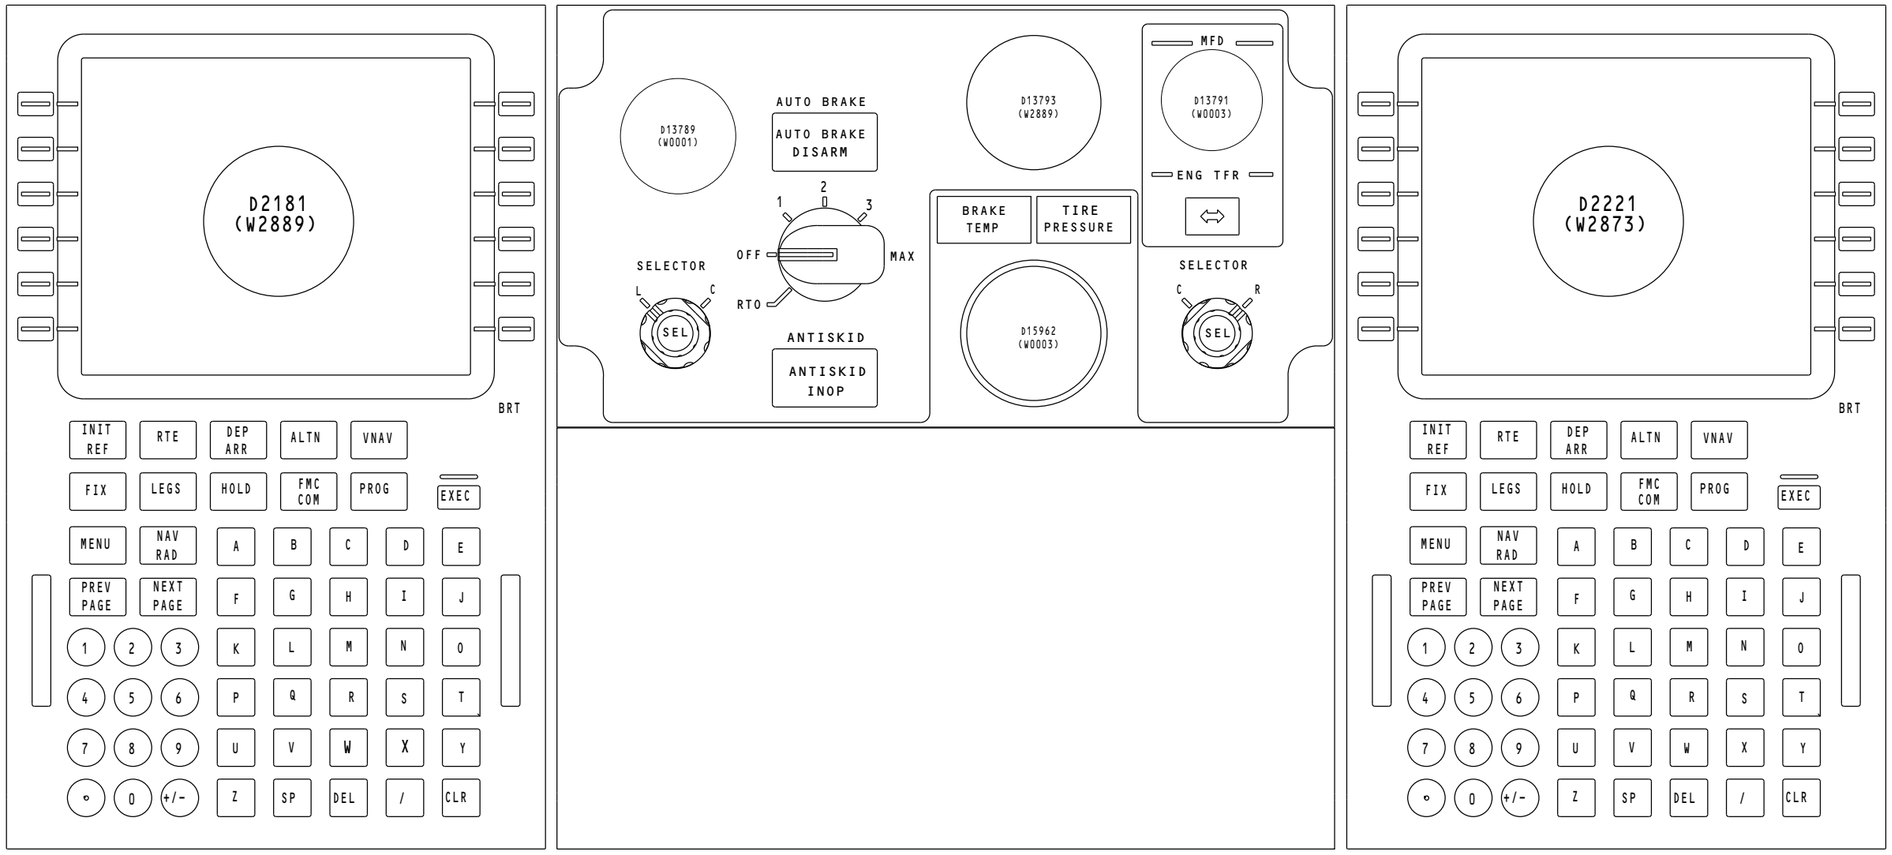

P9-65 FMCS CDU 1

P9-66 FMCS CDU 2

ALL	P9 - FORWARD CONSOLE PANEL
	D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-09

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

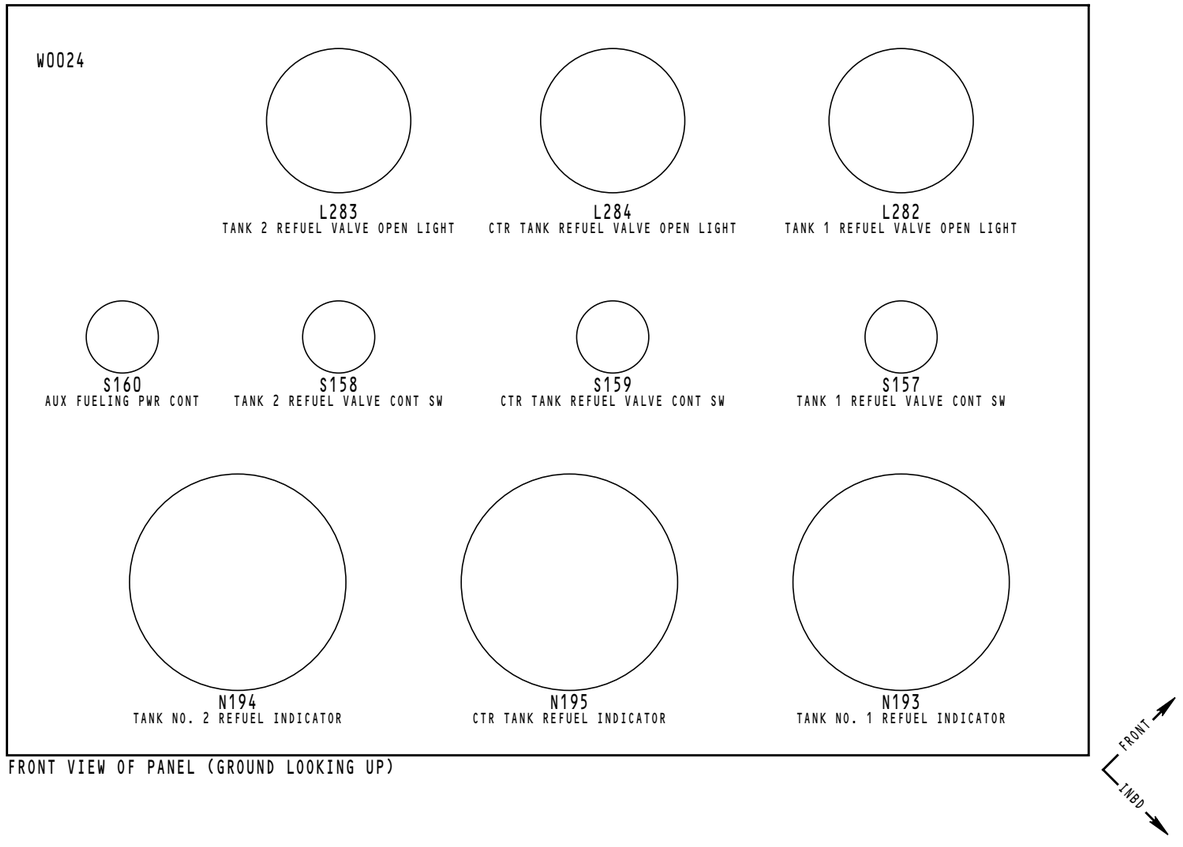

FRONT VIEW OF PANEL (GROUND LOOKING UP)

ALL	P15 - FUELING PANEL
	D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-15


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

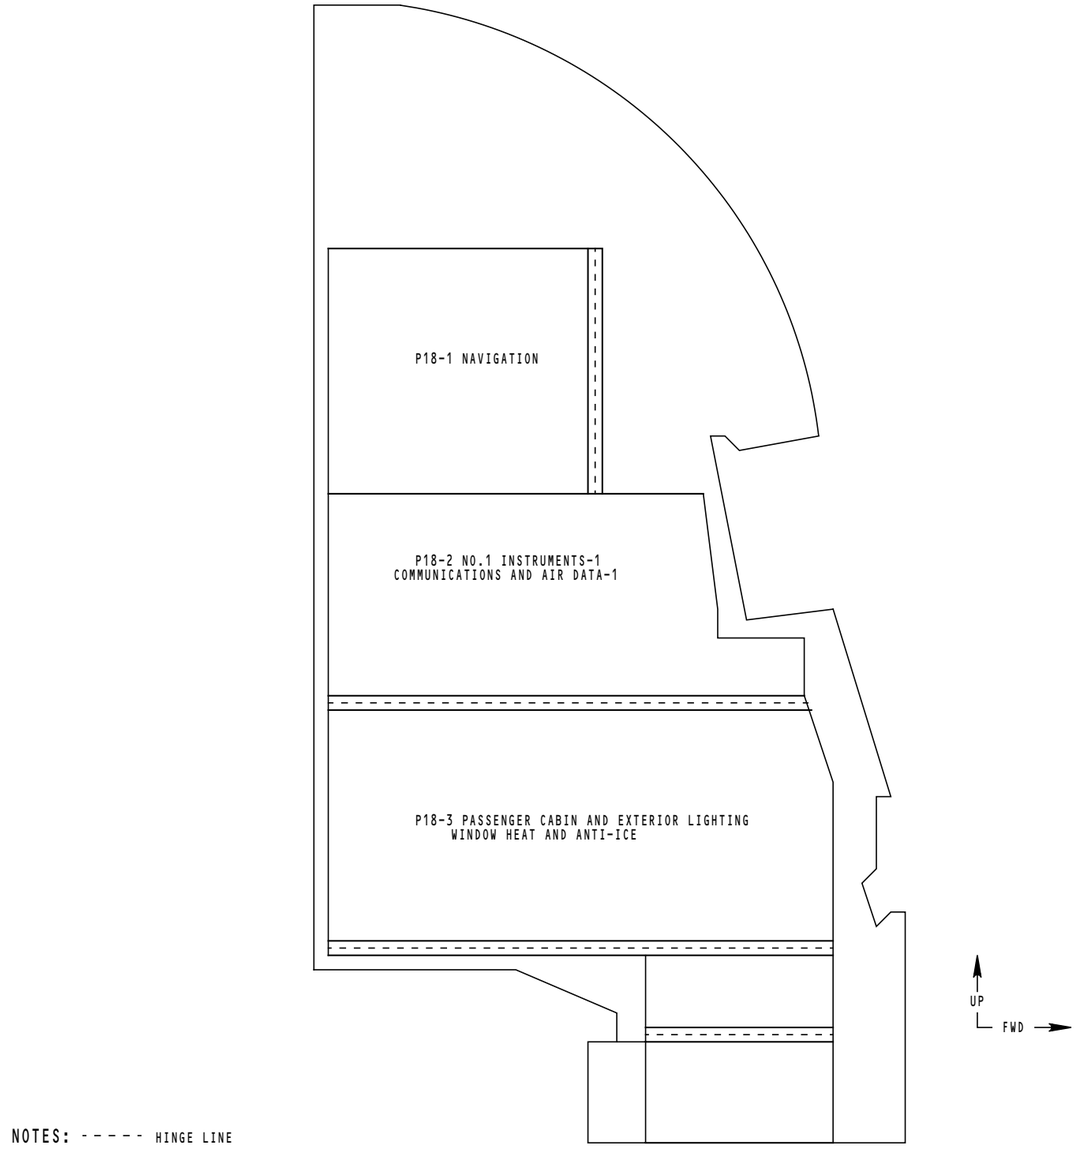

NOTES: - - - - - HINGE LINE

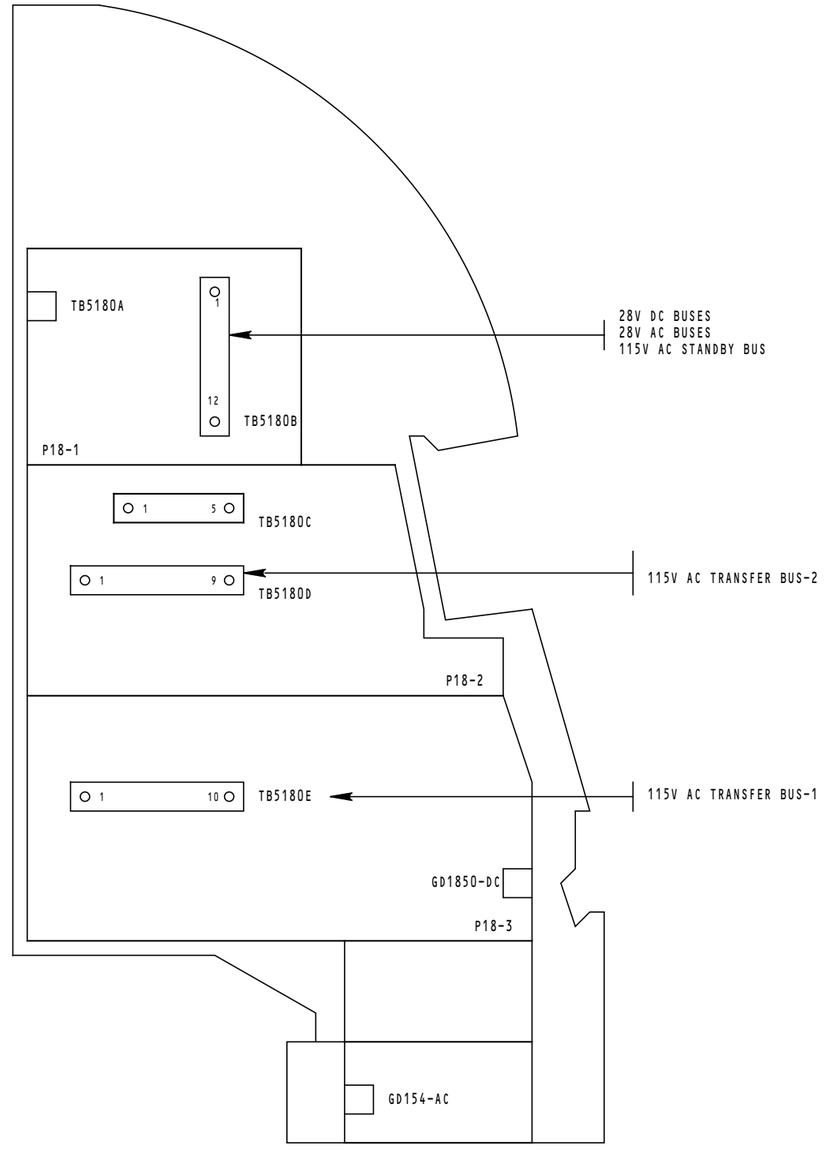

ALL

P18 - CIRCUIT BREAKER PANEL

D280AM1215

91-02-18

Page 1
Sheet 1
May 15/2024


91-02-18

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

1

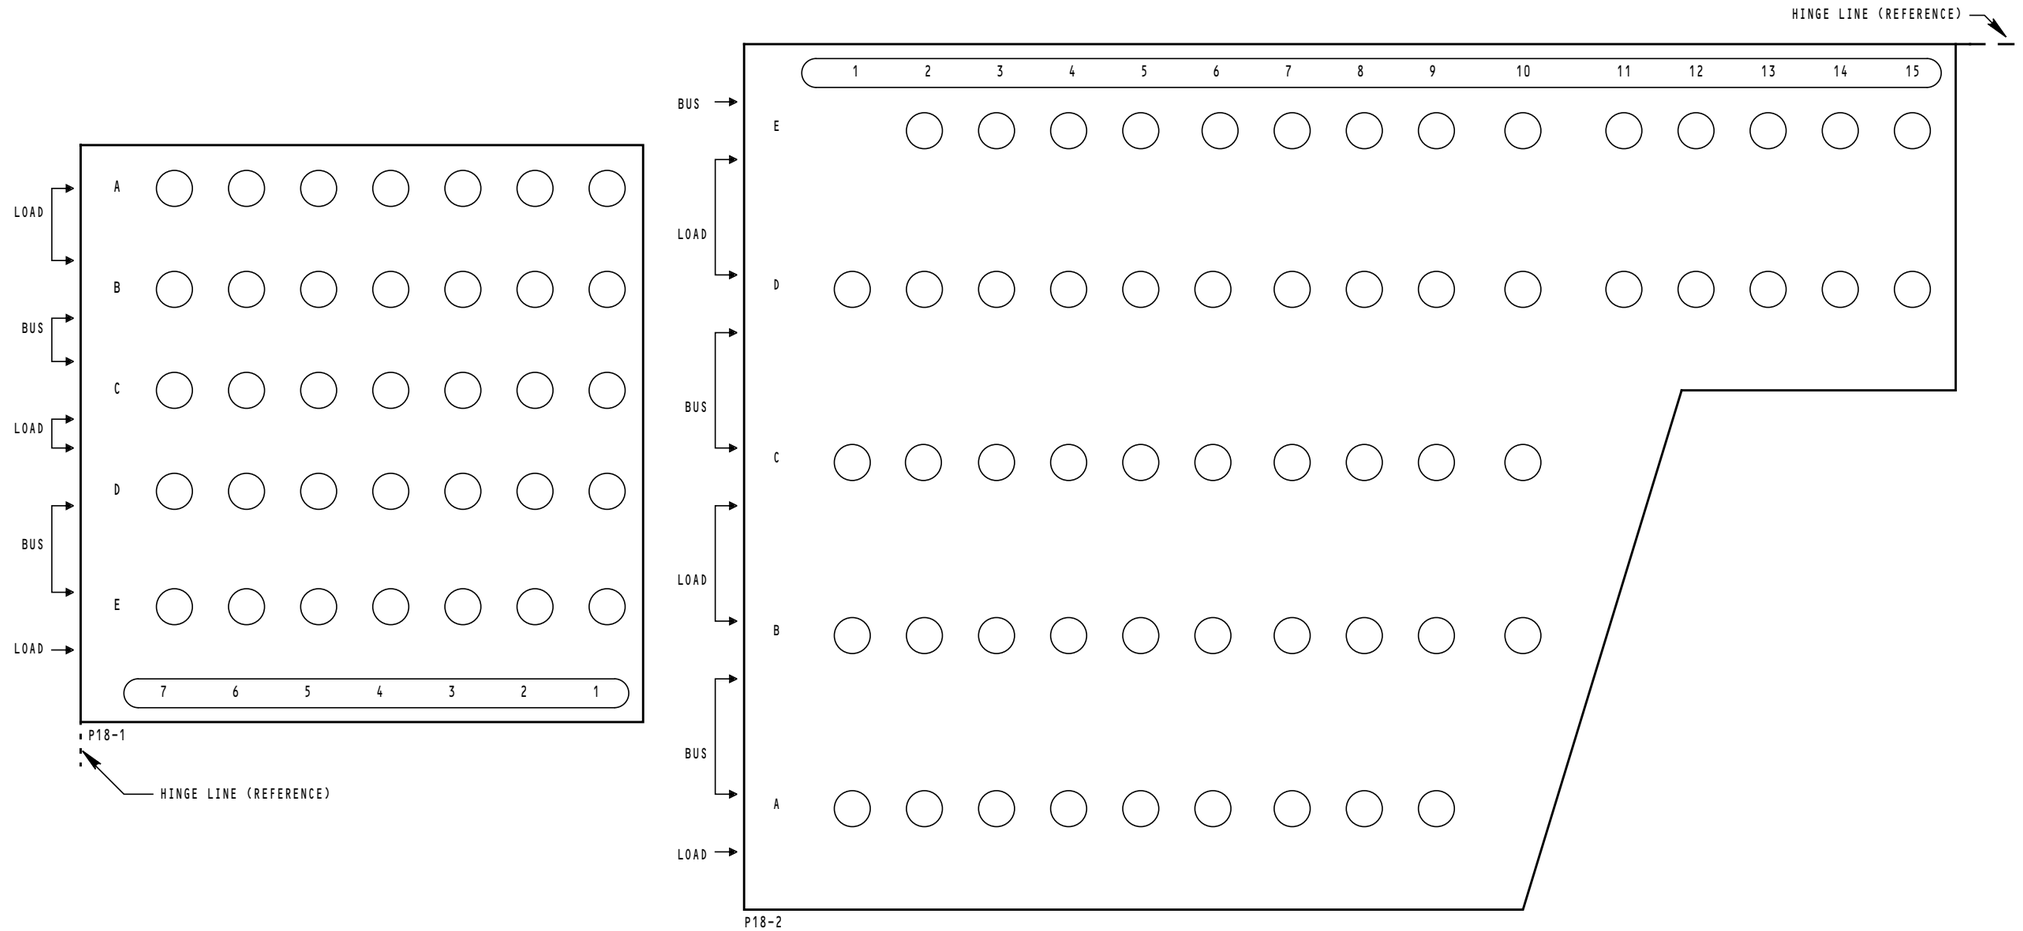


NOTES: FOR POWER DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-18

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

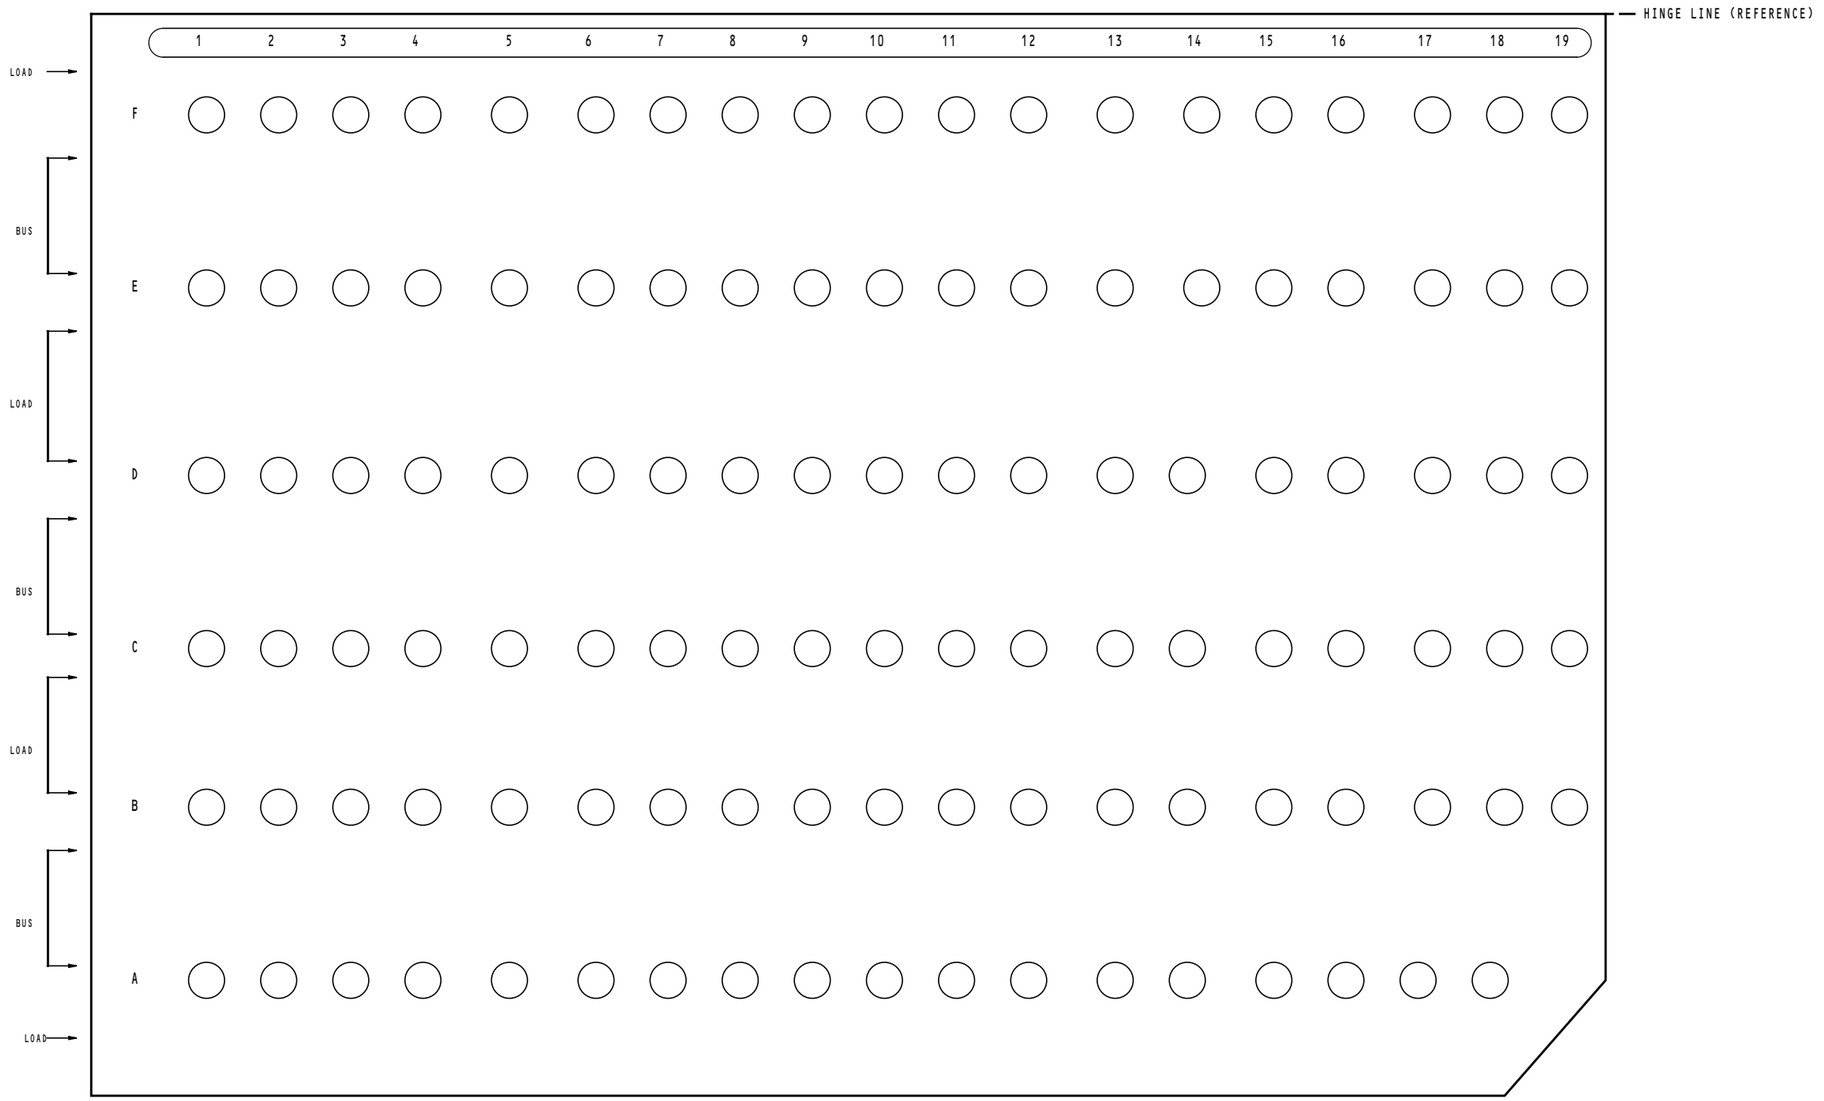

P18-3 PANEL (SHOWN IN OPEN POSITION)

NOTES:


TO REFER TO ASSOCIATED WIRES AND EQUIPMENT, SEE HOOK-UP CHARTS OR EQUIPMENT LIST AND WIRING DIAGRAMS OF THIS DRAWING

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-18

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

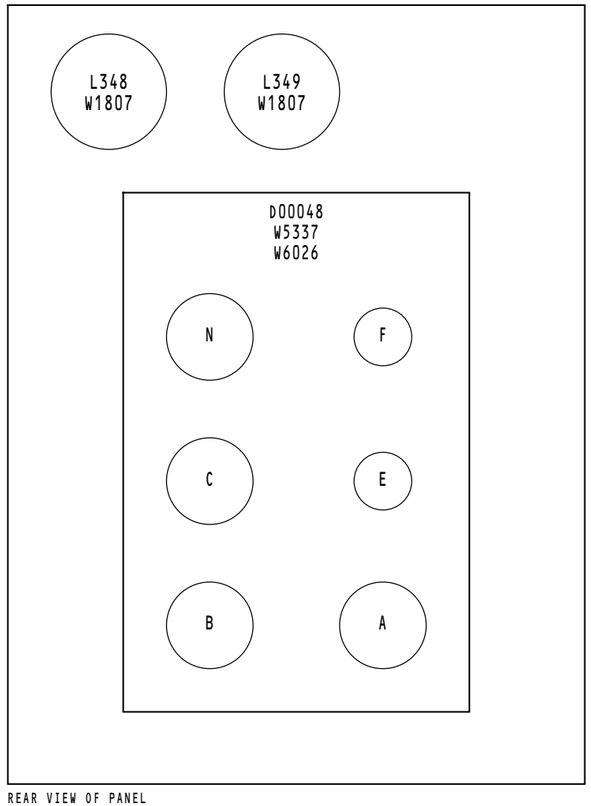

REAR VIEW OF PANEL

ALL

P19 - EXTERNAL POWER RECEPTACLE PANEL

D280AM1215

91-02-19

Page 1

May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-19


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

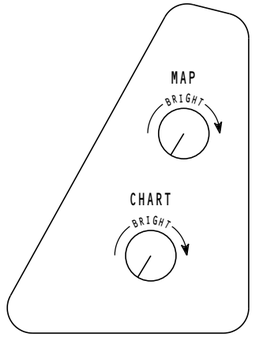

FRONT VIEW

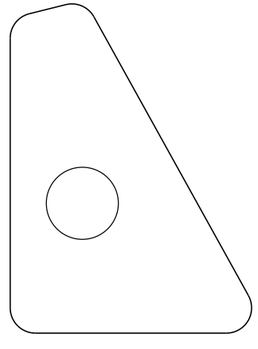

REAR VIEW

ALL

P21 - CAPTAIN AUXILIARY PANEL

D280AM1215

91-02-21


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-21


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

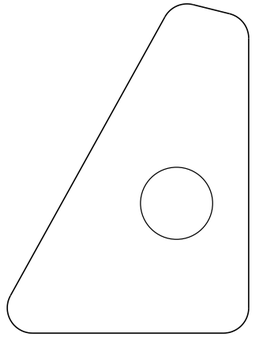

REAR VIEW

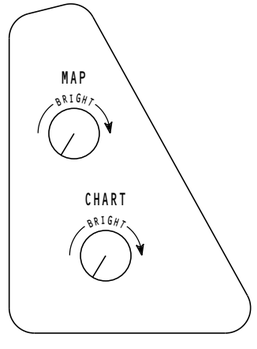

FRONT VIEW

ALL

P23 - FIRST OFFICER AUXILIARY PANEL

D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-23

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

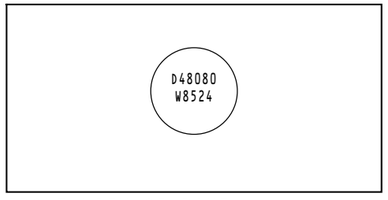


FRONT VIEW OF PANEL

ALL	P28 - APU FIRE CONTROL PANEL D280AM1215	91-02-28 Page 1 May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-28
Page 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

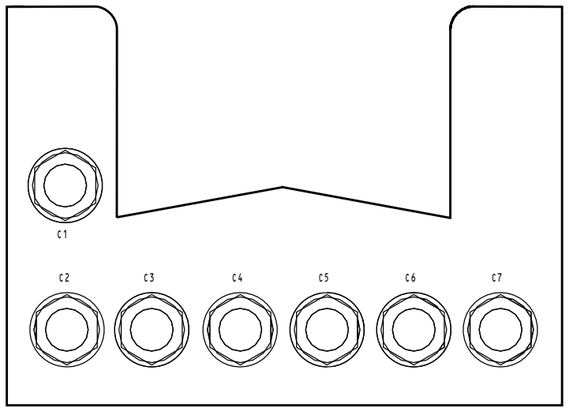

FRONT VIEW

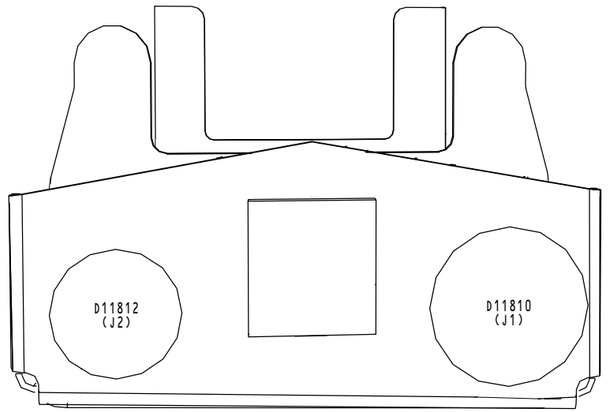


REAR VIEW

ALL	P41 - P1 AND P2 5V LIGHTING PANEL D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-41
Page 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

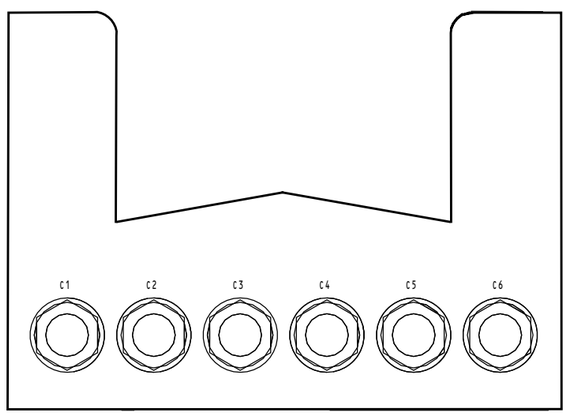

FRONT VIEW

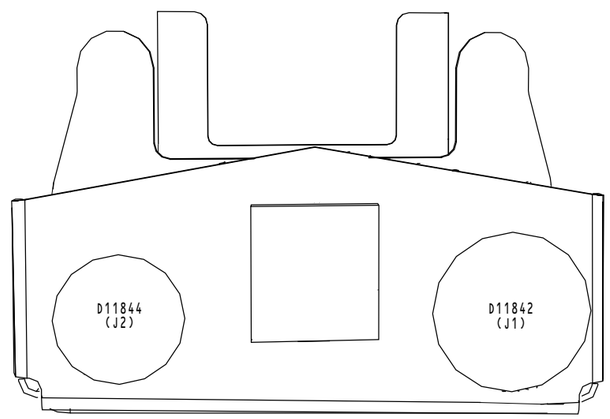

REAR VIEW

ALL

P42 - P3 5V LIGHTING PANEL

D280AM1215

91-02-42

Page 1

May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-02-42

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

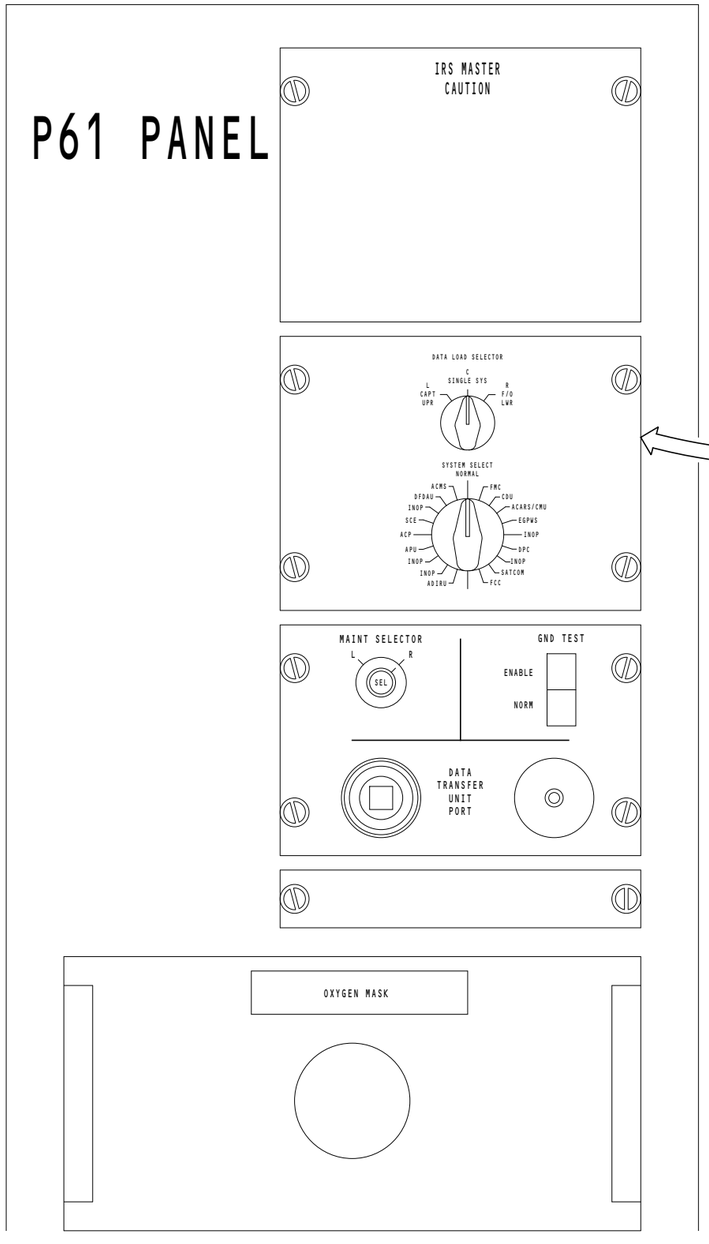

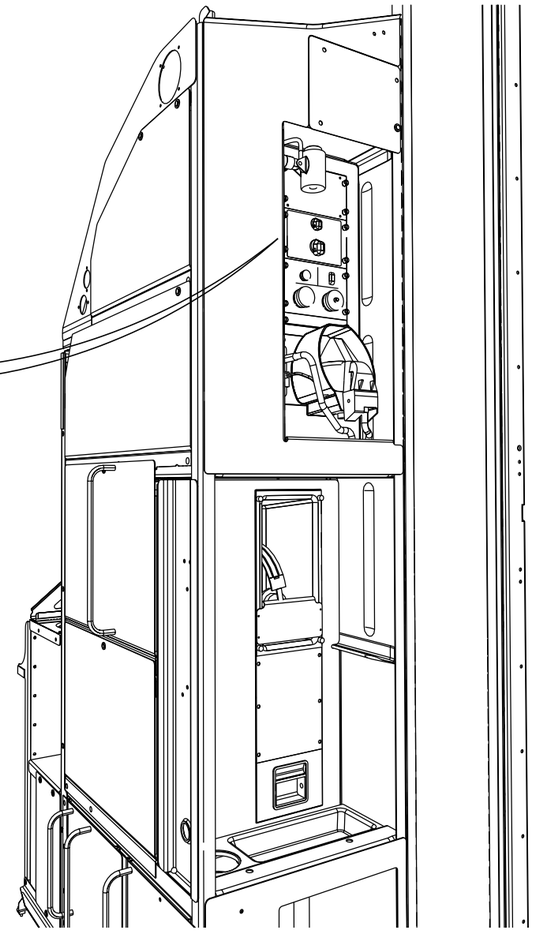

P6 PANEL

ALL	P61 - DATA LOADER CONTROL PANEL D280AM1215	91-02-61 Page 1 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-02-61

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

1

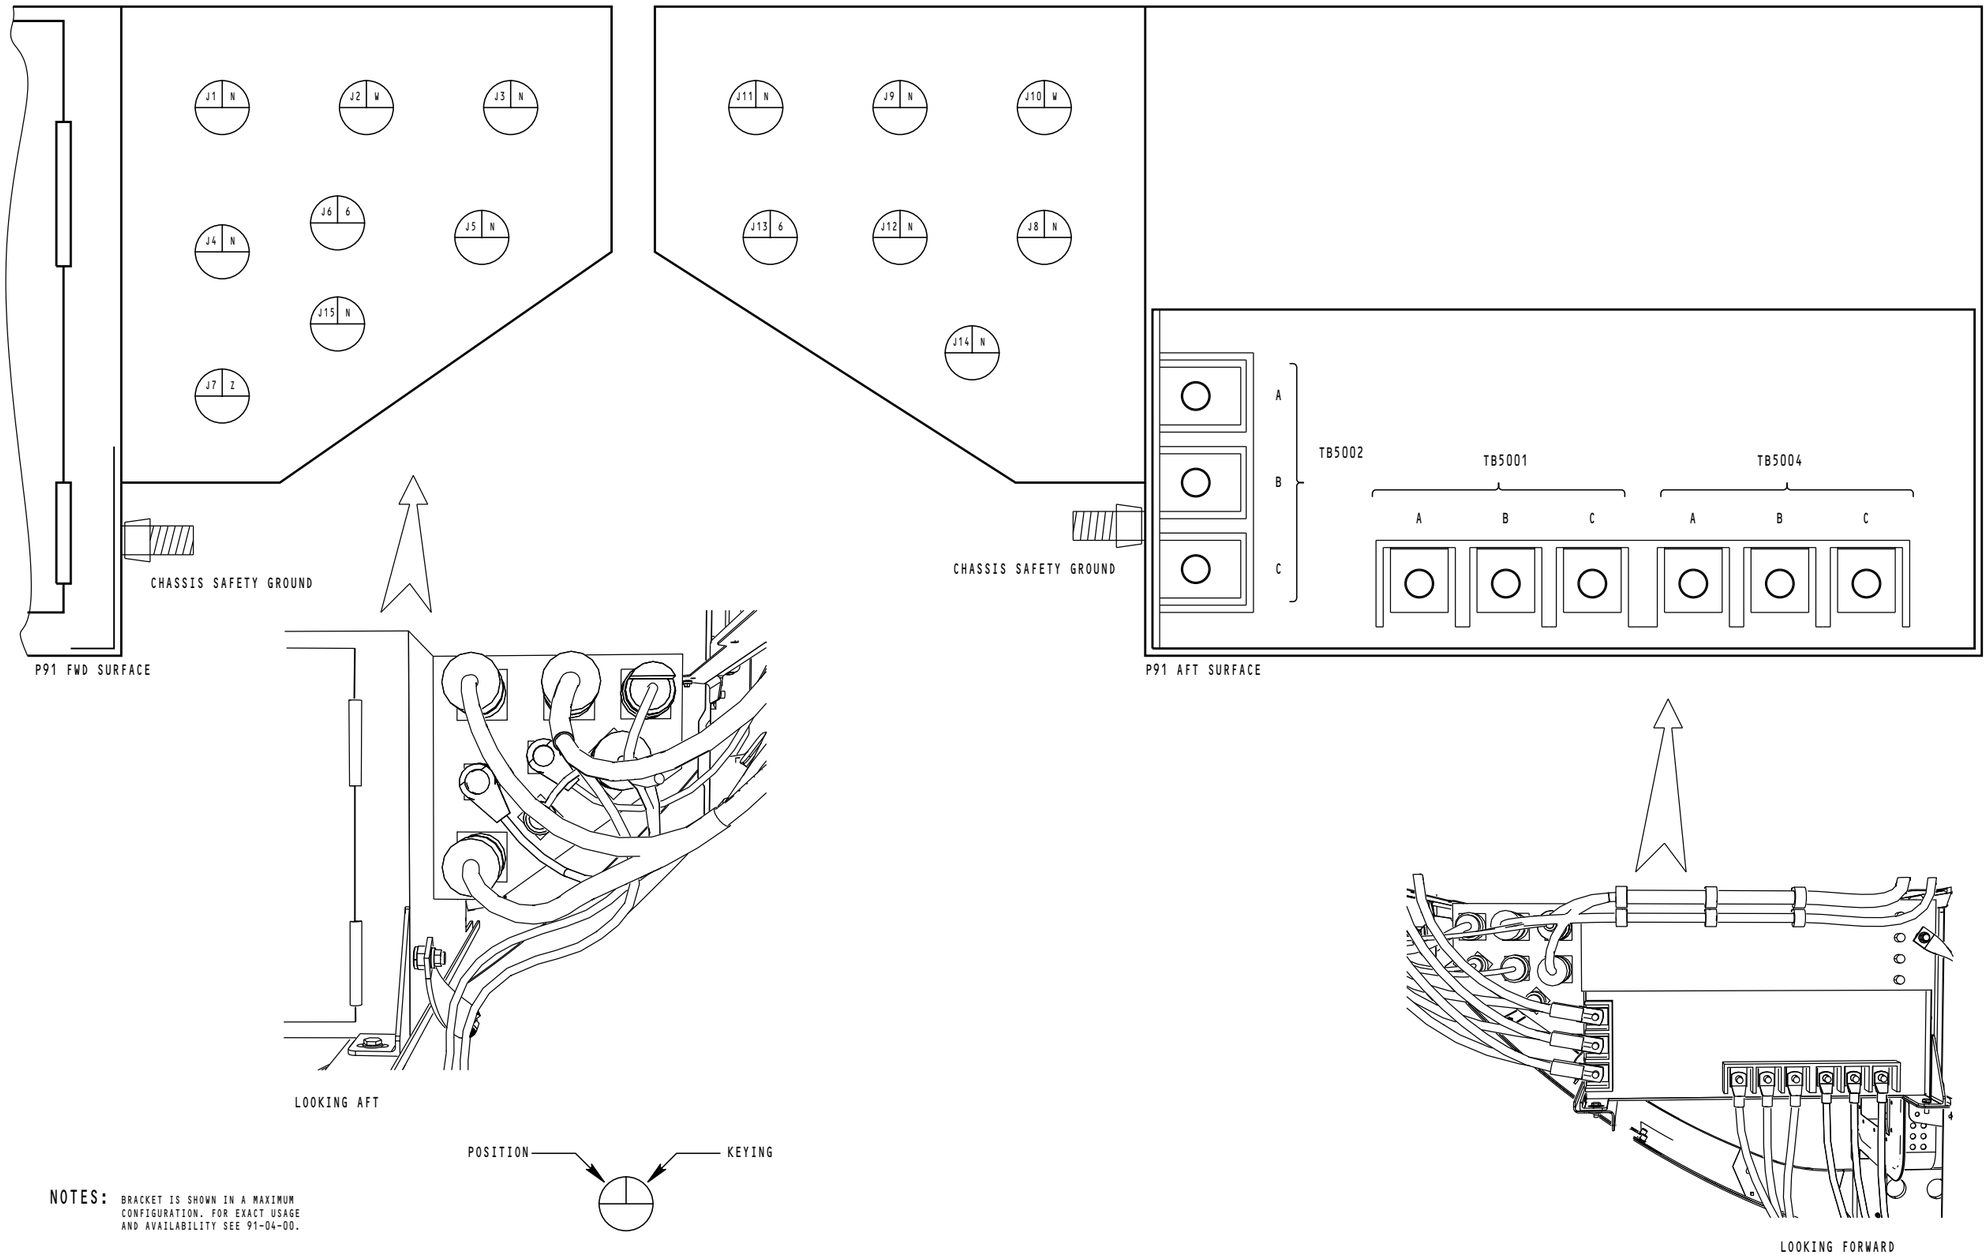

NOTES: BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION. FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

91-02-91


Page 1


May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


1

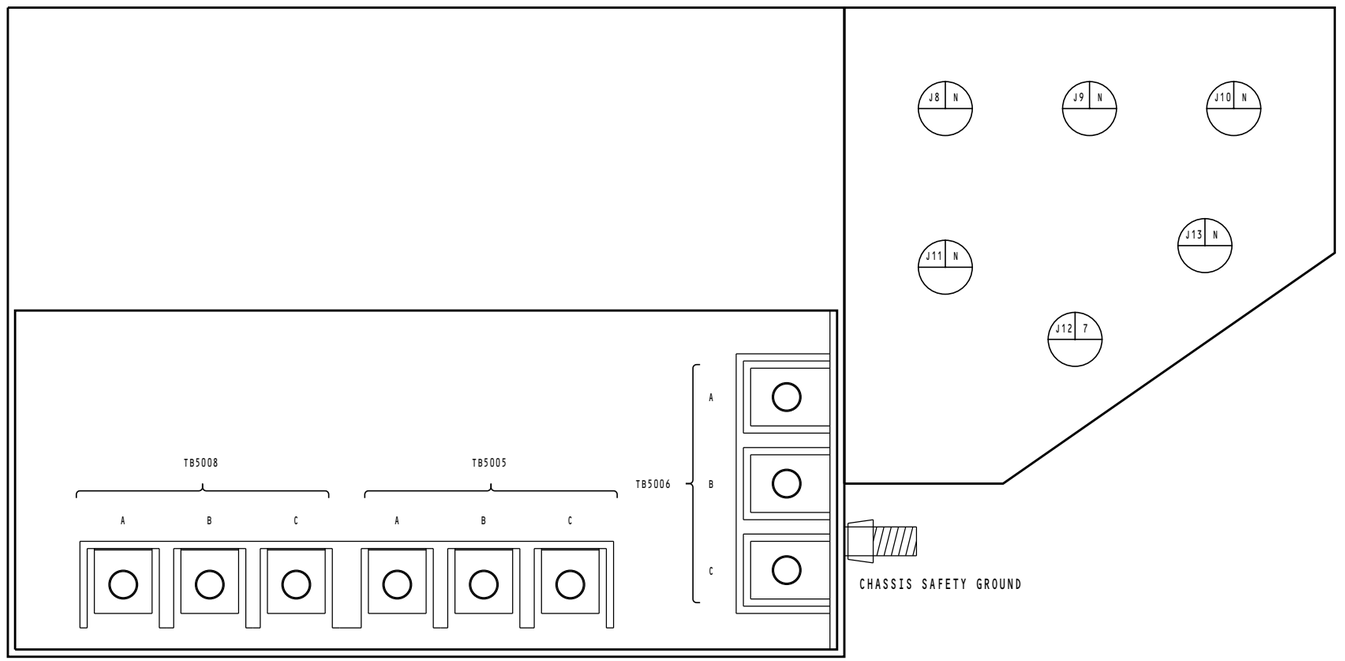


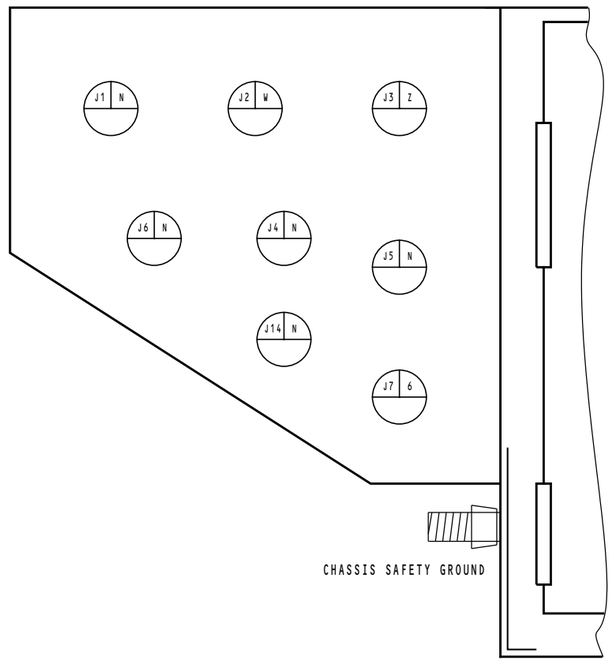

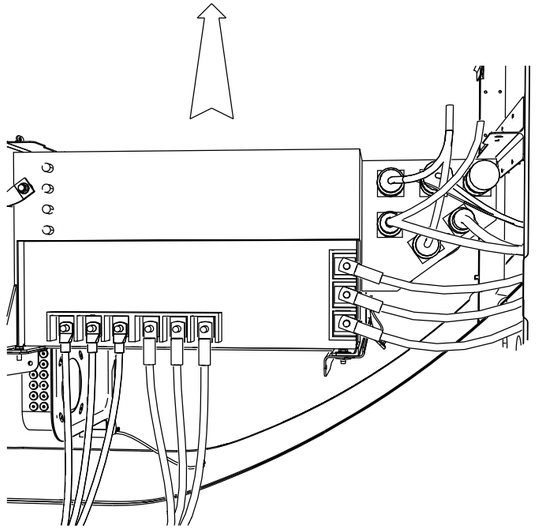

NOTES: BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION. FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.



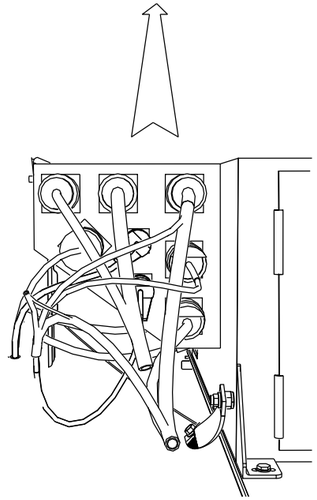


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-02-92

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

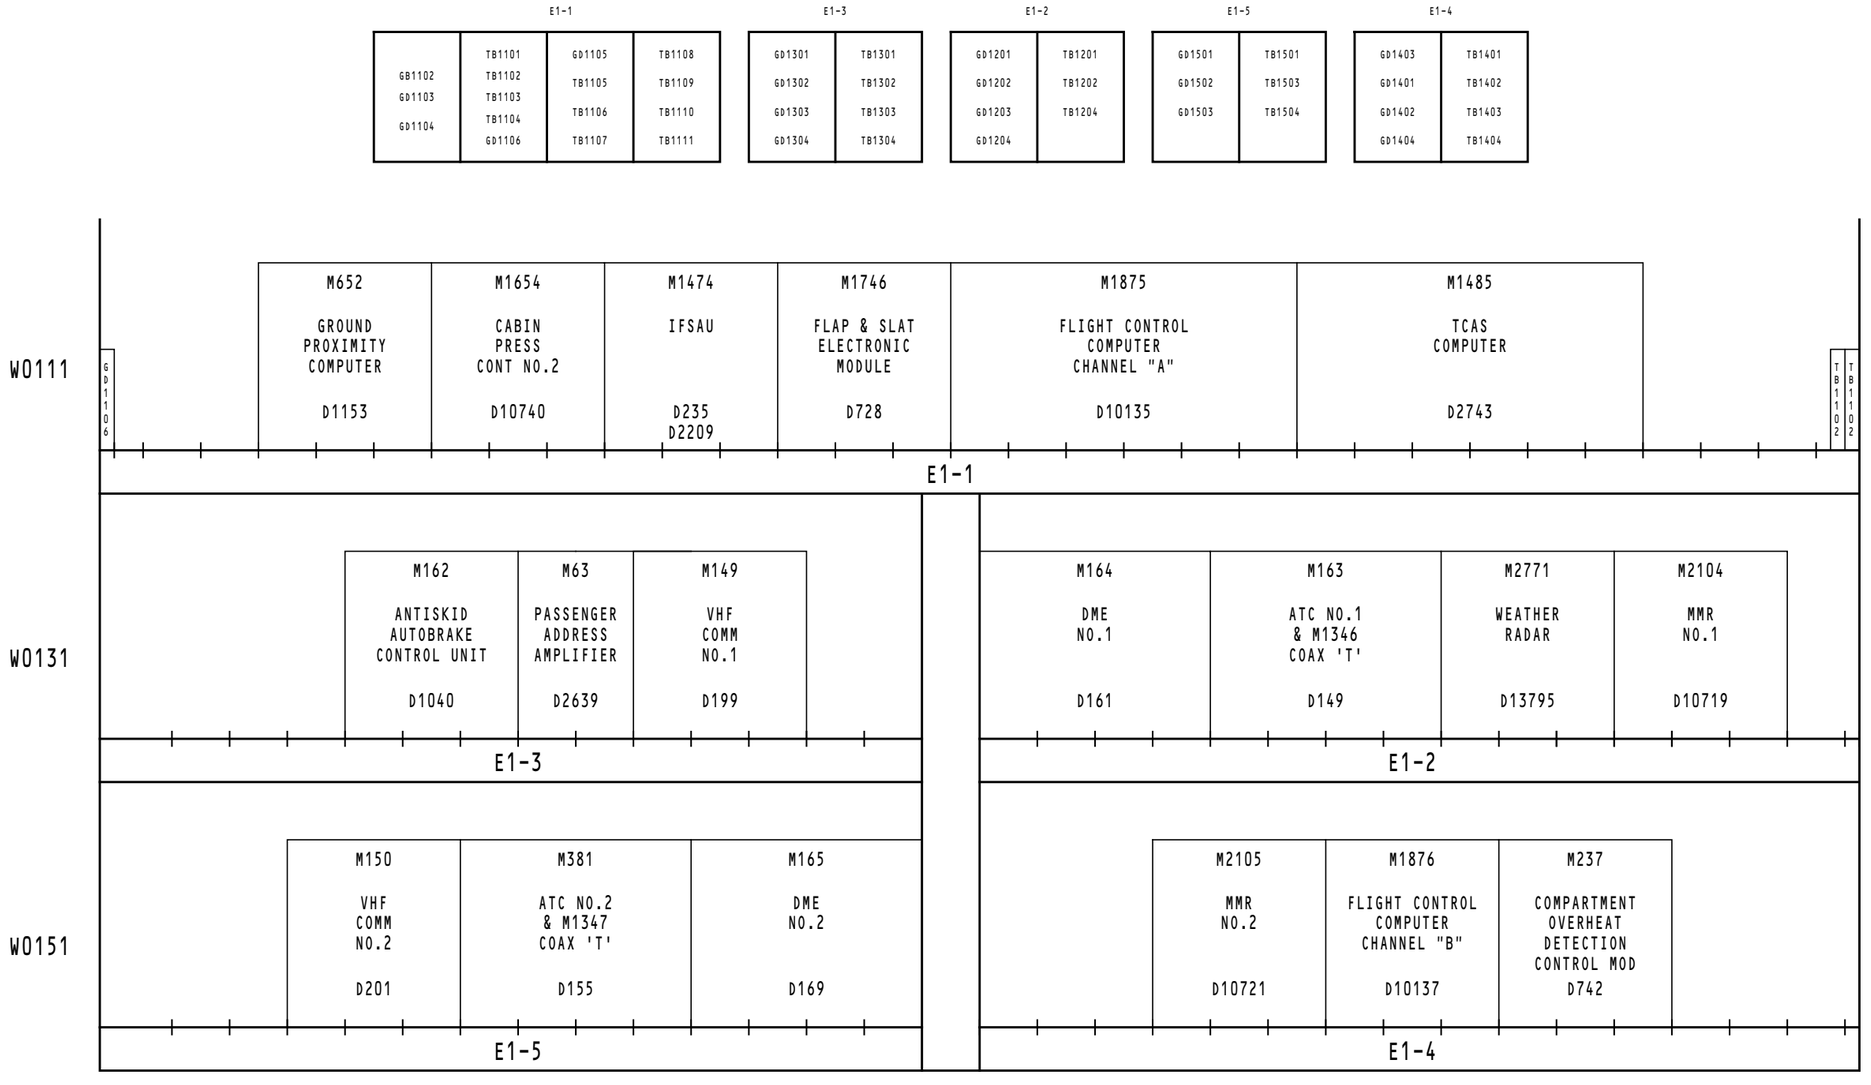

AFT VIEW (LOOKING FORWARD)

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-04

91-03-01

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A

7

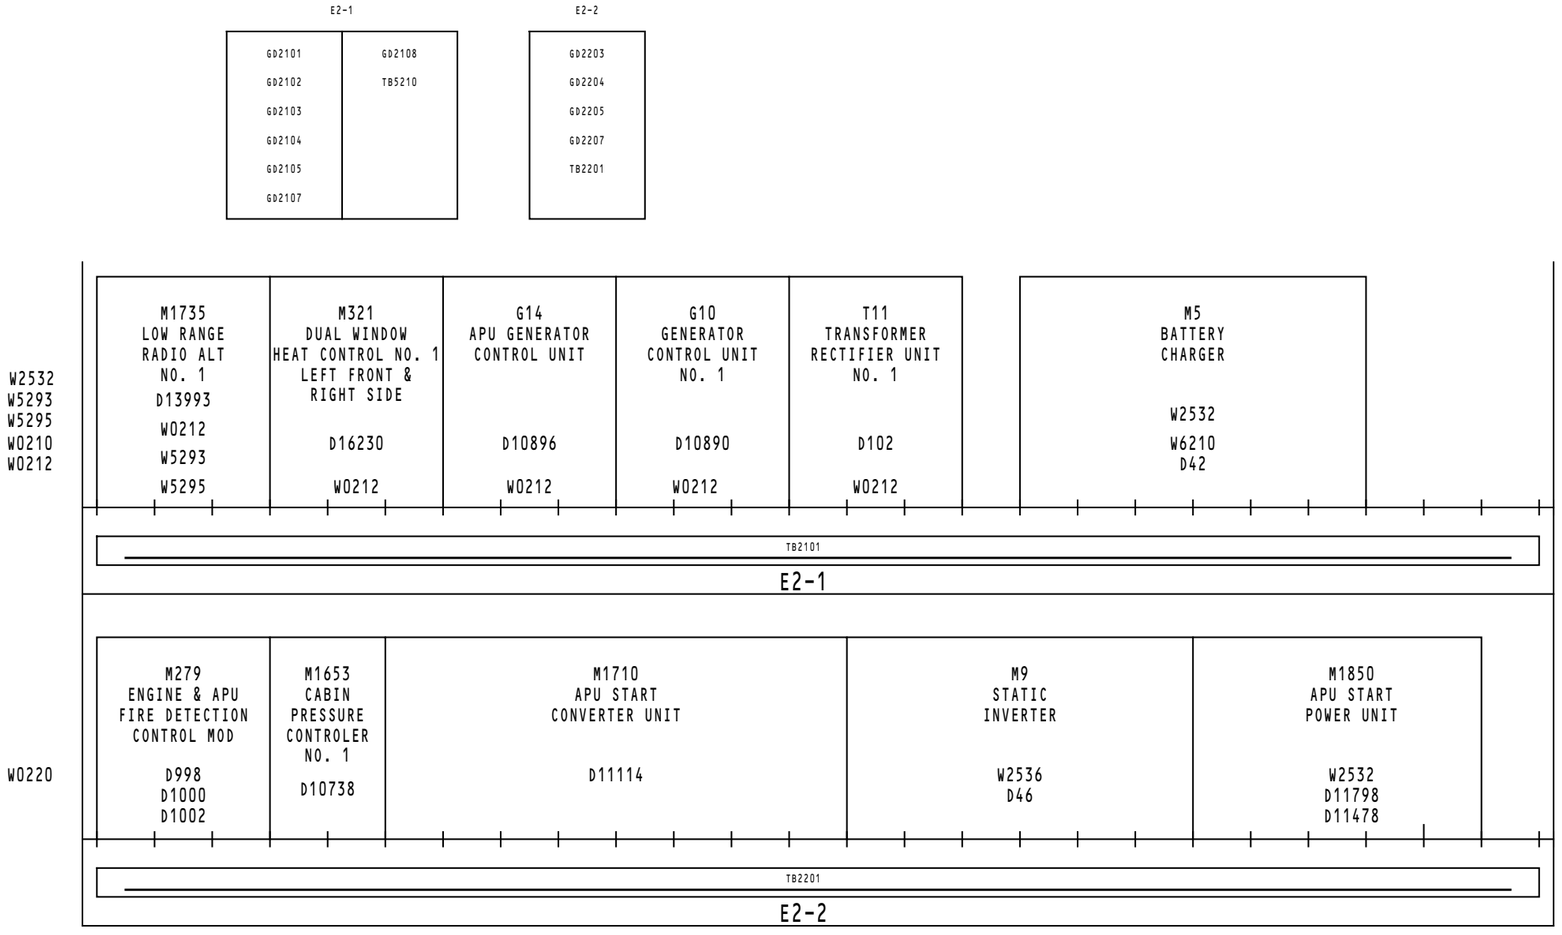

FWD VIEW (LOOKING AFT)

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-05

ALL

E2 RACK

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-03-02


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A

259

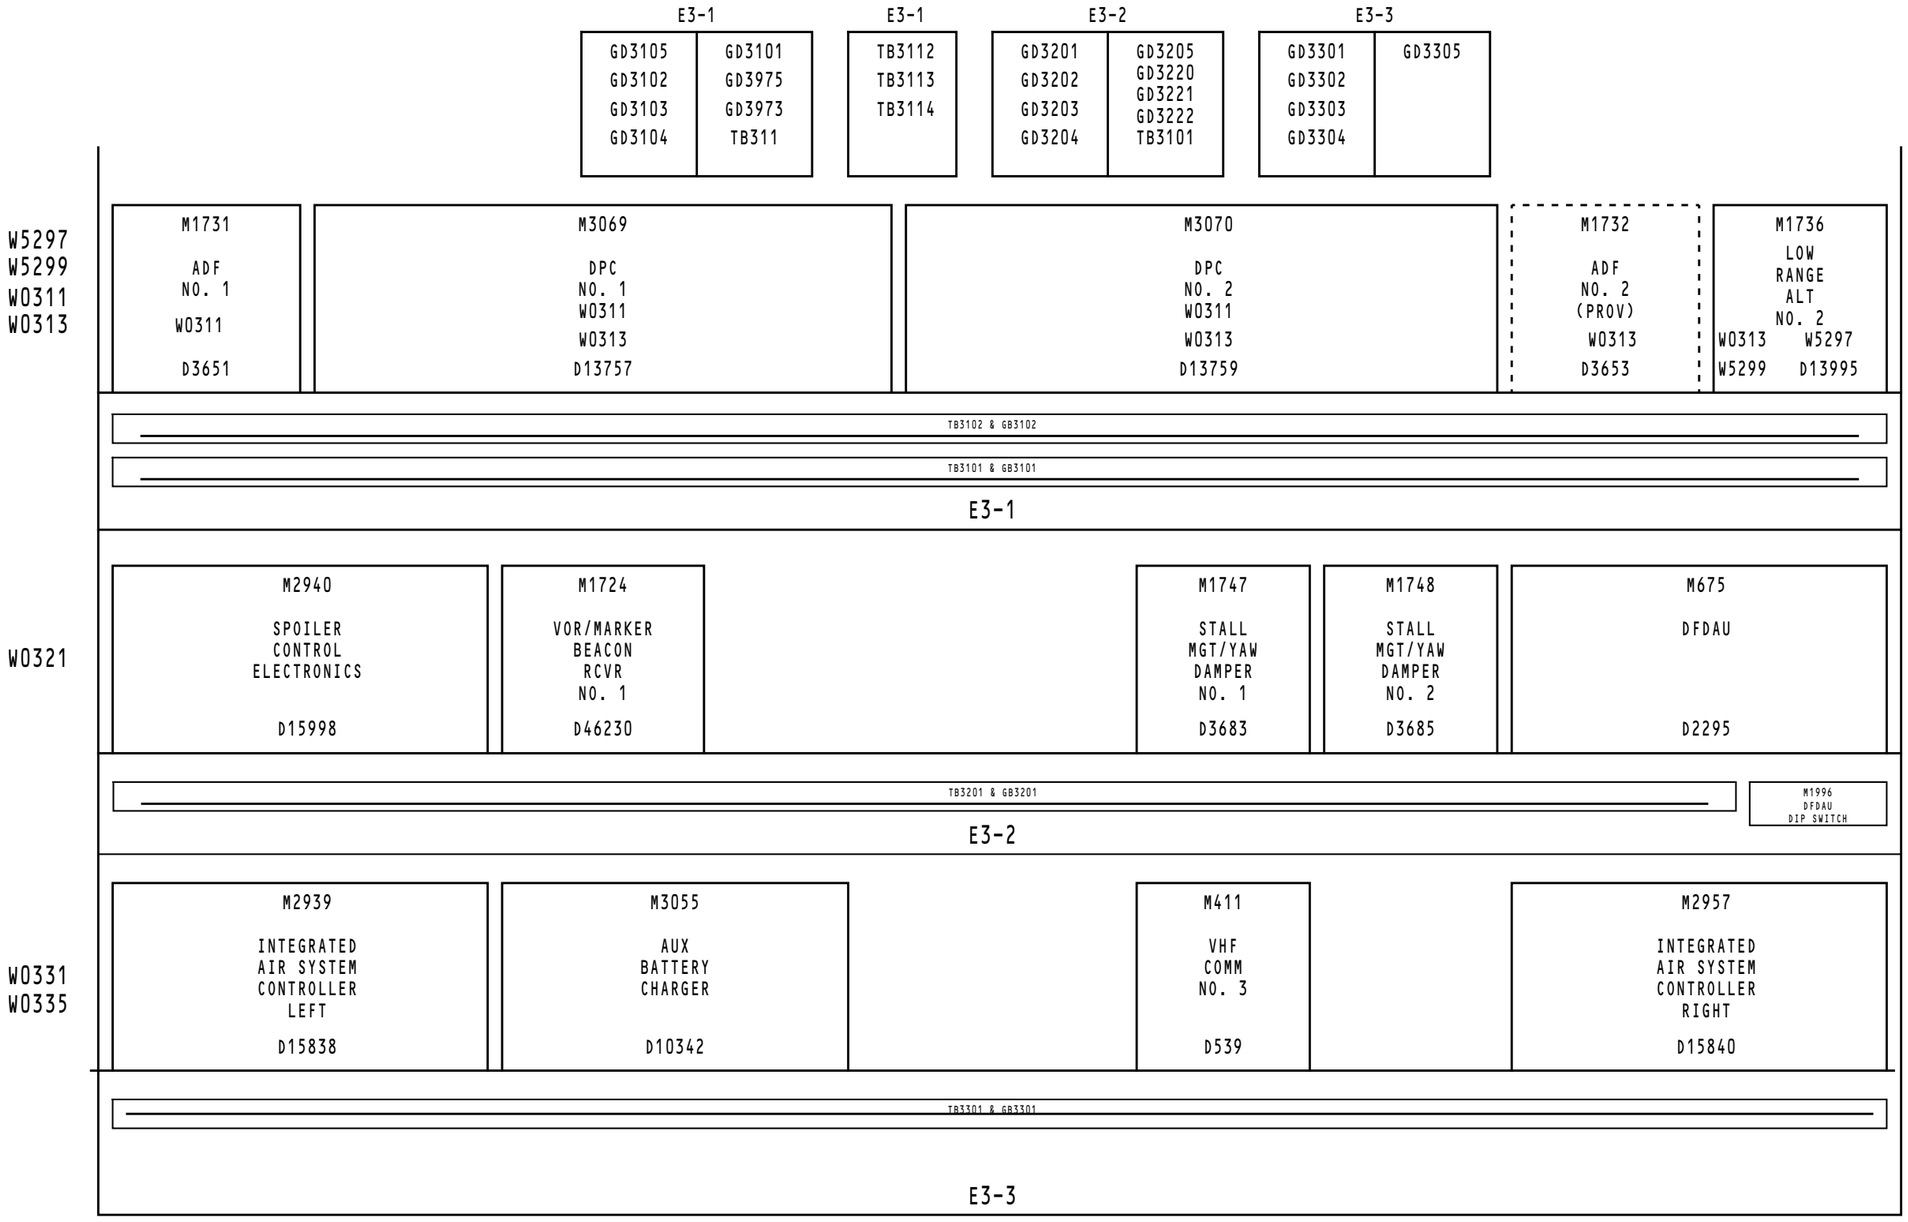

NOTES:

FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-06

AFT VIEW (LOOKING FORWARD)

ALL

E3 RACK

D280AM1215


91-03-03

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

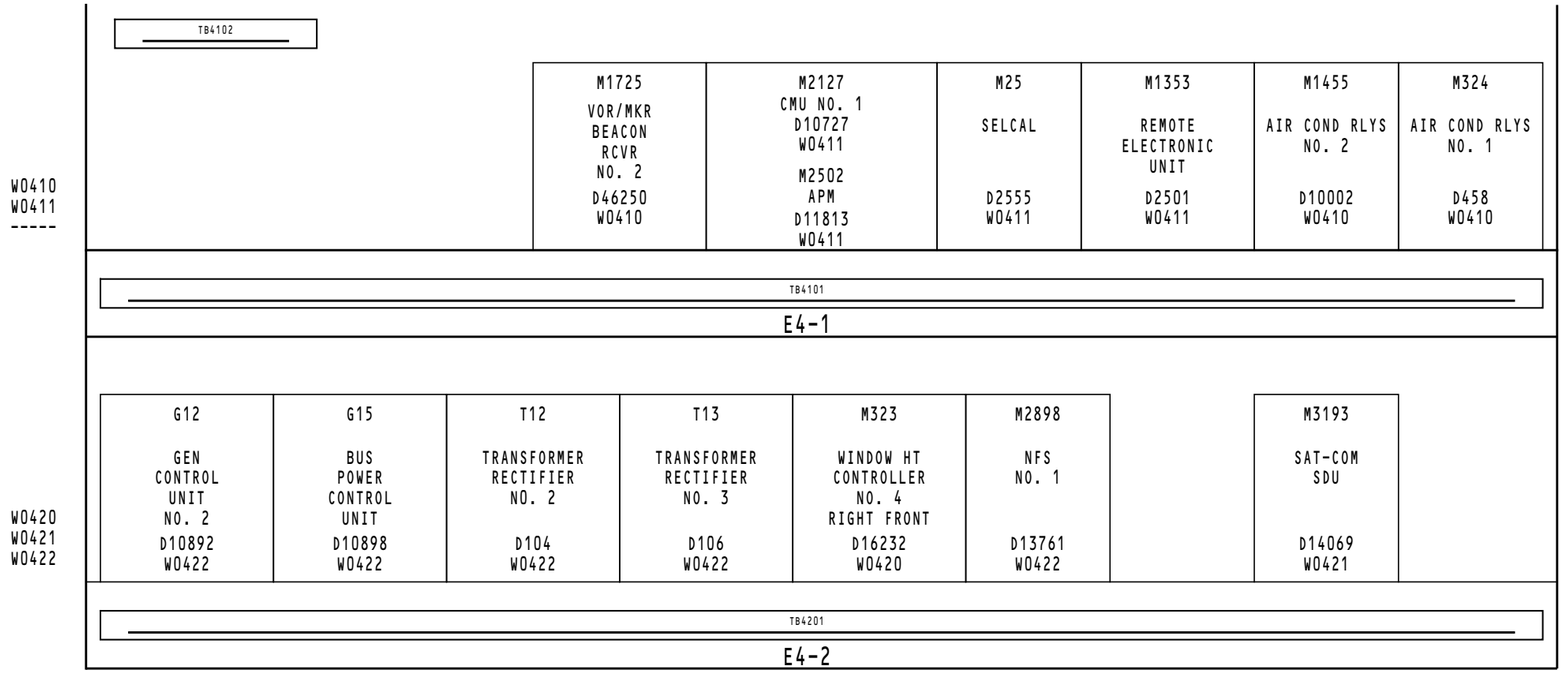

AFT VIEW (LOOKING FORWARD)

E4-1

GD4102	TB4101
GD4103	TB4102
G41043	
GD4105	
GD4117	
GD4119	

E4-2

GD4201	GD1220
GD4202	GD1252
GD4203	GD4208
GD4204	GD4209
GD4207	GD4210
TB4201	GD4214


NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-07

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-03-04

Page 1

May 15/2024

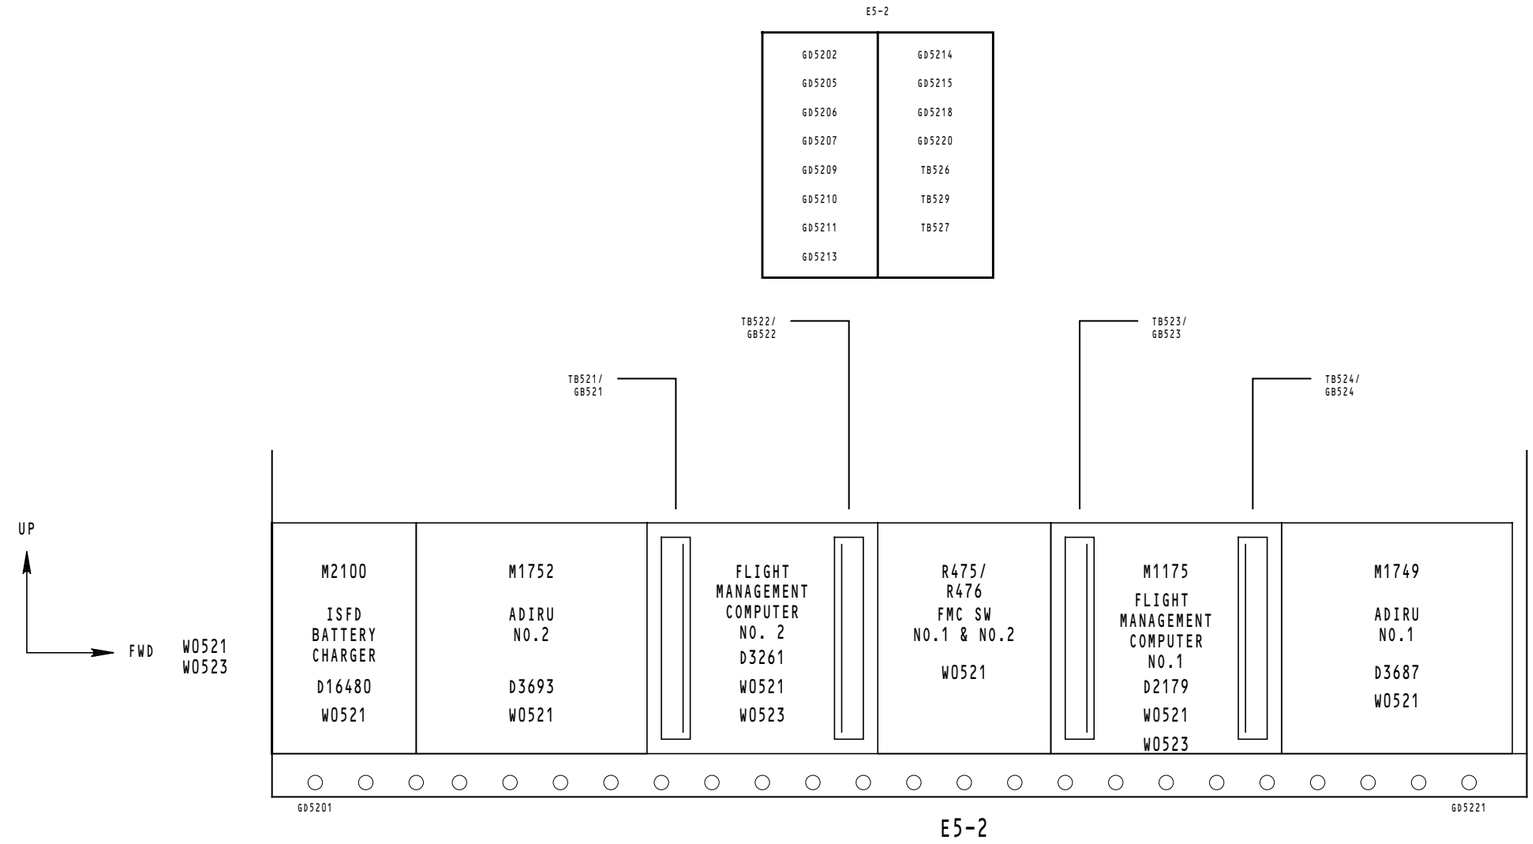

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-08

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-03-05

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
80

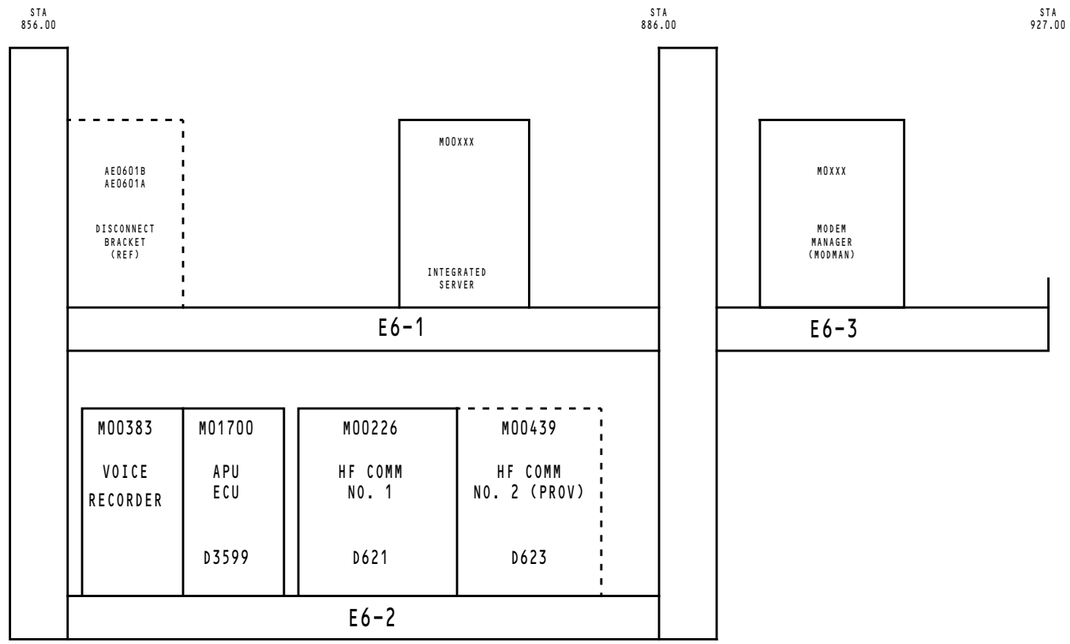

ENHANCED E6 RACK (LOOKING OUTBOARD)

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-10


ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-03-06

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

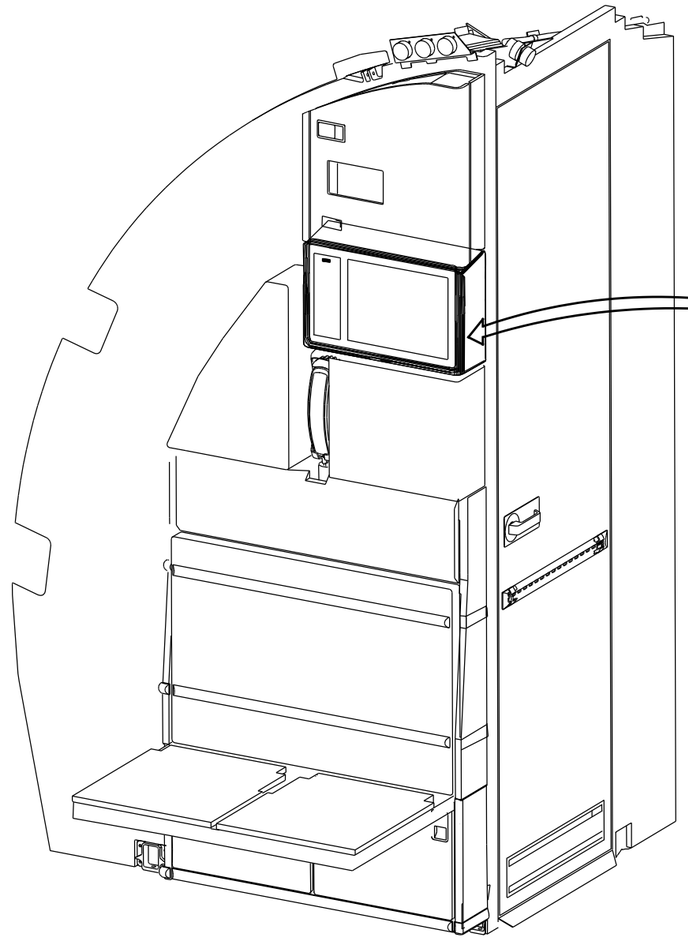

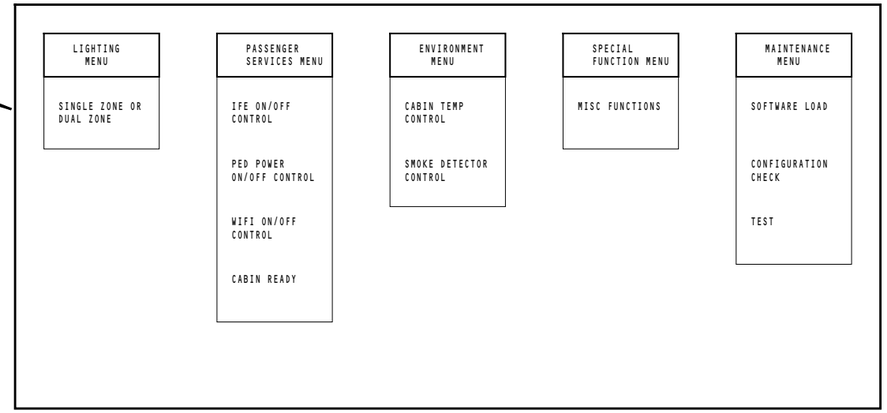

ALL

P13 - FORWARD ATTENDANTS PANEL

D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-03-13

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

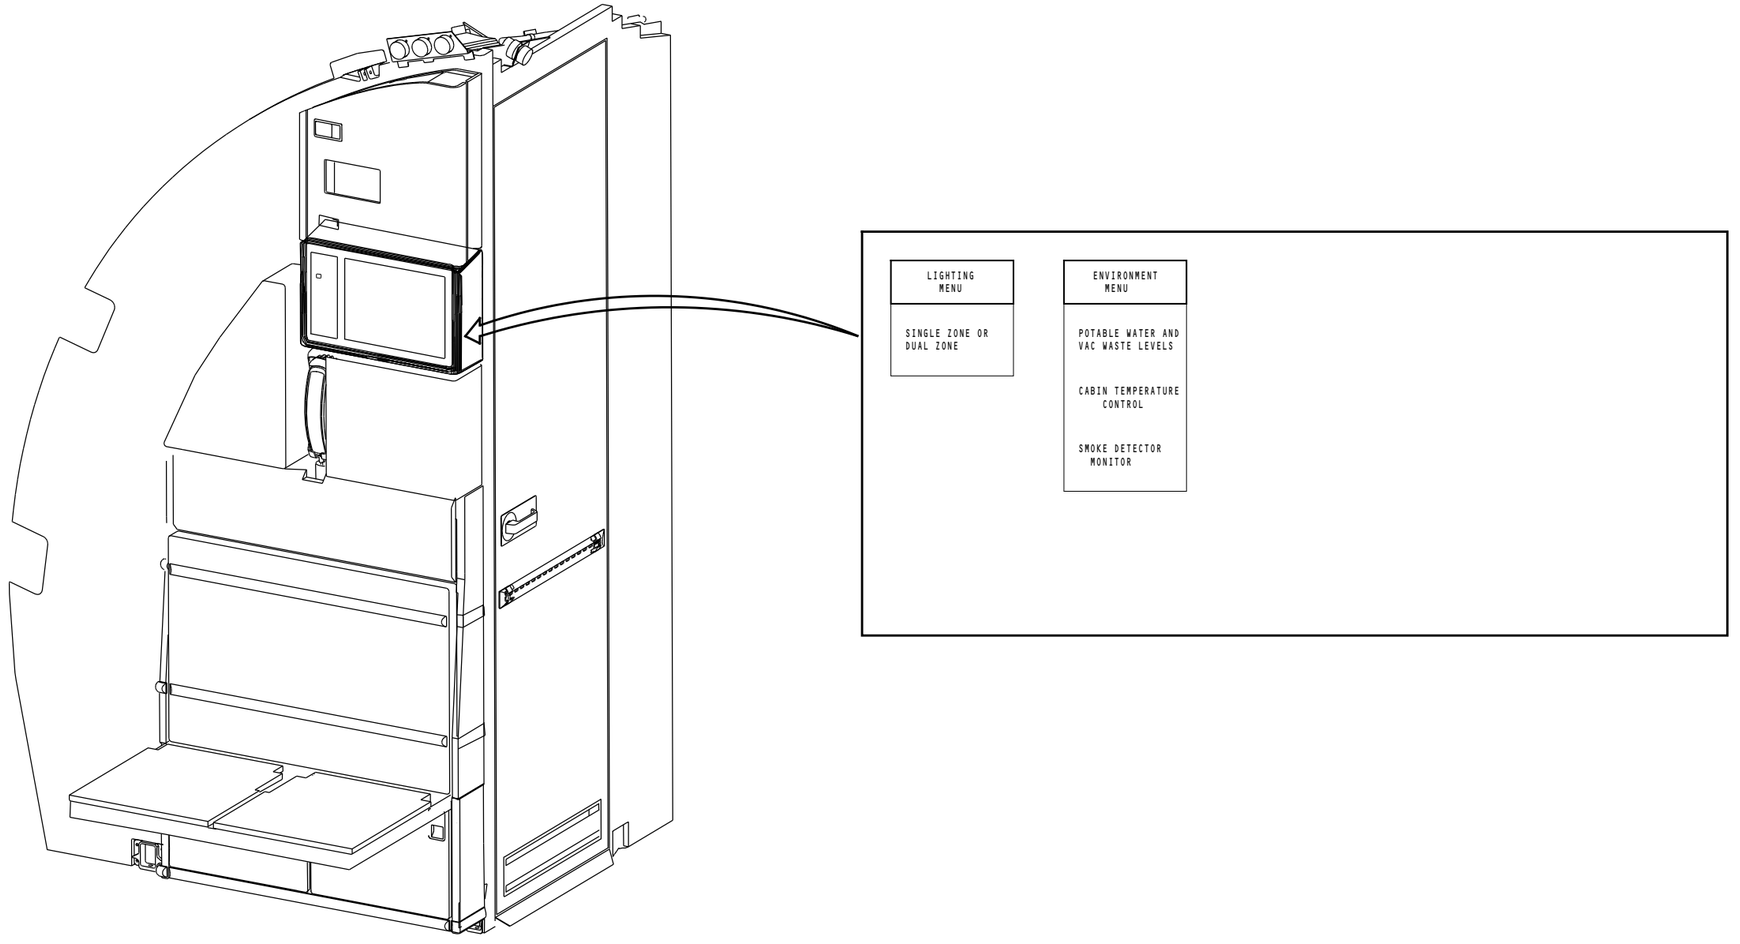

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-03-14

Page 1


May 15/2024


737-8 WIRING DIAGRAM MANUAL

1

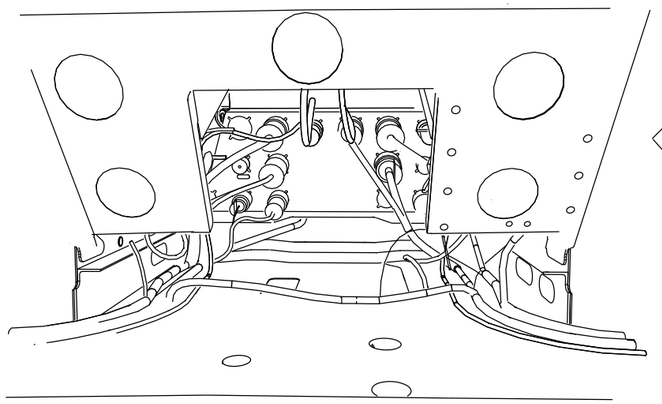


LOOKING FORWARD




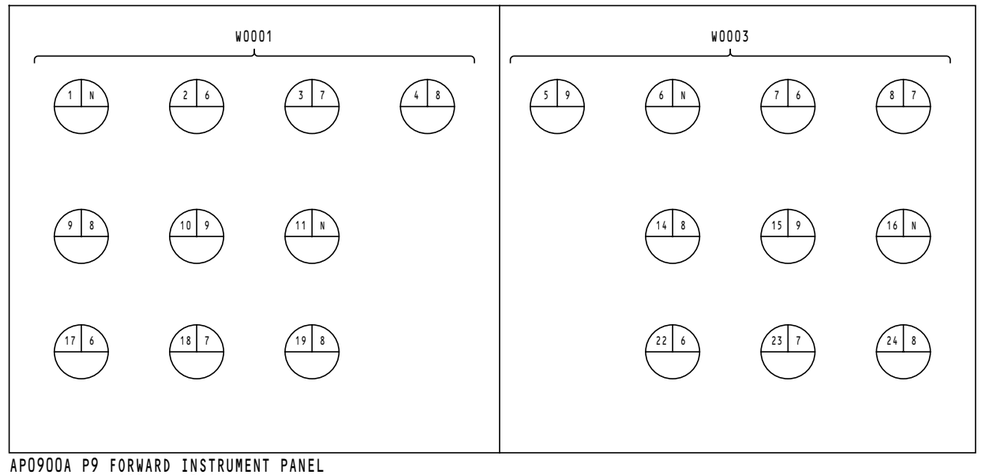


AP0900A P9 FORWARD INSTRUMENT PANEL
STA 190, WL 214

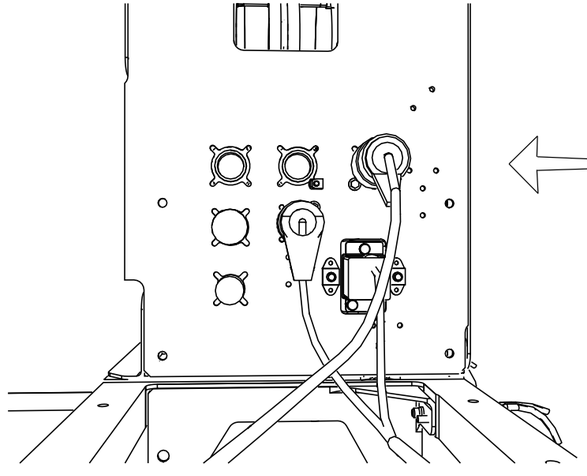

LOOKING FORWARD

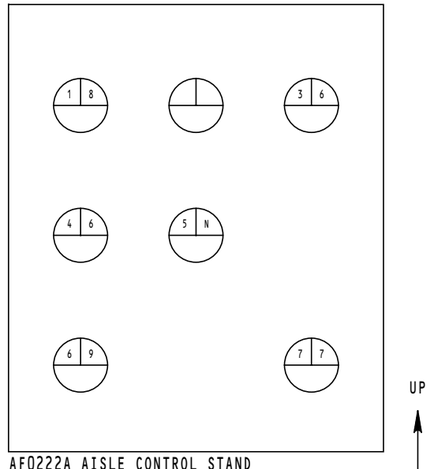

AF0222A AISLE CONTROL STAND
STA 210, WL 210





ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-01


Page 1


May 15/2024

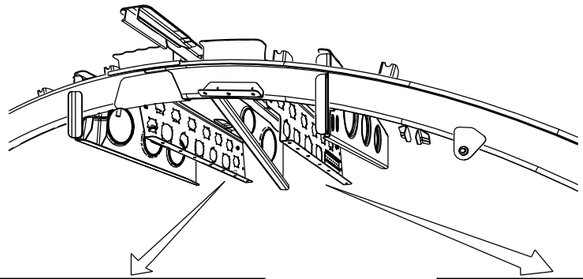


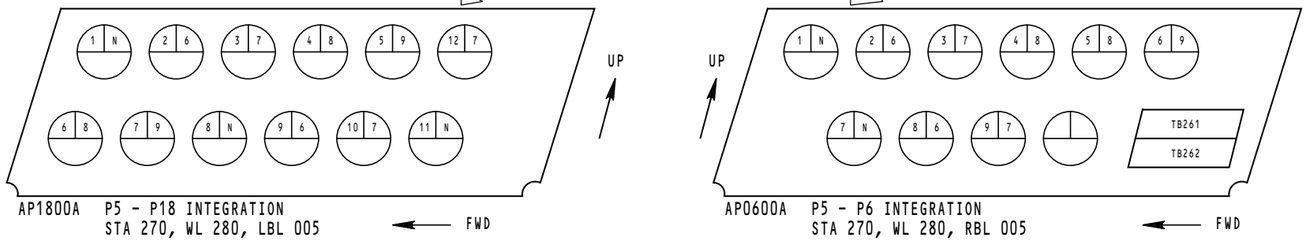


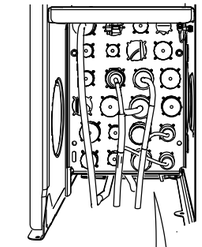

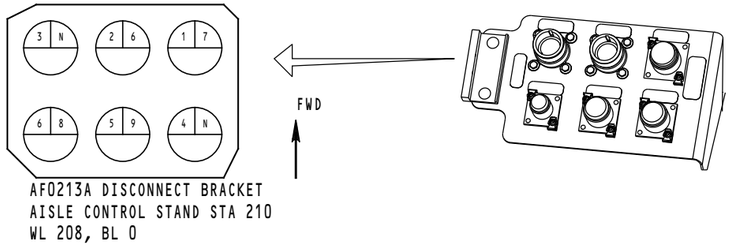

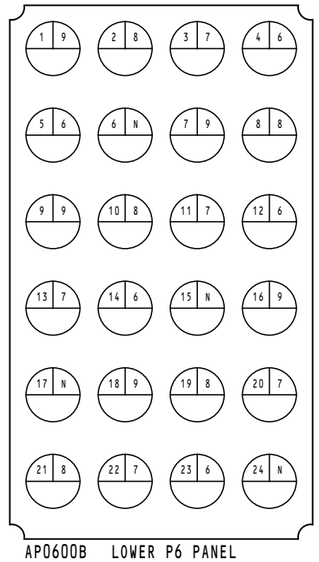

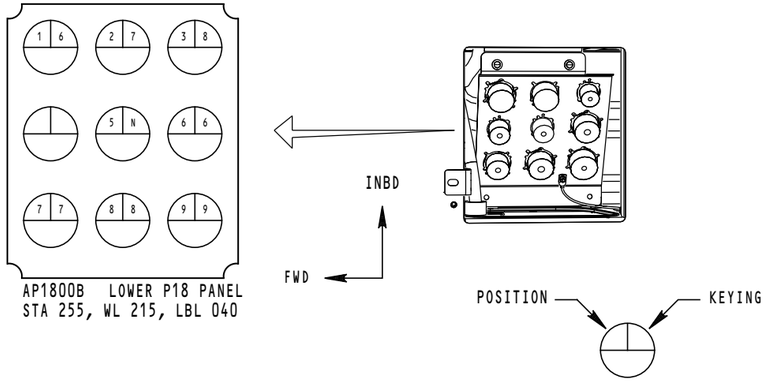

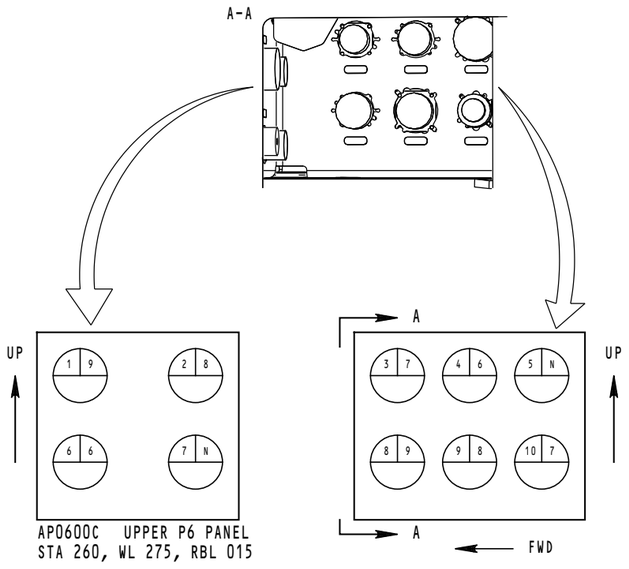


ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


-A

6

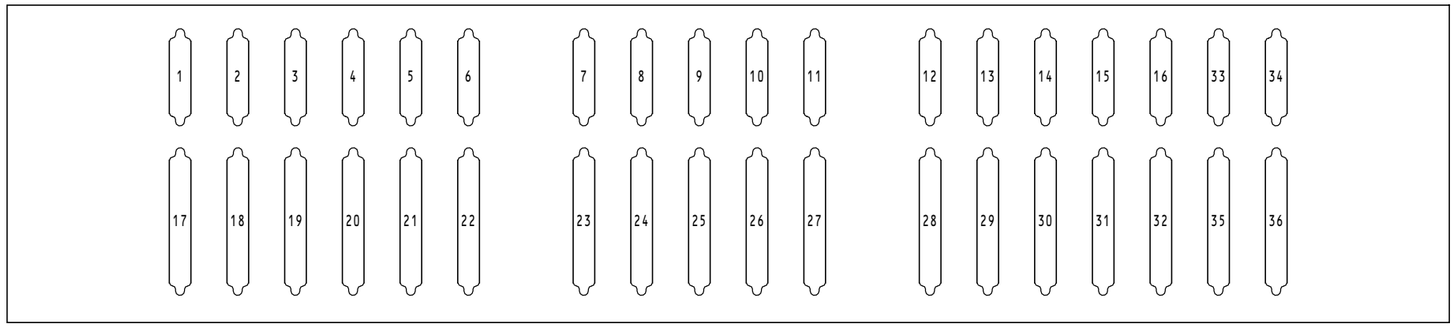

AE0101A

FWD

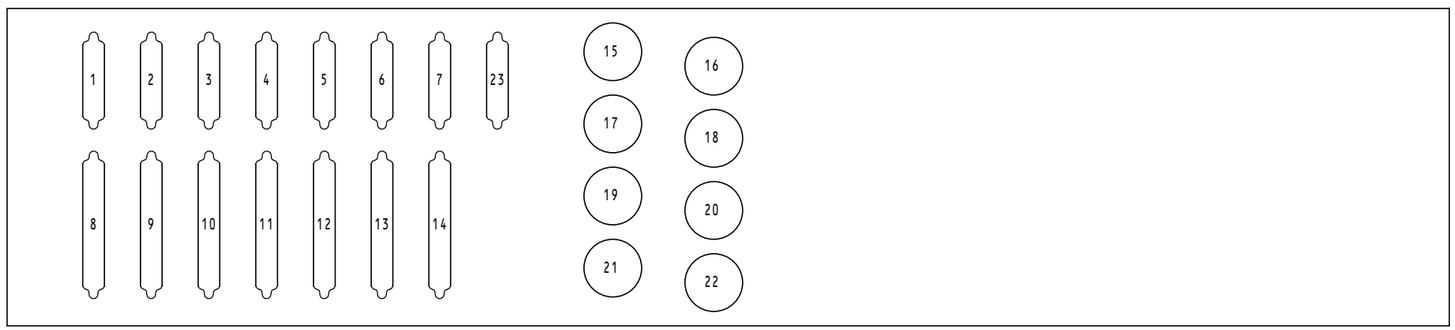

AE0101B

FWD

DISCONNECT KEYING CHART

AE0101A								AE0101B							
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	AA	10		19	DC	28	BD	1	AA	8	BD	15	COAX	23	DC
2	AB	11	CC	20	DD	29	CA	2	AB	9	CA	16	COAX		
3	AC	12	CD	21	AA	30	CB	3	AC	10	CB	17	COAX		
4	AD	13	DA	22	AB	31	CC	4	AD	11	CC	18	COAX		
5	BA	14	DB	23	AC	32	CD	5	BA	12	CD	19	COAX		
6	BB	15	DC	24	AD	33	AA	6	BB	13	DA	20	COAX		
7	BC	16	DD	25	BA	34	AA	7	BC	14	DB	21	COAX		
8	BD	17	DA	26	BB	35	CD					22	COAX		
9	CA	18	DB	27	BC	36									

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-04

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL


-A
6

A

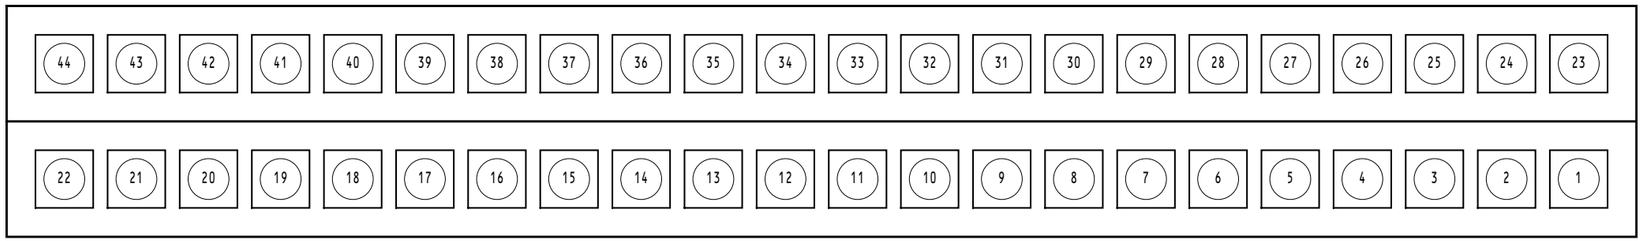


AE0100A

B

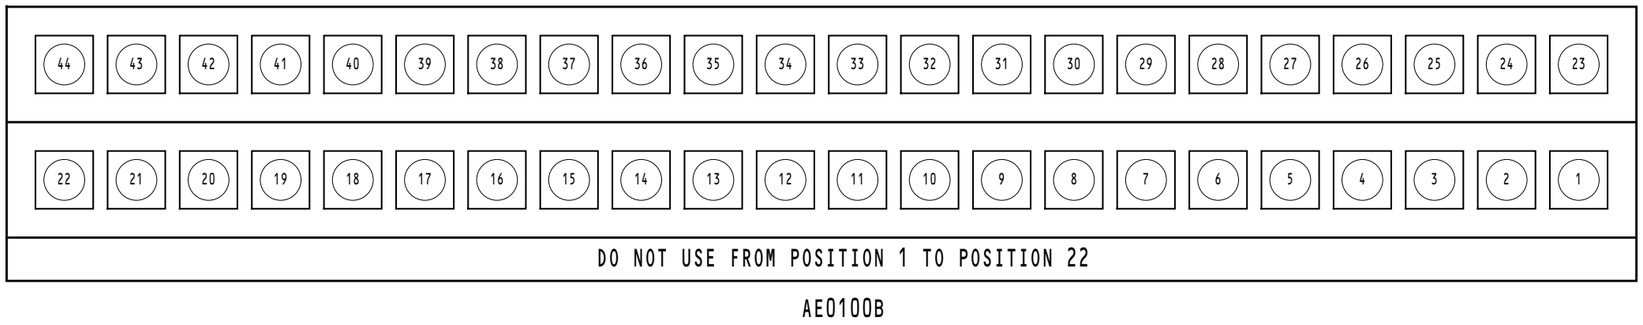

AE0100B

C

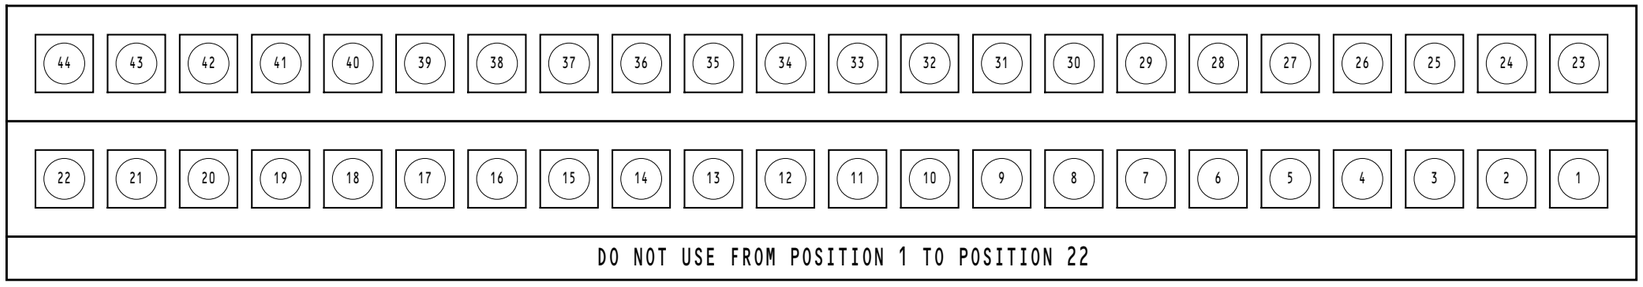


AE0100C

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-04-04

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

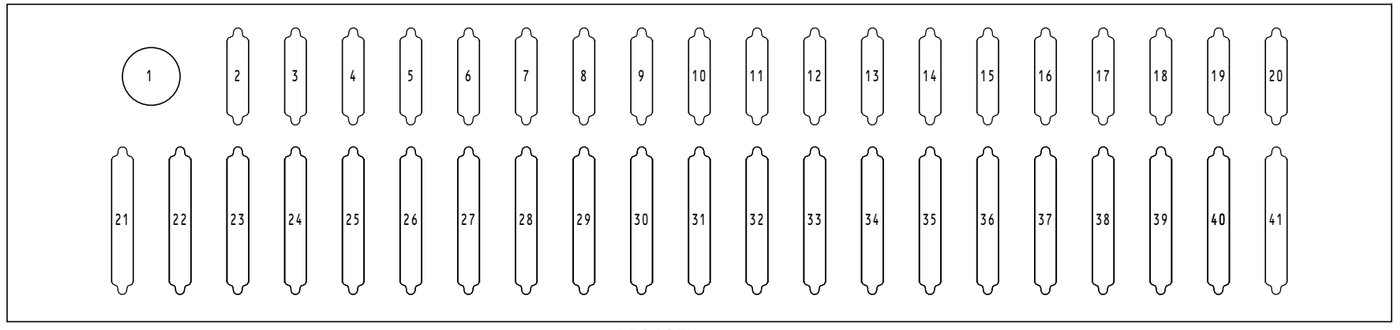

AE0103A


DISCONNECT KEYING CHART									
AE0103A									
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	COAX	10	AB	19		28	CD	37	
2	AB	11	BB	20		29	AC	38	CB
3		12		21	BB	30		39	
4	AA	13	AD	22	BC	31		40	
5	AC	14		23	AB	32		41	
6		15		24	BB	33			
7		16	CA	25	CC	34			
8		17	BC	26	AD	35			
9	BA	18	BD	27	AA	36	BA		

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-04-04

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

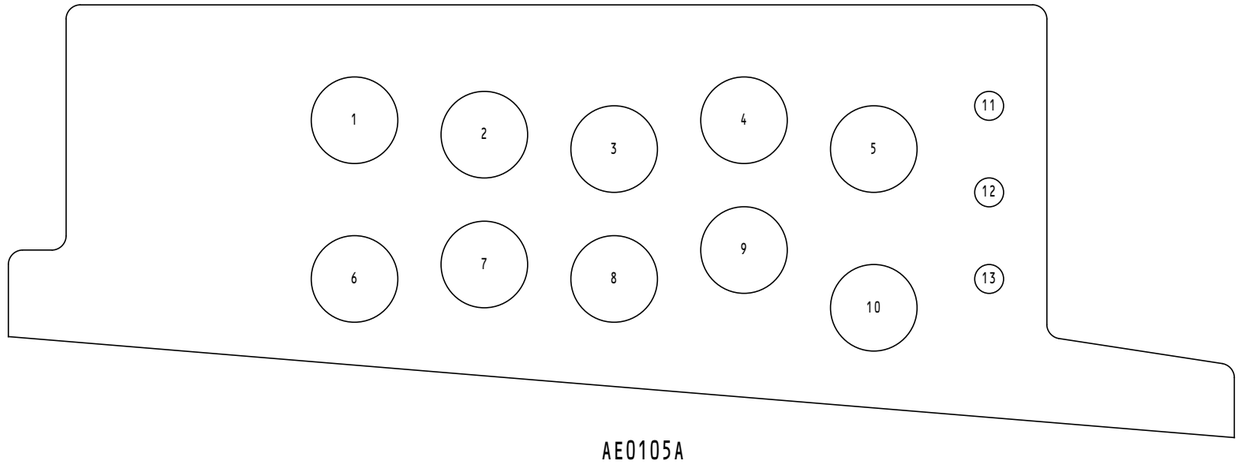

AE0105A

DISCONNECT KEYING CHART							
AE0105A							
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	N	5		9	6	13	COAX
2	6	6	8	10			
3	7	7	9	11	COAX		
4	8	8	N	12	COAX		


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-04-04

Page 1
Sheet 4
May 15/2024


737-8 WIRING DIAGRAM MANUAL

2

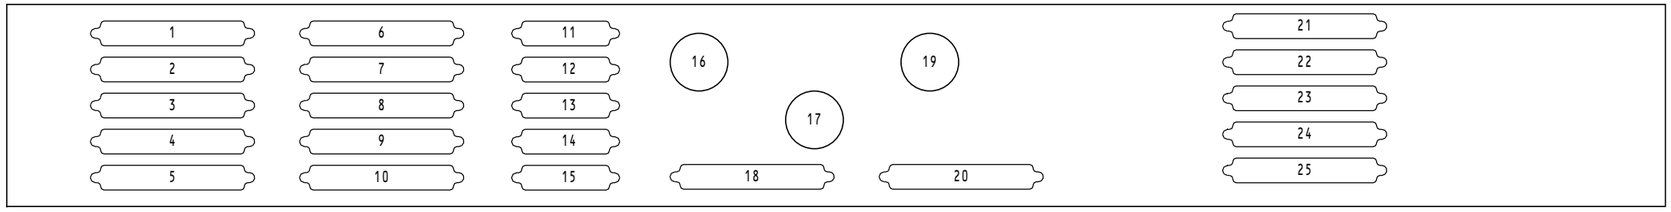

AE0201A

PORT →

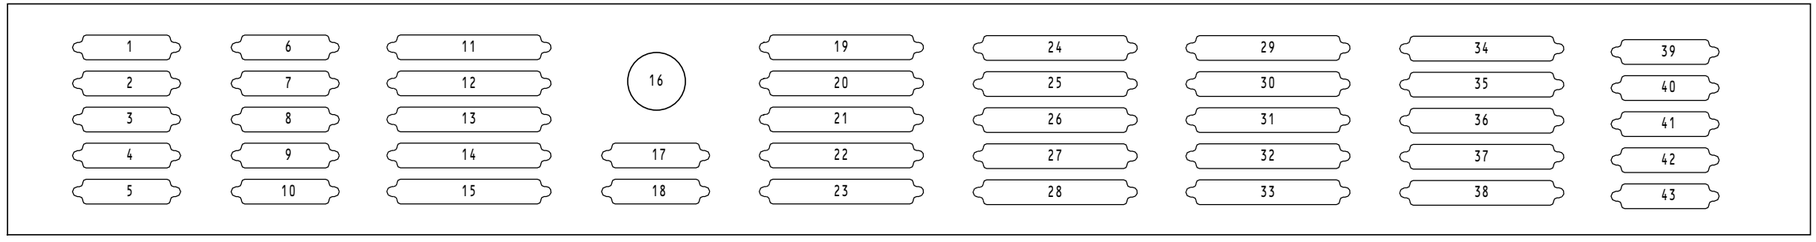

AE0202A

← PORT

DISCONNECT KEYING CHART

AE0201A										AE0202A									
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING			POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	AA	7	BC	13	CA	19	7	25	AB	1	AA	10		19	DA	28	CD	37	
2	AB	8	BD	14	CB	20	BA			2	AB	11	CC	20	DB	29	CA	38	
3	AC	9	AD	15		21	BB			3		12	CD	21	DD	30	BD	40	
4	AD	10		16	6	22				4	AD	13	AA	22	CB	31	AA		
5	BA	11	AB	17		23	BD			5	BA	14	DA	23	AB	32	CB		
6	BB	12	CD	18	AC	24	AA			6	DC	15	DB	24	AC	33	AD		
										7	BB	16	9	25	DC	34	DA		
										8		17	AC	26	BA	35	CD		
										9	CC	18	AD	27	BB	36			

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-05

Page 1


May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
3

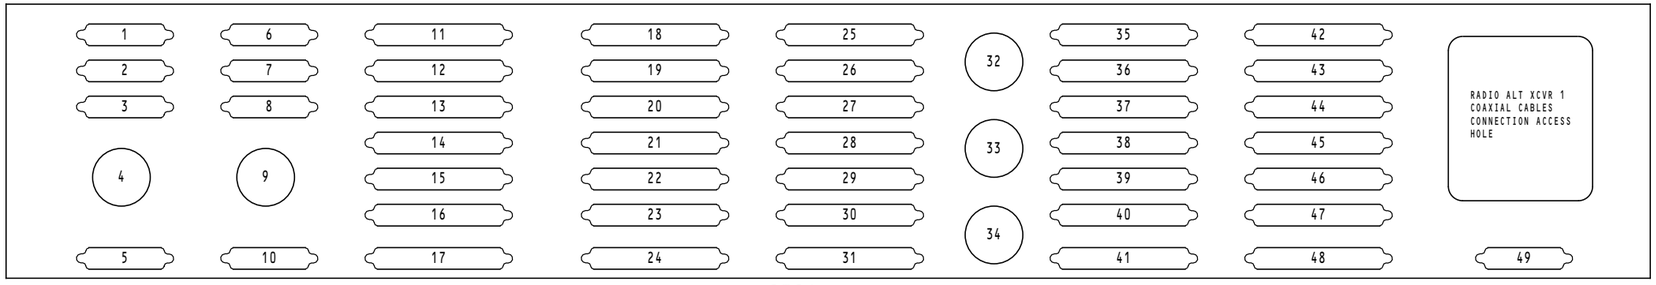

AE0301A

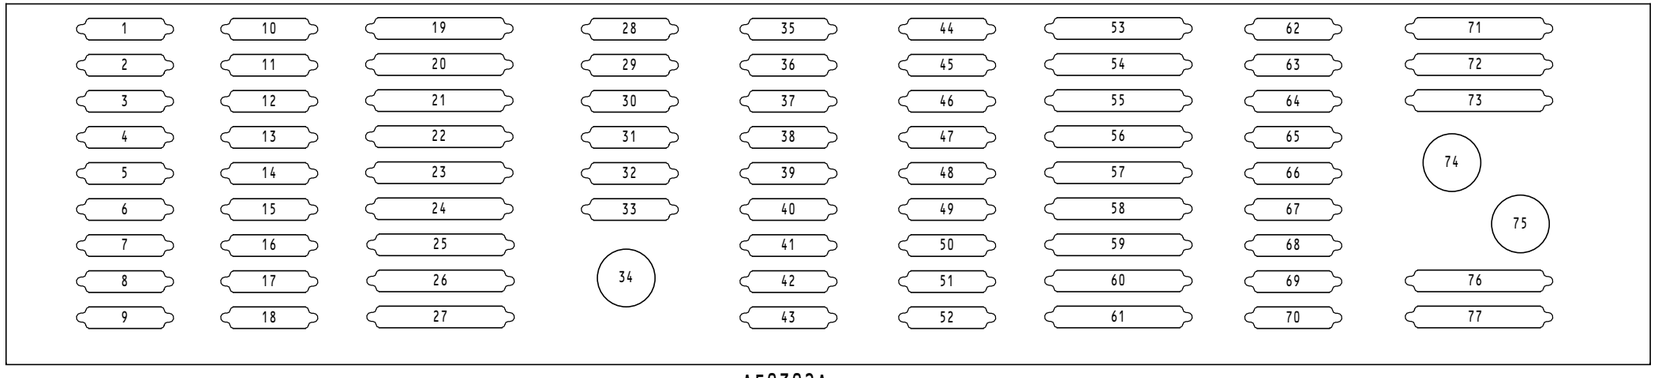

AE0302A

DISCONNECT KEYING CHART							
AE0301A							
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	AA	16	AA	31	BB	46	AB
2	AA	17	CD	32	N	47	DB
3	AA	18	DA	33	A	48	AA
4	-	19	DB	34	-	49	DD
5	AB	20	AA	35	CB		
6	AD	21	BA	36	CC		
7	AC	22	BC	37	CD		
8	AA	23	CD	38	DA		
9	BC	24	CB	39	DB		
10	DD	25	CD	40	BC		
11	BB	26	CC	41	DC		
12	BC	27	AD	42	AA		
13	BD	28	AC	43	AB		
14	CA	29	AA	44	AC		
15	DA	30	BA	45	AD		


DISCONNECT KEYING CHART											
AE0302A											
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	AA	16	DC	31	DD	46	BC	61	CC	75	11
2	AB	17	DD	32	AA	47	CD	62	CA	76	AB
3	AC	18	BB	33	AB	48	DA	63	CB	77	DA
4	AD	19	BC	34	7	49	DB	64	CC		
5	BA	20	BD	35	CD	50	DC	65	CD		
6	BB	21	CC	36	AB	51	DD	66	DA		
7	BC	22	AD	37	AC	52	AD	67	DB		
8	BD	23	BA	38	AD	53	AA	68	DC		
9	BA	24	BB	39	BA	54	AB	69	DD		
10	CA	25	AA	40	BB	55	AC	70	CB		
11	CB	26	AB	41	BC	56	AD	71	AA		
12	CC	27	DA	42	DD	57	BA	72	AB		
13	CD	28	DA	43	CA	58	BB	73	AC		
14	DA	29	DB	44	CA	59	BC	74	N		
15	DB	30	DC	45	CB	60	BD				

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-04-06

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

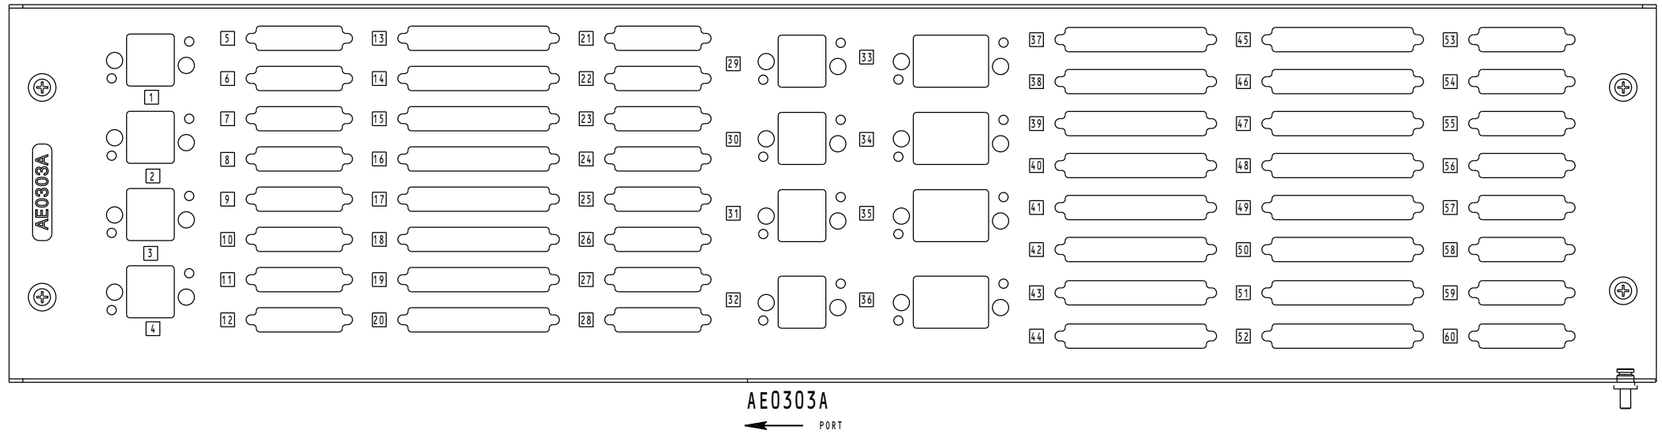


DISCONNECT KEYING CHART									
AE0303A									
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	COAX	14		27	BD	40		53	AB
2	N	15	CD	28	AA	41	AA	54	DC
3		16		29		42	AB	55	DD
4		17	DB	30		43	DB	56	BB
5	AB	18	DC	31		44	CA	57	
6	AA	19		32		45	CB	58	DB
7	AD	20	CB	33	1	46	AA	59	
8	BA	21	DA	34	2	47	AB	60	
9	AB	22	DB	35	3	48			
10	BC	23	DC	36		49			
11	BD	24	BA	37	DA	50			
12	AA	25	BB	38	DB	51			
13	CA	26	BC	39	DC	52	AC		

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-06

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

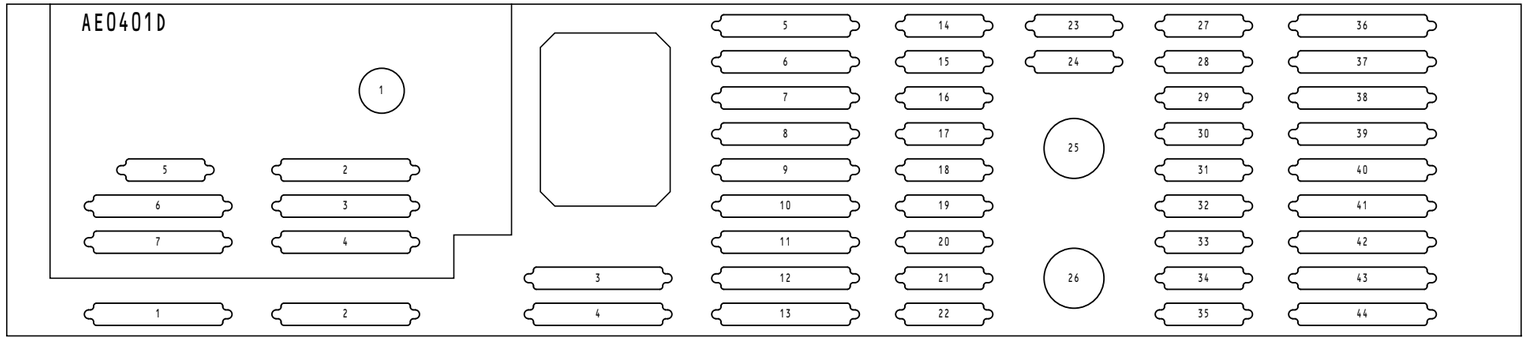

AE0401A
AFT VIEW (LOOKING FORWARD)

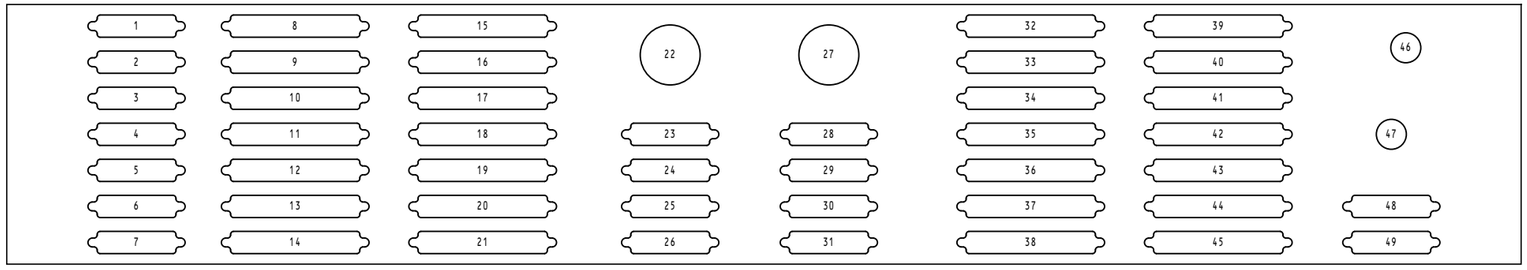

AE0402A
AFT VIEW (LOOKING FORWARD)

DISCONNECT KEYING CHART

AE0401A								AE0401D				AE0402A							
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	DA	14	CB	27	CB	40	CD	1	N			1	AA	14	AB	27	7	40	
2	AB	15	CA	28	CC	41	DA	2	DA			2	AB	15	AC	28	AA	41	BC
3	BD	16	BD	29	CD	42	DB	3	CD			3	AC	16	BB	29		42	DC
4	DA	17	DB	30	DA	43	DC	4	AD			4		17	BC	30		43	CA
5	DD	18	CC	31	DB	44	DD	5	AC			5	BA	18	CC	31	AD	44	CA
6	AA	19	AB	32	DC			6	BA			6	BA	19	DA	32	AA	45	CB
7	AB	20	AA	33	AA			7	DD			7	AD	20	DC	33	AB	46	COAX
8	AC	21	BC	34	DD							8	CB	21	DD	34	AC	47	COAX
9	AD	22	AD	35	DC							9	CB	22	8	35	AD	48	AA
10	BA	23	AC	36	BD							10	CA	23	BA	36	DB	49	AB
11	BB	24	BA	37	CA							11	CA	24	BB	37	AA		
12	BC	25	N	38	CB							12	CB	25	BC	38			
13	CA	26	6	39	CC							13	AA	26	BD	39	BB		

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-07

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
6

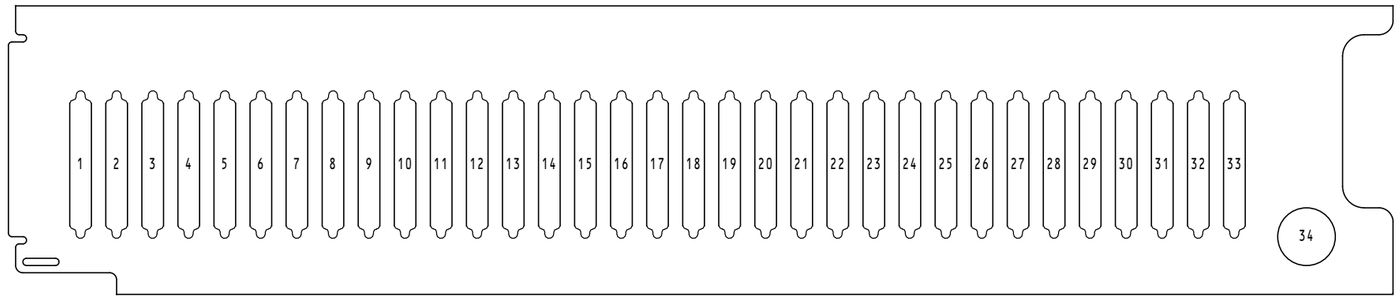

AE0502A


DISCONNECT KEYING CHART							
AE0502A							
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	AA	13	DD	25	CC		
2	CD	14	CC	26	CA		
3	DA	15	AB	27	AB		
4	DB	16	AA	28	AC		
5	DC	17	CC	29	AD		
6	DD	18	AB	30	BA		
7	AA	19	BB	31	BB		
8	AB	20	DC	32	BC		
9	AC	21	BC	33	BD		
10	AD	22	CA	34	-		
11	BA	23	BD				
12	CB	24	CB				

ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-04-08

Page 1

May 15/2024

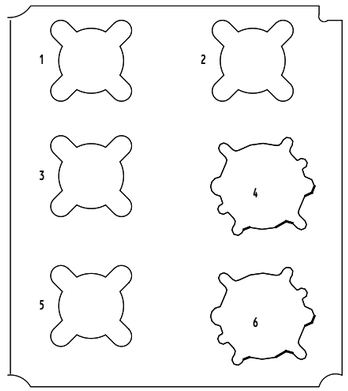

AE0601A

DISCONNECT KEYING CHART					
AE0601A					
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	N	6			
2	6				
3	7				
4	A				
5	8				


ALL

E6 SHELF BRACKETS

D280AM1215

91-04-10

Page 1
Sheet 1
May 15/2024

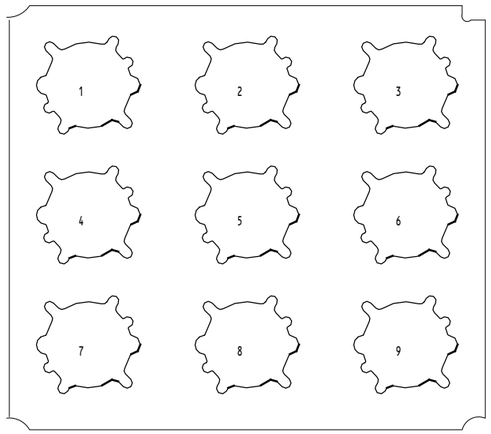

AE0601B


DISCONNECT KEYING CHART					
AE0601B					
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	A	6	N		
2	C	7			
3	C	8			
4	D	9			
5	B				

91-04-10

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

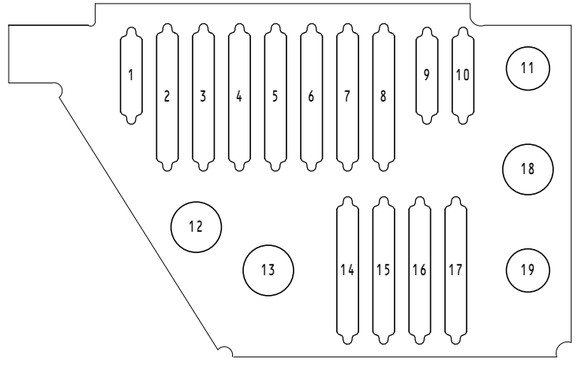

AE0602A

DISCONNECT KEYING CHART

AE0602A

POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	AA	6	BA	11	6	16	DC
2	AA	7	AD	12	9	17	DD
3	BD	8	BC	13	7	18	-
4	BB	9	AC	14	DA	19	9
5	AB	10	CA	15	DB		

ALL


E6 SHELF BRACKETS

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-10

Page 1
Sheet 2
May 15/2024

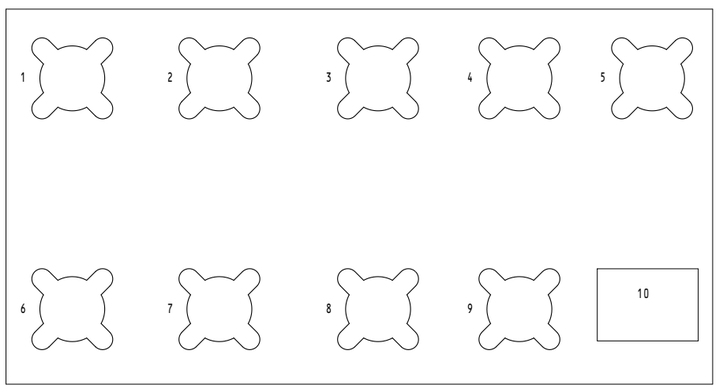

AE0603A

DISCONNECT KEYING CHART					
AE0603A					
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	N	6	A		
2	A	7	N		
3		8	N		
4		9			
5	C	10			

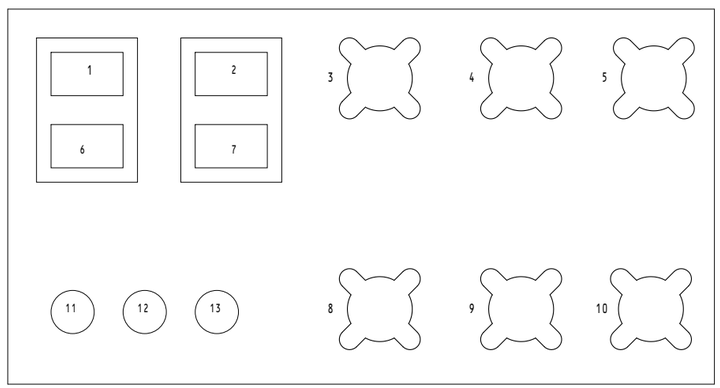

AE0603B

DISCONNECT KEYING CHART					
AE0603B					
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	01	6		11	
2		7		12	
3		8		13	
4		9			
5		10			

ECCN 9E991 BOEING PROPRIETARY - See title page for details


737-8 WIRING DIAGRAM MANUAL

91-04-10


Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL


95

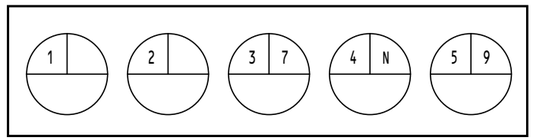


AB0288
STA 288 WL 289 BLO

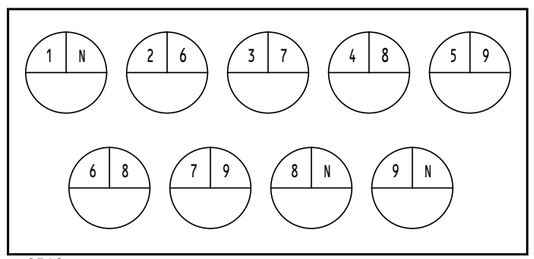


AB0340A
LOOKING AT THE PLUGS SIDE
STA 340 WL 295 LBL 6

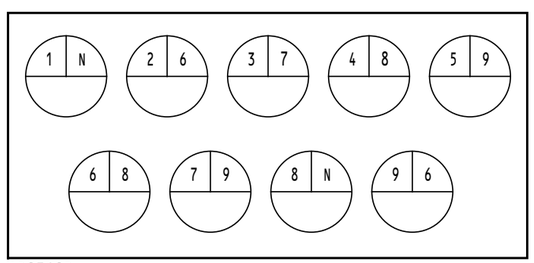


AB0340B
LOOKING AT THE PLUGS SIDE
STA 340 WL 295 RBL 6




LOOKING FORWARD




AB0366
LOOKING FORWARD

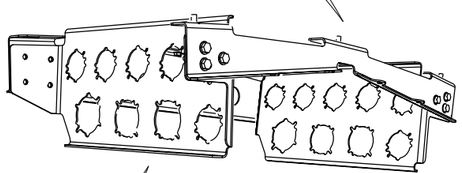


AB0340B/AB0340A
LOOKING AFT

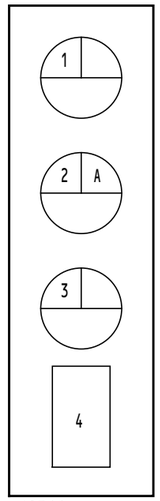


AB0366
STA 360 WL 290 LBL 32

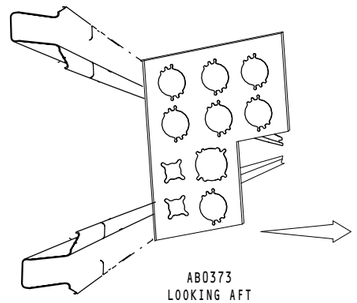


AB0373
LOOKING AFT

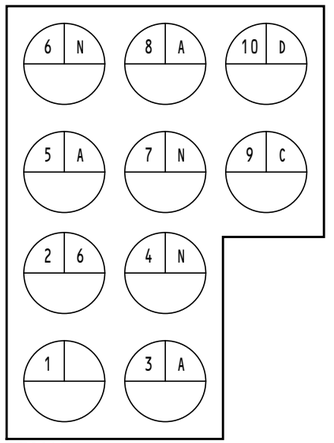

AB0373
STA 373 WL 296 LBL 13

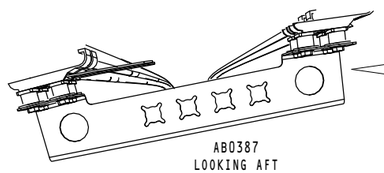


AB0387
LOOKING AFT

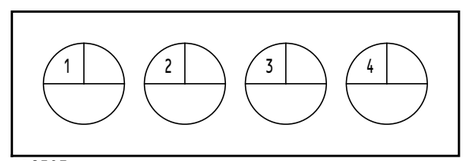


AB0387
STA 387 WL 298 RBL 13

KEYING CHART									
POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING	POSITION	KEYING
1	BC	5	CD	9	CA	13	AA	17	BD
2	AB	6	BB	10	AB	14	DB	18	AA
3	AC	7	BC	11	AD	15	CB	19	BB
4	AD	8	BA	12	CD	16	CA	20	CC




AB0410
STA 410 WL 205 RBL 39

UP
FWD

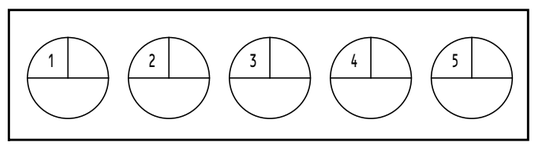

AB0370R
STA 370 WL 280 RBL 45




LOOKING FORWARD



AB0405B

LOOKING AFT

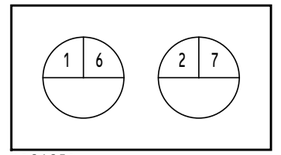


AB0405B
STA 411 WL 288 RBL 41




AB0420A

LOOKING AFT

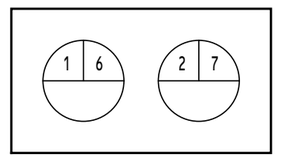

AB0420A
STA 424 293 LBL 32



NOTES: BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION. FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-12

Page 1


May 15/2024

737-8 WIRING DIAGRAM MANUAL

4

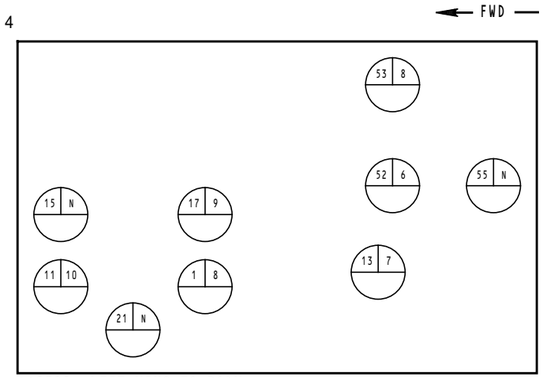


AC0520 LEFT WING TO BODY
STA 500, WL 180, LBL 059




AS0001L FIRE WALL LEFT
STA NS175, WL 135




AS0004L FIRE WALL LEFT
STRUT SIDE
STA NS175, WL 135

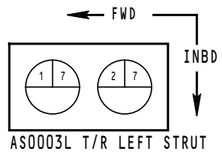


AS0003L T/R LEFT STRUT
STA NS201, WL 136




AS0002L T/R LEFT STRUT
STA NS201, WL 136

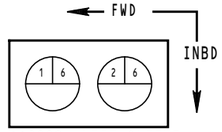


AS0002 LEFT SLEEVE
STA NS202, WL 136

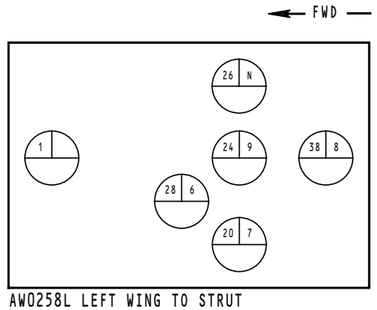


AW0258L LEFT WING TO STRUT




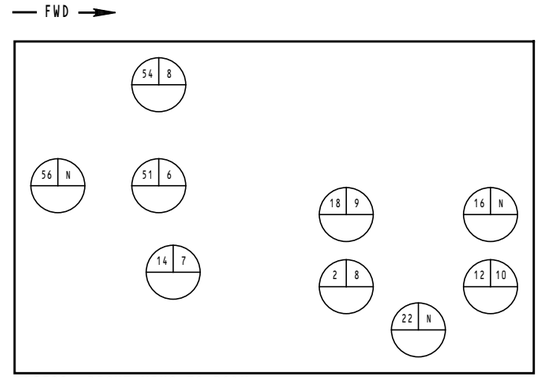


AD0520 RIGHT WING TO BODY

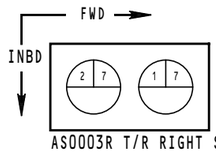

AS0003R T/R RIGHT STRUT
STA NS201, WL 136




AS0001R FIRE WALL RIGHT
STA NS175, WL 135




AS0002R T/R RIGHT STRUT
STA NS201, WL 136



AS0004R FIRE WALL RIGHT
STRUT SIDE
STA NS175, WL 135

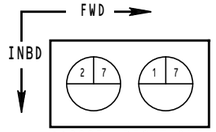

AS0003 RIGHT SLEEVE
STA NS202, WL 136

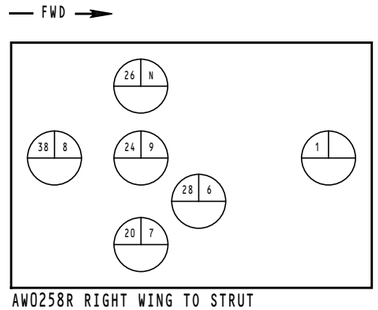

AW0258R RIGHT WING TO STRUT

ALL	WING AND WING BODY ENGINE WALL BRACKETS

D280AM1215

91-04-13

Page 1
Sheet 1
May 15/2024


91-04-13

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


287A4302

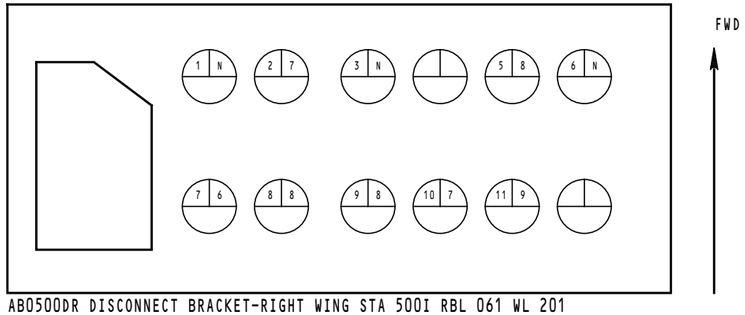


AB0500DR DISCONNECT BRACKET-RIGHT WING STA 500I RBL 061 WL 201

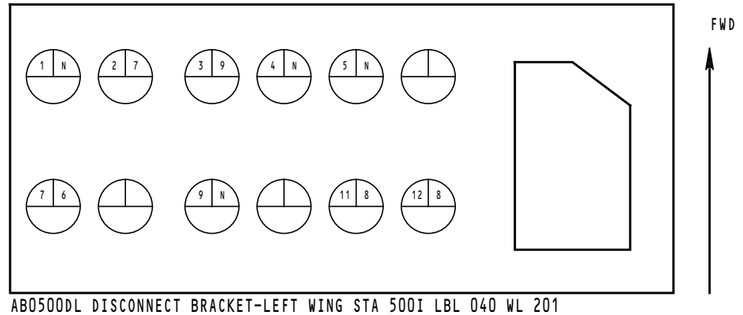


AB0500DL DISCONNECT BRACKET-LEFT WING STA 500I LBL 040 WL 201

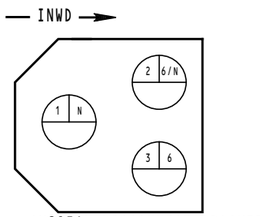

AW0254L DISCONNECT BRACKET
LEFT WING STA 254

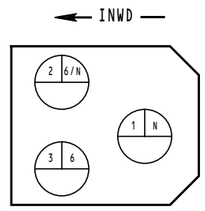

AW0254R DISCONNECT BRACKET
RIGHT WING STA 254





91-04-13

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

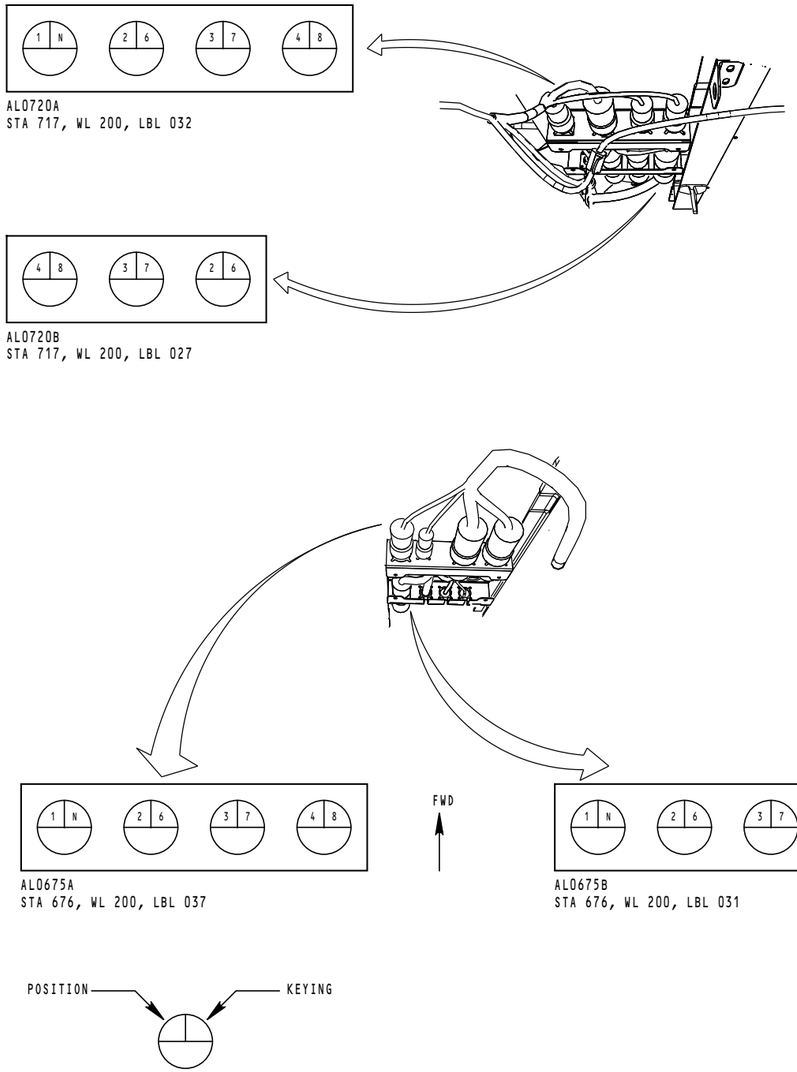

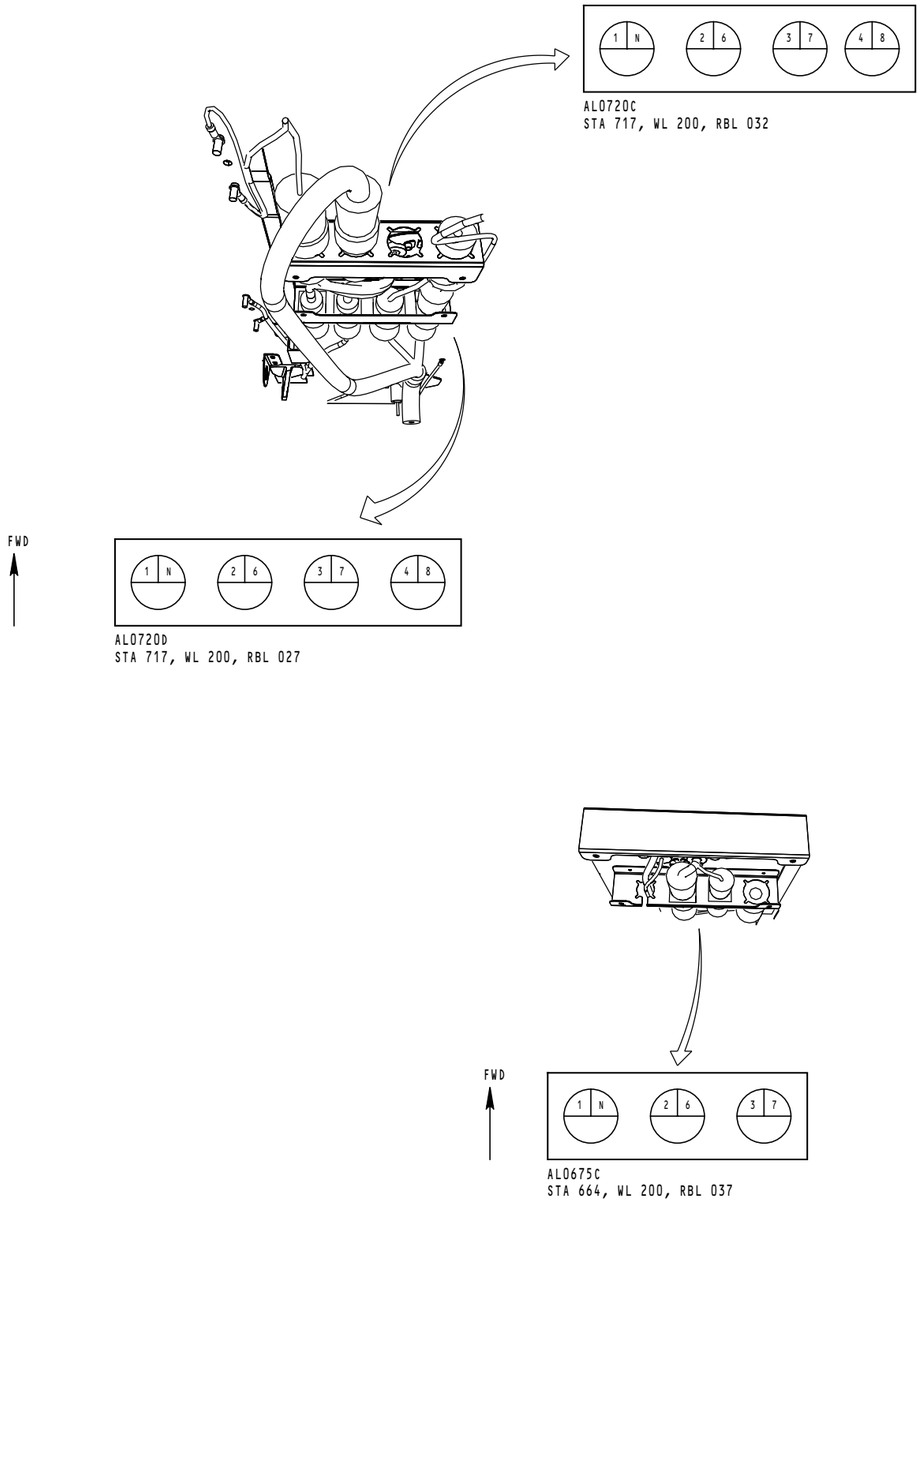



ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-04-14


Page 1


May 15/2024

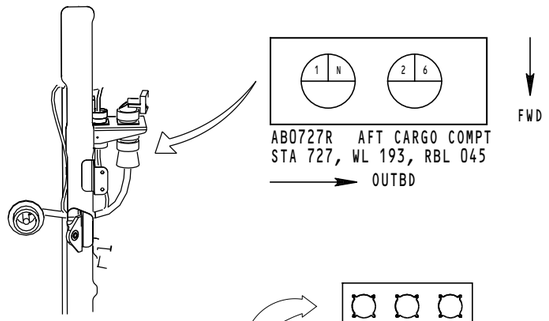


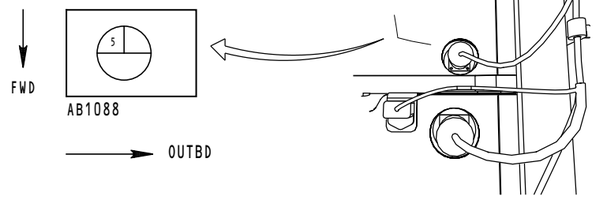


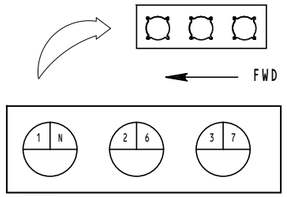


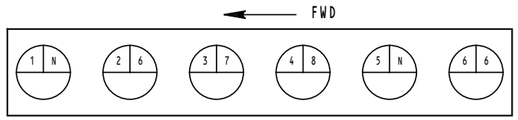


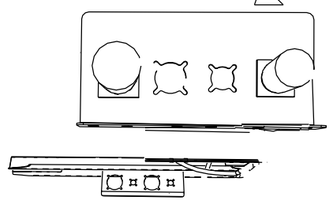


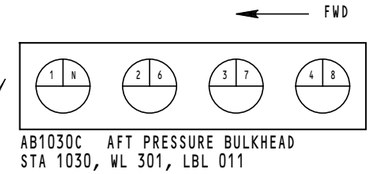


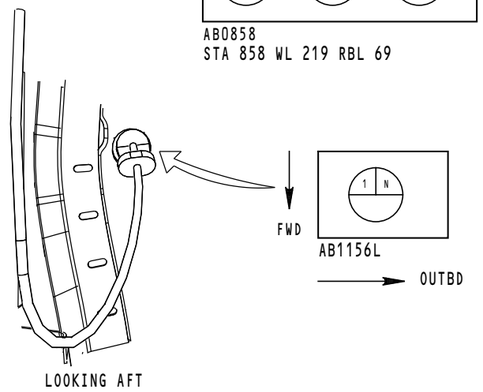


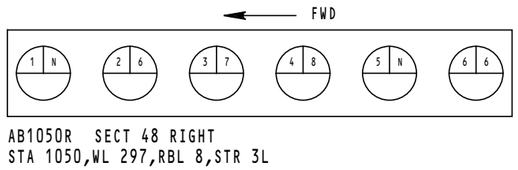


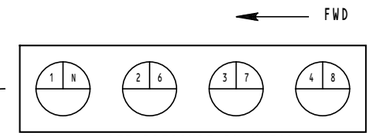

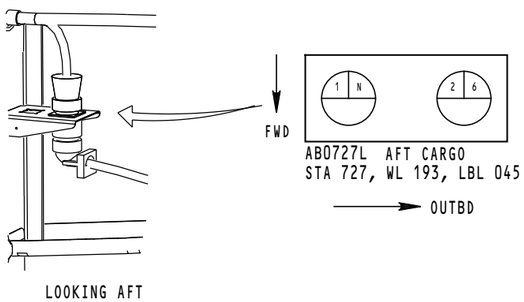

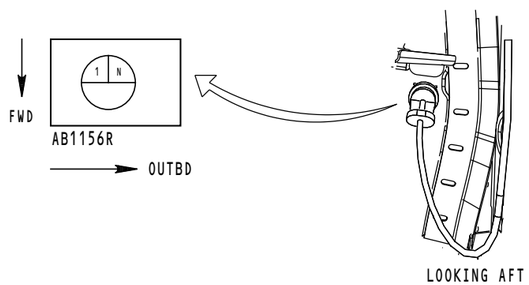

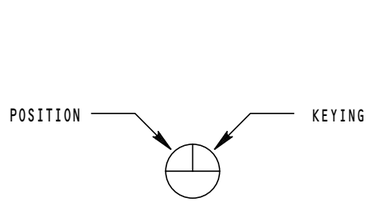

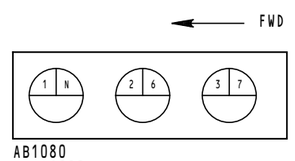


ALL	AFT BODY BRACKETS D280AM1215	91-04-15 Page 1 Sheet 1 May 15/2024

91-04-15


Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

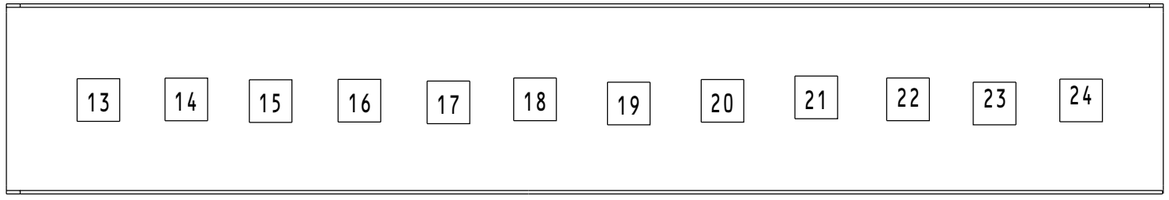

AB0857L

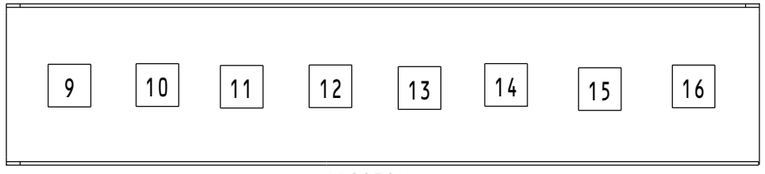

AB0839L

DISCONNECT KEYING CHART			
AB0857L		AB0839L	
POSITION	KEYING	POSITION	KEYING
13	AA	9	BA
14		10	BA
15	AC	11	AC
16	AD	12	AD
17	BA	13	BA
18	BB	14	BB
19	BC	15	BC
20	BD	16	AA
21			
22			
23			
24			


ECCN 9E991 BOEING PROPRIETARY - See title page for details

91-04-15


Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

3

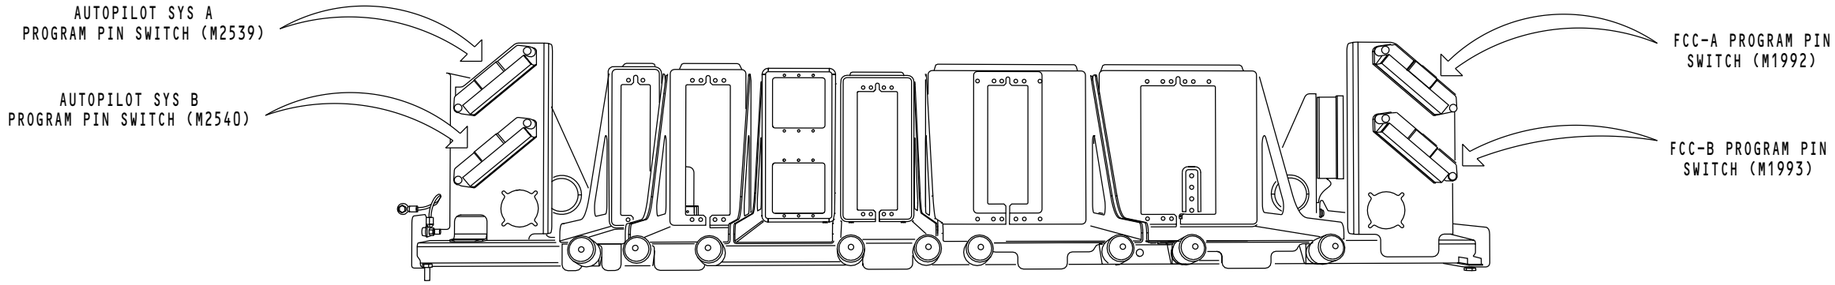

E1-1 SHELF

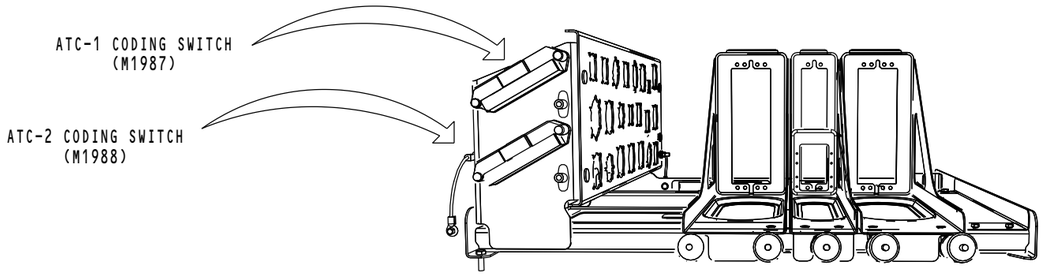

E1-3 SHELF


ALL	**PROGRAM PIN SWITCH/ CODING SWITCH LOCATIONS** D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details


91-06-01

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

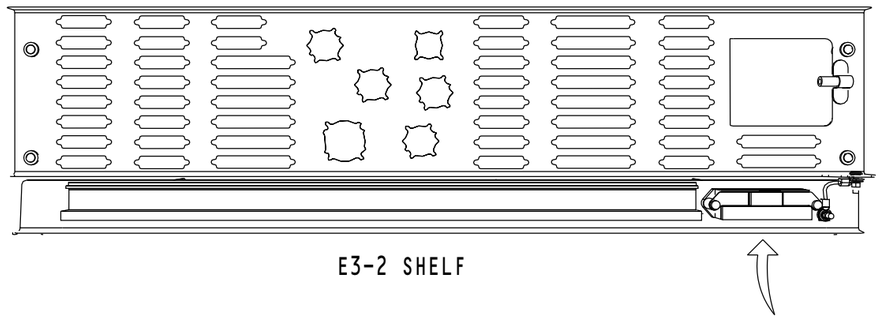

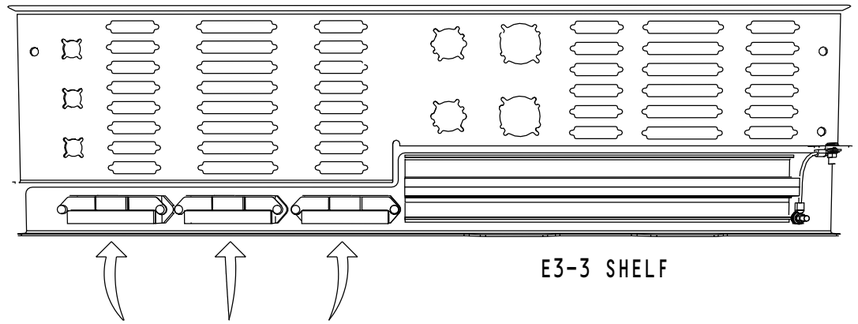

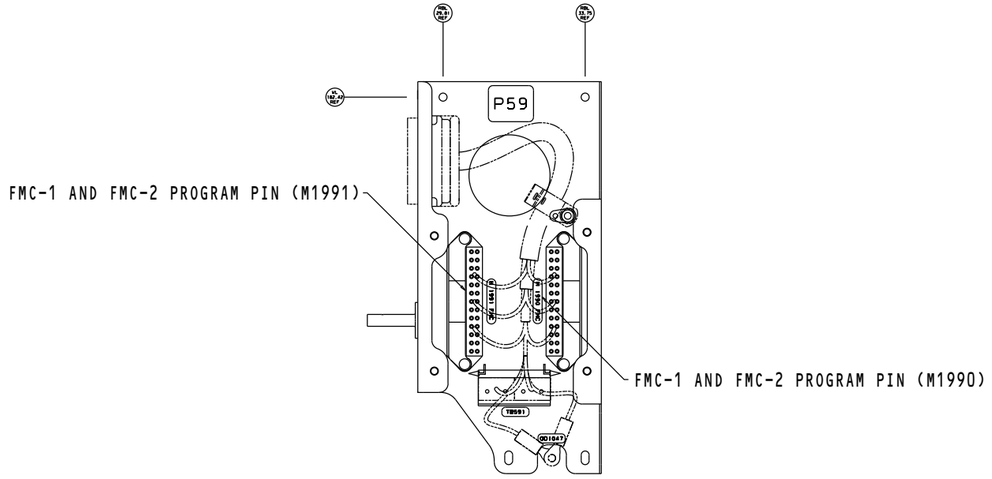

P59 PANEL

ALL

PROGRAM PIN SWITCH/ CODING SWITCH LOCATIONS

D280AM1215

91-06-01
Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details