CHAPTER 35

OXYGEN

CHAPTER 35
OXYGEN

Subject/Page	Date	COC
35-EFFECTIVE PAGES		
1 thru 4	Sep 15/2026	
35-CONTENTS		
1	Jan 15/2025	
2	May 15/2025	
3	Sep 15/2025	
4	Jan 15/2025	
5	Jan 15/2025	
6	Jan 15/2025	
7	Jan 15/2025	
8	Jan 15/2025	
35-00-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
R 204	Sep 15/2026	
205	May 15/2024	
206	May 15/2024	
R 207	Sep 15/2026	
R 208	Sep 15/2026	
R 209	Sep 15/2026	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	BLANK	
35-00-00		
301	May 15/2024	
302	May 15/2024	
35-00-00		
701	May 15/2024	
702	May 15/2024	
703	May 15/2024	
704	BLANK	
35-00-00		
901	May 15/2025	
902	Jan 15/2025	
903	Jan 15/2025	
904	Jan 15/2025	
905	Jan 15/2025	
906	May 15/2025	
907	May 15/2025	
908	Jan 15/2025	
35-12-00		
201	Sep 15/2025	
202	Sep 15/2025	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2025	
208	Sep 15/2025	
209	Sep 15/2025	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	BLANK	
35-12-00		
501	May 15/2024	
502	Sep 15/2025	
503	May 15/2024	
504	May 15/2024	
R 505	Sep 15/2026	
506	May 15/2024	
R 507	Sep 15/2026	
R 508	Sep 15/2026	
R 509	Sep 15/2026	
R 510	Sep 15/2026	
511	May 15/2024	
512	May 15/2024	
513	May 15/2024	
35-12-00 (cont)		
514	BLANK	
35-12-00		
601	May 15/2024	
602	May 15/2025	
603	May 15/2025	
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
607	May 15/2024	
608	May 15/2024	
R 609	Sep 15/2026	
610	May 15/2024	
611	May 15/2024	
612	May 15/2024	
613	May 15/2024	
614	May 15/2024	
615	May 15/2024	
616	May 15/2024	
617	May 15/2024	
618	BLANK	
35-12-11		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2025	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	Sep 15/2024	
411	Sep 15/2024	
412	May 15/2024	
413	May 15/2024	
414	Jan 15/2025	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

35-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

Subject/Page	Date	COC
35-12-21		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	Sep 15/2024	
406	Jan 15/2025	
35-12-22		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	BLANK	
35-12-51		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
35-12-85		
R 201	Sep 15/2026	
R 202	Sep 15/2026	
R 203	Sep 15/2026	
R 204	Sep 15/2026	
R 205	Sep 15/2026	
R 206	Sep 15/2026	
A 207	Sep 15/2026	
A 208	Sep 15/2026	
35-12-85		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
R 408	Sep 15/2026	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
35-12-85 (cont)		
R 412	Sep 15/2026	
R 413	Sep 15/2026	
414	BLANK	
35-12-85		
701	May 15/2024	
702	May 15/2024	
703	May 15/2024	
704	May 15/2024	
705	May 15/2024	
706	May 15/2024	
35-22-00		
501	May 15/2024	
502	Sep 15/2024	
503	May 15/2024	
504	Sep 15/2025	
505	Sep 15/2025	
506	Sep 15/2024	
507	Sep 15/2024	
508	May 15/2024	
509	May 15/2024	
510	May 15/2024	
511	May 15/2024	
512	May 15/2024	
513	May 15/2024	
514	May 15/2024	
515	May 15/2024	
516	May 15/2024	
517	May 15/2025	
518	May 15/2025	
519	May 15/2025	
520	May 15/2025	
521	Sep 15/2025	
522	Sep 15/2025	
523	May 15/2024	
524	BLANK	
35-22-11		
201	May 15/2025	
202	May 15/2025	
203	May 15/2025	
204	Sep 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2025	
209	Sep 15/2025	
R 210	Sep 15/2026	
211	May 15/2024	
212	BLANK	
35-22-11		
401	Jan 15/2026	
402	May 15/2025	
403	May 15/2024	
404	Sep 15/2024	
405	Sep 15/2024	
406	May 15/2025	
407	Sep 15/2024	
408	May 15/2025	
409	Jan 15/2026	
410	Jan 15/2026	
411	Jan 15/2026	
412	Jan 15/2026	
413	Sep 15/2024	
414	May 15/2025	
415	Sep 15/2024	
416	BLANK	
35-22-21		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

35-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

Subject/Page	Date	COC
35-22-21 (cont)		
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
35-22-31		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	May 15/2024	
219	May 15/2024	
220	May 15/2024	
221	May 15/2024	
222	May 15/2024	
223	May 15/2024	
224	May 15/2024	
225	May 15/2024	
226	May 15/2024	
227	May 15/2024	
228	May 15/2024	
229	May 15/2024	
230	May 15/2024	
231	May 15/2024	
232	May 15/2024	
35-22-31 (cont)		
233	May 15/2024	
234	BLANK	
35-22-31		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
412	May 15/2024	
413	May 15/2024	
414	May 15/2024	
415	May 15/2024	
416	May 15/2024	
417	May 15/2024	
418	May 15/2024	
419	May 15/2024	
420	BLANK	
35-22-31		
701	May 15/2024	
702	May 15/2024	
703	May 15/2024	
704	BLANK	
35-22-41		
401	May 15/2024	
402	May 15/2024	
403	Sep 15/2024	
404	Sep 15/2024	
405	Sep 15/2024	
406	Sep 15/2024	
35-22-51		
201	May 15/2025	
202	May 15/2025	
203	May 15/2024	
204	May 15/2025	
205	May 15/2025	
206	BLANK	
35-22-51		
401	May 15/2025	
402	May 15/2025	
403	May 15/2024	
404	May 15/2024	
405	May 15/2025	
406	May 15/2025	
35-31-00		
701	May 15/2024	
702	May 15/2024	
703	May 15/2024	
704	BLANK	
35-31-01		
201	Sep 15/2024	
202	May 15/2024	
203	May 15/2024	
204	Sep 15/2024	
35-31-01		
401	May 15/2024	
402	May 15/2024	
403	Sep 15/2024	
404	Sep 15/2024	
35-31-01		
501	Sep 15/2024	
502	May 15/2024	
503	May 15/2024	
504	May 15/2024	
35-31-01		
601	Sep 15/2024	
602	May 15/2024	
603	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

35-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
35-31-01 (cont)		
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
35-31-01		
701	May 15/2024	
702	May 15/2024	
35-31-02		
401	May 15/2024	
R 402	Sep 15/2026	

Subject/Page	Date	COC

Subject/Page	Date	COC

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

35-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
OXYGEN - MAINTENANCE PRACTICES	35-00-00		201	PTF ALL
Oxygen System General Maintenance Practices TASK 35-00-00-910-801			201	PTF ALL
Safety Precautions TASK 35-00-00-910-802			201	PTF ALL
Maintenance Practices TASK 35-00-00-910-803			204	PTF ALL
Leak Detection TASK 35-00-00-790-801			206	PTF ALL
Installation of Caps on Open Oxygen Lines TASK 35-00-00-420-801			209	PTF ALL
Oxygen Tubing Replacement TASK 35-00-00-910-804			211	PTF ALL
OXYGEN - SERVICING	35-00-00		301	PTF ALL
Servicing of the Crew Oxygen System TASK 35-00-00-600-801			301	PTF ALL
Servicing of the Passenger Oxygen System TASK 35-00-00-600-802			301	PTF ALL
Portable Oxygen System Servicing TASK 35-00-00-600-803			302	PTF ALL
OXYGEN - CLEANING/PAINTING	35-00-00		701	PTF ALL
Clean the Oxygen System Components TASK 35-00-00-100-801			701	PTF ALL
OXYGEN - DDG MAINTENANCE PROCEDURES	35-00-00		901	PTF ALL
DDG 35-11-01-01 Flight Deck Crew Oxygen Pressure Indicator Inoperative - Preparation TASK 35-00-00-040-804			901	PTF ALL
DDG 35-11-01-01 Flight Deck Crew Oxygen Pressure Indicator Inoperative - Restoration TASK 35-00-00-440-802			902	PTF ALL
DDG 35-21-02-01 Passenger Oxygen Service Units Inoperative - Preparation TASK 35-00-00-040-801			903	PTF ALL

35-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
DDG 35-21-02-01 Passenger Oxygen Service Units Inoperative - Restoration TASK 35-00-00-440-804			903	PTF ALL
DDG 35-21-02-02 Attendant Oxygen Service Unit Inoperative - Preparation TASK 35-00-00-040-808			903	PTF ALL
DDG 35-21-02-02 Attendant Oxygen Service Unit Inoperative - Restoration TASK 35-00-00-440-810			904	PTF ALL
DDG 35-21-02-03 Lavatory Oxygen Service Unit Inoperative - Preparation TASK 35-00-00-040-809			904	PTF ALL
DDG 35-21-02-03 Lavatory Oxygen Service Unit Inoperative - Restoration TASK 35-00-00-440-811			905	PTF ALL
DDG 35-21-02-04 Passenger, Attendant, and Lavatory Oxygen Service Units Automatic Presentation Inoperative - Preparation TASK 35-00-00-040-802			905	PTF ALL
DDG 35-21-02-05 Passenger, Lavatory and Attendant Service Units Door Latches Inoperative (FAA) - Preparation TASK 35-00-00-040-803			906	PTF ALL
DDG 35-21-02-05 Passenger, Lavatory and Attendant Service Units Door Latches Inoperative (FAA) - Restoration TASK 35-00-00-440-806			907	PTF ALL
DDG 35-31-01 Portable Oxygen Dispensing Units (Bottle and Mask) Inoperative (EASA) - Preparation TASK 35-00-00-040-806			907	PTF ALL
DDG 35-31-01 Portable Oxygen Dispensing Units (Bottle and Mask) Inoperative (EASA) - Restoration TASK 35-00-00-440-808			908	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
CREW OXYGEN SYSTEM - MAINTENANCE PRACTICES	35-12-00		201	PTF ALL
Bleed the Crew Oxygen System Prior to System Maintenance or Repair TASK 35-12-00-800-801			201	PTF ALL
Leak Test the Crew Oxygen System After System Maintenance or Repair TASK 35-12-00-800-802			206	PTF ALL
Crew Oxygen System - Deactivation TASK 35-12-00-040-801			210	PTF ALL
Crew Oxygen System - Activation TASK 35-12-00-440-801			213	PTF ALL
CREW OXYGEN SYSTEM - ADJUSTMENT/TEST	35-12-00		501	PTF ALL
Crew Oxygen Stowage Box Test (Mask Stowed in Stowage Box) TASK 35-12-00-700-801			501	PTF ALL
Crew Oxygen Mask-Regulator Test TASK 35-12-00-700-802			508	PTF ALL
Crew Oxygen Pressure Indication Visual Check TASK 35-12-00-710-801			510	PTF ALL
CREW OXYGEN SYSTEM - INSPECTION/CHECK	35-12-00		601	PTF ALL
Crew Oxygen Operational Leak Check TASK 35-12-00-800-803			601	PTF ALL
Crew Oxygen System Pressure Decay Leak Check TASK 35-12-00-710-802			606	PTF ALL
Crew Oxygen Cylinder Correct Installation and Condition Check TASK 35-12-00-211-801			616	PTF ALL
PRESSURE REDUCING REGULATOR - REMOVAL/INSTALLATION	35-12-11		401	PTF ALL
Regulator/Transducer Assembly Removal TASK 35-12-11-000-801			401	PTF ALL
Regulator/Transducer Assembly Installation TASK 35-12-11-400-801			406	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Regulator/Transducer Assembly Component Removal TASK 35-12-11-000-802			407	PTF ALL
Regulator/Transducer Assembly Component Installation TASK 35-12-11-400-802			410	PTF ALL
PRESSURE TRANSDUCER - REMOVAL/INSTALLATION	35-12-21		401	PTF ALL
Pressure Transducer Removal TASK 35-12-21-000-801			401	PTF ALL
Pressure Transducer Installation TASK 35-12-21-400-801			405	PTF ALL
CREW OXYGEN PRESSURE INDICATOR - REMOVAL/INSTALLATION	35-12-22		401	PTF ALL
Crew Oxygen Pressure Indicator Removal TASK 35-12-22-020-801			401	PTF ALL
Crew Oxygen Pressure Indicator Installation TASK 35-12-22-400-801			403	PTF ALL
DISCHARGE INDICATOR DISC - REMOVAL/INSTALLATION	35-12-51		401	PTF ALL
Discharge Indicator Disk Removal TASK 35-12-51-000-801			401	PTF ALL
Discharge Indicator Disk Installation TASK 35-12-51-400-801			404	PTF ALL
CREW OXYGEN MASK/STOWAGE BOX - MAINTENANCE PRACTICES	35-12-85		201	PTF ALL
Crew Oxygen Mask Stowage TASK 35-12-85-910-801			201	PTF ALL
CREW OXYGEN MASK/STOWAGE BOX - REMOVAL/INSTALLATION	35-12-85		401	PTF ALL
Oxygen Mask Stowage Box Removal TASK 35-12-85-000-801			401	PTF ALL
Oxygen Mask Stowage Box Installation TASK 35-12-85-400-801			405	PTF ALL
Oxygen Mask/Regulator Removal TASK 35-12-85-000-802			407	PTF ALL

35-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Oxygen Mask/Regulator Installation TASK 35-12-85-400-802			412	PTF ALL
CREW OXYGEN MASK CLEANING	35-12-85		701	PTF ALL
Crew Oxygen Mask Cleaning TASK 35-12-85-100-801			701	PTF ALL
PASSENGER OXYGEN SYSTEM - ADJUSTMENT/TEST	35-22-00		501	PTF ALL
Passenger Oxygen System Automatic Actuation Functional Test TASK 35-22-00-700-801			501	PTF ALL
Passenger Oxygen System Manual Deploy Operational Test TASK 35-22-00-700-802			516	PTF ALL
Oxygen Generator Visual Inspection TASK 35-22-00-210-801			519	PTF ALL
Oxygen Cylinder (CDS) Visual Inspection TASK 35-22-00-210-802			521	PTF ALL
OXYGEN GENERATOR - MAINTENANCE PRACTICES	35-22-11		201	PTF ALL
Oxygen Generator Deactivation TASK 35-22-11-000-801			201	PTF ALL
Oxygen Generator Activation TASK 35-22-11-400-801			208	PTF ALL
OXYGEN GENERATOR - REMOVAL/INSTALLATION	35-22-11		401	PTF ALL
PSU Oxygen Generator Removal TASK 35-22-11-000-802			401	PTF ALL
PSU Oxygen Generator Installation TASK 35-22-11-400-802			409	PTF ALL
ASU Oxygen Generator Removal TASK 35-22-11-000-803			411	PTF ALL
ASU Oxygen Generator Installation TASK 35-22-11-400-803			414	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
OXYGEN MASK DOOR LATCH ACTUATOR - REMOVAL/INSTALLATION	35-22-21		401	PTF ALL
PSU Door Latch Actuator Removal TASK 35-22-21-000-801			401	PTF ALL
PSU Door Latch Actuator Installation TASK 35-22-21-400-801			405	PTF ALL
ASU Door Latch Actuator Removal TASK 35-22-21-000-802			407	PTF ALL
ASU Door Latch Actuator Installation TASK 35-22-21-400-802			409	PTF ALL
PASSENGER OXYGEN MASK - MAINTENANCE PRACTICES	35-22-31		201	PTF ALL
PSU Oxygen Mask Packing TASK 35-22-31-440-801			201	PTF ALL
ASU Oxygen Mask Packing TASK 35-22-31-420-801			212	PTF ALL
LSU Oxygen Mask Packing TASK 35-22-31-420-802			223	PTF ALL
Detailed Inspection of the Oxygen Mask TASK 35-22-31-210-801			231	PTF ALL
PASSENGER OXYGEN MASK - REMOVAL/INSTALLATION	35-22-31		401	PTF ALL
PSU Oxygen Mask Removal TASK 35-22-31-000-801			401	PTF ALL
PSU Oxygen Mask Installation TASK 35-22-31-400-801			406	PTF ALL
ASU Oxygen Mask Removal TASK 35-22-31-000-802			407	PTF ALL
ASU Oxygen Mask Installation TASK 35-22-31-400-802			413	PTF ALL
LSU Oxygen Mask Removal TASK 35-22-31-000-803			414	PTF ALL
LSU Oxygen Mask Installation TASK 35-22-31-400-803			418	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
PASSENGER OXYGEN MASK - CLEANING	35-22-31		701	PTF ALL
Oxygen Mask Assembly Cleaning TASK 35-22-31-100-801			701	PTF ALL
ALTITUDE PRESSURE SWITCH - REMOVAL/INSTALLATION	35-22-41		401	PTF ALL
Altitude Pressure Switch - Removal (S813) TASK 35-22-41-000-801			401	PTF ALL
Altitude Pressure Switch - Installation (S813) TASK 35-22-41-400-801			403	PTF ALL
OXYGEN CYLINDER (CDS) - MAINTENANCE PRACTICES	35-22-51		201	PTF ALL
Oxygen Cylinder (CDS) Deactivation TASK 35-22-51-040-801			201	PTF ALL
Oxygen Cylinder (CDS) Activation TASK 35-22-51-440-801			204	PTF ALL
OXYGEN CYLINDER (CDS) - REMOVAL/INSTALLATION	35-22-51		401	PTF ALL
LSU Oxygen Cylinder (CDS) Removal TASK 35-22-51-000-801			401	PTF ALL
LSU Oxygen Cylinder (CDS) Installation TASK 35-22-51-400-801			405	PTF ALL
PORTABLE OXYGEN SYSTEMS - CLEANING	35-31-00		701	PTF ALL
Clean the Portable Oxygen System Components TASK 35-31-00-100-801			701	PTF ALL
PORTABLE OXYGEN CYLINDER - MAINTENANCE PRACTICES	35-31-01		201	PTF ALL
Replace Portable Oxygen Cylinder Mask TASK 35-31-01-960-802			201	PTF ALL
Replace Portable Oxygen Cylinder Battery TASK 35-31-01-960-803			201	PTF ALL
PORTABLE OXYGEN CYLINDER - REMOVAL/INSTALLATION	35-31-01		401	PTF ALL
Replace Portable Oxygen Cylinder TASK 35-31-01-960-801			401	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 35
OXYGEN

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
PORTABLE OXYGEN CYLINDER - ADJUSTMENT/TEST	35-31-01		501	PTF ALL
Portable Oxygen Cylinder (Electronic Pulse Delivery) Battery - Operational Test TASK 35-31-01-710-804			501	PTF ALL
Portable Oxygen Cylinder (Electronic Pulse Delivery) Mounting Bracket - Operational Test TASK 35-31-01-710-805			503	PTF ALL
Portable Oxygen Cylinder (Electronic Pulse Delivery) Shutoff Valves and Regulators - Operational Test TASK 35-31-01-710-806			503	PTF ALL
PORTABLE OXYGEN CYLINDER - INSPECTION/CHECK	35-31-01		601	PTF ALL
Portable Oxygen Cylinder (Electronic Pulse Delivery) - General Visual Inspection TASK 35-31-01-210-801			601	PTF ALL
Portable Oxygen Mask (Electronic Pulse Delivery) - Detailed Visual Inspection TASK 35-31-01-211-801			605	PTF ALL
Portable Oxygen Cylinder (Electronic Pulse Delivery) - Pressure Gauge Inspection TASK 35-31-01-200-801			606	PTF ALL
PORTABLE OXYGEN CYLINDER - CLEANING	35-31-01		701	PTF ALL
Portable Oxygen Cylinder (Electronic Pulse Delivery) - Cleaning TASK 35-31-01-100-801			701	PTF ALL
PORTABLE PROTECTIVE BREATHING EQUIPMENT BOX - REMOVAL/INSTALLATION	35-31-02		401	PTF ALL
Portable Protective Breathing Equipment Box Removal TASK 35-31-02-000-801			401	PTF ALL
Portable Protective Breathing Equipment Box Installation TASK 35-31-02-400-801			401	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN - MAINTENANCE PRACTICES

1. General

A. This procedure contains the general maintenance practices for oxygen system maintenance.

B. This procedure contains these tasks:

(1) Oxygen System General Maintenance Practices

(2) Safety Precautions

(3) Maintenance Practices

(4) Leak Detection

(5) Installation of Caps on Open Oxygen Lines

(6) Oxygen Tubing Replacement.

TASK 35-00-00-910-801

2. Oxygen System General Maintenance Practices

A. General

(1) Oxygen servicing persons must review, or thoroughly know, these tasks before they do other oxygen procedures.

B. Oxygen System General Tasks

SUBTASK 35-00-00-910-001

(1) Refer to these tasks for the applicable data:

(a) Safety Precautions (Safety Precautions, TASK 35-00-00-910-802)

(b) Maintenance Practices (Maintenance Practices, TASK 35-00-00-910-803)

(c) Leak Detection (Leak Detection, TASK 35-00-00-790-801)

(d) Installation of Caps on Open Oxygen Lines and Fittings (Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801)

(e) Oxygen Tubing Replacement (Oxygen Tubing Replacement, TASK 35-00-00-910-804).

END OF TASK

TASK 35-00-00-910-802

3. Safety Precautions

A. References

Reference	Title
20-40-11-910-801	Static Grounding (P/B 201)
35-00-00-100-801	Clean the Oxygen System Components (P/B 701)

B. Consumable Materials

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G50306	Compound - Leak Detection, Oxygen System	MIL-PRF-25567 (BAC5402)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G51884	Gloves - Nitrile, Antistatic, Powder And Lint Free	BAC5402
G51893	Gloves - Nylon, Lint-Free	

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Safety Precautions

SUBTASK 35-00-00-910-002

(1) Make sure that only approved persons do maintenance on the oxygen systems.

NOTE: Approved persons are personnel who are trained and understand the dangers and procedures to safely do maintenance on oxygen systems.

SUBTASK 35-00-00-860-001

(2) Make sure that the airplane is electrically grounded, if not, do this task: Static Grounding, TASK 20-40-11-910-801.

SUBTASK 35-00-00-610-001

WARNING

DO NOT ALLOW OIL, GREASE, DIRT OR OTHER FLAMMABLE MATERIALS TO TOUCH OXYGEN SYSTEM COMPONENTS. THESE MATERIALS WHEN EXPOSED TO PRESSURIZED OXYGEN CAN IGNITE AND CAUSE AN EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(3) Make sure that the maintenance area is clean and free from these hazards:

(a) Flammable materials

NOTE: Flammable materials include; oil, grease, gasoline, kerosene, cleaning solvents etc.

(b) Contamination sources

NOTE: Contamination sources include; dust, lint, metal filings, human skin, or other organic materials.

(c) Potential ignition sources

NOTE: Potential ignition sources include; hot exhaust, sparks, flame and burning cigarettes.

(d) Make sure that the fittings are clean and free of contamination, and unwanted material.

(e) Use only approved procedures to clean oxygen system components, do this task: Clean the Oxygen System Components, TASK 35-00-00-100-801.

(f) Make sure that your hands, clothing, equipment, and tools are clean and free of petroleum products.

(g) Use nitrile gloves, G51884, or nylon gloves, G51893, to do the work on the oxygen system.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-100-001

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(4) Make sure that the fittings are clean and free of contamination, and threaded chips.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-00-00-860-002

WARNING OPEN OXYGEN SYSTEM VALVES SLOWLY. IF YOU OPEN A VALVE QUICKLY, THE TEMPERATURE OF THE OXYGEN CAN INCREASE. THIS CAN CAUSE A FIRE OR AN EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(5) Open the oxygen system valves slowly.

NOTE: This will stop the quick (rapid) pressurization of the oxygen system. If the oxygen system is pressurized too quickly, it possible to get gas compression and a subsequent temperature increase.

SUBTASK 35-00-00-910-003

WARNING DO NOT STAND OR SIT IN FRONT OF A HIGH PRESSURE OXYGEN SYSTEM REGULATOR (ABOVE 1000 PSI, 6895 KPA) THAT IS PRESSURIZED. IF THE REGULATOR FAILS, COMPONENTS OF THE REGULATOR CAN HIT AND INJURE YOU.

(6) Do not sit or stand in front of a high pressure regulator.

SUBTASK 35-00-00-910-004

WARNING DO NOT USE GASKETS OR LUBRICANTS WHEN YOU CONNECT THE FITTINGS IN THE OXYGEN SYSTEM. THE GASKETS OR LUBRICANTS CAN CAUSE A FIRE OR AN EXPLOSION WHEN THEY ARE EXPOSED TO PRESSURIZED OXYGEN. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(7) Do not use gaskets or lubricants when you connect oxygen system fittings and tubing.

SUBTASK 35-00-00-420-001

WARNING DO NOT USE THE B-NUT TO PULL THE FITTINGS INTO ALIGNMENT. IF THE FITTINGS ARE NOT CORRECTLY ALIGNED, A CRACK CAN OCCUR WHICH CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(8) If two fittings are connected with a B-nut, make sure that the fittings are aligned before you tighten the B-nut.

SUBTASK 35-00-00-910-005

(9) Do not tighten the fittings while the oxygen system is pressurized.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-420-002

WARNING DO NOT INSTALL LOW PRESSURE HOSES IN THE HIGH PRESSURE SYSTEM. THE LOW PRESSURE OXYGEN HOSE CAN BURST AND POSSIBLY CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(10) Do not connect the low pressure oxygen hoses in the high pressure system.

NOTE: Flexible hose assemblies are used in the high and low pressure systems and can be connected to standard tubing connectors. Low pressure hoses operate at pressures of 100 psig (689 kPa) and must not be installed in the high pressure system. High pressure can be more than 1850 psig (12,755 kPa).

SUBTASK 35-00-00-910-006

WARNING KEEP A SPACE BETWEEN THE ELECTRICAL WIRING AND THE OXYGEN HOSES TO PREVENT CHAFFING. CHAFFING CAN CAUSE DAMAGE TO THE ELECTRICAL WIRING OR OXYGEN HOSES AND CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(11) Keep a 2 in. (51 mm) gap between the oxygen hose and the electrical wiring when the crew oxygen boxes and crew mask stowage boxes are closed.

NOTE: If the gap is less than 2 in. (51 mm), install a clamp hose around the wiring as necessary to stop the chaffing.

SUBTASK 35-00-00-860-003

CAUTION MANUALLY OPEN AND CLOSE THE SHUTOFF VALVE THE MAXIMUM 30 IN-LB (3.4 NM). IF YOU TIGHTEN THE VALVE ON THE OXYGEN CYLINDER MORE THAN 30 IN-LB (3.4 NM), YOU CAN CAUSE DAMAGE TO THE SHUTOFF VALVE.

(12) Use only your hand to open or close the valves in the oxygen system.

SUBTASK 35-00-00-790-001

(13) Use only approved leak detection compound, G50306, to do leak checks.

SUBTASK 35-00-00-100-002

(14) Immediately after the test, rub off the leak detection compound, G50306, with a white cotton wiper, G00034.

SUBTASK 35-00-00-910-007

(15) Make sure that there is a sufficient flow of air through the work area when you do maintenance on the oxygen system.

SUBTASK 35-00-00-420-003

(16) Do not permit the oxygen hoses to twist, kink, or collapse.

END OF TASK

TASK 35-00-00-910-803

4. Maintenance Practices

A. References

Reference	Title
35-00-00-100-801	Clean the Oxygen System Components (P/B 701)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
200	Upper Half of Fuselage
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Oxygen System General Maintenance Practices

SUBTASK 35-00-00-910-008

(1) Before you remove and install oxygen system fittings, tubing, or components, do these steps:

(a) To read and obey the safety precautions before you do the maintenance, do this task: Safety Precautions, TASK 35-00-00-910-802.

(b) Put on lint free, nylon gloves and clean clothing.

(c) To clean all tools, equipment, and fittings, do this task: Clean the Oxygen System Components, TASK 35-00-00-100-801.

(d) Wipe off dust or other contamination on the outside surface of the polyethylene bags with a clean, oil free cloth before you remove the component.

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(e) Make sure that any fittings, components, plugs or caps are clean and free of contamination, and threaded chips.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(f) Do a check of all replacement tubes and components for damage, loose protective covers, incorrect identification or other problems.

(g) Do not eat or smoke in oxygen system maintenance areas.

(h) Check the maintenance area to make sure that these conditions exist:

1) The area is clean.

2) The area is free from dust or other particles.

3) The area is free from parts, solvents, cleaners, and other equipment not related to the oxygen system.

4) Other planned maintenance is compatible with the oxygen system maintenance.

(i) To remove the pressure (bleed the system) before you disconnect or remove the crew oxygen system components, do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING OPEN CONNECTIONS SLOWLY. IF YOU OPEN CONNECTIONS QUICKLY, THE TEMPERATURE OF THE OXYGEN CAN INCREASE. THIS CAN CAUSE A FIRE OR AN EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(j) If it is not possible to bleed off pressure through a mask, loosen the oxygen line connections to bleed off the pressure before you do maintenance.

SUBTASK 35-00-00-910-009

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(2) You can use the nuts and fittings again if they are not damaged and there is a good seal on the assembly. Make sure that the threads on the nuts and fittings turn smoothly.

SUBTASK 35-00-00-910-010

(3) When you install the tubing, align the fittings and tubing so you can tighten the B-nuts by hand before you tighten the B-nuts with a wrench. Do not use the fitting nuts to align the tubing and connections.

NOTE: Move the sleeve until it touches the mating surface. Do not use the nut to pull the tube into position. Leakage from the fittings or the tubing can occur if you cause damage to the fittings or the tubing.

——— END OF TASK ———

TASK 35-00-00-790-801

5. Leak Detection

A. General

(1) If you disconnect the crew oxygen system tubing or components for maintenance, do this procedure to find any leaks after you re-connect the system.

B. References

Reference	Title
20-10-44-400-801	Lockwire, Cotter Pins, and Lockrings - Installation (P/B 401)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)

C. Consumable Materials

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G01912	Lockwire - MS20995NC32, Monel - 0.032 Inch (0.8128 mm) Diameter	NASM20995
G02479	Lockwire - MS20995CY20, Copper - 0.020 Inch (0.508 mm) Diameter	NASM20995
G50306	Compound - Leak Detection, Oxygen System	MIL-PRF-25567 (BAC5402)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G50310	Tape - Nitto P-412 (Formerly Permacel) Ribbon Dope Thread Sealant Tape	A-A-58092

D. Location Zones

Zone	Area
110	Subzone - Body Station 130 to Station 396
122	Forward Cargo Compartment - Right
200	Upper Half of Fuselage
211	Flight Compartment - Left
212	Flight Compartment - Right

E. Leak Detection

SUBTASK 35-00-00-910-011

(1) To read and obey the safety precautions and maintenance practices for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-00-00-940-001

(2) Complete the maintenance on the oxygen system:

(a) Connect and tighten the tubing or component(s).

SUBTASK 35-00-00-940-002

(3) Do these steps to pressurize the oxygen system:

(a) Go to the oxygen system cylinder found in the forward cargo compartment.

WARNING OPEN THE SHUTOFF VALVE SLOWLY. YOU CAN CAUSE HIGH TEMPERATURES IN THE OXYGEN SYSTEM IF YOU OPEN THE SHUTOFF VALVE QUICKLY. HIGH TEMPERATURES CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

CAUTION MANUALLY OPEN AND CLOSE THE SHUTOFF VALVE THE MAXIMUM 30 IN-LB (3.4 NM). IF YOU TIGHTEN THE VALVE ON THE OXYGEN CYLINDER MORE THAN 30 IN-LB (3.4 NM), YOU CAN CAUSE DAMAGE TO THE SHUTOFF VALVE.

(b) Slowly open the shutoff valve on the oxygen cylinder with your hand.

(c) Close the shutoff valve one quarter of a turn.

(d) If there is an obvious leak, close the shutoff valve and repair the problem.

SUBTASK 35-00-00-940-003

(4) Go to the area where the maintenance on the oxygen system was done.

SUBTASK 35-00-00-790-002

(5) Apply the leak detection compound, G50306, to all connections that were disconnected.

SUBTASK 35-00-00-790-003

(6) Use a mirror and a light when necessary to look at areas that are not easy to see.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-790-004

(7) Do a check for leaks at all applicable connections (look for bubbles in the leak detection compound).

SUBTASK 35-00-00-790-005

(8) If there is not a leak, use a clean lint free cotton wiper, G00034, to remove the leak detection compound, G50306, immediately.

SUBTASK 35-00-00-790-006

(9) If there is a leak, do these steps:

CAUTION MANUALLY OPEN AND CLOSE THE SHUTOFF VALVE THE MAXIMUM 30 IN-LB (3.4 NM). IF YOU TIGHTEN THE VALVE ON THE OXYGEN CYLINDER MORE THAN 30 IN-LB (3.4 NM), YOU CAN CAUSE DAMAGE TO THE SHUTOFF VALVE.

(a) Manually close the shutoff valve (30 in-lb (3.4 N·m), maximum).

(b) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

(c) If there is a leak at a pipe thread connection, do these steps:

1) If it is necessary you can seal the pipe thread with Nitto P-412 tape, G50310.

2) Apply the Nitto P-412 tape, G50310, to the external threads.

NOTE: Do not apply the Nitto P-412 tape, G50310, to the last 1 1/2 to 2 1/2 threads at the end of the fitting.

3) Apply 1 1/2 turns of the Nitto P-412 tape, G50310, pulled tight, to the pipe threads.

4) Make sure that the Nitto P-412 tape, G50310, does not have an overlap with the internal fitting end.

(d) Tighten the connection with a leak to the correct torque value.

WARNING OPEN THE SHUTOFF VALVE SLOWLY. YOU CAN CAUSE HIGH TEMPERATURES IN THE OXYGEN SYSTEM IF YOU OPEN THE SHUTOFF VALVE QUICKLY. HIGH TEMPERATURES CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

CAUTION MANUALLY OPEN AND CLOSE THE SHUTOFF VALVE THE MAXIMUM 30 IN-LB (3.4 NM). IF YOU TIGHTEN THE VALVE ON THE OXYGEN CYLINDER MORE THAN 30 IN-LB (3.4 NM), YOU CAN CAUSE DAMAGE TO THE SHUTOFF VALVE.

(e) Slowly open the shutoff valve, with your hand, until it is fully open.

(f) Close the shutoff valve one forth of a turn.

(g) Check for leaks again with the leak detection compound, G50306.

(h) If you cannot stop a leak replace the bad component.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(i) Make sure that any fittings, components, plugs or caps used are clean and free of contamination, and threaded chips.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

F. Lockwire the Shutoff Valve on the Oxygen Cylinder

SUBTASK 35-00-00-420-004

(1) When the oxygen system is satisfactory, to do these steps to lockwire the shutoff valve in the open position, do this task: Lockwire, Cotter Pins, and Lockrings - Installation, TASK 20-10-44-400-801.

WARNING OPEN THE SHUTOFF VALVE SLOWLY. YOU CAN CAUSE HIGH TEMPERATURES IN THE OXYGEN SYSTEM IF YOU OPEN THE SHUTOFF VALVE QUICKLY. HIGH TEMPERATURES CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

CAUTION MANUALLY OPEN AND CLOSE THE SHUTOFF VALVE THE MAXIMUM 30 IN-LB (3.4 NM). IF YOU TIGHTEN THE VALVE ON THE OXYGEN CYLINDER MORE THAN 30 IN-LB (3.4 NM), YOU CAN CAUSE DAMAGE TO THE SHUTOFF VALVE.

(a) Slowly open the shutoff valve, by hand, until it is fully open.

NOTE: The shutoff valve on the 801307-00 steel cylinder is fully open at approximately 6.5 revolutions. The shutoff valve on the B42365-1 composite cylinder is fully open at approximately 4 revolutions. The shutoff valve on the 806835-01 composite cylinder is fully open at approximately 6.5 revolutions.

(b) Close the shutoff valve one forth of a turn.

(c) Use MS20995NC32 lockwire, G01912, or MS20995CY20 lockwire, G02479, to hold the shutoff valve in the open position.

1) Wrap the lockwire around the coupling assembly in a counter-clockwise direction.

2) Use the double-twist method.

END OF TASK

TASK 35-00-00-420-801

6. Installation of Caps on Open Oxygen Lines

A. References

Reference	Title
OHM 20-30-03	Overhaul Manual

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Tools/Equipment

Reference	Description
STD-1130	Cap - Protective, Flareless Tube, 1/2-20 Thread
STD-1131	Plug - Protective, Flareless Tube, 1/2-20 Thread

C. Consumable Materials

Reference	Description	Specification
G00624	Bag - Plastic, General Purpose	

D. Location Zones

Zone	Area
110	Subzone - Body Station 130 to Station 396
122	Forward Cargo Compartment - Right
200	Upper Half of Fuselage
211	Flight Compartment - Left
212	Flight Compartment - Right

E. Installation of Caps on Open Oxygen Lines

NOTE: Do this procedure each time that an oxygen line is disconnected for more than five minutes.

SUBTASK 35-00-00-910-012

(1) Use a Flareless Tube Cap, 1/2-20 Thread, STD-1130, or a Flareless Tube Plug, 1/2-20 Thread, STD-1131, to prevent contamination of the oxygen system.

SUBTASK 35-00-00-910-013

(2) To clean oxygen Flareless Tube Caps, 1/2-20 Thread, STD-1130, or Flareless Tube Plugs, 1/2-20 Thread, STD-1131, use an approved vapor degrease process, (OHM 20-30-03).

SUBTASK 35-00-00-910-014

(3) Make sure that all clean Flareless Tube Cap, 1/2-20 Thread, STD-1130, or Flareless Tube Plug, 1/2-20 Thread, STD-1131, are packaged in a sealed, clean plastic bag, G00624.

NOTE: Do not open the plastic bag, G00624, until you are prepared to install the caps or plugs. Seal the polyethylene bag immediately after you remove the cap or plug. Oxygen clean fittings come from a sealed container with a label for the oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems that are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-00-00-910-015

(4) You can use the Flareless Tube Cap, 1/2-20 Thread, STD-1130, or Flareless Tube Plug, 1/2-20 Thread, STD-1131, again if you clean the parts each time that you use them.

NOTE: Do not use the plastic bag, G00624, again.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-910-016

WARNING

USE ONLY APPROVED CAPS AND PLUGS WITH THE OXYGEN SYSTEM. UNAPPROVED EQUIPMENT USED TO SEAL THE OXYGEN SYSTEM CAN CAUSE SHAVINGS, CHIPS OR PARTICLES THAT CAN CAUSE CONTAMINATION OF THE HIGH PRESSURE OXYGEN SYSTEM. THE CONTAMINATION CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(5) Use only approved equipment to seal the oxygen system.

WARNING

USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(6) Make sure that the fittings, components, plugs or caps used are clean and free of contamination, and thread particles.

NOTE: Oxygen clean fittings come from a sealed container with a label for use in the oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-00-00-910-017

(7) Install clean Flareless Tube Cap, 1/2-20 Thread, STD-1130, or Flareless Tube Plug, 1/2-20 Thread, STD-1131, immediately to each open fitting and port.

NOTE: You can use a new Flareless Tube Cap, 1/2-20 Thread, STD-1130, or an equivalent plastic cap if the cap does not engage the connector threads. Use a clean metal Flareless Tube Cap, 1/2-20 Thread, STD-1130, if the Flareless Tube Cap, 1/2-20 Thread, STD-1130, engages the connector threads.

SUBTASK 35-00-00-910-018

(8) Install parts to the open oxygen lines in five minutes after the Flareless Tube Cap, 1/2-20 Thread, STD-1130, or Flareless Tube Plug, 1/2-20 Thread, STD-1131, is removed.

END OF TASK

TASK 35-00-00-910-804

7. Oxygen Tubing Replacement

A. General

(1) This tasks contains the general maintenance practices for the replacement of the oxygen tubing and supply line fittings. The procedures in this task include:

(a) Tubing with Flareless and Flared Ends Replacement.

(b) Hose End Fittings Replacement.

(c) Pipe Threaded Fittings Replacement.

B. References

Reference	Title
35-00-00-100-801	Clean the Oxygen System Components (P/B 701)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)

C. Tools/Equipment

Reference	Description
STD-1130	Cap - Protective, Flareless Tube, 1/2-20 Thread
STD-1131	Plug - Protective, Flareless Tube, 1/2-20 Thread

D. Consumable Materials

Reference	Description	Specification
G00624	Bag - Plastic, General Purpose	
G50310	Tape - Nitto P-412 (Formerly Permacel) Ribbon Dope Thread Sealant Tape	A-A-58092

E. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
200	Upper Half of Fuselage
211	Flight Compartment - Left
212	Flight Compartment - Right

F. Tubing and Hoses with Flareless and Flared Ends Replacement

SUBTASK 35-00-00-840-001

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-00-00-910-019

(2) You must identify the tubing assembly configuration and the tubing material before replacement.

SUBTASK 35-00-00-020-001

(3) Do these steps to remove the oxygen system tubing:

WARNING REMOVE ALL PRESSURE FROM THE OXYGEN SYSTEM BEFORE YOU START THE REMOVAL OF THE TUBING ASSEMBLY. A PRESSURIZED SYSTEM CAN CAUSE INJURY.

(a) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

(b) Get access to the tube or hose assembly fittings.

(c) Remove the support clamps on the tubing you will remove.

(d) Loosen the adjacent tubing assemblies and clamps if it is necessary.

(e) Remove the tubing or hose assembly from the airplane.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(f) To prevent contamination:

1) Make sure that any fittings, components, plugs or caps used are clean and free of contamination, and threaded chips.

2) Install a Flareless Tube Cap, 1/2-20 Thread, STD-1130, or a Flareless Tube Plug, 1/2-20 Thread, STD-1131, in each port (TASK 35-00-00-420-801).

3) Install a Flareless Tube Cap, 1/2-20 Thread, STD-1130, or a Flareless Tube Plug, 1/2-20 Thread, STD-1131, in the oxygen line (TASK 35-00-00-420-801).

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-00-00-900-001

(4) Install the assemblies with flareless and flared end fittings hand tight within five minutes after the removal of the protective plastic bag, G00624.

SUBTASK 35-00-00-900-002

(5) Do these steps before you install the oxygen system tubing or hoses:

(a) Examine the tube or hose ends and fittings for damage:

1) Look for damage or contamination that can prevent a good seal during the installation.

2) Look for worn areas or dents on the tube.

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

3) Make sure that any fittings, components, plugs or caps used are clean and free of contamination, and threaded chips.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

4) Replace the tube if necessary.

(b) To clean the components if it is necessary, do this task: Clean the Oxygen System Components, TASK 35-00-00-100-801.

(c) Do not apply lubrication during the installation.

NOTE: The dry film lubrication on the parts, as supplied, is satisfactory.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-420-005

(6) Do these steps to align the tubing or hose assembly:

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(a) Make sure that any fittings, components, plugs or caps used are clean and free of contamination, and threaded chips.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(b) Put the oxygen tubing or hose assembly in the correct location.

(c) Keep the tube clamps loose to let you align the tube in the fitting.

(d) Turn the tube by hand to align the tube end and the fitting.

(e) Make sure that the tube end touches the bottom of the fitting.

(f) Turn the B-nut by hand until the B-nut almost touches the bottom of the sleeve shoulder.

(g) Do not use the B-nut to align the tube.

CAUTION USE TWO WRENCHES TO TIGHTEN THE TUBE COUPLING NUTS. USE ONE TO HOLD THE MATING PART, AND THE OTHER TO TIGHTEN THE COUPLING NUT. IF YOU DO NOT USE TWO WRENCHES, DAMAGE TO THE TUBES AND MATING PART CAN OCCUR.

(h) Hold the union with a wrench and tighten the B-nut within 8 hours.

(i) For B-nuts used with steel tubes (CRES) tighten to the installation torque value in Table 201

(j) For B-nuts used with aluminum tubes tighten to the installation torque value in Table 202

(k) If you have a leak, you can loosen and tighten the B-nut again.

1) If the flareless tubing assembly is a reducer fitting, use the boss or bulkhead size to get the correct torque and tighten the assembly.

Table 201/35-00-00-993-801

Tube Dash No. Steel Tubes	Tube Size Inches	Torque Pound-Inches ±5% (Newton-Meters)
-05	5/16	190 (21.5)
-06	3/8	270 (30.5)
-08	1/2	500 (56.5)
-10	5/8	700 (79.1)
-12	3/4	900 (101.7)
-16	1	1200 (135.6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Table 202/35-00-00-993-802

Tube Dash No. Aluminum Tubes	Tube Size Inches	Torque Pound-Inches ±5% (Newton-Meters)
-05	5/16	140 (15.8)
-06	3/8	170 (19.2)
-08	1/2	280 (31.6)
-10	5/8	360 (40.7)
-12	3/4	450 (50.8)
-16	1	750 (84.7)

SUBTASK 35-00-00-420-006

(7) Do these steps on tubes where you cannot get a torque wrench on the tube:

(a) Tighten the nuts with your hand as follows:

1) Hand tighten until a clear increase in torque occurs, then tighten 1/6 to 1/3 turn more.

2) Tighten the flareless fittings with the BACS13AP sleeves two times (tighten, loosen, and tighten again).

NOTE: The maximum tube collapse permitted after you tighten the BACS13AP sleeves is 0.015 in. (0.381 mm) less than the tube inside diameter.

SUBTASK 35-00-00-410-001

CAUTION

ALWAYS KEEP THE CLAMPS TIGHT. TIGHT CLAMPS KEEP THE AREA BETWEEN THE TUBE AND THE CLAMP SURFACES FREE OF UNWANTED MATERIALS AND CONTAMINATION. IF SURFACES ARE NOT CLEAN, DAMAGE BY FRICTION CAN OCCUR.

(8) Tighten all of the tube clamps.

G. Pipe Threaded Fittings Replacement

SUBTASK 35-00-00-840-002

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-00-00-020-002

(2) When you disconnect fittings with teflon tape, make sure that the tape does not contaminate the oxygen system.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-420-007

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(3) Install pipe threaded fittings in the component boss within five minutes after you open the protective bag (TASK 35-00-00-420-801).

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-00-00-420-008

(4) Do these steps to apply teflon Nitto P-412 tape, G50310, to the pipe threaded fitting ends:

(a) Put the edge of the Nitto P-412 tape, G50310, on the fitting.

(b) Make sure that a minimum of 1-1/2 threads to a maximum of 2-1/2 threads remain uncovered at the start of the fitting.

(c) Pull the Nitto P-412 tape, G50310, around the threads to follow the thread contour.

(d) Apply 1-1/2 turns of Nitto P-412 tape, G50310, on fittings up to 1.5 in. (38.1 mm) in diameter.

(e) Apply 2 to 4 turns of Nitto P-412 tape, G50310, on fittings up to 1.5 in. (38.1 mm) in diameter and larger.

(f) Use narrow Nitto P-412 tape, G50310 (0.25 in. (6.4 mm) wide) when necessary, to make sure that the tape does not cover threaded fitting end.

SUBTASK 35-00-00-420-009

(5) Do these steps to install the pipe threaded fittings:

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(a) Make sure that any fittings, components, plugs or caps used are clean and free of contamination, and threaded chips.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(b) Install the fitting by hand a minimum of two turns until it stops in the thread.

(c) Tighten the fittings with a torque wrench to the minimum torque value in (Table 203) within 8 hours:

1) For pipe threaded fittings except CRES to CRES material combinations use the torque values in (Table 203).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

2) For pipe threaded fittings made of CRES to CRES material combinations use the torque values in (Table 204).

(d) Do not back off pipe threaded fittings.

(e) Use the maximum torque in (Table 203) or (Table 204) if there is a leak or for alignment.

Table 203/35-00-00-993-803

Fitting Size All Except CRES To CRES	Torque Value Pound-Inches (Newton-Meters) Minimum	Torque Value Pound-Inches (Newton-Meters) Maximum
5/16	175 (19.8)	300 (33.9)
3/8	225 (25.4)	450 (50.8)
1/2	300 (33.9)	600 (67.8)

Table 204/35-00-00-993-804

Fitting Size CRES to CRES	Torque Value Pound-Inches (Newton-Meters) Minimum	Torque Value Pound-Inches (Newton-Meters) Maximum
5/16	100 (11.3)	300 (33.9)
3/8	100 (11.3)	400 (45.2)
1/2	100 (11.3)	500 (56.5)
3/4	150 (16.9)	600 (67.8)
1	200 (22.6)	800 (90.4)

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN - SERVICING

1. General

A. This procedure contains these tasks:

(1) Servicing of the Crew Oxygen System

(2) Servicing of the Passenger Oxygen System

(3) Servicing of the Portable Oxygen System.

TASK 35-00-00-600-801

2. Servicing of the Crew Oxygen System

A. References

Reference	Title
12-15-21-600-804	Crew Oxygen Cylinder Replacement (P/B 301)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

C. Procedure

SUBTASK 35-00-00-910-020

(1) To read and obey the safety precautions and general maintenance instructions before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-00-00-610-002

(2) To service the crew oxygen system, do this task: Crew Oxygen Cylinder Replacement, TASK 12-15-21-600-804.

——— END OF TASK ———

TASK 35-00-00-600-802

3. Servicing of the Passenger Oxygen System

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-802	PSU Oxygen Generator Removal (P/B 401)
35-22-11-000-803	ASU Oxygen Generator Removal (P/B 401)
35-22-11-400-802	PSU Oxygen Generator Installation (P/B 401)
35-22-11-400-803	ASU Oxygen Generator Installation (P/B 401)
35-22-51-000-801	LSU Oxygen Cylinder (CDS) Removal (P/B 401)
35-22-51-400-801	LSU Oxygen Cylinder (CDS) Installation (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 35-00-00-910-021

(1) To read and obey the safety precautions and general maintenance instructions before you do

ECCN 9E991 BOEING PROPRIETARY - See title page for details

the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-00-00-610-003

(2) Do the applicable task to replace the chemical oxygen generator(s) or CDS oxygen cylinder(s):

(a) For the passenger service units do these tasks:

PSU Oxygen Generator Removal, TASK 35-22-11-000-802

PSU Oxygen Generator Installation, TASK 35-22-11-400-802

(b) For the attendant service units do these tasks:

ASU Oxygen Generator Removal, TASK 35-22-11-000-803

ASU Oxygen Generator Installation, TASK 35-22-11-400-803

(c) For the lavatory service units do these tasks:

LSU Oxygen Cylinder (CDS) Removal, TASK 35-22-51-000-801

LSU Oxygen Cylinder (CDS) Installation, TASK 35-22-51-400-801

——— END OF TASK ———

TASK 35-00-00-600-803

4. Portable Oxygen System Servicing

A. References

Reference	Title
35-31-01-960-801	Replace Portable Oxygen Cylinder (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 35-00-00-010-001

(1) Open the stowage compartment door, if applicable.

SUBTASK 35-00-00-960-001

(2) Replace the portable oxygen cylinders with fully serviced oxygen cylinders, do this task: Replace Portable Oxygen Cylinder, TASK 35-31-01-960-801.

SUBTASK 35-00-00-410-002

(3) Close the stowage compartment door, if applicable.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN - CLEANING/PAINTING

1. General

A. This procedure contains this task:

(1) Clean the Oxygen System Components.

TASK 35-00-00-100-801

2. Clean the Oxygen System Components

A. General

(1) When you do maintenance on the oxygen system, it is important that the work area is clean and free from contamination. If the work area is not clean, these conditions can occur:

(a) When contamination and an ignition source are near the oxygen, a fire or an explosion can occur.

(b) Contamination can inhibit the usual operation of the oxygen equipment.

(c) Contamination can supply dangerous fumes to the users of the oxygen equipment.

(2) All oxygen system components must be clean and dry when they are installed.

B. References

Reference	Title
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
OHM 20-30-03	Overhaul Manual
SOPM 20-30-80	Solvents For General Cleaning of Metal (Series 80)

C. Tools/Equipment

Reference	Description
STD-1130	Cap - Protective, Flareless Tube, 1/2-20 Thread
STD-1131	Plug - Protective, Flareless Tube, 1/2-20 Thread

D. Consumable Materials

Reference	Description	Specification
G00018	Nitrogen - Gaseous, Pressurizing, 99.5 Percent Pure	A-A-59503 Type I Grade B, MIL-PRF-27401 Type I Grade A
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00624	Bag - Plastic, General Purpose	

E. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Clean the Oxygen System Components

SUBTASK 35-00-00-910-022

(1) To read and obey the safety precautions and general instructions before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-00-00-140-001

(2) To remove surface contamination from oxygen system components, do this step:

(a) Rub the component(s) with a clean, dry, cotton wiper, G00034.

SUBTASK 35-00-00-140-002

(3) If you cannot remove the surface contamination with a dry cotton wiper, G00034 only, do this step:

WARNING DO NOT USE SOLVENT CLEANERS ON THE INNER OXYGEN SYSTEM COMPONENTS. USE ONLY SOLVENT CLEANERS ON THE OUTER OXYGEN SYSTEM COMPONENTS. IF YOU DO NOT OBEY THESE INSTRUCTIONS, INJURIES TO PERSONNEL AND DAMAGE TO THE EQUIPMENT CAN OCCUR.

(a) Clean the contamination with a clean cotton wiper, G00034, and approved cleaning solvent (SOPM 20-30-80), then rub the area dry.

SUBTASK 35-00-00-160-001

(4) Do these steps to clean the oxygen subassembly component(s):

(a) Disassemble or remove the oxygen component(s) from the airplane.

(b) Use the instructions in the manufacturers overhaul manual to clean the component(s).

CAUTION DO NOT PUT THE OXYGEN MASK HOSE NEAR THE ADJACENT STRUCTURE TO PREVENT RUBS OR KINKS. RUBS OR KINKS CAN CAUSE DAMAGE.

(c) To clean oxygen tubing and fittings, use an approved vapor degrease process (OHM 20-30-03).

(d) Use one of these compressed gases to thoroughly dry the component(s):

1) nitrogen, G00018.

WARNING MAKE SURE THAT THE AIR SOURCE ENGAGES THE SPECIFICATIONS GIVEN IN THE STEPS THAT FOLLOW. CONTAMINATION CAUSED BY HYDROCARBONS AND UNWANTED PARTICLES IN OXYGEN LINES CAN CAUSE FIRES OR EXPLOSIONS. IF YOU DO NOT OBEY, THE FIRE CAN CAUSE INJURY TO PERSONS AND DAMAGE TO THE AIRPLANE.

2) Clean nitrogen, G00018, with these specifications:

a) Hydrocarbon contamination - maximum allowable - 3 parts per million by weight as carbon or 7 parts per million as CH4.

b) Particulate contamination - maximum allowable - No particles or fiber greater than 100 micron in the longest dimension per cubic foot of air.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

c) Moisture contamination - maximum allowable - 0.00002 grams (water vapor per liter of air at 70°F (21°C), 760 mm Hg, which is equivalent to a dew point of -63.6°F (-53.1°C) at 760 mm Hg).

SUBTASK 35-00-00-530-001

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(5) If the component is not installed on the airplane immediately, do these steps to package the components for storage:

(a) Make sure that any fittings, components, plugs or caps are clean and free of contamination, and threaded chips.

(b) Immediately install approved, clean, Flareless Tube Cap, 1/2-20 Thread, STD-1130, or a Flareless Tube Plug, 1/2-20 Thread, STD-1131, on all oxygen system components, tubes and fittings (TASK 35-00-00-420-801).

NOTE: Flareless Tube Cap, 1/2-20 Thread, STD-1130, or a Flareless Tube Plug, 1/2-20 Thread, STD-1131, are not necessary for BAC, NAS, AN or MS standard fittings.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(c) Immediately put the components in clean individual sealed plastic bag, G00624.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN - DDG MAINTENANCE PROCEDURES

1. General

A. This procedure has the maintenance tasks for the Master Minimum Equipment List (MMEL) maintenance requirements as shown in the Dispatch Deviations Guide (DDG). These tasks prepare the airplane for flight with systems/components that are inoperative.

B. This procedure also has the tasks that put the airplane back to its usual condition.

C. These are the tasks for the components in the oxygen system:

(1) DDG 35-11-01 Flight Deck Crew Oxygen Pressure Indicator Inoperative - Preparation

(2) DDG 35-11-01 Flight Deck Crew Oxygen Pressure Indicator Inoperative - Restoration

(3) DDG 35-21-02-01 Passenger Oxygen Service Units Inoperative - Preparation

(4) DDG 35-21-02-01 Passenger Oxygen Service Units Inoperative - Restoration

(5) DDG 35-21-02-02 Attendant Oxygen Service Units Inoperative - Preparation

(6) DDG 35-21-02-02 Attendant Oxygen Service Units Inoperative - Restoration

(7) DDG 35-21-02-03 Lavatory Oxygen Service Units Inoperative - Preparation

(8) DDG 35-21-02-03 Lavatory Oxygen Service Units Inoperative - Restoration

(9) DDG 35-21-02-04 Passenger, Lavatory and Attendant Service Units Automatic Presentation Inoperative - Preparation

(10) DDG 35-21-02-05 Passenger, Lavatory and Attendant Service Units Door Latches Inoperative (FAA) - Preparation

(11) DDG 35-21-02-05 Passenger, Lavatory and Attendant Service Units Door Latches Inoperative (FAA) - Restoration

(12) DDG 35-31-01 Portable Oxygen Dispensing Units (Bottle and Mask) Inoperative (EASA) - Preparation

(13) DDG 35-31-01 Portable Oxygen Dispensing Units (Bottle and Mask) Inoperative (EASA) - Restoration.

TASK 35-00-00-040-804

2. DDG 35-11-01-01 Flight Deck Crew Oxygen Pressure Indicator Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight with the flight deck crew oxygen pressure indicator inoperative.

B. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Access Panels

Number	Name/Location
121LW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD FAN COVER

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Oxygen Pressure Indicator Preparation

SUBTASK 35-00-00-040-001

(1) Put an INOP placard on the crew oxygen pressure indicator.

NOTE: The crew oxygen pressure indicator is on the pilot's overhead panel, P5-14.

SUBTASK 35-00-00-010-002

(2) Open this access panel:

Number	Name/Location
121LW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD FAN COVER

SUBTASK 35-00-00-860-005

(3) Make sure that the crew oxygen cylinder shutoff valve is open.

SUBTASK 35-00-00-860-006

(4) Make sure that the oxygen pressure on the gauge is above the minimum required for flight.

(a) See the Boeing Flight Crew Operations Manual, Performance Dispatch section, for minimum required dispatch bottle pressure.

NOTE: Refer to flight crew oxygen tables for the appropriate passenger oxygen system configuration.

SUBTASK 35-00-00-410-003

(5) Close this access panel:

Number	Name/Location
121LW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD FAN COVER

——— END OF TASK ———

TASK 35-00-00-440-802

3. DDG 35-11-01-01 Flight Deck Crew Oxygen Pressure Indicator Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with the flight deck crew oxygen pressure indicator inoperative.

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Oxygen Pressure Indicator Restoration

SUBTASK 35-00-00-440-001

(1) Remove the INOP placard on the crew oxygen pressure indicator.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-00-00-040-801

4. DDG 35-21-02-01 Passenger Oxygen Service Units Inoperative - Preparation

A. General

(1) This task gives the maintenance steps that prepare the airplane for flight with the oxygen service unit inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Passenger Service Unit Preparation

SUBTASK 35-00-00-040-005

(1) Close the inoperative oxygen mask door and put adhesive tape.

SUBTASK 35-00-00-040-006

(2) Use adhesive tape or rope to block the seats with the inoperative units.

——— END OF TASK ———

TASK 35-00-00-440-804

5. DDG 35-21-02-01 Passenger Oxygen Service Units Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with the oxygen service unit inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Passenger Service Unit Restoration

SUBTASK 35-00-00-810-002

(1) Remove the adhesive tape used to keep the inoperative oxygen mask door closed.

SUBTASK 35-00-00-440-004

(2) Remove the adhesive tape or rope used to block the passenger seats.

——— END OF TASK ———

TASK 35-00-00-040-808

6. DDG 35-21-02-02 Attendant Oxygen Service Unit Inoperative - Preparation

A. General

(1) This task gives the maintenance steps that prepare the airplane for flight with the oxygen service unit inoperative.

B. References

Reference	Title
25-00-00-040-806	DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Preparation (P/B 901)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Attendant Service Unit Preparation

SUBTASK 35-00-00-040-010

(1) Close the inoperative oxygen mask door and put adhesive tape.

SUBTASK 35-00-00-040-011

(2) Use adhesive tape or rope to block the seats with the inoperative units.

SUBTASK 35-00-00-040-014

(3) Do this task: DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Preparation, TASK 25-00-00-040-806.

——— END OF TASK ———

TASK 35-00-00-440-810

7. DDG 35-21-02-02 Attendant Oxygen Service Unit Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with the oxygen service unit inoperative.

B. References

Reference	Title
25-00-00-440-806	DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Restoration (P/B 901)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Attendant Service Unit Restoration

SUBTASK 35-00-00-440-008

(1) Remove the adhesive tape used to keep the inoperative oxygen mask door closed.

SUBTASK 35-00-00-440-010

(2) Do this task: DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Restoration, TASK 25-00-00-440-806.

SUBTASK 35-00-00-440-009

(3) Remove the adhesive tape or rope used to block the attendant seats.

——— END OF TASK ———

TASK 35-00-00-040-809

8. DDG 35-21-02-03 Lavatory Oxygen Service Unit Inoperative - Preparation

A. General

(1) This task gives the maintenance steps that prepare the airplane for flight with the oxygen service unit inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Lavatory Service Unit Preparation

SUBTASK 35-00-00-040-012

(1) Close the inoperative oxygen mask door and put adhesive tape.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-00-00-040-013

(2) Close and lock the lavatory door and put an INOPERATIVE - DO NOT ENTER placard.

NOTE: Lavatory inspections by crew members are allowed.

——— END OF TASK ———

TASK 35-00-00-440-811

9. DDG 35-21-02-03 Lavatory Oxygen Service Unit Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with the oxygen service unit inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Lavatory Service Unit Restoration

SUBTASK 35-00-00-440-006

(1) Remove the adhesive tape used to keep the inoperative oxygen mask door closed.

SUBTASK 35-00-00-440-007

(2) Remove the INOPERATIVE - DO NOT ENTER placard from the door and unlock the lavatory door.

——— END OF TASK ———

TASK 35-00-00-040-802

10. DDG 35-21-02-04 Passenger, Attendant, and Lavatory Oxygen Service Units Automatic Presentation Inoperative - Preparation

A. General

(1) This task gives the maintenance steps that prepare the airplane for flight with the automatic presentation system inoperative.

B. References

Reference	Title
35-22-00-700-802	Passenger Oxygen System Manual Deploy Operational Test (P/B 501)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Automatic Deploy System Preparation

SUBTASK 35-00-00-710-001

(1) Make sure that the manual deployment system operates correctly, do this task: Passenger Oxygen System Manual Deploy Operational Test, TASK 35-22-00-700-802.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-00-00-040-803

11. DDG 35-21-02-05 Passenger, Lavatory and Attendant Service Units Door Latches Inoperative (FAA) - Preparation

A. General

(1) This procedure gives the maintenance steps that prepare the airplane for flight with the service unit door latches inoperative.

(2) This procedure is only for aircraft using the FAA MMEL. DDG. Maintenance procedures with no regulatory authority identification in the procedure title apply to both FAA and EASA MMELs.

B. References

Reference	Title
35-22-11-000-802	PSU Oxygen Generator Removal (P/B 401)
35-22-11-400-802	PSU Oxygen Generator Installation (P/B 401)
35-22-31-440-801	PSU Oxygen Mask Packing (P/B 201)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Door Latches (Unlatched) Preparation

SUBTASK 35-00-00-010-004

(1) Open the applicable oxygen mask door on the service unit.

SUBTASK 35-00-00-720-001

(2) Make sure that the oxygen generator has not been activated.

NOTE: If the color band is black, replace the generator.

SUBTASK 35-00-00-400-001

(3) If necessary, do these tasks to replace the oxygen generator:

(a) PSU Oxygen Generator Removal, TASK 35-22-11-000-802

(b) PSU Oxygen Generator Installation, TASK 35-22-11-400-802.

SUBTASK 35-00-00-840-003

(4) Make sure that the oxygen masks are packed correctly, do this task: PSU Oxygen Mask Packing, TASK 35-22-31-440-801.

SUBTASK 35-00-00-410-005

(5) Close the oxygen mask door on the service unit.

SUBTASK 35-00-00-420-010

(6) Put a piece of tape on the oxygen mask door to keep the door closed.

(a) Fold a piece of tape to make a handle approximately 4 in. (102 mm) long (non-adhesive side out).

(b) Put the tape handle over the tape that is used to keep the service unit oxygen mask door closed.

(c) Make sure that the tape handle hangs down approximately 4 in. (102 mm).

NOTE: The tape handle will allow the passenger to manually open the oxygen mask door if the oxygen masks are needed in an emergency.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-00-00-440-806

12. DDG 35-21-02-05 Passenger, Lavatory and Attendant Service Units Door Latches Inoperative (FAA) - Restoration

A. General

(1) This procedure puts the airplane back to its usual condition after operation with the service unit door latches inoperative.

(2) This procedure is only for aircraft using the FAA MMEL. DDG. Maintenance procedures with no regulatory authority identification in the procedure title apply to both FAA and EASA MMELs.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Door Latches (Unlatched) Restoration

SUBTASK 35-00-00-020-003

(1) Remove the tape handle and tape used to keep the inoperative oxygen mask door closed.

——— END OF TASK ———

TASK 35-00-00-040-806

13. DDG 35-31-01 Portable Oxygen Dispensing Units (Bottle and Mask) Inoperative (EASA) - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight with portable oxygen dispensing units inoperative.

(2) This procedure is only for aircraft using the European Aviation Safety Agency (EASA) Master Minimum Equipment List (MMEL). DDG Maintenance procedures with no regulatory authority identification in the procedure title apply to both Federal Aviation Administration (FAA) and EASA MMELs.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Portable Oxygen Deactivation

SUBTASK 35-00-00-200-003

(1) Make sure that necessary number of operative portable oxygen dispensing units are in the airplane.

SUBTASK 35-00-00-610-004

(2) Stow the units that do not operate correctly in a location where they will not be used.

SUBTASK 35-00-00-610-006

(3) Remove or cover the locator placard for the out of service units.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-00-00-440-808

14. DDG 35-31-01 Portable Oxygen Dispensing Units (Bottle and Mask) Inoperative (EASA) - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with portable oxygen dispensing units inoperative.

(2) This procedure is only for aircraft using the European Aviation Safety Agency (EASA) Master Minimum Equipment List (MMEL). DDG Maintenance procedures with no regulatory authority identification in the procedure title apply to both Federal Aviation Administration (FAA) and EASA MMELs.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Portable Oxygen Restoration

SUBTASK 35-00-00-810-007

(1) Make sure that the minimum quantity of portable oxygen dispensing units for flight are fully serviced and operate correctly.

SUBTASK 35-00-00-610-005

(2) Restore the portable oxygen cylinder locator placard.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN SYSTEM - MAINTENANCE PRACTICES

1. General

A. This procedure contains these tasks:

(1) Bleeding the Crew Oxygen System Prior to System Maintenance or Repair.

(2) Leak Test the Crew Oxygen System After System Maintenance or Repair.

(3) Crew Oxygen System - Deactivation.

(4) Crew Oxygen System - Activation.

TASK 35-12-00-800-801

2. Bleed the Crew Oxygen System Prior to System Maintenance or Repair

(Figure 201, Figure 202)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
50-11-01-000-801	Forward Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Prepare to Bleed the Crew Oxygen System

SUBTASK 35-12-00-910-001

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-00-860-001

(2) Do these steps to close the oxygen shutoff valve on the crew oxygen cylinder (Figure 201).

NOTE: The crew oxygen cylinder is behind a panel on the forward wall of the forward cargo compartment.

(a) Remove the bottom center cargo compartment panel from the front of the forward cargo compartment (TASK 50-11-01-000-801).

(b) Remove the lockwire from the shutoff valve.

CAUTION

MANUALLY CLOSE THE SHUTOFF VALVE. IF YOU TIGHTEN THE SHUTOFF VALVE TOO MUCH (25 IN-LB N•M, MAXIMUM), DAMAGE TO THE VALVE CAN OCCUR.

(c) Manually close the shutoff valve 25 in-lb (2.8 N·m) maximum.

D. Bleed the Crew Oxygen System (WITH EROS MF10/MF20/MF40 and ORONASAL MC10 MASKS)

SUBTASK 35-12-00-870-001

(1) Do these steps to bleed the crew oxygen system:

(a) Go to the captain's oxygen stowage box (View A, Figure 202).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Push and hold the RESET-TEST lever on the stowage box in the direction of the arrow.

(c) Push the DILUTION CONTROL switch on the mask/regulator assembly to the 100% position (View B, Figure 202).

(d) Push and hold the EMERGENCY selector switch on the mask/regulator assembly.

(e) Release the RESET-TEST lever and the EMERGENCY selector switch when the flow blinker on the stowage box changes from a yellow cross to all black.


(f) When the flow of oxygen stops, push the DILUTION CONTROL switch to the N (normal) position.


SUBTASK 35-12-00-860-024

(2) Do the applicable maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

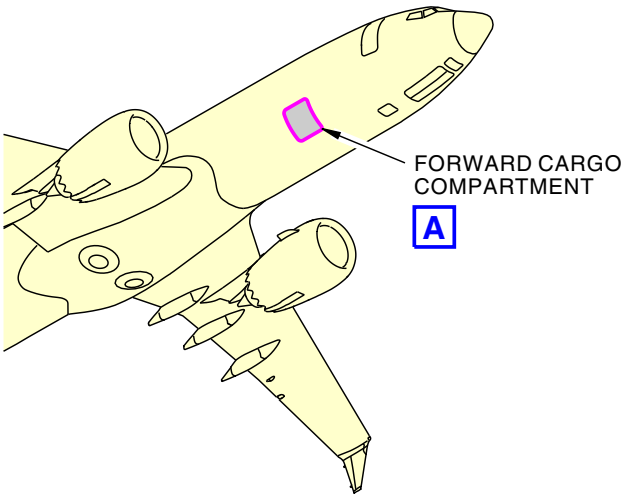

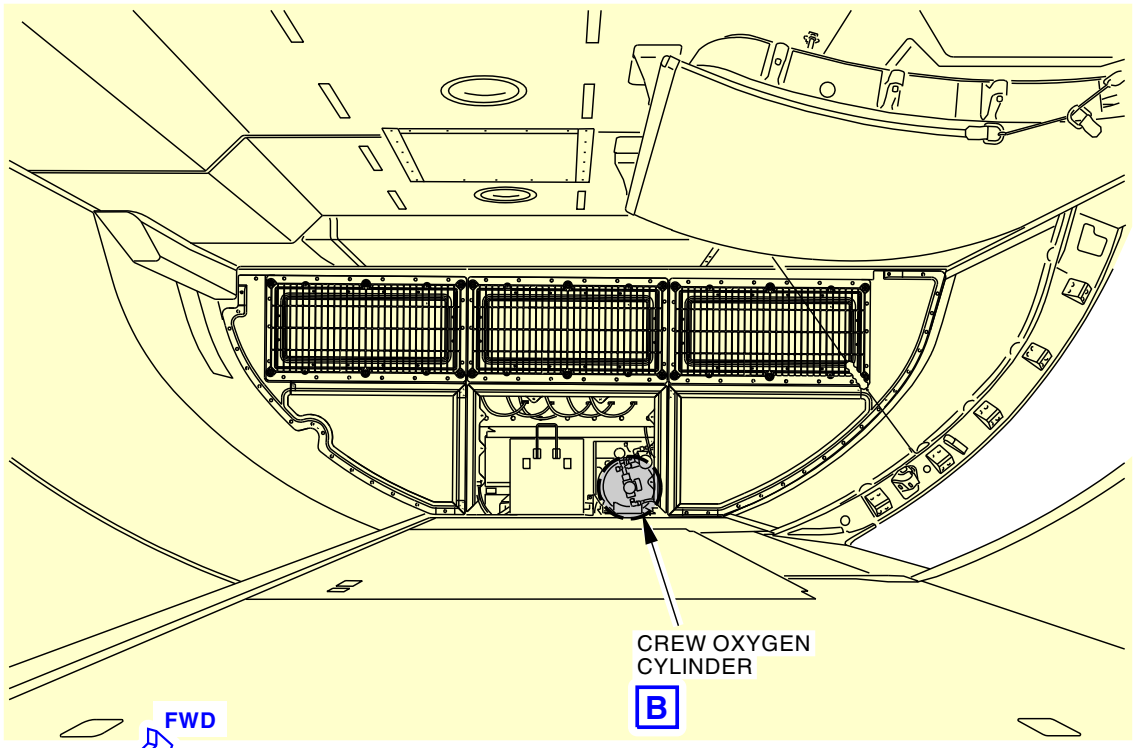


FORWARD CARGO COMPARTMENT

A

2414910 S00061536575_V2

Crew Oxygen Cylinder - Bleed System
Figure 201/35-12-00-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

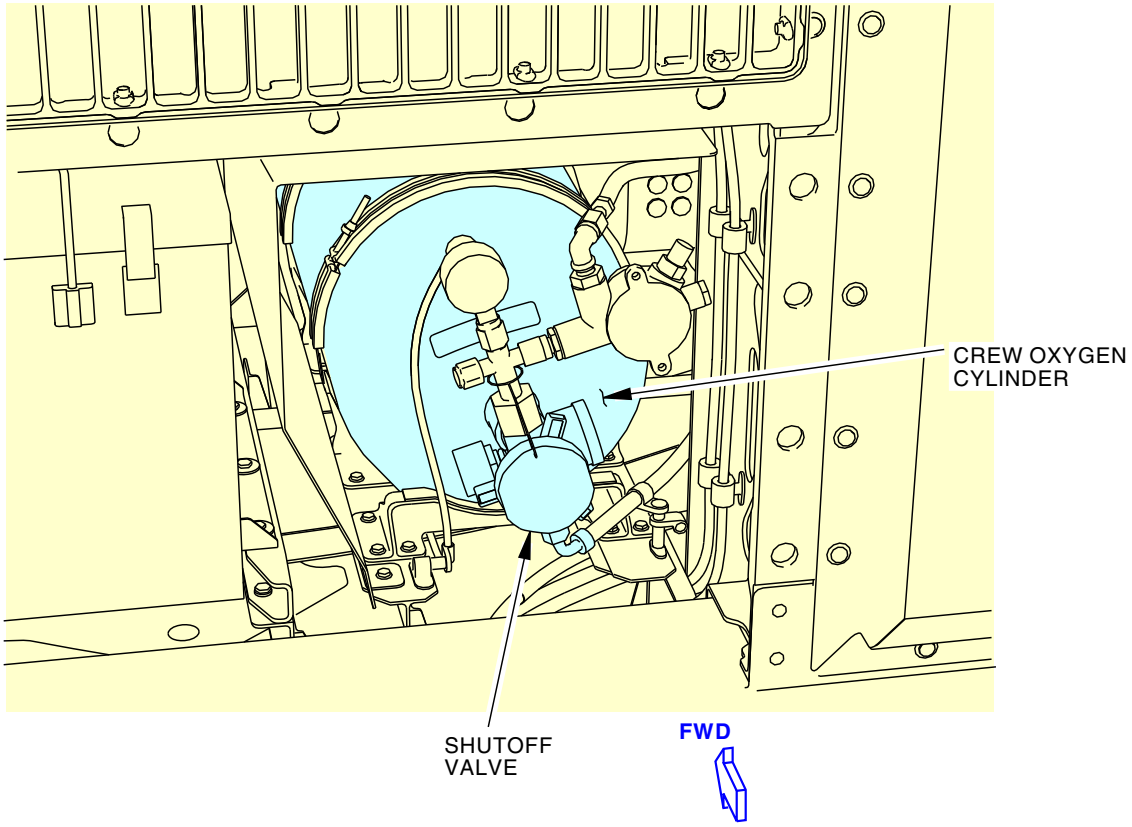


CREW OXYGEN CYLINDER (EXAMPLE)


B

2414911 S00061536576_V1

Crew Oxygen Cylinder - Bleed System
Figure 201/35-12-00-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

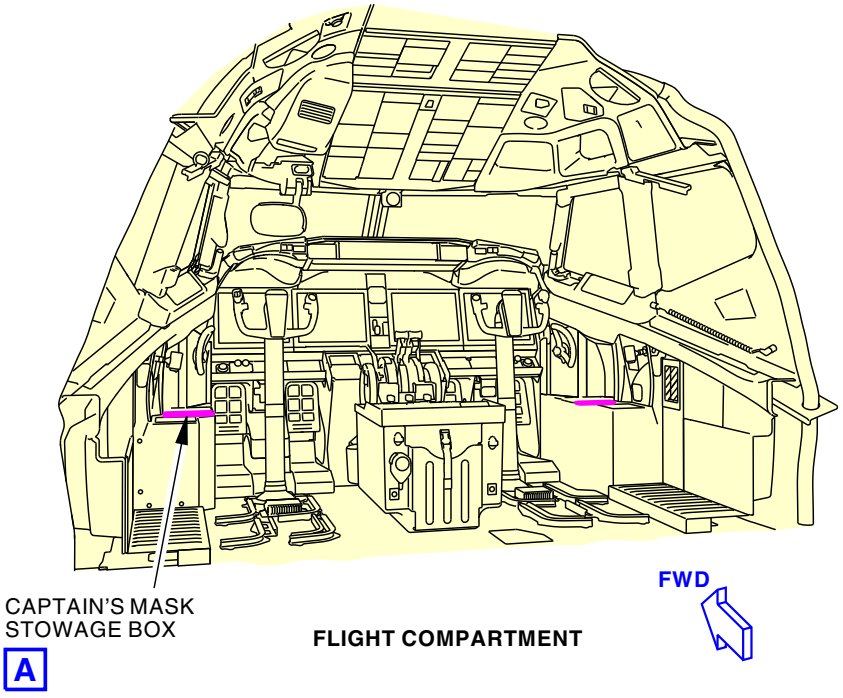

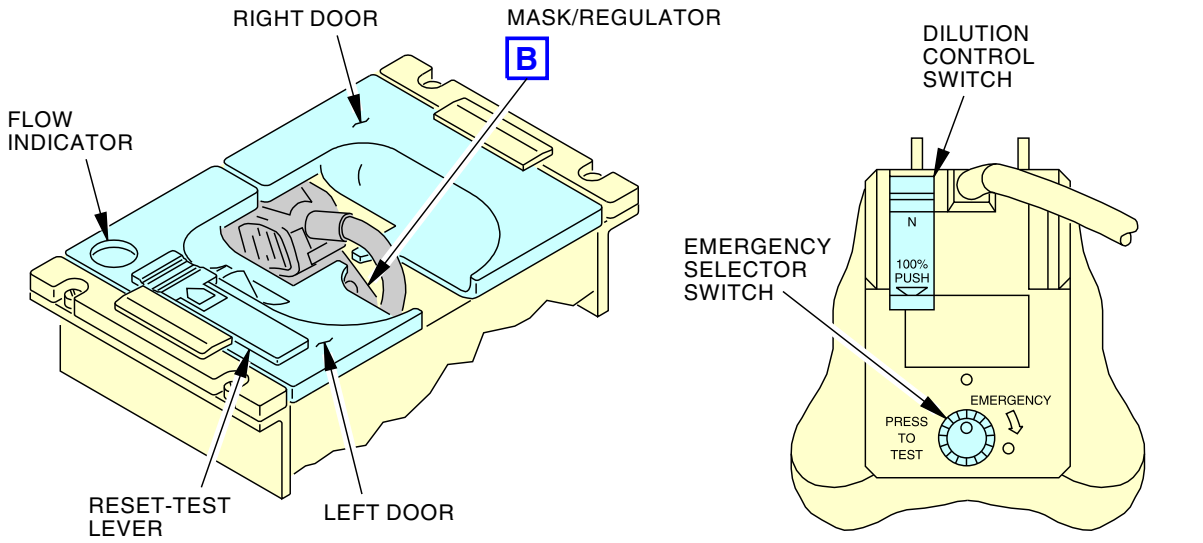

CAPTAIN'S MASK STOWAGE BOX

A

MASK/REGULATOR

B

2414912 S00061536577_V1

Mask Stowage Box - Bleed System
Figure 202/35-12-00-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-00-800-802

3. Leak Test the Crew Oxygen System After System Maintenance or Repair

(Figure 201, Figure 202)

A. References

Reference	Title
20-10-44-400-801	Lockwire, Cotter Pins, and Lockrings - Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-710-801	Crew Oxygen Pressure Indication Visual Check (P/B 501)
35-12-00-710-802	Crew Oxygen System Pressure Decay Leak Check (P/B 601)
50-11-01-400-801	Forward Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G01912	Lockwire - MS20995NC32, Monel - 0.032 Inch (0.8128 mm) Diameter	NASM20995
G02479	Lockwire - MS20995CY20, Copper - 0.020 Inch (0.508 mm) Diameter	NASM20995
G50306	Compound - Leak Detection, Oxygen System	MIL-PRF-25567 (BAC5402)

C. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Pressurize the Crew Oxygen Cylinder

SUBTASK 35-12-00-910-002

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-00-940-001

(2) Do these steps to pressurize the crew oxygen system:

(a) Go to the crew oxygen system cylinder (View A, Figure 201).

(b) Make sure that all of the tubes and components are tightened to the correct torque.

WARNING

OPEN THE SHUTOFF VALVE SLOWLY. YOU CAN CAUSE HIGH TEMPERATURES IN THE OXYGEN SYSTEM IF YOU OPEN THE SHUTOFF VALVE QUICKLY. HIGH TEMPERATURES CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

CAUTION MANUALLY OPEN THE SHUTOFF VALVE. IF YOU OPEN THE SHUTOFF VALVE TOO MUCH (MORE THAN 25 IN-LB [2.8 N•M]), DAMAGE TO THE VALVE CAN OCCUR.

(c) Slowly open the shutoff valve on the oxygen cylinder with your hand until it is fully open.

NOTE: The force necessary to open the valves on composite cylinders can increase before the valves are fully open.

(d) Close the shutoff valve one quarter of a turn.

(e) Do the crew oxygen system leak detection below.

1) If there is an obvious leak, close the shutoff valve and repair the problem.

E. Crew Oxygen System Leak Detection

SUBTASK 35-12-00-790-001

(1) Apply the leak detection compound, G50306, to all connections that were disconnected.

SUBTASK 35-12-00-790-002

(2) Use a mirror and a light when necessary to look at areas that are not easy to see.

SUBTASK 35-12-00-790-003

(3) Do a check for leaks at all applicable connections (look for bubbles in the leak detection compound).

SUBTASK 35-12-00-790-004

(4) If there is not a leak, use a clean lint free cotton wiper, G00034, to remove the leak detection compound, G50306, immediately.

SUBTASK 35-12-00-790-005

(5) If there is a leak, do these steps:

CAUTION MANUALLY CLOSE THE SHUTOFF VALVE. IF YOU TIGHTEN THE SHUTOFF VALVE TOO MUCH (25 IN-LB N•M, MAXIMUM), DAMAGE TO THE VALVE CAN OCCUR.

(a) Manually close the shutoff valve 25 in-lb (2.8 N·m) maximum.

(b) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

(c) Tighten the connection with a leak to the correct torque value.

WARNING OPEN THE SHUTOFF VALVE SLOWLY. YOU CAN CAUSE HIGH TEMPERATURES IN THE OXYGEN SYSTEM IF YOU OPEN THE SHUTOFF VALVE QUICKLY. HIGH TEMPERATURES CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

CAUTION MANUALLY OPEN THE SHUTOFF VALVE. IF YOU OPEN THE SHUTOFF VALVE TOO MUCH (MORE THAN 25 IN-LB [2.8 N•M]), DAMAGE TO THE VALVE CAN OCCUR.

(d) Slowly open the shutoff valve with your hand until it is fully open.

NOTE: The force necessary to open the valves on composite cylinders can increase before the valves are fully open.

(e) Check for leaks again with the leak detection compound, G50306.

(f) If you cannot stop a leak, replace the bad component.

SUBTASK 35-12-00-420-001

(6) After you have checked and repaired the leaks, do the subsequent procedure.

F. Lockwire the Shutoff Valve on the Crew Oxygen Cylinder

SUBTASK 35-12-00-420-002

(1) When the oxygen system is satisfactory, do these steps to lockwire the shutoff valve in the open position, do this task: Lockwire, Cotter Pins, and Lockrings - Installation, TASK 20-10-44-400-801.

(a) Make sure that the shutoff valve is fully open.

NOTE: The shutoff valve on the 801307-00 steel cylinder is fully open at approximately 6.5 revolutions. The shutoff valve on the B42365-1 composite cylinder is fully open at approximately 4 revolutions. The shutoff valve on the 806835-01 composite cylinder is fully open at approximately 6.5 revolutions.

NOTE: The force necessary to open the valves on composite cylinders can increase before the valves are fully open.

(b) Close the shutoff valve one quarter of a turn.

(c) Use MS20995NC32 lockwire, G01912, or MS20995CY20 lockwire, G02479, to hold the shutoff valve in the open position.

1) Wrap the lockwire around the coupling assembly in a counter-clockwise direction.

2) Use the double-twist method.

SUBTASK 35-12-00-210-005

(2) Make sure that this circuit breaker is closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

G. System Operational Check (WITH EROS MF10/MF20/MF40 and ORONASAL MC10 MASKS)

SUBTASK 35-12-00-010-003

(1) Get access to the captains or the first officers mask stowage box (Figure 202).

SUBTASK 35-12-00-710-033

(2) Push and hold the RESET-TEST LEVER of the mask stowage box to the TEST position.

(a) Make sure that the flow indicator of the oxygen stowage box shows a yellow flow indication.

(b) Make sure that you hear the release of gas.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Make sure that the flow indicator goes back to the zero flow indication (black).

NOTE: After the mask is inflated, the flow indicator will show that there is no flow.

SUBTASK 35-12-00-710-034

(3) Continue to hold the RESET-TEST LEVER of the mask stowage box in the TEST position and do these steps:

(a) Push and hold the knob of the EMERGENCY SELECTOR SWITCH on the mask regulator for 5 seconds.

(b) Make sure that the FLOW INDICATOR of the oxygen stowage box shows a yellow flow indication.

(c) Make sure that the pressure on the pressure indicator on the P5-14 panel does not decrease more than 100 psig (689 kPa).

NOTE: If the pressure decreases more than 100 psig (689 kPa), or it increases slowly, this shows that the supply is not sufficient.

1) If the pressure decreases more than 100 psig (689 kPa) or if it increases slowly, do these steps:

a) Make sure that the oxygen cylinder valve is fully open and repeat the steps again.

b) If the condition continues, then do this task: Crew Oxygen System Pressure Decay Leak Check, TASK 35-12-00-710-802.

2) Make sure that you can hear the flow of oxygen.

3) Release the knob of the EMERGENCY SELECTOR SWITCH.

a) Make sure that the flow indicator of the stowage box shows a zero flow indication (black).

4) Release the TEST-RESET LEVER of the mask stowage box.

a) Make sure that the TEST-RESET LEVER goes to its usual position.

SUBTASK 35-12-00-710-035

(4) Open the left door on the mask stowage box.

NOTE: This step will open the shutoff valve of the stowage box.

(a) Momentarily push the knob of the EMERGENCY SELECTOR SWITCH on the mask regulator.

1) Make sure that the FLOW INDICATOR of the oxygen stowage box shows a yellow flow indication.

SUBTASK 35-12-00-860-018

(5) Make sure that the DILUTION CONTROL SWITCH is set to 100% oxygen.

SUBTASK 35-12-00-410-008

(6) Close the left door on the mask stowage box.

(a) Make sure that the OXYGEN ON FLAG of the stowage box shows.

SUBTASK 35-12-00-440-001

(7) Push the TEST-RESET lever again to reset the shutoff valve of the mask stowage box.

(a) Make sure that the OXYGEN ON FLAG of the stowage box does not show.

SUBTASK 35-12-00-700-001

(8) Do the test again for the other crew oxygen masks, if it is necessary.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

H. Put the Airplane Back to Its Usual Condition

SUBTASK 35-12-00-710-001

(1) Do this task: Crew Oxygen Pressure Indication Visual Check, TASK 35-12-00-710-801.

SUBTASK 35-12-00-410-001

(2) Install the center bottom cargo compartment panel to the front of the cargo compartment (TASK 50-11-01-400-801).

——— END OF TASK ———

TASK 35-12-00-040-801

4. Crew Oxygen System - Deactivation

(Figure 203)

A. General

(1) This task will deactivate the crew oxygen system.

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

C. Crew Oxygen System - Deactivation

SUBTASK 35-12-00-870-002

(1) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

SUBTASK 35-12-00-860-003

(2) Open this circuit breaker and install safety tag:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

D. Tryout

NOTE: This tryout is to make sure the crew oxygen system is in a zero energy state.

SUBTASK 35-12-00-860-004

(1) Make sure that this circuit breaker is open and has safety tag:

CAPT Electrical System Panel, P18-3


Row	Col	Number	Name
F	7	C00156	OXYGEN IND


SUBTASK 35-12-00-860-005

(2) Make sure that the shutoff valve is closed and the crew oxygen supply line is not pressurized.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

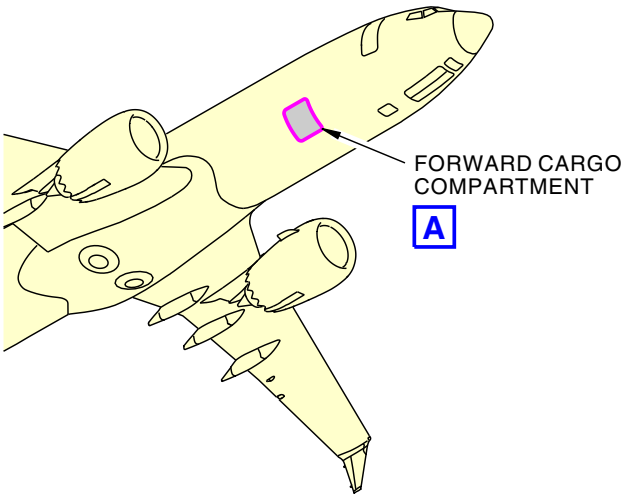

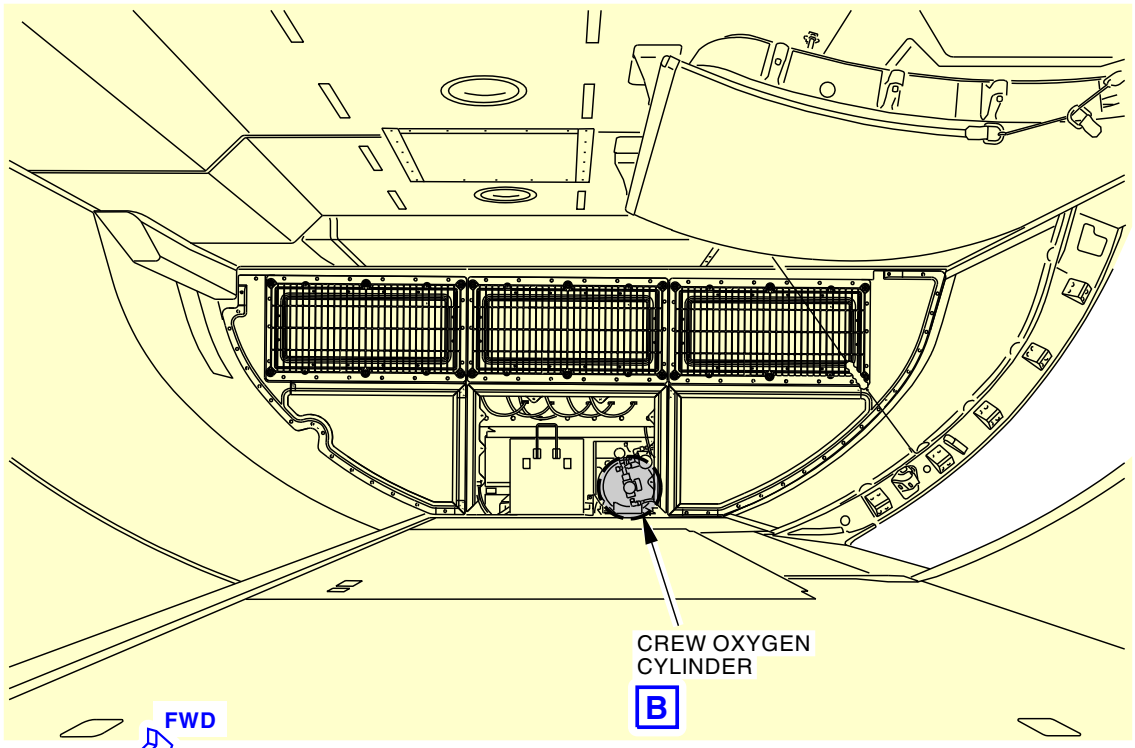


FORWARD CARGO COMPARTMENT

A

2414910 S00061536575_V2

Crew Oxygen Cylinder
Figure 203/35-12-00-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

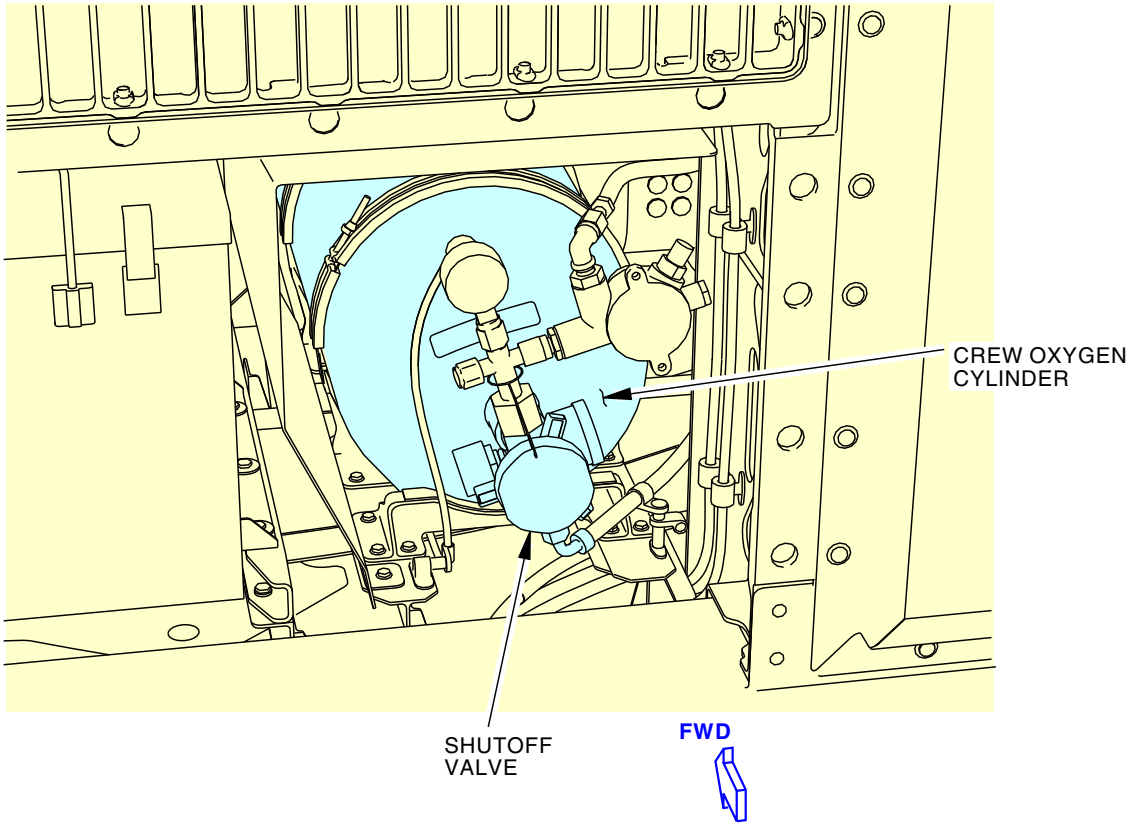

CREW OXYGEN CYLINDER (EXAMPLE)

B

2414911 S00061536576_V1

Crew Oxygen Cylinder
Figure 203/35-12-00-990-803 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-00-440-801

5. Crew Oxygen System - Activation

(Figure 203)

A. General

(1) This task will activate the crew oxygen system.

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

C. Crew Oxygen System - Activation

SUBTASK 35-12-00-860-006

(1) Do this task: Leak Test the Crew Oxygen System After System Maintenance or Repair, TASK 35-12-00-800-802.

SUBTASK 35-12-00-860-007

(2) Remove the safety tag and close this circuit breaker:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN SYSTEM - ADJUSTMENT/TEST

1. General

A. This procedure has these tasks:

(1) Crew Oxygen Stowage Box Test (Mask Stowed in Stowage Box)

(2) Crew Oxygen Mask-Regulator Test

(3) Crew Oxygen Pressure Indication Visual Check

TASK 35-12-00-700-801

2. Crew Oxygen Stowage Box Test (Mask Stowed in Stowage Box)

(Figure 501 or Figure 502)

A. General

(1) This test checks the mask-regulator stowed in the mask stowage box (in-situ).

(2) The mask-regulators must be stowed in the mask stowage boxes to do this test.

(3) This test uses oxygen supplied from the crew oxygen cylinder.

(4) To help you hear the flow of oxygen in the mask, set up the interphone communication speakers, do this task: Flight Interphone System Operational Test, TASK 23-51-00-710-801.

NOTE: The oxygen mask microphone will let you to hear the sound of the oxygen flow through the flight interphone speakers.

B. References

Reference	Title
23-51-00-710-801	Flight Interphone System Operational Test (P/B 501)
35-00-00-910-802	Safety Precautions (P/B 201)
35-12-85-910-801	Crew Oxygen Mask Stowage (P/B 201)

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Prepare for the Test

SUBTASK 35-12-00-910-003

(1) Read and obey the safety precautions and general instructions before you do the maintenance, do this task: Safety Precautions, TASK 35-00-00-910-802.

SUBTASK 35-12-00-840-001

(2) Make sure that the shutoff valve on the crew oxygen cylinder is open and the crew oxygen supply line is pressurized.

NOTE: The crew oxygen cylinder is behind the bottom center panel on the forward wall of the forward cargo compartment.

SUBTASK 35-12-00-840-002

(3) Make sure that the pressure indicator for the crew oxygen system shows a cylinder pressure of 150 psig (1034 kPa) to 1900 psig (13,100 kPa) (found on the aft overhead panel).

SUBTASK 35-12-00-840-003

(4) Make sure that the mask-regulator is connected and correctly stowed in the mask stowage box, do this task: Crew Oxygen Mask Stowage, TASK 35-12-85-910-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Mask Stowage Box Operational Test (WITH EROS MF10/MF20/MF40 and ORONASAL MC10 MASKS)

SUBTASK 35-12-00-710-002

(1) Go to the applicable mask stowage box found in the flight compartment.

SUBTASK 35-12-00-710-003

(2) Push and hold the reset-test lever, on the mask stowage box to the TEST position.

NOTE: Continue to hold the reset-test lever in the TEST position.

SUBTASK 35-12-00-710-004

(3) Look at the flow indicator, on the oxygen stowage box.

(a) Make sure that the flow indicator momentarily shows a yellow flow indication.

(b) Make sure that the flow indicator goes black to show a no-flow condition.

SUBTASK 35-12-00-710-005

(4) Momentarily push the EMERGENCY selector switch.

SUBTASK 35-12-00-710-006

(5) Look at the flow indicator, on the oxygen stowage box.

(a) Make sure that the flow indicator momentarily shows a yellow flow indication.

(b) Make sure that the flow indicator goes black to show a no-flow condition.

SUBTASK 35-12-00-710-007

(6) Make sure that you can hear the flow of oxygen.

SUBTASK 35-12-00-710-008

(7) Release the reset-test lever.

SUBTASK 35-12-00-710-009

(8) Make sure that the reset-test lever goes to the closed position.

SUBTASK 35-12-00-710-010

(9) Open the left door on the mask stowage box.

NOTE: This step will open the shutoff valve.

SUBTASK 35-12-00-710-011

(10) Push the N-100% control switch to the 100% position.

SUBTASK 35-12-00-710-012

(11) Momentarily push the EMERGENCY selector switch.

SUBTASK 35-12-00-710-013

(12) Make sure that you can hear the flow of oxygen.

SUBTASK 35-12-00-710-014

(13) Push the N-100% control switch to the (N) normal position.

SUBTASK 35-12-00-710-015

(14) Close the left door on the mask stowage box.

(a) Make sure that the OXY ON flag, on the left door of the stowage box, shows.

SUBTASK 35-12-00-710-016

(15) Push the reset-test lever to the RESET position, to set the shutoff valve again.

(a) Make sure that the OXY ON flag, on the left door of the stowage box, does not show.


ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 35-12-00-710-017

(16) Do the test again for the other flight crew mask stowage boxes.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

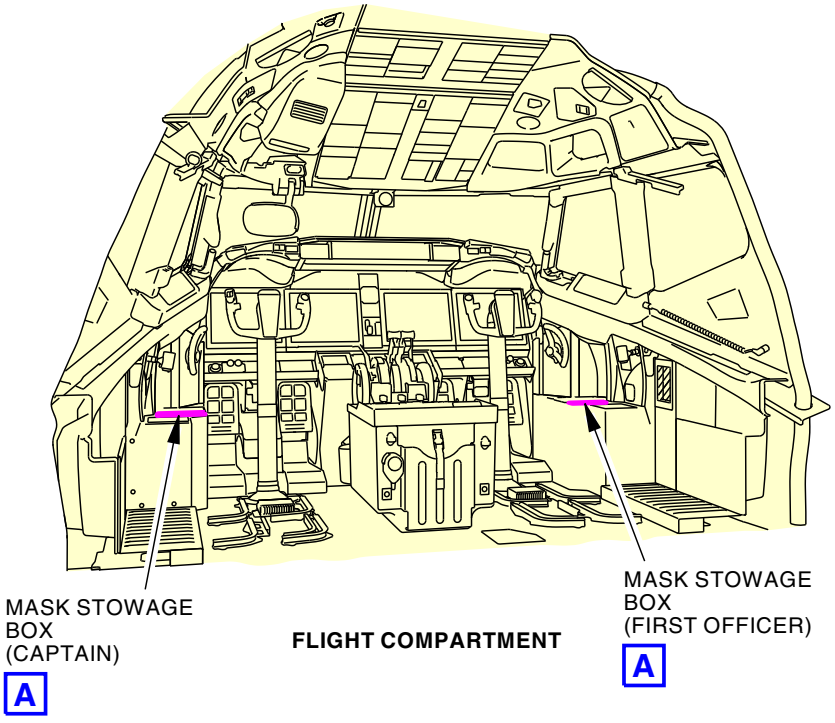


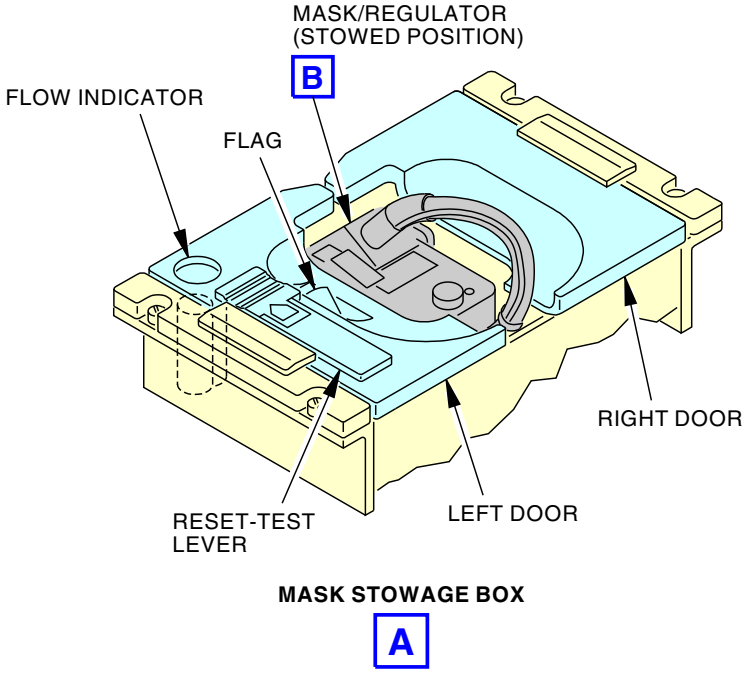

2414913 S00061536583_V1


Flight Crew Oxygen Stowage Box, Mask/Regulator Test
Figure 501/35-12-00-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

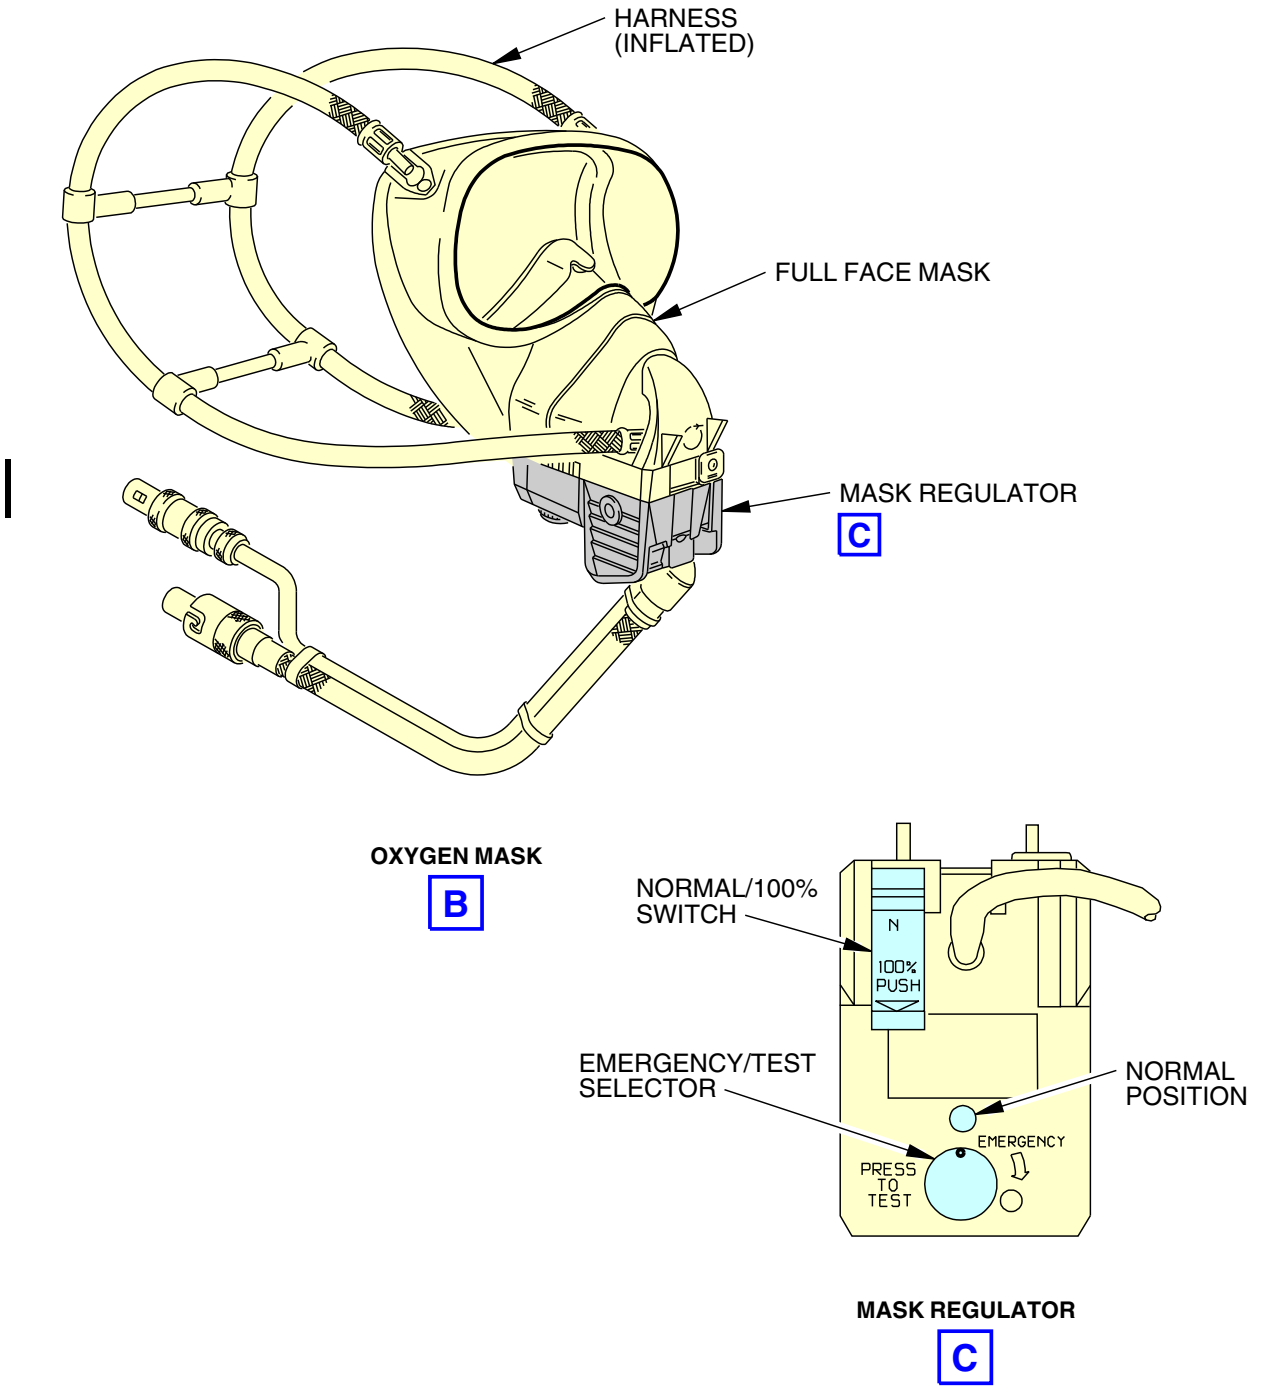


Flight Crew Oxygen Stowage Box, Mask/Regulator Test
Figure 501/35-12-00-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

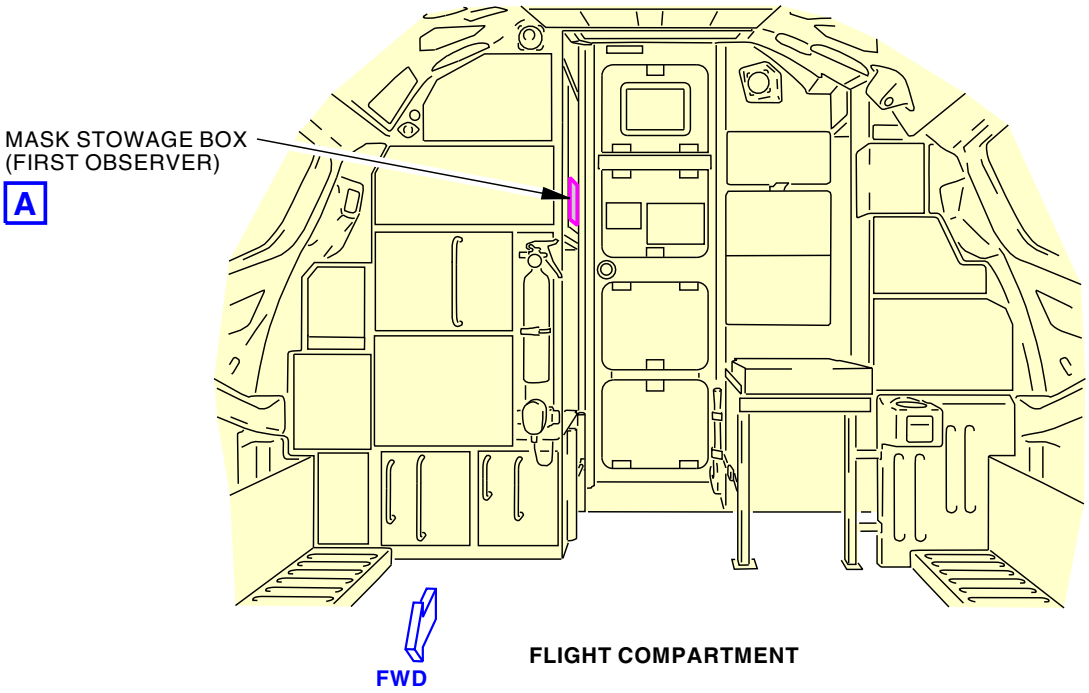

First Observer Oxygen Stowage Box, Mask/Regulator Test
Figure 502/35-12-00-990-805 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

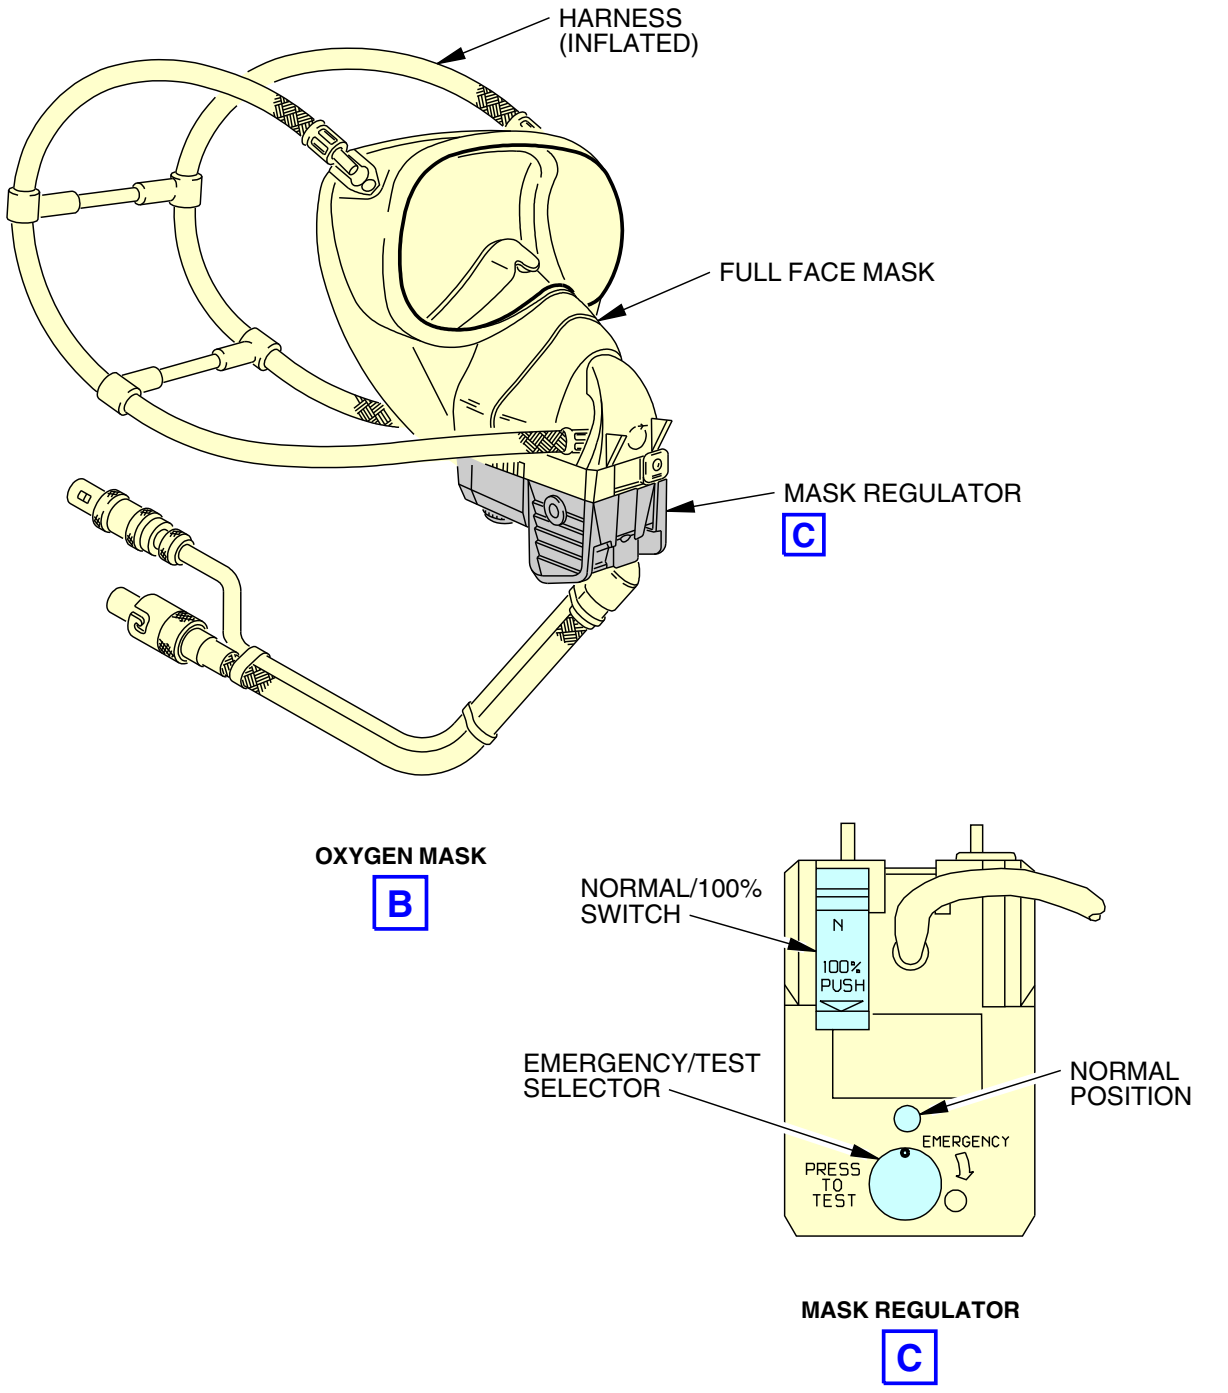

2414916 S00061536586_V2

First Observer Oxygen Stowage Box, Mask/Regulator Test
Figure 502/35-12-00-990-805 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-00-700-802

3. Crew Oxygen Mask-Regulator Test

(Figure 501 or Figure 502)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This test examines mask-regulator. The mask-regulator is removed from the mask stowage box or cup.

(2) This test uses oxygen supplied from the crew oxygen cylinder.

B. References

Reference	Title
23-51-00-710-801	Flight Interphone System Operational Test (P/B 501)
35-00-00-910-802	Safety Precautions (P/B 201)
35-12-85-100-801	Crew Oxygen Mask Cleaning (P/B 701)
35-12-85-910-801	Crew Oxygen Mask Stowage (P/B 201)

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Prepare for the Test

SUBTASK 35-12-00-910-004

(1) Read and obey the safety precautions and general instructions before you do the maintenance, do this task: Safety Precautions, TASK 35-00-00-910-802.

SUBTASK 35-12-00-860-011

(2) Make sure that these circuit breakers are closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 35-12-00-840-004

(3) Make sure that the shutoff valve on the crew oxygen cylinder is open and supply line is pressurized.

NOTE: The crew oxygen cylinder is behind the bottom center panel on the forward wall of the forward cargo compartment.

SUBTASK 35-12-00-840-005

(4) Make sure that the pressure indicator, on the P5 aft overhead panel, shows a cylinder pressure of 150 psig (1034 kPa) - 1900 psig (13,100 kPa).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-00-840-006

(5) Make sure that the mask-regulator is connected correctly to the mask stowage box.

E. Mask-Regulator Operational Test (WITH EROS MF10/MF20/MF40 and ORONASAL MC10 MASKS)

SUBTASK 35-12-00-010-001

(1) Pull the mask-regulator from the stowage box or cup.

NOTE: Do one mask-regulator at a time. Do the test again for the other flight crew mask-regulators.

SUBTASK 35-12-00-710-018

(2) Hold the mask-regulator, and push and hold the red harness inflation levers (View B, Figure 501 or Figure 502).

SUBTASK 35-12-00-710-019

(3) Make sure that the blinker on the stowage box turns yellow and then black in seconds.

NOTE: A blinker is not installed on mask stowage cups.

NOTE: This shows that the harness does not have a leak.

SUBTASK 35-12-00-710-020

(4) Put the mask-regulator unit on your head and on your face.

NOTE: The pneumatic harness will inflate until it holds your head.

SUBTASK 35-12-00-710-021

(5) Breathe through the mask-regulator unit with the NORMAL/100% switch turned to the NORMAL position, and when it is at the 100% position.

SUBTASK 35-12-00-710-022

(6) Make sure that the oxygen flow indicator shows flow.

NOTE: Stowage cups do not have a flow indicator.

SUBTASK 35-12-00-710-023

(7) Make sure that you can breathe correctly in each switch position.

SUBTASK 35-12-00-710-024

(8) With the lever set in the 100% position, turn the Emergency/Test Selector to the EMERGENCY position.

SUBTASK 35-12-00-710-025

(9) Make sure that you can breathe correctly.

NOTE: When you set the EMERGENCY position, a continuous oxygen flow is supplied. Breathing must be free.

SUBTASK 35-12-00-710-026

(10) After three breaths, turn the selector to the NORMAL position.

SUBTASK 35-12-00-710-027

(11) Do the communication test between each of the flight crew stations with the oxygen mask, do this task: Flight Interphone System Operational Test, TASK 23-51-00-710-801.

NOTE: Some masks do not have communication equipment installed.

SUBTASK 35-12-00-100-002

(12) Do this task: Crew Oxygen Mask Cleaning, TASK 35-12-85-100-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-00-410-003

(13) Do this task: Crew Oxygen Mask Stowage, TASK 35-12-85-910-801.

——— END OF TASK ———

TASK 35-12-00-710-801

4. Crew Oxygen Pressure Indication Visual Check

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the visual check of the crew oxygen pressure indication system.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Crew oxygen pressure indicator	31-11-95-01-010	PTF ALL

D. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

E. Prepare for the Visual Check

SUBTASK 35-12-00-910-005

(1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-00-860-017

(2) Make sure that this circuit breaker is closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

F. Crew Oxygen Pressure Indication Visual Check

SUBTASK 35-12-00-860-014

(1) Make sure that the crew oxygen cylinder shutoff valve is in the open position.

NOTE: The crew oxygen cylinder is behind the bottom center panel on the forward wall of the forward cargo compartment.

SUBTASK 35-12-00-710-028

(2) Do these steps to make sure the oxygen pressure indication system is operational:

(a) Compare the values of these pressure gages:


1) The crew oxygen pressure indicator [1] in the flight compartment, pilot's aft overhead, P5-14 panel.


2) The crew oxygen cylinder pressure gage in the forward cargo bay.

(b) Make sure that the pressure difference is less than 100 psig (689 kPa).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

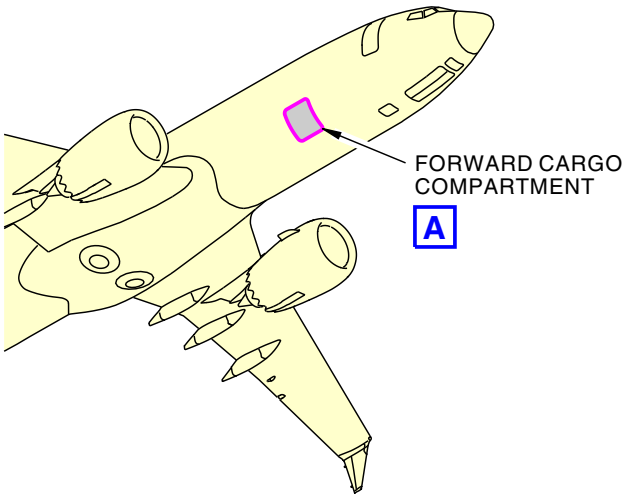

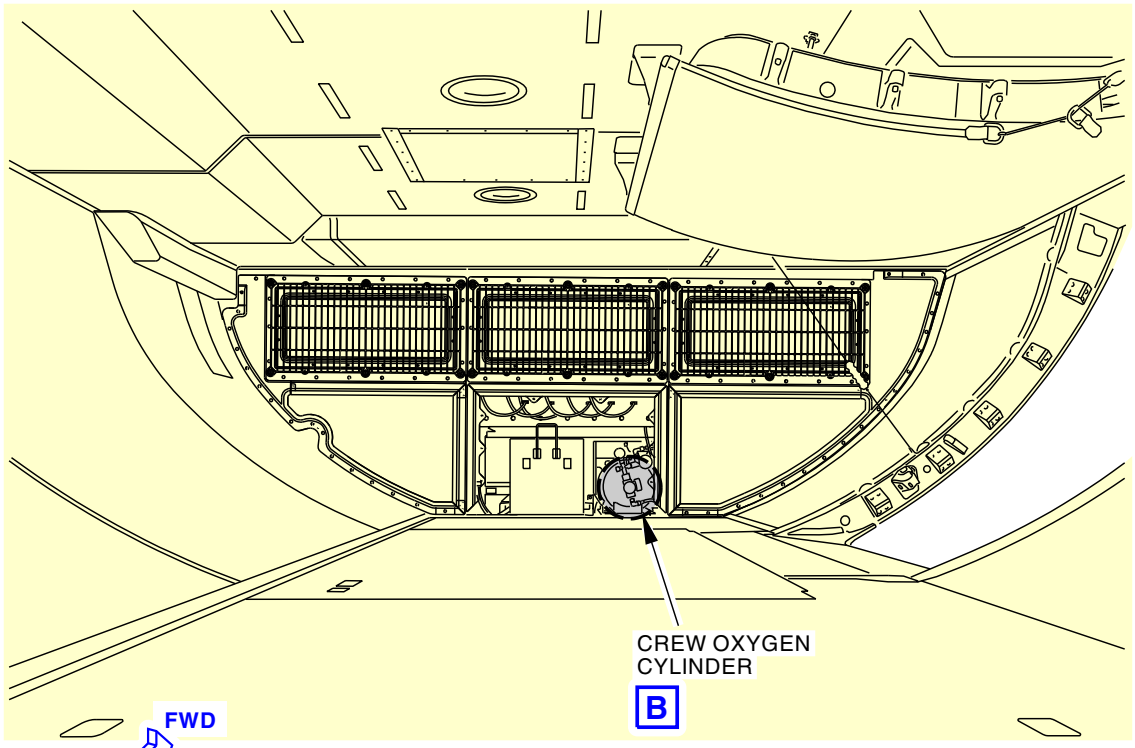


FORWARD CARGO COMPARTMENT

A

2414919 S00061536591_V2

Crew Oxygen System Pressure Indication
Figure 503/35-12-00-990-807 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

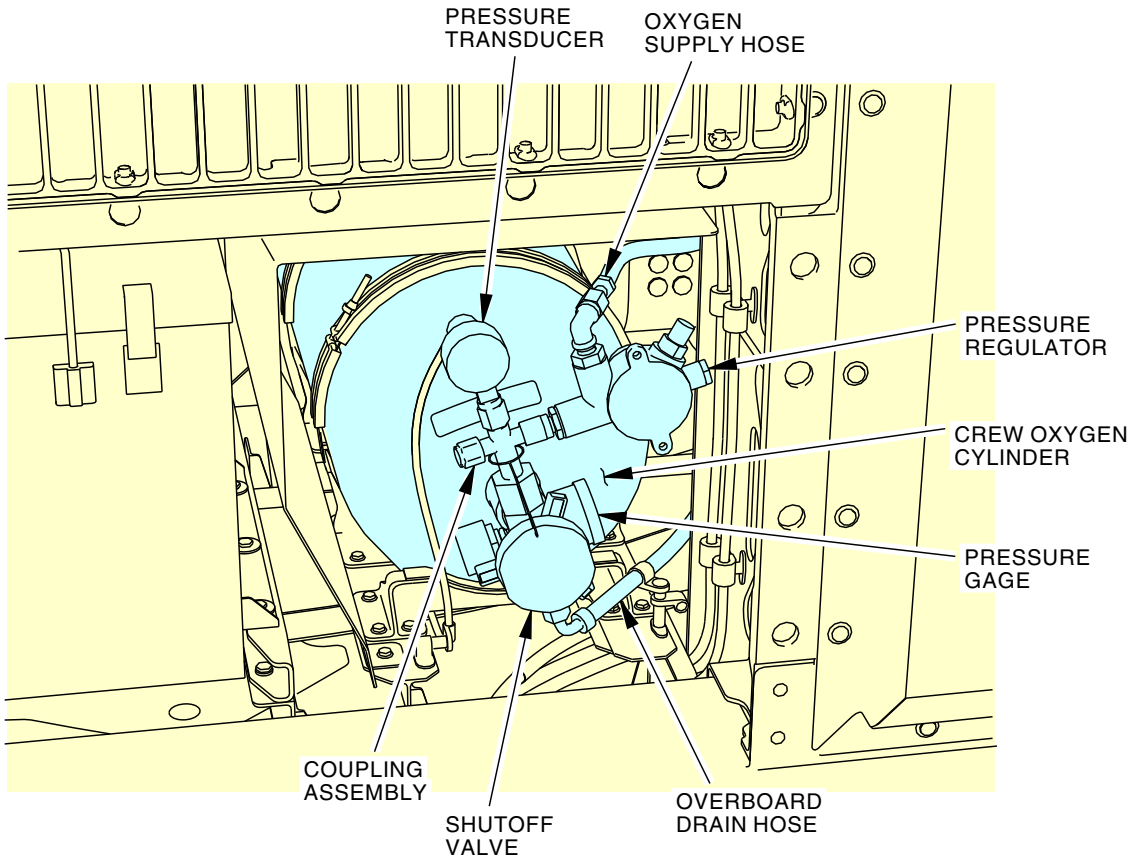


CREW OXYGEN CYLINDER (EXAMPLE)

B

2414920 S00061536592_V1

Crew Oxygen System Pressure Indication
Figure 503/35-12-00-990-807 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

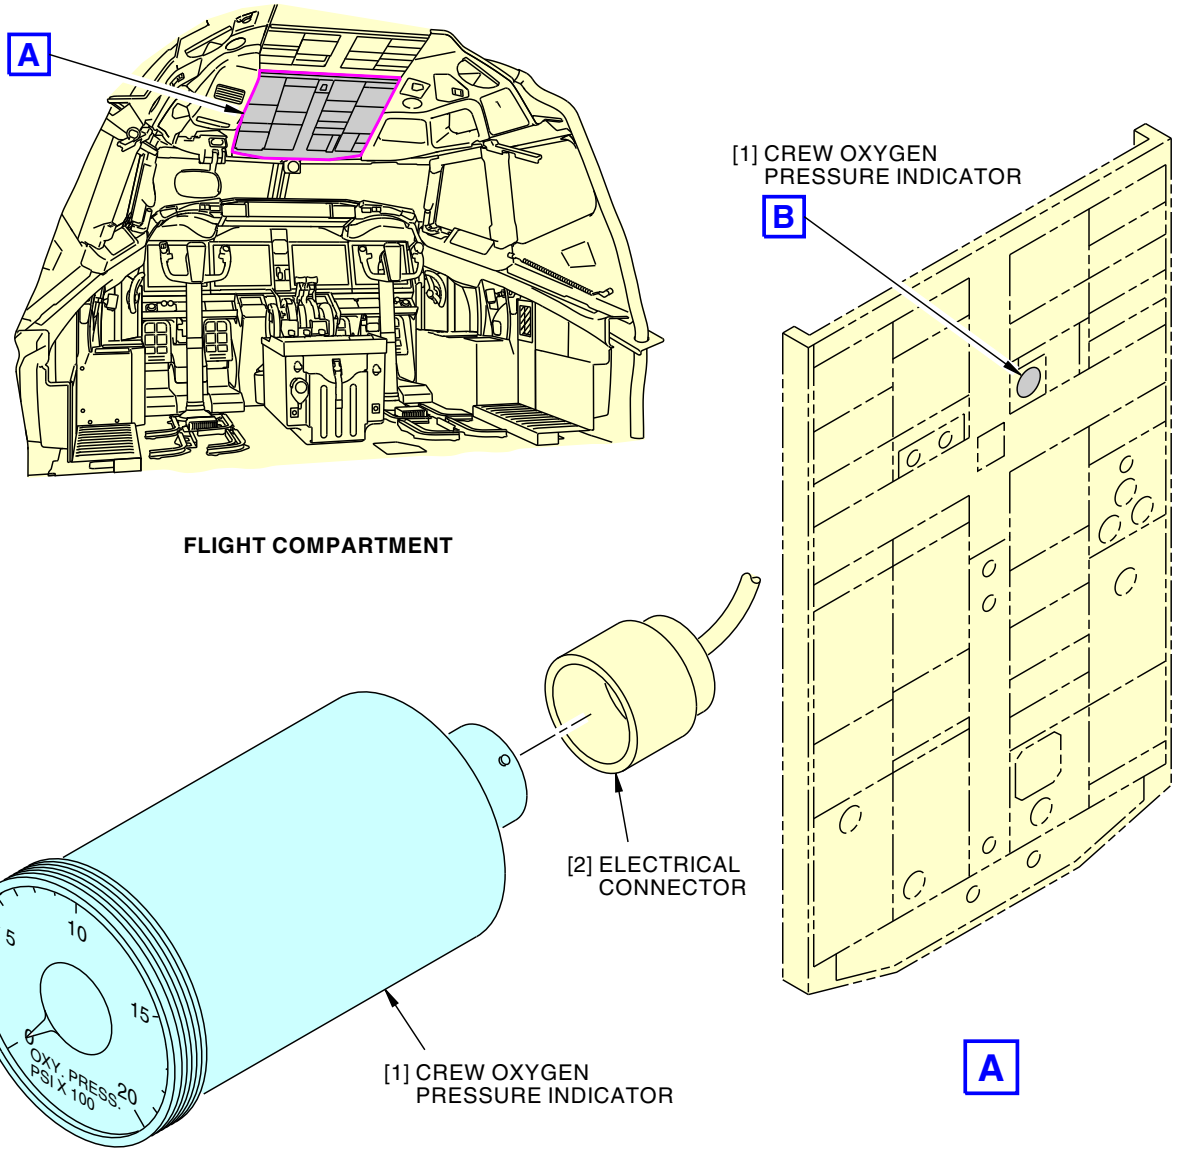

2414921 S00061536593_V2

Crew Oxygen System Pressure Indication
Figure 503/35-12-00-990-807 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN SYSTEM - INSPECTION/CHECK

1. General

A. This procedure contains these task:

(1) Crew Oxygen Operational Leak Check

(2) Crew Oxygen System Leak Check.

B. To do the Crew Oxygen Cylinder Dispatch Pressure Check, do this task: Crew Oxygen Cylinder Dispatch Pressure Check, TASK 12-15-21-200-801.

TASK 35-12-00-800-803

2. Crew Oxygen Operational Leak Check

(Figure 601)

A. References

Reference	Title
20-10-44-400-801	Lockwire, Cotter Pins, and Lockrings - Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-710-801	Crew Oxygen Pressure Indication Visual Check (P/B 501)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)
50-11-01-000-801	Forward Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-11-01-400-801	Forward Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G01912	Lockwire - MS20995NC32, Monel - 0.032 Inch (0.8128 mm) Diameter	NASM20995
G02479	Lockwire - MS20995CY20, Copper - 0.020 Inch (0.508 mm) Diameter	NASM20995
G50306	Compound - Leak Detection, Oxygen System	MIL-PRF-25567 (BAC5402)

C. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Prepare for the Leak Check

SUBTASK 35-12-00-910-006

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-00-940-002

(2) Do these steps to prepare the crew oxygen system for the leak check:

(a) Make sure that all crew oxygen supply lines and components are connected and tightened to the correct torque.

(b) Remove the center bottom cargo compartment panel from the front of the cargo compartment (TASK 50-11-01-000-801).

(c) Go to the crew oxygen cylinder (View B, Figure 601).

(d) Make sure that the shutoff valve on the oxygen cylinder is open.

(e) Make sure that the oxygen cylinder pressure indicator is between 150 psig (1034 kPa) and 1900 psig (13,100 kPa).

E. Crew Oxygen System Leak Detection

SUBTASK 35-12-00-790-006

(1) Apply the leak detection compound, G50306, to all connections that were disconnected or connections that you think may have a leak.

SUBTASK 35-12-00-790-007

(2) Use a mirror and a light when necessary to look at areas that are not easy to see.

SUBTASK 35-12-00-790-008

(3) Do a check for leaks at all applicable connections (look for bubbles in the leak detection compound).

SUBTASK 35-12-00-790-009

(4) If there is not a leak, use a clean lint free cotton wiper, G00034, to remove the leak detection compound, G50306, immediately.

SUBTASK 35-12-00-790-010

(5) If there is a leak, do these steps:

CAUTION

MANUALLY CLOSE THE SHUTOFF VALVE. IF YOU TIGHTEN THE SHUTOFF VALVE TOO MUCH (25 IN-LB N•M, MAXIMUM), DAMAGE TO THE VALVE CAN OCCUR.

(a) Manually close the shutoff valve (25 in-lb (2.8 N·m) maximum).

(b) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

(c) Tighten the connection with a leak to the correct torque value.

WARNING

OPEN THE SHUTOFF VALVE SLOWLY. YOU CAN CAUSE HIGH TEMPERATURES IN THE OXYGEN SYSTEM IF YOU OPEN THE SHUTOFF VALVE QUICKLY. HIGH TEMPERATURES CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

CAUTION

MANUALLY OPEN THE SHUTOFF VALVE. IF YOU OPEN THE SHUTOFF VALVE TOO MUCH (MORE THAN 25 IN-LB [2.8 N•M]), DAMAGE TO THE VALVE CAN OCCUR.

(d) Slowly open the shutoff valve with your hand until it is fully open.

(e) Close the shutoff valve one forth of a turn.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Check for leaks again with the leak detection compound, G50306.

(g) If you cannot stop a leak, replace the bad component.

NOTE: If the leak is not more than 5 cc/hour (approximately 3 bubbles in 2 minutes), it is not necessary to replace the component.

SUBTASK 35-12-00-420-004

(6) After you have checked and repaired the leaks, do the subsequent procedure.

F. Lockwire the Shutoff Valve on the Crew Oxygen Cylinder

SUBTASK 35-12-00-420-005

(1) When the oxygen system is satisfactory, to lockwire the shutoff valve in the open position, do this task: Lockwire, Cotter Pins, and Lockrings - Installation, TASK 20-10-44-400-801.

(a) Make sure the shutoff valve is fully open.

NOTE: The shutoff valve on the 801307-00 steel cylinder is fully open at approximately 6.5 revolutions. The shutoff valve on the B42365-1 composite cylinder is fully open at approximately 4 revolutions. The shutoff valve on the 806835-01 composite cylinder is fully open at approximately 6.5 revolutions.

(b) Close the shutoff valve one forth of a turn.

(c) Use MS20995NC32 lockwire, G01912, or MS20995CY20 lockwire, G02479, to hold the shutoff valve in the open position.

1) Wrap the lockwire around the coupling assembly in a counter-clockwise direction.

2) Use the double-twist method.

SUBTASK 35-12-00-710-029


(2) Do this task: Crew Oxygen Pressure Indication Visual Check, TASK 35-12-00-710-801.


SUBTASK 35-12-00-410-004

(3) Install the center bottom cargo compartment panel to the front of the cargo compartment (TASK 50-11-01-400-801).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

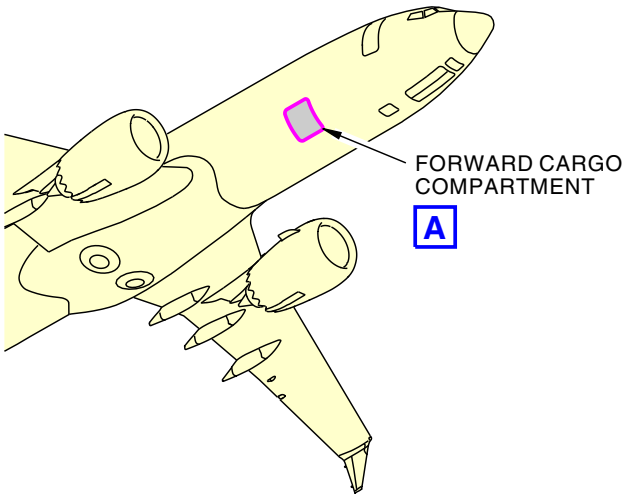

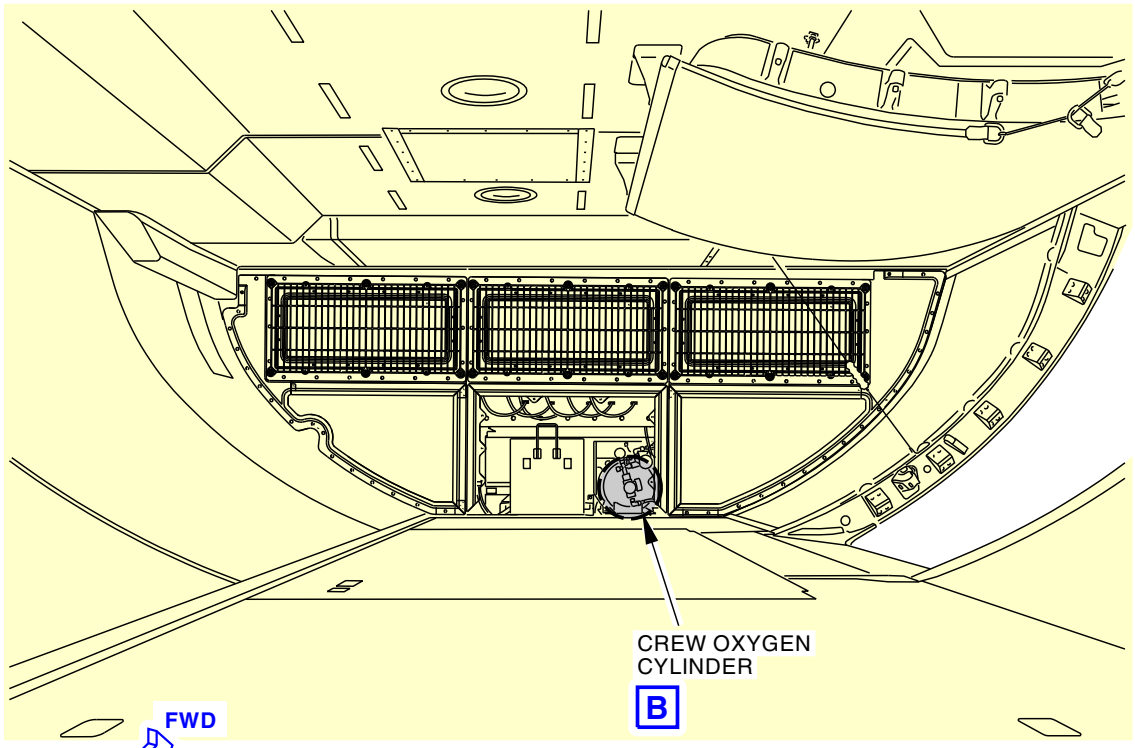


FORWARD CARGO COMPARTMENT

A

2414919 S00061536591_V2

Crew Oxygen Cylinder Inspection
Figure 601/35-12-00-990-808 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

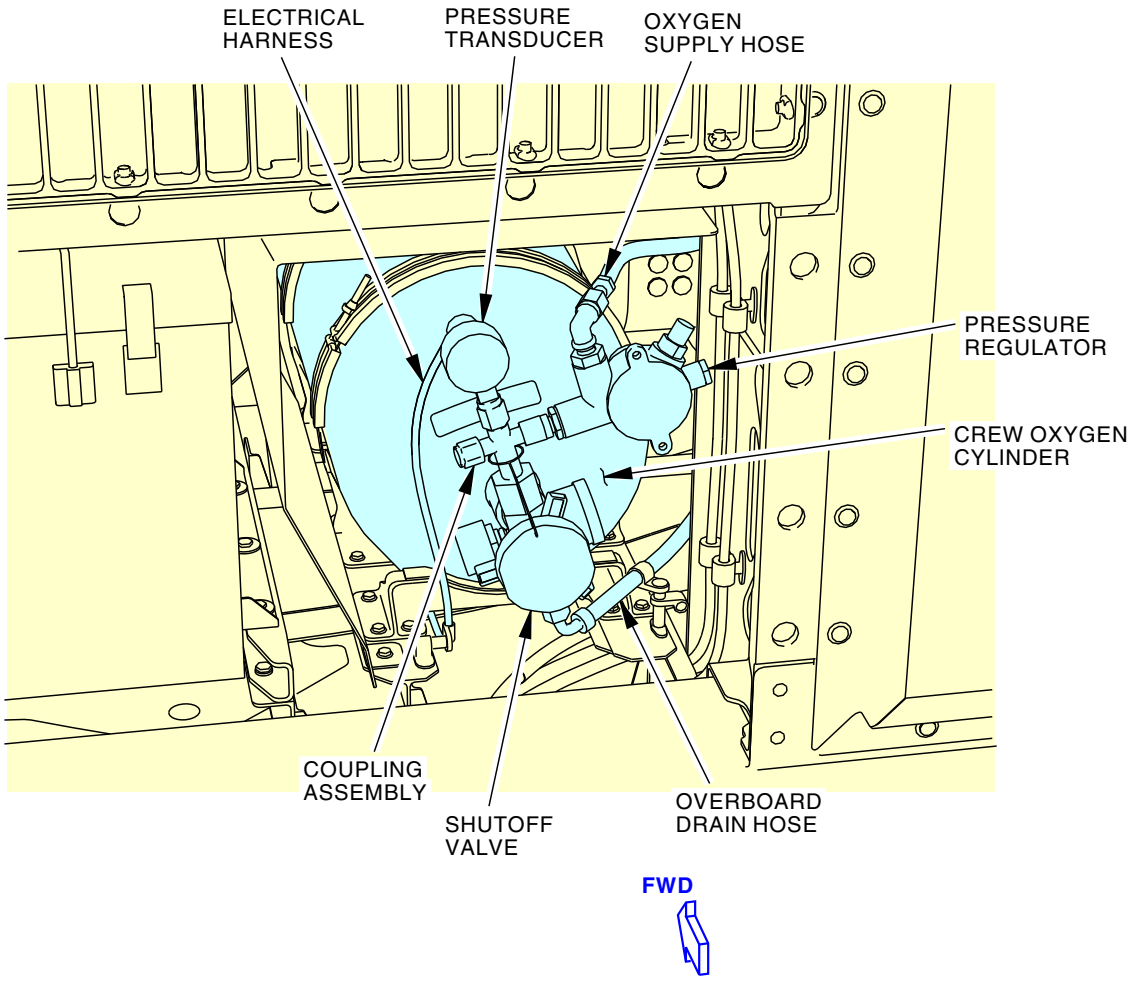

CREW OXYGEN CYLINDER (EXAMPLE)

B

2414922 S00061536596_V1

Crew Oxygen Cylinder Inspection
Figure 601/35-12-00-990-808 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-00-710-802

3. Crew Oxygen System Pressure Decay Leak Check

(Figure 602 or Figure 603 or Figure 604)

A. General

(1) This task does a pressure decay check for the crew oxygen system. The procedure examines the oxygen tubing from the oxygen cylinder to the connection with the crew stowage boxes.

B. References

Reference	Title
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)
35-12-00-800-802	Leak Test the Crew Oxygen System After System Maintenance or Repair (P/B 201)
35-12-85-000-801	Oxygen Mask Stowage Box Removal (P/B 401)
35-12-85-400-801	Oxygen Mask Stowage Box Installation (P/B 401)
35-12-85-910-801	Crew Oxygen Mask Stowage (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1934	Equipment - Test, Pressure Leak, Crew Oxygen System Part #: C35001-37 Supplier: 81205 Opt Part #: C35001-1 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)
G00472	Twine - Impregnated Fibrous, Lacing And Tying	MIL-T-713
G02438	Wrap - Tie - TY24M (TY-RAP)	
G50306	Compound - Leak Detection, Oxygen System	MIL-PRF-25567 (BAC5402)

E. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Prepare for the Leak Check

SUBTASK 35-12-00-910-007

(1) Read and obey the safety precautions and general instructions before you do the maintenance: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-00-840-007

(2) Make sure that all of the crew oxygen lines and components are connected and tightened to the correct torque.

SUBTASK 35-12-00-840-008

(3) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

G. Pressure Check Equipment Set-up - Crew Oxygen Cylinder

SUBTASK 35-12-00-480-001

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(1) Make sure that all of the components are specially cleaned for oxygen systems.

NOTE: Oxygen clean fittings come from a sealed container with a label for use on oxygen system installations. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-12-00-860-015

(2) Connect the pressure test equipment, SPL-1934 to the oxygen source.

SUBTASK 35-12-00-210-001

(3) Make sure that the shutoff valve on the pressure test equipment, SPL-1934 is in the closed position.

SUBTASK 35-12-00-480-002

(4) Do these steps to connect the pressure test equipment, SPL-1934 at the crew oxygen cylinder:

(a) Make sure that the shutoff valve on the crew oxygen cylinder is closed.

CAUTION USE TWO WRENCHES TO LOOSEN THE FITTINGS. USE THE SECOND WRENCH TO HOLD THE FITTING IN ITS POSITION TO PREVENT DAMAGE TO THE FITTING.

(b) Use two wrenches. Slowly loosen the elbow fitting on the pressure regulator and the supply line nut.

CAUTION USE TWO WRENCHES TO TIGHTEN THE FITTINGS. USE THE SECOND WRENCH TO HOLD THE FITTING IN ITS POSITION TO PREVENT DAMAGE TO THE FITTING.

(c) Connect the test hose to the crew oxygen supply line.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

H. Pressure Check Equipment Set-up - Flight Compartment

SUBTASK 35-12-00-480-003

(1) Do these steps to install the pressure test equipment, SPL-1934 at the applicable stowage box:

(a) Do this task: Oxygen Mask Stowage Box Removal, TASK 35-12-85-000-801.

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(b) Do this task to install a cap on the open connector fitting at the bottom of each stowage box location: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed container with a label for oxygen systems. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(c) Do this task to install a plug into the oxygen hose connection at each stowage box location: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed container with a label for oxygen systems. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(d) Use Scotch Flatback Masking Tape 250, G00270, twine, G00472 or TY24M (TY-RAP) tie wrap, G02438 to stop the flexible hoses in the stowage boxes from unwanted movement when pressure is applied to the system.

I. Crew Oxygen Pressure Leak Check

SUBTASK 35-12-00-710-030

CAUTION DO NOT APPLY MORE THAN 100 PSIG (689 KPA) PRESSURE TO THE OXYGEN SYSTEM. IF YOU APPLY MORE THAN 100 PSIG (689 KPA) PRESSURE, YOU CAN DAMAGE OXYGEN SYSTEM COMPONENTS.

(1) Open the shutoff valve on the oxygen source, and slowly pressurize the system to a pressure of 80 ±5 psig (552 ±35 kPa).

SUBTASK 35-12-00-710-031

(2) Continue to pressurize the system for one minute.

SUBTASK 35-12-00-710-032

(3) Close the shutoff valve on the oxygen source.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-00-210-002

(4) Monitor the pressure for a minimum of 30 minutes.

SUBTASK 35-12-00-970-001

(5) Make sure that the pressure does not decrease by more than 7.5 psig (51.7 kPa) during the 30 minute time period.

SUBTASK 35-12-00-360-001

(6) If the leakage is less than 7.5 psig (51.7 kPa), the system is satisfactory.

SUBTASK 35-12-00-360-002

(7) If the leakage is more than 7.5 psig (51.7 kPa), repair the leak (Crew Oxygen Operational Leak Check, TASK 35-12-00-800-803).

(a) Use the leak detection compound, G50306, if it is necessary to help find the leak.

1) Remove used leak detection compound, G50306 with a clean lint free cotton wiper, G00034, immediately.

(b) Remove the pressure from the system and repair the leak.

(c) Pressurize the system and monitor for leakage again until you get a leakage of less than 7.5 psig (51.7 kPa).

SUBTASK 35-12-00-080-001

(8) Slowly open the connection at the oxygen source to bleed off the pressure.

J. Test Equipment Removal - Flight Compartment

SUBTASK 35-12-00-020-002

(1) Remove the tape, twine or tie wraps from the flexible hoses in the stowage boxes.

SUBTASK 35-12-00-080-002

(2) Remove the test equipment plugs and caps from the oxygen stowage boxes.

SUBTASK 35-12-00-410-005

(3) Do this task: Oxygen Mask Stowage Box Installation, TASK 35-12-85-400-801.

SUBTASK 35-12-00-410-006

(4) Do these steps to install the first observer's mask stowage panels:

(a) Connect the oxygen hose connection to the fitting on the oxygen mask stowage cup(s).

(b) Install the oxygen mask stowage panels at the first observer's station.

(c) Tighten the four quarter-turn fasteners on the oxygen mask stowage panels.

(d) Do this task: Crew Oxygen Mask Stowage, TASK 35-12-85-910-801.

K. Pressure Check Equipment Removal - Crew Oxygen Cylinder

SUBTASK 35-12-00-020-001

(1) Do these steps to disconnect the pressure test equipment, SPL-1934 from the crew oxygen supply line.

CAUTION USE TWO WRENCHES TO LOOSEN THE FITTINGS. USE THE SECOND WRENCH TO HOLD THE FITTING IN ITS POSITION TO PREVENT DAMAGE TO THE FITTING.

(a) Use two wrenches to disconnect the adapter on the test line from the airplane supply line nut (View B).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION

USE TWO WRENCHES TO TIGHTEN THE FITTINGS. USE THE SECOND WRENCH TO HOLD THE FITTING IN ITS POSITION TO PREVENT DAMAGE TO THE FITTING.

(b) Use two wrenches to tighten the elbow fitting on the pressure regulator and the oxygen supply line nut.

(c) Remove the pressure test equipment, SPL-1934 from the airplane.

SUBTASK 35-12-00-080-003


(2) Disconnect the pressure test equipment, SPL-1934 from the oxygen source.


SUBTASK 35-12-00-840-009

(3) Do this task: Leak Test the Crew Oxygen System After System Maintenance or Repair, TASK 35-12-00-800-802.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

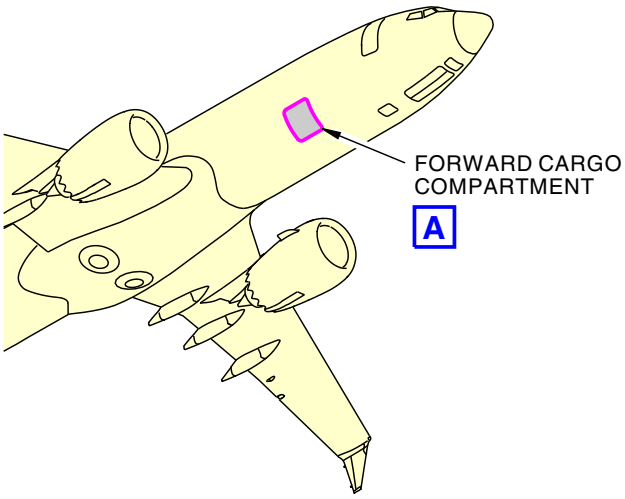

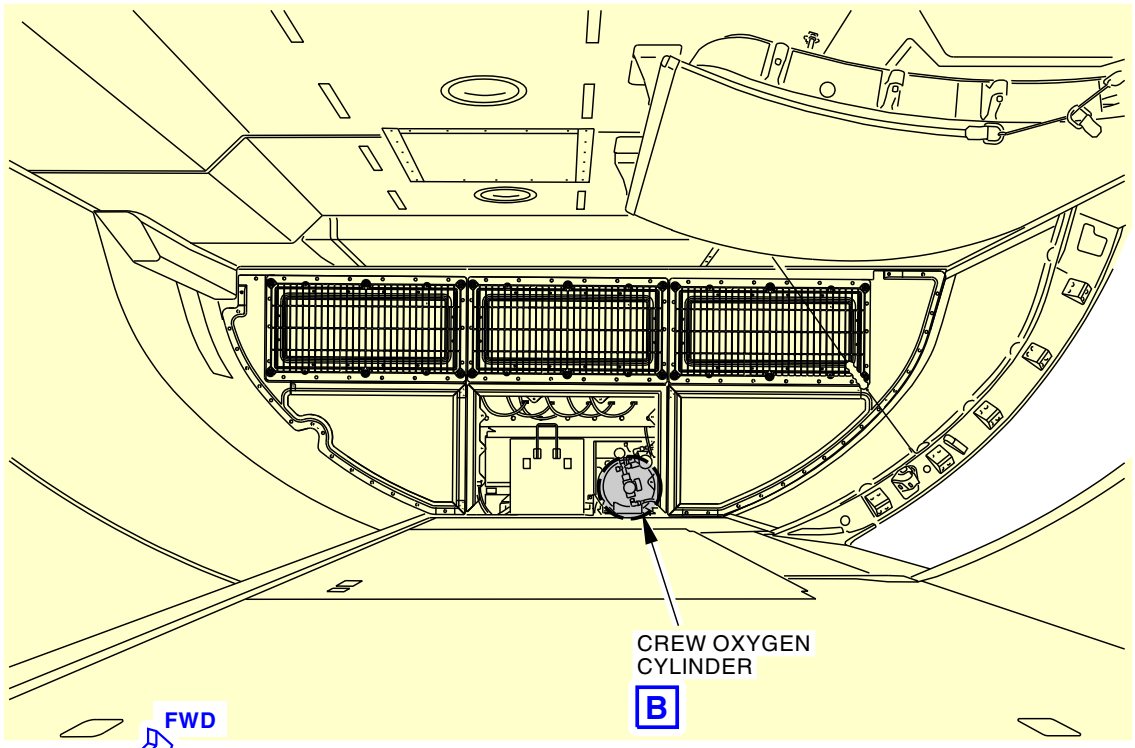


FORWARD CARGO COMPARTMENT

A

2414923 S00061536598_V2

Crew Oxygen Pressure Leak Check (Equipment Setup at the Oxygen Cylinder)
Figure 602/35-12-00-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

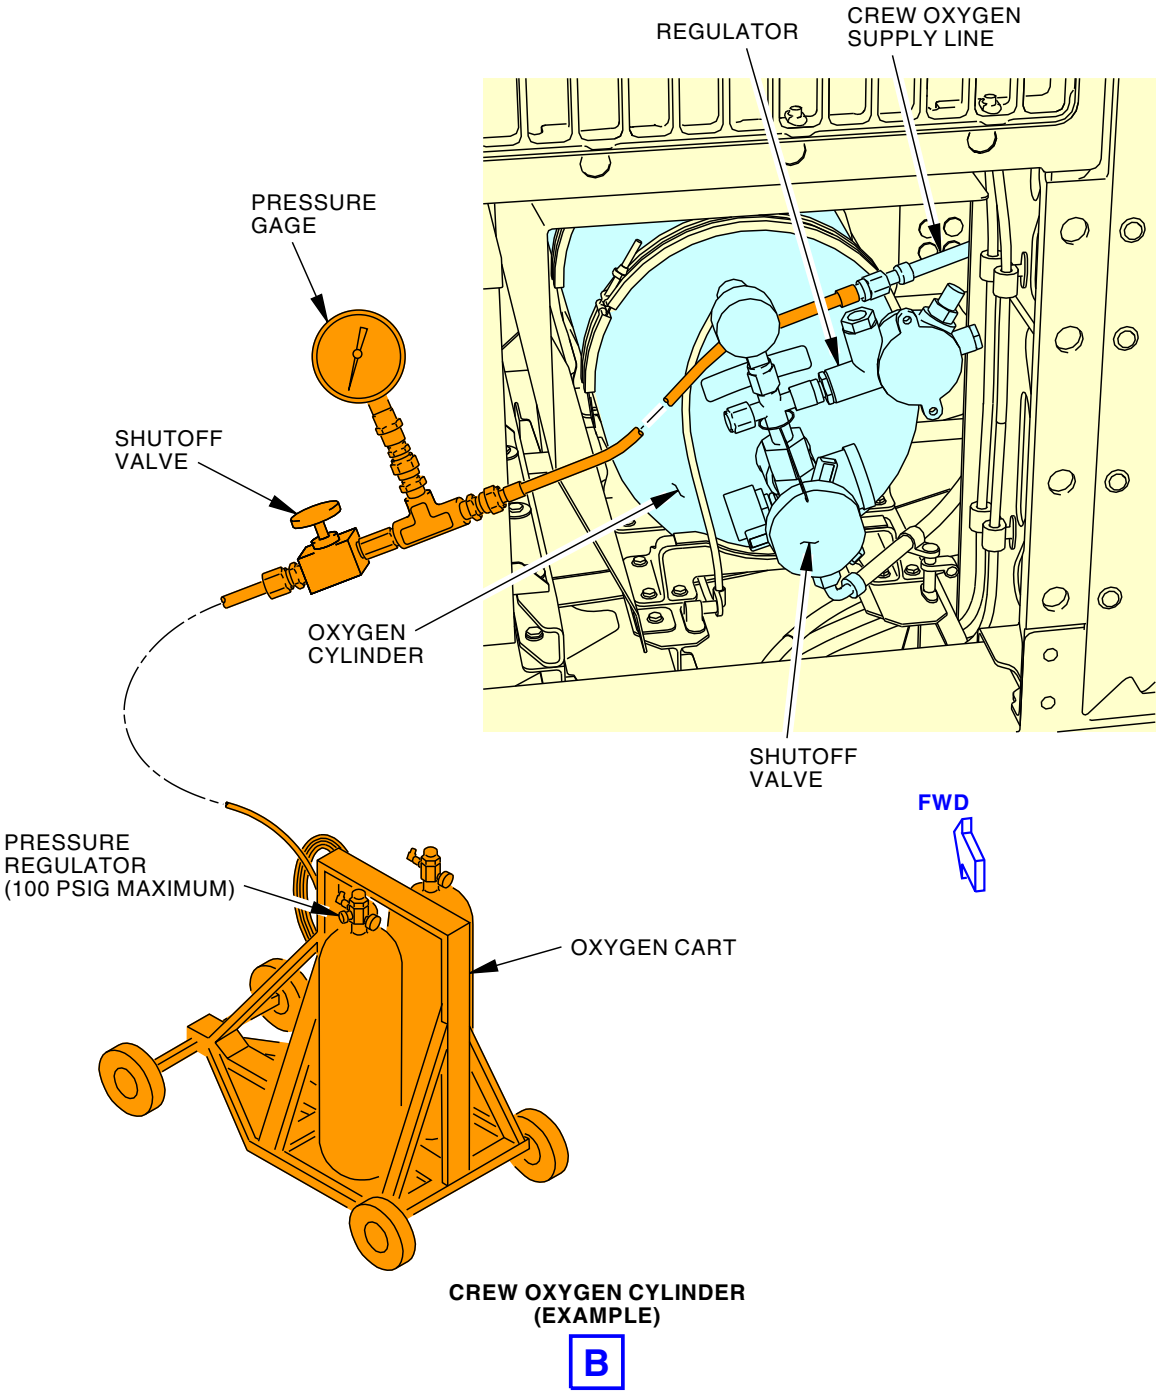


CREW OXYGEN CYLINDER (EXAMPLE)

B

2414924 S00061536599_V1


Crew Oxygen Pressure Leak Check (Equipment Setup at the Oxygen Cylinder)
Figure 602/35-12-00-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

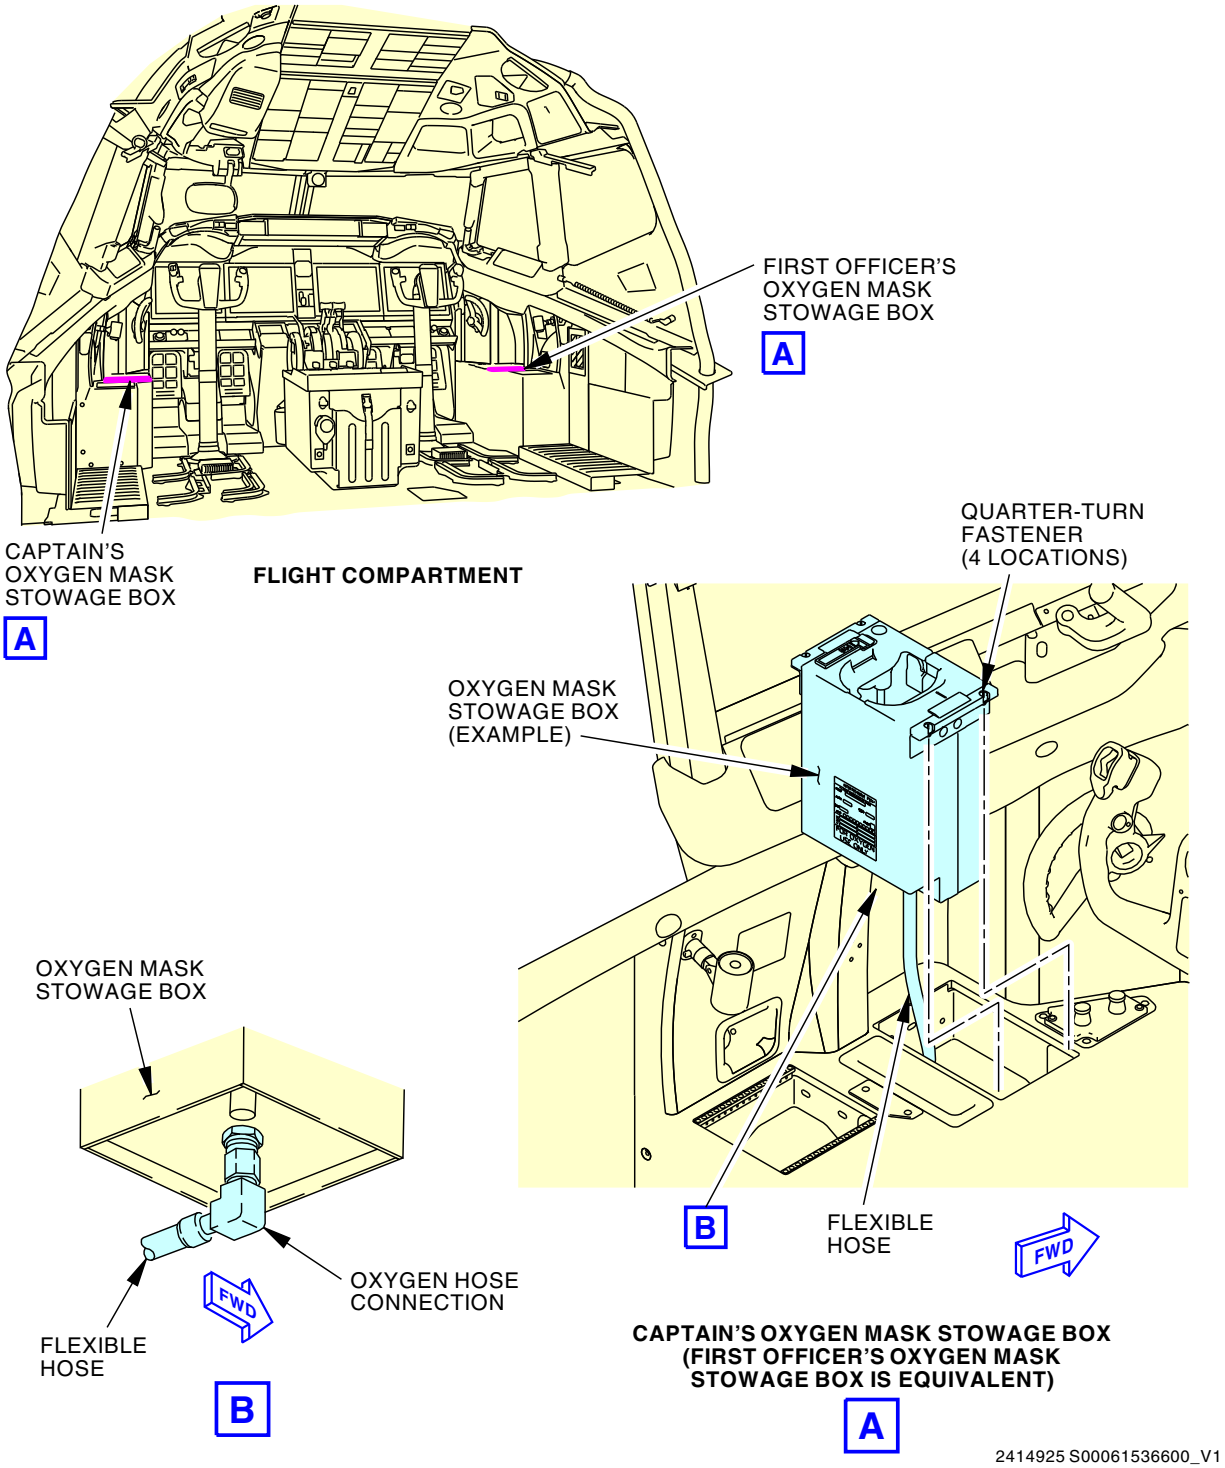

Crew Oxygen Pressure Leak Check (Equipment Setup in the Flight Compartment)
Figure 603/35-12-00-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

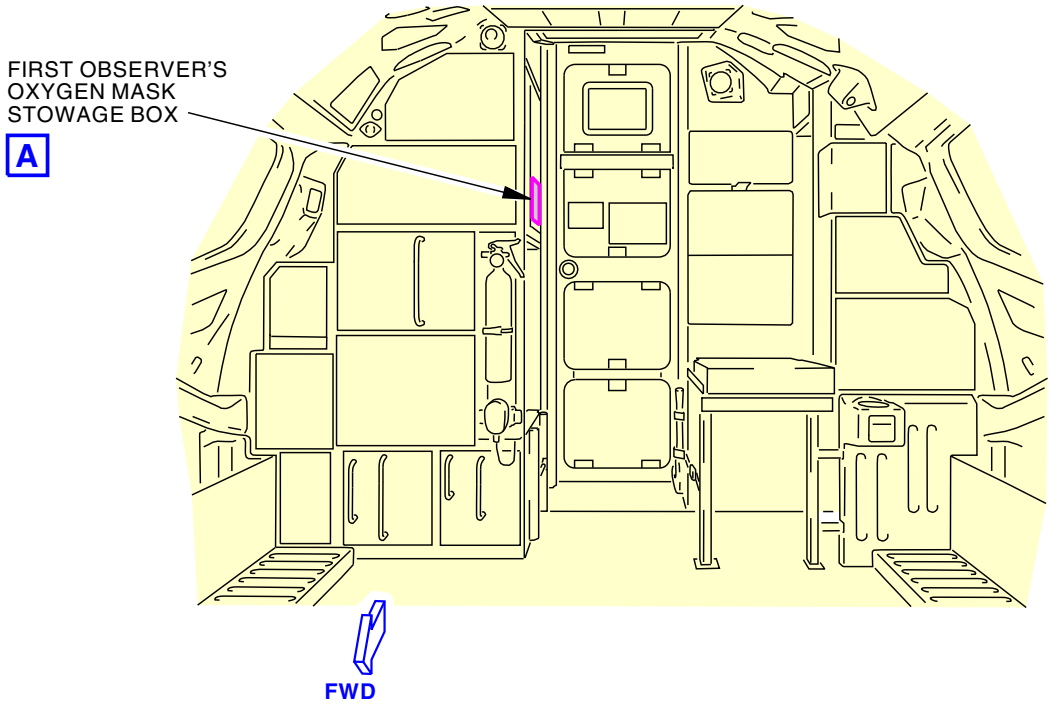


FLIGHT COMPARTMENT

2414926 S00061536601_V1

First Observer's Oxygen Pressure Leak Check
Figure 604/35-12-00-990-811 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

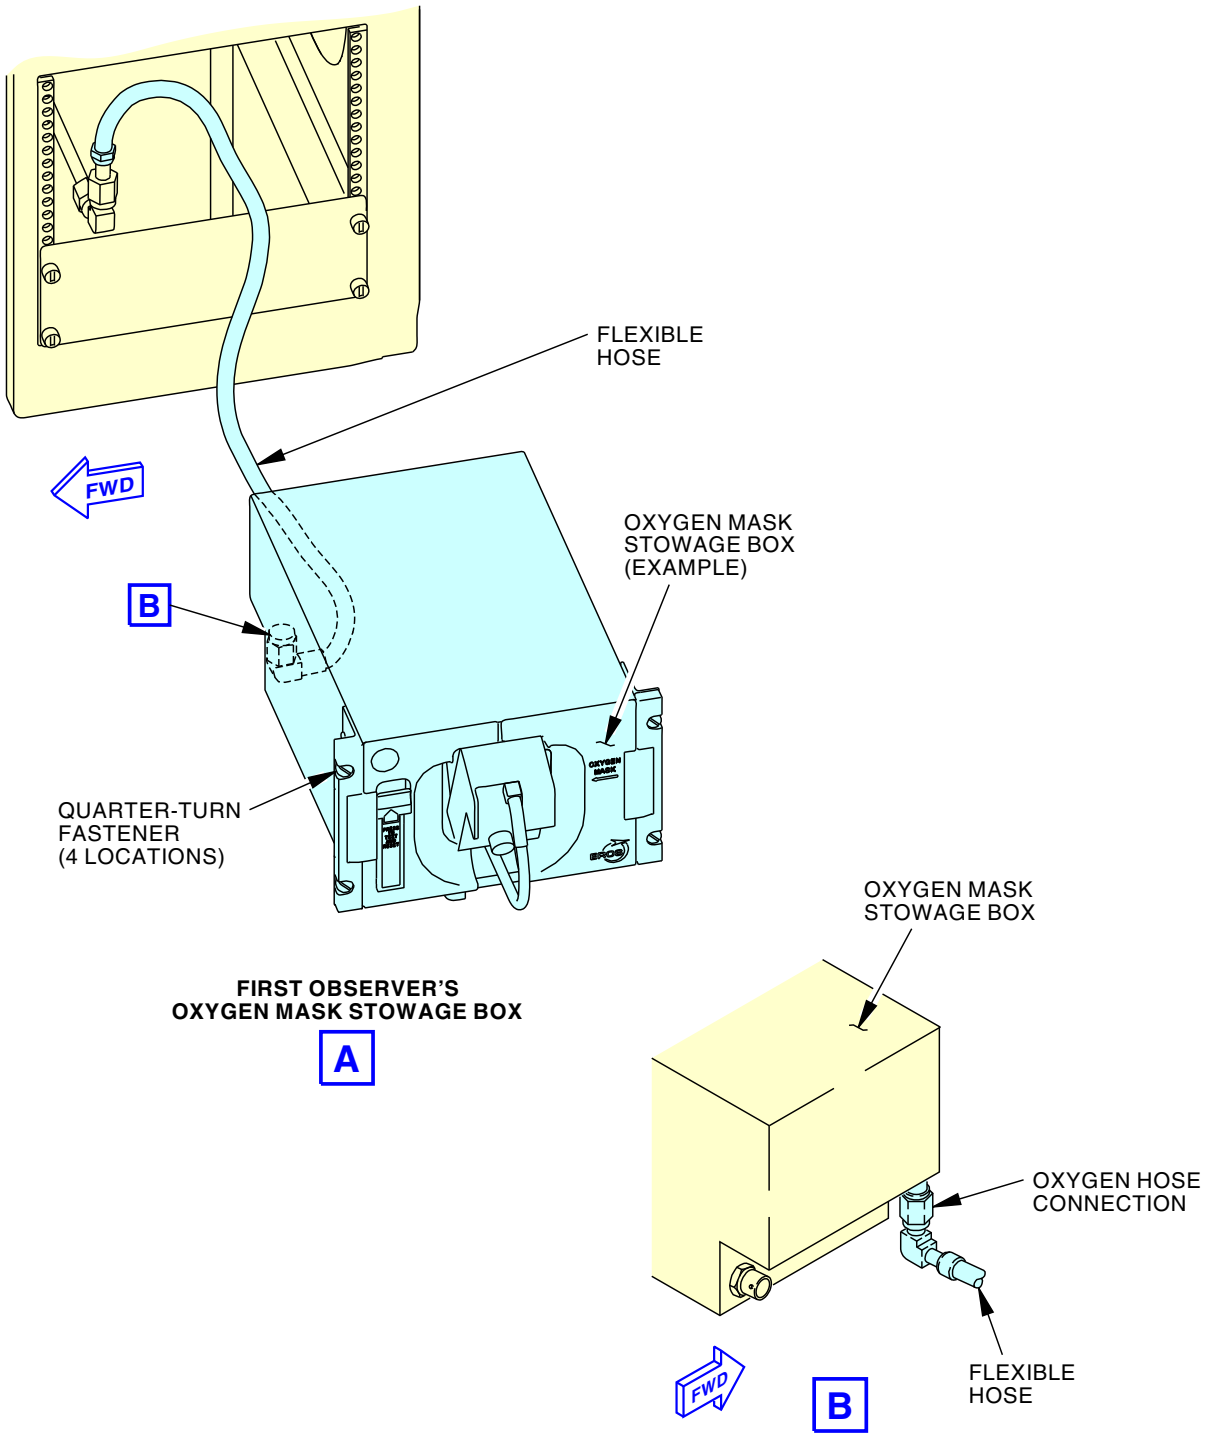

First Observer's Oxygen Pressure Leak Check
Figure 604/35-12-00-990-811 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-00-211-801

4. Crew Oxygen Cylinder Correct Installation and Condition Check

(Figure 601)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
50-11-01-000-801	Forward Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-11-01-400-801	Forward Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

B. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

C. Crew Oxygen Cylinder Correct Installation and Condition Check

SUBTASK 35-12-00-910-008

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task:Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-00-010-002

(2) Remove the center bottom cargo compartment panel from the front of the cargo compartment to get access to the crew oxygen cylinder (TASK 50-11-01-000-801).

SUBTASK 35-12-00-211-001

(3) Do a check of these components to make sure they are installed correctly.

(a) Make sure that the pressure transducer is installed tightly (a torque of 125 in-lb (14 N·m) to 150 in-lb (17 N·m)) on the coupling assembly.

(b) Make sure that the pressure regulator is tightly installed.

(c) Make sure that the oxygen supply hose and overboard drain hose are installed correctly

(d) Make sure that the coupling assembly is installed correctly.

(e) Make sure that the oxygen cylinder is correctly installed to the support brackets and straps.

SUBTASK 35-12-00-211-002

(4) Make sure that the oxygen cylinder is installed correctly.

SUBTASK 35-12-00-211-003

(5) Do a check of the crew oxygen cylinder to make sure it is in satisfactory condition:

(a) Do this task to check the crew oxygen cylinder for leaks: Crew Oxygen Operational Leak Check, TASK 35-12-00-800-803.

(b) Do a check of the crew oxygen cylinder for these conditions:

1) Make sure that the pressure is above the minimum necessary for dispatch.

NOTE: You must contact your flight operations organization for the minimum dispatch pressures for each route flown. Oxygen pressure tables versus descent profiles are found in the Flight Crew Operations Manual (FCOM). The necessary minimum dispatch pressure for the crew oxygen cylinders changes with each specified flight routing. These factors are used to calculate the minimum dispatch pressure:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

The quantity and capacity of the installed cylinders

The number of crew and observers on the flight

The worst-case descent profile for the specified route.

2) Make sure that the crew oxygen cylinder is clean.

3) Make sure that the crew oxygen cylinder does not have nicks, cracks, dents, cuts, or any other damage.

SUBTASK 35-12-00-410-007

(6) Install the center bottom cargo compartment panel to the front of the cargo compartment (TASK 50-11-01-400-801).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PRESSURE REDUCING REGULATOR - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) Regulator/Transducer Assembly Removal

(2) Regulator/Transducer Assembly Installation

(3) Regulator/Transducer Assembly Component Removal

(4) Regulator/Transducer Assembly Component Installation.

TASK 35-12-11-000-801

2. Regulator/Transducer Assembly Removal

(Figure 401)

A. General

(1) This task removes the regulator/transducer assembly from the crew oxygen cylinder.

B. References

Reference	Title
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)

C. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

D. Remove the Regulator/Transducer Assembly

SUBTASK 35-12-11-910-001

(1) Obey the safety precautions and maintenance practices for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-11-870-001

(2) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

SUBTASK 35-12-11-860-001

(3) Open this circuit breaker and install safety tag:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

SUBTASK 35-12-11-010-001

(4) Get access to the crew oxygen cylinder (View B).

SUBTASK 35-12-11-860-002

(5) Make sure that the shutoff valve is closed, and the crew oxygen supply line is not pressurized.

SUBTASK 35-12-11-020-001

(6) Do these steps to remove the regulator/transducer assembly [1] (View B):

(a) Disconnect the electrical connector from the transducer [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Disconnect the crew oxygen supply line from the elbow [3] on the regulator/transducer assembly [1].

(c) Loosen the nut on the coupling assembly [9] that attaches the crew oxygen cylinder to the regulator/transducer assembly [1].

(d) Remove the regulator/transducer assembly [1].

SUBTASK 35-12-11-480-001


WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.


(7) If the installation of the assembly will not occur in 5 minutes, put a cap on the open oxygen line (TASK 35-00-00-420-801).

NOTE: Oxygen clean fittings come from a sealed container with a label for use on the oxygen system. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

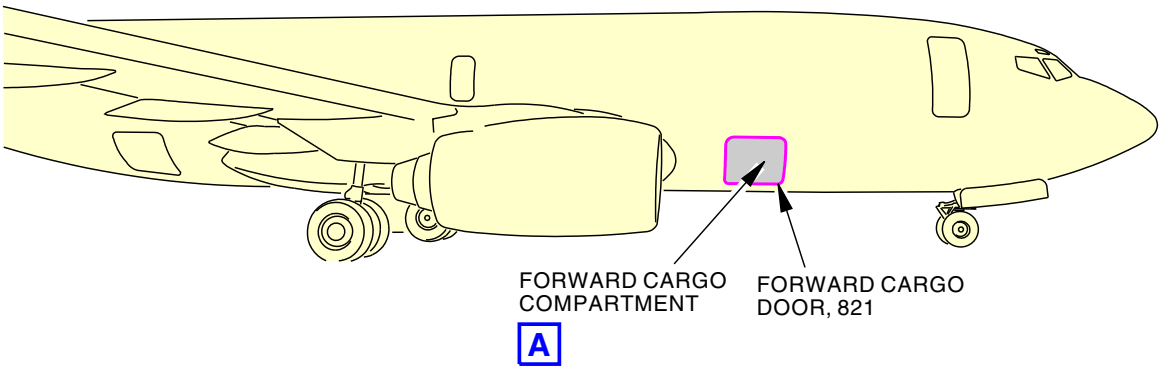


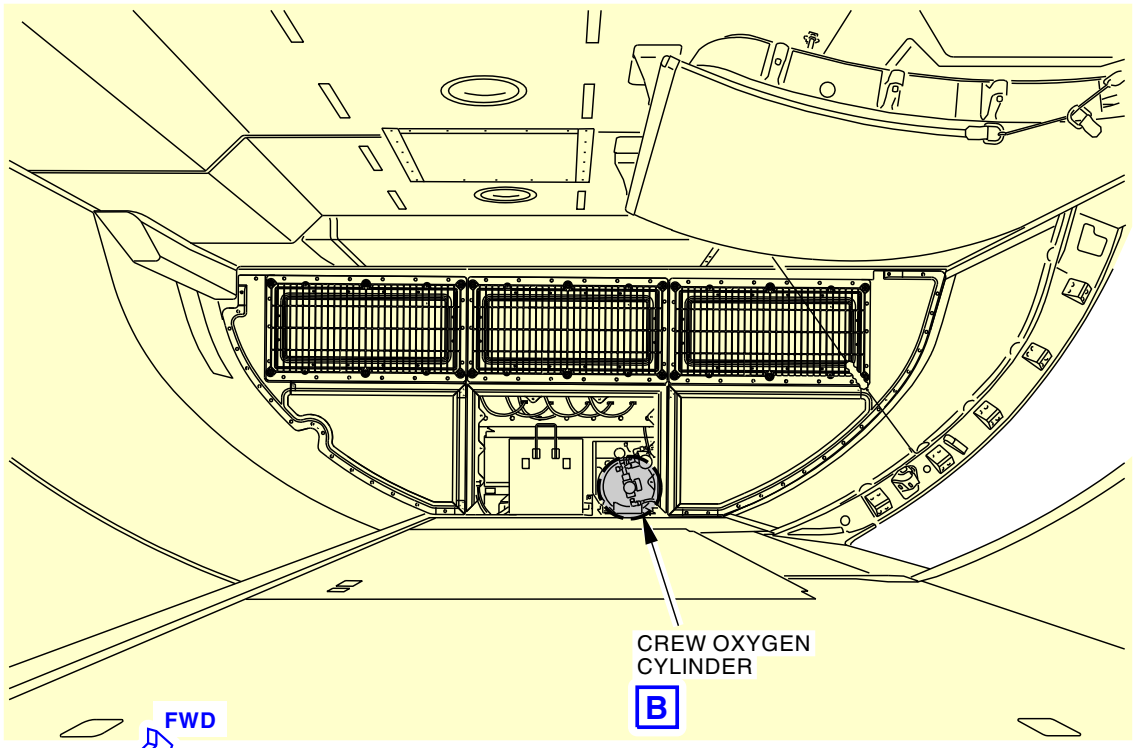

2414930 S00061536609_V2

Pressure Reducing Regulator Installation
Figure 401/35-12-11-990-801 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

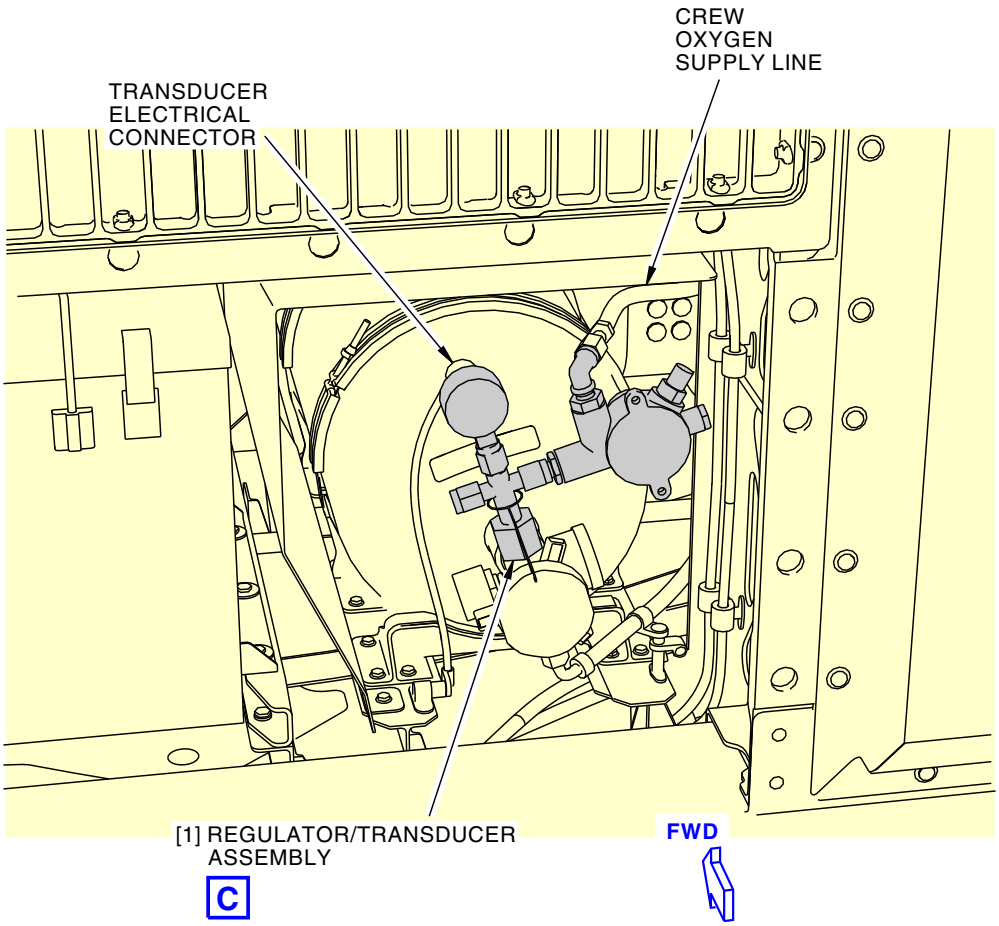

2414931 S00061536610_V1

Pressure Reducing Regulator Installation
Figure 401/35-12-11-990-801 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

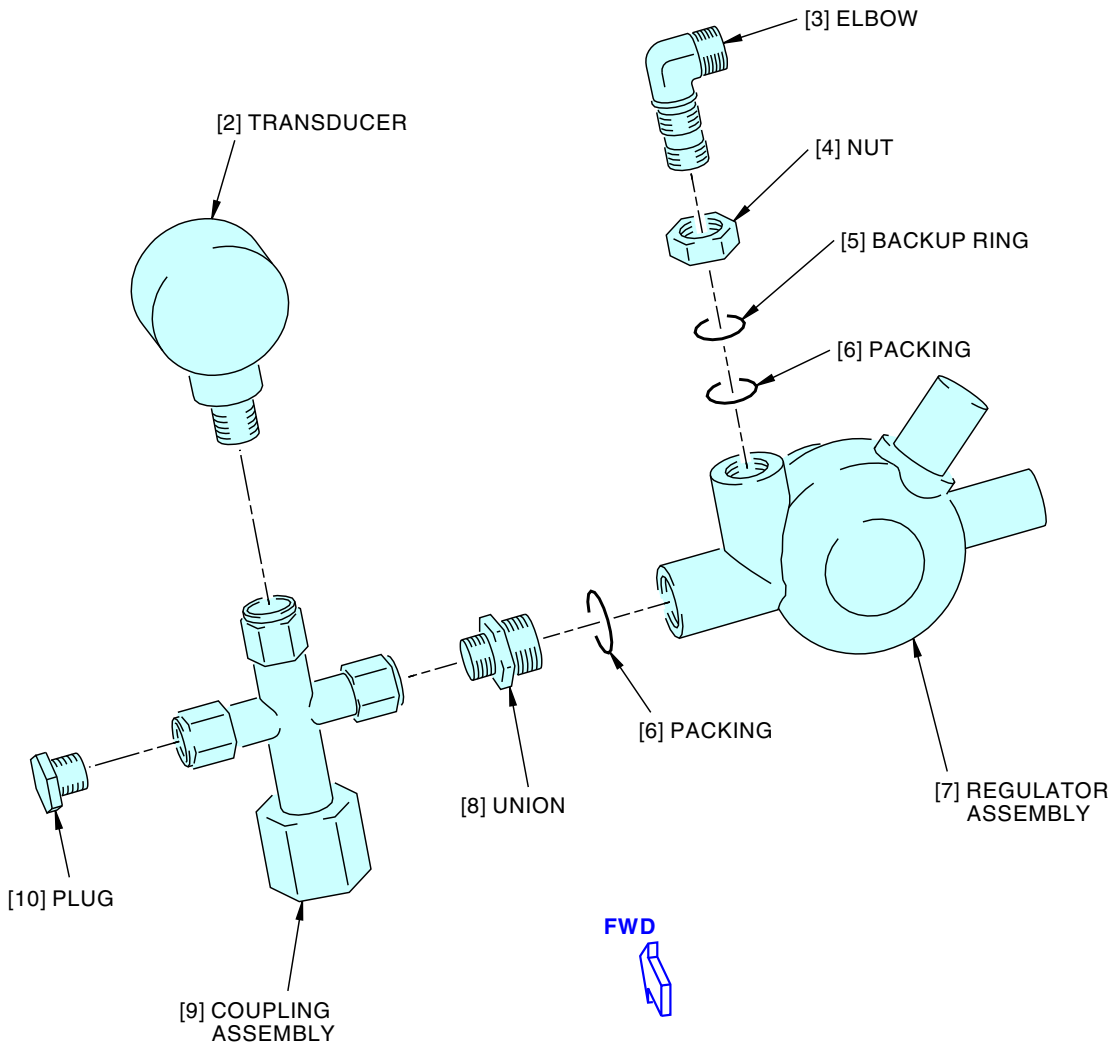

REGULATOR/TRANSDUCER ASSEMBLY

C

2414932 S00061536611_V1

Pressure Reducing Regulator Installation
Figure 401/35-12-11-990-801 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-11-400-801

3. Regulator/Transducer Assembly Installation

(Figure 401)

A. General

(1) This task installs the regulator/transducer assembly to the crew oxygen cylinder.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-802	Leak Test the Crew Oxygen System After System Maintenance or Repair (P/B 201)

C. Tools/Equipment

Reference	Description
STD-13964	Wrench - Torque, 200-1000 in-lbs, +/-5% accuracy

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Transducer assembly	35-12-52-10-035	PTF ALL

E. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

F. Procedure

SUBTASK 35-12-11-910-002

(1) Obey the safety precautions and maintenance practices for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-11-410-001

(2) Go into the forward cargo compartment to get access to the crew oxygen cylinder (View A).

SUBTASK 35-12-11-420-001

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(3) Do these steps to install the regulator/transducer assembly [1]:

NOTE: Oxygen clean fittings come from a sealed container with a label for use in the oxygen system. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Remove the caps from the crew oxygen cylinder.

(b) Remove the caps from the regulator/transducer assembly [1].

(c) Install the regulator/transducer assembly [1] to the supply port on the crew oxygen cylinder.

1) Tighten the nut of the coupling assembly [9] with torque wrench, STD-13964 to 375 ±25 in-lb (42 ±3 N·m).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Install the crew oxygen supply line to the elbow [3] on the regulator/transducer assembly [1].

1) Tighten the nut on the crew oxygen supply line to 170 in-lb (19 N·m) to 200 in-lb (23 N·m).

(e) Connect the electrical connector to the transducer [2].

G. Do the Crew Oxygen Cylinder Restoration and Leak Check

SUBTASK 35-12-11-860-003

(1) Do this task: Leak Test the Crew Oxygen System After System Maintenance or Repair, TASK 35-12-00-800-802.

H. Do a Check of the Electrical Connection

SUBTASK 35-12-11-860-006

(1) Remove the safety tag and close this circuit breaker:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

SUBTASK 35-12-11-210-001

(2) Make sure that the pressure indicator on the aft overhead panel shows pressure.

——— END OF TASK ———

TASK 35-12-11-000-802

4. Regulator/Transducer Assembly Component Removal

(Figure 401)

A. General

(1) Do this task if you need to remove one or more of these components from the regulator/transducer assembly:

(a) Transducer

(b) Coupling assembly

(c) Regulator assembly

(d) Tubing components

B. References

Reference	Title
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

C. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

D. Prepare to Remove the Components

SUBTASK 35-12-11-910-003

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-11-020-002

(2) Do this task: Regulator/Transducer Assembly Removal, TASK 35-12-11-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Remove the Transducer from the Regulator/Transducer Assembly

SUBTASK 35-12-11-020-003

CAUTION

DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. USE A WRENCH ON THE TRANSDUCER SQUARE BOSS AND ON THE COUPLING HEX NUT. DAMAGE CAN OCCUR IF YOU DO NOT USE WRENCHES TO DISCONNECT THE COMPONENTS.

(1) Do these steps to remove the transducer [2] from the regulator/transducer assembly [1]:

(a) Use a wrench to hold the coupling assembly [9].

(b) Use a wrench to hold the square boss on the transducer [2].

(c) Disconnect the transducer [2].

WARNING

USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(d) If the installation of the assembly will not occur within 5 minutes, do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

F. Remove the Coupling Assembly from the Regulator/Transducer Assembly

SUBTASK 35-12-11-020-004

CAUTION

DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. DAMAGE CAN OCCUR IF YOU DO NOT USE WRENCHES TO DISCONNECT THE COMPONENTS.

(1) Do these steps to remove the coupling assembly [9] from the regulator/transducer assembly [1]:

(a) Remove the transducer [2] from the coupling assembly [9].

(b) Remove the plug [10] from the regulator/transducer assembly [1], if necessary.

(c) Remove the coupling assembly [9] from the union [8] on the inlet port of the regulator assembly [7].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(d) If the installation of the assembly will not occur within 5 minutes, do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

G. Remove the Regulator Assembly from the Regulator/Transducer Assembly

SUBTASK 35-12-11-000-001

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. USE A WRENCH ON THE REGULATOR AND ON THE COUPLING ASSEMBLY. DAMAGE CAN OCCUR IF YOU DO NOT USE WRENCHES TO DISCONNECT THE COMPONENTS.

(1) Do these steps to remove the regulator assembly [7] from the regulator/transducer assembly [1]:

(a) Remove the coupling assembly [9] from the union [8] on the regulator assembly [7].

(b) Remove the union [8] and packing [6] from the regulator assembly [7].

1) Discard the packing [6].

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(c) If the installation of the assembly will not occur within 5 minutes, do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

H. Remove the Tubing Components on the Regulator Assembly

SUBTASK 35-12-11-020-005

(1) Remove the elbow [3], nut [4], backup ring [5] and packing [6] from the regulator assembly [7].

(a) Discard the packing [6].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-11-020-006

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(2) If the installation of the assembly will not occur within 5 minutes, do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

——— END OF TASK ———

TASK 35-12-11-400-802

5. Regulator/Transducer Assembly Component Installation

(Figure 401)

A. General

(1) Do this task to install one or more of these components to form the regulator/transducer assembly:

(a) Tubing components

(b) Regulator assembly

(c) Transducer

(d) Coupling assembly.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

C. Tools/Equipment

Reference	Description
STD-1130	Cap - Protective, Flareless Tube, 1/2-20 Thread

D. Consumable Materials

Reference	Description	Specification
D00173	Grease - Aircraft and Instrument, Fuel And Oxidizer Resistant	MIL-PRF-27617 (Supersedes MIL-G-27617)
D50063	Grease - Perfluoropolyether, fuel and oxygen resistant - Krytox 240AC	MIL-PRF- 27617 Type III

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Transducer	35-12-21-01-005	PTF ALL
		35-12-21-01-006	PTF ALL
6	Packing	35-12-11-01-015	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

AMM Item	Description	AIPC Reference	AIPC Effectivity
7	Regulator assembly	35-12-11-01-035	PTF ALL
9	Coupling assembly	35-12-21-01-015	PTF ALL

F. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

G. Prepare for the Installation

SUBTASK 35-12-11-910-004

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

H. Install the Tubing Components on the Regulator Assembly

SUBTASK 35-12-11-420-002

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. DAMAGE CAN OCCUR IF WRENCHES ARE NOT USED TO CONNECT THE COMPONENTS.

(1) Do these steps to install the union [8] on the inlet port of the regulator assembly [7]:

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Make sure that you use only oxygen clean fittings.

(b) If necessary, remove the protective Flareless Tube Cap, 1/2-20 Thread, STD-1130.

(c) Apply a thin layer of grease, D00173, or Krytox 240AC perfluoropolyether grease, D50063 (optional), to the packings [6].

(d) Install the packing [6] and union [8].

(e) Tighten the union [8] to 170 in-lb (19 N·m) - 200 in-lb (23 N·m).

SUBTASK 35-12-11-420-003

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. DAMAGE CAN OCCUR IF WRENCHES ARE NOT USED TO CONNECT THE COMPONENTS.

(2) Do these steps to install the elbow [3] on the outlet port of the regulator assembly [7]:

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Make sure that you use only oxygen clean fittings.

(b) If necessary, remove the protective Flareless Tube Cap, 1/2-20 Thread, STD-1130.

(c) Install the nut [4] on the elbow [3].

(d) Make sure that the threads of the nut [4] engage the second set of threads against the shoulder on the elbow [3].

(e) Install the backup ring [5] on the elbow [3].

(f) Apply a thin layer of grease, D00173, or Krytox 240AC perfluoropolyether grease, D50063 (optional), to the packing [6].

(g) Install the packing [6].

(h) Install the elbow [3] on the regulator assembly [7] so that it turns freely.

(i) Make sure that the elbow [3] is aligned correctly for the installation.

(j) Tighten the nut [4] on the elbow [3] to 170 in-lb (19 N·m) - 200 in-lb (23 N·m).

I. Install the Regulator Assembly to the Coupling Assembly

SUBTASK 35-12-11-420-004

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. DAMAGE CAN OCCUR IF WRENCHES ARE NOT USED TO CONNECT THE COMPONENTS.

(1) Do these steps to install the regulator assembly [7] to the coupling assembly [9]:

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Make sure that you use only oxygen clean fittings.

(b) If necessary, remove the protective Flareless Tube Cap, 1/2-20 Thread, STD-1130.

(c) Loosely connect the coupling assembly [9] and regulator assembly [7] at the union [8] on the inlet port.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Make sure that the coupling assembly [9] and regulator assembly [7] are aligned correctly for the installation.

(e) Tighten the connection between the nut on the coupling assembly [9] and union [8] on the regulator assembly [7] to 170 in-lb (19 N·m) - 200 in-lb (23 N·m).

J. Install the Plug to the Coupling Assembly

SUBTASK 35-12-11-420-005

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. DAMAGE CAN OCCUR IF WRENCHES ARE NOT USED TO CONNECT THE COMPONENTS.

(1) Do these steps to install the plug [10] on the coupling assembly [9]:

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Make sure that you use only oxygen clean fittings.

(b) If necessary, remove the protective Flareless Tube Cap, 1/2-20 Thread, STD-1130.

(c) Install the plug [10].

(d) Tighten the plug [10] to 170 in-lb (19 N·m) - 200 in-lb (23 N·m).

K. Install the Transducer to the Coupling Assembly

SUBTASK 35-12-11-420-006

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. DAMAGE CAN OCCUR IF WRENCHES ARE NOT USED TO CONNECT THE COMPONENTS.

(1) Do these steps to install the transducer [2] to the coupling assembly [9]:

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Make sure that you use only oxygen clean fittings.

(b) If necessary, remove the protective Flareless Tube Cap, 1/2-20 Thread, STD-1130.

(c) Loosely install the transducer [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Make sure that the transducer [2] and coupling assembly [9] are aligned correctly for the installation.

(e) Tighten the B-nut that attaches the transducer [2] to the coupling assembly [9] to 100 in-lb (11.3 N·m) - 110 in-lb (12.4 N·m).

1) If it is necessary, loosen the B-nut and turn the transducer [2] to get the correct installation position.

2) Re-tighten the B-nut to 100 in-lb (11.3 N·m) - 110 in-lb (12.4 N·m).

(f) If it is necessary, install a new identification label.

L. Install the Regulator/Transducer Assembly to the Crew Oxygen Cylinder

SUBTASK 35-12-11-420-007

(1) Get access to the crew oxygen cylinder.

SUBTASK 35-12-11-420-008

(2) Do this task: Regulator/Transducer Assembly Installation, TASK 35-12-11-400-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PRESSURE TRANSDUCER - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) Pressure Transducer Removal

(2) Pressure Transducer Installation.

(3) This procedure removes the pressure transducer from the crew oxygen cylinder. The pressure transducer is a component of the regulator, transducer and coupling assembly. You can replace the pressure transducer as a component or replace the entire regulator, transducer and coupling assembly as a unit, do this task: Regulator/Transducer Assembly Installation, TASK 35-12-11-400-801.

TASK 35-12-21-000-801

2. Pressure Transducer Removal

(Figure 401)

A. General

(1) This procedure removes the pressure transducer from the crew oxygen cylinder. The pressure transducer is a component of the regulator, transducer and coupling assembly. You can replace the pressure transducer as a component or replace the entire regulator, transducer and coupling assembly as a unit (TASK 35-12-11-000-801).

B. References

Reference	Title
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)
35-12-11-000-801	Regulator/Transducer Assembly Removal (P/B 401)

C. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

D. Remove the Pressure Transducer

SUBTASK 35-12-21-910-001

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-21-870-001

(2) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

SUBTASK 35-12-21-860-001

(3) Open this circuit breaker and install safety tag:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

SUBTASK 35-12-21-010-001

(4) Go into the forward cargo compartment to get to the crew oxygen cylinder [4] (View B).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-21-860-002

(5) Make sure that the shutoff valve [5] is closed, and the crew oxygen supply line is not pressurized.

SUBTASK 35-12-21-020-001

(6) Do these steps to disconnect the pressure transducer [2] (View B):

(a) Disconnect the electrical connector [1] from the pressure transducer [2].

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. USE A WRENCH ON THE TRANSDUCER SQUARE BOSS AND ON THE COUPLING HEX NUT. DAMAGE CAN OCCUR IF YOU DO NOT USE WRENCHES TO DISCONNECT THE COMPONENTS.

(b) Use a wrench to hold the coupling nut [6] on the regulator, transducer and coupling assembly [3].

(c) Use a wrench to loosen the pressure transducer [2].

(d) Remove the pressure transducer [2].

SUBTASK 35-12-21-480-001


WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.


(7) If the installation of the assembly will not occur within 5 minutes, do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

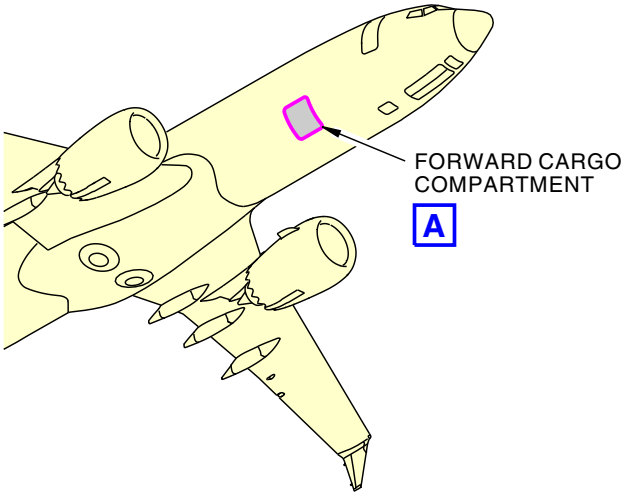


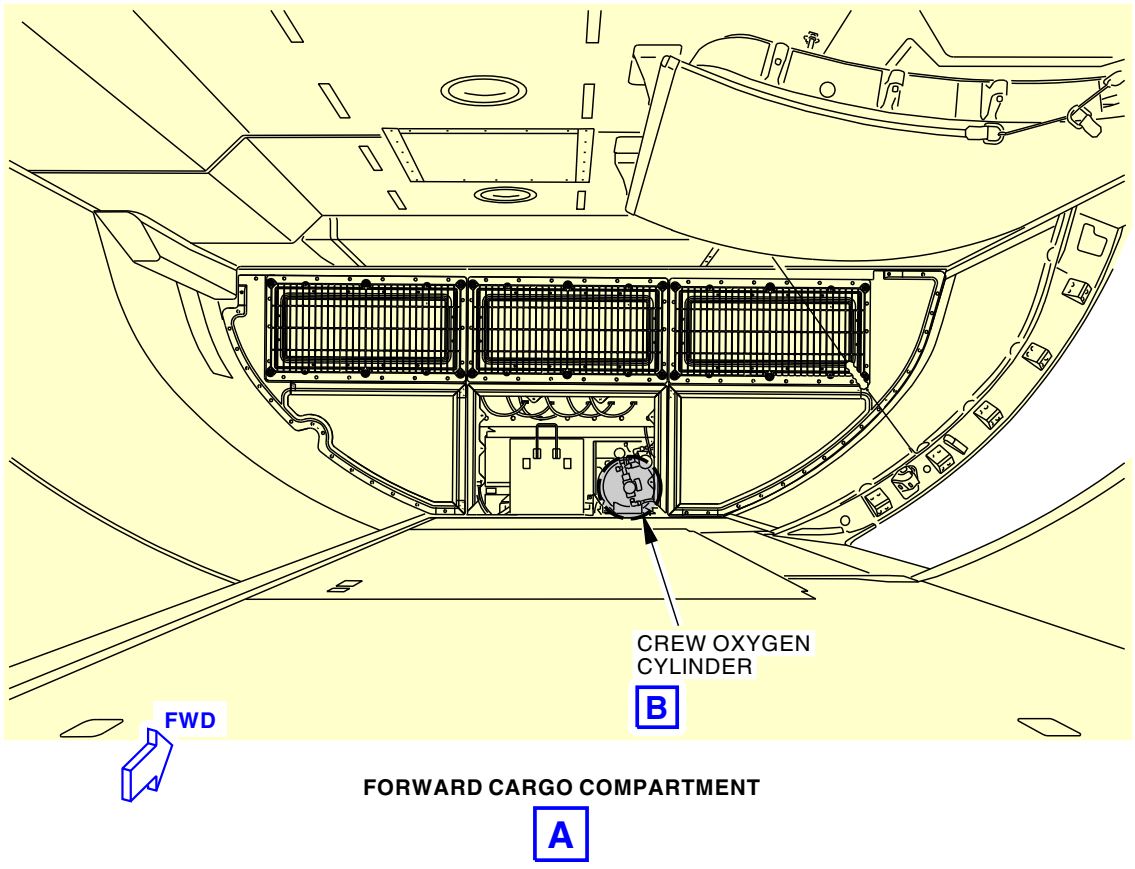

2414933 S00061536618_V2

Pressure Transducer Installation
Figure 401/35-12-21-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

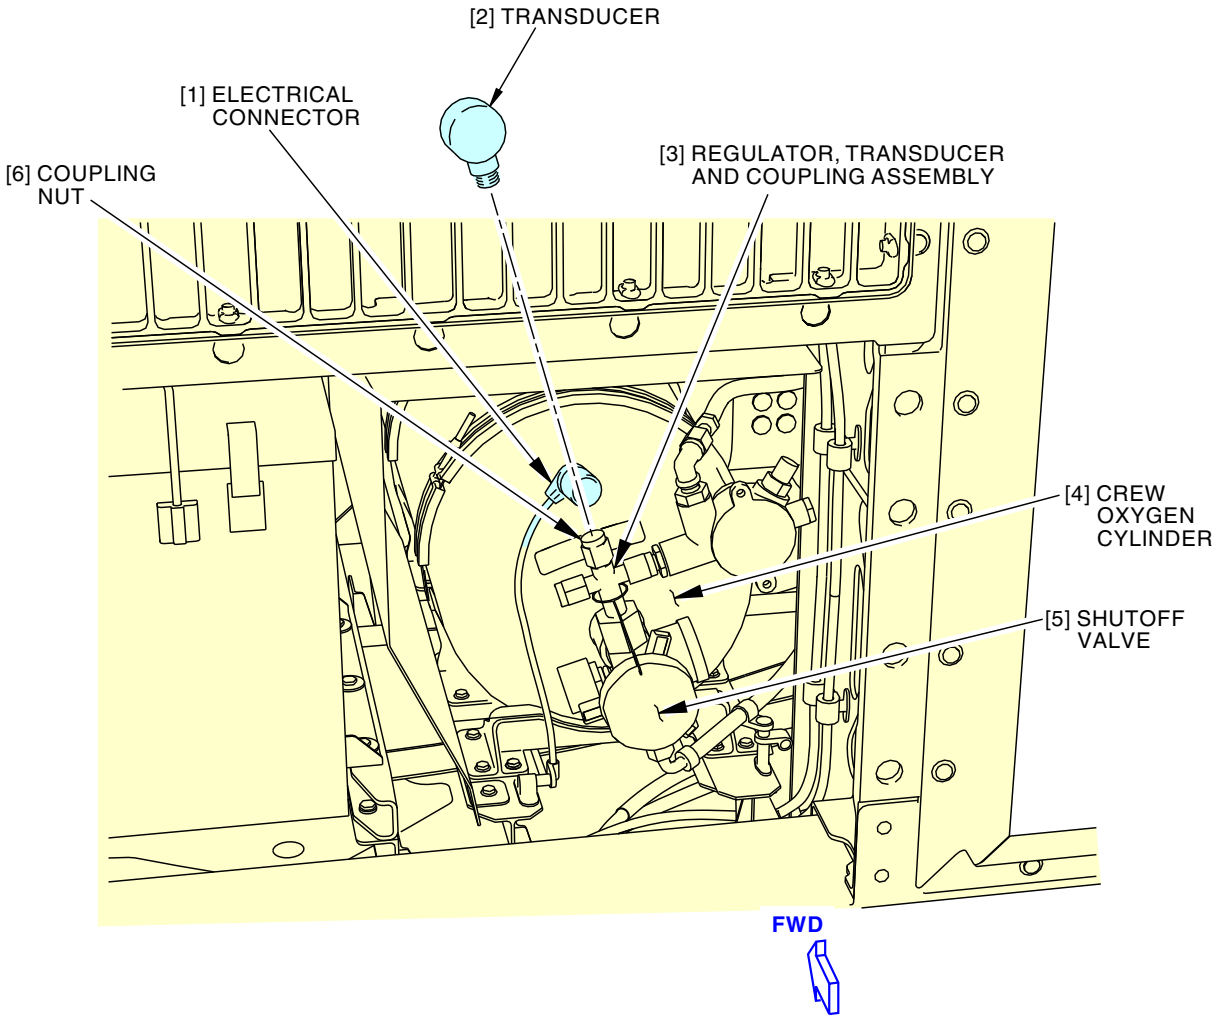

CREW OXYGEN CYLINDER (EXAMPLE)

B

2414934 S00061536619_V1

Pressure Transducer Installation
Figure 401/35-12-21-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-21-400-801

3. Pressure Transducer Installation

(Figure 401)

A. General

(1) This task installs the pressure transducer to the regulator, transducer and coupling assembly on the crew oxygen cylinder.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-802	Leak Test the Crew Oxygen System After System Maintenance or Repair (P/B 201)

C. Tools/Equipment

Reference	Description
STD-1130	Cap - Protective, Flareless Tube, 1/2-20 Thread
STD-1131	Plug - Protective, Flareless Tube, 1/2-20 Thread

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Transducer	35-12-21-01-005	PTF ALL
		35-12-21-01-006	PTF ALL

E. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

F. Procedure

SUBTASK 35-12-21-910-002

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-21-410-001

(2) Go into the forward cargo compartment to get to the crew oxygen cylinder (View A).

SUBTASK 35-12-21-420-001

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(3) Do these steps to install the pressure transducer [2] (View B):

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

(a) Remove the protective Flareless Tube Cap, 1/2-20 Thread, STD-1130, and Flareless Tube Plug, 1/2-20 Thread, STD-1131, from the crew oxygen cylinder [4].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION DO NOT USE THE TRANSDUCER OR THE COUPLING AS A LEVER. USE A WRENCH ON THE TRANSDUCER SQUARE BOSS AND ON THE COUPLING HEX NUT. DAMAGE CAN OCCUR IF YOU DO NOT USE WRENCHES TO DISCONNECT THE COMPONENTS.

(b) Use a wrench to hold the coupling nut [6] in its position.

(c) Put the pressure transducer [2] in its position on the coupling nut [6].

(d) Tighten the coupling nut [6] that attaches the pressure transducer [2] to the regulator, transducer and coupling assembly [3] to 100 in-lb (11.3 N·m) - 110 in-lb (12.4 N·m).

(e) Connect the electrical connector [1] to the pressure transducer [2].

SUBTASK 35-12-21-840-001

(4) Do this task: Leak Test the Crew Oxygen System After System Maintenance or Repair, TASK 35-12-00-800-802.

G. Do a Check of the Electrical Connection

SUBTASK 35-12-21-860-003

(1) Remove the safety tag and close this circuit breaker:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

SUBTASK 35-12-21-210-001

(2) Make sure that the pressure indicator on the aft overhead panel shows pressure.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN PRESSURE INDICATOR - REMOVAL/INSTALLATION

1. General

A. This procedure has two tasks:

(1) Crew oxygen pressure indicator removal

(2) Crew oxygen pressure indicator installation.

TASK 35-12-22-020-801

2. Crew Oxygen Pressure Indicator Removal

Figure 401

A. Location Zones

Zone	Area
212	Flight Compartment - Right

B. Procedure

SUBTASK 35-12-22-020-001

(1) Do these steps to remove the crew oxygen pressure indicator [1]:

(a) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

(b) Loosen the 4 quarter-turn fasteners that hold the P5-14 overhead panel.

(c) Carefully pull the P5-14 overhead panel away from the rest of the P5 panel until there is sufficient access to the crew oxygen pressure indicator [1].


(d) Disconnect the electrical connector [2] from the crew oxygen pressure indicator [1].

(e) Loosen the release screw on the clamp that holds the crew oxygen pressure indicator [1].

(f) Remove the crew oxygen pressure indicator [1] from the P5-14 panel.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

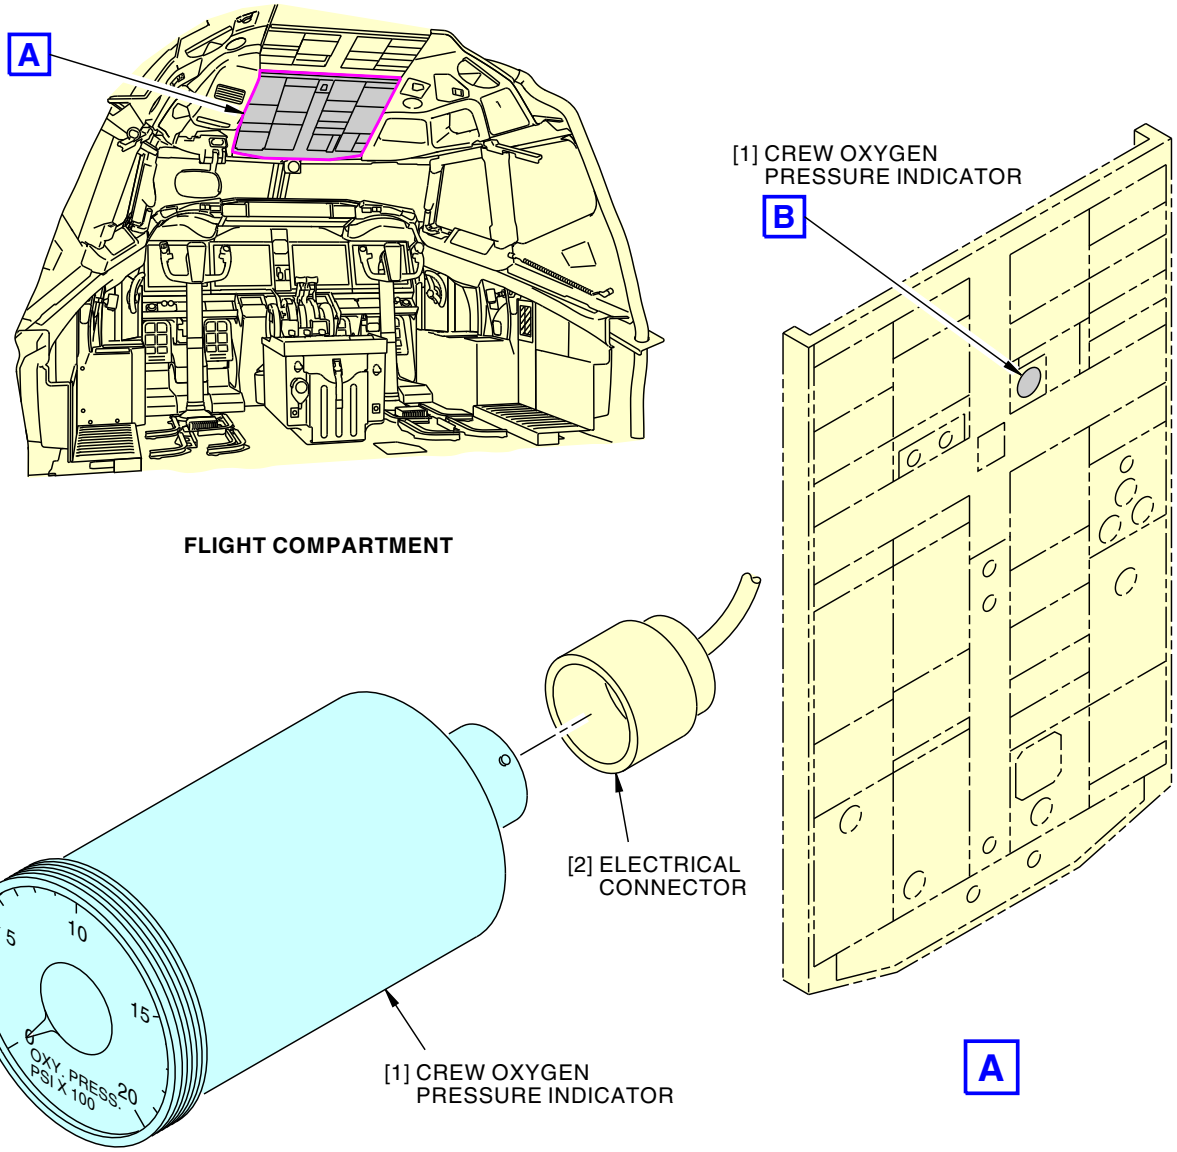

2414921 S00061536593_V2

Crew Oxygen Pressure Indicator Installation
Figure 401/35-12-22-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-22-400-801

3. Crew Oxygen Pressure Indicator Installation

A. References

Reference	Title
35-12-00-710-801	Crew Oxygen Pressure Indication Visual Check (P/B 501)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Crew oxygen pressure indicator	31-11-95-01-010	PTF ALL
		35-12-22-01-050	PTF ALL

C. Location Zones

Zone	Area
212	Flight Compartment - Right

D. Procedure

SUBTASK 35-12-22-400-001

(1) Do these steps to install the crew oxygen pressure indicator [1]:

(a) Put the crew oxygen pressure indicator [1] in its position on the P5-14 overhead panel.

(b) Tighten the release screw on the clamp that holds the crew oxygen pressure indicator [1].

(c) Connect the electrical connector [2] to the crew oxygen pressure indicator [1].

(d) Carefully put the P5-14 overhead panel onto the P5 panel.

(e) Tighten the 4 quarter-turn fasteners that hold the P5-14 overhead panel.

(f) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-12-22-720-001

(2) Do this task: Crew Oxygen Pressure Indication Visual Check, TASK 35-12-00-710-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DISCHARGE INDICATOR DISC - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Overboard Discharge Disc Removal

(2) Overboard Discharge Disc Installation

B. The overboard discharge port is found on the bottom right side of the fuselage skin, aft of the electronic equipment access door.

C. You can remove the indicator disc from the outside of the airplane.

TASK 35-12-51-000-801

2. Discharge Indicator Disk Removal

(Figure 401)

A. References

Reference	Title
12-15-21-600-804	Crew Oxygen Cylinder Replacement (P/B 301)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Tools/Equipment

Reference	Description
STD-1464	Pliers - Snap Ring

C. Location Zones

Zone	Area
120	Subzone - Body Station 396 to Body Station 540

D. Procedure

SUBTASK 35-12-51-910-001

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-51-200-001

(2) Measure the pressure of the crew oxygen cylinder.

(a) Only do the task to replace the crew oxygen cylinder if the pressure shows that it is empty.

NOTE: The disk can be missing for causes other than oxygen cylinder discharge.

SUBTASK 35-12-51-410-001

(3) To remove the crew oxygen cylinder, do this task: Crew Oxygen Cylinder Replacement, TASK 12-15-21-600-804.

SUBTASK 35-12-51-010-001

(4) Find the overboard discharge port [1], on the right side of the fuselage, aft of the electronic equipment access door.

SUBTASK 35-12-51-020-001

(5) Remove the snap ring [2] with snap ring pliers, STD-1464.

(a) Keep the snap ring [2] for the installation.

SUBTASK 35-12-51-020-002


(6) Remove the green indicator disk [3], or parts from the overboard discharge port [1].


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Discard the green indicator disk [3].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

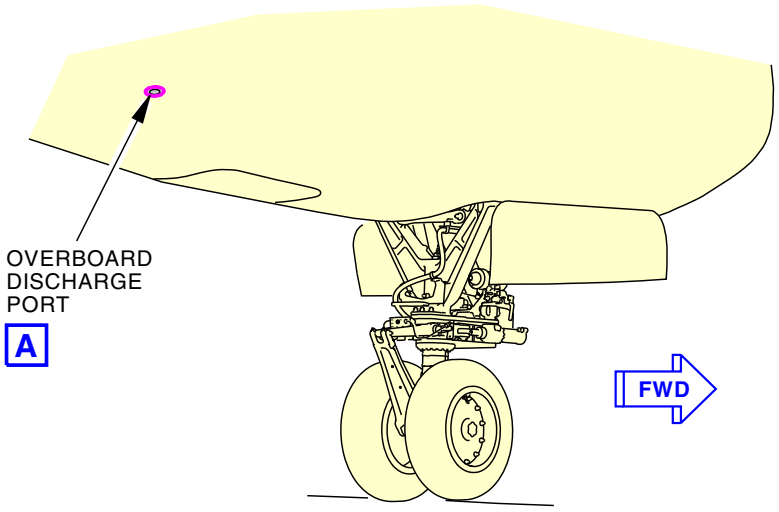

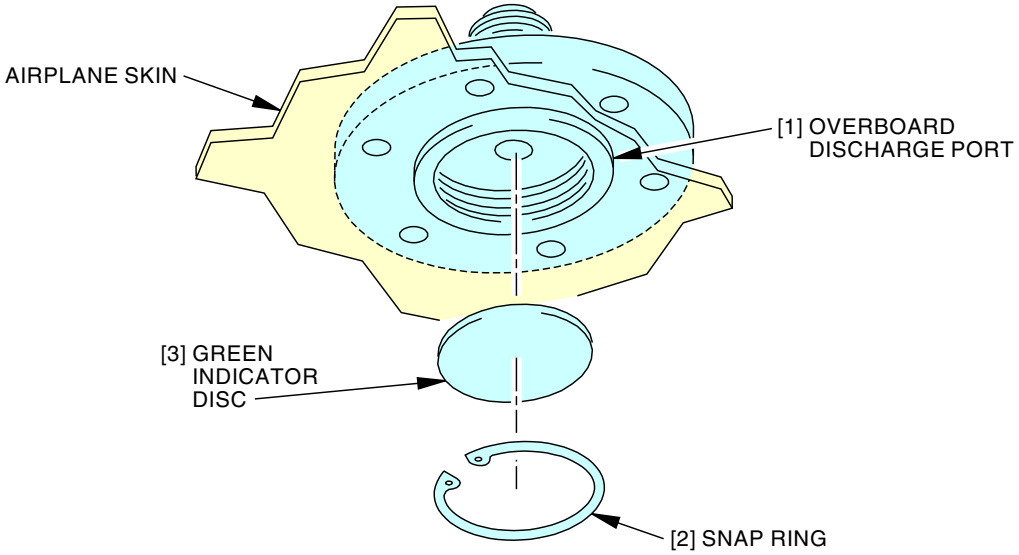

OVERBOARD DISCHARGE PORT

A

2414935 S00061536628_V1

Overboard Discharge Port Installation
Figure 401/35-12-51-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-51-400-801

3. Discharge Indicator Disk Installation

(Figure 401)

A. References

Reference	Title
12-15-21-600-804	Crew Oxygen Cylinder Replacement (P/B 301)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Snap ring	35-12-51-01-005	PTF ALL
3	Indicator disk	35-12-51-01-010	PTF ALL

C. Location Zones

Zone	Area
120	Subzone - Body Station 396 to Body Station 540

D. Procedure

SUBTASK 35-12-51-910-002

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-51-410-002

(2) Find the overboard discharge port [1], on the right side of the fuselage skin, aft of the main equipment center door.

NOTE: The overboard discharge port [1] is not removed from the airplane.

SUBTASK 35-12-51-420-001

(3) Put the green indicator disk [3] on the overboard discharge port [1].

SUBTASK 35-12-51-420-002

(4) Install the snap ring [2] on the green indicator disk [3].

SUBTASK 35-12-51-210-001

(5) Make sure that the green indicator disk [3] is installed correctly.

SUBTASK 35-12-51-420-003

(6) Install the crew oxygen cylinder if it was removed (TASK 12-15-21-600-804).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN MASK/STOWAGE BOX - MAINTENANCE PRACTICES

1. General

A. This procedure contains this task:

(1) Crew Oxygen Mask Stowage.

B. This procedure gives the maintenance practices for stowage of the crew oxygen masks. Correct stowage is necessary to make sure the flight crew can quickly put on the oxygen masks.

C. Only approved persons are permitted to do the stowage procedure.

TASK 35-12-85-910-801

2. Crew Oxygen Mask Stowage

(Figure 201)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-700-801	Crew Oxygen Stowage Box Test (Mask Stowed in Stowage Box) (P/B 501)
35-12-85-000-802	Oxygen Mask/Regulator Removal (P/B 401)
35-12-85-100-801	Crew Oxygen Mask Cleaning (P/B 701)
35-12-85-400-802	Oxygen Mask/Regulator Installation (P/B 401)

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Stow the Crew Oxygen Masks (WITH EROS MF10/MF20/MF40 and ORONASAL MC10 MASKS)

SUBTASK 35-12-85-910-001

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-85-010-001

(2) Go into the flight compartment to get access to the applicable crew oxygen mask stowage box.

SUBTASK 35-12-85-860-016

(3) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 35-12-85-210-001

(4) Examine the mask, harness and oxygen supply hose to make sure that the components are satisfactory:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING DO NOT PUSH THE HARNESS INFLATION LEVERS ON THE REGULATOR. THIS WILL INFLATE THE HARNESS, AND WILL STOP THE CORRECT STORAGE OF THE MASK/REGULATOR. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(a) Do not push the harness inflation levers on the regulator.

(b) Make sure that the harness and oxygen supply hose are not twisted or inverted inside out.

(c) Make sure that the face seal padding on the oxygen mask is soft and quickly moves back to the initial position when you push on it.

(d) Remove the opaque protective shipping cover from the face mask lens, if it is installed.

1) Do not remove the clear, electrostatic, tear-off film strip from the mask lens.

NOTE: A clear, electrostatic, tear-off film strip could be installed on some goggles. Do not remove the clear tear-off film strip, if it is installed. The clear electrostatic tear-off strip is for the quick removal of ice or condensation from the mask lens after a rapid decompression.

NOTE: On some new masks an opaque (not transparent) protective shipping/storage cover may be installed on the face mask goggle lens by the manufacturer. The opaque protective shipping cover must be removed before you stow the mask, if the cover is on the mask.

SUBTASK 35-12-85-210-004

(5) If the mask, harness or oxygen supply hose are not in satisfactory condition, remove and replace the mask assembly (TASK 35-12-85-000-802 and TASK 35-12-85-400-802).

(a) If necessary, clean the mask to a satisfactory condition (TASK 35-12-85-100-801).

SUBTASK 35-12-85-420-001

(6) Open the mask stowage box doors.

(a) Make sure that there is no Foreign Object Debris (FOD) in the stowage box.

SUBTASK 35-12-85-420-002

(7) Connect the mask/regulator oxygen supply hose to the connector inside the mask stowage box.

SUBTASK 35-12-85-420-003

(8) Connect the mask/regulator microphone line to the connector inside the mask stowage box.

SUBTASK 35-12-85-860-001

(9) Make sure that the DILUTION CONTROL switch is on the 100% position.

SUBTASK 35-12-85-860-002

(10) Make sure that the EMERGENCY oxygen control knob is off.

SUBTASK 35-12-85-530-001

(11) Coil the oxygen supply hose into the bottom of the mask stowage box.

NOTE: Use the largest diameter possible to coil the hose.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-85-530-002

CAUTION

DO NOT PUSH ON THE HARNESS INFLATION LEVERS, AS IT WILL INFLATE THE HARNESS AND PREVENT CORRECT STOWAGE OF THE MASK.

(12) Make sure that the harness is completely deflated.

SUBTASK 35-12-85-530-003

(13) Hold the mask by the regulator, with the facepiece down and the inside of the mask toward you.

SUBTASK 35-12-85-530-004

CAUTION

DO NOT PUSH THE HARNESS CROSS STRAPS INTO OR BEHIND THE NOSE PIECE, AS IT MAY CAUSE THE CROSS STRAPS TO HANG UP ON THE MASK DURING INFLATION.

(14) Grasp the harness and pull it downward such that the cross straps are below the facepiece.

NOTE: Let the excess harness hang downward.

SUBTASK 35-12-85-530-005

(15) Position the oxygen supply hose down the center of the facepiece.

SUBTASK 35-12-85-530-006

(16) Put the harness into the mask stowage box, then followed by the mask/regulator assembly.

SUBTASK 35-12-85-530-007

(17) Push down on the assembly until the mask/regulator is fully seated against the stop inside the mask stowage box.

SUBTASK 35-12-85-530-008

(18) Close the right-hand door on the mask stowage box.

(a) Make sure that the door does not pinch on the oxygen supply hose.

SUBTASK 35-12-85-530-009

(19) Close the left-hand door on the mask stowage box.

NOTE: The "OXY ON" flag will be visible on the door.

SUBTASK 35-12-85-530-010

CAUTION

DO NOT PUSH ON THE HARNESS INFLATION LEVERS, AS IT WILL INFLATE THE HARNESS AND PREVENT CORRECT STOWAGE OF THE MASK.

(20) Push the TEST AND RESET control lever on the left-hand door and release.

NOTE: The "OXY ON" flag will go out of view when the control lever is released.

SUBTASK 35-12-85-860-017

(21) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

F/O Electrical System Panel, P6-2


Row	Col	Number	Name
D	24	C00085	AUDIO OBS


SUBTASK 35-12-85-700-001

(22) Do this task: Crew Oxygen Stowage Box Test (Mask Stowed in Stowage Box), TASK 35-12-00-700-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

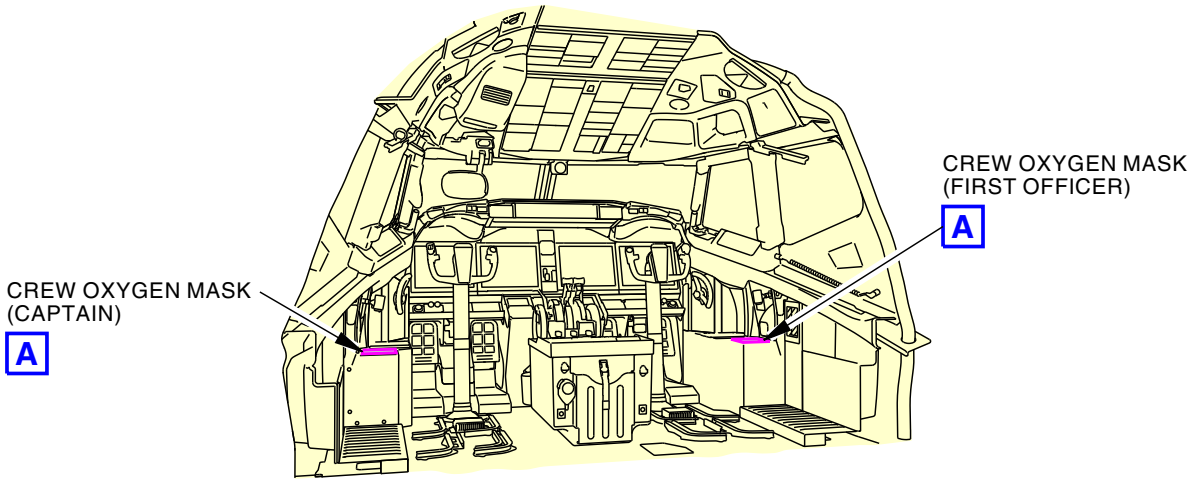


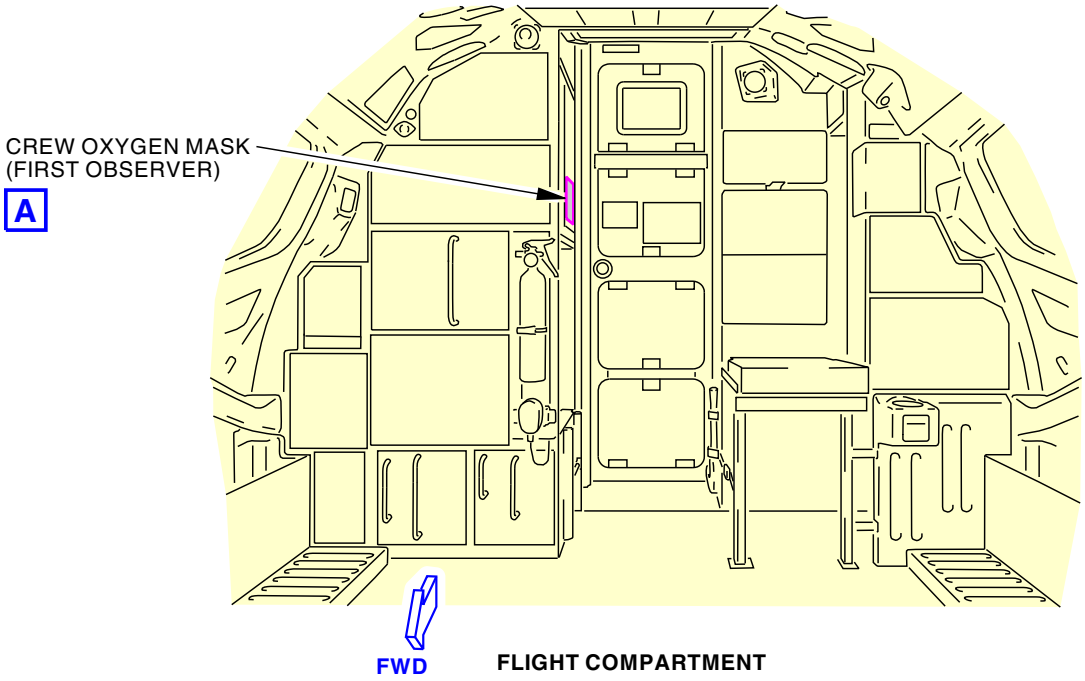

2535703 S0000601462_V1

Crew Oxygen Mask Maintenance Practices
Figure 201/35-12-85-990-801 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

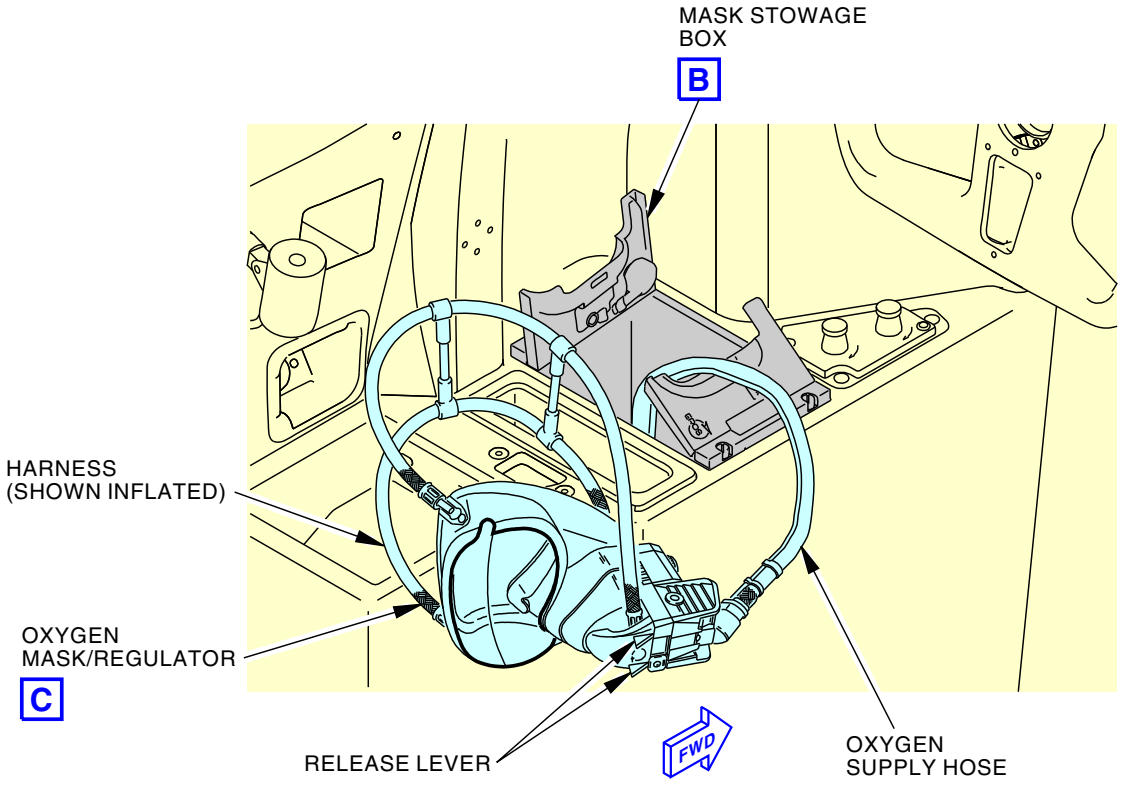


CREW OXYGEN MASK
(CAPTAIN'S OXYGEN MASK IS SHOWN, OTHER CREW MEMBERS' OXYGEN MASKS ARE EQUIVALENT)

A

2414937 S00061536634_V3

Crew Oxygen Mask Maintenance Practices
Figure 201/35-12-85-990-801 (Sheet 2 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

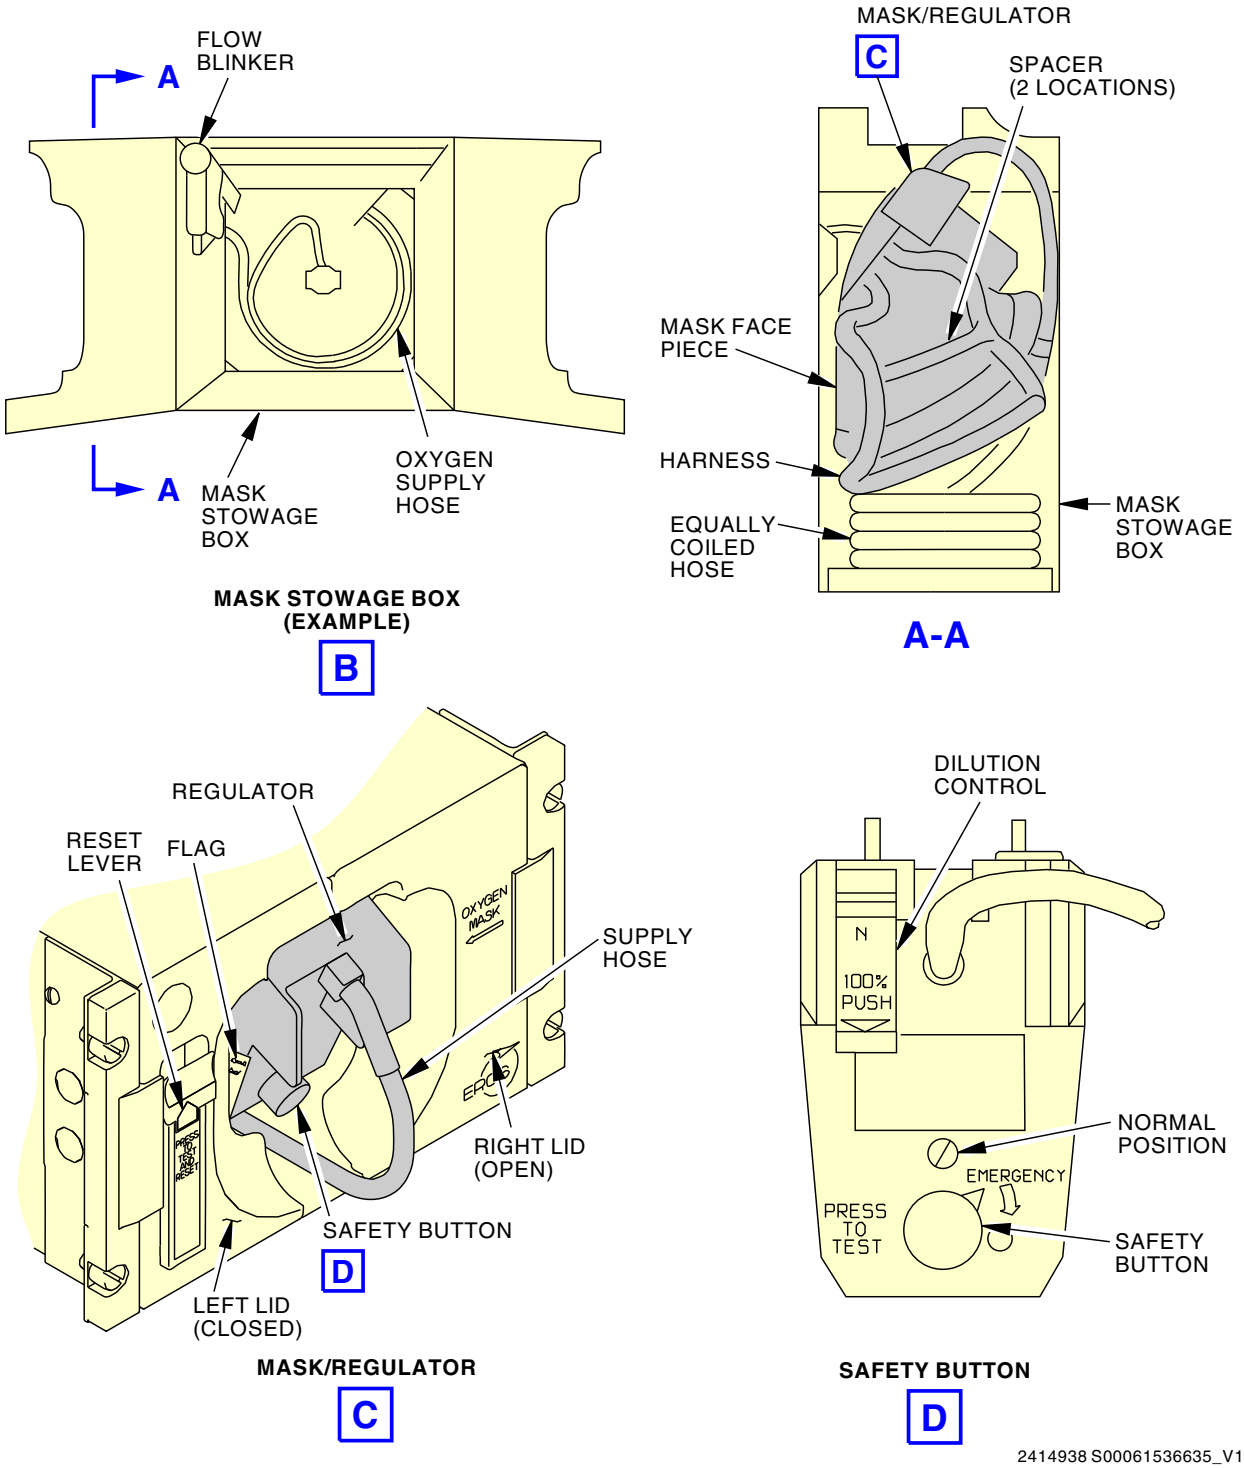

2414938 S00061536635_V1

Crew Oxygen Mask Maintenance Practices
Figure 201/35-12-85-990-801 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

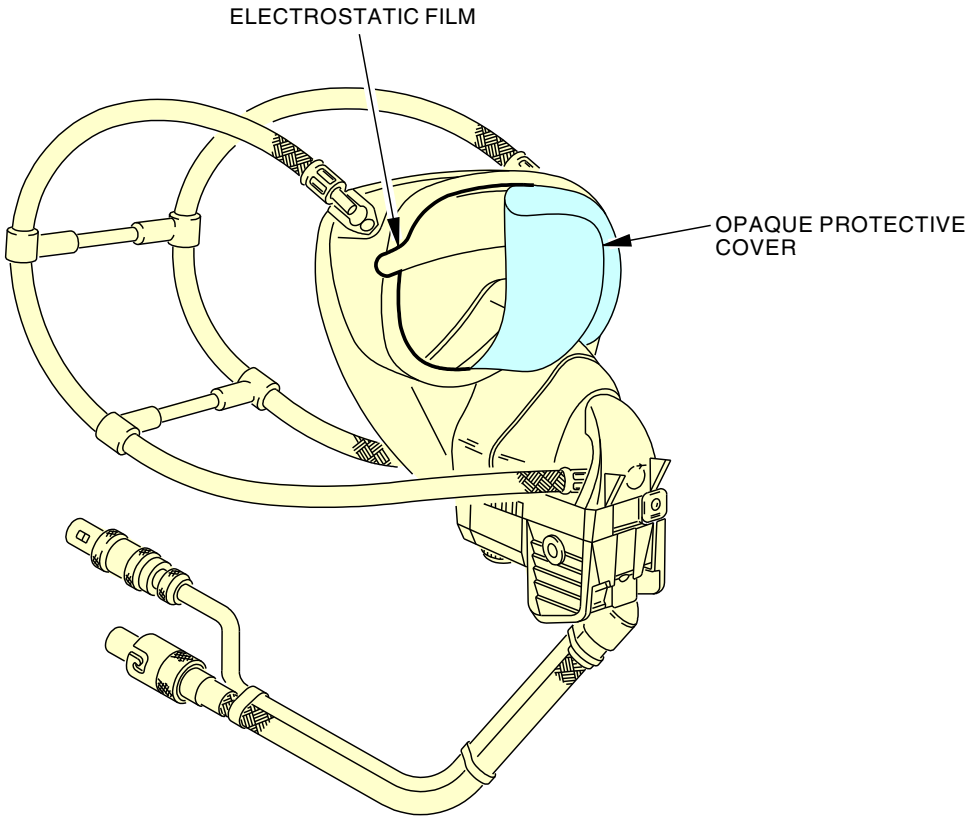

**OXYGEN MASK/REGULATOR
(SHOWN INFLATED)
(EXAMPLE)**

C

2414939 S00061536636_V2

**Crew Oxygen Mask Maintenance Practices
Figure 201/35-12-85-990-801 (Sheet 4 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN MASK/STOWAGE BOX - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) A removal of the oxygen mask stowage box

(2) An installation of the oxygen mask stowage box

(3) A removal of the oxygen mask/regulator

(4) An installation of the oxygen mask/regulator.

TASK 35-12-85-000-801

2. Oxygen Mask Stowage Box Removal

(Figure 401)

A. References

Reference	Title
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Oxygen Mask Stowage Box Removal

SUBTASK 35-12-85-910-002

(1) Obey the safety precautions and general instructions for the oxygen system before the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-85-870-001

(2) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

SUBTASK 35-12-85-860-003

(3) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 35-12-85-010-002

(4) Go into the flight compartment to get access to the crew oxygen mask stowage box(es).

SUBTASK 35-12-85-860-004

(5) Make sure that the crew oxygen supply line is not pressurized.

SUBTASK 35-12-85-020-001

(6) Do these steps to remove the mask stowage box [5]:

(a) Loosen the quarter-turn fasteners [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Carefully pull the mask stowage box [5] out of the receptacle.

SUBTASK 35-12-85-020-002

(7) If it is necessary, disconnect the microphone connector [4] from the communications connection at the back of the mask stowage box [5].

SUBTASK 35-12-85-020-003

(8) Do these steps to disconnect the oxygen supply hose [3]:

WARNING YOU MUST LOOSEN THE OXYGEN SUPPLY HOSE CONNECTION SLOWLY. THE PRESSURE THAT STAYS IN THE LINES CAN COME OUT AT HIGH TEMPERATURE AND CAN CAUSE A FIRE OR EXPLOSION. A FIRE OR EXPLOSION CAN CAUSE INJURY TO PERSONS AND DAMAGE THE AIRPLANE.

(a) Loosen the connection between the oxygen hose connector [2] and fitting at the back of the mask stowage box [5].

1) Disconnect the oxygen supply hose [3].

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

2) If the installation of the replacement mask stowage box [5] will not occur within 5 minutes, do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

3) Make sure that only oxygen clean fittings are used.


NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

SUBTASK 35-12-85-020-004


(9) Remove the mask stowage box [5].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

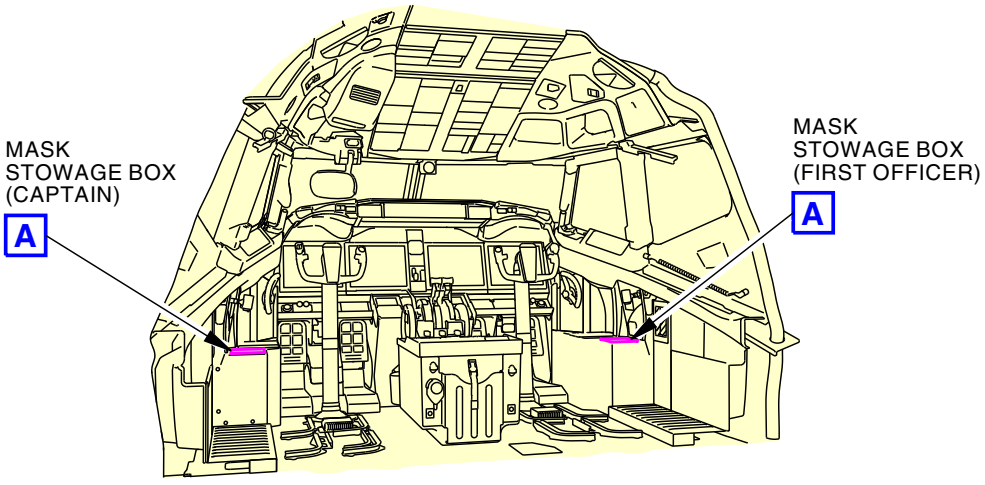

FLIGHT COMPARTMENT

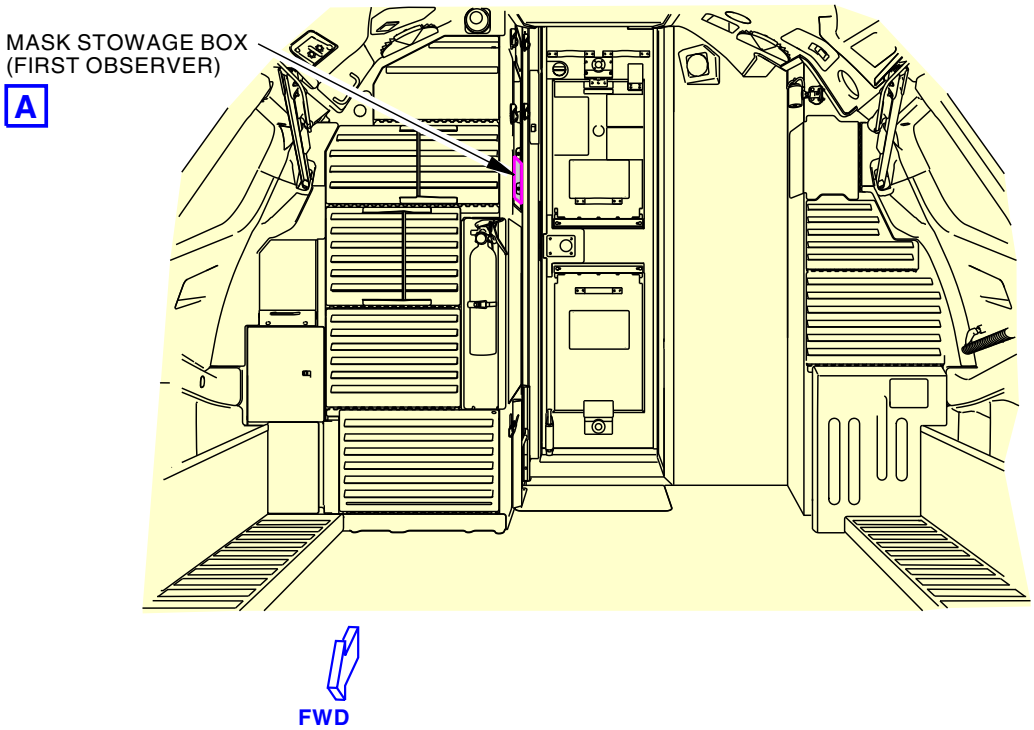


FLIGHT COMPARTMENT

2536759 S0000601516_V1

Oxygen Mask Stowage Box Installation
Figure 401/35-12-85-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

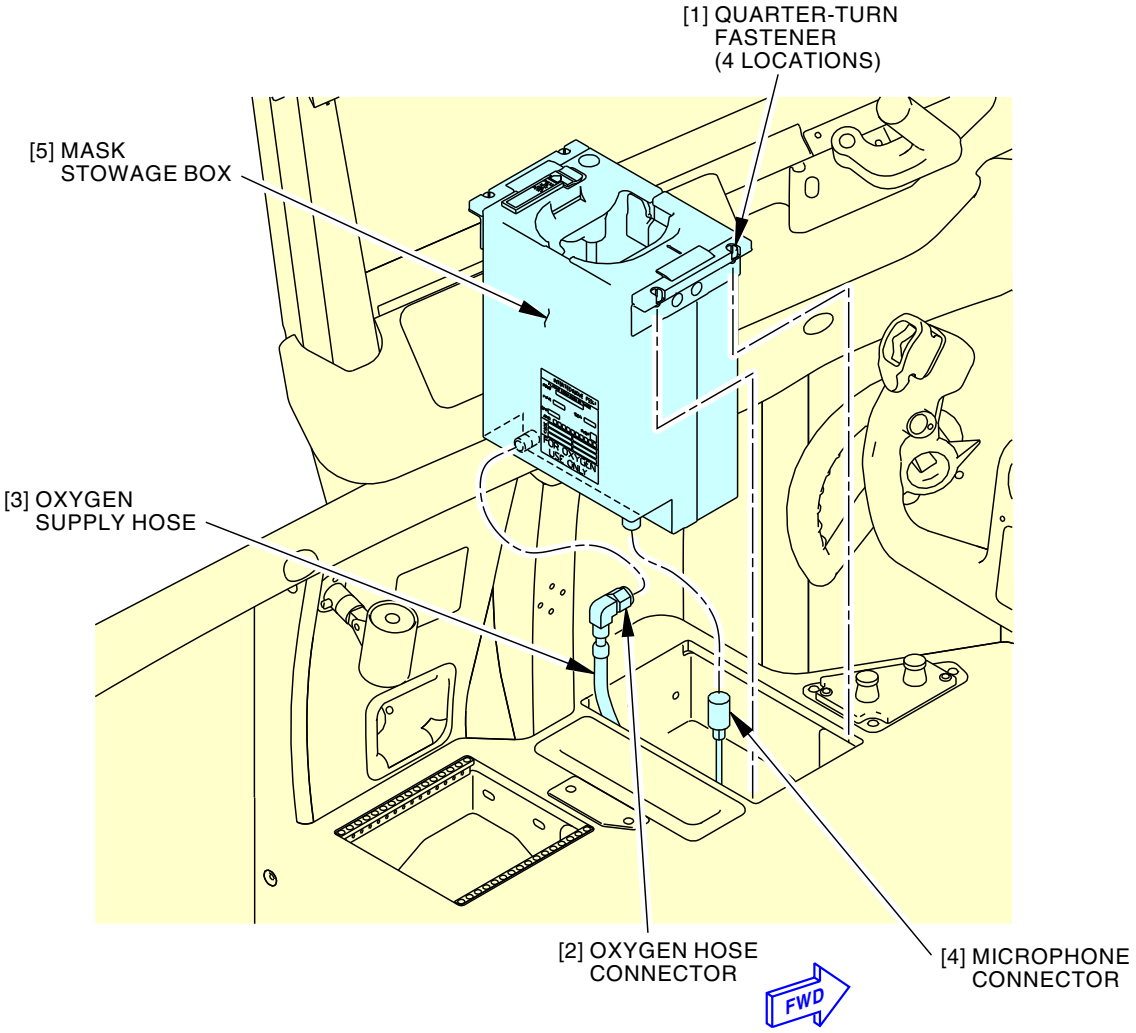

MASK STOWAGE BOX
(CAPTAIN'S MASK STOWAGE BOX IS SHOWN, OTHER CREW MEMBER'S MASK STOWAGE BOXES ARE EQUIVALENT)

A

2414941 S00061536640_V1

Oxygen Mask Stowage Box Installation
Figure 401/35-12-85-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-85-400-801

3. Oxygen Mask Stowage Box Installation

(Figure 401)

A. References

Reference	Title
23-51-00-710-801	Flight Interphone System Operational Test (P/B 501)
35-00-00-100-801	Clean the Oxygen System Components (P/B 701)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-700-802	Crew Oxygen Mask-Regulator Test (P/B 501)
35-12-00-800-802	Leak Test the Crew Oxygen System After System Maintenance or Repair (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
5	Mask stowage box	35-12-85-20-005	PTF ALL
		35-12-85-20-505	PTF ALL
		35-12-85-21-010	PTF ALL

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Oxygen Mask Stowage Box Installation

SUBTASK 35-12-85-910-003

(1) Obey the safety precautions and general instructions for the oxygen system before the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-85-410-001

(2) Go into the flight compartment area where the crew oxygen mask stowage box(es) will be installed.

SUBTASK 35-12-85-860-005

(3) Make sure that the crew oxygen supply line is not pressurized.

SUBTASK 35-12-85-900-001

(4) Do these steps before the oxygen system tubing or hoses installation:

(a) Examine the tube or hose ends and fittings for damage:

1) Look for damage or contamination that can prevent a good seal during the installation.

2) Look for worn areas or dents on the tube.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

3) Make sure that only oxygen clean fittings are used.

NOTE: Oxygen clean fittings come from a sealed package labeled for oxygen system installation. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs that must be as clean as the installation connections.

4) If it is necessary, replace the tube.

(b) If it is necessary to clean the components, do this task: Clean the Oxygen System Components, TASK 35-00-00-100-801.

(c) Do not apply lubrication during the installation.

NOTE: The dry film lubrication on the parts, as supplied, is satisfactory.

SUBTASK 35-12-85-420-004

(5) Do these steps to connect the oxygen supply hose [3]:

(a) Remove the protective plugs and caps.

CAUTION YOU MUST USE TWO WRENCHES TO TIGHTEN THE OXYGEN SUPPLY HOSE TO THE OXYGEN MASK STOWAGE BOX FITTING. DAMAGE TO THE OXYGEN SUPPLY HOSE CAN OCCUR IF YOU DO NOT USE WRENCHES TO CONNECT THESE COMPONENTS.

(b) Connect the oxygen supply hose [3] to the fitting.

1) Tighten the connection between the oxygen hose connector [2] and fitting at the back of the mask stowage box [5] to 140 ±5 in-lb (15.8 ±0.6 N·m).

(c) Use a backup wrench to make sure that the fitting does not turn.

SUBTASK 35-12-85-420-005

(6) If it is necessary, connect the microphone connector [4] to the communications connection at the back of the mask stowage box [5].

SUBTASK 35-12-85-420-006

(7) Do these steps to install the mask stowage box [5]:

(a) Position the oxygen supply hose [3] and microphone connector [4] in such a way to make sure that they will not rub on the structure.

(b) Carefully install the mask stowage box [5].

(c) Confirm the orientation of the mask stowage box [5] is installed correctly.

NOTE: It is possible to install the captain's and first officer's mask stowage boxes incorrectly, turned 180 degrees from the correct position. In the correct position, the words on the mask stowage boxes will be easy to read. The crew and maintenance personnel must find it easy to read the words when they look forward from the captain's and the first officer's seats.

(d) Tighten the quarter-turn fasteners [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-85-410-002

(8) If it is necessary to install the mask and regulator in the mask stowage box [5], do this task: Oxygen Mask/Regulator Installation, TASK 35-12-85-400-802.

SUBTASK 35-12-85-860-006

(9) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 35-12-85-840-001

(10) Do this task: Leak Test the Crew Oxygen System After System Maintenance or Repair, TASK 35-12-00-800-802.

SUBTASK 35-12-85-710-001

(11) Do this task: Crew Oxygen Mask-Regulator Test, TASK 35-12-00-700-802.

SUBTASK 35-12-85-710-002

(12) To do a check of the boom microphone to make a voice transmission between two flight crew stations, do this task: Flight Interphone System Operational Test, TASK 23-51-00-710-801.

——— END OF TASK ———

TASK 35-12-85-000-802

4. Oxygen Mask/Regulator Removal

(Figure 401,Figure 402)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-800-801	Bleed the Crew Oxygen System Prior to System Maintenance or Repair (P/B 201)

B. Consumable Materials

Reference	Description	Specification
G00624	Bag - Plastic, General Purpose	

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Remove the Oxygen Mask/Regulator

SUBTASK 35-12-85-910-004

(1) Obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-85-870-002

(2) Do this task: Bleed the Crew Oxygen System Prior to System Maintenance or Repair, TASK 35-12-00-800-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-85-860-007

(3) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 35-12-85-010-003

(4) Go into the flight compartment to get access to the crew oxygen masks.

SUBTASK 35-12-85-860-008

(5) Make sure that the crew oxygen supply line is not pressurized.

SUBTASK 35-12-85-020-005

(6) Do these steps to remove the applicable oxygen mask assembly [25] from the oxygen mask stowage box [21]:

(a) Open the left and right lid on the applicable oxygen mask stowage box [21].

(b) Disconnect the microphone line at the microphone connection [23].

(c) Disconnect the oxygen supply hose [24] at the oxygen supply hose connection [22].

(d) Attach the oxygen supply hose [24] and the microphone line together to make a bundle.

(e) Remove the oxygen mask assembly [25].

SUBTASK 35-12-85-530-036

(7) If necessary, install protective caps on the microphone connection [23] and line.

SUBTASK 35-12-85-480-001

(8) Do these steps if the installation of a removed oxygen mask assembly will not occur within 5 minutes:

(a) Seal the opening of the disconnected oxygen supply hose [24] on the oxygen mask assembly [25].

NOTE: This step is not necessary if you discard the oxygen mask assembly [25].


1) Attach a clean plastic bag, G00624 around the opening of the oxygen supply hose [24].

(b) Seal the opening of the oxygen supply hose connection [22] on the related oxygen mask stowage box [21].

1) Attach a clean plastic bag, G00624 around the opening of the oxygen supply hose connection [22].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

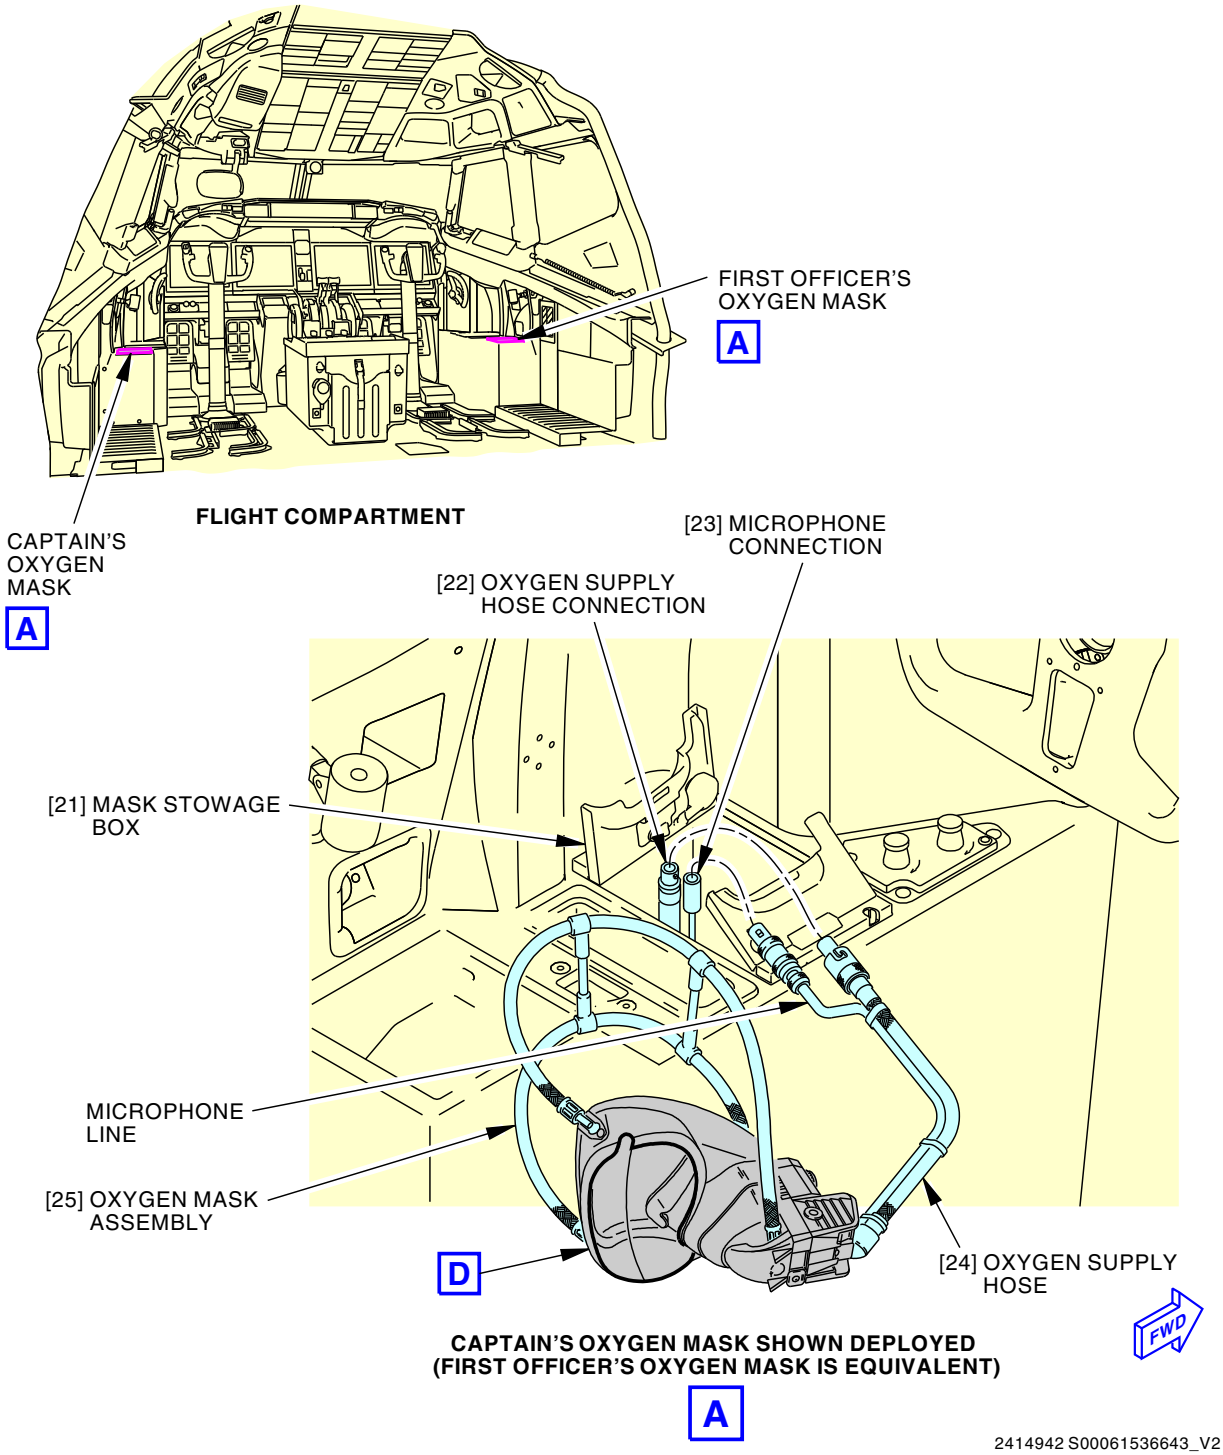


Crew Oxygen Mask Installation
Figure 402/35-12-85-990-803 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

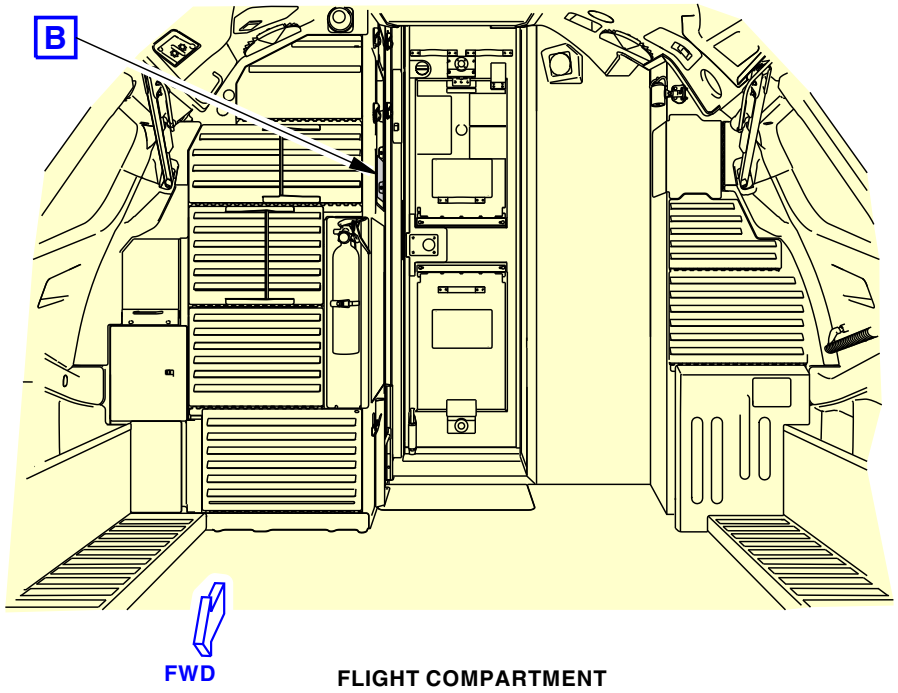


FLIGHT COMPARTMENT

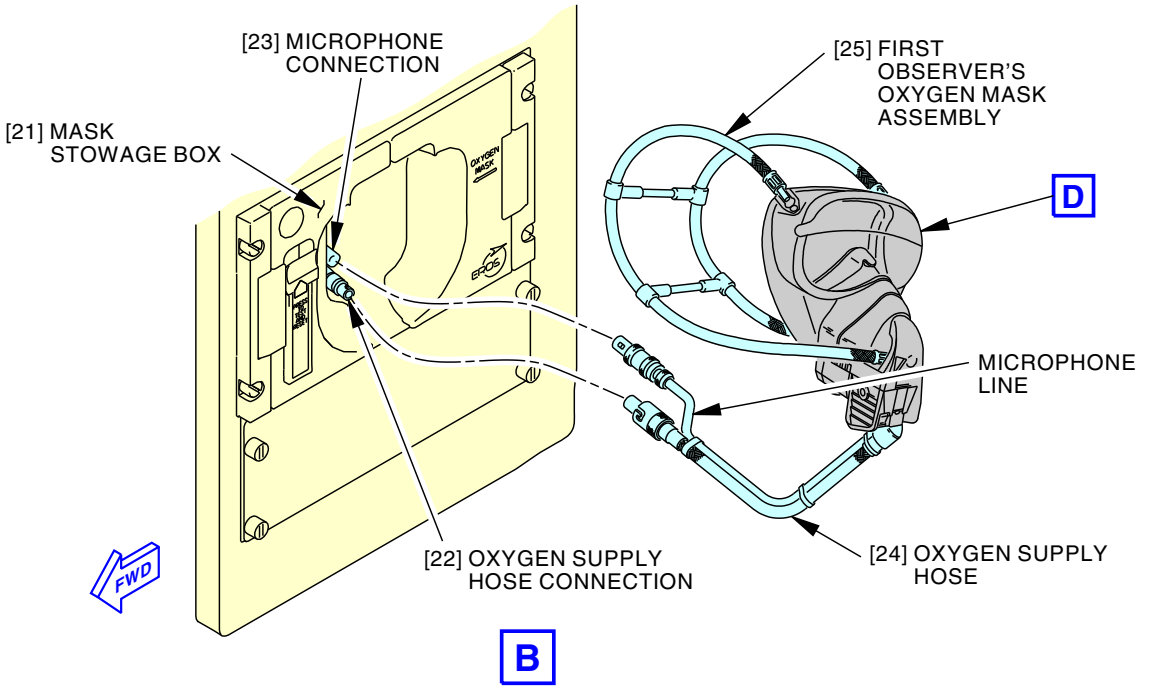

Crew Oxygen Mask Installation
Figure 402/35-12-85-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

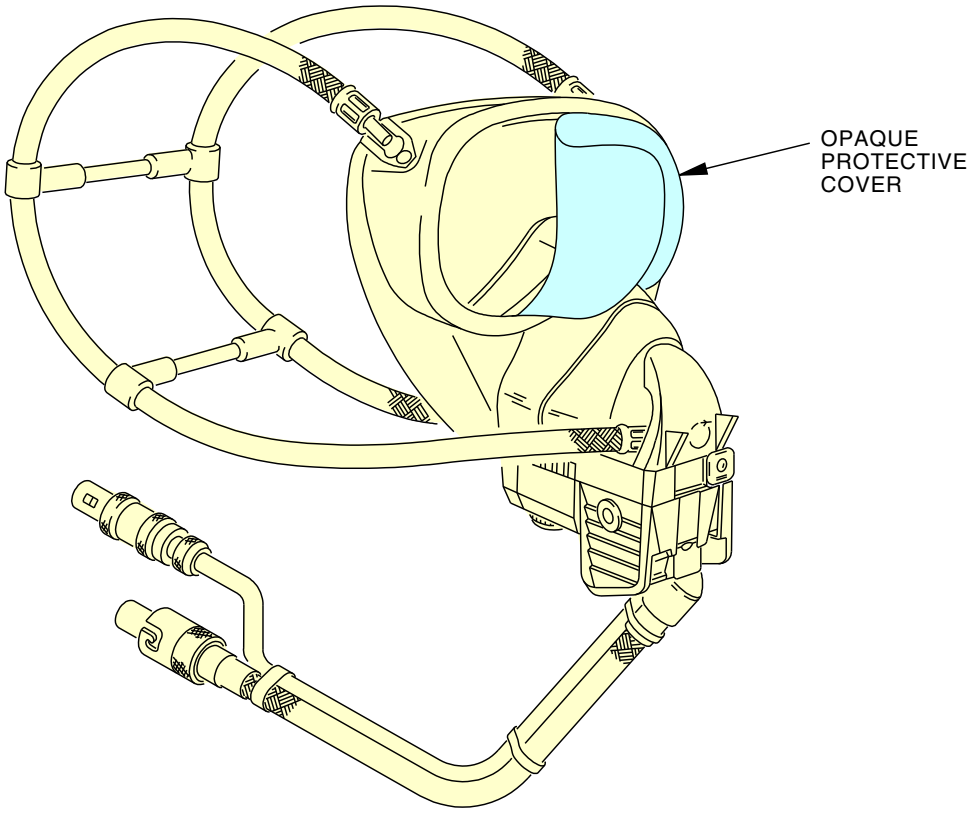

**OXYGEN MASK/REGULATOR
(SHOWN INFLATED)
(EXAMPLE)**

D

2536763 S0000601629_V1

**Crew Oxygen Mask Installation
Figure 402/35-12-85-990-803 (Sheet 3 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-12-85-400-802

5. Oxygen Mask/Regulator Installation

(Figure 401, Figure 402)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
23-51-00-710-802	Oxygen Mask Microphone Operational Test (P/B 501)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-00-700-802	Crew Oxygen Mask-Regulator Test (P/B 501)
35-12-00-800-802	Leak Test the Crew Oxygen System After System Maintenance or Repair (P/B 201)
35-12-85-910-801	Crew Oxygen Mask Stowage (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
25	Mask assembly	35-12-85-01-005	PTF ALL
		35-12-85-03-005	PTF ALL

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Install the Oxygen Mask/Regulator

SUBTASK 35-12-85-910-005

(1) Obey the safety precautions and general instructions for the oxygen system before you do maintenance (TASK 35-00-00-910-801).

SUBTASK 35-12-85-410-003

(2) Go into the flight compartment area where you will install the oxygen mask/regulator(s).

SUBTASK 35-12-85-860-009

(3) Make sure that the crew oxygen supply line is not pressurized.

SUBTASK 35-12-85-080-001

I (4) If installed, remove the protective caps from the microphone connection [23] and line.

SUBTASK 35-12-85-420-007

WARNING USE ONLY OXYGEN-CLEAN COMPONENTS IN THE OXYGEN SYSTEM. IF YOU DO NOT USE OXYGEN-CLEAN COMPONENTS, A FIRE OR AN EXPLOSION CAN OCCUR. THIS CAN CAUSE DAMAGE TO EQUIPMENT OR INJURIES TO PERSONS.

(5) Do these steps to connect the applicable oxygen mask assembly [25] in the oxygen mask stowage box [21]:

NOTE: Oxygen clean fittings come from a sealed container with a label for the oxygen system installation. Make sure that you use only oxygen clean fittings. Some fittings used in the oxygen system are the same as fittings in other systems and are not oxygen clean. If it is necessary to clean parts, use the applicable oxygen procedures to clean the parts. This also applies to tube caps or plugs which must be as clean as the installation connections.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Open the left and right covers on the applicable oxygen mask stowage box [21].

(b) Remove the plastic bag from the oxygen supply hose connection [22] on the applicable oxygen mask stowage box [21].

(c) If necessary, remove the plastic bag from the oxygen supply hose [24] on the applicable oxygen mask assembly [25].

(d) Connect the oxygen supply hose [24] at the oxygen supply hose connection [22] in the oxygen mask stowage box [21].

(e) Connect the microphone line at the microphone connection [23] in the oxygen mask stowage box [21].

(f) Remove the opaque lens cover from the face mask lens, if it is installed.

NOTE: An opaque (not transparent) lens cover may be installed on the face mask lens by the manufacturer. Make sure that you remove the opaque cover before you stow the mask, if the cover is installed.

(g) Install the crew oxygen mask assembly [25] into the oxygen mask stowage box [21] (Crew Oxygen Mask Stowage, TASK 35-12-85-910-801).

SUBTASK 35-12-85-860-010

(6) Make sure that these circuit breakers are closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 35-12-85-840-002

(7) Do this task: Leak Test the Crew Oxygen System After System Maintenance or Repair, TASK 35-12-00-800-802.

SUBTASK 35-12-85-710-003

(8) Do these operational tests to make sure that the crew oxygen system operates satisfactorily:

(a) For an operational test of the Crew Oxygen System, do this task: Crew Oxygen Mask-Regulator Test, TASK 35-12-00-700-802.

(b) For each mask that you installed, do this task: Oxygen Mask Microphone Operational Test, TASK 23-51-00-710-802.

NOTE: It is not necessary to do the test on the masks at crew stations without microphone connections.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CREW OXYGEN MASK CLEANING

1. General

A. This procedure has these tasks:

(1) Oxygen Mask Cleaning

B. This procedure cleans one oxygen mask/regulator assembly. Do the procedure again to clean more mask/regulator assemblies.

TASK 35-12-85-100-801

2. Crew Oxygen Mask Cleaning

A. General

(1) This task gives the steps on how to clean a crew oxygen mask.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-12-85-000-802	Oxygen Mask/Regulator Removal (P/B 401)
35-12-85-400-802	Oxygen Mask/Regulator Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
B50003	Solvent - Cleaning - HFE 71DE	BAC5402
B50201	Wipe - Alcohol (Isopropyl Alcohol)	
B50259	Cleaner - SAN50 Disinfectant, single use sachet	
B50355	Detergent - Assert Lemon	
B50356	Detergent - M36	
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G01043	Cloth - Lint-free	
G01306	Gloves - Lint-free	
G02418	Water - De-ionized	
G50139	Water - Distilled	
G50140	Gloves - Protective, Latex or Nitrile	
G50512	polyethylene bag	
G51116	Cloth - Zodiac Aerospace SAN40-2 Lens Cleaning Cloth (formerly SAN40)	
G51117	Film - Zodiac Aerospace SAN60-1 Protection Film (formerly SAN60)	

D. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Prepare for the Cleaning

SUBTASK 35-12-85-910-006

(1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-12-85-910-007

(2) Wear clean, protective gloves, G50140, or lint-free gloves, G01306, when you do maintenance of the oxygen system.

NOTE: Only use protective gloves, G50140, to clean the oxygen system and lint-free gloves, G01306, for general maintenance of the oxygen system.

SUBTASK 35-12-85-020-008

(3) Remove the oxygen mask from its stowage box (TASK 35-12-85-000-802).

F. Crew Oxygen Mask Cleaning

SUBTASK 35-12-85-420-016

(1) Put the SAN60-1 protection film, G51117, on the window internally and externally to prevent the damage of the anti-mist coat.

SUBTASK 35-12-85-160-002

WARNING DO NOT USE OIL OR OTHER PETROLEUM BASE LUBRICANTS ON OXYGEN EQUIPMENT. IT WILL CREATE A DANGEROUS FIRE HAZARD.

CAUTION USE ONLY THE SPECIFIED SOLUTIONS IN THE SPECIFIED CONCENTRATIONS. IF YOU USE OTHER SOLUTIONS OR CONCENTRATIONS, DAMAGE TO EQUIPMENT CAN OCCUR.

CAUTION DO NOT USE TOO MUCH FLUID TO SOAK THE CREW OXYGEN MASK. USE ONLY A SMALL QUANTITY OF THE FLUID TO CLEAN IT. DAMAGE TO THE MASK CAN OCCUR.

CAUTION DO NOT CLEAN THE MASK WINDOW WHEN THERE IS MOISTURE OR WATER ON ITS SURFACES. DAMAGE TO THE ANTI-MIST COAT CAN OCCUR.

CAUTION DO NOT LET DETERGENTS AND DISINFECTANTS GO ON THE WINDOW SURFACES. IF YOU DO NOT OBEY, DAMAGE CAN OCCUR TO WINDOW SURFACES.

(2) Clean the crew oxygen mask:

(a) Lightly moisten a cotton wiper, G00034, or lint-free cloth, G01043, with the cleaning solution.

1) Prepare the following mixture for the detergent solution:

a) Mix 30 ml/liter of detergent, B50356, or 8 ml/10 liters to 12ml/10 liters of detergent, B50355, and hot water.

(b) Clean all areas of the mask face piece and the nose cup assembly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Remove the detergent solution with a cotton wiper, G00034, or lint-free cloth, G01043, moistened with pure water.

(d) Let the oxygen mask fully dry in the air or blow dry, clean air without oil.

(e) Apply antiseptic SAN50 disinfectant cleaner, B50259, on the internal surfaces of the mask face piece.

1) Clean the removed parts.

2) Clean the new parts.

(f) If it is necessary, clean the microphone with a cotton wiper, G00034, or lint-free cloth, G01043, moistened with isopropyl alcohol, B00130.

SUBTASK 35-12-85-160-004

WARNING STRICTLY OBEY THE PROCEDURES WHEN YOU DO WORK ON THE OXYGEN SYSTEM. DO NOT USE OIL, GREASE OR OTHER LUBRICANTS MADE FROM PETROL IN THE AREA OF OXYGEN SYSTEM. YOU CAN CAUSE A FIRE OR EXPLOSION.

CAUTION MAKE SURE THAT YOUR HANDS ARE CLEAN BEFORE YOU TOUCH THE REGULATOR. USE APPROVED GREASES AND CLEANERS. IF YOU USE UNAPPROVED GREASES AND CLEANERS, IT CAN CAUSE DAMAGE TO THE REGULATOR.

(3) If necessary, do these steps to clean the parts of the regulator:

(a) Carefully clean the metal parts.

1) To clean the removed metal parts, use one of these methods:

a) Method One:

<1> Use the HFE 71DE solvent, B50003, or alcohol wipes, B50201, to remove all external grease, oil or other contaminants.

<2> Flush with clear hot water.

b) Method Two:

<1> Clean the metal parts with the HFE 71DE solvent, B50003, alcohol wipes, B50201, or equivalent products.

<2> Use a vapor degreasing method or ultra sonic method with the HFE 71DE solvent, B50003, or alcohol wipes, B50201.

<3> Put each part in the temperature controlled oven at 140 +18 / -0°F (60 +10 / -0°C) to hot dry for one hour or blow dry, clean air without oil.

<4> Put each component in the polyethylene bag, G50512, or the plastic box until you install the equipment.

2) Clean the new metal parts:

a) Clean the metallic parts with HFE 71DE solvent, B50003, or alcohol wipes, B50201, or equivalent products.

b) Use a vapor degreasing method or ultra sonic method with the HFE 71DE solvent, B50003.

c) Put each part in the temperature controlled oven at 140 +18 / -0°F (60 +10 / -0°C) to hot dry for one hour or blow dry, clean air without oil.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

d) Put each part in the polyethylene bag, G50512, or the plastic box until you install the equipment.

(b) Carefully clean the plastic parts.

1) To clean the removed plastic parts, use one of these methods:

a) Method One

<1> Use the HFE 71DE solvent, B50003, or alcohol wipes, B50201, to remove all external traces of grease, oil or other contaminants.

<2> Flush with clear hot water.

b) Method Two

<1> Flush with clear water for one or two minutes.

<2> Fully flush in de-ionized water, G02418, or distilled water, G50139, for two minutes.

<3> Put each part in the temperature controlled oven at 122°F (50°C) - 140°F (60°C) to hot dry or blow dry, clean air without oil.

<4> Put each part in the polyethylene bag, G50512, or the plastic box until you install the equipment.

2) Clean the new parts:

a) Clean new plastic parts with the detergent solution.

<1> Prepare the following mixture for the detergent solution:

<a> Mix 30ml/liter of detergent, B50356, or 12ml/10 liters of detergent, B50355, and hot water.

b) Use an ultra sonic method with the hot detergent solution (122°F (50°C) - 140°F (60°C)).

c) Flush with clear water for one or two minutes.

d) Fully flush in de-ionized water, G02418, or distilled water, G50139, for two minutes.

e) Put each part in the temperature controlled oven at 122°F (50°C) to 140°F (60°C) to hot dry for one hour or blow dry, clean air without oil.

f) Put each part in the polyethylene bag, G50512, or the plastic box until you install the equipment.

CAUTION

DO NOT LET THE SOLUTION TO FLOW INTO THE CIRCUIT. PUT A CAP ON THE ORIFICES TO PREVENT DAMAGE TO THE CIRCUIT. IF YOU DO NOT OBEY, DAMAGE TO THE CIRCUIT CAN OCCUR.

(c) Carefully clean the main casing.

1) Remove main casing parts.

a) Clean all the areas of the main casing with the cotton wiper, G00034, or lint-free cloth, G01043, moistened with isopropyl alcohol, B00130.

b) Let the main casing fully dry in the air or blow dry, clean air without oil.

c) Put the main casing in the polyethylene bag, G50512, or the plastic box until you install the equipment.

2) Is not applicable to clean new parts.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-12-85-020-011

(4) Remove the SAN60-1 protection film, G51117, from the mask window.

SUBTASK 35-12-85-160-005

(5) If necessary, clean the window:

(a) Carefully clean all the window surfaces with the SAN40-2 lens cleaning cloth, G51116.


G. Put The Airplane Back to Its Usual Condition

SUBTASK 35-12-85-410-004

(1) Install the oxygen mask and regulator assembly (TASK 35-12-85-400-802).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

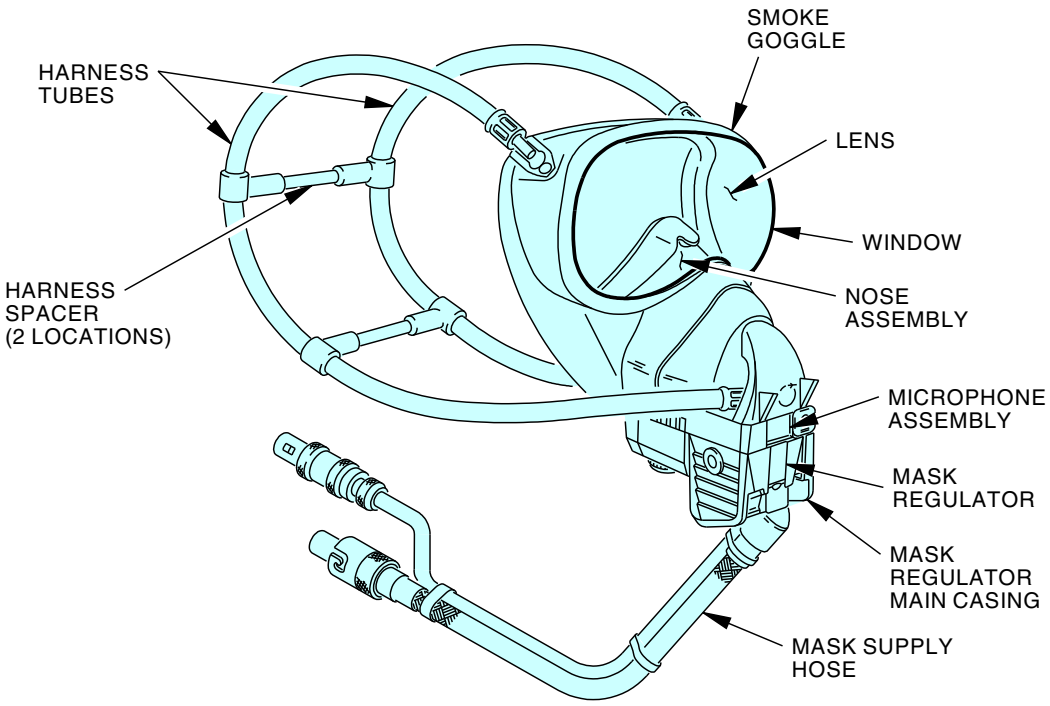

MASK ASSEMBLY (EXAMPLE) (INFLATED)

2917325 S0000701724_V1

Crew Oxygen Mask Maintenance Practices
Figure 701/35-12-85-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER OXYGEN SYSTEM - ADJUSTMENT/TEST

1. General

A. This procedure contains these tasks:

(1) Passenger oxygen system automatic actuation functional test

(2) Passenger oxygen system manual deploy operational test

(3) Oxygen generator visual inspection

(4) Oxygen cylinder visual inspection.

TASK 35-22-00-700-801

2. Passenger Oxygen System Automatic Actuation Functional Test

(Figure 501, Figure 502 and Figure 503)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the functional test of the automatic actuation of the Passenger Oxygen System.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-41-000-801	Altitude Pressure Switch - Removal (S813) (P/B 401)
35-22-41-400-801	Altitude Pressure Switch - Installation (S813) (P/B 401)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Reference	Description
COM-1914	Test Set - Air Data Model FLMTS (Flight Line Maintenance) Part #: ADSE 650 Supplier: 3BSK6 Part #: ADTS2000 Supplier: 52892 Part #: ADTS3350ER Supplier: 52892 Part #: ADTS405MKII Supplier: U0427 Part #: ADTS530 Supplier: U0427 Part #: ADTS552F Supplier: U0427 Part #: ADTS553F Supplier: U0427 Part #: ADTS554F Supplier: U0427 Part #: D60340MK Supplier: K1474 Part #: DPS1000 Supplier: 21844 Part #: MODEL 6300 Supplier: 0RDZ5 Part #: MPS34C Supplier: 48RQ2 Part #: MPS43B Supplier: A0197 Part #: MPS45 Supplier: 48RQ2 Part #: MPS49 Supplier: 48RQ2 Part #: TES9463 Supplier: 88277 Opt Part #: 01-0987-00 Supplier: 41364 Opt Part #: 18910480000 Supplier: 89944 Opt Part #: 18910920000 Supplier: 89944 Opt Part #: ADTS405F Supplier: U0427 Opt Part #: ADTS505 Supplier: U0427 Opt Part #: D60302 Supplier: K1474 Opt Part #: D60340 Supplier: K1474 Opt Part #: D60383 Supplier: K1474 Opt Part #: DPS350 Supplier: 21844 Opt Part #: DPS450 Supplier: 21844 Opt Part #: DPS500 Supplier: 21844 Opt Part #: MPS31C Supplier: 48RQ2 Opt Part #: MPS43 Supplier: A0197
COM-1931	Pump - Vacuum, Portable, Standard Duty Part #: 2546B-01 Supplier: 0NCC5 Part #: 2546C-01 Supplier: 0NCC5 Part #: 2546C-02 Supplier: 0NCC5 Opt Part #: 2545B-01 Supplier: 0NCC5 Opt Part #: 2545C-02 Supplier: 0NCC5
COM-14099	Test Stop Key Assy Part #: 70698 Supplier: 16115
STD-1318	Hose - Vacuum, 1/4 Inch Inside Diameter (ID) Plastic Tube (Tygon-B44-30PT, Uniflex 650 or Similar)
STD-1319	Connector - 1/4 Inch ID Tee, Plastic, Vacuum Hose (to Attach Vacuum Gauge to Vacuum Hose)
STD-1320	Gauge - Vacuum
STD-1321	Valve - Shutoff
STD-3900	Adapter - Straight, Tube to Hose (meets AS5180D04 specification)

D. Consumable Materials

Reference	Description	Specification
G02311	Tape - Pressure Sensitive Adhesive, for Masking During Paint Stripping Operations	AMS-T-23397

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Location Zones

Zone	Area
200	Upper Half of Fuselage
212	Flight Compartment - Right

F. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

G. Prepare for the Test

SUBTASK 35-22-00-910-001

(1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-00-860-003

(2) Do these steps to prepare the test stops of each oxygen box door of the Attendant Service Unit (ASU):

(a) Pull the test stop button out to the limit of travel.

(b) Turn the test stop button counterclockwise 90 degrees to the test stop position.

(c) Do a check to make sure that each test stop button is in the test stop position.

NOTE: If the test stop button is not in the test stop position, the oxygen box door will open. This will cause the oxygen masks to deploy during the functional test.

SUBTASK 35-22-00-860-026

(3) Do this step to prepare the test stops of each oxygen box door of the Lavatory Service Unit (LSU):

(a) Push the side of the test stops button moves until the button moves into the test position.

NOTE: A red test label is exposed to indicate oxygen box is in the test position.

SUBTASK 35-22-00-860-004

(4) Install the test stop key assembly, COM-14099, or masking tape, G02311, to the oxygen mask door of each Passenger Service Unit (PSU) as follows:

(a) If you use the test stop key assembly, COM-14099, make sure that you install the tool through the slot in the door.

NOTE: The tool must fully engage the latch of the door latch actuator.

(b) If you use masking tape, G02311, install it to let the door partially open 1.0 ±0.5 in. (2.5 ±1.3 cm).

SUBTASK 35-22-00-860-005

(5) Do these steps to clear the Master Caution System:

(a) Push one of the two MASTER CAUTION lights on the P7 light shield.

(b) Make sure that the two MASTER CAUTION annunciators do not stay on.

(c) Make sure that the OVERHEAD annunciation on the right master caution display does not come on.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

H. Passenger Oxygen System Automatic Actuation Functional Test

SUBTASK 35-22-00-860-006

(1) Open this circuit breaker:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	9	C00784	OXYGEN PASS RIGHT

SUBTASK 35-22-00-860-019

(2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 35-22-00-480-001

(3) Do these steps to install the test equipment on the altitude pressure switch, S813, (Figure 502):

(a) Get access to the J23 BOX.

(b) If it is installed, remove the dust cover from the altitude pressure switch, S813.

(c) Find the altitude pressure switch fitting through the hole in the forward side of the J23 BOX.

(d) If it is necessary for a better visibility, remove the cover from the J23 BOX.

(e) Connect these components to the altitude pressure switch, S813:

NOTE: The altitude pressure switch can be moved from its position a small distance to attach the test equipment.

NOTE: If the air data model test set, COM-1914, is used and it contains all necessary components, do not use the other six tools listed below. In some cases air data model test set, COM-1914, may not include all the necessary components and should be supplemented with the other listed six tools.

1) The adapter, STD-3900
2) The hose, STD-1318
3) The connector, STD-1319
4) The vaccum gauge, STD-1320
5) The shutoff valve, STD-1321
6) The vacuum pump, COM-1931
7) The air data model test set, COM-1914.

SUBTASK 35-22-00-720-001

CAUTION

DO NOT APPLY A POSITIVE PRESSURE ON THE ALTITUDE PRESSURE SWITCH. IF YOU APPLY POSITIVE PRESSURE, IT WILL CAUSE DAMAGE TO THE ALTITUDE PRESSURE SWITCH.

(4) Simulate a cabin altitude of 14,000 ±350 ft (4267 ±107 m) as follows:

(a) Slowly decrease the pressure to the altitude pressure switch, S813, to between 17.8 in. (452.8 mm) and 17.3 in. (440.2 mm) mercury absolute.

NOTE: A 8.6 ±0.1 psia (17.5 ±0.2 in/Hg) (-6.1 ±0.1 psig (-12.4 ±0.2 in/Hg)) pressure is equivalent to an altitude of 14,000 ±350 ft (4267 ±107 m).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-00-720-002

(5) When the doors of the left side oxygen boxes release against the test stops, examine the test gage.

(a) Make sure that the test gage shows between 17.8 in. (452.8 mm) and 17.3 in. (440.2 mm) mercury absolute, 14,000 ±350 ft (4267 ±107 m) cabin altitude.

(b) If the oxygen box doors do not release at or below 17.3 in. (440.2 mm) mercury absolute, 14,350 ft (4374 m) cabin altitude, replace the pressure switch (TASK 35-22-41-000-801 and TASK 35-22-41-400-801).

SUBTASK 35-22-00-720-003

(6) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, comes on (Figure 501).

SUBTASK 35-22-00-720-004

(7) Make sure that the two MASTER CAUTION lights and OVERHEAD annunciation on the master caution display come on.

SUBTASK 35-22-00-720-005

(8) Push the LIGHTS switch, on the P1-3 panel, to the DIM position.

SUBTASK 35-22-00-720-006

(9) Make sure that the PASS OXY ON light is on and light is dim.

SUBTASK 35-22-00-720-007

(10) Push the LIGHTS switch to the BRT (bright) position.

SUBTASK 35-22-00-720-008

(11) Make sure that the PASS OXY ON light is on and light is bright.

SUBTASK 35-22-00-720-009

(12) Push one of the two MASTER CAUTION lights to set the system.

SUBTASK 35-22-00-720-010

(13) Make sure that all of the annunciations on the master caution displays go off.

SUBTASK 35-22-00-720-011

(14) Push one of the two master caution displays.

NOTE: Other lights on the master caution annunciator can come on, but maintenance is not necessary.

SUBTASK 35-22-00-720-012

(15) Make sure that the two MASTER CAUTION lights and OVERHEAD annunciation on the master caution display come on.

SUBTASK 35-22-00-720-013

(16) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-00-720-014

(17) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, does not come on.

NOTE: The two MASTER CAUTION lights will extinguish, if no other master caution annunciators come on.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-00-720-015

(18) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	9	C00784	OXYGEN PASS RIGHT

SUBTASK 35-22-00-720-016

(19) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, comes on.

SUBTASK 35-22-00-720-017

(20) Make sure that all the oxygen box doors on the right side of the airplane are released against the test stops.

SUBTASK 35-22-00-720-018

(21) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	9	C00784	OXYGEN PASS RIGHT

SUBTASK 35-22-00-720-019

(22) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, does not show.

SUBTASK 35-22-00-720-020

CAUTION DO NOT RELEASE THE VACUUM (PRESSURE) TOO QUICKLY AND SUDDENLY. IF YOU DO NOT OBEY, DAMAGE TO THE ALTITUDE PRESSURE SWITCH CAN OCCUR.

(23) Slowly release the vacuum (pressure) to the altitude pressure switch, S813.

SUBTASK 35-22-00-080-001

(24) Do these steps to remove the test equipment from the altitude pressure switch, S813:

(a) Remove the test equipment.

(b) If it is necessary, install the screws that hold the altitude pressure switch, S813, to the J23 BOX.

(c) If it is removed, install the cover to the J23 BOX with the screws.

(d) If it is removed, install the dust cover to the altitude pressure switch, S813.

SUBTASK 35-22-00-410-001

(25) Do these steps to close the oxygen box doors of each ASU (Figure 503):

(a) Hold the oxygen box door in the closed position.

(b) Turn the test stop button 90 degrees clockwise.

(c) Push the test stop button up until you hear the sound of a click.

NOTE: The sound of the click shows that the actuator is set.

(d) Release the test stop button.

(e) Fully close and latch the mask box door.

NOTE: The latch will usually make a "click" noise when it fully engages.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-00-860-025

(26) Do these steps to close the oxygen box doors of each LSU:

(a) Hold the oxygen box door in the closed position.

(b) Push the test stop button until it is flat on the oxygen box door.

SUBTASK 35-22-00-410-002

(27) Do these steps to close the door of the oxygen boxes of the underbin PSU's of the passenger cabin:

(a) Hold the mask door of the PSU oxygen box to the almost closed position.

(b) Remove the test stop key assembly, COM-14099, (or masking tape, G02311) from the oxygen mask door of each PSU.

(c) Push the door latch fully aft to arm the door latch actuator.

CAUTION

DO NOT CATCH THE OXYGEN MASK ITEMS BETWEEN THE DOOR AND THE OXYGEN BOX. DO NOT CATCH THE OXYGEN MASK ITEMS BETWEEN THE DOOR AND THE ACTUATOR MOUNTING BRACKET. MAKE SURE THAT NO ITEMS ARE CAUGHT. IF YOU CATCH THE OXYGEN MASK ITEMS, YOU CAN CAUSE DAMAGE TO THE ITEMS.

(d) Close the oxygen mask door until the door latch/actuator engages.

NOTE: The latch will usually make a "click" noise when it fully engages.

(e) Make sure that the door is aligned with the PSU structure.

NOTE: A misaligned (misfaired) door indicates that part of the mask assembly is between the door, or the latch/actuator, and oxygen box.

I. Put the Airplane Back to Its Usual Condition

SUBTASK 35-22-00-865-001

(1) Close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT


SUBTASK 35-22-00-410-005

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

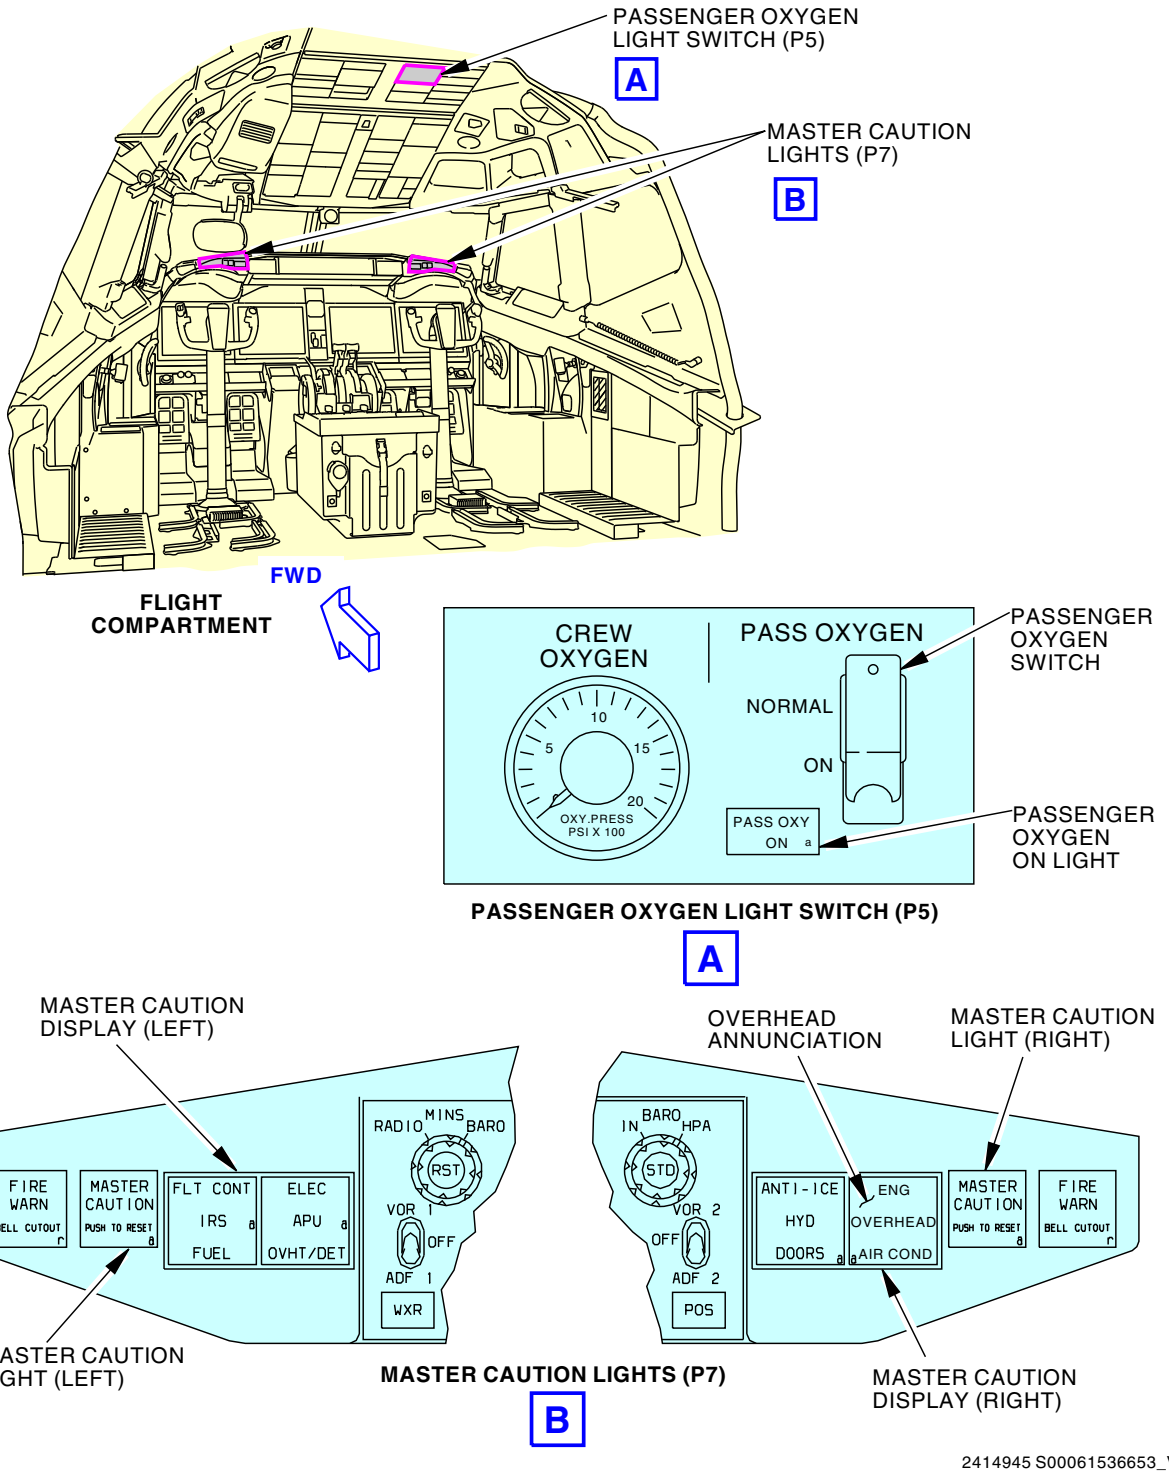

2414945 S00061536653_V1

Passenger Oxygen Flight Compartment Panels
Figure 501/35-22-00-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

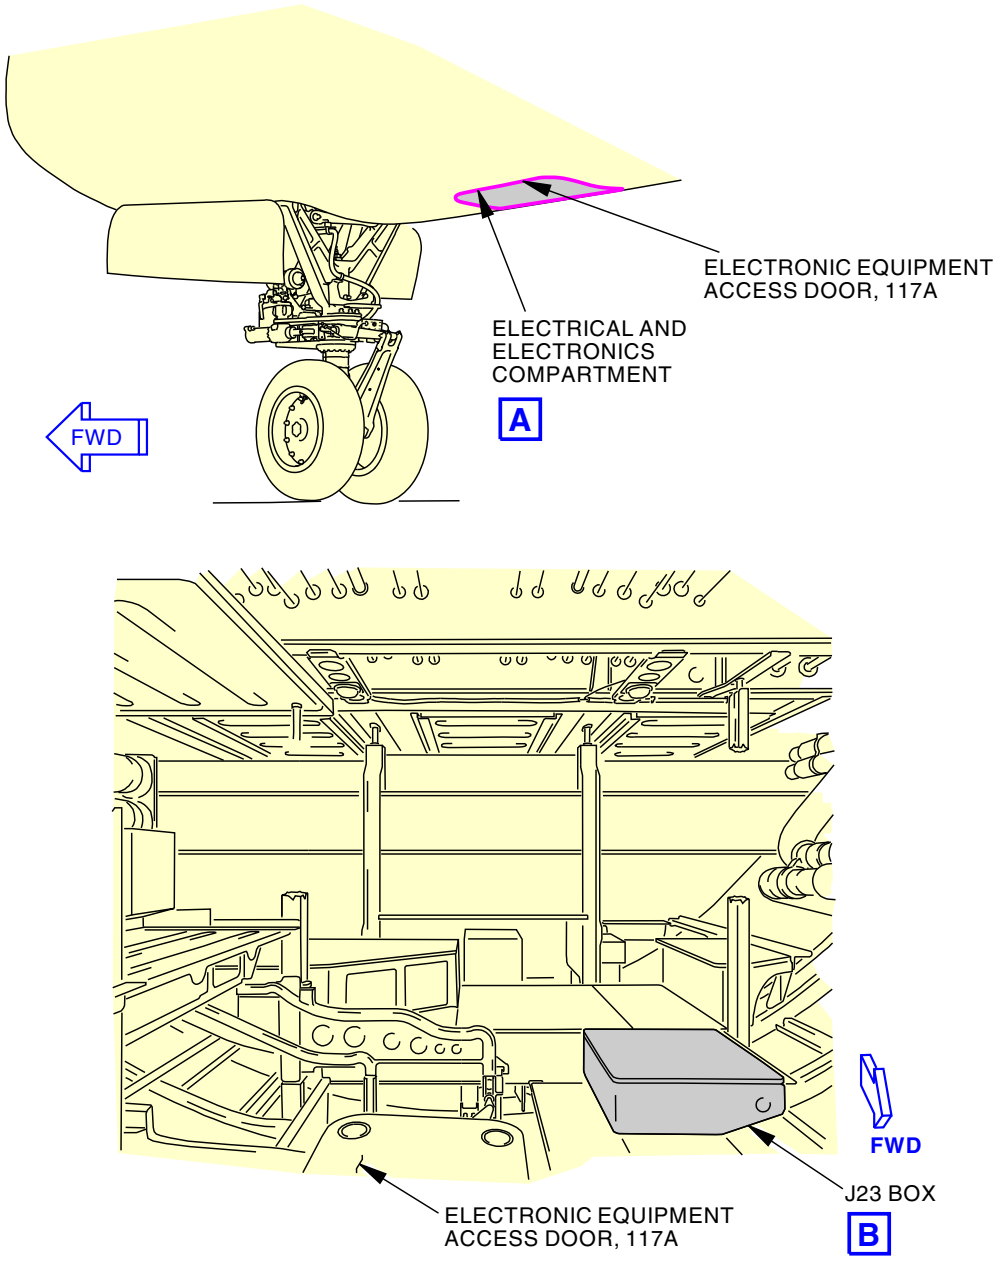


ELECTRICAL AND ELECTRONICS COMPARTMENT

A

2414946 S00061536654_V1

Passenger Oxygen Automatic Pressure Switch
Figure 502/35-22-00-990-802 (Sheet 1 of 2)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

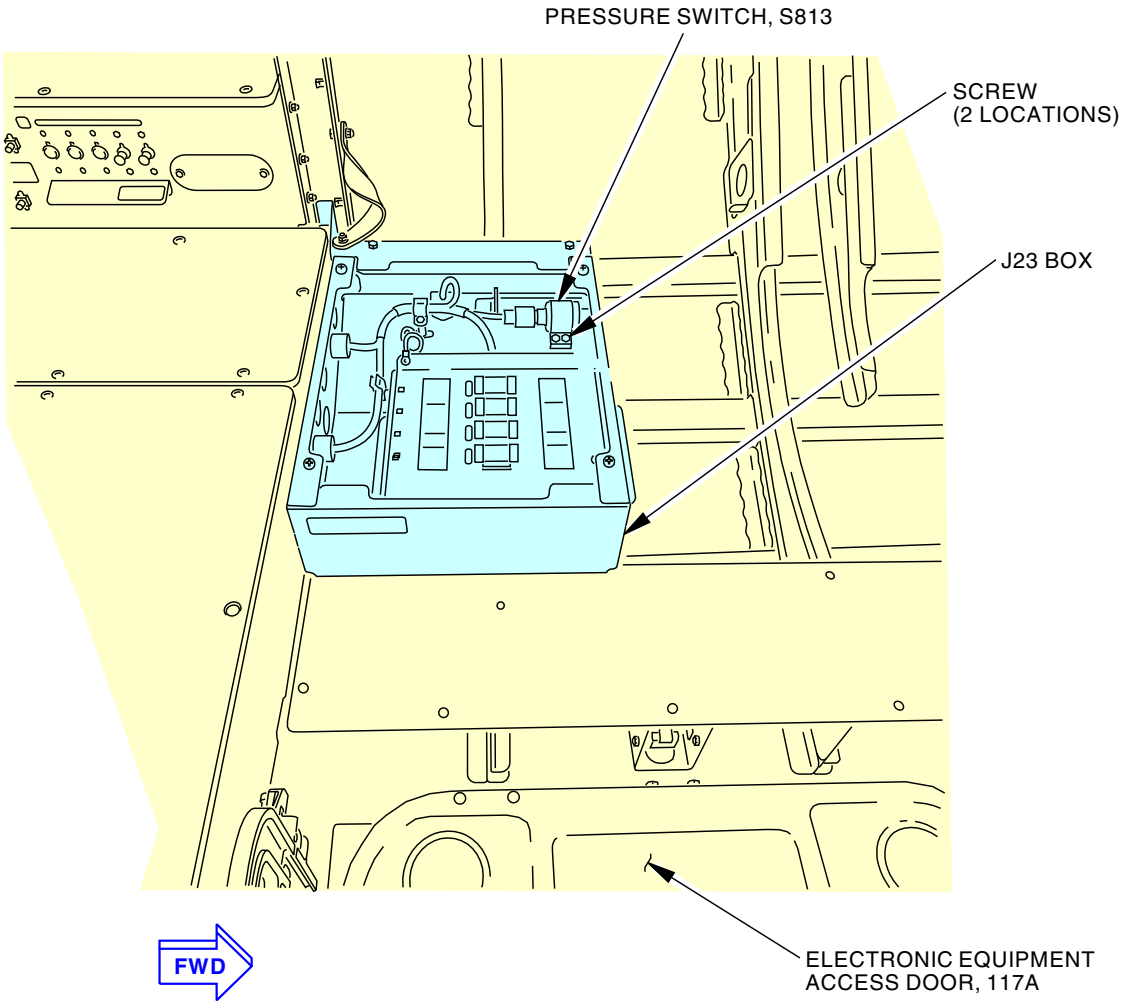

2414947 S00061536655_V2


Passenger Oxygen Automatic Pressure Switch
Figure 502/35-22-00-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

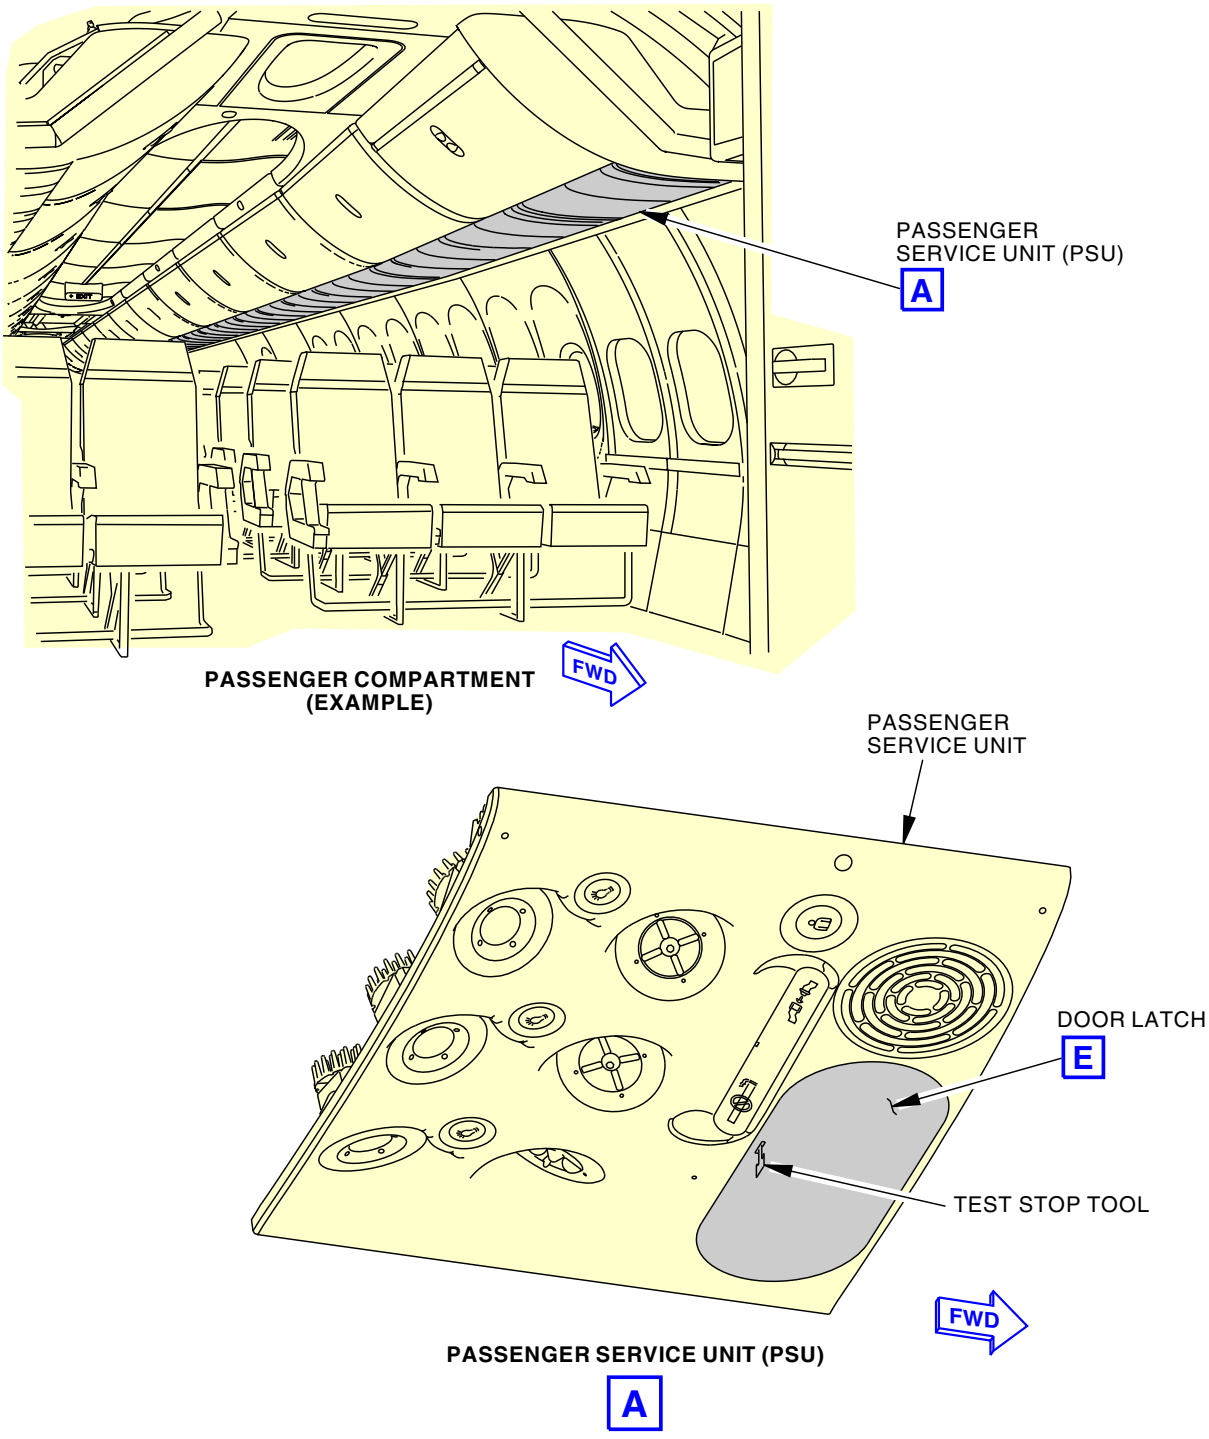


Passenger Oxygen Mask Box Door Operation
Figure 503/35-22-00-990-803 (Sheet 1 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

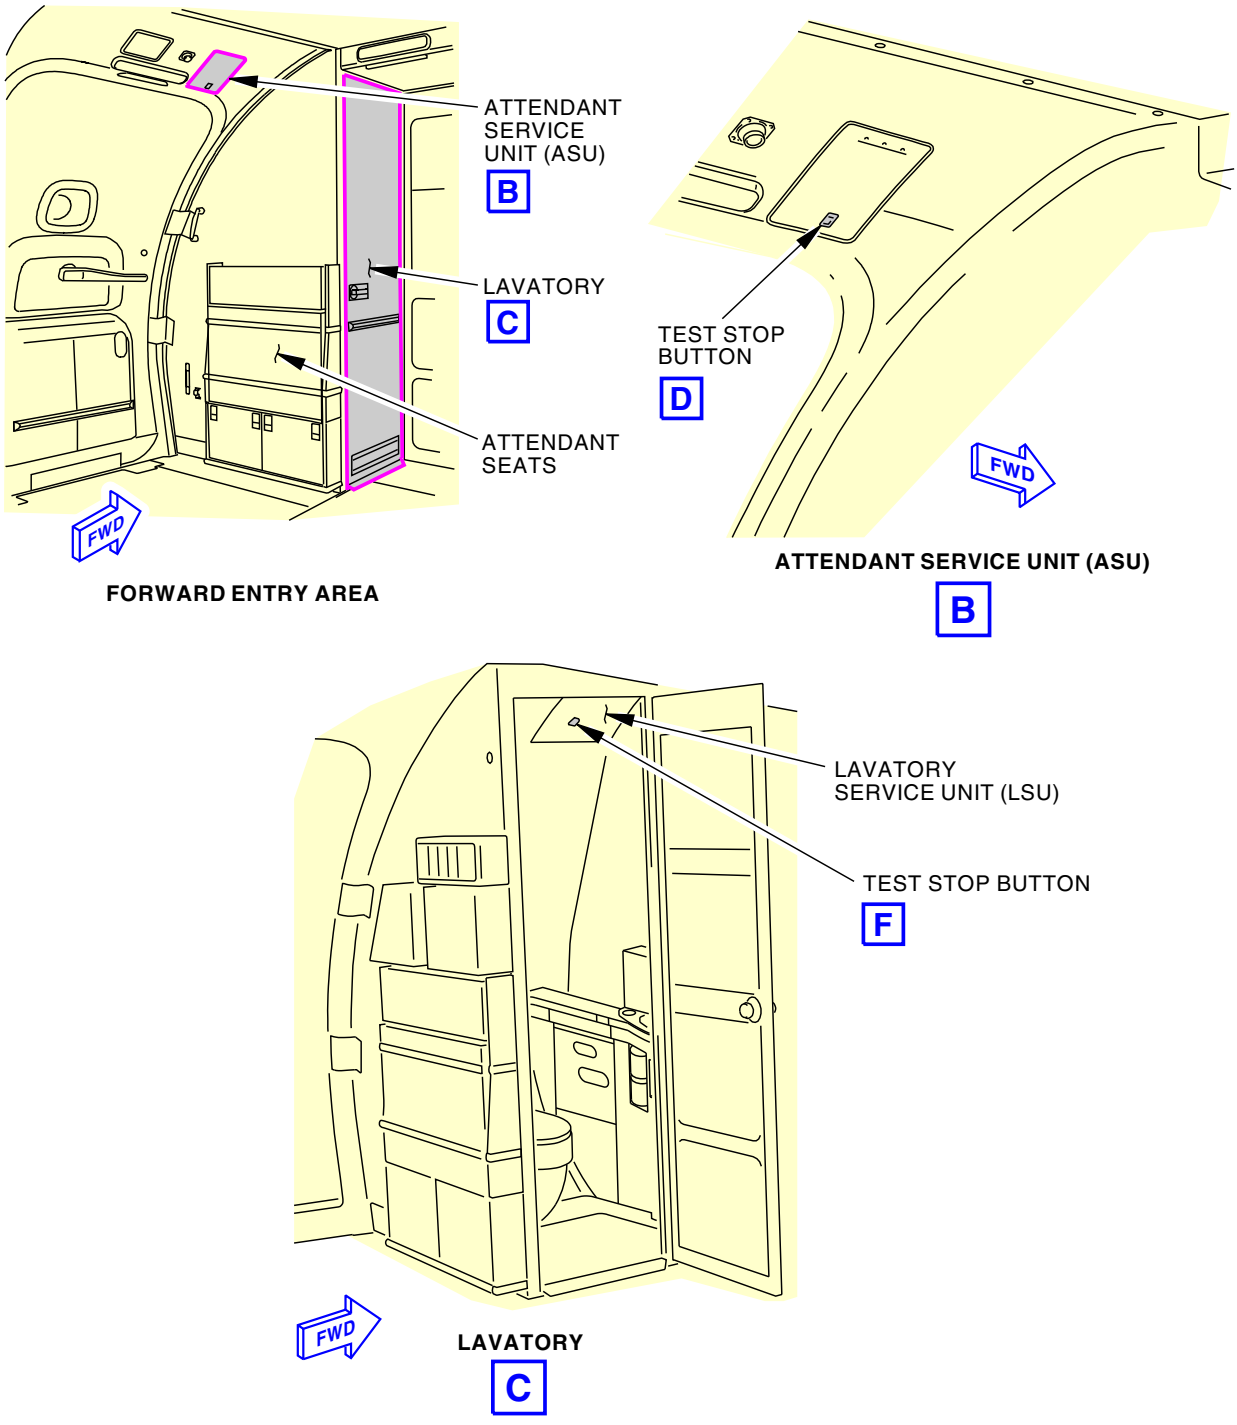


Passenger Oxygen Mask Box Door Operation
Figure 503/35-22-00-990-803 (Sheet 2 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

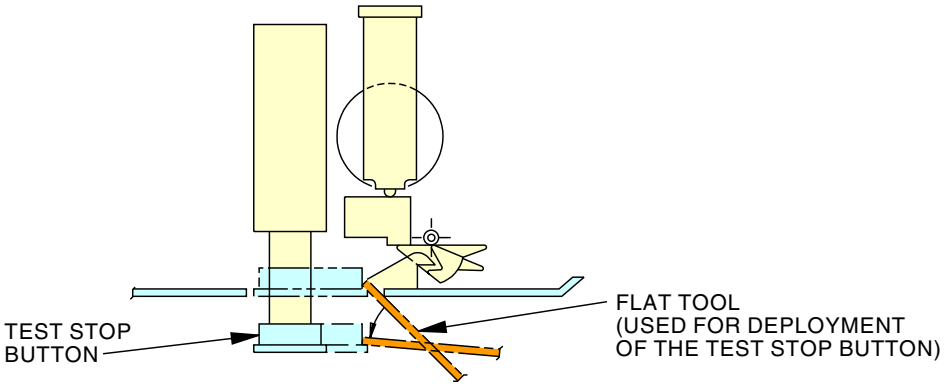


DEPLOYMENT OF THE TEST STOP BUTTON

D

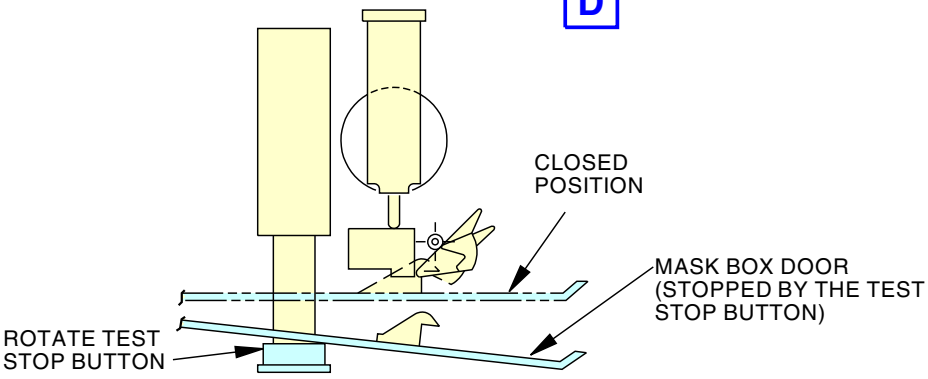

MASK BOX DOOR IN THE TEST POSITION

D

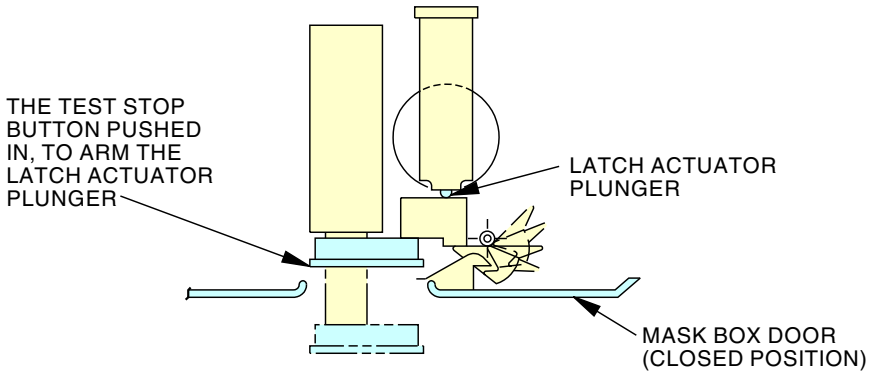


LATCH ACTUATOR PLUNGER IN THE SET POSITION BEFORE THE MASK BOX DOOR IS CLOSED

D

2414950 S00061536658_V1


Passenger Oxygen Mask Box Door Operation
Figure 503/35-22-00-990-803 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

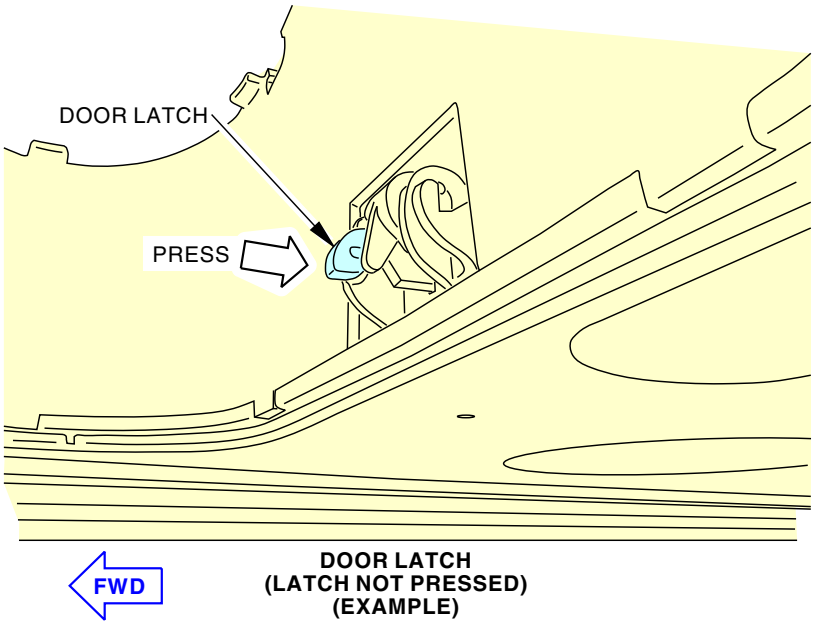

DOOR LATCH
(LATCH NOT PRESSED)
(EXAMPLE)

E

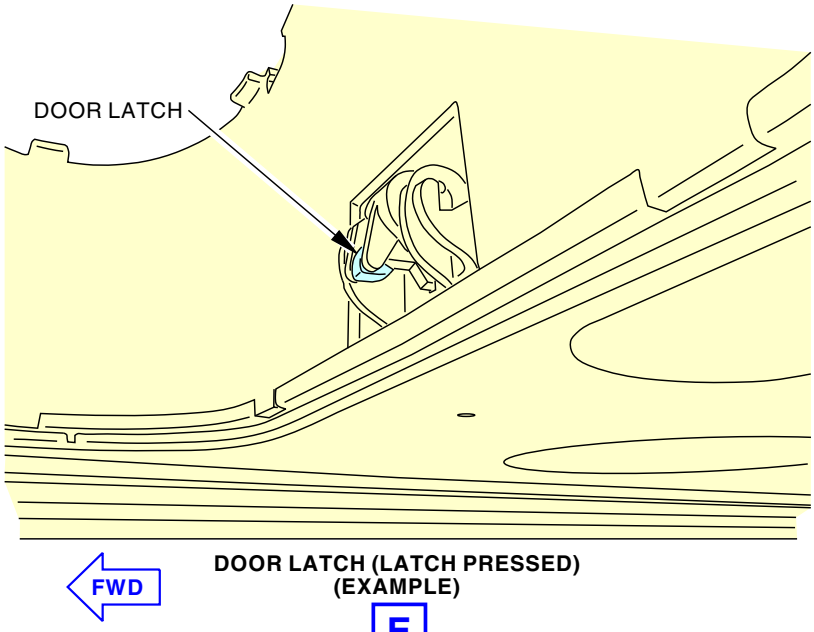


DOOR LATCH (LATCH PRESSED)
(EXAMPLE)

E

2414951 S00061536659_V1


Passenger Oxygen Mask Box Door Operation
Figure 503/35-22-00-990-803 (Sheet 4 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

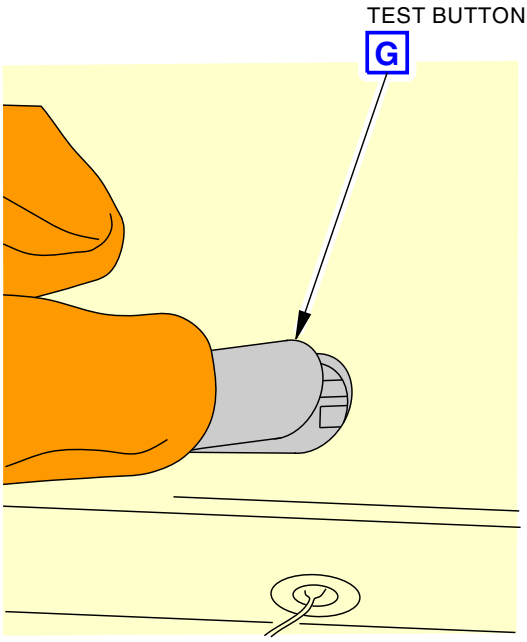


PRESS THE SIDE OF THE TEST BUTTON AS SHOWN

F

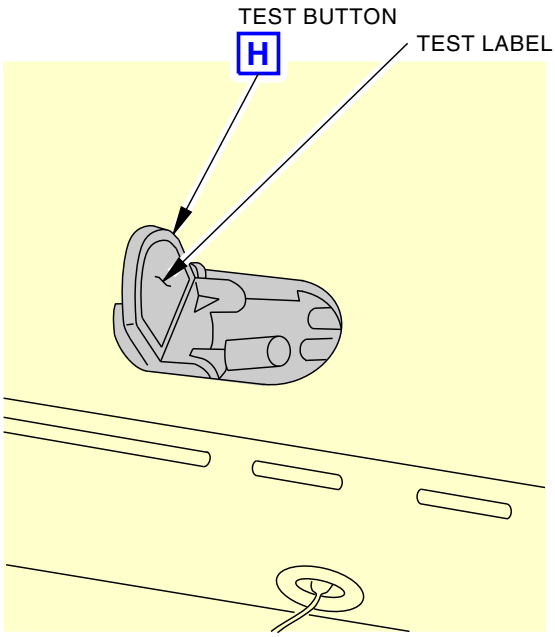


TEST LABEL IS EXPOSED WHEN THE TEST BUTTON IS IN THE TEST POSITION

G

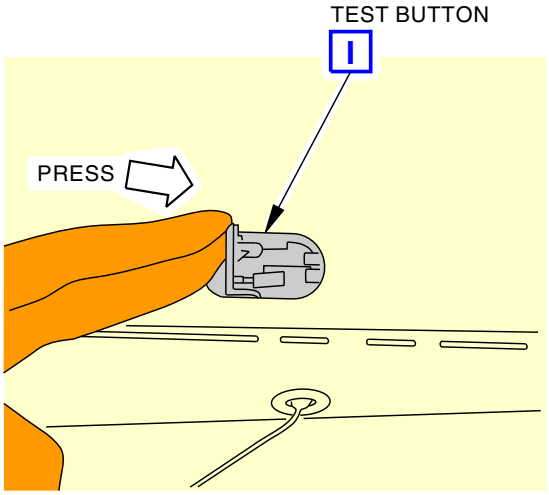

PUSH THE END OF THE TEST BUTTON TO RETURN THE BUTTON TO NORMAL OPERATING POSITION

H

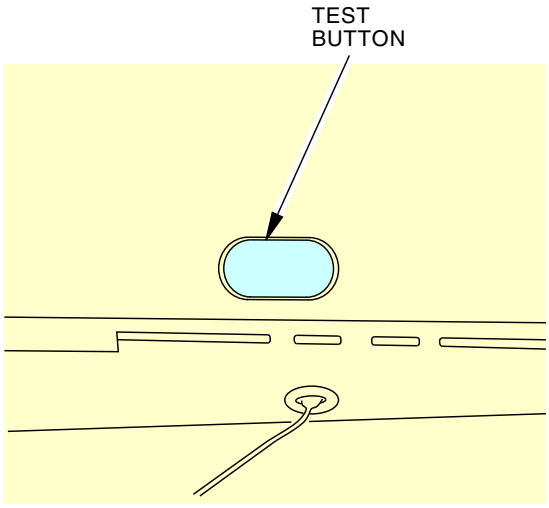

TEST BUTTON IN NORMAL OPERATING POSITION

I

2813947 S0000647971_V1

Passenger Oxygen Mask Box Door Operation
Figure 503/35-22-00-990-803 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-00-700-802

3. Passenger Oxygen System Manual Deploy Operational Test

(Figure 501 and Figure 503)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the operational test of the manual deployment of the Passenger Oxygen System.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-14099	Test Stop Key Assy Part #: 70698 Supplier: 16115

D. Consumable Materials

Reference	Description	Specification
G02311	Tape - Pressure Sensitive Adhesive, for Masking During Paint Stripping Operations	AMS-T-23397

E. Location Zones

Zone	Area
200	Upper Half of Fuselage
212	Flight Compartment - Right

F. Prepare for the Test

SUBTASK 35-22-00-910-002

(1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-00-860-024

(2) Do these steps to prepare the test stops of each oxygen box door of the Attendant Service Unit (ASU).

(a) Pull the test stop button out to the limit of travel.

(b) Turn the test stop button counterclockwise 90 degrees to the test stop position.

(c) Do a check to make sure that each test stop button is in the test stop position.

NOTE: If the test stop button is not in the test stop position, the oxygen box door will open. This will cause the oxygen masks to deploy during the operational test.

SUBTASK 35-22-00-860-021

(3) Do this step to prepare the test stops of each oxygen box door of the Lavatory Service Unit (LSU):

(a) Push the side of the test stop button until the button moves into the test position.

NOTE: A red test label is exposed to indicate oxygen box is in the test position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-00-860-010

(4) Install the test stop key assembly, COM-14099, or masking tape, G02311, to the oxygen mask door of each Passenger Service Unit (PSU) as follows:

(a) If you use the test stop key assembly, COM-14099, make sure that the tool is installed through the slot in the door.

NOTE: The tool must fully engage the latch of the door latch actuator.

(b) If you use masking tape, G02311, install it to let the door partially open 1.0 ±0.5 in. (2.5 ±1.3 cm).

NOTE: It is not necessary to have the oxygen door fully open for this test.

SUBTASK 35-22-00-860-011

(5) Do these steps to clear the Master Caution System:

(a) Push one of the two MASTER CAUTION lights on the P7 light shield.

(b) Make sure that the two MASTER CAUTION annunciators do not stay on.

(c) Make sure that the OVERHEAD annunciation on the right master caution display does not come on.

G. Manual Deploy Operational Test

SUBTASK 35-22-00-860-014

(1) Make sure that this circuit breaker is closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	8	C00785	OXYGEN MAN CONT

SUBTASK 35-22-00-720-021

(2) Make sure that these circuit breakers are closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-00-860-015

(3) Open this circuit breaker and install safety tag:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	9	C00784	OXYGEN PASS RIGHT

SUBTASK 35-22-00-720-022

(4) Move the PASS OXYGEN switch, on the P5-14 oxygen system module, to the momentary ON position and release the switch back to the NORMAL position (Figure 501).

SUBTASK 35-22-00-720-023

(5) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, comes on.

NOTE: The MASTER CAUTION lights and OVERHEAD annunciation indicator on the master caution display can come on. If these indicators on the glareshield panel do not come on, it does not indicate an unserviceable condition.

SUBTASK 35-22-00-720-024

(6) Make sure that the oxygen box doors of the PSUs on the left side of the passenger cabin release and move down against the test stops.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-00-210-005

(7) Make sure that all the oxygen box doors on the right side PSUs stay latched.

SUBTASK 35-22-00-210-006

(8) Make sure that the right aft attendant oxygen module door unlatched.

SUBTASK 35-22-00-720-025

(9) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-00-720-026

(10) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, goes off.

SUBTASK 35-22-00-720-027

(11) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	9	C00784	OXYGEN PASS RIGHT

SUBTASK 35-22-00-720-028

(12) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, stays off.

SUBTASK 35-22-00-720-029

(13) Move the PASS OXYGEN switch, on the P5-14 oxygen system module, to the momentary ON position and release back to the NORMAL position.

SUBTASK 35-22-00-720-030

(14) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, comes on.

SUBTASK 35-22-00-720-031

(15) Make sure that the oxygen box doors of the PSUs on the right side of the passenger cabin release and move down against the test stops.

SUBTASK 35-22-00-720-032

(16) Open this circuit breaker and install safety tag:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

SUBTASK 35-22-00-720-033

(17) Make sure that the PASS OXY ON light, on the P5-14 oxygen system module, goes off.

SUBTASK 35-22-00-860-016

(18) Do these steps to close the oxygen box doors of each ASU:

(a) Hold the oxygen box door in the closed position.

(b) Turn the test stop button 90 degrees clockwise.

(c) Push the test stop button up until the sound of a click heard.

NOTE: The sound of the click shows that the actuator is set.

(d) Release the test stop button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Fully close and latch the mask box door.

NOTE: The latch will usually make a "click" noise when it fully engages.

SUBTASK 35-22-00-860-023

(19) Do these steps to close the oxygen box doors of each LSU:

(a) Hold the oxygen box door in the closed position.

(b) Push the test stop button until it is flat on the oxygen box door.

SUBTASK 35-22-00-860-017

(20) Do these steps to close the door of the oxygen boxes of the underbin PSUs of the passenger cabin:

(a) Hold the mask door of the PSU oxygen box to the almost closed position.

(b) Remove the test stop key assembly, COM-14099, or masking tape, G02311, from the oxygen mask door of each PSU.

(c) Push the door latch fully aft to arm the door latch actuator.

CAUTION

DO NOT CATCH THE OXYGEN MASK ITEMS BETWEEN THE DOOR AND THE OXYGEN BOX. DO NOT CATCH THE OXYGEN MASK ITEMS BETWEEN THE DOOR AND THE ACTUATOR MOUNTING BRACKET. MAKE SURE THAT NO ITEMS ARE CAUGHT. IF YOU CATCH THE OXYGEN MASK ITEMS, YOU CAN CAUSE DAMAGE TO THE ITEMS.

(d) Close the oxygen mask door until the door latch/actuator engages as follows:

NOTE: The latch will usually make a "click" noise when it fully engages.

1) Make sure that the door is aligned with the PSU structure.

NOTE: A misaligned (misfaired) door indicates that part of the mask assembly is between the door, or the latch/actuator, and the oxygen box.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 35-22-00-860-018

(1) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	10	C00783	OXYGEN PASS LEFT

END OF TASK

TASK 35-22-00-210-801

4. Oxygen Generator Visual Inspection

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the visual inspection of the oxygen generator.

B. References

Reference	Title
25-23-61-000-801	Passenger Service Unit - Removal (P/B 401)
25-23-61-400-801	Passenger Service Unit - Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
35-22-11-000-802	PSU Oxygen Generator Removal (P/B 401)
35-22-11-000-803	ASU Oxygen Generator Removal (P/B 401)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)
35-22-11-400-802	PSU Oxygen Generator Installation (P/B 401)
35-22-11-400-803	ASU Oxygen Generator Installation (P/B 401)
35-22-31-420-801	ASU Oxygen Mask Packing (P/B 201)

C. Consumable Materials

Reference	Description	Specification
G02311	Tape - Pressure Sensitive Adhesive, for Masking During Paint Stripping Operations	AMS-T-23397

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Prepare for the Inspection

SUBTASK 35-22-00-910-003

(1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-00-010-001

(2) Get access to the oxygen generator as follows:

(a) Get access to the lower the applicable passenger Passenger Service Unit (PSU) (TASK 25-23-61-000-801).

(b) To get access to the Attendant Service Units (ASU), do these steps:

1) Go to the applicable ASU.

2) Apply masking tape, G02311, to the applicable door.

3) Put a tool into the latch access hole.

4) Push up on the tool to operate the door latch.

5) Open the oxygen box door.

6) Let the door rest on masking tape, G02311.

F. Oxygen Generator Visual Inspection

SUBTASK 35-22-00-210-001

(1) Make sure that the heat-sensitive band on the oxygen generator is not black.

NOTE: If the heat-sensitive band on the oxygen generator is not black, the oxygen generator is in a serviceable condition.

SUBTASK 35-22-00-210-002

(2) If the heat-sensitive band on the oxygen generator is black, replace the applicable oxygen generator as follows:

(a) If you will replace a PSU oxygen generator, do these tasks:

- PSU Oxygen Generator Removal, TASK 35-22-11-000-802
- PSU Oxygen Generator Installation, TASK 35-22-11-400-802.

(b) If you will replace an ASU oxygen generator, do these tasks:

- ASU Oxygen Generator Removal, TASK 35-22-11-000-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

- ASU Oxygen Generator Installation, TASK 35-22-11-400-803
- ASU Oxygen Mask Packing, TASK 35-22-31-420-801.

SUBTASK 35-22-00-210-008

(3) Make sure that the clearance between the outer diameter of the oxygen generator and the mask box is less than 0.10 in. (2.54 mm).

NOTE: It is acceptable for the clearance to be 0.00 in. (0.00 mm).

(a) If the clearance is not correct, adjust the oxygen generator with the straps(TASK 35-22-11-000-802).

SUBTASK 35-22-00-080-002

(4) Make sure that the safety pin is removed from the chemical oxygen generator (TASK 35-22-11-400-801).

G. Put the Airplane Back to Its Usual Condition

SUBTASK 35-22-00-410-003

(1) Close the access for the oxygen generator as follows:

(a) Close the applicable passenger PSU (TASK 25-23-61-400-801).

(b) For the ASU, do these steps to close the oxygen box door:

1) Hold the oxygen box door in the closed position.

2) Push the reset lever on the latch actuator plunger to set the actuator again.

3) Close and latch the oxygen box door.

NOTE: The latch will usually make a "click" noise when it fully engages.

4) Remove the masking tape from the oxygen box door (if installed).

5) Do a visual check of the door fit.

a) Make sure that the oxygen equipment is free of the oxygen box door or actuator.

——— END OF TASK ———

TASK 35-22-00-210-802

5. Oxygen Cylinder (CDS) Visual Inspection

(Figure 504)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the visual inspection of the oxygen cylinder.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-51-000-801	LSU Oxygen Cylinder (CDS) Removal (P/B 401)
35-22-51-400-801	LSU Oxygen Cylinder (CDS) Installation (P/B 401)
35-22-51-440-801	Oxygen Cylinder (CDS) Activation (P/B 201)

C. Consumable Materials

Reference	Description	Specification
G02311	Tape - Pressure Sensitive Adhesive, for Masking During Paint Stripping Operations	AMS-T-23397

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Prepare for the Inspection

SUBTASK 35-22-00-910-004

(1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-00-010-002

(2) Get access to the oxygen cylinder as follows:

(a) Gain access to the applicable Lavatory Service Unit (LSU).

(b) Apply masking tape, G02311, to the applicable door.

(c) Put a tool into the latch access hole.

(d) Push up on the tool to operate the door latch.

(e) Open the oxygen box door.

(f) Let the door rest on masking tape, G02311.

F. Oxygen Cylinder (CDS) Visual Inspection

SUBTASK 35-22-00-210-003

(1) Do these checks at the actuator assembly on the oxygen cylinder.

(a) Make sure that the discharge indicator tape has no damage or holes.

NOTE: A damaged discharge indicator tape will show that an over pressure condition caused oxygen to flow from the relief port.

(b) Make sure that the lanyard assembly is fully engaged in the actuator assembly.

NOTE: A disengaged lanyard assembly will show that an oxygen cylinder release caused oxygen to flow from the masks.

SUBTASK 35-22-00-900-001

(2) If the discharge indicator tape is damaged or the lanyard assembly is disengaged, replace the applicable oxygen cylinder (TASK 35-22-51-000-801 and TASK 35-22-51-400-801).

SUBTASK 35-22-00-210-004

(3) Make sure that the safety pin has been removed from the oxygen cylinder (TASK 35-22-51-440-801).

G. Put the Airplane Back to Its Usual Condition

SUBTASK 35-22-00-410-004

(1) Close the access for the oxygen cylinder as follows:

(a) Hold the oxygen box door in the closed position.

(b) Push the reset lever on the latch actuator plunger to set the actuator again.

(c) Close and latch the oxygen box door.

NOTE: The latch will usually make a "click" noise when it fully engages.


(d) Remove the masking tape from the oxygen box door (if installed).

(e) Do a visual check of the door fit.

(f) Make sure that the oxygen equipment is free of the oxygen box door or actuator.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

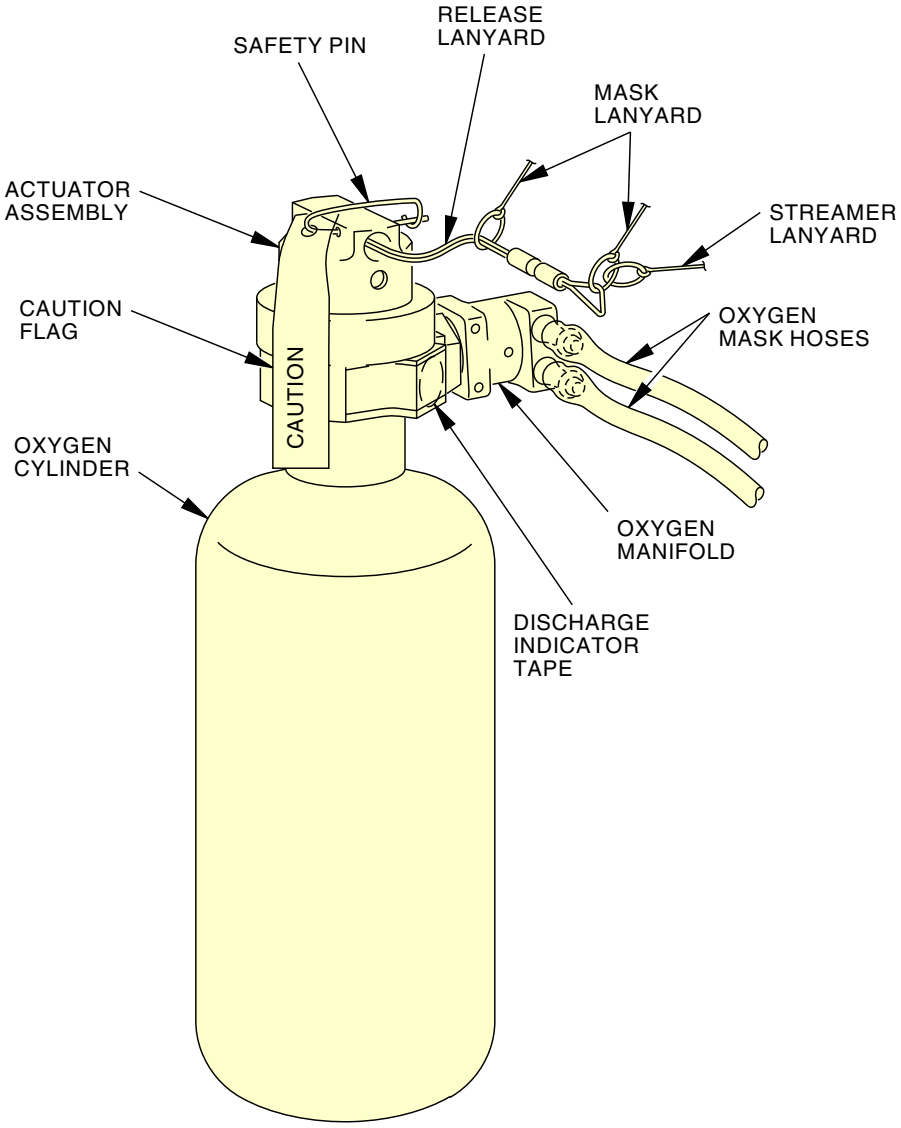

CDS OXYGEN CYLINDER (EXAMPLE)

2414952 S00061536663_V1

Oxygen Cylinder (CDS) Activation/Deactivation
Figure 504/35-22-00-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN GENERATOR - MAINTENANCE PRACTICES

1. General

A. This procedure contains scheduled maintenance task data.

B. This procedure has these tasks:

(1) A deactivation of the oxygen generator

(2) An activation of the oxygen generator.

C. All replacement oxygen generators are supplied with a safety pin. The safety pin is installed in the firing mechanism of the oxygen generator. The generator cannot fire (start oxygen flow) when the safety pin is correctly installed. The generator is safe to touch when the safety pin is installed.

D. In addition to the safety pin, a secondary safety device is used for the transport of the spare oxygen generator. This secondary safety device must be removed from the firing pins release pin hole, before the release pin can be installed.

E. The safety pin is to be installed (oxygen generator deactivation) in the oxygen generator firing mechanism whenever the generator, oxygen box, or service unit is removed from the airplane. Once the generator, oxygen box, or service unit is installed, the safety pin must be removed (oxygen generator activation) prior to returning the aircraft to service.

F. All service units have at least one oxygen generator. The generator supplies oxygen to each of the connected oxygen masks. Each generator has a color stripe around the generator body to show if the oxygen generator has been previously fired. The flow of oxygen is begun by the downward pull of the oxygen mask by the passenger, providing that the generator has been properly activated.

G. It is necessary to use an approved pair of pin retraction pliers and a safety pin to deactivate an oxygen generator.

TASK 35-22-11-000-801

2. Oxygen Generator Deactivation

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-22-11-000-802	PSU Oxygen Generator Removal (P/B 401)
35-22-11-000-803	ASU Oxygen Generator Removal (P/B 401)
35-22-11-400-802	PSU Oxygen Generator Installation (P/B 401)
35-22-11-400-803	ASU Oxygen Generator Installation (P/B 401)
35-22-31-420-801	ASU Oxygen Mask Packing (P/B 201)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-752	Safety Pin and Flag - Chemical Oxygen Generator Part #: C35003-11 Supplier: 81205 Part #: E71401-00 Supplier: 16827

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description
SPL-1935	Pliers or Pry Bar - Firing Pin Retraction, Oxygen Generator Part #: C35004-1 Supplier: 81205 Part #: E71516-00 Supplier: D1379
SPL-1937	Equipment - Firing Pin Retraction, Oxygen Generators Part #: C35003-10 Supplier: 81205

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Oxygen generator	35-22-11-02-070	PTF ALL
		35-22-11-22-175	PTF ALL
		35-22-11-25-115	PTF ALL
		35-22-11-95-190	PTF ALL

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Prepare for the Deactivation

SUBTASK 35-22-11-010-001

(1) If it is necessary to get access to the oxygen generator [1], open the service unit.

(a) For the Passenger Service Unit (PSU), do these steps to lower the PSU:

1) Put a rod into the latch access hole (2 locations).

2) Push the rod up to release the cam latches.

3) Lower the PSU.

(b) For the Attendant Service Unit (ASU), do these steps:

1) Put a rod or flat tool into the latch access hole or door clearance.

2) Push the tool up to release the door latch.

3) Open the oxygen box door.

4) Let the oxygen masks come out.

SUBTASK 35-22-11-210-001

(2) Do these checks before you deactivate the oxygen generator [1]:

(a) Make sure that the heat-sensitive band on the oxygen generator [1] is not black.

NOTE: The oxygen generator has fired if the heat-sensitive band is black.

(b) Make sure that the release pin [2] or safety pin [6] is installed in the firing pin [3].

NOTE: If the firing pin is in the fired position (the safety pin cannot be installed), the oxygen generator fired or it is damaged.

(c) Make sure that the oxygen generator [1] is not damaged.

SUBTASK 35-22-11-020-001

(3) If the oxygen generator [1] fired or is damaged, replace the oxygen generator [1].

(a) Replace a PSU oxygen generator [1], these are the tasks:

PSU Oxygen Generator Removal, TASK 35-22-11-000-802,

PSU Oxygen Generator Installation, TASK 35-22-11-400-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Replace an ASU oxygen generator [1], these are the tasks:

ASU Oxygen Generator Removal, TASK 35-22-11-000-803,

ASU Oxygen Generator Installation, TASK 35-22-11-400-803.

SUBTASK 35-22-11-040-001

(4) If the oxygen generator [1] did not fire, deactivate the oxygen generator [1].

F. Oxygen Generator Deactivation

SUBTASK 35-22-11-040-002

WARNING INSTALL A SAFETY PIN WITH A WARNING FLAG ATTACHED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF YOU REMOVE THE RELEASE PIN AND IF THE SAFETY PIN IS NOT INSTALLED.

WARNING A FIRED OXYGEN GENERATOR GETS VERY HOT 450°F, (232°C) OR HIGHER AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(1) Do these steps to deactivate the oxygen generator [1]:

WARNING HOLD THE RELEASE PIN INTO THE FIRING PIN WITH YOUR HAND. IF THE RELEASE PIN COMES OUT OF THE FIRING PIN, THE GENERATOR WILL FIRE. THE GENERATOR CAN BE HOT AND CAN BURN YOU.

(a) Put the pin retraction pliers [4] between the release pin [2] and firing pin spring case [5].

1) Use the firing pin retraction device, SPL-1935, and safety pin and flag, SPL-752, for the Draeger and B/E Aerospace oxygen generators [1].

2) Use the firing pin retraction equipment and safety pin, SPL-1937, for the Puritan Bennett, B/E Aerospace, and AvOx Systems/Scott Aviation oxygen generators [1].

(b) Carefully move the release pin [2] and firing pin [3] away from the firing pin spring case [5] with the pin retraction pliers [4].

1) Do not release the pin retraction pliers.

(c) Install the safety pin [6] into the hole of the firing pin [3] that is nearest to the oxygen generator [1].

1) Make sure that the safety pin [6] is between the firing pin [3] and firing pin spring case [5].

2) Make sure that you install the safety pin [6] in the smaller of the two holes of the firing pin [3].

(d) If it is necessary, remove the release pin [2].

(e) Carefully release the pin retraction pliers [4] and remove them from the oxygen generator [1].

SUBTASK 35-22-11-410-001

(2) If no more maintenance is necessary, close the service unit.

(a) For the PSU, push the PSU panel up to engage the cam latches.

NOTE: The latches will make a "click" noise when they fully engage.

(b) For the ASU, do these steps:

ECCN 9E991 BOEING PROPRIETARY - See title page for details


1) Do this task: ASU Oxygen Mask Packing, TASK 35-22-31-420-801.
2) Close the oxygen box door and push on it to engage the door latch.
NOTE: The latch will usually make a "click" noise when it fully engages.

SUBTASK 35-22-11-970-001

(3) Write in the airplane records to show that the oxygen generators [1] are deactivated.
NOTE: Before the oxygen generators can be used, they must be activated.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

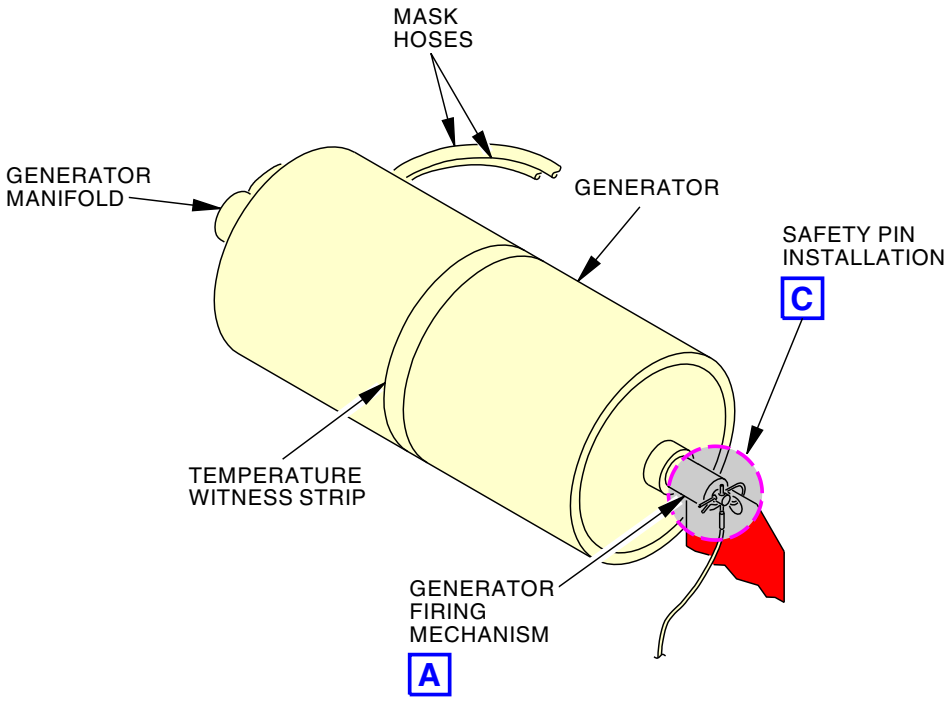


**OXYGEN GENERATOR
(EXAMPLE)**

2414953 S00061536667_V1


**Oxygen Generator Activation/Deactivation
Figure 201/35-22-11-990-801 (Sheet 1 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

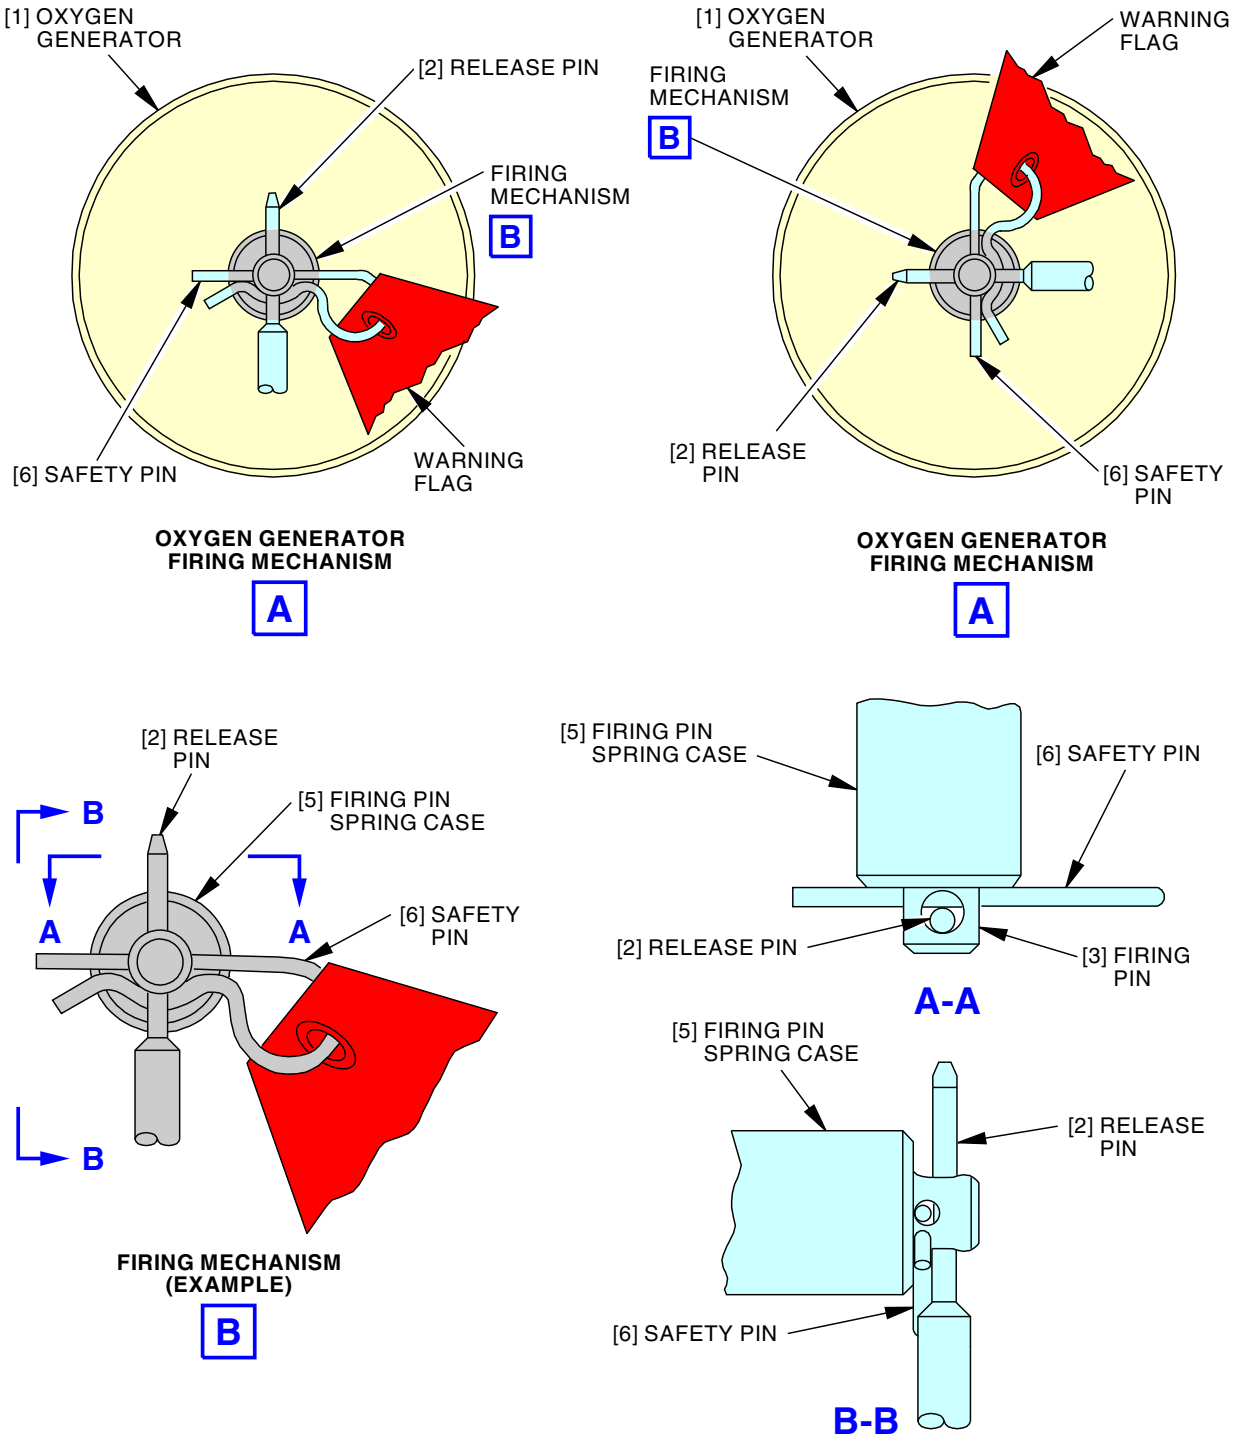


Oxygen Generator Activation/Deactivation
Figure 201/35-22-11-990-801 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

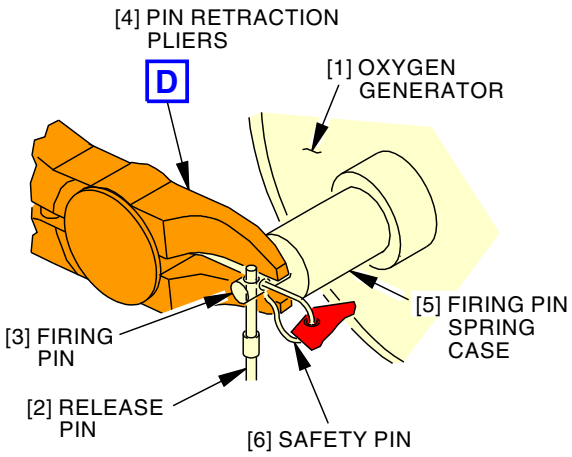


SAFETY PIN INSTALLATION

C

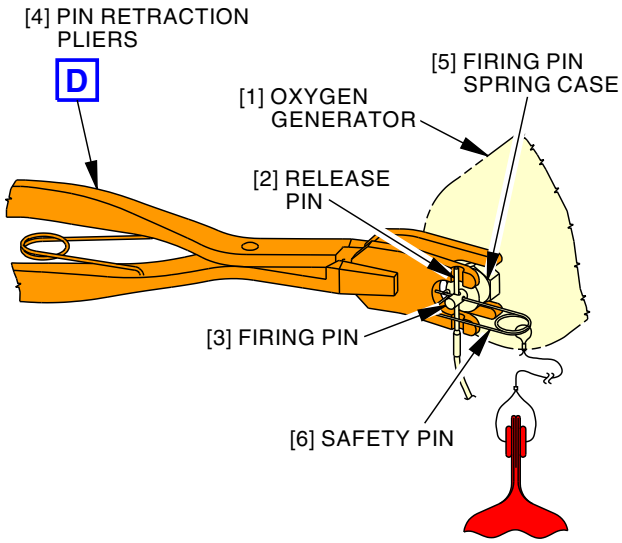


SAFETY PIN INSTALLATION

C 1

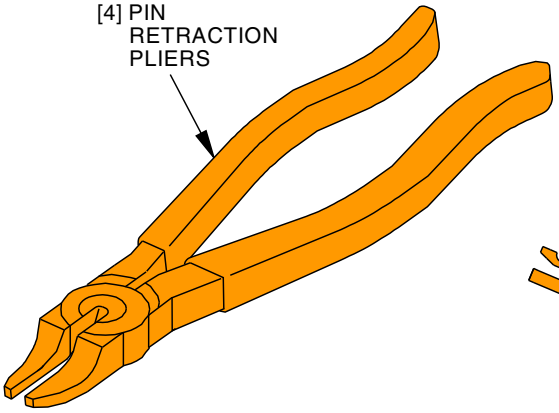

PIN RETRACTION PLIERS

D

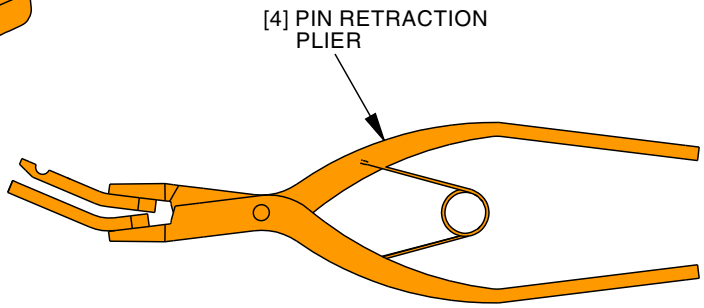

PIN RETRACTION PLIERS

D 1

1 PURITAN BENNETT, B/E AEROSPACE, SCOTT AND AVOX OXYGEN GENERATORS.

2414955 S00061536669_V2

Oxygen Generator Activation/Deactivation
Figure 201/35-22-11-990-801 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-11-400-801

3. Oxygen Generator Activation

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-22-11-000-802	PSU Oxygen Generator Removal (P/B 401)
35-22-11-000-803	ASU Oxygen Generator Removal (P/B 401)
35-22-11-400-802	PSU Oxygen Generator Installation (P/B 401)
35-22-11-400-803	ASU Oxygen Generator Installation (P/B 401)
35-22-31-420-801	ASU Oxygen Mask Packing (P/B 201)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1935	Pliers or Pry Bar - Firing Pin Retraction, Oxygen Generator Part #: C35004-1 Supplier: 81205 Part #: E71516-00 Supplier: D1379
SPL-1937	Equipment - Firing Pin Retraction, Oxygen Generators Part #: C35003-10 Supplier: 81205

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Oxygen generator	35-22-11-02-070	PTF ALL
		35-22-11-22-175	PTF ALL
		35-22-11-25-115	PTF ALL
		35-22-11-95-190	PTF ALL

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Prepare for the Activation

SUBTASK 35-22-11-010-002

(1) Open the service unit to get access to the oxygen generator [1].

(a) For the Passenger Service Unit (PSU), do these steps to lower the PSU:

1) Put a rod into the latch access hole (2 locations).

2) Push the rod up to release the cam latches.

3) Lower the PSU.

(b) For the Attendant Service Unit (ASU), do these steps:

1) Put a rod or flat tool into the latch access hole or door clearance.

2) Push the tool up to release the door latch.

3) Open the oxygen box door.

4) Release the oxygen masks.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-11-010-003

(2) Do these checks before you activate the oxygen generator [1]:

(a) Make sure that the heat-sensitive band on the oxygen generator [1] is not black.

NOTE: If the heat-sensitive band is black, the oxygen generator fired.

(b) Make sure that the safety pin [6] is installed in the firing pin [3] of the oxygen generator [1].

NOTE: If the firing pin is in the fire position (the safety pin cannot be installed), the oxygen generator fired or it is damaged.

(c) Make sure that the oxygen generator [1] is not damaged.

SUBTASK 35-22-11-020-002

(3) If the oxygen generator [1] fired or is damaged, replace the oxygen generator [1].

(a) Replace a PSU oxygen generator [1], these are the tasks:

PSU Oxygen Generator Removal, TASK 35-22-11-000-802,

PSU Oxygen Generator Installation, TASK 35-22-11-400-802.

(b) Replace an ASU oxygen generator [1], these are the tasks:

ASU Oxygen Generator Removal, TASK 35-22-11-000-803,

ASU Oxygen Generator Installation, TASK 35-22-11-400-803.

F. Oxygen Generator Activation

SUBTASK 35-22-11-410-002

(1) Examine the routing of the cable of the release pin [2], these are the tasks for the correct installation of the release cable:

ASU Oxygen Generator Installation, TASK 35-22-11-400-803,

PSU Oxygen Generator Installation, TASK 35-22-11-400-802.

(a) Make sure that the release pin [2] and cable pull straight from the firing pin spring case [5] when the masks pull from the PSU or ASU.

SUBTASK 35-22-11-210-002

(2) Examine the release pin [2].

(a) If the release pin [2] is damaged, bent or has corrosion, replace it.

SUBTASK 35-22-11-410-003

WARNING A FIRED OXYGEN GENERATOR GETS VERY HOT 450°F, (232°C) OR HIGHER AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(3) Do these steps to activate the oxygen generator [1]:

(a) If it is necessary, install the safety pin [6] in the firing pin [3] of the oxygen generator [1].

(b) If it is necessary, remove the secondary safety device from the firing pin [3] of the oxygen generator [1].

1) Use a secondary safety device and safety pin for the transportation of spare oxygen generators [1].

2) Remove the secondary safety device from the firing mechanism before the release pin is installed.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Make sure that you remove the safety pin and secondary safety device before you put the oxygen box in-service.

WARNING MAKE SURE THAT THE RELEASE CABLE HAS FREE TRAVEL. THE RELEASE CABLE PULLS THE RELEASE PIN WHEN THE MASKS COME DOWN DURING AN EMERGENCY. IF THE ROUTING OF THE RELEASE CABLE IS INCORRECT, THE OXYGEN DISTRIBUTION SYSTEM WILL NOT OPERATE. THIS CAN CAUSE INJURIES TO PASSENGERS.

(c) Align the release pin [2] and firing pin [3] to the installed positions and install the release pin [2] in the larger of the two holes of the firing pin [3].

1) Make sure that the shaft of the release pin extends fully through the firing pin of the generator.

(d) Put the pin retraction pliers [4] between the release pin [2] and firing pin spring case [5] of the oxygen generator [1] and move the firing pin [3] away from the firing pin spring case [5] of the generator.

1) Use the firing pin retraction device, SPL-1935, for the Draeger and B/E Aerospace oxygen generators [1].

2) Use the firing pin retraction equipment and safety pin, SPL-1937, for the Puritan Bennett, B/E Aerospace, and AvOx Systems/Scott Aviation oxygen generators [1].

(e) Make sure that the shaft of the release pin [2] extends fully through the firing pin [3] of the oxygen generator [1].

(f) Carefully remove the safety pin [6] from the firing pin [3] of the oxygen generator [1].

(g) Let the pin retraction pliers [4] go closed and remove the pliers.

SUBTASK 35-22-11-210-003

WARNING MAKE SURE THAT THE RELEASE CABLE HAS FREE TRAVEL. THE RELEASE CABLE PULLS THE RELEASE PIN WHEN THE MASKS COME DOWN DURING AN EMERGENCY. IF THE ROUTING OF THE RELEASE CABLE IS INCORRECT, THE OXYGEN DISTRIBUTION SYSTEM WILL NOT OPERATE. THIS CAN CAUSE INJURIES TO PASSENGERS.

(4) Examine the routing of the cable of the release pin [2] again.

(a) Make sure that the release pin and its cable will pull straight away from the firing pin spring case [5] when the oxygen masks are pulled from the PSU or ASU.

SUBTASK 35-22-11-410-004

(5) Make sure that the shaft of the release pin [2] extends fully through the hole in the firing pin [3].

SUBTASK 35-22-11-410-005

(6) If no more maintenance is necessary, close the applicable service unit.

(a) For the PSU, push the PSU panel up to engage the cam latches.

NOTE: The latches will usually make a "click" noise when they fully engage.

(b) For the ASU, do these steps:

1) Do this task: ASU Oxygen Mask Packing, TASK 35-22-31-420-801.

2) Close the oxygen box door and push on it to engage the door latch.

NOTE: The latch will usually make a "click" noise when it fully engages.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-11-970-002

(7) Write in the airplane records to show that the oxygen generators [1] are active.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN GENERATOR - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the PSU oxygen generator

(2) An installation of the PSU oxygen generator

(3) A removal of the ASU oxygen generator

(4) An installation of the ASU oxygen generator.

B. Before you do maintenance on an oxygen system component that contains an oxygen generator you must install a safety pin in the oxygen generator firing mechanism. The safety pin will permit the oxygen generator to be handled and stored. If the safety pin is not installed, the oxygen generator can fire.

C. All spare oxygen generators are supplied with a safety pin installed in the firing mechanism.

D. When you do the removal and installation procedures for the ASU it is necessary to open the oxygen box door. When the oxygen box door is opened, the oxygen masks will drop (deploy). After you install the oxygen generator, you must then do the packing procedure for the oxygen masks.

TASK 35-22-11-000-802

2. PSU Oxygen Generator Removal

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare the PSU Oxygen Generator(s) for Removal

SUBTASK 35-22-11-010-008

(1) Lower the Passenger Service Unit (PSU), do these steps:

(a) Put a rod into the latch access hole (2 locations).

(b) Push up on the rod to unlatch the cam latches.

(c) Disconnect the lanyard from the PSU rail.

(d) Let the PSU hang from the opposite end.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-11-040-004

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(2) If the oxygen generator has not fired, do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

NOTE: If the oxygen generator has fired, it is not necessary to deactivate the oxygen generator.

D. PSU Oxygen Generator Removal

NOTE: When you do the removal procedure, do not loosen or remove the cable pulleys on the PSU, if installed.

SUBTASK 35-22-11-020-011

(1) Remove the oxygen supply line [6] from the oxygen generator [1].

SUBTASK 35-22-11-020-012

(2) Remove the screws [3] from the straps [5].

(a) Keep the screws [3] for installation.

SUBTASK 35-22-11-010-009

(3) Move the straps [5] away from the oxygen generator [1].

SUBTASK 35-22-11-020-013

CAUTION

YOU MUST BE VERY CAREFUL WHEN YOU INSTALL AND REMOVE AN OXYGEN GENERATOR. DO NOT DAMAGE THE OXYGEN GENERATOR OR LET IT FALL. IF THE OXYGEN GENERATOR IS DAMAGED, IT IS POSSIBLE THAT THE OXYGEN GENERATOR WILL NOT FIRE.

CAUTION

DO NOT TRY TO REMOVE THE FIRING MECHANISM FROM THE OXYGEN GENERATOR. YOU CANNOT ASSEMBLE IT AGAIN THUS IT IS DAMAGED.

(4) Do these steps to remove the PSU oxygen generator [1] (View B, Figure 401):

(a) Make sure that the safety pin [7] is installed in the firing pin on the oxygen generator [1].

(b) Pull the release pin from the firing pin.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


WARNING

MAKE SURE THAT YOU OBEY ALL APPLICABLE REGULATORY REQUIREMENTS FOR THE TRANSPORT OF OXYGEN GENERATORS. IF THE SERVICE LIFE OF THE GENERATORS EXPIRES, YOU MUST FIRE THE GENERATORS AND MAKE SURE THAT THE OXIDIZER CORE IS EMPTY. DO THIS BEFORE YOU PREPARE THE GENERATORS FOR TRANSPORT. IF THE GENERATORS ARE NOT FIRED AND EMPTY, THEY CAN ACCIDENTALLY FIRE DURING TRANSPORT AND CAUSE HEAT AND IGNITION. THIS CAN CAUSE DEATH OR INJURY TO PERSONS AND DAMAGE TO THE AIRCRAFT.

(c) Remove the oxygen generator [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

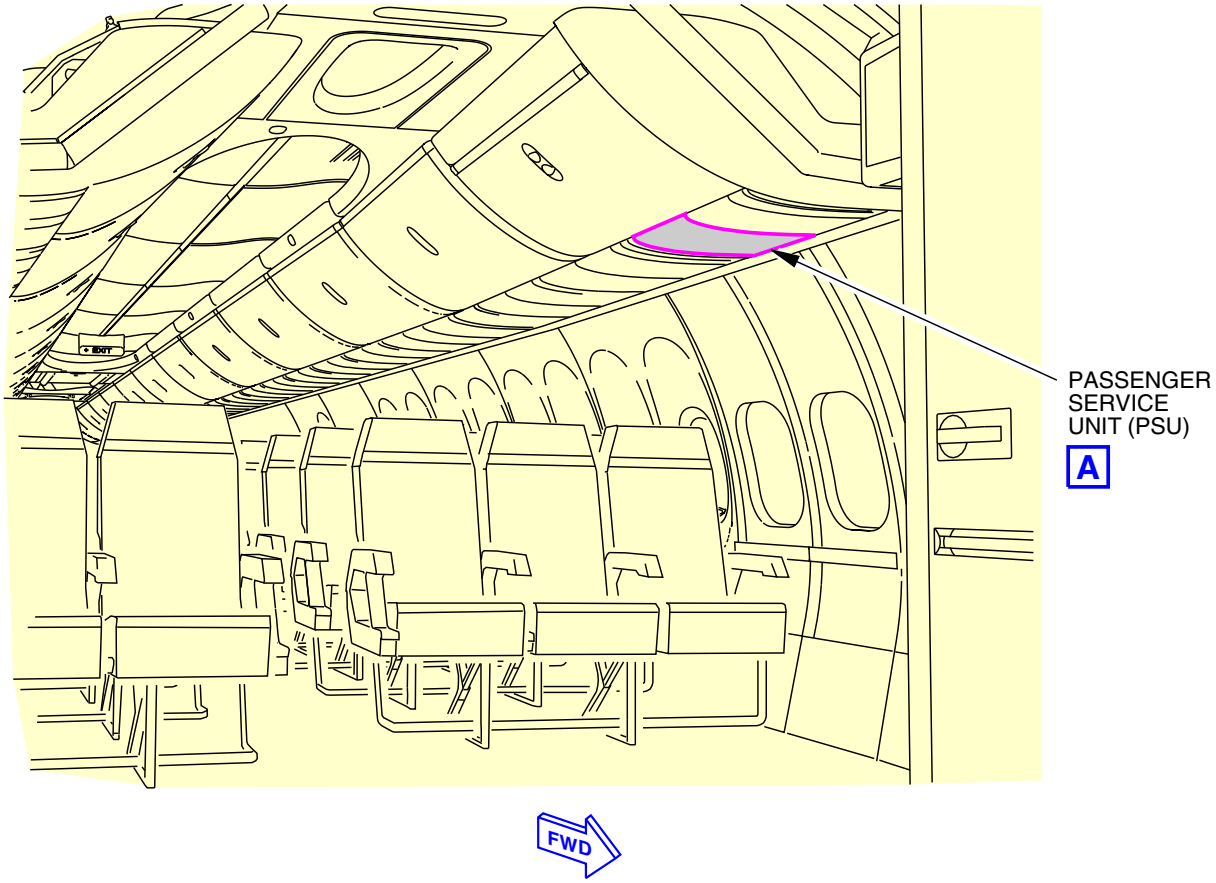


**PASSENGER COMPARTMENT
(EXAMPLE)**

3069077 S0000830083_V1


**Oxygen Generator - PSU Installation
Figure 401/35-22-11-990-805 (Sheet 1 of 5)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

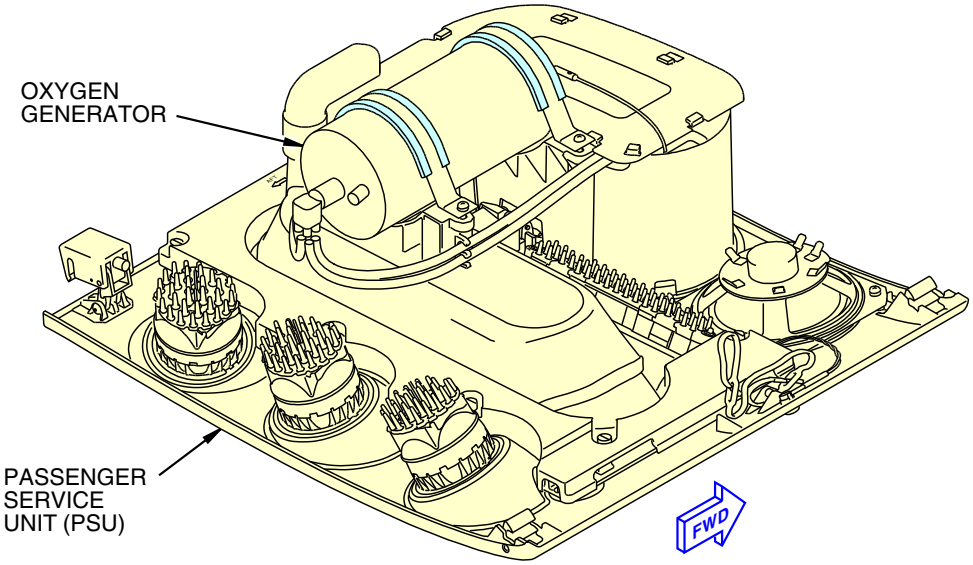

NON-PSA THERMAL PAD

A

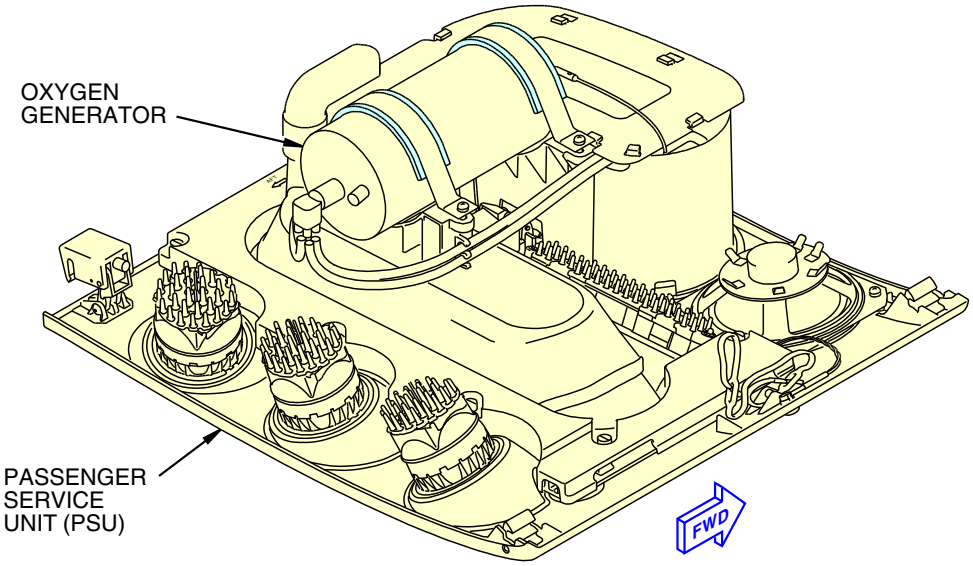


PSA THERMAL PAD

A

3069015 S0000830037_V1


Oxygen Generator - PSU Installation
Figure 401/35-22-11-990-805 (Sheet 2 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

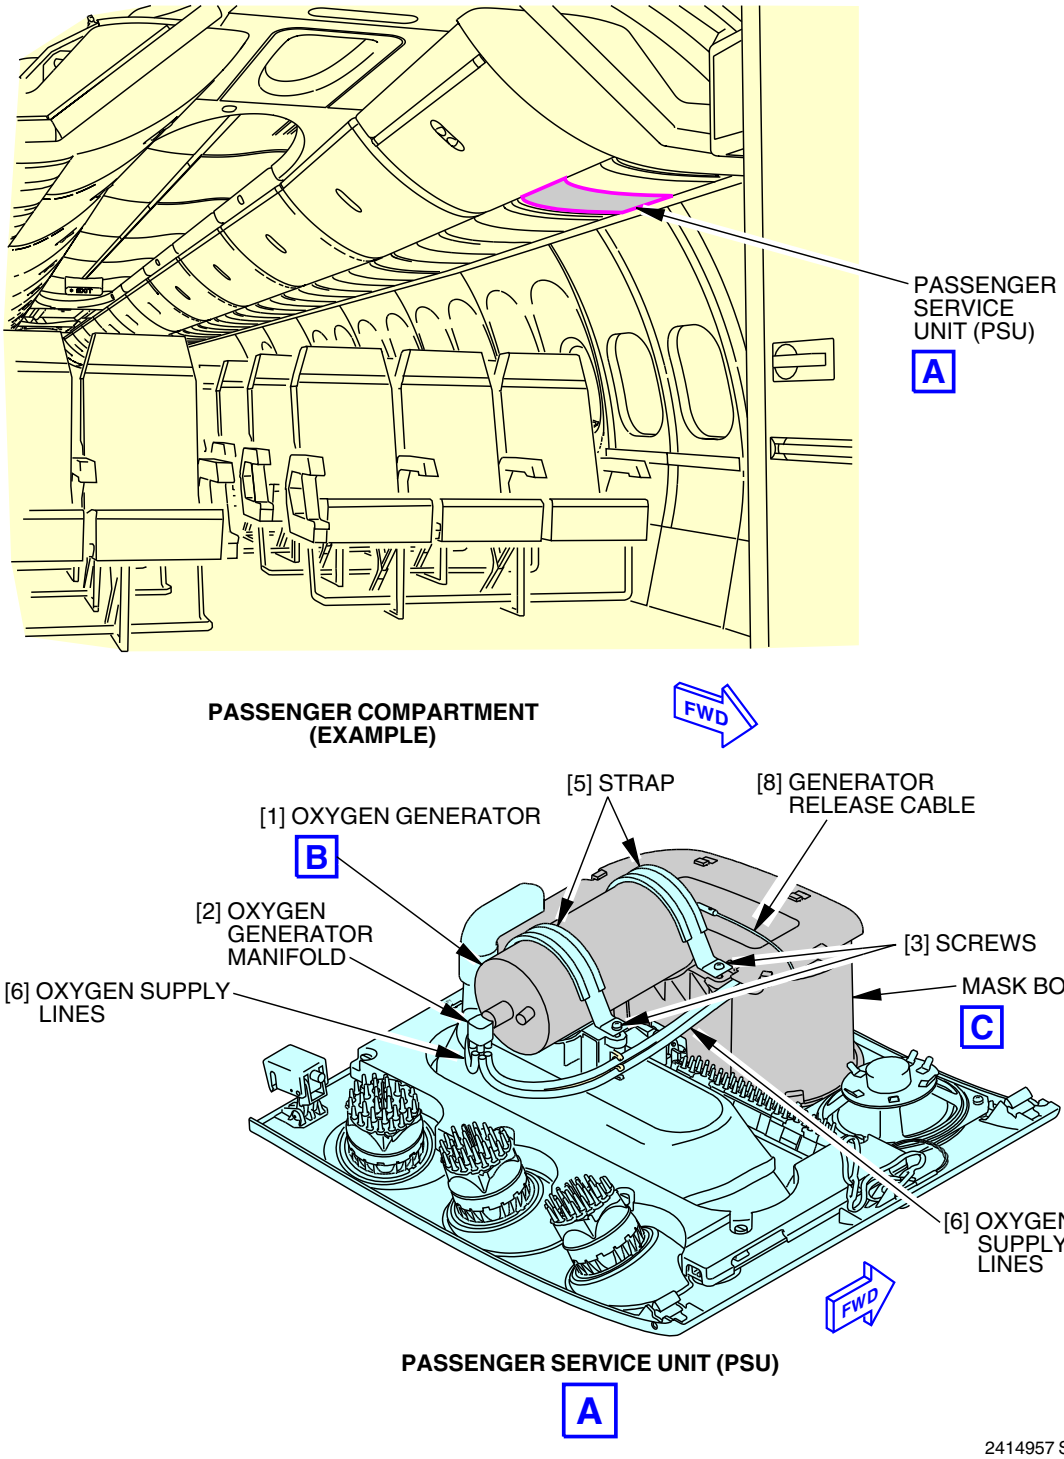

Oxygen Generator - PSU Installation
Figure 401/35-22-11-990-805 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

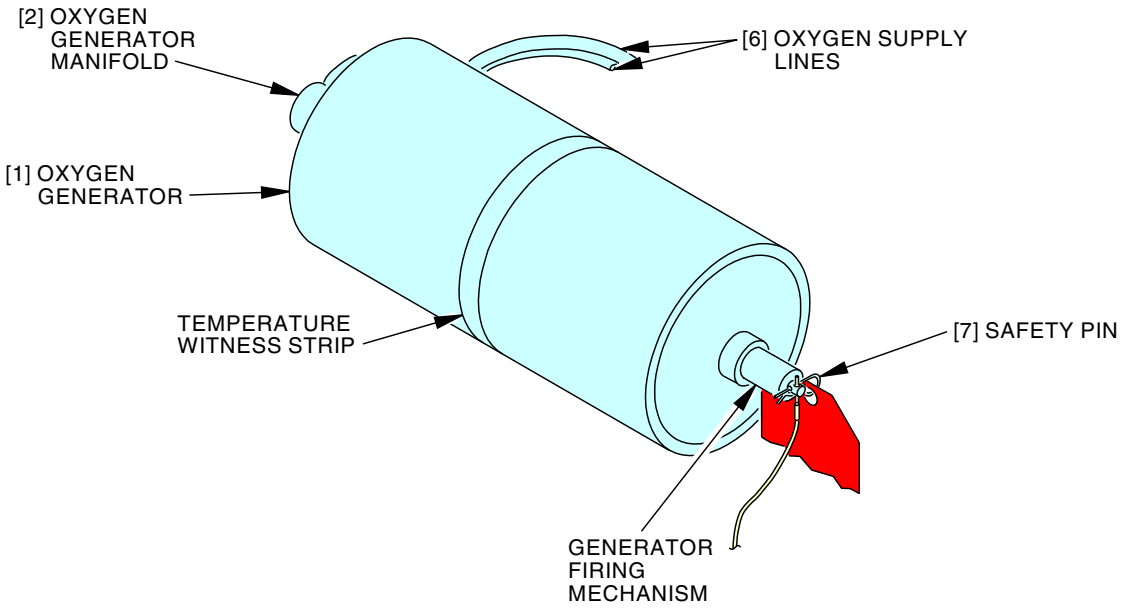


OXYGEN GENERATOR (EXAMPLE)

B

2414959 S00061536676_V1

Oxygen Generator - PSU Installation
Figure 401/35-22-11-990-805 (Sheet 4 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

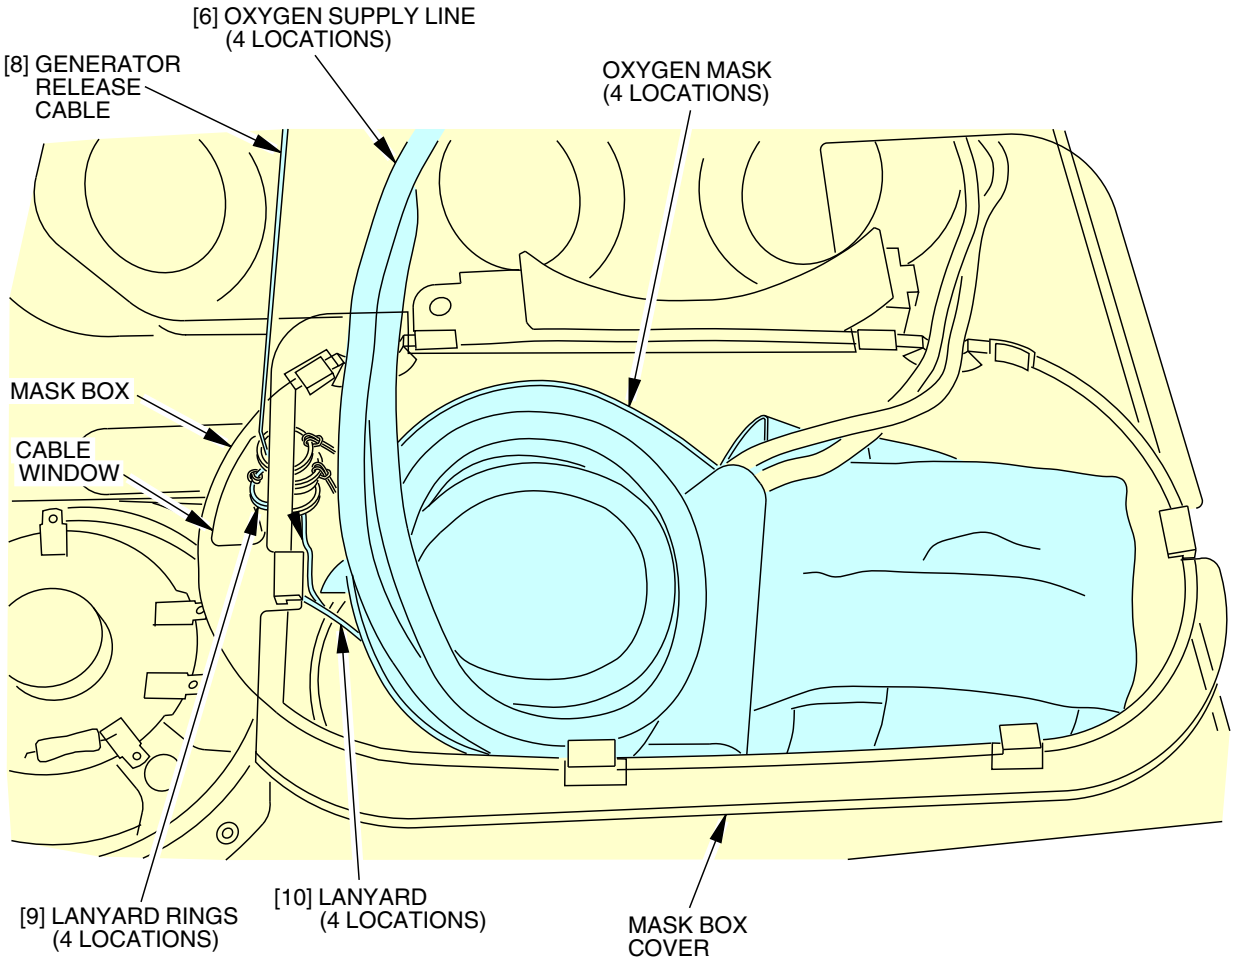

MASK BOX
(OXYGEN GENERATOR NOT SHOWN)

C

2414958 S00061536675_V2

Oxygen Generator - PSU Installation
Figure 401/35-22-11-990-805 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-11-400-802

3. PSU Oxygen Generator Installation

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) The capacities of the oxygen generators are not all the same. Make sure that the correct part number and capacity (12 minute or 22 minute) is installed.

B. References

Reference	Title
25-23-61-400-801	Passenger Service Unit - Installation (P/B 401)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)

C. Consumable Materials

Reference	Description	Specification
A50067	Adhesive - Silicone Rubber - RTV 102 (White)	MIL-A-46106 Group 1 Type 1, BAC5010 Type 60 Class A Grade 1
G51844	Cloth - Cleaning, Low-Lint (Clean Room Use)	A-A-59323 Type I

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Oxygen generator	35-22-11-02-070	PTF ALL

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Prepare for the PSU Oxygen Generator Installation

SUBTASK 35-22-11-210-010

(1) Do these checks before the oxygen generator [1] installation:

(a) Make sure that the heat-sensitive band on the oxygen generator [1] is not black.

NOTE: If the heat-sensitive band is black, the oxygen generator has fired.

NOTE: Prior to installation, verify that the chemical oxygen generator is secured with clamps that have pads that are NOT installed with Pressure Sensitive Adhesive (PSA). The incorrect PSA pad material is identified as a pad that is flat and adhered to the inside surface of the clamp. The correct, non-PSA pad material is identified by having channel features that wrap the edges of the clamp to keep them secured.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/ 232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(b) Make sure that the safety pin [7] is installed in the firing pin.

NOTE: If the firing pin is in the fired position (the firing pin is against the percussion cap), the oxygen generator has fired or the firing mechanism is bad.

(c) Make sure that the oxygen generator [1] does not have these types of damage:

1) dents
2) pushed-in ends
3) a bent or loose firing mechanism
4) unusual noises when the oxygen generator [1] is shaken gently.

SUBTASK 35-22-11-210-011

(2) If the oxygen generator [1] is not serviceable, discard it.

SUBTASK 35-22-11-210-012

(3) If the oxygen generator [1] is serviceable, do the subsequent procedure.

G. PSU Oxygen Generator Installation

SUBTASK 35-22-11-211-003

(1) Make sure that the generator release cable [8] is put through the triangular cable window of the mask box.

SUBTASK 35-22-11-211-002

(2) Make sure that the lanyard rings [9] of the mask lanyards [10] are fully installed to the oxygen generator release cable [8].

SUBTASK 35-22-11-420-003

(3) Put the oxygen generator [1] in its installed position on the Passenger Service Unit (PSU).

(a) Install the oxygen supply lines [6] onto the oxygen generator manifold [2].

(b) If it is necessary, install dust cover onto the unused port of the oxygen generator manifold [2], do these steps:

WARNING

USE PROTECTIVE GLOVES AROUND RTV ADHESIVE SEALANT. IF YOU DO NOT OBEY, SKIN IRRITATION CAN OCCUR.

1) Apply a small quantity of RTV 102 adhesive, A50067, into the opening of the dust cover.
2) Install the dust cover onto the unused port.
3) Remove the excess adhesive with low-lint cleaning cloth, G51844.
4) Let the adhesive dry in the air for 24 hours.

(c) Align the release pin hole of the generator firing mechanism parallel to the cover of the oxygen mask box.

(d) Put the straps [5] in the installed position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Install the screws [3] in the straps [5] and PSU.

1) Tighten the screws [3] to 9 ±1 in-lb (1.02 ±0.11 N·m).

SUBTASK 35-22-11-440-003

(4) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

SUBTASK 35-22-11-410-009

(5) Close the PSU.

(a) Connect the lanyard to the PSU rail.

(b) Push the PSU panel up to fully engage from step above the cam latches (TASK 25-23-61-400-801).

——— END OF TASK ———

TASK 35-22-11-000-803

4. ASU Oxygen Generator Removal

(Figure 402)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Removal

SUBTASK 35-22-11-010-005

(1) Go to the applicable forward or aft Attendant Service Unit (ASU), found above the exit doors.

SUBTASK 35-22-11-010-006

(2) Do these steps to open an ASU oxygen box [22].

(a) Put a tool into the latch access hole.

(b) Push up on the tool to operate the door latch.

(c) Open the oxygen box door.

(d) Let the oxygen masks to fall.

(e) Do not pull on the oxygen masks.

NOTE: If you pull on the oxygen masks, the oxygen generator will fire.

(f) Put the masks and streamer out of the way during the maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-11-020-007

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(3) If the oxygen generator has not fired, do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

NOTE: If the oxygen generator has fired, it is not necessary to deactivate the oxygen generator.

D. ASU Oxygen Generator Removal

SUBTASK 35-22-11-020-008

(1) Loosen the screws [24] that attach the oxygen generator [27] to the oxygen box [22].

SUBTASK 35-22-11-020-009

(2) Disconnect the oxygen supply line from the oxygen generator manifold [21].

SUBTASK 35-22-11-020-010

CAUTION

YOU MUST BE VERY CAREFUL WHEN YOU INSTALL AND REMOVE AN OXYGEN GENERATOR. DO NOT DAMAGE THE OXYGEN GENERATOR OR LET IT FALL. IF THE OXYGEN GENERATOR IS DAMAGED, IT IS POSSIBLE THAT THE OXYGEN GENERATOR WILL NOT FIRE.

CAUTION

DO NOT TRY TO REMOVE THE FIRING MECHANISM FROM THE OXYGEN GENERATOR. YOU CANNOT ASSEMBLE IT AGAIN THUS IT IS DAMAGED.

(3) Do these steps to remove the oxygen generator [27]:

(a) Make sure the safety pin [23] is installed in the firing pin.

(b) Remove the release pin from the firing pin.

(c) Remove the screws [24] that hold the oxygen generator [27] to the oxygen box [22].

1) Keep the fasteners for the installation.

WARNING

MAKE SURE THAT YOU OBEY ALL APPLICABLE REGULATORY REQUIREMENTS FOR THE TRANSPORT OF OXYGEN GENERATORS. IF THE SERVICE LIFE OF THE GENERATORS EXPIRES, YOU MUST FIRE THE GENERATORS AND MAKE SURE THAT THE OXIDIZER CORE IS EMPTY. DO THIS BEFORE YOU PREPARE THE GENERATORS FOR TRANSPORT. IF THE GENERATORS ARE NOT FIRED AND EMPTY, THEY CAN ACCIDENTALLY FIRE DURING TRANSPORT AND CAUSE HEAT AND IGNITION. THIS CAN CAUSE DEATH OR INJURY TO PERSONS AND DAMAGE TO THE AIRCRAFT.


(d) Remove the oxygen generator [27] from the oxygen box [22].

(e) Remove the heat shield [26] from the oxygen generator [27].


1) Keep the heat shield [26] for the installation.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

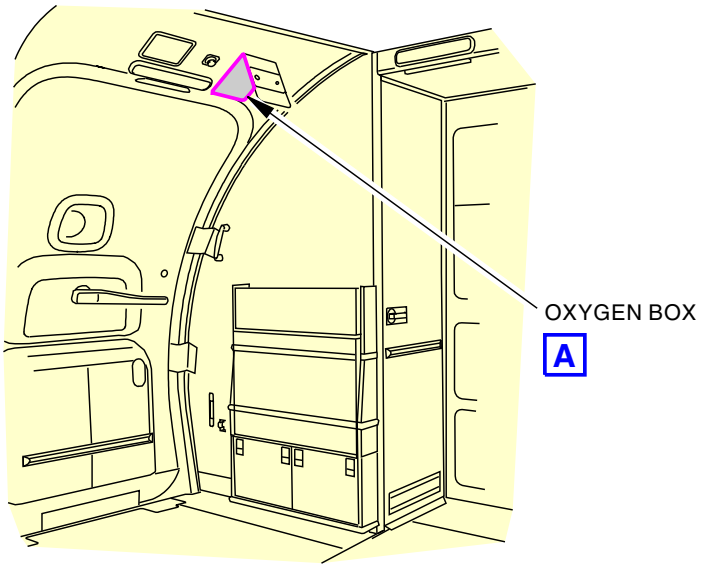

**ATTENDANT SERVICE UNIT (ASU)
(FORWARD ASU IS SHOWN)
(EXAMPLE)**

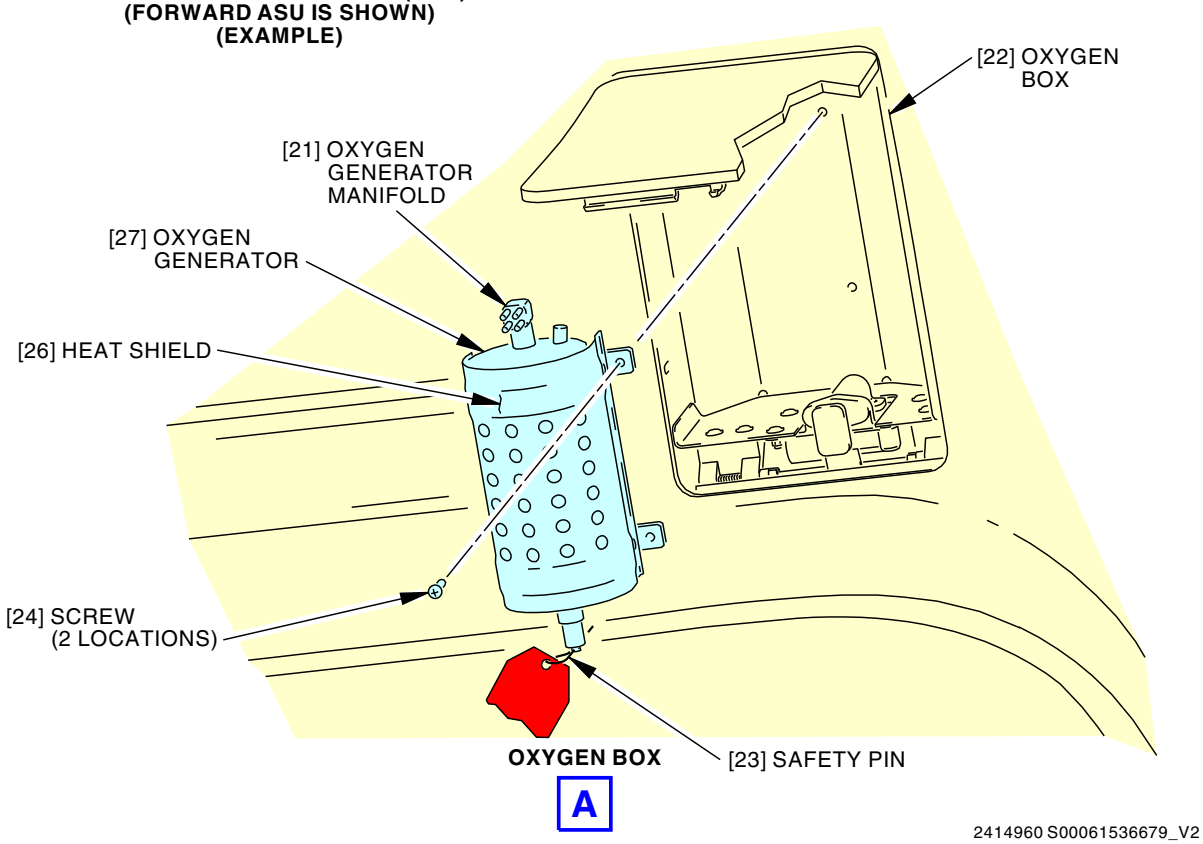

**Oxygen Generator - ASU Installation
Figure 402/35-22-11-990-803**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-11-400-803

5. ASU Oxygen Generator Installation

(Figure 402)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) The capacities of the oxygen generators are not all the same. Make sure that the correct part number and capacity (12 minute or 22 minute) is installed.

B. References

Reference	Title
35-22-11-400-801	Oxygen Generator Activation (P/B 201)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
27	Oxygen generator	35-22-11-22-175	PTF ALL
		35-22-11-25-115	PTF ALL
		35-22-11-95-190	PTF ALL

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Prepare for the Installation

SUBTASK 35-22-11-210-007

(1) Do these checks before you install the oxygen generator [27]:

(a) Make sure that the heat-sensitive band on the oxygen generator [27] is not black.

NOTE: If the heat-sensitive band is black, the oxygen generator has fired.

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(b) Make sure that the safety pin [23] is installed in the firing pin.

NOTE: If the firing pin is in the fired position (the firing pin is against the percussion cap), the oxygen generator has fired or the firing mechanism is bad.

(c) Make sure that the oxygen generator [27] does not have these types of damage:

1) dents
2) pushed-in ends
3) a bent or loose firing mechanism
4) unusual noises when the oxygen generator [27] is shaken gently.

SUBTASK 35-22-11-210-008

(2) If the oxygen generator [27] is not serviceable, discard it.

SUBTASK 35-22-11-210-009

(3) If the oxygen generator [27] is serviceable, do the subsequent procedure.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. ASU Oxygen Generator Installation

SUBTASK 35-22-11-010-007

(1) Go to the applicable forward or aft Attendant Service Unit (ASU), found above the exit doors.

SUBTASK 35-22-11-410-007

(2) Install the heat shield [26].

SUBTASK 35-22-11-820-001

CAUTION

YOU MUST BE VERY CAREFUL WHEN YOU INSTALL AND REMOVE AN OXYGEN GENERATOR. DO NOT DAMAGE THE OXYGEN GENERATOR OR LET IT FALL. IF THE OXYGEN GENERATOR IS DAMAGED, IT IS POSSIBLE THAT THE OXYGEN GENERATOR WILL NOT FIRE.

CAUTION

DO NOT TRY TO REMOVE THE FIRING MECHANISM FROM THE OXYGEN GENERATOR. YOU CANNOT ASSEMBLE IT AGAIN THUS IT IS DAMAGED.

(3) Put the oxygen generator [27] in its position with the safety pin [23] and warning flag in the direction of the release cable.

(a) Locate the generator so that the safety pin [23], release pin, and firing pin do not touch the oxygen box.

SUBTASK 35-22-11-410-008

(4) Install the oxygen box [22] with the screws [24].

SUBTASK 35-22-11-420-002

(5) Connect the oxygen supply line to the oxygen generator manifold [21] on the oxygen generator.

(a) Make sure that the oxygen supply line is tightly connected to the manifold.

SUBTASK 35-22-11-440-002

(6) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN MASK DOOR LATCH ACTUATOR - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) PSU Door Latch Actuator Removal

(2) PSU Door Latch Actuator Installation

(3) ASU Door Latch Actuator Removal

(4) ASU Door Latch Actuator Installation

B. The door latch actuator is a component part of the oxygen box. Oxygen boxes are in the passenger cabin in each of these LRUs:

(1) Passenger Service Unit (PSU)

(2) Attendant Service Unit (ASU)

TASK 35-22-21-000-801

2. PSU Door Latch Actuator Removal

(Figure 401)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
35-22-11-000-802	PSU Oxygen Generator Removal (P/B 401)

B. Tools/Equipment

Reference	Description
STD-4241	Rod, 0.090 in (2.29 mm) to 0.125 in (3.18 mm) Diameter, 6 in (152 mm) length

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Procedure

SUBTASK 35-22-21-910-001

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-21-860-001

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-21-010-001

(3) Go to the applicable PSU in the passenger cabin.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-21-010-002

(4) To get access to the PSU, do these steps to lower the PSU:

(a) Put a 0.090 in to 0.125 in diameter 6 in length rod, STD-4241, or the equivalent tool, in the latch access hole (2 locations).

(b) Push up on the rod to unlatch the cam latches.

(c) Lower the PSU.

SUBTASK 35-22-21-040-001

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(5) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 35-22-21-010-003

(6) Remove the top cover from the oxygen mask box of the PSU. Then remove the oxygen masks from the mask box.

(a) Put the oxygen masks to the sides of the mask box.

SUBTASK 35-22-21-020-001

(7) Remove the oxygen generator to get access to the door latch actuator. Do the PSU Oxygen Generator Removal, TASK 35-22-11-000-802.

SUBTASK 35-22-21-020-002


(8) Do these steps to remove the door latch actuator [2].

(a) Disconnect the electrical connector of the door latch actuator [2].


(b) Remove the two screws [3]. Then remove the actuator.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

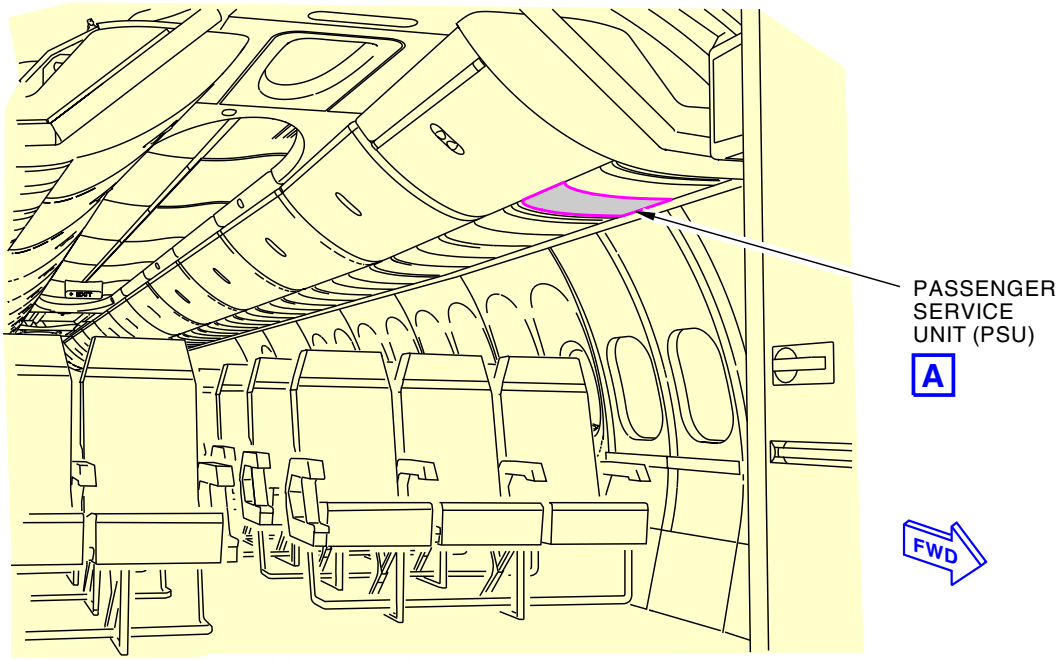

PASSENGER COMPARTMENT (EXAMPLE)

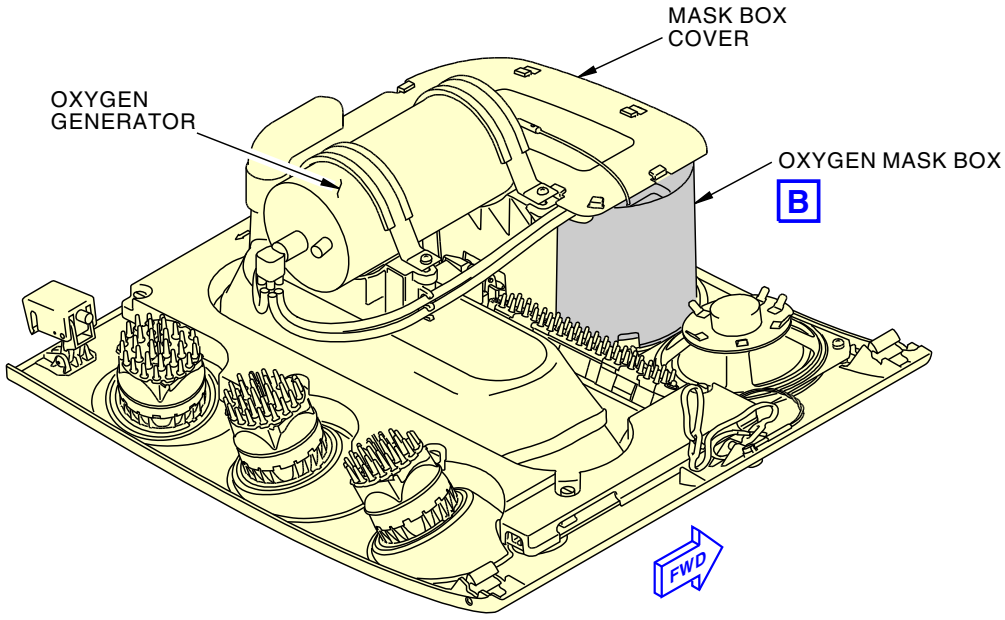


PASSENGER SERVICE UNIT (PSU)

A

2414962 S00061536687_V1

PSU Door Latch Actuator Installation
Figure 401/35-22-21-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

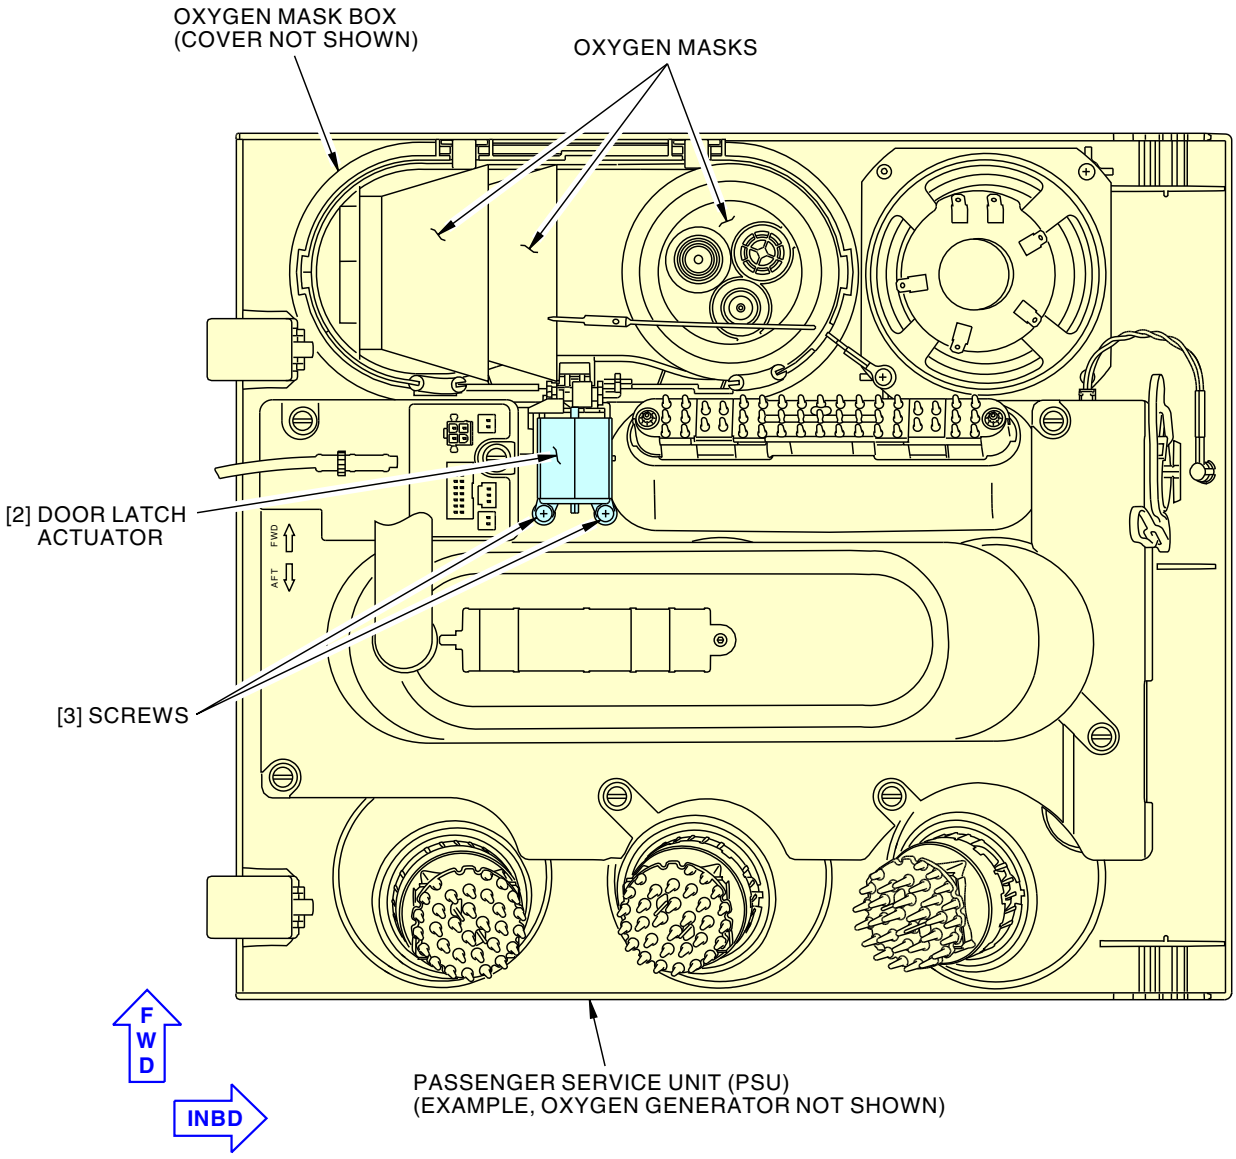

2414963 S00061536688_V1

PSU Door Latch Actuator Installation
Figure 401/35-22-21-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-21-400-801

3. PSU Door Latch Actuator Installation

(Figure 401)

A. References

Reference	Title
25-23-61-400-801	Passenger Service Unit - Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-00-700-802	Passenger Oxygen System Manual Deploy Operational Test (P/B 501)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)
35-22-11-400-802	PSU Oxygen Generator Installation (P/B 401)
35-22-31-440-801	PSU Oxygen Mask Packing (P/B 201)
WDM 35-21-41	Wiring Diagram Manual

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-14099	Test Stop Key Assy Part #: 70698 Supplier: 16115

C. Consumable Materials

Reference	Description	Specification
G02311	Tape - Pressure Sensitive Adhesive, for Masking During Paint Stripping Operations	AMS-T-23397

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Door latch actuator	35-22-21-02-055	PTF ALL
		35-22-21-02-060	PTF ALL

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Procedure

SUBTASK 35-22-21-910-002

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-21-860-002

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(2) Make sure the safety pin is installed in the oxygen generator.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-21-420-001

(3) Do these steps to install the door latch actuator [2] to the PSU.

(a) Put the door latch actuator [2] in its installed position on the PSU.

(b) Install the two screws [3] to the door latch actuator and the PSU.

SUBTASK 35-22-21-420-002

(4) Attach the electrical connector for the door latch actuator [2].

(a) Attach the connector to the wires of the door latch actuator, if necessary (WDM 35-21-41).

SUBTASK 35-22-21-420-003

(5) Do these steps to close and latch the oxygen box door.

(a) Hold the oxygen mask door of the PSU to the almost closed position.

(b) If you used the test stop key assembly, COM-14099, disengage the tool from the door latch actuator.

(c) If you used the masking tape, G02311, remove the tape.

(d) Arm the door latch actuator. Turn the lever arm of the door latch to fully engage the magnet of the latch actuator

(e) Close the oxygen mask door until the door latch/actuator fully engages.

SUBTASK 35-22-21-410-001

(6) Install the oxygen generator (TASK 35-22-11-400-802).

SUBTASK 35-22-21-440-001

(7) Stow the oxygen masks (TASK 35-22-31-440-801).

SUBTASK 35-22-21-860-003

WARNING MAKE SURE TO REMOVE THE SAFETY PIN FROM THE FIRING PIN ON THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL NOT FIRE IN AN EMERGENCY WITH THE SAFETY PIN INSTALLED.

(8) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

SUBTASK 35-22-21-410-002

(9) To close the PSU, push the PSU panel up to engage the cam latches (TASK 25-23-61-400-801).

NOTE: The latches will generally make a "click" sound when they fully engage.

SUBTASK 35-22-21-860-004

(10) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-21-410-003

(11) Do the Manual Deploy Functional Test (TASK 35-22-00-700-802).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-21-000-802

4. ASU Door Latch Actuator Removal

(Figure 402)

A. References

Reference	Title
25-23-13-000-801	Attendant/Lavatory Service Unit Removal (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)

B. Procedure

SUBTASK 35-22-21-910-003

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-21-860-005

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-21-010-004

(3) Go to the applicable attendant service unit (ASU) located above the front and rear passenger exit doors.

SUBTASK 35-22-21-010-005

(4) Do this task: Attendant/Lavatory Service Unit Removal, TASK 25-23-13-000-801.

SUBTASK 35-22-21-040-002

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(5) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 35-22-21-020-003

(6) Do these steps to remove the door latch actuator [22] from the removed oxygen box.

(a) Remove the two screws [23] and washers [24] that attach the door latch actuator [22] to the test stop assembly.


1) Keep the screws [23] and washers [24] for the installation.

(b) Disconnect the door latch actuator electrical harness.


(c) Remove the door latch actuator [22].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

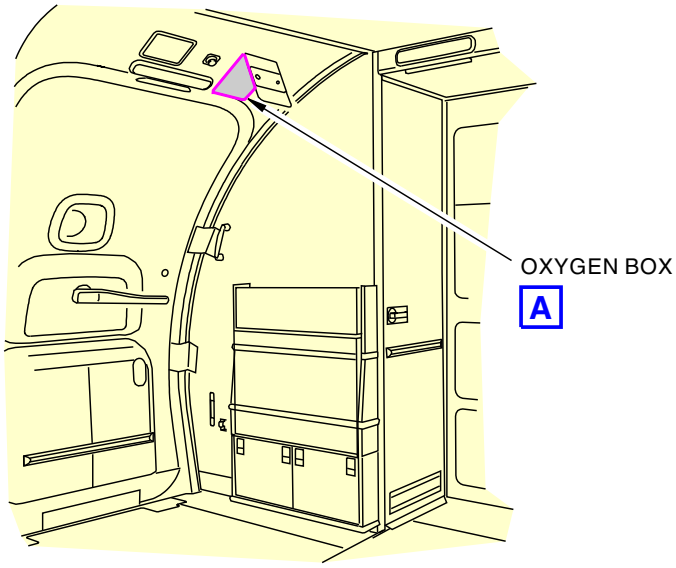

**ATTENDANT SERVICE UNIT (ASU)
(EXAMPLE)**

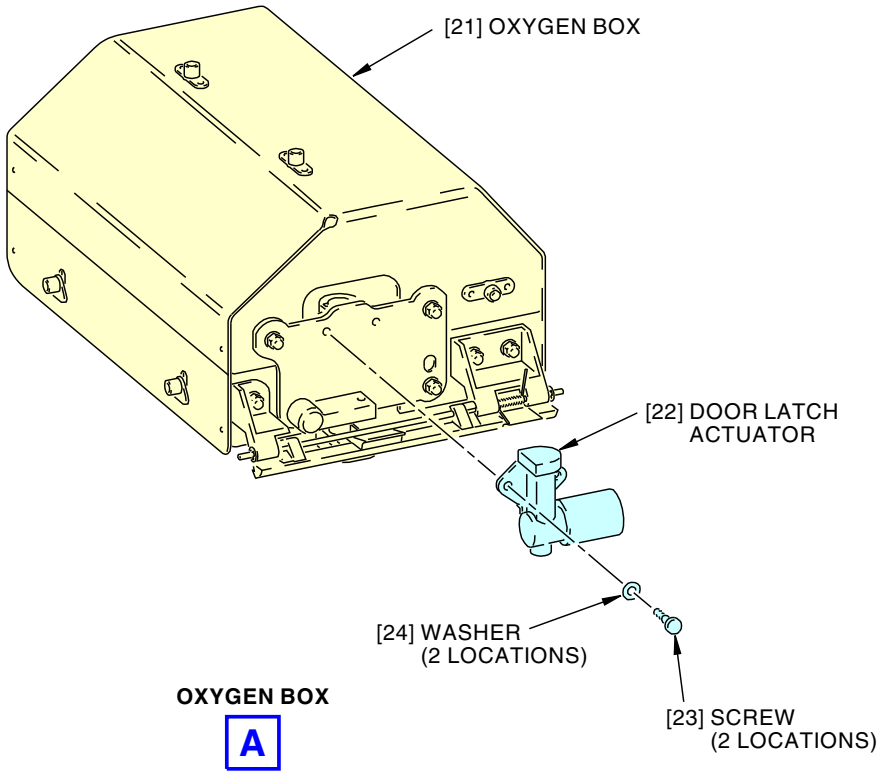

**ASU Door Latch Actuator Installation
Figure 402/35-22-21-990-802**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-21-400-802

5. ASU Door Latch Actuator Installation

(Figure 402)

A. References

Reference	Title
25-23-13-400-801	Attendant/Lavatory Service Unit Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-00-700-802	Passenger Oxygen System Manual Deploy Operational Test (P/B 501)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
22	Door latch actuator	35-22-21-22-090	PTF ALL
		35-22-21-25-120	PTF ALL
		35-22-21-95-095	PTF ALL

C. Procedure

SUBTASK 35-22-21-910-004

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-21-860-006

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(2) Make sure the safety pin is installed in the oxygen generator.

SUBTASK 35-22-21-420-004

(3) Do these steps to install the door latch actuator [22]:

(a) Put the door latch actuator [22] in position on the test stop assembly.

(b) Install the washers [24] and the screws [23] (2 locations).

(c) Connect the door latch actuator electrical harness.

SUBTASK 35-22-21-410-004

(4) Do this task: Attendant/Lavatory Service Unit Installation, TASK 25-23-13-400-801.

SUBTASK 35-22-21-860-007

WARNING

MAKE SURE TO REMOVE THE SAFETY PIN FROM THE FIRING PIN ON THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL NOT FIRE IN AN EMERGENCY WITH THE SAFETY PIN INSTALLED.

(5) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-21-860-008

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-21-410-005

(7) Do this task: Passenger Oxygen System Manual Deploy Operational Test, TASK 35-22-00-700-802.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER OXYGEN MASK - MAINTENANCE PRACTICES

1. General

A. This procedure contains these tasks:

(1) A packing of the Passenger Service Unit (PSU) oxygen mask

(2) A packing of the Attendant Service Unit (ASU) oxygen mask

(3) A packing of the Lavatory Service Unit (LSU) oxygen mask

(4) A detailed inspection of the oxygen mask.

B. The procedure for packing of the passenger oxygen mask can be used for all of the masks. This includes the oxygen masks in the Passenger Service Units (PSUs), Attendant Service Units (ASUs), and Lavatory Service Units (PSUs).

C. The oxygen mask packing is usually done on a bench or a clean flat surface. Oxygen mask packing can also be done on the airplane. This procedure contains information on packing oxygen masks on the airplane.

D. Persons that do the mask packing must do it in a clean environment.

E. Before the maintenance is done on an oxygen system component that contains an oxygen generator you must install a safety pin in the generator firing mechanism. The safety pin will let the generator be handled and stored. If the safety pin is not installed, the oxygen generator can fire.

F. Before the maintenance is done on an oxygen system component that contains an oxygen cylinder (CDS) you must install a safety pin in the actuator assembly. The safety pin will let the oxygen cylinder be handled and stored. If the safety pin is not installed, the oxygen cylinder can release oxygen.

TASK 35-22-31-440-801

2. PSU Oxygen Mask Packing

A. References

Reference	Title
25-23-61-000-801	Passenger Service Unit - Removal (P/B 401)
25-23-61-400-801	Passenger Service Unit - Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)
35-22-31-000-801	PSU Oxygen Mask Removal (P/B 401)
35-22-31-400-801	PSU Oxygen Mask Installation (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare to Pack the PSU Oxygen Masks

SUBTASK 35-22-31-910-001

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance. Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-010-001

(2) Open the applicable PSU(s) to get access to the oxygen generator and the oxygen mask box. (Passenger Service Unit - Removal, TASK 25-23-61-000-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-31-040-001

(3) Do the TASK 35-22-11-000-801.

SUBTASK 35-22-31-010-002

(4) Do these steps to position the oxygen masks out of the oxygen mask box:

NOTE: Do not disconnect the oxygen masks.

(a) Remove the mask box cover from the oxygen mask box.

1) Keep the mask box cover for the installation.

(b) Pull each oxygen mask, with its oxygen supply line and lanyard, up through the top of the oxygen mask box.

(c) Isolate each of the oxygen masks then put the oxygen masks to the side of the PSU oxygen box.

1) Put the outboard tandem oxygen hoses above the top of the oxygen box.

SUBTASK 35-22-31-420-001

(5) Do these steps to close and latch the oxygen box door, if it is necessary.

(a) Hold the oxygen mask door of the PSU to the almost closed position.

(b) Arm the door latch actuator. Turn the lever of the door latch and fully engage the magnet of the latch actuator

(c) Close the oxygen mask door until the door latch/actuator fully engages.

SUBTASK 35-22-31-210-001

(6) Do a check of the applicable oxygen mask(s):

(a) Make sure that the oxygen masks are not damaged.

(b) Make sure that the oxygen masks are clean and free from:

1) dirt

2) grease

3) oil

4) unwanted material.

SUBTASK 35-22-31-210-002

(7) Do a check of the oxygen supply hose of each mask assembly:

(a) Make sure that the oxygen supply hose is not damaged.

(b) Make sure that the oxygen supply hose is soft and flexible.

(c) Make sure that the color of the oxygen supply hose is clear.

(d) Make sure that the oxygen supply hose is fully connected to the reservoir bag of the mask assembly

SUBTASK 35-22-31-900-001

(8) If an oxygen mask or oxygen supply hose is not serviceable, do these tasks:

PSU Oxygen Mask Removal, TASK 35-22-31-000-801

PSU Oxygen Mask Installation, TASK 35-22-31-400-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. PSU Oxygen Mask Packing

(Figure 201)

SUBTASK 35-22-31-420-002

(1) Do these steps to fold an oxygen mask tandem:

NOTE: A mask tandem is two masks prepared as a one unit for stowage in the oxygen box.

(a) STEP 1 - Prepare to fold the oxygen mask:

1) Isolate all of the lanyards and oxygen supply hoses.
2) Put the reservoir bag of each oxygen mask flat.
3) Put the head strap on the reservoir bag.
4) Put the mask lanyard to the opposite side of the reservoir bag.

(b) STEP 2:

1) Fold the outer 1/3 length of the reservoir bag to the center of the reservoir bag.
2) Then fold the opposite 1/3 length of the reservoir bag to the center .

(c) STEP 3 - Assemble the mask tandems:

1) Divide the two mask tandems and identify the inboard set.
2) Align the reservoir bags of one mask above the reservoir bag of the second mask.
3) Put the face cup of one mask into the face cup of the second mask.
   a) Lightly pull the lanyard ring of the inner mask from between the two mask face cups of the tandem. Fully extend the lanyard of the inner mask from between the face cups of the two masks.

(d) STEP 4:

1) Fully extend the two folded reservoir bags of the tandem to one side of the two masks.
2) Fold the two reservoir bags at the center.
3) Put the ends of the two reservoir bags opposite the face cups in the inner part of the top face cup.
4) Fold the two reservoir bags at the center again. Then put the ends of the two folded reservoir bags in the inner part of the top face cup.
5) Make sure that the sequence of the lanyard rings on the generator release cable is the same as the sequence of the masks.

(e) STEP 5

1) Wind the two oxygen supply hoses in a coil in the inner side of the top face cup. Let the last 10 ±1 in. (25.4 ±1.3 cm) of the supply hoses stay out of the face cup.

   NOTE: The coiling direction depends on the position of the mask tandem in the oxygen box.

2) Put the tandem on the door in the bottom of the Oxygen Box near the speaker.

(f) Do the steps again for the remaining two mask assemblies.

E. Stow the Mask Tandems in the Oxygen Mask Box

(Figure 202)

SUBTASK 35-22-31-210-003

(1) Make sure that the lanyard ring of each mask lanyard is fully installed to the generator release cable.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-31-420-003

(2) Isolate the mask tandem with their lanyard rings installed to the highest part of the generator release cable. This is mask tandem number one. (Figure 202 (Sheet 2)).

(a) Align the mask tandem number one with the face cups vertical and the valves end of the face cups pointed to the door.

(b) Turn the mask tandem to put the reservoir bags of the masks to the center of the mask box.

(c) Put the mask tandem one in the mask box with the valves of the face cups against the mask box door.

(d) Put the mask tandem one against the side of the mask box with the release cable window.

SUBTASK 35-22-31-420-004

(3) Align the face cups of the mask tandem number two horizontal to the mask box. Figure 202 (Sheet 3)

(a) Then turn this mask tandem to put the folded reservoir bags to the top of the tandem.

(b) Put this mask tandem in the mask box with the open side of the face cups pointed to the box center.

SUBTASK 35-22-31-210-004

(4) Make sure that the two grommets are fully installed to the mask box. Then make sure that the oxygen supply hoses are fully installed in the grommets.

SUBTASK 35-22-31-410-001

(5) Install the mask box cover to the top of the oxygen mask box.

(a) Attach the hooks that are near the generator first.

(b) Make sure that the lanyard is attached to the rail.

SUBTASK 35-22-31-210-005

(6) Make sure that the four oxygen supply hoses are fully connected to the oxygen manifold of the oxygen generator. Then make sure that the oxygen supply hoses are fully installed to the supply hose clips of the PSU assembly.

F. Put the Airplane Back To the Usual Condition

SUBTASK 35-22-31-440-001


(1) Do the Oxygen Generator Activation, TASK 35-22-11-400-801.

SUBTASK 35-22-31-410-002


(2) Close the Passenger Service Unit (Passenger Service Unit - Installation, TASK 25-23-61-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

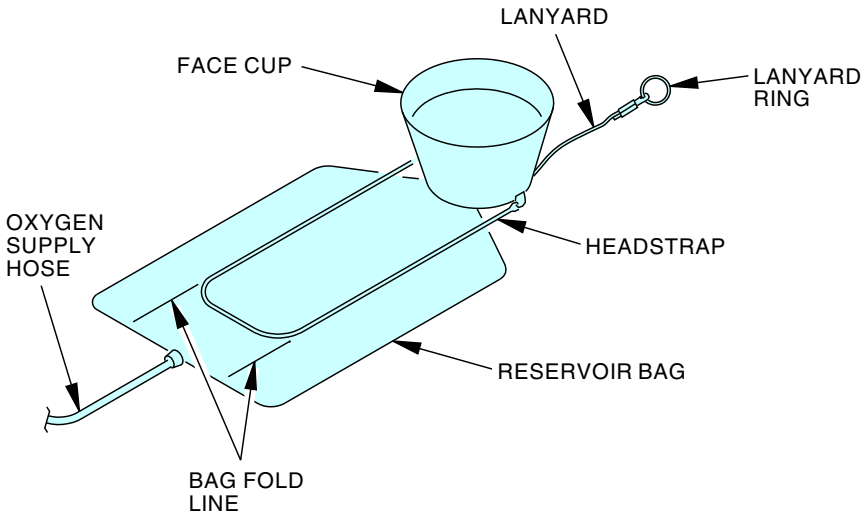

STEP 1

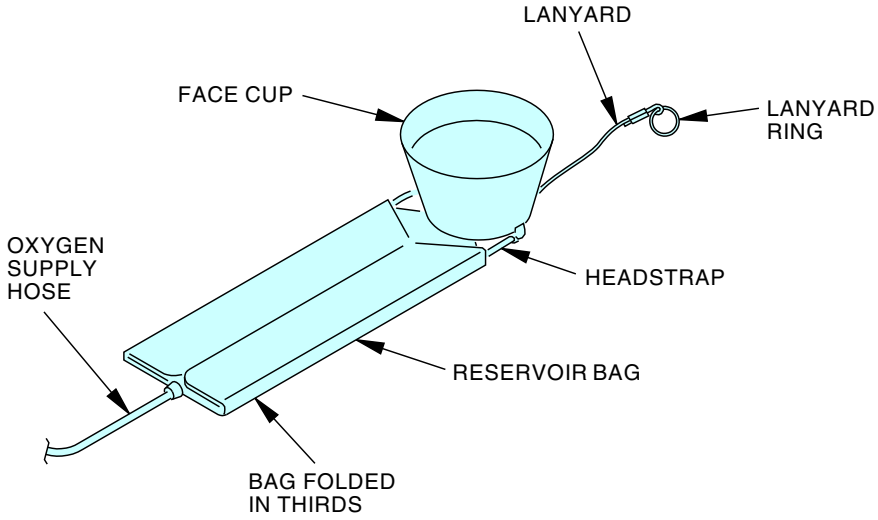


STEP 2

PREPARATION OF MASK ASSEMBLY

2414966 S00061536699_V1

Oxygen Mask Packing Procedure
Figure 201/35-22-31-990-801 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

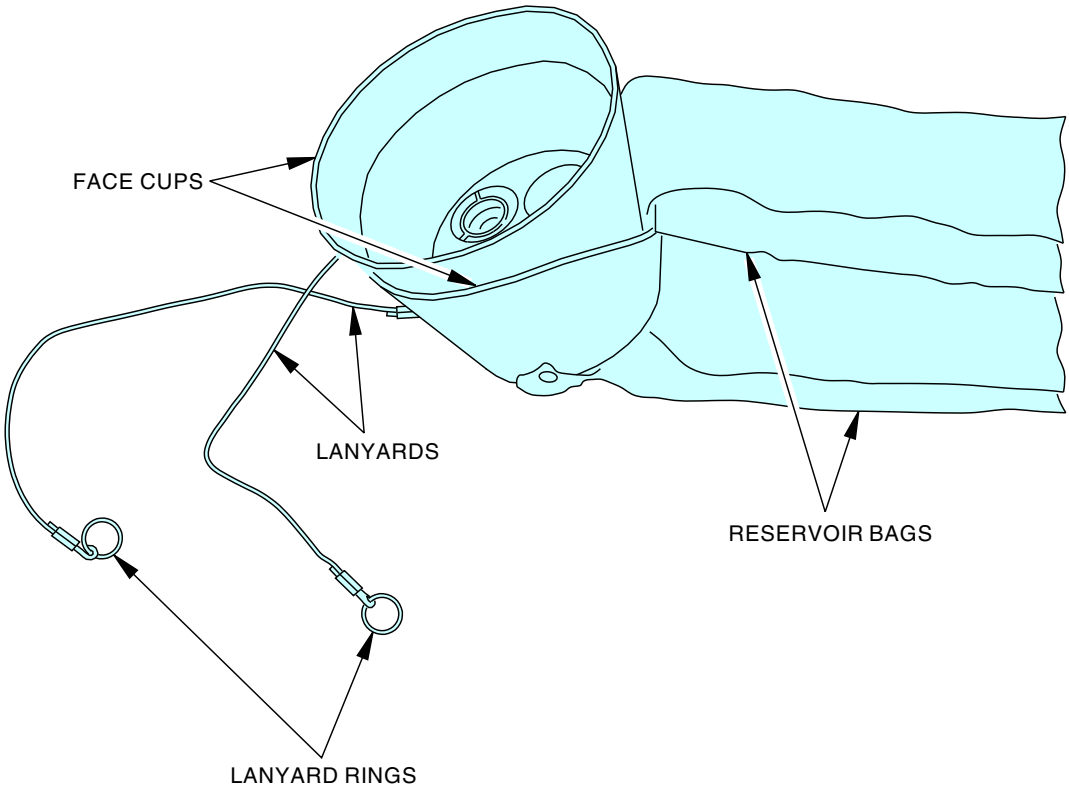


STEP 3
MASK TANDEM 1

1 A TANDEM IS TWO MASKS PREPARED AS A ONE UNIT FOR STOWAGE IN THE OXYGEN BOX


2414967 S00061536700_V1

Oxygen Mask Packing Procedure
Figure 201/35-22-31-990-801 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

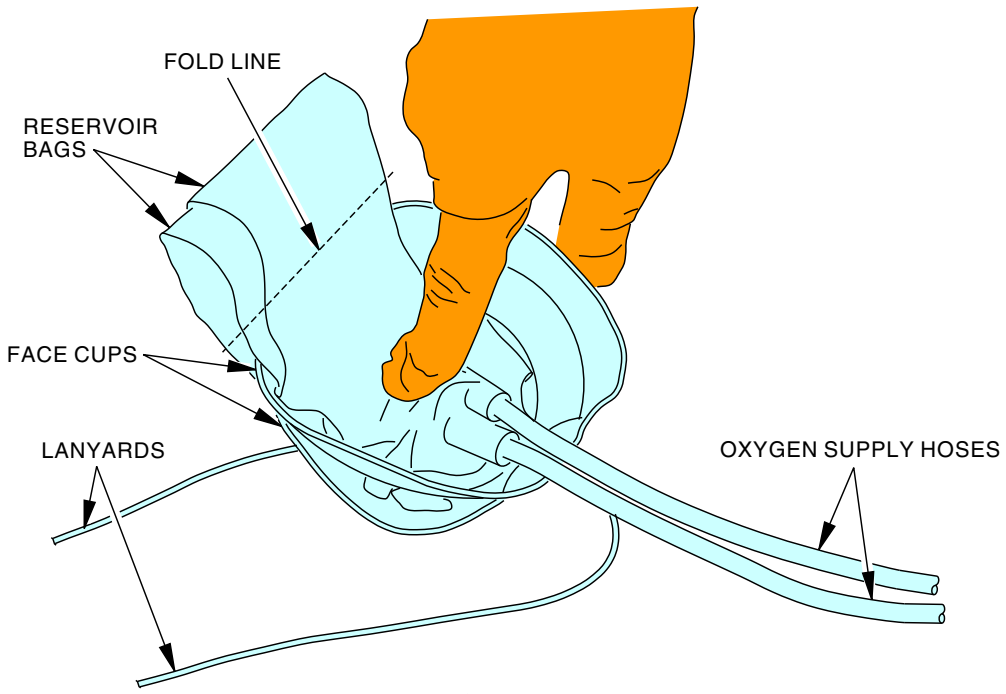

STEP 4

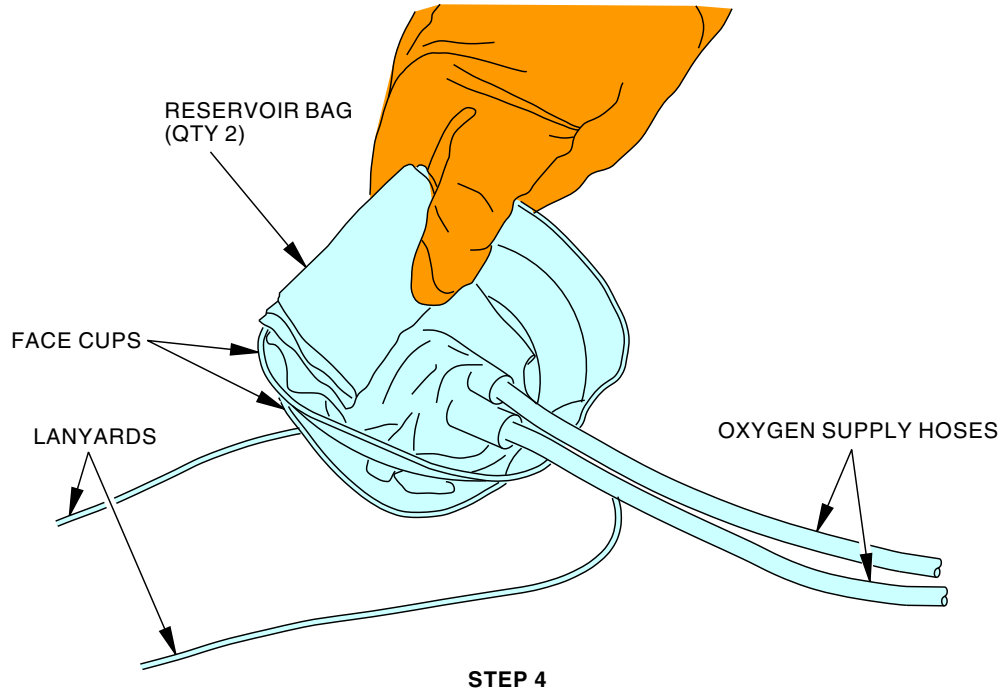


STEP 4

2414968 S00061536701_V1

Oxygen Mask Packing Procedure
Figure 201/35-22-31-990-801 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

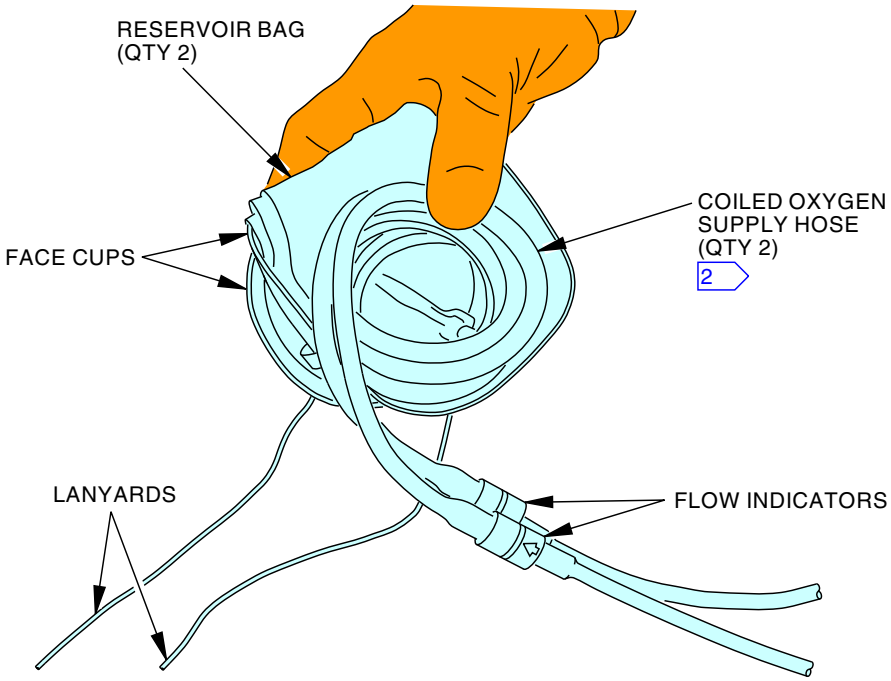


STEP 5

2 COIL DIRECTION IS DEPENDANT ON THE POSITION OF THE MASK TANDEM IN THE OXYGEN BOX.


2414969 S00061536702_V1

Oxygen Mask Packing Procedure
Figure 201/35-22-31-990-801 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

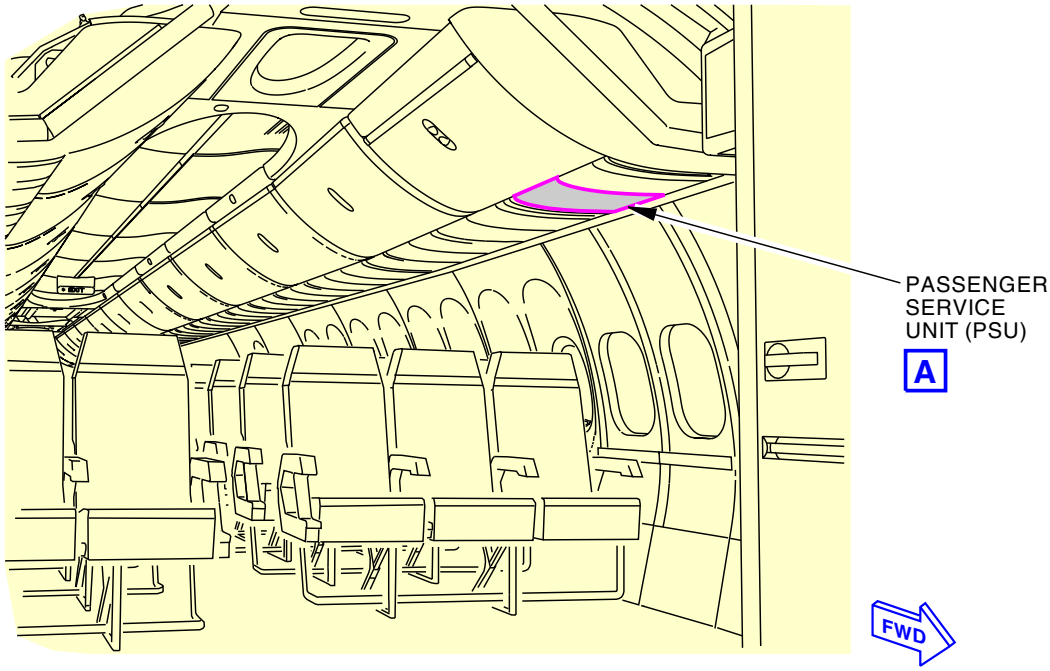

**PASSENGER COMPARTMENT
(EXAMPLE)**

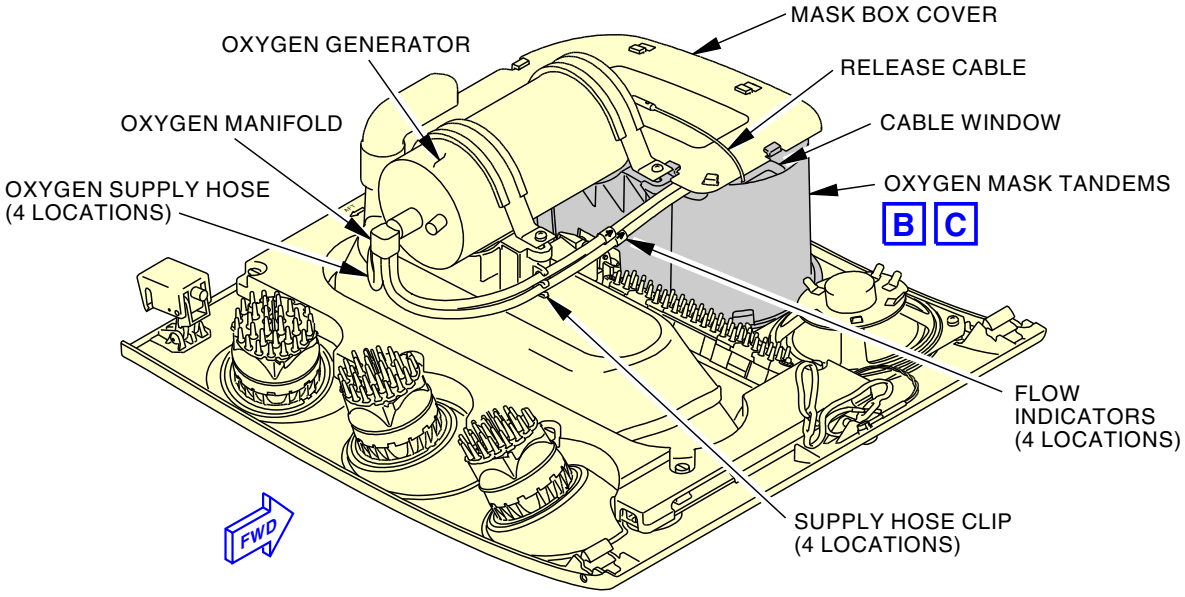


PASSENGER SERVICE UNIT (PSU)

A

2414970 S00061536703_V1

**Passenger Service Unit (PSU) Oxygen Mask Packing
Figure 202/35-22-31-990-802 (Sheet 1 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

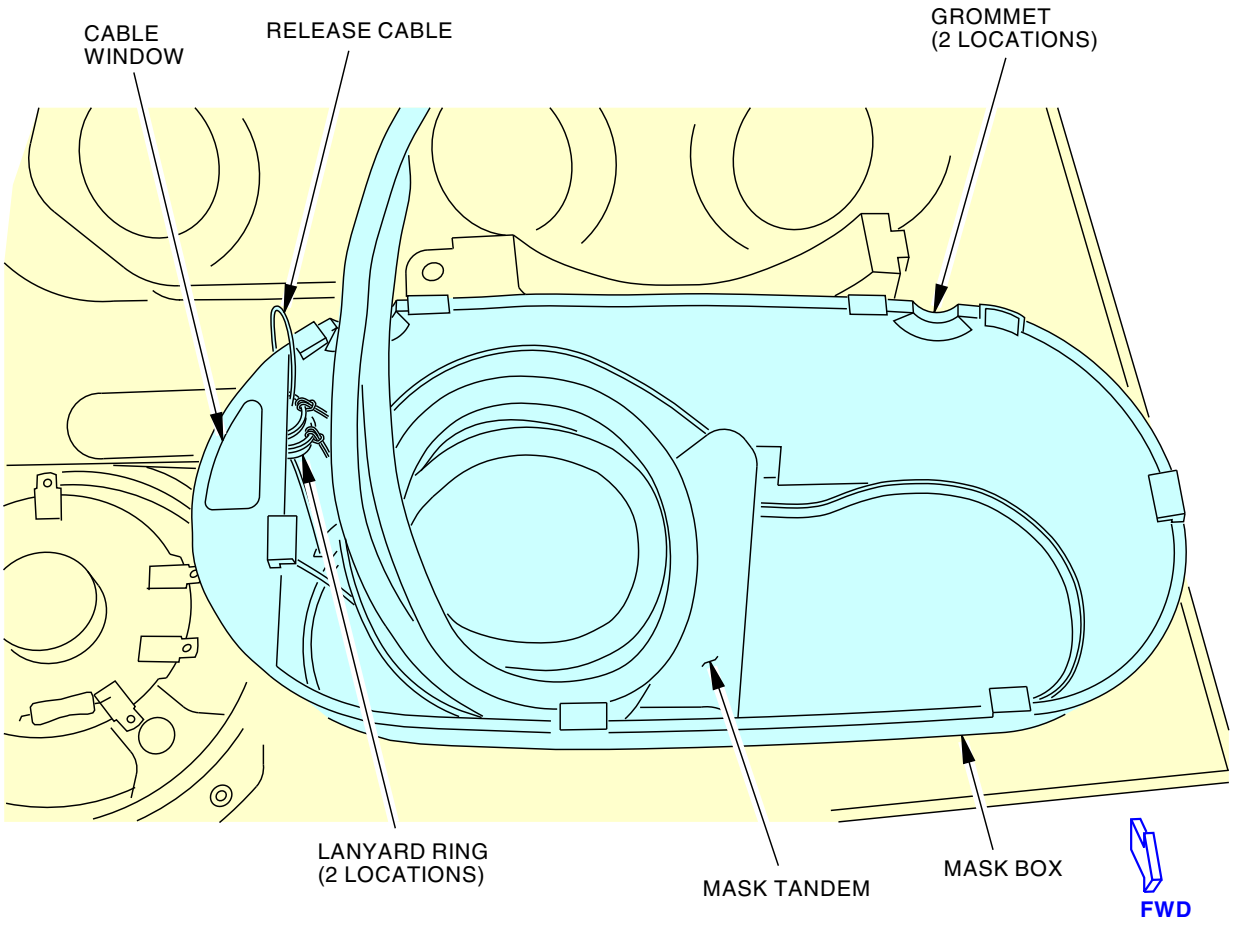


OXYGEN MASK TANDEMS (TANDEM ONE)
(MASK BOX COVER AND OXYGEN GENERATOR NOT SHOWN)

B

2414971 S00061536704_V1

Passenger Service Unit (PSU) Oxygen Mask Packing
Figure 202/35-22-31-990-802 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

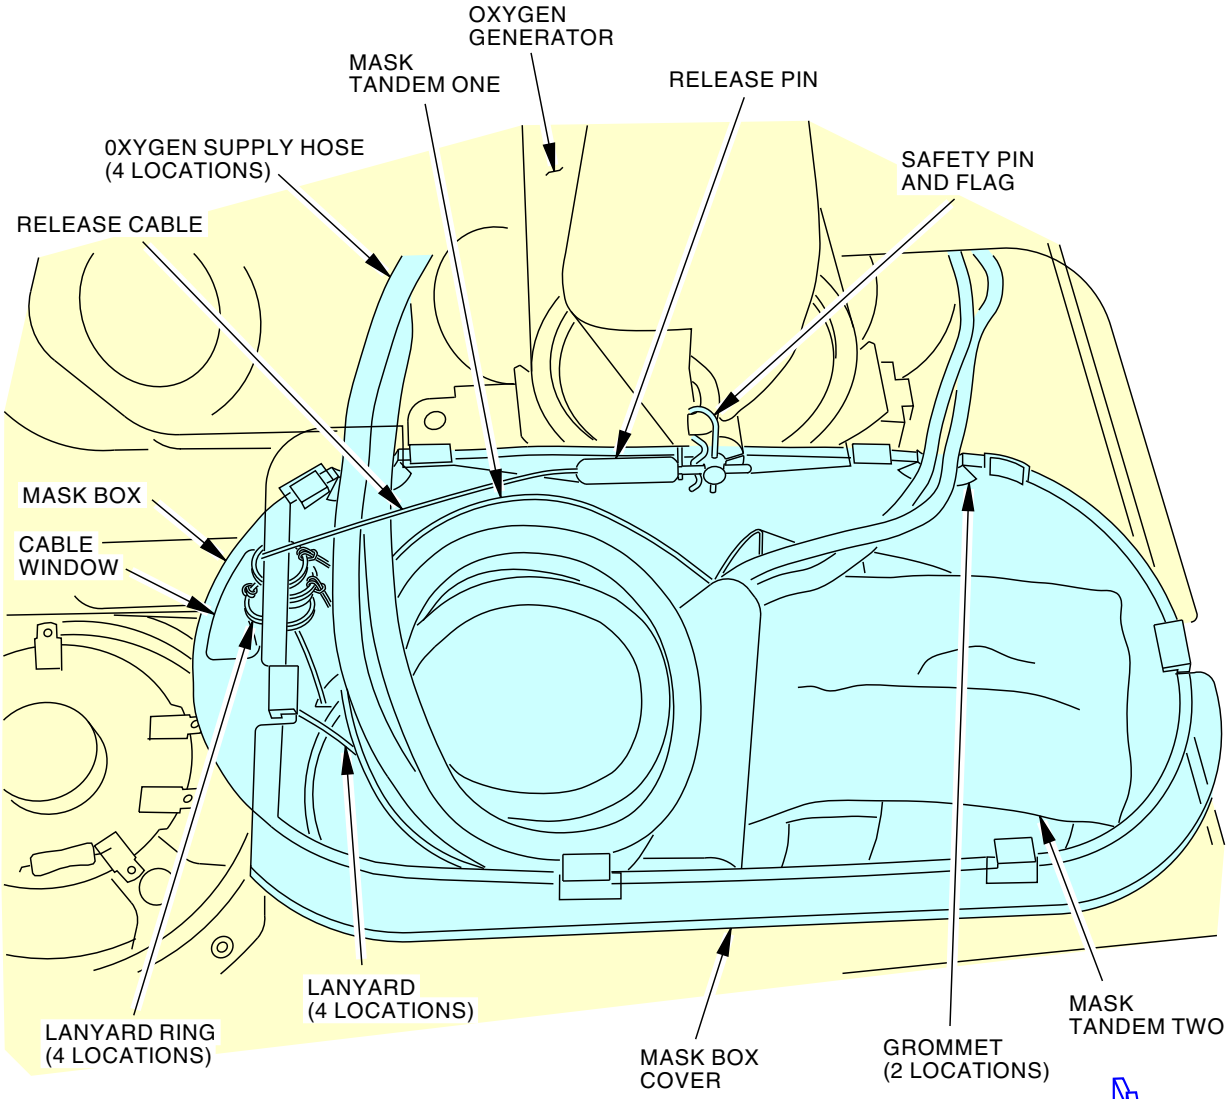

OXYGEN MASK TANDEMS (TANDEM ONE AND TWO)

C

2414972 S00061536705_V1

Passenger Service Unit (PSU) Oxygen Mask Packing
Figure 202/35-22-31-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-31-420-801

3. ASU Oxygen Mask Packing

(Figure 203, Figure 204)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)
35-22-31-000-802	ASU Oxygen Mask Removal (P/B 401)
35-22-31-400-802	ASU Oxygen Mask Installation (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare to Pack the ASU Oxygen Masks

SUBTASK 35-22-31-910-002

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-010-003

(2) Do these steps to open an ASU oxygen box (if it is necessary) (Figure 203).

(a) Go to the applicable forward or aft ASU, above the exit doors.

(b) Put a tool into the latch access hole.

(c) Push up on the tool to operate the door latch.

(d) Open the oxygen box door.

(e) Let the oxygen masks fall.

(f) Do not pull on the oxygen masks.

NOTE: If you pull on the oxygen masks, the oxygen generator will fire.

SUBTASK 35-22-31-040-002

WARNING

DO THE DEACTIVATION PROCEDURE FOR THE OXYGEN GENERATOR. ACCIDENTAL OPERATION OF THE OXYGEN GENERATOR CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

(3) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 35-22-31-210-006

(4) Do a check of the applicable oxygen masks:

(a) Make sure the oxygen masks are not torn or damaged.

(b) Make sure the oxygen masks are clean and free from contamination such as:

1) dirt

2) grease

3) oil

4) unwanted material.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-31-210-007

(5) Do a check of the applicable oxygen supply hoses:

(a) Make sure the oxygen supply hoses are not torn or damaged.

(b) Make sure the oxygen supply hoses are soft and flexible.

(c) Make sure the color of the oxygen supply hoses have not deteriorated.

(d) Make sure each mask is held securely to the oxygen supply hose.

SUBTASK 35-22-31-900-002

(6) If an oxygen mask or oxygen supply hose is not serviceable, do these tasks:

ASU Oxygen Mask Removal, TASK 35-22-31-000-802

ASU Oxygen Mask Installation, TASK 35-22-31-400-802

D. ASU Oxygen Mask Packing

SUBTASK 35-22-31-800-001

(1) Go to the applicable ASU in the passenger cabin.

SUBTASK 35-22-31-410-003

(2) Do these steps to fold an oxygen mask (Figure 204):

NOTE: Fold one mask at a time and then put the folded mask in the oxygen mask box. Continue with the remaining oxygen masks.

(a) STEP 1 - Prepare to fold the oxygen mask:

1) Isolate all of the lanyards and oxygen supply hoses.

2) Unfold and flatten the reservoir bag.

3) Put the headstrap on the reservoir bag.

(b) STEP 2 - Fold the oxygen mask:

1) Fold the bag in thirds, lengthwise, over the headstrap.

(c) STEP 3 AND STEP 4: Position the reservoir bag in the face piece:

1) Wrap the folded reservoir bag up the side of the facepiece (step 3).

2) Put the bag-to-hose connection in the center and bottom of the facepiece (Step 4).

3) Push the bag-to-hose connection to the left side of the facepiece (step 4).

(d) STEP 5: Coil the oxygen supply hose:

1) Start to coil the supply hose counterclockwise in the facepiece cup.

2) Make sure the supply hose is coiled on top of the reservoir bag.

3) Press the supply hose firmly down and against the inside wall of the facepiece.

4) Keep the supply hose coil below the top surface of the facepiece.

5) Continue to coil the supply hose to the flow indicator.

6) Leave the lanyard out of the facepiece.

7) If the mask has a lanyard attached to the supply hose, put the lanyard over the facepiece.

8) If the mask has a lanyard attached to the facepiece, leave the lanyard out of the mask.

9) If the mask has a streamer attached, do not fold the streamer and streamer cord until after you position the mask in the ASU or LSU.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-31-410-004

(3) Do these steps to install the ASU oxygen masks in the oxygen box (Figure 203).

(a) One or two people can do the packing procedure.

(b) To make the packing procedure easier, you can apply two pieces of masking tape between the ceiling panel and the oxygen box door to hold the door partially open.

NOTE: Make sure there is enough space to let you put the oxygen masks on the top of the oxygen box door.

(c) Turn the folded oxygen mask until the open end of the face piece is up.

(d) Do these steps to install the masks in the oxygen box :

1) Put the coiled oxygen mask in the oxygen box against the oxygen generator (open end of the facepiece against the oxygen generator).

2) Slide the oxygen mask toward the open side of the oxygen box (approximately 30 degrees).

WARNING

DO NOT YOU PUSH THE OXYGEN MASKS TOO FAR INTO THE OXYGEN BOX. THE OXYGEN MASKS CAN CATCH BETWEEN THE OXYGEN GENERATOR AND THE OXYGEN BOX STRUCTURE. IF THEY CATCH AGAINST THE OXYGEN GENERATOR, THEY WILL NOT COME DOWN DURING AN EMERGENCY. THIS WILL CAUSE INJURIES TO PASSENGERS.

3) Make sure that the oxygen mask is free to drop straight down and out of the oxygen box.

4) Hold the oxygen mask in this position and do the previous steps again for the other oxygen mask.

5) Make sure the oxygen masks and cable routing will not keep the oxygen box door in the open position.

a) If it is necessary move the oxygen masks.

SUBTASK 35-22-31-410-005

(4) Do these steps to pack the streamer and streamer cord:

(a) Hold the oxygen masks in position.

(b) Fold the streamer lengthwise in segments approximately two inches long.

(c) Loosely coil the streamer cord lengthwise around the streamer.

(d) Continue to coil the streamer cord all the way to the oxygen mask.

(e) Put the coiled streamer on the bottom of the closed end of the facepiece.

(f) Hold the streamer and oxygen mask in position while you coil the other streamer.

(g) Make sure the coiled streamer is positioned to fall first when the oxygen box door is opened during an emergency.

NOTE: The weight of the streamer will help the oxygen mask and supply line fall out of the box during an emergency.

SUBTASK 35-22-31-440-002

(5) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

SUBTASK 35-22-31-410-006

(6) Do these steps to check the installation of the oxygen masks:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure all of the mask lanyard rings are attached to the release cable.

(b) Do a check of the release cable routing to make sure the release pin will pull away from the oxygen generator firing mechanism when the oxygen masks are deployed.

(c) Make sure the supply hoses are not bent too much or crimped.

(d) Make sure the mask lanyards are not wrapped around a hose, elastic band, end clip, streamer, or other object.

(e) Make sure that no part of the oxygen mask or the reservoir bag goes over the oxygen supply manifold or the release cable.

(f) Make sure the steamer and oxygen mask are free to fall when the door is opened during an emergency.

(g) Do this check (optional):

1) Close the oxygen box door to within one half inch of being closed and then slightly open the door.

2) Make sure the oxygen masks partially fall down with the door to make sure the oxygen masks are free to fall.

SUBTASK 35-22-31-410-007

(7) Do these steps to close the oxygen box door:

(a) Hold the oxygen box door.

(b) Remove the masking tape from the oxygen box door (if installed).


(c) Push the reset lever on the latch actuator plunger to set the actuator again.

(d) Close and latch the oxygen box door.


(e) Do a visual check of the door alignment to make sure the oxygen equipment is not caught in the oxygen box door or in the actuator.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

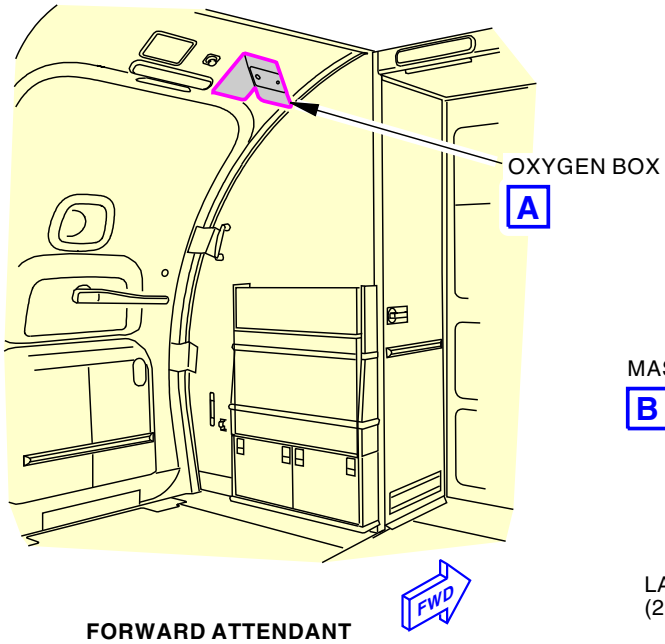

FORWARD ATTENDANT SERVICE UNIT

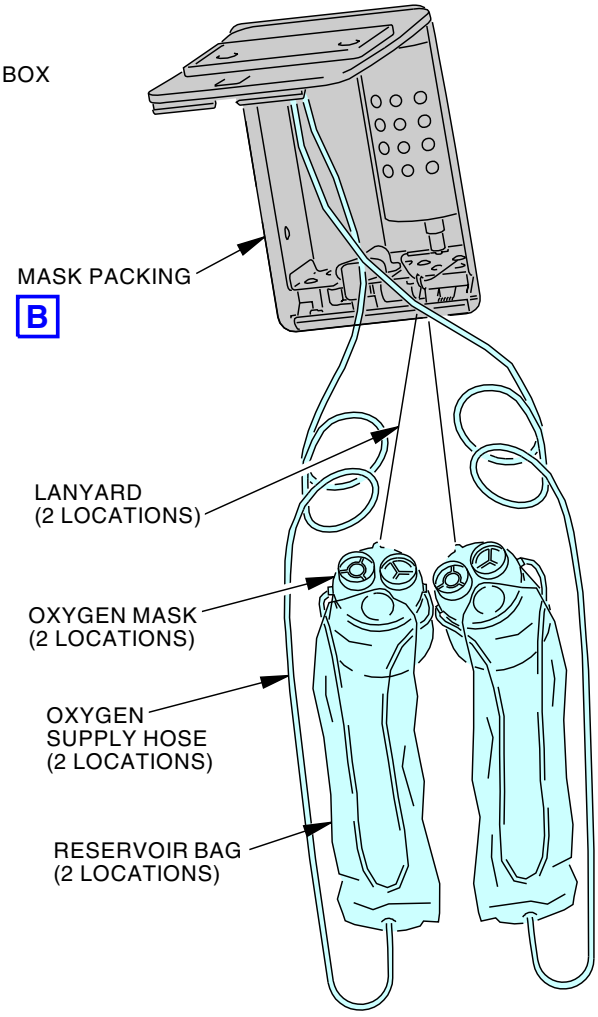

OXYGEN BOX
A

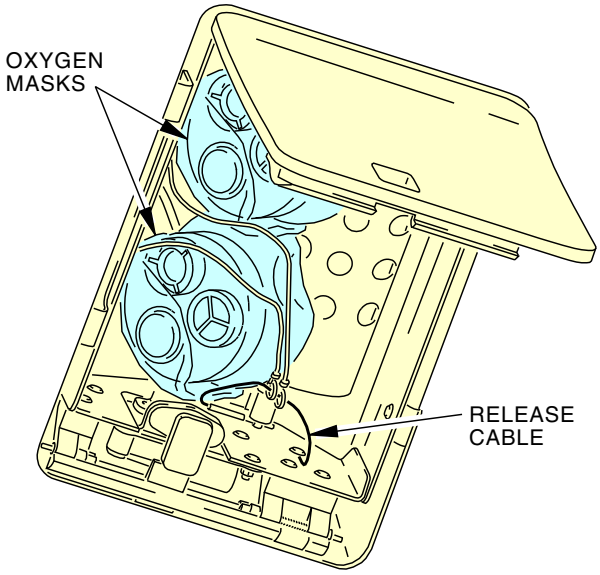


MASK PACKING
B

2414973 S00061536707_V1


ASU Oxygen Mask Packing Procedure
Figure 203/35-22-31-990-803 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

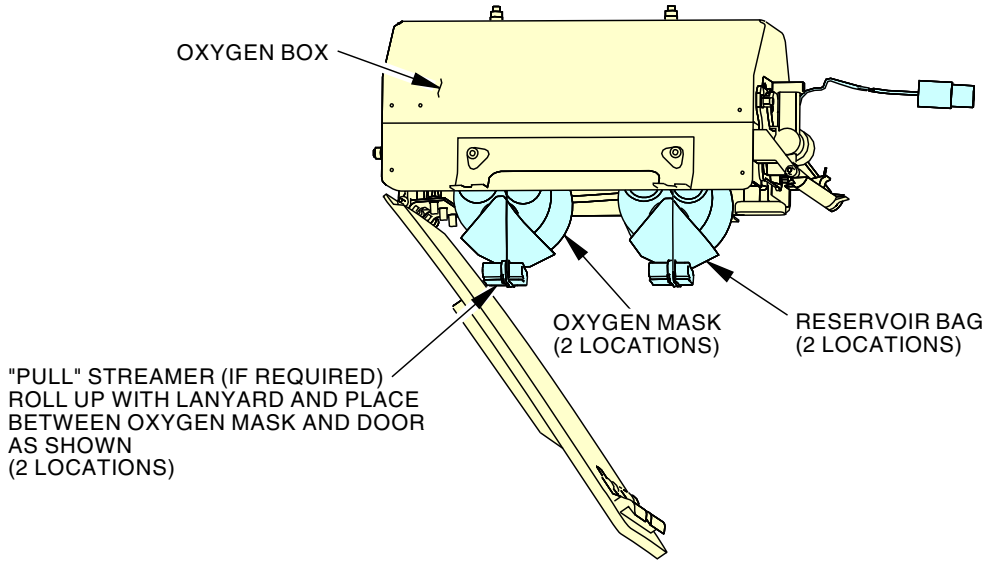

OXYGEN MASK
(OXYGEN BOX INSTALLED)

C

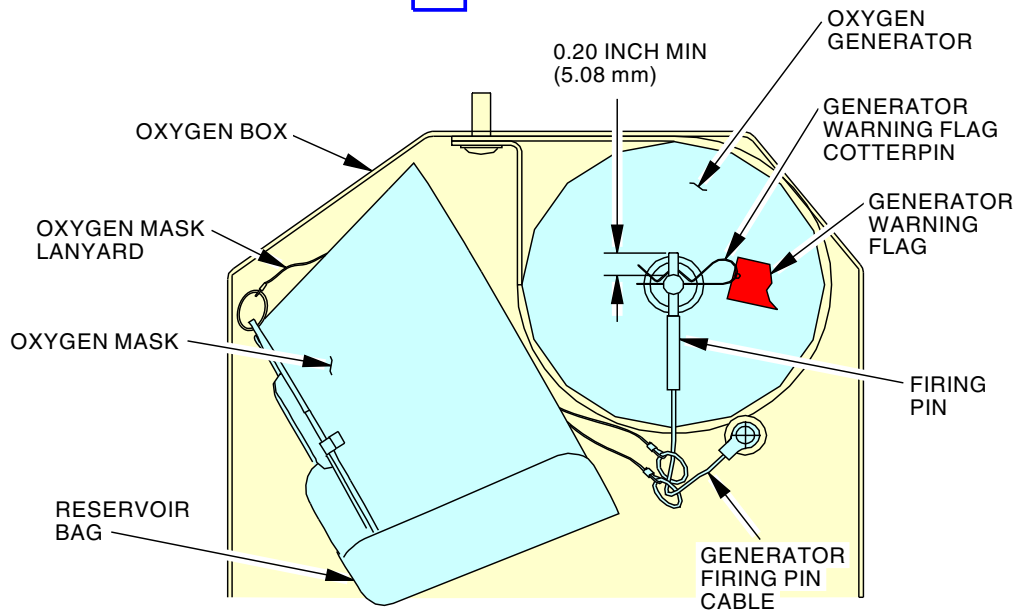

NOTE:

IF THE OXYGEN MASKS ARE PUSHED TOO FAR INTO THE OXYGEN BOX, THE OXYGEN MASKS CAN GET CAUGHT BETWEEN THE OXYGEN GENERATOR AND THE OXYGEN BOX STRUCTURE. IF THE OXYGEN MASKS ARE CAUGHT AGAINST THE OXYGEN GENERATOR, THE MASKS WILL NOT DROP IN AN EMERGENCY.


OXYGEN MASK

C

2414974 S00061536708_V1

ASU Oxygen Mask Packing Procedure
Figure 203/35-22-31-990-803 (Sheet 2 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

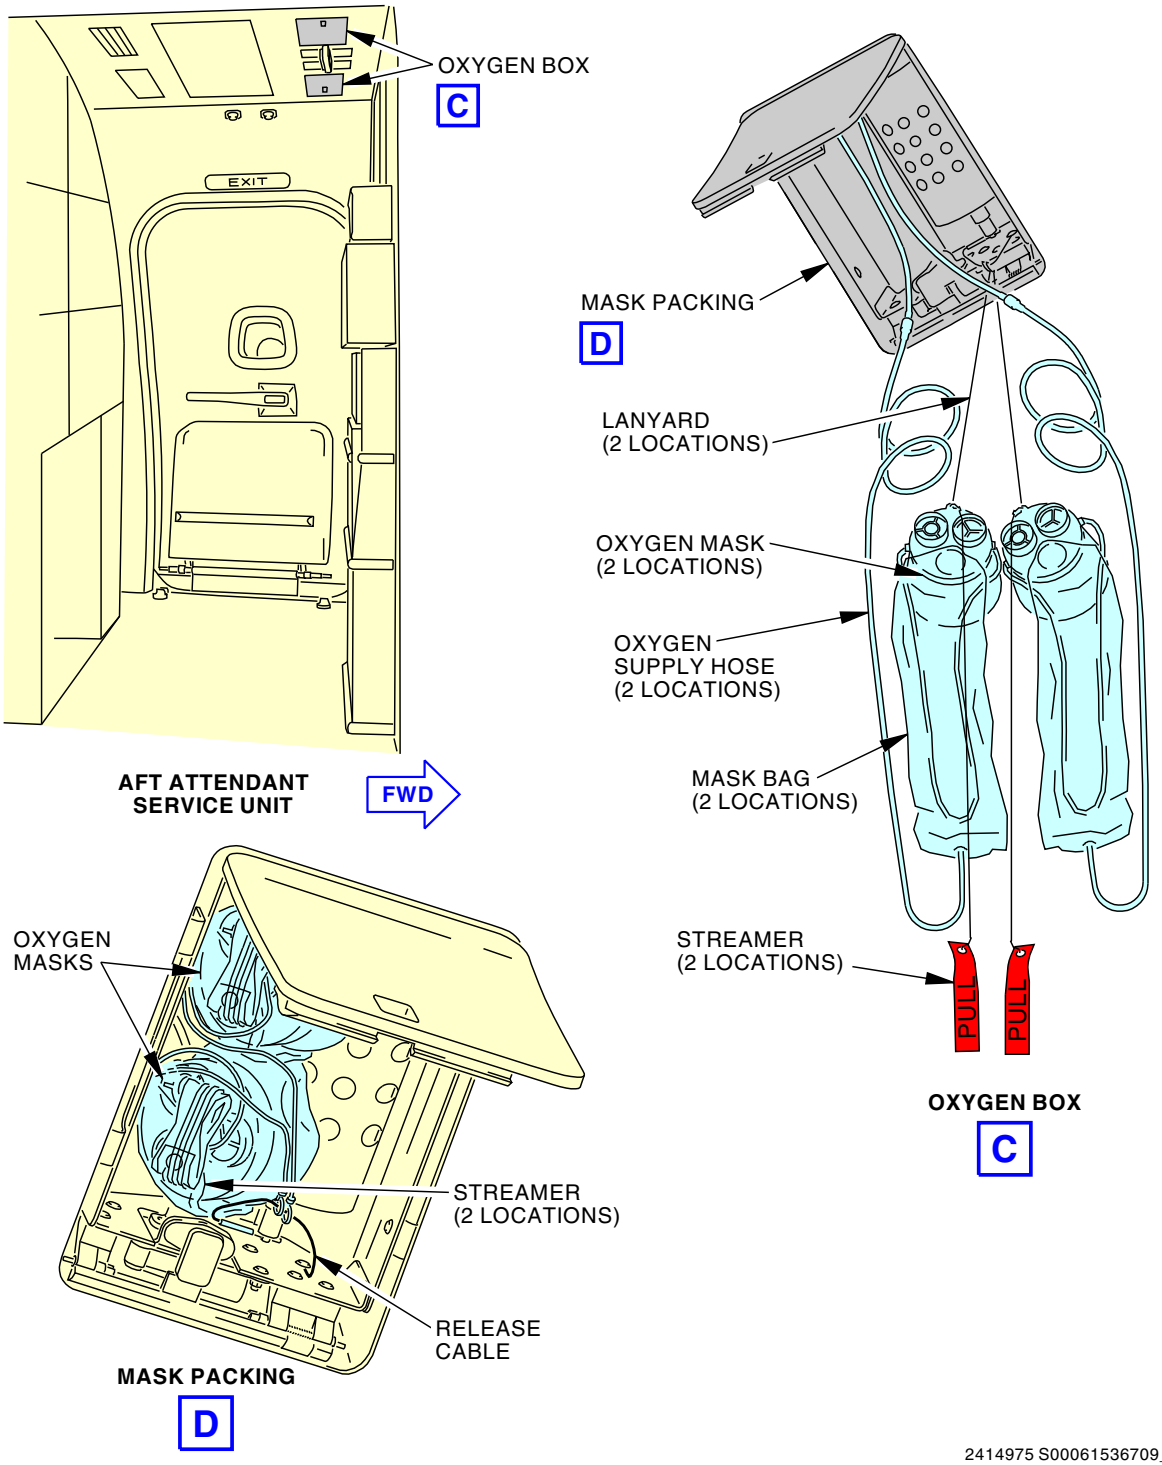

2414975 S00061536709_V1


ASU Oxygen Mask Packing Procedure
Figure 203/35-22-31-990-803 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

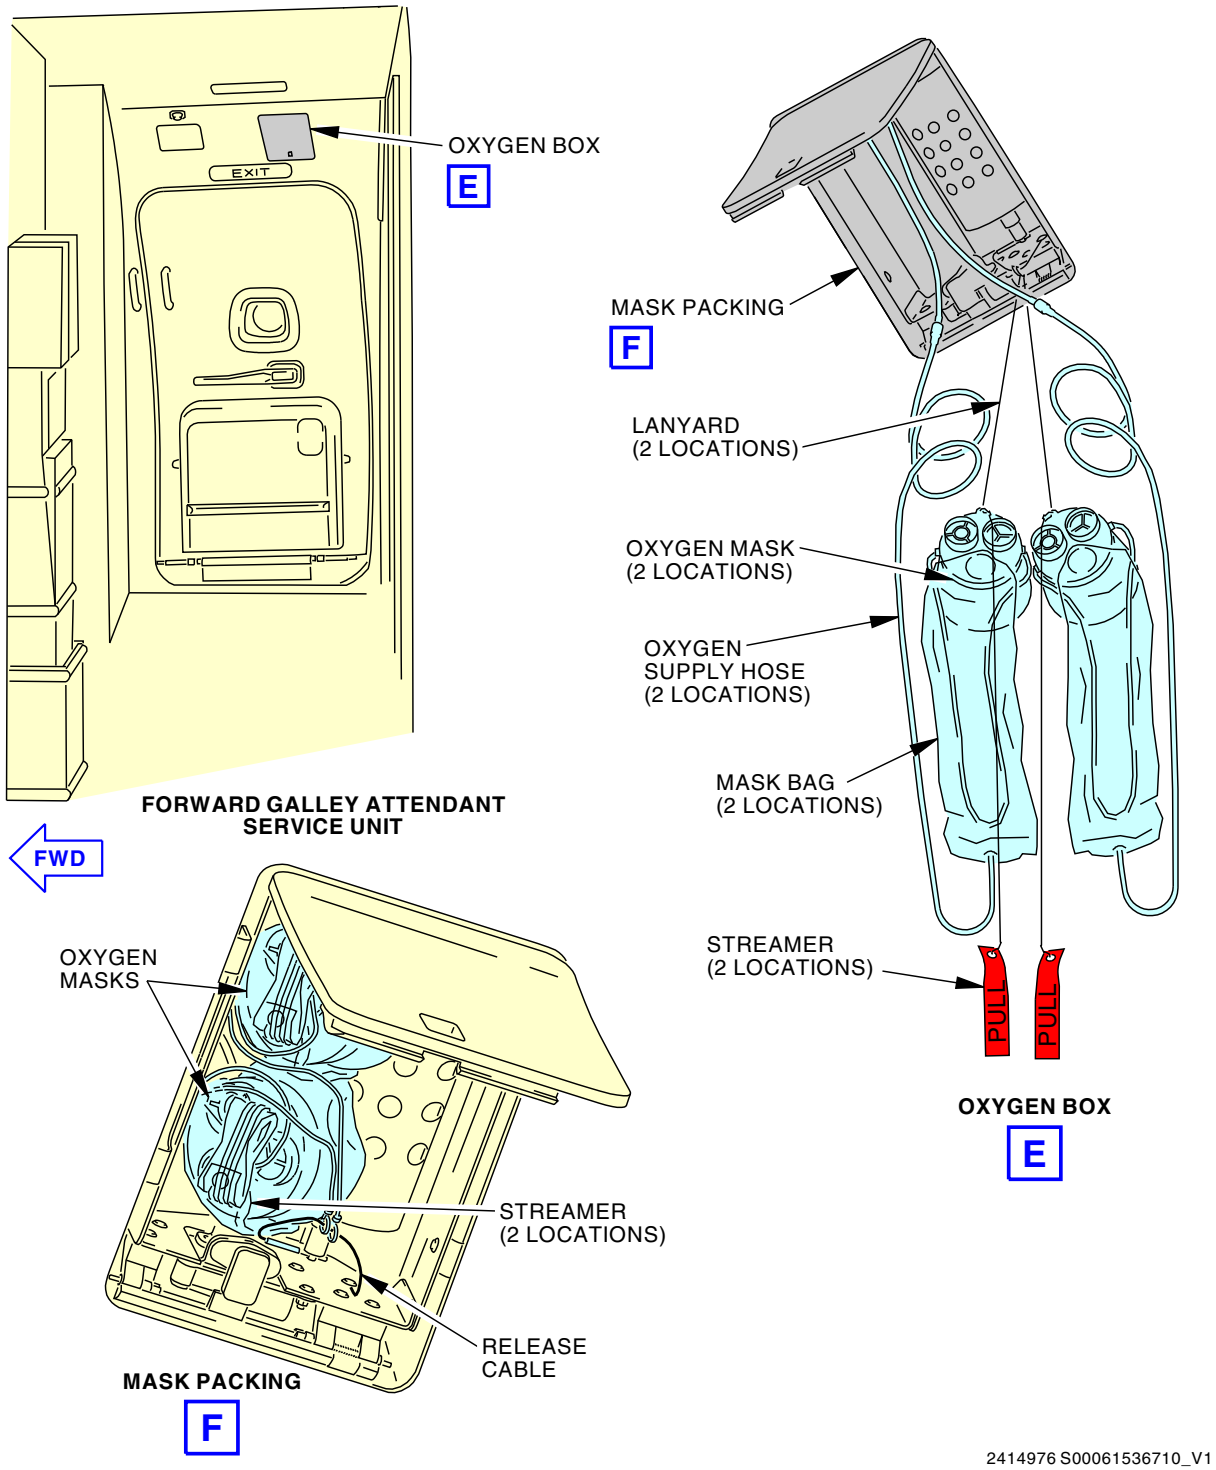


ASU Oxygen Mask Packing Procedure
Figure 203/35-22-31-990-803 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

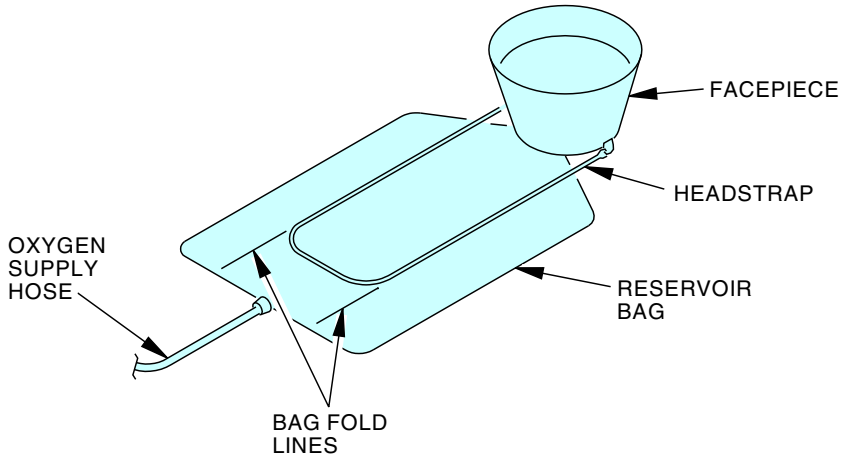

STEP 1

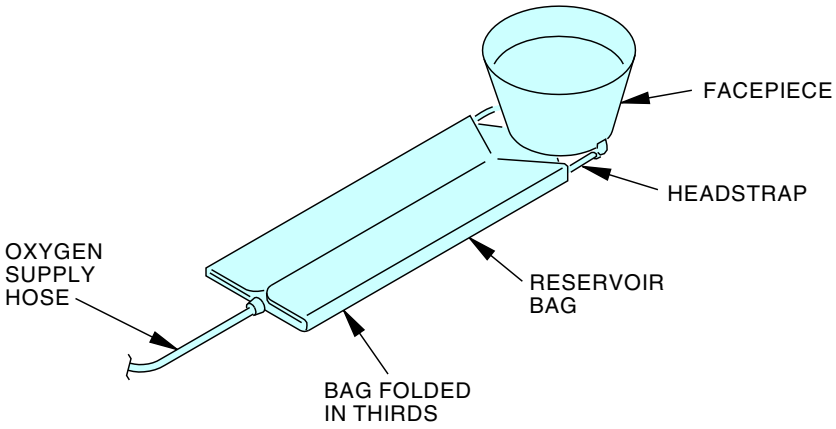


STEP 2

PREPARATION OF MASK ASSEMBLY

2414977 S00061536711_V1


Oxygen Mask Packing Procedure
Figure 204/35-22-31-990-804 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

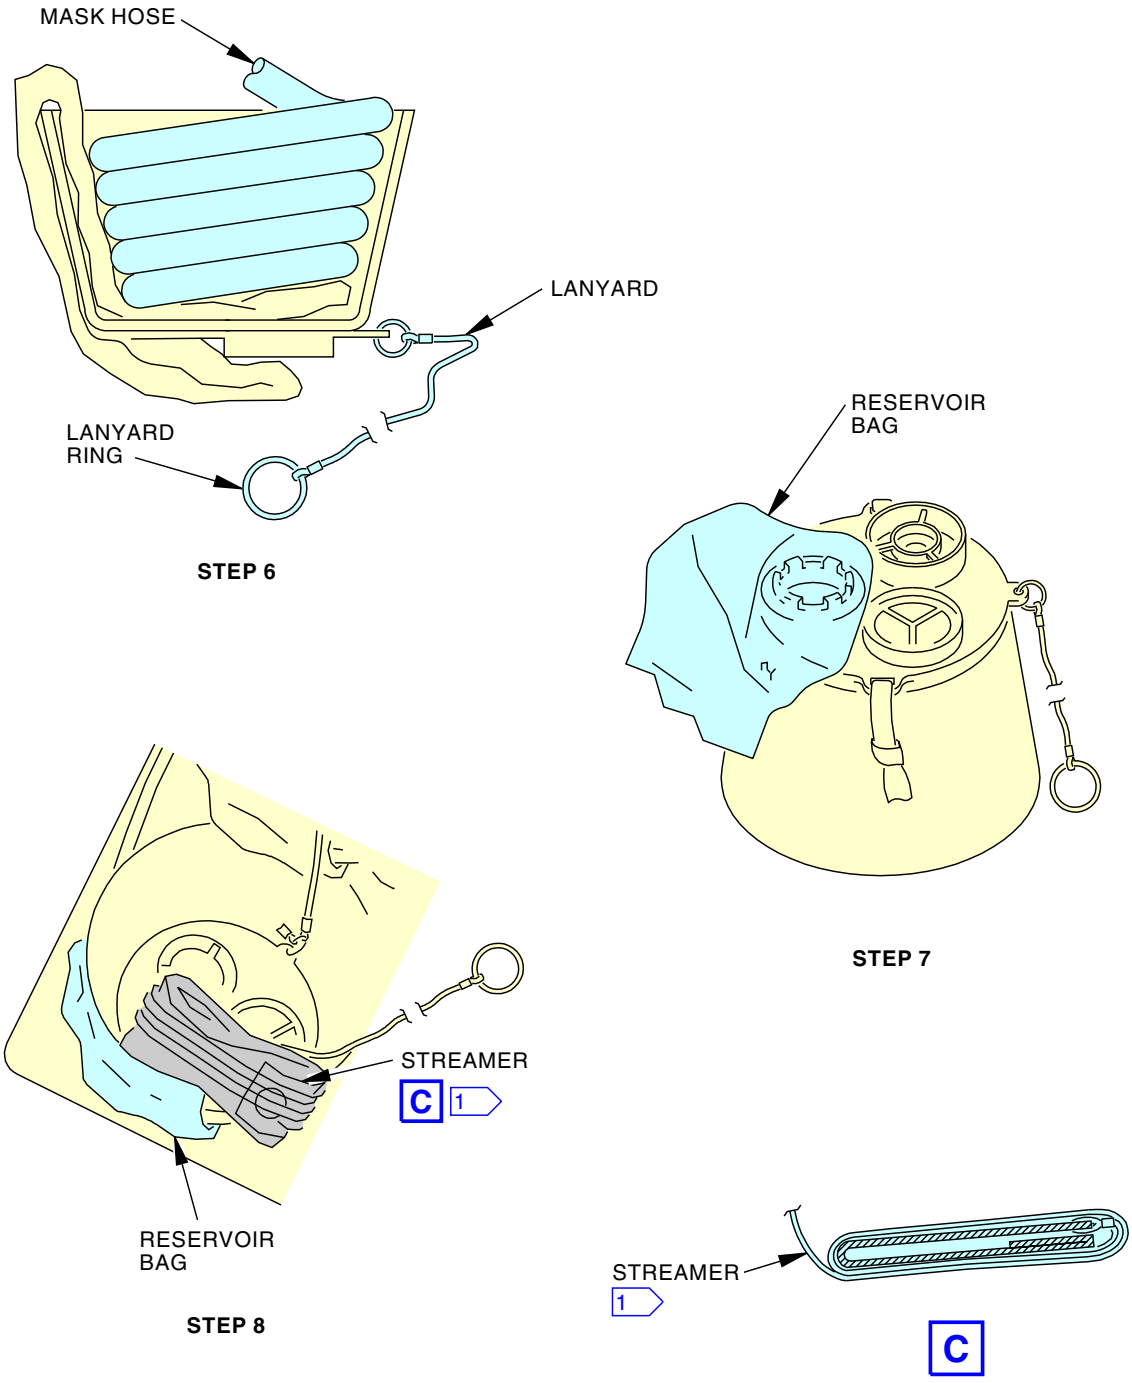


Oxygen Mask Packing Procedure
Figure 204/35-22-31-990-804 (Sheet 2 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

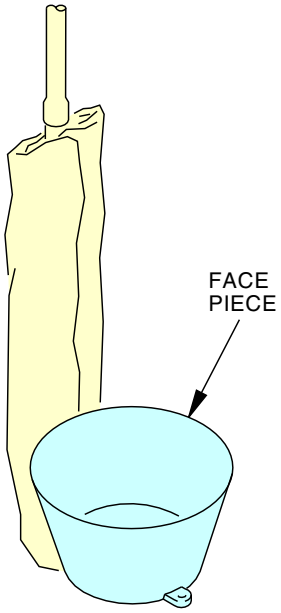


STEP 3

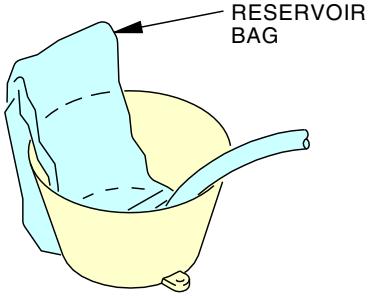

STEP 4

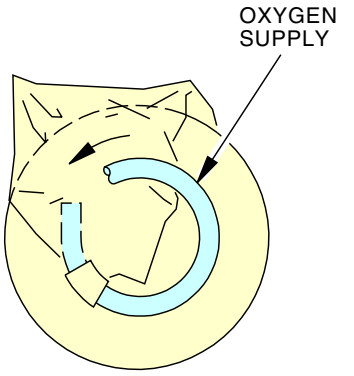

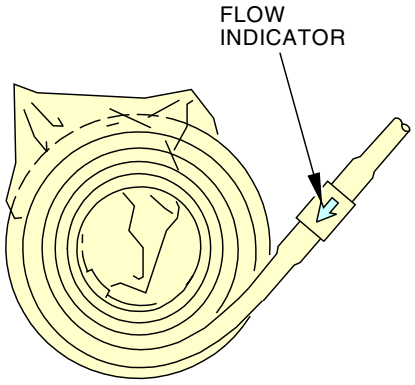

STEP 5

2414979 S00061536713_V1

Oxygen Mask Packing Procedure
Figure 204/35-22-31-990-804 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-31-420-802

4. LSU Oxygen Mask Packing

(Figure 205, Figure 206)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-31-000-803	LSU Oxygen Mask Removal (P/B 401)
35-22-31-400-803	LSU Oxygen Mask Installation (P/B 401)
35-22-51-040-801	Oxygen Cylinder (CDS) Deactivation (P/B 201)
35-22-51-440-801	Oxygen Cylinder (CDS) Activation (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Packing

SUBTASK 35-22-31-910-003

(1) Read and obey the safety precautions and general instructions for the oxygen system before the maintenance is done (TASK 35-00-00-910-801).

SUBTASK 35-22-31-010-004

(2) Do these steps to open a Lavatory Service Unit (LSU) oxygen box (if it is necessary):

(a) Go to the applicable LSU, found in the ceiling of each lavatory.

(b) Put a tool into the latch access hole.

(c) Push up on the tool to operate the door latch.

(d) Open the oxygen box door.

(e) Let the oxygen masks fall.

(f) Do not pull on the oxygen mask lanyard.

NOTE: If the oxygen mask lanyard is pulled, the oxygen cylinder will release oxygen.

SUBTASK 35-22-31-040-003

(3) Do this task: Oxygen Cylinder (CDS) Deactivation, TASK 35-22-51-040-801.

SUBTASK 35-22-31-210-008

(4) Do a check of the applicable oxygen masks:

(a) Make sure that the oxygen masks are not torn or damaged.

(b) Make sure that the oxygen masks are clean and free from contamination such as:

1) Dirt

2) Grease

3) Oil

4) Unwanted material.

SUBTASK 35-22-31-210-009

(5) Do a check of the applicable oxygen supply hoses:

(a) Make sure that the oxygen supply hoses are not torn or damaged.

(b) Make sure that the oxygen supply hoses are soft and flexible.

(c) Make sure that the color of the oxygen supply hoses has not deteriorated.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Make sure that each mask is held securely to the oxygen supply hose.

SUBTASK 35-22-31-900-003

(6) If an oxygen mask or oxygen supply hose is not serviceable, do these tasks:

- LSU Oxygen Mask Removal, TASK 35-22-31-000-803
- LSU Oxygen Mask Installation, TASK 35-22-31-400-803.

D. LSU Oxygen Mask Packing

SUBTASK 35-22-31-410-008

(1) Go to the applicable LSU, found in the ceiling of each lavatory.

SUBTASK 35-22-31-420-005

(2) Do these steps to fold an oxygen mask (Figure 206):

NOTE: Fold one mask at a time and then put the folded mask in the oxygen mask box. Continue with the remaining oxygen mask.

(a) STEP 1 - Prepare to fold the oxygen mask:

1) Isolate all of the lanyards and oxygen supply hoses.
2) Unfold and flatten the reservoir bag.
3) Put the headstrap on the reservoir bag.

(b) STEP 2 - Fold the oxygen mask:

1) Fold the bag in thirds, lengthwise, over the headstrap.

(c) STEP 3 AND STEP 4 - Position the reservoir bag in the face piece:

1) Wrap the folded reservoir bag up the side of the facepiece (Step 3).
2) Put the bag-to-hose connection in the center and bottom of the facepiece (Step 4).
3) Push the bag-to-hose connection to the left side of the facepiece (Step 4).

(d) STEP 5 - Coil the oxygen supply hose:

1) Start to coil the supply hose counterclockwise in the facepiece cup.
2) Make sure that the supply hose is coiled on top of the reservoir bag.
3) Press the supply hose firmly down and against the inside wall of the facepiece.
4) Keep the supply hose coil below the top surface of the facepiece.
5) Continue to coil the supply hose to the flow indicator.
6) Leave the lanyard out of the facepiece.
7) If the mask has a lanyard attached to the supply hose, put the lanyard over the facepiece.
8) If the mask has a lanyard attached to the facepiece, leave the lanyard out of the mask.
9) If the mask has a streamer attached, do not fold the streamer and streamer cord until after the mask is positioned in the LSU.

SUBTASK 35-22-31-420-006

(3) Do these steps to install the oxygen masks in the oxygen box (Figure 205):

(a) One or two people can do the packing procedure.

(b) To make the packing procedure easier, you can apply two pieces of masking tape between the ceiling panel and oxygen box door to hold the door partially open.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that there is enough space to put the oxygen masks on the top of the oxygen box door.

(c) Turn the folded oxygen mask until the open end of the face piece is up.

(d) Do these steps to install the masks in the oxygen box:

1) Put the coiled oxygen mask in the oxygen box (open end of the face piece towards the top surface of the oxygen box).

2) Make sure that the deployment strap is positioned between the open end of the face piece and the top surface of the oxygen box.

3) Position the oxygen mask with the reservoir bag away from the oxygen cylinder, toward the side of the oxygen box.

4) Make sure that the oxygen mask is free to drop straight down and out of the oxygen box.

5) Hold the oxygen mask in this position and do the previous steps again for the other oxygen mask.

6) Make sure that the oxygen masks and lanyard routing will not keep the oxygen box door in the open position.

a) If it is necessary, move the oxygen masks.

SUBTASK 35-22-31-420-007

(4) Do these steps to pack the streamer and streamer cord:

(a) Hold the oxygen masks in position.

(b) Fold the streamer lengthwise in segments approximately 2 in. (51 mm) long.

(c) Loosely coil the streamer cord lengthwise around the streamer.

(d) Continue to coil the streamer cord all the way to the oxygen mask.

(e) Put the coiled streamer on the bottom of the closed end of the face piece.

(f) Hold the streamer and oxygen mask in position while the other streamer is coiled.

(g) Make sure that the coiled streamer is positioned to fall first when the oxygen box door is opened during an emergency.

NOTE: The weight of the streamer will help the oxygen mask and supply line fall out of the box during an emergency.

SUBTASK 35-22-31-440-003

(5) Do this task: Oxygen Cylinder (CDS) Activation, TASK 35-22-51-440-801.

SUBTASK 35-22-31-210-010

(6) Do these steps to check the installation of the oxygen masks:

(a) Make sure that all of the mask lanyard rings are attached to the lanyard assembly.

(b) Do a check of the lanyard assembly routing to make sure that the lanyard assembly release pin will pull away from the oxygen cylinder actuator assembly when the oxygen masks are deployed.

(c) Make sure that the supply hoses are not bent too much or crimped.

(d) Make sure that the mask lanyards are not wrapped around a hose, elastic band, streamer, or other object.

(e) Make sure that no part of the oxygen mask or the reservoir bag goes over the oxygen supply manifold or the release cable.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Make sure that the steamer and oxygen mask are free to fall when the door is opened during an emergency.

(g) Do this check (optional):

1) Close the oxygen box door to within ½ in. (13 mm) of being closed and then slightly open the door.

2) Make sure that the oxygen masks partially fall down with the door to make sure that the oxygen masks are free to fall.

SUBTASK 35-22-31-410-009

(7) Do these steps to close the oxygen box door:

(a) Hold the oxygen box door.

(b) Remove the masking tape from the oxygen box door (if it is installed).


(c) Push the reset lever on the latch actuator plunger to set the actuator again.

(d) Close and latch the oxygen box door.

(e) Do a visual check of the door alignment to make sure that the oxygen equipment is not caught in the oxygen box door or in the actuator.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

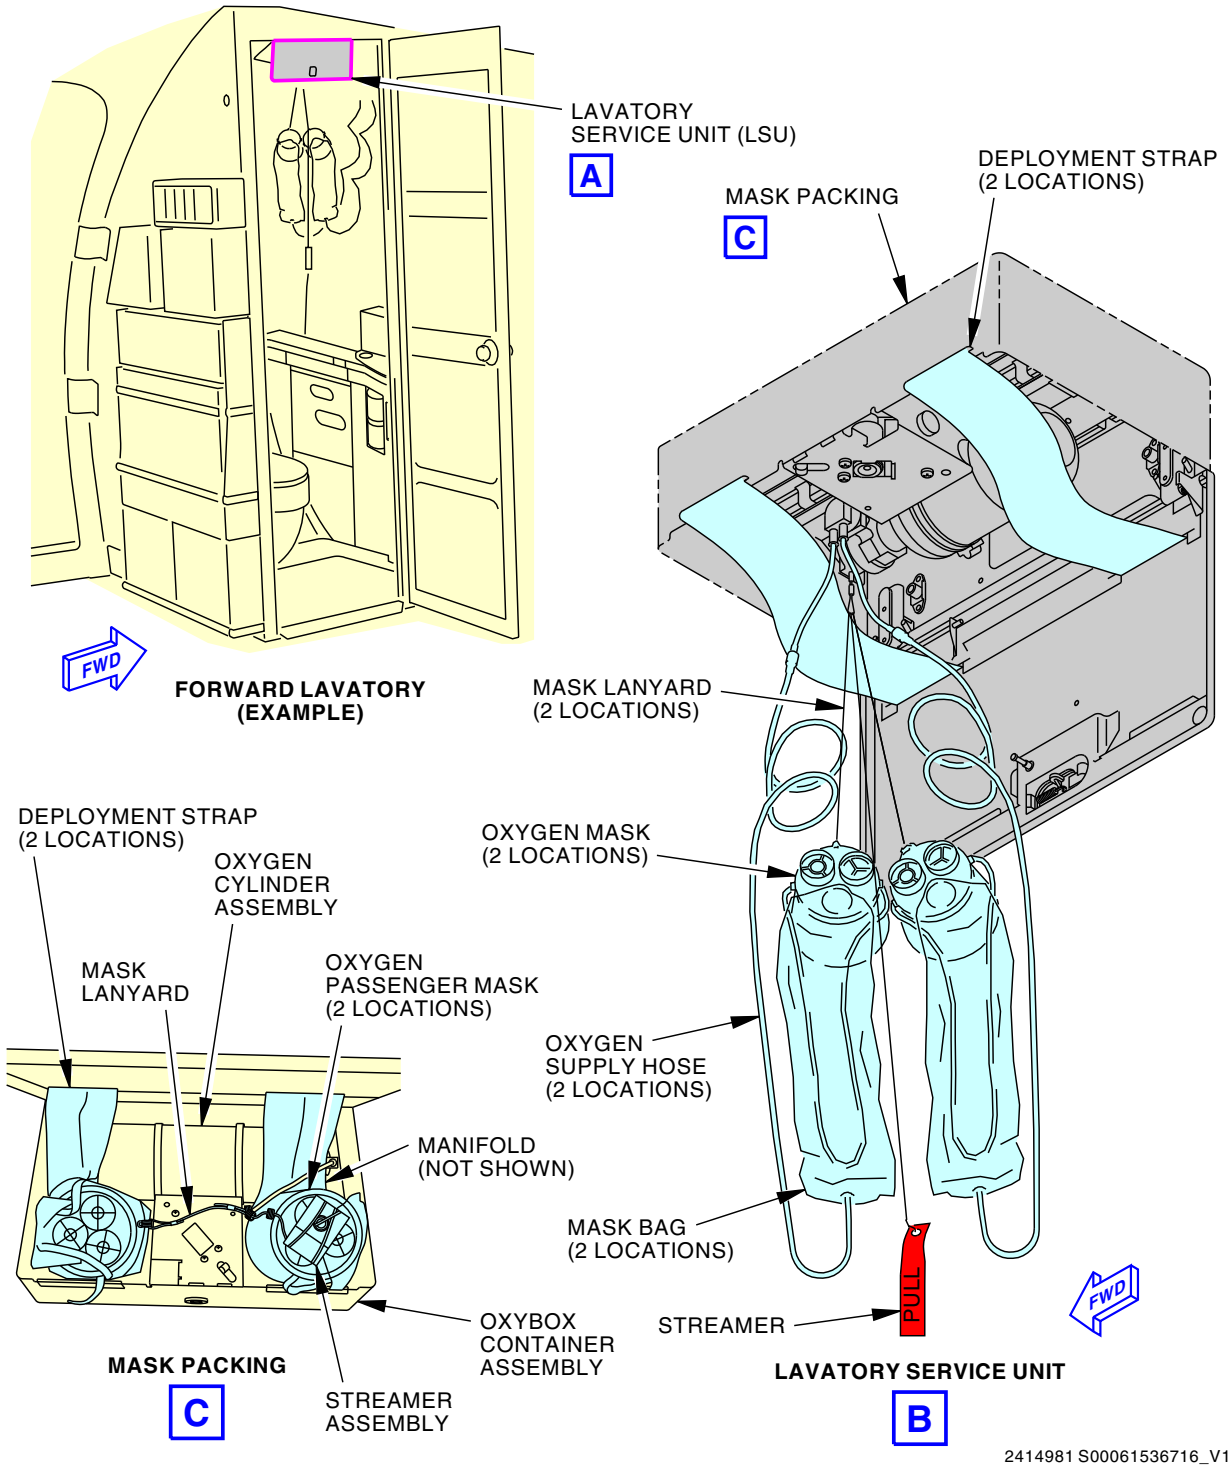


LSU Oxygen Mask Packing
Figure 205/35-22-31-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

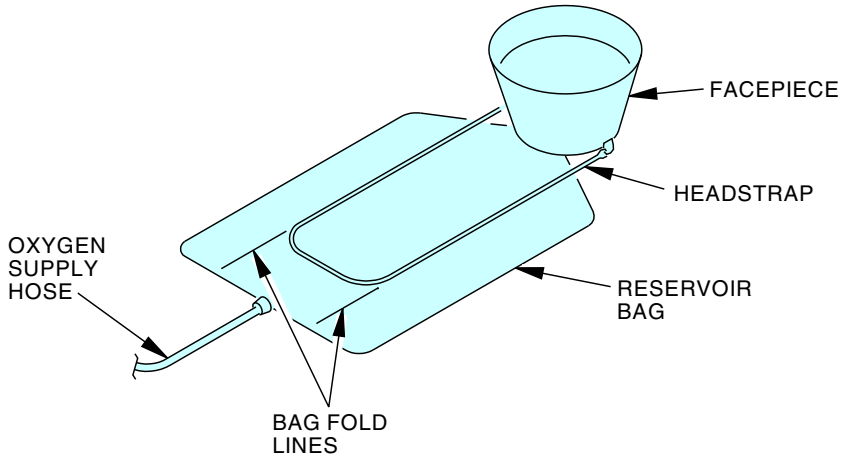

STEP 1

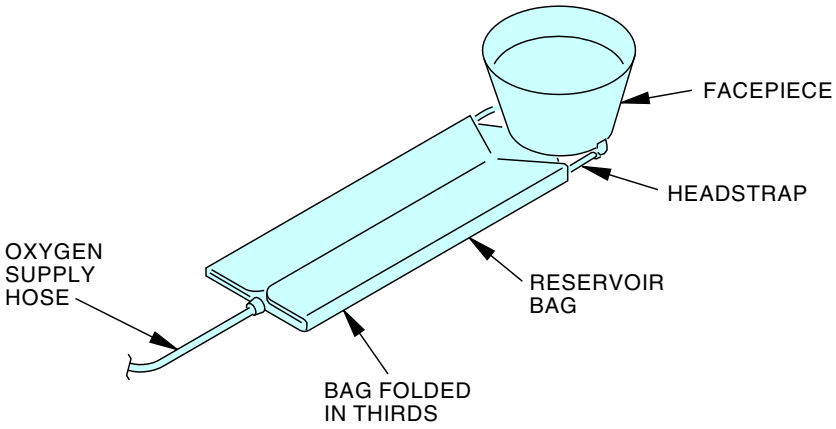


STEP 2

PREPARATION OF MASK ASSEMBLY


2414977 S00061536711_V1

Oxygen Mask Packing
Figure 206/35-22-31-990-806 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

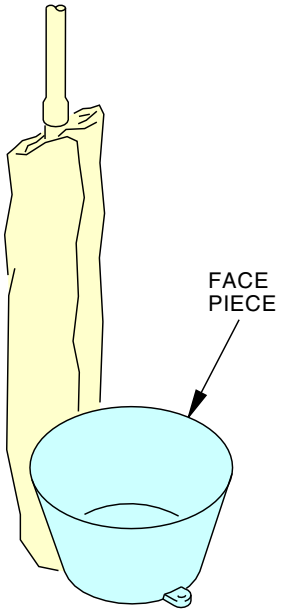


STEP 3

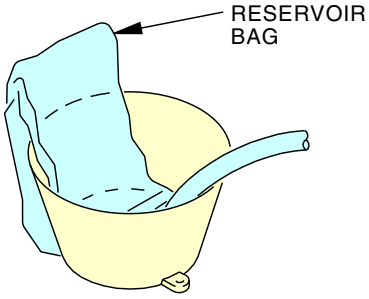

STEP 4

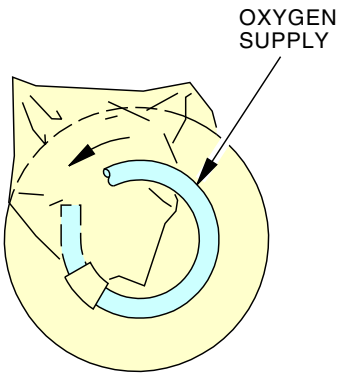

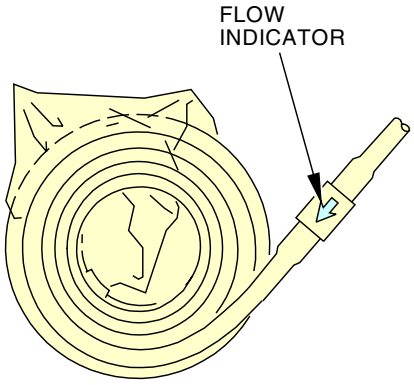


STEP 5

2414979 S00061536713_V1

Oxygen Mask Packing
Figure 206/35-22-31-990-806 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

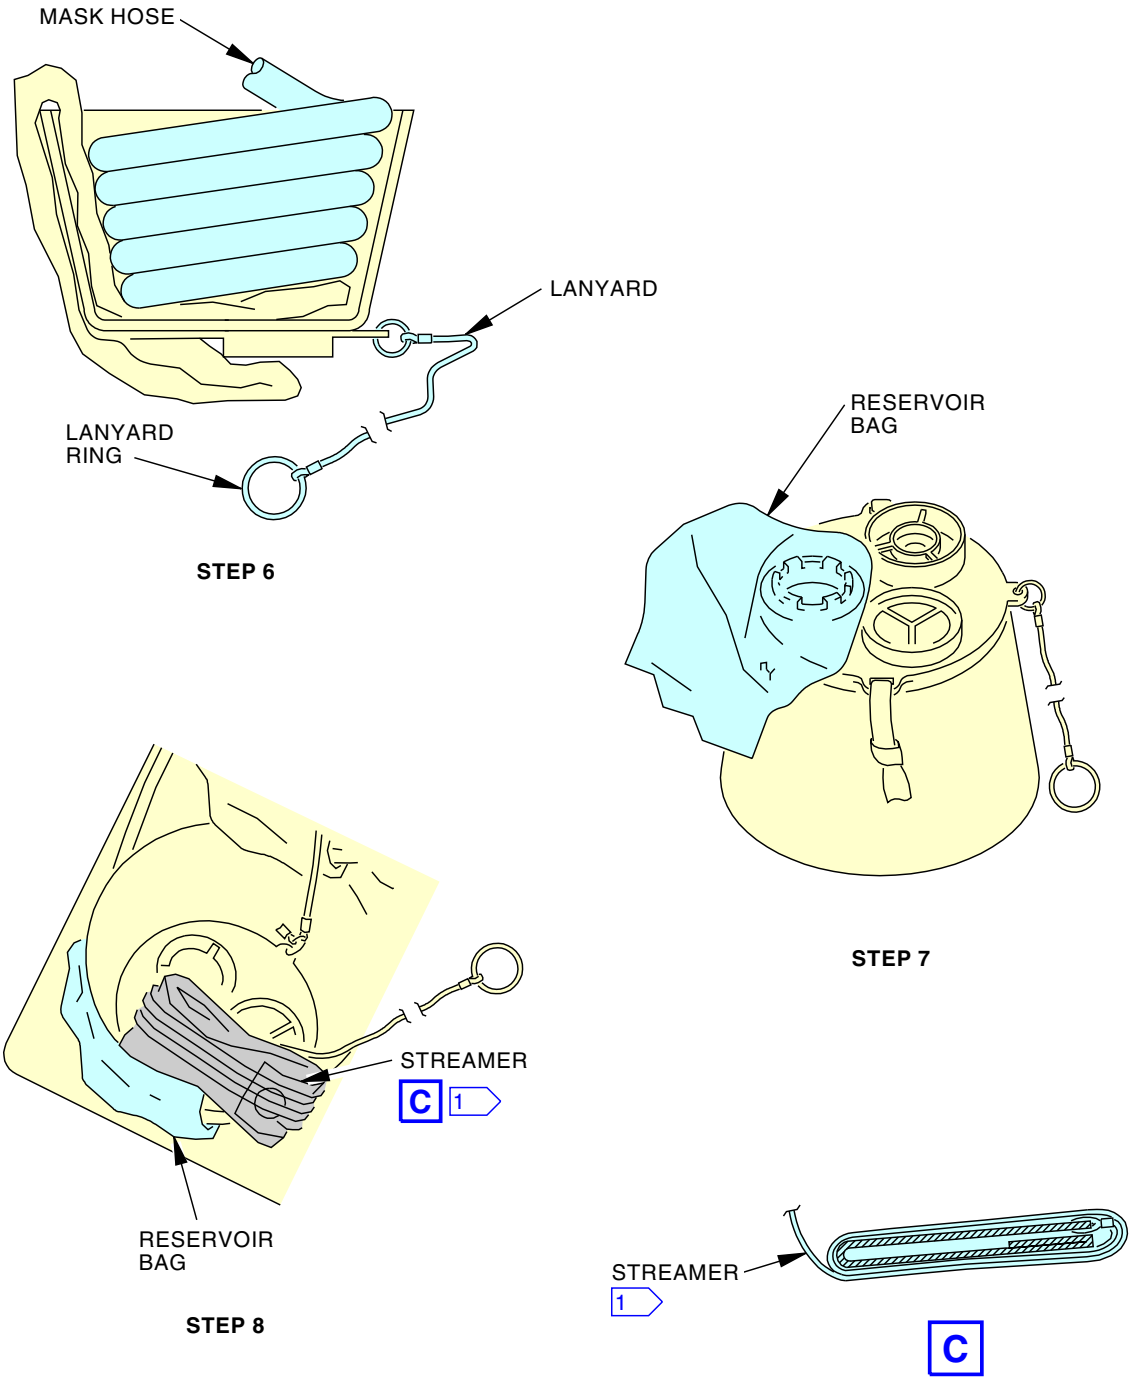

1 INSTALLATIONS WITH OXYGEN MASK STREAMERS

2414978 S00061536712_V1

Oxygen Mask Packing
Figure 206/35-22-31-990-806 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-31-210-801

5. Detailed Inspection of the Oxygen Mask

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
25-23-61 P/B 401	PASSENGER SERVICE UNIT (PSU) - REMOVAL/INSTALLATION
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
35-22-31-000-801	PSU Oxygen Mask Removal (P/B 401)
35-22-31-000-802	ASU Oxygen Mask Removal (P/B 401)
35-22-31-000-803	LSU Oxygen Mask Removal (P/B 401)
35-22-31-400-801	PSU Oxygen Mask Installation (P/B 401)
35-22-31-400-802	ASU Oxygen Mask Installation (P/B 401)
35-22-31-400-803	LSU Oxygen Mask Installation (P/B 401)
35-22-51-040-801	Oxygen Cylinder (CDS) Deactivation (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Inspection

SUBTASK 35-22-31-910-004

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-22-31-010-005

(2) Get access to the oxygen masks as follows:

(a) Lower the applicable Passenger Service Unit (PSU) for the passenger oxygen masks (PAGEBLOCK 25-23-61/401).

(b) For the attendant or lavatory oxygen masks, do these steps:

1) Go to the applicable Attendant Service Unit (ASU) or Lavatory Service Unit (LSU).

2) Put a tool into the latch access hole.

3) Push on the tool to operate the door latch.

4) Open the oxygen box door.

5) Let the oxygen masks fall.

SUBTASK 35-22-31-040-008

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(3) To deactivate the oxygen generator, do this task: TASK 35-22-11-000-801.

SUBTASK 35-22-31-040-009

(4) To deactivate the oxygen cylinder, do this task: TASK 35-22-51-040-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Detailed Inspection of the Oxygen Mask

SUBTASK 35-22-31-210-011

(1) Do a detailed inspection of the general condition of the oxygen masks.

(a) Make sure that the oxygen masks are not damaged as follows:

1) Torn parts
2) Broken parts
3) Frayed parts
4) Missing parts
5) Holes in parts.

(b) Make sure that the oxygen mask does not have these conditions:

1) Stiffness
2) Permanent deformation or kinks.

(c) Make sure that oxygen masks are clean and free from contamination such as:

1) Grease or oil
2) Dirt
3) Unwanted material.

(d) Make sure that all of the flapper valves are aligned and not damaged.

(e) Make sure that the bag and tube do not have changed color.

(f) Make sure that the head strap will stretch when you pull it, and goes back when you let it go.

(g) Make sure that the face piece does not have odor.

(h) Look through the bag and tube and make sure that there is no liquid drops or solid dirt on the internal surface of the bag and tube.

(i) If one of the conditions exist, repair or replace the mask assembly.

SUBTASK 35-22-31-210-012

(2) Do a detailed inspection of the applicable oxygen supply hoses.

(a) Make sure that the oxygen supply hoses are not damaged.

(b) Make sure that the oxygen supply hoses are soft and flexible.

(c) Make sure that the color of the oxygen supply hoses has not changed.

NOTE: If a hose is pinched or shows discoloration of the tube, it is necessary to replace the hose. If there is no sign that the hose has been cut, discolored or crushed to the point of decreased oxygen flow, the hose is satisfactory for use. A small kink of the PSU oxygen tubing is not a cause to reject the tube. The tubing has an internal structure that will let the flow of oxygen when it has a kink.

(d) Make sure that the mask is held correctly to the oxygen supply hose.

(e) Make sure that the in line flow indicator points to the bag.

(f) If one of these conditions is present, repair or replace the mask assembly.

SUBTASK 35-22-31-210-013

(3) Visually examine the oxygen mask hoses and oxygen mask bags for liquid contamination on the inner and outer surfaces.

(a) If liquid contamination exists, replace the applicable oxygen mask assembly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) For the passenger oxygen masks, these are the tasks:
   - PSU Oxygen Mask Removal, TASK 35-22-31-000-801
   - PSU Oxygen Mask Installation, TASK 35-22-31-400-801.
2) For the attendant oxygen masks, these are the tasks:
   - ASU Oxygen Mask Removal, TASK 35-22-31-000-802
   - ASU Oxygen Mask Installation, TASK 35-22-31-400-802.
3) For the lavatory oxygen masks these are the tasks:
   - LSU Oxygen Mask Removal, TASK 35-22-31-000-803
   - LSU Oxygen Mask Installation, TASK 35-22-31-400-803.

SUBTASK 35-22-31-210-014

(4) Make sure that the lanyards are attached to the release cable.

SUBTASK 35-22-31-900-004

(5) If the oxygen mask or oxygen supply hose is not serviceable, replace them when necessary.
   (a) For the passenger oxygen masks, these are the tasks:
      - PSU Oxygen Mask Removal, TASK 35-22-31-000-801
      - PSU Oxygen Mask Installation, TASK 35-22-31-400-801.
   (b) For the attendant oxygen masks, these are the tasks:
      - ASU Oxygen Mask Removal, TASK 35-22-31-000-802
      - ASU Oxygen Mask Installation, TASK 35-22-31-400-802.
   (c) For the lavatory oxygen masks these are the tasks:
      - LSU Oxygen Mask Removal, TASK 35-22-31-000-803
      - LSU Oxygen Mask Installation, TASK 35-22-31-400-803.

SUBTASK 35-22-31-530-001

(6) To pack the oxygen mask for the PSU, do this task: TASK 35-22-31-440-801.

SUBTASK 35-22-31-530-002

(7) To pack the oxygen mask for the ASU, do this task: TASK 35-22-31-420-801.

SUBTASK 35-22-31-530-003

(8) To pack the oxygen mask for the LSU, do this task: TASK 35-22-31-420-802.

SUBTASK 35-22-31-410-010

(9) Close the applicable service unit access.
   (a) Close the PSU for the passenger oxygen masks (PAGEBLOCK 25-23-61/401).
   (b) For the attendant or lavatory oxygen masks, do these steps to close the ASU or LSU oxygen box door:
      1) Hold the oxygen box door.
      2) Remove the masking tape from the oxygen box door (if installed).
      3) Push the reset lever on the latch actuator plunger to set the actuator again.
      4) Close and latch the oxygen box door.
      5) Do a visual check of the door alignment to make sure the oxygen equipment is not caught in the oxygen box door or in the actuator.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER OXYGEN MASK - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) PSU Oxygen Mask Removal

(2) PSU Oxygen Mask Installation

(3) ASU Oxygen Mask Removal

(4) ASU Oxygen Mask Installation

(5) LSU Oxygen Mask Removal

(6) LSU Oxygen Mask Installation.

B. The passenger oxygen masks are found in the passenger cabin above each passenger seat. Oxygen masks are also found above the attendant seats and in each of the lavatories. The passenger oxygen masks are found in the oxygen boxes in each of these LRUs:

(1) Passenger Service Unit (PSU)

(2) Attendant Service Unit (ASU)

(3) Lavatory Service Unit (LSU).

C. Before you do maintenance on an oxygen system component that contains an oxygen generator you must install a safety pin in the generator firing mechanism. The safety pin will let the generator to be handled. If the safety pin is not installed, the oxygen generator can fire.

D. Before you do maintenance on an oxygen system component that contains an oxygen cylinder (CDS) you must install a safety pin in the actuator assembly. The safety pin will let the oxygen cylinder be handled and stored. If the safety pin is not installed, the oxygen cylinder can release oxygen.

TASK 35-22-31-000-801

2. PSU Oxygen Mask Removal

(Figure 401)

A. References

Reference	Title
25-23-61-000-801	Passenger Service Unit - Removal (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Remove the PSU Oxygen Masks

SUBTASK 35-22-31-910-005

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-31-860-001

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-31-010-006

(3) To lower the PSU, do this task: Passenger Service Unit - Removal, TASK 25-23-61-000-801.

SUBTASK 35-22-31-010-007

WARNING

MAKE SURE A RELEASE PIN OR A SAFETY PIN (WITH A WARNING FLAG) IS INSTALLED IN THE FIRING MECHANISM OF THE OXYGEN GENERATOR. THE OXYGEN GENERATOR WILL FIRE IF A PIN IS NOT INSTALLED. A FIRED OXYGEN GENERATOR GETS VERY HOT (450°F/232°C) OR HIGHER) AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(4) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 35-22-31-010-008

(5) Do these steps to remove the oxygen masks [6] from the mask box [9]:

(a) Remove the mask box cover [1] from the mask box [9].

1) Keep the mask box cover [1] for the installation.

(b) Pull the oxygen masks [6] with the oxygen supply lines [7] and lanyards [5] up through the top of the mask box [9].

(c) Let the oxygen masks [6] hang from the top of the PSU.

(d) Make sure that the safety pin and flag [13] is fully installed to the generator firing mechanism [15]. Then remove the release cable pin [14] from the oxygen generator.

(e) Remove the lanyard rings [3] from the end of the release cable [2].

(f) Disconnect the oxygen supply lines [7] from the oxygen manifold [8] of the oxygen generator. Then disconnect the oxygen supply line [7] from the supply line clip [11] of the PSU.


(g) Remove the oxygen masks [6] from the airplane.

SUBTASK 35-22-31-970-001


(6) Make a report in the airplane logbook that states that one or more PSU oxygen masks have been removed and must be installed before the airplane is released for flight.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

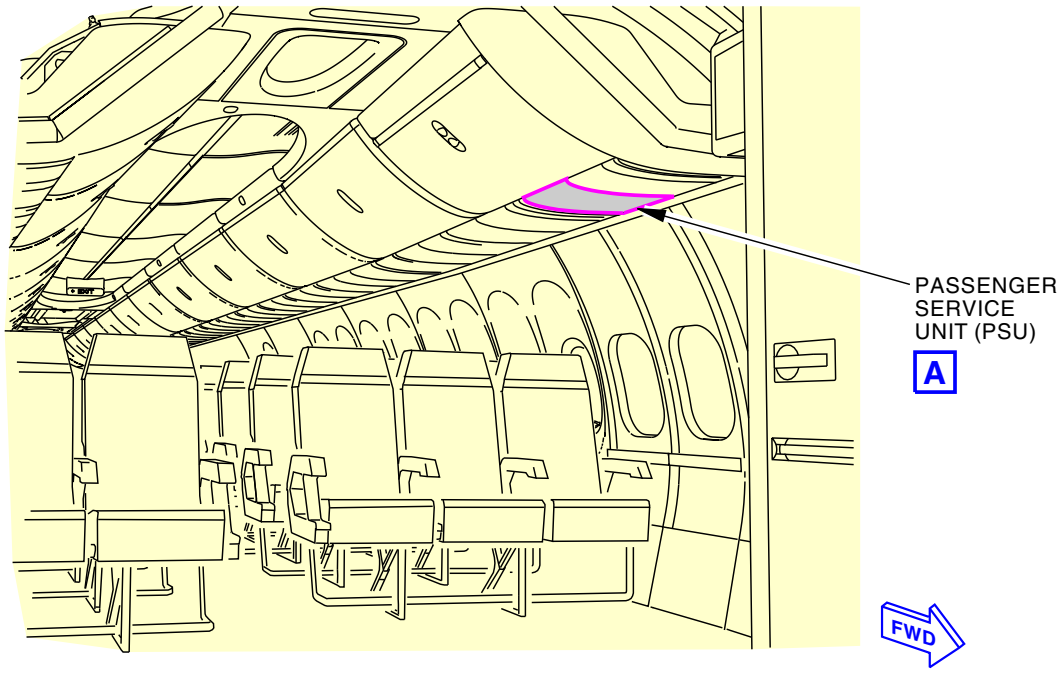

PASSENGER COMPARTMENT (EXAMPLE)

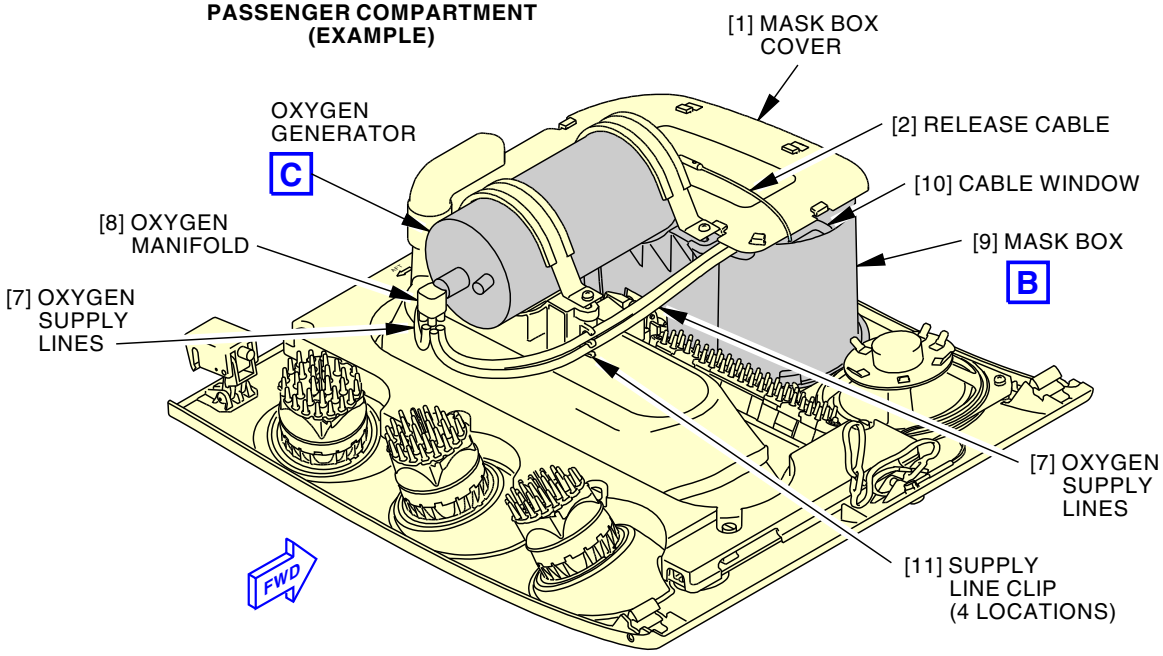


PASSENGER SERVICE UNIT (PSU)

A

2414982 S00061536720_V1

PSU Oxygen Mask Installation
Figure 401/35-22-31-990-807 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

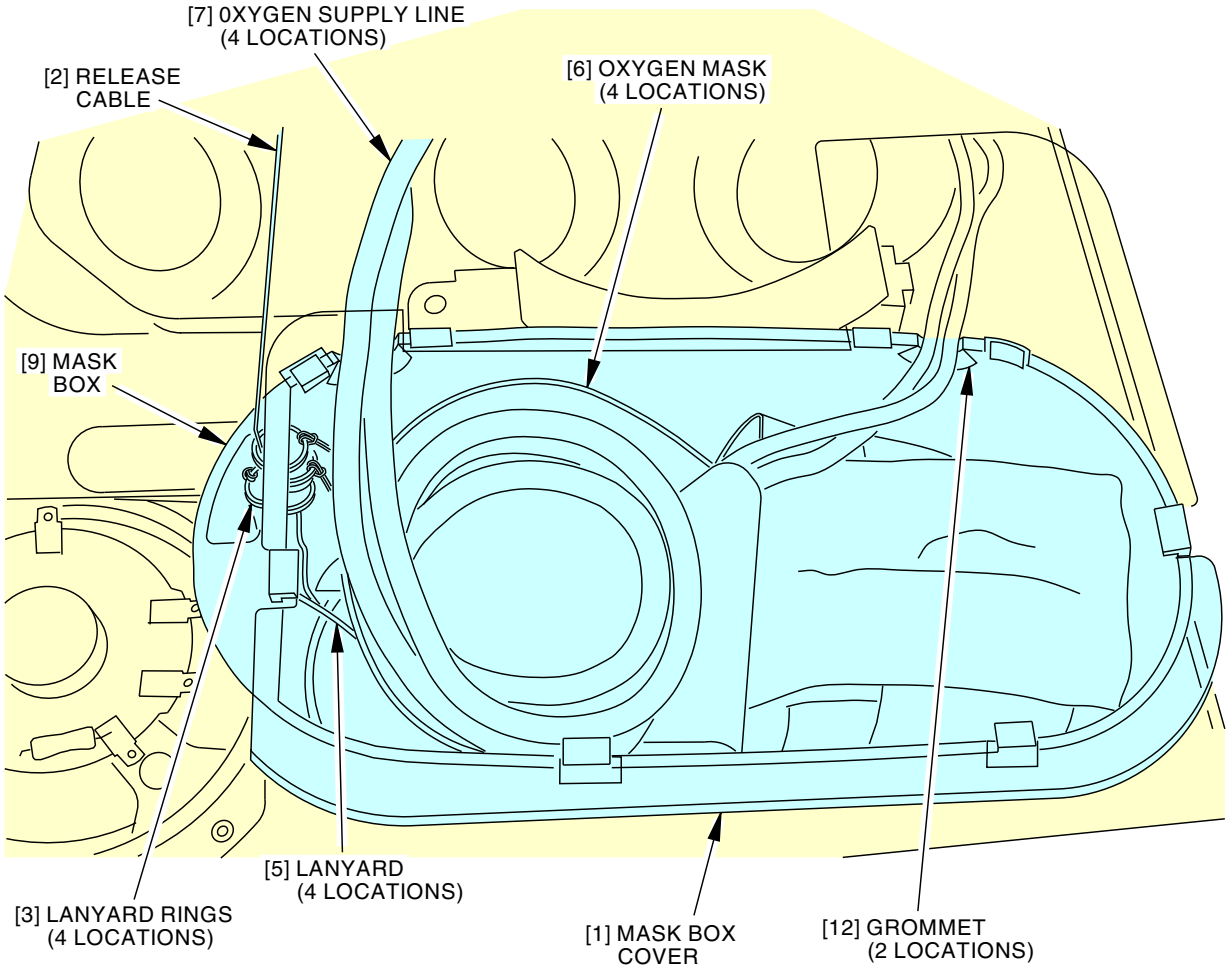


MASK BOX
(0XYGEN GENERATOR NOT SHOWN)

B

2414983 S00061536721_V1

PSU Oxygen Mask Installation
Figure 401/35-22-31-990-807 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

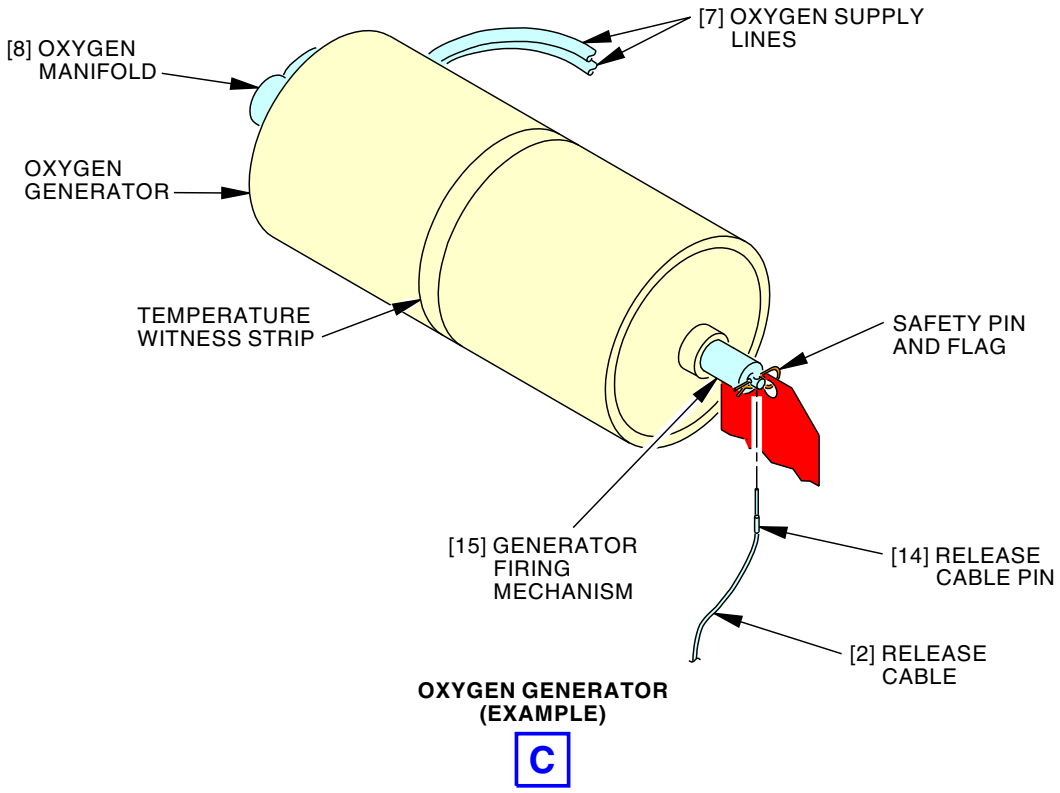

2414984 S00061536722_V2

PSU Oxygen Mask Installation
Figure 401/35-22-31-990-807 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-31-400-801

3. PSU Oxygen Mask Installation

(Figure 401)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)
35-22-31-440-801	PSU Oxygen Mask Packing (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
6	Oxygen mask	35-22-31-02-080	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Procedure

SUBTASK 35-22-31-910-006

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-210-015

(2) Do a check of the replacement oxygen masks [6]:

(a) Make sure the oxygen masks [6] are not torn or damaged.

(b) Make sure the oxygen masks [6] are clean and free from contamination such as:

1) Dirt

2) Grease

3) Oil

4) Unwanted material.

(c) Make sure the elastic straps are held securely to the oxygen masks [6].

SUBTASK 35-22-31-210-016

(3) Do a check of the oxygen supply lines [7] on the replacement oxygen masks [6]:

(a) Make sure the oxygen supply lines are not torn or damaged.

(b) Make sure the oxygen supply lines are soft and flexible.

(c) Make sure the color of the oxygen supply lines have not deteriorated.

(d) Make sure the oxygen masks [6] are held securely to the oxygen supply lines.

SUBTASK 35-22-31-900-005

(4) If an oxygen mask or oxygen supply line is not serviceable, replace the oxygen mask [6].

SUBTASK 35-22-31-420-008

(5) Do this task: PSU Oxygen Mask Packing, TASK 35-22-31-440-801.

SUBTASK 35-22-31-420-009

(6) Do these steps to install the oxygen masks [6] in the PSU:

(a) Put the oxygen masks [6] adjacent to the mask box [9].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Put the release cable [2] through the lanyard ring [3] of the two outboard oxygen masks [6].

(c) Then put the release cable [2] through the lanyard ring [3] of the two inboard oxygen masks [6].

(d) Put the release cable through the triangular cable window [10] of the mask box [9].

(e) Install the oxygen supply lines [7] to the oxygen manifold [8] of the oxygen generator.

(f) Put the oxygen supply lines [7] in the installed positions on the opposite sides of the oxygen generator. Then install the oxygen supply lines [7] in the supply line clips [11] of the PSU assembly.

(g) Install the oxygen supply lines [7] in the two grommets [12] of the mask box [9].

(h) Install the release cable pin [14] in the generator firing mechanism [15] of the oxygen generator.

SUBTASK 35-22-31-420-010

(7) Do the oxygen mask packing task (TASK 35-22-31-440-801).

SUBTASK 35-22-31-440-004

(8) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

SUBTASK 35-22-31-860-002

(9) Make sure that these circuit breakers are closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-31-970-002

(10) Remove the report from the airplane logbook that states that the PSU oxygen masks have been removed.

——— END OF TASK ———

TASK 35-22-31-000-802

4. ASU Oxygen Mask Removal

(Figure 402)

A. General

(1) The ASU oxygen masks are found above the attendant seats.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Remove the ASU Oxygen Masks

SUBTASK 35-22-31-910-007

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-860-003

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-31-010-009

(3) Go to the applicable ASU in the passenger compartment.

SUBTASK 35-22-31-010-010

(4) Do these steps to open the oxygen box door [22]:

(a) Put the flat tool in the door edge gap.

(b) Push the flat tool up against the oxygen box door latch [24].

(c) Open the oxygen box door [22].

(d) Let the oxygen masks [28] or oxygen masks [30] fall.

(e) Do not pull on the oxygen masks [28] or oxygen masks [30].

NOTE: If you pull on the oxygen masks, the oxygen generator [25] will fire.

SUBTASK 35-22-31-040-004

WARNING

MAKE SURE THAT THE SAFETY PIN WITH A WARNING FLAG IS INSTALLED ON THE GENERATOR. THE GENERATOR IS A PYROTECHNIC-ACTIVATED DEVICE. IF THE GENERATOR FIRES, IT WILL BECOME VERY HOT (450 DEGREE F OR MORE). IF YOU TOUCH A HOT GENERATOR, YOU WILL GET AN INJURY.

(5) To deactivate the oxygen generator, do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 35-22-31-020-001

(6) Do these steps to remove the oxygen masks [28] or oxygen masks [30] from the oxygen box [21]:

(a) Make sure that the safety pin is installed in the oxygen generator [25].

(b) Carefully remove the release pin [26] from the oxygen generator [25] (View C, Figure 402).

(c) Remove the lanyard rings [27] from the release pin [26].

(d) Remove the oxygen supply lines [32] from the adjustment clamp [31] (View D, Figure 402).

(e) Disconnect the oxygen supply lines [32] from the oxygen generator manifold.

(f) Remove the oxygen masks [28] or oxygen masks [30] from the airplane.


ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 35-22-31-970-003

(7) Make a report in the airplane logbook that states that one or more ASU LSU oxygen masks have been removed and must be installed before the airplane is released for flight.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

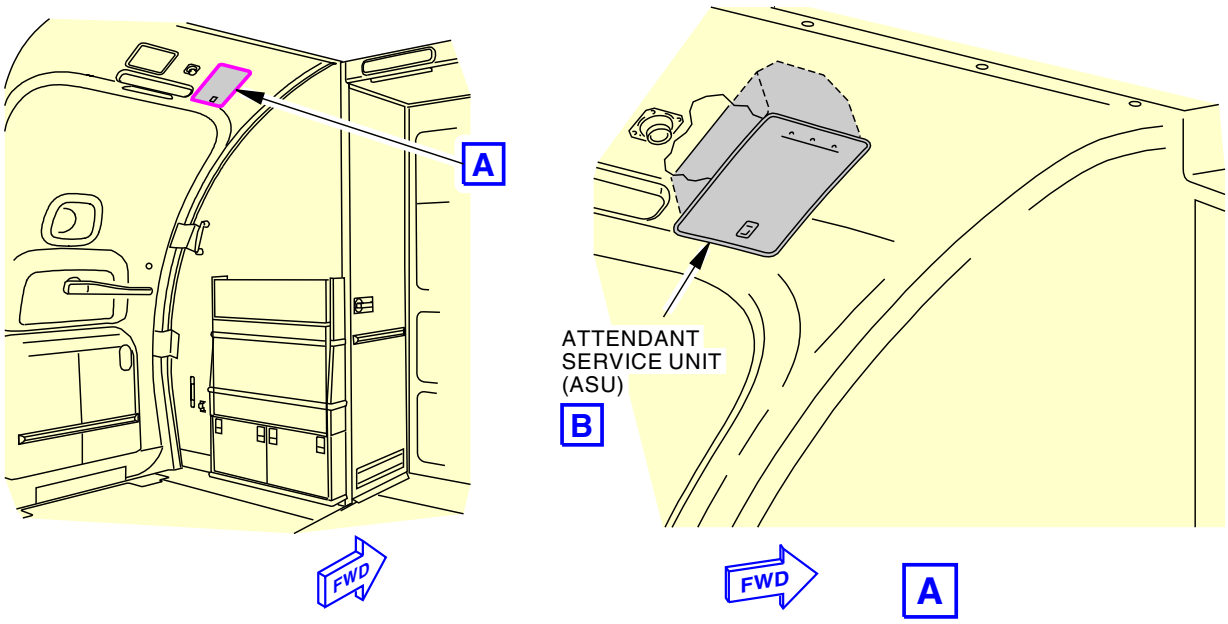

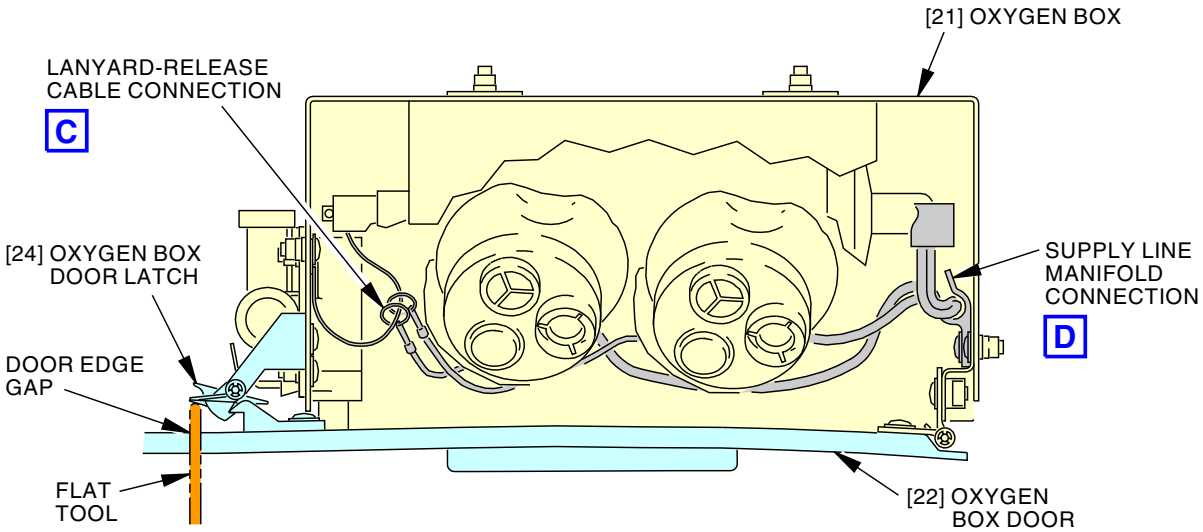

FORWARD ATTENDANT SERVICE UNIT (EXAMPLE)


B 1

1 FORWARD ASU SHOWN AS AN EXAMPLE. ALL OF THE ATTENDANT SERVICE UNITS ARE EQUIVALENT.

2414985 S00061536725_V2


ASU Oxygen Mask Installation
Figure 402/35-22-31-990-808 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

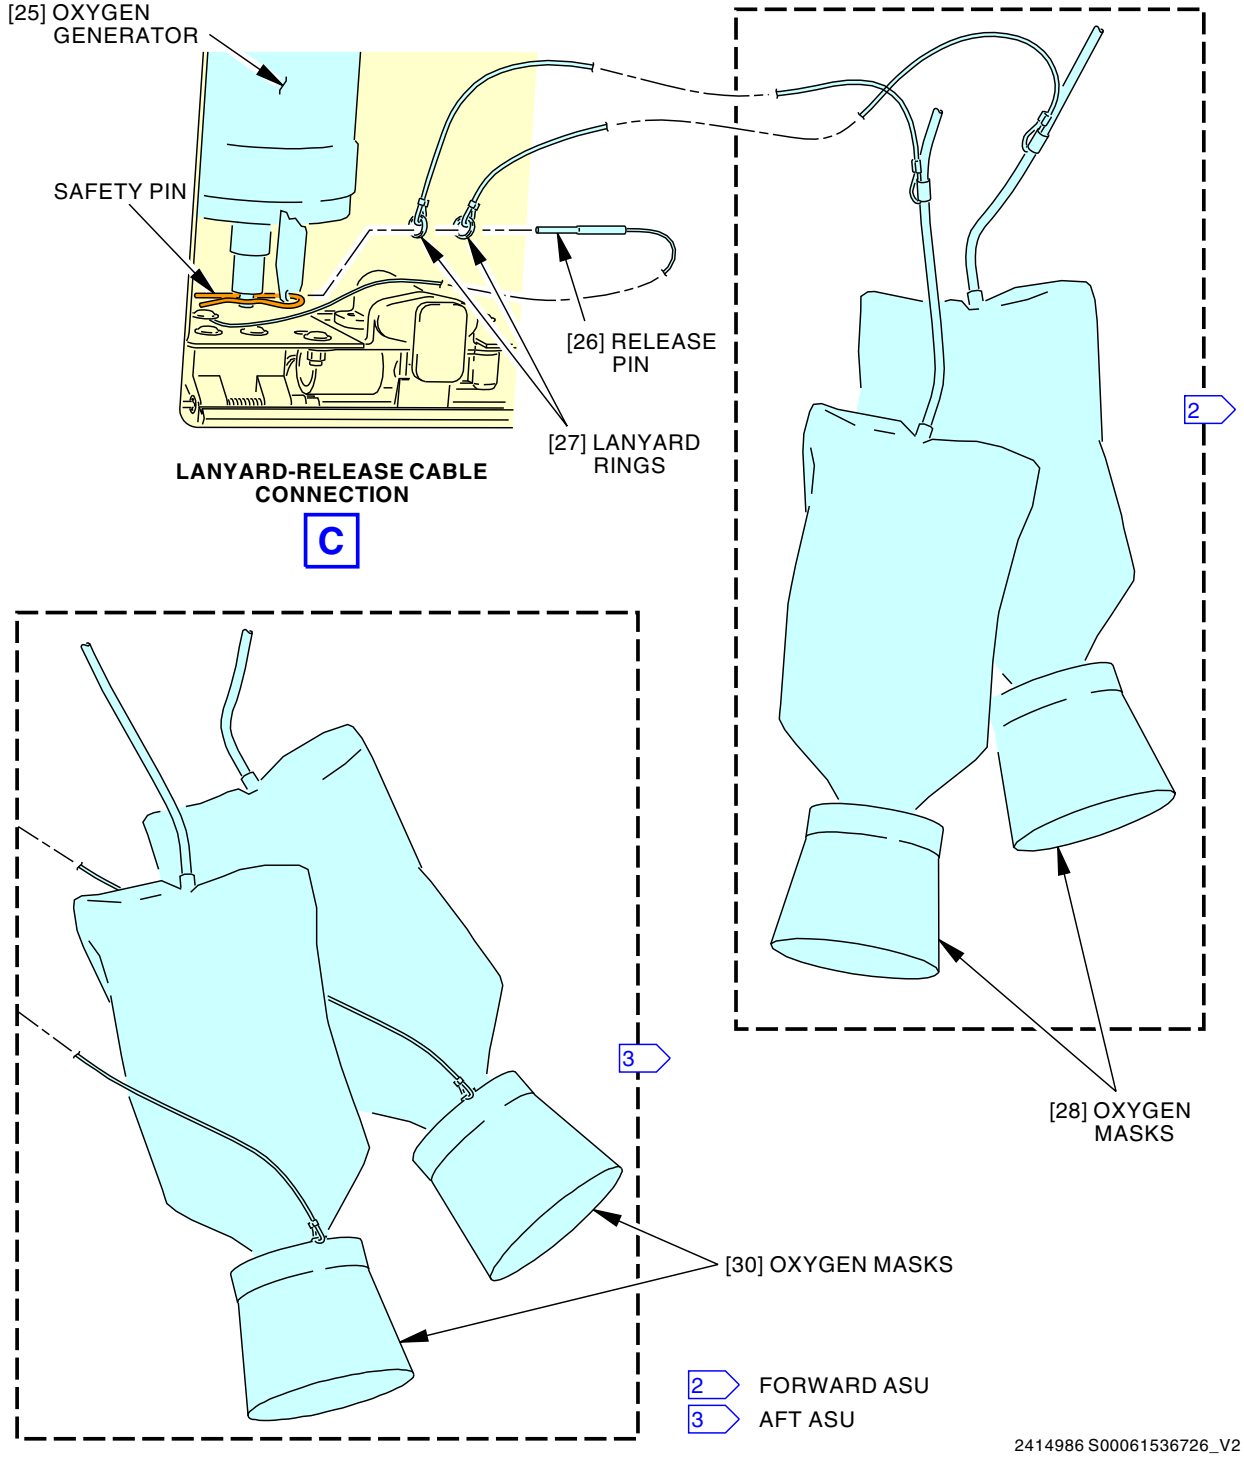

ASU Oxygen Mask Installation
Figure 402/35-22-31-990-808 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

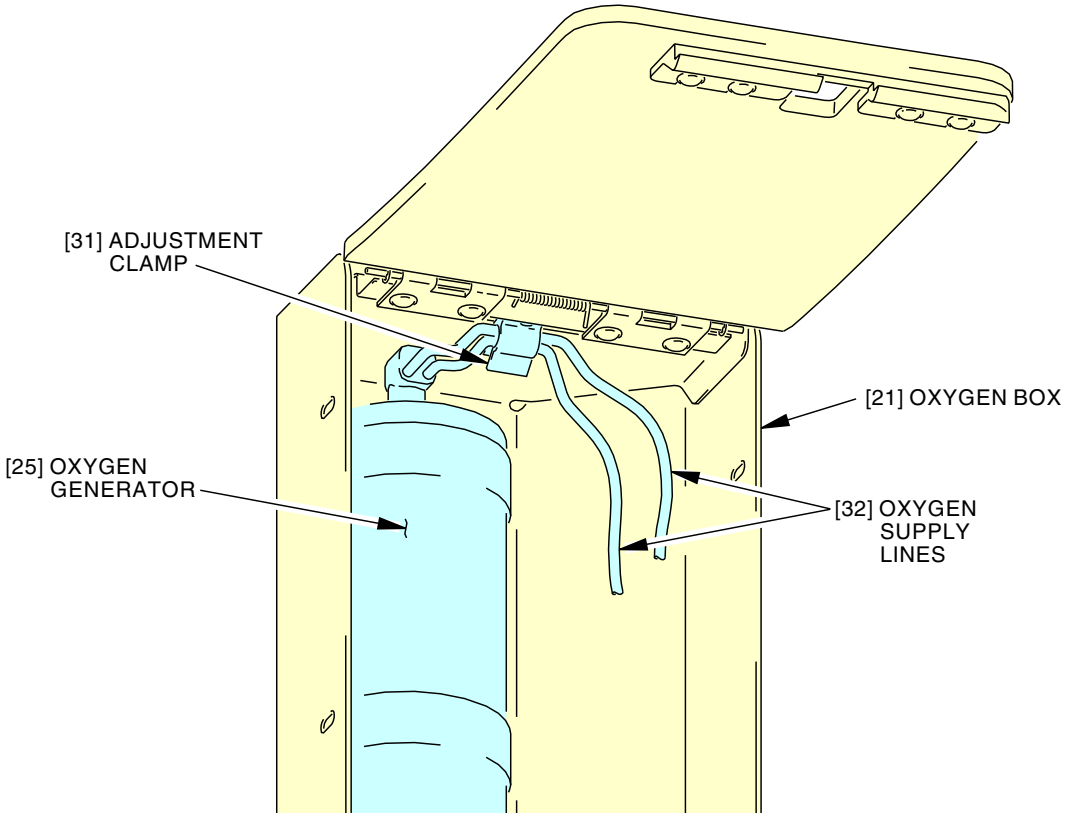

SUPPLY LINE MANIFOLD CONNECTION

D

2414987 S00061536727_V1

ASU Oxygen Mask Installation
Figure 402/35-22-31-990-808 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-31-400-802

5. ASU Oxygen Mask Installation

(Figure 402)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-31-420-801	ASU Oxygen Mask Packing (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
28	Oxygen mask	35-22-31-22-090	PTF ALL
		35-22-31-95-095	PTF ALL
30	Oxygen mask	35-22-31-25-045	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Procedure

SUBTASK 35-22-31-910-008

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-210-017

(2) Do a check of the replacement oxygen masks [28] or oxygen masks [30]:

(a) Make sure that the oxygen masks [28] or oxygen masks [30] are not torn or damaged.

(b) Make sure that the oxygen masks [28] or oxygen masks [30] are clean and free from contamination such as:

1) dirt

2) grease

3) oil

4) unwanted material.

(c) Make sure that the elastic straps are held securely to the oxygen masks [28] or oxygen masks [30].

SUBTASK 35-22-31-210-018

(3) Do a check of the oxygen supply line [32] on the replacement oxygen masks [28] or oxygen masks [30].

(a) Make sure that the oxygen supply lines [32] are not torn or damaged.

(b) Make sure that the oxygen supply lines [32] are soft and flexible.

(c) Make sure that the color of the oxygen supply lines [32] have not deteriorated.

(d) Make sure that each oxygen mask is held securely to the oxygen supply lines [32].

SUBTASK 35-22-31-900-006

(4) If an oxygen mask or oxygen supply line [32] is not serviceable, replace the oxygen masks [28] or oxygen masks [30].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-31-420-011

(5) Do these steps to install the oxygen masks [28] or oxygen masks [30] to the oxygen box [21]:

(a) Put the oxygen masks [28] or oxygen masks [30] in their positions.

(b) Attach the oxygen supply line [32] to the oxygen manifold on the oxygen generator [25] (View D, Figure 402).

(c) Make sure that the unused ports on the oxygen generator manifold are plugged.

(d) Do these steps to attach the oxygen supply lines [32] through the adjustment clamp [31]:

1) Tighten the adjustment clamp [31] to make sure that the oxygen supply lines [32] does not slip.

2) Make sure that the adjustment clamp [31] does not crimp the oxygen supply lines [32].

(e) Attach the lanyard rings [27] to the cable on the release pin [26].

(f) Carefully attach the release pin [26] to the firing mechanism on the oxygen generator [25].

SUBTASK 35-22-31-410-011

(6) Do this task: ASU Oxygen Mask Packing, TASK 35-22-31-420-801.

SUBTASK 35-22-31-860-004

(7) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-31-970-004

(8) Remove the report from the airplane logbook that states that the ASU oxygen mask(s) have been removed.

——— END OF TASK ———

TASK 35-22-31-000-803

6. LSU Oxygen Mask Removal

(Figure 403)

A. General

(1) The LSU oxygen masks are found in each of the lavatories.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-51-040-801	Oxygen Cylinder (CDS) Deactivation (P/B 201)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Remove the LSU Oxygen Masks

SUBTASK 35-22-31-910-009

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-860-005

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-31-010-011

(3) Go to the applicable LSU, found in the ceiling of each lavatory.

SUBTASK 35-22-31-010-012

(4) Do these steps to open the LSU oxygen box door:

(a) Put a tool into the latch access hole.

(b) Push up on the tool to operate the door latch.

(c) Open the oxygen box door.

(d) Let the oxygen masks [50] fall.

(e) Do not pull on the oxygen masks [50].

NOTE: If you pull on the oxygen masks, the oxygen cylinder will release the oxygen.

SUBTASK 35-22-31-040-005

(5) To deactivate the oxygen cylinder, do this task: Oxygen Cylinder (CDS) Deactivation, TASK 35-22-51-040-801.

SUBTASK 35-22-31-020-002

(6) Do these steps to remove the oxygen masks [50] from the oxygen box [59]:

(a) Make sure that the safety pin is installed in the actuator assembly [56].

(b) Disconnect the ring on each mask lanyard [51] from the release lanyard [58].

(c) Disconnect the ring on the streamer lanyard [52] from the release lanyard [58].

(d) Disconnect the oxygen supply hoses [53] from the oxygen manifold [54].


(e) Remove the oxygen masks [50] from the airplane.

SUBTASK 35-22-31-970-005

(7) Make a report in the airplane logbook that states that one or more LSU oxygen masks have been removed and must be installed before the airplane is released for flight.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

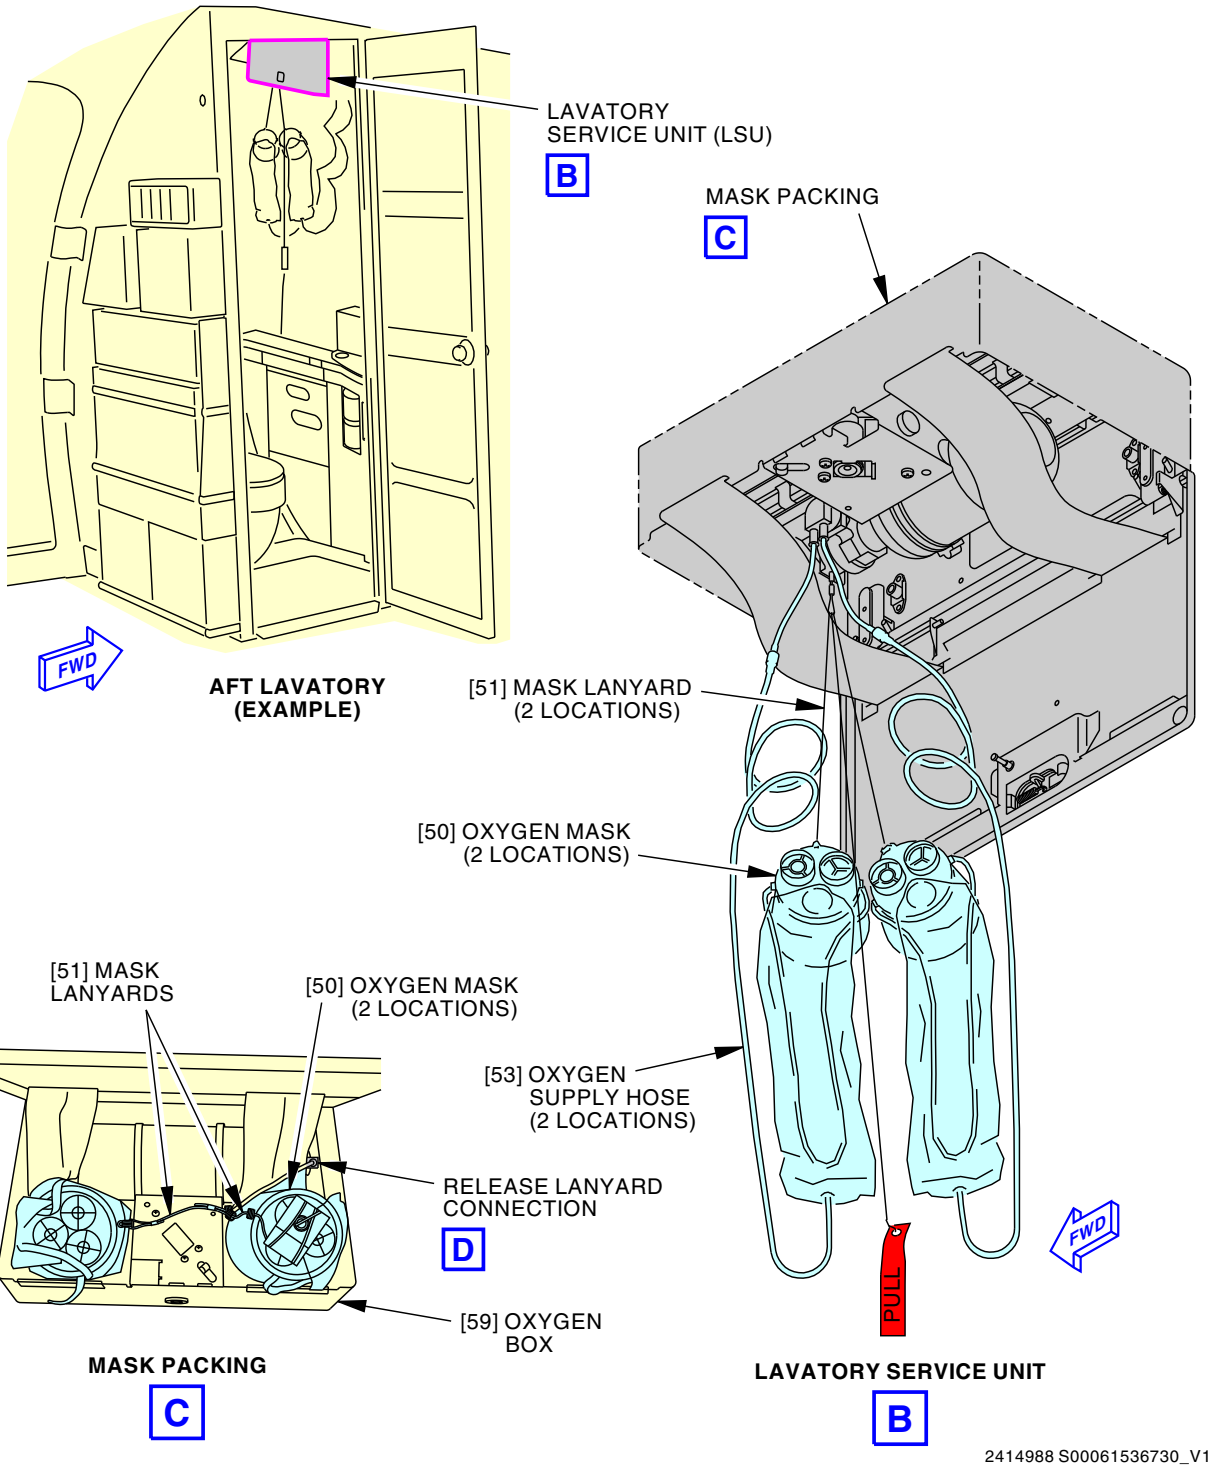

LSU Oxygen Mask Installation
Figure 403/35-22-31-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

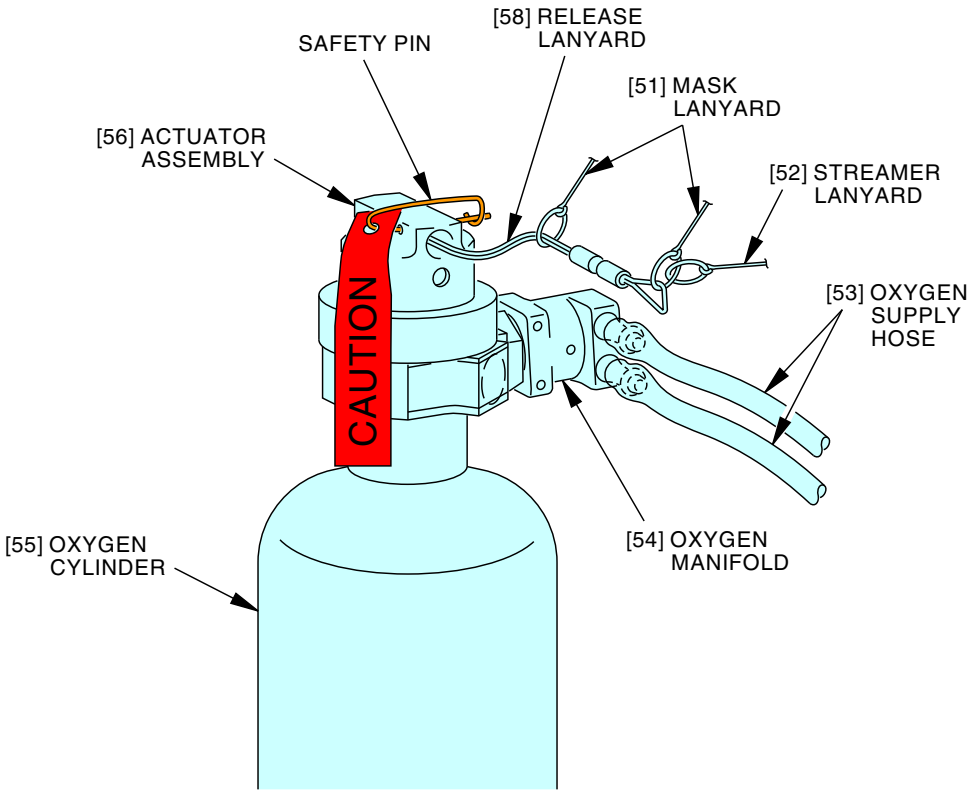

RELEASE LANYARD CONNECTION

D

2414990 S00061536732_V2

LSU Oxygen Mask Installation
Figure 403/35-22-31-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-31-400-803

7. LSU Oxygen Mask Installation

(Figure 403)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-31-420-802	LSU Oxygen Mask Packing (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
50	Oxygen masks	35-21-00-01A-075	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Procedure

SUBTASK 35-22-31-910-010

(1) To read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-210-019

(2) Do a check of the replacement oxygen masks [50]:

(a) Make sure the oxygen masks [50] are not torn or damaged.

(b) Make sure the oxygen masks [50] are clean and free from contamination such as:

1) dirt

2) grease

3) oil

4) unwanted material.

(c) Make sure the elastic straps are held securely to the oxygen masks [50].

SUBTASK 35-22-31-210-020

(3) Do a check of the oxygen supply hoses [53] on the replacement oxygen masks [50].

(a) Make sure the oxygen supply lines are not torn or damaged.

(b) Make sure the oxygen supply lines are soft and flexible.

(c) Make sure the color of the oxygen supply hoses [53] have not deteriorated.

(d) Make sure each oxygen mask is held securely to the oxygen supply hose.

SUBTASK 35-22-31-900-007

(4) If an oxygen mask or oxygen supply hose is not serviceable, replace the oxygen masks [50].

SUBTASK 35-22-31-420-012

(5) Do these steps to install the oxygen masks [50] to the oxygen box [59]:

(a) Attach the oxygen supply hoses [53] to the oxygen manifold [54] on the oxygen cylinder [55].

(b) Attach the mask lanyard [51] rings to the release lanyard [58].

1) Put the release lanyard [58] through one of the mask lanyard [51] rings.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

2) Attach the remaining mask lanyard [51] ring to the end of the release lanyard [58].

NOTE: The mask lanyard ring at the end of the release lanyard will keep the other mask lanyard ring in position.

(c) Attach the streamer lanyard [52] to the mask lanyard [51] ring at the end of the release lanyard [58].

SUBTASK 35-22-31-410-012

(6) Do this task: LSU Oxygen Mask Packing, TASK 35-22-31-420-802.

SUBTASK 35-22-31-860-006

(7) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-31-970-006

(8) Remove the report from the airplane logbook that states that the LSU oxygen mask(s) have been removed.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER OXYGEN MASK - CLEANING

1. General

A. This procedure has the following task:

(1) Oxygen mask assembly cleaning.

B. Clean the oxygen mask assembly and disinfect it with an isopropyl alcohol solution after each use.

C. This procedure gives instructions to clean the passenger oxygen masks. This includes the oxygen masks in the Passenger Service Unit (PSU), Attendant Service Unit (ASU), and Lavatory Service Unit (LSU).

D. Boeing recommends replacement of the oxygen mask assemblies within a 6 ft (1.8 m) radius of a suspected viral/bacterial infected passenger. Removed oxygen mask assemblies (mask, bag, and tubing) should be put in a biohazard disposal bag. For the most current guidance, refer to the latest communication from Boeing Customer Support (BCS).

TASK 35-22-31-100-801

2. Oxygen Mask Assembly Cleaning

A. General

(1) Before you do maintenance on an oxygen system component that contains an oxygen generator you must install a safety pin in the generator firing mechanism. The safety pin will let the generator be handled and stored. If the safety pin is not installed, the oxygen generator can fire.

(2) Before you do maintenance on an oxygen system component that contains an oxygen cylinder (CDS) you must install a safety pin in the actuator assembly. The safety pin will let the oxygen cylinder be handled and stored. If the safety pin is not installed, the oxygen cylinder can release oxygen.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
35-22-31-420-801	ASU Oxygen Mask Packing (P/B 201)
35-22-31-420-802	LSU Oxygen Mask Packing (P/B 201)
35-22-31-440-801	PSU Oxygen Mask Packing (P/B 201)
35-22-51-040-801	Oxygen Cylinder (CDS) Deactivation (P/B 201)

C. Tools/Equipment

Reference	Description
STD-6435	Respirator - Particulate (Meets NIOSH 42 CFR 84 Class N95, EN149 Class FFP2, or Better)
STD-6437	Goggles - Safety, Non Vented

D. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
B00541	Cleaner - General Purpose Household Detergent	

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G02418	Water - De-ionized	
G50140	Gloves - Protective, Latex or Nitrile	

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Oxygen Mask Assembly Cleaning

SUBTASK 35-22-31-910-011

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

SUBTASK 35-22-31-940-001

(2) Before you get access to the oxygen masks, put on the following personal protective equipment:

(a) safety goggles, STD-6437

(b) particulate respirator, STD-6435

(c) protective gloves, G50140.

NOTE: Nitrile gloves are preferred when in contact with alcohol.

SUBTASK 35-22-31-010-013

(3) Get access to the applicable oxygen masks in the passenger cabin.

SUBTASK 35-22-31-040-006

WARNING A FIRED OXYGEN GENERATOR GETS VERY HOT 450°F, (232°C) OR HIGHER AND CAN BURN YOU IF YOU TOUCH IT. YOU MUST NOT TOUCH THE OXYGEN GENERATOR UNTIL IT BECOMES COOL (APPROXIMATELY ONE HOUR).

(4) Deactivate the oxygen generator, do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 35-22-31-040-007

(5) Deactivate the oxygen cylinder, do this task: Oxygen Cylinder (CDS) Deactivation, TASK 35-22-51-040-801.

SUBTASK 35-22-31-210-021

(6) Make sure that the oxygen masks are not torn or damaged.

SUBTASK 35-22-31-100-001

(7) If the oxygen mask assembly is dirty or greasy, do these steps to clean the oxygen mask assembly:

(a) Mix a mild cleaning solution of general purpose household detergent cleaner, B00541, with warm water.

NOTE: Obey the instructions on the label.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Clean the interior and exterior surfaces of the facepiece and the exterior surfaces of the tubing and bag with a clean cotton wiper, G00034, soaked in cleaning solution.

NOTE: Do not disturb the mask diaphagms or do not permit cleaning solution to enter the mask tubing and reservoir bag.

(c) Rinse the mask assembly with warm water, and permit the mask assembly to air dry completely.

SUBTASK 35-22-31-100-002

(8) Do these steps to disinfect the mask assembly:

WARNING DO NOT GET ISOPROPYL ALCOHOL IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM THE ISOPROPYL ALCOHOL. KEEP THE ISOPROPYL ALCOHOL AWAY FROM SPARKS, FLAME, AND HEAT. ISOPROPYL ALCOHOL IS POISONOUS AND FLAMMABLE, WHICH CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

(a) Mix a disinfectant solution of 70 percent alcohol, B00130, and 30 percent de-ionized water, G02418.

(b) Wipe the mask assembly with a clean cotton wiper, G00034, soaked in disinfectant solution.

NOTE: Refer to the EPA List N or local health authority guidance for required contact/dwell time for isopropyl alcohol to be used as a disinfectant.

1) Make sure that the interior and exterior surfaces of the facepiece are thoroughly wiped.

(c) Let the mask assembly to air dry completely.

(d) Examine each mask assembly in a well lighted area.

1) Make sure that the mask assembly is visibly clean and free of contamination.

2) Make sure that the flappers and diaphragms are seated correctly.

(e) Discard the safety goggles, STD-6437, particulate respirator, STD-6435, and protective gloves, G50140.

NOTE: Refer to the airline, local health, safety and regulatory procedures for disposal of material.

WARNING CLEAN YOUR HANDS WITH SOAP AND FLUSH WITH HOT WATER. DIRTY HANDS WITH CONTAMINATION CAN CAUSE DISEASE AND ILLNESSES TO PERSONS.

(f) Clean your hands with soap and running hot water.

SUBTASK 35-22-31-840-001

(9) Do the applicable task(s) for the oxygen mask packing:

- ASU Oxygen Mask Packing, TASK 35-22-31-420-801
- LSU Oxygen Mask Packing, TASK 35-22-31-420-802
- PSU Oxygen Mask Packing, TASK 35-22-31-440-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ALTITUDE PRESSURE SWITCH - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Altitude Pressure Switch Removal

(2) Altitude Pressure Switch Installation.

TASK 35-22-41-000-801

2. Altitude Pressure Switch - Removal (S813)

(Figure 401)

A. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right

B. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

C. Remove the S813 Altitude Pressure Switch

SUBTASK 35-22-41-865-001

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 35-22-41-010-001

(2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 35-22-41-020-001

(3) Do these steps to remove the altitude pressure switch, S813 [1].

(a) Remove the cover from the J23 junction box.

(b) Disconnect the electrical connector [2] from the altitude pressure switch, S813 [1].

(c) Remove the two screws [3] that attach the altitude pressure switch, S813 [1] to the J23 junction box.

1) Keep the two screws [3]. These parts are used to install the altitude pressure switch, S813 [1].


(d) Remove the altitude pressure switch, S813 [1].

(e) If you will not install the altitude pressure switch, S813 [1] immediately, install the cover on the J23 junction box.

1) Attach a streamer to the junction box cover to show that the altitude pressure switch, S813 [1] is not installed.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

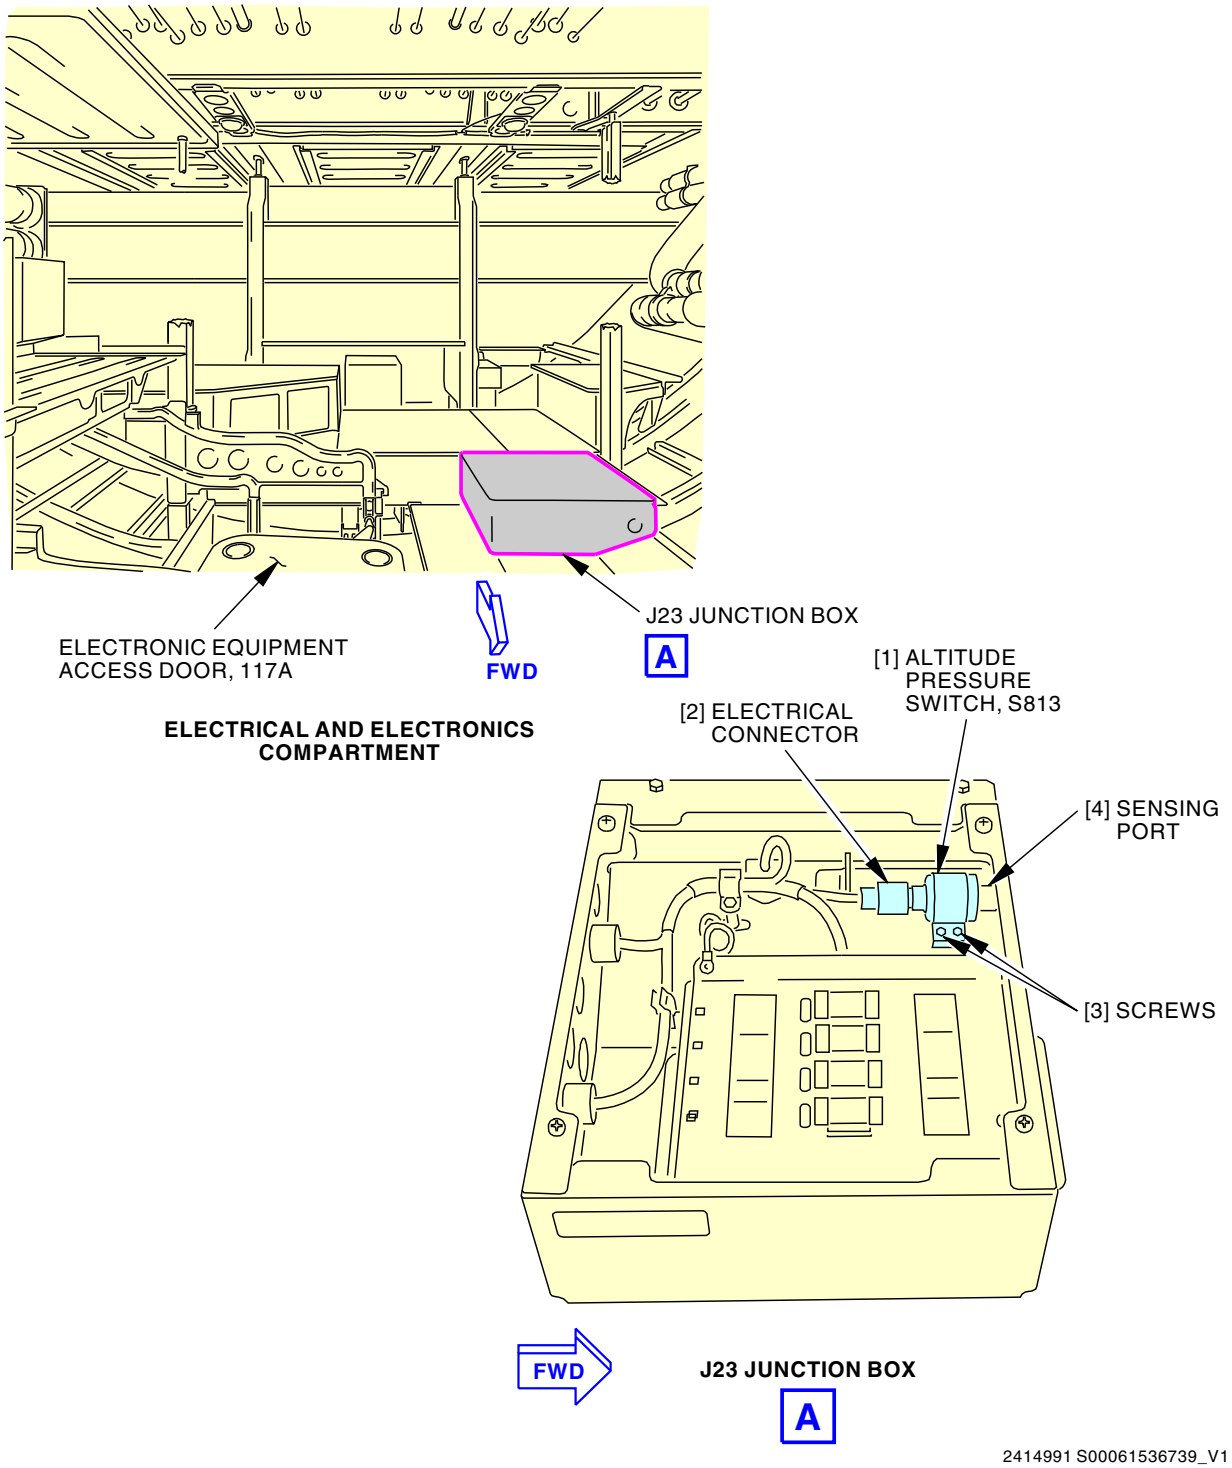

Altitude Pressure Switch - Removal/ Installation
Figure 401/35-22-41-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-41-400-801

3. Altitude Pressure Switch - Installation (S813)

(Figure 401)

A. References

Reference	Title
20-50-11-910-801	Standard Torque Values (P/B 201)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1914	Test Set - Air Data Model FLMTS (Flight Line Maintenance) Part #: ADSE 650 Supplier: 3BSK6 Part #: ADTS2000 Supplier: 52892 Part #: ADTS3350ER Supplier: 52892 Part #: ADTS405MKII Supplier: U0427 Part #: ADTS530 Supplier: U0427 Part #: ADTS552F Supplier: U0427 Part #: ADTS553F Supplier: U0427 Part #: ADTS554F Supplier: U0427 Part #: D60340MK Supplier: K1474 Part #: DPS1000 Supplier: 21844 Part #: MODEL 6300 Supplier: 0RDZ5 Part #: MPS34C Supplier: 48RQ2 Part #: MPS43B Supplier: A0197 Part #: MPS45 Supplier: 48RQ2 Part #: MPS49 Supplier: 48RQ2 Part #: TES9463 Supplier: 88277 Opt Part #: 01-0987-00 Supplier: 41364 Opt Part #: 18910480000 Supplier: 89944 Opt Part #: 18910920000 Supplier: 89944 Opt Part #: ADTS405F Supplier: U0427 Opt Part #: ADTS505 Supplier: U0427 Opt Part #: D60302 Supplier: K1474 Opt Part #: D60340 Supplier: K1474 Opt Part #: D60383 Supplier: K1474 Opt Part #: DPS350 Supplier: 21844 Opt Part #: DPS450 Supplier: 21844 Opt Part #: DPS500 Supplier: 21844 Opt Part #: MPS31C Supplier: 48RQ2 Opt Part #: MPS43 Supplier: A0197
COM-1931	Pump - Vacuum, Portable, Standard Duty Part #: 2546B-01 Supplier: 0NCC5 Part #: 2546C-01 Supplier: 0NCC5 Part #: 2546C-02 Supplier: 0NCC5 Opt Part #: 2545B-01 Supplier: 0NCC5 Opt Part #: 2545C-02 Supplier: 0NCC5
STD-1318	Hose - Vacuum, 1/4 Inch Inside Diameter (ID) Plastic Tube (Tygon-B44-30PT, Uniflex 650 or Similar)
STD-1319	Connector - 1/4 Inch ID Tee, Plastic, Vacuum Hose (to Attach Vacuum Gauge to Vacuum Hose)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description
STD-1320	Gauge - Vacuum
STD-1321	Valve - Shutoff
STD-3900	Adapter - Straight, Tube to Hose (meets AS5180D04 specification)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Altitude pressure switch, S813	35-22-41-01-005	PTF ALL

D. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
212	Flight Compartment - Right

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Altitude Pressure Switch Installation

SUBTASK 35-22-41-420-001

(1) Do these steps to install the altitude pressure switch, S813 [1]:

(a) If it is installed, remove the dust cover from the threaded end of the altitude pressure switch, S813 [1].

(b) Put the altitude pressure switch, S813 [1] in its position on the J23 junction box.

(c) Install the two screws [3] that attach the altitude pressure switch, S813 [1] to the J23 junction box.

(d) Tighten the two screws [3] (TASK 20-50-11-910-801).

(e) Install the electrical connector [2] on the altitude pressure switch, S813 [1].

G. S813 Altitude Pressure Switch Operational Test

SUBTASK 35-22-41-480-001

(1) Do these steps to install the test equipment on the altitude pressure switch, S813 [1]:

(a) Get access to the J23 junction box.

(b) Remove the dust cover to get access to the altitude pressure switch, S813 [1].

(c) Find the altitude pressure switch fitting through the hole in the forward side of the J23 junction box.

(d) Connect these components to the altitude pressure switch, S813 [1]:

NOTE: The altitude pressure switch, S813 can be moved from its position a small distance to attach the test equipment.

1) adapter, STD-3900
2) hose, STD-1318
3) connector, STD-1319
4) gauge, STD-1320
5) shutoff valve, STD-1321
6) vacuum pump, COM-1931
7) air data model test set, COM-1914.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-41-865-002

(2) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

NOTE: If these circuit breakers are closed, all the oxygen box doors will open when you do the operational test. This will cause all the oxygen masks to fall from the oxygen boxes.

SUBTASK 35-22-41-865-003

(3) Close this circuit breaker:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

SUBTASK 35-22-41-864-001

(4) Slowly decrease the pressure to the altitude pressure switch, S813 [1] until the PASS OXY ON light, on the P5-14 oxygen system module, comes on.

SUBTASK 35-22-41-212-001

(5) Make sure that the PASS OXY ON light comes on between 17.8 in. (452.1 mm) and 17.3 in. (439.4 mm) of mercury absolute (14,000 ±350 ft (4267 ±107 m) cabin altitude).

(a) Make sure that the two MASTER CAUTION lights and OVERHEAD annunciation on the master caution display come on.

(b) Push one of the two MASTER CAUTION lights to reset the system.

(c) Make sure that all of the annunciations on the master caution displays go out.

SUBTASK 35-22-41-863-001

CAUTION

DO NOT RELEASE THE VACUUM (PRESSURE) TOO QUICKLY AND SUDDENLY. IF YOU DO NOT OBEY, DAMAGE TO THE ALTITUDE PRESSURE SWITCH CAN OCCUR.

(6) Slowly release the vacuum (pressure) to the altitude pressure switch, S813 [1].

SUBTASK 35-22-41-080-001

(7) Do these steps to remove the altitude simulation test equipment from the altitude pressure switch, S813 [1]:

(a) Remove the test equipment.

(b) If it is necessary, install the two screws [3] that attach the altitude pressure switch, S813 [1] to the J23 junction box.

(c) Install the cover to the J23 junction box.

SUBTASK 35-22-41-865-004

(8) Open this circuit breaker for 1-2 seconds, then close the circuit breaker.

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND

ECCN 9E991 BOEING PROPRIETARY - See title page for details

NOTE: This is to reset the passenger oxygen control relay(s).

SUBTASK 35-22-41-865-005

(9) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

H. Put the Airplane Back to Its Usual Condition

SUBTASK 35-22-41-420-002

(1) Install the cover on the J23 junction box.

SUBTASK 35-22-41-410-001

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN CYLINDER (CDS) - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A deactivation of the passenger oxygen cylinder (CDS)

(2) An activation of the passenger oxygen cylinder (CDS).

B. All replacement oxygen cylinders are supplied with a safety pin. The safety pin is installed in the actuator assembly of the oxygen cylinder. The cylinder cannot release (start oxygen flow) when the safety pin is correctly installed.

C. The safety pin is to be installed (oxygen cylinder deactivation) whenever the cylinder or lavatory service unit is removed from the airplane. Once the cylinder or lavatory service unit is installed, the safety pin must be removed (oxygen cylinder activation) prior to returning the aircraft to service.

D. Each lavatory service unit has an oxygen cylinder. The oxygen cylinder is connected to the oxygen masks. The actuator assembly on the cylinder has a discharge indicator tape and a release lanyard. If the discharge indicator tape is damaged or the release lanyard is removed, oxygen has been released from the cylinder. The flow of oxygen is begun by the downward pull of the oxygen mask by the passenger. The cylinder must be correctly activated to release oxygen.

TASK 35-22-51-040-801

2. Oxygen Cylinder (CDS) Deactivation

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-31-420-802	LSU Oxygen Mask Packing (P/B 201)
35-22-51-000-801	LSU Oxygen Cylinder (CDS) Removal (P/B 401)
35-22-51-400-801	LSU Oxygen Cylinder (CDS) Installation (P/B 401)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-14584	Safety Pin and Flag - Constant Dispensing System Part #: C35003-10 Supplier: 81205 Part #: E71401-00 Supplier: 16827 Opt Part #: 4498016-000 Supplier: D1379

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Deactivation

SUBTASK 35-22-51-910-001

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-51-010-001

(2) If it is necessary to get access to the oxygen cylinder, open the service unit:

(a) Put a tool into the latch access hole.

(b) Push up on the tool to operate the door latch.

(c) Open the oxygen box door.

(d) Let the oxygen masks come out.

SUBTASK 35-22-51-210-001

(3) Do these checks at the actuator assembly on the oxygen cylinder, before you deactivate the oxygen cylinder.

(a) Make sure that the discharge indicator tape has no damage or holes.

NOTE: A damaged discharge indicator tape will show that an over pressure condition caused oxygen to flow from the relief port.

(b) Make sure that the release lanyard is fully engaged in the actuator assembly.

NOTE: A disengaged release lanyard will show that an oxygen cylinder release caused oxygen to flow from the masks.

SUBTASK 35-22-51-900-001

(4) If the discharge indicator tape is damaged or the release lanyard is disengaged, replace the applicable oxygen cylinder.

(a) To replace the Lavatory Service Unit (LSU) oxygen cylinder, do these tasks:

- LSU Oxygen Cylinder (CDS) Removal, TASK 35-22-51-000-801
- LSU Oxygen Cylinder (CDS) Installation, TASK 35-22-51-400-801.

E. Oxygen Cylinder (CDS) Deactivation

SUBTASK 35-22-51-480-001

WARNING

MAKE SURE YOUR HANDS, TOOLS, EQUIPMENT, AND CLOTHING USED IN THE WORK AREA DOES NOT HAVE DIRT, OIL, OR GREASE ON THEM. DO NOT LET THIS CONTAMINATION GO INTO THE OXYGEN SYSTEM. IF THIS CONTAMINATION MIXES WITH OXYGEN GAS, THEY CAN IGNITE. INJURY TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Install the safety pin and flag, COM-14584, into the actuator assembly of the oxygen cylinder.

NOTE: The safety pin prevents the accidental removal of the lanyard. If the lanyard is removed, the oxygen cylinder will release oxygen. If the oxygen is released, it will be necessary to replace the oxygen cylinder.

SUBTASK 35-22-51-410-001

(2) If no more maintenance is necessary, close the service unit.

(a) To pack the oxygen masks, do this task: LSU Oxygen Mask Packing, TASK 35-22-31-420-802.

(b) Close the oxygen box door and push on it to engage the door latch.

NOTE: The latch will usually make a "click" noise when it fully engages.


SUBTASK 35-22-51-970-001

(3) Write in the airplane records to show that the oxygen cylinders are deactivated.

NOTE: Before the oxygen cylinders can be used, they must be activated.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

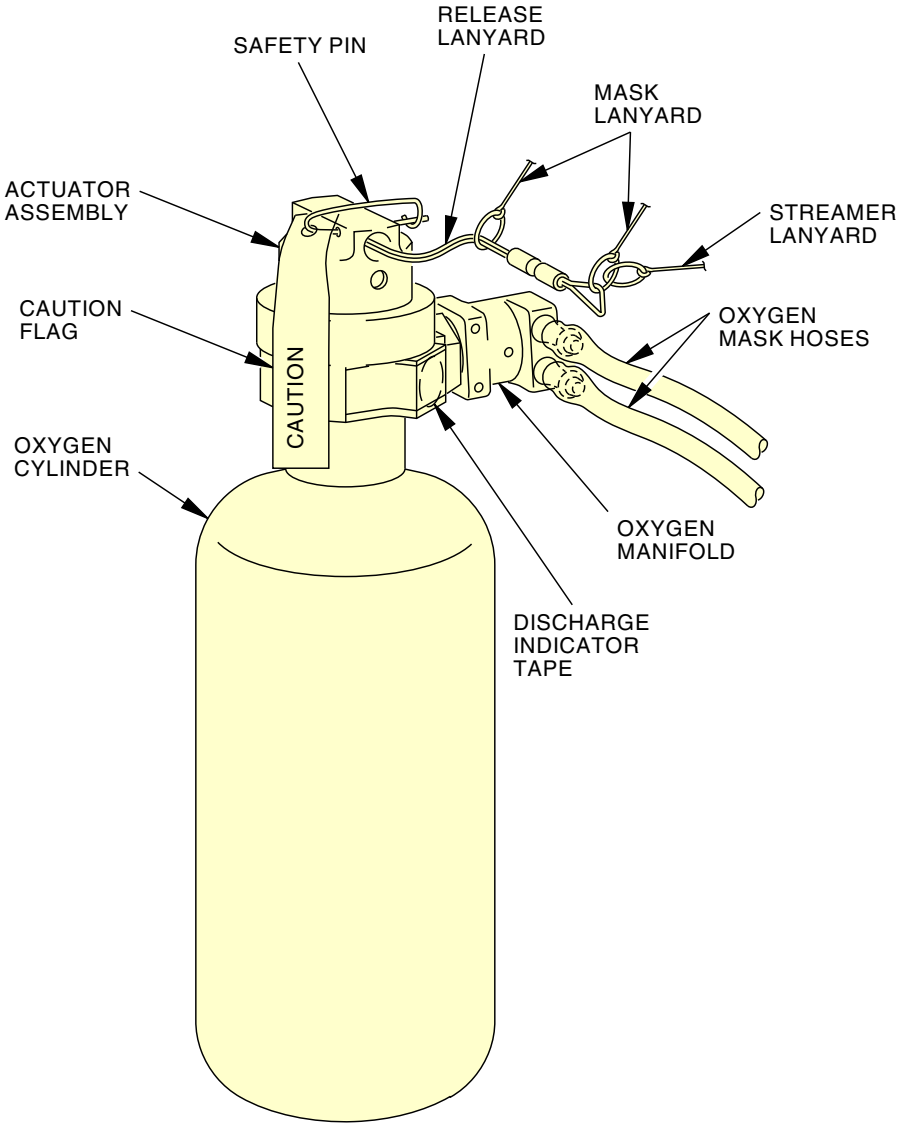

CDS OXYGEN CYLINDER (EXAMPLE)

2414952 S00061536663_V1

Oxygen Cylinder (CDS) Activation/Deactivation
Figure 201/35-22-51-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-51-440-801

3. Oxygen Cylinder (CDS) Activation

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-31-400-803	LSU Oxygen Mask Installation (P/B 401)
35-22-31-420-802	LSU Oxygen Mask Packing (P/B 201)
35-22-51-000-801	LSU Oxygen Cylinder (CDS) Removal (P/B 401)
35-22-51-400-801	LSU Oxygen Cylinder (CDS) Installation (P/B 401)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-14584	Safety Pin and Flag - Constant Dispensing System Part #: C35003-10 Supplier: 81205 Part #: E71401-00 Supplier: 16827 Opt Part #: 4498016-000 Supplier: D1379

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Activation

SUBTASK 35-22-51-910-002

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-22-51-410-002

(2) If it is necessary to get access to the oxygen cylinder, open the service unit:

(a) Put a tool into the latch access hole.

(b) Push up on the tool to operate the door latch.

(c) Open the oxygen box door.

(d) Let the oxygen masks come out.

SUBTASK 35-22-51-080-001

(3) Do these checks at the actuator assembly on the oxygen cylinder, before you activate the oxygen cylinder.

(a) Make sure that the discharge indicator tape has no damage or holes.

NOTE: A damaged discharge indicator tape will show that an over pressure condition caused oxygen to flow from the relief port.

(b) Make sure that the release lanyard assembly is fully engaged in the actuator assembly.

NOTE: A disengaged release lanyard will show that an oxygen cylinder release caused oxygen to flow from the masks.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Make sure that the safety pin and flag, COM-14584, are installed in the actuator assembly.

NOTE: The safety pin prevents the accidental removal of the release lanyard. If the release lanyard is removed, the oxygen cylinder will release oxygen. If the oxygen is released, it will be necessary to replace the oxygen cylinder.

SUBTASK 35-22-51-210-002

(4) If the discharge indicator tape is damaged or the release lanyard is disengaged, replace the applicable oxygen cylinder.

(a) To replace the Lavatory Service Unit (LSU) oxygen cylinder, do these tasks:

- LSU Oxygen Cylinder (CDS) Removal, TASK 35-22-51-000-801
- LSU Oxygen Cylinder (CDS) Installation, TASK 35-22-51-400-801.

E. Oxygen Cylinder (CDS) Activation

SUBTASK 35-22-51-410-003

(1) To install the oxygen masks, do this task: LSU Oxygen Mask Installation, TASK 35-22-31-400-803.

SUBTASK 35-22-51-080-002

WARNING

REMOVE THE SAFETY PIN FROM THE OXYGEN CYLINDER. THE SAFETY PIN PREVENTS THE RELEASE OF OXYGEN. IF THE SAFETY PIN IS IN THE OXYGEN CYLINDER DURING AN EMERGENCY, THE OXYGEN SYSTEM WILL NOT OPERATE. THIS CAN CAUSE INJURIES TO PASSENGERS.

(2) Remove the safety pin and flag, COM-14584, from the actuator assembly of the oxygen cylinder.

NOTE: The safety pin prevents the accidental removal of the release lanyard. If the release lanyard is removed, the oxygen cylinder will release oxygen. If the oxygen is released, it will be necessary to replace the oxygen cylinder.

SUBTASK 35-22-51-210-003

WARNING

MAKE SURE THAT THE RELEASE LANYARD AND MASK LANYARDS CAN MOVE FREELY. THE LANYARDS PULL THE RELEASE PIN WHEN THE MASKS COME DOWN DURING AN EMERGENCY. IF THE ROUTING OF THE RELEASE LANYARD AND MASK LANYARDS IS INCORRECT, THE OXYGEN DISTRIBUTION SYSTEM WILL NOT OPERATE. THIS CAN CAUSE INJURIES TO PASSENGERS.

(3) Make sure that the release lanyard and mask lanyards can move freely.

SUBTASK 35-22-51-410-004

(4) If no more maintenance is necessary, close the service unit.

(a) To pack the oxygen masks, do this task: LSU Oxygen Mask Packing, TASK 35-22-31-420-802.

(b) Close the oxygen box door and push on it to engage the door latch.

NOTE: The latch will usually make a "click" noise when it fully engages.

SUBTASK 35-22-51-970-002

(5) Write in the airplane records to show that the oxygen cylinders are activated.

NOTE: Before the oxygen cylinders can be used, they must be activated.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OXYGEN CYLINDER (CDS) - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) A removal of the LSU oxygen cylinder (CDS)

(2) An installation of the LSU oxygen cylinder (CDS).

B. Before you do maintenance on an oxygen system component that contains an oxygen cylinder, you must install a safety pin in the oxygen cylinder actuator assembly. The safety pin will permit the oxygen cylinder to be handled and stored. If the safety pin is not installed, oxygen release can occur.

C. All spare oxygen cylinders are supplied with a safety pin installed in the actuator assembly.

D. When you do the removal and installation procedures for the LSU, it is necessary to open the oxygen box door. When the oxygen box door is opened, the oxygen masks will drop (deploy). After you install the oxygen cylinder, you must then do the packing procedure for the oxygen masks.

TASK 35-22-51-000-801

2. LSU Oxygen Cylinder (CDS) Removal

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-22-31-000-803	LSU Oxygen Mask Removal (P/B 401)
35-22-51-040-801	Oxygen Cylinder (CDS) Deactivation (P/B 201)

B. Tools/Equipment

Reference	Description
STD-8416	Cutter - Wire, Diagonal or Side, 6 in. (150 mm)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Removal

SUBTASK 35-22-51-010-002

(1) Do these steps to open the Lavatory Service Unit (LSU) oxygen box [1]:

(a) Put a tool into the latch access hole.

(b) Push up on the tool to operate the door latch.

(c) Open the oxygen box door.

(d) Let the oxygen masks fall.

(e) Do not pull on the oxygen masks.

NOTE: If you pull on the oxygen masks, the oxygen cylinder will release oxygen.

(f) Put the masks and streamer out of the way during the maintenance.

SUBTASK 35-22-51-210-004

(2) Do these checks at the actuator assembly [5] on the oxygen cylinder [2], before you deactivate the oxygen cylinder [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the discharge indicator tape [7] has no damage or holes.

NOTE: A damaged discharged indicator tape will show that an over pressure condition caused oxygen to flow from the relief port.

(b) Make sure that the release lanyard [6] is fully engaged in the actuator assembly [5].

NOTE: A disengaged release lanyard will show that the oxygen cylinder released oxygen to flow from the masks.

SUBTASK 35-22-51-040-001

(3) If the oxygen cylinder [2] has not released oxygen, do this task: Oxygen Cylinder (CDS) Deactivation, TASK 35-22-51-040-801.

NOTE: The oxygen cylinder deactivation is necessary to prevent the accidental release of oxygen. The release of oxygen will make it necessary to replace the oxygen cylinder.

E. LSU Oxygen Cylinder (CDS) Removal

SUBTASK 35-22-51-020-001

(1) Do this task: LSU Oxygen Mask Removal, TASK 35-22-31-000-803.

SUBTASK 35-22-51-020-002

(2) Disconnect the deployment straps [4] from the oxygen box [1].

(a) Push the strap end through the slot on the door.

(b) Put the loose end of the strap out of the way during maintenance.

SUBTASK 35-22-51-020-003

(3) Do these steps to remove the oxygen cylinder [2]:

(a) Make sure that the safety pin is installed in the actuator assembly [5].


(b) Cut and remove the cable ties [3] that attach the oxygen cylinder [2] to the oxygen box [1] with the diagonal or side wire cutter, STD-8416.

1) Discard the cable ties [3].

(c) Remove the oxygen cylinder [2] from the oxygen box [1].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

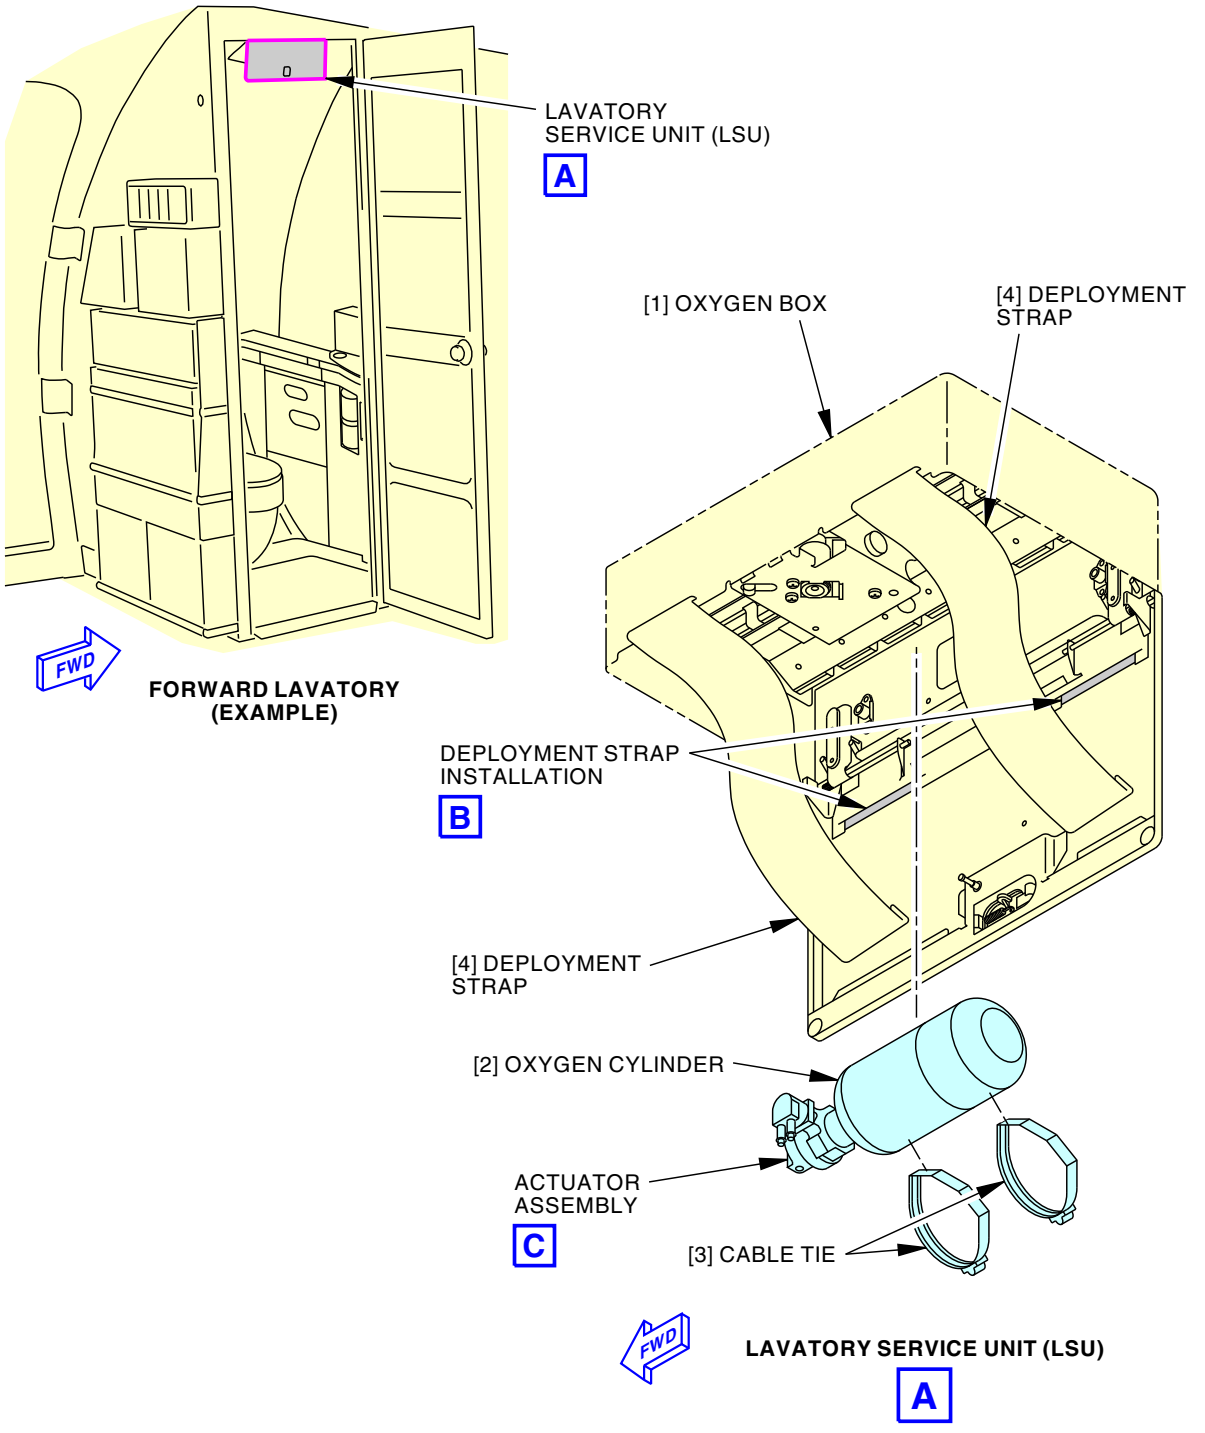


LSU Oxygen Cylinder (CDS) Installation
Figure 401/35-22-51-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

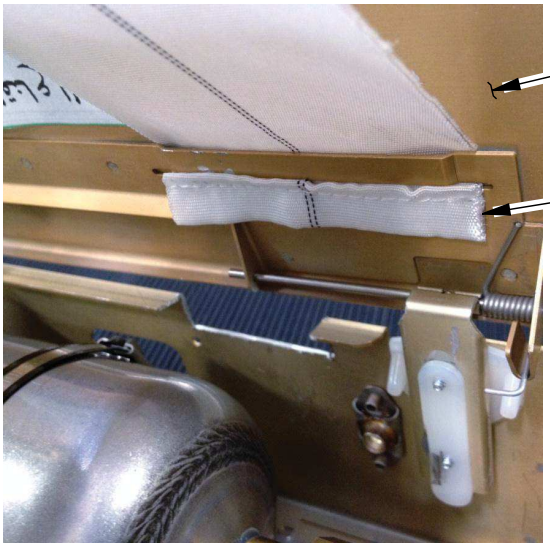

DEPLOYMENT STRAP INSTALLATION

B

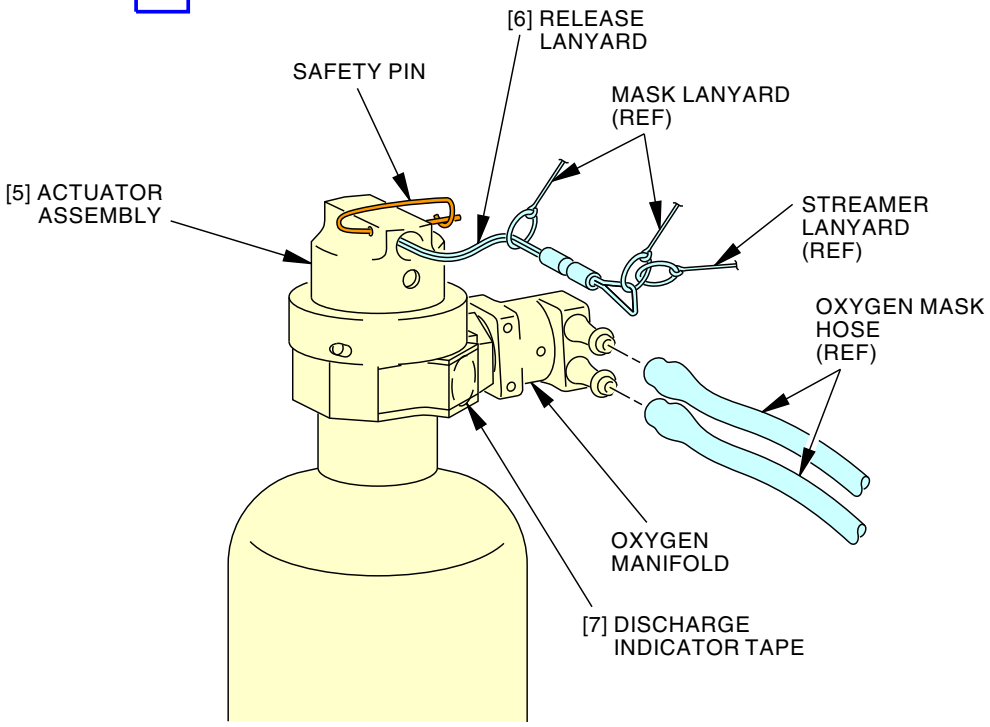

ACTUATOR ASSEMBLY

C

2414994 S00061536749_V2

LSU Oxygen Cylinder (CDS) Installation
Figure 401/35-22-51-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-22-51-400-801

3. LSU Oxygen Cylinder (CDS) Installation

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-22-31-400-803	LSU Oxygen Mask Installation (P/B 401)
35-22-51-440-801	Oxygen Cylinder (CDS) Activation (P/B 201)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-14752	Installation Tool - Cable Tie (Used with 0.18-inch, 0.25-inch, 0.31-inch wide bands) Part #: GS4MT-E Supplier: 06383 Opt Part #: GS4MT Supplier: 06383

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Oxygen cylinder	35-21-00-01-065	PTF ALL
3	Cable tie	35-21-00-01-070	PTF ALL

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Prepare for the Installation

SUBTASK 35-22-51-210-005

(1) Do these checks on the oxygen cylinder [2] before installation.

(a) Make sure that the discharge indicator tape [7] has no damage or holes.

NOTE: A damaged discharge indicator tape will show that an over pressure condition caused oxygen to flow from the relief port.

(b) Make sure that the safety pin and warning flag is installed in the actuator assembly [5].

NOTE: The safety pin prevents the accidental removal of the release lanyard. If the release lanyard is removed, the oxygen cylinder will release oxygen. If the oxygen is released, it will be necessary to replace the oxygen cylinder.

SUBTASK 35-22-51-800-001

(2) If the oxygen cylinder [2] is not serviceable, discard it.

SUBTASK 35-22-51-800-002

(3) If the oxygen cylinder [2] is serviceable, do the subsequent procedure.

F. LSU Oxygen Cylinder (CDS) Installation

SUBTASK 35-22-51-410-005

(1) Put the oxygen cylinder [2] in its position in the oxygen box [1], with the part number visible.

NOTE: The part number placard and oxygen manifold will be set in the direction of the oxygen box door.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-22-51-410-006

(2) Install the oxygen cylinder [2] to the oxygen box [1].

(a) Loosely attach the oxygen cylinder [2] and new cable ties [3] to the oxygen box [1].

(b) Adjust the cable tie installation tool, COM-14752, to tension setting 8.

(c) Tighten the cable ties [3] with the cable tie installation tool, COM-14752.

SUBTASK 35-22-51-420-001

(3) Install the deployment straps [4].

(a) Push the loose end of the strap through the slot on the door.

(b) Pull the strap back through the slot until it stops on the strap seam.

SUBTASK 35-22-51-420-002

(4) Do this task: LSU Oxygen Mask Installation, TASK 35-22-31-400-803.

SUBTASK 35-22-51-440-001

(5) Do this task: Oxygen Cylinder (CDS) Activation, TASK 35-22-51-440-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE OXYGEN SYSTEMS - CLEANING

1. General

A. This procedure contains this task:

(1) Clean the Portable Oxygen System Components.

B. When you do maintenance on the oxygen system, it is important that the work area is clean and free from contamination. If the work area is not clean, these conditions can occur:

(1) When contamination and an ignition source are near the oxygen, a fire or an explosion can occur.

(2) Contamination can inhibit the usual operation of the oxygen equipment.

(3) Contamination can supply dangerous fumes to the users of the oxygen equipment.

C. Clean and use a disinfectant on the oxygen mask face pieces after each use.

D. All oxygen system components must be clean and dry when they are installed.

TASK 35-31-00-100-801

2. Clean the Portable Oxygen System Components

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
SOPM 20-30-80	Solvents For General Cleaning of Metal (Series 80)

B. Consumable Materials

Reference	Description	Specification
B00541	Cleaner - General Purpose Household Detergent	
B01031	Cleaner - Disinfectant - West Wecodyne	
B01032	Cleaner - Disinfectant, Topical Gel - Airwick Antimicrobial	
B01033	Cleaner - Disinfectant - Lysol	
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G02186	Seal - Closed Cell Silicone Foam Rubber, Hydraulic Fluid Resistant	BMS1-68 Form III
G50140	Gloves - Protective, Latex or Nitrile	

C. Location Zones

Zone	Area
200	Upper Half of Fuselage
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Clean the Portable Oxygen Cylinders

SUBTASK 35-31-00-910-001

(1) To read and obey the safety precautions and general instructions before you do the maintenance, do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-31-00-140-001

(2) To remove surface contamination from the portable oxygen cylinder, do this step:

(a) Rub the component(s) with a clean, dry, cotton wiper, G00034.

SUBTASK 35-31-00-140-002

(3) If you cannot remove the surface contamination with a dry cloth only, do this step:

WARNING ONLY USE CLEANING SOLVENTS ON THE OUTSIDE OF THE OXYGEN SYSTEM COMPONENTS. DO NOT USE CLEANING SOLVENTS ON THE INSIDE OF THE OXYGEN SYSTEM COMPONENTS.

(a) Clean the contamination with a clean cotton wiper, G00034 and an approved cleaning solvent, (SOPM 20-30-80).

SUBTASK 35-31-00-160-001

(4) Do these steps to clean the portable oxygen cylinder subassembly component(s):

(a) Remove the portable oxygen cylinder from the airplane.

(b) Use the instructions in the manufacturers overhaul manual to clean the component(s).

(c) Fully service the portable oxygen cylinder.

(d) Install the oxygen cylinder(s) in the correct location.

(e) Connect the oxygen mask hose to the oxygen cylinder outlet.

E. Clean the Portable Oxygen Cylinder Masks

SUBTASK 35-31-00-100-001

(1) PORTABLE OXYGEN CYLINDERS WITH SCOTT / AVOX PN 28301 DISPOSABLE OXYGEN MASKS:

(a) Replace the mask if it is used or dirty.

NOTE: The PN 28301 mask is used one time, then discarded and replaced. Do not try to clean or repair this mask.

(b) Rub the mask container with a dry cotton wiper, G00034 to remove the surface contamination, if it is necessary.

SUBTASK 35-31-00-910-002

(2) Read and obey the safety precautions and general instructions before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-31-00-160-002

(3) Use one of these detergent disinfectants (or equivalent) to clean the oxygen mask(s):

(a) general purpose household detergent cleaner, B00541

(b) West Wecodyne cleaner, B01031

(c) Airwick Antimicrobial cleaner, B01032

(d) Lysol cleaner, B01033

SUBTASK 35-31-00-160-003

(4) Put on Latex or Nitrile protective gloves, G50140 before handling the mask assembly. Discard the gloves when the cleaning procedure is complete.

(5) Mix a solution of detergent disinfectant with warm water.

NOTE: Obey the instructions on the label.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-31-00-160-004

(6) Apply the solution to the face piece with a cotton wiper, G00034 or a seal, G02186.

SUBTASK 35-31-00-160-005

(7) Rinse the face piece in clear, warm water.

SUBTASK 35-31-00-160-006

(8) Completely dry the face piece with a dry cotton wiper, G00034.

SUBTASK 35-31-00-420-001

(9) Position the oxygen mask on the portable oxygen cylinder.

(a) Connect the oxygen mask hose to the outlet of the oxygen cylinder.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE OXYGEN CYLINDER - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A replacement of the portable oxygen cylinder mask

(2) A replacement of the portable oxygen cylinder battery.

TASK 35-31-01-960-802

2. Replace Portable Oxygen Cylinder Mask

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Mask Replacement

SUBTASK 35-31-01-860-001

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (Oxygen System General Maintenance Practices, TASK 35-00-00-910-801).

SUBTASK 35-31-01-010-005

(2) Open the stowage compartment door, if applicable to get access to the portable pulse oxygen cylinder.

SUBTASK 35-31-01-020-001

(3) Loosen the straps that holds the portable pulse oxygen cylinder in place, if applicable.

(a) Remove the portable pulse oxygen cylinder.

SUBTASK 35-31-01-960-002

(4) Remove the portable oxygen mask from the mask tote.

(5) Grasp the faceplate of the mask and the hose about 5 inches from the mask.

(6) Disconnect the hose from the mask.

(7) Push the hose onto the new mask until it touches the faceplate.

(8) Stow mask and hose in the mask tote.

SUBTASK 35-31-01-410-007

(9) Put the portable pulse oxygen cylinder in the designated stowage area and secure it in place with the applicable straps.

——— END OF TASK ———

TASK 35-31-01-960-803

3. Replace Portable Oxygen Cylinder Battery

(Figure 201)

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
35-31-01-710-804	Portable Oxygen Cylinder (Electronic Pulse Delivery) Battery - Operational Test (P/B 501)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Battery Replacement

SUBTASK 35-31-01-910-006

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (Oxygen System General Maintenance Practices, TASK 35-00-00-910-801).

SUBTASK 35-31-01-010-006

(2) Open the stowage compartment door, if applicable to get access to the portable pulse oxygen cylinder.

SUBTASK 35-31-01-020-002

(3) Loosen the straps that holds the portable pulse oxygen cylinder in place, if applicable.

(a) Remove the portable pulse oxygen cylinder.

SUBTASK 35-31-01-210-013

(4) Make sure that the portable oxygen cylinder ON/OFF lever is in the OFF position.

SUBTASK 35-31-01-020-003

(5) Remove the four screws that attach the cover.

SUBTASK 35-31-01-020-004

(6) Remove the cover from the portable pulse oxygen cylinder.

SUBTASK 35-31-01-020-005

(7) Remove the three batteries.

SUBTASK 35-31-01-960-004

(8) Put three new batteries into their positions.

SUBTASK 35-31-01-420-001

(9) Put the cover on the portable pulse oxygen cylinder.

SUBTASK 35-31-01-420-002

(10) Install the four screws that attach the cover.

D. Installation Test

SUBTASK 35-31-01-710-001

(1) Do this task: Portable Oxygen Cylinder (Electronic Pulse Delivery) Battery - Operational Test, TASK 35-31-01-710-804

E. Put the Aircraft Back to its Usual Condition

SUBTASK 35-31-01-420-003

(1) Put the portable pulse oxygen cylinder in its position.

(a) Tighten the straps that holds the portable pulse oxygen cylinder in place, if applicable.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-31-01-410-008

(2) Close the stowage compartment door, if applicable.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

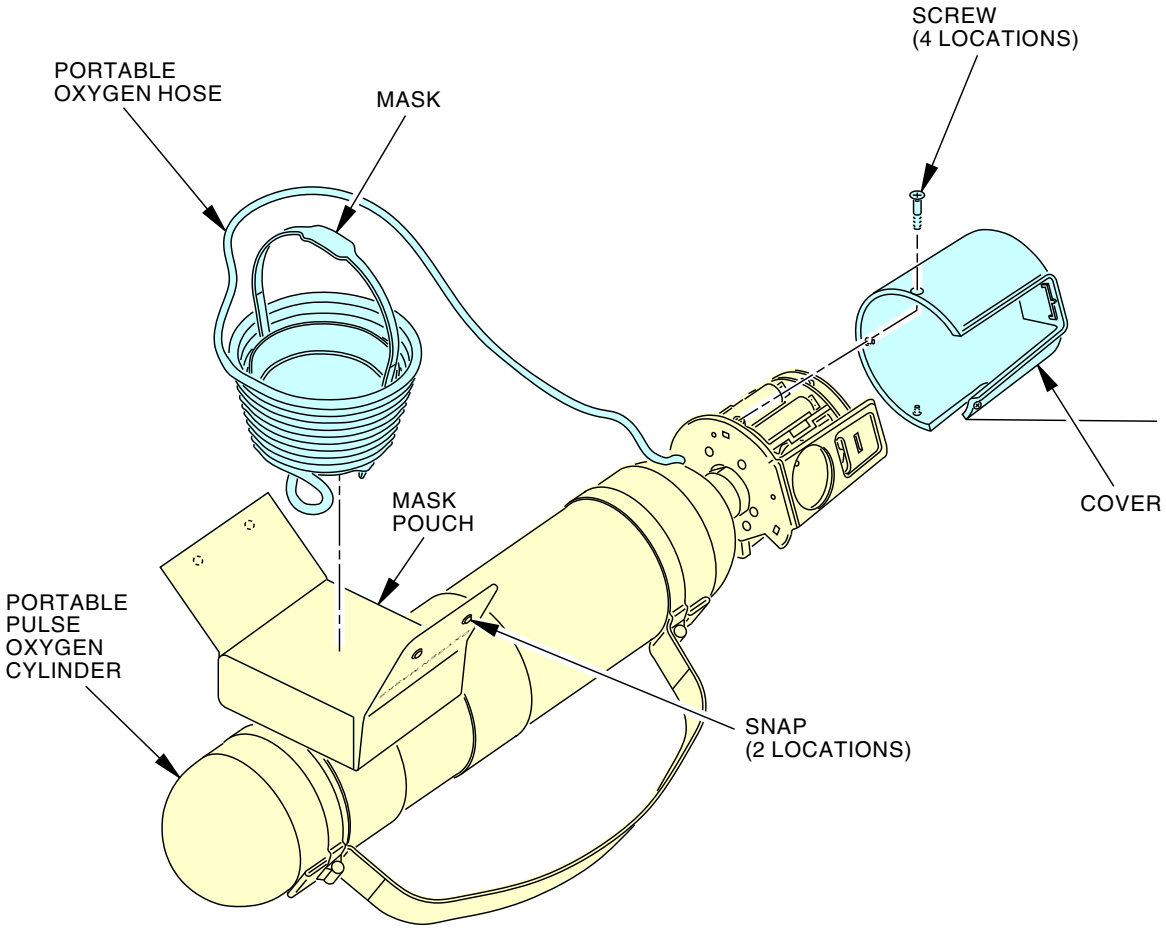

**PORTABLE PULSE OXYGEN CYLINDER
(BE AERO)**

2414997 S00061536763_V3

**Replace Portable Oxygen Cylinder Battery
Figure 201/35-31-01-990-807**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE OXYGEN CYLINDER - REMOVAL/INSTALLATION

1. General

A. This procedure has this task:

(1) Replace Portable Oxygen Cylinder.

B. The portable oxygen cylinders are installed at different locations in the passenger compartment. Do not try to adjust a unit in the field. Remove any portable oxygen cylinders that do not operate correctly. Make sure approved persons repair any damaged oxygen cylinders.

TASK 35-31-01-960-801

2. Replace Portable Oxygen Cylinder

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-31-01-210-801	Portable Oxygen Cylinder (Electronic Pulse Delivery) - General Visual Inspection (P/B 601)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Portable pulse oxygen cylinder	35-31-01-04B-015	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Portable Oxygen Cylinder Removal

SUBTASK 35-31-01-910-004

(1) Read and obey the safety precautions and general instructions for the oxygen system before the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-31-01-010-003

(2) Open the stowage compartment door, if applicable, to get access to the portable pulse oxygen cylinder [2].

SUBTASK 35-31-01-000-002

(3) Loosen the straps that holds the portable pulse oxygen cylinder [2] in place, if applicable.

(a) Remove the portable pulse oxygen cylinder [2].

SUBTASK 35-31-01-410-004

(4) Close the stowage compartment door, if applicable.

E. Portable Oxygen Cylinder Installation

SUBTASK 35-31-01-010-004

(1) Open the stowage compartment door, if applicable.

SUBTASK 35-31-01-210-025

(2) Make sure that the portable pulse oxygen cylinder [2] is serviceable (TASK 35-31-01-210-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-31-01-400-002

(3) Put the portable pulse oxygen cylinder [2] in the designated stowage area and secure it in place with the applicable straps.

(a) Connect the portable oxygen hose to the outlet port on the manifold assembly, if required by national authority.

1) If the mask is inside the mask tote, open the tote, connect the portable oxygen hose to the HI outlet port of the pressure regulator, and seal the bag opening with masking tape.

SUBTASK 35-31-01-410-005

CAUTION

DO NOT PUT THE OXYGEN MASK HOSE NEAR THE ADJACENT STRUCTURE TO PREVENT RUBS OR KINKS. RUBS OR KINKS CAN CAUSE DAMAGE.

(4) Make sure that the portable oxygen hose and the mask is stowed correctly.

(a) Fold the strap alongside the cylinder.

(b) Place the mask in the mask tote.

(c) Secure the strap and the mask tote to the cylinder with Velcro straps on cylinder.

(d) Make sure that the portable oxygen hose is connected to the bottle.


1) Make sure that the portable pulse oxygen cylinder [2] is installed in the bracket so that the gauge is visible and the mask hose is not chaffing on any structure.

SUBTASK 35-31-01-410-006

(5) Close the stowage compartment door, if applicable.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

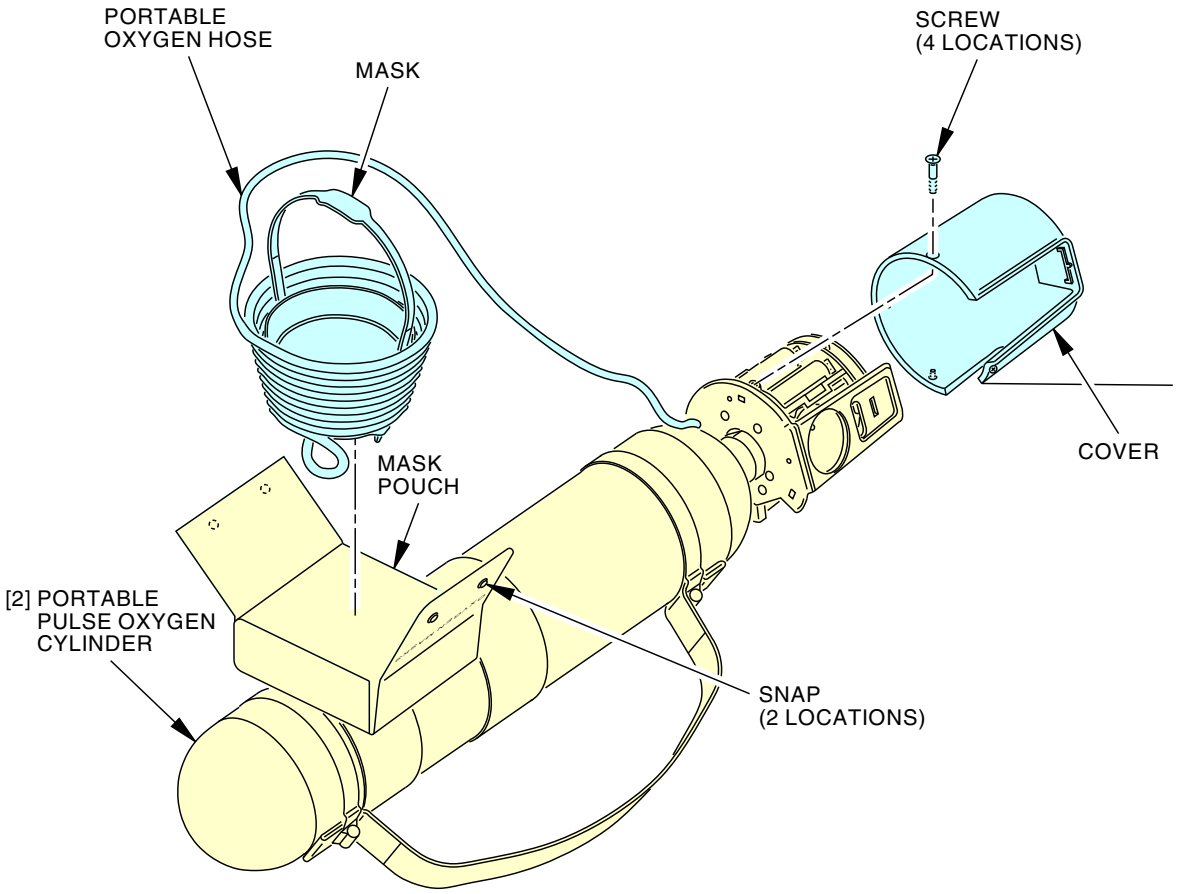


**PORTABLE OXYGEN CYLINDER
(BE AERO)**

3065200 S0000827310_V1

**Portable Oxygen Equipment Replacement
Figure 401/35-31-01-990-801 (Sheet 1 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

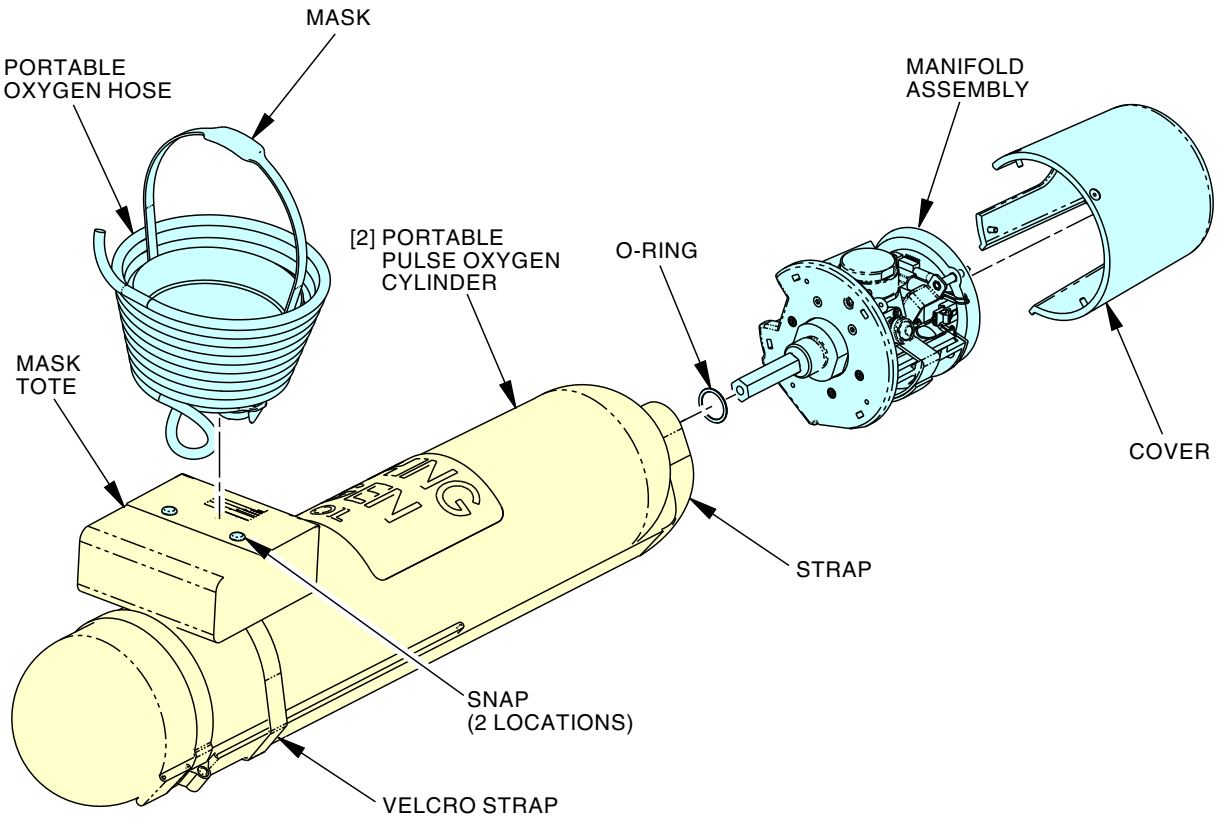

**PORTABLE PULSE OXYGEN CYLINDER
(EXAMPLE)**

2822851 S0000653365_V1

**Portable Oxygen Equipment Replacement
Figure 401/35-31-01-990-801 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE OXYGEN CYLINDER - ADJUSTMENT/TEST

1. General

A. This procedure has these tasks:

(1) An operational test of the portable oxygen cylinder battery

(2) An operational test of the portable oxygen cylinder mounting bracket

(3) An operational test of the portable oxygen cylinder shutoff valve and regulator.

TASK 35-31-01-710-804

2. Portable Oxygen Cylinder (Electronic Pulse Delivery) Battery - Operational Test

(Figure 501)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-31-01-960-803	Replace Portable Oxygen Cylinder Battery (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Test

SUBTASK 35-31-01-910-007

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (Oxygen System General Maintenance Practices, TASK 35-00-00-910-801).

D. Procedure

SUBTASK 35-31-01-010-007

(1) Get access to the portable oxygen cylinder [1].

NOTE: The portable oxygen cylinder [1] is in different locations in the airplane.

SUBTASK 35-31-01-700-001

(2) Push the battery indicator button [4] on the portable oxygen cylinder [1].


(a) Make sure that the battery indication light [5] comes on.

SUBTASK 35-31-01-960-005

(3) If the battery indication light [5] does not comes on. Do this task: Replace Portable Oxygen Cylinder Battery, TASK 35-31-01-960-803

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

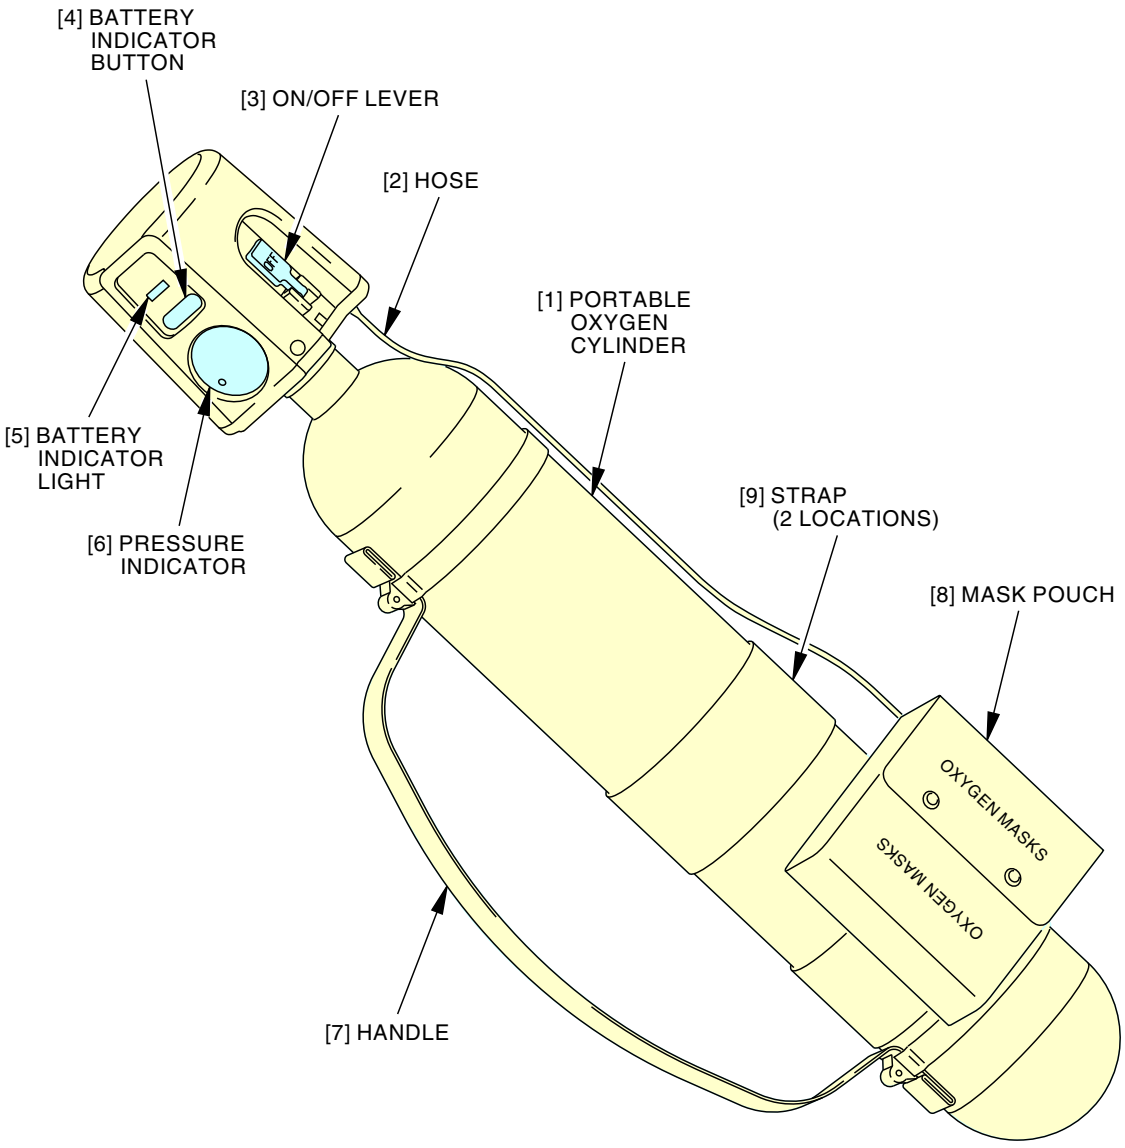

2886990 S0000686132_V1

Portable Oxygen Cylinder Battery - Operational Test
Figure 501/35-31-01-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-31-01-710-805

3. Portable Oxygen Cylinder (Electronic Pulse Delivery) Mounting Bracket - Operational Test

NOTE: This procedure is a scheduled maintenance task.

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Mounting Bracket Operational Check

SUBTASK 35-31-01-860-003

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-31-01-010-011

(2) Get access to the portable pulse oxygen cylinder.

SUBTASK 35-31-01-020-009

(3) Open the clamp which holds the portable pulse oxygen cylinder to the upper mounting bracket.

(a) Make sure that the clamp unlatches smoothly without jamming.

SUBTASK 35-31-01-710-003

(4) Make sure that the portable pulse oxygen cylinder can be removed from the mounting brackets.

SUBTASK 35-31-01-710-004

(5) Re-install the portable pulse oxygen cylinder into the mounting brackets.

SUBTASK 35-31-01-710-005

(6) Make sure that the portable pulse oxygen cylinder is securely attached by its mounting brackets.

——— END OF TASK ———

TASK 35-31-01-710-806

4. Portable Oxygen Cylinder (Electronic Pulse Delivery) Shutoff Valves and Regulators - Operational Test

NOTE: This procedure is a scheduled maintenance task.

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Consumable Materials

Reference	Description	Specification
B50073	Alcohol - Isopropyl	ASTM D 770

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Shutoff Valves and Regulators Operational Check

SUBTASK 35-31-01-860-002

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-31-01-010-010

(2) Get access to the portable oxygen cylinder [1].

SUBTASK 35-31-01-020-008

(3) Open the clamp which holds the portable oxygen cylinder [1] in place.

(4) Remove the portable oxygen cylinder [1].

SUBTASK 35-31-01-960-007

(5) Remove the portable oxygen mask from the mask tote.

SUBTASK 35-31-01-210-022

(6) Set the Shutoff Valve to the ON position.

SUBTASK 35-31-01-710-002

(7) Apply a vacuum using the portable oxygen mask.

(a) Make sure that oxygen flows into the portable oxygen mask.

SUBTASK 35-31-01-210-023

(8) Set the Shutoff Valve to the OFF position.

SUBTASK 35-31-01-100-002

(9) If necessary, use a moist cotton wiper, G00034, with alcohol, B50073, to clean the portable oxygen mask of contamination.

SUBTASK 35-31-01-960-008

(10) Stow mask and hose in the mask tote.

SUBTASK 35-31-01-960-009

(11) Reinstall the portable oxygen cylinder [1] that is serviceable.

SUBTASK 35-31-01-960-010

(12) If necessary, install a new or serviceableportable oxygen cylinder [1].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE OXYGEN CYLINDER - INSPECTION/CHECK

1. General

A. This procedure has these tasks:

(1) A general visual inspection of the portable oxygen cylinder (electronic pulse delivery)

(2) A detailed visual inspection of the portable oxygen mask (electronic pulse delivery)

(3) A pressure gauge inspection of the portable oxygen cylinder (electronic pulse delivery).

B. The portable oxygen cylinders are installed at different locations in the passenger compartment. Do not try to adjust a unit in the field. Remove any portable oxygen cylinders that do not operate correctly. Make sure that approved persons repair any damaged oxygen cylinders.

TASK 35-31-01-210-801

2. Portable Oxygen Cylinder (Electronic Pulse Delivery) - General Visual Inspection

(Figure 601)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-31-01-100-801	Portable Oxygen Cylinder (Electronic Pulse Delivery) - Cleaning (P/B 701)
35-31-01-960-801	Replace Portable Oxygen Cylinder (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Inspection

SUBTASK 35-31-01-910-005

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

D. Portable Oxygen Cylinder Inspection

SUBTASK 35-31-01-210-008

(1) Do a check of each portable oxygen cylinder.

SUBTASK 35-31-01-210-009

(2) Make sure that the portable oxygen cylinder pressure gage is not more than 1850 psi (12,755 kPa) at 70°F (21°C).

NOTE: The Figure 601 (Sheet 2) is to find equivalent portable oxygen cylinder pressures for temperatures other than 70°F (21°C).

SUBTASK 35-31-01-210-010

(3) Make sure that the portable oxygen cylinder gage pressure is not less than 1600 psi (11,032 kPa) at 70°F (21°C).

NOTE: The Figure 601 (Sheet 2) is to find equivalent portable oxygen cylinder pressures for temperatures other than 70°F (21°C).

SUBTASK 35-31-01-210-014

(4) Make sure that the portable oxygen cylinder useful service life has not expired.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 35-31-01-210-011

(5) Make sure that the portable oxygen cylinder is clean.

(a) If the portable oxygen cylinder is not clean, do this task: Portable Oxygen Cylinder (Electronic Pulse Delivery) - Cleaning, TASK 35-31-01-100-801.


SUBTASK 35-31-01-210-012

(6) Make sure that the portable oxygen cylinder is not damaged.

(a) If the portable oxygen cylinder is damaged, do this task: Replace Portable Oxygen Cylinder, TASK 35-31-01-960-801.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

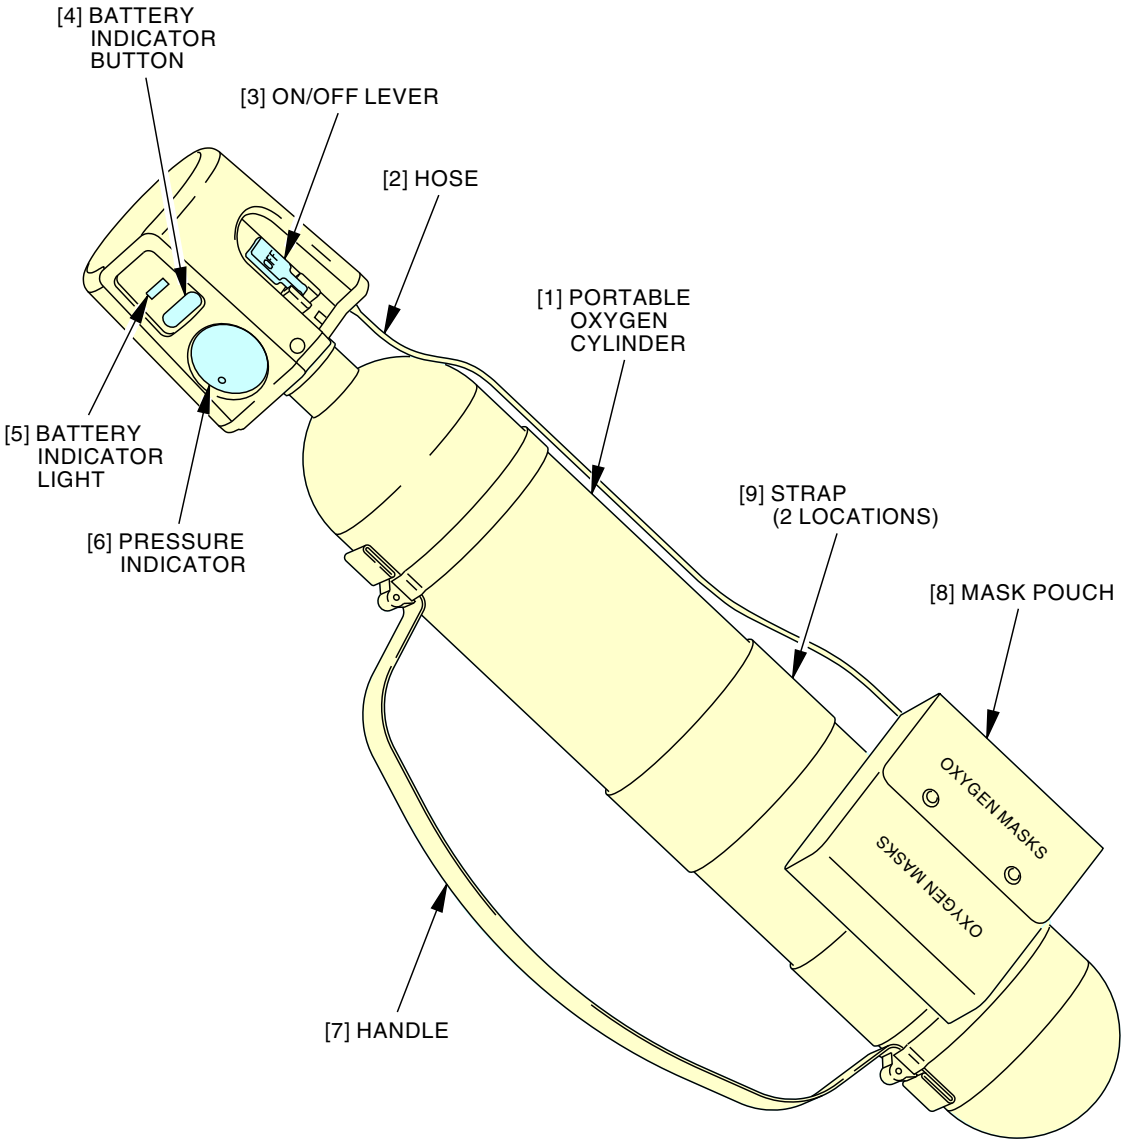

2886990 S0000686132_V1

Portable Oxygen Cylinder - General Visual Inspection
Figure 601/35-31-01-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

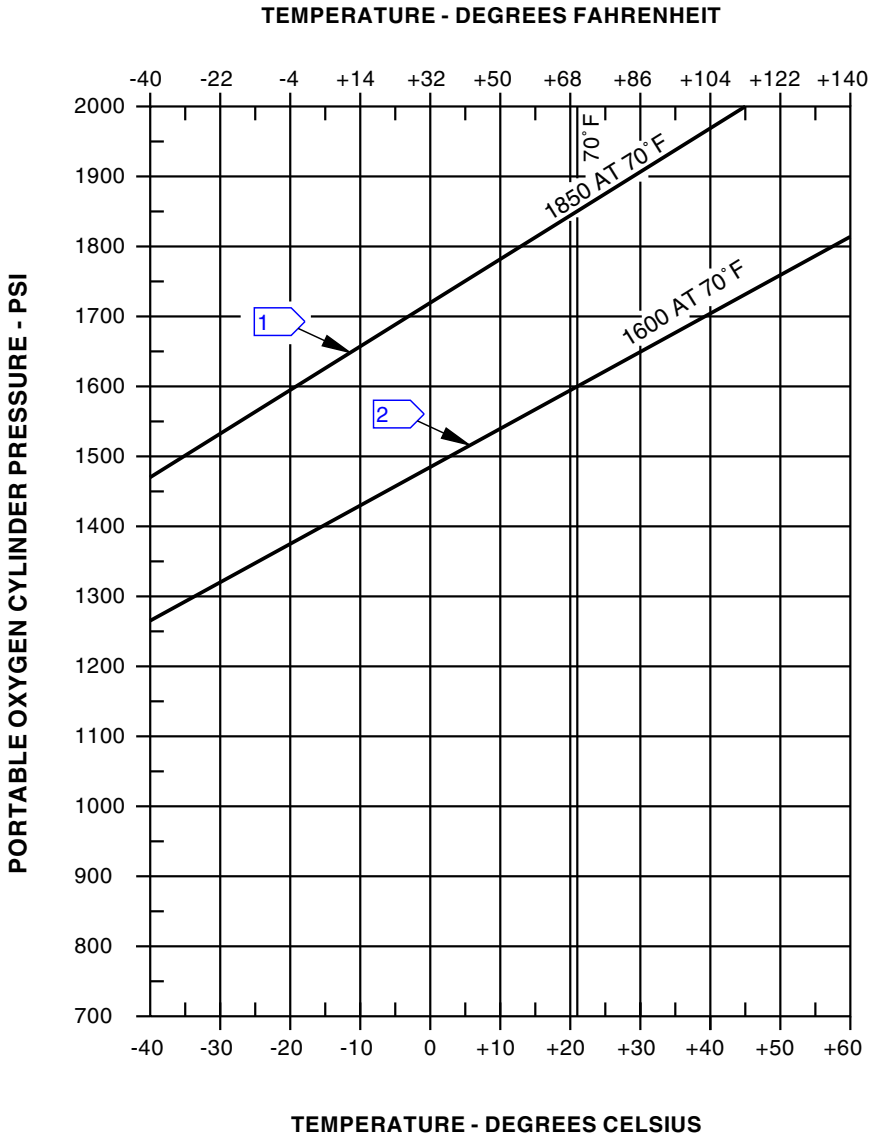

1 MAXIMUM ALLOWABLE PRESSURE FOR FULLY SERVICED PORTABLE OXYGEN CYLINDER

2 MINIMUM ALLOWABLE PRESSURE FOR FULLY SERVICED PORTABLE OXYGEN CYLINDER

2887006 S0000686134_V1

Portable Oxygen Cylinder - General Visual Inspection
Figure 601/35-31-01-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 35-31-01-211-801

3. Portable Oxygen Mask (Electronic Pulse Delivery) - Detailed Visual Inspection

(Figure 601)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task will clean the portable oxygen cylinder and mask surfaces.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-31-01-100-801	Portable Oxygen Cylinder (Electronic Pulse Delivery) - Cleaning (P/B 701)
35-31-01-960-802	Replace Portable Oxygen Cylinder Mask (P/B 201)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Inspection

SUBTASK 35-31-01-910-009

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

E. Portable Oxygen Mask Inspection

SUBTASK 35-31-01-010-009

(1) Open the mask pouch.

SUBTASK 35-31-01-020-007

(2) Carefully deploy the mask from the mask pouch.

SUBTASK 35-31-01-211-001

(3) Do these steps to make sure that the mask and supply hose are in a serviceable condition:

NOTE: The usual coiling and packing of mask assemblies can put the mask assembly materials temporarily out of their correct shape.

(a) Make sure that the oxygen supply hose is not damaged.

(b) Make sure that the oxygen supply hose is soft and flexible.

(c) Make sure that the color of the oxygen supply hose has not diminished.

(d) Make sure that each mask is installed tight to the oxygen supply hose.

(e) Make sure that each mask is installed tight to the portable oxygen cylinder.

(f) Examine the mask for damage or deterioration.

(g) Examine the mask for contamination, dirt, grease, oil, or unwanted material.

SUBTASK 35-31-01-100-001

(4) If there is contamination, do this task: Portable Oxygen Cylinder (Electronic Pulse Delivery) - Cleaning, TASK 35-31-01-100-801.

NOTE: This step will clean the portable oxygen cylinder and the mask.

SUBTASK 35-31-01-420-006

(5) If the mask is serviceable, do these steps to stow the mask:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Wind the hose around the external surface of the mask.

(b) Put the mask and hose into the mask pouch.

(c) Close the mask pouch.

SUBTASK 35-31-01-960-006

(6) If the mask or supply hose is not in serviceable condition, do this task: Replace Portable Oxygen Cylinder Mask, TASK 35-31-01-960-802.

——— END OF TASK ———

TASK 35-31-01-200-801

4. Portable Oxygen Cylinder (Electronic Pulse Delivery) - Pressure Gauge Inspection

(Figure 601)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-31-01-960-801	Replace Portable Oxygen Cylinder (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Inspection

SUBTASK 35-31-01-910-010

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

D. Portable Oxygen Cylinder Pressure Gauge Inspection

SUBTASK 35-31-01-210-018

(1) Do a visual check of each portable oxygen cylinder.

SUBTASK 35-31-01-210-019

(2) Make sure that the portable oxygen cylinder pressure gage is not more than 1850 psi (12,755 kPa) at 70°F (21°C).

NOTE: The Figure 601 (Sheet 2) is to find equivalent portable oxygen cylinder pressures for temperatures other than 70°F (21°C).

SUBTASK 35-31-01-210-020

(3) Make sure that the portable oxygen cylinder gage pressure is not less than 1600 psi (11,032 kPa) at 70°F (21°C).

NOTE: The Figure 601 (Sheet 2) is to find equivalent portable oxygen cylinder pressures for temperatures other than 70°F (21°C).

SUBTASK 35-31-01-210-021

(4) If the pressure gauge is not within the limits shown, discard the portable oxygen cylinder and replace with a serviceable bottle (TASK 35-31-01-960-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE OXYGEN CYLINDER - CLEANING

TASK 35-31-01-100-801

1. Portable Oxygen Cylinder (Electronic Pulse Delivery) - Cleaning

(Figure 701)

A. General

(1) This task will clean the portable oxygen cylinder and mask surfaces.

B. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

C. Consumable Materials

Reference	Description	Specification
B50073	Alcohol - Isopropyl	ASTM D 770
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Portable Oxygen Cylinder (Electronic Pulse Delivery) Cleaning

SUBTASK 35-31-01-910-008

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (TASK 35-00-00-910-801).

SUBTASK 35-31-01-010-008

(2) Open the related mask pouch.

SUBTASK 35-31-01-020-006

(3) Carefully remove the mask from the mask pouch.

NOTE: It is not necessary to disconnect the mask hose from the cylinder.

SUBTASK 35-31-01-160-001

(4) Use a moist cotton wiper, G00034, with alcohol, B50073, to clean the portable oxygen cylinder, hose, and mask surfaces of contamination.

SUBTASK 35-31-01-200-001

(5) Make sure that the hose is tight on the mask hose fitting.

SUBTASK 35-31-01-420-004

(6) Wind the hose around the external surface of the mask.

SUBTASK 35-31-01-420-005


(7) Put the mask and hose into the mask pouch.

SUBTASK 35-31-01-410-009

(8) Close the mask pouch.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

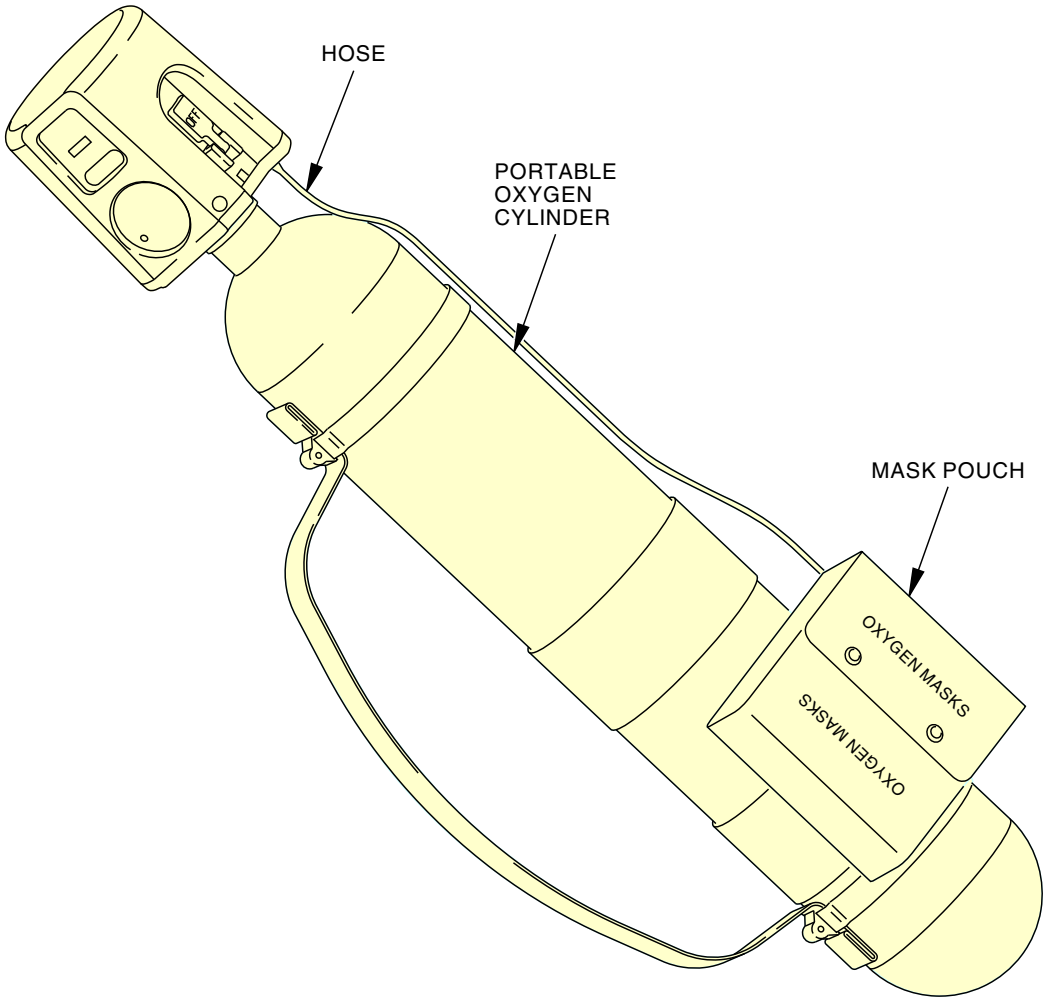

3043576 S0000810837_V1

Portable Oxygen Cylinder Cleaning
Figure 701/35-31-01-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE PROTECTIVE BREATHING EQUIPMENT BOX - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Portable Protective Breathing Equipment Box Removal.

(2) Portable Protective Breathing Equipment Box Installation.

B. The portable Protective Breathing Equipment (PBE) consists of a smoke-hood and protective box. The PBE is installed in various locations in the flight and passenger compartments. Refer to the airplane's Layout of Passenger Arrangements (LOPA) to find the quantity and specific location of the PBE boxes.

TASK 35-31-02-000-801

2. Portable Protective Breathing Equipment Box Removal

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Remove the Portable Protective Breathing Equipment Box

SUBTASK 35-31-02-910-001

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (Oxygen System General Maintenance Practices, TASK 35-00-00-910-801).

SUBTASK 35-31-02-010-001

(2) Go into the flight compartment to get access to the portable protective breathing equipment box.

SUBTASK 35-31-02-010-002

(3) Go into the passenger compartment to get access to the portable Protective Breathing Equipment (PBE). Refer to the airplane's Layout of Passenger Arrangements (LOPA) to find the quantity and specific location of the PBE boxes.

SUBTASK 35-31-02-000-001

(4) Remove the PBE box from it's storage mounting bracket or compartment.

——— END OF TASK ———

TASK 35-31-02-400-801

3. Portable Protective Breathing Equipment Box Installation

A. References

Reference	Title
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Install the Portable Protective Breathing Equipment (PBE)

SUBTASK 35-31-02-910-002

(1) Read and obey the safety precautions and general instructions for the oxygen system before you do the maintenance (.Oxygen System General Maintenance Practices, TASK 35-00-00-910-801).

SUBTASK 35-31-02-400-001

(2) As necessary, install the fasteners that attach the PBE box or its mounting bracket in its location in the flight deck.

(a) If applicable, install the PBE box in its mounting bracket.

SUBTASK 35-31-02-400-002

(3) To install the passenger compartment PBE's, refer to the airplane's Layout of Passenger Arrangements (LOPA) to find the quantity and specific location of the PBE boxes. Install the PBE box in it's mounting bracket, or storage compartment, as applicable.

SUBTASK 35-31-02-410-001

(4) Apply a tamper seal as necessary.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details