Apex Options and Settings File – Load Procedures

1. General

This procedure requires the APEX Settings File and Options File.

2. Description

The Settings File part number is VSP25–xxxxx. The 'xxxxx' is replaced by the applicable file number.

The Options File part number is TT60000053–yyyyy (or Viking cross reference part number VSP24–yyyyy) (Pre Mod 6/2303); or TT600002657–yyyyy (or Viking cross reference part number VSP30–yyyyy) (Post Mod 6/2303). The 'yyyyy' is replaced by the applicable file number.

Note The correct Settings File and correct Options File must be obtained for the applicable aircraft S/N. The SETTINGS FILE aircraft registration and transponder code is aircraft serial number specific. The OPTIONS FILE is aircraft serial number specific.

Note The OPTIONS FILE requires a security code to be entered. The security code is noted on the Options File Media. When prompted in the CMC remote terminal program, a Honeywell agreement has to be accepted and the security code has to be entered.

Note Post Mod 6/2303 aircraft with S.O.O. 6221 Automatic Flight Control System (Autopilot) incorporated have two Option Files, one CD for autopilot activated and the other for autopilot deactivated. Ensure the correct Options File is loaded.

Note Typical load time: 5 minutes each.

3. Apex Settings and Options File Load Procedure

Verify VSP25 document provided with the settings file matches the desired aircraft configuration.

Insert the Settings File Media or Options File Media and follow the loading procedure as described in 45-00-00, Central Maintenance Computer – General data.

When loading is complete, verify as follows:

A. Settings File

1) Use the arrow keys on the MF Controller to navigate to the SYSTEMS PAGE. (Refer to Figure 1).

2) Push the PAGE button the MF Controller. (Refer to Figure 2).

3) Use the Joystick to select SCMS/DL and push ENT on the MF Controller. (Refer to Figure 3).

Note There are multiple pages available under the Sys Config tab. (Refer to Figure 4). To Change pages, highlight Page Down or Page Up and press ENT on the MF Controller.

4) Scroll through the pages to view settings which are part of the Settings File. Verify the values displayed on Apex match what is listed in the VSP25–xxxxx document provided with the settings file. (Refer to Figure 4 and Figure 5).

The following is a sample only of items included in the VSP25–xxxxx document:

SETTINGS FILE ITEM	TYPICAL VALUE	NOTES
n/a	2049	Standard (STD)
n/a	SETT	STD

SETTINGS FILE ITEM	TYPICAL VALUE	NOTES
Aircraft Registration Number	C–GXXX	Aircraft Registration Specific
Aircraft Serial Number	879	Aircraft Serial Number Specific
Aural Warning Voice Type	1	0=Male, 1=Female (Default)
Aircraft S/N Digit Thousands	0x00	Aircraft Serial Number Specific
Aircraft S/N Digit Hundreds	0x08	Aircraft Serial Number Specific
Aircraft S/N Tens	0x07	Aircraft Serial Number Specific
Aircraft S/N Ones	0x09	Aircraft Serial Number Specific
Aircraft Transponder Code	C12ABC	Aircraft Registration Specific
AC Symbol In Air Charts Display	1	0=Disabled, 1=Enabled (Default)
Engine 1 Serial Number	PCERB0123	Example of Engine Serial Number
Engine 2 Serial Number	PCERB0124	Example of Engine Serial Number
Env. Temperature Units	0	0=DEG C (Default), 1=DEG F
Lightning Antenna Location	0	STD
ADF1 Quad Error	6	STD, the Quadrantal Error Correction number displayed shall be rounded to the nearest whole number
ADF2 Quad Error	6	‘0’ if S.O.O. 6217 is not installed, ‘6’ if S.O.O. 6217 is installed, the Quadrantal Error Correction displayed is exact to 6 digits behind the decimal
COM1 Carrier Squelch	95	STD
COM1 Emerg Freq-100 MHz Digit	1	STD
COM1 Emerg Freq-10 MHz Digit	2	STD
COM1 Emerg Freq-1 MHz Digit	1	STD
COM1 Emerg Freq-0.1 MHz Digit	5	STD
COM1 Emerg Freq-0.01 MHz Digit	0	STD
COM1 Emerg Freq-0.001 MHz Digit	0	STD
COM1 Emergency Volume	20	STD
COM1 Sidetone Level	52	STD
COM1 Squelch	8	STD
COM1 Microphone Gain	21	STD
COM2 Squelch	95	STD
COM2 Emerg Freq-100 MHz Digit	1	STD
COM2 Emerg Freq-10 MHz Digit	2	STD
COM2 Emerg Freq-1 MHz Digit	1	STD
COM2 Emerg Freq-0.1 MHz Digit	5	STD
COM2 Emerg Freq-0.01 MHz Digit	0	STD

SETTINGS FILE ITEM	TYPICAL VALUE	NOTES
COM2 Emerg Freq-0.001 MHz Digit	0	STD
COM2 Emergency Volume	20	STD
COM2 Sidetone Level	52	STD
COM2 Squelch	8	STD
COM2 Microphone Gain	21	STD
Video Installed	0	STD
Weight Unit For Display	0	0=Pounds (Default), 1=Kilograms
n/a	0	not displayed
Binary File Embedded CRC	0xe14fe435	not displayed, example only
Full Bin CRC For HR	0x7bce34a2	not displayed, example only

5) When the Registration of the Aircraft has been changed, refer to manufacturer's procedure in Section 25-60-11, Emergency Locator Transmitter (ELT) – General Data).

B. Options File


1) Use the arrow keys on the MF Controller to navigate to the SYSTEMS PAGE. (Refer to Figure 1).

2) Push the PAGE button on the MF Controller. (Refer to Figure 2).


3) Use the Joystick to select SCMS/DL and push ENTER on the MF Controller. (Refer to Figure 3).

Note There are multiple pages available under the Sys Config tab. To change pages, highlight Page Down or Page Up and press ENT on the MF Controller.


4) On Sys Config tab Page 1, view the part number listed under Configuration Part Number. Verify that the correct part number is displayed. (Refer to Figure 6).

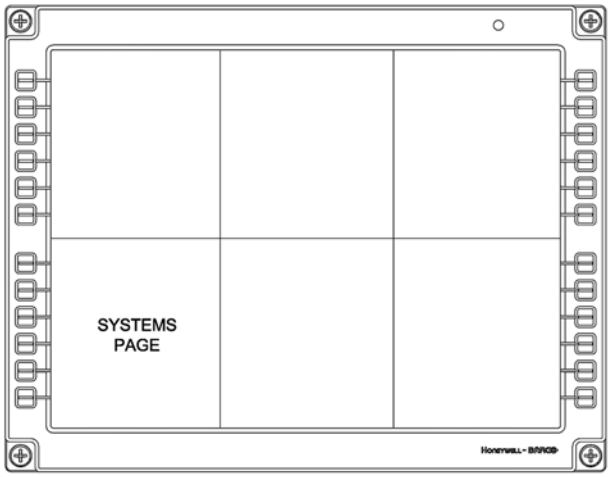

MFD (Lower Typical) – SYSTEMS PAGE Location
Figure 1

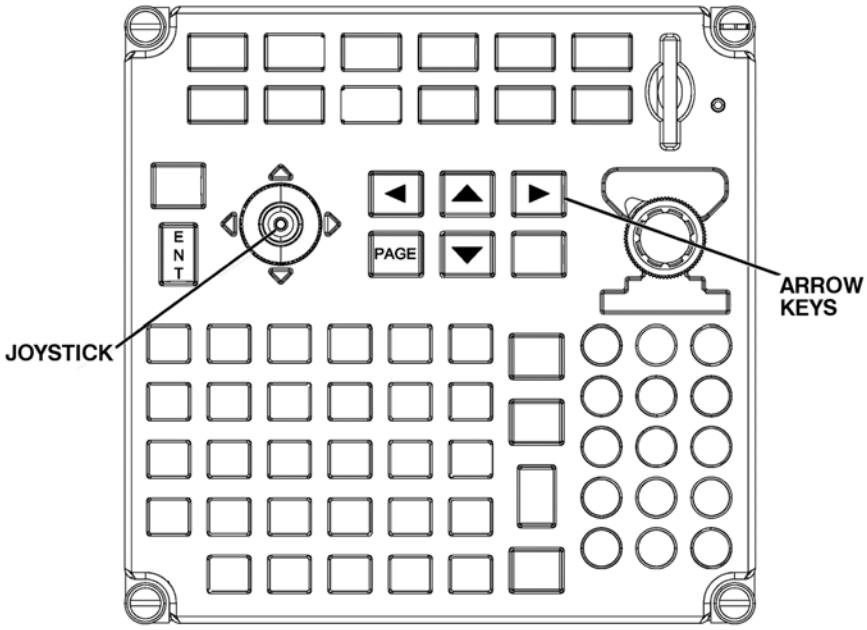


MF Controller
Figure 2

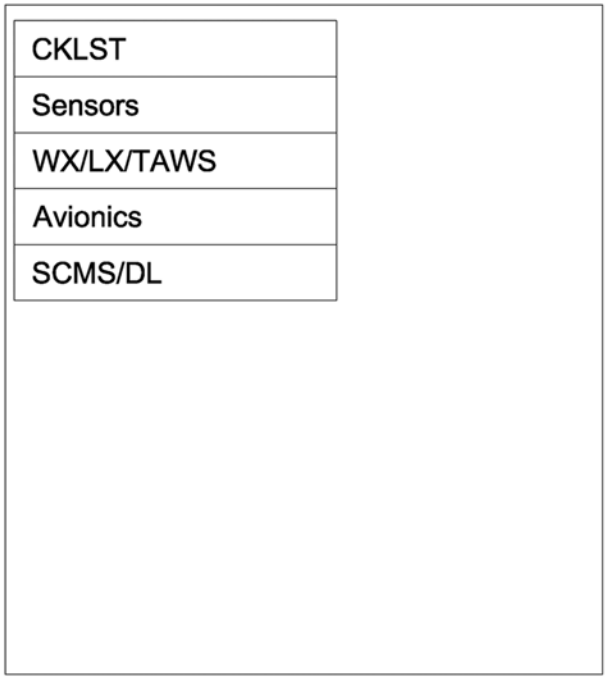


SYSTEMS PAGE Menu
Figure 3


Print Date: 2025-09-15

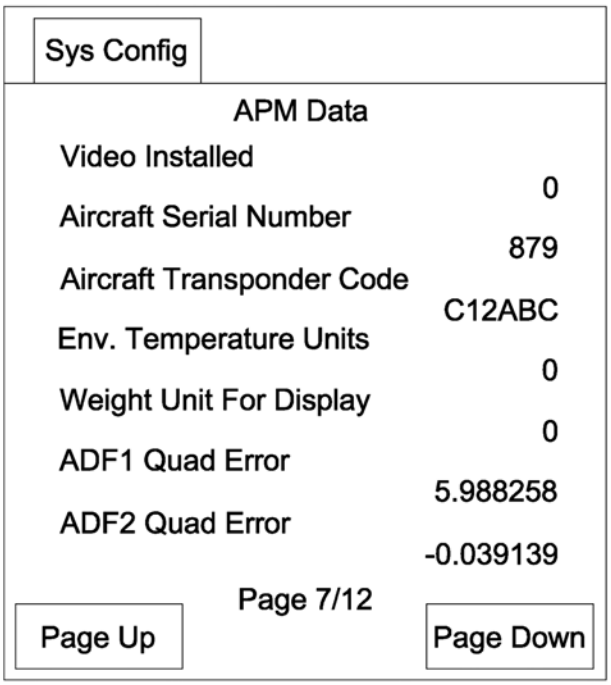

Systems Configuration Tab – Various Settings File Values (Page 7 Shown as Example)
Figure 4

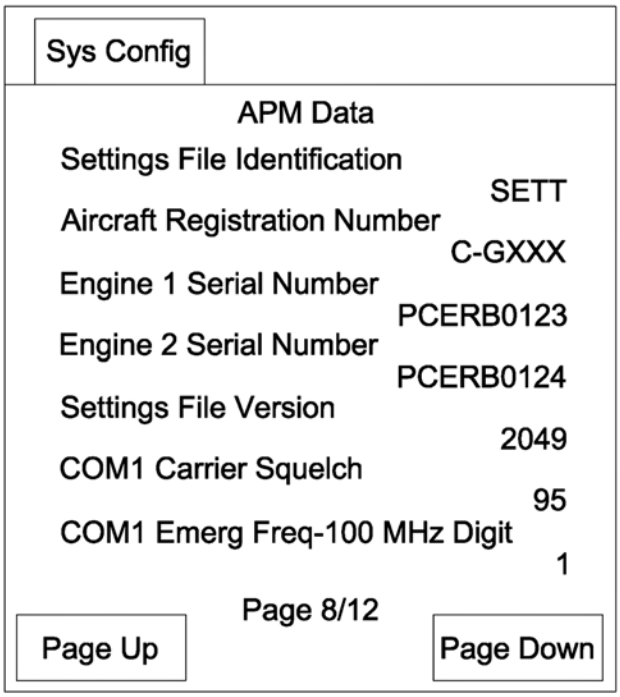

Systems Configuration Tab – Various Settings File Values (Page 8 Shown As Example)
Figure 5

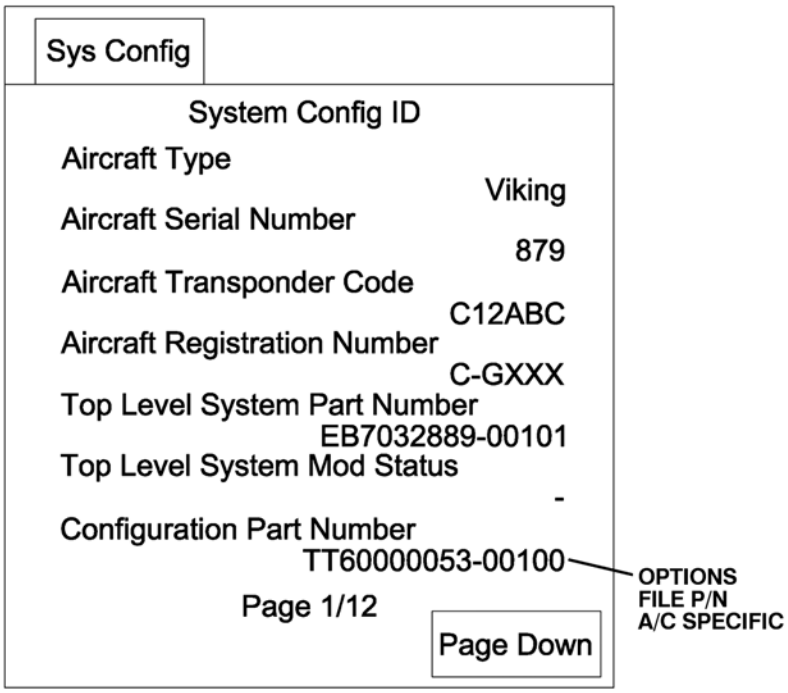

Systems Configuration Tab (Page 1 Shown)
Figure 6