
## Emergency Exit (Mod 6/2024) – General data

1. General

   The emergency exits consist of two escape doors, one on each side of the passenger cabin compartment.

2. Escape Door

   Each escape door has a handle release mechanism, a window, door seal, and rubber pads bonded to the side and bottom structure. Pulling downward on the release handle disengages the release handle from fittings on the cabin structure and on the door. The top of the door is then pushed outwards until clear of the door frame.

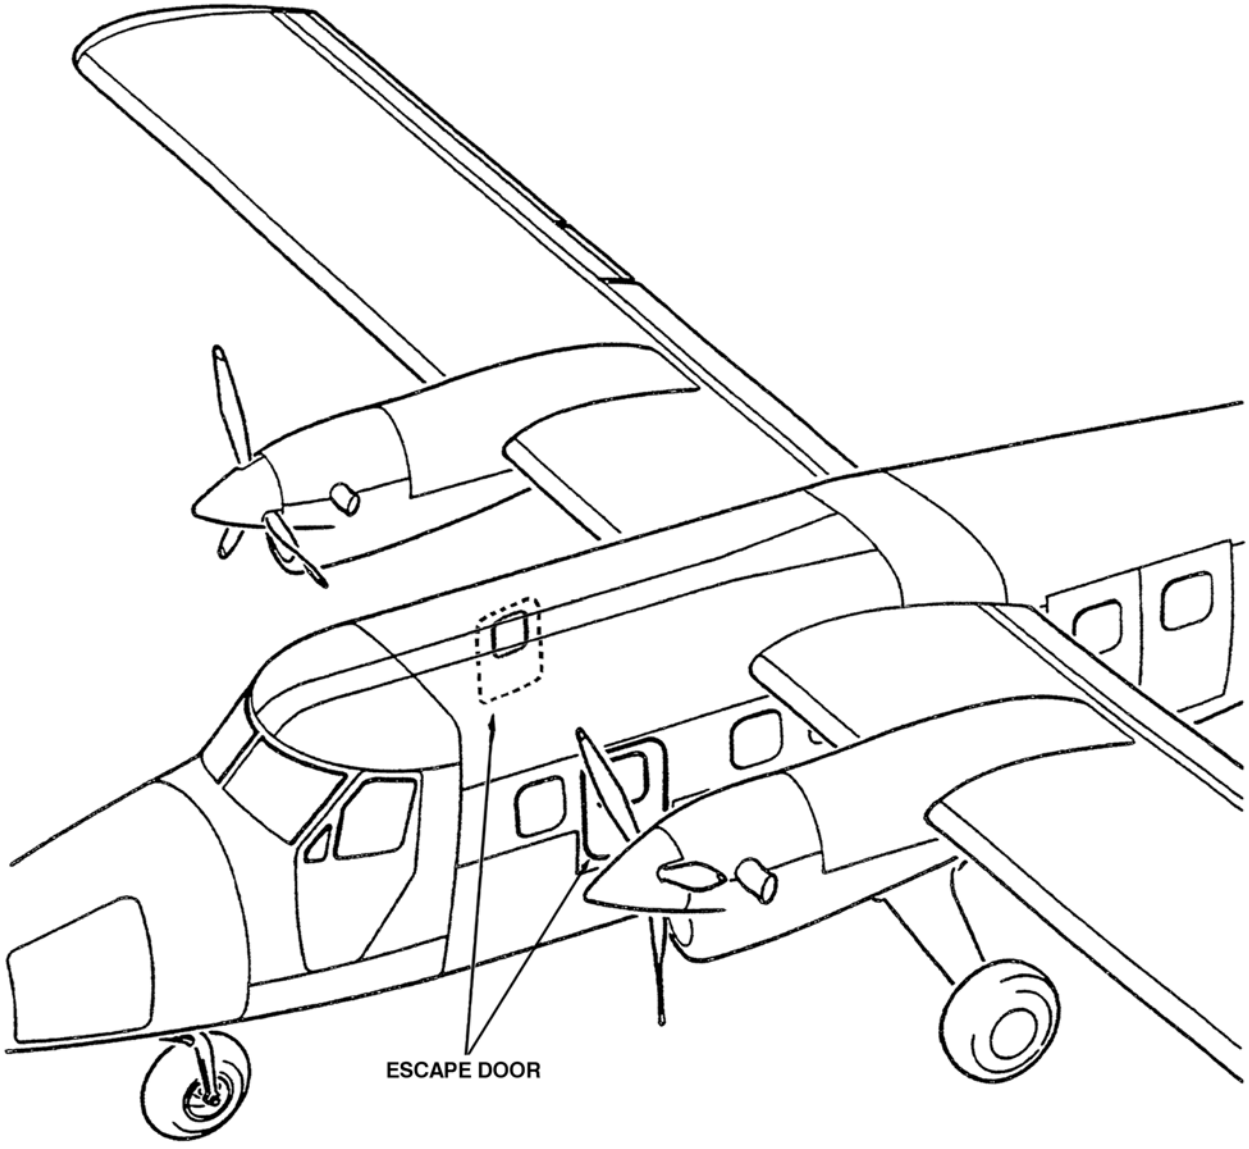


Emergency Exits
Figure 1

3. Installation of Escape Door

   Note Two men are required, one to position and retain escape door from outside the fuselage, and one to install release handle.

   A. Position escape door so that two plates at bottom of door are located against pads on inside of fuselage. Push inwards at top of escape door so that door is flush with fuselage.

   B. Engage slots of two release fittings on release handle with two bolts on door fittings. Operate release handle downwards to withdraw two spring-loaded plungers, align the plungers with two holes in fittings on fuselage and raise release handle allowing the plungers to engage holes in fittings.

      Note If difficulty is experienced in aligning plungers with holes in fittings, it is recommended to loosen four screws on each plate at bottom of door to assist repositioning at top of escape door. Tighten screws on each plate when handle is installed.

   C. Lockwire forward arm of release handle to bolt attaching fitting to fuselage using 0.020–inch diameter copper locking wire. Use single method of lockwiring to ensure that it can easily be broken in an emergency.

   D. Install cover over release handle mechanism.

4. Adjustment/Test

   A. Operational Test – Escape Door

      Note Two men are required, one to operate release, and one to receive escape door outside fuselage.

      1) Remove cover at handle release mechanism.

      2) Pull down release handle sharply enough to break copper locking wire. Handle will separate from escape door and fuselage.

      3) With operator ready to receive escape door, push outwards at top of escape door sufficiently to free two plates locating bottom of door and fuselage. Escape door must push freely from door frame.

      4) Install escape door, refer to Para 3.