Cabin Windows – General Data

1. General

The cabin windows are made of acrylic plastic, and are each mounted in a window frame between two seals and retained by a ring riveted to the window frames. The thickness of the window varies and the edges are shouldered or joggled, according to the position of the window in the cabin. As a customer option, inner liners are provided for each cabin window, and are a press fit into a ridge in the window reveal (surround).

2. Removal/Installation

Refer to Figure 1 for details.

A. Remove Cabin Window

1) Remove window trim panels, inner liners (if fitted) and window reveal (surround) with window shade and window shade tracks, if fitted.

2) Remove rivets securing retaining ring to window frame. Withdraw retaining ring and window.

B. Install Cabin Window

1) Check seals on retaining ring and window frame for condition and adhesion. Replacement seals to be bonded to retaining ring and/or window frame using Bostik 1142 (B.B. Chemical Co.).

2) Prepare PR1776–B2 sealant. (Refer to 20-50-01, Weather Sealing – General Data).


3) When installing a window with shouldered edge, apply a bead of sealant to the window frame at the inner edge of the seal bonded to the frame.

4) Install window and retaining ring using rivets CR2249–4.

5) On windows with shouldered edge, trim off any excess sealant flush with outer skin. On windows with joggled edge, apply a bead of PR1776–B2 sealant around periphery of window from outside the aircraft. Ensure that sealant covers joint between window frame and fuselage skin.

6) Install window reveal (surround) with window shade tracks and window shades, if removed, and trim panels.

7) Install inner liners (if removed) to window reveal (surround).

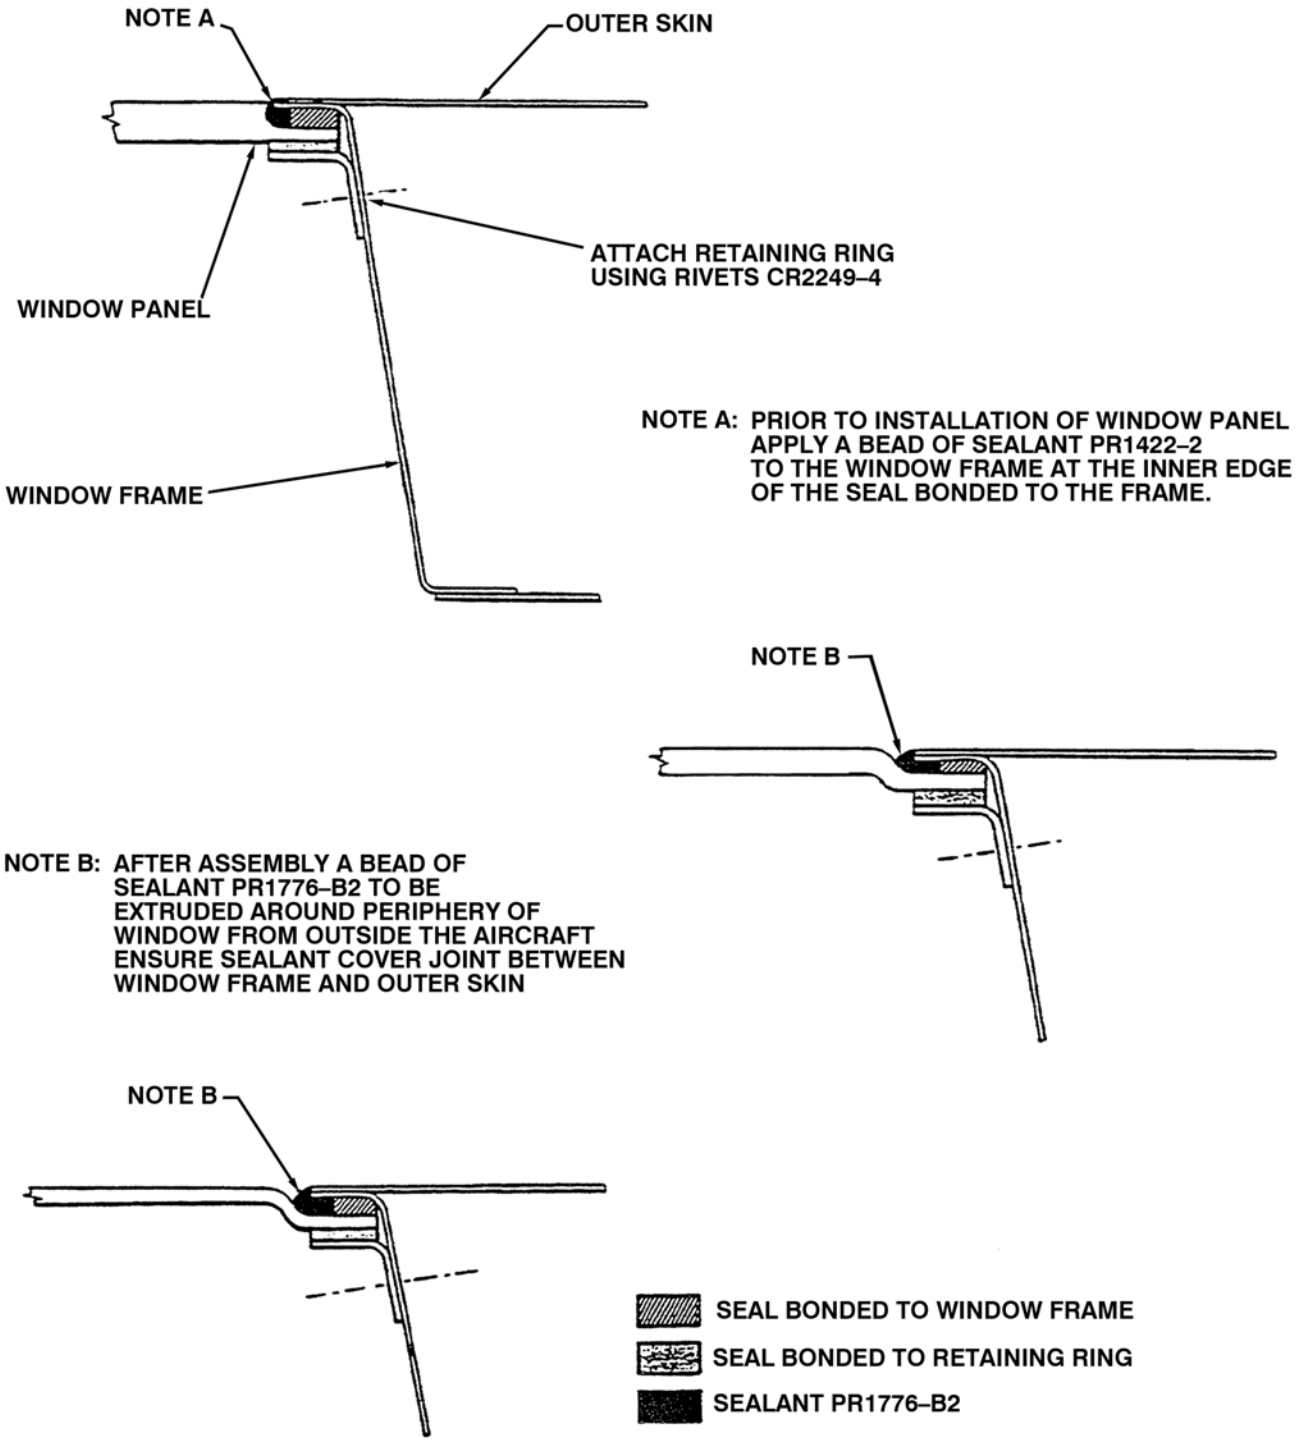

Cabin Window Installation
Figure 1