## Door Windows – General Data

1. General

The door windows consist of flight compartment, cabin compartment and cabin escape door windows.

2. Flight Compartment

Each flight compartment door has a fixed window, and a sliding window panel. The sliding window is locked in any position by a cam type window latch.

3. Cabin Compartment

Windows are installed to the right-hand cabin door aft, left-hand cabin door aft, and to each escape door.

A. Left-hand and Right-hand Aft Cabin Doors

The windows in the left-hand and right-hand aft cabin doors are made of acrylic plastic, and are each mounted in a window frame between two seals and retained by a ring riveted to the window frame.

B. Cabin Escape Door

The window in each cabin escape door is the same as the windows installed in the left-hand and right-hand aft cabin doors.

4. Removal/Installation

Refer to Figure 1 for details.

A. Remove Right-Hand and Left-Hand Cabin Escape Door Windows

1) Remove window trim panels, inner liners (if fitted) and window reveal (surround) with window shade and window shade tracks, if fitted.

2) Remove rivets securing retaining ring to window frame. Withdraw retaining ring and window.

B. Install Right-Hand and Left-Hand Cabin Escape Door Windows


1) Check seals on retaining ring and window frame for condition and adhesion. Replacement seals to be bonded to retaining ring and/or window frame using Bostik 1142 (B.B. Chemical Co.).

2) Install window and retaining ring using rivets NAS1398C4–2. Wet install rivets using MIL–PRF–81733 TYPE II corrosion inhibitive sealant.

3) After assembly, prepare window periphery gap with SIKA PRIMER 206 G + P, followed by a bead of SIKAFLEX 295 UV Sealant. Ensure sealant covers joint between window frame and outer skin.

4) Install window reveal (surround) with window shade tracks and window shades, if removed, and trim panels.

5) Install inner liners (if removed) to window reveal (surround).

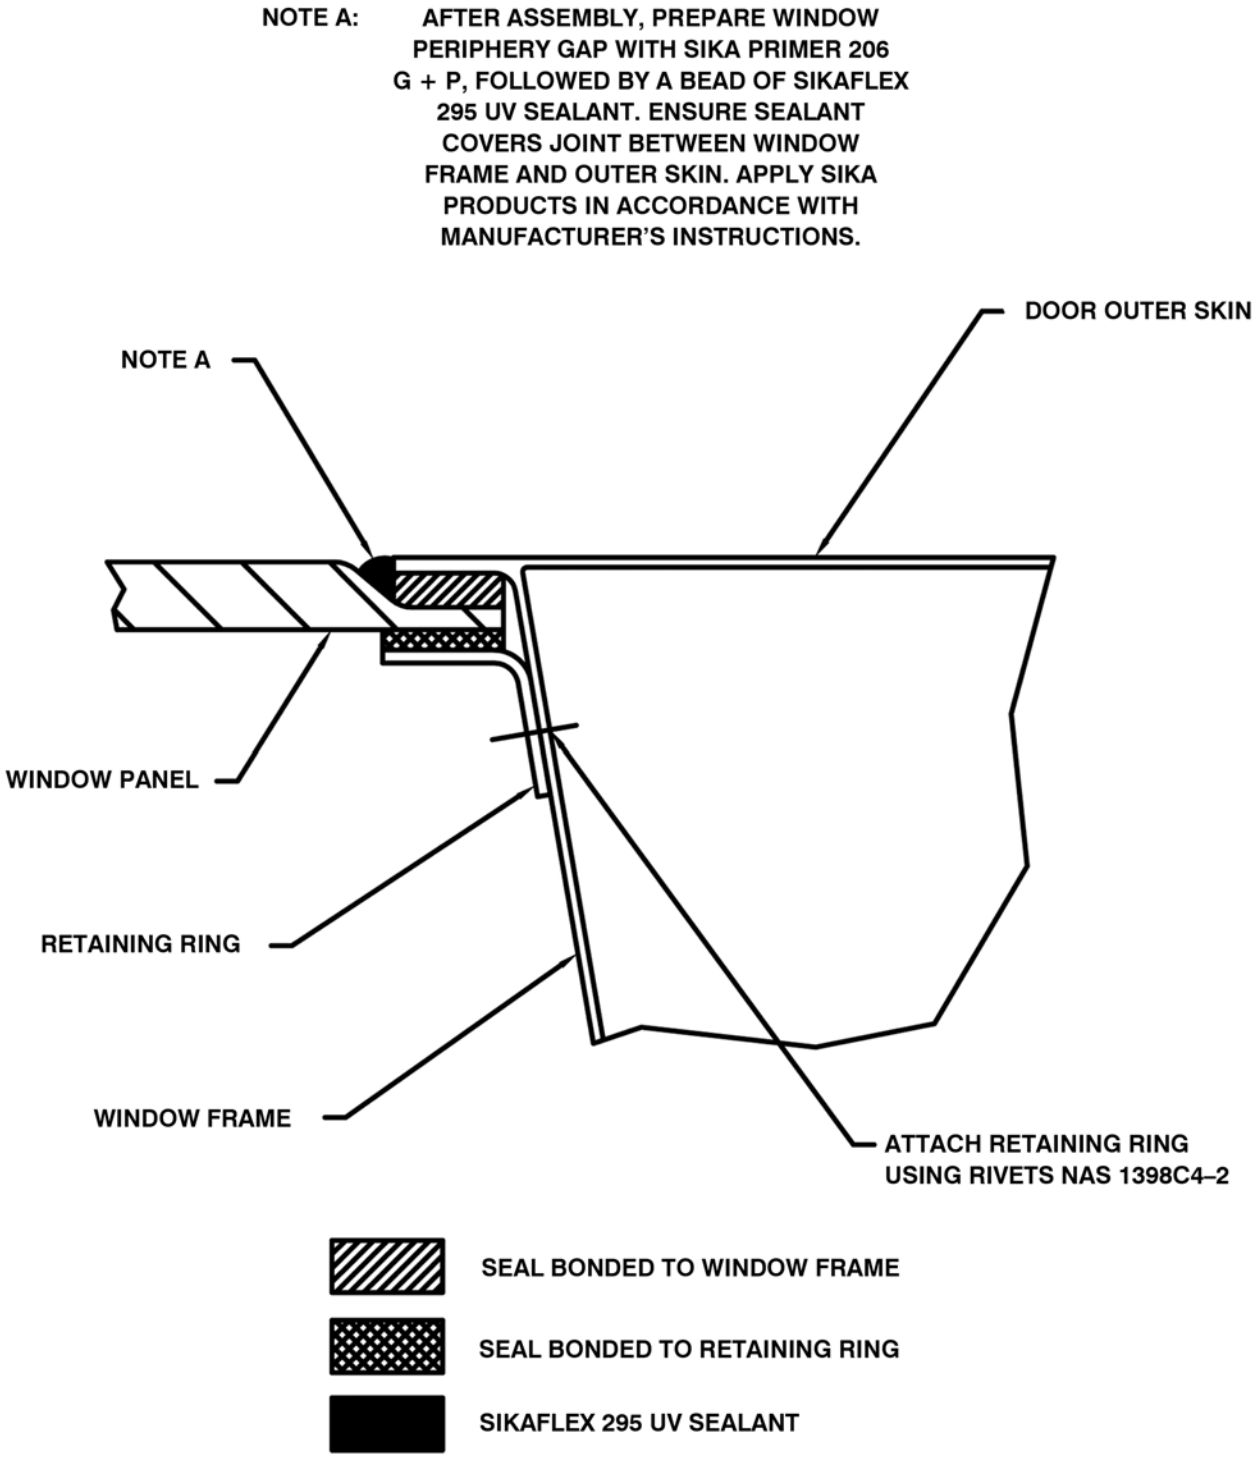


Cabin Door Window Installation
Figure 1