Baggage Compartment Doors (Mod 6/2020) (Mod 6/2024) – General Data

1. General


Front and rear baggage compartment doors are installed on the left side of the nose compartment and the aft fuselage respectively (refer to Figure 1).

A. Front Baggage Compartment Door (Mod 6/2020 or Mod 6/2161)

The front baggage compartment door is comprised of an outer and inner skin made from pre-impregnated carbon cloth reinforced by a foam core framework, and is secured to the nose compartment at the top of the door by a piano type hinge assembly. The hinge is riveted to the door and is attached to the nose compartment by screws. Two spring-loaded latch assemblies at the bottom of the door, one at the fwd end and the other at the aft end secure the door in the closed position. A silicone foam seal is bonded to the inner skin to exclude drafts and moisture. A door stay assembly is provided to hold the door open and when not in use secured in a spring clip adjacent to the aft door latch. A door lock assembly is included in the forward latch assembly only and is operated by a key.

B. Rear Baggage Compartment Door (Mod 6/2024)

The rear baggage compartment door is fabricated from a composite sandwich construction of carbon fiber and low density foam core, and is secured to the rear fuselage at the top of the door by two hinge assemblies. Each hinge is secured to the door and the rear fuselage by screws. The door is secured to the fuselage at the lower end of the door frame by two spring-loaded latch pins, each connected to an arm assembly by a push rod, which in turn is rotated by operation of the door handle. A lock is incorporated in the door handle and is operated by a key. A silicone foam seal is bonded to the inner edge of the outer skin to exclude drafts and moisture. A door stay is provided to hold the door open and when not in use is secured in a spring clip at upper aft corner of the door.

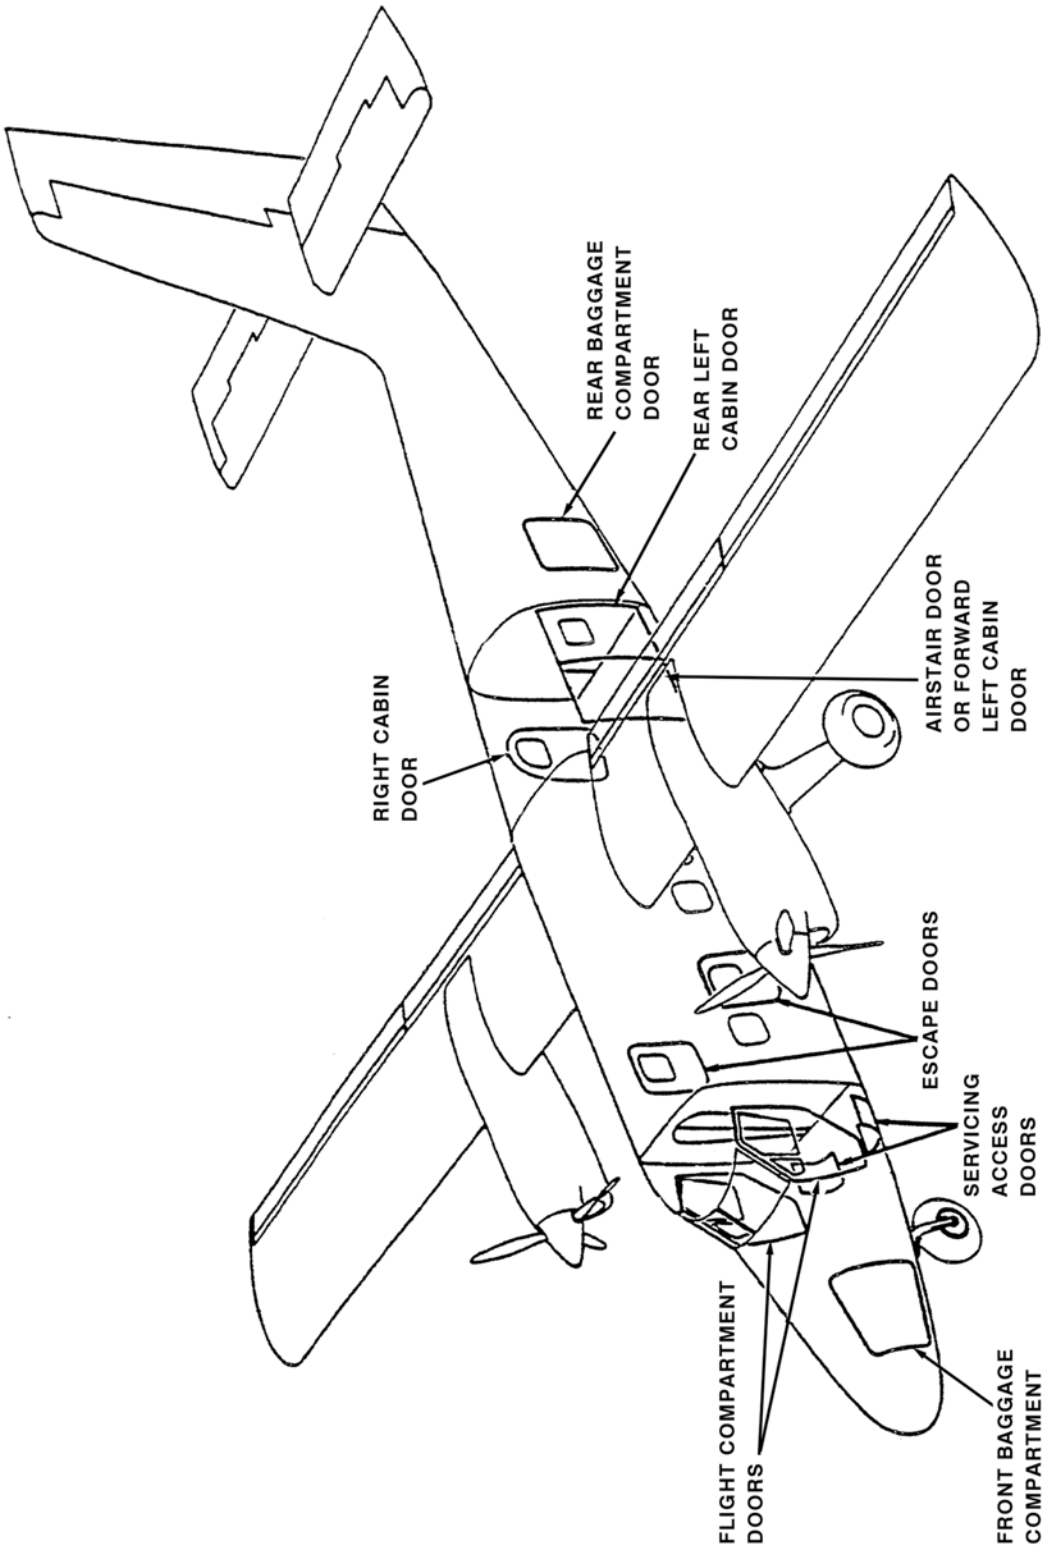

Doors – Location
Figure 1

Print Date: 2025-09-15

2. Removal/Installation

A. Remove Front Baggage Compartment Door

1) Open and support front baggage compartment door.

2) Remove screws attaching door hinge to nose compartment and remove door.

B. Install Front Baggage Compartment Door

1) Position and support door and align mounting holes in hinge at top of door and in nose compartment.

2) Secure hinge to nose compartment with screws as required.

3) Close and latch door.

4) Verify electrical conductivity between door and airframe. Refer to Para 3.A.

5) Ensure each fwd and aft latch pin engagement between the nose door and nose baggage compartment is minimum 0.25", in the closed position, measured from the outer latch pin surface.

C. Remove Front Baggage Compartment Door Latch Assembly

1) Open and support front baggage compartment door.

2) Remove hardware attaching latch assembly mounting plate to door outer skin and remove plate.

3) Remove rivets attaching latch to plate and withdraw latch assembly.

D. Install Front Baggage Compartment Door Latch Assembly

1) Position latch assembly on mounting plate and align attachment holes.

2) Secure latch assembly with six one-eighth diameter rivets on plate.

3) Secure plate on door with mounting hardware. Wet install hardware with PR–1764 CLASS B electrically conductive sealant with PR–148 adhesion promoter or equivalent.

4) Close and latch door.

5) Ensure each fwd and aft latch pin engagement between the nose door and nose baggage compartment is minimum 0.25", in the closed position, measured from the outer latch pin surface.

E. Remove Rear Baggage Compartment Door

Note Before removal of the Rear Baggage Compartment Door, confirm hinge configuration. If configuration comprises of a swaged pin, remove the Rear Baggage Compartment Door as per Para 2.E.1)2.5.1. If hinge configuration comprises of a cotter pin and washer configuration, remove Rear Baggage Compartment Door as per Para 2.E.2).

1) Baggage Door with Swaged Pin Configuration

a) Open and support rear baggage compartment door.

b) Remove two screws securing each hinge to airframe and remove door from aircraft.

2) Baggage Door with Cotter Pin Configuration

a) Open and support rear baggage compartment door.

b) Remove cotter pin and washer securing each hinge pin, remove hinge pins and remove door from aircraft.

F. Install Rear Baggage Compartment Door

Note Before install of the Rear Baggage Compartment Door, confirm hinge configuration. If configuration comprises of a swaged pin, install the Rear Baggage Compartment Door as per Para 2.F.1). If hinge configuration comprises of a cotter pin and washer configuration, install Rear Baggage Compartment Door as per Para 2.F.2).

1) Baggage Door with Swaged Pin Configuration

a) Position and support door and align mounting holes in hinges and aircraft.

b) Secure each hinge to aircraft with two screws.

c) Close and latch door.

d) Verify electrical conductivity between door and airframe. Refer to Para 3.C.

2) Baggage Door with Cotter Pin Configuration

a) Position and support door and align hinge halves on aircraft and door.

b) Insert hinge pins and lock in place with washer and cotter pin.

c) Close and latch door.

d) Verify electrical conductivity between door and airframe. Refer to Para 3.C.

G. Remove Rear Baggage Compartment Door Handle

1) Unlatch rear baggage compartment door.

2) Support door and remove two screws securing door handle to door.

3) Withdraw handle.

H. Install Rear Baggage Compartment Door Handle

1) Ensure door latches are in unlatched position.

2) Insert door handle in square hole in arm assembly and ensure tail of handle is pointing downwards.

3) Secure handle to door with two screws. Wet install screws with PR–1764 CLASS B electrically conductive sealant with PR–148 adhesion promoter or equivalent.

4) Close and latch door.

3. Adjustment/Test

A. Front Baggage Compartment Door Bonding Test

Note If hardware attaching the rear baggage compartment hinges to the composite door structure are removed they must be wet installed using PR–1764 CLASS B electrically conductive sealant with PR–148 adhesion promoter or equivalent.

With door closed, measure the resistance between the front baggage compartment door and the airframe using a milliohm meter, resistance to be less than 10 milliohms. Probe measurements to be taken on one of the front baggage compartment door hinge fasteners and an airframe side rivet. Refer to Figure 2.

B. Front Baggage Compartment Door Bonding Adjustment/Rework


Remove the front baggage compartment hinge attachment fasteners and clean as required to achieve bonding requirement. If required, remove front baggage compartment to airframe bonding strap and clean mating surfaces to achieve bonding requirement. For reference, see applicable standard electrical bonding procedures in 20-75-00, Electrical Bonding and Grounding of Aircraft Structures – General data.

C. Rear Baggage Compartment Door Bonding Test


With door closed, measure the resistance between the rear baggage compartment door and the airframe using a milliohm meter, resistance to be less than 10 milliohms. Probe measurements to be taken on one of the rear baggage compartment door hinge fasteners and an airframe side rivet. Refer to Figure 3.

D. Rear Baggage Compartment Door Bonding Adjustment/Rework

Remove the rear baggage compartment hinge attachment fasteners and clean as required to achieve bonding requirements. If required, remove rear baggage compartment to airframe hinge pin and clean to achieve bonding requirement. For reference, see applicable standard electrical bonding procedures in 20-75-00, Electrical Bonding and Grounding of Aircraft Structures – General data.

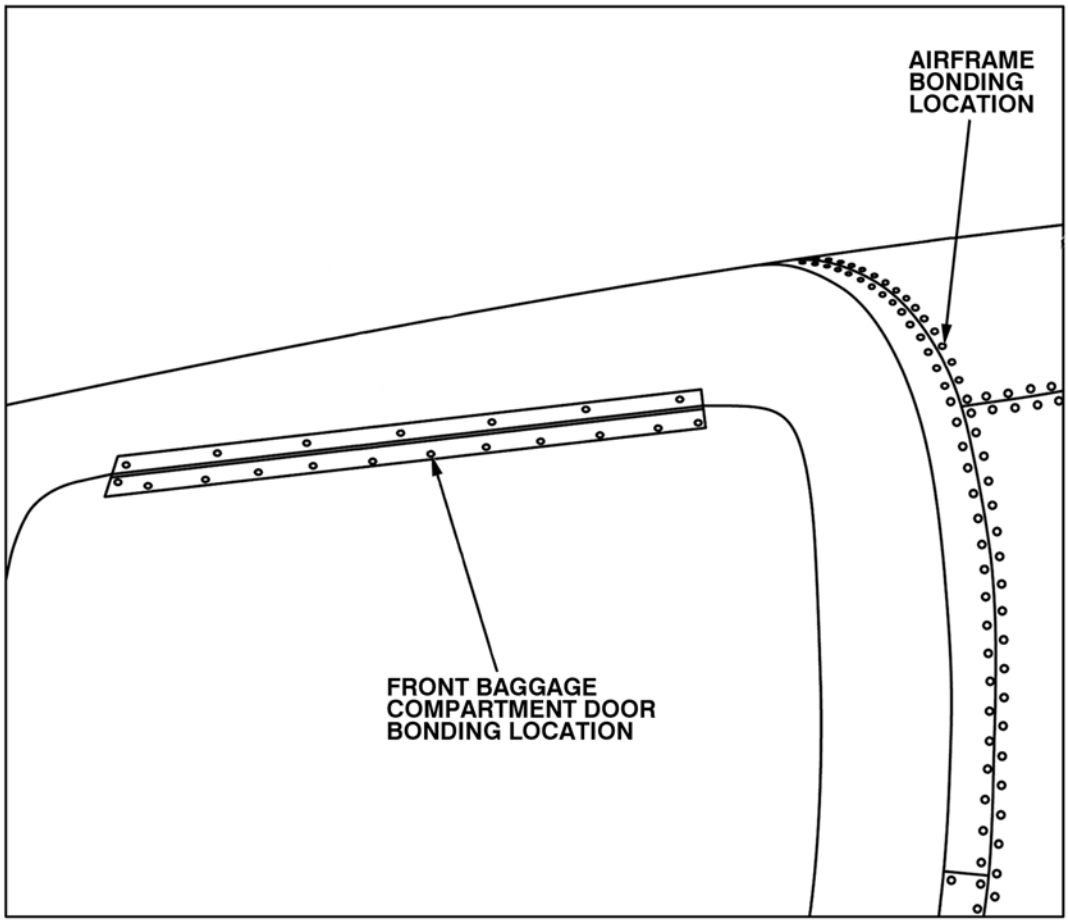

Front Baggage Compartment Door – Electrical Bonding Check Locations
Figure 2

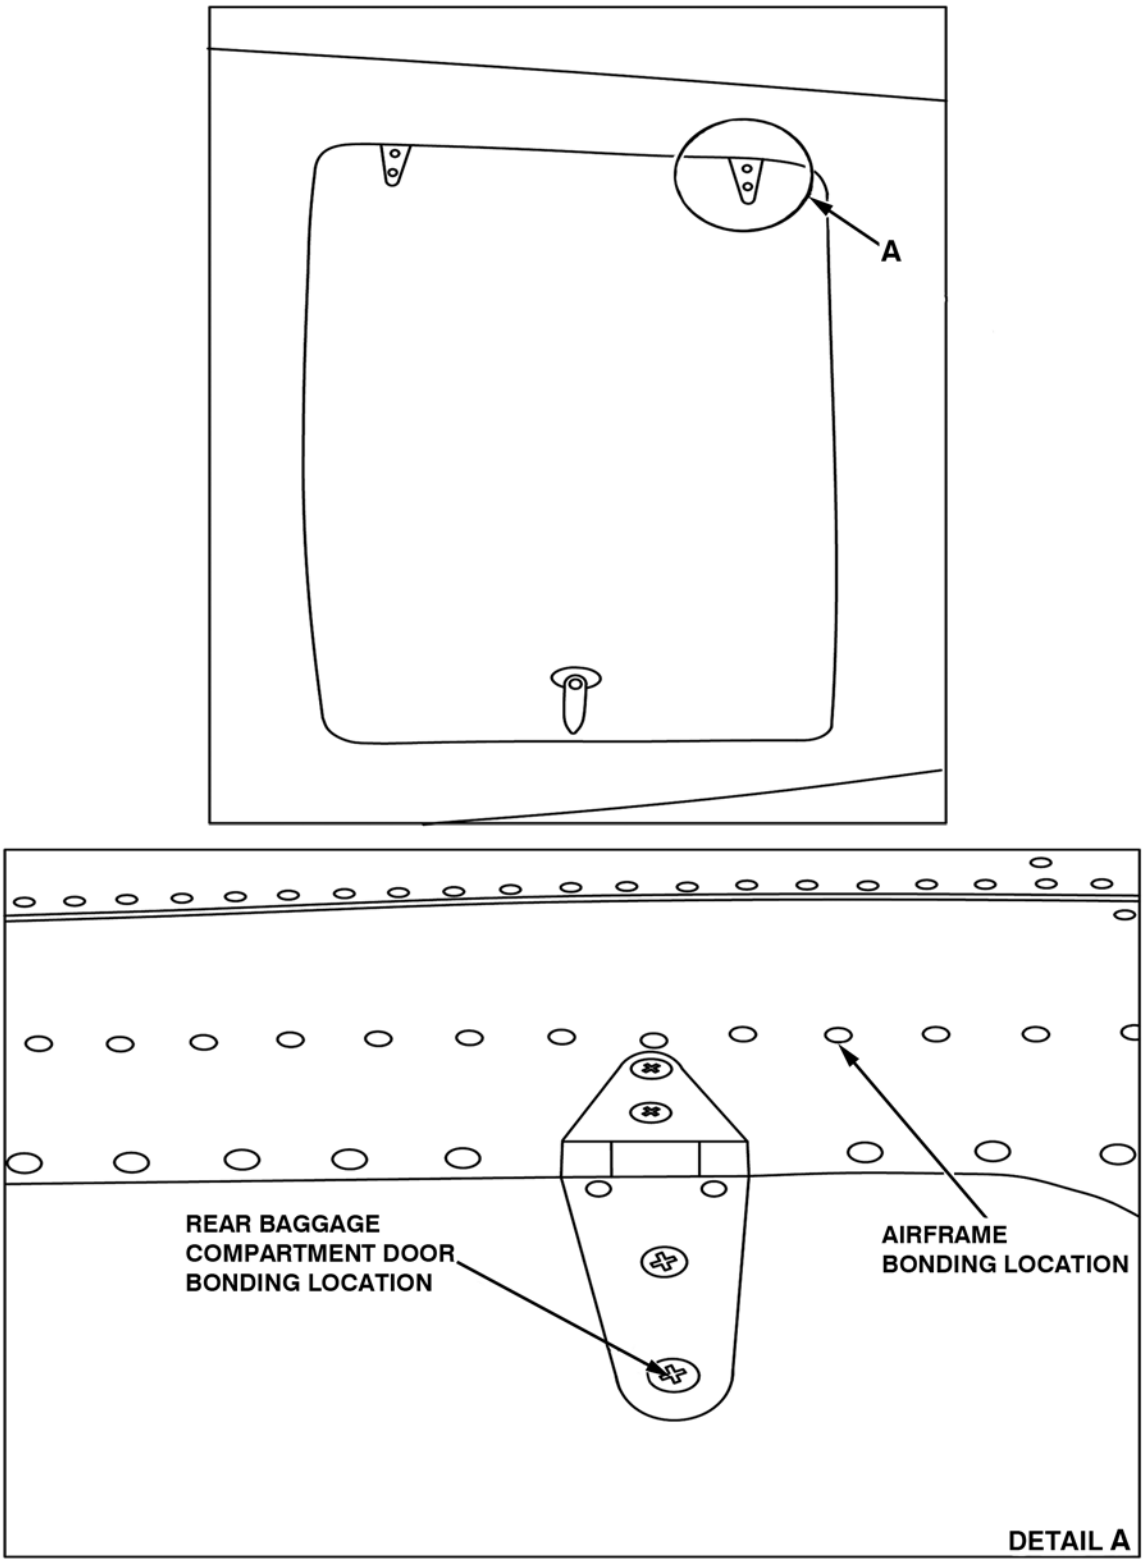

Rear Baggage Compartment Door – Electrical Bonding Check Locations
Figure 3