
Cowlings – General Data

1. General

Refer to Figure 1 for details.

Two engine cowlings (upper and lower) are provided to enclose each engine and accessories. Both cowlings fasten to each other and to the nacelle structure. The upper cowling is equipped with an aft facing air duct which provides an exhaust outlet for the engine compartment ventilation. Cooling air enters through an air inlet duct in the lower cowling. The lower cowling also contains an air intake duct for the engine and an air duct to direct a flow of air through the oil cooler. As protection against snow and ice, a retractable intake deflector and exit duct door, both electro-pneumatically operated, are installed in the intake duct. Further protection of the intake is achieved by a permanent screen fitted to the intake throat.

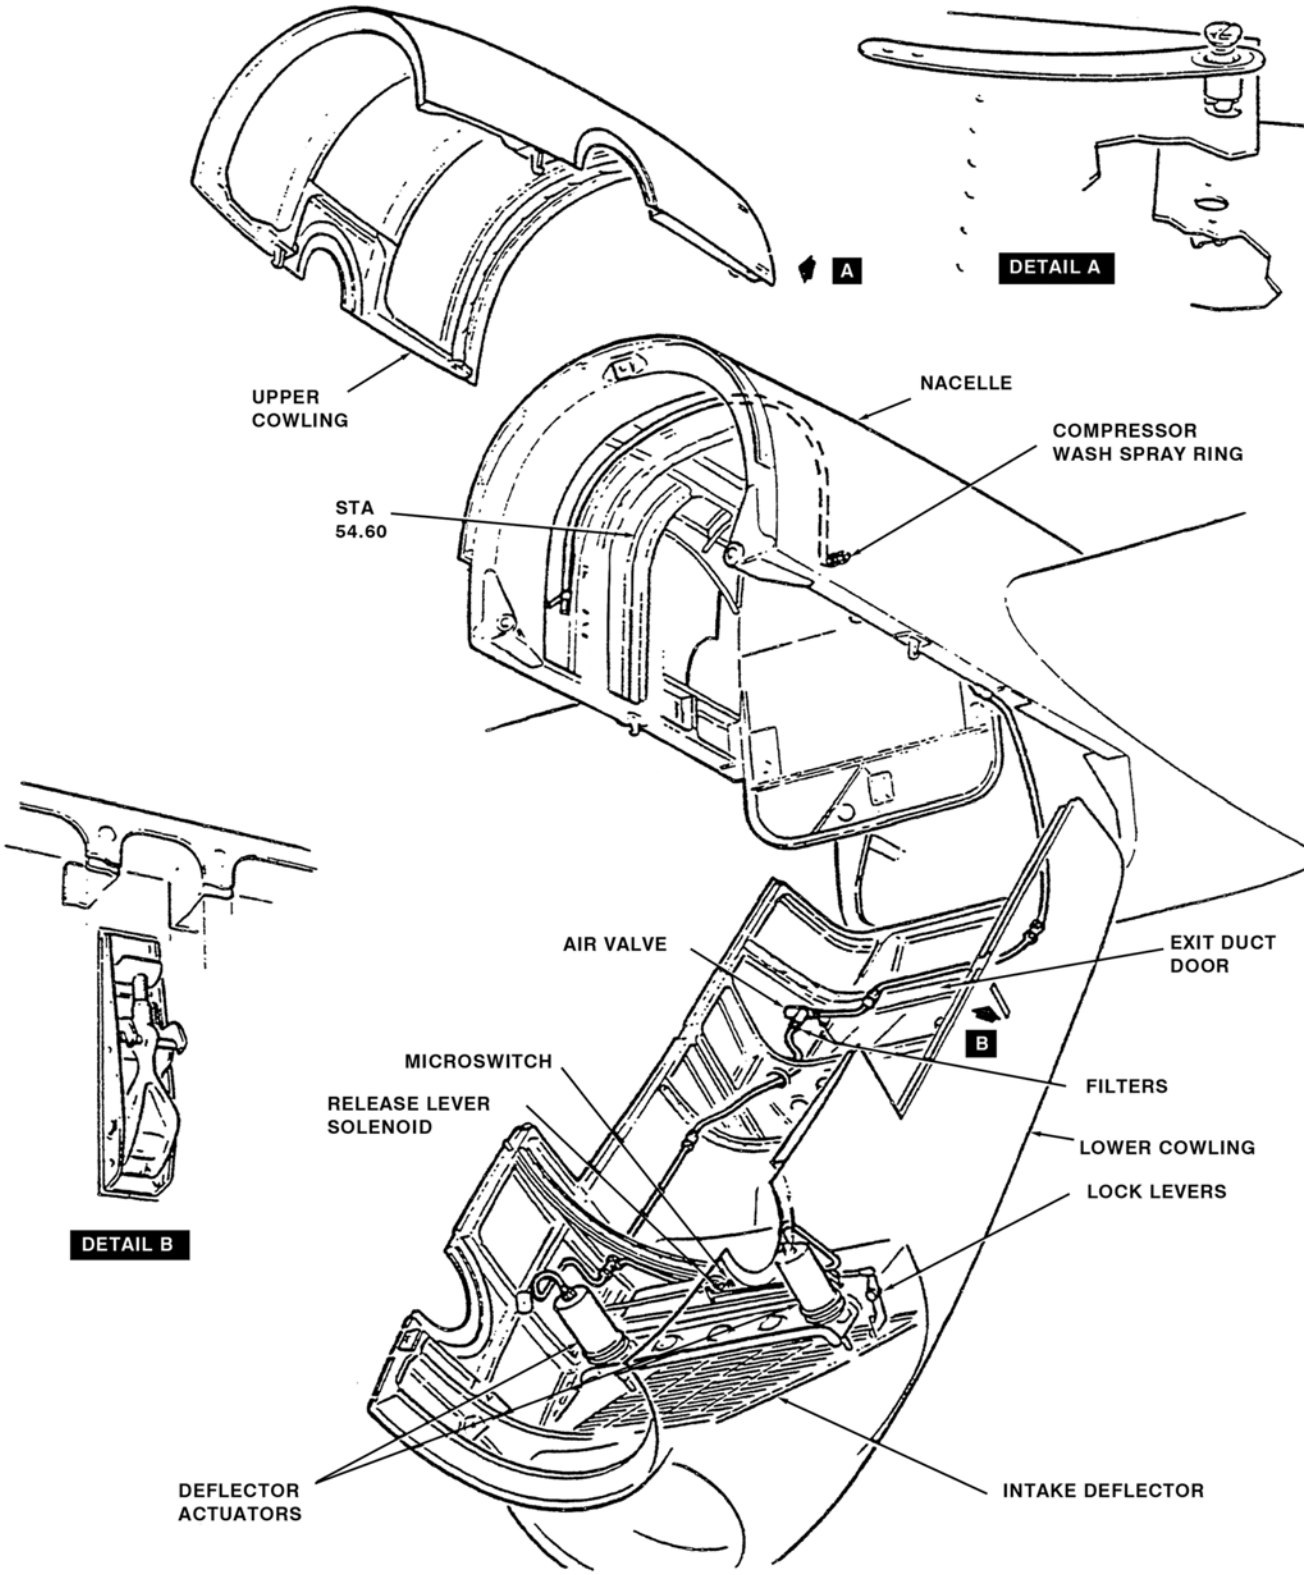

Engine Cowlings
Figure 1

2. Removal/Installation

A. Remove Cowlings

Note Two people are required for removal of lower cowling.

1) Release stud fasteners along rear end and latches on lower sides of upper cowling.

2) Lift off upper cowling.

3) Support lower cowling, release side latches and lower cowling.

4) Disconnect flexible air line and electrical connector to intake deflector.

5) Remove bolts securing rear hinge to cowling. Remove cowling.

6) Blank open air line.

B. Install Cowlings

1) Position lower cowling to rear hinge on nacelle and bolt cowling to hinge.

2) Connect flexible air line and electrical connector to intake deflector system.

3) Raise lower cowling and fasten side latches.

4) Place upper cowling in position and fasten rear stud fasteners and lower side latches.

This Page Intentionally Left Blank