Mounts – General Data

1. General

Refer to Figure 1 for details.


The engine is supported in the nacelle at three points and attached to each point by a single engine attachment bolt. Engine vibration is dampened by means of vibration isolators, mounted on the engine, through which pass the engine attachment bolts.

A. Engine Mount

The engine mount consists of the front frame of the nacelle structure and three fittings which are riveted to the frame. Each fitting is in three parts; adapter, plate and bushing. The adapter is riveted to the nacelle structure on the rear side of the front frame, and the plate is positioned on the front face of the front frame and riveted to the adapter flange. A bushing is inserted in the plate of the fitting and can be replaced if damaged. Each adapter is drilled to provide the housing for a barrel type nut. The fittings are not interchangeable, but the bushings are.

B. Vibration Isolators

Three vibration isolators are required to support each engine in the nacelle. The vibration isolators are each secured to the engine combustion casing by four bolts, and by a single bolt to the nacelle structure attachment point. The two front bolts securing the vibration isolator on the top of the engine also secure the rear engine slinging bracket. A vibration isolator can be replaced without removing the engine provided the engine weight is supported.

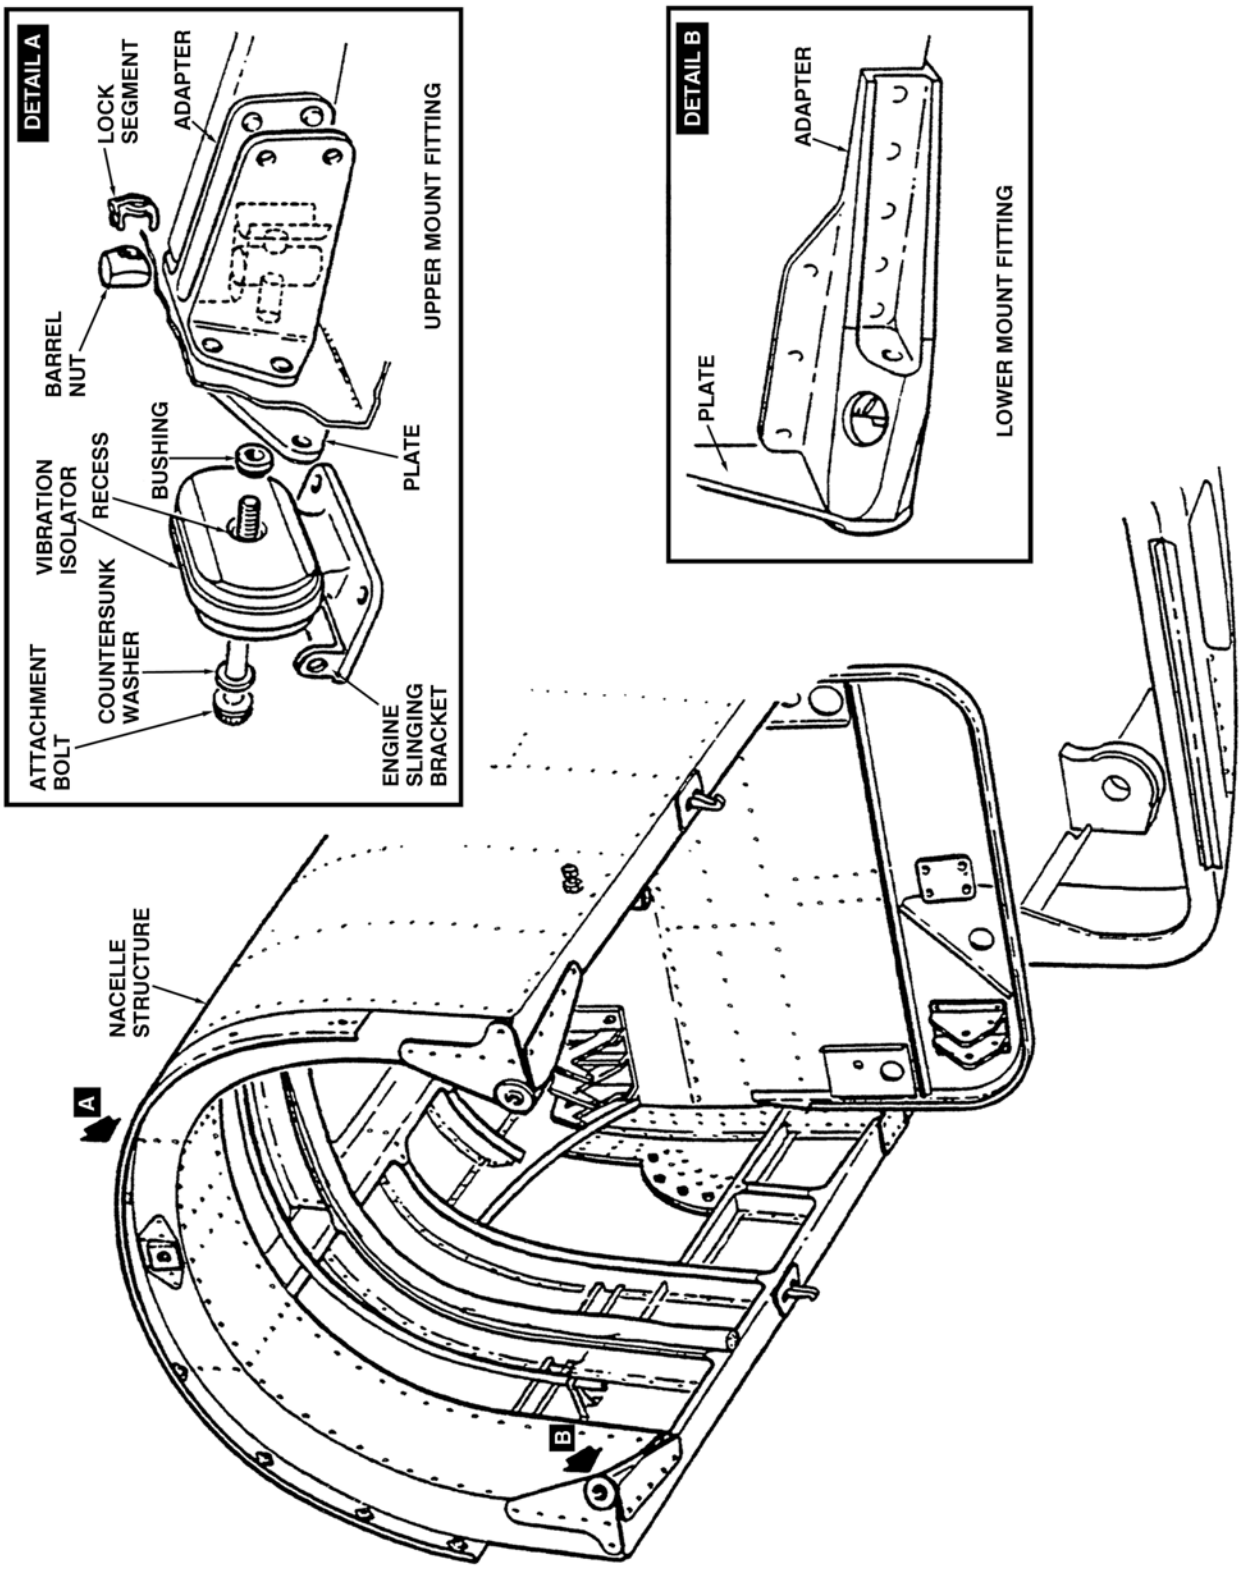

Engine Mounting
Figure 1

Print Date: 2025-09-18