
Electrical Harness – General Data

1. General


Refer to Figure 1 for details.

The power plant electrical harness distributes power to or from all engine electrical services, fire detectors and starter generator. The harness is disconnected at the engine firewall by means of two connectors and two terminal lugs for the heavier starter generator cables. The harness is routed from the engine firewall, forward through the rear and forward fireseals to the reduction gear case and propeller electrical systems.

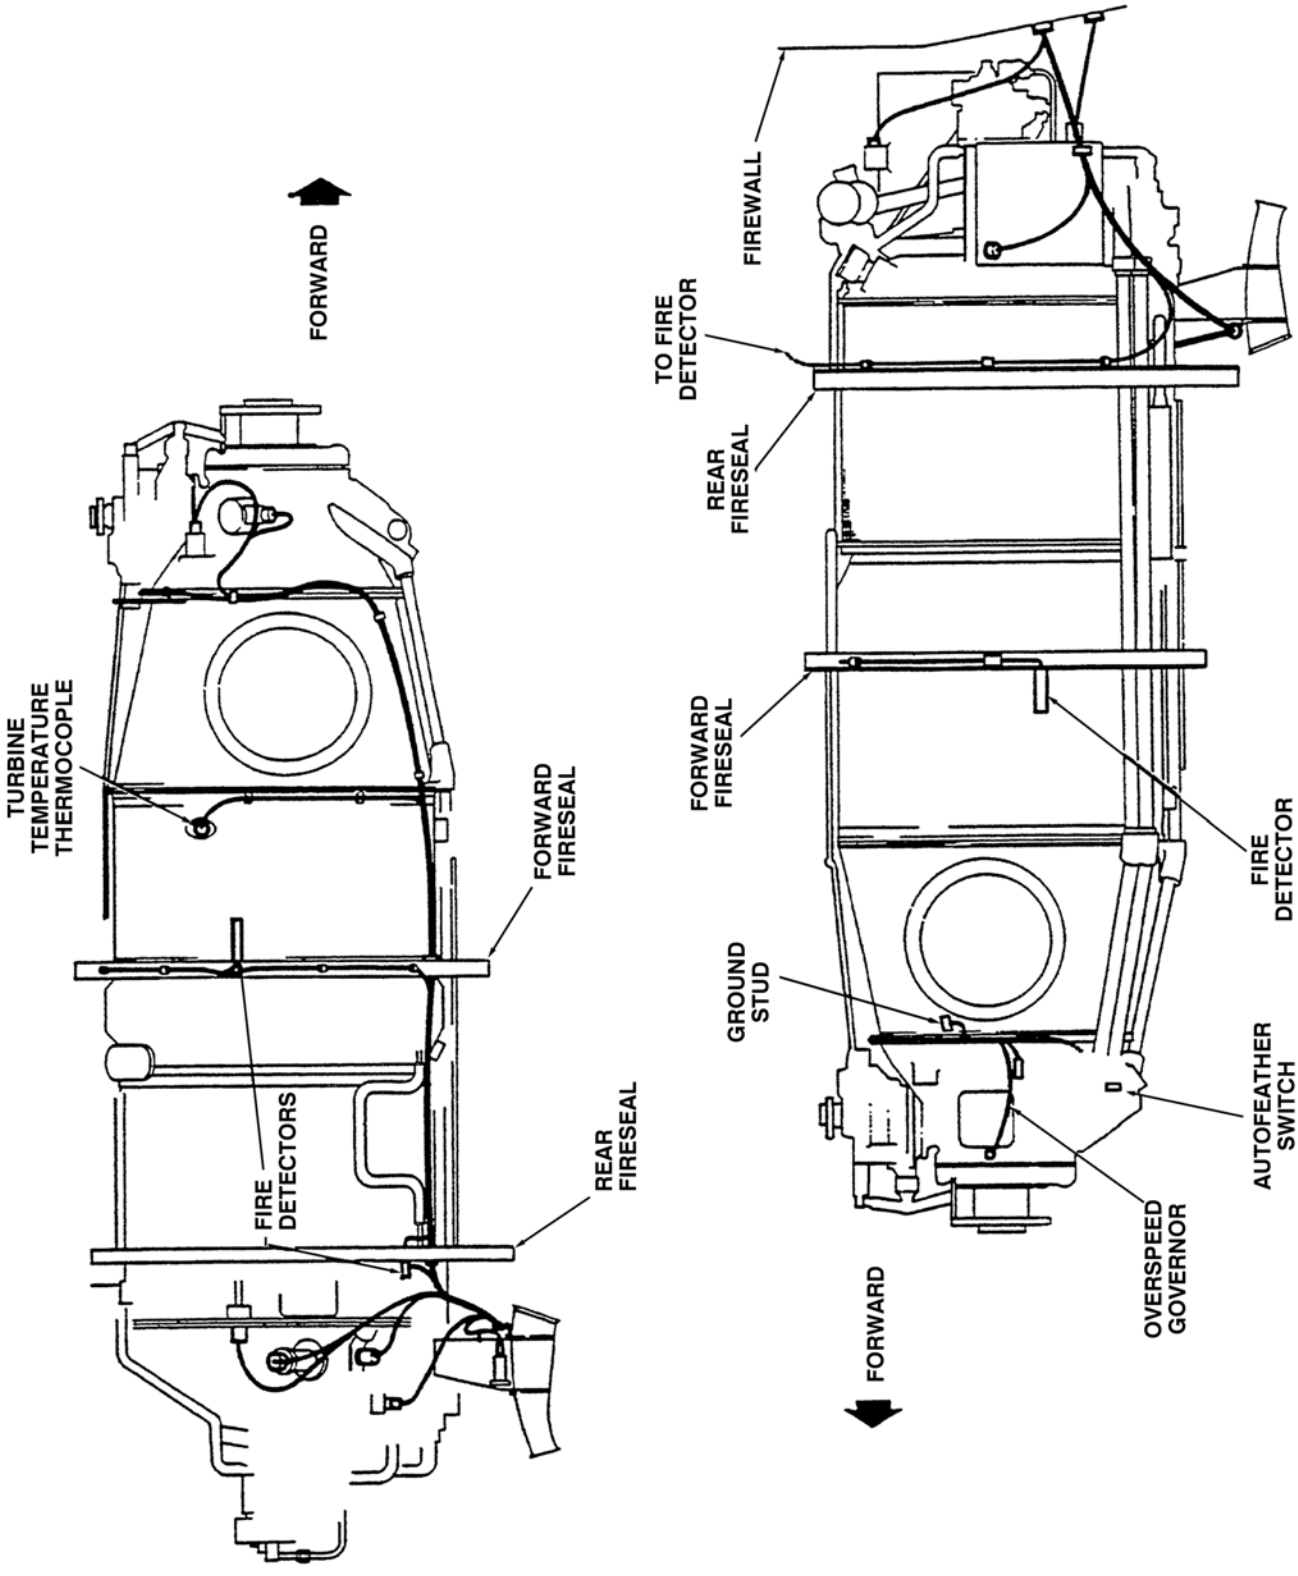


Electrical Harness
Figure 1 (Sheet 1 of 2)

Print Date: 2025-09-18

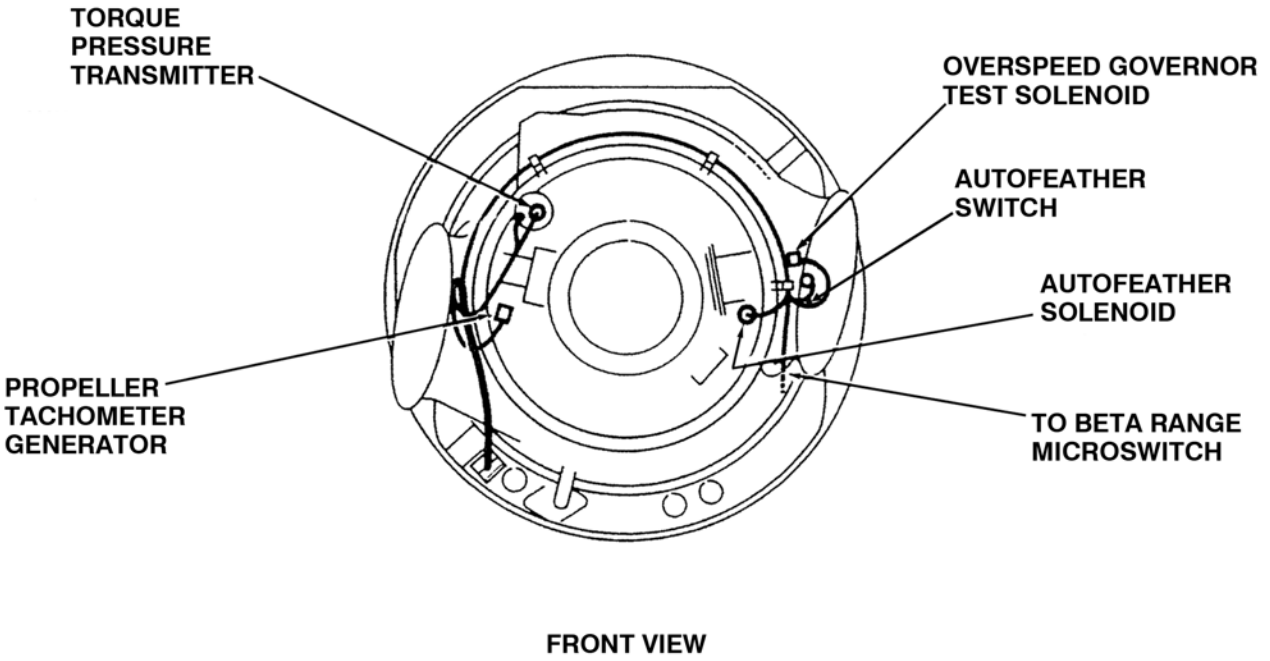

FRONT VIEW

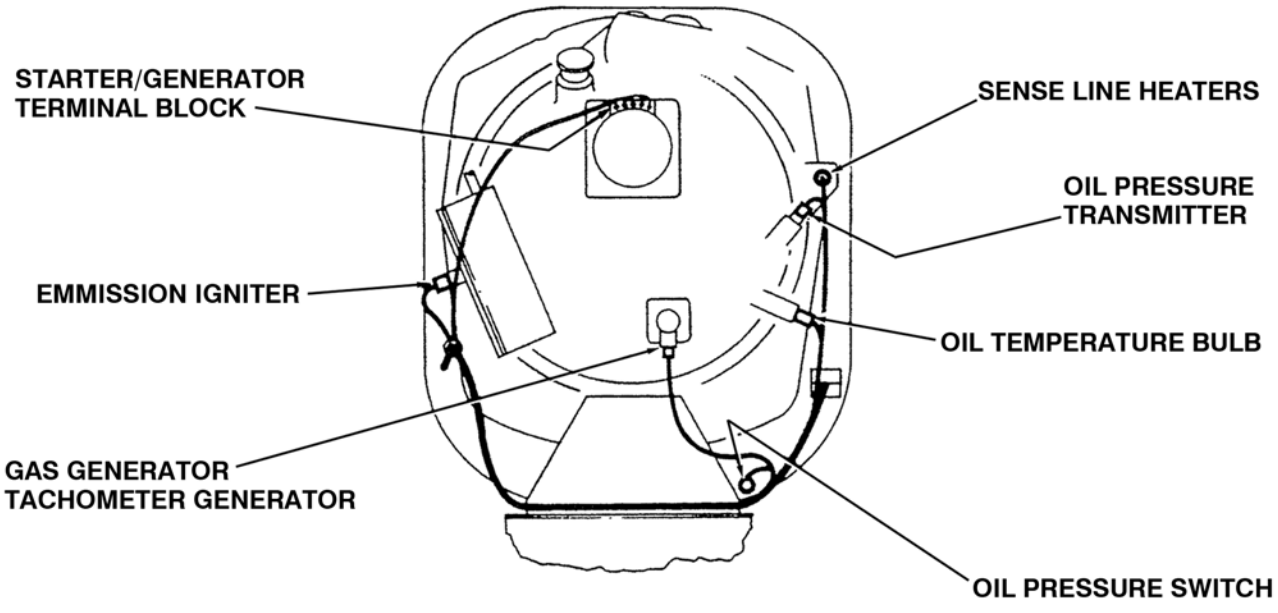

REAR VIEW

Electrical Harness
Figure 1 (Sheet 2 of 2)

2. Removal/Installation

Refer to Figure 1 for details.

A. Remove Electrical Harness

1) Ensure all electrical power is switched OFF.

2) Disconnect two electrical connectors at engine firewall.

3) Disconnect starter/generator leads at engine firewall.

4) Disconnect leads at engine current regulator.

5) Disconnect leads at fire detectors on rear and forward fireseals.

6) Disconnect leads from all electrical equipment on accessory case and reduction gear case.

7) Remove fairleads from forward and rear fireseals.

8) Disconnect leads from starter/generator.

9) Remove clamps retaining harness in position.

10) Remove harness.

11) With ignition harness remove as follows:

a) Disconnect harness leads at ignition exciter.

b) Disconnect harness leads at forward and rear fireseals.

c) Remove fairleads from forward and rear fireseals.

d) Disconnect harness leads from igniter plugs.

e) Remove harness.

B. Install Electrical Harness

1) Place electrical harness in position around engine and through fireseals.

2) Install harness retaining clamps.

3) Connect leads to starter/generator.

4) Install fairleads to forward and rear fireseals.

5) Connect leads to all electrical equipment on accessory case and reduction gear case.

6) Install leads to fire detectors on rear and forward fireseals.

7) Connect leads to engine current regulator.

8) Connect starter/generator leads to terminal lugs on firewall.

9) Connect electrical connectors at firewall and lockwire.

10) With ignition harness install as follows:

a) Place ignition harness through fireseals.

b) Install harness retaining clamps.

c) Connect leads to igniter plugs.

d) Install fairleads to forward and rear fireseals.

e) Connect leads to ignition exciter.

This Page Intentionally Left Blank