
Oil – General Data

1. General

Refer to Figure 1 for details.

The oil system is an integral part of the engine and is fully described in the PT6A–34 Engine Maintenance Manual. However, external lines are used to transfer scavenge oil from the engine to the cooler, and from the cooler to the tank. An engine breather line, connected to the upper right of the accessory case, passes through the firewall and vents overboard through the upper trailing edge of the wing strut. The system also consists of an engine mounted oil pressure transducer and oil temperature probe for each engine. There is an oil pressure switch mounted on top of the oil cooler.

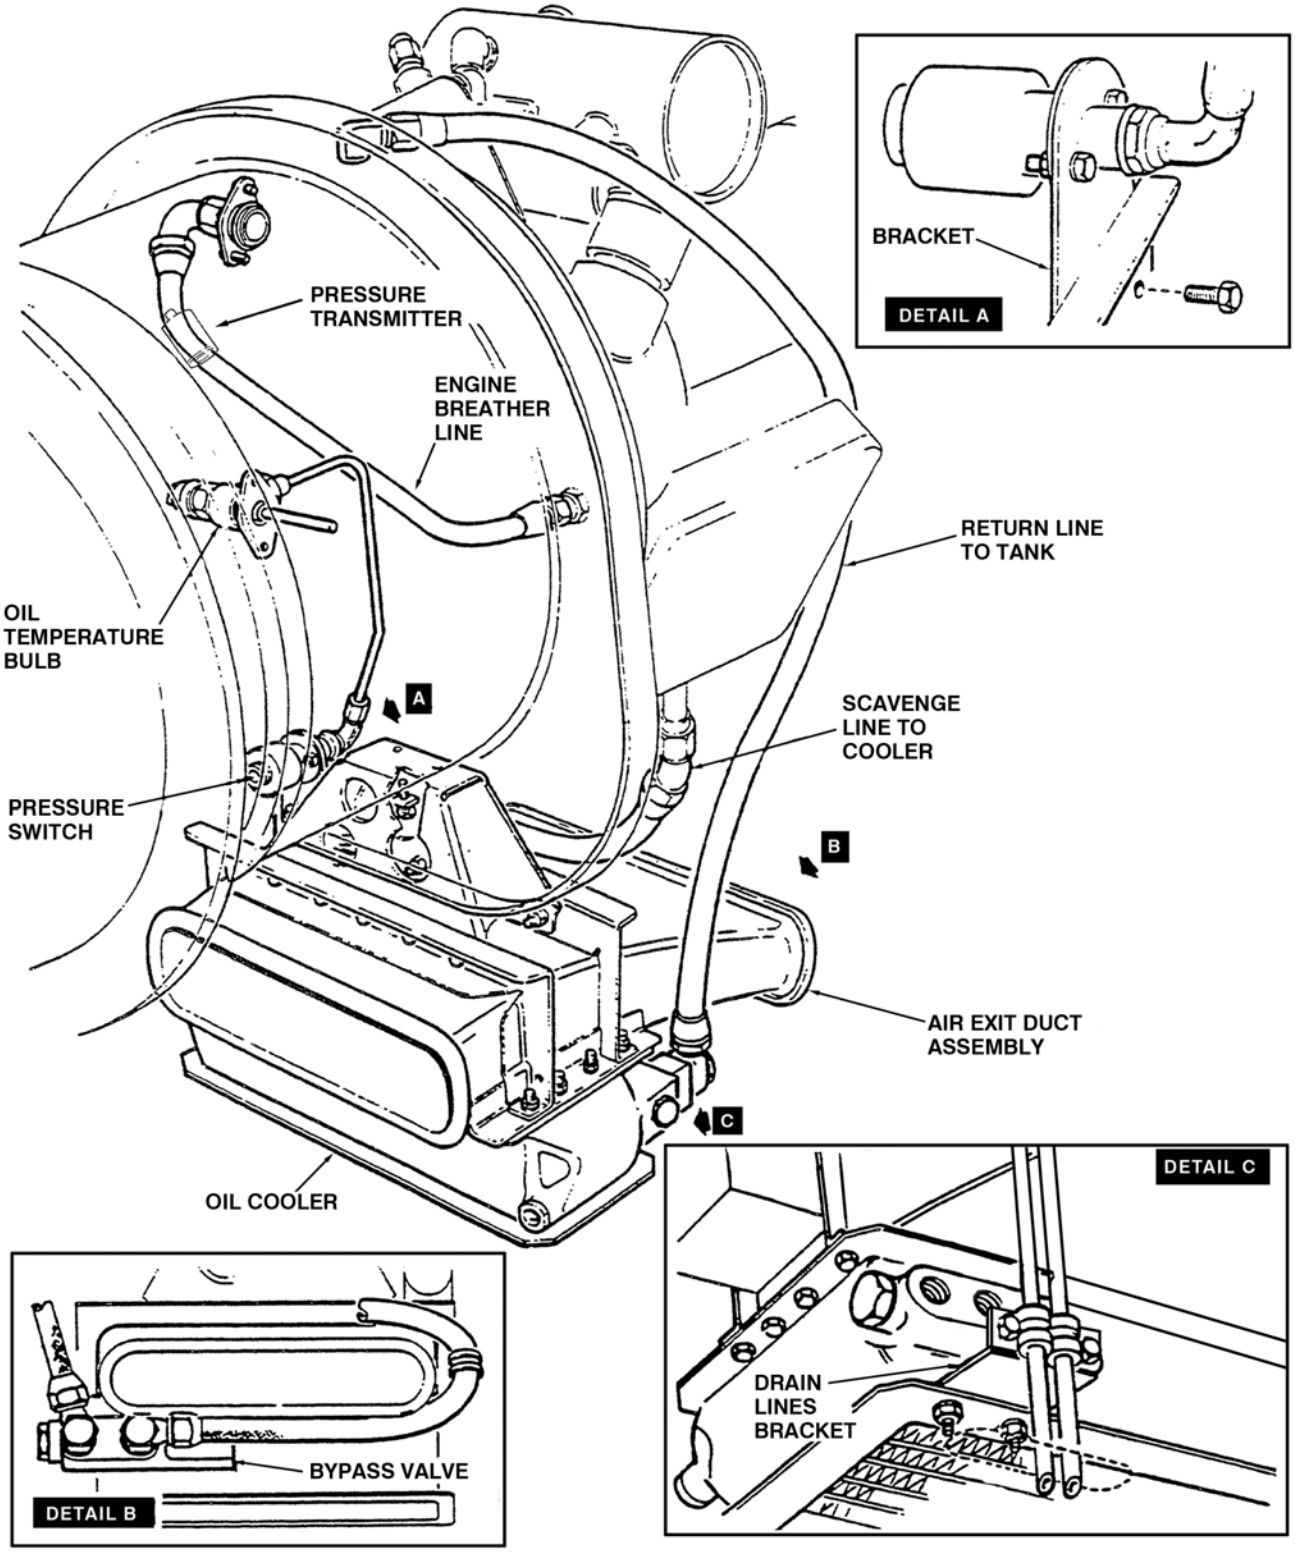

Oil System
Figure 1