ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J390	Unassigned		
P390	Installation Kit, TPU 67A (CM 2000 Config Module)	Part of 050-03078-0010	Honeywell
J391	Unassigned		
P391	Connector, Top Directional Antenna (Yel)	Part of 4153-2399	PIC
J392	Unassigned		
P392	Connector, Top Directional Antenna (Blk)	Part of 4153-2399	PIC
J393	Unassigned		
P393	Connector, Top Directional Antenna (Blu)	Part of 4153-2399	PIC
J394	Unassigned		
P394	Connector, Top Directional Antenna (Red)	Part of 4153-2399	PIC
J395	Unassigned		
P395	Connector, Bottom Omni-Directional Antenna (Yel)	Part of 4153-2399	PIC
J396	Unassigned		
P396	Unassigned		
J397	Unassigned		
P397	Unassigned		
J398	Unassigned		
P398	Unassigned		
J399	Unassigned		
P399	Installation Kit, 245 (Speaker Amplifier)	MS3456L16S-1S	
	Backshell	M85049/31-16N	
J400	Unassigned		
P400	Installation Kit, 247 (Isolation Amplifer)	Part of 247-IKC	NAT
J401	Unassigned		
P401	Installation Kit, SAFE 128 Fan (L)	Part of 305477-00	Sandia
J402	Unassigned		
P402	Installation Kit, SAFE 128 Fan (R)	Part of 305477-00	Sandia
J403	Unassigned		
P403	Installation Kit, AK 551 (14 Volt Converter)	Part of 55101M	Ameri-King
J404	Connector, Maintenance, HF	M9177/4-1	
P404	Unassigned		
J405	Connector, Maintenance Air/Ground Switch	RD9F00000	Positronic
P405	Connector, Maintenance Air/Ground Plug	RD9M00000	Positronic
J406	Connector, No.1 RJ45-F		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Pre Mod 6/2188)	110382	PIC
	Reserved		
	(Post Mod 6/2188)		
P406	Unassigned		
J407	Connector, No.2 RJ45-F		
	(Pre Mod 6/2188)	110382	PIC
	Reserved		
	(Post Mod 6/2188)		
P407	Unassigned		
J408	Connector, Maintenance, No.1 ASCB	RD9M00000	Positronic
	Backshell		
	(Pre Mod 6/2303)	5205817-1	Tyco Electronics
	Jack Screws, Female		
	(Post Mod 6/2303)	550T009M1R3G0	Tyco Electronics
P408	Connector, Maintenance, No.1 ASCB	RD9F00000	Positronic
	Backshell	550-200M1R1K	Glenair
J409	Connector, Maintenance, No.2 ASCB	RD9M00000	Positronic
	Backshell		
	(Pre Mod 6/2303)	5205817-1	Tyco Electronics
	Jack Screws, Female		
	(Post Mod 6/2303)	550T009M1R3G0	Tyco Electronics
P409	Connector, Maintenance, No.2 ASCB	RD9F00000	Positronic
	Backshell	550-200M1R1K	Glenair
J410	Connector, BNC Feedthru, Isolated (Triax)	ADBJ20-E1-BJ79	Trometer
P410	Connector, Triax	PL75-43	Trometer
J411	Connector, BNC Feedthru, Grounded (Triax)	ADBJ20-E3-BJ79	Trometer
P411	Connector, Triax	PL75-43	Trometer
J412	Connector, ADAHRS 1A COM Port	M24308/2-281	Positronic
P412	Unassigned		
J413	Connector, ADAHRS 1B COM Port	M24308/2-281	Positronic
P413	Unassigned		
J414	Installation Kit, KTA 910 (TCAS 1)	Part of 050-03361-0000	Honeywell
P414	Unassigned		
J415	Installation Kit, TPU 67A (TCAS II)	Part of 050-03078-0010	Honeywell
P415	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J416	Unassigned		
P416	Connector, LT-45 (Lamp Dimmer)	MS3456L14S-5S	
	Backshell	M85049/31-14N	
J417	Unassigned		
P417	Unassigned		
J418	Unassigned		
P418	Connector, Configuration Module (IM-950)	RD9F00000	Positronic
J419	Unassigned		
P419	Connector, Configuration Module (IM-950)	RD9F00000	Positronic
J420	Unassigned		
P420	Connector, Brake Pressure Transducer	MS3475L10-6S	
	Backshell (90°)	M85049/51-1-10N	
J421	Unassigned		
P421	Connector, Hydraulic Pressure Transducer	MS3475L10-6S	
	Backshell (90°)	M85049/51-1-10N	
J422	Unassigned		
P422	Connector, Cockpit Temp Bulb	MS3456L10SL-4S	
	Backshell (90°)	M85049/51-1-10N	
J423	Unassigned		
P423	Unassigned		
J424	Unassigned		
P424	Unassigned		
J425	Unassigned		
P425	Connector, Cabin Temp Bulb	MS3456L10SL-4S	
	Backshell (90°)	M85049/51-1-10N	
J426	Connector, CVR Monitor Jack	SWC 11	Switchcraft
P426	Unassigned		
J427	Reserved		
P427	Connector, Aileron Servo, J1		
	(S.O.O. 6221 or S.O.O. 6324)	D38999/26FD19SN	
	Backshell (90°)		
	(S.O.O. 6221 or S.O.O. 6324)	M85049/39-15N	
J428	Reserved		
P428	Connector, Aileron Servo, J2		
	(S.O.O. 6221 or S.O.O. 6324)	D38999/26FD19SA	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell (90°)		
	(S.O.O. 6221 or S.O.O. 6324)	M85049/39-15N	
J429	Reserved		
P429	Connector, Elevator Servo, J1		
	(S.O.O. 6221 or S.O.O. 6324)	D38999/26FD19SN	
	Backshell (90°)		
	(S.O.O. 6221 or S.O.O. 6324)	M85049/39-15N	
J430	Reserved		
P430	Connector, Elevator Servo, J2		
	(S.O.O. 6221 or S.O.O. 6324)	D38999/26FD19SA	
	Backshell (90°)		
	(S.O.O. 6221 or S.O.O. 6324)	M85049/39-15N	
J431	Reserved		
P431	Connector, Rudder Servo, J1		
	(S.O.O. 6221 or S.O.O. 6324)	D38999/26FD19SN	
	Backshell (90°)		
	(S.O.O. 6221 or S.O.O. 6324)	M85049/39-15N	
J432	Reserved		
P432	Connector, Rudder Servo, J2		
	(S.O.O. 6221 or S.O.O. 6324)	D38999/26FD19SA	
	Backshell (90°)		
	(S.O.O. 6221 or S.O.O. 6324)	M85049/39-15N	
J433	Jack, Phones (Fourth Crew Intercom)		
	(S.O.O. 6229)	SWC 11	Switchcraft
P433	Reserved		
J434	Jack, Mic (Fourth Crew Intercom)		
	(S.O.O. 6229)	SWC S12B	Switchcraft
P434	Reserved		
J435	Reserved		
P435	Connector, Stall Warning Annunciator	18-200	Vivisun
J436	Reserved		
P436	Connector, Triaxial Accelerometer (Capped and stowed when S.O.O. 6388 is installed)	MS3475L12-10S	
	Backshell	M85049/52-1-12N	
J437	Connector, Male (No.1 Cabin Speaker)	1-640507-0	Tyco Elec./AMP

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P437	Connector, Female (No.1 Cabin Speaker)	1-640517-0	Tyco Elec./AMP
J438	Connector, Male (No.2 Cabin Speaker)	1-640507-0	Tyco Elec./AMP
P438	Connector, Female (No.2 Cabin Speaker)	1-640517-0	Tyco Elec./AMP
J439	Connector, Male (No.3 Cabin Speaker)	1-640507-0	Tyco Elec./AMP
P439	Connector, Female (No.3 Cabin Speaker)	1-640517-0	Tyco Elec./AMP
J440	Connector, Male (No.4 Cabin Speaker)	1-640507-0	Tyco Elec./AMP
P440	Connector, Female (No.4 Cabin Speaker)	1-640517-0	Tyco Elec./AMP
J441	Connector, Male (No.5 Cabin Speaker)	1-640507-0	Tyco Elec./AMP
P441	Connector, Female (No.5 Cabin Speaker)	1-640517-0	Tyco Elec./AMP
J442	Connector, Male (No.6 Cabin Speaker)	1-640507-0	Tyco Elec./AMP
P442	Connector, Female (No.6 Cabin Speaker)	1-640517-0	Tyco Elec./AMP
J443	Connector, Fuel Selector Panel Overlay	MS90335-4	
P443	Unassigned		
J444	Connector, Overhead Switch Panel Overlay	MS90335-4	
P444	Unassigned		
J445	Connector, LH Switch Panel Overlay	MS90335-4	
P445	Unassigned		
J446	Connector, RH Switch Panel Overlay	MS90335-4	
P446	Unassigned		
J447	Connector, Trim Panel Overlay	MS90335-4	
P447	Unassigned		
J448	Connector, Cockpit Dimmer Panel Overlay	MS90335-4	
P448	Unassigned		
P449	Connector, DC/DC Power Converter		
	(S.O.O. 6282)	Part of RG56	KGS Electronics
P450	Connector, DC/DC Power Converter		
	(S.O.O. 6281)	Part of RG56	KGS Electronics
P451	Connector, Second RAD ALT		
	(S.O.O. 6218)	KPSE06F20-41S	
P452	Refer to General Information, Table 3 — Coaxial Cable Requirements		
P453	Refer to General Information, Table 3 — Coaxial Cable Requirements		
P454	Refer to General Information, Table 3 — Coaxial Cable Requirements		
P455	Refer to General Information, Table 3 — Coaxial Cable Requirements		
P456	Connector, VHF-FM Transceiver		
	(S.O.O. 6296)	RD15F10Z00	Positronic

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P457	Refer to General Information, Table 3 — Coaxial Cable Requirements		
P458	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J465	Connector, Control Column Disc		
	(Post Mod 6/2303)	MS3470L18-32S	
	Backshell		
	(Post Mod 6/2303)	M85049/31-18N	
	Nut Ring		
	(Post Mod 6/2303)	M85528/2-18A	
P465	Connector, Control Column Disc		
	(Post Mod 6/2303)	MS3475L18-32P	
	Backshell		
	(Post Mod 6/2303)	M85049/31-18N	
J469	Reserved		
P469	Connector, LED Landing Lights - Flasher Assembly		
	(Post Mod 6/2285)	D38999/26FA35SN	
J470	Reserved		
P470	Connector, LED Landing Lights - Flasher Assembly		
	(Post Mod 6/2285)	D38999/26FA35PN	
J473	Reserved		
P473	Connector, Micro QAR		
	(S.O.O. 6351 or S.O.O. 6356)	M83723/71R1415N	
P474	Connector, Avionics Start Battery		
	(Post Mod 6/2315)	MS27467T15B5P	
	Backshell		
	(Post Mod 6/2315)	M85049/47W14	
J474	Reserved		
J1001	Connector, Generator Power & Control Box	MS3470L14-12SW	
	Nut Ring	M85528/2-14A	
P1001	Connector, Generator Power & Control Box	MS3475L14-12PW	
	Backshell	M85049/52-1-14N	
J1002	Connector, Generator Power & Control Box	MS3470L14-12S	
	Nut Ring	M85528/2-14A	
P1002	Connector, Generator Power & Control Box	MS3475L14-12P	
	Backshell	M85049/52-1-14N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	CR (DIODES)		
A1-CR1	Diode	1N4007	
A1-CR2	Diode	1N4007	
A1-CR3	Diode	1N4007	
A1-CR4	Diode	1N4007	
A1-CR5	Diode	16F40	
A1-CR6	Diode	16F40	
A1-CR7	Diode Ass'y, A1-K3	VSP8-1	
A1-CR8	Diode Ass'y, A1-K4	VSP8-1	
A1-CR9	Diode Ass'y, A1-K5	VSP8-1	
A1-CR10	Diode Ass'y, A1-K6	VSP8-1	
A1-CR11	Diode Ass'y, A1-K7	VSP8-1	
A1-CR12	Diode Ass'y, A1-K8	VSP8-1	
A1-CR13	Diode Ass'y, A1-K11	VSP8-1	
A1-CR14	Diode Ass'y, A1-K11A	VSP8-1	
A1-CR15	Diode Ass'y, A1-K14	VSP8-1	
A1-CR16	Diode Ass'y, A1-K15	VSP8-1	
A2-CR1	Diode	1N4007	
A2-CR2	Diode	1N4007	
A2-CR3	Diode Ass'y, A2-K3	VSP8-1	
A3-CR1	Diode	1N4007	
A3-CR2	Diode	1N4007	
A3-CR3	Diode	1N4007	
A3-CR4	Diode	1N4007	
A3-CR5	Diode	1N4007	
A3-CR6	Diode	1N4007	
A3-CR7	Diode, A3-K1		
	(Post Mod 6/2239)	1N4007	
A3-CR8	Diode, A3-K2		
	(Post Mod 6/2239)	1N4007	
A5-CR1	Diode Ass'y, A5-K1		
	(S.O.O. 6187)	VSP8-1	
A5-CR2	Diode Ass'y, A5-K2		
	(S.O.O. 6187)	VSP8-1	
A8-CR1	Diode, A8-K1		

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
		(Post Mod 6/2239)	1N4007	
A8-CR2	Diode, A8-K2			
		(Post Mod 6/2239)	1N4007	
A9-CR1 /CR2	Diode, Module		TJSE20702	Amphenol PCD
A13-CR1	Diode Ass'y, S3		VSP8-1	
A13-CR2	Diode Ass'y, S3		VSP8-1	
A13-CR3 /CR4	Diode, Module			
		(Pre Mod 6/2285)	TJSE20702	Amphenol PCD
A13-CR5 /CR6	Diode, Module			
		(Pre Mod 6/2285)	TJSE20702	Amphenol PCD
CR100	Unassigned			
CR101	Unassigned			
CR102	Diode Assy, TB14		VSP8-1	
CR103	Diode Assy, TB14		VSP8-1	
CR104	Diode Assy, TB14		VSP8-1	
CR105	Diode Assy, TB14		VSP8-1	
CR106	Diode Assy, TB28		VSP8-1	
CR107	Diode Assy, TB28		VSP8-1	
CR108	Diode			
		(Aircraft without S.O.O. 6371)	1N4007	
		(S.O.O. 6371)	TJSE20702	Amphenol PCD
CR109	Diode			
		(Aircraft without S.O.O. 6371)	1N4007	
		(S.O.O. 6371)	TJSE20702	Amphenol PCD
CR110	Diode		BZX85C9V1	Fairchild
CR111	Unassigned			
CR112 /CR113	Diode, Module		TJSE20702	Amphenol PCD
CR114	Diode		1N4007	
CR115	Diode, Emergency Lights Battery			
		(S.O.O. 6205)	STPS160H100TV	STMicroelectronics
CR116 /CR117	Diode, Module		TJSE20702	Amphenol PCD

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CR118 /CR119	Diode, Module	TJSE20702	Amphenol PCD
CR120	Diode, K110	VSP8-1	
CR121	Diode, K111	VSP8-1	
CR122	Diode, K105	VSP8-1	
CR123	Diode, K106	VSP8-1	
CR124	Zener Diode Assy		
	(Post Mod 6/2239)	CSP325-41	
CR125	Diode Assy		
	(Post Mod 6/2239)	C6N1127-1	
CR126	Zener Diode Assy		
	(Post Mod 6/2239)	CSP325-41	
CR127	Diode Assy		
	(Post Mod 6/2239)	C6N1127-1	
CR136 /CR137	Diode, Module		
	(S.O.O. 6221 or S.O.O. 6324)	TJSE20702	Amphenol PCD
CR139 /CR140	Diode, Avionics Start Batt Charge		
	(Post Mod 6/2315)	STPS160H100TV	STMicroelectronics
CR141 /CR142	Diode, Avionics CB PNL Power Dist.		
	(Post Mod 6/2315)	STPS160H100TV	STMicroelectronics
CR143 /CR144	Diode, Avionics Start Batt Out		
	(Post Mod 6/2315)	STPS160H100TV	STMicroelectronics
CR145 /CR146	Diode, Avionics CB PNL Power Dist.		
	(Post Mod 6/2315)	STPS160H100TV	STMicroelectronics
CR147	Diode, K124		
	(Post Mod 6/2315)	VSP8-1	Viking Air Limited
	DS (LIGHTS)		
DS1	Stall Warning Annunciator	LED-40-17-HE-E03MM	Vivisun
DS2	Light, Copilot Map	D7825-3	Grimes
DS3	Light, Pilot Map	D7825-3	Grimes
DS4	Light, Flight Compartment Dome	2LA455601-25	Goodrich
DS5	Light, Fasten Belts/No Smoking Cabin Sign	APST 57-17-00LD	Aero Plastics & Structures

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
DS6	Light, Boarding	01-0770813-12	Whelen
DS7	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS8	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS9	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS10	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS11	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS12	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS13	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS14	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS15	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS16	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS17	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS18	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS19	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS20	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS21	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS22	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS23	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS24	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS25	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS26	Light, Passenger Reading	APST 59-26-03ALD	Aero Plastics & Structures
DS27	Light, Cabin	01-0770813-12	Whelen
DS28	Light, Cabin	01-0770813-12	Whelen

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
DS29	Light, Cabin	01-0770813-12	Whelen
DS30	Light, Cabin	01-0770813-12	Whelen
DS31	Light, Cabin	01-0770813-12	Whelen
DS32	Light, Cabin	01-0770813-12	Whelen
DS33	Light, FWD Baggage Compartment		
	(Pre Mod 6/2107)	01-0770813-12	Whelen
	(Post Mod 6/2107	01-0770813-16	Whelen
DS34	Light, Rear Baggage Compartment, FWD	01-0770813-12	Whelen
DS35	Light, Rear Baggage Compartment, AFT		
	(Pre Mod 6/2107)	01-0770813-12	Whelen
	(Post Mod 6/2107	01-0770813-16	Whelen
DS36	Light, Landing (R)		
	(Pre Mod 6/2285)	1X0455703-00	Goodrich
DS37	Light, Landing (L)		
	(Pre Mod 6/2285)	1X0455703-00	Goodrich
DS38	Light, Wing Inspection (R)		
	(Pre Mod 6/2140)	30-0239-2	Grimes
	(Post Mod 6/2140)	01-0771580-20	Whelen
DS39	Light, Wing Inspection (L)		
	(Pre Mod 6/2140)	30-0239-1	Grimes
	(Post Mod 6/2140)	01-0771580-10	Whelen
DS40	Light, Taxi	01-0790361-25	Whelen
DS41	Light, Beacon		
	(Pre Mod 6/2240)	01-0770900-05	Whelen
	(Post Mod 6/2240)	01-0771080-05	Whelen
DS42	Light, Strobe/Position (R)	01-0771110-03	Whelen
DS43	Light, Strobe/Position (L)	01-0771110-04	Whelen
DS44	Light, Tail Position	01-0771011-02	Whelen
DS45	Light, Aisle	01-0770813-12	Whelen
DS46	Light, Flap Selector Post Light	01-0770844-02	Whelen
DS47	Light, Flap Selector Post Light	01-0770844-02	Whelen
DS48	Light, Static Valve Post Light	01-0770844-02	Whelen
DS49	Light, Static Valve Post Light	01-0770844-02	Whelen
DS50	Light, Avionics Circuit Breaker Panel	2LA455155-20	Goodrich
DS51	Light, Avionics Circuit Breaker Panel	2LA455155-20	Goodrich

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
DS52	Light, Foot (R)	2LA455065-20	Goodrich
DS53	Light, Foot (L)	2LA455065-20	Goodrich
DS54	Light, Eye Height Reference Device	2LA007742-22	Goodrich
DS55	Light, Instrument Panel Flood Light	2LA455065-20	Goodrich
DS56	Light, Instrument Panel Flood Light	2LA455065-20	Goodrich
DS57	Light, Instrument Panel Flood Light	2LA455065-20	Goodrich
DS58	Light, Instrument Panel Flood Light	2LA455065-20	Goodrich
DS59	Light, Instrument Panel Flood Light	2LA455065-20	Goodrich
DS60	Light, Instrument Panel Flood Light	2LA455065-20	Goodrich
DS61	Light, Landing (R)		
	(Post Mod 6/2285)	01-0790783-00	Whelen
DS62	Light, Landing (L)		
	(Post Mod 6/2285)	01-0790783-00	Whelen
	F (FUSES)		
F1	Fuse	ANL-150	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F2	Fuse	ANL-150	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F3	Fuse	ANL-150	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F4	Fuse	ANL-150	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F5	Fuse	ANL-150	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F6	Fuse	ANL-150	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F7	Fuse	ANL-500	Cooper/Bussmann
	Fuse Holder	4164	Cooper/Bussmann
F1001	Fuse (Preheat)		
	(S.O.O. 6276 & 6287)	MDA-12	
	Fuse Holder (Preheat)		
	(S.O.O. 6276 & 6287)	HTB-421	
F1002	Fuse (Preheat)		
	(S.O.O. 6276 & 6287)	MDA-12	
	Fuse Holder (Preheat)		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(S.O.O. 6276 & 6287)	HTB-421	
F1003	Fuse (Cockpit Power Outlet)		
	(S.O.O. 6276 & 6287)	MDA-12	
	Fuse Holder (Cockpit Power Outlet)		
	(S.O.O. 6276 & 6287)	HTB-421	
F1004	Fuse (Cockpit Power Outlet)		
	(S.O.O. 6276 & 6287)	MDA-12	
	Fuse Holder (Cockpit Power Outlet)		
	(S.O.O. 6276 & 6287)	HTB-421	
	G (GENERATORS)		
G1	Generator, Left Starter	23048-046	Goodrich
G2	Generator, Right Starter	23048-046	Goodrich
	GRD (GROUNDS)		
M81714/27-20 ground modules used for 20-24 AWG ground wires.			
M81714/27-16 ground modules used for 16-20 AWG ground wires.			
	K (RELAYS)		
A1-K1	Relay, Landing Light (L)	XC-D4N	Leach
		alt. M83536/35-024M	Leach
	Socket, Relay	SO-1064-10425	Leach
A1-K2	Relay, Landing Light (R)		
	(Pre Mod 6/2285)	XC-D4N	Leach
		alt. M83536/35-024M	Leach
	Socket, Relay		
	(Pre Mod 6/2285)	SO-1064-10425	Leach
A1-K3	Relay, Boost Pump Aft (No.1)	MS25035-1	
A1-K4	Relay, Boost Pump Aft (No.2)	MS25035-1	
A1-K5	Relay, Generator Field (L)	MS24568-D1	
A1-K6	Relay, Generator Field (R)	MS24568-D1	
A1-K7	Relay, Start & Ignition (L)	MS24568-D1	
A1-K8	Relay, Start & Ignition (R)	MS24568-D1	
A1-K9	Relay, Start Control (L)	MS24149-D1	
A1-K10	Relay, Start Control (R)	MS24149-D1	
A1-K11	Relay, Hydraulic Oil Pump	MS24166-D1	
A1-K11A	Relay, Hydraulic Oil Pump (CB Open)	DSC32-1	Viking Air Limited
A1-K12	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
A1-K13	Unassigned		
A1-K14	Relay, Boost Pump Fwd (No.2)	MS25035-1	
A1-K15	Relay, Boost Pump Fwd (No.1)	MS25035-1	
A1-K16	Relay, Start Control (L)	DSC32-1	Viking Air Limited
A1-K17	Relay, Start Control (R)	DSC32-1	Viking Air Limited
A1-K18	Relay, Prop Deice Control	MS24166-D1	
A2-K1	Relay, Generator Control (L) (RCR)	A-701D	Hartman
A2-K2	Relay, Generator Control (R) (RCR)	A-701D	Hartman
A2-K3	Relay, Bus Tie	SM20ACD200A21	Precision Heliparts
A2-K5	Relay, Generator Fail (L)	DSC32-1	Viking Air Limited
A2-K6	Relay, Generator Fail (R)	DSC32-1	Viking Air Limited
A3-K1	Relay, Pump Changeover	DSC32-1	Viking Air Limited
A3-K2	Relay, Pump Changeover	DSC32-1	Viking Air Limited
A4-K1	Relay, ESIS Power	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K2	Relay, TCAS II Pulse Light	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K3	Relay, LH Fan Fail	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K4	Relay, RH Fan Fail	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K5	Relay, TAWS on Ground	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K6	Relay, Emergency Lights Test		
	(S.O.O. 6205)	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K7	Relay, Emergency Lights		
	(S.O.O. 6205)	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A4-K8	Relay, ESIS Test	M83536/2-028M	
	Socket, Relay	M12883/52-001	
A5-K1	Relay, Windshield Heat (L)		
	(S.O.O. 6205)	MS24166-D1	
A5-K2	Relay, Windshield Heat (R)		
	(S.O.O. 6205)	MS24166-D1	

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
A6-K1	Relay, Prop Deice (L)			
		(S.O.O. 6205)	MS24178-D1	
A6-K2	Relay, Prop Deice (R)			
		(S.O.O. 6205)	MS24178-D1	
A7-K1	Relay, Autofeather		DSC32-1	Viking Air Limited
A7-K2	Relay, Autofeather		DSC32-1	Viking Air Limited
A7-K3	Relay, Autofeather Time Delay (R)		1621-C-2001	Hi-G
A7-K4	Relay, Autofeather Time Delay (L)		1621-C-2001	Hi-G
A8-K1	Relay, Generator Field Control (L)		DSC32-1	Viking Air Limited
A8-K2	Relay, Generator Field Control (R)		DSC32-1	Viking Air Limited
A9-K1	Relay		DSC183-2	Viking Air Limited
	Socket, Relay		CL1-2068-161	
A9-K2	Relay		DSC183-2	Viking Air Limited
	Socket, Relay		CL1-2068-161	
A9-K3	Relay		DSC183-2	Viking Air Limited
	Socket, Relay		CL1-2068-161	
A9-K4	Relay		X-D4N	Leach
	Socket, Relay		S0-1064-001	Leach
K101	Relay, Fire Detection (L)		DSC32-1	Viking Air Limited
K102	Relay, Fire Detection (R)		DSC32-1	Viking Air Limited
K103	Relay, Cabin Vent Fan		MS24166-D1	
K104	Unassigned			
K105	Relay, External Power		SM20ACD200A21	Precision Heliparts
K106	Relay, Battery		SM20ACD200A21	Precision Heliparts
K107	Relay, Door Unlocked Warning		MS24149-D1	
K108	Relay, Start (R)		MS24172-D1	
K109	Relay, Start (L)		MS24172-D1	
K110	Relay, Generator (R)		MS24171-D1	
K111	Relay, Generator (L)		MS24171-D1	
K112	Relay, Pitot Fail (R)		Q-50AB-1	Hartman
K113	Relay, Pitot Fail (L)		Q-50AB-1	Hartman
K114	Relay, Wing Tip Tank (R)			
		(S.O.O. 6247)	XC-D4N	Leach
		(S.O.O. 6247)	alt. M83536/35-024M	Leach
	Socket, Relay		SO-1064-10425	Leach

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
K115	Relay, Wing Tip Tank (L)		
	(S.O.O. 6247)	XC-D4N	Leach
	(S.O.O. 6247)	alt. M83536/35-024M	Leach
	Socket, Relay	SO-1064-10425	Leach
K116	Relay, FDR Fail Removed when S.O.O. 6299 is incorporated		
	(Pre Mod 6/2303)	XC-D4N	Leach
	(Pre Mod 6/2303)	alt. M83536/35-024M	Leach
	Socket, Relay Removed when S.O.O. 6299 is incorporated	SO-1064-10425	Leach
K117	Relay		
	(S.O.O. 6001 with Mod 6/2182)	M83536/35-024M	
	Socket, Relay		
	(S.O.O. 6001 with Mod 6/2182)	M12883/56-01	
K118	Relay, 28V DC Plug		
	(S.O.O. 6283)	XC-D4N	Leach
	(S.O.O. 6283)	alt. M83536/35-024M	Leach
	Socket, Relay		
	(S.O.O. 6283)	SO-1064-10425	Leach
K119	Relay, Pitch Trim DN		
	(S.O.O. 6221 or S.O.O. 6324)	XC-D4N	Leach
	(S.O.O. 6221 or S.O.O. 6324)	alt. M83536/35-024M	Leach
	Socket, Relay		
	(S.O.O. 6221 or S.O.O. 6324)	SO-1064-10425	Leach
K120	Relay, Pitch Trim Up		
	(S.O.O. 6221 or S.O.O. 6324)	XC-D4N	Leach
	(S.O.O. 6221 or S.O.O. 6324)	alt. M83536/35-024M	Leach
	Socket, Relay		
	(S.O.O. 6221 or S.O.O. 6324)	SO-1064-10425	Leach
K121	Relay, Pitch Trim INTR.		
	(S.O.O. 6221 or S.O.O. 6324)	XC-D4N	Leach
	(S.O.O. 6221 or S.O.O. 6324)	alt. M83536/35-024M	Leach
	Socket, Relay		
	(S.O.O. 6221 or S.O.O. 6324)	SO-1064-10425	Leach
K122	Relay, Runaway CAS		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(S.O.O. 6221 or S.O.O. 6324 – Post Mod 6/2348)	XC-D4N	Leach
	(S.O.O. 6221 or S.O.O. 6324 – Post Mod 6/2348)	alt. M83536/35-024M	Leach
	Socket, Relay		
	(S.O.O. 6221 or S.O.O. 6324 – Post Mod 6/2348)	SO-1064-10425	Leach
K123	Relay, GA DISC		
	(S.O.O. 6221 or S.O.O. 6324 – Post Mod 6/2348)	LM-1210-E-MAAHP	Vivisun
K124	Relay, Avionics Start Batt CTRL		
	(Post Mod 6/2315)	MS24166-D1	
	PS (POWER SUPPLIES)		
PS1	Power Supply, LPS (Programmable)	LPS 99-1128	Firan Technology Group
PS2	Power Supply, LPS (Non Programmable)	LT-45() or LT-45(d)	KGS Electronics
PS3	Power Supply, Landing Lights (Master)		
	(Pre Mod 6/2285)	8ES455338-20	Goodrich
PS4	Power Supply, Landing Lights (Slave)		
	(Pre Mod 6/2285)	8ES455338-20	Goodrich
PS5	Power Supply, Strobe Light (L)	01-0790101-02	Whelen
PS6	Power Supply, Strobe Light (R)	01-0790101-02	Whelen
PS7	Power Supply, JET PS-850B (ESIS)	501-1719-02	L-3
PS8	Flasher		
	(Post Mod 6/2285)	01-0771868-00	Whelen
	R (RESISTORS)		
A1-R1	Resistor	RW20G101	Ohmite
A1-R2	Unassigned		
A1-R3	Resistor	RW20G101	Ohmite
A9-R1	Resistor, Ass'y	C6NF1484-17	Viking Air Limited
		(RN60C5002F)	Vishay/Dale
A9-R2	Resistor, Ass'y	C6NF1484-17	Viking Air Limited
		(RN60C5002F)	Vishay/Dale
A9-R3	Resistor, Ass'y	(C6NF1484-15)	Viking Air Limited
		RN60C5003F	Vishay/Dale
A10-R1	Resistor, Bleed - Autofeather	RE70G60R4	Ohmite
A10-R2	Resistor, Bleed - Autofeather	RE70G60R4	Ohmite

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
A15-R1	Potentiometer, Ass'y (FLOOD)	RV6NAYSD502A	
A15-R2	Potentiometer, Ass'y (INSTRUMENT)	RV6NAYSD103A	
R100	Resistor, Windshield Wipers, Slow Mode	HSC1001R0J	Tyco Elec.
R101	Resistor, Reversionary Panel Volt Drop 150 ohm, 10 watt	610-1500-FBW	RDC
		alt. 610-1500-FB	RDC
R102	Resistor, Cabin Lights Dimming, 100 ohm, 25 watt	615-1000-FBW	RDC
R103	Resistor, Aileron Position Potentiometer	50046496-001	Honeywell
R104	Resistor, Elevator Position Potentiometer	50046496-001	Honeywell
R105	Resistor, Elevator Trim Position Potentiometer	50046496-001	Honeywell
R106	Resistor, Rudder Position Potentiometer	50046496-001	Honeywell
R107	Resistor, Rudder Trim Position Potentiometer	50046496-001	Honeywell
R108	Resistor, Flap Position Potentiometer	50046496-001	Honeywell
R109	Resistor, 124 Ohm	MFR-25FBF-124R	Yageo
R110	Unassigned		
R111	Resistor, 124 Ohm	MFR-25FBF-124R	Yageo
R112	Unassigned		
R113	Resistor, 124 Ohm	MFR-25FBF-124R	Yageo
R114	Resistor, 124 Ohm	MFR-25FBF-124R	Yageo
R115	Cap, 50 Ohm BNC	221629-1	Tyco Elec./AMP
		alt. PE6000-50	alt. Pasternack
R116	Cap, 50 Ohm BNC	221629-1	Tyco Elec./AMP
		alt. PE6000-50	alt. Pasternack
R117	Resistor, 10K Ohm	MFR-25FBF-10K0	Yageo
R118	Resistor, 5K Ohm	MFR-25FBF-4K99	Yageo
R119	Resistor, 10K Ohm	MFR-25FBF-10K0	Yageo
R120	Resistor, 5K Ohm	MFR-25FBF-4K99	Yageo
R121	Resistor, 10K Ohm	MFR-25FBF-10K0	Yageo
R122	Resistor, 5K Ohm	MFR-25FBF-4K99	Yageo
R123	Cap, 50 Ohm TNC	K240001	PIC
R124	Cap, 50 Ohm TNC	K240001	PIC
R125	Cap, 50 Ohm TNC	K240001	PIC
R126	Cap, 50 Ohm TNC	PE6011-50	Pasternack
R127	Cap, 50 Ohm TNC	PE6011-50	Pasternack
R128	Cap, 50 Ohm BNC	PE6000-50	Pasternack

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
		alt. PE6156	
R129	Cap, 50 Ohm SMA	Part of 4092743-901	Honeywell
R130	Resistor, 4.99K Ohm	PTF564K9900BYEK	Vishay/Dale
R131	Resistor, 4.99K Ohm	PTF564K9900BYEK	Vishay/Dale
R132	Resistor, 270 Ohm		
	(S.O.O. 6001 with Mod 6/2182)	RE65G2700	Vishay/Dale
R133	Resistor, Aft EMI Filter #1 (Aft Pump 1)		
	(Post Mod 6/2267)	RH010330R0FE02	
R134	Resistor, Aft EMI Filter #2 (Aft Pump 2)		
	(Post Mod 6/2267)	RH010330R0FE02	
R135	Resistor, Aft EMI Filter #1 (Fwd Pump 1)		
	(Post Mod 6/2267)	RH010330R0FE02	
R136	Resistor, Aft EMI Filter #1 (Fwd Pump 2)		
	(Post Mod 6/2267)	RH010330R0FE02	
R137	Resistor, Flt Compt Fans		
	(S.O.O. 6322)	F30J25R	
R138	Resistor, Flt Compt Fans		
	(S.O.O. 6322)	F30J25R	
	S (SWITCHES)		
S1	Switch, MASTER		
	(Pre Mod 6/2314)	MS24660-24M	
S2	Switch, POWER SOURCE		
	(Pre Mod 6/2314)	MS24659-21A	
S3	Switch, START	MS24660-27E	
S4	Switch, IGNITION	MS24525-23	
	Switch Guard	MS25224-1	
S5	Switch, LANDING LIGHTS STEADY	MS24524-23	
S6	Switch, LANDING LIGHTS PULSE	MS24524-21	
S6A	Switch, LANDING LIGHTS PULSE (Install with S.O.O. 6388, without S.O.O. 6382)	MS24523-33	
S7	Switch, GENERATORS LEFT	13AT-10	Honeywell
S8	Switch, GENERATORS RIGHT	13AT-10	Honeywell
S9	Unassigned		
S10	Switch, 12 Degree Flap Microswitch	V3-19	Honeywell
	Lever, Roller	JV-82	Honeywell

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
S11	Switch, Hydraulic Oil Pump Pressure	6607P-9-6A	Consolidated Cont.
S12	Switch, ESIS POWER	MS24659-31F	
S13	Switch, Emergency Lights		
	(S.O.O. 6205)	MS24659-31F	
S14	Switch, Left/Aft Pump 2	MS24659-24E	
S15	Switch, Right/Fwd Pump 2	MS24659-24E	
S16	Switch, Left/Aft Pump 1	MS24524-31	
S17	Switch, Right/Fwd Pump 1	MS24524-31	
S18	Switch, Both On Aft/Fwd - Normal	MS25002-2	
S19	Switch, Wing Tank (L)	MS24659-21E	
S20	Switch, Wing Tank (R)	MS24659-21E	
S21	Switch, Pneumatic Low Pressure	DHCSC70019-21	Viking Air Limited
S22	Switch, Low Pressure Switch	SW333	Autolite
S23	Switch, Low Pressure Switch	SW333	Autolite
S24	Switch, INTAKE DEFLECTOR	MS24524-27	
S25	Switch, W/S HEAT		
	(S.O.O. 6187)	MS21347-211	
S26	Switch, WIPER SPEED	MS24523-23	
S27	Switch, WIPER	MS24524-31	
S28	Switch, PITOT HEAT	MS24525-23	
S29	Switch, WING INSP	MS24523-23	
S30	Switch, BOARDING	MS24523-23	
S31	Switch, POSITION	MS24523-23	
S32	Switch, BEACON	MS24523-23	
S33	Switch, TAXI	MS24523-23	
S34	Switch, STROBE	MS24523-23	
S35	Switch, CABIN GENERAL	MS24523-21	
S36	Switch, CABIN READING	MS24524-23	
S37	Switch, CAUTION LIGHTS	MS24523-31	
S37A	Switch, CAUTION LIGHTS		
	(S.O.O. 6001 with Mod 6/2182)	MS24524-31	
S38	Switch, MAP	MS24523-23	
S39	Switch, CABIN SIGNS	MS24524-21	
S40	Switch, Aisle Light Switch	1TP12-1	Honeywell
S41	Switch, Eye Height Reference Device	MS24655-221	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
S42	Switch, FOOTWELL	MS24655-221	
S43	Switch, VENT FAN	MS24524-23	
S44	Switch, BLEED AIR LEFT	MS24658-23D	
S45	Switch, BLEED AIR RIGHT	MS24658-23D	
S46	Switch, HEATING MODE	MS24523-23	
S47	Switch, HEATING TEMP	MS24523-27	
S48	Switch, COOLING MODE	MS24524-23	
S49	Switch, COOLING FAN	MS24523-23	
S50	Unassigned		
S51	Switch, BOOTS AUTO		
	(S.O.O. 6004)	MS27406-1	
S52	Switch, PROP DE-ICE		
	(S.O.O. 6202)	MS24523-22	
S53	Switch, VALVE HEAT		
	(S.O.O. 6004)	MS24523-22	
S54	Switch, BOOTS MANUAL WING		
	(S.O.O. 6004)	MS24523-27	
S55	Switch, BOOTS MANUAL STABILIZER		
	(S.O.O. 6004)	MS24523-27	
S56	Switch, BUS TIE	MS24659-23D	
S57	Switch, AURAL 1 MUTE	MS24658-23G	
S58	Switch, AURAL 2 MUTE	MS24658-23G	
S59	Switch, EMERGENCY COM	MS24658-26F	
S60	Switch, CAUTION LIGHTS DIMMING	MS24523-23	
S61	Switch, TRACK SOURCE	MS27407-1	
S62	Unassigned		
S63	Switch, Left Beta Microswitch	KX5-1-1	Klixon
S64	Switch, Right Beta Microswitch	KX5-1-2	Klixon
S65	Switch, FUEL EMERGENCY (LEFT)		
	(Pre Mod 6/2380)	MS24658-23G	
	(Post Mod 6/2380)	VSP28-2	Viking Air Limited
S66	Switch, FUEL EMERGENCY (RIGHT)		
	(Pre Mod 6/2380)	MS24658-23G	
	(Post Mod 6/2380)	VSP28-2	Viking Air Limited
S67	Switch, FIRE WARNING (SYSTEM TEST)	MS24525-26	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Switch Guard	MS25224-3	
S68	Switch, (LEFT ENGINE) Fire Extinguishing and Warning	LR3-42-11-HE-E02JP	Vivisun
	Switch Guard	21-603	Vivisun
S69	Switch, (RIGHT ENGINE) Fire Extinguishing and Warning	LR3-42-11-HE-E02JP	Vivisun
	Switch Guard	21-603	Vivisun
S70	Switch, PILOT AUTOFEATHER Armed/Select	LR3-42-14-BB-81147	Vivisun
S71	Switch, COPILOT AUTOFEATHER Armed/Select	LR3-42-14-BB-81147	Vivisun
S72	Switch, AUTOFEATHER (SYSTEM TEST)	MS24523-28	
	Switch Guard	MS25225-3	
S73	Switch, PROPELLER GOVERNER (SYSTEM TEST)	MS24524-28	
	Switch Guard	MS25225-3	
S74	Switch, PILOT MASTER CAUTION	LR3-42-11-HE-E02KW	Vivisun
S75	Switch, COPILOT MASTER CAUTION	LR3-42-11-HE-E02KW	Vivisun
S76	Switch, PILOT MASTER WARNING	LR3-42-11-HE-E02KV	Vivisun
S77	Switch, COPILOT MASTER WARNING	LR3-42-11-HE-E02KV	Vivisun
S78	Switch, 12 Degree Flap Microswitch	V3-19	Honeywell
	Lever, Roller	JV-82	Honeywell
S79	Switch, Exit Duct Door Microswitch (L)	V3-19	
	Actuator	JV-26	
S80	Switch, FWD Baggage Copmartment Door Microswitch	W102L5	Hetherington
S81	Switch, Internal Airstair Door Handle Microswitch	M8805/1-008	
	Actuator	AN3168-2	
S82	Switch, Upper Airstair Door Microswitch	W113L5	Hetherington
S83	Switch, Rear Baggage Compartment Door Microswitch (not installed on aircraft with S.O.O. 6393)	MS25008-1	
	Actuator (not installed on aircraft with S.O.O. 6393)	MCD7711	Honeywell
S84	Switch, Right Cabin Door Microswitch	M8805/1-008	
	Actuator	AN3168-2	
S85	Switch, Rear Baggage Light Switch	MS35058-24	
S86	Switch, Boarding Light	1TP12-3	Honeywell
S87	Switch, TRIM SWITCH	C6NF1092-1	Viking Air Limited

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
		(2TP12-70)	(Honeywell)
S88	Switch, Torque Low Pressure Switch (R)	8190026	Hathaway
S89	Switch, Torque Low Pressure Switch (L)	8190026	Hathaway
S90	Switch, Fuel Control Lever Left	41SM1-T2	Honeywell
	Actuator	C6CE1431-1	Viking Air Limited
S91	Switch, Fuel Control Lever Right	41SM1-T2	Honeywell
	Actuator	C6CE1431-1	Viking Air Limited
S92	Switch, Duct Overheat Switch	17343-62-300°F	Fenwal
S93	Switch, Exit Duct Door Microswitch (R)	V3-19	Honeywell
	Actuator	JV-26	Honeywell
S94	Switch, Solenoid Release Limit Microswitch (L)	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S95	Switch, Solenoid Release Limit Microswitch (R)	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S96	Switch, Lock Limit Microswitch (L)	V3-19	Honeywell
	Actuator	JV-26	Honeywell
S97	Switch, Lock Limit Microswitch (R)	V3-19	Honeywell
	Actuator	JV-26	Honeywell
S98	Switch, Pilot Mic PTT		
	(Pre Mod 6/2303)	1TP65-6	Honeywell
	(Pre Mod 6/2303)	alt. C6NF2242-27	Viking Air Limited
S98A	Switch, Pilot Mic PTT		
	(Post Mod 6/2303)	MPE-106F	Tyco Elec./Alcoswitch
S99	Switch, Copilot Mic PTT		
	(Pre Mod 6/2303)	1TP65-6	Honeywell
	(Pre Mod 6/2303)	alt. C6NF2242-27	Viking Air Limited
S99A	Switch, Copilot Mic PTT		
	(Post Mod 6/2303)	MPE-106F	Tyco Elec./Alcoswitch
S100	Switch, Right/FWD Boost Pump #1 Pressure	C6PF1166-5	Viking Air Limited
S101	Switch, Right/FWD Boost Pump #2 Pressure	C6PF1166-5	Viking Air Limited
S102	Switch, Left/AFT Boost Pump #1 Pressure	C6PF1166-5	Viking Air Limited
S103	Switch, Left/AFT Boost Pump #2 Pressure	C6PF1166-5	Viking Air Limited
S104	Switch, Oil Low Pressure (R)	DHCSC70019-15	Viking Air Limited
S105	Switch, Oil Low Pressure (L)	DHCSC70019-15	Viking Air Limited

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
S106	Switch, DAU Thermal Switch	TS-15	Bud Industries
S107	Switch, Trim Panel Light Switch	MS24523-23	
S108	Switch, Right Boot Pressure Switch	M4008-15	Hobbs
S109	Switch, Left Boot Pressure Switch	M4008-15	Hobbs
S110	"Switch, Prop Autofeather Left Throttle Microswitch "	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S111	"Switch, Prop Autofeather Right Throttle Microswitch "	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S112	Switch, Right Reset Prop Microswitch	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S113	Switch, Left Reset Prop Microswitch	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S114	Switch, Low Fuel Level AFT Switch in #5 Tank	F8300-105	Revere
S115	Switch, Low Fuel Level FWD Switch in #4 Tank	F8300-105	Revere
S116	Switch, 10 Degree Flap Microswitch	V3-19	Honeywell
	Actuator	JV-5	Honeywell
S117	Switch, Impact Switch (CVR) (Removed when S.O.O. 6292 is incorporated)		
	(Pre Mod 6/2256)	370-0145-003	Honeywell
	(Post Mod 6/2256) (Capped and stowed when S.O.O. 6388 is installed)	3LO-1010-3	Inertia Switch
S118	Switch, Impact Switch (FDR) (Removed when S.O.O. 6299 is incorporated)		
	(Pre Mod 6/2256)	370-0145-003	Honeywell
	(Post Mod 6/2256) (Capped and stowed when S.O.O. 6388 is installed)	3LO-1010-3	Inertia Switch
S119	Unassigned		
S120	Switch, Power Lever Microswitch	V3-19	Honeywell
	Actuator	JV-247	Honeywell
S121	Switch, Left Fuel Lever Microswitch	41SM1-T2	Honeywell
	Actuator	C6CE1431-1	Viking Air Limited
S122	Switch, Right Fuel Lever Microswitch	41SM1-T2	Honeywell
	Actuator	C6CE1431-1	Viking Air Limited
S123	Switch, FWD Baggage Light Switch	1500-11E671	Eaton

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
S124	Switch, 14V DC PLUGS		
	(S.O.O. 6281, 6282 or 6272)	MS24524-23	
S125	Switch, 28V DC PLUG		
	(S.O.O. 6283)	MS24523-23	
S126	Switch, DEPTH SOUNDER		
	(S.O.O. 6295)	MS24523-23	
S127	Switch, Pilot Go Around		
	(Post Mod 6/2303)	MPE-106F	Tyco Elec./Alcoswitch
S128	Switch, Pilot Quick Disc.		
	(S.O.O. 6221 or S.O.O. 6325)	MPE-206R	Tyco Elec./Alcoswitch
S129	Switch, Co-Pilot Go Around		
	(Post Mod 6/2303)	MPE-106F	Tyco Elec./Alcoswitch
S130	Switch, Co-Pilot Quick Disc.		
	(S.O.O. 6221 or S.O.O. 6325)	MPE-206R	Tyco Elec./Alcoswitch
S131	Switch, Co-Pilot TCS		
	(Post Mod 6/2303)	MPE-106F	Tyco Elec./Alcoswitch
S132	Switch, Pitch Trim Master		
	(S.O.O. 6221 or S.O.O. 6325)	VSP28-1	
S133	Switch, Pilot Pitch Trim		
	(S.O.O. 6221 or S.O.O. 6325)	200-01902-0000	Honeywell
S134	Switch, Co-Pilot Pitch Trim		
	(S.O.O. 6221 or S.O.O. 6325)	200-01902-0000	Honeywell
SP136	Switch, FLT COMPT FANS		
	(S.O.O. 6322)	MS24523-23	
S138	Switch, BATTERY		
	(Post Mod 6/2314)	MS24523-33	
S139	Switch, EXTERNAL		
	(Post Mod 6/2314)	MS24523-33	
S140	Switch, Avionics Start Battery		
	(Post Mod 6/2315)	MS24523-23	
S142	Switch, QAR		
	(S.O.O. 6351 or S.O.O. 6356)	MS24523-23	
	Switch Guard		
	(S.O.O. 6351 or S.O.O. 6356)	MS25224-1	
S143	Switch, Pilot TCS		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Post Mod 6/2303)	MPE-106F	Tyco Elec./Alcoswitch
S144	Switch, STA 111 CABIN FANS		
	(S.O.O. 6378)	MS24523-23	
S145	Switch, STA 332 CABIN BLOWER FAN		
	(S.O.O. 6379)	MS24523-21	
	SP (SPLICES)		
SP1	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP2	Unassigned		
SP3	Splice, Butt	M7928/5-5	
SP4	Splice, Butt	M7928/5-5	
SP5	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP6	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP7	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP8	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP9	Splice, High Temp	D-200-84	Tyco Elec./Raychem
SP10	Splice, High Temp	D-200-84	Tyco Elec./Raychem
SP11	Splice, Butt	M81824/1-2	
SP12	Splice, Butt	M81824/1-2	
SP13	Splice, Butt	M81824/1-2	
SP14	Splice, Butt	M81824/1-2	
SP15	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP16	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP17	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP18	Splice, High Temp	D-200-83	Tyco Elec./Raychem
SP19	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP20	Splice, High Temp	D-200-83	Tyco Elec./Raychem
SP21	Splice, High Temp	D-200-83	Tyco Elec./Raychem
SP22	Splice, Butt	M81824/1-3	
SP23	Splice, Butt	M81824/1-2	
SP24	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP25	Splice, Knife Disconnect		
	(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt		
	(Post Mod 6/2121)	M81824/1-2	
SP26	Splice, Knife Disconnect		

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
		(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt			
		(Post Mod 6/2121)	M81824/1-2	
SP27	Splice, Knife Disconnect			
		(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt			
		(Post Mod 6/2121)	M81824/1-2	
SP28	Splice, Knife Disconnect			
		(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt			
		(Post Mod 6/2121)	M81824/1-2	
SP29	Splice, Knife Disconnect			
		(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt			
		(Post Mod 6/2121)	M81824/1-2	
SP30	Splice, Knife Disconnect			
		(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt			
		(Post Mod 6/2121)	M81824/1-2	
SP31	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP32	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP33	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP34	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP35	Splice, Butt		M81824/1-2	
SP36	Splice, Butt		M81824/1-2	
SP37	Splice, High Temp		D-200-84	Tyco Elec./Raychem
SP38	Splice, High Temp		D-200-84	Tyco Elec./Raychem
SP39	Splice, Butt		M81824/1-2	
SP40	Splice, Butt		M81824/1-2	
SP41	Splice, Butt		M81824/1-2	
SP42	Splice, Butt		M81824/1-2	
SP43	Splice, Butt		M81824/1-2	
SP44	Splice, Butt		M81824/1-2	
SP45	Splice, Butt		M81824/1-2	
SP46	Splice, Knife Disconnect		32446	Tyco Elec./AMP

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP47	Splice, Butt	M81824/1-2	
SP48	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP49	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP50	Splice, High Temp	D-200-83	Tyco Elec./Raychem
SP51	Splice, High Temp	D-200-83	Tyco Elec./Raychem
SP52	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP53	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP54	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP55	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP56	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP57	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP58	Splice, Butt	M81824/1-2	
SP59	Splice, Butt	M81824/1-2	
SP60	Splice, Butt	M81824/1-3	
SP61	Splice, Butt	M81824/1-3	
SP62	Splice, Butt	M81824/1-2	
SP63	Splice, Butt	M81824/1-2	
SP64	Splice, High Temp	D-200-83	Tyco Elec./Raychem
SP65	Splice, High Temp	D-200-84	Tyco Elec./Raychem
SP66	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP67	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP68	Splice, High Temp	D-200-83	Raychem
SP69	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP70	Splice, High Temp	D-200-83	Raychem
SP71	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP72	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP73	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP74	Splice, Butt	M81824/1-2	
SP75	Splice, Butt	M81824/1-2	
SP76	Splice, Butt	M81824/1-2	
SP77	Splice, Butt	M81824/1-2	
SP78	Splice, Knife Disconnect		
	(Post Mod 6/2170)	32446	Tyco Elec./AMP
SP79	Splice, High Temp	D-200-84	Tyco Elec./Raychem
SP80	Splice, Butt	M81824/1-2	

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
SP81	Splice, Butt		M81824/1-2	
SP82	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP83	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP84	Splice, Butt		M81824/1-2	
SP85	Splice, Butt		M81824/1-2	
SP86	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP87	Reserved			
SP88	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP89	Splice, Knife Disconnect		32446	Tyco Elec./AMP
SP90	Splice, Knife Disconnect			
		(Post Mod 6/2113)	32446	Tyco Elec./AMP
SP91	Reserved			
SP92	Reserved			
SP93	Splice, Butt		M81824/1-2	
SP94	Splice, Butt		M81824/1-2	
SP95	Reserved			
SP96	Reserved			
SP97	Reserved			
SP98	Reserved			
SP99	Splice, Butt			
		(S.O.O. 6295)	M83519/1-2	
SP100	Splice, Inline			
		(S.O.O. 6295)	M81714/12-20D-2	
SP101	Reserved			
SP102	Reserved			
SP103	Reserved			
SP104	Reserved			
SP105	Splice, High Temp			
		(Post Mod 6/2140)	D-200-83	Tyco Elec./Raychem
SP106	Splice, High Temp			
		(Post Mod 6/2140)	D-200-83	Tyco Elec./Raychem
SP107	Splice, High Temp			
		(Post Mod 6/2140)	D-200-83	Tyco Elec./Raychem
SP108	Splice, High Temp			
		(Post Mod 6/2140)	D-200-83	Tyco Elec./Raychem

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP109	Reserved		
SP110	Reserved		
SP111	Unassigned		
SP112	Unassigned		
SP113	Unassigned		
SP114	Unassigned		
SP115	Unassigned		
SP116	Unassigned		
SP117	Unassigned		
SP118	Unassigned		
SP119	Splice, Butt	M81824/1-2	
SP120	Splice, Butt	M81824/1-2	
SP121	Splice, Butt	M81824/1-2	
SP122	Splice, Butt	M81824/1-2	
SP123	Splice, Butt	M81824/1-2	
SP124	Splice, Butt	M81824/1-2	
SP125	Splice, Butt	M81824/1-3	
SP126	Splice, Butt	M81824/1-3	
SP127	Splice, Butt	M81824/1-3	
SP128	Splice, Butt	M81824/1-3	
SP129	Splice, Butt	M81824/1-2	
SP130	Splice, Butt	M81824/1-2	
SP131	Splice, Butt	M81824/1-2	
SP132	Splice, Butt	M81824/1-2	
SP133	Splice, Butt	M81824/1-2	
SP134	Unassigned		
SP135	Unassigned		
SP136	Unassigned		
SP137	Unassigned		
SP138	Unassigned		
SP139	Unassigned		
SP140	Unassigned		
SP141	Unassigned		
SP142	Unassigned		
SP143	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP144	Unassigned		
SP145	Unassigned		
SP146	Unassigned		
SP147	Unassigned		
SP148	Unassigned		
SP149	Unassigned		
SP150	Splice, Butt	M81824/1-2	
SP151	Splice, Butt	M81824/1-2	
SP152	Splice, Butt	M81824/1-1	
SP153	Splice, High Temp	D-200-84	Raychem
SP154	Splice, High Temp	D-200-84	Raychem
SP155	Splice, High Temp	D-200-84	Raychem
SP156	Splice, High Temp	D-200-84	Raychem
SP157	Unassigned		
SP158	Unassigned		
SP159	Splice, Butt	M81824/1-3	
SP160	Splice, Butt	M81824/1-2	
SP161	Splice, Butt	M81824/1-2	
SP162	Splice, Butt	M81824/1-2	
SP163	Splice, Butt	M81824/1-2	
SP164	Splice, Butt	M81824/1-2	
SP165	Splice, Butt	M81824/1-2	
SP166	Splice, Butt	M81824/1-2	
SP167	Splice, Butt	M81824/1-2	
SP168	Splice, Knife Disconnect	32448	Tyco Elec./AMP
	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP169	Splice, Butt	M81824/1-3	
SP170	Splice, Butt	M81824/1-3	
SP171	Unassigned		
SP172	Splice, Butt	M81824/1-2	
SP173	Splice, Butt	M81824/1-2	
SP174	Splice, Butt	M81824/1-2	
SP175	Splice, Butt	M81824/1-3	
SP176	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP177	Splice, Knife Disconnect	32446	Tyco Elec./AMP

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP178	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP179	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP180	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP181	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP182	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP183	Splice, Knife Disconnect (L96A20N-L96B20N)		
	(Pre Mod 6/2107)	32446	Tyco Elec./AMP
	Splice, Knife Disconnect (BLK-L96A20N)		
	(Post Mod 6/2107)	32446	Tyco Elec./AMP
SP184	Splice, Knife Disconnect	32448	Tyco Elec./AMP
SP185	Splice, Butt	M81824/1-3	
SP186	Splice, Butt	M81824/1-2	
SP187	Splice, Butt (Red) Removed when S.O.O. 6292 is incorporated		
	(Post Mod 6/2169)	M81824/1-1	
SP188	Splice, Butt (Blk) Removed when S.O.O. 6292 is incorporated		
	(Post Mod 6/2169)	M81824/1-1	
SP189	Splice, Butt (Wht) Removed when S.O.O. 6292 is incorporated		
	(Post Mod 6/2169)	M81824/1-1	
SP190	Splice, Butt (Grn) Removed when S.O.O. 6292 is incorporated		
	(Post Mod 6/2169)	M81824/1-1	
SP191	Splice, Butt		
	(Mod 6/2239)	M81824/1-2	
SP192	Splice, Butt		
	(Mod 6/2239)	M81824/1-2	
SP193	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP194	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP195	Splice, Butt	M81824/1-2	
SP196	Splice, Butt	M81824/1-2	
SP197	Splice, Knife Disconnect	32448	Tyco Elec./AMP
	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP198	Splice, Butt	M81824/1-2	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP199	Splice, Butt	M81824/1-2	
SP200	Splice, Butt	M81824/1-2	
SP201/ SP202	Splice, Module	M81714/12-20D-2	
SP203/ SP204	Splice, Module	M81714/12-20D-2	
SP205	Splice, Butt	M81824/1-2	
SP206	Splice, Butt	M81824/1-2	
SP207	Splice, Butt	M81824/1-2	
SP208	Splice, Butt	M81824/1-2	
SP209	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP210	Splice, Butt	M81824/1-3	
SP211	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP212	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP213	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP214	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP215	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP216	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP217	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP218	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP219	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP220	Reserved		
SP221	Reserved		
SP222	Reserved		
SP223	Reserved		
SP224	Reserved		
SP225	Reserved		
SP226	Reserved		
SP227	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP228	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP229	Splice, Knife Disconnect		
	(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt		
	(Post Mod 6/2121)	M81824/1-2	
SP230	Splice, Knife Disconnect		
	(Pre Mod 6/2121)	32446	Tyco Elec./AMP

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Splice, Butt		
	(Post Mod 6/2121)	M81824/1-2	
SP231	Splice, Knife Disconnect		
	(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt		
	(Post Mod 6/2121)	M81824/1-2	
SP232	Splice, Knife Disconnect		
	(Pre Mod 6/2121)	32446	Tyco Elec./AMP
	Splice, Butt		
	(Post Mod 6/2121)	M81824/1-2	
SP233	Splice, Knife Disconnect	32446	Tyco Elec./AMP
SP234	Splice, Butt		
	(Pre Mod 6/2303)	M81824/1-2	
SP235	Splice, Butt		
	(Pre Mod 6/2303)	M81824/1-2	
SP236	Splice, Butt		
	(Pre Mod 6/2303)	M81824/1-2	
SP237	Splice, Butt	M81824/1-2	
SP238	Splice, Butt		
	(S.O.O. 6001 with Mod 6/2182)	M81824/1-2	
SP239	Splice, Disconnect		
	(S.O.O. 6282)	MS27429-2	
SP240	Splice, Knife Disconnect		
	(S.O.O. 6282)	32446	Tyco Elec./AMP
SP241	Splice, Disconnect		
	(S.O.O. 6282)	MS27429-2	
SP242	Splice, Knife Disconnect		
	(S.O.O. 6282)	32446	Tyco Elec./AMP
SP243	Splice, Disconnect		
	(S.O.O. 6282)	MS27429-2	
SP244	Splice, Knife Disconnect		
	(S.O.O. 6281)	32446	Tyco Elec./AMP
SP245	Splice, Disconnect		
	(S.O.O. 6281)	MS27429-2	
SP246	Splice, Knife Disconnect		

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
		(S.O.O. 6281)	32446	Tyco Elec./AMP
SP247	Splice, Disconnect			
		(S.O.O. 6281)	MS27429-2	
SP248	Splice, Knife Disconnect			
		(S.O.O. 6281 or 6272)	32446	Tyco Elec./AMP
SP249	Splice, Disconnect			
		(S.O.O. 6282 or 6272)	MS27429-2	
SP250	Splice, Knife Disconnect			
		(S.O.O. 6283)	32446	Tyco Elec./AMP
SP251	Splice, Disconnect			
		(S.O.O. 6283)	MS27429-2	
SP252	Splice, Butt			
		(S.O.O. 6283)	M81824/1-3	
SP253	Splice, Butt			
		(S.O.O. 6282)	M81824/1-3	
SP254	Splice, Knife Disconnect			
		(S.O.O. 6281 or 6272)	32446	Tyco Elec./AMP
SP255	Splice, Knife Disconnect			
		(S.O.O. 6281 or 6272)	32446	Tyco Elec./AMP
SP256	Splice, Knife Disconnect			
		(S.O.O. 6282)	32446	Tyco Elec./AMP
SP257	Splice, Butt			
		(S.O.O. 6296)	M81824/1-1	
SP258	Splice, Butt			
		(S.O.O. 6296)	M81824/1-2	
SP259	Splice, Butt			
		(S.O.O. 6296)	M81824/1-2	
SP260	Splice, Knife Disconnect			
		(S.O.O. 6296)	32446	Tyco Elec./AMP
SP264	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-3	
SP265	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-3	
SP266	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP267	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP268	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP269	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP270	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP271	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP272	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-1	
SP272A	Splice, Butt		
	(Post Mod 6/2303) (S.O.O. 6221 or S.O.O. 6324 not installed)	M81824/1-1	
SP273	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP274	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP276	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-3	
SP279	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP280	Splice, Butt		
	(S.O.O. 6324) (Pre Mod 6/2348)	M81824/1-2	
SP281	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP282	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP283	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP284	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-1	
SP284A	Splice, Butt		
	(Post Mod 6/2303) (S.O.O. 6221 or S.O.O. 6324 not installed)	M81824/1-1	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP285	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP286	Splice, Knife Disconnect		
	(S.O.O. 6221 or S.O.O. 6325)	32446	Tyco Elec./AMP
SP287	Splice, Butt		
	(Post Mod 6/2285)	M81824/1-2	
SP288	Splice, Butt		
	(Post Mod 6/2285)	M81824/1-2	
SP289	Splice, Wristlock Disconnect		
	(S.O.O. 6322)	RA23	Thomas & Betts
SP290	Splice, Knife Disconnect		
	(S.O.O. 6322)	RA23	Thomas & Betts
SP291	Splice, Knife Disconnect		
	(S.O.O. 6322)	32446	Tyco Elec./AMP
SP292	Splice, Wristlock Disconnect		
	(S.O.O. 6322)	RA23	Thomas & Betts
SP293	Splice, Knife Disconnect		
	(S.O.O. 6322)	RA23	Thomas & Betts
SP294	Splice, Knife Disconnect		
	(S.O.O. 6322)	32446	Tyco Elec./AMP
SP295	Splice, Knife Disconnect		
	(S.O.O. 6322)	32446	Tyco Elec./AMP
SP296	Splice, Butt		
	(Post Mod 6/2285)	M81824/1-2	
SP298	Splice, Butt		
	(Post Mod 6/2285)	M81824/1-1	
SP299	Splice, Butt		
	(Post Mod 6/2285)	M81824/1-1	
SP300	Splice, Butt		
	(Post Mod 6/2285)	M81824/1-1	
SP301	Splice, Butt		
	(S.O.O. 6221)	M83519/1-2	
SP302	Splice, Butt		
	(S.O.O. 6221)	M83519/1-2	
SP303	Splice, Butt		

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
		(S.O.O. 6221)	M83519/1-2	
SP304	Splice, Butt			
		(S.O.O. 6221)	M83519/1-2	
SP305	Splice, Butt			
		(S.O.O. 6221)	M83519/1-2	
SP306	Splice, Butt			
		(S.O.O. 6221)	M83519/1-2	
SP307	Splice, Butt			
		(S.O.O. 6221)	M83519/1-2	
SP308	Splice, Butt			
		(S.O.O. 6221)	M83519/1-2	
SP309	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP310	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP311	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP312	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP313	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP314	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP315	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP316	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP317	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP318	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP319	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP320	Splice, Butt			
		(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	

TEMPORARY REVISION

PSM: 1-64-2W **AIRCRAFT: DHC-6** **SERIES: 400**

PUBLICATION: WIRING MANUAL **TEMP. REVISION NO.: TREL-26**

Insert in Equipment List after Page 92

EQUIPMENT LIST

REASON FOR ISSUE:

To introduce equipment for Mod 6/2464, Fuel Pressure Switch Replacement.

ACTION:

In Equipment List, ignore existing Items SP324 to SP331 and insert revised Items, as shown on Pages 2 of this Temporary Revision.

-Continued overleaf-

RECORDING INSTRUCTIONS:

Record this TEMPORARY REVISION NO. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP323	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP324	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP325	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP326	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP327	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP328	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP329	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP330	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP331	Splice, Knife Disconnect		
	(Post Mod 6/2327) (Post Mod 6/2464)	32446	Tyco Elec./AMP
SP333	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP334	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP335	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP336	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP337	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP338	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP339	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP340	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	

EQUIPMENT LIST (TREL-26)

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
SP323	Splice, Butt		
	(S.O.O. 6221 or S.O.O. 6324)	M81824/1-2	
SP324	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP325	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP326	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP327	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP328	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP329	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP330	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP331	Splice, Knife Disconnect		
	(Post Mod 6/2327)	32446	Tyco Elec./AMP
SP333	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP334	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP335	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP336	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP337	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP338	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP339	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP340	Splice, Module Single Inline		
	(Post Mod 6/2299)	JS-16-00	
SP341	Splice, High Temp		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Post Mod 6/2299)	D-200-84	
SP342	Splice, High Temp		
	(Post Mod 6/2299)	D-200-84	
SP343	Splice, High Temp		
	(Post Mod 6/2299)	D-200-84	
SP344	Splice, High Temp		
	(Post Mod 6/2299)	D-200-84	
SP345	Splice, Knife Disconnect		
	(If only one of S.O.O. 6378 or S.O.O. 6379 installed)	32448	Tyco Elec./AMP
	Splice, Knife Disconnect		
	(If both S.O.O. 6378 and S.O.O. 6379 installed)	35762	
SP346	Splice, Knife Disconnect		
	(S.O.O. 6378)	32448	Tyco Elec./AMP
SP347	Splice, Knife Disconnect		
	(S.O.O. 6378)	32448	Tyco Elec./AMP
SP348	Splice, Disconnect		
	(S.O.O. 6378)	MS27429-2	
SP349	Splice, Disconnect		
	(S.O.O. 6378)	MS27429-2	
SP350	Splice, Knife Disconnect		
	(S.O.O. 6379)	32448	Tyco Elec./AMP
SP351	Splice, Disconnect		
	(S.O.O. 6379)	MS27429-2	
SP352	Splice, Butt		
	(S.O.O. 6379)	M81824/1-2	
SP353	Splice, Knife Disconnect		
	(Post Mod 6/2315)	M81824/1-3	
SP354	Splice, Butt		
	(S.O.O. 6393)	M81824/1-1	
	TB (TERMINAL BLOCKS & JUNCTION MODULES)		
TB1	M81714/67-02	Junction Module Rail	
	M81714/60-22-01	Module 1	
	M81714/60-22-01	Module 2	
TB2	M81714/67-02	Junction Module Rail	

EQUIPMENT LIST

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	M81714/60-22-01	Module 1	
	M81714/60-22-01	Module 2	
TB3	Unassigned		
TB4	TJT701002	Junction Module Rail	Amphenol Pcd
	M81714/2–DE1	Module 1	
	M81714/2–DE1	Module 2	
TB5	TJT701002	Junction Module Rail	Amphenol Pcd
	M81714/2–DE1	Module 1	
	M81714/2–DE1	Module 2	
TB6	TJT701002	Junction Module Rail	Amphenol Pcd
	M81714/2-DE1	Module 1	
	M81714/2-DE1	Module 2	
TB7	TJT701002	Junction Module Rail	Amphenol Pcd
	M81714/2-DE1	Module 1	
TB8	M81714/5-3	Junction Module Rail	
	M81714/2-DE1	Module 1	
	M81714/2-DE1	Module 2	
TB9	Unassigned		
TB10	M81714/16-3	Junction Module Rail	
	M81714/17-D34	Module 1	
	M81714/17-D34	Module 2	
	M81714/17-D39	Module 3	
	M81714/17-D34	Module 4	
TB11	Unassigned		
TB12A	TJT701002	Junction Module Rail	Amphenol Pcd
	M81714/2-DE1	Module 1	
	M81714/2-DE1	Module 2	
TB13	M81714/16-6	Junction Module Rail	
	M81714/2-DB1	Module 1	
	M81714/2-DA1	Module 2	
	M81714/2-DA1	Module 3	
	M81714/2-DA1	Module 4	
TB14	MS27212-1-6	Terminal Block	
TB15	Unassigned		
TB16	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
TB17	Unassigned		
TB18	Unassigned		
TB19	Unassigned		
TB20	Unassigned		
TB21	Unassigned		
TB22	M81714/5-2	Junction Module Rail	
	M81714/3-DB1	Module 1	
	M81714/2-DE1	Module 2	
	M81714/2-DE1	Module 3	
TB23	M81714/5-2	Junction Module Rail	
	M81714/3-DB1	Module 1	
	M81714/2-DE1	Module 2	
	M81714/2-DE1	Module 3	
TB24	M81714/5-1	Junction Module Rail	
	M81714/2-DB1	Module 1	
	M81714/2-DB1	Module 2	
	M81714/2-DE1	Module 3	
	M81714/2-DB1	Module 4	
	M81714/2-DA1	Module 5	
	M81714/2-DE1	Module 6	
	M817142/2-DE1	Module 7	
	(Post Mod 6/2239)		
	M817142/2-DE1	Module 8	
	(Post Mod 6/2239)		
TB25	M81714/5-1	Junction Module Rail	
	M81714/2-DB1	Module 1	
	M81714/2-DB1	Module 2	
	M81714/2-DE1	Module 3	
	M81714/3-DA1	Module 4	
	M81714/2-DA1	Module 5	
	M81714/2-DE1	Module 6	
	M81714/2-DB1	Module 7	
	M81714/2-DB1	Module 8	
	M81714/2-DB1	Module 9	
	M81714/2-DE1	Module 10	

EQUIPMENT LIST

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
TB26	Unassigned		
TB27	Unassigned		
TB28	MS27212-1-3	Terminal Block	
TB29	Unassigned		
TB30	TJT701002	Junction Module Rail	Amphenol Pcd
	M81714/2-DB1	Module 1	
TB31	Unassigned		
TB32	Unassigned		
TB33	Unassigned		
TB34	Unassigned		
TB35	Unassigned		
TB36	Unassigned		
TB37	Unassigned		
TB38	MS27212-1-6	Terminal Block	
TB39	MS27212-1-6	Terminal Block	
TB40	M81714/5-2	Junction Module Rail	
	M81714/2-DE1	Module 1	
	M81714/2-DE1	Module 2	
TB41	M81714/5-1	Junction Module Rail	
	M81714/17-D37	Module 1	
	M81714/17-D37	Module 2	
	M81714/17-D37	Module 3	
	M81714/17-D37	Module 4	
	M81714/17-D37	Module 5	
	M81714/17-D37	Module 6	
	M81714/17-D37	Module 7	
	M81714/17-D37	Module 8	
	M81714/17-D37	Module 9	
	M81714/2-DC1	Module 10	
TB42	M81714/5-1	Junction Module Rail	
	M81714/2-DC1	Module 1	
	M81714/17-D37	Module 2	
	M81714/17-D37	Module 3	
	M81714/17-D37	Module 4	
	M81714/17-D44	Module 5	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	M81714/17-D44	Module 6	
	M81714/17-D44	Module 7	
	M81714/17-D44	Module 8	
	M81714/17-D44	Module 9	
	M81714/17-D44	Module 10	
TB43	M81714/5-1	Junction Module Rail	
	M81714/17-D44	Module 1	
	M81714/17-D44	Module 2	
	M81714/17-D40	Module 3	
	M81714/17-D40	Module 4	
	M81714/17-D44	Module 5	
	M81714/17-D44	Module 6	
	M81714/17-D37	Module 7	
	TJE120822	Module 8	Amphenol Pcd
	TJE120822	Module 9	Amphenol Pcd
	VR (VOLTAGE REGULATOR)		
VR1	Voltage Regulator, Left	VR-1010-24-1A	Phoenix Aerospace Inc
VR2	Voltage Regulator, Right	VR-1010-24-1A	Phoenix Aerospace Inc

CHAPTER 20

STANDARD AIRFRAME PRACTICES

This Page Intentionally Left Blank

CHAPTER 20 – STANDARD AIRFRAME PRACTICES

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
20	1	Sep. 30/14		2	Dec. 7/16
	2	Blank Page		3	Dec. 7/16
	* 3	Nov. 30/18		4	Dec. 7/16
	* 4	Nov. 30/18		5	Dec. 7/16
	5	Dec. 7/16		6	Dec. 7/16
	6	Blank Page		7	Dec. 7/16
20-10-10	1	Dec. 7/16		8	Blank Page
	2	Dec. 7/16	20-20-00	1	Sep. 30/14
	3	Dec. 7/16		2	Blank Page
	4	Dec. 7/16	20-20-10	1	Dec. 7/16
	5	Dec. 7/16		2	Dec. 7/16
	6	Dec. 7/16		3	Dec. 7/16
20-10-20	1	Dec. 7/16		4	Dec. 7/16
	2	Dec. 7/16		5	Dec. 7/16
	3	Dec. 7/16		6	Dec. 7/16
	4	Dec. 7/16		7	Dec. 7/16
20-10-30	1	Dec. 7/16		8	Dec. 7/16
	2	Dec. 7/16		9	Dec. 7/16
	3	Dec. 7/16		10	Dec. 7/16
	4	Dec. 7/16		11	Dec. 7/16
	5	Dec. 7/16		12	Dec. 7/16
	6	Dec. 7/16		13	Dec. 7/16
20-10-40	1	Sep. 30/14		14	Dec. 7/16
	2	Sep. 30/14		15	Dec. 7/16
	* 3	Nov. 30/18		16	Dec. 7/16
	* 4	Nov. 30/18		17	Dec. 7/16
	* 5	Nov. 30/18		18	Dec. 7/16
	* 6	Nov. 30/18	20-20-20	1	Sep. 30/14
20-10-50	1	Dec. 7/16		2	Sep. 30/14
	2	Dec. 7/16		3	Sep. 30/14
20-10-60	1	Dec. 7/16		4	Sep. 30/14

REFERENCE	PAGE	DATE
	5	Sep. 30/14
	6	Sep. 30/14
	7	Sep. 30/14
	8	Blank Page

REFERENCE	PAGE	DATE
20-30-10	1	Sep. 30/14
	2	Sep. 30/14
	3	Sep. 30/14
	4	Blank Page

CHAPTER 20 – STANDARD AIRFRAME PRACTICES

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
SPECIALTY BUS PRACTICES	**20-10**
Avionics Standard Communication Bus (ASCB)	20-10-10
Picture Bus	20-10-20
Local Area Network (LAN) Bus	20-10-30
Quad Fibre Channel Bus (FCB)	20-10-40
AFCS Controller Area Network (CAN) Bus	20-10-50
Stub Construction	20-10-60
ELECTRICAL SHIELD TERMINATION PRACTICES	**20-20**
General Information	20-20-00
Shield Terminations at Connector Backshells and Hoods	20-20-10
Shield Terminations Using HexaShields	20-20-20
CONNECTOR AND BACKSHELL PRACTICES	**20-30**
Securing Connector Backshells	20-30-10

This Page Intentionally Left Blank


Avionics Standard Communication Bus (ASCB)

1. General


The Avionics Standard Communication Bus (ASCB) is a bidirectional community bus network designed to transfer a large amount of digital data between aircraft systems.

In the Series 400 Twin Otter, the ASCB bus network consists of two independent busses labelled "ACSB No. 1 Primary" and "ACSB No. 2 Primary". Each ASCB bus is a twisted-shielded pair of wires with a characteristic impedance of 125 ohms. For the Apex avionics system, Version D ASCB cable is used.

Channels A and B of the Modular Avionics Unit (MAU) are connected to the ASCB though each channel's Network Interface Controller (NIC) using stub connections. Each NIC in the system reads and writes to the on-side primary bus, and reads from the cross-side primary bus. Both busses require 124 ohm termination resistors located at each end of the bus. The purpose of these resistors is to provide a load on the bus that stabilizes the signal shape and amplitude and minimizes pulse reflections.

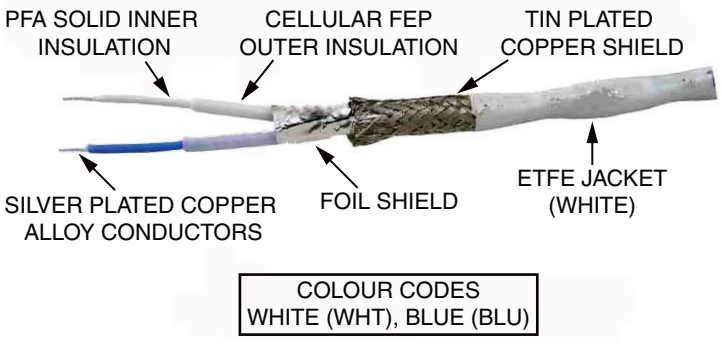

ASCB Cable (PIC Cable Shown)
Figure 1

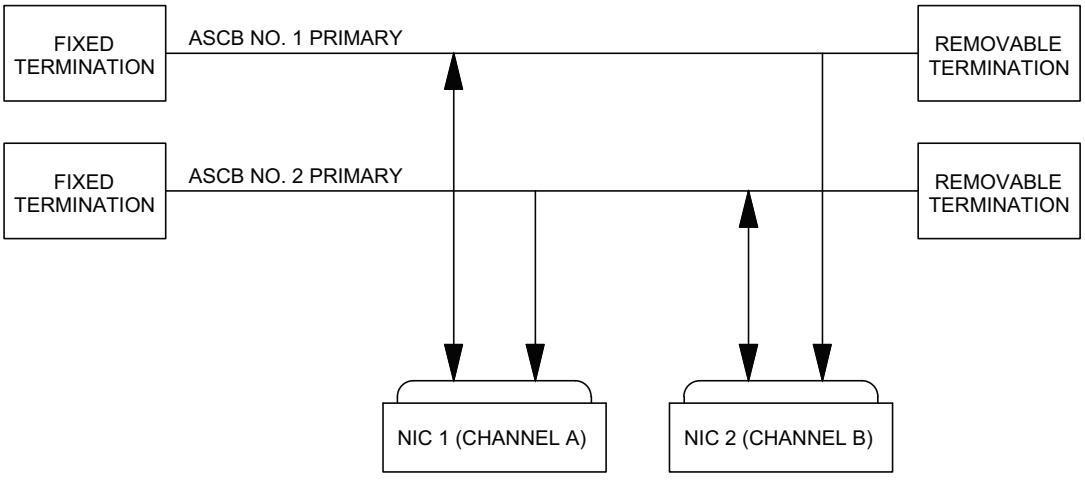

ASCB Bus Diagram
Figure 2

2. Materials and Equipment

A. Materials

1) ACSB Version D Cable (refer to the General Information chapter for approved wire and cable specifications)

2) Standard wire (refer to the General Information chapter for approved wire and cable specifications)

3) Thinwall wire (refer to the General Information chapter for approved wire and cable specifications)

4) D-Sub receptacle connector, Positronic p/n RD9F00000

5) Backshell, Glenair p/n 550-200M1R1K

6) 124 ohm 1/4 watt metal film resistor, Yageo p/n MFR-25FBF-124R

7) Solder sleeve, M83519/1-3

8) Solder sleeve, Raychem p/n 626009-000

9) Crimp socket contact, Positronic p/n FC6020D-14

10) 3/16 inch ID clear heat shrink tubing, commercially available

11) 1/8 inch ID clear heat shrink tubing, commercially available

12) 22 AWG sleeving, commercially available

B. Equipment

1) Crimp Tool, M22520/2–01 (with M22520/2–08 positioner)

2) Wire and Cable strippers, commercially available

3) Wire cutters, commercially available

4) Heat gun, commercially available

3. Requirements

CAUTION **MOD 6/2303 INTRODUCES REVISED REQUIREMENTS FOR THE ASCB. FOR AIRCRAFT WITH MOD 6/2303, THE POST MOD 6/2303 REQUIREMENTS MUST BE FOLLOWED TO ENSURE COMPLIANCE WITH PHASE 2 HIRF AND LIGHTNING PROTECTION REQUIREMENTS.**

The following includes both general ASCB requirements as well as requirements specific for the Series 400 Twin Otter. All requirements must be followed in order to maintain the reliability of each bus.

Note Refer to Figure 3 for Pre Mod 6/2303 requirements and Figure 4 for Post Mod 6/2303 requirements.

A. Each ASCB transmission line is limited to a maximum length of 300 feet (91.4 m). This length is measured from the fixed bus termination to the removable bus termination.

B. There must be a minimum of 20 inches (508 mm) of cable between adjacent stubs.

C. There must be a minimum of 20 inches (508 mm) of cable from the last stub to the bus termination.

D. For Pre Mod 6/2303, each ASCB stub branch is limited to a maximum length of 1.5 inches (38 mm). The required method for constructing an ASCB stub connection for Pre Mod 6/2303 is described in 20-10-60, Stub Construction, Para 3.A.

E. For Post Mod 6/2303, each ASCB stub branch is limited to a maximum length of 1 inch (25 mm). The required method for constructing an ASCB stub connection for Post Mod 6/2303 is described in 20-10-60, Stub Construction, Para 3.A.

F. Stub connections must be contained within the NIC backshells.

G. The required method for installing a ASCB fixed termination is described in Para 4.A. This method is used to terminate the non-accessible end of each bus.


H. The required method for installing a ASCB removable termination is described in Para 4.B. This method is used to terminate the accessible end of each bus located at the forward maintenance panel.

I. For Pre Mod 6/2303, the ASCB shield must be grounded at the fixed termination end and the removable termination end.


J. For Post Mod 6/2303, the ASCB shield must be grounded at the fixed termination end, the removable termination end, and both NIC backshells. The required method for grounding the ASCB shield at the NIC backshells is described in 20-20-10, Shield Terminations at Connector Backshells and Hoods.

K. For Post Mod 6/2303, the ASCB shield at the removable termination end must be grounded through a metal backshell mounted to the FWD maintenance panel. The required method for attaching the ASCB shield to the backshell is described in 20-20-10, Shield Terminations at Connector Backshells and Hoods.

L. Each bus should be routed separately where possible.

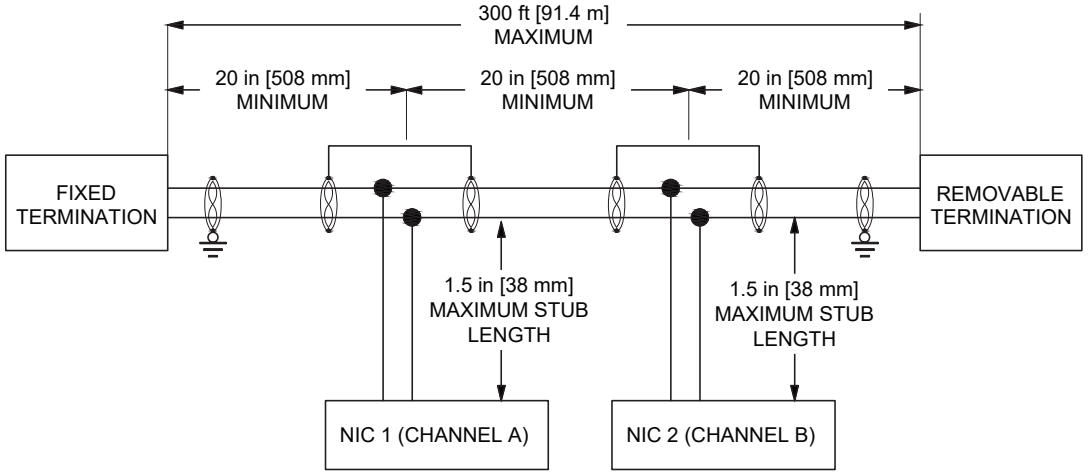

ASCB Bus Requirements (Single Bus Shown) (Pre Mod 6/2303)
Figure 3

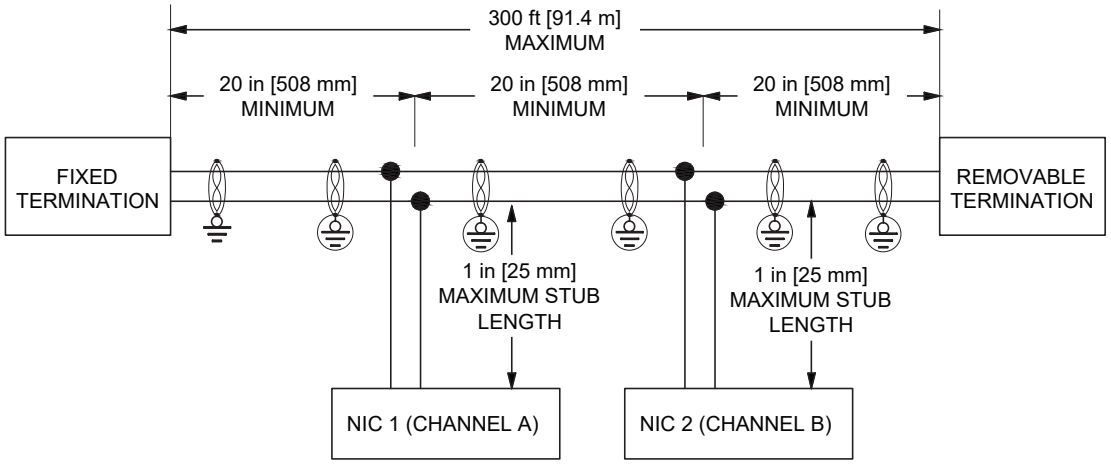

ASCB Requirements (Single Bus Shown) (Post Mod 6/2303)
Figure 4

4. Procedures

A. Fixed Termination Installation

The following procedure describes how to install a fixed 124 ohm termination to the approved ASCB data bus cable. This method is used to terminate the non-accesible end of each bus.

1) Strip 2 inches (51 mm) of the outer jacket from the cable.



Figure 5

2) Fold back the exposed braid shielding (do not pull the shield braid apart). Remove the foil shield if present.



Figure 6

3) Prepare the two inner wires and resistor leads per Figure 7. The resistor is a 1/4 Watt metal film, 124 ohm, 1% (Yageo p/n MFR-25FBF-124R).



Figure 7

4) Install the prepared resistor by using a heat gun to shrink the small solder sleeves (Raychem p/n 626009-000).



Figure 8

5) After the resistor is attached, install 3/16 inch ID clear heat shrink tubing over the resistor and wires. Apply heat to the tubing and, while warm, pinch the sleeving end to close it off.



Figure 9

6) Pull the braid over the entire insulated resistor/cable assembly. Place a solder sleeve (M83519/1-3) on the end of the braid. Insert a 6 inch (152 mm) long insulated black 22 AWG grounding wire (M22759/34) under the solder sleeve. Heat shrink the solder sleeve in place.



Figure 10

7) Install 3/16 inch ID clear heat shrink tubing over the exposed cable braid/grounding wire assembly and apply heat to shrink.



Figure 11

B. Removable Termination Installation

The following procedure describes how to install a removable 124 ohm termination for the approved ASCB data bus cable. This method is used to terminate the accessible end of each bus located at the forward maintenance panel.

Note Refer to Figure 12 for all steps in this procedure.

1) Bend one lead on a 1/4 Watt metal film, 124 ohm, 1% resistor (Yageo p/n MFR-25FBF-124R). The lead bend radius should be approximately 0.125 inches (3 mm).

2) Cut both leads on each resistor even approximately 0.375 inches (10 mm) from the resistor body. Cover the resistor leads with 22 AWG sleeving, leaving approximately 0.25 inches (6 mm) of bare lead exposed.

3) Crimp a socket contact (Positronic p/n FC6020D-14) onto each resistor lead using a M22520/2–01 crimper with M22520/2–08 positioner.

4) Install the prepared resistor between pins 1 and 6 of the 9 pin D-Sub receptacle connector (Positronic p/n RD9F00000).

5) Install 1/8 inch ID by 0.75 inch (19 mm) long clear heat shrink tubing over the resistor and apply heat to shrink.

6) Install the completed D-Sub connector assembly into the backshell (Glenair p/n 550-200M1R1K).

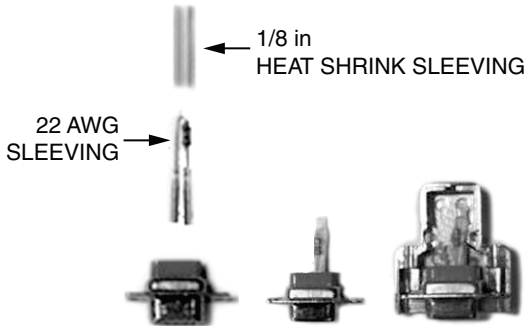



Figure 12

Picture Bus


1. General

The Series 400 Twin Otter has two picture busses: the weather radar picture bus and terrain picture bus. Both buses provide data to the Display Units (DUs) via the Modular Avionics Unit's (MAU's) Advanced Graphics Module (AGM).


Each picture bus cable is made up of a twisted-shielded pair of wires with a characteristic impedance of 70 ohms. Communication on the bus takes place using ARINC 453 protocol. The bus uses the AGM as a termination resistance therefore termination resistors are not required.

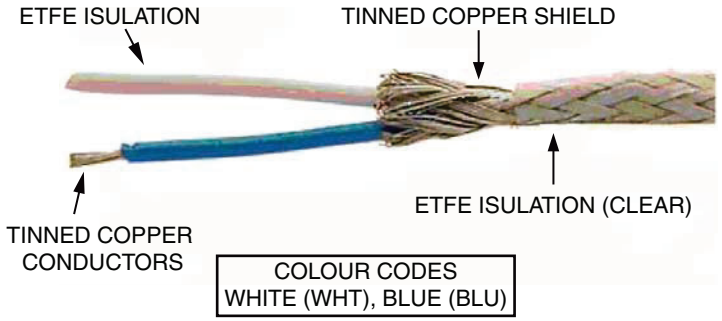

Picture Bus Cable (PIC Cable Shown)
Figure 1

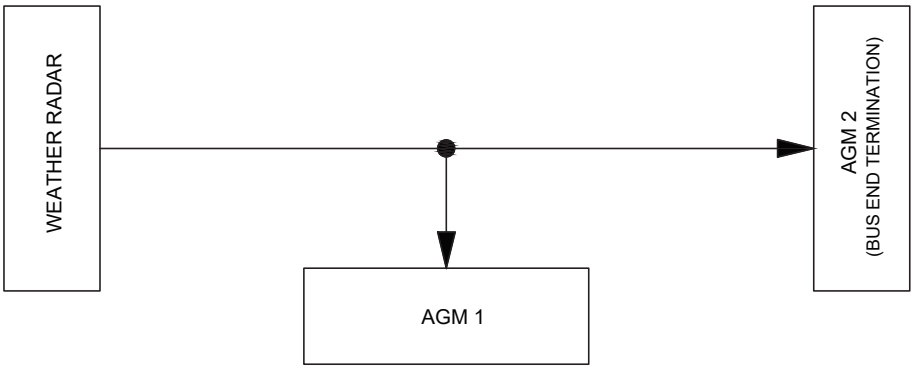

Weather Radar Picture Bus Diagram
Figure 2

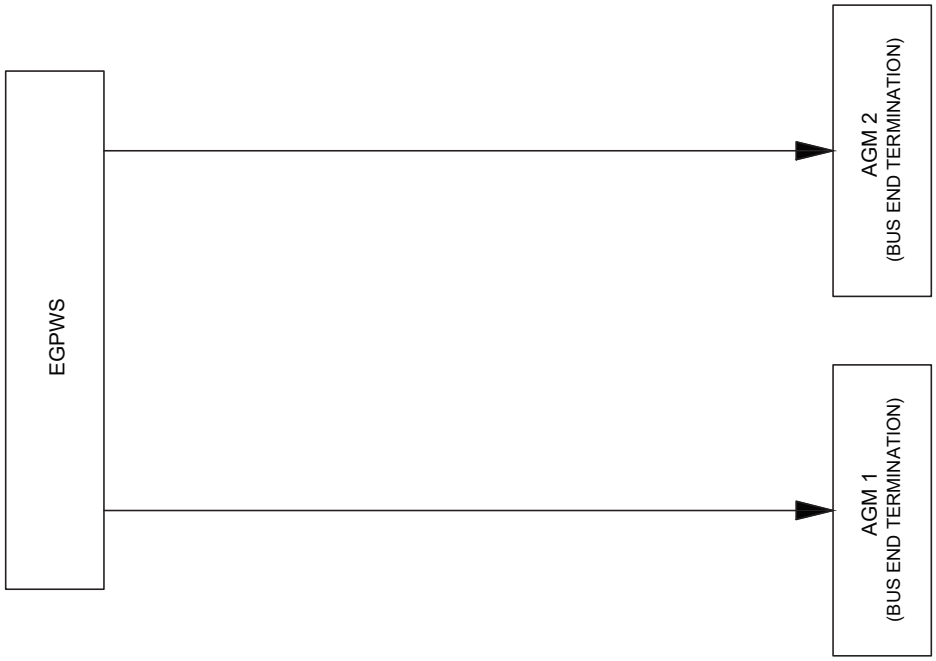

Terrain Picture Bus Diagram
Figure 3

2. Materials and Equipment

A. Materials

1) Picture Bus Cable (Refer to the General Information chapter for approved wire and cable specifications)

3. Requirements

The following includes both general picture bus requirements as well as requirements specific for the Series 400 Twin Otter. All requirements must be followed in order to maintain the reliability of each bus.

A. Weather Radar Picture Bus

Note Refer to Figure 4 for weather radar picture bus requirements.

1) The weather radar picture bus transmission line is limited to a maximum length of 50 feet (15.2 m). This length is measured from the weather radar to the terminated AGM (AGM 2).

2) There must be a minimum of 23 inches (584 mm) from the stub to the terminations on either end.


3) The picture bus stub branch is limited to a maximum length of 1.5 inches (38 mm). The required method for constructing a picture bus stub connection is described in 20-10-60, Stub Construction, Para 3.A.

4) Stub connections must be contained within the AGM backshell.

5) The picture bus shield must be grounded at both AGM ends using HexaShield ferrules.

6) The picture bus shield must be grounded at the weather radar end through the weather radar's backshell.

7) The wires spliced to the picture bus at AGM 2 are restricted to a maximum length of 1.5 inches (38 mm). The splice shall be installed in a similar manner as the picture bus stub splices. (Refer to 20-10-60, Stub Construction, Para 3.A).

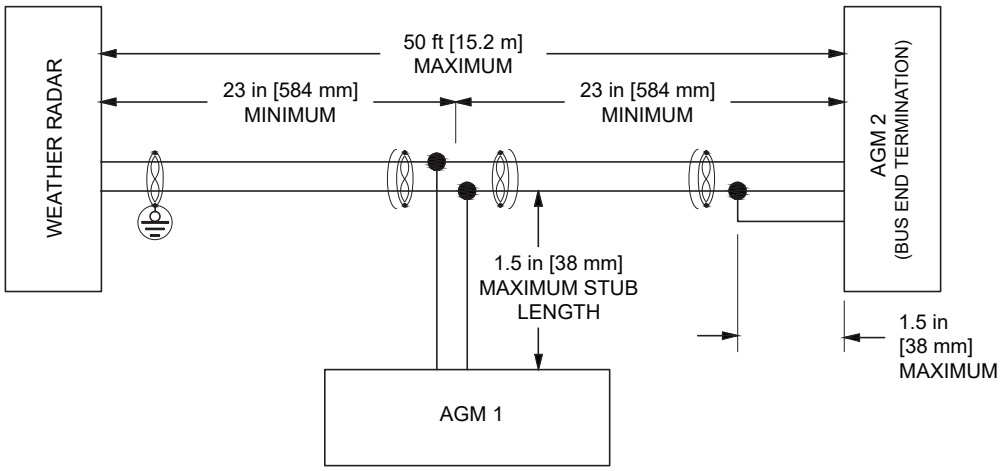

Weather Radar Picture Bus Requirements
Figure 4

B. Terrain Picture Bus


Note Refer to Figure 5 for terrain picture bus requirements.

1) Each terrain picture bus transmission line is limited to a maximum length of 50 feet (15.2 m).

2) The picture bus shield must be grounded at both AGM ends using HexaShield ferrules.

3) The picture bus shield must be grounded to the airframe at the Enhanced Ground Proximity Warning System (EGPWS) end of the bus.

4) The wires spliced to the picture bus at AGM 1 and AGM 2 are restricted to a maximum length of 1.5 inches (38 mm). The splices shall be installed in a similar manner as the picture bus stub splices. (Refer to 20-10-60, Stub Construction, Para 3.A).

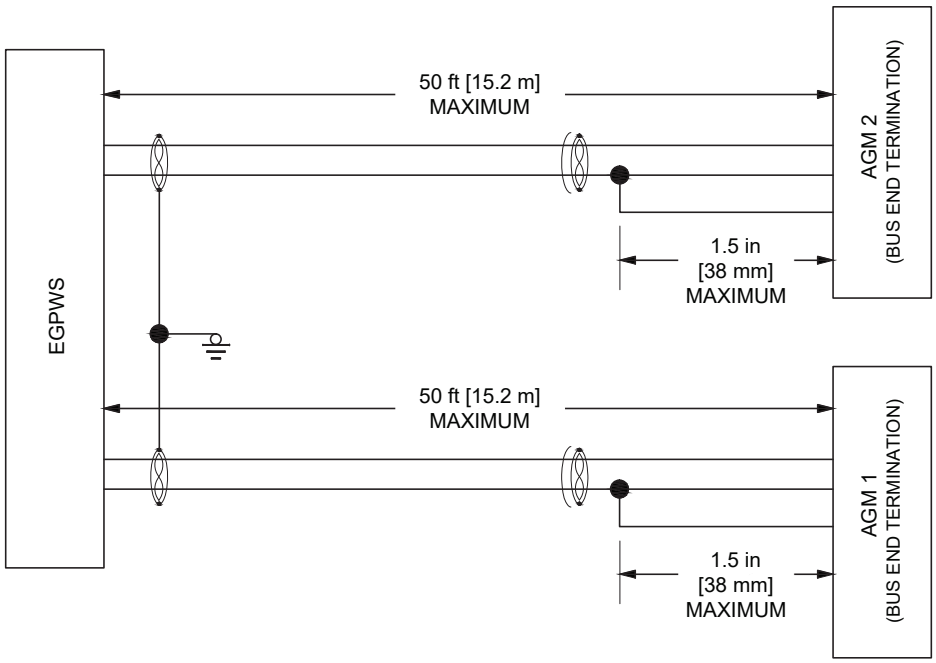


Terrain Picture Bus Requirements
Figure 5

Local Area Network (LAN) Bus


1. General

In the Primus Apex system, the Local Area Network (LAN) is a computer bus designed to supplement the Avionics Standard Communication Bus (ASCB). The bus permits data communication between various sub-systems and allows for the connection of an outside computer for maintenance and data loading. The LAN is based on Ethernet 10base2 and is available to every unit that attaches or communicates over the ASCB.

The LAN bus consists of a single 50 ohm triaxial (TRIAX) cable connected to three sub-systems: the KMC 2200 Multifunction (MF) controller, Network Interface Controller (NIC) 1, and NIC 2. The use of TRIAX cable allows for outer shield grounding at multiple points and grounding of the inner shield at only one point. 50 ohm termination resistors are required at either end of the bus to provide a load that stabilizes the signal shape and amplitude and minimizes pulse reflections.

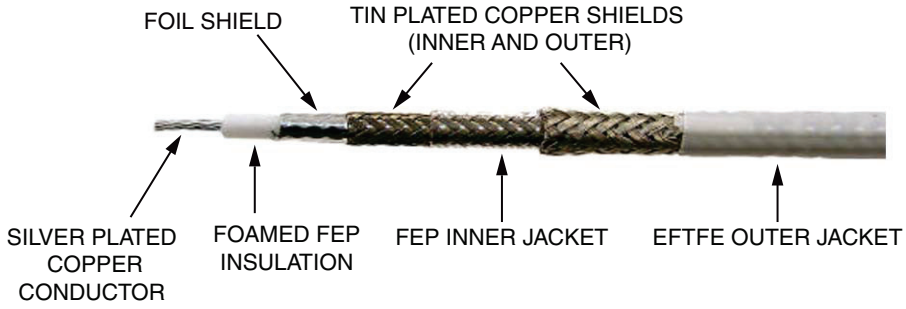

TRIAX, LAN Bus Cable (PIC Cable Shown)
Figure 1

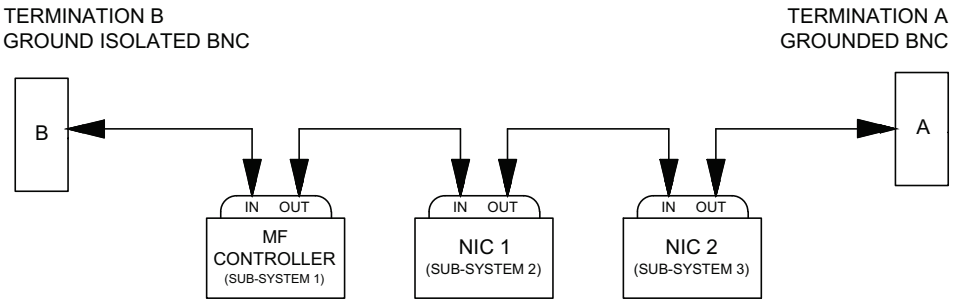

LAN Bus Diagram
Figure 2

2. Materials and Equipment

A. Materials

1) TRIAX, LAN bus cable (refer to the General Information chapter for approved wire and cable specifications)

2) TRIAX to COAX BNC bulkhead mount (non-isolated), Trompeter p/n ADBJ20-E3-BJ79

3) TRIAX to COAX BNC bulkhead mount (isolated), Trompeter p/n ADBJ20-E1-BJ79

4) TRIAX connector, Trompeter p/n PL75-43

5) Ferrite bead, Ferronics p/n 21-727-B

6) Crimp COAX insert, T.P.C. p/n 15-1090-2202B

7) 50 ohm BNC termination plug, Amp p/n 221629-1

8) 1/4 inch ID heat shrink tubing (white), M23053/5-106-9

9) 3/8 inch ID heat shrink tubing (white), M23053/5-107-9

B. Equipment

1) Daniels FT8 crimper

2) M22520/5-1 crimper with M22520/5-05 .178 hex die

3) Wire and cable strippers, commercially available

4) Wire cutters, commercially available

5) Heat gun, commercially available

6) Soldering Iron, commercially available


3. Requirements

The following includes both general LAN bus requirements as well as requirements specific for the Series 400 Twin Otter. All requirements must be followed in order to maintain the reliability of the bus.

A. The LAN bus transmission line is limited to a maximum length of 300 feet (91.4 m). This length is measured from one BNC termination plug to the other BNC termination plug. (Refer to Figure 3)

B. There must be a minimum of 20 inches (508 mm) of cable between adjacent sub-systems. (Refer to Figure 3)

C. There must be a minimum of 20 inches (508 mm) of cable between the last sub-system and BNC termination. (Refer to Figure 3)

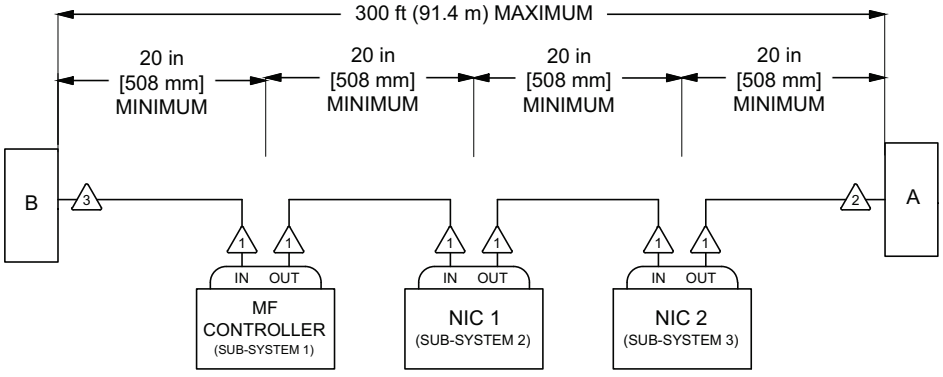

1 REFER TO FIGURE 4
2 REFER TO FIGURE 5
3 REFER TO FIGURE 6

LAN Bus Length Requirements
Figure 3

D. The required method for installing a COAX insert (T.P.C. p/n 15-1090-2202B) is described in Para 4.A. COAX inserts are used at all “IN” and “OUT” connections at each sub-system.

E. Ferrite beads (Ferronics p/n 21-727-B) are required at all LAN sub-system connections (refer to Figure 4). The required method for installing a LAN bus ferrite bead is described in Para 4.B.

F. The outer shield of the TRIAX must be grounded at each sub-system. The required method for attaching the shield to the NIC and MF controller backshells is described in 20-20-10, Shield Terminations at Connector Backshells and Hoods.

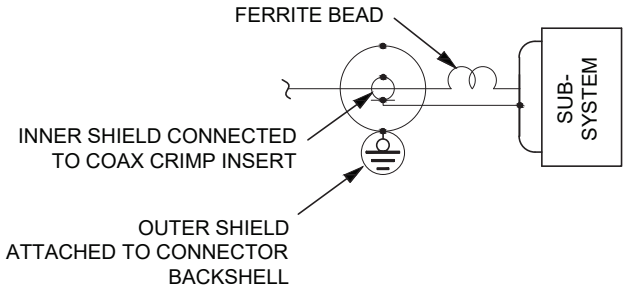


Figure 4

G. 50 ohm termination plugs (Amp p/n 221629-1) must be connected to both ends of the bus. The LAN will fail if the termination resistors are not connected.

H. Termination A must use a non-isolated bulkhead mount (Trompeter p/n ADBJ20-E3-BJ79). The mount grounds both the inner and outer TRIAX shield through the forward maintenance panel. Connect the TRIAX to the bulkhead mount using Trompeter p/n PL75-43. (Refer to Figure 5)

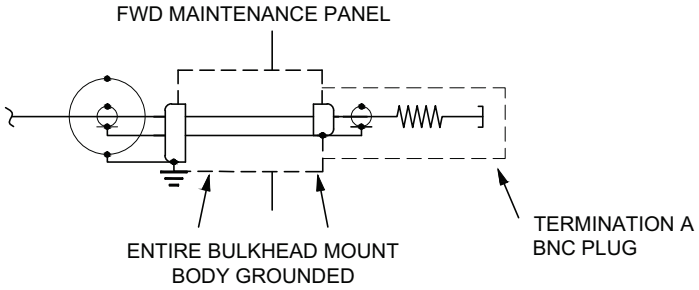


Figure 5

I. Termination B must use a isolated bulkhead mount (Trompeter p/n ADBJ20-E1-BJ79). The mount grounds the outer TRIAX shield and isolates the inner TRIAX shield. Connect the TRIAX to the bulkhead mount using Trompeter p/n PL75-43. (Refer to Figure 6)

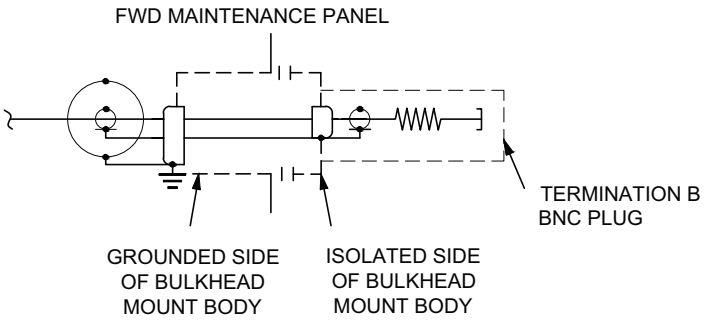


Figure 6

4. Procedures

A. LAN Bus COAX Insert Installation

The following procedure describes how to install a COAX insert (T.P.C. p/n 15-1090-2202B) to the LAN bus TRIAX cable.

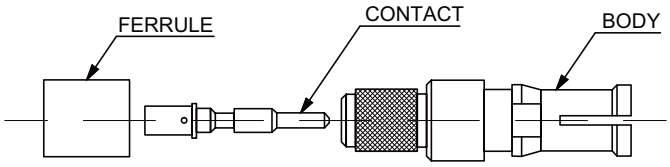


Figure 7

1) This step is NOT illustrated. Trim the outer jacket and comb back the outer shield at the length required for attaching the shield to the connector backshell (refer to 20-20-10, Shield Terminations at Connector Backshells and Hoods). Cover the cut edge of the outer jacket with a piece of 1/4 inch ID heat shrink tubing at approximately 1.25 inches (32 mm) in length.

2) Trim the inner jacket, inner shield, and insulation to the dimensions shown in Figure 8. Tin the center conductor to a maximum diameter of 0.038 inches (1.0 mm). Slide the ferrule over the cable.

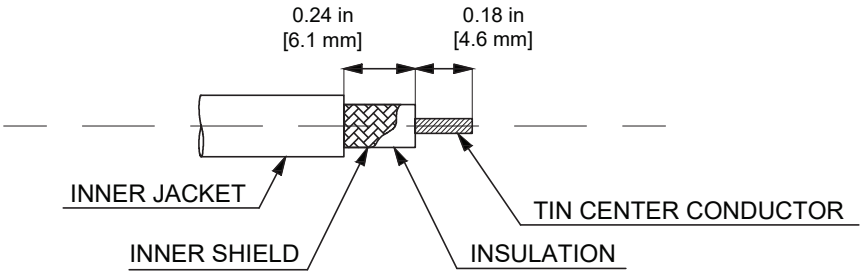


Figure 8

3) Solder the contact onto the center conductor of the cable. Flare the inner shield and foil as illustrated in Figure 9.

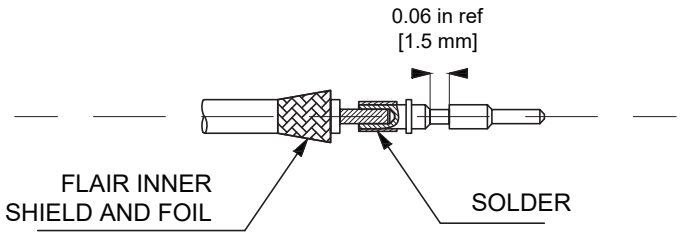


Figure 9

4) Slide the connector body onto the prepared cable, over the insulation and under the flared inner shield braid. Ensure the contact locks into the connector body. Slide the ferrule up against the shoulder and crimp, using an M22520/5-05 hex die, location B. The completed termination is shown in Figure 10.

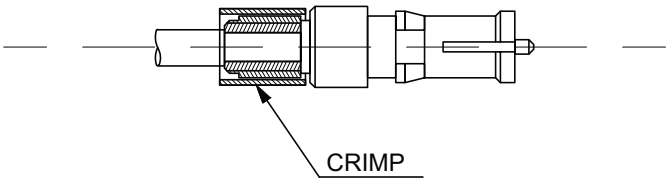


Figure 10

B. LAN Bus Ferrite Bead Installation

The following procedure describes how to install ferrite beads over the LAN bus TRIAX cable.

1) Installation at NIC Connections. (Refer to Figure 11)

a) Determine the correct location to install the ferrite bead. Ferrite beads shall be installed as close as possible to the LAN bus cable clamps inside the NIC backshells. In order to improve the overall fit, ferrite beads may be staggered.

b) Shrink two layers of 1/4 inch ID by 1.5 inch (38 mm) long heat shrink tubing (M23053/5-106-9) over the LAN cable where the ferrite bead will be located. Do not allow the shrink tubing to enter the area of the cable clamp.

c) Slide the ferrite bead (Ferronics p/n 21-727-B) over the heat-shrinked portion of the LAN cable.

d) Shrink two layer of 3/8 inch ID by 1.5 inch (38 mm) long heat shrink tubing (M23053/5-107-9) over the ferrite bead. Do not allow the shrink tubing to enter the area of the cable clamp.

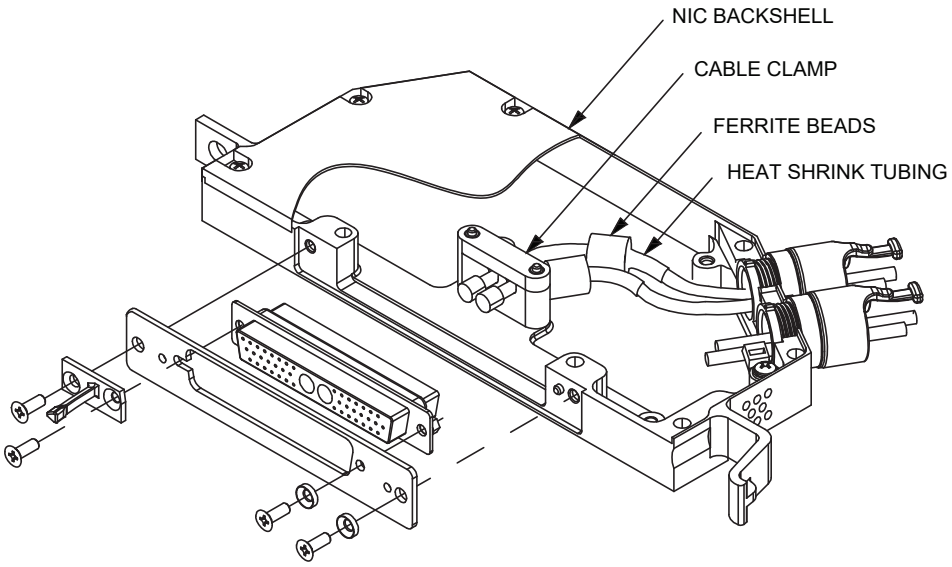


Figure 11

2) Installation at MF Controller Connections (Refer to Figure 12)

   a) Determine the correct location to install the ferrite bead. Ferrite Beads shall be installed inside the MF Controller's Taylor Backshell and may be staggered to improve the overall fit.

   b) Shrink two layers of 1/4 inch ID by 1.5 inch (38 mm) long heat shrink tubing (M23053/5-106-9) over the LAN cable where the ferrite bead will be located.

   c) Slide the ferrite bead (Ferronics p/n 21-727-B) over the heat-shrinked portion of the LAN cable.

   d) Shrink two layer of 3/8 inch ID by 1.5 inch (38 mm) long heat shrink tubing (M23053/5-107-9) over the ferrite bead.

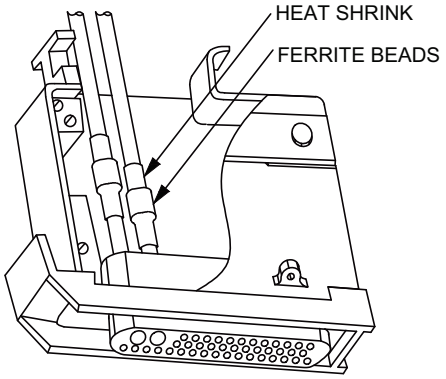


Figure 12


Quad Fibre Channel Bus (FCB)

1. General


Fibre Channel is the name of a serial data bus protocol and construction that is able to transmit large quantities of digital video data over a wire conduit.

In the Primus Apex System, the Fibre Channel Bus (FCB) is used to transmit digital video data from the AGM's to the KDU-1080 Display Units (DUs). The bus is a point-to-point high-speed unidirectional bus and consists of four wires: two twisted shielded wire pairs with a characteristic impedance of 150 ohms.

The upper and lower Multifunction Displays (MFDs) have primary FCB inputs. For redundancy, the pilot and copilot Primary Flight Displays (PFDs) have primary and secondary FCB inputs.

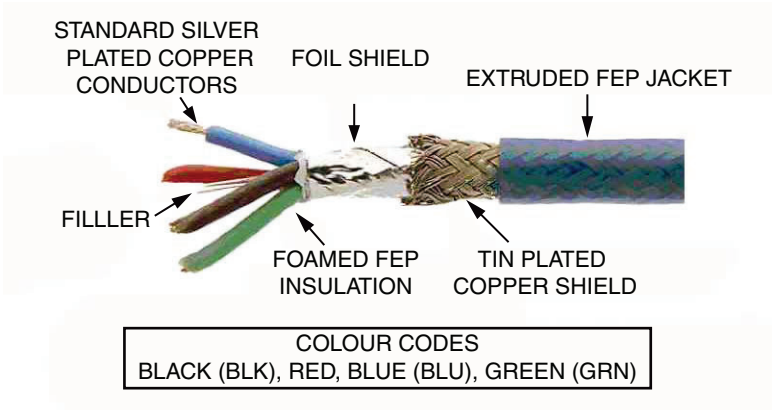

FCB Cable (PIC Cable Shown)
Figure 1

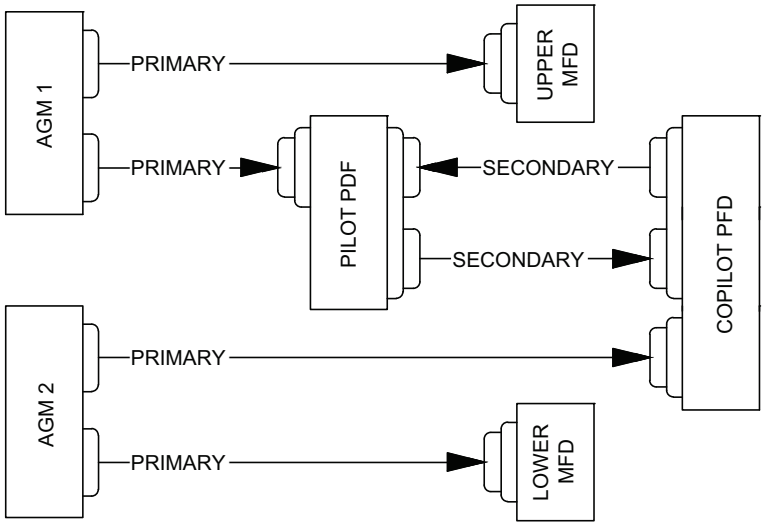

FCB Diagram
Figure 2

2. Materials and Equipment

   A. Materials

      1) Quad fibre channel cable (refer to the General Information chapter for approved wire and cable specifications)

      2) Quadrax socket contact, Souriau p/n ETH1-1504A

      3) Quadrax plug connector (single Quadrax), Souriau p/n 8D5Q11F81SN408

      4) Quadrax plug connector (double Quadrax), Souriau p/n 8D5Q17F82SN408

      5) Filler tape, fire resistant guideline tape, Freudenberg-NOK Inc. #52672 or equivalent

   B. Equipment

      1) Crimp tool, M22520/2–01 with positioner K1690 and die M22520/5–45, cavity A, .231 HEX

      2) Plug holders, Glenair p/n 600H005–15PN, 600H005–15PA, 600H005–11PN, 600H005–17PN

      3) Backshell Assembly Wrenches, Glenair p/n 600-006-14, 600-006-10, 600-006-16

      4) Cable and wire strippers, commercially available

      5) Wire cutters, commercially available

3. Requirements

   The following includes both general FCB requirements as well as requirements specific for the Series 400 Twin Otter. All requirements must be followed in order to maintain the reliability of each bus.


   A. Each FCB transmission line is limited to a maximum length of 75 feet (22.9 m). (Refer to Figure 3)

   B. The picture bus shield must be grounded at both AGMs using HexaShield ferrules. (Refer to Figure 3)

   C. The installed length of all four wires in a given bus must be exactly the same. Should a repair be necessary to one wire in a bus, consideration should be given to re-installing all four wires in the bus or even replacing the entire bus cable from the AGM to the DU in order to meet this requirement.

   D. The required method for installing Quadrax socket contacts is described in Para 4.A.

   E. The required method for installing Quadrax plug connectors is described in Para 4.B.

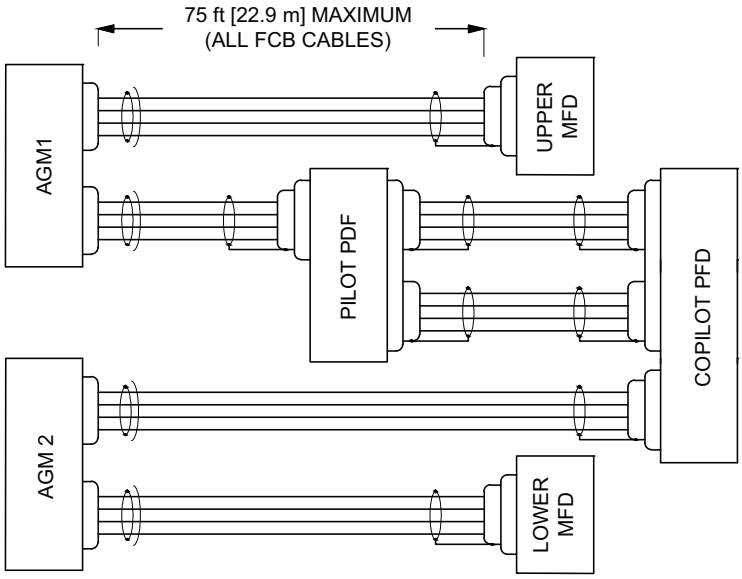

FCB Requirements
Figure 3

4. Procedures

A. Quadrax Socket Contact Installation

Crimp the inner and outer quadrax contacts in accordance with Souriau document AI536 (latest revision). Follow the Souriau instructions for non-twisted cables along with the instructions below:

1) Strip the outer cable jacket back to expose the copper shield. Trim back the aluminum foil and filler cords. Fold back the braid and install the ferrule over the shield as shown in Figure 4.

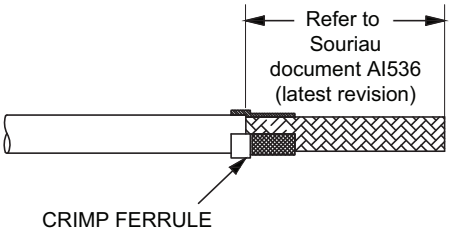


Figure 4

2) Comb out the outer braid and fold it back over the crimp ferrule. Trim off any excess braid leaving the rear shoulder of the crimp ferrule exposed. (Refer to Figure 5)

3) Strip the insulation off the inner conductor wires and crimp Quadrax socket contacts (Souriau p/n ETH1-1504A) using crimp tool M22520/2–01 at crimp height setting 5. Position with K1690.

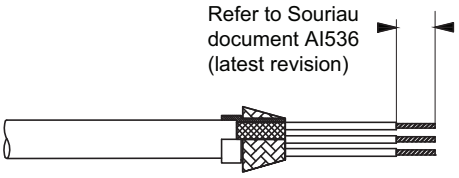


Figure 5

4) Install the terminated contacts into the rear insulator. Align the front and rear insulator keys as shown in Figure 6. Install the front insulator onto the contacts and rear insulator until fully bottomed.

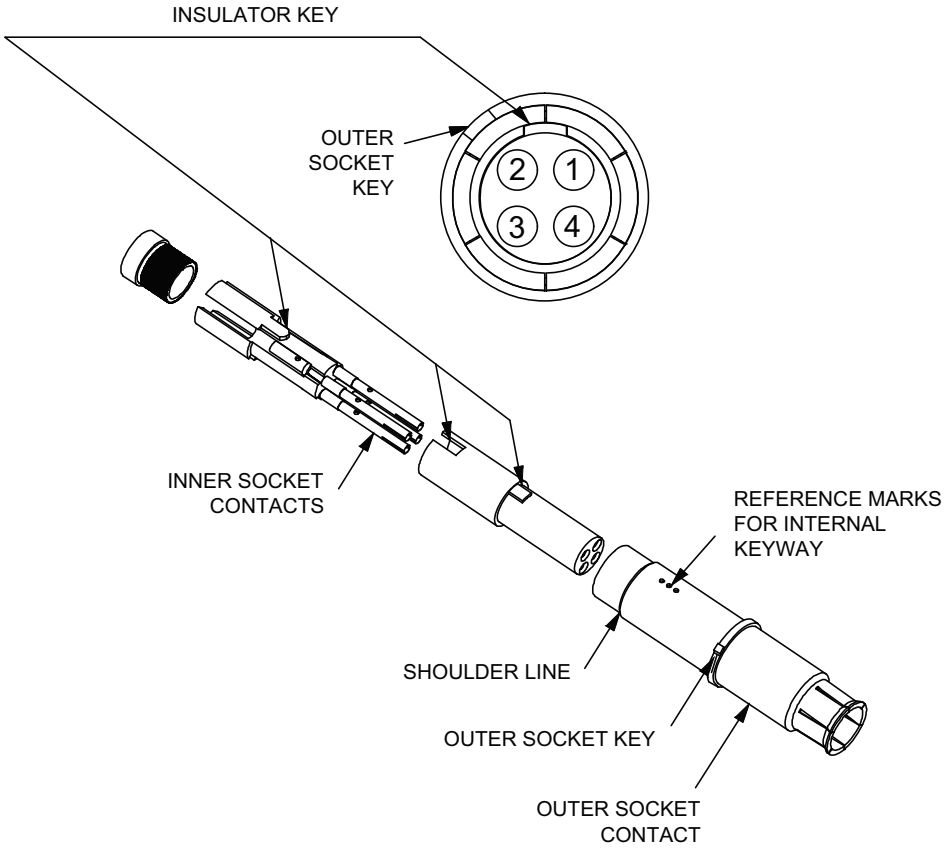


Figure 6

5) Align the front insulator key with the reference marks on the outer contact body. Insert the sub-assembly and crimp ferrule into the outer contact body until only the crimp ferrule shoulder is showing. Make sure the front insulator is fully seated. The insulator should be flush with or slightly protruding past the outer contact as shown in Figure 7.

CAUTION **WHEN CRIMPING THE OUTER CONTACT, THE FERRULE MUST BE SEATING AGAINST THE CABLE JACKET FOR THE JACKET TO BE PROPERLY CRIMPED, UNDERNEATH THE REAR SHOULDER OF THE FERRULE. THE CONDUCTORS NEED TO BE THE CORRECT LENGTH FOR THE FERRULE TO SEAT PROPERLY. IF THE CONDUCTORS ARE TOO LONG, THE FERRULE WILL EVENTUALLY POSITION ITSELF TOWARDS THE END OF THE CABLE AND THE JACKET WILL SLIP OUT OF THE FERRULE.**

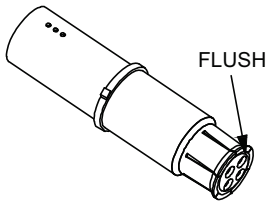


Figure 7

6) During the crimping of the outer contact all internal components must remain fully seated. Crimp the outer contact and the braid to the ferrule using crimp tool M22520/5–01 and die M22520/5–45, cavity A, .231 hex.

7) Slide the insulating boot over the outer contact.

B. Qudrax Plug Connector Installation

Quadrax plug connectors are used for FCB connections at all four DUs. J3 on the DUs mate with single quadrax plugs (Souriau p/n 8D5Q11F81SN408). J4 on the DUs mate with double quadrax plugs (8D5Q17F82SN408).

CAUTION **DO NOT TWIST THE CABLE IN THE CONNECTOR. THE CONTACTS AND CONNECTORS ARE SUSCEPTIBLE TO DAMAGE BY TWISTING THE CABLES UNTIL THE BACKSHELLS AND STRAIN RELIEFS ARE COMPLETELY ASSEMBLED AND TIGHTENED.**

1) Separate the strain relief from the backshell and slide the two parts onto the cables.

2) Install the contacts in the connector, aligning the contact key with the main key on top of the outer diameter of the plug.

3) Use the plug holder and a torque wrench specified in Table 1 — Quadrax Plug Installation Tools, to keep the plug from rotating when tightening parts.

Table 1 Quadrax Plug Installation Tools

KDU Connector #	Plug Holder, Glenair p/n	Assembly Wrenches, Glenair p/n	Torque (see note)
J1, Size 15 N	600H005-15PN	600-006-14	93 ± 5 inch-lbs
J2, Size 15 A	600H005-15PA	600-006-14	93 ± 5 inch-lbs
J3, Size 11 N	600H005-11PN	600-006-10	61 ± 5 nch-lbs
J4, Size 17 N	600H005-17PN	600-006-16	93 ± 5 nch-lbs

Note The torque values are for both backshell to plug and strain relief to backshell.

CAUTION **DO NOT HOLD OR TWIST CABLE WHEN TORQUING**

4) Torque the backshell on the plug. Refer to Table 1 — Quadrax Plug Installation Tools, for torque values.

5) Wrap the cable with filler tape (Freudenberg-NOK Inc. #52672 or equivalent) where it passes through the strain relief.

CAUTION DO NOT HOLD OR TWIST CABLE WHEN TORQUING

6) Torque the strain relief onto the backshell. Refer to Table 1 — Quadrax Plug Installation Tools for torque values.

7) Tighten the strain relief clamp screws.


AFCS Controller Area Network (CAN) Bus

1. General


The AFCS Controller Area Network (CAN) bus is the primary communication path between the MAU and the aileron, rudder, and elevator servos. The AFCS CAN bus network consists of two independent busses labelled “CAN BUS A” and “CAN BUS B”. Each AIOP module reads and writes to the on-side bus, and reads from the cross-side bus.

ECS p/n 322402 is the only approved cable type for the AFCS CAN bus. The cable is a twisted shielded pair with a characteristic impedance of 125 ohms.

Each end of the bus must be attached to a termination resistor. The resistors are built into the aileron and rudder servos.

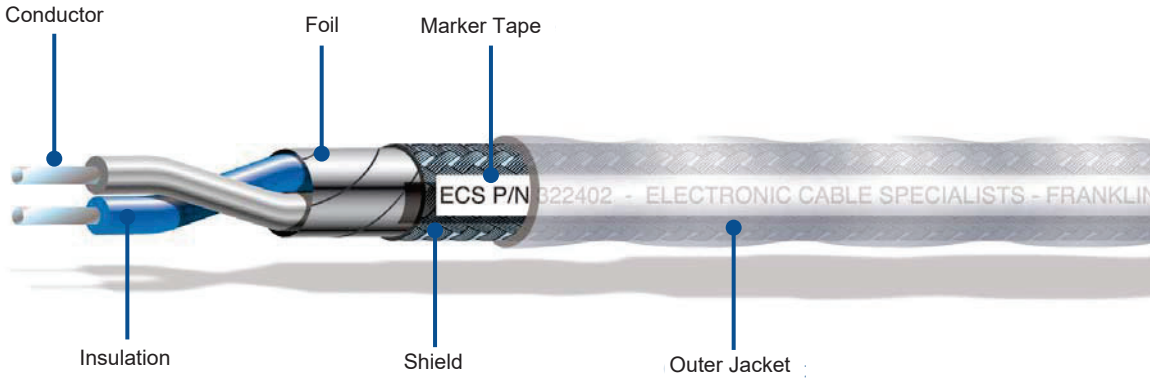

AFCS CAN Bus Cable (ECS p/n 322402)
Figure 1

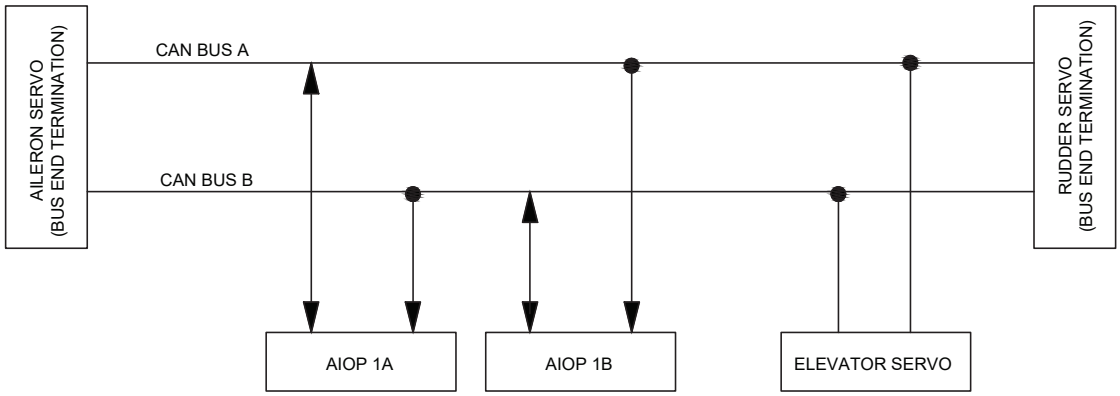

AFCS CAN Bus Diagram
Figure 2

2. Requirements

The following requirements must be followed in order to maintain the reliability of the CAN bus:

A. Each CAN bus transmission line is limited to a maximum length of 203 feet (62 meters). This length is measured from the aileron servo end to the rudder servo end.

B. There must be a minimum of 12 inches (305 mm) of cable between adjacent stubs.


C. There must be a minimum of 12 inches (305 mm) of cable between the last stub and the servo attaching to the end of the bus.

D. Each CAN bus stub branch attaching to the AIOP is limited to a maximum length of 1 inch (25 mm). The required method for constructing a CAN bus stub connection at the AIOP is described in 20-10-60, Stub Construction, Para 3.B.

E. Each CAN bus stub branch attaching to the elevator servo is limited to a maximum length of 6 inches (152 mm) and must be shielded using an overbraid sleeve. The required method for constructing a CAN bus stub at the elevator servo is described in 20-10-60, Stub Construction, Para 3.C.

F. Each of the wires spliced to the CAN bus at the rudder and aileron servo is limited to a maximum length of 6 inches (152 mm) and must be shielded using an overbraid sleeve. The splices and overbraid shall be installed in a similar manner as the splices and ovebraid used for the elevator stub connections.

G. The CAN bus shield must be grounded at all three servos and both AIOP backshells. The required method for grounding the shields is described in Chapter 20-20-10, Shield Terminations at Connector Backshells and Hoods.

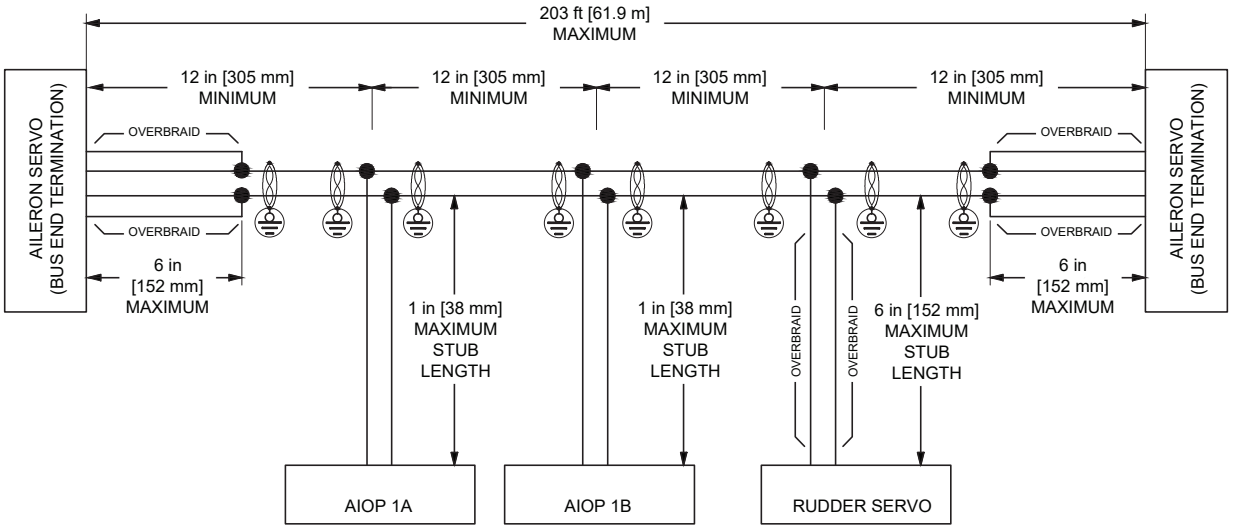

AFCS CAN Bus Requirements (Single Bus Shown)
Figure 3

Stub Construction

1. General

This section describes the required method for constructing a stub connection for the ASCB, CAN bus, picture bus, and shielded cables at the DAU. The procedures in this section must be followed to maintain the reliability of each bus.

2. Materials and Equipment

A. Materials

1) Thinwall wire (refer to the General Information chapter for approved wire and cable specifications)

2) Solder sleeve, M83519/1-2

3) Solder sleeve, M83519/1-5

4) Solder sleeve, Raychem p/n SO63-4-9030

5) Crimp socket contact, Positronic p/n FC8022D-14

6) Crimp socket contact, M39029/56-351

7) Environmental splice, p/n M81824/1-2

8) 3/16 inch ID white heat shrink tubing, commercially available

9) Overbraid sleeving, Raychem p/n Ray90-10

10) Band clamp, Band-it p/n AS2219

11) Guideline tape, Freudenberg-NOK Inc. p/n 52672

B. Equipment

1) Contact crimp tool, M22520/2-01

2) Contact crimp tool positioner, M22520/2-06

3) Contact crimp tool positioner, M22520/2-10

4) Environmental splice crimp tool, DMC p/n GMT 232 or equivalent

5) Band clamp installation hand tool, Band-it p/n A91079

6) Wire and cable strippers, commercially available

7) Wire cutters, commercially available

8) Heat gun, commercially available

9) Soldering Iron, commercially available

3. Procedures

CAUTION **MOD 6/2303 INTRODUCES REVISED REQUIREMENTS FOR THE ASCB. FOR AIRCRAFT WITH MOD 6/2303, THE TYPE 2 STUB CONSTRUCTION PROCEDURE MUST BE FOLLOWED FOR ALL ASCB STUB CONNECTIONS TO ENSURE COMPLIANCE WITH PHASE 2 HIRF AND LIGHTNING PROTECTION REQUIREMENTS.**

A. Type 1 Stub Construction

The following procedure describes the required method for constructing a stub connection for:

- all Pre Mod 6/2303 ASCB stub connections at the MAU
- all picture bus stub connections at the MAU
- all shielded cable stub connections at the DAU

1) Prepare the twisted shielded pair cables with the following dimensions:

   - 0.25 inches (6 mm) of exposed shield
   - 1 inch maximum (25 mm) of exposed insulated conductors



Figure 1

2) Strip 1.5 inches (38 mm) of insulation from one end of a 7.5 inch (190 mm) black piece of 22 AWG general use wire for the shield drain wire.

   Note Weather radar picture bus stubs use HexaShields for shield grounding therefore Para 3.A.2), Para 3.A.4) and Para 3.A.4) may be skipped.

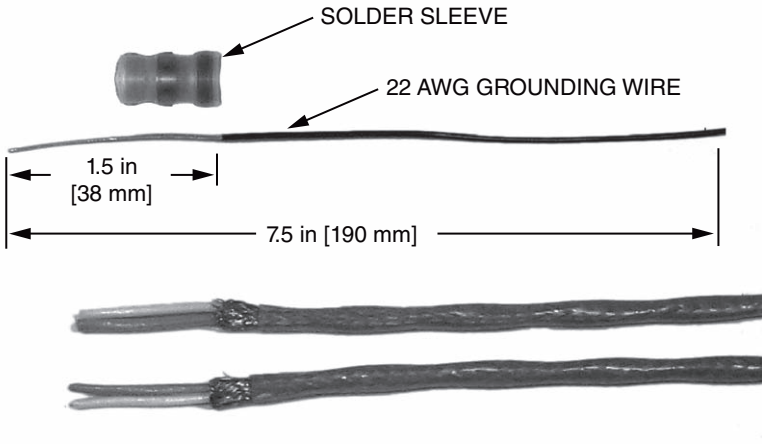


Figure 2

3) Wrap the exposed end of the grounding wire around the exposed shields of the cables (this makes a mechanical connection and holds the cables together).

4) Install a solder sleeve (M83519/1-5) over the exposed shields and heat shrink the sleeve until the solder melts.

   Note ASCB stubs don't require the drain wire to be grounded therefore the wire can be trimmed at the solder sleeve.



Figure 3

5) Cut one white and one blue 22 AWG thinwall wire (M22759/18 or /32 or /33) to the stub length. Crimp a socket contact (Positronic p/n FC8022D-14) on one end. Strip 0.25 inches (6 mm) off the other end and tin.

6) Strip approximately 0.315 inches (8 mm) from each end of the 4 insulated conductors. Twist and solder the two white wires and twist and solder the two blue wires together.

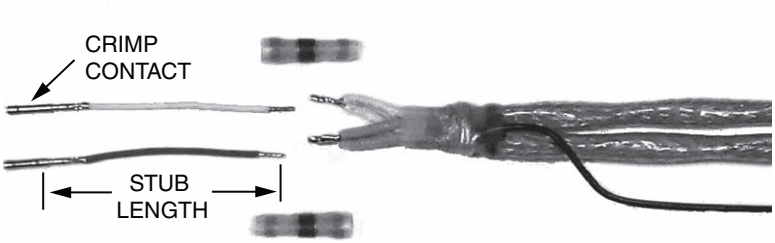


Figure 4

7) Solder the prepared white stub wire to the white twisted wires. Solder the prepared blue stub wire to the blue twisted wires.

8) Heat shrink solder sleeves (M83519/1-2) over each connection.



Figure 5

B. Type 2 Stub Construction

The following procedure describes the required method for constructing a stub connection for:

- all Post Mod 6/2303 ASCB stub connections at the MAU
- all AFCS CAN bus stub connections at the MAU

Note The steps in this procedure are illustrated in Figure 6.

1) Determine the length of cable that will be routed inside the MAU backshell. This length must be kept as short as practical. Remove this length of jacket, shield and foil from the cable.

2) Remove an additional 0.25 inches (6mm) of jacket to expose the cable shield.

3) Install a solder sleeve with pre-installed flat braid (Raychem p/n SO63-4-9030) over the exposed shield. Heat shrink the sleeve until the solder melts.

Note Once the cable is routed inside the backshell, the flat braid exit on the solder sleeve needs to align with tag ring attachment on the backshell. Refer to 20-20-10, Shield Terminations at Connector Backshells and Hoods, for further details on shield termination requirements.

4) Maintain twist in wires and install a piece of 3/16 inch ID white heat shrink tubing overtop the exposed wires.

5) Remove 0.315 inches (8 mm) of insulation from each of the four data cable wires.


6) Repeat Para 3.B.1) thru Para 3.B.5) for the second data cable.

7) Cut one white and one blue 22 AWG thinwall wire (M22759/18 or /32 or /33) to a maximum length of 1 inch (25 mm). Strip one end of each wire then crimp a socket contact (Positronic p/n FC8022D-14) onto the stripped end of the wires. Remove 0.25 inches (6 mm) of insulation from the other end of the wires and tin.

8) Twist and solder the two white data cable wires together, then twist and solder the two blue data cable wires together. Keep the white and blue data cable wires as close to together as possible.

9) Solder the white stub wire to the white data cable wires, then solder the blue stub wire to the blue data cable wires.

10) Install a solder sleeve (M83519/1-2) over each of the soldered connections. Heat shrink the sleeves until the solder melts.

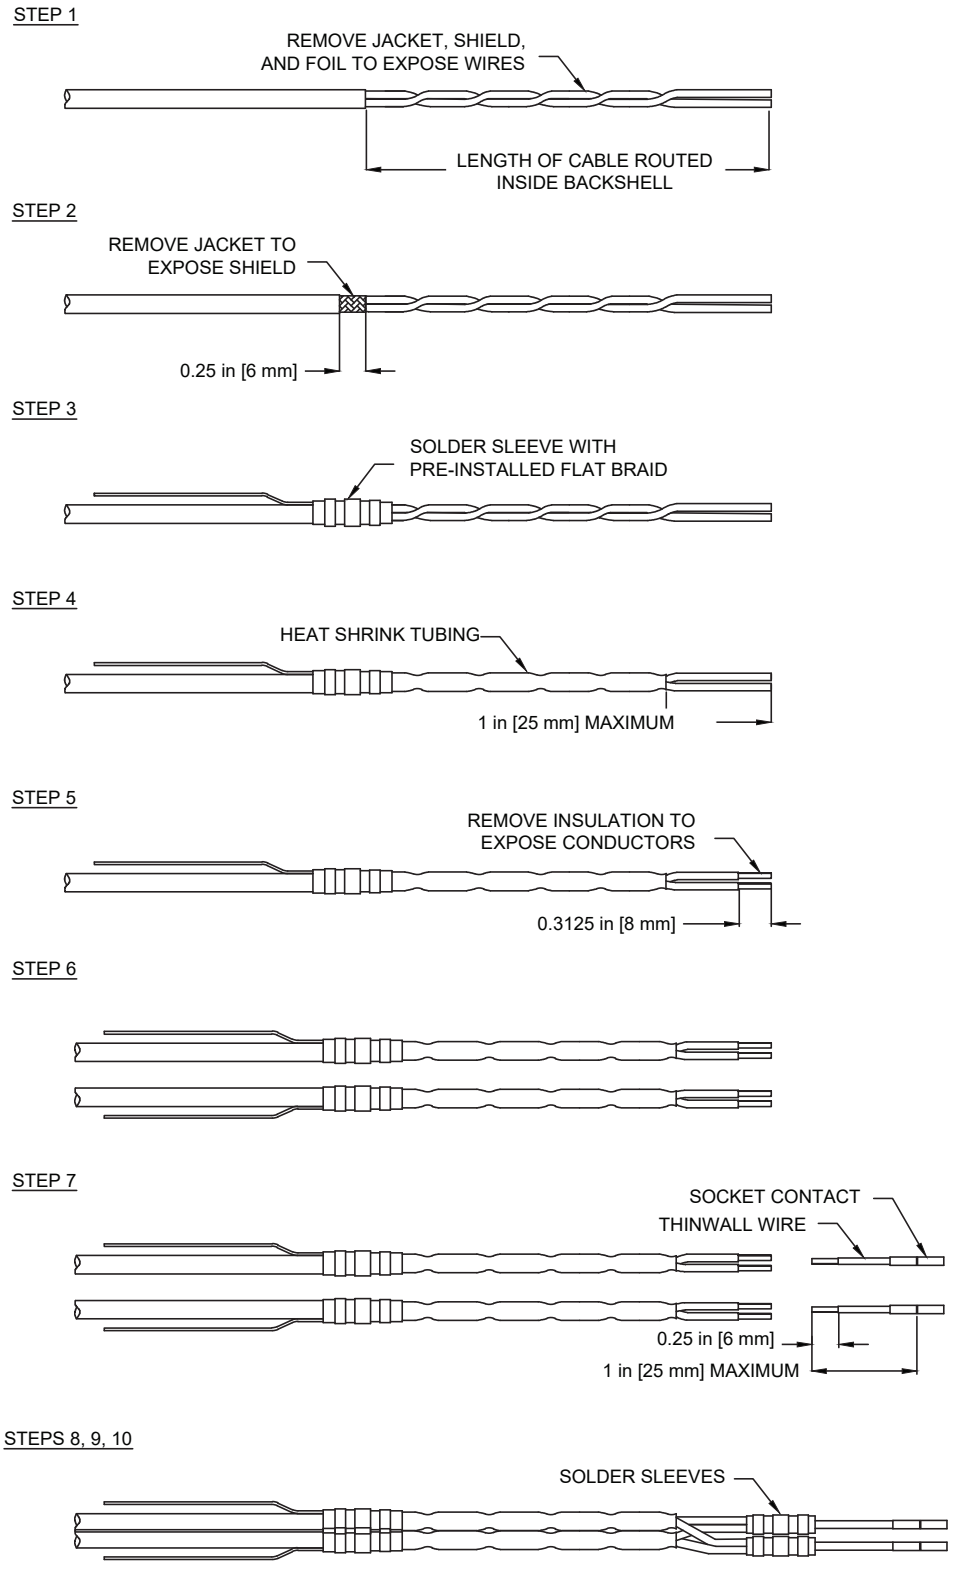

Type 2 Stub Construction
Figure 6

NOTE: Please see the TEMPORARY REVISION that revises this page.

C. Type 3 Stub Construction

The following procedure describes the required method for constructing an AFCS CAN bus stub connection at the elevator servo. Similar procedures shall be followed for installing the splices and overbraid sleeving at the rudder and aileron servo connections.

Note The steps in this procedure are illustrated in Figure 7.

1) Remove 1.25 inches (32 mm) of jacket, braid and foil from the cable.

2) Remove an additional 0.75 inches (19 mm) of jacket to expose the cable shield.

3) Carefully comb out the shield.

4) Repeat Para 3.C.1) thru Para 3.C.3) for the second data cable.

5) Cut one white and one blue 22 AWG standard wire (M22759/34) to a maximum length of 6 inches (152 mm). Strip one end of each wire, then crimp a socket contact (p/n M39029/56-351) onto the stripped end of the wires. Remove 0.3125 inches (8 mm) of insulation from the other end of the wires.

6) Remove 0.3125 inches (8 mm) of insulation from each of the four data cable wires.

7) Attach the two blue data cable wires to the blue standard wire and the two white data cable wires to the white standard wire, using environmental crimp splices (p/n M81824/1-2). In order to sufficiently fill the barrel of the splice, an 18 AWG uninsulated wire must be installed into the end with the standard wire. After crimping, trim the 18 AWG wire flush to the edge of the barrel. Ensure the white and blue data cable wires are kept as close to together as possible.

8) Wrap a single piece of 1 inch (25 mm) wide guideline tape (Freudenberg-NOK Inc. p/n 52672) around the two CAN bus cables to increase the overall diameter to approximately 0.45 inches (11 mm).

9) Carefully fold both cable shields back and overtop the guideline tape.

10) Cut a piece of overbraid sleeving (Raychem p/n Ray90-10) to a suitable length, and install the braid overtop the exposed wires and splices. Fold 0.25 inches (6 mm) of braid into itself at both ends, then install a band clamp (Band-it p/n AS2219) overtop the braid and guideline tape.

TEMPORARY REVISION

PSM: 1-64-2W **AIRCRAFT: DHC-6** **SERIES: 400**

PUBLICATION: WIRING MANUAL **TEMP. REVISION NO.: TR20-8**

Insert in 20-10-60 after Page 6
STUB CONSTRUCTION

REASON FOR ISSUE:

To update the Type 3 Stub Construction to include the installation of MS3053/5–209–C Heat Shrink Tube.

ACTION:

In Chapter 20, Section 20-10-60 ignore existing Pages 6 and 7, and insert revised pages as shown on Pages 2 and 3 of this Temporary Revision.

-Continued overleaf-

RECORDING INSTRUCTIONS:

Record this TEMPORARY REVISION NO. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

C. Type 3 Stub Construction

The following procedure describes the required method for constructing an AFCS CAN bus stub connection at the elevator servo. Similar procedures shall be followed for installing the splices and overbraid sleeving at the rudder and aileron servo connections.

Note The steps in this procedure are illustrated in Figure 7.

1) Remove 1.25 inches (32 mm) of jacket, braid and foil from the cable.

2) Remove an additional 0.75 inches (19 mm) of jacket to expose the cable shield.

3) Carefully comb out the shield.

4) Repeat Para 3.C.1) thru Para 3.C.3) for the second data cable.

5) Cut one white and one blue 22 AWG standard wire (M22759/34) to a maximum length of 6 inches (152 mm). Strip one end of each wire, then crimp a socket contact (p/n M39029/56-351) onto the stripped end of the wires. Remove 0.3125 inches (8 mm) of insulation from the other end of the wires.

6) Remove 0.3125 inches (8 mm) of insulation from each of the four data cable wires.


7) Attach the two blue data cable wires to the blue standard wire and the two white data cable wires to the white standard wire, using environmental crimp splices (p/n M81824/1-2). In order to sufficiently fill the barrel of the splice, an 18 AWG uninsulated wire must be installed into the end with the standard wire. After crimping, trim the 18 AWG wire flush to the edge of the barrel. Ensure the white and blue data cable wires are kept as close to together as possible.

8) Wrap a single piece of 1 inch (25 mm) wide guideline tape (Freudenberg-NOK Inc. p/n 52672) around the two CAN bus cables to increase the overall diameter to approximately 0.45 inches (11 mm).

9) Carefully fold both cable shields back and overtop the guideline tape.


10) Cut a piece of overbraid sleeving (Raychem p/n Ray90-10) to a suitable length, and install the braid overtop the exposed wires and splices. Fold 0.25 inches (6 mm) of braid into itself at both ends, then install a band clamp (Band-it p/n AS2219) overtop the braid and guideline tape.

11) Cut a piece of 1 inch (25 mm) MS23053/5-209-C Heat Shrink tube. Slide the tube overtop of the AS2219 band clamp, then shrink using a suitable hot air gun.

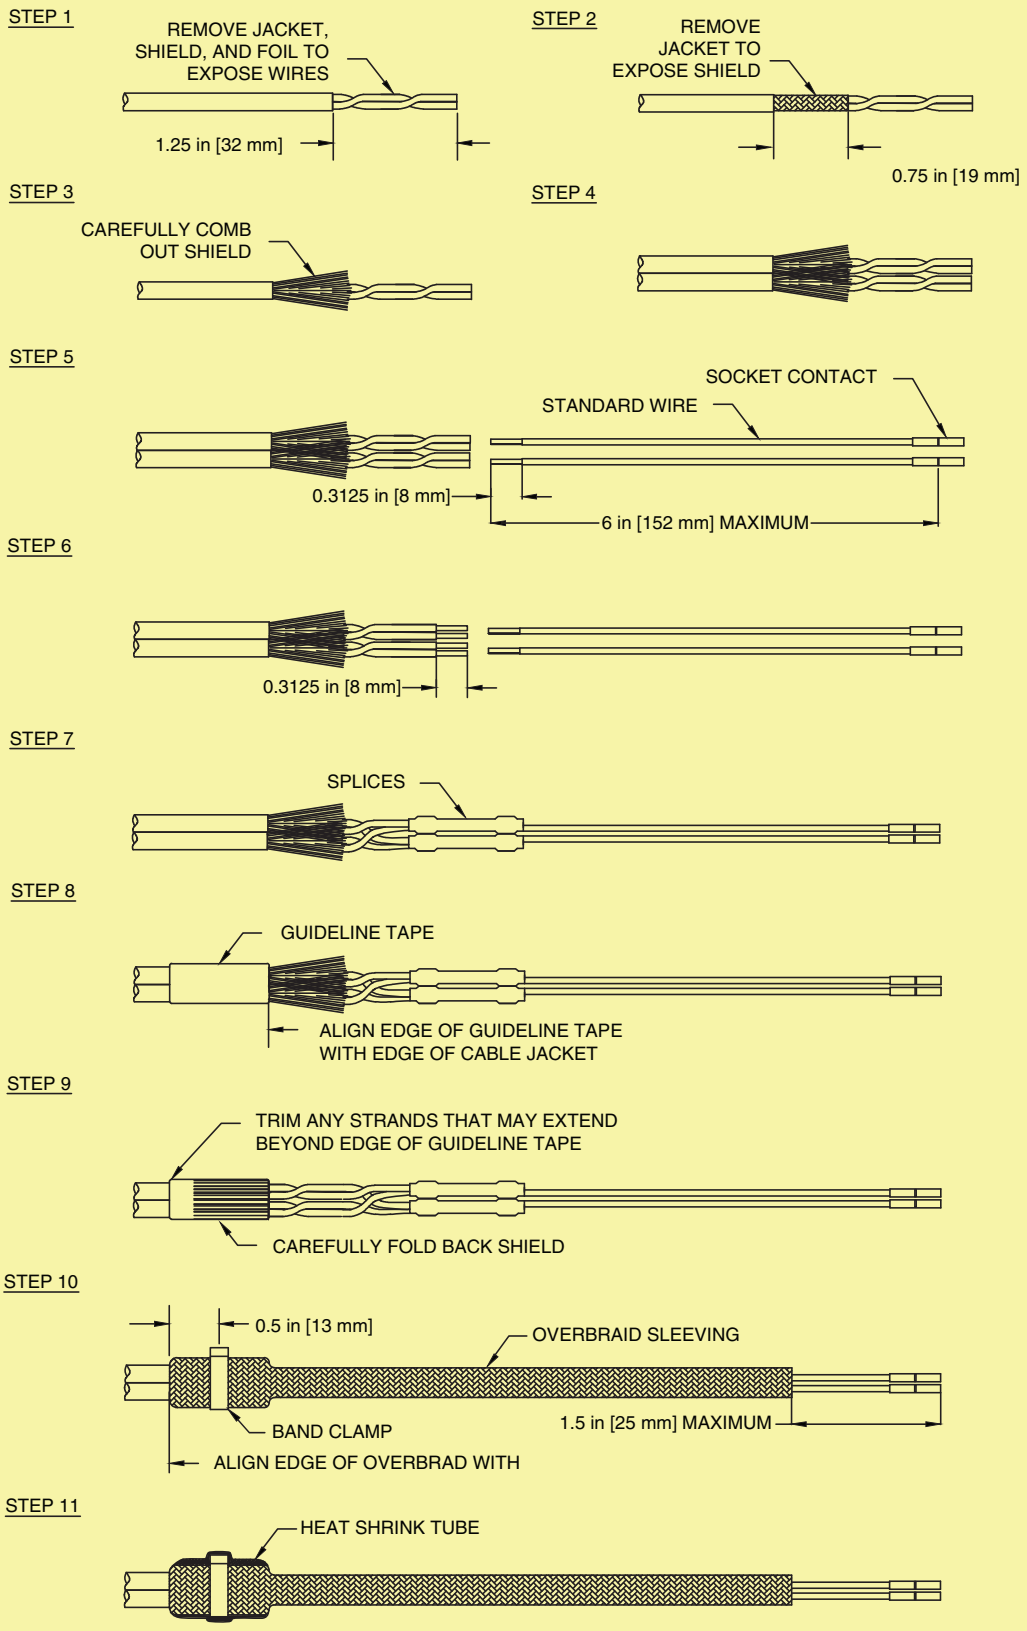

Type 3 Stub Construction
Figure 7

This Page Intentionally Left Blank

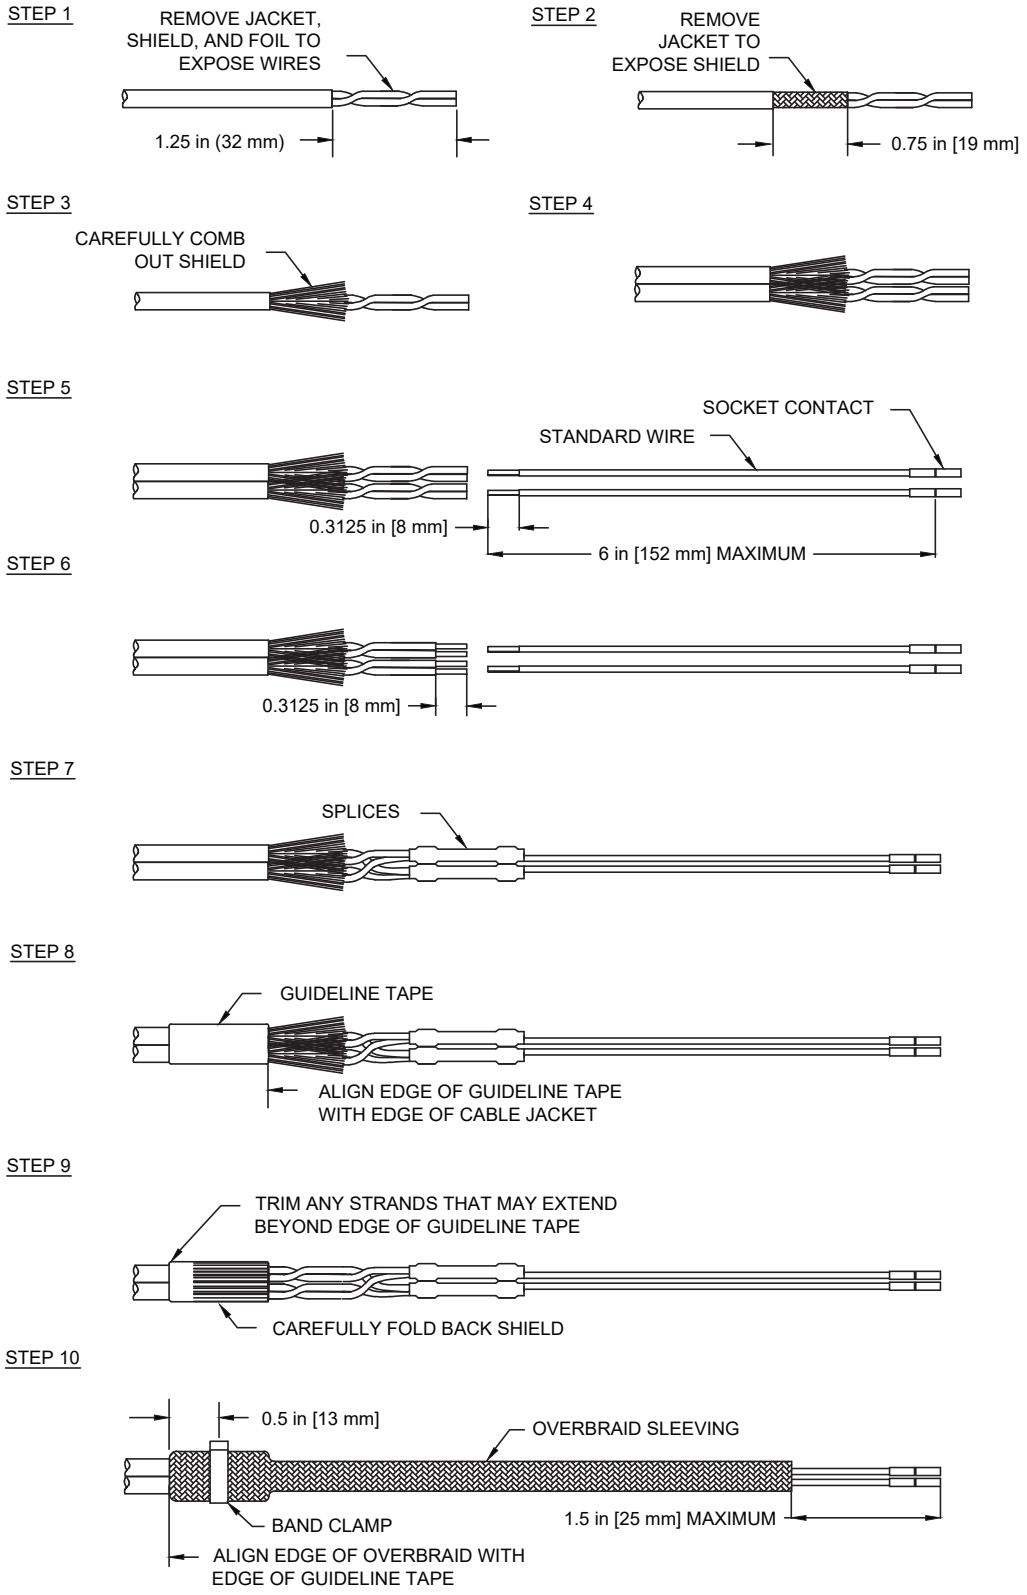

Type 3 Stub Construction
Figure 7

This Page Intentionally Left Blank


Electrical Shield Terminations

1. General

This section specifies the general procedures and requirements for installing and terminating electrical shields for shielded cable including, but not limited to, M27500 cable. Proper shield terminations are required for protection from electromagnetic interference (EMI) and high intensity radio frequency (HIRF) and MUST be followed to ensure compliance with engineering design and reliability objectives.

The majority of shielded wires in the aircraft have the shields grounded at both ends. For some cases, only one end of each continuous shielded cable segment is grounded. These cases include the following:

- All analog audio signal shielded cables
- Display Unit (DU) potentiometer dimming control shielded cables (shield grounded at DU only)
- Aileron trim position transmitter (shield grounded at Data Acquisition Unit only)

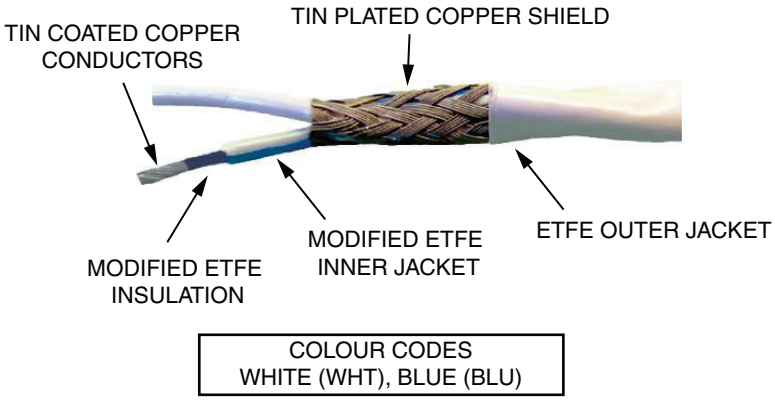

M27500-22SD2T23 Shielded Cable
Figure 1

This Page Intentionally Left Blank

Shield Terminations at Connector Backshells and Hoods

1. General

This section describes shield termination procedures for terminations at connector backshells and hoods that are metallic and have a suitable provision for connecting a drain wire or clamping a shield braid. Connector backshell shield terminations are indicated with the following wiring symbol:


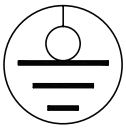



Figure 1

Applications include, but are not limited to, the following:


- Shield terminations at Strain Relief Backshells: M85049, MS27291
- Shield terminations at Positronic D-Sub Shielded Metal Hoods: D( )000GE0
- Shield terminations at Honeywell Taylor Backshells
- LAN, ASCB, and AFCS CAN bus sheild terminations at MAU backshells
- ASCB shield terminations at FWD maintenance panel connector backshells (Post Mod 6/2303)
- ASCB CAN bus shield terminations at servo connector backshells (S.O.O. 6221)

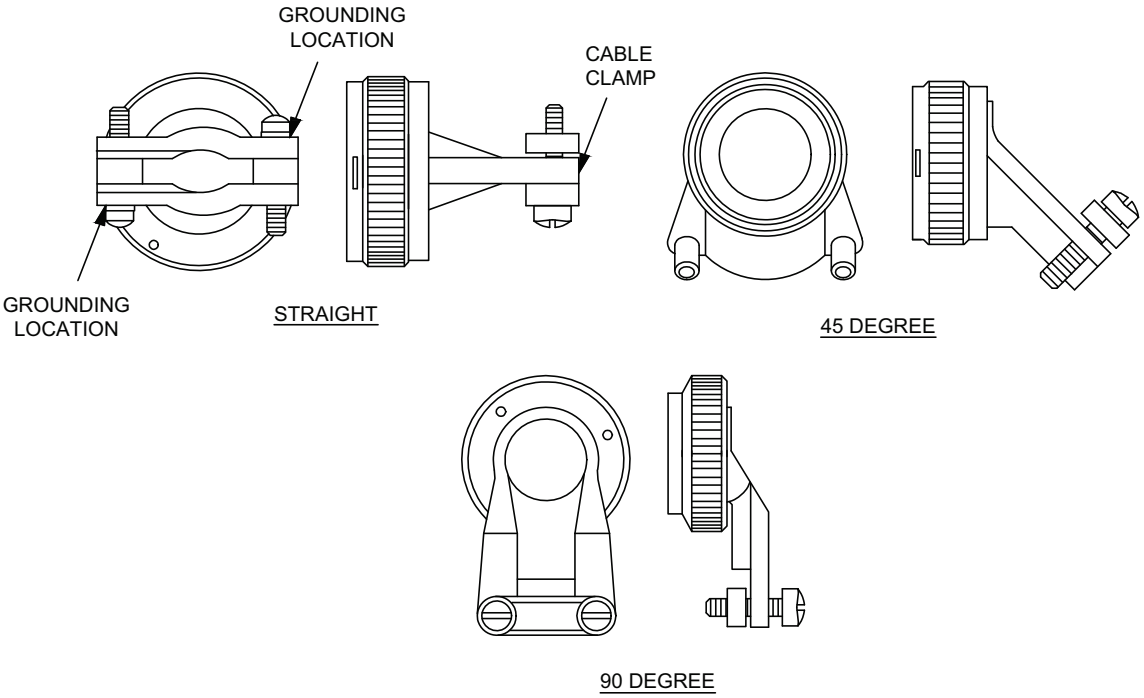


M85049 Strain Relief Backshells
Figure 2

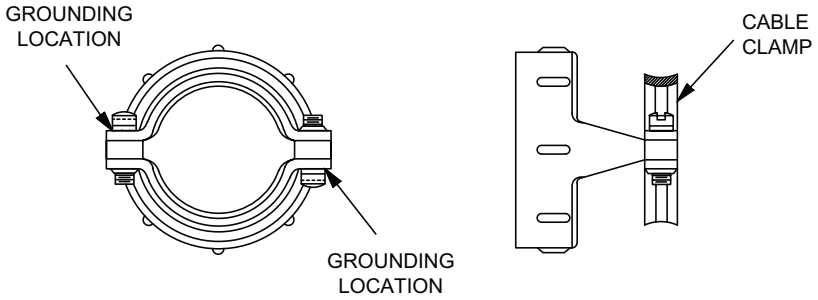

MS27291 Strain Relief Backshell
Figure 3

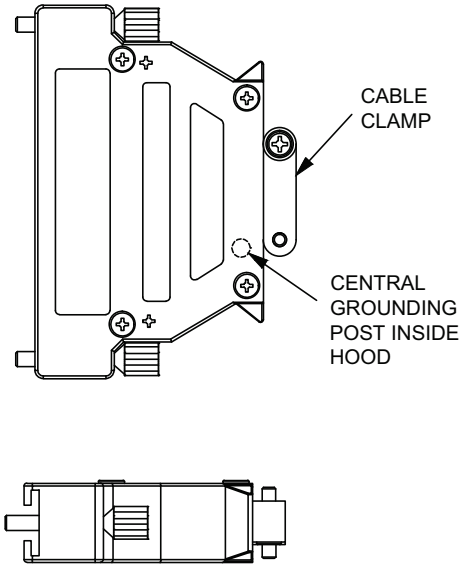

D( )000GE0 D-Sub Shielded Metal Hood
Figure 4

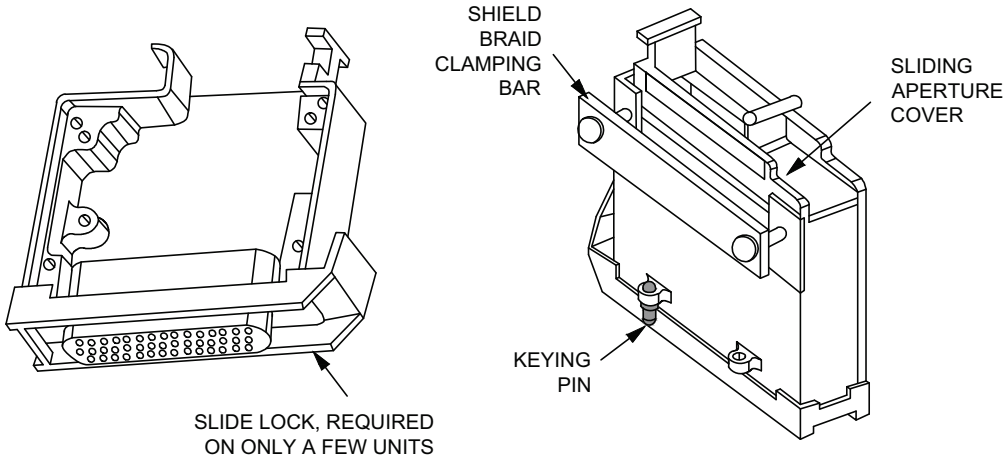

Taylor Backshell
Figure 5

2. Materials and Equipment

A. Materials

1) Terminal lugs, M7928/7 (unisulated) or MS25036 (insulated)

2) Standard solder sleeves, M83519/2-( ) or M83519/1-( )

3) High temperature solder sleeves, Raychem p/n SO96-( )-55-22-90 or SO96-( )-00

4) 20 AWG and 22 AWG general use wire (Refer to the General Information chapter for approved wire and cable specifications)

5) Splice, M81824/1-2

6) Tie wrap or lace, commercially available

7) Solder sleeve, Raychem p/n SO63-4-9030

8) 3/16 inch ID white heat shrink tubing, commercially available

9) Overbraid sleeving, Raychem p/n Ray90-10

10) Band clamp, Band-it p/n AS2219

11) Guideline tape, Freudenberg-NOK Inc. p/n 52672

B. Equipment

1) Cable and wire strippers, commercially available

2) Wire cutters, commercially available

3) Terminal lug crimp tool, commercially available

4) Splice crimp tool, commercially available

5) Heat gun, commercially available

6) Band clamp hand tool, Band-it p/n A91079

7) Milliohm meter, BCD M1 or equivalent

3. Procedures

CAUTION **MOD 6/2303 INTRODUCES REVISED PROCEDURES FOR TERMINATING THE LAN AND ASCB SHEILDS. FOR AIRCRAFT WITH MOD 6/2303, THE POST MOD 6/2303 PROCEDURES MUST BE FOLLOWED TO ENSURE COMPLIANCE WITH HIRF AND LIGHTNING PROTECTION REQUIREMENTS.**

A. Terminating Shields at Strain Relief Backshells

1) For each shielded cable, strip the outer jacket back to expose the braided shield. Determine the initial length of outer jacket to strip based on Figure 6.

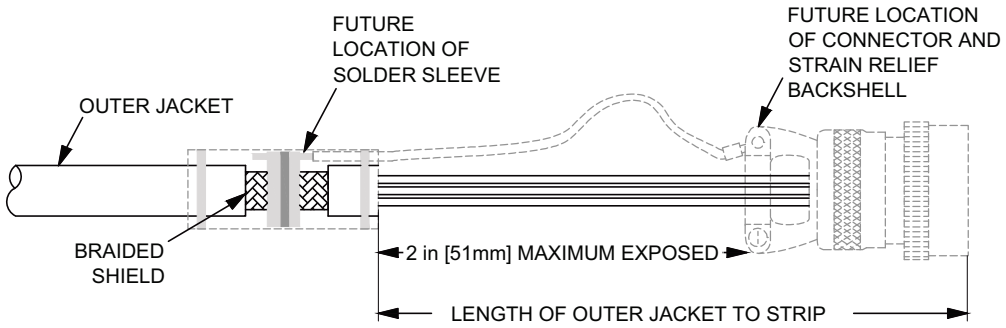


Figure 6

2) Install solder sleeves as shown in Figure 7 (Refer to Table 1 — Solder Sleeve Sizing). Make sure the following conditions are met:

Note Wiring diagrams do not typically show solder sleeve jumper and drain wire connections. When connections are shown, follow the conditions specified on the wiring diagram.

a) Shield-to-Backshell drain wires may exit the front or back of the solder sleeve.

b) Shield-to-Backshell drain wires are limited to a maximum length of 4 inches (102 mm).

c) Shield-to-Shield jumper wires shall exit the back of the solder sleeve.

d) Shield-to-Shield jumper wires are limited to a maximum length of 2 inches (51 mm).

e) A Shield-to-Backshell drain wire can provide a ground for a maximum of two shielded cables (do not use more than one jumper wire per one drain wire).

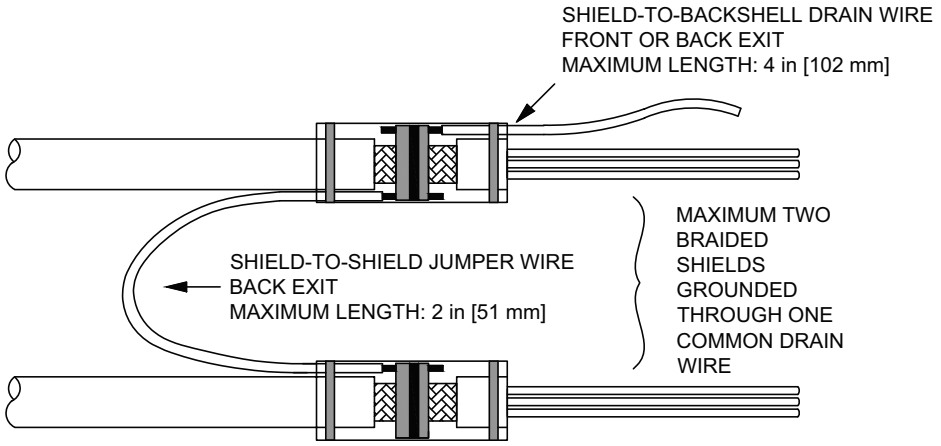


Figure 7

Table 1 Solder Sleeve Sizing

CABLE PART NUMBER	SOLDER SLEEVE WITH PRE-INSTALLED JUMPER/DRAIN WIRE	SOLDER SLEEVE WITHOUT PRE-INSTALLED JUMPER/DRAIN WIRE
AS5419A18WKKXSN06	Raychem SO96-3-00 (HIGH TEMPERATURE)	Raychem SO96-3-55-22-90 (HIGH TEMPERATURE)
AS5419A20WKKXSN06	Raychem SO96-3-00 (HIGH TEMPERATURE)	Raychem SO96-3-55-22-90 (HIGH TEMPERATURE)
M27500-18JF2N06	Raychem SO96-4-00 (HIGH TEMPERATURE)	Raychem SO96-4-55-22-90 (HIGH TEMPERATURE)
M27500-20JF2N06	Raychem SO96-3-00 (HIGH TEMPERATURE)	Raychem SO96-3-55-22-90 (HIGH TEMPERATURE)
M27500-20SD1T23	M83519/2-7	M83519/1-2
M27500-20SD2T23	M83519/2-8	M83519/1-3
M27500-20SD3T23	M83519/2-8	M83519/1-3
M27500-20SD3V14	M83519/2-10	M83519/1-5
M27500-22SD1T23	M83519/2-7	M83519/1-2
M27500-22SD2T23	M83519/2-8	M83519/1-3
M27500-22SD3T23	M83519/2-8	M83519/1-3
M27500-24SD1T23	M83519/2-7	M83519/1-2
M27500-24SD2T23	M83519/2-8	M83519/1-3
M27500-24SD3T23	M83519/2-8	M83519/1-3

3) Unless indicated otherwise, terminate drain wires with either MS25036 insulated lugs or M7928/7 non-insulated lugs. Provided that the terminal lug is capable of accommodating the combined circular mil area of the jumper wires, up to four jumper wires may be terminated in a single terminal lug. During the crimping operation, treat multiple jumpers which terminate in a signal lug as if they were a single wire. Refer to Table 2 — Terminal Lug Configurations for Multiple Wires for crimping of multiple wires into a signal terminal lug.

4) Use as few terminal lugs as possible and distribute the wires evenly among the lugs. Additional lugs shall be used to:

   - Avoid the use of filler wire
   - Ensure an even number of lugs are used to allow for balanced distribution between the left and right sides of strain relief backshell clamps

Table 2 Terminal Lug Configurations for Multiple Wires


TERMINAL LUG TYPE	WIRE TYPE	TERMINAL LUG SIZE (AWG)	WIRE SIZE (AWG)	FILLER WIRE
M7928/7 NON-INSULATED LUGS OR MS25036 INSULATED LUGS	M22759/32 OR M22759/34 OR M22759/41	22-18	1 x 24	DOUBLE BACK ONE LEAD (Note 3)
			2 x 24	NONE
			3 x 24	NONE
			2 x 22	NONE
		16-14	3 x 22	DOUBLE BACK ONE LEAD (Note 3)
			4 x 22	NONE
			2 x 20	DOUBLE BACK ONE LEAD (Note 3)
			3 x 20	NONE
			2 x 18	NONE
	M25038/3	22-18	2 x 22	NONE
		16-14	3 x 22	DOUBLE BACK ONE LEAD (Note 3)
			4 x 22	NONE

Note

1 SO63 (M83519/2) solder sleeves with preinstalled leads are supplied with M22759/32 wire type.

2 SO96 solder sleeves with preinstalled leads are supplied with M22759/41 wire type.

3 Prepare wire by removing twice the standard length of insulation and folding the lead back onto itself. Avoid excessive disturbance of the lay of the wire strands when folding the lead.

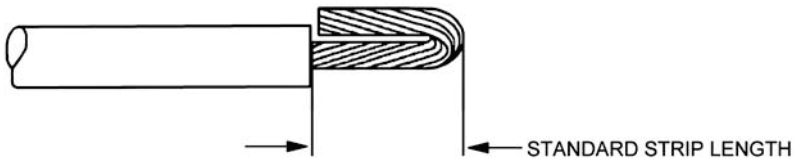

5) Fasten the terminal lugs to the strain relief clamp as shown in Figure 8. Make sure the following conditions are met:

   a) Distribute the terminals evenly between the left and right side of the strain relief clamp to ensure that the clamp is balanced.

   b) Ensure the strain relief clamp has metal to metal contact between the screws, clamps, terminal lugs, and clamp mounting bracket at both screw locations.

   c) If more than four terminal lugs (sixteen jumper wires) are being terminated, stack two terminals back to back as shown in Figure 9.

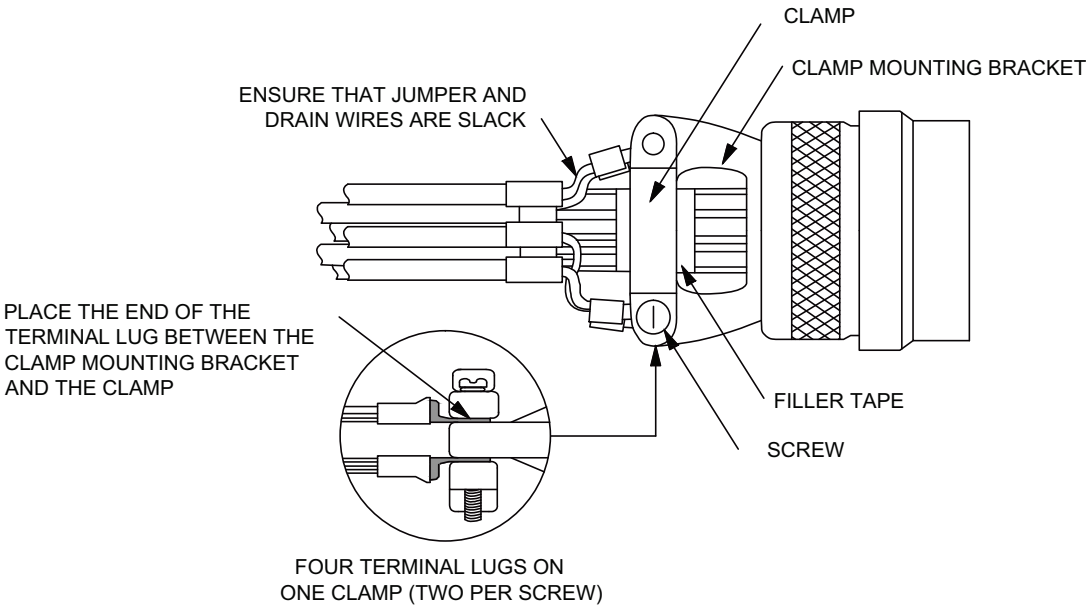


Figure 8

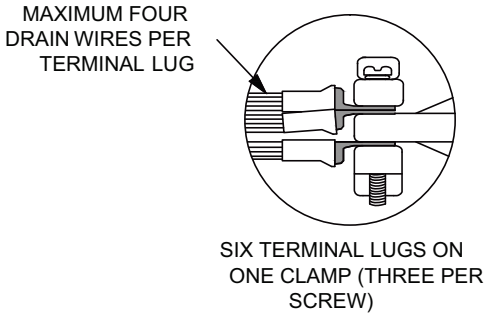


Figure 9

   d) Ensure that the backshell is secured and electrically bonded to the connector according to 20-30-10, Securing connector Backshells.

B. Terminating Shields at D( )000GE0 D-Sub Shielded Metal Hoods

1) For each shielded cable, strip the outer jacket back to expose the braided shield. Make sure the following conditions are met:

a) Unshielded wires are limited to a maximum length of 4 inches (102 mm).

b) Exposed unshielded wires are limited to a maximum length of 2 inches (51 mm).

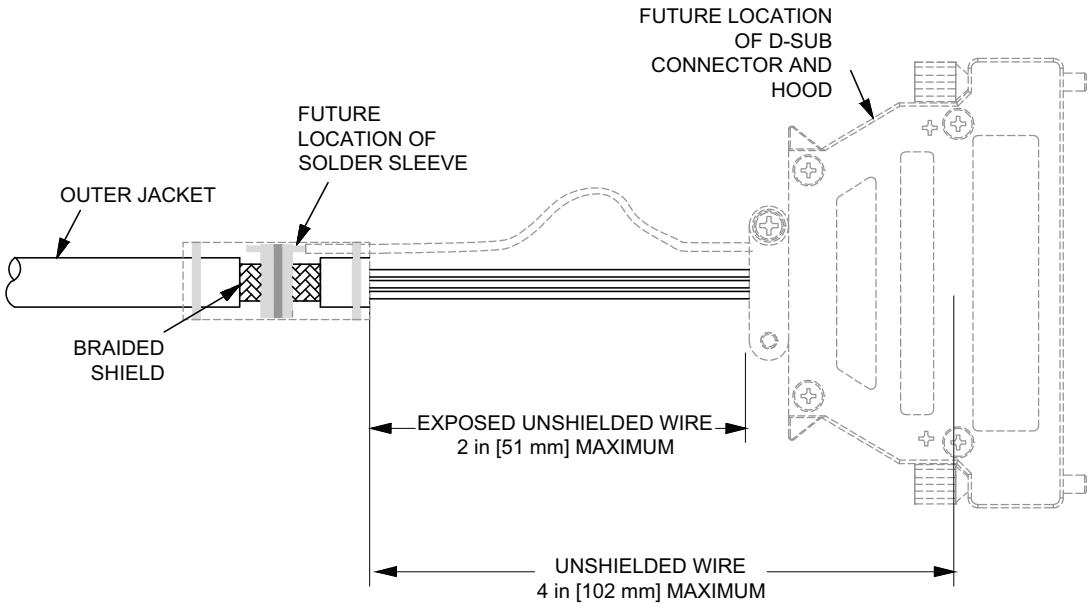


Figure 10

2) Install solder sleeves as shown in Figure 11 (Refer to Table 1 — Solder Sleeve Sizing). Make sure the following conditions are met:

Note Wiring diagrams do not typically show solder sleeve jumper and drain wire connections. When connections are shown, follow the conditions specified on the wiring diagram.

Note Solder sleeves may be staggered to facilitate bending of the wire bundle.

a) Shield-to-Backshell drain wires may exit the front or back of the solder sleeve.

b) Shield-to-Backshell drain wires are limited to a maximum length of 3 inches (76 mm).

c) Shield-to-Shield jumper wires shall exit the back of the solder sleeve.

d) Shield-to-Shield jumper wires are limited to a maximum length of 2 inches (51 mm).

e) A Shield-to-Backshell drain wire can provide a ground for a maximum of two shielded cables (do not use more than one jumper wire per one drain wire).

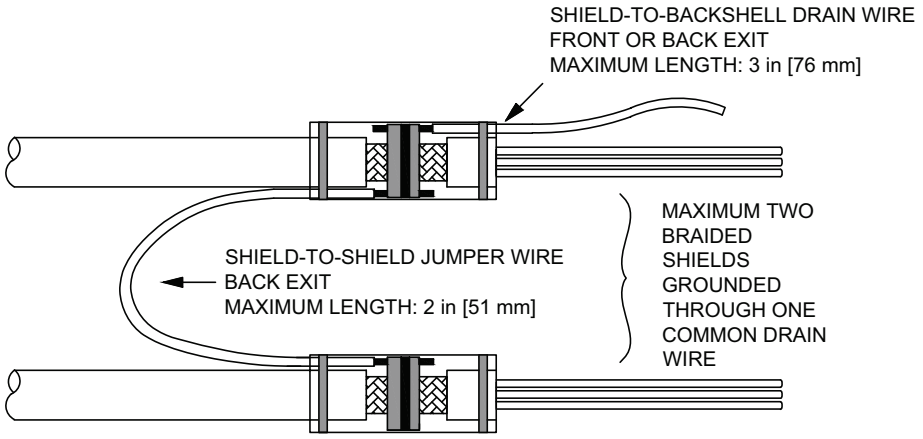


Figure 11

3) Install terminal lugs. Make sure the following conditions are met:

   a) When the hood clamp is NOT overfilled:

      1 Terminate each shield drain wire (one or two shields) directly into one or more lugs at the internal grounding point.

   b) When the hood clamp is overfilled and there is the possibility of damage to the bundle by the clamp:

      1 Splice up to three drain wires (six shields) into a single 20 AWG general use ground wire (splice p/n M81824/1-2 for three drain wires and one 20 AWG ground wire). Follow the length restrictions specified in Figure 12.

      2 Terminate the 20 AWG ground wire at the internal grounding point.

      3 Distribute the drain wires evenly among the splices.

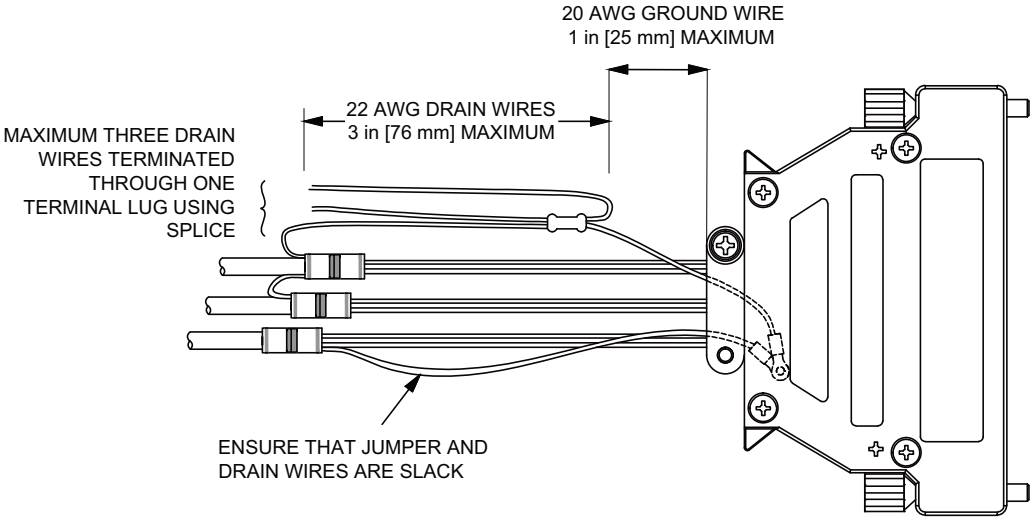


Figure 12

4) Ensure that the backshell is secured and electrically bonded according to requirements specified in 20-30-10, Securing Connector Backshells.

C. Terminating Shields at Taylor Backshells

1) For each shielded cable, strip the outer jacket back to expose the braided shield. Determine the initial length of outer jacket to strip based on Figure 13 (one twisted pair shield), Figure 14 (two twisted pair shields) and Table 3 — Taylor Backshell Outer Jacket Stripping Dimensions.

2) Comb out the shield braid, extracting the conductors from the braid.

3) For one twisted pair, fold the shield braid back upon itself and twist together to form a bundle with the proper diameter.

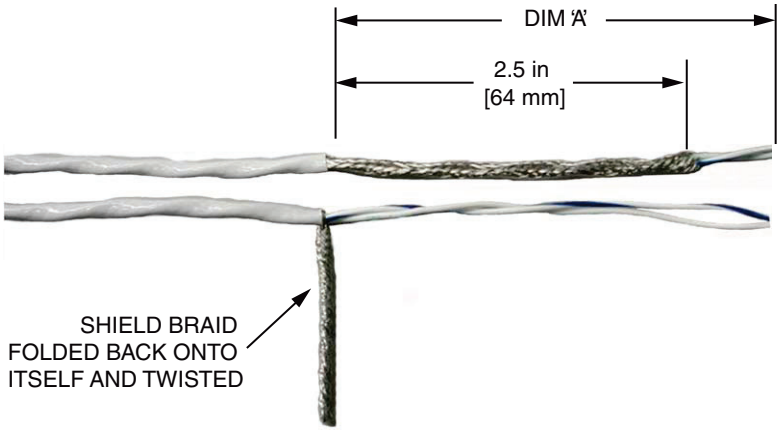


Figure 13

For two twisted pairs, twist the braids together to form a tight wire.

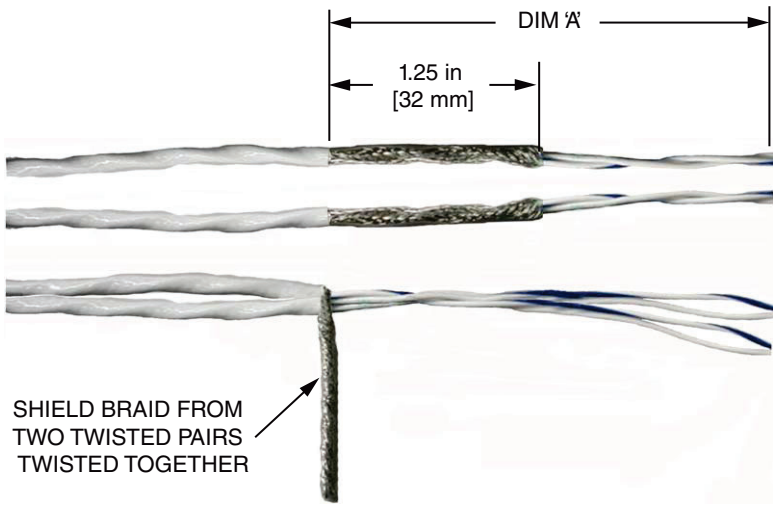


Figure 14