
PSM 1-64-2W

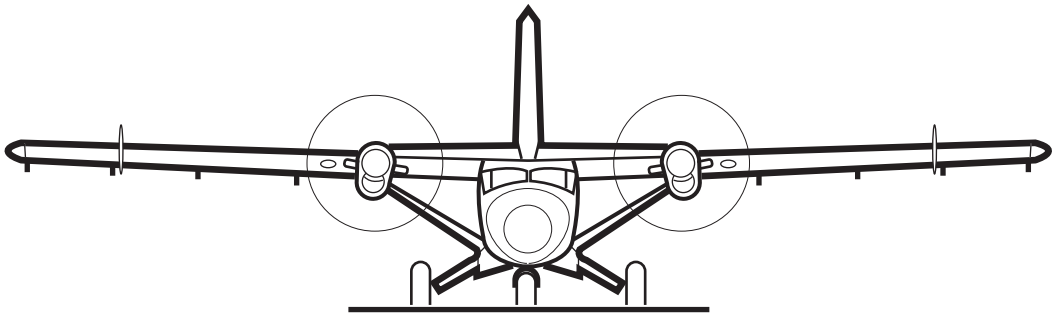

DHC-6 TWIN OTTER
Series 400

WIRING DIAGRAMS MANUAL
VOLUME 1

Copyright © 2006, 2010 by Viking Air Limited.
All rights reserved. No part of this work
may be reproduced or copied in any form
or by any means without written permission
from Viking Air Limited.

Revision 3 - Nov. 30/18

The information, technical data and designs disclosed in this document (the "Information") are either the exclusive property of Viking Air Limited or are subject to proprietary rights of others. The Information is not to be used for design or manufacture or disclosed to others without express prior written consent of Viking Air Limited. The holder of this document, by its retention and use, agrees to hold the information in confidence. These restrictions do not apply to persons having proprietary rights in the Information, to the extent of those rights.

January 31, 2006

Viking Air Limited
7757 8th St NE
Calgary, AB
Canada T2E 8A2

Telephone: (587) 430-0572
Fax: (403) 295-8888
USA & Canada Toll Free:
1-(800) 663-8444

Email: csps-tp@vikingair.com

February 1st, 2021

To: Distribution

Subject: PSM 1-64-2W, DHC-6 Series 400 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TRs) EL-26 and 28-2 – dated February 1, 2021

1 Insert the attached Temporary Revisions (TRs) EL-26 and 28-2 into PSM 1-64-2W, as directed in the placement instructions on the cover page of each TR.

2 Update the Temporary Revisions Index in the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
7757 8th St NE
Calgary, AB
Canada T2E 8A2

Telephone: (587) 430-0572
Fax: (403) 295-8888
USA & Canada Toll Free:
1-(800) 663-8444

Email: csps-tp@vikingair.com

October 27th, 2020

To: Distribution

Subject: PSM 1-64-2W, DHC-6 Series 400 – Wiring Diagrams Manual

Incorporate Temporary Revision (TR) 20-8 – dated October 27, 2020

1 Insert the attached Temporary Revision (TR) 20-8 into PSM 1-64-2W, as directed in the placement instructions on the TR cover page.

2 Update the Temporary Revisions Index in the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC
Canada V8L 5V5

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

November 30th, 2018

To: Distribution

Subject: PSM 1-64-2W, DHC-6 Twin Otter – Wiring Diagrams Manual

Incorporate Revision 3, dated November 30, 2018.

1 This package contains Revision 3 of PSM1-64-2W, DHC-6 Twin Otter, Series 400 – Wiring Diagrams Manual.

2 Using the List of Effective Pages for each chapter, incorporate the revised pages into the manual, dated November 30, 2018. Remove and destroy superseded pages.

3 Please note that the following Temporary Revisions (TRs) have been incorporated into this revision:

General Information	–	TRs 4 & TR 7
Equipment List	–	TRELs 7, 8, 10, 13, 14 & 16 to 25
Chapter 23	–	TRs 23-3 & 23-4
Chapter 24	–	TRs 24-6 to 24-9
Chapter 31	–	TRs 31-10 to 31-15
Chapter 33	–	TRs 33-2 to 33-6

Chapter 34	–	TRs 34-7 to 34-13
Chapter 52	–	TRs 52-1 & 52-2

4 Remove and destroy the incorporated TRs and update the Temporary Revision Index at the front of the manual.

5 Record the insertion of Revision 3 into the Record of Revisions at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC
Canada V8L 5V5

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

December 7th, 2016

To: Distribution

Subject: PSM 1-64-2W, DHC-6 Twin Otter – Wiring Diagrams Manual

Incorporate Revision 2, dated December 7, 2016.

1 This package contains Revision 2 of PSM1-64-2W, DHC-6 Twin Otter, Series 400 – Wiring Diagrams Manual.

2 Please note that the following Temporary Revisions (TRs) have been incorporated into this revision:

General Information	–	TR 1
Equipment List	–	TRELs 5 & 6
Chapter 20	–	TR 20-2 to 20-7
Chapter 22	–	TR 22-1 to 22-6
Chapter 23	–	TR 23-1 & 23-2
Chapter 24	–	TR 24-2 to 24-4
Chapter 25	–	TR 25-2

Chapter 28	–	TR 28-1
Chapter 31	–	TR 31-1 to 31-9
Chapter 33	–	TR 33-1
Chapter 34	–	TR 34-2 to 34-6
Chapter 79	–	TR 79-1

Note: Please ensure all of the listed TRs are removed and destroyed when incorporating Revision 2.

Also included in this revision are the incorporation of some technical changes (highlighted by change bars) that have been developed since the Rev 1 of the Series 400 WDM.

3 Update the Temporary Revisions Index.

4 Record the insertion of Revision 2 into the Record of Revisions at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC
Canada V8L 5V5

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

September 30th, 2014

To: Distribution

Subject: PSM 1-64-2W, DHC-6 Twin Otter – Wiring Diagrams Manual

Incorporate Revision 1, dated September 30, 2014.

1 This package contains Revision 1 of PSM1-64-2W, DHC-6 Twin Otter, Series 400 – Wiring Diagrams Manual.

2 Please note that Revision 1 is a complete rewrite of PSM 1-64-2W Wiring Diagrams Manual (WDM).

3 Please note that the following Temporary Revisions have been incorporated into this revision:

Equipment List	–	TRELs 1, 2, 3 & 4
Chapter 20	–	TR 20-1
Chapter 24	–	TR 24-1
Chapter 25	–	25-1
Chapter 32	–	32-1
Chapter 34	–	34-1

Also included in this revision are the incorporation of new S.O.O.s, MODs and multiple design changes (highlighted by change bars) that have been developed since the Initial Release of the Series 400 WDM.

4 Update the Temporary Revisions Index.

5 Record the insertion of Revision 1 into the Record of Revisions at the front of the manual (provided).

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

PSM 1-64-2W

DHC-6 WIRING DIAGRAMS MANUAL – SERIES 400

RECORD OF REVISIONS

Retain this record in the front of the manual. On receipt of revisions, insert revised pages in the manual and enter date inserted and initials against the appropriate Revision Number and Date.

Rev. No.	Revision Date	Insertion Date	By	Rev. No.	Revision Date	Insertion Date	By
1	9/30/2014	11/12/2014	ATP/VP				
2	DEC 7, 2016	DEC 12, 2016	ATP/RLL				
3	NOV 30, 2018	DEC 10, 2018	ATP/LC				

RECORD OF REVISIONS

RECORD OF REVISIONS (CON'T)

Rev. No.	Revision Date	Insertion Date	By	Rev. No.	Revision Date	Insertion Date	By

RECORD OF REVISIONS

PSM 1-64-2W

DHC-6 SERIES 400 WIRING DIAGRAMS MANUAL

TEMPORARY REVISION INDEX

Retain this index in the front of the manual. When Temporary Revisions are issued or cancelled, enter the relevant information in the columns below.

T.R. No.	Date Inserted	Date Removed	Subject Page No.	T.R. No.	Date Inserted	Date Removed	Subject Page No.
20-1	06-DEC-10	11/12/2014	20-10-30 before pg.1	TR-1	FEB 3, 2016	DEC 12, 2016	General Information after page 12
34-1	6/15/2012	11/12/2014	34-23-00 before page 1	TREL-6	FEB 3, 2016	DEC 12, 2016	Equipment List before page 5
24-1	9/12/2012	11/12/2014	24-60-20 before page 1	20-2	FEB 3, 2016	DEC 12, 2016	20-10-10 before page 1
32-1	9/12/2012	11/12/2014	32-61-00	20-3	FEB 3, 2016	DEC 12, 2016	20-10-20 before page 1
TREL-1	9/12/2012	11/12/2014	Equipment List after page 14	20-4	FEB 3, 2016	DEC 12, 2016	20-10-30 before page 1
TREL-2	9/12/2012	11/12/2014	Equipment List after page 56	20-5	FEB 3, 2016	DEC 12, 2016	20-10-50
TREL-3	9/12/2012	11/12/2014	Equipment List after page 68	20-6	FEB 3, 2016	DEC 12, 2016	20-10-60
TREL-4	5/15/2013	11/12/2014	Equipment List facing page 55	20-7	FEB 3, 2016	DEC 12, 2016	20-20-10 before page 1
25-1	5/15/2013	11/12/2014	25-70-00	22-3	FEB 3, 2016	DEC 12, 2016	22-10-00 before page 1
22-1	12/15/2014	SEP 3, 2015	22-10-01	22-4	FEB 3, 2016	DEC 12, 2016	22-10-01
33-1	FEB 2, 2015	DEC 12, 2016	33-41-00 before page 1	22-5	FEB 3, 2016	DEC 12, 2016	22-10-02
22-2	SEP 3, 2015	FEB 3, 2016	22-10-01	22-6	FEB 3, 2016	DEC 12, 2016	22-10-10
23-1	SEP 3, 2015	FEB 3, 2016	23-53-00 before page 1	23-2	FEB 3, 2016	DEC 12, 2016	23-53-00 before page 1
24-2	SEP 3, 2015	DEC 12, 2016	24-30-00 before page 1	24-3	FEB 3, 2016	DEC 12, 2016	24-60-10 before page 1
TREL-5	OCT 6, 2015	FEB 3, 2016	Equipment List facing page 45	24-4	FEB 3, 2016	DEC 12, 2016	24-60-20 before page 1

TEMPORARY REVISION INDEX

PSM 1-64-2W

DHC-6 SERIES 400 WIRING DIAGRAMS MANUAL

TEMPORARY REVISION INDEX

T.R. No.	Date Inserted	Date Removed	Subject Page No.	T.R. No.	Date Inserted	Date Removed	Subject Page No.
31-1	FEB 3, 2016	DEC 12, 2016	31-31-00 before page 1	TR-2	FEB 21, 2017	MAY 9, 2017	General Information before page 7
31-2	FEB 3, 2016	DEC 12, 2016	31-43-10 before page 1	TREL-7	FEB 21, 2017	DEC 10, 2018	Equipment List before page 5
31-3	FEB 3, 2016	DEC 12, 2016	31-43-20 before page 1	TREL-8	FEB 21, 2017	DEC 10, 2018	Equipment List after page 18
31-4	FEB 3, 2016	DEC 12, 2016	31-43-30 before page 1	TREL-9	FEB 21, 2017	JUN 18, 2018	Equipment List after page 58
31-5	FEB 3, 2016	DEC 12, 2016	31-43-40 before page 1	TREL-10	FEB 21, 2017	DEC 10, 2018	Equipment List facing page 69
31-6	FEB 3, 2016	DEC 12, 2016	31-43-50 before page 1	TREL-11	FEB 21, 2017	MAY 9, 2017	Equipment List facing page 77
31-7	FEB 3, 2016	DEC 12, 2016	31-44-40 before page 1	TREL-12	FEB 21, 2017	MAY 9, 2017	Equipment List after page 88
31-8	FEB 3, 2016	DEC 12, 2016	31-44-80 before page 1	24-5	FEB 21, 2017	JUN 18, 2018	24-30-00 before page 1
34-2	FEB 3, 2016	DEC 12, 2016	34-41-00 before page 1	24-6	FEB 21, 2017	DEC 10, 2018	24-60-20 before page 1
34-3	FEB 3, 2016	DEC 12, 2016	34-44-00 before page 1	24-7	FEB 21, 2017	DEC 10, 2018	24-60-21 after 24-60-20
34-4	FEB 3, 2016	DEC 12, 2016	34-53-00 before page 1	31-10	FEB 21, 2017	DEC 10, 2018	31-43-30 before page 1
79-1	FEB 3, 2016	DEC 12, 2016	79-32-00 before page 1	31-11	FEB 21, 2017	DEC 10, 2018	31-44-50 before page 1
28-1	MAR 10, 2016	DEC 12, 2016	28-20-00 before page 1	TR-3	MAY 9, 2017	JUN 18, 2018	General Information before page 7
25-2	MAR 31,2016	DEC 12, 2016	25-60-00 before pg 1	TREL-13	MAY 9, 2017	DEC 10, 2018	Equipment List after page 14
34-5	MAR 31,2016	DEC 12, 2016	34-22-00 before pg 1	TREL-14	MAY 9, 2017	DEC 10, 2018	Equipment List facing page 77
34-6	MAR 31,2016	DEC 12, 2016	34-51-00 before pg 1	TREL-15	MAY 9, 2017	DEC 19, 2017	Equipment List after page 88
31-9	MAY 24, 2016	DEC 12, 2016	31-31-00 before page 1	TR21-1	MAY 9, 2017	DEC 10, 2018	21-56-00 after 21-50-00

TEMPORARY REVISION INDEX

PSM 1-64-2W

DHC-6 SERIES 400 WIRING DIAGRAMS MANUAL

TEMPORARY REVISION INDEX

T.R. No.	Date Inserted	Date Removed	Subject Page No.	T.R. No.	Date Inserted	Date Removed	Subject Page No.
TR-4	NOV 13, 2017	DEC 10, 2018	General Info after page 14	34-12	NOV 13, 2017	DEC 10, 2018	34-54-00 before page 1
TREL-16	NOV 13, 2017	DEC 10, 2018	Equipment List after page 16	34-13	NOV 13, 2017	DEC 10, 2018	34-56-00 before page 1
TREL-17	NOV 13, 2017	DEC 10, 2018	Equipment List after page 28	33-5	DEC 14, 2017	DEC 10, 2018	33-45-00 before page 1
TREL-18	NOV 13, 2017	DEC 10, 2018	Equipment List after page 46	TR-5	DEC 19, 2017	JUN 18, 2018	General Info after page 8
TREL-19	NOV 13, 2017	DEC 10, 2018	Equipment List facing page 57	TR-6	DEC 19, 2017	JUN 18, 2018	General Info after page 12
TREL-20	NOV 13, 2017	DEC 10, 2018	Equipment List facing page 71	TREL-22	DEC 19, 2017	DEC 10, 2018	Equipment List after page 72
TREL-21	NOV 13, 2017	DEC 10, 2018	Equipment List after page 74	TREL-23	DEC 19, 2017	DEC 10, 2018	Equipment List after page 88
23-3	NOV 13, 2017	DEC 10, 2018	23-53-00 before page 1	33-3	DEC 19, 2017	DEC 10, 2018	33-30-00 before page 1
23-4	NOV 13, 2017	DEC 10, 2018	23-54-00 before page 1	33-4	DEC 19, 2017	DEC 10, 2018	33-30-01
31-12	NOV 13, 2017	DEC 10, 2018	31-31-00 before page 1	52-1	DEC 19, 2017	DEC 10, 2018	52-70-00 before page 1
31-13	NOV 13, 2017	DEC 10, 2018	31-32-00 before page 1	52-2	DEC 19, 2017	DEC 10, 2018	52-70-01
33-2	NOV 13, 2017	DEC 10, 2018	33-41-00 before page 1	31-14	MAR 5, 2017	DEC 10, 2018	31-43-20 before page 1
34-7	NOV 13, 2017	DEC 10, 2018	34-41-00 before page 1	31-15	MAR 5, 2017	DEC 10, 2018	31-60-00
34-8	NOV 13, 2017	DEC 10, 2018	34-43-00 before page 1	33-6	APR 6, 2018	DEC 10, 2018	33-20-00 before page 1
34-9	NOV 13, 2017	DEC 10, 2018	34-44-00 before page 1	TREL-24	APR 17, 2018	DEC 10, 2018	Equipment List before page 31
34-10	NOV 13, 2017	DEC 10, 2018	34-51-00 before page 1	TR-7	JUN 18, 2018	DEC 10, 2018	General Info before page 7
34-11	NOV 13, 2017	DEC 10, 2018	34-53-00 before page 1	TREL-25	JUN 18, 2018	DEC 10, 2018	Equipment List after page 58

TEMPORARY REVISION INDEX

PSM 1-64-2W

DHC-6 SERIES 400 WIRING DIAGRAMS MANUAL

TEMPORARY REVISION INDEX

T.R. No.	Date Inserted	Date Removed	Subject Page No.	T.R. No.	Date Inserted	Date Removed	Subject Page No.
24-8	JUN 18, 2018	DEC 10, 2018	24-30-00 before page 1				
24-9	JUN 18, 2018	DEC 10, 2018	24-30-01				
20-8	OCT 28, 2020		20-10-60 after page 6				
TREL-26	FEB 3, 2021		Equipment List after page 92				
28-2	FEB 3, 2021		28-20-00 before page 1				

TEMPORARY REVISION INDEX

INTRODUCTION

This Page Intentionally Left Blank

INTRODUCTION

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
INTRODUCTION	1	Sep. 30/14		6	Blank Page
	2	Blank Page		7	Sep. 30/14
	* 3	Nov. 30/18		8	Sep. 30/14
	* 4	Blank Page		* 9	Nov. 30/18
	5	Sep. 30/14		* 10	Blank Page

This Page Intentionally Left Blank

INTRODUCTION

TABLE OF CONTENTS

SUBJECT PAGE

1. General 7
2. Using the Manual 7
    A. Chapterization 7
    B. Chapter Breakdown 7
    C. Modified Systems 7
    D. List of Effective Pages 8
    E. General Information Chapter 8
    F. Equipment List 8
3. Revisions 9
    A. Normal Revisions 9
    B. Temporary Revisions 9

This Page Intentionally Left Blank

Introduction

1. General

This manual conforms to the general requirements of ATA Specification No. 100. The manual is broken into two volumes and consists of the following:

- Introduction
- General Information
- Standard Airframe Practices (Chapter 20)
- Interconnecting Wiring Diagrams

Wiring diagrams are provided for all electrical and avionic systems in the aircraft including Standard Order Option (S.O.O.) systems.

Note At initial certification of the Viking DHC-6 Series 400, the public commercial operations bundle (S.O.O. 6210) which includes the Instrument Flight Rules (IFR) operations bundle (S.O.O. 6209) is the only certified configuration. This manual makes no reference to S.O.O. 6210 or S.O.O. 6209 and currently includes all commercial operations and IFR operations wiring under the base build configuration.

All base build electrical wiring diagrams at initial release of this manual are effective post modification (mod) 6/2028, starting at the first Series 400 Twin Otter (serial number 845).

2. Using the Manual

A. Chapterization

The wiring diagrams are chapterized in accordance with ATA Specification No. 100. The yellow chapter divider cards indicate the location of individual chapters in the manual.

B. Chapter Breakdown

Each chapter is divided into sections and where necessary, each section into subjects. These three elements (Chapter – Section – Subject) expressed in numbers are located at the bottom corner of each page. Figure 1 illustrates how a three-element number is typically assigned to a system:

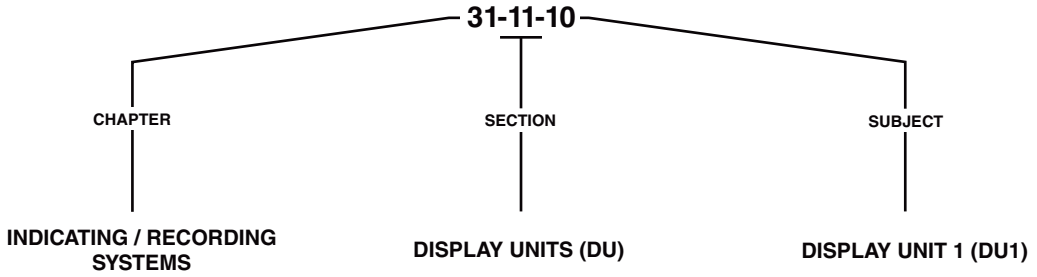


Figure 1

C. Modified Systems

When a modification to wiring calls for a substantial change, a new wiring diagram and subject number will be created as shown in the following example:

31-11-10 Pilot Primary Flight Display (DU 1) (Pre Mod 6/XXXX)

31-11-11 Pilot Primary Flight Display (DU 1) (Post Mod 6/XXXX)

Modifications with minor changes in wiring are shown and identified with the mod number on the original wiring diagram.

Note "Post Mod 6/2028" applies to all base build wiring diagrams at initial release of this manual and is therefore not referenced in the title of individual wiring diagrams.

Note When one wiring diagram references another, the reference will include the chapter, section, and sometimes only the first digit of the subject. When the second digit is not referenced, the user must determine the entire subject number based on what modifications are applicable to their aircraft.

D. List of Effective Pages

A List of Effective Pages is located at the front of each chapter, immediately following the chapter's title page. The list allows the user to determine that a chapter is complete and contains the latest issue of all pages. On each list, the date against each page number should correspond with the date on the relevant page.

E. General Information Chapter

Following the Introduction, the General Information chapter provides the user with general reference data that is related to all systems in this manual.

F. Equipment List

Following the General Information chapter, the Equipment List provides part numbers for electrical equipment in the aircraft. All listed equipment is assigned a unique alpha-numeric designator. The following example illustrates how an alpha-numeric designator is assigned to a part:




Figure 2

1) Designator Class

The following designator classes are included in the equipment list:

DESIGNATOR CLASS	DESCRIPTION
A	Electrical Box\Panel Assembly
BT	Battery
CB	Circuit Breaker
CR	Diode
DS	Light
F	Fuse
G	Generator
GRD	Ground
J	Receptacle
K	Relay
P	Plug
PS	Power Supply
R	Resistor
S	Switch

DESIGNATOR CLASS	DESCRIPTION
SP	Splice
TB	Junction Module/Terminal Block
VR	Voltage Regulator

Note Equipment inside an electrical box\panel assembly will sometimes be prefixed with the box\panel assembly's designator as shown in the following example:

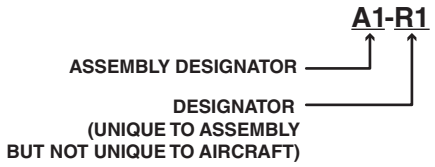


Figure 3

3. Revisions

A. Normal Revisions

Revisions to this manual will be made periodically. Active subscription holders will receive copies without request.

B. Temporary Revisions

Temporary Revisions will be issued at the earliest opportunity to notify the operator of important changes affecting the maintenance of electrical and avionic systems in the aircraft. These temporary revisions will be printed on yellow paper for instant identification when incorporated in the manual.

This Page Intentionally Left Blank

GENERAL INFORMATION

This Page Intentionally Left Blank

GENERAL INFORMATION

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE
GENERAL INFORMATION	1	Sep. 30/14
	2	Blank Page
	* 3	Nov. 30/18
	* 4	Blank Page
	* 5	Nov. 30/18
	* 6	Blank Page
	* 7	Nov. 30/18
	* 8	Nov. 30/18
	* 9	Nov. 30/18
	* 10	Nov. 30/18

REFERENCE	PAGE	DATE
	* 11	Nov. 30/18
	* 12	Nov. 30/18
	* 13	Nov. 30/18
	* 14	Nov. 30/18
	* 15	Nov. 30/18
	* 16	Nov. 30/18
	* 17	Nov. 30/18
	* 18	Nov. 30/18
	* 19	Nov. 30/18
	* 20	Blank Page

This Page Intentionally Left Blank

GENERAL INFORMATION

TABLE OF CONTENTS

SUBJECT PAGE

1. General 7
2. Wiring Diagram Index 7
3. Wire Identification Codes 11
   - A. Unit Number 11
   - B. Circuit Function 11
   - C. Wire Number 12
   - D. Wire Segment 13
   - E. Wire Size 13
   - F. Ground Identifier 13
   - G. Aluminum Wire Identifier 13
4. Cable and Wire Specifications 13

This Page Intentionally Left Blank

General Information

1. General

This chapter is designed to provide the user of this Wiring Diagram Manual with reference data and information that is related to all systems in this manual.

2. Wiring Diagram Index

21	**AIR CONDITIONING**
21-21-00	Forward Avionics Cooling Fans
21-22-00	DAU Cooling Fans
21-40-00	Bleed Air System
21-50-00	Fan, Cooling & Demisting (S.O.O. 6322)
21-56-00	Cabin Fans (S.O.O. 6378 & S.O.O. 6379)
21-60-00	Temperature Indication and Control System
22	**AUTO FLIGHT**
22-10-01	Automatic Flight Control System (AFCS) Electrical Provisions (S.O.O. 6324 & S.O.O. 6325)
22-10-02	Automatic Flight Control System (AFCS) (S.O.O. 6221)
22-10-10	Flight Director - Handwheel Switches (Post Mod 6/2303)
23	**COMMUNICATIONS**
23-11-00	HF Communication System (S.O.O. 6215)
23-13-00	VHF-FM Radio (S.O.O. 6296)
23-15-00	ECTM-FOQA & SAT COM (S.O.O. 6288 & S.O.O. 6298)
23-16-00	XM Satellite Weather System (S.O.O. 6211)
23-53-00	Audio Control Panels
23-54-00	Audio System Isolation Amplifier
24	**ELECTRICAL POWER**
24-30-00	DC Generation System without S.O.O. 6371
24-30-01	DC Generation System with S.O.O. 6371
24-60-10	DC Electrical Load Distribution - Main Circuit Breaker Panel
24-60-20	DC Electrical Load Distribution - Avionics Circuit Breaker Panel (Pre Mod 6/2315)
24-60-21	DC Electrical Load Distribution - Avionics Circuit Breaker Panel with Avionics Start Battery (Post Mod 6/2315)
25	**EQUIPMENT AND FURNISHINGS**
25-11-00	14V Power Converter
25-21-00	Stn 332 Cabin 28V DC Plug (S.O.O. 6283)
25-22-00	Left Cabin 14V DC Plugs (S.O.O. 6282)
25-22-01	Right Cabin 14V DC Plugs (S.O.O. 6281)

25-22-02	Stn 332 Cabin 14V DC Plugs (S.O.O. 6272)
25-60-00	Emergency Locator Transmitter (ELT)
25-70-00	Cold Weather Operations Kit (S.O.O. 6276 or S.O.O. 6287)
26	FIRE PROTECTION
26-10-00	Engine Fire Detection System
26-20-00	Engine Fire Extinguishing System
27	FLIGHT CONTROLS
27-10-00	Aileron and Aileron Trim Tab Indication and Control System
27-20-00	Rudder and Rudder Trim Tab Indication
27-30-00	Elevator and Elevator Trim Tab Indication
27-38-00	Stall Warning System
27-50-00	Flap Position Indication
28	FUEL
28-00-00	Wing Fuel Tank System (S.O.O. 6247)
28-20-00	Fuel Control System
28-20-10	Emergency Fuel Shutoff System
28-42-00	Fuel Quantity Indication Post Mod 6/2110 (Includes S.O.O. 6247)
28-44-00	Fuel Low Level Indication
28-47-00	Fuel Filter Bypass Indication
28-48-00	Fuel Crossfeed Valve Position Indication
28-49-00	Fuel Lever Indication
29	HYDRAULIC POWER
29-10-00	Hydraulic Oil Pump System
29-30-00	Hydraulic System and Brake Pressure Indication
30	ICE AND RAIN PROTECTION
30-10-00	Wing and Tail Deicing System (S.O.O. 6004, Post Mod 6/2083)
30-30-00	Pitot Heating System
30-40-00	Windshield Heating System (S.O.O. 6187, Post Mod 6/2045)
30-45-00	Windshield Wiper System
30-60-00	Propeller Deicing System (S.O.O. 6202 or S.O.O. 6237)
31	INDICATING/RECORDING SYSTEMS
31-11-10	Pilot Primary Flight Display (DU 1)
31-11-20	Upper Multifunction Display (DU 2)
31-11-30	Lower Multifunction Display (DU 3)
31-11-40	Copilot Primary Flight Display (DU 4)
31-13-00	Reversion Control Panel


31-14-00	APEX Control Panels
31-21-00	Instrument Panel Clock
31-31-00	Flight Data Recorder (FDR)
31-32-00	Cockpit Voice Recorder (CVR)
31-43-10	Modular Avionics Unit – Network Interface Controller (NIC)
31-43-20	Modular Avionics Unit – Advanced Graphics Module (AGM)
31-43-30	Modular Avionics Unit – Dual Custom Input/Output (CSIO)
31-43-40	Modular Avionics Unit – Actuator Input/Output Processor (AIOP)
31-43-50	Modular Avionics Unit – Dual Generic Input/Output (GIO)
31-43-60	Modular Avionics Unit – Power Supplies
31-44-10	Data Acquisition Unit I – Power
31-44-20	Data Acquisition Unit I – Configuration
31-44-30	Data Acquisition Unit I – ARINC 429 Bus
31-44-40	Data Acquisition Unit I – Aircraft System Inputs
31-44-50	Data Acquisition Unit II – Power
31-44-60	Data Acquisition Unit II – Configuration
31-44-70	Data Acquisition Unit II – ARINC 429 Bus
31-44-80	Data Acquisition Unit II – Aircraft System Inputs
31-51-00	Master Warning and Caution Indication and Control
32	LANDING GEAR
32-61-00	Ski Position Indication (S.O.O. 6001, Post Mod 6/2182)
33	LIGHTS
33-10-00	Flight Compartment Lights
33-10-10	Instrument Panel Lights
33-11-00	Caution Light Dimming Control Box
33-20-00	Passenger Compartment Lights (Includes S.O.O. 6205)
33-30-00	Cargo and Service Compartment Lights (without S.O.O. 6393)
33-30-01	Cargo and Service Compartment Lights (with S.O.O. 6393)
33-41-00	Landing Lights
33-42-00	Wing Inspection Lights
33-43-00	Taxi Lights
33-44-00	Beacon Lights
33-45-00	Wing and Tail Position and Strobe Lights
34	NAVIGATION
34-21-00	Flight Controller
34-22-00	Emergency Standby Instrument System (ESIS)

34-23-00	Air Data, Attitude, and Heading Reference System (ADAHRS)
34-41-00	Weather Radar System
34-42-00	Radar Altimeter
34-42-10	2nd Radar Altimeter (S.O.O. 6218)
34-43-10	Traffic Alert and Collision Avoidance System I (TCAS I)
34-43-20	Traffic Alert and Collision Avoidance System II (TCAS II) (S.O.O. 6219)
34-44-00	Enhanced Ground Proximity Warning System (EGPWS)
34-51-00	Multi-mode Digital Radio (MMDR) (Includes S.O.O. 6217)
34-53-00	Transponders
34-54-00	Distance Measuring Equipment (DME)
34-56-00	Global Navigation Satellite Sensor Unit (GNSSU)
36	PNEUMATIC
36-20-00	Pneumatic Low Pressure Indication
44	CABIN SYSTEMS
44-11-00	Cabin Passenger Address System
46	INFORMATION SYSTEMS
46-50-00	Float Mounted Depth Sounder (S.O.O. 6295)
52	DOORS
52-70-00	Doors Unlocked Warning System (without S.O.O. 6393)
52-70-01	Doors Unlocked Warning System (with S.O.O. 6393)
61	PROPELLERS
61-20-00	Propeller Overspeed Governor Test Circuit
61-22-00	Propeller Autofeather System
61-40-00	Propeller RPM Indication
71	POWER PLANT
71-60-00	Air Intake Deflector System
73	ENGINE FUEL AND CONTROL
73-21-00	Temperature Compensator Sense Tube Heating System
73-30-00	Fuel Flow Indication
74	IGNITION
74-00-00	Engine Ignition System
76	ENGINE CONTROLS
76-11-00	Power Lever Grip Indication
76-12-00	Throttle Position Indication
77	ENGINE INDICATING

77-10-00	Torque Pressure Indication
77-12-00	Gas Generator Tachometer Indication
77-20-00	Turbine Temperature Indication
79	**OIL**
79-32-00	Oil Pressure Indication
79-34-00	Oil Temperature Indication
80	**STARTING**
80-10-00	Engine Starting System

3. Wire Identification Codes

Circuit wiring is identified by an alpha-numeric code stamped at intervals throughout the length of each wire. The following example illustrates how an alpha-numeric code is assigned to a wire:

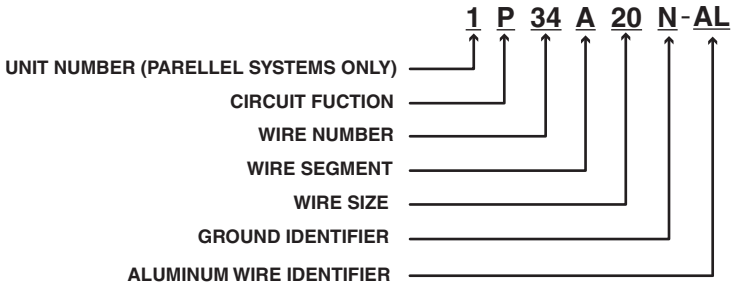

Note Wires 6 inches or shorter are not always stamped with a identification code.

A. Unit Number

The unit number is used to differentiate between parallel circuit wires. For dual systems unit number 1 indicates the left-hand side of the system and unit number 2 indicates the right-hand side of the system.

B. Circuit Function

The circuit function code helps to identify what system the wire belongs to. The following list defines the circuit function codes used:

CIRCUIT FUNCTION CODE	DESCRIPTION
C	Flight Control Circuits
D	Voltmeter and Ammeter Circuits
E	Engine and Fuel Circuits
F	Flight Instrument Circuits
H	Heating System Circuits
K	Propeller and Deflector Circuits
L	Lighting Circuits
M	Windshield Wiper/Washer and Doors Unlocked Warning Circuits

CIRCUIT FUNCTION CODE	DESCRIPTION
P	DC Power Supply, Starting and Ignition Circuits
Q	Pressure Circuits (Fuel and Oil)
W	Emergency Circuits
CVR	Cockpit Voice Recorder (CVR) Circuits
DAU	Data Acquisition Unit (DAU) Circuits
DS	Depth Sounder
ELT	Emergency Locator/Transmitter (ELT) Circuits
FAD	Air Data, Attitude and Heading Reference System (ADAHRS) Circuits
FDR	Flight Data Recorder (FDR) Circuits
FDU	Flight Display Unit Circuits
FSB	Emergency Standby Instrument System Circuits
GP	Enhanced Ground Proximity Warning System (EGPWS) Circuits
ION	IONode FDM
MAU	Modular Avionics Unit (MAU) Circuits
PC	Power Converter Circuits
PA	Radar Altimeter Circuits
RC	VHF Circuits
RGN	Global Navigation Satellite Sensor Unit (GNSSU) Circuits
RNC	Multi-Mode Digital Radio (MMDR) Circuits
RXP	Transponder Circuits
RZ	Audio Circuits
SCOM	Satellite Communication
TA	Traffic Alert and Collision Avoidance System (TCAS) Circuits
TFM	Technisonic VHF-FM Radio
VAN	Distance Measuring Equipment (DME) Circuits
WXR	Weather Radar Circuits
XM	XM Sattelite Weather Circuits

C. Wire Number

The wire number is used to differentiate between wires in a circuit. Wires of the same circuit with a common terminal connection have the same wire number.

D. Wire Segment

The segment letters are used to differentiate between conductor segments within a circuit. In general, segments start with the letter 'A' to identify the first segment at the signal or power source and continues in alphabetical sequence.

Note Letters 'I' and 'O' are not used for wire segment letters.

E. Wire Size

The wire size number is used to identify the size of the wire using the American Wire Gauge (AWG) system.

F. Ground Identifier

The ground identifier is used to identify wires that connect to a grounding point.

G. Aluminum Wire Identifier

The aluminum wire identifier is used to identify wires that are aluminum as opposed to copper.

4. Cable and Wire Specifications

Approved wire and cable specifications are listed in Table 1 — Wire and Cable Specifications. “General Use” wire shall be used in all areas unless specified otherwise.

- (*) Indicates American Wire Gauge (AWG)
- (**) Indicates number of conductors
- (***) Indicates insulation colour (white unless specified otherwise)

Table 1 Wire and Cable Specifications

WIRE/CABLE TYPE	SPECIFICATION	MANUFACTURER
Wire, (General Use)	M22759/34-(*)-(***)	
Wire, Thinwall	M22759/18-(*)-(***) M22759/32-(*)-(***) M22759/33-(*)-(***)	
Wire, 2 AWG or Larger (General Use including High Temperature Areas)	M22759/4-(*)-(***)	
Cable, Shielded (General Use)	M27500-(*)SD(**)T23	
Cable, Double Shielded	M27500-(*)SD(**)V14	
Wire, High Temperature	M25038/3-(*)-(***)	
Cable, Shielded, High Temperature	M27500-(*)JF(**)N06	
Cable, Coaxial	Refer to Table 3 — Coaxial Cable Requirements	
Cable, Coaxial, High Voltage	155-02988-0515 13542-L2	Honeywell Caton
Wire, Nickel Plated	M22759/90-(*)-(***)	
Cable, Thermocouple	AS5419A(*)WKKXSN06 SMLH18CH-AL19(2)N06 (18 AWG) SMLH20CH-AL19(2)N06 (20 AWG)	CarliseIT

Table 1 Wire and Cable Specifications (continued)

WIRE/CABLE TYPE	SPECIFICATION	MANUFACTURER
Cable, LAN Bus	22890/01139X-1(LD) L8620TX 632101 5022N5522-9	Tensolite PIC Wire & Cable ECS Tyco Elec./Raychem
Cable, ASCB and Magnetometer CAN Bus	24473/9N191X-2(LD) T12243 322402	Tensolite PIC Wire & Cable ECS
AFCS CAN Bus	322402	ECS
Cable, Picture Bus	D620224 422402 10595-24-9	PIC Wire & Cable ECS Tyco Elec./Raychem
Cable, Ethernet	NF24Q100	Tensolite
Cable, Quad Fibre Channel Bus	244483/02006X-4(LD) F20424	Tensolite PIC Wire & Cable
Pre-twisted Wire	M27500-(*)SD(**)U00 Wire may be substituted with manually twisted M22759/34 wire, refer to Table 2 — Required Number of Twists Per Foot.	
Wire, Aluminum	55PC6361-(*)-(***)	TE Connectivity

Note In order to ensure proper operation of each system, coaxial cable must be fabricated using the cables, connectors, and lengths specified in Table 3 — Coaxial Cable Requirements.

Table 2 Required Number of Twists Per Foot

Number of Wires	Twists Per Foot Required		
	22, 20 & 18 (AWG)	16 & 14 (AWG)	12 & 10 (AWG)
2	10 ± 2	7 ± 1	6 ± 1
3	9 ± 2	6 ± 1	5 ± 1
4	8 ± 2	5 ± 1	4 ± 1
5	7 ± 2	4 ± 1	3 ± 1
6	6 ± 2	3 ± 1	2 ± 1

Table 3 Coaxial Cable Requirements


CABLE IDENTIFICATION CODE	EFFECTIVITY	CABLE		CONNECTOR A			CONNECTOR B			ASSEMBLED LENGTH RESTRICTION (inches)	GENERAL RESTRICTIONS
		SPECIFICATION	MANUFACTURER	DESIGNATOR	PART NO.	MANUFACTURER	DESIGNATOR	PART NO.	MANUFACTURER		
COM 1	POST CAS 6630	TFLX205-100	EMTEQ	P291	TRA205-1	EMTEQ	P301	BMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		030-00101-0002 (Part of 050-03721-0000)	HONEYWELL		190113	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03721-0000	HONEYWELL		190113	PIC	-	
COM 2	POST CAS 6630	TFLX205-100	EMTEQ	P296	TRA205-1	EMTEQ	P302	BMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		030-00101-0002 (Part of 050-03721-0000)	HONEYWELL		190113	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03721-0000	HONEYWELL		190113	PIC	-	
DME 1	POST CAS 6630	TFLX205-100	EMTEQ	P341	BMS205-1	EMTEQ	P344	CMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		190112	PIC		190107	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-01766-0001	HONEYWELL		190107	PIC	-	
DME 2	POST CAS 6630 OR S.O.O. 6386	TFLX205-100	EMTEQ	P343	BMS205-1	EMTEQ	P345	CMR205-1	EMTEQ	-	- CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL - NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190112	PIC		190107	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-01766-0001	HONEYWELL		190107	PIC	-	
ELT	POST CAS 6630	TFLX205-100	EMTEQ	P380	BMS205-1	EMTEQ	P381	BMR205-1	EMTEQ	MAXIMUM 86	
		S44191	PIC		190112	PIC		190113	PIC		
	PRE CAS 6630	S44191	PIC		190112	PIC		190113	PIC	-	
G/S 1	POST CAS 6630	TFLX205-100	EMTEQ	P293	TRA205-1	EMTEQ	P309	CMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		030-00101-0002 (Part of 050-03721-0000)	HONEYWELL		190107	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03721-0000	HONEYWELL		190107	PIC	-	
G/S 2	POST CAS 6630	TFLX205-100	EMTEQ	P298	TRA205-1	EMTEQ	P308	CMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		030-00101-0002 (Part of 050-03721-0000)	HONEYWELL		190107	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03721-0000	HONEYWELL		190107	PIC	-	
GPS 1	POST CAS 6630	TFLX205-100	EMTEQ	P311	TMS205-1	EMTEQ	P314	TMR205-1	EMTEQ	MINIMUM 216 MAXIMUM 624	
		S44191	PIC		190108	PIC		190109	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03712-0000	HONEYWELL		Part of 050-03729-0000	HONEYWELL	-	
GPS 2	POST CAS 6630 OR S.O.O. 6380	TFLX205-100	EMTEQ	P313	TMS205-1	EMTEQ	P315	TMR205-1	EMTEQ	MINIMUM 216 MAXIMUM 624	- NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190108	PIC		190109	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03712-0000	HONEYWELL		Part of 050-03729-0000	HONEYWELL	-	
HF ANT	S.O.O. 6215	Honeywell Cable Assembly Part No. 155-02988-0515									
		Caton Cable Assembly Part No. 13542-L2									
HF EXTR - TX	S.O.O. 6215, POST CAS 6630	TFLX205-100	EMTEQ	P208	BMR205-1	EMTEQ	P214	BMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		190113	PIC		190113	PIC		
	S.O.O. 6215, PRE CAS 6630	S44193	PIC		Part of 050-03628-0000	HONEYWELL		190113	PIC	-	
								Part of 050-03629-0000	HONEYWELL		
HF TX - CPLR	S.O.O. 6215, POST CAS 6630	TFLX205-100	EMTEQ	P213	BMR205-1	EMTEQ	P210	BMR205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		190113	PIC		190113	PIC		
	S.O.O. 6215, PRE CAS 6630	S44193	PIC		190113	PIC		190113	PIC	-	
					Part of 050-03629-0000	HONEYWELL		Part of 050-03658-0000	HONEYWELL		
J1-TOP TCAS-YEL	POST CAS 6630 OR S.O.O. 6382	TFLX205-100	EMTEQ	P352	TMS205-1	EMTEQ	P360	TMR205-1	EMTEQ	MINIMUM 100 MAXIMUM 288	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES - THE FOUR UPPER TCAS I ANTENNA CABLES MUST BE WITHIN ± 1 INCHES OF EACH OTHER - NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190108	PIC		190109	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03361-0000	HONEYWELL		Part of 050-03362-0000	HONEYWELL	-	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES
J2-TOP TCAS-BLK	POST CAS 6630 OR S.O.O. 6382	TFLX205-100	EMTEQ	P353	TMS205-1	EMTEQ	P361	TMR205-1	EMTEQ	MINIMUM 100 MAXIMUM 288	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES - THE FOUR UPPER TCAS I ANTENNA CABLES MUST BE WITHIN ± 1 INCHES OF EACH OTHER - NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190108	PIC		190109	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03361-0000	HONEYWELL		Part of 050-03362-0000	HONEYWELL	-	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES
J3-TOP TCAS-BLU	POST CAS 6630 OR S.O.O. 6382	TFLX205-100	EMTEQ	P354	TMS205-1	EMTEQ	P362	TMR205-1	EMTEQ	MINIMUM 100 MAXIMUM 288	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES - THE FOUR UPPER TCAS I ANTENNA CABLES MUST BE WITHIN ± 1 INCHES OF EACH OTHER - NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190108	PIC		190109	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03361-0000	HONEYWELL		Part of 050-03362-0000	HONEYWELL	-	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES
J4-TOP TCAS-RED	POST CAS 6630 OR S.O.O. 6382	TFLX205-100	EMTEQ	P355	BMS205-1	EMTEQ	P363	TMR205-1	EMTEQ	MINIMUM 100 MAXIMUM 288	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES - THE FOUR UPPER TCAS I ANTENNA CABLES MUST BE WITHIN ± 1 INCHES OF EACH OTHER - NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190112	PIC		190109	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03361-0000	HONEYWELL		Part of 050-03362-0000	HONEYWELL	-	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES
J7-BOT TCAS-BLU	POST CAS 6630 OR S.O.O. 6382	TFLX205-100	EMTEQ	P356	TMS205-1	EMTEQ	P364	CMR205-1	EMTEQ	MINIMUM 100 MAXIMUM 280	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES - THE FOUR UPPER TCAS I ANTENNA CABLES MUST BE WITHIN ± 1 INCHES OF EACH OTHER - NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		190108	PIC		190107	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03361-0000	HONEYWELL		190107	PIC	-	- SAME CABLE TYPE MUST BE USED FOR ALL TCAS I ANTENNA CABLES

This Page Intentionally Left Blank

Table 3 Coaxial Cable Requirements (continued)

CABLE IDENTIFICATION CODE	EFFECTIVITY	CABLE		CONNECTOR A			CONNECTOR B			ASSEMBLED LENGTH RESTRICTION (inches)	GENERAL RESTRICTIONS
		SPECIFICATION	MANUFACTURER	DESIGNATOR	PART NO.	MANUFACTURER	DESIGNATOR	PART NO.	MANUFACTURER		
MKR BCN	POST MOD 6/2339	S44191	PIC	P328	425-001-2018 (Part of 050-03541-0000)	PSE	P331	190112	PIC		CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
	POST MOD 6/2339 POST CAS 6630	TFLX205-100	EMTEQ		TRA205-1	EMTEQ		BMS205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		425-001-2018 (Part of 050-03541-0000)	PSE		190112	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03541-0000	HONEYWELL		190112	PIC	-	
NAV	POST CAS 6630	TFLX205-100	EMTEQ	P305	BMR205-1	EMTEQ	J306	BFS205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		190113	PIC		190127	PIC		
	PRE CAS 6630	S44191	PIC		190113	PIC		190127	PIC	-	
NAV 1	POST CAS 6630	TFLX205-100	EMTEQ	P292	TRA205-1	EMTEQ	P303	BMS205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		030-00101-0002 (Part of 050-03721-0000)	HONEYWELL		190112	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03721-0000	HONEYWELL		190112	PIC	-	
NAV 2	POST CAS 6630	TFLX205-100	EMTEQ	P297	TRA205-1	EMTEQ	P304	BMS205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		030-00101-0002 (Part of 050-03721-0000)	HONEYWELL		190112	PIC		
	PRE CAS 6630	S44191	PIC		Part of 050-03721-0000	HONEYWELL		190112	PIC	-	
RADALT RX	POST CAS 6630	TFLX205-100	EMTEQ	P348	TMS205-1	EMTEQ	P350	TMS205-1	EMTEQ	180 ± 6	-SAME CABLE TYPE MUST BE USED FOR BOTH "RADALT RX" AND "RADALT TX" CABLES
		S44191	PIC		190108	PIC		190108	PIC		
	PRE CAS 6630	S44193	PIC		190108	PIC		190108	PIC	SEE GENERAL RESTRICTIONS	-SAME CABLE TYPE MUST BE USED FOR BOTH "RADALT RX" AND "RADALT TX" CABLES -COMBINED LENGTH FOR "RADALT RX" & "RADALT TX" MUST BE MINIMUM 296 INCHES AND MAXIMUM 583 INCHES
RADALT TX	POST CAS 6630	TFLX205-100	EMTEQ	P347	TMS205-1	EMTEQ	P349	TMS205-1	EMTEQ	180 ± 6	-SAME CABLE TYPE MUST BE USED FOR BOTH "RADALT RX" AND "RADALT TX" CABLES
		S44191	PIC		190108	PIC		190108	PIC		
	PRE CAS 6630	S44193	PIC		190108	PIC		190108	PIC	SEE GENERAL RESTRICTIONS	-SAME CABLE TYPE MUST BE USED FOR BOTH "RADALT RX" AND "RADALT TX" CABLES -COMBINED LENGTH FOR "RADALT RX" & "RADALT TX" MUST BE MINIMUM 296 INCHES AND MAXIMUM 583 INCHES
2 RADALT RX	SOO 6218	TFLX205-100	EMTEQ	P453	TMS205-1	EMTEQ	P455	TMS205-1	EMTEQ	180 ± 6	-SAME CABLE TYPE MUST BE USED FOR BOTH "2 RADALT RX" AND "2 RADALT TX" CABLES
		S44191	PIC		190108	PIC		190108	PIC		
2 RADALT TX	SOO 6218	TFLX205-100	EMTEQ	P452	TMS205-1	EMTEQ	P454	TMS205-1	EMTEQ	180 ± 6	-SAME CABLE TYPE MUST BE USED FOR BOTH "2 RADALT RX" AND "2 RADALT TX" CABLES
		S44191	PIC		190108	PIC		190108	PIC		
TAIL OFF NAV	POST CAS 6630	TFLX205-100	EMTEQ	P306	BMS205-1	EMTEQ	P307	BMS205-1	EMTEQ	-	CABLE LENGTH TO BE KEPT AS SHORT AS PRACTICAL
		S44191	PIC		190112	PIC		190112	PIC		
	PRE CAS 6630	S44191	PIC		190112	PIC		190112	PIC	-	
VHF ANT	S.O.O. 6296	TFLX205-100	EMTEQ	P457	BMS205-1	EMTEQ	P458	BMR205-1	EMTEQ	-	
XM ANT	S.O.O. 6211, POST CAS 6630	TFLX205-100	EMTEQ	P385	SMR205-1	EMTEQ	P386	SMR205-1	EMTEQ	MINIMUM 264 MAXIMUM 492	
		S44191	PIC		110207	PIC		110207	PIC		
	S.O.O. 6211, PRE CAS 6630	S44191	PIC		110207	PIC		110207	PIC	MINIMUM 222 MAXIMUM 482	
XPDR 1 BOT	POST CAS 6630	TFLX205-100	EMTEQ	P318	TRA205-1	EMTEQ	P325	CMS205-1	EMTEQ	144 ± 24	
		S44191	PIC		030-00101-0002 (Part of 050-03683-0000)	HONEYWELL		190106	PIC		
	POST MOD 6/2105	S44191	PIC		Part of 050-03683-0000	HONEYWELL		190106	PIC	162 ± 12	
	PRE MOD 6/2105	S44191	PIC		Part of 050-03683-0000	HONEYWELL		190106	PIC	MAXIMUM 204	"XPDR 1 BOT" MUST BE WITHIN ± 120IN OF "XPDR 1 TOP"
XPDR 1 TOP	POST CAS 6630	TFLX295-100	EMTEQ	P317	TRA295-1	EMTEQ	P323	CMR295-1	EMTEQ	264 ± 24	
		S33141	PIC		190312, WITH DBA-600 (TRAY MOUNT)	PIC, DELKIN		190307	PIC		
	POST MOD 6/2105	TFLX295-100	EMTEQ		BMS295-1, WITH DBA-600 (TRAY MOUNT)	EMTEQ, DELKIN		CMR295-1	EMTEQ	288 ± 12	
		S33141	PIC		190312, WITH DBA-600 (TRAY MOUNT)	PIC, DELKIN		190307	PIC		
	PRE MOD 6/2105	S44191	PIC		Part of 050-03683-0000	HONEYWELL		190107	PIC	MAXIMUM 204	"XPDR 1 TOP" MUST BE WITHIN ± 120IN OF "XPDR 1 BOT"
XPDR 2 BOT	POST CAS 6630 OR S.O.O. 6381	TFLX205-100	EMTEQ	P321	TRA205-1	EMTEQ	P324	CMS205-1	EMTEQ	144 ± 24	- NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S44191	PIC		030-00101-0002 (Part of 050-03683-0000)	HONEYWELL		190106	PIC		
	POST MOD 6/2105	S44191	PIC		Part of 050-03683-0000	HONEYWELL		190106	PIC	162 ± 12	
	PRE MOD 6/2105	S44191	PIC		Part of 050-03683-0000	HONEYWELL		190106	PIC	MAXIMUM 204	"XPDR 2 BOT" MUST BE WITHIN ± 120IN OF "XPDR 2 TOP"
XPDR 2 TOP	POST CAS 6630 OR S.O.O. 6381	TFLX295-100	EMTEQ	P320	TRA295-1	EMTEQ	P322	CMR295-1	EMTEQ	240 ± 24	- NOT INSTALLED WHEN S.O.O. 6388 EMBODIED
		S33141	PIC		190312, WITH DBA-600 (TRAY MOUNT)	PIC, DELKIN		190307	PIC		
	POST MOD 6/2105	TFLX295-100	EMTEQ		BMS295-1, WITH DBA-600 (TRAY MOUNT)	EMTEQ, DELKIN		CMR295-1	EMTEQ	270 ± 12	
		S33141	PIC		190312, WITH DBA-600 (TRAY MOUNT)	PIC, DELKIN		190307	PIC		
	PRE MOD 6/2105	S44191	PIC		Part of 050-03683-0000	HONEYWELL		190107	PIC	MAXIMUM 204	"XPDR 2 TOP" MUST BE WITHIN ± 120IN OF "XPDR 2 BOT"

This Page Intentionally Left Blank

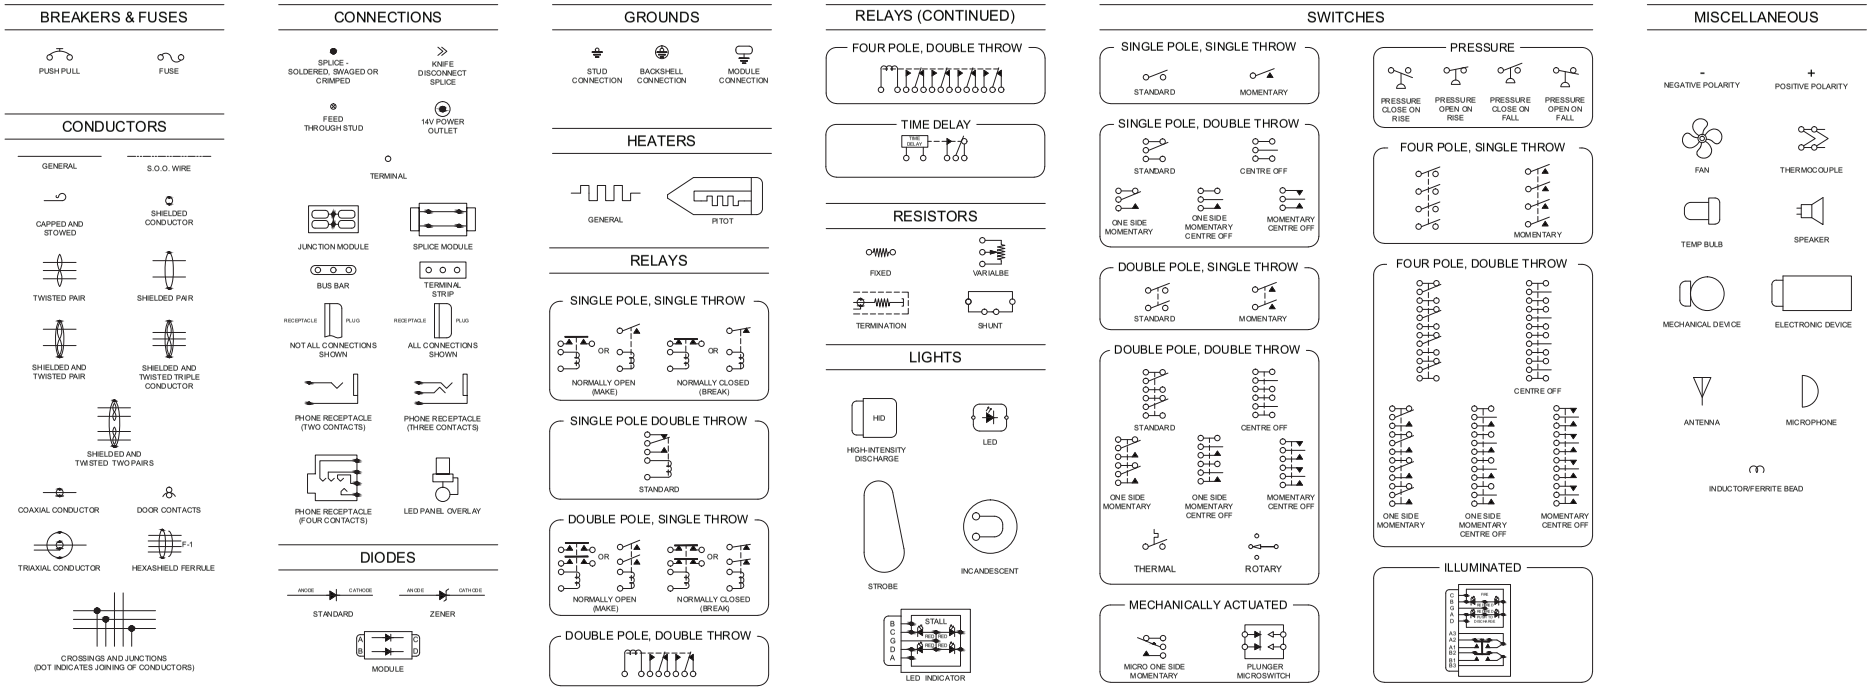

Electrical and Electronic Symbols Chart
Figure 1

This Page Intentionally Left Blank

EQUIPMENT LIST

This Page Intentionally Left Blank

EQUIPMENT LIST

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
EQUIPMENT LIST	1	Sep. 30/14		* 32	Nov. 30/18
	2	Blank Page		* 33	Nov. 30/18
	* 3	Nov. 30/18		* 34	Nov. 30/18
	* 4	Nov. 30/18		* 35	Nov. 30/18
	* 5	Nov. 30/18		* 36	Nov. 30/18
	* 6	Nov. 30/18		* 37	Nov. 30/18
	* 7	Nov. 30/18		* 38	Nov. 30/18
	* 8	Nov. 30/18		* 39	Nov. 30/18
	* 9	Nov. 30/18		* 40	Nov. 30/18
	* 10	Nov. 30/18		* 41	Nov. 30/18
	* 11	Nov. 30/18		* 42	Nov. 30/18
	* 12	Nov. 30/18		* 43	Nov. 30/18
	* 13	Nov. 30/18		* 44	Nov. 30/18
	* 14	Nov. 30/18		* 45	Nov. 30/18
	* 15	Nov. 30/18		* 46	Nov. 30/18
	* 16	Nov. 30/18		* 47	Nov. 30/18
	* 17	Nov. 30/18		* 48	Nov. 30/18
	* 18	Nov. 30/18		* 49	Nov. 30/18
	* 19	Nov. 30/18		* 50	Nov. 30/18
	* 20	Nov. 30/18		* 51	Nov. 30/18
	* 21	Nov. 30/18		* 52	Nov. 30/18
	* 22	Nov. 30/18		* 53	Nov. 30/18
	* 23	Nov. 30/18		* 54	Nov. 30/18
	* 24	Nov. 30/18		* 55	Nov. 30/18
	* 25	Nov. 30/18		* 56	Nov. 30/18
	* 26	Nov. 30/18		* 57	Nov. 30/18
	* 27	Nov. 30/18		* 58	Nov. 30/18
	* 28	Nov. 30/18		* 59	Nov. 30/18
	* 29	Nov. 30/18		* 60	Nov. 30/18
	* 30	Nov. 30/18		* 61	Nov. 30/18
	* 31	Nov. 30/18		* 62	Nov. 30/18

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
	* 63	Nov. 30/18		* 81	Nov. 30/18
	* 64	Nov. 30/18		* 82	Nov. 30/18
	* 65	Nov. 30/18		* 83	Nov. 30/18
	* 66	Nov. 30/18		* 84	Nov. 30/18
	* 67	Nov. 30/18		* 85	Nov. 30/18
	* 68	Nov. 30/18		* 86	Nov. 30/18
	* 69	Nov. 30/18		* 87	Nov. 30/18
	* 70	Nov. 30/18		* 88	Nov. 30/18
	* 71	Nov. 30/18		* 89	Nov. 30/18
	* 72	Nov. 30/18		* 90	Nov. 30/18
	* 73	Nov. 30/18		* 91	Nov. 30/18
	* 74	Nov. 30/18		* 92	Nov. 30/18
	* 75	Nov. 30/18		* 93	Nov. 30/18
	* 76	Nov. 30/18		* 94	Nov. 30/18
	* 77	Nov. 30/18		* 95	Nov. 30/18
	* 78	Nov. 30/18		* 96	Nov. 30/18
	* 79	Nov. 30/18		* 97	Nov. 30/18
	* 80	Nov. 30/18		* 98	Nov. 30/18

EQUIPMENT LIST

Equipment List

1. General

The following is a list of electrical and electronic equipment shown on the wiring diagrams. The list specifies the item (using the designator), description, part number and manufacturer. This list of parts is provided as an aid to trouble shooting and is not intended to be used as a parts catalogue.

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	A (ELECTRICAL BOX/PANEL ASSEMBLIES)		
A1	Main Distribution Box		
	(Pre Mod 6/2285)	C6NF1400-1	Viking Air Limited
	(Post Mod 6/2285)	C6NF1400-3	Viking Air Limited
A2	Power Distribution and Generator Control Box	C6NF1504-1	Viking Air Limited
A3	Pump Changeover Control Box		
	(Pre Mod 6/2239)	C6NF2232-1	Viking Air Limited
	(Post Mod 6/2239)	C6NF2232-3	Viking Air Limited
A4	Junction Box	C6NF1496-1	Viking Air Limited
A5	Windshield Heat Relay Box	C6NF1510-1	Viking Air Limited
A6	Propeller Deice Control Box	C6NF1486-1	Viking Air Limited
A7	Autofeather Relay Box	C6NF1488-1	Viking Air Limited
A8	Generator Field Control Panel		
	(Pre Mod 6/2239)	C6NF1493-1	Viking Air Limited
	(Post Mod 6/2239)	C6NF1493-3	Viking Air Limited
A9	Horizontal Stabilizer Deice Boot Control Panel	C6NF1484-3	Viking Air Limited
A10	Autofeather Resistor Panel	C6NF1490-1	Viking Air Limited
A11	Left Hand Instrument Sub-Panel	C6FS4905-1/ C6NF1491-1	Viking Air Limited
A12	Right Hand Instrument Sub-Panel	C6FS4905-3/ C6NF1492-1	Viking Air Limited
A13	Overhead Switch Panel		
	(Pre Mod 6/2285)	C6NF1489-1	Viking Air Limited
	(Post Mod 6/2285) (Pre Mod 6/2314)	C6NF1489-3	Viking Air Limited
	(Post Mod 6/2314) (Pre Mod 6/2285)	C6NF2268-1	Viking Air Limited
	(Post Mod 6/2314) (Post Mod 6/2285) (Pre Mod 6/2315)	C6NF2268-3	Viking Air Limited
	(Post Mod 6/2315)	C6NF2268-5	Viking Air Limited
A14	Instrument Panel	C6JF1428-1	Viking Air Limited

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
A15	Cockpit Dimmer Panel	C6NF2240-1	Viking Air Limited
A16	Fuel Selector Control Panel	Part of C6JF1428-1	Viking Air Limited
A17	Trim Panel	C6JF1164-15	Viking Air Limited
A18	Pilot Headset Enclosure	C6NF1503-1	Viking Air Limited
A19	Copilot Headset Enclosure	C6NF1503-1	Viking Air Limited
A20	EMI Filter Bracket	C6NF2265–11	Viking Air Limited
	BT (BATTERIES)		
BT1	Battery, Main	RG-380E/60L	Concorde
BT2	Battery, Emergency Lighting	RG-121-1	Concorde
BT3	Battery, Avionics Start		
	(Post Mod 6/2315)	RG-122-3	Concorde
	CB (CIRCUIT BREAKERS)		
CB1	Circuit Breaker, WINDSHIELD HEAT POWER L	7271-8-30	Klixon
CB2	Circuit Breaker, WINDSHIELD HEAT POWER R	7271-8-30	Klixon
CB3	Unassigned		
CB4	Circuit Breaker, Power Feeder (R)		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB4A	Circuit Breaker, Panel Distribution		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB5	Circuit Breaker, Power Feeder (L)		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB5A	Circuit Breaker, Panel Distribution		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB6	Circuit Breaker, Power Feeder (R)		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB6A	Circuit Breaker, Panel Distribution		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB7	Circuit Breaker, Power Feeder (L)		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB7A	Circuit Breaker, Panel Distribution		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB8	Circuit Breaker, Power Feeder (R)		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB8A	Circuit Breaker, Panel Distribution		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB9	Circuit Breaker, Power Feeder (L)		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB9A	Circuit Breaker, Panel Distribution		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB10	Unassigned		
CB11	Unassigned		
CB12	Circuit Breaker, Power Feeder (R)	7271-8-30	Klixon
CB12A	Circuit Breaker, Panel Distribution	7271-8-30	Klixon
CB13	Circuit Breaker, Power Feeder (L)	7271-8-30	Klixon
CB13A	Circuit Breaker, Panel Distribution	7271-8-30	Klixon
CB14	Circuit Breaker, Power Feeder (R)	7271-8-30	Klixon
CB14A	Circuit Breaker, Panel Distribution	7271-8-30	Klixon
CB15	Circuit Breaker, Power Feeder (L)	7271-8-30	Klixon
CB15A	Circuit Breaker, Panel Distribution	7271-8-30	Klixon
CB16	Circuit Breaker, Power Feeder (R)	7271-8-30	Klixon
CB16A	Circuit Breaker, Panel Distribution	7271-8-30	Klixon
CB17	Circuit Breaker, Power Feeder (L)	7271-8-30	Klixon
CB17A	Circuit Breaker, Panel Distribution	7271-8-30	Klixon
CB18	Circuit Breaker, RH 14V DC Plug		
	(S.O.O. 6281)	MS3320-15	
	(S.O.O. 6281)	alt. 2TC2-15	Klixon
	Circuit Breaker, STA 332 28V/14V DC Plug		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(S.O.O. 6283 or 6272)	MS3320-5	
	(S.O.O. 6283 or 6272)	alt. 2TC2-5	Klixon
CB19	Reserved		
CB20	Reserved		
CB21	Circuit Breaker, CABIN LIGHTS	MS3320-5	
		alt. 2TC2-5	Klixon
CB22	Circuit Breaker, CLOCK/DOME LIGHT	MS3320-2	
		alt. 2TC2-2	Klixon
CB23	Circuit Breaker, BATTERY VOLTS	MS3320-1	
		alt. 2TC2-1	Klixon
CB24	Circuit Breaker, ELT	MS3320-1	
		alt. 2TC2-1	Klixon
CB25	Circuit Breaker, HF - POWER AMP	7271-8-30	Klixon
CB26	Circuit Breaker, HF - RX/EX ANT CPLR	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB27	Circuit Breaker, EMERGENCYLIGHTING BATTERY	MS24510-A-10	
		alt. 7271-8-10	Klixon
CB28	Circuit Breaker, DAU COOLING FAN	7271-8-3	Klixon
CB29	Circuit Breaker, QAR		
	(S.O.O. 6351 or S.O.O. 6356)	MS3320-1	
CB30	Unassigned		
CB31	Unassigned		
CB32	Unassigned		
CB33	Circuit Breaker, EXT PWR VOLTAGE	MS3320-1	
		alt. 2TC2-1	Klixon
CB34	Unassigned		
CB35	Circuit Breaker, BATT BUS	MS3320-10	
		alt. 2TC2-10	Klixon
CB36	Circuit Breaker, HF BUS		
	(Pre Mod 6/2130)	700-004-50	Woods Mech Prod.
	(Post Mod 6/2130)	700-001-50	Woods Mech Prod.
CB37	Circuit Breaker, LEFT GEN TO MAIN	MS24510-A-15	
		alt. 7271-8-15	Klixon
CB38	Circuit Breaker, RIGHT GEN TO MAIN	MS24510-A-15	
		alt. 7271-8-15	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB39	Circuit Breaker, PROP HEATER CONT	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB40	Circuit Breaker, ESIS POWER	MS3320-5	
		alt. 2TC2-5	Klixon
CB41	Circuit Breaker, LEFT START RELAY BREAKER	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB42	Circuit Breaker, RIGHT START RELAY BREAKER	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB43	Circuit Breaker, EMERGENCY LIGHTING LIGHTS	MS3320-3	
		alt. 2TC2-3	Klixon
CB44	Unassigned		
CB45	Unassigned		
CB46	Unassigned		
CB47	Unassigned		
CB48	Unassigned		
CB49	Unassigned		
CB50	Unassigned		
CB51	Unassigned		
CB52	Unassigned		
CB53	Unassigned		
CB54	Unassigned		
CB55	Unassigned		
CB56	Unassigned		
CB57	Unassigned		
CB58	Unassigned		
CB59	Unassigned		
CB60	Unassigned		
CB61	Unassigned		
CB62	Unassigned		
CB63	Unassigned		
CB64	Unassigned		
CB65	Unassigned		
CB66	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB67	Unassigned		
CB68	Unassigned		
CB69	Unassigned		
CB70	Unassigned		
CB71	Unassigned		
CB72	Unassigned		
CB73	Unassigned		
CB74	Unassigned		
CB75	Unassigned		
CB76	Unassigned		
CB77	Unassigned		
CB78	Unassigned		
CB79	Unassigned		
CB80	Unassigned		
CB81	Unassigned		
CB82	Unassigned		
CB83	Unassigned		
CB84	Unassigned		
CB85	Unassigned		
CB86	Unassigned		
CB87	Unassigned		
CB88	Unassigned		
CB89	Unassigned		
CB90	Unassigned		
CB91	Unassigned		
CB92	Unassigned		
CB93	Unassigned		
CB94	Unassigned		
CB95	Unassigned		
CB96	Unassigned		
CB97	Unassigned		
CB98	Unassigned		
CB99	Unassigned		
CB100	Unassigned		
CB100A	Relay, Wing Tip Tank (R)		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(S.O.O. 6322)	MS24510A-5	
	(S.O.O. 6322)	alt. 7271-8-5	Klixon
CB101	Circuit Breaker, GENERATOR EXCITATION	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB102	Circuit Breaker, GENERATOR CONTROL L	MS24510-A-10	
		alt. 7271-8-10	Klixon
CB103	Circuit Breaker, GENERATOR CONTROL R	MS24510-A-10	
		alt. 7271-8-10	Klixon
CB104	Circuit Breaker, GENERATOR FAIL L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB105	Circuit Breaker, GENERATOR FAIL R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB106	Circuit Breaker, VENT FAN	7271-8-20	Klixon
CB107	Circuit Breaker, CABIN HEAT	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB108	Circuit Breaker, INTAKE DEFLECTORS	MS24510-A-10	
		alt. 7271-8-10	Klixon
CB109	Circuit Breaker, WINDSHIELD WIPER	MS24510-A-10	
		alt. 7271-8-10	Klixon
CB110	Circuit Breaker, PITOT HEAT R	MS24510-A-7-1/2	
		alt. 7271-8-7.5	Klixon
CB111	Circuit Breaker, PITOT HEAT L	MS24510-A-7 1/2	
		alt. 7271-8-7.5	Klixon
CB112	Circuit Breaker, PY TUBE HEATER R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB113	Circuit Breaker, PY TUBE HEATER L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB114	Circuit Breaker, BOOST PUMP FWD 2		
	(Pre Mod 6/2299)	MS24510-A-15	
	(Pre Mod 6/2299)	alt. 7271-8-15	Klixon
	(Post Mod 6/2299)	MS24510-A-10	
	(Post Mod 6/2299)	alt. 7271-8-10	Klixon
CB115	Circuit Breaker, BOOST PUMP FWD 1		
	(Pre Mod 6/2299)	MS24510-A-15	
	(Pre Mod 6/2299)	alt. 7271-8-15	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Post Mod 6/2299)	MS24510-A-10	
	(Post Mod 6/2299)	alt. 7271-8-10	Klixon
CB116	Circuit Breaker, BOOST PUMP AFT 2		
	(Pre Mod 6/2299)	MS24510-A-15	
	(Pre Mod 6/2299)	alt. 7271-8-15	Klixon
	(Post Mod 6/2299)	MS24510-A-10	
	(Post Mod 6/2299)	alt. 7271-8-10	Klixon
CB117	Circuit Breaker, BOOST PUMP AFT 1		
	(Pre Mod 6/2299)	MS24510-A-15	
	(Pre Mod 6/2299)	alt. 7271-8-15	Klixon
	(Post Mod 6/2299)	MS24510-A-10	
	(Post Mod 6/2299)	alt. 7271-8-10	Klixon
CB118	Circuit Breaker, BOOST PUMP PRESSURE 2	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB119	Circuit Breaker, BOOST PUMP PRESSURE 1	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB120	Circuit Breaker, TORQUE PRESSURE R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB121	Circuit Breaker, TORQUE PRESSURE L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB122	Circuit Breaker, OIL PRESSURE R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB123	Circuit Breaker, OIL PRESSURE L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB124	Circuit Breaker, WING FUEL CONTROL R	MS24510-A-7 1/2	
		alt. 7271-8-7.5	Klixon
CB125	Circuit Breaker, WING FUEL CONTROL L	MS24510-A-7 1/2	
		alt. 7271-8-7.5	Klixon
CB126	Unassigned		
CB127	Circuit Breaker, FLIGHT CONTROLS INDICATION	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB128	Circuit Breaker, READING LIGHTS	MS24510-A-5	
		alt. 7271-8-5	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB129	Unassigned		
CB130	Circuit Breaker, TAXI LIGHT	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB131	Circuit Breaker, MAP LIGHTS	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB132	Circuit Breaker, DOORS UNLOCKED	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB133	Circuit Breaker, CABIN LIGHTS	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB134	Circuit Breaker, AILERON TRIM ACTUATOR	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB135	Unassigned		
CB136	Circuit Breaker, WINDSHIELD HEAT R		
	(S.O.O. 6187)	MS24510-A-5	
	(S.O.O. 6187)	alt. 7271-8-5	Klixon
CB137	Circuit Breaker, WINDSHIELD HEAT L		
	(S.O.O. 6187)	MS24510-A-5	
	(S.O.O. 6187)	alt. 7271-8-5	Klixon
CB138	Circuit Breaker, START R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB139	Circuit Breaker, START L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB140	Circuit Breaker, IGNITION R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB141	Circuit Breaker, IGNITION L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB142	Circuit Breaker, BLEED AIR R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB143	Circuit Breaker, BLEED AIR L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB144	Circuit Breaker, PROPELLER OVERSPEED GOVERNOR	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB145	Circuit Breaker, PROPELLER DEICE		
	(S.O.O. 6202)	7271-8-20	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB146	Circuit Breaker, HYDRAULIC PRESSURE INDICATION	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB147	Circuit Breaker, HYDRAULIC OIL PUMP	7271-8-35	Klixon
CB148	Circuit Breaker, FUEL CROSSFEED	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB149	Circuit Breaker, PROPELLER AUTOFEATHER	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB150	Circuit Breaker, FUEL SHUTOFF R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB151	Circuit Breaker, FUEL SHUTOFF L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB152	Circuit Breaker, FUEL QUANTITY R/FWD	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB153	Circuit Breaker, FUEL QUANTITY L/AFT	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB154	Circuit Breaker, FIRE EXTINGUISHER R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB155	Circuit Breaker, FIRE EXTINGUISHER L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB156	Circuit Breaker, FIRE DETECTION R	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB157	Circuit Breaker, FIRE DETECTION L	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB158	Unassigned		
CB159	Unassigned		
CB160	Circuit Breaker, FIRE DET FAULT IND R	MT1-S-14-450-3-B24-B-J	Carling Tech
CB161	Circuit Breaker, FIRE DET FAULT IND L	MT1-S-14-450-3-B24-B-J	Carling Tech
CB162	Unassigned		
CB163	Unassigned		
CB164	Circuit Breaker, STROBE LIGHTS	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB165	Circuit Breaker, BEACON LIGHT	MS24510-A-5	
		alt. 7271-8-5	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB166	Circuit Breaker, LANDING LIGHT R		
	(Pre Mod 6/2285)	MS24510-A-7 1/2	
	(Pre Mod 6/2285)	alt. 7271-8-7.5	Klixon
	(Post Mod 6/2285)	MS24510-A-5	
	(Post Mod 6/2285)	alt. 7271-8-5	Klixon
CB167	Circuit Breaker, LANDING LIGHT L		
	(Pre Mod 6/2285)	MS24510-A-7 1/2	
	(Pre Mod 6/2285)	alt. 7271-8-7.5	Klixon
	(Post Mod 6/2285)	MS24510-A-5	
	(Post Mod 6/2285)	alt. 7271-8-5	Klixon
CB168	Circuit Breaker, WING INSPECTION LIGHT	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB169	Circuit Breaker, POSITION LIGHTS	MS24510-A-5	
		alt. 7271-8-5	Klixon
CB170	Circuit Breaker. AIRFRAME DEICE MANUAL		
	(S.O.O. 6004)	MS24510-A-7-1/2	
	(S.O.O. 6004)	alt. 7271-8-7.5	Klixon
CB171	Circuit Breaker, AIRFRAME DEICE AUTO		
	(S.O.O. 6004)	MS24510-A-5	
	(S.O.O. 6004)	alt. 7271-8-5	Klixon
CB172	Unassigned		
CB173	Circuit Breaker, CABIN FANS		
	(S.O.O. 6378 and S.O.O. 6379)	MS24510-A15	
CB174	Unassigned		
CB175	Unassigned		
CB176	Unassigned		
CB177	Unassigned		
CB178	Unassigned		
CB179	Unassigned		
CB180	Unassigned		
CB181	Unassigned		
CB182	Unassigned		
CB183	Unassigned		
CB184	Unassigned		
CB185	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB186	Unassigned		
CB187	Unassigned		
CB188	Unassigned		
CB189	Unassigned		
CB190	Unassigned		
CB191	Unassigned		
CB192	Unassigned		
CB193	Unassigned		
CB194	Unassigned		
CB195	Unassigned		
CB196	Unassigned		
CB197	Unassigned		
CB198	Unassigned		
CB199	Unassigned		
CB200	Circuit Breaker, MAU 1B	MS3320-20	
		alt. 2TC2-20	Klixon
CB201	Circuit Breaker, MAU 1A	MS3320-20	
		alt. 2TC2-20	Klixon
CB202	Circuit Breaker, MAU 2B	MS3320-20	
		alt. 2TC2-20	Klixon
CB203	Circuit Breaker, MAU 2A	MS3320-20	
		alt. 2TC2-20	Klixon
CB204	Circuit Breaker, AURAL ALERT 2	MS3320-1	
		alt. 2TC2-1	Klixon
CB205	Circuit Breaker, AURAL ALERT 1	MS3320-1	
		alt. 2TC2-1	Klixon
CB206	Circuit Breaker, COPILOT PFD	MS3320-5	
		alt. 2TC2-5	Klixon
CB207	Circuit Breaker, PILOT PFD	MS3320-5	
		alt. 2TC2-5	Klixon
CB208	Circuit Breaker, LOWER MFD	MS3320-5	
		alt. 2TC2-5	Klixon
CB209	Circuit Breaker, UPPER MFD	MS3320-5	
		alt. 2TC2-5	Klixon
CB210	Circuit Breaker, ADAHRS 1B	MS3320-3	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
		alt. 2TC2-3	Klixon
CB211	Circuit Breaker, ADAHRS 1A	MS3320-3	
		alt. 2TC2-3	Klixon
CB212	Circuit Breaker, FLT CTRL 1B	MS3320-3	
		alt. 2TC2-3	Klixon
CB213	Circuit Breaker, FLT CTRL 1A	MS3320-3	
		alt. 2TC2-3	Klixon
CB214	Circuit Breaker, CAUTION LTS BYPASS	MS3320-2	
		alt. 2TC2-2	Klixon
CB215	Circuit Breaker, PITCH TRIM		
	(S.O.O. 6221 or S.O.O. 6324)	MS3320-5	
	(S.O.O. 6221 or S.O.O. 6324)	alt. 2TC2-5	Klixon
CB216	Unassigned		
CB217	Circuit Breaker, AP SERVOS		
	(Post Mod 6/2303)	MS3320-7-1/2	
	(Post Mod 6/2303)	alt. 2TC2-7.5	Klixon
CB218	Circuit Breaker, COPILOT PFD CTRL	MS3320-3	
		alt. 2TC2-3	Klixon
CB219	Circuit Breaker, PILOT PFD CTRL	MS3320-3	
		alt. 2TC2-3	Klixon
CB220	Circuit Breaker, COPILOT AUDIO	MS3320-5	
		alt. 2TC2-5	Klixon
CB221	Circuit Breaker, PILOT AUDIO	MS3320-5	
		alt. 2TC2-5	Klixon
CB222	Circuit Breaker, MMDR 2	MS3320-7 1/2	
		alt. 2TC2-7.5	Klixon
CB223	Circuit Breaker, MMDR 1	MS3320-7 1/2	
		alt. 2TC2-7.5	Klixon
CB224	Circuit Breaker, XPDR 2 (Not installed with S.O.O. 6388)	MS3320-5	
		alt. 2TC2-5	Klixon
CB225	Circuit Breaker, XPDR 1	MS3320-5	
		alt. 2TC2-5	Klixon
CB226	Circuit Breaker, DME 2 (Not installed with S.O.O. 6388)	MS3320-3	
		alt. 2TC2-3	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB227	Circuit Breaker, DME 1	MS3320-3	
		alt. 2TC2-3	Klixon
CB228	Circuit Breaker, GPS 2 (Not installed with S.O.O. 6388)	MS3320-3	
		alt. 2TC2-3	Klixon
CB229	Circuit Breaker, GPS 1	MS3320-3	
		alt. 2TC2-3	Klixon
CB230	Circuit Breaker, SATELLITE WX		
	(S.O.O 6211)	MS3320-5	
	(S.O.O 6211)	alt. 2TC2-5	Klixon
CB231	Circuit Breaker, CVR (Removed when S.O.O. 6292 is incorporated) (Not installed with S.O.O. 6388)	MS3320-5	
		alt. 2TC2-5	Klixon
CB232	Unassigned		
CB233	Circuit Breaker, FDR (Removed when S.O.O. 6299 is incorporated) (Not installed with S.O.O. 6388)	MS3320-5	
		alt. 2TC2-5	Klixon
CB234	Unassigned		
CB235	Circuit Breaker, CAUTION LTS NORMAL	MS3320-2	
		alt. 2TC2-2	Klixon
CB236	Circuit Breaker, HF CTRL	MS3320-2	
		alt. 2TC2-2	Klixon
CB237	Circuit Breaker, WX RADAR (Not installed with S.O.O. 6388)	MS3320-5	
		alt. 2TC2-5	Klixon
CB238	Unassigned		
CB239	Circuit Breaker, MFD CTRL	MS3320-3	
		alt. 2TC2-3	Klixon
CB240	Circuit Breaker, DAU 1B	MS3320-5	
		alt. 2TC2-5	Klixon
CB241	Circuit Breaker, DAU 1A	MS3320-5	
		alt. 2TC2-5	Klixon
CB242	Circuit Breaker, DAU 2B	MS3320-5	
		alt. 2TC2-5	Klixon
CB243	Circuit Breaker, DAU 2A	MS3320-5	

ITEM	DESCRIPTION		PART NO.	MANUFACTURER
			alt. 2TC2-5	Klixon
CB244	Circuit Breaker, HEADSETS		MS3320-2	
			alt. 2TC2-2	Klixon
CB245	Circuit Breaker, TAWS (Not installed with S.O.O. 6388)		MS3320-3	
			alt. 2TC2-3	Klixon
CB246	Unassigned			
CB247	Circuit Breaker, TCAS (Not installed with S.O.O. 6388)		MS3320-5	
			alt. 2TC2-5	Klixon
CB248	Circuit Breaker, RAD ALT 2			
		(S.O.O. 6218)	MS3320-3	
		(S.O.O. 6218)	alt. 2TC2-3	Klixon
CB249	Circuit Breaker, RAD ALT 1		MS3320-3	
			alt. 2TC2-3	Klixon
CB250	Unassigned			
CB251	Circuit Breaker, ELT NAV		MS3320-1	
CB252	Circuit Breaker, 28V INPUT		MS3320-5	
			alt. 2TC2-5	Klixon
	Circuit Breaker, 28V INPUT			
		(S.O.O. 6282)	MS3320-15	
		(S.O.O. 6282)	alt. 2TC2-15	Klixon
CB253	Circuit Breaker, CABIN PA		MS3320-5	
			alt. 2TC2-5	Klixon
CB254	Circuit Breaker, 14V OUTPUT		MS3320-7 1/2	
			alt. 2TC2-7.5	Klixon
CB255	Circuit Breaker, ESIS BATTERY		MS3320-15	
			alt. 2TC2-15	Klixon
CB256	Circuit Breaker, Depth Sounder			
		(S.O.O. 6295)	MS3320-1	
		(S.O.O. 6295)	alt. 2TC2-1	Klixon
CB257	Circuit Breaker, ESIS INST		MS3320-3	
			alt. 2TC2-3	Klixon
CB258	Circuit Breaker, VHF-FM			
		(S.O.O. 6296)	MS3320-3	
		(S.O.O. 6296)	alt. 2TC2-3	Klixon

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CB259	Circuit Breaker, ESIS MAG	MS3320-1	
		alt. 2TC2-1	Klixon
CB260	Unassigned		
CB261	Circuit Breaker, AVIONICS FAN	MS3320-1	
		alt. 2TC2-1	Klixon
CB262	Unassigned		
CB263	Unassigned		
CB264	Unassigned		
CB265	Unassigned		
CB266	Unassigned		
CB267	Circuit Breaker, GEAR IND		
	(S.O.O. 6001 with Mod 6/2182)	MS3320-5	
	(S.O.O. 6001 with Mod 6/2182)	alt. 2TC2-5	Klixon
CB268	Unassigned		
CB269	Unassigned		
CB270	Unassigned		
CB271	Unassigned		
CB272	Unassigned		
CB273	Circuit Breaker, AVIONICS STRT BATT CHARGE		
	(Post Mod 6/2315)	2TC2-30	Klixon
CB274	Unassigned		
CB275	Circuit Breaker, AVIONICS STRT BATT CTRL		
	(Post Mod 6/2315)	MS3320-2	
	(Post Mod 6/2315)	alt. 2TC2-2	Klixon
CB276	Unassigned		
CB277	Circuit Breaker, PANEL LIGHTS L	MS3320-5	
		alt. 2TC2-5	Klixon
CB278	Unassigned		
CB279	Circuit Breaker, FLOOD LIGHTS	MS3320-5	
		alt. 2TC2-5	Klixon
CB280	Circuit Breaker, 14V Output LH STA 128		
	(S.O.O. 6282)	MS3320-7-1/2	
	(S.O.O. 6282)	alt. 2TC2-7.5	Klixon
CB281	Circuit Breaker, 14V Output LH STA 177		
	(S.O.O. 6282)	MS3320-7-1/2	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(S.O.O. 6282)	alt. 2TC2-7.5	Klixon
CB282	Circuit Breaker, 14V Output LH STA 222		
	(S.O.O. 6282)	MS3320-7-1/2	
	(S.O.O. 6282)	alt. 2TC2-7.5	Klixon
CB283	Unassigned		
CB284	Circuit Breaker, 14V Output STA 332		
	(S.O.O. 6281 or S.O.O. 6272)	MS3320-7-1/2	
	(S.O.O. 6281 or S.O.O. 6272)	alt. 2TC2-7.5	Klixon
CB285	Circuit Breaker, 14V Output RH STA 259		
	(S.O.O. 6281)	MS3320-7-1/2	
	(S.O.O. 6281)	alt. 2TC2-7.5	Klixon
CB286	Circuit Breaker, 14V Output RH STA 177		
	(S.O.O. 6281)	MS3320-7-1/2	
	(S.O.O. 6281)	alt. 2TC2-7.5	Klixon
CB287	Circuit Breaker, AVIONICS STRT BATT VOLTS		
	(Post Mod 6/2315)	MS3320-2	
	(Post Mod 6/2315)	alt. 2TC2-2	Klixon
CB287	Circuit Breaker, AVIONICS STRT BATT OUT		
	(Post Mod 6/2315)	MS3320-20	
	(Post Mod 6/2315)	alt. 2TC2-20	Klixon
	CBP (CIRCUIT BREAKER PANELS)		
CBP-A	Main Circuit Breaker Panel		
	(Pre Mod 6/2285)	C6NF1485-1	Viking Air Limited
	(Post Mod 6/2285)	C6NF1485-3	Viking Air Limited
CBP-B	Avionics Circuit Breaker Panel		
	(Pre Mod 6/2260)	C6NF1507-1	Viking Air Limited
	(Post Mod 6/2260) (Pre Mod 6/2315)	C6NF1507-3	Viking Air Limited
	(Post Mod 6/2315 without Mod 6/2303)	C6NF2281-1	Viking Air Limited
	(Post Mod 6/2315 with Mod 6/2303)	C6NF2281-3	Viking Air Limited
CBP-C	Main Circuit Breaker Distribution Panel		
	(Pre Mod 6/2130)	C6NF1284-7	Viking Air Limited
	(Post Mod 6/2130)	C6NF1284-9	Viking Air Limited
CBP-D	Rear Circuit Breaker Panel	C6NF2246-1	Viking Air Limited

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
CBP-E	Power Feeder Circuit Breaker Panel	C6NF2228-1	Viking Air Limited
CBP-F	Battery Compartment Circuit Breaker Panel	C6NF1418-1	Viking Air Limited
CBP-G	Battery Compartment Circuit Breaker Panel (Emergency Battery)		
	(S.O.O. 6205)	C6NF1418-1	Viking Air Limited
	P/J (CONNECTORS)		
J1	Unassigned		
P1	Unassigned		
J2	Unassigned		
P2	Unassigned		
J3	Unassigned		
P3	Unassigned		
J4	Unassigned		
P4	Unassigned		
J5	Unassigned		
P5	Unassigned		
J6	Unassigned		
P6	Unassigned		
J7	Unassigned		
P7	Unassigned		
J8	Unassigned		
P8	Unassigned		
J9	Unassigned		
P9	Unassigned		
J10	Connector, STN 55 Disc.	MS3470L20-41S	
	Backshell	M85049/52-1-20N	
	Nut Ring	M85528/2-20A	
P10	Connector, STN 55 Disc.	MS3475L20-41P	
	Backshell	M85049/52-1-20N	
J11	Unassigned		
P11	Unassigned		
J12	Unassigned		
P12	Unassigned		
J13	Connector, STN 55 Disc.	MS3470L16-26SW	
	Backshell	M85049/52-1-16N	
	Nut Ring	M85528/2-16A	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P13	Connector, STN 55 Disc.	MS3475L16-26PW	
	Backshell	M85049/52-1-16N	
P14	Unassigned		
J14	Unassigned		
J15	Unassigned		
P15	Unassigned		
J16	Connector, STN 55 Disc.	MS3470L14-12S	
	Backshell	M85049/52-1-14N	
	Nut Ring	M85528/2-14A	
P16	Connector, STN 55 Disc.	MS3475L14-12P	
	Backshell	M85049/52-1-14N	
J17	Unassigned		
P17	Unassigned		
J18	Connector, STN 111 Disc.	D38999/20FJ61SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P18	Connector, STN 111 Disc.	D38999/26FJ61PN	
	Backshell (90°)	M85049/39-25N	
J19	Connector, STN 111 Disc.	D38999/20FJ4SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P19	Connector, STN 111 Disc.	D38999/26FJ4PN	
	Backshell (90°)	M85049/39-25N	
J20	Connector, Main CB Panel Disc.	MS3470L20-39P	
	Backshell	M85049/31-20N	
	Nut Ring	M85528/2-20A	
P20	Connector, Main CB Panel Disc.	MS3475L20-39S	
	Backshell (90°)	M85049/51-1-20N	
J21	Connector, Main CB Panel Disc.	MS3450L32-7P	
	Backshell	M85049/31-32N	
	Nut Ring	M85528/2-32A	
P21	Connector, Main CB Panel Disc.	MS3456L32-7S	
	Backshell (90°)	M85049/51-1-32N	
J22	Connector, Main CB Panel Disc.	MS3470L12-10P	
	Backshell	M85049/31-12N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Nut Ring	M85528/2-12A	
P22	Connector, Main CB Panel Disc.	MS3475L12-10S	
	Backshell (90°)	M85049/51-1-12N	
J23	Unassigned		
P23	Unassigned		
J24	Connector, Engine Firewall Disc. (R)	MS3450KT28-21S	
	Backshell	M85049/52-1-28W	
	Nut Ring	M85528/2-28A	
P24	Connector, Engine Firewall Disc. (R)	MS3456KT28-21P	
	Backshell	M85049/52-1-28W	
J25	Connector, Engine Firewall Disc. (L)	MS3450KT28-21S	
	Backshell	M85049/52-1-28W	
	Nut Ring	M85528/2-28A	
P25	Connector, Engine Firewall Disc. (L)	MS3456KT28-21P	
	Backshell	M85049/52-1-28W	
J26	Unassigned		
P26	Unassigned		
J27	Unassigned		
P27	Unassigned		
J28	Unassigned		
P28	Unassigned		
J29	Unassigned		
P29	Unassigned		
J30	Unassigned		
P30	Unassigned		
J31	Connector, O/Head Switch Panel Disc.	MS3470L20-39S	
	Backshell	M85049/31-20N	
	Nut Ring	M85528/2-20A	
P31	Connector, O/Head Switch Panel Disc.	MS3475L20-39P	
	Backshell	M85049/31-20N	
J32	Connector, STN 100 Throttle Disc.	MS3470L12-10S	
	Backshell	M85049/31-12N	
	Nut Ring	M85528/2-12A	
P32	Connector, STN 100 Throttle Disc.	MS3475L12-10P	
	Backshell	M85049/31-12N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J33	Unassigned		
P33	Unassigned		
J34	Connector, STA 55 Disc.	MS3470L16-26S	
	Backshell	M85049/52-1-16N	
	Nut Ring	M85528/2-16A	
P34	Connector, STA 55 Disc.	MS3475L16-26P	
	Backshell	M85049/52-1-16N	
J35	Unassigned		
P35	Unassigned		
J36	Unassigned		
P36	Unassigned		
J37	Unassigned		
P37	Unassigned		
J38	Unassigned		
P38	Unassigned		
J39	Connector, Wing Disc. (R)	MS3470L16-8S	
	Backshell	M85049/52-1-16N	
	Nut Ring	M85528/2-16A	
P39	Connector, Wing Disc. (R)	MS3475L16-8P	
	Backshell	M85049/52-1-16N	
J40	Connector, Wing Disc. (L)	MS3470L16-8S	
	Backshell	M85049/52-1-16N	
	Nut Ring	M85528/2-16A	
P40	Connector, Wing Disc. (L)	MS3475L16-8P	
	Backshell	M85049/52-1-16N	
J41	Connector, Wing Disc. (R)	MS3470L16-26S	
	Backshell	M85049/52-1-16N	
	Nut Ring	M85528/2-16A	
P41	Connector, Wing Disc. (R)	MS3475L16-26P	
	Backshell	M85049/52-1-16N	
J42	Connector, Wing Disc. (L)	MS3470L16-26S	
	Backshell	M85049/52-1-16N	
	Nut Ring	M85528/2-16A	
P42	Connector, Wing Disc. (L)	MS3475L16-26P	
	Backshell	M85049/52-1-16N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J43	Connector, Wing Disc. (R)	MS3470L12-10S	
	Backshell	M85049/52-1-12N	
	Nut Ring	M85528/2-12A	
P43	Connector, Wing Disc. (R)	MS3475L12-10P	
	Backshell	M85049/52-1-12N	
J44	Connector, Wing Disc. (L)	MS3470L12-10S	
	Backshell	M85049/52-1-12N	
	Nut Ring	M85528/2-12A	
P44	Connector, Wing Disc. (L)	MS3475L12-10P	
	Backshell	M85049/52-1-12N	
J45	Connector, Wing Disc. (R)	MS3470L14-12S	
	Backshell	M85049/52-1-14N	
	Nut Ring	M85528/2-14A	
P45	Connector, Wing Disc. (R)	MS3475L14-12P	
	Backshell	M85049/52-1-14N	
J46	Connector, Wing Disc. (L)	MS3470L14-12S	
	Backshell	M85049/52-1-14N	
	Nut Ring	M85528/2-14A	
P46	Connector, Wing Disc. (L)	MS3475L14-12P	
	Backshell	M85049/52-1-14N	
J47	Connector, Wing Disc. (R)	MS3470L14-19S	
	Backshell	M85049/52-1-14N	
	Nut Ring	M85528/2-14A	
P47	Connector, Wing Disc. (R)	MS3475L14-19P	
	Backshell	M85049/52-1-14N	
J48	Connector, Wing Disc. (L)	MS3470L14-19S	
	Backshell	M85049/52-1-14N	
	Nut Ring	M85528/2-14A	
P48	Connector, Wing Disc. (L)	MS3475L14-19P	
	Backshell	M85049/52-1-14N	
J49	Unassigned		
P49	Unassigned		
J50	Unassigned		
P50	Unassigned		
J51	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P51	Unassigned		
J52	Unassigned		
P52	Unassigned		
J53	Unassigned		
P53	Unassigned		
J54	Unassigned		
P54	Unassigned		
J55	Unassigned		
P55	Unassigned		
J56	Unassigned		
P56	Unassigned		
J57	Unassigned		
P57	Unassigned		
J58	Unassigned		
P58	Unassigned		
J59	Unassigned		
P59	Unassigned		
J60	Connector, Main CB Panel Disc.	MS3450L18-1P	
	Backshell	M85049/31-18N	
	Nut Ring	M85528/2-18A	
P60	Connector, Main CB Panel Disc.	MS3456L18-1S	
	Backshell (90°)	M85049/51-1-18N	
J61	Unassigned		
P61	Unassigned		
J62	Connector, Engine Firewall Disc. (R)	MS3450KT18-1P	
	Backshell	M85049/52-1-18W	
	Nut Ring	M85528/2-18A	
P62	Connector, Engine Firewall Disc. (R)	MS3456KT18-1S	
	Backshell	M85049/52-1-18W	
J63	Connector, Engine Firewall Disc. (L)	MS3450KT18-1P	
	Backshell	M85049/52-1-18W	
	Nut Ring	M85528/2-18A	
P63	Connector, Engine Firewall Disc. (L)	MS3456KT18-1S	
	Backshell	M85049/52-1-18W	
J64	Connector, Autofeather Relay Box	MS3470L12-10P	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell	M85049/31-12N	
	Nut Ring	M85528/2-12A	
P64	Connector, Autofeather Relay Box	MS3475L12-10S	
	Backshell	M85049/52-1-12N	
J65	Connector, Lower Cowl Disc. (R)	MS3450KT18-1P	
	Backshell	M85049/52-1-18W	
	Nut Ring	M85528/2-18A	
P65	Connector, Lower Cowl Disc. (R)	MS3456KT18-1S	
	Backshell	M85049/52-1-18W	
J66	Connector, Lower Cowl Disc. (L)	MS3450KT18-1P	
	Backshell	M85049/52-1-18W	
	Nut Ring	M85528/2-18A	
P66	Connector, Lower Cowl Disc. (L)	MS3456KT18-1S	
	Backshell	M85049/52-1-18W	
J67	Unassigned		
P67	Unassigned		
J68	Unassigned		
P68	Unassigned		
J69	Unassigned		
P69	Unassigned		
J70	Unassigned		
P70	Unassigned		
J71	Unassigned		
P71	Unassigned		
J72	Unassigned		
P72	Unassigned		
J73	Unassigned		
P73	Unassigned		
J74	Unassigned		
P74	Unassigned		
J75	Unassigned		
P75	Unassigned		
J76	Unassigned		
P76	Unassigned		
J77	Unassigned		
P77	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J78	Unassigned		
P78	Unassigned		
J79	Unassigned		
P79	Unassigned		
J80	Unassigned		
P80	Unassigned		
J81	Unassigned		
P81	Unassigned		
J82	Unassigned		
P82	Unassigned		
J83	Unassigned		
P83	Unassigned		
J84	Connector, Maintenance Port (LPS)	RD9F00000	Positronic
P84	Unassigned		
J85	Connector, Cockpit Dimming Panel A15	MS27499E10F-35P	
P85	Connector, Cockpit Dimming Panel A15	MS27473E10F35S	AERO
	replaced by	MS27473T10F35S	
	Backshell	M85049/49-2-10N	
J86	Unassigned		
P86	Connector, Prop Pressure Switch (R)	MS3475L10-6S	
	Backshell	M85049/31-10N	
J87	Unassigned		
P87	Connector, Prop Pressure Switch (L)	MS3475L10-6S	
	Backshell	M85049/31-10N	
J88	Unassigned		
P88	Connector, Feather Solenoid (R)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J89	Unassigned		
P89	Connector, Feather Solenoid (L)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J90	Unassigned		
P90	Unassigned		
J91	Unassigned		
P91	Unassigned		
J92	Unassigned		
P92	Connector, Emergency Battery	MS27467T15B5P	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell	M85049/49-2-14W	
J93	Unassigned		
P93	Connector, LPS Power Supply (J1)	D38999/26FD5SN	
	Backshell	M85049/38-15N	
J94	Unassigned		
P94	Connector, Clock	MS3475W10-6S	
	Backshell	M85049/31-10W	
J95	Unassigned		
P95	Connector, LPS Power Supply (J2)	D38999/26FF35PN	
	Backshell	M85049/38-19N	
J96	Connector, Wing Tip Disc. (R)	MS3474L12-10S	
	Backshell	M85049/52-1-12N	
	Nut Ring	M85528/2-10A	
P96	Connector, Wing Tip Disc. (R)	MS3475L12-10P	
	Backshell	M85049/52-1-12N	
J97	Connector, Wing Tip Disc. (L)	MS3474L12-10S	
	Backshell	M85049/52-1-12N	
	Nut Ring	M85528/2-10A	
P97	Connector, Wing Tip Disc. (L)	MS3475L12-10P	
	Backshell	M85049/52-1-12N	
J98	Unassigned		
P98	Connector, Overspeed Governor Solenoid (R)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J99	Unassigned		
P99	Connector, Overspeed Governor Solenoid (L)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J100	Connector, Main Distribution Box	MS3470L22-41SW	
	Backshell	M85049/31-22N	
	Nut Ring	M85528/2-22A	
P100	Connector, Main Distribution Box (Capped and stowed when S.O.O. 6388 is installed)	MS3475L22-41PW	
	Backshell	M85049/31-22N	
J101	Connector, Main Distribution Box	MS3470L22-41S	
	Backshell	M85049/31-22N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Nut Ring	M85528/2-22A	
P101	Connector, Main Distribution Box	MS3475L22-41P	
	Backshell	M85049/31-22N	
J102	Connector, STN 130 Disc.	D38999/20FJ35SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P102	Connector, STN 130 Disc.	D38999/26FJ35PN	
	Backshell	M85049/38-25N	
J103	Connector, STN 130 Disc. (Capped and stowed when S.O.O. 6388 is installed)	D38999/20FJ4SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P103	Connector, STN 130 Disc.	D38999/26FJ4PN	
	Backshell	M85049/38-25N	
J104	Connector, STN 332 Disc.	D38999/20FJ35SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P104	Connector, STN 332 Disc.	D38999/26FJ35PN	
	Backshell	M85049/38-25N	
J105	Connector, STN 332 Disc.	MS3470L22-41S	
	Backshell	M85049/52-1-22N	
	Nut Ring	M85528/2-22A	
P105	Connector, STN 332 Disc.	MS3475L22-41P	
	Backshell	M85049/52-1-22N	
J106	Connector, STN 130 Disc.	D38999/20FJ61SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P106	Connector, STN 130 Disc.	D38999/26FJ61PN	
	Backshell	M85049/38-25N	
J107	Connector, Avionics Circuit Breaker Panel	D38999/20FJ4PN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P107	Connector, Avionics Circuit Breaker Panel	D38999/26FJ4SN	
	Backshell	M85049/38-25N	
J108	Connector, Right Pilot Sub-Panel Disc.	D38999/20FJ61SN	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P108	Connector, Right Pilot Sub-Panel Disc.	D38999/26FJ61PN	
	Backshell	M85049/38-25N	
J109	Connector, Left Pilot Sub-Panel Disc.	D38999/20FJ4SN	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P109	Connector, Left Pilot Sub-Panel Disc.	D38999/26FJ4PN	
	Backshell	M85049/38-25N	
J110	Connector, Avionics Circuit Breaker Panel	D38999/20FJ4PA	
	Backshell	M85049/38-25N	
	Nut Ring	M85528/2-24A	
P110	Connector, Avionics Circuit Breaker Panel	D38999/26FJ4SA	
	Backshell	M85049/38-25N	
J111	Unassigned		
P111	Connector, Fuel Quantity Signal Conditioner	D38999/26WD35SN	
	Backshell	M85049/38-15W	
J112	Unassigned		
P112	Connector, Fuel Quantity Signal Conditioner	D38999/26WD35SA	
	Backshell	M85049/38-15W	
J113	Unassigned		
P113	Connector, FWD Cell Probe #1		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J114	Unassigned		
P114	Connector, FWD Cell Probe #2		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J115	Unassigned		
P115	Connector, FWD Cell Probe #3		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J116	Unassigned		
P116	Connector, FWD Cell Probe #4		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J117	Unassigned		
P117	Connector, AFT Cell Probe #5		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J118	Unassigned		
P118	Connector, AFT Cell Probe #6		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J119	Unassigned		
P119	Connector, AFT Cell Probe #7		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J120	Unassigned		
P120	Connector, AFT Cell Probe #8		
	(Pre Mod 6/2395)	D38999/26WA35SN	
	(Post Mod 6/2395)	233-205-G6-Z19-35SN	
	Backshell		
	(Pre Mod 6/2390)	M85049/18-9W02	
	(Post Mod 6/2390) (Pre Mod 6/2395)	M85049/38S9W	
	(Post Mod 6/2395)	620H084BM09A	
J121	Connector, Wing Tank (L)	MS3449H8C33P	
	Nut Ring	M85528/2-8A	
	O-Ring, Fuel Resistant	MS29513-016	
P121	Connector, Wing Tank (L)	MS3476L8-33S	
	Backshell	M85049/52-1-8N	
J122	Connector, Wing Tank (R)	MS3449H8C33P	
	Nut Ring	M85528/2-8A	
	O-Ring, Fuel Resistant	MS29513-016	
P122	Connector, Wing Tank (R)	MS3476L8-33S	
	Backshell	M85049/52-1-8N	
J123	Unassigned		
P123	Connector, Wing Cell Probe (L)	B1566-GM-001	Benchmark
	Backshell (90°)	M85049/51-1-8N	
J124	Unassigned		
P124	Connector, Wing Cell Probe (R)	B1566-GM-001	Benchmark

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell (90°)	M85049/51-1-8N	
J125	Unassigned		
P125	Connector, Bleed Air Solenoid Valve (L)	MS3456L12S-3S	
	Backshell	M85049/52-1-12N	
J126	Unassigned		
P126	Connector, Bleed Air Solenoid Valve (R)	MS3456L12S-3S	
	Backshell	M85049/52-1-12N	
J127	Unassigned		
P127	Connector, Fuel Bleed Solenoid (L)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J128	Unassigned		
P128	Connector, Fuel Bleed Solenoid (R)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J129	Unassigned		
P129	Connector, Pitot Heat (L)	AN3115-1	
J130	Unassigned		
P130	Connector, Pitot Heat (R)	AN3115-1	
J131	Unassigned		
P131	Connector, Temperature Controller (L)	MS3456L20-27S	
	Backshell	M85049/31-20N	
J132	Unassigned		
P132	Connector, Temperature Controller (R)	MS3456L20-27S	
	Backshell	M85049/31-20N	
J133	Unassigned		
P133	Connector, Engine Pipe Heater (L)	MS3456L14S-2S	
	Backshell	M85049/52-1-14N	
J134	Unassigned		
P134	Connector, Engine Pipe Heater (R)	MS3456L14S-2S	
	Backshell	M85049/52-1-14N	
J135	Unassigned		
P135	Connector, Emergency Fuel Shut Off Valve (L)	MS3456L14S-2S	
	Backshell	M85049/31-14N	
J136	Unassigned		
P136	Connector, Emergency Fuel Shut Off Valve (R)	MS3456L14S-2S	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell	M85049/31-14N	
J137	Connector, Engine Firewall Disc. (L)	MS3450KT14S-2S	
	Backshell	M85049/52-1-14W	
	Nut Ring	M85528/2-14A	
P137	Connector, Engine Firewall Disc. (L)	MS3456KT14S-2P	
	Backshell	M85049/52-1-14W	
J138	Connector, Engine Firewall Disc. (R)	MS3450KT14S-2S	
	Backshell	M85049/52-1-14W	
	Nut Ring	M85528/2-14A	
P138	Connector, Engine Firewall Disc. (R)	MS3456KT14S-2P	
	Backshell	M85049/52-1-14W	
J139	Connector, STN 60 Disc.	MS3470L20-39S	
	Backshell (90°)	M85049/51-1-20N	
	Nut Ring	M85528/2-20A	
P139	Connector, STN 60 Disc.	MS3475L20-39P	
	Backshell	M85049/52-1-20N	
J140	Connector, Instrument Sub Panel Disc. (L)	MS3470L18-11S	
	Backshell	M85049/31-18N	
	Nut Ring	M85528/2-18A	
P140	Connector, Instrument Sub Panel Disc. (L)	MS3475L18-11P	
	Backshell	M85049/52-1-18N	
J141	Unassigned		
P141	Connector, Ignition Exciter (L)	MS3456L12S-3S	
	Backshell	M85049/31-12N	
J142	Unassigned		
P142	Connector, Ignition Exciter (R)	MS3456L12S-3S	
	Backshell	M85049/31-12N	
J143	Unassigned		
P143	Connector, Hydraulic Oil Pump Pressure Switch	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J144	Unassigned		
P144	Connector, Hydraulic Oil Pump	MS3456L16-11S	
	Backshell	M85049/31-16N	
J145	Unassigned		
P145	Connector, Wing Tank Transfer Valve (L)	MS3456L10SL-4S	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell	M85049/31-10N	
J146	Unassigned		
P146	Connector, Wing Tank Transfer Valve (R)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J147	Unassigned		
P147	Connector, Refuel Shut Off Valve (L)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J148	Unassigned		
P148	Connector, Refuel Shut Off Valve (R)	MS3456L10SL-4S	
	Backshell	M85049/31-10N	
J149	Unassigned		
P149	Connector, Master Power Supply	D38999/26WD5SN	
	Backshell	M85049/38-15W	
J150	Unassigned		
P150	Connector, Master Power Supply	D38999/26FA98PN	
	Backshell	311HS002M0902T	Glenair Inc.
	Boot	202D921-25/225-0	Tyco Elec./Raychem
J151	Unassigned		
P151	Connector, Landing Light (L)	D38999/26FA98SN	
	Backshell	311HS002M0902T	Glenair Inc.
	Boot	202D921-25/225-0	Tyco Elec./Raychem
J152	Unassigned		
P152	Connector, Slave Power Supply	D38999/26WD5SN	
	Backshell	M85049/38-15W	
J153	Unassigned		
P153	Connector, Slave Power Supply	D38999/26FA98PN	
	Backshell	311HS002M0902T	Glenair Inc.
	Boot	202D921-25/225-0	Tyco Elec./Raychem
J154	Unassigned		
P154	Connector, Landing Light (R)	D38999/26FA98SN	
	Backshell	311HS002M0902T	Glenair Inc.
	Boot	202D921-25/225-0	Tyco Elec./Raychem
J155	Connector, Windscreen Center Post Disc.	1-640520-0	Tyco Elec./AMP
	Strain Relief	350373-1	Tyco Elec.
P155	Connector, Windscreen Center Post Disc.	1-640510-0	Tyco Elec./AMP

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Strain Relief	350373-1	Tyco Elec.
J156	Unassigned		
P156	Connector, Strobe Power Supply (R)	MS3456L10SL-3P	
	Backshell	M85049/31-10N	
J157	Unassigned		
P157	Connector, Strobe Power Supply (R)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J158	Unassigned		
P158	Connector, Strobe Power Supply (L)	MS3456L10SL-3P	
	Backshell	M85049/31-10N	
J159	Unassigned		
P159	Connector, Strobe Power Supply (L)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J160	Unassigned		
P160	Unassigned		
J161	Unassigned		
P161	Connector, Low Oil Pressure Switch (L)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J162	Unassigned		
P162	Connector, Low Oil Pressure Switch (R)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J163	Unassigned		
P163	Connector, Prop Deicing Timer	MS3456L20-15S	
	Backshell	M85049/31-20N	
J164	Unassigned		
P164	Connector, Crossfeed Fuel Valve	MS3456L14S-5S	
	Backshell	M85049/31-14N	
J165	Connector, Pump Changeover Control	MS3470L14-19P	
P165	Connector, Pump Changeover Control	MS3475L14-19S	
	Backshell	M85049/52-1-14N	
J166	Unassigned		
P166	Connector, Voltage Regulator (R)	MS3456L16S-1S	
	Backshell	M85049/31-16N	
J167	Unassigned		
P167	Connector, Voltage Regulator (L)	MS3456L16S-1S	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
	Backshell	M85049/31-16N	
J168	Unassigned		
P168	Connector, Windshield Wiper Motor	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J169	Unassigned		
P169	Connector, Deicing Valve (L)	MS3456L14S-7S	
	Backshell	M85049/31-14N	
J170	Unassigned		
P170	Connector, Deicing Valve (R)	MS3456L14S-7S	
	Backshell	M85049/31-14N	
J171	Unassigned		
P171	Connector, Tail Deicing Valve	MS3456L14S-7S	
	Backshell	M85049/31-14N	
J172	Unassigned		
P172	Connector, Airframe Deicing Timer	MS3475L12-10S	
	Backshell	M85049/52-1-12W	
J173	Unassigned		
P173	Installation Kit, ACF 238/314 Cooling Fan	Part of ACF 238/314	Sandia Aerospace
J174	Unassigned		
P174	Connector, Hot Air Valve	MS3456L16S-1S	
	Backshell	M85049/31-16N	
J175	Unassigned		
P175	Connector, Torque Pressure (L)	MS3475L10-6S	
	Backshell (90°)	M85049/51-1-10N	
J176	Unassigned		
P176	Connector, Torque Pressure (R)	MS3475L10-6S	
	Backshell (90°)	M85049/51-1-10N	
J177	Unassigned		
P177	Connector, Prop Tach Generator (L)	MS3456L12S-3S	
	Backshell	M85049/52-1-12N	
		alt. M85049/39-1-12W	
J178	Unassigned		
P178	Connector, Prop Tach Generator (R)	MS3456L12S-3S	
	Backshell	M85049/52-1-12N	
		alt. M85049/39-1-12W	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J179	Unassigned		
P179	Connector, Oil Pressure (L)	MS3475L10-6S	
	Backshell (90°)	M85049/51-1-10N	
J180	Unassigned		
P180	Connector, Oil Pressure (R)	MS3475L10-6S	
	Backshell (90°)	M85049/51-1-10N	
J181	Unassigned		
P181	Connector, Autofeather Select/Armed (L)	18-200	Vivisun
J182	Unassigned		
P182	Connector, Autofeather Select/Armed (R)	18-200	Vivisun
J183	Unassigned		
P183	Unassigned		
J184	Unassigned		
P184	Unassigned		
J185	Unassigned		
P185	Unassigned		
J186	Unassigned		
P186	Unassigned		
J187	Unassigned		
P187	Connector, Fire EXT and Warning (L)	18-200	Vivisun
J188	Unassigned		
P188	Connector, Fire EXT and Warning (R)	18-200	Vivisun
J189	Unassigned		
P189	Unassigned		
J190	Unassigned		
P190	Unassigned		
J191	Unassigned		
P191	Connector, Prop Deice Disc. (L)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J192	Unassigned		
P192	Connector, Prop Deice Disc. (R)	MS3456L10SL-3S	
	Backshell	M85049/31-10N	
J193	Unassigned		
P193	Connector, Gas Turb Tach (L)	MS3456L12S-3S	
	Backshell	M85049/52-1-12N	
J194	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P194	Connector, Gas Turb Tach (R)	MS3456L12S-3S	
	Backshell	M85049/52-1-12N	
J195	Unassigned		
P195	Connector, Oil Temp (L)	MS3456L12S-3S	
	Backshell (90°)	M85049/51-1-12N	
J196	Unassigned		
P196	Connector, Oil Temp (R)	MS3456L12S-3S	
	Backshell (90°)	M85049/51-1-12N	
J197	Unassigned		
P197	Connector, Fuel Flow (L)	MS3475L10-6S	
	Backshell	M85049/51-1-10N	
J198	Unassigned		
P198	Connector, Fuel Flow (R)	MS3475L10-6S	
	Backshell	M85049/51-1-10N	
J199	Unassigned		
P199	Connector, Pneumatic Low Pressure	MS3456L10SL-3S	
	Backshell	M85049/52-1-10N	
J200	Unassigned		
P200	Unassigned		
J201	Connector, Junction Box	D38999/20FJ35PN	
	Nut Ring	M85528/2-24A	
P201	Connector, Junction Box	D38999/26FJ35SN	
	Backshell	M85049/38-25N	
J202	Connector, Junction Box	D38999/20FJ35PA	
	Nut Ring	M85528/2-24A	
P202	Connector, Junction Box	D38999/26FJ35SA	
	Backshell	M85049/38-25N	
J203	Connector, JunctionBox	D38999/20FJ35PB	
	Nut Ring	M85528/2-24A	
P203	Connector, JunctionBox	D38999/26FJ35SB	
	Backshell	M85049/38-25N	
J204	Connector, Junction Box	D38999/20FH35PN	
	Nut Ring	M85528/2-24B	
P204	Connector, Junction Box	D38999/26FH35SN	
	Backshell	M85049/38-23N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
		alt. M85049/124-23N	
J205	Connector, Junction Box	D38999/20FG39PN	
	Nut Ring	M85528/2-22A	
P205	Connector, Junction Box	D38999/26FG39SN	
	Backshell	M85049/38-21N	
J206	Unassigned		
P206	Installation Kit, PS 440	Part of 050-03669-0000	Honeywell
J207	Unassigned		
P207	Installation Kit, KRX 1053	Part of 050-03628-0000	Honeywell
J208	Unassigned		
P208	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J209	Unassigned		
P209	Installation Kit, KAC 1052	Part of 050-03658-0000	Honeywell
J210	Unassigned		
P210	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J211	Unassigned		
P211	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J212	Unassigned		
P212	Installation Kit, KPA 1052	Part of 050-03629-0000	Honeywell
J213	Unassigned		
P213	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J214	Unassigned		
P214	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J215	Unassigned		
P215	Connector Kit, DAU 1 (J4)	RD37F10GE0-50	Positronic
J216	Unassigned		
P216	Connector Kit, DAU 1 (J5)	RD37F10GE0-50	Positronic
J217	Unassigned		
P217	Connector Kit, DAU 1 (J2)	RD25M10GE0-50	Positronic
J218	Unassigned		
P218	Connector Kit, DAU1 (J3)	RD25M10GE0-50	Positronic
J219	Unassigned		
P219	Connector Kit, DAU2 (J4)	RD37F10GE0-50	Positronic
J220	Unassigned		
P220	Connector Kit, DAU2 (J5)	RD37F10GE0-50	Positronic

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J221	Unassigned		
P221	Connector Kit, DAU 2 (J2)	RD25M10GE0-50	Positronic
J222	Unassigned		
P222	Connector Kit, DAU2 (J3)	RD25M10GE0-50	Positronic
J223	Connector, Maintenance (DAU 1 - Config)	RD25F00000	Positronic
P223	Unassigned		
J224	Connector, Maintenance (DAU 1 - CH A)	RD9F00000	Positronic
P224	Unassigned		
J225	Connector, Maintenance (DAU 1 - CH B)	RD9F00000	Positronic
P225	Unassigned		
J226	Connector, Maintenance (DAU 2 - Config)	RD25F00000	Positronic
J227	Connector, Maintenance (DAU 2 - CH A)	RD9F00000	Positronic
P227	Unassigned		
J228	Connector, Maintenance (DAU 2 - CH B)	RD9F00000	Positronic
P228	Unassigned		
J229	Unassigned		
P229	Install Kit, Caution Lights Dimming Box	Part of LD12-IKC	NAT
J230	Unassigned		
P230	Connector, Copilot Master Warning	18-200	Vivisun
J231	Unassigned		
P231	Connector, Pilot Master Warning	18-200	Vivisun
J232	Unassigned		
P232	Connector, Copilot Master Caution	18-200	Vivisun
J233	Unassigned		
P233	Connector, Pilot Master Caution	18-200	Vivisun
J234	Unassigned		
P234	Connector, MAU Power Supply 1, J1	CBD5W5F0S5000	Positronic
J235	Unassigned		
P235	Connector, MAU Power Supply 1, J2	CBD5W5F0S5000	Positronic
	Backshell	7030539-1903	Honeywell
J236	Unassigned		
P236	Connector, MAU NIC 1 (CH A), J1	CBCD45W2F0S5000	Positronic
	Backshell	7030539-1910	Honeywell
	Coax Insert (Crimp)	15-1090-2202B	T.P.C.
	Ferrite Bead	21-727-B	Ferronics

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J237	Unassigned		
P237	Connector, MAU AGM 1 (1/2), J1	DD62F0S5000	Positronic
	Backshell	7026221-914	Honeywell
	Ferrule, Hexashield	HET-A-04C	Tyco Elec./Raychem
	Bracket, Hexashield	7029585-2	Honeywell
J238	Unassigned		
P238	Connector, MAU AGM 1 (1/2), J2	DD26F0S5000	Positronic
	Backshell	7026221-916	Honeywell
	Ferrule, Hexashield	HET-A-04C	Tyco Elec./Raychem
J239	Unassigned		
P239	Connector, MAU CSIO 1A (3/4), J1	DD62F0S5000	Positronic
	Backshell	7030539-1902	Honeywell
J240	Unassigned		
P240	Connector, MAU CSIO 1A (3/4) J2	DD62F0S5000	Positronic
	Backshell	7030539-1902	Honeywell
J241	Unassigned		
P241	Connector, MAU CSIO 1B (3/4), J3	DD62F0S5000	Positronic
	Backshell	7030539-1901	Honeywell
J242	Unassigned		
P242	Connector, MAU CSIO 1B (3/4), J4	DD62F0S5000	Positronic
	Backshell	7030539-1901	Honeywell
J243	Unassigned		
P243	Connector, MAU AIOP 1A (5/6), J1	DD62F0S5000	Positronic
	Backshell	7030539-1902	Honeywell
J244	Unassigned		
P244	Connector, MAU AIOP 1A (5/6), J2	DD62F0S5000	Positronic
	Backshell	7030539-1902	Honeywell
J245	Unassigned		
P245	Connector, MAU AIOP 1B (7/8), J1	DD62F0S5000	Positronic
	Backshell	7030539-1901	Honeywell
J246	Unassigned		
P246	Connector, MAU AIOP 1B (7/8), J2	DD62F0S5000	Positronic
	Backshell	7030539-1901	Honeywell
J247	Unassigned		
P247	Connector, MAU GIO (9/10), J1	DD62F0S5000	Positronic
	Backshell	7030539-1902	Honeywell

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J248	Unassigned		
P248	Connector, MAU GIO (9/10), J2	DD62F0S5000	Positronic
	Backshell	7030539-1902	Honeywell
J249	Unassigned		
P249	Connector, MAU GIO (9/10), J3	DD62F0S5000	Positronic
	Backshell	7030539-1901	Honeywell
J250	Unassigned		
P250	Connector, MAU GIO (9/10), J4	DD62F0S5000	Positronic
	Backshell	7030539-1901	Honeywell
J251	Unassigned		
P251	Connector, MAU AGM 2 (11/12), J1	DD62F0S5000	Positronic
	Backshell	7026221-913	Honeywell
	Ferrule, Hexashield	HET-A-04C	Tyco Elec./Raychem
	Bracket, Hexashield	7029585-2	Honeywell
J252	Unassigned		
P252	Connector, MAU AGM 2 (11/12), J2	DD26F0S5000	Positronic
	Backshell	7026221-915	Honeywell
	Ferrule, Hexashield	HET-A-04C	Raychem
J253	Unassigned		
P253	Connector, MAU Power Supply 2, J1	CBD5W5F0S5000	Positronic
J254	Unassigned		
P254	Connector, MAU Power Supply 2, J2	CBD5W5F0S5000	Positronic
	Backshell	7030539-1904	Honeywell
J255	Unassigned		
P255	Connector, MAU NIC 2 (CH B), J1	CBCD45W2F0S5000	Positronic
	Backshell	7030539-1909	Honeywell
	Coax Insert (Crimp)	15-1090-2202B	T.P.C.
	Ferrite Bead	21-727-B	Ferronics
J256	Unassigned		
P256	Installation Kit, KDU 1080 (Pilot PFD, J1)	Part of 050-03719-0000	Honeywell
J257	Unassigned		
P257	Installation Kit, KDU 1080 (Pilot PFD, J2)	Part of 050-03719-0000	Honeywell
J258	Unassigned		
P258	Installation Kit, KDU 1080 (Pilot PFD, J3)	Part of 050-03719-0000	Honeywell
J259	Unassigned		
P259	Installation Kit, KDU 1080 (Pilot PFD, J4)	Part of 050-03719-0001	Honeywell

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J260	Unassigned		
P260	Installation Kit, KDU 1080 (Upper MFD, J1)	Part of 050-03719-0000	Honeywell
J261	Unassigned		
P261	Installation Kit, KDU 1080 (Upper MFD, J2)	Part of 050-03719-0000	Honeywell
J262	Unassigned		
P262	Installation Kit, KDU 1080 (Upper MFD, J3)	Part of 050-03719-0000	Honeywell
J263	Unassigned		
P263	Installation Kit, KDU 1080 (Lower MFD, J1)	Part of 050-03719-0000	Honeywell
J264	Unassigned		
P264	Installation Kit, KDU 1080 (Lower MFD, J2)	Part of 050-03719-0000	Honeywell
J265	Unassigned		
P265	Installation Kit, KDU 1080 (Lower MFD, J3)	Part of 050-03719-0000	Honeywell
J266	Unassigned		
P266	Installation Kit, KDU 1080 (Copilot PFD, J1)	Part of 050-03719-0000	Honeywell
J267	Unassigned		
P267	Installation Kit, KDU 1080 (Copilot PFD, J2)	Part of 050-03719-0000	Honeywell
J268	Unassigned		
P268	Installation Kit, KDU 1080 (Copilot PFD, J3)	Part of 050-03719-0000	Honeywell
J269	Unassigned		
P269	Installation Kit, KDU 1080 (Copilot PFD, J4)	Part of 050-03719-0001	Honeywell
J270	Unassigned		
P270	Installation Kit, KMC 2210 (PFD Controller, Pilot)	Part of 050-03670-0000	Honeywell
J271	Unassigned		
P271	Installation Kit, KMC 2210 (PFD Controller, Copilot)	Part of 050-03670-0000	Honeywell
J272	Unassigned		
P272	Installation Kit, KMC 2220 (MF Controller)	Part of 050-03717-0000	Honeywell
	Coax Insert (Crimp)	15-1090-2202B	T.P.C.
	Ferrite Bead	21-727-B	Ferronics
J273	Unassigned		
P273	Connector, 15 Pin Female with Hood (J1)	RD15F10GVL0	Positronic
J274	Unassigned		
P274	Connector, 15 Pin Male with Hood (J2)	RD15M10GVL0	Positronic
J275	Unassigned		
P275	Installation Kit, KMC 9200 (Flight Controller, J1)	Part of 050-03671-0000	Honeywell

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J276	Unassigned		
P276	Installation Kit, KMC 9200 (Flight Controller, J2)	Part of 050-03671-0000	Honeywell
J277	Unassigned		
P277	Unassigned		
J278	Reserved		
P278	Installation Kit, KS 272A		
	(S.O.O. 6221 or S.O.O. 6324)	Part of 050-01450-0001	Honeywell
J279	Unassigned		
P279	Unassigned		
J280	Unassigned		
P280	Installation Kit, KSG 7200 (ADAHRS Channel A, J1)	Part of 050-03652-0000	Honeywell
J281	Unassigned		
P281	Installation Kit, KSG 7200 (ADAHRS Channel B, J2)	Part of 050-03652-0000	Honeywell
J282	Unassigned		
P282	Connector, Dual Element OAT Sensor	MS24266R14B7SN	
	Backshell	MS27291-3	
P282A	Connector, Dual Element OAT Sensor		
	(S.O.O. 6304)	M83723/95K1407N	
	Backshell		
	(S.O.O. 6304)	M85049/52S-14N	
J283	Unassigned		
P283	Installation Kit, KMG 7010 (No.1 Magnetometer)	Part of 050-03643-0000	Honeywell
J284	Unassigned		
P284	Installation Kit, KMG 7010 (No.2 Magnetometer)	Part of 050-03643-0000	Honeywell
J285	Unassigned		
P285	Installation Kit, PS 850B (Emergency Power Supply)	Part of 504-1035-01	L-3
J286	Installation Kit, MAG 3000 (Standby Magnetometer)	Part of 504-1895-05	L-3
P286	Installation Kit, MAG 3000 (Standby Magnetometer)	Part of 504-1895-05	L-3
J287	Unassigned		
P287	Installation Kit, GH 3100 (ESIS, J1)	Part of 504-1895-07	L-3

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J288	Unassigned		
P288	Configuration Module, DCM 3100	501-1870-111	L-3
J289	Unassigned		
P289	Installation Kit, KTR 2280 (No.1 MMDR, J1)	Part of 050-03721-0000	Honeywell
J290	Unassigned		
P290	Installation Kit, KTR 2280 (No.1 MMDR, J102) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-03721-0000	Honeywell
J291	Unassigned		
P291	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J292	Unassigned		
P292	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J293	Unassigned		
P293	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J294	Unassigned		
P294	Installation Kit, KTR 2280 (No.2 MMDR, J1)	Part of 050-03721-0000	Honeywell
J295	Unassigned		
P295	Installation Kit, KTR 2280 (No.2 MMDR, J102)	Part of 050-03721-0000	Honeywell
J296	Unassigned		
P296	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J297	Unassigned		
P297	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J298	Unassigned		
P298	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J299	Unassigned		
P299	Installation Kit, KA 44B (No.1) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-01756-0020	Honeywell
J300	Unassigned		
P300	Installation Kit, KA 44B (No.2)	Part of 050-01756-0020	Honeywell
J301	Unassigned		
P301	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J302	Unassigned		
P302	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J303	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P303	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J304	Unassigned		
P304	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J305	Unassigned		
P305	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J306	Refer to General Information, Table 3 — Coaxial Cable Requirements		
P306	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J307	Unassigned		
P307	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J308	Unassigned		
P308	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J309	Unassigned		
P309	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J310	Unassigned		
P310	Installation Kit, KGS 200 (No.1 GNSSU, J1)	Part of 050-03712-0000	Honeywell
J311	Unassigned		
P311	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J312	Unassigned		
P312	Installation Kit, KGS 200 (No.2 GNSSU, J1) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-03712-0000	Honeywell
J313	Unassigned		
P313	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J314	Unassigned		
P314	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J315	Unassigned		
P315	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J316	Unassigned		
P316	Installation Kit, KXP 2290 (No.1 XPDR, J1)	Part of 050-03683-0000	Honeywell
J317	Unassigned		
P317	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J318	Unassigned		
P318	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J319	Unassigned		
P319	Installation Kit, KXP 2290 (No.2 XPDR, J1) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-03683-0000	Honeywell

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J320	Unassigned		
P320	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J321	Unassigned		
P321	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J322	Unassigned		
P322	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J323	Unassigned		
P323	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J324	Unassigned		
P324	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J325	Unassigned		
P325	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J326	Unassigned		
P326	Installation Kit, KMA 29 (Pilot Audio Panel, J1)	Part of 050-03541-0000	Honeywell
J327	Unassigned		
P327	Installation Kit, KMA 29 (Pilot Audio Panel, J2)	Part of 050-03541-0000	Honeywell
J328	Unassigned		
P328	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J329	Unassigned		
P329	Installation Kit, KMA 29 (Copilot Audio Panel, J1)	Part of 050-03541-0000	Honeywell
J330	Unassigned		
P330	Installation Kit, KMA 29 (Copilot Audio Panel, J2)	Part of 050-03541-0000	Honeywell
J331	Unassigned		
P331	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J332	Connector, Headset Enclosure - Pilot	MS27499E10F35P	
	Nut Ring	M85528/2-10A	
P332	Connector, Headset Enclosure - Pilot	MS27473E10F35S	AERO
	replaced by	MS27473T10F35S	
	Backshell	M85049/49-2-10N	
J333	Jack, Phones (Pilot)	SWC 11	Switchcraft
P333	Reserved		
J334	Jack, Mic (Pilot)	SWC S12B	Switchcraft
P334	Reserved		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
J335	Jack, Phones (Obsv 1)	SWC 11	Switchcraft
P335	Reserved		
J336	Jack, Mic (Obsv 1)	SWC S12B	Switchcraft
P336	Reserved		
J337	Connector, Headset Enclosure - Copilot	MS27499E10F35P	
P337	Connector, Headset Enclosure - Copilot	MS27473E10F35S	AERO
	replaced by	MS27473T10F35S	
	Backshell	M85049/49-2-10N	
J338	Jack, Phones (Copilot)	SWC 11	Switchcraft
P338	Unassigned		
J339	Jack, Mic (Copilot)	SWC S12B	Switchcraft
P339	Unassigned		
J340	Unassigned		
P340	Installation Kit, KN 63 (No.1 DME, J1)	050-01766-0001	Honeywell
J341	Unassigned		
P341	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J342	Unassigned		
P342	Installation Kit, KN 63 (No.2 DME, J1) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-01766-0001	Honeywell
J343	Unassigned		
P343	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J344	Unassigned		
P344	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J345	Unassigned		
P345	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J346	Unassigned		
P346	Installation Kit, KRA 405B (No.1 Rad Alt, J1)	Part of 050-03365-0002	Honeywell
		alt. 050-03365-0000	Honeywell
J347	Unassigned		
P347	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J348	Unassigned		
P348	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J349	Unassigned		
P349	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J350	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P350	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J351	Unassigned		
P351	Installation Kit, KTA 910 (TCAS 1, J10) (Capped and stowed when S.O.O. 6388 is installed) (Installed with S.O.O. 6382)	Part of 050-03361-0000	Honeywell
J352	Unassigned		
P352	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J353	Unassigned		
P353	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J354	Unassigned		
P354	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J355	Unassigned		
P355	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J356	Unassigned		
P356	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J357	Unassigned		
P357	Unassigned		
J358	Unassigned		
P358	Unassigned		
J359	Unassigned		
P359	Unassigned		
J360	Unassigned		
P360	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J361	Unassigned		
P361	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J362	Unassigned		
P362	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J363	Unassigned		
P363	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J364	Unassigned		
P364	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J365	Unassigned		
P365	Installation Kit, KTA 910 (Configuration Module)	Part of 050-03361-0000	Honeywell
J366	Unassigned		

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P366	Installation Kit, MK VI EGPWS (J1) (Capped and stowed when S.O.O. 6388 is installed)	Part of 755-7013-010	Honeywell
J367	Unassigned		
P367	Installation Kit, MK VI EGPWS (J2) (Capped and stowed when S.O.O. 6388 is installed)	Part of 755-7013-010	Honeywell
J368	Unassigned		
P368	Unassigned		
J369	Unassigned		
P369	Unassigned		
J370	Unassigned		
P370	Unassigned		
J371	Unassigned		
P371	Unassigned		
J372	Unassigned		
P372	Installation Kit, ART 2000 (WX Weather Radar) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-03088-0000	Honeywell
J373	Unassigned		
P373	Installation Kit, ART 2000 (WX Weather Radar) (Capped and stowed when S.O.O. 6388 is installed)	Part of 050-03088-0000	Honeywell
J374	Reserved		
P374	Connector, AR 256 FDR		
	(Pre Mod 6/2332) (Removed when S.O.O. 6292 is incorporated)	KJ6F16N35S	ITT Cannon
	(Pre Mod 6/2332) (Removed when S.O.O. 6292 is incorporated)	alt. 440-0674-007	alt. Honeywell
J374A	Reserved		
P374A	Connector, AR 512 FDR (Capped and stowed when S.O.O. 6388 is installed)		
	(Post Mod 6/2332)	DPX2MA-57S-57S-33-0001	ITT Cannon
	(Post Mod 6/2332)	alt. 16410	alt. L3
J375	Unassigned		
P375	Connector, Impact Switch	MS3475L8-33S	
J376	Backshell	M85049/52-1-8N	

ITEM	DESCRIPTION	PART NO.	MANUFACTURER
P376	Connector, AR 120 CVR (Removed when S.O.O. 6292 is incorporated) (Capped and stowed when S.O.O. 6388 is installed)	KJ6F16N35S	ITT Cannon
		alt. 440-0674-007	alt. Honeywell
P377	Connector, Impact Switch (Capped and stowed when S.O.O. 6388 is installed)	MS3475L8-33S	Amphenol
	Backshell	M85049/52-1-8N	
J378	CVR Microphone Disconnect, Female	1-640520-0	Tyco Elec.
	Strain Relief	350373-1	Tyco Elec./AMP
P378	CVR Microphone Disconnect, Male (Removed when S.O.O. 6292 is incorporated) (Capped and stowed when S.O.O. 6388 is installed)	1-640510-0	Tyco Elec.
J379	Unassigned		
P379	Installation Kit, C406-N (ELT, J1)	Part of 455-7422	Artex
J380	Unassigned		
P380	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J381	Unassigned		
P381	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J382	Unassigned		
P382	Installation Kit, Connector, ELT Cockpit Switch	Part of 345-6196-04	Artex
J383	Unassigned		
P383	Installation Kit, XMD 157 (XM WX Data Receiver)	Part of 4092757-101	Honeywell
J384	Unassigned		
P384	Unassigned		
J385	Unassigned		
P385	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J386	Unassigned		
P386	Refer to General Information, Table 3 — Coaxial Cable Requirements		
J387	Unassigned		
P387	Installation Kit, TPU 67A (TCAS II, J1A)	Part of 050-03078-0010	Honeywell
J388	Unassigned		
P388	Installation Kit, TPU 67A (TCAS II, J1B)	Part of 050-03078-0010	Honeywell
J389	Unassigned		
P389	Installation Kit, TPU 67A (TCAS II, J2)	Part of 050-03078-0010	Honeywell