Steering Collar (with Mods S.O.O. 6001 and 6048) (Pre Mod 6/2331) – Maintenance Practices

1. Adjustment/Test

Refer to Figure 1 for details.

Note The following adjustment procedures are only applicable to nose legs incorporating shimmy damper provisions for use with wheel-skis or intermediate flotation gear.

A. Adjust Steering Collar Torque Loading

1) With the nose wheel jacked clear of ground (refer to 07-00-00, Lifting and Shoring – General Data), disconnect steering actuator from steering collar and remove pin from torque links. Slacken locking clip and remove key.

2) If new friction disc has been installed, wear in and seat disc as follows:

a) Torque preload nut until torque required to turn steering collar is 800 to 1000 pound–inches (70 to 90 pounds to move steering collar with spring balance attached to end of torque link).

b) Operate steering collar under load for a minimum of ten cycles.

Note Steering collar may be operated manually or, if hydraulic power is available, by connecting and operating steering actuator. Disconnect actuator, if used, after operation.


c) Back off torque on preload nut until steering collar rotates freely.

d) Torque preload nut to 30 pounds–feet, then back off to align with slots, ensuring steering collar is snug but free to rotate (approximately 8 pounds to move steering collar with a spring balance attached to end of torque link).

3) When skis or intermediate flotation gear are installed, torque preload nut until shimmy damper torque is 800 to 1000 pound–inches (70 to 90 pounds to move steering collar with a spring balance attached to end of torque link).

4) If skis or intermediate flotation gear are not fitted, or have been removed, back off torque on preload nut until steering collar rotates freely. Torque preload nut to 30 pounds–feet, then back off to align slots, ensuring steering collar is snug but free to rotate (approximately 8 pounds to move steering collar with a spring balance attached to end of torque link).

5) Install key and secure with locking clip. Reconnect steering actuator to steering collar and install pin in torque links. Lower aircraft to ground.

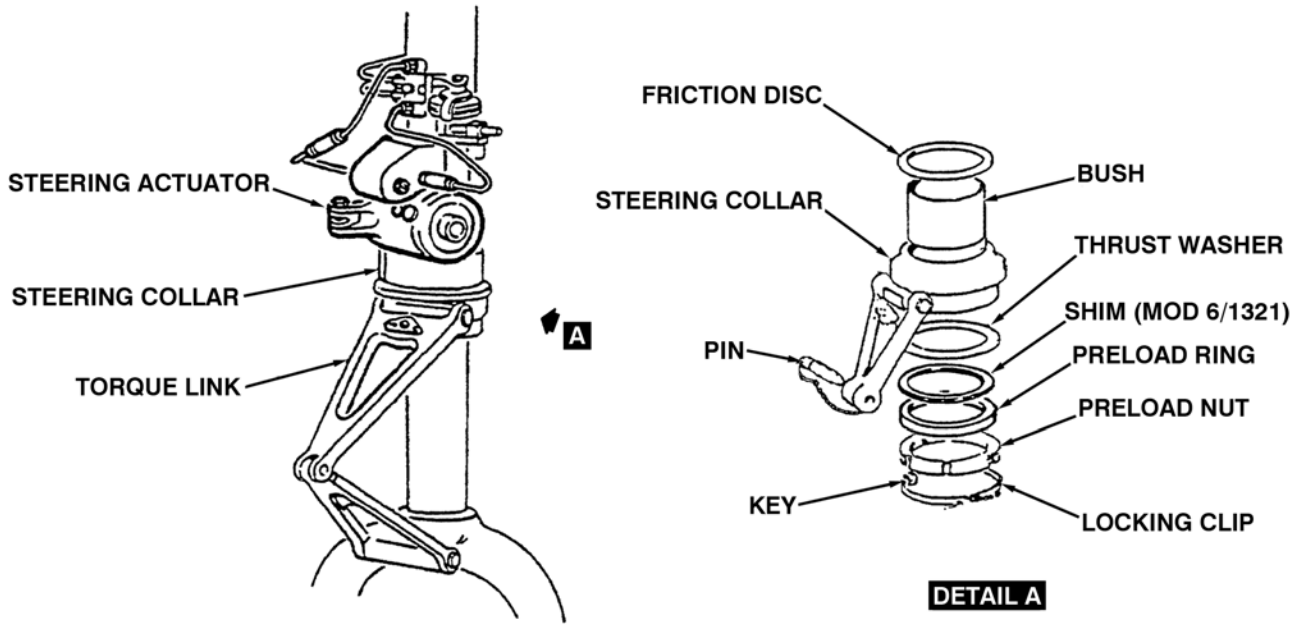

NOTE: REFER TO PSM 1-6-6A FOR ASSEMBLY CONFIGURATION

Steering Collar Torque Adjustment
Figure 1