
Wheel Brakes Accumulator (Mod 6/2039) – General Data

1. General

The wheel brakes accumulator mounted on the hydraulic power package beneath the flight compartment floor, provides the wheel brakes with supplemental pressure in an emergency or during limited periods of peak demand, and provides pressure when the hydraulic system is shutdown while parked. The accumulator is connected into the hydraulic system main pressure supply line to the wheel brakes control valves, and a combined air pressure gauge and air charging valve is mounted on a bracket on the left side of the package. (Refer to Figure 1).

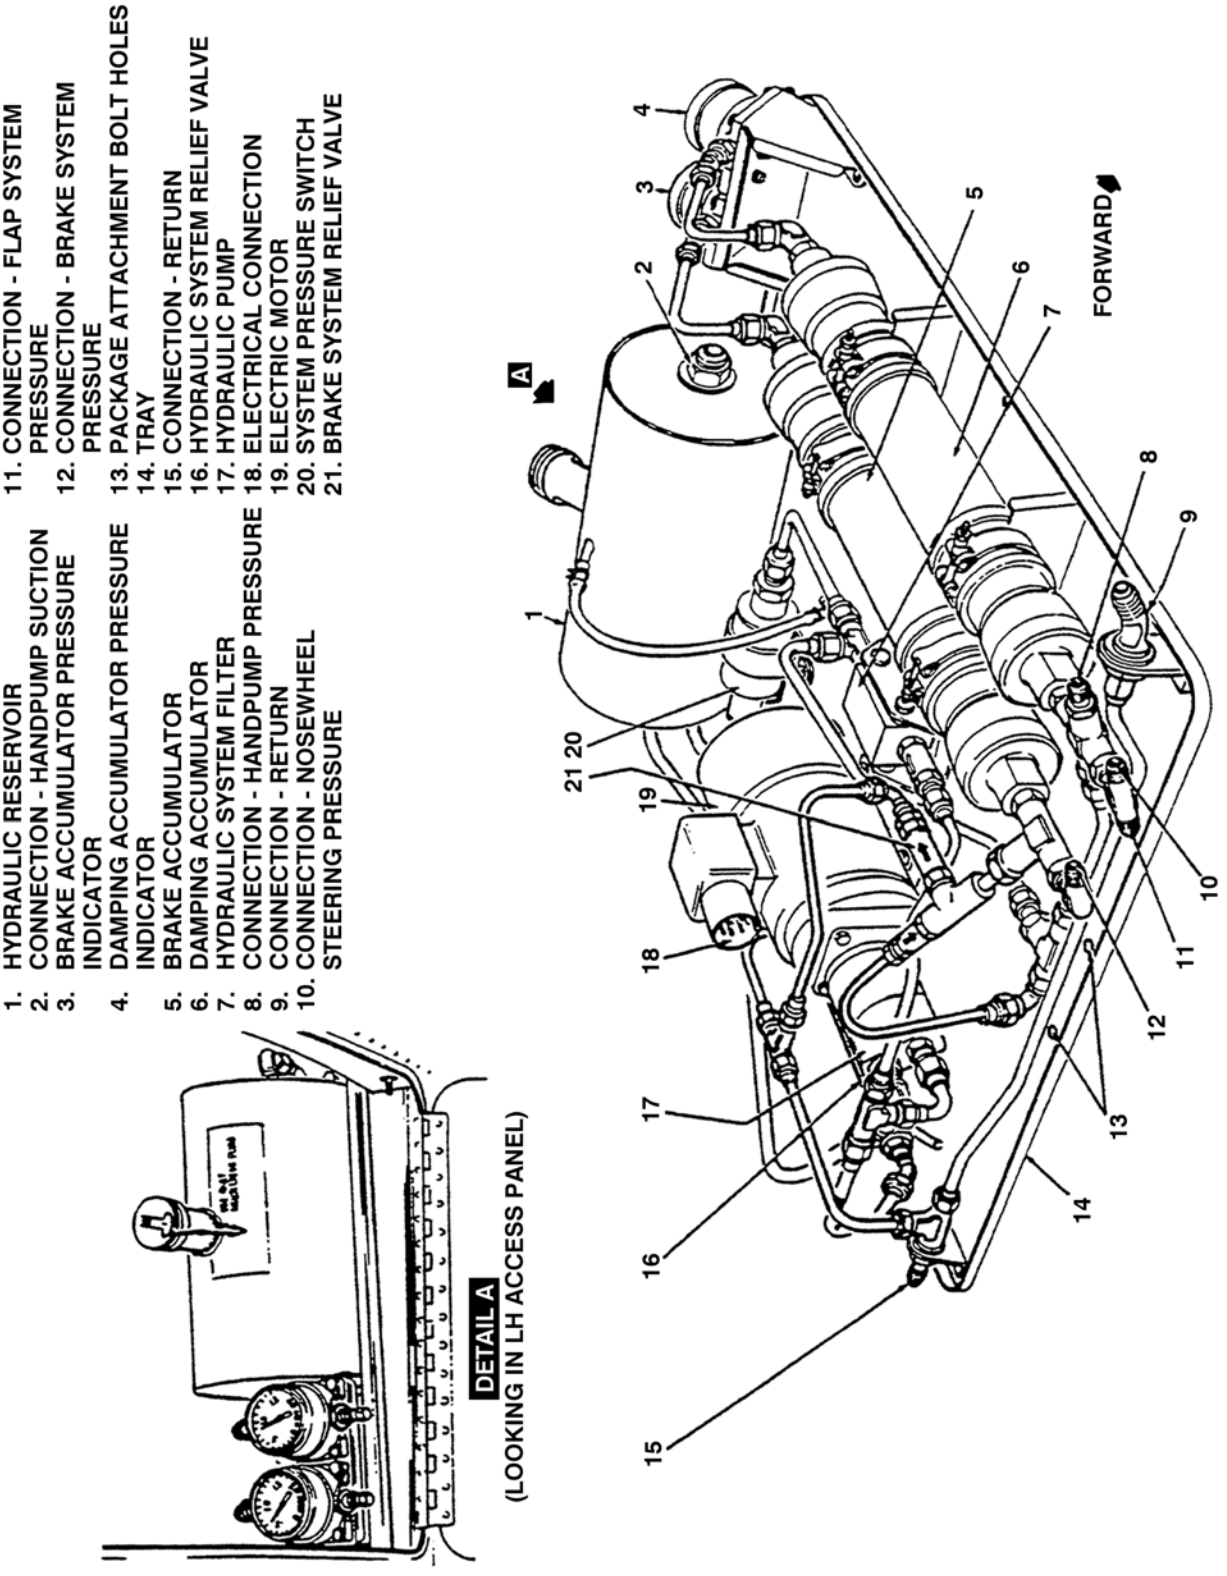

Hydraulic Power Package
Figure 1

Print Date: 2025-09-15

2. Removal/Installation

A. Remove Wheel Brakes Accumulator

1) Discharge brake system accumulator hydraulic pressure by pumping brake pedals.

2) Open left and right-hand access doors on underside of nose section.

3) Discharge all air pressure from brake system accumulator by loosening air valve one-quarter turn and waiting until all air has escaped. Check indicator on accumulator reads zero.

WARNING **FAILURE TO PROPERLY DISCHARGE ALL AIR PRESSURE FROM ACCUMULATOR MAY RESULT IN SERIOUS INJURY.**

4) Disconnect air line at head of accumulator. Cap and plug open connection and line.

5) Place container to receive spillage. Remove nuts and release two clamps, and unscrew accumulator with union from tee (refer to Figure 1).

B. Install Wheel Brakes Accumulator

1) If new accumulator is to be installed, transfer fittings from unserviceable accumulator and use new O-rings.

2) Install new O-ring at tee, and screw accumulator union into tee (refer to Figure 1).

3) Attach accumulator to tray with two clamps and nuts.

CAUTION **OVERTIGHTENING OF ACCUMULATOR MOUNTING CLAMPS COULD RESULT IN DAMAGE TO ACCUMULATOR.**

4) Overcome run down torque of clamp nuts then add 15 – 20 pound–inches torque maximum to seat nut.

5) Connect air line at head of accumulator.

6) Charge accumulator with dry nitrogen to 750 ± 50 psi.

7) Check reservoir fluid level. Function test hydraulic power package (refer to 29-10-00, Hydraulic Power Package (Mod 6/2039) – General Data).

8) Bleed brake system (refer to 32-40-00, Wheels and Brakes (Mod 6/2002) – General Data).

9) Close left and right-hand access doors on underside of nose section.

This Page Intentionally Left Blank