CHAPTER

50

CARGO AND ACCESSORY COMPARTMENTS

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

Subject/Page	Date	COC
50-EFFECTIVE PAGES		
1 thru 3	Sep 15/2026	
4	BLANK	
50-CONTENTS		
O 1	Sep 15/2026	
O 2	Sep 15/2026	
3	May 15/2024	
4	May 15/2024	
5	May 15/2024	
6	May 15/2024	
7	May 15/2024	
8	BLANK	
50-00-00		
901	May 15/2024	
902	BLANK	
50-10-00		
R 601	Sep 15/2026	
O 602	Sep 15/2026	
O 603	Sep 15/2026	
O 604	Sep 15/2026	
O 605	Sep 15/2026	
606	May 15/2024	
607	May 15/2024	
608	May 15/2024	
609	May 15/2024	
R 610	Sep 15/2026	
O 611	Sep 15/2026	
O 612	Sep 15/2026	
50-10-00		
701	Jan 15/2025	
702	May 15/2024	
703	May 15/2024	
704	May 15/2024	
705	May 15/2024	
706	BLANK	
50-10-01		
801	May 15/2026	
R 802	Sep 15/2026	
50-10-01 (cont)		
R 803	Sep 15/2026	
O 804	Sep 15/2026	
O 805	Sep 15/2026	
R 806	Sep 15/2026	
R 807	Sep 15/2026	
R 808	Sep 15/2026	
O 809	Sep 15/2026	
O 810	Sep 15/2026	
R 811	Sep 15/2026	
O 812	Sep 15/2026	
O 813	Sep 15/2026	
O 814	Sep 15/2026	
O 815	Sep 15/2026	
O 816	Sep 15/2026	
O 817	Sep 15/2026	
O 818	Sep 15/2026	
O 819	Sep 15/2026	
R 820	Sep 15/2026	
R 821	Sep 15/2026	
R 822	Sep 15/2026	
A 823	Sep 15/2026	
A 824	Sep 15/2026	
A 825	Sep 15/2026	
A 826	Sep 15/2026	
A 827	Sep 15/2026	
A 828	Sep 15/2026	
A 829	Sep 15/2026	
A 830	Sep 15/2026	
50-10-02		
401	Jan 15/2026	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	Jan 15/2026	
50-10-02 (cont)		
408	Sep 15/2024	
409	Sep 15/2024	
410	Sep 15/2025	
50-10-03		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	Sep 15/2024	
407	Sep 15/2024	
408	Sep 15/2024	
409	Sep 15/2024	
410	BLANK	
50-10-04		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
412	May 15/2024	
413	May 15/2024	
414	May 15/2024	
415	May 15/2024	
416	May 15/2024	
417	May 15/2024	
418	May 15/2024	
419	May 15/2024	
420	May 15/2024	
421	May 15/2024	
422	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

50-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
50-10-04 (cont)		
423	May 15/2024	
424	May 15/2024	
425	May 15/2024	
426	May 15/2024	
427	May 15/2024	
428	May 15/2024	
429	May 15/2024	
430	May 15/2024	
431	May 15/2024	
432	May 15/2024	
433	May 15/2024	
434	May 15/2024	
435	May 15/2024	
436	May 15/2024	
437	Jan 15/2025	
438	Jan 15/2025	
439	May 15/2024	
440	BLANK	
50-10-05		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
50-11-01		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
50-11-02		
401	May 15/2024	
402	May 15/2024	
50-11-02 (cont)		
403	May 15/2024	
404	Jan 15/2025	
405	Jan 15/2025	
406	BLANK	
50-12-01		
401	Jan 15/2026	
402	May 15/2024	
403	Sep 15/2024	
404	Jan 15/2026	
405	Sep 15/2024	
406	BLANK	
50-12-02		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	Jan 15/2025	
50-12-03		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	Sep 15/2024	
50-21-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
50-21-00		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
50-21-00		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
50-21-00		
801	May 15/2024	
802	May 15/2024	
803	May 15/2024	
804	May 15/2024	
805	May 15/2024	
806	May 15/2024	
807	May 15/2024	
808	May 15/2024	
50-21-01		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
50-21-02		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
50-21-03		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

50-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
50-21-03 (cont)		
406	May 15/2024	
407	May 15/2024	
408	BLANK	
50-21-04		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
50-21-04		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
50-21-04		
501	May 15/2024	
502	May 15/2024	
503	May 15/2024	
504	May 15/2024	
505	May 15/2024	
506	BLANK	
50-21-05		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
412	May 15/2024	
50-21-05 (cont)		
413	May 15/2024	
414	May 15/2024	
415	May 15/2024	
416	May 15/2024	
50-21-06		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
50-21-07		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
50-21-08		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	BLANK	
50-21-09		
201	May 15/2024	
202	May 15/2026	
203	May 15/2024	
204	May 15/2026	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
50-21-09 (cont)		
208	BLANK	
50-51-00		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
412	May 15/2024	
413	May 15/2024	
414	BLANK	
50-51-00		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

50-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
CARGO AND ACCESSORY COMPARTMENTS - DDG MAINTENANCE PROCEDURES	50-00-00		901	PTF ALL
DDG 50-21-02 Cargo Compartment Restraint Components - Cargo Compartment Used Inoperative - Preparation TASK 50-00-00-040-801			901	PTF ALL
CARGO COMPARTMENT - INSPECTION/CHECK	50-10-00		601	PTF ALL
Forward Cargo Compartment Liner Inspection TASK 50-10-00-200-801			601	PTF ALL
Cargo Compartment Blowout Panel Inspection TASK 50-10-00-200-802			603	PTF ALL
Cargo Restraint (Doorway) Visual Inspection TASK 50-10-00-210-801			604	PTF ALL
Cargo Compartment Tiedown Fitting Inspection TASK 50-10-00-200-803			605	PTF ALL
Aft Cargo Compartment Liner Inspection TASK 50-10-00-200-804			610	PTF ALL
CARGO COMPARTMENT - CLEANING/PAINTING	50-10-00		701	PTF ALL
Cargo Compartment Cleaning TASK 50-10-00-100-801			701	PTF ALL
CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS	50-10-01		801	PTF ALL
Loose or Damaged Tape Repair TASK 50-10-01-300-801			801	PTF ALL
Permanent Repair for Flat or Slightly Curved Liners TASK 50-10-01-340-801			802	PTF ALL
Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves TASK 50-10-01-300-803			811	PTF ALL
Permanent Repair for the Contour of the Ceiling Shroud TASK 50-10-01-300-804			813	PTF ALL
Neoprene Coated Cargo Liner Repair TASK 50-10-01-300-805			820	PTF ALL

50-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Silicone Impregnated Liner Repair TASK 50-10-01-300-806			830	PTF ALL
CARGO COMPARTMENT SIDEWALL LINERS - REMOVAL/INSTALLATION	50-10-02		401	PTF ALL
Cargo Compartment Sidewall Liners Removal TASK 50-10-02-000-801			401	PTF ALL
Cargo Compartment Sidewall Liners Installation TASK 50-10-02-400-801			407	PTF ALL
CARGO COMPARTMENT CEILING LINER - REMOVAL/INSTALLATION	50-10-03		401	PTF ALL
Cargo Compartment Ceiling Liner Removal TASK 50-10-03-000-801			401	PTF ALL
Cargo Compartment Ceiling Liner Installation TASK 50-10-03-400-801			406	PTF ALL
CARGO COMPARTMENT FLOOR PANEL - REMOVAL/INSTALLATION	50-10-04		401	PTF ALL
Cargo Compartment Floor Panel Removal TASK 50-10-04-000-801			401	PTF ALL
Cargo Compartment Floor Panel Installation TASK 50-10-04-400-801			437	PTF ALL
CARGO COMPARTMENT NET - REMOVAL/INSTALLATION	50-10-05		401	PTF ALL
Cargo Compartment Net Removal TASK 50-10-05-020-801			401	PTF ALL
Cargo Compartment Net Installation TASK 50-10-05-420-801			404	PTF ALL
Cargo Net Snap Latch Replacement TASK 50-10-05-900-801			404	PTF ALL
FORWARD CARGO COMPARTMENT FORWARD BULKHEAD LINER - REMOVAL/INSTALLATION	50-11-01		401	PTF ALL
Forward Cargo Compartment Forward Bulkhead Liner Removal TASK 50-11-01-000-801			401	PTF ALL
Forward Cargo Compartment Forward Bulkhead Liner Installation TASK 50-11-01-400-801			405	PTF ALL

50-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
FORWARD CARGO COMPARTMENT AFT BULKHEAD LINER - REMOVAL/INSTALLATION	50-11-02		401	PTF ALL
Forward Cargo Compartment Aft Bulkhead Liner Removal TASK 50-11-02-000-801			401	PTF ALL
Forward Cargo Compartment Aft Bulkhead Liner Installation TASK 50-11-02-400-801			404	PTF ALL
AFT CARGO COMPARTMENT FORWARD BULKHEAD LINER - REMOVAL/INSTALLATION	50-12-01		401	PTF ALL
Aft Cargo Compartment Forward Bulkhead Liner Removal TASK 50-12-01-000-801			401	PTF ALL
Aft Cargo Compartment Forward Bulkhead Liner Installation TASK 50-12-01-400-801			404	PTF ALL
AFT CARGO COMPARTMENT AFT BULKHEAD PANEL - REMOVAL/INSTALLATION	50-12-02		401	PTF ALL
Aft Cargo Compartment Aft Bulkhead Liner Removal TASK 50-12-02-000-801			401	PTF ALL
Aft Cargo Compartment Aft Bulkhead Liner Installation TASK 50-12-02-400-801			404	PTF ALL
WASTE TANK ENCLOSURE PANELS - REMOVAL/INSTALLATION	50-12-03		401	PTF ALL
Waste Tank Enclosure Panel Removal TASK 50-12-03-000-801			401	PTF ALL
Waste Tank Enclosure Panel Installation TASK 50-12-03-400-801			404	PTF ALL
AFT CARGO LOADING SYSTEM - MAINTENANCE PRACTICES	50-21-00		201	PTF ALL
Aft Cargo Loading System - Deactivation TASK 50-21-00-040-801			201	PTF ALL
Aft Cargo Loading System - Activation TASK 50-21-00-440-801			205	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
AFT SLIDING CARPET LOADING SYSTEM - REMOVAL/INSTALLATION	50-21-00		401	PTF ALL
Aft Sliding Carpet Loading System Removal TASK 50-21-00-000-801			401	PTF ALL
Aft Sliding Carpet Loading System Installation TASK 50-21-00-400-801			405	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM - INSPECTION/TEST	50-21-00		601	PTF ALL
Aft Cargo Compartment Sliding Carpet Loading System Inspection TASK 50-21-00-200-801			601	PTF ALL
Aft Cargo Compartment Sliding Carpet Loading System Operational Test TASK 50-21-00-700-801			604	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM - REPAIRS	50-21-00		801	PTF ALL
Aft Cargo Compartment Carpet - Repairs TASK 50-21-00-300-801			801	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM MOVABLE BULKHEAD - REMOVAL/INSTALLATION	50-21-01		401	PTF ALL
Aft Cargo Compartment Movable Bulkhead Removal TASK 50-21-01-000-801			401	PTF ALL
Aft Cargo Compartment Movable Bulkhead Installation TASK 50-21-01-400-801			406	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM SIDE GUIDE - REMOVAL/INSTALLATION	50-21-02		401	PTF ALL
Aft Cargo Compartment Side Guide Removal TASK 50-21-02-000-801			401	PTF ALL
Aft Cargo Compartment Side Guide Installation TASK 50-21-02-400-801			405	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
AFT SLIDING CARPET LOADING SYSTEM RAMP - REMOVAL/INSTALLATION	50-21-03		401	PTF ALL
Aft Cargo Compartment Ramp Removal TASK 50-21-03-000-801			401	PTF ALL
Aft Cargo Compartment Ramp Installation TASK 50-21-03-400-801			406	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM GUIDE PANEL - MAINTENANCE PRACTICES	50-21-04		201	PTF ALL
Aft Cargo Compartment Guide Panel Removal TASK 50-21-04-000-801			201	PTF ALL
Aft Cargo Compartment Guide Panel Installation TASK 50-21-04-400-801			205	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM SUPPORT PANELS - REMOVAL AND INSTALLATION	50-21-04		401	PTF ALL
Aft Cargo Compartment Support Panels Removal TASK 50-21-04-000-802			401	PTF ALL
Aft Cargo Compartment Support Panels Installation TASK 50-21-04-400-802			405	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM - ADJUSTMENT	50-21-04		501	PTF ALL
Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment TASK 50-21-04-820-801			501	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM DRIVE ASSEMBLY - REMOVAL/INSTALLATION	50-21-05		401	PTF ALL
Aft Cargo Compartment Drive Assembly Removal TASK 50-21-05-000-801			401	PTF ALL
Aft Cargo Compartment Drive Assembly Installation TASK 50-21-05-400-801			405	PTF ALL
Aft Cargo Compartment Carpet Detachment TASK 50-21-05-000-802			406	PTF ALL
Aft Cargo Compartment Carpet Attachment TASK 50-21-05-400-802			410	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Aft Cargo Compartment Actuator Motor Removal TASK 50-21-05-000-803			411	PTF ALL
Aft Cargo Compartment Actuator Motor Installation TASK 50-21-05-400-803			415	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM SAFETY FLAP ASSEMBLY - REMOVAL/INSTALLATION	50-21-06		401	PTF ALL
Aft Cargo Compartment Safety Flap Assembly Removal TASK 50-21-06-000-801			401	PTF ALL
Aft Cargo Compartment Safety Flap Assembly Installation TASK 50-21-06-400-801			405	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM CONTROL BOX - REMOVAL/INSTALLATION	50-21-07		401	PTF ALL
Aft Cargo Compartment Control Box Removal TASK 50-21-07-000-801			401	PTF ALL
Aft Cargo Compartment Control Box Installation TASK 50-21-07-400-801			406	PTF ALL
AFT SLIDING CARPET LOADING SYSTEM SUPPORT SYSTEMS - REMOVAL/INSTALLATION	50-21-08		401	PTF ALL
Aft Cargo Compartment Flexdown Support System Removal TASK 50-21-08-000-801			401	PTF ALL
Aft Cargo Compartment Flexdown Support System Installation TASK 50-21-08-400-801			404	PTF ALL
Aft Cargo Compartment Longitudinal Support System Removal TASK 50-21-08-000-802			404	PTF ALL
Aft Cargo Compartment Longitudinal Support System Installation TASK 50-21-08-400-802			407	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 50
CARGO AND ACCESSORY COMPARTMENTS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
AFT SLIDING CARPET LOADING SYSTEM MANUAL LOADING OPERATION - MAINTENANCE PRACTICES	50-21-09		201	PTF ALL
Deactivate for Manual Cargo Loading TASK 50-21-09-040-801			201	PTF ALL
Activate for Normal Operation from Manual Cargo Loading TASK 50-21-09-440-801			206	PTF ALL
ELECTRICAL EQUIPMENT RACK MOISTURE SHROUD - REMOVAL/INSTALLATION	50-51-00		401	PTF ALL
E1/E5 Moisture Shroud Removal TASK 50-51-00-000-801			401	PTF ALL
E1/E5 Moisture Shroud Installation TASK 50-51-00-400-801			405	PTF ALL
E2/E3/E4 Moisture Shroud Removal TASK 50-51-00-000-802			406	PTF ALL
E2/E3/E4 Moisture Shroud Installation TASK 50-51-00-400-802			409	PTF ALL
E6 Moisture Shroud Removal TASK 50-51-00-000-803			409	PTF ALL
E6 Moisture Shroud Installation TASK 50-51-00-400-803			413	PTF ALL
ELECTRICAL EQUIPMENT RACK MOISTURE SHROUD - INSPECTION/CHECK	50-51-00		601	PTF ALL
EE Center Moisture Shroud Visual Inspection TASK 50-51-00-210-801			601	PTF ALL
E6 Rack Moisture Shroud Visual Inspection TASK 50-51-00-210-802			603	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO AND ACCESSORY COMPARTMENTS - DDG MAINTENANCE PROCEDURES

1. General

A. This procedure has maintenance tasks for the Master Minimum Equipment List (MMEL) maintenance requirements as shown in the Dispatch Deviations Guide (DDG). These tasks are used to prepare the airplane for flight with certain systems/components inoperative.

B. This procedure also has the tasks that put the airplane back to its usual condition.

C. This is the task for the cargo and accessory compartment components:

(1) DDG 50-21-02 Cargo Compartment Restraint Components - Cargo Compartment Used Inoperative - Preparation

TASK 50-00-00-040-801

2. DDG 50-21-02 Cargo Compartment Restraint Components - Cargo Compartment Used Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight with the Cargo Compartment Restraint Components inoperative while the Cargo Compartment is being used.

B. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Cargo Compartment Restraint Component Deactivation

SUBTASK 50-00-00-840-001

(1) Deactivation procedures for most cargo restraint or cargo guiding equipment are either obvious (e.g. inoperative container stop needs to be released to retracted position or removed to prevent interference with cargo loading) or unnecessary (e.g. a damaged end stop can be left as is). With the exception of the restrictions below, no other procedures are provided in this document.

SUBTASK 50-00-00-840-002

(2) Refer to the Weight and Balance Manual for cargo loading limits when operating with restraint components missing or inoperative. If the number of inoperative or missing restraint components exceeds the allowance in the Weight and Balance Manual, inform Dispatch that the affected cargo compartment cannot be used.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT - INSPECTION/CHECK

1. General

A. This procedure has these tasks for the forward and aft cargo compartments:

(1) Cargo Compartment Liner Inspection

(2) Cargo Compartment Blowout Panel Inspection

(3) Cargo Restraint Inspection for the restraints at the cargo doors

(4) Cargo Compartment Tiedown Fitting Inspection.

25-CMR-02

TASK 50-10-00-200-801

2. Forward Cargo Compartment Liner Inspection

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task inspects all the liners in the forward cargo compartment.

(2) It is important that all of the fasteners, seams, and punctures are sealed correctly to keep the amount of oxygen in the compartment to a minimum.

(3) For 737-7 airplanes, this task satisfies Certification Maintenance Requirement (CMR) Item Number 25-CMR-02.

B. References

Reference	Title
21-32-05-000-801	Ceiling Blowout Panel Removal (P/B 401)
21-32-05-000-802	Cargo Compartment Bulkhead Blowout Panel Removal (P/B 401)
21-32-05-400-801	Ceiling Blowout Panel Installation (P/B 401)
21-32-05-400-802	Cargo Compartment Bulkhead Blowout Panel Installation (P/B 401)
25-00-00-300-801	Crushed-Core and Sandwich Panel Repair (P/B 801)
50-10-01 P/B 801	CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS
50-10-01-300-801	Loose or Damaged Tape Repair (P/B 801)
50-10-01-300-803	Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves (P/B 801)
50-10-01-300-804	Permanent Repair for the Contour of the Ceiling Shroud (P/B 801)
50-10-01-340-801	Permanent Repair for Flat or Slightly Curved Liners (P/B 801)
50-10-02-000-801	Cargo Compartment Sidewall Liners Removal (P/B 401)
50-10-02-400-801	Cargo Compartment Sidewall Liners Installation (P/B 401)
50-10-03-000-801	Cargo Compartment Ceiling Liner Removal (P/B 401)
50-10-03-400-801	Cargo Compartment Ceiling Liner Installation (P/B 401)
50-11-01-000-801	Forward Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-11-01-400-801	Forward Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
50-11-02-000-801	Forward Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)
50-11-02-400-801	Forward Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

D. Forward Cargo Compartment Liner Inspection

SUBTASK 50-10-00-210-001

(1) Make sure that there is no loose or damaged tape at the joints for the ceiling liner, sidewall liner or bulkhead liner.

(a) If there is loose or damaged tape, replace the tape (TASK 50-10-01-300-801).

SUBTASK 50-10-00-211-001

(2) Make sure that the ceiling liners, sidewall liners, bulkhead liners and panels, blowout panels and floor panels do not have cuts, tears, cracks, or holes.

(a) If there are cuts, tears, cracks or holes found on the blowout panel, replace the blowout panel (TASK 21-32-05-000-801 and TASK 21-32-05-400-801 or TASK 21-32-05-000-802 and TASK 21-32-05-400-802).

SUBTASK 50-10-00-211-003

(3) If damage is found, examine the non-honeycomb liners for damage as follows:

NOTE: These damage limits apply to all the non-honeycomb liners. These are the ceiling panels and shrouds, the sidewall liners. These damage limits do not apply to cracks along the contour of the ceiling shroud in the forward cargo compartment.

(a) Cuts that are longer than 36 in. (91 cm) are not repairable.

(b) L-shaped tears that are longer than 9 in. (23 cm) on either side are not repairable.

(c) Holes that are over 1.5 in. (3.8 cm) in diameter are not repairable.

(d) Cracks within 2 in. (5 cm) of other damage, or from any panel edge are not repairable.

SUBTASK 50-10-00-200-002

(4) If the damage is less than or equal to the limits, do the applicable task to repair the liner (CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS, PAGEBLOCK 50-10-01/801).

SUBTASK 50-10-00-200-003

(5) If the damage to the liner is not repairable, replace the liner as follows:

(a) If the damage is on the cargo compartment ceiling liners, replace the liner (TASK 50-10-03-000-801 and TASK 50-10-03-400-801).

(b) If the damage is on the cargo compartment sidewall liners, replace the liner (TASK 50-10-02-000-801 and TASK 50-10-02-400-801).

(c) If the damage is on the cargo compartment forward bulkhead liner, replace the liner (TASK 50-11-01-000-801 and TASK 50-11-01-400-801).

(d) If the damage is on the cargo compartment aft bulkhead liner, replace the liner (TASK 50-11-02-000-801 and TASK 50-11-02-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-00-211-002

(6) If damage is found, examine the contour of the ceiling shroud in the cargo compartment for damage as follows:

(a) Make sure that cracks are at least 2 in. (5 cm) away from other damage and from the panel edge on all sides.

NOTE: These damage limit only apply to cracks or cuts along the bend of the shroud. For damage to the flat parts of the shroud, use the damage limits and repair instructions for non-honeycomb linings.

(b) Do these tasks to repair the ceiling shroud (Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves, TASK 50-10-01-300-803 and Permanent Repair for the Contour of the Ceiling Shroud, TASK 50-10-01-300-804).

SUBTASK 50-10-00-960-001

(7) If the damage is greater than the limits, replace the liner (TASK 50-10-03-000-801 and TASK 50-10-03-400-801).

SUBTASK 50-10-00-200-004

(8) If damage is found, examine the nomex honeycomb panels for damage as follows:

(a) For panels with core damage, there must be at least 0.5 in. (1.3 cm) of undamaged core around the damaged area.

SUBTASK 50-10-00-300-003

(9) If the damage is less than or equal to the limit, do the following steps:

NOTE: Dents on the cargo compartment bulkhead panel assembly that shows no damage to the integrity of the facesheet (e.g. holes, cracks, damaged fiber) are structurally acceptable and repair is not necessary.

(a) Do this task Crushed-Core and Sandwich Panel Repair, TASK 25-00-00-300-801.

(b) Apply a flame-resistant patch (Permanent Repair for Flat or Slightly Curved Liners, TASK 50-10-01-340-801).

NOTE: Multiple damage sites may be covered with longer strips in lieu of multiple shorter strips.

NOTE: Patch may be applied over fastener locations by removing the fastener and reinstalling through the patch.

NOTE: Splices in the patch system require a minimum of one (1) inch overlap.

SUBTASK 50-10-00-960-002

(10) If the damage is greater than the limit, replace the liner (TASK 50-10-03-000-801 and TASK 50-10-03-400-801).

——— END OF TASK ———

TASK 50-10-00-200-802

3. Cargo Compartment Blowout Panel Inspection

A. General

(1) This task is for the inspection of the cargo compartment blowout panels.

B. References

Reference	Title
21-32-05-000-801	Ceiling Blowout Panel Removal (P/B 401)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
21-32-05-000-802	Cargo Compartment Bulkhead Blowout Panel Removal (P/B 401)
21-32-05-400-801	Ceiling Blowout Panel Installation (P/B 401)
21-32-05-400-802	Cargo Compartment Bulkhead Blowout Panel Installation (P/B 401)

C. Location Zones

Zone	Area
100	Lower Half of Fuselage

D. Blowout Panel Inspection

SUBTASK 50-10-00-210-002

(1) Make sure that the blowout panel is fully engaged between the retaining ring and the rectangular seal.

(a) Do these steps to put the blowout panel in the correct position if it is not fully engaged:

1) Remove the screws and washers that attach the grill to the frame.

2) Remove the grill.

3) Loosen the applicable bolts that attach the retaining ring to the frame in the area where the blowout panel came out.

4) Make sure that the blowout panel is not torn, punctured, or creased.

a) If it is necessary, replace the blowout panel.

5) Put the blowout panel in the position between the retaining ring and the rectangular seal.

6) Tighten the bolts that attach the retaining ring to the frame.

7) Install the screws and washers to attach the grill to the frame.

SUBTASK 50-10-00-210-003

(2) Make sure that the grill is firmly attached and is aft of the blowout panel.

SUBTASK 50-10-00-960-003

(3) If it is necessary, replace the blowout panel (TASK 21-32-05-000-801 and TASK 21-32-05-400-801 or TASK 21-32-05-000-802 and TASK 21-32-05-400-802).

——— END OF TASK ———

TASK 50-10-00-210-801

4. Cargo Restraint (Doorway) Visual Inspection

(Figure 602)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the visual inspection of the doorway cargo restraint nets.

B. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Cargo Restraint (Doorway) Visual Inspection

SUBTASK 50-10-00-210-004

(1) Visually examine the cargo restraint nets at the cargo door as follows:

(a) Make sure that the straps are not worn or frayed.

(b) Make sure that each strap attaches to an anchor point.

——— END OF TASK ———

TASK 50-10-00-200-803

5. Cargo Compartment Tiedown Fitting Inspection

Figure 602

A. General

(1) This task is for the inspection of the cargo compartment tiedown fitting

B. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Cargo Compartment Tiedown Fitting Inspection

SUBTASK 50-10-00-210-005

(1) Do a visual check of the tiedown fittings in the forward and aft cargo compartments as follows:


(a) Make sure that the tiedown fittings in the forward and aft cargo compartments are installed correctly.


(b) Make sure that the tiedown fittings are not worn.

(c) Make sure that the tiedown fittings can hold the nets or straps and the cargo in its position.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

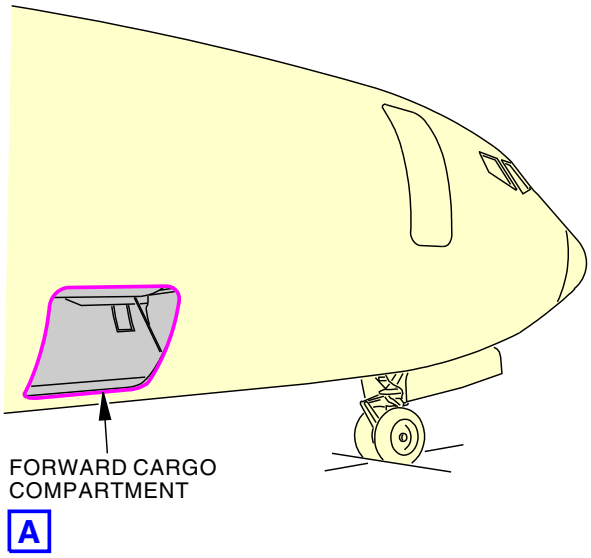


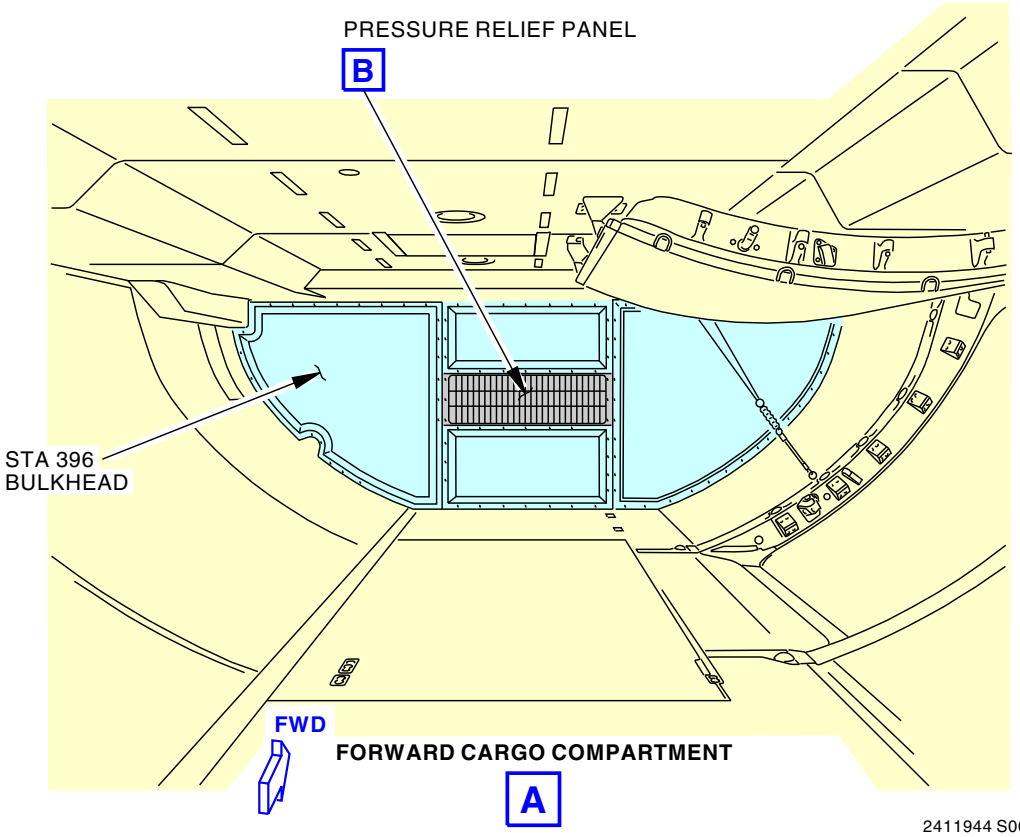

2411944 S00061529561_V3


Forward Cargo Compartment Sta 396 Bulkhead Inspection
Figure 601/50-10-00-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

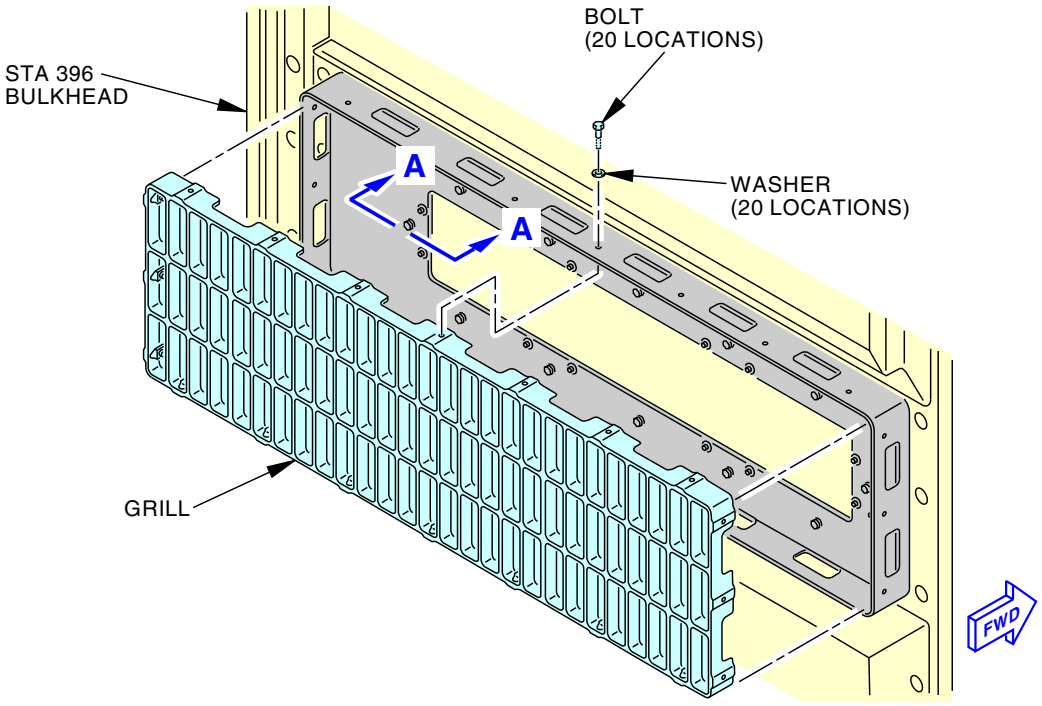

PRESSURE RELIEF PANEL

B

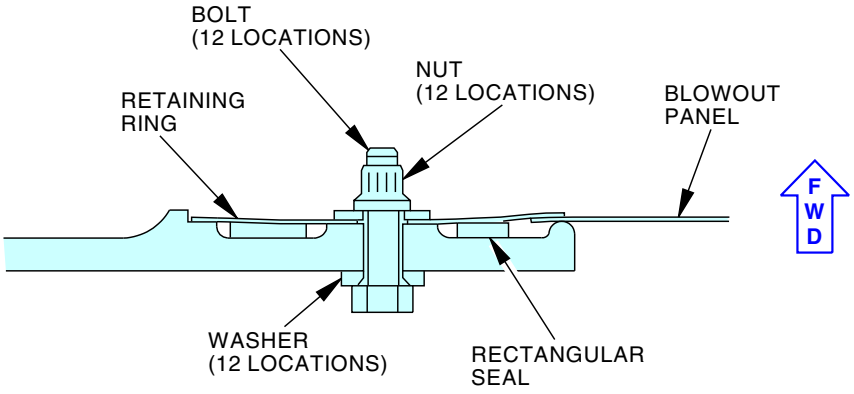


A-A

2411945 S00061529562_V2


Forward Cargo Compartment Sta 396 Bulkhead Inspection
Figure 601/50-10-00-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

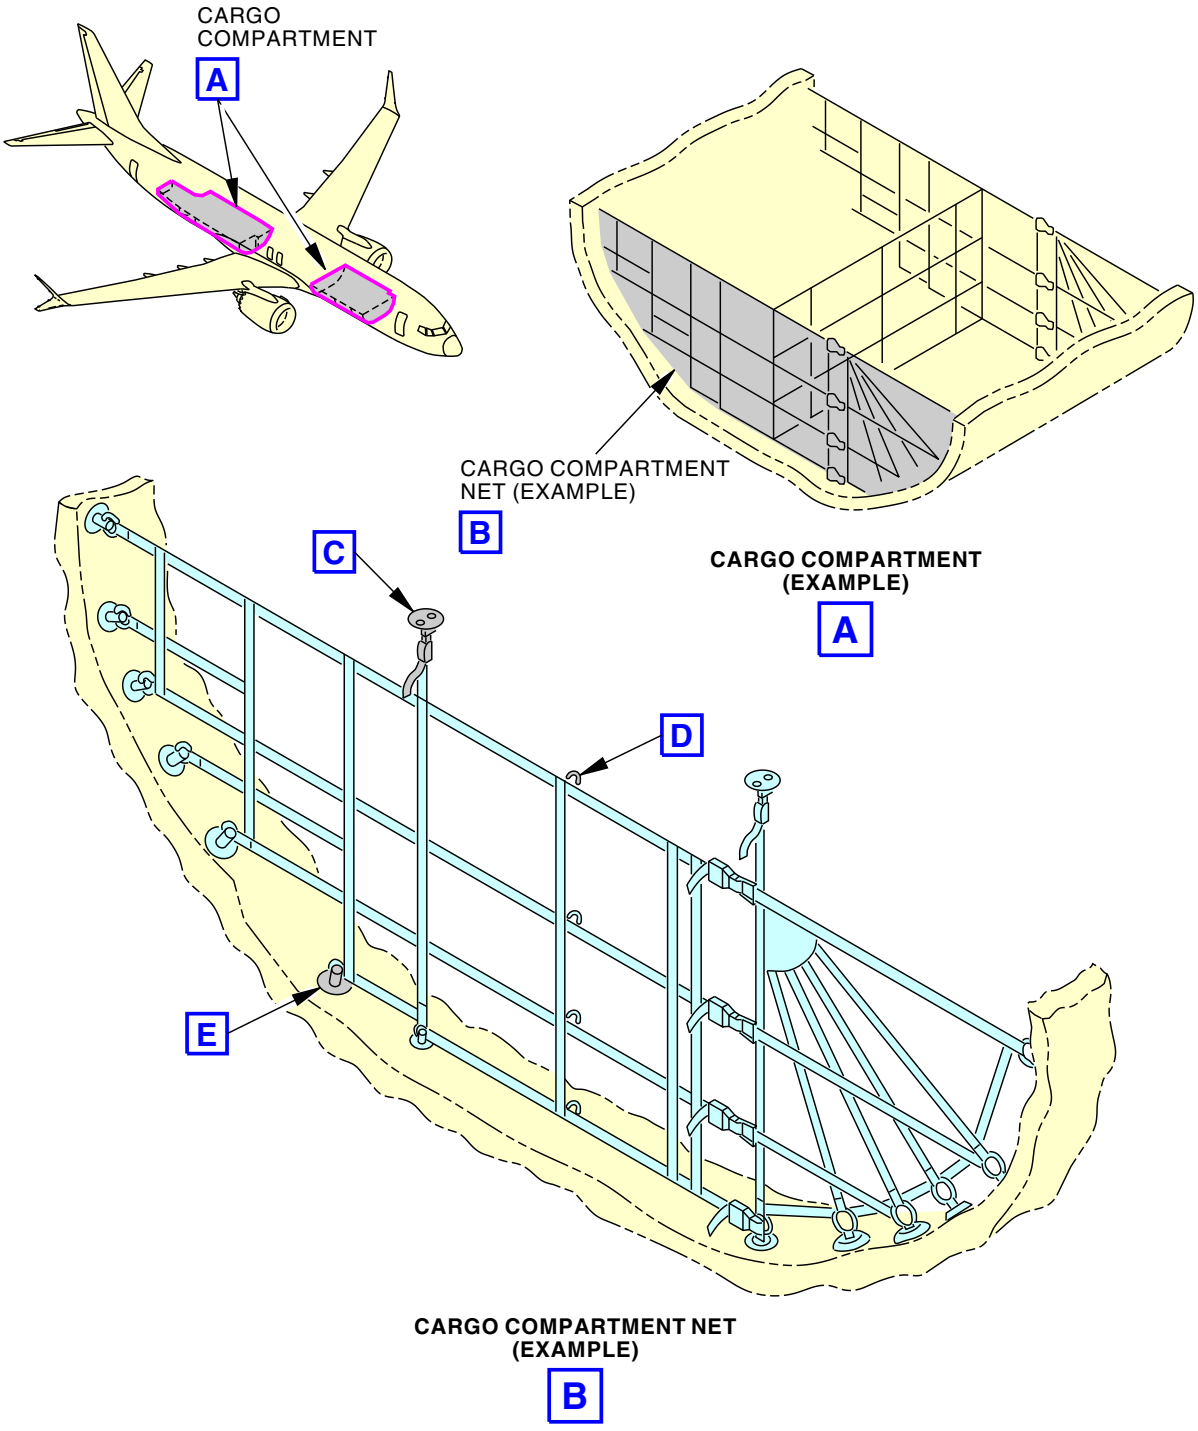

Tiedown Fitting Inspection
Figure 602/50-10-00-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

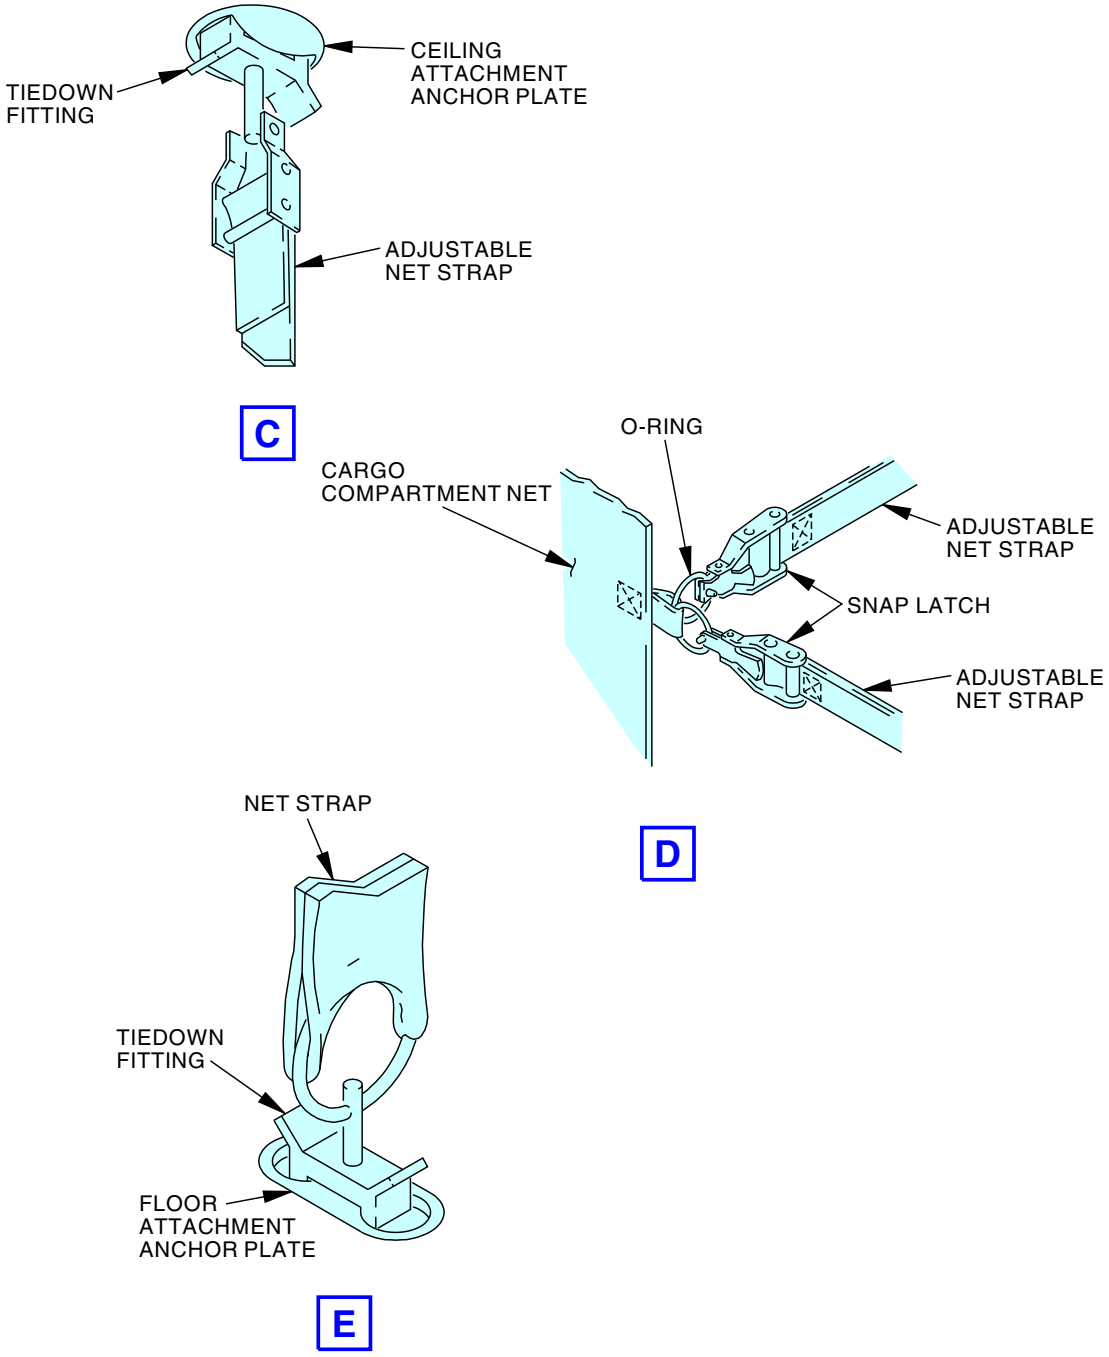

2411947 S00061529564_V3

Tiedown Fitting Inspection
Figure 602/50-10-00-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

25-CMR-02

TASK 50-10-00-200-804

6. Aft Cargo Compartment Liner Inspection

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task inspects all the liners in the aft cargo compartment.

(2) It is important that all of the fasteners, seams, and punctures are sealed correctly to keep the amount of oxygen in the compartment to a minimum.

(3) For 737-7 airplanes, this task satisfies Certification Maintenance Requirement (CMR) Item Number 25-CMR-02.

B. References

Reference	Title
21-32-05-000-801	Ceiling Blowout Panel Removal (P/B 401)
21-32-05-000-802	Cargo Compartment Bulkhead Blowout Panel Removal (P/B 401)
21-32-05-400-801	Ceiling Blowout Panel Installation (P/B 401)
21-32-05-400-802	Cargo Compartment Bulkhead Blowout Panel Installation (P/B 401)
25-00-00-300-801	Crushed-Core and Sandwich Panel Repair (P/B 801)
50-10-01 P/B 801	CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS
50-10-01-300-801	Loose or Damaged Tape Repair (P/B 801)
50-10-01-300-803	Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves (P/B 801)
50-10-01-300-804	Permanent Repair for the Contour of the Ceiling Shroud (P/B 801)
50-10-01-340-801	Permanent Repair for Flat or Slightly Curved Liners (P/B 801)
50-10-02-000-801	Cargo Compartment Sidewall Liners Removal (P/B 401)
50-10-02-400-801	Cargo Compartment Sidewall Liners Installation (P/B 401)
50-10-03-000-801	Cargo Compartment Ceiling Liner Removal (P/B 401)
50-10-03-400-801	Cargo Compartment Ceiling Liner Installation (P/B 401)
50-12-01-000-801	Aft Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-12-01-400-801	Aft Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)
50-12-02-000-801	Aft Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)
50-12-02-400-801	Aft Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Aft Cargo Compartment Liner Inspection

SUBTASK 50-10-00-210-006

(1) Make sure that there is no loose or damaged tape at the joints for the ceiling liner, sidewall liner or bulkhead liner.

(a) If there is loose or damaged tape, replace the tape (TASK 50-10-01-300-801).

SUBTASK 50-10-00-211-004

(2) Make sure that the ceiling liners, sidewall liners, bulkhead liners and panels, blowout panels and floor panels do not have cuts, tears, cracks, or holes.

(a) If there are cuts, tears, cracks or holes found on the blowout panel, replace the blowout panel (TASK 21-32-05-000-801 and TASK 21-32-05-400-801 or TASK 21-32-05-000-802 and TASK 21-32-05-400-802).

SUBTASK 50-10-00-211-005

(3) If damage is found, examine the non-honeycomb liners for damage as follows:

NOTE: These damage limits apply to all the non-honeycomb liners. These are the ceiling panels and shrouds, the sidewall liners, and the forward bulkhead in the aft cargo compartment.

(a) Cuts that are longer than 36 in. (91 cm) are not repairable.

(b) L-shaped tears that are longer than 9 in. (23 cm) on either side are not repairable.

(c) Holes that are over 1.5 in. (3.8 cm) in diameter are not repairable.

(d) Cracks within 2 in. (5 cm) of other damage, or from any panel edge are not repairable.

SUBTASK 50-10-00-200-005

(4) If the damage is less than or equal to the limits, do the applicable task to repair the liner (CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS, PAGEBLOCK 50-10-01/801).

SUBTASK 50-10-00-200-006

(5) If the damage to the liner is not repairable, replace the liner as follows:

(a) If the damage is on the cargo compartment ceiling liners, replace the liner (TASK 50-10-03-000-801 and TASK 50-10-03-400-801).

(b) If the damage is on the cargo compartment sidewall liners, replace the liner (TASK 50-10-02-000-801 and TASK 50-10-02-400-801).

(c) If the damage is on the cargo compartment forward bulkhead liner, replace the liner (TASK 50-12-01-000-801 and TASK 50-12-01-400-801).

(d) If the damage is on the cargo compartment aft bulkhead liner, replace the liner (TASK 50-12-02-000-801 and TASK 50-12-02-400-801).

SUBTASK 50-10-00-211-006

(6) If damage is found, examine the contour of the ceiling shroud in the cargo compartment for damage as follows:

(a) Make sure that cracks are at least 2 in. (5 cm) away from other damage and from the panel edge on all sides.

NOTE: These damage limit only apply to cracks or cuts along the bend of the shroud. For damage to the flat parts of the shroud, use the damage limits and repair instructions for non-honeycomb linings.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Do these tasks to repair the ceiling shroud (Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves, TASK 50-10-01-300-803 and Permanent Repair for the Contour of the Ceiling Shroud, TASK 50-10-01-300-804).

SUBTASK 50-10-00-960-005

(7) If the damage is greater than the limits, replace the liner (TASK 50-10-03-000-801 and TASK 50-10-03-400-801).

SUBTASK 50-10-00-200-007

(8) If damage is found, examine the nomex honeycomb panels for damage as follows:

(a) For panels with core damage, there must be at least 0.5 in. (1.3 cm) of undamaged core around the damaged area.

SUBTASK 50-10-00-300-004

(9) If the damage is less than or equal to the limits, do the following steps:

NOTE: Dents on the aft cargo compartment bulkhead panel assembly that shows no damage to the integrity of the facesheet (e.g. holes, cracks, damaged fiber) are structurally acceptable and repair is not necessary.

(a) Do this task: Crushed-Core and Sandwich Panel Repair, TASK 25-00-00-300-801.

(b) Apply a flame-resistant patch (TASK 50-10-01-340-801).

NOTE: Multiple damage sites may be covered with longer strips in lieu of multiple shorter strips.

NOTE: Patch may be applied over fastener locations by removing the fastener and reinstalling through the patch.

NOTE: Splices in the patch system require a minimum of 1 in. (3 cm) overlap.

SUBTASK 50-10-00-960-004

(10) If the damage is greater than the limit, replace the liner (TASK 50-10-03-000-801 and TASK 50-10-03-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT - CLEANING/PAINTING

1. General

A. This procedure contains the following task:

(1) Cargo Compartment Cleaning.

TASK 50-10-00-100-801

2. Cargo Compartment Cleaning

A. General

(1) This task is for the cleaning of the cargo compartment.

B. References

Reference	Title
20-40-11-910-801	Static Grounding (P/B 201)
24-22-00-860-801	Supply Electrical Power (P/B 201)
24-22-00-860-802	Remove Electrical Power (P/B 201)
51-21-91-620-802	Application of Corrosion Inhibiting Compound (P/B 701)

C. Tools/Equipment

Reference	Description
STD-1068	Vacuum - High Capacity
STD-1439	Container - Drum, 55 Gallon (208 Liter)
STD-7824	Pump - Regulated Airless, 50-1,200 psi working pressure, 3-8 gpm output

D. Consumable Materials

Reference	Description	Specification
B00003	Cleaner - Emulsion Alkaline - GMC 528B (use until stock depleted)	
B00005	Cleaner - Alkaline - Cee Bee 280	BAC5744
B00008	Cleaner - Alkaline - Oakite 204	
B00012	Cleaner - Alkaline - Turco Jet Clean C	BAC5744
B00013	Cleaner - Alkaline - Dubois C-1102	BAC5744
B00014	Cleaner - Zip-Chem Products Calla 301 Heavy Duty Cleaner	BAC5744
B00015	Cleaner - Heavy Duty, Multipurpose - Calla 301A	BAC5744, AMS 1526-A, AMS 1550-A
B00016	Cleaner - Alkaline - TEC Formula No. 1 (Use until stock depleted)	
B00017	Cleaner - Alkaline - Pace B-82 (Formerly Pacific B-82)	BMS11-12
B00325	Cleaner - Alkaline - Turco Jet Clean E	
B00335	Cleaner - Alkaline - TEC 86-2 (Use until stock depleted)	
B00402	Cleaner - Aerospace Equipment	MIL-PRF-87937
B00432	Solvent - Alkaline - Cee Bee A-410B	
B00433	Solvent - Alkaline - Hydrex 09	
B00434	Solvent - Alkaline - Metaclean AC	

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00252	Film - Polyethylene Film And Sheeting	ASTM D2103 (Supersedes L-P-512)
G00253	Material - Barrier Materials, Greaseproofed, Waterproof, Flexible, Heat-Sealable	MIL-PRF-121 (Supersedes MIL-B-121)
G00258	Paper - Moisture Resistant, Laminated - Angier 30	
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)
G50412	Paper - Litmus (Used to find the acidity or alkalinity of a liquid solution)	

E. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

F. Prepare for the Cleaning

SUBTASK 50-10-00-860-001

(1) Do this task: Remove Electrical Power, TASK 24-22-00-860-802.

SUBTASK 50-10-00-910-001

(2) Do this task: Static Grounding, TASK 20-40-11-910-801.

SUBTASK 50-10-00-020-001

(3) Remove all blankets and components that are not resistant to damage from solvents and water.

SUBTASK 50-10-00-950-001

CAUTION

APPLY THE MASKING TAPE AND PAPER TO ALL AREAS THAT YOU WILL NOT CLEAN. YOU MUST OBEY THE MANUFACTURER'S INSTRUCTIONS. THESE CLEANERS HAVE HIGH CONCENTRATION LEVELS AND CAN CAUSE DAMAGE TO THE PAINT OR CAN CAUSE THE CORROSION OF METAL SURFACES

(4) Cover the areas that you will not clean.

NOTE: This includes protection of all the lubricated or waxed surfaces and the latches and fittings.

(a) Use Scotch Flatback Masking Tape 250, G00270 with one of these protective materials:

1) polyethylene film, G00252
2) barrier material, G00253
3) Angier 30 paper, G00258.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-00-100-001

(5) Use these standard tools and equipment:

(a) A high capacity vacuum, STD-1068 (wet and dry)

(b) 55 gallon (208 liter) drum container, STD-1439 mounted on casters

(c) Hose Assembly - 6 foot length, 1 1/2-inch ID; with a swivel connection to the pump - Graco Model 206-266 siphon tube

(d) Hose - 50 foot length, 3/8-inch ID, 2250 PSI working pressure with 3/8-inch pipe fitting at each end - Graco Model 207-831

(e) Portable Airless Pump - Graco bulldog Model 207-463; Hydraclean Pressure with 7 gpm output, 1200 psi working pressure, 10:1 ratio pump on pneumatic cart Model 208-156, with regulator assembly 206-199; Graco Incorporated, 60-11th Ave NE, Minneapolis MN 53440

(f) Portable airless pump, STD-7824 - Regulated airless, 50 - 1200 psi working pressure, 3 - 8 gpm output.

SUBTASK 50-10-00-110-001

(6) Use one of these alkaline emulsion solvents:

(a) Calla 301 cleaner, B00014

(b) Cee Bee A-410B solvent, B00432

(c) Cee Bee 280 cleaner, B00005

(d) Dubois C-1102 cleaner, B00013

(e) GMC 528B cleaner, B00003

(f) Hydrex 09 solvent, B00433

(g) Metaclean AC solvent, B00434

(h) Oakite 204 cleaner, B00008

(i) Pace B-82 alkaline cleaner, B00017

(j) TEC Formula No. 1 cleaner, B00016

(k) TEC 86-2 cleaner, B00335

(l) Turco Jet Clean C cleaner, B00012

(m) Turco Jet Clean E cleaner, B00325

NOTE: The following cleaners are optional to GMC 528B cleaner, B00003:

- cleaner, B00402
- Cee Bee 280 cleaner, B00005
- Oakite 204 cleaner, B00008
- Calla 301A cleaner, B00015.

G. Cargo Compartment Cleaning

SUBTASK 50-10-00-160-001

(1) Remove the dirt, fluids, and the other loose material with a high capacity vacuum, STD-1068 as necessary.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-00-110-002

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM THESE MATERIALS. PUT ON A PROTECTIVE SPLASH GOGGLE AND GLOVES WHEN YOU USE THESE MATERIALS. KEEP THESE MATERIALS AWAY FROM SPARKS, FLAME, AND HEAT. THESE MATERIALS ARE POISONOUS AND FLAMMABLE AND CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

(2) Apply a solution of alkaline emulsion solvent and water to the compartment with the airless pump, STD-7824 or the Graco bulldog portable airless pump.

(a) Use an alkaline emulsion solvent that is on the list in this task.

(b) Let the solution soak for 5 minutes, but do not let it dry.

(c) Apply more solution as necessary to keep the surfaces wet.

SUBTASK 50-10-00-160-002

(3) Remove the solution and the materials loosened by the solution with the high capacity vacuum, STD-1068.

SUBTASK 50-10-00-160-003

(4) If it is necessary, do the steps again to apply and remove the cleaning solution until the compartment is clean.

SUBTASK 50-10-00-170-001

(5) Flush the compartment with pressurized clean water.

SUBTASK 50-10-00-160-004

(6) Remove the water with the high capacity vacuum, STD-1068.

SUBTASK 50-10-00-750-001

(7) Do this pH check for the compartment with litmus paper, G50412 as follows:

(a) Do a pH check of the clean water.

(b) Do a pH check of the water which remains caught in the compartment.

1) Do this check in more than one area.

(c) Compare the pH check of the clean water with the pH of the water that remains in the compartment.

(d) Make sure that the pH in the compartment is not more than 1 pH unit of the pH in the clean water.

(e) If it is necessary, flush the compartment again with clean water to decrease the pH unit.

SUBTASK 50-10-00-160-005

(8) Dry the area with a clean cotton wiper, G00034.

SUBTASK 50-10-00-620-001

(9) Do this task: Application of Corrosion Inhibiting Compound, TASK 51-21-91-620-802.

H. Put the Airplane Back to its Usual Condition

SUBTASK 50-10-00-950-002

(1) Remove all of the masking tape and paper.

SUBTASK 50-10-00-410-001

(2) Install the equipment you removed.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-00-910-002

(3) Remove the static ground.

SUBTASK 50-10-00-860-003

(4) If It is necessary, do this task: Supply Electrical Power, TASK 24-22-00-860-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS

1. General

A. This procedure contains these tasks:

(1) Loose or Damaged Tape Repair

(2) Permanent Repair for Flat or Slightly Curved Liners

(3) Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves.

(4) Permanent Repair for the Contour of the Ceiling Shroud

(5) Neoprene Coated Cargo Liner Repair

(6) Silicone Impregnated Liner Repair

TASK 50-10-01-300-801

2. Loose or Damaged Tape Repair

A. General

(1) It is not necessary to remove the liners from the airplane for this repair.

B. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G02361	Tape - Cargo Lining Joint Seal	BMS5-146

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Loose or Damaged Tape Repair

SUBTASK 50-10-01-160-001

(1) Remove or discard all loose or damaged tape.

SUBTASK 50-10-01-160-002

(2) Clean the damaged area with a clean cotton wiper, G00034, that is moist with alcohol, B00130.

SUBTASK 50-10-01-160-003

(3) Dry the area with a clean dry cotton wiper, G00034, before the alcohol dries.

SUBTASK 50-10-01-160-004

(4) Clean the area again fully to remove the dirt, oil, paint, and other unwanted materials.

NOTE: A clean surface is necessary for a good bond.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-420-001

WARNING	DO NOT PUT TAPE ON THE SMOKE DETECTOR TUBES OR THE FIRE EXTINGUISHER OUTLET TUBES. THE SMOKE DETECTOR AND THE FIRE EXTINGUISHER SYSTEM WILL NOT SENSE A FIRE IF THERE IS TAPE ON THE TUBE OR OUTLETS. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

WARNING	DO NOT APPLY TAPE ON THE BLOWOUT PANELS OR CAP STRIPS ON THE CEILING LINER. IN THE AFT CARGO COMPARTMENT, DO NOT APPLY TAPE BETWEEN THE CEILING LINER AND CAP STRIP ALONG THE CEILING CENTERLINE. THE JOINT GIVES A VENT PATH FOR AIR FLOW IF A DECOMPRESSION OCCURS. IF THE PRESSURE RELIEF FUNCTION OPERATES INCORRECTLY, THIS CAN CAUSE INJURY TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(5) Apply tape, G02361.

NOTE: Do not use the old tape again. If you use the tape again, it will not have a satisfactory bond.

(a) Make sure that the tape is within shelf life limits for the optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

——— END OF TASK ———

TASK 50-10-01-340-801

3. Permanent Repair for Flat or Slightly Curved Liners

(Figure 801)

A. General

(1) This task gives the following instructions:

(a) Four alternatives for permanent repair of the cargo liners.

NOTE: It is only necessary to use one of the four alternatives.

(b) Specific repair of the edges of the vertical and sloping sidewall liners with torn out fasteners.

(c) Specific repair of the edges of the maintenance access panels with torn out fasteners.

B. References

Reference	Title
50-10-02-000-801	Cargo Compartment Sidewall Liners Removal (P/B 401)
50-10-02-400-801	Cargo Compartment Sidewall Liners Installation (P/B 401)
50-10-03-000-801	Cargo Compartment Ceiling Liner Removal (P/B 401)
50-10-03-400-801	Cargo Compartment Ceiling Liner Installation (P/B 401)
50-12-01-000-801	Aft Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-12-01-400-801	Aft Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Consumable Materials

Reference	Description	Specification
A00016	Adhesive - Pressure Sensitive Film For Interior Non-Structural Bonding	BMS5-91
A01016	Adhesive - Epoxy Resin, High Temperature - EP65HT-1	
A50022	Patch - Cargo Liner, Self-Adhesive Speed Patch - AF844, AF848, or AF888 (based on size)	
A50426	Tape - Cargo Lining, 2 inches wide	BMS5-146 Type I Class 1 Grade A
A50465	Tape - Cargo Lining, 3 inches wide	BMS5-146 Type I Class 1 Grade A
B00065	Alcohol - Denatured, Ethyl (Ethanol)	AMS 3002 (Supersedes O-A-396)
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
B00102	Abrasive - Aluminum Oxide Coated Cloth	
B00137	Abrasive - Garnet Coated Paper	
G00088	Fabric, General Purpose, Rigid, Fire Retarded, Glass Fabric Reinforced Plastic Sheeting	BMS8-2
G02163	Sheet - Fire Resistant Glass Fiber Reinforced Phenolic Laminate Cargo Liner	BMS8-223
G02393	Patch - Fiberglass, Heat-Resistant - Thermion 9290	
G50418	Patch - Cargo Liner, Self-Adhesive Speed Patch - Gillpatch III 6306 System Kit	
G50885	Tape - Nitto P-55 (Formerly Permacel) Flame Retardant Double Coated Cloth Tape	BMS5-133
G51504	Sheet - Fire Resistant Glass Fiber Reinforced Phenolic Laminate Cargo Liner	BMS8-223 Type 40

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Prepare for the Repair

SUBTASK 50-10-01-000-001

(1) If it is necessary to remove the liner for repair, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.

(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(c) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-210-007

(2) Examine the non-honeycomb lining for damage as follows:

NOTE: These damage limits apply to all the non-honeycomb linings (the ceiling panels and shrouds, the sidewall linings, and the forward bulkhead in the aft cargo compartment).

(a) Make sure that cuts that are 36 in. (91 cm) long or less.

(b) Make sure that L-shaped tears are 9 in. (23 cm) long or less on either side.

(c) Make sure that holes are 1.5 in. (3.8 cm) in diameter or smaller.

(d) Make sure that the cracks length are 35 in. (88.9 cm) long or less and are at least 2 in. (5.1 cm) away from other damage and from the panel edge on all sides.

1) Do this task: Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves, TASK 50-10-01-300-803 and Permanent Repair for the Contour of the Ceiling Shroud, TASK 50-10-01-300-804.

F. Alternative 1 - Repair the Cargo Liners With Screws and a Bonded Patch

SUBTASK 50-10-01-340-015

(1) Make a patch from the applicable material, sheet, G02163, or fabric, G00088. The sheet, G02163 or fabric, G00088 must be the same thickness as the liner where the repair is necessary.

NOTE: Cargo areas contain sheet, G02163, and fabric, G00088. They are interchangeable. The only difference is that the fabric, G00088, is heavier and more durable. Both have the same fire retardant value.

NOTE: The patch must make a 2-inches (51 mm) overlap on the area that is not damaged. For example, the patch dimension that is necessary for a 1.5-inches (38 mm) diameter hole would be 5.5-inches (140 mm) diameter.

SUBTASK 50-10-01-120-002

(2) Rub the back of the patch with abrasive cloth, B00102 (80 grit).

SUBTASK 50-10-01-120-003

(3) Use abrasive cloth, B00102 (80 grit), to remove all signs of the Tedlar on the area of the liner to be contacted by the patch.

NOTE: Tedlar is the protective white layer that is on the front of the liner.

SUBTASK 50-10-01-160-007

(4) Clean all the surfaces with alcohol, B00065, or solvent, B00083, to remove the loose particles.

SUBTASK 50-10-01-340-016

(5) Apply adhesive, A00016, or equivalent, to the back of the patch.

SUBTASK 50-10-01-340-017

(6) Put the patch over the center of the damaged area.

SUBTASK 50-10-01-340-018

(7) Apply pressure to the patch to make sure that there is a good bond.

SUBTASK 50-10-01-340-019

(8) Attach the patch permanently with steel sheet metal screws. Install the screws approximately 1.25 in. (31.75 mm) apart and 0.60 in. (15.24 mm) from the edge of the patch.

NOTE: Put the screws in positions where they do not touch the structure that is behind the panel.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-340-020

(9) Apply Tape, A50426, on the heads of the screws to keep them installed through the fiberglass liner and patch.

(a) Make sure that the tape is within shelf life limits for optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

G. Alternative 2 - Thermion Repair System

SUBTASK 50-10-01-340-021

(1) Get the correct Thermion 9290 patch, G02393, for the shape of the damage.

NOTE: The patch must make a 2-inches (51 mm) overlap on the area that is not damaged. For example, the patch dimension that is necessary for a 1.5-inches (38 mm) diameter hole would be 5.5-inches (140 mm) diameter.

SUBTASK 50-10-01-120-004

(2) Rub the back of the patch with abrasive cloth, B00102 (80 grit), to remove the gloss.

(a) Be careful to not rub the impregnated scrim area.

SUBTASK 50-10-01-120-005

(3) Use abrasive, B00137 (80 grit), to remove all signs of the Tedlar on the area of the liner to be contacted by the patch.

NOTE: Tedlar is the protective white layer that is on the front of the liner.

SUBTASK 50-10-01-160-008

(4) Clean all the surfaces with alcohol, B00065, or solvent, B00083, to remove the loose particles.

SUBTASK 50-10-01-340-022

(5) Apply EP65HT-1 adhesive, A01016, to the back of the patch and to the liner.

SUBTASK 50-10-01-340-023

(6) Put the patch over the center of the damaged area.

SUBTASK 50-10-01-340-024

(7) Apply pressure to the patch until the excess adhesive comes out from the edges.

SUBTASK 50-10-01-340-025

(8) Put Tape, A50426, around the edges of the patch.

NOTE: The tape will hold the patch while the adhesive dries (approximately 30 minutes). Also, the tape will protect the edges of the patch when the airplane is in service.

(a) Make sure that the tape is within shelf life limits for optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

H. Alternative 3 - Akro Fireguard System

SUBTASK 50-10-01-340-026

(1) Get the correct Akro Fireguard repair kit, Akro Fireguard patch, A50022, for the shape of the damage.

NOTE: The patch must make a 2-inches (51 mm) overlap on the area that is not damaged. For example, the patch dimension that is necessary for a 1.5-inches (38 mm) diameter hole would be 5.5-inches (140 mm) diameter.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-340-027

(2) Use the Akro installation instructions (in the kit) to attach the patch over the center of the damage.

I. Alternative 4 - Gillpatch III System

SUBTASK 50-10-01-340-028

(1) Get the Gillpatch III System patch, G50418, each kit has complete instructions to identify the repairable sizes and apply the patch.

(a) The patch, G50418, must extend 2 inches beyond all sides of a tear or puncture.

NOTE: The patch must make a 2-inches (51 mm) overlap on the area that is not damaged. For example, the patch dimension that is necessary for a 1.5-inches (38 mm) diameter hole would be 5.5-inches (140 mm) diameter.

SUBTASK 50-10-01-160-009

(2) Use a lint-free clean, dry cloth and alcohol, B00065, or solvent, B00083, or equivalent, to remove any oil, grease, dirt or stain from the damaged area to be patched.

SUBTASK 50-10-01-210-004

(3) Make sure that the area is clean and dry before you apply the patch, G50418.

(a) Wipe off any film residue that remains on the liner surface.

SUBTASK 50-10-01-210-005

(4) If there are any Tedlar surface, note that it is not necessary to remove them, as the patch, G50418, can be applied directly to Tedlar.

SUBTASK 50-10-01-340-029

(5) When you are ready to apply the patch, G50418, peel the protective backing from the pressure sensitive adhesive on the back of the patch, G50418.

NOTE: Handle the patch very carefully as the adhesive will adhere aggressively to any surface that comes in contact with it.

SUBTASK 50-10-01-390-003

(6) Center the adhesive side of the patch, G50418, over the damaged area.

SUBTASK 50-10-01-390-004

(7) Use your hand to rub with circular even pressure over the entire surface of the patch, G50418, which also includes the exposed edges.

SUBTASK 50-10-01-210-006

(8) Make sure that the patch, G50418, completely adheres to the cargo liner it covers.

(a) The patch, G50418, must be firmly stuck in place and extends 2 inches beyond all sides of the tear or puncture.

J. Vertical and Sloping Sidewall Liner Edge Specific Repair

NOTE: This procedure is for the edges repair of the vertical and sloping sidewall liners with torn out fasteners.

SUBTASK 50-10-01-420-006

(1) Wrap the edge of the sidewall liner with 3 in. (76 mm) wide Tape, A50465.

NOTE: You can repair multiple fastener locations on the sidewall liner.

(a) Make sure that the center of Tape, A50465, is aligned with the edge of the sidewall liner.

(b) Install the fastener back through Tape, A50465.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-300-009

(2) If a doubler is installed on the sidewall liner, do these steps to repair the doubler:

(a) Use 1 in. (25 mm) wide sheet, G02163, to make a new doubler.

(b) Drill the new doubler with the hole pattern for the fasteners.

1) Make sure that the hole pattern on the new doubler is equivalent to the damaged doubler.

(c) Attach the doubler to the sidewall liner with Nitto P-55 tape, G50885.

(d) Wrap the edge of the sidewall liner and doubler with 3 in. (76 mm) wide Tape, A50465.

(e) Install the fasteners to attach the doubler to the sidewall liner.

K. Maintenance Access Panel Edge Specific Repair

NOTE: This procedure is for the edges repair of the maintenance access panels with torn out fasteners.

SUBTASK 50-10-01-010-005

(1) If necessary, do the applicable task to get access to the maintenance access panel:

(a) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(c) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.

SUBTASK 50-10-01-300-010

(2) Make sure that the doubler on the panel has no damage.

(a) If there is a damage, replace the doubler with 1 in. (25 mm) wide sheet, G51504.

(b) Drill the new doubler with the hole patter for quarter-turn fasteners.

1) Make sure that the hole pattern on the new doubler is equivalent to the damage doubler.

(c) Attach the doubler to the back of the access panel liner with Nitto P-55 tape, G50885.

(d) Put the retainer in its correct position with the doubler.

(e) Wrap the edge of the access panel liner and doubler with 3 in. (76 mm) wide Tape, A50465.

(f) Install the quarter-turn fastener to attach the doubler to the access panel liner.

SUBTASK 50-10-01-300-011

(3) If a second doubler is installed on the front of the access panel liner, do these steps to repair the doubler:

(a) Use 1 in. (25 mm) wide sheet, G02163, to make a new doubler.

(b) Drill the new doubler with the hole pattern for the quarter-turn fasteners.

1) Make sure that the hole pattern on the new doubler is equivalent to the damaged doubler.

(c) Attach the doubler to the access panel liner with Nitto P-55 tape, G50885.

(d) Wrap the edge of the access panel liner and doubler with 3 in. (76 mm) wide Tape, A50465.

(e) Install the quarter-turn fasteners to attach the doubler to the access panel liner.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

L. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-01-400-001

(1) If it is necessary to install the liner after the repair, do the applicable task:


(a) Do this task: Cargo Compartment Sidewall Liners Installation, TASK 50-10-02-400-801.

(b) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.

(c) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-12-01-400-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

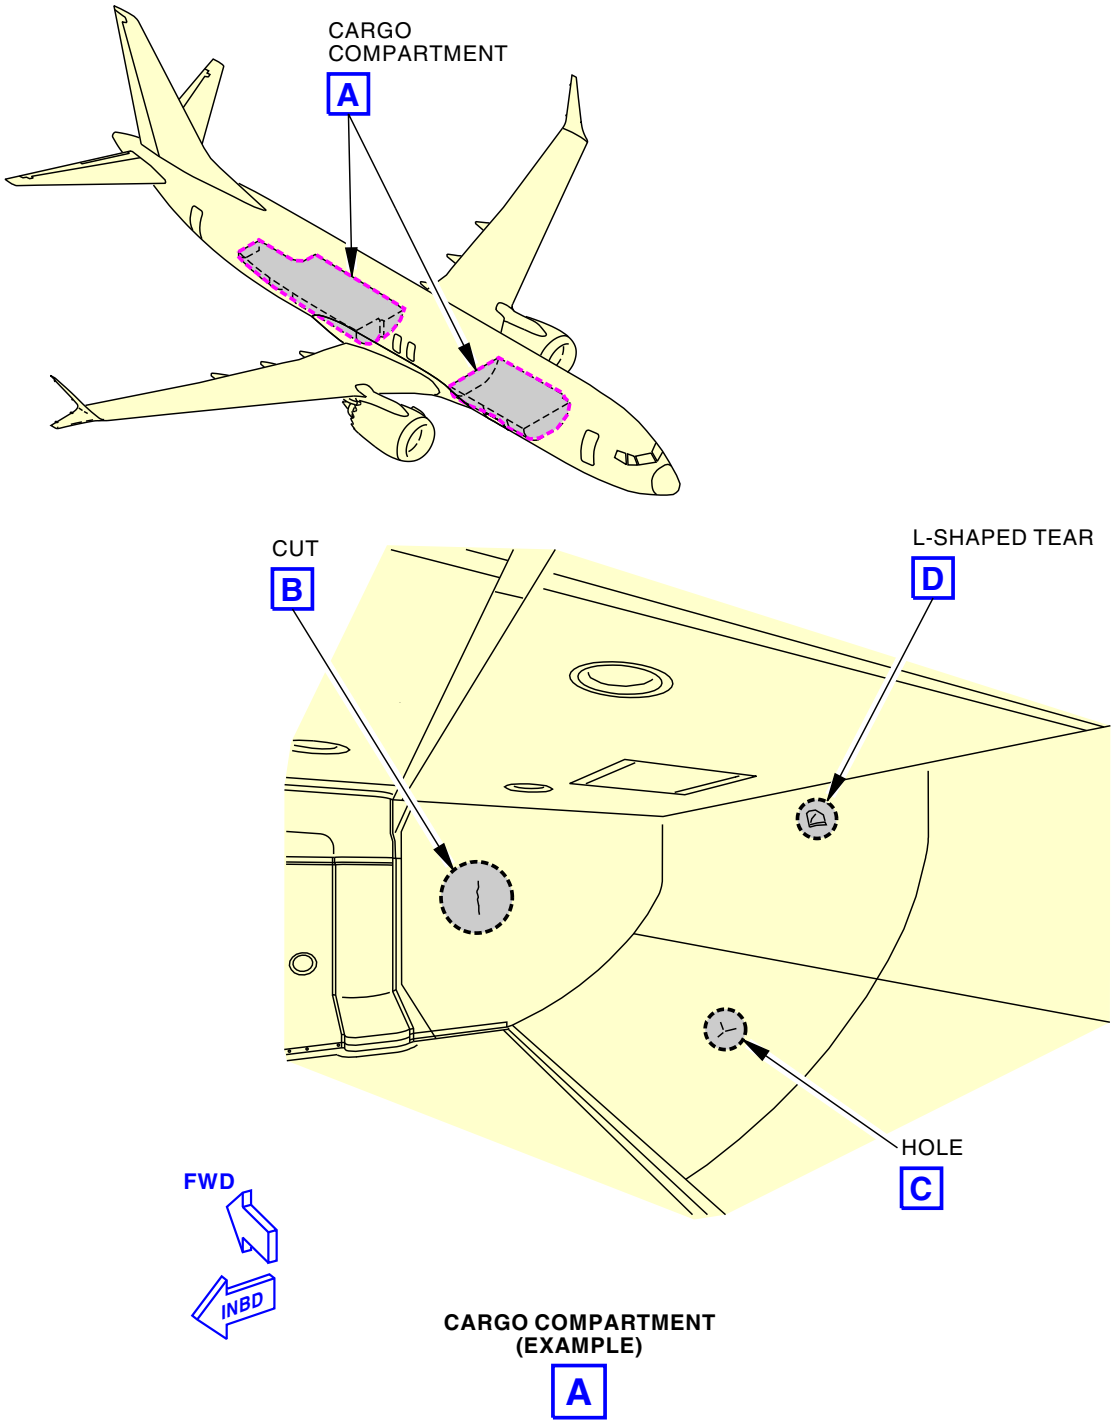

Cargo Liner Repair
Figure 801/50-10-01-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

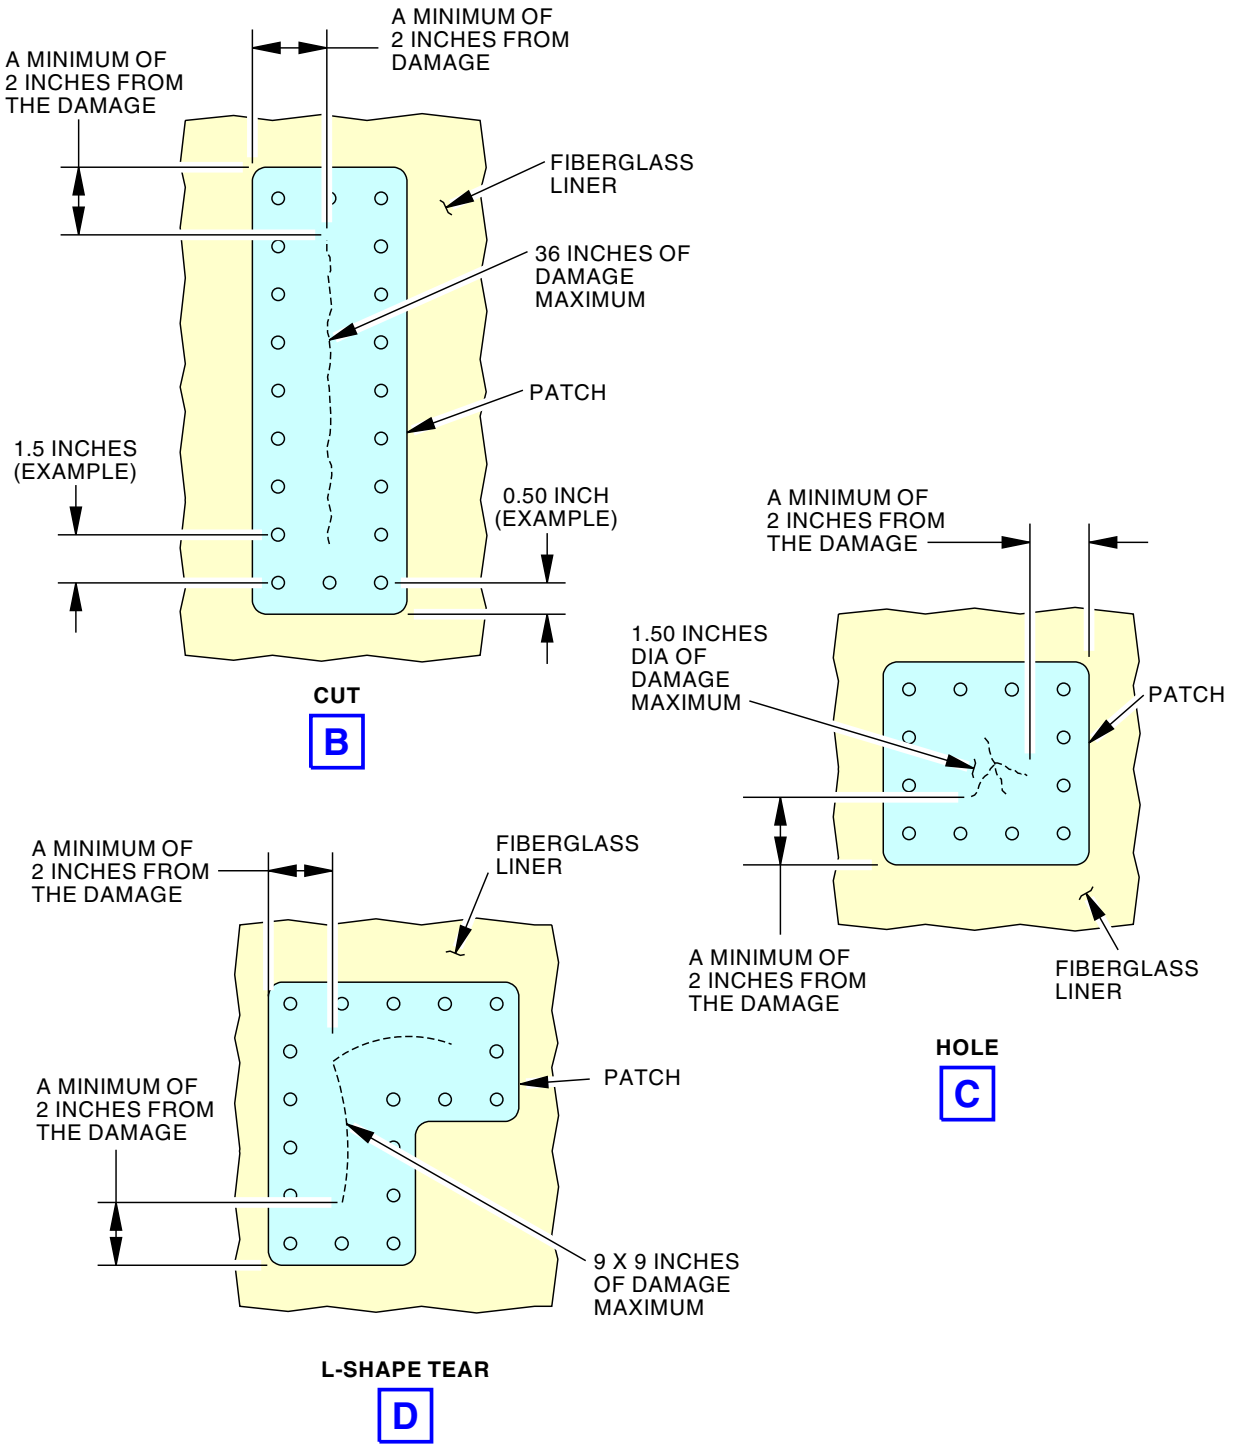

2545246 S0000604030_V1

Cargo Liner Repair
Figure 801/50-10-01-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-01-300-803

4. Permanent Repair for Molded Liners, Shrouds, and Liners with Complex Curves

A. General

(1) Make sure that the damage to the panel is not too large for the repair. If the damage is too large, you must replace the panel. To find if the damage is too large, do this task: Forward Cargo Compartment Liner Inspection, TASK 50-10-00-200-801.

(2) This task can be performed in lieu of TASK 50-10-01-300-804 for the repair of the contour of the ceiling shroud.

B. References

Reference	Title
50-10-00-200-801	Forward Cargo Compartment Liner Inspection (P/B 601)
50-10-02-000-801	Cargo Compartment Sidewall Liners Removal (P/B 401)
50-10-02-400-801	Cargo Compartment Sidewall Liners Installation (P/B 401)
50-10-03-000-801	Cargo Compartment Ceiling Liner Removal (P/B 401)
50-10-03-400-801	Cargo Compartment Ceiling Liner Installation (P/B 401)
50-12-01-000-801	Aft Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-12-01-400-801	Aft Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
G50399	Resin - Fiberglass Layup, Long Worklife, Non-Brominated	BMS8-201 Type III (Supersedes BMS8-201 Type I)
G50400	Resin - Fiberglass Layup, Short Worklife, Non-Brominated	BMS8-201 Type IV (Supersedes BMS8-201 Type II)
G51353	Kit - Akro Fireguard AF400	

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Prepare for the Repair

SUBTASK 50-10-01-010-003

(1) To remove the liner for the repair, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.

(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(c) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-300-008

(2) Examine the non-honeycomb liners for damage as follows:

NOTE: These damage limits apply to all the non-honeycomb liners. These are the ceiling panels and shrouds, sidewall liners, and forward bulkhead in the aft cargo compartment.

(a) Make sure that cuts are 36 in. (91 cm) long or less.

(b) Make sure that L-shaped tears are 9 in. (23 cm) long or less on either side.

(c) Make sure that holes are 1.5 in. (3.8 cm) in diameter or smaller.

(d) Make sure that cracks are not longer than 35 in. (88.9 cm) and are minimum 2 in. (5.1 cm) away from other damage and from the panel edge on all sides.

(e) If the damage is greater that the limits, replace the liner.

F. Cargo Lining Repair

SUBTASK 50-10-01-340-043

(1) To do the structural repair on the panel, follow the SRM SUBJECT 51-70-06.

NOTE: Do the structural repair on one of the two, the cargo side or the non-cargo side (fiberglass side) of the cargo liner. Follow the repair instructions in the SRM SUBJECT 51-70-06. Do not use BMS8-301. As an alternative, use resin, G50400.

SUBTASK 50-10-01-340-044

(2) Vacuum the bag and let the adhesive cure for a minimum of 24 hours at 77°F (25°C), or for a minimum of 1-hour at 150°F (65.6°C).

NOTE: A minimum of 22 inches of mercury vacuum pressure must be in operation during the cure.

NOTE: A 10 degree tolerance in each direction is approved.

SUBTASK 50-10-01-340-046

(3) After the BMS8-201 (resin, G50400, or resin, G50399) repair is cured, do one of the following steps:

(a) Do this task: Permanent Repair for Flat or Slightly Curved Liners, TASK 50-10-01-340-801.

(b) Apply the AF400 patch kit, G51353, to install a fire-resistant patch on the cargo side.

NOTE: The AF400 patch kit, G51353, is the only fire-resistant patch approved for contoured repair areas.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-01-840-002

WARNING SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE FIRE EXTINGUISHING AGENT OR SMOKE CAN CAUSE INJURIES.

(1) To install the liner after the repair, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Installation, TASK 50-10-02-400-801.

(b) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-12-01-400-801.

——— END OF TASK ———

TASK 50-10-01-300-804

5. Permanent Repair for the Contour of the Ceiling Shroud

(Figure 802)

A. General

(1) This task gives instructions to repair the contour of the ceiling shroud in the forward cargo compartment. This task only applies to cracks or cuts along the bend of the shroud. It does not apply to damage to the flat part of the shrouds.

B. References

Reference	Title
50-10-03-000-801	Cargo Compartment Ceiling Liner Removal (P/B 401)
50-10-03-400-801	Cargo Compartment Ceiling Liner Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
A01076	Adhesive - Synthetic Rubber	BAC5010 Type 93 (BMS5-95 Class B)
G02186	Seal - Closed Cell Silicone Foam Rubber, Hydraulic Fluid Resistant	BMS1-68 Form III
G02312	Fabric, Phenolic Preimpregnated Glass	BMS8-226
G50428	Tape - Nitto P-629 (Formerly Permacel) Cargo Pit Seam Tape	BMS5-146 Type 1 Class 1 Grade A
G51187	Sheet - Stainless Steel, 15-5PH CRES Sheet	Commercially Available
G51188	Sheet - Stainless Steel, 17-4PH CRES Sheet	Commercially Available
G51189	Sheet - Stainless Steel, 300 Series CRES Sheet	Commercially Available

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

E. Prepare for the Repair

SUBTASK 50-10-01-000-002

(1) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

SUBTASK 50-10-01-200-001

(2) These are the maximum damage limits to repair the contour of the ceiling shroud in the forward cargo compartment. These damage limits only apply to cracks or cuts along the bend of the shroud. For damage to the flat parts of the shroud, use the damage limits and repair instructions for non-honeycomb linings.

(a) Make sure that cracks are at least 2 in. (5 cm) away from other damage and from the panel edge on all sides.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Repair the Contour with a Steel Patch

SUBTASK 50-10-01-000-003

(1) Remove the damaged areas.

SUBTASK 50-10-01-300-001

(2) Fabricate a repair patch from CRES sheet 0.050 in. (0.13 cm) thick manufactured from stainless steel sheet, G51187, stainless steel sheet, G51188, or stainless steel sheet, G51189.

SUBTASK 50-10-01-300-002

(3) Use adhesive, A01076, to bond the stainless steel sheet, G51189, patch to the ceiling shroud.

NOTE: An optional method to bond the patch is to use seal, G02186, tape to install the patch to the ceiling shroud.

SUBTASK 50-10-01-300-003

(4) Attach the patch permanently with screws. Use BACS12FA3K screws, NAS1149D0363J washers and BACN10JC3CD nuts or equivalent.

(a) Fastener spacing in the forward-aft direction is 4.0 in. (101.6 mm) typical.

(b) Install two rows of fasteners past the end of the damage.

SUBTASK 50-10-01-300-004

(5) Drill holes for the bolts around the edge of the patch. Drill the holes with a maximum of 4.0 in. (101.6 mm) of separation, and approximately 0.5 in. (12.7 mm) from the edges of the stainless steel patch. Make sure that the holes go through the patch and the original panel.

SUBTASK 50-10-01-200-002

(6) Make sure that there is sufficient clearance between the screws and the adjacent structure and systems behind the panel.

SUBTASK 50-10-01-420-002

(7) Install the screws, nuts and washers.

SUBTASK 50-10-01-410-002

(8) Apply Nitto P-629 tape, G50428, over the fasteners and the joint edge to keep them installed through the patch.

(a) Make sure that the tape is within shelf life limits for optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

G. Repair the Contour with a Preformed Patch

SUBTASK 50-10-01-300-005

(1) Make a patch from the applicable material fabric, G02312. The patch can be made from 4 plies of the fabric, G02312, material.

SUBTASK 50-10-01-340-030

(2) Do these steps to fabricate or laminate the preformed patch:

(a) Make sure that the radius of the preformed patch matches the panel radius.

(b) Build a laminate equal in thickness to the number of plies removed.

(c) Taper sand this laminate to fit the plies removed from the panel.

(d) If you need to splice prepreg plies, overlap splices are preferred.

1) Make sure that overlap widths are between 0.13 in. (3.30 mm) and 1.25 in. (31.75 mm) wide.

2) Make sure that lap splices in adjacent plies are staggered.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) You can use butt splices for laminates or panels that have four or more plies on each side.

1) Make sure that overlaps are not more than 0.01 in. (0.25 mm).

2) Make sure that the maximum gap between prepreg edges are not more than 0.02 in. (0.51 mm).

3) Make sure that butt splices on adjacent plies are staggered.

SUBTASK 50-10-01-340-031

(3) Use adhesive, A01076, to bond the fabric, G02312, patch to the ceiling shroud.

NOTE: An optional method to bond the patch is to use seal, G02186, tape to install the patch to the ceiling shroud.

SUBTASK 50-10-01-420-003

(4) Install the fasteners as necessary.

(a) Fastener spacing in the forward-aft direction is 4.0 in. (101.6 mm) typical.

(b) Install two rows of fasteners past the end of the damage.

SUBTASK 50-10-01-350-001

(5) Apply Nitto P-629 tape, G50428, over the fasteners and the joint edge to keep them installed through the patch.

(a) Make sure that the tape is within shelf life limits for optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.


H. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-01-840-001

(1) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

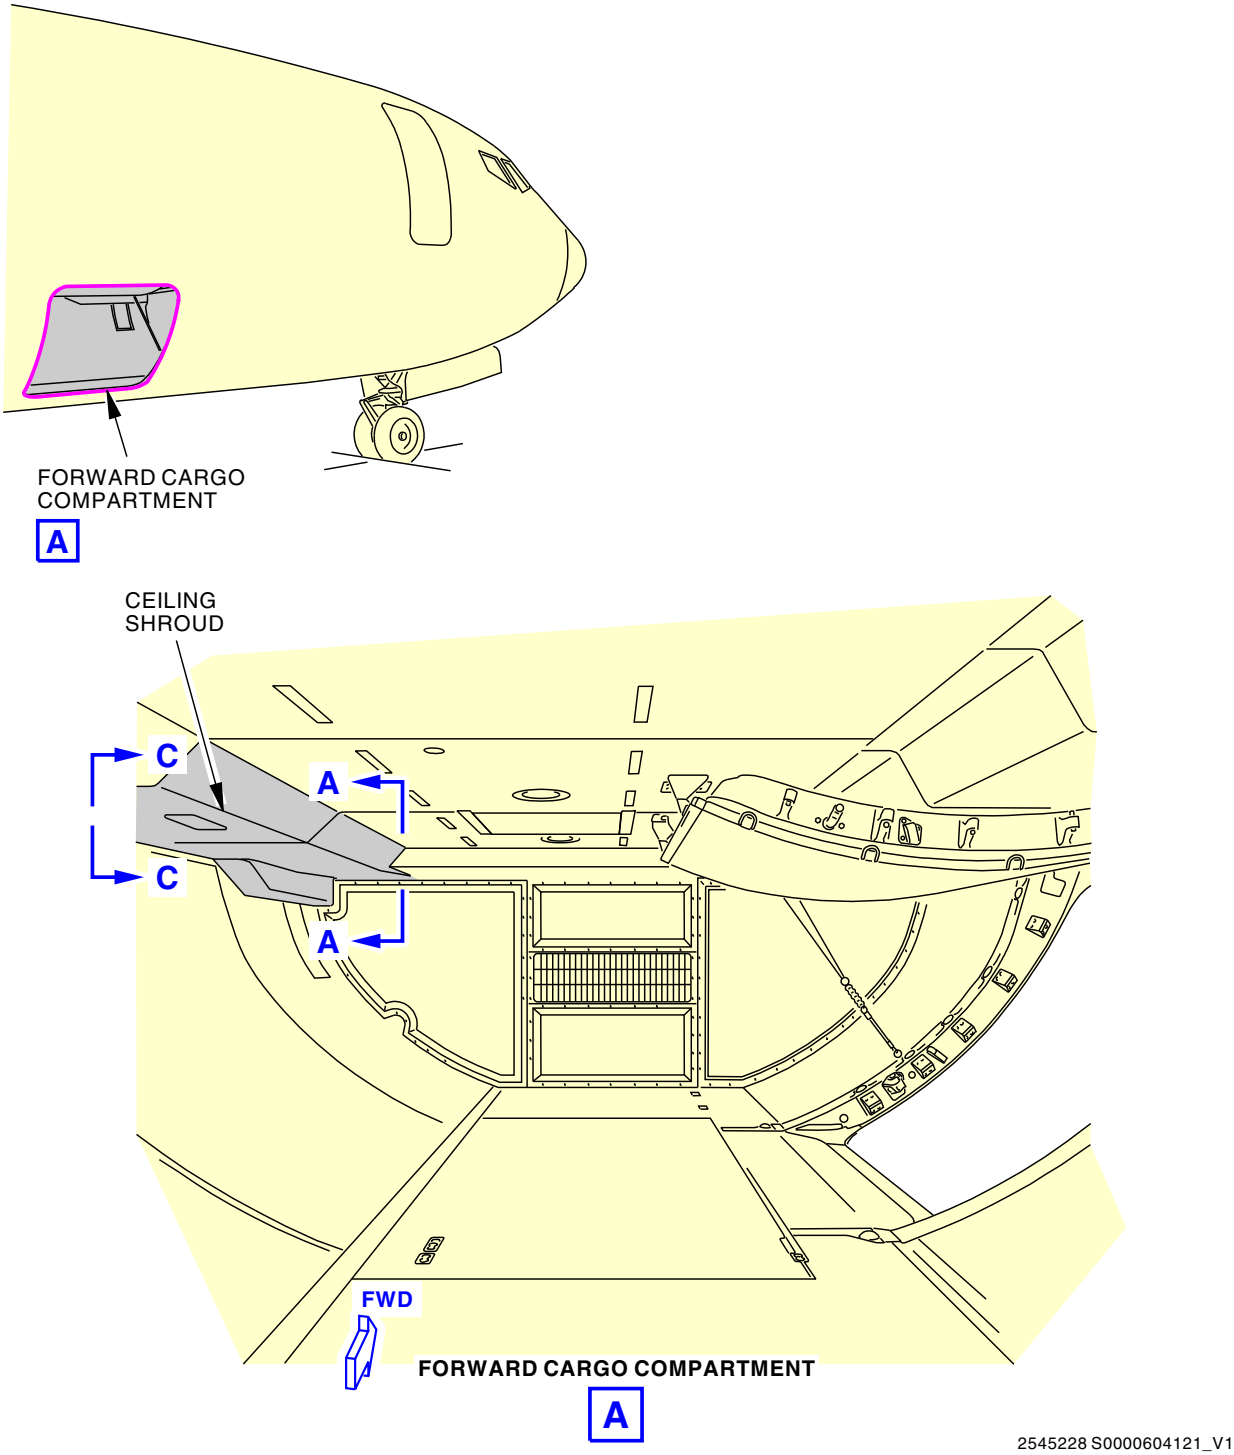


Forward Cargo Compartment Ceiling Shroud Repair
Figure 802/50-10-01-990-803 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

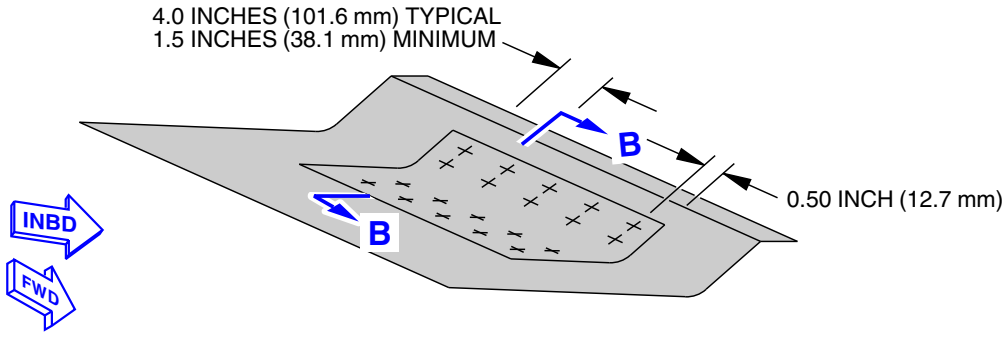

A-A

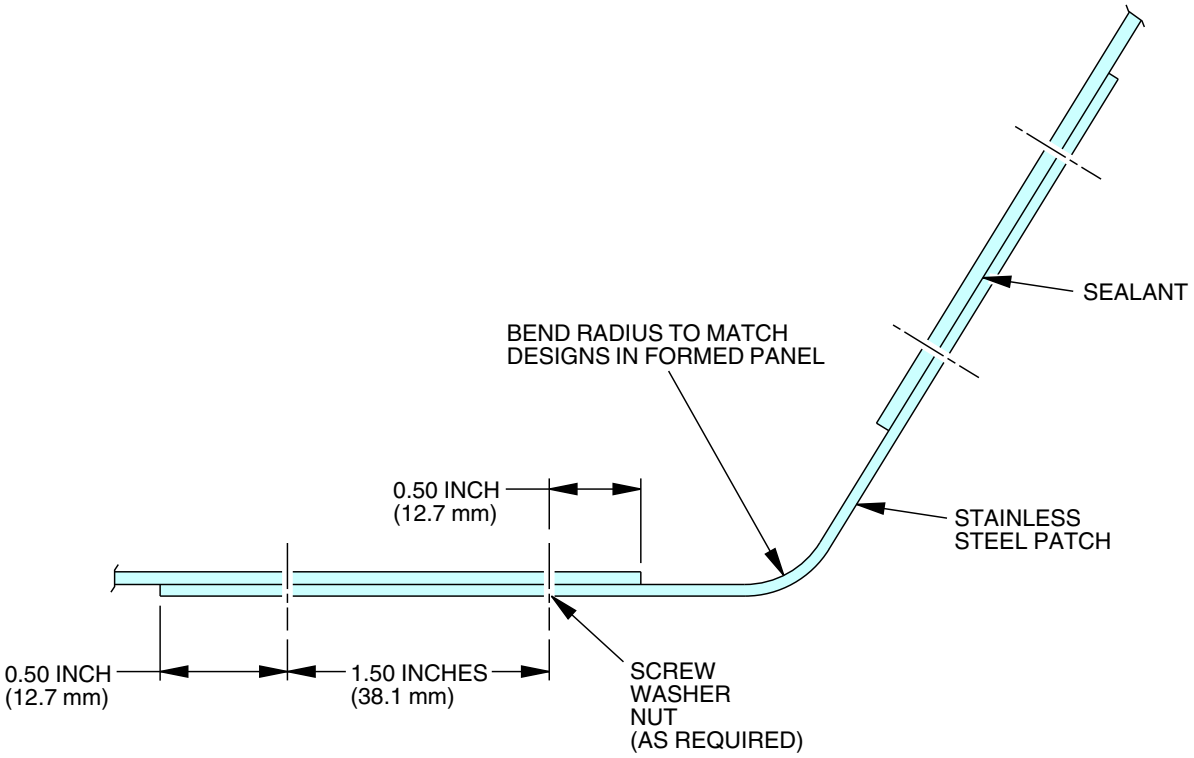


B-B


2545229 S0000604123_V2

Forward Cargo Compartment Ceiling Shroud Repair
Figure 802/50-10-01-990-803 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

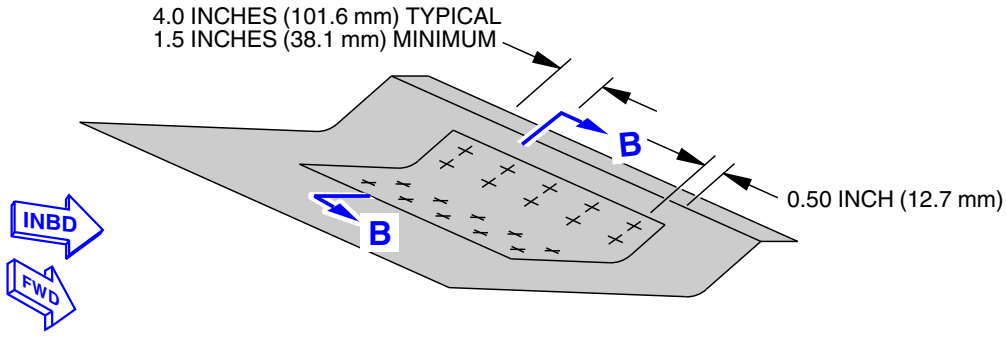

A-A

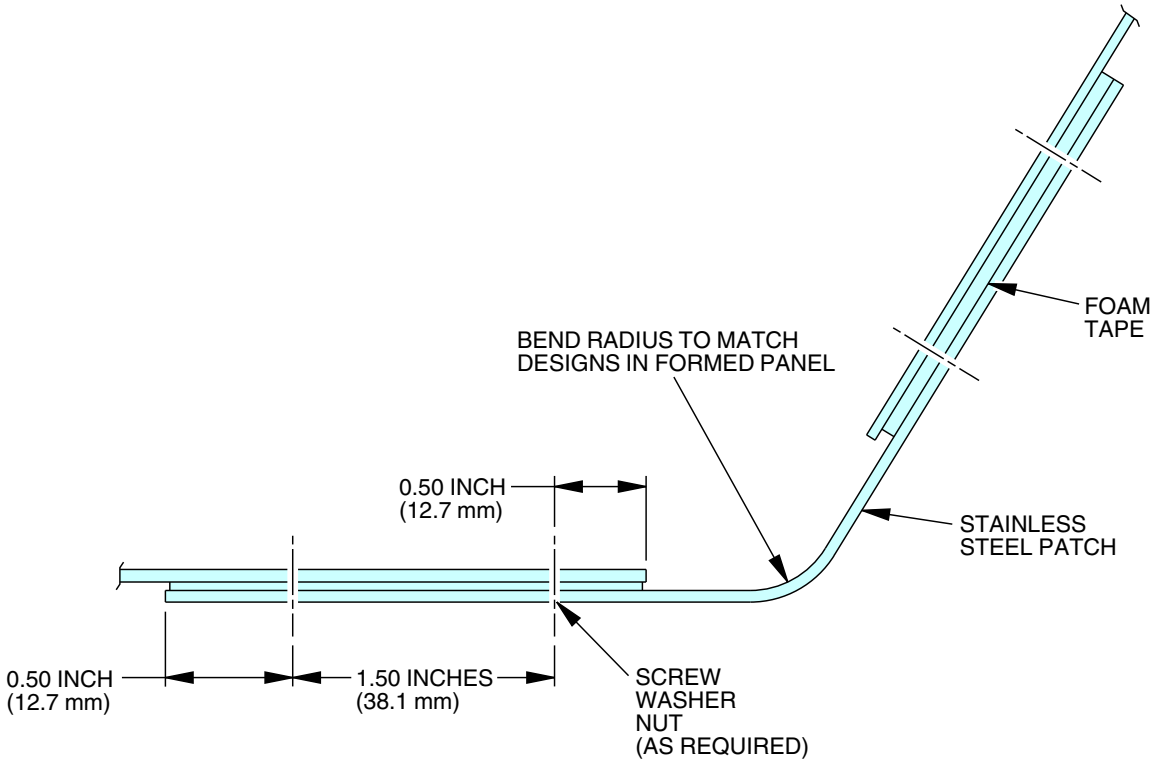


B-B

2545230 S0000604124_V2

Forward Cargo Compartment Ceiling Shroud Repair
Figure 802/50-10-01-990-803 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

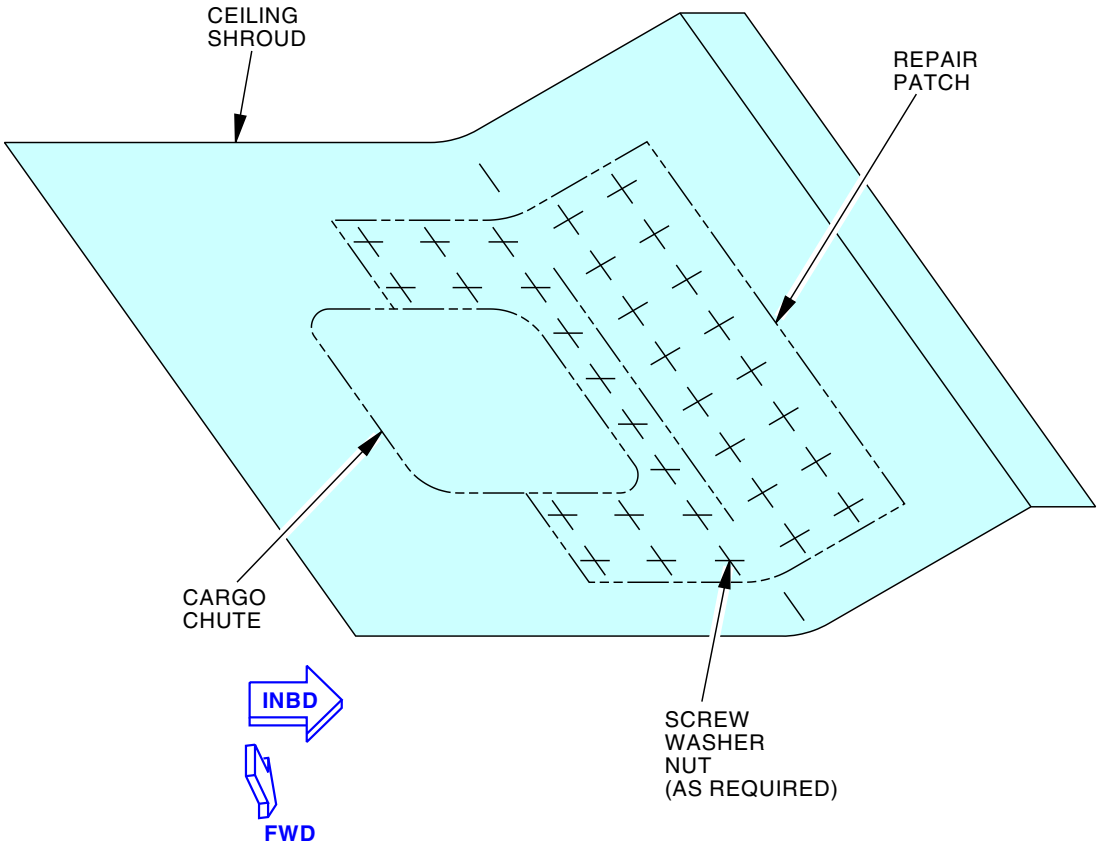

C-C

2545231 S0000604131_V1

Forward Cargo Compartment Ceiling Shroud Repair
Figure 802/50-10-01-990-803 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-01-300-805

6. Neoprene Coated Cargo Liner Repair

(Figure 803)

A. General

(1) This task gives instructions to repair the neoprene-coated fiberglass liners in the lower lobe cargo compartments.

(2) There are three repair alternatives. It is only necessary to do the applicable one:

(a) Repair of the neoprene-coated liners with mechanical fasteners.

NOTE: There are two methods for different patch materials.

(b) Repair of the neoprene-coated liners with fiberglass thread.

(c) Repair of the soft liner edge.

(3) Liners designed for blow out if decompression occurs are not repairable and should be replaced.

(4) Refer to this procedure for cargo liner damage limits: CARGO COMPARTMENT - INSPECTION/CHECK, PAGEBLOCK 50-10-00/601.

B. References

Reference	Title
50-10-00 P/B 601	CARGO COMPARTMENT - INSPECTION/CHECK
50-10-02-000-801	Cargo Compartment Sidewall Liners Removal (P/B 401)
50-10-02-400-801	Cargo Compartment Sidewall Liners Installation (P/B 401)
50-10-03-000-801	Cargo Compartment Ceiling Liner Removal (P/B 401)
50-10-03-400-801	Cargo Compartment Ceiling Liner Installation (P/B 401)
50-11-01-000-801	Forward Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-11-01-400-801	Forward Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)
50-11-02-000-801	Forward Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)
50-11-02-400-801	Forward Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)
50-12-01-000-801	Aft Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)
50-12-01-400-801	Aft Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)
50-12-02-000-801	Aft Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)
50-12-02-400-801	Aft Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)
52-31-00 P/B 201	CARGO DOOR - MAINTENANCE PRACTICES

C. Consumable Materials

Reference	Description	Specification
A00016	Adhesive - Pressure Sensitive Film For Interior Non-Structural Bonding	BMS5-91
A50144	Adhesive - Neoprene (Fire Retardant)	BMS5-7 Type II

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
B00065	Alcohol - Denatured, Ethyl (Ethanol)	AMS 3002 (Supersedes O-A-396)
G01498	Thread - Fiberglass - 11002 BC18 PTFE Coating	BAC5437
G02163	Sheet - Fire Resistant Glass Fiber Reinforced Phenolic Laminate Cargo Liner	BMS8-223
G02361	Tape - Cargo Lining Joint Seal	BMS5-146
G50018	Fabric - Polymer Coated, Flame Resistant, Flexible Cargo Liner	BMS8-343 Type I
G50360	Seal - Closed Cell Silicone Foam Rubber, Hydraulic Fluid Resistant (with Adhesive)	BMS1-68 Grade A Form III
G50592	Fabric - Polymer Coated, Flame Resistant, Flexible Cargo Liner	BMS8-343 Type III
G50664	Fabric - Polymer Coated, Flame Resistant, Flexible Cargo Liner	BMS8-343 Type IV
G50740	Kit - Akro Fireguard AF 450 Soft Liner Repair Kit	
G51121	Fabric - Polymer Coated, Flame Resistant, Flexible Cargo Liner	BMS8-343 Type II
G51203	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition PVF
G51483	Thread - Fiber, Glass	ASTM D4030 Type B-6 or T-18
G51622	Thread - Fiberglass - PTFE Coated, E-18	
G51837	Thread - Fiberglass - 16961 BC18 PTFE Coating	BAC5437

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Prepare for the Repair

SUBTASK 50-10-01-010-004

(1) If necessary, open the cargo door.

(a) To open the cargo door do the applicable task in this procedure: CARGO DOOR - MAINTENANCE PRACTICES, PAGEBLOCK 52-31-00/201.

SUBTASK 50-10-01-210-008

(2) Do a visual check to make sure that the liner fasteners do not touch any adjacent systems behind the liners and that the liners do not sag.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) If the liner fasteners touch any adjacent system behind the liner or if the liner sags, do the applicable task to replace the liner:

1) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.
2) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.
3) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-11-01-000-801.
4) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-11-02-000-801.
5) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.
6) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-12-02-000-801.

F. Repair of the Neoprene-coated Liners with Mechanical Fasteners

NOTE: This procedure is for BMS8-223 patches on the neoprene-coated liners.

SUBTASK 50-10-01-020-001

(1) Remove the fasteners that attach the liner to the structure.

SUBTASK 50-10-01-020-002

(2) To remove the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.
(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.
(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-11-01-000-801.
(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-11-02-000-801.
(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.
(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-12-02-000-801.

SUBTASK 50-10-01-340-032

(3) Make two fiberglass sheet, G02163, patches.

NOTE: The patch should make a minimum of a 2.0 in. (50.8 mm) overlap on the area that is not damaged. For example, the patch dimension that is necessary for a 1.5 in. (38.1 mm) diameter hole would be a 5.5 in. (139.7 mm) diameter.

SUBTASK 50-10-01-340-033

(4) Clean all of the surfaces with alcohol, B00065, to remove the loose particles.

SUBTASK 50-10-01-340-034

(5) Apply adhesive, A00016, or adhesive, A50144, to the back of the fiberglass patches.

SUBTASK 50-10-01-340-035

(6) Put the fiberglass patches over the center of the damaged area on the front and the back of the liner.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-340-036

(7) Apply pressure to the fiberglass patches to make sure that there is a good bond.

NOTE: The patch has a smooth surface when there is a good, continuous bond.

SUBTASK 50-10-01-340-037

(8) Do the steps that follow to permanently attach the fiberglass patches:

(a) Install bolts, NAS603-5P or equivalent, washers, AN960JD10L, and nuts, MS21042L3, at a maximum of 2.0 in. (50.8 mm) apart and 0.5 in. (12.7 mm) from the edges of the fiberglass patches.

(b) Make sure that there is sufficient clearance between the bolts and the adjacent systems behind the panel.

(c) Grind or cut the ends of the bolts smooth with the nuts to get sufficient clearance.

SUBTASK 50-10-01-420-004

WARNING SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE FIRE EXTINGUISHING AGENT OR SMOKE CAN CAUSE INJURIES.

(9) To install the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Installation, TASK 50-10-02-400-801.

(b) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-11-01-400-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-11-02-400-801.

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-12-01-400-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-12-02-400-801.

SUBTASK 50-10-01-900-001

(10) Replace the damaged panel if sufficient clearance is still not obtained.

G. Repair of the Neoprene-coated Liners with Mechanical Fasteners

NOTE: This procedure is for a BMS8-343 Type I, Type II, Type III, or Type IV patch on the neoprene-coated liners.

SUBTASK 50-10-01-020-005

(1) Remove the fasteners that attach the liner to the structure.

SUBTASK 50-10-01-020-006

(2) To remove the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.

(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-11-01-000-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-11-02-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-12-02-000-801.

SUBTASK 50-10-01-100-001

(3) Clean the inboard side of the damaged area with alcohol, B00065, or equivalent cleaning agent.

SUBTASK 50-10-01-340-047

(4) Cut a repair patch.

NOTE: Dimension the patch to keep a minimum of 1.5 in. (38 mm) of overlap with the area that is not damaged.

NOTE: You can cover a smaller patch with a larger patch, if the smaller patch is fully covered. No other type of patch overlap (for example, shingling) is permitted.

(a) Use any of the cargo liner, G50018, cargo liner, G51121, cargo liner, G50592, or cargo liner, G50664, to repair damaged BMS8-343 Type I, II, III, or IV liners.

SUBTASK 50-10-01-340-048

(5) Apply adhesive, A00016, to the inboard side of the lining, around the centre of the damage.

SUBTASK 50-10-01-340-049

(6) Install the repair patch on the inboard side of the damaged lining.

SUBTASK 50-10-01-340-050

(7) Drill 3/16 in. (4.8 mm) diameter holes through the patch and the lining for the fasteners.

(a) The maximum distance between fasteners is 2.0 in. (51 mm).

(b) The minimum distance from the centers of holes to the edge of the patch is 0.75 in. (19 mm).

(c) The minimum distance from the centers of holes to the edge of the damaged area is 0.75 in. (19 mm).

SUBTASK 50-10-01-340-051

(8) Install the fasteners through the fastener holes.

(a) Use #10 or larger steel bolts, washers and nuts, or #10 or larger steel rivets with backup washers to do this repair.

NOTE: The use of sheet metal screws is not acceptable for soft liner repairs.

SUBTASK 50-10-01-340-052

(9) Install tape, G02361, or tape, G51203, on the edges of the patch and on the fasteners used for the repair.

SUBTASK 50-10-01-420-007



WARNING

SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE FIRE EXTINGUISHING AGENT OR SMOKE CAN CAUSE INJURIES.

(10) To install the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Installation, TASK 50-10-02-400-801.

(b) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-11-01-400-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-11-02-400-801.

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-12-01-400-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-12-02-400-801.

H. Repair of the Neoprene-coated Fabric with Fiberglass Thread

NOTE: This procedure is for a BMS8-223, or BMS8-343 Type I, Type II, or Type III patch on the neoprene-coated liners.

SUBTASK 50-10-01-020-003

(1) Remove the fasteners that attach the liner to the structure.

SUBTASK 50-10-01-020-004

(2) To remove the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.

(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-11-01-000-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-11-02-000-801.

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-12-02-000-801.

SUBTASK 50-10-01-340-038

(3) Make a patch from sheet, G02163, cargo liner, G50018, cargo liner, G51121, or cargo liner, G50592.

NOTE: The patch should make a minimum of a 2.0 in. (50.8 mm) overlap on the area that is not damaged. For example, the patch dimension that is necessary for a 1.5 in. (38.1 mm) diameter hole would be a 5.5 in. (139.7 mm) diameter.

SUBTASK 50-10-01-340-039

(4) Clean all of the surfaces with alcohol, B00065, to remove the loose particles.

SUBTASK 50-10-01-340-040

(5) Apply adhesive, A00016, or adhesive, A50144, to the back of the patch.

SUBTASK 50-10-01-400-002

(6) Put the patch over the center of the damaged area on the front of the liner.

SUBTASK 50-10-01-340-041

(7) Apply pressure to the patch to make sure that there is a good bond.

NOTE: The patch has a smooth surface when there is a good, continuous bond.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-01-340-042

(8) Use fiberglass thread, G01498, fiberglass thread, G51837, fiberglass thread, G51622, or thread, G51483, to stitch two lines around the edge of the patch.

NOTE: There should be seven, plus or minus one, stitches for each inch.

SUBTASK 50-10-01-420-005

WARNING SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE FIRE EXTINGUISHING AGENT OR SMOKE CAN CAUSE INJURIES.

(9) To install the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Installation, TASK 50-10-02-400-801.

(b) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-11-01-400-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-11-02-400-801.

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-12-01-400-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-12-02-400-801.

I. Repair of the Soft Liner Edge

NOTE: This procedure is for a BMS8-343 Type I or Type III patch on the soft liner edge.

SUBTASK 50-10-01-020-007

(1) Remove the fasteners that attach the liner to the structure.

SUBTASK 50-10-01-020-008

(2) To remove the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Removal, TASK 50-10-02-000-801.

(b) Do this task: Cargo Compartment Ceiling Liner Removal, TASK 50-10-03-000-801.

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-11-01-000-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-11-02-000-801.

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Removal, TASK 50-12-01-000-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Removal, TASK 50-12-02-000-801.

SUBTASK 50-10-01-340-053

(3) Cut out the damaged area.

SUBTASK 50-10-01-340-054

(4) Cut a repair patch from the same type of material as the lining.

NOTE: Dimension the patch to keep a minimum of 1.5 in. (38 mm) of overlap with the area that is not damaged.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Use cargo liner, G50018, or cargo liner, G50592.

SUBTASK 50-10-01-340-055

(5) Do these steps to repair the soft liner edge:

(a) Remove the snaps and unwanted fabric fibers from the liner.

(b) Attach the patch to fabricate a new edge.

(c) Attach new seal, G50360, on the patch.

(d) Stitch the assembly together.

NOTE: If there is velcro present in the liner, it may be omitted from the edge repair.

1) Use fiberglass thread, G01498, fiberglass thread, G51837, fiberglass thread, G51622, or thread, G51483.

2) Make two rows of stitching 1 in. (25 mm) apart.

3) Make sure that the stitches extend to a minimum of 0.5 in. (13 mm) beyond the fabric patch edges.

4) Maintain a stitch density of approximately seven stitches in each inch of material.

5) Sew the stitches as follows:

a) Form the stitch with two threads: one needle thread and one bobbin thread.

b) Pass a loop of needle thread through the materials being sewn.

c) Interlace the passed loop of needle thread with the bobbin thread.

d) Pull the needle thread back so that the interlacing is positioned midway between the surfaces of the sewn materials.

(e) Install the snaps.

SUBTASK 50-10-01-340-056

(6) Do these steps if there are straps attached to the liner:

(a) If the strap is not damaged, remove and salvage the strap.

1) Use fiberglass thread, G01498, fiberglass thread, G51837, fiberglass thread, G51622, or thread, G51483, to attach the strap again by stitching it back to the liner after the edge repair.

a) Stitch in range from 0.10 in. (2.5 mm) to 0.20 in. (5.1 mm) from the edge of the parts.

b) Maintain a stitch density of approximately seven stitches in each inch of material.

c) Sew the stitches as follows:

<1> Form the stitch with two threads: one needle thread and one bobbin thread.

<2> Pass a loop of needle thread through the materials being sewn.

<3> Interlace the passed loop of needle thread with the bobbin thread.

<4> Pull the needle thread back so that the interlacing is positioned midway between the surfaces of the sewn materials.

(b) If the strap is damaged, remove and discard the strap.

1) Fabricate a new strap made of the same type design material.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

2) Use fiberglass thread, G01498, fiberglass thread, G51837, fiberglass thread, G51622, or thread, G51483, to attach the new strap by stitching it back to the liner after the edge repair.

a) Stitch in range from 0.10 in. (2.5 mm) to 0.20 in. (5.1 mm) from the edge of the parts.

b) Maintain a stitch density of approximately seven stitches in each inch of material.

c) Sew the stitches as follows:

<1> Form the stitch with two threads: one needle thread and one bobbin thread.

<2> Pass a loop of needle thread through the materials being sewn.

<3> Interlace the passed loop of needle thread with the bobbin thread.

<4> Pull the needle thread back so that the interlacing is positioned midway between the surfaces of the sewn materials.

(c) Restore the damaged liner to its type design.

SUBTASK 50-10-01-420-008

WARNING SEAL THE CARGO COMPARTMENT WITH THE LINING. OBEY THE INSTRUCTIONS IN THE SPECIFIED PROCEDURE WHEN YOU INSTALL THE LINING. IF YOU INSTALL THE LINING INCORRECTLY, THE FIRE EXTINGUISHING AGENT OR SMOKE CAN CAUSE INJURIES.

(7) To install the liner, do the applicable task:

(a) Do this task: Cargo Compartment Sidewall Liners Installation, TASK 50-10-02-400-801.

(b) Do this task: Cargo Compartment Ceiling Liner Installation, TASK 50-10-03-400-801.

(c) Do this task: Forward Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-11-01-400-801.

(d) Do this task: Forward Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-11-02-400-801.

(e) Do this task: Aft Cargo Compartment Forward Bulkhead Liner Installation, TASK 50-12-01-400-801.

(f) Do this task: Aft Cargo Compartment Aft Bulkhead Liner Installation, TASK 50-12-02-400-801.

J. The Akro Fireguard System


SUBTASK 50-10-01-300-006

(1) Refer to the Akro Fireguard AF 450 Soft Liner Kit, G50740, instructions for the steps to apply this repair.

NOTE: The patch must make a minimum overlap of 2.0 in. (50.8 mm) on the area that is not damaged. For example, the minimum patch dimension that is necessary for a 1.5 in. (38.1 mm) diameter hole would be 5.5 in. (139.7 mm) diameter.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

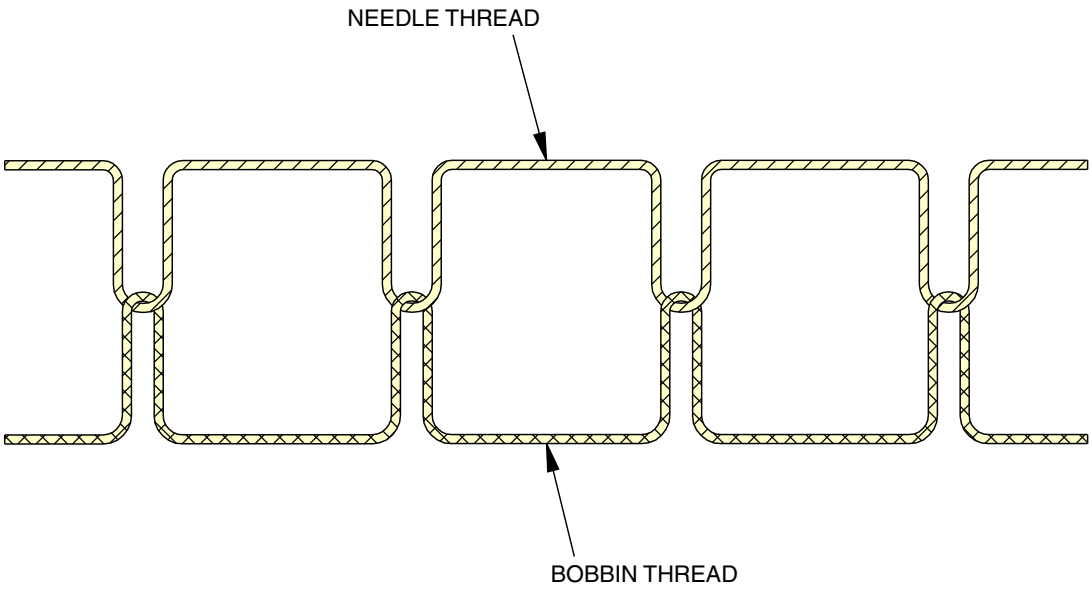

3134191 S0000862914_V1

Repair of the Soft Liner Edge - Stitch Pattern
Figure 803/50-10-01-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-01-300-806

7. Silicone Impregnated Liner Repair

A. General

(1) This task is for the repair of silicone impregnated fabric which is used as the cargo door liners.

B. Consumable Materials

Reference	Description	Specification
G01498	Thread - Fiberglass - 11002 BC18 PTFE Coating	BAC5437
G50591	Cloth - Silicone Coated Fiberglass (Bisco HT-101)	

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Repair the Silicone Impregnated Liner

SUBTASK 50-10-01-300-007

(1) Use fiberglass thread, G01498 to stitch the tear together or stitch a patch of Bisco HT-101 cloth, G50591 on the damage.

NOTE: There should be seven, plus or minus one, stitches for each inch and a minimum material overlap of 1 in. (2.54 cm).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT SIDEWALL LINERS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the cargo compartment sidewall liners

(2) An installation of the cargo compartment sidewall liners.

TASK 50-10-02-000-801

2. Cargo Compartment Sidewall Liners Removal

(Figure 401)

A. General

(1) This task is for the removal of the cargo compartment sidewall liners.

B. References

Reference	Title
50-11-02-000-801	Forward Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)
50-12-02-000-801	Aft Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)

C. Consumable Materials

Reference	Description	Specification
G02304	Tape - Moisture Barrier, Adhesive One-side	BMS8-346
G50428	Tape - Nitto P-629 (Formerly Permacel) Cargo Pit Seam Tape	BMS5-146 Type 1 Class 1 Grade A
G50788	Tape - Textile Hook And Loop Fasteners Tape (Polyester Hook & Polyester Loop)	BMS8-285 Type IV
G51436	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type 1

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right
145	Aft Cargo Compartment Equipment Bay - Left
146	Aft Cargo Compartment Equipment Bay - Right

E. Prepare for the Removal

SUBTASK 50-10-02-010-001

(1) If it is necessary, remove the aft bulkhead liner to access the sidewall liner [1] (TASK 50-11-02-000-801 or TASK 50-12-02-000-801).

SUBTASK 50-10-02-160-002

(2) If it is necessary, remove the fillet seal from the capstrip [3] to access the sidewall liner [1] adjacent to the cargo door structure.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Cargo Compartment Sidewall Liners Removal

SUBTASK 50-10-02-020-001

(1) Remove and discard Nitto P-629 tape, G50428, from the edges of the sidewall liner [1].

SUBTASK 50-10-02-020-005

(2) Remove the screws [2] and capstrips [3].

(a) In the forward compartment, along the sidewall and ceiling interface, remove the screws [2] and washers [4] that attach the soft liner [5].

SUBTASK 50-10-02-020-002

(3) Remove and discard moisture barrier tape, G02304, from the edges of the liner that touch the floor panel.


SUBTASK 50-10-02-020-004

(4) Pull the sidewall liner [1] from the structure.

NOTE: The liner is attached in some locations with hook and loop fastener tape, G50788, or tape, G51436.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

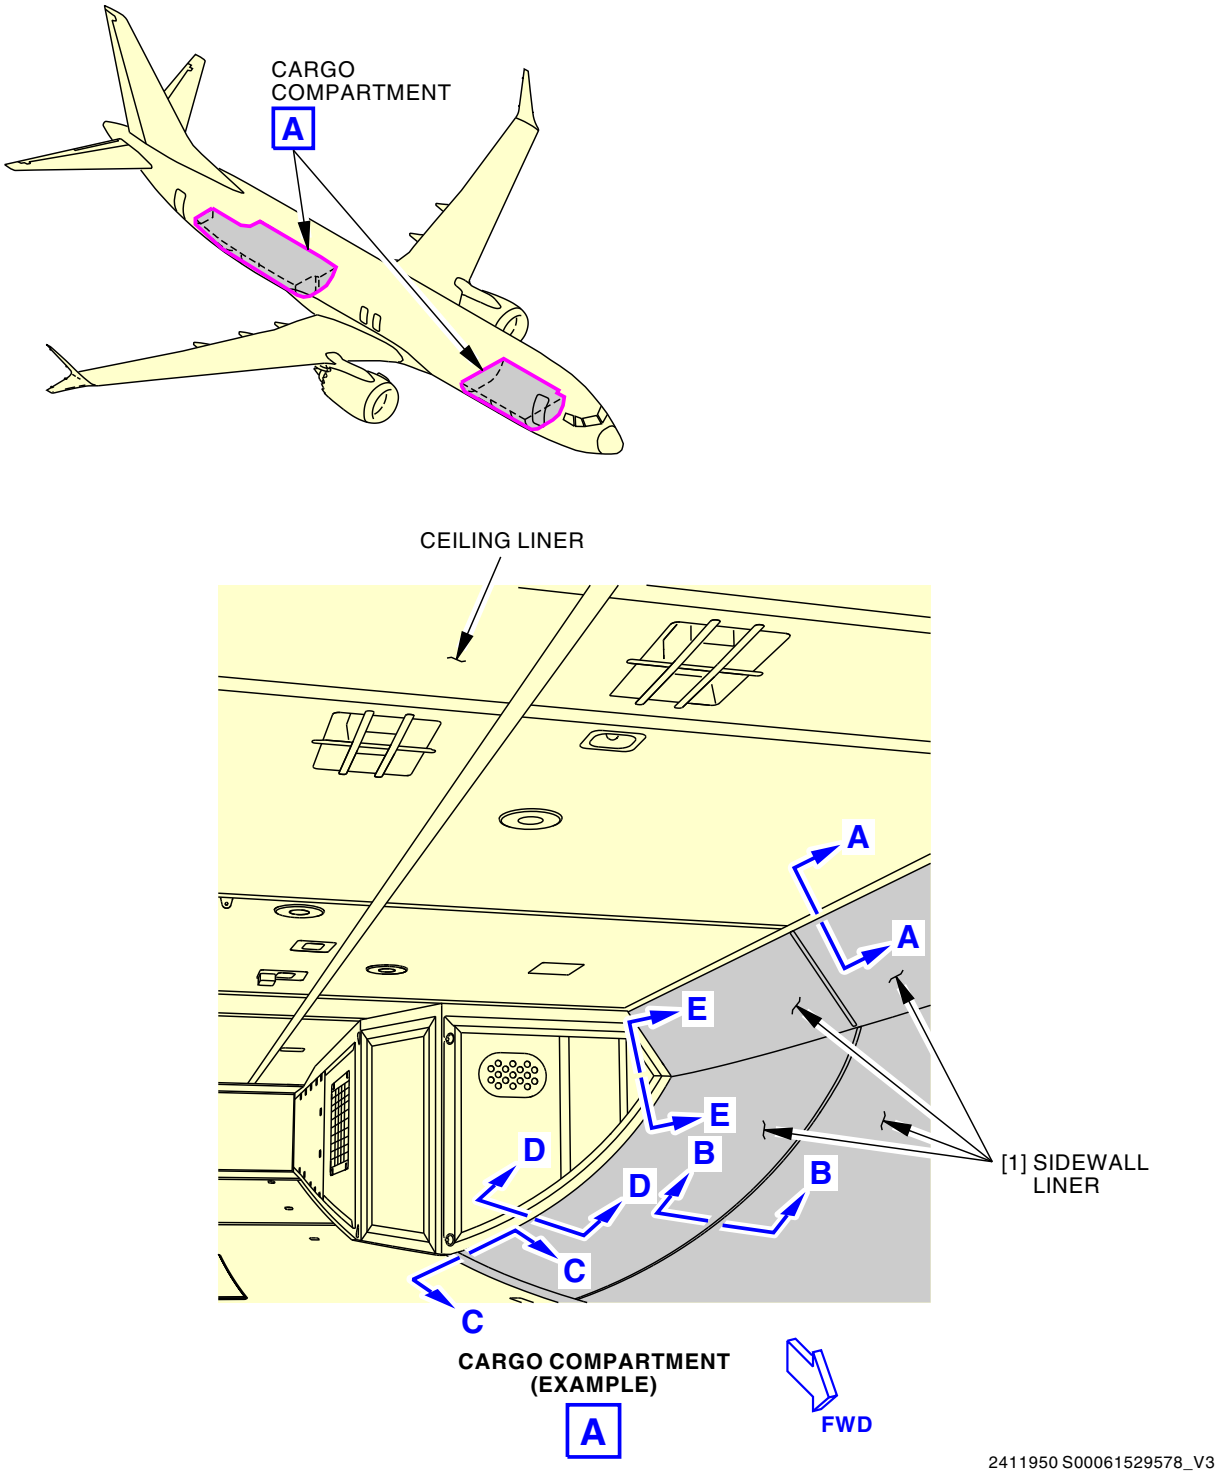


Cargo Compartment Sidewall Liners Installation
Figure 401/50-10-02-990-802 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

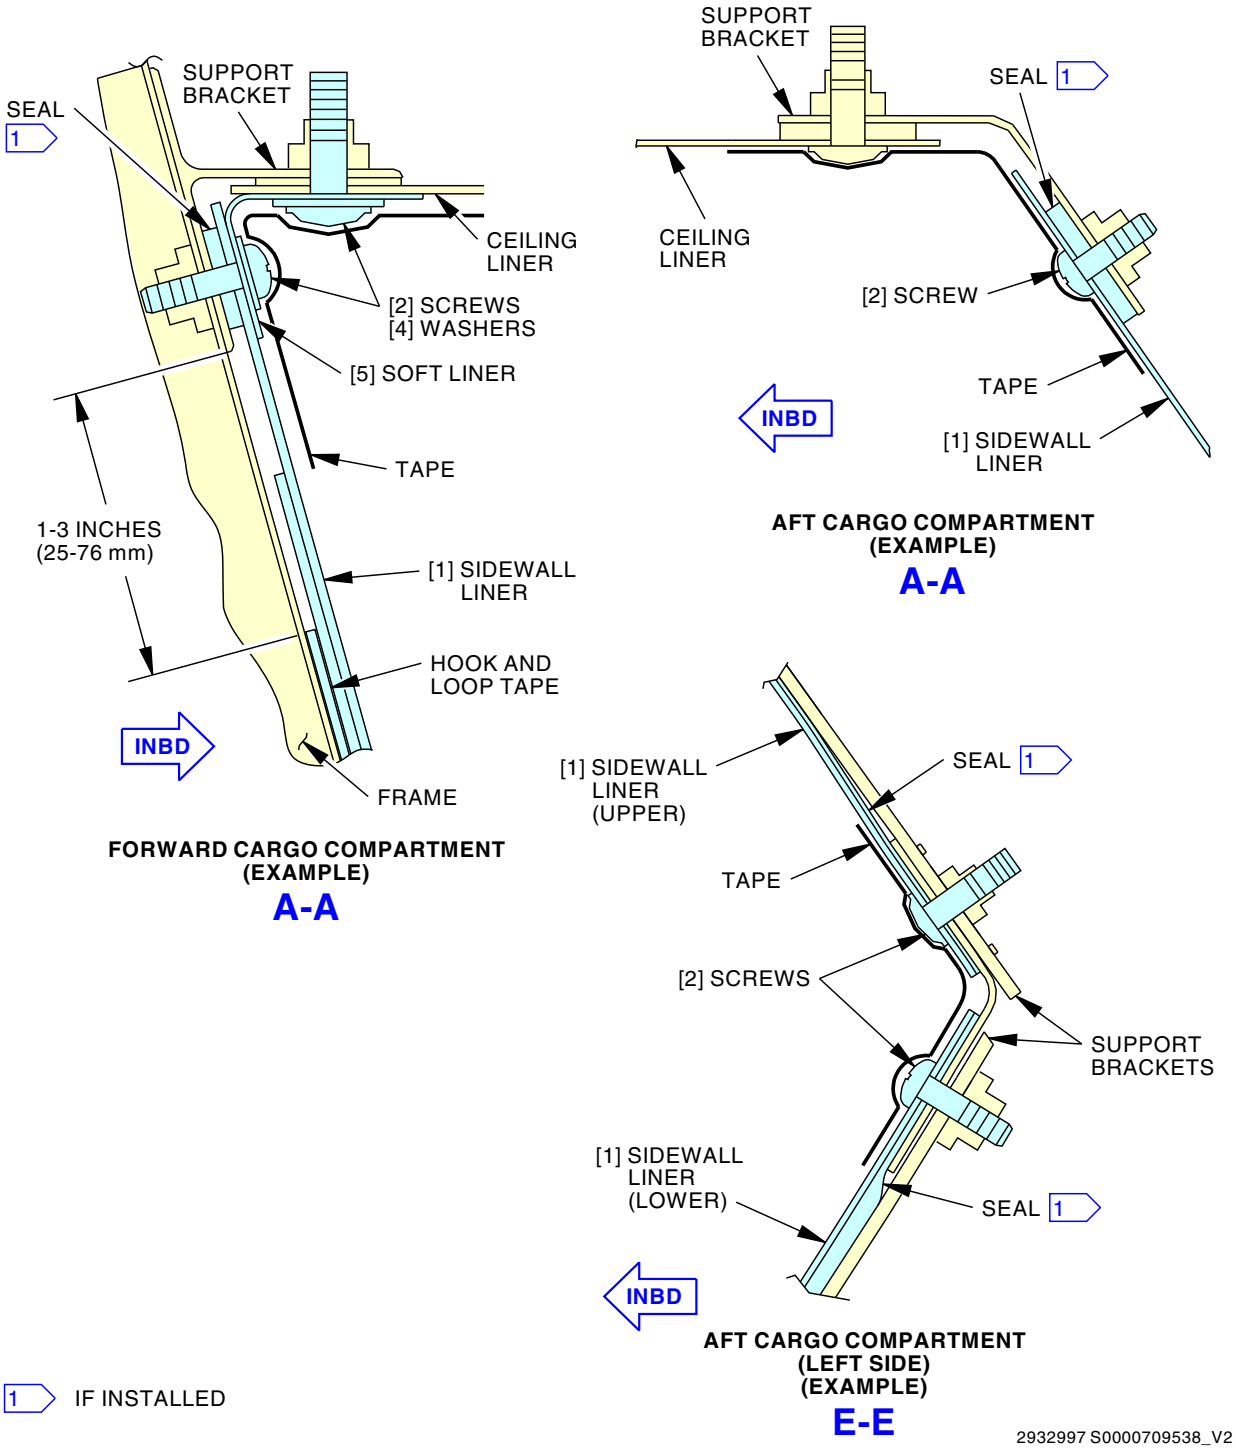


Cargo Compartment Sidewall Liners Installation
Figure 401/50-10-02-990-802 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

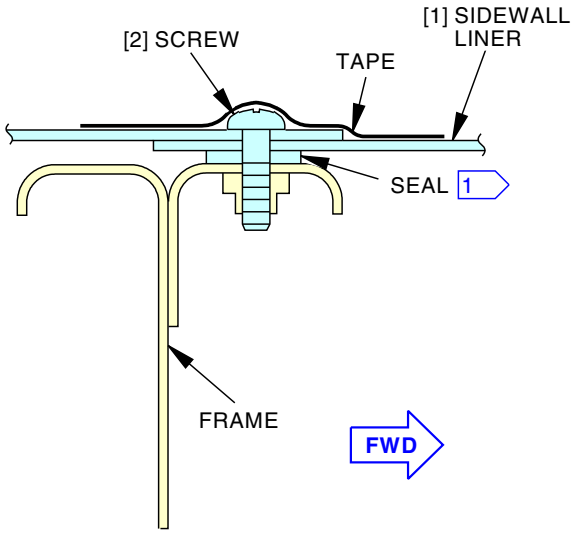

B-B

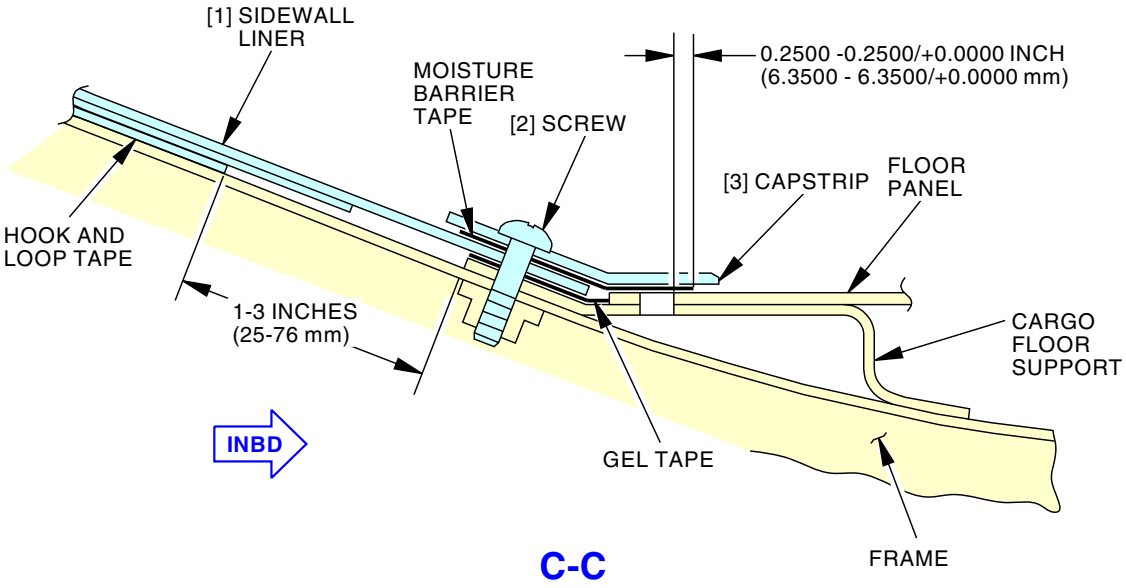


C-C

1 IF INSTALLED

2411951 S00061529579_V4

Cargo Compartment Sidewall Liners Installation
Figure 401/50-10-02-990-802 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

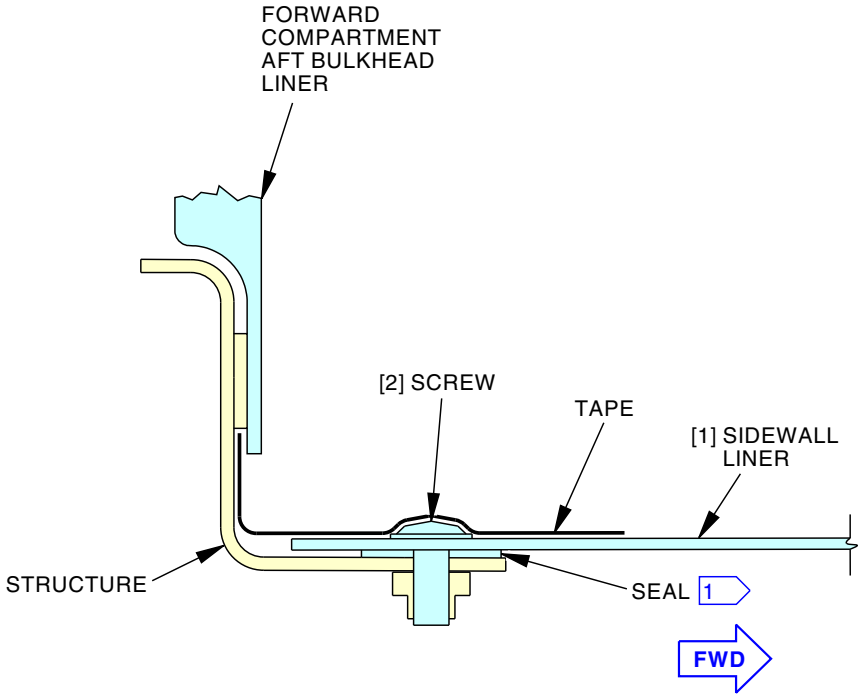

D-D

1 IF INSTALLED

2411952 S00061529580_V3

Cargo Compartment Sidewall Liners Installation
Figure 401/50-10-02-990-802 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-02-400-801

3. Cargo Compartment Sidewall Liners Installation

(Figure 401)

A. General

(1) This task is for the installation of the cargo compartment sidewall liners.

(2) You can make replacement liners to pattern. Use the old liner as a template for the replacement liner. Use an approved liner material that meets requirements of fabric, G00088, and sheet, G02163. Make the replacement liners of the same type/gauge as the liner that will be removed.

B. References

Reference	Title
50-11-02-400-801	Forward Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)
50-12-02-400-801	Aft Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)
51-22-00-390-806	Fillet Seal Application (P/B 201)

C. Consumable Materials

Reference	Description	Specification
A50057	Adhesive - Silicone Rubber, RTV157	BAC5010 Type 60
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
G00088	Fabric, General Purpose, Rigid, Fire Retarded, Glass Fabric Reinforced Plastic Sheeting	BMS8-2
G02163	Sheet - Fire Resistant Glass Fiber Reinforced Phenolic Laminate Cargo Liner	BMS8-223
G02304	Tape - Moisture Barrier, Adhesive One-side	BMS8-346
G50428	Tape - Nitto P-629 (Formerly Permacel) Cargo Pit Seam Tape	BMS5-146 Type 1 Class 1 Grade A
G50532	Tape - Silicone, Foam	BMS1-68
G50734	Tape - Flame Retardant Hi-Tak (Av-DEC - HI-TAK HT3935-7FR-XXX)	
G50788	Tape - Textile Hook And Loop Fasteners Tape (Polyester Hook & Polyester Loop)	BMS8-285 Type IV
G51436	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type 1

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Sidewall liner	50-10-02-01-030	PTF ALL
		50-10-02-01-045	PTF ALL
		50-10-02-01-060	PTF ALL
		50-10-02-01-075	PTF ALL
		50-10-02-05-030	PTF ALL
		50-10-02-05-045	PTF ALL
		50-10-02-05-060	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

AMM Item	Description	AIPC Reference	AIPC Effectivity
1 (cont.)		50-10-02-10-015	PTF ALL
		50-10-02-10-030	PTF ALL
		50-10-02-10-045	PTF ALL
		50-10-02-10-060	PTF ALL
		50-10-02-10-080	PTF ALL
		50-10-02-10-095	PTF ALL
		50-10-02-10-110	PTF ALL
		50-10-02-10-125	PTF ALL
		50-10-02-30-025	PTF ALL
		50-10-02-30-040	PTF ALL
		50-10-02-30-055	PTF ALL
		50-10-02-30-070	PTF ALL
		50-10-02-30-085	PTF ALL
		50-10-02-30-100	PTF ALL
5	Soft liner	50-10-51-30-020	PTF ALL
		50-10-51-30-025	PTF ALL
		50-10-51-30-030	PTF ALL
		50-10-51-30-035	PTF ALL
		50-10-51-30-040	PTF ALL
		50-10-51-30-045	PTF ALL
		50-10-51-30-050	PTF ALL
		50-10-51-30-055	PTF ALL
		50-10-51-30-060	PTF ALL

E. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right
145	Aft Cargo Compartment Equipment Bay - Left
146	Aft Cargo Compartment Equipment Bay - Right

F. Cargo Compartment Sidewall Liners Installation

SUBTASK 50-10-02-210-001

(1) Examine the seal.

SUBTASK 50-10-02-960-001

(2) If it is necessary, replace the seal (tape, G50532).

(a) Make a hole through the seal at the nutplate locations on the support structure.

(b) Trim as necessary to align to the liner contour.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Butt-joint seals for minimum air leakage.

SUBTASK 50-10-02-210-003

(3) Examine hook and loop fastener tape, G50788 (preferred), or tape, G51436 (alternate), that holds the sidewall liner [1].

NOTE: The hook and loop tape loops are on the panel and frames.

(a) If it is necessary, replace hook and loop fastener tape, G50788 (preferred), or tape, G51436 (alternate).

SUBTASK 50-10-02-210-002

(4) Examine the fastener holes on the sidewall liner [1].

(a) Fastener hole elongation (eyebrow condition) is acceptable if the maximum size of the uncovered fastener hole is not over 0.15 in. (0.38 cm) and minimum edge margin of 1.5 times hole diameter is maintained.

(b) For holes at an overlap joint, only one of two liners can have an elongated hole.

SUBTASK 50-10-02-430-001

(5) If it is necessary, apply HI-TAK Tape, G50734, on the floor structure under the sidewall liner [1].

SUBTASK 50-10-02-420-002

(6) Put the sidewall liner [1] in its position.

SUBTASK 50-10-02-420-003

(7) Apply moisture barrier tape, G02304, over the panel edge that is on the floor structure.

NOTE: One continuous strip is preferred.

(a) Use the capstrip [3] to mark the position of the tape.

(b) If there is a join in the tape, make sure that the join has a minimum 2 in. (5 cm) and maximum 6 in. (15 cm) overlap.

(c) Do not join or overlap the moisture barrier tape within 6 in. (15 cm) of all capstrip [3] splice plates.

SUBTASK 50-10-02-420-005

(8) If applicable, do these steps to attach the soft liner [5]:

(a) In the forward compartment, along the sidewall and ceiling interface, align the holes on the soft liner [5] to the inboard side of the liners.

(b) Install the screws [2] and washers [4] to attach the soft liner [5].

SUBTASK 50-10-02-420-004

(9) Install the capstrips [3] and screws [2].

SUBTASK 50-10-02-420-006

(10) Tighten the screws [2] to 25.0 ±2.5 in-lb (3 ±0 N·m).

SUBTASK 50-10-02-110-001

CAUTION

DO NOT LET THE SOLVENT TOUCH PLASTICS, CONTROL CABLES, LUBRICATED AREAS, PLASTIC DECALS, OR PAINTED AREAS OR MARKINGS THAT ARE NOT SKYDROL RESISTANT. THE SOLVENT WILL CAUSE DAMAGE TO THESE ITEMS.

(11) Clean the areas where the tape will be applied with solvent, B00083.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-02-390-001

(12) If it is necessary, fillet seal (RTV157 adhesive, A50057) the capstrip [3] edge adjacent to the cargo door structure (TASK 51-22-00-390-806).

SUBTASK 50-10-02-160-001

WARNING

DO NOT PUT TAPE ON THE SMOKE DETECTOR TUBES OR THE FIRE EXTINGUISHER OUTLET TUBES. THE SMOKE DETECTOR AND THE FIRE EXTINGUISHER SYSTEM WILL NOT SENSE A FIRE IF THERE IS TAPE ON THE TUBE OR OUTLETS. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(13) Apply new Nitto P-629 tape, G50428, to all the joints, overlaps, and fasteners.

NOTE: This step is not applicable for the edges of the lining that touch the floor panel.

(a) Apply the tape with the minimum number of joints in it.

(b) Do not apply tape between the sidewall liner [1] and aft bulkhead liner.

NOTE: The tape at this joint should go from the sidewall liner to the structure behind the bulkhead liner. It is necessary to remove the bulkhead liner to apply tape to this joint. In both the forward and aft cargo compartments, the aft bulkhead does not need tape applied to its joints.

(c) Make sure that the tape is within shelf life limits for optimum tape adhesion.

(d) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

(e) If it is necessary to use short pieces of Nitto P-629 tape, G50428, make a minimum overlap of 0.5 in. (12.7 mm).

(f) Push Nitto P-629 tape, G50428, firmly to make sure that there is a good bond.

NOTE: There is a good bond if the surface of the tape is smooth and does not have air bubbles.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-02-410-001

(1) If removed, install the aft bulkhead liner (TASK 50-11-02-400-801 or TASK 50-12-02-400-801).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT CEILING LINER - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the cargo compartment ceiling liner

(2) An installation of the cargo compartment ceiling liner.

TASK 50-10-03-000-801

2. Cargo Compartment Ceiling Liner Removal

(Figure 401)

A. General

(1) This task is for the removal of the cargo compartment ceiling liner.

B. References

Reference	Title
21-32-05-000-801	Ceiling Blowout Panel Removal (P/B 401)

C. Location Zones

Zone	Area
100	Lower Half of Fuselage
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-10-03-020-001

(1) Remove and discard the tape from around the edges of the liner.

SUBTASK 50-10-03-020-002

(2) Do this task: Ceiling Blowout Panel Removal, TASK 21-32-05-000-801.

E. Cargo Compartment Ceiling Liner Removal

SUBTASK 50-10-03-020-003

(1) Do the steps that follow to remove the ceiling liner [1]:

(a) Remove the screws [7] that attach the net fitting shroud [6] to the ceiling liner [1].

1) Remove the net fitting shroud [6].

(b) Remove the screws [4] that attach the ring [5] for the ceiling light [3] to the ceiling liner [1].

1) Remove the ring [5].

(c) Remove the screws [9] that attach the retainer [8] for the fire extinguishing nozzle to the ceiling liner [1].

1) Remove the retainer [8].

(d) Remove the screws that attach the smoke detector shroud to the ceiling liner [1] and remove the guard.

SUBTASK 50-10-03-020-004

(2) Remove the screws [11] that hold the ceiling liner [1] to the support structure.

(a) In the forward compartment, along the sidewall and ceiling interface remove the screws [11] and washers [12] that attach the soft liner [10].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) In the aft compartment, along the e/e rack or waste compartment, remove the screws [11] that attach the soft liner [10].

1) If it is necessary, loosen the 1/4-turn fasteners on the access panels to remove the soft liner [10].

2) The soft liner [10] is attached with 2-sided tape to the structure.

SUBTASK 50-10-03-020-005


(3) Carefully move apart the hook and loop fastener tape from the upper surface of the ceiling liner [1].

SUBTASK 50-10-03-020-006

(4) Remove the ceiling liner [1].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

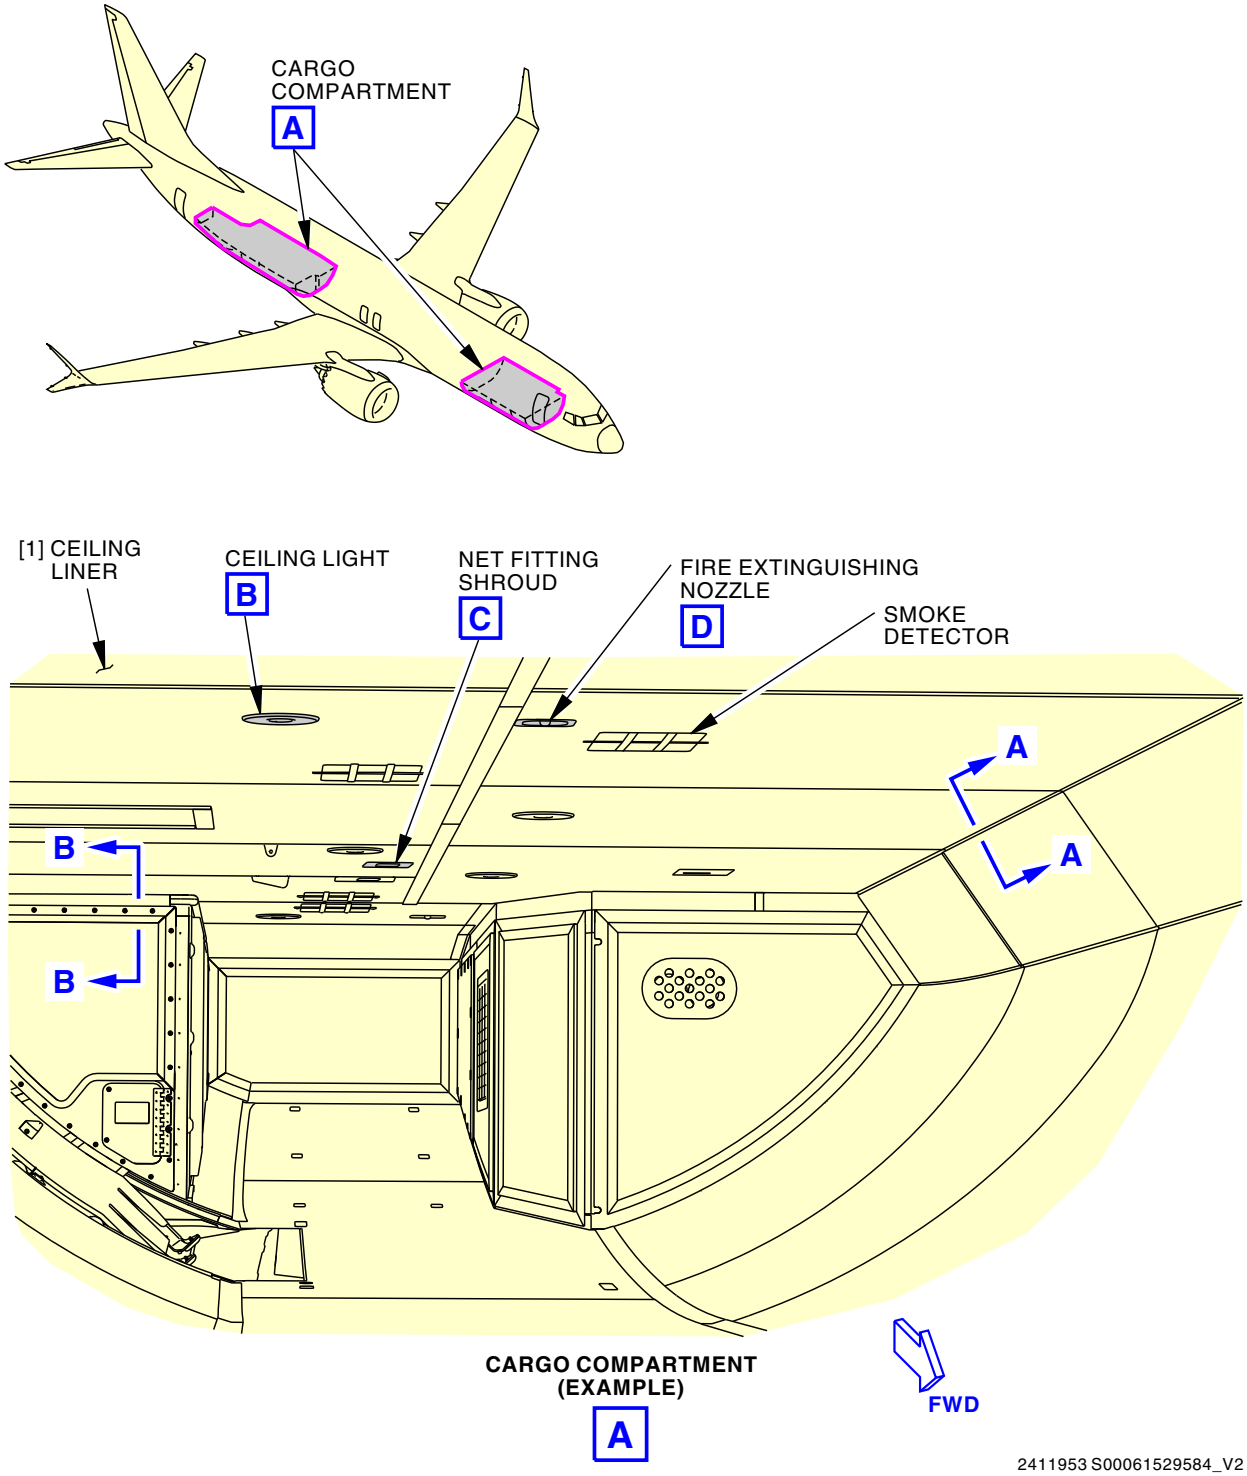


Cargo Compartment Ceiling Liner Installation
Figure 401/50-10-03-990-801 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

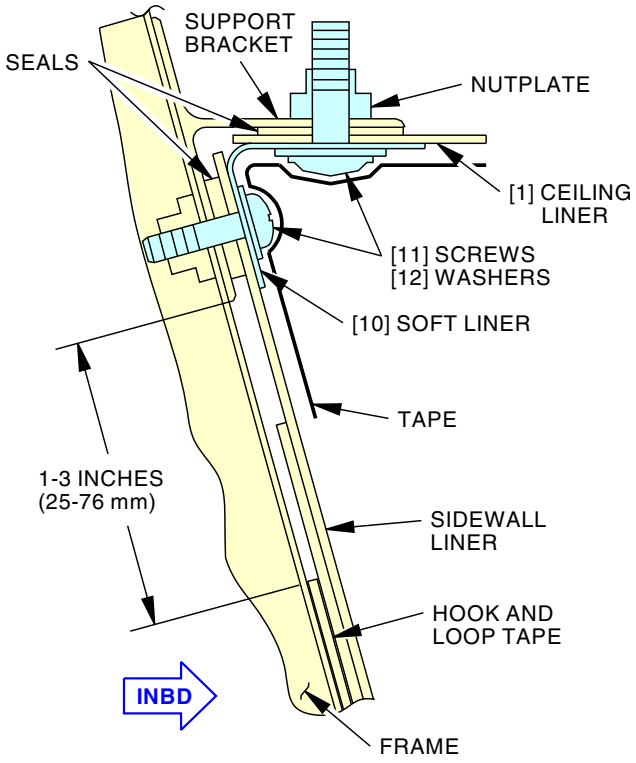

FORWARD CARGO COMPARTMENT (EXAMPLE)

A-A

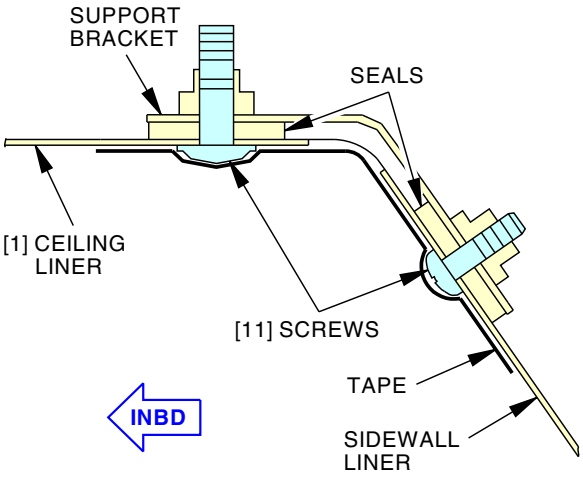


AFT CARGO COMPARTMENT (EXAMPLE)

A-A

2932999 S0000709173_V1

Cargo Compartment Ceiling Liner Installation
Figure 401/50-10-03-990-801 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

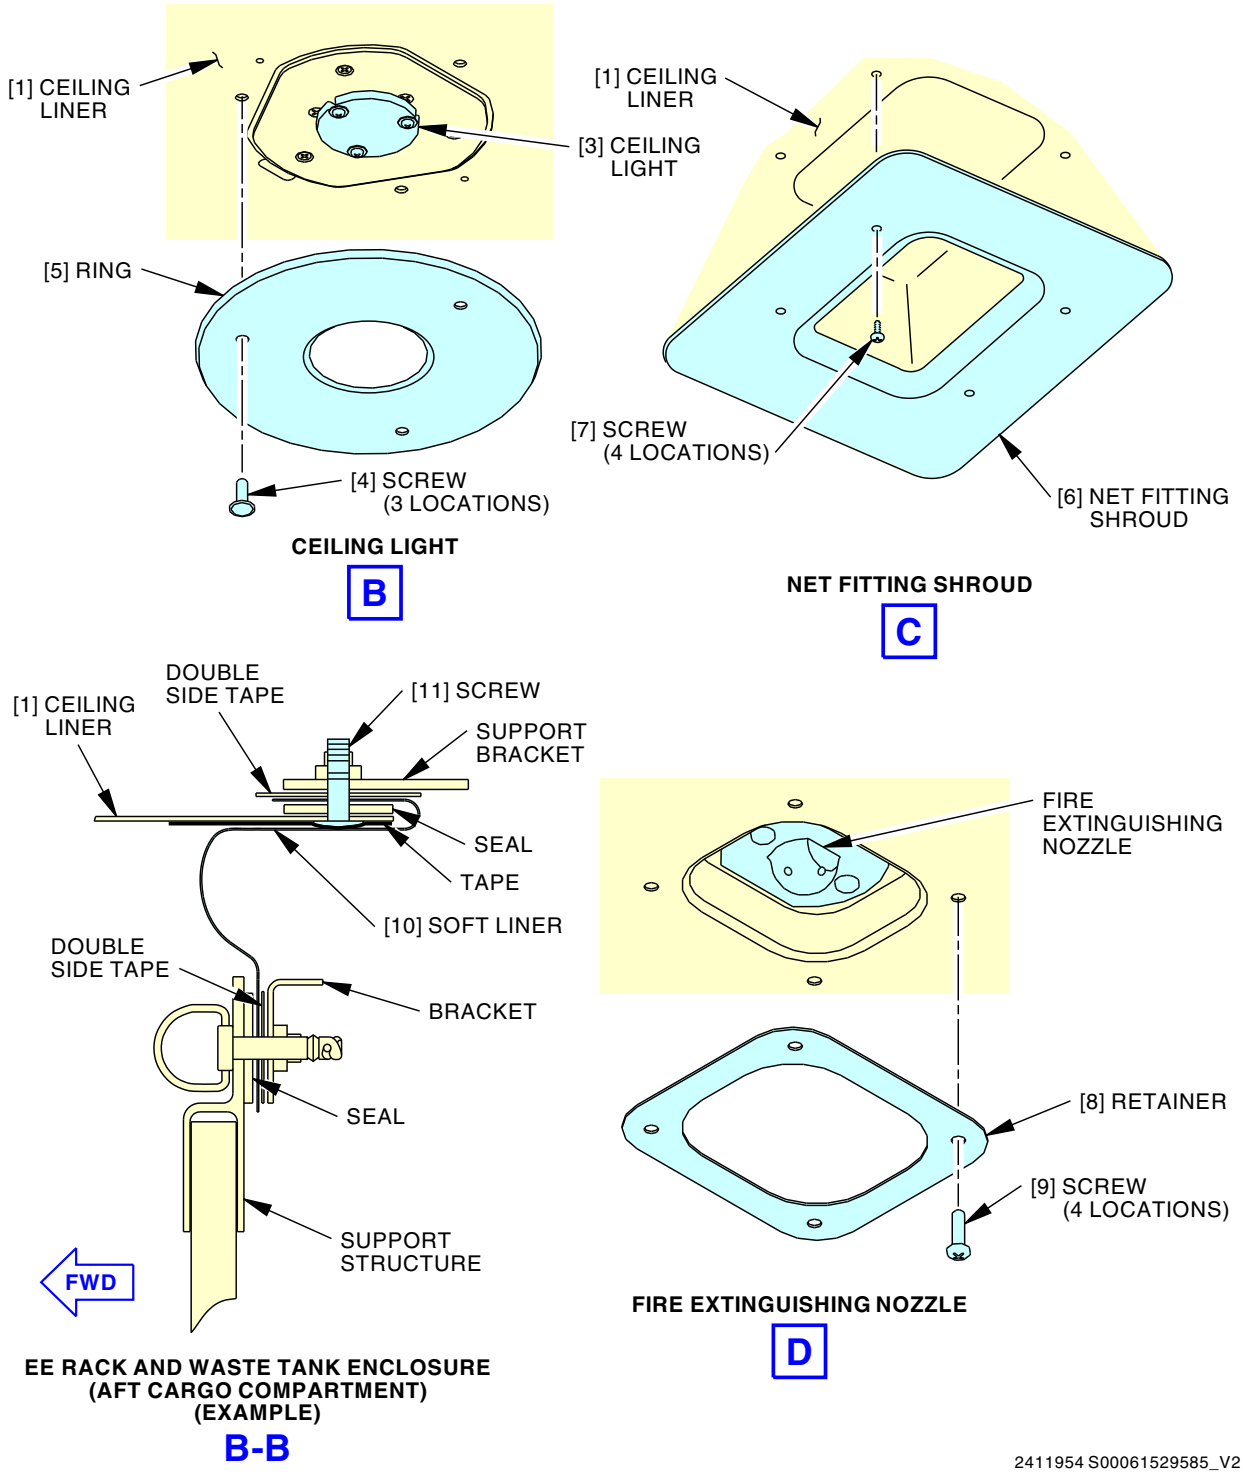

Cargo Compartment Ceiling Liner Installation
Figure 401/50-10-03-990-801 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-03-400-801

3. Cargo Compartment Ceiling Liner Installation

(Figure 401)

A. General

(1) This task is for the installation of the cargo compartment ceiling liner.

(2) You can make replacement liners to pattern. Use the old liner as a template for the replacement liner. Use an approved liner material that meets requirements of fabric, G00088, and sheet, G02163. Make the replacement liner of the same type/gauge as the liner that you will remove.

(3) It is necessary to follow the step by step instructions in this task. This will minimize smoke out of the cargo compartment during a fire.

B. References

Reference	Title
21-32-05-400-801	Ceiling Blowout Panel Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
G00088	Fabric, General Purpose, Rigid, Fire Retarded, Glass Fabric Reinforced Plastic Sheeting	BMS8-2
G02163	Sheet - Fire Resistant Glass Fiber Reinforced Phenolic Laminate Cargo Liner	BMS8-223
G02361	Tape - Cargo Lining Joint Seal	BMS5-146
G50155	Tape - Carpet, Double-sided, 16 oz/sq. yd., White. Storage Life 18 Months.	BMS5-133 Type II Class 1
G50532	Tape - Silicone, Foam	BMS1-68
G50788	Tape - Textile Hook And Loop Fasteners Tape (Polyester Hook & Polyester Loop)	BMS8-285 Type IV
G51436	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type 1

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
10	Soft liner	50-10-03-21-030	PTF ALL
		50-10-51-30-020	PTF ALL
		50-10-51-30-025	PTF ALL
		50-10-51-30-030	PTF ALL
		50-10-51-30-035	PTF ALL
		50-10-51-30-040	PTF ALL
		50-10-51-30-045	PTF ALL
		50-10-51-30-050	PTF ALL
		50-10-51-30-055	PTF ALL
		50-10-51-30-060	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Location Zones

Zone	Area
100	Lower Half of Fuselage
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

F. Cargo Compartment Ceiling Liner Installation

SUBTASK 50-10-03-210-001

(1) Examine the seal.

SUBTASK 50-10-03-960-001

(2) If it is necessary, replace the seal (tape, G50532).

(a) Make a hole through the seal at the nutplate locations on the support structure.

(b) Trim as necessary to align to the liner contour.

(c) Butt-joint seals for minimum air leakage.

SUBTASK 50-10-03-210-002

(3) Examine the fastener holes on the ceiling liners [1].

(a) Fastener hole elongation (eyebrow condition) is acceptable if the maximum size of the uncovered fastener hole is not over 0.15 in. (0.38 cm). And a minimum edge margin of 1.5 times hole diameter is maintained.

(b) For holes at an overlap joint, only one of two liners can have an elongated hole.

SUBTASK 50-10-03-420-001

(4) Put the ceiling liner [1] in its position.

SUBTASK 50-10-03-430-001

(5) Put pressure on the ceiling liner [1] in the areas of the hook and loop fastener tape, G50788 (preferred), or tape, G51436 (alternative), to make sure that it attaches fully.

SUBTASK 50-10-03-420-008

(6) If it is necessary, do these steps to attach the soft liner [10]:

(a) In the forward compartment, along the sidewall and ceiling interface, align the holes on the soft liner [10] to the inboard side of the liners.

1) Install the screws [11] and washers [12] to attach the soft lining.

(b) In the aft compartment, along the Electrical / Electronic (E/E) rack or the waste compartment interface, clean the areas where you will apply 2-sided tape with solvent, B00083.

1) Install the 2-sided tape, G50155, to the structure.

a) Align along the nutplate centerline.

2) Make a hole at each nutplate position.

3) Remove the protective lining from the 2-sided tape.

4) Put the soft liner [10] in its position.

a) Align the holes on the soft lining with the nutplate holes.

5) Install the screws [11].

6) If it is necessary, tighten the 1/4-turn fasteners on the access panels.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-03-420-002

(7) Install the screws [11] to attach the ceiling liner [1] to the support structure.

SUBTASK 50-10-03-420-007

(8) Torque the screws [11] to 20 ±3 in-lb (2 ±0 N·m).

SUBTASK 50-10-03-420-003

(9) Do these steps to attach the applicable parts:

(a) Put the net fitting shroud [6] in its position and install the screws [7].

CAUTION

DO NOT COVER THE CLOSEOUT-RING OR LENS WITH TAPE, PAPER, PLASTIC, AND OTHER ITEMS. IF YOU DO, IT CAN CAUSE THE LIGHT TO BECOME TOO HOT.

(b) Put the ring [5] for the ceiling light [3] in its position and install the screws [4].

(c) Put the retainer [8] for the fire extinguishing nozzle in its position and install the screws [9].

(d) Install the smoke detector guard in its position with the screws that attach the smoke detector shroud to the ceiling liner [1].

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-03-420-004

(1) Do this task: Ceiling Blowout Panel Installation, TASK 21-32-05-400-801.

SUBTASK 50-10-03-110-001

CAUTION

DO NOT LET THE SOLVENT TOUCH PLASTICS, CONTROL CABLES, LUBRICATED AREAS, PLASTIC DECALS, OR PAINTED AREAS OR MARKINGS THAT ARE NOT SKYDROL RESISTANT. THE SOLVENT WILL CAUSE DAMAGE TO THESE ITEMS.

(2) Clean the areas where you will apply tape with solvent, B00083.

SUBTASK 50-10-03-420-005

WARNING

DO NOT PUT TAPE ON THE SMOKE DETECTOR TUBES OR THE FIRE EXTINGUISHER OUTLET TUBES. THE SMOKE DETECTOR AND THE FIRE EXTINGUISHER SYSTEM WILL NOT SENSE A FIRE IF THERE IS TAPE ON THE TUBE OR OUTLETS. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT APPLY TAPE ON THE BLOWOUT PANELS OR CAP STRIPS ON THE CEILING LINER. IN THE AFT CARGO COMPARTMENT, DO NOT APPLY TAPE BETWEEN THE CEILING LINER AND CAP STRIP ALONG THE CEILING CENTERLINE. THE JOINT GIVES A VENT PATH FOR AIR FLOW IF A DECOMPRESSION OCCURS. IF THE PRESSURE RELIEF FUNCTION OPERATES INCORRECTLY, THIS CAN CAUSE INJURY TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(3) Apply the new tape, G02361, on the screws and edges of the liners and the smoke detector shroud.

NOTE: Apply the tape with the minimum number of joints in it. Do not apply tape between the ceiling liner and the aft bulkhead liner. The tape at this joint should be only on the ceiling liner. In both the forward and aft cargo compartments, the aft bulkhead does not need tape applied to its joints.

NOTE: Do not apply the tape to the blowout panels or cap strips on the ceiling liner.

(a) Make sure that the tape is within shelf life limits for optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

(c) If it is necessary to use short pieces of tape, G02361, make a minimum overlap of 0.50 in. (12.70 mm).

(d) Push the tape, G02361, firmly to make sure that there is a good bond.

NOTE: There is a good bond if the surface of the tape is smooth and does not have air bubbles.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT FLOOR PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) A removal of the cargo compartment floor panel

(2) An installation of the cargo compartment floor panel.

TASK 50-10-04-000-801

2. Cargo Compartment Floor Panel Removal

(Figure 401)

A. General

(1) This task is for the removal of the cargo compartment floor panel.

B. References

Reference	Title
50-11-01-000-801	Forward Cargo Compartment Forward Bulkhead Liner Removal (P/B 401)

C. Consumable Materials

Reference	Description	Specification
G02304	Tape - Moisture Barrier, Adhesive One-side	BMS8-346

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Prepare for the Removal

SUBTASK 50-10-04-010-001

(1) If you will remove the floor panel [1] that is adjacent to the forward bulkhead liner in the forward cargo compartment, then remove the forward bulkhead liner (TASK 50-11-01-000-801).

F. Cargo Compartment Floor Panel Removal

SUBTASK 50-10-04-020-001

(1) Remove the screws [3], screws [9] and bolts [4] that attach the splice plates [6], cap strips [7], tiedowns [5], and floor panels [1] to the support structure.

NOTE: The screws [3], screws [9] and bolts [4] in different locations are of different lengths. Make a note of the location of the screws [3], screws [9] and bolts [4].

SUBTASK 50-10-04-020-002

(2) Remove the moisture barrier tape, G02304, where the cargo sidewall liner meets the floor panel [1].

SUBTASK 50-10-04-020-003


(3) Remove the floor panel [1].


SUBTASK 50-10-04-020-004

(4) Remove the gaskets [2].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

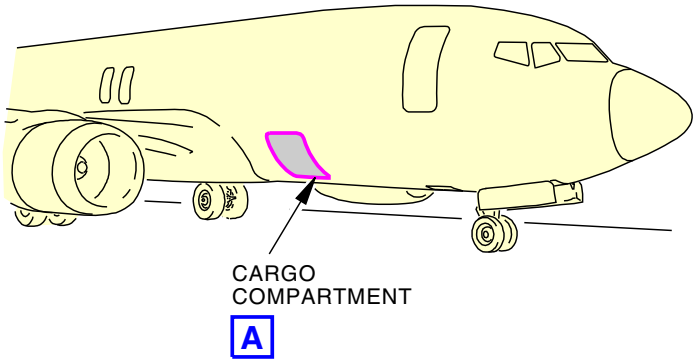

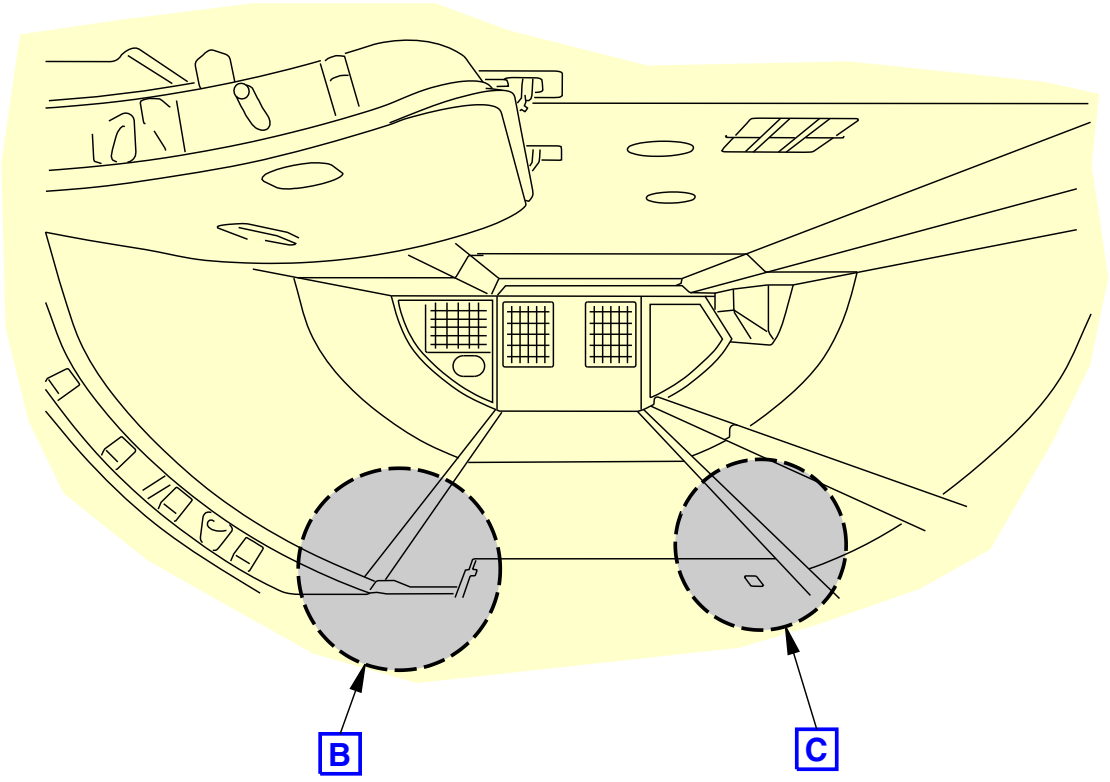


CARGO COMPARTMENT
(EXAMPLE)

A

2411955 S00061529591_V1


Floor Panels and Walkways Installation
Figure 401/50-10-04-990-806 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

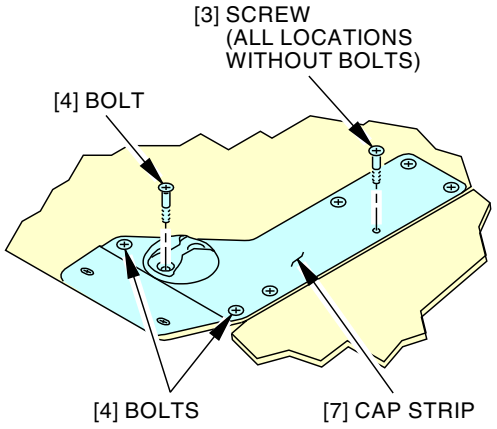


(FORWARD CARGO COMPARTMENT)

B

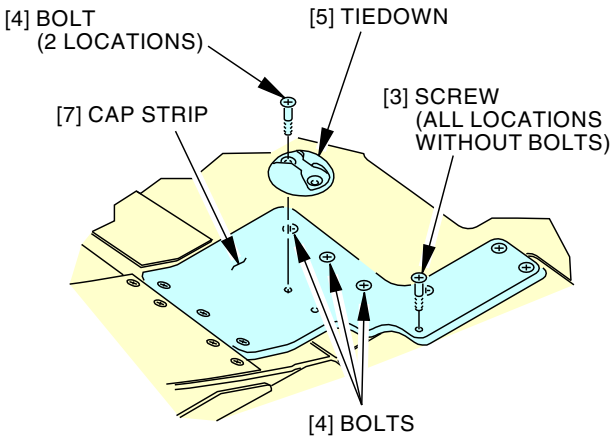

(AFT CARGO COMPARTMENT)

B

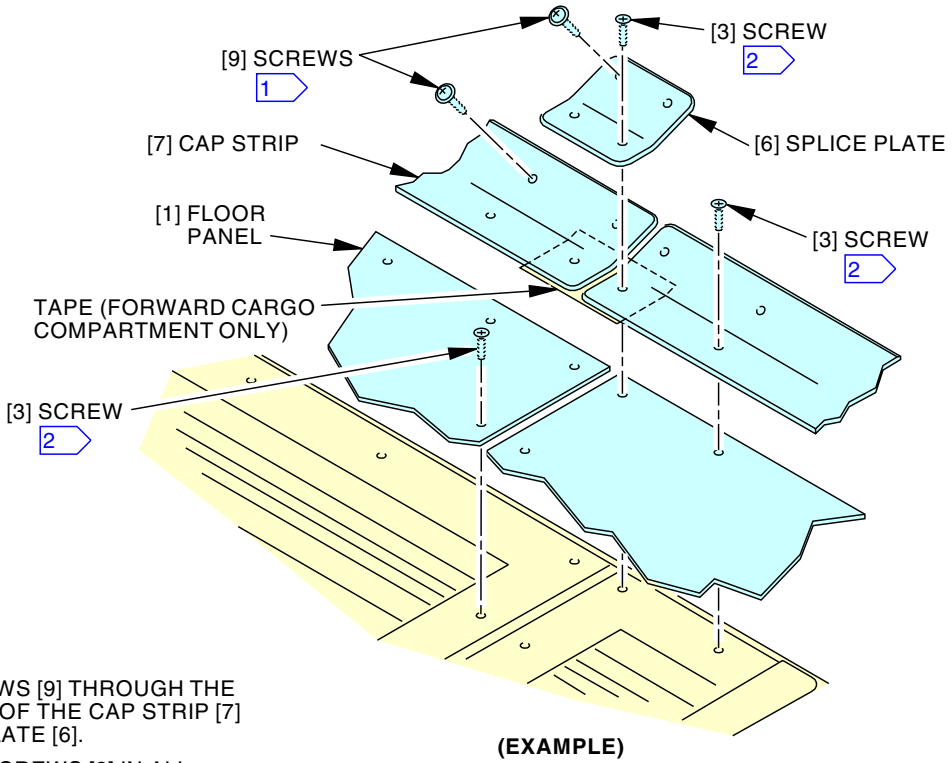

1 INSTALL SCREWS [9] THROUGH THE ANGLED PART OF THE CAP STRIP [7] AND SPLICE PLATE [6].

2 INSTALL THE SCREWS [3] IN ALL HOLES THAT ARE NOT SPECIFIED OTHERWISE.


(EXAMPLE)

C

2411956 S00061529592_V1

Floor Panels and Walkways Installation
Figure 401/50-10-04-990-806 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

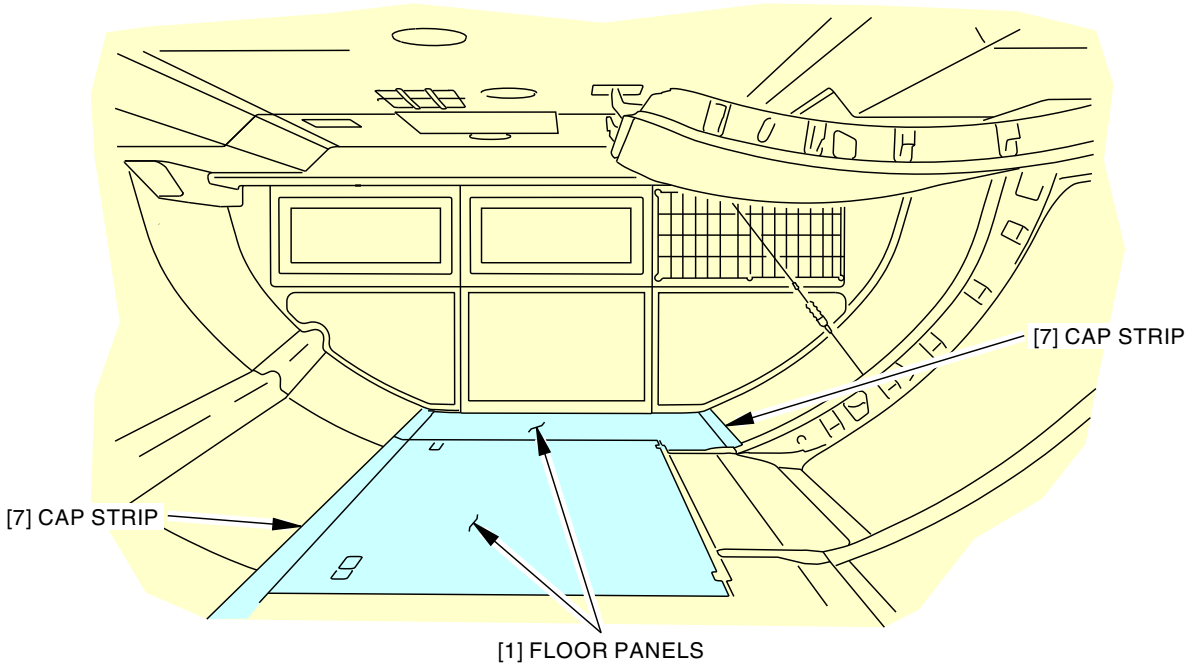


**FORWARD CARGO COMPARTMENT
(EXAMPLE)**

2411957 S00061529593_V1

**Floor Panels and Walkways Installation
Figure 401/50-10-04-990-806 (Sheet 3 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

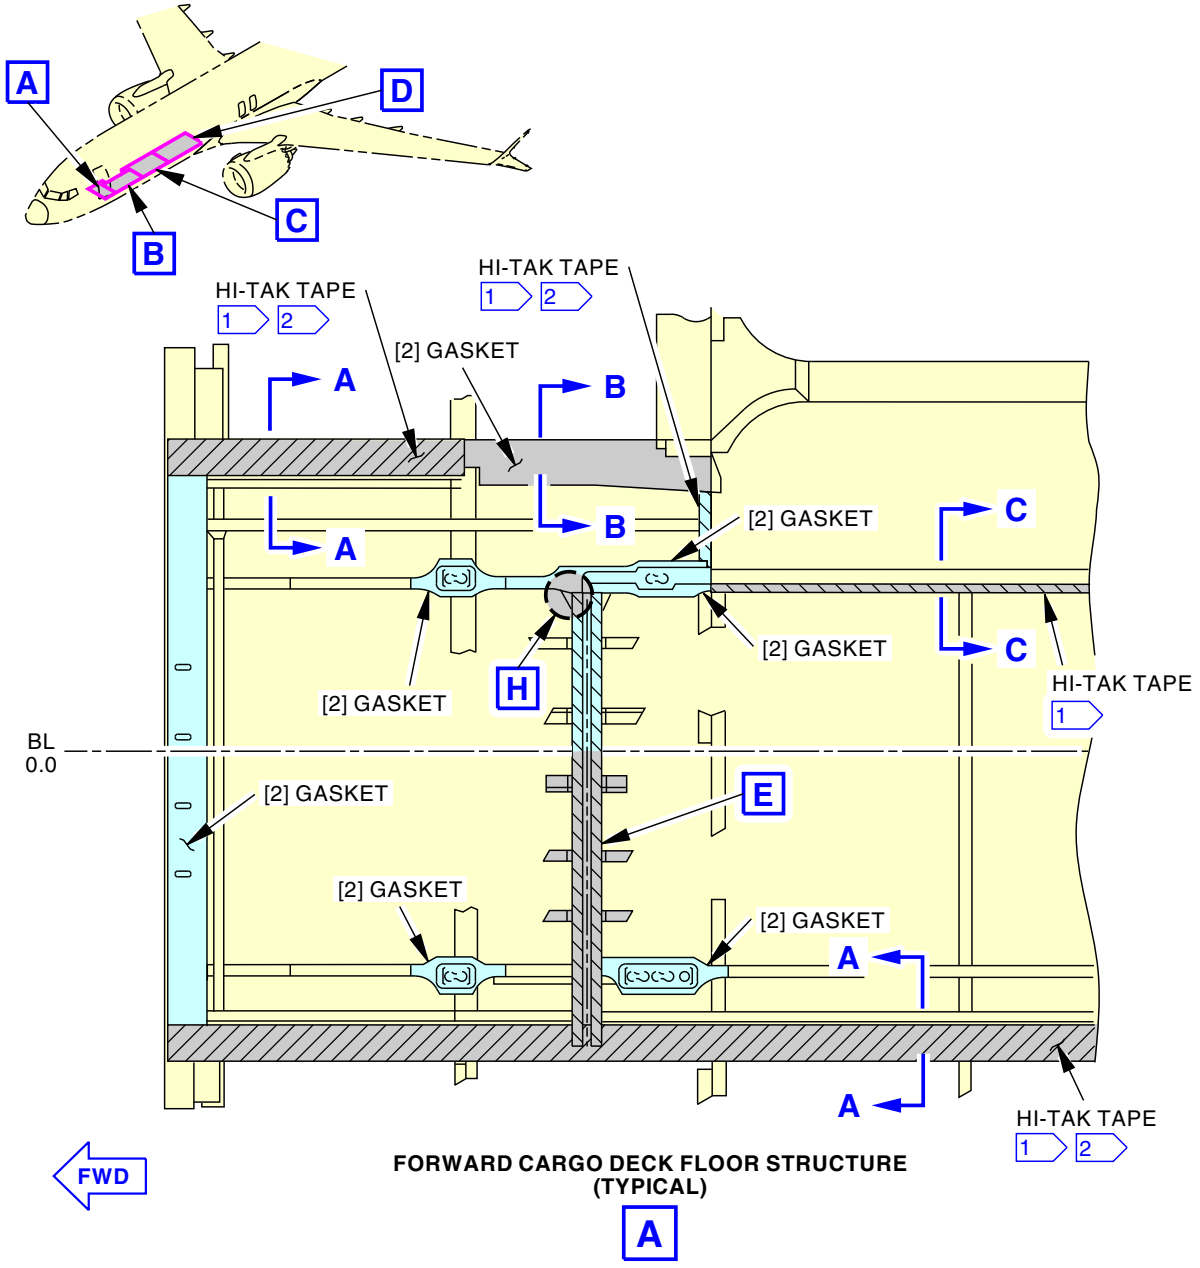

FORWARD CARGO DECK FLOOR STRUCTURE (TYPICAL)

A


1 A CONTINUOUS STRIP IS PREFERRED. HOWEVER, A JOIN IN THE TAPE IS ALLOWED. MAKE SURE THERE ARE NO GAPS BETWEEN THE TAPE JOINTS. A MAXIMUM OF 0.25 INCH OVERLAP IS ALLOWED.

2 ALIGN THE EDGE OF THE TAPE WITH THE OUTBOARD EDGE OF THE SUPPORT STRUCTURE ALONG THE ENTIRE LENGTH OF THE FORWARD CARGO COMPARTMENT.

2411958 S00061529594_V1

Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 1 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

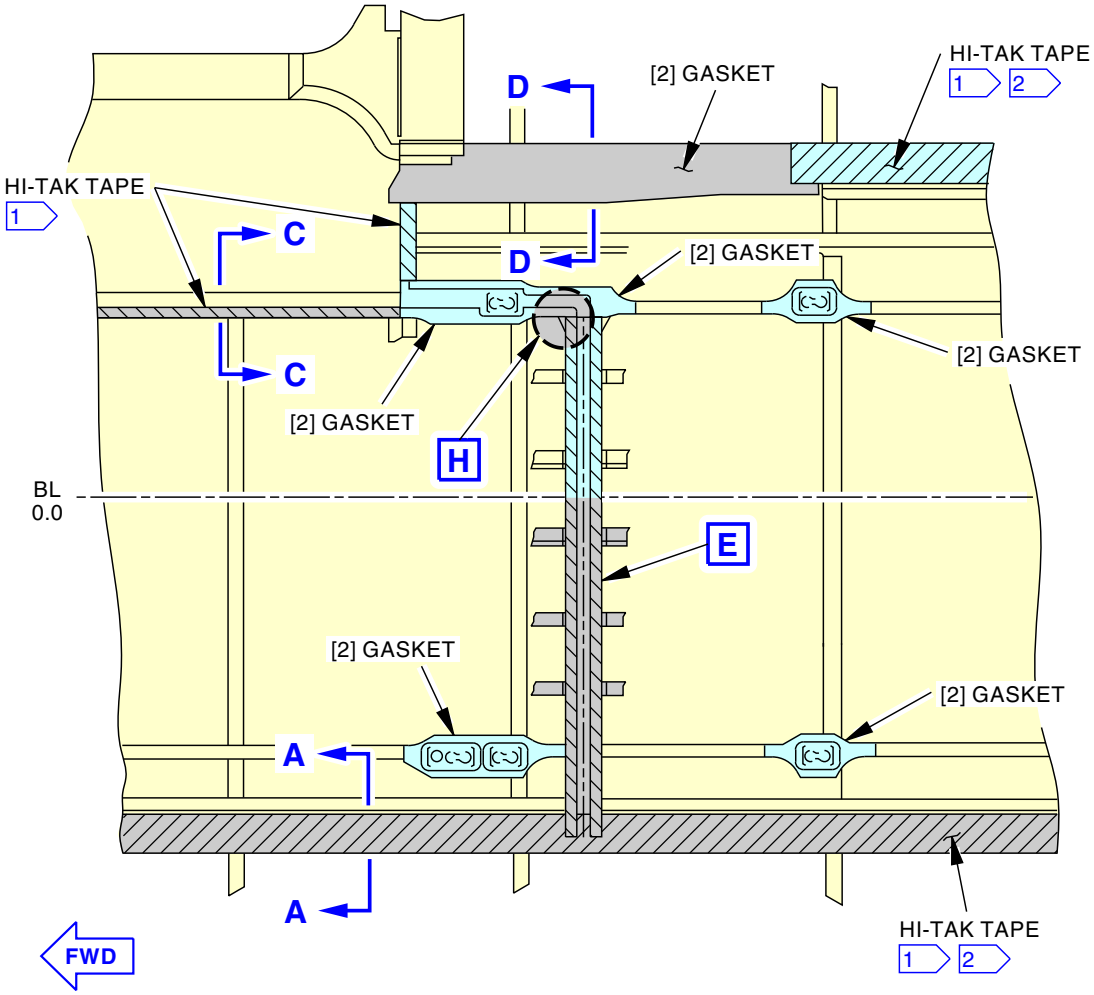


FORWARD CARGO DECK FLOOR STRUCTURE (TYPICAL)

B

2411961 S00061529597_V1


Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 2 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

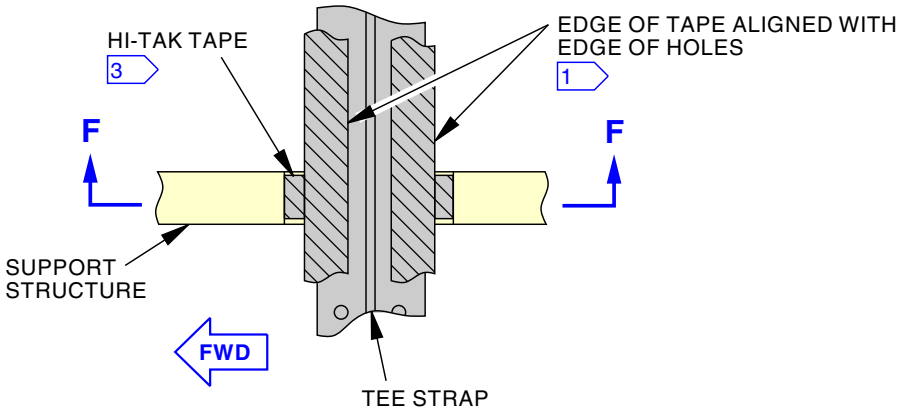

TEE STRAP WITH JOGGLE (TYPICAL)

F

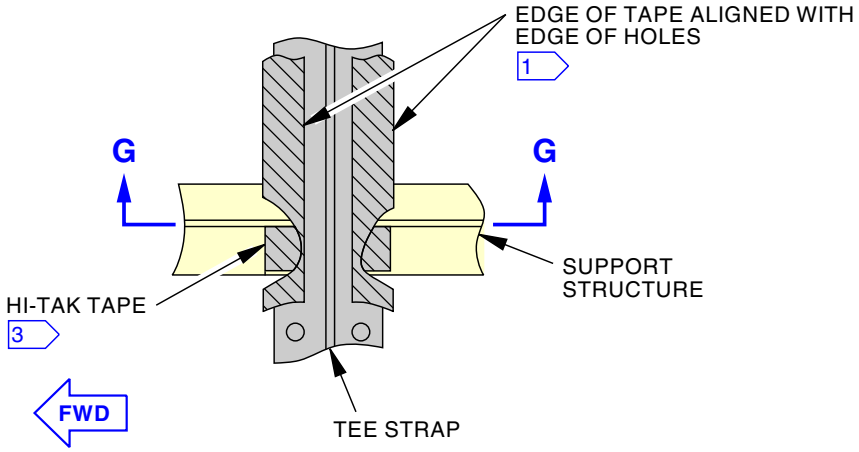

TEE STRAP WITHOUT JOGGLE (TYPICAL)


F

3 LOCATE THE TAPE IN THE CENTER OF THE SUPPORT STRUCTURE.

2411962 S00061529598_V1

Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 3 of 9)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

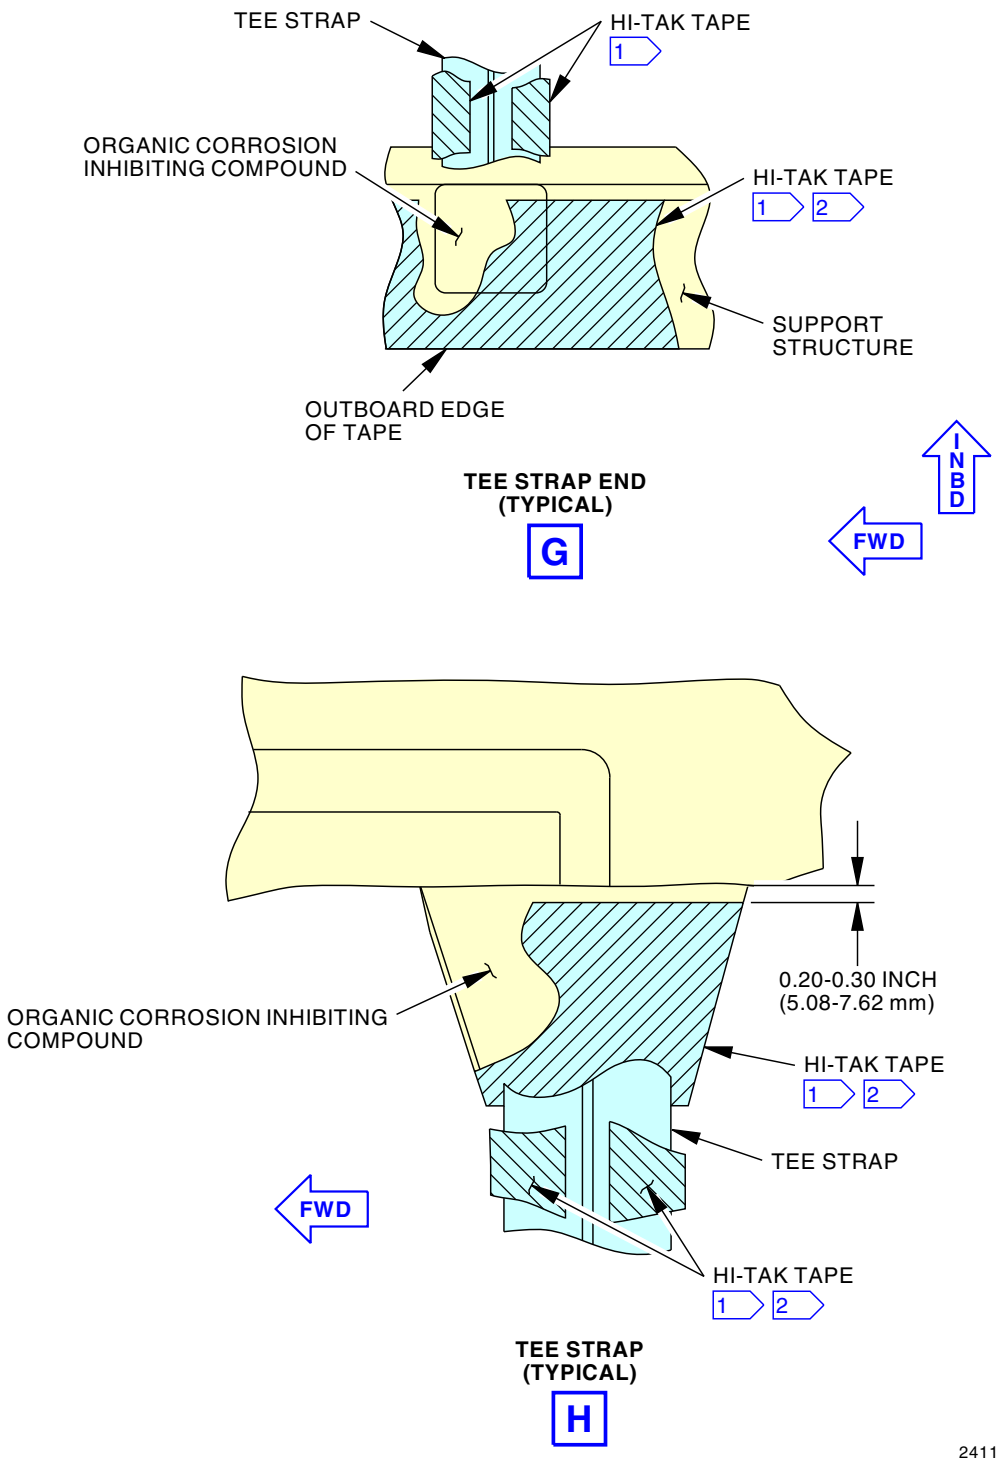

2411963 S00061529599_V1


Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 4 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

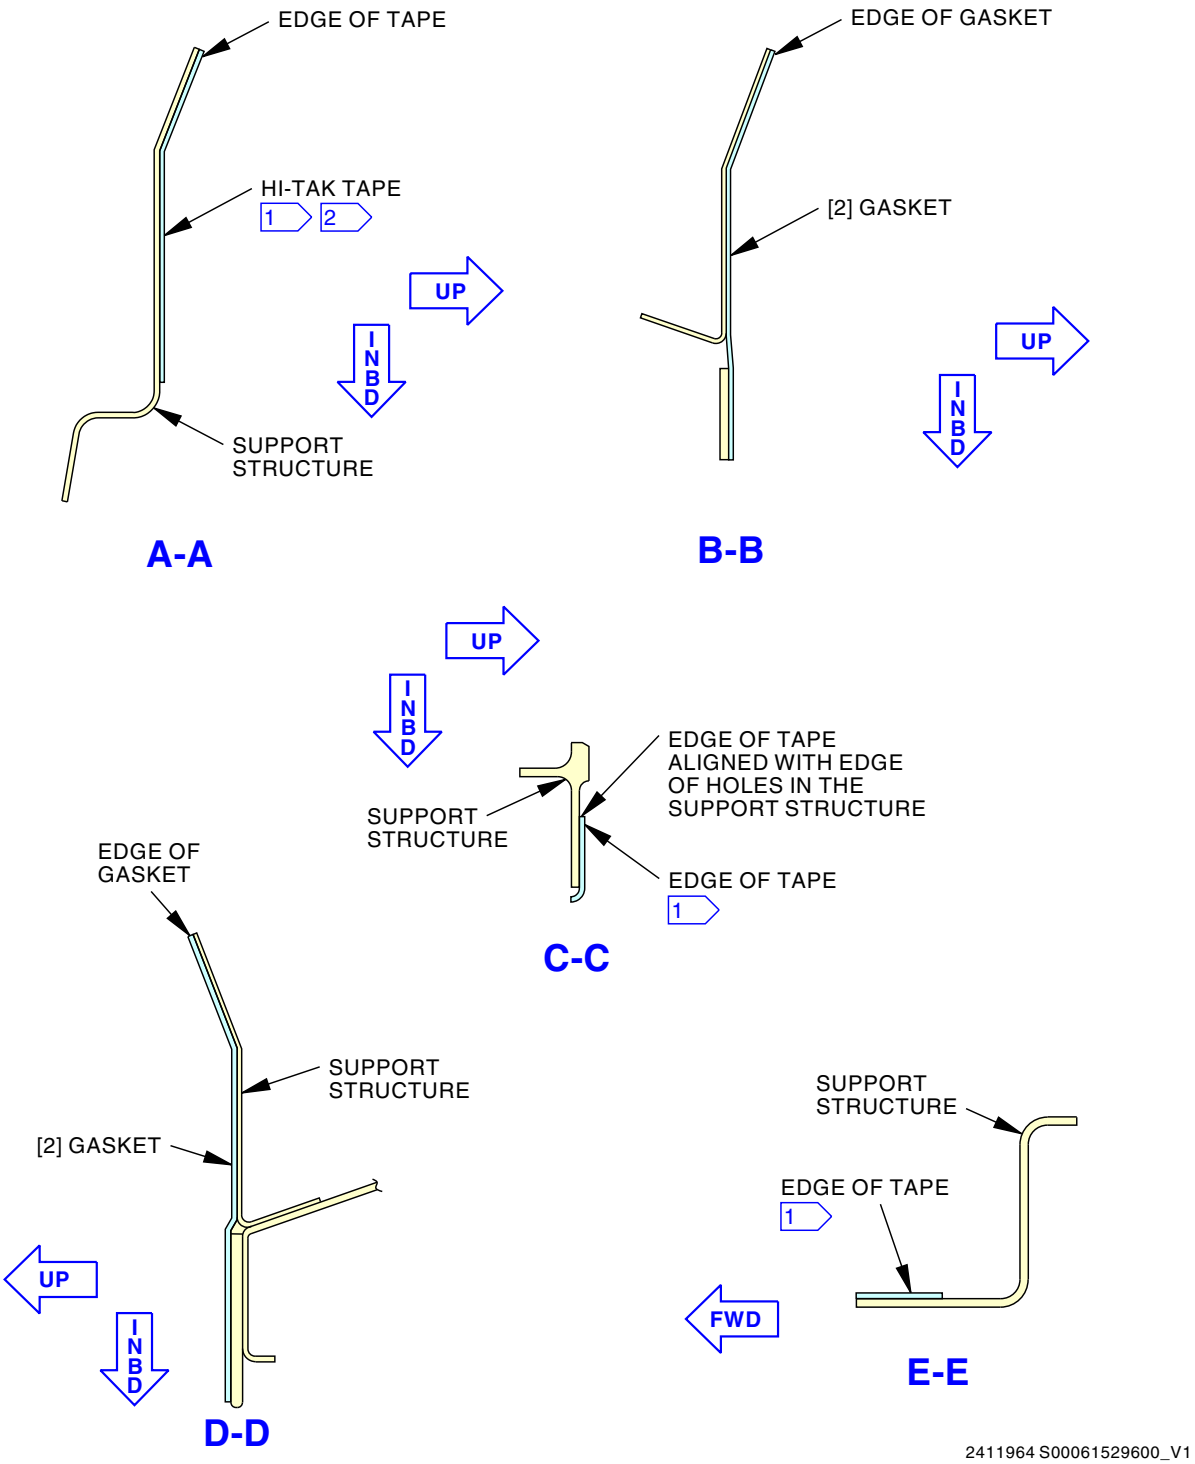


Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 5 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

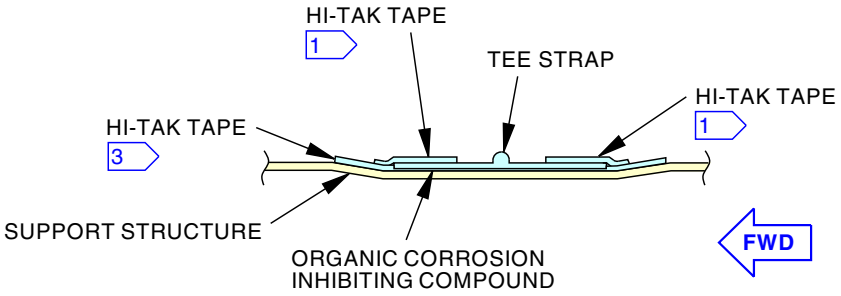

F-F

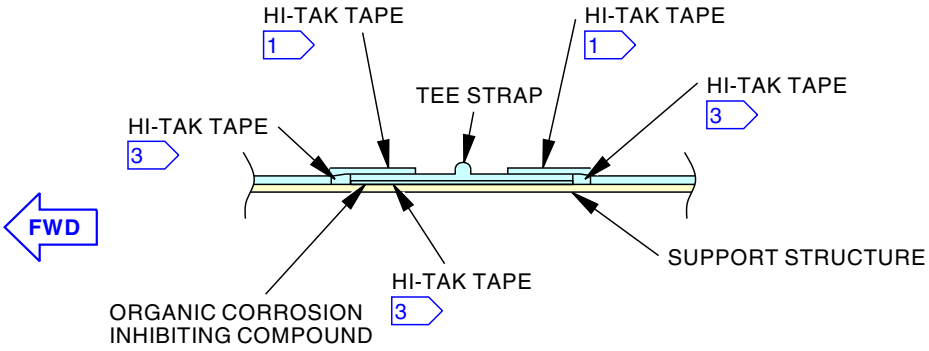


G-G

2411965 S00061529601_V1

Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 6 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

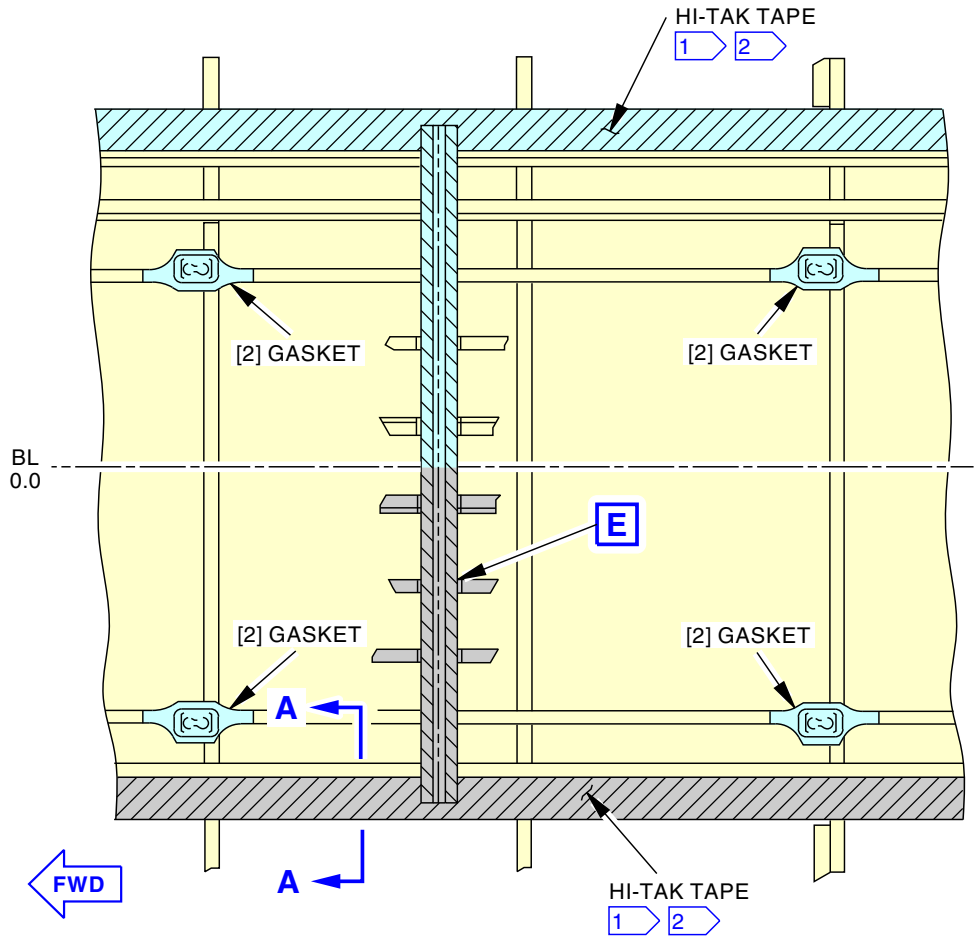


FORWARD CARGO DECK FLOOR STRUCTURE (TYPICAL)

C

2411967 S00061529603_V1

Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 7 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

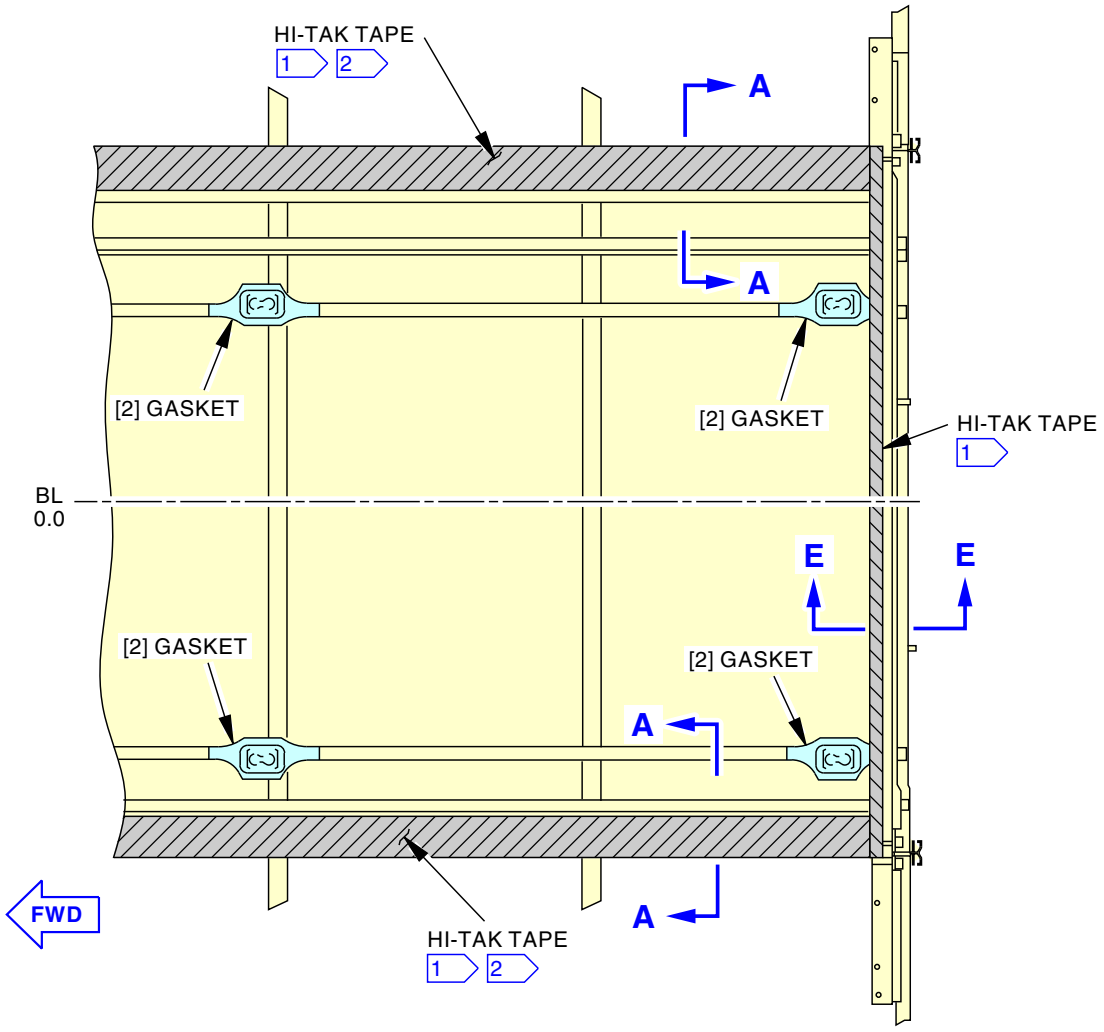


FORWARD CARGO DECK FLOOR STRUCTURE (TYPICAL)

D

2411968 S00061529604_V1

Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 8 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

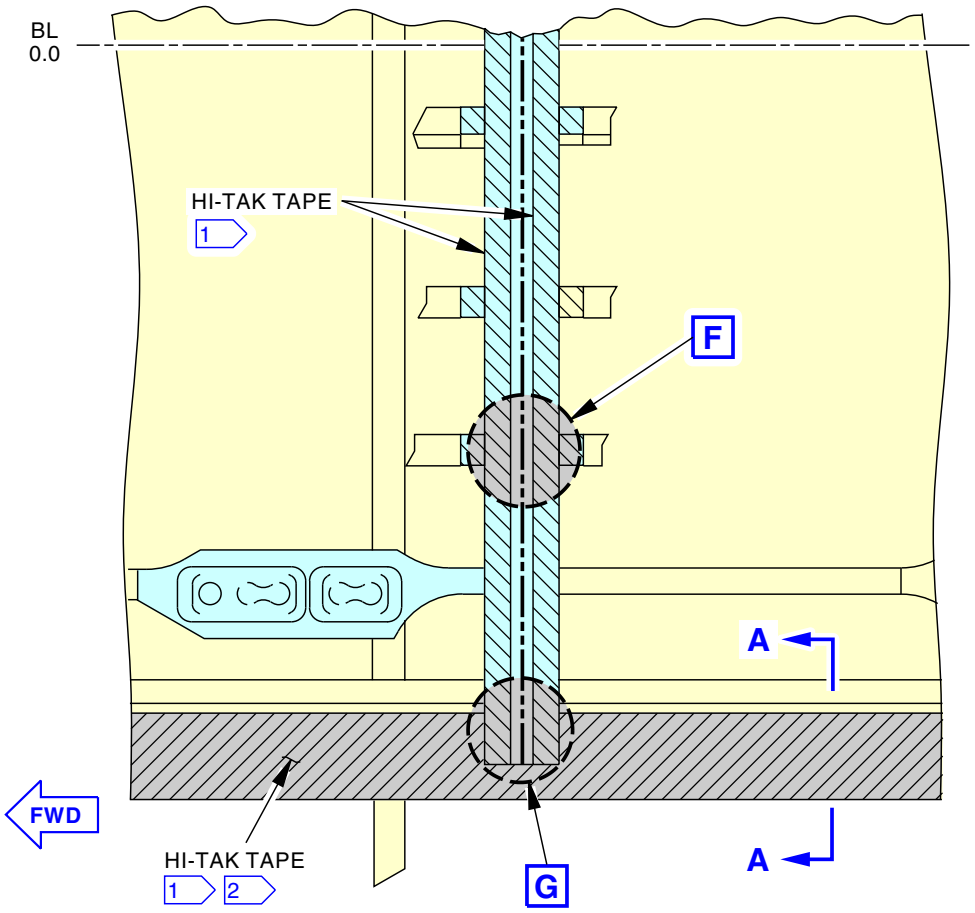


TEE STRAP
(TYPICAL)
(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)

E

2411969 S00061529605_V1

Forward Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 402/50-10-04-990-807 (Sheet 9 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

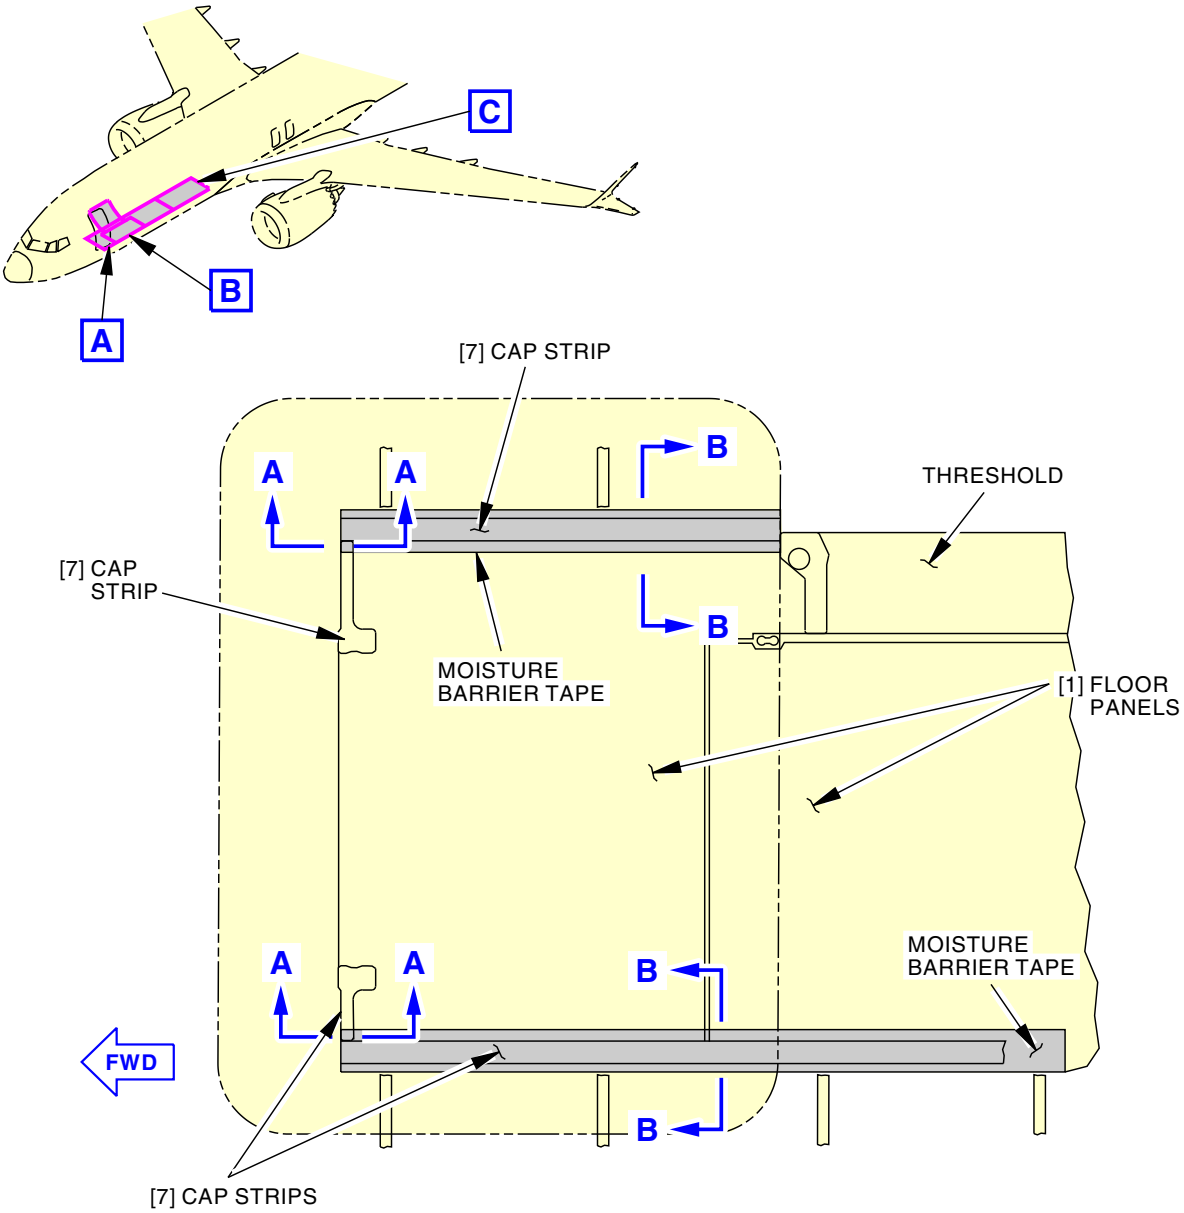


FORWARD CARGO DECK (TYPICAL)

A

2411970 S00061529606_V1

Forward Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 403/50-10-04-990-808 (Sheet 1 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

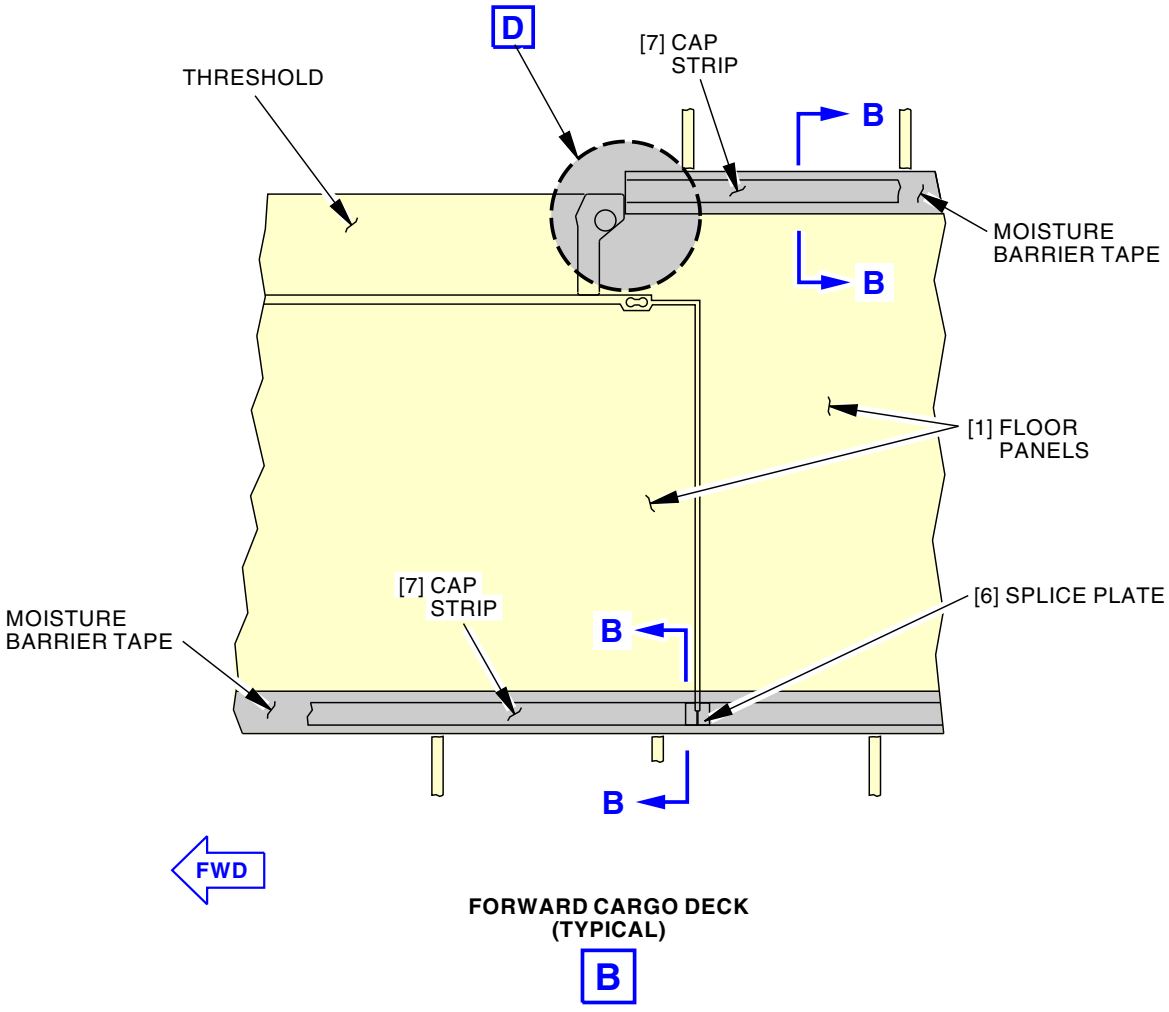

2411971 S00061529607_V1


Forward Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 403/50-10-04-990-808 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

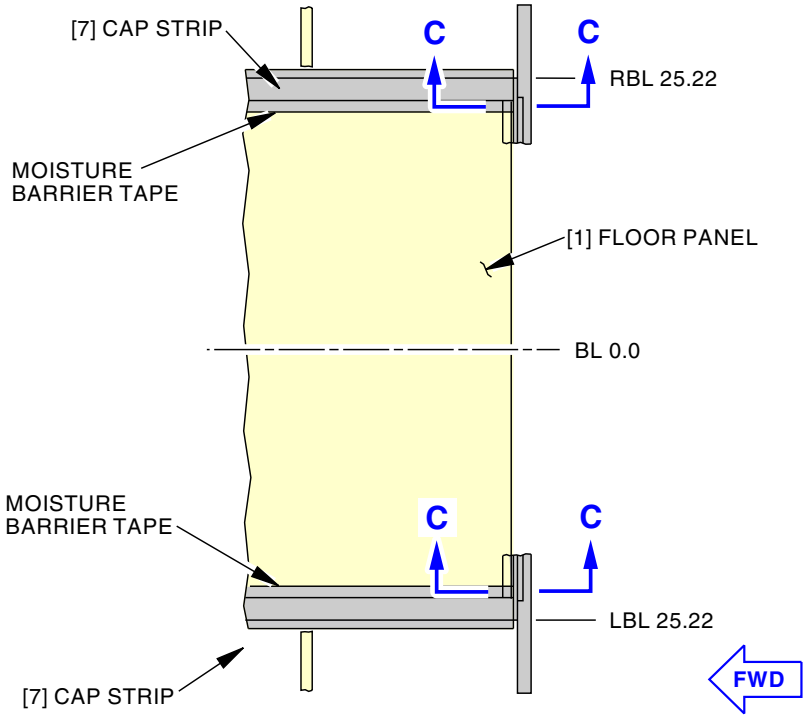

FORWARD CARGO DECK FLOOR STRUCTURE (TYPICAL)

C

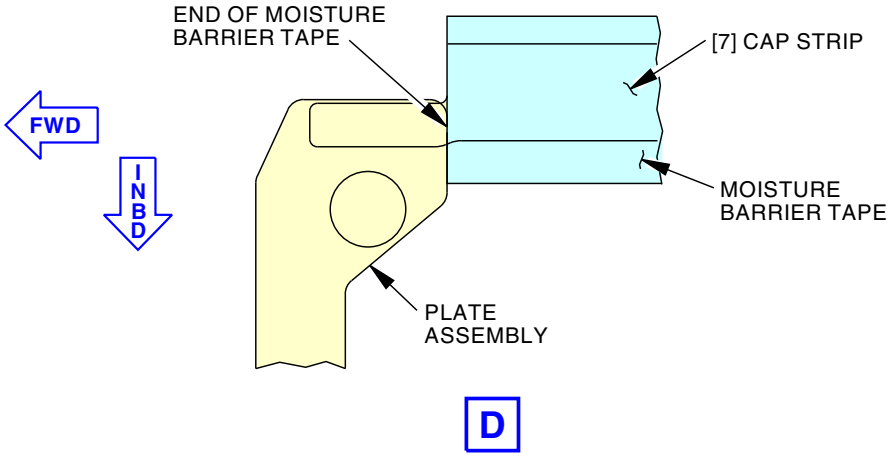


D

2411972 S00061529608_V1

Forward Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 403/50-10-04-990-808 (Sheet 3 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

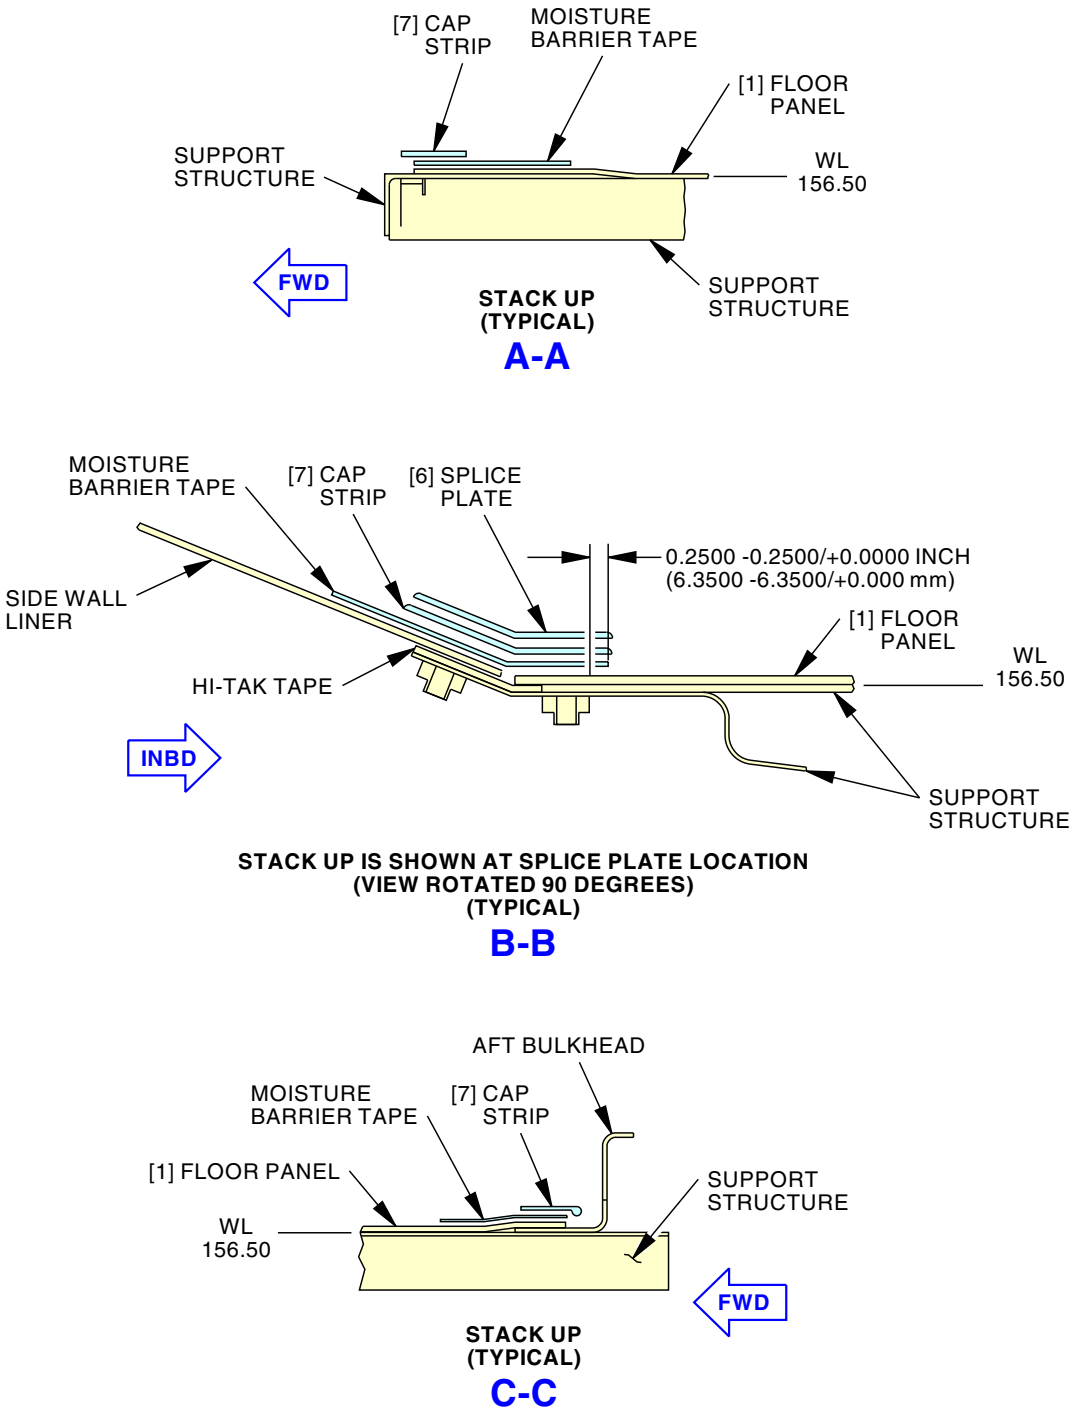

2411973 S00061529609_V2

Forward Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 403/50-10-04-990-808 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

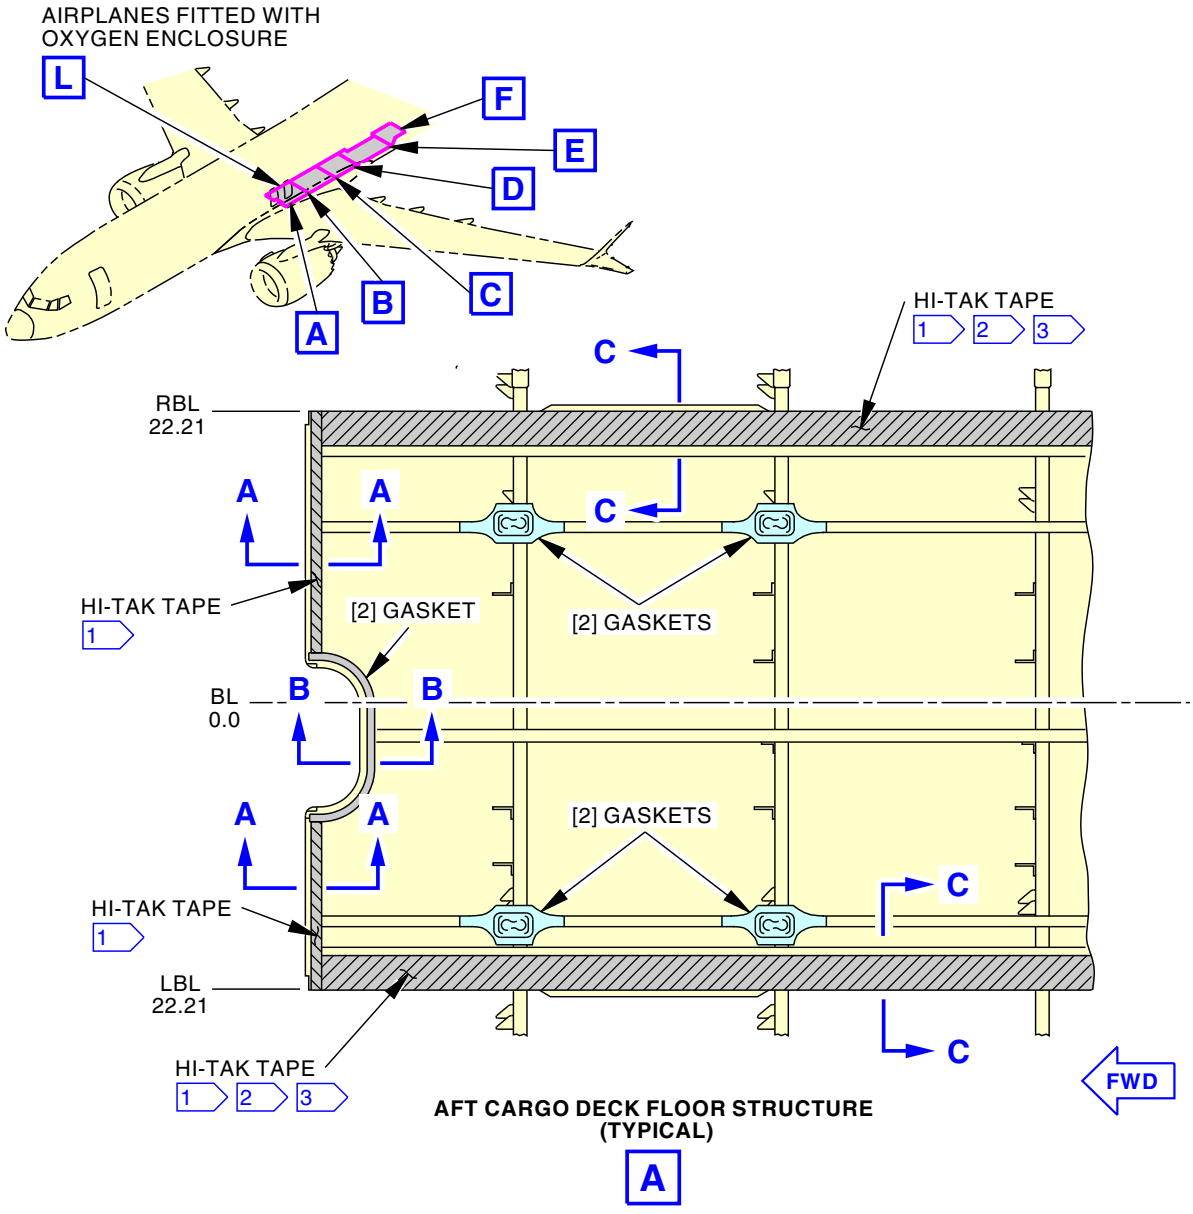

1 GASKET IS ALLOWED TO OVERHANG THE INBOARD EDGE OF THE SUPPORT STRUCTURE.


2 ONE CONTINUOUS STRIP IS PREFERRED. HOWEVER, A JOIN IN THE TAPE IS ALLOWED. MAKE SURE THERE ARE NO GAPS BETWEEN TAPE JOINTS OR TAPE AND GASKET JOINTS. A MAXIMUM OF 0.25 INCH OVERLAP IS ALLOWED.

3 ALIGN THE EDGE OF THE TAPE WITH THE OUTBOARD EDGE OF THE SUPPORT STRUCTURE ALONG THE ENTIRE LENGTH OF THE AFT CARGO COMPARTMENT.

2411974 S00061529610_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 1 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

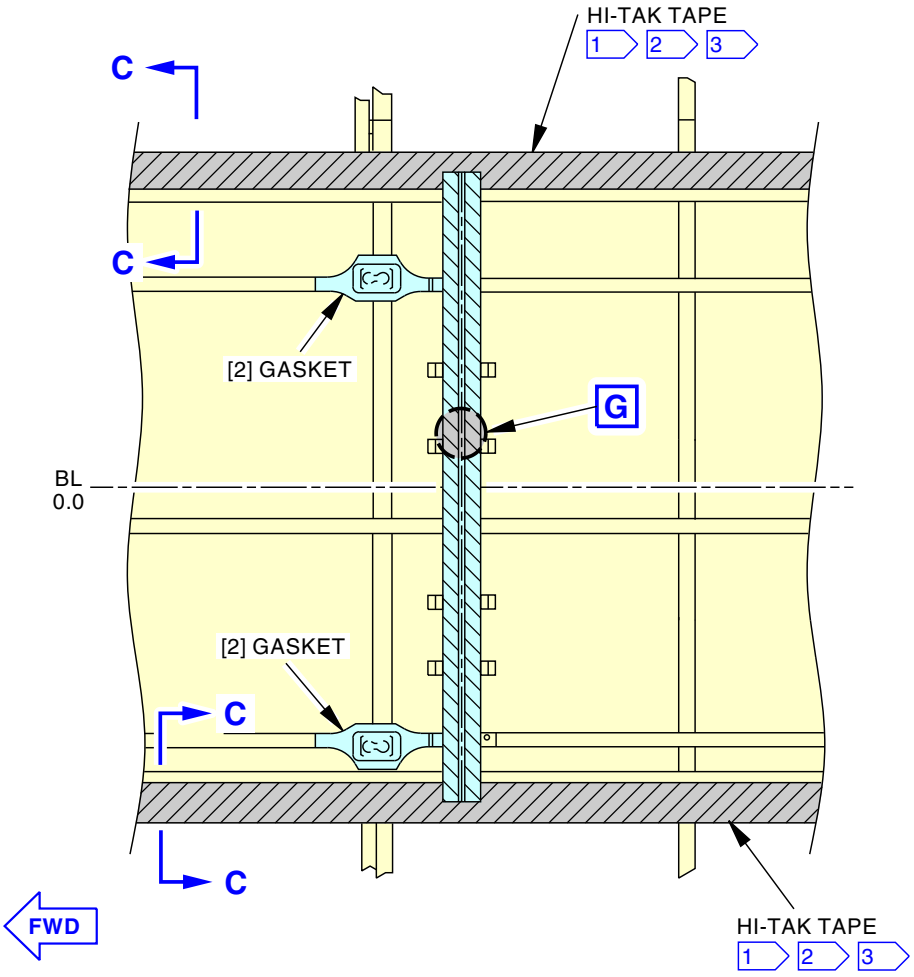


AFT CARGO DECK FLOOR STRUCTURE (TYPICAL)

B

2411975 S00061529611_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 2 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

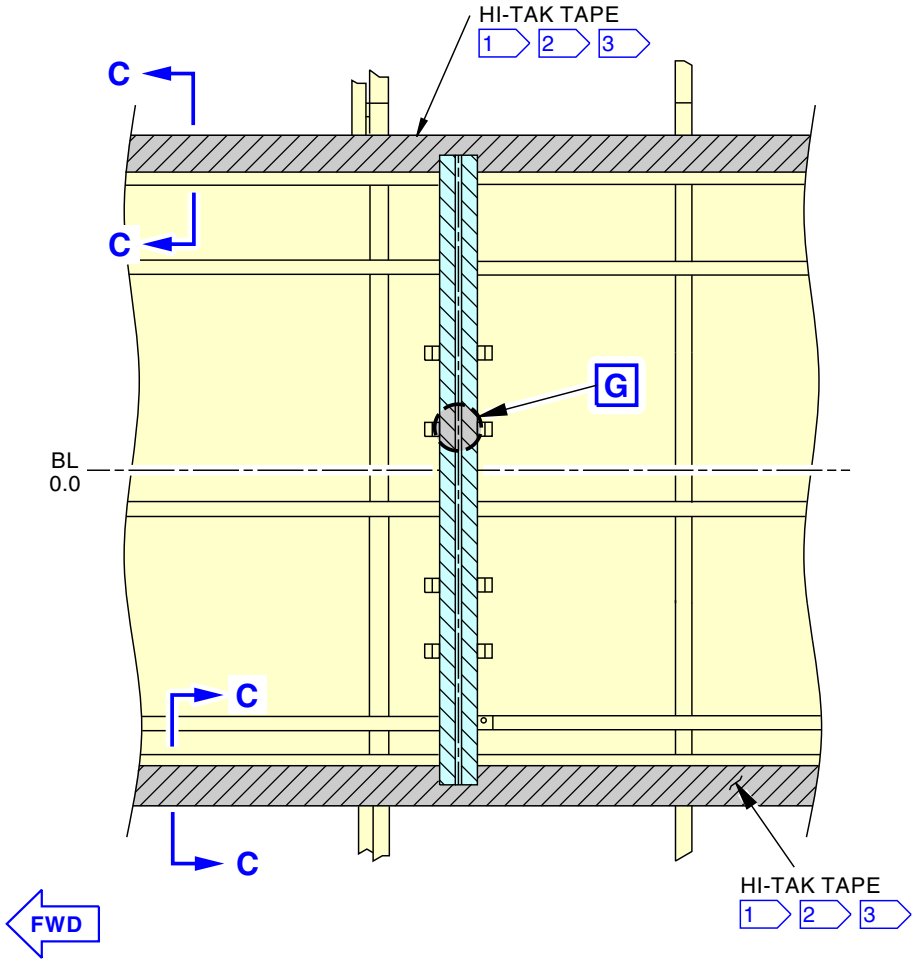


AFT CARGO DECK FLOOR STRUCTURE (TYPICAL)

C

2411976 S00061529612_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 3 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

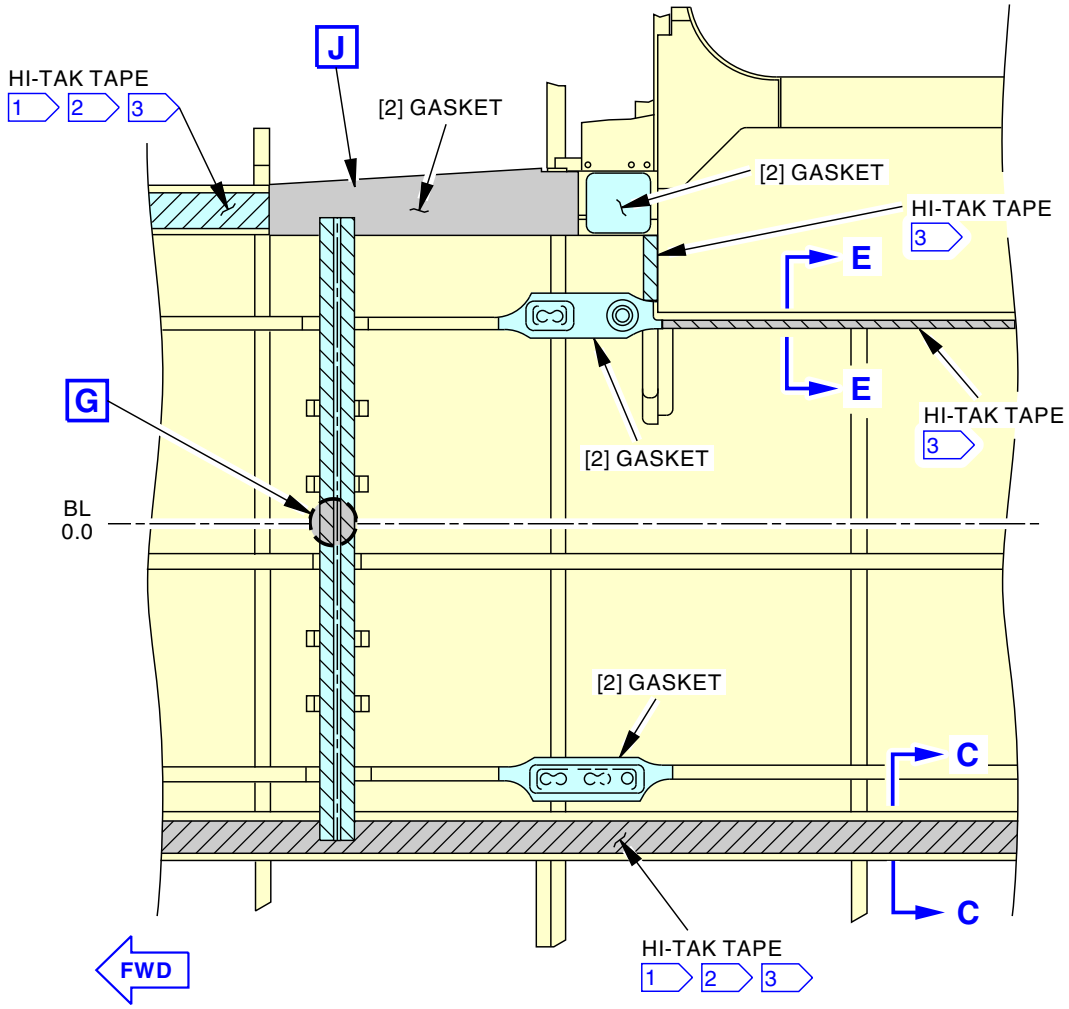


AFT CARGO DECK FLOOR STRUCTURE (TYPICAL)

D

2411977 S00061529613_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 4 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

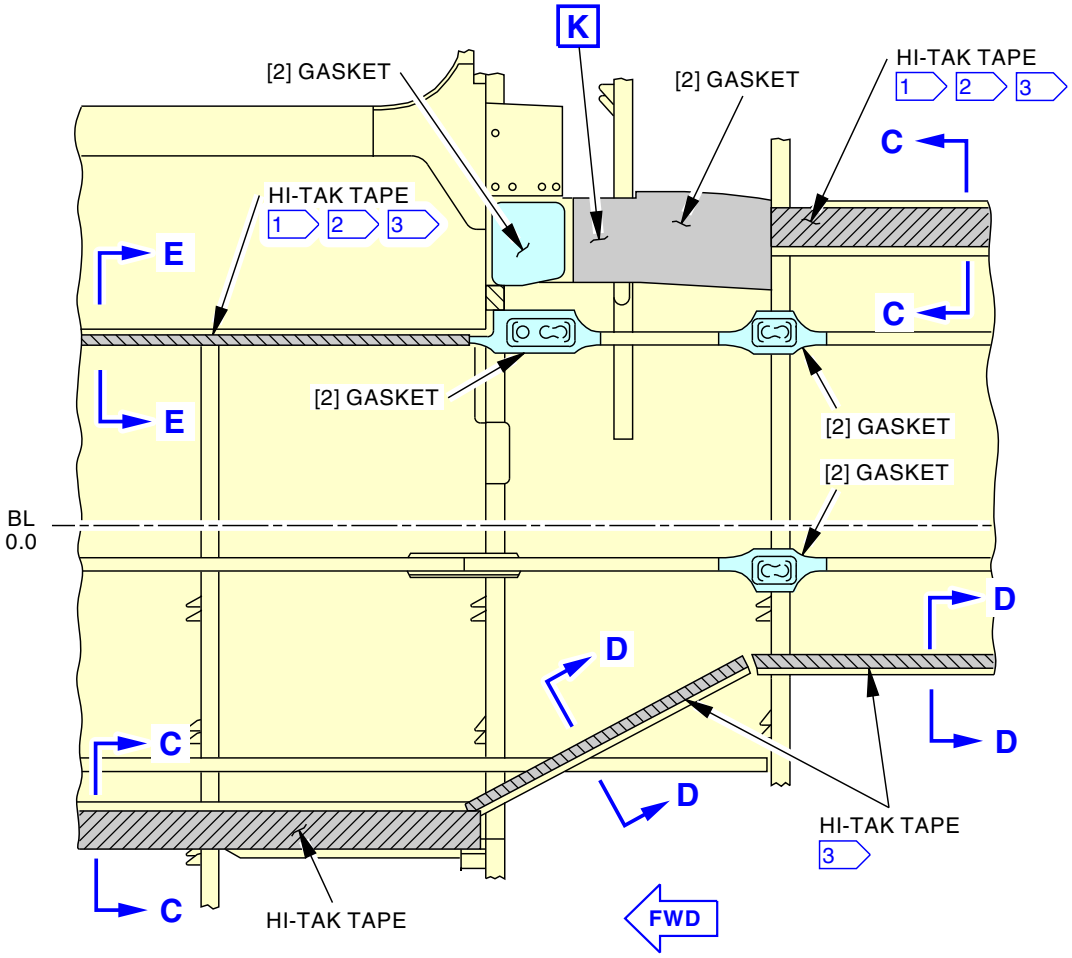


AFT CARGO DECK FLOOR STRUCTURE (TYPICAL)

E

2411978 S00061529614_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 5 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

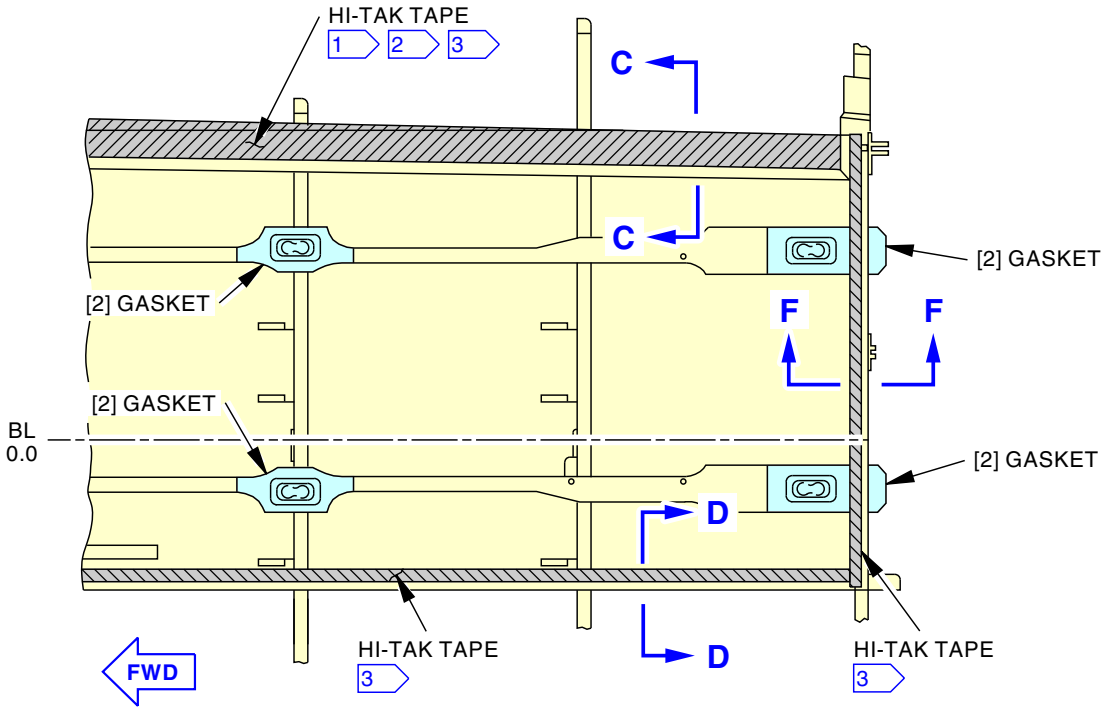


AFT CARGO DECK FLOOR STRUCTURE (TYPICAL)

F

2411979 S00061529615_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 6 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

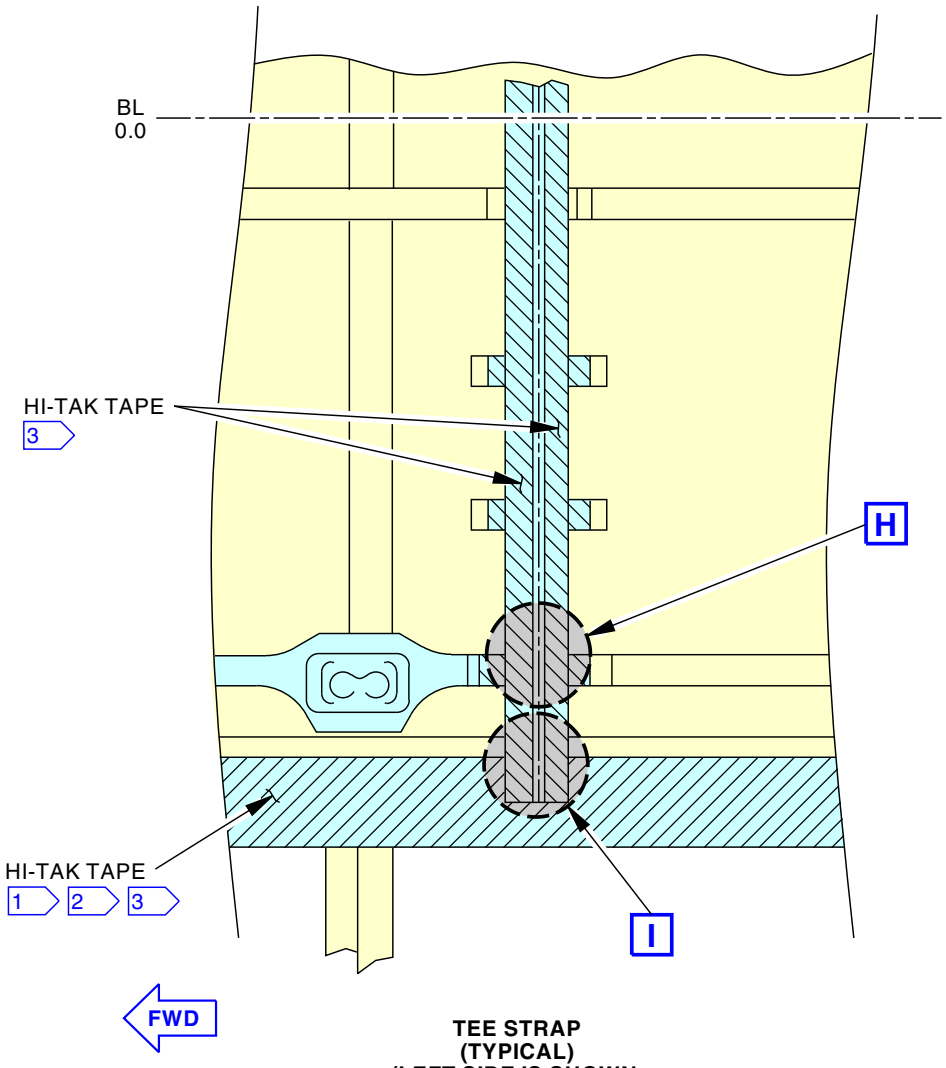

2411980 S00061529616_V1


Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 7 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

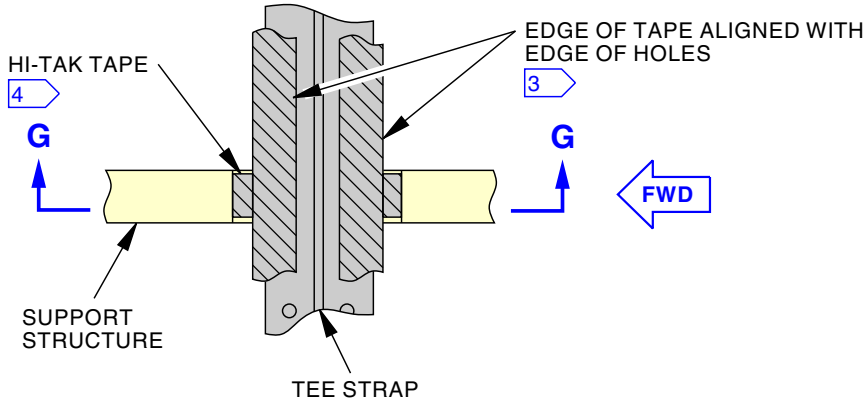

TEE STRAP WITH JOGGLE (TYPICAL)

H

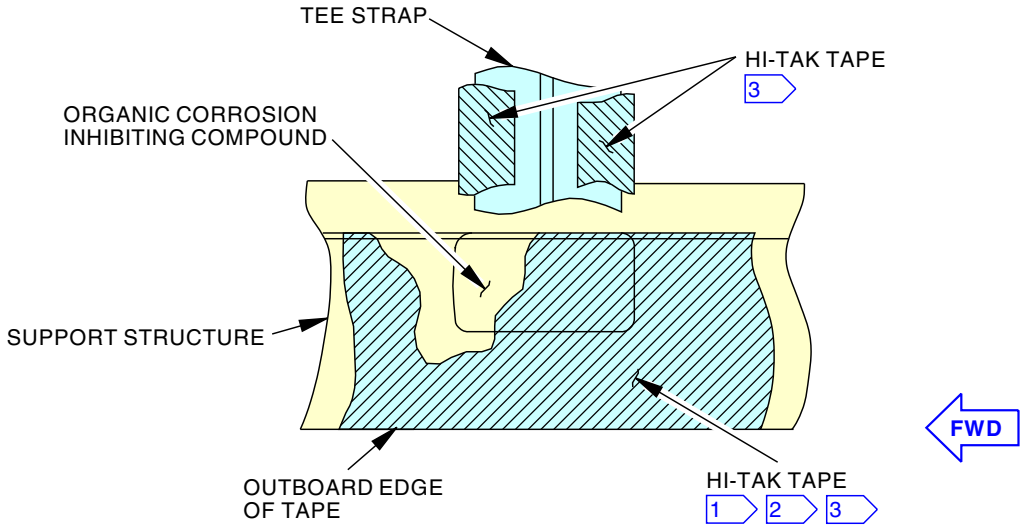

TEE STRAP END (TYPICAL)


I

4 LOCATE THE TAPE IN THE CENTER OF THE SUPPORT STRUCTURE.

2411981 S00061529617_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 8 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

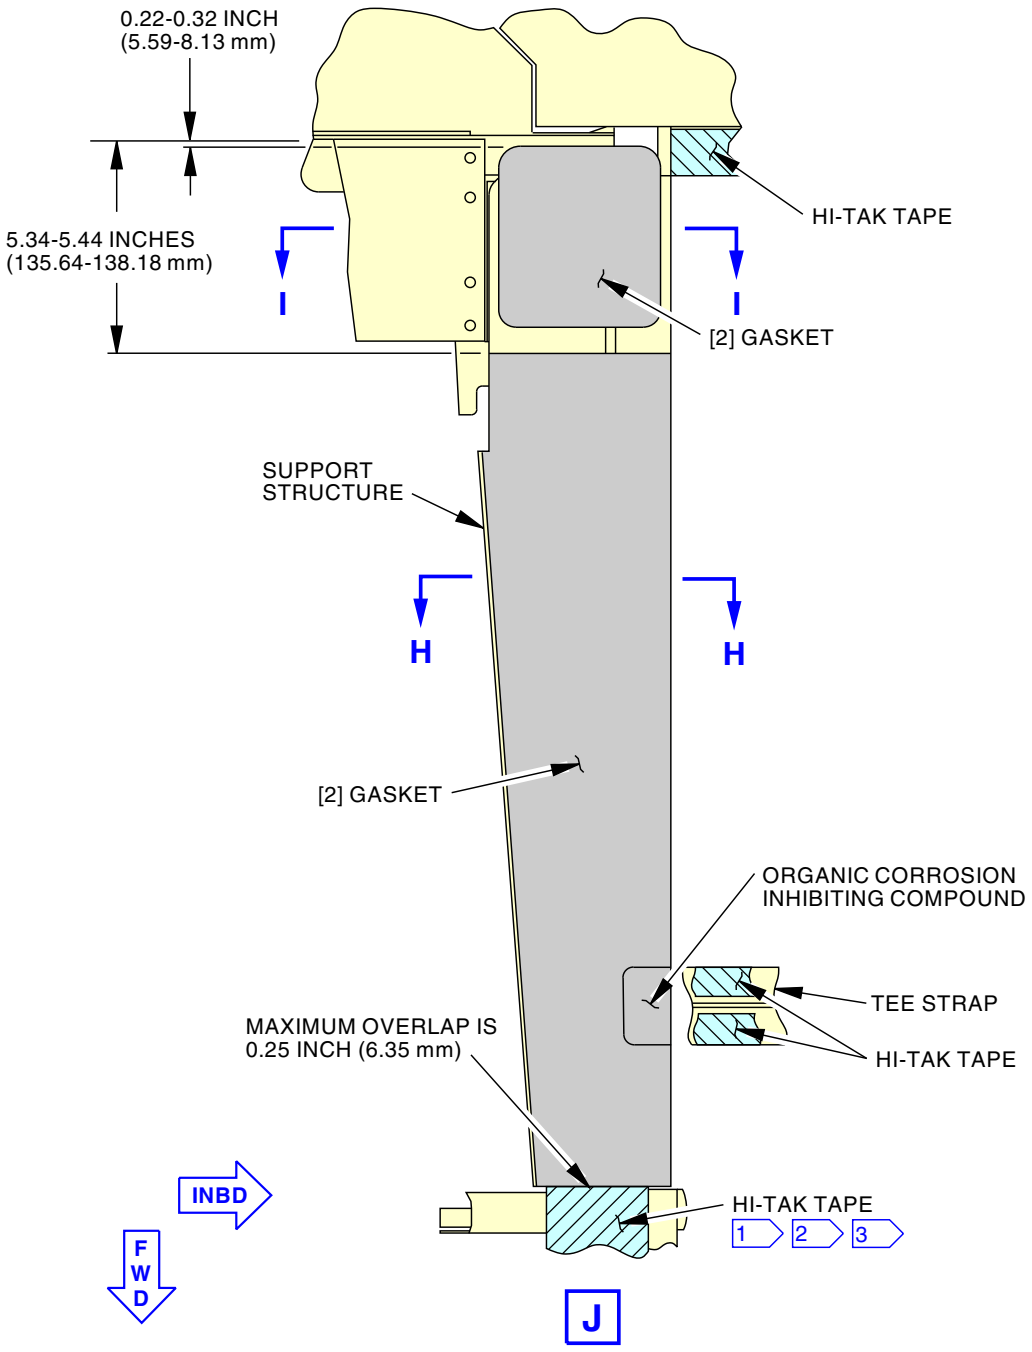

2411982 S00061529618_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 9 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

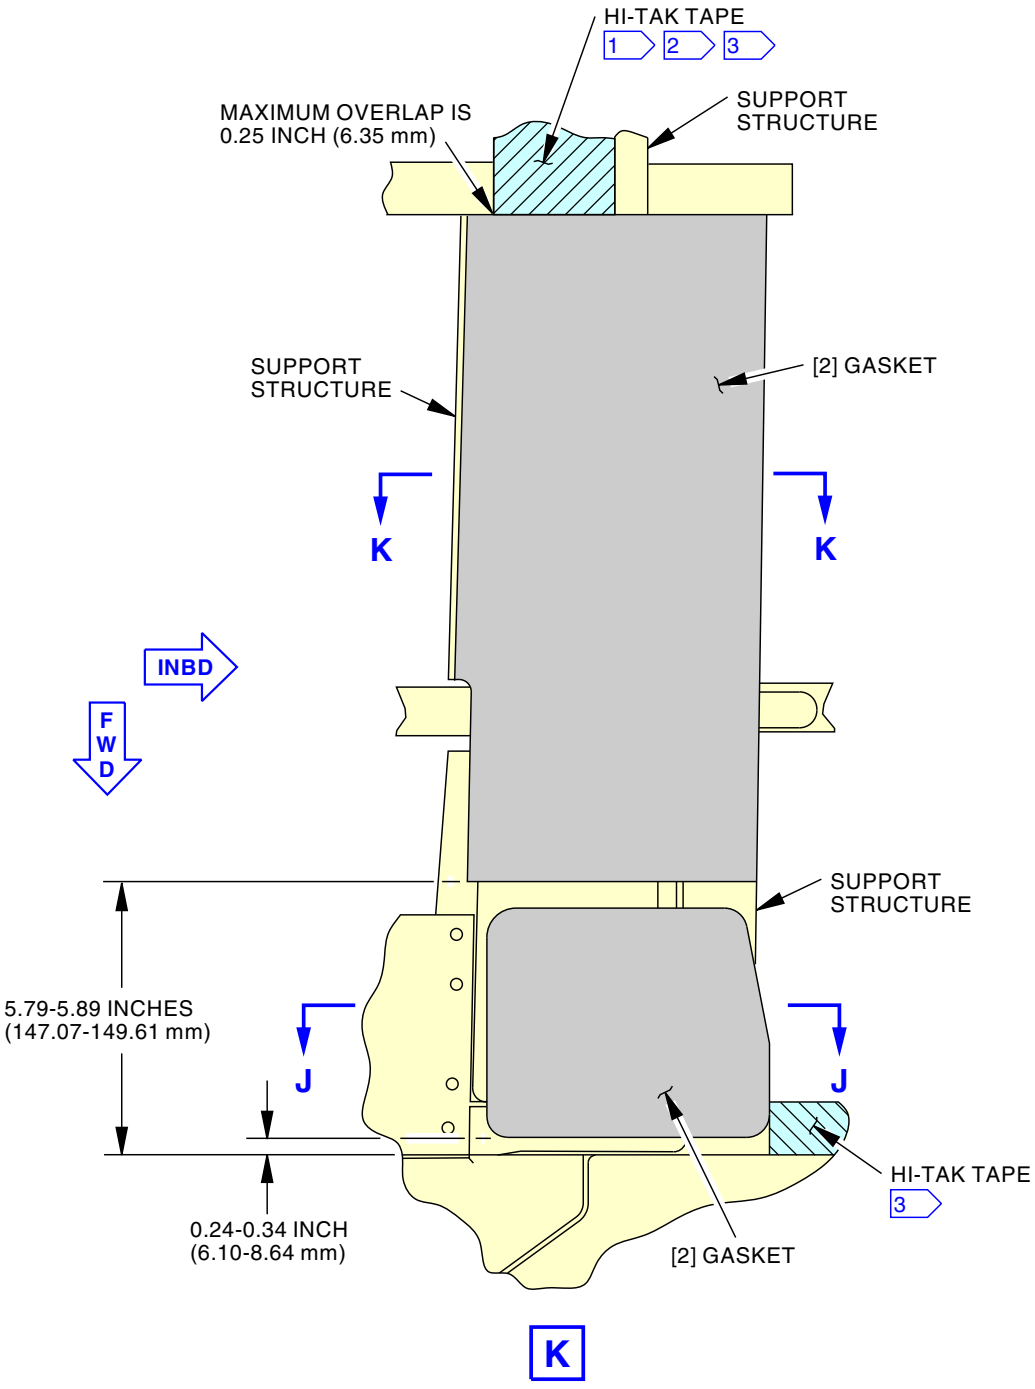

2411983 S00061529619_V1


Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 10 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

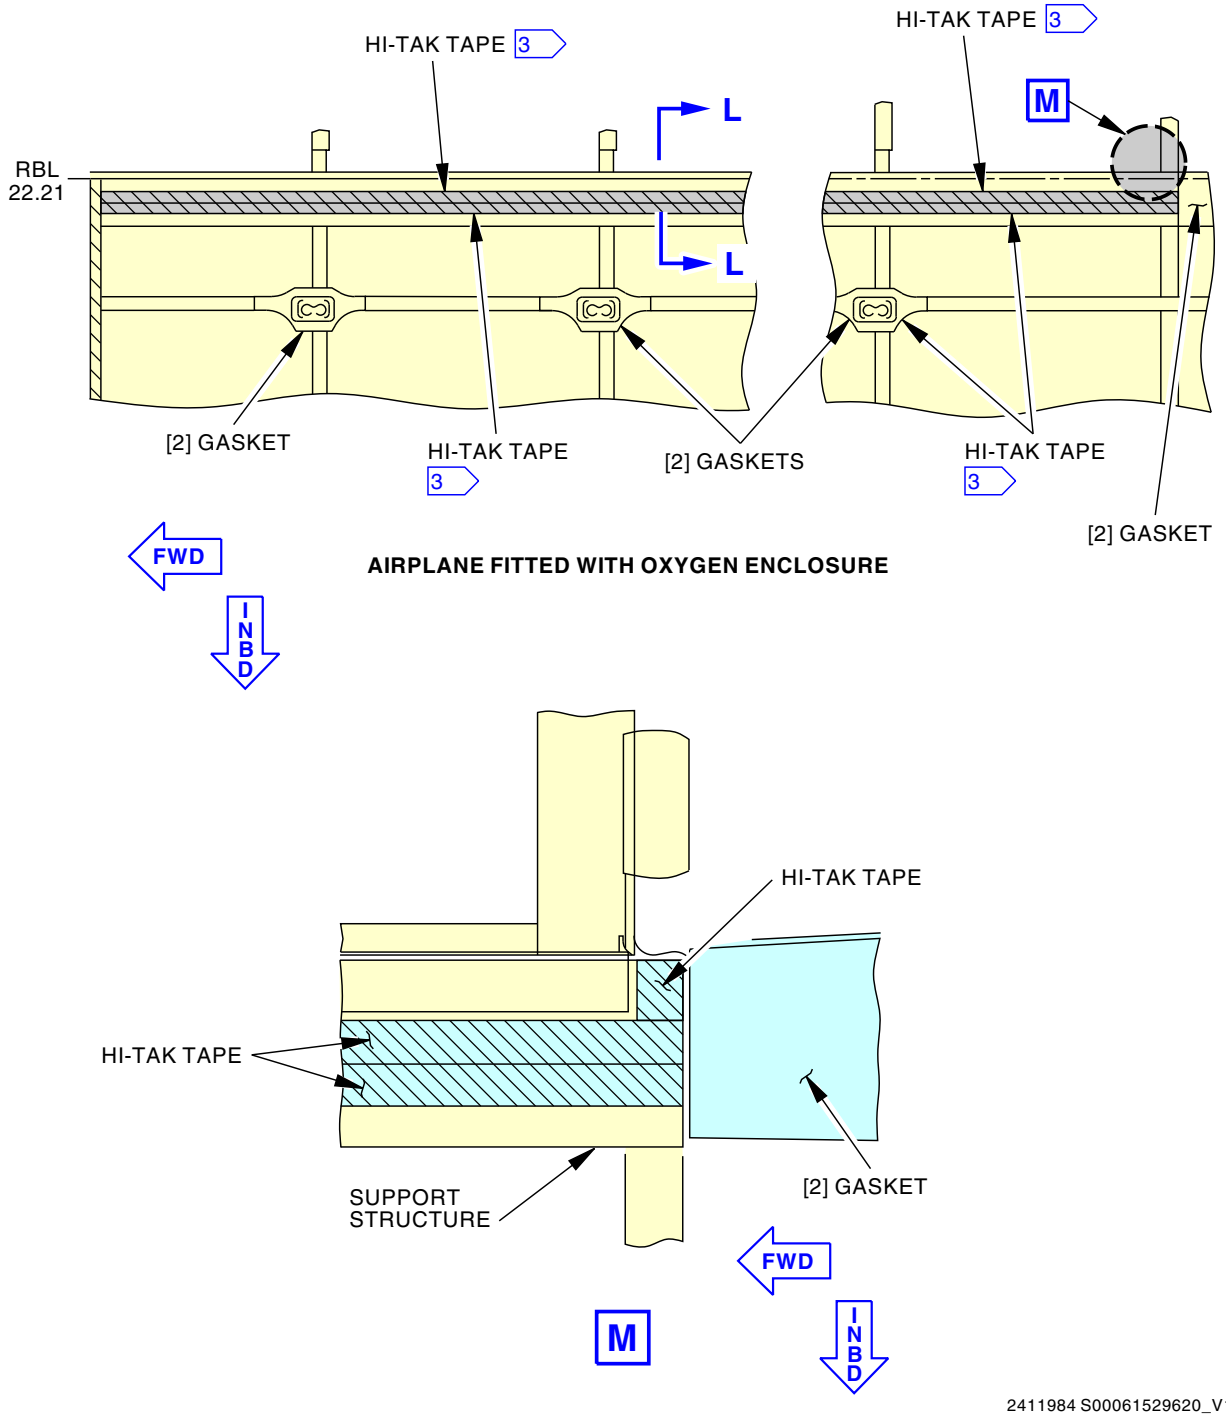

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 11 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

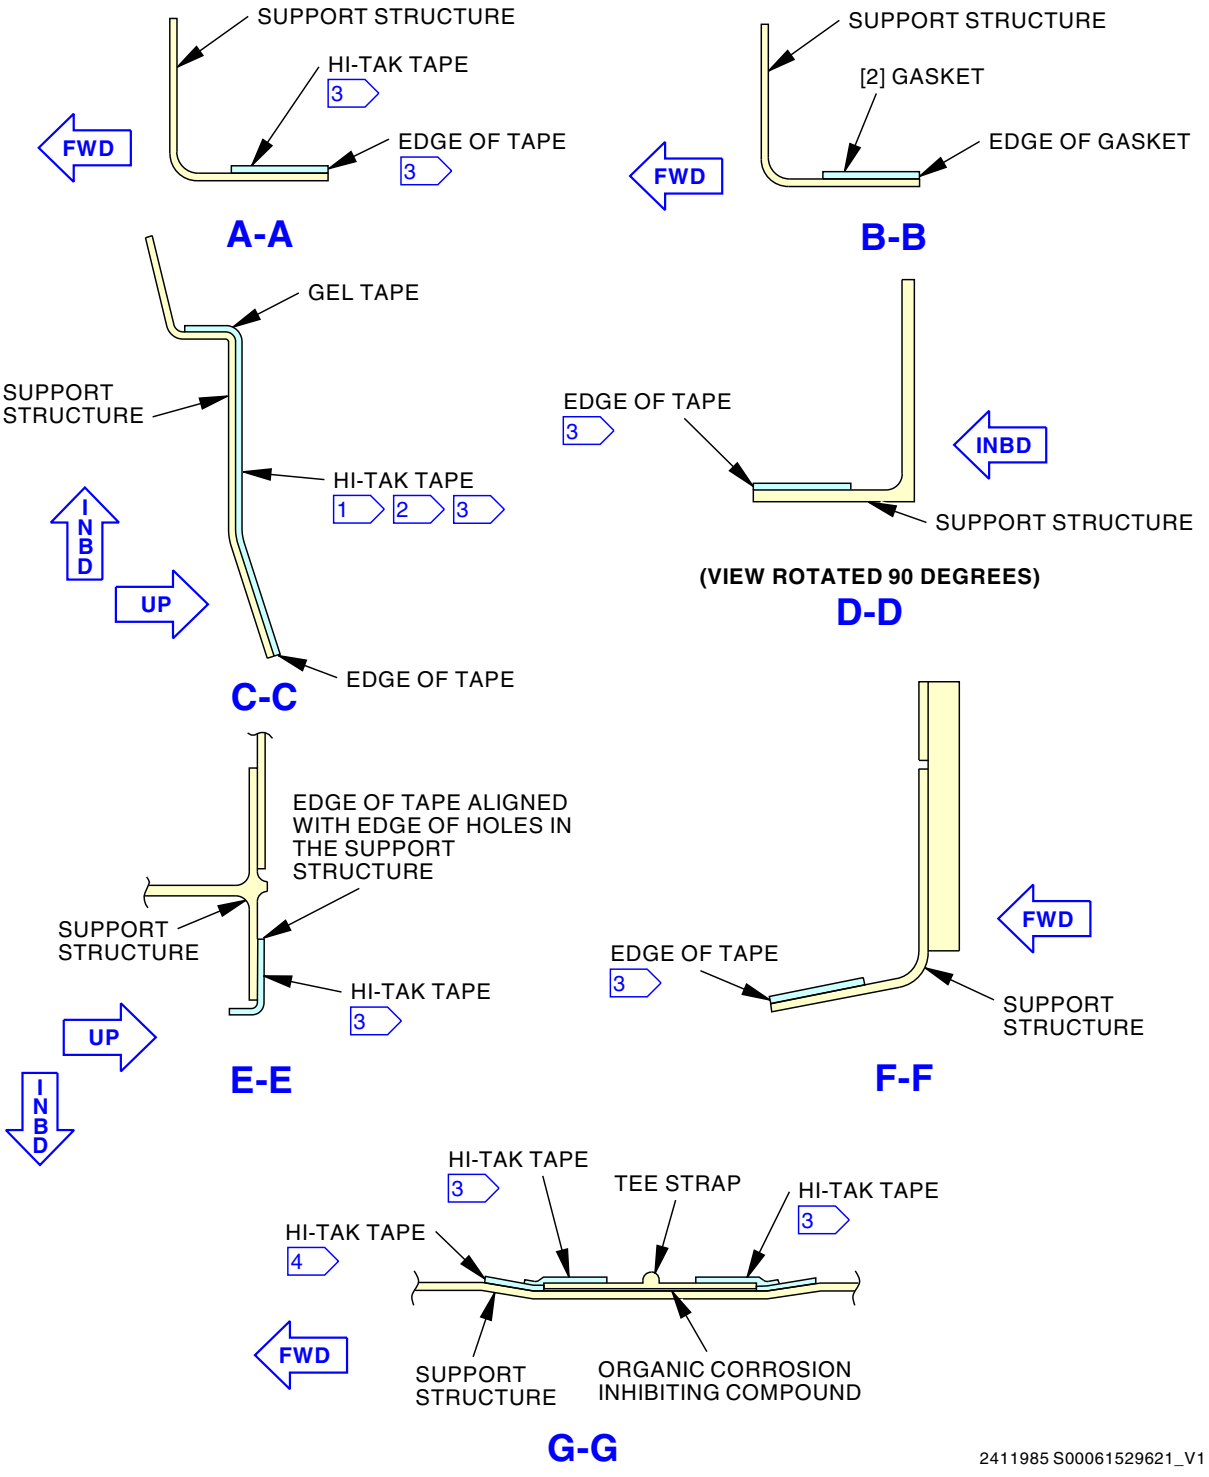

2411985 S00061529621_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 12 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

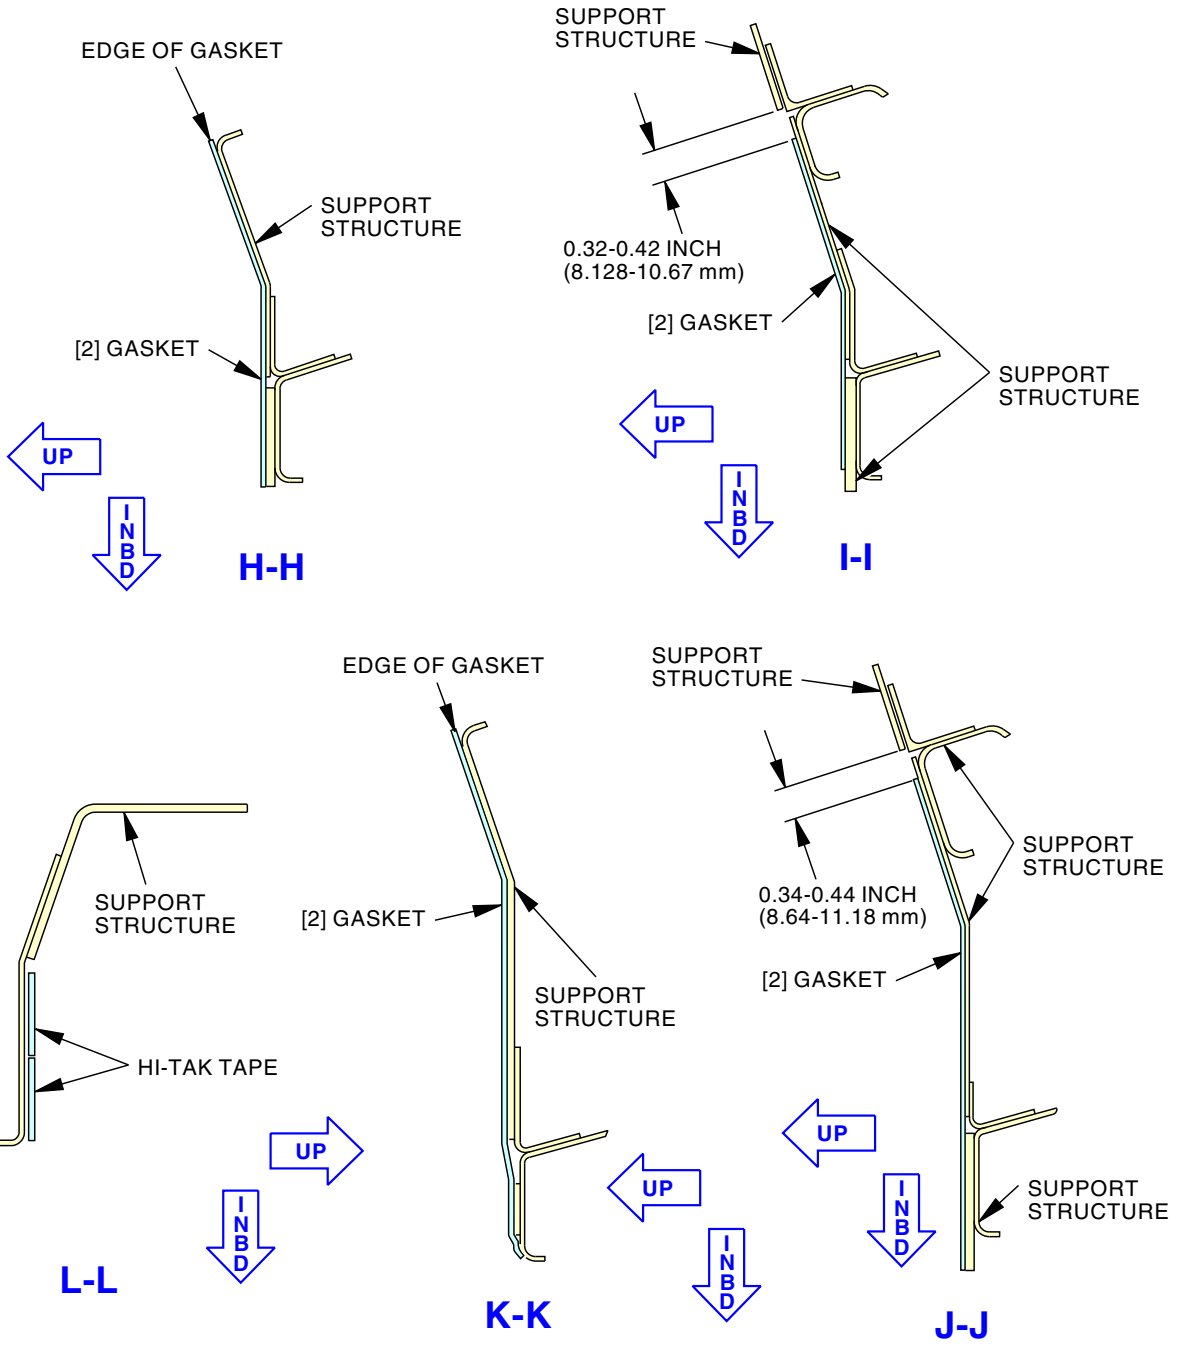

2411986 S00061529622_V1

Aft Cargo Compartment - Cargo Deck - Tape and Gasket Installation
Figure 404/50-10-04-990-809 (Sheet 13 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

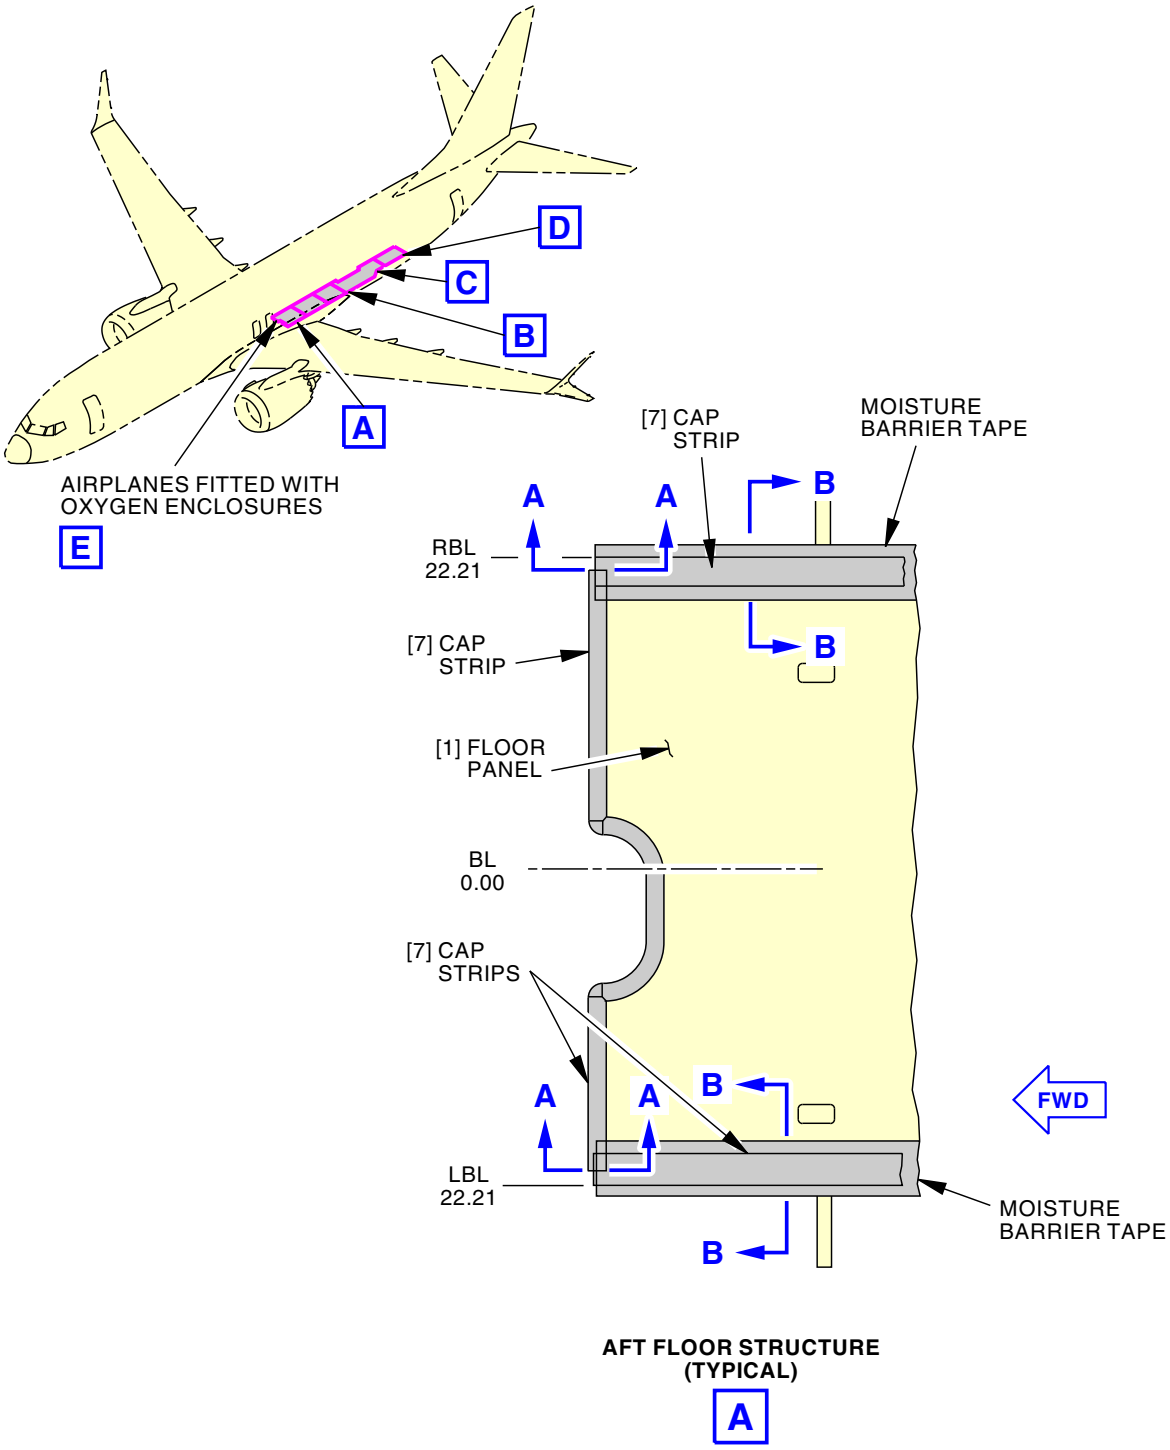

2411987 S00061529623_V1

Aft Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 405/50-10-04-990-810 (Sheet 1 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

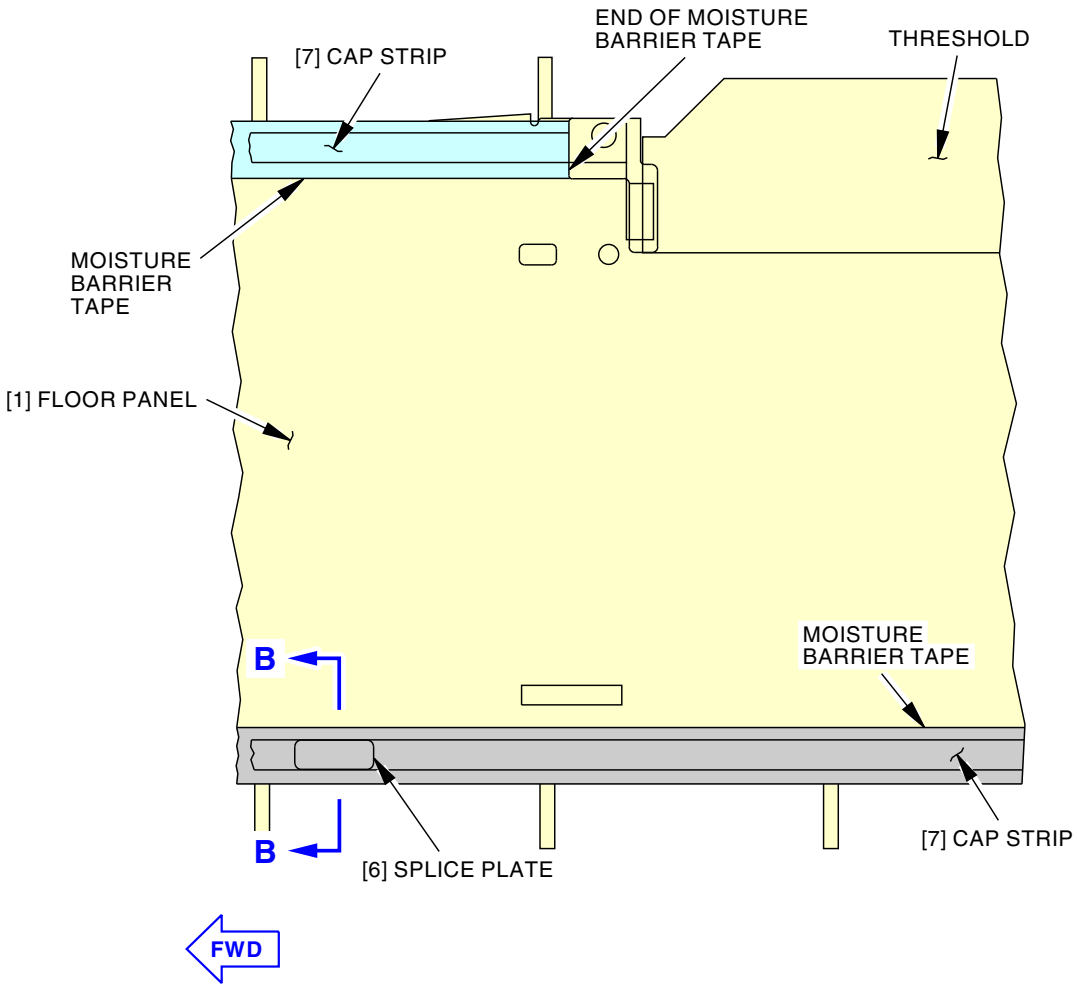


AFT FLOOR STRUCTURE (TYPICAL)

B

2411988 S00061529624_V1

Aft Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 405/50-10-04-990-810 (Sheet 2 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

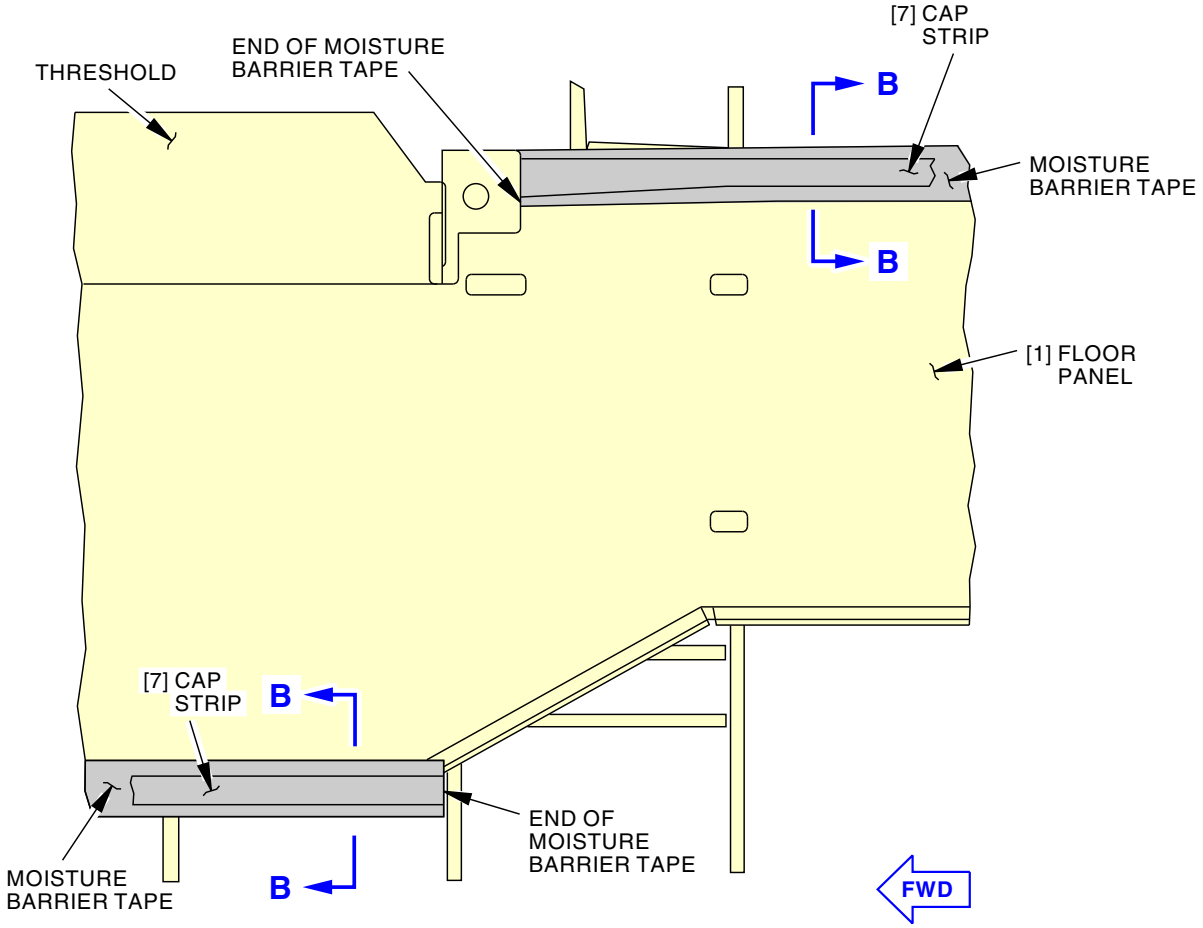


AFT FLOOR STRUCTURE (TYPICAL)

C

2411989 S00061529625_V1


Aft Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 405/50-10-04-990-810 (Sheet 3 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

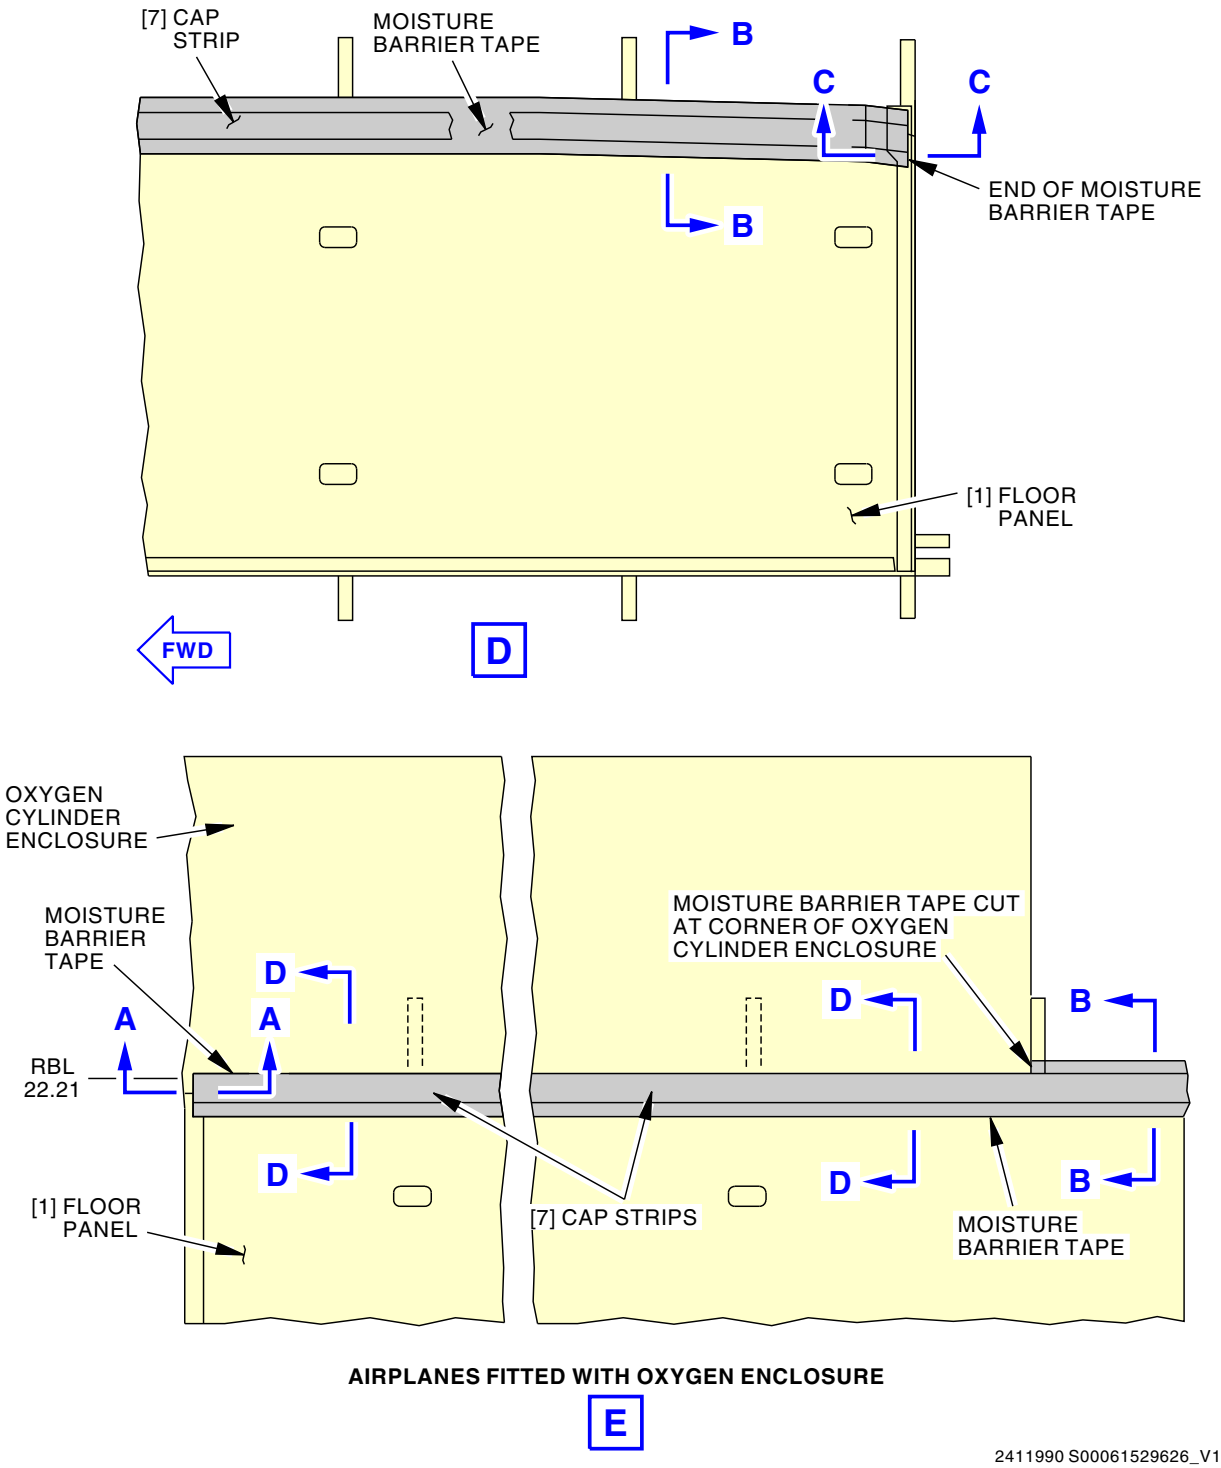


Aft Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 405/50-10-04-990-810 (Sheet 4 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

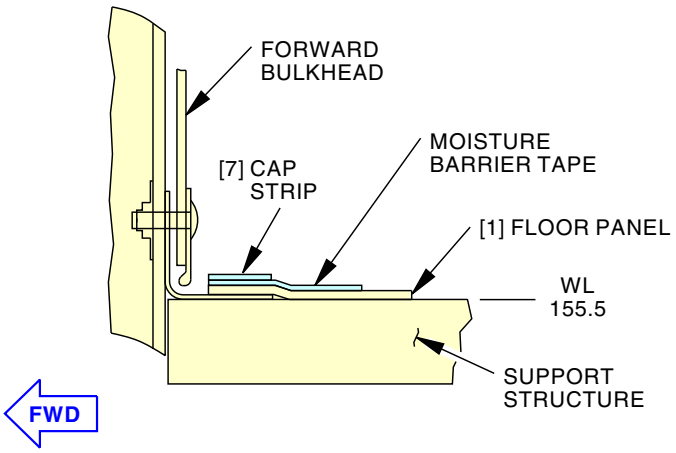

A-A

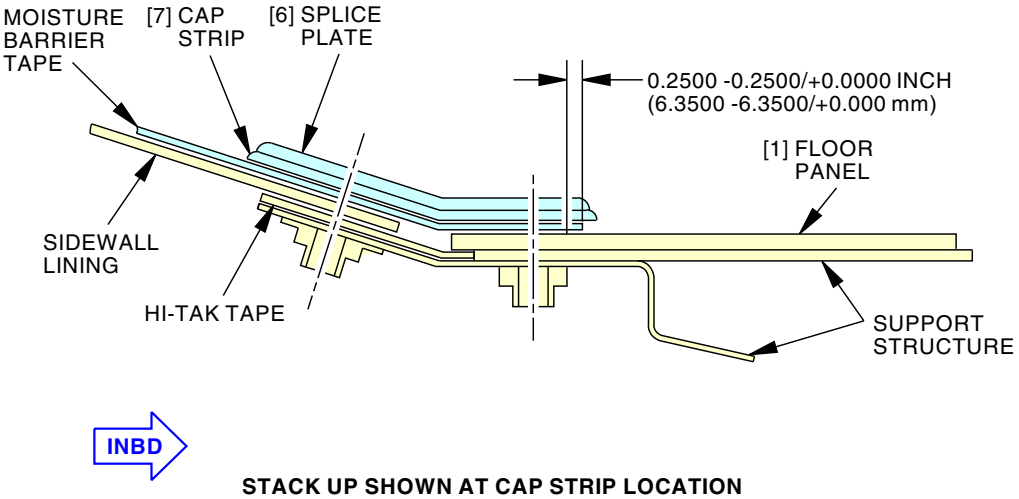


**STACK UP SHOWN AT CAP STRIP LOCATION
(VIEW ROTATED 90 DEGREES)
(TYPICAL)**

B-B

2411991 S00061529627_V2


**Aft Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 405/50-10-04-990-810 (Sheet 5 of 6)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

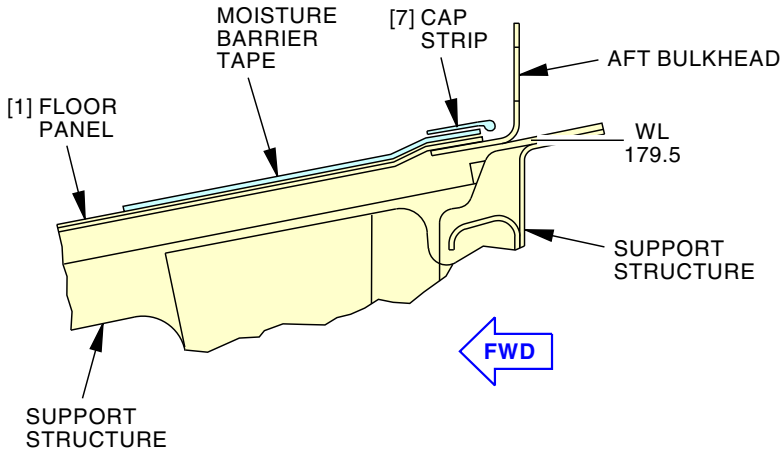

STACK UP (TYPICAL)

C-C

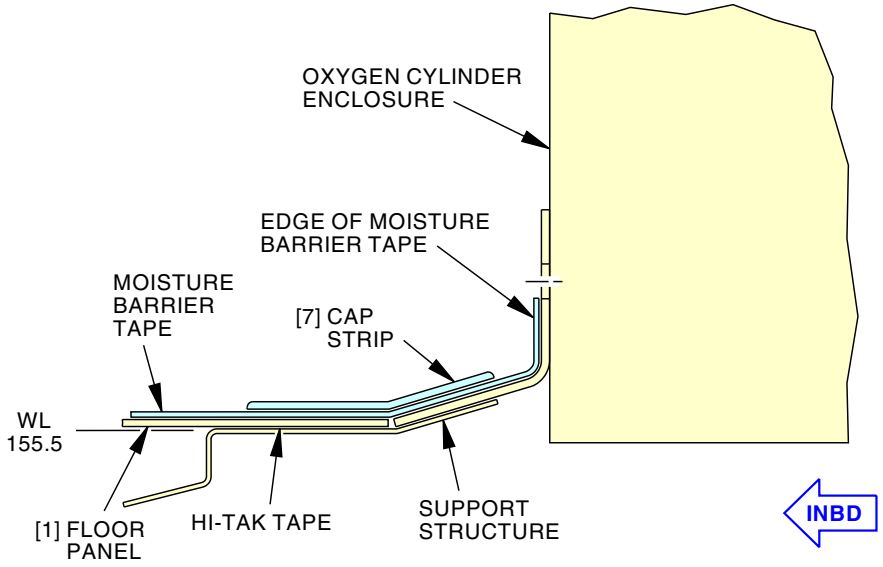

STACK UP (TYPICAL) (VIEW ROTATED 90 DEGREES)

D-D

2411992 S00061529628_V1

Aft Cargo Compartment - Cargo Deck - Moisture Barrier Tape Installation
Figure 405/50-10-04-990-810 (Sheet 6 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-04-400-801

3. Cargo Compartment Floor Panel Installation

(Figure 401)

A. General

(1) This task is for the installation of the cargo compartment floor panel.

(2) You can make the replacement floor panel to pattern. Use the panel that was removed as a template for the replacement floor panel. Make the replacement floor panel of the same type/gauge as the panel that you will remove.

B. References

Reference	Title
50-11-01-400-801	Forward Cargo Compartment Forward Bulkhead Liner Installation (P/B 401)

C. Tools/Equipment

Reference	Description
STD-765	Scraper - Plastic

D. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
B00666	Solvent - Methyl Propyl Ketone	BMS11-9
G00009	Compound - Organic Corrosion Inhibiting	BMS3-23
G00291	Tape - Aluminum Foil, 3M 425	AMS-T-23397 / L-T-80
G02304	Tape - Moisture Barrier, Adhesive One-side	BMS8-346
G50738	Tape - Flame Retardant Hi-Tak TufSeal, (Av-DEC - HI-TAK HT3000FR-XXX)	

E. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

F. Cargo Compartment Floor Panel Installation

SUBTASK 50-10-04-210-001

(1) Before you install the floor panels [1] examine the current seal tape.

(a) If the seal tape that is installed on the airplane is double sided (tacky on both sides), the tape cannot be used again and must be replaced.

(b) If the seal tape that is installed on the airplane is single sided (tacky on one side), the tape can be used again unless one or more of the following conditions is met:

1) The seal tape was removed from the floor structure.

2) The seal tape is damaged or deteriorated.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-10-04-960-001

(2) To remove the tape, do these steps:

(a) Remove the tape from the floor panel [1] or on the airplane structure.

(b) Use a plastic scraper, STD-765, and one of these materials solvent, B00184, solvent, B00666, or solvent, B00083, to remove all dirt, adhesive or grease from the floor panel [1] or the airplane structure.

SUBTASK 50-10-04-960-002

(3) Install Hi-Tak TufSeal Tape, G50738, to cover the inboard gap between the cap strips [7].

SUBTASK 50-10-04-420-001

(4) Apply corrosion inhibiting compound, G00009, to the airplane structure where you will install the floor panel [1].

SUBTASK 50-10-04-420-002

(5) Install Hi-Tak TufSeal Tape, G50738, and the gasket [2] to the airplane structure where you will install the floor panel [1] (Figure 402 and Figure 404).

NOTE: Tape that is 2 in. (51 mm) wide can be used where tape that is 3 in. (76 mm) wide would be excessive and the 2 in. (51 mm) would cover the structure.

(a) Make sure that you install the gasket [2] with the correct dimension for the applicable airplane structure.

(b) Align the outboard edge of the gasket [2] with the outboard edge of the support structure.

NOTE: The gasket can overhang the inboard edge of the support structure.

(c) Make sure that the protective backing is removed from the tape before you install the tape.

(d) Make sure that there is no overlap between gasket [2] and tape.

(e) If the gaskets [2] are not available you can use multiple strips of Hi-Tak TufSeal Tape, G50738, to cover the equivalent area of the gasket [2].

1) Make sure that individual strips or pieces of tape do not overlap at the edges to prevent high areas.

2) Make sure that the space between each tape strip is 0.063 in. (1.600 mm) or less.

NOTE: This will make sure that the gel is in the space.

SUBTASK 50-10-04-420-003

(6) Put the floor panel [1] in its correct position.

SUBTASK 50-10-04-420-004

(7) Apply sealant, A00247, on the screws [3], screws [9], and bolts [4], and if it is necessary, install the screws [3] for the floor panel [1] while the sealant is wet.

(a) If it is necessary to operate the airplane before the sealant is fully cured, install 3M 425 Aluminum Foil Tape, G00291 on the top of the sealant, A00247.

1) Remove 3M 425 Aluminum Foil Tape, G00291 when sealant, A00247 is fully cured.

SUBTASK 50-10-04-420-005

(8) Apply moisture barrier tape, G02304, on the part of the floor panel [1] that touches the cargo sidewall liner (Figure 403 and Figure 405).

(a) Center the moisture barrier tape under the cap strips [7].

NOTE: It is necessary to use the cap strips and the measurements to mark the position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Make sure that the tape extends 0.2500 +0.0000 / -0.2500 in. (6.3500 +0.0000 / -6.3500 mm) past the end of the fastener.

(c) Do not connect or overlap the moisture barrier within 6 in. (152 mm) of the splice plates [6].

(9) If possible, use one continuous strip but you can apply the moisture barrier tape, end to end if necessary.

(a) Make sure that the join has an overlap of minimum 2 in. (51 mm) and a maximum of 6 in. (152 mm).

SUBTASK 50-10-04-820-001

(10) Put the cap strips [7], splice plates [6], and tiedowns [5] in the correct locations.

(a) If it is necessary, install the screws [3], screw [9], and bolts [4] while the sealant is wet.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-04-410-001

(1) If it is necessary, install the forward bulkhead liner in the forward cargo compartment (TASK 50-11-01-400-801).

SUBTASK 50-10-04-420-007

(2) Apply sealant, A00247, on all areas of the floor panel that may permit leakage.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARGO COMPARTMENT NET - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Cargo compartment net removal

(2) Cargo compartment net installation

(3) Cargo net snap latch replacement.

TASK 50-10-05-020-801

2. Cargo Compartment Net Removal

(Figure 401)

A. General

(1) This task is for the removal of the cargo compartment net.

B. References

Reference	Title
52-31-00-580-801	Open the Cargo Door (P/B 201)

C. Location Zones

Zone	Area
100	Lower Half of Fuselage
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-10-05-010-001

(1) Do this task: Open the Cargo Door, TASK 52-31-00-580-801.

E. Cargo Compartment Net Removal

SUBTASK 50-10-05-030-001

(1) Disengage the snap latches [2] to release it from the O-rings [3] on the cargo compartment net [1].

SUBTASK 50-10-05-030-002

(2) If it is necessary, loosen the adjustable net straps [4] to release the tension in the net straps.

SUBTASK 50-10-05-030-003

(3) Disconnect the tiedown fittings [5] from the floor attachment anchor plates in the floor and the sidewall.

SUBTASK 50-10-05-030-004


(4) Disconnect the tiedown fittings [5] from the ceiling attachment anchor plates in the ceiling.

SUBTASK 50-10-05-020-001

(5) Remove the cargo compartment nets [1].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

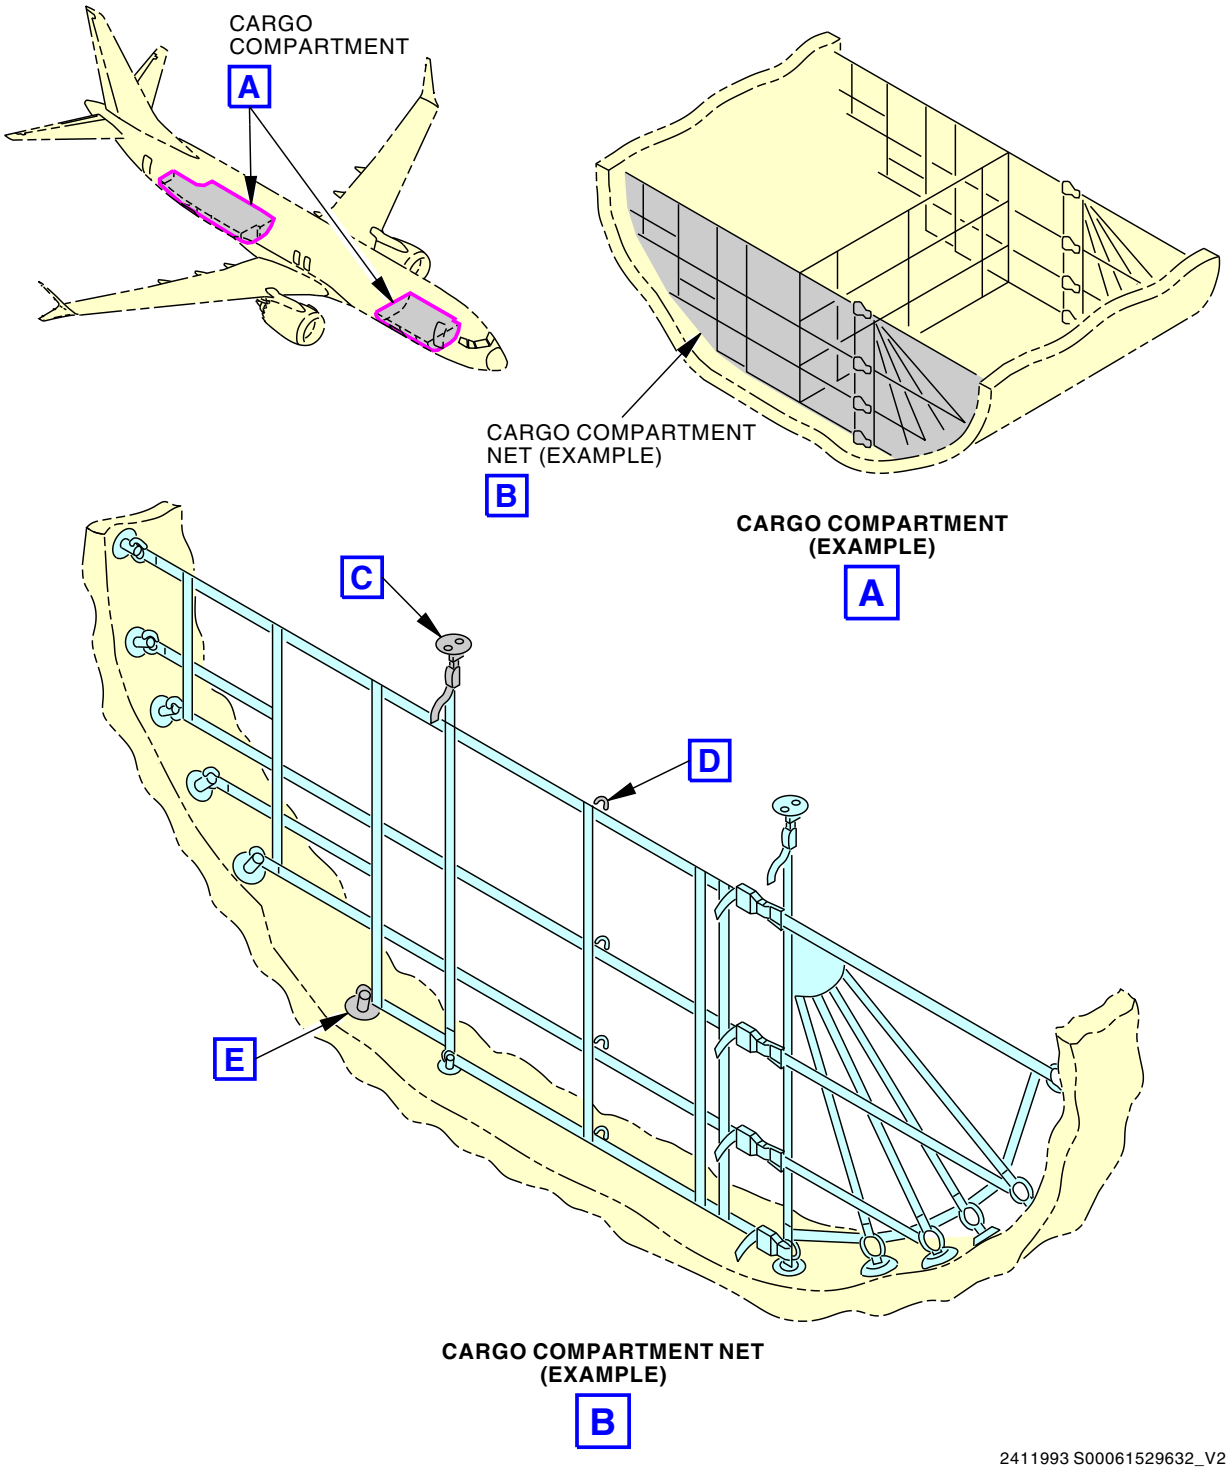

Cargo Compartment Net Installation
Figure 401/50-10-05-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

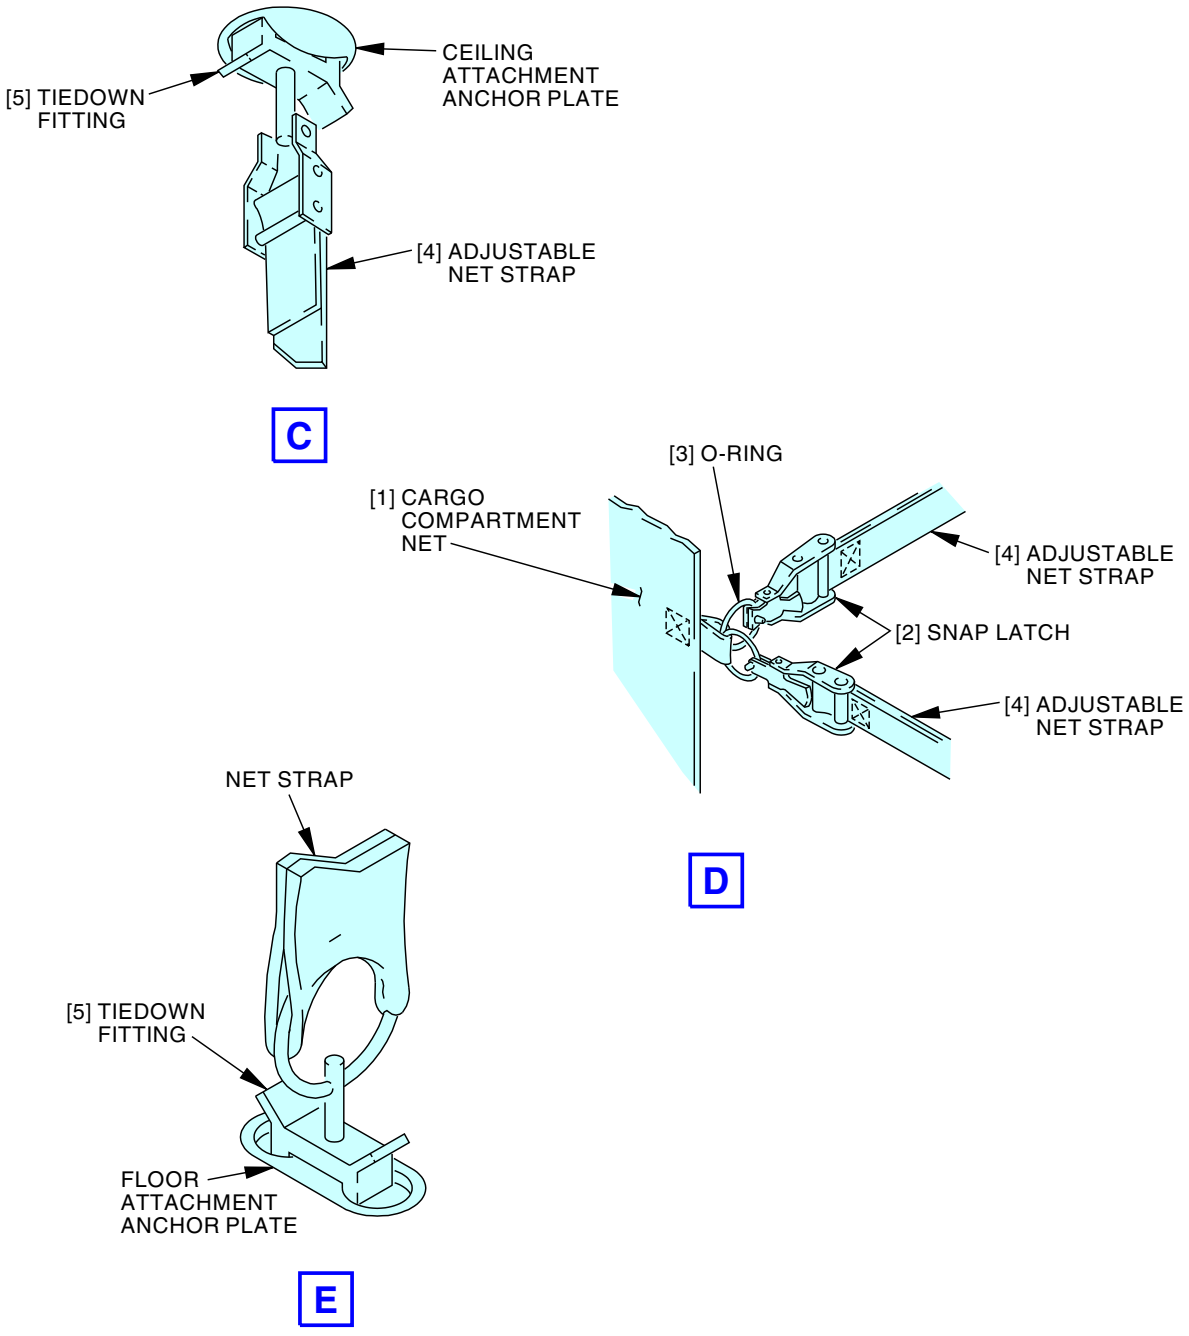

2411994 S00061529633_V3

Cargo Compartment Net Installation
Figure 401/50-10-05-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-10-05-420-801

3. Cargo Compartment Net Installation

(Figure 401)

A. General

(1) This task is for the installation of the cargo compartment net.

B. References

Reference	Title
52-31-00-580-802	Close the Cargo Door (P/B 201)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Cargo compartment net	50-10-05-10A-020	PTF ALL
		50-10-05-10A-060	PTF ALL
		50-10-05-10A-085	PTF ALL
		50-10-05-10A-095	PTF ALL

D. Location Zones

Zone	Area
100	Lower Half of Fuselage
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Cargo Compartment Net Installation

SUBTASK 50-10-05-430-001

(1) Connect the tiedown fittings [5] to the ceiling attachment anchor plates in the ceiling.

SUBTASK 50-10-05-430-002

(2) Connect the tiedown fittings [5] to the floor attachment anchor plates in the sidewall and the floor.

SUBTASK 50-10-05-430-003

(3) Connect the snap latches [2] to the O-rings [3] on the cargo compartment net [1].

SUBTASK 50-10-05-430-004

(4) Tighten the adjustable net straps [4] to increase the tension in the net straps.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 50-10-05-410-002

(1) Close the cargo door, do this task: Close the Cargo Door, TASK 52-31-00-580-802.

——— END OF TASK ———

TASK 50-10-05-900-801

4. Cargo Net Snap Latch Replacement

(Figure 401 and Figure 402)

A. General

(1) This task is for the replacement of the cargo net snap latch.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Consumable Materials

Reference	Description	Specification
G50386	Thread - Nylon, Class A Size F, Z Twist, Color Flat Gray per TT-L-20A	A-A-59826 (Supersedes V-T-295) Type II
G50387	Thread - Nylon, Class A Size FF, Z Twist, Color Flat Gray per TT-L-20A	A-A-59826 (Supersedes V-T-295) Type II
G50389	Webbing - Textile, Woven Nylon, 1 Inch (25.4 mm) Width, Type XVII, Color Flat Gray Per TT-L-20A	MIL-W-4088 Type XVII
G50390	Webbing - Textile, Woven Nylon, 1 Inch (25.4 mm) Width, Type XVIII, Untreated	MIL-W-4088 Type XVIII
G50391	Webbing - Textile, Woven Nylon, Impregnated	MIL-W-27265 class R, Z twist, color flat gray per TT-L-20A

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Snap latch	50-10-05-10A-055	PTF ALL
		50-10-05-10A-075	PTF ALL
		50-10-05-10A-090	PTF ALL

D. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Snap Latch Replacement

SUBTASK 50-10-05-960-001

(1) Replace the snap latch [2] as follows:

(a) Cut the existing cargo net webbing at the end of the snap latch [2].

NOTE: These steps can be used with the other net components.

1) Note the stitch pattern.

(b) Cut a new strip of nylon webbing as follows:

1) Melt the ends to prevent unraveling.

2) Use nylon webbing, G50389, nylon webbing, G50390 or, nylon webbing, G50391 necessary for the replacement.

(c) Put the web material through the fitting.

(d) Fold the ends under.

(e) Sew the new web strip to the existing web material as follows:

1) There should be 8 stitches per inch.


2) The stitch pattern is to be a box - X pattern.


ECCN 9E991 BOEING PROPRIETARY - See title page for details


3) Use nylon thread, G50386 or nylon thread, G50387 to sew the new web strip.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

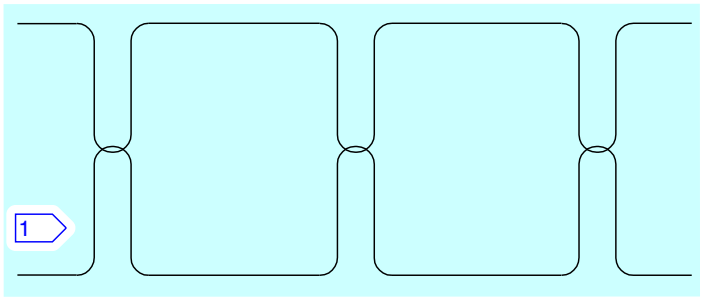

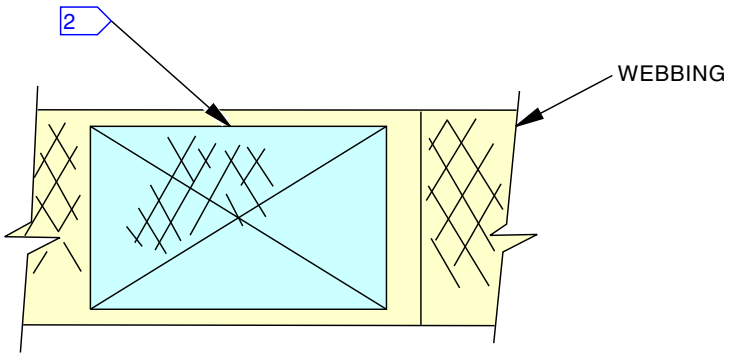

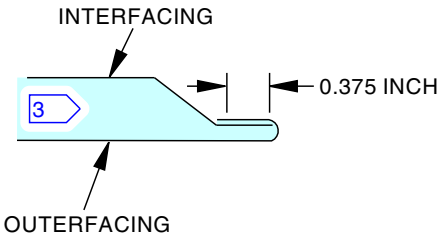

CAUTION:
DO NOT SEW FABRIC TO FABRIC

1 STITCH PATTERN FOR ATTACHING FABRIC TO WEBBING WITH 8 STITCHES PER INCH ALLOWABLE.


2 STITCH PATTERN FOR SEWING WEBBING TO WEBBING WITH 8 STITCHES PER INCH ALLOWABLE.

3 FABRIC SEAM AS INDICATED

2411995 S00061529636_V1

Snap Latch Replacement
Figure 402/50-10-05-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

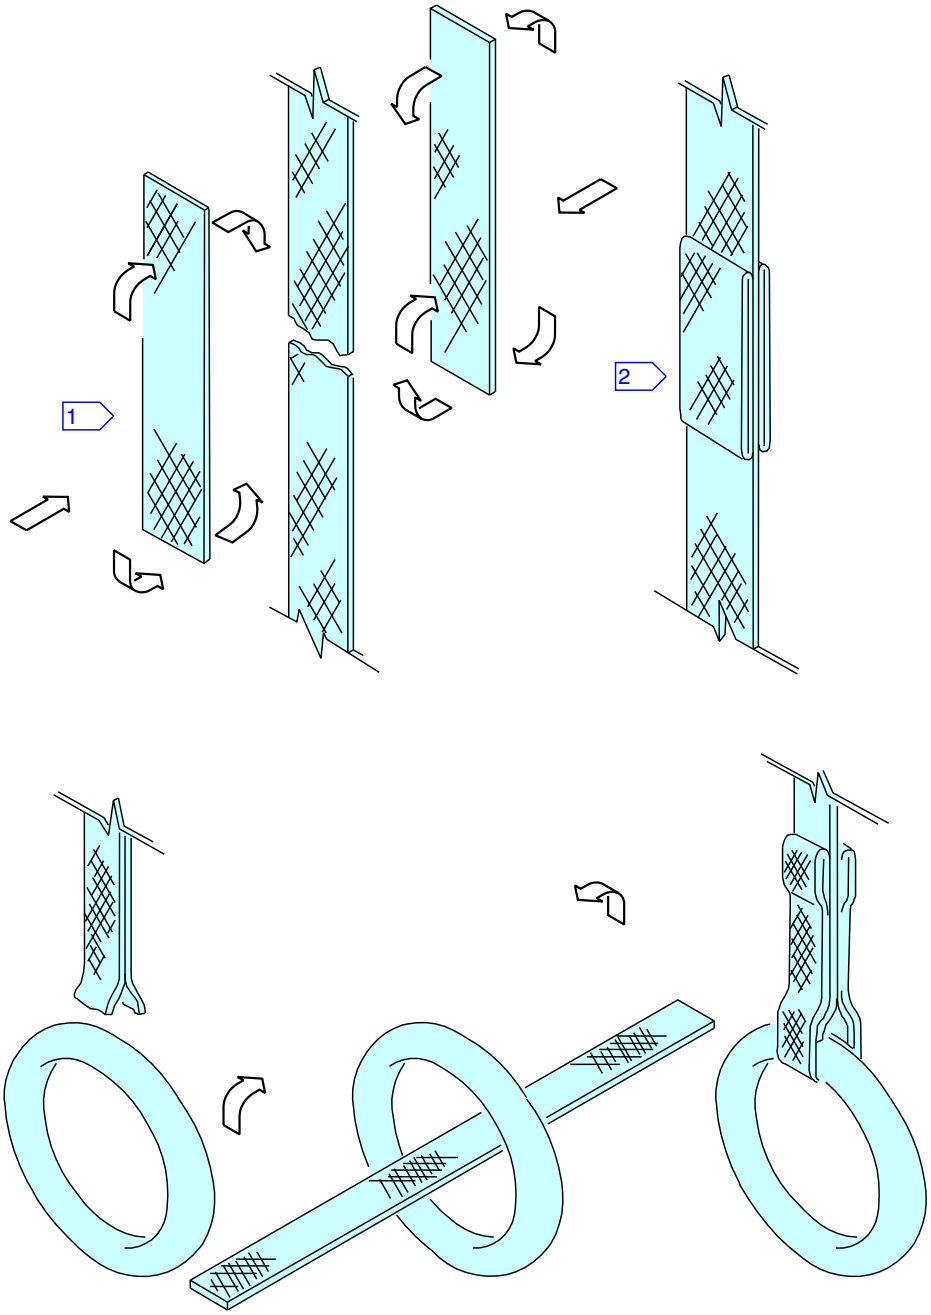

2411996 S00061529637_V1

Snap Latch Replacement
Figure 402/50-10-05-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FORWARD CARGO COMPARTMENT FORWARD BULKHEAD LINER - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the forward cargo compartment forward bulkhead liner

(2) An installation of the forward cargo compartment forward bulkhead liner.

TASK 50-11-01-000-801

2. Forward Cargo Compartment Forward Bulkhead Liner Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the forward cargo compartment forward bulkhead liner.

B. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

C. Access Panels

Number	Name/Location
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

D. Forward Cargo Compartment Forward Bulkhead Liner Removal

SUBTASK 50-11-01-020-001

(1) Remove the studs [6], grommets [7], retainer rings [8], and washers [3] that are around the edges of the forward bulkhead liners [1].

(a) FWD bulkhead liners:

Number	Name/Location
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

SUBTASK 50-11-01-020-002

(2) Remove the central forward bulkhead liner [1].

(a) Make sure that the seals [5] are attached to the airplane structure when remove the forward bulkhead liner [1].

SUBTASK 50-11-01-020-003

(3) Remove the studs [6], grommets [7], and retainer rings [8] that are around the edges of the pressure relief panels [2].

SUBTASK 50-11-01-020-004

(4) Remove the pressure relief panels [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the seals [5] are attached to the airplane structure when remove the pressure relief panels [2].

(b) Remove the close-out panel [4] that attached to the central pressure relief panels [2].


SUBTASK 50-11-01-020-005


(5) Remove the left and right forward bulkhead liners [1].

(a) Make sure that the seals [5] are attached to the airplane structure when remove the forward bulkhead liner [1].

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

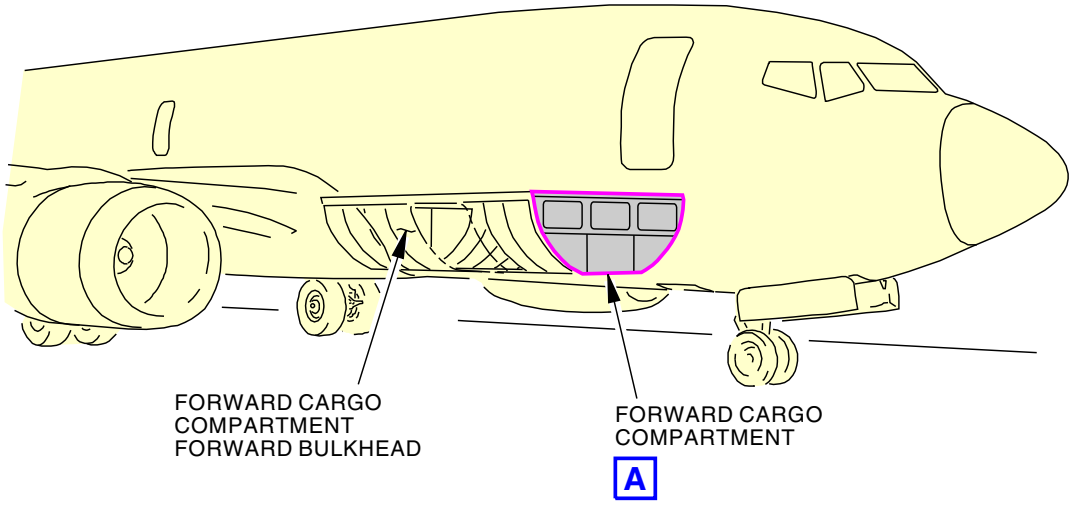

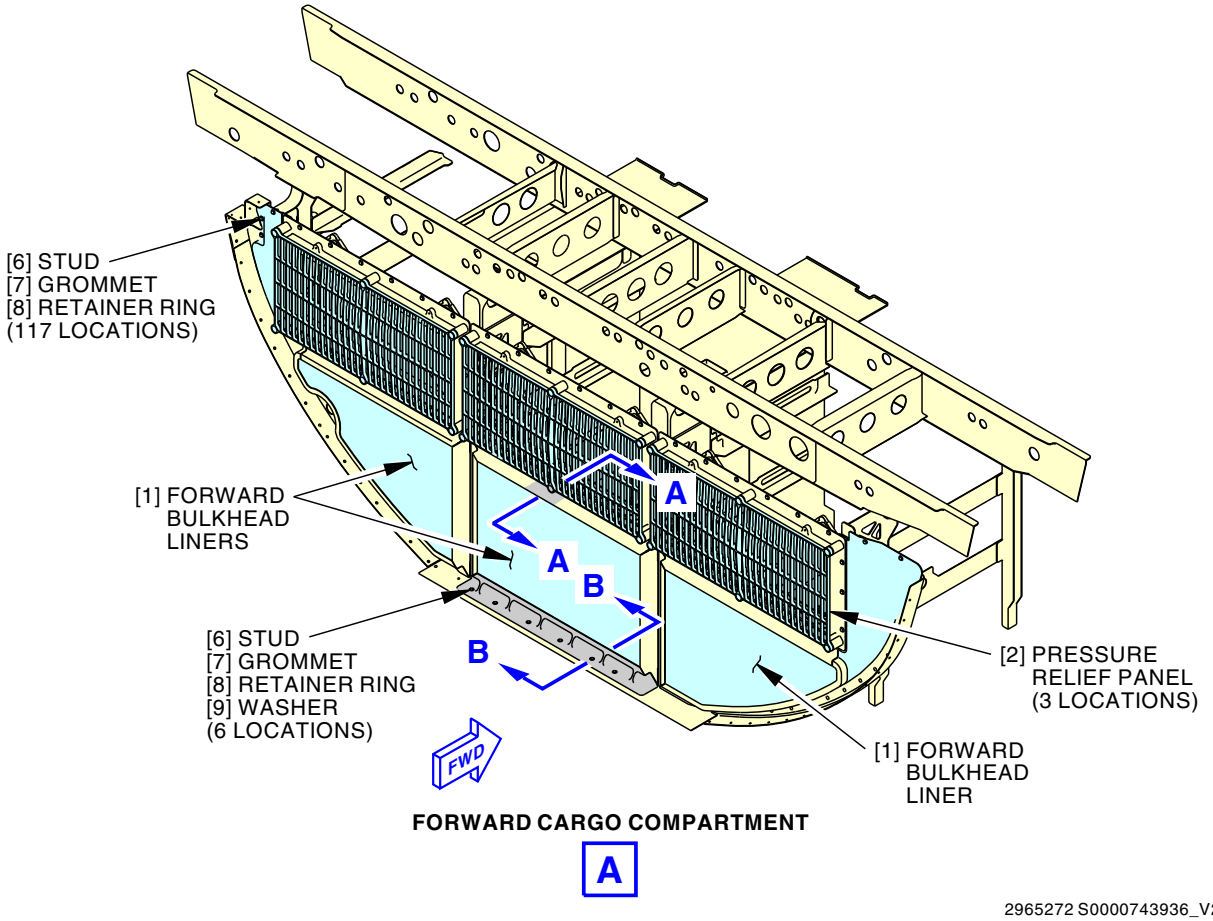


Forward Cargo Compartment Forward Bulkhead Liner Installation
Figure 401/50-11-01-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

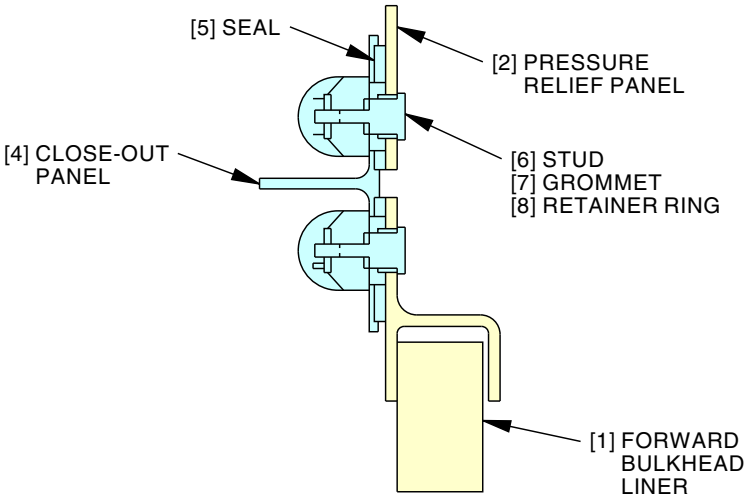

BULKHEAD JOINT

A-A

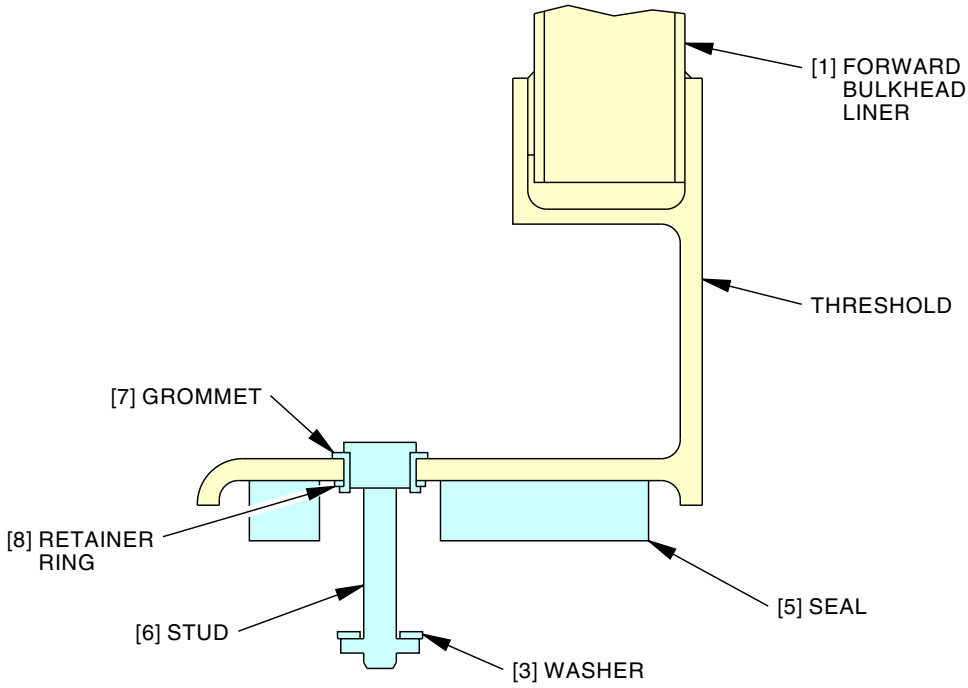

LOWER PANEL CONNECTION

B-B

2965276 S0000743937_V2

Forward Cargo Compartment Forward Bulkhead Liner Installation
Figure 401/50-11-01-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-11-01-400-801

3. Forward Cargo Compartment Forward Bulkhead Liner Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the forward cargo compartment forward bulkhead liner.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Forward bulkhead liner	50-11-01-01-050	PTF ALL
		50-11-01-01-150	PTF ALL
		50-11-01-01-250	PTF ALL
2	Pressure relief panel	21-32-05-01-010	PTF ALL
4	Close-out panel	50-11-01-01-010	PTF ALL
5	Seal	50-11-01-01-015	PTF ALL
		50-11-01-01-095	PTF ALL
		50-11-01-01-100	PTF ALL
		50-11-01-01-105	PTF ALL
		50-11-01-01-110	PTF ALL
		50-11-01-01-190	PTF ALL
		50-11-01-01-195	PTF ALL
		50-11-01-01-200	PTF ALL
		50-11-01-01-205	PTF ALL
		50-11-01-01-300	PTF ALL
		50-11-01-01-305	PTF ALL
		50-11-01-01-310	PTF ALL
		50-11-01-01-315	PTF ALL

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

D. Access Panels

Number	Name/Location
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

E. Forward Cargo Compartment Forward Bulkhead Liner Installation

SUBTASK 50-11-01-210-001

(1) Examine the seals [5] on the airplane structure.

(a) Replace the seals [5] if they are damaged or missing.

NOTE: The seal must be continuous around all the edges of the opening for the liner.

(b) Make sure that the seals [5] are attached to the airplane structure when install the forward bulkhead liners [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-11-01-420-001

(2) Put the left and right forward bulkhead liners [1] in its position.

(a) FWD bulkhead liners:

Number	Name/Location
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

SUBTASK 50-11-01-420-002

(3) Install and lock the studs [6], grommets [7], and retainer rings [8] to attach the forward bulkhead liners [1] to the airplane structure.

NOTE: It is not necessary to apply tape to seal these liners.

SUBTASK 50-11-01-420-003

(4) Put the pressure relief panels [2] in its position.

(a) Attach the close-out panel [4] to the center pressure relief panels [2].

SUBTASK 50-11-01-420-004

(5) Install and lock the studs [6], grommets [7], and retainer rings [8] to attach the pressure relief panels [2].

SUBTASK 50-11-01-420-005

(6) Put the center forward bulkhead liner [1] in its position.

SUBTASK 50-11-01-420-006

(7) Install and lock the studs [6], grommets [7], retainer rings [8], and washers [3] to attach the central forward bulkhead liner [1].

NOTE: It is not necessary to apply tape to seal this liner.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FORWARD CARGO COMPARTMENT AFT BULKHEAD LINER - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Forward cargo compartment aft bulkhead liner removal

(2) Forward cargo compartment aft bulkhead liner installation.

TASK 50-11-02-000-801

2. Forward Cargo Compartment Aft Bulkhead Liner Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the forward cargo compartment aft bulkhead liner.

B. Location Zones

Zone	Area
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right

C. Access Panels

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121FW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
821	Forward Cargo Door

D. Prepare for the Removal

SUBTASK 50-11-02-010-001

(1) If necessary, open this access panel:

Number	Name/Location
821	Forward Cargo Door

E. Forward Cargo Compartment Aft Bulkhead Liner Removal

SUBTASK 50-11-02-020-001

(1) Release the quarter turn fasteners [2] that are around the edges of the bulkhead.

(a) Aft bulkhead liners

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121FW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead


SUBTASK 50-11-02-020-002


(2) Remove the liner [4].

(a) Make sure that the foam seals, are attached to the structure when remove the liner [4].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

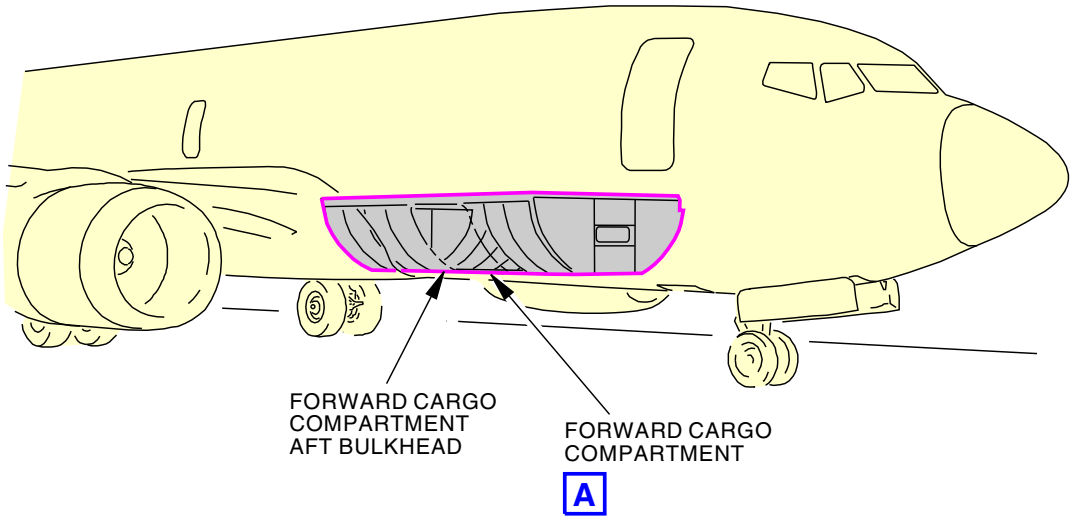

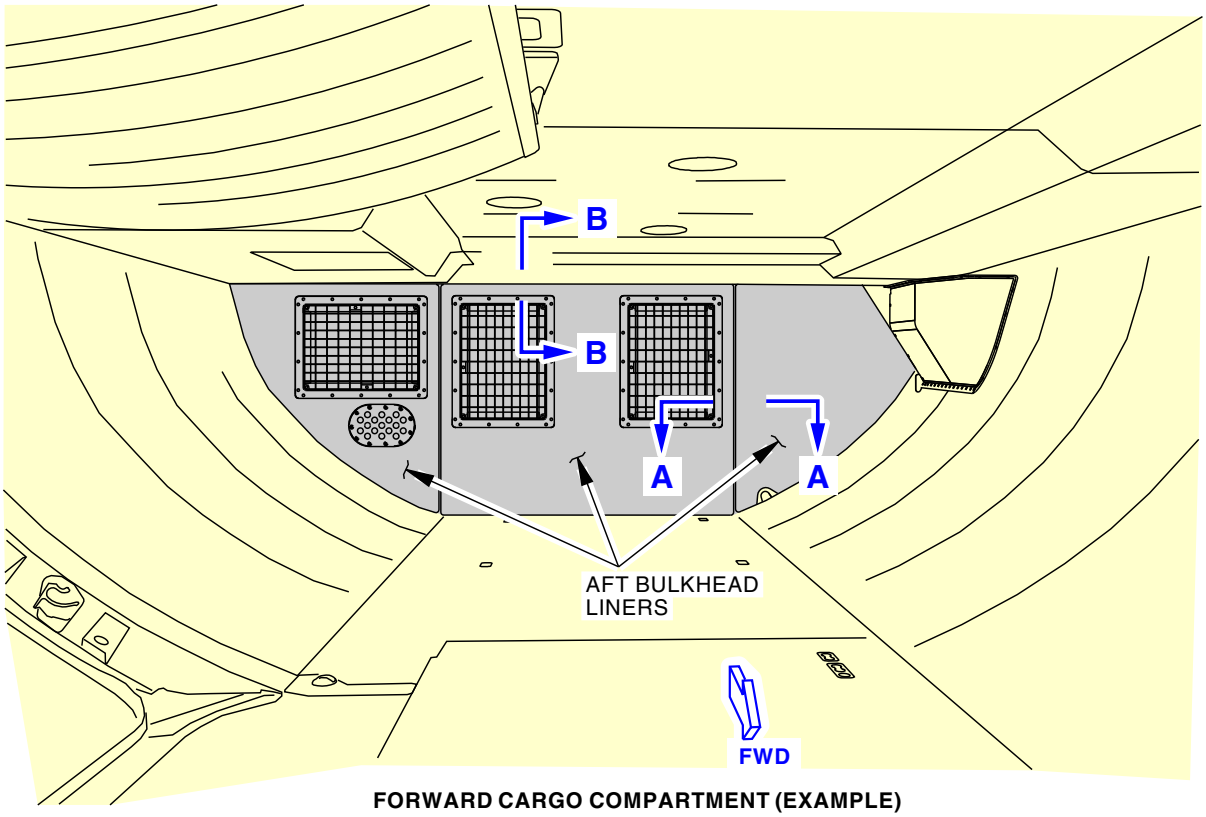


FORWARD CARGO COMPARTMENT (EXAMPLE)

A

2411999 S00061529647_V2


Forward Cargo Compartment Aft Bulkhead Liner Installation
Figure 401/50-11-02-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

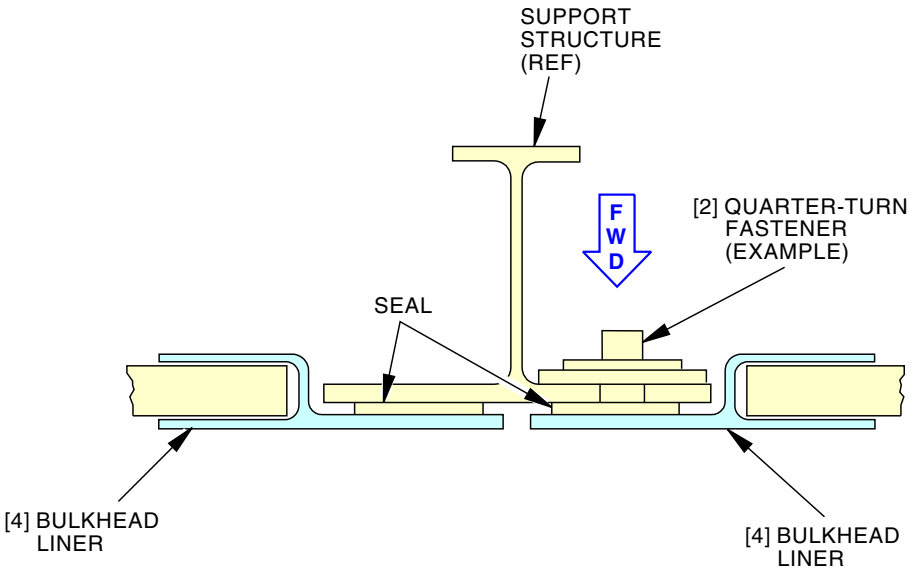

BULKHEAD BUTT JOINT (EXAMPLE)

A-A

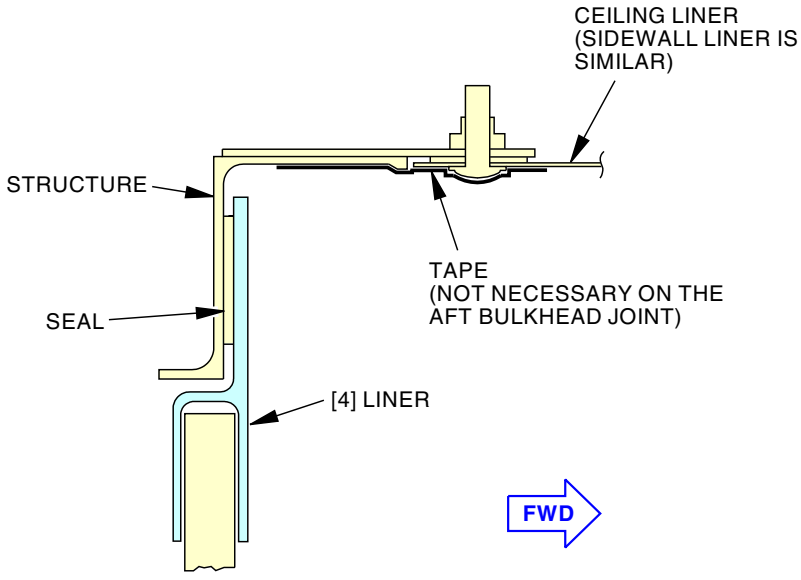

BULKHEAD EDGE JOINT (EXAMPLE)

B-B

2412000 S00061529648_V2

Forward Cargo Compartment Aft Bulkhead Liner Installation
Figure 401/50-11-02-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-11-02-400-801

3. Forward Cargo Compartment Aft Bulkhead Liner Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the forward cargo compartment aft bulkhead liner.

B. Consumable Materials

Reference	Description	Specification
G50532	Tape - Silicone, Foam	BMS1-68

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
4	Liner	50-11-02-01-015	PTF ALL
		50-11-02-01-110	PTF ALL
		50-11-02-01-165	PTF ALL
		50-11-02-01-200	PTF ALL
		50-11-02-01-255	PTF ALL
		50-11-02-01-420	PTF ALL

D. Location Zones

Zone	Area
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right

E. Access Panels

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121FW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
821	Forward Cargo Door

F. Forward Cargo Compartment Aft Bulkhead Liner Installation

SUBTASK 50-11-02-210-001

(1) Examine the seal.

(a) If it is necessary, replace the seal (tape, G50532).

NOTE: The foam seal must be continuous around all the edges of the opening for the liner.

SUBTASK 50-11-02-420-001

(2) Put the liner [4] in its position.

(a) Aft bulkhead liners

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121FW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead Filter Cover
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead

SUBTASK 50-11-02-420-002

(3) Lock the quarter turn fasteners [2] that are around the edge of the liner [4].

NOTE: It is not necessary to apply tape to seal this liner.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-11-02-410-001

(1) If it is no longer necessary to keep open, close this access panel:

Number	Name/Location
821	Forward Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT CARGO COMPARTMENT FORWARD BULKHEAD LINER - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment forward bulkhead liner removal

(2) Aft cargo compartment forward bulkhead liner installation.

TASK 50-12-01-000-801

2. Aft Cargo Compartment Forward Bulkhead Liner Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment forward bulkhead liner.

B. Consumable Materials

Reference	Description	Specification
G50428	Tape - Nitto P-629 (Formerly Permacel) Cargo Pit Seam Tape	BMS5-146 Type 1 Class 1 Grade A

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Aft Cargo Compartment Forward Bulkhead Liner Removal

SUBTASK 50-12-01-020-001

(1) Remove and discard the Nitto P-629 tape, G50428.

SUBTASK 50-12-01-020-002

(2) Remove the screws [7] from the cap strips [6] and remove the cap strips [6].


SUBTASK 50-12-01-020-003


(3) Remove the liners in this sequence: liner [1], liner [2], liner [3], and then liner [4] or liner [5].

(a) To remove them, remove the screws [7] from the liner.

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

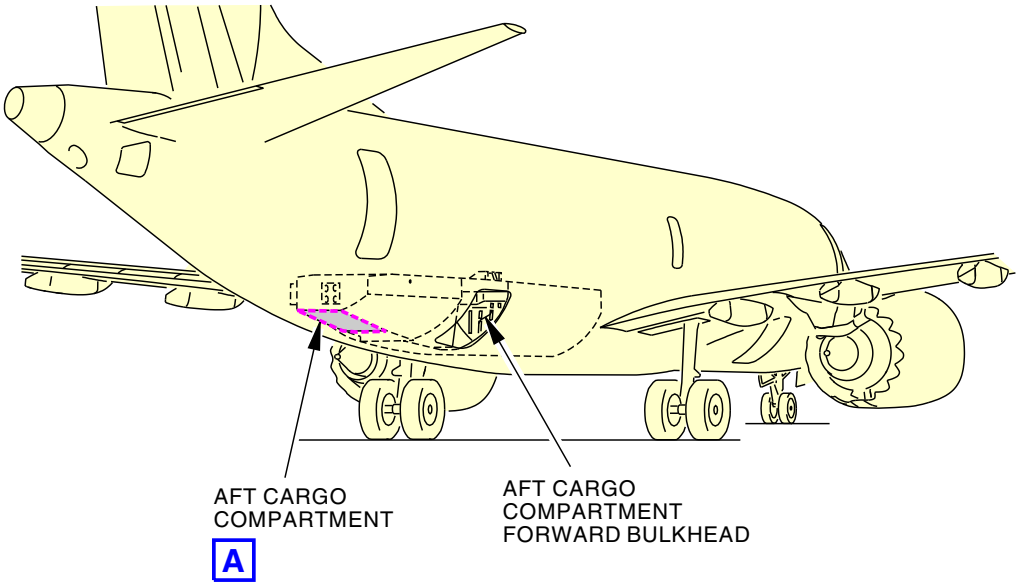

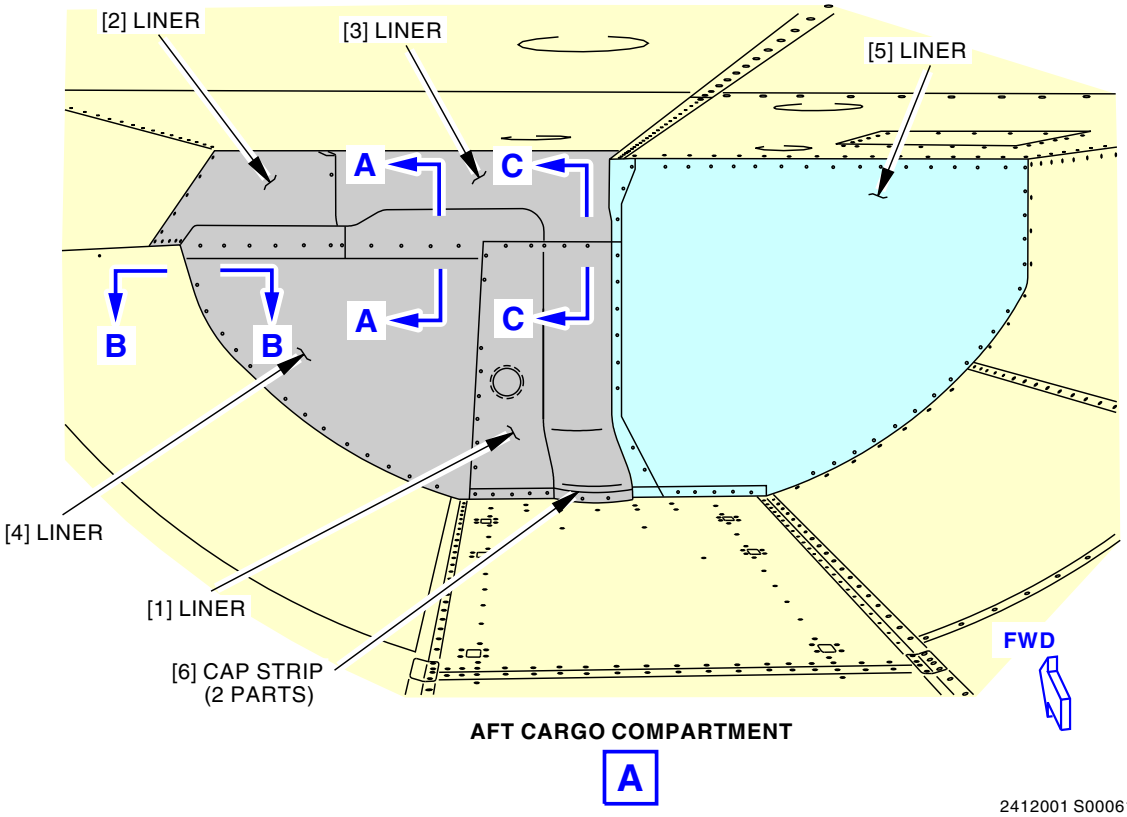

Aft Cargo Compartment Forward Bulkhead Liner Installation
Figure 401/50-12-01-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

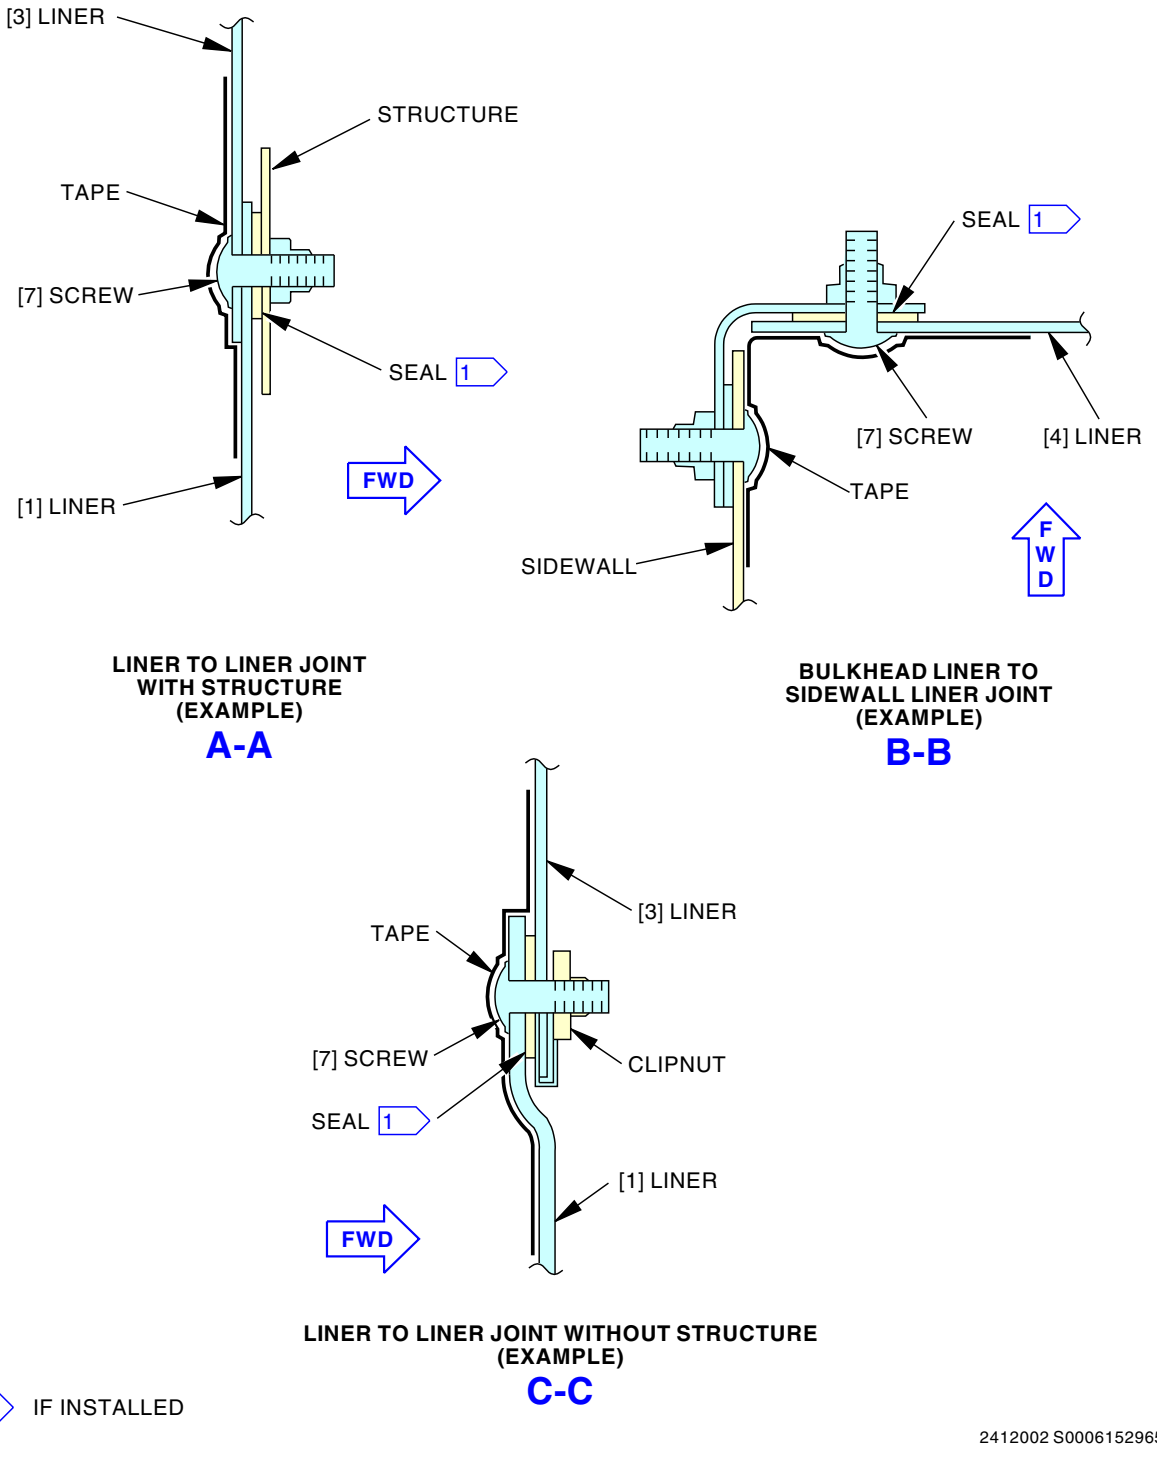

Aft Cargo Compartment Forward Bulkhead Liner Installation
Figure 401/50-12-01-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-12-01-400-801

3. Aft Cargo Compartment Forward Bulkhead Liner Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment forward bulkhead liner.

B. Consumable Materials

Reference	Description	Specification
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
G02186	Seal - Closed Cell Silicone Foam Rubber, Hydraulic Fluid Resistant	BMS1-68 Form III
G50428	Tape - Nitto P-629 (Formerly Permacel) Cargo Pit Seam Tape	BMS5-146 Type 1 Class 1 Grade A

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Liner	50-12-02-01-035	PTF ALL
2	Liner	50-12-02-01-045	PTF ALL
3	Liner	50-12-02-01-040	PTF ALL
4	Liner	50-12-02-01-050	PTF ALL
5	Liner	50-12-02-01-065	PTF ALL

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Aft Cargo Compartment Forward Bulkhead Liner Installation

SUBTASK 50-12-01-210-001

(1) Examine the seals.

NOTE: The foam seal must be continuous around all the edges of the opening for each piece of the liner. There are foam seals between the liners when two liners have an overlap at a location where there is no structure. If the liner has clip nuts at a location, it should have a foam seal.

(a) If it is necessary, replace the seals (seal, G02186).

SUBTASK 50-12-01-420-001

(2) Install the liners in this sequence: liner [4] and liner [5], then liner [3], liner [2], and liner [1].

(a) To install the liners, put the liner in its position and install the screws [7].

SUBTASK 50-12-01-420-002

(3) Install the cap strips [6] with the screws [7].

SUBTASK 50-12-01-110-001

CAUTION

DO NOT LET THE SOLVENT TOUCH PLASTICS, CONTROL CABLES, LUBRICATED AREAS, PLASTIC DECALS, OR PAINTED AREAS OR MARKINGS THAT ARE NOT SKYDROL RESISTANT. THE SOLVENT WILL CAUSE DAMAGE TO THESE ITEMS.

(4) Clean the areas where you will apply tape with solvent, B00083.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-12-01-420-003

(5) Apply the new Nitto P-629 tape, G50428, on all the joints and edges of the liners. Apply the tape with the minimum number of joints in it.

(a) Make sure the tape is within shelf life limits for optimum tape adhesion.

(b) Where possible, apply the tape to warm surfaces that are approximately 60°F (16°C) or higher, to help promote good adhesion.

(c) If it is necessary to use short pieces of Nitto P-629 tape, G50428, make a minimum overlap of 0.50 in. (12.70 mm).

(d) Push the Nitto P-629 tape, G50428 firmly to make sure there is a good bond.

NOTE: There is a good bond if the surface of the tape is smooth and does not have air bubbles.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT CARGO COMPARTMENT AFT BULKHEAD PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment aft bulkhead liner removal

(2) Aft cargo compartment aft bulkhead liner installation.

TASK 50-12-02-000-801

2. Aft Cargo Compartment Aft Bulkhead Liner Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment aft bulkhead liner.

B. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Aft Cargo Compartment Aft Bulkhead Liner Removal

SUBTASK 50-12-02-020-001

(1) Release the quarter-turn fasteners [2] that are around the edges of the bulkhead liner [1].

SUBTASK 50-12-02-020-002


(2) Remove the liner [1].

(a) Make sure that the foam seals are attached to the liner [1] or structure when you remove the liner [1].

NOTE: Depending on the aft cargo compartment aft bulkhead liner configuration, the foam seal can be attached to the liner or to the airplane structure.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

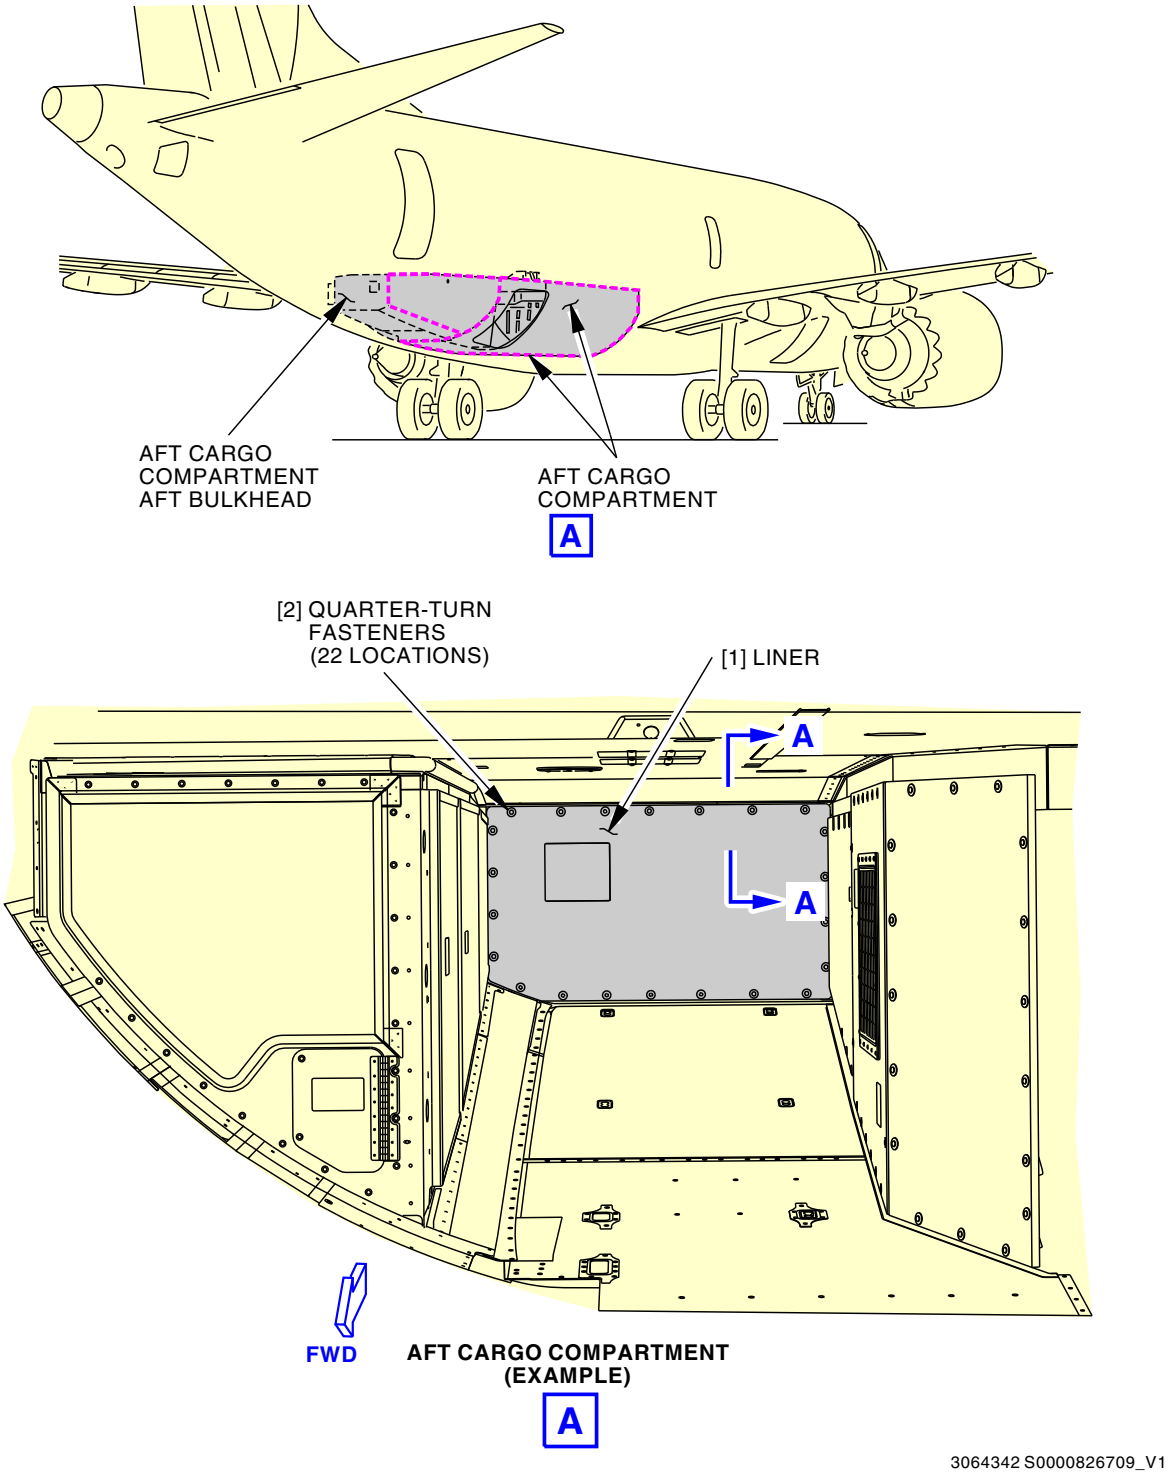

Aft Cargo Compartment Aft Bulkhead Liner Installation
Figure 401/50-12-02-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

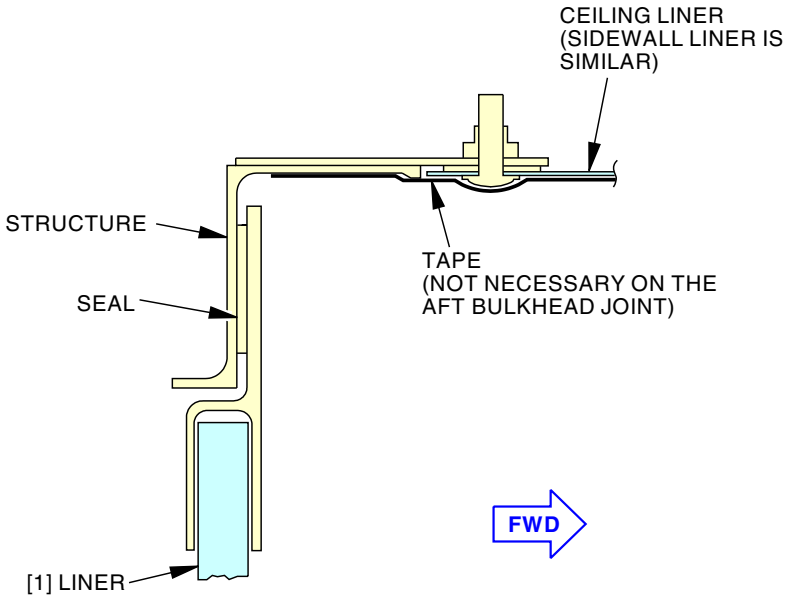

BULKHEAD EDGE JOINT
(EXAMPLE)

A-A

2412004 S00061529660_V1

Aft Cargo Compartment Aft Bulkhead Liner Installation
Figure 401/50-12-02-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-12-02-400-801

3. Aft Cargo Compartment Aft Bulkhead Liner Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment aft bulkhead liner.

B. Consumable Materials

Reference	Description	Specification
G50532	Tape - Silicone, Foam	BMS1-68

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Liner	50-12-02-11-010	PTF ALL
		50-12-02-11-125	PTF ALL

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Aft Cargo Compartment Aft Bulkhead Liner Installation

SUBTASK 50-12-02-210-001

(1) Examine the seal.

(a) If it is necessary, replace the seal (tape, G50532).

NOTE: The foam seal must be continuous around all the edges of the liner or opening for the liner.

SUBTASK 50-12-02-420-001

(2) Put the liner [1] in its position.

SUBTASK 50-12-02-420-002

(3) Lock the quarter-turn fasteners [2] that are around the edges of the liner [1].

NOTE: You do not need to apply tape to seal this liner [1].

——— **END OF TASK** ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WASTE TANK ENCLOSURE PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Waste tank enclosure panel removal

(2) Waste tank enclosure panel installation.

TASK 50-12-03-000-801

2. Waste Tank Enclosure Panel Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the waste tank enclosure panel.

(2) Do this task for the other panels if it is necessary to remove the full enclosure.

B. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left

C. Waste Tank Enclosure Panel Removal

SUBTASK 50-12-03-020-001


(1) Release the quick-release fasteners [2].

SUBTASK 50-12-03-020-002

(2) Remove the waste tank enclosure panel [1] from the support structure.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

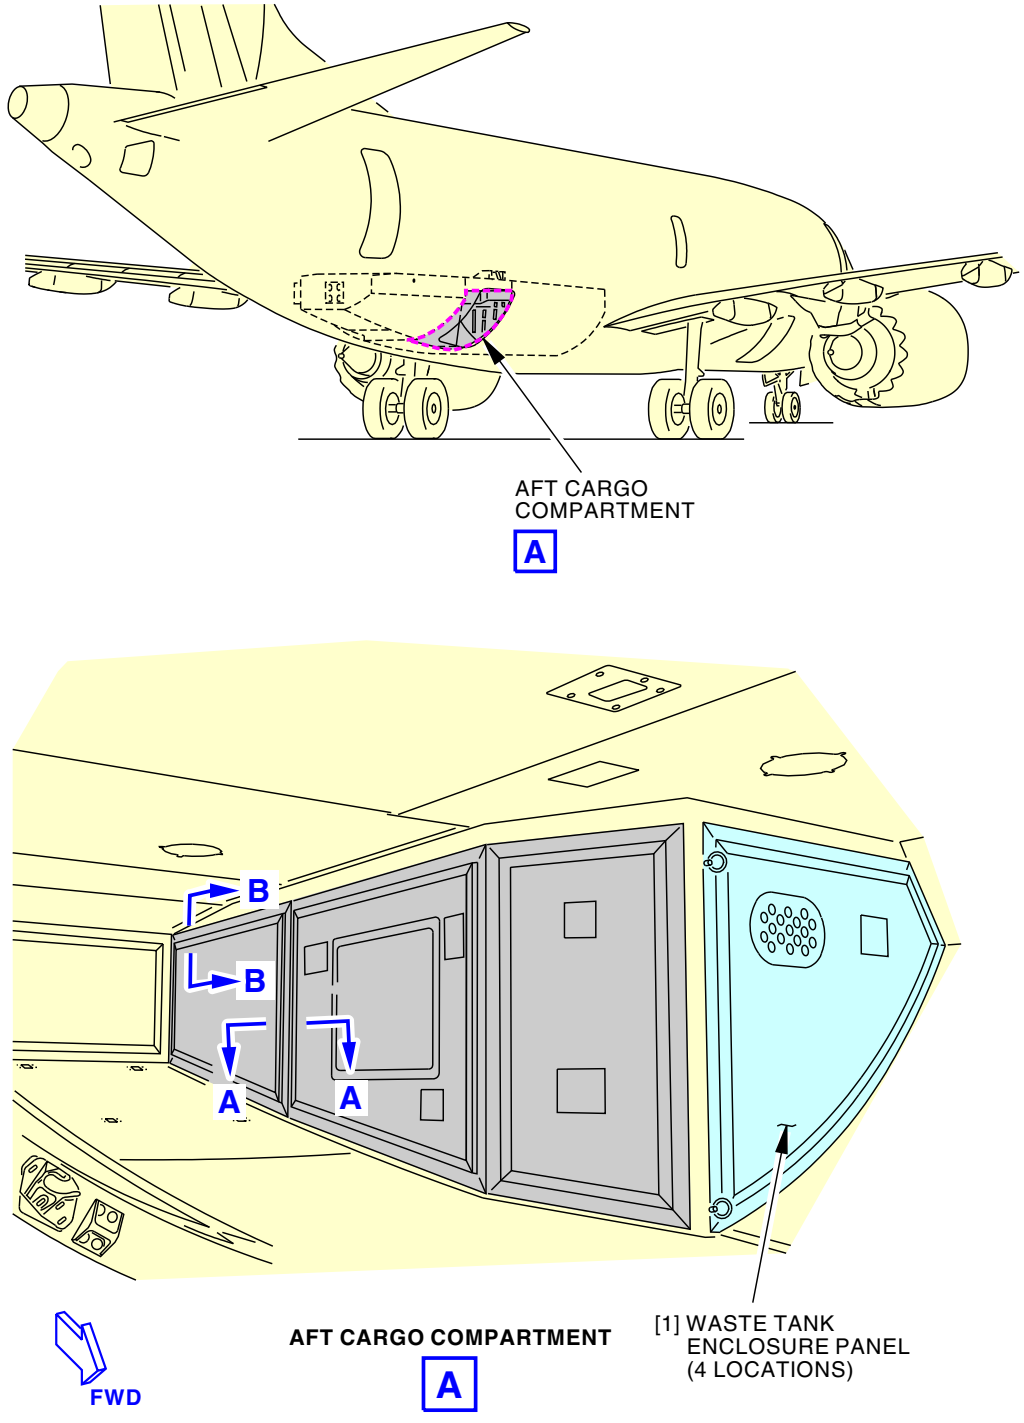


Waste Tank Enclosure Panels Installation
Figure 401/50-12-03-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

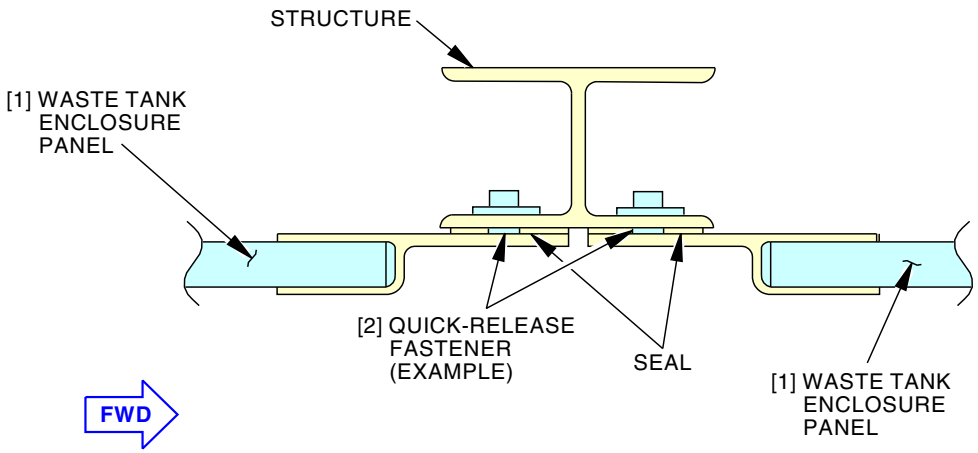

PANEL BUTT JOINT (EXAMPLE)

A-A

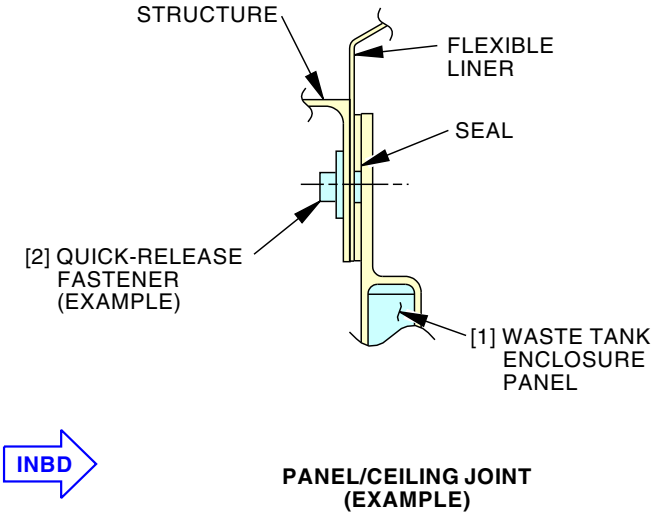

PANEL/CEILING JOINT (EXAMPLE)

B-B

2412006 S00061529666_V1

Waste Tank Enclosure Panels Installation
Figure 401/50-12-03-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-12-03-400-801

3. Waste Tank Enclosure Panel Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the waste tank enclosure panel.

B. Consumable Materials

Reference	Description	Specification
G50532	Tape - Silicone, Foam	BMS1-68

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Waste tank enclosure panel	50-12-03-01-015	PTF ALL
		50-12-03-01-585	PTF ALL
		50-12-03-01-690	PTF ALL
		50-12-03-01-780	PTF ALL
		50-12-03-01-880	PTF ALL
		50-12-03-01-885	PTF ALL

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left

E. Waste Tank Enclosure Panel Installation

SUBTASK 50-12-03-210-001

(1) Examine the seal.

(a) If it is necessary, replace the seal (tape, G50532).

NOTE: The foam seal must be continuous around all the edges of the opening for the panel.

SUBTASK 50-12-03-210-002

(2) Make sure the small flexible liner section (between the top of the panel and the ceiling liner) is in its position.

NOTE: The holes in the flexible liner must align with the fasteners in the structure.

SUBTASK 50-12-03-420-001

(3) Put the waste tank enclosure panel [1] against the support structure.

SUBTASK 50-12-03-420-002

(4) Turn the quick-release fasteners [2] clockwise to attach the waste tank enclosure panel [1] to the support structure.

NOTE: You do not need to apply tape to seal this liner.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT CARGO LOADING SYSTEM - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Aft Cargo Loading System - Deactivation

(2) Aft Cargo Loading System - Activation

TASK 50-21-00-040-801

2. Aft Cargo Loading System - Deactivation

(Figure 201)

A. General

(1) This procedure will deactivate the aft cargo loading systems.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Deactivate the Cargo Loading Systems

SUBTASK 50-21-00-860-003

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-00-010-001

(2) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-00-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-00-410-002

(4) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-00-420-012

(5) Push the EMERGENCY STOP button on the control box.

E. Aft Cargo Loading Systems - Tryout

NOTE: This tryout is to make sure that the aft cargo loading systems are in zero energy state.

SUBTASK 50-21-00-040-010

(1) On the aft cargo loader control box, make sure that no power is supplied.


(a) Make sure that the green light on PWR AVAILABLE indicator is off.


(b) Push the joystick to the LOAD or UNLOAD position.

1) Make sure that the carpet does not move.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

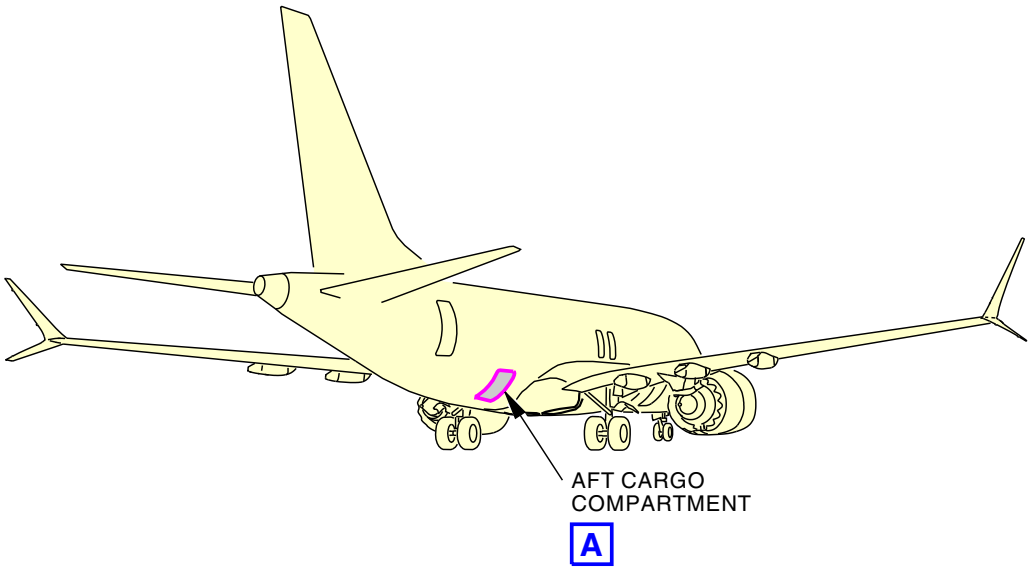

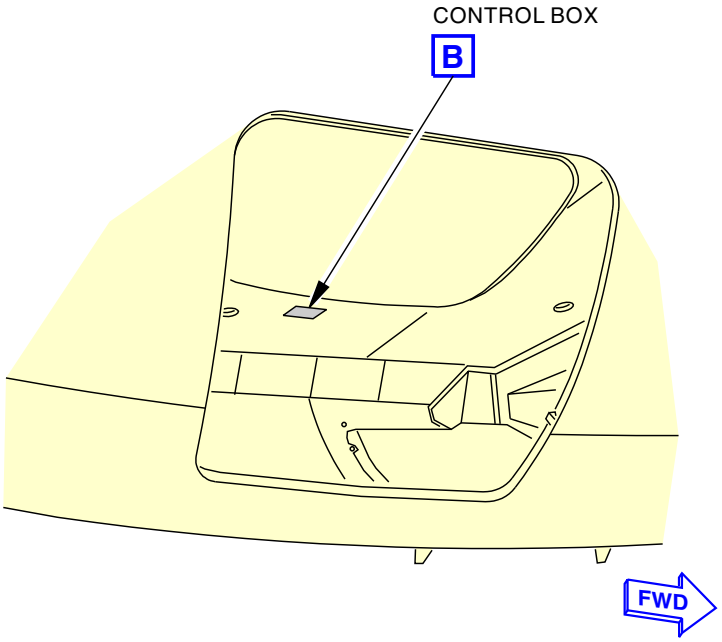


**AFT CARGO COMPARTMENT
(EXAMPLE)**

A

2546703 S0000605514_V2

**Aft Cargo Loader Controller
Figure 201/50-21-00-990-801 (Sheet 1 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

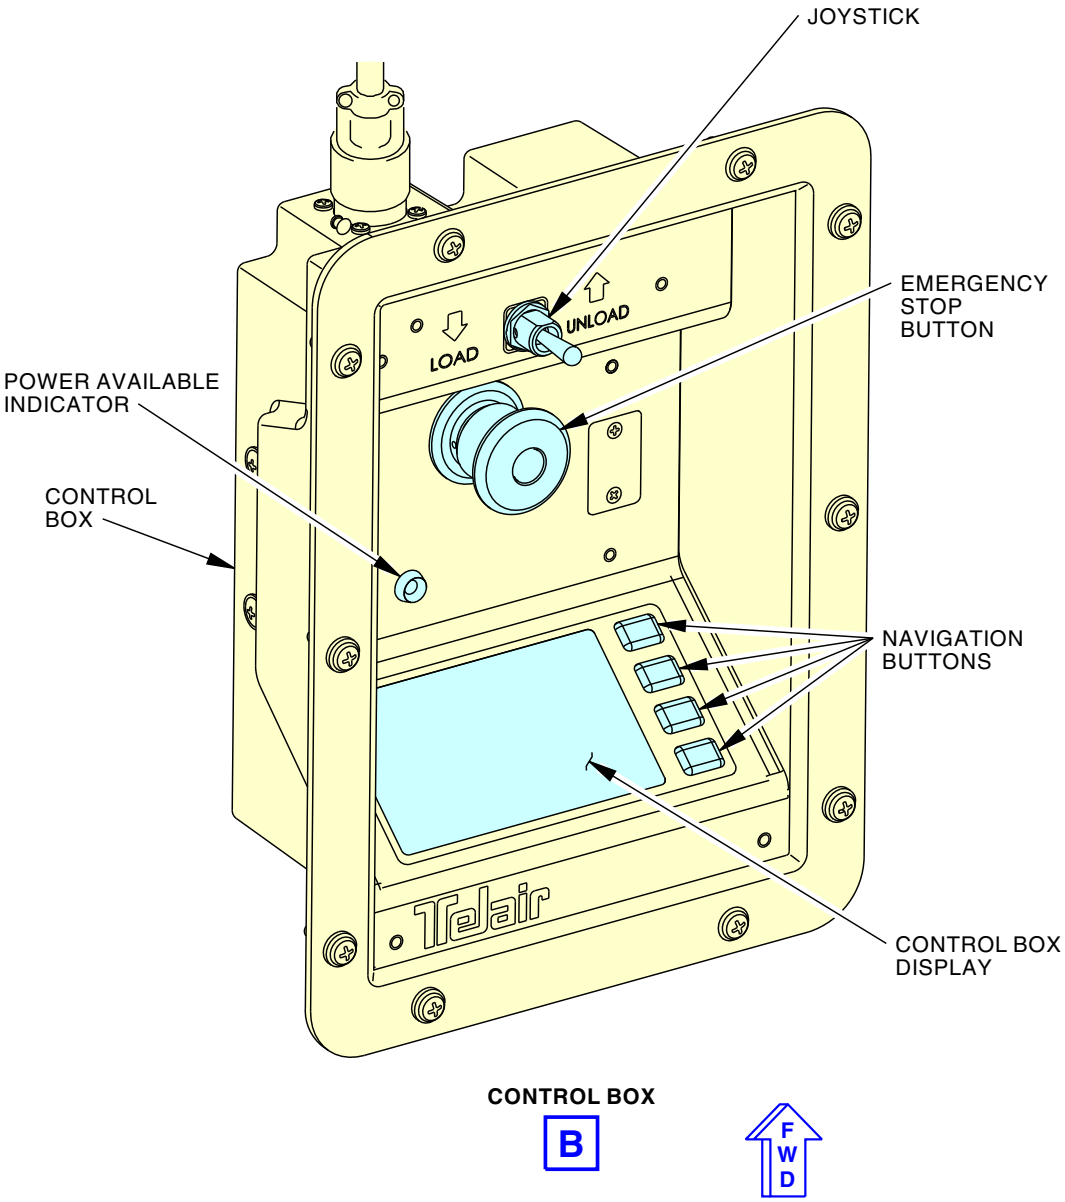

2546705 S0000605515_V2

Aft Cargo Loader Controller
Figure 201/50-21-00-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-00-440-801

3. Aft Cargo Loading System - Activation

(Figure 201)

A. General

(1) This procedure will activate the aft cargo loading systems.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Activate the Cargo Loading Systems

SUBTASK 50-21-00-010-002

(1) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-00-860-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-00-410-001

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-00-860-004

(4) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-00-420-013

(5) Make sure that the EMERGENCY STOP button on the drive assembly is released.

SUBTASK 50-21-00-420-014

(6) Release the EMERGENCY STOP button on the control box.

SUBTASK 50-21-00-440-003

(7) On the aft cargo loader control box, make sure that the power is supplied.

(a) Make sure that the green light on PWR AVAILABLE indicator is on.

(b) Push the EMERGENCY STOP button on the control box.

1) Make sure that the System Blocked Emergency Stop screen comes on the control box display.

(c) Release the EMERGENCY STOP button on the control box.

(d) Push the joystick to the LOAD position.

1) Make sure that the carpet moves away from the aft cargo compartment door.

(e) Push the joystick to the UNLOAD position.

1) Make sure that the carpet moves toward the aft cargo compartment door.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft sliding carpet loading system removal

(2) Aft sliding carpet loading system installation.

TASK 50-21-00-000-801

2. Aft Sliding Carpet Loading System Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft sliding carpet loading system.

B. References

Reference	Title
50-21-01-000-801	Aft Cargo Compartment Movable Bulkhead Removal (P/B 401)
50-21-02-000-801	Aft Cargo Compartment Side Guide Removal (P/B 401)
50-21-03-000-801	Aft Cargo Compartment Ramp Removal (P/B 401)
50-21-04-000-801	Aft Cargo Compartment Guide Panel Removal (P/B 201)
50-21-04-000-802	Aft Cargo Compartment Support Panels Removal (P/B 401)
50-21-05-000-801	Aft Cargo Compartment Drive Assembly Removal (P/B 401)
50-21-05-000-802	Aft Cargo Compartment Carpet Detachment (P/B 401)
50-21-06-000-801	Aft Cargo Compartment Safety Flap Assembly Removal (P/B 401)
50-21-07-000-801	Aft Cargo Compartment Control Box Removal (P/B 401)
50-21-08-000-801	Aft Cargo Compartment Flexdown Support System Removal (P/B 401)
50-21-08-000-802	Aft Cargo Compartment Longitudinal Support System Removal (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Aft Sliding Carpet Loading System Removal

SUBTASK 50-21-00-020-012

(1) Remove the aft cargo compartment safety flap assembly.

(a) Do this task: Aft Cargo Compartment Safety Flap Assembly Removal, TASK 50-21-06-000-801.

SUBTASK 50-21-00-020-002

(2) Remove the aft cargo compartment moveable bulkhead.

(a) Do this task: Aft Cargo Compartment Movable Bulkhead Removal, TASK 50-21-01-000-801.

SUBTASK 50-21-00-020-004

(3) Remove the aft cargo compartment side guides.

(a) Do this task:Aft Cargo Compartment Side Guide Removal, TASK 50-21-02-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-00-020-003

(4) Remove the aft cargo compartment ramp.

(a) Do this task: Aft Cargo Compartment Ramp Removal, TASK 50-21-03-000-801.

SUBTASK 50-21-00-020-013

(5) Disconnect the carpet from the belts.

(a) Do this task: Aft Cargo Compartment Carpet Detachment, TASK 50-21-05-000-802

SUBTASK 50-21-00-020-005

(6) Remove the aft cargo compartment guide panel.

(a) Do this task: Aft Cargo Compartment Guide Panel Removal, TASK 50-21-04-000-801.

SUBTASK 50-21-00-020-006

(7) Remove the aft cargo compartment support panels.

(a) Do this task: Aft Cargo Compartment Support Panels Removal, TASK 50-21-04-000-802.

SUBTASK 50-21-00-020-007

(8) Remove the aft cargo compartment drive assembly.

(a) Do this task: Aft Cargo Compartment Drive Assembly Removal, TASK 50-21-05-000-801.

SUBTASK 50-21-00-020-008

(9) Remove the aft cargo compartment flexdown support system.

(a) Do this task: Aft Cargo Compartment Flexdown Support System Removal, TASK 50-21-08-000-801.

SUBTASK 50-21-00-020-009

(10) Remove the aft cargo compartment longitudinal support system.

(a) Do this task: Aft Cargo Compartment Longitudinal Support System Removal, TASK 50-21-08-000-802.


SUBTASK 50-21-00-020-010


(11) If necessary, remove the aft cargo compartment control box.

(a) Do this task:Aft Cargo Compartment Control Box Removal, TASK 50-21-07-000-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

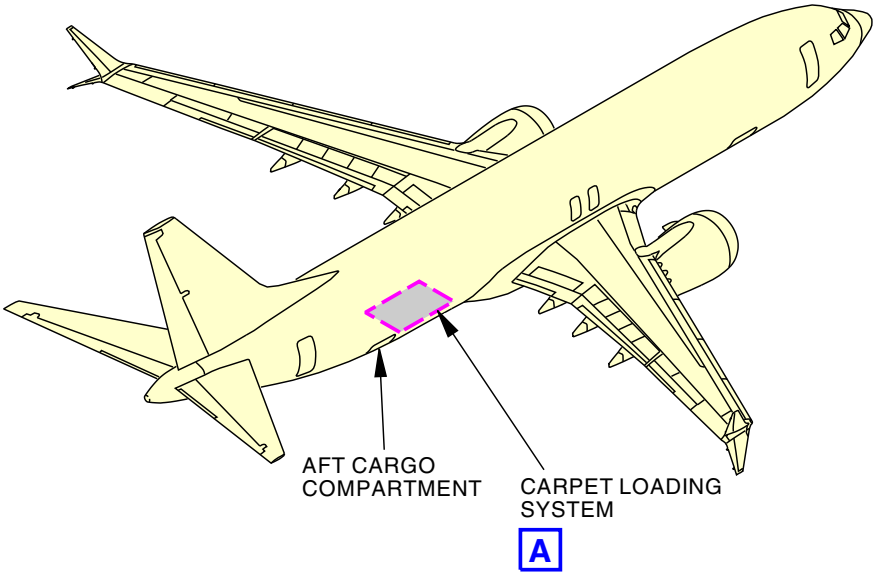

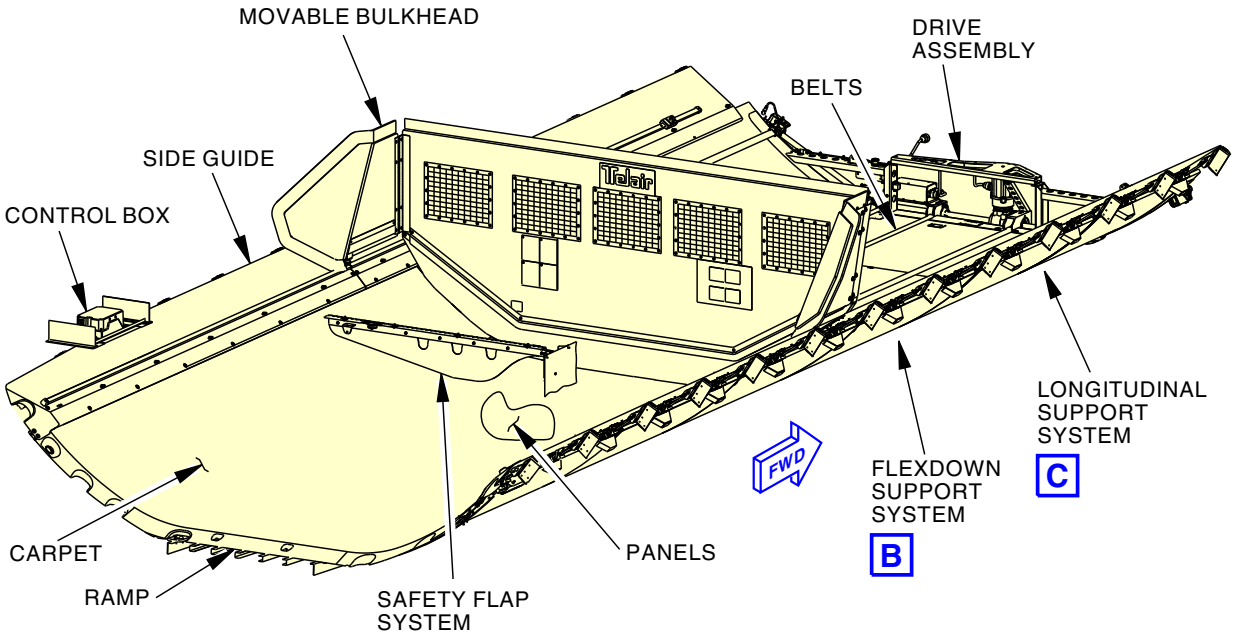


CARPET LOADING SYSTEM

A

2547730 S0000606100_V2


Aft Cargo Compartment Sliding Carpet Loading System Installation
Figure 401/50-21-00-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

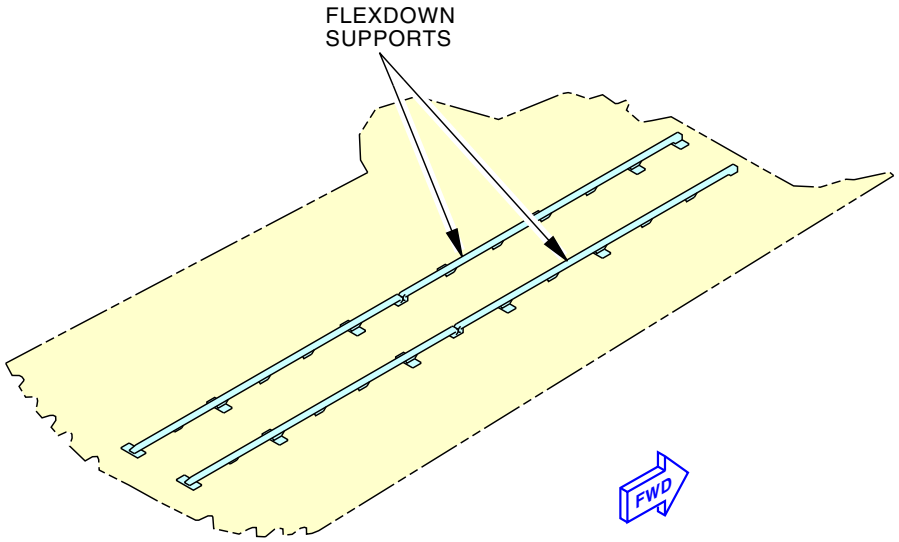

FLEXDOWN SUPPORT SYSTEM

B

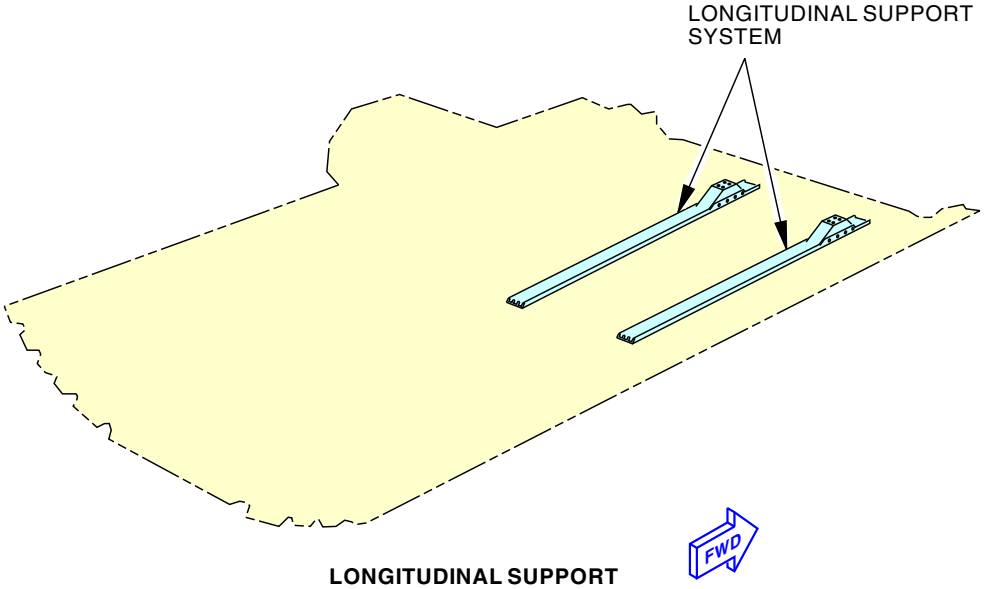

LONGITUDINAL SUPPORT SYSTEM

C

2785598 S0000632343_V1

Aft Cargo Compartment Sliding Carpet Loading System Installation
Figure 401/50-21-00-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-00-400-801

3. Aft Sliding Carpet Loading System Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft sliding carpet loading system.

B. References

Reference	Title
50-21-00-700-801	Aft Cargo Compartment Sliding Carpet Loading System Operational Test (P/B 601)
50-21-01-400-801	Aft Cargo Compartment Movable Bulkhead Installation (P/B 401)
50-21-02-400-801	Aft Cargo Compartment Side Guide Installation (P/B 401)
50-21-03-400-801	Aft Cargo Compartment Ramp Installation (P/B 401)
50-21-04-400-801	Aft Cargo Compartment Guide Panel Installation (P/B 201)
50-21-04-400-802	Aft Cargo Compartment Support Panels Installation (P/B 401)
50-21-05-400-801	Aft Cargo Compartment Drive Assembly Installation (P/B 401)
50-21-05-400-802	Aft Cargo Compartment Carpet Attachment (P/B 401)
50-21-06-400-801	Aft Cargo Compartment Safety Flap Assembly Installation (P/B 401)
50-21-07-400-801	Aft Cargo Compartment Control Box Installation (P/B 401)
50-21-08-400-801	Aft Cargo Compartment Flexdown Support System Installation (P/B 401)
50-21-08-400-802	Aft Cargo Compartment Longitudinal Support System Installation (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Aft Slight Carpet Loading System Installation

SUBTASK 50-21-00-420-001

(1) If necessary, install the aft cargo compartment control box.

(a) Do this task: Aft Cargo Compartment Control Box Installation, TASK 50-21-07-400-801.

SUBTASK 50-21-00-420-002

(2) Install the aft cargo compartment longitudinal support system.

(a) Do this task: Aft Cargo Compartment Longitudinal Support System Installation, TASK 50-21-08-400-802.

SUBTASK 50-21-00-420-003

(3) Install the aft cargo compartment flexdown support system.

(a) Do this task: Aft Cargo Compartment Flexdown Support System Installation, TASK 50-21-08-400-801.

SUBTASK 50-21-00-420-004

(4) Install the aft cargo compartment drive assembly.

(a) Do this task: Aft Cargo Compartment Drive Assembly Installation, TASK 50-21-05-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-00-420-005

(5) Install the aft cargo compartment support panel.

(a) Do this task: Aft Cargo Compartment Support Panels Installation, TASK 50-21-04-400-802.

SUBTASK 50-21-00-420-006

(6) Install the aft cargo compartment guide panel.

(a) Do this task: Aft Cargo Compartment Guide Panel Installation, TASK 50-21-04-400-801.

SUBTASK 50-21-00-420-016

(7) Connect the carpet to the belts.

(a) Do this task: Aft Cargo Compartment Carpet Attachment, TASK 50-21-05-400-802.

SUBTASK 50-21-00-420-007

(8) Install the aft cargo compartment ramp assembly.

(a) Do this task: Aft Cargo Compartment Ramp Installation, TASK 50-21-03-400-801.

SUBTASK 50-21-00-420-008

(9) Install the aft cargo compartment side guide.

(a) Do this task: Aft Cargo Compartment Side Guide Installation, TASK 50-21-02-400-801.

SUBTASK 50-21-00-420-009

(10) Install the aft cargo compartment movable bulkhead.

(a) Do this task: Aft Cargo Compartment Movable Bulkhead Installation, TASK 50-21-01-400-801.

SUBTASK 50-21-00-420-010

(11) Install the aft cargo compartment safety flap assembly.

(a) Do this task: Aft Cargo Compartment Safety Flap Assembly Installation, TASK 50-21-06-400-801.

E. Aft Sliding Carpet Loading System Operational Test

SUBTASK 50-21-00-710-001

(1) Do this task: Aft Cargo Compartment Sliding Carpet Loading System Operational Test, TASK 50-21-00-700-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM - INSPECTION/TEST

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment sliding carpet loading system inspection

(2) Aft cargo compartment sliding carpet loading system operational test.

TASK 50-21-00-200-801

2. Aft Cargo Compartment Sliding Carpet Loading System Inspection

A. References

Reference	Title
50-21-00-300-801	Aft Cargo Compartment Carpet - Repairs (P/B 801)
50-21-01-000-801	Aft Cargo Compartment Movable Bulkhead Removal (P/B 401)
50-21-01-400-801	Aft Cargo Compartment Movable Bulkhead Installation (P/B 401)

B. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Sliding Carpet Loading System Inspection

SUBTASK 50-21-00-210-023

(1) Examine the sliding carpet loading system.

(a) If any of the condition below is found do the applicable repair procedure (TASK 50-21-00-300-801).

(b) If damage is more than the limits described, send the component to an approved repair station.

SUBTASK 50-21-00-210-001

(2) Examine the moveable bulkhead for damage.

NOTE: The moveable bulkhead is a structural part of the loading system. All repairs made must be of equal strength as the original condition of the moveable bulkhead.

(a) Examine the structure of the bulkhead.

1) Minor cracks in the structure and the damage of the gelcoat are acceptable if the total damage area is less than 25%.

(b) Make sure the wing brackets are not deformed.

(c) Make sure the cover does not have excessive damage.

(d) Make sure that the locking pins are installed and not damaged.

(e) Make sure that the hinge pins between the wings and bulkhead plate are installed correctly and not damaged.

SUBTASK 50-21-00-210-002

(3) Examine the release device.

(a) Make sure the sensor assembly and pin are installed and not damaged.

(b) Make sure the flat screw hand and the rod assembly are parallel.

(c) Make sure that the rod screw is counter-locked with the nut.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-00-210-003

(4) Examine the side guide.

(a) Make sure the surface of the side guide does not have major cracks and delamination damage.

NOTE: Small dents and cracks are permitted.

SUBTASK 50-21-00-210-005

(5) Make sure the carts have no signs of jamming.

SUBTASK 50-21-00-210-006

(6) Make sure that there are no permanent deformations.

SUBTASK 50-21-00-210-007

(7) Examine the lower guide for damage.

(a) Make sure that the screw are not bent and damaged.

(b) Make sure that the clearance between the lower guide rollers and the flange is 0.06 in. (1.52 mm) to 0.14 in. (3.56 mm).

SUBTASK 50-21-00-210-008

(8) Examine the track for damage.

(a) Make sure that the side guide is connected to the track correctly.

(b) Fasten the track to the side guide with rivets, if loose.

(c) Replace the track when excessive damage shows.

SUBTASK 50-21-00-210-009

(9) Examine the carpet belts and the belt teeth for damage.

(a) Accepted damage limits are as follows:

1) Slits in the belts to 10 ft (3 m) along the flat back of the belt are permitted when the threads that are visible are cut and removed from the slit.

2) Cuts up to 0.1 in. (2.5 mm) deep to the side of the belt are permitted.

3) If the carbon threads have emerged from the side of the belt, cut and remove the threads along the belt.

(b) Unacceptable damage limits are as follows:

1) No bundles of the carbon cord can show cuts.

2) No tooth can be torn or loose from the belt.

(c) Examine the chain connection.

1) Make sure that there are no corrosion on the chain connection.

2) Make sure that there are no missing circlips or locking pins.

(d) Make sure that the belt cables are connected to the clamp assemblies.

SUBTASK 50-21-00-210-010

(10) Examine the PU-profile for damage and misalignment.

(a) Make sure that the bonding is correct.

(b) Make sure that the gaps between the PU-profile and carpet that are not deeper than to the first seam.

1) If the carpet has seamless PU-profiles, the gap must not exceed 0.2 in. (6 mm).

(c) Minor cracks, scratches and dents are permitted.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-00-210-011

(11) Examine the carpet beam and beam pocket.

(a) Make sure that the inserts are installed and not damaged.

(b) Make sure that the seams that hold the beam pocket are not torn.

SUBTASK 50-21-00-210-012

(12) Examine the carpet cover for damage.

(a) Make sure that the carpet seams and material not damaged.

SUBTASK 50-21-00-210-022

(13) Examine the carpet edge at the bulkhead for curled edges.

(a) Make sure that the carpet edge at the bulkhead is not curled.

(b) If necessary, remove and install the moveable bulkhead to the correct position on the carpet:

1) Do this task: Aft Cargo Compartment Movable Bulkhead Removal, TASK 50-21-01-000-801.

2) Do this task: Aft Cargo Compartment Movable Bulkhead Installation, TASK 50-21-01-400-801.

(c) If the carpet edge is curled less than a 90 degree angle and does not curl more than along the edge, repair the carpet.

(d) If the carpet edge is curled more than a 90 degree angle and curls more than 40 in. (1016 mm) along the edge, send the carpet to an approved repair station.

SUBTASK 50-21-00-210-013

(14) Examine the guide panel for damage.

(a) Make sure that the guide rollers do not exceed 0.04 in. (1.02 mm) movement in the up direction.

(b) Make sure that the guide panel does not have wear, cracks, or damage.

(c) Make sure that the covers does not have cracks and damage.

SUBTASK 50-21-00-210-014

(15) Examine the drive unit for damage.

(a) Make sure that the structure of the drive unit does not have structural damage.

(b) Make sure that the flanges on the belt wheel not damage or not loose.

(c) Make sure that the bearings does not have any signs of malfunction.

(d) Make sure that the screw shaft/running nut does not have signs of malfunctioning.

(e) Make sure that the belt divider and idler wheel does not have signs of damage or malfunction.

(f) Examine the current control harness for damage.

1) Make sure that the current control box is attached correctly to the drive unit structure.

2) Make sure that the current control box is attached to the harness correctly.

(g) Examine the universal joint for damage.

1) Make sure that the boot does not have cuts or damage.

2) Make sure that the pin hole does not show signs of wear or play.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-00-210-015

(16) Examine the ramp for damage.

(a) Make sure that the brush list on the ramp not bent or not damaged. straighten the brush bristles to point horizontally or replace the brush.

(b) Make sure that straighten the brush bristles to point horizontally.

SUBTASK 50-21-00-210-016

(17) Examine the flexdown support structure for damage.

NOTE: The top surface of the flexdown support must be smooth to let the carpet travel freely.

(a) Make sure that the flexdown honeycomb structure not damaged.

(b) Make sure that the core and top surface not damaged.

SUBTASK 50-21-00-210-017

(18) Make sure that the longitudinal bar structure does not have corrosion.

SUBTASK 50-21-00-210-018

(19) Examine the structure of the panels for damage.

NOTE: The panel is fully functional if the panel surface shows undulating. If the surface skin shows cuts or cracks, it is not correctly functional and will need repairs. If the undulating surface shows a sponge-like surface, it is because the panel was partly crushed. This does not affect the strength of the panel.

(a) Make sure that the surface of the panel not damaged.

(b) Make sure that the guide, support and drive panels not damaged. Repairs must be done if the following occurs:

1) If the the delamination, on one face, more than 50% of the panel area.

2) If the panels shows signs of becoming soft or moist and is more than 75% of the panel area.

3) If the delamination, in one continues area, more than 3.0 ft^2 (0.28 m^2).

4) If the cuts that show through the skin panel that are longer than 1.0 in. (25.4 mm).

5) Cracks in the skin show next to the aluminum or glass fiber edge.

SUBTASK 50-21-00-210-019

(20) Examine the safety flap for damage.

(a) Make sure that the safety flap does not have cracks and damage.

(b) Make sure that the switch lever is not structurally damaged.

(c) Make sure the hinge does not jam and moves freely.

——— END OF TASK ———

TASK 50-21-00-700-801

3. Aft Cargo Compartment Sliding Carpet Loading System Operational Test

A. References

Reference	Title
50-21-00-440-801	Aft Cargo Loading System - Activation (P/B 201)

B. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
142	Aft Cargo Compartment - Right

C. Sliding Carpet Loading System Operational Test

SUBTASK 50-21-00-210-021

(1) Make sure that the PWR AVAILABLE indicator and display on the control box are on.

NOTE: If the green light on PWR AVAILABLE indicator is on but the display is black, the system may be still operated until the next maintenance (30 days).

(a) If the green light on PWR AVAILABLE indicator is off, do this task: Aft Cargo Loading System - Activation, TASK 50-21-00-440-801.

SUBTASK 50-21-00-710-002

CAUTION MAKE SURE THAT YOU CAN PUSH THE EMERGENCY STOP BUTTON ON THE CONTROL BOX IMMEDIATELY IF THE CARPET DOES NOT STOP AUTOMATICALLY. IF THE LIMIT SWITCHES FAIL TO OPERATE CORRECTLY, DAMAGE TO THE EQUIPMENT CAN OCCUR.

(2) Do an operational test of the aft cargo loading system.

(a) Release the EMERGENCY STOP button on the control box.

(b) Put the joystick to the LOAD position.

1) Make sure that the carpet moves to its end position close to the drive unit.

2) Make sure that the Loading Done screen shows on the control box display.

3) Make sure that the carpet stop automatically at 3.7 in. (94 mm) - 4.5 in. (114 mm) from the drive unit frame.

(c) Put the joystick to the UNLOAD position.

1) Make sure that the carpet moves toward the aft cargo compartment door.

2) Make sure that the Unloading Done screen comes on the control box display.

3) Make sure that the carpet stop automatically at 26.8 in. (680.7 mm) - 27.6 in. (701 mm) from the turn around edge.

(d) Put the joystick to the LOAD position.

(e) Push the EMERGENCY STOP button on the control box while the aft cargo loading system is move.

1) Make sure that the aft cargo loading system is stops.

2) Make sure that the System Blocked Emergency Stop screen shows on the control box display.

(f) Engage the safety flap while the aft cargo loading system is moves.

1) Make sure that the aft cargo loading system is stops.

2) Make sure that the System Blocked Safety Flap screen shows on the control box display.

SUBTASK 50-21-00-710-007

(3) Make sure that the brush on the ramp reaches the carpet.

SUBTASK 50-21-00-420-015

(4) For the moveable bulkhead do these steps:

(a) Make sure that the movable bulkhead is installed on the carpet correctly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Make sure that the distance between the walls and ceiling from its nearest solid part is 1 in. (25 mm).

(c) Make sure that the movable bulkhead moves freely on the sliding carpet loading assembly.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM - REPAIRS

1. General

A. This procedure has this task:

(1) Aft Cargo Compartment Carpet Repairs

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

TASK 50-21-00-300-801

2. Aft Cargo Compartment Carpet - Repairs

(Figure 801, Figure 802, Figure 803)

A. General

(1) This task gives instructions to repair the carpet, the carpet edges, and the carpet pads.

(2) If the carpet damage is more then the limits described in the procedure, send the carpet to an approved repair station for evaluation.

B. References

Reference	Title
50-21-01-000-801	Aft Cargo Compartment Movable Bulkhead Removal (P/B 401)
50-21-01-400-801	Aft Cargo Compartment Movable Bulkhead Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
A50454	Tape - Masking, General Purpose, Scotch 234	
E50001	Solvent - Acetone	ASTM D 329 (Supersedes O-A-51)

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. PU Profile Repairs

SUBTASK 50-21-00-300-001

(1) Acceptable damage to PU-profile without seams.

(a) Spaces between the PU-profile and the carpet that are not more than 0.2 in. (6 mm) are permitted.

(b) Cracks that show across the PU-profile are permitted.

(c) Scratches and dents in the PU-profile are permitted.

F. Tears and Hole Damage

SUBTASK 50-21-00-300-002

(1) Acceptable damage.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Damage to the black polyurethane layer surface of the carpet is permitted if the cut has not penetrated through the body of the carpet (the aramid reinforced polyester).

(b) Damage to the white markings on the carpet does not need to be repaired.

SUBTASK 50-21-00-300-003

(2) Unacceptable tear damage.

(a) Tear damage along the carpet length longer than 59 in. (1499 mm).

(b) Tear damage across the carpet width longer than 4 in. (102 mm).

SUBTASK 50-21-00-300-012

(3) Unacceptable hole damage.

(a) Hole damage larger than 1.5 in^2 (967.7 mm^2).

(b) If the damage to a hole is not more then the limitation, use a repair kit to repair the hole.

G. Material and Equipment

SUBTASK 50-21-00-300-004

(1) Use the carpet repair material, kit, and equipment that follow to make repairs to the carpet:

(a) Iron, commercially available.

(b) Repair kit - P/N R9003 (59 in. (1499 mm) length of repair).

(c) PU-foil - Black, P/N 160470.

(d) Silicone paper, P/N 160471.

(e) Emery cloth, Grade 80.

H. Prepare for the Carpet Repairs

SUBTASK 50-21-00-300-005

(1) Repairs should be performed at temperatures above 59°F (15°C).

SUBTASK 50-21-00-300-013

(2) Repairs are permitted over existing repairs.

SUBTASK 50-21-00-300-014

(3) Trim all loose material from the old patch before applying a new patch.

SUBTASK 50-21-00-300-015

(4) Preheat an iron to 392°F (200°C) (cotton material setting).

I. Carpet Repair Instructions

SUBTASK 50-21-00-350-001

(1) Cut a piece of reinforced PU-foil to a length that will cover the damaged area (Figure 801).

(a) Cut the length of the PU-foil to cover the damaged area plus 0.8 in. (20 mm) to 1.2 in. (30 mm).

(b) Make sure that the corners of the patch are round.

(c) If two patches are necessary to cover the damaged area, overlap the two patches with 0.4 in. (10 mm) to 0.6 in. (15 mm).

SUBTASK 50-21-00-350-002

(2) Prepare the repair PU-foil patch for installation.

(a) Put the foil patch on the damaged area.

(b) Put Scotch General Purpose Masking Tape 234, A50454 that is approximately 0.4 in. (10 mm) around the foil patch.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Remove the foil patch with the masking tape attached.

(d) Make the inner surface of the foil patch rough with an emery cloth.

(e) Clean the damaged area with solvent, E50001 (or equivalent) where the foil patch will be installed.

(f) Remove the tape from the foil patch.

(g) Put the foil patch with the matt side facing up on the damaged area.

SUBTASK 50-21-00-350-003

(3) Put the silicon paper on the foil patch.

NOTE: There is no difference which side of the silicon paper to face up or down.

SUBTASK 50-21-00-350-004

(4) Use the preheated iron (392°F (200°C)) to apply the foil patch to the damaged area.

(a) Place the iron on the silicon paper.

1) Press and move the iron slowly across the silicon paper.

(b) The pattern of the foil patch will begin to show through the silicon paper.

1) Small white areas show where the foil has not melted.

(c) Continue ironing until the edges of the foil patch melt together with the carpet material.

(d) The ironing process will take 1 or 2 minutes to complete.

(e) When entire area of the foil is completely black through the silicon paper stop ironing.

(f) Let the patch area cool approximately 5 to 10 minutes with the silicon paper still on the foil patch.

(g) When the foil patch surface is cool, remove the silicon paper.

SUBTASK 50-21-00-300-016

(5) Make sure that the foil patch is applied correctly to the damaged area.

(a) The foil patch has completely melted into the carpet.

(b) If the foil patch is not completely melted into the carpet or shows air bubbles, do these steps:

1) Put the silicon paper on the foil patch.

2) Place the iron on the silicon paper and continue to move the iron slowly across the patch.

3) Continue ironing until the foil patch is completely melted into the carpet and no air bubbles show.

SUBTASK 50-21-00-300-006

(6) Wait for a minimum of 30 minutes before operating the sliding carpet loading system.

J. Carpet Edge Damage and Repair

SUBTASK 50-21-00-300-007

(1) Damage to the carpet edge is repaired by removing the damaged area.

(a) Carpet edge damage occurs at the carpet belt tension side where the carpet edge enters the guide profile.

(b) Carpet edge damage that exceeds the limits must be sent to an approved repair station for evaluation.

SUBTASK 50-21-00-300-017

(2) Acceptable carpet edge damage.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Damage to the surface of the carpet (the black polyurethane layer) is permitted (i.e. no repair is required) as long as the cut has not penetrated through the carcass of the carpet (the aramid reinforced polyester).

SUBTASK 50-21-00-300-018

(3) Unacceptable carpet edge damage.

(a) If repair area is more than 2 in. (51 mm) from the carpet PU-profile and 8 in. (203 mm) from the carpet end.

SUBTASK 50-21-00-350-005

(4) Carpet edge repair (Figure 802).

(a) Cut the damaged carpet area from the carpet with a minimum radius of 0.2 in. (5 mm).

(b) Make sure that the new area does not have any fridges.

(c) If the PU-profile was cut, make sure that the edges are chamfered.

SUBTASK 50-21-00-300-008

(5) Curled carpet edge repair (Figure 803).

(a) Make sure that the carpet edge at the bulkhead is not curled.

(b) If necessary, remove and install the moveable bulkhead to the correct position on the carpet:

1) Do this task: Aft Cargo Compartment Movable Bulkhead Removal, TASK 50-21-01-000-801.

2) Do this task: Aft Cargo Compartment Movable Bulkhead Installation, TASK 50-21-01-400-801.

(c) If the carpet edge is curled less than a 90 degree angle and does not curl more than 40 in. (1016 mm) along the edge, repair the carpet.

(d) If the carpet edge is curled more than a 90 degree angle and curls more than 40 in. (1016 mm) along the edge, send the carpet to an approved repair station.

K. Carpet Pad Damage

SUBTASK 50-21-00-300-009

(1) Acceptable carpet pad damage.

(a) All damage to the surface of the carpet pad is permitted.

(b) The carpet pad can be 2/3 detached from the carpet before repair is necessary.

L. Carpet Pad Repair Instructions

SUBTASK 50-21-00-300-010

(1) Do these steps to repair the carpet pads:

(a) Make the area where the carpet pad was attached to the carpet with an emery cloth rough.

(b) Clean the area with the solvent, E50001 (or equivalent).

(c) Apply the adhesive on the carpet and the carpet pad.

(d) When the adhesive is almost tack-free, apply the carpet pad onto the carpet.

(e) Put the carpet pad under pressure of 9 lb (4 kg) for approximately 1½ hours.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


M. Sensor disc

SUBTASK 50-21-00-300-011

(1) If the carpet sensor discs are damaged, send the carpet discs to an approved repair station.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

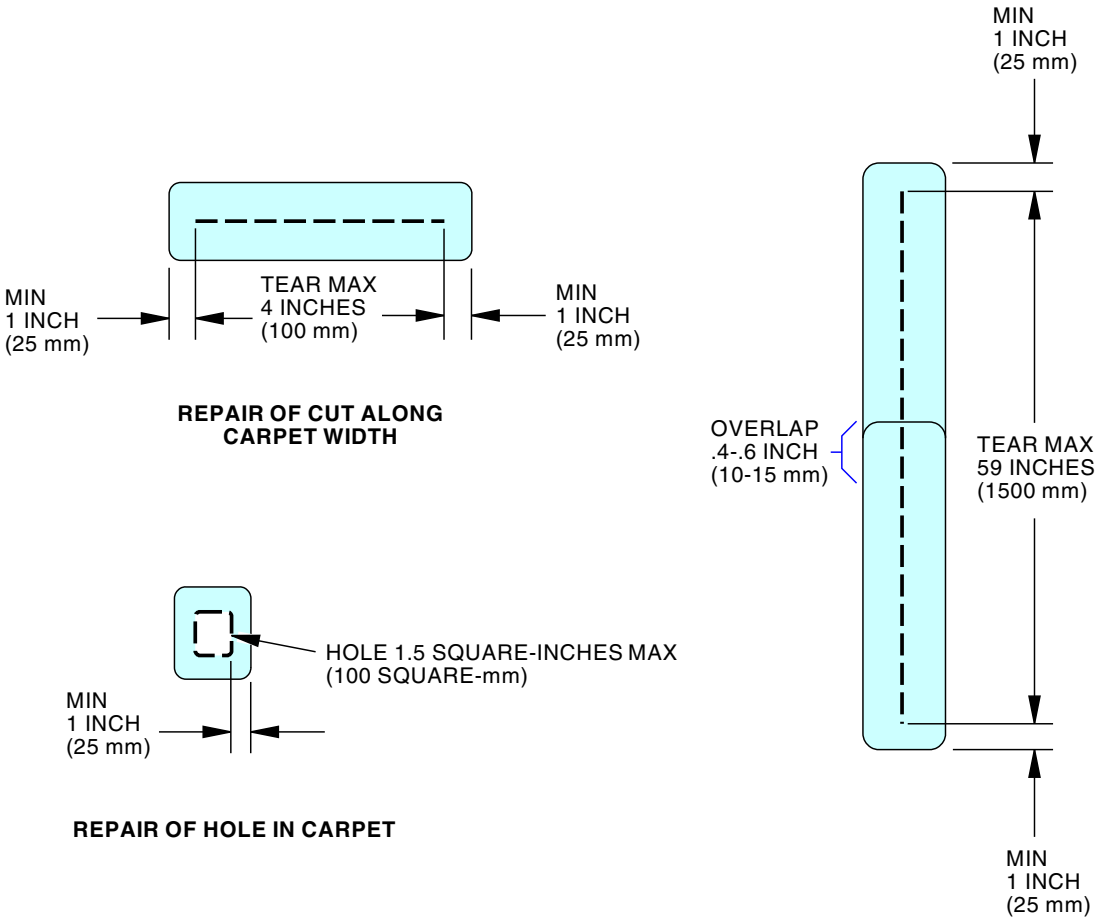

2551638 S0000607845_V1


Aft Cargo Compartment Carpet - Repair
Figure 801/50-21-00-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

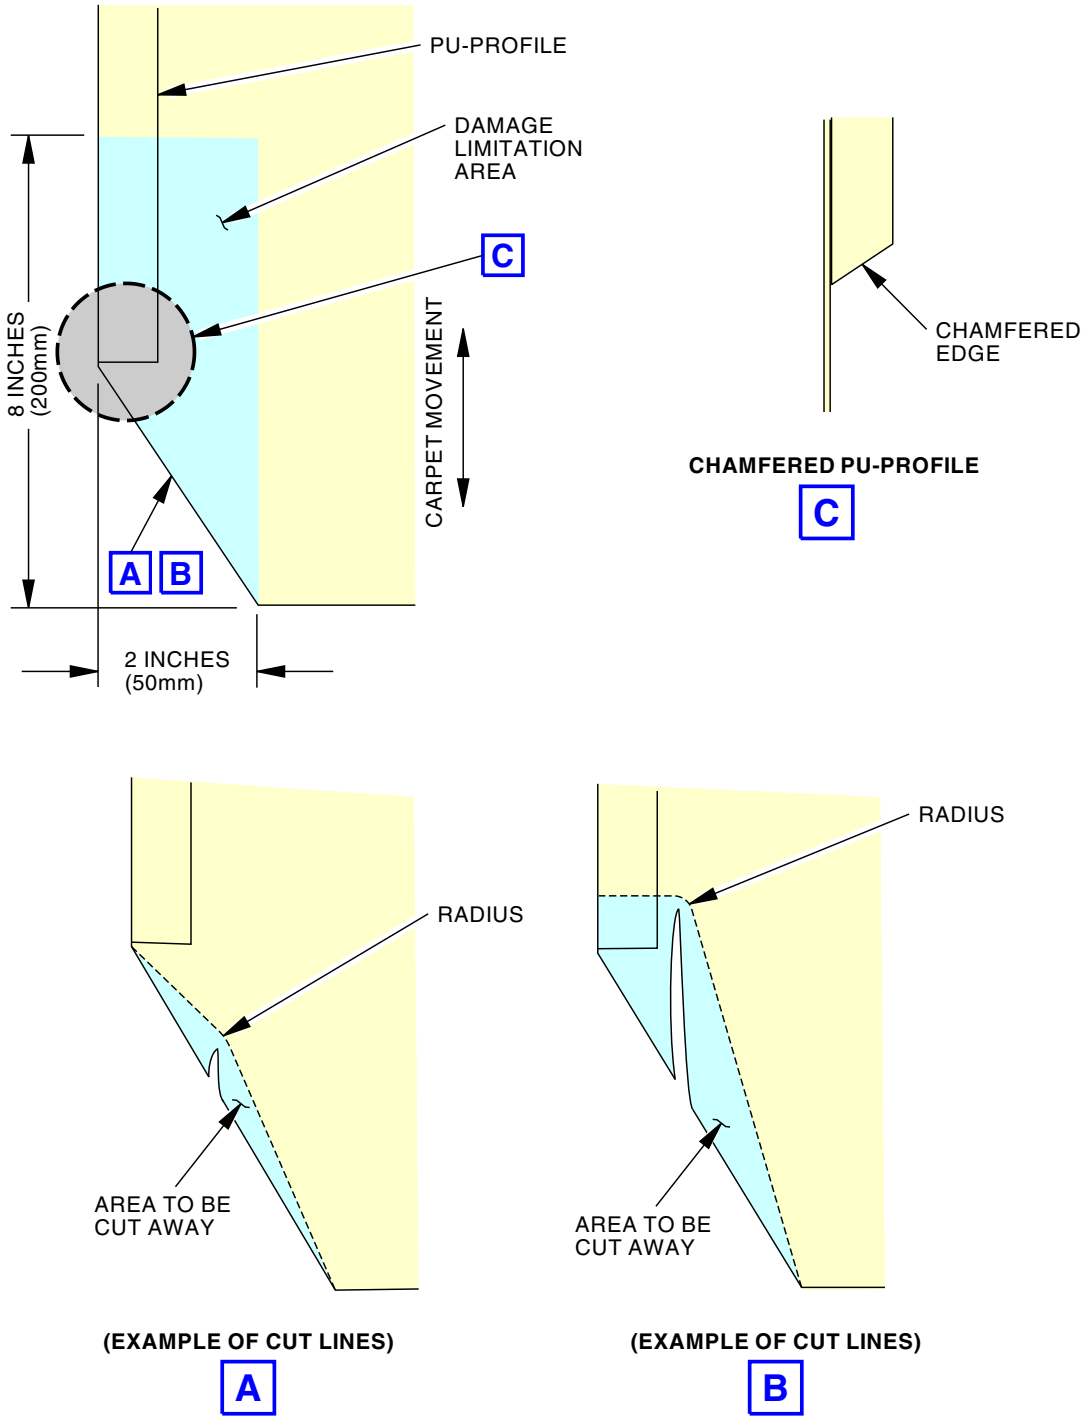

Aft Cargo Compartment Carpet Edge Repair
Figure 802/50-21-00-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

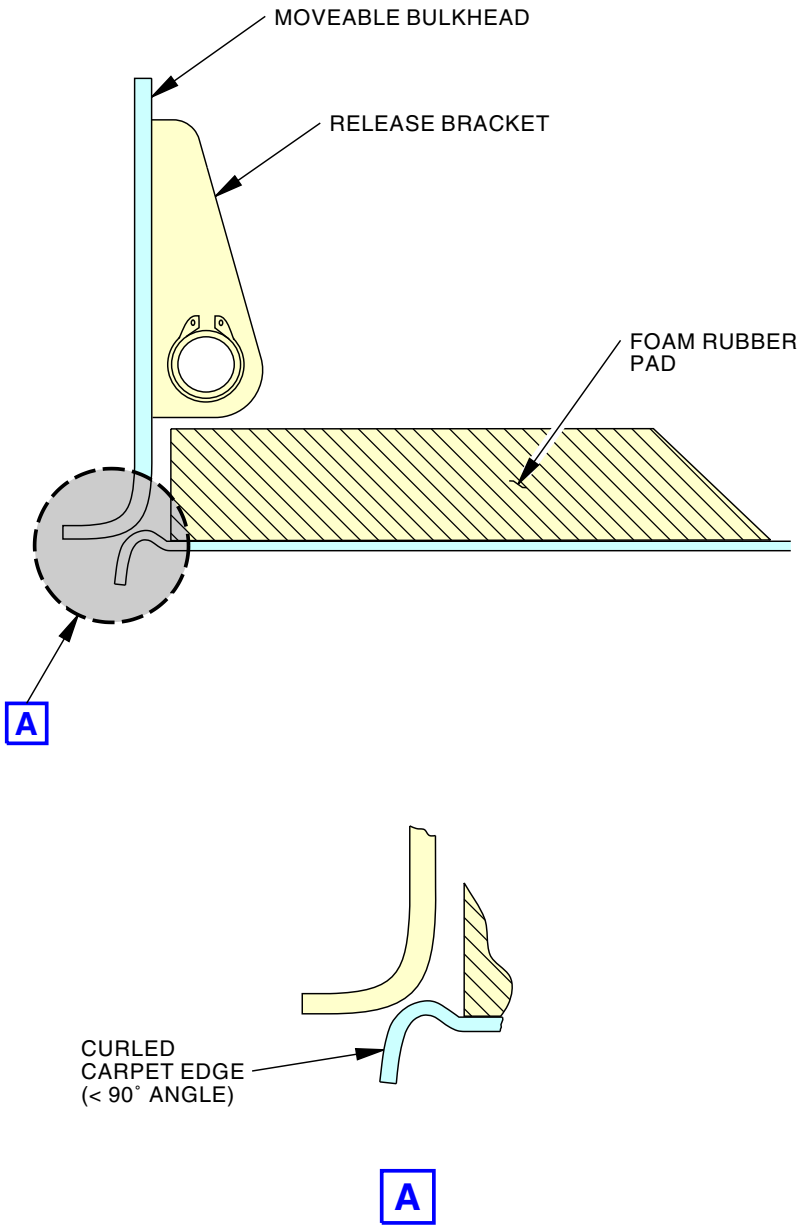

2551605 S0000607896_V1

Aft Cargo Compartment Carpet, Curled Edge Repair
Figure 803/50-21-00-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM MOVABLE BULKHEAD - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment movable bulkhead removal

(2) Aft cargo compartment movable bulkhead installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

C. The manufacturer's component maintenance manual recommends that you remove the movable bulkhead from the airplane when you do work on the movable bulkhead.

TASK 50-21-01-000-801

2. Aft Cargo Compartment Movable Bulkhead Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment movable bulkhead.

(2) The aft cargo compartment movable bulkhead is referred to as movable bulkhead in this task.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Prepare for the Removal

SUBTASK 50-21-01-860-003

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-01-010-001

(2) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-01-860-006

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-01-020-001

(4) Push the EMERGENCY STOP button on the control box.

E. Aft Cargo Compartment Movable Bulkhead Removal

SUBTASK 50-21-01-020-005

(1) Disconnect the connector [10] from the movable bulkhead [1].

SUBTASK 50-21-01-020-002

(2) Disconnect the rod assembly [4] from the carpet belt lock (View D, Figure 401).

(a) Remove the locking pin [3] from the rod assembly [4].

(b) Turn the rod assembly [4] in the hole of the spring shaft [6] a quarter-turn to unlock position and remove.

(c) Put the rod assembly [4] in the bracket hole [8].

(d) Install the locking pin [3] in the bracket hole [8] to attach the rod assembly [4] to the bracket [5].

SUBTASK 50-21-01-020-003

(3) Remove the locking pin [2] to disconnect the wing bracket [7] from the cart [9] (View C, Figure 401).

SUBTASK 50-21-01-020-004

(4) Remove the movable bulkhead [1]:


(a) Fold the bulkhead wings in.

(b) Lift the movable bulkhead [1] with the front pointed down.

(c) Remove the movable bulkhead [1] away from the cargo compartment.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

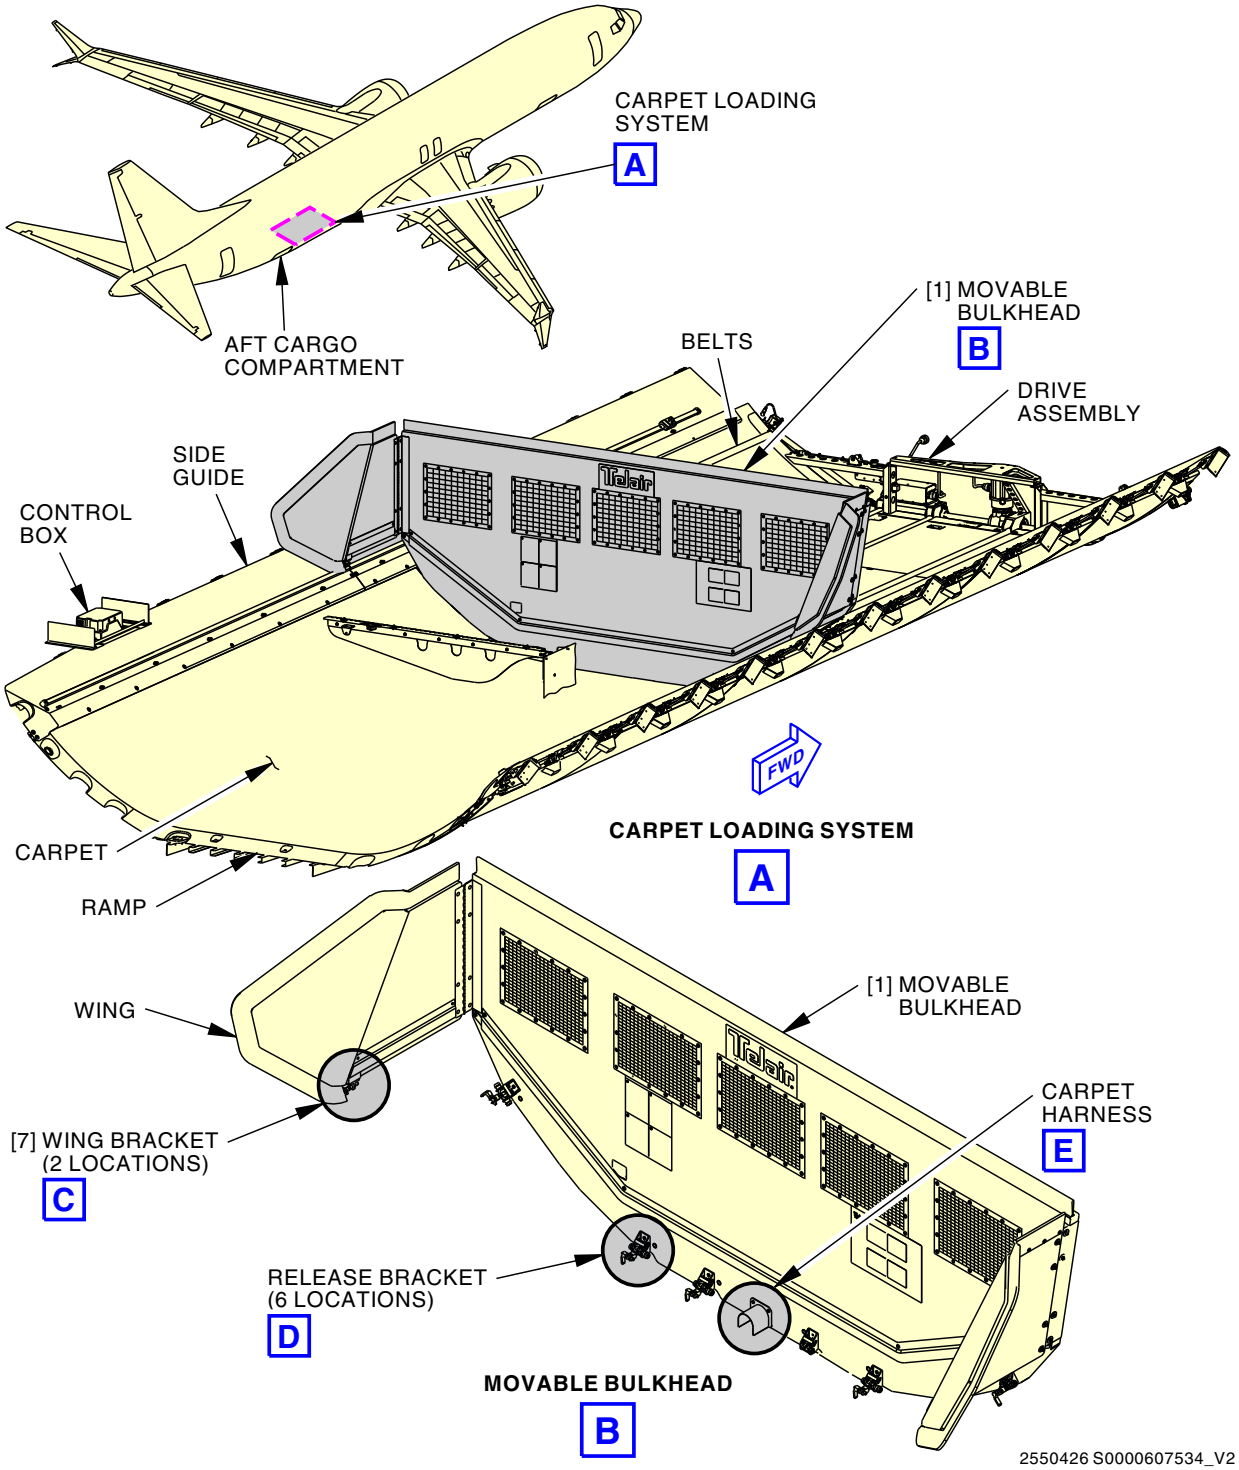


Aft Cargo Compartment Movable Bulkhead Installation
Figure 401/50-21-01-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

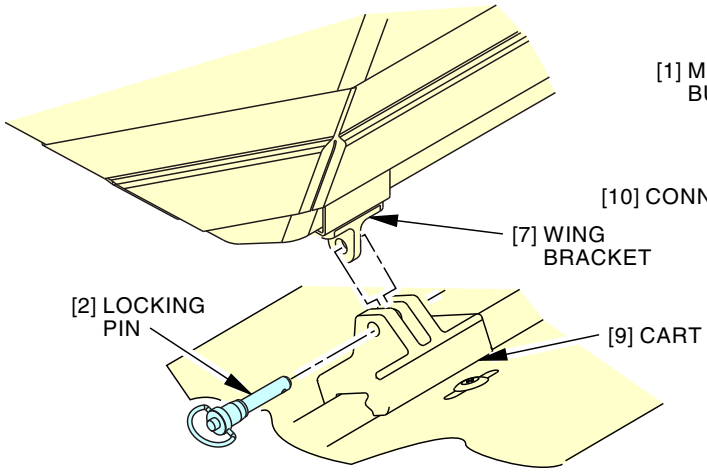


WING BRACKET (EXAMPLE)

C

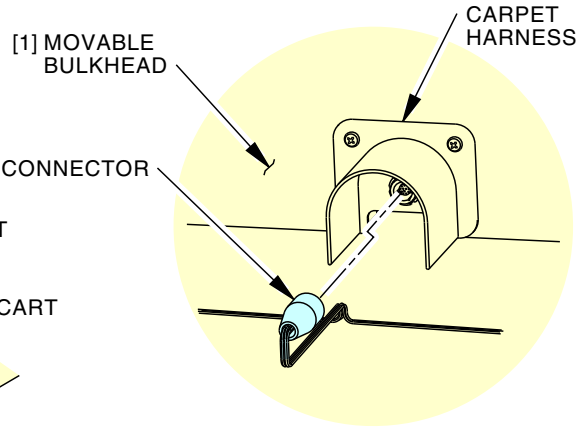


CARPET HARNESS

E

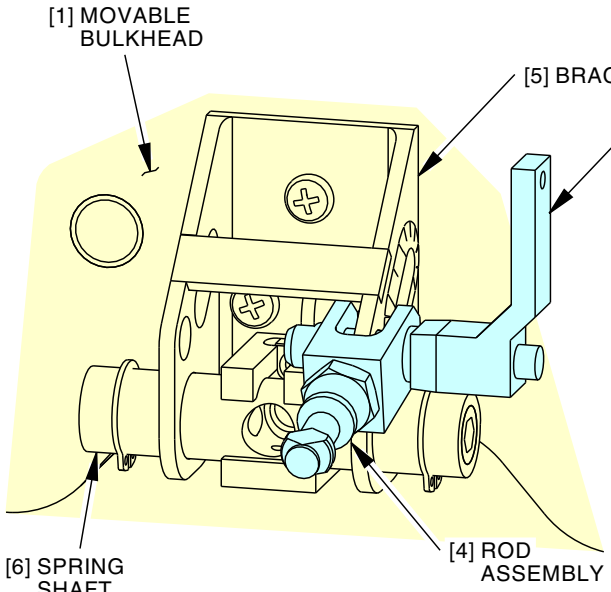

RELEASE BRACKET STORE POSITION (EXAMPLE)

D

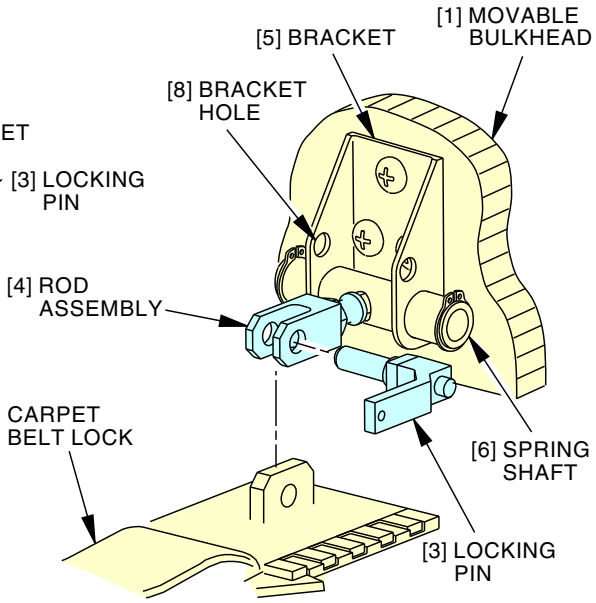


RELEASE BRACKET (EXAMPLE)

D


2550876 S0000607535_V2

Aft Cargo Compartment Movable Bulkhead Installation
Figure 401/50-21-01-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

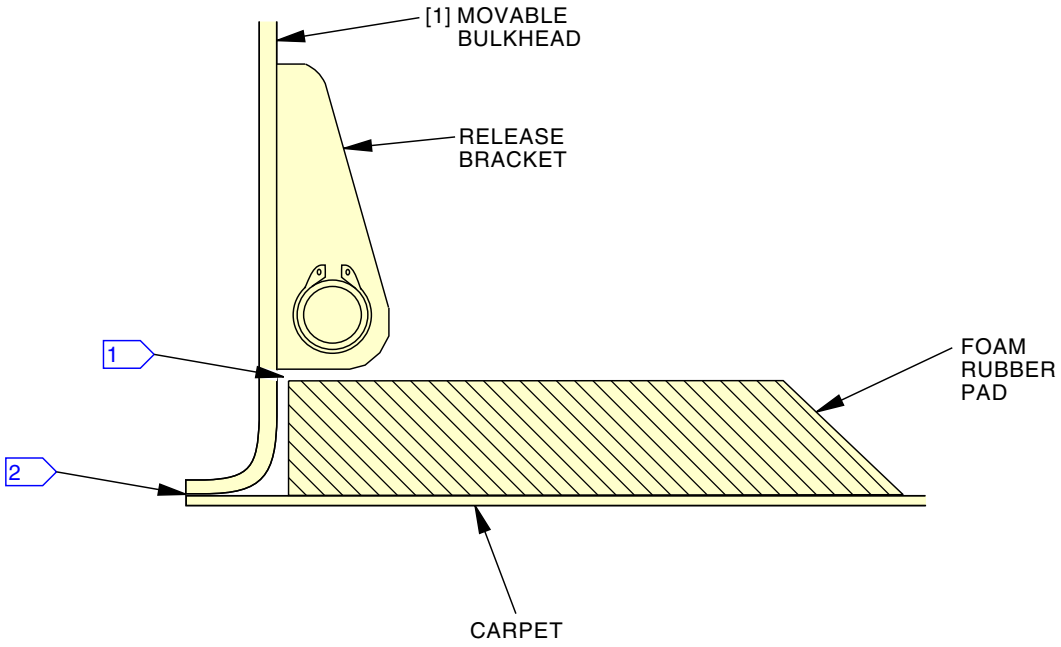

MOVABLE BULKHEAD POSITION

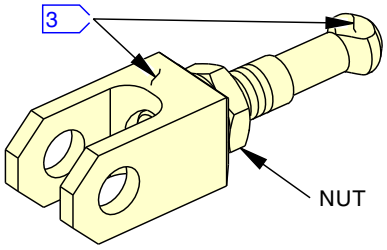

ROD ASSEMBLY ADJUSTMENT

NOTE:

1. MAXIMUM GAP 0.12 INCH (3.0 mm) BETWEEN THE MOVABLE BULKHEAD AND FOAM RUBBER PADS.
2. MAKE SURE THAT THE CARPET EDGE IS NOT CURLED
3. MAKE SURE THAT THESE TWO SURFACES ARE PARALLEL

2550880 S0000607537_V2

Aft Cargo Compartment Movable Bulkhead Position
Figure 402/50-21-01-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-01-400-801

3. Aft Cargo Compartment Movable Bulkhead Installation

(Figure 401, Figure 402)

A. General

(1) This task gives the instructions to install the aft cargo compartment movable bulkhead.

(2) The aft cargo compartment movable bulkhead is referred to as movable bulkhead in this task.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Prepare for the Installation

SUBTASK 50-21-01-860-005

(1) Make sure that this circuit breaker is open and has safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-01-860-007

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Make sure that this circuit breaker is open and has safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-01-420-010

(3) Make sure that the EMERGENCY STOP button on the drive assembly is released.

SUBTASK 50-21-01-420-001

(4) Make sure that the EMERGENCY STOP button on the control box is pushed.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-01-420-002

(5) Make sure that the carpet is folded toward the aircraft door, with the carpet end visible.

SUBTASK 50-21-01-420-003

(6) Put the movable bulkhead [1] into the cargo compartment with the wings folded in and with the front face up.

E. Aft Cargo Compartment Movable Bulkhead Installation

SUBTASK 50-21-01-820-001

(1) Position the movable bulkhead [1], as follows:

NOTE: The movable bulkhead [1] is installed tightly against the foam rubber pads on the carpet.

(a) Align the movable bulkhead [1] near the carpet end and then tilt it vertically.

NOTE: Do not put the movable bulkhead [1] directly on the panels.

(b) Lift the movable bulkhead [1] and then put it on top of the carpet end.

1) Make sure that the distance between the movable bulkhead [1] and foam rubber pads is 0.12 in. (3.0 mm) or less (Figure 402).

(c) Make sure that the carpet edge is not curled.

NOTE: A curled carpiltet edge can cause damage to the system. Examples: broken belts and damage to the drive unit.

(d) Make sure that the brushes around the movable bulkhead [1] have a tight fit against the ceiling and the side walls.

SUBTASK 50-21-01-420-004

(2) Do these steps to install the rod assembly [4]:

(a) Remove the locking pin [3] which attached the rod assembly [4] to the bracket [5].

(b) Install the rod assembly [4] into the hole of the spring shaft [6] and turn it quarter-turn to the lock position.

(c) Put the rod assembly [4] into the hole in the carpet belt lock.

(d) Install the locking pin [3] to attach the rod assembly [4] to the carpet belt lock.

1) If the locking pin [3] does not fit to carpet belt lock, make sure that two surface of rod assembly [4] are parallel (Figure 402).

SUBTASK 50-21-01-820-002

(3) Do these steps to install the wings (View C, Figure 401).

(a) Align the wing bracket [7] with the cart [9] on the side guide.

(b) Install the locking pin [2] to attach the wing bracket [7] to the cart [9].

SUBTASK 50-21-01-420-009

(4) Connect the connector [10] to the movable bulkhead [1].

F. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-01-860-002

(1) Release the EMERGENCY STOP button on the control box.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-01-860-008

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-01-410-001

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-01-860-004

(4) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM SIDE GUIDE - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment side guide removal

(2) Aft cargo compartment side guide installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

TASK 50-21-02-000-801

2. Aft Cargo Compartment Side Guide Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment side guide.

(2) The sliding carpet loading system has a forward and a back side guide that is installed on the right and left sides of the aft sliding carpet loading assembly. Each of the four side guides have a different part number. The removal and installation procedures are the same for the left and right forward side guides and are the same for the left and right back side guides.

B. References

Reference	Title
50-21-00-040-801	Aft Cargo Loading System - Deactivation (P/B 201)
50-21-01-000-801	Aft Cargo Compartment Movable Bulkhead Removal (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-21-02-020-001

(1) Do this task: Aft Cargo Compartment Movable Bulkhead Removal, TASK 50-21-01-000-801.

SUBTASK 50-21-02-820-001

(2) Use the control box to put the carpet in its center position.

SUBTASK 50-21-02-860-001

(3) Do this task: Aft Cargo Loading System - Deactivation, TASK 50-21-00-040-801.

E. Aft Cargo Compartment Side Guide Removal

NOTE: This procedure removes the forward and back side guides from one side of the aft sliding carpet loading assembly. Do the steps again to remove the opposite side of the assembly.

SUBTASK 50-21-02-020-002

(1) Remove all the screws [3] and washers [4] from the front side guide [1] and back side guide [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-02-020-003

(2) Disconnect the front side guide [1] and back side guide [2] from the joint plate [6].

(a) Remove the screws [5] from the front side guide [1] and back side guide [2].

(b) Remove the joint bar [7].

SUBTASK 50-21-02-020-004

(3) Lift and remove the front side guide [1] and back side guide [2] from the cargo compartment.

SUBTASK 50-21-02-020-005

(4) Disconnect the guide profiles [8] from the carpet.

(a) If this is not possible, then the guide profiles can be removed later, after carpet disconnection from the belts.


(b) Remove the screws [9] from the guide joint [10].

(c) Slide the guide profiles [8] from the carpet.

(d) Remove the guide profiles [8] from the cargo compartment.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

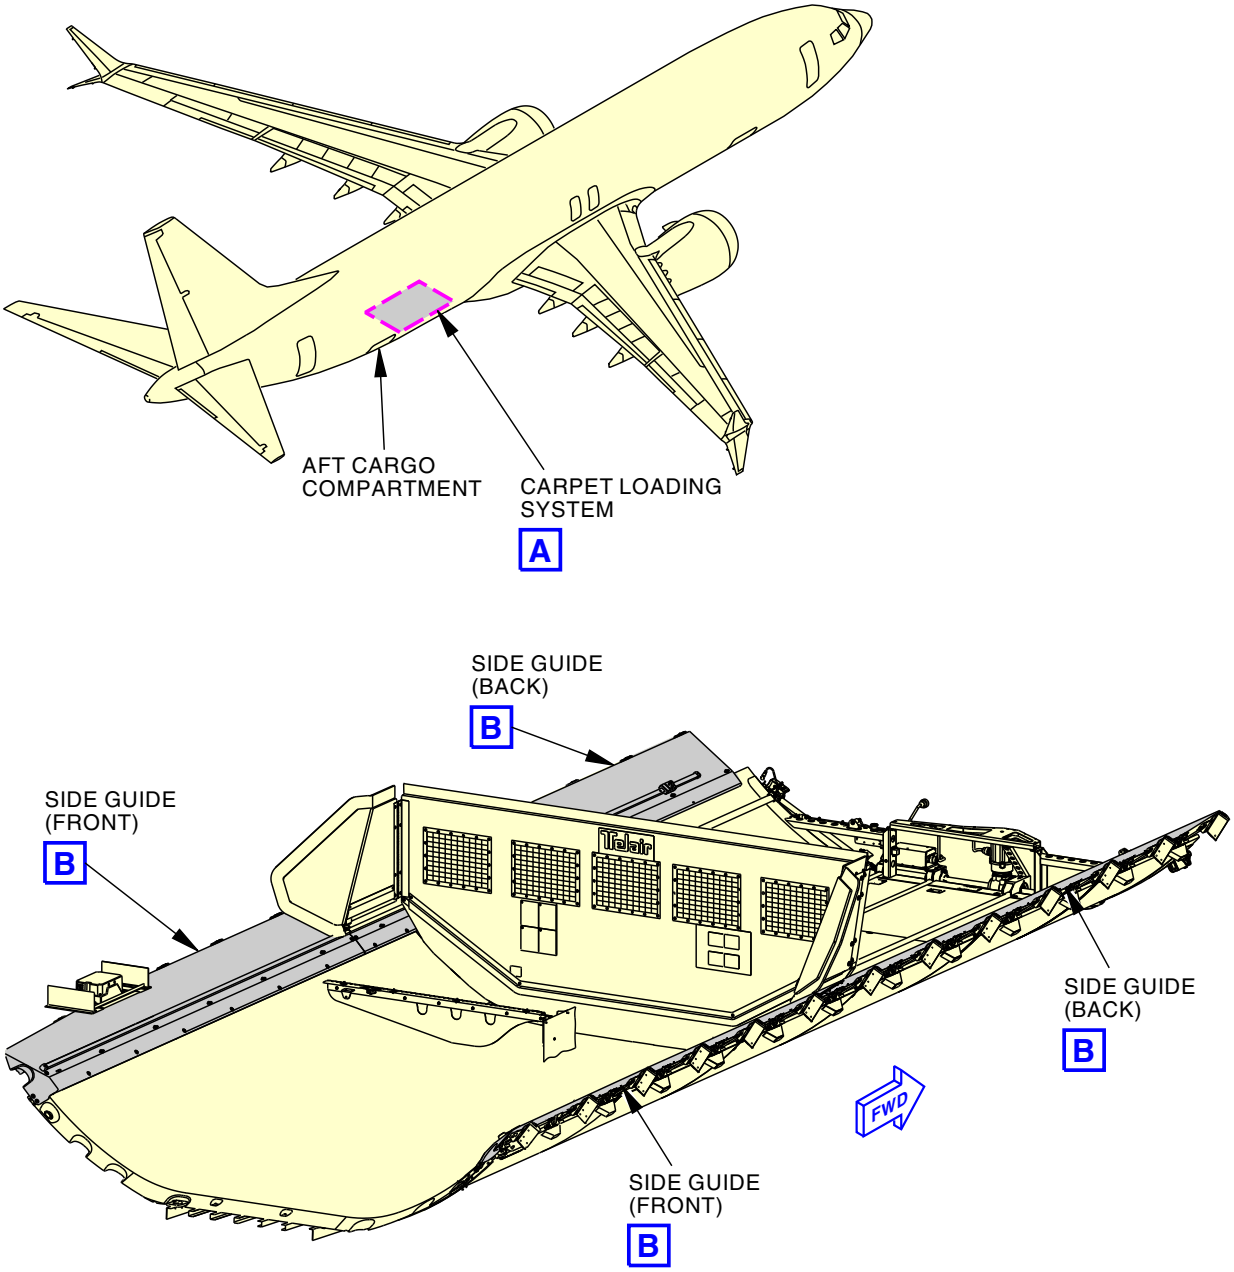


Aft Cargo Compartment Side Guide Installation
Figure 401/50-21-02-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

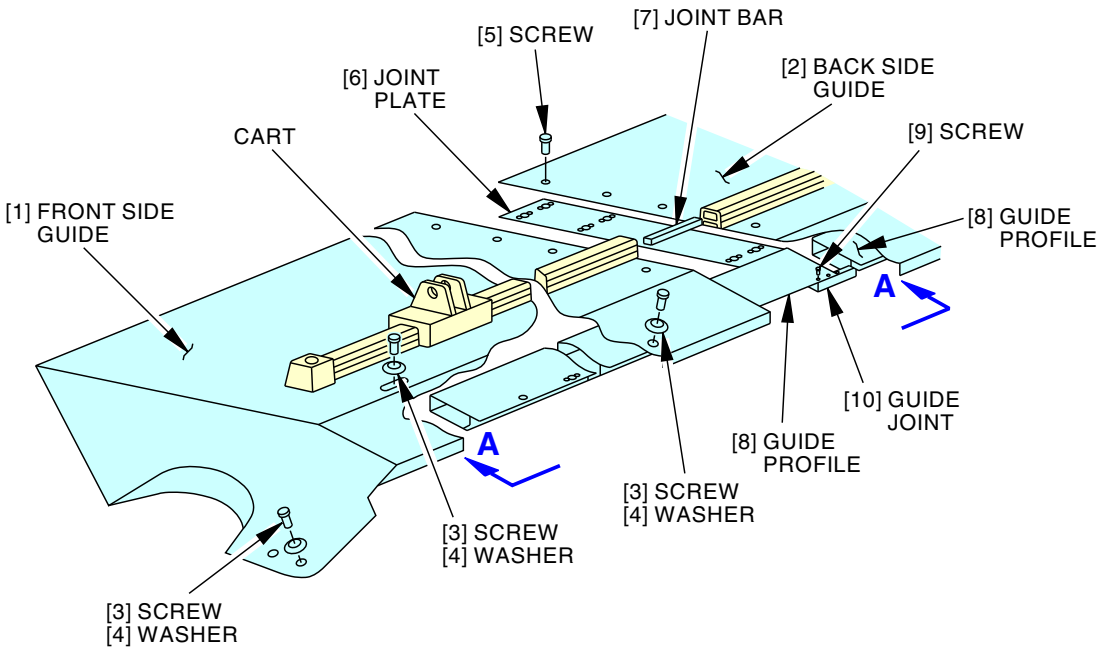

SIDE GUIDE
(LEFT SIDE SHOWN, RIGHT SIDE IS OPPOSITE)

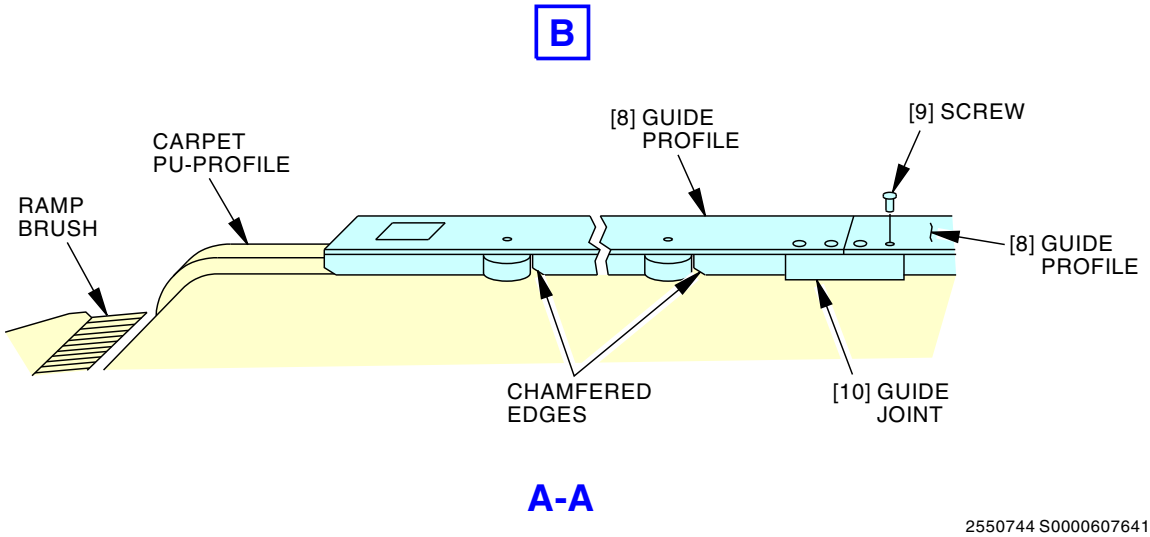

A-A

2550744 S0000607641_V2

Aft Cargo Compartment Side Guide Installation
Figure 401/50-21-02-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-02-400-801

3. Aft Cargo Compartment Side Guide Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment side guide.

(2) The sliding carpet loading system has two forward side guides and two back side guides that is installed on the right and left sides of the sliding carpet loader assembly. Each side guide has a different part number. The removal and installation procedures are the same for the left and right forward side guides and are the same for the left and right back side guides.

B. References

Reference	Title
50-21-00-440-801	Aft Cargo Loading System - Activation (P/B 201)
50-21-01-400-801	Aft Cargo Compartment Movable Bulkhead Installation (P/B 401)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Front side guide	50-21-02-01-050	PTF ALL
		50-21-02-01-080	PTF ALL
2	Back side guide	50-21-02-01-065	PTF ALL
		50-21-02-01-095	PTF ALL

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Prepare for the Installation

SUBTASK 50-21-02-420-011

(1) If the carpet was not installed before this task, do these steps:

(a) Feed the four guide profiles [8] on the carpet PU-profiles.

(b) Make sure that the chamfered edges are installed correctly.

(c) Install the screws [9] that attach the guide profiles [8] to the guide joint [10].

F. Aft Cargo Compartment Side Guide Installation

SUBTASK 50-21-02-820-004

(1) Align the front side guide [1] on the guide profile [8].

SUBTASK 50-21-02-420-002

(2) Install the screws [3] and washers [4] that attach the front side guide [1] to the guide profile [8].

SUBTASK 50-21-02-420-003

(3) Install the screws [3] and washers [4] that attach the front side guide [1] to the panel attachments.

(a) Do not tighten the screws [3].

SUBTASK 50-21-02-820-005

(4) Align the back side guide [2] behind the front side guide [1] on the guide profile [8].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-02-420-004

(5) Put the guide joint [10] in the tracks to align the front side guide [1] and back side guide [2].

SUBTASK 50-21-02-420-005

(6) Install the screws [5] that attach the front side guide [1] and back side guide [2] to the joint plate [6].

SUBTASK 50-21-02-420-006

(7) Install the screws [3] and washers [4] that attach the back side guide [2] to the guide profile [8].

SUBTASK 50-21-02-420-007

(8) Install the screws [3] and washers [4] that attach the back side guide [2] to the attachment panels.

(a) Do not tighten the screws [3].

SUBTASK 50-21-02-420-008

(9) Install the screw [3] and washer [4] that attach the front side guide [1] to the ramp clipnut.

SUBTASK 50-21-02-420-009

(10) Tighten all the screws [3] in the direction from the ramp to the drive panel.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-02-860-002

(1) Do this task: Aft Cargo Loading System - Activation, TASK 50-21-00-440-801.

SUBTASK 50-21-02-420-010

(2) Do this task: Aft Cargo Compartment Movable Bulkhead Installation, TASK 50-21-01-400-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM RAMP - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment ramp removal

(2) Aft cargo compartment ramp installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

C. The ramp bridges the height difference between the airplane floor and the top side of the carpet. The ramp keeps items from wedging under the carpet. A brush installed on the ramp shell creates a seal between the ramp and carpet.

TASK 50-21-03-000-801

2. Aft Cargo Compartment Ramp Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment ramp.

B. References

Reference	Title
50-21-02-000-801	Aft Cargo Compartment Side Guide Removal (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Aft Cargo Compartment Ramp without Sliding Carpet Loading System Removal

NOTE: If only the ramp will be removed from the sliding carpet system, do the procedures that follow.

SUBTASK 50-21-03-020-019

(1) To remove the side guide [18], do these steps (View C, Figure 401):

(a) Remove the screws [16] and washers [17] that attach side guide [18] to the ramp [1].

(b) Remove the screws [19] and washers [20] on each side guide [18].

SUBTASK 50-21-03-020-002

(2) Remove the left and right tiedown attachments [2] from the ramp [1] (View D, Figure 401).

(a) Remove the screws [3] that attach the tiedown attachment [2] to the ramp [1].

SUBTASK 50-21-03-020-003

(3) Disconnect the ramp [1] from the ramp channel [12] and ramp channel [13] (View F, Figure 401).

(a) Remove the screws [8], washers [9] and nut holders [14] that attach the ramp [1] to the ramp channel [12] and ramp channel [13].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-03-020-010

(4) Carefully lift the ends of the side guide [18] and remove the ramp [1] from the sliding carpet loading assembly.

E. Aft Cargo Compartment Ramp with Sliding Carpet Loading System Removal

NOTE: If the ramp will be removed with the sliding carpet assembly components, do the procedures that follow.

SUBTASK 50-21-03-020-001

(1) Remove the two side guide [18].

(a) Do this task: Aft Cargo Compartment Side Guide Removal, TASK 50-21-02-000-801.

SUBTASK 50-21-03-020-011

(2) Remove the left and right tiedown attachments [2] from the ramp [1].

(a) Remove the screws [3] that attach the tiedown attachment [2] to the ramp [1].

SUBTASK 50-21-03-020-012

(3) Disconnect the ramp [1] from the ramp channel [12] and ramp channel [13] (View F, Figure 401).

(a) Remove the screws [8], washers [9] and nut holders [14] that attach the ramp [1] to the ramp channel [12] and ramp channel [13].

SUBTASK 50-21-03-020-013

(4) Remove the ramp [1] from the sliding carpet loading assembly.

SUBTASK 50-21-03-020-014

(5) To remove the ramp channel [12] and ramp channel [13], do these steps (View F, Figure 401):

(a) Remove the screws [11] and washers [15] that attach the ramp channel [12] and ramp channel [13] to the sliding carpet loading assembly.


(b) Remove the nut holder [14], ramp channel [12], and ramp channel [13] from the sliding carpet loading assembly.


SUBTASK 50-21-03-420-001

(6) If necessary, install the two screws [3] to attach the right and left tiedown attachments [2] to the sliding carpet loading assembly.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

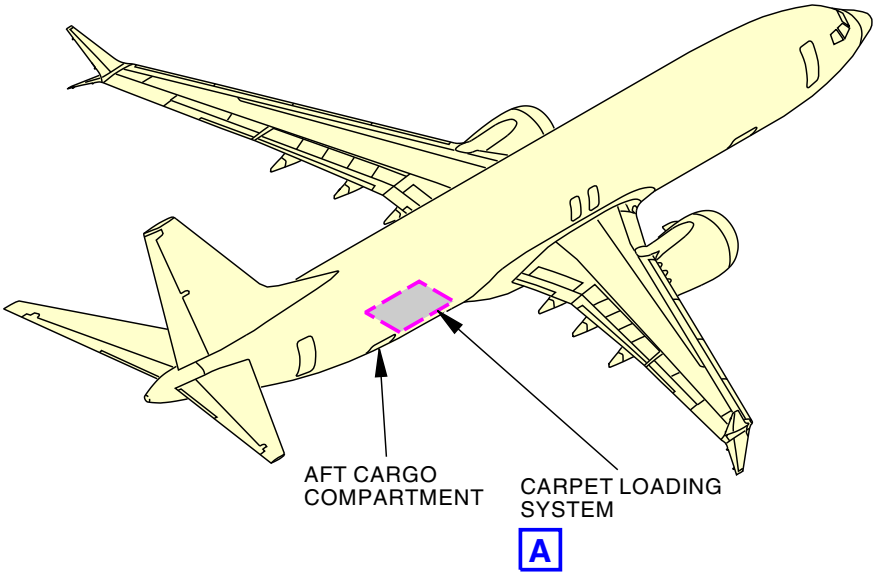

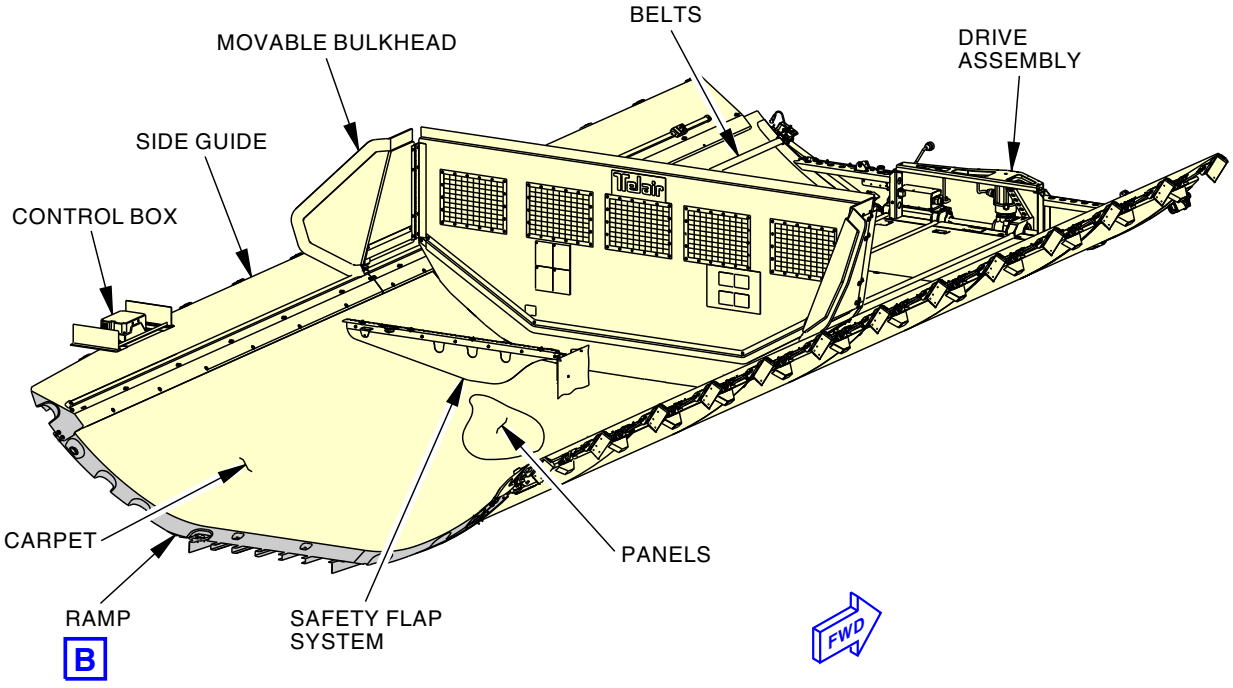


CARPET LOADING SYSTEM

A

2550344 S0000606908_V2

Aft Cargo Compartment Ramp Installation
Figure 401/50-21-03-990-801 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

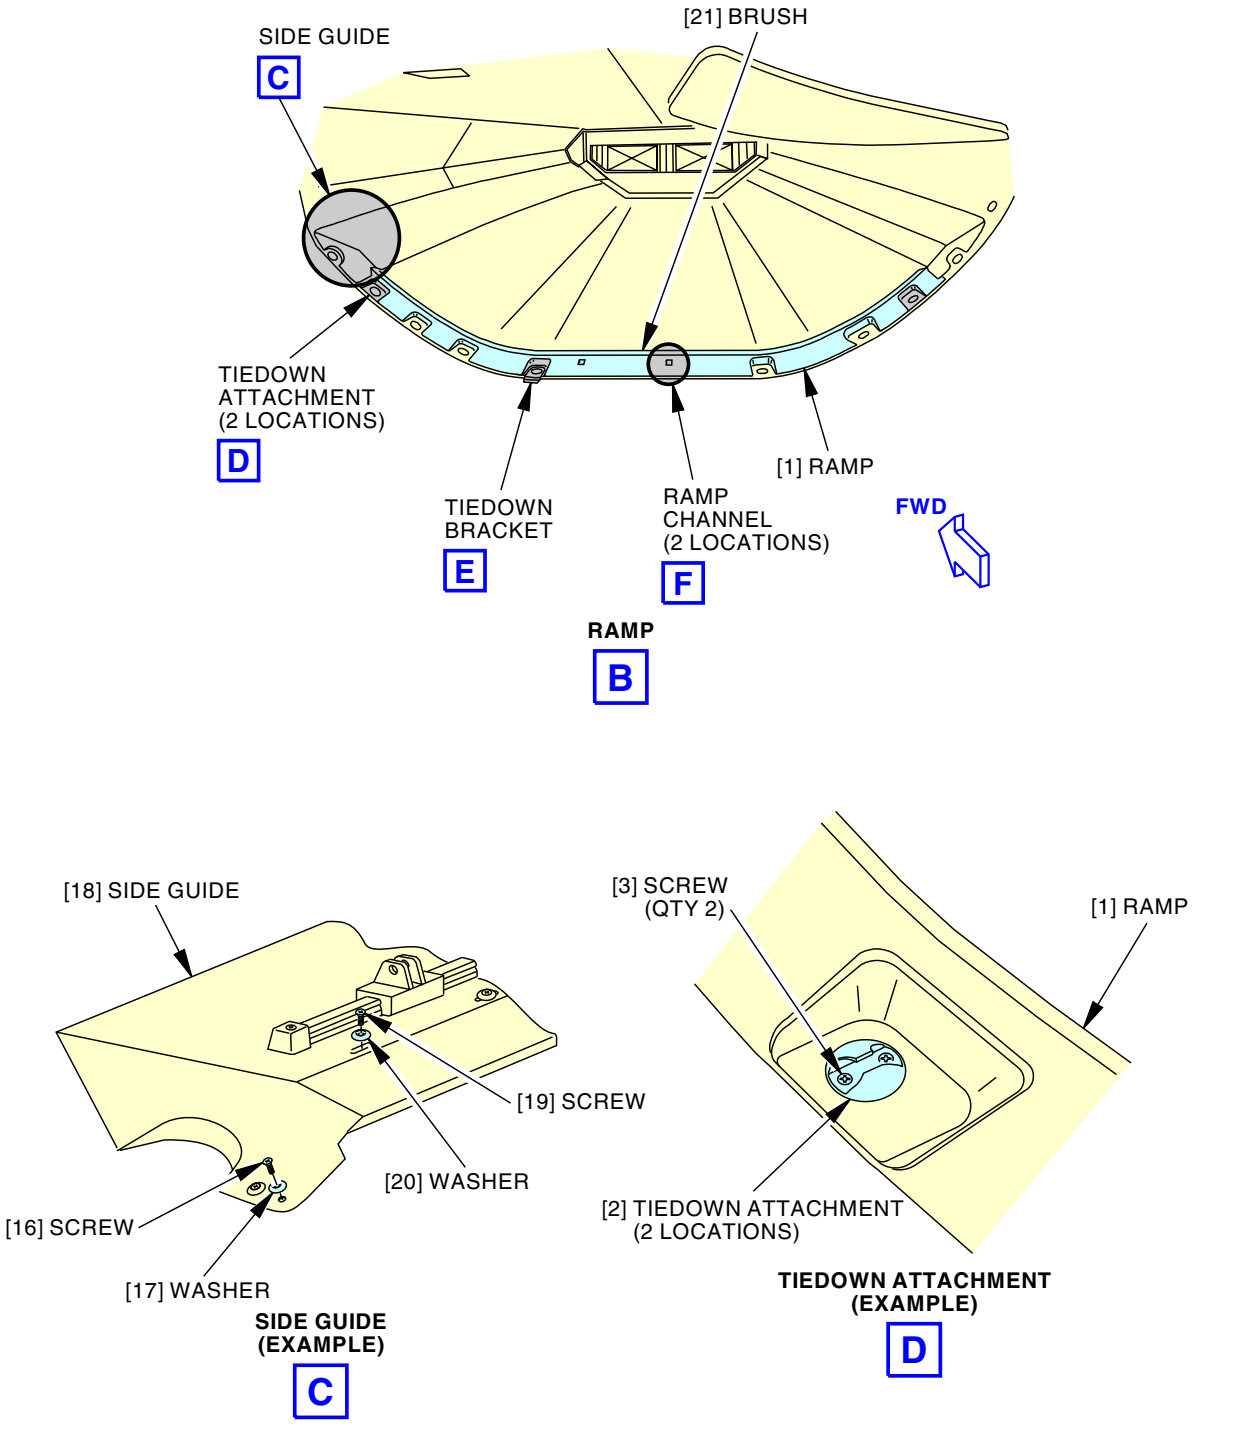

2550350 S0000606909_V3


Aft Cargo Compartment Ramp Installation
Figure 401/50-21-03-990-801 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

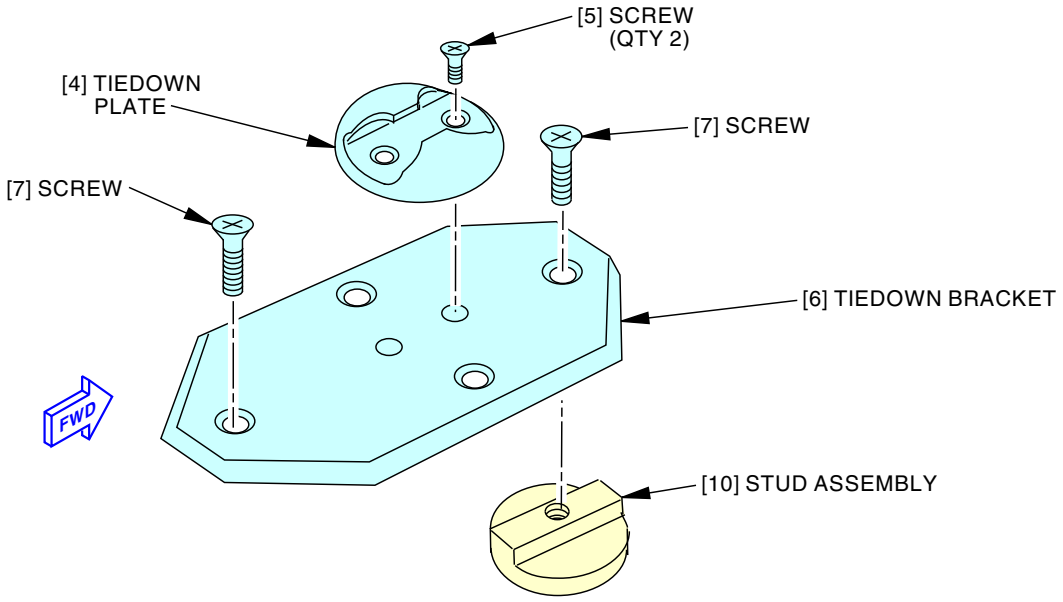

TIEDOWN BRACKET

E

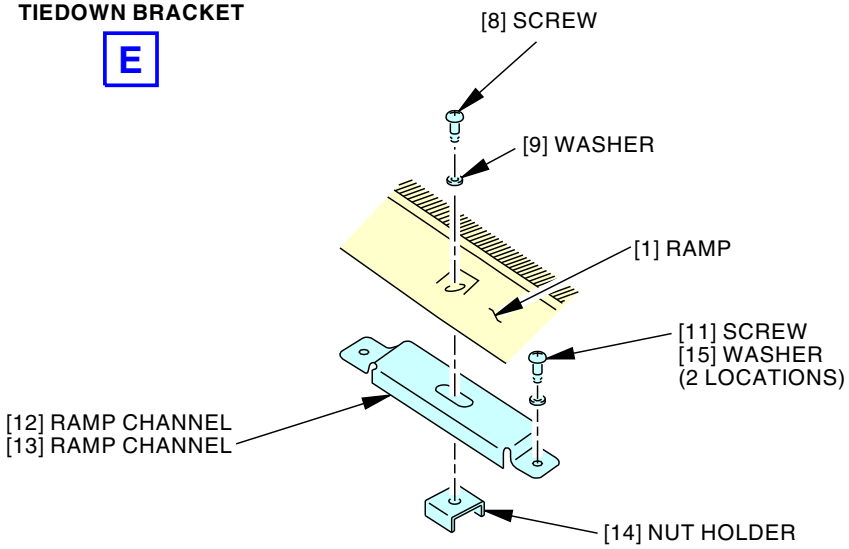

RAMP CHANNEL
(EXAMPLE, 2 LOCATIONS)

F

2550358 S0000606910_V2

Aft Cargo Compartment Ramp Installation
Figure 401/50-21-03-990-801 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-03-400-801

3. Aft Cargo Compartment Ramp Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment ramp.

B. References

Reference	Title
50-21-02-400-801	Aft Cargo Compartment Side Guide Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
A50250	Sealant - P/S 870 Class B-1/2 Corrosion Inhibitive Sealant	BMS5-95 Class B-1/2

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Aft Cargo Compartment Ramp without Sliding Carpet Loading System Installation

NOTE: If only the ramp was removed and not the sliding carpet loading system, do the procedures that follow.

SUBTASK 50-21-03-420-003

(1) Carefully lift the ends of the side guide [18] and install the ramp [1] into the correct position.

SUBTASK 50-21-03-820-001

(2) Align the ramp [1] to make sure that the washer [17] is tight against the rollers on the side guide [18] and that the contour of the ramp [1] aligns with the cargo compartment floor.

SUBTASK 50-21-03-420-004

(3) Install the ramp [1] to the ramp channel [12] and ramp channel [13] (View F, Figure 401).

(a) Install the screws [8], washers [9] and nut holders [14] that attach the ramp [1] to the ramp channel [12] and ramp channel [13].

SUBTASK 50-21-03-420-005

(4) Install the right and left tiedown attachment [2] to the ramp [1] (View D, Figure 401).

(a) Install the screws [3] which attach the tiedown attachment [2] to the ramp [1].

SUBTASK 50-21-03-420-006

(5) To set the side guide [18], do these steps (View C, Figure 401):

(a) Instal the screw [19] and washer [20] on each side guide [18].

(b) Install the screws [16] and washers [17] to connect the side guide [18] and ramp [1]

F. Aft Cargo Compartment Ramp with Sliding Carpet Loading System Installation

NOTE: If the ramp was removed with the sliding carpet assembly components, do the installation procedures that follow.

SUBTASK 50-21-03-020-017

(1) If necessary to remove the tiedown attachment [2] do this step:

(a) Remove the screws [3] that attach the tiedown attachment [2] to the sliding carpet loading assembly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-03-420-007

(2) If it is necessary to install the tiedown bracket [6], do these steps:

(a) Instal the stud assembly [10] in the aircraft tiedown attachment.

(b) Prepack the two tiedown positions to fair flush at STA 787 with P/S 870 Class B-1/2 sealant, A50250.

(c) Prepare a fay seal for the tiedown brackets [6] with P/S 870 Class B-1/2 sealant, A50250.

NOTE: Use a sealant that is common to the cargo compartment.

(d) Install the tiedown brackets [6] to the stud assemblies [10].

1) Instal the two screws [7] that attach tiedown bracket [6] to the stud assemblies [10].

(e) Put the tiedown plate [4] in it is correct position on the tiedown bracket [6].

(f) Install the two screws [5] that attach the tiedown plate [4] to the tiedown bracket [6].

SUBTASK 50-21-03-420-011

(3) Install the ramp channel [12] and ramp channel [13] to the sliding carpet loading assembly (View F, Figure 401).

(a) Align the nut holders [14] between the screw holes.

(b) Put the ramp channel [12] (short) in the correct position.

(c) Put the ramp channel [13] (long) in the correct position.

(d) Install the screws [11] and washers [15] that attach the ramp channel [12] and ramp channel [13] to the sliding carpet loading assembly.

SUBTASK 50-21-03-820-002

(4) Align the ramp [1] to make sure that the brush [21] is tight against the rollers on the side guide [18] and that the contour of the ramp [1] aligns with the cargo compartment floor.

SUBTASK 50-21-03-420-012

(5) Connect the ramp [1] to the ramp channel [12] and ramp channel [13].

(a) Install the screws [8], washers [9] and nut holders [14] that attach the ramp [1] to the ramp channel [12] and ramp channel [13].

SUBTASK 50-21-03-420-013

(6) Install the right and left tiedown attachment [2] to the ramp [1] (VIew D, Figure 401).

(a) Install the two screws [3] that attach the tiedown attachment [2] to the ramp [1].

G. Put the Airplane Back to its Usual Condition

SUBTASK 50-21-03-420-014

(1) Install the right and left side guides [18].

(a) Do this task: Aft Cargo Compartment Side Guide Installation, TASK 50-21-02-400-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM GUIDE PANEL - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment guide panel removal

(2) Aft cargo compartment guide panel installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks

C. The support panels are the structural part of the sliding carpet loading system. The carpet moves on and below the support panels. The sides of the support panels are attached to the airplane. Through these attachment points the loads from the cargo are moved to the airplane structure. At loads over 1G the support panels push down on the flexdown supports that prevent excessive loads on the airplane structure.

D. The support panels are connected to each other in a row. The panel installed adjacent to the cargo compartment bulkhead is the drive panel. The drive panel is installed as part of the drive assembly. The support panels are installed in the middle of the assembly and extend the length of the sliding carpet loading assembly. The guide panel is installed by the cargo door. The guide panel has rollers that turn the carpet around the outer edge of the assembly.

E. The manufacturer recommends that the support panels be removed from the airplane before maintenance is performed.

TASK 50-21-04-000-801

2. Aft Cargo Compartment Guide Panel Removal

(Figure 201)

A. General

(1) This task gives the instructions to remove the aft cargo compartment guide panel.

(2) The panel attachments connect all of the panels to the airplane frame. The panel attachments have a spring mechanism that prevents high loads on the airplane frames.

B. References

Reference	Title
50-21-05-000-802	Aft Cargo Compartment Carpet Detachment (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-21-04-020-001

(1) Do this task: Aft Cargo Compartment Carpet Detachment, TASK 50-21-05-000-802.

E. Aft Cargo Compartment Guide Panel Removal

SUBTASK 50-21-04-020-004

(1) Remove the guide panel [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the screws [8] from the panel joint on the guide panel [1].

(b) Remove the lever locking pin [5].

(c) Open the lever arm at the panel attachment [6].

(d) Remove the screw locking pin [4] from the airplane attachment [7] to disconnect the panel attachment [6].


(e) Push the panel attachment [6] in the up direction and lock it with the lever locking pin [5].


(f) Slide the guide panel [1] in the direction of the cargo compartment door.

(g) Remove the guide panel [1] from the airplane.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

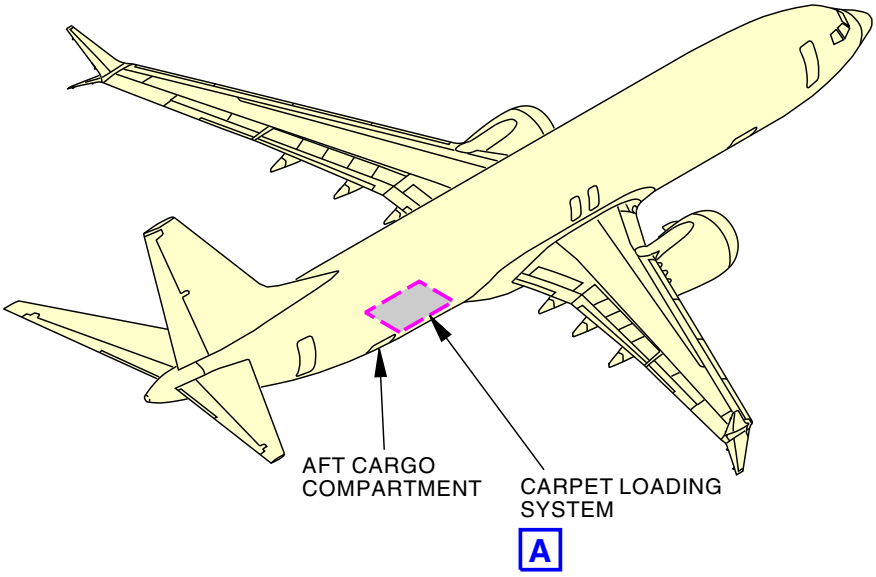

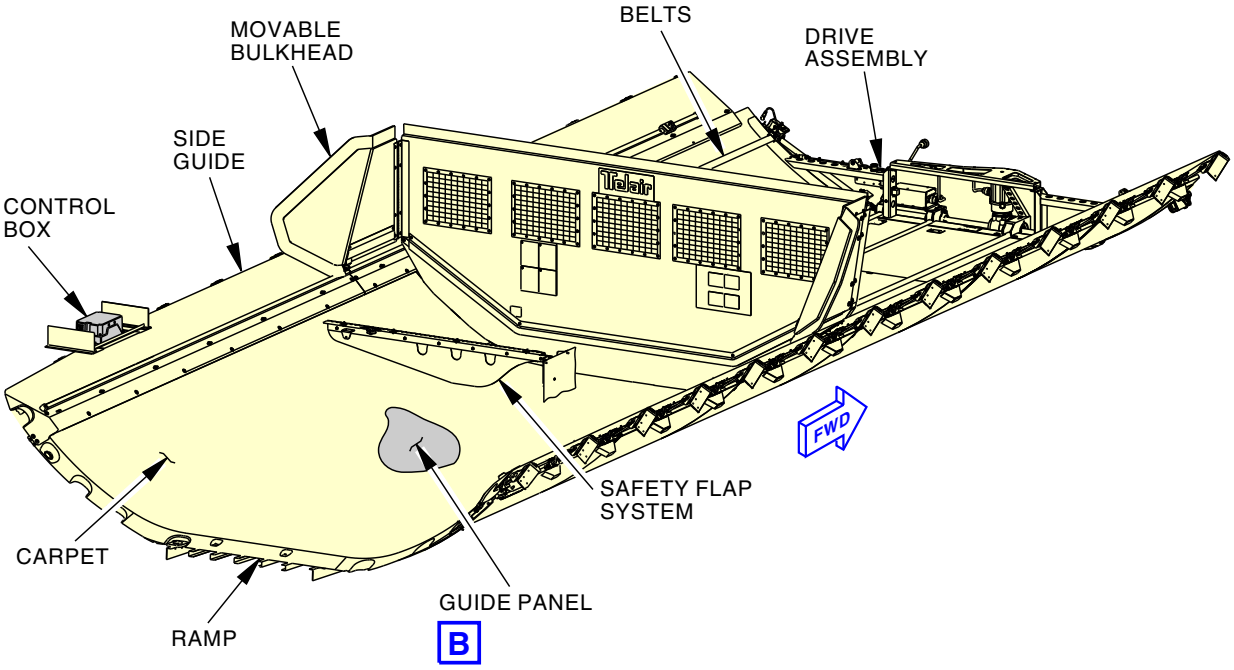


CARPET LOADING SYSTEM

A

2555506 S0000609362_V2

Aft Cargo Compartment Guide Panel Installation
Figure 201/50-21-04-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

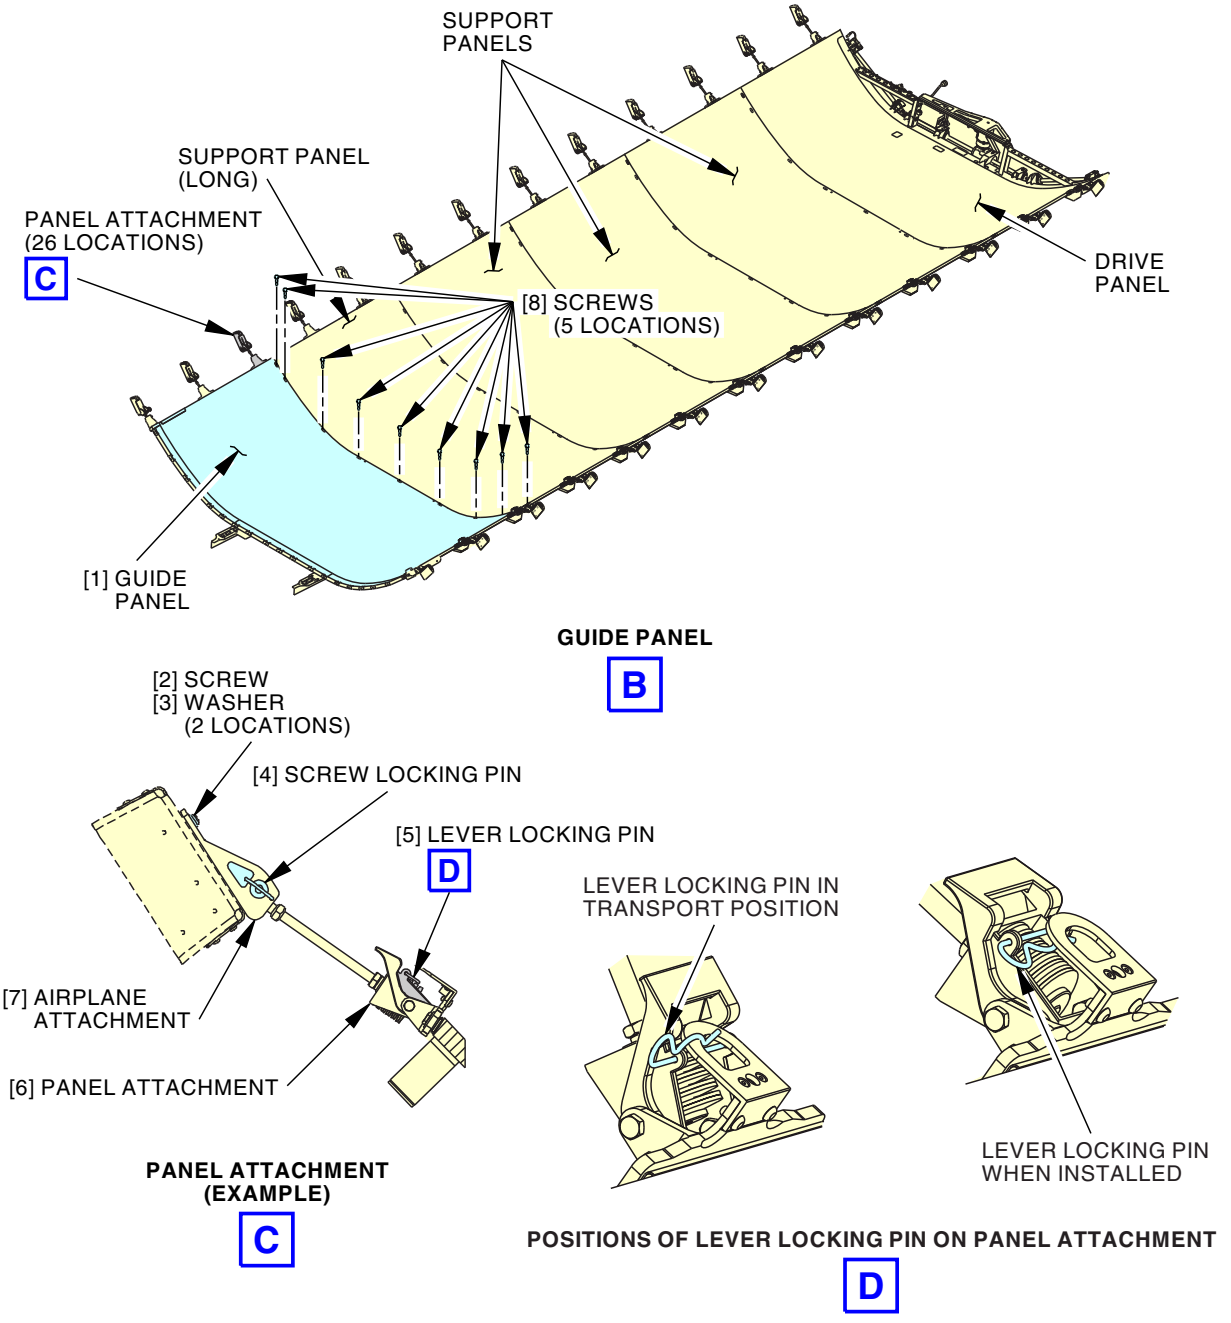

Aft Cargo Compartment Guide Panel Installation
Figure 201/50-21-04-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-04-400-801

3. Aft Cargo Compartment Guide Panel Installation

(Figure 201)

A. General

(1) This task gives the instructions to install the aft cargo compartment guide panel.

B. References

Reference	Title
50-21-04-820-801	Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment (P/B 501)
50-21-05-400-802	Aft Cargo Compartment Carpet Attachment (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Installation

SUBTASK 50-21-04-420-014

(1) If necessary, install the panel attachments [6] on the guide panel [1].

(a) Install the panel attachments [6], that are closest to the guide rollers outside of the airplane.

SUBTASK 50-21-04-420-015

(2) Make sure that the lever locking pin [5] is in transport position.

NOTE: This is to prevent the panel attachment from folding in underneath the panel.

E. Aft Cargo Compartment Guide Panel Installation

SUBTASK 50-21-04-420-001

(1) Install the guide panel [1].

(a) Align the guide panel [1] in the correct position.

(b) Hold the guide panel [1] tight against the support panel.

(c) Install the screws [8] at the straight panel joint.

1) Use a pry bar at the two measuring holes on the panel joint and press together while you tighten the screws [8].

(d) Install the screws [8] at the curved panel joints.

(e) To connect the panel attachment [6] to the airplane attachment [7], do these steps:

1) If necessary, install the airplane attachments [7] to the sloping floor with two screws [2] and two washers [3].

2) Release the lever locking pin [5] on the panel attachment [6] from its transport position.

3) Lower the panel attachment [6] into the airplane attachment [7].

4) Install the screw locking pin [4].

5) Close the panel attachment lever arm.

6) Install the lever locking pin [5].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-04-420-002

(1) Do this task: Aft Cargo Compartment Carpet Attachment, TASK 50-21-05-400-802.

G. Aft Cargo Compartment Guide Panel Installation Height Adjustment

SUBTASK 50-21-04-820-010

(1) Adjust the height of the guide panel (TASK 50-21-04-820-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM SUPPORT PANELS - REMOVAL AND INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment support panels removal

(2) Aft cargo compartment support panels installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

C. The support panels are the structural part of the sliding carpet loading system. The carpet moves on and below the support panels. The sides of the support panels are attached to the airplane. Through these attachment points the loads from the cargo are moved to the airplane structure. At loads over 1G the support panels push down on the flexdown supports that prevent excessive loads on the airplane structure.

D. The support panels are connected to each other in a row. The panel installed adjacent to the cargo compartment bulkhead is the drive panel. The drive panel is installed as part of the drive assembly. The support panels are installed in the middle of the assembly and extend the length of the sliding carpet loading assembly. The guide panel is installed by the cargo door. The guide panel has rollers that turn the carpet around the outer edge of the assembly.

E. The manufacturer recommends that the support panels be removed from the airplane before maintenance is performed.

TASK 50-21-04-000-802

2. Aft Cargo Compartment Support Panels Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment support panels.

(2) The sliding carpet loading system has two types of support panels installed. The procedure to remove the support panel is the same for all support panels installed.

B. References

Reference	Title
50-21-04-000-801	Aft Cargo Compartment Guide Panel Removal (P/B 201)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-21-04-020-005

(1) Do this task: Aft Cargo Compartment Guide Panel Removal, TASK 50-21-04-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Aft Cargo Compartment Support Panels Removal

SUBTASK 50-21-04-020-009

(1) Remove the support panel [1].

NOTE: The sliding carpet loading system have different support panel dimensions installed. The procedure to remove all of the support panels is equivalent.

NOTE: Keep and record all the fasteners removed for the subsequent installation.

(a) Remove the screws [8] from the panel joint on the support panel [1].

(b) Remove the lever locking pin [5].

(c) Open the lever arm at the panel attachment [6].

(d) Remove the screw locking pin [4] from the airplane attachment [7] to disconnect the panel attachment [6].

(e) Push the panel attachment [6] in the up direction and lock it with the lever locking pin [5].

(f) Slide the support panel [1] in the direction of the cargo compartment door.


(g) Remove the support panel [1] from the airplane.


SUBTASK 50-21-04-020-012

(2) Repeat the procedure above to remove each support panel [1], if necessary.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

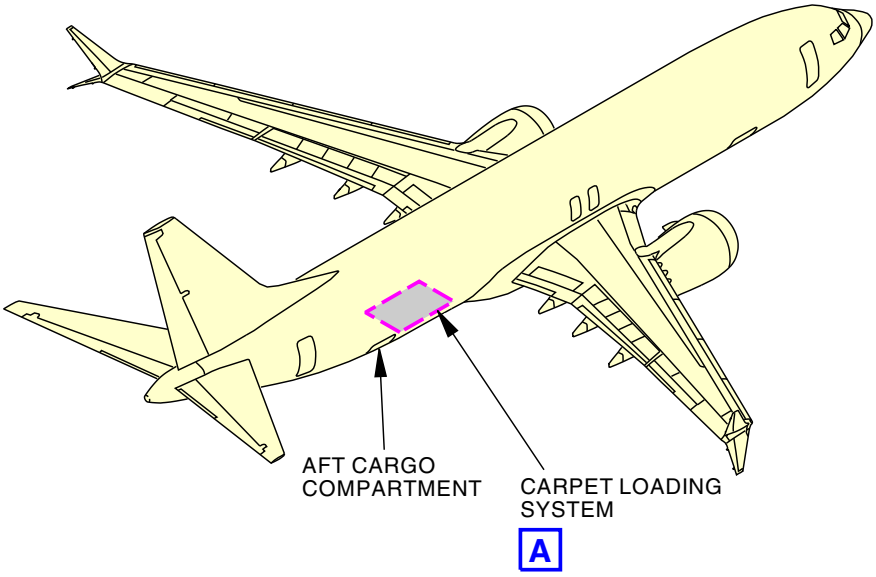

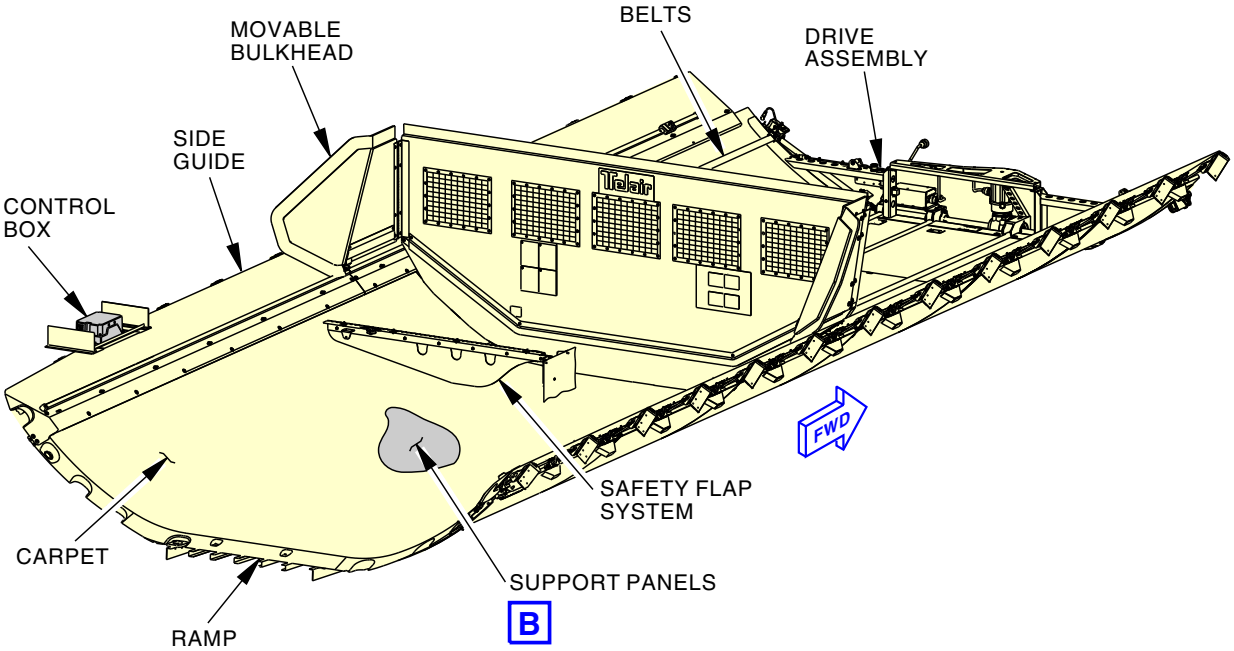


CARPET LOADING SYSTEM

A

2555496 S0000609276_V2

Aft Cargo Compartment Support Panels Installation
Figure 401/50-21-04-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

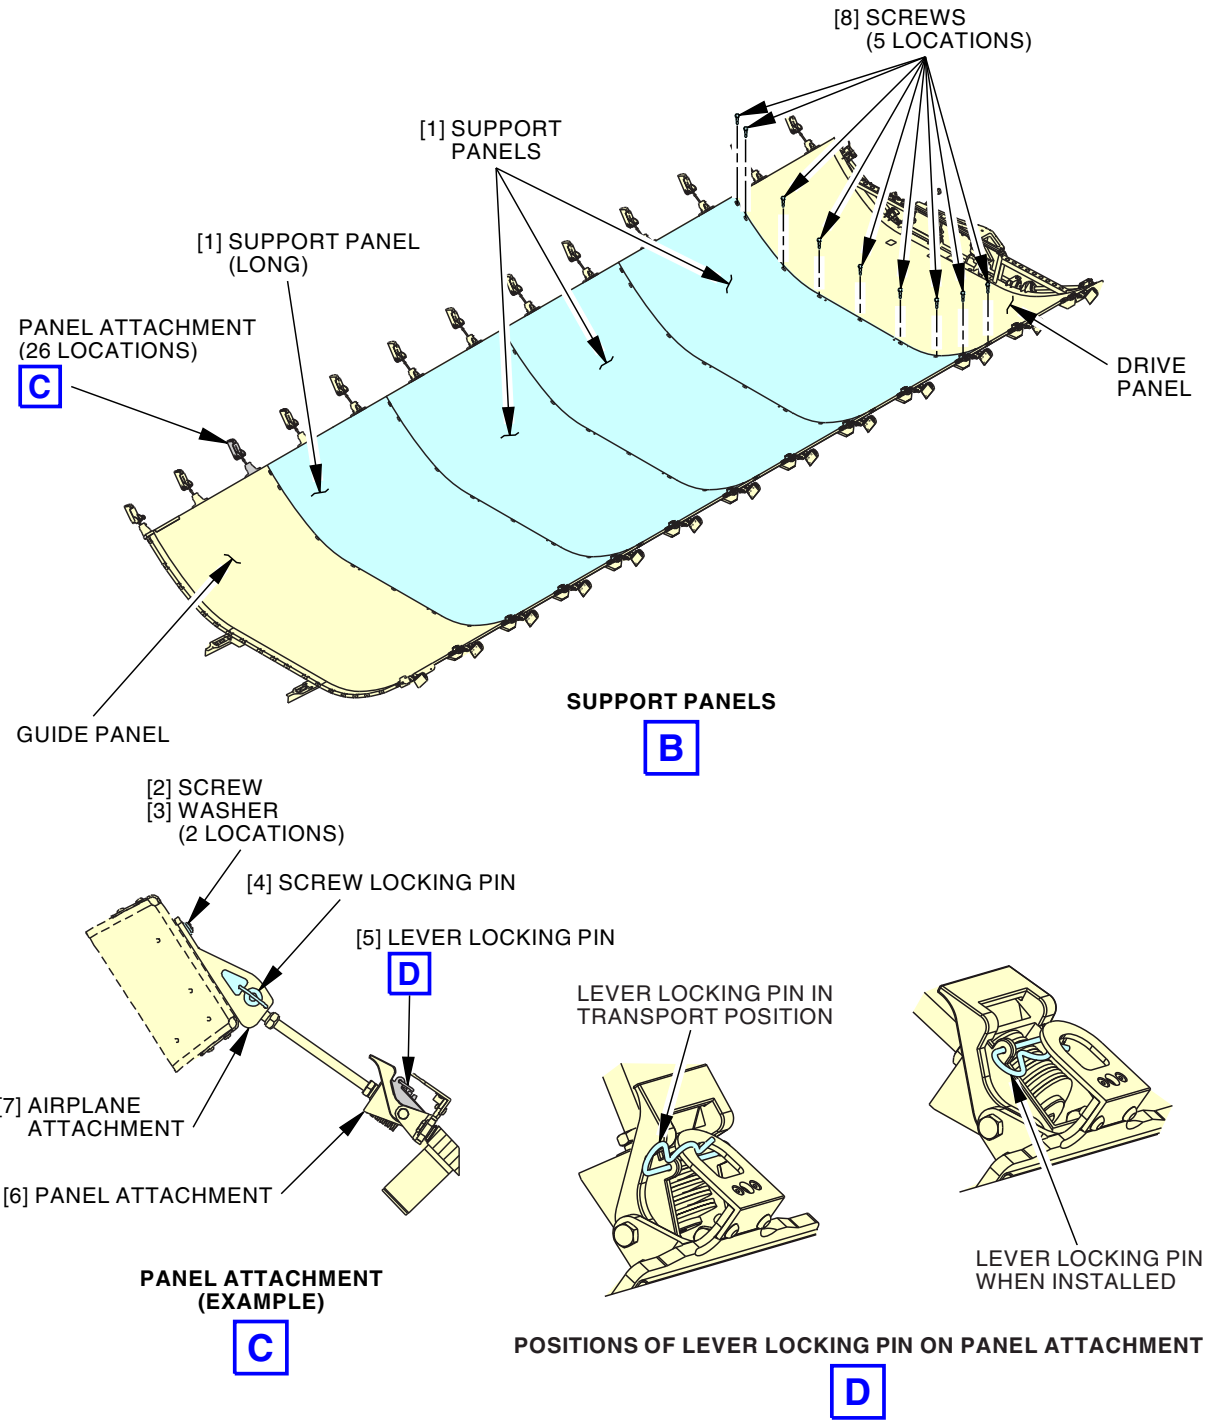

Aft Cargo Compartment Support Panels Installation
Figure 401/50-21-04-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-04-400-802

3. Aft Cargo Compartment Support Panels Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment support panels.

(2) The support panels are installed between the guide panel and the drive panel that extend the length of the sliding carpet loading system. There are four support panels that are connected to each other at the panel joints. Starting from the bulkhead/drive unit to the cargo compartment door the support panels are as follows:

(a) Drive unit panel

(b) Three support panels

(c) Long support panel

(d) Guide panel

(3) The procedure to install the support panels is the same for all support panels. Only one procedure is given in this task that can be used for each support panel.

B. References

Reference	Title
50-21-04-400-801	Aft Cargo Compartment Guide Panel Installation (P/B 201)
50-21-04-820-801	Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment (P/B 501)

C. Prepare for the Installation

SUBTASK 50-21-04-420-010

(1) If necessary, install the panel attachments [6] on the support panels [1].

SUBTASK 50-21-04-420-011

(2) Make sure that the lever locking pin [5] is in transport position.

NOTE: This is to prevent the panel attachment from folding in underneath the panel.

D. Aft Cargo Compartment Support Panels Installation

SUBTASK 50-21-04-420-005

(1) Install the support panel [1].

(a) Align the support panel [1] on the panel joint.

(b) Install the screws [8] at the straight panel joint.

1) Use a pry bar at the two measuring holes on the panel joint and press together while you tighten the screws [8].

(c) Install the screws [8] at the curved panel joints.

(d) Connect the panel attachment [6] to the airplane attachment [7].

1) If necessary, install the airplane attachments [7] to the sloping floor with two screws [2] and two washers [3].

2) Release the lever locking pin [5] on the panel attachment [6] from its transport position.

3) Lower the panel attachment [6] into the airplane attachment [7].

4) Install the screw locking pin [4].

5) Close the panel attachment lever arm.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

6) Install the lever locking pin [5].

SUBTASK 50-21-04-420-016

(2) Repeat the procedure above to install each support panel [1], if necessary.

E. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-04-420-006

(1) Do this task: Aft Cargo Compartment Guide Panel Installation, TASK 50-21-04-400-801.

F. Aft Cargo Compartment Support Panels Installation Height Adjustment

SUBTASK 50-21-04-820-009

(1) Adjust the height of the panels (TASK 50-21-04-820-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM - ADJUSTMENT

1. General

A. This procedure has this task:

(1) Aft Cargo Compartment Drive Unit, Guide Panel and Support Panels Adjustment

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks

TASK 50-21-04-820-801

2. Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment

(Figure 501)

A. General

(1) The drive, guide, and support panels must be adjusted to the correct height above the flexdown support system. When loads on the panels are more than 1G, the spring mechanism in the panel attachments let the panels sit down on the flexdown support system putting the load on the floor that prevents the frames from getting overloaded. When the panels are too high, the loads on the structure are too much and will cause the carpet to get caught below the panels.

(2) The sliding carpet loading system height adjustment must be done before the carpet is installed.

B. Tools/Equipment

Reference	Description
STD-1303	Caliper - Dial
STD-14360	Flashlight

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Adjustment

SUBTASK 50-21-04-820-003

(1) To make sure that the valid measurements are made, only one person is necessary to perform this procedure. Operator must stay on the carpet centerline during the procedure.

SUBTASK 50-21-04-820-004

CAUTION

OBEY THESE PRECAUTIONS. IF YOU IGNORE THESE PRECAUTIONS, DAMAGE TO EQUIPMENT WILL OCCUR.

(2) Make sure that the height of the panels are adjusted correctly. If the height of the panels are too high, damage to the airplane structure can occur from high loads. If the height of the panels are too low, damage to the carpet loading system can occur if the carpet cannot move freely below the panels.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Adjustment Procedure

SUBTASK 50-21-04-820-005

(1) Use a dial caliper, STD-1303 to measure the height of the panels above the flexdown support system.

(a) Look through the measuring holes with a flashlight, STD-14360 for the position of the carpet.

(b) Measure the height of the panels through the measurement holes on the panel joint.

NOTE: Begin at the drive panel.

(c) With carpet installed.

1) Make sure that the height between the top side of the panel and the carpet resting on the flexdown support system for the drive and support panels is 1.38 in. (35.1 mm) to 1.47 in. (37.3 mm).

2) Make sure that the height between the top side of the panel and the carpet resting on the flexdown support system for the guide panel is 1.93 in. (49.0 mm) to 2.17 in. (55.1 mm).

(d) Without carpet installed.

1) Make sure that the height between the top side of the panels and the flexdown for the drive and support panels is 1.42 in. (36.1 mm) to 1.5 in. (38.1 mm), where the carpet is not between the flexdown and the panel.

2) Make sure that the height between the top side of the panels and the flexdown for the guide panel is 1.97 in. (50.0 mm) to 2.21 in. (56.1 mm), where the carpet is not between the flexdown and the panel.

SUBTASK 50-21-04-820-006

(2) If necessary, adjust the panels height.

(a) Adjust the two panel attachments closest to the measurement hole.

(b) Remove the lever locking pin to open the panel attachment lever arm.

(c) Make sure that the nut is loose at the adjustment pin.

(d) Adjust the panel height by turning the adjustment pin with a wrench.

(e) Close the panel attachment lever arm.

(f) Measure the panels height.

1) If necessary, adjust the panels again.

(g) Measure the height of all the panels above the flexdown support system.

NOTE: The panels must be adjusted to the correct height.

(h) If necessary, adjust the panels height.

(i) Make sure that all of the counter nuts are locked down to the panel attachments.

(j) Make sure that the panel attachment lever arms are secured with a locking pin.

F. System Alignment Check

SUBTASK 50-21-04-820-007

(1) Make sure that the adjustment screws at the panel attachments are aligned with the airplane frames.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-04-820-008

(2) If necessary, align the adjustment screws with the airplane frames.

NOTE: Do one panel attachment alignment at a time.

(a) Hold the panel attachment and loosen the screw on it.

(b) Align the adjustment screw with the airplane frame.

(c) Tighten the screw on the panel attachment.

(d) Make sure that the panels are parallel to the cargo compartment side walls. If necessary, do these steps:


1) Loosen the screws that attach the drive unit to the longbars.

2) Move the guide panel to make the panels parallel to the side walls.


3) Tighten the screws on the longbars.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

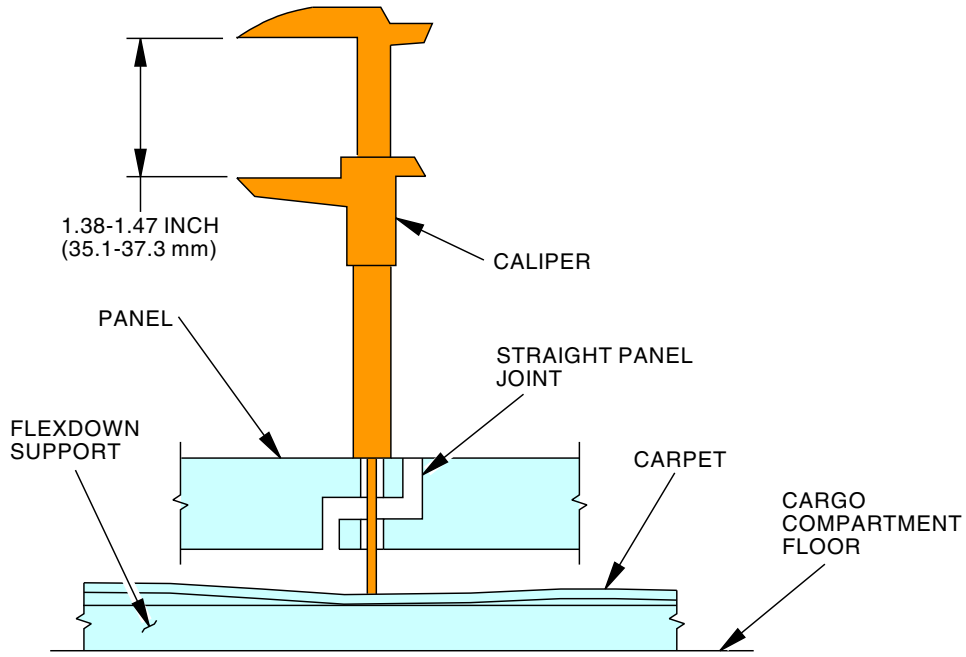

PANEL WITH CARPET INSTALLED

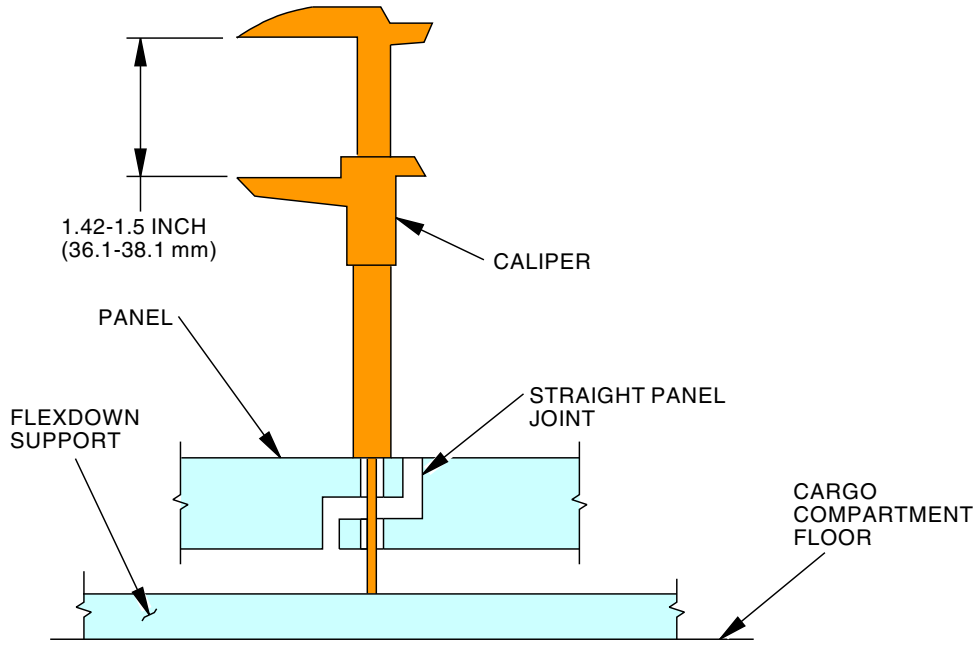


PANEL WITHOUT CARPET INSTALLED


2555488 S0000609436_V2

Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment
Figure 501/50-21-04-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

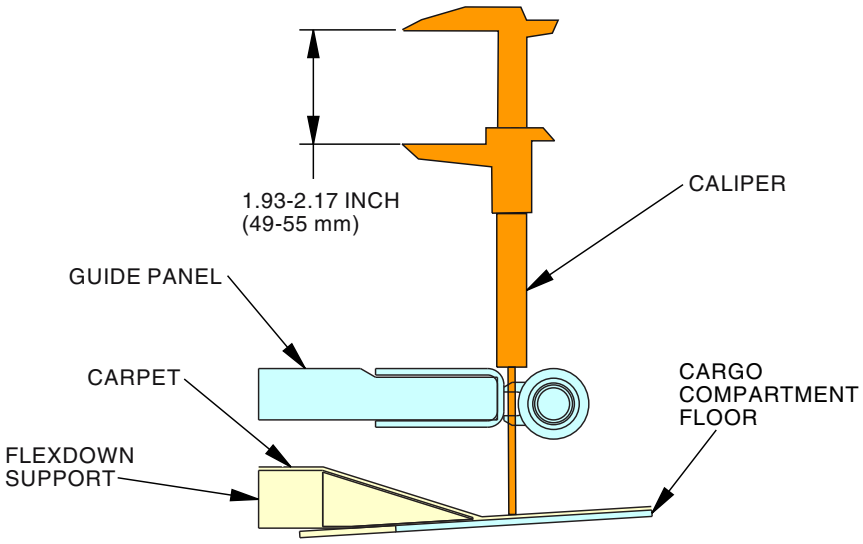

GUIDE PANEL HEIGHT WITH CARPET

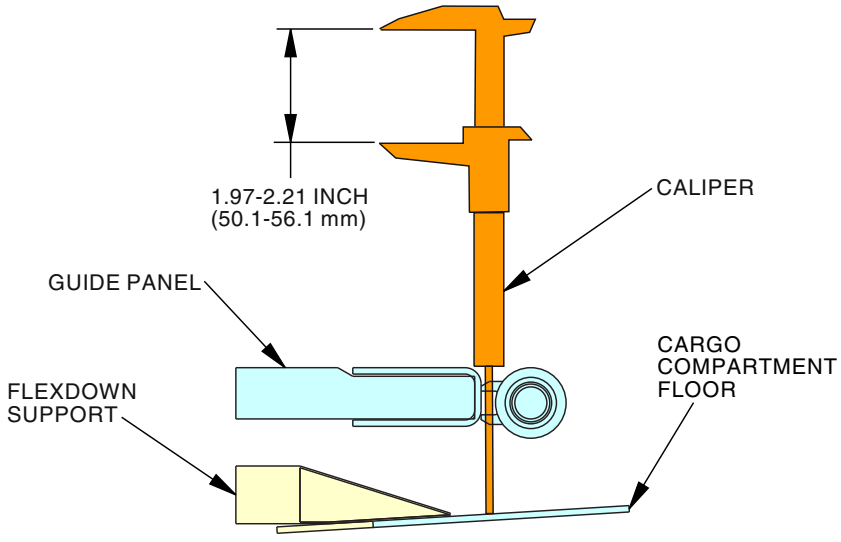

GUIDE PANEL HEIGHT WITHOUT CARPET

2788076 S0000633641_V2

Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment
Figure 501/50-21-04-990-803 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM DRIVE ASSEMBLY - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment drive assembly removal

(2) Aft cargo compartment drive assembly installation

(3) Aft cargo compartment carpet detachment

(4) Aft cargo compartment carpet attachment

(5) Aft cargo compartment actuator motor removal

(6) Aft cargo compartment actuator motor installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

C. The drive assembly is the part of the Sliding Carpet Loading System that pulls the belts that are connected to the carpet. The drive assembly includes the drive assembly frame, the drive unit, the drive panel, the belts, and the carpet.

TASK 50-21-05-000-801

2. Aft Cargo Compartment Drive Assembly Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment drive assembly.

B. References

Reference	Title
50-21-04-000-801	Aft Cargo Compartment Guide Panel Removal (P/B 201)
50-21-04-000-802	Aft Cargo Compartment Support Panels Removal (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-21-05-010-001

(1) Disconnect the carpet (TASK 50-21-05-000-802).

SUBTASK 50-21-05-010-002

(2) Remove the guide panel (TASK 50-21-04-000-801).

SUBTASK 50-21-05-010-003

(3) Remove the support panels (TASK 50-21-04-000-802).

E. Aft Cargo Compartment Drive Assembly Removal

SUBTASK 50-21-05-020-001

(1) Disconnect the panel attachment [5] from the bracket [4].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the lever locking pin [2] from the panel attachment [5].

(b) Open the lever arm at the panel attachment [5].

(c) Remove the locking pin [3] from the bracket [4].

(d) Disconnect the panel attachment [5] from the bracket [4].

(e) Push the panel attachment [5] in the up direction and lock it with the lever locking pin [2].

SUBTASK 50-21-05-020-002


(2) Remove the four screws [6] and four washers [7] that attach the drive panel [1] to the longitudinal bar [8].

SUBTASK 50-21-05-020-003

(3) Remove the drive assembly [9].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

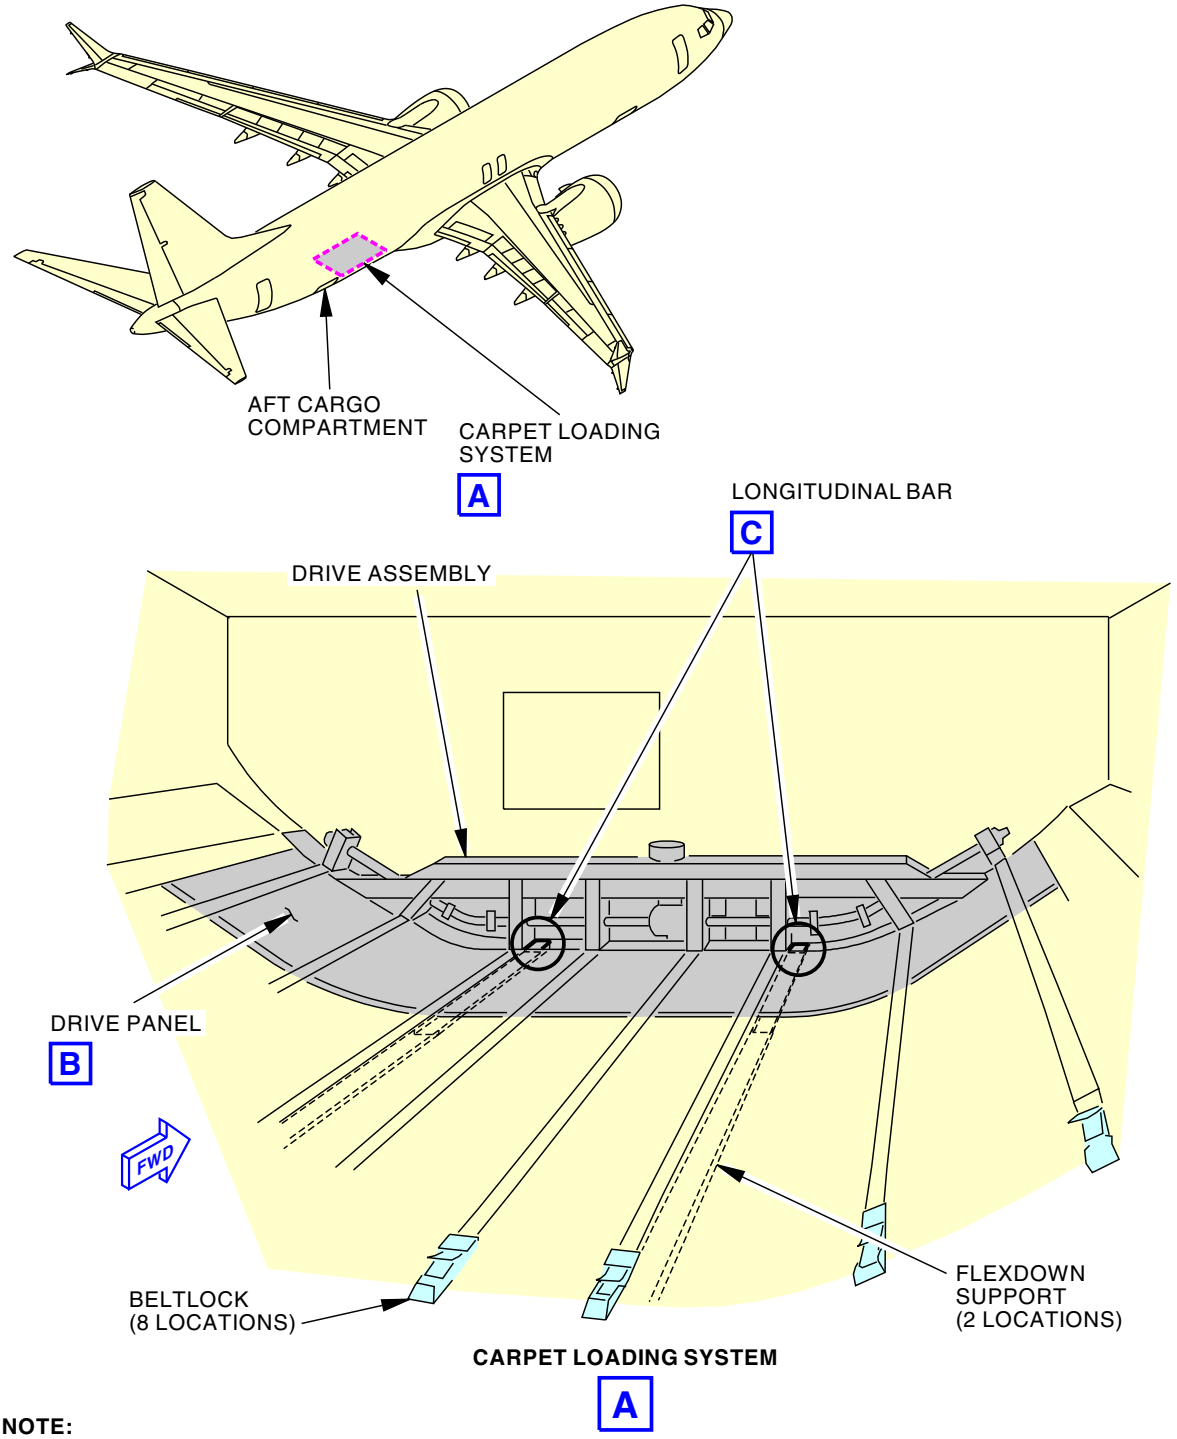


NOTE:
MOVABLE BULKHEAD IS NOT SHOWN

2551759 S0000607974_V2


Aft Cargo Compartment Drive Assembly Installation
Figure 401/50-21-05-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

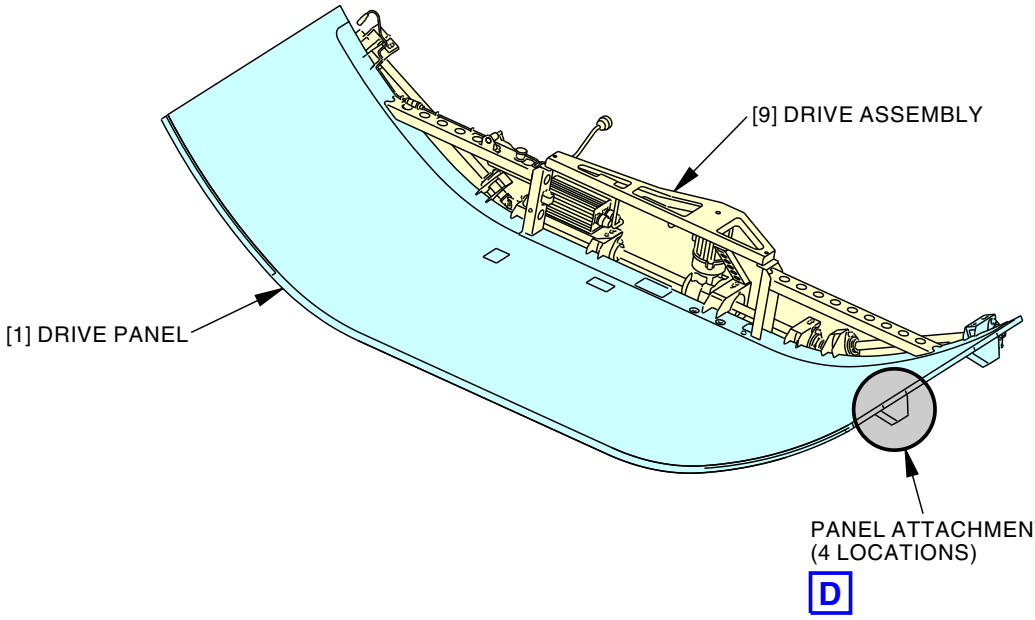


DRIVE ASSEMBLY

B

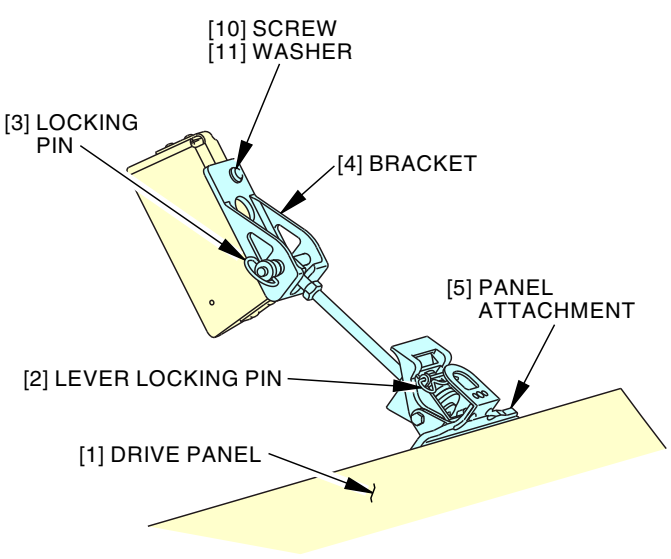

PANEL ATTACHMENT (EXAMPLE)

D

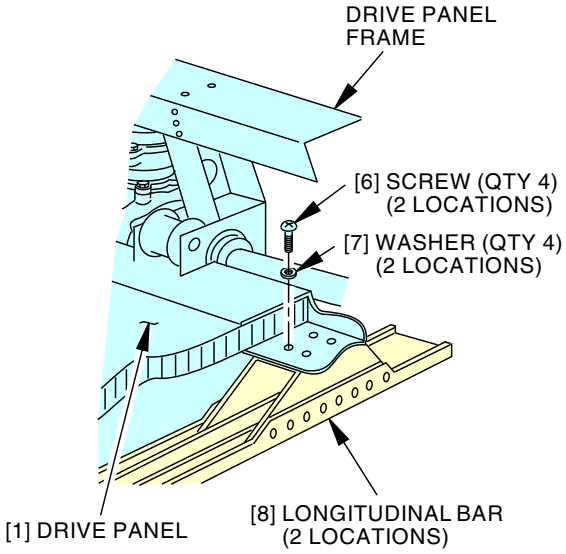

LONGITUDINAL BAR (EXAMPLE)

C

2551761 S0000607975_V3

Aft Cargo Compartment Drive Assembly Installation
Figure 401/50-21-05-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-05-400-801

3. Aft Cargo Compartment Drive Assembly Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment drive assembly.

B. References

Reference	Title
50-21-04-400-801	Aft Cargo Compartment Guide Panel Installation (P/B 201)
50-21-04-400-802	Aft Cargo Compartment Support Panels Installation (P/B 401)
50-21-04-820-801	Aft Cargo Compartment Drive, Guide, and Support Panels Height Adjustment (P/B 501)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
9	Drive assembly	50-21-00-01-035	PTF ALL

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Aft Cargo Compartment Drive Assembly - Prepare for Installation

SUBTASK 50-21-05-420-014

(1) If necessary, install the panel attachment [5] on the drive panel [1].

SUBTASK 50-21-05-420-015

(2) Make sure that the lever locking pin [2] is in transport position.

NOTE: This is to prevent the panel attachment from folding in underneath the panel.

F. Aft Cargo Compartment Drive Assembly Installation

SUBTASK 50-21-05-820-001

(1) Put the drive assembly [9] into its position on the flexdowns.

(a) If necessary, instal the brackets [4] to the sloping side wall with the two screws [10] and washers [11].

(b) Make sure that the drive panel [1] is parallel with the bulkhead.

(c) Make sure that the panel attachments [5] points correspond with the brackets [4] position.

SUBTASK 50-21-05-420-001

(2) Install the four screws [6] and washers [7] that attach the drive panel [1] to the longitudinal bar [8].

SUBTASK 50-21-05-420-002

(3) To connect the panel attachments [5] to the bracket [4], do these steps:

(a) Release the lever locking pin [2] on the panel attachment [5] from transport position.

(b) Lower the panel attachment [5] into the bracket [4].

(c) Install the locking pin [3] that attached the panel attachment [5] to the bracket [4].

(d) Close the panel attachment lever arm.

(e) Install the lever locking pin [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-05-410-001

(1) Install the support panels (TASK 50-21-04-400-802).

SUBTASK 50-21-05-410-002

(2) Install the guide panel (TASK 50-21-04-400-801).

SUBTASK 50-21-05-820-003

(3) Adjust the drive panel (TASK 50-21-04-820-801).

SUBTASK 50-21-05-420-004

(4) Attach the carpet (TASK 50-21-05-400-802).

——— END OF TASK ———

TASK 50-21-05-000-802

4. Aft Cargo Compartment Carpet Detachment

(Figure 402)

A. General

(1) This task gives the instructions to detach the aft cargo compartment carpet.

B. References

Reference	Title
50-21-01-000-801	Aft Cargo Compartment Movable Bulkhead Removal (P/B 401)
50-21-02-000-801	Aft Cargo Compartment Side Guide Removal (P/B 401)
50-21-03-000-801	Aft Cargo Compartment Ramp Removal (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Detachment

SUBTASK 50-21-05-010-006

(1) Remove the movable bulkhead (TASK 50-21-01-000-801).

SUBTASK 50-21-05-010-007

(2) Remove the side guide (TASK 50-21-02-000-801).

SUBTASK 50-21-05-010-004

(3) Remove the ramp (TASK 50-21-03-000-801).

E. Aft Cargo Compartment Carpet Detachment

SUBTASK 50-21-05-020-013

(1) Open the cover.

SUBTASK 50-21-05-020-004

(2) Pull the locking pin [21] from the belt tensioner [22].

SUBTASK 50-21-05-020-005

(3) Release the two lock arms [23] that hold the cog wheel [24] on the belt tensioner [22] to loose the belt [30].

SUBTASK 50-21-05-020-012

(4) Remove the cotter pins [27] to disconnect the chain lock [26].


ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 50-21-05-020-006

(5) Remove the screw [28] on each clamp assemblies [29] to disconnect the clamp assembly [29] from the belt [25].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

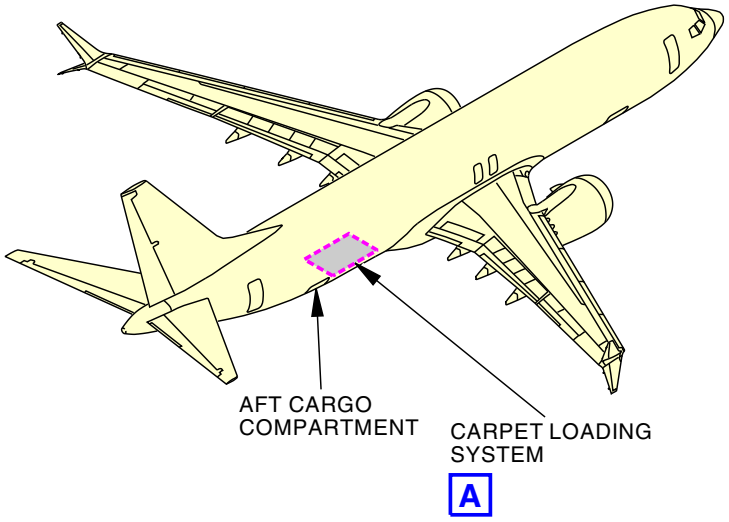

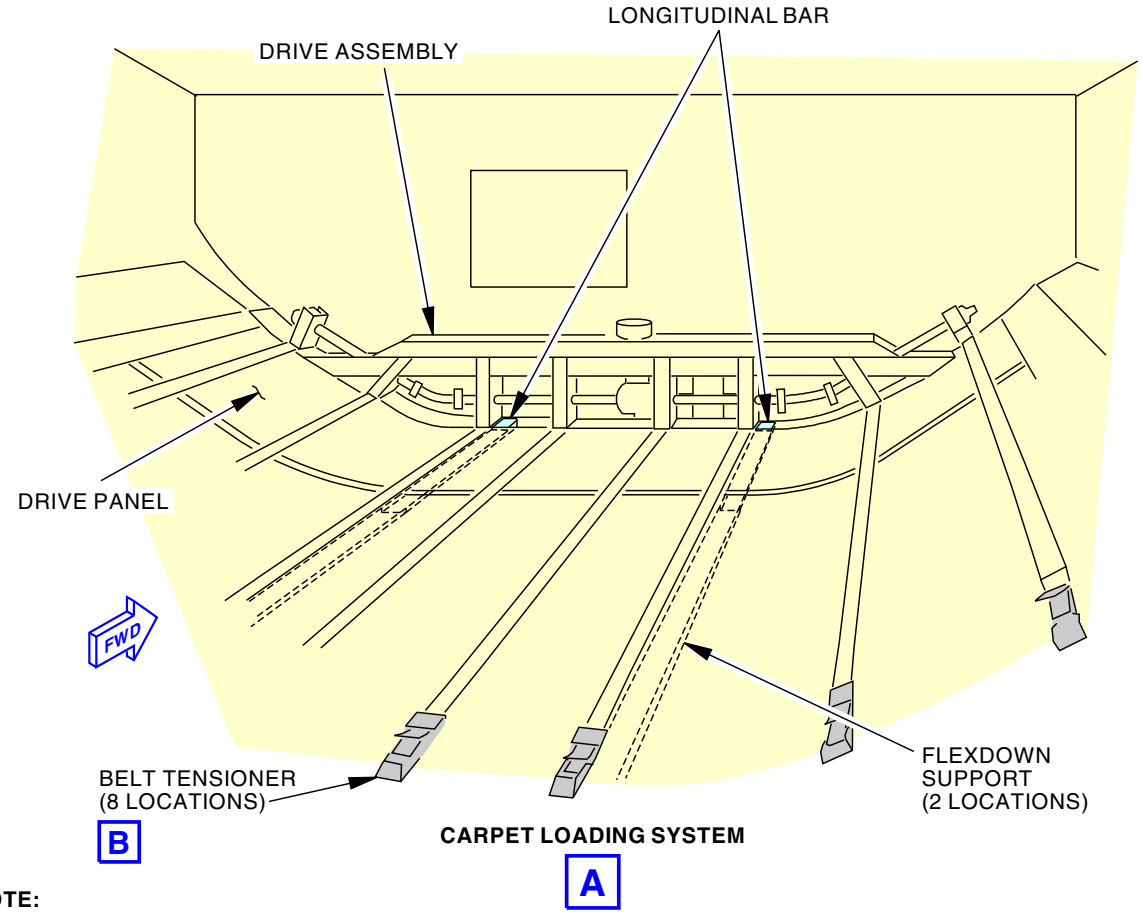


NOTE:
MOVABLE BULKHEAD IS NOT SHOWN

2788330 S0000633634_V1

Aft Cargo Compartment Carpet Attachment
Figure 402/50-21-05-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

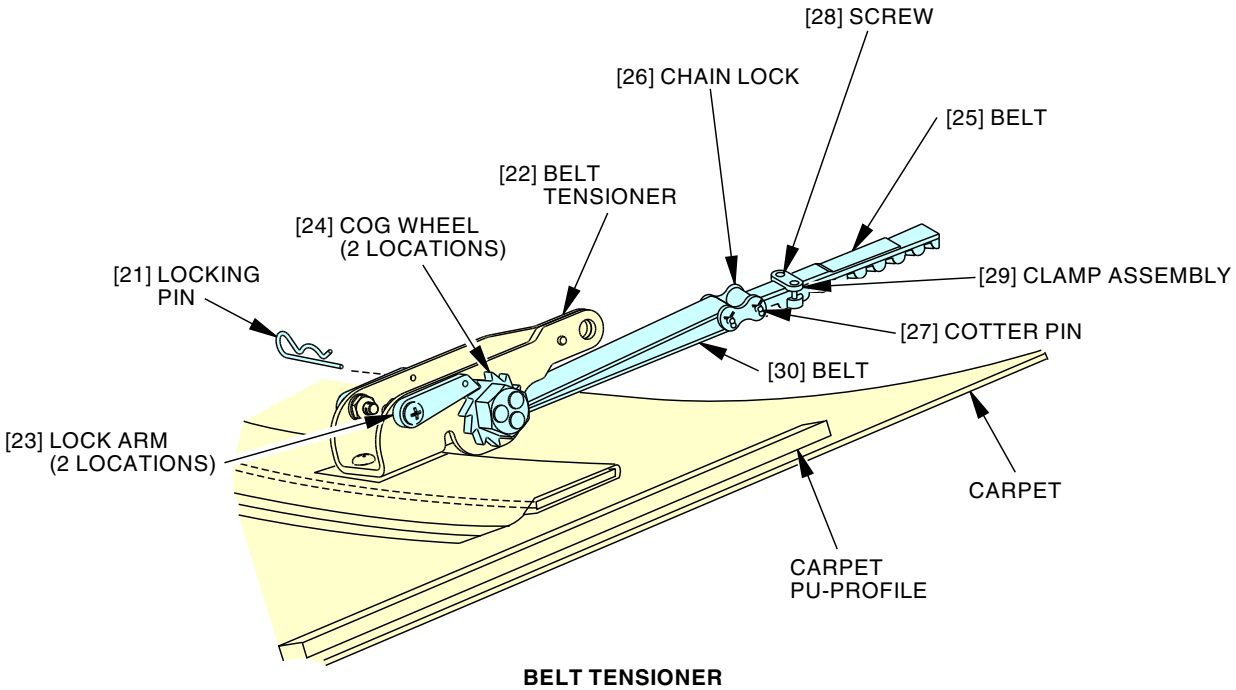

NOTE:
COVER IS NOT SHOWN

2551779 S0000607976_V4

Aft Cargo Compartment Carpet Attachment
Figure 402/50-21-05-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-05-400-802

5. Aft Cargo Compartment Carpet Attachment

(Figure 402)

A. General

(1) This task gives the instructions to attach the aft cargo compartment carpet.

B. References

Reference	Title
50-21-01-400-801	Aft Cargo Compartment Movable Bulkhead Installation (P/B 401)
50-21-02-400-801	Aft Cargo Compartment Side Guide Installation (P/B 401)
50-21-03-400-801	Aft Cargo Compartment Ramp Installation (P/B 401)
50-21-04-400-801	Aft Cargo Compartment Guide Panel Installation (P/B 201)
50-21-04-400-802	Aft Cargo Compartment Support Panels Installation (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Attachment

SUBTASK 50-21-05-410-003

(1) Make sure that the support panels are installed (TASK 50-21-04-400-802).

SUBTASK 50-21-05-410-004

(2) Make sure the guide panel is installed (TASK 50-21-04-400-801).

SUBTASK 50-21-05-410-005

(3) Put the carpet on the guide panel.

NOTE: Make sure that the cargo compartment is clean.

(a) Make sure that the carpet is on the center of the guide panel.

E. Aft Cargo Compartment Carpet Attachment

SUBTASK 50-21-05-420-005

(1) To install the belt [25] do these steps:

(a) Extend the belt [25].

1) Make sure that the belt [25] is not twisted.

(b) Install the chain lock [26] to connect the belt [25] to the belt [30].

(c) Install the cotter pin [27] to lock the chain lock [26].

(d) Install the clamp assembly [29] on the belt [25].

(e) Install the screw [28] in the each clamp assemblies [29].

(f) Turn the cog-wheel, enough to stretch the carpet and the belt [25].

(g) Guide the end of the belt [30] through the belt tensioner [22].

1) Make sure that the belt [30] is not twisted.

(h) Align the lock arms [23] with the cog wheel [24].

NOTE: This prevents the cog-wheels from rotating.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-05-420-007

(2) Aft cargo compartment carpet adjustment.

(a) Make sure that the belt [30] of the belt tensioner [22] is fully extended.

(b) Make sure that the belt [25] and belt [30] is not twisted.

(c) Turn the cog wheel [24] a 1/4 to a 1/3 of a turn on each belt tensioner [22].

NOTE: Start at the center of the carpet and go outwards, alternating the left and right side.

(d) Tighten each belt [30] to 177 in-lb (20 N·m) - 195 in-lb (22 N·m).

(e) Install the locking pin [21] to lock the lock arms [23].

(f) Close the cover.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-05-410-006

(1) Do this task: Aft Cargo Compartment Ramp Installation, TASK 50-21-03-400-801.

SUBTASK 50-21-05-410-008

(2) Do this task: Aft Cargo Compartment Side Guide Installation, TASK 50-21-02-400-801.

SUBTASK 50-21-05-410-009

(3) Do this task: Aft Cargo Compartment Movable Bulkhead Installation, TASK 50-21-01-400-801.

END OF TASK

TASK 50-21-05-000-803

6. Aft Cargo Compartment Actuator Motor Removal

(Figure 403)

A. General

(1) This task gives the instructions to remove the aft cargo compartment actuator motor.

B. References

Reference	Title
50-21-01-000-801	Aft Cargo Compartment Movable Bulkhead Removal (P/B 401)
70-00-01-910-803-G00	Electrical Connector Disconnection and Connection (P/B 201)

C. Tools/Equipment

Reference	Description
STD-664	Pliers - Teflon-jawed (or Equivalent Soft-Jawed)

D. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Prepare for the Removal

SUBTASK 50-21-05-010-005

(1) Remove the movable bulkhead (TASK 50-21-01-000-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-05-020-007

CAUTION

MAKE SURE ELECTRICAL CONNECTORS ARE CLEAN WHEN YOU DISCONNECT THEM. CONTAMINATION OF ELECTRICAL CONNECTORS CAN CAUSE DAMAGE TO EQUIPMENT.

CAUTION

USE TEFLON-JAWED PLIERS TO LOOSEN ELECTRICAL CONNECTORS. DO NOT USE METAL-JAWED PLIERS. DAMAGE TO THE ELECTRICAL CONNECTORS COULD OCCUR.

(2) Use the teflon-jawed pliers, STD-664 to disconnect the electrical connector [44] from the actuator motor [43] (TASK 70-00-01-910-803-G00).

(a) Disconnect the electrical connector [44] from the actuator motor [43].

(b) Install the protective covers on the electrical receptacle of the actuator motor [43] and the electrical connector [44].

F. Aft Cargo Compartment Actuator Motor Removal

SUBTASK 50-21-05-020-011

(1) Remove the top member [45] from the drive assembly.

(a) Remove the screw [46], washer [47], and nut [48].

(b) Remove the screw [49], washers [50], and nut [51].

SUBTASK 50-21-05-020-008

(2) Remove the lockwire.

SUBTASK 50-21-05-020-009


(3) Remove the three screws [42] and washers [41].

SUBTASK 50-21-05-020-010

(4) Remove the actuator motor [43] from the gearbox.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

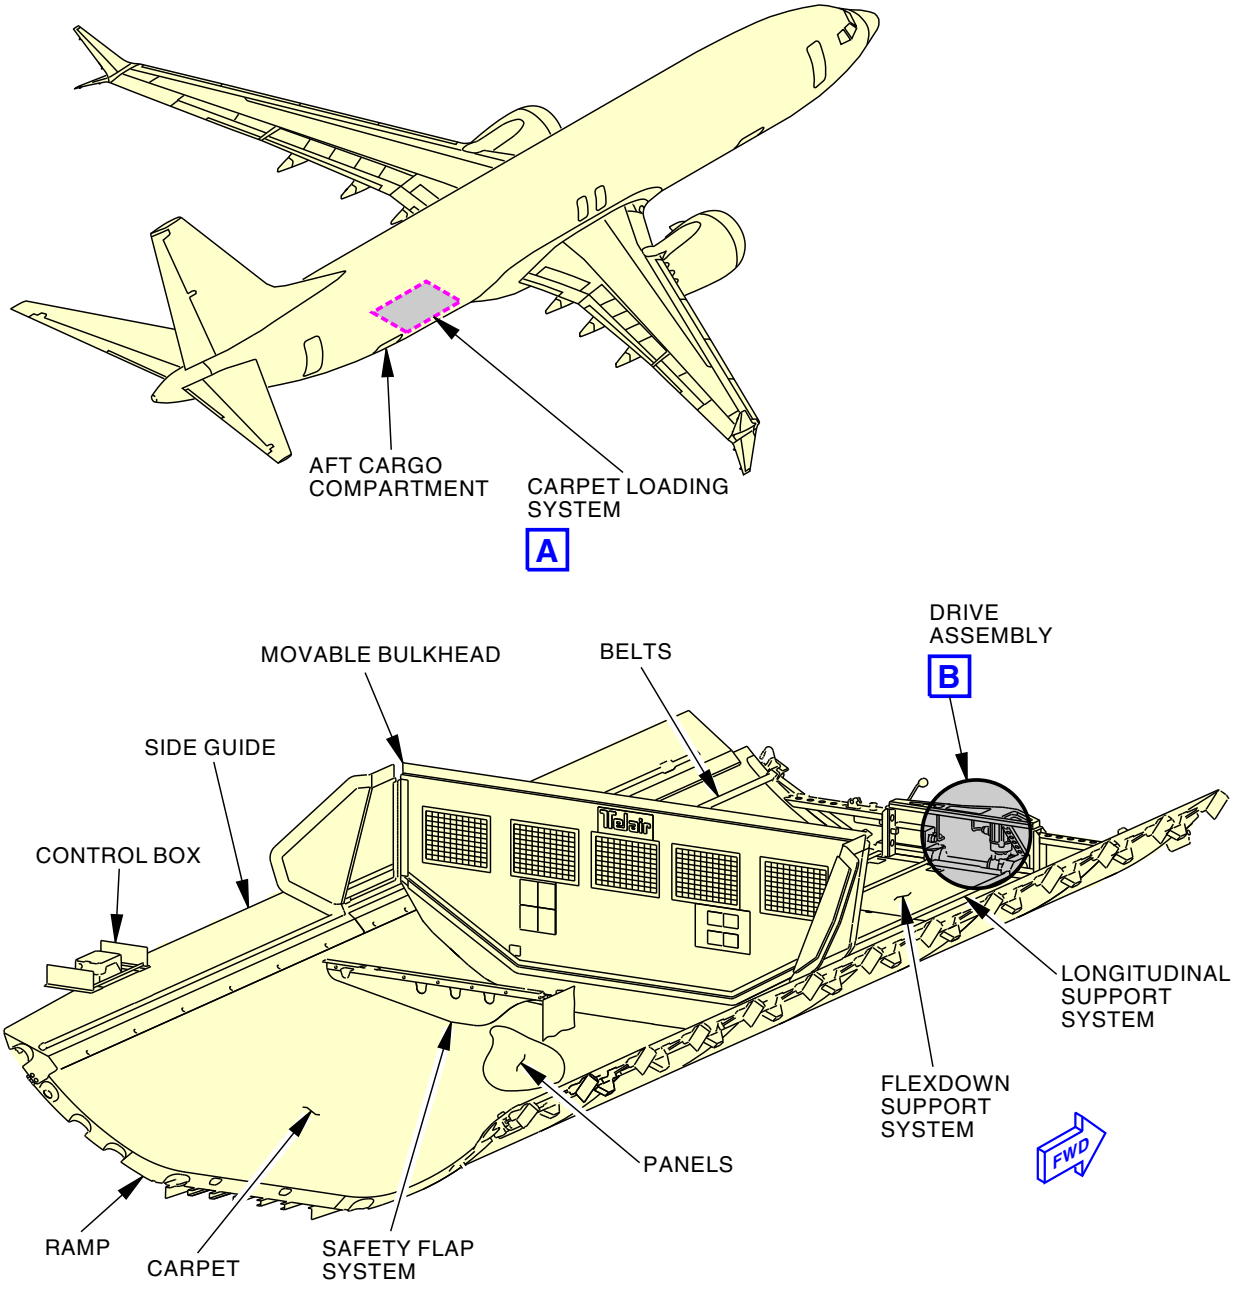


CARPET LOADING SYSTEM

A

2550345 S0000607401_V2

Aft Sliding Carpet Loading System Drive - Actuator Motor Installation
Figure 403/50-21-05-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

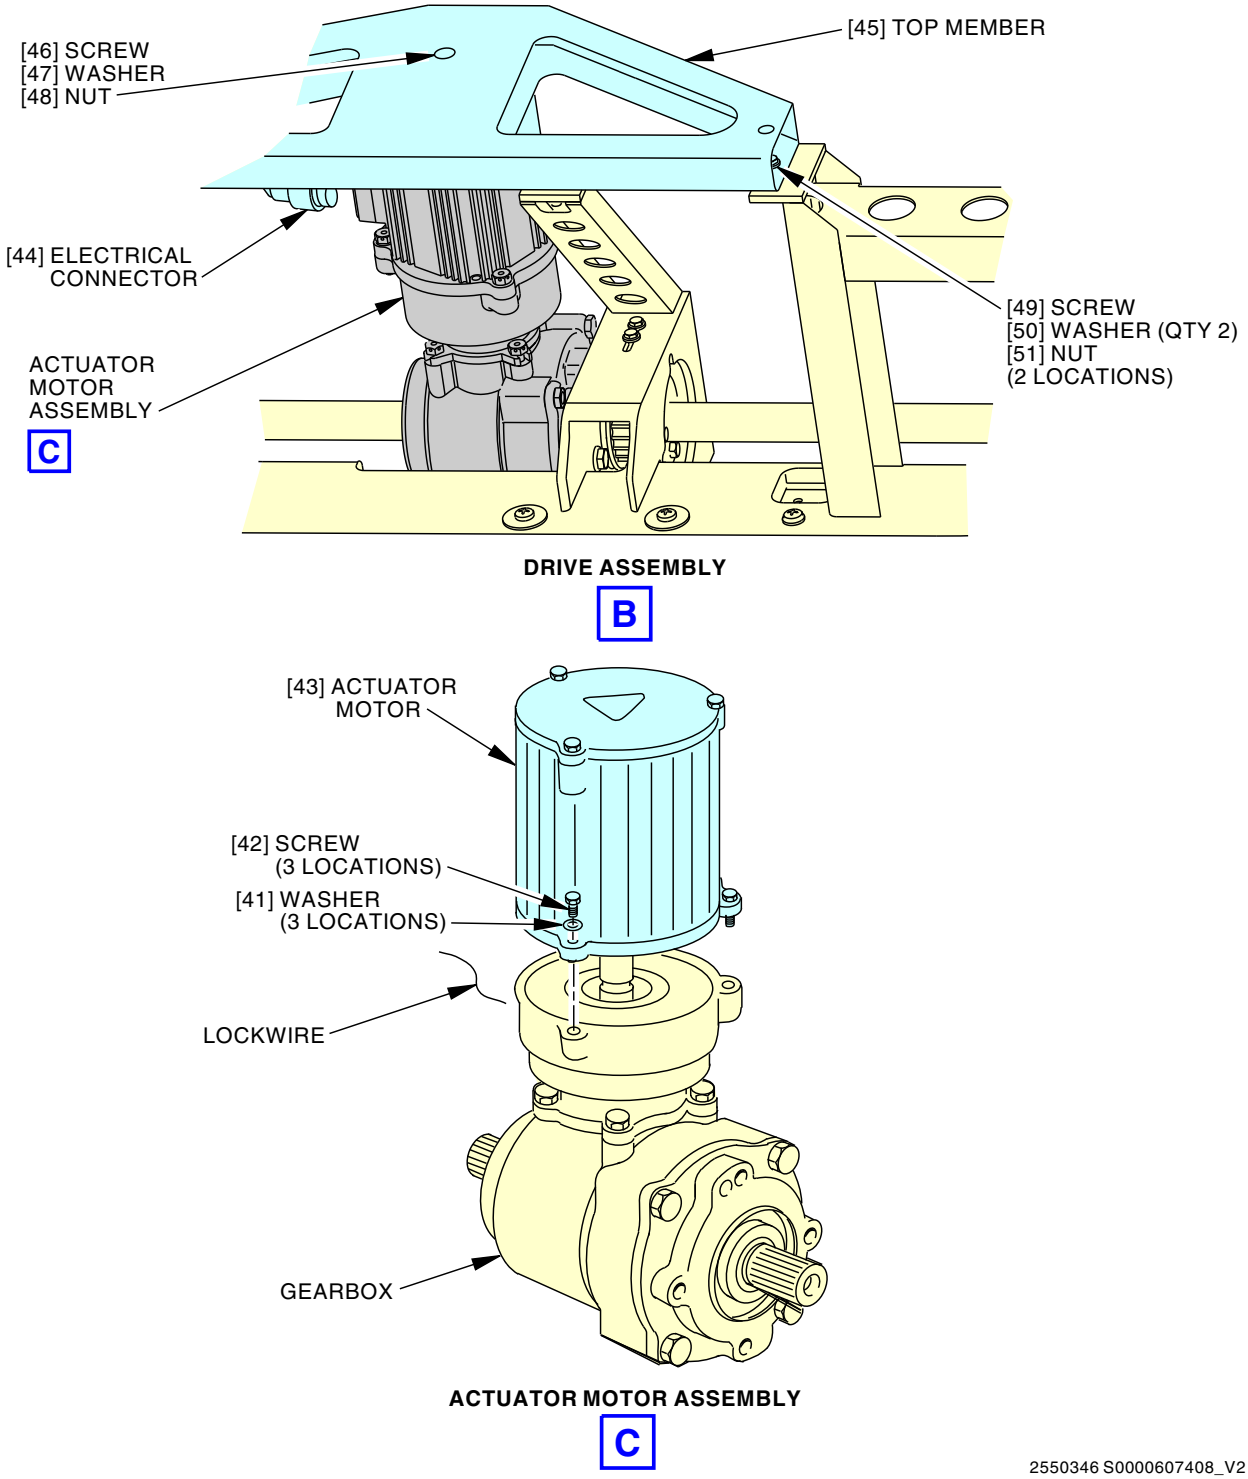

Aft Sliding Carpet Loading System Drive - Actuator Motor Installation
Figure 403/50-21-05-990-803 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-05-400-803

7. Aft Cargo Compartment Actuator Motor Installation

(Figure 403)

A. General

(1) This task gives the instructions to install the aft cargo compartment actuator motor.

B. References

Reference	Title
50-21-01-400-801	Aft Cargo Compartment Movable Bulkhead Installation (P/B 401)
70-00-01-910-803-G00	Electrical Connector Disconnection and Connection (P/B 201)

C. Tools/Equipment

Reference	Description
STD-664	Pliers - Teflon-jawed (or Equivalent Soft-Jawed)

D. Consumable Materials

Reference	Description	Specification
G01048	Lockwire - MS20995C32, Corrosion Resistant Steel - 0.032 Inch (0.8128 mm) Diameter	NASM20995

E. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

F. Aft Cargo Compartment Actuator Motor Installation

SUBTASK 50-21-05-420-008

(1) Install the actuator motor [43] on the gearbox.

SUBTASK 50-21-05-420-009

(2) Install the three screws [42] and washers [41].

SUBTASK 50-21-05-420-010

(3) Tighten the screws [42] to 124 in-lb (14 N·m).

SUBTASK 50-21-05-420-011

(4) Install the MS20995C32 lockwire, G01048 on the screws [42].

SUBTASK 50-21-05-420-013

(5) Install the top member [45] on the drive assembly.

(a) Instal the screw [49], washers [50], and nut [51].

(b) Install the screw [46], washer [47], and nut [48].

SUBTASK 50-21-05-420-012

CAUTION

MAKE SURE THAT THE ELECTRICAL CONNECTOR AND RECEPTACLE ARE CLEAN WHEN YOU CONNECT THEM. DIRTY CONNECTORS CAN CAUSE DAMAGE TO EQUIPMENT.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(CAUTION PRECEDES)

CAUTION

DO NOT USE PLIERS THAT HAVE METAL JAWS TO TIGHTEN THE ELECTRICAL CONNECTOR. DAMAGE TO THE ELECTRICAL CONNECTOR CAN OCCUR.

(6) Use the teflon-jawed pliers, STD-664 to connect the electrical connector [44] to the actuator motor [43] (TASK 70-00-01-910-803-G00).

(a) Remove the protective covers from the electrical receptacle of the actuator motor [43] and the electrical connector [44].

(b) Connect the electrical connector [44] to the actuator motor [43].

1) Tighten the connector with the teflon-jawed pliers, STD-664.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-05-410-007

(1) Install the movable bulkhead (TASK 50-21-01-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM SAFETY FLAP ASSEMBLY - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment safety flap assembly removal

(2) Aft cargo compartment safety flap assembly installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

TASK 50-21-06-000-801

2. Aft Cargo Compartment Safety Flap Assembly Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment safety flap assembly.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Prepare for the Removal

SUBTASK 50-21-06-860-007

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-06-010-003

(2) To get access to the P91 and P92 panels, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-06-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING	DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

E. Aft Cargo Compartment Safety Flap Assembly Removal

SUBTASK 50-21-06-010-001

(1) Remove the safety flap [6].

(a) Remove the four screws [1] and 12 washers [2] that attach the safety flap [6] to the ceiling.

(b) Remove the safety flap [6].

SUBTASK 50-21-06-020-001

(2) Remove the switch box [4] and the switch [5].

(a) Remove the two screws [3] that attach the switch box [4] to the sidewall.

(b) Disconnect the switch [5] from the wiring.


1) Hide the wires behind the lining.


2) Attach the lining to the ceiling with four screws [1].

(c) Remove the screws, washers and back plate that attach the switch [5] to the switch box [4].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

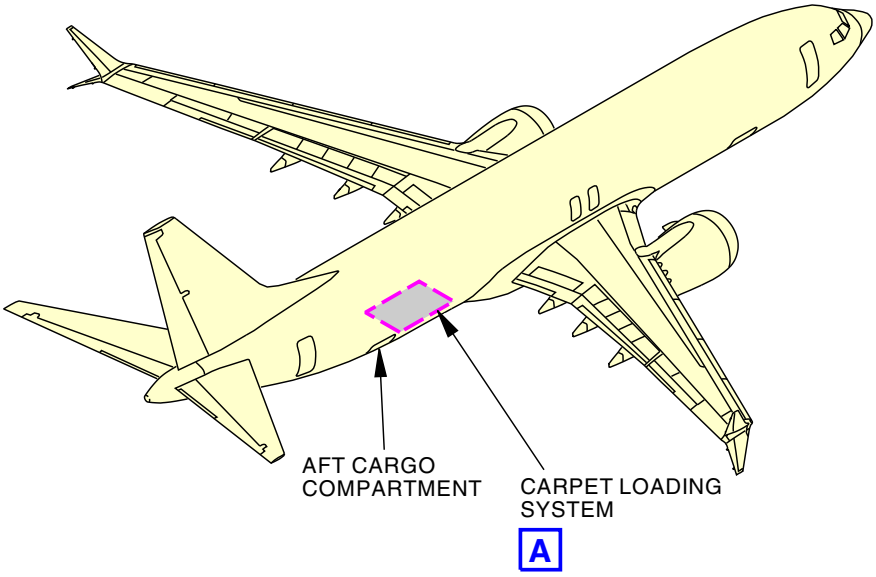

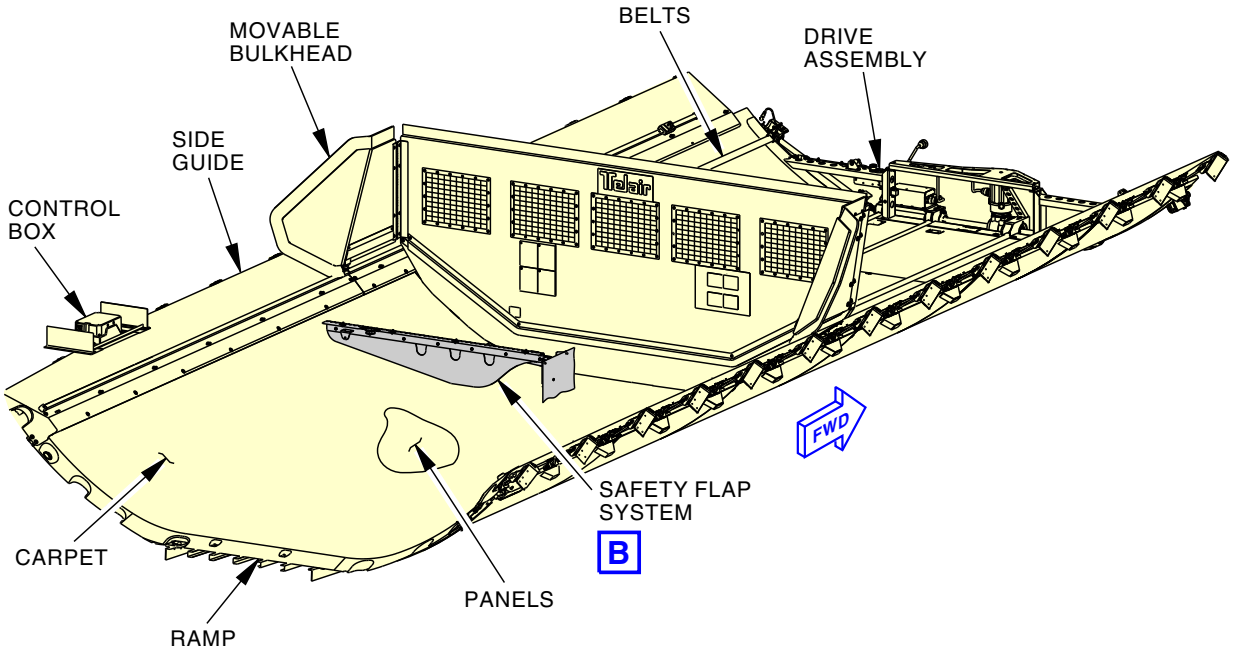


CARPET LOADING SYSTEM

A

2550887 S0000607670_V2

Aft Cargo Compartment Safety Flap Assembly Installation
Figure 401/50-21-06-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

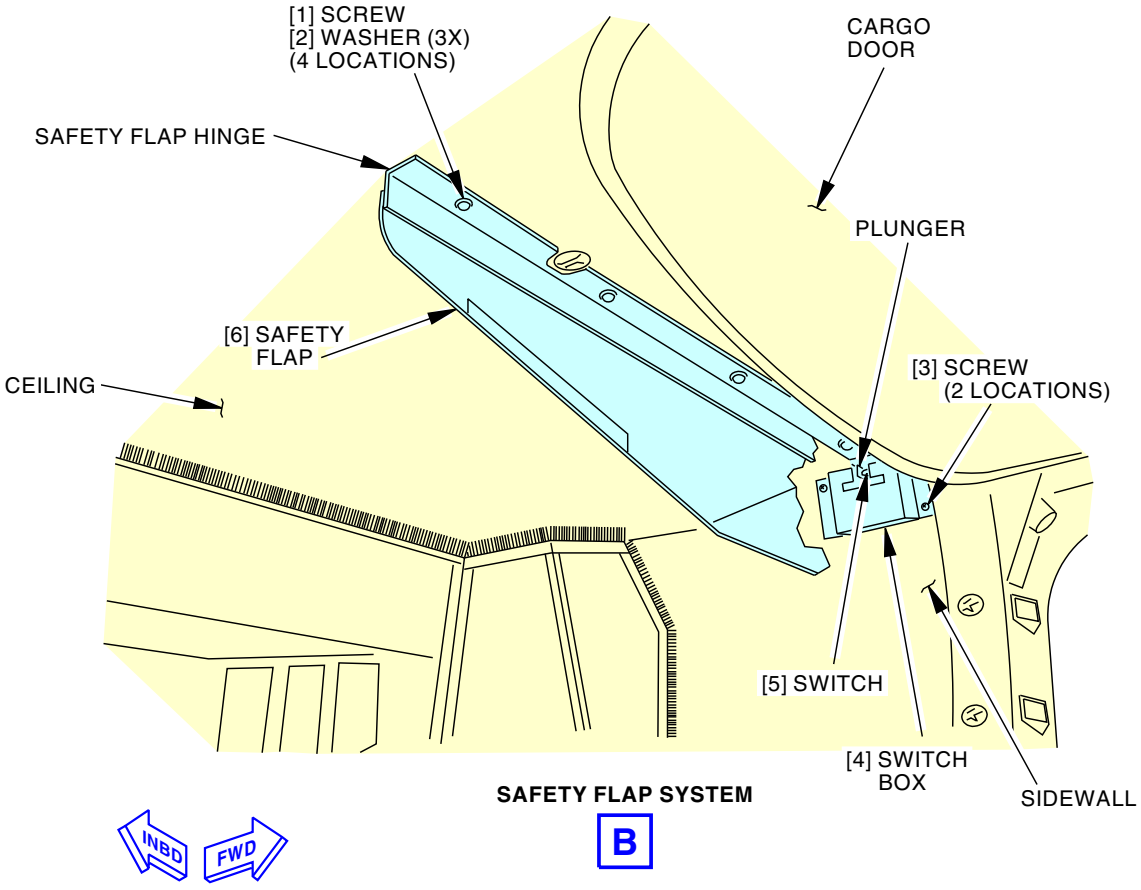

2550890 S0000607671_V1

Aft Cargo Compartment Safety Flap Assembly Installation
Figure 401/50-21-06-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-06-400-801

3. Aft Cargo Compartment Safety Flap Assembly Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment safety flap assembly.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Aft Cargo Compartment Safety Flap Assembly Installation

SUBTASK 50-21-06-420-001

(1) Install the switch box [4] and the switch [5].

(a) Connect the wiring to the switch [5].

(b) Attach the switch [5] to the switch box [4] with screws, washers and back plate.

(c) Install the two screws [3] that attach the switch box [4] to the sidewall.

(d) Tighten the two screws [3] to 35.0 ±3.5 in-lb (4.0 ±0.4 N·m).

SUBTASK 50-21-06-420-002

(2) Install the safety flap [6].

(a) Align the plunger on the safety flap [6] with the switch box [4].

(b) Install the screw [1] and three washers [2] that attach the safety flap [6] to the ceiling (4 locations).

1) Install two washers [2] between the safety flap hinge and ceiling.

2) Install the third washer [2] under the screw [1] head.

SUBTASK 50-21-06-710-001

(3) Make sure that the safety flap hinge bends freely.

(a) As required, add washers [2] to the four fastener locations.

NOTE: Each fastener location can handle a maximum of six washers [2].

SUBTASK 50-21-06-420-003

(4) Tighten each screw [1] to 35.0 ±3.5 in-lb (4.0 ±0.4 N·m).

E. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-06-860-008

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-06-860-009

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-06-860-010

(3) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-06-710-002

(4) Move the safety flap [6] approximately 1 in. (25 mm).

(a) Make sure the switch [5] turns off the power to the Sliding Carpet Loading System automatically.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM CONTROL BOX - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Aft cargo compartment control box removal.

(2) Aft cargo compartment control box installation.

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

C. The control box is installed in a frame attached to the ceiling near the cargo door. The control box has the following controls and indicators:

(1) EMERGENCY STOP button. To lift the guard to disengage the cargo loading system.

(2) Joystick. To select loading or unloading mode and operate the system.

(3) PWR AVAILABLE indicator. To show the 28V DC power is supplied to the system.

(4) Control box display. To show the system status.

(5) Navigation buttons. To operate the system.

TASK 50-21-07-000-801

2. Aft Cargo Compartment Control Box Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment control box.

B. References

Reference	Title
70-00-01-910-803-G00	Electrical Connector Disconnection and Connection (P/B 201)

C. Tools/Equipment

Reference	Description
STD-664	Pliers - Teflon-jawed (or Equivalent Soft-Jawed)

D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Prepare for the Removal

SUBTASK 50-21-07-860-002

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-07-010-001

(2) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-07-860-007

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

G. Aft Cargo Compartment Control Box Removal

SUBTASK 50-21-07-020-002

(1) Remove the control box [1] from the frame.

(a) Remove the screws [2] and washers [3] that attach the control box [1] to the frame.

CAUTION

MAKE SURE ELECTRICAL CONNECTORS ARE CLEAN WHEN YOU DISCONNECT THEM. CONTAMINATION OF ELECTRICAL CONNECTORS CAN CAUSE DAMAGE TO EQUIPMENT.

CAUTION

USE TEFLON-JAWED PLIERS TO LOOSEN ELECTRICAL CONNECTORS. DO NOT USE METAL-JAWED PLIERS. DAMAGE TO THE ELECTRICAL CONNECTORS COULD OCCUR.

(b) Use the teflon-jawed pliers, STD-664, to disconnect the electrical connector [4] from the control box [1] (TASK 70-00-01-910-803-G00).

1) Move the control box [1] to get access to the electrical connector [4].

ECCN 9E991 BOEING PROPRIETARY - See title page for details


2) Disconnect the electrical connector [4] from the control box [1].

3) Install the protective covers on the electrical receptacle of the control box [1] and the electrical connector [4].

(c) Remove the control box [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

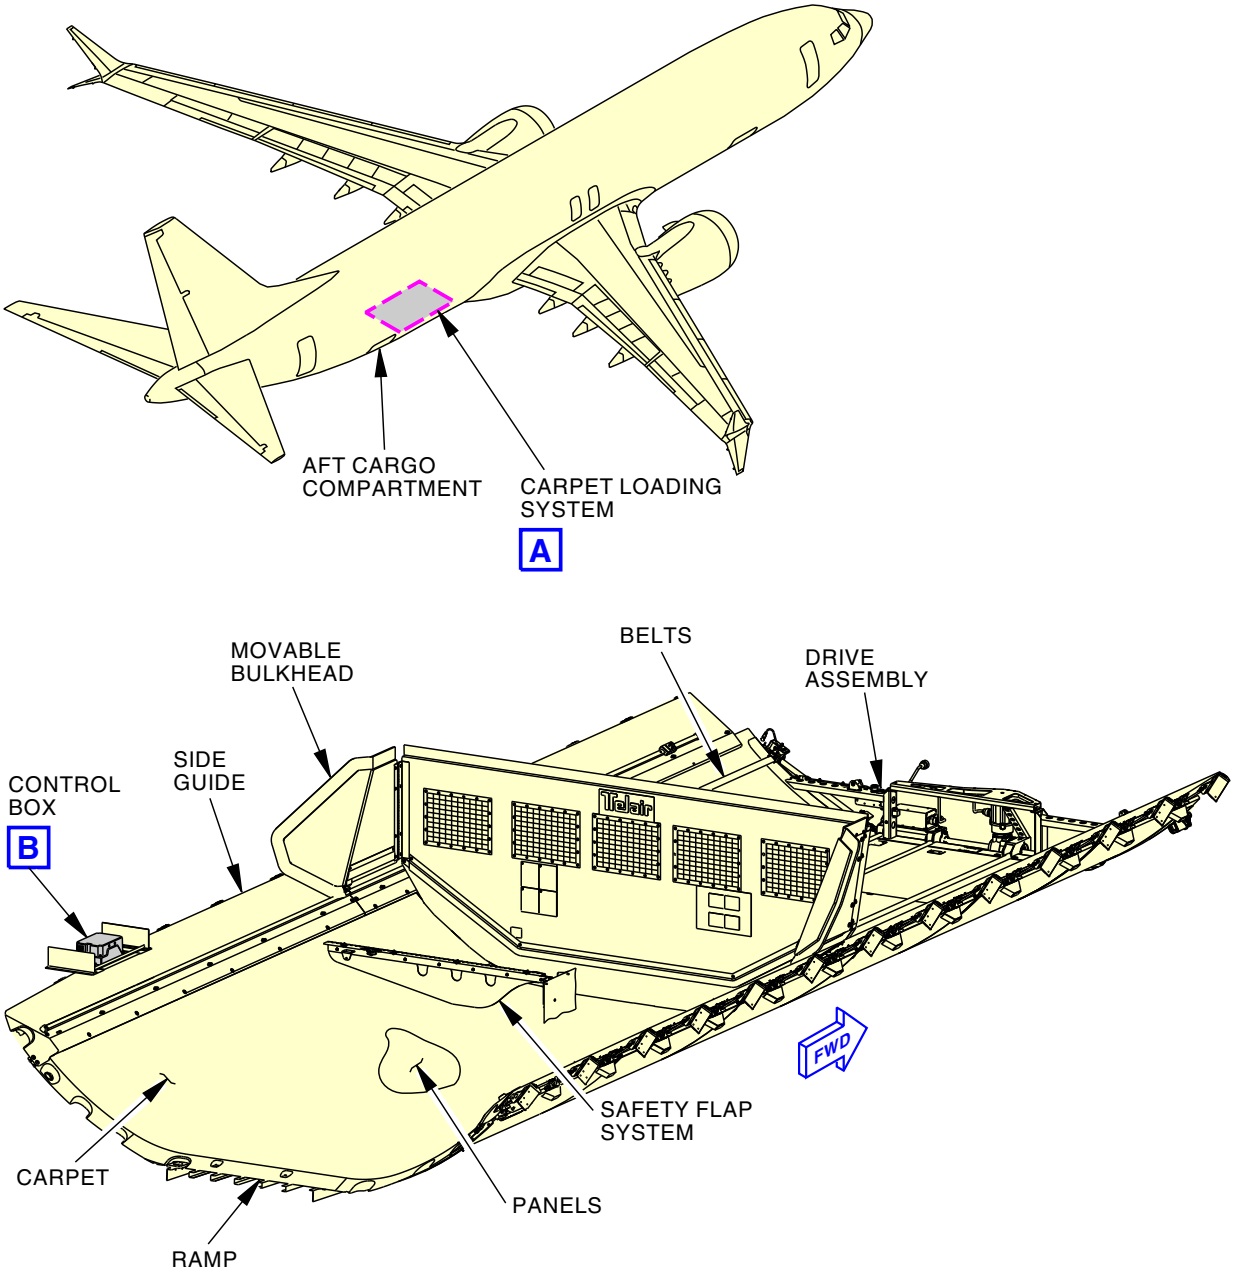


CARPET LOADING SYSTEM

A

2552806 S0000606744_V2

Aft Cargo Compartment Control Box Installation
Figure 401/50-21-07-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

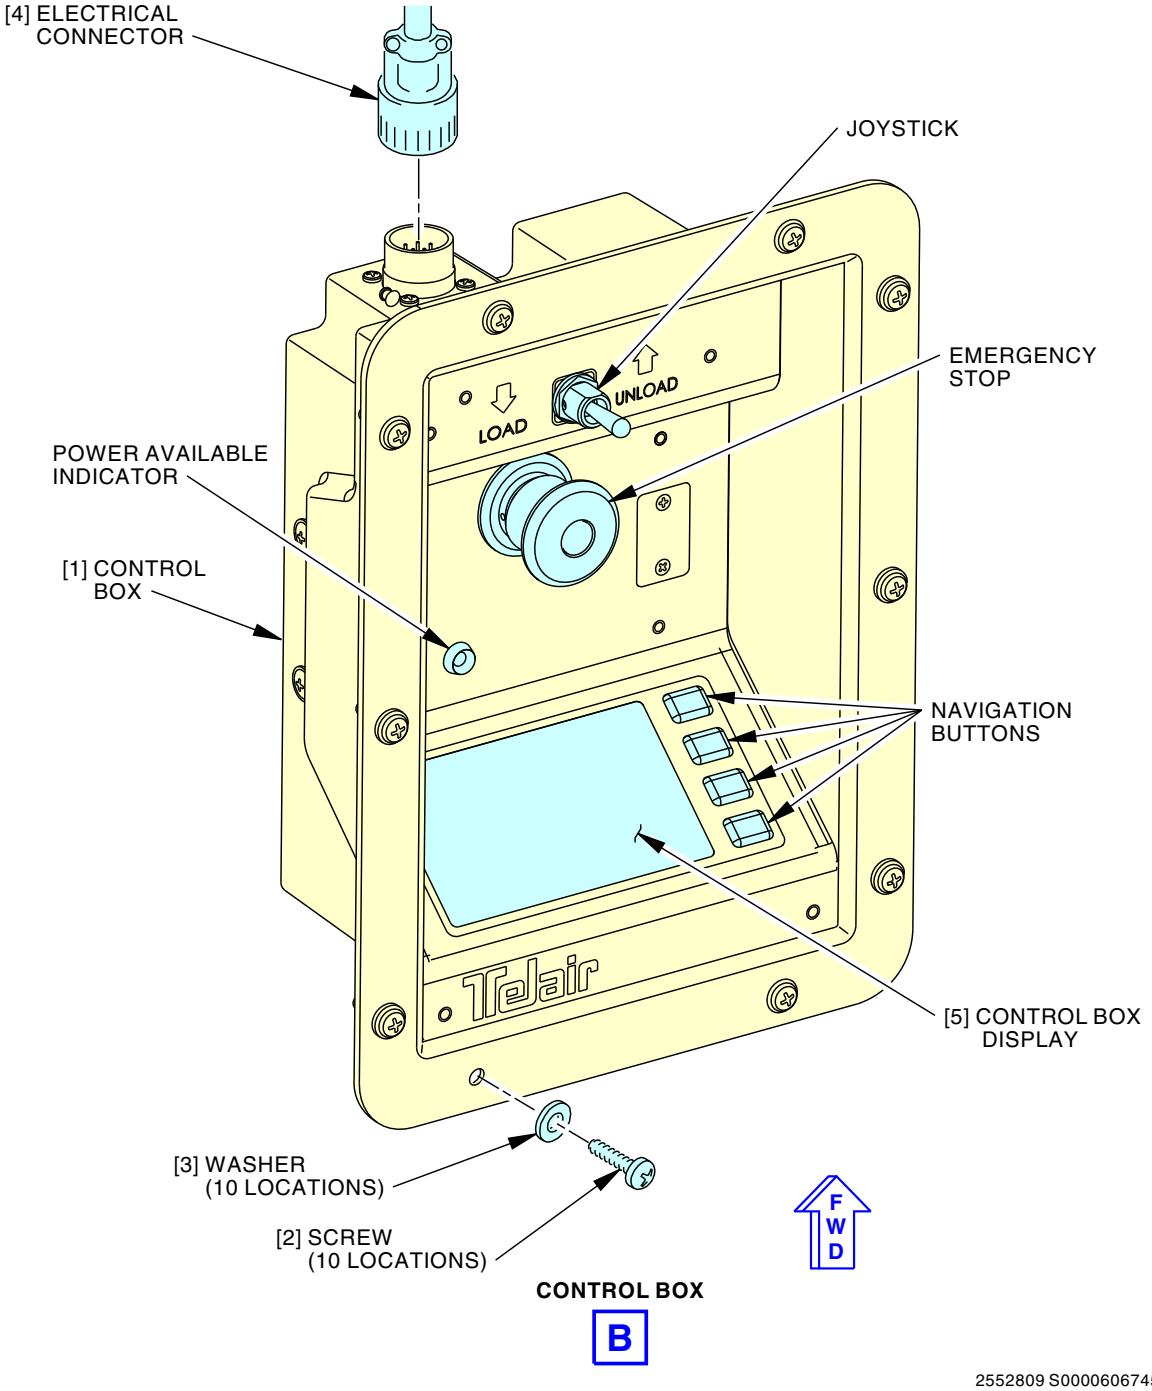

Aft Cargo Compartment Control Box Installation
Figure 401/50-21-07-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-07-400-801

3. Aft Cargo Compartment Control Box Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment control box.

B. References

Reference	Title
50-21-00-700-801	Aft Cargo Compartment Sliding Carpet Loading System Operational Test (P/B 601)
70-00-01-910-803-G00	Electrical Connector Disconnection and Connection (P/B 201)

C. Tools/Equipment

Reference	Description
STD-664	Pliers - Teflon-jawed (or Equivalent Soft-Jawed)

D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Prepare for the Installation

SUBTASK 50-21-07-860-005

(1) Make sure that this circuit breaker is open and has safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

SUBTASK 50-21-07-860-008

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Make sure that this circuit breaker is open and has safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

G. Aft Cargo Compartment Control Box Installation

SUBTASK 50-21-07-420-002

(1) Install the control box [1] in the frame.

(a) Hold the control box [1] in the correct position.

CAUTION MAKE SURE THAT THE ELECTRICAL CONNECTOR AND RECEPTACLE ARE CLEAN WHEN YOU CONNECT THEM. DIRTY CONNECTORS CAN CAUSE DAMAGE TO EQUIPMENT.

CAUTION USE TEFLON-JAWED PLIERS TO LOOSEN ELECTRICAL CONNECTORS. DO NOT USE METAL-JAWED PLIERS. DAMAGE TO THE ELECTRICAL CONNECTORS COULD OCCUR.

(b) Use the teflon-jawed pliers, STD-664, to connect the electrical connector [4] to the control box [1] (TASK 70-00-01-910-803-G00).

1) Remove the protective covers from the electrical receptacle of the control box [1] and the electrical connector [4].

2) Connect the electrical connector [4] to the control box [1].

a) Tighten the connector with the teflon-jawed pliers, STD-664.

(c) Install the screws [2] and washers [3] to attach the control box [1] to the frame.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-07-860-009

WARNING WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-07-410-001

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-07-860-006

(3) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
C	21	C01139	AFT CARGO LOADER CONT

I. Aft Cargo Compartment Control Box Installation Test

SUBTASK 50-21-07-710-007

(1) Do a test of the control box [1].

(a) Make sure that the green light on PWR AVAILABLE indicator is on.

(b) Push the EMERGENCY STOP button on the control box [1].

1) Make sure that the System Blocked Emergency Stop screen comes on the control box display [5].

(c) Release the EMERGENCY STOP button on the control box [1].

(d) Push the joystick to the LOAD or UNLOAD position.

1) Make sure that the carpet moves.

J. Operational Test

SUBTASK 50-21-07-710-008

(1) Do this task: Aft Cargo Compartment Sliding Carpet Loading System Operational Test, TASK 50-21-00-700-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM SUPPORT SYSTEMS - REMOVAL/INSTALLATION

1. General

A. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks.

B. The flexdown support system is attached to the aircraft cargo compartment floor by screws in order to achieve a controlled surface for the panels to flex down against during flight conditions. This is to prevent excessive loads on the airframes.

C. The longitudinal support system secures the loading system in fwd and aft directions. It attaches the loading system to the deck floor at the tie-down attachment points. The two serviceable inertia loads from the cargo load are reacted by the longitudinal support system, preventing the airframe from being damaged by these type of loads. The vertical reaction loads from the torque of the motor are also reacted by the longitudinal support system.

D. This procedure has these tasks:

(1) Aft cargo compartment flexdown support system removal

(2) Aft cargo compartment flexdown support system installation

(3) Aft cargo compartment longitudinal support system removal

(4) Aft cargo compartment longitudinal support system installation.

TASK 50-21-08-000-801

2. Aft Cargo Compartment Flexdown Support System Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the aft cargo compartment flexdown support system.

(2) The part numbers are different for the flexdown supports. The same procedure is used to remove all the flexdown supports.

B. References

Reference	Title
50-21-05-000-801	Aft Cargo Compartment Drive Assembly Removal (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Removal

SUBTASK 50-21-08-010-001

(1) Do this task: Aft Cargo Compartment Drive Assembly Removal, TASK 50-21-05-000-801.

SUBTASK 50-21-08-020-001

(2) Use a permanent marking pen to put marks on the cargo compartment floor at each end and along the inboard edge of each flexdown support.

NOTE: These marks are used to show the locations to install the flexdown supports.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Aft Cargo Compartment Flexdown Support System Removal

SUBTASK 50-21-08-020-002

(1) Remove the flexdown supports from the aft cargo compartment.

(a) Remove the screws [5] and screws [6] from the flexdown feets of the flexdown support [1], flexdown support [2], flexdown support [3] and flexdown support [4].


(b) Carefully bend a small amount of each flexdown support and pull it up and away from the floor.

NOTE: The use of a suitable tool, such as a thin metal sheet, will ease the removal.

(c) Remove the flexdown support [1], flexdown support [2], flexdown support [3] and flexdown support [4] from the airplane.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

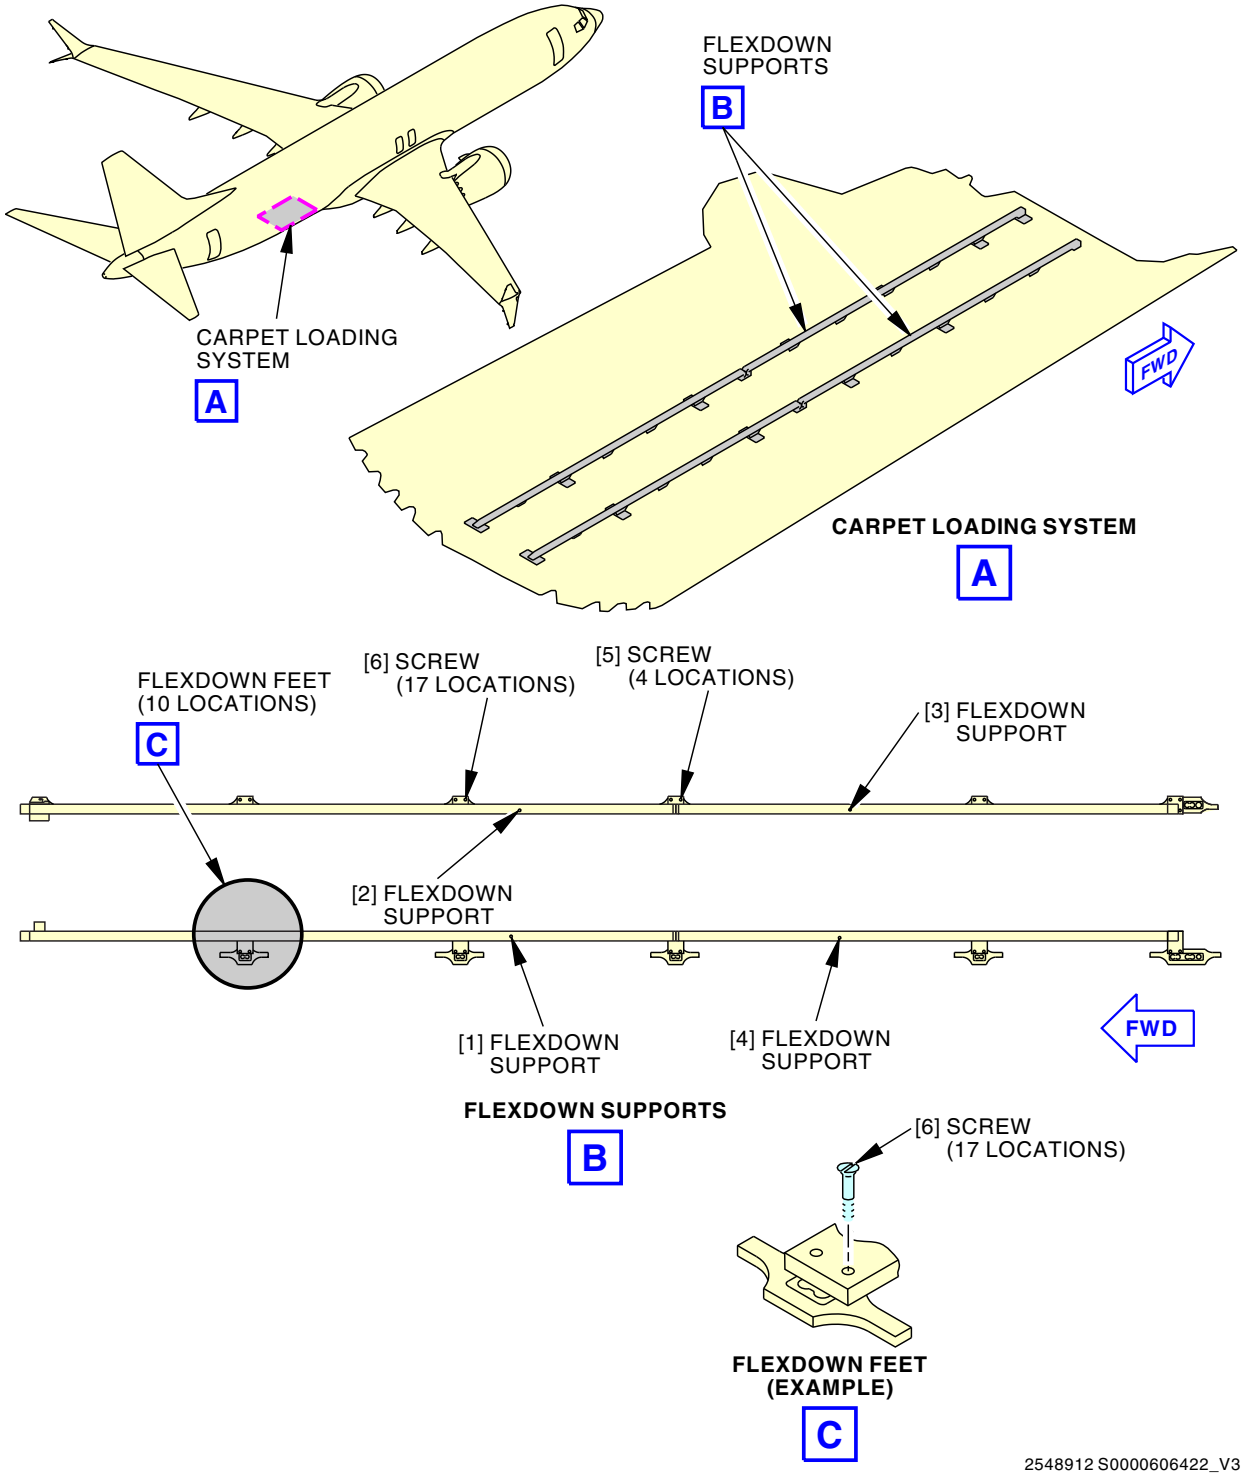

Aft Cargo Compartment Flexdown Support Installation
Figure 401/50-21-08-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-08-400-801

3. Aft Cargo Compartment Flexdown Support System Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the aft cargo compartment flexdown support system.

(2) The part numbers are different for all the flexdown supports. The same procedure is used to install all the flexdown supports.

B. References

Reference	Title
50-21-05-400-801	Aft Cargo Compartment Drive Assembly Installation (P/B 401)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Prepare for the Installation

SUBTASK 50-21-08-100-001

(1) Clean the floor and all the flexdown support feets where the flexdown support [1], flexdown support [2], flexdown support [3] and the flexdown support [4] will be installed with MEK or equivalent solvent.

(a) Make sure that the marks that show the location of the flexdown supports stay on the cargo compartment floor.

E. Aft Cargo Compartment Flexdown Support System Installation

SUBTASK 50-21-08-420-001

(1) Install the flexdown supports on the aft cargo compartment floor.

(a) Put each end, and the inboard edge, of the flexdown support [1], flexdown support [2], flexdown support [3] and the flexdown support [4] on the marks that show the correct locations on the cargo compartment floor.

NOTE: Flexdown feets must be centered to the tie-down fittings, except of the front flexdown feet.

(b) Attach the flexdown support [1], flexdown support [2], flexdown support [3] and the flexdown support [4] with the screws [5] and screws [6].

F. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-08-400-001

(1) Do this task: Aft Cargo Compartment Drive Assembly Installation, TASK 50-21-05-400-801.

——— END OF TASK ———

TASK 50-21-08-000-802

4. Aft Cargo Compartment Longitudinal Support System Removal

(Figure 402)

A. General

(1) This task gives the instructions to remove the aft cargo compartment longitudinal support system.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

C. Prepare for the Removal

SUBTASK 50-21-08-010-002

(1) Do this task: Aft Cargo Compartment Flexdown Support System Removal, TASK 50-21-08-000-801.

D. Aft Cargo Compartment Longitudinal Support System Removal

SUBTASK 50-21-08-020-005

(1) Remove the longitudinal bar [21] and longitudinal bar [29] from the cargo compartment floor.

(a) Remove the four screws [27] to remove the plate [28] from the longitudinal bar [21].


(b) Remove the screws [22], screws [24] and the washers [23] from the longitudinal bar [21] and longitudinal bar [29].

(c) Remove the longitudinal bar [21] and longitudinal bar [29] from the cargo compartment floor.

(d) If necessary, remove the stud [26] and two stud lockers [25] from each of the four tie-down positions.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

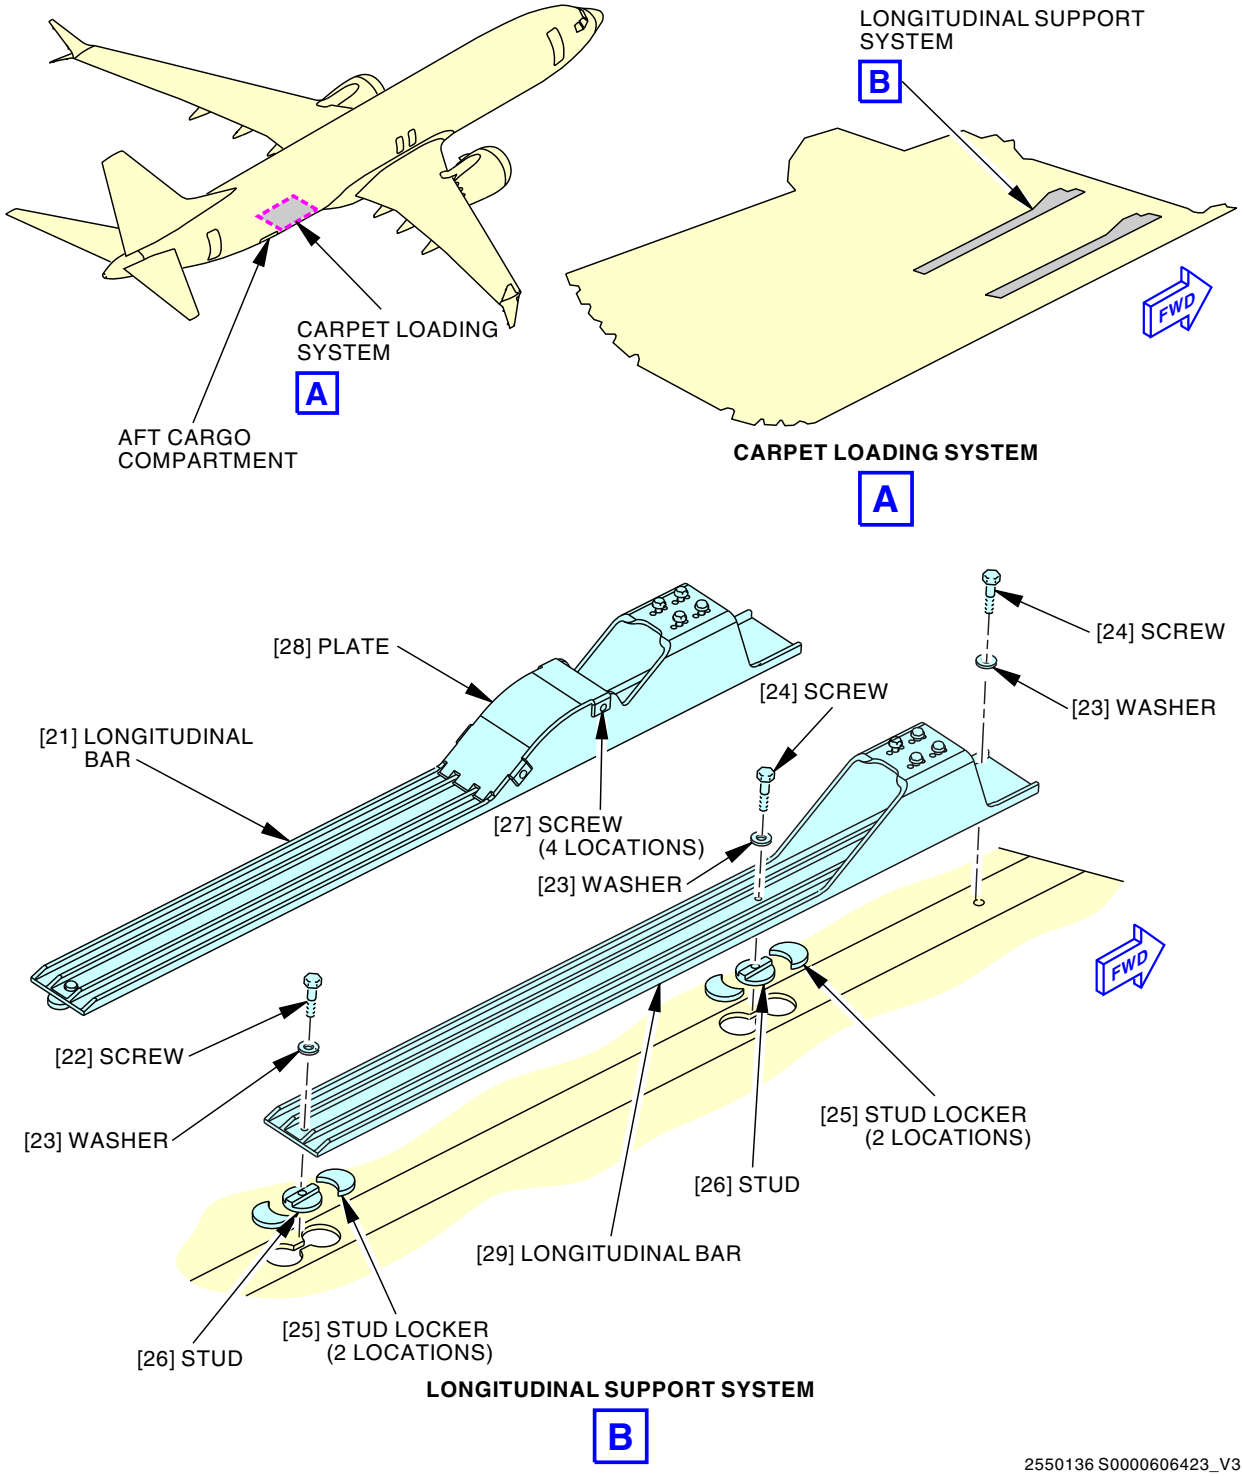

Aft Cargo Compartment Longitudinal Support System Installation
Figure 402/50-21-08-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-08-400-802

5. Aft Cargo Compartment Longitudinal Support System Installation

(Figure 402)

A. General

(1) This task gives the instructions to install the aft cargo compartment longitudinal support system.

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Aft Cargo Compartment Longitudinal Support System Installation

SUBTASK 50-21-08-420-003

(1) If necessary, install the stud [26] and two stud lockers [25] in each of the four tie-down positions.

SUBTASK 50-21-08-390-001

(2) Apply sealant, A00247 flush to all four tie-down positions.

SUBTASK 50-21-08-390-002

(3) Apply sealant, A00247 between the mating surfaces of the longitudinal bar [21], longitudinal bar [29] and the cargo compartment floor.

SUBTASK 50-21-08-820-001

(4) Position the longitudinal bar [21] and longitudinal bar [29] on the cargo compartment floor.

SUBTASK 50-21-08-420-004

(5) Install the screws [22], screws [24] and the washers [23] in the longitudinal bar [21] and longitudinal bar [29].

(a) Tighten the screws [22], screws [24] on the longitudinal bar [21] and longitudinal bar [29].

SUBTASK 50-21-08-420-006

(6) Install the plate [28] on the longitudinal bar [21] with four screws [27].

E. Put the Airplane Back to Its Usual Condition

SUBTASK 50-21-08-410-001

(1) Do this task: Aft Cargo Compartment Flexdown Support System Installation, TASK 50-21-08-400-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT SLIDING CARPET LOADING SYSTEM MANUAL LOADING OPERATION - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks that must be performed by certified mechanic:

(1) Deactivate for Manual Operation

(2) Activate for Normal Operation from Manual Cargo Loading

B. The sliding carpet loading system is manufactured by Telair International. The data in the tasks that follow are derived from the information provided in the Telair component maintenance manual 25-53-10, and formatted to the Boeing publication standards, with no technical content changes. Changes to the tasks are made when Boeing receives notification from Telair of the technical changes. The Telair component maintenance manual has the technical authority and not the data in these tasks

C. When the sliding carpet loading system does not operate correctly, the system is deactivated for manual cargo loading. The movable bulkhead is disconnected from the carpet attachments and electrical power is removed from the system.

TASK 50-21-09-040-801

2. Deactivate for Manual Cargo Loading

(Figure 201)

A. General

(1) The deactivation procedure must be performed by a certified mechanic.

B. Tools/Equipment

Reference	Description
STD-858	Tag - DO NOT OPERATE

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Reset the Sliding Carpet Loading System

SUBTASK 50-21-09-860-001

(1) To reset the system do the steps that follow.

NOTE: When an overload occurs or the equipment jams, the system will stop.

(a) Check the control box display for the instructions, to reset the system.

1) Follow the instructions to reset the system.

(b) If display does not show any instructions, do these steps:

1) Make sure that the system power is on (green light on the control box is on).

2) Use the joystick on the control box to run the system for approximately two seconds in the opposite loading/unloading direction.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Examine the system components to locate the malfunction.

NOTE: For example jammed objects or faulty limit switches.

4) Repair the malfunction.

5) Continue to operate the system.

6) If the malfunction appears again, manually unload the system.

a) Operate the sliding carpet loading system in the opposite direction.

7) If the problem still present, deactivate the system for manual loading operation.

F. Prepare for the Deactivation

SUBTASK 50-21-09-040-001

(1) If the system is operates, do this step:

(a) On the control box [2] use the joystick to put the carpet to its end position.

SUBTASK 50-21-09-040-004

(2) If the system does not operate, do these steps:

(a) Activate the EMERGENCY STOP button on the control box [2].

(b) Put a DO NOT OPERATE tag, STD-858, on the control box [2].

SUBTASK 50-21-09-010-001

(3) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

G. Deactivate the Sliding Carpet Loading System for Manual Operation

SUBTASK 50-21-09-860-003

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

NOTE: Do not open the AFT CARGO LOADER CONT circuit breaker, on the P6 panel, in the cockpit when the system is inoperable.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-21-09-410-001

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-09-040-002

(3) If the carpet is not put to its end position, do these steps:

(a) Lift the cover [5] on the moveable bulkhead [1] to get access to the locking pins [4].

(b) Remove the six locking pins [4] from the rod assemblies [6] to disconnect the moveable bulkhead [1] from the carpet attachments.

1) Do not remove the two locking pins that connect the wings [8] of the assembly to the rails.

(c) Disconnect the carpet harness from the moveable bulkhead [1].


1) Secure the carpet harness connector [12] to the carpet.

(d) Position the moveable bulkhead [1] as close as possible to the center of the airplane.

(e) Install the two locking pins [7] through the holes in the track [10] at the side guides [11] in front of the cart [9].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

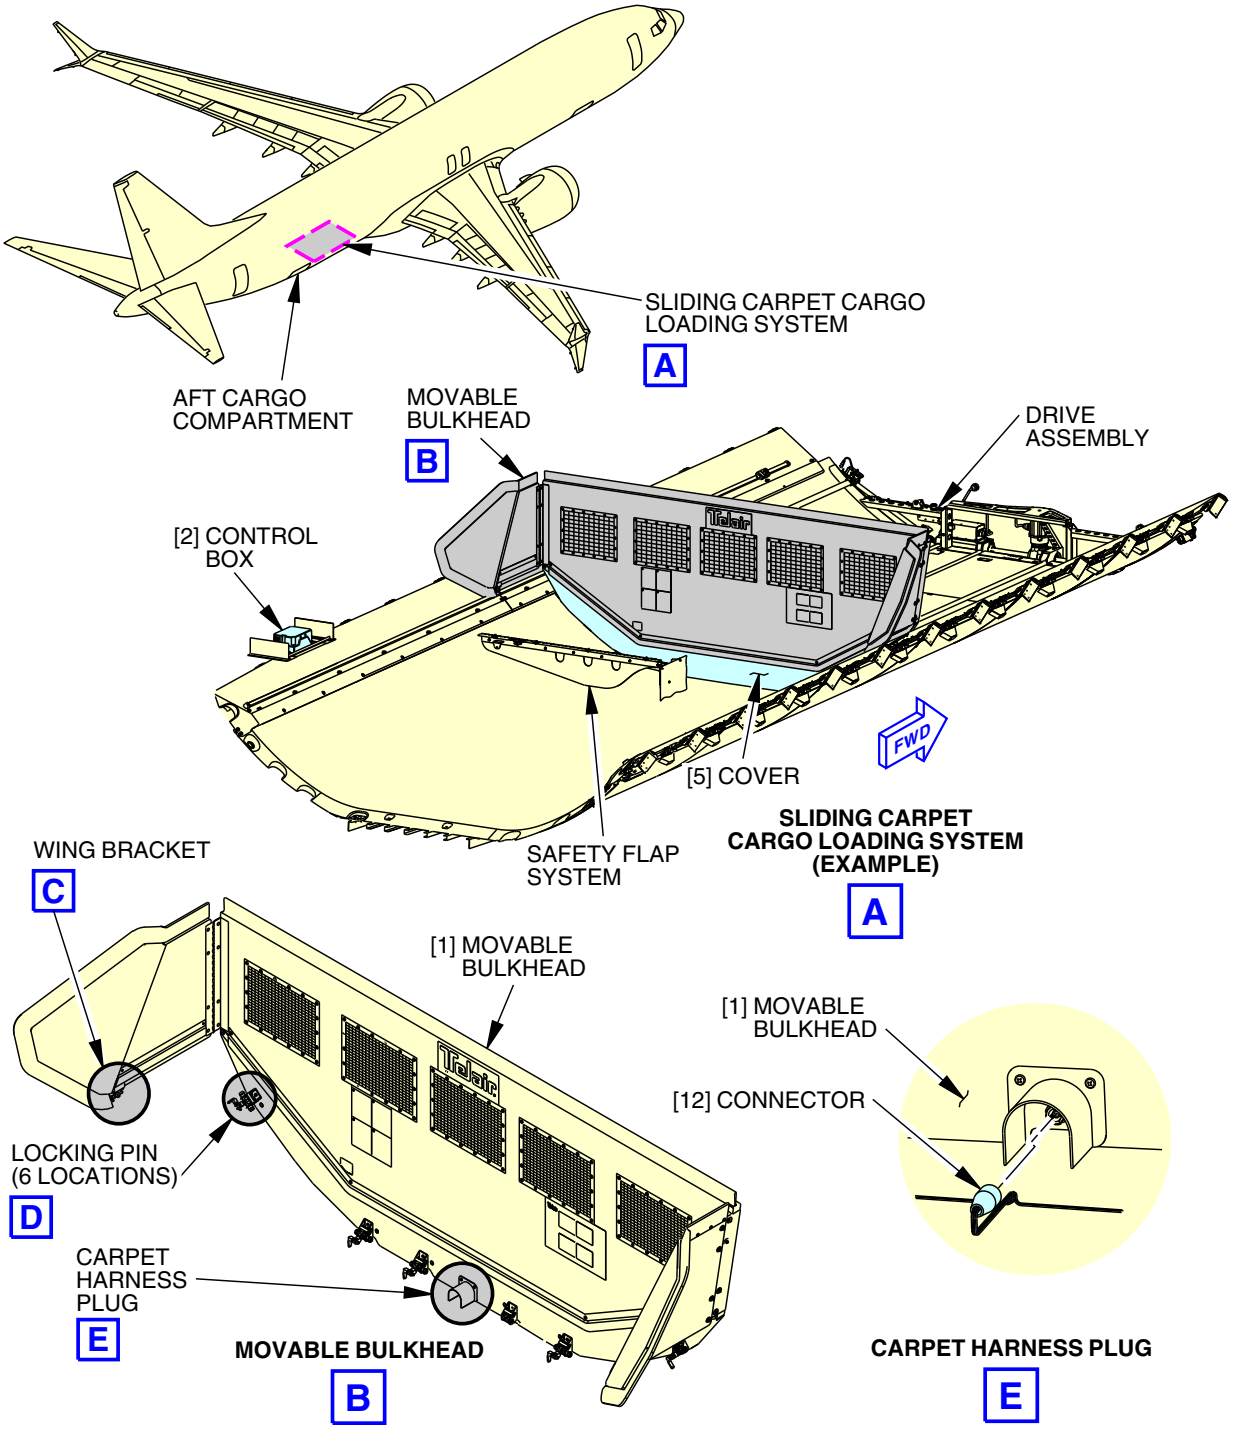


Deactivate the Aft Cargo Loading System for Manual Operation
Figure 201/50-21-09-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

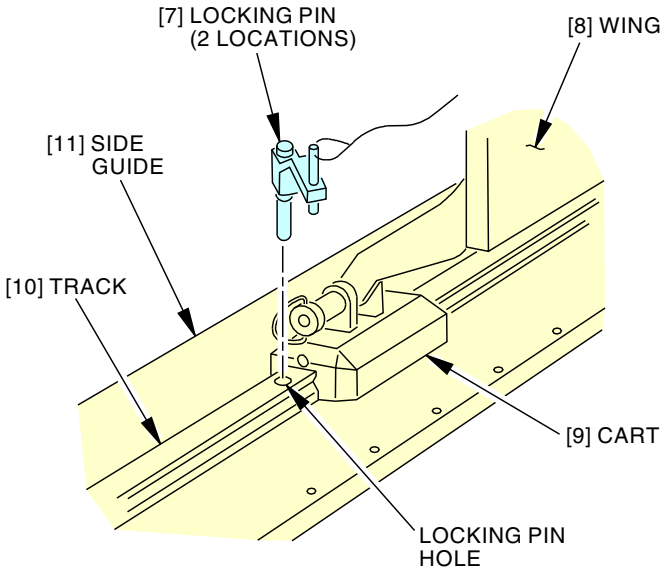

**WING BRACKET
(AFT POSITION)**

C

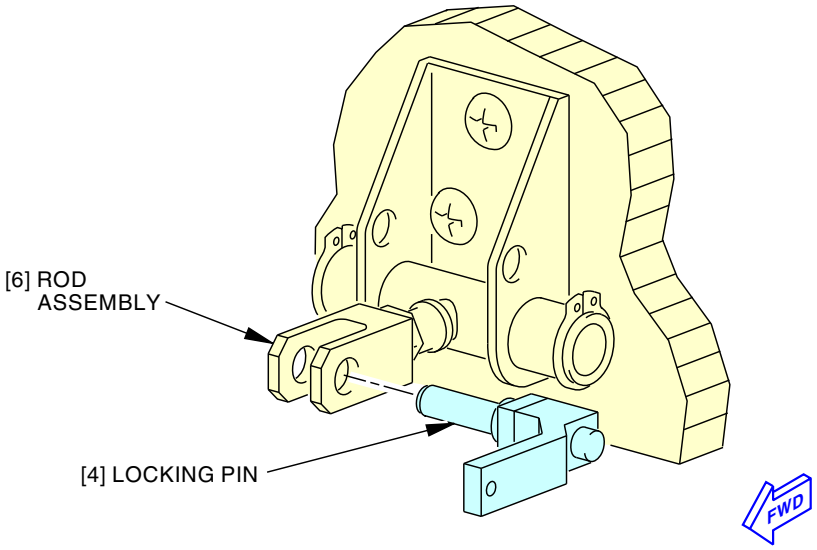

**ROD/SPRING SHAFT AND LOCKING PIN
(EXAMPLE)**

D

2556711 S0000609656_V1

**Deactivate the Aft Cargo Loading System for Manual Operation
Figure 201/50-21-09-990-801 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-21-09-440-801

3. Activate for Normal Operation from Manual Cargo Loading

(Figure 201)

A. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

B. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

C. Activate the Aft Sliding Carpet Loading System

SUBTASK 50-21-09-440-001

(1) Remove the two locking pins [7] from the holes in the track [10] in front of the carts [9].

SUBTASK 50-21-09-440-002

(2) Move the moveable bulkhead [1] away from the center of the airplane until it is near the carpet attachments.

SUBTASK 50-21-09-440-003

(3) Connect the moveable bulkhead [1] to the carpet attachments.

(a) Lift the cover [5] on the moveable bulkhead [1].

(b) Install the six locking pins [7] to connect the carpet attachments to the moveable bulkhead [1].

SUBTASK 50-21-09-440-005

(4) Connect the carpet harness connector [12] to the receptacle in the moveable bulkhead [1].

SUBTASK 50-21-09-010-002

(5) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-09-860-004

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(6) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
A	17	C00907	AFT CARGO LOADER DRIVE

SUBTASK 50-21-09-410-002

(7) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-21-09-440-006

(8) Deactivate the EMERGENCY STOP button on the control box [2].

(a) Make sure that the green light on the control box [2] comes on.

D. Operational Test for Normal Operation

SUBTASK 50-21-09-710-001

(1) On the control box [2] do these steps:

(a) Make sure that the green light is on.

(b) Press the joystick in the LOAD direction.

(c) Make sure that the carpet moves away from the cargo compartment door.

(d) Press the joystick in the UNLOAD direction.

(e) Make sure that the carpet moves to the cargo compartment door.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ELECTRICAL EQUIPMENT RACK MOISTURE SHROUD - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) E1/E5 moisture shroud removal

(2) E1/E5 moisture shroud installation

(3) E2/E3/E4 moisture shroud removal

(4) E2/E3/E4 moisture shroud installation

(5) E6 moisture shroud removal

(6) E6 moisture shroud installation.

TASK 50-51-00-000-801

2. E1/E5 Moisture Shroud Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the E1/E5 moisture shroud.

B. References

Reference	Title
50-51-00-210-801	EE Center Moisture Shroud Visual Inspection (P/B 601)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. E1/E5 Moisture Shroud Removal

SUBTASK 50-51-00-010-001

(1) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 50-51-00-020-001

(2) Do these steps to remove the E1/E5 moisture shroud [1] from the forward Electronic Equipment (EE) compartment:

NOTE: To remove the forward center, forward right, or the aft right moisture shrouds, you must remove the adjacent moisture shroud first.

(a) Disconnect the drain tube [4].

1) Loosen the hose clamp [5] that attaches the drain tube [4] to the moisture shroud [1].

2) Disconnect the drain tube [4] from the moisture shroud [1].

(b) Remove the screws [13], washers [12], and plastic washers [11] that attach the moisture shroud [1] to the bracket [9].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Remove the bolts [8], washers [7], and spacers [6] that attach the moisture shroud [1] to the floor beam.

(d) Remove the applicable moisture shroud [1].

(e) Remove the applicable seals.

1) Remove the seal [10].

2) If you removed the three forward moisture shrouds [1], then remove the seal [3].


3) If you removed all four moisture shrouds [1], then remove the seal [3] and seal [2].

SUBTASK 50-51-00-210-005

(3) If you see cracks or signs of leakage, then do this task: EE Center Moisture Shroud Visual Inspection, TASK 50-51-00-210-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

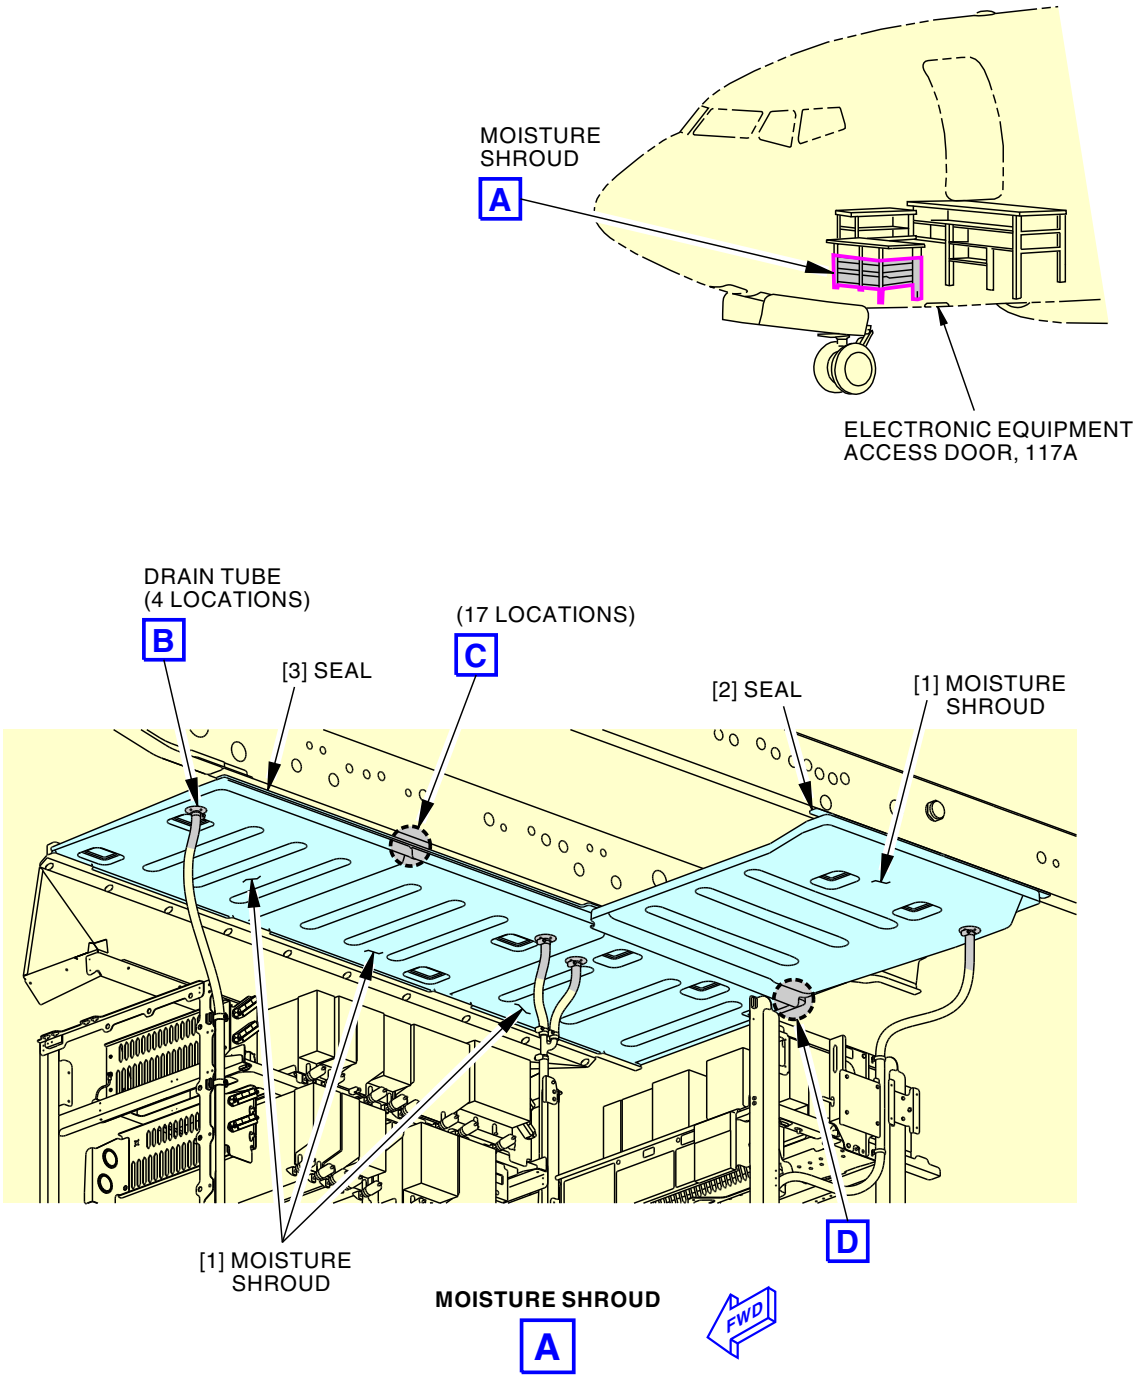

E1/E5 Moisture Shroud Installation
Figure 401/50-51-00-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

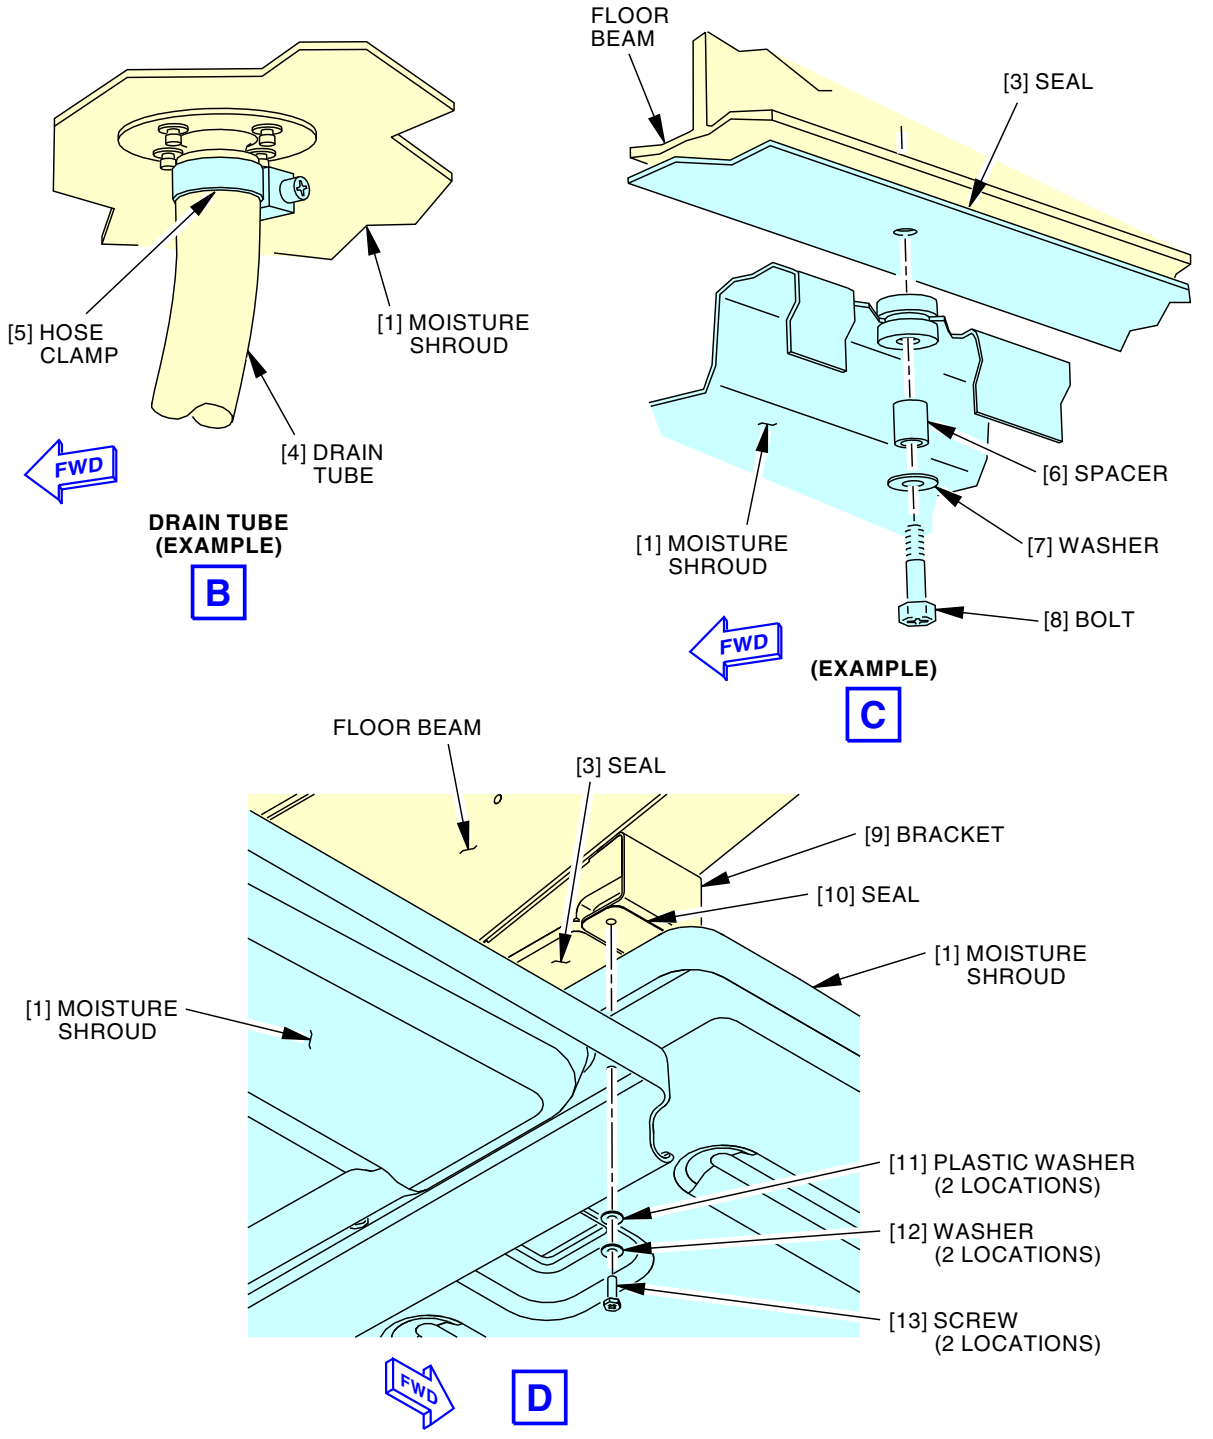

2412030 S00061529750_V2

E1/E5 Moisture Shroud Installation
Figure 401/50-51-00-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-51-00-400-801

3. E1/E5 Moisture Shroud Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the E1/E5 moisture shroud.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Moisture shroud	50-51-00-01-150	PTF ALL
		50-51-00-01-195	PTF ALL
		50-51-00-01-235	PTF ALL
		50-51-00-01-275	PTF ALL

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. E1/E5 Moisture Shroud Installation

SUBTASK 50-51-00-420-001

(1) Do these steps to install the E1/E5 moisture shroud [1] in the forward Electrical/Electronic (E/E) compartment:

(a) Install the applicable seals.

1) If removed, install the seal [2].

2) If removed, install the seal [3].

3) Install the seal [10].

(b) Put the moisture shroud [1] in its correct position.

(c) Install the bolts [8], washers [7], and spacers [6] that attach the moisture shroud [1] to the floor beam.

(d) Install the screws [13], washers [12], and plastic washers [11] that attach the moisture shroud [1] to the bracket [9].

(e) Connect the drain tube [4] to the moisture shroud [1].

(f) Tighten the hose clamp [5] around the drain tube [4].

SUBTASK 50-51-00-410-001

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-51-00-000-802

4. E2/E3/E4 Moisture Shroud Removal

(Figure 402)

A. General

(1) This task gives the instructions to remove the E2/E3/E4 moisture shroud.

B. References

Reference	Title
50-51-00-210-801	EE Center Moisture Shroud Visual Inspection (P/B 601)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. E2/E3/E4 Moisture Shroud Removal

SUBTASK 50-51-00-010-002

(1) Remove the access panel on the aft side of the E2/E3/E4 equipment rack.

SUBTASK 50-51-00-020-002

(2) Remove the moisture shroud [21].

(a) Loosen the hose clamp [25] that attaches the drain tube [22] to the moisture shroud [21].

(b) Disconnect the drain tube [22] from the moisture shroud [21].

(c) Remove the washers [24] and the screws [23] that attach the moisture shroud [21] to the moisture shroud bracket [26].

NOTE: Remove the washers [24] and screws [23] for the forward part of the moisture shroud [21] from the forward side of the E2/E3/E4 equipment rack.


(d) Remove the moisture shroud [21].

SUBTASK 50-51-00-220-002

(3) If you see cracks or evidence of leakage, do this task: EE Center Moisture Shroud Visual Inspection, TASK 50-51-00-210-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

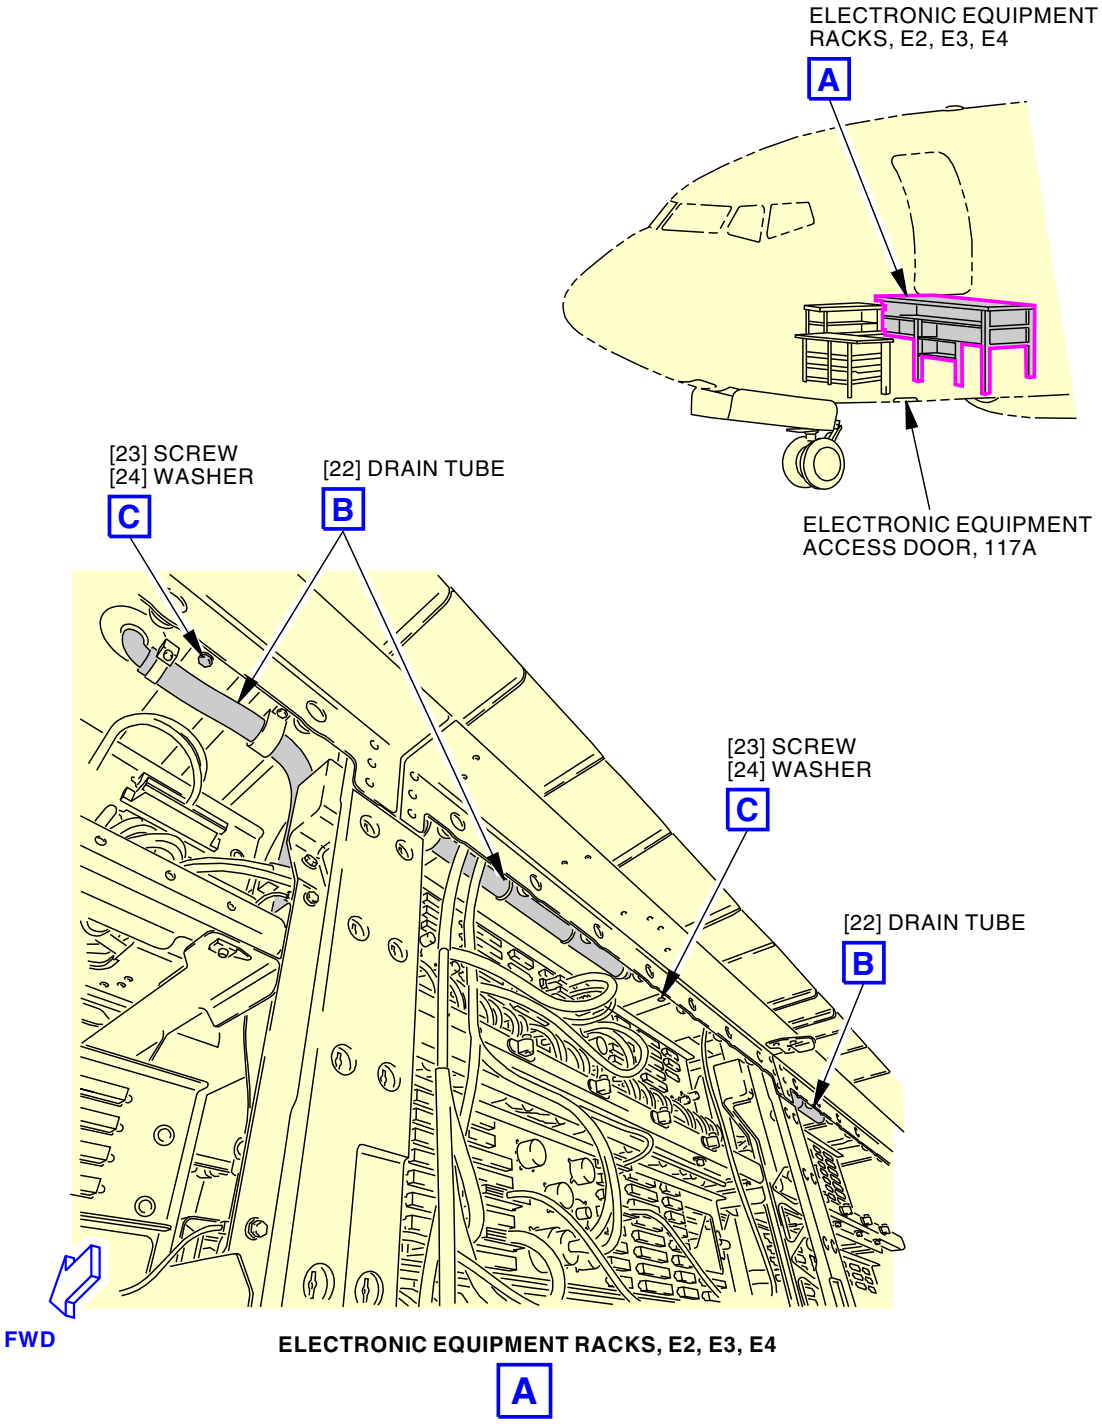


E2, E3, E4 Moisture Shroud Installation
Figure 402/50-51-00-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

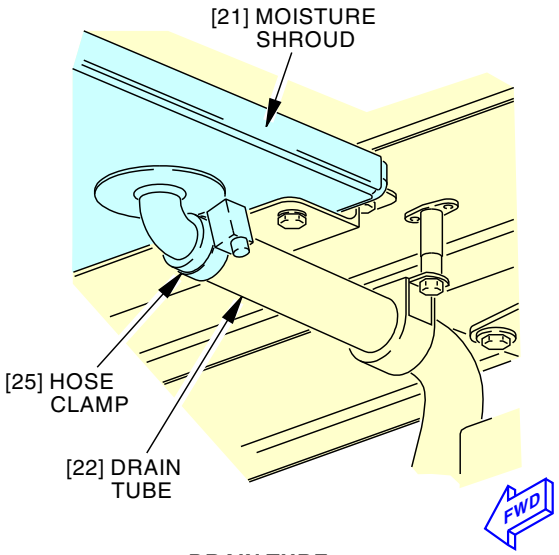

DRAIN TUBE (EXAMPLE)

B

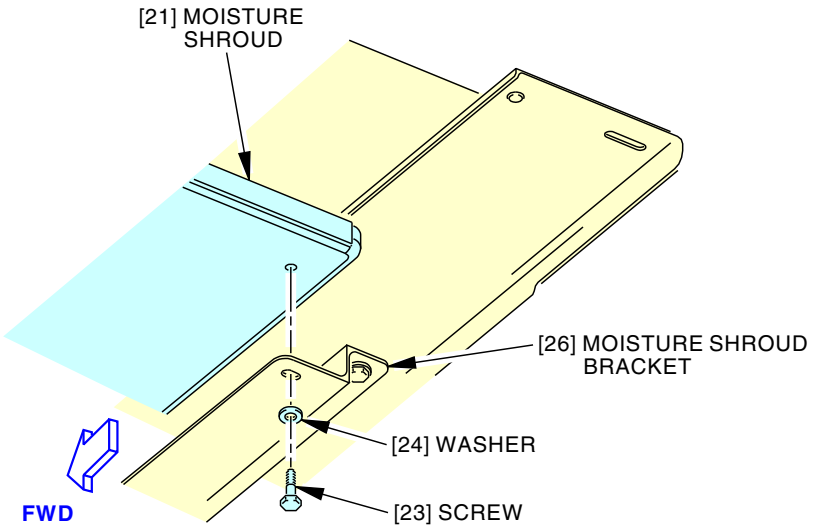

(EXAMPLE, 16 LOCATIONS)

C

2412033 S00061529756_V2

E2, E3, E4 Moisture Shroud Installation
Figure 402/50-51-00-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-51-00-400-802

5. E2/E3/E4 Moisture Shroud Installation

(Figure 402)

A. General

(1) This task gives the instructions to install the E2/E3/E4 moisture shroud.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
21	Moisture shroud	50-51-00-05-060	PTF ALL
		50-51-00-05-130	PTF ALL

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. E2/E3/E4 Moisture Shroud Installation

SUBTASK 50-51-00-420-002

(1) Install the moisture shroud [21].

(a) Put the moisture shroud [21] in its position.

(b) Install the washers [24] and screws [23] that attach the moisture shroud [21] to the moisture shroud bracket [26].

NOTE: Install the washers [24] and screws [23] for the forward part of the moisture shroud [21] from the forward side of the E2/E3/E4 equipment rack.

(c) Connect the drain tube [22] to the moisture shroud [21].

(d) Tighten the hose clamp [25] around the drain tube [22].

SUBTASK 50-51-00-410-002

(2) Install the access panel on the aft side of the E2/E3/E4 equipment rack.

——— END OF TASK ———

TASK 50-51-00-000-803

6. E6 Moisture Shroud Removal

(Figure 403)

A. General

(1) This task gives the instructions to remove the E6 moisture shroud.

B. References

Reference	Title
50-51-00-210-802	E6 Rack Moisture Shroud Visual Inspection (P/B 601)

C. Location Zones

Zone	Area
142	Aft Cargo Compartment - Right

D. E6 Moisture Shroud Removal

SUBTASK 50-51-00-010-003

(1) Remove the applicable access panel [31] to get access to the moisture shroud [30].

(a) Disengage the quarter-turn fasteners around the edges of the panel.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 50-51-00-020-003

(2) Do these steps to remove each moisture shroud [30] from the aft Electronic Equipment (EE) compartment:

(a) Loosen the hose clamp [38] that attaches the drain tube [37] to the moisture shroud [30].

(b) Disconnect the drain tube [37] from the moisture shroud [30].

(c) Remove the bolts [35] and washers [36].

(d) Remove the bolts [32], washers [33], and plastic washers [34].


(e) Remove the moisture shroud [30].

SUBTASK 50-51-00-210-004

(3) If you see cracks or signs of leakage, then do this task: E6 Rack Moisture Shroud Visual Inspection, TASK 50-51-00-210-802.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

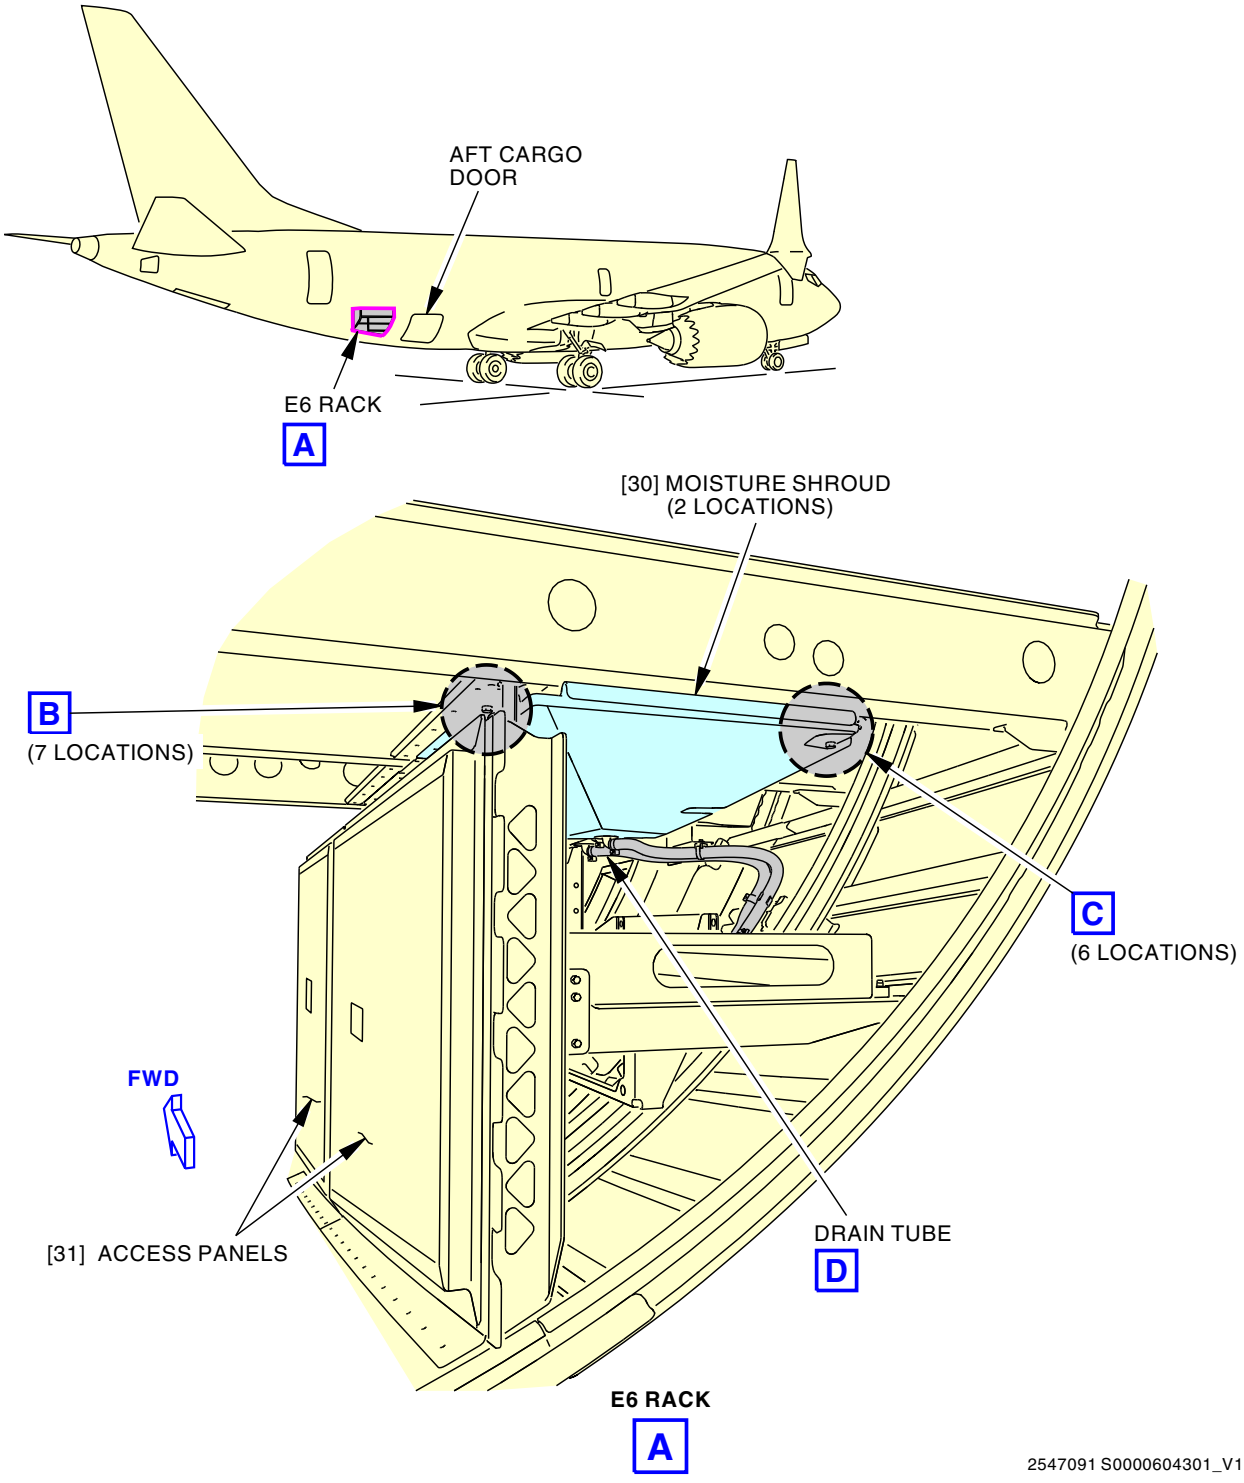

E6 Moisture Shroud Installation
Figure 403/50-51-00-990-805 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

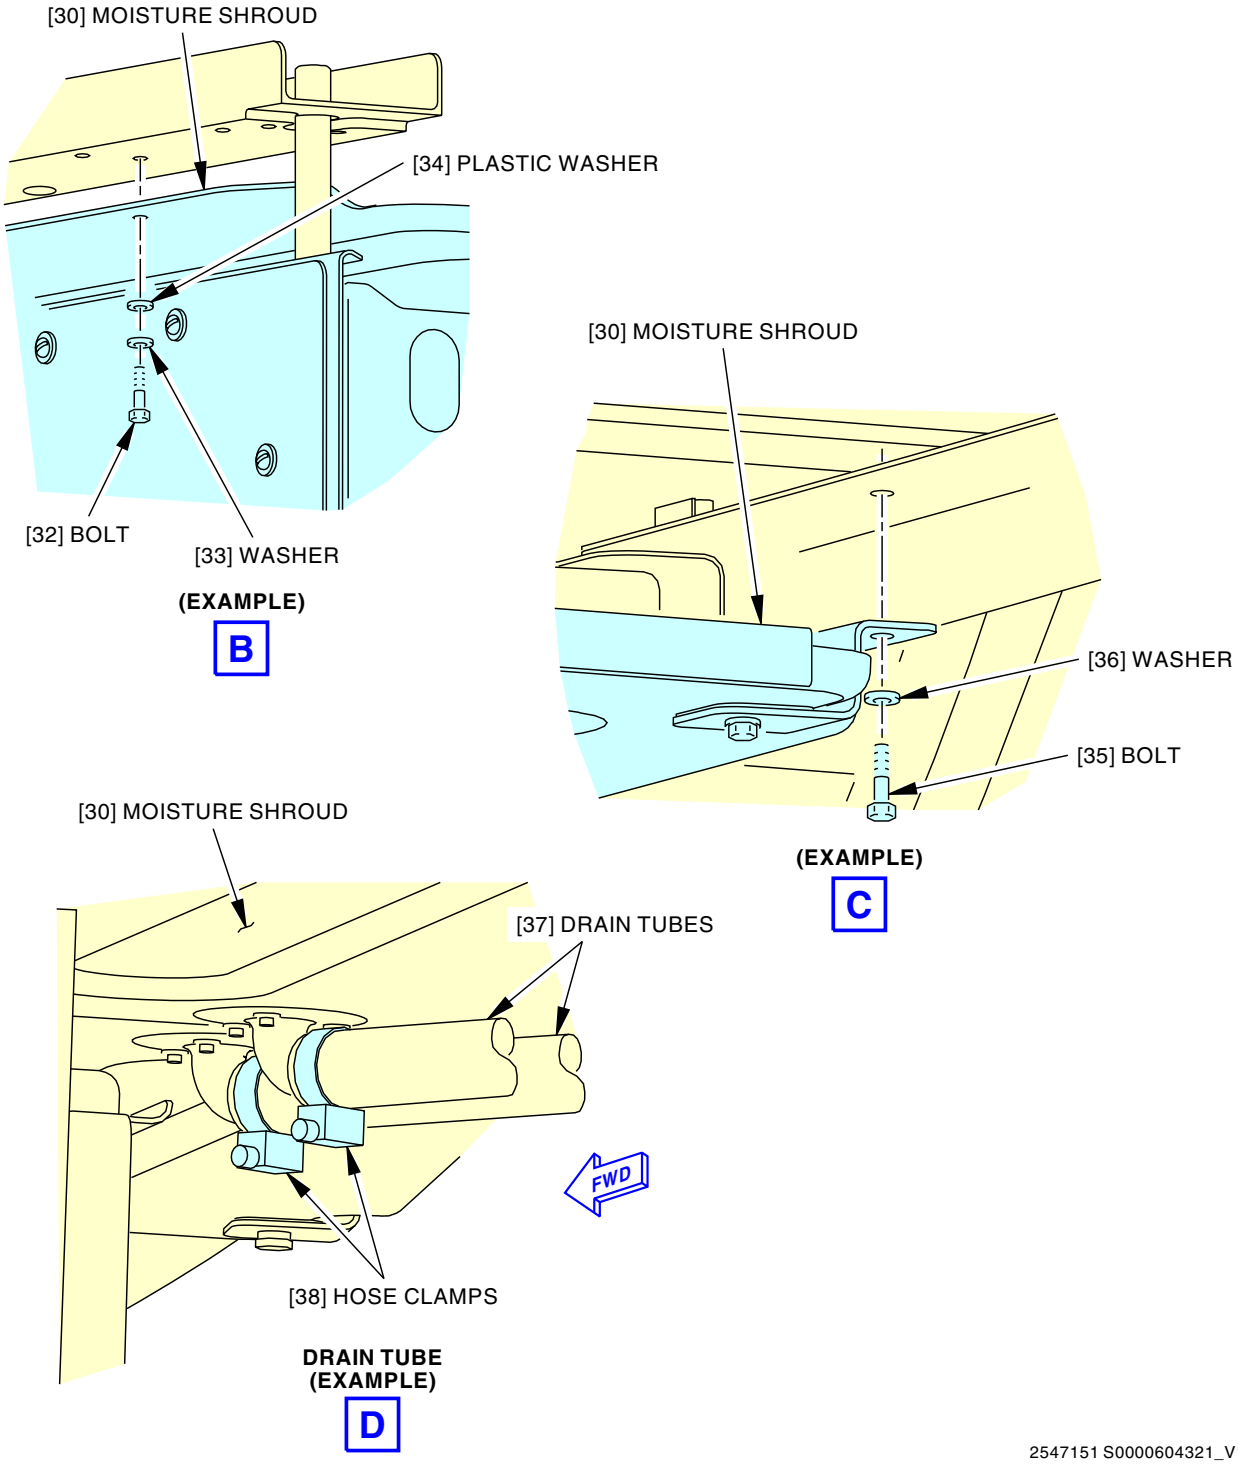

E6 Moisture Shroud Installation
Figure 403/50-51-00-990-805 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-51-00-400-803

7. E6 Moisture Shroud Installation

(Figure 403)

A. General

(1) This task gives the instructions to install the E6 moisture shroud.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
30	Moisture shroud	50-51-00-11-120	PTF ALL
		50-51-00-11-165	PTF ALL

C. Location Zones

Zone	Area
142	Aft Cargo Compartment - Right

D. E6 Moisture Shroud Installation

SUBTASK 50-51-00-420-003

(1) Do these steps to install each moisture shroud [30] in the aft Electronic Equipment (EE) compartment:

(a) Put the moisture shroud [30] in its correct position.

(b) Install the bolts [32], washers [33], and plastic washers [34].

(c) Install the bolts [35] and washers [36].

(d) Connect the drain tube [37] to the moisture shroud [30].

(e) Tighten the hose clamp [38] around the drain tube [37].

SUBTASK 50-51-00-410-003

(2) Install the access panels [31] that you removed to access the moisture shrouds [30].

(a) Lock the quarter-turn fasteners around the edges of the panel.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ELECTRICAL EQUIPMENT RACK MOISTURE SHROUD - INSPECTION/CHECK

1. General

A. This procedure has these tasks:

(1) EE Center Moisture Shroud Visual Inspection

(2) E6 Rack Moisture Shroud Visual Inspection.

TASK 50-51-00-210-801

2. EE Center Moisture Shroud Visual Inspection

(Figure 601)

A. General

(1) This task includes the steps to do a visual inspection of the moisture shrouds in the forward Electronic Equipment (EE) compartment.

B. References

Reference	Title
50-51-00 P/B 401	ELECTRICAL EQUIPMENT RACK MOISTURE SHROUD - REMOVAL/INSTALLATION

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. EE Center Moisture Shroud Visual Inspection

SUBTASK 50-51-00-210-001

(1) Examine the moisture shrouds (drip pans) that are above the EE racks in the EE compartment.

(a) Make sure that they do not have apparent cracks, tears, or clogged drains.

(b) Make sure that they are not loose.

SUBTASK 50-51-00-210-002


(2) Do a check for cracks around the fasteners and mounting holes of the moisture shroud.

(a) If you find a crack NOT in the direction toward an edge without a return lip and crack length is more than 0.75 in. (1.90 cm), replace the moisture shroud (PAGEBLOCK 50-51-00/401).

(b) If you find a crack in the direction toward an edge without a return lip that has a crack length more than one half of the distance between the hole and edge of the flange, replace the moisture shroud (PAGEBLOCK 50-51-00/401).


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

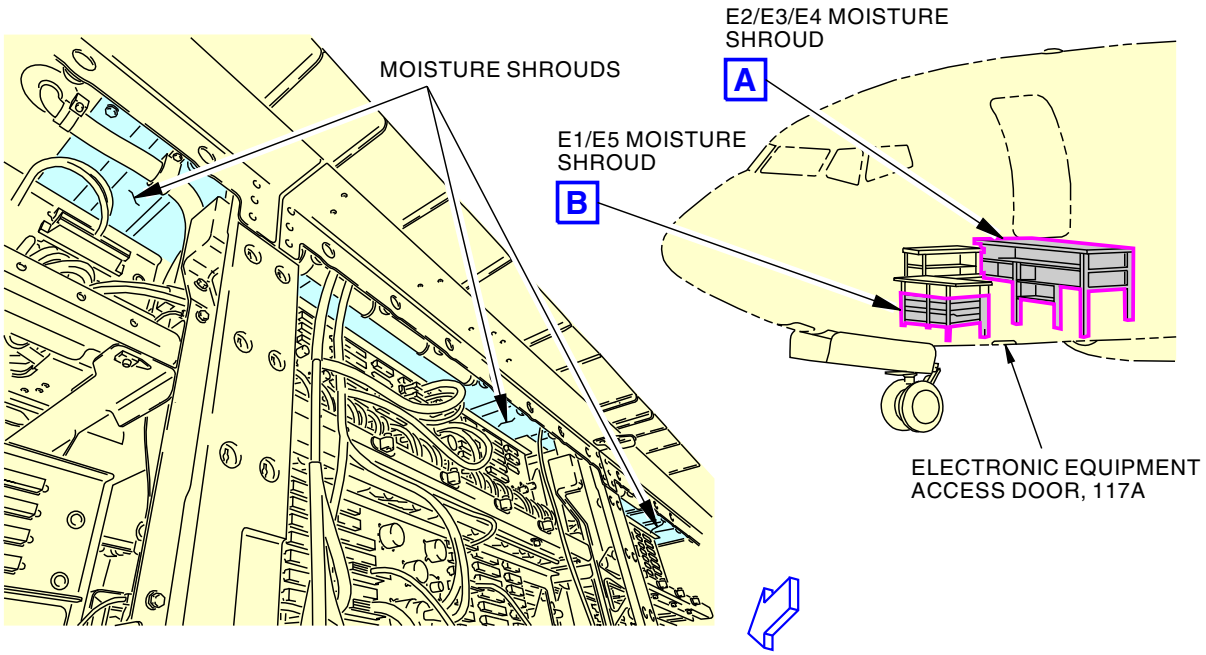

E2/E3/E4 MOISTURE SHROUD

A

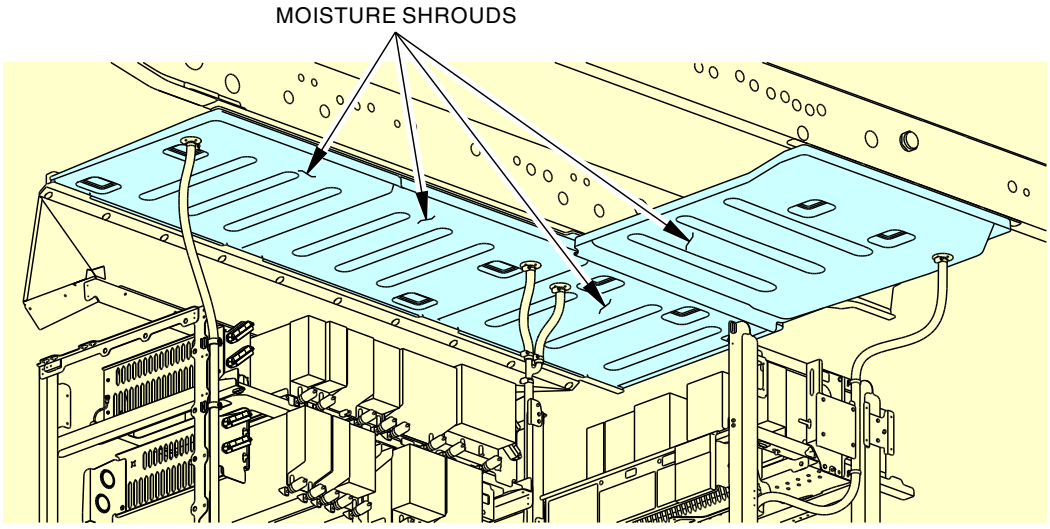

E1/E5 MOISTURE SHROUD

B

3016136 S0000789265_V1

EE Center Moisture Shroud Visual Inspection
Figure 601/50-51-00-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 50-51-00-210-802

3. E6 Rack Moisture Shroud Visual Inspection

(Figure 602)

A. General

(1) This task includes the steps to do a visual inspection of the moisture shrouds in the aft Electronic Equipment (EE) compartment.

B. References

Reference	Title
50-51-00 P/B 401	ELECTRICAL EQUIPMENT RACK MOISTURE SHROUD - REMOVAL/INSTALLATION

C. Location Zones

Zone	Area
142	Aft Cargo Compartment - Right

D. E6 Rack Moisture Shroud Visual Inspection

SUBTASK 50-51-00-210-006

(1) Examine the moisture shrouds (drip pans) that are above the EE racks in the EE compartment.

(a) Make sure that they do not have apparent cracks, tears, or clogged drains.

(b) Make sure that they are not loose.

SUBTASK 50-51-00-210-007


(2) Do a check for cracks around the fasteners and mounting holes of the moisture shroud.

(a) If you find a crack NOT in the direction toward an edge without a return lip and crack length is more than 0.75 in. (1.90 cm), replace the moisture shroud (PAGEBLOCK 50-51-00/401).

(b) If you find a crack in the direction toward an edge without a return lip that has a crack length more than one half of the distance between the hole and edge of the flange, replace the moisture shroud (PAGEBLOCK 50-51-00/401).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

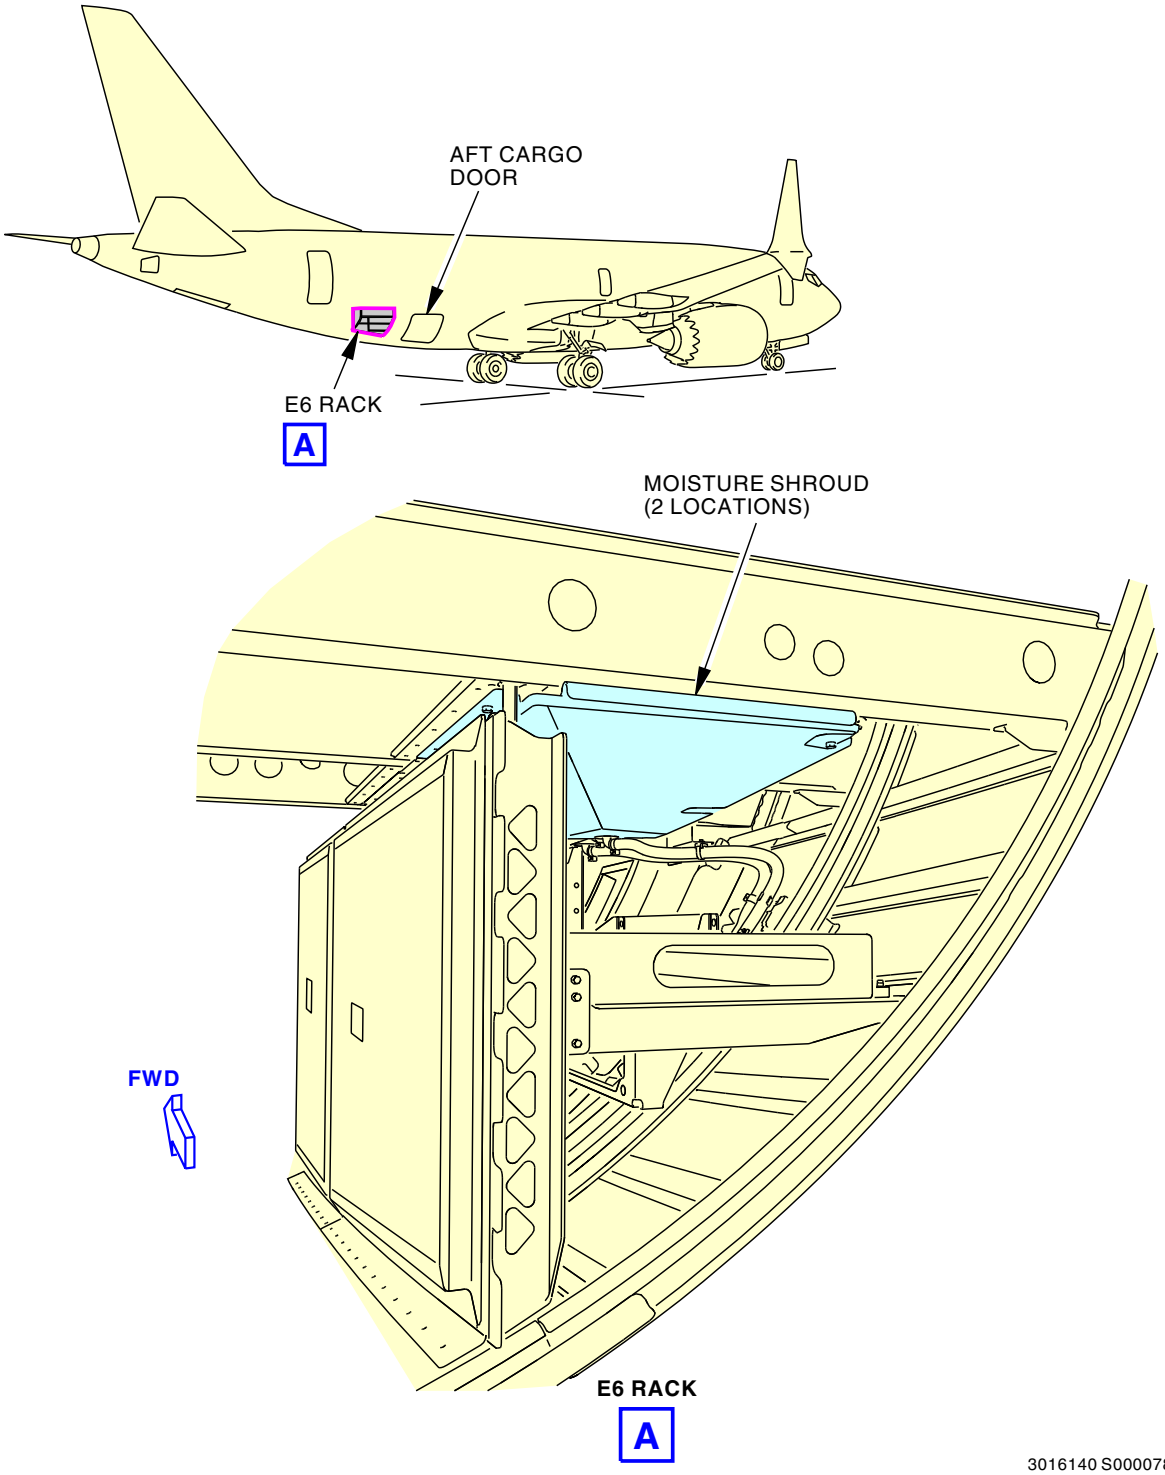

E6 Rack Moisture Shroud Visual Inspection
Figure 602/50-51-00-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details