AIRBUS

# AS 350
# B3



# Chapter 05
# MASTER SERVICING MANUAL (MSM)

Issue date : 2013.06.13
Revision 020 : 2021.04.05

Airbus Helicopters
Direction Technique Support
Aéroport International Marseille Provence 13725 Marignane Cedex FRANCE
Contact: *contact.msm.ah@airbus.com*

**IMPORTANT NOTE**

The practical value of this manual depends entirely upon it being updated correctly by the operator.

The successive revisions should be recorded on the relevant page of the manual.

# RECORD OF REVISIONS

| Rev. No. | Issue Date | Inserted Date | Inserted Name |
|---|---|---|---|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Rev. No. | Issue Date | Inserted Date | Inserted Name |
|---|---|---|---|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

# LOEDU

## 1 Update

Refer to the **"Update" Document Unit**

## 2 "Type" Column Code

**N**-New, to be inserted
**R**-Revised, to be replaced
**D**-To be removed from the manual
- (No code) Unchanged with respect to the previous issue

| D.U. | Type | Date | D.U. | Type | Date |
|---|---|---|---|---|---|
| TITLE | N | 2021.04.05 | 05-21-00 | - | 2020.10.12 |
| LOEDU | N | 2021.04.05 | 05-21-01 | - | 2020.10.12 |
| TABLE OF CONTENTS | N | 2021.04.05 | 05-21-02 | - | 2020.04.14 |
| HIGHLIGHTS OF THE REVISION | N | 2021.04.05 | 05-22-00 | R | 2021.04.05 |
| | | | 05-22-01 | R | 2021.04.05 |
| TECHNICAL PUBLICATIONS | - | 2019.01.19 | 05-22-02 | R | 2021.04.05 |
| | | | 05-23-00 | - | 2018.04.16 |
| GLOSSARY | - | 2019.09.09 | 05-23-01 | R | 2021.04.05 |
| STRUCTURE OF THE MSM | - | 2019.09.09 | 05-23-02 | - | 2016.07.11 |
| UPDATE OF THE MSM | - | 2014.12.11 | 05-25-00 | R | 2021.04.05 |
| BREAKDOWN OF THE MSM | R | 2021.04.05 | 05-26-00 | - | 2020.04.14 |
| | | | 05-30-00 | - | 2017.12.04 |
| USE OF THE MSM | - | 2020.10.12 | 05-30-02 | - | 2017.12.04 |
| OPTIONAL | - | 2019.01.19 | 05-31-00 | - | 2019.01.19 |
| SB INCORPORATED | R | 2021.04.05 | 05-31-01 | - | 2017.12.04 |
| 05-10-00 | - | 2020.10.12 | 05-31-02 | - | 2020.04.14 |
| 05-11-00 | R | 2021.04.05 | 05-32-00 | - | 2020.04.14 |
| 05-12-00 | - | 2019.09.09 | 05-32-01 | - | 2017.12.04 |
| 05-20-00 | - | 2017.12.04 | 05-32-02 | - | 2019.01.19 |
| 05-20-01 | - | 2013.12.05 | 05-35-00 | R | 2021.04.05 |
| 05-20-02 | - | 2019.09.09 | 05-36-00 | - | 2017.12.04 |

**End of the Document Unit**

# TABLE OF CONTENTS

**TITLE**

**HIGHLIGHTS OF THE REVISION**

1 GENERAL

2 OUTLINE OF THE REVISION

3 DETAILED DESCRIPTION

3.1 BREAKDOWN OF THE MSM

3.2 SB INCORPORATED

3.3 Section 05.11.00

3.4 Section 05.22.00

3.5 Section 05.22.01

3.6 Section 05.22.02

3.7 Section 05.23.01

3.8 Section 05.25.00

3.9 Section 05.35.00

**TECHNICAL PUBLICATIONS**

1 THE DOCUMENTATION

2 OPERATING DOCUMENTS

3 MAINTENANCE DOCUMENTS

4 IDENTIFICATION DOCUMENTS

5 SPECIAL DOCUMENTS

6 VENDOR'S DOCUMENTS

**GLOSSARY**

**STRUCTURE OF THE MSM**

1 GENERAL STRUCTURE OF THE MSM

2 BREAKDOWN OF THE MSM

2.1 Identification of the DUs

2.2 Task codes

2.3 List Of Effective Document Units (LOEDU)

3 CLASSIFICATION OF INFORMATION

**UPDATE OF THE MSM**

1 REVISION OF THE MSM

2 UPDATE OF THE MSM

TITLE

2.1 Update procedure

2.2 Identification of the modifications

3 CUSTOMER COMPLEMENT (CC): ISSUED ON A GREEN BACKGROUND

4 EFFECTIVITY

**BREAKDOWN OF THE MSM**

1 PURPOSE OF THE MSM

2 CHANGES TO THE MSM

3 HELICOPTER MAINTENANCE

4 TYPES OF MAINTENANCE

5 DEFINITION OF THE MAINTENANCE MODES

5.1 Hard time maintenance

5.2 On-Condition maintenance

5.3 Condition monitoring maintenance

6 EFFECTIVITY - RESPONSIBILITY

7 MAINTENANCE INTERVAL

7.1 Daily checks

7.2 Supplementary inspection (S)

7.3 Additional inspection (F)

7.4 Basic inspection (T or A)

8 MAINTENANCE RELATED TO EQUIPMENT MANUFACTURER DOCUMENTATION

**USE OF THE MSM**

1 ADAPTATION OF THE MSM

2 INFORMATION FEEDBACK FROM THE OPERATOR TO THE MANUFACTURER

3 IN-SERVICE MONITORING

3.1 Airframe monitoring

3.2 Monitoring of components

3.3 Specific case of elastomer hoses

4 COMPONENT PART NUMBERS

4.1 Definition

4.2 Part Number followed by a suffix

4.3 Applicability of the limits

4.4 Changes to Part Numbers

5 LIMITS

**TITLE**

5.1 Flight Hours

5.2 Calendar time

5.2.1 Airframe initial aging date

5.2.2 Initial aging date for components

5.3 Cycles

5.4 Periodic and Perform Once limits

5.5 Performance interval

5.6 Specific and severe atmospheric operating conditions

5.7 Maximum limit value

5.7.1 Definition of the margin

5.7.2 Application of the margin

5.7.3 Specification of the margin

5.7.4 Example of how the margin is used

6 AUTHORIZATION TO TRANSFER A COMPONENT (PART OR ASSEMBLY) FROM ONE AIRCRAFT VERSION TO ANOTHER AIRCRAFT VERSION

6.1 Versions on which the transfer of components is applicable

6.2 Components NOT subject to In-Service Monitoring (Condition Monitoring)

6.3 Components subject to In-Service Monitoring

6.3.1 Components subject to a Service Life Limit (SLL)

6.3.2 Components subject to Time Between Overhauls (TBO), Operating Time Limit (OTL), On-Condition maintenance (OC)

7 RECORDING

8 MAINTENANCE CODES (MC)

9 CONTENT OF A TASK

**OPTIONAL**

1 COMPATIBILITY / INCOMPATIBILITY

2 TABLE OF APPROVED OPTIONAL INSTALLATIONS

**SB INCORPORATED**

**End of the Document Unit**

# HIGHLIGHTS OF THE REVISION

## 1 GENERAL

- Check that the content of the sections is in accordance with the List Of Effective Document Units (LOEDU).
- Return the acknowledgment card.

## 2 OUTLINE OF THE REVISION

The revision is codified as follows:

- Revision 020 : 2021.04.05

## 3 DETAILED DESCRIPTION

### 3.1 BREAKDOWN OF THE MSM

- § 2 CHANGES TO THE MSM
  updated

### 3.2 SB INCORPORATED

- 05.00.86R3
  Pitch change rod Periodic check of the Tail Rotor Hub (TRH) pitch change rod
  SB integrated
- 62.00.43R1
  Check of the main rotor mast shaft
  SB integrated

### 3.3 Section 05.11.00

**26-22 OPT - EXTINGUISHER, FIRE, CABIN**

- 26/22/00/000/000/010 — 144 M
  Cabin fire extinguisher
  New task integrated

### 3.4 Section 05.22.00

**52-90 SLIDING DOOR**

- 52/90/00/000/000/020 — 600 FH // 24 M
  Sliding door
  Description modified
  Maintenance code modified

### 3.5 Section 05.22.01

**29-10 MAIN HYDRAULIC GENERATION**

| | |
|---|---|
| - 29/10/00/000/000/040<br>MGB Hydraulic pump<br>New task integrated - transferred from 05-23-01 | 600 FH |
| **80-00 STARTING**<br>- 80/00/02/000/000/120<br>Starter generator<br>Description modified<br>Documentation modified | 600 FH |

### 3.6 Section 05.22.02

| | |
|---|---|
| **26-22 OPT - EXTINGUISHER, FIRE, CABIN**<br>- 26/22/00/000/000/030<br>Cabin fire extinguisher<br>New task integrated | 24 M |

### 3.7 Section 05.23.01

| | |
|---|---|
| **29-10 MAIN HYDRAULIC GENERATION**<br>- 29/10/00/000/000/040<br>MGB Hydraulic pump<br>Task deleted - transferred to 05-22-01 | 1200 FH |

### 3.8 Section 05.25.00

| | |
|---|---|
| **26-22 OPT - EXTINGUISHER, FIRE, CABIN**<br>- 26/22/00/000/000/040<br>Cabin fire extinguisher<br>New task integrated | 1 M |
| **62-30 MAIN ROTOR MAST**<br>- 62/30/00/000/000/087<br>Main rotor mast - Upper housing<br>New task integrated | 5400 FH // 72 M |
| **80-00 STARTING**<br>- 80/00/02/000/000/111<br>Starter generator<br>Task deleted | 600 FH |

### 3.9 Section 05.35.00

| | |
|---|---|
| **25-81 OPT - SWING AND ACCESSORY**<br>- 25/81/01/000/000/000<br>Cargo swing frame<br>New task integrated | 1500 OPC |

**End of the Document Unit**

# TECHNICAL PUBLICATIONS

## 1 THE DOCUMENTATION

The technical documentation intended for operators is mainly broken down into five groups:

## 2 OPERATING DOCUMENTS

- **The Master Servicing Manual (MSM)** is intended particularly for those responsible for helicopter maintenance. It specifies the maintenance limits.
- **The Airworthiness Limitations Section (ALS)** is intended for those responsible for helicopter maintenance. It defines the mandatory limits and checks.
- **The FLight Manual (FLM)** is intended for flight crews. It specifies the limits, standard and emergency procedures and helicopter performance data.
- **The Master Minimum Equipment List (MMEL)** specifies the minimum list of equipment necessary for flight.

## 3 MAINTENANCE DOCUMENTS

- **The Aircraft Maintenance Manual (AMM)** specifies the maintenance procedures necessary to service the helicopter.
- **The System Description Section (SDS)** comprises part 1 of the AMM and explains how the systems operate.
- **The Structural Repair Manual (SRM)** is used to identify and protect materials, and to repair or replace structural components, mechanical components and blades.
- **The standard practices manual (MTC)** combines all the general know-how and knowledge necessary regarding implementation, maintenance, checks, standard repairs and technical and safety instructions and storage conditions.
- **The Wiring Diagram Manual (WDM)** combines all the helicopter wiring diagrams.
- **The Special Index Modification (SIM)** lists the applicable modifications and their corresponding SBs where applicable.

## 4 IDENTIFICATION DOCUMENTS


- **The Illustrated Parts Catalog (IPC)** contains all the spare parts necessary to ensure continued serviceability of the helicopter.
- **The tools catalog (ICO)** contains all the tools necessary to ensure continued serviceability of the helicopter.

## 5 SPECIAL DOCUMENTS

- **Service Bulletins (SB)**, **Alert Service Bulletins (ASB)** and **Emergency Alert Service Bulletins (EASB)** are intended to inform the operators of instructions introduced following new events (incidents, modifications, etc.). These documents supplement the helicopter documents and are incorporated in the latter by updates if necessary.
- **Information Notices (IN)** and **Safety Information Notices (SIN)** are documents issued for information. Their purpose is to remind operators of existing maintenance procedures, or to inform them of changes validated by Airbus and undergoing introduction.

## 6 VENDOR'S DOCUMENTS

- This documentation comprises the following vendor's manuals: **Vendor's Service Bulletins (SBV)**, **Engine Maintenance Manual (EMM)** and **Component Maintenance Manual (CMM)**.

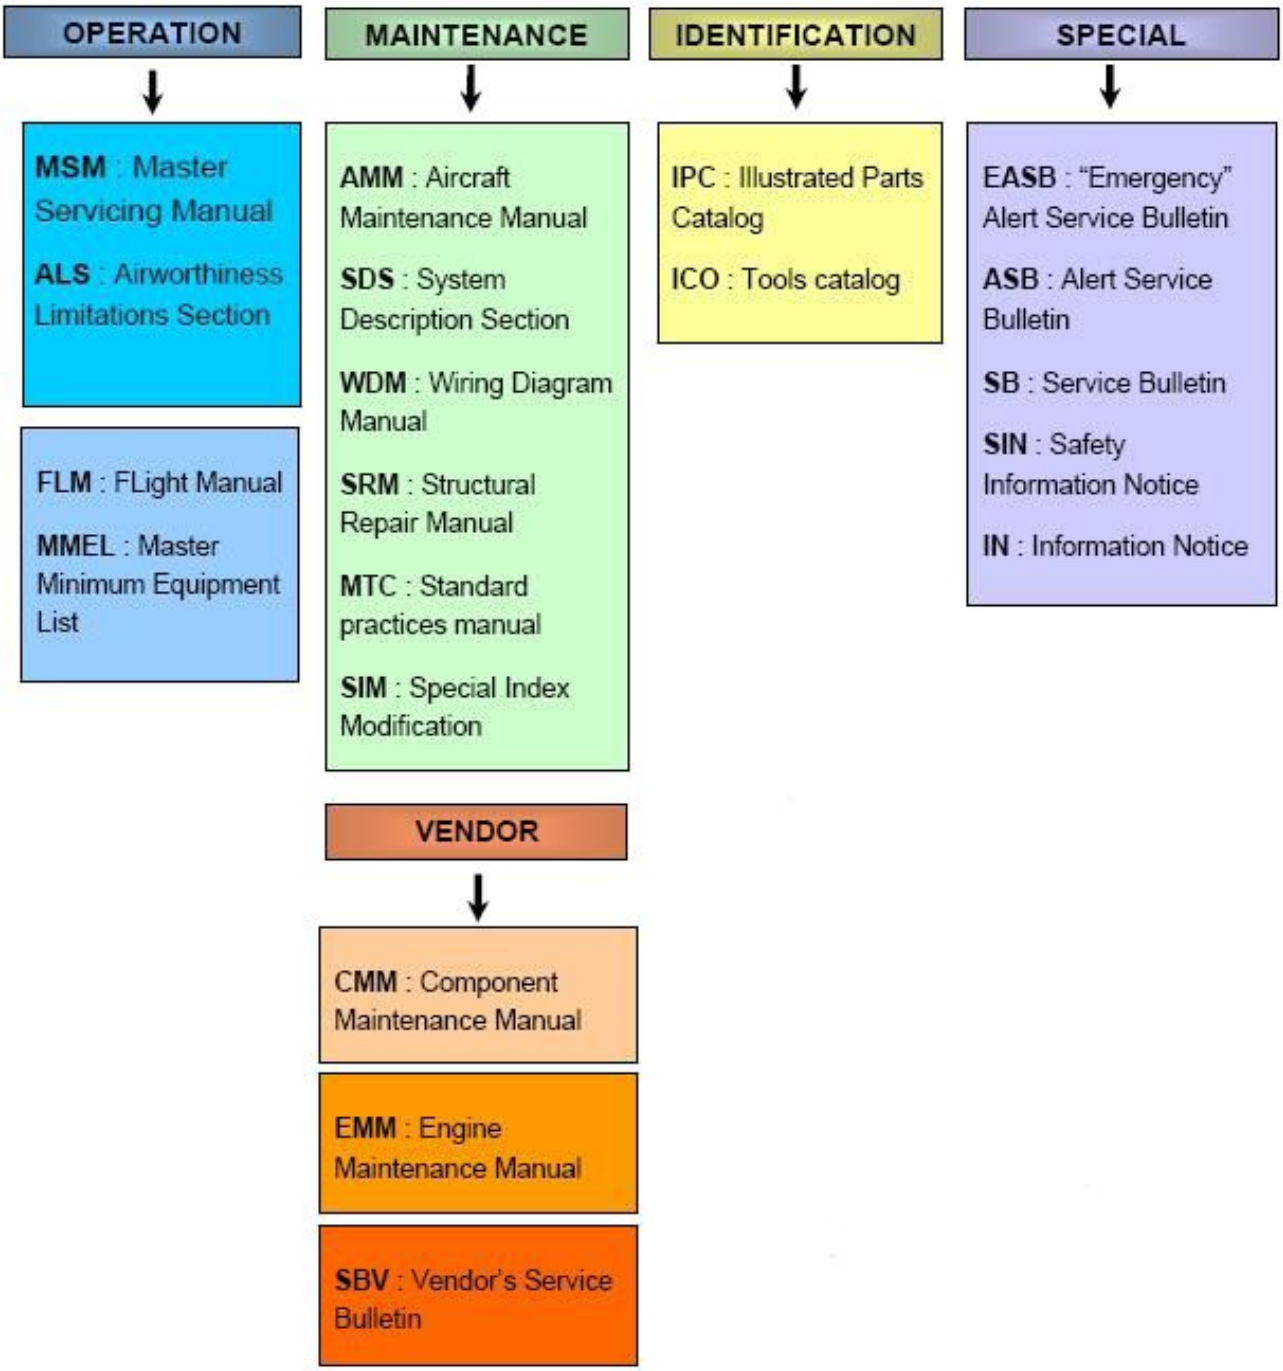


**End of the Document Unit**

# GLOSSARY

| | |
|---|---|
| (-): | Not indicated |
| &: | And |
| //: | Or |
| §: | Paragraph |
| A: | Basic inspection with a cAlendar limit |
| ALF: | Check After the Last Flight of the day |
| ALL MP/N: | ALL Manufacturer Part Numbers |
| ALS: | Airworthiness Limitations Section |
| AMM: | Aircraft Maintenance Manual |
| ASB: | Alert Service Bulletin |
| BFF: | Check Before the First Flight of the day |
| C: | Major inspection with a Calendar limit |
| CHK: | CHecK |
| CLN: | CLeaNing |
| CM: | Condition Monitoring |
| CMM: | Component Maintenance Manual |
| CSS: | Chapter / Section / Subject |
| D: | Day |
| DI: | Detailed Inspection |
| DRN: | DRaiNing |
| DS: | DiScard |
| DU: | Document Unit |
| EASA: | European Aviation Safety Agency |
| ED: | Expiry Date |
| EMM: | Engine Maintenance Manual |
| EXC: | EXCept |
| F: | FAA inspection |
| FAA: | Federal Aviation Administration |
| FC: | Functional Check |
| FH: | Flight Hour |
| FLM: | FLight Manual |
| FM: | Log card |
| FT: | Functional Test |
| G: | Major inspection with an hour-based time limit |
| GR: | Ground Run |
| GVI: | General VIsual check (Visual inspection with access equipment and standard tools) |
| HC: | Hoist Cycle |
| HT: | Hard Time maintenance |
| INF: | INFinite |
| JAA: | Joint Aviation Authorities |

| | |
|---|---|
| LC: | Landing Cycle |
| LOEDU: | List Of Effective Document Units |
| LUB: | LUBrication |
| M: | Month |
| MC: | Maintenance Code |
| MGB: | Main GearBox |
| MMEL: | Master Minimum Equipment List |
| MP/N: | Manufacturer Part Number |
| MRH: | Main Rotor Hub |
| MSM: | Master Servicing Manual |
| NPT: | New Proof Test |
| OC: | On Condition |
| OPC: | OPerating Cycles |
| OPH: | OPerating Hours |
| OPT: | OPTion |
| OTL: | Operating Time Limit |
| P: | P-check |
| P/N: | Part Number |
| PO: | Perform Once |
| POST MOD: | After modification |
| PRE MOD: | Before modification |
| RIG: | RiggInG |
| RS: | ReStoration |
| RTQ: | Readjustment of the TorQue loading |
| S: | Supplementary inspection |
| SB: | Service Bulletin |
| SC: | Sling Cycle |
| SDI: | Special Detailed Inspection |
| SLL: | Service Life Limit |
| S/N: | Serial Number |
| SVC: | SerViCing |
| T: | Basic Technical inspection with an hour-based time limit |
| TA: | Turn Around check |
| TBO: | Time Between Overhauls |
| TC: | Torque Cycle |
| TCK: | Torque ChecK |
| TGB: | Tail GearBox |
| TL: | Type of Limit |
| TRH: | Tail Rotor Hub |
| TSI: | Time Since Installation |
| TSM: | Time Since Manufacture |
| VC: | Visual Check |
| VLV: | Inspection associated with the flights of the day |
| WC: | Work Card |
| WGH: | WeiGHing |

**End of the Document Unit**

# STRUCTURE OF THE MSM

## 1 GENERAL STRUCTURE OF THE MSM

The Master Servicing Manual (MSM) is broken down into two parts.

The first part comprises general information which explains how the MSM operates and how it must be used.

The second part which defines the scheduled maintenance comprises the following sections:

- 05-10-00, which lists the components subject to a Time Between Overhauls (TBO), as well as the corresponding limits.
- 05-11-00, which lists the components subject to an Operating Time Limit (OTL), as well as the corresponding limits.
- 05-12-00, which lists the components subject to On Condition (OC) maintenance, whose inspection interval are given in section 05-2X and 05-3X of the MSM.

05-2X-XX, Scheduled maintenance of the basic equipments :

| Type of inspection | Chapter / Section / Subject | Interval | Frequency |
|---|---|---|---|
| Daily checks | 05-20-00 | BFF//TA//ALF | Periodic |
| Daily checks | 05-20-01 | 10 FH | Periodic |
| P-check | 05-20-02 | 10 FH // 7 D | Periodic |
| S Inspection | 05-21-00 | 150 FH // 12 M | Periodic |
| S Inspection | 05-21-01 | 150 FH | Periodic |
| S Inspection | 05-21-02 | 12 M | Periodic |
| T or A Inspection | 05-22-00 | 600 FH // 24 M | Periodic |
| T Inspection | 05-22-01 | 600 FH | Periodic |
| A Inspection | 05-22-02 | 24 M | Periodic |
| 2T or 2A Inspection | 05-23-00 | 1200 FH // 48 M | Periodic |
| 2T Inspection | 05-23-01 | 1200 FH | Periodic |
| 2A Inspection | 05-23-02 | 48 M | Periodic |
| - | 05-25-00 | specific | Periodic |
| - | 05-26-00 | specific | Perform once |

These sections specify the maintenance operations to be performed on the helicopter, periodically or a limited number of times, regardless of the operating conditions.

05-3X-XX, Scheduled maintenance of the optional equipments :

| Type of inspection | Chapter / Section / Subject | Interval | Frequency |
|---|---|---|---|
| Daily checks | 05-30-00 | BFF//TA//ALF | Periodic |
| P-check | 05-30-02 | 10 FH // 7 D | Periodic |
| S Inspection | 05-31-00 | 150 FH // 12 M | Periodic |
| S Inspection | 05-31-01 | 150 FH | Periodic |
| S Inspection | 05-31-02 | 12 M | Periodic |
| T or A Inspection | 05-32-00 | 600 FH // 24 M | Periodic |
| T Inspection | 05-32-01 | 600 FH | Periodic |
| - | 05-35-00 | specific | Periodic |
| - | 05-36-00 | specific | Perform once |

These sections specify the maintenance operations to be performed on the optional equipment of the helicopter, periodically or a limited number of times, regardless of the operating conditions.

## 2 BREAKDOWN OF THE MSM

The various parts of the MSM are presented in the form of Document Units (DUs).

### 2.1 Identification of the DUs

Each DU is unique and is identified by the following:

- The title of the manual at the top right hand side of the page,
- The effectivity (helicopter type and version) marked at the bottom left hand side of the page,
- The date code of the DU at the bottom left hand side of the page below the effectivity (format: year.month.day),
- The number or title of the DU at the bottom right hand side of the page,
- The page number at the bottom right hand side of the page.

The end of each Document Unit is identified by " End of the Document Unit" on the last page.

### 2.2 Task codes

The DUs in sections 05-1X, 05-2X and 05-3X comprise maintenance tasks. These tasks are identified by a unique code specific to Airbus, comprising a group of 15 characters.

Example:




The first four digits (**22/10**/00/000/000/000) correspond to the ATA chapter/section breakdown.

The fifth and sixth digit (22/10/**00**/000/000/000) are used to subdivide an ATA chapter/section comprising several subjects into individual subjects.

The seventh to fifteenth digit (22/10/00/**000/000/000**) are used to identify the tasks per ATA chapter/section/subject.

### 2.3 List Of Effective Document Units (LOEDU)

The LOEDU specifies the following information, for each DU, in a table:

- The Document Unit (DU): this column specifies the number of the DU or the title of the DU (example: 05-20-00).
- The type: this column is coded with the letter "R" if the DU is revised, "D" if the DU is destroyed, "N" if the DU is new, or has no code for DUs which are unchanged.
- The date: this column indicates the DU date code.

## 3 CLASSIFICATION OF INFORMATION

The DUs in sections 05-10-00, 05-11-00, 05-12-00, 05-20-0x, 05-21-0x, 05-22-0x, 05-23-0x,05-25-00, 05-26-00, 05-30-0x, 05-31-0x, 05-32-0x, 05-33-0x, 05-35-00 and 05-36-00 are classed in increasing order according to ATA 100 numbering.

**End of the Document Unit**

# UPDATE OF THE MSM

## 1 REVISION OF THE MSM

The MSM is revised approximately every 6 months.

The MSM cover page bears the issue date code (first issue), the current revision number taken in chronological order followed by the revision date code (example: Issue date: 2010.01.30, Revision 002: 2010.07.30, the last applicable revision is revision 002 with a date code of 2010.07.30).

The date code marked on the new or revised DUs corresponds to the revision date code marked on the cover page.

## 2 UPDATE OF THE MSM

### 2.1 Update procedure

The user is responsible for updating his documentation each time he receives a revision or a new issue from the manufacturer. The MSM is updated using the new LOEDU which specifies which DU must be inserted (new DU), replaced (revised DU) or removed (deleted DU). A deleted DU is issued with the wording "DU TO BE REMOVED FROM THE MANUAL" in the revision concerned.

Once the MSM has been updated, the date code of each DU indicated at the bottom left hand side of each page must correspond with the LOEDU.

The beginning of the MSM includes a "HIGHLIGHTS OF THE REVISION" page which explicitly summarizes the modifications made to each revision or new issue.

**NOTE**

*After updating, the "RECORD OF REVISIONS" page at the beginning of the MSM must be completed (date, name and signature).*

### 2.2 Identification of the modifications

Modifications are identified by a revision mark in the form of a vertical line in the right hand margin of the page.

Revision marks are not used in the following DUs:

- LOEDU,
- Table of contents,
- Highlights of the revision.

## 3 CUSTOMER COMPLEMENT (CC): ISSUED ON A GREEN BACKGROUND

The Customer Complement adds Document Units to the Basic Manual, which partially or totally modify the information it contains.

THE INFORMATION GIVEN ON THESE DOCUMENT UNITS TAKES PRECEDENCE OVER THE INFORMATION GIVEN IN THE BASIC MANUAL.

This information is specific to the customer and helicopter(s) identified at the bottom of the pages.

The Customer Complement Document Units can be revised by reissue of the complete typesetting for a given customer. No Basic Manual Revision Document Unit is cancelled by a Customer Complement Revision.

A supplement to the “LIST OF EFFECTIVE DOCUMENT UNITS” lists the Customer Complement Document Units. The Basic Manual Revisions (on a white background) are completely separate from the Customer Complement Revisions (issued on a green background).

## 4 EFFECTIVITY

The operator must check the effectivity of the MSM used (correctly updated) for the helicopter concerned.

The effectivity (helicopter type and version) is indicated on the cover page and is repeated at the bottom of each page comprising the MSM DUs.

**End of the Document Unit**

# BREAKDOWN OF THE MSM

## 1 PURPOSE OF THE MSM

The Master Servicing Manual (MSM) is drawn up by the helicopter manufacturer and specifies all the maintenance operations to be performed by the operator.

It specifies all the maintenance operations and limits recommended by the helicopter manufacturer, to ensure continued airworthiness, operational availability and performance of the helicopter (*), in all its varied operating missions.

For the maintenance operations and limits assigned to the engine components, refer to the engine manufacturer's documentation.

(*) Helicopter (type/version) defined by Airbus.

## 2 CHANGES TO THE MSM

The MSM is modified by the manufacturer according to changes in helicopter definition and operational feedback.

The technical content of this document is approved under authority DOA ref. EASA.21J.700.

## 3 HELICOPTER MAINTENANCE

Helicopter maintenance consists in applying all the operations specified in the various sections of the MSM.

It must be performed by personnel with the required qualifications.

Maintenance includes the monitoring, servicing and reconditioning of a helicopter's components, as specified in the various manuals, taking into account the information that the manufacturer makes known to the operator via Alert Service Bulletins, Service Bulletins, Safety Information Notice, Information Notice etc.

## 4 TYPES OF MAINTENANCE

**Preventive Maintenance:**

Preventive maintenance consists of all the scheduled, and generally repetitive, operations to check and maintain a given operating condition.

**Corrective Maintenance:**

Corrective maintenance consists of all the operations that are performed after detection of a fault or failure in order to re-establish the initial operating condition.

**Remedial Maintenance:**

Remedial maintenance consists of all the operations initiated to permanently correct a failure, and to partially or wholly eliminate the preventive and corrective maintenance of this failure.

The preventive maintenance is given in the Master Servicing Manual.

## 5 DEFINITION OF THE MAINTENANCE MODES

There are three main maintenance modes:

- Hard time maintenance.
- On-condition maintenance.
- Condition monitoring maintenance.

The modes (defined below) differ mainly in how the replacement (or repair) of a component with a serviceable component is initiated. With the first two modes, the aim is to replace (or repair) the component before it fails, whereas in the third mode, to replace it after it fails.

## 5.1 Hard time maintenance

A component subject to hard time maintenance must be removed at the latest when it reaches its limit.

There are three types of hard time maintenance limits:

- **Service Life Limit (SLL)**

  The SLL is an airworthiness limitation.

  Components which are essential for operating safety which are subject to undetectable damage due to the loads they withstand, are covered by a Service Life Limit. These components must be removed from service when the specified limit is reached.

  These limits are listed in chapter 04.

- **Operating Time Limit (OTL)**

  Components whose possible failure would have lesser consequences on flight safety than components with a Service Life Limit, are assigned an Operating Time Limit. These components must be removed from service when the specified limit is reached.

- **Time Between Overhauls (TBO)**

  A TBO is assigned to a complete assembly. The interval corresponds to the operating time permitted before an overhaul is performed in a specialized workshop. The overhaul allows the assembly to be returned to service for a new period.

  The interval corresponds to a period during which any increase in damage cannot be detected by routine maintenance (example: internal corrosion, fretting leading to the loosening of bolted assemblies, etc.).

**NOTE**

*The time limits assigned to components guarantee flight safety with regard to the flight load fatigue alteration of components with no external deterioration. These time limits are not a commercial guarantee because a component may be removed due to wear, fretting corrosion or scoring, etc., before the expiry of the time limits.*

*The only warranty applicable to the helicopter and any component is the warranty included in the Sales Contract for the helicopter and the components.*

## 5.2 On-Condition maintenance

A component subject to On-Condition maintenance must be inspected periodically to confirm:

- that there is no damage,
- or that the damage found is within the removal or maintenance criteria specified in the documentation.

In both cases, the component is kept in service until the next inspection. The component must be removed from service when it reaches the criterion for removal, or made serviceable again as per the instructions given in the documentation.

The visual inspection is aimed at the overall external appearance of the component (no distortion, failure, cracks, scratches, signs of heating or wear, etc.), which would modify its original condition.

STANDING INSTRUCTIONS RELATIVE TO CONDITION: Surface deterioration and deterioration to protection and paint on all helicopter components must be examined and treated without delay in accordance with the applicable instructions (criteria, then reworking).

### 5.3 Condition monitoring maintenance

A component is subject to condition monitoring only after its failure (which has no impact on flight safety) has been detected. Such failures are detected during maintenance or in service. These components are not listed in the MSM.

**NOTE**

*Some components can be subject to several maintenance modes, for example, an OTL during which a condition check (OC) is to be performed.*

## 6 EFFECTIVITY - RESPONSIBILITY

The limits assigned to the component part numbers listed in the MSM are applicable to material:

- acquired directly from Airbus or through the Airbus subsidiaries or distribution network,
- purchased from the equipment vendors listed in our spare part catalogs, either directly or through their own distribution network.

In all cases, the manufacturing source is specified in the "airworthiness document" (JAA Form One or equivalent).

Airbus will not carry out repairs on components which were procured other than through the Airbus distribution network.

**WARNING**

**IT IS PROHIBITED TO REUSE PARTS, EQUIPMENT OR ASSEMBLIES, COMING FROM A HELICOPTER WHICH HAS INVOLVED IN AN ACCIDENT, WITHOUT FORMAL TECHNICAL APPROVAL FROM THE AIRBUS CUSTOMER TECHNICAL SUPPORT DEPARTMENT.**

**REMINDER: THE AIR ACCIDENT INVESTIGATION BOARD OF THE COUNTRY CONCERNED IS RESPONSIBLE FOR CLASSING AN EVENT AS AN ACCIDENT.**

## 7 MAINTENANCE INTERVAL

### 7.1 Daily checks

The purpose of the daily checks is to ensure the serviceability of the aircraft for the flights.

The daily checks are broken down as follows:

- **Check before the first flight of the day (BFF)**

The purpose of this check is to confirm the airworthiness of the aircraft once it has been positioned on the takeoff area after elimination of possible failures that have been reported by the pilot in the aircraft log book and that are liable to affect the safety level of the aircraft. The interval between this check and the first of the day should be as short as possible.

- **Turn-around check (TA)**

  The turn-around check is intended to confirm the short-term serviceability of the aircraft further to the preceding flight (checking the levels and mission related particular features etc.).

- **Check after the last flight of the day (ALF)**

  The check after the last flight of the day is intended to confirm the serviceability of the aircraft for the flights scheduled for the next flying day.

  This check must be performed after the last flight of the day without exceeding a 10 FH interval between two checks.

- **P-check**

  The P-check is intended to check the operational availability of the helicopter between two checks.

  This check must be performed at the latest at 10 FH without exceeding 7 days.

  There are three possible cases in which this check is to be triggered:

  - The helicopter flies 10 FH within less than 7 days. The P-check must be performed at the latest at 10 FH.

  - The helicopter flies less than 10 FH within 7 days. The P-check must be performed at the latest at 7 days.

  - The helicopter is grounded during 7 days or more. The P-check must be performed before resuming flights.

The purpose of these checks is to ensure the operational availability of the helicopter for flight and they must be performed by:

- a maintenance-qualified personnel,

or

- a crew member who has received an appropriate training by the operator's maintenance department, if authorized by local authorities.




**If in doubt or if a failure is detected, the crew member must call on the head of maintenance in order to perform the maintenance operations.**

In compliance with the criteria specified in Maintenance Manual, the mechanic will decide:

- Either to authorize flights while monitoring the defective component (in such a case the mechanic must inform the pilot of the criteria which must be observed to continue the flights of the day),
- or to carry out the remedial actions before resuming flights.

**Acceptance of an aircraft by the pilot and/or when a modification is embodied on the aircraft:**

The mechanic or the person in charge of the maintenance engineering must inform the pilot on a routine basis of:

- any modification to the definition that has been embodied on the aircraft,
- any possible change in the limit interval of the component modified.

- **Cold weather and very cold weather routine check**

  According to the lowest temperatures reached, a supplementary program is defined in the AMM (AMM 05-40-00, 6-3).

## 7.2 Supplementary inspection (S)

The supplementary inspection must be performed:

- every 150 FH and/or 12 months.

The inspection focuses on the condition of the components with short inspection intervals (less than the basic inspection).

The maintenance operations are to be carried out when the indicated time limit is reached.

## 7.3 Additional inspection (F)

Certain regulatory authorities require an inspection complying with the provisions of FAR 43-11 under certain conditions (e.g. renewal of Certificate of Airworthiness, change of owner, 100 FH inspection, etc.).

Far (or type "F") inspection (cf Work Card AMM 05-32-00, 6-1). This inspection is basically similar to the 100 FH interval operations.

## 7.4 Basic inspection (T or A)

The basic inspection comprises checks associated with:

- operation, to be performed every 600 FH (called T inspection) or every 24 months (called A inspection).

The basic inspection includes:

- condition monitoring of the components and systems by functional tests,
- inspection of the condition of the components which have a direct impact on the airworthiness of the helicopter.

It is aimed at checking the overall condition of the helicopter through detailed visual checks of the systems and equipment (no distortion, failure, cracks, scratches, corrosion, signs of heating, wear, impacts, etc.).

**NOTE**

*At each inspection, make sure:*

*- that no additional action has recently been specified by the manufacturer by way of an Alert Service Bulletin or Service Bulletin, etc.,*

*- that no interval or limit has been modified by way of an Alert Service Bulletin or Service Bulletin, etc.,*

*- that no interval or limit specified by the MSM has been reached.*

*The limits (TBO, OTL, SLL) specified in MSM section 05-10-00, 05-11-00 and ALS section 04-10-00 must also be taken into account where necessary in order to replace components which must be replaced before the next inspection.*

## 8 MAINTENANCE RELATED TO EQUIPMENT MANUFACTURER DOCUMENTATION

For the maintenance of equipment approved under STC (Supplemental Type Certificate), refer to the applicable supplier documentation provided upon delivery of this equipment.

**End of the Document Unit**

# USE OF THE MSM

## 1 ADAPTATION OF THE MSM

The Master Servicing Manual (MSM) presents the limits for the maintenance operations recommended by the manufacturer.

It can be used as is or it can be adapted by each operator according to his operational needs on the condition he has the approval of his aviation authorities and that he complies with the interval for each maintenance operation.

## 2 INFORMATION FEEDBACK FROM THE OPERATOR TO THE MANUFACTURER

The operator must inform his local aviation authorities and the aircraft manufacturer of any significant failures discovered in operation or in maintenance, particularly when the component in question is maintained by condition monitoring.

This feedback can be essential for maintaining airworthiness (refer to chapter 04 – DU: USE OF THE ALS - §: "Occurrence reporting").

This is also applicable in case of an accident.

## 3 IN-SERVICE MONITORING

### 3.1 Airframe monitoring

The in-service monitoring of the airframe must be recorded in the helicopter logbook.

### 3.2 Monitoring of components

All the components listed in section 05-10-00, 05-11-00, 05-12-00 of the MSM are to be monitored in service, unless "not to be monitored in service" is specifically mentioned in the task.

The in-service monitoring of components consists in recording the date of installation, the number of flight hours and/or the calendar time and/or the cycles logged on the equipment log card **(FM)**.

If the component does not have a log card (component monitored via the log card of its higher assembly or component without a serial number, etc.), before installation, the operator must organize his documentation in order to comply with the inspection intervals and limits relating to this component (refer to Standard Practices Manual Work Card 20.08.05.101).

These records must be kept if the component is transferred from one helicopter to another.

All the documentation must be organized to enable recording of all the parameters used to comply with the limits.

### 3.3 Specific case of elastomer hoses

The operator must calculate the aging of elastomer hoses for rejection in accordance with the instructions of Standard Practices Manual (MTC) Work Card 20.09.01.902.

The operator must create a follow-up document (log card for example) in order to comply with the operating time limits.

## 4 COMPONENT PART NUMBERS

### 4.1 Definition


- **Manufacturer Part Number (MP/N)**: This is the identification number of the component marked on the identification plate or directly on the component.

- **Airbus Part Number (P/N)**: This is the Airbus part number which is associated with the manufacturer's part number (MP/N) for components which are not manufactured by Airbus.

The part numbers of the components or dynamic components which are given in the MSM are the manufacturer's part numbers (MP/N).

In the case of components which are not manufactured by Airbus, the MP/N is followed by the associated P/N (in brackets).

Example:

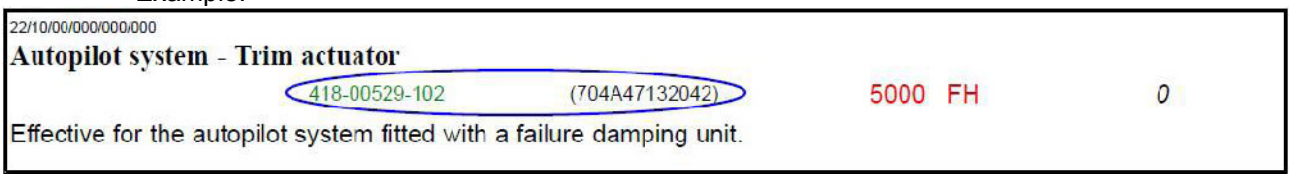


In some cases the P/N is not specified, in this case it is replaced by a hyphen.

### 4.2 Part Number followed by a suffix

In some cases, the MP/N can be assigned a suffix (example: MP/N 350A31-1831-04**M**), used for spares to indicate the installation of an optional component or a specific configuration.

These MP/Ns with a suffix generally do not appear in the MSM.


The limit applicable to an MP/N with a suffix is identical to that of the same MP/N without a suffix.

Example: the limit given for assembly MP/N 350A31-1831-04 is valid for assembly MP/N 350A31-1831-04 and assembly MP/N 350A31-1831-04M.

### 4.3 Applicability of the limits

The limit(s) specified for the first MP/N are valid for all the other MP/Ns listed in the same task.

Example:

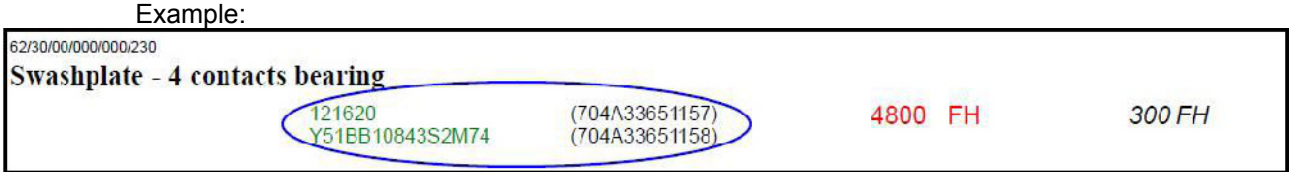


### 4.4 Changes to Part Numbers

Unless otherwise stated, the time limits and inspections apply to the component whose part number is listed in the MSM and to its future changes, including those not already indicated in this section. In this case, contact the Airbus technical support department to confirm the installation effectivity of the dash number.

## 5 LIMITS

A component or a maintenance operation can be subject to one or more limits, expressed in:

- flight hours,
- calendar time,
- cycles.

### 5.1 Flight Hours

- Flight Hours (FH), are counted from takeoff to landing.

### 5.2 Calendar time

Calendar time can be expressed:

- in Months (M),
- in Days (D),
- Before the First Flight of the day (BFF),
- Turn Around check (TA),
- After the Last Flight of the day (ALF),
- from the date marked on the equipment label (ED: Expiry Date).

### 5.2.1 Airframe initial aging date

The helicopter airframe initial aging date to be taken into account is the date marked on the helicopter identification plate.

### 5.2.2 Initial aging date for components

- Unless specified differently, the start date (T0) to be taken into account for the aging of components and dynamic assemblies is the date of first installation or first depreservation to be recorded on the Log Card for:

  - new components or dynamic assemblies (with OTL or TBO),


  - not new components or dynamic assemblies (with TBO) after accomplishment of an overhaul.
- In this case, the MSM Tasks do not contain any specification.

  The storage time before installation is therefore not to be taken into account on the condition that storage was in accordance with the applicable documentation, except for the following specific cases.

- For some components, the aging date to be taken into account is the date of manufacture marked on the Log Card (FM). In this case, TSM (Time Since Manufacture) is specified in each task concerned in the MSM.

Specific cases:

Components or dynamic components are sometimes subject to a limit since installation and a limit since manufacture. In this case, both limits followed by TSI (Time Since Installation) and TSM (Time Since Manufacture) are indicated, as per the following example:

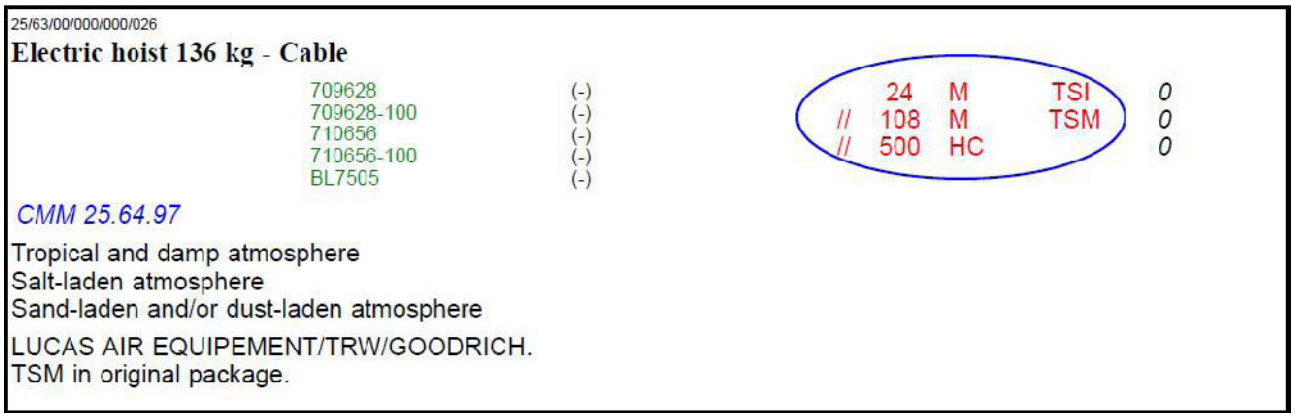


**NOTE**

*If there is no log card, when the component arrives in the stores, it is advisable to create a "Follow-up Sheet" and to fill out the helicopter logbook when the component is installed. When the component is installed on the helicopter, the applicable date is the date of manufacture marked on the component's identification plate.*

**NOTE**

*Dynamic components, which have been subject to work in a specialized workshop or long-term storage in accordance with the applicable instructions during this period, may be subject to an extension to this calendar time limit.*

*In this case the operator must make a request with the Airbus Technical Support Department and obtain approval from the manufacturer and the Airworthiness Authorities.*

### 5.3 Cycles

According to the component, the cycles can be expressed either as:

- **Takeoff/landing cycles**: LC (Landing Cycle)

  1 LC = 1 takeoff/landing.

- **Sling cycles**: SC (Sling Cycle)

  1 SC = 1 release with load on ground and 3 SC = 1 release in flight (load not on the ground).

- **Hoisting cycles**: HC (Hoist Cycle)

  1 HC =

  - In flight, one downward movement + one upward movement, whatever the length of cable and load involved.

  - On the ground, one downward movement of 5 meters or more and one equivalent upward movement, whatever the load involved.

- **Operating cycles**: OPC (OPerating Cycles)

  The definition is specified in each concerned task.

- **Operating hours**: OPH (OPerating Hours)

  The definition is specified in each concerned task.

### 5.4 Periodic and Perform Once limits

The limits specified in section 05-2x-0x of the MSM must be complied with:

- **Periodically**: the maintenance operation must be performed at the latest when the indicated limit is reached.

**NOTE**

*For operational reasons, the maintenance operation can be performed before the limit is reached, however, the maximum interval between two maintenance operations must be complied with.*

or

- **Once only**: the maintenance operation must be performed once only, when the indicated limit is reached.

It must not be performed before the limit is reached.

These maintenance operations are identified by a dotted line around the task and by code PO (Perform Once) in front of the limit value.

These operations can be performed either:

- After installation of a component removed from the same helicopter,

- After the introduction to service of a new, overhauled or repaired component,

- After installation of a component originating from another helicopter,

- Each time after the component is installed.

The start of the maintenance operation is specified on a routine basis in each task concerned.

Example:

64/10/00/000/003/175

**Tail rotor blade**

*AMM 64-10-00, 6-4* PO 30 FH *5 FH*

DI.

After the introduction to service of a new, overhauled or repaired component.
Perform a sound test (tapping) to check the bonding of the stainless steel leading edge and electrical bonding plate.

## 5.5 Performance interval

Some components and maintenance operations are assigned several performance limits separated by the **"//" or "&" sign**.

In the case of limits separated by the **"//" sign**, **the maintenance operation must be performed when the first limit is reached**.

The next limit at which the component is to be rejected or the maintenance operation is to be performed will once again be the first limit reached.

In the case of limits separated by the "&" sign, the maintenance operation must be performed at each limit indicated.

Example 1:

25/63/00/000/000/056

**Electric hoist 136 kg**

| | | | | |
|---|---|---|---|---|
| 76370-110 | (704A41815032) | 48 M | | *146 D* |
| 76370-111 | (704A41815033) | // 1500 HC | | *150 HC* |
| 76370-130 | (704A41815035) | | | |
| 76370-130-D | (-) | | | |
| 76370-140-D | (704A41815085) | | | |

*AMM 25-63-10, 4-2*

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.

Section 05-10-00

. An electric hoist performs 1000 HC over a period of 48M (TSI). The first limit reached by the electric hoist therefore is 48 M; it must be removed for overhaul (TBO) and returned to service for another period.

. After overhaul, the electric hoist is installed on a helicopter and then performs 1500 HC in 24 M(TSI). The first limit reached by the electric hoist is therefore 1500 HC. It must therefore be removed for another overhaul (TBO).

Example 2:

| | | | | |
|---|---|---|---|---|
| 53/10/00/000/000/020<br>**Tail boom-to-fuselage junction**<br>Each time after the component is installed.<br>Check.<br>TCK | *AMM 53-31-00, 6-1* | PO<br>(&) | 30 FH<br>600 FH | *5 FH*<br>*10 FH* |

Section 05-26-00

The maintenance operation must be performed once at 30 FH and once at 600 FH after installation. The maintenance operation must be repeated only if the component is removed then reinstalled or replaced.

## 5.6 Specific and severe atmospheric operating conditions

Certain specific and severe climatic conditions are considered as specific operating conditions. This concerns the use of helicopters in the following conditions:

- Tropical and damp atmosphere:

  . Combination of high ambient temperatures and humidity levels (from +28°C (+82.4°F) and 75% relative humidity).

- Salt-laden atmosphere:

  . Ship-based or,

  . Based for more than 50% of its time less than 1 km from the coast or,

  . Spending more than 50% of its time in offshore flight at low altitude (below 1,000 feet).

- Sand- and/or dust-laden atmosphere:

  . Sand-laden wind and/or landing on sandy ground.

- Hot climatic conditions:

  . High solar radiation temperatures above +40°C (+104°F).

- Cold weather:

  . Temperatures observed or forecast from -10°C to -30°C (+14°F to -22°F).

- Very cold weather:

  . Temperatures observed or forecast from -30°C to -40°C (-22°F to -40°F).

The scheduled maintenance relating to these operating conditions is covered with all the MSM tasks.

These operating conditions require not only the operations specified in the MSM and standard maintenance operations, but also the preventive measures recommended in **AMM task 12-30-00, 3-4**. Since the interval is not specified, the operator must reapply the measures according to his own experience in the corresponding conditions.

## 5.7 Maximum limit value

The maximum limit value represents the limit not to be exceeded. No tolerance is permitted on the maximum limit value.

The maximum limit value equals to a limit value + margin value.

### 5.7.1 Definition of the margin

To introduce "flexibility" into maintenance planning in order to compensate for unpredictable situations (e.g. unforeseeable increase in the helicopter utilization rate), Airbus defines a value, called "margin", to be added to a limit value.

This margin, added to the limit value to which it is applicable, results in the maximum limit value (limit value + margin value) to be taken into account for two consecutive inspections.

### 5.7.2 Application of the margin

The margin can be used repetitively for each limit value interval (refer to figure which follows).

However, to maintain certain "flexibility" in maintenance planning, Airbus recommends to plan the maintenance operation using the limit value without taking the margin into account.

### 5.7.3 Specification of the margin


The margin value and its units are specified as shown in the following example.

Example:

| | | | |
|---|---|---|---|
| 21/51/00/000/000/030<br>**Air conditioning system**<br>GVI.<br>Check. | *AMM 21-51-10, 6-1* | 500 FH<br>// 24 M | *50 FH*<br>*73 D* |

No units are specified when the margin equals zero.

### 5.7.4 Example of how the margin is used

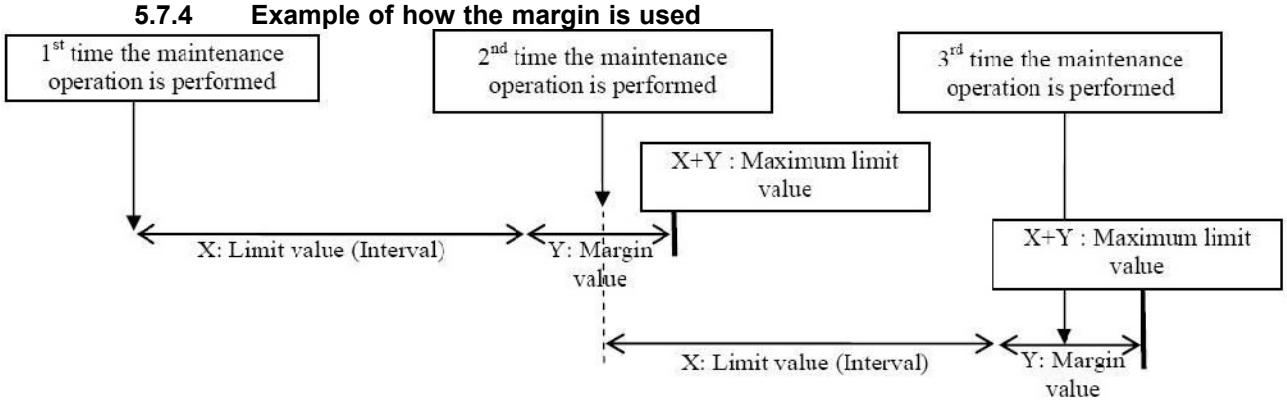


X is the limit value for performing the maintenance operation and Y is the margin value added to the limit value.

After using the first margin value (partially or completely), the next maintenance operation is to be performed again within the X+Y interval, that is to say before the next maximum limit value.

# 6 AUTHORIZATION TO TRANSFER A COMPONENT (PART OR ASSEMBLY) FROM ONE AIRCRAFT VERSION TO ANOTHER AIRCRAFT VERSION

## 6.1 Versions on which the transfer of components is applicable

The versions on which the transfer of components is applicable are listed in the table below:

| Type of aircraft | Versions |
|---|---|
| AS 350 | B, BA, BB, B1, B2, B3, D, L1 |
| AS 355 | E, F, FA, F1, F2, N, NP |
| AS 550 | A2, C2, U2, C3 |
| AS 555 | AF, AN, SN, UF, UN, AP |
| EC 130 | B4, T2 |

## 6.2 Components NOT subject to In-Service Monitoring (Condition Monitoring)

Transfer of components not subject to in-service monitoring is authorized on all the versions mentioned in the table above further to compliance with MTC Work Card 20.08.05.104.

## 6.3 Components subject to In-Service Monitoring

### 6.3.1 Components subject to a Service Life Limit (SLL)

The transfer rules are defined in the ALS.

### 6.3.2 Components subject to Time Between Overhauls (TBO), Operating Time Limit (OTL), On-Condition maintenance (OC)

6.3.2.1 Transfer Authorization

Transferring a component listed in the MSM, from an aircraft version "x" to an aircraft version "y" is only authorized if the following conditions are simultaneously met:

- the aircraft versions "x" and "y" are listed in the above table, transfer of components from any other aircraft version or type is prohibited,
- the part number of the component to be transferred is listed both in the MSM of version "x" and in the MSM of the version "y",
- no temporary limit of the component to be transferred is assigned in the MSM of version "x" or in the MSM of version "y".
- MTC Work Card 20.08.05.104 is applied during the transfer.

6.3.2.2 Application Rules

The following rules are to be applied if the transfer is authorized:

**Components subject to Time Between Overhauls (TBO) and Operating Time Limit (OTL)**

If the time intervals (flight hours and/or cycles and/or calendar time) for version “x” and version “y” are identical, keep on logging the flight hours (and/or cycles and/or calendar time) on version "y".

If the flight hours (and/or cycles and/or calendar time) for version “x” and version “y” are different, convert the flight hours (and/or cycles and/or calendar time) already logged (since new or since last overhaul) using the rule applicable for the service life as defined in the ALS chapter.

Then keep on logging the flight hours (and/or cycles and/or calendar time) adding them to the value obtained by applying the calculation rule.

CAUTION

**If the flight hours of a TBO assembly have been converted, the operator must make sure that the SLL or the OTL of the components making up this assembly is sufficient to reach the TBO.**

**If this is not the case, the assembly must be removed when the component reaches its service life limit or operating time limit.**

**Components subject to On-Condition maintenance (OC)**

If the component inspection intervals for version "x" and version "y" are identical, keep on logging the hours and cycles on version "y".

If the inspection intervals (and/or cycles and/or calendar time, etc.) of version "x" and version "y" are different, carry out these operations during the transfer, then observe the interval of application specific to version "y".

## 7 RECORDING

In all cases record the transfer information and calculation on the equipment log card of the component concerned.

An individual log card must be drawn up if the component has been monitored via the log card of its higher assembly.

## 8 MAINTENANCE CODES (MC)

To make it easier to perform the maintenance operations, each maintenance operation included in section 05-20 and 04-20 is identified by one or mode codes as listed below:

- LUBrication/SerViCing **(LUB/SVC)**

  This includes work such as routine lubrication and servicing, filling/topping-up of oils, fluids, liquids and checking of pressures.

- Visual Check **(VC)**

  Visual inspection, without removal of the physical condition of certain components such as oil levels, tire wear, accumulator pressure, etc.

- General VIsual check **(GVI)**

  A general visual check is a visual inspection, without removal, to detect and assess deterioration or incorrect operation of a component or assembly. This check may require access equipment, ladders or platforms, and inspection means, mirror, light or screwdriver. The doors and hatches are opened or removed in order to access the components.

- Detailed Inspection **(DI)**

  A detailed inspection is an inspection to detect and assess deterioration or incorrect operation of a component or assembly. This inspection may require access equipment, ladders, platforms and specific tools, and may require removal of the component or assembly. The doors and hatches are open or removed.

- Special Detailed Inspection **(SDI)**

  A special detailed inspection is an inspection to detect and assess deterioration or incorrect operation of a component or assembly. This inspection may require a specific process such as dye penetrant inspection, radiography, etc.

- Functional Test **(FT)**

  A functional test/check is a test which is performed to determine whether one or more functions of a system operate within stipulated limits. Normally this test is performed without the removal of components and using a maintenance tool.

- CLeaNing **(CLN)**

  To remove dirt and/or foreign bodies from a system or surface. Cleaning may require removal of the component, such as for a filter for example.

- DiScard **(DS)**

  A component is withdrawn from service at a specified limit. Discarding normally applies to parts such as cartridges, containers, cylinders, batteries, etc.

- ReStoration **(RS)**

  This work involves restoring a component to a specific standard. Restoration can vary from cleaning or replacing detail parts to a complete overhaul.

- Readjustment of the TorQque loading (Retorque) **(RTQ)**

  Readjustment is a maintenance procedure which consists in applying the tightening torque to an assembly, without checking its value.

- Torque CheckK **(TCK)**

  The aim of the torque check procedure is to check that the tightening torque of the assembly is not below the specified minimum value.

- WeiGHing **(WGH)**

  The aim is to remove the equipment in order to weigh it using scales, to check its integrity and to make sure that there are no losses.

- New Proof Test **(NPT)**

  The aim is to perform a proof pressure test to check that there are no leaks.

- DRaiNing **(DRN)**

  Draining/replenishing consists in replacing all the fluid, liquid, oil or fuel in a component.

- Ground Run **(GR)**


A ground run consists in checking certain parameters of a component or a function with the rotor spinning or dynamically after operation.

- RiggInG **(RIG)**


  Rigging consists in adjusting a control channel or a set of components which must have an operating range in operation.

## 9 CONTENT OF A TASK


**Section 05-1x-00**

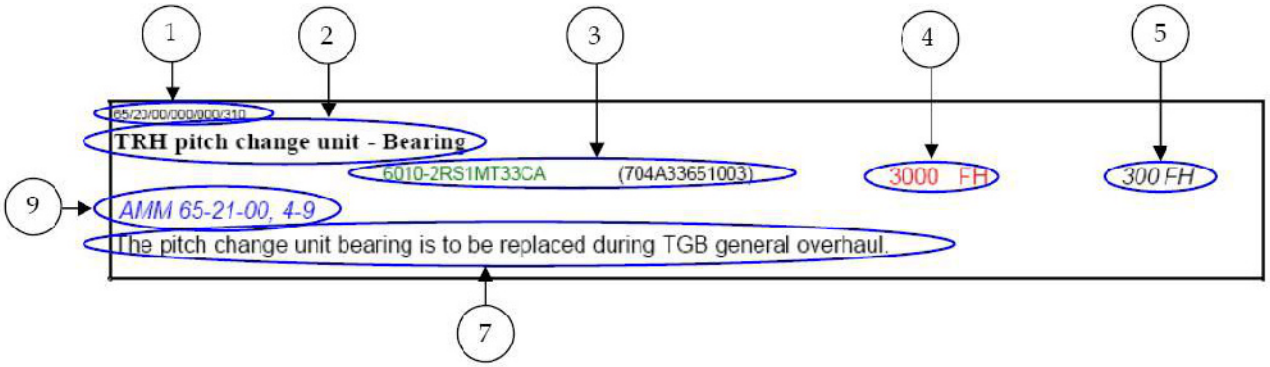


**Section 05-2x-0x**

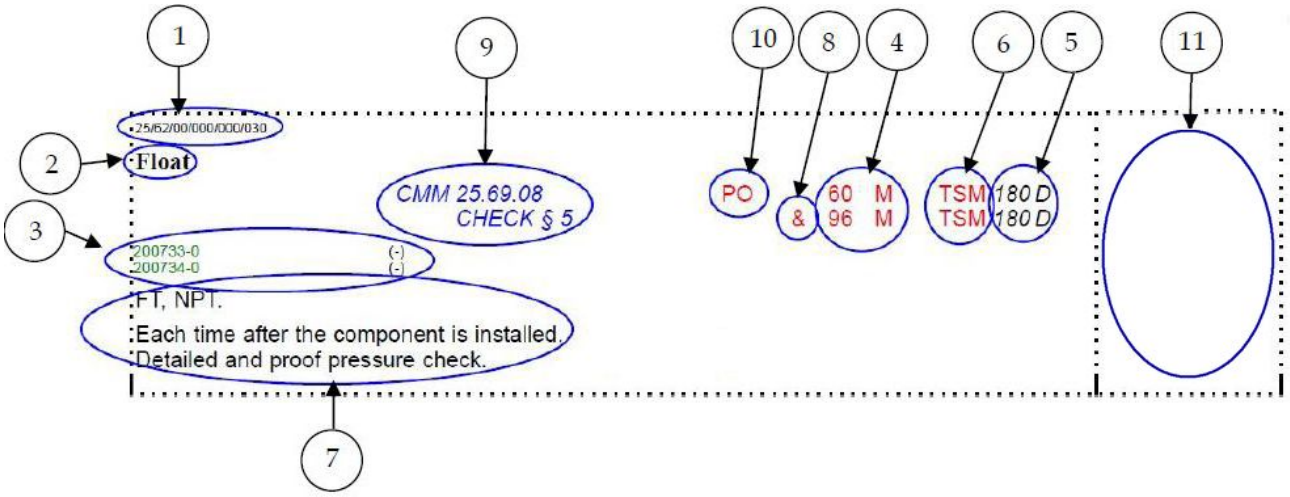


**End of section**

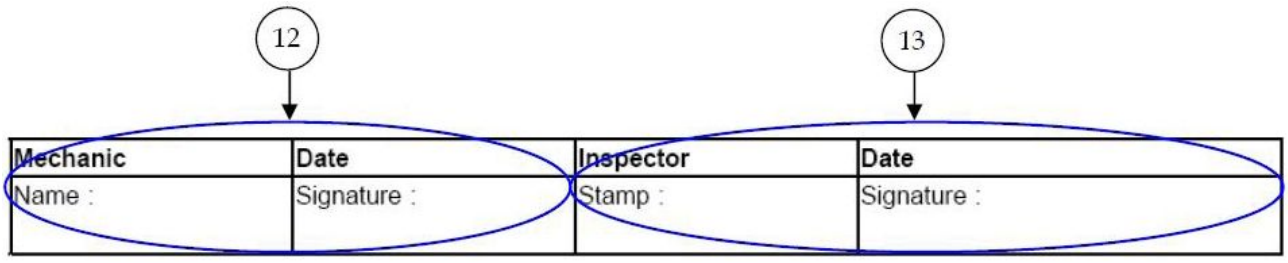


- 1 - Task number (refer to the "STRUCTURE OF THE MSM" DU in § 2.2)
- 2 - Designation

- 3 - Equipment manufacturer's part number and the Airbus management number (refer to § 4)
- 4 - Limit value(s) and unit(s) (refer to § 5.1 / 5.2 / 5.3)
- 5 - Margin value(s) and unit(s) (refer to § 5.7)
- 6 - Start of the limit (TSI, TSM) if necessary (refer to § 5.2.1 / 5.2.2)
- 7 - Comments if necessary
- 8 - //: or - &: and (refer to § 5.5)
- 9 - Reference documentation AMM, CMM, ...
- 10 - Perform Once operation (refer to § 5.4)
- 11 - Initial: Date of application and mechanic signature
- 12 - Mechanic: Date, name and signature
- 13 - Inspector: Date, stamp and signature

**End of the Document Unit**

# OPTIONAL

## 1 COMPATIBILITY / INCOMPATIBILITY

A helicopter can be equipped with various optional items. There can be incompatibilities between certain optional installations which can appear at two levels:

**At operational level:**

- In this case, incompatibilities between optional items are specified in the Flight Manual.

**At installation on the helicopter:**

- Either it is impossible to install the fixed parts at the same time.
- Or there is total or partial installation incompatibility of the removable parts at the same time.

The following table lists all the approved optional installations with their incompatibilities or effects on operation, as specified in a Flight Manual Supplement.

## 2 TABLE OF APPROVED OPTIONAL INSTALLATIONS

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 1 | B3, C3 | Dual control - Copilot cyclic stick | – | 32, 45 |
| 2 | B3, C3 | Twist grip throttle control on copilot's collective pitch levers | – | 32, 45 |
| 3 | B2 | Dual flight B2 | – | 32, 45 |
| 4 | B2, B3, C3 | Hour meter | – | – |
| 5 | B2, B3, C3 | Pilot's windshield wiper | – | – |
| 6 | B2, B3, C3 | Copilot's windshield wiper | 9 | 9 |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 7 | C3 | Windshield cleaner | – | – |
| 8 | B2, B3, C3 | Cold weather starting | – | – |
| 9 | B2, B3, C3 | Air conditioning | 6 | 32, 57, 91 |
| 10 | B2, B3, C3 | Engine washing, cowlings closed | – | – |
| 11 | B2, B3, C3 | Cable cutter | – | – |
| 12 | B2, B3, C3 | Low landing gear | 13, 43, 91, 92 | 24 |
| 13 | B2, B3 | Short footstep on high type landing gear | 12 | – |
| 14 | B2, B3 | Short footstep on low type landing gear | 13 | 15 |
| 15 | B2, B3, C3 | Emergency floatation gear | – | 14, 16 |
| 16 | B2, B3, C3 | Ski installation (Surfair) | 15 | – |
| 17 | B2, B3, C3 | Long protective shoes for landing skids | – | – |
| 18 | B2 | FAURE HERMANN fuel flowmeter | – | – |
| 19 | B2, B3, C3 | Sand filter | – | – |
| 20 | B2, B3, C3 | Main and tail rotor blades: reinforced protection against erosion | – | – |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 21 | B2, B3, C3 | Tail rotor blades: reinforced protection against erosion | – | – |
| 22 | B2, B3, C3 | Ferry flight fuel tank installation | – | 32, 39, 44, 45, 46, 90, 92 |
| 23 | B2, B3, C3 | External load carrying installation with dynamometer (Cargo-sling 750 kg) | 15 | 24, 43 |
| 24 | B2, B3, C3 | External load carrying installation with dynamometer (Cargo-swing 906 and 1160 kg) | 15 | 12, 23, 42 |
| 25 | B2, B3, C3 | AIR EQUIPEMENT / GOODRICH electric hoist (136 kg - Cable 40 m) | – | 26, 66 |
| 26 | B2, B3, C3 | Electric hoist BREEZE 204 kg (450 lbs) | – | 25, 66 |
| 27 | B2, B3, C3 | BREEZE 204 kg electric hoist support | – | – |
| 28 | B2, B3, C3 | AIR EQUIPEMENT / GOODRICH 136 kg electric hoist support | – | – |
| 29 | B2, B3 | Roping equipment (without rope) | – | – |
| 30 | B2, B3, C3 | Electrical rear view mirror | 31 | 92 |
| 31 | B2, B3, C3 | Mechanical rear view mirror | 30 | 92 |
| 32 | B2, B3, C3 | Ambulance role lower stretcher (litter) | – | 1, 2, 9, 22, 39, 44, 45, 46, 90, 92 |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 33 | B2, B3, C3 | Left instrument panel entablature reduction | – | – |
| 34 | B2, B3, C3 | Right sliding door (+ right reduced door see 35) | 65 | 36, 92 |
| 35 | B2, B3, C3 | Forward right reduced door | – | – |
| 36 | B2, B3 | Right normal door without visibility + window | – | 34 |
| 37 | B2, B3, C3 | Sliding window on aft left sliding door | – | – |
| 38 | B2, B3, C3 | Sliding window on aft right sliding door | – | – |
| 39 | B2, B3, C3 | Drip pan | – | 22, 32, 44, 56, 90, 92 |
| 40 | B2, B3, C3 | Swivelling landing light | – | – |
| 41 | B2, B3 | Loud speakers | – | 43 |
| 42 | B2, B3 | Power takeoff on MGB (32 kW) | – | – |
| 43 | B2, B3 | SIMPLEX crop spraying installation | – | 12, 23, 24, 41, 53, 91, 92 |
| 44 | B2, B3, C3 | Arm-rests + bench reinforcement + 3-point harness | – | 22, 32, 39, 90, 92 |
| 45 | B2, B3 | Forward 2-place bench seat | – | 1, 2, 22, 32, 90, 94 |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 46 | B2, B3 | Coverings:<br>- Sound-proof, standard<br>- Comfort<br>- Heuliez | – | 22, 32, 90, 92, 94 |
| 47 | B2, B3 | "Stylence" cabin furnishing | – | – |
| 48 | B2, B3 | Tinted transparent panel assy | – | – |
| 49 | B2, B3, C3 | Tinted and curved transparent panel assy | – | – |
| 50 | B2, B3, C3 | Curved transparent panel assy | – | – |
| 51 | B2, B3, C3 | Main rotor blade folding system | – | – |
| 52 | B2, B3 | Main rotor blade visibility marking | – | – |
| 53 | B2, B3, C3 | Heavy weather mooring (land or boat) | – | 43 |
| 54 | B2, B3, C3 | Marine lashing | – | – |
| 55 | B2, B3 | Radio rack for left baggage hold | – | – |
| 56 | B2, B3 | First-aid kit + emergency axe | – | – |
| 57 | B2, B3 | Hydraulic system ground connector | – | – |
| 58 | B2, B3, C3 | Strobe light on horizontal stabilizer | – | – |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 59 | B2, B3 | SFIM 85T31 3-AXIS autopilot | – | – |
| 60 | B2, B3 | SFIM 85T31 3-AXIS autopilot with failure passivation unit | – | – |
| 61 | B3 | 200-Ampere starter generators | – | 62 |
| 62 | B2, B3, C3 | 160-Ampere starter generator | – | 61 |
| 63 | B2, B3, C3 | AC power system | – | – |
| 64 | B2, B3 | Modified entablature | – | – |
| 65 | B2, B3 | Sling sight window | 34 | – |
| 66 | B2, B3, C3 | MGB cowling hole blank for 300/450 lbs hoist | – | 25, 26 |
| 68 | B2, B3, C3 | Marking | – | – |
| 69 | B2, B3, C3 | Air / sea / road loading equipment | – | – |
| 70 | B3, C3 | Thermal protection | – | – |
| 73 | B3 | Twin hydraulic | – | – |
| 90 | C3 | 7,62 mm machine gun, door-mounted in cabin, left side | – | 25, 43, 44 |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 91 | C3 | Rocket launcher + CROUZET head-up display type 100 | – | 13, 41 |
| 92 | C3 | M621 20 mm axial cannon, right side + CROUZET head-up display type 100 | – | 13, 24, 25, 29, 41, 43 |
| 93 | C3 | TOW missiles and roof-mounted sight (FLIR) | – | – |
| 94 | C3 | Pilot’s/copilot’s seat armor plating | – | 44 |
| 95 | B3, C3 | Stiffened self-sealing dual pump fuel tank | – | – |
| 96 | B3, C3 | FLIR support provision under bottom structure | – | – |
| 97 | C3 | Lateral external loads 210 kg | – | – |
| 98 | C3 | Armament-handling hoist 450 lbs | – | 32 |
| 200 | B2, B3, C3 | Vertical Gyro GV 76-2 | – | 203 |
| 201 | B2, B3 | ADF (radiocompass) KR87 with RMI KI229 | – | – |
| 202 | B2, B3 | ICS with BOSE headset | – | – |
| 203 | B2, B3, C3 | Directional gyro KCS55A | – | 200 |
| 204 | B2, B3, C3 | Marker Antenna | – | – |

| N° | EFFECTIVITY | TYPE OF INSTALLATION | Fixed parts | Removable parts |
|---|---|---|---|---|
| | | | INCOMPATIBLE TO INSTALL AT THE SAME TIME | TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME |
| 205 | B2, B3, C3 | DME | – | – |
| 206 | B2, B3, C3 | HF/SSB | – | – |
| 207 | B2, B3, C3 | Radio altimeter | – | – |
| 208 | B2, B3, C3 | GTX Transponder | – | – |
| 209 | B2, B3, C3 | GPS GNS430 GARMIN (navigation) | – | – |
| 210 | B2, B3 | Headgear DAVID CLARK H10-13H (HN/HZ) | – | – |
| 211 | B2, B3 | Headgear BOSE aviation X (HN/HZ) | – | – |
| 212 | B2, B3, C3 | Horizon H140 BHM2 without autopilot output | – | – |
| 213 | B2, B3, C3 | H321 stand-by horizon | – | – |
| 214 | B2, B3, C3 | Horizon H140 JAM1 with autopilot output | – | – |
| 215 | B3 | Tail rotor drive shaft aerodynamic cowling | – | – |

**End of the Document Unit**

# SB INCORPORATED

Airbus is required to issue Service Bulletins (SB) subsequent to new events (incidents, etc).

The information contained in the SBs is incorporated in the MSM if, and only if:

The SB contains new periodic checks, or modifies the existing MSM limitations.

The table below specifies for each SB incorporated:

- the number of the SB and its revision number,
- the subject of the SB,
- the ATA chapter/section concerned,
- the date on which the SB is incorporated in the MSM.

| SB N° | Subject | ATA | AD number | Incorporation date |
|---|---|---|---|---|
| 05.00.35 | Check of the attachment areas of the heat shield of the tail rotor drive shaft forward fairing | 53-50 | | 02.05 |
| 05.00.37 | Checking tail servocontrol eye end fitting for correct locking | 67-30 | | 2002.05.14 |
| 05.00.40 | Tail rotor blade skin check | 64-10 | | 2002.07.16 |
| 67.00.22 | Dual locking of tail rotor servocontrol | 67-30 | | 2002.07.23 |
| 55.00.09 | Check of fin attachment frame | 53-10 | | 2002.12.10 |
| 65.00.43 | Tail rotor pitch change plate – Four-contact bearing | 65-20 | | 2003.05.13 |
| 63.00.13 | Modified tightening torque of the MGB input bevel gear nut | 63-20 | | 2003.09.16 |
| 05.00.43 | Check of the rear frame | 53-10 | | 2004.02.04 |
| 29.00.04R1 | Lubrication of the splines on the hydraulic pump drive shaft | 29-10 | | 2004.01.27 |
| 05.00.33 | Check for absence of rotation of the bearing spacer of the tail rotor rotating plate | 65-20 | | 2004.03.15 |
| 05.00.45R1 | Replacement of hydraulic fluid in cold weather | 29-00 | | 2004.10.22 |
| 05.00.41R2 | Check of the sliding door aft guide roller and middle rail | 52-90 | | 2006.09.01 |
| 05.00.46 | Check of the upper and lower vertical fin spars | 55-20 | | 2004.11.22 |

| SB N° | Subject | ATA | AD number | Incorporation date |
|---|---|---|---|---|
| 05.22 | Calendar time limit for the dynamic components | 60-00 | | 1992.04.07 |
| 05.00.31R1 | Check of upper and lower fin attachment screws and spar fittings | 55-20 | | 2000.05.25 |
| 29.00.07 | Improvement of the "hydraulic cut off" function | 29-10 | | 2004.03.23 |
| 05.00.52 | Life raft kit check | 25-69 | | 2007.08.31 |
| 29.00.10 | Hydraulic power – Replacement of the hydraulic hoses | 29-10 | | 2008.05.28 |
| 55.00.16R1 | Improvement of the attachment strength for upper and lower fin skids | 55-20 | | 2008.12.22 |
| 05.00.56R1 | Emergency floatation gear cover | 25-62 | | 2009.07.20 |
| 05.00.50R1 | Collective pitch and yaw pitch anticipator potentiometers | 76-00 | | 2011.05.26 |
| 05.00.57R1 | Check of the yaw load compensator accumulator charging pressure | 29-10 | | 2011.05.26 |
| 29.00.10R2 | Replacement of the Hydraulic Hoses | 29-10 | | 2011.05.26 |
| 67.00.37R2 | New collective lever hooking lock | 67-10 | | 2011.05.26 |
| 53.00.34 | Containment box structure installation for RH cabin vibration damper | 53-00 | | 2011.05.26 |
| 05.00.32 | Corrosion check and corrosion prevention at the 62-30 lower bearing and the splines of the main rotor shaft | 62-30 | | 2012.09.06 |
| 05.00.54 | Oxygen cylinders | 35-30 | | 2012.09.06 |
| 05.00.68 | SKURKA (ex APC) starter-generators (MP/N) 150SG122Q and 200SGL130Q | 80-00 | | 2012.12.06 |
| 05.00.53 | Check of the upper and lower fin spar attachment frame and screws assembly | 55-20 | | 2014.05.29 |
| 05.00.67R1 | Inspection of the longitudinal bulkheads | 53-10 | | 2014.05.29 |
| 05.00.76 | Check of the condition of the drain control cable | 28-00 | | 2014.05.29 |
| 05.00.78 | Check of the front lower part of the bottom structure (X970 - Y400) | 53-10 | | 2014.05.29 |
| 05.00.59R1 | Visual check for cracks in the lower crossbeams of the yaw control bellcrank support | 67-20 | | 2015.06.11 |
| 05.00.79R1 | Periodic check of the hydraulic pump drive bearing on helicopters with dual hydraulics | 63-10 | | 2015.06.11 |

| SB N° | Subject | ATA | AD number | Incorporation date |
|---|---|---|---|---|
| 05.00.82 | Complementary Engine Back-up Control Ancillary Unit (EBCAU) tests | 77-00 | | 2015.06.11 |
| 63.00.24 | New hydraulic pump drive bearing | 63-10 | | 2015.06.11 |
| 05.00.75 | Periodic adjustment and check of the tensioning of the SKURKA (ex APC) starter-generator damper system | 80-00 | | 2015.12.10 |
| 01.00.70 R1 | Tail rotor drive - Tail rotor drive shaft bearings | 65-10 | | 2017.12.04 |
| 63.00.24 | Engine-to-MGB coupling - New hydraulic pump drive bearing | 63-10 | | 2017.12.04 |
| 05.00.36R1 | Check for Absence of Play in the Pilot and Copilot Windshield Wiper Arm Attachment | 30-42 | | 2018.04.16 |
| 05.00.89 | Checking the level of wear on the brushes and commutator of SKURKA starter-generators | 80-00 | | 2019.01.19 |
| 05.00.16 | Monitoring Fuselage to Tail Boom junction | 53-10 | | 2019.01.19 |
| 05.00.93 | Hydraulic pump - Greasing of the splines of the secondary hydraulic pump | 29-00 | | 2019.01.19 |
| 05.00.95 | Check of starter generators MP/N 524-031 and 515-030 | 80-00 | | 2019.09.09 |
| 05.00.63 R1 | Emergency floatation gear - Check of the front and rear attachment brackets | 25-62 | | 2020.04.14 |
| 05.00.42 | Check and Repair of the Buckets of Pilot and Copilot Seats | 25-10 | | 2020.04.14 |
| 05.00.83 R2 | Periodic check for corrosion on the pipes of the P2 air heating/demisting system | 21-21 | | 2020.04.14 |
| 05.00.94 | Introduction of an Operating Time Limit (OTL) for the laminated half-bearings of the tail rotor blades | 64-10 | | 2020.10.12 |
| 05.00.86R3 | Pitch change rod Periodic check of the Tail Rotor Hub (TRH) pitch change rod | 65-20 | | 2021.04.05 |
| 62.00.43R1 | Check of the main rotor mast shaft | 62-30 | | 2021.04.05 |

**End of the Document Unit**

# 05-10-00

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 35 | OXYGEN |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 80 | ENGINE STARTING |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-63 HOISTS ELECTRICAL

25/63/00/000/000/056

**Electric hoist 136 kg**

| | | | | |
|---|---|---|---|---|
| 76370-110 | (704A41815032) | | 48 M | *146 D* |
| 76370-111 | (704A41815033) | // | 1500 HC | *150 HC* |
| 76370-130 | (704A41815035) | | | |
| 76370-130-D | (-) | | | |
| 76370-140-D | (704A41815085) | | | |

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.

25/63/00/000/000/058

**Electric hoist 450 lbs**

| | | | | |
|---|---|---|---|---|
| BL2970023 | (704A41815056) | | 60 M | *180 D* |
| | | // | 2000 HC | *200 HC* |

BREEZE.

25/63/00/402/000/000

**Electric hoist 136 kg**

| | | | | | |
|---|---|---|---|---|---|
| BL16600-12 | (-) | | 36 M | | *109 D* |
| | | // | 2000 HC | TSM | *200 HC* |

ERC BREEZE.
TSM or Overhaul.

25/63/00/402/000/005

**Electric hoist 136 kg**

| | | | | | |
|---|---|---|---|---|---|
| BL16600-180-2 | (-) | | 60 M | | *180 D* |
| BL16600-90 | (704A41815019) | // | 2000 HC | TSM | *200 HC* |

ERC BREEZE.
TSM or Overhaul.

### 25-80 OPT - SLING AND ACCESSORY

25/80/00/000/000/005

**Load release unit hook**

| | | | | |
|---|---|---|---|---|
| 17149-1 | (704A41811012) | | 36 M | *90 D* |
| | | // | 5000 SC | *300 SC* |

Storage limit (original package): 60 M.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

## 25-81 OPT - SWING AND ACCESSORY

25/81/10/000/000/025

**Load release unit hook**

| | | | | |
|---|---|---|---|---|
| S1609-6 | (704A41811027) | 60 M | TSI | *180 D* |
| | // | 120 M | TSM | *180 D* |
| | // | 1500 SC | | *150 SC* |

Storage limit (original package): 60 M.

25/81/11/000/000/000

**Load release unit hook**

| | | | | |
|---|---|---|---|---|
| AS21-5-7 | (704A41811029) | 60 M | TSI | *180 D* |
| | // | 120 M | TSM | *180 D* |
| | // | 1500 SC | | *150 SC* |

Storage limit (original package): 60 M.

25/81/12/000/000/000

**1400 kg cargo swing - Onboard load release unit**

| | | | | |
|---|---|---|---|---|
| 52802351 | (704A41811035) | 60 M | TSI | *180 D* |
| | // | 120 M | TSM | *180 D* |
| | // | 1000 OPH | | *100 OPH* |

OPH = Operating hours logged with underslung loads.
Apply a factor of 2 to the operating hours (OPH) logged in the following conditions:
- Sand-laden and/or dust-laden atmosphere,
- Logging operation,
- Load above 1200 kg (2646 lbs).

Storage limit (original package): 60 M.

# 35 - OXYGEN

## 35-30 OXYGEN

35/30/00/000/000/000

**Oxygen cylinder**

| | | | | |
|---|---|---|---|---|
| GLF311-1 | (-) | 60 M | TSM | *180 D* |

Potential of the regulator and proof test of the oxygen cylinder.

35/30/00/000/000/030

**Oxygen mask**

| | | | | |
|---|---|---|---|---|
| MRAM-019 | (704A42210007) | 72 M | TSM | *180 D* |

| Task Number<br>Description/Remarks | MP/N (PN) | | Type of limit: TBO | | Margin |
|---|---|---|---|---|---|
| **63 - ROTOR DRIVE (S)** | | | | | |
| **63-20 MAIN GEARBOX** | | | | | |
| 63/20/00/000/000/250<br>**Bevel reduction gear** | | | | | |
| | 350A32-0310-00<br>350A32-0310-01 | (-)<br>(-) | <br>// | 2000 FH<br>288 M | *200 FH*<br>*180 D* |
| 63/20/00/000/000/253<br>**Bevel reduction gear** | | | | | |
| | 350A32-0310-02 | (-) | <br>// | 3000 FH<br>288 M | *300 FH*<br>*180 D* |
| 63/20/00/000/000/254<br>**Bevel reduction gear** | | | | | |
| | 350A32-0350-02 | (-) | <br>// | 3000 FH<br>288 M | *300 FH*<br>*180 D* |
| POST OP 3082 or POST OP 3346: Twin hydraulic system. | | | | | |
| 63/20/00/000/000/257<br>**Bevel reduction gear** | | | | | |
| | 350A32-0350-00 | (-) | <br>// | 2000 FH<br>288 M | *200 FH*<br>*180 D* |
| POST OP 3082 or POST OP 3346: Twin hydraulic system. | | | | | |
| 63/20/00/000/000/320<br>**Epicyclic reduction gear** | | | | | |
| | 350A32-0120-00<br>350A32-0120-01 | (-)<br>(-) | <br>// | 3000 FH<br>288 M | *300 FH*<br>*180 D* |
| 63/20/00/000/000/435<br>**Oil pump** | | | | | |
| | 350A32-0400-00 | (-) | <br>// | 3000 FH<br>288 M | *300 FH*<br>*180 D* |
| PRE MOD 077175 | | | | | |
| 63/20/00/000/000/445<br>**Oil pump** | | | | | |
| | 350A32-0400-00 | (-) | <br>// | 3500 FH<br>288 M | *300 FH*<br>*180 D* |
| POST MOD 077175 | | | | | |
| 63/20/00/000/000/530<br>**Free wheel assembly** | | | | | |
| | 350A35-0450-00 | (-) | <br>// | 3500 FH<br>15 Y | *0*<br>*0* |
| TURBOMECA part number: 0.292.90.002.0<br>ARRIEL 2B/2B1 free wheel.<br>Replacement of splined sleeve MP/N 350A35-1210-20 each TBO. | | | | | |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|

63/20/00/000/000/550

**Free wheel unit**

| | | | |
|---|---|---|---|
| 0.292.90.020.0 | (704A43622004) | 5000 FH | *0* |

Free wheel ARRIEL 2D.

## 65 - TAIL ROTOR DRIVE

### 65-20 TAIL GEARBOX

65/20/00/000/000/125

**TGB**

| | | | | |
|---|---|---|---|---|
| 350A33-0200-06 | (-) | 3000 FH | | *300 FH* |
| | // | 288 M | | *180 D* |

Must not be installed on helicopters with optional all-up weight extension installation: OP 3369.

65/20/00/000/000/330

**TGB**

| | | | | |
|---|---|---|---|---|
| 350A33-0200-07 | (-) | 3000 FH | | *300 FH* |
| 350A33-0210-00 | (-) | 288 M | | *180 D* |

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

67/30/00/402/000/000

**Main servocontrol**

| | | | | |
|---|---|---|---|---|
| SC5081 | (704A44831123) | 3000 FH | | *300 FH* |
| SC5081-1 | (704A44831137) | 240 M | TSM | *180 D* |
| SC5081-2 | (704A44831159) | | | |
| SC5082 | (704A44831124) | | | |
| SC5082-1 | (704A44831136) | | | |
| SC5082-2 | (704A44831160) | | | |
| SC5083 | (704A44831141) | | | |
| SC5083-1 | (704A44831161) | | | |
| SC5084 | (704A44831140) | | | |
| SC5084-1 | (704A44831162) | | | |

TSM or Overhaul.

67/30/00/402/000/025

**Main servocontrol**

| | | | | |
|---|---|---|---|---|
| SA7450-100 | (704A44831170) | 3000 FH | | *300 FH* |
| SA7650-100 | (704A44831171) | 240 M | TSM | *180 D* |
| SC8042 | (704A44831102) | | | |
| SC8043 | (704A44831103) | | | |

TSM or Overhaul.
POST OP 3082 or POST OP 3346: Installation of a twin hydraulic power system.

| Task Number<br>Description/Remarks | MP/N (PN) | | Type of limit: TBO | | | Margin |
|---|---|---|---|---|---|---|
| 67/30/00/402/000/040<br>**Main servocontrol** | | | | | | |
| | AC64182<br>AC66442<br>AC67030<br>AC67034<br>AC67244<br>AC67246 | (704A44831062)<br>(704A44831065)<br>(704A44831093)<br>(704A44831095)<br>(704A44831112)<br>(704A44831113) | //<br>1800 FH<br>240 M | | TSM | 180 FH<br>180 D |
| TSM or Overhaul. | | | | | | |
| 67/30/00/403/000/000<br>**Tail servocontrol** | | | | | | |
| | SC5071<br>SC5071-1<br>SC5072 | (704A44831125)<br>(704A44831138)<br>(704A44831142) | //<br>3000 FH<br>240 M | | TSM | 300 FH<br>180 D |
| TSM or Overhaul. | | | | | | |
| 67/30/00/403/000/031<br>**Tail servocontrol** | | | | | | |
| | AC66436<br>AC67032MOD2<br>AC67032MOD6 | (704A44831063)<br>(704A44831094)<br>(704A44831115) | //<br>1800 FH<br>240 M | | TSM | 180 FH<br>180 D |
| TSM or Overhaul. | | | | | | |
| 67/30/00/403/000/033<br>**Tail servocontrol** | | | | | | |
| | AC67032 | (704A44831094) | //<br>1800 FH<br>240 M | | TSM | 180 FH<br>180 D |
| TSM or Overhaul.<br>Effective for any modification to the servocontrol. | | | | | | |

## 80 - ENGINE STARTING

### 80-00 STARTING

| | | | | | | |
|---|---|---|---|---|---|---|
| 80/00/00/402/000/050<br>**Starter generator** | | | | | | |
| | 150SG122Q | (704A46101020) | 900 FH | | | 100 FH |
| 80/00/00/402/000/070<br>**Starter generator** | | | | | | |
| | 200SGL130Q | (704A46101023) | 900 FH | | | 100 FH |
| 80/00/00/402/000/105<br>**Starter generator** | | | | | | |
| | 150SG122Q-4<br>200SGL130Q-4 | (704A46101027)<br>(704A46101026) | 1200 FH | | | 120 FH |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: TBO | Margin |
|---|---|---|---|
| 80/00/02/000/000/020<br>**Starter generator** | | | |
| | 515-030 (704A46101018)<br>524-031 (704A46101011) | 1200 FH<br>// 60 M TSM | *20 FH*<br>*0* |
| TSM or Overhaul.<br>THALES. | | | |

**End of the Document Unit**

# 05-11-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 28 | FUEL SYSTEM |
| ATA 33 | LIGHTING SYSTEM |
| ATA 35 | OXYGEN |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

21/51/20/000/000/015

**Freon air conditioning system - Poly "V" belt**

| | | | |
|---|---|---|---|
| 5PK668 | (-) | 72 M | *180 D* |

21/51/20/000/000/020

**Freon air conditioning system - Belt**

| | | | |
|---|---|---|---|
| 451400003 | (-) | 1200 FH | *120 FH* |
| | | // 72 M | *180 D* |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/10/401/000/060

**Cylinder**

| | | | | |
|---|---|---|---|---|
| 200740-0 | (-) | 180 M | TSM | *0* |
| 200740-1 | (-) | | | |
| 200740-2 | (704A42693012) | | | |

Return the equipment to an approved repairer for Overhaul and replacement of the bare cylinder.

25/62/10/401/000/090

**LH float**

| | | | | |
|---|---|---|---|---|
| 200733-0 | (-) | 120 M | TSM | *0* |
| 218569-0 | (-) | | | |

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/120

**RH float**

| | | | | |
|---|---|---|---|---|
| 200734-0 | (-) | 120 M | TSM | *0* |
| 218570-0 | (-) | | | |

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/130

**RH outer cover**

| | | | | |
|---|---|---|---|---|
| 200736-0 | (-) | 120 M | TSM | *180 D* |
| 218572-0 | (-) | | | |

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/140

**LH outer cover**

| | | | | |
|---|---|---|---|---|
| 200735-0 | (-) | 120 M | TSM | *180 D* |
| 218571-0 | (-) | | | |

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

## 25-63 HOISTS ELECTRICAL

25/63/00/000/000/026

**Electric hoist 136 kg - Cable**

| | | | | |
|---|---|---|---|---|
| 709628 | (-) | 24 M | TSI | 0 |
| 709628-100 | (-) | // 84 M | TSM | 0 |
| 710656 | (-) | // 500 HC | | 0 |
| 710656-100 | (-) | | | |
| BL7505 | (-) | | | |

Tropical and damp atmosphere
Salt-laden atmosphere
Sand-laden and/or dust-laden atmosphere

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM in original package.

25/63/00/000/000/029

**Electric hoist 136 kg - Cable**

| | | | | |
|---|---|---|---|---|
| 709628 | (-) | 48 M | TSI | 0 |
| 709628-100 | (-) | // 108 M | TSM | 0 |
| 710656 | (-) | // 500 HC | | 0 |
| 710656-100 | (-) | | | |
| BL7505 | (-) | | | |

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM in original package.

25/63/00/000/000/035

**Electric hoist 450 lbs - Cable**

| | | | | |
|---|---|---|---|---|
| BL12606-1 | (-) | 500 HC | | 0 |

BREEZE.

25/63/00/000/000/040

**Electric hoist 136 kg - Pyrotechnic cartridge**

| | | | | |
|---|---|---|---|---|
| 20CF4D | (N6714400100) | 36 M | TSI | 0 |
| BL7811 | (-) | // 60 M | TSM | 0 |
| Y-1265-12-1 | (-) | | | |

EQUIPEMENT/TRW/GOODRICH for MP/N 20CF4D.
ERC BREEZE for MP/N BL7811 & MP/N Y-1265-12-1.
TSM in original package.

25/63/00/402/000/025

**Electric hoist 450 lbs - Pyrotechnic cartridge**

| | | | | |
|---|---|---|---|---|
| Y126581 | (704A38710039) | 36 M | TSI | 0 |
| | | // 108 M | TSM | 0 |

BREEZE.
TSM in original package.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

25/66/00/000/000/005

**Battery pack**

| | | | | |
|---|---|---|---|---|
| JE2-1978-3<br>JE2-1978-3NG | (N6742450122)<br>(NR003100026) | | ED | 0 |

JOLLIET JE2/JE2NG.
NOTE: Replacement of dry-cell unit for all transmissions exceeding 1 hour.

25/66/00/000/000/025

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| 56995-0101 | (-) | | ED | | 0 |
| | | // | 1 OPH | | 0 |

ELT 910 NARCO.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/00/000/000/060

**Battery**

| | | | | | |
|---|---|---|---|---|---|
| 810-418A | (-) | | 24 M | TSM | 0 |

N15F210B DUKANE.

25/66/00/000/000/070

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| ELT90A2560102001 | (-) | | 48 M | TSM | 0 |
| | | // | 1 OPH | | 0 |

ELT 96-406 SOCATA. MP/N ELT96A2560000000.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/20/000/000/000

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| S1840510-01 | (-) | | ED | | 0 |
| | | // | 1 OPH | | 0 |

KANNAD INTEGRA AP-H (ER).
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/34/000/000/000

**Battery pack**

| | | | | | |
|---|---|---|---|---|---|
| S1820516-99 | (-) | | ED | | 0 |
| | | // | 1 OPH | | 0 |

KANNAD 406 AF.
KANNAD 121AF-H.
KANNAD 406AF-H.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|

## 26 - FIRE PROTECTION

### 26-22 OPT - EXTINGUISHER, FIRE, CABIN

26/22/00/000/000/000

**Cabin fire extinguisher**

| | | | | |
|---|---|---|---|---|
| 12085-01 | (S262A10T1001) | 120 M | TSM | 0 |
| H1 | (704A32810007) | | | |
| H1-0150101S | (704A32810009) | | | |
| H1-10 | (704A32810003) | | | |
| H1-10AIR | (704A32810008) | | | |
| H1-CODE0150101A | (704A32810009) | | | |
| P2H | (704A32810006) | | | |

26/22/00/000/000/010

**Cabin fire extinguisher**

| | | | | |
|---|---|---|---|---|
| P3APP003010D | (U262A50T1003) | 144 M | TSM | 0 |

26/22/01/000/000/000

**Cabin fire extinguisher**

| | | | | |
|---|---|---|---|---|
| PLA863520-00 | (T262M50T0002) | 60 M | TSM | 0 |

## 28 - FUEL SYSTEM

### 28-41 INDICATING

28/41/00/000/000/010

**Digital flowmeter - Battery**

| | | | | | |
|---|---|---|---|---|---|
| LS210PS30 | (-) | | 24 M | TSI | 0 |
| PS30 | (-) | // | 36 M | TSM | 0 |
| PS30LS210 | (-) | | | | |

PRE AMENDMENT D

FAURE/HERMANN.
OTL applicable for fuel flowmeter M/PN 744-082, M/PN 744-082-3, M/PN 744-098-1.
Fuel flowmeter to be returned to the manufacturer for replacement of the battery.

## 33 - LIGHTING SYSTEM

### 33-45 OPT - SEARCHLIGHT

33/45/03/000/000/000

**Searchlight - Aluminum gimbal arm**

| | | | |
|---|---|---|---|
| 019058-21 | (-) | 84 M | 180 D |
| 019059 | (-) | | |
| 021715 | (-) | | |
| 021716 | (-) | | |

SPECTROLAB SX16.

| Task Number<br>Description/Remarks | MP/N (PN) | | Type of limit: OTL | | Margin |
|---|---|---|---|---|---|
| 33/45/03/000/000/010<br>**Searchlight - Steel gimbal arm** | 022929<br>022929-11<br>022929-81 | (-)<br>(-)<br>(-) | 120 M | | *180 D* |
| SPECTROLAB SX16. | | | | | |

## 35 - OXYGEN

### 35-30 OXYGEN

| | | | | | |
|---|---|---|---|---|---|
| 35/30/01/000/000/000<br>**Oxygen cylinder shell** | GLF311-1 | (-) | 300 M | TSM | *180 D* |
| 35/30/01/000/000/010<br>**Oxygen cylinder shell** | GLF311-1 | (-) | 180 M | TSM | *180 D* |
| Salt-laden atmosphere | | | | | |

## 62 - ROTOR (S)

### 62-30 MAIN ROTOR MAST

| | | | | |
|---|---|---|---|---|
| 62/30/00/000/000/230<br>**Swashplate - 4 contacts bearing** | 121620 | (704A33651157) | 4800 FH | *300 FH* |
| 62/30/00/000/000/240<br>**Swashplate - 4 contacts bearing** | Y51BB10843S2M74 | (704A33651158) | 6300 FH | *300 FH* |

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | | | |
|---|---|---|---|---|---|
| 63/10/00/000/000/150<br>**Hydraulic pump - Belt** | FILONTYPEFO<br>ULTRALUGTYPEL1 | (704A33690004)<br>(704A33690003) | 1200 FH | | *120 FH* |
| 63/10/00/000/000/160<br>**Hydraulic pump - Poly "V" belt** | POLY-V 597K4 | (-) | 1800 FH<br>// 72 M | | *180 FH*<br>*180 D* |

| Task Number<br>Description/Remarks | MP/N (PN) | | Type of limit: OTL | Margin |
|---|---|---|---|---|
| 63/10/00/000/000/180 | | | | |
| **Hydraulic pump - Drive bearing** | | | | |
| | 593733 | (704A33651206) | 3600 FH | *300 FH* |
| | 594976 | (704A33651269) | // 72 M | *180 D* |
| | AB13547S1 | (704A33651208) | | |
| | F-594448 | (704A33651243) | | |
| | TTS6225 | (704A33651207) | | |

## 63-20 MAIN GEARBOX

| | | | | |
|---|---|---|---|---|
| 63/20/00/000/000/045 | | | | |
| **Oil filter - Filter element** | | | | |
| | CH48108 | (-) | 600 FH | *60 FH* |
| | FA01315A | (7050A3632296) | // 24 M | *73 D* |
| 63/20/00/000/000/540 | | | | |
| **Free wheel** | | | | |
| | 350A35-1208-20 | (-) | 3500 FH | *0* |
| TURBOMECA part number: 9.292.90.001.0<br>ARRIEL 2B/2B1 free wheel. | | | | |
| 63/20/00/000/000/560 | | | | |
| **Free wheel** | | | | |
| | 9.560.90.123.0 | (-) | 5000 FH | *0* |
| Free wheel ARRIEL 2D.<br>Fitted to the assembly free wheel: MP/N 0.292.90.020.0. | | | | |
| 63/20/00/000/000/570 | | | | |
| **Front ball bearing of free wheel** | | | | |
| | 9.606.65.100.1 | (-) | 5000 FH | *0* |
| Free wheel ARRIEL 2D.<br>Fitted to the assembly free wheel: MP/N 0.292.90.020.0. | | | | |
| 63/20/00/000/000/580 | | | | |
| **Rear ball bearing of free wheel** | | | | |
| | 9.606.68.100.1 | (-) | 5000 FH | *0* |
| Free wheel ARRIEL 2D.<br>Fitted to the assembly free wheel: MP/N 0.292.90.020.0. | | | | |
| 63/20/00/000/000/590 | | | | |
| **Rear ball bearing of the assembly free wheel** | | | | |
| | 9.606.49.060.6 | (-) | 5000 FH | *0* |
| Free wheel ARRIEL 2D.<br>Fitted to the assembly free wheel: MP/N 0.292.90.020.0. | | | | |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OTL | Margin |
|---|---|---|---|
| 63/20/00/000/000/610<br>**Free wheel - Bearing** | | | |
| | ALL MP/N (-) | 7000 FH | *0* |
| ARRIEL 2B/2B1 free wheel. | | | |

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | | | |
|---|---|---|---|
| 64/10/00/000/000/023<br>**Tail rotor blade - Laminated pitch half-bearing** | | | |
| | 579063 (704A33633116)<br>579153 (704A33633261) | 120 M TSM | *0* |
| Must not be mixed on a tail rotor blade assembly. | | | |
| 64/10/00/000/000/026<br>**Tail rotor blade - Laminated pitch half-bearing** | | | |
| | 579266 (704A33633303) | 1200 FH<br>// 120 M TSM | *120 FH*<br>*0* |
| Must not be mixed on a tail rotor blade assembly. | | | |

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE SHAFT

| | | | |
|---|---|---|---|
| 65/10/00/000/000/100<br>**Tail rotor drive shaft - Greasable bearing** | | | |
| | 593404 (704A33651181) | 3600 FH<br>// 60 M | *300 FH*<br>*180 D* |

### 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/305<br>**TRH pitch change unit - Greasable bearing** | | | |
| | 704A33-651-210 (-) | 3000 FH | *300 FH* |
| 65/20/00/000/000/315<br>**TRH pitch change unit - Bearing** | | | |
| | 6010-2RS1MT33CA (704A33651003) | 2700 FH | *270 FH* |
| The pitch change unit bearing is to be replaced during TGB Overhaul. | | | |

**End of the Document Unit**

# 05-12-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 28 | FUEL SYSTEM |
| ATA 34 | NAVIGATION |
| ATA 47 | WEAPONS ELECTRONICS |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

21/51/20/000/000/050

**Freon air conditioning system - Compressor**

| | |
|---|---|
| 350A500-5 | (-) |
| 5-AS350-34 | (-) |

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

24/31/00/000/000/005

**Battery**

| | |
|---|---|
| 150CH-1 | (7050A4243027) |

24/31/00/000/000/008

**Battery**

| | |
|---|---|
| 151CH-1 | (7050A4243040) |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-00 EQUIPMENT AND FURNISHING

25/00/00/000/000/000

**Belt and harness - Strap**

| | |
|---|---|
| ALL MP/N | (-) |

Pilot, copilot, passenger and operator seat belt and harness straps.

## 28 - FUEL SYSTEM

### 28-20 FUEL DISTRIBUTION

28/20/00/000/000/043

**Fuel pump**

| | |
|---|---|
| P94B12-209 | (704A44510042) |
| P94B12-213 | (704A44510055) |
| P99C16-623 | (704A44510057) |

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

## 28-41 INDICATING

28/41/00/000/000/011

**Digital flowmeter - Battery**

SL846-XOL (-)

POST AMENDMENT D

FAURE/HERMANN.
Maintenance applicable for fuel flowmeter M/PN 744-082, M/PN 744-082-3, M/PN 744-098-1.

# 34 - NAVIGATION

## 34-25 GYRO HORIZON

34/25/00/000/000/020

**Stand-by battery**

EE0033 (704A46140000)
EE0033A (704A46140000)

# 47 - WEAPONS ELECTRONICS

## 47-50 FLIR INSTALLATION

47/50/10/000/000/010

**Flir**

3205562 (-)

Star SAFIRE II.
Replacement of the turret desiccant cartridge.

# 62 - ROTOR (S)

## 62-20 MAIN ROTOR HEAD

62/20/00/000/000/065

**MRH assy**

ALL MP/N (-)

62/20/00/403/000/006

**Vibration damper, spring type**

350A31-0033-06 (-)

If the vibration level deteriorates, check the anti-vibrator as per task 62-21-00, 6-11 (AMM).

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

## 62-30 MAIN ROTOR MAST

62/30/00/000/000/015

**Main rotor mast**

350A37-0004-02 (-)

62/30/00/000/000/020

**Main rotor mast**

355A37-0006-00 (-)
355A37-0006-01 (-)

OP 3082: Twin hydraulic system.

# 63 - ROTOR DRIVE (S)

## 63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/035

**Engine-to-MGB coupling**

ALL MP/N (-)

## 63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/070

**MGB suspension cross bar**

ALL MP/N (-)

# 64 - TAIL ROTOR

## 64-10 TAIL ROTOR BLADE

64/10/00/000/000/005

**Tail rotor assy**

ALL MP/N (-)

64/10/00/000/000/020

**Tail rotor blade - Laminated pitch half-bearing**

704A33-633-091 (-)

Must not be mixed on a tail rotor blade assembly.
Record replacement of laminated half-bearing on the FM of the blade assembly.

| Task Number<br>Description/Remarks | MP/N (PN) | Type of limit: OC | *Margin* |
|---|---|---|---|

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/050

**Tail rotor drive shaft assembly**

| | |
|---|---|
| ALL MP/N | (-) |

### 65-20 TAIL GEARBOX

65/20/00/000/000/300

**TRH pitch change unit**

| | |
|---|---|
| 350A33-2004-05 | (-) |
| 350A33-2004-06 | (-) |
| 350A33-2030-00 | (-) |
| 350A33-2167-00 | (-) |
| 350A33-2167-01 | (-) |

65/20/00/000/000/420

**TRH laminated hinge**

| | |
|---|---|
| 563-073 | (704A33633078) |

Must not be mixed on the same hub.
Record replacement of laminated hinge on the TGB log card.

65/20/00/000/000/425

**TRH laminated hinge**

| | |
|---|---|
| 579-091 | (704A33633171) |

Must not be mixed on the same hub.
Record replacement of laminated hinge on the TGB log card.
Delivered in pairs: MP/N 350A33-2153-00.

65/20/00/401/000/265

**TRH**

| | |
|---|---|
| 350A33-2119-05 | (-) |

**End of the Document Unit**

# 05-20-00

# ALF

| D.U. | TITLE |
|---|---|
| ATA 05 | TIME LIMITS/MAINTENANCE CHECKS |
| ATA 71 | POWER PLANT |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 05 - TIME LIMITS/MAINTENANCE CHECKS

### 05-21 DAILY CHECK

| | | | |
|---|---|---|---|
| 05/21/00/605/000/000<br>**Daily check in cold weather**<br>GVI\|FT\|GR | *AMM 05-40-00, 6-3* | *0* | |

## 71 - POWER PLANT

### 71-00 POWER PLANT

| | | | |
|---|---|---|---|
| 71/00/00/000/000/010<br>**Power plant air intake (ALF)**<br>PRE MOD 073453<br>Visual check of the attachments.<br>VC | *AMM 05-40-00, 6-6* | *0* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-20-01

# 10 FH

| D.U. | TITLE |
|---|---|
| ATA 62 | ROTOR (S) |
| ATA 64 | TAIL ROTOR |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

| | |
|---|---|
| 62/10/20/601/000/020<br>**Main rotor blade**<br>*AMM 62-11-00, 6-3* *1 FH*<br>Sand-laden and/or dust-laden atmosphere<br>Check for erosion.<br>In the event of intensive operation in heavily sand-laden areas, all the necessary measures should be taken to ensure optimum operation of the aircraft, if necessary, by shortening the suggested intervals.<br>GVI | |

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | |
|---|---|
| 64/10/00/000/000/220<br>**Tail rotor blade**<br>*AMM 64-10-00, 6-1* *1 FH*<br>Sand-laden and/or dust-laden atmosphere<br>Check for erosion.<br>In the event of intensive operation in heavily sand-laden areas, all the necessary measures should be taken to ensure optimum operation of the aircraft, if necessary, by shortening the suggested intervals.<br>GVI | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-20-02

# 10 FH // 7 D

| D.U. | TITLE |
|---|---|
| ATA 05 | TIME LIMITS/MAINTENANCE CHECKS |
| ATA 53 | FUSELAGE |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 05 - TIME LIMITS/MAINTENANCE CHECKS

### 05-21 DAILY CHECK

| | | |
|---|---|---|
| 05/21/00/000/000/000<br>**P-Check**<br>*AMM 05-40-00, 6-7*<br>Note: Operations can be carried out by a crew member.<br>GVI | *0*<br>*0* | |

## 53 - FUSELAGE

### 53-00 FUSELAGE

| | | |
|---|---|---|
| 53/00/00/000/000/070<br>**Structure**<br>*AMM 12-20-00, 3-3*<br>Salt-laden atmosphere<br>Rinsing and Drying.<br>CLN | *0*<br>*0* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-21-00

# 150 FH // 12 M

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 52 | DOORS |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 77 | ENGINE INDICATING |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-21 VENTILATION/DEMISTING

| | | | |
|---|---|---|---|
| 21/21/00/000/000/000<br>**Heating pipe**<br>PRE MOD 074765 // PRE MOD 074866<br>P2 installation.<br>Check of the condition of the heat insulation and to make sure that there is no corrosion on the visible parts.<br>If necessary, replace the pipes in accordance with task 21-21-00, 4-2 (AMM).<br>DI | *AMM 21-21-00, 6-1* | *15 FH*<br>*36 D* | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/050<br>**Pilot and copilot seats**<br>FISCHER H110.<br>Visual check.<br>GVI | *AMM 25-21-00, 6-4* | *15 FH*<br>*36 D* | |
| 25/10/12/000/000/050<br>**Pilot and copilot seats**<br>FISCHER H140.<br>Visual check.<br>GVI | *AMM 25-21-00, 6-9* | *15 FH*<br>*36 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 52 - DOORS

### 52-30 CARGO DOOR

| | | | |
|---|---|---|---|
| 52/30/00/000/000/030<br>**Lateral cargo door**<br>Functional test - Indicating system.<br>FT | *AMM 52-31-00, 5-2* | *15 FH*<br>*36 D* | |

## 62 - ROTOR (S)

### 62-20 MAIN ROTOR HEAD

| | | | |
|---|---|---|---|
| 62/20/00/000/000/205<br>**Starflex star**<br>Checking B/C/D/F areas.<br>GVI | *AMM 62-21-00, 6-1* | *15 FH*<br>*36 D* | |
| 62/20/00/000/000/207<br>**Starflex star - Swivel bearing**<br>Visual check and play check.<br>GVI | *AMM 62-21-00, 6-2* | *15 FH*<br>*36 D* | |

### 62-30 MAIN ROTOR MAST

| | | | |
|---|---|---|---|
| 62/30/00/000/000/163<br>**Swashplates**<br>Greasing the bearing.<br>LUB | *AMM 62-32-00, 3-1* | *15 FH*<br>*36 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 62/30/00/000/000/320<br>**Scissors bushings and attachment bolts**<br>Sand-laden and/or dust-laden atmosphere<br>Greasing.<br>LUB | *AMM 62-33-00, 3-1* | *15 FH*<br>*36 D* | |

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | |
|---|---|---|---|
| 63/10/00/000/000/060<br>**Flexible coupling**<br>Visual check.<br>VC | *AMM 63-11-00, 6-18* | *15 FH*<br>*36 D* | |
| 63/10/00/000/000/065<br>**Hydraulic pump - Drive-belt and bearing**<br>Check.<br>VC | *AMM 63-11-00, 6-2*<br>*AMM 63-11-00, 6-15* | *15 FH*<br>*36 D* | |
| 63/10/00/000/000/200<br>**Hydraulic pump - Belt drive**<br>PRE MOD 079561 & PRE MOD 079566<br>Splines greasing.<br>LUB | *AMM 63-11-00, 3-2* | *15 FH*<br>*36 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE SHAFT

| | | | |
|---|---|---|---|
| 65/10/00/000/000/200<br>**Rubber sleeve**<br><br>POST MOD 079059<br>Visual check.<br>VC | *AMM 65-11-00, 6-13* | *15 FH*<br>*36 D* | |

## 77 - ENGINE INDICATING

### 77-00 ENGINE INDICATING

| | | | |
|---|---|---|---|
| 77/00/00/601/000/000<br>**FADEC unit**<br><br>FADEC self-test.<br>Engine ARRIEL 2B/2B1.<br>FT | *AMM 73-20-00, 6-1* | *15 FH*<br>*36 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-21-01

# 150 FH

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 29 | HYDRAULIC POWER |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 76 | ENGINE CONTROLS |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/000<br>**Pilot and copilot seats - Seat buckets and attachments**<br>350A77-0068-01 (-)<br>Visual check.<br>GVI | *AMM 25-21-00, 6-1* | *15 FH* | |

## 29 - HYDRAULIC POWER

### 29-10 MAIN HYDRAULIC GENERATION

| | | | |
|---|---|---|---|
| 29/10/10/501/000/000<br>**Single hydraulic generation system - Servocontrol**<br>Check of the electrical system part.<br>DI | *AMM 29-10-00, 5-1* | *15 FH* | |

## 53 - FUSELAGE

### 53-10 PRIMARY STRUCTURE

| | | | |
|---|---|---|---|
| 53/10/00/000/000/080<br>**Transmission deck**<br>[PRE MOD 073362 // PRE MOD 073342] & POST AMM 53-10-00, 8-14<br>Check.<br>CLN\|GVI | *AMM 53-10-00, 6-1* | *15 FH* | |
| 53/10/00/000/000/120<br>**Longitudinal bulkheads**<br>PRE MOD 074349<br>Visual check.<br>GVI | *AMM 53-10-00, 6-2* | *15 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 53/10/01/000/000/000<br>**Tail rotor drive shaft bearing bracket mounts**<br>Visual check of the bearing bracket mounts.<br>GVI | *AMM 53-31-00, 6-4* | *15 FH* | |

## 55 - STABILIZER

### 55-20 VERTICAL FINS ASSY

| | | | |
|---|---|---|---|
| 55/20/00/000/000/030<br>**Upper and lower fin**<br>Check of skin.<br>GVI | *AMM 55-20-00, 6-1* | *15 FH* | |

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

| | | | |
|---|---|---|---|
| 62/10/00/000/000/005<br>**Skin**<br>Check the skin in the area between 900mm and the blade tip.<br>GVI | *AMM 62-11-00, 6-3* | *15 FH* | |

### 62-30 MAIN ROTOR MAST

| | | | |
|---|---|---|---|
| 62/30/00/000/000/205<br>**Rotating swashplate – 4 contacts bearing**<br>Y51BB10843S2M74 (704A33651158)<br>Inspection of free rotation.<br>Operation to be performed from 5100 FH to 6600 FH of the OTL.<br>DI | *AMM 62-32-00, 6-8* | *15 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 63 - ROTOR DRIVE (S)

### 63-20 MAIN GEARBOX

| | | | |
|---|---|---|---|
| 63/20/00/000/000/039<br>**Oil filter - Filter element**<br>PRE MOD 077162<br>Cleaning.<br>CLN | *AMM 63-21-00, 3-1* | *15 FH* | |
| 63/20/00/000/000/065<br>**Spectrometric Oil Analysis Program (SOAP)**<br>The sample must be taken during the inspection nearest to each due time.<br>Oil monitoring using SOAP is optional.<br>SDI | *AMM 60-00-00, 6-1* | *15 FH* | |

### 63-30 MGB MOUNT AND ATTACHMENT

| | | | |
|---|---|---|---|
| 63/30/00/000/000/100<br>**MGB suspension cross bar**<br>Check of laminated stops without removal.<br>GVI | *AMM 63-31-00, 6-5* | *15 FH* | |

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE SHAFT

| | | | |
|---|---|---|---|
| 65/10/00/000/000/003<br>**Tail rotor drive shaft**<br>Condition check.<br>GVI | *AMM 65-11-00, 6-11*<br>*AMM 65-11-00, 6-13*<br>*AMM 65-11-00, 6-14*<br>*AMM 65-21-00, 6-20* | *15 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/055<br>**Spectrometric Oil Analysis Program (SOAP)**<br>*AMM 60-00-00, 6-1*<br>The sample must be taken during the inspection nearest to each due time.<br>Oil monitoring using SOAP is optional.<br>SDI | | *15 FH* | |
| 65/20/00/000/000/270<br>**Pitch change unit - Swivel bearing**<br>*AMM 65-21-00, 6-16*<br>350A33-2004-03 (-)<br>350A33-2004-05 (-)<br>350A33-2004-06 (-)<br>350A33-2030-00 (-)<br>350A33-2167-01 (-)<br>Check.<br>DI | | *15 FH* | |
| 65/20/00/000/000/370<br>**TRH pitch change unit - Labyrinth seal - Lock washer**<br>*AMM 65-21-00, 6-15*<br>PRE MOD 076550<br>Check.<br>GVI | | *15 FH* | |
| 65/20/00/601/000/060<br>**Pitch control lever - Yoke lugs**<br>*AMM 65-21-00, 6-24*<br>Check.<br>DI | | *15 FH* | |

## 76 - ENGINE CONTROLS

## 76-00 ENGINE CONTROLS

| | | | |
|---|---|---|---|
| 76/00/00/000/000/030<br>**Engine fuel flow control - Twist grip**<br>*AMM 76-12-02, 6-1*<br>POST MOD 073222 & PRE MOD 073261<br>Functional check of the solenoid of the twist grip.<br>FT | | *15 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-21-02

# 12 M

| D.U. | TITLE |
|---|---|
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | |
|---|---|---|---|
| 24/31/00/000/000/060<br>**Battery**<br>150CH-1<br>Check.<br>DI | (7050A4243027) | *AMM 24-33-00, 6-2*<br>*36 D* | |
| 24/31/00/000/000/065<br>**Battery**<br>151CH-1<br>Check.<br>DI | (7050A4243040) | *AMM 24-33-00, 6-2*<br>*36 D* | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-00 EQUIPMENT AND FURNISHING

| | | | |
|---|---|---|---|
| 25/00/00/000/000/015<br>**Belt and harness - Strap**<br>Check and functional test.<br>Operation to be carried out each 12 M (margin 36D) or after each installation of the seat or of the harness.<br>DI\|FT | | *AMM 25-20-00, 5-1*<br>*AMM 25-20-00, 6-1*<br>*36 D* | |

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/40/000/000/000<br>**APPAREO camera**<br>Functional test.<br>FT | | *AMM 25-10-40, 5-2*<br>*36 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

| | | | |
|---|---|---|---|
| 25/66/20/000/000/020<br>**Emergency locator transmitter**<br>KANNAD INTEGRA AP-H (ER).<br>Installation check.<br>DI\|FT | *AMM 25-66-20, 6-1* | *36 D* | |
| 25/66/34/000/000/030<br>**Emergency locator transmitter**<br>KANNAD 406 AF.<br>KANNAD 121 AF-H.<br>KANNAD 406 AF-H.<br>Installation check.<br>DI\|FT | *AMM 25-66-02, 6-1* | *36 D* | |

# 26 - FIRE PROTECTION

## 26-22 OPT - EXTINGUISHER, FIRE, CABIN

| | | | |
|---|---|---|---|
| 26/22/01/000/000/020<br>**Cabin fire extinguisher**<br>12085-01 (S262A10T1001)<br>PLA863520-00 (T262M50T0002)<br>Weighing.<br>Interval starting from the date of manufacture.<br>WGH | *AMM 26-21-00, 6-2* | *36 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-22-00

# 600 FH // 24 M

| D.U. | TITLE |
|---|---|
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 28 | FUEL SYSTEM |
| ATA 29 | HYDRAULIC POWER |
| ATA 32 | LANDING GEAR |
| ATA 33 | LIGHTING SYSTEM |
| ATA 34 | NAVIGATION |
| ATA 52 | DOORS |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 71 | POWER PLANT |
| ATA 76 | ENGINE CONTROLS |
| ATA 77 | ENGINE INDICATING |
| ATA 79 | ENGINE OIL |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | |
|---|---|---|---|
| 24/31/00/000/000/015<br>**Battery temperature sensor**<br>PRE OP 3827<br>Battery temperature test warning.<br>FT | *AMM 24-33-00, 5-1* | *60 FH*<br>*73 D* | |
| 24/31/00/000/000/016<br>**Battery temperature sensor**<br>POST OP 3827<br>Battery temperature test warning.<br>FT | *AMM 24-33-00, 5-3* | *60 FH*<br>*73 D* | |
| 24/31/00/000/000/090<br>**Electrical power**<br>Check:<br>- battery,<br>- electrical master box,<br>- starter generator-ground power receptacle.<br>DI | *AMM 24-00-00, 6-1* | *60 FH*<br>*73 D* | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/040<br>**Pilot and copilot seats**<br>Check.<br>DI | *AMM 25-21-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

| | | | |
|---|---|---|---|
| 25/66/00/000/000/015<br>**Emergency locator transmitter**<br>JOLLIET JE2/JE2NG.<br>On board system check.<br>DI | *AMM 25-66-04, 6-1* | *60 FH*<br>*73 D* | |
| 25/66/00/000/000/035<br>**Emergency locator transmitter**<br>ELT 910 NARCO.<br>Installation check.<br>DI | *AMM 25-66-07, 6-1* | *60 FH*<br>*73 D* | |
| 25/66/00/000/000/130<br>**Emergency locator transmitter**<br>ELT96A2560000000 (704A45737043)<br>SOCATA.<br>Check.<br>DI\|FT | *AMM 25-66-08, 6-1* | *60 FH*<br>*73 D* | |

# 26 - FIRE PROTECTION

## 26-10 FIRE DETECTION

| | | | |
|---|---|---|---|
| 26/10/00/000/000/040<br>**Hermetic fire detector**<br>Condition and continuity check.<br>DI | *AMM 26-11-00, 6-2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

# 28 - FUEL SYSTEM

## 28-00 FUEL SYSTEM

| | | | |
|---|---|---|---|
| 28/00/00/000/000/000<br>**Fuel system**<br>Check.<br>DI | *AMM 28-00-00, 6-1* | *60 FH*<br>*73 D* | |
| 28/00/00/402/000/000<br>**Fuel tank**<br>Check.<br>DI | *AMM 28-11-00, 6-1* | *60 FH*<br>*73 D* | |
| 28/00/00/502/000/000<br>**Fuel tank**<br>Adjustment - Strap tension<br>RTQ | *AMM 28-11-00, 5-1* | *60 FH*<br>*73 D* | |

## 28-10 FUELING ASSY

| | | | |
|---|---|---|---|
| 28/10/00/000/000/000<br>**Fueling system**<br>POST MOD 073034<br>Cleaning of the strainer.<br>CLN | *AMM 28-11-00, 4-4* | *60 FH*<br>*73 D* | |
| 28/10/00/000/000/020<br>**Fuel shut-off valve**<br>Functional test.<br>FT | *AMM 28-21-00, 5-2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 28-20 FUEL DISTRIBUTION

| | | | |
|---|---|---|---|
| 28/20/00/000/000/035<br>**Fuel distribution - Fuel filter**<br>Fuel filter pre-clogging indication functional test.<br>FT | *AMM 28-00-00, 5-1* | *60 FH*<br>*73 D* | |

## 28-40 FUEL CONTROLS AND MONITORING

| | | | |
|---|---|---|---|
| 28/40/00/000/000/000<br>**Fuel gaging system**<br>Rigging.<br>RIG | *AMM 28-41-00, 5-1* | *60 FH*<br>*73 D* | |

## 28-41 INDICATING

| | | | |
|---|---|---|---|
| 28/41/00/000/000/020<br>**Low fuel level warning**<br>Functional test.<br>FT | *AMM 28-41-00, 5-2* | *60 FH*<br>*73 D* | |

# 29 - HYDRAULIC POWER

## 29-10 MAIN HYDRAULIC GENERATION

| | | | |
|---|---|---|---|
| 29/10/10/302/000/000<br>**Accumulator**<br>Test and check.<br>DI\|FT | *AMM 29-00-00, 3-7* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 32 - LANDING GEAR

### 32-13 SKID LANDING GEAR

| | | | |
|---|---|---|---|
| 32/13/00/601/000/000<br>**Skid landing gear**<br>Check.<br>DI\|FT | *AMM 32-11-00, 6-1*<br>*AMM 32-11-00, 6-4* | *60 FH*<br>*73 D* | |
| 32/13/00/603/000/000<br>**Skid type landing gear**<br>Check of attachments of the hydraulic dampers.<br>GVI | *AMM 32-11-00, 6-5* | *60 FH*<br>*73 D* | |

## 33 - LIGHTING SYSTEM

### 33-00 LIGHTING SYSTEM

| | | | |
|---|---|---|---|
| 33/00/00/000/000/000<br>**External light**<br>Check of the lighting system.<br>DI | *AMM 33-00-00, 6-1* | *60 FH*<br>*73 D* | |

## 34 - NAVIGATION

### 34-00 NAVIGATION

| | | | |
|---|---|---|---|
| 34/00/00/000/000/000<br>**Navigation system**<br>Check.<br>DI | *AMM 34-00-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 34-21 GYROMAGNETIC COMPASS

| | | | |
|---|---|---|---|
| 34/21/00/000/000/000<br>**Pilot's and copilot's gyroscopic and directional horizon**<br>Test.<br>FT | *AMM 34-20-00, 5-1* | *60 FH*<br>*73 D* | |

# 52 - DOORS

## 52-10 CREW AND PASSENGERS DOOR

| | | | |
|---|---|---|---|
| 52/10/00/501/000/000<br>**Crew door**<br>Functional test - Jettison.<br>FT | *AMM 52-11-00, 5-1* | *60 FH*<br>*73 D* | |
| 52/10/00/601/000/000<br>**Crew door**<br>Visual check without removal.<br>GVI | *AMM 52-11-00, 6-1* | *60 FH*<br>*73 D* | |

## 52-30 CARGO DOOR

| | | | |
|---|---|---|---|
| 52/30/00/000/000/010<br>**Lateral cargo door**<br>Functional test - Indicating system.<br>FT | *AMM 52-31-00, 5-1* | *60 FH*<br>*73 D* | |
| 52/30/00/000/000/020<br>**Lateral cargo door**<br>Visual check without removal.<br>GVI | *AMM 52-31-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 52-32 REAR CARGO HOLD DOOR

| | | | |
|---|---|---|---|
| 52/32/00/000/000/030<br>**Rear cargo compartment door**<br>Visual check without removal.<br>GVI | *AMM 52-32-00, 6-1* | *60 FH*<br>*73 D* | |

## 52-90 SLIDING DOOR

| | | | |
|---|---|---|---|
| 52/90/00/000/000/000<br>**Sliding door**<br>Detailed check.<br>DI | *AMM 52-12-00, 6-1* | *60 FH*<br>*73 D* | |
| 52/90/00/000/000/020<br>**Sliding door**<br>Systematic discard of the spring washer, pad and rollers.<br>DS | *AMM 52-12-00, 4-3* | *60 FH*<br>*73 D* | |

# 53 - FUSELAGE

## 53-00 FUSELAGE

| | | | |
|---|---|---|---|
| 53/00/00/000/000/060<br>**Structure**<br>Cleaning of the helicopter.<br>CLN | *AMM 12-20-00, 3-1* | *60 FH*<br>*73 D* | |
| 53/00/00/601/000/000<br>**Fuselage**<br>Detailed check.<br>DI | *AMM 53-00-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 53-10 PRIMARY STRUCTURE

| | | | |
|---|---|---|---|
| 53/10/00/000/000/010<br>**Windshield, glazed panel, door window**<br>Check for cracks.<br>GVI | *AMM 56-11-00, 6-1* | *60 FH*<br>*73 D* | |
| 53/10/00/000/000/070<br>**Cabin vibrator absorber blade support**<br>Check.<br>RTQ\|GVI | *AMM 53-32-00, 6-1* | *60 FH*<br>*73 D* | |

# 55 - STABILIZER

## 55-10 HORIZONTAL STABILIZER

| | | | |
|---|---|---|---|
| 55/10/00/000/000/020<br>**Horizontal stabilizer**<br>Check. | *AMM 55-11-00, 6-1* | *60 FH*<br>*73 D* | |

## 55-20 VERTICAL FINS ASSY

| | | | |
|---|---|---|---|
| 55/20/00/000/000/010<br>**Upper and lower fin**<br>Check.<br>GVI\|TCK | *AMM 55-20-00, 6-2* | *0*<br>*0* | |
| 55/20/00/000/000/060<br>**Upper and lower fin**<br>Readjustment of the tightening torque of the screws attaching the fin spars to the frame.<br>RTQ | *AMM 55-20-00, 6-4* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 62 - ROTOR (S)

## 62-10 MAIN ROTOR BLADE

| | | | |
|---|---|---|---|
| 62/10/20/601/000/010<br>**Main rotor blade**<br>Check.<br>Check every 30 FH (margin 3 FH) for 120 FH, if a defect (inside the limits) is found: blade skin separation or blade leading edge stainless steel strip separation, cracks in the stainless steel leading edge.<br>If no development is noted during this period, return to the normal inspection cycle.<br>DI | *AMM 62-11-00, 6-1* | *60 FH*<br>*73 D* | |

## 62-20 MAIN ROTOR HEAD

| | | | |
|---|---|---|---|
| 62/20/00/000/000/080<br>**MRH**<br>Check.<br>DI | *AMM 62-21-00, 6-3*<br>*AMM 62-21-00, 6-4*<br>*AMM 62-21-00, 6-5*<br>*AMM 62-21-00, 6-6*<br>*AMM 62-21-00, 6-7*<br>*AMM 62-21-00, 6-8*<br>*AMM 62-21-00, 6-9*<br>*AMM 62-21-00, 6-10*<br>*AMM 62-21-00, 6-12*<br>*AMM 62-21-00, 6-16*<br>*AMM 62-21-00, 6-17*<br>*AMM 62-21-00, 6-21*<br>*AMM 62-21-00, 6-22* | *60 FH*<br>*73 D* | |
| 62/20/00/000/000/210<br>**Droop restrainer ring**<br>Detailed check.<br>DI | *AMM 62-21-00, 6-13* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 62-30 MAIN ROTOR MAST

| | | | |
|---|---|---|---|
| 62/30/00/000/000/030<br>**Pitch change rod**<br>Tightening torque check.<br>TCK | *AMM 62-33-00, 6-6* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/065<br>**Rotor mast - Upper visible section**<br>Detailed check.<br>DI | *AMM 62-31-00, 6-1*<br>*AMM 62-31-00, 6-2*<br>*AMM 62-31-00, 6-4* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/310<br>**Scissor link**<br>Play check.<br>TCK | *AMM 62-33-00, 6-3* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/330<br>**Diapason scissor link**<br>Play check.<br>TCK | *AMM 62-33-00, 6-2* | *60 FH*<br>*73 D* | |
| 62/30/00/000/000/340<br>**MRH - Upper casing attachment bolts/Flared housing**<br>POST MOD 076120<br>Tightening torque check.<br>TCK | *AMM 62-31-00, 6-11* | *60 FH*<br>*73 D* | |
| 62/30/00/601/000/000<br>**Pitch change link**<br>Check.<br>GVI | *AMM 62-33-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 62/30/00/601/000/010<br>**Swashplate**<br>Check.<br>DI | *AMM 62-32-00, 6-7* | *60 FH*<br>*73 D* | |

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | |
|---|---|---|---|
| 63/10/00/000/000/050<br>**Hydraulic pump - Belt**<br>Tension check.<br>RIG | *AMM 63-11-00, 6-20* | *60 FH*<br>*73 D* | |
| 63/10/00/000/000/080<br>**Hydraulic pump - Bearing**<br>Check.<br>DI | *AMM 63-11-00, 6-19* | *60 FH*<br>*73 D* | |
| 63/10/00/000/000/210<br>**Hydraulic pump - Belt**<br>POST MOD 079561 & PRE MOD 079566<br>Splines greasing.<br>LUB | *AMM 63-11-00, 3-2* | *60 FH*<br>*73 D* | |
| 63/10/00/000/000/260<br>**Hydraulic pump - Bearing**<br>Greasing.<br>LUB | *AMM 63-11-00, 3-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 63-20 MAIN GEARBOX

| | | | |
|---|---|---|---|
| 63/20/00/000/000/080<br>**Mineral oil**<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard.<br>DRN | *AMM 12-10-00, 3-1* | *60 FH*<br>*73 D* | |

## 63-30 MGB MOUNT AND ATTACHMENT

| | | | |
|---|---|---|---|
| 63/30/00/000/000/010<br>**Suspension bar**<br>704A33-633-035 (-)<br>704A33-633-036 (-)<br>704A33-633-262 (-)<br>FDT14193 (704A33633074)<br>FDT14194 (704A33633075)<br>Check.<br>DI | *AMM 63-32-00, 6-1*<br>*AMM 63-32-00, 6-2* | *60 FH*<br>*73 D* | |

## 63-51 ROTOR BRAKE

| | | | |
|---|---|---|---|
| 63/51/00/000/000/000<br>**Rotor brake micro switch**<br>Check.<br>DI | *AMM 63-51-00, 5-1* | *60 FH*<br>*73 D* | |
| 63/51/00/000/000/010<br>**Rotor brake - Ball-type control**<br>Test without removal.<br>FT | *AMM 63-52-00, 5-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | | | | |
|---|---|---|---|---|
| 64/10/00/000/000/065<br>**Blanking cap** | | *AMM 64-10-00, 6-12* | *60 FH*<br>*73 D* | |
| 355A12-0050-12 | (-) | | | |
| 355A12-0051-12 | (-) | | | |
| 355A12-0060-00 | (-) | | | |
| 355A12-0060-02 | (-) | | | |
| Check.<br>DI | | | | |
| 64/10/00/000/000/085<br>**Tail rotor blade** | | *AMM 64-10-00, 6-1*<br>*AMM 64-10-00, 6-3*<br>*AMM 64-10-00, 6-5* | *60 FH*<br>*73 D* | |
| Check with removal the rotors.<br>- Should spar blade delaminate or crack, a check is to be performed every 30 FH (margin 3 FH) over 120 FH.<br>- PRE MOD 075601: if bellow distortion is detected, the check must be carried out every 150 FH (margin 15 FH) over 600 FH.<br>If no development is noted during these periods, return to the normal inspection cycle.<br>DI | | | | |
| 64/10/00/000/000/100<br>**Tail rotor blade horn** | | *AMM 64-10-00, 6-10* | *60 FH*<br>*73 D* | |
| 355A12-5102-00 | (-) | | | |
| 355A12-5102-01 | (-) | | | |
| 355A12-5103-00 | (-) | | | |
| Check.<br>DI | | | | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

# 65 - TAIL ROTOR DRIVE

## 65-10 TAIL ROTOR DRIVE SHAFT

| | | | |
|---|---|---|---|
| 65/10/00/000/000/010<br>**Tail rotor drive shaft**<br>Maintenance.<br>TCK\|DI | *AMM 65-11-00, 6-1*<br>*AMM 65-11-00, 6-3*<br>*AMM 65-11-00, 6-6*<br>*AMM 65-11-00, 6-7* | *60 FH*<br>*73 D* | |

## 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/035<br>**Mineral oil**<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) upon oil replacement.<br>DRN | *AMM 12-10-00, 3-1* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/302<br>**TRH pitch change unit**<br>Check. | *AMM 65-21-00, 6-9*<br>*AMM 65-21-00, 6-16* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/307<br>**TRH pitch change unit - Greasable bearing**<br>704A33-651-210 (-)<br>POST MOD 076550<br>Check bearing for friction points and greasing.<br>DI\|LUB | *AMM 65-21-00, 3-1*<br>*AMM 65-21-00, 6-8* | *60 FH*<br>*73 D* | |
| 65/20/00/000/000/490<br>**TGB - Pitch rod**<br>Check.<br>DI | *AMM 65-21-00, 6-11* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 65/20/00/000/000/500<br>**Tail rotor shaft**<br>Check.<br>GVI | *AMM 65-21-00, 6-19* | *60 FH*<br>*73 D* | |
| 65/20/00/601/000/030<br>**Pitch control lever**<br>350A33-1525-01 (-)<br>Check.<br>DI | *AMM 65-21-00, 6-27* | *60 FH*<br>*73 D* | |

## 67 - ROTOR FLIGHT CONTROLS

### 67-10 MAIN ROTOR CONTROL

| | | | |
|---|---|---|---|
| 67/10/00/000/000/000<br>**Collective lever lock and "low pitch" locking tab**<br>PRE MOD 073237<br>Check.<br>GVI | *AMM 67-12-00, 6-1* | *60 FH*<br>*73 D* | |
| 67/10/00/000/000/010<br>**Main rotor flight controls**<br>Check.<br>GVI | *AMM 67-10-00, 6-1* | *60 FH*<br>*73 D* | |

### 67-20 TAIL ROTOR CONTROL

| | | | |
|---|---|---|---|
| 67/20/00/000/000/000<br>**Tail rotor flight controls**<br>Check.<br>GVI | *AMM 67-21-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 67-30 SERVOCONTROL

| | | | |
|---|---|---|---|
| 67/30/00/000/000/010<br>**Yaw channel trim system**<br>Installation of a simple hydraulic power system.<br>Sealing check.<br>FT | *AMM 67-34-00, 6-1* | *60 FH*<br>*73 D* | |
| 67/30/00/402/000/060<br>**Main servocontrol**<br>Tightening torque check of attaching bolts.<br>TCK | *AMM 67-32-00, 6-3* | *60 FH*<br>*73 D* | |
| 67/30/00/602/000/010<br>**Servocontrol - Single hydraulic system**<br>Play check.<br>TCK | *AMM 67-32-00, 6-2* | *60 FH*<br>*73 D* | |

# 71 - POWER PLANT

## 71-00 POWER PLANT

| | | | |
|---|---|---|---|
| 71/00/00/000/000/000<br>**Power plant installation**<br>Check for correct condition and attachment of the items.<br>GVI | *AMM 71-00-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 76 - ENGINE CONTROLS

### 76-20 EMERGENCY SHUTDOWN

| | | |
|---|---|---|
| 76/20/00/501/000/010<br>**Emergency shut down - Fuel shut-off ball type control**<br>*AMM 76-21-00, 5-1*<br>Lever on cabin ceiling or cabin desk.<br>Test without removal.<br>FT | *60 FH*<br>*73 D* | |

## 77 - ENGINE INDICATING

### 77-00 ENGINE INDICATING

| | | |
|---|---|---|
| 77/00/00/000/000/000<br>**Engine emergency governing system "EBCAU"**<br>*AMM 77-00-00, 5-4*<br>*FLM Section 8.3*<br>Engine ARRIEL 2B1.<br>Engine ARRIEL 2D.<br>Check.<br>FT\|GR | *60 FH*<br>*73 D* | |

## 79 - ENGINE OIL

### 79-00 LUBRICATION

| | | |
|---|---|---|
| 79/00/00/601/000/000<br>**Power plant**<br>*AMM 79-00-00, 6-1*<br>Check of the condition, attachment and cleanliness of the tank and the lubricating system.<br>DI | *60 FH*<br>*73 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-22-01

# 600 FH

| D.U. | TITLE |
|---|---|
| ATA 28 | FUEL SYSTEM |
| ATA 29 | HYDRAULIC POWER |
| ATA 53 | FUSELAGE |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 77 | ENGINE INDICATING |
| ATA 80 | ENGINE STARTING |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 28 - FUEL SYSTEM

### 28-00 FUEL SYSTEM

| | | | |
|---|---|---|---|
| 28/00/00/000/000/001<br>**Fuel system**<br>Energy absorption fuel tank.<br>Check.<br>DI | *AMM 28-00-01, 6-1* | *60 FH* | |
| 28/00/00/000/000/002<br>**Fuel shut-off valve**<br>Energy absorption fuel tank.<br>Functional test.<br>FT | *AMM 28-21-01, 5-2* | *60 FH* | |
| 28/00/00/502/000/001<br>**Fuel tank**<br>Energy absorption fuel tank.<br>Adjustment - Strap tension.<br>RTQ | *AMM 28-11-01, 5-1* | *60 FH* | |

### 28-41 INDICATING

| | | | |
|---|---|---|---|
| 28/41/01/000/000/001<br>**Low fuel level warning**<br>Energy absorption fuel tank.<br>Functional test.<br>FT | *AMM 28-41-01, 5-2* | *60 FH* | |

## 29 - HYDRAULIC POWER

### 29-10 MAIN HYDRAULIC GENERATION

| | | | |
|---|---|---|---|
| 29/10/00/000/000/040<br>**MGB Hydraulic pump**<br>Greasing.<br>LUB | *AMM 29-12-02, 3-1* | *60 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 53 - FUSELAGE

### 53-10 PRIMARY STRUCTURE

| | | | |
|---|---|---|---|
| 53/10/00/000/000/110<br>**Transmission deck**<br>POST MOD 073362 & POST MOD 073342<br>Check.<br>CLN\|GVI | *AMM 53-10-00, 6-1* | *60 FH* | |

## 62 - ROTOR (S)

### 62-30 MAIN ROTOR MAST

| | | | |
|---|---|---|---|
| 62/30/00/000/000/045<br>**Chips detector**<br>Check of the magnetization of the electrical or non electrical magnetic plug.<br>DI | *AMM 60-00-00, 6-4* | *60 FH* | |
| 62/30/00/000/000/090<br>**Scissors drive coupling - Sealing bead**<br>Check.<br>DI | *AMM 62-31-00, 6-6* | *60 FH* | |
| 62/30/00/000/000/215<br>**Rotating swashplate - 4 contacts bearing**<br>Y51BB10843S2M74 (704A33651158)<br>Inspection of free rotation.<br>Operation to be performed from 0 FH to 5100 FH of the OTL.<br>DI | *AMM 62-32-00, 6-8* | *60 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 63 - ROTOR DRIVE (S)

### 63-20 MAIN GEARBOX

| | | | |
|---|---|---|---|
| 63/20/00/000/000/015<br>**Chips detector**<br>Check of the magnetization of the electrical or non electrical magnetic plug.<br>DI | *AMM 60-00-00, 6-4* | *60 FH* | |
| 63/20/00/000/000/467<br>**Input bevel gear assembly**<br>PRE MOD 077203 // PRE MOD 077205<br>Readjust the tightening torque of the rotor brake flange/input bevel gear assembly attachment nut.<br>RTQ | *AMM 63-51-00, 6-3* | *60 FH* | |

### 63-51 ROTOR BRAKE

| | | | |
|---|---|---|---|
| 63/51/00/000/000/050<br>**Rotor brake**<br>Check.<br>DI | *AMM 63-51-00, 6-1* | *60 FH* | |

## 65 - TAIL ROTOR DRIVE

### 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/005<br>**Chips detector**<br>Check of the magnetization of the electrical or non electrical magnetic plug.<br>DI | *AMM 60-00-00, 6-4* | *60 FH* | |
| 65/20/00/603/000/000<br>**Casing - Attachment bolt**<br>Tightening torque check.<br>TCK | *AMM 65-21-00, 6-18* | *60 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 67 - ROTOR FLIGHT CONTROLS

### 67-20 TAIL ROTOR CONTROL

| | | | |
|---|---|---|---|
| 67/20/00/000/000/010<br>**Lower crossbeams of the yaw control bellcrank support**<br>PRE MOD 073466<br>Visual check for cracks.<br>GVI | *AMM 67-21-00, 6-1* | *60 FH* | |

## 77 - ENGINE INDICATING

### 77-00 ENGINE INDICATING

| | | | |
|---|---|---|---|
| 77/00/00/501/000/000<br>**FADEC unit**<br>FADEC test channel "B".<br>Engine ARRIEL 2B1.<br>FT | *AMM 73-20-00, 5-1* | *60 FH* | |

## 80 - ENGINE STARTING

### 80-00 STARTING

| | | | |
|---|---|---|---|
| 80/00/02/000/000/120<br>**Starter generator**<br>515-030 (704A46101018)<br>524-031 (704A46101011)<br>THALES.<br>Checking generator, brushes and splines.<br>DI | *AMM 80-00-02, 6-1*<br>*AMM 80-00-02, 6-2*<br>*AMM 80-00-02, 6-3* | *60 FH* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-22-02

# 24 M

| D.U. | TITLE |
|---|---|
| ATA 24 | ELECTRICAL POWER |
| ATA 26 | FIRE PROTECTION |
| ATA 34 | NAVIGATION |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | |
|---|---|---|---|
| 24/31/00/000/000/070<br>**Battery**<br>150CH-1<br>Overhaul.<br>RS\|FT | (7050A4243027) | *AMM 24-33-00, 6-3*<br>*73 D* | |
| 24/31/00/000/000/075<br>**Battery**<br>151CH-1<br>Overhaul.<br>DI | (7050A4243040) | *AMM 24-33-00, 6-3*<br>*73 D* | |
| 24/31/00/000/000/080<br>**Battery**<br>Battery compartment cleaning.<br>CLN | | *AMM 24-33-00, 2-1*<br>*73 D* | |

## 26 - FIRE PROTECTION

### 26-22 OPT - EXTINGUISHER, FIRE, CABIN

| | | | |
|---|---|---|---|
| 26/22/00/000/000/030<br>**Cabin fire extinguisher**<br>P3APP003010D<br>Check and weighing.<br>DI\|WGH | (U262A50T1003) | *AMM 26-21-00, 6-5*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 34 - NAVIGATION

## 34-10 PITOT SYSTEM

| | | | |
|---|---|---|---|
| 34/10/00/000/000/000<br>**Pitot System**<br>Check for correct operation.<br>FT | *AMM 34-10-00, 5-1* | *73 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-23-00

# 1200 FH // 48 M

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 76 | ENGINE CONTROLS |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/060<br>**Pilot and copilot seats**<br>FISCHER H110.<br>Detailed check.<br>DI | *AMM 25-21-00, 6-5* | *120 FH*<br>*146 D* | |
| 25/10/12/000/000/060<br>**Pilot and copilot seats**<br>FISCHER H140.<br>Detailed check.<br>DI | *AMM 25-21-00, 6-10* | *120 FH*<br>*146 D* | |

## 63 - ROTOR DRIVE (S)

### 63-10 ENGINE-TO-M.G.B. COUPLING

| | | | |
|---|---|---|---|
| 63/10/00/000/000/010<br>**Engine-to-MGB coupling - Hydraulic**<br>PRE MOD 079566<br>Check.<br>DI | *AMM 63-11-00, 6-11*<br>*AMM 63-11-00, 6-17* | *120 FH*<br>*146 D* | |
| 63/10/00/000/000/100<br>**Engine-to-MGB coupling - MGB**<br>Check.<br>DI | *AMM 63-11-00, 6-1*<br>*AMM 63-11-00, 6-4*<br>*AMM 63-11-00, 6-5*<br>*AMM 63-11-00, 6-6*<br>*AMM 63-11-00, 6-7*<br>*AMM 63-11-00, 6-8*<br>*AMM 63-11-00, 6-9* | *120 FH*<br>*146 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 63/10/00/000/000/105<br>**Engine-to-MGB coupling - Hydraulic**<br>Check.<br>DI | *AMM 63-11-00, 6-12*<br>*AMM 63-11-00, 6-16* | *120 FH*<br>*146 D* | |
| 63/10/00/000/000/220<br>**Hydraulic pump - Belt drive**<br>PRE MOD 079566<br>Check splines.<br>DI | *AMM 63-11-00, 6-3* | *120 FH*<br>*146 D* | |

## 63-20 MAIN GEARBOX

| | | | |
|---|---|---|---|
| 63/20/00/000/000/035<br>**Synthetic oil**<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard.<br>DRN | *AMM 12-10-00, 3-1* | *120 FH*<br>*146 D* | |

# 65 - TAIL ROTOR DRIVE

## 65-20 TAIL GEARBOX

| | | | |
|---|---|---|---|
| 65/20/00/000/000/020<br>**Synthetic oil**<br>Oil change.<br>Refer to WC 12-10-00, 3-1 (AMM) upon oil replacement.<br>DRN | *AMM 12-10-00, 3-1* | *120 FH*<br>*146 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

| | | | |
|---|---|---|---|
| 67/30/00/404/000/000<br>**Load compensator assy - Lever**<br><br>Check.<br>DI | *AMM 67-34-00, 6-2* | *120 FH*<br>*146 D* | |

## 76 - ENGINE CONTROLS

### 76-00 ENGINE CONTROLS

| | | | |
|---|---|---|---|
| 76/00/00/000/000/020<br>**Engine fuel flow control**<br><br>PRE MOD 073261<br>ARRIEL 2B<br>Setting the control.<br>FT\|RIG | *AMM 76-12-02, 5-1*<br>*AMM 76-12-02, 5-3* | *120 FH*<br>*146 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-23-01

# 1200 FH

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 76 | ENGINE CONTROLS |
| ATA 77 | ENGINE INDICATING |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | |
|---|---|---|---|
| 25/10/11/000/000/020<br>**Front seats with shock absorbers**<br>SICMA 159.<br>Check.<br>DI | *AMM 25-21-00, 6-6* | *120 FH* | |
| 25/10/11/000/000/025<br>**Front seats with shock absorbers**<br>SICMA 198.<br>Check.<br>VC | *AMM 25-21-00, 6-11* | *120 FH* | |

## 76 - ENGINE CONTROLS

### 76-30 TWIST GRIP FUEL FLOW CONTROL

| | | | |
|---|---|---|---|
| 76/30/12/000/000/000<br>**Twist grip - Load spring**<br>350A27-3249-24 (-)<br>Engine ARRIEL 2B1.<br>Replacement of the load spring.<br>DS | *AMM 76-12-03, 4-2* | *120 FH* | |
| 76/30/12/000/000/010<br>**Twist grip - Load spring**<br>350A27-3249-24 (-)<br>Engine ARRIEL 2D.<br>Replacement of the load spring.<br>DS | *AMM 76-12-04, 4-2* | *120 FH* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 77 - ENGINE INDICATING

### 77-00 ENGINE INDICATING

| | | | |
|---|---|---|---|
| 77/00/00/501/000/010<br>**FADEC unit**<br>*AMM 73-20-00, 6-2* *120 FH*<br>POST MOD 074830 & POST MOD 074831<br>Test of the overspeed protection system.<br>Engine ARRIEL 2D.<br>FT | | | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-23-02

# 48 M

| D.U. | TITLE |
|---|---|
| ATA 32 | LANDING GEAR |
| ATA 60 | GENERAL - MECHANICS SYSTEMS |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 32 - LANDING GEAR

### 32-13 SKID LANDING GEAR

| | | |
|---|---|---|
| 32/13/00/601/000/020<br>**Skid landing gear**<br>*AMM 32-11-00, 6-3*<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Check.<br>DI | *146 D* | |

## 60 - GENERAL - MECHANICS SYSTEMS

### 60-00 GENERAL - MECHANICS SYSTEMS

| | | |
|---|---|---|
| 60/00/00/000/000/100<br>**MRH - Main Rotor Mast - TRH - Tail rotor drive shaft - Engine/MGB coupling**<br>*AMM 05-60-00, 6-1*<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Operation to be carried out after having logged 96 M (margin 180 D) after initial setting to service.<br>DI | *146 D* | |
| 60/00/00/000/000/130<br>**MGB assembly - TGB assembly**<br>*AMM 05-60-00, 6-1*<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Check.<br>Operation to be carried out after having logged 96 M (margin 180 D) after initial setting to service or since the last Overhaul.<br>DI | *146 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-25-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 24 | ELECTRICAL POWER |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 26 | FIRE PROTECTION |
| ATA 28 | FUEL SYSTEM |
| ATA 29 | HYDRAULIC POWER |
| ATA 32 | LANDING GEAR |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 60 | GENERAL - MECHANICS SYSTEMS |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 80 | ENGINE STARTING |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-21 VENTILATION/DEMISTING

| | | | | |
|---|---|---|---|---|
| 21/21/00/000/000/010<br>**Heating pipe**<br>POST MOD 074765 // POST MOD 074866<br>P2 installation.<br>Check of the condition of the heat insulation and sleeves.<br>DI | *AMM 21-21-00, 6-5* | 1800 FH<br>// 72 M | *180 FH*<br>*180 D* | |
| 21/21/00/000/000/020<br>**Heating pipe**<br>POST MOD 074765 // POST MOD 074866<br>P2 installation.<br>Leak detection.<br>DI | *AMM 21-21-00, 6-6* | 144 M | *180 D* | |
| 21/21/00/000/000/030<br>**Heating pipe**<br>PRE MOD 074765 // PRE MOD 074866<br>P2 installation.<br>Replacement.<br>DS | *AMM 21-21-00, 6-4* | 144 M | *180 D* | |

## 24 - ELECTRICAL POWER

### 24-31 BATTERY

| | | | | |
|---|---|---|---|---|
| 24/31/00/000/000/050<br>**Battery**<br>150CH-1 (7050A4243027)<br>Hot climatic conditions<br>Check.<br>DI | *AMM 24-33-00, 6-1* | 6 M | *18 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 24/31/00/000/000/055<br>**Battery**<br>151CH-1<br>Hot climatic conditions<br>Check.<br>DI | *AMM 24-33-00, 6-1*<br>(7050A4243040) | 6 M | *18 D* | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-10 COCKPIT

| | | | | |
|---|---|---|---|---|
| 25/10/11/000/000/010<br>**Front seats with shock absorbers**<br>SICMA 159.<br>Detailed check.<br>DI | *AMM 25-21-00, 6-7* | 1800 FH | *180 FH* | |
| 25/10/11/000/000/027<br>**Front seats with shock absorbers**<br>SICMA 198.<br>Detailed check.<br>DI | *AMM 25-21-00, 6-12* | 1800 FH | *180 FH* | |
| 25/10/11/000/000/030<br>**Front seats with shock absorbers - Rails**<br>SICMA 159.<br>Check.<br>DI | *AMM 25-21-00, 6-2* | 1800 FH | *180 FH* | |
| 25/10/11/000/000/035<br>**Front seats with shock absorbers - Rails**<br>SICMA 198.<br>Check.<br>DI | *AMM 25-21-00, 6-2* | 2400 FH | *240 FH* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 25/10/11/000/000/070<br>**Pilot and copilot seats - Rails**<br>FISCHER H110.<br>Check.<br>DI | *AMM 25-21-00, 6-3* | 1800 FH | *180 FH* | |
| 25/10/12/000/000/070<br>**Pilot and copilot seats - Rails**<br>FISCHER H140.<br>Check.<br>DI | *AMM 25-21-00, 6-8* | 1800 FH | *180 FH* | |

## 25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

| | | | | |
|---|---|---|---|---|
| 25/66/00/000/000/010<br>**Emergency locator transmitter**<br>JOLLIET JE2 AND JE25 NG.<br>Fonctional tests.<br>FT | *AMM 25-66-04, 5-1* | 6 M | *18 D* | |
| 25/66/00/000/000/030<br>**Emergency locator transmitter**<br>ELT 910 NARCO.<br>Fonctional tests.<br>FT | *AMM 25-66-07, 5-1* | 6 M | *18 D* | |
| 25/66/00/000/000/100<br>**Emergency locator transmitter**<br>N15F210B<br>DUKANE 210B.<br>Clean and check.<br>CLN\|GVI | *CMM 25-69-73*<br>*Section III § 3,2*<br>(704A45737011) | 3 M | *9 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 25/66/00/000/000/120<br>**Emergency locator transmitter**<br>ELT96A2560000000 | *AMM 25-66-08, 5-1*<br>(704A45737043)<br>SOCATA.<br>Emergency locator transmitter self-test (3 consecutive phases).<br>FT | 6 M | *18 D* | |
| 25/66/20/000/000/010<br>**Emergency locator transmitter**<br>S1854501-01 | *AMM 25-66-20, 5-1*<br>(704A45737078)<br>KANNAD INTEGRA AP-H (ER).<br>Emergency locator transmitter autotest.<br>FT | 1 M | *3 D* | |
| 25/66/34/000/000/020<br>**Emergency locator transmitter** | *AMM 25-66-02, 5-1*<br>KANNAD 406 AF.<br>KANNAD 121 AF-H.<br>KANNAD 406 AF-H.<br>Emergency locator transmitter autotest.<br>FT | 1 M | *3 D* | |

## 26 - FIRE PROTECTION

## 26-22 OPT - EXTINGUISHER, FIRE, CABIN

| | | | | |
|---|---|---|---|---|
| 26/22/00/000/000/020<br>**Cabin fire extinguisher** | *CMM 26-21-99*<br>*CMM 26-22-99*<br>*CMM 26-24-04*<br>Weigh the cylinders.<br>- CMM 26-21-99 = MP/N P2H, MP/N H1.<br>- CMM 26-22-99 = MP/N H1-code 0150101A, MP/N H1-0150101S.<br>- CMM 26-24-04 = MP/N H1-10AIR, MP/N H1-10.<br>WGH | 6 M | *18 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 26/22/00/000/000/040<br>**Cabin fire extinguisher**<br>P3APP003010D<br>Check.<br>DI | *AMM 26-21-00, 6-4*<br>(U262A50T1003) | 1 M | *3 D* | |

## 28 - FUEL SYSTEM

### 28-00 FUEL SYSTEM

| | | | | |
|---|---|---|---|---|
| 28/00/00/502/000/010<br>**Fuel tank**<br>Tropical and damp atmosphere<br>Check and maintenance.<br>DI | *MTC 20.08.06.401* | 3 M | *9 D* | |

## 29 - HYDRAULIC POWER

### 29-00 HYDRAULIC POWER

| | | | | |
|---|---|---|---|---|
| 29/00/00/000/000/000<br>**Hydraulic system**<br>Drain and fill.<br>Servicing of the stainer and the filter.<br>DRN | *AMM 29-00-00, 3-6* | 3000 FH<br>// 48 M | *300 FH*<br>*146 D* | |
| 29/00/00/000/000/010<br>**Hydraulic system**<br>Salt-laden atmosphere<br>Drain and fill.<br>Servicing of the stainer and the filter.<br>DRN | *AMM 29-00-00, 3-6* | 3000 FH<br>// 24 M | *300 FH*<br>*73 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 29-10 MAIN HYDRAULIC GENERATION

| | | | | |
|---|---|---|---|---|
| 29/10/10/302/000/020<br>**Accumulator - Yaw compensator**<br>Check.<br>DI | *AMM 29-00-00, 3-5* | 150 FH<br>// 6 M | *15 FH*<br>*18 D* | |
| 29/10/10/404/000/000<br>**Single hydraulic generation system - Hose**<br>PRE MOD 074239<br>Replacement.<br>DS | *AMM 29-10-00, 8-1* | 5000 FH<br>// 72 M | *300 FH*<br>*180 D* | |

# 32 - LANDING GEAR

## 32-00 LANDING GEAR

| | | | | |
|---|---|---|---|---|
| 32/00/00/000/000/000<br>**Landing gear shock absorber**<br>Detailed check.<br>DI | *AMM 32-11-00, 6-2* | 144 M | *180 D* | |
| 32/00/00/000/000/010<br>**Landing gear shock absorber**<br>Detailed check.<br>DI\|FT | *AMM 32-11-00, 5-1*<br>*AMM 32-11-00, 6-2* | 5400 FH | *300 FH* | |

## 32-13 SKID LANDING GEAR

| | | | | |
|---|---|---|---|---|
| 32/13/00/601/000/010<br>**Skid landing gear**<br>Detailed check.<br>DI\|FT | *AMM 32-11-00, 6-3* | 5400 FH | *300 FH* | |

| Task Number Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 53 - FUSELAGE

### 53-00 FUSELAGE

| | | | | |
|---|---|---|---|---|
| 53/00/00/000/000/000<br>**Corrosion preventive bead**<br>Tropical and damp atmosphere<br>Check.<br>SVC | *AMM 12-30-00, 3-4* | 150 FH<br>// 6 M | *15 FH*<br>*18 D* | |
| 53/00/00/000/000/010<br>**Corrosion preventive bead**<br>Salt-laden atmosphere<br>Check.<br>After hovering or low-altitude flight, this operation should be carried out during the P check.<br>SVC | *AMM 12-30-00, 3-4* | 150 FH<br>// 6 M | *15 FH*<br>*18 D* | |
| 53/00/00/000/000/020<br>**Protection**<br>Tropical and damp atmosphere<br>SVC | *AMM 12-30-00, 3-4* | 7 D | *0* | |
| 53/00/00/000/000/030<br>**Protection**<br>Salt-laden atmosphere<br>After hovering or low-altitude flight, this operation should be carried out during the P check.<br>SVC | *AMM 12-30-00, 3-4* | 7 D | *0* | |
| 53/00/00/000/000/040<br>**Structure**<br>Salt-laden atmosphere<br>Washing.<br>CLN | *AMM 12-20-00, 3-1* | 7 D | *0* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 53/00/00/000/000/050<br>**Structure - Doors, fairings, panels**<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Sand-laden and/or dust-laden atmosphere<br>Cleaning and greasing.<br>CLN\|LUB | *AMM 12-30-00, 3-4* | 7 D | *0* | |
| 53/00/00/000/000/080<br>**Structure**<br>Detailed check.<br>DI | *AMM 53-00-00, 6-6*<br>*AMM 53-31-00, 6-10* | 144 M | *180 D* | |

## 53-10 PRIMARY STRUCTURE

| | | | | |
|---|---|---|---|---|
| 53/10/00/000/000/030<br>**Tail boom-to-fuselage junction**<br>Check.<br>TCK | *AMM 53-31-00, 6-1* | 2500 FH<br>// 72 M | *250 FH*<br>*180 D* | |
| 53/10/00/000/000/100<br>**Transmission deck**<br>[PRE MOD 073362 // PRE MOD 073342] & PRE AMM 53-10-00, 8-14<br>Check.<br>CLN\|GVI | *AMM 53-10-00, 6-1* | 100 FH | *10 FH* | |

# 55 - STABILIZER

## 55-20 VERTICAL FINS ASSY

| | | | | |
|---|---|---|---|---|
| 55/20/00/000/000/000<br>**Upper and lower fin**<br>PRE MOD 073012<br>Check.<br>GVI\|TCK | *AMM 55-20-00, 6-2* | 100 FH | *0* | |

| Task Number Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 55/20/00/000/000/070<br>**Fin support**<br>Check.<br>DI | *AMM 55-20-00, 6-6* | 144 M | *180 D* | |

## 60 - GENERAL - MECHANICS SYSTEMS

### 60-00 GENERAL - MECHANICS SYSTEMS

| | | | | |
|---|---|---|---|---|
| 60/00/00/000/000/120<br>**MRH - Main Rotor Mast - TRH - Tail rotor drive shaft - Engine/MGB coupling**<br>Operation to be carried out after having logged 144 M (margin 180 D) after initial setting to service.<br>DI | *AMM 05-60-00, 6-1* | 72 M | *180 D* | |
| 60/00/00/000/000/140<br>**MGB assembly - TGB assembly**<br>Check.<br>Operation to be carried out after having logged 144 M (margin 180 D) after initial setting to service or since the last Overhaul.<br>DI | *AMM 05-60-00, 6-1* | 72 M | *180 D* | |

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

| | | | | |
|---|---|---|---|---|
| 62/10/00/302/000/000<br>**Main rotor blade**<br>Tropical and damp atmosphere<br>Cleaning the blades.<br>CLN | *AMM 62-11-00, 3-1* | 30 FH | *3 FH* | |
| 62/10/00/302/000/010<br>**Main rotor blade**<br>Salt-laden atmosphere<br>Cleaning the blades.<br>After hovering or low-altitude flight, this operation should be carried out during the P check.<br>CLN | *AMM 62-11-00, 3-1* | 30 FH | *3 FH* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 62/10/00/401/000/000<br>**Blade pin**<br>Greasing.<br>LUB | *AMM 62-11-00, 3-3* | 600 FH<br>//<br>6 M | *60 FH*<br>*18 D* | |
| 62/10/00/401/000/010<br>**Blade pin**<br>Tropical and damp atmosphere<br>Greasing.<br>LUB | *AMM 62-11-00, 3-3* | 150 FH<br>//<br>3 M | *15 FH*<br>*9 D* | |
| 62/10/00/401/000/020<br>**Blade pin**<br>Salt-laden atmosphere<br>Greasing.<br>After hovering or low-altitude flight, this operation should be carried out during the P check.<br>LUB | *AMM 62-11-00, 3-3* | 150 FH<br>//<br>3 M | *15 FH*<br>*9 D* | |

## 62-20 MAIN ROTOR HEAD

| | | | | |
|---|---|---|---|---|
| 62/20/00/604/000/000<br>**Vibration damper, spring type**<br>Check.<br>DI | *AMM 62-21-00, 6-11* | 3000 FH<br>//<br>72 M | *300 FH*<br>*180 D* | |

## 62-30 MAIN ROTOR MAST

| | | | | |
|---|---|---|---|---|
| 62/30/00/000/000/040<br>**Chips detector**<br>Check.<br>GVI | *AMM 60-00-00, 6-2* | 100 FH | *10 FH* | |

| Task Number<br>Description/<br>Remarks | Documentation | | Interval | *Margin* | Initial |
|---|---|---|---|---|---|
| 62/30/00/000/000/050<br>**Rod end-fitting**<br>350A37-1508-00<br>350A37-1508-01<br>350A37-1508-02<br>350A37-1508-03<br>350A37-1508-04<br>350A37-1508-05<br>Measure the play at bearings.<br>DI | *AMM 62-33-00, 6-1*<br>(-)<br>(-)<br>(-)<br>(-)<br>(-)<br>(-) | | 100 FH | *10 FH* | |
| 62/30/00/000/000/085<br>**Main Rotor Mast – Detailled inspection with removal**<br>350A37-1076-XX<br>Detailed check.<br>DI | *AMM 62-31-00, 6-5*<br>(-) | | 72 M | *180 D* | |
| 62/30/00/000/000/086<br>**Main Rotor Mast – Detailled inspection with removal**<br>350A37-1290-XX<br>Detailed check.<br>DI | *AMM 62-31-00, 6-5*<br>*AMM 62-31-00, 6-13*<br>(-) | //<br> | 5400 FH<br>72 M | *300 FH*<br>*180 D* | |
| 62/30/00/000/000/087<br>**Main rotor mast - Upper housing**<br>Detailed check.<br>DI | *AMM 62-31-00, 6-14* | //<br> | 5400 FH<br>72 M | *300 FH*<br>*180 D* | |
| 62/30/00/000/000/210<br>**Swashplate**<br>Visual check of the guide and swivel bearing.<br>Detailed check of the swashplate.<br>VC\|DI | *AMM 62-32-00, 6-1*<br>*AMM 62-32-00, 6-2*<br>*AMM 62-32-00, 6-3* | | 300 FH | *30 FH* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 63 - ROTOR DRIVE (S)

### 63-20 MAIN GEARBOX

| | | | | |
|---|---|---|---|---|
| 63/20/00/000/000/010<br>**Chip detector**<br>Check.<br>GVI | *AMM 60-00-00, 6-2* | | 100 FH | *10 FH* | |

### 63-30 MGB MOUNT AND ATTACHMENT

| | | | | |
|---|---|---|---|---|
| 63/30/00/000/000/060<br>**MGB suspension cross bar**<br>Check with removal.<br>DI | *AMM 63-31-00, 6-1*<br>*AMM 63-31-00, 6-3* | <br>// | 3000 FH<br>72 M | *300 FH*<br>*180 D* | |

### 63-40 INDICATING SYSTEM

| | | | | |
|---|---|---|---|---|
| 63/40/00/000/000/000<br>**Oil temperature warning system**<br>Check.<br>DRN\|DI\|FT | *AMM 63-42-00, 5-1*<br>*AMM 63-42-00, 5-2* | <br>// | 2400 FH<br>72 M | *240 FH*<br>*180 D* | |

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | | | | |
|---|---|---|---|---|
| 64/10/00/000/000/230<br>**Tail rotor blade**<br>Tropical and damp atmosphere<br>Salt-laden atmosphere<br>Cleaning.<br>CLN | *AMM 64-10-00, 3-1* | | 30 FH | *3 FH* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 65 - TAIL ROTOR DRIVE

### 65-20 TAIL GEARBOX

| | | | | |
|---|---|---|---|---|
| 65/20/00/000/000/000<br>**Chips detector**<br>Check.<br>GVI | *AMM 60-00-00, 6-2* | 100 FH | *10 FH* | |
| 65/20/00/000/000/142<br>**Casing**<br>350A33-1090-02<br>Visual check.<br>GVI | *AMM 65-21-00, 6-13*<br>(-) | 1200 FH<br>// 24 M | *120 FH*<br>*73 D* | |
| 65/20/00/601/000/000<br>**Hinge bearing**<br>Check.<br>GVI | *AMM 65-21-00, 6-10* | 1200 FH<br>// 24 M | *120 FH*<br>*73 D* | |
| 65/20/00/601/000/020<br>**Pitch control lever**<br>350A33-1524-00<br>350A33-1526-00<br>350A33-1535-00<br>Check.<br>DI | *AMM 65-21-00, 6-27*<br>(-)<br>(-)<br>(-) | 1200 FH<br>// 24 M | *120 FH*<br>*73 D* | |

## 67 - ROTOR FLIGHT CONTROLS

### 67-00 ROTORS FLIGHT CONTROLS

| | | | | |
|---|---|---|---|---|
| 67/00/00/000/000/070<br>**Rotors flight control**<br>Detailed check of flight controls.<br>DI | *AMM 67-00-00, 6-2* | 144 M | *180 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 67-30 SERVOCONTROL

| | | | | |
|---|---|---|---|---|
| 67/30/00/406/000/000<br>**Tail servocontrol - Hose**<br>PRE MOD 074239<br>Replacement.<br>DS | *AMM 67-33-00, 8-1* | 5000 FH<br>// 72 M | *300 FH*<br>*180 D* | |

# 80 - ENGINE STARTING

## 80-00 STARTING

| | | | | |
|---|---|---|---|---|
| 80/00/00/402/000/080<br>**Starter generator**<br>150SG122Q<br>200SGL130Q<br>SKURKA.<br>Checking generator, brushes, dampening system and splines.<br>DI\|TCK | *AMM 80-00-01, 6-1*<br>*AMM 80-00-01, 6-2*<br>*AMM 80-00-01, 6-4*<br>*AMM 80-00-01, 6-5*<br>(704A46101020)<br>(704A46101023) | 300 FH | *30 FH* | |

| | | | | |
|---|---|---|---|---|
| 80/00/02/000/000/220<br>**Starter generator**<br>515-030<br>524-031<br>THALES.<br>Check of radial play.<br>DI | *AMM 80-00-02, 6-4*<br>(704A46101018)<br>(704A46101011) | 300 FH | *30 FH* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-26-00

| D.U. | TITLE |
|---|---|
| ATA 28 | FUEL SYSTEM |
| ATA 53 | FUSELAGE |
| ATA 55 | STABILIZER |
| ATA 62 | ROTOR (S) |
| ATA 63 | ROTOR DRIVE (S) |
| ATA 64 | TAIL ROTOR |
| ATA 65 | TAIL ROTOR DRIVE |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 80 | ENGINE STARTING |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 28 - FUEL SYSTEM

### 28-00 FUEL SYSTEM

28/00/00/000/000/003

**Fuel tank**

| | | | | |
|---|---|---|---|---|
| *AMM 28-11-01, 5-1* | PO | 2 FH | *8 FH* | |

Energy absorption fuel tank.
Each time after the component is installed.
Adjustment - Strap tension.

RTQ

28/00/00/502/000/020

**Fuel tank**

| | | | | |
|---|---|---|---|---|
| *AMM 28-11-00, 5-1* | PO | 2 FH | *8 FH* | |

Each time after the component is installed.
Adjustment - Strap tension.

RTQ

28/00/00/504/000/000

**Cradle fuel tank**

| | | | | |
|---|---|---|---|---|
| *AMM 28-11-00, 6-3* | PO | 30 FH | *5 FH* | |

POST MOD 074705

Each time after the component is installed.
Tightening torque check.

TCK

## 53 - FUSELAGE

### 53-10 PRIMARY STRUCTURE

53/10/00/000/000/020

**Tail boom-to-fuselage junction**

| | | | | |
|---|---|---|---|---|
| *AMM 53-31-00, 6-1* | PO | 30 FH | *5 FH* | |
| | & | 600 FH | *10 FH* | |

Each time after the component is installed.
Check.

TCK

53/10/00/000/000/065

**Cabin anti-vibrator mount**

| | | | | |
|---|---|---|---|---|
| *AMM 53-32-00, 6-1* | PO | 2 FH | *8 FH* | |

Each time after the component is installed.
Readjustment of the tightening torque load on the attachment bolts blade/mount.

RTQ

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 55 - STABILIZER

### 55-20 VERTICAL FINS ASSY

55/20/00/000/000/020

**Upper and lower fin**

| | | | |
|---|---|---|---|
| *AMM 55-20-00, 6-4* | PO | 2 FH | *8 FH* |
| *AMM 55-20-00, 6-5* | & | 10 FH | *10 FH* |

Each time after the component is installed.
Readjustement of torque value of the screws attaching the fin spars to the frame and of the screws attaching the fins to the tail boom.

RTQ

## 62 - ROTOR (S)

### 62-10 MAIN ROTOR BLADE

62/10/00/000/000/000

**Skin**

| | | | |
|---|---|---|---|
| *AMM 62-11-00, 6-3* | PO | 30 FH | *3 FH* |

After the introduction to service of a new, overhauled or repaired component,
Check the skin in the area between 900 mm and the blade tip.

GVI

62/10/20/601/000/060

**Main rotor blade**

| | | | |
|---|---|---|---|
| *AMM 62-11-00, 6-1* | PO | 30 FH | *3 FH* |
| | & | 150 FH | *15 FH* |
| | & | 300 FH | *15 FH* |
| | & | 450 FH | *15 FH* |

After the introduction to service of a new, overhauled or repaired component,
Check.

DI

| Task Number Description/ Remarks | Documentation | Interval | | *Margin* | Initial |
|---|---|---|---|---|---|

## 62-20 MAIN ROTOR HEAD

62/20/00/000/000/060

**MRH**

| | | | | |
|---|---|---|---|---|
| | *AMM 62-21-00, 6-19*<br>*AMM 62-21-00, 6-20*<br>*AMM 62-33-00, 6-6* | PO | 2 FH | *8 FH* |
| 355A31-0001-03 | (-) | | | |
| 355A31-0001-04 | (-) | | | |
| 355A31-0001-06 | (-) | | | |
| 355A31-0001-07 | (-) | | | |
| 355A31-0001-08 | (-) | | | |
| 355A31-0001-09 | (-) | | | |
| 355A31-0002-00 | (-) | | | |
| 355A31-0002-01 | (-) | | | |
| 355A31-0002-02 | (-) | | | |

Each time after the component is installed.
Tightening torque check: mast/hub coupling, spherical thrust bearing/sleeves, frequency adapters/sleeve, pitch change rod attachment bolts.

TCK

## 62-30 MAIN ROTOR MAST

62/30/00/000/000/025

**Main rotor mast**

| | | | | |
|---|---|---|---|---|
| | *AMM 62-31-00, 6-8*<br>*AMM 62-31-00, 6-9*<br>*AMM 62-31-00, 6-10*<br>*AMM 62-31-00, 6-11* | PO | 2 FH | *8 FH* |

Each time after the component is installed.
Tightening torque check:
- upper casing/flared housing attachment bolts (POST MOD 076120),
- flared housing/MGB main casing attachment bolts,
- swashplate guide-to-upper casing attachment bolts,
- scissors drive coupling.

TCK

62/30/00/000/000/026

**Main rotor mast**

| | | | | |
|---|---|---|---|---|
| | *AMM 62-33-00, 6-7* | PO | 2 FH | *8 FH* |

Each time after the equipment is installed.
Readjustment of the tightening torque:
- of the scissors hinge attachments (link between rotating scissors / scissors drive - link between non-rotating scissors / swashplate guide - connection between scissors links),
- of the delta-shaped ball joint attachments with the swashplates.

RTQ

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 63 - ROTOR DRIVE (S)

### 63-20 MAIN GEARBOX

63/20/00/000/000/000

**MGB - Magnetic plug with electric detection system**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-2* | PO | 10 FH | *2 FH* |
| | & | 20 FH | *3 FH* |
| | & | 30 FH | *5 FH* |

After the introduction to service of a new, overhauled or repaired component,
After installation of a component removed from the same helicopter,
Check to be performed during the P check nearest the due time in question.

GVI

63/20/00/000/000/020

**Mineral/Synthetic oil**

| | | | |
|---|---|---|---|
| *AMM 12-10-00, 3-1* | PO | 30 FH | *5 FH* |

After the introduction to service of a new, overhauled or repaired component,
Oil change.
Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard.

DRN

63/20/00/000/000/050

**Spectrometric Oil Analysis Program (SOAP)**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-1* | PO | 1 FH | *2 FH* |

After the introduction to service of a new, overhauled or repaired component,
First sampling on completion of the first ground run.
Oil monitoring using SOAP is optional.

SDI

63/20/00/000/000/055

**Spectrometric Oil Analysis Program (SOAP)**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-1* | PO | 10 FH | *2 FH* |
| | & | 25 FH | *3 FH* |
| | & | 50 FH | *5 FH* |

After the introduction to service of a new, overhauled or repaired component,
The sample must be taken during the inspection nearest to each due time.
Oil monitoring using SOAP is optional.

SDI

63/20/00/000/000/070

**MGB - Magnetic plug with non-electric detection system**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-2* | PO | 30 FH | *5 FH* |

After the introduction to service of a new, overhauled or repaired component,
Check after installation.

GVI

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/000

**Suspension bar**

*AMM 63-32-00, 6-5* PO 2 FH *8 FH*

Each time after the component is installed.
Tightening torque check.

TCK

# 64 - TAIL ROTOR

## 64-10 TAIL ROTOR BLADE

64/10/00/000/000/010

**Tail rotor blade**

*AMM 64-10-00, 6-1* PO 150 FH *15 FH*

After the introduction to service of a new, overhauled or repaired component.
Check.

DI

64/10/00/000/000/180

**Tracking fingers**

*AMM 64-10-00, 8-3* PO 1 FH *2 FH*

After the introduction to service of a new, overhauled or repaired component,
After installation of a component originating from another helicopter,
Mandatory check after first flight following installation.
Visual check the safetying of the tracking finger lock plate.

GVI

64/10/00/000/000/185

**Tracking fingers**

*AMM 64-10-00, 8-3* PO 10 FH *2 FH*

After the introduction to service of a new, overhauled or repaired component,
After installation of a component originating from another helicopter,
Visual check the safetying of the tracking finger lock plate.

GVI

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 65 - TAIL ROTOR DRIVE

### 65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/030

**Tail rotor drive shaft**

| | | | |
|---|---|---|---|
| *AMM 65-11-00, 5-1* | PO | 150 FH | *15 FH* |

Each time after the component is installed.
Balance check after each removal/installation the shaft.

FT|GR

65/10/00/000/000/170

**Forward shaft**

| | | | |
|---|---|---|---|
| *AMM 65-11-00, 4-2* | PO | 2 FH | *8 FH* |

PRE MOD 079052

Each time after the component is installed.
Play check between the flange and the fairing.

GVI

### 65-20 TAIL GEARBOX

65/20/00/000/000/010

**TGB - Magnetic plug with electric detection system**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-2* | PO | 10 FH | *2 FH* |
| | & | 20 FH | *3 FH* |
| | & | 30 FH | *5 FH* |

After the introduction to service of a new, overhauled or repaired component,
Check to be performed during the P check nearest the due time in question.

GVI

65/20/00/000/000/040

**Spectrometric Oil Analysis Program (SOAP)**

| | | | |
|---|---|---|---|
| *AMM 60-00-00, 6-1* | PO | 1 FH | *2 FH* |

After the introduction to service of a new, overhauled or repaired component,
First sampling on completion of the first ground run.
Oil monitoring using SOAP is optional.

SDI

| Task Number<br>Description/<br>Remarks | Documentation | Interval | | Margin | Initial |
|---|---|---|---|---|---|
| 65/20/00/000/000/045<br>**Spectrometric Oil Analysis Program (SOAP)** | *AMM 60-00-00, 6-1* | PO<br>&<br>& | 10 FH<br>25 FH<br>50 FH | *2 FH*<br>*3 FH*<br>*5 FH* | |
| After the introduction to service of a new, overhauled or repaired component,<br>The sample must be taken during the inspection nearest to each due time.<br>Oil monitoring using SOAP is optional.<br>SDI | | | | | |
| 65/20/00/000/000/060<br>**TGB** | *AMM 65-21-00, 6-23* | PO | 150 FH | *15 FH* | |
| After the introduction to service of a new, overhauled or repaired component.<br>Oil change.<br>Replacement of the running-in oil by the operating oil.<br>DRN | | | | | |
| 65/20/00/000/000/070<br>**TGB** | *AMM 65-21-00, 6-22* | PO | 2 FH | *8 FH* | |
| After the introduction to service of a new, overhauled or repaired component.<br>Visual check.<br>GVI | | | | | |
| 65/20/00/000/000/080<br>**Attachment bolt** | *AMM 65-21-00, 6-18* | PO | 2 FH | *8 FH* | |
| Each time after the component is installed.<br>Tightening torque check.<br>TCK | | | | | |
| 65/20/00/000/000/550<br>**TGB - Pitch rod** | *AMM 65-21-00, 6-25* | PO | 2 FH | *8 FH* | |
| Each time after the component is installed.<br>Readjustment of the tightening torque check.<br>-pitch change elastomer rod/pitch lever attachment bolts.<br>-Anti-rotation bush attachment bolts.<br>RTQ | | | | | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

67/30/00/402/000/050

**Main servocontrol**

| | | | | |
|---|---|---|---|---|
| | *AMM 67-32-00, 6-1* | PO | 15 FH | *3 FH* |
| AC64182 | (704A44831062) | | | |

After the introduction to service of a new, overhauled or repaired component,
Loads check.

FT

67/30/00/402/000/080

**Main servocontrol**

| | | | | |
|---|---|---|---|---|
| | *AMM 67-31-00, 6-4*<br>*AMM 67-32-00, 6-4* | PO | 2 FH | *8 FH* |

Each time after the component is installed.
Readjustment of the tightening torque of attaching bolts.

RTQ

67/30/00/403/000/040

**Tail servocontrol**

| | | | | |
|---|---|---|---|---|
| | *AMM 67-33-00, 6-2* | PO | 15 FH | *3 FH* |
| AC66436 | (704A44831063) | | | |

After the introduction to service of a new, overhauled or repaired component,
Loads check.

FT

## 80 - ENGINE STARTING

### 80-00 STARTING

80/00/00/402/000/115

**Starter generator**

| | | | | |
|---|---|---|---|---|
| | *AMM 80-00-01, 6-1*<br>*AMM 80-00-01, 6-3*<br>*AMM 80-00-01, 6-5* | PO | 300 FH | *30 FH* |
| 150SG122Q-4 | (704A46101027) | | | |
| 200SGL130Q-4 | (704A46101026) | | | |

SKURKA.
After the introduction to service of a new or overhauled component.
Checking generator and brushes.

DI

| Task Number Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-30-00

# BFF
# TA
# ALF

| D.U. | TITLE |
|---|---|
| ATA 05 | TIME LIMITS/MAINTENANCE CHECKS |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 05 - TIME LIMITS/MAINTENANCE CHECKS

## 05-21 DAILY CHECK

| | | |
|---|---|---|
| 05/21/00/604/000/000<br>**Check before the first flight of the day (BFF) - Optional equipments**<br>*AMM 05-40-00, 6-9* *0*<br>Note: Operations can be carried out by a crew member.<br>VC | | |
| 05/21/00/606/000/000<br>**Turnaround check (TA) - Optional equipments**<br>*AMM 05-40-00, 6-5* *0*<br>Note: Operations can be carried out by a crew member.<br>VC | | |
| 05/21/00/607/000/000<br>**Check after the last flight of the day (ALF) - Optional equipments**<br>*AMM 05-40-00, 6-10* *0*<br>Note: Operations can be carried out by a crew member.<br>VC | | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-30-02

# 10 FH // 7 D

| D.U. | TITLE |
|---|---|
| ATA 05 | TIME LIMITS/MAINTENANCE CHECKS |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 05 - TIME LIMITS/MAINTENANCE CHECKS

## 05-21 DAILY CHECK

| | |
|---|---|
| 05/21/00/000/000/010<br>**P-check - Optional equipments**<br>*AMM 05-40-00, 6-8* *0* *0*<br>Note: Operations can be carried out by a crew member.<br>GVI | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-31-00

# 150 FH // 12 M

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 53 | FUSELAGE |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

| | | | |
|---|---|---|---|
| 21/51/20/000/000/025<br>**Freon air conditioning system**<br>Visual inspection of the system.<br>GVI | *AMM 21-51-10, 6-1* | *15 FH*<br>*36 D* | |

## 53 - FUSELAGE

### 53-10 PRIMARY STRUCTURE

| | | | |
|---|---|---|---|
| 53/10/00/000/000/200<br>**Tail rotor drive shaft aerodynamic cowling**<br>POST OP 4860<br>Check.<br>DI | *AMM 53-31-00, 6-9* | *15 FH*<br>*36 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-31-01

# 150 FH

| D.U. | TITLE |
|---|---|
| ATA 47 | WEAPONS ELECTRONICS |
| ATA 71 | POWER PLANT |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 47 - WEAPONS ELECTRONICS

### 47-50 FLIR INSTALLATION

| | |
|---|---|
| 47/50/10/000/000/030<br>**Flir - Turret - QDM**<br>*AMM 47-50-10, 2-1* *15 FH*<br>STAR SAFIRE II<br>Cleaning<br>CLN | |

## 71 - POWER PLANT

### 71-61 OPT - SAND-FILTER

| | |
|---|---|
| 71/61/01/601/000/010<br>**Sand filter**<br>*AMM 71-61-10, 5-1* *15 FH*<br>Checking the sand filter installation indication on the VEMD.<br>FT | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-31-02

# 12 M

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 34 | NAVIGATION |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

## 25-62 OPT - EMERGENCY FLOATATION GEAR

| | | | |
|---|---|---|---|
| 25/62/00/000/000/010<br>**Emergency floatation gear**<br>*CMM 25-69-08*<br>*CHECK § 4*<br>Maintenance.<br>Interval starting from the date of manufacture.<br>GVI\|FT | | *36 D* | |
| 25/62/00/000/000/070<br>**Emergency floatation gear frangible discs**<br>*AMM 25-67-00, 5-2*<br>Test.<br>Check to be performed on and from initial installation.<br>DI | | *36 D* | |
| 25/62/00/000/000/080<br>**Cylinder**<br>*CMM 25-69-11*<br>*CHECK § 2*<br>200740-0 (-)<br>200740-1 (-)<br>200740-2 (704A42693012)<br>Cylinders weighing operation or pressure check.<br>Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0 and 218570-0.<br>Interval between 2 weighing operations or pressure check.<br>Check to be performed on and from initial installation.<br>DI\|WGH | | *36 D* | |
| 25/62/00/000/000/100<br>**Emergency floatation gear**<br>*CMM 25-69-40*<br>*CHECK § 4*<br>Maintenance.<br>Interval starting from the date of manufacture.<br>GVI\|FT | | *36 D* | |

| Task Number<br>Description/ Remarks | Documentation | Margin | Initial |
|---|---|---|---|
| 25/62/00/000/000/180<br>**Front and rear attachment brackets**<br>158172 (-)<br>158173 (-)<br>158288 (-)<br>158289 (-)<br>System check.<br>DI | *AMM 25-67-00, 6-2* | *36 D* | |

## 25-69 LIFE-RAFT

| | | | |
|---|---|---|---|
| 25/69/10/401/000/010<br>**Life-raft**<br>210155-X (-)<br>Check, life raft tightness testing, cylinder weighing.<br>DI\|FT\|WGH | *CMM 25-64-01* | *36 D* | |

## 25-81 OPT - SWING AND ACCESSORY

| | | | |
|---|---|---|---|
| 25/81/12/000/000/030<br>**Onboard load release unit**<br>Clean and check.<br>CLN\|GVI | *AMM 25-92-00, 6-2* | *36 D* | |

# 34 - NAVIGATION

## 34-25 GYRO HORIZON

| | | | |
|---|---|---|---|
| 34/25/00/000/000/010<br>**Stand-by horizon - Stand-by battery**<br>EE0033 (704A46140000)<br>EE0033A (704A46140000)<br>Check and charge the battery.<br>FT | *AMM 24-33-00, 5-2* | *36 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-32-00

# 600 FH // 24 M

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 22 | AUTO FLIGHT |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 30 | ICE AND RAIN PROTECTION |
| ATA 53 | FUSELAGE |
| ATA 64 | TAIL ROTOR |
| ATA 67 | ROTOR FLIGHT CONTROLS |
| ATA 71 | POWER PLANT |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

| | | | |
|---|---|---|---|
| 21/51/20/000/000/030<br>**Freon air conditioning system**<br>Detailed inspection of the installation.<br>DI\|FT\|CLN | *AMM 21-51-10, 6-2* | *60 FH*<br>*73 D* | |

## 22 - AUTO FLIGHT

### 22-10 OPT - TRIM ACTUATOR DETECTION

| | | | |
|---|---|---|---|
| 22/10/00/000/000/020<br>**Autopilot system**<br>System check.<br>DI | *AMM 22-00-02, 6-1* | *60 FH*<br>*73 D* | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-61 OPT - WIRE STRIKE PROTECTION SYSTEM

| | | | |
|---|---|---|---|
| 25/61/00/000/000/000<br>**Wire strike protection system**<br>Check.<br>GVI | *AMM 25-61-00, 6-1* | *60 FH*<br>*73 D* | |

### 25-62 OPT - EMERGENCY FLOATATION GEAR

| | | | |
|---|---|---|---|
| 25/62/00/000/000/060<br>**Emergency floatation gear**<br>Check and functional test.<br>GVI\|FT | *AMM 25-67-00, 5-1*<br>*AMM 25-67-00, 6-1* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 25-63 HOISTS ELECTRICAL

| | | | |
|---|---|---|---|
| 25/63/00/601/000/000<br>**Electric hoist**<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH/ERC BREEZE.<br>System check.<br>DI | *AMM 25-63-10, 6-1*<br>*AMM 25-63-11, 6-1* | *60 FH*<br>*73 D* | |

## 25-80 OPT - SLING AND ACCESSORY

| | | | |
|---|---|---|---|
| 25/80/00/000/000/009<br>**Load release unit hook**<br>17149-1 (704A41811012)<br>Dynamometer calibration.<br>RIG | *AMM 25-92-00, 5-3* | *60 FH*<br>*73 D* | |

## 25-81 OPT - SWING AND ACCESSORY

| | | | |
|---|---|---|---|
| 25/81/00/000/000/065<br>**Load release unit hook**<br>14027-4 (704A41811013)<br>14027-7 (704A41811030)<br>S1609-6 (704A41811027)<br>Dynamometer calibration.<br>RIG | *AMM 25-91-00, 5-3* | *60 FH*<br>*73 D* | |
| 25/81/11/000/000/020<br>**Load release unit hook**<br>AS21-5-7 (704A41811029)<br>Dynamometer calibration.<br>RIG | *AMM 25-91-01, 5-3* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|
| 25/81/12/000/000/050<br>**Onboard load release unit**<br>Dynamometer calibration.<br>RIG | *AMM 25-91-01, 5-3* | *60 FH*<br>*73 D* | |

## 25-96 ELECTRICAL REAR VIEW MIRROR

| | | | |
|---|---|---|---|
| 25/96/00/000/000/010<br>**Electrical rear view mirror**<br>Check.<br>DI | *AMM 25-96-00, 6-1* | *60 FH*<br>*73 D* | |

# 30 - ICE AND RAIN PROTECTION

## 30-42 WINDSCREEN WIPER

| | | | |
|---|---|---|---|
| 30/42/00/601/000/000<br>**Windshield wiper arm - Attachment**<br>Check for absence of axial and vertical play.<br>Lubrication of the windshield wiper arm drive spindle.<br>GVI\|LUB | *AMM 30-42-00, 6-1* | *60 FH*<br>*73 D* | |

# 53 - FUSELAGE

## 53-10 PRIMARY STRUCTURE

| | | | |
|---|---|---|---|
| 53/10/00/000/000/075<br>**Box**<br>POST MOD 073325<br>Check.<br>DI | *AMM 53-32-00, 6-2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 64 - TAIL ROTOR

### 64-10 TAIL ROTOR BLADE

| | | | |
|---|---|---|---|
| 64/10/00/000/000/270<br>**Protector**<br>POST MOD OP0478<br>Tightening torque check.<br>TCK | *AMM 32-70-00, 6-1* | *60 FH*<br>*73 D* | |

## 67 - ROTOR FLIGHT CONTROLS

### 67-30 SERVOCONTROL

| | | | |
|---|---|---|---|
| 67/30/00/402/000/015<br>**Main servocontrol**<br>POST OP3082 or OP3346: Optional installation of double hydraulic power system.<br>Check for correct operation of the load detector of the RH servocontrol.<br>FT | *AMM 67-31-00, 5-1* | *60 FH*<br>*73 D* | |
| 67/30/00/501/000/000<br>**Load compensator system**<br>Test.<br>POST OP3082 or OP3346: Installation of a twin hydraulic power system.<br>FT | *AMM 67-34-00, 5-1*<br>*AMM 67-34-00, 6-1* | *60 FH*<br>*73 D* | |
| 67/30/00/602/000/000<br>**Servocontrol - Twin hydraulic system**<br>Play check.<br>TCK | *AMM 67-31-00, 6-2* | *60 FH*<br>*73 D* | |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 71 - POWER PLANT

### 71-61 OPT - SAND-FILTER

| | | | |
|---|---|---|---|
| 71/61/01/601/000/000<br>**Sand filter**<br>System check.<br>GVI\|FT | *AMM 71-61-10, 6-1* | *60 FH*<br>*73 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-32-01

# 600 FH

| D.U. | TITLE |
|---|---|
| ATA 33 | LIGHTING SYSTEM |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 33 - LIGHTING SYSTEM

### 33-45 OPT - SEARCHLIGHT

| | | | |
|---|---|---|---|
| 33/45/03/000/000/040<br>**Searchlight**<br>SPECTROLAB SX16.<br>Equipment test.<br>FT | *AMM 33-45-03, 5-1* | *60 FH* | |
| 33/45/03/000/000/050<br>**Searchlight - Fan**<br>SPECTROLAB SX16.<br>Check.<br>DI | *CMM 33-45-96* | *60 FH* | |
| 33/45/03/000/000/060<br>**Searchlight - Junction box**<br>SPECTROLAB SX16.<br>Check.<br>DI | *CMM 33-45-96* | *60 FH* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-32-02

# 24 M

| D.U. | TITLE |
|---|---|
| ATA 35 | OXYGEN |

| Task Number<br>Description/ Remarks | Documentation | *Margin* | Initial |
|---|---|---|---|

## 35 - OXYGEN

### 35-30 OXYGEN

| | | | |
|---|---|---|---|
| 35/30/00/000/000/025<br>**Oxygen mask**<br>Check.<br>GVI | *AMM 35-00-00, 6-1* | *73 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-35-00

| D.U. | TITLE |
|---|---|
| ATA 21 | AIR CONDITIONING |
| ATA 25 | EQUIPMENTS AND FURNISHINGS |
| ATA 28 | FUEL SYSTEM |
| ATA 33 | LIGHTING SYSTEM |
| ATA 35 | OXYGEN |
| ATA 47 | WEAPONS ELECTRONICS |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 21 - AIR CONDITIONING

### 21-51 AIR CONDITIONING

| | | | | |
|---|---|---|---|---|
| 21/51/20/000/000/040<br>**Freon air conditioning system**<br>*AMM 21-51-10, 5-1*<br>Check for correct operation if not used during 1 month.<br>FT | | | 1 M<br>3 D | |

## 25 - EQUIPMENTS AND FURNISHINGS

### 25-62 OPT - EMERGENCY FLOATATION GEAR

| | | | | |
|---|---|---|---|---|
| 25/62/10/401/000/070<br>**Cylinder**<br>200740-0<br>200740-1<br>Proof test.<br>Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0, 218570-0.<br>Interval starting from the date of manufacture then from the date of the last proof test.<br>1 OPC = 1 utilization (ditching or untimely percussion of the inflation cylinder).<br>To be returned to the manufacturer or to an approved workshop.<br>NPT | (-)<br>(-) | | 36 M<br>// 1 OPC | 0<br>0 | |
| 25/62/10/401/000/110<br>**Cylinder**<br>200740-2<br>Proof test.<br>Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0, 218570-0.<br>Interval starting from the date of manufacture then from the date of the last proof test.<br>1 OPC = 1 utilization (ditching or untimely percussion of the inflation cylinder).<br>To be returned to the manufacturer or to an approved workshop.<br>NPT | (704A42693012) | | 60 M<br>// 1 OPC | 0<br>0 | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 25-63 HOISTS ELECTRICAL

| | | | | |
|---|---|---|---|---|
| 25/63/00/000/000/010<br>**Electric hoist 136 kg - Electric unit**<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Resistance check.<br>DI | *CMM 25-64-97* | 100 HC | *10 HC* | |
| 25/63/00/000/000/015<br>**Electric hoist 136 kg - Squib**<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Check.<br>DI | *AMM 25-63-10, 6-2* | 6 M | *18 D* | |
| 25/63/00/000/000/020<br>**Electric hoist 136 kg - Guiding fork**<br>709595 (-)<br>709595-100 (-)<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Replacement.<br>DS | *CMM 25-64-97* | 750 HC | *75 HC* | |
| 25/63/00/000/000/024<br>**Electric hoist**<br>LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Check the anti-corrosion protection of the cable.<br>GVI | *CMM 25-64-97* | 6 M | *18 D* | |
| 25/63/00/000/000/025<br>**Electric hoist**<br>ERC BREEZE.<br>Check.<br>DI\|FT | *CMM 25-69-61* | 6 M | *18 D* | |

| Task Number Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 25/63/00/000/000/060<br>**Electric hoist 136 kg** | *CMM 25-64-97* | 6 M<br>// 50 HC | *0*<br>*0* | |
| LUCAS AIR EQUIPEMENT/TRW/GOODRICH.<br>Check:<br>- Operation of the limit switches.<br>- The condition of the cable.<br>- The unwinding and the winding of the cable.<br>- The hook.<br>- Lubrification/Lubrification if necessary.<br>GVI\|FT | | | | |
| 25/63/00/000/000/070<br>**Electric hoist 450 lbs** | *CMM 25-61-00* | 50 HC | *0* | |
| BREEZE.<br>Check that the hook rotates freely, check the condition of the cable, check the operation of the cable extraction mechanism.<br>DI\|FT | | | | |
| 25/63/00/602/000/000<br>**Electric hoist - Pyrotechnic cartridge** | *AMM 25-63-10, 6-2* | 6 M | *0* | |
| ERC BREEZE.<br>Check.<br>DI | | | | |
| 25/63/00/602/000/010<br>**Electric hoist - Cable** | *CMM 25-69-61* | 6 M<br>// 50 HC | *18 D*<br>*5 HC* | |
| ERC BREEZE.<br>Check.<br>DI\|FT | | | | |

## 25-69 LIFE-RAFT

| | | | | |
|---|---|---|---|---|
| 25/69/10/401/000/000<br>**Life-raft** | *CMM 25-69-71* | 6 M | *18 D* | |
| 206994-0 | (-) | | | |
| Check, life raft tightness testing, cylinder weighing.<br>DI\|FT\|WGH | | | | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 25/69/10/401/000/020<br>**Cylinder**<br>Cylinders to be proof tested by the manufacturer or by an approved workshop.<br>Intervals counted from the date of the last proof test.<br>Fitted to the assemblies: MP/N 206994-0, 210155-X.<br>NPT | *AMM 25-69-10, 4-1* | 60 M | *0* | |

## 25-80 OPT - SLING AND ACCESSORY

| | | | | |
|---|---|---|---|---|
| 25/80/00/000/000/007<br>**Load release unit hook**<br>17149-1 (704A41811012)<br>Inspection and test.<br>GVI\|RIG\|FT | *AMM 25-92-00, 6-1* | 24 M<br>// 500 SC | *73 D*<br>*50 SC* | |

## 25-81 OPT - SWING AND ACCESSORY

| | | | | |
|---|---|---|---|---|
| 25/81/00/000/000/060<br>**Control mechanical release**<br>Functional test.<br>FT | *AMM 25-91-01, 5-1* | 7 D | *0* | |
| 25/81/01/000/000/000<br>**Cargo swing frame**<br>Check of cargo swing frame<br>VC | *AMM 25-91-01, 6-2* | 1500 OPC | *150 OPC* | |
| 25/81/11/000/000/005<br>**Frame, 1400 kg cargo swing**<br>PRE MOD 072820<br>Check for elongation of holes.<br>GVI | *AMM 25-91-01, 6-1* | 100 FH | *10 FH* | |

| Task Number Description/ Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 25/81/11/000/000/010<br>**Load release unit hook**<br>*AMM 25-91-01, 6-1*<br>AS21-5-7 (704A41811029)<br>S1609-6 (704A41811027)<br>Check and test.<br>GVI\|RIG\|FT | | 24 M<br>// 500 SC | *73 D*<br>*50 SC* | |
| 25/81/12/000/000/020<br>**Onboard load release unit**<br>*AMM 25-92-00, 6-2*<br>Salt-laden atmosphere<br>Clean and check.<br>CLN\|GVI | | 1 M | *3 D* | |
| 25/81/12/000/000/040<br>**Onboard load release unit**<br>*AMM 25-91-01, 6-1*<br>OPH = Operating hours logged with underslung loads.<br>Check and test.<br>GVI\|RIG\|FT | | 24 M<br>// 350 OPH | *73 D*<br>*35 OPH* | |

## 28 - FUEL SYSTEM

### 28-92 OPT - FERRY FUEL TANK

| | | | | |
|---|---|---|---|---|
| 28/92/00/000/000/000<br>**Ferry fuel tank**<br>*AMM 28-91-00, 4-1*<br>330A87-1310-04 (-)<br>Checking the electrical bonding.<br>DI | | 96 M | *180 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 33 - LIGHTING SYSTEM

### 33-45 OPT - SEARCHLIGHT

| | | | | |
|---|---|---|---|---|
| 33/45/03/000/000/020<br>**Searchlight**<br>SPECTROLAB SX16.<br>Check.<br>CLN\|DI | *AMM 33-45-03, 6-2* | 300 FH | *30 FH* | |
| 33/45/03/000/000/030<br>**Searchlight**<br>SPECTROLAB SX16.<br>Check.<br>GVI | *AMM 33-45-03, 6-1* | 100 FH | *10 FH* | |

## 35 - OXYGEN

### 35-30 OXYGEN

| | | | | |
|---|---|---|---|---|
| 35/30/01/000/000/020<br>**Oxygen cylinder**<br>Installation check.<br>CLN\|DI | *AMM 35-00-00, 6-1* | 1 M | *3 D* | |

## 47 - WEAPONS ELECTRONICS

### 47-50 FLIR INSTALLATION

| | | | | |
|---|---|---|---|---|
| 47/50/10/000/000/000<br>**Flir**<br>Star SAFIRE II.<br>Bleeding and nitrogen filling of the turret.<br>SVC | *AMM 47-50-10, 3-2* | 2 M | *6 D* | |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|
| 47/50/10/000/000/020<br>**Flir**<br>Star SAFIRE II.<br>Turret desiccant cartridge check.<br>VC | *AMM 47-50-10, 3-1* | 1 M | *3 D* | |
| 47/50/10/000/000/040<br>**Flir - Turret - QDM**<br>STAR SAFIRE II.<br>Visual check.<br>GVI | *AMM 47-50-10, 6-1* | 1200 FH<br>// 12 M | *120 FH*<br>*36 D* | |

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**

# 05-36-00

| D.U. | TITLE |
|---|---|
| ATA 25 | EQUIPMENTS AND FURNISHINGS |

| Task Number<br>Description/<br>Remarks | Documentation | Interval | *Margin* | Initial |
|---|---|---|---|---|

## 25 - EQUIPMENTS AND FURNISHINGS

## 25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/00/000/000/030

**Emergency floatation gear**

| | | | | |
|---|---|---|---|---|
| *CMM 25-69-08* | PO | | 60 M | *180 D* |
| *CHECK § 5* | | & | 96 M | *180 D* |

Detailed and proof pressure check.
Interval starting from the date of manufacture.

FT|NPT

25/62/00/000/000/140

**Emergency floatation gear**

| | | | | |
|---|---|---|---|---|
| *CMM 25-69-40* | PO | | 60 M | *180 D* |
| *CHECK § 5* | | & | 96 M | *180 D* |

Detailed and proof pressure check.
Interval starting from the date of manufacture.

DI|FT

| Mechanic | Date | Inspector | Date |
|---|---|---|---|
| Name : | Signature : | Stamp : | Signature : |

**End of the Document Unit**