Environmental Sealing (Self Leveling Green Sealant) – General Data

1. General

WARNING **SEALANTS MAY CONTAIN TOXIC COMPOUNDS. REFER TO MSDS FOR PROPER PERSONAL PROTECTION EQUIPMENT (PPE) TO USE WHEN WORKING WITH MATERIALS. ALWAYS WEAR GLOVES AND EYE PROTECTION AND AVOID SKIN CONTACT. IF SEALANT OR ANY SEALANT COMPOUND CONTACTS SKIN, CLEAN THOROUGHLY.**

Self Leveling Green (SLG) sealant is used for connector accessories (backshells, clamps etc.) requiring moisture sealing and abrasion/corrosion protection, for example, fuel gallery.

Note The SLG sealing methodology can be applied to installed backshell(s) and connector accessories (harness, clamps, shield terminations etc.) all together or to individual components, as required, for environmental sealing.

2. Materials and Equipment

WARNING **USE ONLY FLAME RETARDANT (FR) (FOR EXAMPLE HT3326–5FR–50) ON AIRCRAFT APPLICATIONS DUE TO ITS FLAME RETARDANT CHARACTERISTICS.**

A. Materials

- Sealant (Potting Compound), HT3326–5FR (Flame Retardant)
- Isopropyl Alcohol (IPA) to Federal Specification TT–I–735, Grade A or B
- Sealant Dispenser (e.g. UG981108–01 or equivalent)

3. Surface Preparation

Prior to installation, ensure the components that will come in contact with the SLG sealant are free of dirt, oil, grease and other contamination. Remove residue from previously applied adhesives or sealants. Clean harness and components, as required, with isopropyl alcohol.

If possible, un-mate the connector and orient the connector face in a downward position.

4. Preparation of Potting Compound

Remove the injectable polyurethane sealant from the package. Load the cartridge into the sealant dispenser (PN UG981108–01 or equivalent) and follow the package instructions for priming and dispensing the potting compound/sealant HT3326–5FR.

5. Removal/Installation


A. Installation of SLG Sealant

Note HT3326–5FR sealant must be stored and applied at temperatures >55°F. Shelf life of the sealant in the sealed container is six months or as specified in MSDS. The cure time at ambient temperature of 77°F (25°C) is ≤ 4 hours. Any opened cartridge must be used within 24 hours of opening the original packaging. Dispose unused cartridge/sealant as per manufacturer's instructions.

1) Apply a thin layer of HT3326–5FR–50 SLG sealant onto the threads of the backshell and the threads on the plug and then immediately attach the two parts together.

CAUTION **DO NOT ALLOW THE SLG SEALANT TO CONTACT THE FAYING SURFACES BETWEEN THE PLUG AND THE SHIELD ADAPTER, AS THIS WILL INTERFERE WITH THE ELECTRICAL BONDING.**

2) After attaching the backshell, verify that the shield adapter is properly seated by looking through the inspection holes.

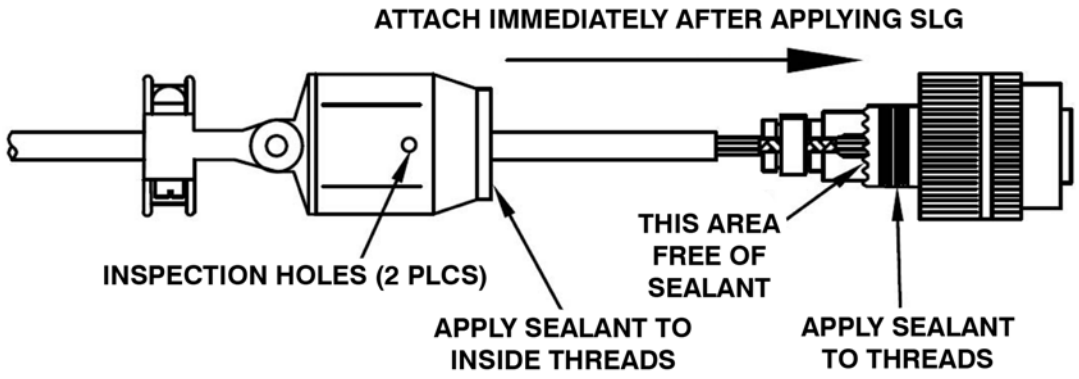


Application Locations of the SLG Selant
Figure 1

3) Position the backshell vertically and inject SLG sealant into the back openings as shown in Figure 2. Fill the cavity so that the sealant completely covers the shield adapter.

4) Unplug the connectors and supply SLG sealant into the inspection holes and along the joint shown in Figure 2.

Note Do not apply SLG sealant overtop the plug, as this will interfere with the plug's rotation.

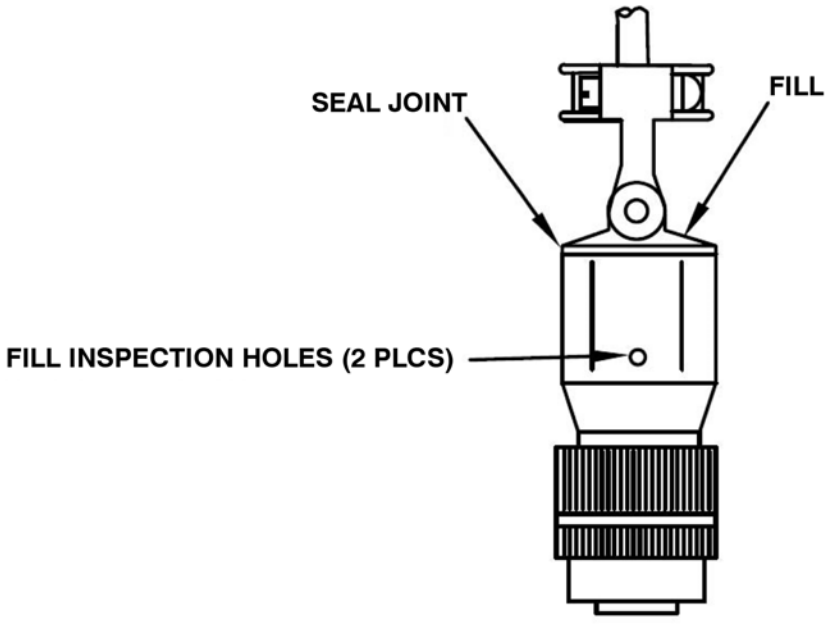

Final Application Locations of the SLG Sealant
Figure 2

5) Dispose of unused cartridge/sealant as per manufacturer's instructions.

B. Removal of SLG Sealant

1) To avoid damaging the wires, remove the polyurethane sealant by pulling with fingers or a blunt instrument.

2) Use isopropyl alcohol to remove any remaining residue.

This Page Intentionally Left Blank