CHAPTER

05

TIME LIMITS/ MAINTENANCE CHECKS

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

Subject/Page	Date	COC
05-EFFECTIVE PAGES		
1 thru 14	Sep 15/2026	
05-CONTENTS		
O 1	Sep 15/2026	
O 2	Sep 15/2026	
O 3	Sep 15/2026	
O 4	Sep 15/2026	
O 5	Sep 15/2026	
6	May 15/2026	
7	May 15/2026	
8	May 15/2025	
9	May 15/2025	
10	May 15/2026	
11	May 15/2026	
12	May 15/2025	
13	May 15/2025	
14	Jan 15/2026	
15	May 15/2025	
16	May 15/2025	
17	Jan 15/2026	
18	Jan 15/2026	
19	May 15/2025	
20	May 15/2025	
21	May 15/2025	
22	May 15/2025	
23	May 15/2025	
24	May 15/2025	
O 25	Sep 15/2026	
26	Sep 15/2025	
27	May 15/2025	
28	May 15/2025	
29	May 15/2025	
30	May 15/2025	
31	May 15/2025	
O 32	Sep 15/2026	
O 33	Sep 15/2026	
34	May 15/2025	
05-CONTENTS (cont)		
O 35	Sep 15/2026	
O 36	Sep 15/2026	
O 37	Sep 15/2026	
38	BLANK	
05-00-00		
101	May 15/2024	
102	BLANK	
05-00-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
05-41-01		
201	May 15/2025	
R 202	Sep 15/2026	
R 203	Sep 15/2026	
R 204	Sep 15/2026	
R 205	Sep 15/2026	
R 206	Sep 15/2026	
O 207	Sep 15/2026	
O 208	Sep 15/2026	
O 209	Sep 15/2026	
O 210	Sep 15/2026	
O 211	Sep 15/2026	
O 212	Sep 15/2026	
O 213	Sep 15/2026	
O 214	Sep 15/2026	
O 215	Sep 15/2026	
O 216	Sep 15/2026	
O 217	Sep 15/2026	
O 218	Sep 15/2026	
O 219	Sep 15/2026	
O 220	Sep 15/2026	
O 221	Sep 15/2026	
O 222	Sep 15/2026	
O 223	Sep 15/2026	
O 224	Sep 15/2026	
05-41-01 (cont)		
O 225	Sep 15/2026	
O 226	Sep 15/2026	
O 227	Sep 15/2026	
O 228	Sep 15/2026	
O 229	Sep 15/2026	
O 230	Sep 15/2026	
O 231	Sep 15/2026	
O 232	Sep 15/2026	
O 233	Sep 15/2026	
O 234	Sep 15/2026	
O 235	Sep 15/2026	
O 236	Sep 15/2026	
O 237	Sep 15/2026	
O 238	Sep 15/2026	
O 239	Sep 15/2026	
O 240	Sep 15/2026	
O 241	Sep 15/2026	
O 242	Sep 15/2026	
R 243	Sep 15/2026	
O 244	Sep 15/2026	
O 245	Sep 15/2026	
O 246	Sep 15/2026	
O 247	Sep 15/2026	
O 248	Sep 15/2026	
O 249	Sep 15/2026	
O 250	Sep 15/2026	
O 251	Sep 15/2026	
O 252	Sep 15/2026	
O 253	Sep 15/2026	
O 254	Sep 15/2026	
O 255	Sep 15/2026	
O 256	Sep 15/2026	
O 257	Sep 15/2026	
O 258	Sep 15/2026	
O 259	Sep 15/2026	
O 260	Sep 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-41-01 (cont)		
O 261	Sep 15/2026	
O 262	Sep 15/2026	
O 263	Sep 15/2026	
O 264	Sep 15/2026	
O 265	Sep 15/2026	
O 266	Sep 15/2026	
O 267	Sep 15/2026	
O 268	Sep 15/2026	
O 269	Sep 15/2026	
O 270	Sep 15/2026	
O 271	Sep 15/2026	
O 272	Sep 15/2026	
O 273	Sep 15/2026	
O 274	Sep 15/2026	
O 275	Sep 15/2026	
O 276	Sep 15/2026	
O 277	Sep 15/2026	
O 278	Sep 15/2026	
O 279	Sep 15/2026	
O 280	Sep 15/2026	
O 281	Sep 15/2026	
O 282	Sep 15/2026	
O 283	Sep 15/2026	
O 284	Sep 15/2026	
O 285	Sep 15/2026	
O 286	Sep 15/2026	
O 287	Sep 15/2026	
O 288	Sep 15/2026	
O 289	Sep 15/2026	
O 290	Sep 15/2026	
O 291	Sep 15/2026	
O 292	Sep 15/2026	
O 293	Sep 15/2026	
O 294	Sep 15/2026	
O 295	Sep 15/2026	
O 296	Sep 15/2026	
05-41-01 (cont)		
O 297	Sep 15/2026	
O 298	Sep 15/2026	
O 298.1	Sep 15/2026	
O 298.2	Sep 15/2026	
O 298.3	Sep 15/2026	
O 298.4	Sep 15/2026	
O 298.5	Sep 15/2026	
O 298.6	Sep 15/2026	
O 298.7	Sep 15/2026	
O 298.8	Sep 15/2026	
O 298.9	Sep 15/2026	
O 298.10	Sep 15/2026	
O 298.11	Sep 15/2026	
O 298.12	Sep 15/2026	
O 298.13	Sep 15/2026	
O 298.14	Sep 15/2026	
O 298.15	Sep 15/2026	
O 298.16	Sep 15/2026	
O 298.17	Sep 15/2026	
O 298.18	Sep 15/2026	
O 298.19	Sep 15/2026	
O 298.20	Sep 15/2026	
O 298.21	Sep 15/2026	
O 298.22	Sep 15/2026	
O 298.23	Sep 15/2026	
O 298.24	Sep 15/2026	
O 298.25	Sep 15/2026	
O 298.26	Sep 15/2026	
O 298.27	Sep 15/2026	
O 298.28	Sep 15/2026	
O 298.29	Sep 15/2026	
O 298.30	Sep 15/2026	
O 298.31	Sep 15/2026	
O 298.32	Sep 15/2026	
O 298.33	Sep 15/2026	
O 298.34	Sep 15/2026	
05-41-01 (cont)		
O 298.35	Sep 15/2026	
O 298.36	Sep 15/2026	
O 298.37	Sep 15/2026	
O 298.38	Sep 15/2026	
O 298.39	Sep 15/2026	
O 298.40	Sep 15/2026	
05-41-02		
201	May 15/2025	
202	May 15/2025	
203	May 15/2025	
204	May 15/2025	
205	Jan 15/2026	
206	Jan 15/2026	
207	Jan 15/2026	
208	Jan 15/2026	
209	May 15/2025	
210	May 15/2026	
211	May 15/2026	
212	May 15/2026	
213	May 15/2026	
214	May 15/2026	
215	May 15/2026	
216	May 15/2026	
217	May 15/2026	
218	May 15/2026	
219	May 15/2026	
220	May 15/2026	
221	May 15/2026	
222	May 15/2026	
223	May 15/2026	
224	May 15/2026	
225	May 15/2026	
226	May 15/2026	
227	May 15/2026	
228	May 15/2026	
229	May 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-41-02 (cont)		
230	May 15/2026	
231	May 15/2026	
232	May 15/2026	
233	May 15/2026	
234	May 15/2026	
235	May 15/2026	
236	May 15/2026	
237	May 15/2026	
238	May 15/2026	
239	May 15/2026	
240	May 15/2026	
241	May 15/2026	
242	May 15/2026	
243	May 15/2026	
244	May 15/2026	
245	May 15/2026	
246	May 15/2026	
247	May 15/2026	
248	May 15/2026	
249	May 15/2026	
250	May 15/2026	
251	May 15/2026	
252	May 15/2026	
253	May 15/2026	
254	BLANK	
05-41-03		
201	May 15/2025	
202	May 15/2024	
203	May 15/2025	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2025	
208	May 15/2024	
209	May 15/2025	
210	May 15/2024	

Subject/Page	Date	COC
05-41-03 (cont)		
211	May 15/2025	
212	May 15/2024	
213	May 15/2025	
214	May 15/2024	
215	May 15/2025	
216	May 15/2024	
217	May 15/2025	
218	May 15/2024	
219	May 15/2025	
220	May 15/2024	
221	May 15/2025	
222	May 15/2024	
223	May 15/2025	
224	Sep 15/2025	
225	May 15/2025	
226	May 15/2024	
227	May 15/2025	
228	May 15/2024	
R 229	Sep 15/2026	
230	May 15/2024	
231	May 15/2024	
R 232	Sep 15/2026	
O 233	Sep 15/2026	
234	May 15/2024	
R 235	Sep 15/2026	
O 236	Sep 15/2026	
237	May 15/2024	
238	May 15/2024	
239	May 15/2025	
240	May 15/2024	
241	May 15/2025	
242	May 15/2025	
243	May 15/2024	
244	May 15/2024	
245	May 15/2025	
246	May 15/2024	

Subject/Page	Date	COC
05-41-03 (cont)		
247	May 15/2025	
248	May 15/2024	
249	May 15/2025	
250	May 15/2024	
R 251	Sep 15/2026	
252	May 15/2024	
253	May 15/2025	
254	May 15/2024	
255	May 15/2025	
256	May 15/2025	
257	May 15/2025	
258	May 15/2024	
R 259	Sep 15/2026	
260	May 15/2024	
R 261	Sep 15/2026	
262	May 15/2025	
263	May 15/2024	
264	May 15/2024	
265	May 15/2025	
266	May 15/2024	
267	May 15/2025	
268	May 15/2024	
269	May 15/2025	
270	May 15/2024	
271	May 15/2025	
272	May 15/2024	
273	May 15/2025	
274	May 15/2024	
R 275	Sep 15/2026	
R 276	Sep 15/2026	
277	May 15/2025	
278	May 15/2024	
R 279	Sep 15/2026	
280	May 15/2024	
R 281	Sep 15/2026	
282	May 15/2025	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-41-03 (cont)		
283	May 15/2024	
284	May 15/2024	
285	May 15/2025	
286	May 15/2024	
287	May 15/2025	
288	May 15/2024	
289	May 15/2025	
290	May 15/2024	
291	May 15/2026	
292	May 15/2024	
05-41-04		
201	May 15/2025	
202	May 15/2024	
203	Jan 15/2026	
204	Jan 15/2026	
205	May 15/2025	
206	May 15/2025	
207	May 15/2024	
208	May 15/2025	
209	May 15/2024	
210	May 15/2024	
211	May 15/2026	
212	May 15/2025	
213	May 15/2026	
214	May 15/2025	
215	May 15/2024	
216	Jan 15/2026	
217	Jan 15/2026	
218	May 15/2025	
219	May 15/2025	
220	May 15/2024	
221	May 15/2025	
222	May 15/2024	
223	May 15/2024	
224	May 15/2026	
225	May 15/2025	

Subject/Page	Date	COC
05-41-04 (cont)		
226	May 15/2026	
227	May 15/2025	
228	May 15/2024	
229	May 15/2025	
230	May 15/2024	
231	Jan 15/2026	
232	Jan 15/2026	
233	May 15/2025	
234	May 15/2025	
235	May 15/2024	
236	May 15/2024	
237	May 15/2024	
238	May 15/2025	
239	May 15/2024	
240	May 15/2025	
241	May 15/2024	
242	Jan 15/2026	
243	Jan 15/2026	
244	May 15/2025	
245	May 15/2025	
246	May 15/2024	
247	May 15/2024	
248	May 15/2024	
05-41-05		
201	May 15/2025	
202	May 15/2024	
203	May 15/2024	
204	May 15/2025	
205	May 15/2024	
206	Jan 15/2026	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2025	
211	May 15/2024	
212	May 15/2025	

Subject/Page	Date	COC
05-41-05 (cont)		
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2025	
218	May 15/2024	
219	May 15/2025	
220	May 15/2024	
221	May 15/2025	
222	May 15/2024	
R 223	Sep 15/2026	
R 224	Sep 15/2026	
R 225	Sep 15/2026	
226	May 15/2024	
227	May 15/2024	
228	May 15/2025	
229	May 15/2024	
230	Jan 15/2026	
231	Sep 15/2024	
232	May 15/2025	
233	May 15/2024	
234	May 15/2025	
235	May 15/2025	
236	May 15/2024	
237	May 15/2025	
238	May 15/2024	
239	May 15/2025	
240	May 15/2024	
241	May 15/2025	
242	May 15/2024	
243	May 15/2025	
244	May 15/2024	
245	May 15/2025	
246	May 15/2024	
247	Sep 15/2025	
248	Sep 15/2025	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-41-05 (cont)		
249	May 15/2024	
250	May 15/2025	
251	May 15/2024	
252	Sep 15/2025	
253	May 15/2024	
254	May 15/2025	
255	May 15/2024	
256	Sep 15/2025	
257	May 15/2024	
258	May 15/2025	
259	May 15/2024	
260	Sep 15/2025	
261	May 15/2024	
262	May 15/2025	
263	May 15/2024	
264	Jan 15/2026	
265	Jan 15/2026	
266	Jan 15/2026	
267	Jan 15/2026	
268	Jan 15/2026	
269	Jan 15/2026	
270	Jan 15/2026	
271	Jan 15/2026	
272	Jan 15/2026	
273	Jan 15/2026	
274	Jan 15/2026	
275	Jan 15/2026	
276	Jan 15/2026	
277	Jan 15/2026	
278	Jan 15/2026	
279	Jan 15/2026	
280	Jan 15/2026	
281	Jan 15/2026	
282	Jan 15/2026	
283	Jan 15/2026	
284	Jan 15/2026	
05-41-05 (cont)		
285	Jan 15/2026	
286	Jan 15/2026	
287	Jan 15/2026	
288	Jan 15/2026	
289	Jan 15/2026	
290	Jan 15/2026	
05-41-06		
201	May 15/2025	
202	May 15/2024	
203	May 15/2024	
204	May 15/2025	
205	May 15/2024	
206	Jan 15/2026	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2025	
211	May 15/2024	
212	May 15/2025	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2025	
218	May 15/2024	
219	May 15/2025	
220	May 15/2024	
221	May 15/2025	
222	May 15/2024	
R 223	Sep 15/2026	
R 224	Sep 15/2026	
O 225	Sep 15/2026	
226	May 15/2024	
227	May 15/2024	
228	May 15/2025	
229	May 15/2024	
05-41-06 (cont)		
230	Jan 15/2026	
231	Sep 15/2024	
232	May 15/2025	
233	May 15/2024	
234	May 15/2025	
235	May 15/2025	
236	May 15/2024	
237	May 15/2025	
238	May 15/2024	
239	May 15/2025	
240	May 15/2024	
241	May 15/2025	
242	May 15/2024	
243	May 15/2025	
244	May 15/2024	
245	May 15/2025	
246	May 15/2024	
247	Sep 15/2025	
248	Sep 15/2025	
249	May 15/2024	
250	May 15/2025	
251	May 15/2024	
252	Sep 15/2025	
253	May 15/2024	
254	May 15/2025	
255	May 15/2024	
256	Sep 15/2025	
257	May 15/2024	
258	May 15/2025	
259	May 15/2024	
260	Sep 15/2025	
261	May 15/2024	
262	May 15/2025	
263	May 15/2024	
264	Jan 15/2026	
265	Jan 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-41-06 (cont)		
266	Jan 15/2026	
267	Jan 15/2026	
268	Jan 15/2026	
269	Jan 15/2026	
270	Jan 15/2026	
271	Jan 15/2026	
272	Jan 15/2026	
273	Jan 15/2026	
274	Jan 15/2026	
275	Jan 15/2026	
276	Jan 15/2026	
277	Jan 15/2026	
278	Jan 15/2026	
279	Jan 15/2026	
280	Jan 15/2026	
281	Jan 15/2026	
282	Jan 15/2026	
283	Jan 15/2026	
284	Jan 15/2026	
285	Jan 15/2026	
286	Jan 15/2026	
287	Jan 15/2026	
288	Jan 15/2026	
289	Jan 15/2026	
290	Jan 15/2026	
05-41-07		
201	May 15/2025	
202	May 15/2024	
203	May 15/2025	
204	May 15/2024	
205	May 15/2024	
206	May 15/2025	
207	May 15/2024	
208	May 15/2025	
209	May 15/2024	
210	May 15/2024	

Subject/Page	Date	COC
05-41-07 (cont)		
211	May 15/2025	
212	May 15/2024	
213	May 15/2025	
214	May 15/2024	
215	May 15/2024	
216	BLANK	
05-41-08		
201	Jan 15/2026	
202	May 15/2025	
203	May 15/2025	
204	May 15/2024	
205	May 15/2025	
206	Jan 15/2025	
207	Jan 15/2026	
208	May 15/2025	
209	May 15/2024	
210	May 15/2025	
211	Jan 15/2025	
212	Jan 15/2026	
213	May 15/2025	
214	May 15/2024	
215	May 15/2024	
216	May 15/2025	
217	May 15/2024	
218	May 15/2025	
219	May 15/2024	
220	May 15/2025	
221	May 15/2024	
222	May 15/2025	
223	May 15/2024	
224	May 15/2025	
225	May 15/2024	
226	May 15/2025	
227	May 15/2024	
228	May 15/2024	
229	May 15/2025	

Subject/Page	Date	COC
05-41-08 (cont)		
230	May 15/2025	
231	May 15/2024	
232	May 15/2025	
233	May 15/2024	
234	May 15/2024	
235	May 15/2025	
236	May 15/2025	
237	May 15/2024	
238	May 15/2025	
239	May 15/2024	
240	May 15/2025	
241	May 15/2024	
242	May 15/2025	
243	May 15/2024	
244	May 15/2025	
245	May 15/2024	
246	May 15/2025	
247	May 15/2024	
248	May 15/2024	
249	May 15/2025	
250	May 15/2025	
251	May 15/2024	
252	BLANK	
05-42-01		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-42-01 (cont)		
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	May 15/2024	
219	May 15/2024	
220	May 15/2024	
221	May 15/2024	
222	May 15/2024	
223	May 15/2024	
224	May 15/2024	
225	May 15/2024	
226	May 15/2024	
227	May 15/2024	
228	May 15/2024	
229	May 15/2024	
230	May 15/2024	
231	May 15/2024	
232	May 15/2024	
233	May 15/2024	
234	May 15/2024	
235	May 15/2024	
236	May 15/2024	
237	May 15/2024	
238	May 15/2024	
239	May 15/2024	
240	May 15/2024	
241	May 15/2024	
242	May 15/2024	
243	May 15/2024	
244	May 15/2024	
245	May 15/2024	
246	May 15/2024	
247	May 15/2024	
248	May 15/2024	
05-42-01 (cont)		
249	May 15/2024	
250	May 15/2024	
251	May 15/2024	
252	May 15/2024	
253	May 15/2024	
254	May 15/2024	
255	May 15/2024	
256	May 15/2024	
257	May 15/2024	
258	May 15/2024	
259	May 15/2024	
260	Sep 15/2025	
05-42-02		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	Sep 15/2024	
211	Sep 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
05-42-03		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
05-42-03 (cont)		
208	BLANK	
05-42-04		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	Sep 15/2025	
208	Sep 15/2025	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	Sep 15/2025	
217	Sep 15/2025	
218	May 15/2024	
219	May 15/2024	
220	May 15/2024	
221	May 15/2024	
222	May 15/2024	
223	May 15/2024	
224	May 15/2024	
05-42-05		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
R 206	Sep 15/2026	
R 207	Sep 15/2026	
R 208	Sep 15/2026	
209	May 15/2024	
210	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-42-05 (cont)		
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	Sep 15/2025	
219	Sep 15/2025	
220	Sep 15/2025	
221	May 15/2024	
222	BLANK	
05-42-06		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
R 206	Sep 15/2026	
R 207	Sep 15/2026	
R 208	Sep 15/2026	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	Sep 15/2025	
219	Sep 15/2025	
220	Sep 15/2025	
221	May 15/2024	
222	BLANK	
05-51-01		
201	Jan 15/2025	

Subject/Page	Date	COC
05-51-01 (cont)		
202	Sep 15/2024	
R 203	Sep 15/2026	
O 204	Sep 15/2026	
205	Jan 15/2025	
206	Sep 15/2024	
207	Sep 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	Sep 15/2025	
216	Sep 15/2025	
217	Sep 15/2025	
218	Sep 15/2025	
219	Sep 15/2025	
220	Sep 15/2025	
221	Sep 15/2025	
222	Sep 15/2025	
223	Sep 15/2025	
224	Sep 15/2025	
225	Sep 15/2025	
226	Sep 15/2025	
227	Sep 15/2025	
228	Sep 15/2025	
229	Sep 15/2025	
230	Sep 15/2025	
05-51-04		
201	May 15/2024	
202	May 15/2025	
203	May 15/2025	
204	May 15/2025	
205	May 15/2025	
206	May 15/2025	

Subject/Page	Date	COC
05-51-04 (cont)		
207	May 15/2025	
208	May 15/2025	
209	May 15/2025	
210	May 15/2025	
05-51-07		
201	May 15/2025	
R 202	Sep 15/2026	
O 203	Sep 15/2026	
R 204	Sep 15/2026	
O 205	Sep 15/2026	
O 206	Sep 15/2026	
O 207	Sep 15/2026	
O 208	Sep 15/2026	
O 209	Sep 15/2026	
O 210	Sep 15/2026	
O 211	Sep 15/2026	
O 212	Sep 15/2026	
A 213	Sep 15/2026	
A 214	BLANK	
05-51-08		
201	Jan 15/2026	
R 202	Sep 15/2026	
R 203	Sep 15/2026	
204	Jan 15/2026	
205	Jan 15/2026	
206	Jan 15/2026	
207	Jan 15/2026	
208	Jan 15/2026	
209	May 15/2026	
210	May 15/2026	
211	May 15/2026	
212	May 15/2026	
213	Jan 15/2026	
214	Jan 15/2026	
215	Jan 15/2026	
216	Jan 15/2026	
217	Jan 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-51-08 (cont)		
218	Jan 15/2026	
219	Jan 15/2026	
220	Jan 15/2026	
05-51-09		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	BLANK	
05-51-10		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
05-51-13		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
05-51-14		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	Sep 15/2024	
206	Sep 15/2024	
207	May 15/2024	
208	BLANK	
05-51-15		
201	Sep 15/2024	
202	May 15/2024	
05-51-16		
201	Sep 15/2024	
202	Sep 15/2024	
203	Sep 15/2024	
204	BLANK	

Subject/Page	Date	COC
05-51-17		
201	Sep 15/2024	
202	Sep 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	BLANK	
05-51-18		
201	May 15/2024	
R 202	Sep 15/2026	
R 203	Sep 15/2026	
204	Jan 15/2025	
R 205	Sep 15/2026	
206	Jan 15/2025	
207	Jan 15/2025	
208	BLANK	
05-51-19		
201	Sep 15/2025	
202	Sep 15/2025	
203	Sep 15/2025	
R 204	Sep 15/2026	
205	May 15/2026	
206	May 15/2026	
207	May 15/2026	
R 208	Sep 15/2026	
R 209	Sep 15/2026	
O 210	Sep 15/2026	
O 211	Sep 15/2026	
O 212	Sep 15/2026	
O 213	Sep 15/2026	
O 214	Sep 15/2026	
215	Sep 15/2025	
216	Sep 15/2025	
217	Sep 15/2025	
218	Sep 15/2025	
219	Sep 15/2025	
220	Sep 15/2025	
R 221	Sep 15/2026	

Subject/Page	Date	COC
05-51-19 (cont)		
222	BLANK	
05-51-21		
R 201	Sep 15/2026	
O 202	Sep 15/2026	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	BLANK	
05-51-22		
201	Jan 15/2025	
202	May 15/2024	
203	May 15/2024	
204	BLANK	
05-51-24		
201	May 15/2024	
202	BLANK	
05-51-27		
201	May 15/2024	
202	Sep 15/2025	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	Sep 15/2025	
207	Sep 15/2025	
208	May 15/2024	
05-51-28		
201	May 15/2024	
202	May 15/2024	
05-51-29		
201	May 15/2024	
202	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-51-29 (cont)		
203	May 15/2024	
204	May 15/2024	
05-51-31		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2026	
205	May 15/2026	
206	May 15/2026	
207	May 15/2026	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2026	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	May 15/2024	
05-51-32		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2025	
205	May 15/2024	
206	BLANK	
05-51-34		
R 201	Sep 15/2026	
202	BLANK	
05-51-35		
201	Jan 15/2026	
R 202	Sep 15/2026	
O 203	Sep 15/2026	
204	May 15/2024	
05-51-36		
201	May 15/2024	
R 202	Sep 15/2026	
R 203	Sep 15/2026	
R 204	Sep 15/2026	
05-51-37		
201	Jan 15/2025	
R 202	Sep 15/2026	
O 203	Sep 15/2026	
O 204	Sep 15/2026	
205	May 15/2024	
206	BLANK	
05-51-42		
201	May 15/2024	
202	May 15/2024	
05-51-44		
201	May 15/2024	
202	May 15/2024	
05-51-47		
201	May 15/2024	
202	May 15/2024	
05-51-48		
201	Sep 15/2024	
202	Sep 15/2024	
203	May 15/2024	
204	BLANK	
05-51-51		
201	May 15/2025	
202	May 15/2025	
203	May 15/2025	
204	May 15/2025	
205	May 15/2025	
206	May 15/2025	
207	May 15/2025	
208	BLANK	
05-51-52		
201	May 15/2024	
202	BLANK	
05-51-53		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
05-51-54		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	BLANK	
05-51-56		
201	May 15/2024	
202	BLANK	
05-51-57		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	BLANK	
05-51-59		
201	May 15/2024	
202	May 15/2024	
05-51-67		
201	May 15/2024	
R 202	Sep 15/2026	
203	Jan 15/2025	
204	Jan 15/2025	
R 205	Sep 15/2026	
O 206	Sep 15/2026	
05-51-68		
201	May 15/2025	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-51-68 (cont)		
210	May 15/2024	
211	May 15/2024	
212	BLANK	
05-51-80		
201	May 15/2024	
202	May 15/2024	
05-51-81		
201	May 15/2024	
202	May 15/2024	
05-51-91		
R 201	Sep 15/2026	
O 202	Sep 15/2026	
R 203	Sep 15/2026	
R 204	Sep 15/2026	
O 205	Sep 15/2026	
R 206	Sep 15/2026	
207	May 15/2024	
208	May 15/2024	
05-51-92		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
05-51-94		
201	May 15/2025	
202	May 15/2025	
05-51-95		
201	May 15/2024	
202	Sep 15/2024	
203	Sep 15/2024	
204	Sep 15/2024	
205	Sep 15/2024	
206	BLANK	
05-51-96		
601	Sep 15/2024	
602	May 15/2026	
603	May 15/2025	

Subject/Page	Date	COC
05-51-96 (cont)		
604	May 15/2025	
605	May 15/2025	
606	May 15/2025	
607	May 15/2024	
608	May 15/2024	
609	Sep 15/2025	
610	BLANK	
05-51-97		
201	Sep 15/2025	
202	May 15/2025	
05-51-98		
201	May 15/2024	
202	Jan 15/2026	
203	Jan 15/2026	
204	Jan 15/2026	
205	Jan 15/2026	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	May 15/2024	
05-51-99		
201	May 15/2024	
202	BLANK	
05-55-21		
R 601	Sep 15/2026	
R 602	Sep 15/2026	
O 603	Sep 15/2026	
604	May 15/2024	

Subject/Page	Date	COC
05-55-21 (cont)		
R 605	Sep 15/2026	
O 606	Sep 15/2026	
O 607	Sep 15/2026	
R 608	Sep 15/2026	
O 609	Sep 15/2026	
O 610	Sep 15/2026	
O 611	Sep 15/2026	
O 612	BLANK	
05-55-22		
R 601	Sep 15/2026	
R 602	Sep 15/2026	
603	May 15/2024	
R 604	Sep 15/2026	
605	May 15/2024	
R 606	Sep 15/2026	
O 607	Sep 15/2026	
O 608	Sep 15/2026	
R 609	Sep 15/2026	
O 610	Sep 15/2026	
O 611	Sep 15/2026	
O 612	Sep 15/2026	
D 613	Sep 15/2026	
D 614	BLANK	
05-55-25		
R 601	Sep 15/2026	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
R 607	Sep 15/2026	
O 608	Sep 15/2026	
O 609	Sep 15/2026	
610	May 15/2024	
611	May 15/2024	
612	May 15/2024	
R 613	Sep 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-55-25 (cont)		
O 614	Sep 15/2026	
O 615	Sep 15/2026	
616	May 15/2024	
R 617	Sep 15/2026	
618	May 15/2026	
619	May 15/2024	
620	Jan 15/2026	
621	Jan 15/2026	
622	May 15/2026	
R 623	Sep 15/2026	
O 624	Sep 15/2026	
625	May 15/2024	
626	May 15/2024	
627	May 15/2024	
R 628	Sep 15/2026	
O 629	Sep 15/2026	
630	May 15/2024	
631	May 15/2024	
632	May 15/2024	
R 633	Sep 15/2026	
O 634	Sep 15/2026	
635	May 15/2024	
636	May 15/2024	
637	May 15/2024	
R 638	Sep 15/2026	
O 639	Sep 15/2026	
640	May 15/2026	
641	May 15/2026	
642	May 15/2024	
643	May 15/2024	
R 644	Sep 15/2026	
O 645	Sep 15/2026	
O 646	Sep 15/2026	
647	May 15/2026	
648	May 15/2024	
649	May 15/2024	
05-55-25 (cont)		
R 650	Sep 15/2026	
651	Sep 15/2025	
652	May 15/2024	
653	Sep 15/2025	
654	May 15/2024	
R 655	Sep 15/2026	
O 656	Sep 15/2026	
O 657	Sep 15/2026	
658	May 15/2024	
659	May 15/2024	
660	May 15/2024	
661	May 15/2024	
R 662	Sep 15/2026	
663	May 15/2024	
664	May 15/2024	
665	May 15/2024	
666	May 15/2024	
R 667	Sep 15/2026	
O 668	Sep 15/2026	
O 669	Sep 15/2026	
O 670	Sep 15/2026	
671	May 15/2024	
672	May 15/2024	
R 673	Sep 15/2026	
674	May 15/2024	
675	May 15/2024	
676	May 15/2024	
677	May 15/2024	
678	BLANK	
05-55-26		
R 601	Sep 15/2026	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
R 606	Sep 15/2026	
05-55-26 (cont)		
O 607	Sep 15/2026	
O 608	Sep 15/2026	
609	May 15/2024	
R 610	Sep 15/2026	
611	Sep 15/2024	
612	Jan 15/2026	
613	Jan 15/2026	
614	Jan 15/2026	
R 615	Sep 15/2026	
O 616	Sep 15/2026	
617	May 15/2024	
618	May 15/2024	
619	May 15/2024	
R 620	Sep 15/2026	
621	May 15/2024	
622	May 15/2024	
623	May 15/2024	
624	May 15/2024	
R 625	Sep 15/2026	
O 626	Sep 15/2026	
627	May 15/2025	
628	May 15/2025	
629	May 15/2024	
R 630	Sep 15/2026	
O 631	Sep 15/2026	
632	May 15/2024	
633	May 15/2024	
634	May 15/2024	
R 635	Sep 15/2026	
O 636	Sep 15/2026	
637	May 15/2024	
638	May 15/2026	
639	May 15/2024	
R 640	Sep 15/2026	
O 641	Sep 15/2026	
642	May 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-55-26 (cont)		
643	May 15/2026	
644	May 15/2024	
645	May 15/2024	
R 646	Sep 15/2026	
647	Sep 15/2025	
648	May 15/2024	
649	Sep 15/2025	
650	May 15/2024	
R 651	Sep 15/2026	
652	May 15/2024	
653	May 15/2024	
654	May 15/2024	
655	May 15/2024	
R 656	Sep 15/2026	
O 657	Sep 15/2026	
O 658	Sep 15/2026	
O 659	Sep 15/2026	
O 660	Sep 15/2026	
661	May 15/2024	
662	May 15/2024	
R 663	Sep 15/2026	
664	May 15/2024	
665	May 15/2024	
666	May 15/2024	
667	May 15/2024	
R 668	Sep 15/2026	
O 669	Sep 15/2026	
670	May 15/2024	
671	May 15/2024	
672	May 15/2024	
673	May 15/2024	
R 674	Sep 15/2026	
675	May 15/2024	
676	May 15/2024	
677	May 15/2024	
678	May 15/2024	

Subject/Page	Date	COC
05-55-26 (cont)		
R 679	Sep 15/2026	
680	May 15/2024	
681	May 15/2024	
682	May 15/2024	
683	May 15/2024	
684	BLANK	
05-55-46		
R 601	Sep 15/2026	
O 602	Sep 15/2026	
603	May 15/2024	
604	May 15/2026	
605	May 15/2024	
R 606	Sep 15/2026	
O 607	Sep 15/2026	
O 608	Sep 15/2026	
O 609	Sep 15/2026	
O 610	Sep 15/2026	
O 611	Sep 15/2026	
O 612	Sep 15/2026	
R 613	Sep 15/2026	
R 614	Sep 15/2026	
R 615	Sep 15/2026	
R 616	Sep 15/2026	
R 617	Sep 15/2026	
R 618	Sep 15/2026	
R 619	Sep 15/2026	
R 620	Sep 15/2026	
R 621	Sep 15/2026	
R 622	Sep 15/2026	
R 623	Sep 15/2026	
R 624	Sep 15/2026	
O 625	Sep 15/2026	
R 626	Sep 15/2026	
R 627	Sep 15/2026	
R 628	Sep 15/2026	
R 629	Sep 15/2026	

Subject/Page	Date	COC
05-55-46 (cont)		
R 630	Sep 15/2026	
R 631	Sep 15/2026	
R 632	Sep 15/2026	
R 633	Sep 15/2026	
R 634	Sep 15/2026	
A 635	Sep 15/2026	
A 636	Sep 15/2026	
05-55-47		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
607	May 15/2024	
608	BLANK	
05-55-54		
601	May 15/2024	
602	May 15/2024	
603	Sep 15/2024	
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
607	May 15/2024	
608	May 15/2024	
609	May 15/2024	
610	May 15/2026	
611	May 15/2024	
612	May 15/2024	
613	May 15/2024	
614	May 15/2024	
615	May 15/2024	
616	May 15/2024	
617	May 15/2024	
618	May 15/2024	
619	May 15/2024	
620	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
05-55-54 (cont)		
621	May 15/2024	
622	BLANK	
05-56-01		
201	May 15/2026	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	BLANK	
05-56-02		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	BLANK	
05-56-03		
201	Jan 15/2025	
202	Jan 15/2025	
203	Jan 15/2025	
204	Jan 15/2025	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	BLANK	
05-56-04		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
05-56-04 (cont)		
206	BLANK	
05-56-05		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	

Subject/Page	Date	COC

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

05-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
GENERAL TASK CARD INFORMATION	05-00-00		101	PTF ALL
General Task Instructions TASK 05-00-00-800-801			101	PTF ALL
TIME LIMITS/MAINTENANCE CHECKS - MAINTENANCE PRACTICES	05-00-00		201	PTF ALL
Airworthiness Limitation Precautions TASK 05-00-00-910-801			201	PTF ALL
Enhanced Zonal Inspection Program (EZAP) Precautions TASK 05-00-00-910-802			202	PTF ALL
Scheduled Maintenance Task (SMT) - Repair Time Limits TASK 05-00-00-750-801			203	PTF ALL
ZONE 100 - LOWER FUSELAGE - MAINTENANCE PRACTICES	05-41-01		201	PTF ALL
EXTERNAL - ZONAL (GVI): Lower Fuselage TASK 05-41-01-210-801			201	PTF ALL
EXTERNAL - ZONAL (GVI): Radome TASK 05-41-01-210-833			207	PTF ALL
INTERNAL - ZONAL (GVI): Radome TASK 05-41-01-210-802			209	PTF ALL
EXTERNAL - ZONAL (GVI): Area Forward of Nose Wheel Well TASK 05-41-01-210-834			212	PTF ALL
INTERNAL - ZONAL (GVI): Area Forward of Nose Wheel Well TASK 05-41-01-210-803			214	PTF ALL
EXTERNAL - ZONAL (GVI): Area Above and Outboard of Nose Wheel Well TASK 05-41-01-210-835			217	PTF ALL
INTERNAL - ZONAL (GVI): Area Above and Outboard of Nose Wheel Well TASK 05-41-01-210-804			219	PTF ALL
INTERNAL - ZONAL (GVI): Nose Landing Gear Wheel Well TASK 05-41-01-210-831			224	PTF ALL

05-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Electrical and Electronics Compartment TASK 05-41-01-210-805			226	PTF ALL
EXTERNAL - ZONAL (GVI): Electrical and Electronics Compartment TASK 05-41-01-210-836			230	PTF ALL
INTERNAL - ZONAL (GVI): Electrical and Electronics Compartment Access Door TASK 05-41-01-210-806			232	PTF ALL
INTERNAL - ZONAL (GVI): Forward Cargo Compartment TASK 05-41-01-210-807			234	PTF ALL
INTERNAL - ZONAL (GVI): Forward Cargo Compartment - Ceiling Liners Removed TASK 05-41-01-210-808			237	PTF ALL
INTERNAL - ZONAL (GVI): Forward Cargo Compartment - Sidewall Liners and Insulation Removed TASK 05-41-01-210-809			240	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Cargo Compartment TASK 05-41-01-210-837			243	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Cargo Door Surround Structure Fittings and Stops TASK 05-41-01-210-810			245	PTF ALL
EXTERNAL - ZONAL (GVI): Area Below Forward Cargo Compartment TASK 05-41-01-210-838			247	PTF ALL
INTERNAL - ZONAL (GVI): Area Below Forward Cargo Compartment TASK 05-41-01-210-811			249	PTF ALL
EXTERNAL - ZONAL (GVI): Air Conditioning Distribution Bay TASK 05-41-01-210-839			252	PTF ALL
INTERNAL - ZONAL (GVI): Air Conditioning Distribution Bay TASK 05-41-01-210-812			254	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Keel Beam - Section 43 TASK 05-41-01-210-840			257	PTF ALL
EXTERNAL - ZONAL (GVI): Keel Beam - Section 43 TASK 05-41-01-210-841			259	PTF ALL
INTERNAL - ZONAL (GVI): Area Above Center Section Wing Box TASK 05-41-01-210-813			261	PTF ALL
INTERNAL - ZONAL (GVI): Main Landing Gear Wheel Well TASK 05-41-01-210-832			261	PTF ALL
INTERNAL - ZONAL (GVI): Pressure Deck Above Main Landing Gear Wheel Well TASK 05-41-01-210-814			264	PTF ALL
EXTERNAL - ZONAL (GVI): Keel Beam - STA 540 to STA 727 TASK 05-41-01-210-842			266	PTF ALL
INTERNAL - ZONAL (GVI): Keel Beam (Part) STA 540 to STA 727 TASK 05-41-01-210-815			268	PTF ALL
INTERNAL - ZONAL (GVI): Center Section Wing Box TASK 05-41-01-210-816			272	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Cargo Compartment TASK 05-41-01-210-843			275	PTF ALL
INTERNAL - ZONAL (GVI): Aft Cargo Compartment TASK 05-41-01-210-817			277	PTF ALL
INTERNAL - ZONAL (GVI): Aft Cargo Compartment - Upper Angled Sidewall and Ceiling Panels Removed TASK 05-41-01-210-818			280	PTF ALL
INTERNAL - ZONAL (GVI): Aft Cargo Compartment - Sidewall Liners Removed TASK 05-41-01-210-819			283	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Aft Cargo Door Surround Structure Fittings and Stops TASK 05-41-01-210-820			286	PTF ALL
INTERNAL - ZONAL (GVI): Aft Cargo Compartment Vacuum Waste Compartment TASK 05-41-01-210-821			288	PTF ALL
EXTERNAL - ZONAL (GVI): Area Below Aft Cargo Compartment TASK 05-41-01-210-844			291	PTF ALL
INTERNAL - ZONAL (GVI): Area Below Aft Cargo Compartment TASK 05-41-01-210-822			293	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Cargo Compartment Equipment Bay TASK 05-41-01-210-845			296	PTF ALL
INTERNAL - ZONAL (GVI): Aft Cargo Compartment Equipment Bay TASK 05-41-01-210-823			298	PTF ALL
EXTERNAL - ZONAL (GVI): Keel Beam STA 727 to STA 743.95 TASK 05-41-01-210-846			298.2	PTF ALL
INTERNAL - ZONAL (GVI): Keel Beam STA 727 to STA 743.95 TASK 05-41-01-210-847			298.4	PTF ALL
EXTERNAL - ZONAL (GVI): Wing to Body Fairing TASK 05-41-01-210-824			298.6	PTF ALL
EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Forward of Wing Box TASK 05-41-01-210-848			298.9	PTF ALL
INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Forward of Wing Box TASK 05-41-01-210-825			298.11	PTF ALL
EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Under Wing Box TASK 05-41-01-210-849			298.15	PTF ALL
INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Under Wing Box TASK 05-41-01-210-826			298.17	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Wheel Well TASK 05-41-01-210-850			298.21	PTF ALL
EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Aft of Wheel Well TASK 05-41-01-210-851			298.23	PTF ALL
INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Aft of Wheel Well TASK 05-41-01-210-827			298.25	PTF ALL
INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Aft of Wheel Well TASK 05-41-01-210-828			298.29	PTF ALL
EXTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Right Side TASK 05-41-01-210-852			298.31	PTF ALL
INTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Right Side TASK 05-41-01-210-829			298.33	PTF ALL
INTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Left Side TASK 05-41-01-210-830			298.35	PTF ALL
EXTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Left Side TASK 05-41-01-210-853			298.37	PTF ALL
INTERNAL - DETAILED: Center Wing Rear Spar Vapor Web TASK 05-41-01-211-801			298.39	PTF ALL
ZONE 200 - UPPER FUSELAGE - MAINTENANCE PRACTICES	05-41-02		201	PTF ALL
EXTERNAL - ZONAL (GVI): Upper Fuselage TASK 05-41-02-210-819			201	PTF ALL
EXTERNAL - ZONAL (GVI): Flight Control Compartment TASK 05-41-02-210-801			203	PTF ALL
INTERNAL - ZONAL (GVI): Flight Control Compartment - Control Stand TASK 05-41-02-210-802			205	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Flight Control Compartment - Ceiling Panels and Sidewall Console TASK 05-41-02-210-803			209	PTF ALL
EXTERNAL - ZONAL (GVI): Passenger Compartment - Aft of Control Compartment to Forward Entry Door TASK 05-41-02-210-804			218	PTF ALL
INTERNAL - ZONAL (GVI): Passenger Compartment - Aft of Control Compartment to Forward Entry Door TASK 05-41-02-210-805			220	PTF ALL
INTERNAL - ZONAL (GVI): Passenger Compartment - Aft of Control Compartment to Forward Entry Door TASK 05-41-02-210-806			223	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Passenger Entry Door Stops, Latches and Hinges TASK 05-41-02-210-807			226	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Galley Service Door Stops, Latches, and Hinges TASK 05-41-02-210-808			228	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Passenger Compartment - Sta 360 to Sta 663.75 TASK 05-41-02-210-809			230	PTF ALL
INTERNAL - ZONAL (GVI): Forward Passenger Compartment - Sta 360 to Sta 663.75 TASK 05-41-02-210-810			232	PTF ALL
INTERNAL - ZONAL (GVI): Forward Passenger Compartment - Sta 360 to Sta 663.75 Wet Areas TASK 05-41-02-210-811			234	PTF ALL
INTERNAL - ZONAL (GVI): Forward Passenger Compartment - STA 360 to STA 663.75, Dry Areas TASK 05-41-02-210-812			237	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead TASK 05-41-02-210-813			240	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Aft Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead TASK 05-41-02-210-814			242	PTF ALL
INTERNAL - ZONAL (GVI): Aft Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead - Wet Area TASK 05-41-02-210-815			244	PTF ALL
INTERNAL - ZONAL (GVI): Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead - Dry Area TASK 05-41-02-210-816			247	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Passenger Entry Door Stops, Latches, and Hinges TASK 05-41-02-210-817			250	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Galley Service Door Stops, Latches, and Hinges TASK 05-41-02-210-818			252	PTF ALL
ZONE 300 - EMPENNAGE - MAINTENANCE PRACTICES	05-41-03		201	PTF ALL
EXTERNAL - ZONAL (GVI): Area Aft of the Pressure Bulkhead TASK 05-41-03-210-801			201	PTF ALL
INTERNAL - ZONAL (GVI): Area Aft of Pressure Bulkhead TASK 05-41-03-210-802			203	PTF ALL
EXTERNAL - ZONAL (GVI): Area Aft of Pressure Bulkhead TASK 05-41-03-210-830			207	PTF ALL
INTERNAL - ZONAL (GVI): Stabilizer Torsion Box Compartment TASK 05-41-03-210-803			209	PTF ALL
EXTERNAL - ZONAL (GVI): Stabilizer Torsion Box Compartment TASK 05-41-03-210-831			211	PTF ALL
INTERNAL - ZONAL (GVI): APU Compartment TASK 05-41-03-210-804			213	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): APU Compartment TASK 05-41-03-210-832			215	PTF ALL
INTERNAL - ZONAL (GVI): Tail Cone TASK 05-41-03-210-805			217	PTF ALL
EXTERNAL - ZONAL (GVI): Tail Cone TASK 05-41-03-210-833			219	PTF ALL
EXTERNAL - ZONAL (GVI): Vertical Fin and Horizontal Stabilizer TASK 05-41-03-210-806			221	PTF ALL
EXTERNAL - ZONAL (GVI): Vertical Fin - Dorsal Fin TASK 05-41-03-210-807			223	PTF ALL
INTERNAL - ZONAL (GVI): Vertical Fin - Dorsal Fin TASK 05-41-03-210-834			225	PTF ALL
EXTERNAL - ZONAL (GVI): Vertical Fin - Leading Edge TASK 05-41-03-210-808			227	PTF ALL
INTERNAL - ZONAL (GVI): Vertical Fin - Leading Edge TASK 05-41-03-210-809			229	PTF ALL
INTERNAL - ZONAL (GVI): Vertical Fin - Leading Edge, HF Antenna Area TASK 05-41-03-210-840			232	PTF ALL
INTERNAL - ZONAL (GVI): Vertical Fin - Front Spar to Rear Spar TASK 05-41-03-210-810			235	PTF ALL
EXTERNAL - ZONAL (GVI): Vertical Fin - Front Spar to Rear Spar TASK 05-41-03-210-811			239	PTF ALL
INTERNAL - ZONAL (GVI): Vertical Fin - Rear Spar to Trailing Edge TASK 05-41-03-210-812			241	PTF ALL
EXTERNAL - ZONAL (GVI): Vertical Fin - Rear Spar to Trailing Edge TASK 05-41-03-210-813			245	PTF ALL
EXTERNAL - ZONAL (GVI): Rudder TASK 05-41-03-210-814			247	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Vertical Fin Tip TASK 05-41-03-210-815			249	PTF ALL
INTERNAL - ZONAL (GVI): Vertical Fin - Fin Tip TASK 05-41-03-210-835			251	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Left TASK 05-41-03-210-816			253	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Left TASK 05-41-03-210-836			255	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Left TASK 05-41-03-210-817			257	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Left TASK 05-41-03-210-818			259	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Left TASK 05-41-03-210-819			261	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Left TASK 05-41-03-210-820			265	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Elevator - Left TASK 05-41-03-210-821			267	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Stabilizer Tip - Left TASK 05-41-03-210-822			269	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Stabilizer Tip - Left TASK 05-41-03-210-837			271	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Right TASK 05-41-03-210-823			273	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Right TASK 05-41-03-210-838			275	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Right TASK 05-41-03-210-824			277	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Right TASK 05-41-03-210-825			279	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Right TASK 05-41-03-210-826			281	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Right TASK 05-41-03-210-827			285	PTF ALL
EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Elevator - Right TASK 05-41-03-210-828			287	PTF ALL
EXTERNAL - ZONAL (GV): Horizontal Stabilizer - Stabilizer Tip - Right TASK 05-41-03-210-829			289	PTF ALL
INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Stabilizer Tip - Right TASK 05-41-03-210-839			291	PTF ALL
ZONE 400 - POWER PLANT AND STRUT - MAINTENANCE PRACTICES	05-41-04		201	PTF ALL
EXTERNAL - ZONAL (GVI): Powerplant No. 1 TASK 05-41-04-210-801			201	PTF ALL
EXTERNAL - ZONAL (GVI): Engine No. 1 TASK 05-41-04-210-802			203	PTF ALL
EXTERNAL - ZONAL (GVI): Fan Cowl - Engine No. 1 TASK 05-41-04-210-803			206	PTF ALL
EXTERNAL - ZONAL (GVI): Thrust Reverser - Engine No. 1 TASK 05-41-04-210-804			208	PTF ALL
EXTERNAL - ZONAL (GVI): Thrust Reverser, Primary Exhaust Nozzle and Plug - Engine No. 1 TASK 05-41-04-210-805			211	PTF ALL
EXTERNAL - ZONAL (GVI): Powerplant No. 2 TASK 05-41-04-210-806			214	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Engine No. 2 TASK 05-41-04-210-807			216	PTF ALL
EXTERNAL - ZONAL (GVI): FAN COWL - ENGINE NO. 2 TASK 05-41-04-210-808			219	PTF ALL
EXTERNAL - ZONAL (GVI): Thrust Reverser - Engine No. 2 TASK 05-41-04-210-809			221	PTF ALL
EXTERNAL - ZONAL (GVI): Thrust Reverser, Primary Exhaust Nozzle and Plug - Engine No. 2 TASK 05-41-04-210-810			224	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Strut Fairing - Engine No. 1 TASK 05-41-04-210-811			227	PTF ALL
INTERNAL - ZONAL (GVI): Fan Cowl Support Beam - Engine No. 1 TASK 05-41-04-210-812			229	PTF ALL
INTERNAL - ZONAL (GVI): Strut Torque Box - Engine No. 1 TASK 05-41-04-210-813			231	PTF ALL
INTERNAL - ZONAL (GVI): Aft Strut Fairing - Engine No. 1 TASK 05-41-04-210-814			234	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Strut Fairing - Engine No. 2 TASK 05-41-04-210-815			238	PTF ALL
INTERNAL - ZONAL (GVI): Fan Cowl Support Beam - Engine No. 2 TASK 05-41-04-210-816			240	PTF ALL
INTERNAL - ZONAL (GVI): Strut Torque Box - Engine No. 2 TASK 05-41-04-210-817			242	PTF ALL
INTERNAL - ZONAL (GVI): Aft Strut Fairing - Engine No. 2 TASK 05-41-04-210-818			245	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
ZONE 500 - LEFT WING - MAINTENANCE PRACTICES	05-41-05		201	PTF ALL
EXTERNAL - ZONAL (GVI): Left Wing TASK 05-41-05-210-801			201	PTF ALL
EXTERNAL - ZONAL (GVI): Winglet - Left Wing TASK 05-41-05-210-802			204	PTF ALL
INTERNAL - ZONAL (GVI): Winglet - Left Wing TASK 05-41-05-210-803			206	PTF ALL
EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing TASK 05-41-05-210-804			210	PTF ALL
INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing TASK 05-41-05-210-805			212	PTF ALL
EXTERNAL - ZONAL (GVI): Krueger Flaps No. 1 and 2 - Left Wing TASK 05-41-05-210-806			217	PTF ALL
INTERNAL - ZONAL (GVI): Krueger Flaps No.1 and 2 - Left Wing TASK 05-41-05-210-807			219	PTF ALL
EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing TASK 05-41-05-210-808			221	PTF ALL
INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing TASK 05-41-05-210-809			223	PTF ALL
EXTERNAL - ZONAL (GVI): Slats No. 1, 2, 3, 4 - Left Wing TASK 05-41-05-210-810			228	PTF ALL
INTERNAL - ZONAL (GVI): Center Fuel Tank - Left Wing TASK 05-41-05-210-811			230	PTF ALL
EXTERNAL - ZONAL (GVI): Center Fuel Tank - Left Wing TASK 05-41-05-210-812			232	PTF ALL
INTERNAL - ZONAL (GVI): Main Fuel Tank - Left Wing TASK 05-41-05-210-813			234	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Main Fuel Tank - Left Wing TASK 05-41-05-210-814			237	PTF ALL
INTERNAL - ZONAL (GVI): Surge Tank - Left Wing TASK 05-41-05-210-815			239	PTF ALL
EXTERNAL - ZONAL (GVI): Surge Tank - Left Wing TASK 05-41-05-210-816			241	PTF ALL
EXTERNAL - ZONAL (GVI): Dry Bay - Left Wing TASK 05-41-05-210-817			243	PTF ALL
INTERNAL - ZONAL (GVI): Dry Bay - Left Wing TASK 05-41-05-210-837			245	PTF ALL
INTERNAL - ZONAL (GVI): Flap Support No. 4 - Left Wing TASK 05-41-05-210-818			247	PTF ALL
EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 3 - Left Wing TASK 05-41-05-210-819			250	PTF ALL
INTERNAL - ZONAL (GVI): Fairing Flap Support No. 3 - Left Wing TASK 05-41-05-210-820			252	PTF ALL
EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 2 - Left Wing TASK 05-41-05-210-821			254	PTF ALL
INTERNAL - ZONAL (GVI): Fairing Flap Support No. 2 - Left Wing TASK 05-41-05-210-822			256	PTF ALL
EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 1 - Left Wing TASK 05-41-05-210-823			258	PTF ALL
INTERNAL - ZONAL (GVI): Fairing Flap Support No. 1 - Left Wing TASK 05-41-05-210-824			260	PTF ALL
EXTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Left Wing TASK 05-41-05-210-825			262	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Left Wing TASK 05-41-05-210-826			264	PTF ALL
EXTERNAL - ZONAL (GVI): Inboard Spoiler No. 6 - Left Wing TASK 05-41-05-210-827			268	PTF ALL
EXTERNAL - ZONAL (GVI): Inboard Flaps - Left Wing TASK 05-41-05-210-828			271	PTF ALL
INTERNAL - ZONAL (GVI): Inboard Main Flaps - Left Wing TASK 05-41-05-210-829			273	PTF ALL
EXTERNAL - ZONAL (GVI): Rear Spar to T.E. - Outboard of Inboard Flap - Inboard of Fixed Trailing Edge - Left Wing TASK 05-41-05-210-830			275	PTF ALL
EXTERNAL - ZONAL (GVI): Spoilers No. 1, 2, 3, 4, 5 - Left Wing TASK 05-41-05-210-831			277	PTF ALL
EXTERNAL - ZONAL (GVI): Outboard Flaps - Left Wing TASK 05-41-05-210-832			280	PTF ALL
EXTERNAL - ZONAL (GVI): Fixed Trailing Edge - Left Wing TASK 05-41-05-210-833			282	PTF ALL
INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Left Wing TASK 05-41-05-210-834			284	PTF ALL
INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Left Wing TASK 05-41-05-210-835			287	PTF ALL
EXTERNAL - ZONAL (GVI): Aileron - Left Wing TASK 05-41-05-210-836			289	PTF ALL
ZONE 600 - RIGHT WING - MAINTENANCE PRACTICES	05-41-06		201	PTF ALL
EXTERNAL - ZONAL (GVI): Right Wing TASK 05-41-06-210-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Winglet - Right Wing. TASK 05-41-06-210-802			204	PTF ALL
INTERNAL - ZONAL (GVI): Winglet - Right Wing TASK 05-41-06-210-803			206	PTF ALL
EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing TASK 05-41-06-210-804			210	PTF ALL
INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Right TASK 05-41-06-210-805			212	PTF ALL
EXTERNAL - ZONAL (GVI): Krueger Flaps No. 3 and 4 - Right Wing TASK 05-41-06-210-806			217	PTF ALL
INTERNAL - ZONAL (GVI): Krueger Flaps No. 3 and 4 - Right Wing TASK 05-41-06-210-807			219	PTF ALL
EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing TASK 05-41-06-210-808			221	PTF ALL
INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing TASK 05-41-06-210-809			223	PTF ALL
EXTERNAL - ZONAL (GVI): Slats No. 5, 6, 7, 8 - Right Wing TASK 05-41-06-210-810			228	PTF ALL
INTERNAL - ZONAL (GVI): Center Fuel Tank - Right Wing TASK 05-41-06-210-811			230	PTF ALL
EXTERNAL - ZONAL (GVI): Center Fuel Tank - Right Wing TASK 05-41-06-210-812			232	PTF ALL
INTERNAL - ZONAL (GVI): Main Fuel Tank - Right Wing TASK 05-41-06-210-813			234	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Main Fuel Tank - Right Wing TASK 05-41-06-210-814			237	PTF ALL
INTERNAL - ZONAL (GVI): Surge Tank - Right Wing TASK 05-41-06-210-815			239	PTF ALL
EXTERNAL - ZONAL (GVI): Surge Tank - Right Wing TASK 05-41-06-210-816			241	PTF ALL
EXTERNAL - ZONAL (GVI): Dry Bay - Right Wing TASK 05-41-06-210-817			243	PTF ALL
INTERNAL - ZONAL (GVI): Dry Bay - Right Wing TASK 05-41-06-210-837			245	PTF ALL
INTERNAL - ZONAL (GVI): Flap Support No. 5 - Right Wing TASK 05-41-06-210-818			247	PTF ALL
EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 6 - Right Wing TASK 05-41-06-210-819			250	PTF ALL
INTERNAL - ZONAL (GVI): Fairing Flap Support No. 6 - Right Wing TASK 05-41-06-210-820			252	PTF ALL
EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 7 - Right Wing TASK 05-41-06-210-821			254	PTF ALL
INTERNAL - ZONAL (GVI): Fairing Flap Support No. 7 - Right Wing TASK 05-41-06-210-822			256	PTF ALL
EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 8 - Right Wing TASK 05-41-06-210-823			258	PTF ALL
INTERNAL - ZONAL (GVI): Fairing Flap Support No. 8 - Right Wing TASK 05-41-06-210-824			260	PTF ALL
EXTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Right Wing TASK 05-41-06-210-825			262	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Right Wing TASK 05-41-06-210-826			264	PTF ALL
EXTERNAL - ZONAL (GVI): Inboard Spoiler No. 7 - Right Wing TASK 05-41-06-210-827			268	PTF ALL
EXTERNAL - ZONAL (GVI): Inboard Flaps - Right Wing TASK 05-41-06-210-828			271	PTF ALL
INTERNAL - ZONAL (GVI): Inboard Main Flap - Right Wing TASK 05-41-06-210-829			273	PTF ALL
EXTERNAL - ZONAL (GVI): Rear Spar to Trailing Edge - Outboard of Inboard Flap - Inboard of Fixed Trailing Edge - Right Wing TASK 05-41-06-210-830			275	PTF ALL
EXTERNAL - ZONAL (GVI): Spoilers No. 8, 9, 10, 11, 12 - Right Wing TASK 05-41-06-210-831			277	PTF ALL
EXTERNAL - ZONAL (GVI): Outboard Flaps - Right Wing TASK 05-41-06-210-832			280	PTF ALL
EXTERNAL - ZONAL (GVI): Fixed Trailing Edge - Right Wing TASK 05-41-06-210-833			282	PTF ALL
INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Right Wing TASK 05-41-06-210-834			284	PTF ALL
INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Right Wing TASK 05-41-06-210-835			287	PTF ALL
EXTERNAL - ZONAL (GVI): Aileron - Right Wing TASK 05-41-06-210-836			289	PTF ALL
ZONE 700 - LANDING GEAR AND LANDING GEAR DOORS - MAINTENANCE PRACTICES	05-41-07		201	PTF ALL
EXTERNAL - ZONAL (GVI): Nose Landing Gear and Landing Gear Doors (from Ground) TASK 05-41-07-210-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - ZONAL (GVI): Nose Landing Gear and Landing Gear Doors TASK 05-41-07-210-806			203	PTF ALL
EXTERNAL - ZONAL (GVI): Left Main Landing Gear and Landing Gear Doors (From Ground) TASK 05-41-07-210-802			206	PTF ALL
EXTERNAL - ZONAL (GVI): Left Main Landing Gear and Landing Gear Doors TASK 05-41-07-210-803			208	PTF ALL
EXTERNAL - ZONAL (GVI): Right Main Landing Gear and Landing Gear Doors (From Ground) TASK 05-41-07-210-804			211	PTF ALL
EXTERNAL - ZONAL (GVI): Right Main Landing Gear and Landing Gear Doors TASK 05-41-07-210-805			213	PTF ALL
ZONE 800 - DOORS (PASSENGER, CREW, CARGO) - MAINTENANCE PRACTICES	05-41-08		201	PTF ALL
EXTERNAL - ZONAL (GVI): Entry Doors, Service Doors, Automatic Overwing Exits, Mid-Exit Doors, and Cargo Doors TASK 05-41-08-210-801			201	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Cargo Door TASK 05-41-08-210-802			203	PTF ALL
INTERNAL - ZONAL (GVI): Forward Cargo Door TASK 05-41-08-210-803			205	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Cargo Door TASK 05-41-08-210-804			208	PTF ALL
INTERNAL - ZONAL (GVI): Aft Cargo Door TASK 05-41-08-210-805			210	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Passenger Door TASK 05-41-08-210-806			213	PTF ALL
INTERNAL - ZONAL (GVI): Forward Passenger Door TASK 05-41-08-210-807			216	PTF ALL
EXTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-808			218	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-809			220	PTF ALL
EXTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-810			222	PTF ALL
INTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-811			224	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Passenger Door TASK 05-41-08-210-812			226	PTF ALL
INTERNAL - ZONAL (GVI): Aft Passenger Door TASK 05-41-08-210-813			229	PTF ALL
EXTERNAL - ZONAL (GVI): Forward Galley Service Door TASK 05-41-08-210-814			232	PTF ALL
INTERNAL - ZONAL (GVI): Forward Galley Service Door TASK 05-41-08-210-815			235	PTF ALL
EXTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-816			238	PTF ALL
INTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-817			240	PTF ALL
EXTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-818			242	PTF ALL
INTERNAL - ZONAL (GVI): Automatic Overwing Exit TASK 05-41-08-210-819			244	PTF ALL
EXTERNAL - ZONAL (GVI): Aft Galley Service Door TASK 05-41-08-210-820			246	PTF ALL
INTERNAL - ZONAL (GVI): Aft Galley Service Door TASK 05-41-08-210-821			249	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
ZONE 100 - LOWER FUSELAGE - (EZAP)	05-42-01		201	PTF ALL
Restore: Area Forward of Nose Wheel Well. (EZAP) TASK 05-42-01-100-801			201	PTF ALL
Restore: Areas Behind the Equipment Racks in the Electrical and Electronics Compartment. (EZAP) TASK 05-42-01-100-802			204	PTF ALL
Restore: Area Above and Outboard of Nose Wheel Well. (EZAP) TASK 05-42-01-100-803			208	PTF ALL
Restore: Areas Behind Ceiling and Sidewall Panels in the Aft Cargo Compartment. (EZAP) TASK 05-42-01-100-804			213	PTF ALL
Restore: Area Aft of Forward Cargo Compartment. (EZAP) TASK 05-42-01-100-805			219	PTF ALL
Restore: Area Below Forward Cargo Compartment. (EZAP) TASK 05-42-01-100-806			221	PTF ALL
Restore: Areas Behind Ceiling and Sidewall Panels in the Forward Cargo Compartment. (EZAP) TASK 05-42-01-100-807			224	PTF ALL
Restore: Area Aft of Aft Cargo Compartment. (EZAP) TASK 05-42-01-100-808			229	PTF ALL
Restore: Area Below Aft Cargo Compartment. (EZAP) TASK 05-42-01-100-809			231	PTF ALL
General Visual Inspection: Exposed EWIS in Main Landing Gear Wheel Well. (EZAP) TASK 05-42-01-210-801			234	PTF ALL
General Visual Inspection: Exposed EWIS in the Forward Cargo Compartment. (EZAP) TASK 05-42-01-210-802			237	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
General Visual Inspection: Exposed EWIS in the Electrical and Electronics Compartment. (EZAP) TASK 05-42-01-210-803			242	PTF ALL
General Visual Inspection: Exposed EWIS in the Aft Cargo Compartment. (EZAP) TASK 05-42-01-210-804			246	PTF ALL
Detailed Inspection: IDG, APU Starter/Generator, Battery, and External Power Feeder Wiring/ EWIS. (EZAP) TASK 05-42-01-211-801			251	PTF ALL
Detailed Inspection: External Power Feeder Wiring/ EWIS in the area outboard of Nose Wheel Well. (EZAP) TASK 05-42-01-211-802			256	PTF ALL
Detailed Inspection: Exposed EWIS in the Center Section Wing Box (EZAP) TASK 05-42-01-211-803			259	PTF ALL
ZONE 200 - UPPER FUSELAGE - (EZAP)	05-42-02		201	PTF ALL
Restore: Aft Passenger Compartment, Wet Areas, Sta 663.75 to Aft Pressure Bulkhead. (EZAP) TASK 05-42-02-100-801			201	PTF ALL
Restore: Aft Passenger Compartment, Dry Area, Sta 663.75 to Aft Pressure Bulkhead. (EZAP) TASK 05-42-02-100-802			203	PTF ALL
Restore: Forward Passenger Compartment, Wet Areas, Sta 360 to 663.75. (EZAP) TASK 05-42-02-100-803			205	PTF ALL
Restore: Forward Passenger Compartment, Dry Area, Sta 360 to 663.75. (EZAP) TASK 05-42-02-100-804			205	PTF ALL
Restore: Areas Aft of Flight Compartment to Forward Entry Door. (EZAP) TASK 05-42-02-100-805			208	PTF ALL
Restore: Area in Flight Compartment from Sta 186 to 211, WL 208 to 232 (EZAP) TASK 05-42-02-100-806			210	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
General Visual Inspection: Exposed EWIS in the Flight Compartment excluding exposed EWIS in the P5, P6 and P18 panels. (EZAP) TASK 05-42-02-210-801			212	PTF ALL
Detailed Inspection: Exposed EWIS in the P5, P6 and P18 panels. (EZAP) TASK 05-42-02-211-801			214	PTF ALL
ZONE 300 - EMPENNAGE - (EZAP)	05-42-03		201	PTF ALL
General Visual Inspection: Exposed EWIS in the Tail Cone. (EZAP) TASK 05-42-03-210-801			201	PTF ALL
Detailed Inspection: APU Starter/Generator Power Feeder Wiring/Ignition Leads/ and connected EWIS in the APU compartment. (EZAP) TASK 05-42-03-211-801			203	PTF ALL
Detailed Inspection: APU Starter/Generator Power Feeder Wiring/EWIS in the area aft of Pressure Bulkhead. (EZAP) TASK 05-42-03-211-802			206	PTF ALL
ZONE 400 - POWER PLANT AND STRUT - (EZAP)	05-42-04		201	PTF ALL
Detailed Inspection: Exposed EWIS in Engine 1 (Engine fan and core sections). (EZAP) TASK 05-42-04-211-801			201	PTF ALL
Detailed Inspection: Exposed EWIS in Engine 2 (Engine fan and core sections). (EZAP) TASK 05-42-04-211-802			204	PTF ALL
Detailed Inspection: Exposed EWIS in the Forward Strut Fairing - Engine No. 1. (EZAP) TASK 05-42-04-211-803			207	PTF ALL
Detailed Inspection: Exposed EWIS in Fan Cowl Support Beam - Engine No. 1. (EZAP) TASK 05-42-04-211-804			210	PTF ALL
Detailed Inspection: Exposed EWIS common to the Strut Torque Box - Engine No. 1. (EZAP) TASK 05-42-04-211-805			212	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Detailed Inspection: Exposed EWIS in the Forward Strut Fairing - Engine No. 2. (EZAP) TASK 05-42-04-211-806			216	PTF ALL
Detailed Inspection: Exposed EWIS in Fan Cowl Support Beam - Engine No. 2. (EZAP) TASK 05-42-04-211-807			219	PTF ALL
Detailed Inspection: Exposed EWIS common to the Strut Torque Box - Engine No. 2. (EZAP) TASK 05-42-04-211-808			221	PTF ALL
ZONE 500 - LEFT WING - (EZAP)	05-42-05		201	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing. (EZAP) TASK 05-42-05-211-801			201	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing. (EZAP) TASK 05-42-05-211-802			206	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Rear Spar to Main Landing Gear Support Beam - Left Wing. (EZAP) TASK 05-42-05-211-803			212	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Rear Spar to Trailing Edge - Outbd of Inbd Flap - Inbd of Fixed T.E. - Left Wing. (EZAP) TASK 05-42-05-211-804			214	PTF ALL
Detailed Inspection: Exposed EWIS in the Center Fuel Tank - Left Wing (EZAP) TASK 05-42-05-211-805			216	PTF ALL
Detailed Inspection: Exposed EWIS in the Main Fuel Tank - Left Wing TASK 05-42-05-211-806			218	PTF ALL
ZONE 600 - RIGHT WING - (EZAP)	05-42-06		201	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing. (EZAP) TASK 05-42-06-211-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Detailed Inspection: Exposed EWIS in the area from Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing. (EZAP) TASK 05-42-06-211-802			206	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Rear Spar to Main Landing Gear Support Beam - Right Wing. (EZAP) TASK 05-42-06-211-803			212	PTF ALL
Detailed Inspection: Exposed EWIS in the area from Rear Spar to Trailing Edge - Outbd of Inbd Flap - Inbd of Fixed T.E. - Right Wing. (EZAP) TASK 05-42-06-211-804			214	PTF ALL
Detailed Inspection: Exposed EWIS in the Center Tank - Right Wing TASK 05-42-06-211-805			216	PTF ALL
Detailed Inspection: Exposed EWIS in the Main Tank - Right Wing TASK 05-42-06-211-806			218	PTF ALL
HARD LANDING OR HIGH DRAG/SIDE LOAD LANDING - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-01		201	PTF ALL
Phase IA Inspection TASK 05-51-01-210-804			203	PTF ALL
Phase IB Inspection TASK 05-51-01-210-805			215	PTF ALL
Phase II Inspection TASK 05-51-01-210-806			223	PTF ALL
SEVERE OR UNUSUAL TURBULENCE, EXCESSIVE MANEUVER, BUFFET OR SPEEDS MORE THAN DESIGN LIMITS - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-04		201	PTF ALL
Severe or Unusual Turbulence, Excessive Maneuver, Buffet, or Speeds More than the Design Limits Conditional Inspection TASK 05-51-04-210-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
HIGH ENERGY STOP/HEAT DAMAGE CONDITION - MAINTENANCE PRACTICES	05-51-07		201	PTF ALL
High Energy Stop TASK 05-51-07-210-801			201	PTF ALL
Heat Damage Inspection (Ammonium Persulfate Solution) TASK 05-51-07-280-801			210	PTF ALL
Tire Removal After Overspeed Landing TASK 05-51-07-000-801			212	PTF ALL
FLAP/SLAT DOWN OVERSPEED OR ABOVE 20,000 FEET CONDITION - MAINTENANCE PRACTICES	05-51-08		201	PTF ALL
Phase I Inspection TASK 05-51-08-210-801			207	PTF ALL
Phase II Inspection TASK 05-51-08-210-802			209	PTF ALL
OVERWEIGHT TAXI - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-09		201	PTF ALL
Phase 1 Inspection TASK 05-51-09-212-801			202	PTF ALL
Phase 2 Inspection TASK 05-51-09-210-801			202	PTF ALL
DRAGGED ENGINE NACELLE/FAN BLADE OUT/ENGINE SEIZURE/THRUST REVERSER AND ATTACH POINTS DAMAGE - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-10		201	PTF ALL
Dragged Engine Nacelle/Fan Blade Out/Engine Seizure/Engine and Strut Damage Conditional Inspection TASK 05-51-10-210-801			202	PTF ALL
GALLEY SPILLAGE - MAINTENANCE PRACTICES	05-51-13		201	PTF ALL
Galley Spill Conditional - Inspection TASK 05-51-13-211-801			201	PTF ALL
MERCURY SPILLAGE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-14		201	PTF ALL
Mercury Spillage Conditional Inspection TASK 05-51-14-210-801			201	PTF ALL

05-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
BRAKE SEIZURE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-15		201	PTF ALL
Brake Seizure Conditional Inspection TASK 05-51-15-210-801			201	PTF ALL
FLAT SPOTTED TIRES - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-16		201	PTF ALL
Flat Spotted Tires Conditional Inspection TASK 05-51-16-210-801			201	PTF ALL
WHEEL BEARING FAILURE/DAMAGE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-17		201	PTF ALL
Wheel Bearing Failure TASK 05-51-17-210-801			201	PTF ALL
Heat Damage Inspection of the Axle TASK 05-51-17-210-802			203	PTF ALL
BIRD/HAIL STRIKE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-18		201	PTF ALL
Bird Strike and In-flight Hail Strike Conditional Inspection TASK 05-51-18-210-801			201	PTF ALL
Hail Strike on the Ground Conditional Inspection TASK 05-51-18-212-801			205	PTF ALL
LIGHTNING STRIKE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-19		201	PTF ALL
Phase I Inspection TASK 05-51-19-210-802			203	PTF ALL
Phase II Inspection TASK 05-51-19-210-803			208	PTF ALL
Inspection and Operational Check of Radio and Navigation Systems TASK 05-51-19-710-801			216	PTF ALL
FILIFORM CONDITION ON EXTERIOR DECORATIVE SURFACES (CONDITIONAL INSPECTION)	05-51-21		201	PTF ALL
Filiform Corrosion - (Conditional Inspection) TASK 05-51-21-210-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
HYDRAULIC FLUID REACTION WITH TITANIUM - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-22		201	PTF ALL
Titanium Parts Contaminated With Fire-Resistant Hydraulic Fluid Inspection TASK 05-51-22-210-801			201	PTF ALL
CABIN OVERPRESSURE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-24		201	PTF ALL
Cabin Overpressurization Conditional Inspection TASK 05-51-24-200-801			201	PTF ALL
EXTREME DUST OR SAND CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-27		201	PTF ALL
Extreme Dust or Sand Conditional Inspection TASK 05-51-27-210-801			201	PTF ALL
ICE OR SNOW CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-28		201	PTF ALL
Ice or Snow Condition Maintenance Practices TASK 05-51-28-210-801			201	PTF ALL
EXCEEDING MAXIMUM NOSE LANDING GEAR TOWING ANGLE OR MAXIMUM TOWING LOAD (CONDITIONAL INSPECTION) - MAINTENANCE PRACTICES	05-51-29		201	PTF ALL
Phase I Inspection TASK 05-51-29-200-801			201	PTF ALL
Phase II Inspection TASK 05-51-29-200-802			203	PTF ALL
VOLCANIC ASH CONDITION - MAINTENANCE PRACTICES	05-51-31		201	PTF ALL
Volcanic Ash Operational Encounter Conditional Inspection TASK 05-51-31-210-801			201	PTF ALL
Volcanic Ash Ground Fallout Conditional Inspection TASK 05-51-31-200-801			217	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
TAIL STRIKE/SKID CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-32		201	PTF ALL
Tail Strike Inspection TASK 05-51-32-210-801			201	PTF ALL
Tail Skid Inspection TASK 05-51-32-210-802			203	PTF ALL
HOT AIR DUCT RUPTURE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-34		201	PTF ALL
Airplane Structure Hot Air Duct Rupture Conditional Inspection TASK 05-51-34-210-801			201	PTF ALL
Nacelle Structure Hot Air Duct Rupture Conditional Inspection TASK 05-51-34-200-801			201	PTF ALL
OVERWEIGHT LANDING - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-35		201	PTF ALL
Overweight Landing Inspection TASK 05-51-35-210-803			203	PTF ALL
WINGLET STRIKE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-36		201	PTF ALL
Winglet Strike Inspection Phase I TASK 05-51-36-210-801			201	PTF ALL
Winglet Strike Inspection Phase II TASK 05-51-36-210-802			202	PTF ALL
NOSE LANDING GEAR AND FORWARD FUSELAGE - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-37		201	PTF ALL
Phase I Inspection TASK 05-51-37-200-804			202	PTF ALL
Phase II Inspection TASK 05-51-37-200-805			205	PTF ALL
ENGINE BLADE OUT - EE BAY AND FLIGHT DECK PANELS- MAINTENANCE PRACTICES	05-51-42		201	PTF ALL
Engine Blade Out - General Visual Check TASK 05-51-42-210-801			201	PTF ALL

05-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Engine Blade Out - EE Bay and Flight Deck Panels Inspection TASK 05-51-42-200-801			202	PTF ALL
NACELLE/STRUT PRESSURE RELIEF DOORS OPEN CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-44		201	PTF ALL
Examine the Nacelle/Strut Structure TASK 05-51-44-200-801			201	PTF ALL
Examine the Pneumatic Ducts TASK 05-51-44-210-801			201	PTF ALL
LANDING GEAR OPERATION ABOVE DESIGN SPEED CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-47		201	PTF ALL
Landing Gear Operation Above Design Speed Condition, Conditional Inspection TASK 05-51-47-210-801			201	PTF ALL
FUEL IMBALANCE EXCEEDANCE CONDITIONAL INSPECTION - MAINTENANCE PRACTICE	05-51-48		201	PTF ALL
Fuel Imbalance Exceedance - Conditional Inspection TASK 05-51-48-211-801			201	PTF ALL
Extreme High Wind Event - Conditional Inspection	05-51-51		201	PTF ALL
Extreme High Wind Event - Conditional Inspection TASK 05-51-51-200-801			201	PTF ALL
Heavy Water Spray from Tires During Takeoff and Landing - Conditional Inspection	05-51-52		201	PTF ALL
Heavy Water Spray from Tires During Takeoff and Landing - Inspection/Check TASK 05-51-52-200-801			201	PTF ALL
INTERIOR ICE CONDITION - MAINTENANCE PRACTICES	05-51-53		201	PTF ALL
Interior Ice Removal TASK 05-51-53-210-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
TIRE TREAD LOSS OR TIRE BURST - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-54		201	PTF ALL
Tire Tread Loss or Tire Burst Conditional Inspection TASK 05-51-54-210-801			201	PTF ALL
SMOKE OR FUMES IN CABIN - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-56		201	PTF ALL
Smoke or Fumes in Cabin (Conditional Inspection) TASK 05-51-56-200-801			201	PTF ALL
ACID SPILLAGE CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-57		201	PTF ALL
Corrosion Removal After Acid Spills TASK 05-51-57-000-802			201	PTF ALL
GROUND HANDLING EQUIPMENT HITS AIRPLANE OR PART DEPARTS AIRPLANE (CONDITIONAL INSPECTION) - MAINTENANCE PRACTICES	05-51-59		201	PTF ALL
Ground Handling Equipment Hits the Airplane or Part Departs the Airplane Inspection TASK 05-51-59-200-801			202	PTF ALL
AIRFRAME VIBRATION CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-67		201	PTF ALL
Airframe Vibration - Conditional Inspection TASK 05-51-67-280-801			201	PTF ALL
MAIN LANDING GEAR SHIMMY/VIBRATION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-68		201	PTF ALL
Phase I Inspection TASK 05-51-68-210-801			201	PTF ALL
Phase II Inspection TASK 05-51-68-210-802			205	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 05
TIME LIMITS/MAINTENANCE CHECKS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
CONDITIONED AIR PACK OUTLET DUCT SYSTEM FAILURE - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-80		201	PTF ALL
Conditioned Air Pack Outlet Conditional Inspection TASK 05-51-80-210-801			201	PTF ALL
CABIN DEPRESSURIZATION CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-81		201	PTF ALL
Cabin Depressurization Conditional - Inspection TASK 05-51-81-210-801			201	PTF ALL
EXCESSIVE CABIN PRESSURE LEAKAGE - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-91		201	PTF ALL
Cabin Pressure Leak Test TASK 05-51-91-790-801			201	PTF ALL
COLD-SOAKED FUEL FROST - MAINTENANCE PRACTICES	05-51-92		201	PTF ALL
Cold-Soaked Fuel Frost Maintenance TASK 05-51-92-660-801			201	PTF ALL
RUNWAY/TAXIWAY EXCURSIONS - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-94		201	PTF ALL
Phase I Inspection TASK 05-51-94-210-801			202	PTF ALL
Phase II Inspection TASK 05-51-94-210-802			202	PTF ALL
DRY CHEMICAL FIRE EXTINGUISHER USED - MAINTENANCE PRACTICES	05-51-95		201	PTF ALL
Cleaning After Dry Chemical Fire Extinguisher Used TASK 05-51-95-100-801			201	PTF ALL
MAIN WHEEL WELL CORROSION PROTECTION OF ELECTRICAL CONNECTORS	05-51-96		601	PTF ALL
Electrical Connectors in the Main Wheel Well Detail Inspection TASK 05-51-96-211-801			601	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
External Doors Bonding Jumper	05-51-97		201	PTF ALL
Bonding Jumper - Inspection/Check TASK 05-51-97-200-801			201	PTF ALL
NITROGEN GENERATION SYSTEM (NGS) OXYGEN ENRICHED AIR (OEA) EXHAUST PORT FUEL LEAK CONDITION - MAINTENANCE PRACTICES (CONDITIONAL INSPECTION)	05-51-98		201	PTF ALL
Nitrogen Generation System (NGS) Fuel Leak Conditional Inspection TASK 05-51-98-210-801			201	PTF ALL
IN-FLIGHT WINDMILLING - MAINTENANCE PRACTICES	05-51-99		201	PTF ALL
Inspection of the Engine After In-Flight Windmilling TASK 05-51-99-200-801			201	PTF ALL
FOIL-LINED PANELS ON LEFT SIDE OF THE AIRPLANE - INSPECTION/CHECK	05-55-21		601	PTF ALL
General Visual Inspection - Left Wing Leading Edge (MRB 20-155-00) TASK 05-55-21-210-801			601	PTF ALL
Detailed Inspection - Left Wing Leading Edge (MRB 20-169-00) TASK 05-55-21-211-802			605	PTF ALL
Detailed Inspection - Left Strut Fairings (MRB 20-171-00) TASK 05-55-21-211-804			608	PTF ALL
FOIL-LINED PANELS ON RIGHT SIDE OF THE AIRPLANE - INSPECTION/CHECK	05-55-22		601	PTF ALL
General Visual Inspection - Right Wing Leading Edge (MRB 20-155-00) TASK 05-55-22-210-801			601	PTF ALL
Detailed Inspection - Right Wing Leading Edge (MRB 20-168-00) TASK 05-55-22-211-801			604	PTF ALL
Detailed Inspection - Right Wing Leading Edge (MRB 20-169-00) TASK 05-55-22-211-802			606	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Detailed Inspection - Right Strut Fairings (MRB 20-171-00) TASK 05-55-22-211-804			609	PTF ALL
WIRE BUNDLES ON LEFT SIDE OF THE AIRPLANE - INSPECTION/CHECK	05-55-25		601	PTF ALL
Loop Resistance Test of Wire Bundle - Left MLG Wheel Well (MRB 20-150-00) TASK 05-55-25-280-801			601	PTF ALL
Loop Resistance Test of Wire Bundle - Left MLG Wheel Well (MRB 20-152-00) TASK 05-55-25-280-803			607	PTF ALL
Loop Resistance Test of Wire Bundle - Left MLG Wheel Well (MRB 20-176-00) TASK 05-55-25-280-804			613	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing to Body Fairing (MRB 20-160-00) TASK 05-55-25-280-805			617	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing to Body Fairing (MRB 20-161-00) TASK 05-55-25-280-806			623	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing to Body Fairing (MRB 20-164-00) TASK 05-55-25-280-809			628	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing to Body Fairing (MRB 20-178-00) TASK 05-55-25-280-810			633	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing Trailing Edge (MRB 20-156-00) TASK 05-55-25-280-811			638	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing Trailing Edge (MRB 20-159-00) TASK 05-55-25-280-812			644	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing Leading Edge (MRB 20-154-00) TASK 05-55-25-280-813			650	PTF ALL
Loop Resistance Test of Wire Bundle - Left Wing Leading Edge (MRB 20-158-00) TASK 05-55-25-280-815			655	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Loop Resistance Test of Wire Bundle - Left Wing Leading Edge (MRB 20-177-00) TASK 05-55-25-280-816			662	PTF ALL
Loop Resistance Test of Wire Bundle - Left Engine (MRB 20-182-00) TASK 05-55-25-280-817			667	PTF ALL PRE SB 737-24-1233
Loop Resistance Test of Wire Bundle - Left MLG Wheel Well (MRB 20-188-00) TASK 05-55-25-280-821			673	PTF ALL
WIRE BUNDLES ON RIGHT SIDE OF THE AIRPLANE - INSPECTION/CHECK	05-55-26		601	PTF ALL
Loop Resistance Test of Wire Bundle - Right MLG Wheel Well (MRB 20-150-00) TASK 05-55-26-280-801			601	PTF ALL
Loop Resistance Test of Wire Bundle - Right MLG Wheel Well (MRB 20-151-00) TASK 05-55-26-280-802			606	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing to Body Fairing (MRB 20-160-00) TASK 05-55-26-280-805			610	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing to Body Fairing (MRB 20-161-00) TASK 05-55-26-280-806			615	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing to Body Fairing (MRB 20-162-00) TASK 05-55-26-280-807			620	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing to Body Fairing (MRB 20-164-00) TASK 05-55-26-280-809			625	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing to Body Fairing (MRB 20-178-00) TASK 05-55-26-280-810			630	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing Trailing Edge (MRB 20-156-00) TASK 05-55-26-280-811			635	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing Trailing Edge (MRB 20-159-00) TASK 05-55-26-280-812			640	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Loop Resistance Test of Wire Bundle - Right Wing Leading Edge (MRB 20-154-00) TASK 05-55-26-280-813			646	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing Leading Edge (MRB 20-157-00) TASK 05-55-26-280-814			651	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing Leading Edge (MRB 20-158-00) TASK 05-55-26-280-815			656	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing Leading Edge (MRB 20-177-00) TASK 05-55-26-280-816			663	PTF ALL
Loop Resistance Test of Wire Bundle - Right Engine (MRB 20-182-00) TASK 05-55-26-280-817			668	PTF ALL PRE SB 737-24-1233
Loop Resistance Test of Wire Bundle - Right MLG Wheel Well (MRB 20-183-00) TASK 05-55-26-280-818			674	PTF ALL
Loop Resistance Test of Wire Bundle - Right Wing to Body Fairing (MRB 20-189-00) TASK 05-55-26-280-822			679	PTF ALL
EMPENNAGE WIRE BUNDLES - INSPECTION/CHECK	05-55-46		601	PTF ALL
Loop Resistance Test of Wire Bundle - Tailcone Access Compartment (MRB 20-165-00) TASK 05-55-46-280-801			601	PTF ALL
Loop Resistance Test of Wire Bundle - Tailcone Access Compartment (MRB 20-166-00) TASK 05-55-46-280-802			606	PTF ALL
Loop Resistance Test of Wire Bundle - Right Tailcone Access Compartment (MRB 20-167-00) TASK 05-55-46-280-803			613	PTF ALL
Loop Resistance Test of Wire Bundle - Left Tailcone Access Compartment (MRB 20-167-00) TASK 05-55-46-280-810			618	PTF ALL
Loop Resistance Test of Wire Bundle - APU Compartment (MRB 20-174-00) TASK 05-55-46-280-804			622	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Loop Resistance Test Wire Bundle - Vertical Stabilizer (MRB 20-184-00) TASK 05-55-46-280-808			627	PTF ALL
Loop Resistance Test of Wire Bundle - Aft Pressure Bulkhead (MRB 20-190-00) TASK 05-55-46-280-809			632	PTF ALL
PRESSURE VESSEL WIRE BUNDLES - INSPECTION/CHECK	05-55-47		601	PTF ALL
Loop Resistance Test of Wire Bundle - LRRA (MRB 20-153-00) TASK 05-55-47-280-801			601	PTF ALL
HIRF/LIGHTNING - FQIS WIRING AND BONDING - INSPECTION/CHECK	05-55-54		601	PTF ALL
FQIS Wiring And Bonding - Inspection TASK 05-55-54-200-801			601	PTF ALL
FQIS - Out Tank Connectors - Electrical Bonding Resistance Check TASK 05-55-54-200-802			610	PTF ALL
FQIS Wiring And Bonding - Fault Isolation TASK 05-55-54-810-801			615	PTF ALL
BOND RESISTANCE MEASUREMENT - MAINTENANCE PRACTICES	05-56-01		201	PTF ALL
Bond Resistance Measurement TASK 05-56-01-760-801			201	PTF ALL
LOOP RESISTANCE TESTER (LRT)- MAINTENANCE PRACTICES	05-56-02		201	PTF ALL
LRT Lid Standard Measurement TASK 05-56-02-200-801			201	PTF ALL
ExLRT Standard Measurement TASK 05-56-02-200-802			207	PTF ALL
HIRF/LIGHTNING LOOP RESISTANCE MEASUREMENT - MAINTENANCE PRACTICES	05-56-03		201	PTF ALL
Loop Resistance Measurement TASK 05-56-03-200-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
HIRF/LIGHTNING - JOINT RESISTANCE MEASUREMENT - MAINTENANCE PRACTICES	05-56-04		201	PTF ALL
Joint Resistance Measurement TASK 05-56-04-200-801			201	PTF ALL
LOOP RESISTANCE MEASUREMENT AND JOINT RESISTANCE MEASUREMENT - MAINTENANCE PRACTICES	05-56-05		201	PTF ALL
Loop Resistance and Joint Resistance Measurement TASK 05-56-05-200-801			201	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GENERAL TASK CARD INFORMATION

1. General

A. All Tasks Contained are for Scheduled Maintenance Tasks Only.

TASK 05-00-00-800-801

2. General Task Instructions

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) Tasks are complete procedures for specific maintenance requirements.

B. Instructions

(1) Make sure that you do all the steps to the end of the task.

(2) Obey all of the safety precautions.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TIME LIMITS/MAINTENANCE CHECKS - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Airworthiness Limitation Precautions

(2) Enhanced Zonal Inspection Program (EZAP) Precautions

(3) Scheduled Maintenance Task (SMT) Repair Time Limits

TASK 05-00-00-910-801

2. Airworthiness Limitation Precautions

A. General

(1) Critical Design Configuration Control Limitations (CDCCLs)

(a) All occurrences of CDCCLs found in this chapter of the AMM are identified by this note after each applicable CDCCL design feature:

1) NOTE: CDCCL - Refer to the task: Airworthiness Limitation Precautions, TASK 05-00-00-910-801, for important information on Critical Design Configuration Control Limitations (CDCCLs).

(b) Design features that are CDCCLs are defined and controlled by Special Federal Aviation Regulation (SFAR) 88, and can be found in the Special Compliance Items/Airworthiness Limitations document. CDCCLs are a means of identifying certain design configuration features intended to preclude a fuel tank ignition source for the operational life of the airplane. CDCCLs are mandatory and cannot be changed or deleted without the approval of the FAA office that is responsible for the airplane model Type Certificate, or applicable regulatory agency. A critical fuel tank ignition source prevention feature may exist in the fuel system and its related installation or in systems that, if a failure condition were to develop, could interact with the fuel system in such a way that an unsafe condition would develop without this limitation. Strict adherence to configuration, methods, techniques, and practices as prescribed is required to ensure the CDCCL is complied with. Any use of parts, methods, techniques or practices not contained in the applicable CDCCL must be approved by the FAA office that is responsible for the airplane model Type Certificate, or applicable regulatory agency.

(2) Airworthiness Limitation Instructions (ALIs)

(a) All occurrences of fuel tank system ALIs found in this chapter of the AMM are identified by this note after each applicable ALI inspection feature:

1) NOTE ALI - Refer to the task: Airworthiness Limitation Precautions, TASK 05-00-00-910-801, for important information on airworthiness limitation instructions (ALIs).

(b) Inspection features that are ALIs are defined and controlled by Special Federal Aviation Regulation (SFAR) 88, and can be found in the Special Compliance Items/Airworthiness Limitations document. These ALIs identify inspection features related to fuel tank ignition source prevention which must be done to maintain the design level of safety for the operational life of the airplane. These inspection features are mandatory and cannot be changed or deleted without the approval of the FAA office that is responsible for the airplane model Type Certificate, or applicable regulatory agency. Strict adherence to methods, techniques and practices as prescribed is required to ensure the ALI is complied with. Any use of methods, techniques or practices not contained in these ALIs must be approved by the FAA office that is responsible for the airplane model Type Certificate, or applicable regulatory agency.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Critical Design Configuration Control Limitations (CDCCLs)

SUBTASK 05-00-00-910-001

> **WARNING** OBEY THE MANUFACTURER'S PROCEDURES WHEN YOU DO MAINTENANCE THAT HAS AN EFFECT ON A CDCCL. IF YOU DO NOT OBEY THE PROCEDURES, IT CAN INCREASE THE RISK OF A SOURCE OF FUEL TANK IGNITION. INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT CAN OCCUR IF THERE IS A FIRE OR EXPLOSION.

(1) Make sure that you follow the procedures for items identified as CDCCLs.

C. Airworthiness Limitation Instructions (ALIs)

SUBTASK 05-00-00-910-002

> **WARNING** OBEY THE MANUFACTURER'S PROCEDURES WHEN YOU DO MAINTENANCE THAT HAS AN EFFECT ON AN ALI. IF YOU DO NOT OBEY THE PROCEDURES, IT CAN INCREASE THE RISK OF A SOURCE OF FUEL TANK IGNITION. INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT CAN OCCUR IF THERE IS A FIRE OR EXPLOSION.

(1) Make sure that you follow the procedures for items identified as ALIs.

END OF TASK

TASK 05-00-00-910-802

3. Enhanced Zonal Inspection Program (EZAP) Precautions

A. General

(1) Enhanced Zonal Analysis Procedure (EZAP) and associated Electrical Wiring Interconnection System (EWIS)

(a) Enhanced Zonal Analysis Procedure (EZAP) is an analytical procedure required by Part 25, Appendix H, Section H25.5(a)(1) that identifies the physical and environmental conditions contained in each zone of an airplane, analyzes the effects of these conditions on electrical wiring and components, and assesses the possibilities for smoke and fire. The end result of the analysis are inspection and restoration tasks in the form of EWIS ICA.

(b) Electrical Wiring Interconnection System (EWIS): means any wire, power feeder, wiring device, or combination of these, including termination devices, installed in any area of the airplane for the purpose of transmitting electrical energy, including data and signals, between two or more intended termination points. EWIS is defined in full by 14 CFR section 25.1701.

(c) The Zonal Inspection Program includes a general visual and, if required, physical check of the general condition and security of attachment of the accessible systems and structures items contained in defined zones. This includes checks for degradation such as chafing of tubing, loose duct supports, damage to wiring and connected EWIS, cable and pulley wear, fluid leaks, electrical bonding, general condition of fasteners, inadequate drainage, etc., and general corrosion, not covered in the MSG-3 analysis. The zonal inspection is not intended as a quality assurance after maintenance check for determining proper reassembly of systems, components, structures, or powerplants. The zonal program packages a number of General Visual (GV) Inspections into one or more zonal inspections. The program includes any GV inspection tasks required to assure security of attachment and general condition of any system or structural items within the zone.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(2) Equivalent Tools, Fixtures, Test Equipment, and Consumable Materials

(a) When the procedures in this manual identify tools, equipment, and consumable materials, you can use equivalent alternatives. If you use alternative tools, equipment, or consumable materials, make sure that they give the same results and are as safe to the parts and personnel as the tools, equipment, or consumable materials specified in the procedure.

B. References

Reference	Title
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Protection of EWIS During Maintenance, Repair and Alterations

SUBTASK 05-00-00-910-003

WARNING

OBEY THE MANUFACTURER'S PROCEDURES WHEN YOU DO EZAP MAINTENANCE, OR MAINTENANCE THAT HAS AN EFFECT ON EWIS. IF YOU DO NOT OBEY THE PROCEDURES, IT CAN INCREASE THE RISK OF AN IGNITION SOURCE FOR FIRES. INJURIES TO PERSONS, AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Make sure you follow the procedures for items identified as EZAP.

(2) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801.

END OF TASK

TASK 05-00-00-750-801

4. Scheduled Maintenance Task (SMT) - Repair Time Limits

A. General

(1) The frequency of this check may be reduced to allow repair time for fault corrective action, provided the check interval plus the time for fault corrective action does not exceed the repair time limit specified in this procedure.

NOTE: For Example: R = 150 FH - Q, where “R” is the repair time limit for corrective action, and “Q” is the scheduled maintenance task check interval.

(a) Repair time limit 150 FH: Scheduled maintenance task check interval (Q) of 150 FH, if faults are found, corrective action for fault is required immediately (R = 0 FH). Scheduled maintenance task check interval (Q) of 70 FH allows repair time limit for fault corrective action (R) of 80 FH.

(b) Repair time limit 3000 FH: Scheduled maintenance task check interval (Q) of 70 FH allows repair time limit for fault corrective action (R) of 2930 FH.

(c) Repair time limit MMEL: Refer to the MMEL for deferral. Scheduled maintenance task check interval (Q) of 150 FH, if faults are found, MMEL deferral for corrective action for fault is applicable.

B. References

Reference	Title
73-00-00-700-801-G00	Scheduled Maintenance Task for Short-Time Fault Interrogation (P/B 501)
73-00-00-700-802-G00	Scheduled Maintenance Task for Long-Time Fault Interrogation (P/B 501)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. MAX Display System (MDS) - Scheduled Maintenance Task (SMT) Messages

SUBTASK 05-00-00-750-001

(1) For allowable repair time limits, see Table 201.

Table 201/05-00-00-993-801 Scheduled Maintenance Task - Repair Limits

SMT Message	Repair Time Limit
PACK CONTROL CHANNEL L PACK CONTROL CHANNEL R	150 FH 150 FH
PACK RAM AIR SENSOR L PACK RAM AIR SENSOR R	150 FH 150 FH
TEMP ZONE CTRL AFT CAB TEMP ZONE CTRL CONT CAB TEMP ZONE CTRL FWD CAB	3000 FH 3000 FH 3000 FH
BLEED CTRL CARD L BLEED CTRL CARD R	3000 FH 3000 FH
BLEED FAMV RVDT L BLEED FAMV RVDT R	150 FH 150 FH
BLEED PM SENSOR 1 L BLEED PM SENSOR 1 R	3000 FH 3000 FH
BLEED PRSOV CTRL L BLEED PRSOV CTRL R	150 FH 150 FH
BLEED TM SENSOR 1 L BLEED TM SENSOR 1R BLEED TM SENSOR 2 L BLEED TM SENSOR 2 R	150 FH 150 FH 150 FH 150 FH
TAKEOFF CONFIG FLAPS	150 FH
AIR / GROUND SENSOR PSEU ARINC BUS	150 FH 150 FH
GEAR XFER HYD QTY SIGNAL	MMEL 32–51–02
MLG L UP SENSOR MLG R UP SENSOR	150 FH 150 FH
TAILSKID CONTROL	MMEL 32–71–01
DOOR R ENG RUN RLY	3000 FH
ENG X EEC C1*[1]	TASK 73-00-00-700-801-G00 *[2]
ENG X EEC C2*[1]	TASK 73-00-00-700-802-G00
ENG X REVERSER SENSOR	300 FH
ENG X REVERSER INTERLOCK	300 FH

*[1] For allowable repair time limits for ENG X EEC C1 and ENG X EEC C2 SMT messages, see the applicable AMM Task.

*[2] If both EEC software are version 5.2 or higher, Scheduled Maintenance Task for Short-Time Fault interrogation is not required prior to each ETOPS departure. This task is still required per the scheduled maintenance task requirements in the Maintenance Planning Data (MPD) document to check for EEC Short-Time faults.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ZONE 100 - LOWER FUSELAGE - MAINTENANCE PRACTICES

1. General

A. This procedure have the tasks for the internal and external zonal inspections.

TASK 05-41-01-210-801

2. EXTERNAL - ZONAL (GVI): Lower Fuselage

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
110	Subzone - Body Station 130 to Station 396
120	Subzone - Body Station 396 to Body Station 540
130	Subzone - Body Station 540.00 to Body Station 727.00
140	Subzone - Body Station 727.00 to Body Station 1016.00

B. Access Panels

Number	Name/Location
112A	Forward Access Door

C. Zonal Inspection

SUBTASK 05-41-01-010-031

(1) Open this access panel:

Number	Name/Location
112A	Forward Access Door

NOTE: Open forward access door.

SUBTASK 05-41-01-210-001

(2) Perform an external zonal inspection (GVI) of the lower fuselage. The nose landing gear wheel well and main landing gear wheel well are also included. Inspection is accomplished from the ground, without the use of stands or ladders. No additional access panels required.


SUBTASK 05-41-01-410-031

(3) Close this access panel:

Number	Name/Location
112A	Forward Access Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

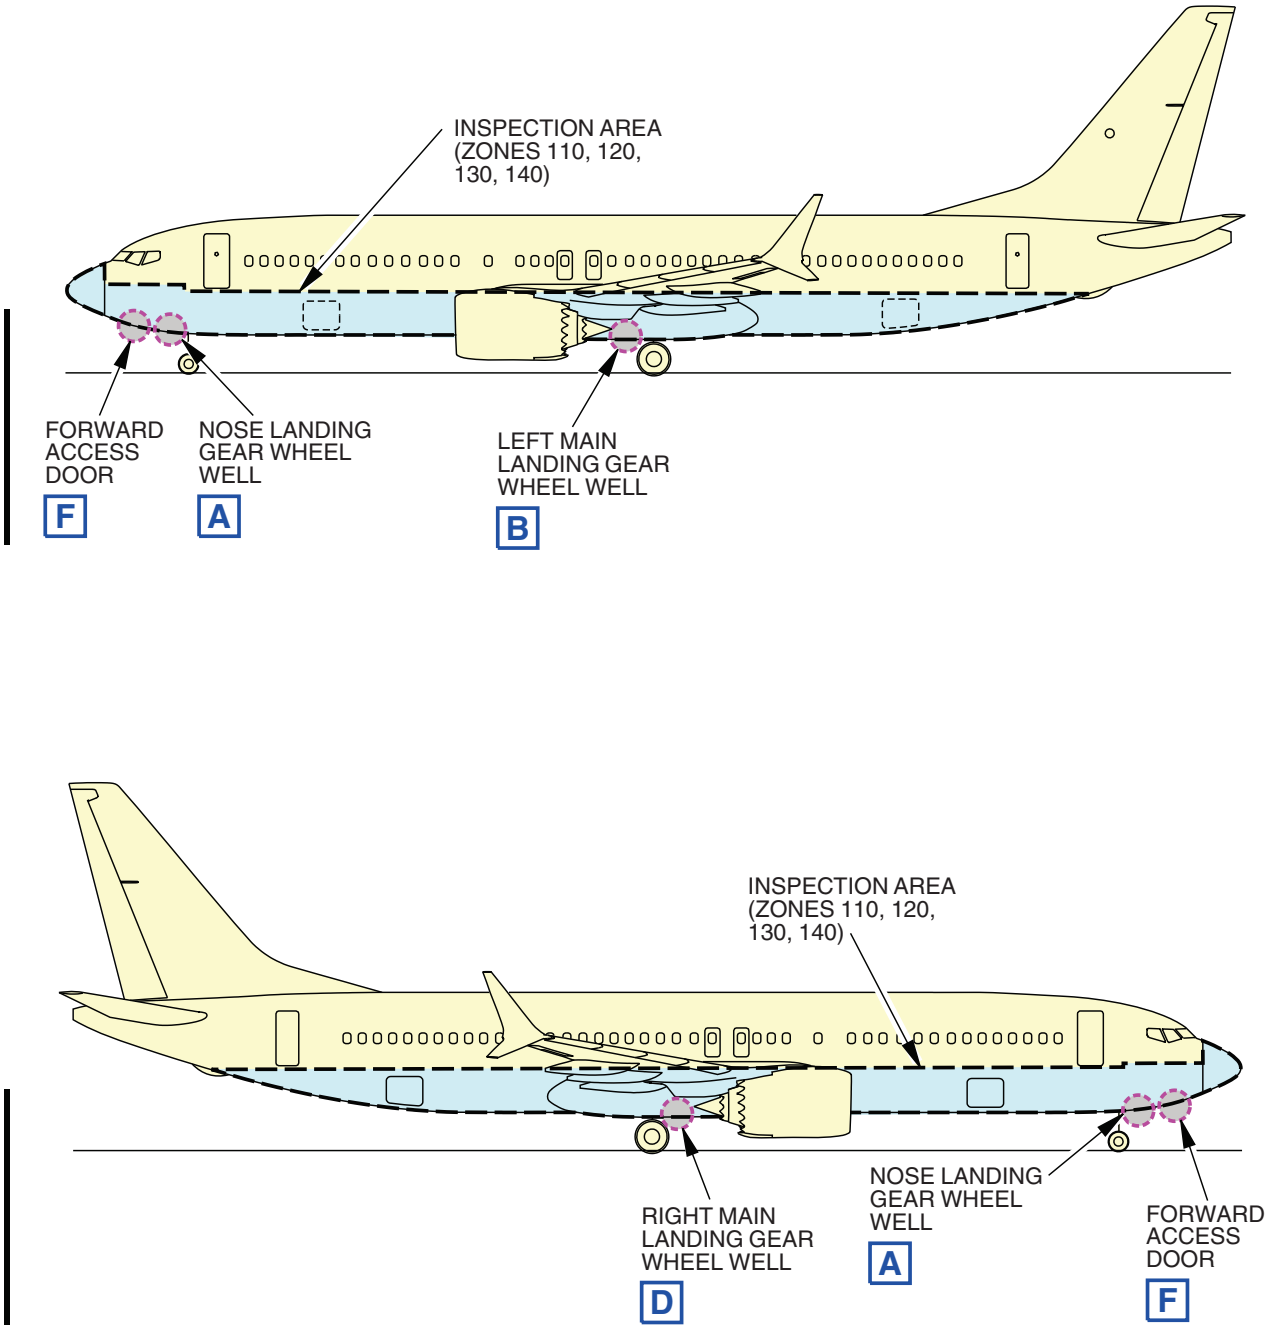


Lower Half of Fuselage General Visual (External)
Figure 201/05-41-01-990-801 (Sheet 1 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

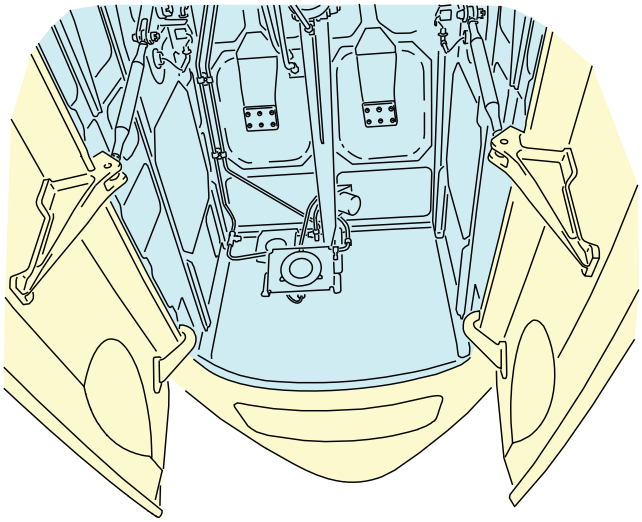

NOSE LANDING GEAR WHEEL WELL
(VIEW IN THE FORWARD DIRECTION)

A

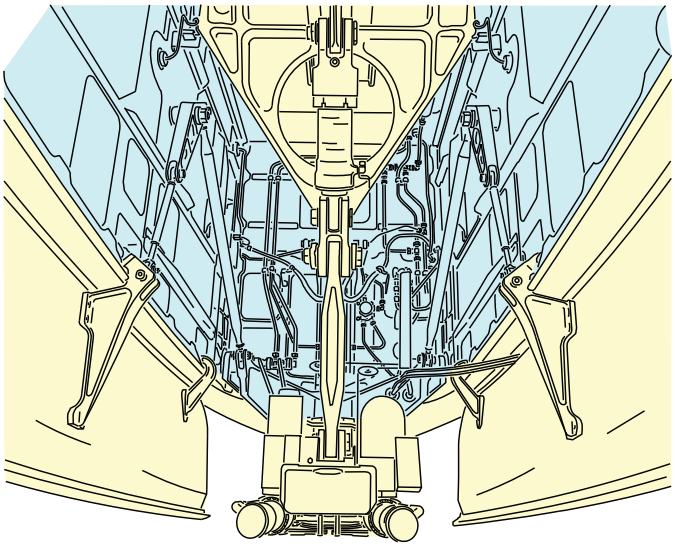

NOSE LANDING GEAR WHEEL WELL
(VIEW IN THE AFT DIRECTION)


A

2410073 S00061524873_V1

Lower Half of Fuselage General Visual (External)
Figure 201/05-41-01-990-801 (Sheet 2 of 5)


I

ECCN 9E991 BOEING PROPRIETARY - See title page for details

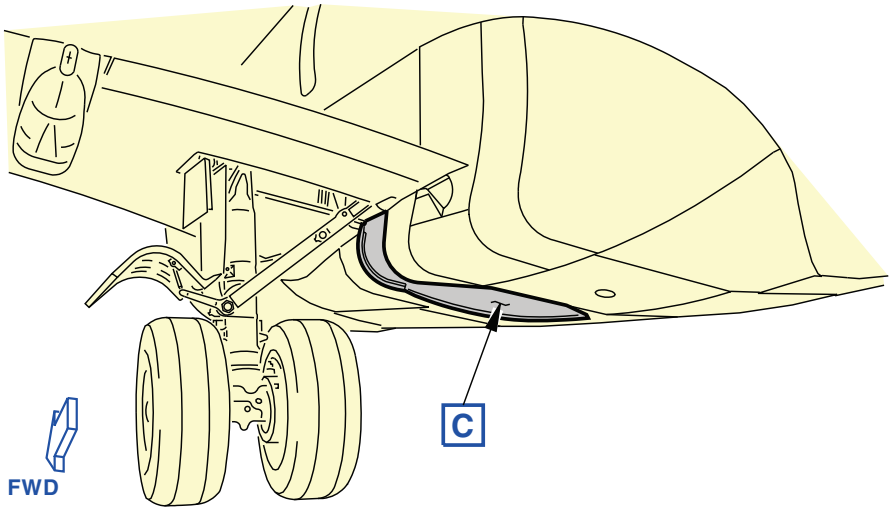

LEFT MAIN LANDING GEAR WHEEL WELL

B

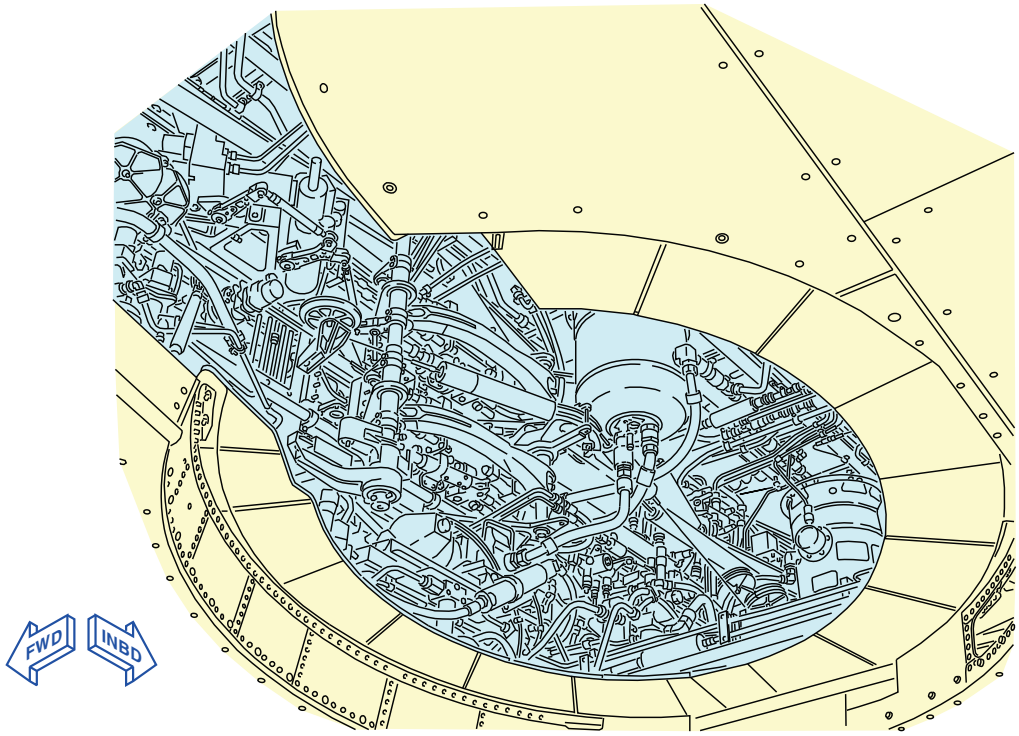


C

2410074 S00061524874_V1


Lower Half of Fuselage General Visual (External)
Figure 201/05-41-01-990-801 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

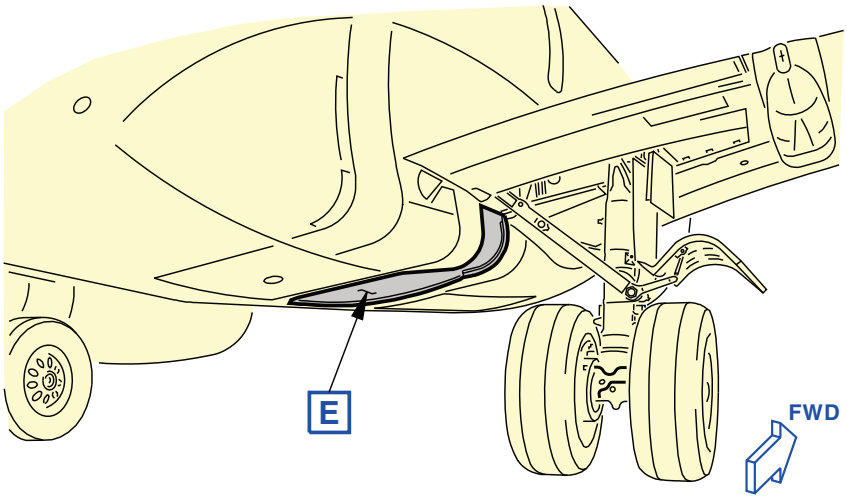

RIGHT MAIN LANDING GEAR WHEEL WELL

D

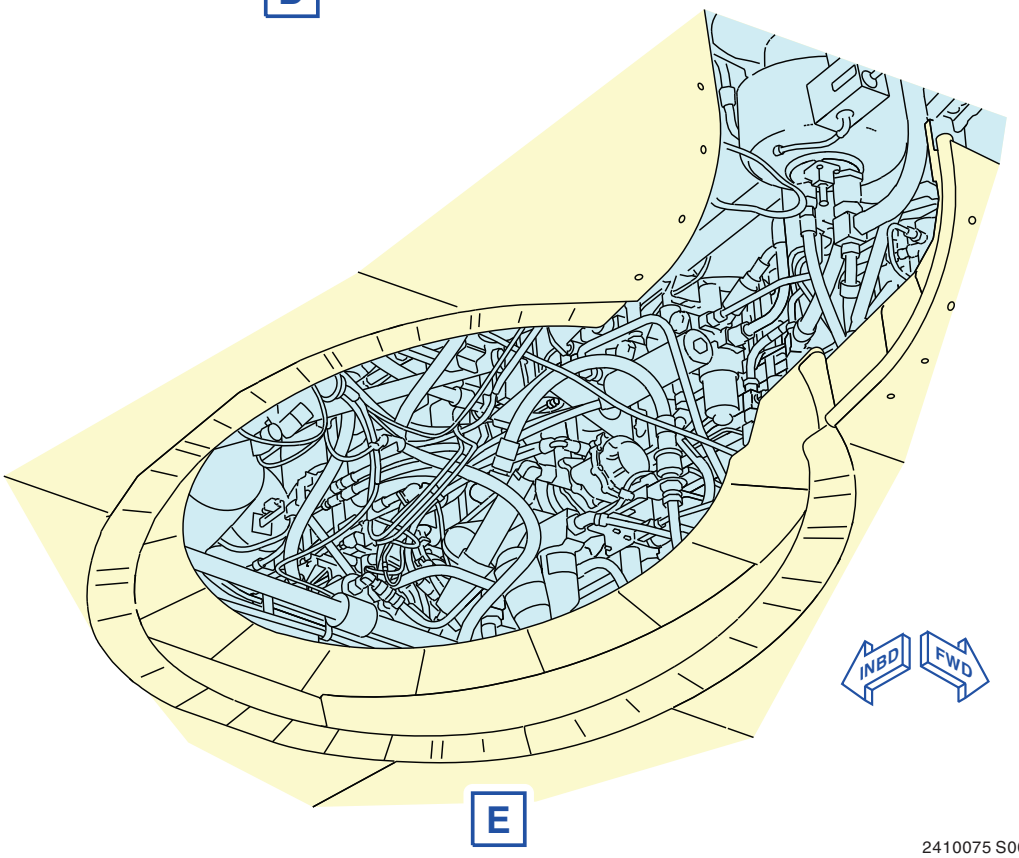


2410075 S00061524875_V1

Lower Half of Fuselage General Visual (External)
Figure 201/05-41-01-990-801 (Sheet 4 of 5)

I

ECCN 9E991 BOEING PROPRIETARY - See title page for details

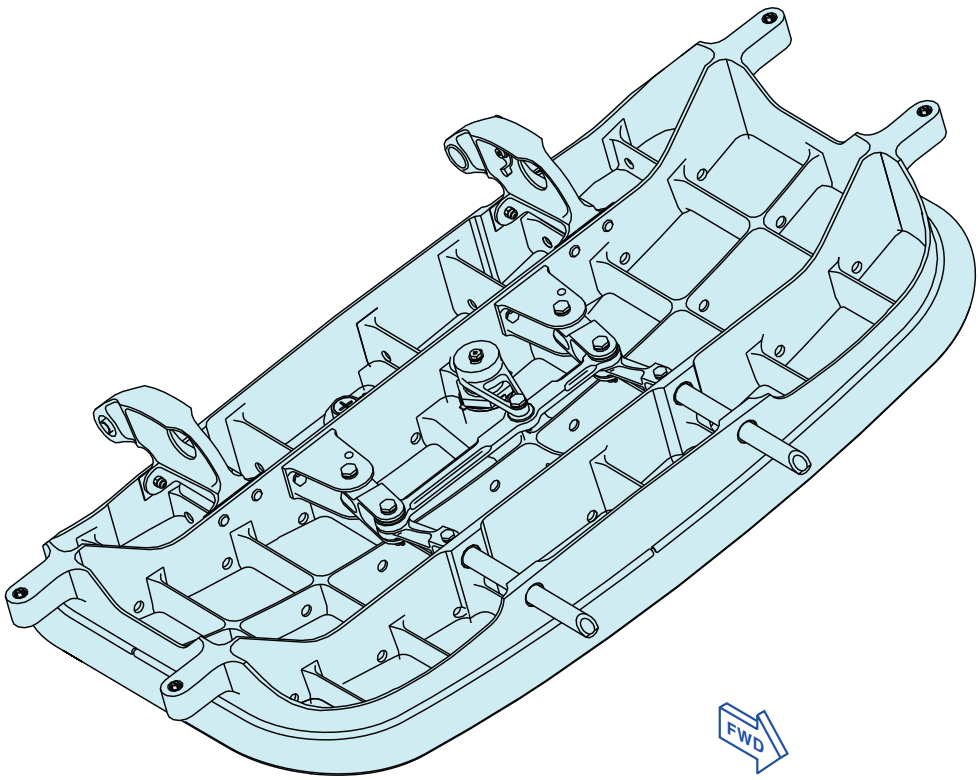

FORWARD ACCESS DOOR

F

3135941 S0000863396_V1

Lower Half of Fuselage General Visual (External)
Figure 201/05-41-01-990-801 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-833

3. EXTERNAL - ZONAL (GVI): Radome

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
111	Radome


B. Zonal Inspection

SUBTASK 05-41-01-210-034

(1) Perform an external zonal inspection (GVI) of the Radome.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

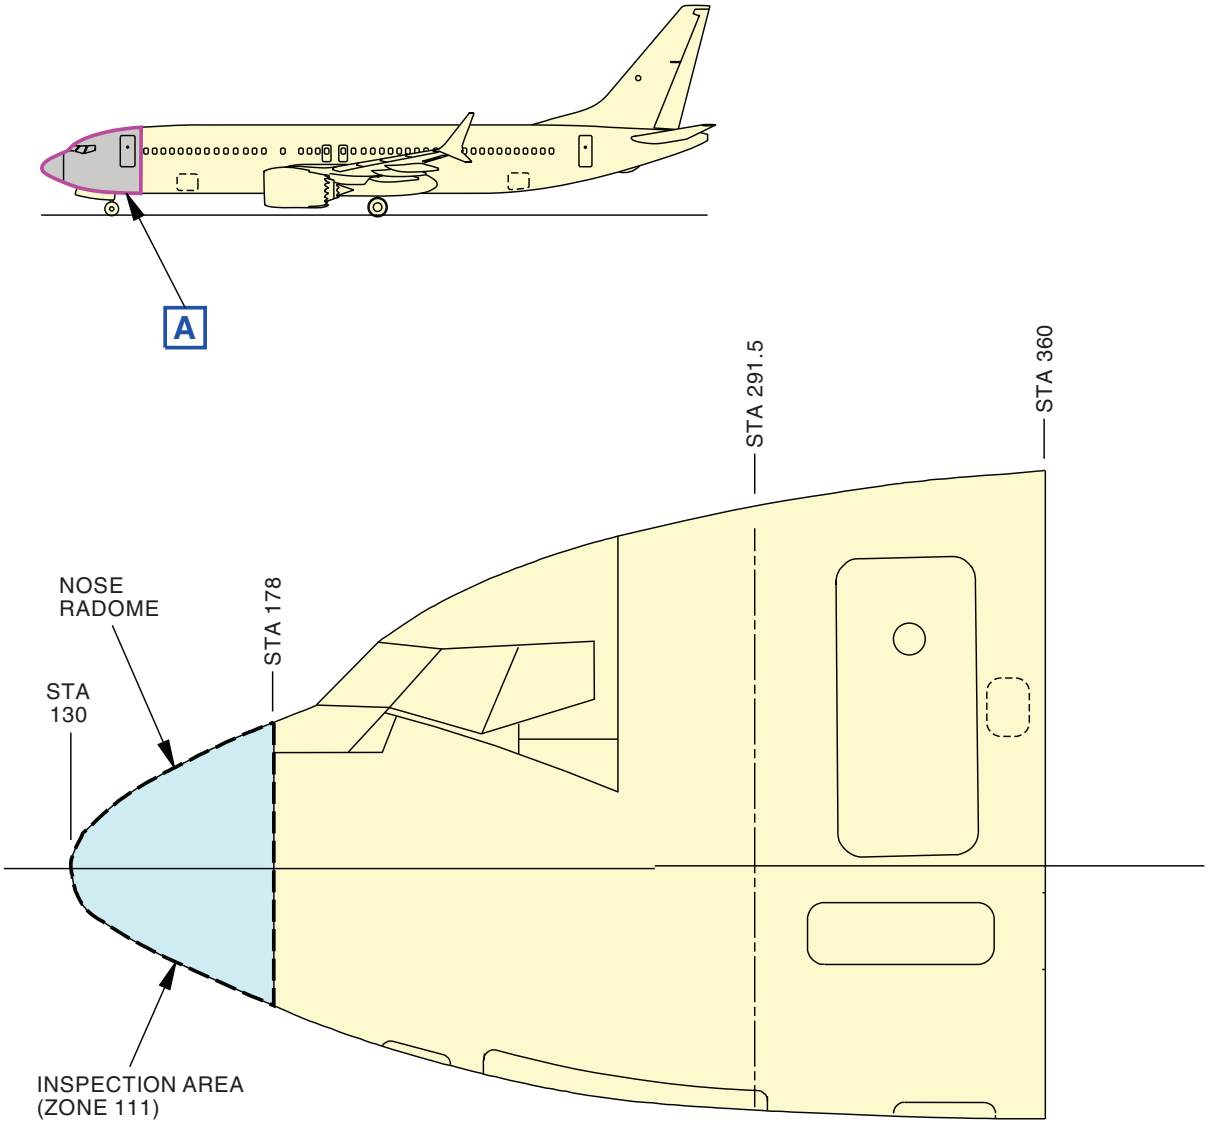

2545589 S0000601073_V1

Radome General Visual External
Figure 202/05-41-01-990-831

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-802

4. INTERNAL - ZONAL (GVI): Radome

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
53-52-00-010-801	Nose Radome Open (P/B 201)
53-52-00-410-801	Nose Radome Close (P/B 201)

B. Location Zones

Zone	Area
111	Radome

C. Zonal Inspection

SUBTASK 05-41-01-010-001

(1) Do this task: Nose Radome Open, TASK 53-52-00-010-801.

SUBTASK 05-41-01-210-002


(2) Perform an internal zonal inspection (GVI) of the Radome.

SUBTASK 05-41-01-410-001

(3) Do this task: Nose Radome Close, TASK 53-52-00-410-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

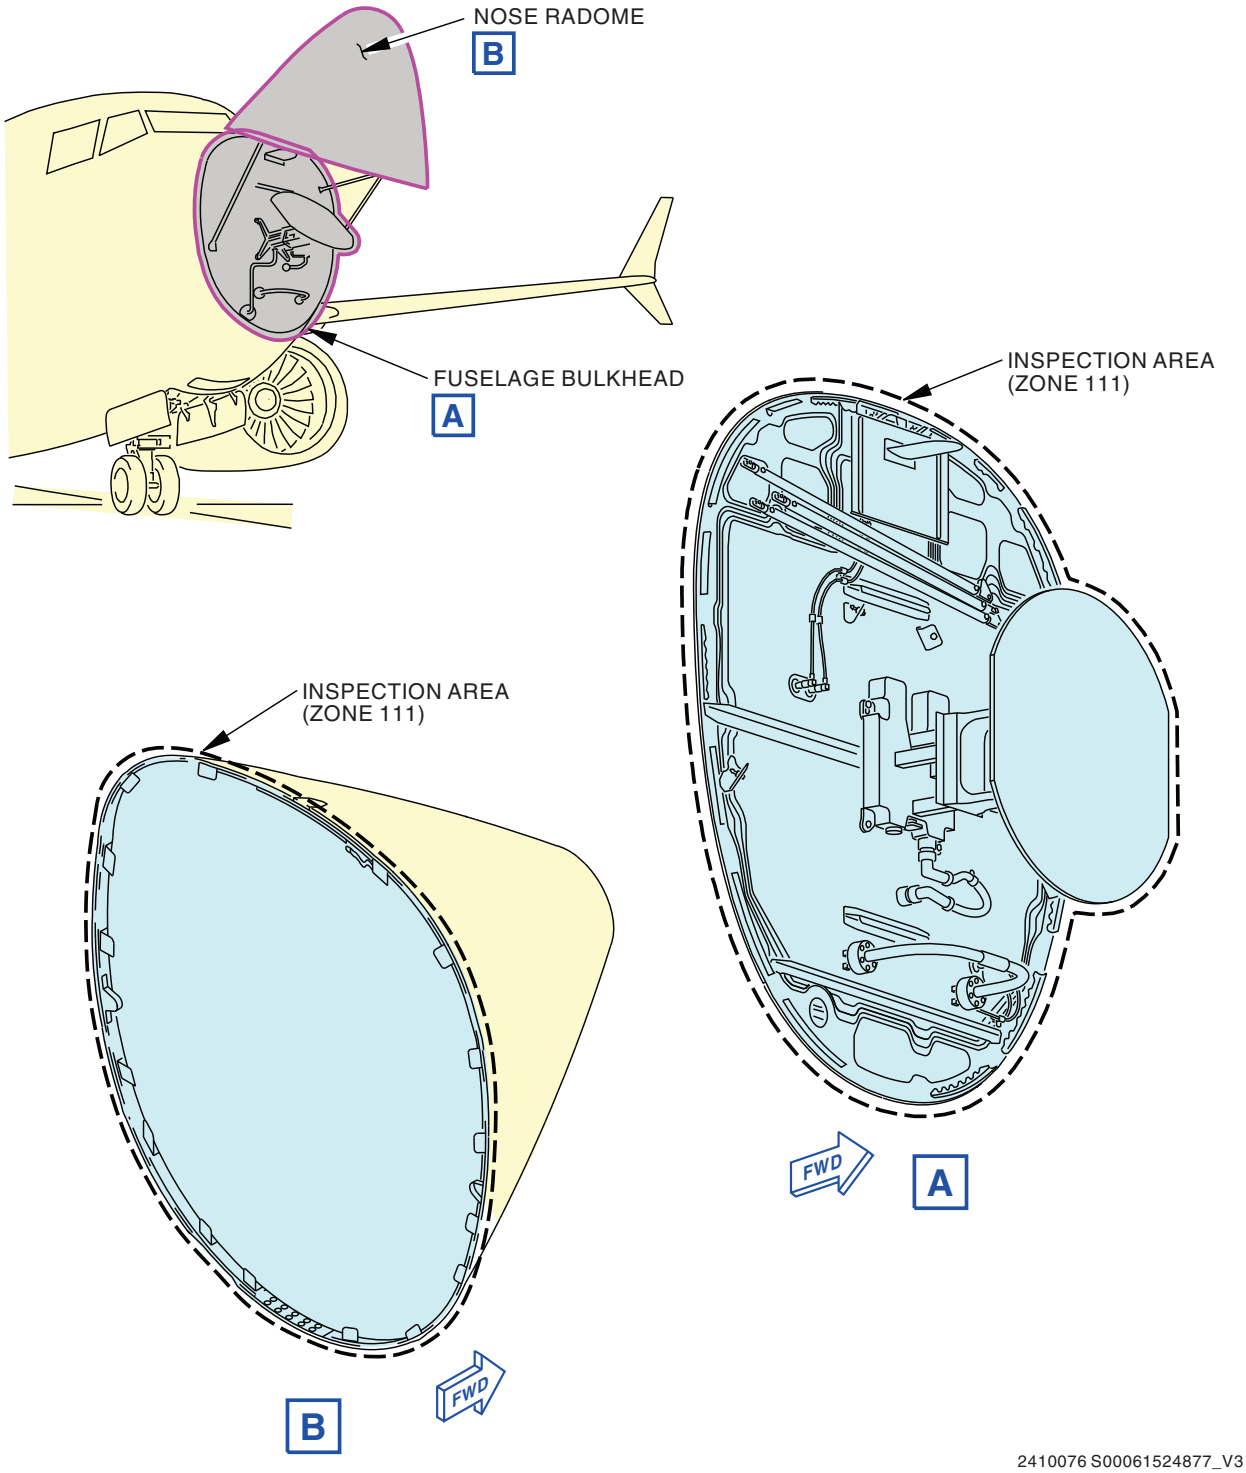

Nose Radome (Internal) General Visual Inspection
Figure 203/05-41-01-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

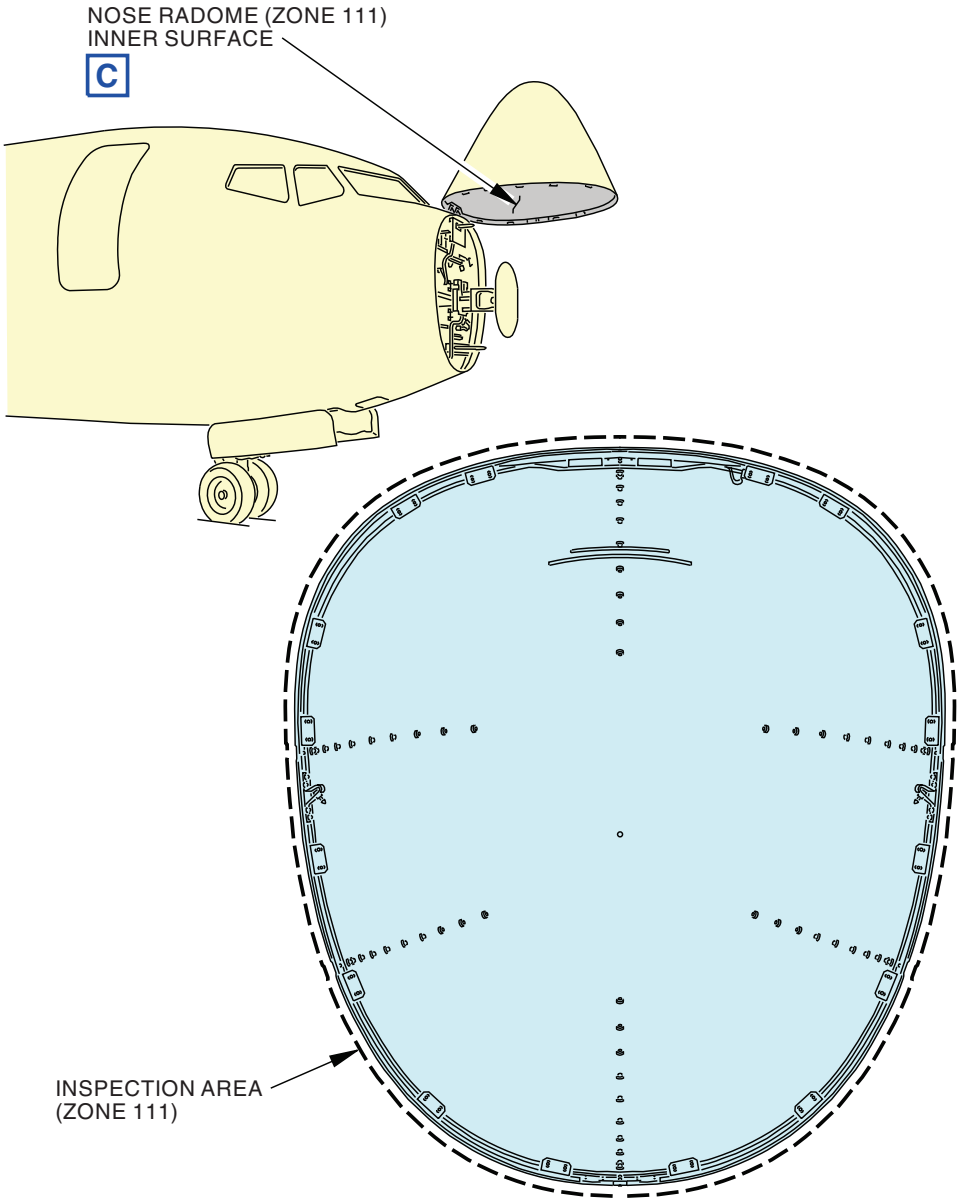

2809305 S0000645882_V1

Nose Radome (Internal) General Visual Inspection
Figure 203/05-41-01-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-834

5. EXTERNAL - ZONAL (GVI): Area Forward of Nose Wheel Well

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
112	Area Forward of Nose Landing Gear Wheel Well


B. Zonal Inspection

SUBTASK 05-41-01-210-035

(1) Perform an external zonal inspection (GVI) of the Area Forward of the Nose Wheel Well.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

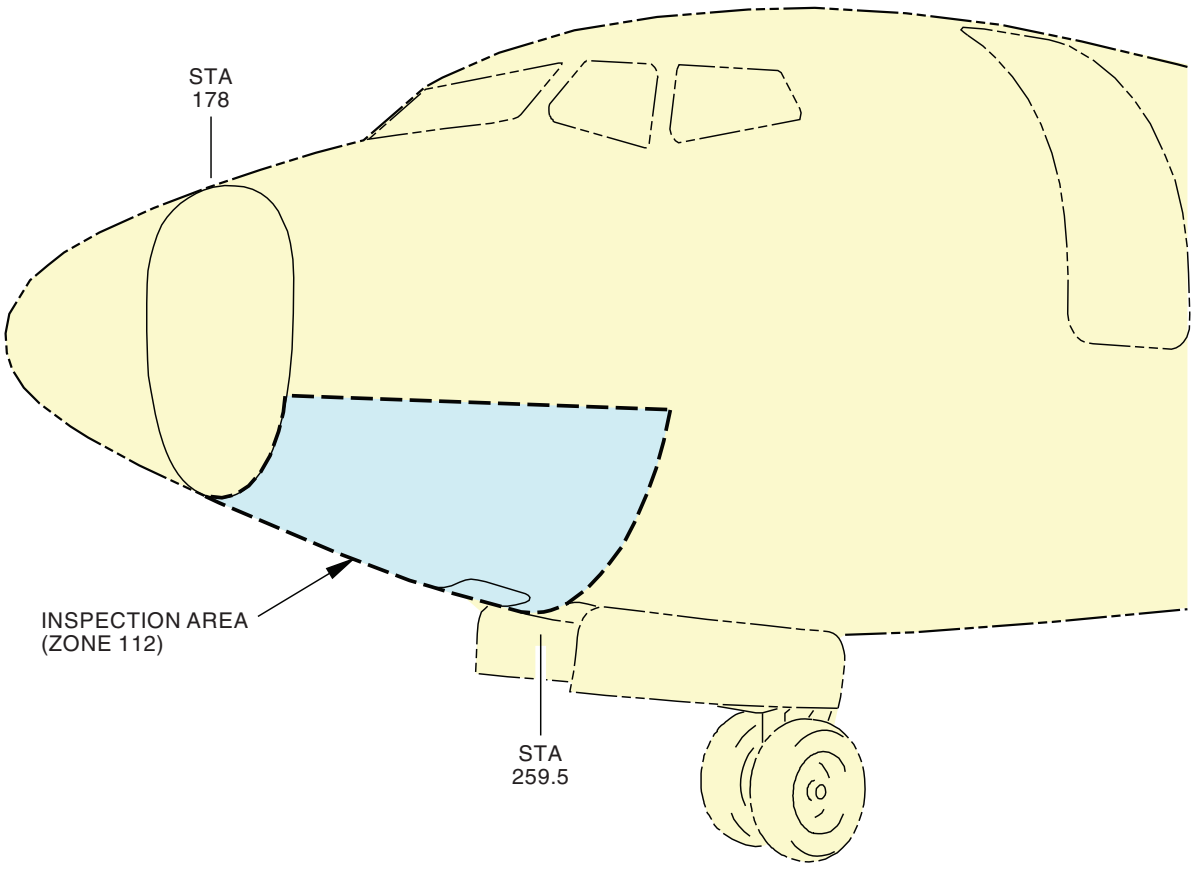

2545592 S0000601076_V1

Area Forward of the Nose Wheel Well General Visual Inspection External
Figure 204/05-41-01-990-832

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-803

6. INTERNAL - ZONAL (GVI): Area Forward of Nose Wheel Well

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
112	Area Forward of Nose Landing Gear Wheel Well

D. Access Panels

Number	Name/Location
112A	Forward Access Door

E. Zonal Inspection

SUBTASK 05-41-01-010-002

(1) Open this access panel:

Number	Name/Location
112A	Forward Access Door

SUBTASK 05-41-01-210-003

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the area forward of the nose wheel well - Section 41, Sta 178 to Sta 224.8. (EZAP)

SUBTASK 05-41-01-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-002


(5) Close this access panel:

Number	Name/Location
112A	Forward Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

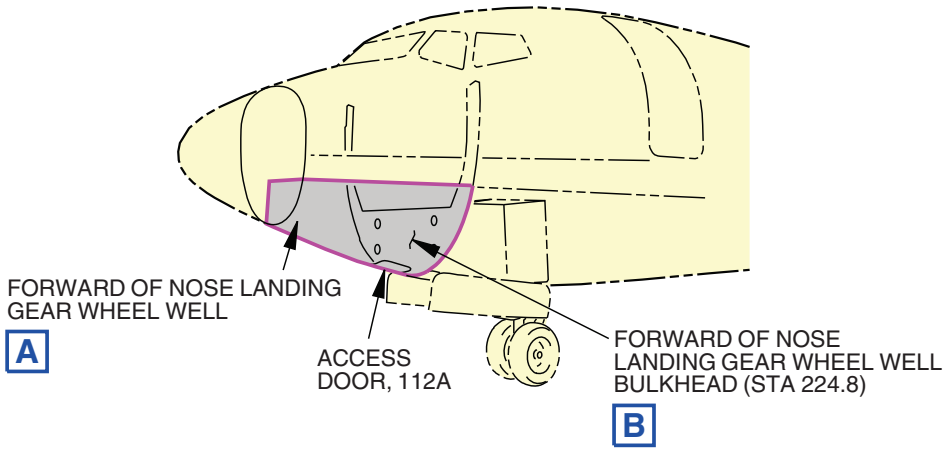

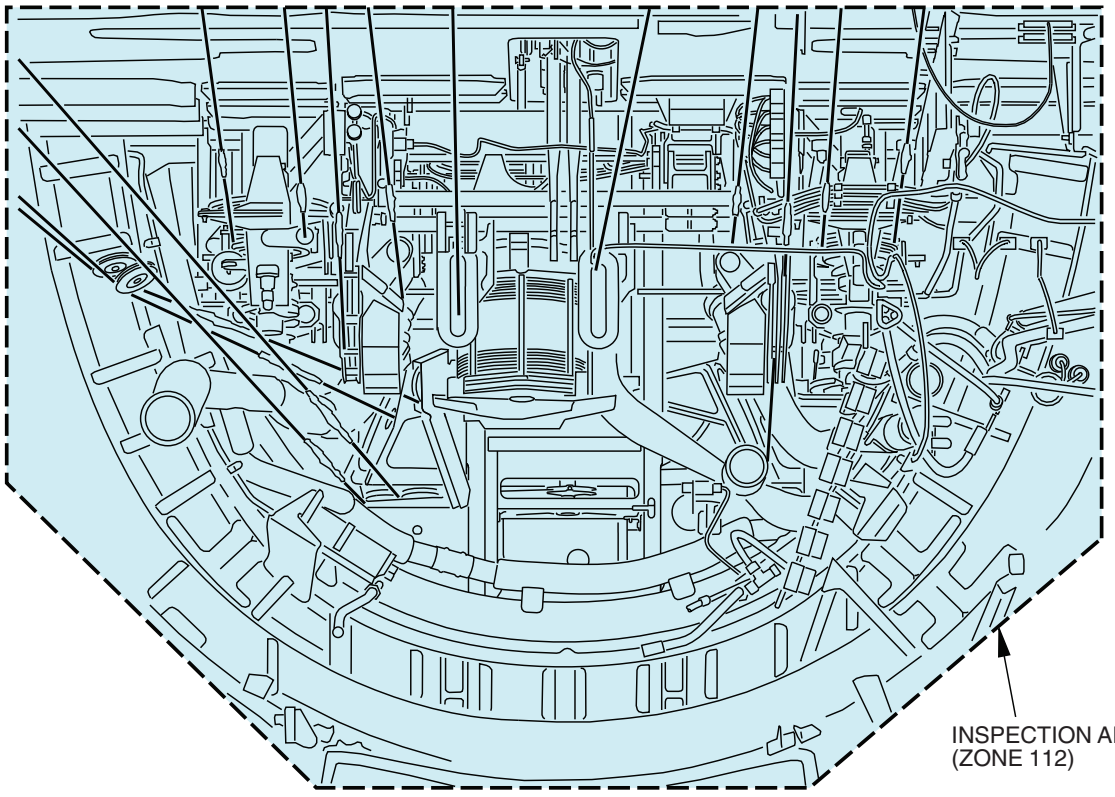


FORWARD OF NOSE LANDING GEAR WHEEL WELL (VIEW IN THE FORWARD DIRECTION)

A

2410077 S00061524879_V2

Forward of Nose Landing Gear Wheel Well General Visual (Internal)
Figure 205/05-41-01-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

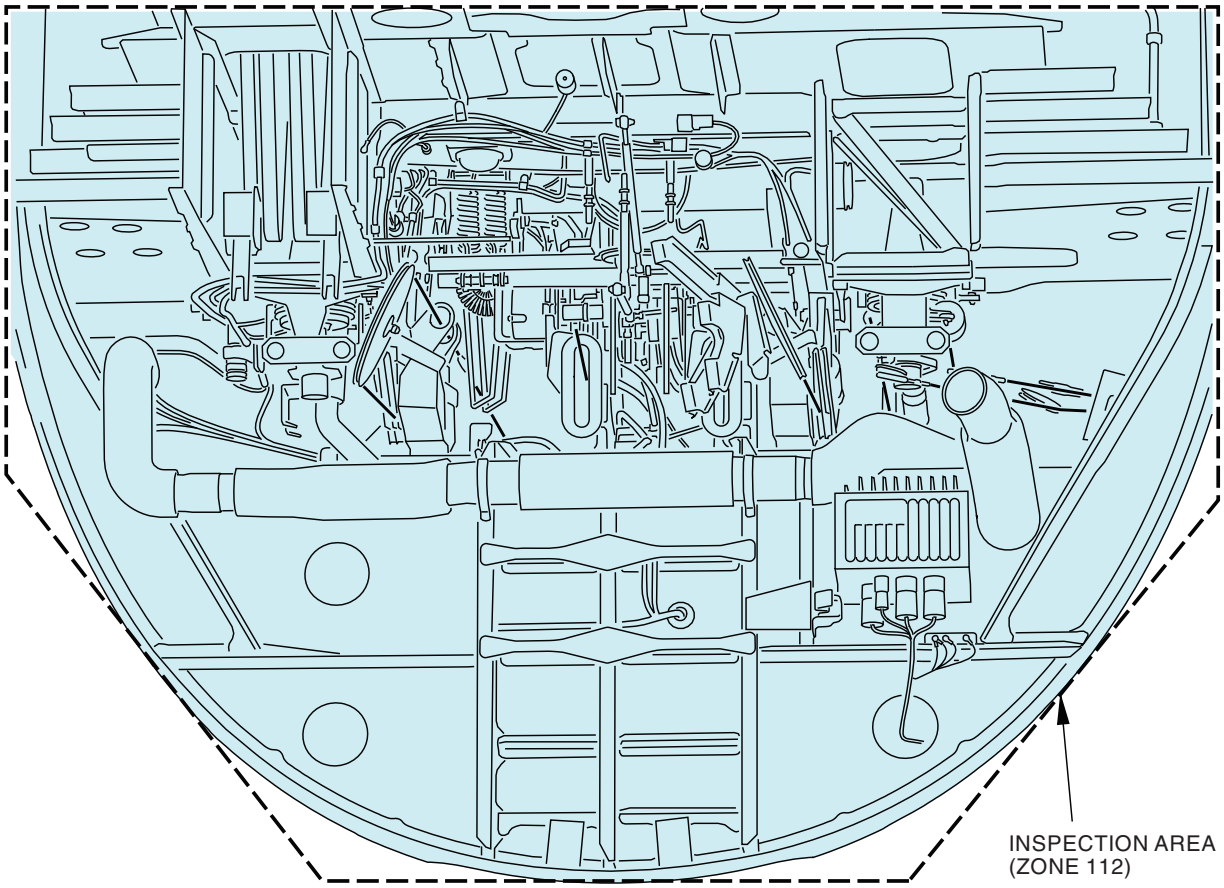

**FORWARD OF NOSE LANDING GEAR WHEEL WELL BULKHEAD (STA 224.8)
(VIEW IN THE AFT DIRECTION)**

B

2410078 S00061524880_V1

**Forward of Nose Landing Gear Wheel Well General Visual (Internal)
Figure 205/05-41-01-990-803 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-835

7. EXTERNAL - ZONAL (GVI): Area Above and Outboard of Nose Wheel Well

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
113	Area Above and Outboard of Nose Landing Gear Wheel Well - Left
114	Area Above and Outboard of Nose Landing Gear Wheel Well - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-054

(1) Perform an external zonal inspection (GVI) of the area above and outboard of the Nose Wheel Well.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

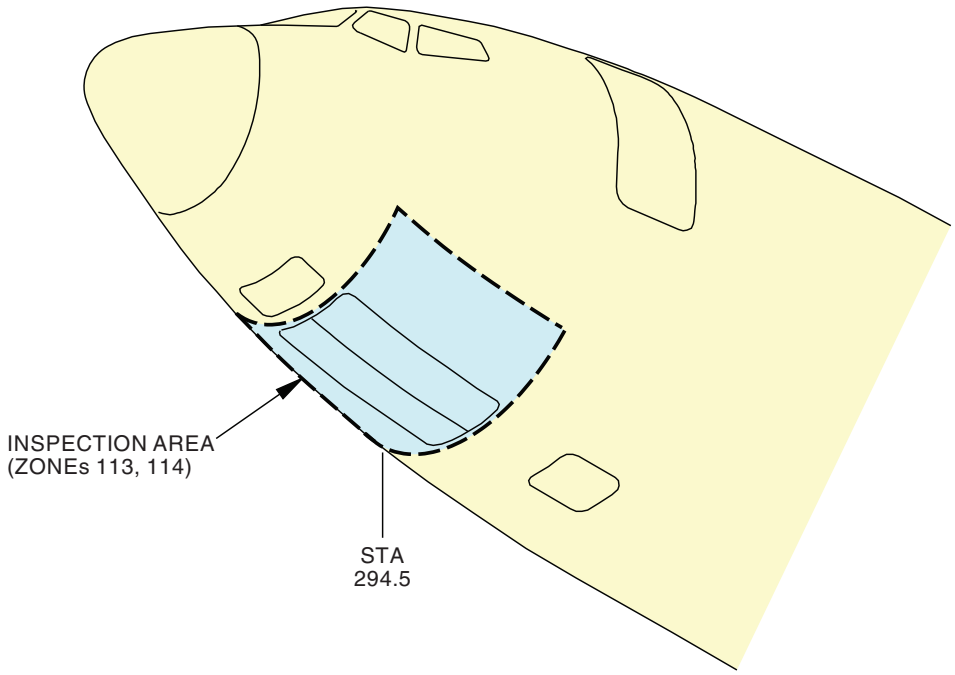

2545597 S0000601086_V1

Area Above and Outboard of Nose Wheel Well General Visual (External)
Figure 206/05-41-01-990-853

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-804

8. INTERNAL - ZONAL (GVI): Area Above and Outboard of Nose Wheel Well

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
05-51-91-790-801	Cabin Pressure Leak Test (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
53-14-01-020-801	Nose Wheel Well Access Panels Removal (P/B 401)
53-14-01-420-801	Nose Wheel Well Access Panels Installation (P/B 401)

C. Location Zones

Zone	Area
113	Area Above and Outboard of Nose Landing Gear Wheel Well - Left
114	Area Above and Outboard of Nose Landing Gear Wheel Well - Right

D. Access Panels

Number	Name/Location
113AC	Fwd Nose Wheel Well Upper Access Panel
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

E. Zonal Inspection

SUBTASK 05-41-01-010-003

(1) Open these access panels:

Number	Name/Location
113AC	Fwd Nose Wheel Well Upper Access Panel
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

(a) Do this task: Nose Wheel Well Access Panels Removal, TASK 53-14-01-020-801.

SUBTASK 05-41-01-210-004

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(3) Perform an internal zonal inspection (GVI) of the area above and outboard of the Nose Wheel Well. (EZAP)

SUBTASK 05-41-01-910-003

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-01-410-003

(5) Close these access panels:


Number	Name/Location
113AC	Fwd Nose Wheel Well Upper Access Panel
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel


(a) Do this task: Nose Wheel Well Access Panels Installation, TASK 53-14-01-420-801.

(b) Do this task: Cabin Pressure Leak Test, TASK 05-51-91-790-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

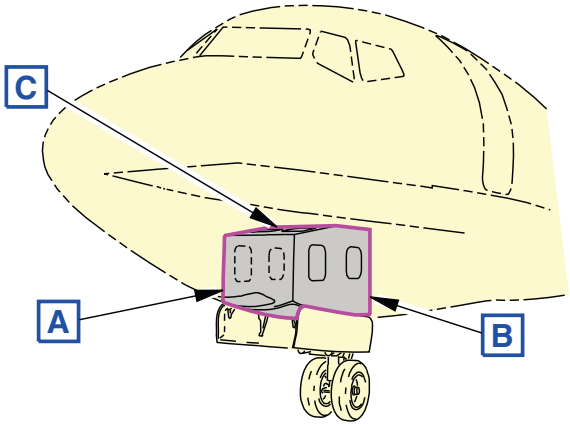

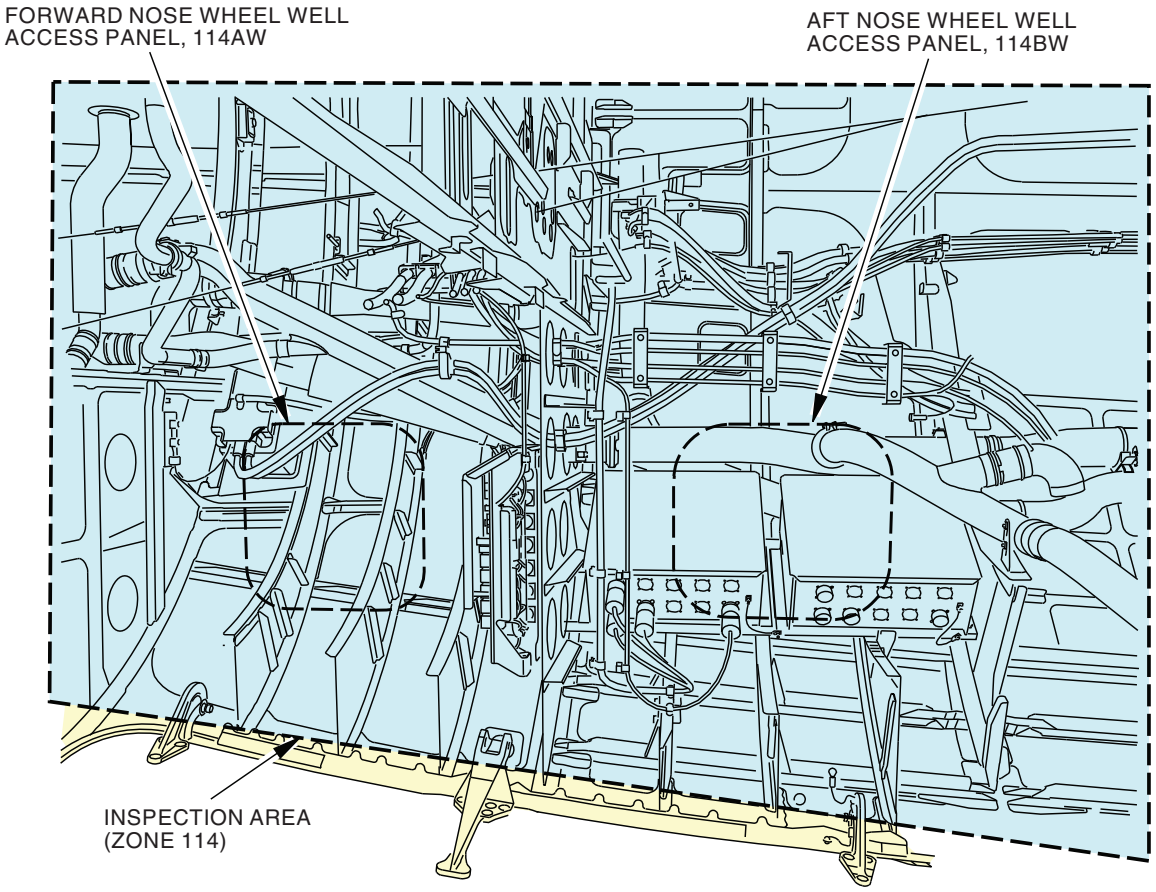


**NOSE LANDING GEAR WHEEL WELL
(OUTBOARD, RIGHT SIDE)**

A

2410079 S00061524882_V2


**Above and Outboard of the Nose Landing Gear Wheel Well General Visual (Internal)
Figure 207/05-41-01-990-804 (Sheet 1 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

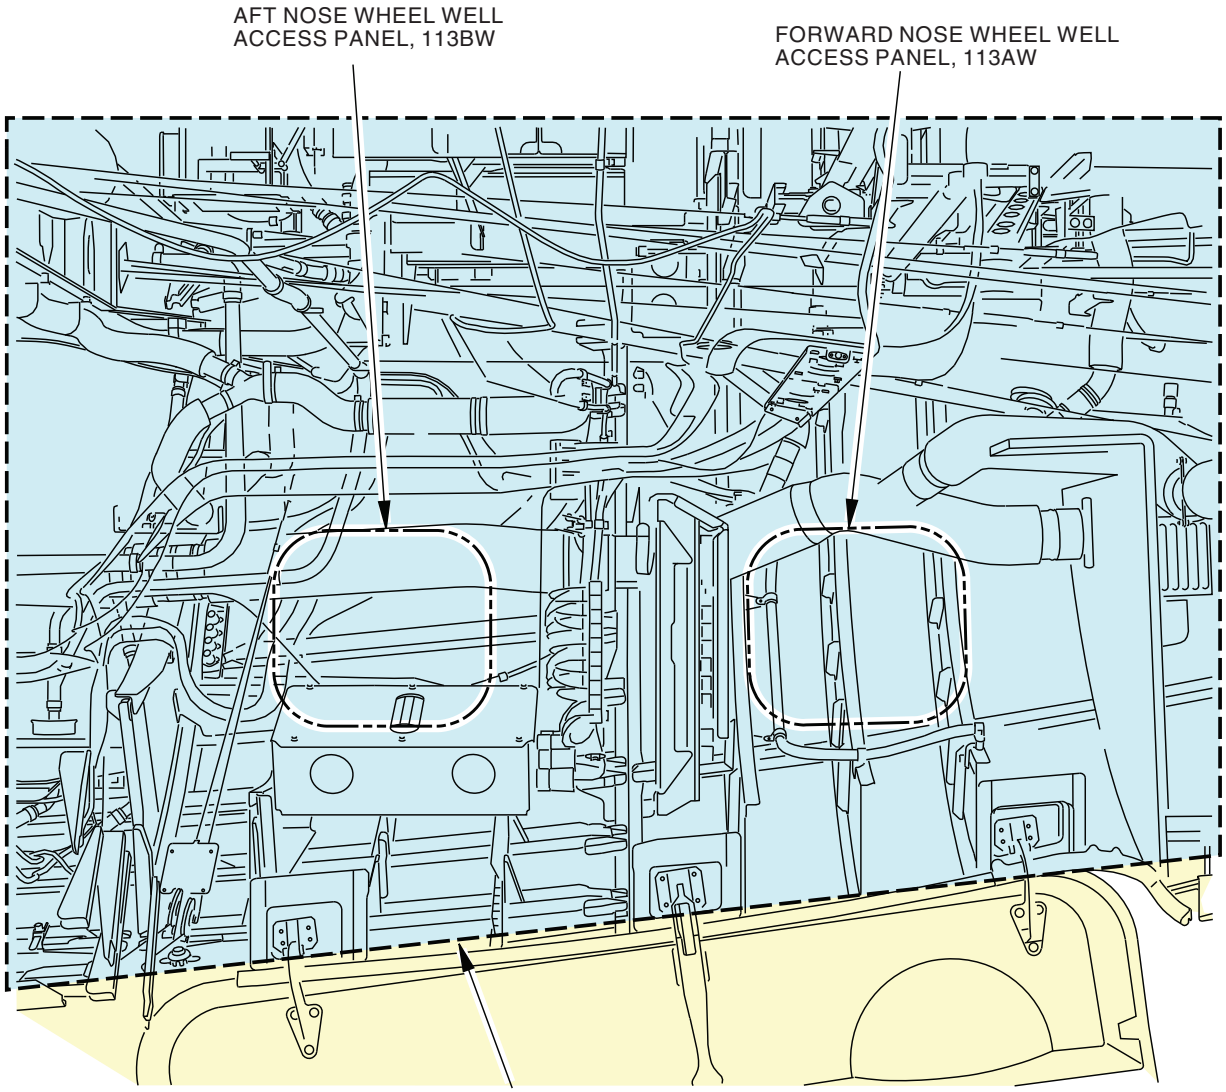

Above and Outboard of the Nose Landing Gear Wheel Well General Visual (Internal)
Figure 207/05-41-01-990-804 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

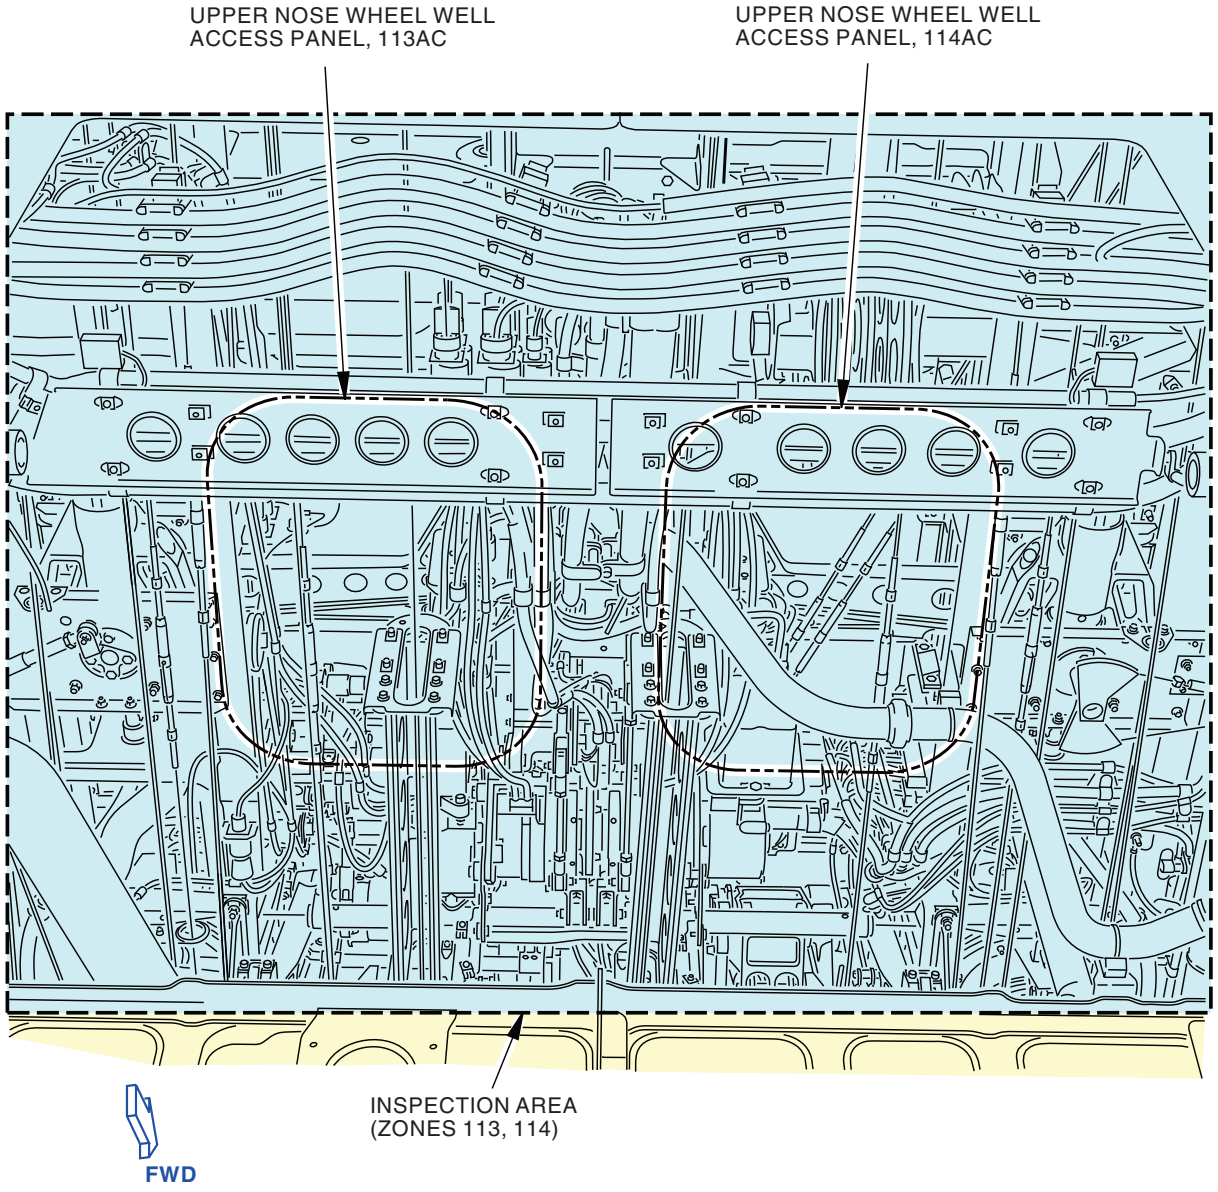

**ABOVE THE NOSE LANDING GEAR WHEEL WELL
(VIEW IN THE UP DIRECTION)**

C

2410081 S00061524884_V1

**Above and Outboard of the Nose Landing Gear Wheel Well General Visual (Internal)
Figure 207/05-41-01-990-804 (Sheet 3 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-831

9. INTERNAL - ZONAL (GVI): Nose Landing Gear Wheel Well

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
115	Nose Landing Gear Wheel Well - Left
116	Nose Landing Gear Wheel Well - Right

D. Zonal Inspection

SUBTASK 05-41-01-210-032

(1) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802


(2) Perform an internal zonal inspection (GVI) of the nose landing gear wheel well. (EZAP)

SUBTASK 05-41-01-910-014

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

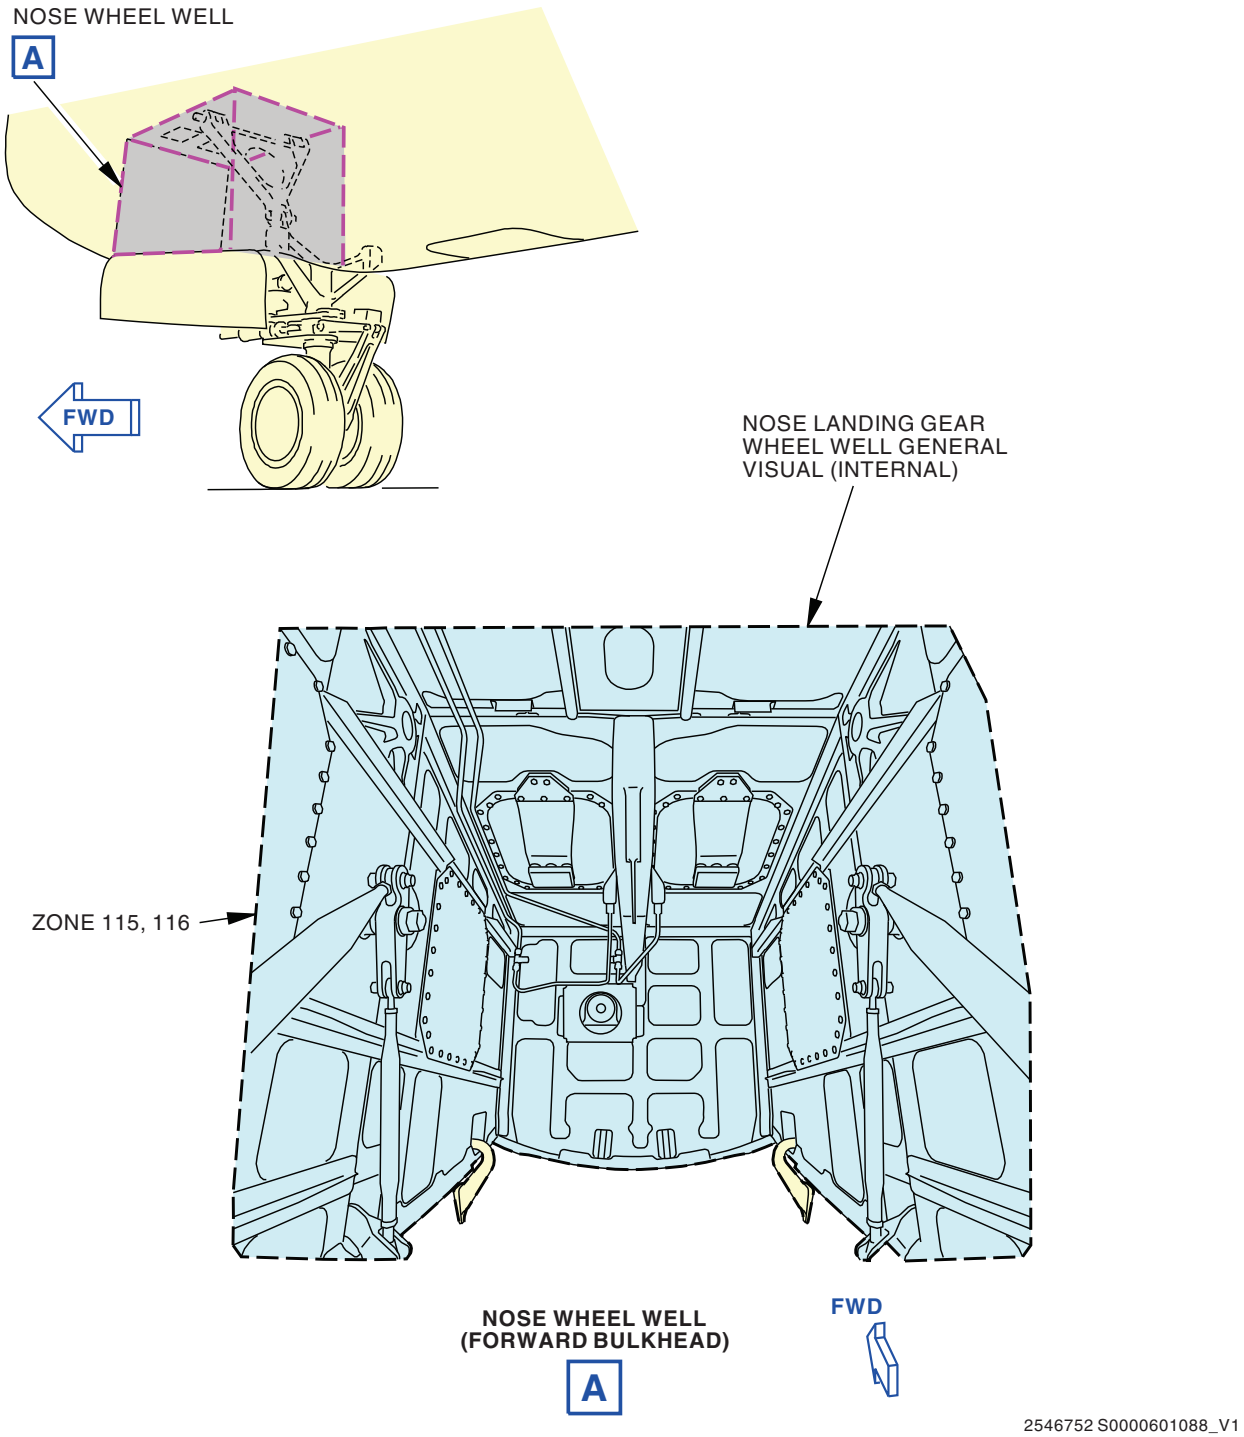

Nose Landing Gear Wheel Well General Visual (Internal)
Figure 208/05-41-01-990-833

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-805

10. INTERNAL - ZONAL (GVI): Electrical and Electronics Compartment

(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door
117BL	Forward Airstair Door

E. Zonal Inspection

SUBTASK 05-41-01-010-004

(1) Open these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
117BL	Forward Airstair Door

NOTE: Forward airstair drip pan access panel must be removed if airstair installed. Access panel 117BL is only for airplanes with airstairs installed.

SUBTASK 05-41-01-210-005

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Electrical and Electronics Compartment. (EZAP)

SUBTASK 05-41-01-910-004

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-01-410-004

(5) Close these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
117BL	Forward Airstair Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

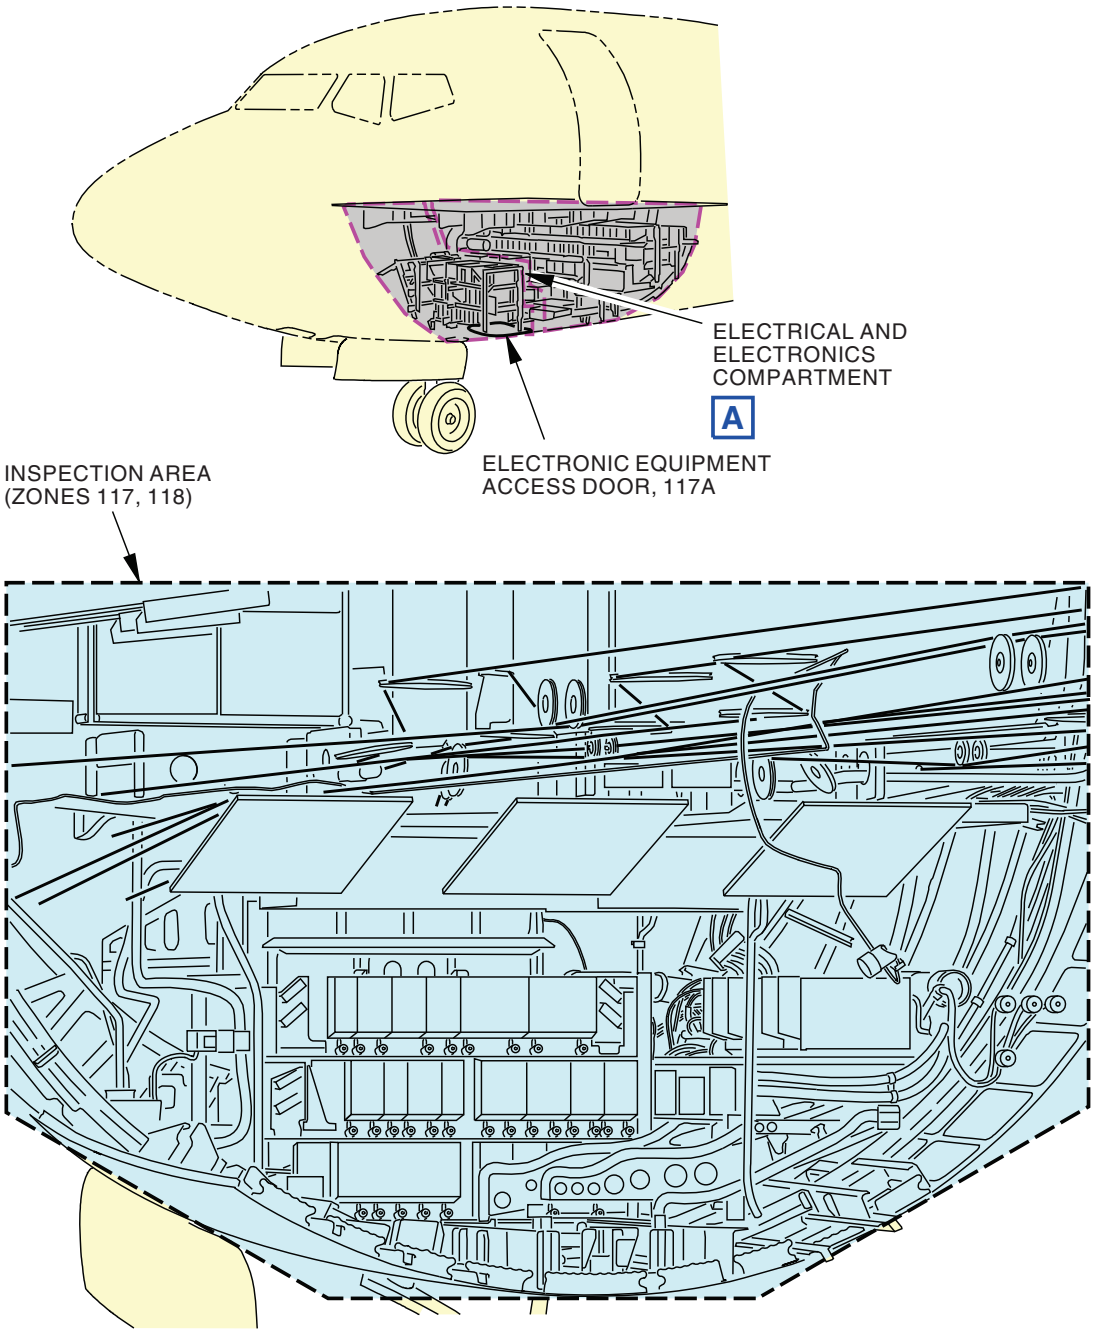


ELECTRICAL AND ELECTRONICS COMPARTMENT
(VIEW IN THE FORWARD DIRECTION)

A

2410082 S00061524886_V1

Electrical and Electronics Compartment General Visual (Internal)
Figure 209/05-41-01-990-805 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

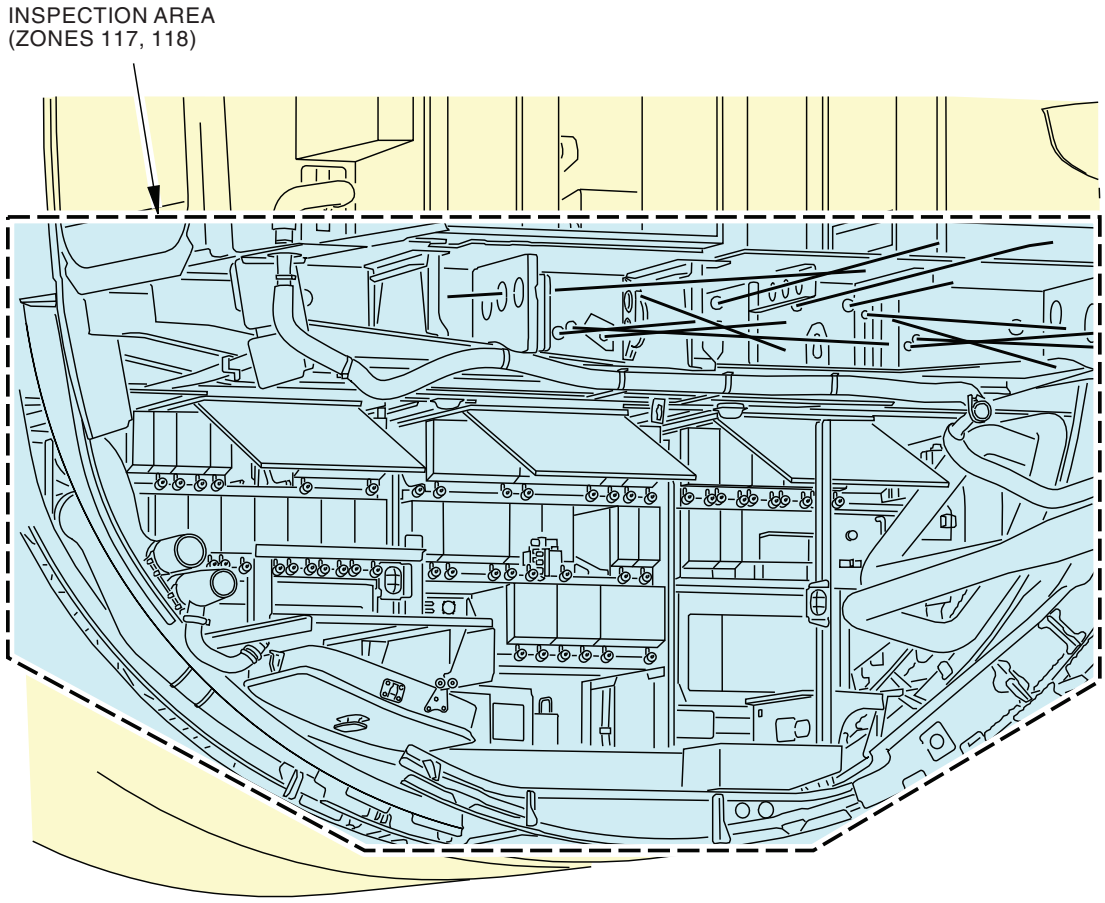

**ELECTRICAL AND ELECTRONICS COMPARTMENT
(VIEW IN THE AFT DIRECTION)**

A

2410083 S00061524887_V1

**Electrical and Electronics Compartment General Visual (Internal)
Figure 209/05-41-01-990-805 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-836

11. EXTERNAL - ZONAL (GVI): Electrical and Electronics Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-036

(1) Perform an external zonal inspection (GVI) of the Electrical and Electronics Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

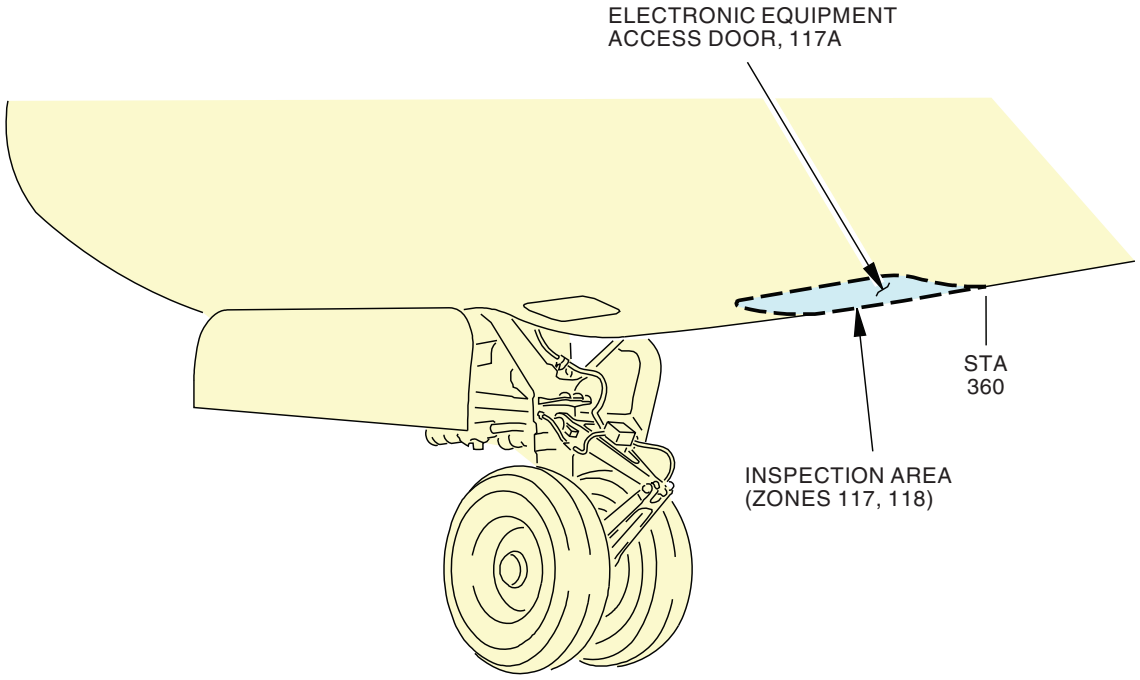

2545608 S0000601089_V1

Electrical and Electronics Compartment General Visual External
Figure 210/05-41-01-990-834

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-806

12. INTERNAL - ZONAL (GVI): Electrical and Electronics Compartment Access Door

(Figure 211)

A. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

B. Access Panels

Number	Name/Location
117AW	Equipment Access Door Cover

C. Zonal Inspection

SUBTASK 05-41-01-010-005

(1) Open this access panel:

Number	Name/Location
117AW	Equipment Access Door Cover

SUBTASK 05-41-01-210-006

(2) Do a General Visual inspection of the electrical and electronics compartment access door.


SUBTASK 05-41-01-410-005

(3) Close this access panel:

Number	Name/Location
117AW	Equipment Access Door Cover

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

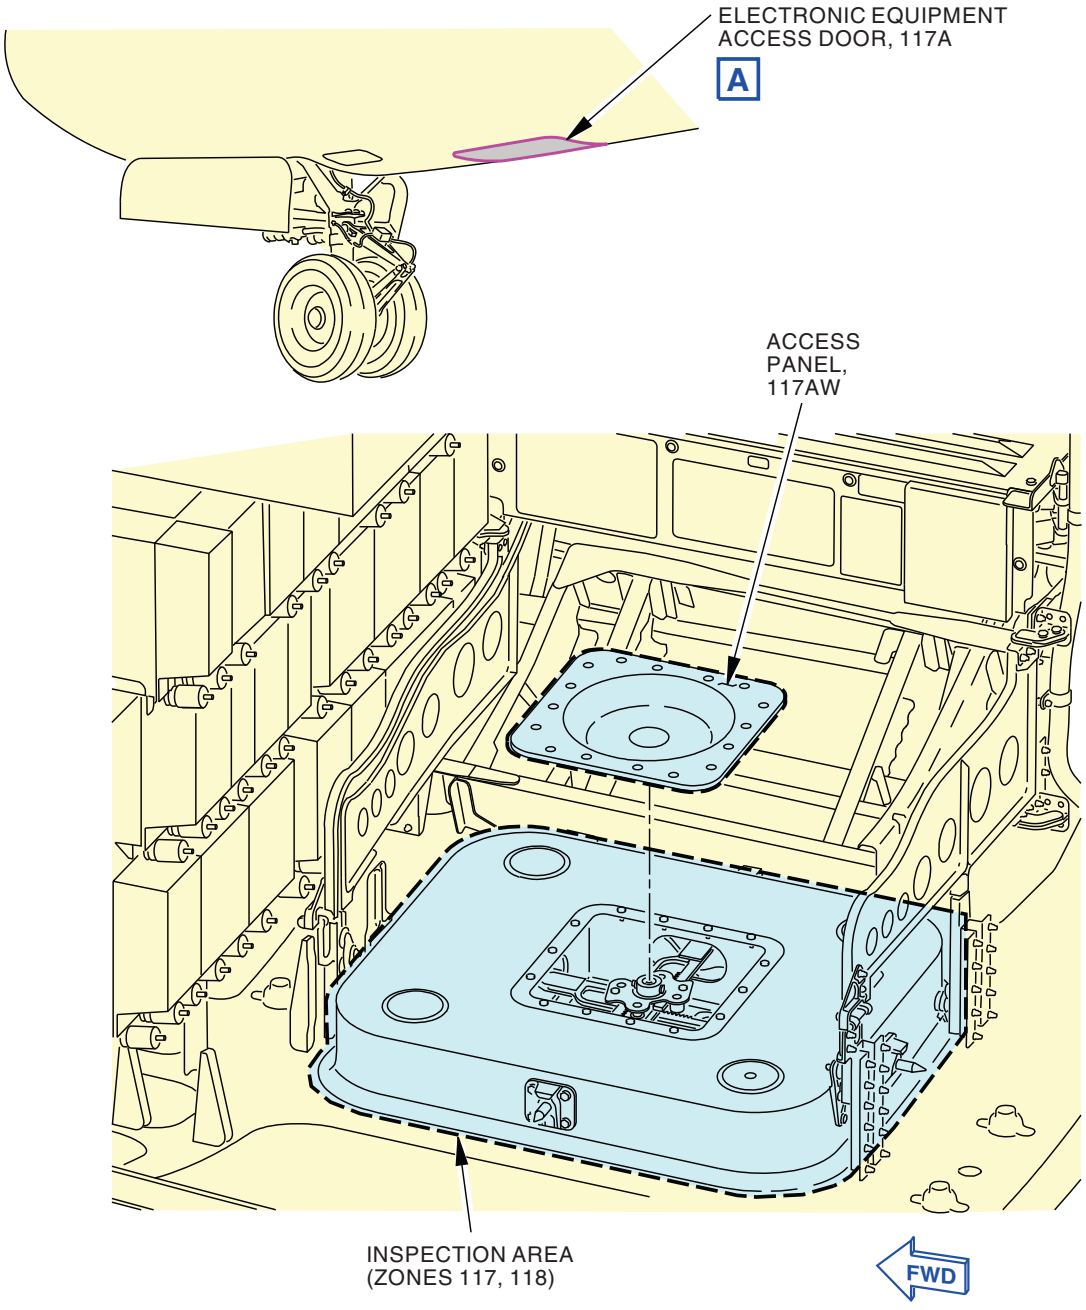

ELECTRICAL EQUIPMENT ACCESS DOOR, 117A

A

2410084 S00061524889_V1

Electrical Equipment Access Door General Visual (Internal)
Figure 211/05-41-01-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-807

13. INTERNAL - ZONAL (GVI): Forward Cargo Compartment

(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

B. Access Panels

Number	Name/Location
821	Forward Cargo Door

C. Zonal Inspection

SUBTASK 05-41-01-010-006

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

NOTE: No cargo liners removed. As viewed from inside the cargo compartment.

SUBTASK 05-41-01-210-007

(2) Perform an internal zonal inspection (GVI) of the Forward Cargo Compartment - Section 43, Sta 396 to forward cargo compartment aft bulkhead.


SUBTASK 05-41-01-410-006

(3) Close this access panel:

Number	Name/Location
821	Forward Cargo Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

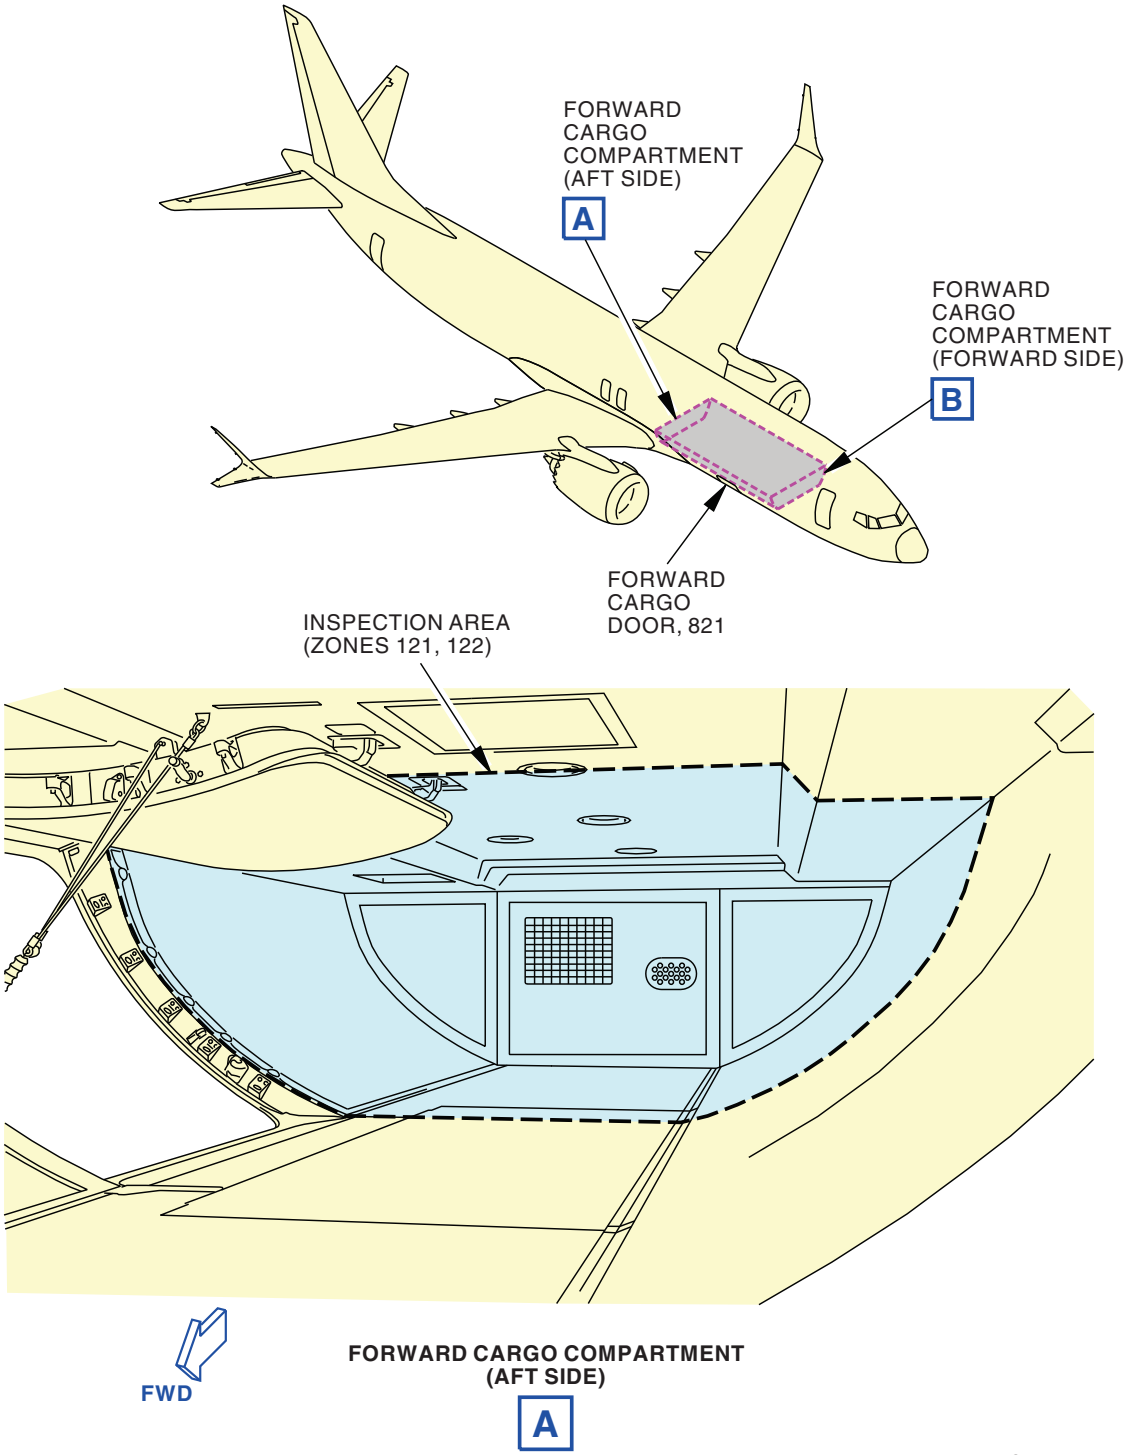

Forward Cargo Compartment General Visual (Internal)
Figure 212/05-41-01-990-807 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

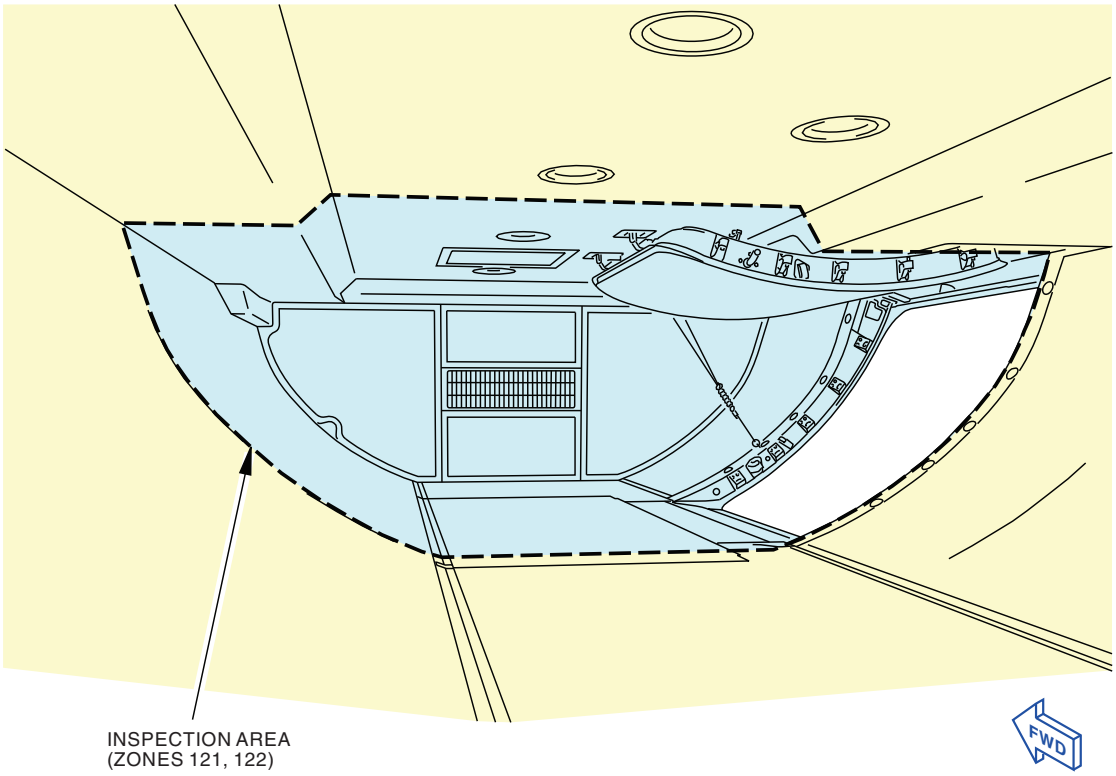

**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)**

B

2410086 S00061524892_V1

**Forward Cargo Compartment General Visual (Internal)
Figure 212/05-41-01-990-807 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-808

14. INTERNAL - ZONAL (GVI): Forward Cargo Compartment - Ceiling Liners Removed

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

D. Access Panels

Number	Name/Location
821	Forward Cargo Door

E. Zonal Inspection

SUBTASK 05-41-01-010-007

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

NOTE: Ceiling panel removal required.

SUBTASK 05-41-01-210-008

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802 .

(3) Perform an internal zonal inspection (GVI) of the area above the Forward Cargo Compartment - Section 43, Sta 396 to forward cargo compartment aft bulkhead. (EZAP)

SUBTASK 05-41-01-910-016

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-007

(5) Close this access panel:

Number	Name/Location
821	Forward Cargo Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

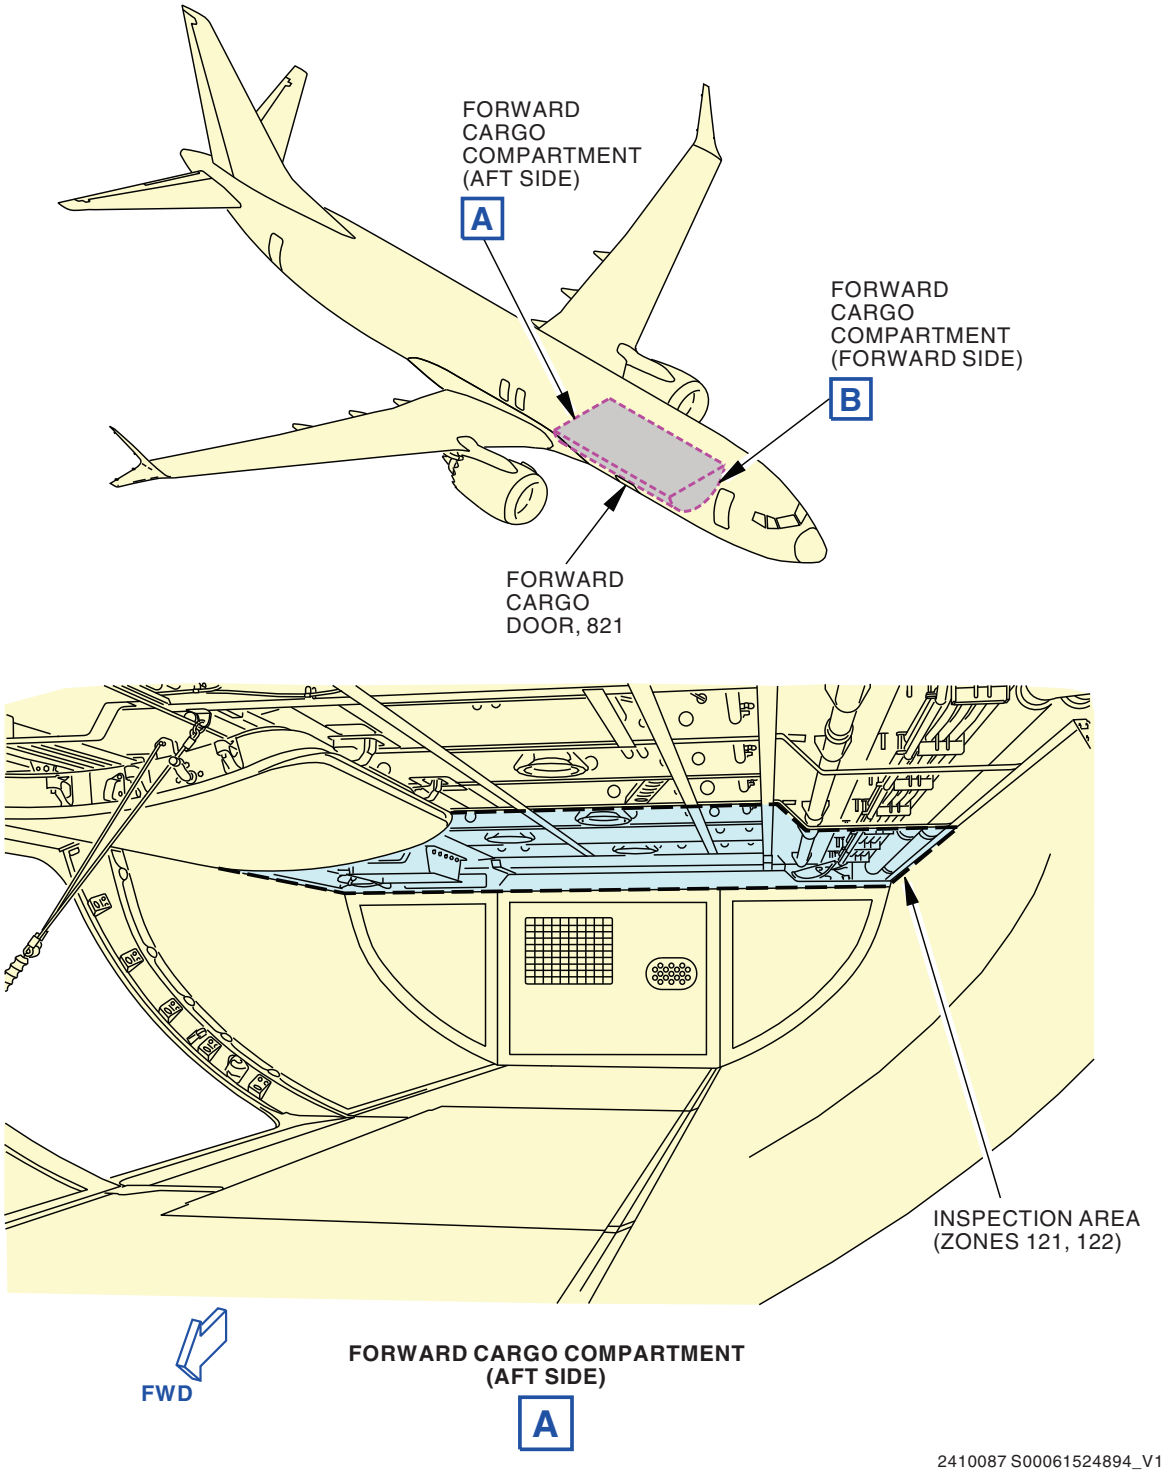

Forward Cargo Compartment General Visual (Internal) (Ceiling Liners Removed)
Figure 213/05-41-01-990-808 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

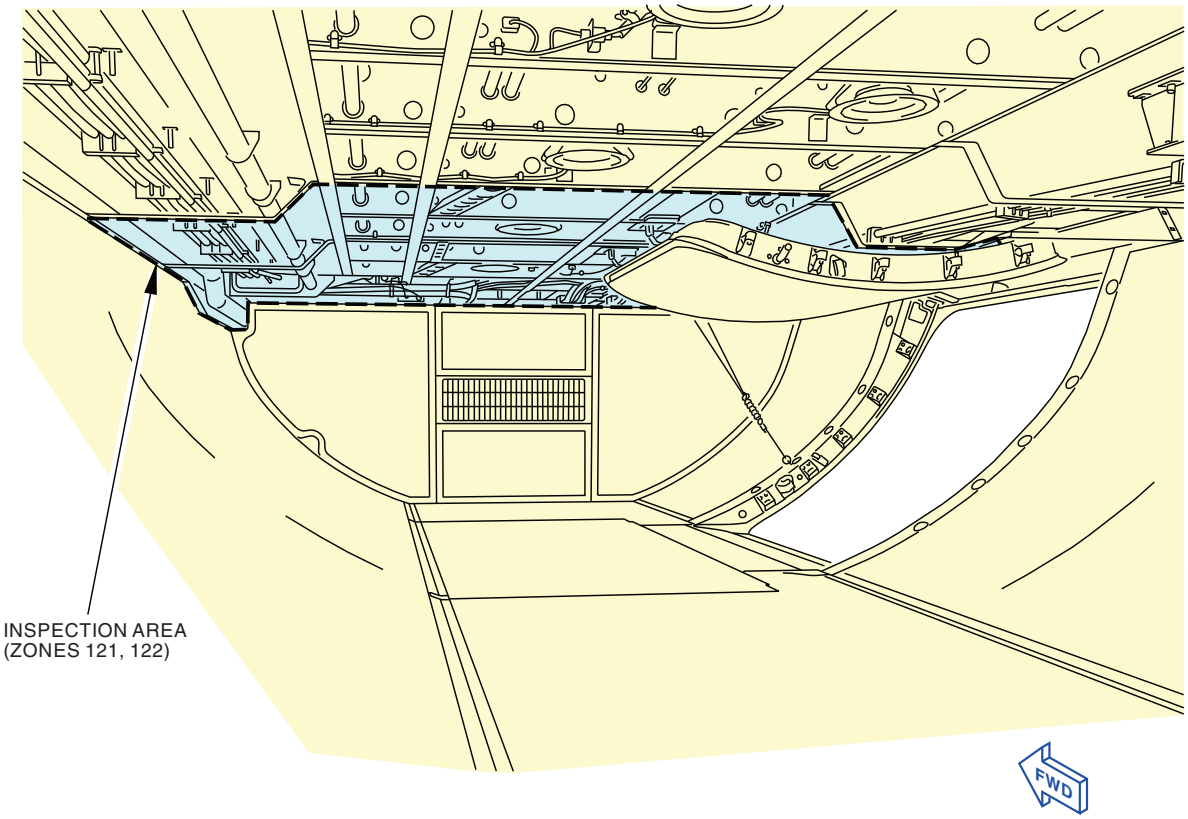

**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)**

B

2410088 S00061524895_V1

**Forward Cargo Compartment General Visual (Internal) (Ceiling Liners Removed)
Figure 213/05-41-01-990-808 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-809

15. INTERNAL - ZONAL (GVI): Forward Cargo Compartment - Sidewall Liners and Insulation Removed
(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

B. Access Panels

Number	Name/Location
821	Forward Cargo Door

C. Zonal Inspection

SUBTASK 05-41-01-010-008

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

NOTE: Sidewall panel removal required.

SUBTASK 05-41-01-210-009

(2) Perform an internal zonal inspection (GVI) of the Forward Cargo Compartment - Section 43, Sta 396 to forward cargo compartment aft bulkhead.


SUBTASK 05-41-01-410-008

(3) Close this access panel:

Number	Name/Location
821	Forward Cargo Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

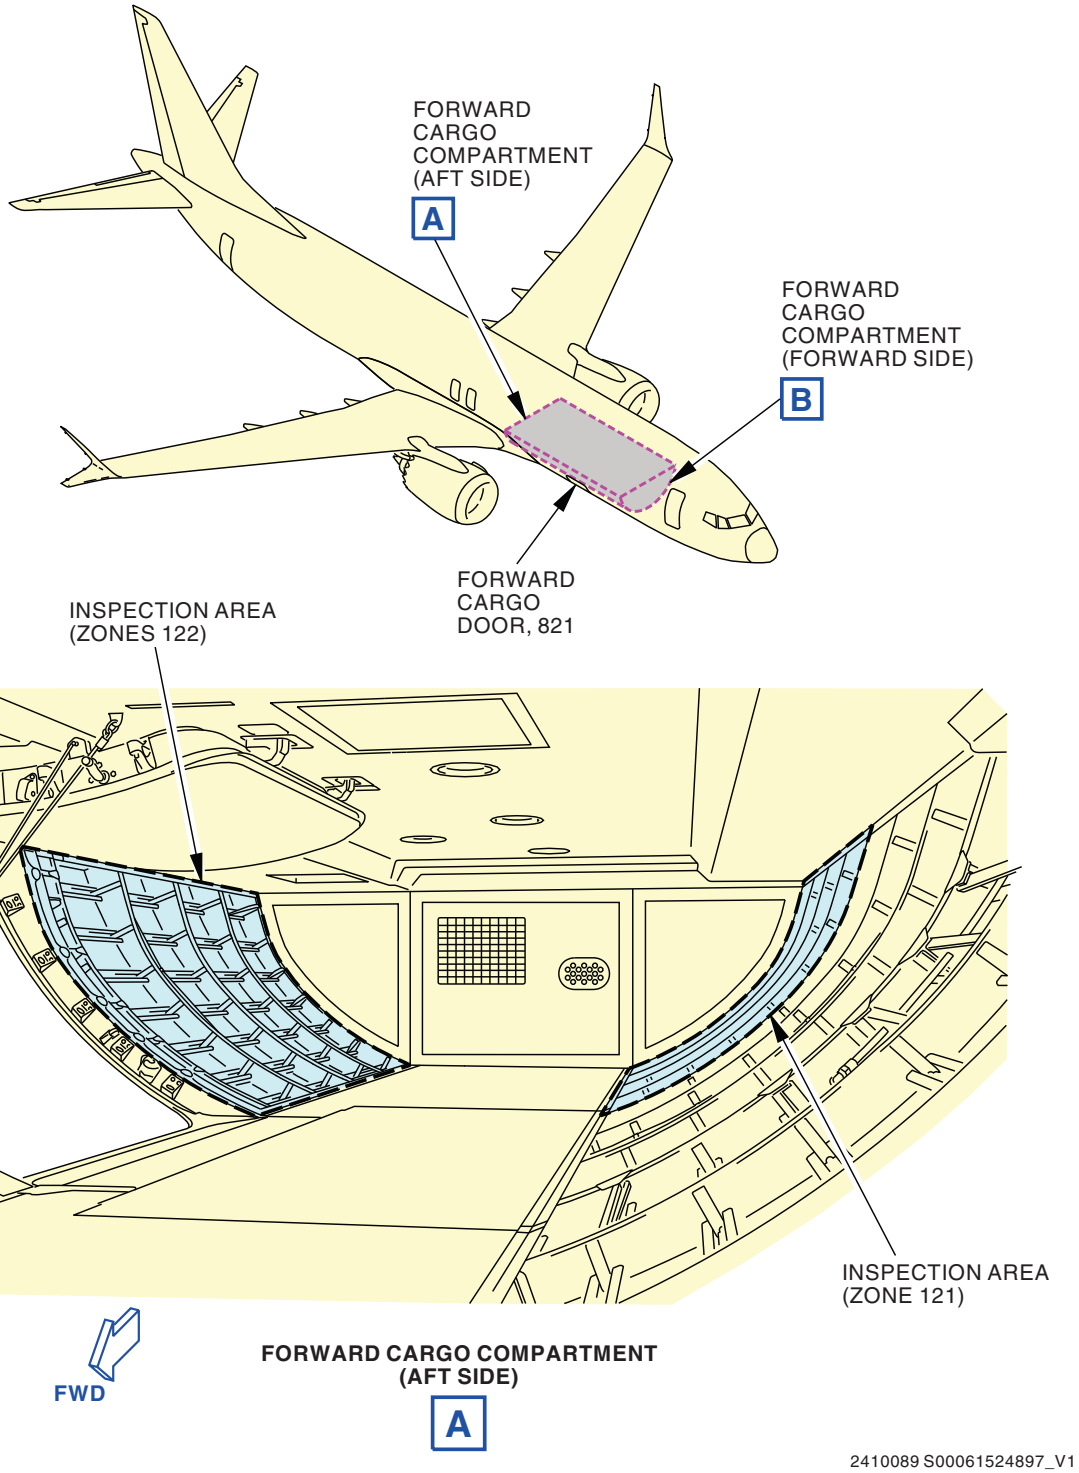

Forward Cargo Compartment General Visual (Internal) (Sidewall Liners and Insulation Removed)
Figure 214/05-41-01-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

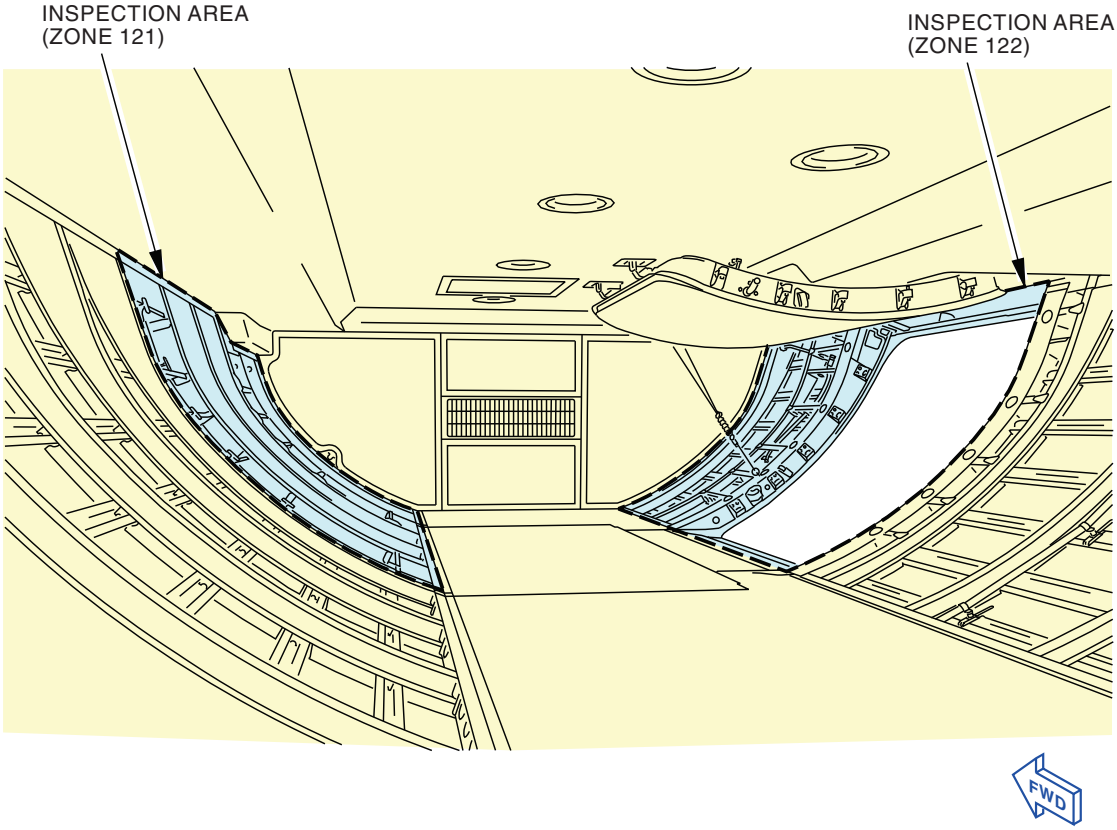

**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)**

B

2410090 S00061524898_V1

**Forward Cargo Compartment General Visual (Internal) (Sidewall Liners and Insulation Removed)
Figure 214/05-41-01-990-809 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-837

16. EXTERNAL - ZONAL (GVI): Forward Cargo Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-037

(1) Perform an external zonal inspection (GVI) of the Forward Cargo Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

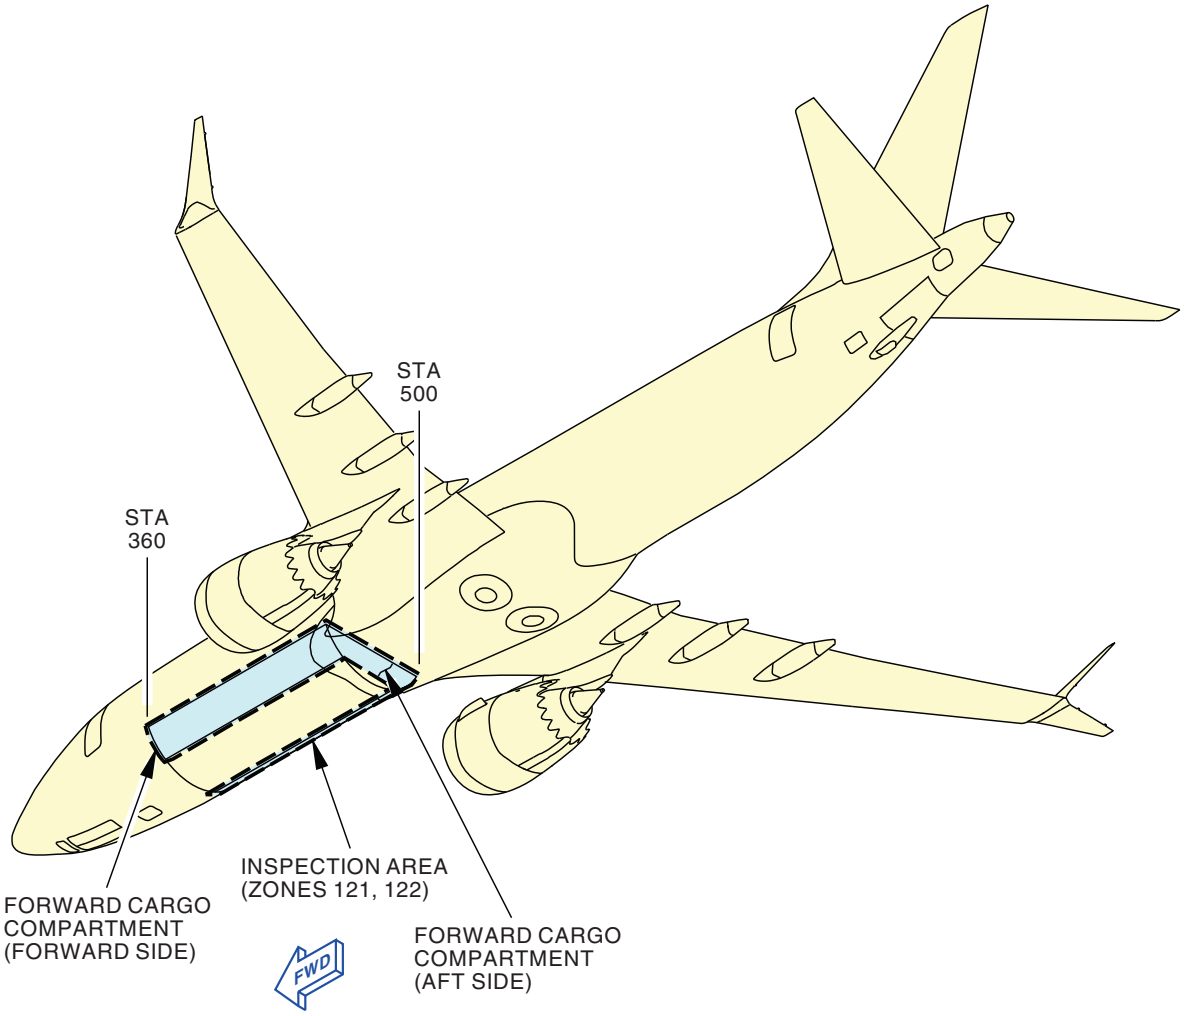

2545610 S0000601091_V2

Forward Cargo Compartment General Visual (External)
Figure 215/05-41-01-990-835

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-810

17. EXTERNAL - ZONAL (GVI): Forward Cargo Door Surround Structure Fittings and Stops

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
122	Forward Cargo Compartment - Right

B. Access Panels

Number	Name/Location
821	Forward Cargo Door

C. Zonal Inspection

SUBTASK 05-41-01-010-009

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

SUBTASK 05-41-01-210-010

(2) Perform an external zonal inspection (GVI) of the Forward Cargo Door surround structure fittings and stops - Section 43, Sta 460.


SUBTASK 05-41-01-410-009

(3) Close this access panel:

Number	Name/Location
821	Forward Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

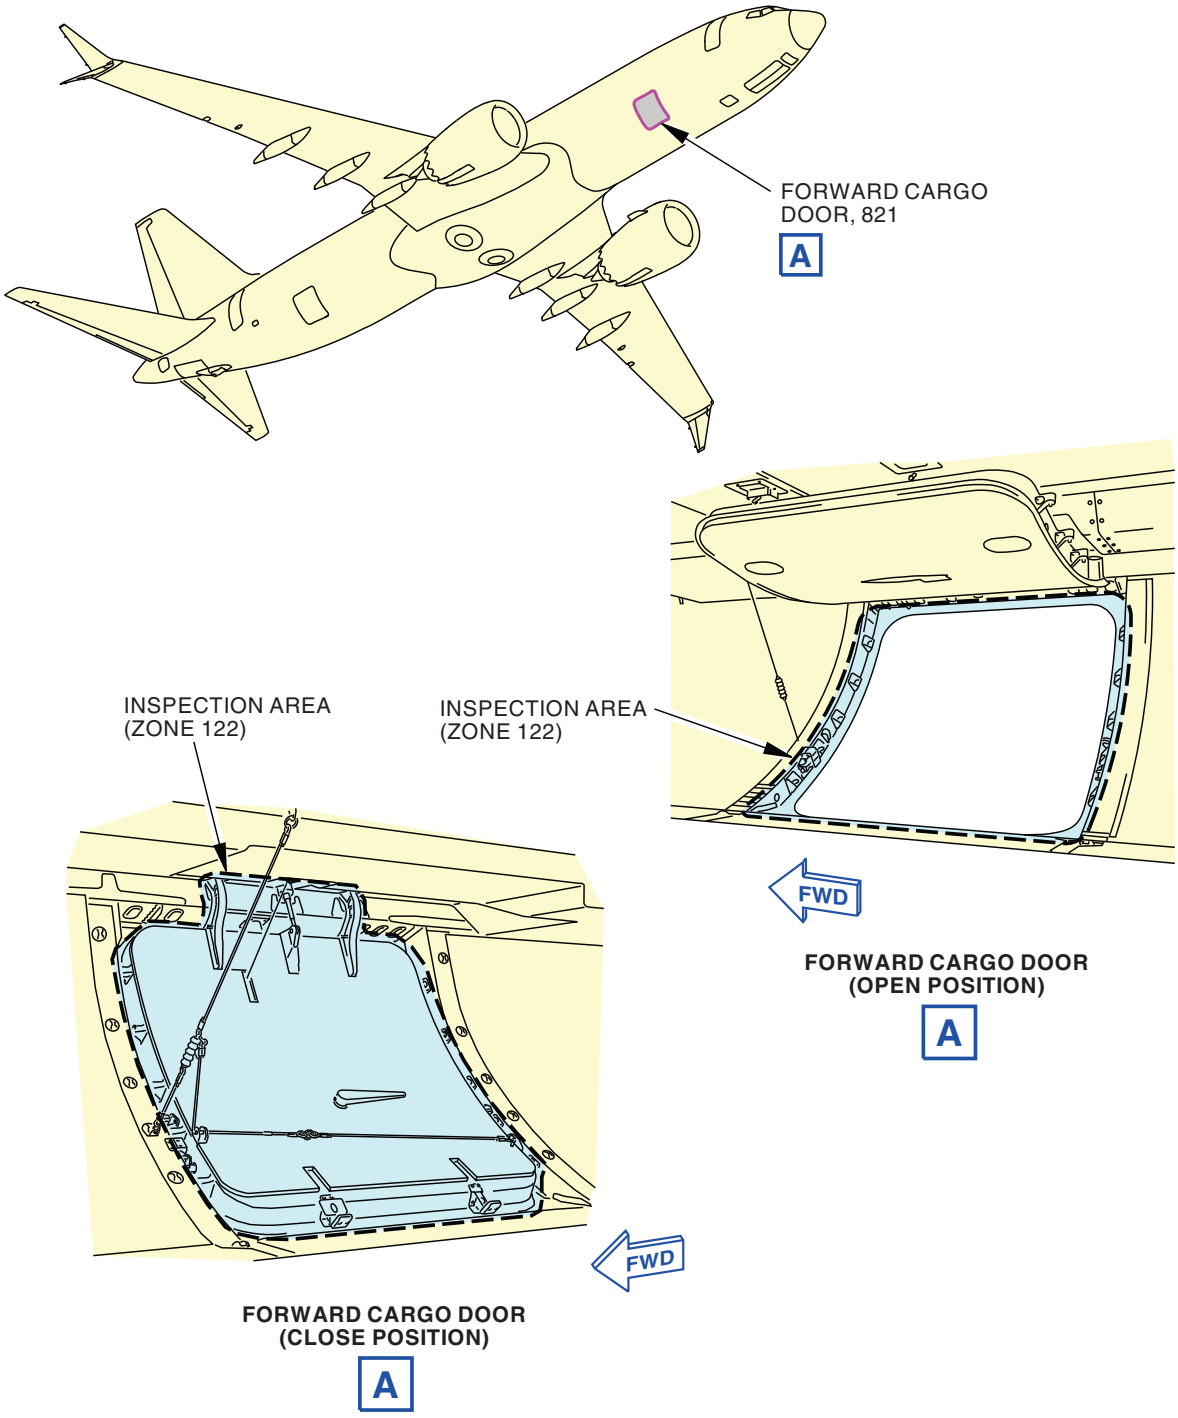

2410091 S00061524900_V1

Fittings and Stops - Forward Cargo Door Surround Structure General Visual (External)
Figure 216/05-41-01-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-838

18. EXTERNAL - ZONAL (GVI): Area Below Forward Cargo Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-038

(1) Perform an external zonal inspection (GVI) of the Area Below the Forward Cargo Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

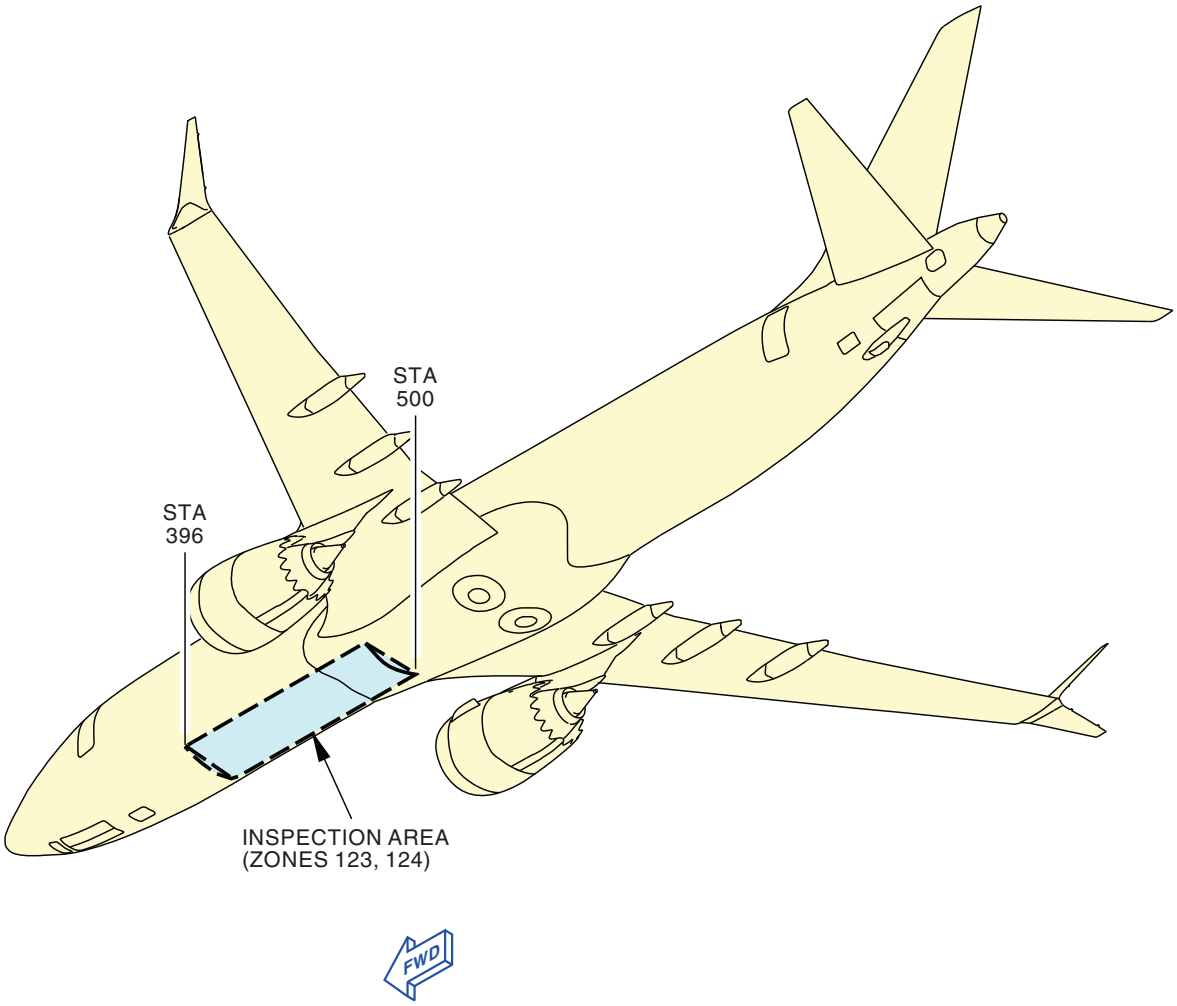

2545584 S0000601094_V2

Area Below Forward Cargo Compartment General Visual (External)
Figure 217/05-41-01-990-836

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-811

19. INTERNAL - ZONAL (GVI): Area Below Forward Cargo Compartment

(Figure 218)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right

D. Access Panels

Number	Name/Location
821	Forward Cargo Door

E. Zonal Inspection

SUBTASK 05-41-01-010-010

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

NOTE: Center floor panels removal required. Cargo loading system removed/displaced as required.

SUBTASK 05-41-01-210-011

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Area Below the Forward Cargo Compartment - Section 43, Sta 396 to forward cargo compartment aft bulkhead. (EZAP)

SUBTASK 05-41-01-910-005

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-010


(5) Close this access panel:

Number	Name/Location
821	Forward Cargo Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

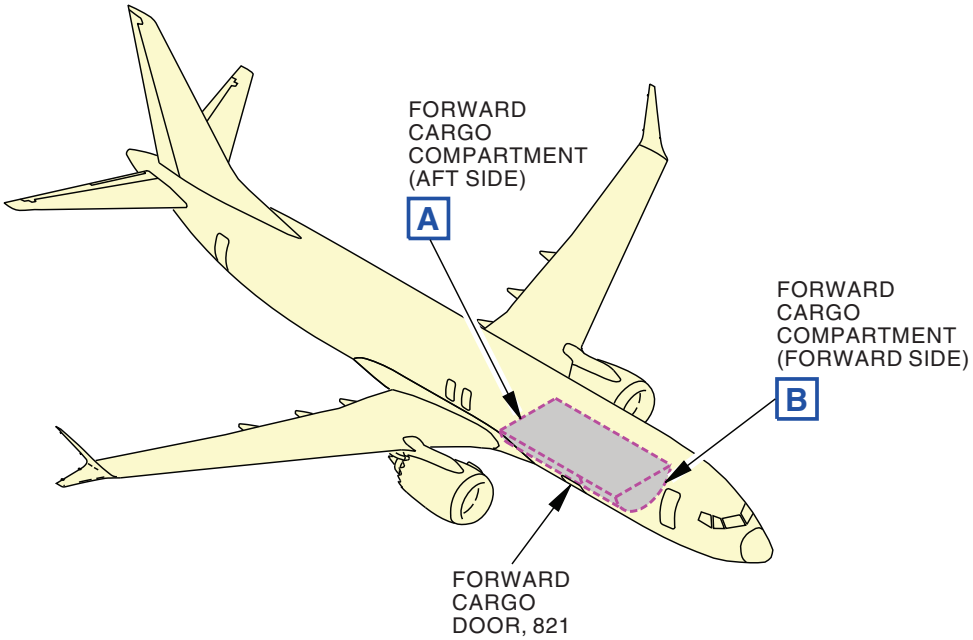


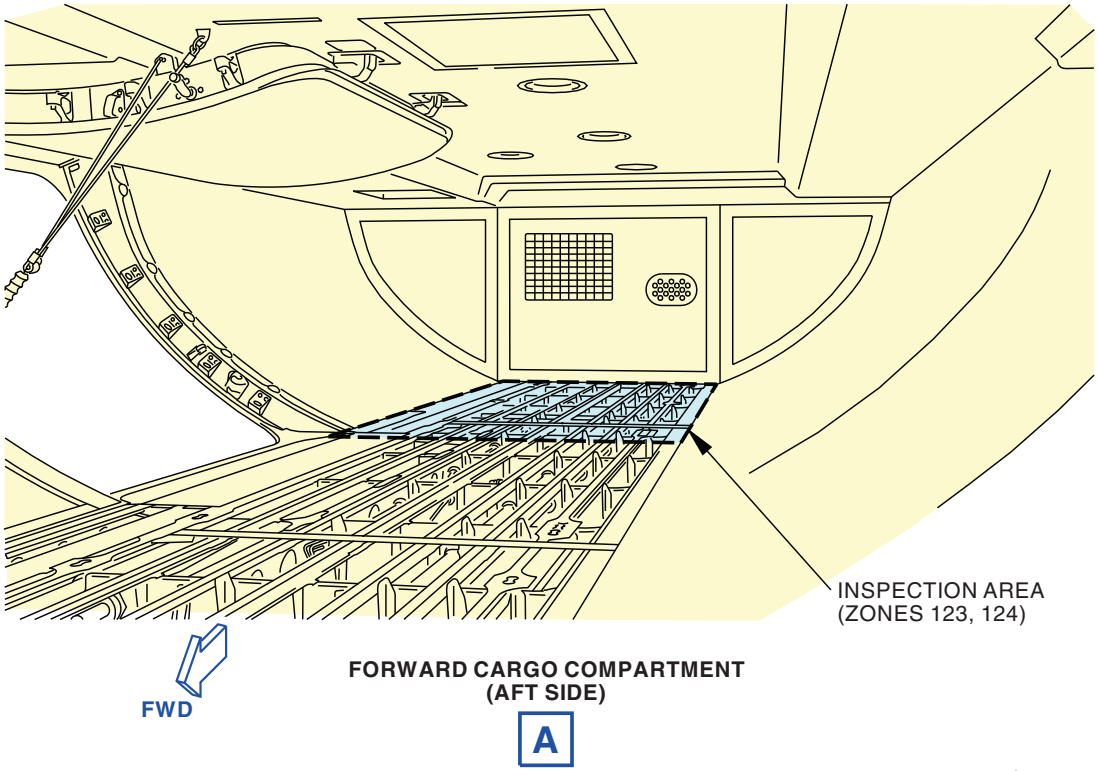

2410092 S00061524902_V1

Below the Forward Cargo Compartment General Visual (Internal) (Floor Panels Removed)
Figure 218/05-41-01-990-811 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

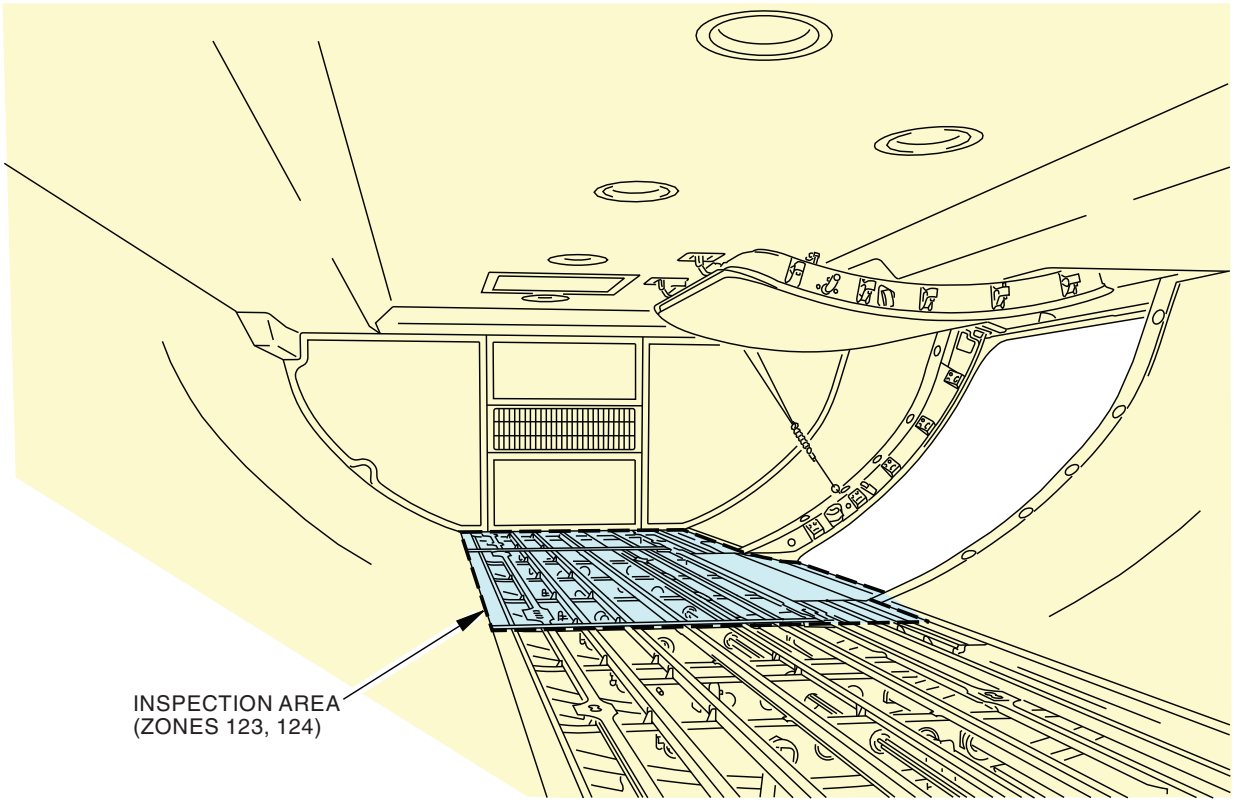

2410093 S00061524903_V1

Below the Forward Cargo Compartment General Visual (Internal) (Floor Panels Removed)
Figure 218/05-41-01-990-811 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-839

20. EXTERNAL - ZONAL (GVI): Air Conditioning Distribution Bay

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-039

(1) Perform an external zonal inspection (GVI) of the Air Conditioning Distribution Bay.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

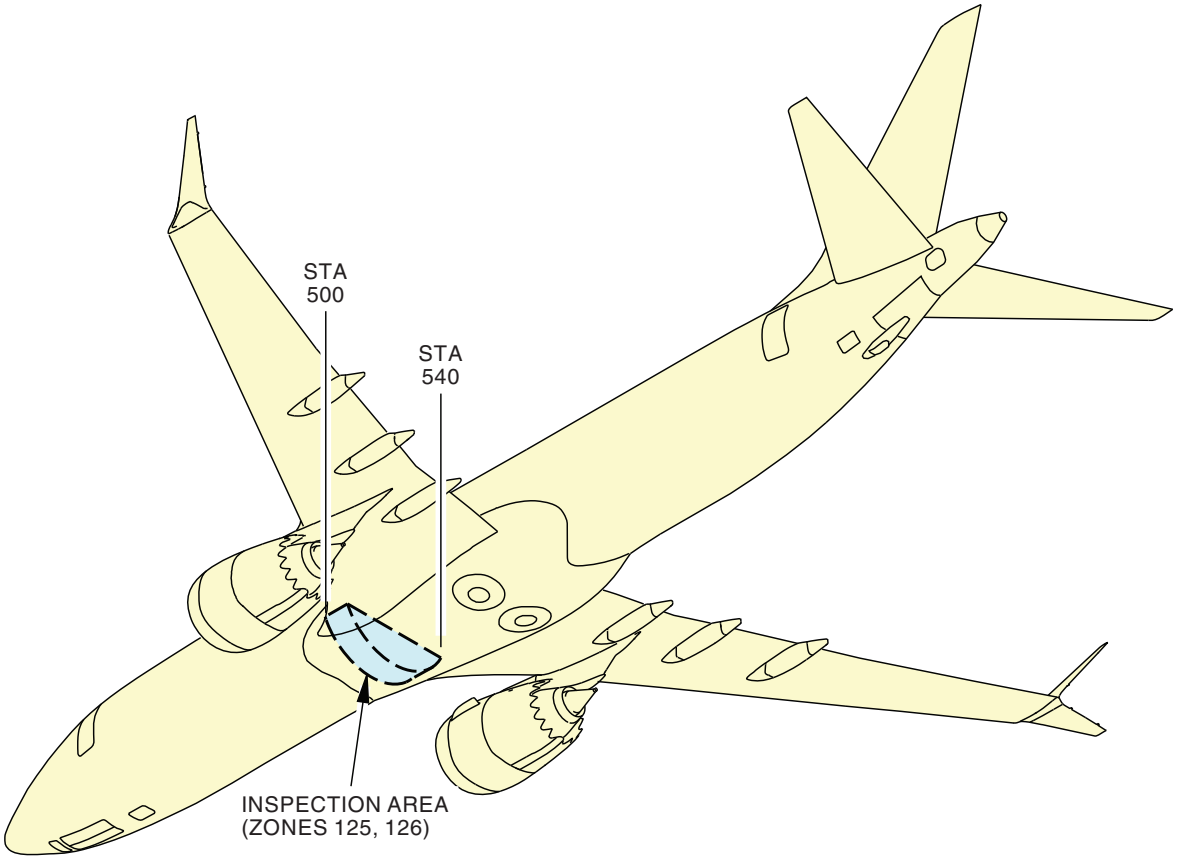

2545611 S0000601095_V2

Air Conditioning Distribution Bay General Visual (External)
Figure 219/05-41-01-990-837

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-812

21. INTERNAL - ZONAL (GVI): Air Conditioning Distribution Bay

(Figure 220)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
50-11-02-000-801	Forward Cargo Compartment Aft Bulkhead Liner Removal (P/B 401)
50-11-02-400-801	Forward Cargo Compartment Aft Bulkhead Liner Installation (P/B 401)

C. Location Zones

Zone	Area
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right

D. Access Panels

Number	Name/Location
821	Forward Cargo Door

E. Zonal Inspection

SUBTASK 05-41-01-010-011

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

SUBTASK 05-41-01-010-027

(2) Remove Forward cargo compartment aft bulkhead center panel: TASK 50-11-02-000-801.

SUBTASK 05-41-01-210-012

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Air Conditioning Distribution Bay - Section 43, forward cargo compartment bulkhead to Sta 540. (EZAP)

SUBTASK 05-41-01-910-006

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-01-410-027

(6) Install the Forward cargo compartment aft bulkhead center panel: TASK 50-11-02-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-01-410-011

(7) Close this access panel:

Number	Name/Location
821	Forward Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

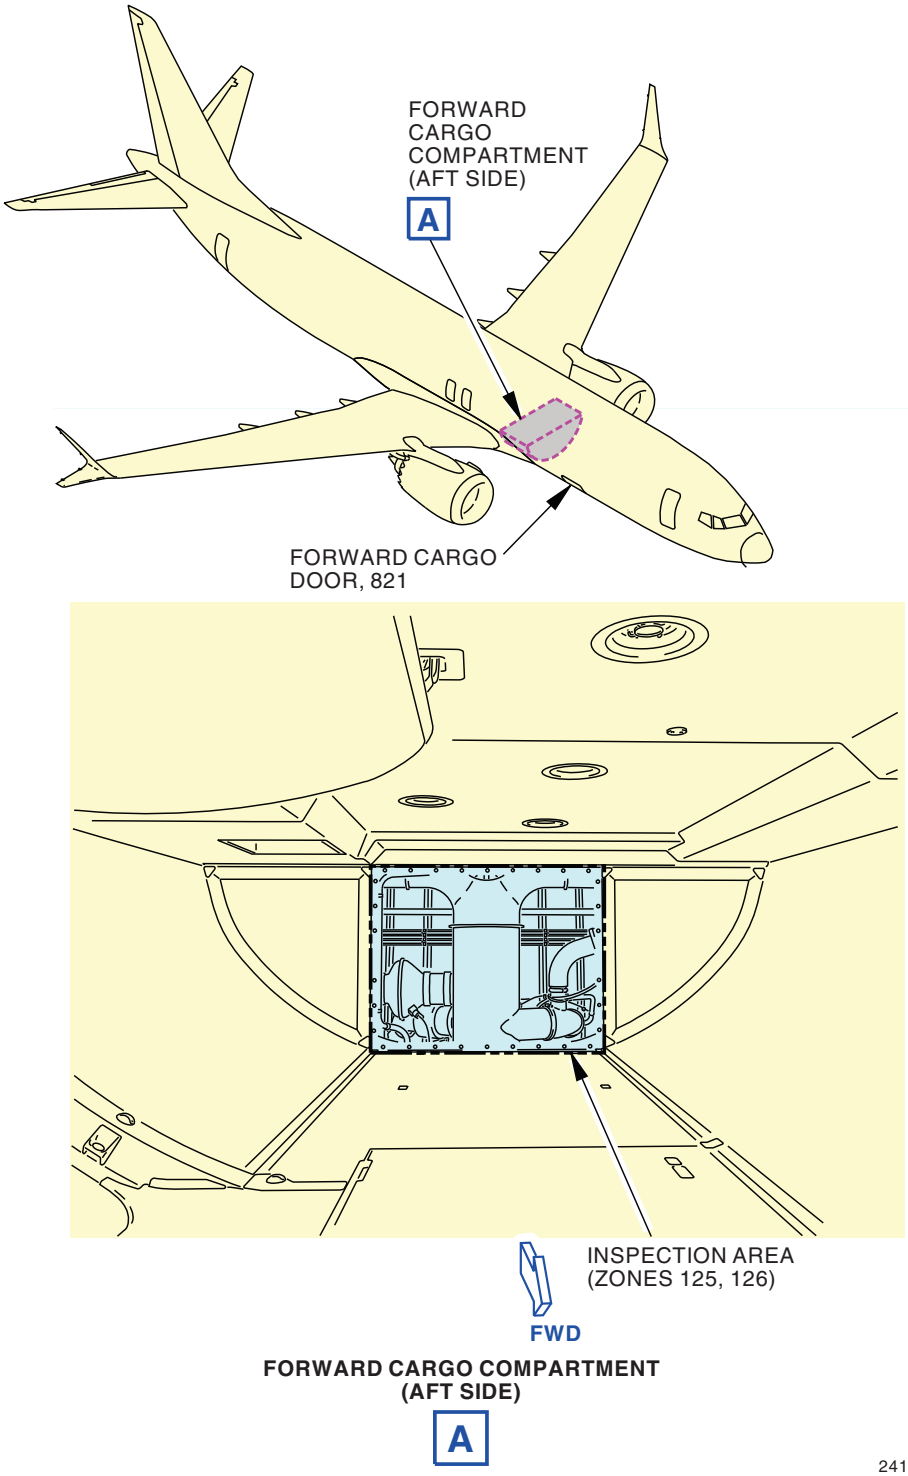

Aft of Forward Cargo Compartment General Visual (Internal) (Aft Bulkhead Center Panel Removed)
Figure 220/05-41-01-990-812

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-840

22. INTERNAL - ZONAL (GVI): Keel Beam - Section 43

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
129	Keel Beam (Part) - Section 43

B. Access Panels

Number	Name/Location
191D	Forward Wing-To-Body Fairing Panel - Lower
191E	Low Pressure ECS Panel - Forward

C. Zonal Inspection

SUBTASK 05-41-01-010-030

(1) Open these access panels:

Number	Name/Location
191D	Forward Wing-To-Body Fairing Panel - Lower
191E	Low Pressure ECS Panel - Forward

SUBTASK 05-41-01-210-040

(2) Perform an internal zonal inspection (GVI) of the Keel Beam - Section 43.


SUBTASK 05-41-01-410-030

(3) Close these access panels:

Number	Name/Location
191D	Forward Wing-To-Body Fairing Panel - Lower
191E	Low Pressure ECS Panel - Forward

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

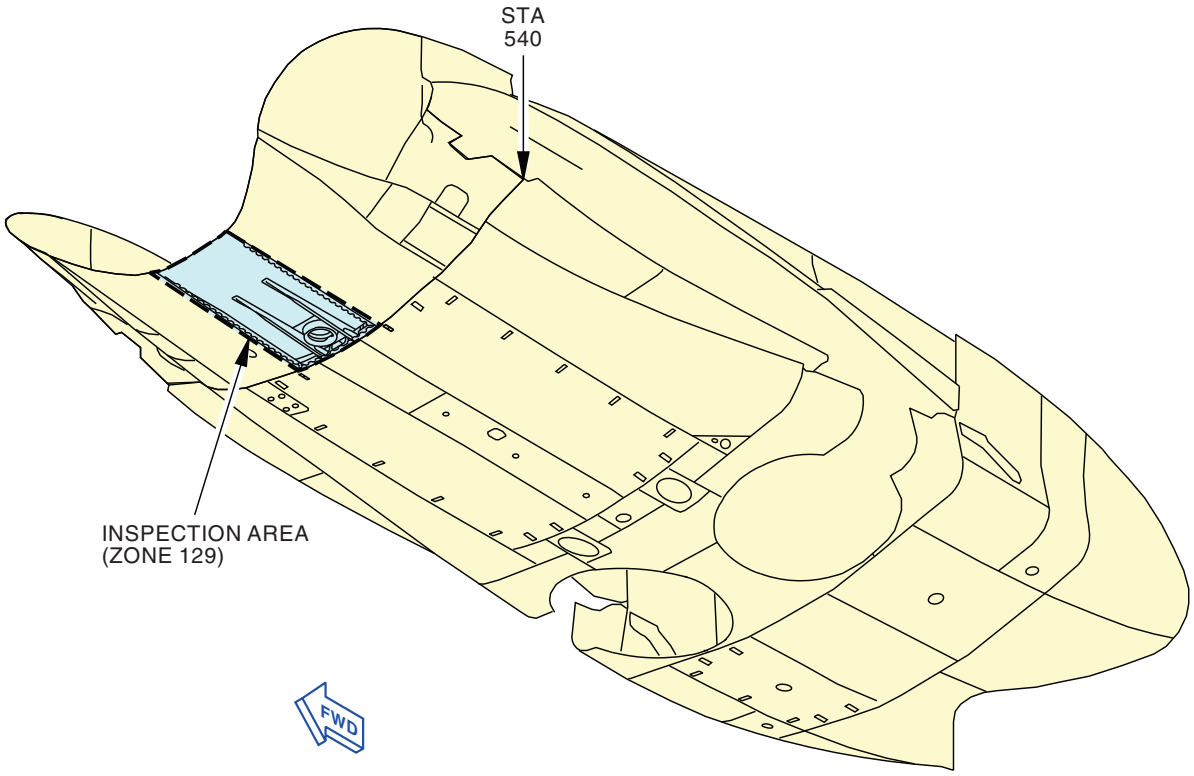

A

2545625 S0000601096_V2

Keel Beam - Section 43 General Visual (Internal)
Figure 221/05-41-01-990-838

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-841

23. EXTERNAL - ZONAL (GVI): Keel Beam - Section 43

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
129	Keel Beam (Part) - Section 43


B. Zonal Inspection

SUBTASK 05-41-01-210-041


(1) Perform an external zonal inspection (GVI) of the keel beam Section 43: 737-8/-8200 STA 500H + 5.0 to STA 540; 737-7 STA 500D + 5.0 to STA 540; 737-9 STA 500K + 5.0 to STA 540; 737-10 STA 500L + 5.0 to STA 540.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

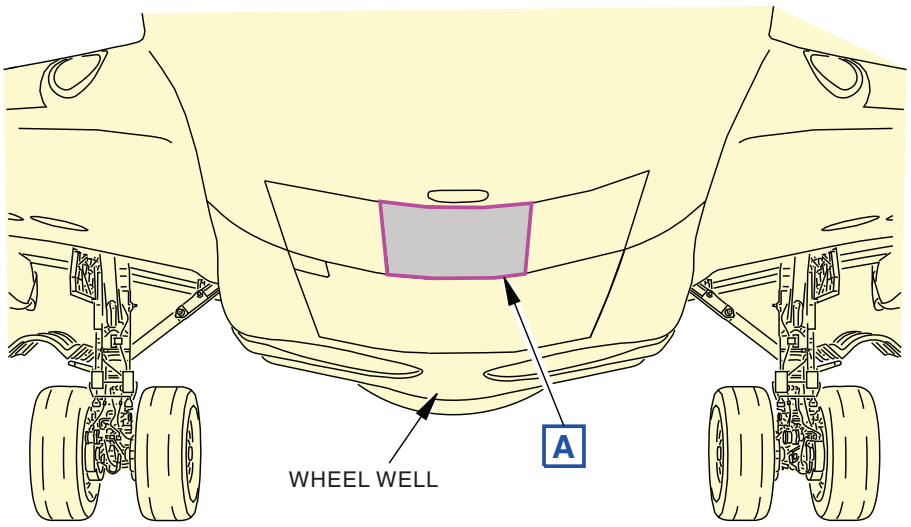

(VIEW IN THE AFT DIRECTION)

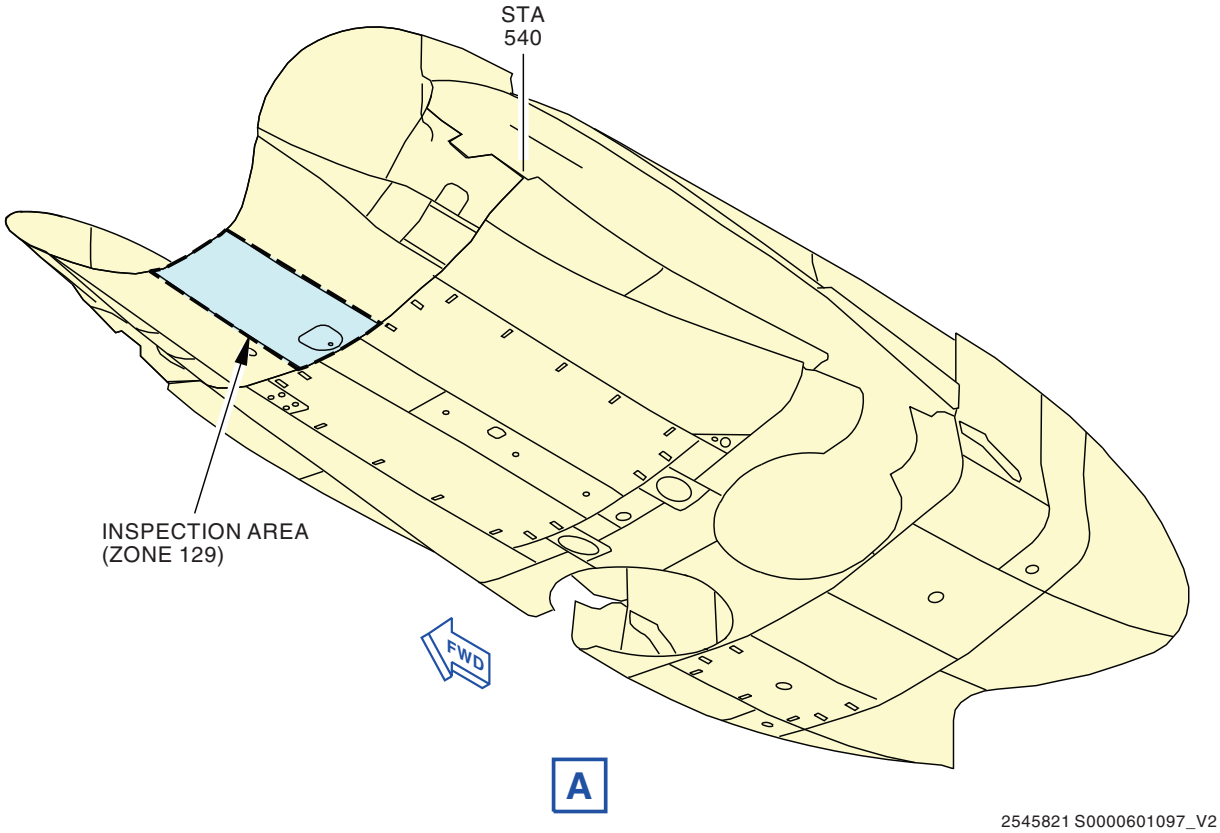

2545821 S0000601097_V2

Keel Beam - Section 43 General Visual (External)
Figure 222/05-41-01-990-839

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-813

24. INTERNAL - ZONAL (GVI): Area Above Center Section Wing Box

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
135	Area Above Wing Center Section, Body Station 540 to Body Station 663.75 - Left
136	Area Above Wing Center Section, Body Station 540 to Body Station 663.75 - Right

D. Zonal Inspection

NOTE: Floor panels removal required. Insulation as required.

SUBTASK 05-41-01-210-013

(1) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(2) Perform an internal zonal inspection (GVI) of the Area Above the Center Section Wing Box - Section 44, Sta 540 to Sta 663.75. (EZAP)

SUBTASK 05-41-01-910-017

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

EWIS

TASK 05-41-01-210-832

25. INTERNAL - ZONAL (GVI): Main Landing Gear Wheel Well

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Location Zones

Zone	Area
133	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Left
134	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Right

D. Zonal Inspection

SUBTASK 05-41-01-210-033

(1) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802


(2) Perform an internal zonal inspection (GVI) of the main landing gear wheel well. (EZAP)


SUBTASK 05-41-01-910-015

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

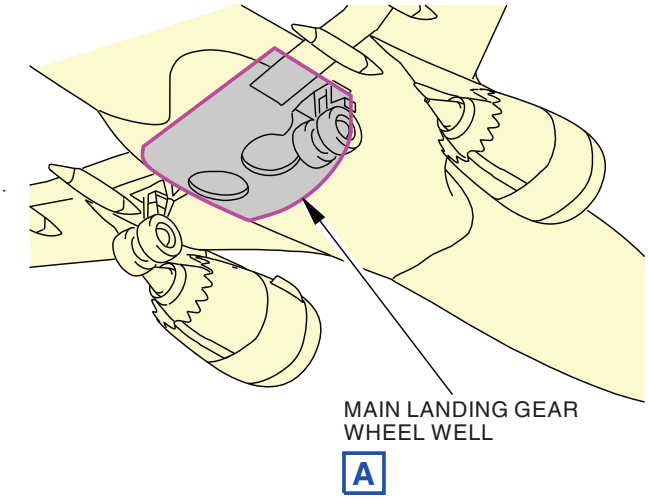

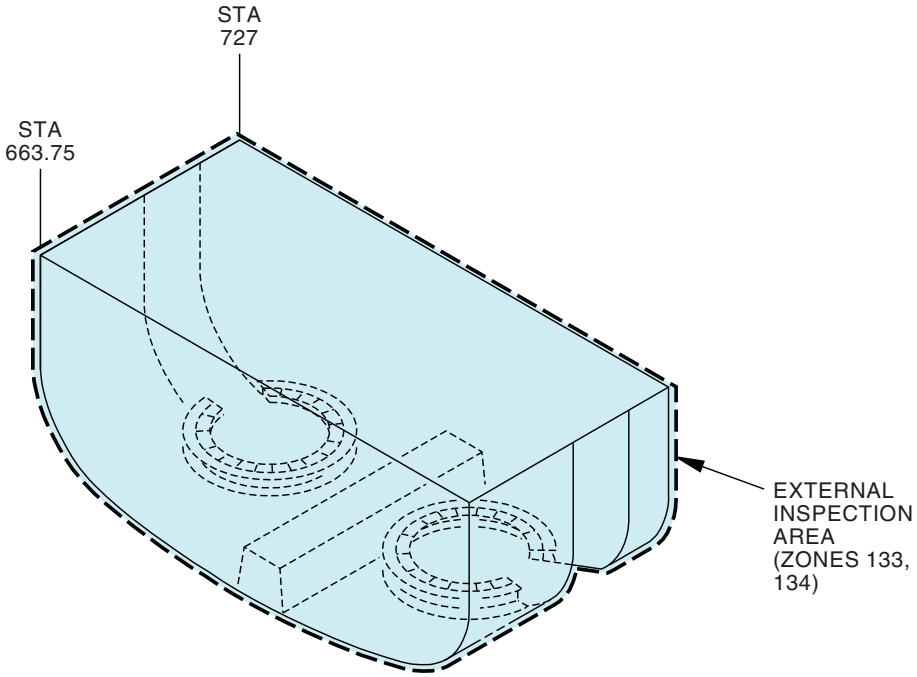

MAIN LANDING GEAR WHEEL WELL

A

2545575 S0000601098_V1

Main Landing Gear Wheel Well General Visual (Internal)
Figure 223/05-41-01-990-840

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-814

26. INTERNAL - ZONAL (GVI): Pressure Deck Above Main Landing Gear Wheel Well

(Figure 224)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
137	Area Above M.L.G. Wheel Well, Body Station 663.75 to Body Station 727 - Left
138	Area Above M.L.G. Wheel Well, Body Station 663.75 Body Station 727 - Right

D. Zonal Inspection

NOTE: Floor panels removal required.

SUBTASK 05-41-01-210-014

(1) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.


(2) Perform an internal zonal inspection (GVI) of the Pressure Deck Above the Main Landing Gear Wheel Well - Section 44, Sta 663.75 to Sta 727. (EZAP)


SUBTASK 05-41-01-910-007

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

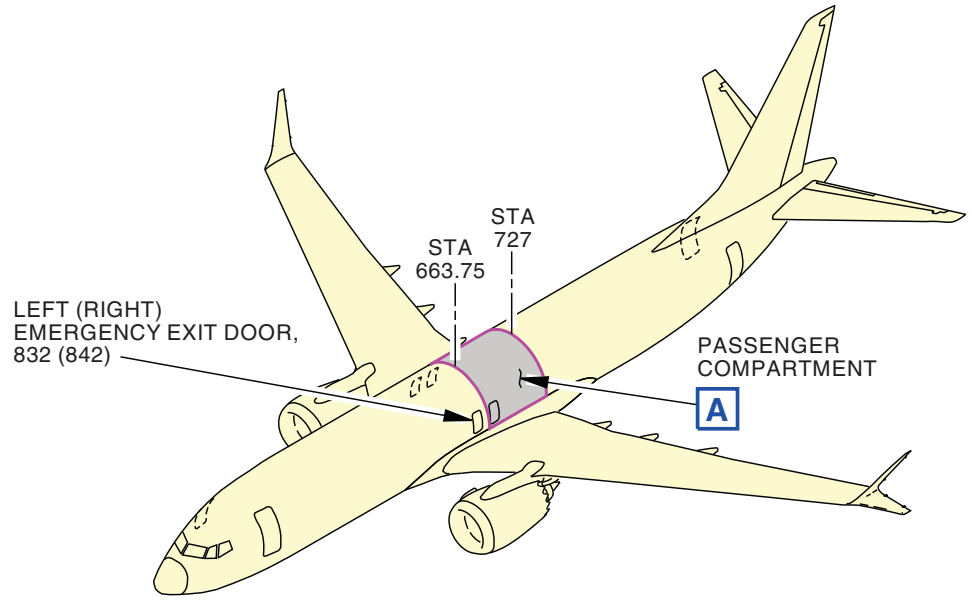

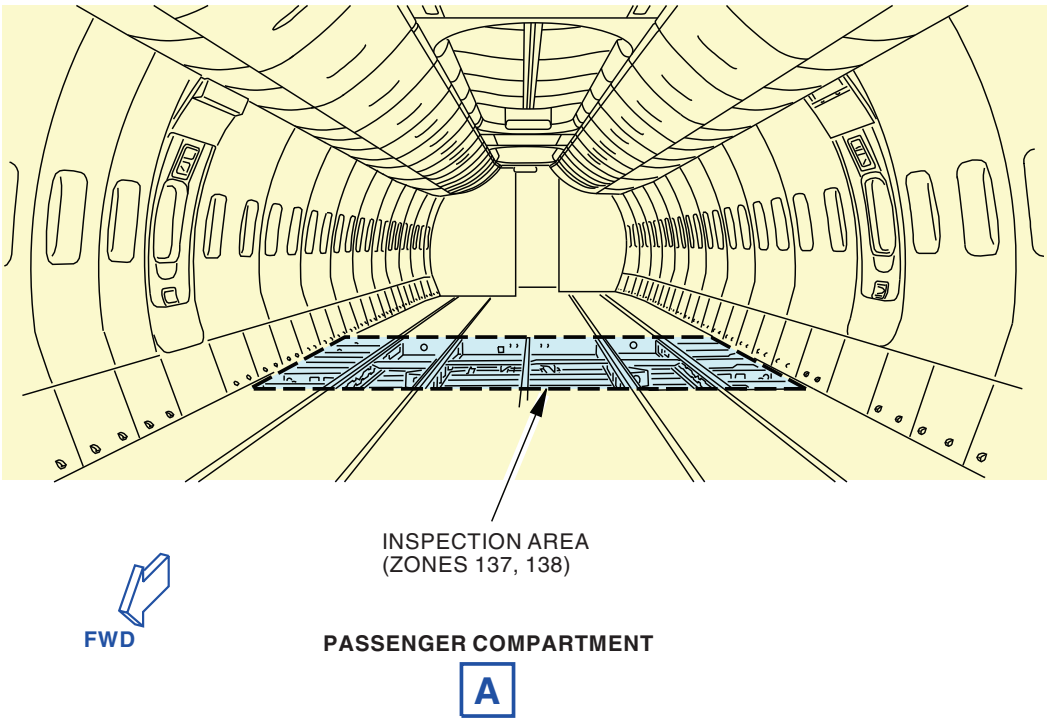

2410095 S00061524908_V2

Passenger Compartment (Sta 663.75-727) General Visual (Internal) (Floor Panels and Insulation Removed)
Figure 224/05-41-01-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-842

27. EXTERNAL - ZONAL (GVI): Keel Beam - STA 540 to STA 727

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
139	Keel Beam, (Part) Body Station 540.00 to Body Station 727.00


B. Zonal Inspection

SUBTASK 05-41-01-210-042

(1) Perform an external zonal inspection (GVI) of the Keel Beam - STA 540 to STA 727.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

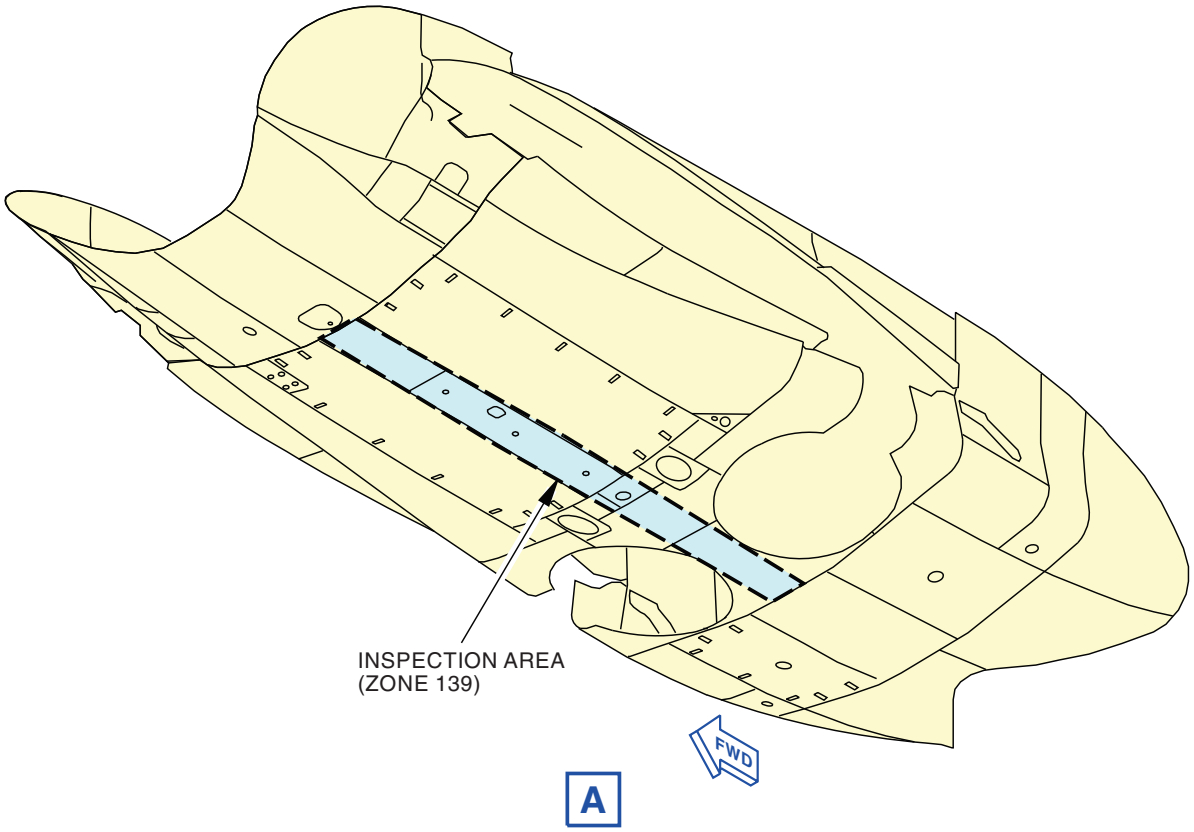

2545739 S0000601099_V2

Keel Beam General Visual (External)
Figure 225/05-41-01-990-841

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-815

28. INTERNAL - ZONAL (GVI): Keel Beam (Part) STA 540 to STA 727

(Figure 226)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
139	Keel Beam, (Part) Body Station 540.00 to Body Station 727.00

D. Access Panels

Number	Name/Location
192CL	ECS Access Door
192CR	ECS Access Door

E. Zonal Inspection

SUBTASK 05-41-01-010-012

(1) Open these access panels:

Number	Name/Location
192CL	ECS Access Door
192CR	ECS Access Door

SUBTASK 05-41-01-210-015

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Keel Beam (part) STA 540 to STA 727 - Section 44. (EZAP)

SUBTASK 05-41-01-910-008

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-012

(5) Close these access panels:

Number	Name/Location
192CL	ECS Access Door
192CR	ECS Access Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

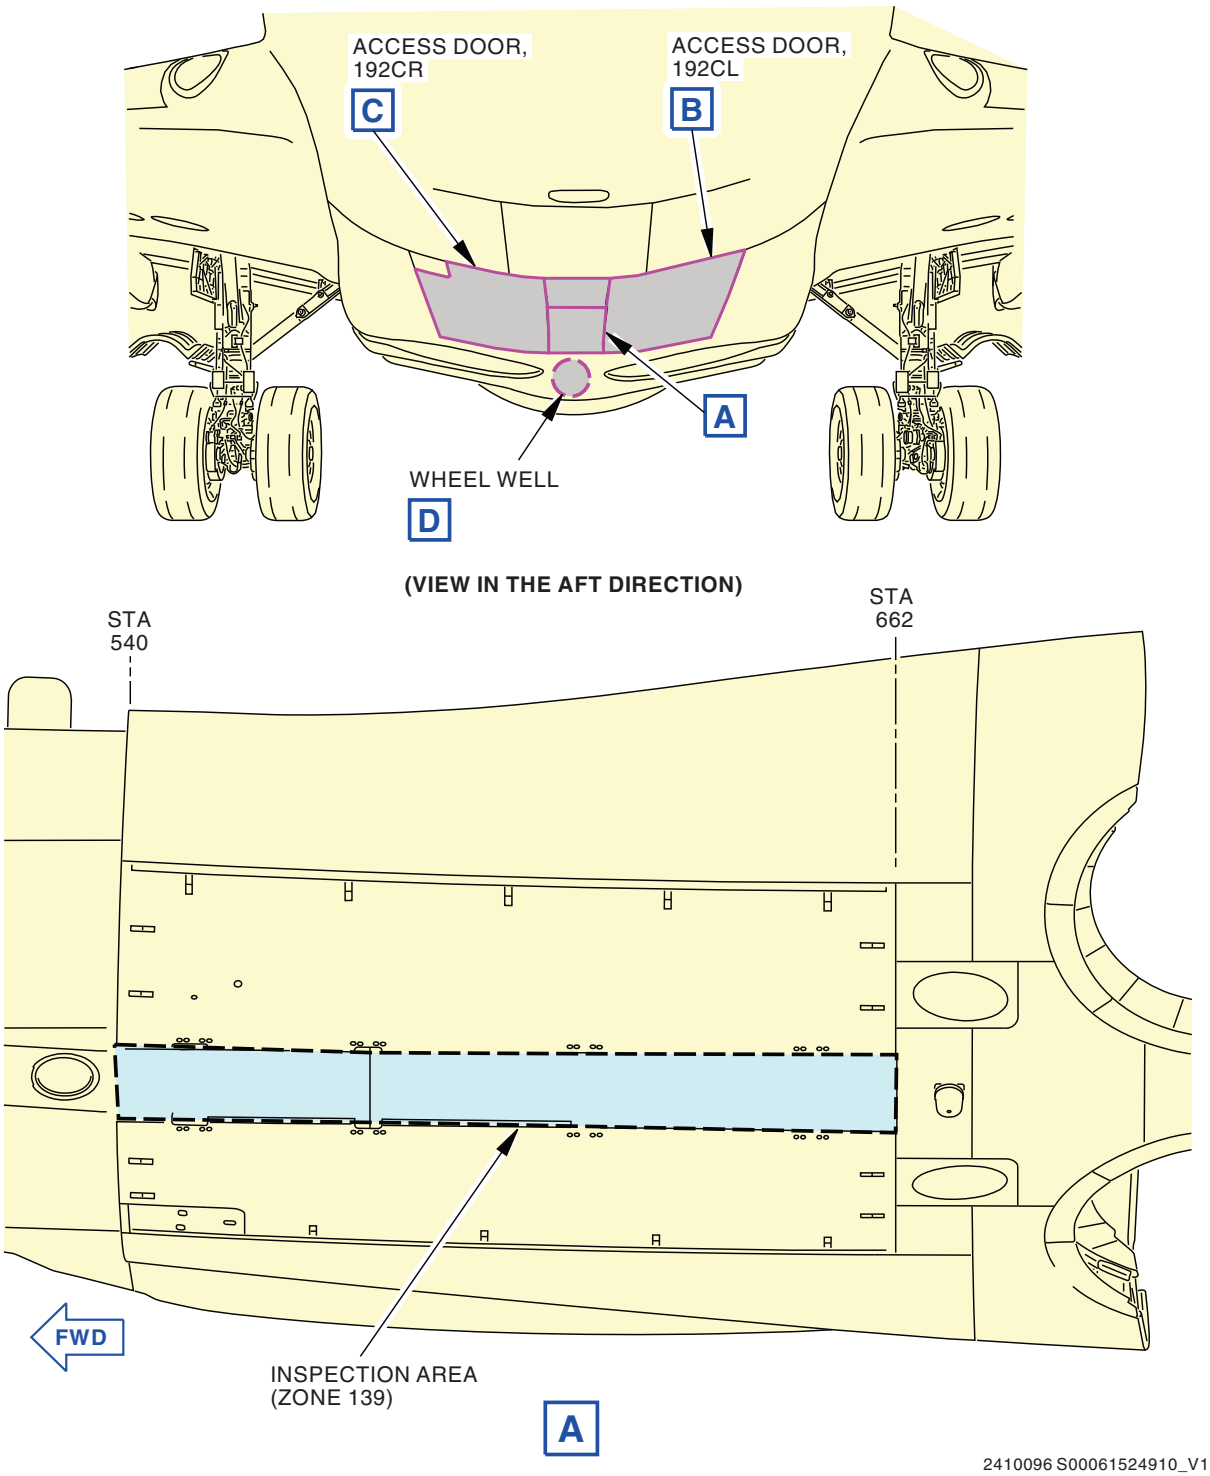


Keel Beam (Sta 540-727) General Visual (Internal)
Figure 226/05-41-01-990-814 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

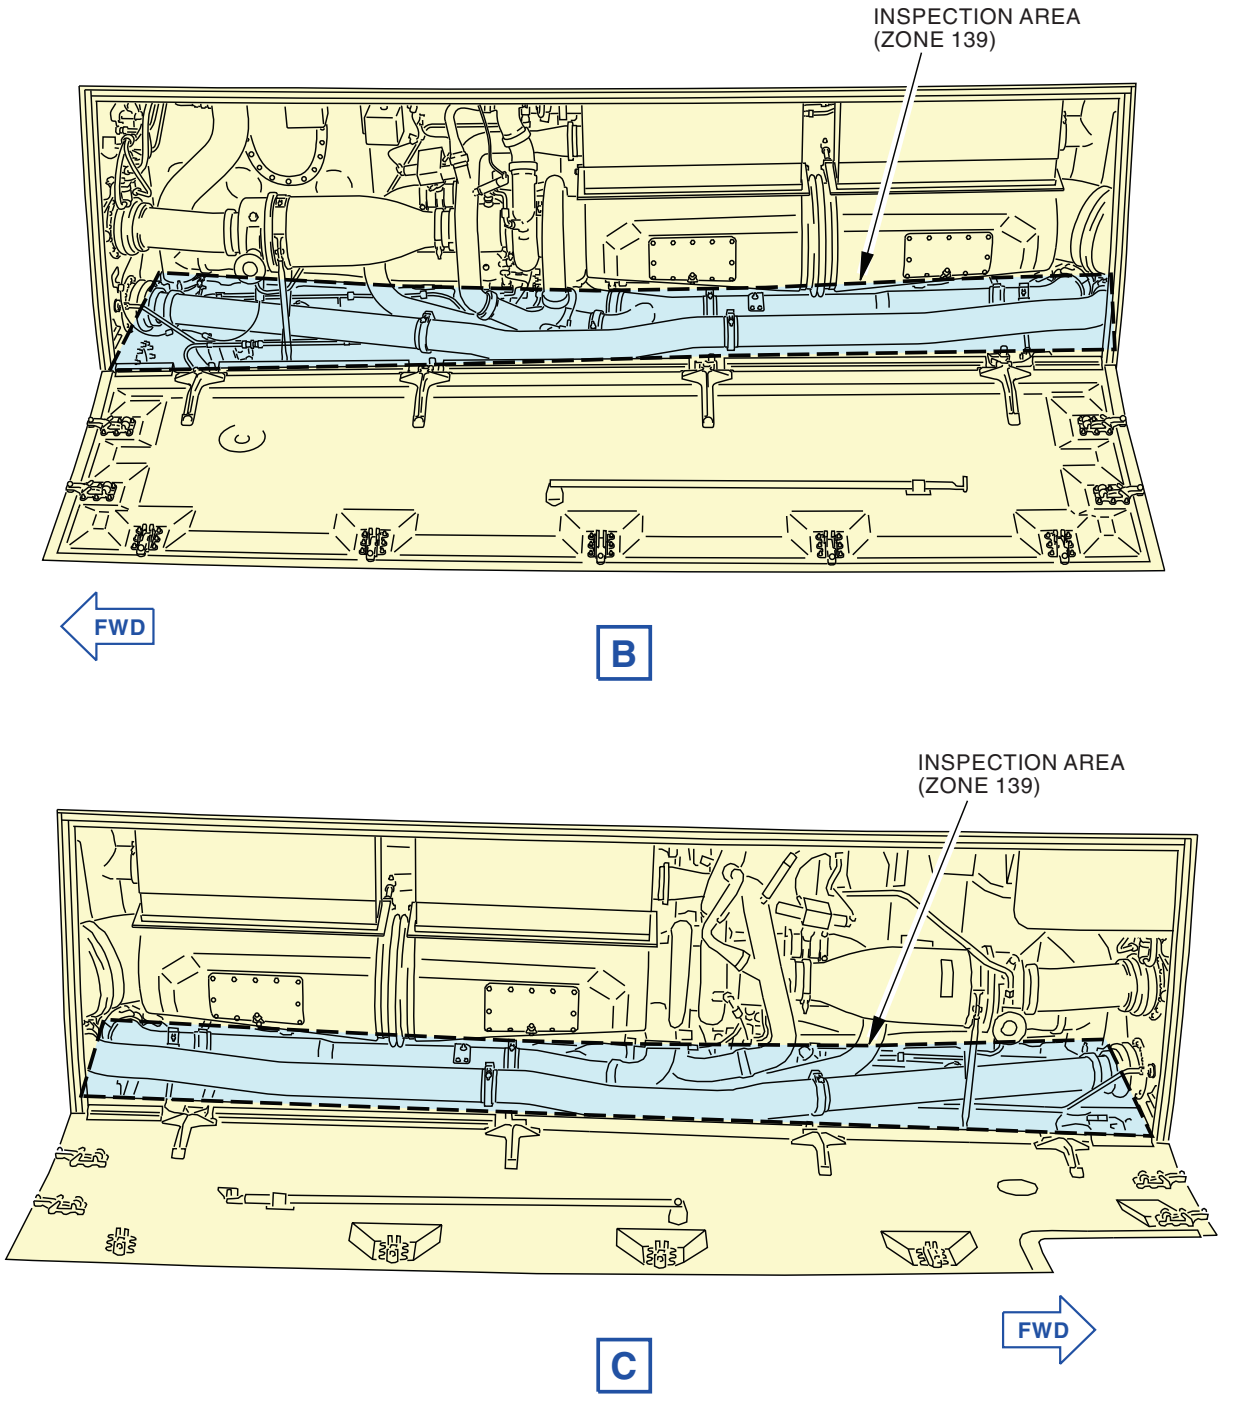

Keel Beam (Sta 540-727) General Visual (Internal)
Figure 226/05-41-01-990-814 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

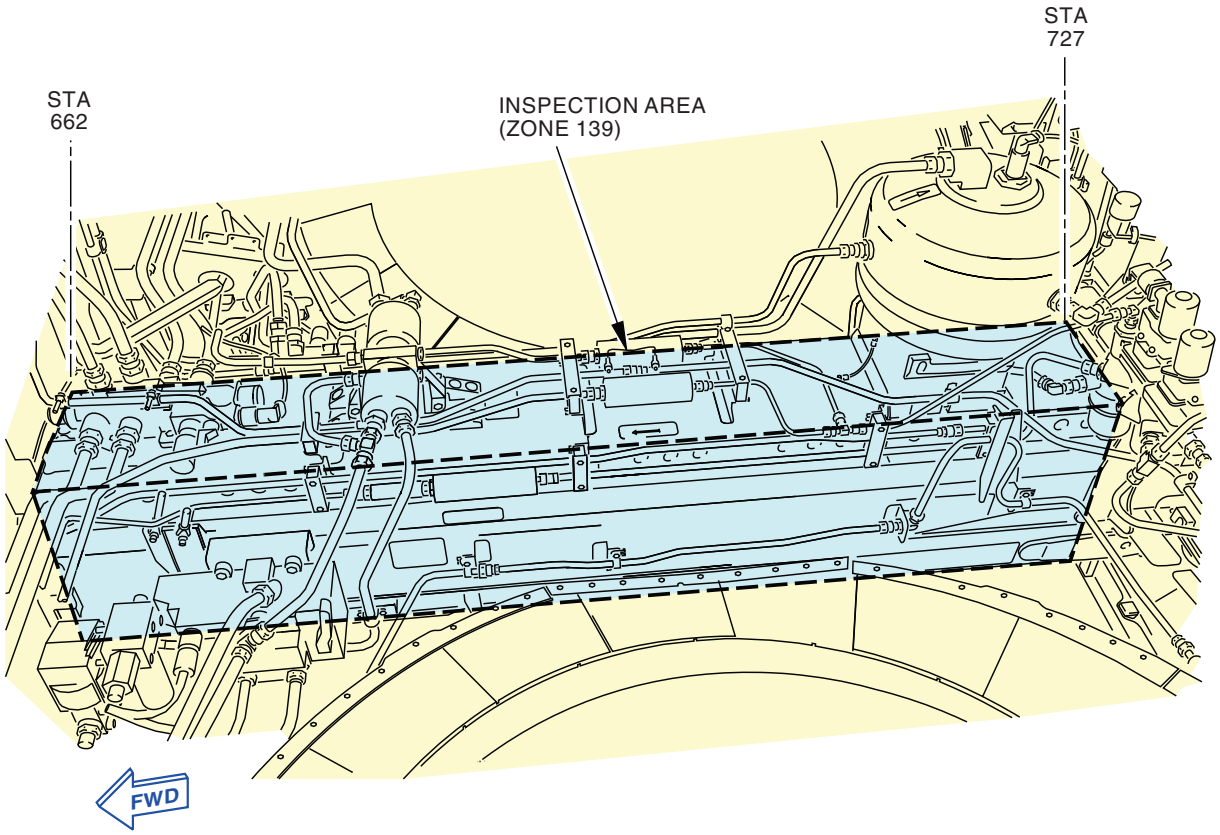

2410098 S00061524912_V1

Keel Beam (Sta 540-727) General Visual (Internal)
Figure 226/05-41-01-990-814 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-816

29. INTERNAL - ZONAL (GVI): Center Section Wing Box

(Figure 227)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
131	Center Section Wing Box, Body Station 540.00 to Body Station 663.75 - Left
132	Center Section Wing Box, Body Station 540.00 to Body Station 663.75 - Right

D. Access Panels

Number	Name/Location
131AB	Center Tank Access
192CL	ECS Access Door

E. Zonal Inspection

SUBTASK 05-41-01-010-013

(1) Open these access panels:

Number	Name/Location
131AB	Center Tank Access
192CL	ECS Access Door

SUBTASK 05-41-01-210-016

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802 .

(3) Perform an internal zonal inspection (GVI) of the Center Section Wing Box - Section 44, Sta 540 to Sta 663.75. (EZAP)

SUBTASK 05-41-01-910-018

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-013

(5) Close these access panels:

Number	Name/Location
131AB	Center Tank Access
192CL	ECS Access Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

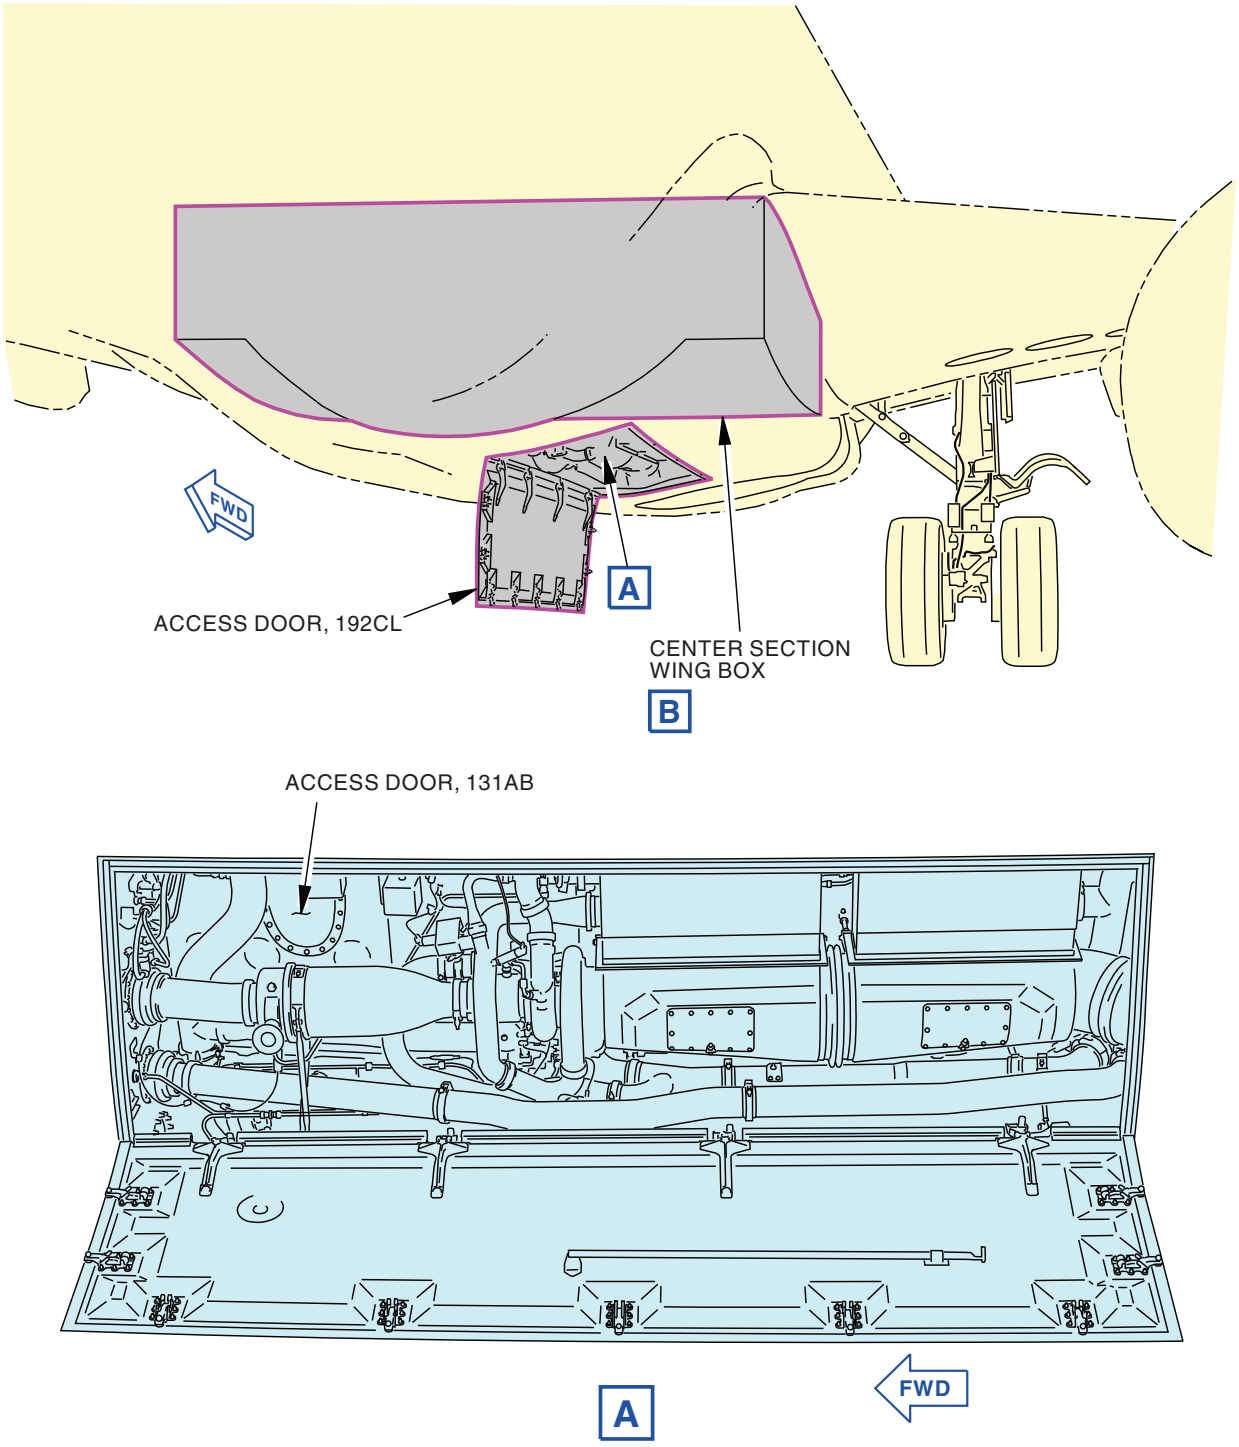

Center Section Wing Box General Visual (Internal)
Figure 227/05-41-01-990-815 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

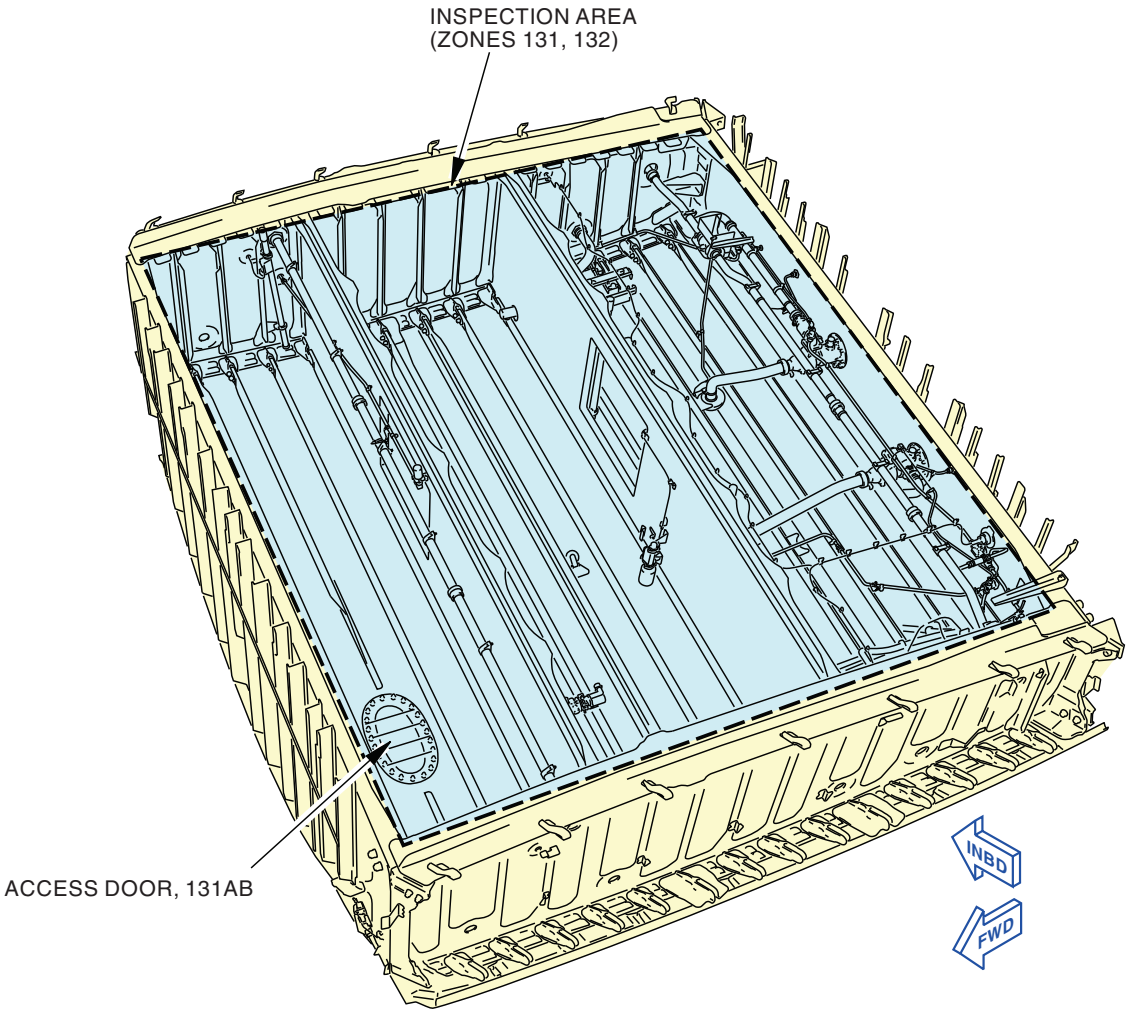

CENTER SECTION WING BOX

B

2410100 S00061524915_V1

Center Section Wing Box General Visual (Internal)
Figure 227/05-41-01-990-815 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-843

30. EXTERNAL - ZONAL (GVI): Aft Cargo Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-043

(1) Perform an external zonal inspection (GVI) of the Aft Cargo Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

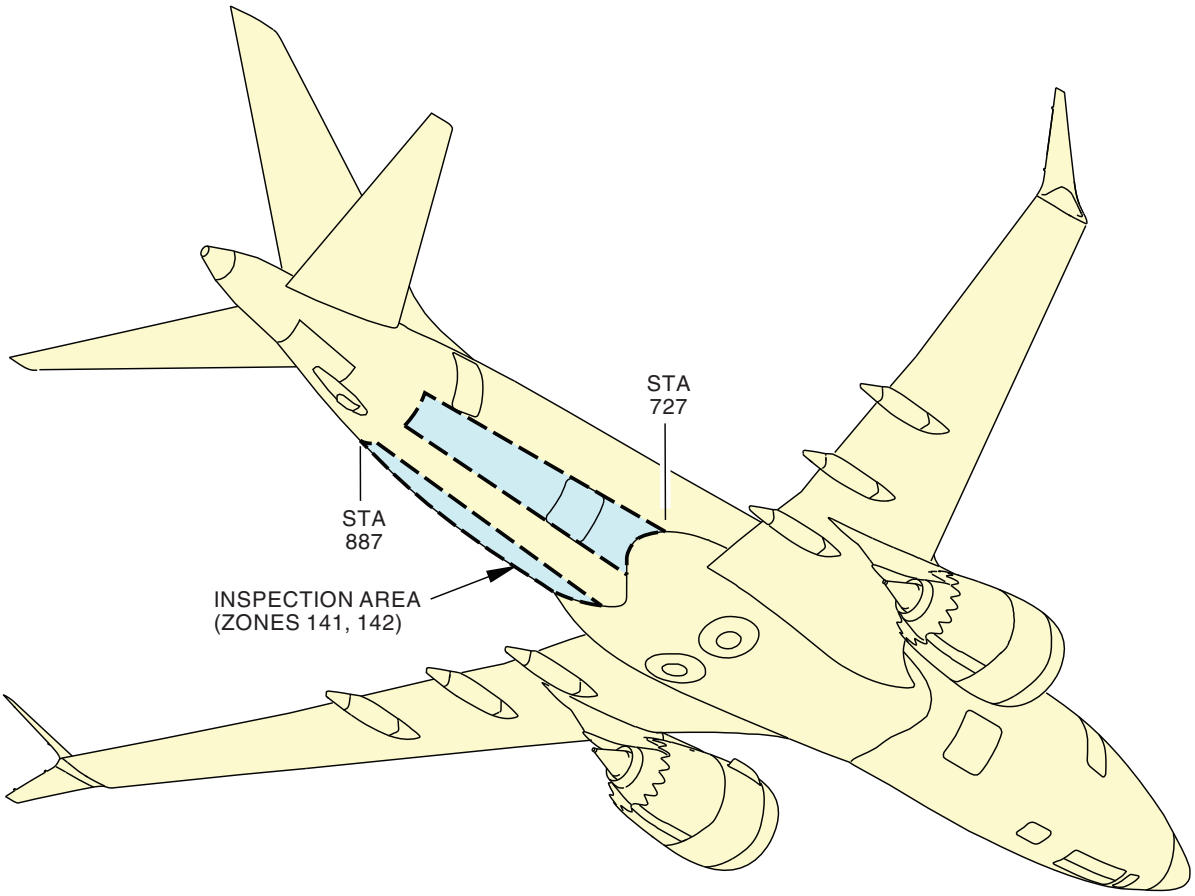

2545754 S0000601102_V2

Aft Cargo Compartment General Visual (External)
Figure 228/05-41-01-990-842

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-817

31. INTERNAL - ZONAL (GVI): Aft Cargo Compartment

(Figure 229)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

B. Access Panels

Number	Name/Location
822	Aft Cargo Door

C. Zonal Inspection

SUBTASK 05-41-01-010-014

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

NOTE: No cargo liners removed.

SUBTASK 05-41-01-210-017

(2) Perform an internal zonal inspection (GVI) of the Aft Cargo Compartment - Section 46 and 47 (part), Sta 727 to Sta 947.5.


SUBTASK 05-41-01-410-014

(3) Close this access panel:

Number	Name/Location
822	Aft Cargo Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

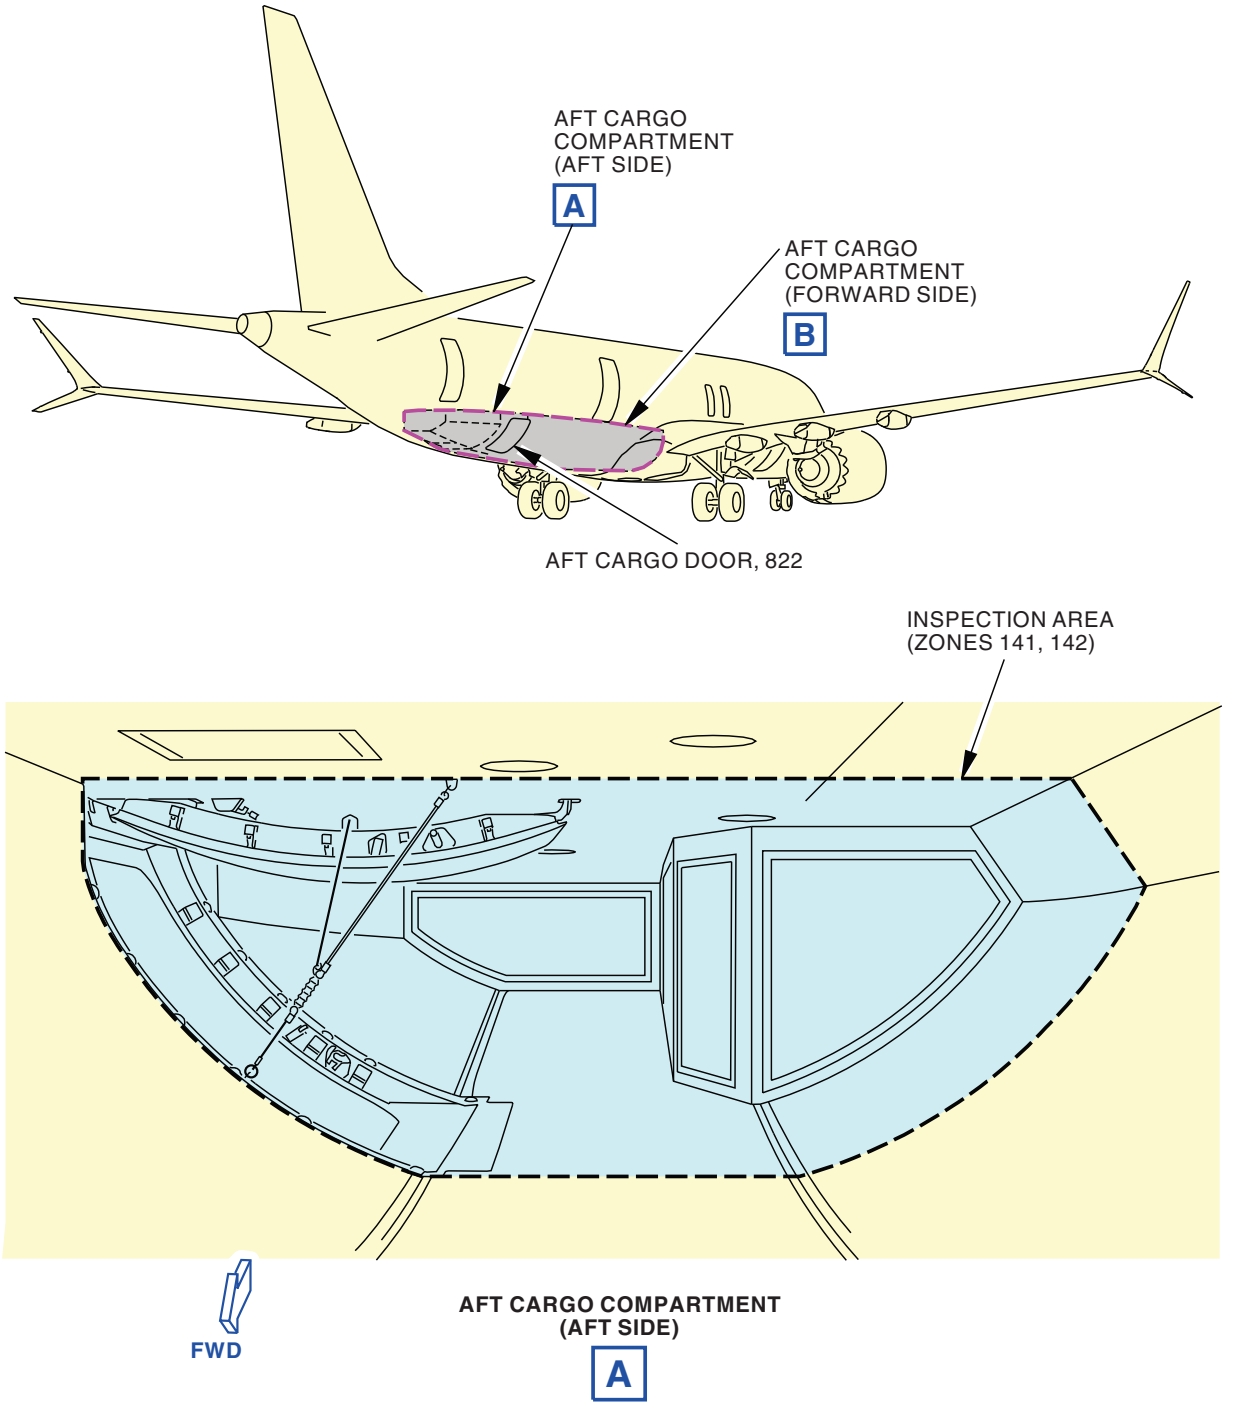

Aft Cargo Compartment General Visual (Internal)
Figure 229/05-41-01-990-816 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

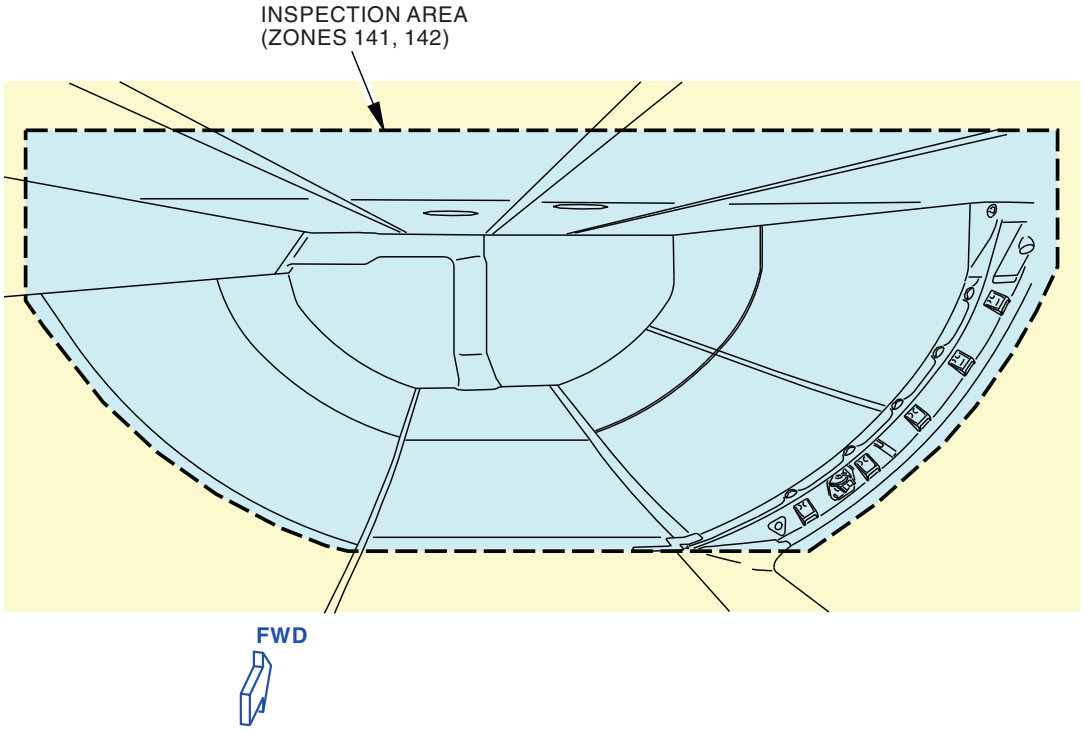

2410102 S00061524918_V1

Aft Cargo Compartment General Visual (Internal)
Figure 229/05-41-01-990-816 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-818

32. INTERNAL - ZONAL (GVI): Aft Cargo Compartment - Upper Angled Sidewall and Ceiling Panels Removed

(Figure 230)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. Zonal Inspection

SUBTASK 05-41-01-010-015

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

NOTE: Upper angled sidewall and ceiling panels removal required.

SUBTASK 05-41-01-210-018

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802 .

(3) Perform an internal zonal inspection (GVI) of the Aft Cargo Compartment - Section 46 and 47 (part), Sta 727 to Sta 947.5. (EZAP)

SUBTASK 05-41-01-910-019

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-015

(5) Close this access panel:

Number	Name/Location
822	Aft Cargo Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

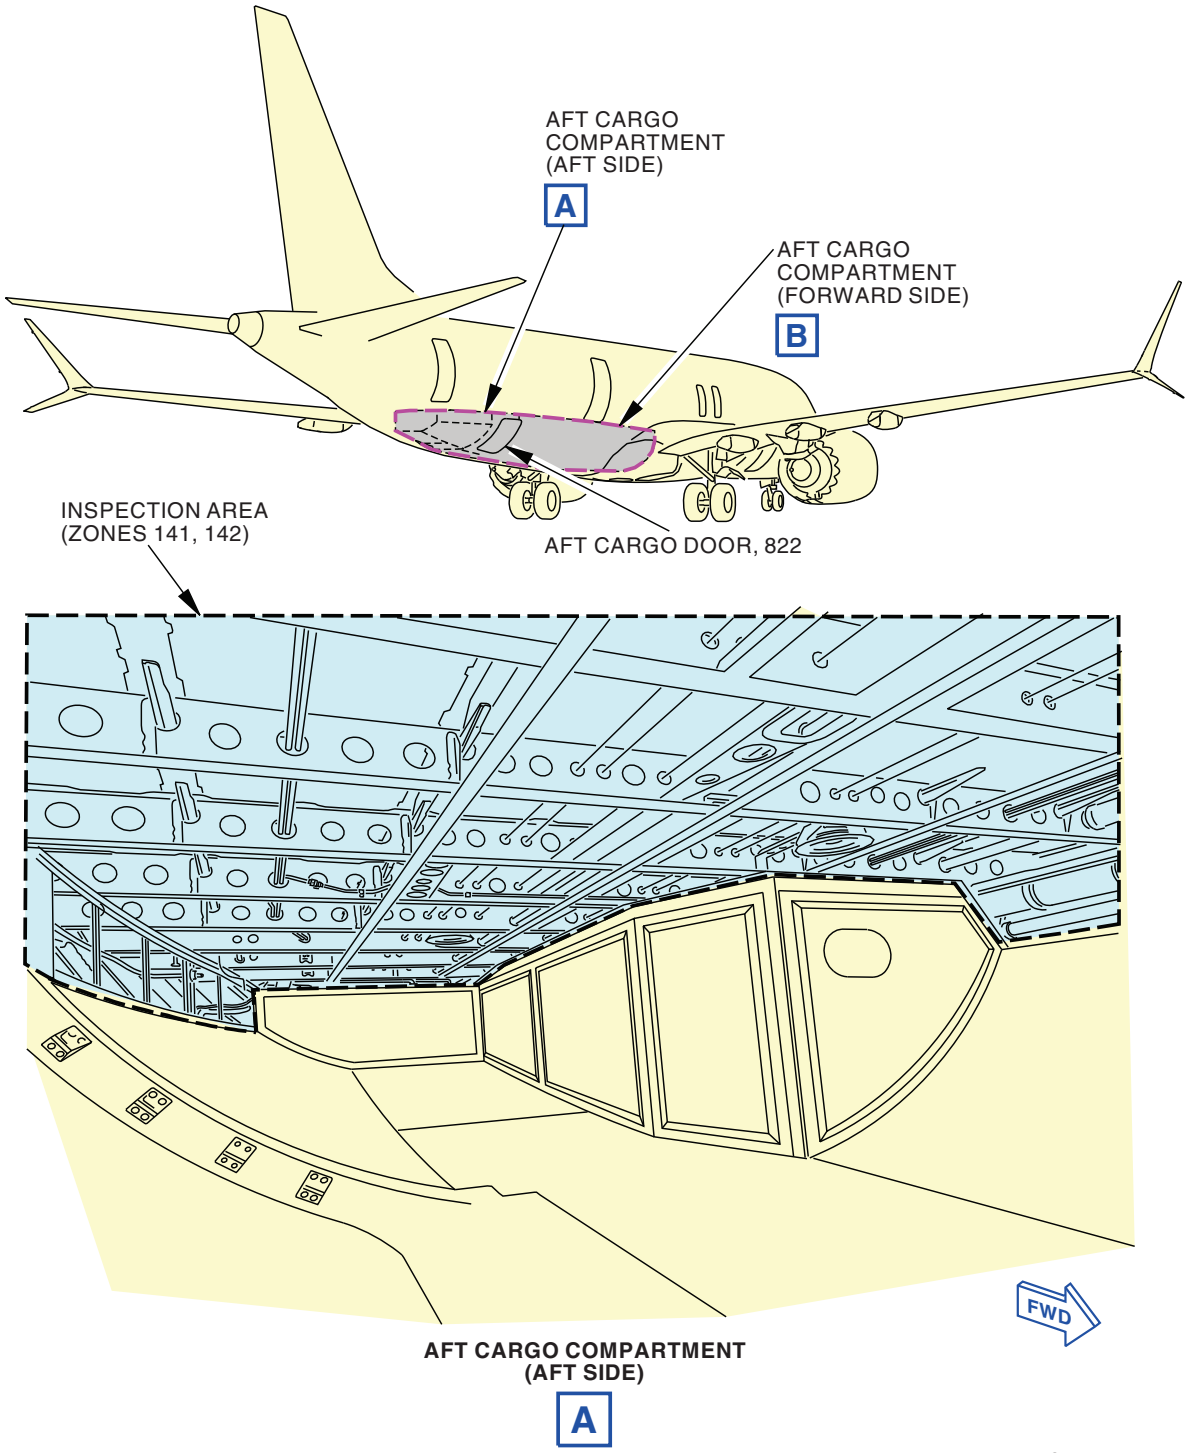

Aft Cargo Compartment General Visual (Internal) (Upper Angled Sidewall and Ceiling Panels Removed)
Figure 230/05-41-01-990-817 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

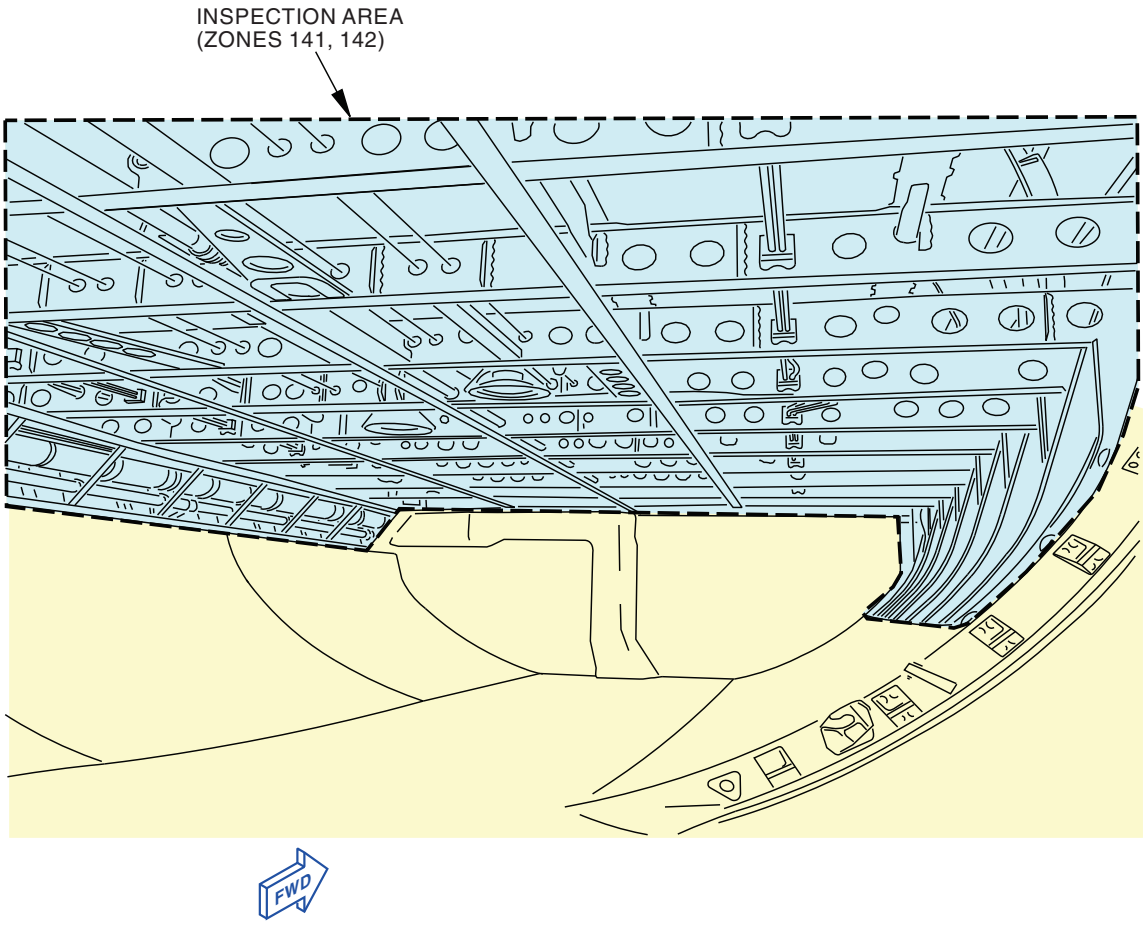

2410104 S00061524921_V1

Aft Cargo Compartment General Visual (Internal) (Upper Angled Sidewall and Ceiling Panels Removed)
Figure 230/05-41-01-990-817 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-819

33. INTERNAL - ZONAL (GVI): Aft Cargo Compartment - Sidewall Liners Removed

(Figure 231)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

B. Access Panels

Number	Name/Location
822	Aft Cargo Door

C. Zonal Inspection

SUBTASK 05-41-01-010-016

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

NOTE: Sidewall panels removal required.

SUBTASK 05-41-01-210-019

(2) Perform an internal zonal inspection (GVI) of the Aft Cargo Compartment - Section 46 and 47 (part), Sta 727 to Sta 947.5.


SUBTASK 05-41-01-410-016

(3) Close this access panel:

Number	Name/Location
822	Aft Cargo Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

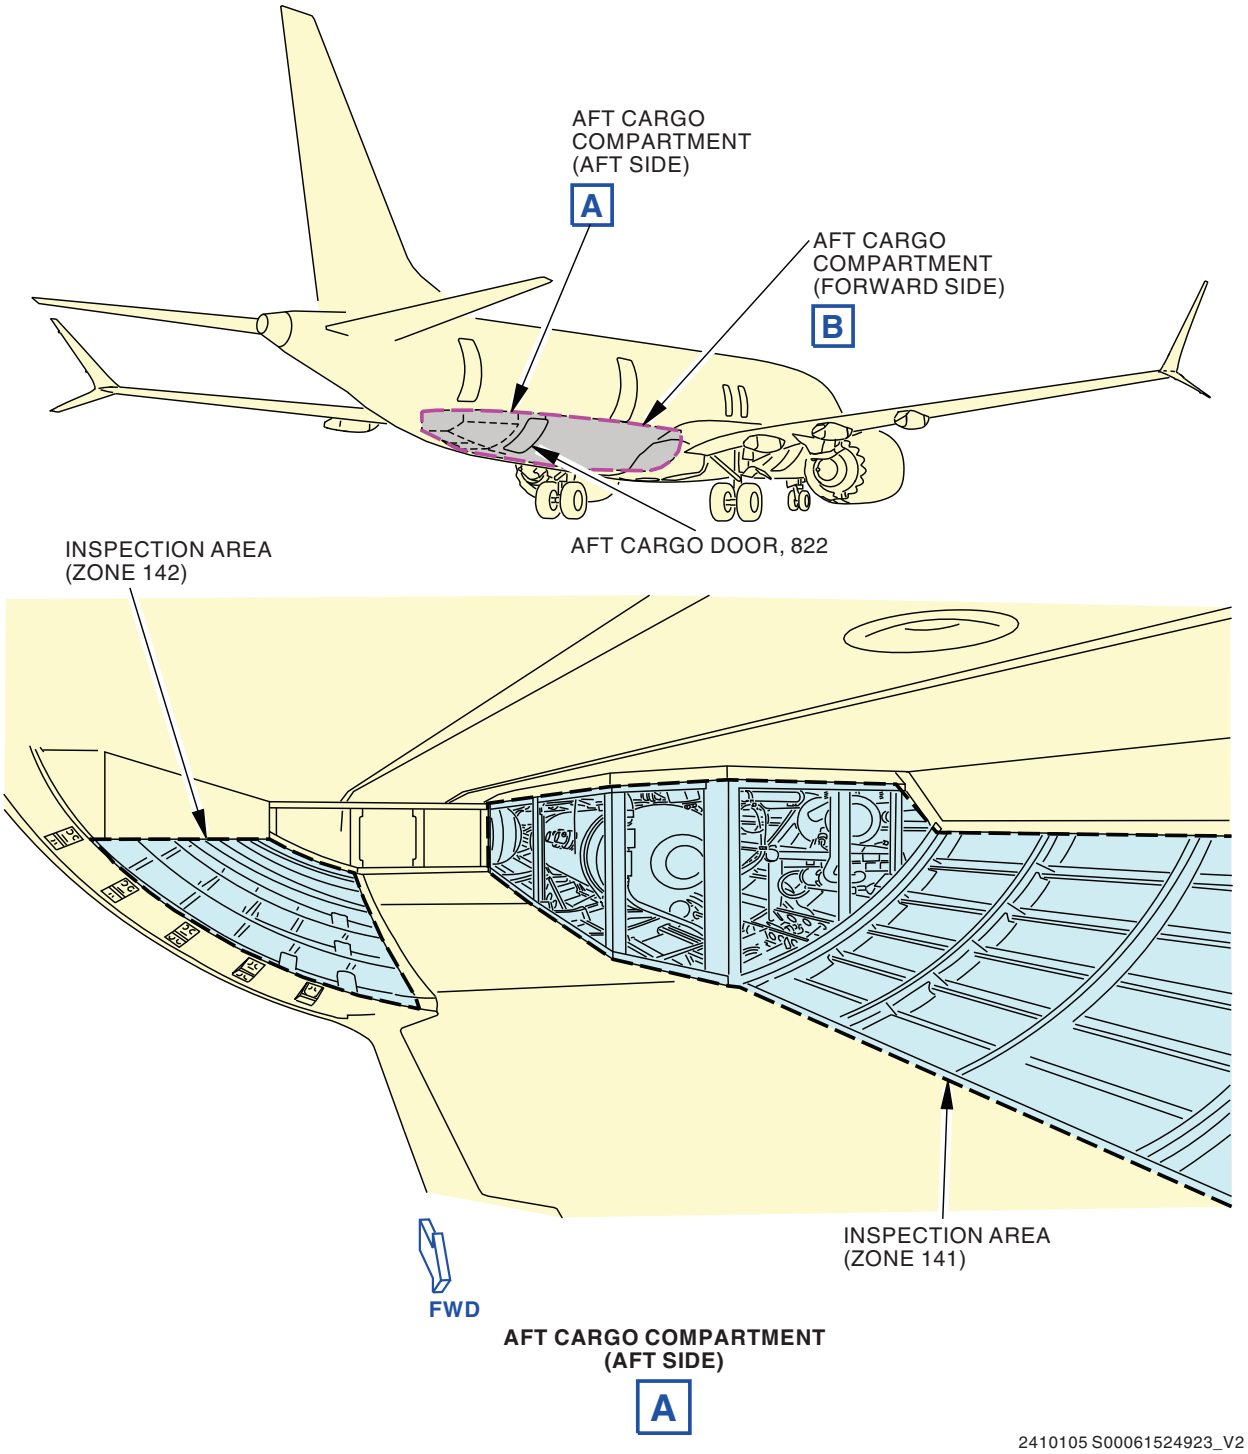

Aft Cargo Compartment General Visual (Internal) (Sidewall Liners Removed)
Figure 231/05-41-01-990-818 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

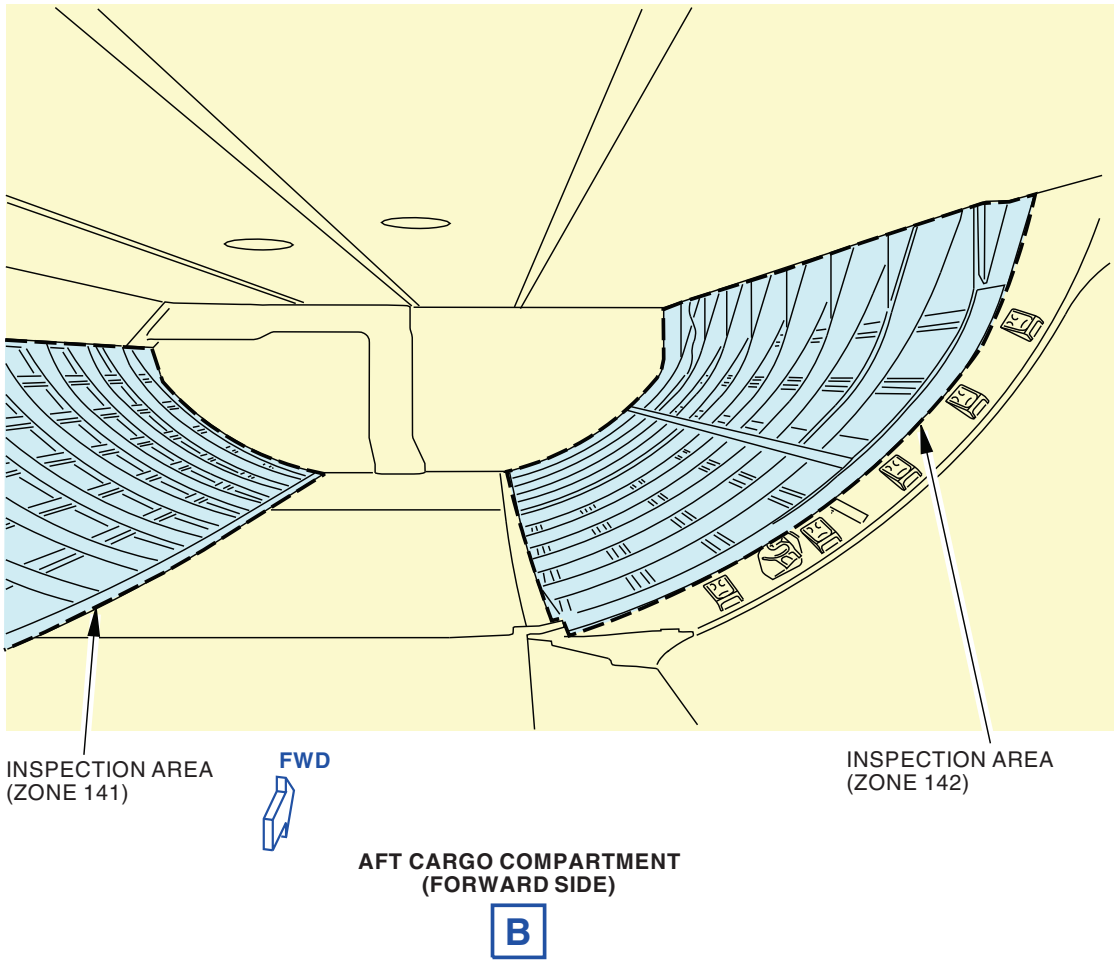

2410106 S00061524924_V1

Aft Cargo Compartment General Visual (Internal) (Sidewall Liners Removed)
Figure 231/05-41-01-990-818 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-820

34. EXTERNAL - ZONAL (GVI): Aft Cargo Door Surround Structure Fittings and Stops

(Figure 232)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
142	Aft Cargo Compartment - Right

B. Access Panels

Number	Name/Location
822	Aft Cargo Door

C. Zonal Inspection

SUBTASK 05-41-01-010-017

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

SUBTASK 05-41-01-210-020

(2) Perform an external zonal inspection (GVI) of the Aft Cargo Door Surround Structure Fittings and Stops - Section 46, Sta 827.


SUBTASK 05-41-01-410-017

(3) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

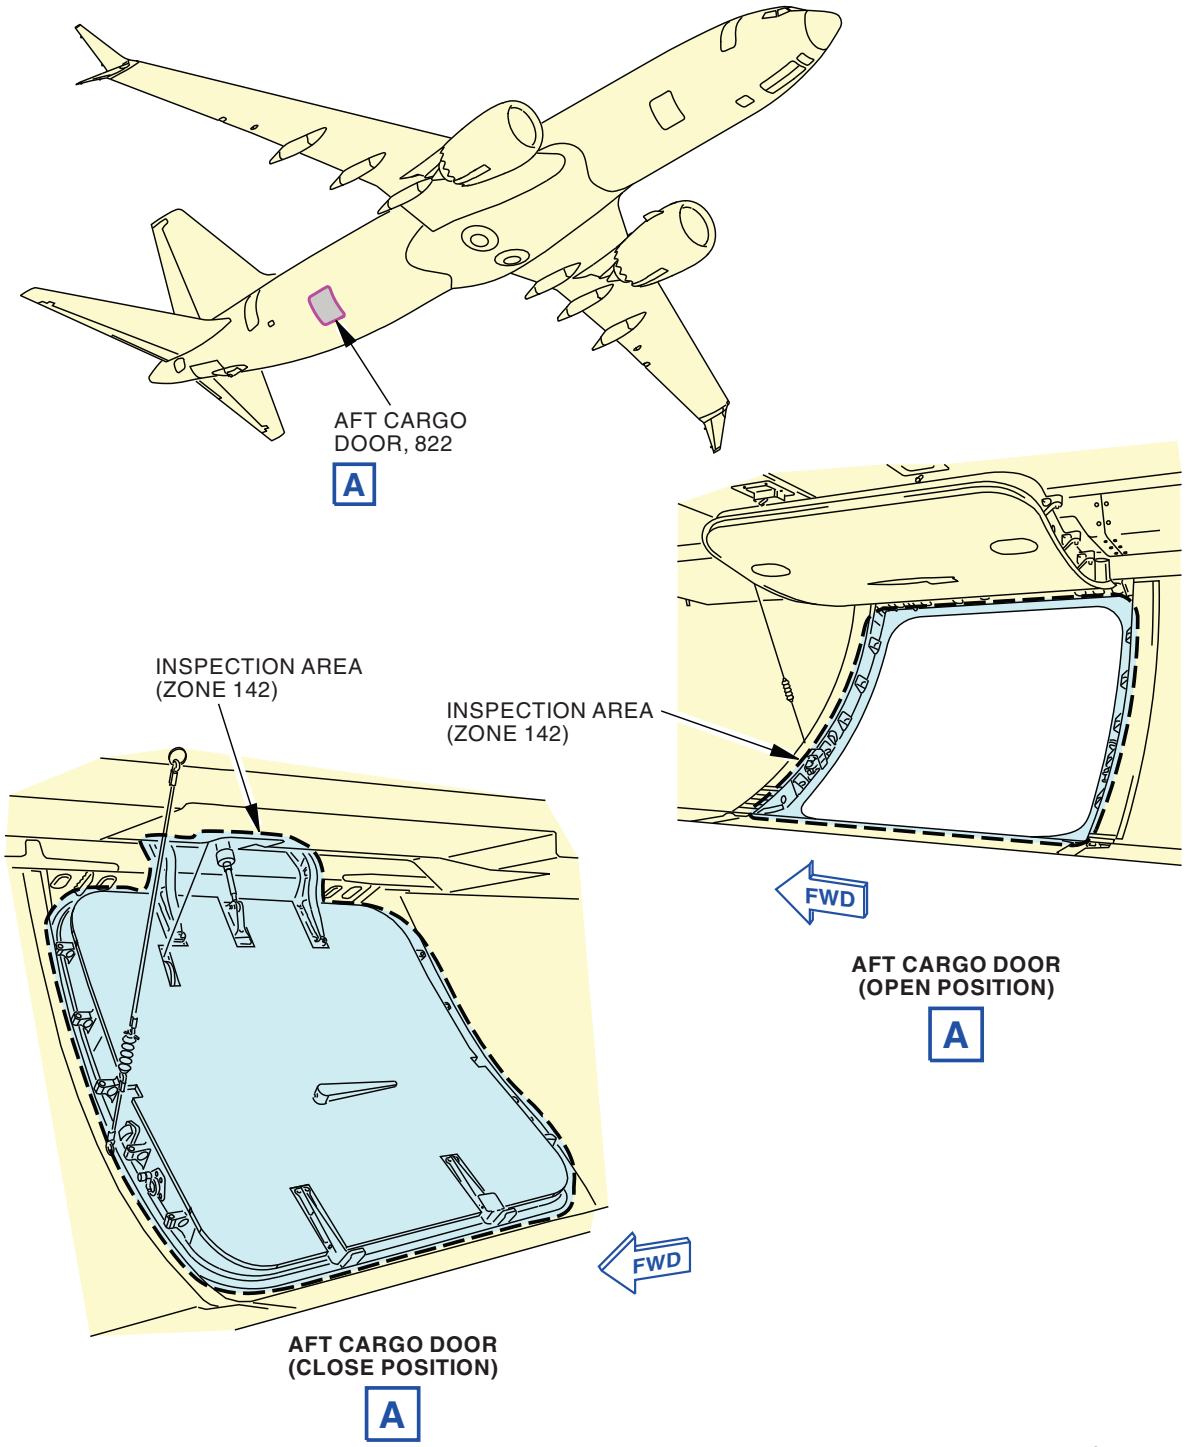

2410107 S00061524926_V1

Fittings and Stops - Aft Cargo Door Surround Structure General Visual (External)
Figure 232/05-41-01-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-821

35. INTERNAL - ZONAL (GVI): Aft Cargo Compartment Vacuum Waste Compartment

(Figure 233)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
50-12-03-000-801	Waste Tank Enclosure Panel Removal (P/B 401)
50-12-03-400-801	Waste Tank Enclosure Panel Installation (P/B 401)

B. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left

C. Access Panels

Number	Name/Location
141MW	Panel Assy - Aft Cargo Compartment Bulkhead Vacuum Blower Access
141PW	Aft Cargo Compartment Bulkhead Logic Mod/Waste Tank Access
141QW	Aft Cargo Compartment Bulkhead
141RW	Aft Cargo Compartment Bulkhead Waste Tank Level Sensor Access
141SW	Aft Cargo Compartment Bulkhead
822	Aft Cargo Door

D. Zonal Inspection

SUBTASK 05-41-01-010-018

(1) Open these access panels:

Number	Name/Location
141MW	Panel Assy - Aft Cargo Compartment Bulkhead Vacuum Blower Access
141PW	Aft Cargo Compartment Bulkhead Logic Mod/Waste Tank Access
141QW	Aft Cargo Compartment Bulkhead
141RW	Aft Cargo Compartment Bulkhead Waste Tank Level Sensor Access
141SW	Aft Cargo Compartment Bulkhead
822	Aft Cargo Door

SUBTASK 05-41-01-010-028

(2) Remove vacuum waste compartment panels: Waste Tank Enclosure Panel Removal, TASK 50-12-03-000-801.

SUBTASK 05-41-01-210-021

(3) Perform an internal zonal inspection (GVI) of the Aft Cargo Compartment Vacuum Waste Compartment.

SUBTASK 05-41-01-410-028

(4) Install Vacuum waste compartment panels: Waste Tank Enclosure Panel Installation, TASK 50-12-03-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-01-410-018

(5) Close these access panels:

Number	Name/Location
141MW	Panel Assy - Aft Cargo Compartment Bulkhead Vacuum Blower Access
141PW	Aft Cargo Compartment Bulkhead Logic Mod/Waste Tank Access
141QW	Aft Cargo Compartment Bulkhead
141RW	Aft Cargo Compartment Bulkhead Waste Tank Level Sensor Access
141SW	Aft Cargo Compartment Bulkhead
822	Aft Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

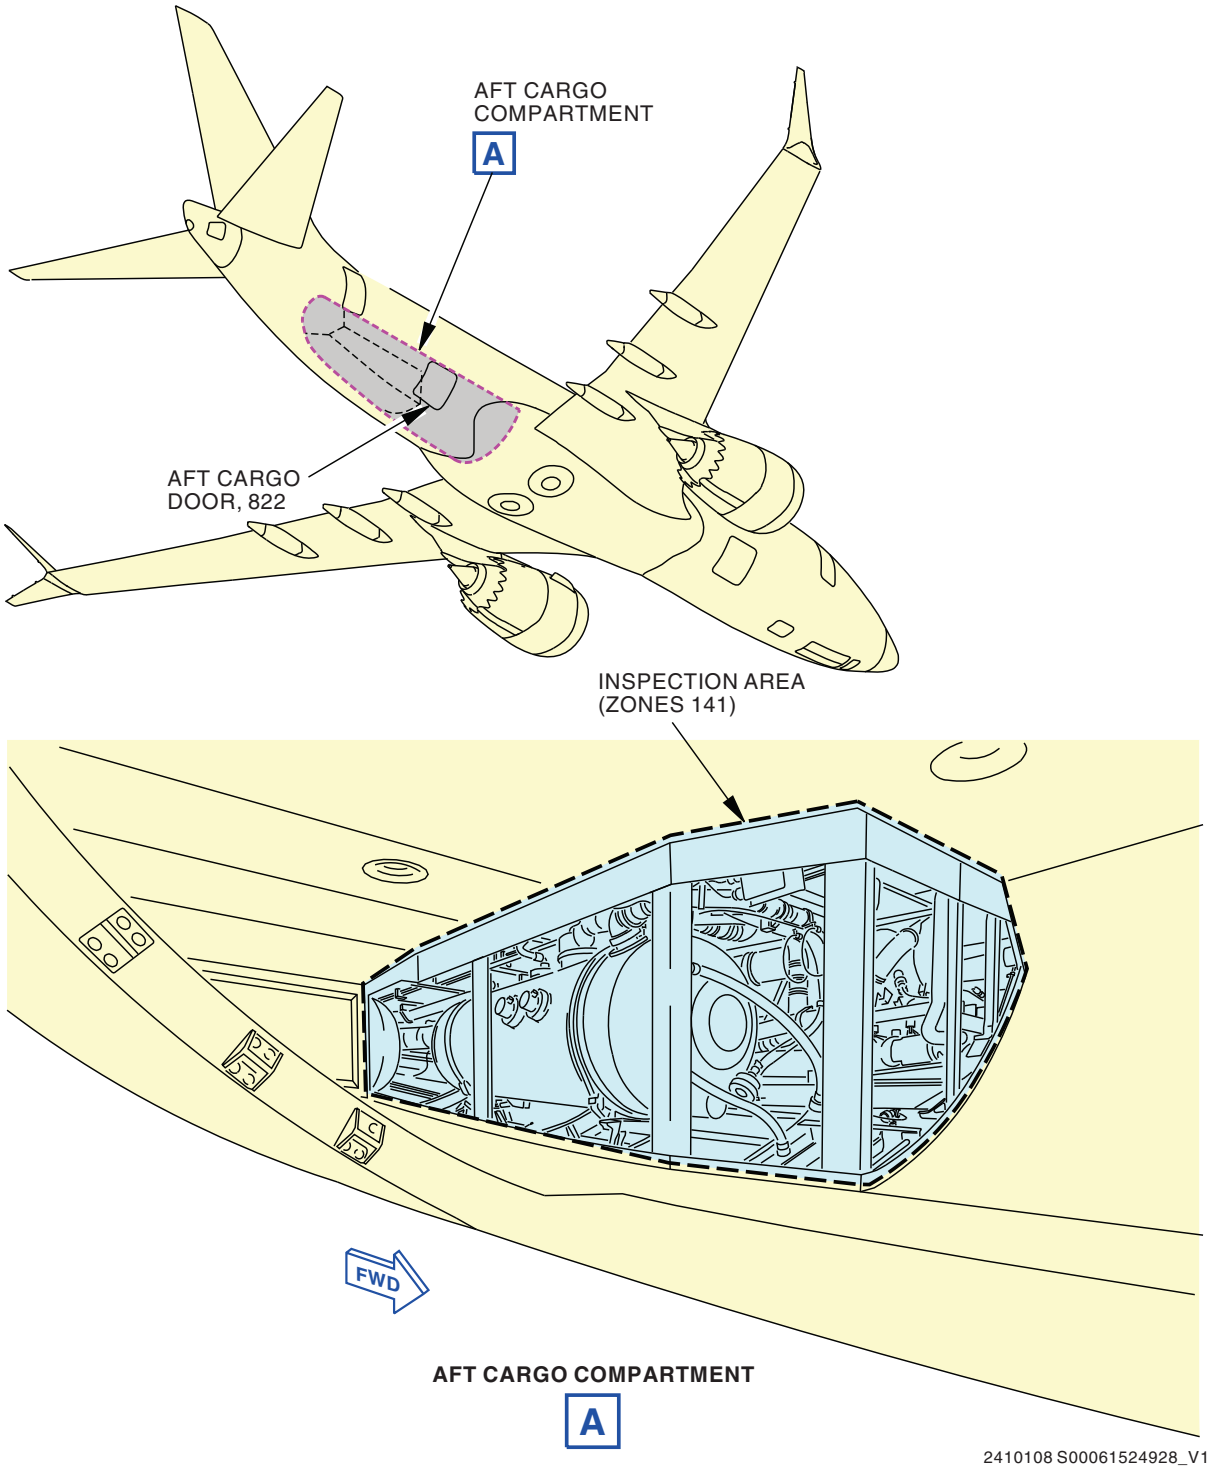

Aft Cargo Compartment - Vacuum Waste Compartment General Visual (Internal)
Figure 233/05-41-01-990-820

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-844

36. EXTERNAL - ZONAL (GVI): Area Below Aft Cargo Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
143	Area Below Aft Cargo Compartment - Left
144	Area Below Aft Cargo Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-044

(1) Perform an external zonal inspection (GVI) of the Area Below the Aft Cargo Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

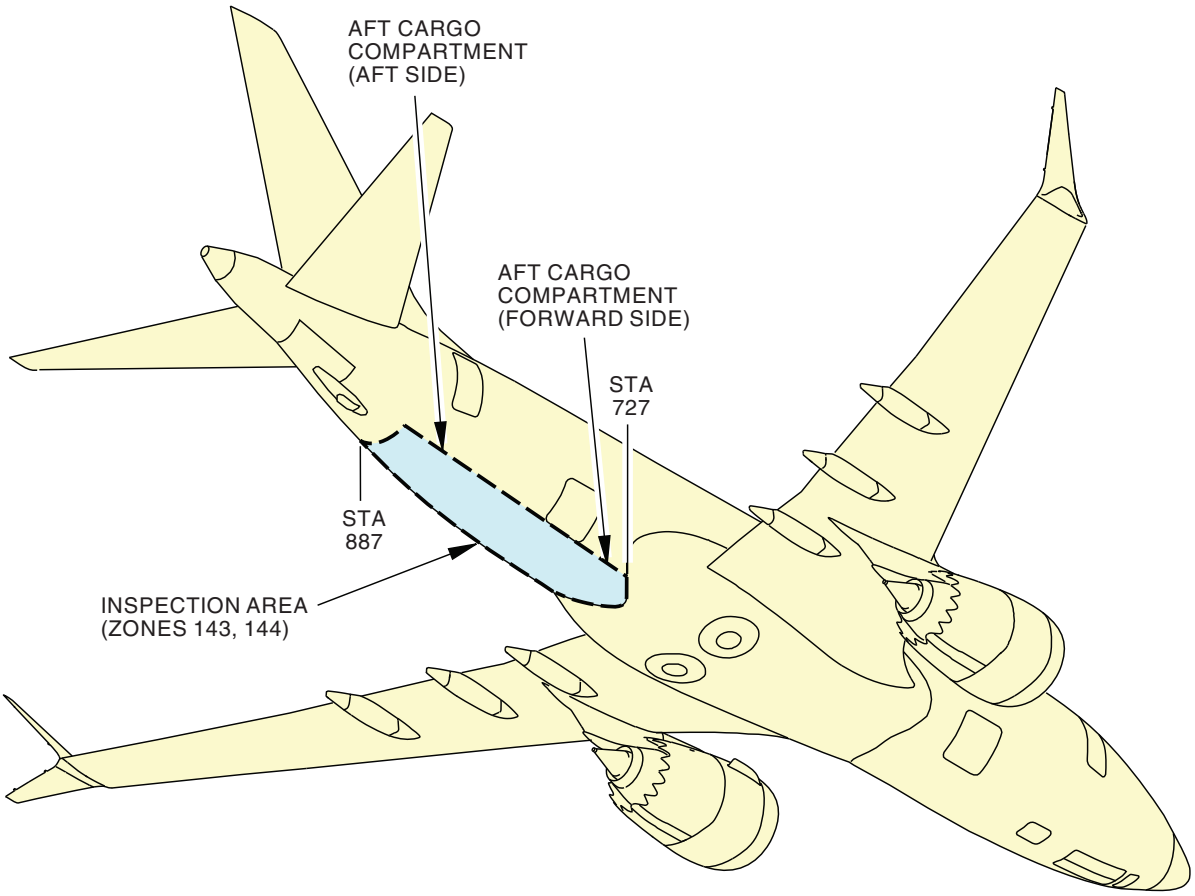

2545760 S0000601104_V2

Area Below Aft Cargo Compartment General Visual (External)
Figure 234/05-41-01-990-843

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-822

37. INTERNAL - ZONAL (GVI): Area Below Aft Cargo Compartment

(Figure 235)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
143	Area Below Aft Cargo Compartment - Left
144	Area Below Aft Cargo Compartment - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. Zonal Inspection

SUBTASK 05-41-01-010-019

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

NOTE: Center floor panels removal required. Cargo loading system removed/displaced as required.

SUBTASK 05-41-01-210-022

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Area Below the Aft Cargo Compartment - Section 46 and 47 (part), Sta 727 to Sta 947.5. (EZAP)

SUBTASK 05-41-01-910-009

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-019


(5) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

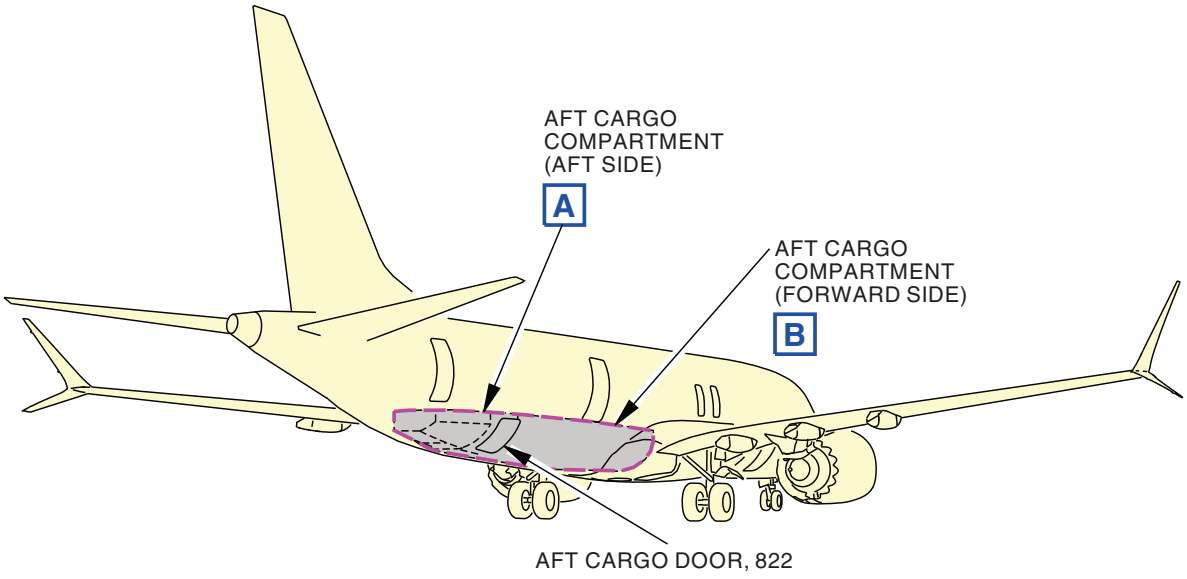

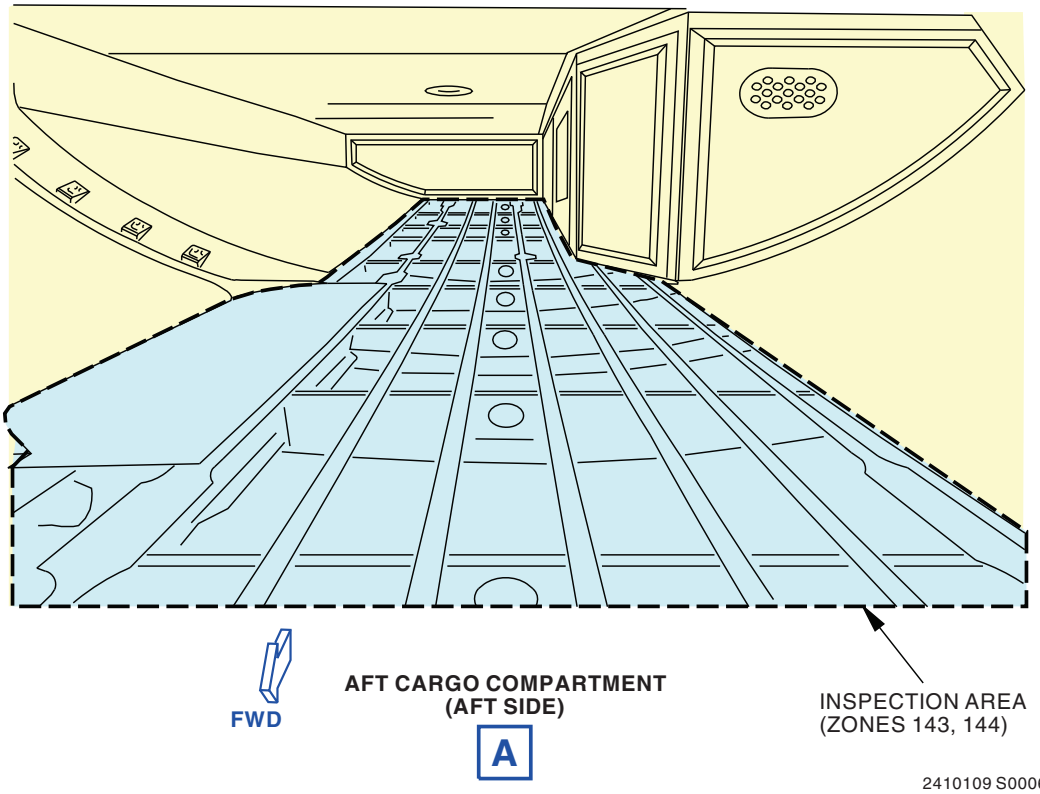

Below the Aft Cargo Compartment General Visual (Internal) (Floor Panels Removed)
Figure 235/05-41-01-990-821 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

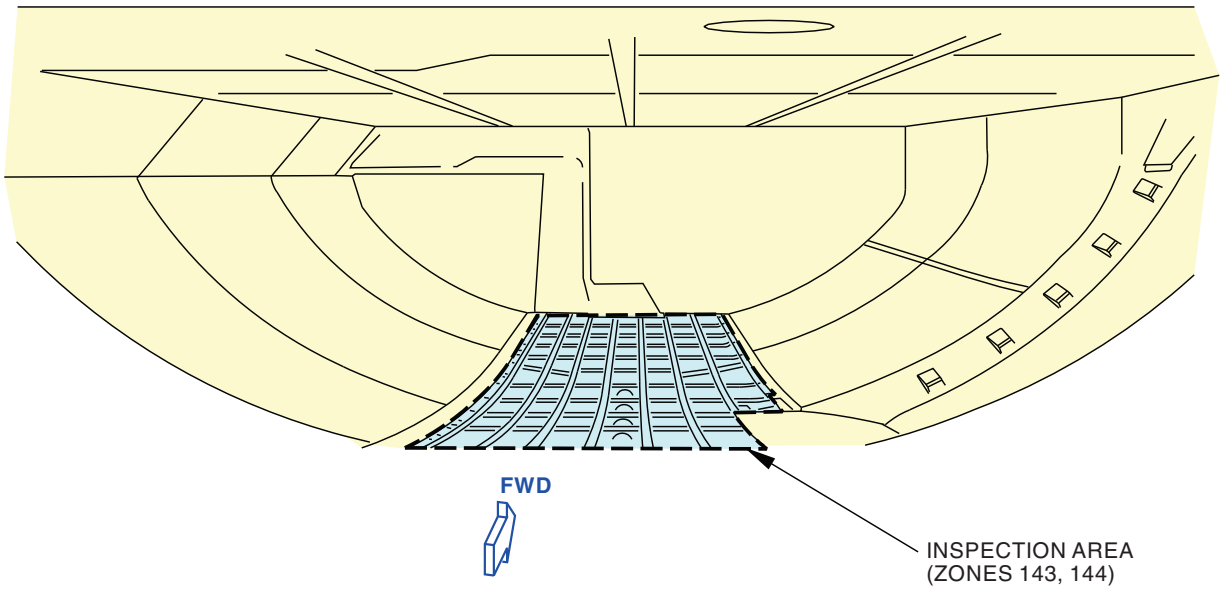

**AFT CARGO COMPARTMENT
(FORWARD SIDE)**

B

2410110 S00061524931_V1

**Below the Aft Cargo Compartment General Visual (Internal) (Floor Panels Removed)
Figure 235/05-41-01-990-821 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-845

38. EXTERNAL - ZONAL (GVI): Aft Cargo Compartment Equipment Bay

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
145	Aft Cargo Compartment Equipment Bay - Left
146	Aft Cargo Compartment Equipment Bay - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-045

(1) Perform an external zonal inspection (GVI) of the Aft Cargo Compartment Equipment Bay.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

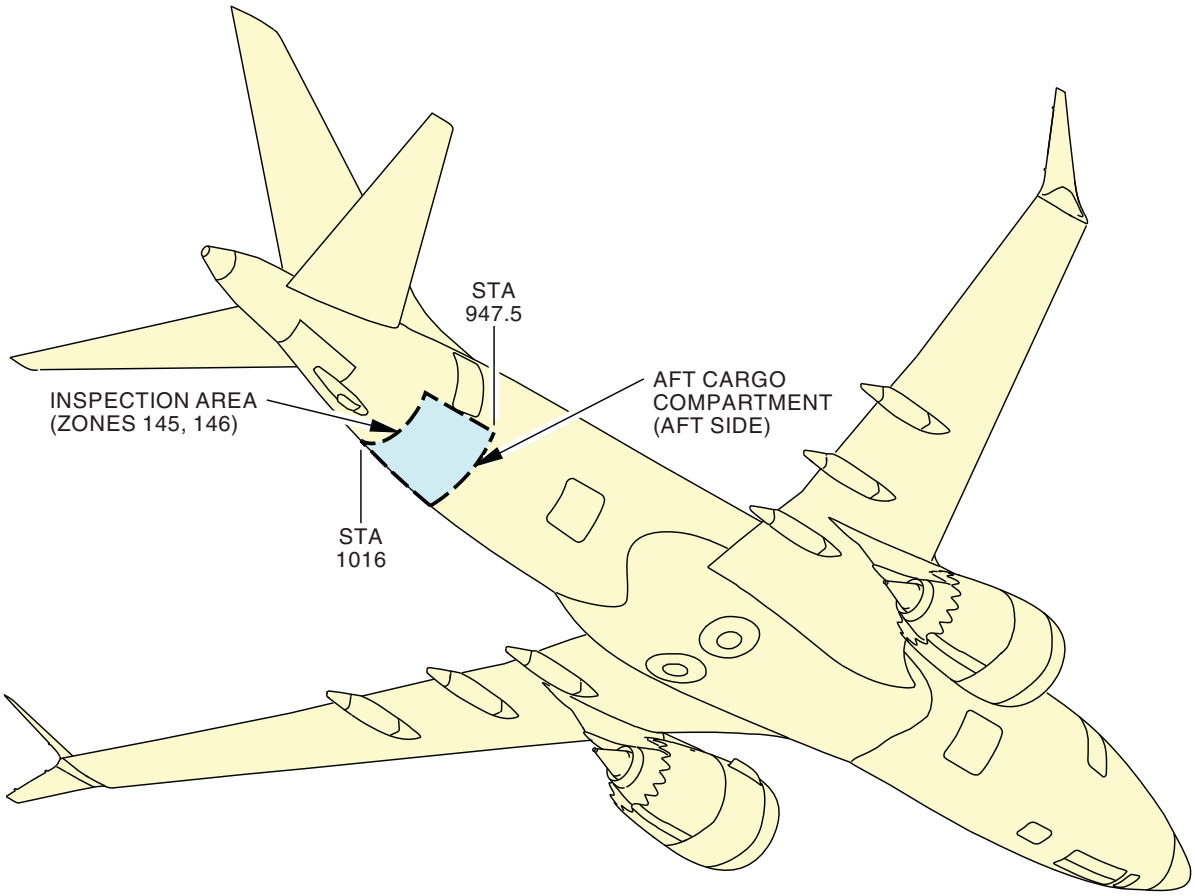

2545765 S0000601106_V2

Aft Cargo Compartment Equipment Bay General Visual (External)
Figure 236/05-41-01-990-844

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-823

39. INTERNAL - ZONAL (GVI): Aft Cargo Compartment Equipment Bay

(Figure 237)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
145	Aft Cargo Compartment Equipment Bay - Left
146	Aft Cargo Compartment Equipment Bay - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. Zonal Inspection

SUBTASK 05-41-01-010-020

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

NOTE: Aft cargo panels at STA 947 bulkhead removal required.

SUBTASK 05-41-01-210-023

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Aft Cargo Compartment Equipment Bay - Section 47, Sta 947.5. to aft pressure bulkhead. (EZAP)

SUBTASK 05-41-01-910-010

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-020

(5) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

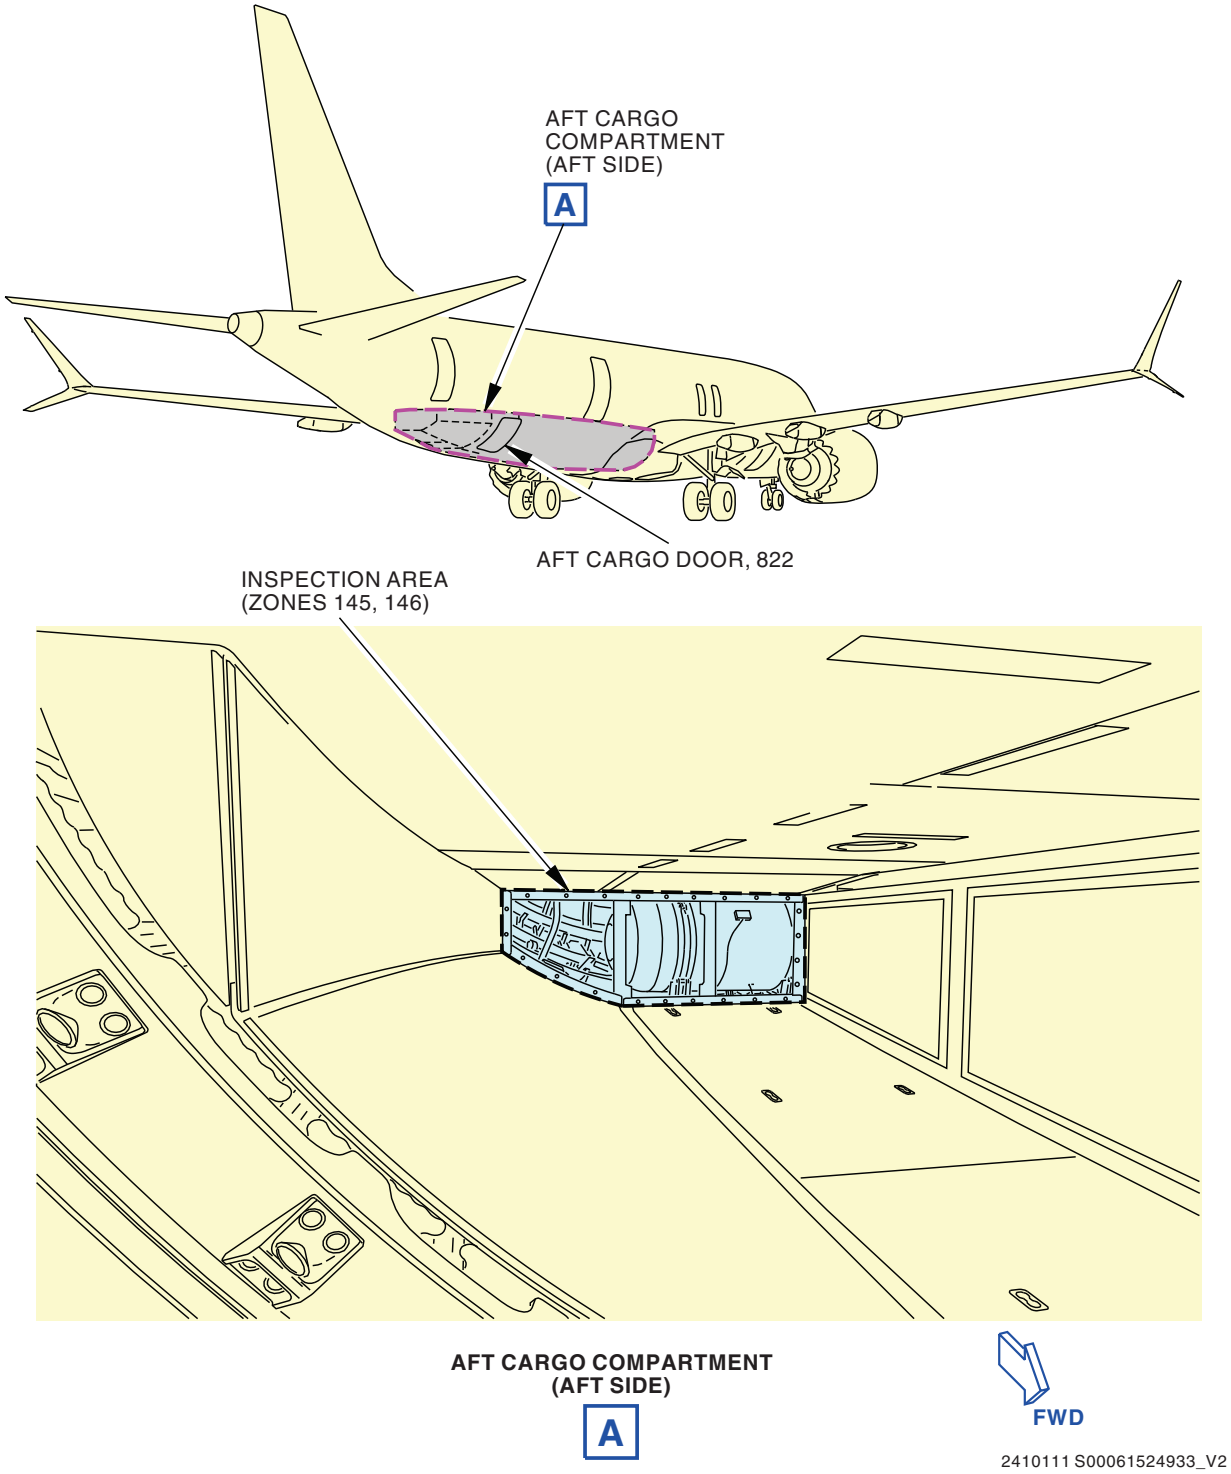

Aft Cargo Compartment - Equipment Bay General Visual (Internal) (Endwall Liners Removed)
Figure 237/05-41-01-990-822

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-846

40. EXTERNAL - ZONAL (GVI): Keel Beam STA 727 to STA 743.95

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
149	Keel Beam (Part) Body Station 727.00 to Body Station 743.95


B. Zonal Inspection

SUBTASK 05-41-01-210-046


(1) Perform an external zonal inspection (GVI) of the Keel Beam STA 727 to STA 743.95.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

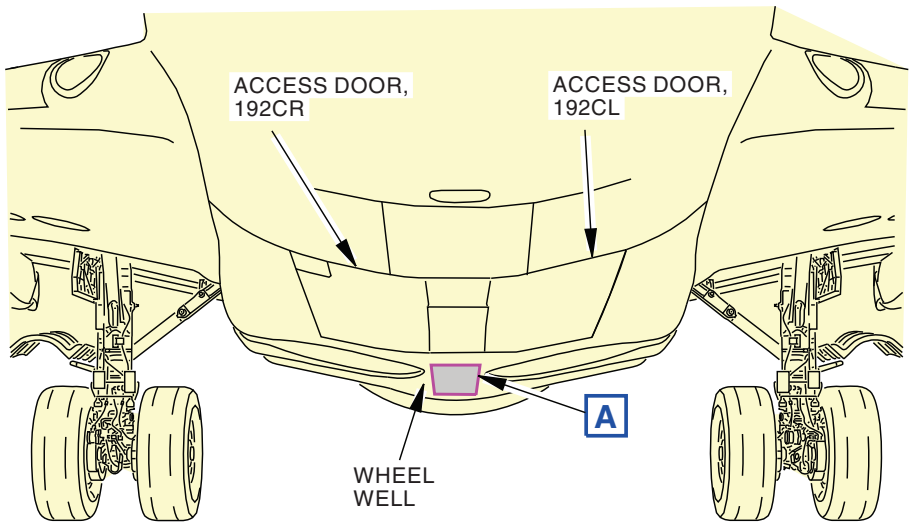

(VIEW IN THE AFT DIRECTION)

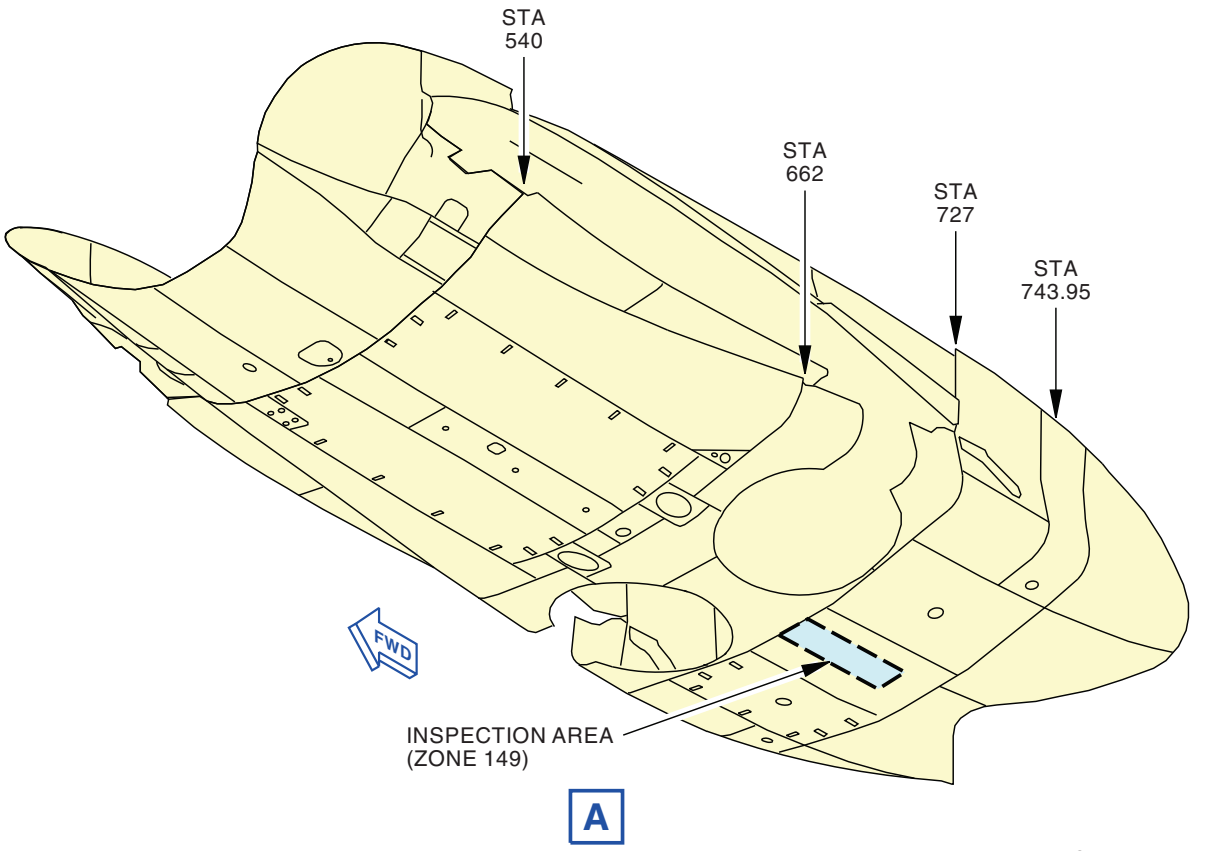

2545619 S0000601108_V2

Keel Beam STA 727 to STA 743.95 General Visual (External)
Figure 238/05-41-01-990-845

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-847

41. INTERNAL - ZONAL (GVI): Keel Beam STA 727 to STA 743.95

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
149	Keel Beam (Part) Body Station 727.00 to Body Station 743.95

B. Access Panels

Number	Name/Location
194E	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel

C. Zonal Inspection

SUBTASK 05-41-01-010-029

(1) Open these access panels:

Number	Name/Location
194E	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel

SUBTASK 05-41-01-210-047

(2) Perform an internal zonal inspection (GVI) of the Keel Beam - STA 727 to STA 743.95.


SUBTASK 05-41-01-410-029

(3) Close these access panels:

Number	Name/Location
194E	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

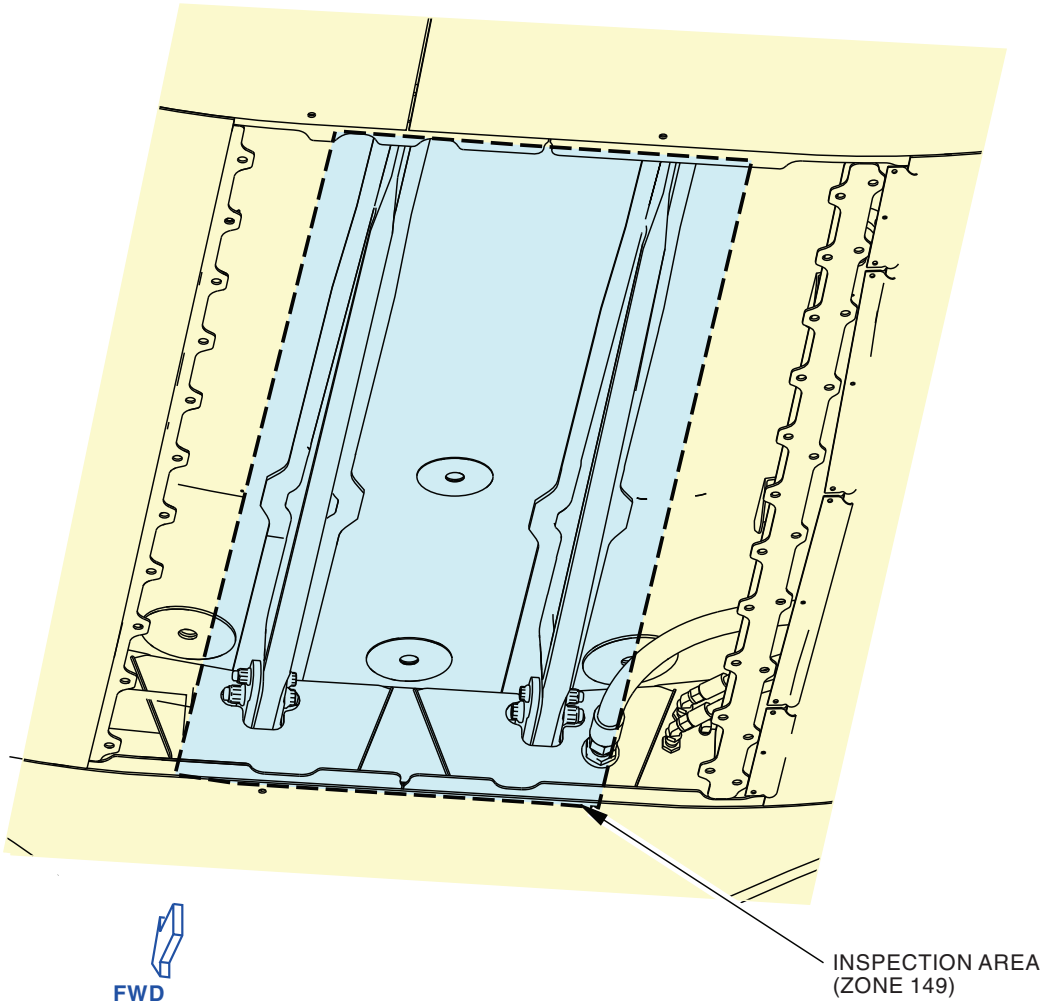

2545825 S0000601109_V2

Keel Beam STA 727 to STA 743.95 General Visual (Internal)
Figure 239/05-41-01-990-846

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-824

42. EXTERNAL - ZONAL (GVI): Wing to Body Fairing

(Figure 240)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
100	Lower Half of Fuselage
191	Lower Wing-To-Body Fairing - Forward of Wing Box
192	Lower Wing-To-Body Fairing - Under Wing Box
193	Lower Wing-To-Body Fairing - Wheel Well
194	Lower Wing-To-Body Fairing - Aft of Wheel Well
195	Above Wing, Wing-To-Body Fairing - Left
196	Above Wing, Wing-To-Body Fairing - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-024

(1) Perform an external zonal inspection (GVI) of the Wing-to-Body Fairing, as visible when viewed from the ground. Inspection is accomplished from the ground without the use of stands or ladders. No additional access panels required.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

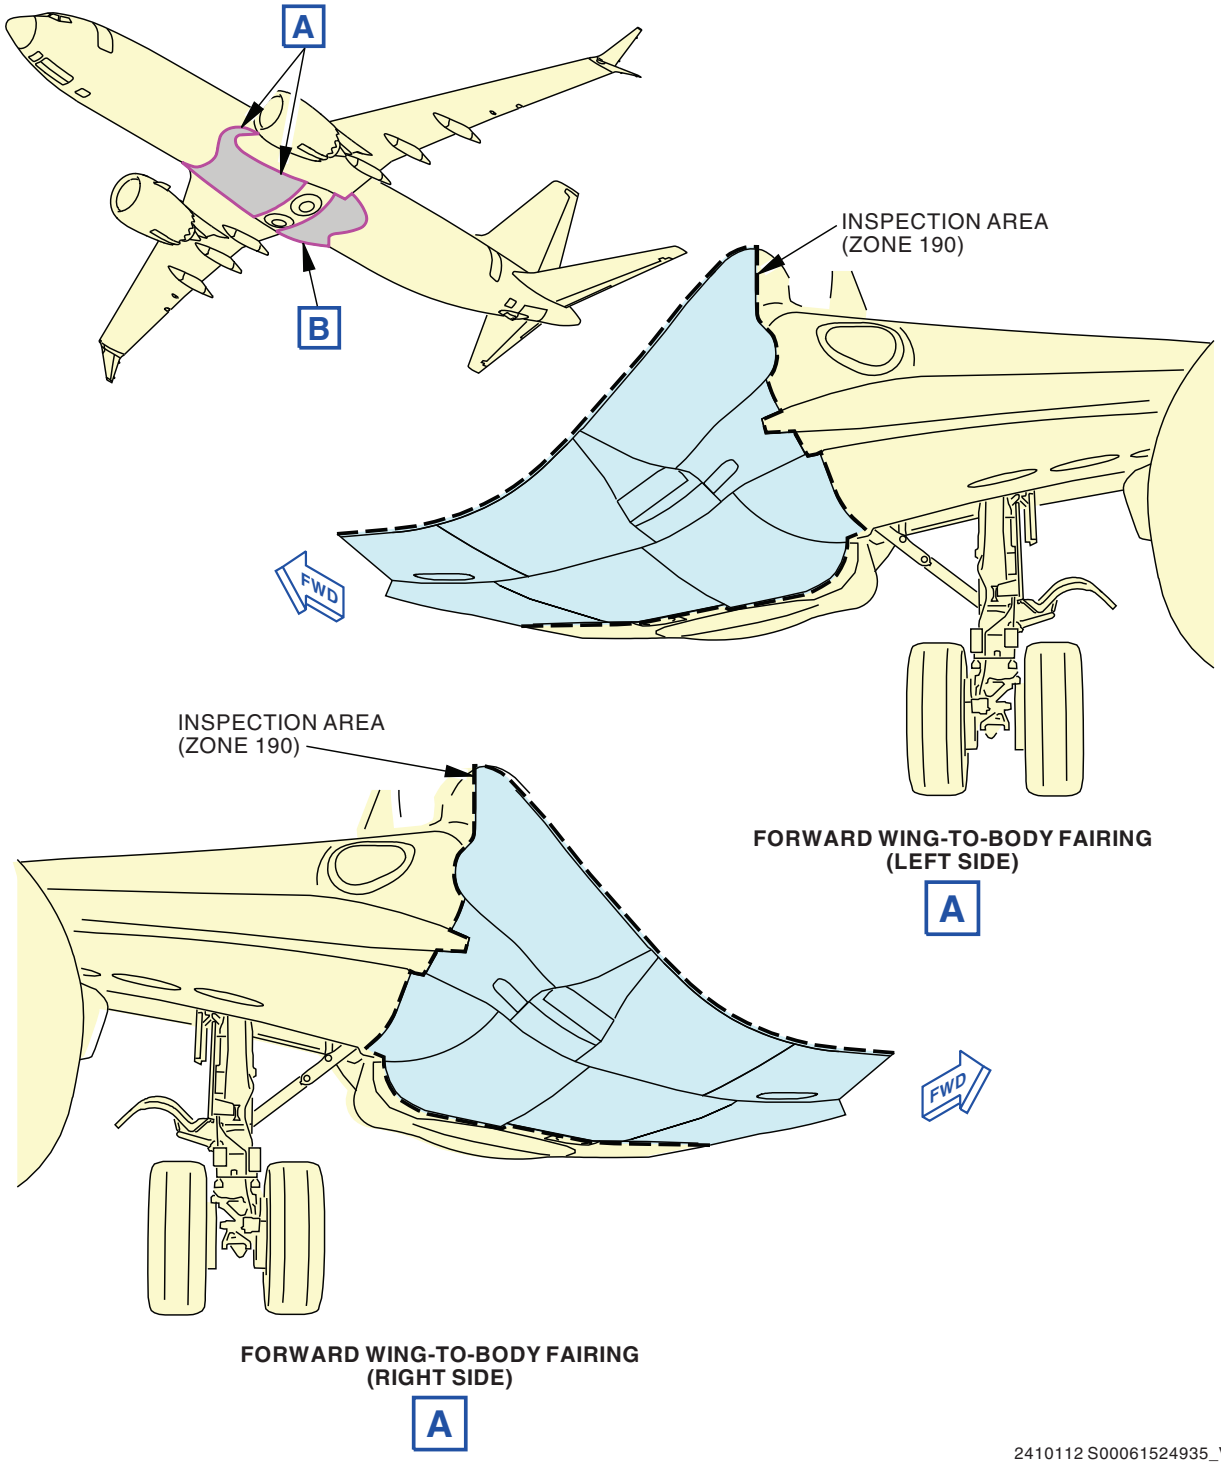


Wing-to-Body Fairing General Visual (External)
Figure 240/05-41-01-990-823 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

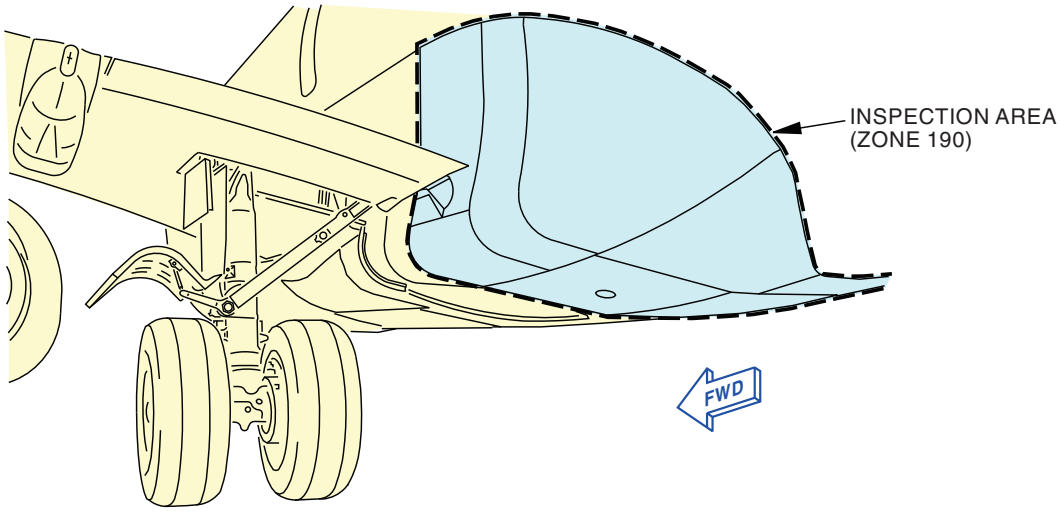

**AFT WING-TO-BODY FAIRING
(LEFT SIDE)**

B

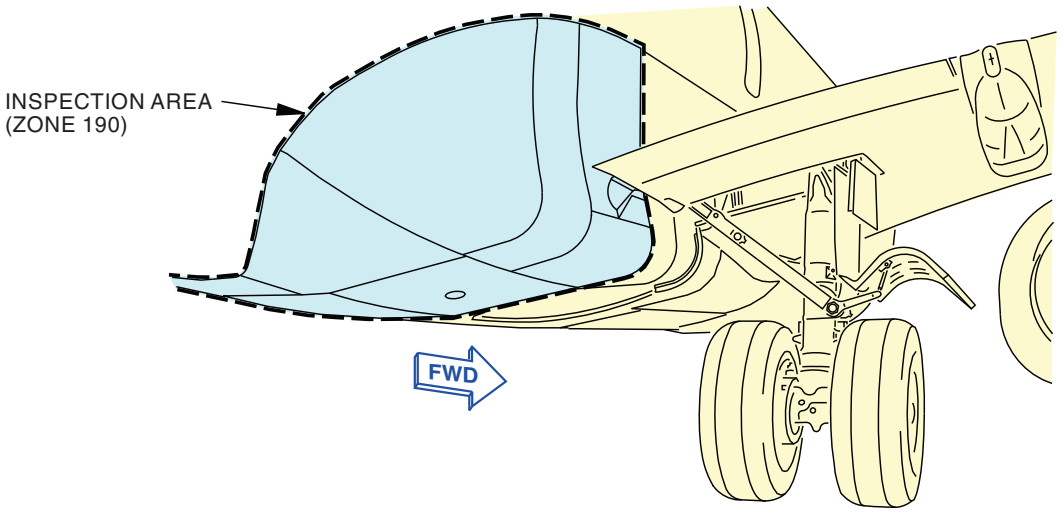

**AFT WING-TO-BODY FAIRING
(RIGHT SIDE)**

B

2410113 S00061524936_V1

**Wing-to-Body Fairing General Visual (External)
Figure 240/05-41-01-990-823 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-848

43. EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Forward of Wing Box

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
191	Lower Wing-To-Body Fairing - Forward of Wing Box


B. Zonal Inspection

SUBTASK 05-41-01-210-048

(1) Perform an external zonal inspection (GVI) of the Lower Wing-to-Body Fairing - Forward of Wing Box.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

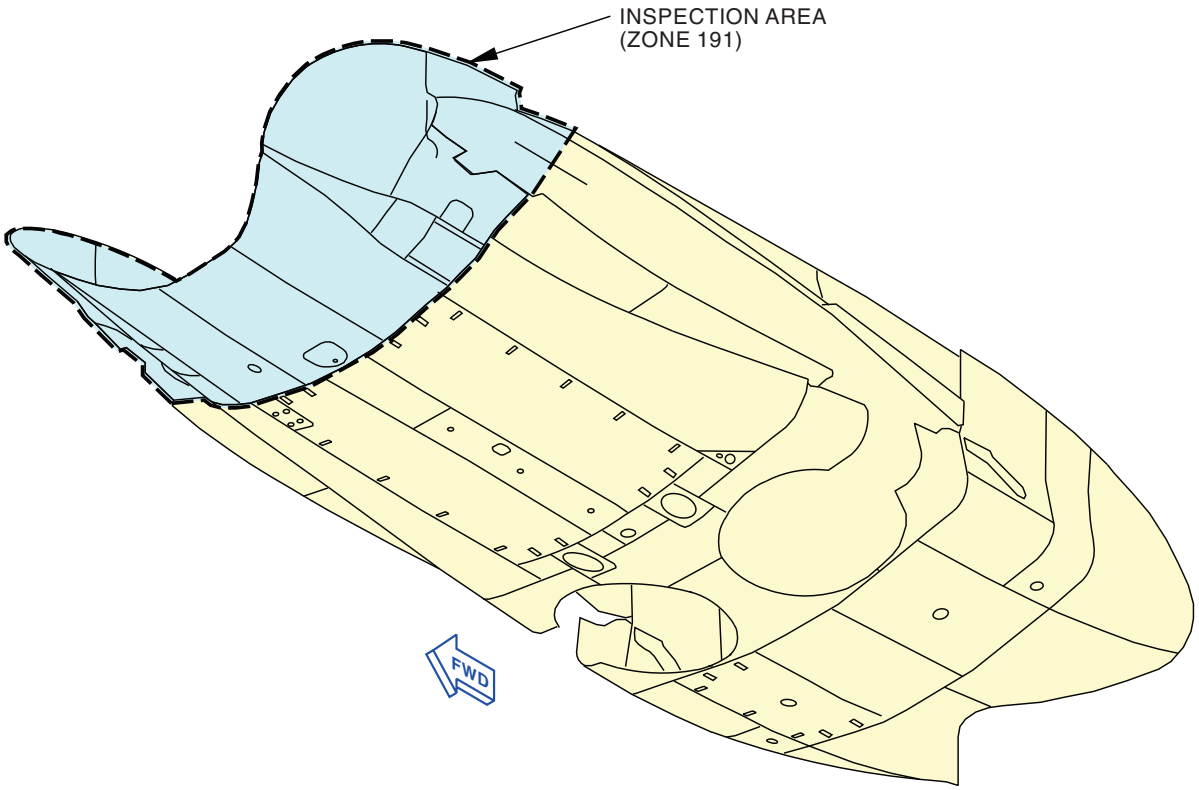

2545747 S0000601111_V1

Lower Wing-to-Body Fairing - Forward of Wing Box General Visual (External)
Figure 241/05-41-01-990-847

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-825

44. INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Forward of Wing Box

(Figure 242)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
191	Lower Wing-To-Body Fairing - Forward of Wing Box

D. Access Panels

Number	Name/Location
191AL	Forward Wing-To-Body Fairing Panel - Upper
191AR	Forward Wing-To-Body Fairing Panel - Upper
191BL	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191BR	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191CL	Forward Wing-To-Body Fairing Panel - Middle
191CR	Forward Wing-To-Body Fairing Panel - Middle
191D	Forward Wing-To-Body Fairing Panel - Lower
191FL	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191FR	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191HL	Ram Air Inlet Lip Panel - Forward
191HR	Ram Air Inlet Lip Panel - Forward

E. Zonal Inspection

SUBTASK 05-41-01-010-021

(1) Open these access panels:

Number	Name/Location
191AL	Forward Wing-To-Body Fairing Panel - Upper
191AR	Forward Wing-To-Body Fairing Panel - Upper
191BL	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191BR	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191CL	Forward Wing-To-Body Fairing Panel - Middle
191CR	Forward Wing-To-Body Fairing Panel - Middle
191D	Forward Wing-To-Body Fairing Panel - Lower
191FL	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
191FR	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191HL	Ram Air Inlet Lip Panel - Forward
191HR	Ram Air Inlet Lip Panel - Forward

SUBTASK 05-41-01-210-025

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Lower Wing-to-Body Fairing - Forward of Wing Box. (EZAP)

SUBTASK 05-41-01-910-011

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-01-410-021

(5) Close these access panels:

Number	Name/Location
191AL	Forward Wing-To-Body Fairing Panel - Upper
191AR	Forward Wing-To-Body Fairing Panel - Upper
191BL	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191BR	Forward Wing-To-Body Fairing Panel, Ram Air Inlet
191CL	Forward Wing-To-Body Fairing Panel - Middle
191CR	Forward Wing-To-Body Fairing Panel - Middle
191D	Forward Wing-To-Body Fairing Panel - Lower
191FL	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191FR	Forward Wing-To-Body Fairing Panel - Mid Fairing, Above Ram Air Inlet
191HL	Ram Air Inlet Lip Panel - Forward
191HR	Ram Air Inlet Lip Panel - Forward


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

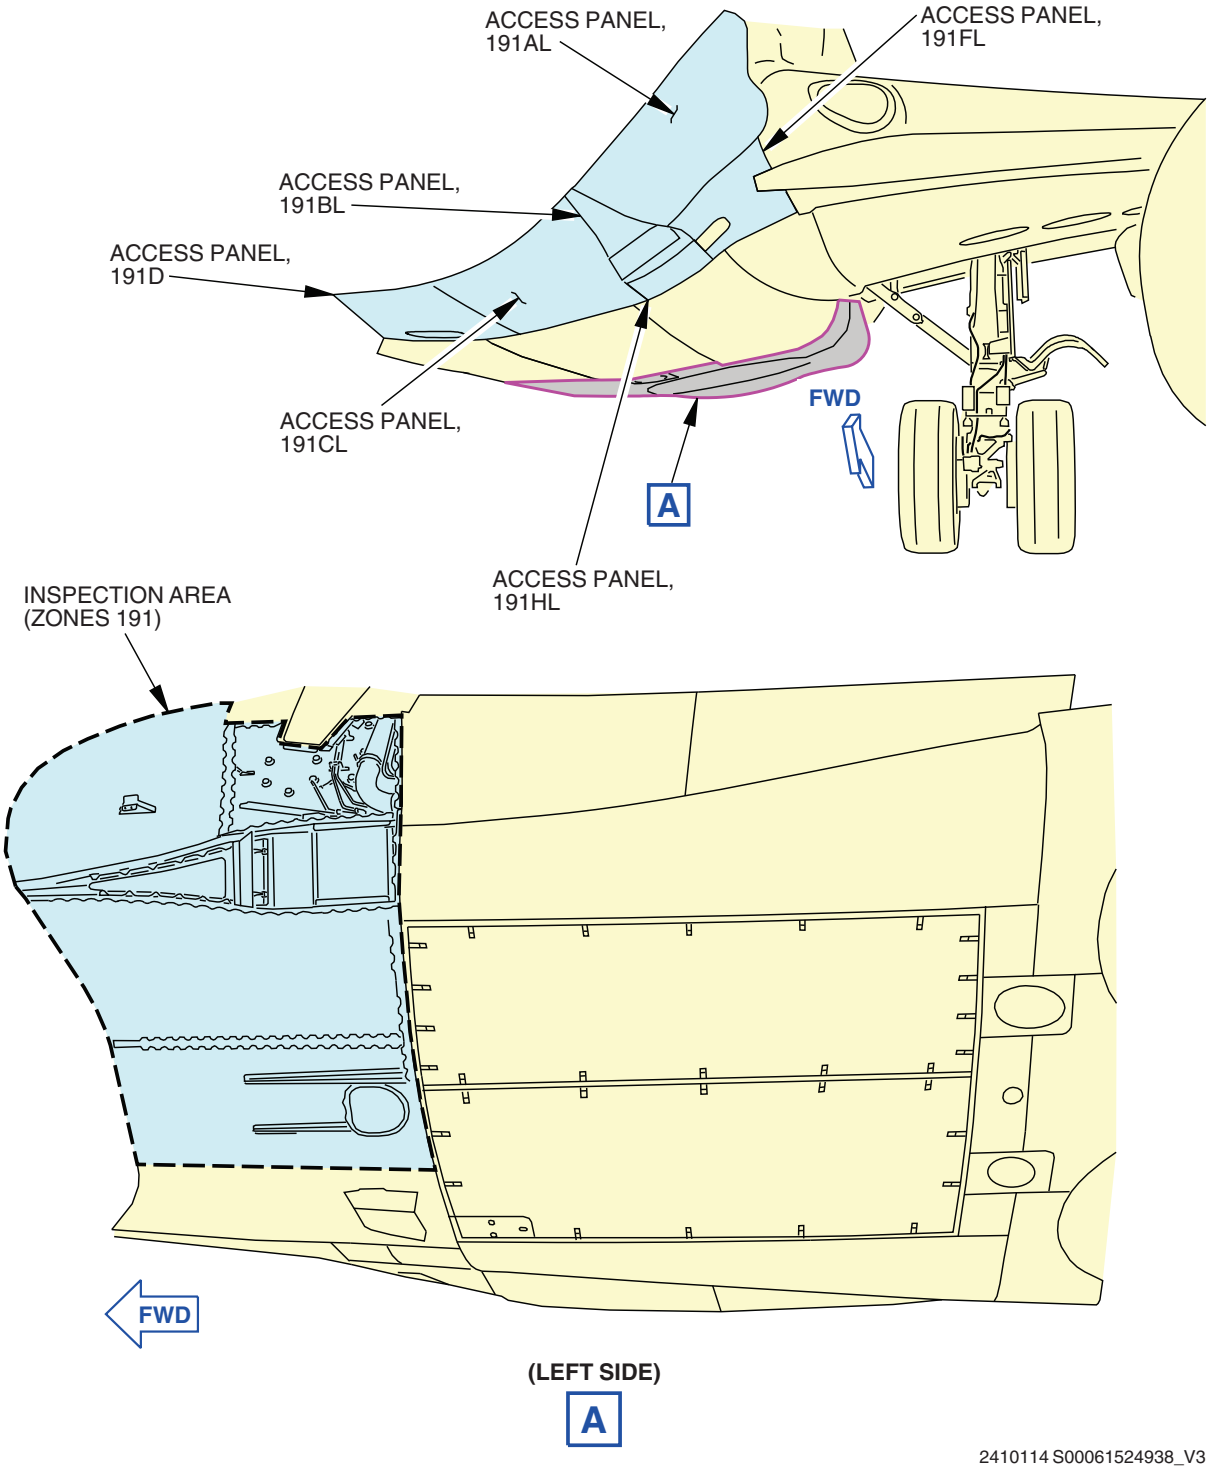

Forward Wing-to-Body Fairing General Visual (Internal)
Figure 242/05-41-01-990-824 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

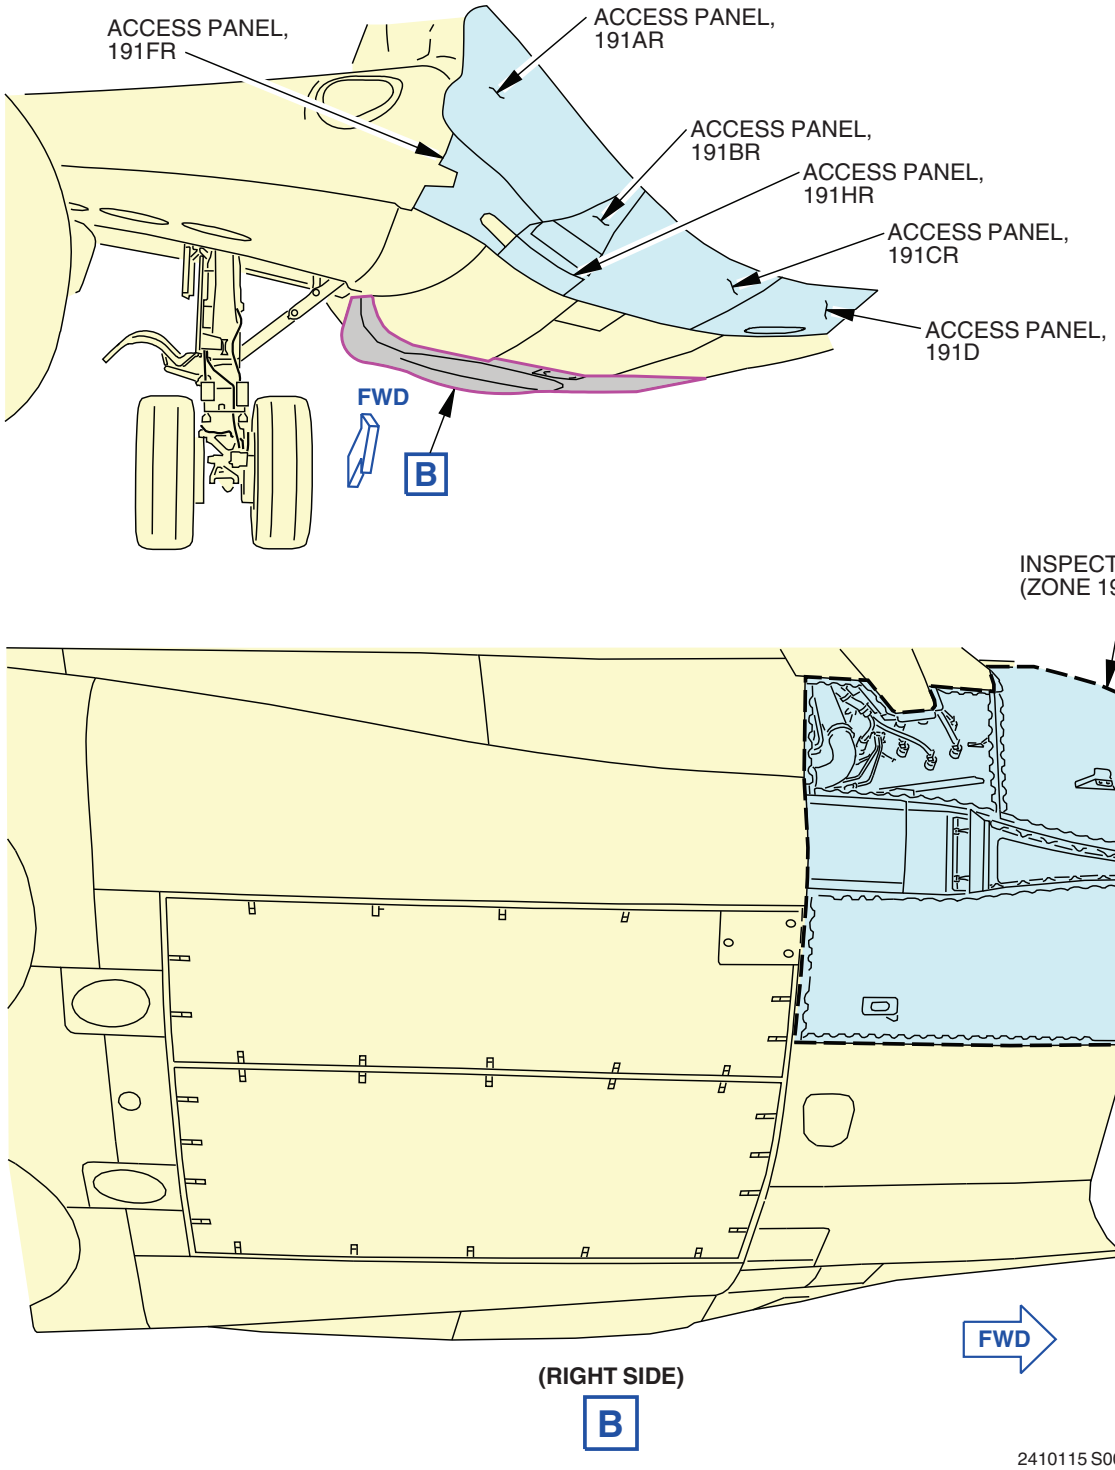

Forward Wing-to-Body Fairing General Visual (Internal)
Figure 242/05-41-01-990-824 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-849

45. EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Under Wing Box

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
192	Lower Wing-To-Body Fairing - Under Wing Box


B. Zonal Inspection


SUBTASK 05-41-01-210-049

(1) Perform an external zonal inspection (GVI) of the Lower Wing-to-Body Fairing - Under Wing Box.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

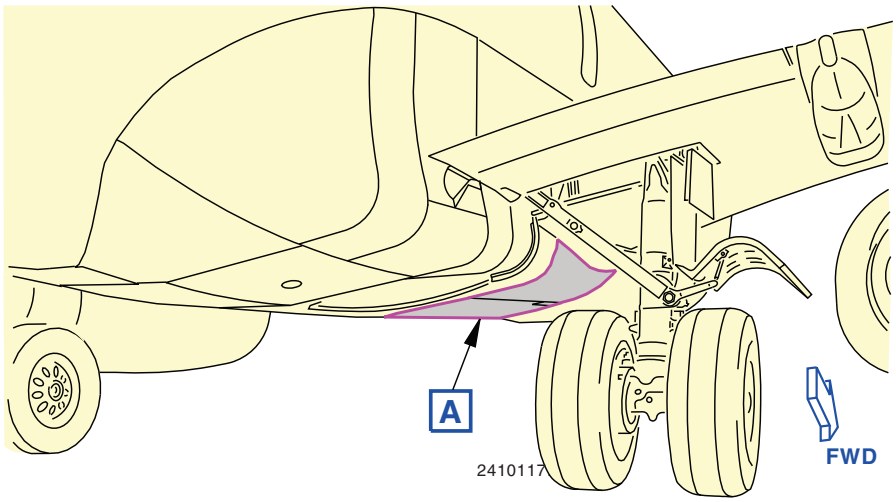

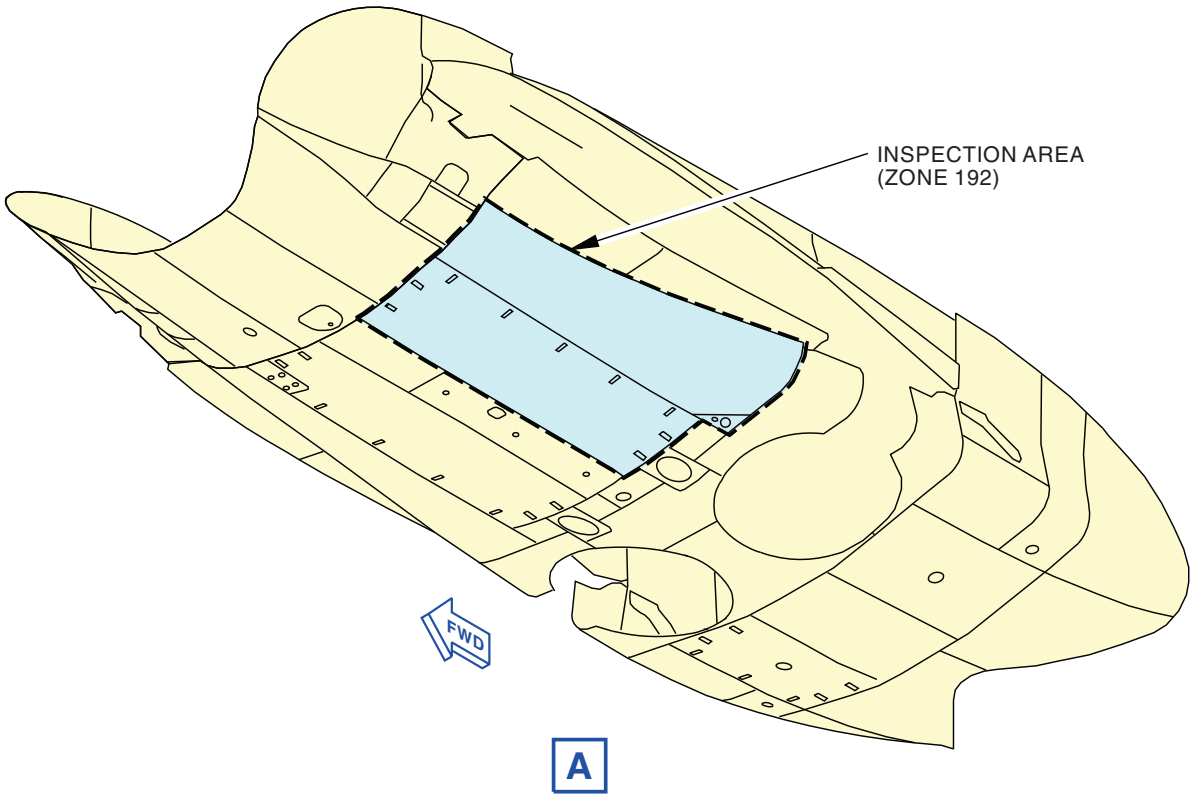

2545775 S0000601112_V1

Lower Wing-to-Body Fairing - Under Wing Box General Visual (External)
Figure 243/05-41-01-990-848

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-826

46. INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Under Wing Box

(Figure 244)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
06-41-00-010-801	Open Access Panel 192CR (P/B 201)
06-41-00-410-801	Close Access Panel 192CR (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
53-51-21-000-802	Center Wing-To-Body Fairing Panel (Except 192AL, 192AR, 192HL, 192HR, 195BL, 195BR) Removal (P/B 401)
53-51-21-400-802	Center Wing-To-Body Fairing Panel (Except 192AL, 192AR, 192HL, 192HR, 195BL, 195BR) - Installation (P/B 401)

C. Location Zones

Zone	Area
192	Lower Wing-To-Body Fairing - Under Wing Box

D. Access Panels

Number	Name/Location
192BL	ECS Ram Air Inlet Mixing Duct Panel - Forward
192BR	ECS Ram Air Inlet Mixing Duct Panel - Forward
192CL	ECS Access Door
192CR	ECS Access Door
192DR	ECS High Pressure Access Door

E. Zonal Inspection

SUBTASK 05-41-01-010-022

(1) To open access panels 192CR and 192DR, refer to: Open Access Panel 192CR, TASK 06-41-00-010-801

To open access panels 192BL and 192BR, refer to:Center Wing-To-Body Fairing Panel (Except 192AL, 192AR, 192HL, 192HR, 195BL, 195BR) Removal, TASK 53-51-21-000-802

Open these access panels:

Number	Name/Location
192BL	ECS Ram Air Inlet Mixing Duct Panel - Forward
192BR	ECS Ram Air Inlet Mixing Duct Panel - Forward
192CL	ECS Access Door
192CR	ECS Access Door
192DR	ECS High Pressure Access Door

NOTE: Through access provided.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-01-210-026

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Lower Wing-to-Body Fairing - Under the Wing Box. (EZAP)

SUBTASK 05-41-01-910-012

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-01-410-022

(5) To close access panels 192CR and 192DR, refer to: Close Access Panel 192CR, TASK 06-41-00-410-801


To close access panels 192BL and 192BR, refer to:Center Wing-To-Body Fairing Panel (Except 192AL, 192AR, 192HL, 192HR, 195BL, 195BR) - Installation, TASK 53-51-21-400-802

Close these access panels:

Number	Name/Location
192BL	ECS Ram Air Inlet Mixing Duct Panel - Forward
192BR	ECS Ram Air Inlet Mixing Duct Panel - Forward
192CL	ECS Access Door
192CR	ECS Access Door
192DR	ECS High Pressure Access Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

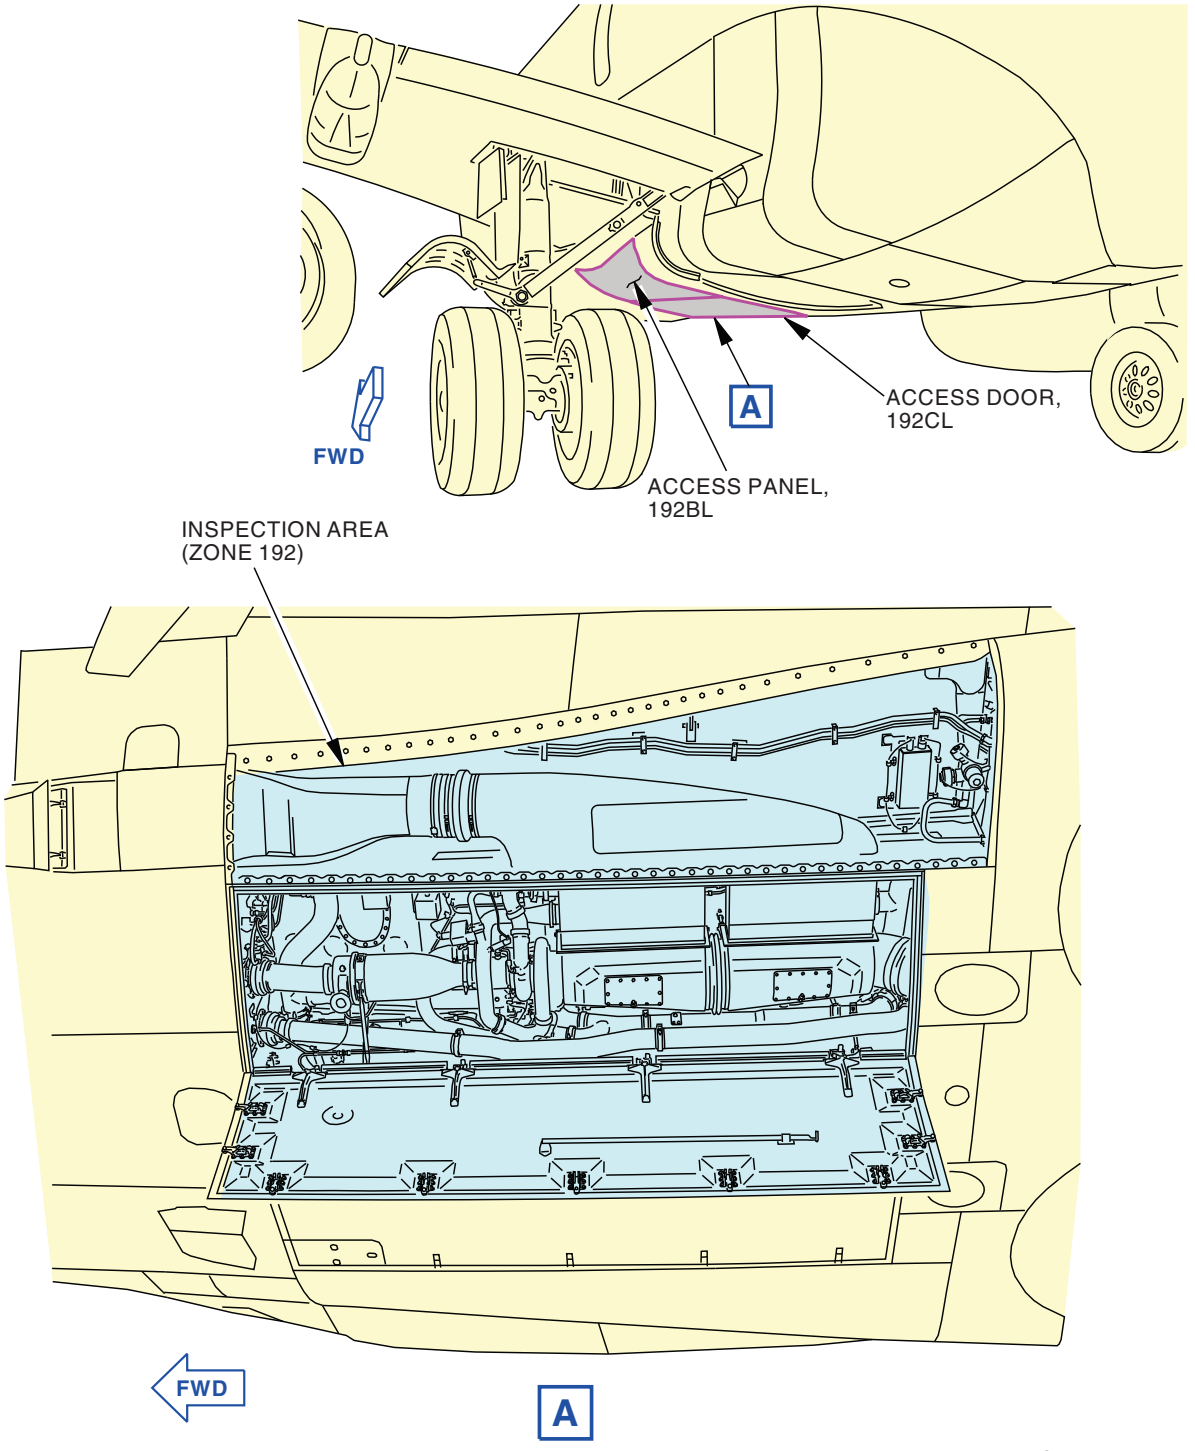

Underwing - Wing-to-Body Fairing General Visual (Internal)
Figure 244/05-41-01-990-825 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

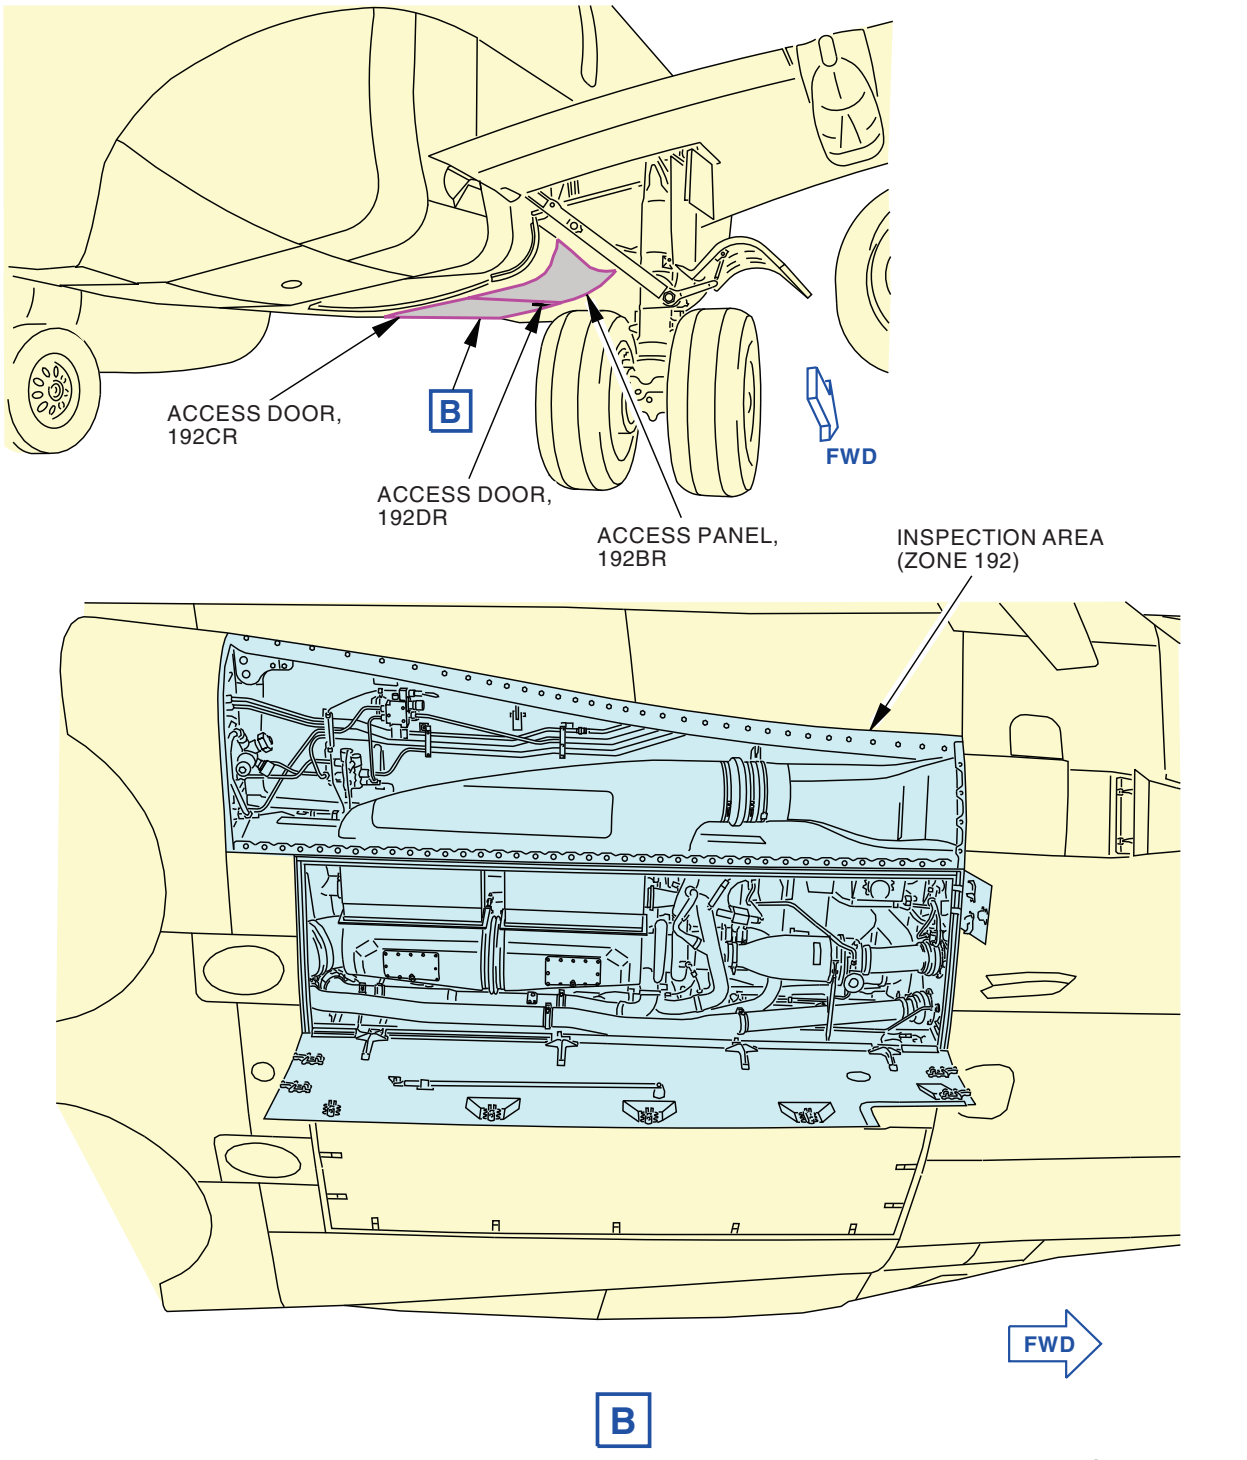

Underwing - Wing-to-Body Fairing General Visual (Internal)
Figure 244/05-41-01-990-825 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-850

47. EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Wheel Well

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
193	Lower Wing-To-Body Fairing - Wheel Well


B. Zonal Inspection

SUBTASK 05-41-01-210-050

(1) Perform an external zonal inspection (GVI) of the Lower Wing-to-Body Fairing - Wheel Well.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

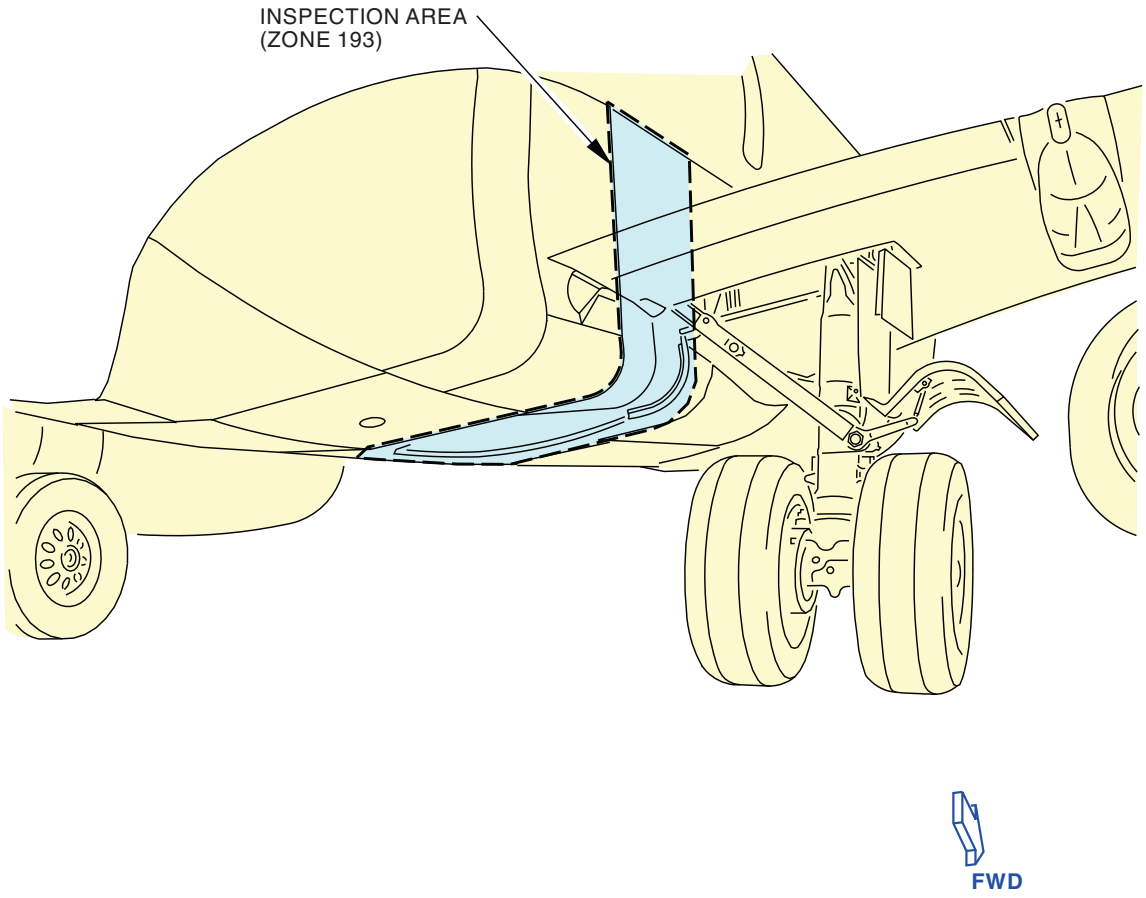

2545785 S0000601113_V1

Lower Wing-to-Body Fairing - Wheel Well General Visual (External)
Figure 245/05-41-01-990-849

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-851

48. EXTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Aft of Wheel Well

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
194	Lower Wing-To-Body Fairing - Aft of Wheel Well


B. Zonal Inspection

SUBTASK 05-41-01-210-051

(1) Perform an external zonal inspection (GVI) of the Lower Wing-to-Body Fairing -- Aft of Wheel Well.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

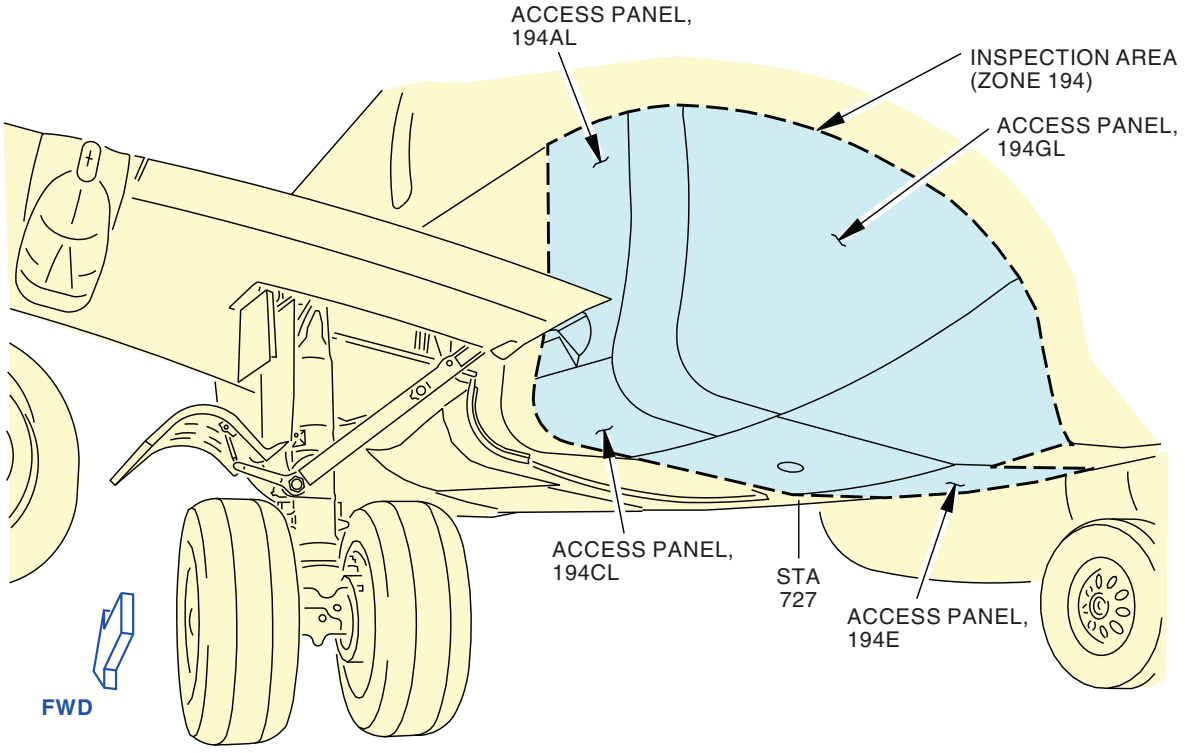

2545781 S0000601114_V1

Lower Wing-to-Body Fairing - Aft of Wheel Well General Visual (External)
Figure 246/05-41-01-990-850

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-01-210-827

49. INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Aft of Wheel Well

(Figure 247)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
53-51-21-000-803	Aft Wing-To-Body Fairing Panel Removal (P/B 401)
53-51-21-400-803	Aft Wing-To-Body Fairing Panel - Installation (P/B 401)

C. Location Zones

Zone	Area
194	Lower Wing-To-Body Fairing - Aft of Wheel Well

D. Access Panels

Number	Name/Location
194AL	Aft Wing To Body Fairing Panel
194AR	Aft Wing To Body Fairing Panel
194BL	Flap Track Lubrication Panel - Aft
194BR	Flap Track Lubrication Panel - Aft
194CL	Aft Wing To Body Fairing Panel
194CR	Aft Wing To Body Fairing Panel
194DL	Aft Wing To Body Fairing Panel
194DR	Aft Wing To Body Fairing Panel
194E	Aft Wing To Body Fairing Panel
194FL	Aft Wing To Body Fairing Panel
194FR	Aft Wing To Body Fairing Panel
194GL	Aft Wing To Body Fairing Panel
194GR	Aft Wing To Body Fairing Panel
194HL	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel

E. Zonal Inspection

SUBTASK 05-41-01-010-023

(1) Remove these access panels on the wing to body fairing (Aft Wing-To-Body Fairing Panel Removal, TASK 53-51-21-000-803).

(a) Open these access panels:

Number	Name/Location
194AL	Aft Wing To Body Fairing Panel
194AR	Aft Wing To Body Fairing Panel

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
194BL	Flap Track Lubrication Panel - Aft
194BR	Flap Track Lubrication Panel - Aft
194CL	Aft Wing To Body Fairing Panel
194CR	Aft Wing To Body Fairing Panel
194DL	Aft Wing To Body Fairing Panel
194DR	Aft Wing To Body Fairing Panel
194E	Aft Wing To Body Fairing Panel
194FL	Aft Wing To Body Fairing Panel
194FR	Aft Wing To Body Fairing Panel
194GL	Aft Wing To Body Fairing Panel
194GR	Aft Wing To Body Fairing Panel
194HL	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel

SUBTASK 05-41-01-210-027

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the lower wing to body fairing - aft of wheel well. (EZAP)

SUBTASK 05-41-01-910-013

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-01-410-023


(5) Install these access panels on the wing to body fairing (Aft Wing-To-Body Fairing Panel - Installation, TASK 53-51-21-400-803).

(a) Close these access panels:

Number	Name/Location
194AL	Aft Wing To Body Fairing Panel
194AR	Aft Wing To Body Fairing Panel
194BL	Flap Track Lubrication Panel - Aft
194BR	Flap Track Lubrication Panel - Aft
194CL	Aft Wing To Body Fairing Panel
194CR	Aft Wing To Body Fairing Panel
194DL	Aft Wing To Body Fairing Panel
194DR	Aft Wing To Body Fairing Panel
194E	Aft Wing To Body Fairing Panel
194FL	Aft Wing To Body Fairing Panel
194FR	Aft Wing To Body Fairing Panel
194GL	Aft Wing To Body Fairing Panel
194GR	Aft Wing To Body Fairing Panel
194HL	Aft Wing To Body Fairing Panel
194HR	Aft Wing To Body Fairing Panel

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

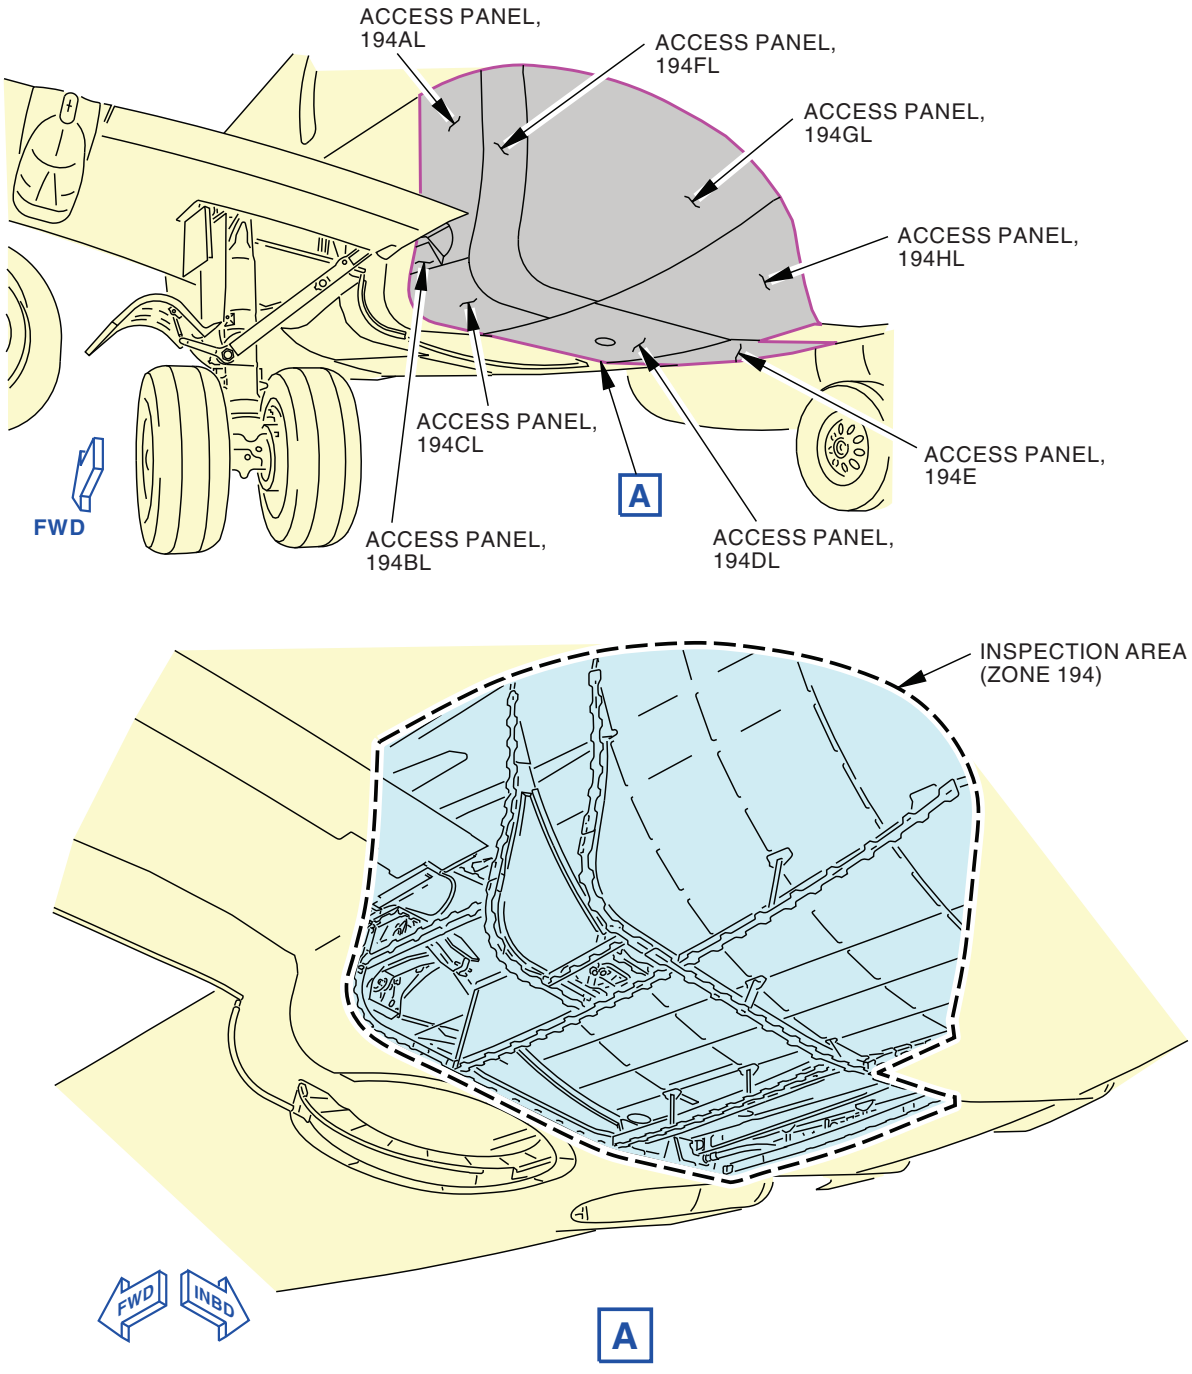

2410118 S00061524944_V1

Aft of Wheel Well - Wing-to-Body Fairing General Visual (Internal)
Figure 247/05-41-01-990-826 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

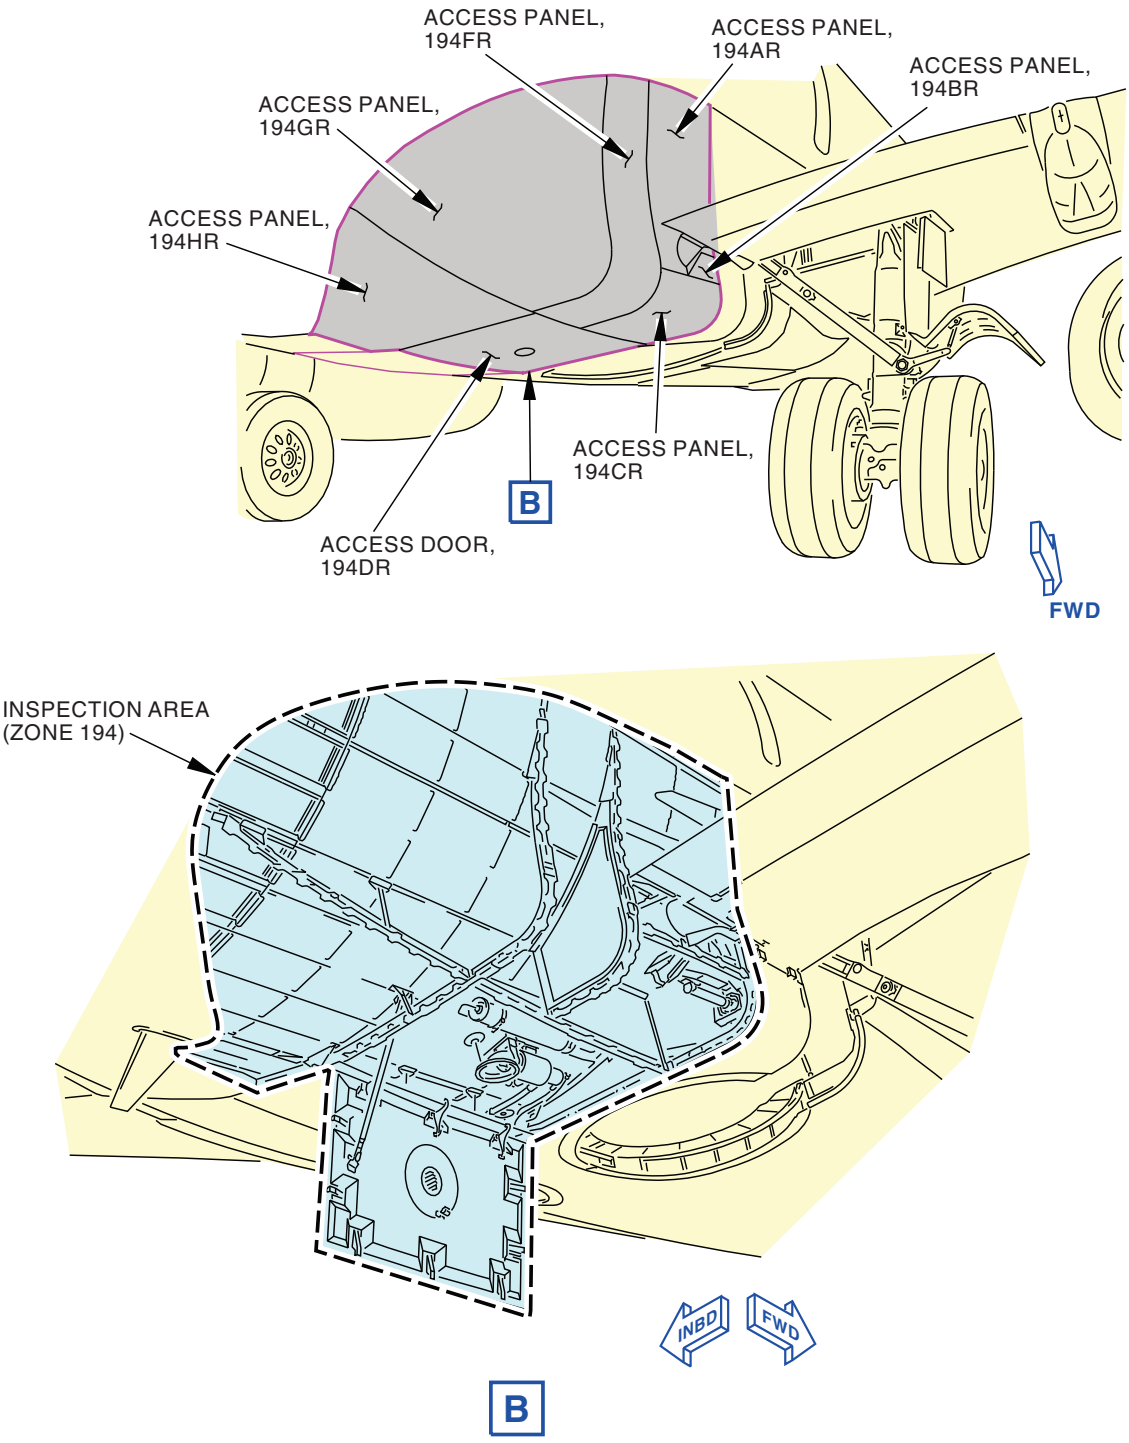

Aft of Wheel Well - Wing-to-Body Fairing General Visual (Internal)
Figure 247/05-41-01-990-826 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-828

50. INTERNAL - ZONAL (GVI): Lower Wing to Body Fairing - Aft of Wheel Well

(Figure 248)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
194	Lower Wing-To-Body Fairing - Aft of Wheel Well

B. Access Panels

Number	Name/Location
194DR	Aft Wing To Body Fairing Panel

C. Zonal Inspection

SUBTASK 05-41-01-010-024

(1) Open this access panel:

Number	Name/Location
194DR	Aft Wing To Body Fairing Panel

SUBTASK 05-41-01-210-028

(2) Perform an internal zonal inspection (GVI) of the Lower Wing-to-Body Fairing - Aft of Wheel Well.


SUBTASK 05-41-01-410-024

(3) Close this access panel:

Number	Name/Location
194DR	Aft Wing To Body Fairing Panel

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

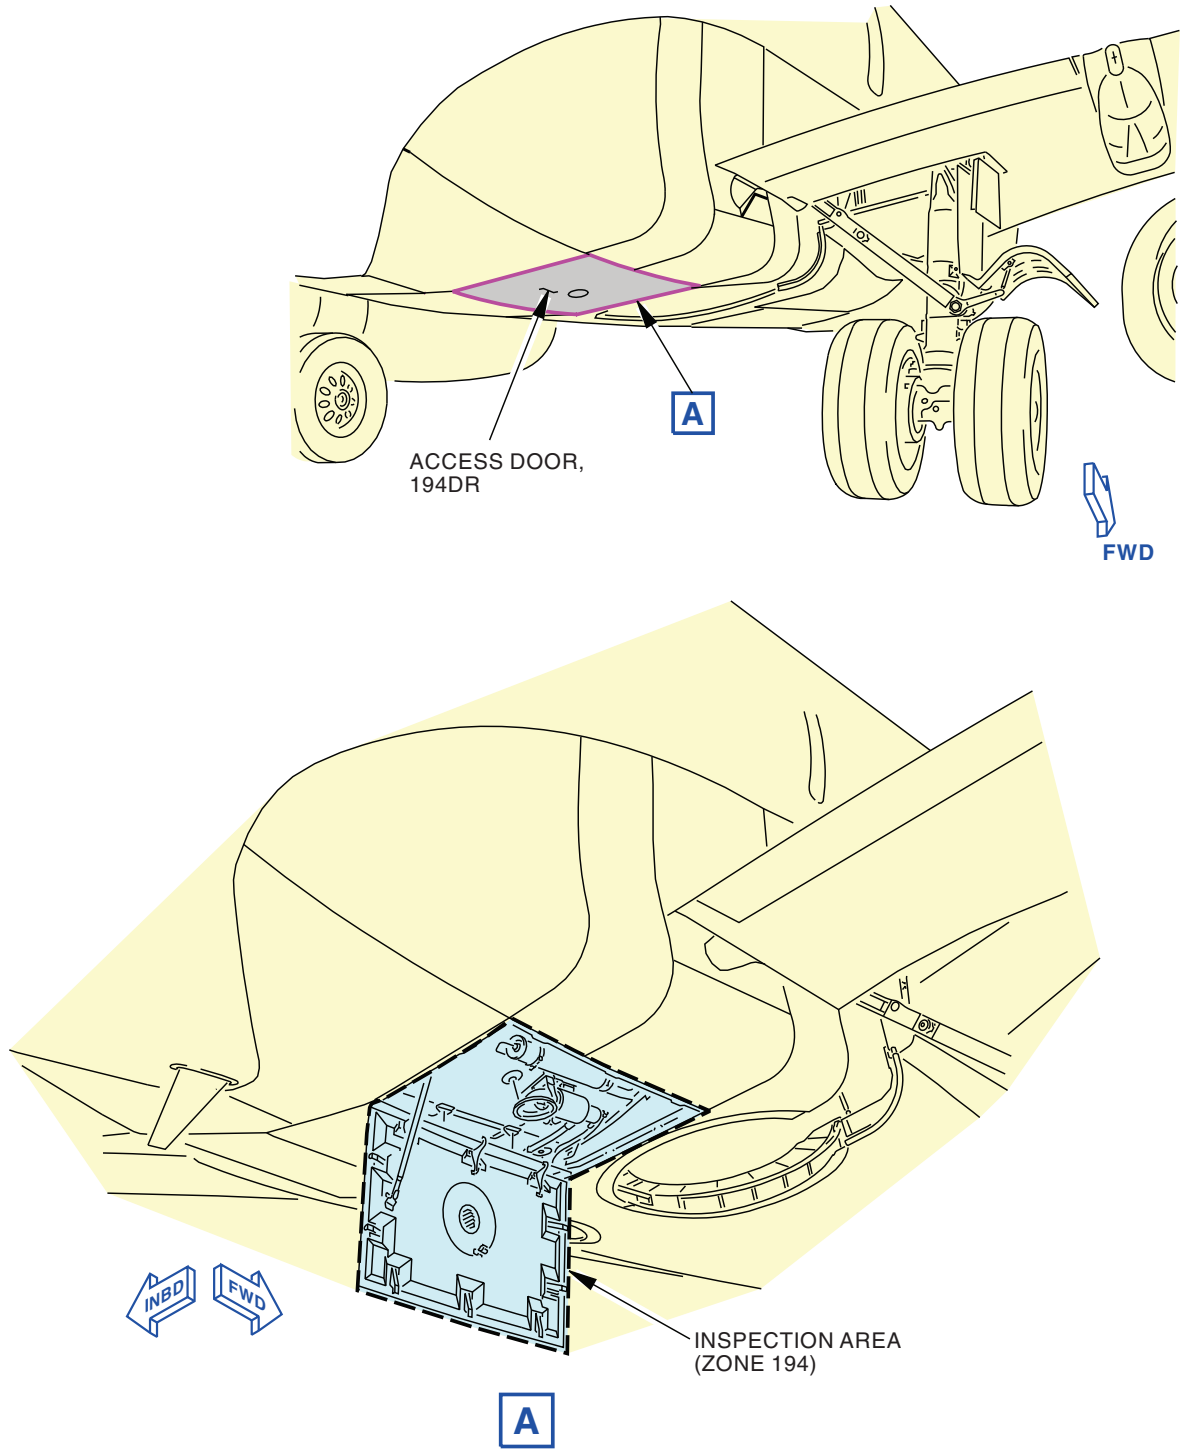

Right Aft of Wheel Well - Wing-to-Body Fairing General Visual (Internal)
Figure 248/05-41-01-990-827

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-852

51. EXTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Right Side

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
196	Above Wing, Wing-To-Body Fairing - Right


B. Zonal Inspection

SUBTASK 05-41-01-210-052

(1) Perform an external zonal inspection (GVI) Wing-to-Body Fairing - Above Wing, Right Side.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

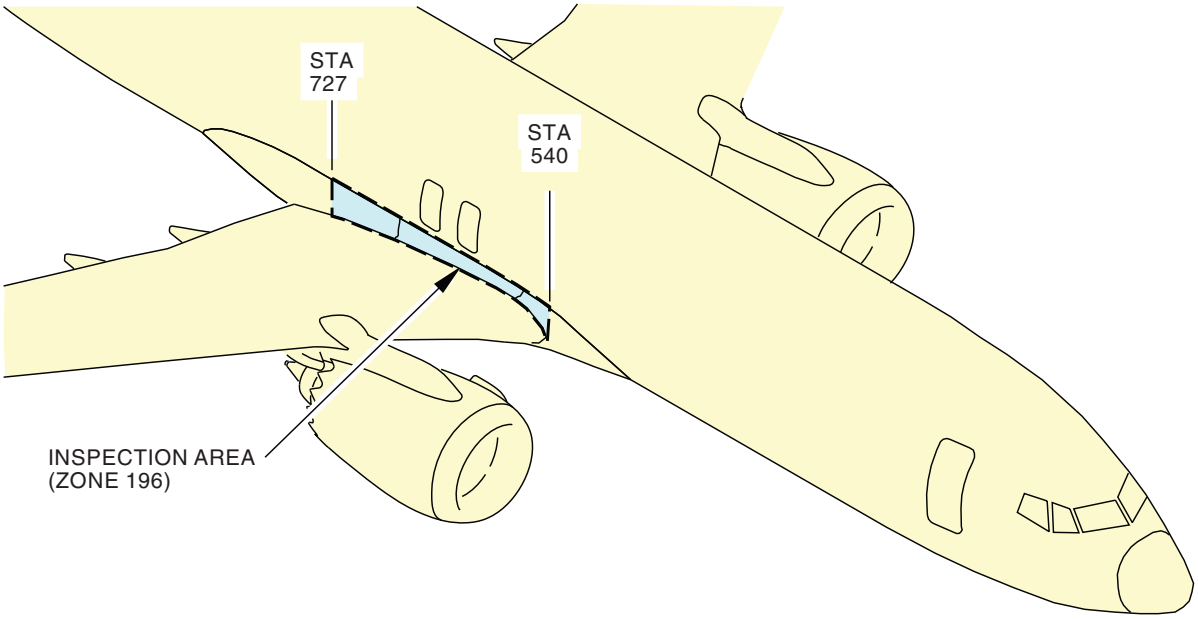

2545840 S0000601115_V1

Above Wing, Wing-to-Body Fairing - Right General Visual (External)
Figure 249/05-41-01-990-851

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-829

52. INTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Right Side

(Figure 250)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
196	Above Wing, Wing-To-Body Fairing - Right

B. Access Panels

Number	Name/Location
195AR	Wing-To-Body Fairing - Right Side
195BR	Wing-To-Body Fairing - Right Side
195CR	Wing-To-Body Fairing - Right Side

C. Zonal Inspection

SUBTASK 05-41-01-010-025

(1) Open these access panels:

Number	Name/Location
195AR	Wing-To-Body Fairing - Right Side
195BR	Wing-To-Body Fairing - Right Side
195CR	Wing-To-Body Fairing - Right Side

SUBTASK 05-41-01-210-030

(2) Perform an internal zonal inspection (GVI) of the Wing-to-Body Fairing - Above Wing, Right Side.


SUBTASK 05-41-01-410-025

(3) Close these access panels:

Number	Name/Location
195AR	Wing-To-Body Fairing - Right Side
195BR	Wing-To-Body Fairing - Right Side
195CR	Wing-To-Body Fairing - Right Side

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

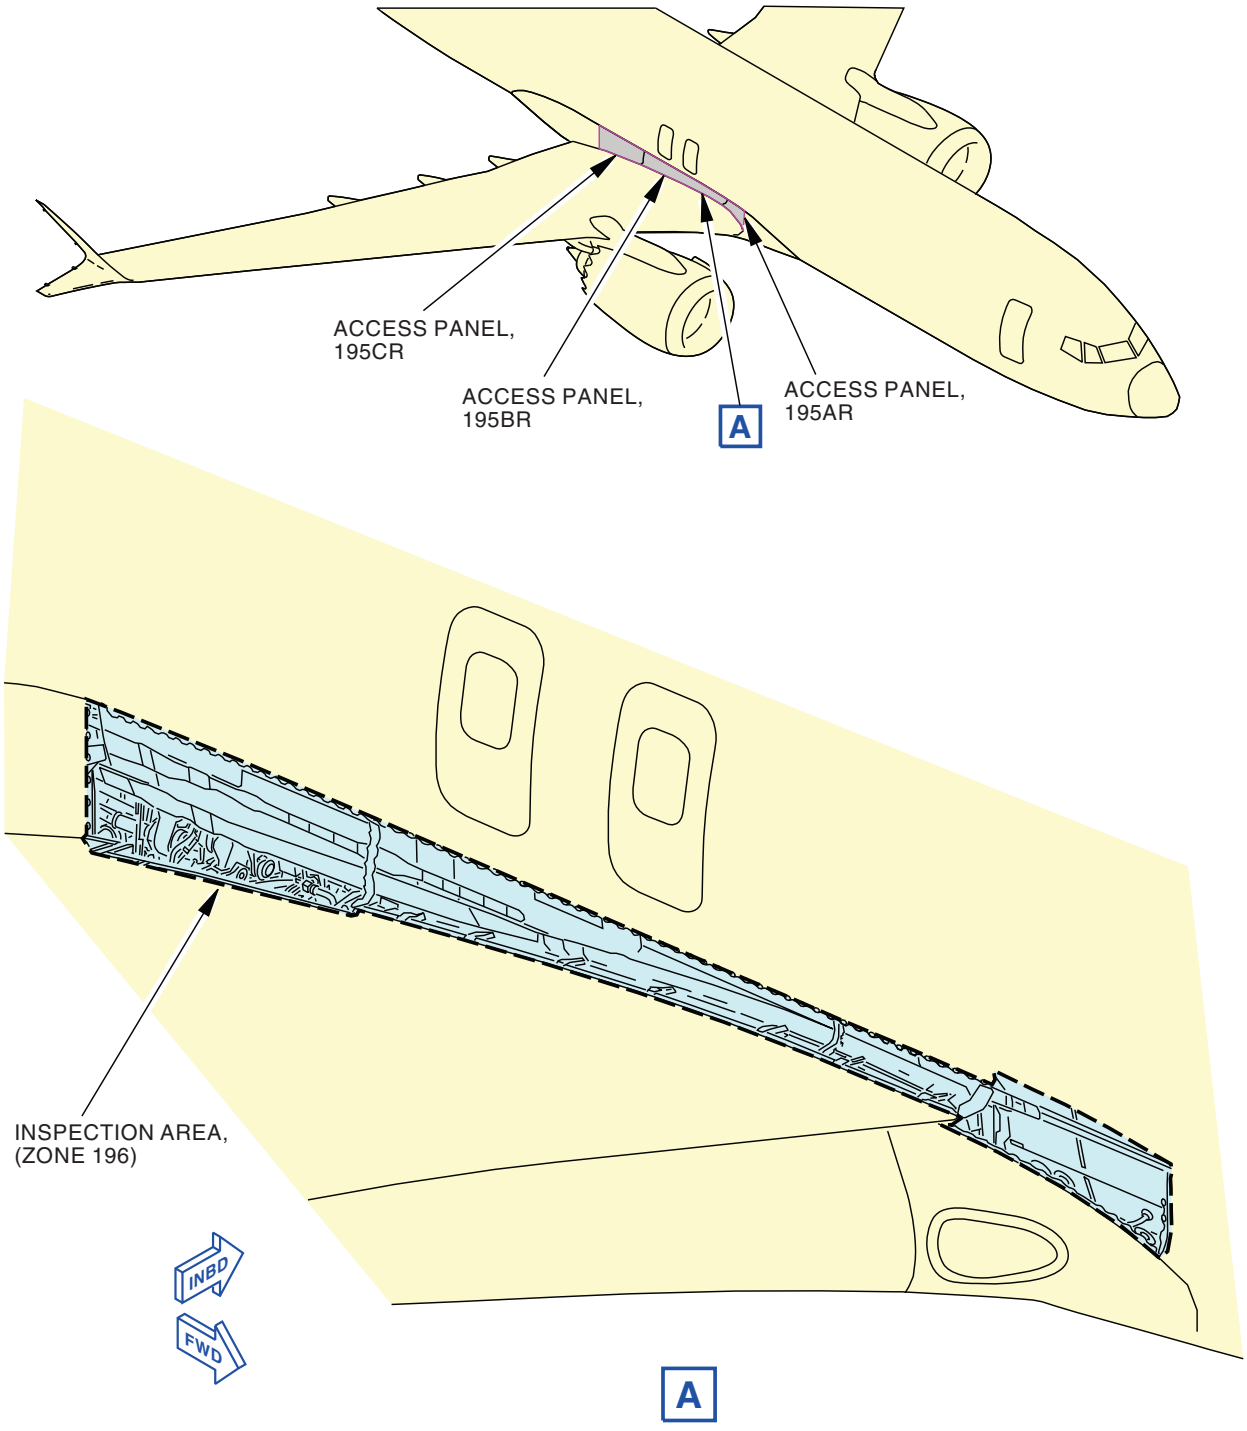

Above the Right Wing - Wing-to-Body Fairing General Visual (Internal)
Figure 250/05-41-01-990-828

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-830

53. INTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Left Side

(Figure 251)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
195	Above Wing, Wing-To-Body Fairing - Left

B. Access Panels

Number	Name/Location
195AL	Wing-To-Body Fairing - Left Side
195BL	Wing-To-Body Fairing - Left Side
195CL	Wing-To-Body Fairing - Left Side

C. Zonal Inspection

SUBTASK 05-41-01-010-026

(1) Open these access panels:

Number	Name/Location
195AL	Wing-To-Body Fairing - Left Side
195BL	Wing-To-Body Fairing - Left Side
195CL	Wing-To-Body Fairing - Left Side

SUBTASK 05-41-01-210-031

(2) Perform an internal zonal inspection (GVI) of the Wing-to-Body Fairing - Above Wing, Left Side.


SUBTASK 05-41-01-410-026

(3) Close these access panels:

Number	Name/Location
195AL	Wing-To-Body Fairing - Left Side
195BL	Wing-To-Body Fairing - Left Side
195CL	Wing-To-Body Fairing - Left Side

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

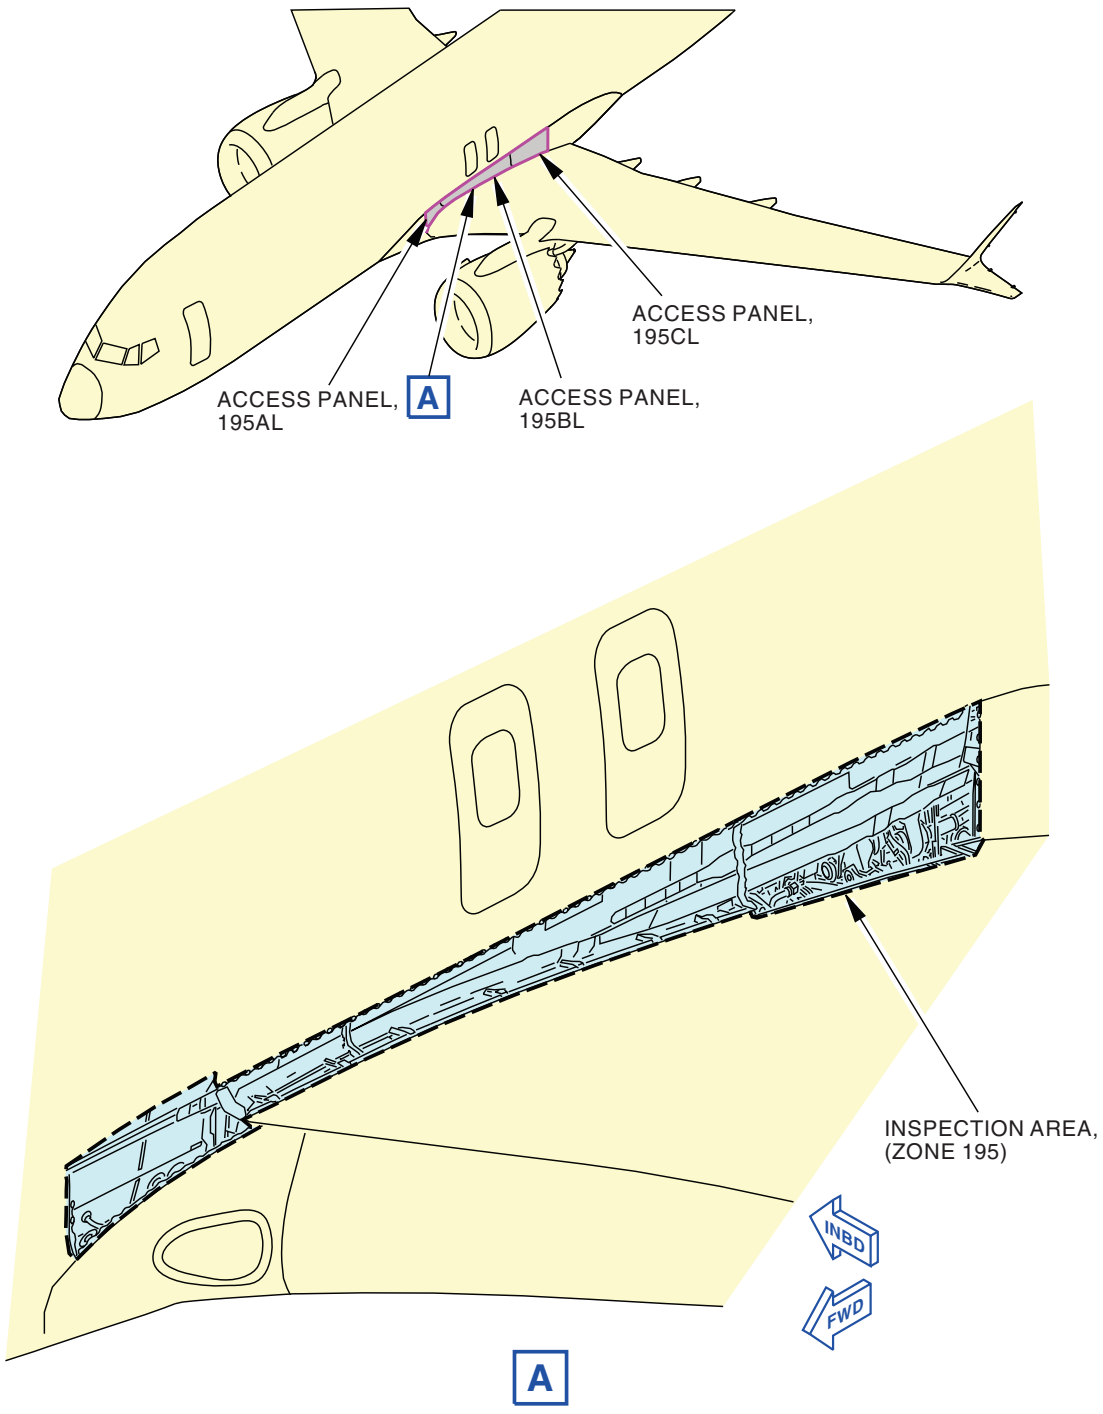

Above the Left Wing - Wing-to-Body Fairing General Visual (Internal)
Figure 251/05-41-01-990-829

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-210-853

54. EXTERNAL - ZONAL (GVI): Wing-to-Body Fairing - Above Wing, Left Side

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
195	Above Wing, Wing-To-Body Fairing - Left


B. Zonal Inspection

SUBTASK 05-41-01-210-053

(1) Perform an external zonal inspection (GVI) of the Wing-to-Body Fairing - Above Wing, Left Side.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

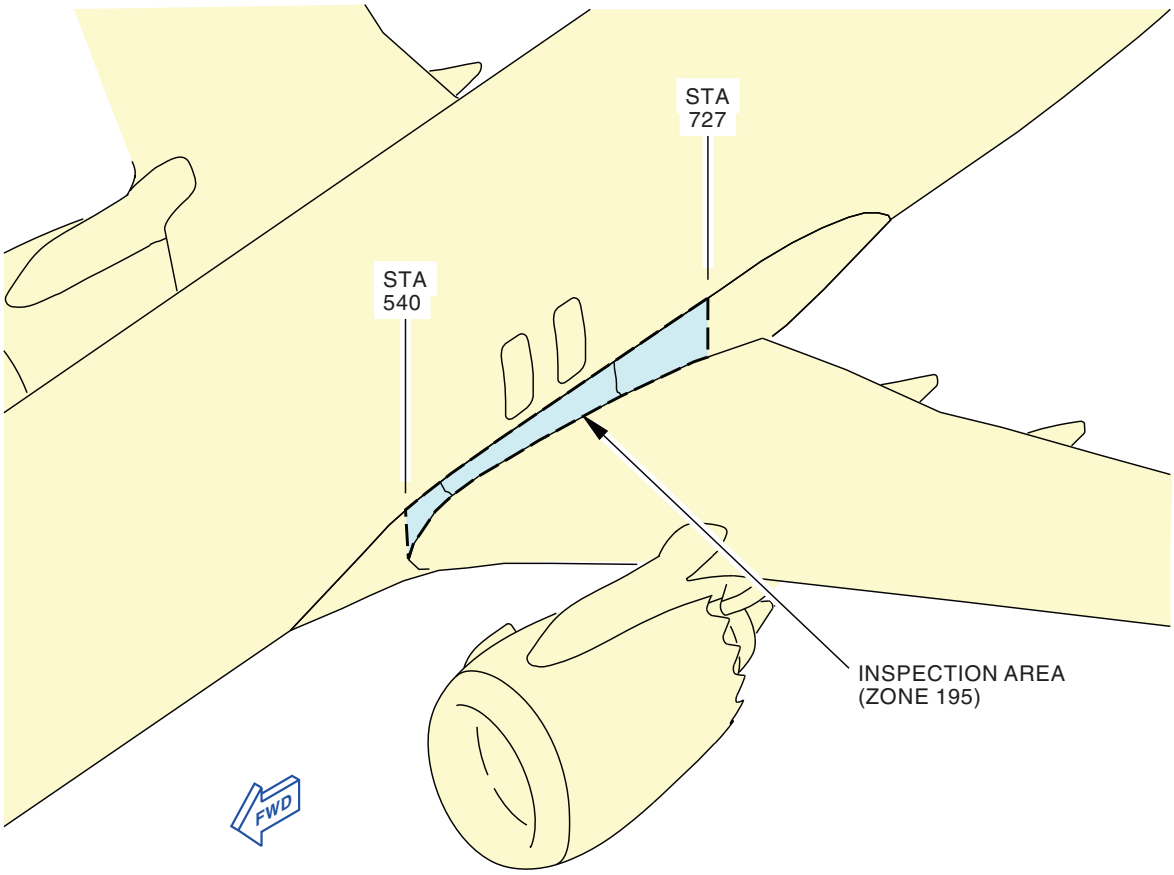

2545812 S0000601116_V1

Above Wing, Wing-to-Body Fairing - Left General Visual (External)
Figure 252/05-41-01-990-852

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-01-211-801

55. INTERNAL - DETAILED: Center Wing Rear Spar Vapor Web

(Figure 253)

A. General

(1) This task is the manufacturer's procedure for compliance with Certification Maintenance Requirement (CMR), 26–CMR-02.

B. Location Zones

Zone	Area
133	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Left
134	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Right

C. Detailed Inspection


SUBTASK 05-41-01-211-001

(1) Perform a detailed inspection of the Center Wing Rear Spar Vapor Web for cracking in the fiberglass panel between the vertical structural members as follows:

(a) Do the inspection from inside the main gear wheel well.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

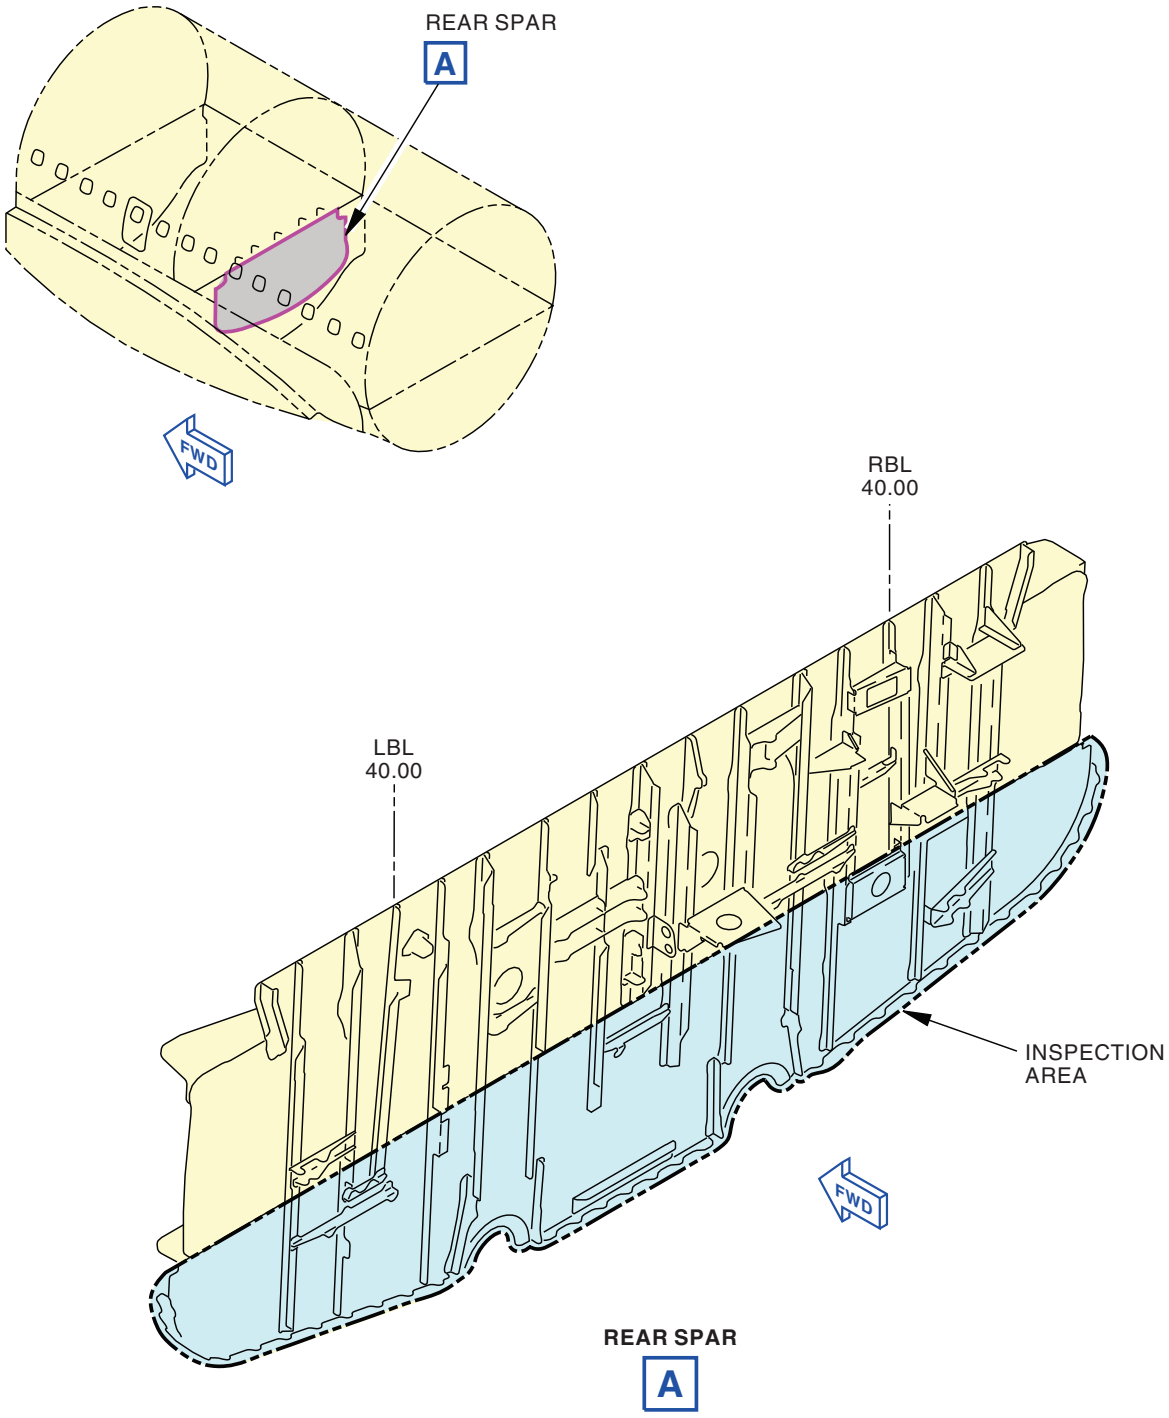

Center Wing Rear Spar Vapor Web
Figure 253/05-41-01-990-830

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-819

1. EXTERNAL - ZONAL (GVI): Upper Fuselage

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage
211	Flight Compartment - Left
212	Flight Compartment - Right
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right


B. Zonal Inspection

SUBTASK 05-41-02-210-019

(1) Perform an external zonal inspection (GVI) of the upper fuselage, visible as viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. No additional access panels required.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

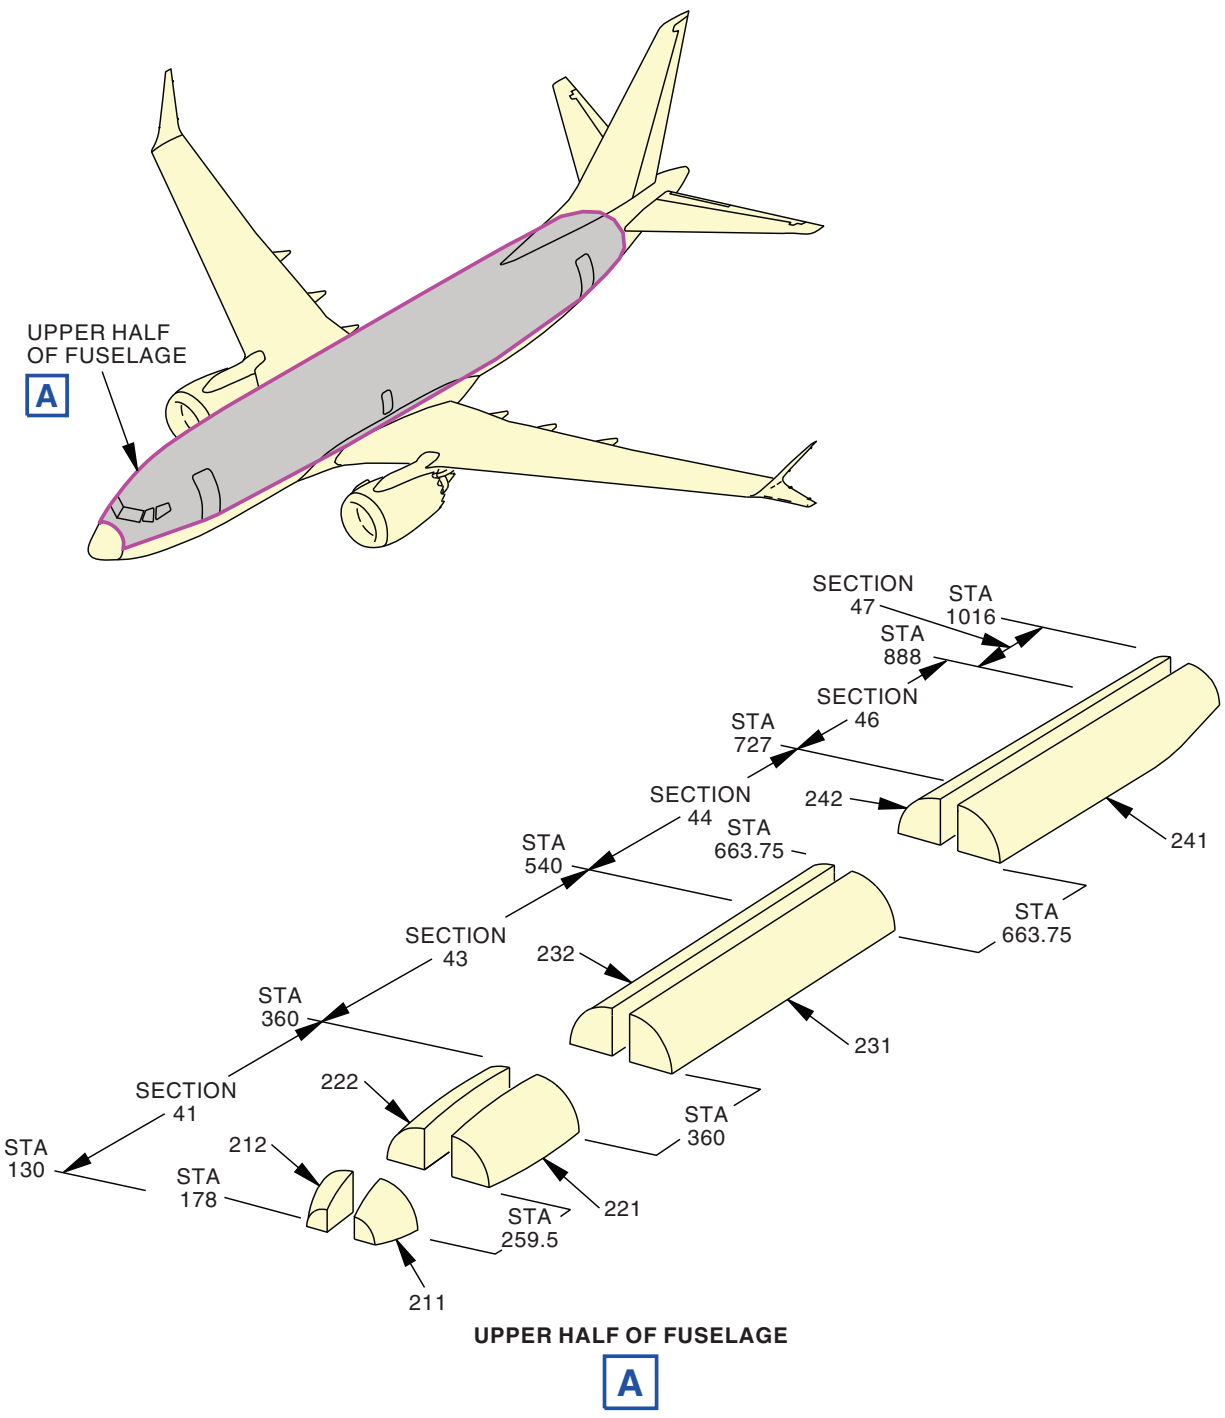

2546215 S0000601239_V1

Upper Fuselage General Visual Inspection (External)
Figure 201/05-41-02-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-801

2. EXTERNAL - ZONAL (GVI): Flight Control Compartment

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-02-210-001

(1) Perform an external zonal inspection ((GVI) of the Flight Control Compartment - Section 41, STA 178 to STA 259.5.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

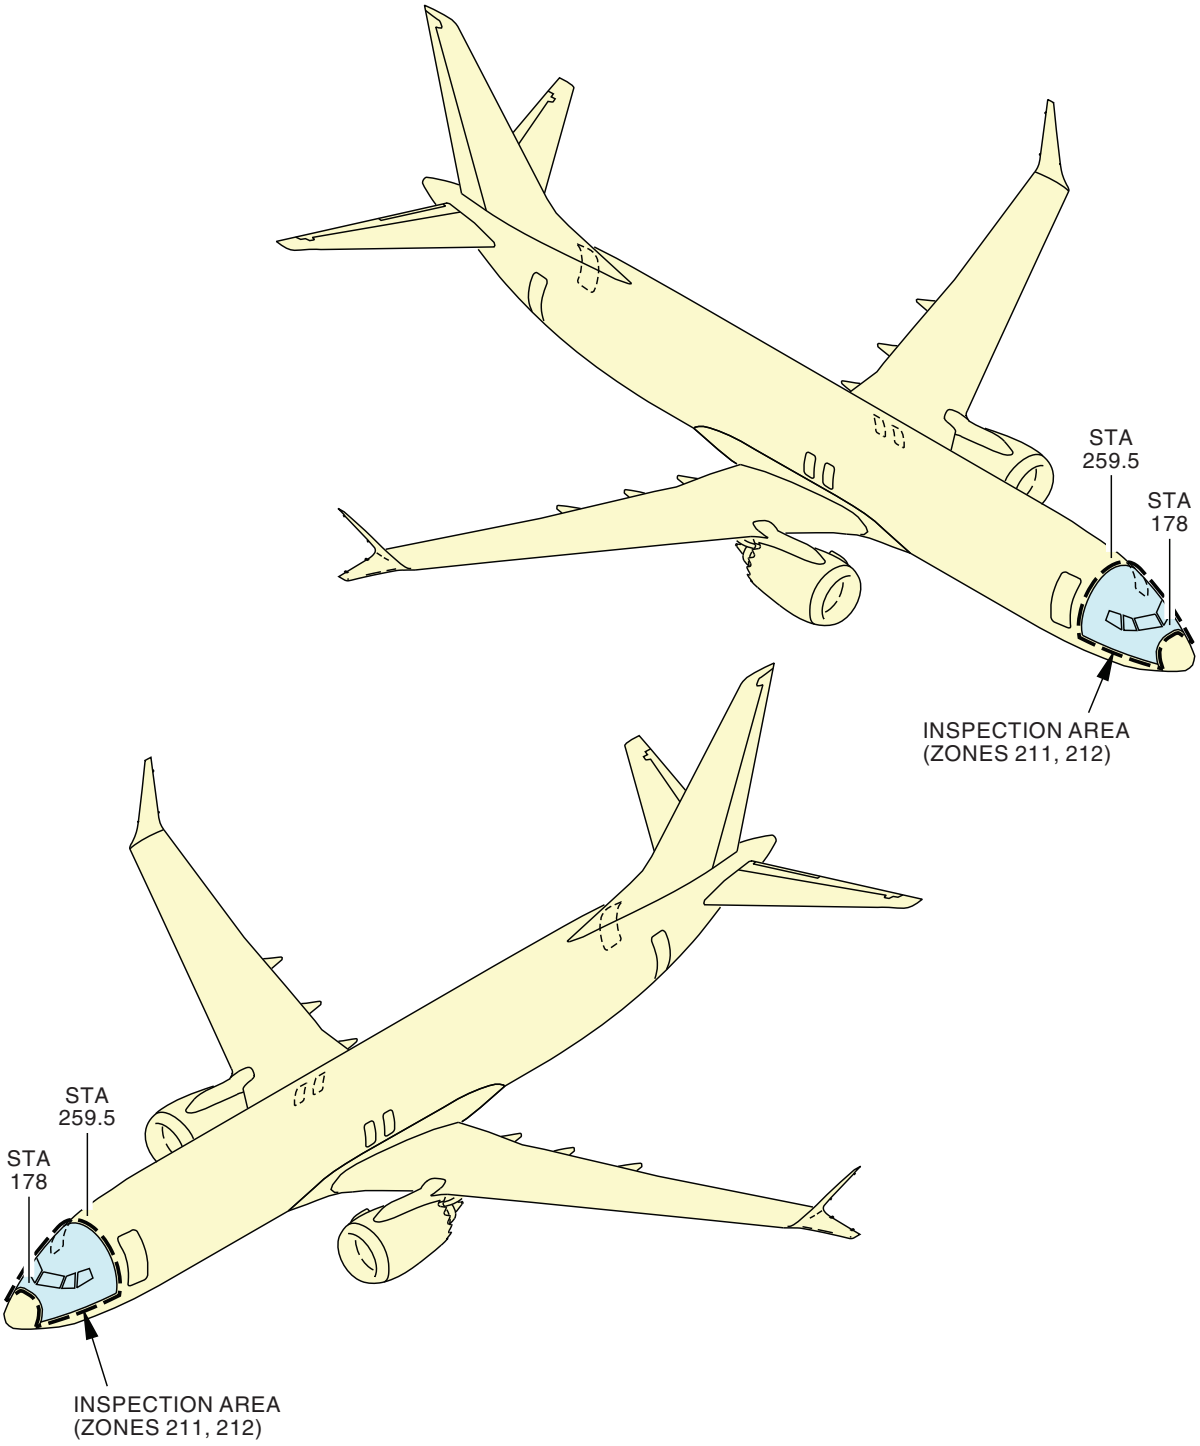

Flight Compartment (STA 178-259.5) General Visual (External)
Figure 202/05-41-02-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-802

3. INTERNAL - ZONAL (GVI): Flight Control Compartment - Control Stand

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

B. Access Panels

Number	Name/Location
211A	Panel Assy - Control Stand Access
211B	Panel Assy - Control Stand Access
212A	Panel Assy - Control Stand Access
212B	Panel Assy - Control Stand Access

C. Zonal Inspection

SUBTASK 05-41-02-010-008

(1) Open these access panels:

Number	Name/Location
211A	Panel Assy - Control Stand Access
211B	Panel Assy - Control Stand Access
212A	Panel Assy - Control Stand Access
212B	Panel Assy - Control Stand Access

SUBTASK 05-41-02-210-002

(2) Perform an internal zonal inspection (GVI) of the Flight Control Compartment - Section 41, STA 178 to STA 270.


SUBTASK 05-41-02-410-007


(3) Close these access panels:

Number	Name/Location
211A	Panel Assy - Control Stand Access
211B	Panel Assy - Control Stand Access
212A	Panel Assy - Control Stand Access
212B	Panel Assy - Control Stand Access

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

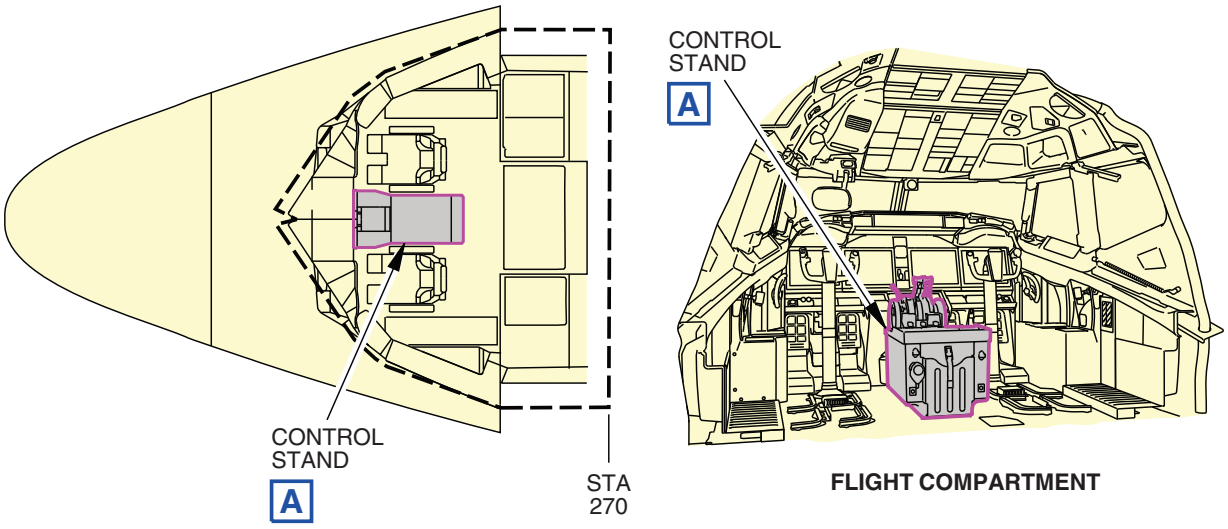

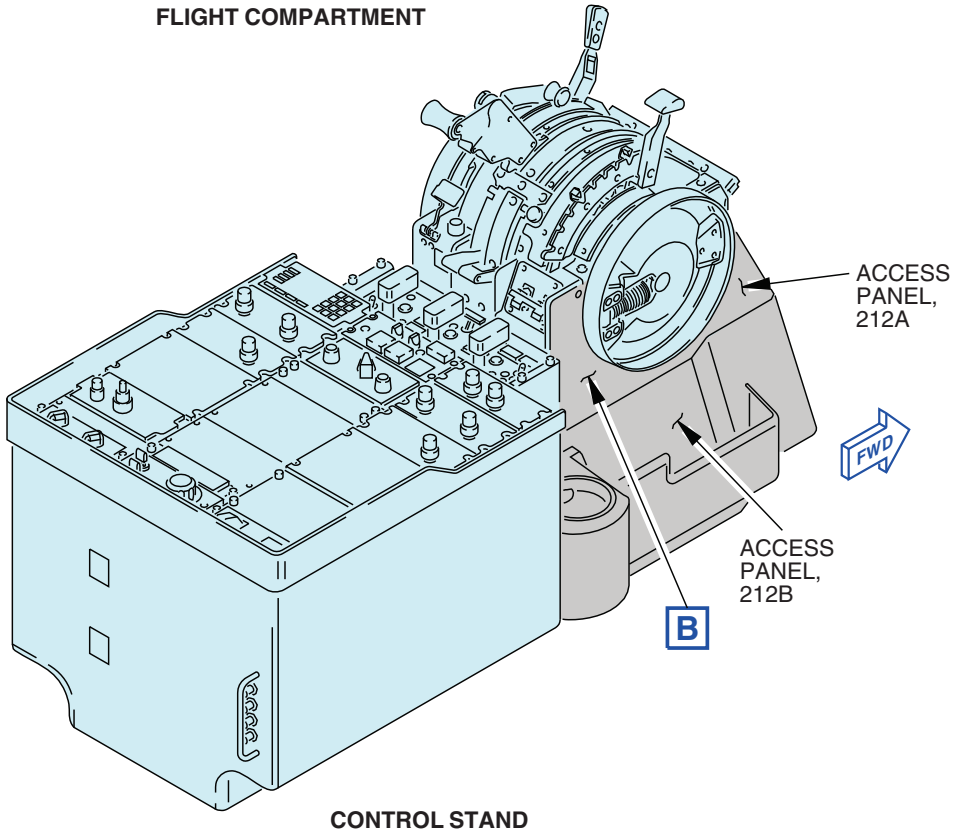

CONTROL STAND (RIGHT SIDE)

A


NOTE:

DO NOT NEED TO REMOVE TRIM WHEEL TO DO THIS INSPECTION.

2410125 S00061524959_V2

Control Stand - Flight Compartment General Visual (Internal)
Figure 203/05-41-02-990-802 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

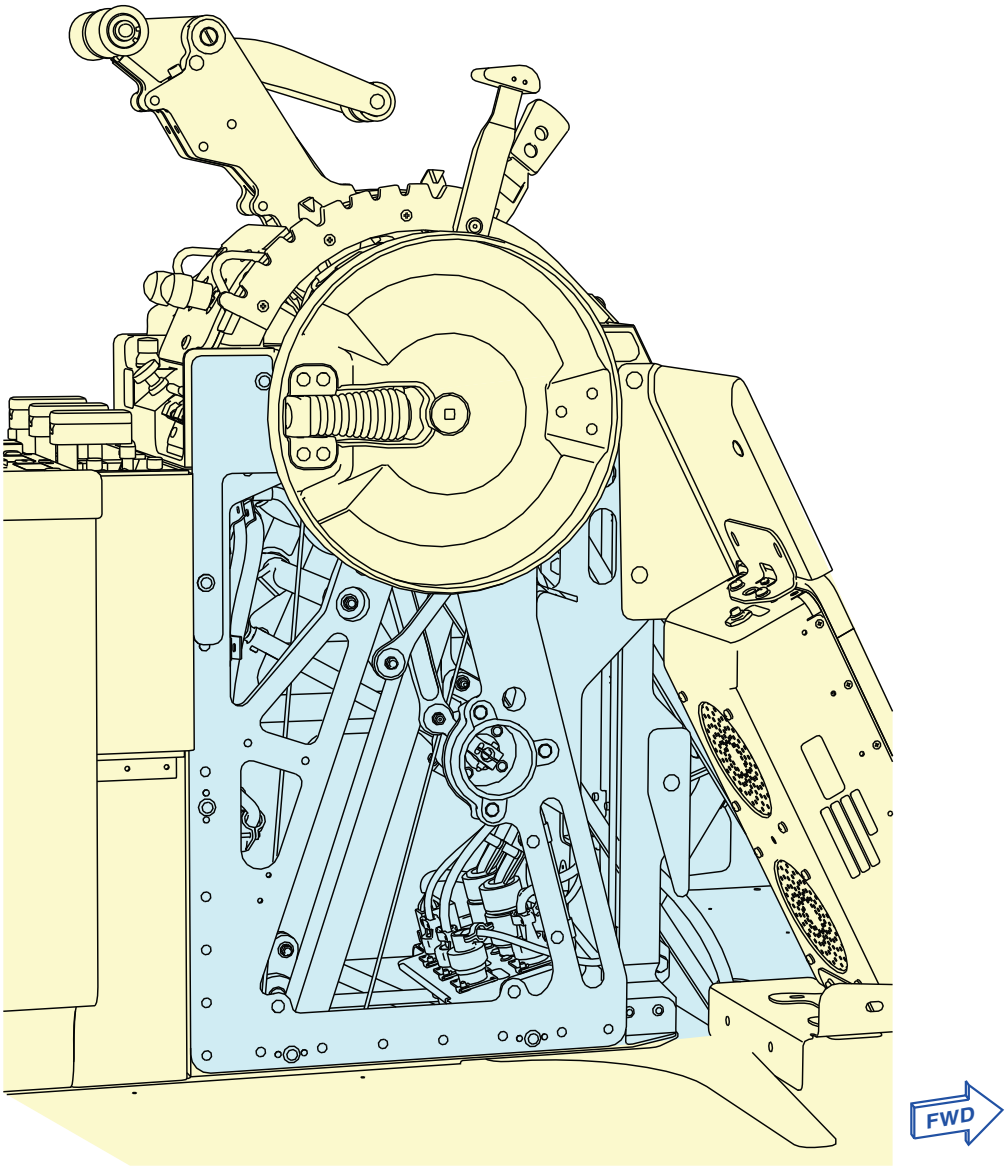

2410126 S00061524960_V2

Control Stand - Flight Compartment General Visual (Internal)
Figure 203/05-41-02-990-802 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

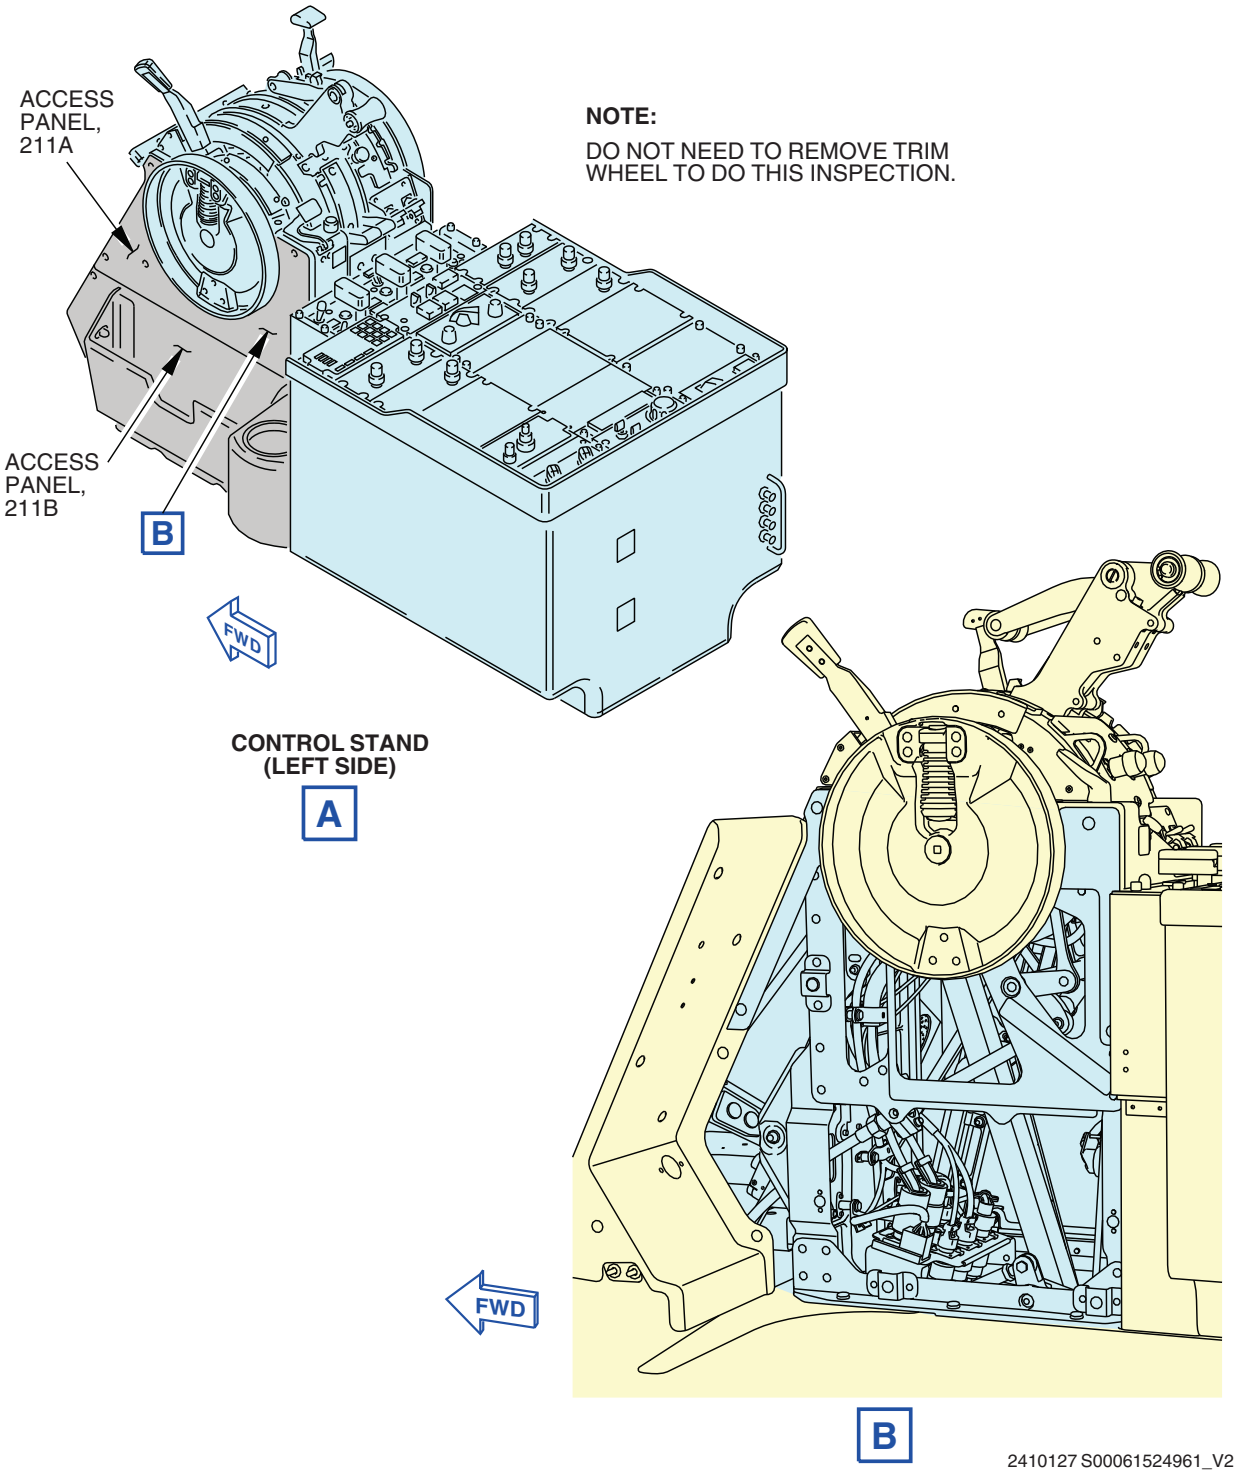

Control Stand - Flight Compartment General Visual (Internal)
Figure 203/05-41-02-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-02-210-803

4. INTERNAL - ZONAL (GVI): Flight Control Compartment - Ceiling Panels and Sidewall Console

(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Access Panels

Number	Name/Location
211AF	Panel Assy - Flight Compartment Floor

E. Zonal Inspection

SUBTASK 05-41-02-010-001

(1) Open this access panel:

Number	Name/Location
211AF	Panel Assy - Flight Compartment Floor

NOTE: With access provided. Seats removed. Control stand access panels, overhead and sidewall panels, and floor panel removal required.

SUBTASK 05-41-02-210-003

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Flight Control Compartment - Section 41, STA 178 to STA 270. (EZAP)

SUBTASK 05-41-02-910-001

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-02-410-001

(5) Close this access panel:

Number	Name/Location
211AF	Panel Assy - Flight Compartment Floor


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

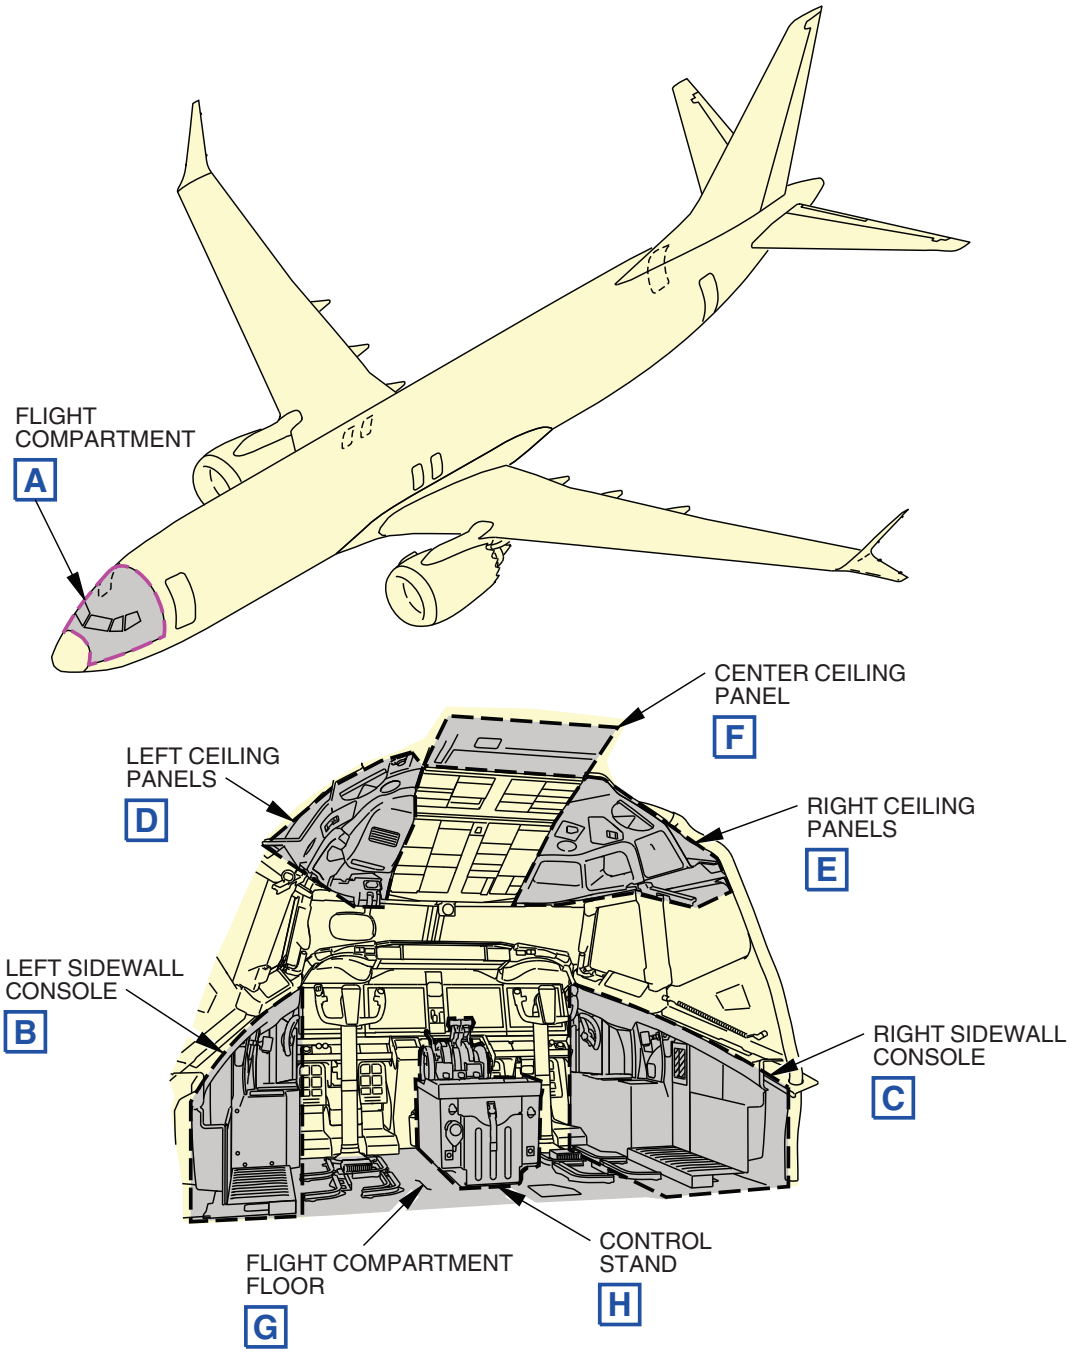


Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 1 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

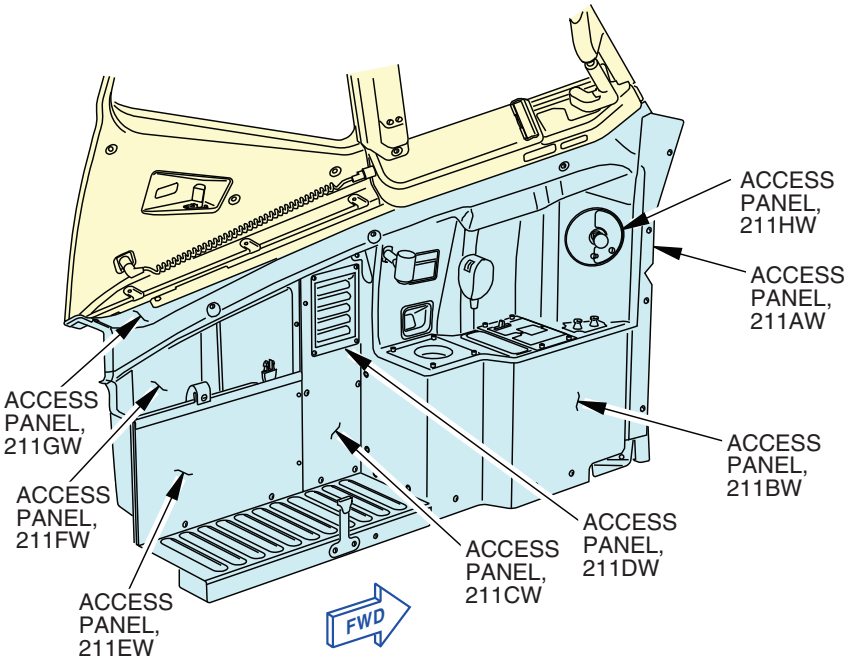

LEFT SIDEWALL CONSOLE

B

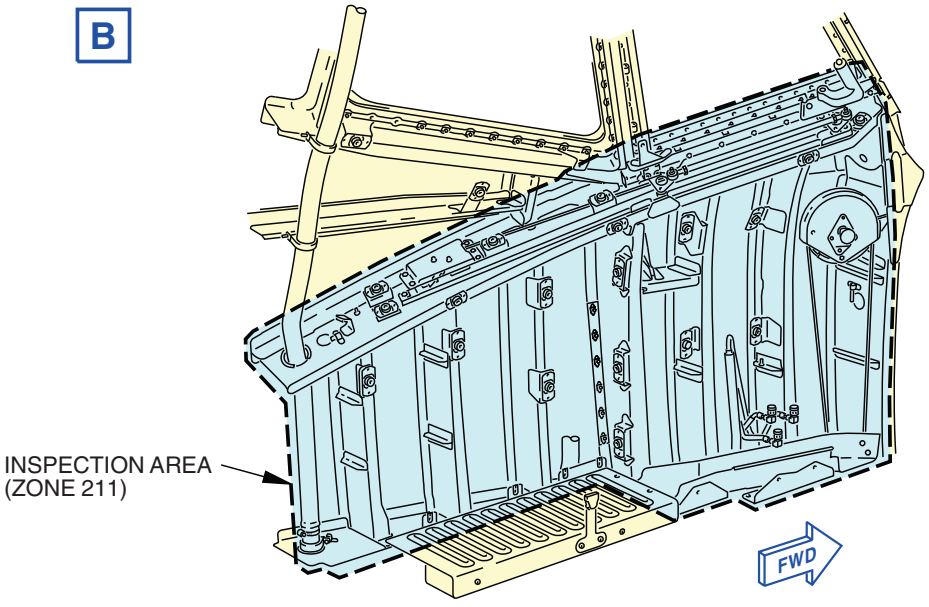


LEFT SIDEWALL CONSOLE (PANELS ARE REMOVED)

B

2410129 S00061524964_V3


Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 2 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

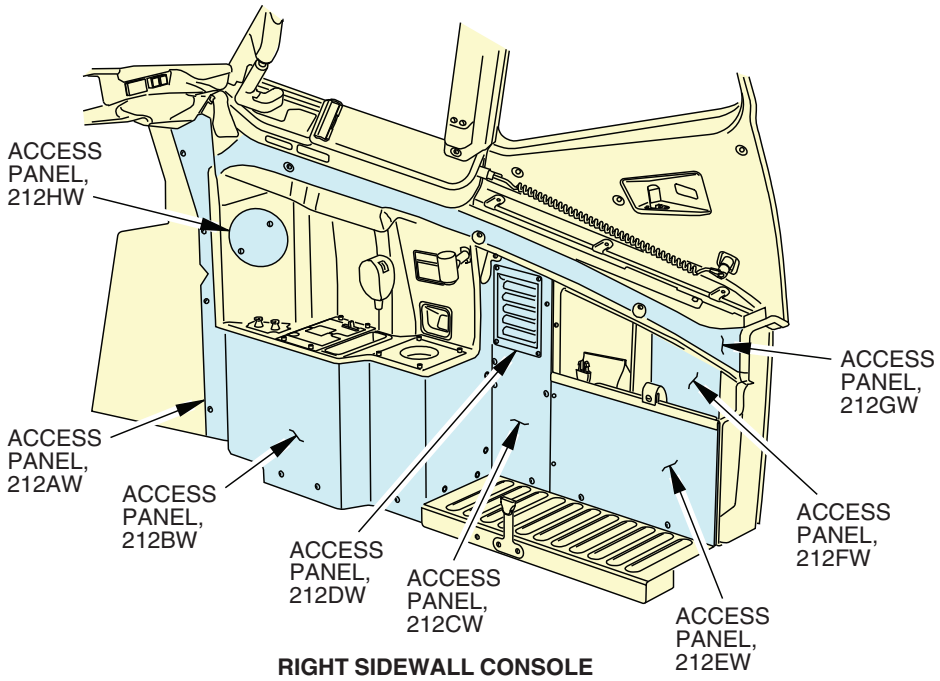

RIGHT SIDEWALL CONSOLE

C

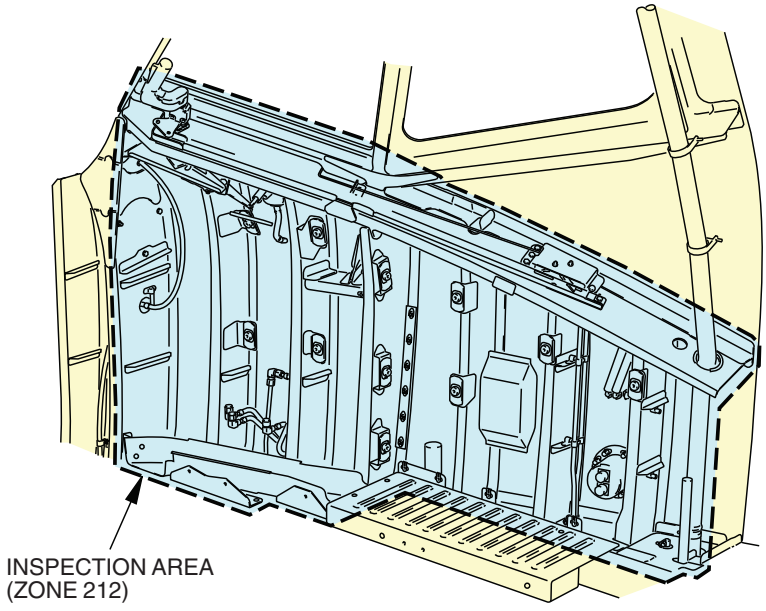


RIGHT SIDEWALL CONSOLE (PANELS REMOVED)

C

2410130 S00061524965_V2


Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 3 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

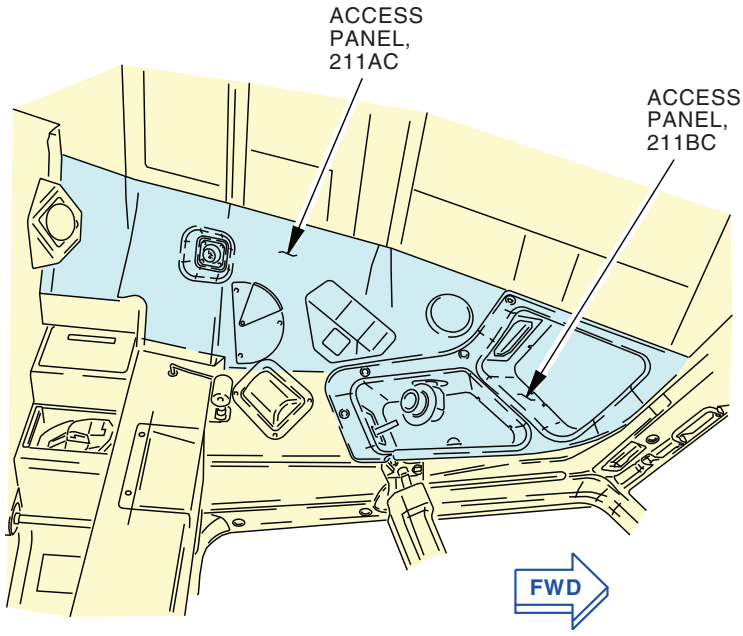

LEFT CEILING PANELS

D

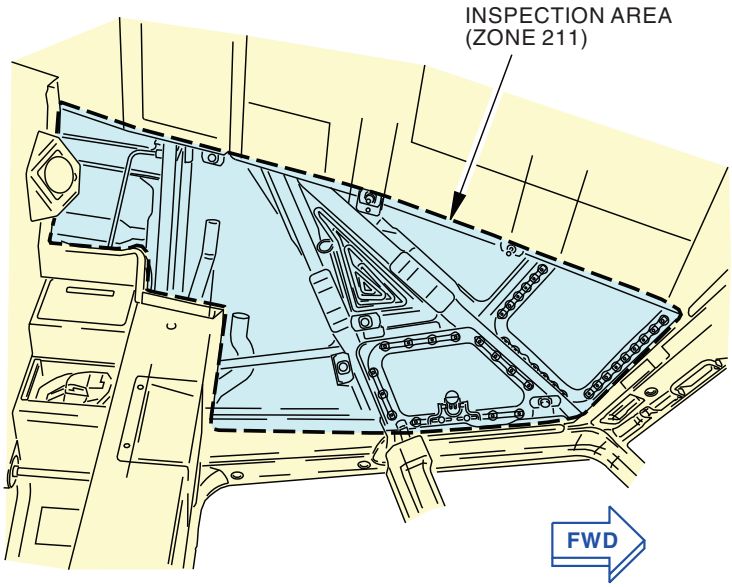


**LEFT CEILING PANELS
(PANELS REMOVED)**

D

2410131 S00061524966_V1


**Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 4 of 8)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

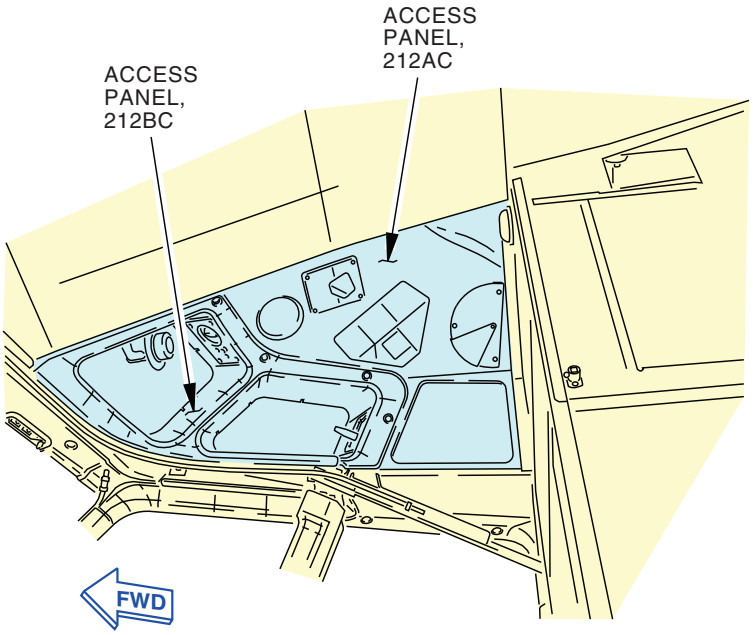

RIGHT CEILING PANELS

E

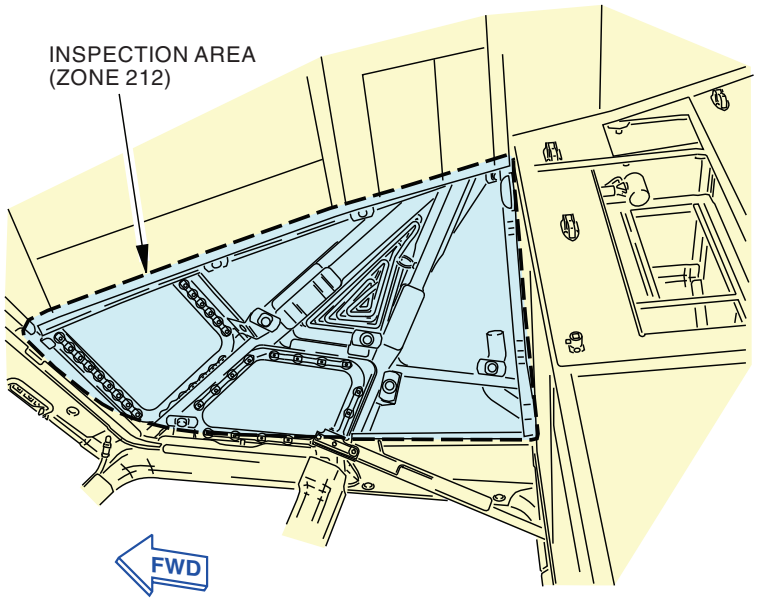


RIGHT CEILING PANELS (PANELS REMOVED)

E

2410132 S00061524967_V1


Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 5 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

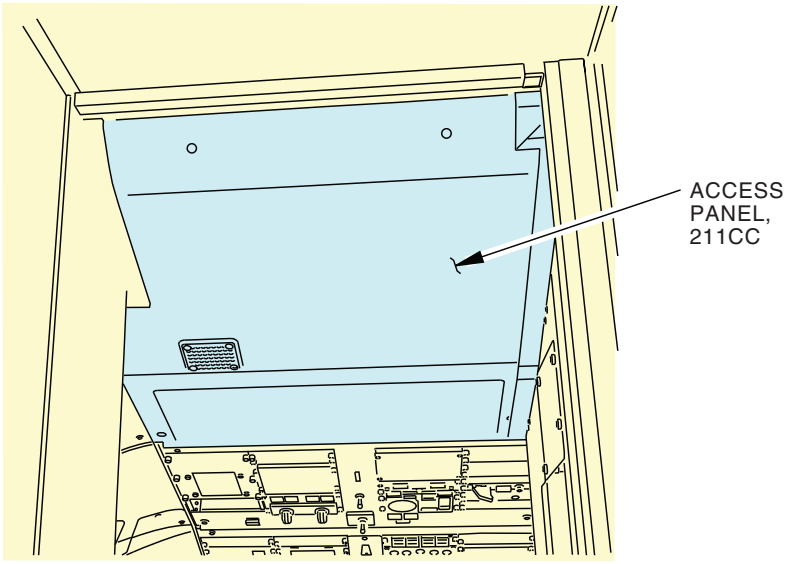

CENTER CEILING PANEL

F

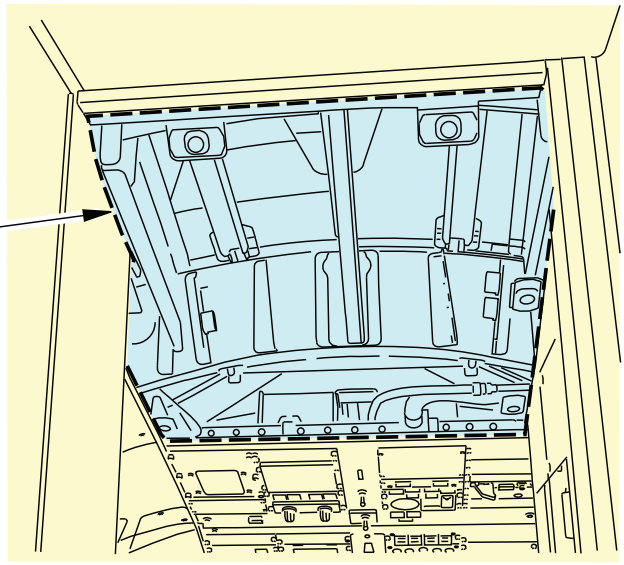


CENTER CEILING PANEL
(PANEL REMOVED)

F

2410133 S00061524968_V1

Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 6 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

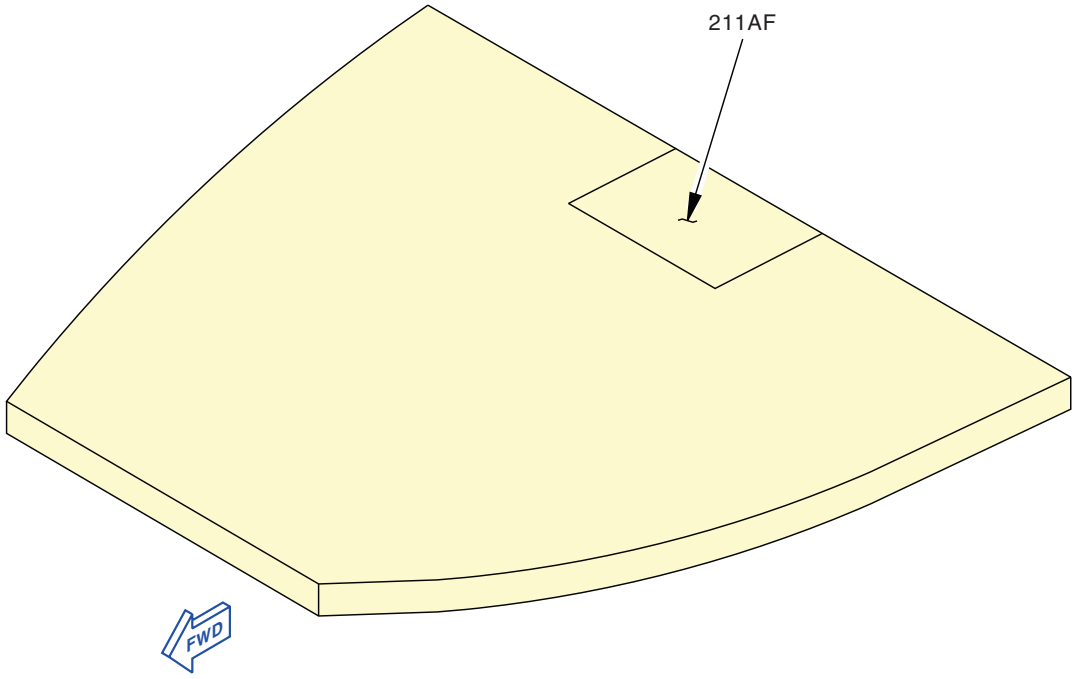


FLIGHT COMPARTMENT FLOOR

G

2809952 S0000646074_V1

Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 7 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

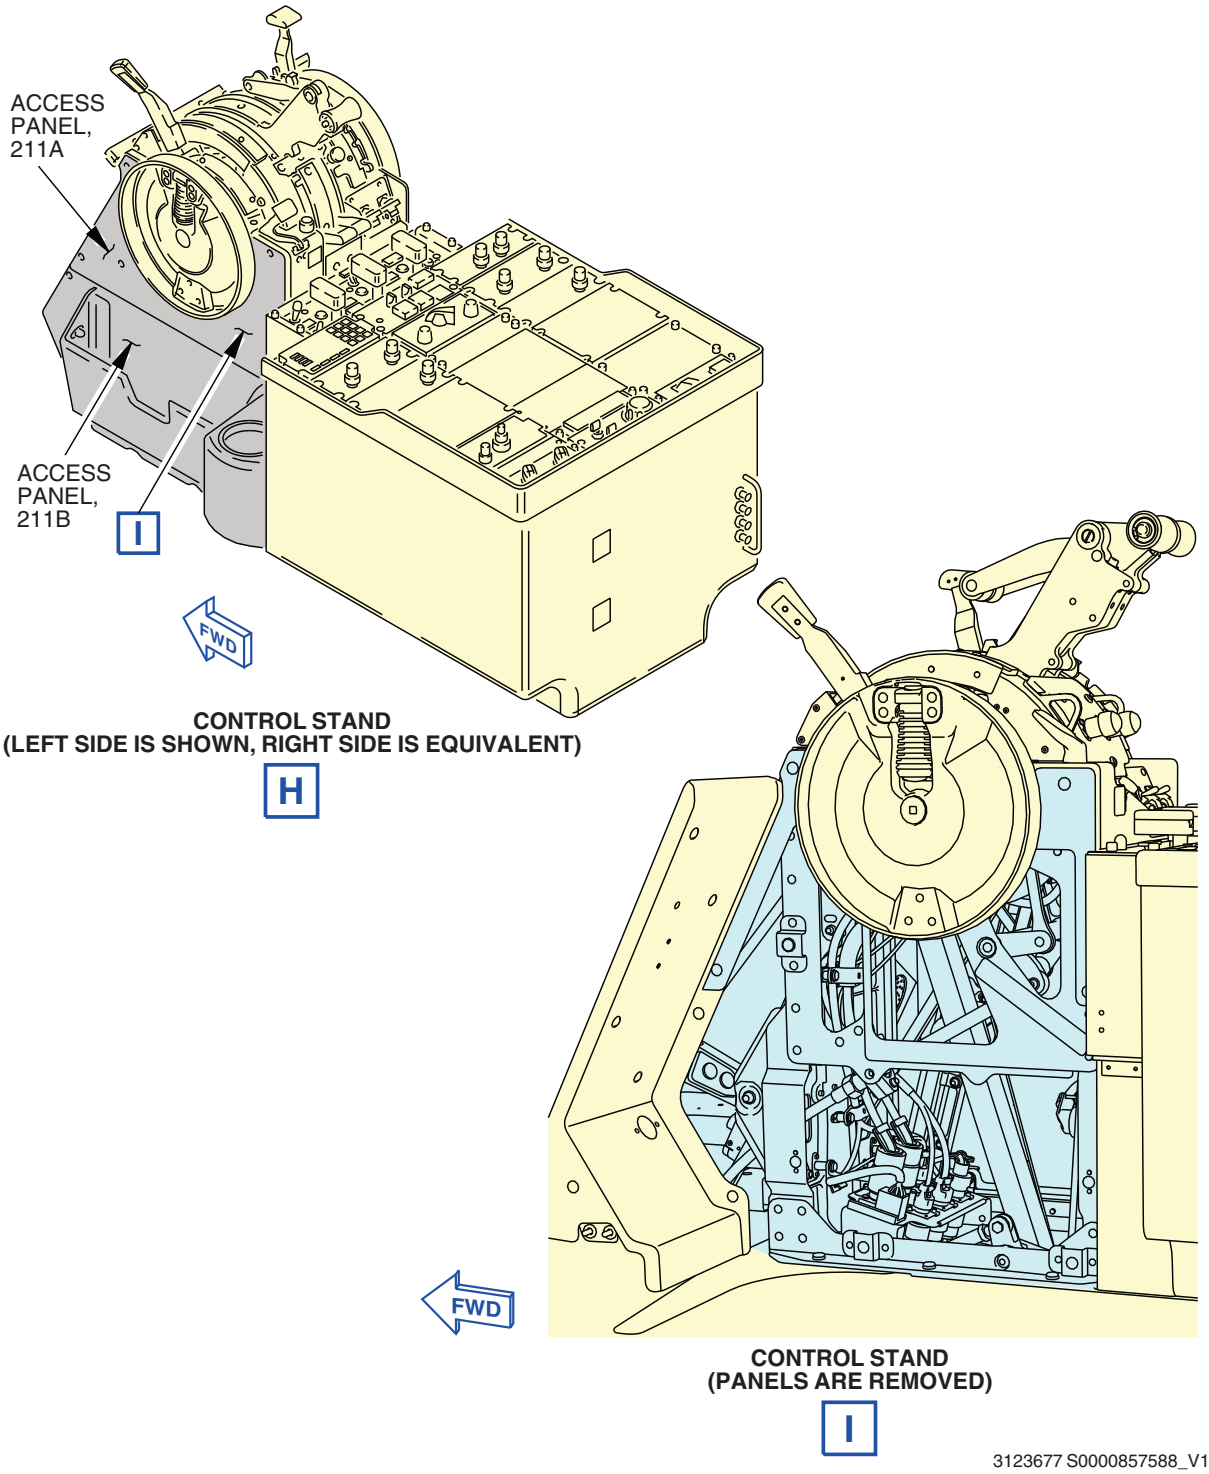

Ceiling Panels and Sidewall Console - Flight Compartment General Visual (Internal)
Figure 204/05-41-02-990-803 (Sheet 8 of 8)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-804

5. EXTERNAL - ZONAL (GVI): Passenger Compartment - Aft of Control Compartment to Forward Entry Door

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right


B. Zonal Inspection

SUBTASK 05-41-02-210-004

(1) Perform an external zonal inspection (GVI) of the Passenger Compartment - Aft of Control Compartment to Forward Entry Door -- Left and Right - Section 41, STA 259.5 to STA 360.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

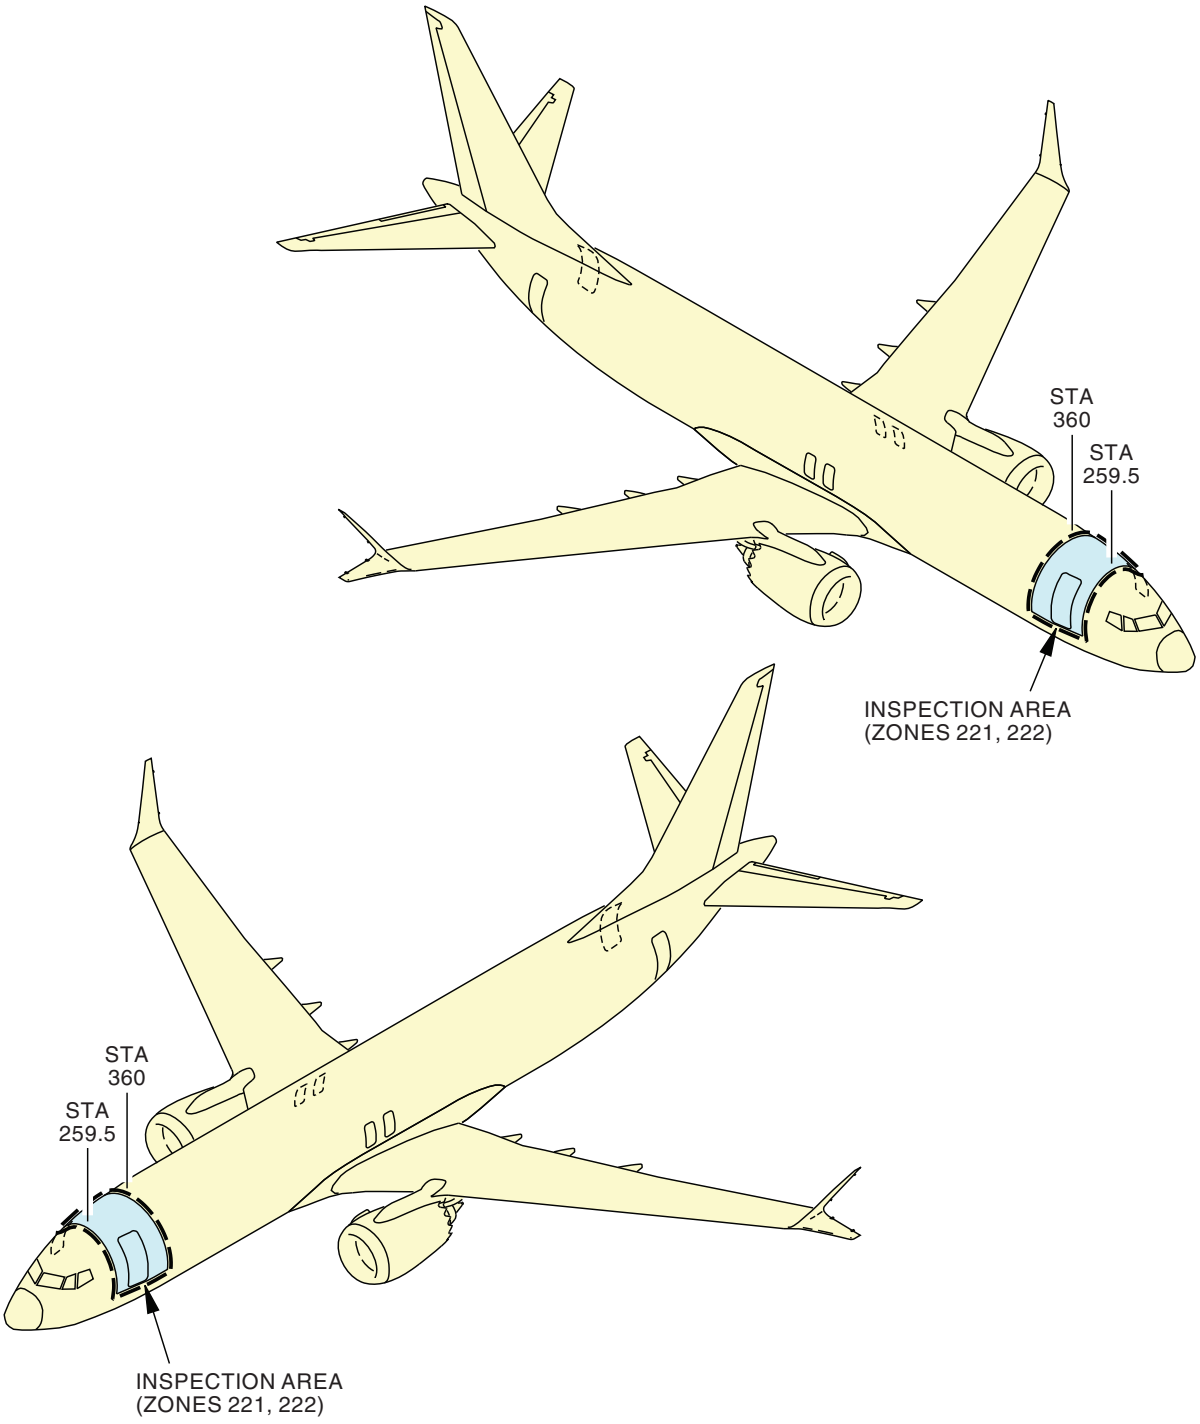

2410134 S00061524970_V2

Passenger Compartment (Sta 259.5-360) General Visual (External)
Figure 205/05-41-02-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-805

6. INTERNAL - ZONAL (GVI): Passenger Compartment - Aft of Control Compartment to Forward Entry Door

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

B. Access Panels

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

C. Zonal Inspection

SUBTASK 05-41-02-010-009

(1) Open these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

SUBTASK 05-41-02-210-005

(2) Perform an internal zonal inspection (GVI) of the Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left and Right - Section 41, STA 270 to STA 360.


SUBTASK 05-41-02-410-008

(3) Close these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

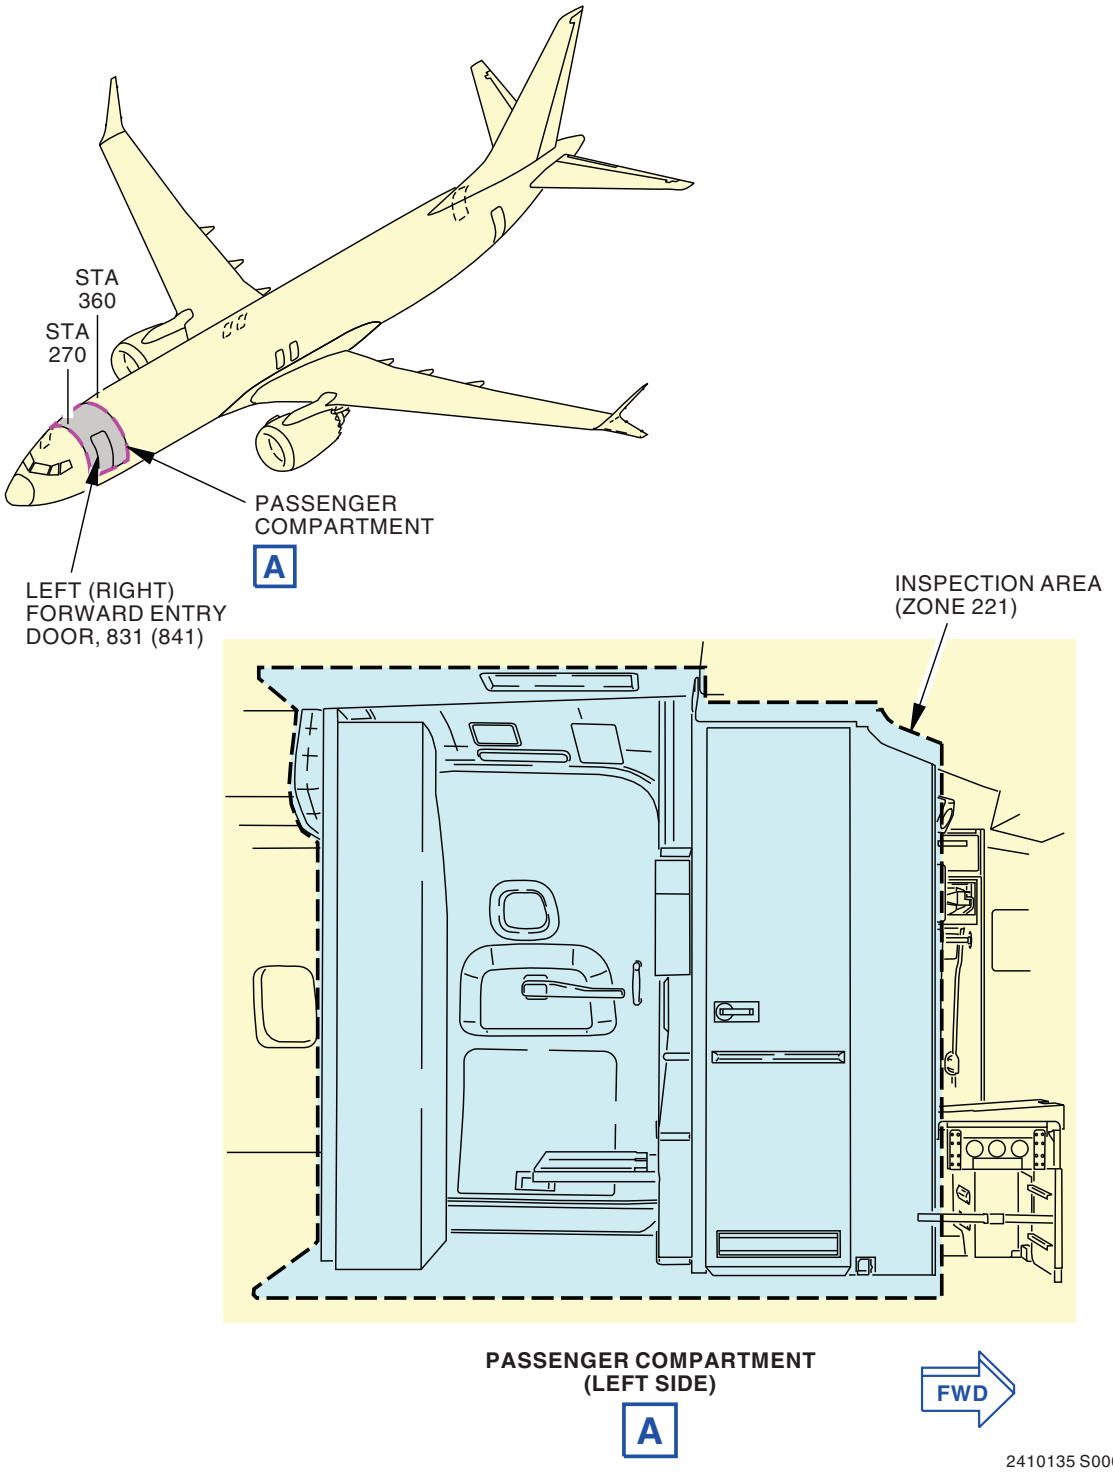

Passenger Compartment (Sta 270-360) General Visual (Internal)
Figure 206/05-41-02-990-805 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

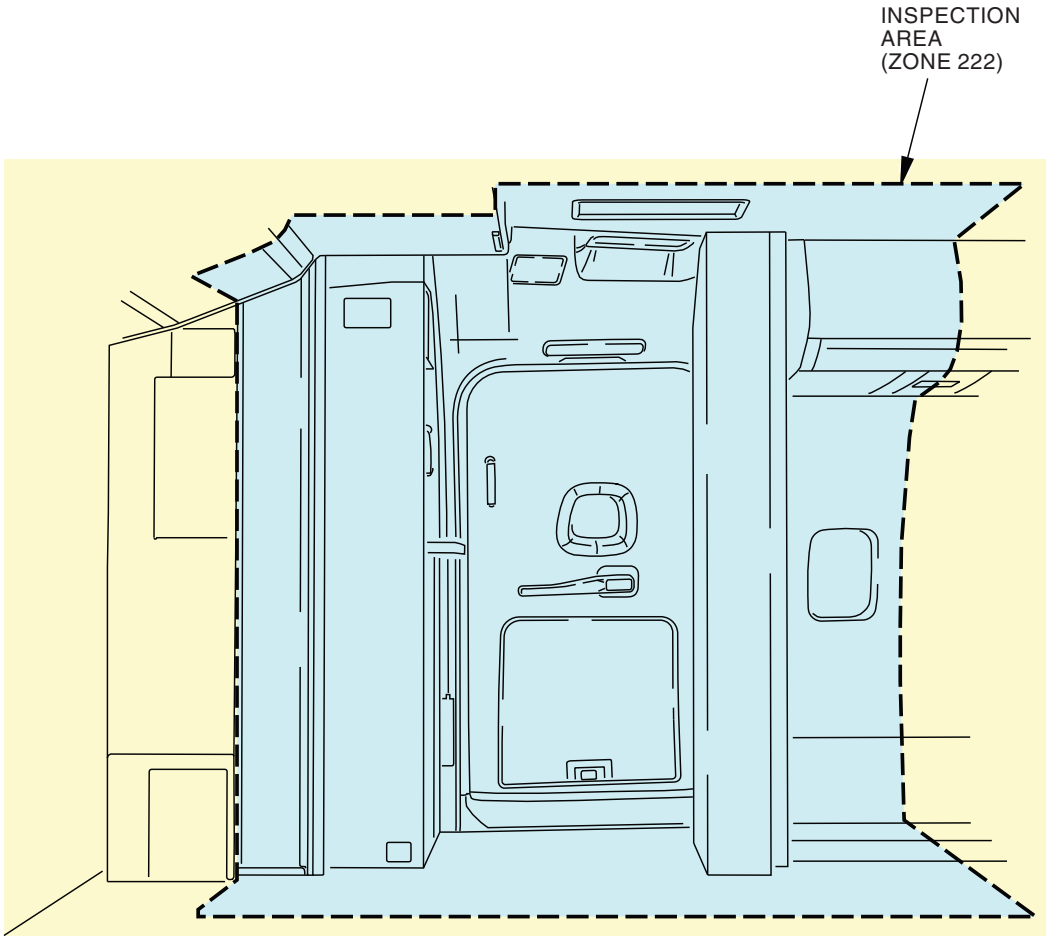

2410136 S00061524973_V1

Passenger Compartment (Sta 270-360) General Visual (Internal)
Figure 206/05-41-02-990-805 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-02-210-806

7. INTERNAL - ZONAL (GVI): Passenger Compartment - Aft of Control Compartment to Forward Entry Door

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

D. Access Panels

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

E. Zonal Inspection

SUBTASK 05-41-02-010-013

(1) Open these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

NOTE: With access provided. Galleys and lavs removed. Floor panels, sidewall panels, and ceiling panels removal required.

SUBTASK 05-41-02-210-006

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Passenger Compartment - Aft of the Control Compartment to Forward Entry Door - Left and Right - Section 41, STA 270 to STA 360. (EZAP)

SUBTASK 05-41-02-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-02-410-012

(5) Close these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

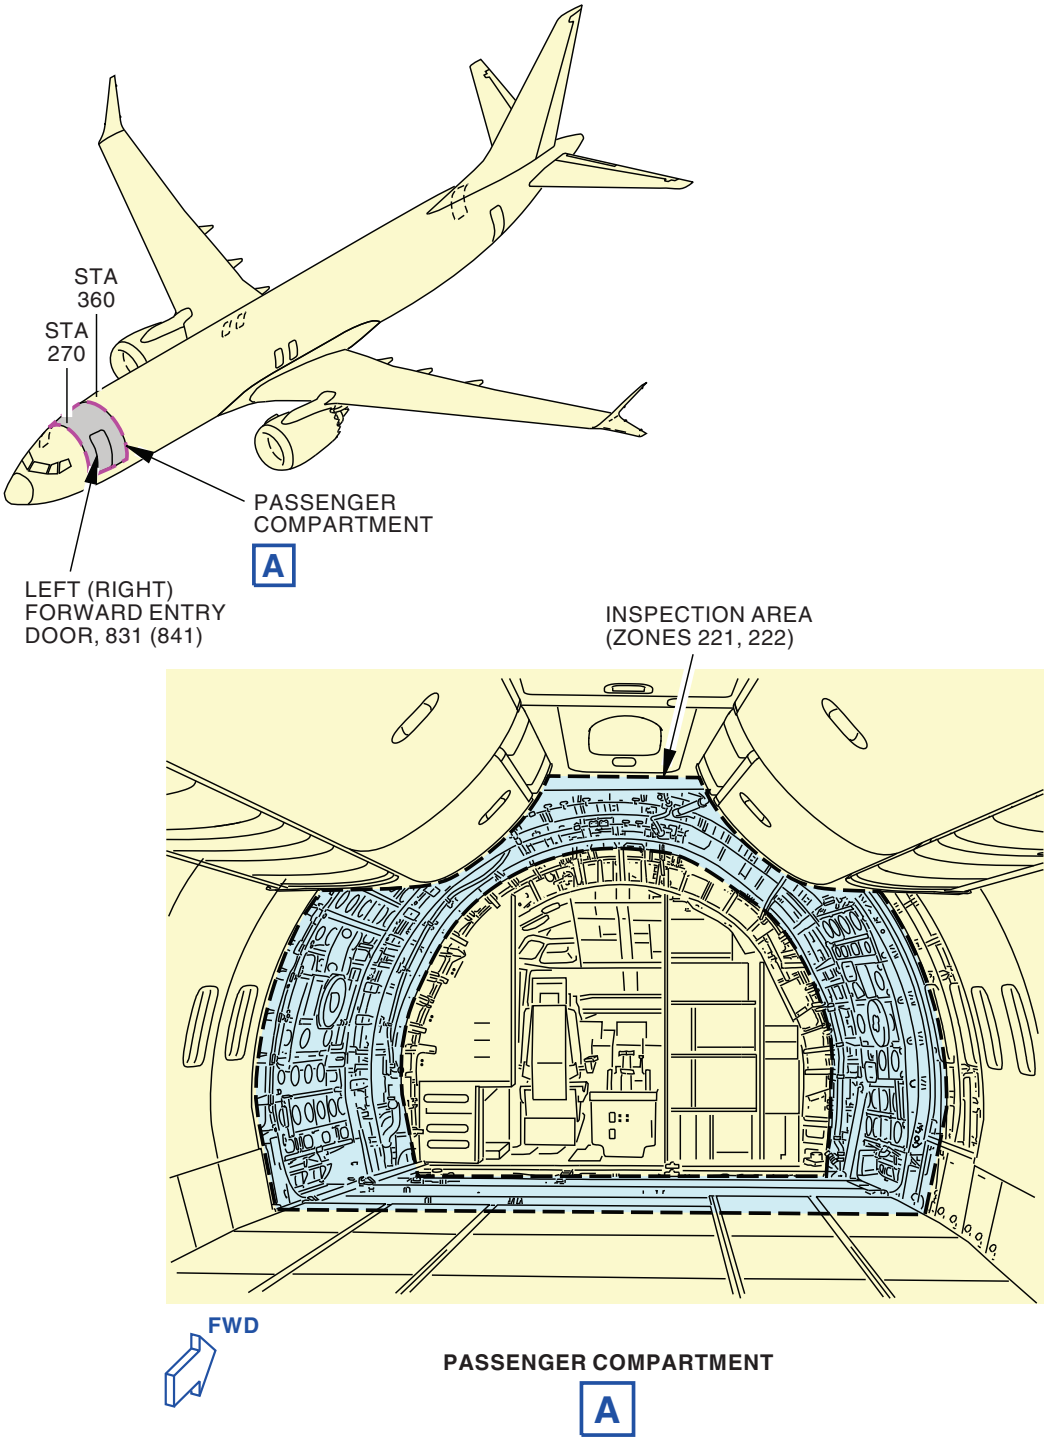

Passenger Compartment (Sta 270-360) General Visual (Internal) (Panels Removed)
Figure 207/05-41-02-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-807

8. EXTERNAL - ZONAL (GVI): Forward Passenger Entry Door Stops, Latches and Hinges
(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

B. Access Panels

Number	Name/Location
831	Forward Entry Door

C. Zonal Inspection

SUBTASK 05-41-02-010-002

(1) Open this access panel:

Number	Name/Location
831	Forward Entry Door

NOTE: Open forward entry door.

SUBTASK 05-41-02-210-007

(2) Perform an external zonal inspection (GVI) of the Forward Passenger Entry Door Stops, Latches and Hinges - Section 41, STA 345.


SUBTASK 05-41-02-410-002

(3) Close this access panel:

Number	Name/Location
831	Forward Entry Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

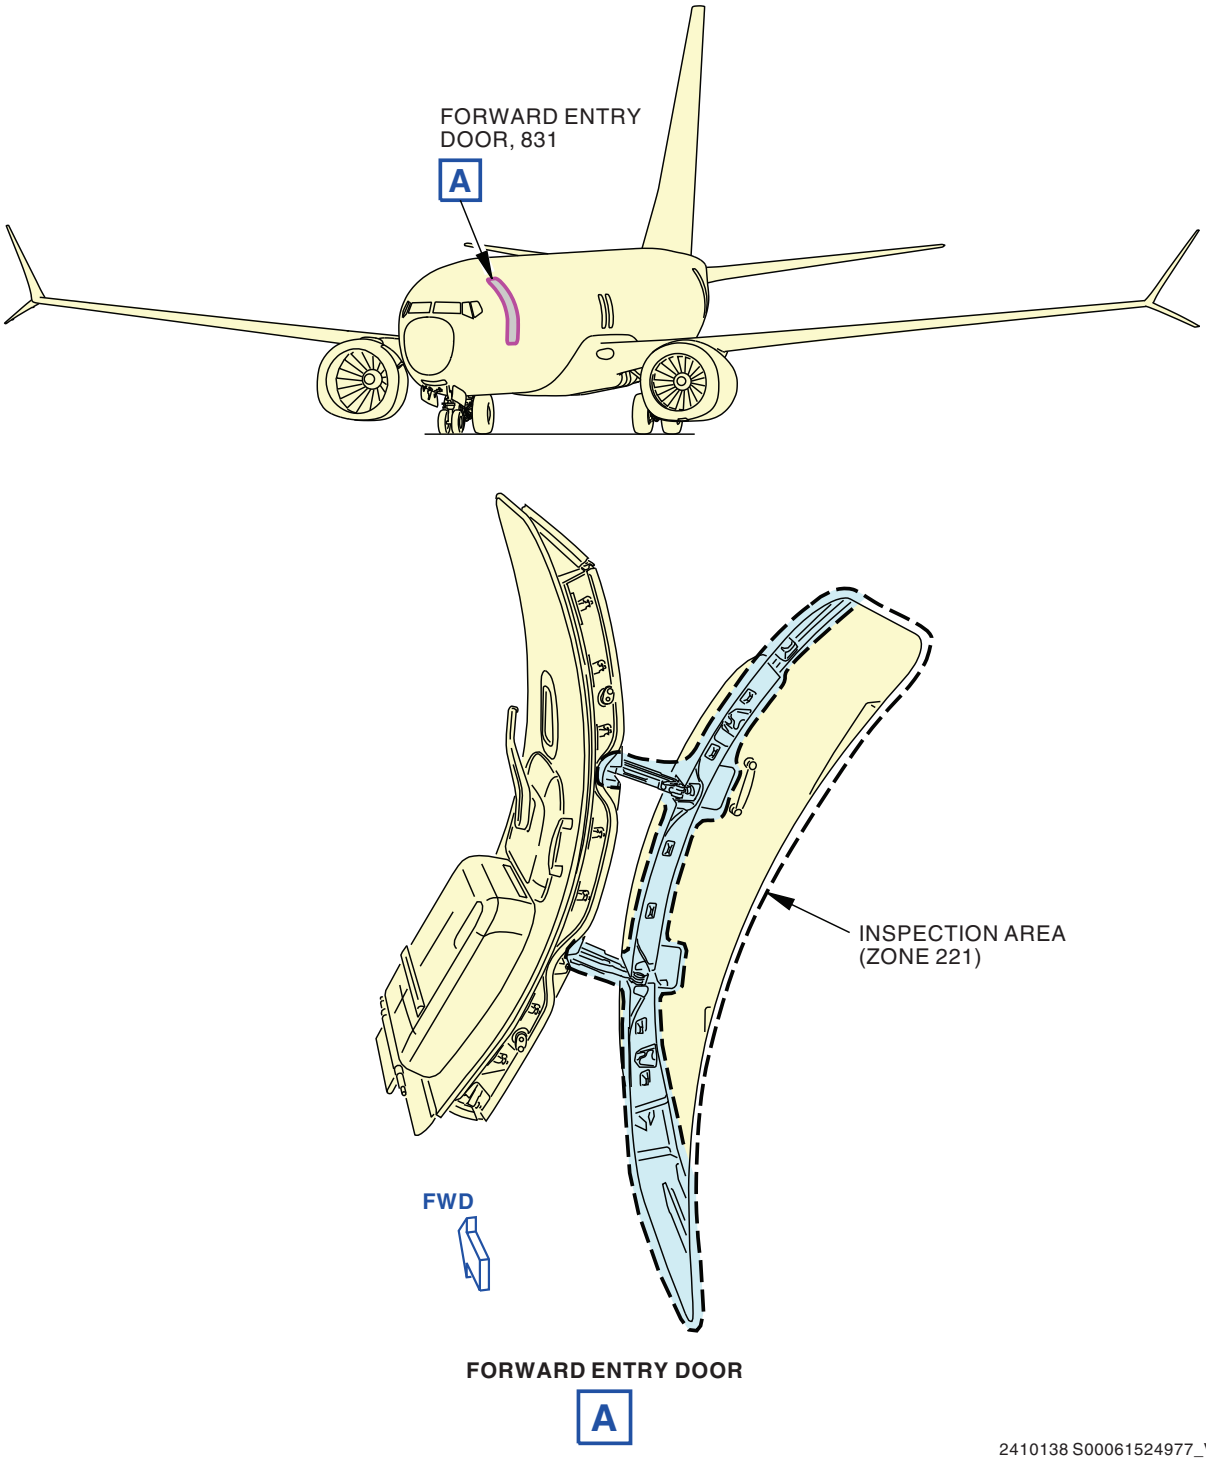

Door Stops, Latches and Hinges - Forward Entry Door General Visual (External)
Figure 208/05-41-02-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-808

9. EXTERNAL - ZONAL (GVI): Forward Galley Service Door Stops, Latches, and Hinges

(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

B. Access Panels

Number	Name/Location
841	Forward Galley Service Door

C. Zonal Inspection

SUBTASK 05-41-02-010-003

(1) Open this access panel:

Number	Name/Location
841	Forward Galley Service Door

NOTE: Open forward galley service door.

SUBTASK 05-41-02-210-008

(2) Perform an external zonal inspection (GVI) of the Forward Galley Service Door Stops, Latches and Hinges - Section 41, Sta 340.


SUBTASK 05-41-02-410-003

(3) Close this access panel:

Number	Name/Location
841	Forward Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

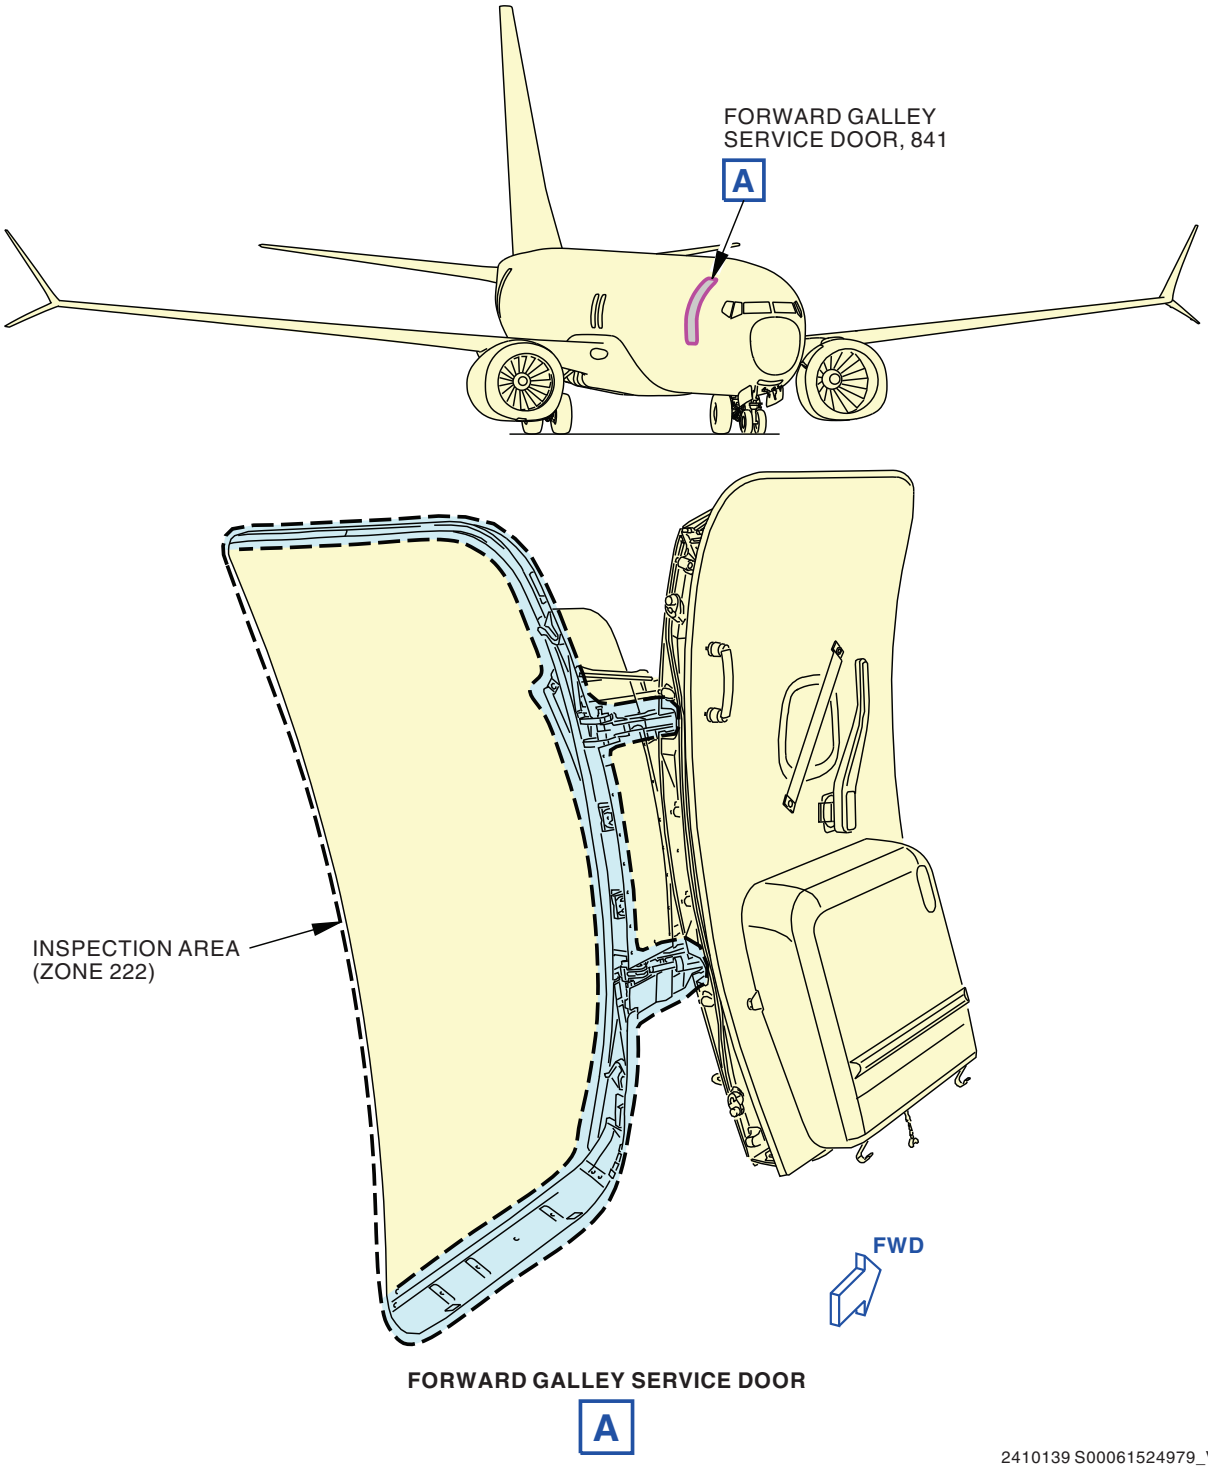

Door Stops, Latches and Hinges - Forward Galley Service Door General Visual (External)
Figure 209/05-41-02-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-809

10. EXTERNAL - ZONAL (GVI): Forward Passenger Compartment - Sta 360 to Sta 663.75

(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right


B. Zonal Inspection

SUBTASK 05-41-02-210-009

(1) Perform an external zonal inspection (GVI) of the Forward Passenger Compartment - STA 360 to STA 663.75 - Left and Right - Section 43 and 44 (part).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

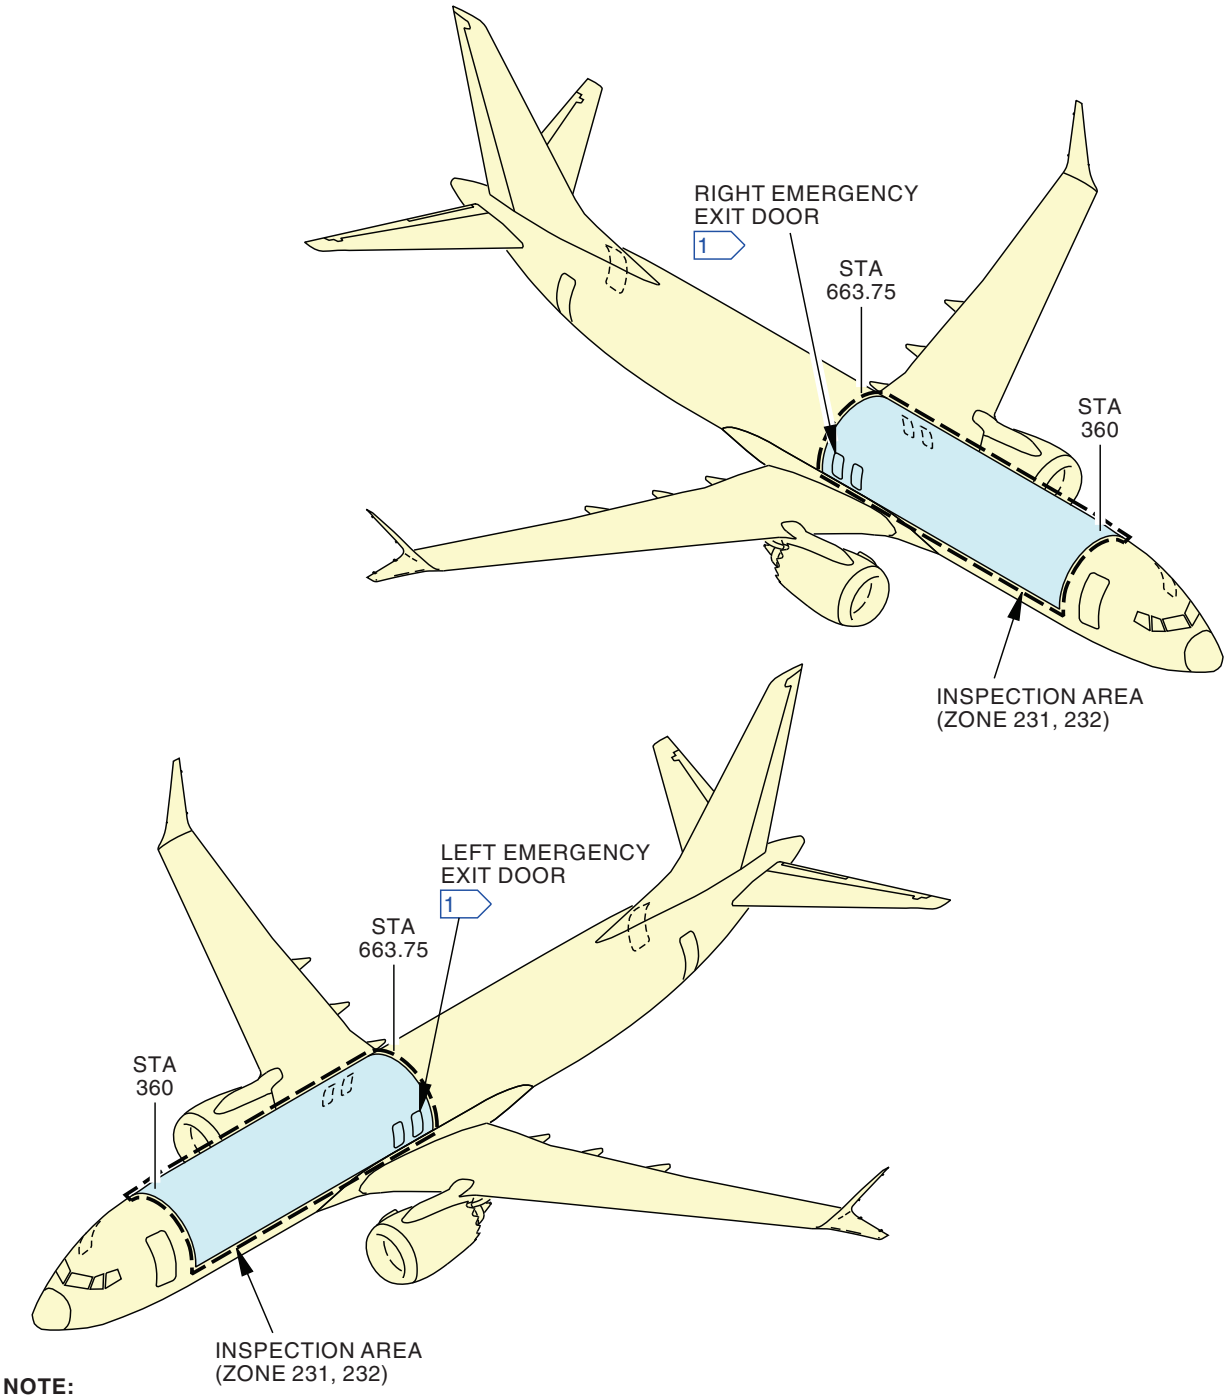

NOTE:

1 TWO EMERGENCY EXIT DOORS ON 8 AND 9 ONLY

2410140 S00061524981_V2

Passenger Compartment (Sta 360-663.75) General Visual (External)
Figure 210/05-41-02-990-809

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-810

11. INTERNAL - ZONAL (GVI): Forward Passenger Compartment - Sta 360 to Sta 663.75

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right

B. Access Panels

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

C. Zonal Inspection

SUBTASK 05-41-02-010-011

(1) Open these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

SUBTASK 05-41-02-210-010

(2) Perform an internal zonal inspection (GVI) of the Forward Passenger Compartment - STA 360 to STA 663.75 - Left and Right - Section 43 and 44 (part).


SUBTASK 05-41-02-410-010


(3) Close these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

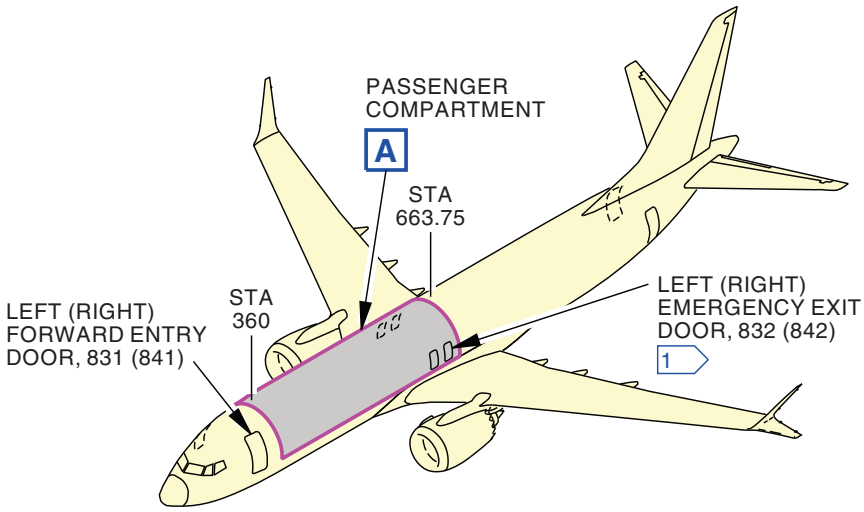

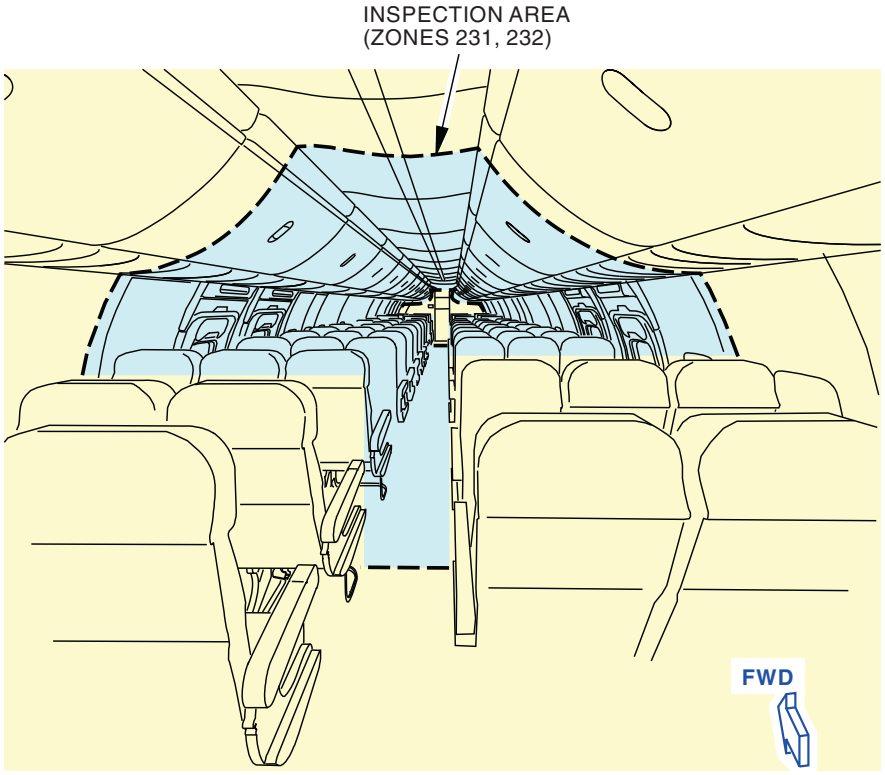

PASSENGER COMPARTMENT

A

NOTE:

1 TWO EMERGENCY EXIT DOORS ON 8 AND 9 ONLY.

2410141 S00061524983_V3

Passenger Compartment (Sta 360-663.75) General Visual (Internal)
Figure 211/05-41-02-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-02-210-811

12. INTERNAL - ZONAL (GVI): Forward Passenger Compartment - Sta 360 to Sta 663.75 Wet Areas

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right

D. Access Panels

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

E. Zonal Inspection

SUBTASK 05-41-02-010-012

(1) Open these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

NOTE: Galleys and lavs removed. Floor panels, sidewall panels, and ceiling panels removal required in areas where galleys and lavs are located.

SUBTASK 05-41-02-210-011

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Forward Passenger Compartment - STA 360 to STA 663.75, Wet Areas (within approximately 20 inches from Galley or Lav) - Left and Right - Section 43 and 44 (part). (EZAP)

SUBTASK 05-41-02-910-003

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-02-410-011

(5) Close these access panels:

Number	Name/Location
831	Forward Entry Door


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
841	Forward Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

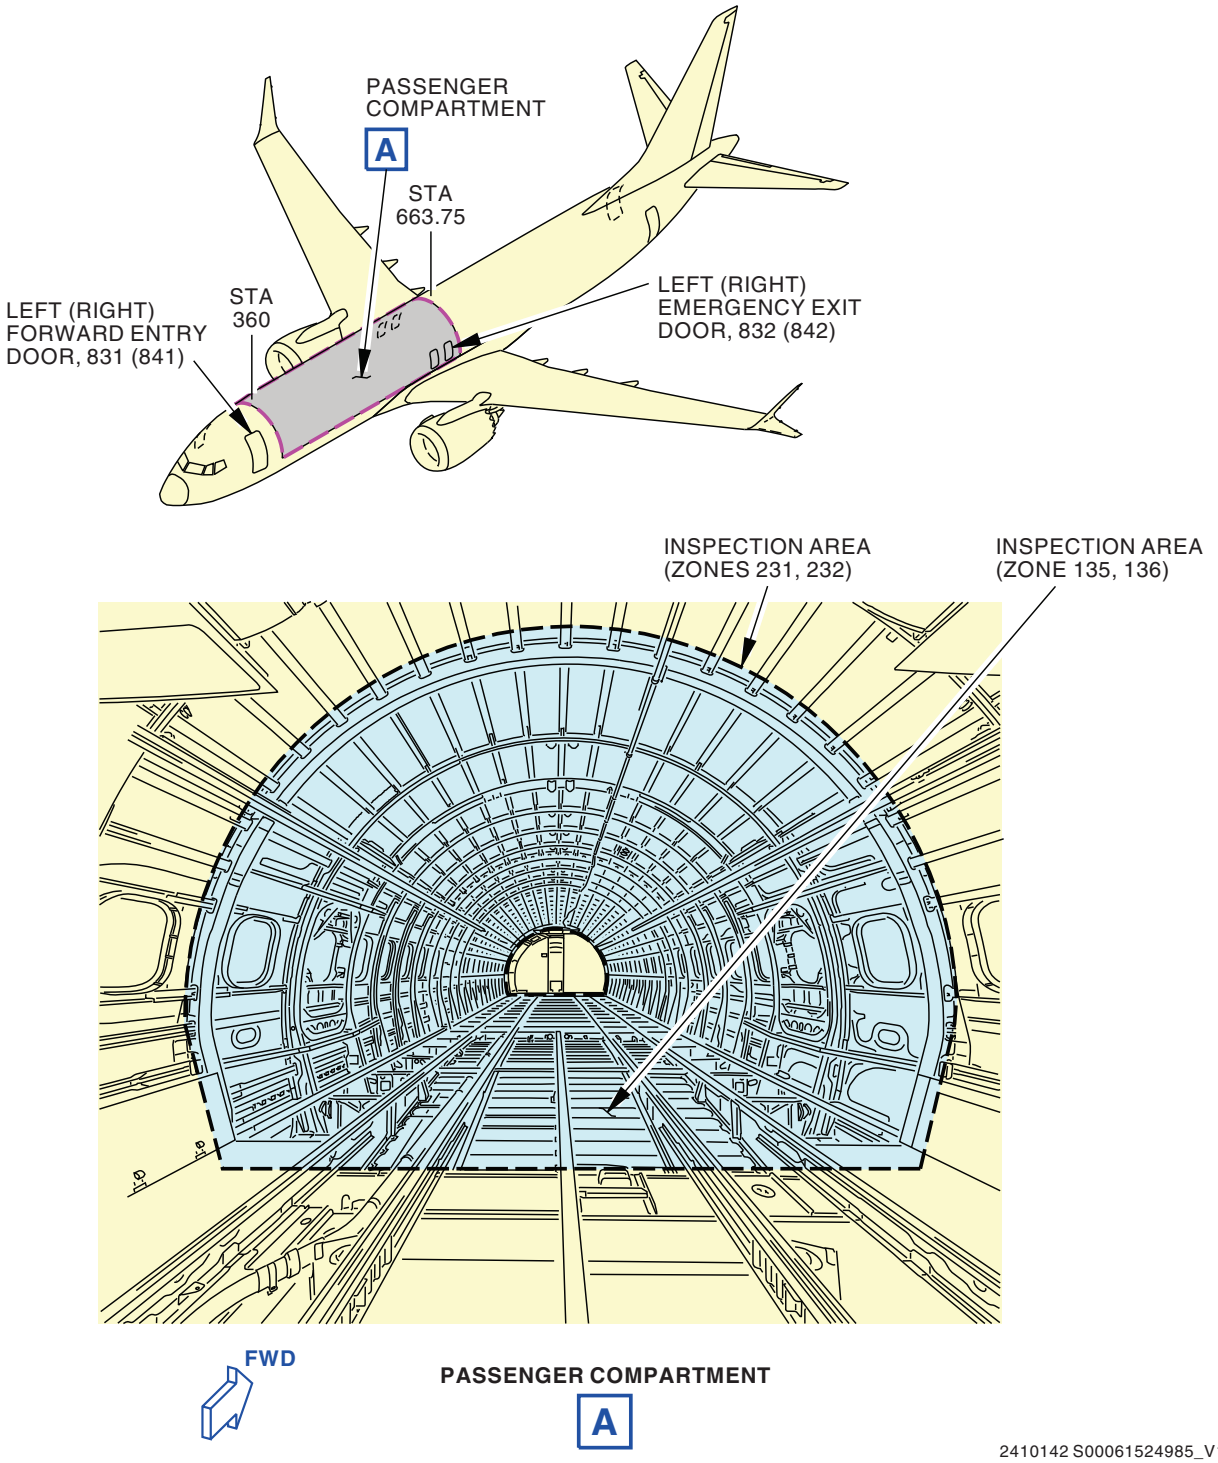

Passenger Compartment (Sta 360-663.75) General Visual (Internal) (Panels Removed)
Figure 212/05-41-02-990-811

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-02-210-812

13. INTERNAL - ZONAL (GVI): Forward Passenger Compartment - STA 360 to STA 663.75, Dry Areas

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right

D. Access Panels

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

E. Zonal Inspection

SUBTASK 05-41-02-010-010

(1) Open these access panels:

Number	Name/Location
831	Forward Entry Door
841	Forward Galley Service Door

NOTE: Floor panels, sidewall panels, and ceiling panels removal required.

SUBTASK 05-41-02-210-012

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Forward Passenger Compartment - STA 360 to STA 663.75 Dry Areas (away from doors, galleys, and lavs) - Left and Right - Section 43 and 44 (part). (EZAP)

SUBTASK 05-41-02-910-004

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-02-410-009

(5) Close these access panels:

Number	Name/Location
831	Forward Entry Door


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
841	Forward Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

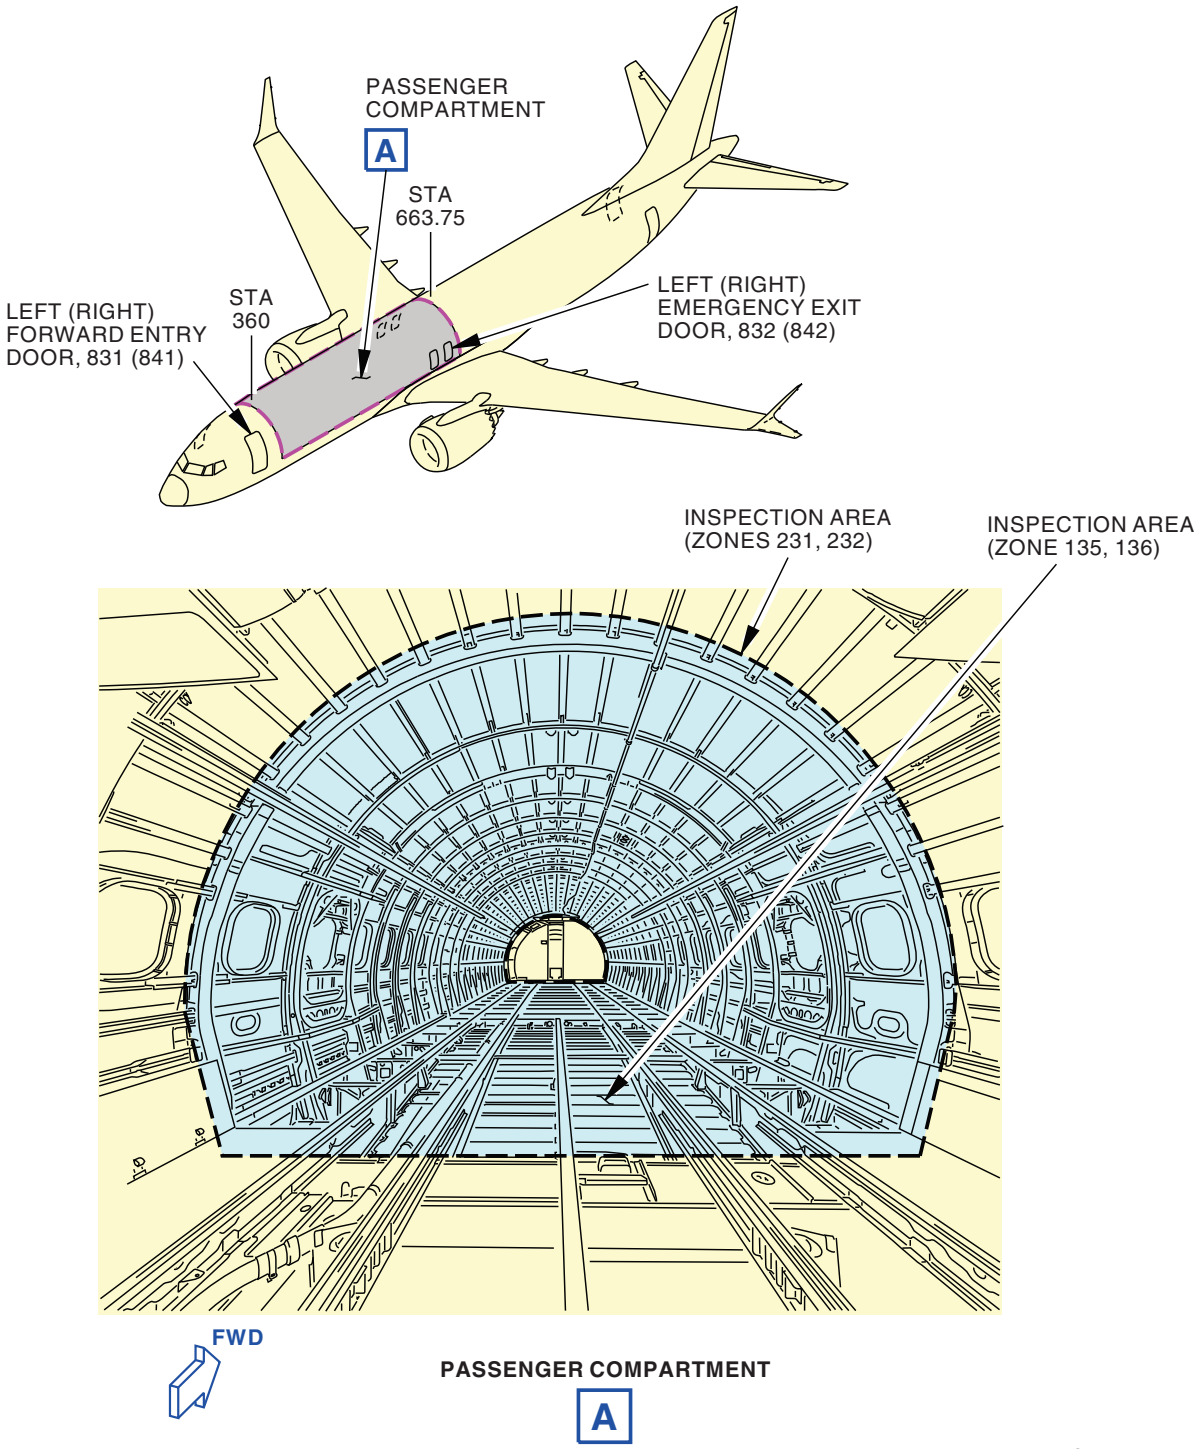

Passenger Compartment (Sta 360-663.75) General Visual (Internal) (Panels Removed)
Figure 213/05-41-02-990-812

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-813

14. EXTERNAL - ZONAL (GVI): Aft Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead
(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right


B. Zonal Inspection

SUBTASK 05-41-02-210-013

(1) Perform an external zonal inspection (GVI) of the Aft Passenger Compartment - STA 663.75 to the Aft Pressure Bulkhead - Left and Right - Section 44 (part), 46, and 47.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

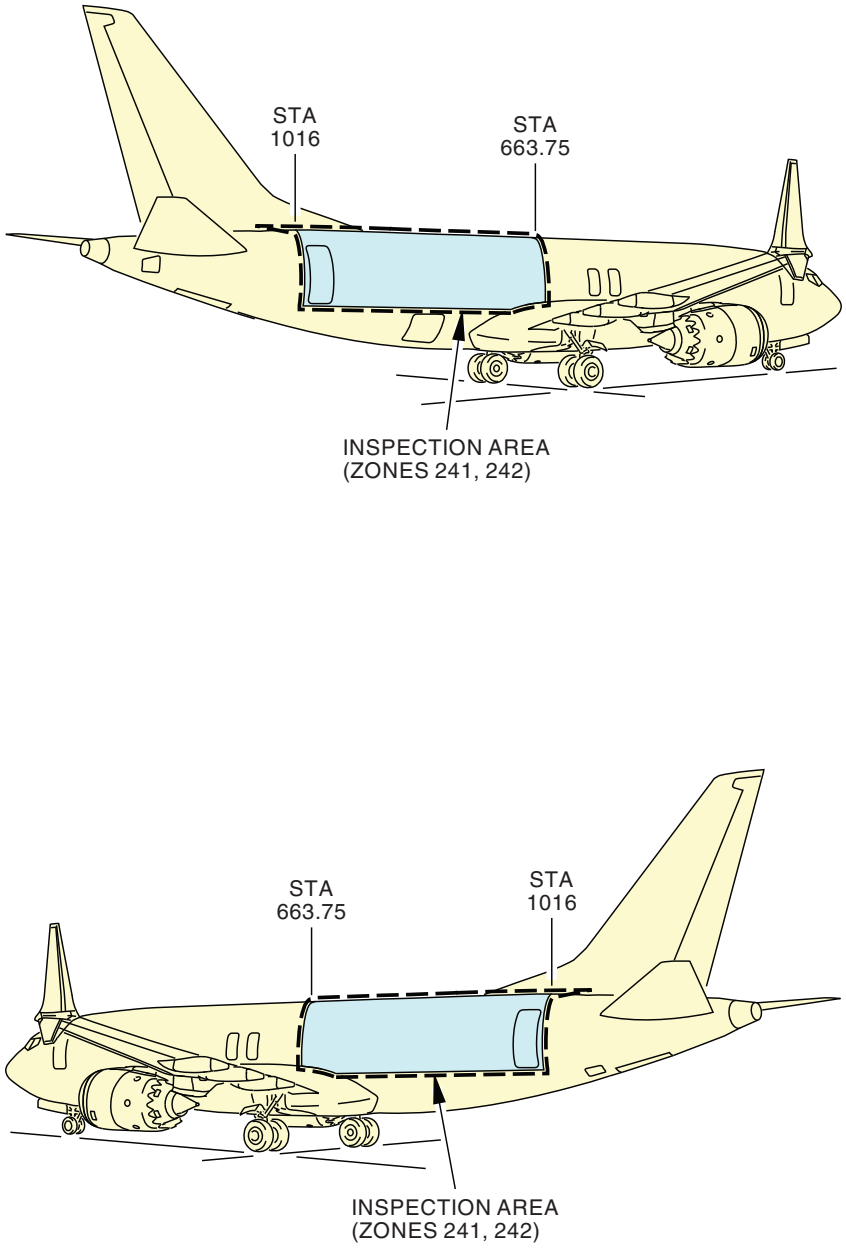

2410144 S00061524989_V2

Passenger Compartment (Sta 663.75-1042) General Visual (External)
Figure 214/05-41-02-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-814

15. INTERNAL - ZONAL (GVI): Aft Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead
(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right


B. Zonal Inspection


SUBTASK 05-41-02-210-014

(1) Perform an internal zonal inspection (GVI) of the Aft Passenger Compartment - STA 663.75 to the Aft Pressure Bulkhead - Left and Right- Section 44 (part), 46 and 47.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

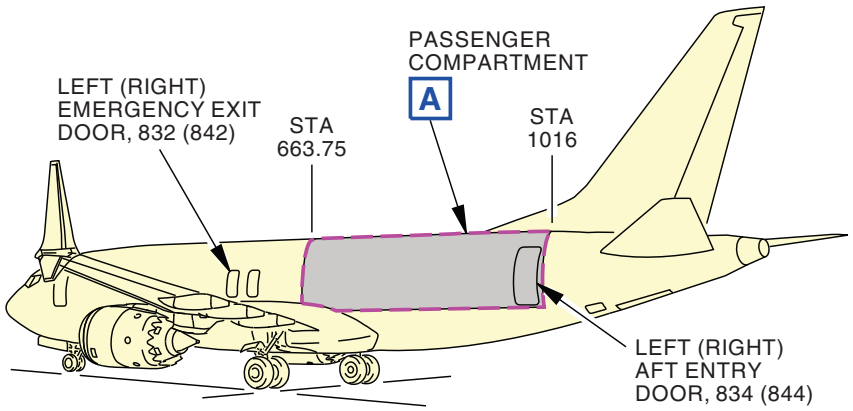

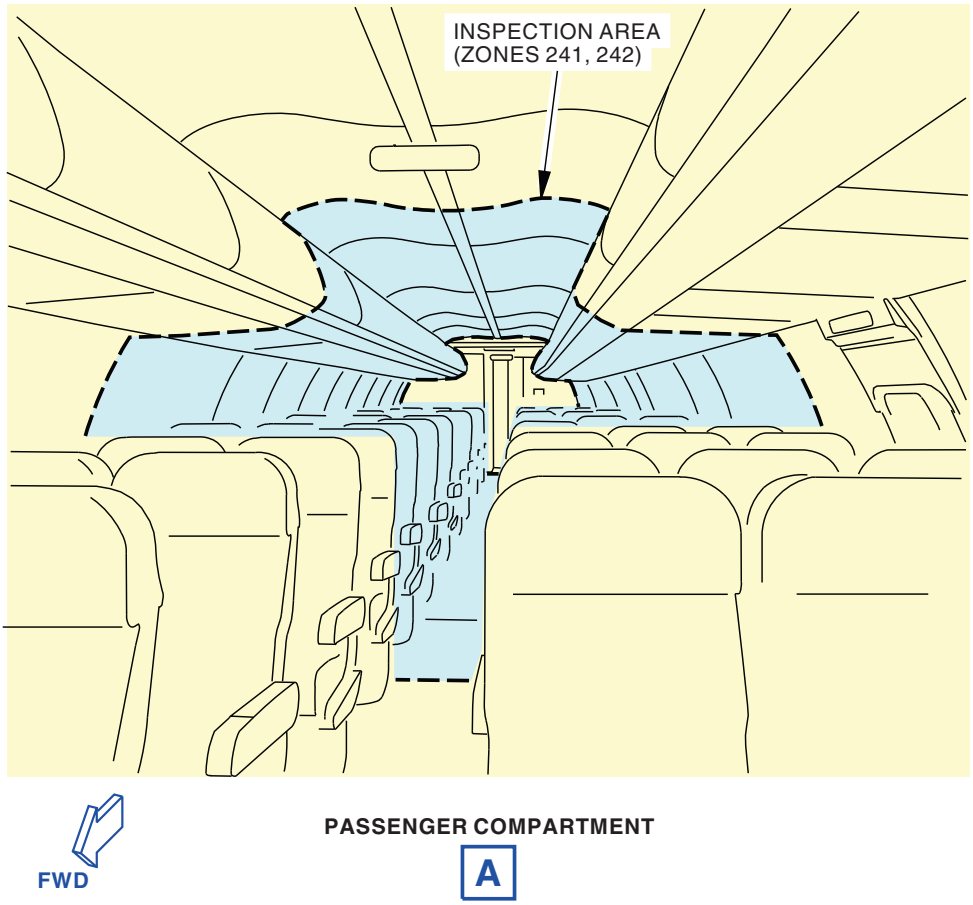

2410145 S00061524991_V2

Passenger Compartment (Sta 663.75-1016) General Visual (Internal)
Figure 215/05-41-02-990-814

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-02-210-815

16. INTERNAL - ZONAL (GVI): Aft Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead - Wet Area

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

D. Access Panels

Number	Name/Location
833	Emergency Exit Door (AOE)
834	Aft Entry Door

E. Zonal Inspection

SUBTASK 05-41-02-010-014

(1) Open these access panels:

Number	Name/Location
833	Emergency Exit Door (AOE)
834	Aft Entry Door

NOTE: Galleys and lavs removed. Floor panels, sidewall panels, and ceiling panels removal required in areas where galleys and lavs are located.

SUBTASK 05-41-02-210-015

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Aft Passenger Compartment - STA 663.75 to the Aft Pressure Bulkhead Wet Area (within approximately 20 in. (51 cm) from Galley Service Door, Passenger Door, Galley or Lav) - Left and Right - Section 44 (part), 46, and 47. (EZAP)

SUBTASK 05-41-02-910-005

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance".

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-02-010-015


(5) Close these access panels:

Number	Name/Location
833	Emergency Exit Door (AOE)
834	Aft Entry Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

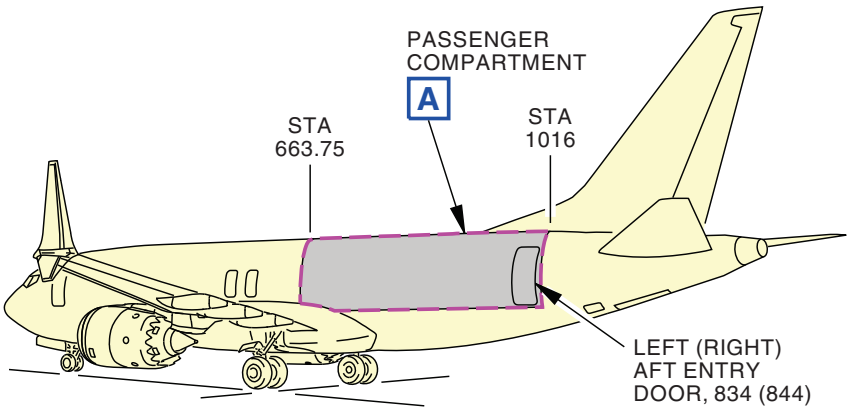

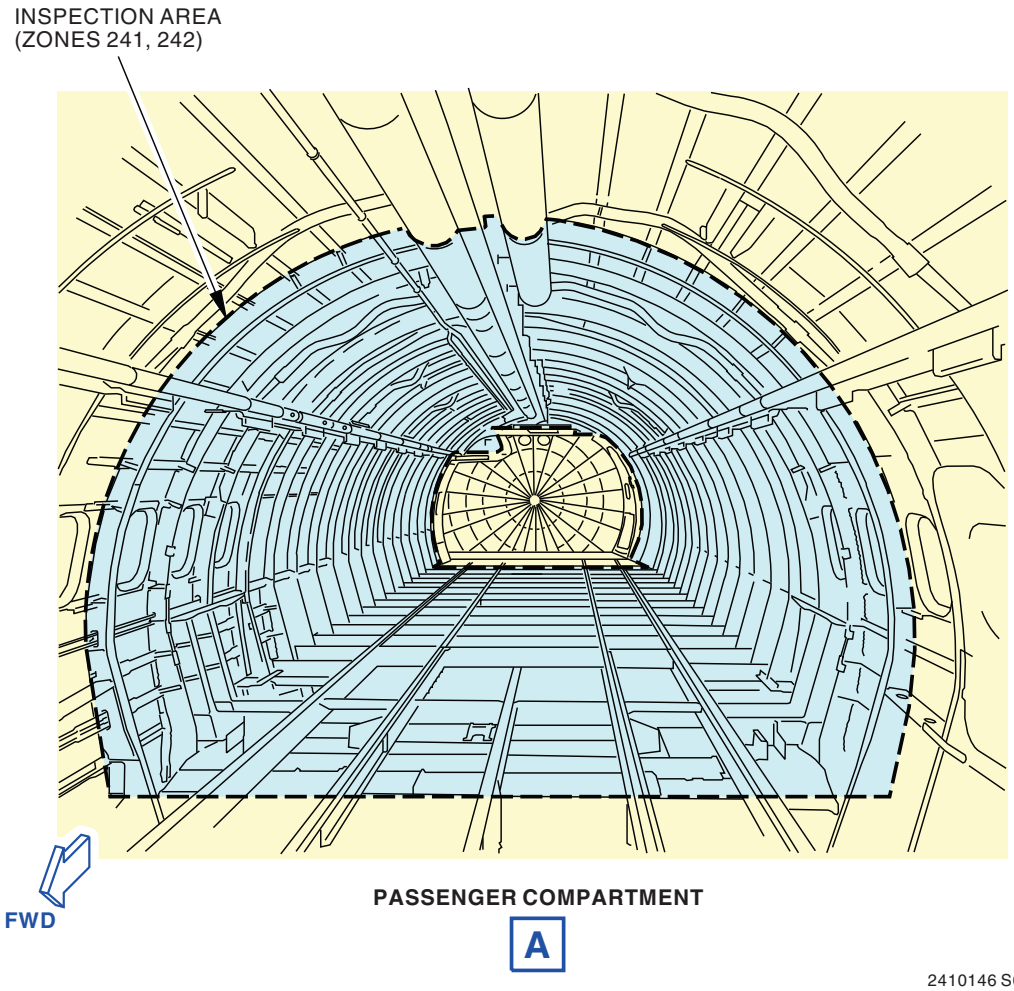

2410146 S00061524993_V2

Passenger Compartment (Sta 663.75-1016) General Visual (Internal) (Galley, Lavatory and Panels Removed)
Figure 216/05-41-02-990-815

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-02-210-816

17. INTERNAL - ZONAL (GVI): Passenger Compartment - STA 663.75 to Aft Pressure Bulkhead - Dry Area

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

D. Access Panels

Number	Name/Location
834	Aft Entry Door
844	Aft Galley Service Door

E. Zonal Inspection

SUBTASK 05-41-02-010-016

(1) Open these access panels:

Number	Name/Location
834	Aft Entry Door
844	Aft Galley Service Door

NOTE: Floor panels, sidewall panels, ceiling panels and return air grilles removal required.

SUBTASK 05-41-02-210-016

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Aft Passenger Compartment - STA 663.75 to the Aft Pressure Bulkhead Dry Area (away from doors, galleys and lavs) - Left and Right - Section 44 (part), 46, and 47. (EZAP)

SUBTASK 05-41-02-910-006

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-02-410-013


(5) Close these access panels:

Number	Name/Location
834	Aft Entry Door
844	Aft Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

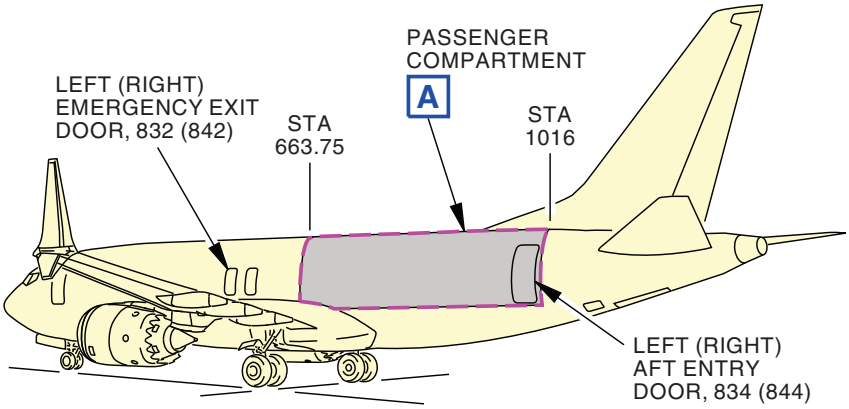

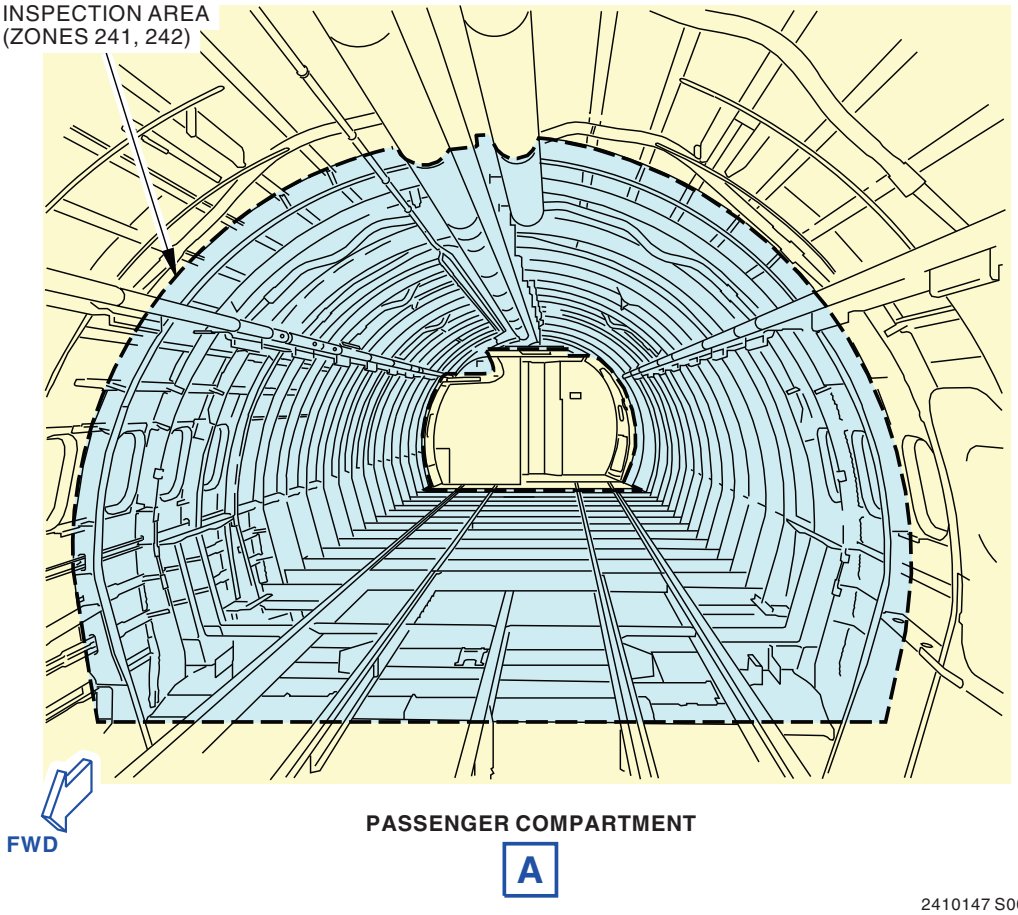

2410147 S00061524995_V2

Passenger Compartment (Sta 663.75-1016) General Visual (Internal) (Panels Removed)
Figure 217/05-41-02-990-816

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-817

18. EXTERNAL - ZONAL (GVI): Aft Passenger Entry Door Stops, Latches, and Hinges

(Figure 218)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left

B. Access Panels

Number	Name/Location
834	Aft Entry Door

C. Zonal Inspection

SUBTASK 05-41-02-010-004

(1) Open this access panel:

Number	Name/Location
834	Aft Entry Door

NOTE: Open aft entry door.

SUBTASK 05-41-02-210-017

(2) Perform an external zonal inspection (GVI) of the Aft Passenger Entry Door Stops, Latches, and Hinges - Section 47, STA 980.


SUBTASK 05-41-02-410-004

(3) Close this access panel:

Number	Name/Location
834	Aft Entry Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

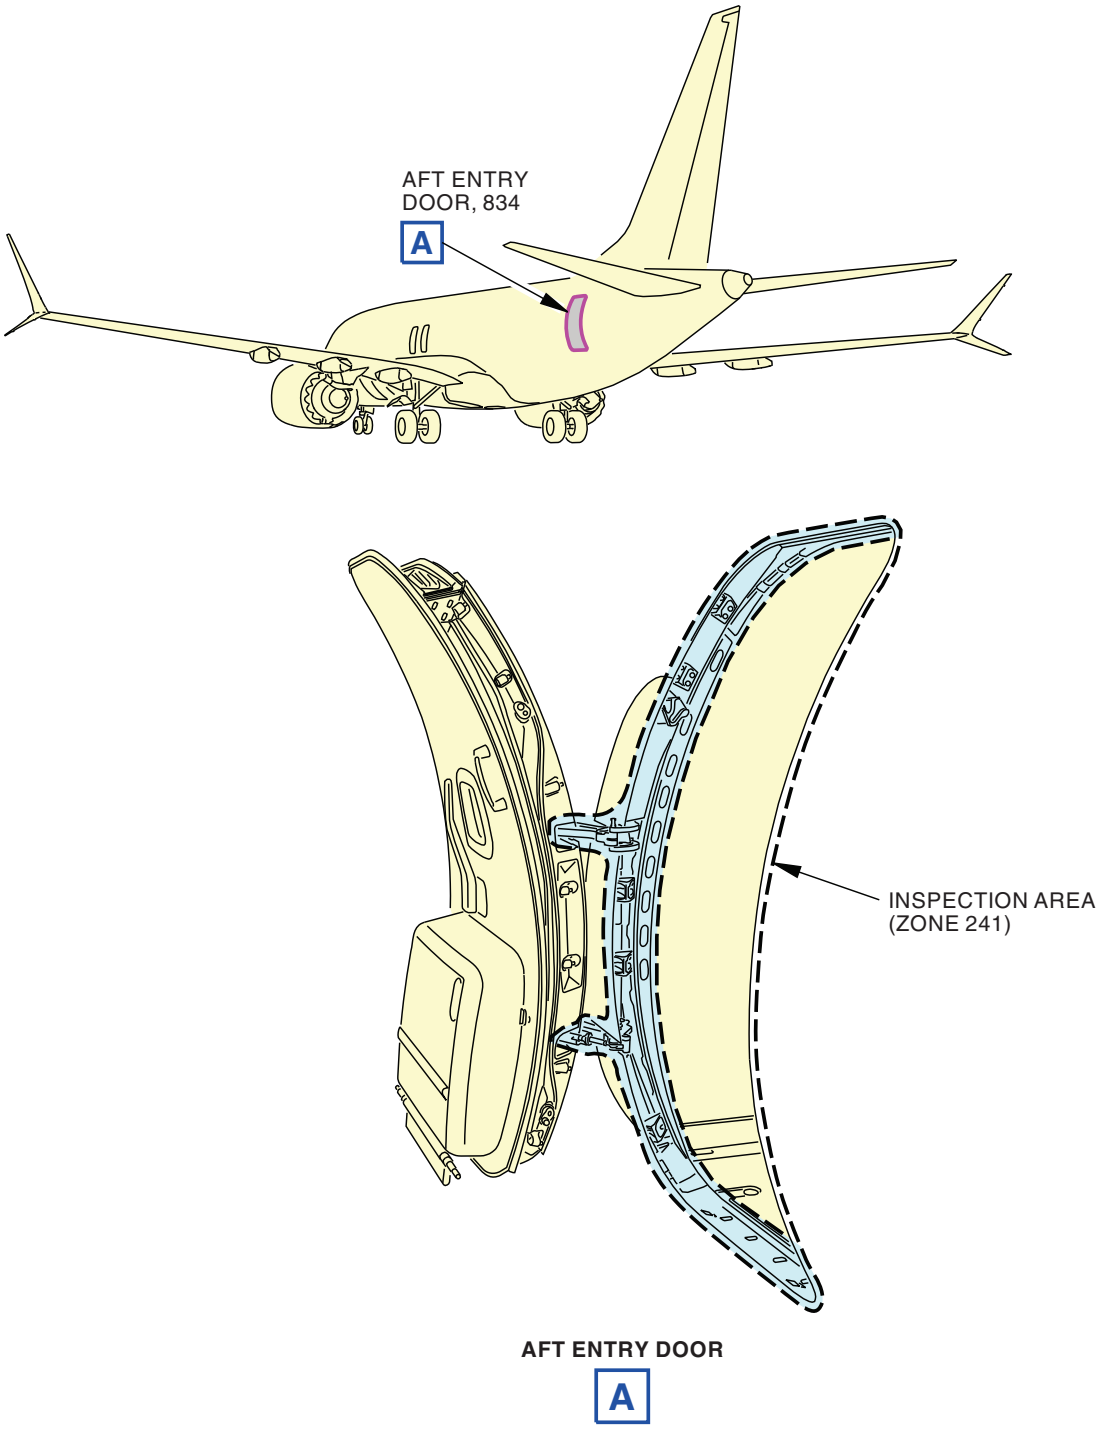

Door Stops, Latches and Hinges - Aft Entry Door General Visual (External)
Figure 218/05-41-02-990-817

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-02-210-818

19. EXTERNAL - ZONAL (GVI): Aft Galley Service Door Stops, Latches, and Hinges

(Figure 219)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

B. Access Panels

Number	Name/Location
844	Aft Galley Service Door

C. Zonal Inspection

SUBTASK 05-41-02-010-005

(1) Open this access panel:

Number	Name/Location
844	Aft Galley Service Door

NOTE: Open aft galley door.

SUBTASK 05-41-02-210-018

(2) Perform an external zonal inspection (GVI) of the Aft Galley Service Door Stops, Latches, and Hinges - Section 47, STA 980.


SUBTASK 05-41-02-410-005

(3) Close this access panel:

Number	Name/Location
844	Aft Galley Service Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

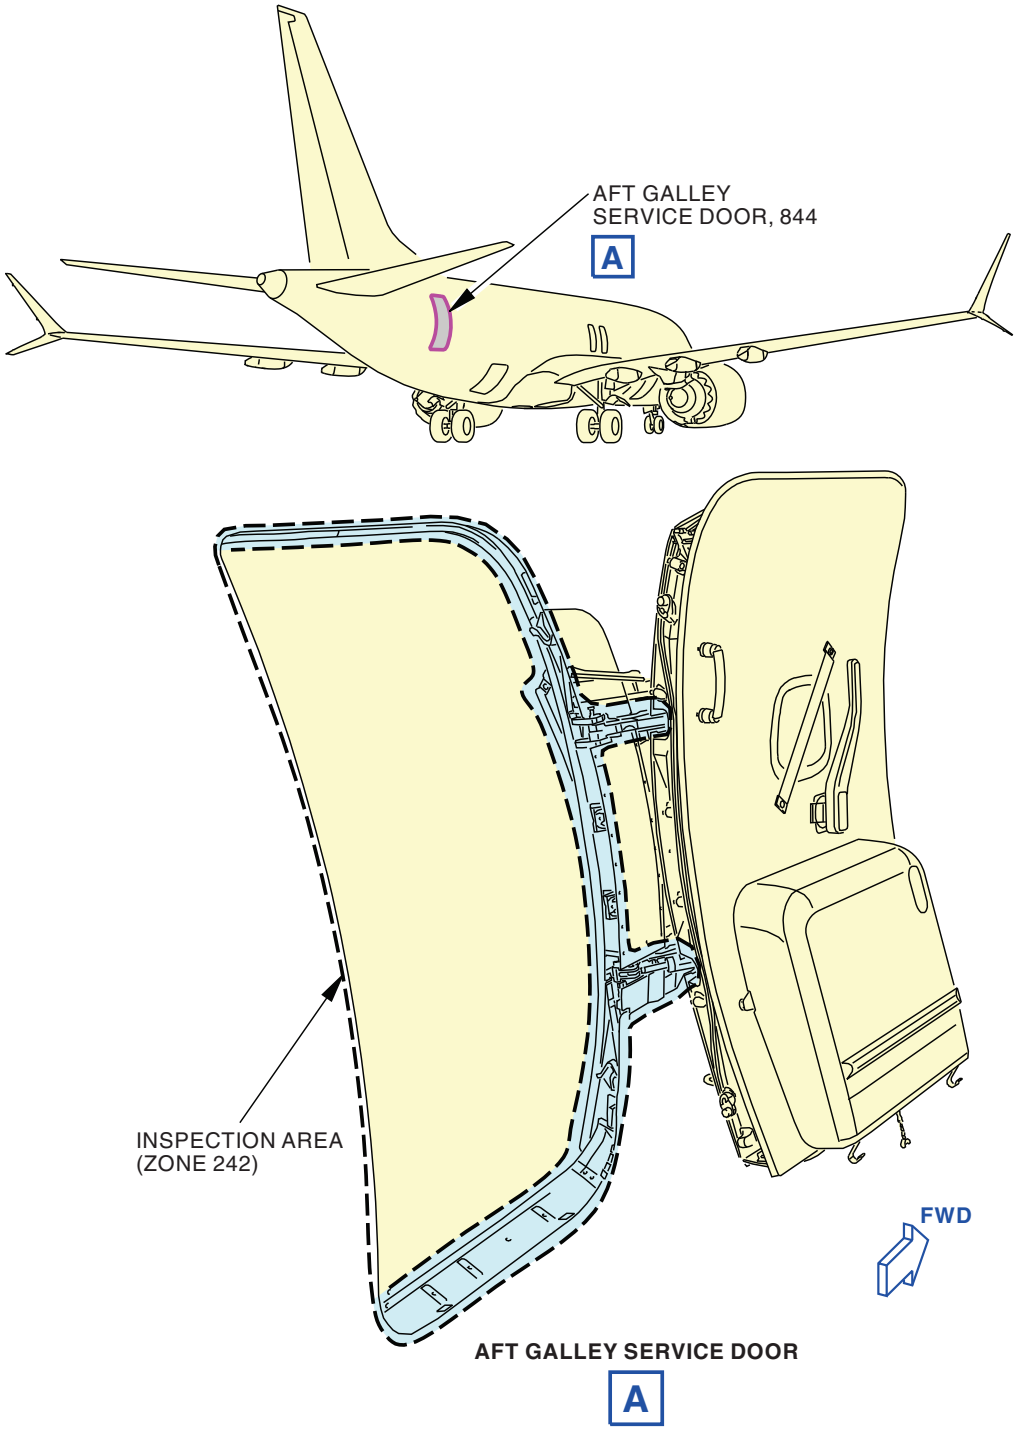

Door Stops, Latches and Hinges - Aft Galley Service Door General Visual (External)
Figure 219/05-41-02-990-818

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-801

1. EXTERNAL - ZONAL (GVI): Area Aft of the Pressure Bulkhead

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
300	Empennage
311	Area Aft of Pressure Bulkhead - Left
312	Area Aft of Pressure Bulkhead - Right
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right
315	APU Compartment - Left
316	APU Compartment - Right
317	Tail Cone Compartment - Left
318	Tail Cone Compartment - Right


B. Zonal Inspection


SUBTASK 05-41-03-210-001

(1) Perform an external zonal inspection (GVI) of the area aft of the Pressure Bulkhead, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. No access panel removal is required.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

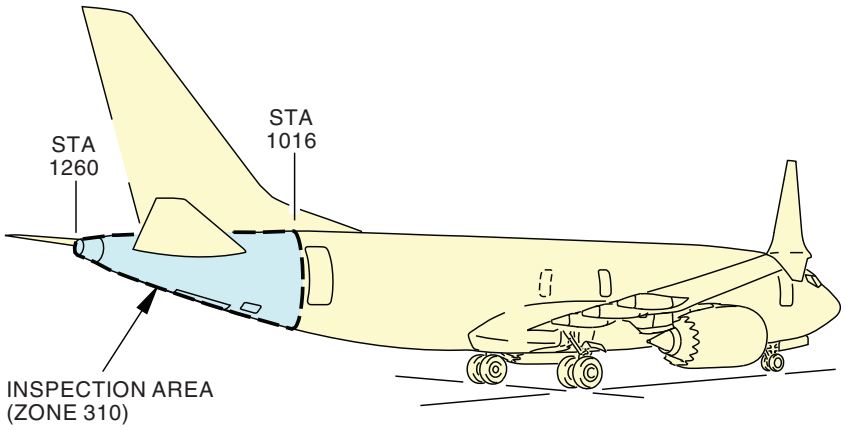

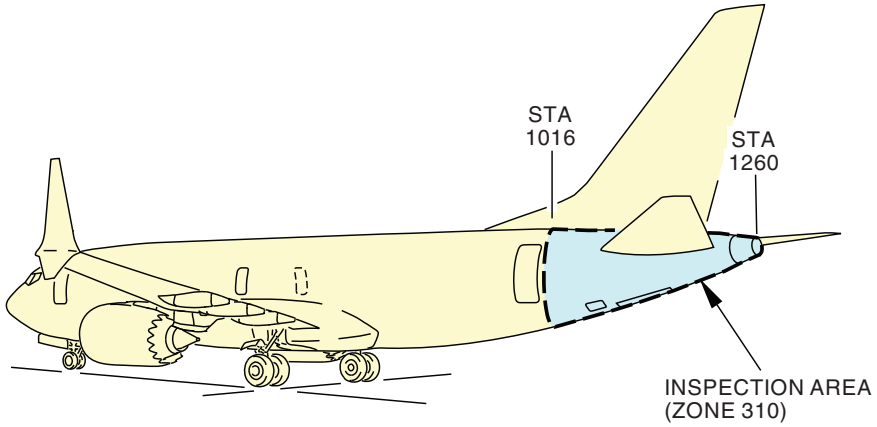

2410150 S00061525003_V2

Area Aft of Pressure Bulkhead General Visual (External)
Figure 201/05-41-03-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-802

2. INTERNAL - ZONAL (GVI): Area Aft of Pressure Bulkhead

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
311	Area Aft of Pressure Bulkhead - Left
312	Area Aft of Pressure Bulkhead - Right

D. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door

E. Zonal Inspection

SUBTASK 05-41-03-010-001

(1) Open this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

SUBTASK 05-41-03-210-002

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the area aft of Pressure Bulkhead - Section 48 - aft of aft Pressure Bulkhead to STA 1088. (EZAP)

SUBTASK 05-41-03-910-001

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-03-410-001

(5) Close this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

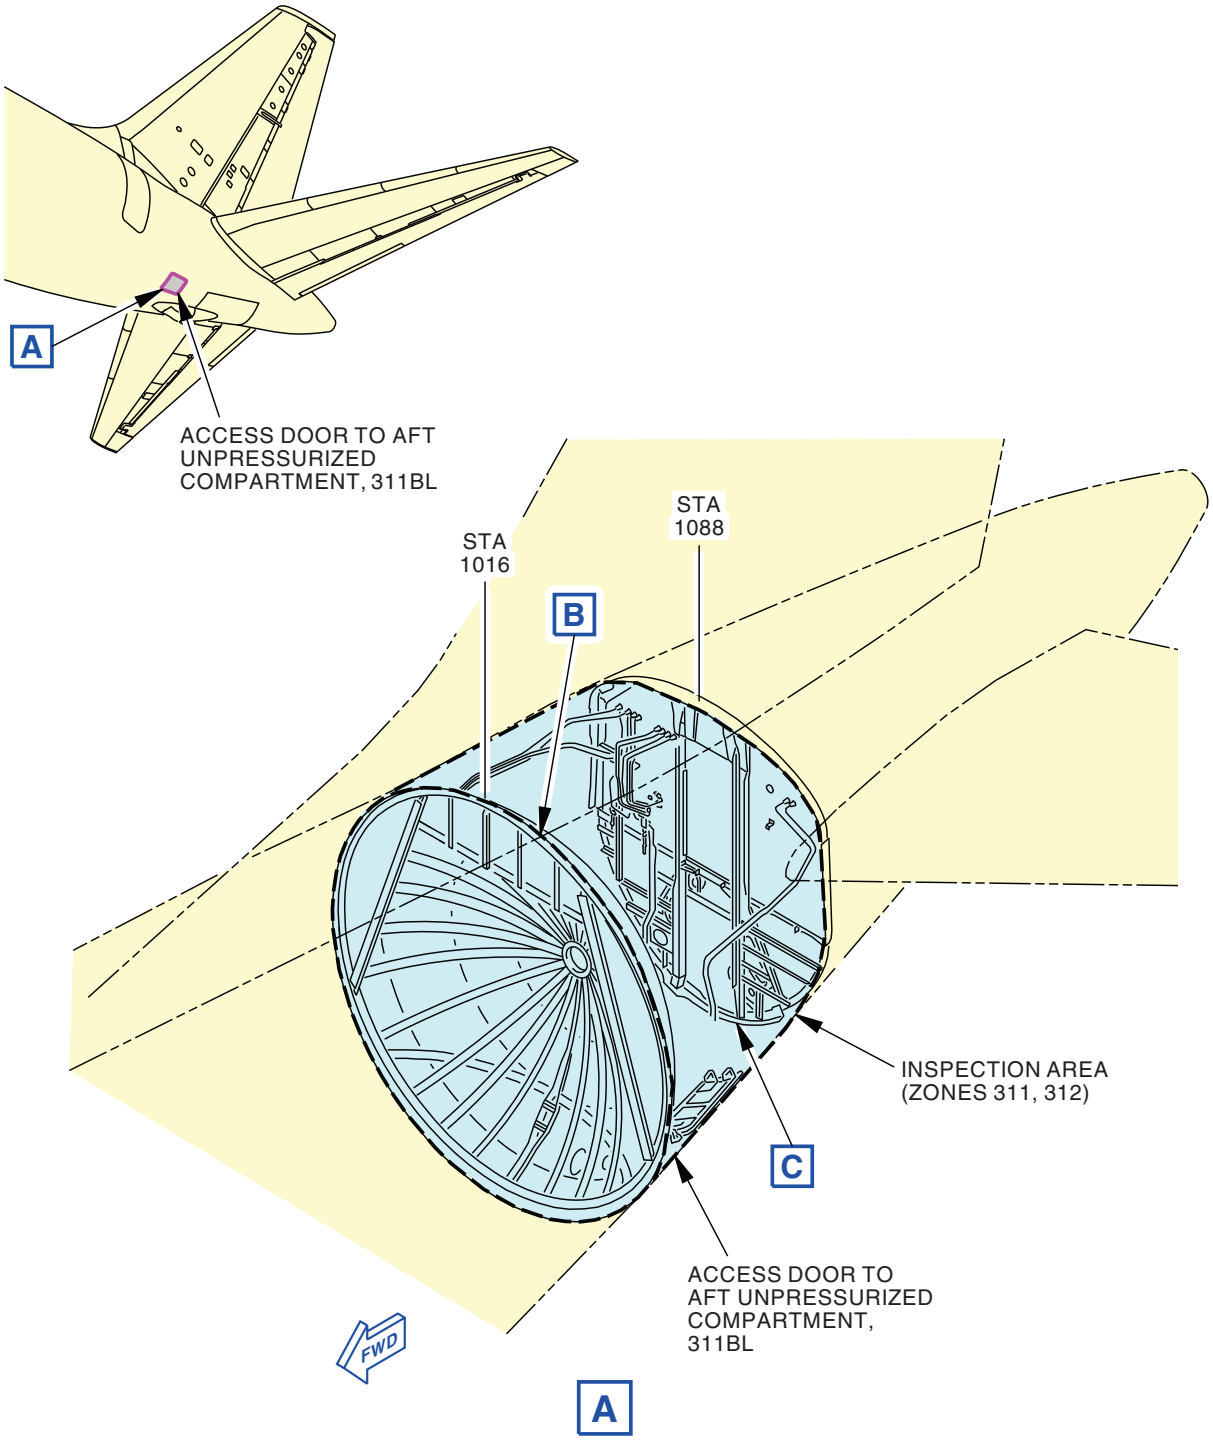

Aft Pressure Bulkhead General Visual (Internal)
Figure 202/05-41-03-990-802 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

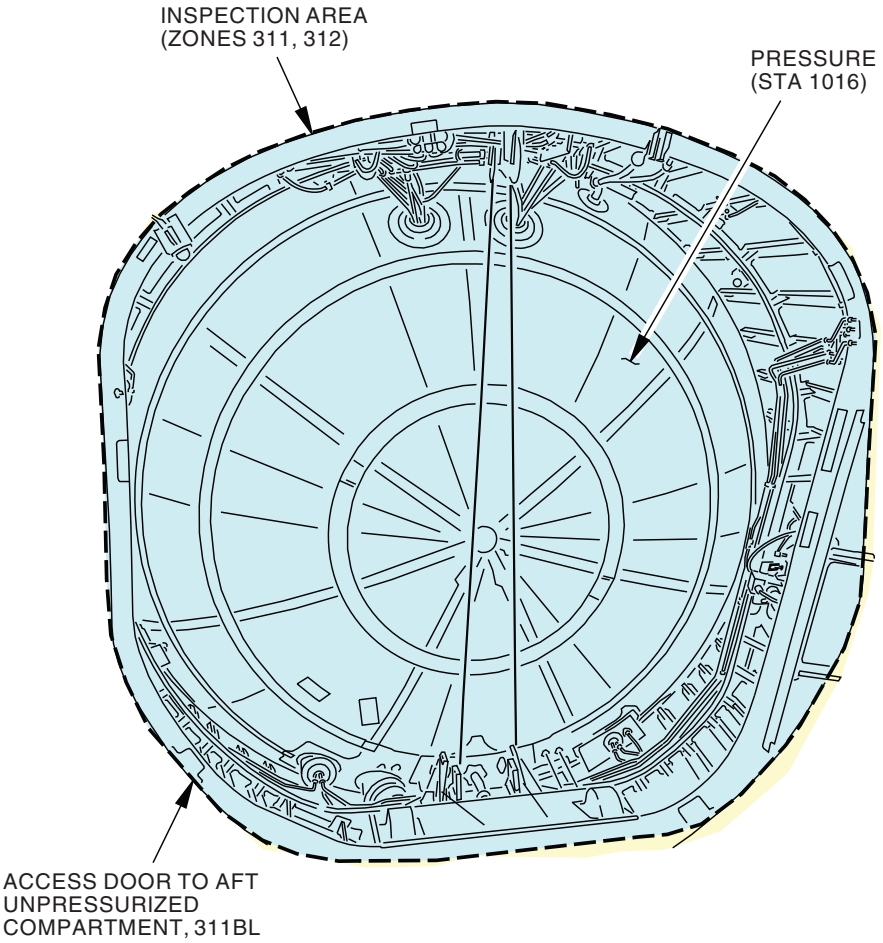


**AFT PRESSURE BULKHEAD
(VIEW IN THE FORWARD DIRECTION)**

B

2410152 S00061525006_V1

**Aft Pressure Bulkhead General Visual (Internal)
Figure 202/05-41-03-990-802 (Sheet 2 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

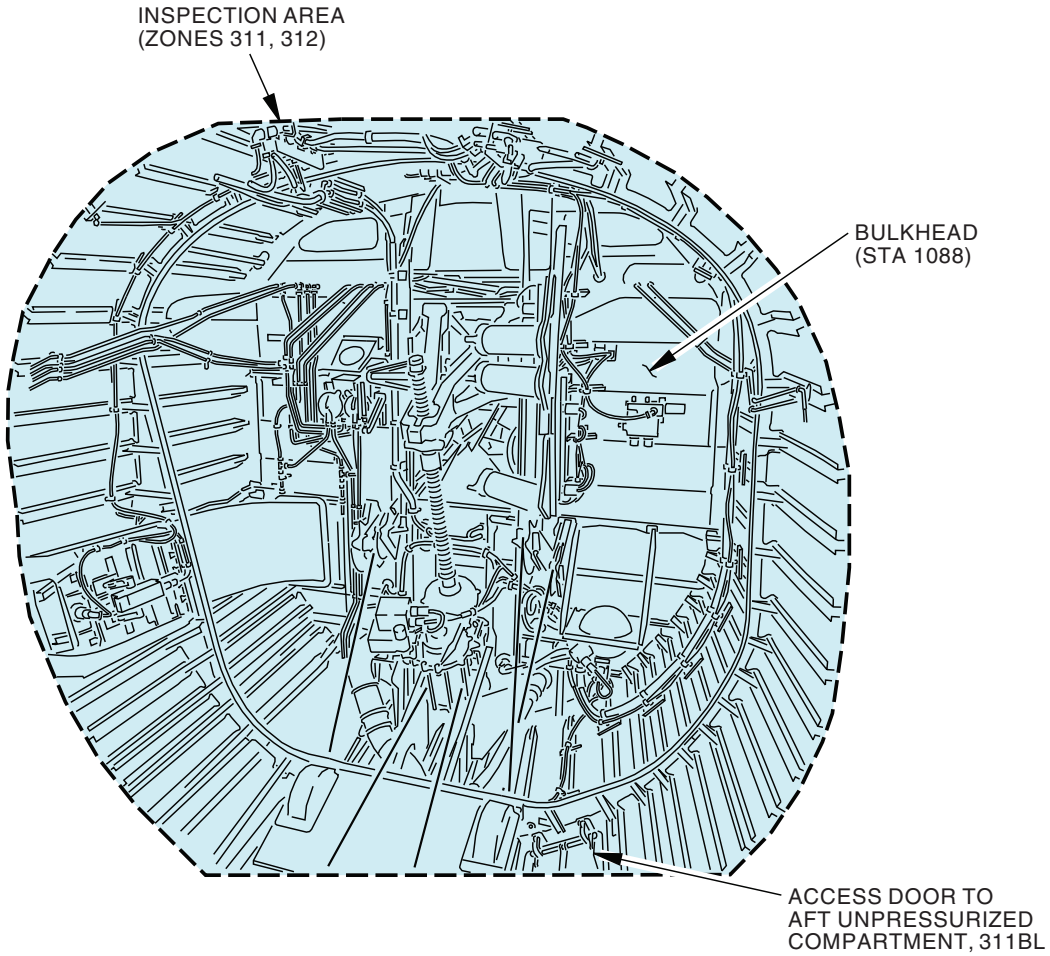

AFT PRESSURE BULKHEAD
(VIEW IN THE AFT DIRECTION)

C

2410153 S00061525007_V1

Aft Pressure Bulkhead General Visual (Internal)
Figure 202/05-41-03-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-830

3. EXTERNAL - ZONAL (GVI): Area Aft of Pressure Bulkhead

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
311	Area Aft of Pressure Bulkhead - Left
312	Area Aft of Pressure Bulkhead - Right


B. Zonal Inspection

SUBTASK 05-41-03-210-030

(1) Perform an external zonal inspection (GVI) of the area aft of the Pressure Bulkhead.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

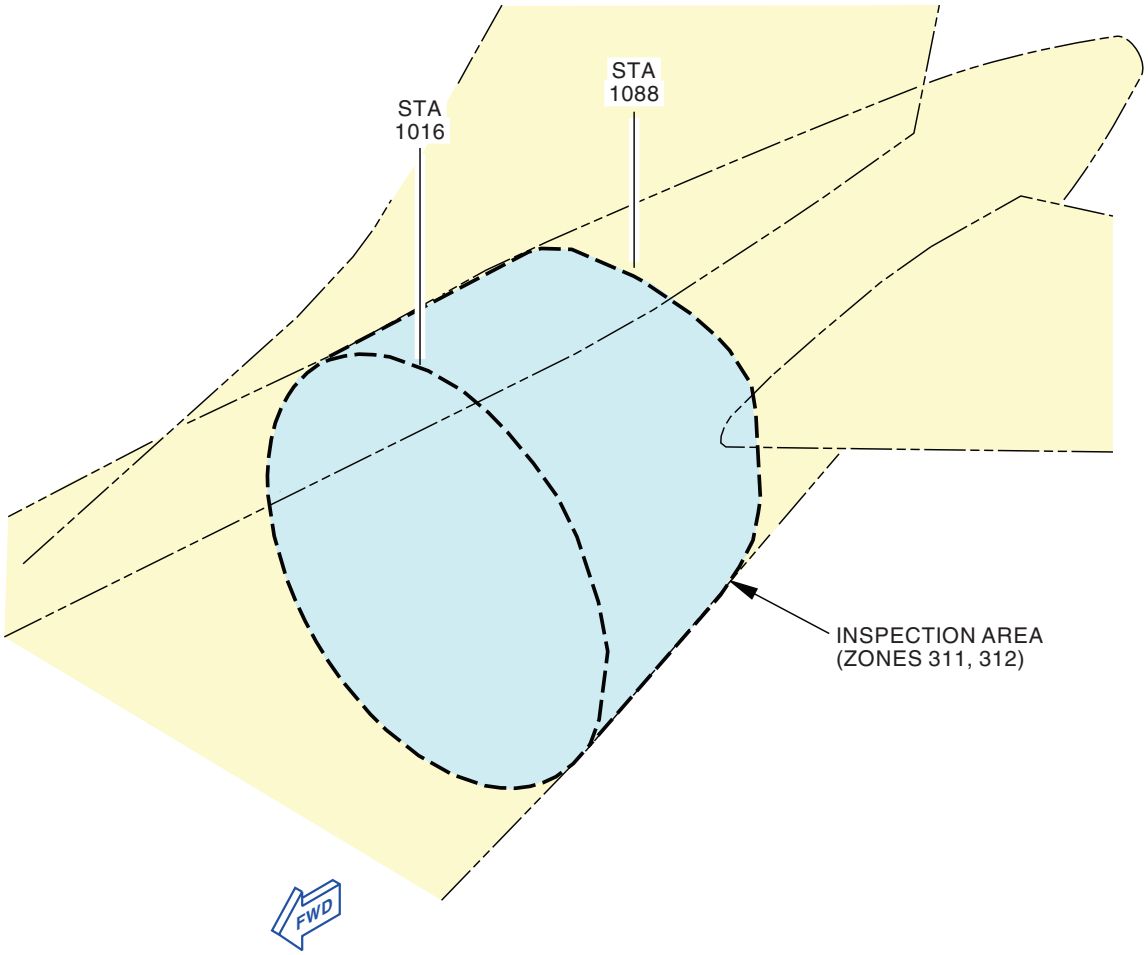

2545857 S0000601535_V1

Area Aft of Pressure Bulkhead General Visual (External)
Figure 203/05-41-03-990-830

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-803

4. INTERNAL - ZONAL (GVI): Stabilizer Torsion Box Compartment

(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

D. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door

E. Zonal Inspection

SUBTASK 05-41-03-010-002

(1) Open this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

SUBTASK 05-41-03-210-003

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Stabilizer Torsion Box Compartment - Section 48, Sta 1088 to Sta 1156. (EZAP)

SUBTASK 05-41-03-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-03-410-002

(5) Close this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

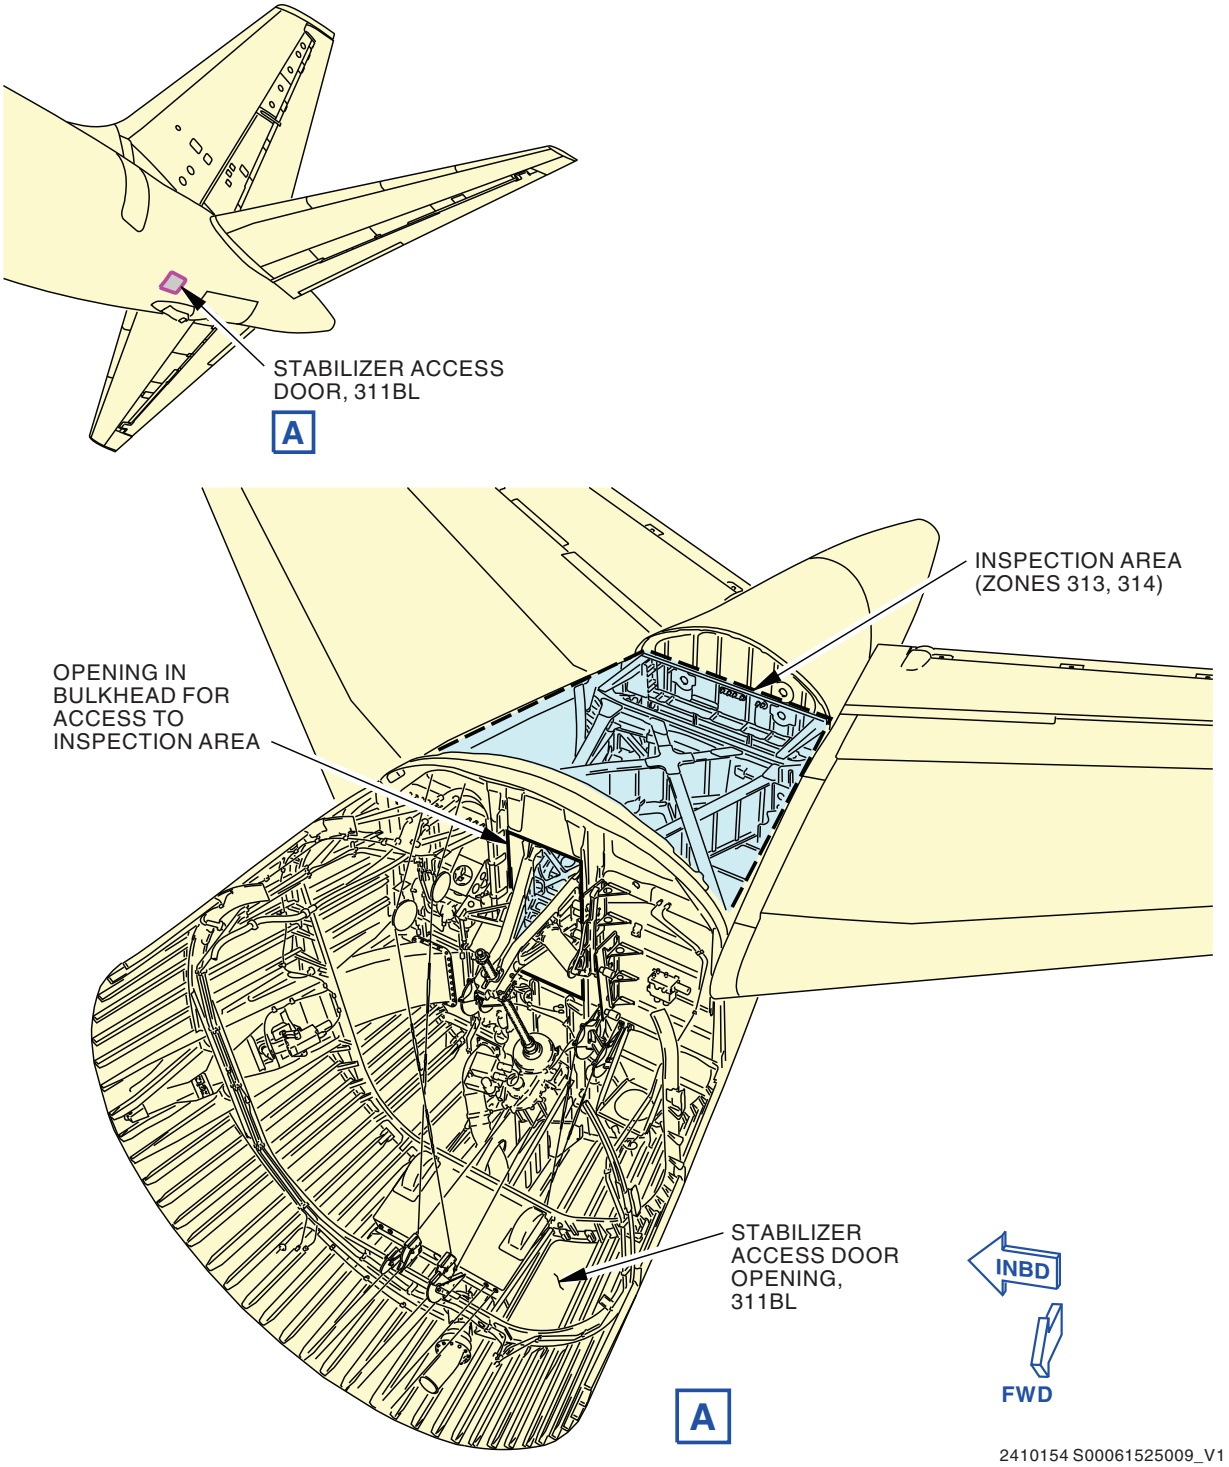

Stabilizer Torsion Box Compartment General Visual (Internal)
Figure 204/05-41-03-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-831

5. EXTERNAL - ZONAL (GVI): Stabilizer Torsion Box Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-03-210-031

(1) Perform an external zonal inspection (GVI) of the Stabilizer Torsion Box Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

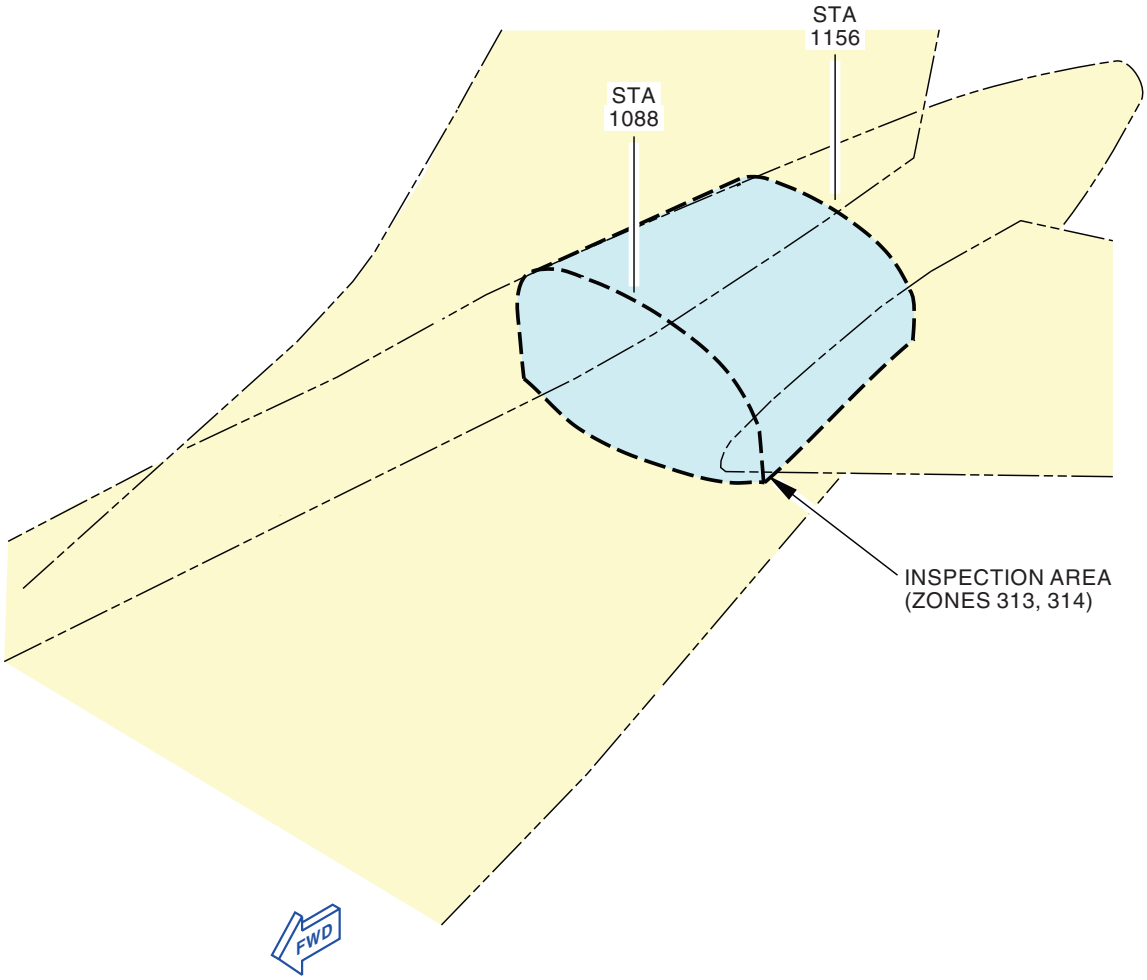

2545860 S0000601536_V3

Stabilizer Torsion Box Compartment General Visual (External)
Figure 205/05-41-03-990-831

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-804

6. INTERNAL - ZONAL (GVI): APU Compartment

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
315	APU Compartment - Left
316	APU Compartment - Right

D. Access Panels

Number	Name/Location
315A	APU Cowl Door

E. Zonal Inspection

SUBTASK 05-41-03-010-003

(1) Open this access panel:

Number	Name/Location
315A	APU Cowl Door

SUBTASK 05-41-03-210-004

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the APU compartment - Section 48, Sta 1088 to Sta 1156. (EZAP)

SUBTASK 05-41-03-910-003

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-03-410-003

(5) Close this access panel:

Number	Name/Location
315A	APU Cowl Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

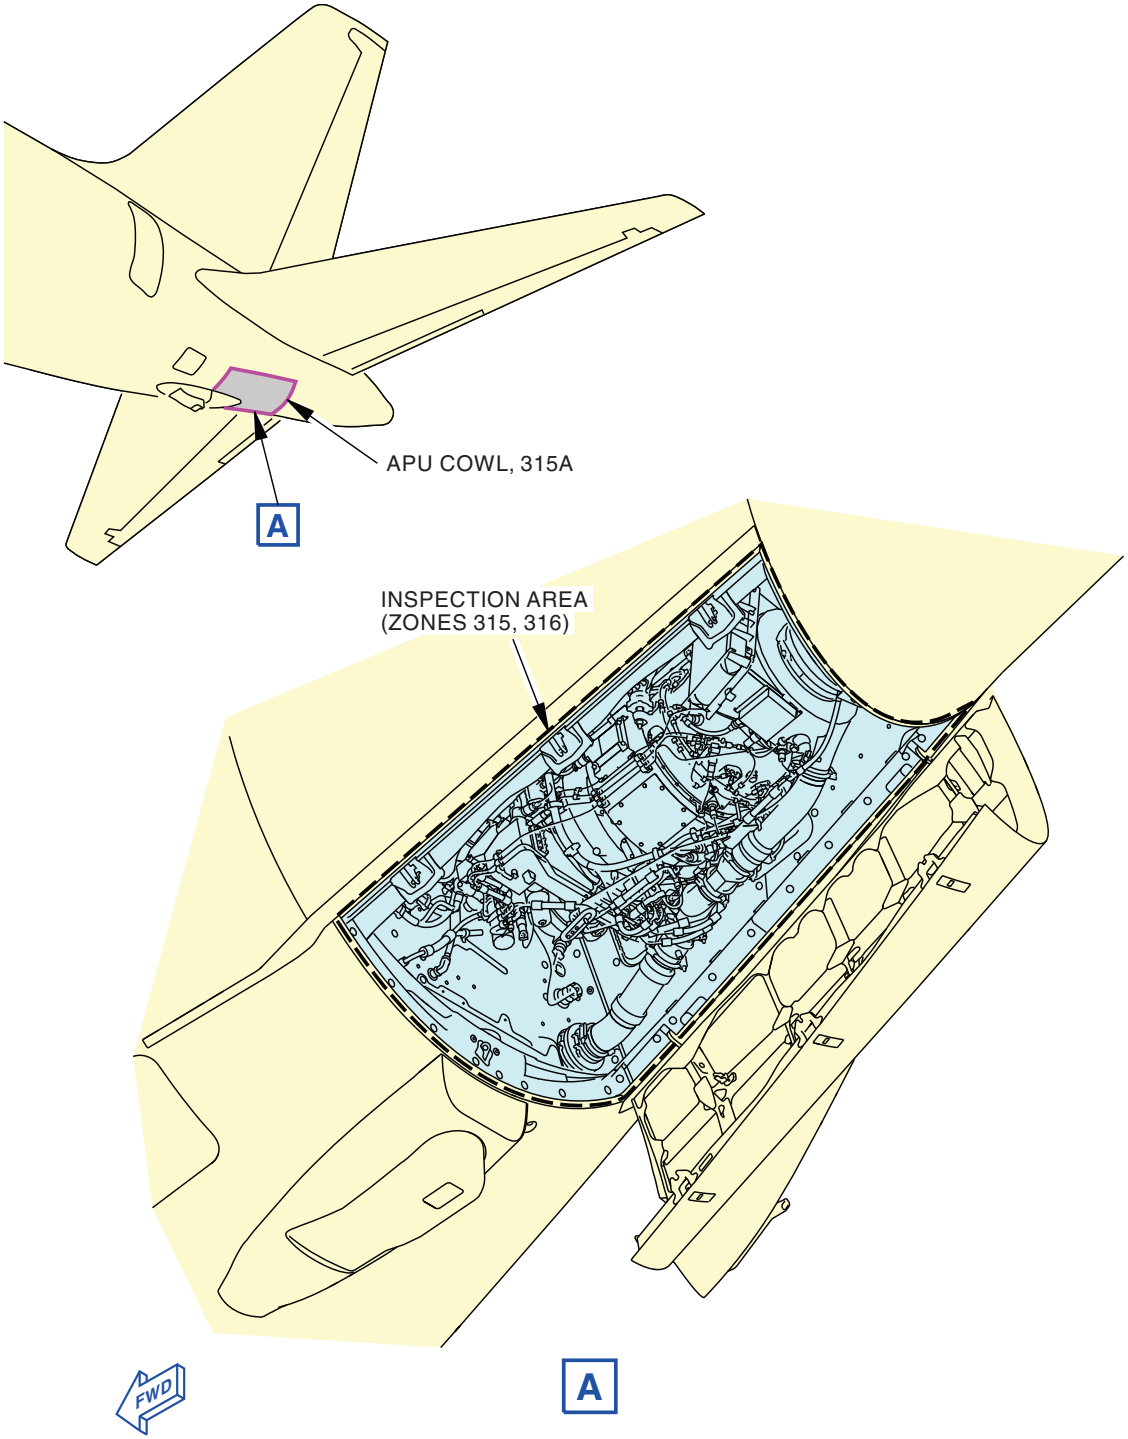

2410155 S00061525011_V1

APU Compartment - General Visual (Internal)
Figure 206/05-41-03-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-832

7. EXTERNAL - ZONAL (GVI): APU Compartment

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
315	APU Compartment - Left
316	APU Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-03-210-032

(1) Perform an external zonal inspection (GVI) of the APU Compartment.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

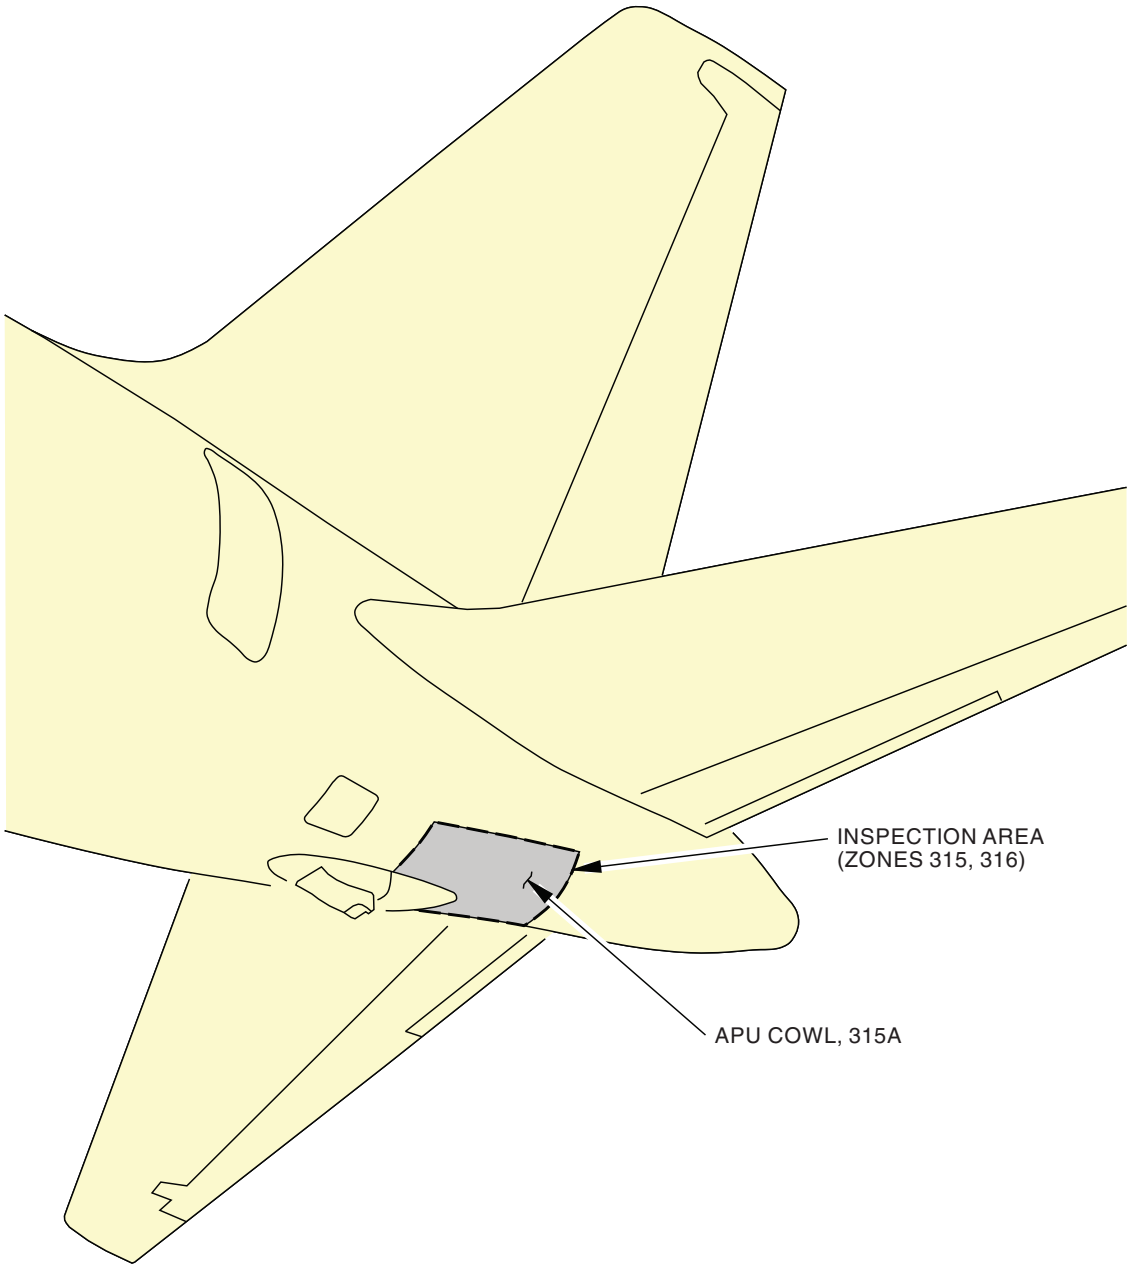

2545969 S0000601537_V1

APU Compartment General Visual (External)
Figure 207/05-41-03-990-832

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-805

8. INTERNAL - ZONAL (GVI): Tail Cone

(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
317	Tail Cone Compartment - Left
318	Tail Cone Compartment - Right

D. Access Panels

Number	Name/Location
318BR	Tailcone Access Door

E. Zonal Inspection

SUBTASK 05-41-03-010-004

(1) Open this access panel:

Number	Name/Location
318BR	Tailcone Access Door

SUBTASK 05-41-03-210-005

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Tail Cone - Section 48, Sta 1156 to Sta 1217. (EZAP)

SUBTASK 05-41-03-910-004

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-03-410-004

(5) Close this access panel:

Number	Name/Location
318BR	Tailcone Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

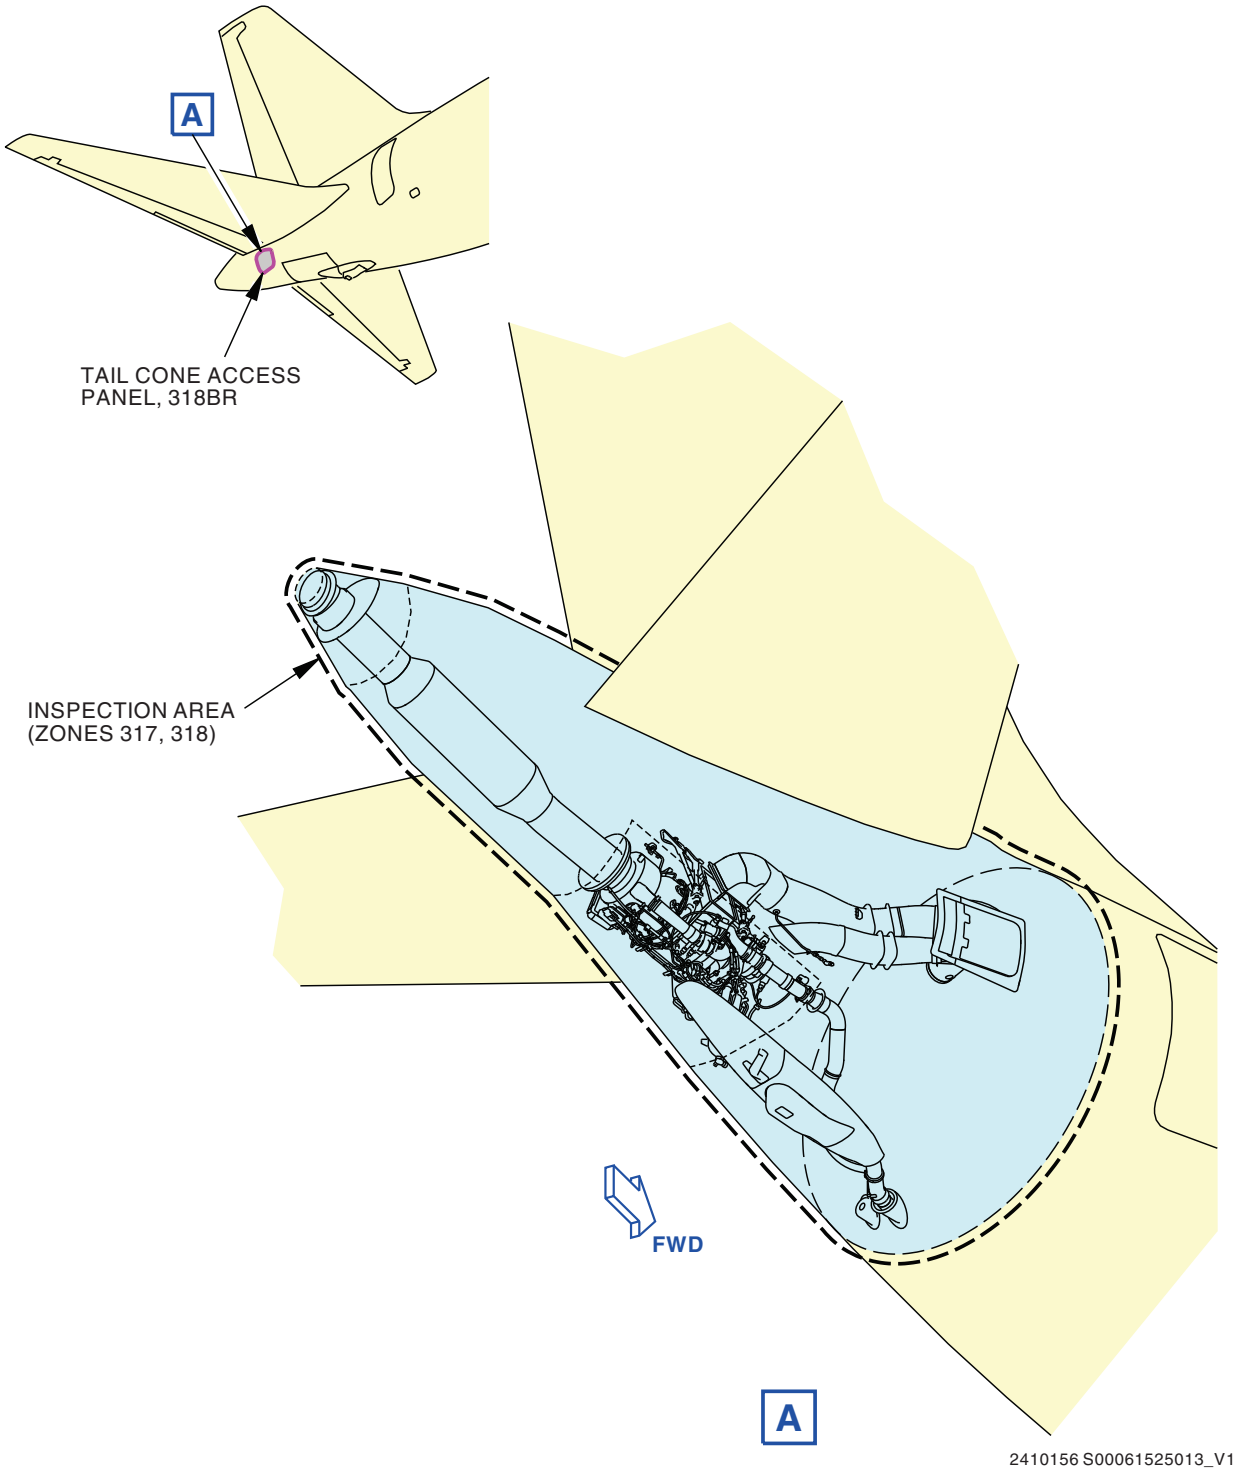

Tail Cone - General Visual (Internal)
Figure 208/05-41-03-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-833

9. EXTERNAL - ZONAL (GVI): Tail Cone

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
317	Tail Cone Compartment - Left
318	Tail Cone Compartment - Right


B. Zonal Inspection

SUBTASK 05-41-03-210-033

(1) Perform an external zonal inspection (GVI) of the Tail Cone.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

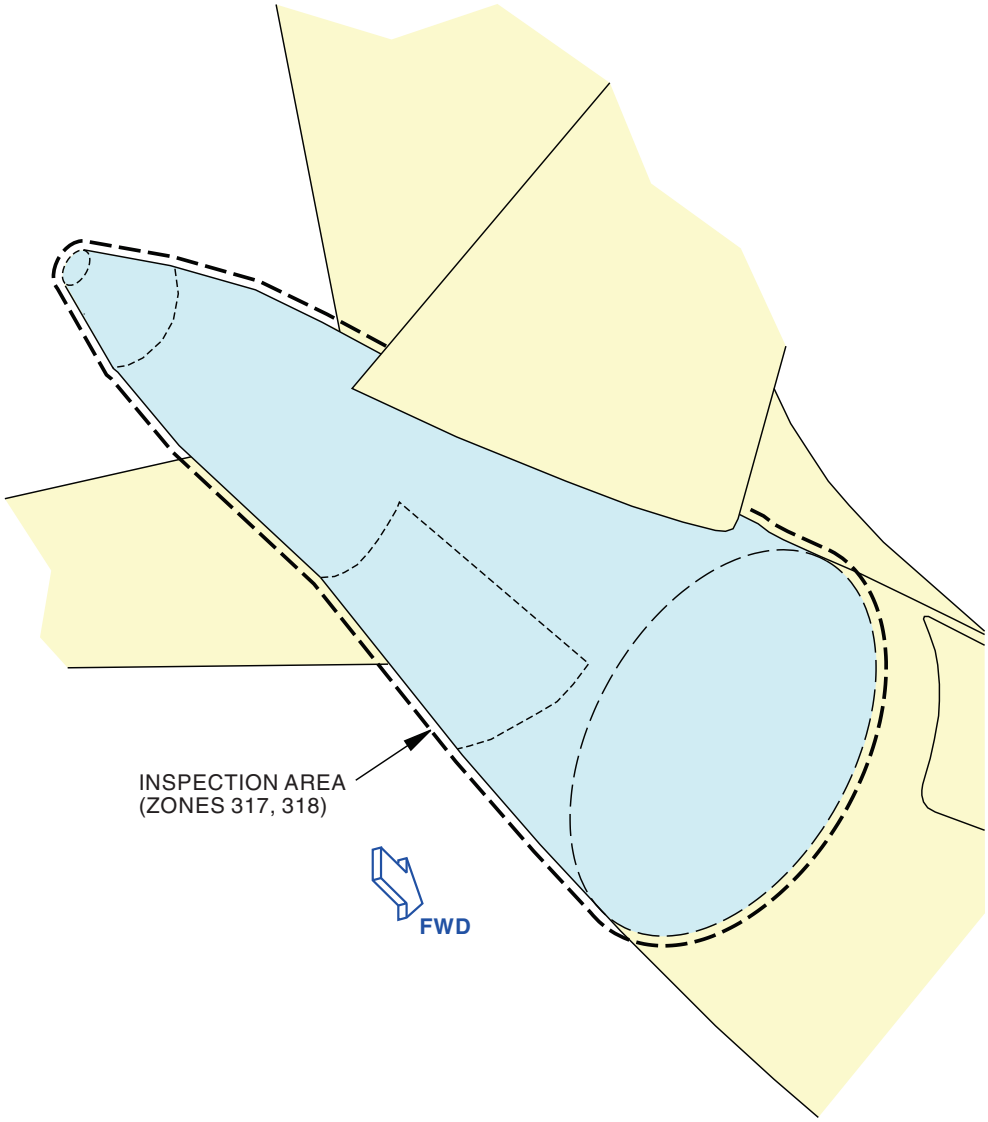

2545977 S0000601538_V1

Tail Cone - General Visual (External)
Figure 209/05-41-03-990-833

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-806

10. EXTERNAL - ZONAL (GVI): Vertical Fin and Horizontal Stabilizer

(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
300	Empennage
321	Vertical Fin - Dorsal Fin
322	Vertical Fin - Removable Fin Leading Edge
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge
325	Vertical Fin - Rudder
326	Vertical Fin - Fin Tip
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
335	Left Horizontal Stabilizer - Tip
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator
345	Right Horizontal Stabilizer - Tip


B. Zonal Inspection

SUBTASK 05-41-03-210-006

(1) Perform an external zonal inspection (GVI) of the Vertical Fin and Horizontal Stabilizer, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. No access panel removal is required.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

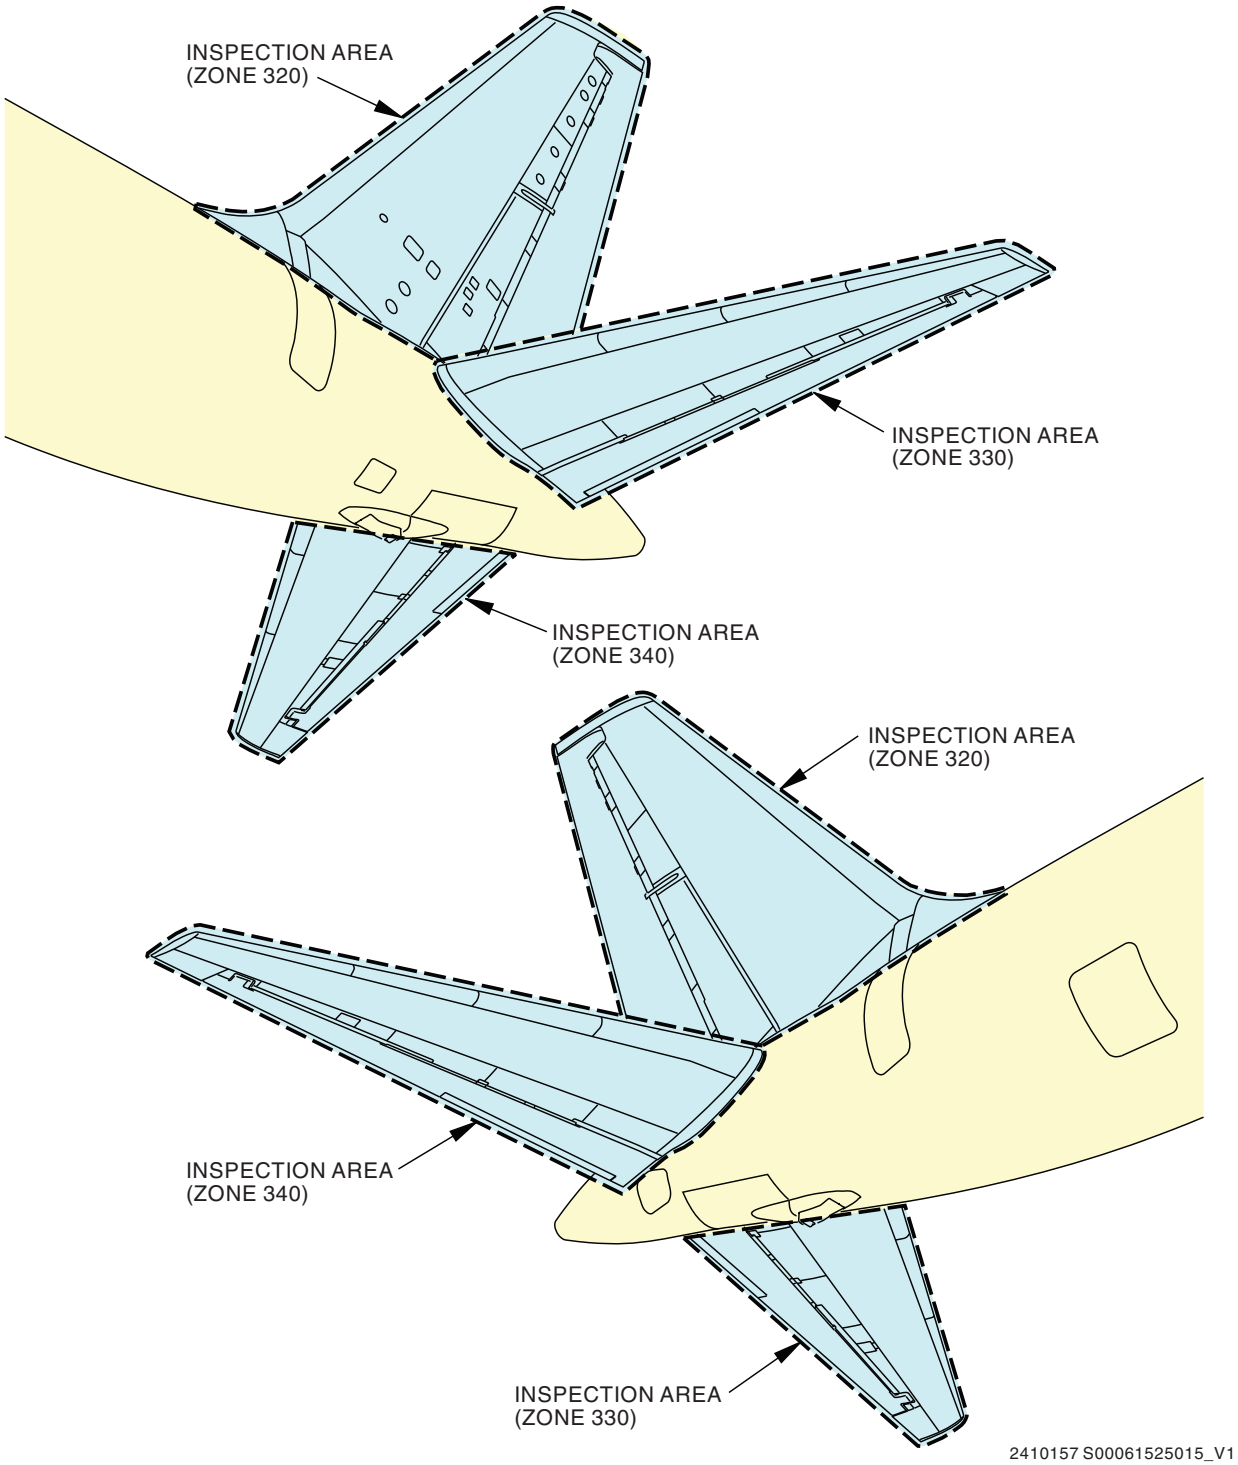

Vertical Fin and Horizontal Stabilizer General Visual (External)
Figure 210/05-41-03-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-807

11. EXTERNAL - ZONAL (GVI): Vertical Fin - Dorsal Fin

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
321	Vertical Fin - Dorsal Fin


B. Zonal Inspection

SUBTASK 05-41-03-210-007

(1) Perform an external zonal inspection (GVI) of the Vertical Fin - Dorsal Fin.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

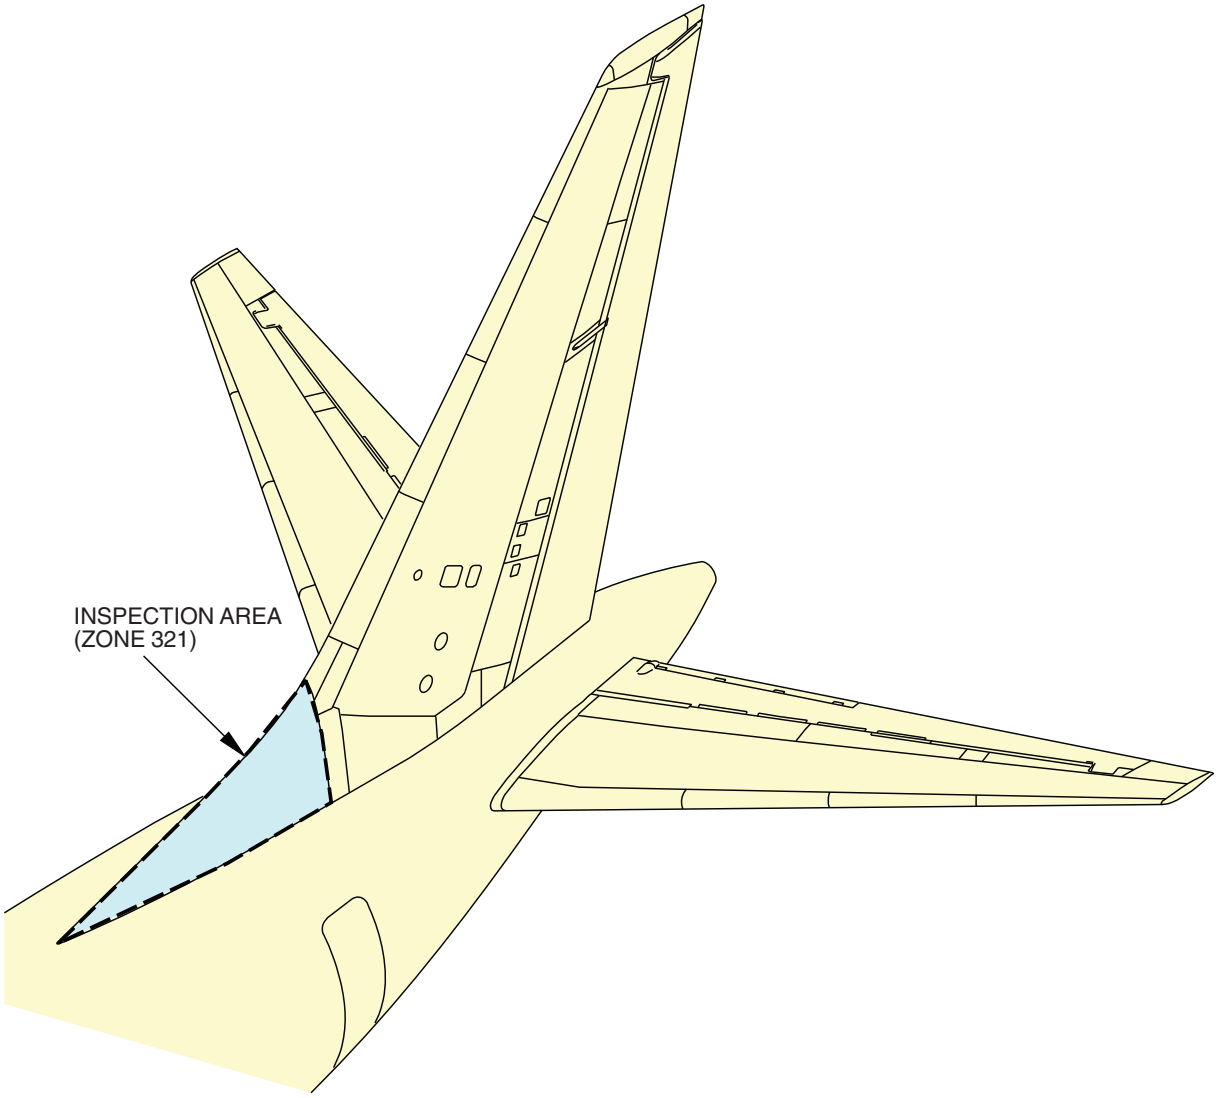

2410158 S00061525017_V2

Dorsal Fin - Vertical Fin General Visual (External)
Figure 211/05-41-03-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-834

12. INTERNAL - ZONAL (GVI): Vertical Fin - Dorsal Fin

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
321	Vertical Fin - Dorsal Fin

B. Access Panels

Number	Name/Location
321A	Vertical Fin, Dorsal Fin

C. Zonal Inspection

SUBTASK 05-41-03-010-013

(1) Open this access panel:

Number	Name/Location
321A	Vertical Fin, Dorsal Fin

SUBTASK 05-41-03-210-034

(2) Perform an internal zonal inspection (GVI) of the Vertical Fin - Dorsal Fin.


SUBTASK 05-41-03-410-013

(3) Close this access panel:

Number	Name/Location
321A	Vertical Fin, Dorsal Fin

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

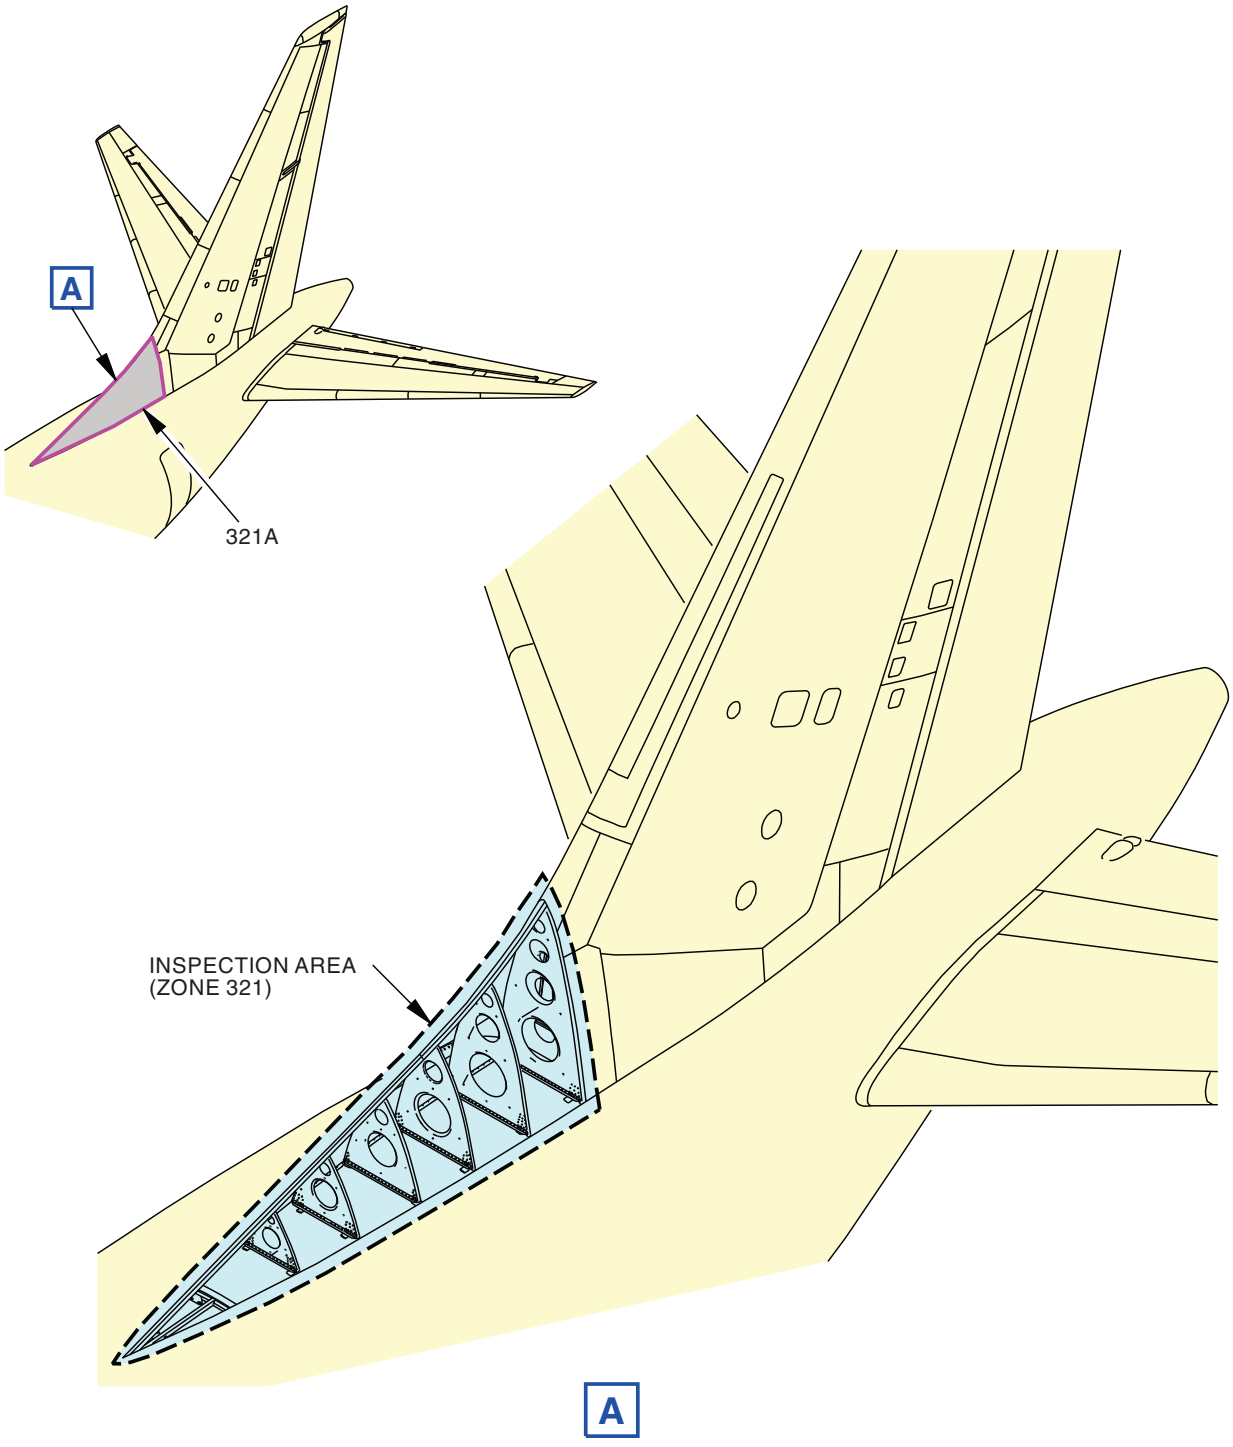

Dorsal Fin - Vertical Fin General Visual (Internal)
Figure 212/05-41-03-990-834

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-808

13. EXTERNAL - ZONAL (GVI): Vertical Fin - Leading Edge

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge


B. Zonal Inspection

SUBTASK 05-41-03-210-008

(1) Perform an external zonal inspection (GVI) of the Vertical Fin - Leading Edge.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

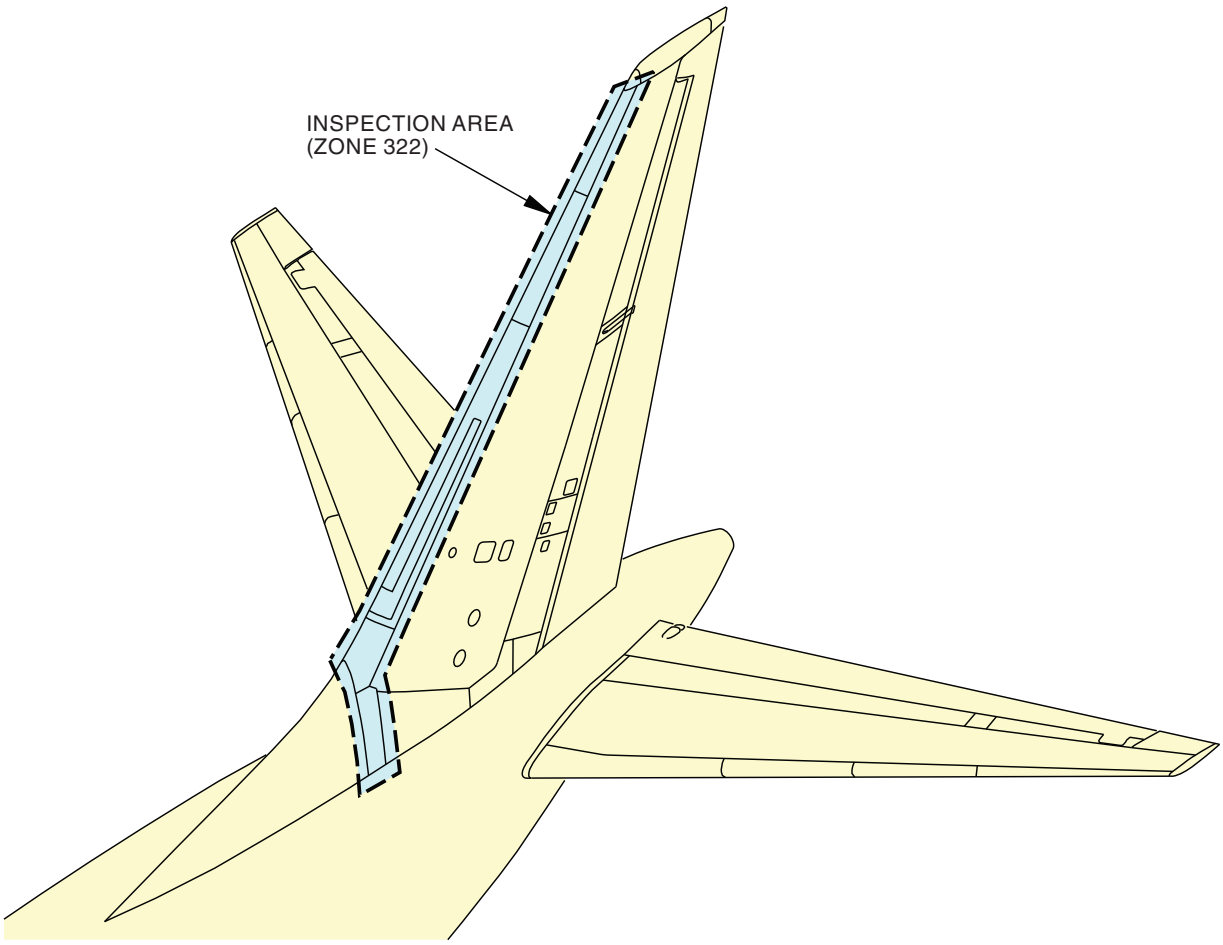

2410159 S00061525019_V1

Leading Edge - Vertical Fin General Visual (External)
Figure 213/05-41-03-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-809

14. INTERNAL - ZONAL (GVI): Vertical Fin - Leading Edge

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

B. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

C. Access Panels

Number	Name/Location
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

D. Zonal Inspection

SUBTASK 05-41-03-010-005

(1) Open these access panels:

Number	Name/Location
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

SUBTASK 05-41-03-210-009

(2) Perform an internal zonal inspection (GVI) of the Vertical Fin - Leading Edge.

SUBTASK 05-41-03-410-005

(3) Close these access panels:


Number	Name/Location
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

SUBTASK 05-41-03-390-001

(4) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

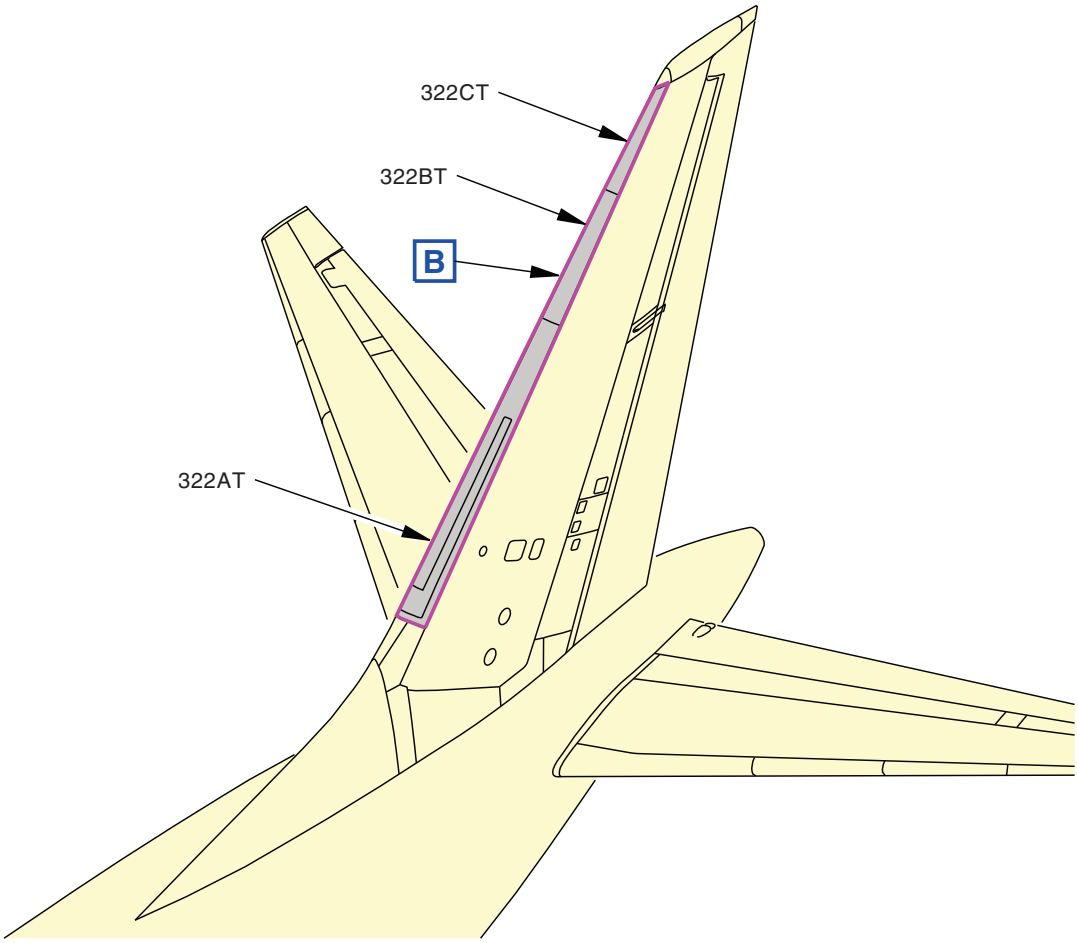

2410160 S00061525021_V3

Leading Edge - Vertical Fin General Visual (Internal)
Figure 214/05-41-03-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

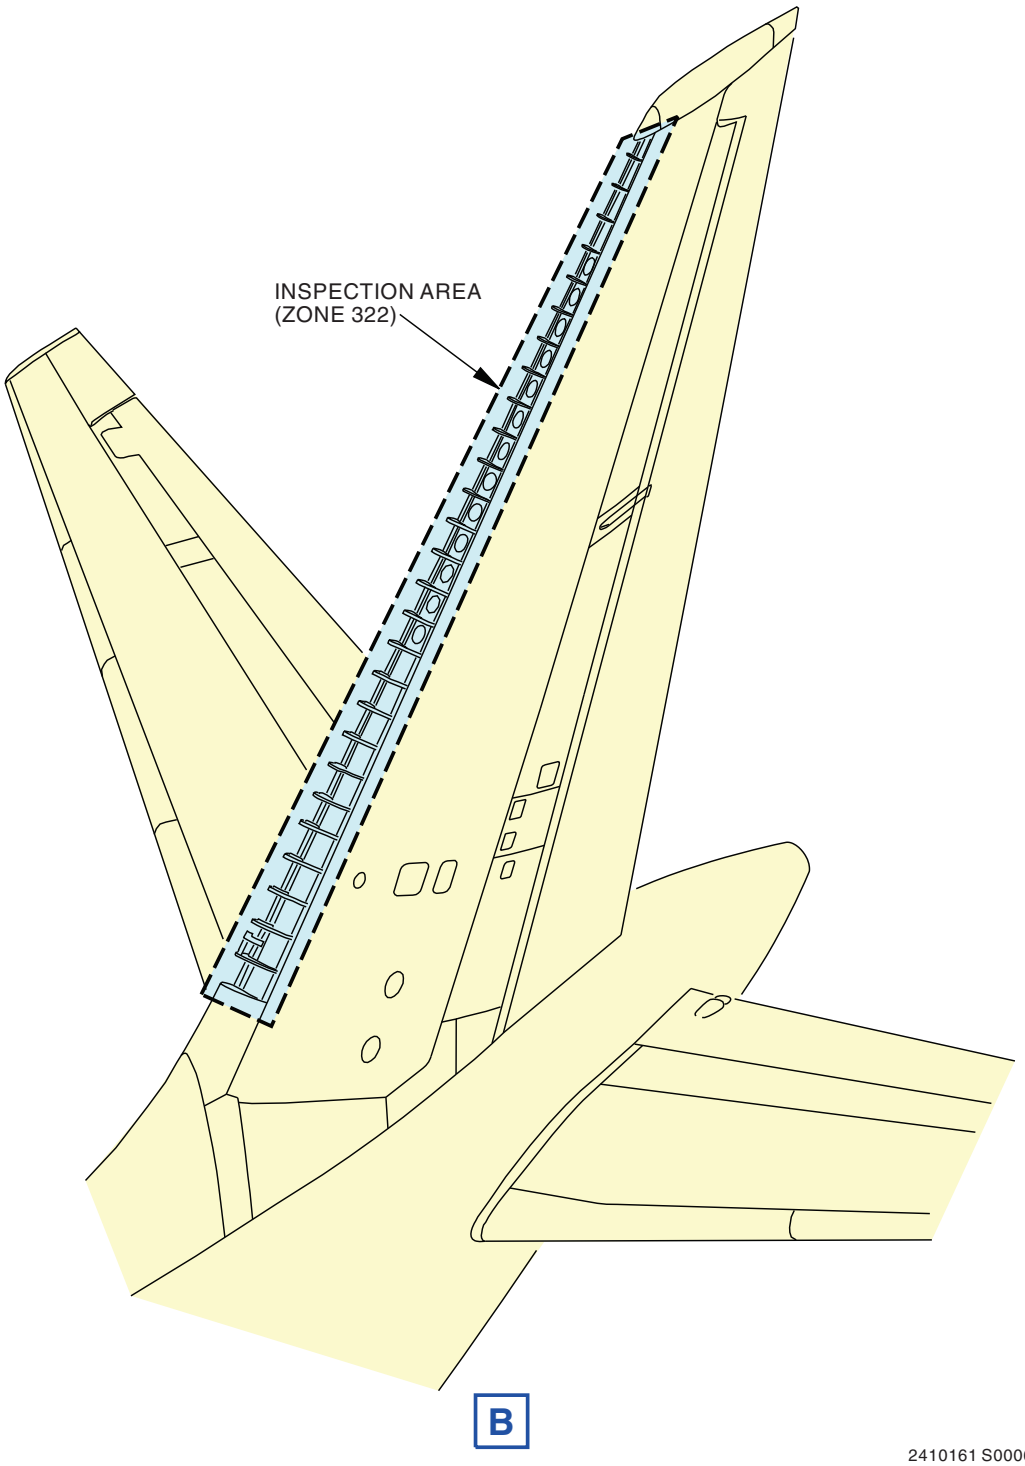

2410161 S00061525022_V2

Leading Edge - Vertical Fin General Visual (Internal)
Figure 214/05-41-03-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-840

15. INTERNAL - ZONAL (GVI): Vertical Fin - Leading Edge, HF Antenna Area

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

B. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

C. Access Panels

Number	Name/Location
322AL	Vertical Fin, Fixed Leading Edge

D. Zonal Inspection

SUBTASK 05-41-03-040-001

WARNING REMOVE THE ELECTRICAL POWER FROM EACH HF COMMUNICATION SYSTEM BEFORE YOU REMOVE THE LEADING EDGE SECTIONS. HF SIGNALS CAN CAUSE ELECTRICAL SHOCKS AND INJURY TO PERSONS.

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

SUBTASK 05-41-03-010-012

(2) Open this access panel:

Number	Name/Location
322AL	Vertical Fin, Fixed Leading Edge

SUBTASK 05-41-03-210-040

(3) Perform an internal zonal inspection (GVI) of the Vertical Fin - Leading Edge, HF Antenna area.

SUBTASK 05-41-03-410-012

(4) Close this access panel:

Number	Name/Location
322AL	Vertical Fin, Fixed Leading Edge

SUBTASK 05-41-03-390-002

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-03-860-001

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2


Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

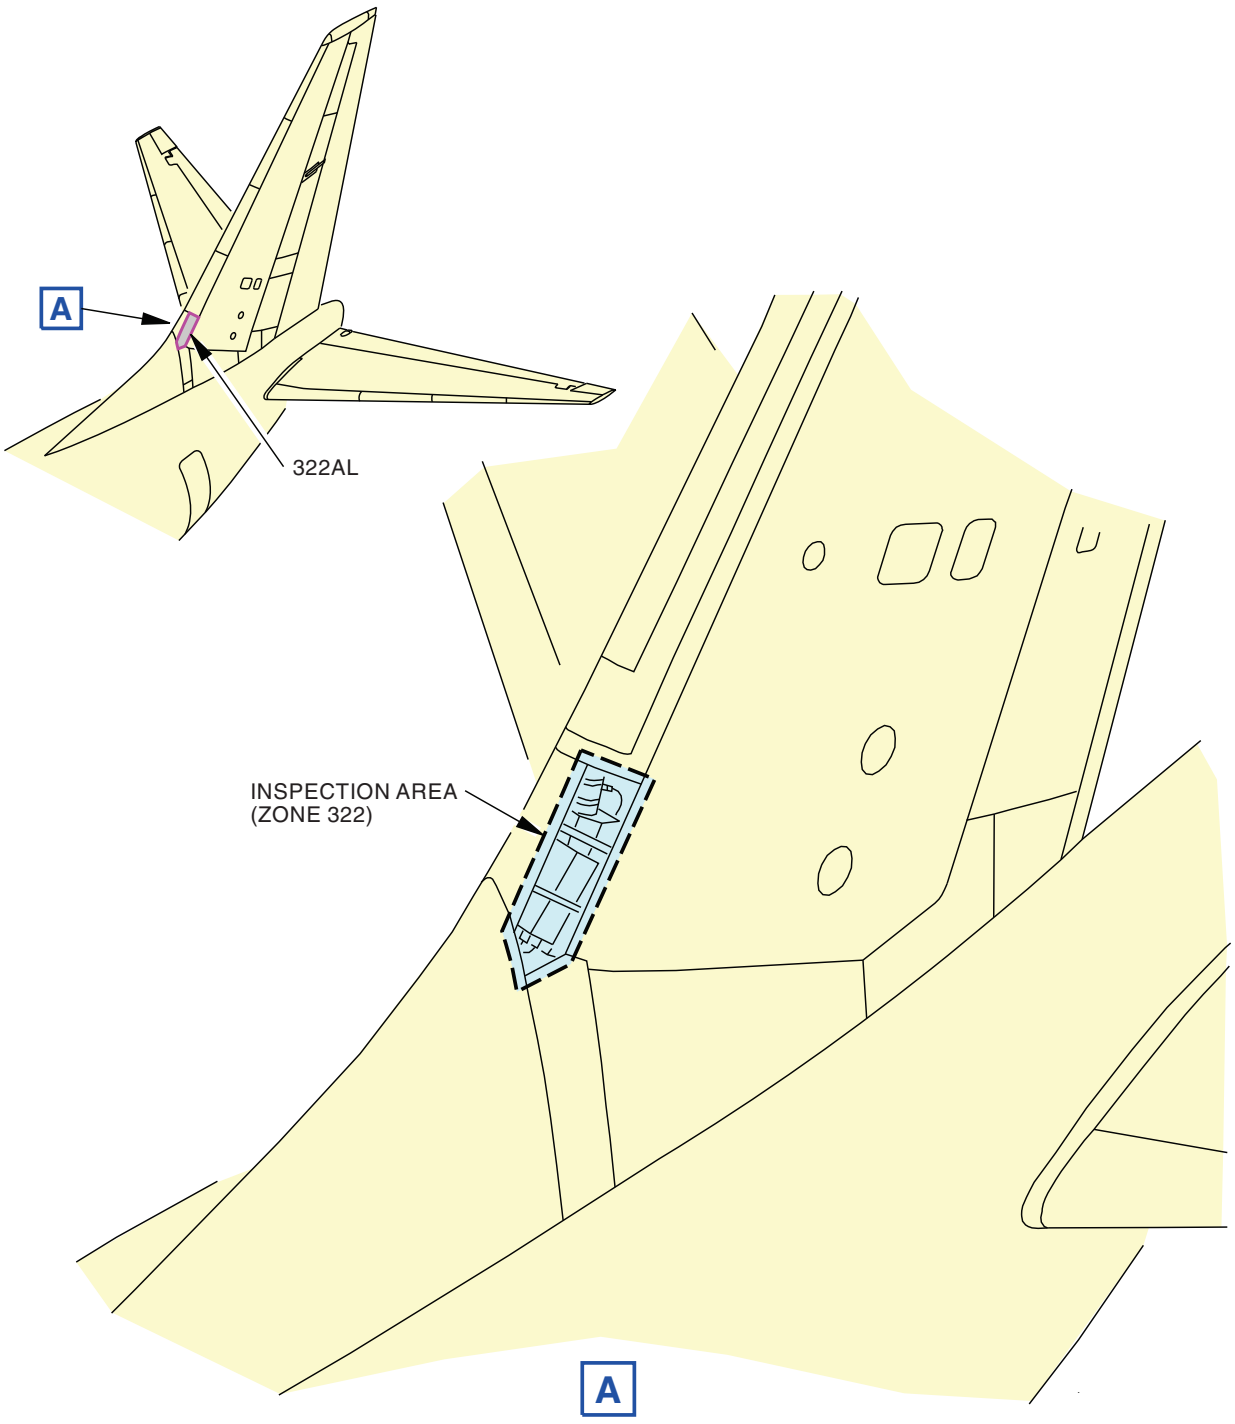

Leading Edge HF Antenna Area - Vertical Fin General Visual (Internal)
Figure 215/05-41-03-990-840

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-810

16. INTERNAL - ZONAL (GVI): Vertical Fin - Front Spar to Rear Spar

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

D. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar

E. Access Panels

Number	Name/Location
323AL	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access

F. Zonal Inspection

SUBTASK 05-41-03-010-006

(1) Open these access panels:

Number	Name/Location
323AL	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access

SUBTASK 05-41-03-210-010

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(3) Perform an internal zonal inspection (GVI) of the Vertical Fin - Front Spar to Rear Spar. (EZAP)

SUBTASK 05-41-03-910-005

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-03-410-006

(5) Close these access panels:


Number	Name/Location
323AL	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access

SUBTASK 05-41-03-390-003

(6) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

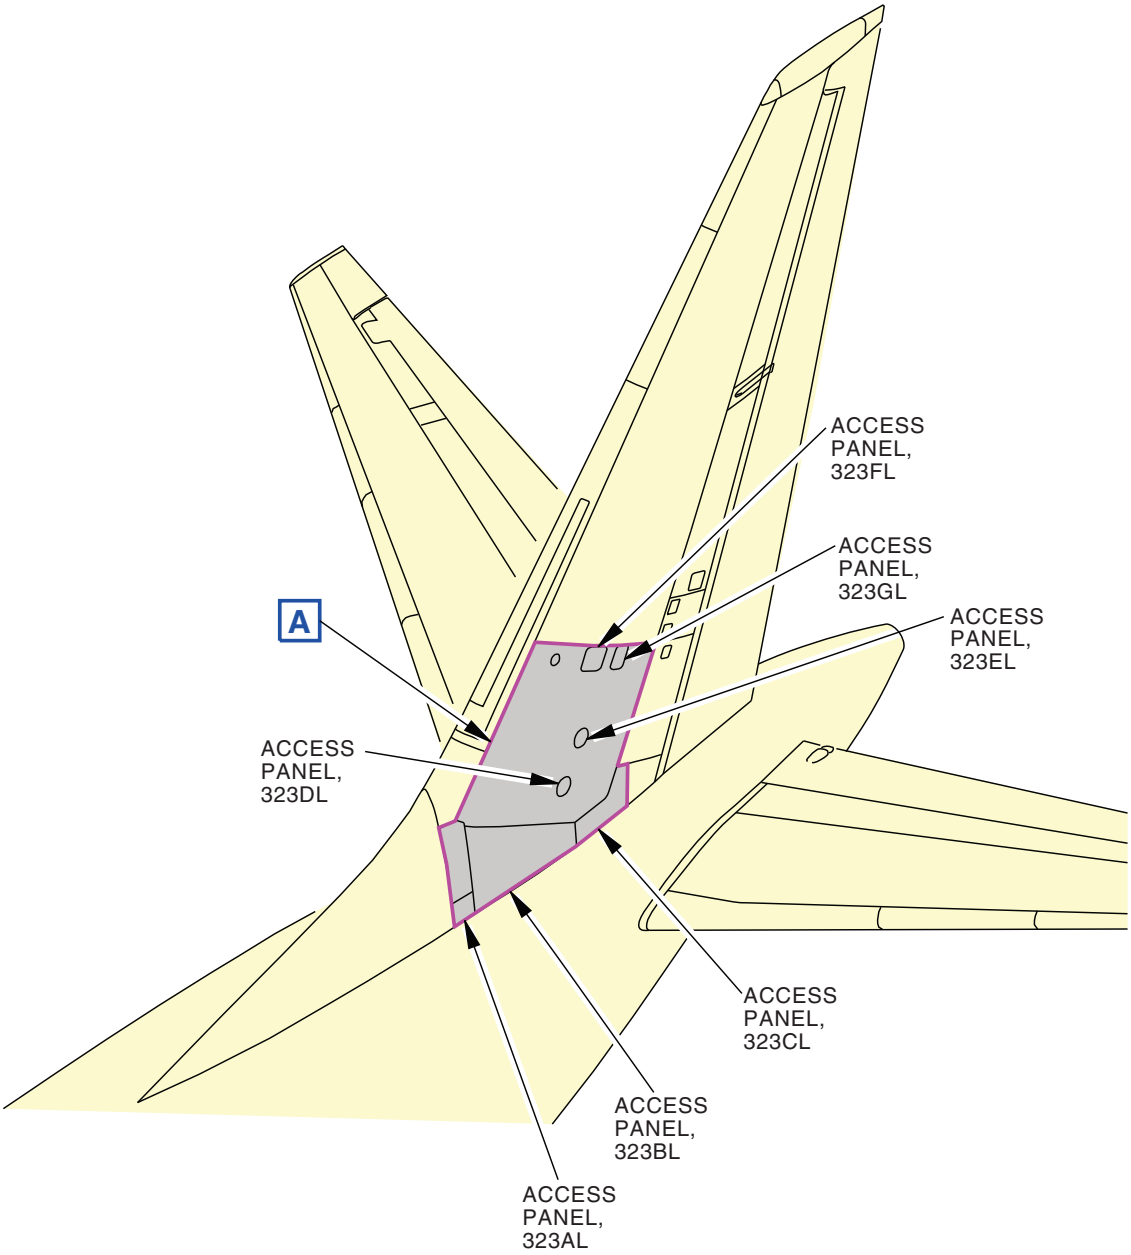

2410162 S00061525024_V1

Front Spar to Rear Spar - Vertical Fin General Visual (Internal)
Figure 216/05-41-03-990-810 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

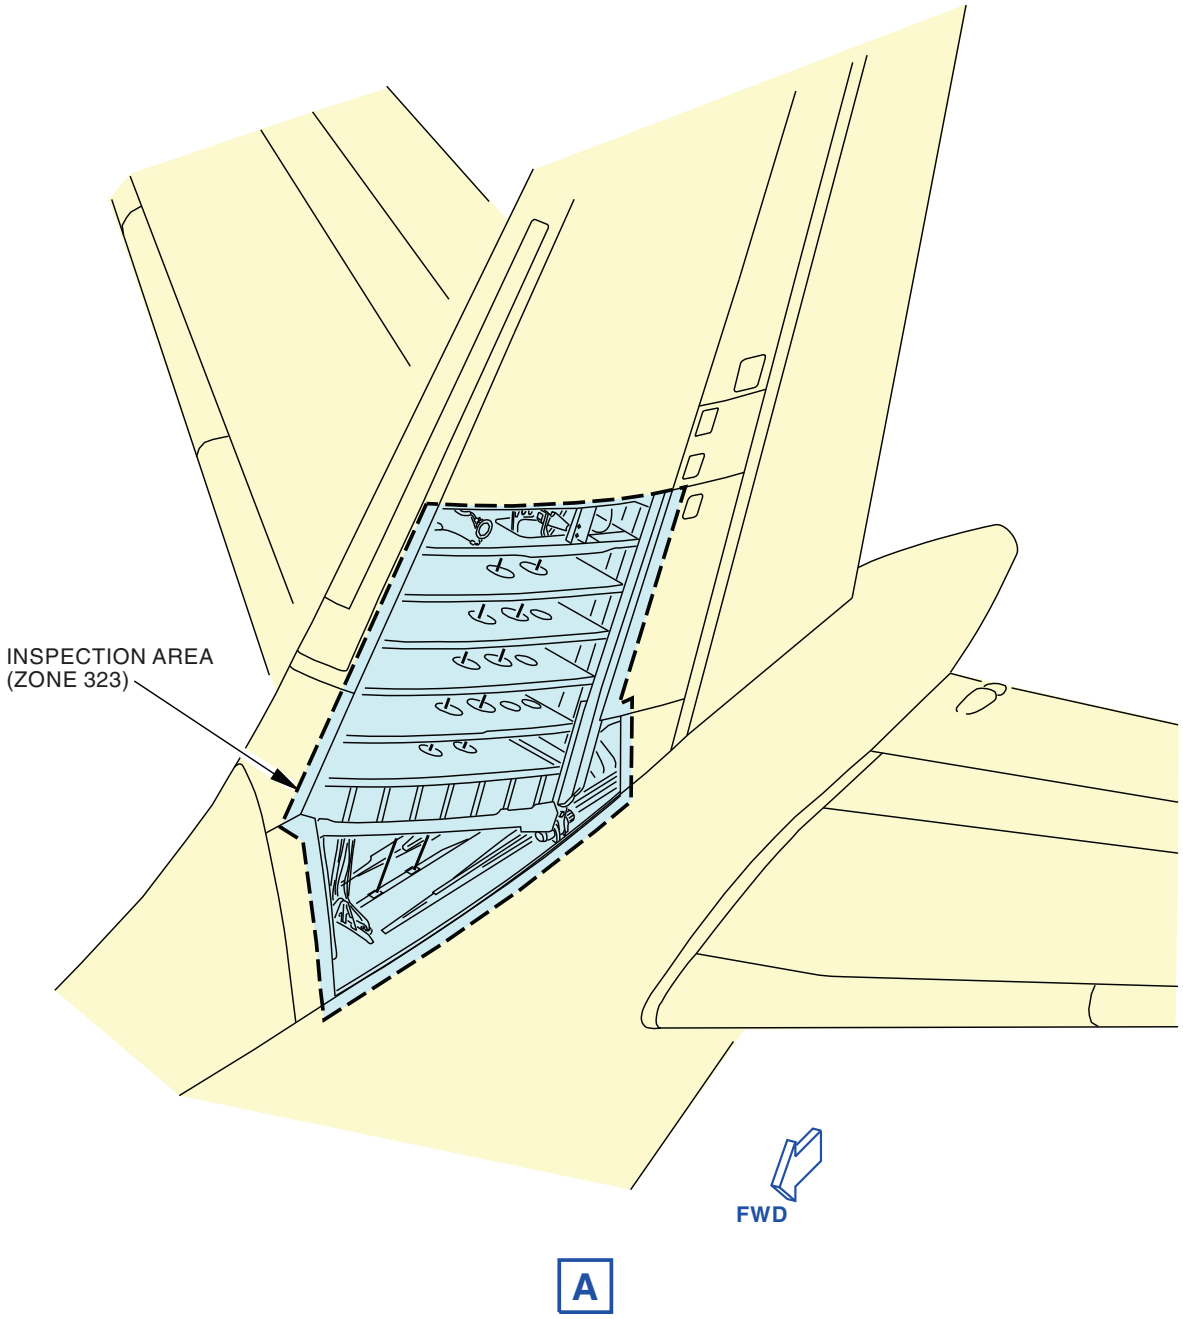

2410163 S00061525025_V1

Front Spar to Rear Spar - Vertical Fin General Visual (Internal)
Figure 216/05-41-03-990-810 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-811

17. EXTERNAL - ZONAL (GVI): Vertical Fin - Front Spar to Rear Spar

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar


B. Zonal Inspection

SUBTASK 05-41-03-210-011

(1) Perform an external zonal inspection (GVI) of the Vertical Fin - Front Spar to Rear Spar.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

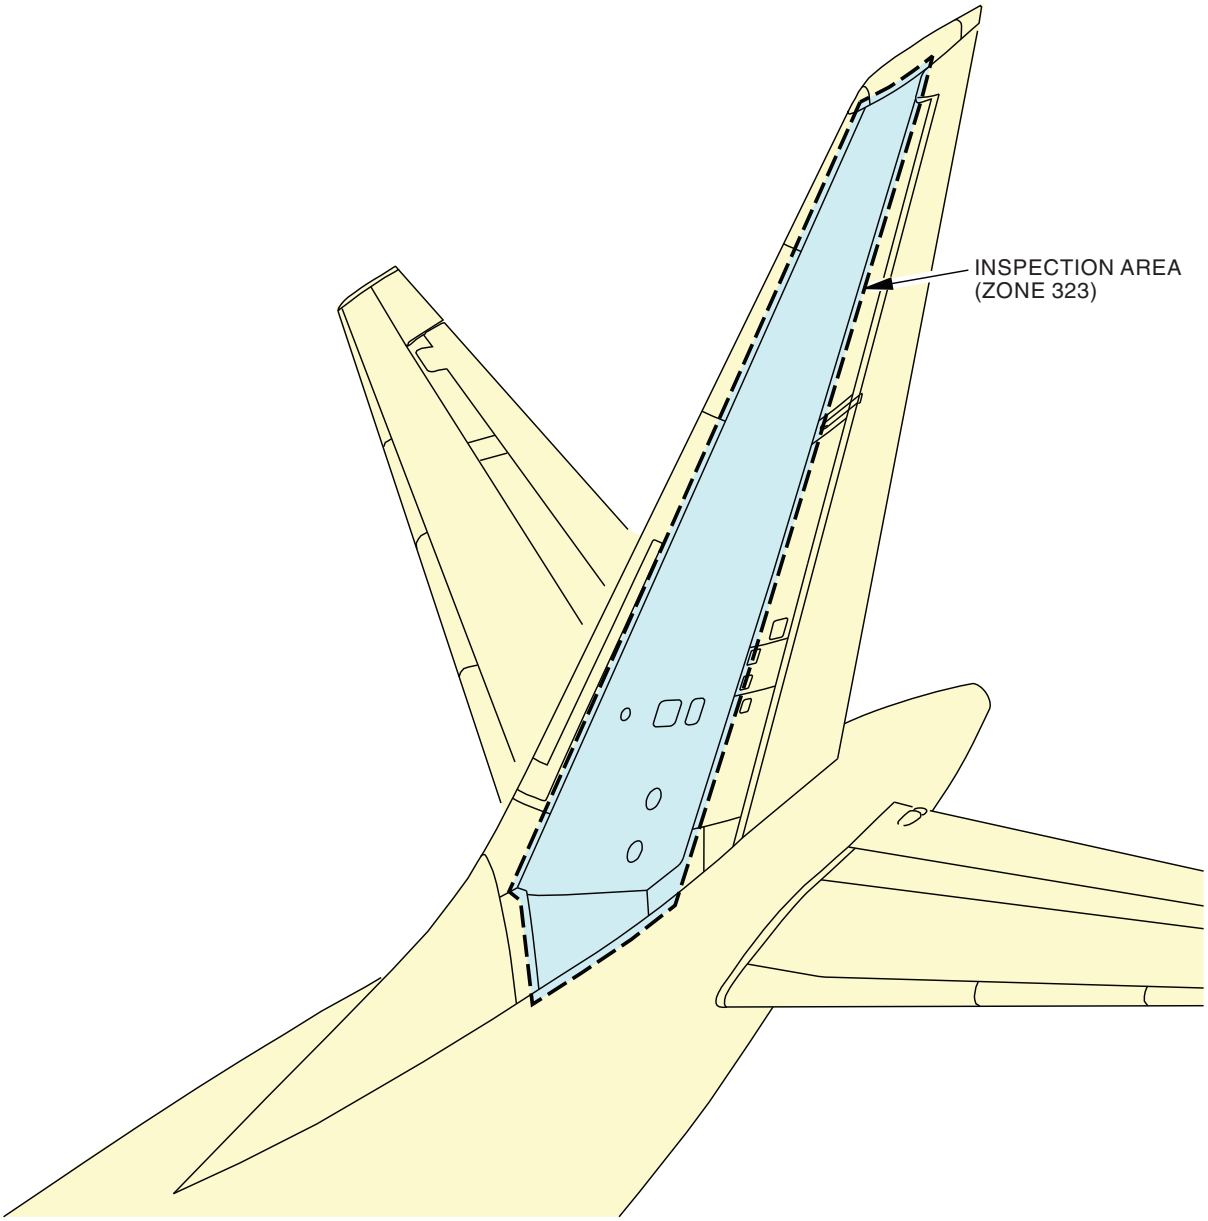

2410164 S00061525027_V1

Front Spar to Rear Spar - Vertical Fin General Visual (External)
Figure 217/05-41-03-990-811

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-812

18. INTERNAL - ZONAL (GVI): Vertical Fin - Rear Spar to Trailing Edge

(Figure 218)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge

D. Access Panels

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324HL	Vertical Fin, Access

E. Zonal Inspection

SUBTASK 05-41-03-010-007

(1) Open these access panels:

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324HL	Vertical Fin, Access

SUBTASK 05-41-03-210-012

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Vertical Fin - Rear Spar to Trailing Edge. (EZAP)

SUBTASK 05-41-03-910-006

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-03-410-007

(5) Close these access panels:

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324HL	Vertical Fin, Access

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

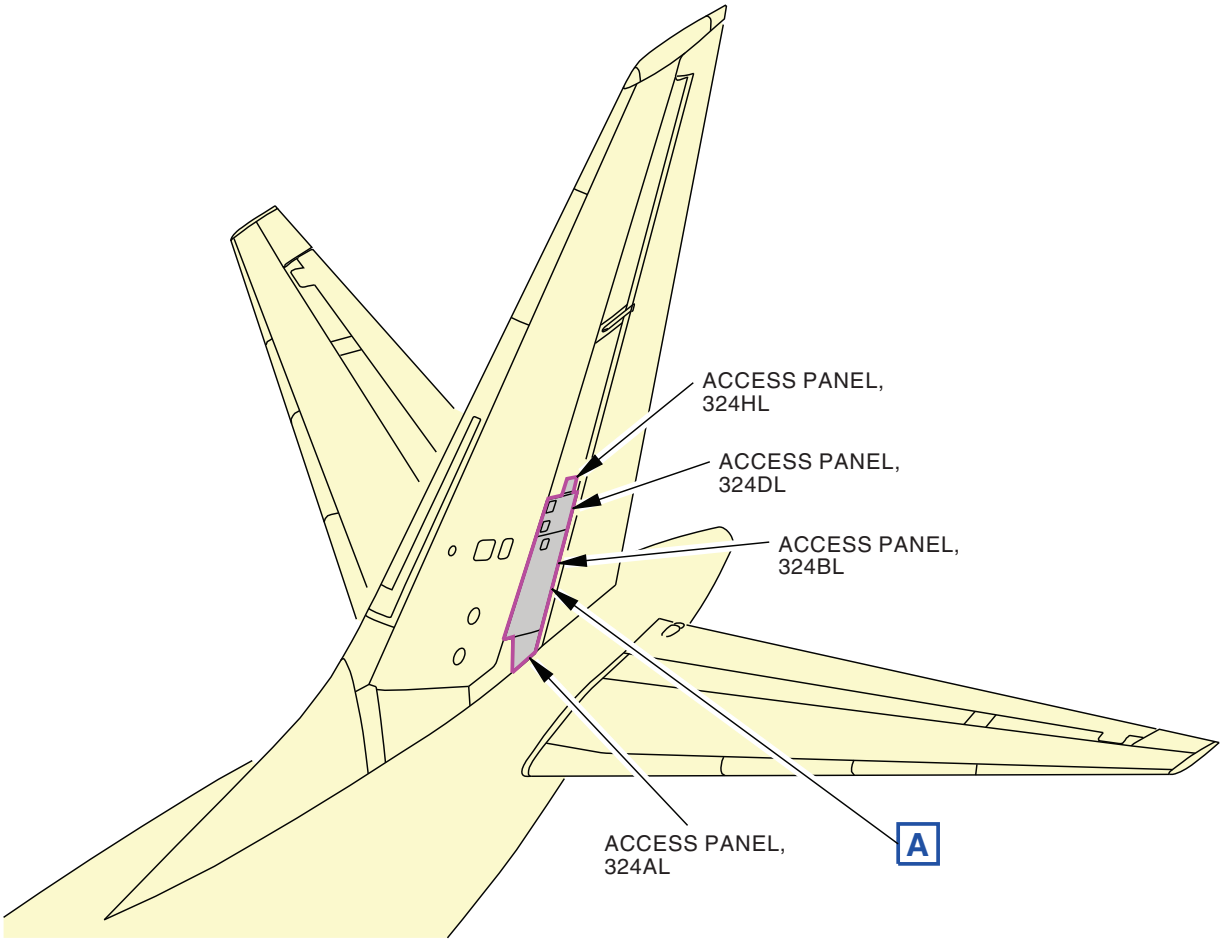

2410165 S00061525029_V1

Rear Spar to Trailing Edge - Vertical Fin General Visual (Internal)
Figure 218/05-41-03-990-812 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

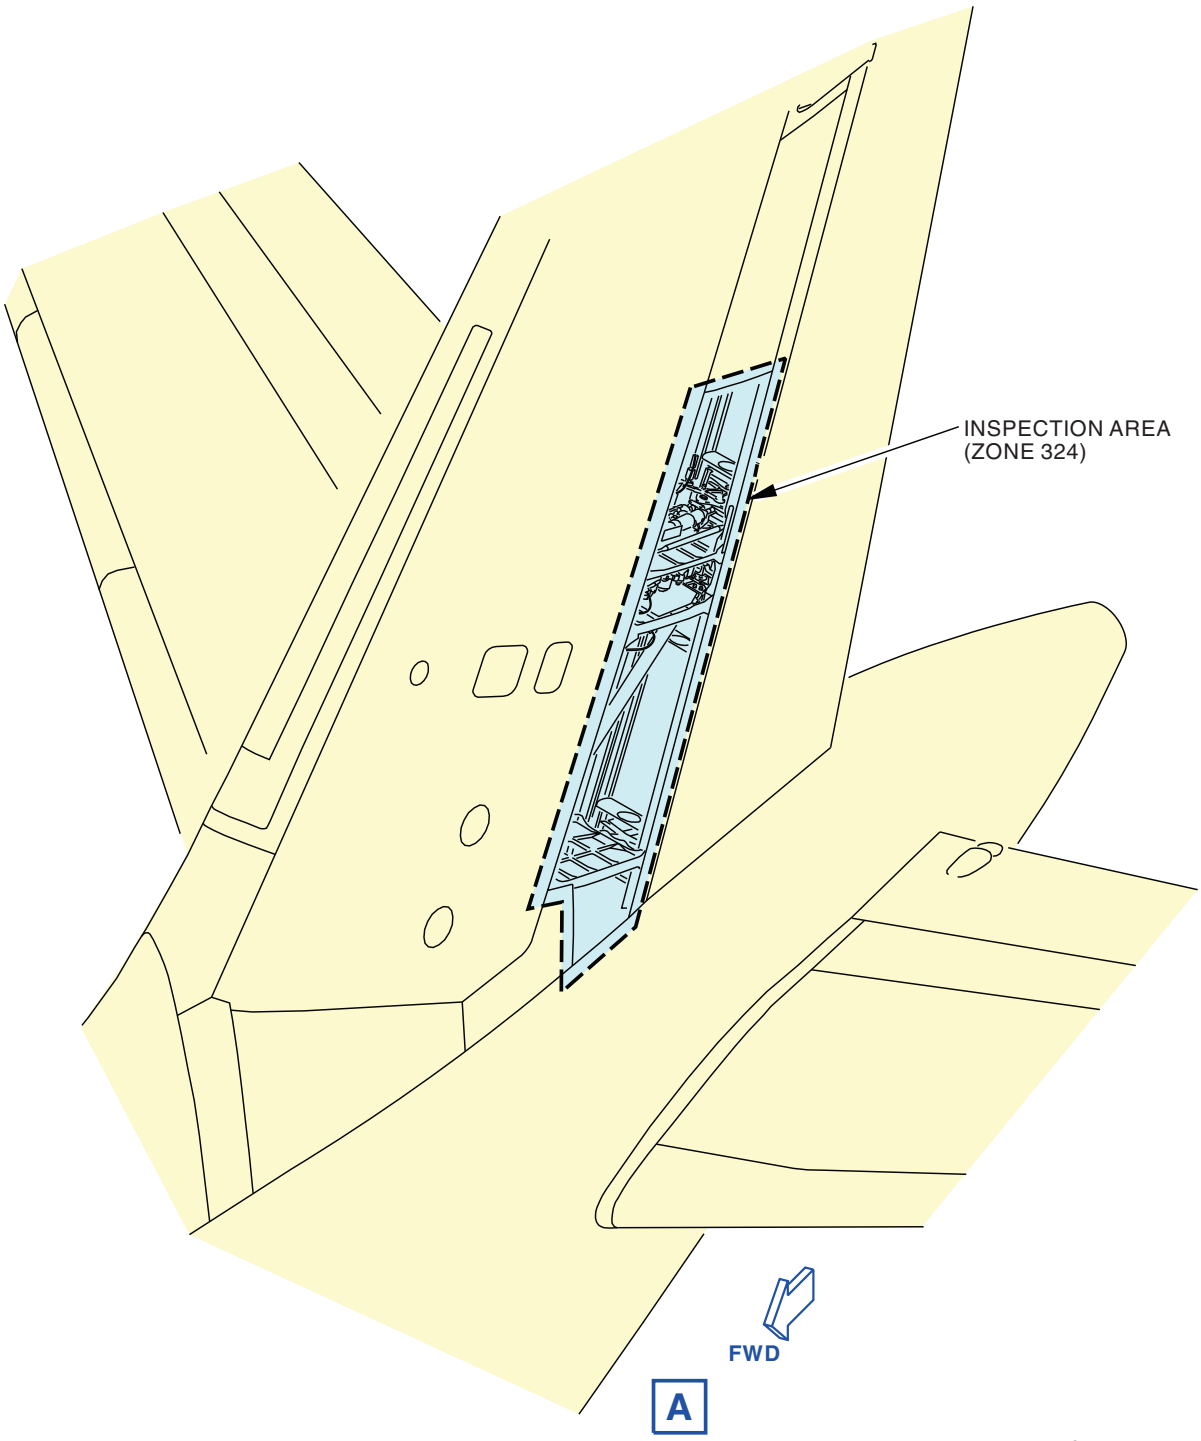

Rear Spar to Trailing Edge - Vertical Fin General Visual (Internal)
Figure 218/05-41-03-990-812 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-813

19. EXTERNAL - ZONAL (GVI): Vertical Fin - Rear Spar to Trailing Edge

(Figure 219)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge


B. Zonal Inspection

SUBTASK 05-41-03-210-013

(1) Perform an external zonal inspection (GVI) to the Vertical Fin - Rear Spar to Trailing Edge.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

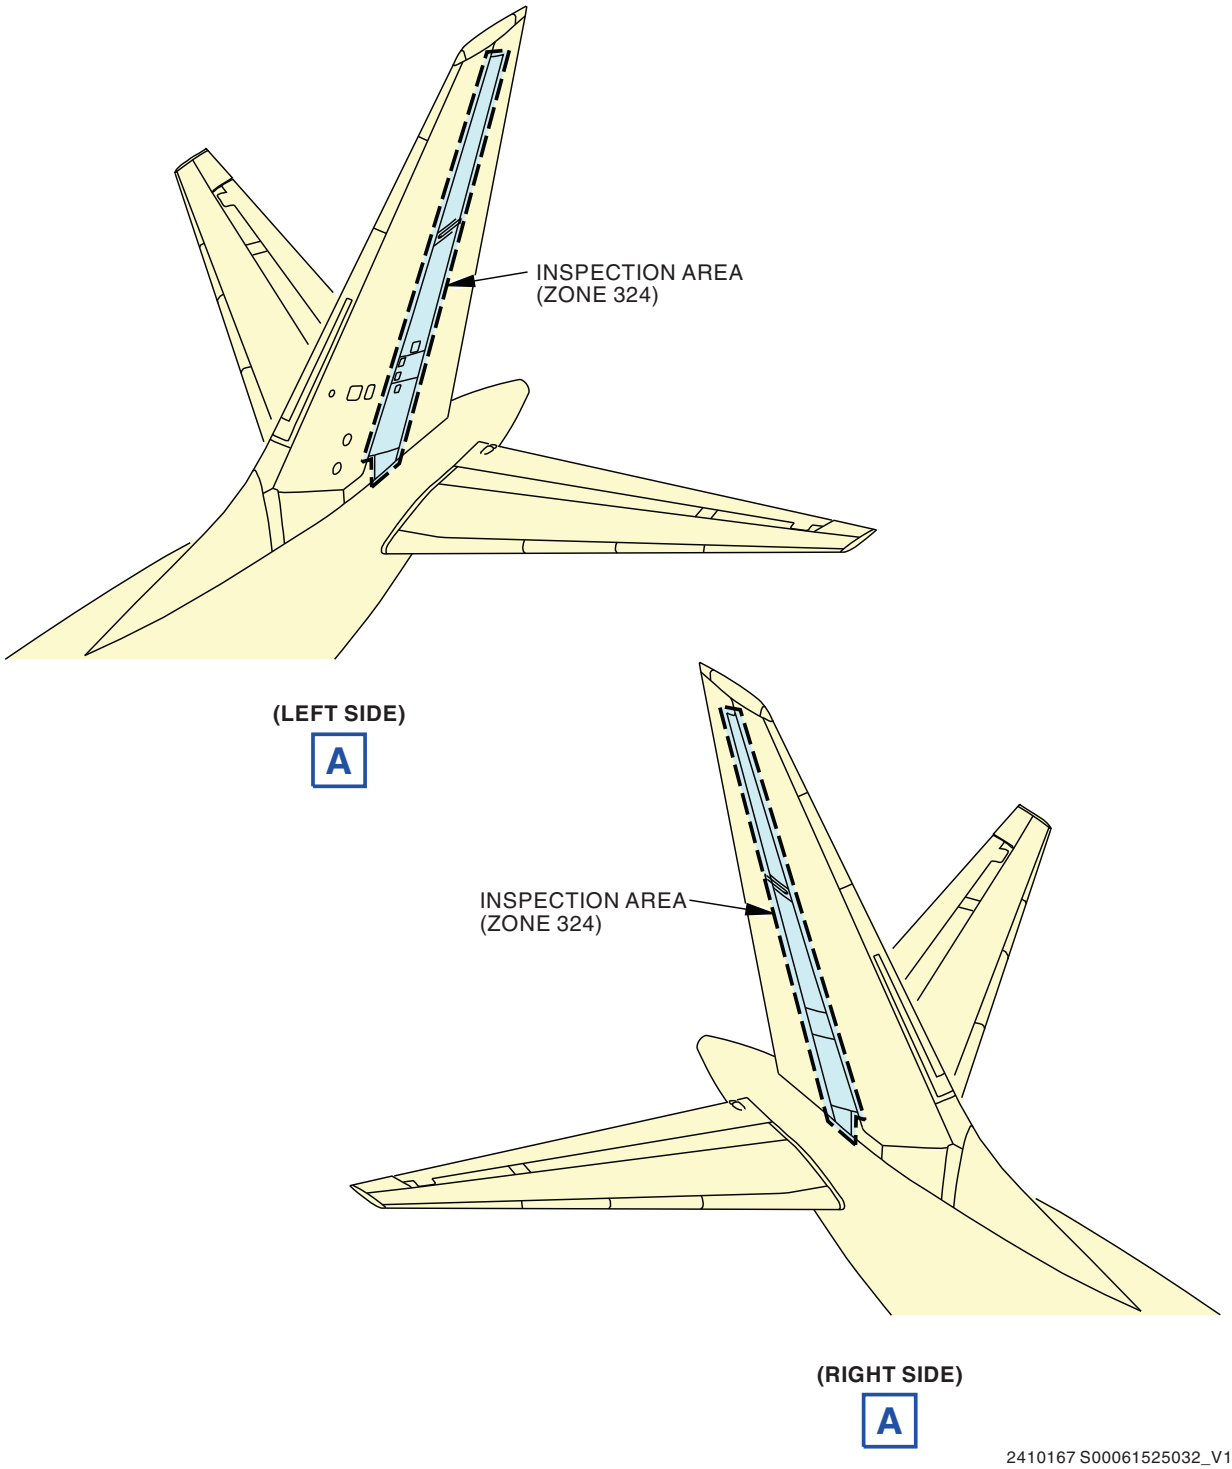

Rear Spar to Trailing Edge - Vertical Fin General Visual (External)
Figure 219/05-41-03-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-814

20. EXTERNAL - ZONAL (GVI): Rudder

(Figure 220)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
325	Vertical Fin - Rudder


B. Zonal Inspection

SUBTASK 05-41-03-210-014

(1) Perform an external zonal inspection (GVI) of the Rudder.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

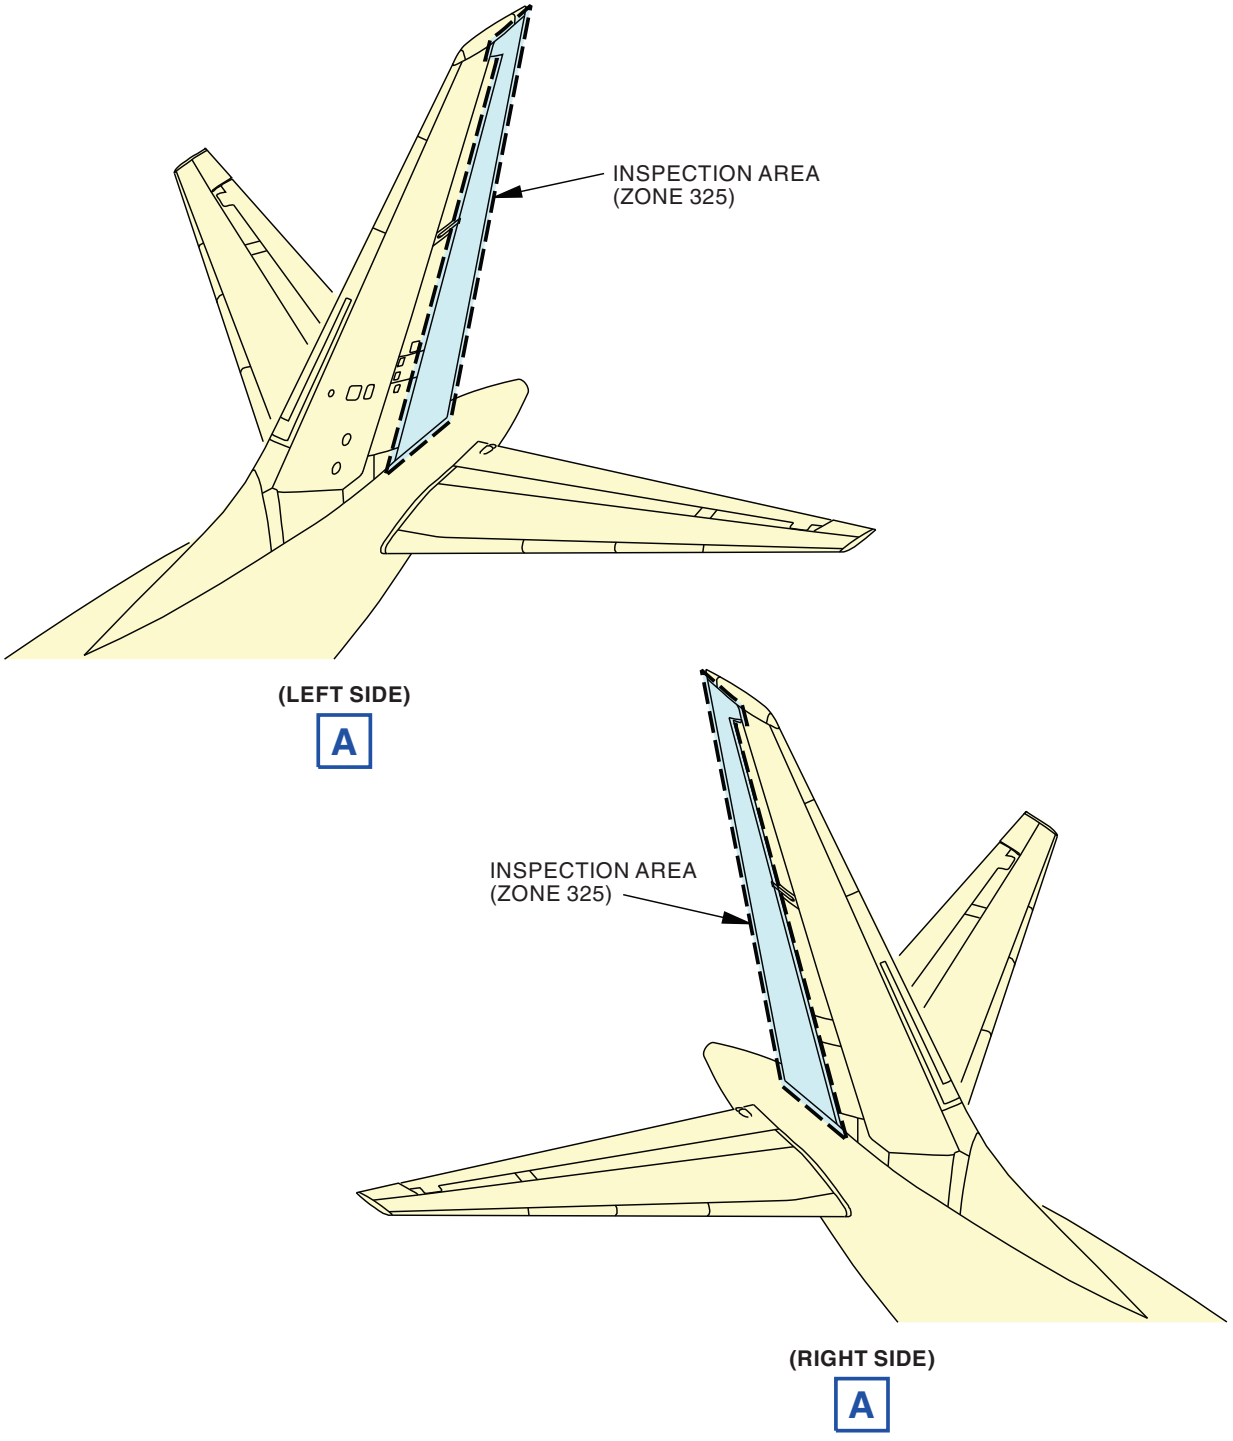

Rudder General Visual (External)
Figure 220/05-41-03-990-814

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-815

21. EXTERNAL - ZONAL (GVI): Vertical Fin Tip

(Figure 221)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
326	Vertical Fin - Fin Tip


B. Zonal Inspection

SUBTASK 05-41-03-210-015

(1) Perform an external zonal inspection (GVI) of the Vertical Fin Tip.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

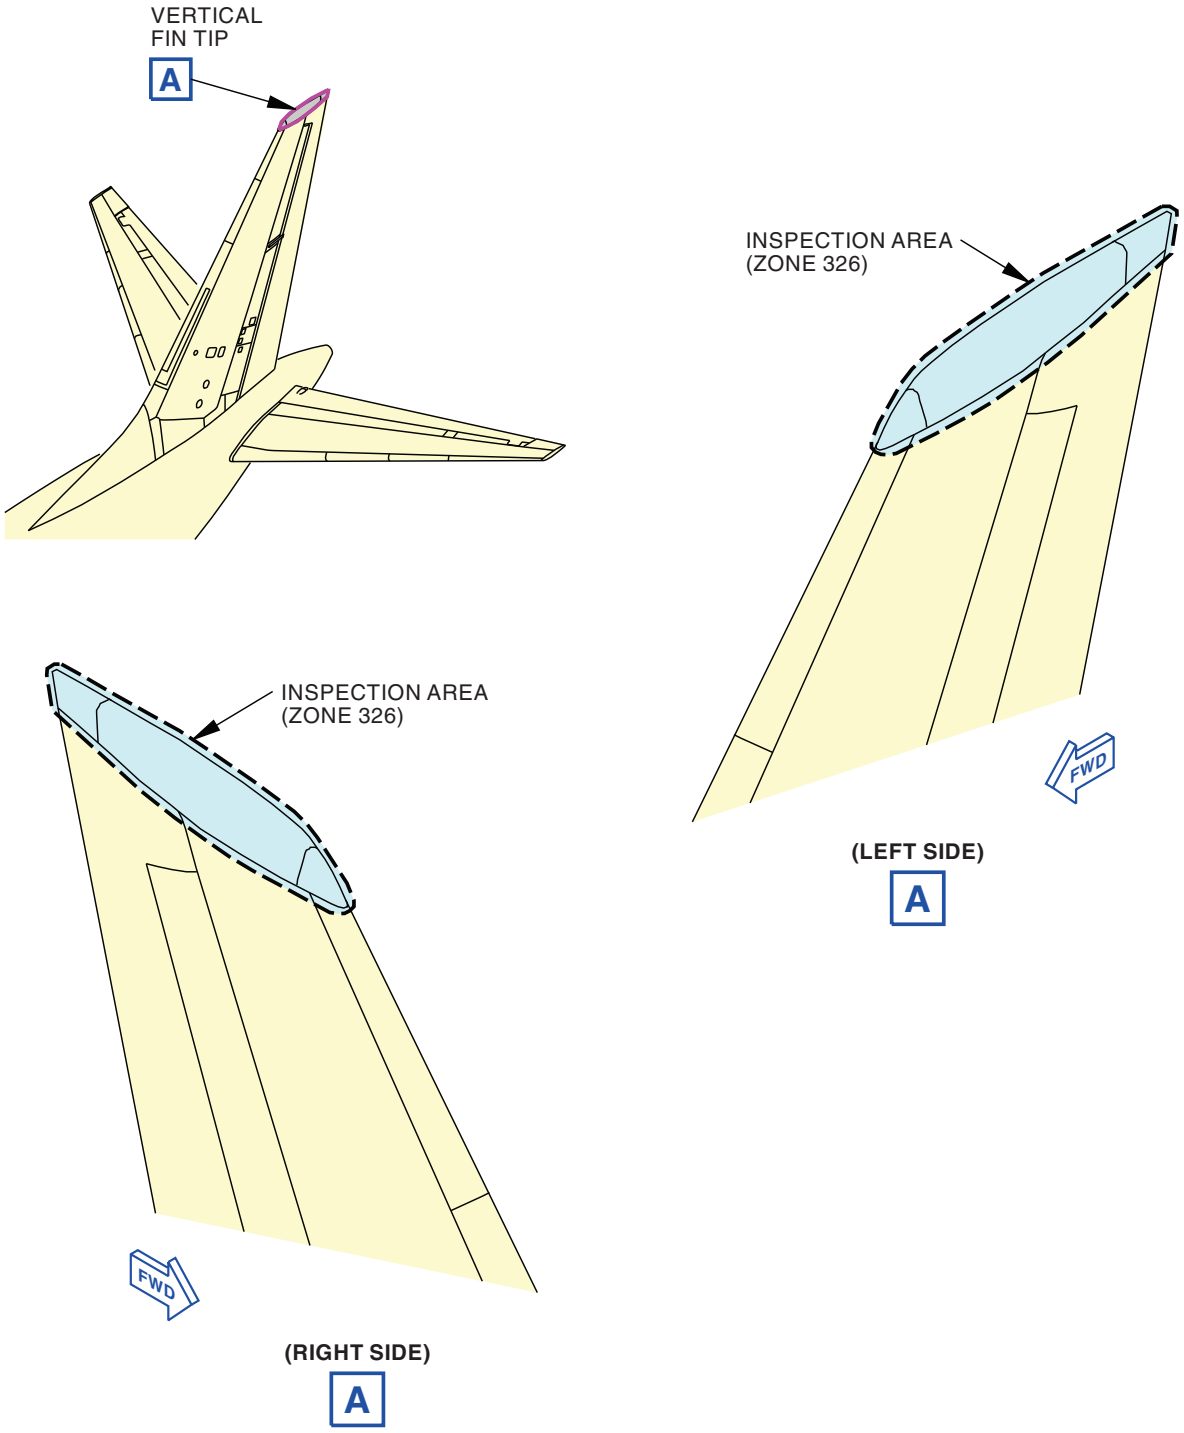

2410169 S00061525036_V1

Vertical Fin Tip General Visual (External)
Figure 221/05-41-03-990-815

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-835

22. INTERNAL - ZONAL (GVI): Vertical Fin - Fin Tip

(Figure 222)

NOTE: This procedure is a scheduled maintenance task.

A. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

B. Location Zones

Zone	Area
326	Vertical Fin - Fin Tip

C. Access Panels

Number	Name/Location
326A	Vertical Fin, Vertical Fin Tip

D. Zonal Inspection

SUBTASK 05-41-03-010-014

(1) Open this access panel:

Number	Name/Location
326A	Vertical Fin, Vertical Fin Tip

SUBTASK 05-41-03-210-035

(2) Perform an internal zonal inspection (GVI) of the Vertical Fin - Fin Tip.

SUBTASK 05-41-03-410-014

(3) Close this access panel:


Number	Name/Location
326A	Vertical Fin, Vertical Fin Tip

SUBTASK 05-41-03-390-008

(4) Apply an aerodynamic smoothersealant, A02315. for each applicable panel (SRM SUBJECT 51-10-01.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

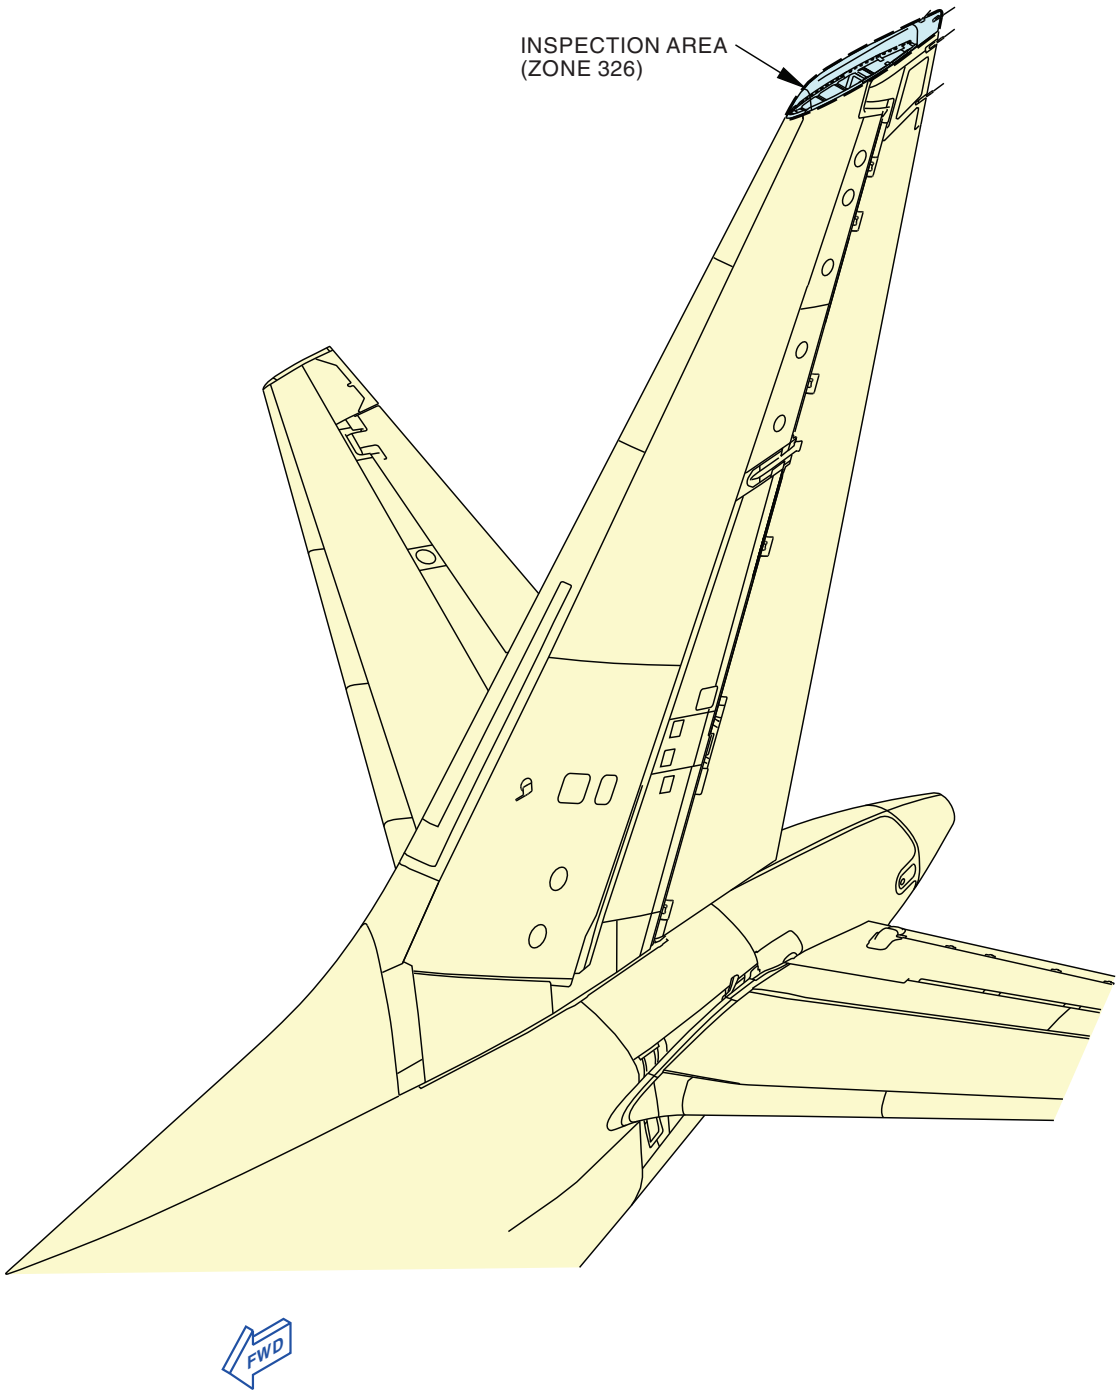

2546049 S0000601542_V1

Vertical Fin Tip General Visual (Internal)
Figure 222/05-41-03-990-835

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-816

23. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Left

(Figure 223)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge


B. Zonal Inspection

SUBTASK 05-41-03-210-016

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Leading Edge - Left.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

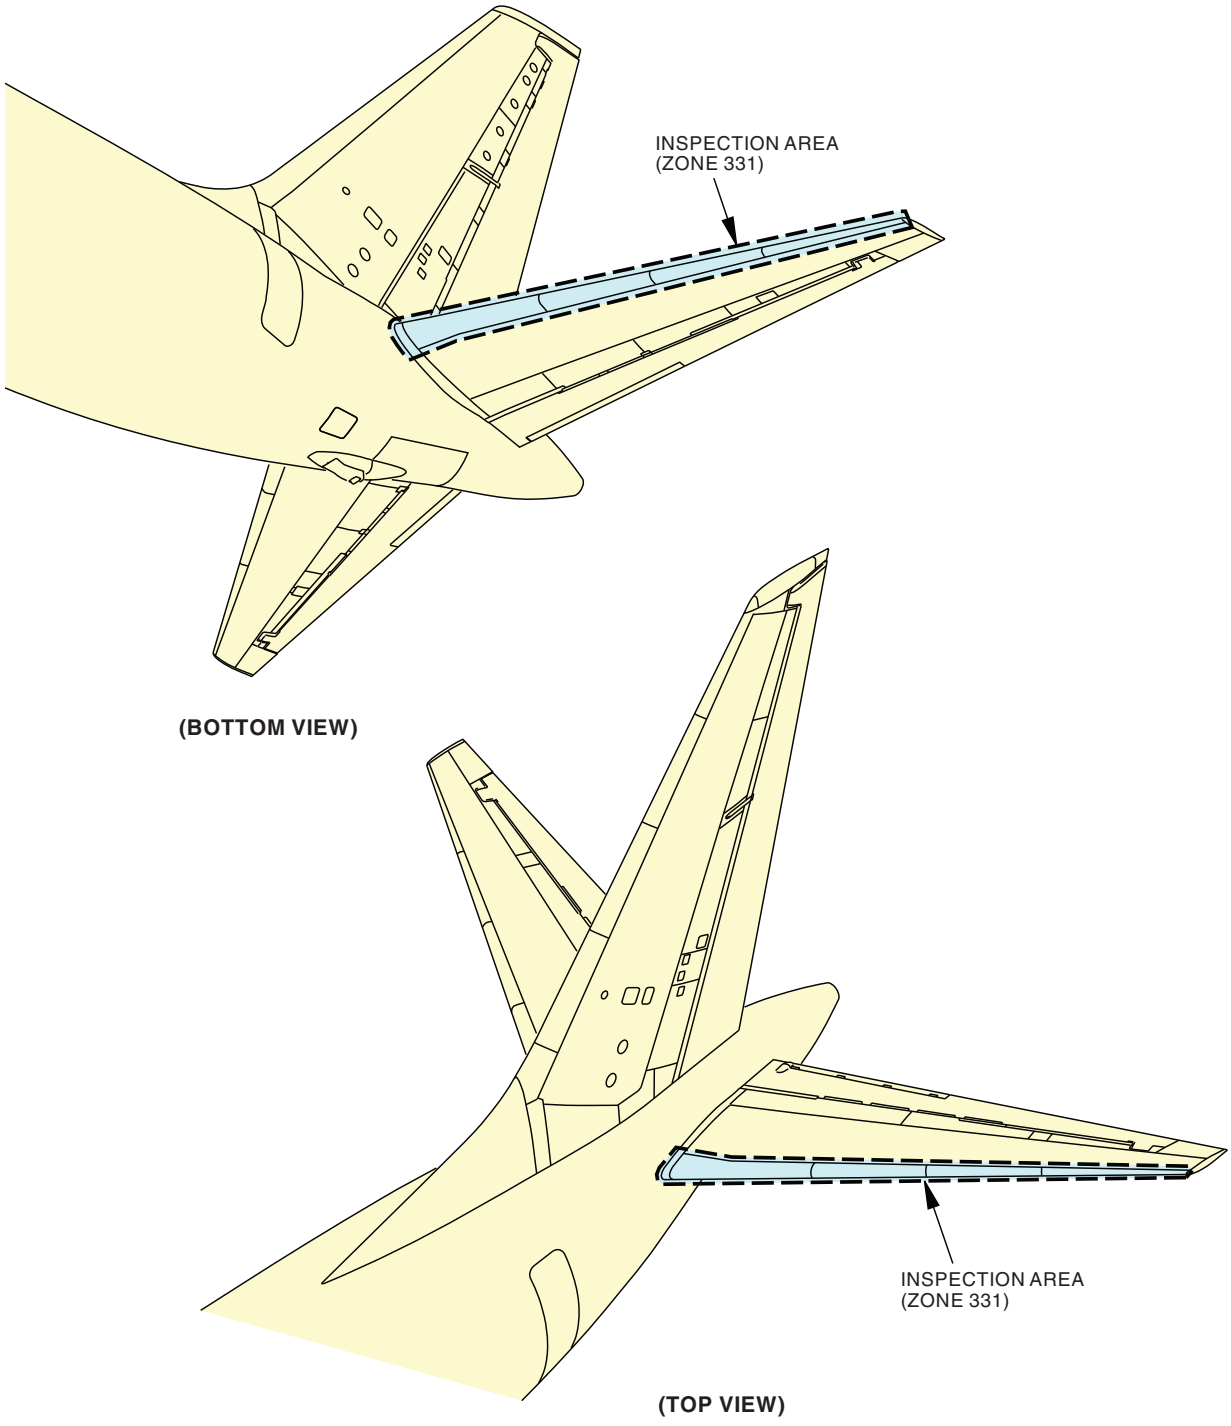

Leading Edge - Left Horizontal Stabilizer General Visual (External)
Figure 223/05-41-03-990-816

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-836

24. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Left

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge

B. Access Panels

Number	Name/Location
331AL	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

C. Zonal Inspection

SUBTASK 05-41-03-010-018

(1) Open these access panels:

Number	Name/Location
331AL	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

SUBTASK 05-41-03-210-036

(2) Perform an internal zonal inspection (GVI) of the Horizontal Stabilizer - Leading Edge - Left.


SUBTASK 05-41-03-410-018

(3) Close these access panels:

Number	Name/Location
331AL	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

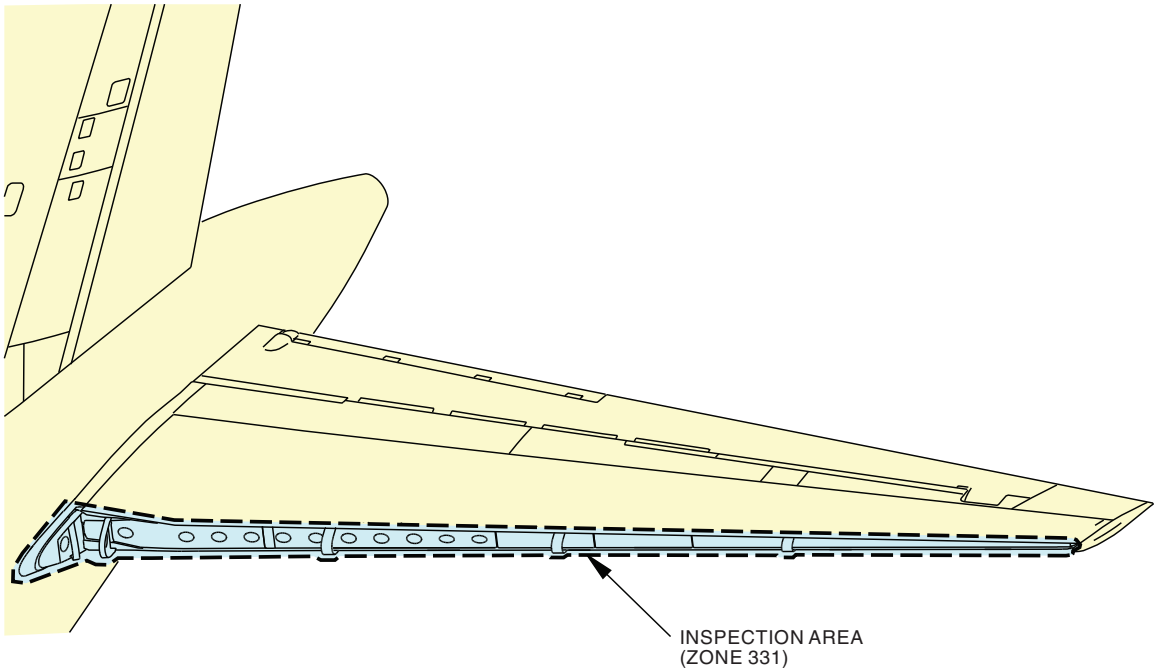

2546005 S0000601546_V1

Left Horizontal Stabilizer Leading Edge General Visual (Internal)
Figure 224/05-41-03-990-836

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-817

25. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Left

(Figure 225)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81


B. Zonal Inspection

SUBTASK 05-41-03-210-017

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Front Spar to Rear Spar - Left.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

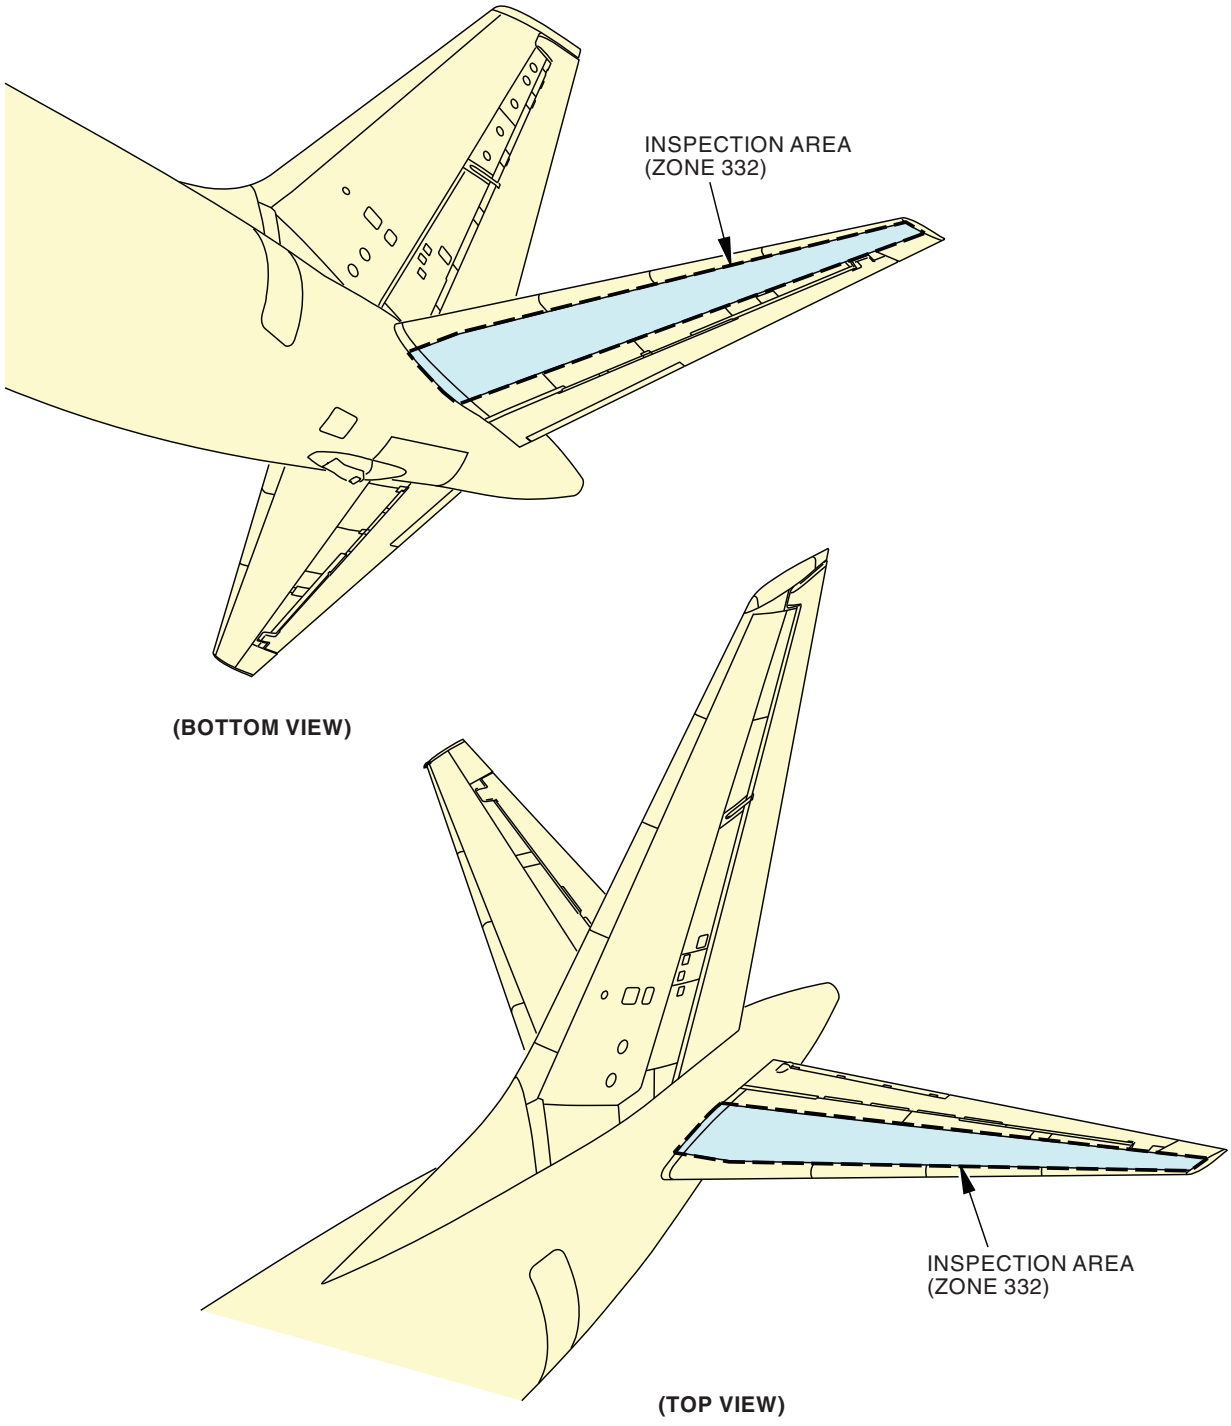

Front Spar to Rear Spar - Left Horizontal Stabilizer General Visual (External)
Figure 225/05-41-03-990-817

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-818

26. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Left

(Figure 226)

NOTE: This procedure is a scheduled maintenance task.

A. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

B. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

C. Access Panels

Number	Name/Location
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

D. Zonal Inspection

SUBTASK 05-41-03-010-008

(1) Open this access panel:

Number	Name/Location
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

NOTE: As an alternate to the access provided, access panel 332AB can be removed for inspection from lower side of stabilizer.

SUBTASK 05-41-03-210-018

(2) Perform an internal zonal inspection (GVI) of the Inboard Horizontal Stabilizer - Front Spar to Rear Spar - Left.

SUBTASK 05-41-03-410-008

(3) Close this access panel:


Number	Name/Location
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

SUBTASK 05-41-03-390-004

(4) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

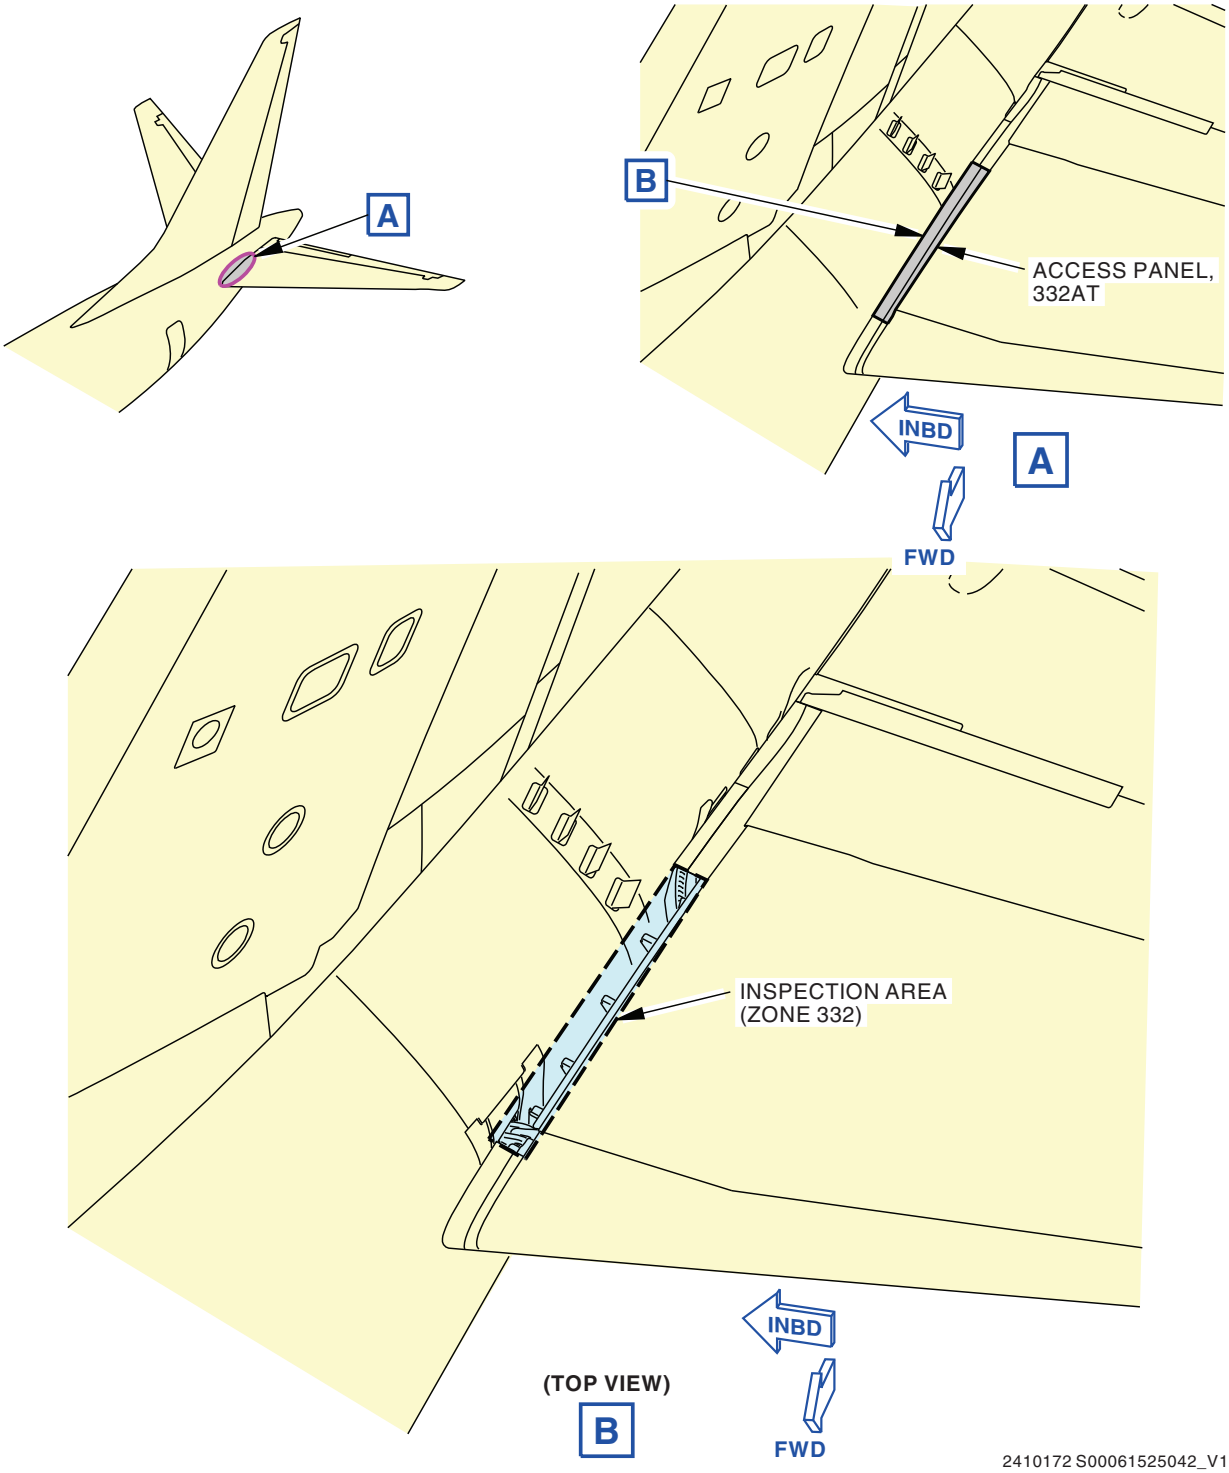

Front Spar to Rear Spar - Left Horizontal Stabilizer General Visual (Internal)
Figure 226/05-41-03-990-818

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-819

27. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Left

(Figure 227)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required Enhanced Zonal Analysis Procedure (EZAP) - derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-31-00-800-802	Pressure from the Elevator Hydraulic Systems A and B Removal (P/B 201)
27-31-00-840-802	Putting the Elevator Systems A and B Back to the Condition Before the Pressure Removal (P/B 201)
55-10-11-000-801	Balance Bay Panels - Removal (P/B 401)
55-10-11-400-801	Balance Bay Panels - Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

D. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge

E. Access Panels

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge

F. Zonal Inspection

SUBTASK 05-41-03-800-001

(1) If hydraulic systems A and B have pressure, do this task: Pressure from the Elevator Hydraulic Systems A and B Removal, TASK 27-31-00-800-802.

SUBTASK 05-41-03-010-009

(2) Open the applicable trailing edge access panels for the horizontal stabilizer (TASK 55-10-11-000-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Open these access panels:

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge

SUBTASK 05-41-03-210-019

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Horizontal Stabilizer - Rear Spar to Trailing Edge - Left (EZAP).

SUBTASK 05-41-03-910-007

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

SUBTASK 05-41-03-410-009

(6) Close the applicable trailing edge access panels for the horizontal stabilizer (TASK 55-10-11-400-801).

Close these access panels:

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge

SUBTASK 05-41-03-390-005


(7) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

SUBTASK 05-41-03-840-001

(8) If hydraulic pressure in systems A and B is necessary to be restored, do this task: Putting the Elevator Systems A and B Back to the Condition Before the Pressure Removal, TASK 27-31-00-840-802.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

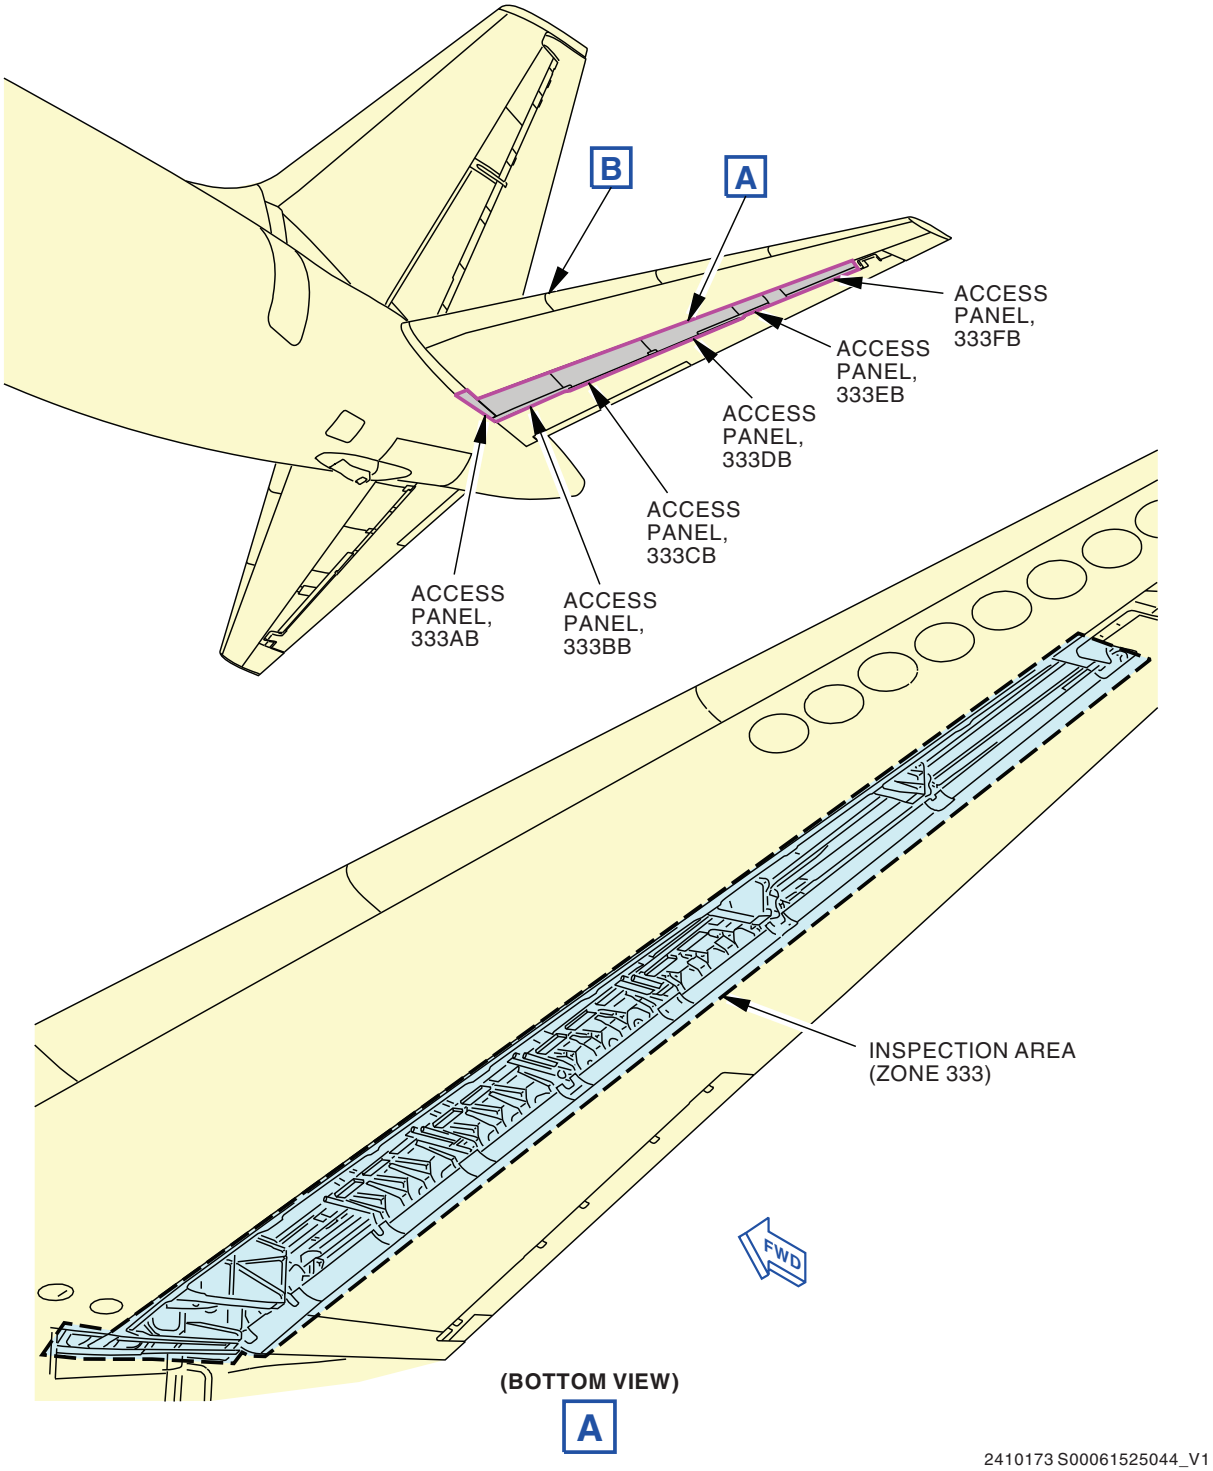

Rear Spar to Trailing Edge - Left Horizontal Stabilizer General Visual (Internal)
Figure 227/05-41-03-990-819 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

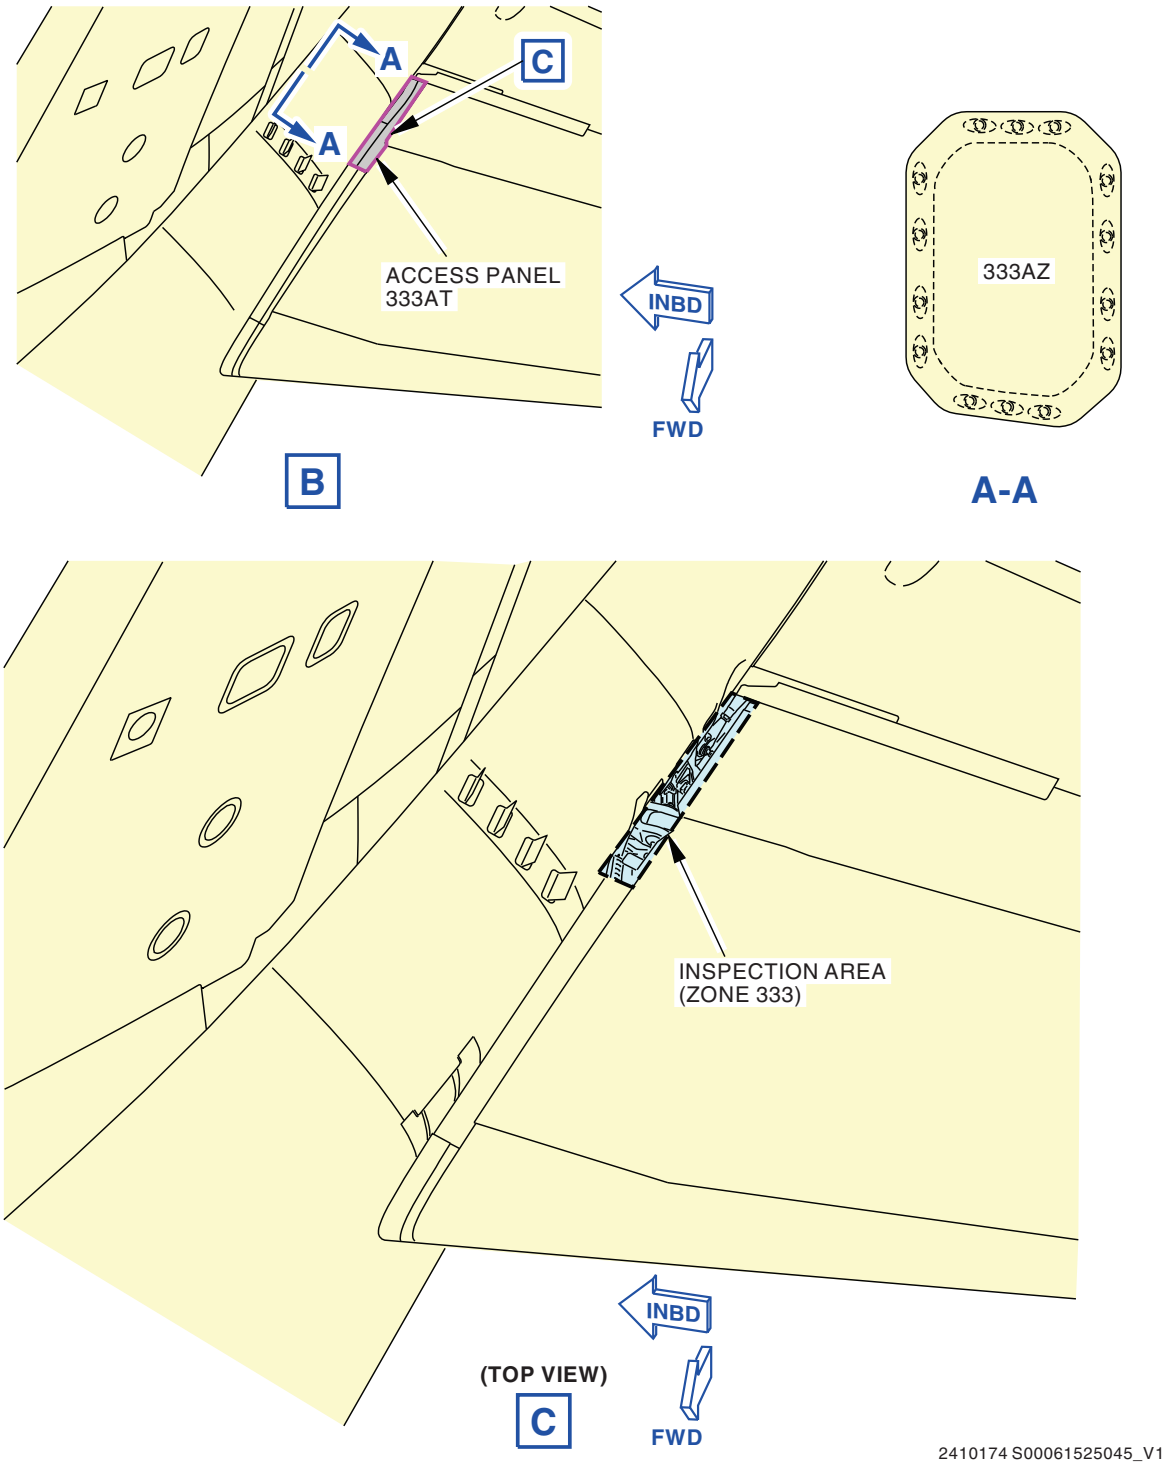

Rear Spar to Trailing Edge - Left Horizontal Stabilizer General Visual (Internal)
Figure 227/05-41-03-990-819 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-820

28. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Left

(Figure 228)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge


B. Zonal Inspection

SUBTASK 05-41-03-210-020

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Rear Spar to Trailing Edge - Left.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

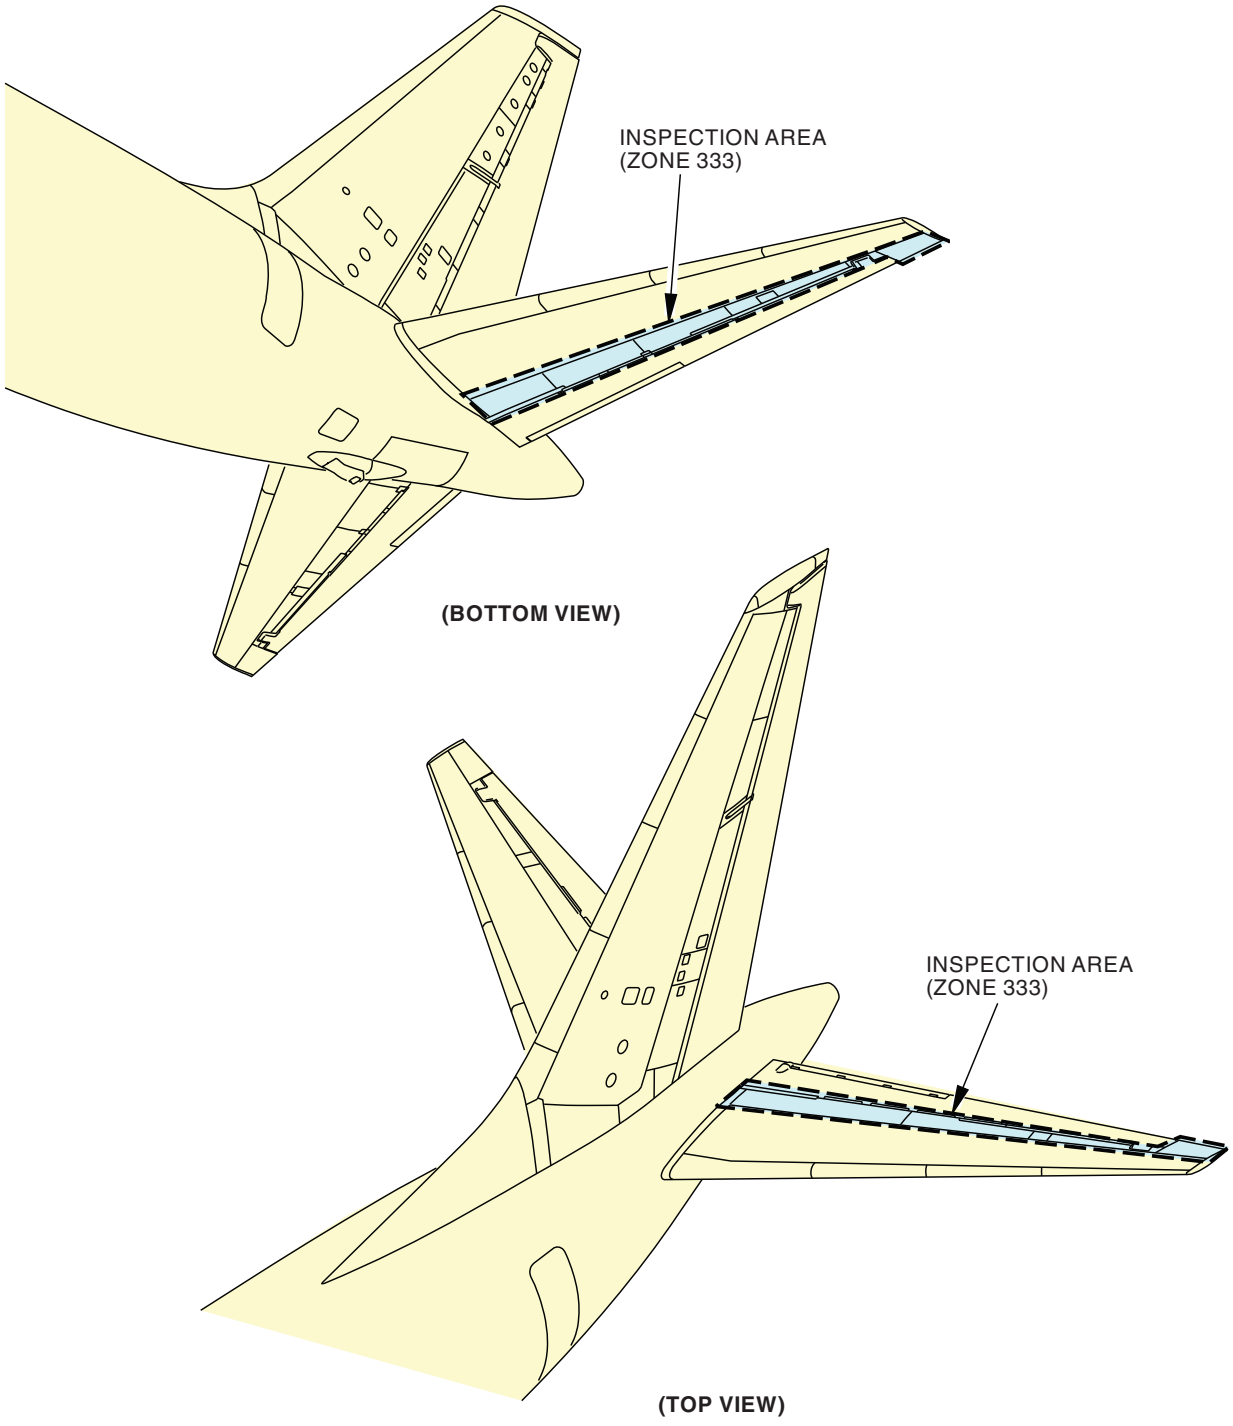

Rear Spar to Trailing Edge - Left Horizontal Stabilizer General Visual (External)
Figure 228/05-41-03-990-820

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-821

29. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Elevator - Left

(Figure 229)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator


B. Zonal Inspection

SUBTASK 05-41-03-210-021

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Elevator - Left.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

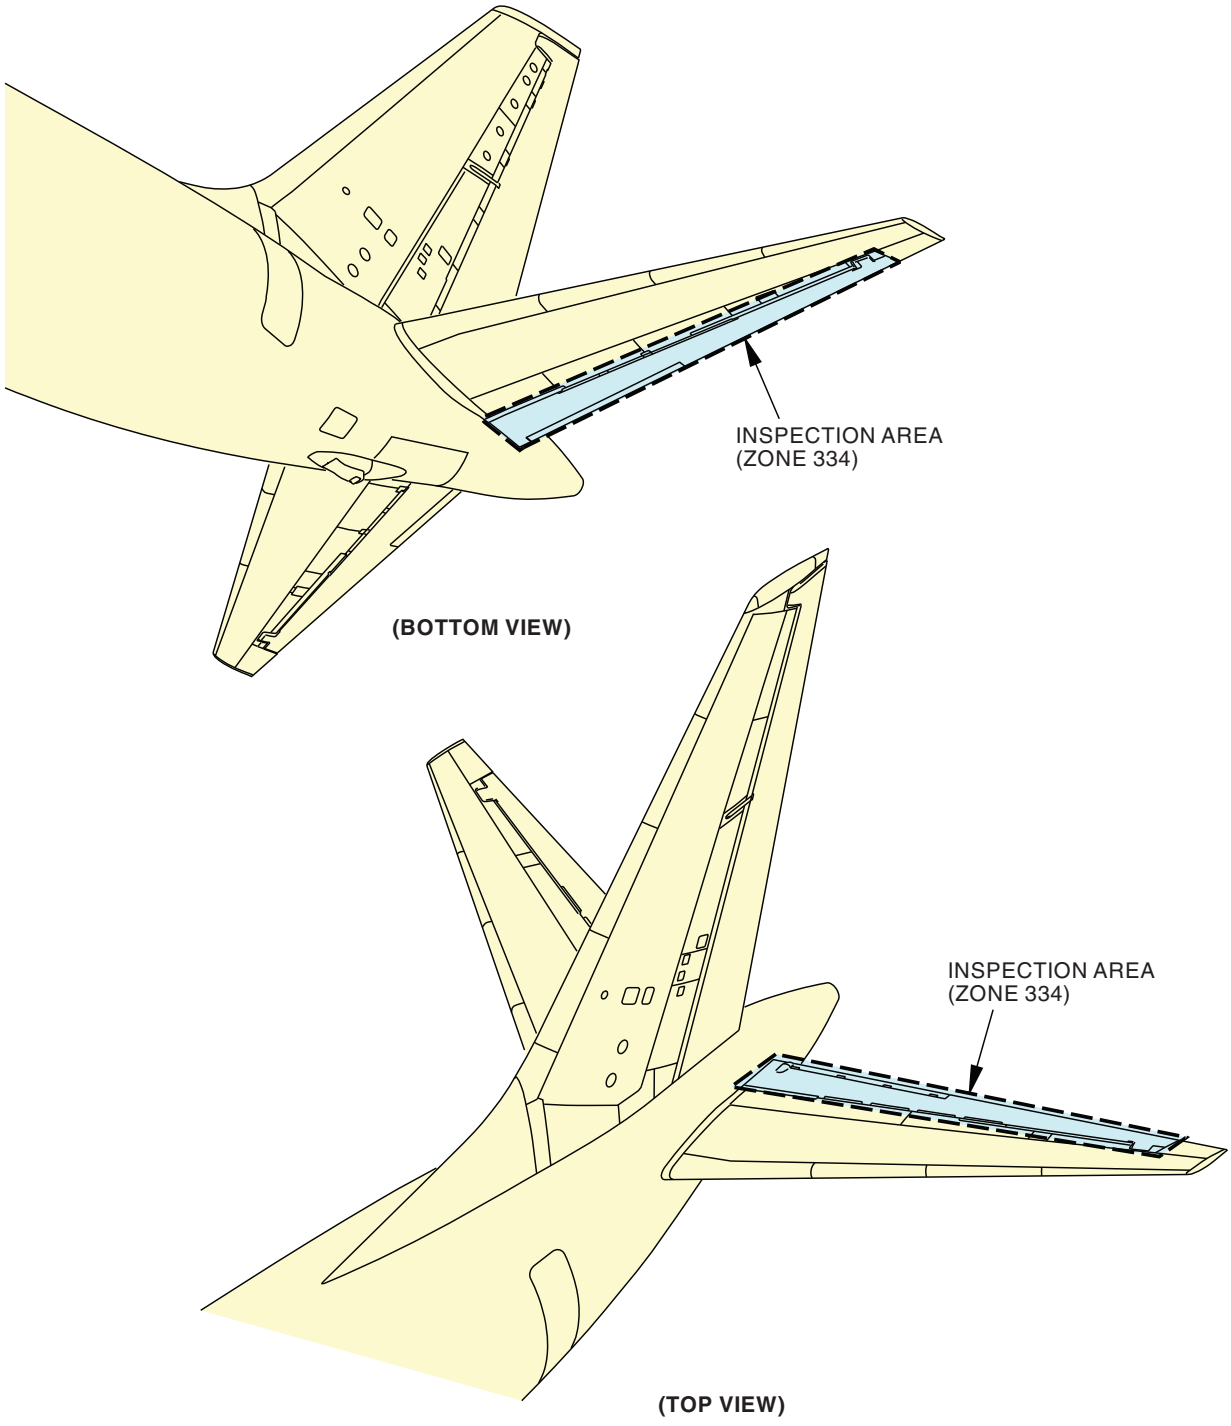

Elevator - Left Horizontal Stabilizer General Visual (External)
Figure 229/05-41-03-990-821

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-822

30. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Stabilizer Tip - Left

(Figure 230)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
335	Left Horizontal Stabilizer - Tip


B. Zonal Inspection

SUBTASK 05-41-03-210-022

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Stabilizer Tip - Left.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

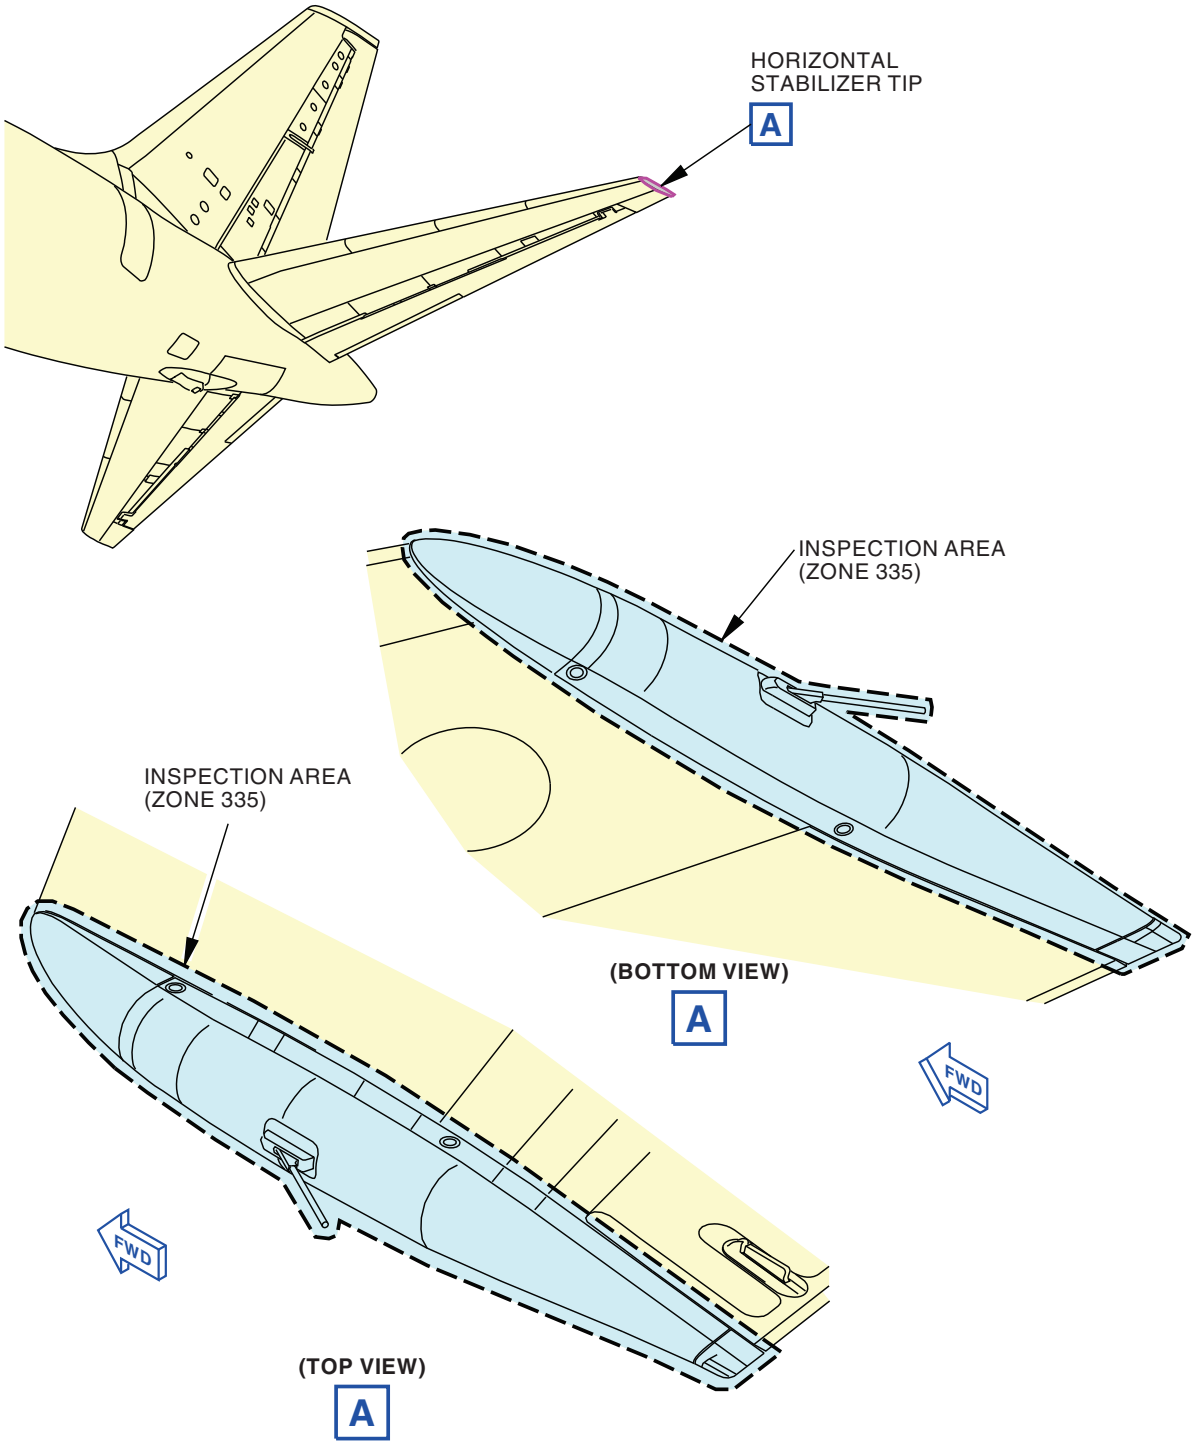

Stabilizer Tip - Left Horizontal Stabilizer General Visual (External)
Figure 230/05-41-03-990-822

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-837

31. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Stabilizer Tip - Left

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
335	Left Horizontal Stabilizer - Tip

B. Access Panels

Number	Name/Location
335A	Horizontal Stabilizer, Removable Stabilizer Tip

C. Zonal Inspection

SUBTASK 05-41-03-010-017

(1) Open this access panel:

Number	Name/Location
335A	Horizontal Stabilizer, Removable Stabilizer Tip

SUBTASK 05-41-03-210-037

(2) Perform an internal zonal inspection (GVI) of the Horizontal Stabilizer - Stabilizer Tip - Left.


SUBTASK 05-41-03-410-017

(3) Close this access panel:

Number	Name/Location
335A	Horizontal Stabilizer, Removable Stabilizer Tip

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

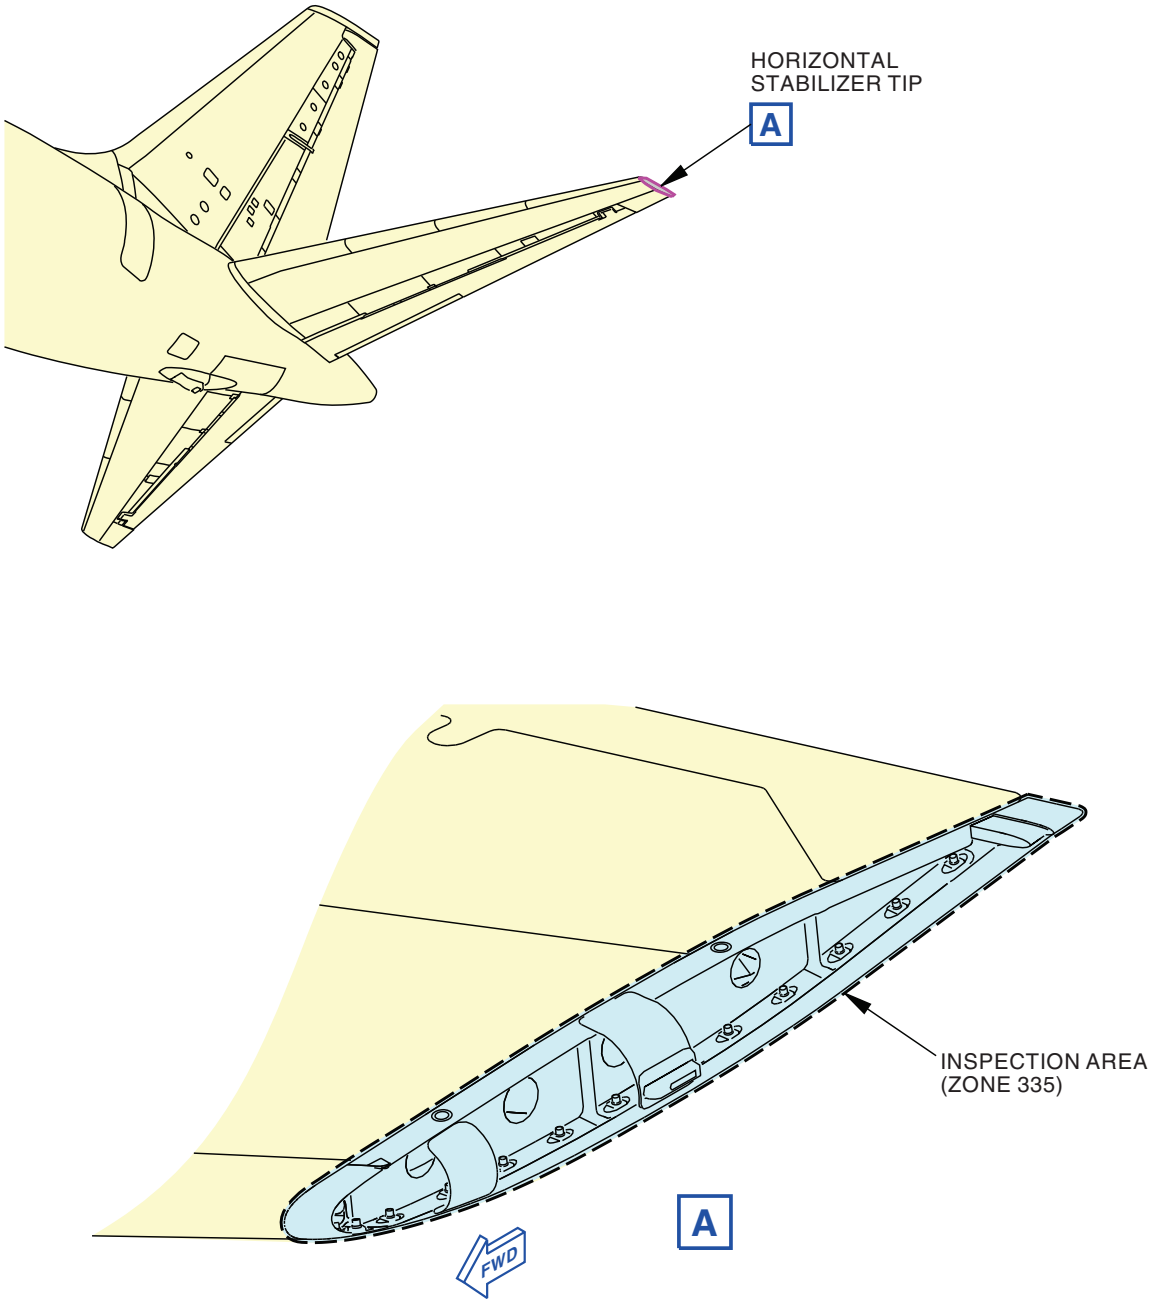

Stabilizer Tip - Left Horizontal Stabilizer General Visual (Internal)
Figure 231/05-41-03-990-837

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-823

32. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Right

(Figure 232)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
341	Right Horizontal Stabilizer - Removable Leading Edge


B. Zonal Inspection

SUBTASK 05-41-03-210-023

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Leading Edge - Right.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

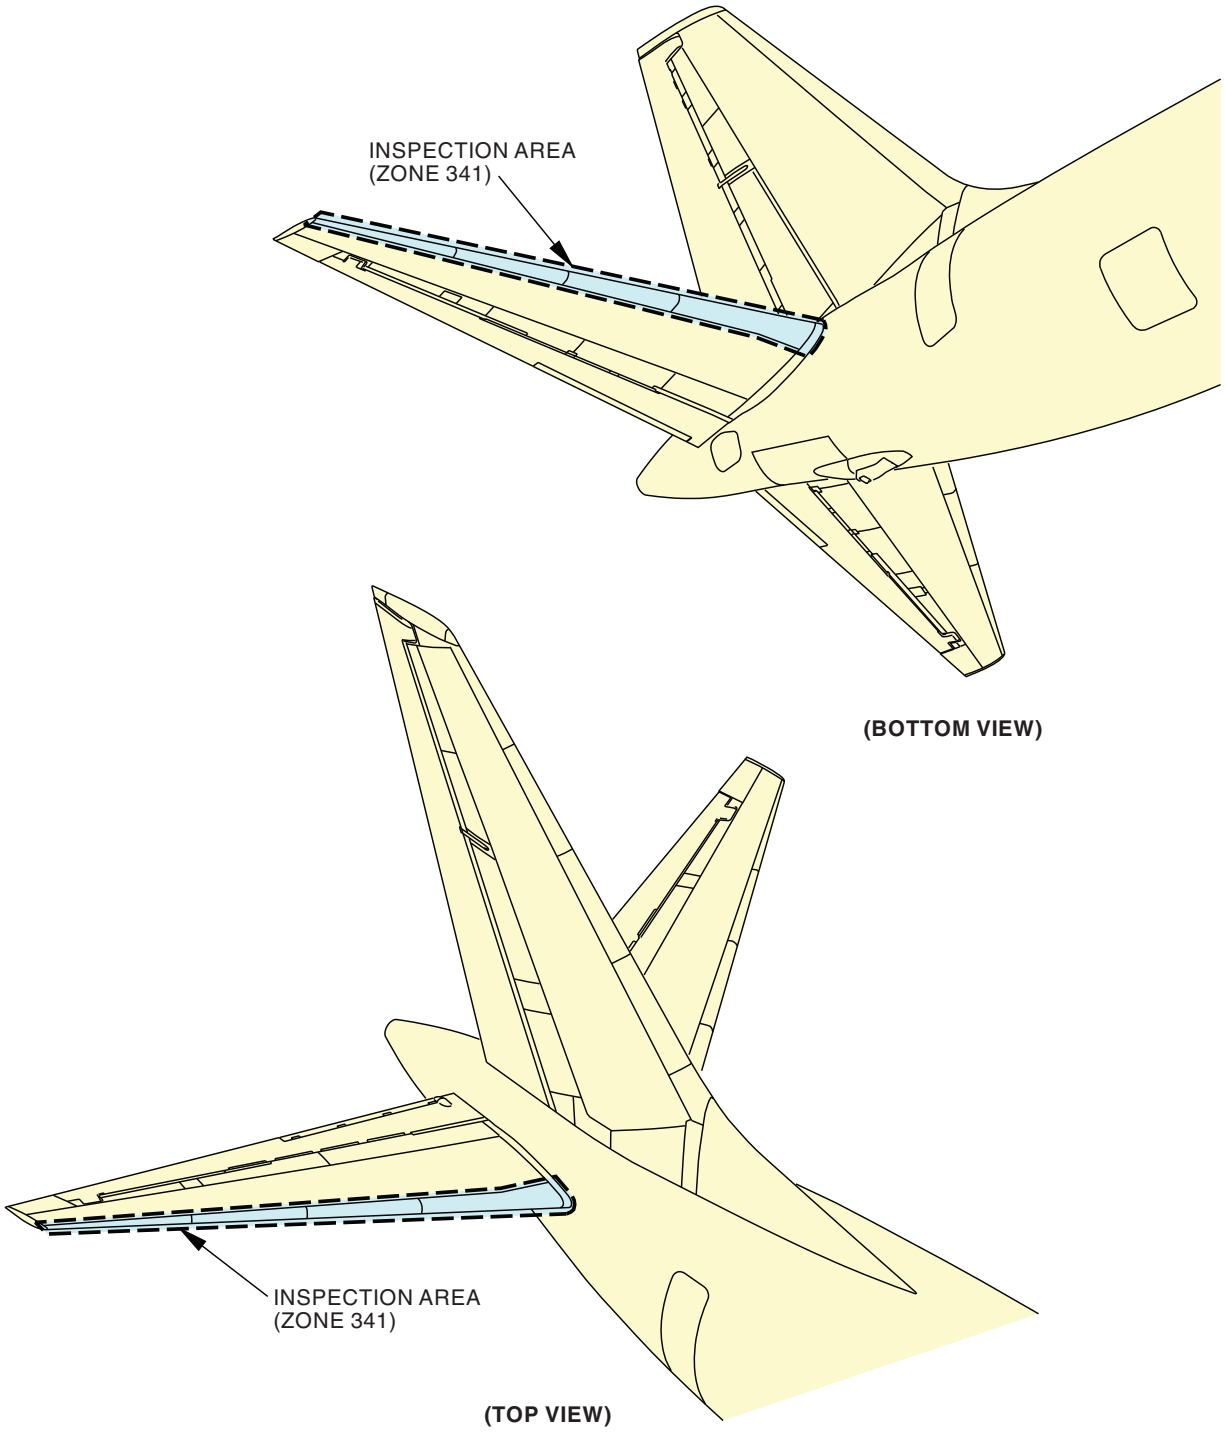

Leading Edge - Right Horizontal Stabilizer General Visual (External)
Figure 232/05-41-03-990-823

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-838

33. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Leading Edge - Right

(Figure 233)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
341	Right Horizontal Stabilizer - Removable Leading Edge

B. Access Panels

Number	Name/Location
341AR	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

C. Zonal Inspection

SUBTASK 05-41-03-010-016

(1) Open these access panels:

Number	Name/Location
341AR	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

SUBTASK 05-41-03-210-038

(2) Perform an internal zonal inspection (GVI) of the Horizontal Stabilizer - Leading Edge - Right.


SUBTASK 05-41-03-410-016

(3) Close these access panels:

Number	Name/Location
341AR	PANEL ASSY - HORIZONTAL STAB. STRAKELET SKIN
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

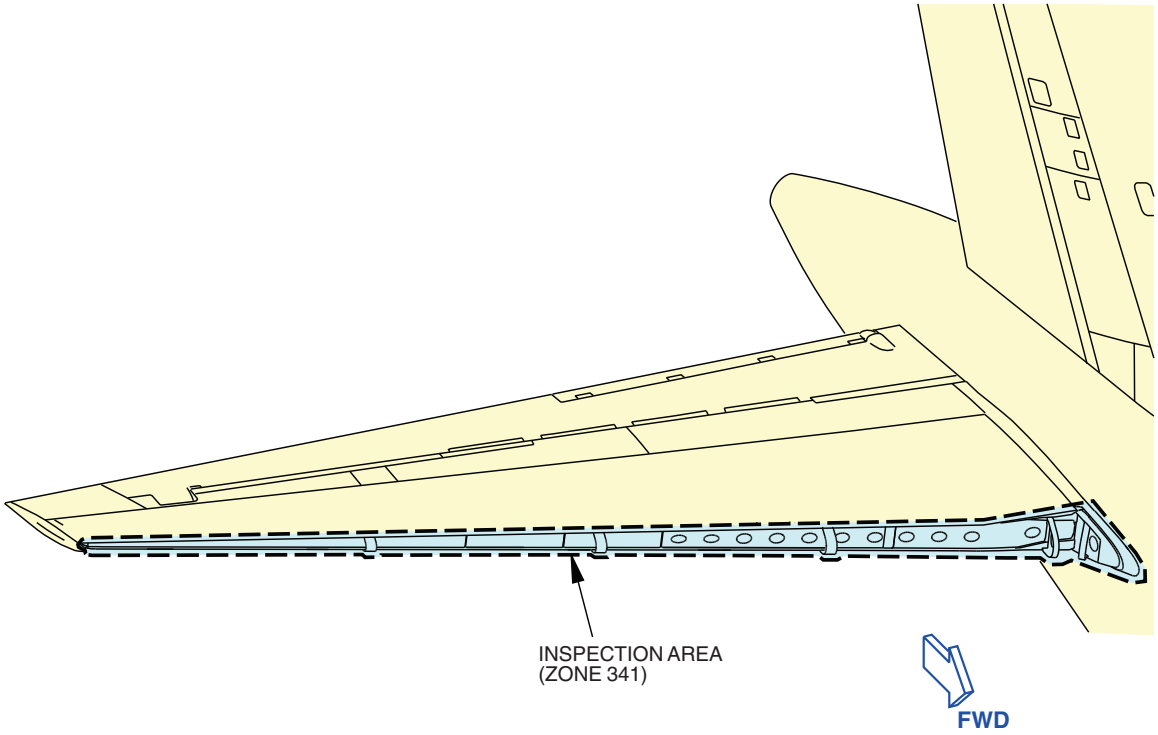

2546208 S0000601548_V2

Right Horizontal Stabilizer - Leading Edge General Visual (Internal Zonal)
Figure 233/05-41-03-990-838

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-824

34. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Right

(Figure 234)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81


B. Zonal Inspection

SUBTASK 05-41-03-210-024

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Front Spar to Rear Spar - Right.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

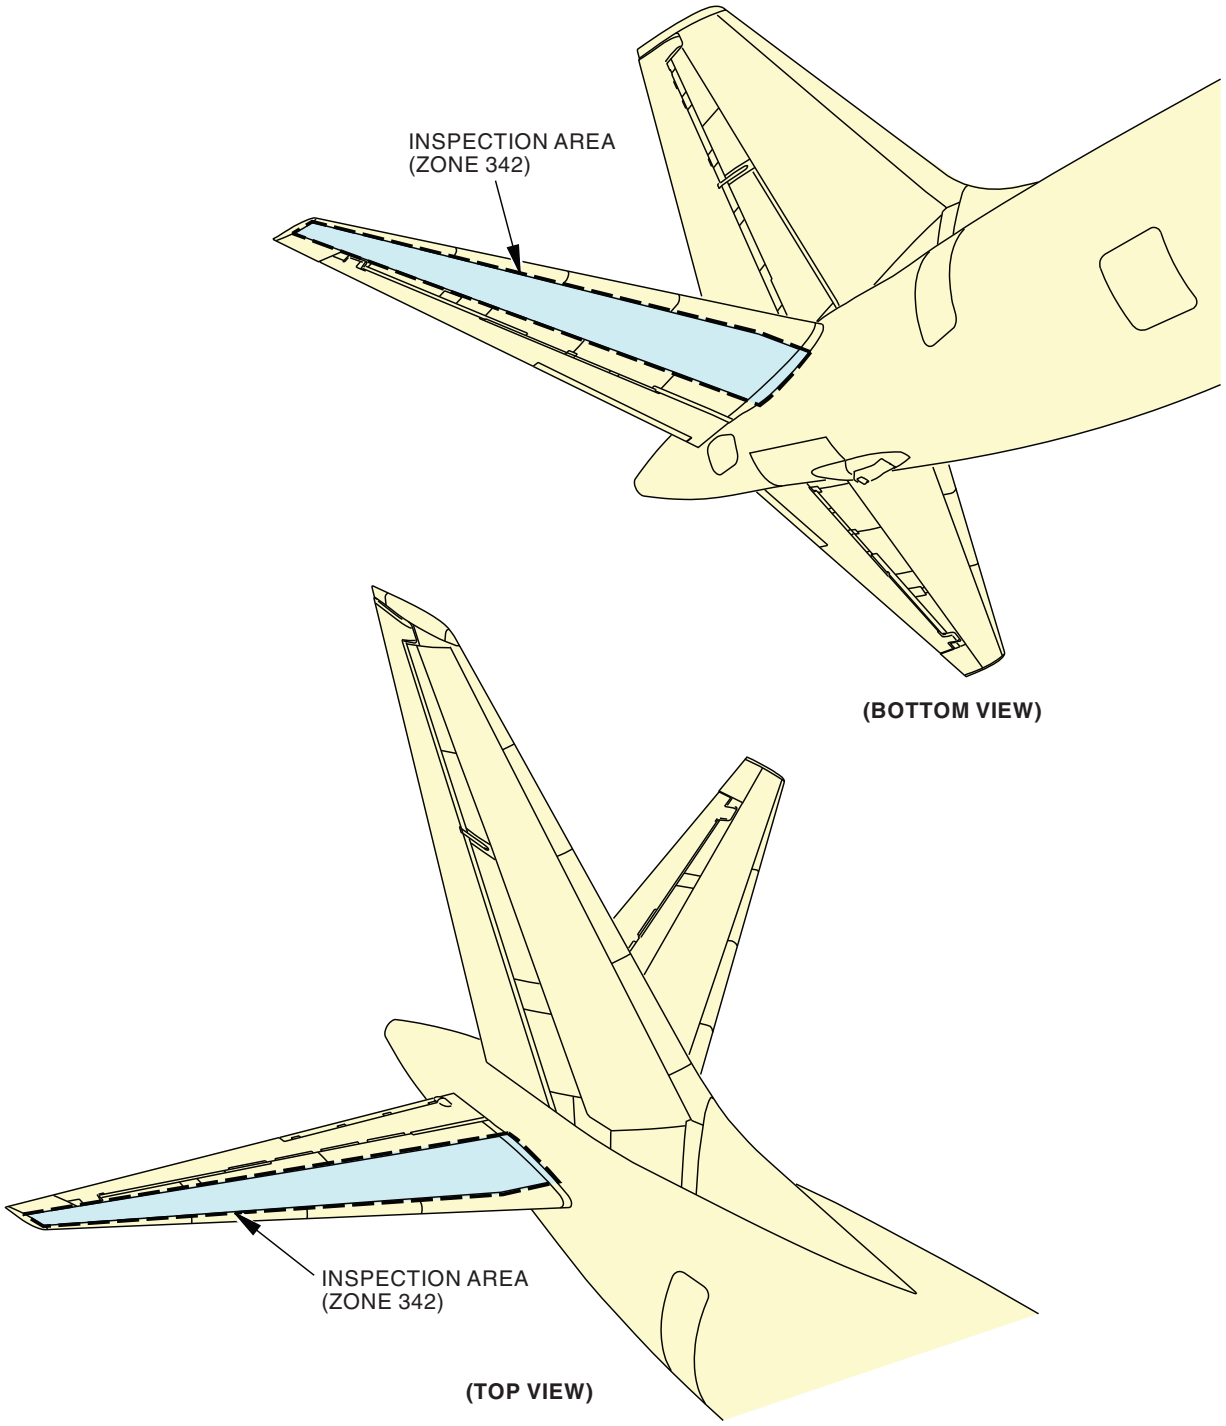

Front Spar to Rear Spar - Right Horizontal Stabilizer General Visual (External)
Figure 234/05-41-03-990-824

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-825

35. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Front Spar to Rear Spar - Right

(Figure 235)

NOTE: This procedure is a scheduled maintenance task.

A. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

B. Location Zones

Zone	Area
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

C. Access Panels

Number	Name/Location
342AT	Gap Cover, Horizontal Stabilizer

D. Zonal Inspection

SUBTASK 05-41-03-010-010

(1) Open this access panel:

Number	Name/Location
342AT	Gap Cover, Horizontal Stabilizer

NOTE: As an alternate to the access provided, access panel 342AB can be removed for inspection from lower side of stabilizer.

SUBTASK 05-41-03-210-025

(2) Perform an internal zonal inspection (GVI) of the Inboard Horizontal Stabilizer - Front Spar to Rear Spar - Right.

SUBTASK 05-41-03-410-010

(3) Close this access panel:


Number	Name/Location
342AT	Gap Cover, Horizontal Stabilizer

SUBTASK 05-41-03-390-006

(4) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

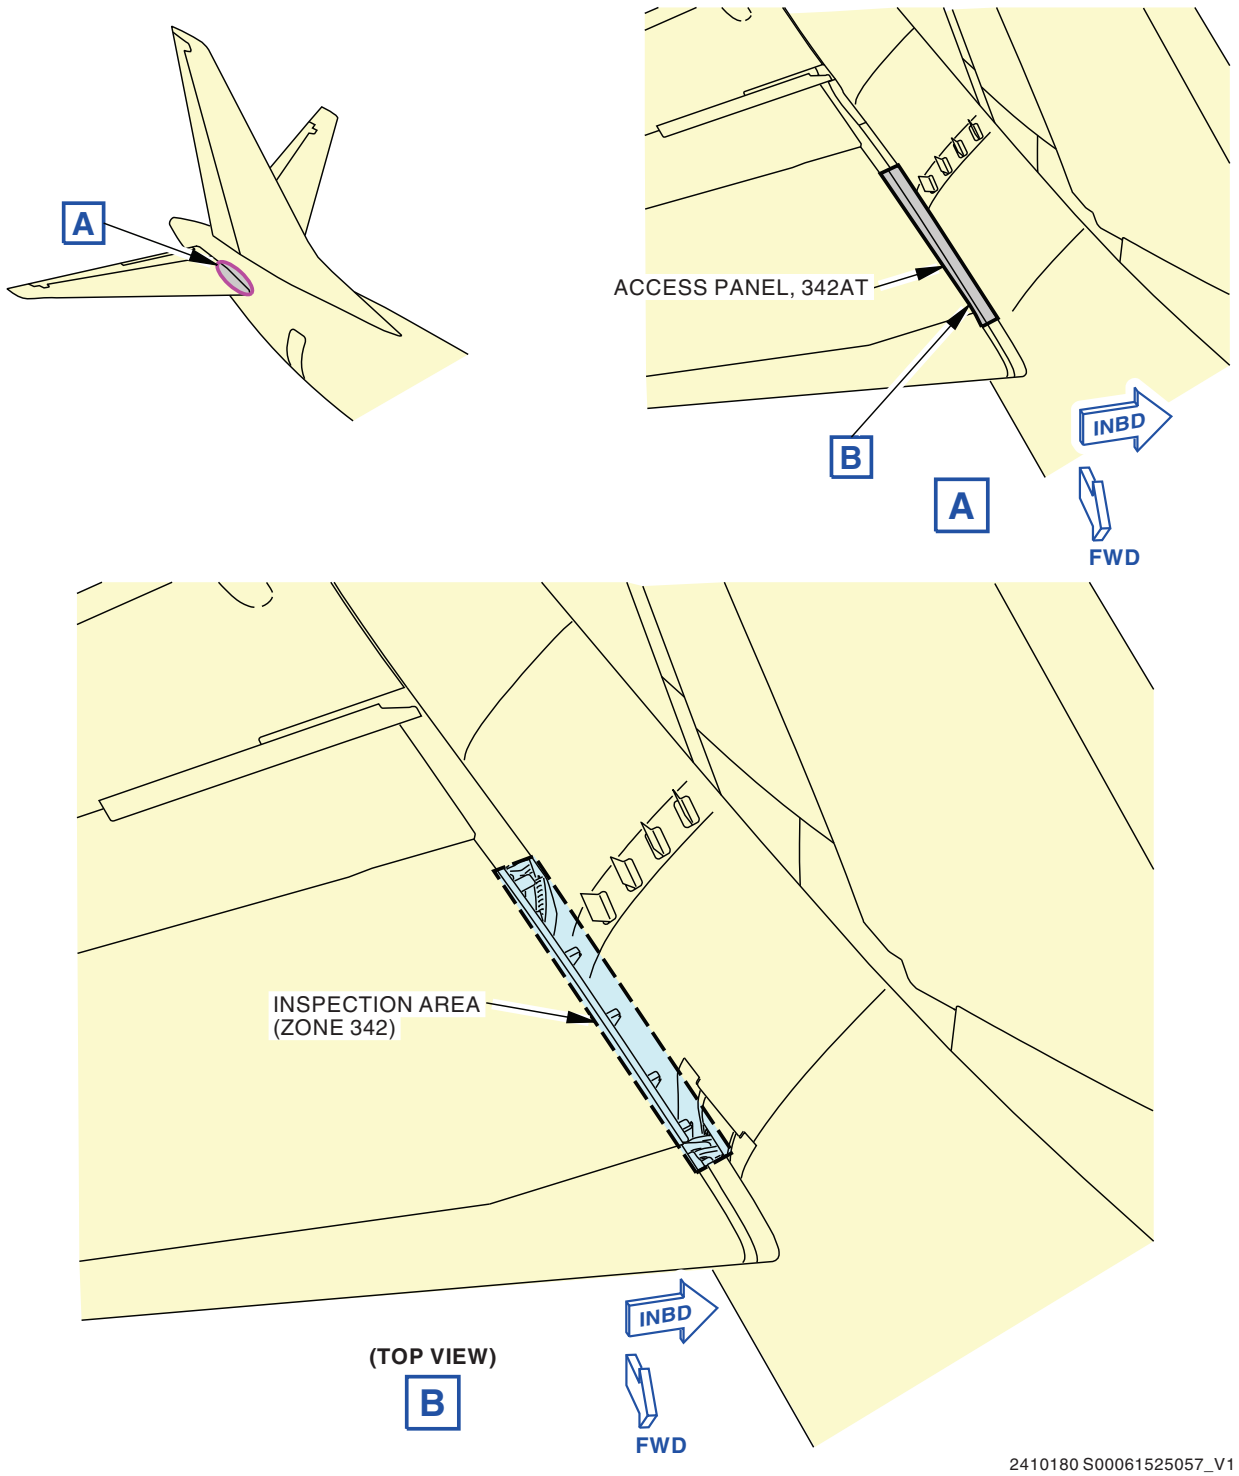

Front Spar to Rear Spar - Right Horizontal Stabilizer General Visual (Internal)
Figure 235/05-41-03-990-825

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-03-210-826

36. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Right

(Figure 236)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required Enhanced Zonal Analysis Procedure (EZAP) - derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-31-00-800-802	Pressure from the Elevator Hydraulic Systems A and B Removal (P/B 201)
27-31-00-840-802	Putting the Elevator Systems A and B Back to the Condition Before the Pressure Removal (P/B 201)
55-10-11-000-801	Balance Bay Panels - Removal (P/B 401)
55-10-11-400-801	Balance Bay Panels - Installation (P/B 401)

C. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

D. Location Zones

Zone	Area
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

E. Access Panels

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

F. Zonal Inspection

SUBTASK 05-41-03-800-002

(1) If hydraulic systems A and B have pressure, do this task: Pressure from the Elevator Hydraulic Systems A and B Removal, TASK 27-31-00-800-802.

SUBTASK 05-41-03-010-011

(2) Open the applicable trailing edge access panels for the horizontal stabilizer (TASK 55-10-11-000-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Open these access panels:

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

SUBTASK 05-41-03-210-026

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-03-210-041

(4) Perform an internal zonal inspection (GVI) of the Horizontal Stabilizer - Rear Spar to Trailing Edge - Right (EZAP).

SUBTASK 05-41-03-910-008

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

SUBTASK 05-41-03-410-011

(6) Close the applicable trailing edge access panels for the horizontal stabilizer (TASK 55-10-11-400-801).

Close these access panels:

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

SUBTASK 05-41-03-390-007


(7) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

SUBTASK 05-41-03-840-002

(8) If hydraulic pressure in systems A and B is necessary to be restored, do this task: Putting the Elevator Systems A and B Back to the Condition Before the Pressure Removal, TASK 27-31-00-840-802.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

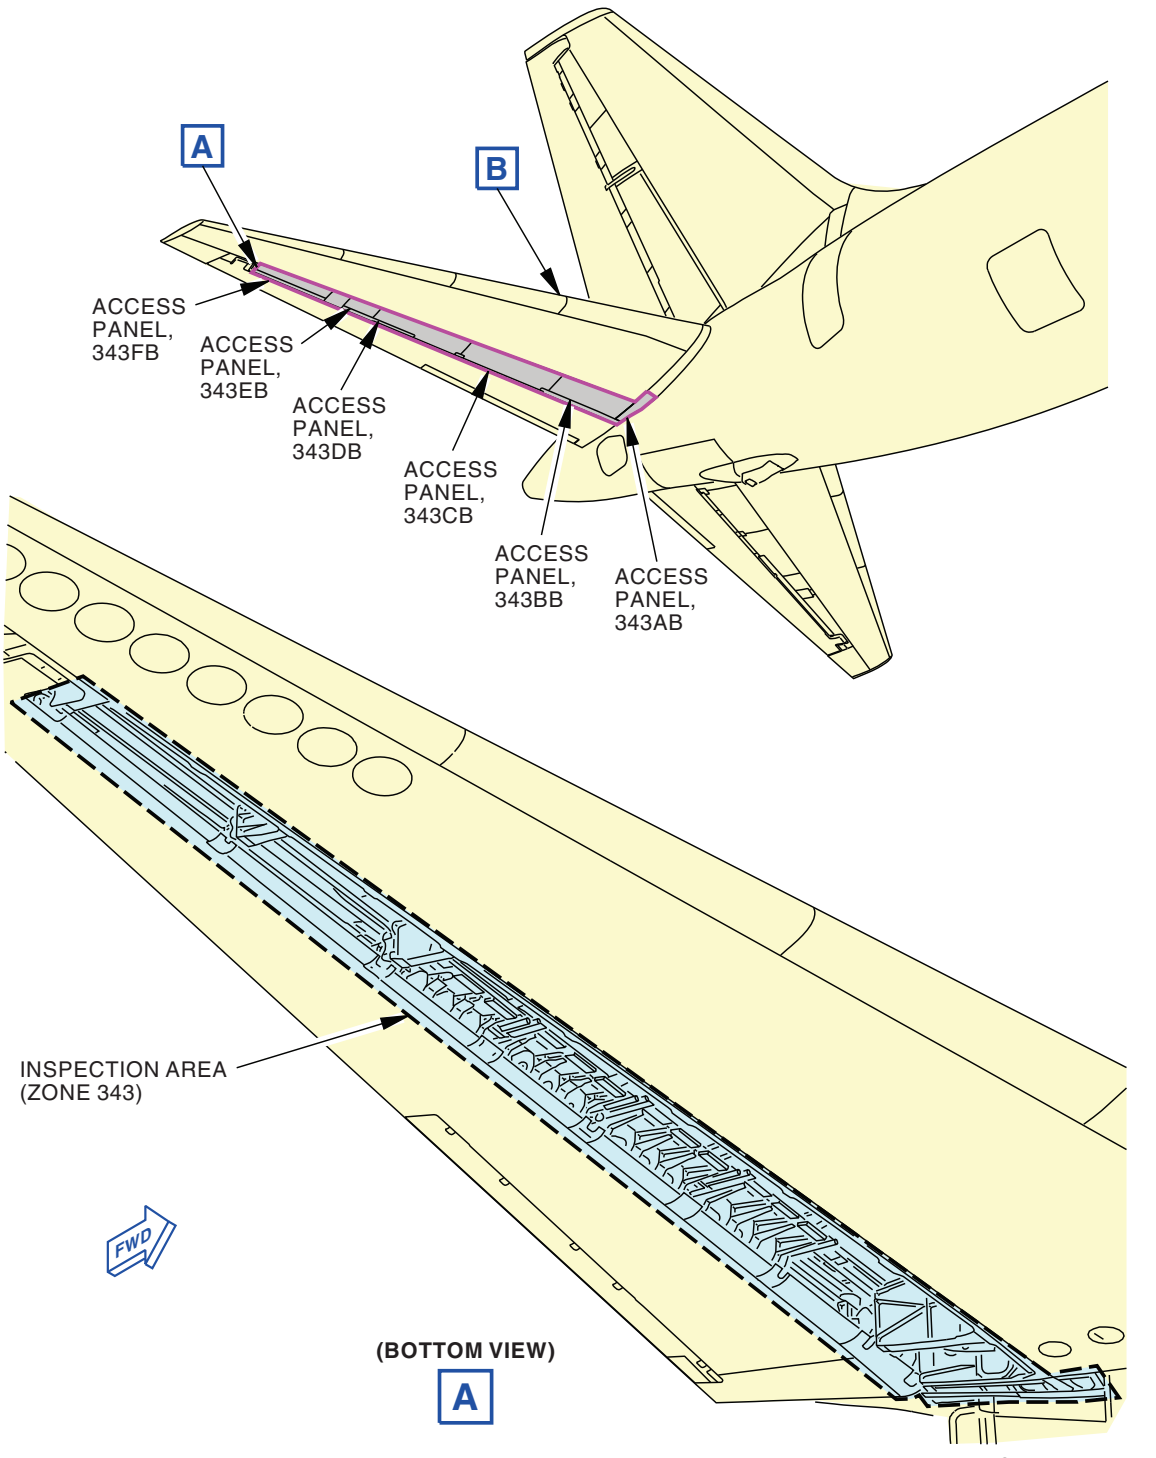

Rear Spar to Trailing Edge - Right Horizontal Stabilizer General Visual (Internal)
Figure 236/05-41-03-990-826 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

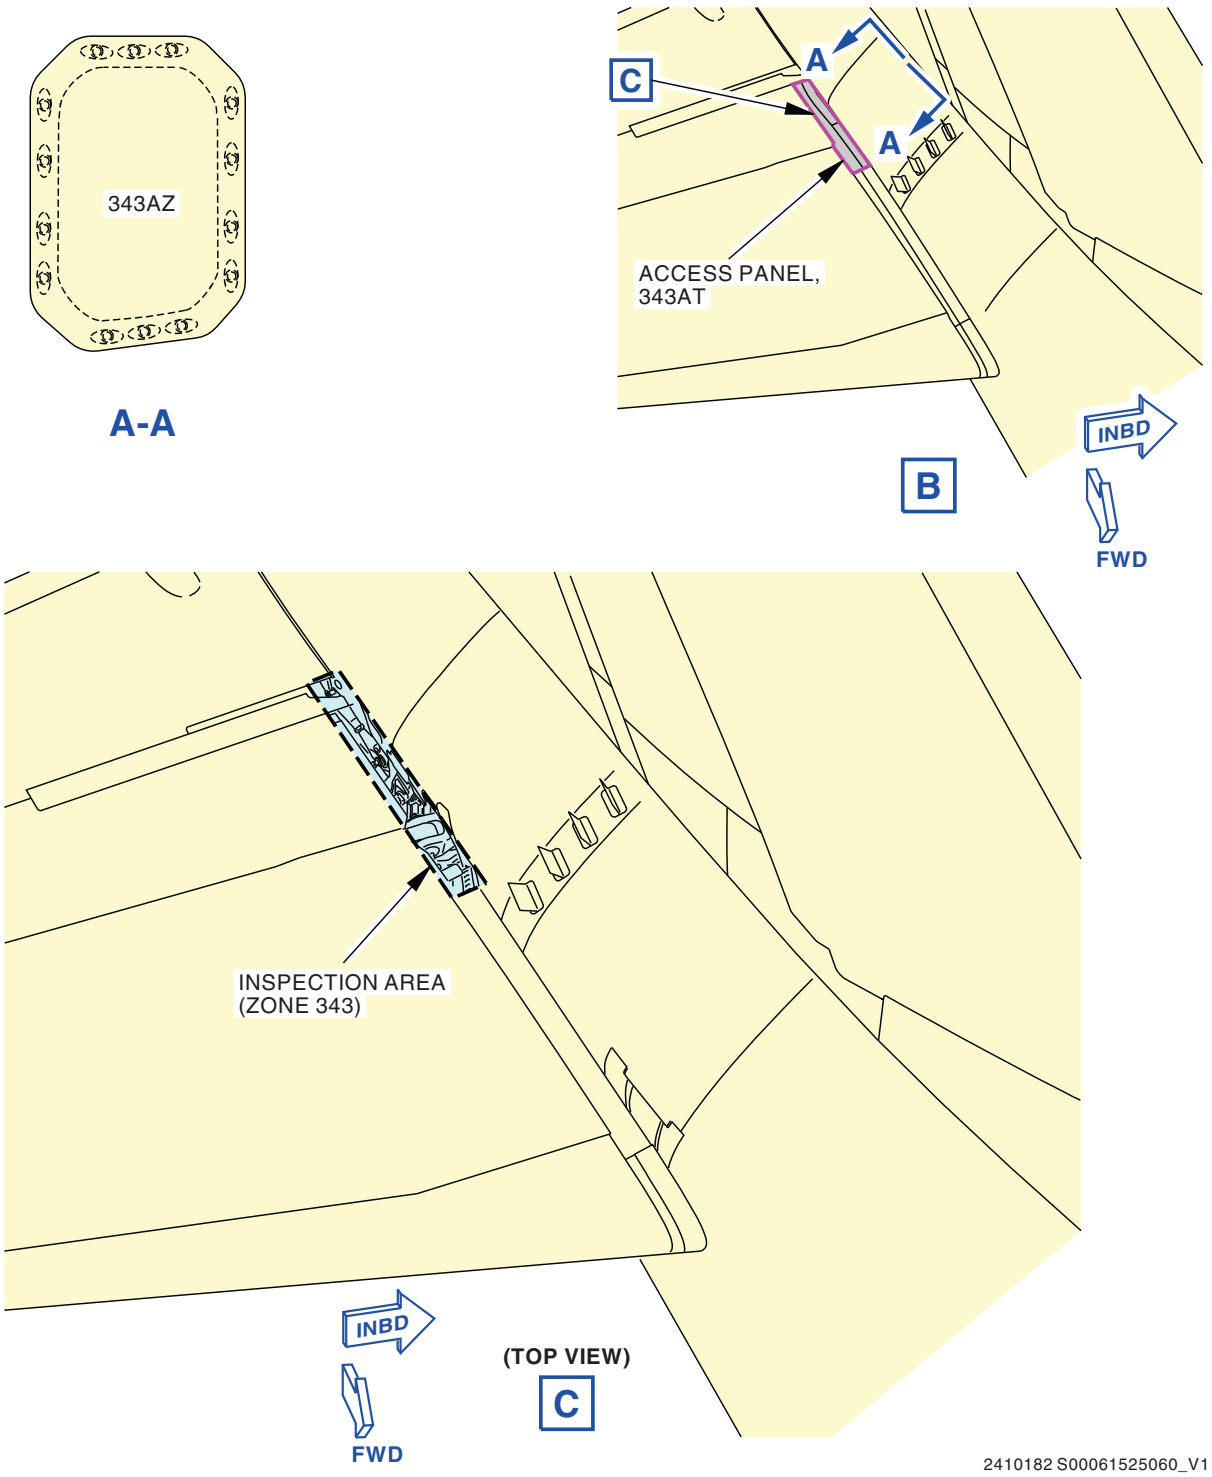

Rear Spar to Trailing Edge - Right Horizontal Stabilizer General Visual (Internal)
Figure 236/05-41-03-990-826 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-827

37. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Rear Spar to Trailing Edge - Right

(Figure 237)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge


B. Zonal Inspection

SUBTASK 05-41-03-210-027

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Rear Spar to Trailing Edge - Right.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

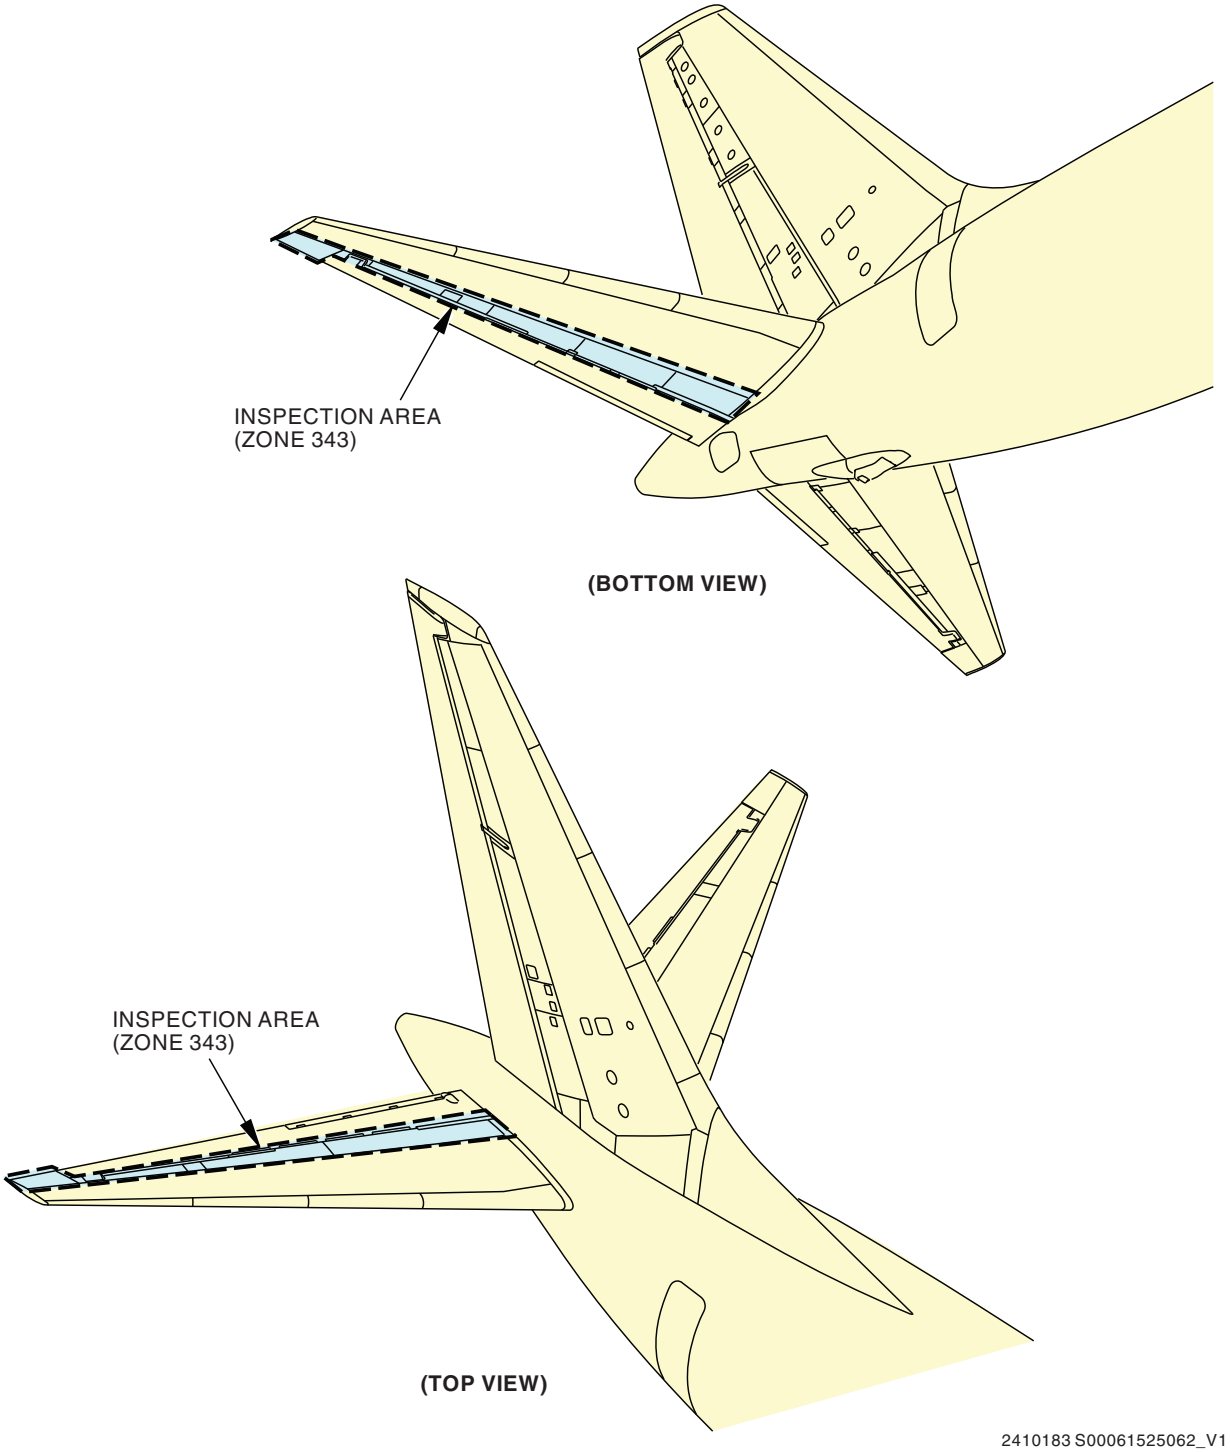

Rear Spar to Trailing Edge - Right Horizontal Stabilizer General Visual (External)
Figure 237/05-41-03-990-827

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-828

38. EXTERNAL - ZONAL (GVI): Horizontal Stabilizer - Elevator - Right

(Figure 238)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
344	Right Horizontal Stabilizer - Elevator


B. Zonal Inspection

SUBTASK 05-41-03-210-028

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Elevator - Right.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

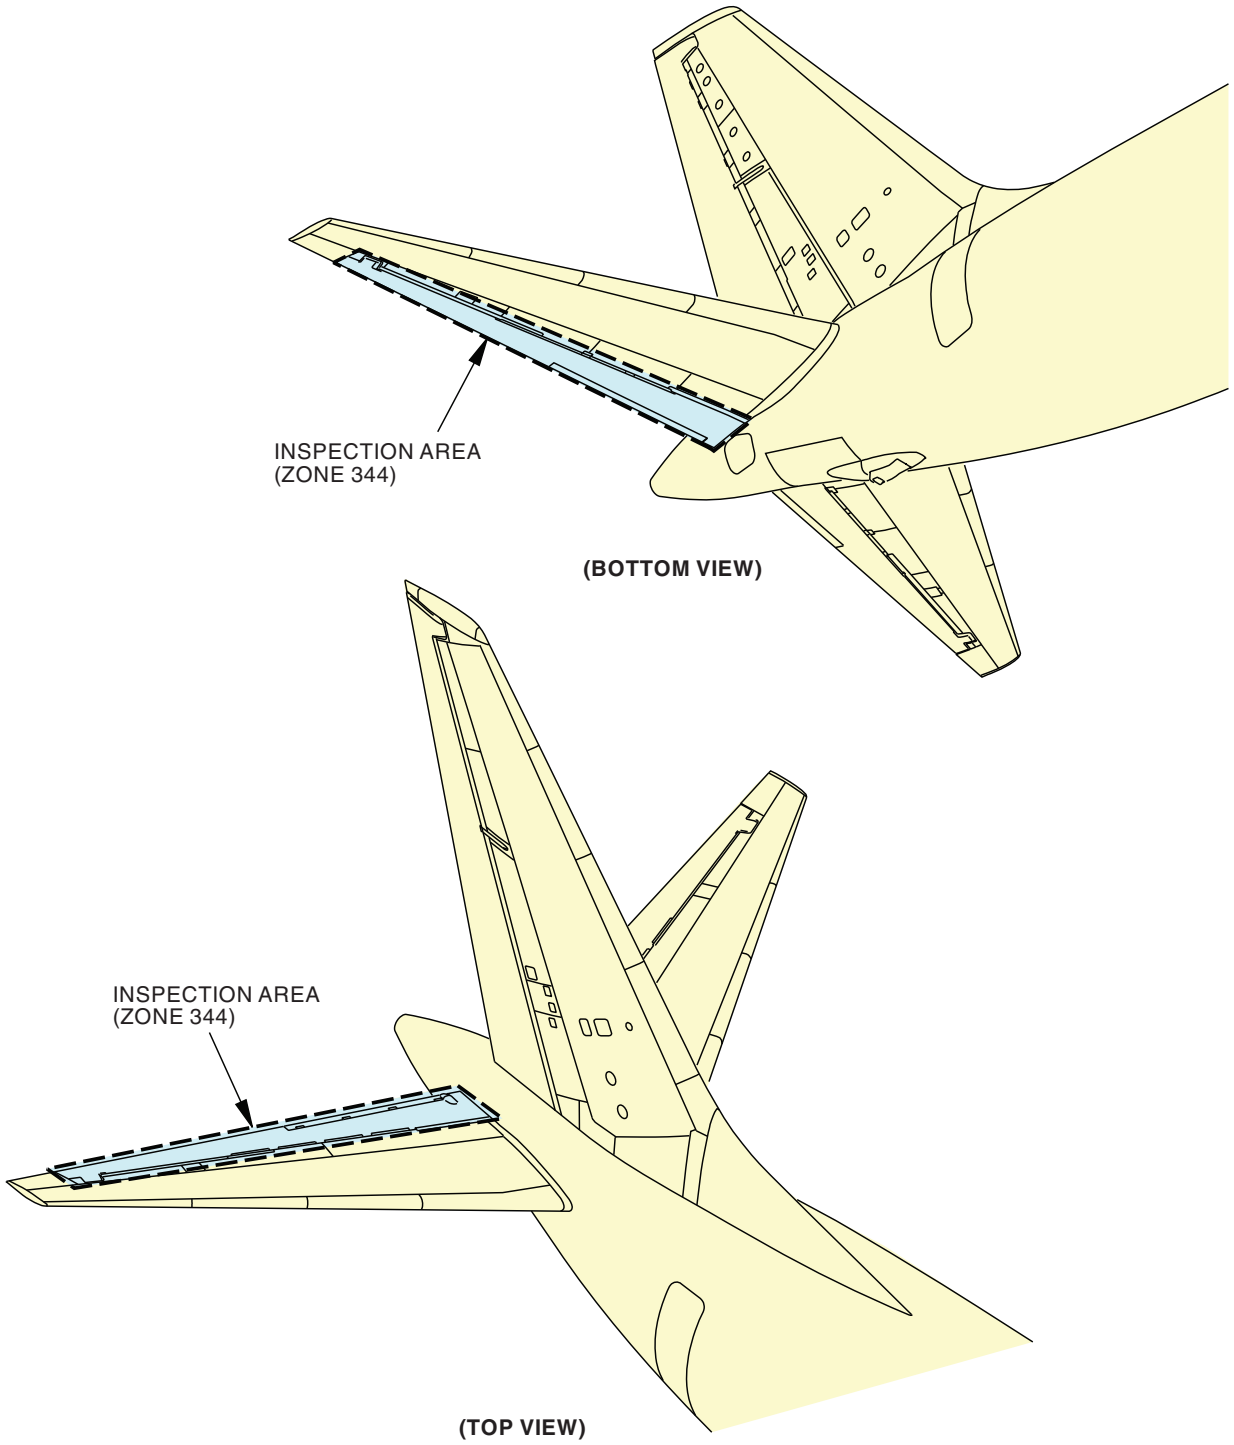

Elevator - Right Horizontal Stabilizer General Visual (External)
Figure 238/05-41-03-990-828

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-829

39. EXTERNAL - ZONAL (GV): Horizontal Stabilizer - Stabilizer Tip - Right

(Figure 239)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
345	Right Horizontal Stabilizer - Tip


B. Zonal Inspection

SUBTASK 05-41-03-210-029

(1) Perform an external zonal inspection (GVI) of the Horizontal Stabilizer - Stabilizer Tip - Right.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

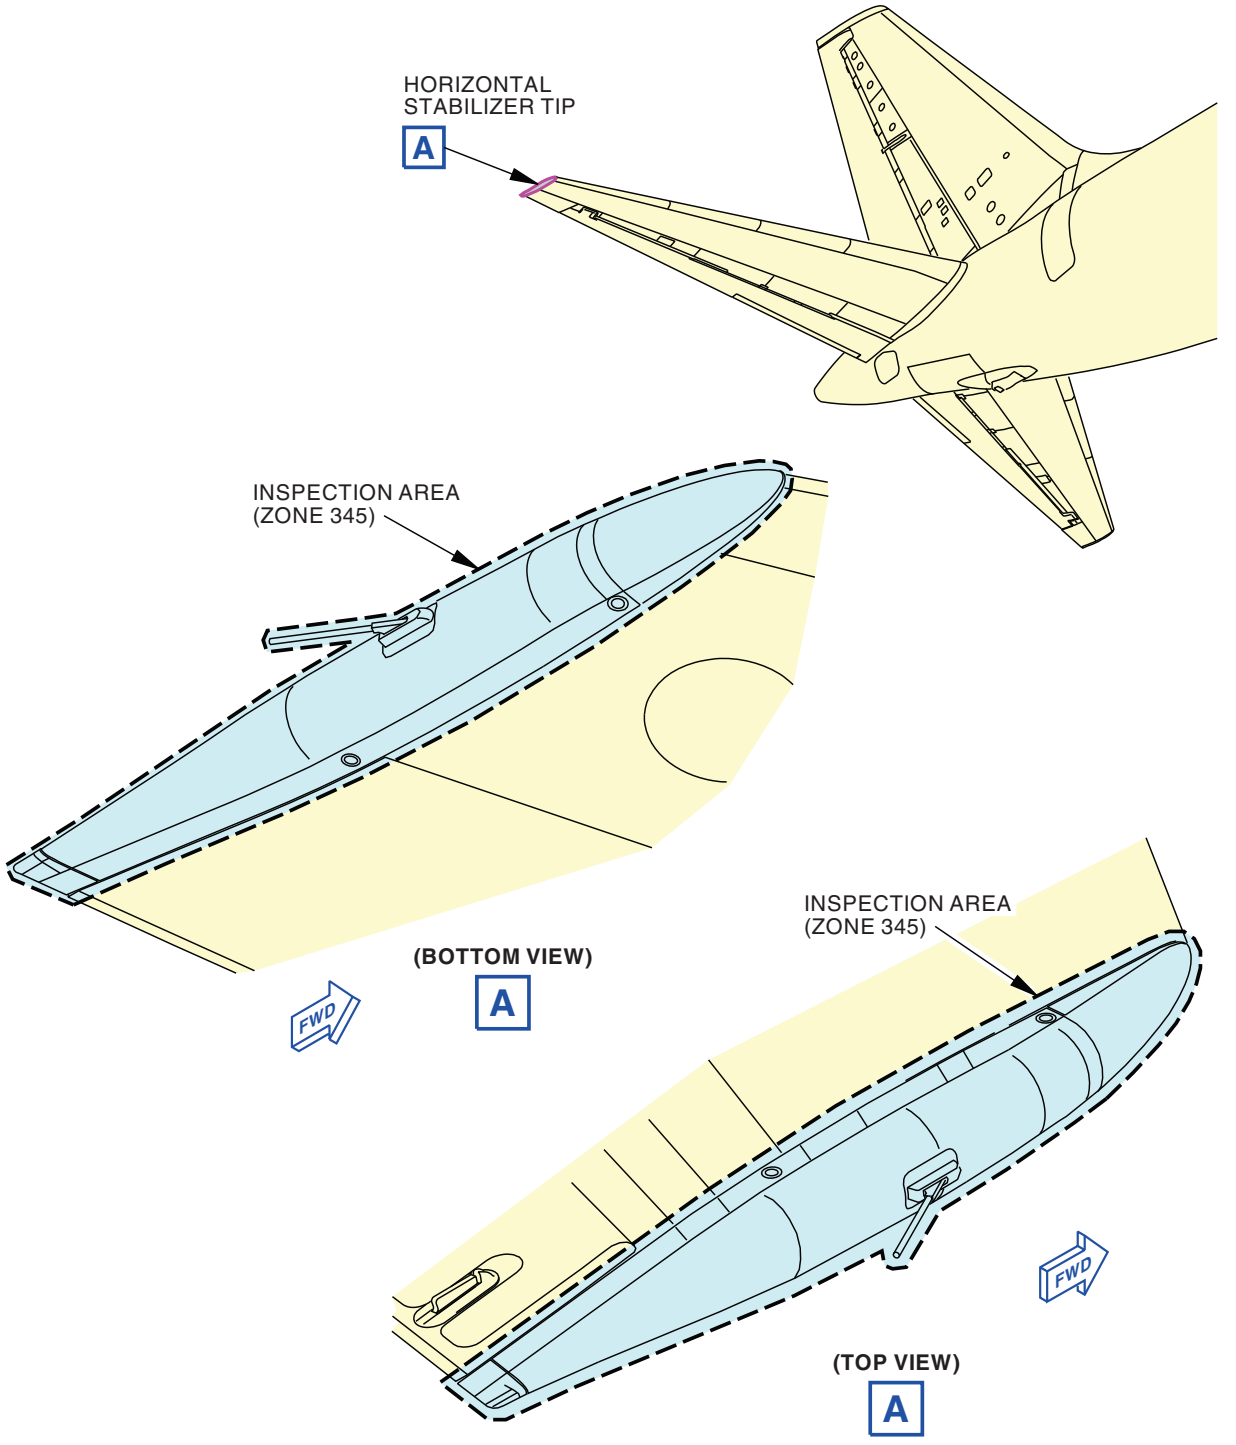

Stabilizer Tip - Right Horizontal Stabilizer General Visual (External)
Figure 239/05-41-03-990-829

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-03-210-839

40. INTERNAL - ZONAL (GVI): Horizontal Stabilizer - Stabilizer Tip - Right

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
345	Right Horizontal Stabilizer - Tip

B. Access Panels

Number	Name/Location
345A	Horizontal Stabilizer, Removable Stabilizer Tip

C. Zonal Inspection

SUBTASK 05-41-03-010-015

(1) Open this access panel:

Number	Name/Location
345A	Horizontal Stabilizer, Removable Stabilizer Tip

SUBTASK 05-41-03-210-039

(2) Perform an internal zonal inspection (GVI) of the Horizontal Stabilizer - Stabilizer Tip - Right.


SUBTASK 05-41-03-410-015

(3) Close this access panel:

Number	Name/Location
345A	Horizontal Stabilizer, Removable Stabilizer Tip

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

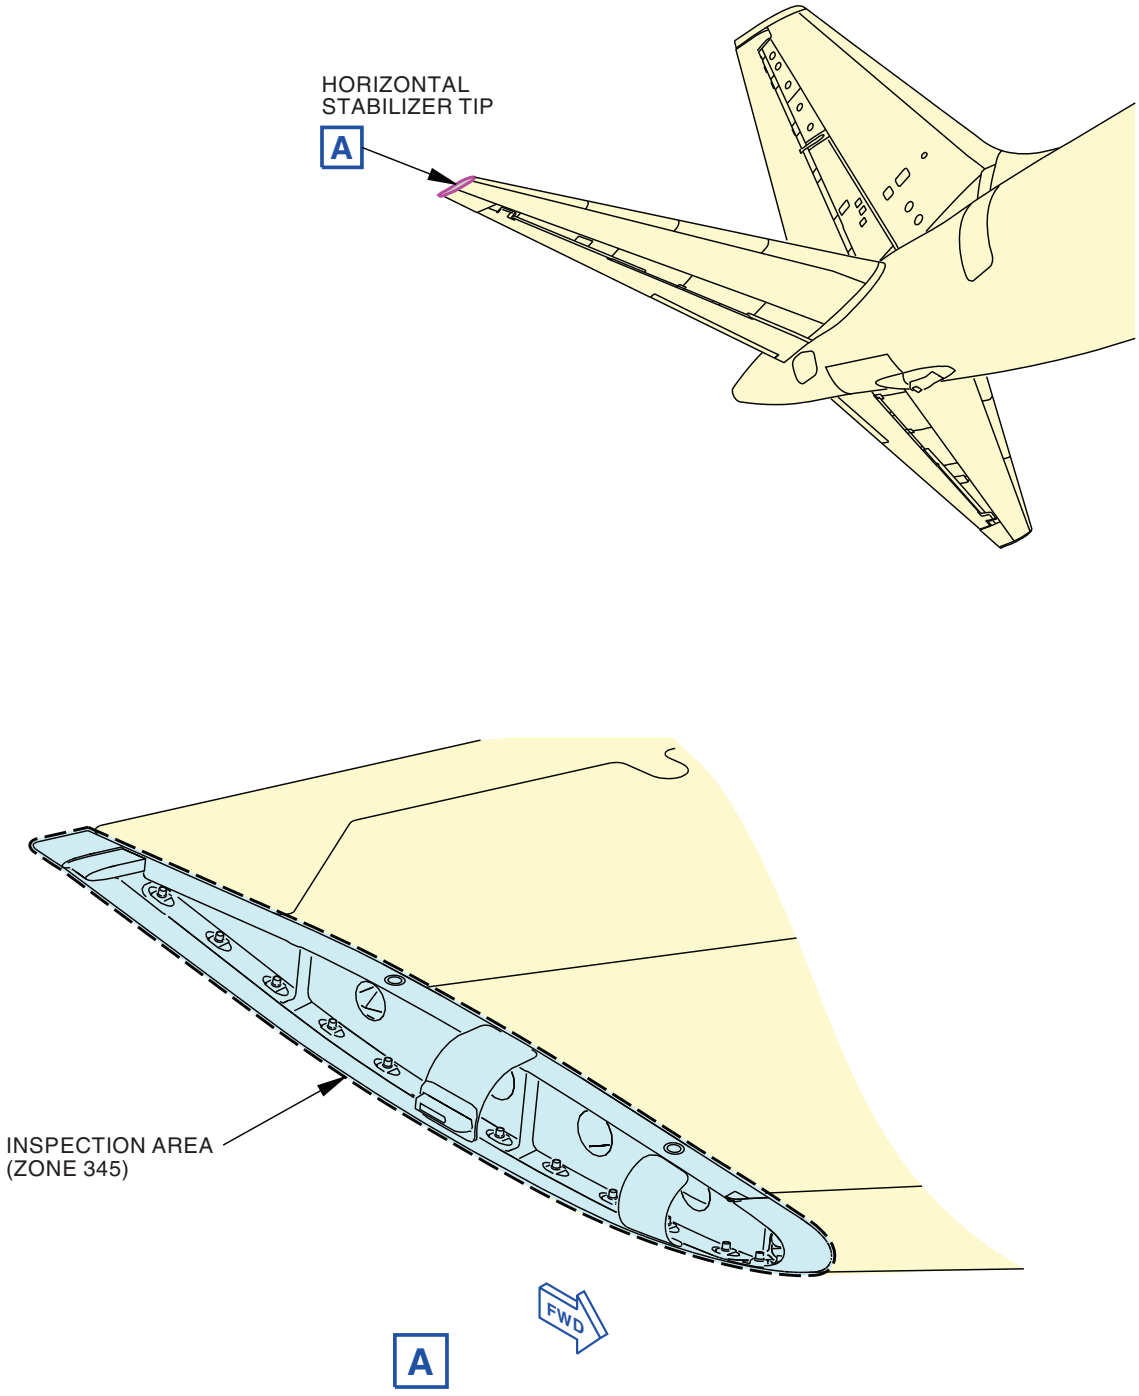

Stabilizer Tip - Right Horizontal Stabilizer General Visual (Internal)
Figure 240/05-41-03-990-839

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-801

1. EXTERNAL - ZONAL (GVI): Powerplant No. 1

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
400	Powerplant and Nacelle Struts
411	Engine 1 - Engine
412	Engine 1 - Nose Inlet Cowl
413	Engine 1 - Fan Cowl, Left
414	Engine 1 - Fan Cowl, Right
415	Engine 1 - Thrust Reverser, Left
416	Engine 1 - Thrust Reverser, Right
417	Engine 1 - Primary Exhaust Nozzle and Plug
431	Engine 1 - Forward Strut Fairing
432	Engine 1 - Fan Cowl Support Beam
433	Engine 1 - Strut Torque Box
434	Engine 1 - Aft Strut Fairing


B. Zonal Inspection

SUBTASK 05-41-04-210-001

(1) Perform an external zonal inspection (GVI) of Engine No. 1 and Engine No. 1 Strut Fairings, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. No additional access panels required.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

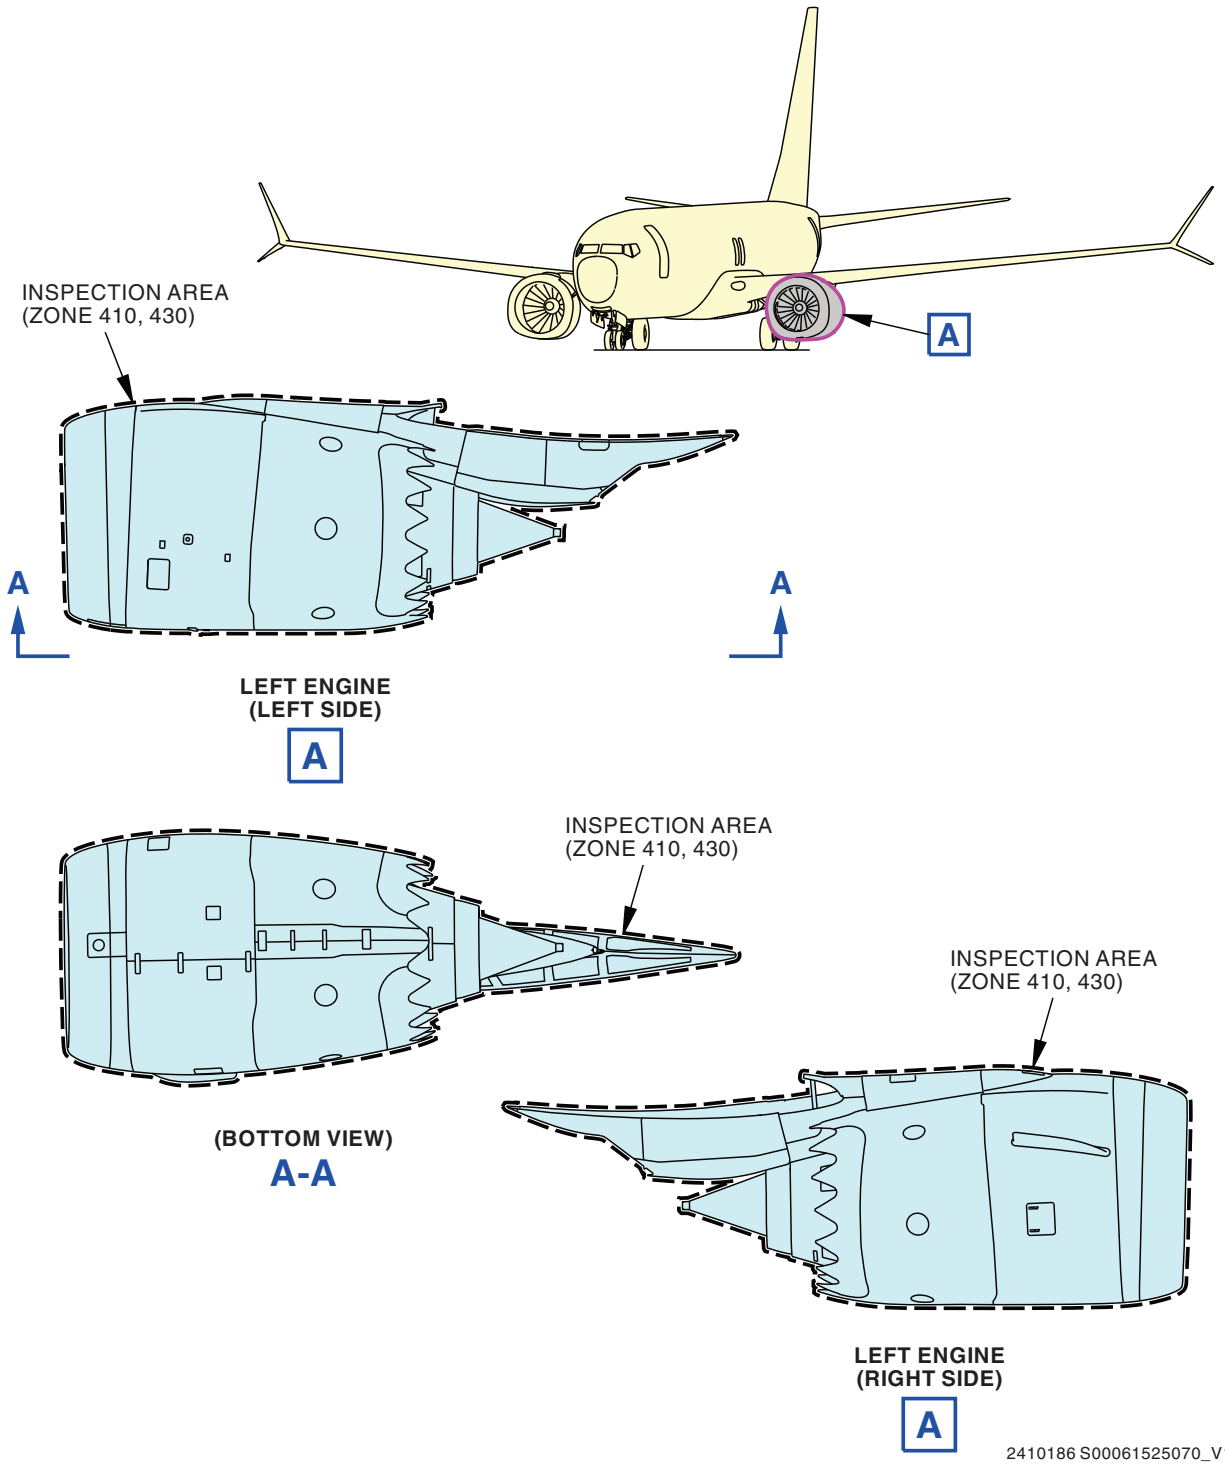

Left Engine (Outer Exterior Surfaces) General Visual (External)
Figure 201/05-41-04-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-802

2. EXTERNAL - ZONAL (GVI): Engine No. 1

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
71-11-04-010-801-G00	Open the Fan Cowl Panels (Selection) (P/B 201)
71-11-04-410-801-G00	Close the Fan Cowl Panels (Selection) (P/B 201)
78-31-00-010-801-G00	Open the Thrust Reverser (Selection) (P/B 201)
78-31-00-010-802-G00	Close the Thrust Reverser (Selection) (P/B 201)

C. Location Zones

Zone	Area
411	Engine 1 - Engine
412	Engine 1 - Nose Inlet Cowl

D. Access Panels

Number	Name/Location
413	Left Fan Cowl, Engine 1
414	Right Fan Cowl, Engine 1
415	Left Thrust Reverser, Engine 1
416	Right Thrust Reverser, Engine 1

E. Zonal Inspection

SUBTASK 05-41-04-010-001

(1) Open these access panels:

Number	Name/Location
413	Left Fan Cowl, Engine 1
414	Right Fan Cowl, Engine 1
415	Left Thrust Reverser, Engine 1
416	Right Thrust Reverser, Engine 1

(a) Do this task: Open the Fan Cowl Panels (Selection), TASK 71-11-04-010-801-G00.

(b) Do this task: Open the Thrust Reverser (Selection), TASK 78-31-00-010-801-G00.

SUBTASK 05-41-04-210-002

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an external zonal inspection (GVI) of the Engine No. 1 Engine Fan, Core Sections and Inlet. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-04-910-001

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-04-410-001

(5) Close these access panels:


Number	Name/Location
413	Left Fan Cowl, Engine 1
414	Right Fan Cowl, Engine 1
415	Left Thrust Reverser, Engine 1
416	Right Thrust Reverser, Engine 1

(a) Do this task: Close the Fan Cowl Panels (Selection), TASK 71-11-04-410-801-G00.

(b) Do this task: Close the Thrust Reverser (Selection), TASK 78-31-00-010-802-G00.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

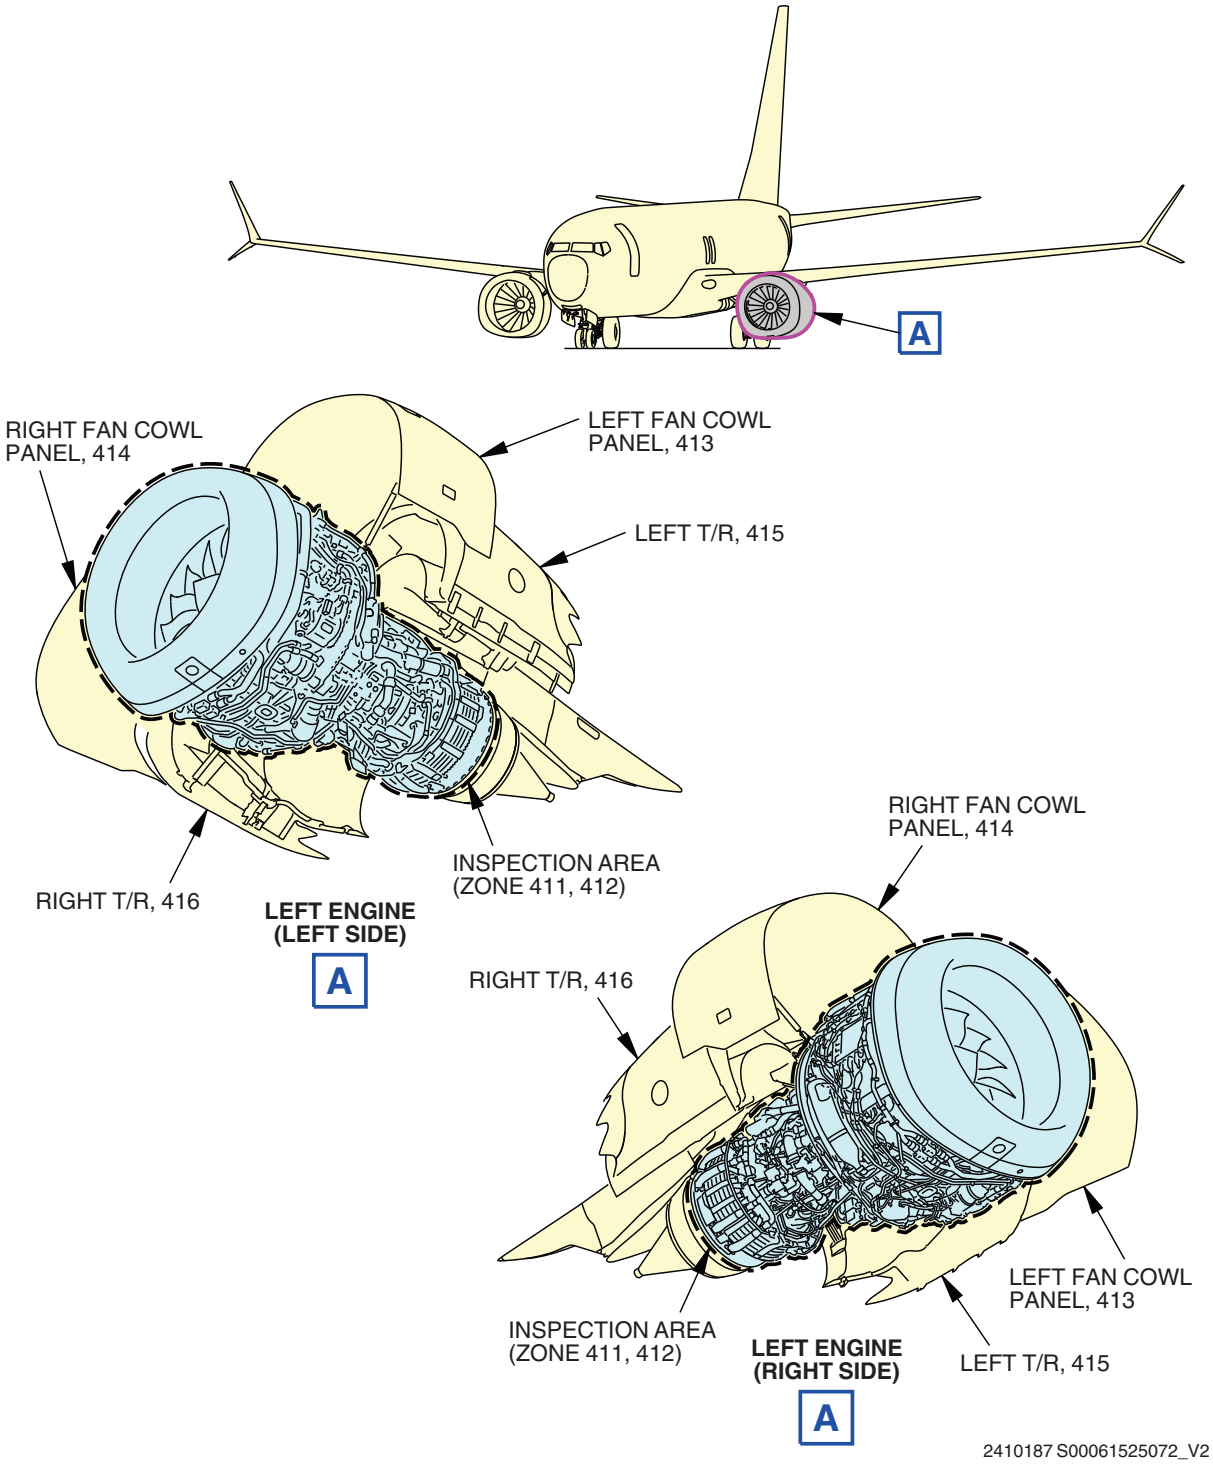

Left Engine (Inner Exterior Surfaces) General Visual (External)
Figure 202/05-41-04-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-803

3. EXTERNAL - ZONAL (GVI): Fan Cowl - Engine No. 1

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
413	Engine 1 - Fan Cowl, Left
414	Engine 1 - Fan Cowl, Right

B. Access Panels

Number	Name/Location
413	Left Fan Cowl, Engine 1
414	Right Fan Cowl, Engine 1

C. Zonal Inspection

SUBTASK 05-41-04-010-002

(1) Open these access panels:

Number	Name/Location
413	Left Fan Cowl, Engine 1
414	Right Fan Cowl, Engine 1

NOTE: Fan cowls in both open and closed positions.

SUBTASK 05-41-04-210-003

(2) Perform an external zonal inspection (GVI) of the Fan Cowl - Engine No. 1 in the open position.

NOTE: Inner and outer exterior surface.

SUBTASK 05-41-04-210-023

(3) Perform an external zonal inspection (GVI) of the Fan Cowl - Engine No. 1 in the closed position.

NOTE: Inner and outer exterior surface.


SUBTASK 05-41-04-410-002

(4) Close these access panels:

Number	Name/Location
413	Left Fan Cowl, Engine 1
414	Right Fan Cowl, Engine 1

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

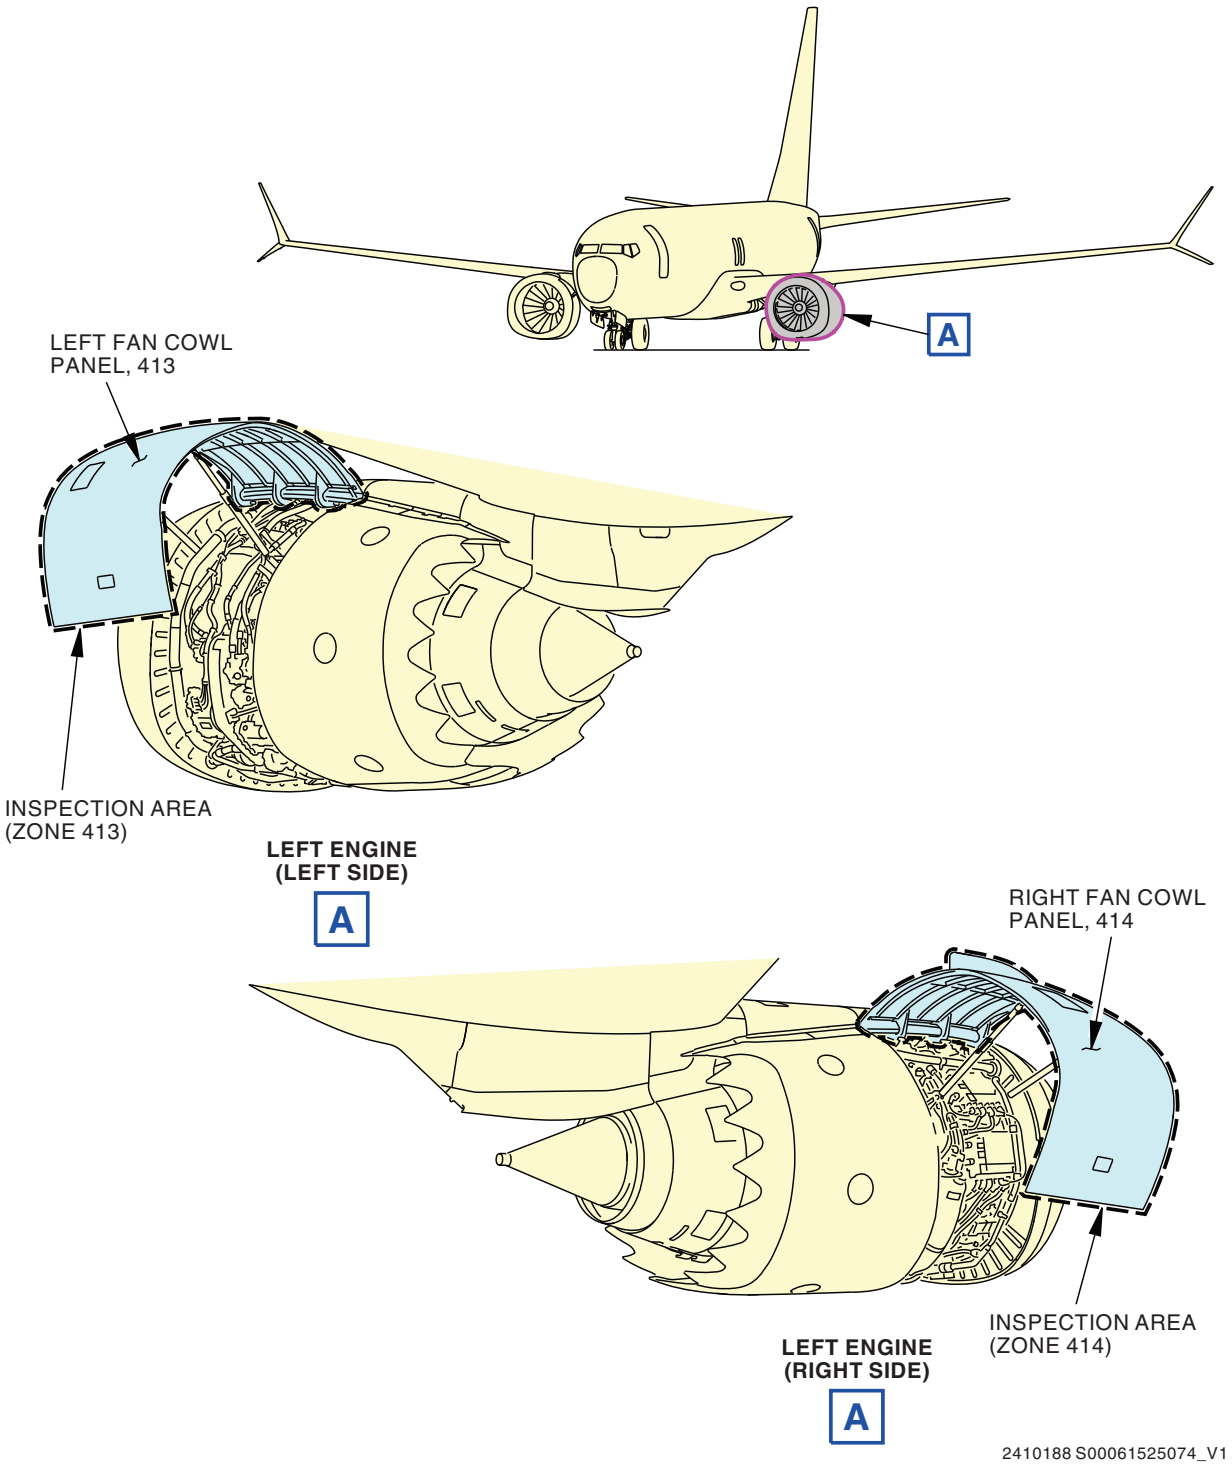

Fan Cowl - Left Engine General Visual (External)
Figure 203/05-41-04-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-804

4. EXTERNAL - ZONAL (GVI): Thrust Reverser - Engine No. 1

(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
415	Engine 1 - Thrust Reverser, Left
416	Engine 1 - Thrust Reverser, Right

B. Zonal Inspection

NOTE: Thrust reverser in stowed and deployed position.

SUBTASK 05-41-04-210-004


(1) Perform an external zonal inspection (GVI) of the Thrust Reverser in the deployed position - Engine No. 1.

SUBTASK 05-41-04-210-019

(2) Perform an external zonal inspection (GVI) of the Thrust Reverser in the stowed position - Engine No. 1.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

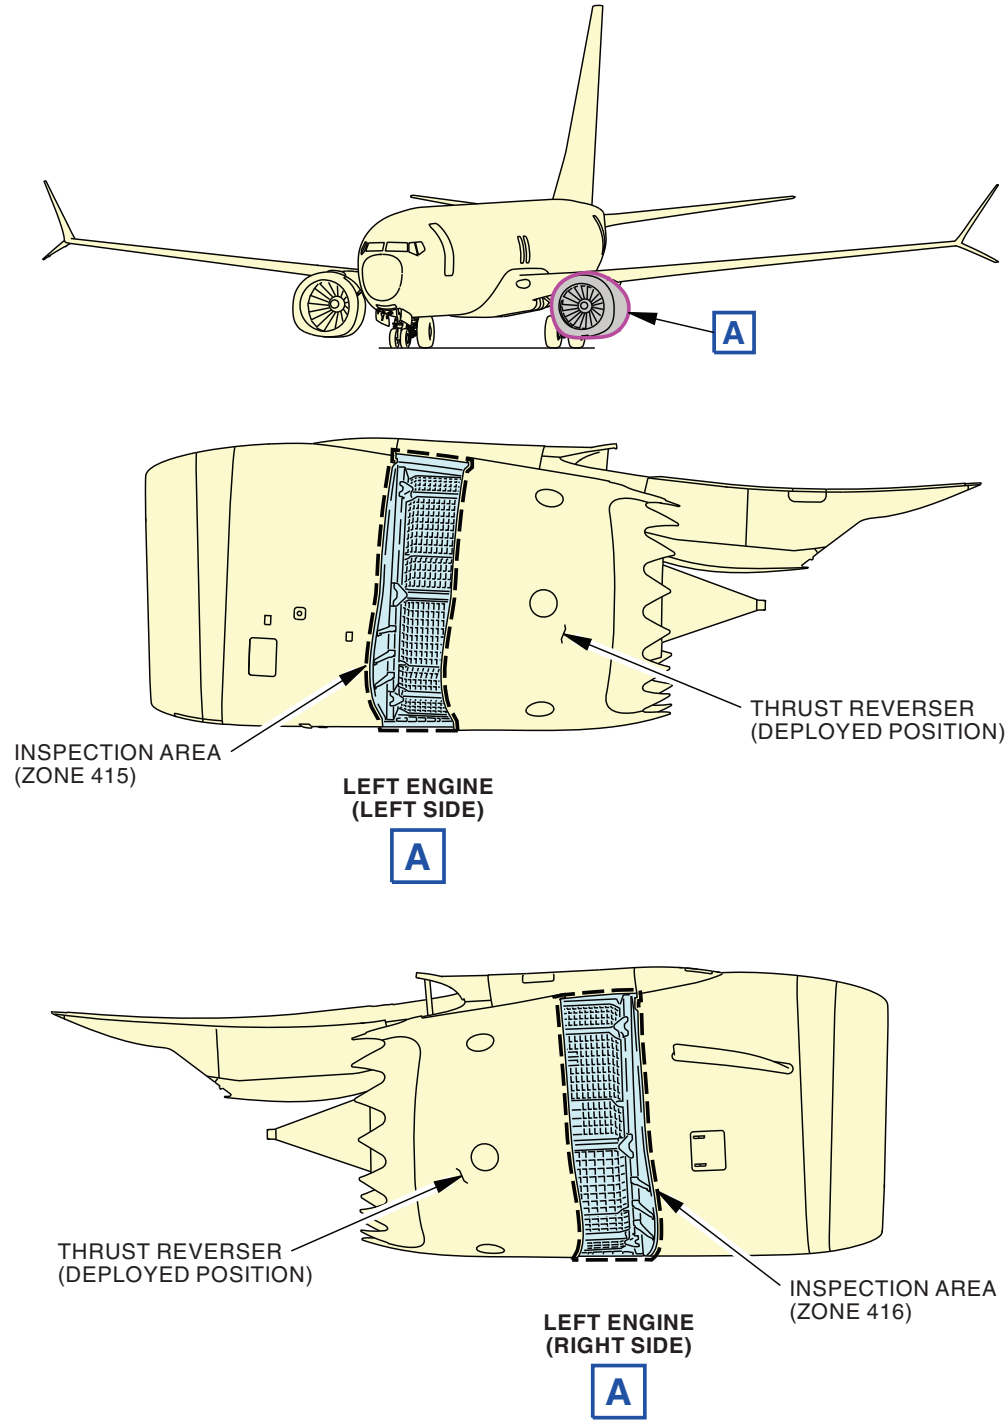

2410189 S00061525076_V1

Thrust Reverser (Stowed and Deployed Position) - Left Engine General Visual (External)
Figure 204/05-41-04-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

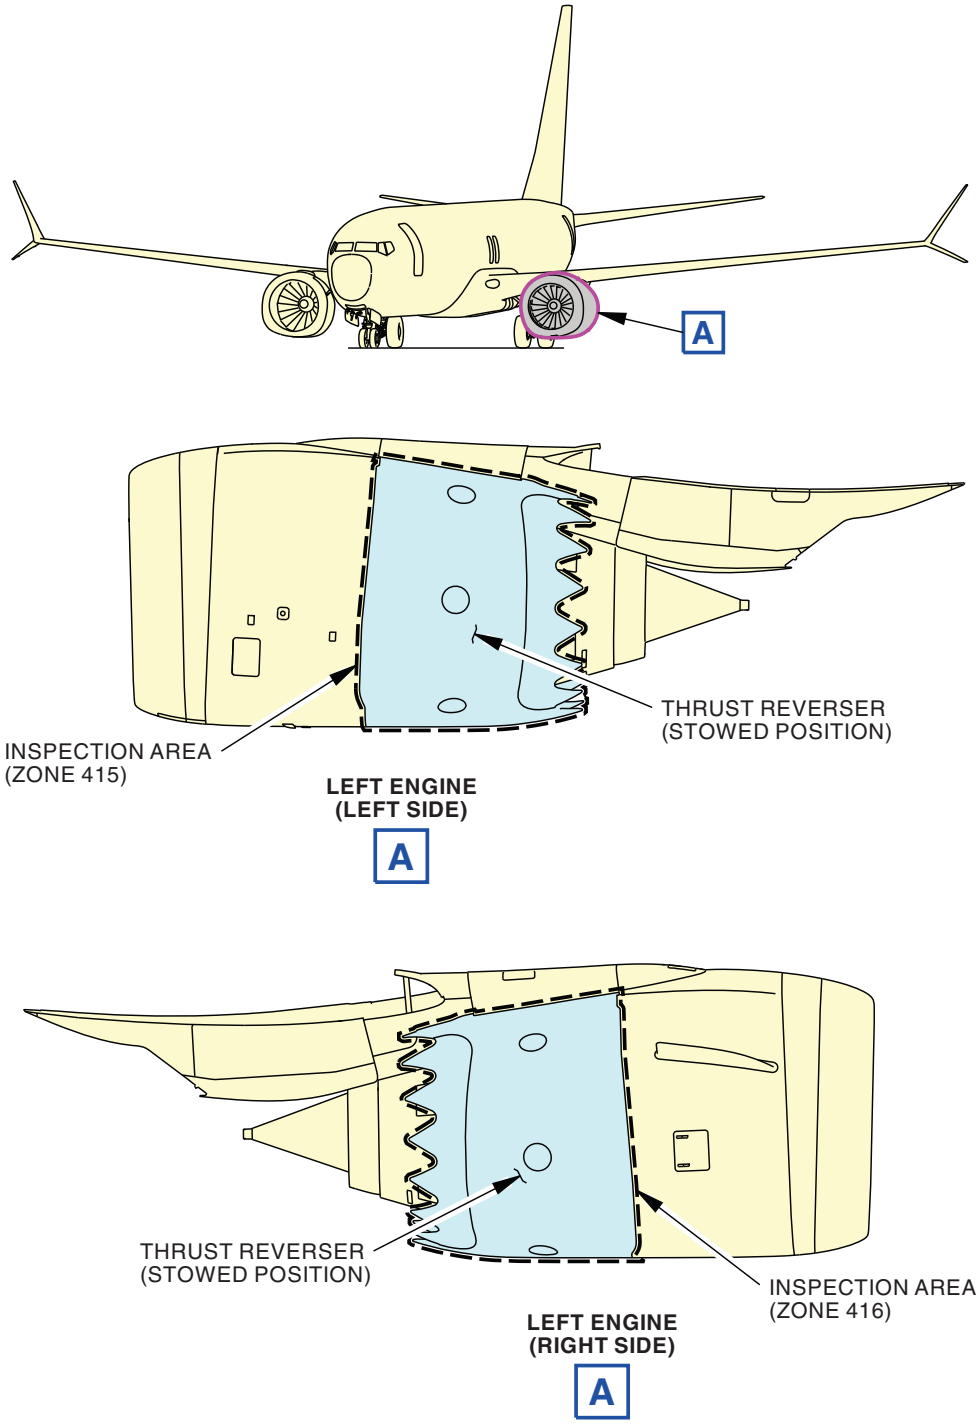

2410190 S00061525077_V1

Thrust Reverser (Stowed and Deployed Position) - Left Engine General Visual (External)
Figure 204/05-41-04-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-805

5. EXTERNAL - ZONAL (GVI): Thrust Reverser, Primary Exhaust Nozzle and Plug - Engine No. 1

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
415	Engine 1 - Thrust Reverser, Left
416	Engine 1 - Thrust Reverser, Right
417	Engine 1 - Primary Exhaust Nozzle and Plug

D. Access Panels

Number	Name/Location
415	Left Thrust Reverser, Engine 1
416	Right Thrust Reverser, Engine 1

E. Zonal Inspection

SUBTASK 05-41-04-010-003

(1) Open these access panels:

Number	Name/Location
415	Left Thrust Reverser, Engine 1
416	Right Thrust Reverser, Engine 1

NOTE: Thrust reverser cowls in both open and closed positions.

SUBTASK 05-41-04-210-005

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-04-210-021

(3) Perform an external zonal inspection (GVI) of the Thrust Reverser inner and outer surfaces, Primary Exhaust Nozzle and Plug - Engine No. 1. (EZAP)

SUBTASK 05-41-04-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-04-410-003

(5) Close these access panels:

Number	Name/Location
415	Left Thrust Reverser, Engine 1
416	Right Thrust Reverser, Engine 1

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

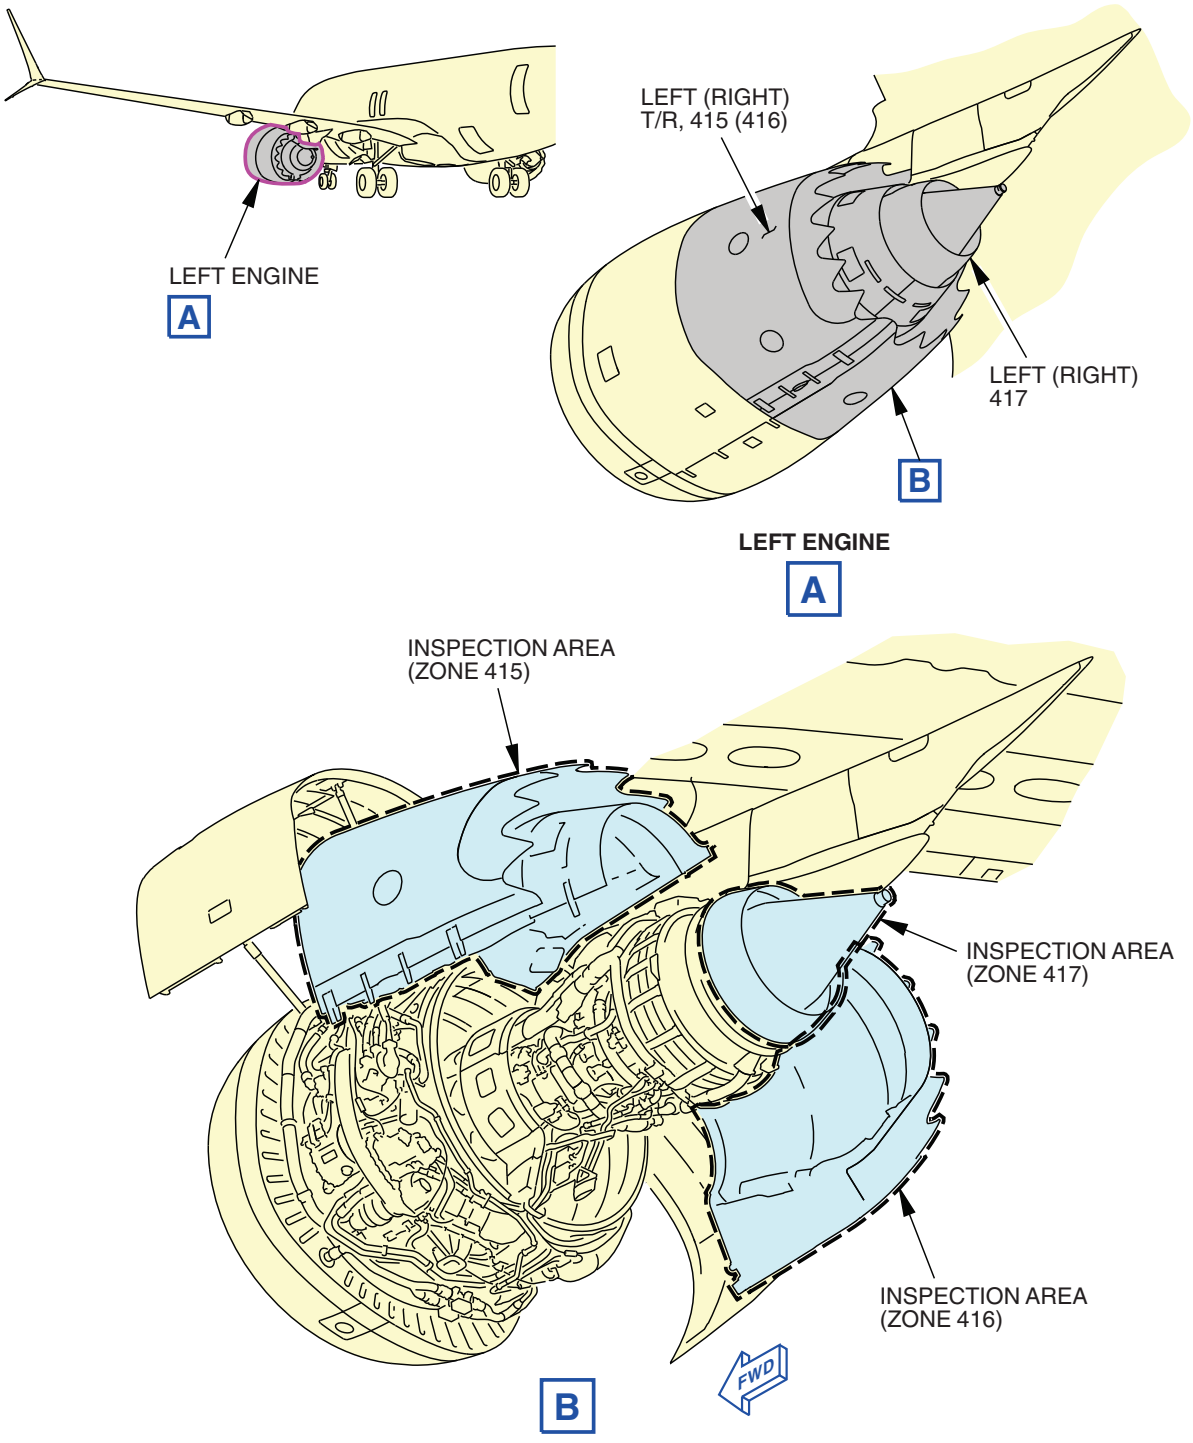

2410191 S00061525079_V2

Thrust Reverser (Inner and Outer Exterior Surfaces), Primary Exhaust Nozzle and Plug Left Engine - General Visual (External)
Figure 205/05-41-04-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-806

6. EXTERNAL - ZONAL (GVI): Powerplant No. 2

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
420	Subzone - Engine 2
421	Engine 2 - Engine
422	Engine 2 - Nose Inlet Cowl
423	Engine 2 - Fan Cowl, Left
424	Engine 2 - Fan Cowl, Right
425	Engine 2 - Thrust Reverser, Left
426	Engine 2 - Thrust Reverser, Right
427	Engine 2 - Primary Exhaust Nozzle and Plug
441	Engine 2 - Forward Strut Fairing
442	Engine 2 - Fan Cowl Support Beam
443	Engine 2 - Strut Torque Box
444	Engine 2 - Aft Strut Fairing


B. Zonal Inspection

SUBTASK 05-41-04-210-006

(1) Perform an external zonal inspection (GVI) of Engine No. 2 and Engine No. 2 Strut Fairings, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. No additional access panels required.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

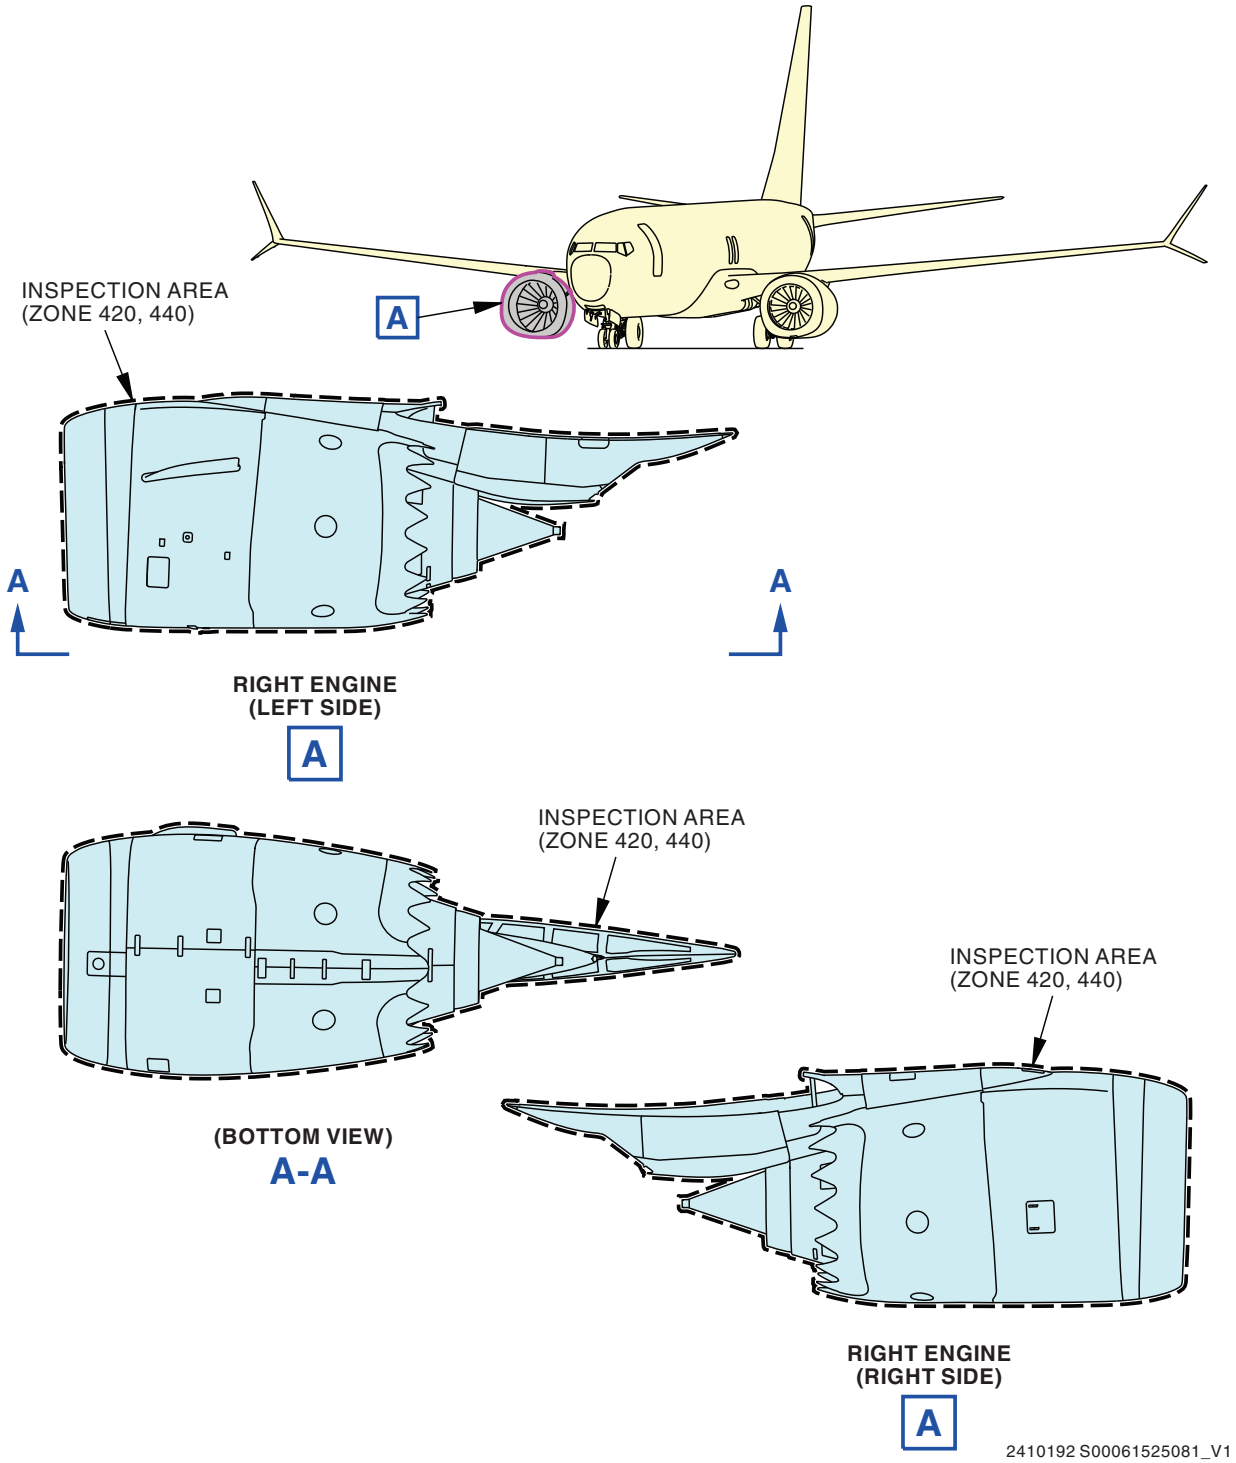

Right Engine (Outer Exterior Surfaces) General Visual (External)
Figure 206/05-41-04-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-807

7. EXTERNAL - ZONAL (GVI): Engine No. 2

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
71-11-04-010-801-G00	Open the Fan Cowl Panels (Selection) (P/B 201)
71-11-04-410-801-G00	Close the Fan Cowl Panels (Selection) (P/B 201)
78-31-00-010-801-G00	Open the Thrust Reverser (Selection) (P/B 201)
78-31-00-010-802-G00	Close the Thrust Reverser (Selection) (P/B 201)

C. Location Zones

Zone	Area
421	Engine 2 - Engine
422	Engine 2 - Nose Inlet Cowl

D. Access Panels

Number	Name/Location
423	Left Fan Cowl, Engine 2
424	Right Fan Cowl, Engine 2
425	Left Thrust Reverser, Engine 2
426	Right Thrust Reverser, Engine 2

E. Zonal Inspection

SUBTASK 05-41-04-010-004

(1) Open these access panels:

Number	Name/Location
423	Left Fan Cowl, Engine 2
424	Right Fan Cowl, Engine 2
425	Left Thrust Reverser, Engine 2
426	Right Thrust Reverser, Engine 2

(a) Do this task: Open the Fan Cowl Panels (Selection), TASK 71-11-04-010-801-G00.

(b) Do this task: Open the Thrust Reverser (Selection), TASK 78-31-00-010-801-G00.

SUBTASK 05-41-04-210-007

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an external zonal inspection (GVI) of the Engine No. 2 Engine Fan, Core Sections and Inlet. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-04-910-003

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-04-410-004

(5) Close these access panels:


Number	Name/Location
423	Left Fan Cowl, Engine 2
424	Right Fan Cowl, Engine 2
425	Left Thrust Reverser, Engine 2
426	Right Thrust Reverser, Engine 2

(a) Do this task: Close the Fan Cowl Panels (Selection), TASK 71-11-04-410-801-G00.

(b) Do this task: Close the Thrust Reverser (Selection), TASK 78-31-00-010-802-G00.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

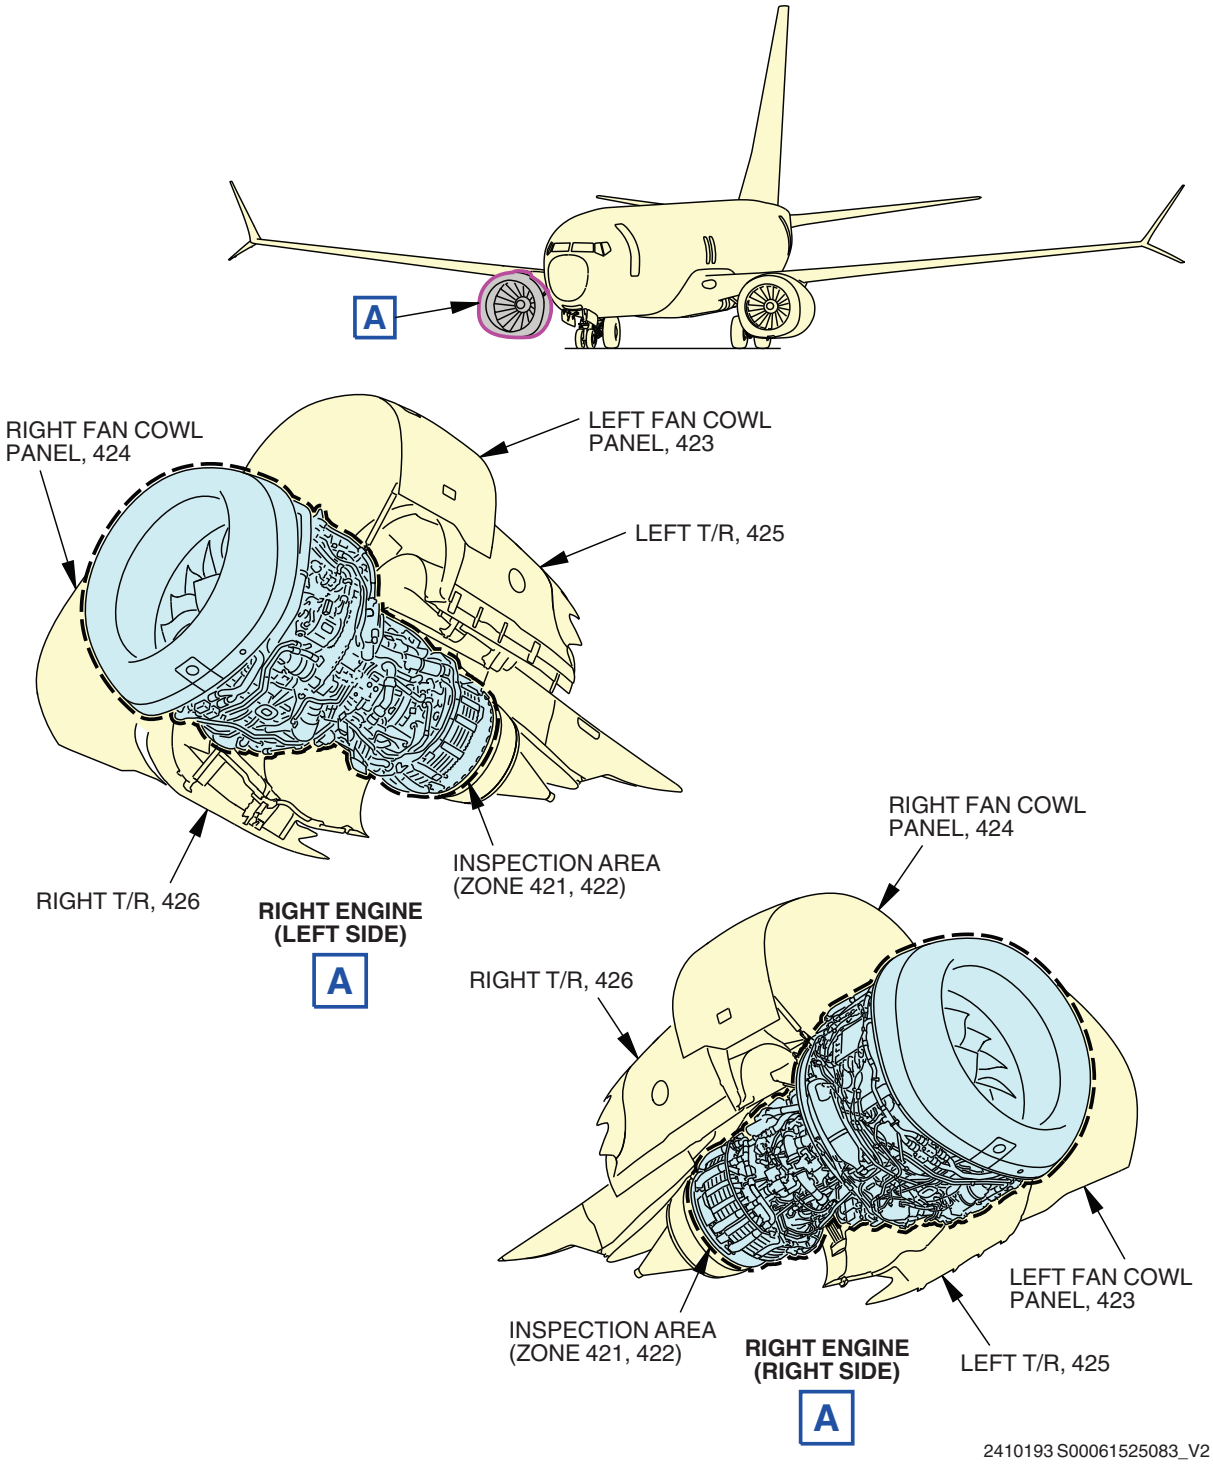

Right Engine (Inner Exterior Surfaces) General Visual (External)
Figure 207/05-41-04-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-808

8. EXTERNAL - ZONAL (GVI): FAN COWL - ENGINE NO. 2

(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
423	Engine 2 - Fan Cowl, Left
424	Engine 2 - Fan Cowl, Right

B. Access Panels

Number	Name/Location
423	Left Fan Cowl, Engine 2
424	Right Fan Cowl, Engine 2

C. Zonal Inspection

SUBTASK 05-41-04-010-005

(1) Open these access panels:

Number	Name/Location
423	Left Fan Cowl, Engine 2
424	Right Fan Cowl, Engine 2

NOTE: Fan cowls in both open and closed positions.

SUBTASK 05-41-04-210-008

(2) Perform an external zonal inspection (GVI) of the Fan Cowl - Engine No. 2 in the open position.

NOTE: Inner and outer exterior surface.

SUBTASK 05-41-04-210-024

(3) Perform an external zonal inspection (GVI) of the Fan Cowl - Engine No. 2 in the closed position.

NOTE: Inner and outer exterior surface.


SUBTASK 05-41-04-410-005

(4) Close these access panels:

Number	Name/Location
423	Left Fan Cowl, Engine 2
424	Right Fan Cowl, Engine 2

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

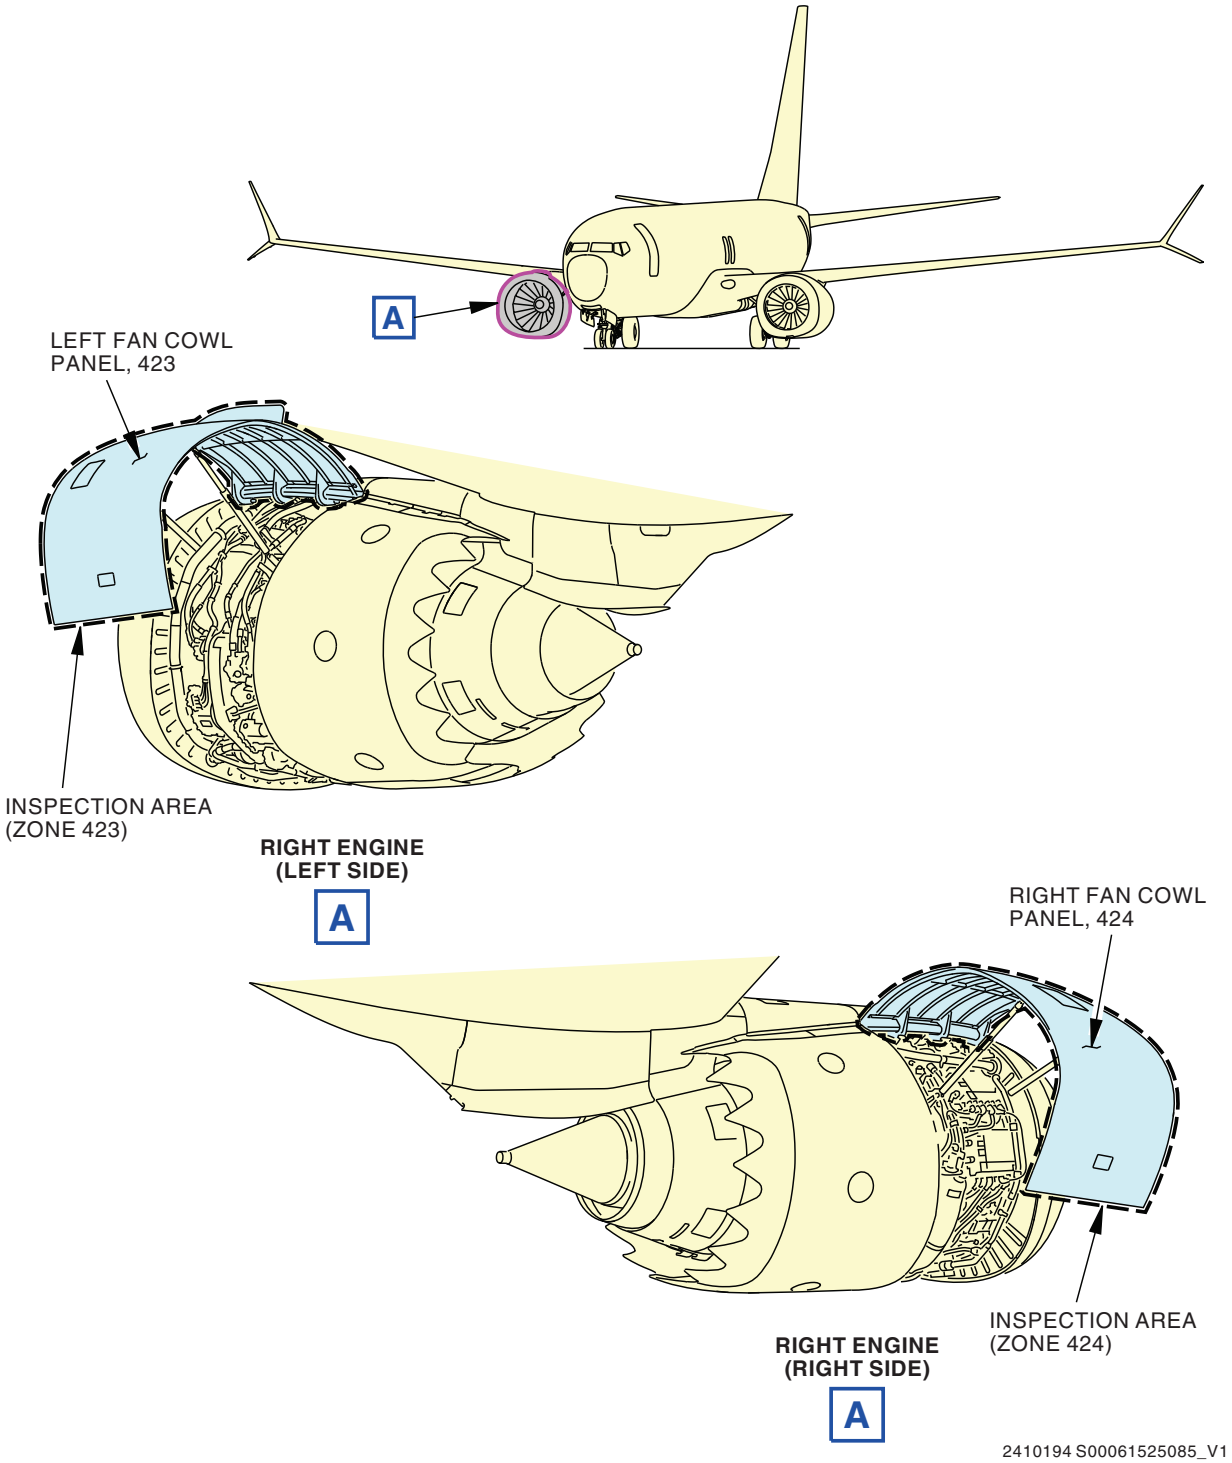

Fan Cowl - Right Engine General Visual (External)
Figure 208/05-41-04-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-809

9. EXTERNAL - ZONAL (GVI): Thrust Reverser - Engine No. 2

(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
425	Engine 2 - Thrust Reverser, Left
426	Engine 2 - Thrust Reverser, Right

B. Zonal Inspection

NOTE: Thrust reverser in stowed and deployed position.

SUBTASK 05-41-04-210-009


(1) Perform an external zonal inspection (GVI) of the Thrust Reverser in the deployed position - Engine No. 2.

SUBTASK 05-41-04-210-020

(2) Perform an external zonal inspection (GVI) of the Thrust Reverser in the stowed position - Engine No. 2.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

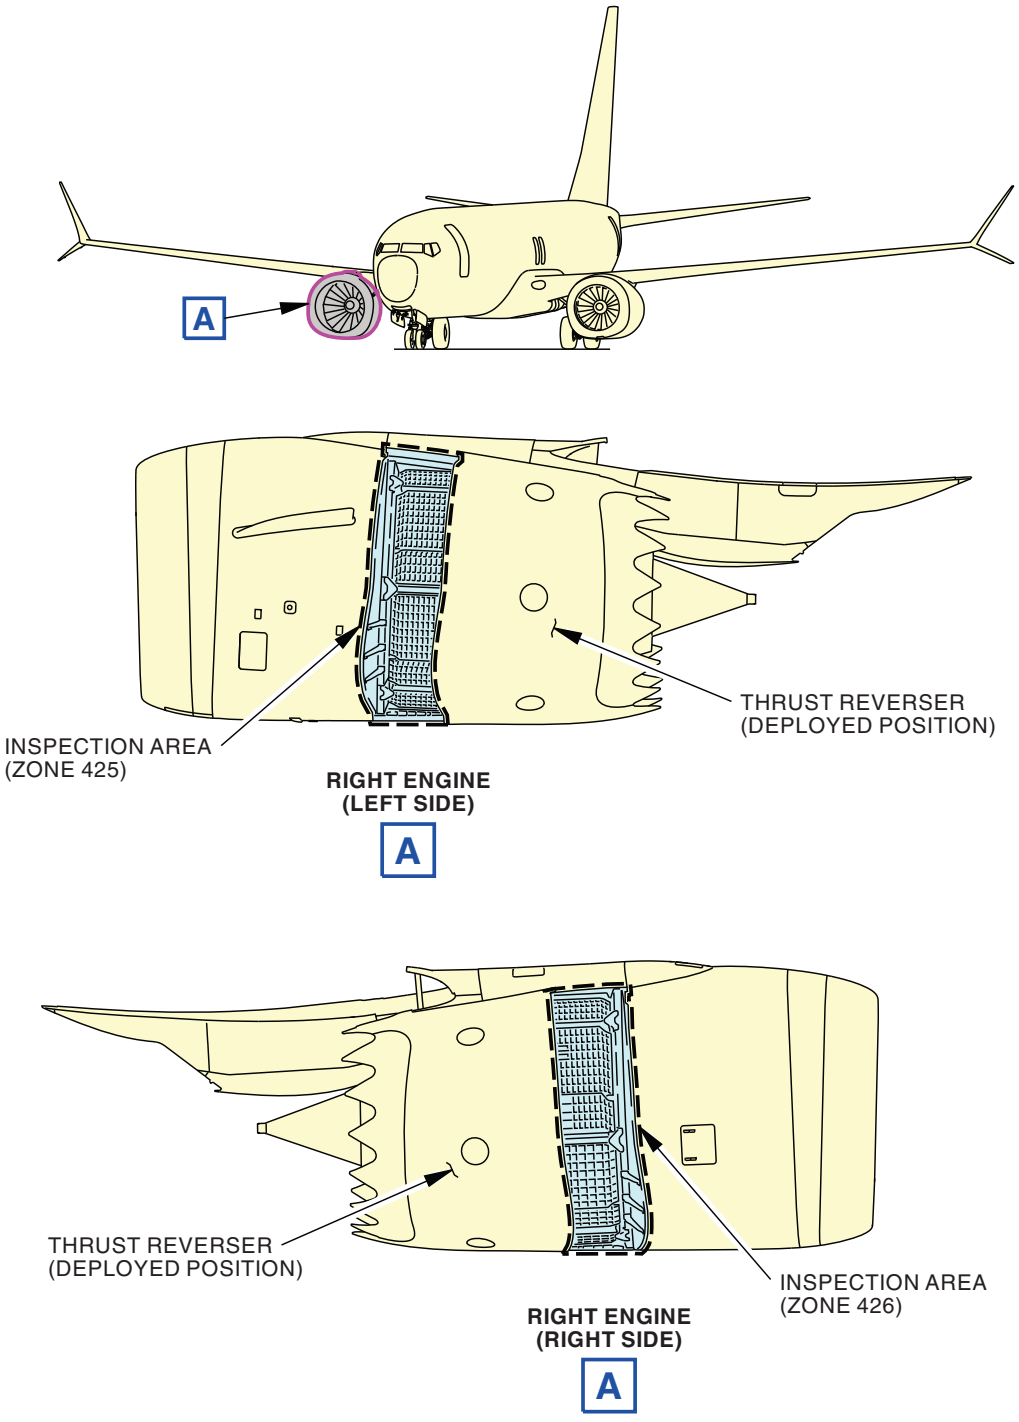

2410195 S00061525087_V1

Thrust Reverser (Stowed and Deployed Position) - Right Engine General Visual (External)
Figure 209/05-41-04-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

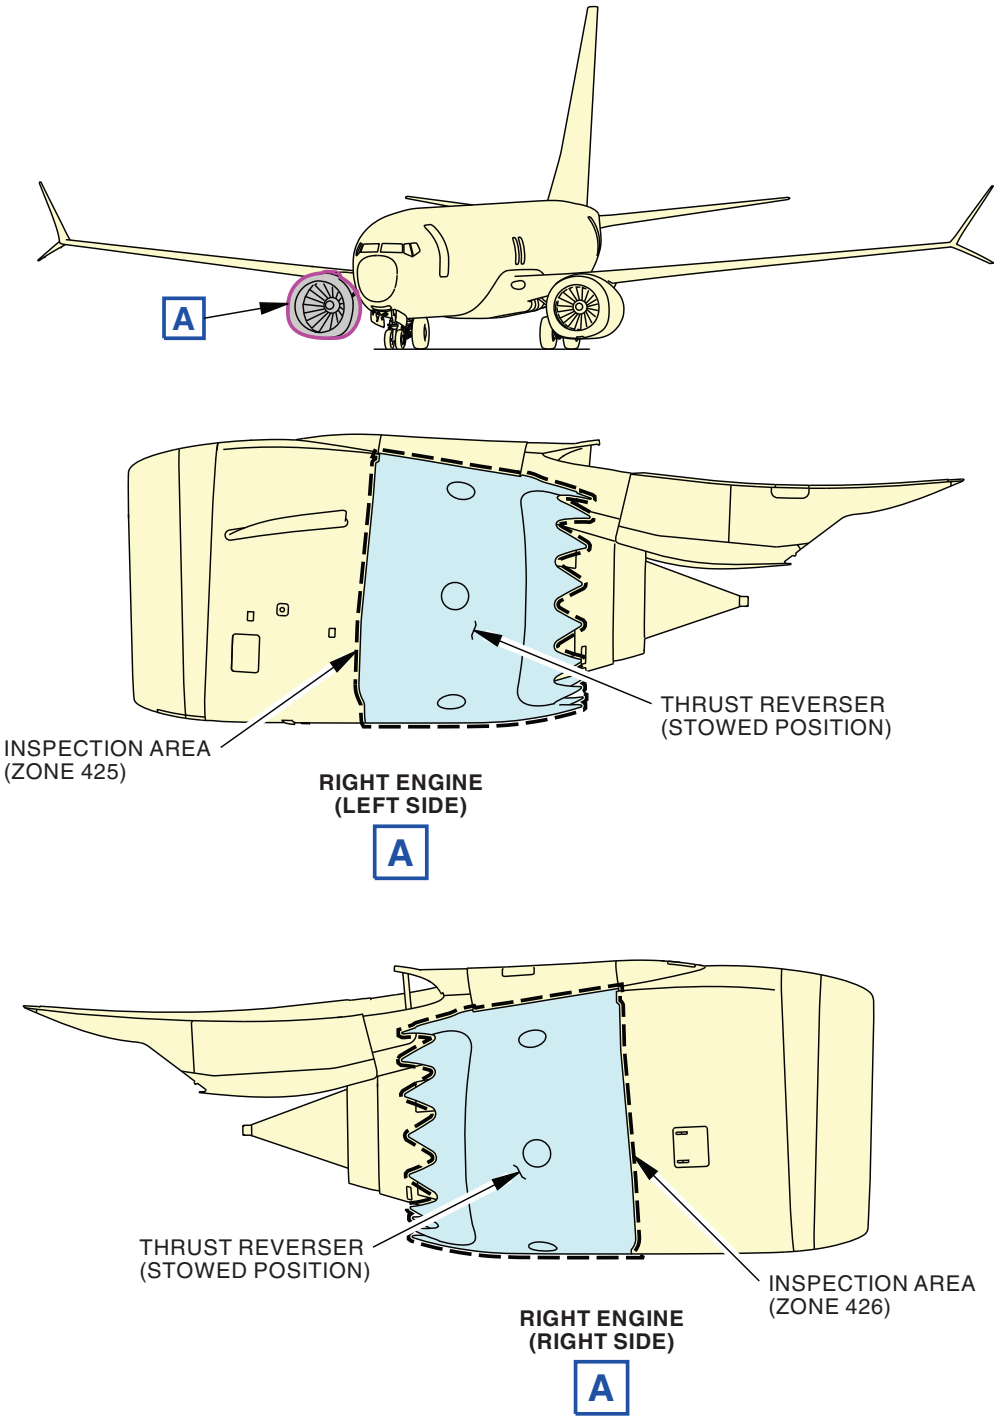

2410196 S00061525088_V1

Thrust Reverser (Stowed and Deployed Position) - Right Engine General Visual (External)
Figure 209/05-41-04-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-810

10. EXTERNAL - ZONAL (GVI): Thrust Reverser, Primary Exhaust Nozzle and Plug - Engine No. 2
(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
425	Engine 2 - Thrust Reverser, Left
426	Engine 2 - Thrust Reverser, Right
427	Engine 2 - Primary Exhaust Nozzle and Plug

D. Access Panels

Number	Name/Location
425	Left Thrust Reverser, Engine 2
426	Right Thrust Reverser, Engine 2

E. Zonal Inspection

SUBTASK 05-41-04-010-006

(1) Open these access panels:

Number	Name/Location
425	Left Thrust Reverser, Engine 2
426	Right Thrust Reverser, Engine 2

NOTE: Thrust reverser cowls in both open and closed positions.

SUBTASK 05-41-04-210-010

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-04-210-022

(3) Perform an external zonal inspection (GVI) of the Thrust Reverser inner and outer surfaces, Primary Exhaust Nozzle and Plug - Engine No. 2. (EZAP)

SUBTASK 05-41-04-910-004

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-41-04-410-006

(5) Close these access panels:

Number	Name/Location
425	Left Thrust Reverser, Engine 2
426	Right Thrust Reverser, Engine 2

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

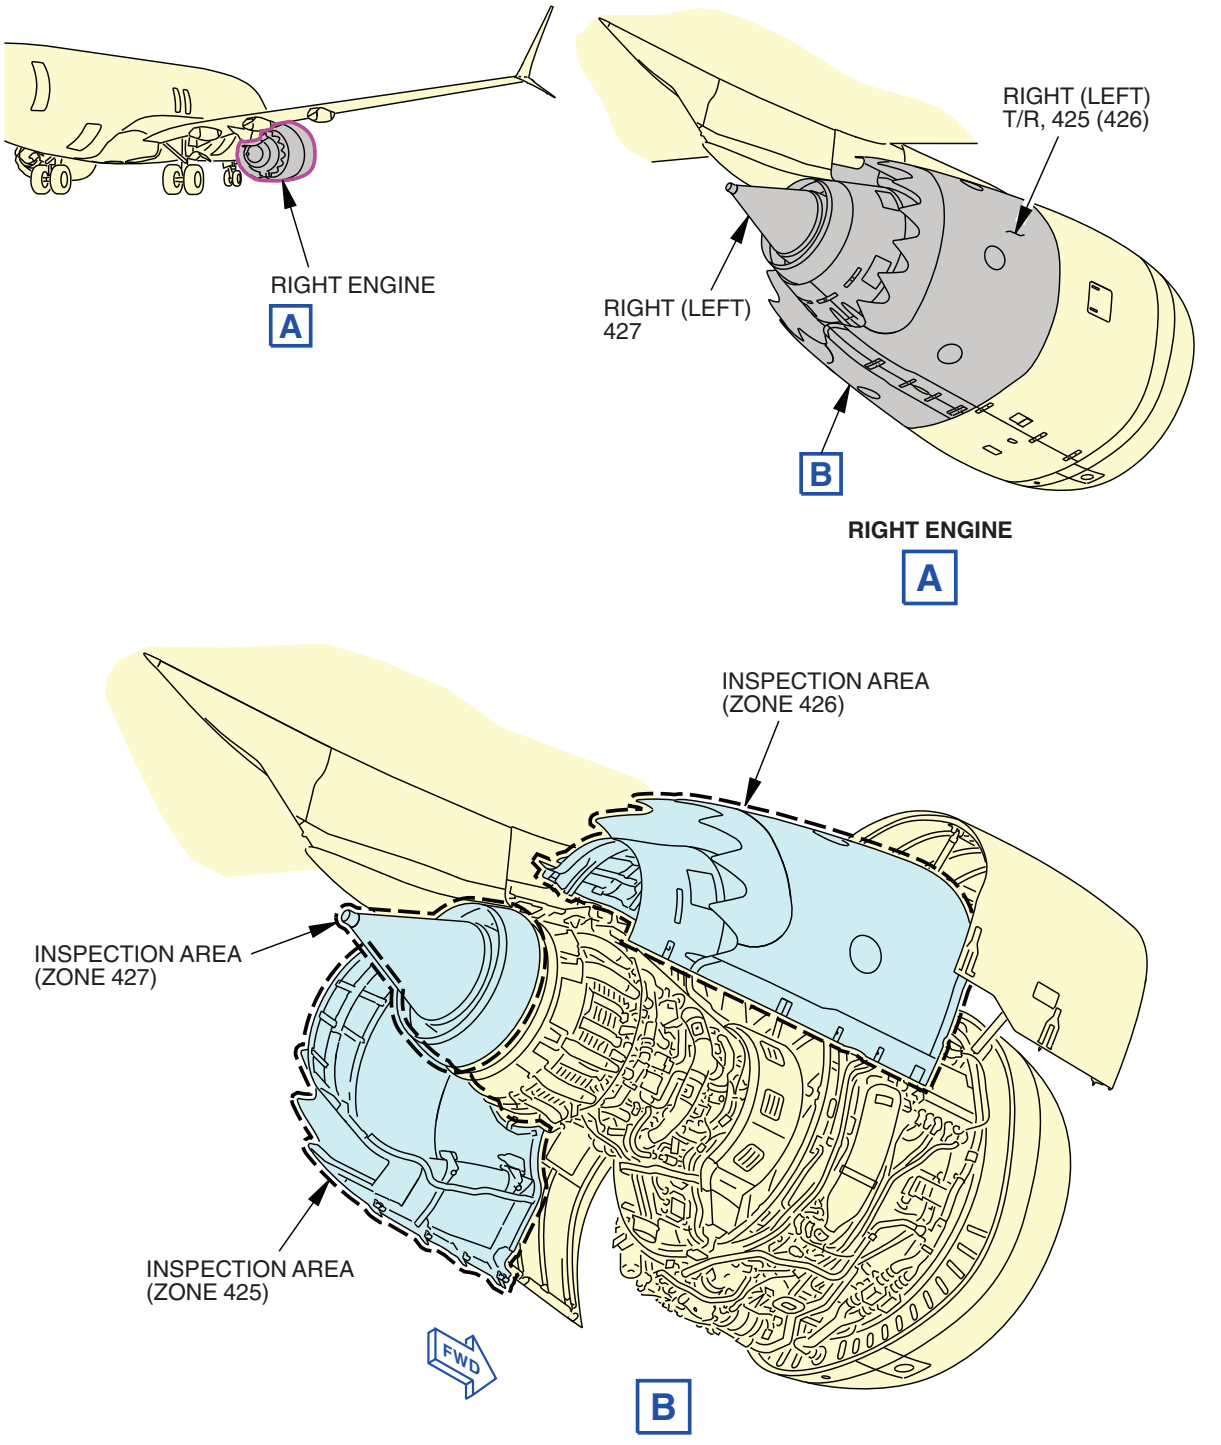

2410197 S00061525090_V2

Thrust Reverser (Inner and Outer Exterior Surfaces), Primary Exhaust Nozzle and Plug Right Engine - General Visual (External)
Figure 210/05-41-04-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-811

11. EXTERNAL - ZONAL (GVI): Forward Strut Fairing - Engine No. 1

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
431	Engine 1 - Forward Strut Fairing


B. Zonal Inspection

SUBTASK 05-41-04-210-011


(1) Perform an external zonal inspection (GVI) of the Forward Strut Fairing - Engine No. 1.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

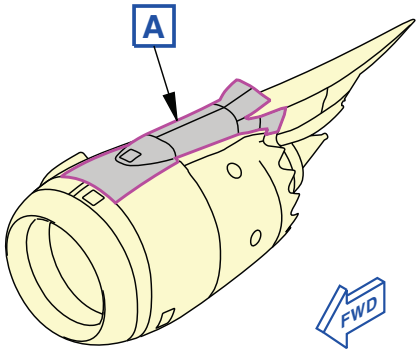

(ENGINE POSITION 1 IS SHOWN,
ENGINE POSITION 2 IS OPPOSITE)

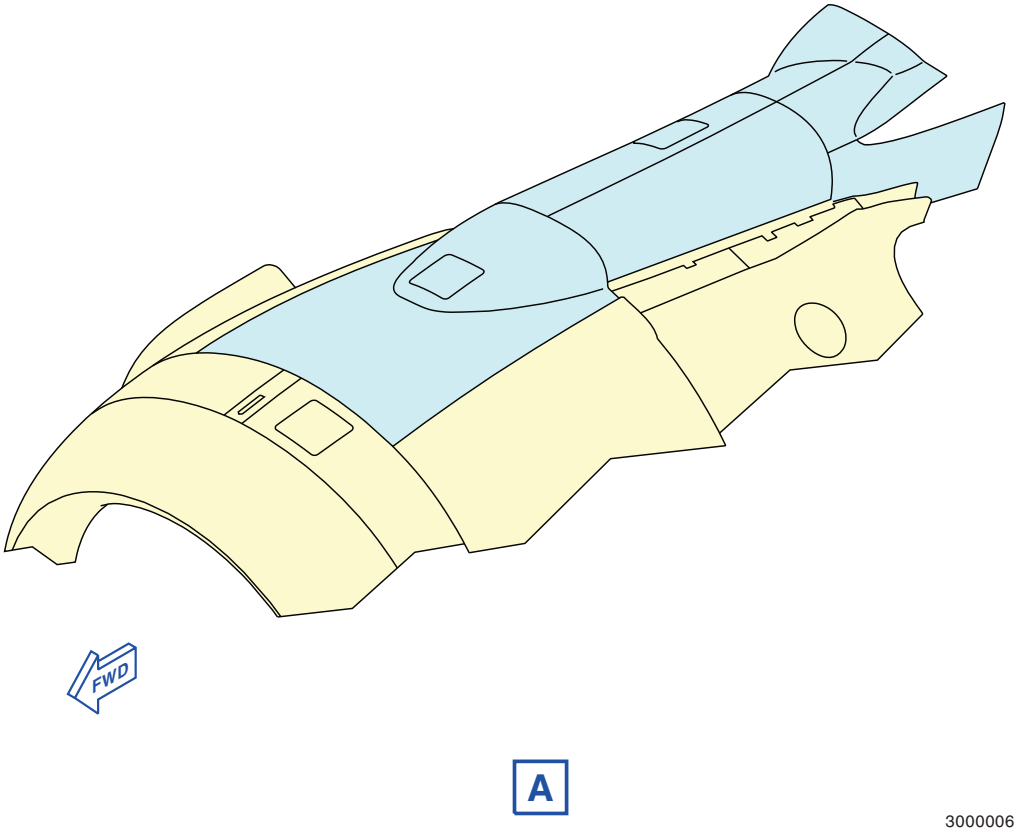

3000006 S0000774924_V1

Forward Strut Fairing - Engine No. 1 General Visual (External)
Figure 211/05-41-04-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-812

12. INTERNAL - ZONAL (GVI): Fan Cowl Support Beam - Engine No. 1

(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
432	Engine 1 - Fan Cowl Support Beam

D. Access Panels

Number	Name/Location
431AT	Forward Strut Fairing, Thumbnail Fairing, Strut 1

E. Zonal Inspection

SUBTASK 05-41-04-010-008

(1) Open this access panel:

Number	Name/Location
431AT	Forward Strut Fairing, Thumbnail Fairing, Strut 1

SUBTASK 05-41-04-210-012

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Fan Cowl Support Beam - Engine No. 1. (EZAP)

SUBTASK 05-41-04-910-006

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-04-410-008

(5) Close this access panel:

Number	Name/Location
431AT	Forward Strut Fairing, Thumbnail Fairing, Strut 1

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

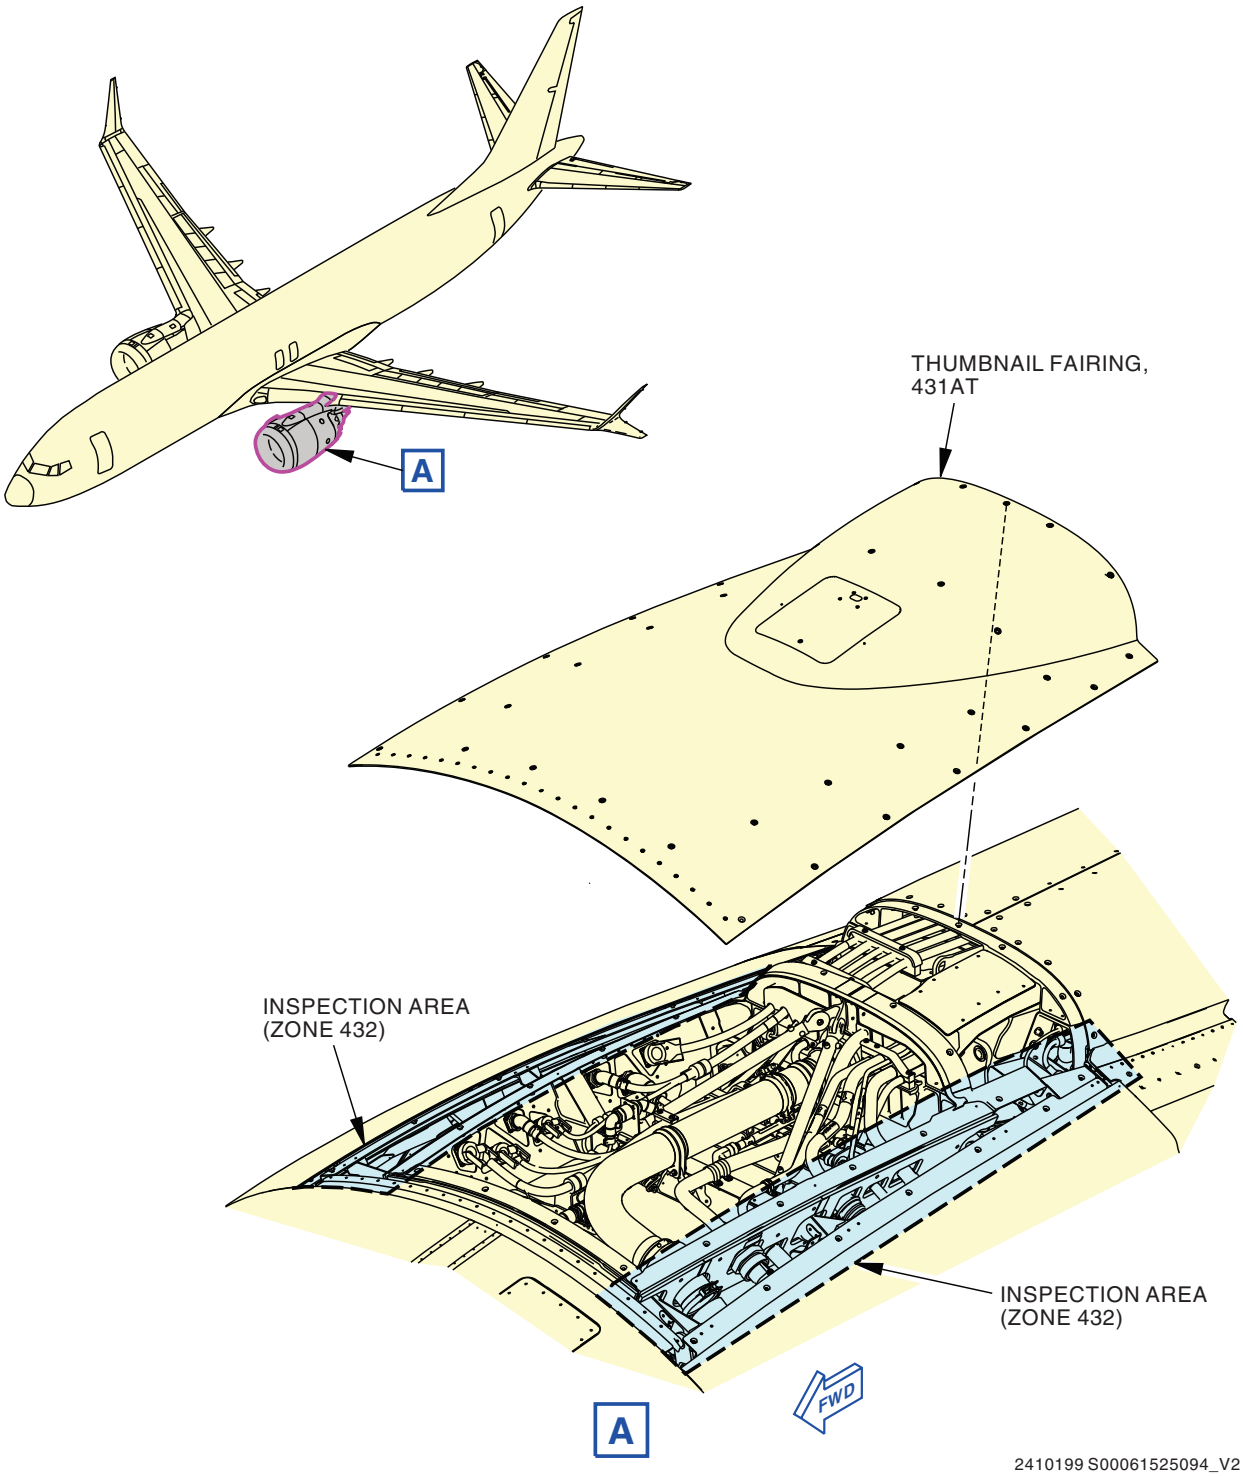

Fan Cowl Support Beam - Left Engine General Visual (Internal)
Figure 212/05-41-04-990-812

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-813

13. INTERNAL - ZONAL (GVI): Strut Torque Box - Engine No. 1

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
05-51-22-210-801	Titanium Parts Contaminated With Fire-Resistant Hydraulic Fluid Inspection (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
433	Engine 1 - Strut Torque Box

D. Access Panels

Number	Name/Location
431BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 1
431BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 1
431CL	Forward Strut Fairing, Left Overwing Fairing, Strut 1
431CR	Forward Strut Fairing, Right Overwing Fairing, Strut 1
431CT	Forward Strut Fairing, Right Mid-Strut Fairing Pressure Relief Door, Strut 1
431DL	Forward Strut Fairing, Left Underwing (Cheek) Fairing, Strut 1
431DR	Forward Strut Fairing, Right Underwing (Cheek) Fairing, Strut 1

E. Zonal Inspection

SUBTASK 05-41-04-010-009

(1) Open these access panels:

Number	Name/Location
431BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 1
431BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 1
431CL	Forward Strut Fairing, Left Overwing Fairing, Strut 1
431CR	Forward Strut Fairing, Right Overwing Fairing, Strut 1
431CT	Forward Strut Fairing, Right Mid-Strut Fairing Pressure Relief Door, Strut 1
431DL	Forward Strut Fairing, Left Underwing (Cheek) Fairing, Strut 1
431DR	Forward Strut Fairing, Right Underwing (Cheek) Fairing, Strut 1

SUBTASK 05-41-04-210-013

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Strut Torque Box - Engine No. 1. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(4) If hydraulic fluid is found during the inspection, refer to Titanium Parts Contaminated With Fire-Resistant Hydraulic Fluid Inspection, TASK 05-51-22-210-801.

SUBTASK 05-41-04-910-007

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-04-410-009


(6) Close these access panels:

Number	Name/Location
431BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 1
431BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 1
431CL	Forward Strut Fairing, Left Overwing Fairing, Strut 1
431CR	Forward Strut Fairing, Right Overwing Fairing, Strut 1
431CT	Forward Strut Fairing, Right Mid-Strut Fairing Pressure Relief Door, Strut 1
431DL	Forward Strut Fairing, Left Underwing (Cheek) Fairing, Strut 1
431DR	Forward Strut Fairing, Right Underwing (Cheek) Fairing, Strut 1

NOTE: Upper spar functional drain test is required if aft upper spar web access doors are removed.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

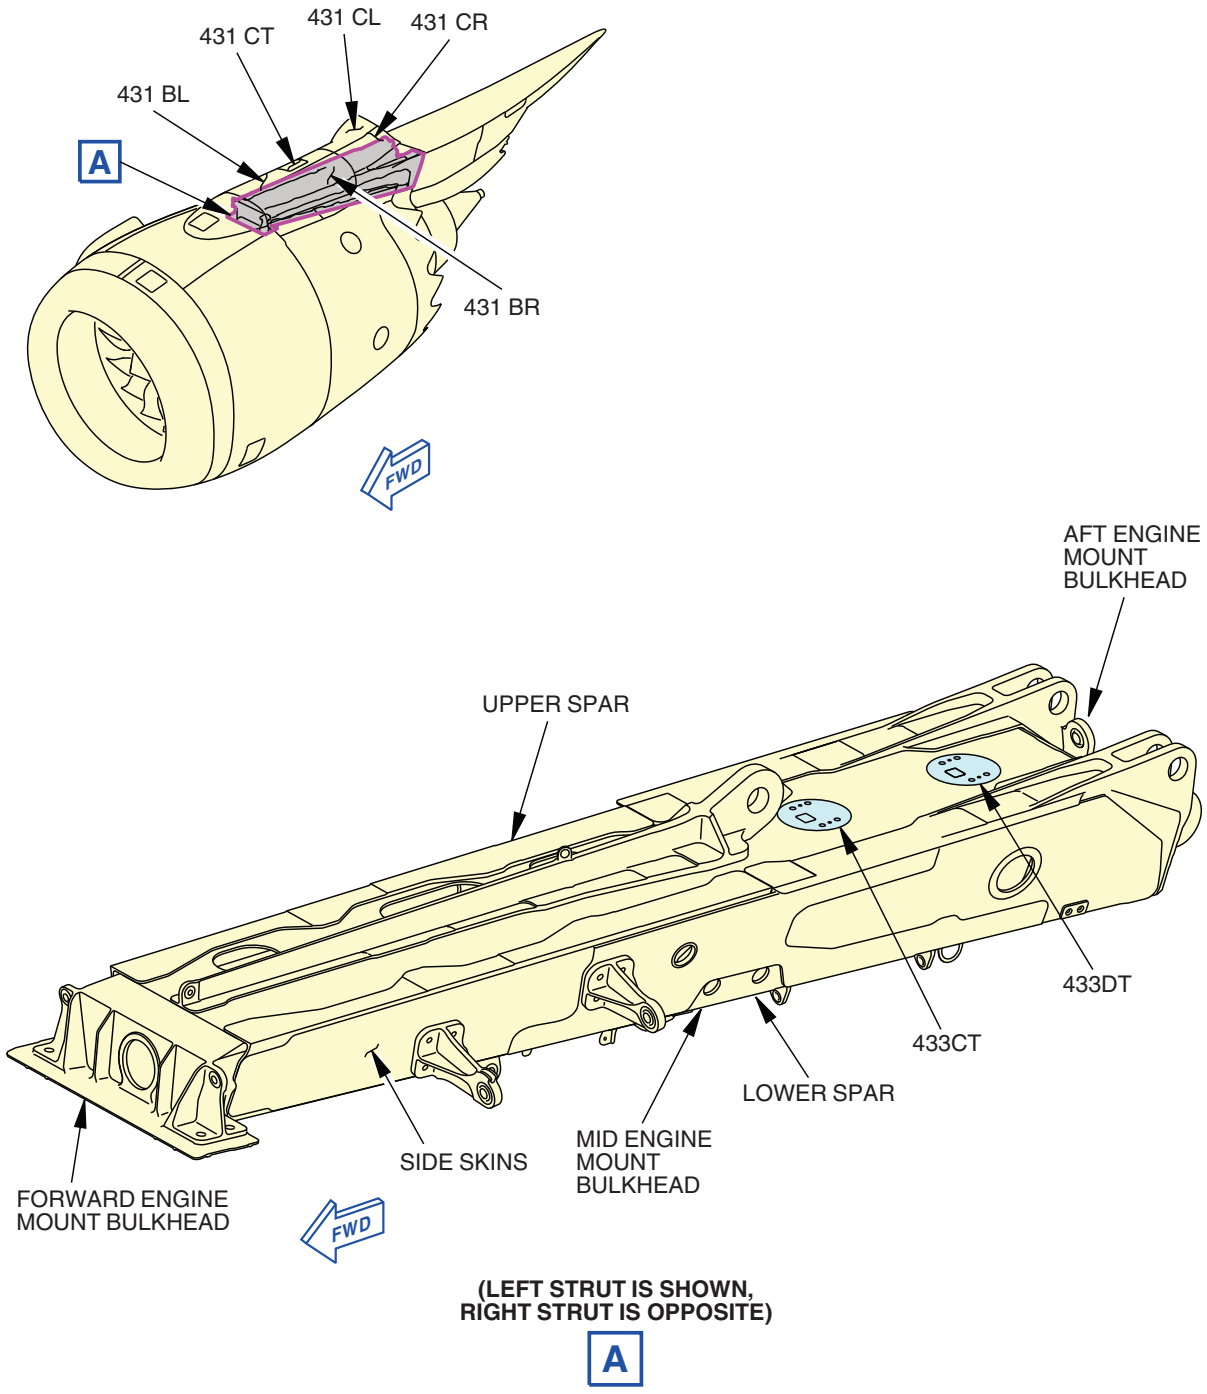

2946971 S0000723690_V2

Strut Torque Box - Left Engine General Visual (Internal)
Figure 213/05-41-04-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-814

14. INTERNAL - ZONAL (GVI): Aft Strut Fairing - Engine No. 1

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
434	Engine 1 - Aft Strut Fairing

D. Access Panels

Number	Name/Location
434AL	Aft Strut Fairing, Left Panel, Strut 1
434AR	Aft Strut Fairing, Right Panel, Strut 1
434CL	Aft Strut Fairing, Left Access To Fuel Door, Strut 1

E. Zonal Inspection

SUBTASK 05-41-04-010-010

(1) Open these access panels:

Number	Name/Location
434AL	Aft Strut Fairing, Left Panel, Strut 1
434AR	Aft Strut Fairing, Right Panel, Strut 1
434CL	Aft Strut Fairing, Left Access To Fuel Door, Strut 1

SUBTASK 05-41-04-210-014

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Aft Strut Fairing - Engine No. 1. (EZAP)

SUBTASK 05-41-04-910-008

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-04-410-010

(5) Close these access panels:

Number	Name/Location
434AL	Aft Strut Fairing, Left Panel, Strut 1
434AR	Aft Strut Fairing, Right Panel, Strut 1
434CL	Aft Strut Fairing, Left Access To Fuel Door, Strut 1


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

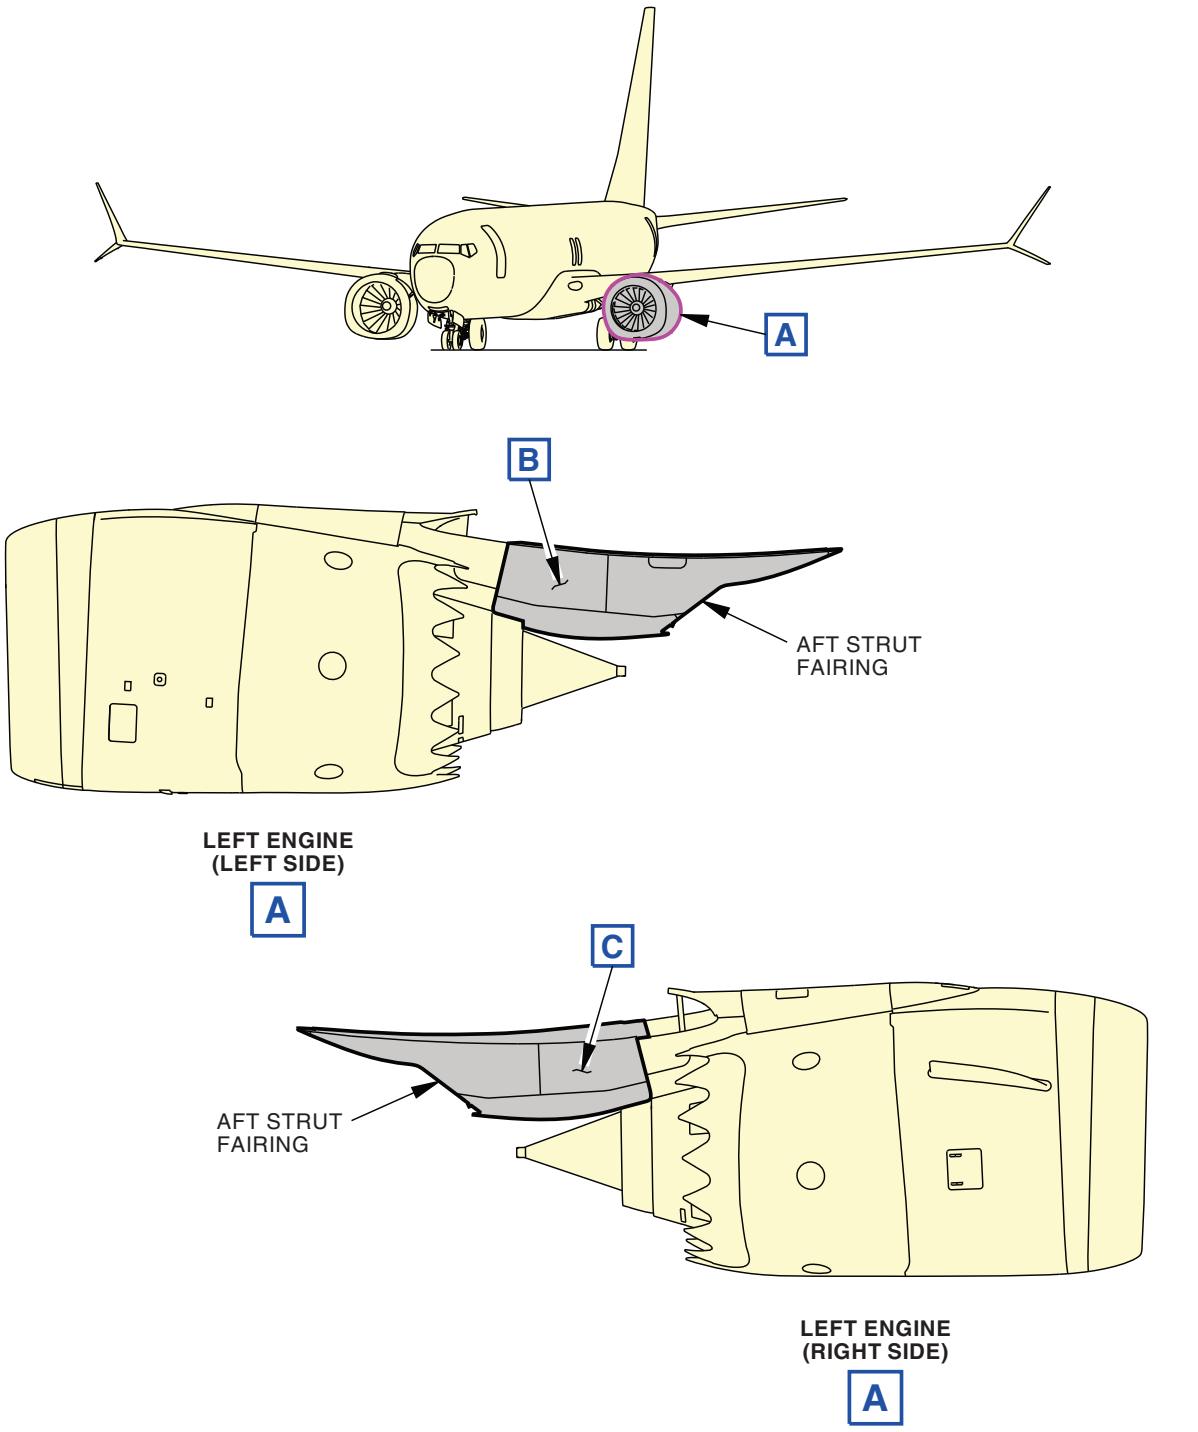

Aft Strut Fairing - Left Engine General Visual (Internal)
Figure 214/05-41-04-990-814 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

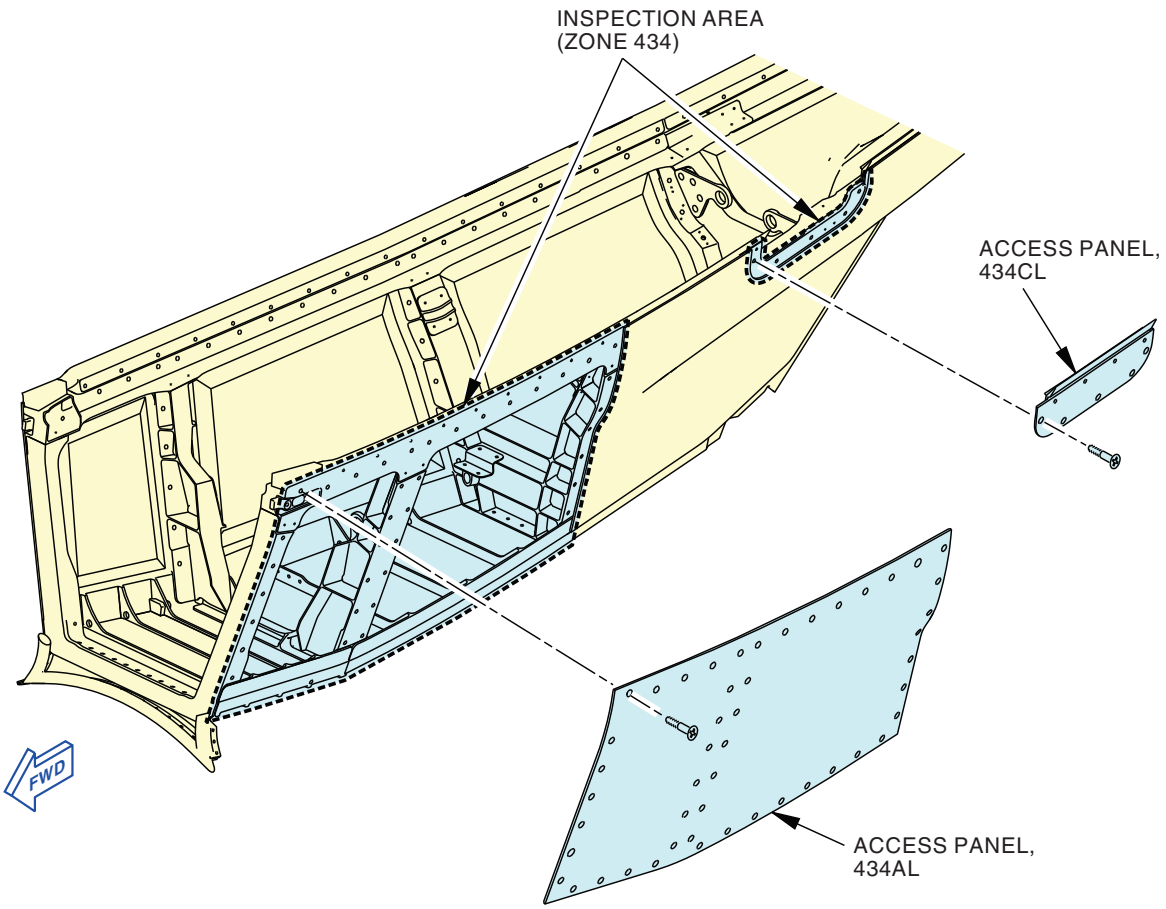

2410203 S00061525100_V2

Aft Strut Fairing - Left Engine General Visual (Internal)
Figure 214/05-41-04-990-814 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

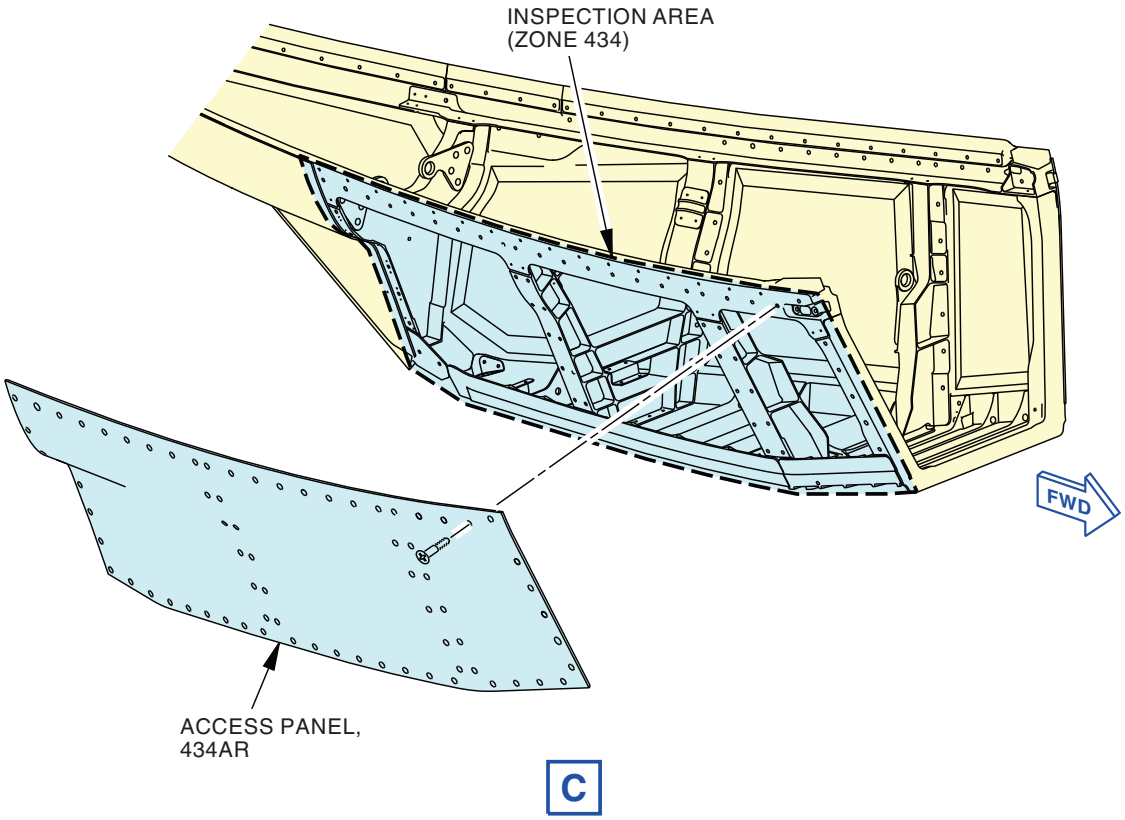

2410204 S00061525101_V2

Aft Strut Fairing - Left Engine General Visual (Internal)
Figure 214/05-41-04-990-814 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-04-210-815

15. EXTERNAL - ZONAL (GVI): Forward Strut Fairing - Engine No. 2

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
441	Engine 2 - Forward Strut Fairing


B. Zonal Inspection

SUBTASK 05-41-04-210-015


(1) Perform an external zonal inspection (GVI) of the Forward Strut Fairing - Engine No. 2.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

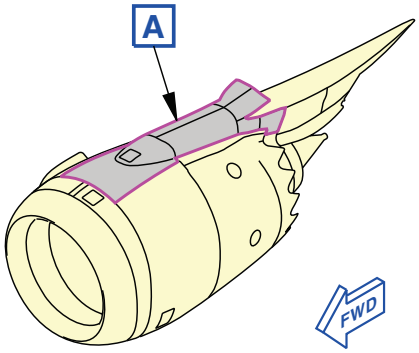

(ENGINE POSITION 1 IS SHOWN,
ENGINE POSITION 2 IS OPPOSITE)

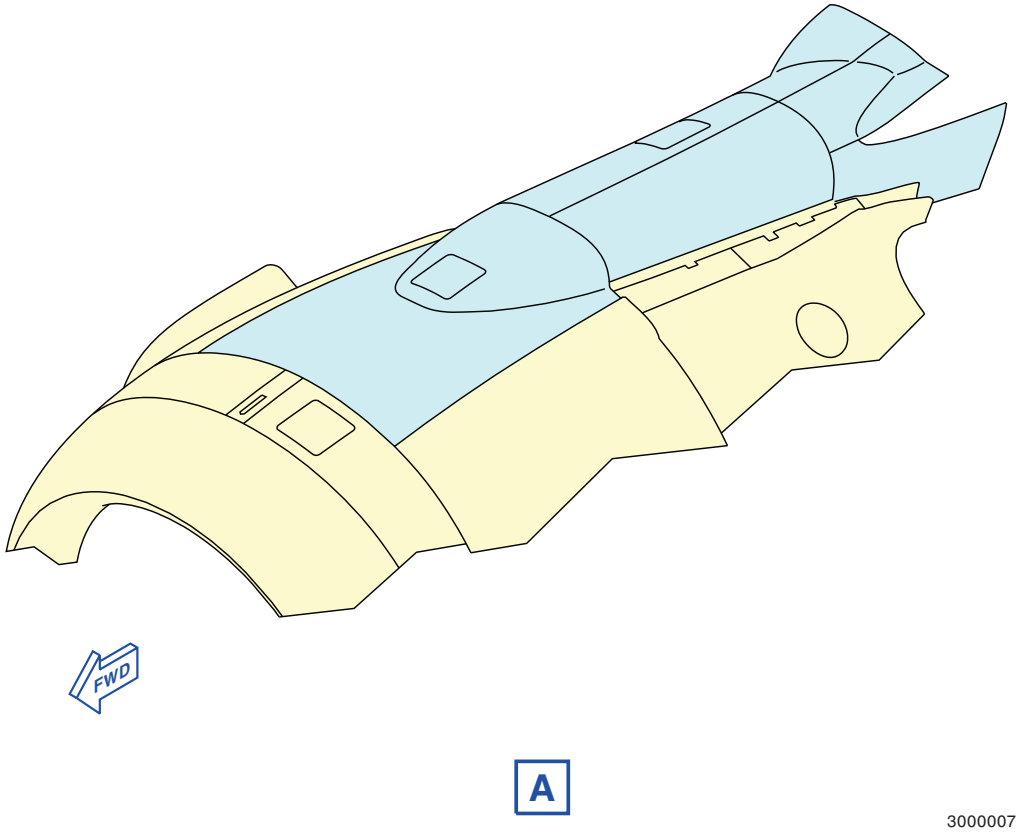

3000007 S0000774928_V1

Forward Strut Fairing - Engine No. 2 General Visual (External)
Figure 215/05-41-04-990-820

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-816

16. INTERNAL - ZONAL (GVI): Fan Cowl Support Beam - Engine No. 2

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
442	Engine 2 - Fan Cowl Support Beam

D. Access Panels

Number	Name/Location
441AT	Forward Strut Fairing, Thumbnail Fairing, Strut 2

E. Zonal Inspection

SUBTASK 05-41-04-010-012

(1) Open this access panel:

Number	Name/Location
441AT	Forward Strut Fairing, Thumbnail Fairing, Strut 2

SUBTASK 05-41-04-210-016

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Fan Cowl Support Beam - Engine No. 2. (EZAP)

SUBTASK 05-41-04-910-010

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-04-410-012

(5) Close this access panel:

Number	Name/Location
441AT	Forward Strut Fairing, Thumbnail Fairing, Strut 2

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

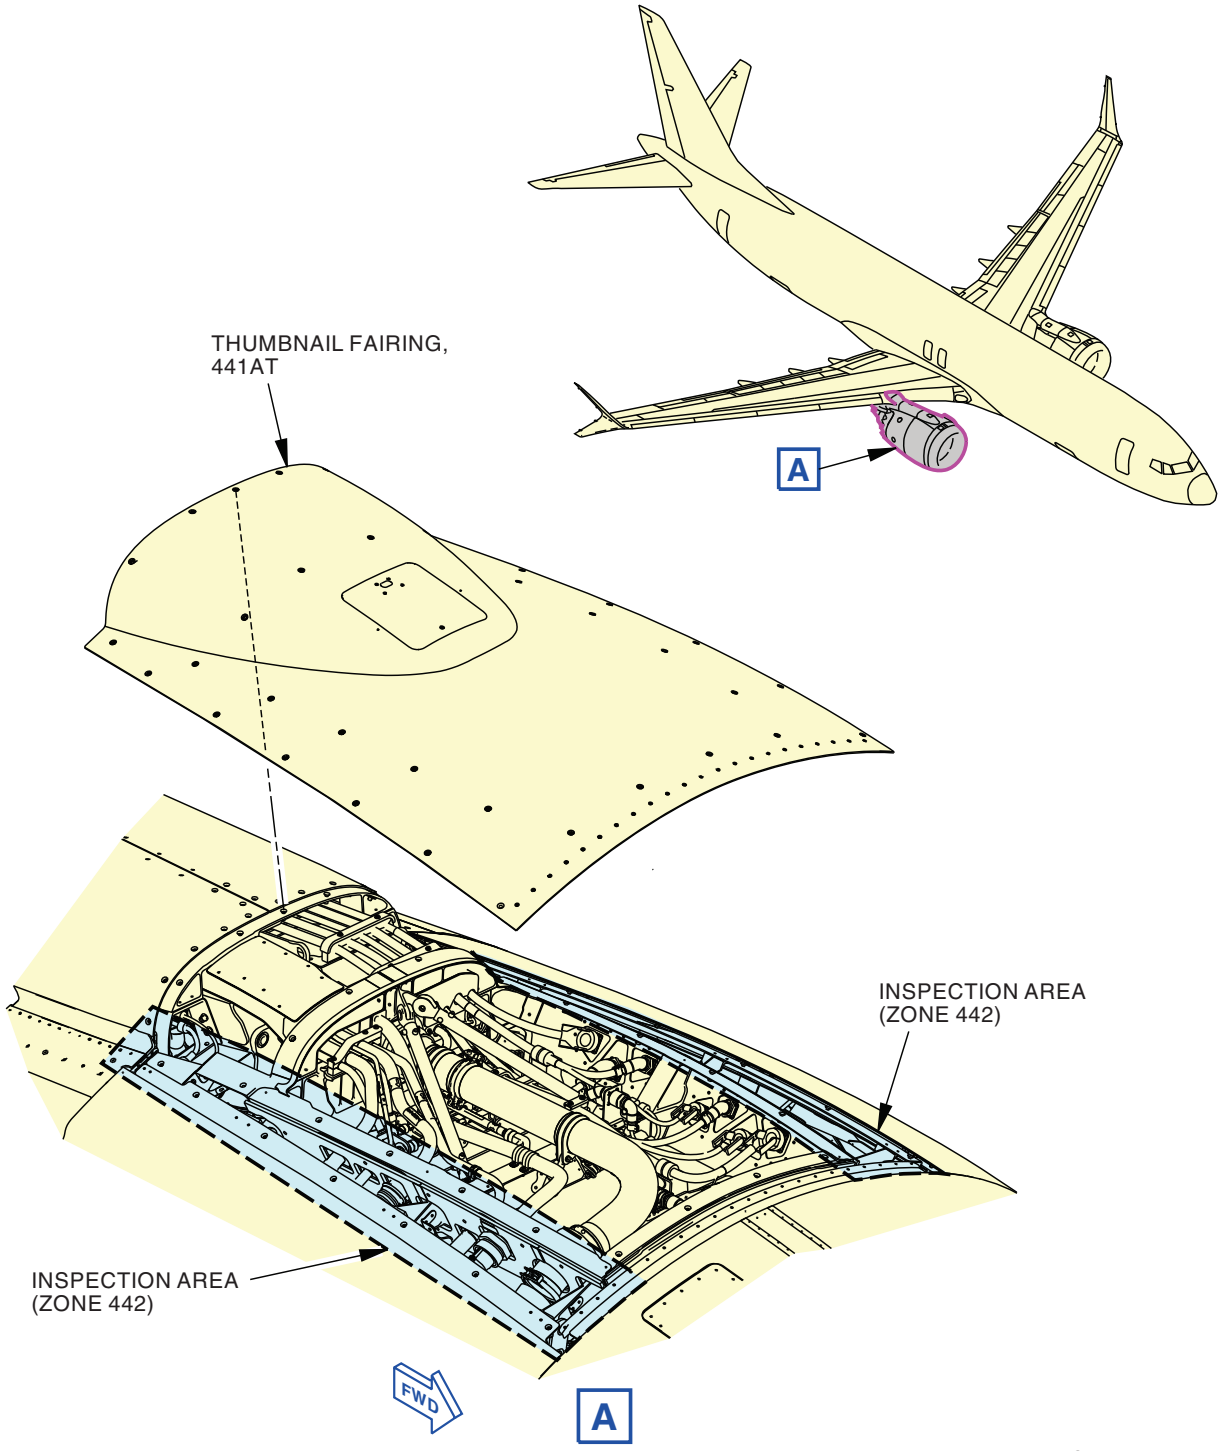

Fan Cowl Support Beam - Right Engine General Visual (Internal)
Figure 216/05-41-04-990-816

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-817

17. INTERNAL - ZONAL (GVI): Strut Torque Box - Engine No. 2

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
05-51-22-210-801	Titanium Parts Contaminated With Fire-Resistant Hydraulic Fluid Inspection (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
443	Engine 2 - Strut Torque Box

D. Access Panels

Number	Name/Location
441BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 2
441BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 2
441CL	Forward Strut Fairing, Left Overwing Fairing, Strut 2
441CR	Forward Strut Fairing, Right Overwing Fairing, Strut 2
441CT	Forward Strut Fairing, Forward Fuel/Hydraulic Tube Shroud Access, Strut 2
441DL	Forward Strut Fairing, Left Underwing (Cheek) Fairing, Strut 2
441DR	Forward Strut Fairing, Right Underwing (Cheek) Fairing, Strut 2

E. Zonal Inspection

SUBTASK 05-41-04-010-013

(1) Open these access panels:

Number	Name/Location
441BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 2
441BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 2
441CL	Forward Strut Fairing, Left Overwing Fairing, Strut 2
441CR	Forward Strut Fairing, Right Overwing Fairing, Strut 2
441CT	Forward Strut Fairing, Forward Fuel/Hydraulic Tube Shroud Access, Strut 2
441DL	Forward Strut Fairing, Left Underwing (Cheek) Fairing, Strut 2
441DR	Forward Strut Fairing, Right Underwing (Cheek) Fairing, Strut 2

SUBTASK 05-41-04-210-017

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Strut Torque Box - Engine No. 2. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(4) If hydraulic fluid is found during the inspection, refer to Titanium Parts Contaminated With Fire-Resistant Hydraulic Fluid Inspection, TASK 05-51-22-210-801.

SUBTASK 05-41-04-910-011

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-04-410-013


(6) Close these access panels:

Number	Name/Location
441BL	Forward Strut Fairing, Left Mid Strut Fairing, Strut 2
441BR	Forward Strut Fairing, Right Mid Strut Fairing, Strut 2
441CL	Forward Strut Fairing, Left Overwing Fairing, Strut 2
441CR	Forward Strut Fairing, Right Overwing Fairing, Strut 2
441CT	Forward Strut Fairing, Forward Fuel/Hydraulic Tube Shroud Access, Strut 2
441DL	Forward Strut Fairing, Left Underwing (Cheek) Fairing, Strut 2
441DR	Forward Strut Fairing, Right Underwing (Cheek) Fairing, Strut 2

NOTE: Upper spar functional drain test is required if aft upper spar web access doors are removed.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

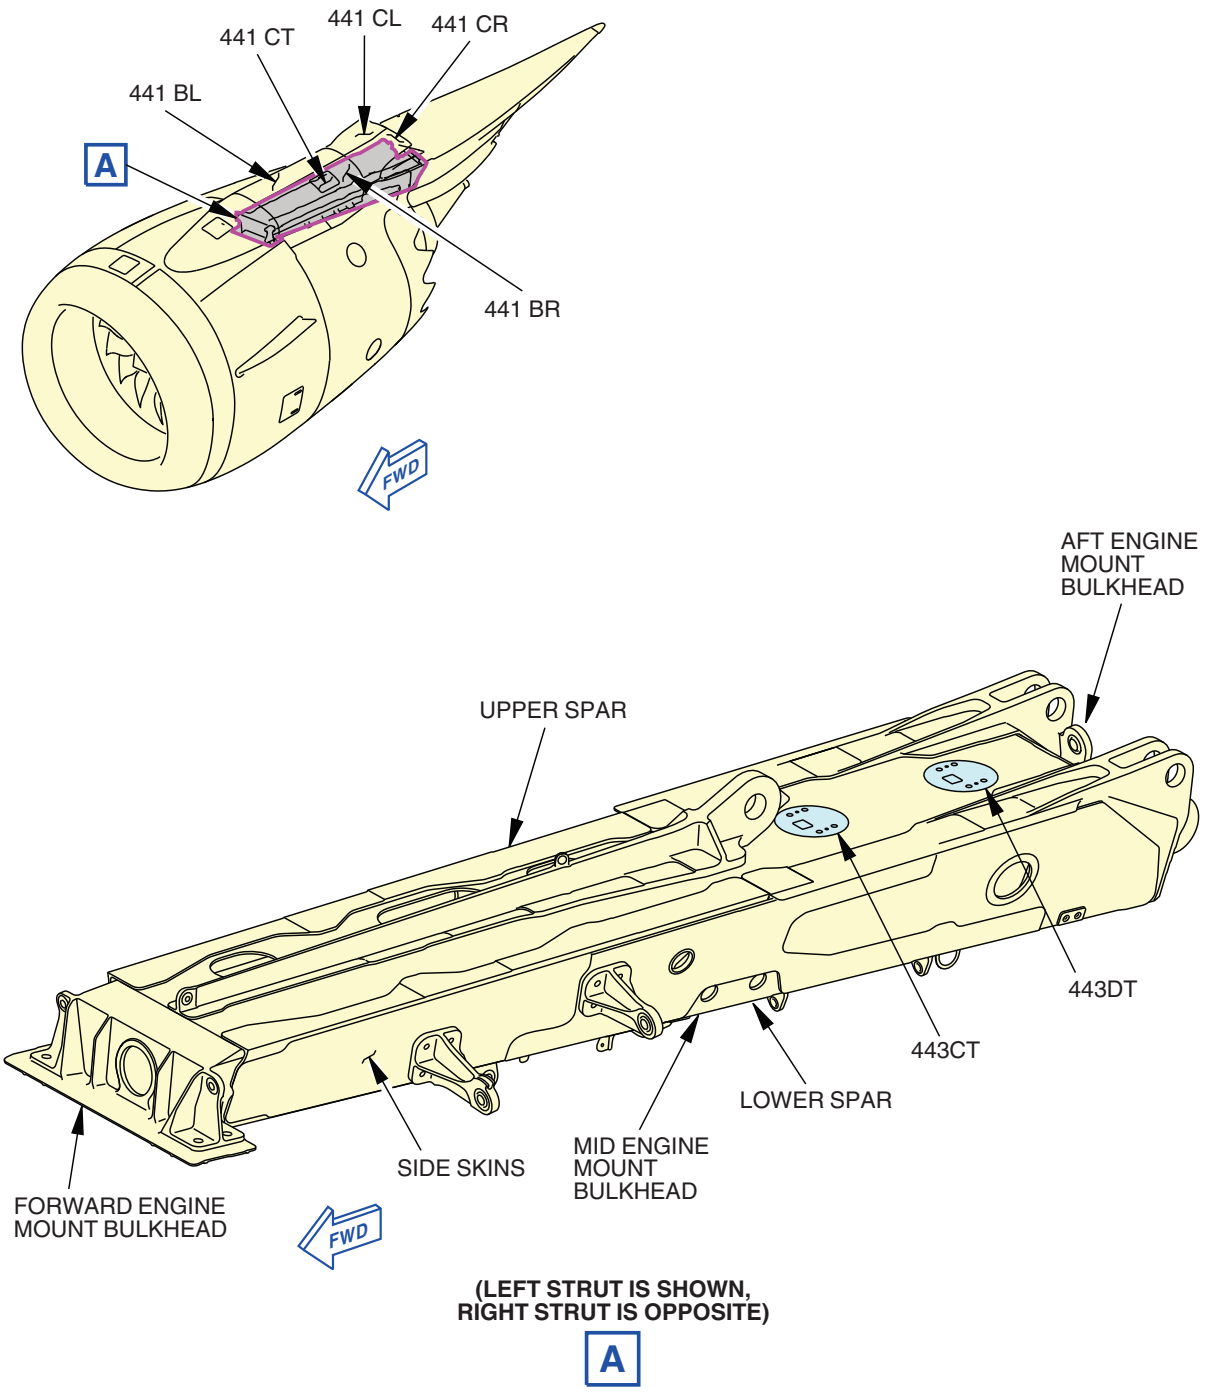

2947059 S0000723691_V2

Strut Torque Box - Right Engine General Visual (Internal)
Figure 217/05-41-04-990-817

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-04-210-818

18. INTERNAL - ZONAL (GVI): Aft Strut Fairing - Engine No. 2

(Figure 218)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
444	Engine 2 - Aft Strut Fairing

D. Access Panels

Number	Name/Location
444AL	Aft Strut Fairing, Left Panel, Strut 2
444AR	Aft Strut Fairing, Right Panel, Strut 2
444CR	Aft Strut Fairing, Right Access To Fuel Door, Strut 2

E. Zonal Inspection

SUBTASK 05-41-04-010-014

(1) Open these access panels:

Number	Name/Location
444AL	Aft Strut Fairing, Left Panel, Strut 2
444AR	Aft Strut Fairing, Right Panel, Strut 2
444CR	Aft Strut Fairing, Right Access To Fuel Door, Strut 2

SUBTASK 05-41-04-210-018

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Aft Strut Fairing - Engine No. 2. (EZAP)

SUBTASK 05-41-04-910-012

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-04-410-014

(5) Close these access panels:

Number	Name/Location
444AL	Aft Strut Fairing, Left Panel, Strut 2
444AR	Aft Strut Fairing, Right Panel, Strut 2
444CR	Aft Strut Fairing, Right Access To Fuel Door, Strut 2


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

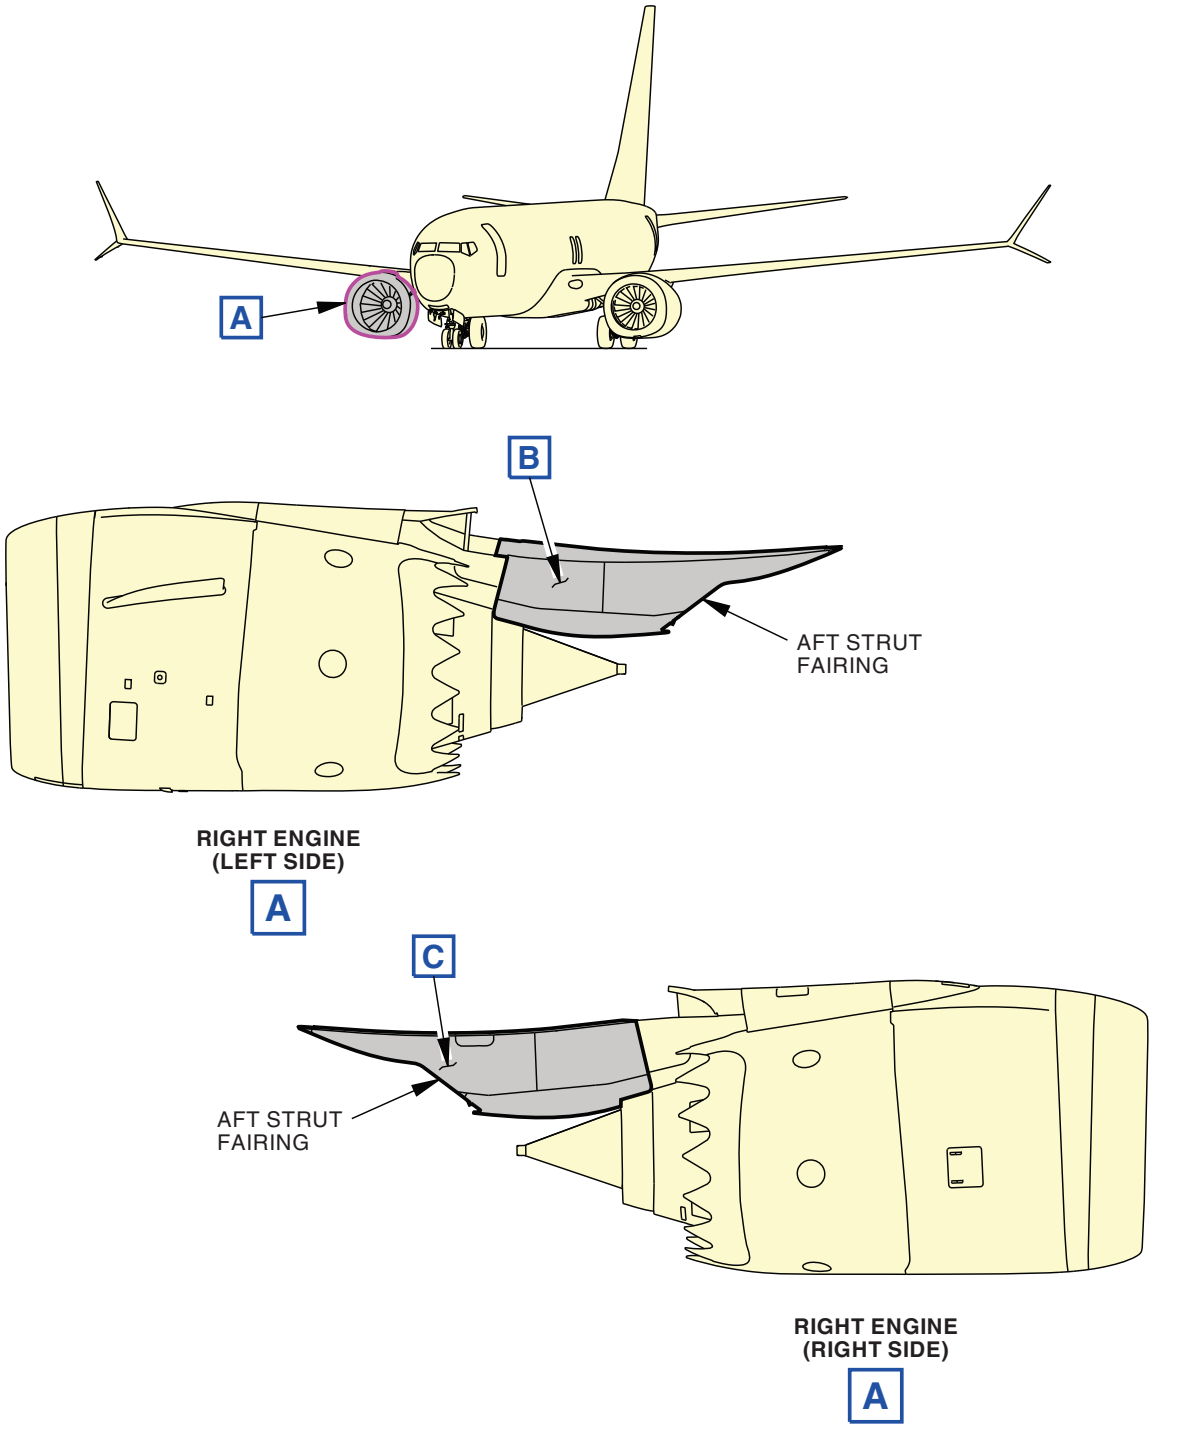

Aft Strut Fairing - Right Engine General Visual (Internal)
Figure 218/05-41-04-990-818 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

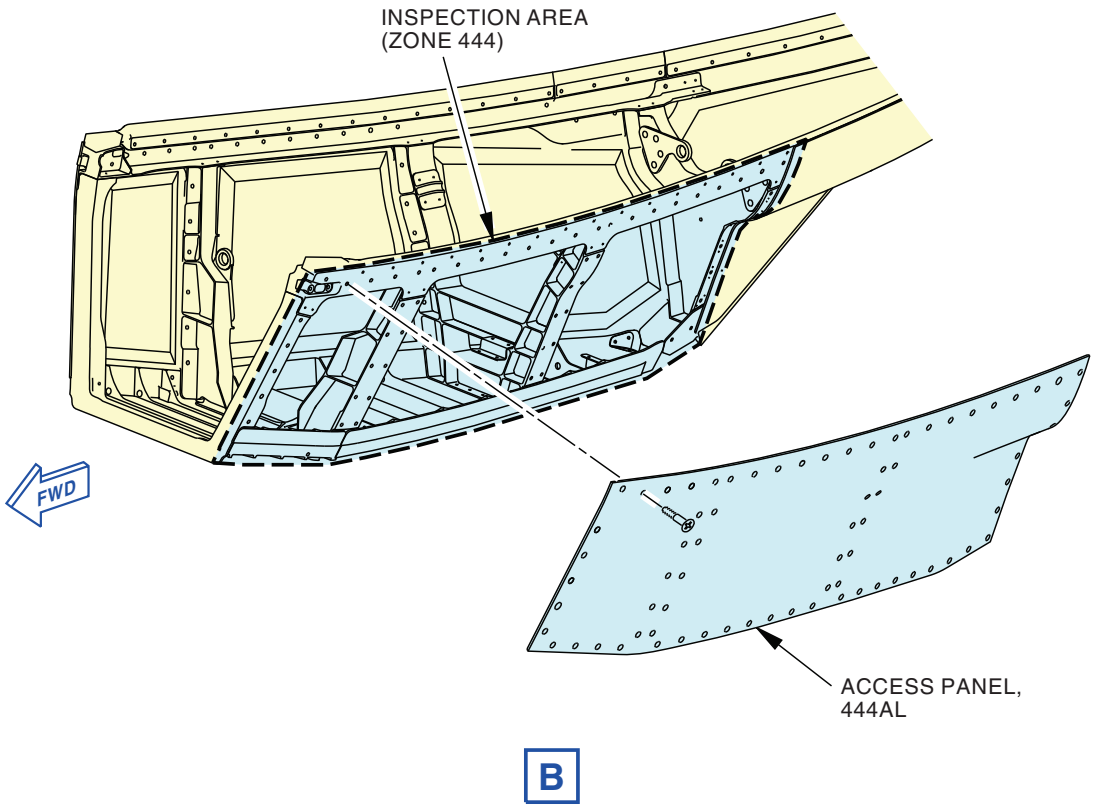

2410210 S00061525111_V2

Aft Strut Fairing - Right Engine General Visual (Internal)
Figure 218/05-41-04-990-818 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

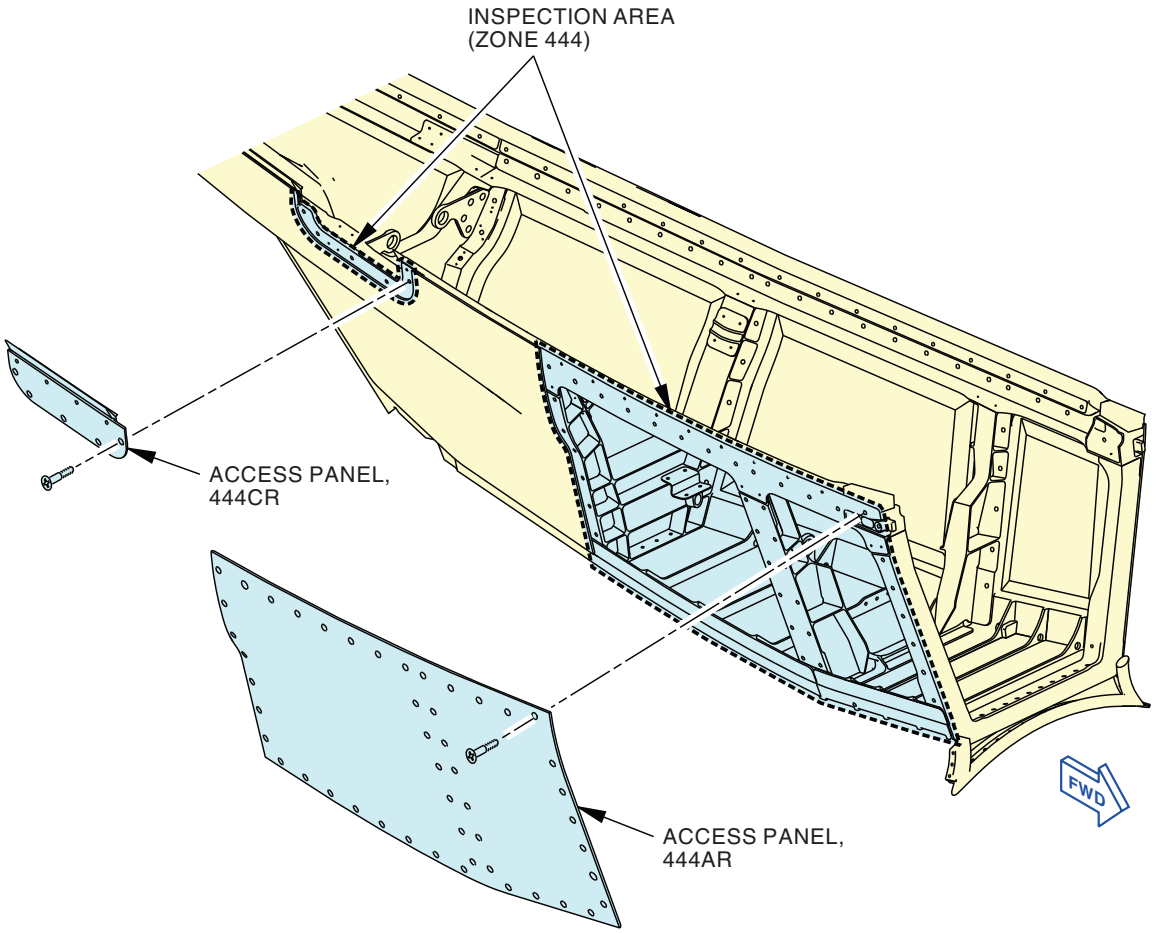

C

2410211 S00061525112_V2

Aft Strut Fairing - Right Engine General Visual (Internal)
Figure 218/05-41-04-990-818 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-801

1. EXTERNAL - ZONAL (GVI): Left Wing

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
510	Subzone - Left Wing: Leading Edge, Fwd of Front Spar, Inbd of Strut and Nacelle Gap Cover Area
520	Subzone - Left Wing: Leading Edge, Fwd of Front Spar, Outboard of Strut and Nacelle Gap Cover Area
530	Left Wing - Wing Inspar Area (Fuel Tanks), Inbd of Wing Rib 22, Wing Sta 643.50
540	Subzone - Left Wing, Wing Trailing Edge Flap Track Fairings
550	Subzone - Left Wing: Trailing Edge, Aft of Rear Spar, Inbd of Outboard Trailing Edge Flap
560	Subzone - Left Wing: Trailing Edge , Aft of Rear Spar, Outboard of Inbd Trailing Edge Flap, Inbd of Fixed Trailing Edge
570	Subzone - Left Wing: Fixed Trailing Edge, Outboard of Outboard Flap, Inboard of Wing Tip, Wing Buttock Line 658.17


B. Zonal Inspection

SUBTASK 05-41-05-210-001

(1) Perform an external zonal inspection (GVI) of the Left Wing, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. Control surfaces extended. No additional access panels required.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

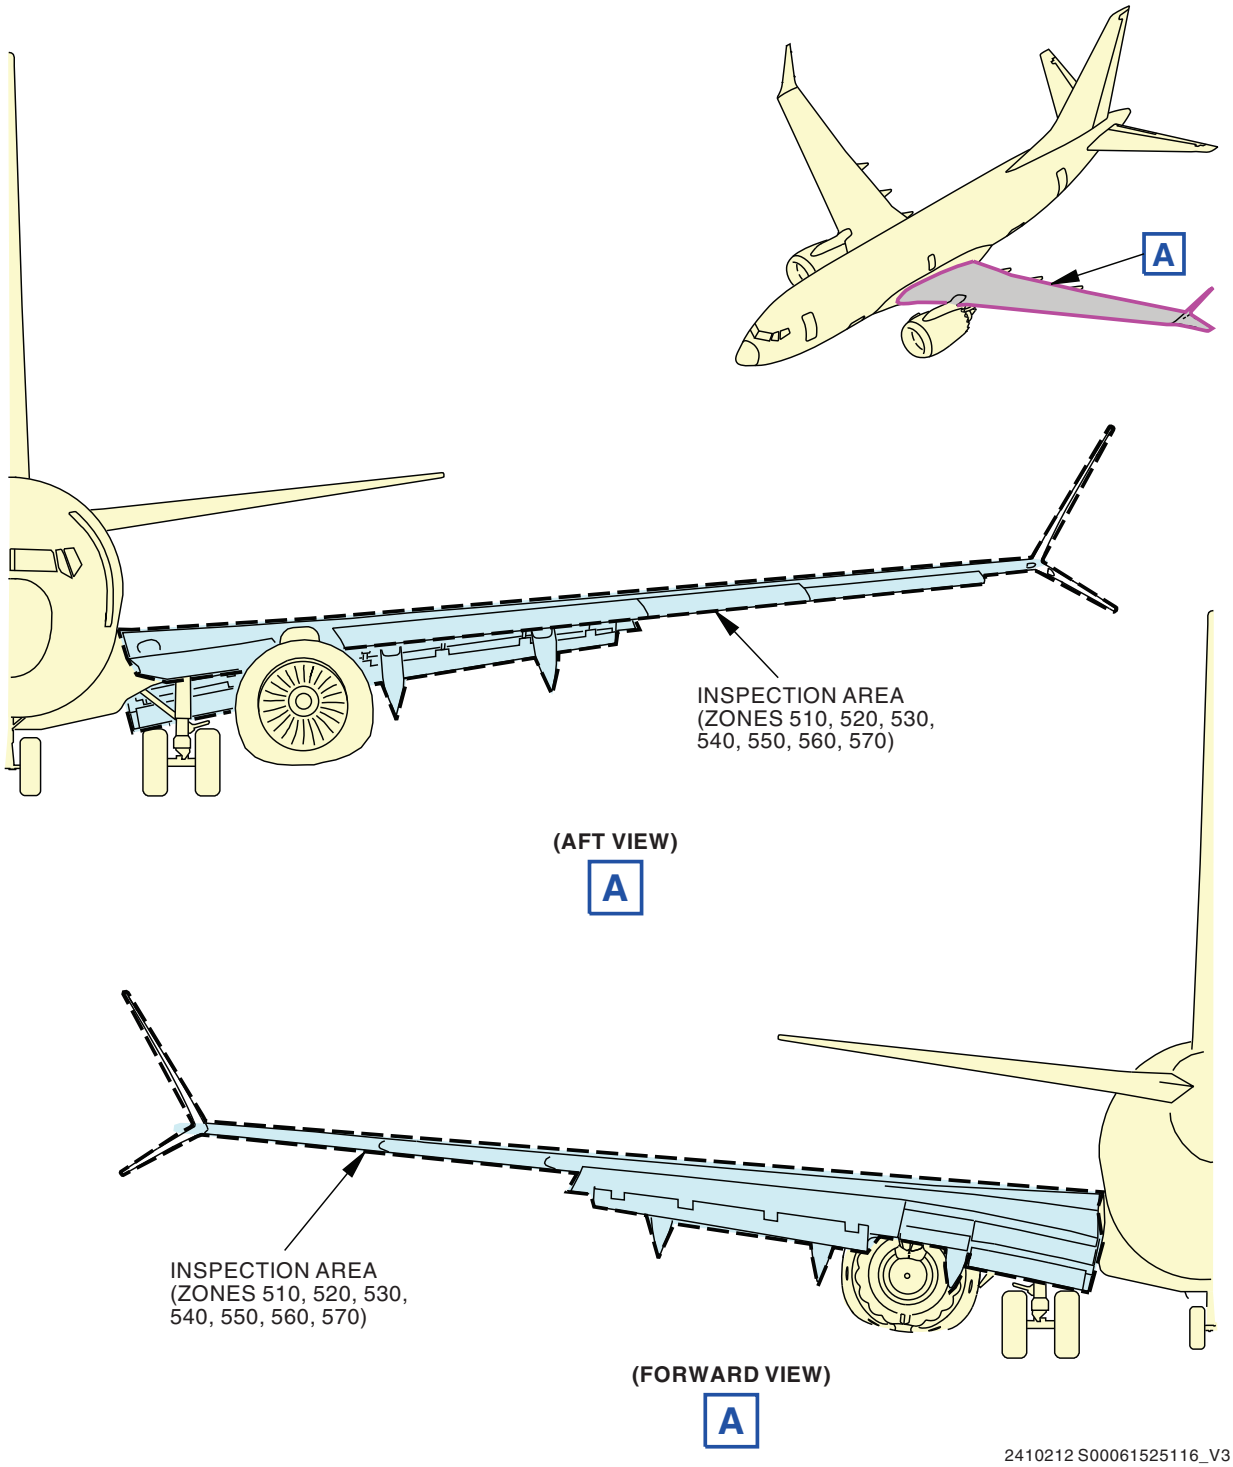

Left Wing - General Visual (External)
Figure 201/05-41-05-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

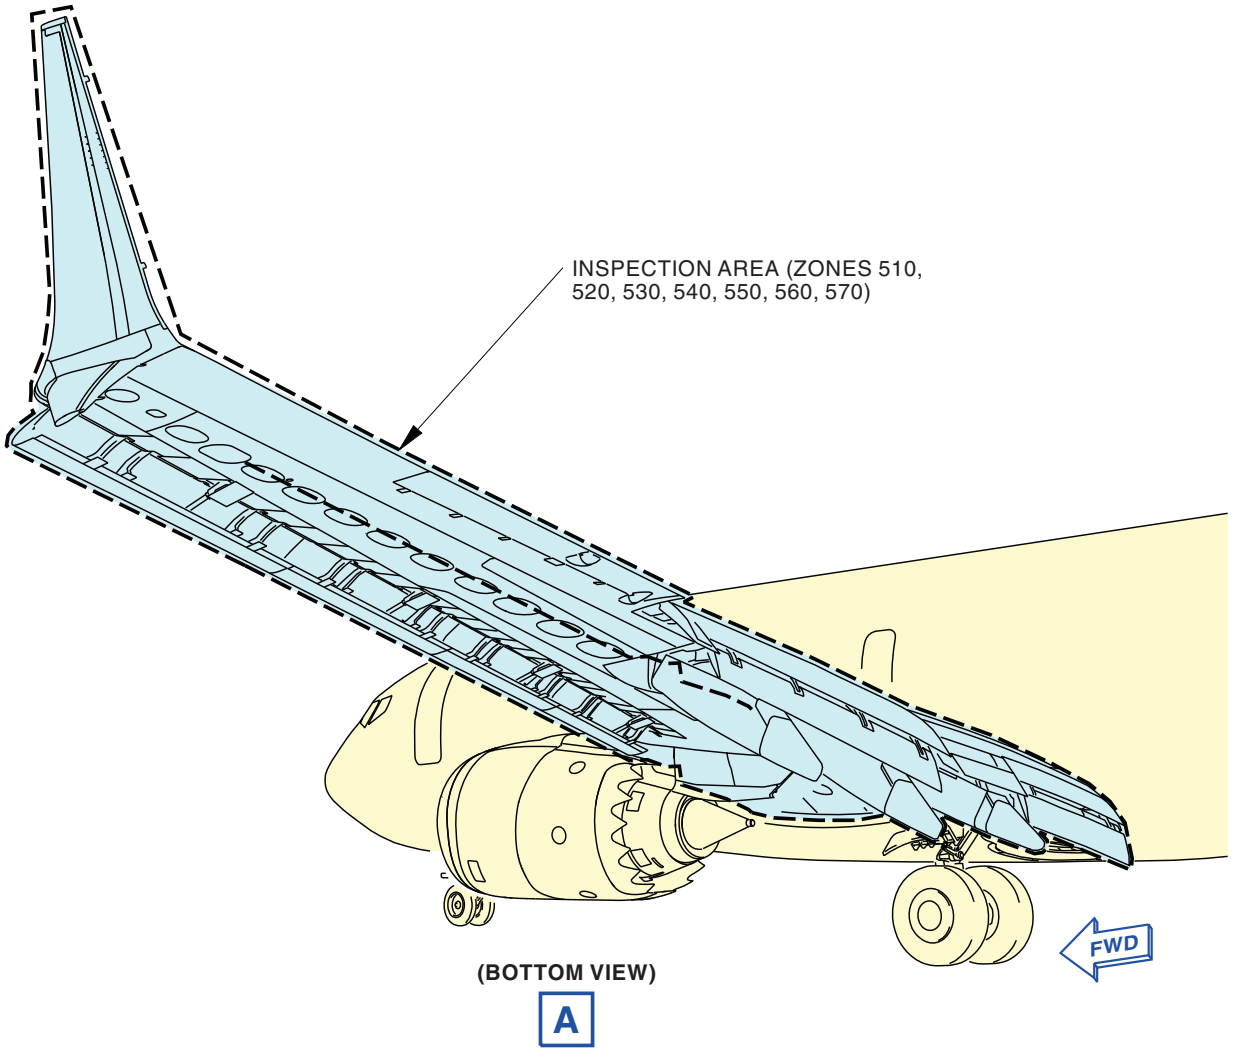

2410213 S00061525117_V1

Left Wing - General Visual (External)
Figure 201/05-41-05-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-802

2. EXTERNAL - ZONAL (GVI): Winglet - Left Wing

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
527	Left Winglet


B. Zonal Inspection

SUBTASK 05-41-05-210-002

(1) Perform an external zonal inspection (GVI) of the upper and lower blades of the Winglet - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

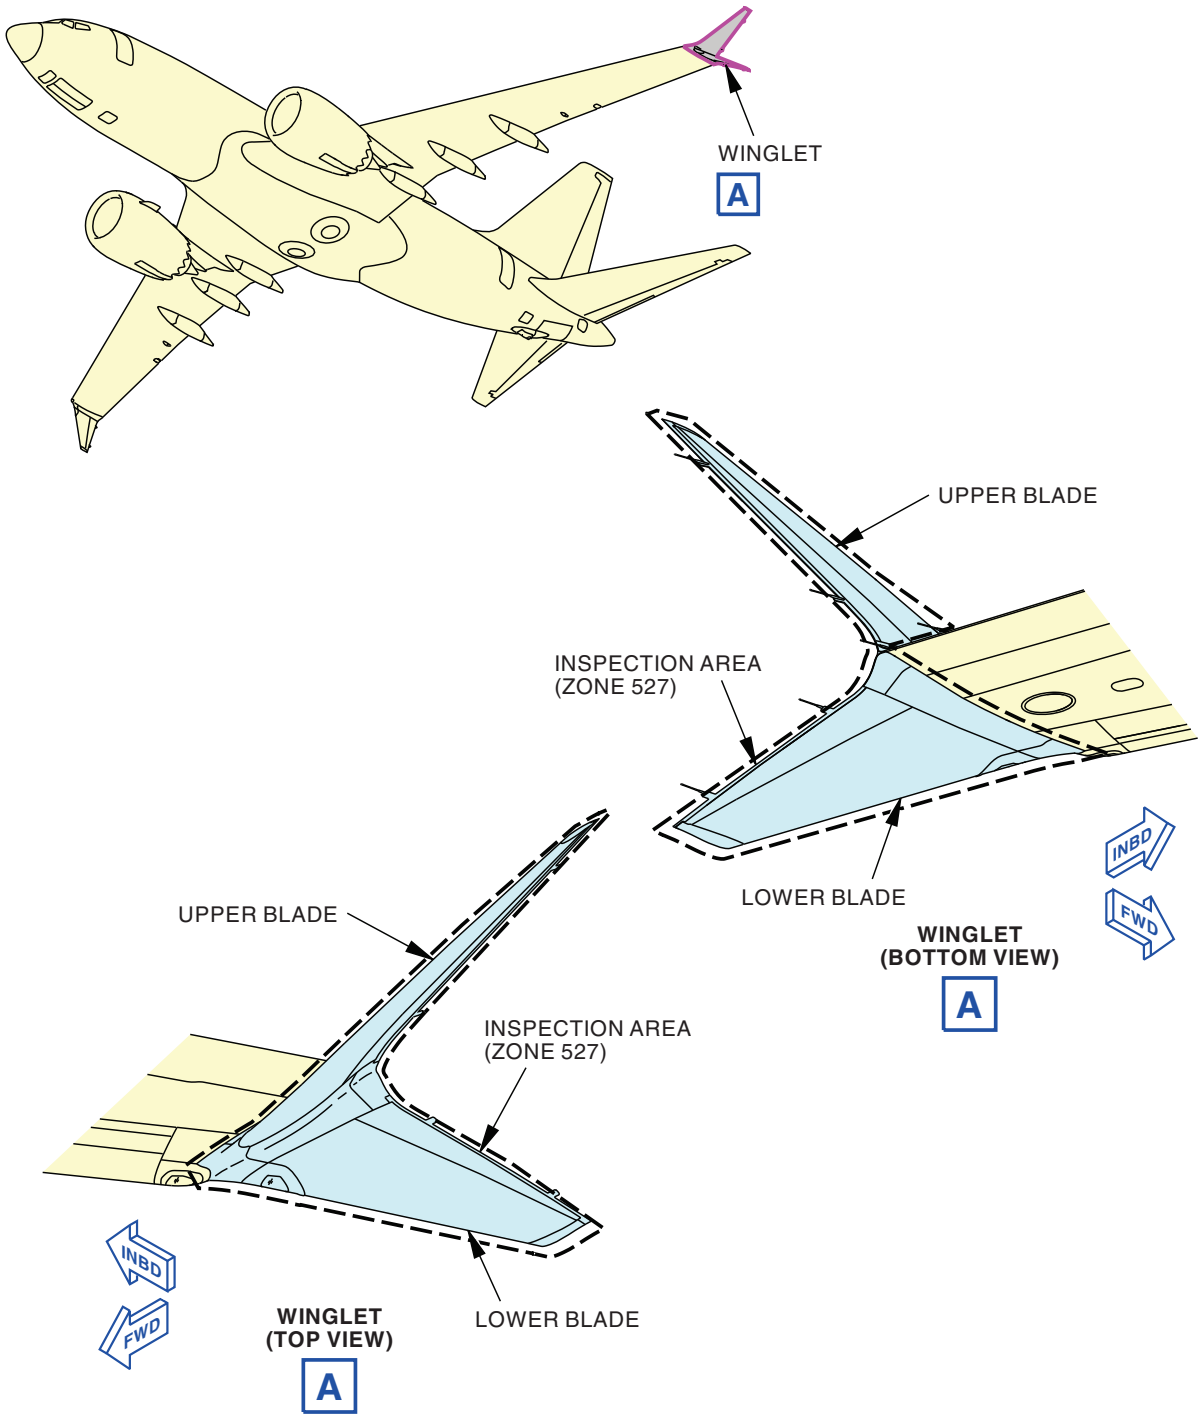

2410214 S00061525119_V2

Left Winglet - General Visual (External)
Figure 202/05-41-05-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-803

3. INTERNAL - ZONAL (GVI): Winglet - Left Wing

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
57-31-25-000-801	Winglet Access Panels Removal (P/B 401)
57-31-25-400-801	Winglet Access Panel Installation (P/B 401)

B. Location Zones

Zone	Area
527	Left Winglet

C. Access Panels

Number	Name/Location
527BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
527BL	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
527BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET

D. Zonal Inspection

SUBTASK 05-41-05-010-001

(1) Remove these winglet access panels:

(TASK 57-31-25-000-801)

Number	Name/Location
527BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
527BL	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
527BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET

SUBTASK 05-41-05-210-003

(2) Perform an internal zonal inspection (GVI) of the Winglet - Left Wing.

SUBTASK 05-41-05-410-001


(3) Install these winglet access panels:

(TASK 57-31-25-400-801)

Number	Name/Location
527BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
527BL	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
527BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

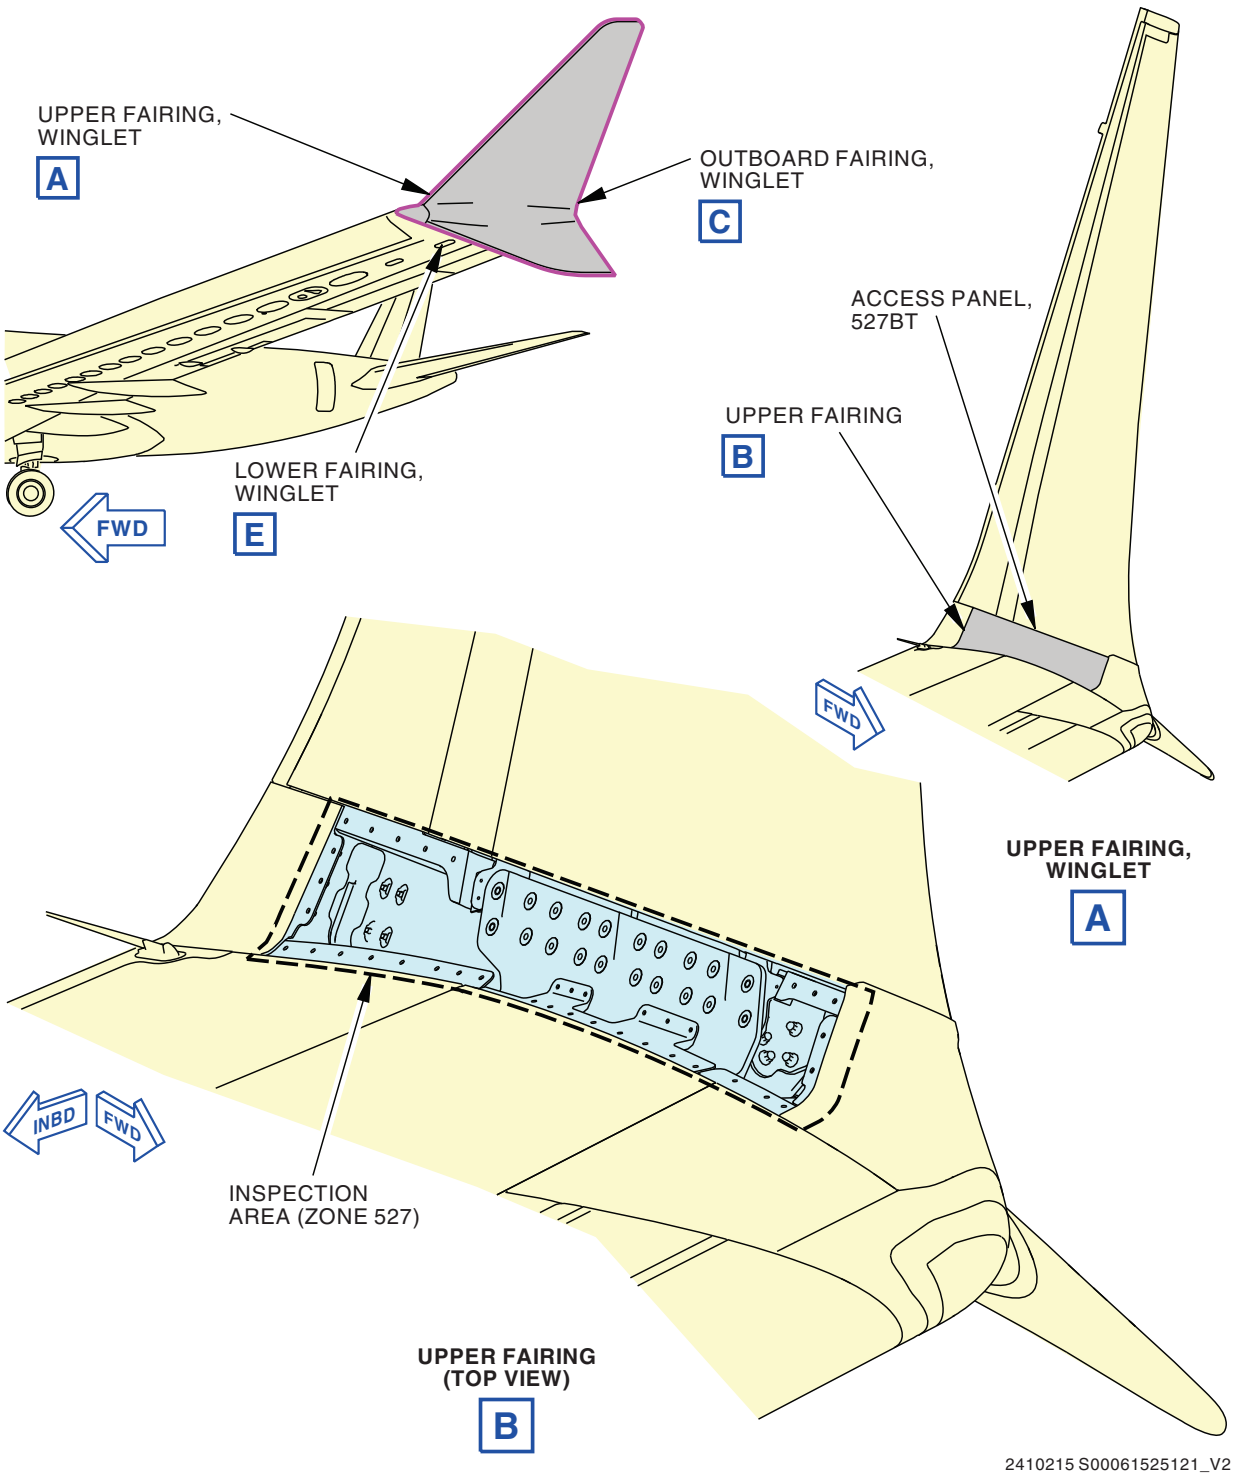


Left Winglet - General Visual (Internal)
Figure 203/05-41-05-990-803 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

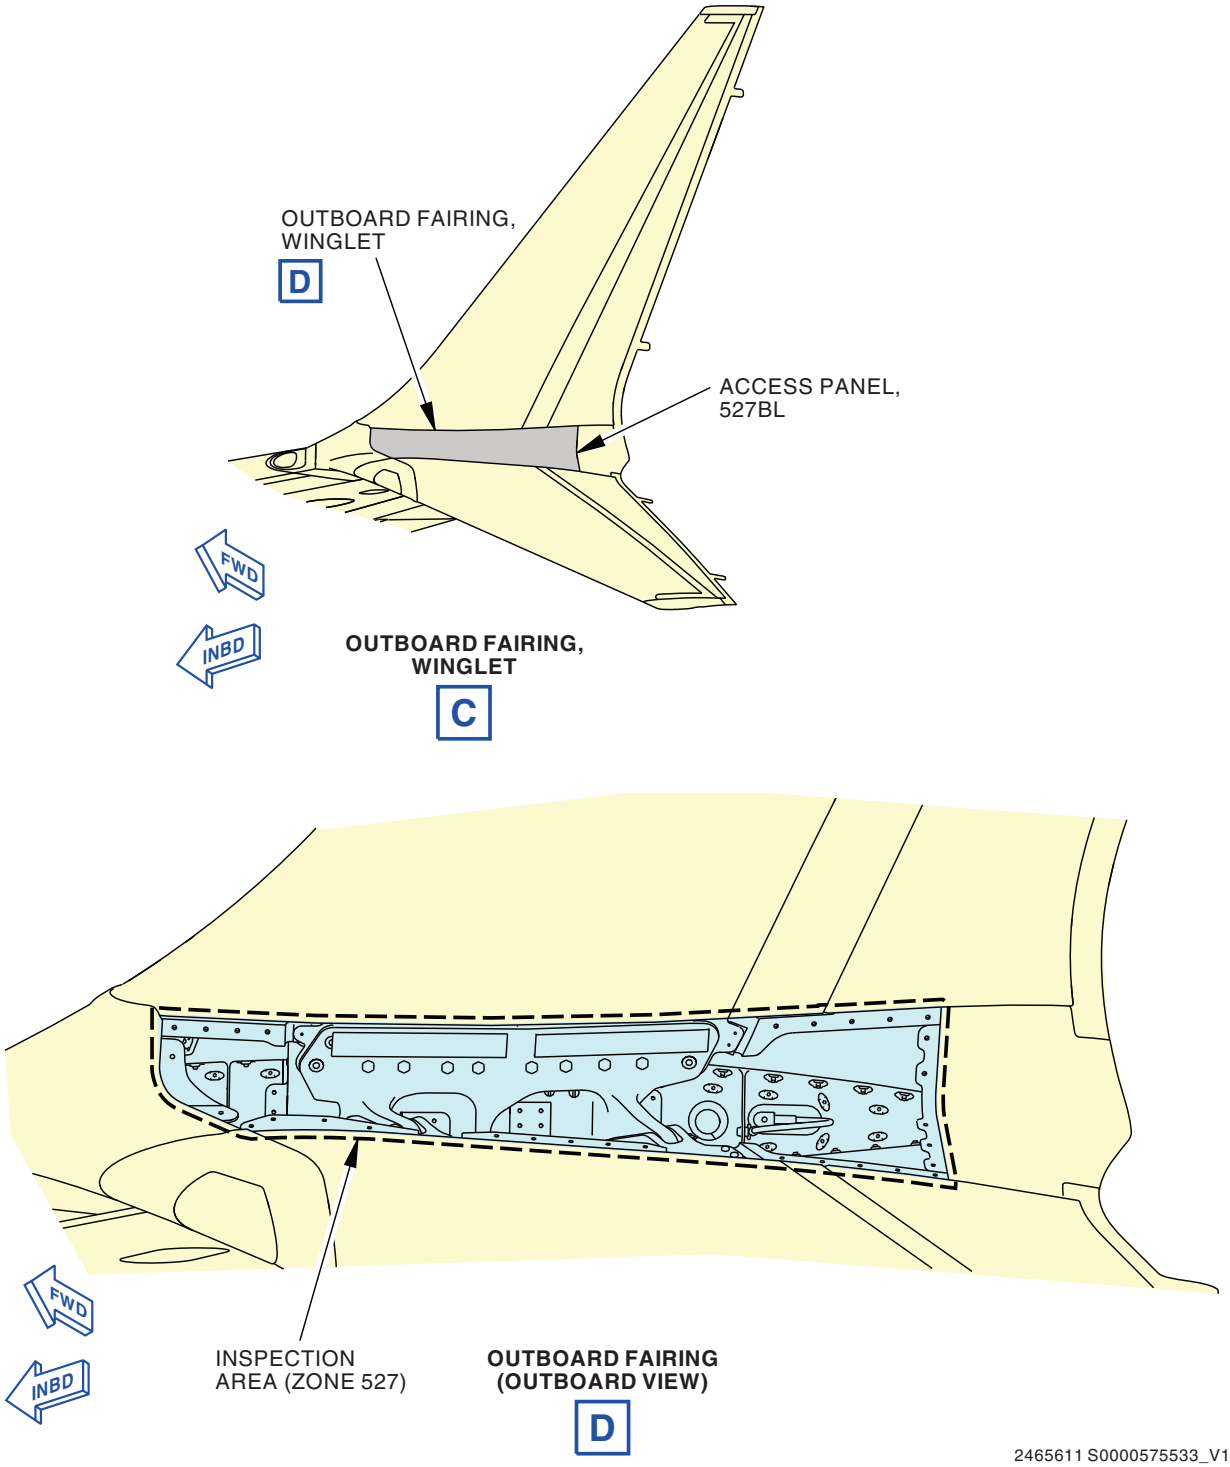

Left Winglet - General Visual (Internal)
Figure 203/05-41-05-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

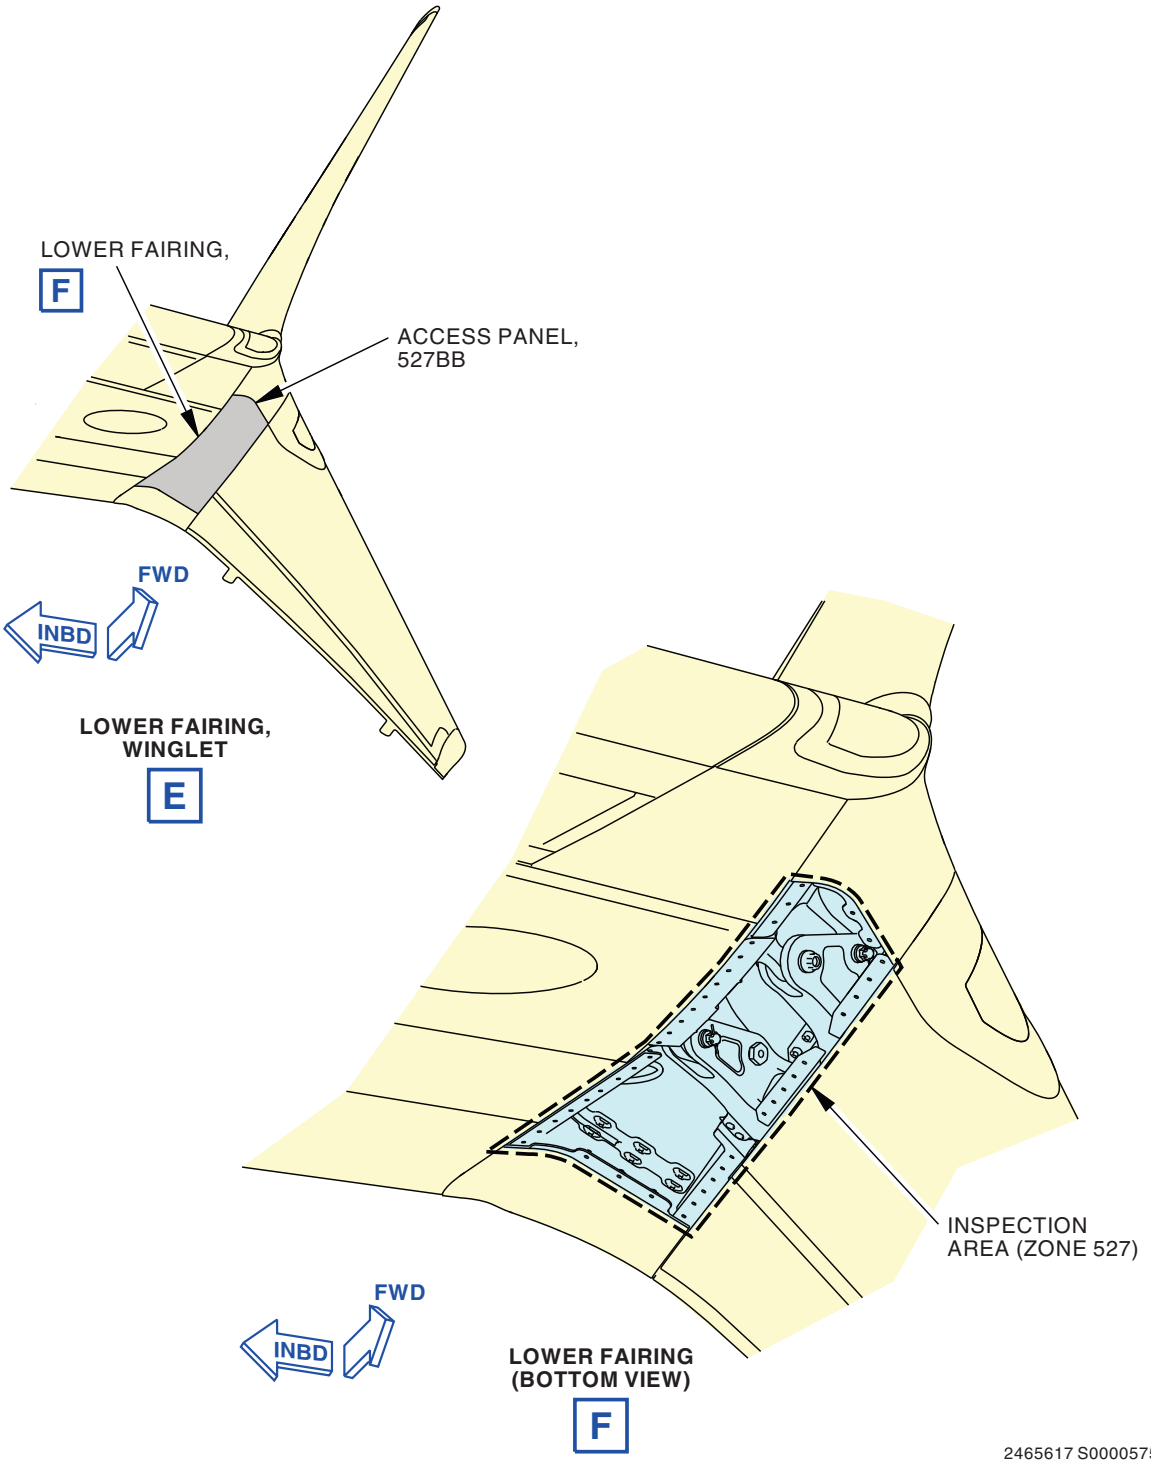

Left Winglet - General Visual (Internal)
Figure 203/05-41-05-990-803 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-804

4. EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
511	Left Wing - Leading Edge To Front Spar

B. Zonal Inspection


NOTE: Excluding surface under Wing-to-Body Fairing.

SUBTASK 05-41-05-210-004

(1) Perform an external zonal inspection (GVI) of the Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

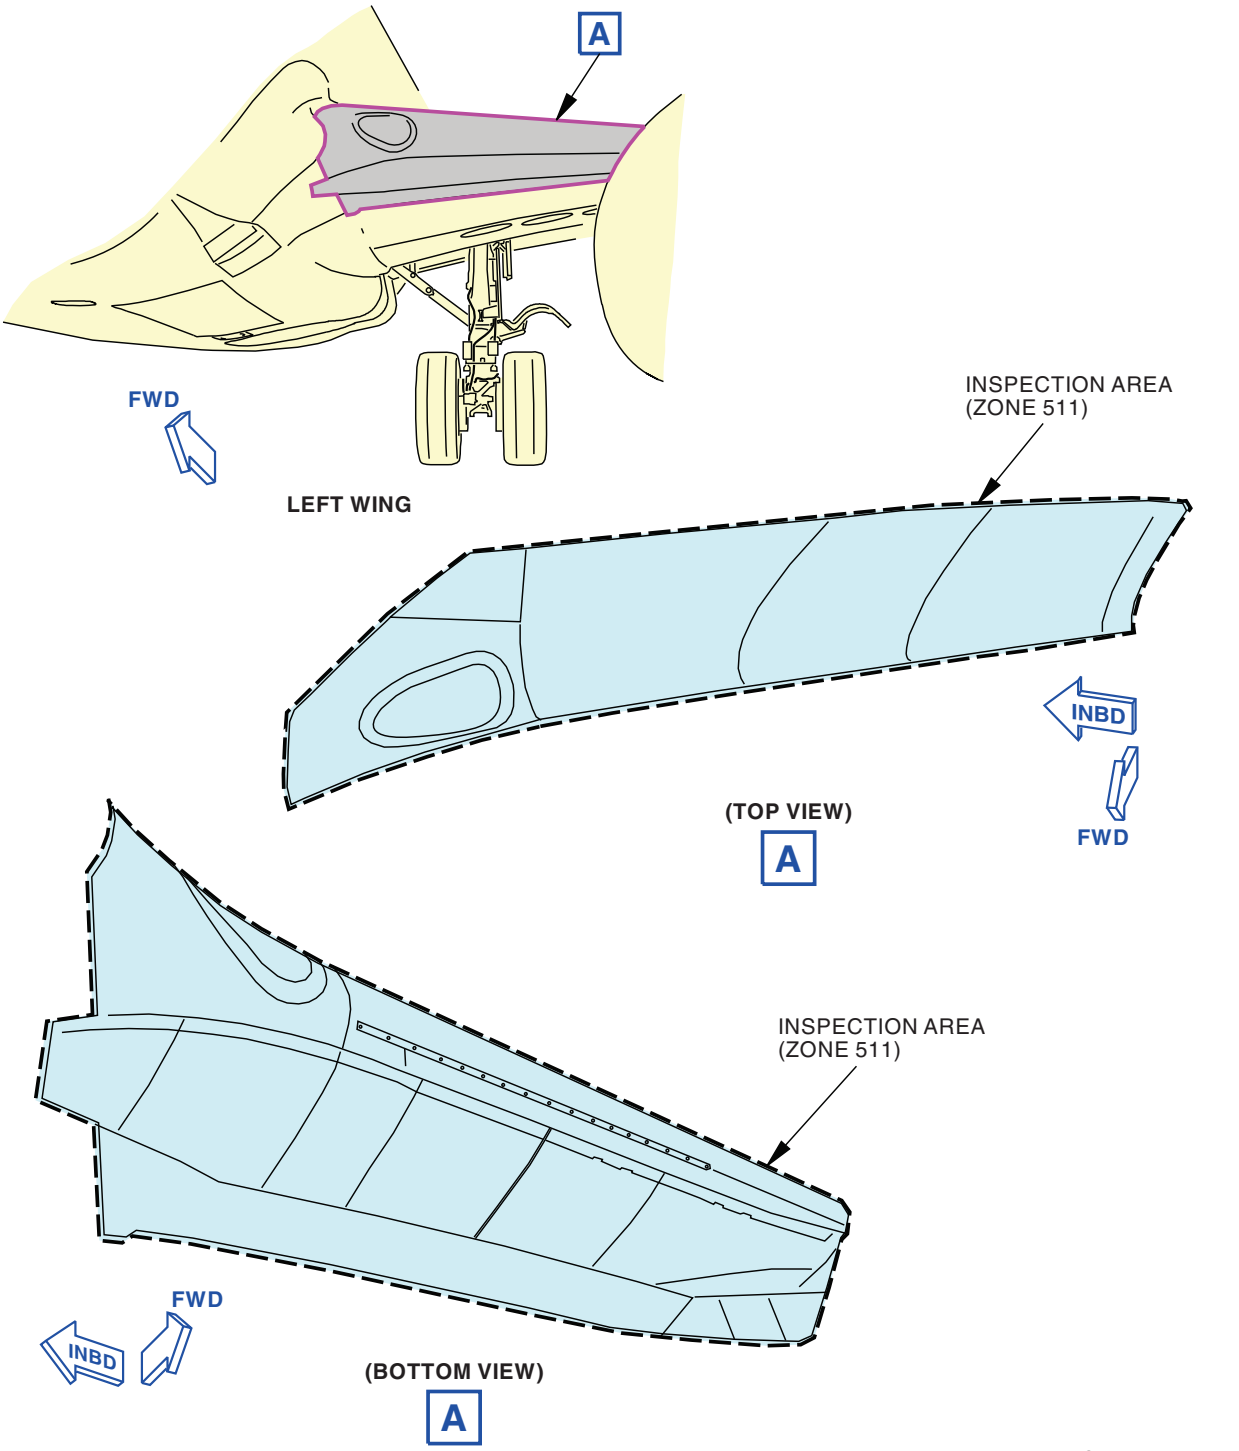

Leading Edge to Front Spar (Inboard of Nacelle Strut) Left Wing - General Visual (External)
Figure 204/05-41-05-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-805

5. INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
511	Left Wing - Leading Edge To Front Spar

D. Access Panels

Number	Name/Location
511AB	Inboard Leading Edge, Lower Removable Panel
511AT	Inboard Leading Edge, Strakelet Upper Panel
511BT	Fairing

E. Zonal Inspection

SUBTASK 05-41-05-010-002

(1) Open these access panels:

Number	Name/Location
511AB	Inboard Leading Edge, Lower Removable Panel
511AT	Inboard Leading Edge, Strakelet Upper Panel
511BT	Fairing

NOTE: Flaps deployed or access panels removed.

SUBTASK 05-41-05-210-005

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing. (EZAP)

SUBTASK 05-41-05-910-001

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-05-410-002

(5) Close these access panels:

Number	Name/Location
511AB	Inboard Leading Edge, Lower Removable Panel


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
511AT	Inboard Leading Edge, Strakelet Upper Panel
511BT	Fairing


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

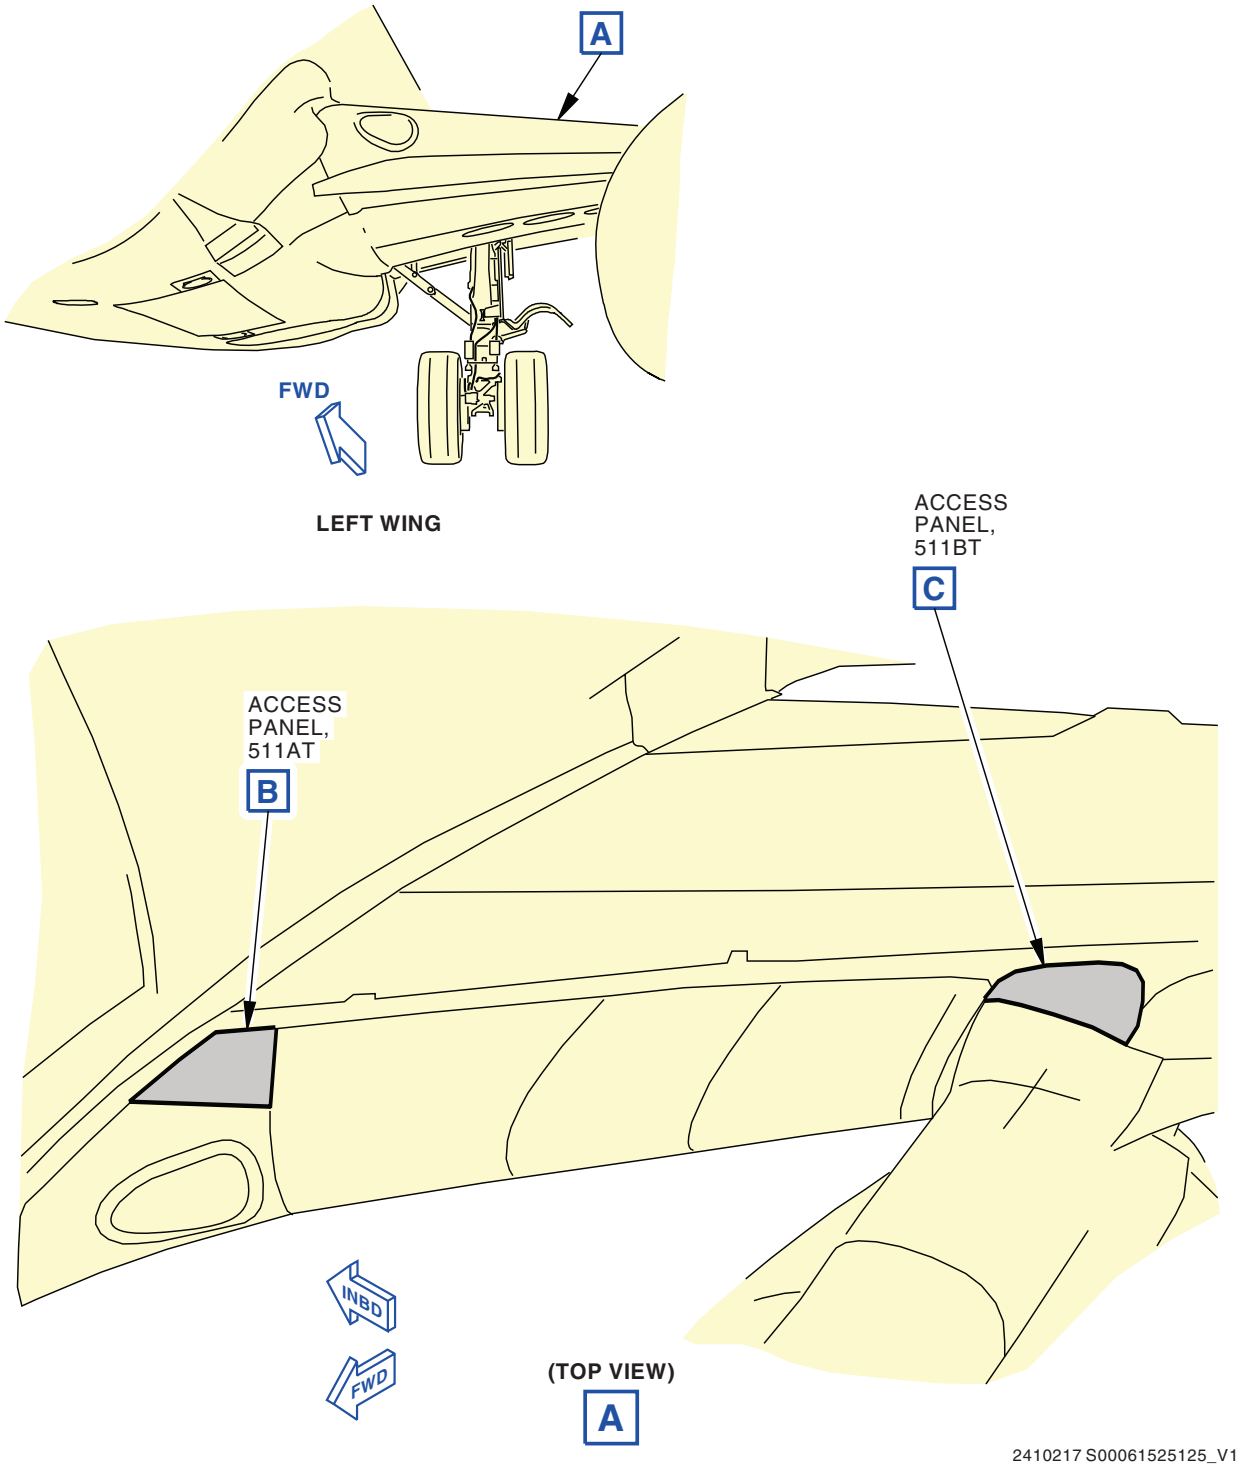


Leading Edge to Front Spar (Inboard of Nacelle Strut) Left Wing - General Visual (Internal)
Figure 205/05-41-05-990-805 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

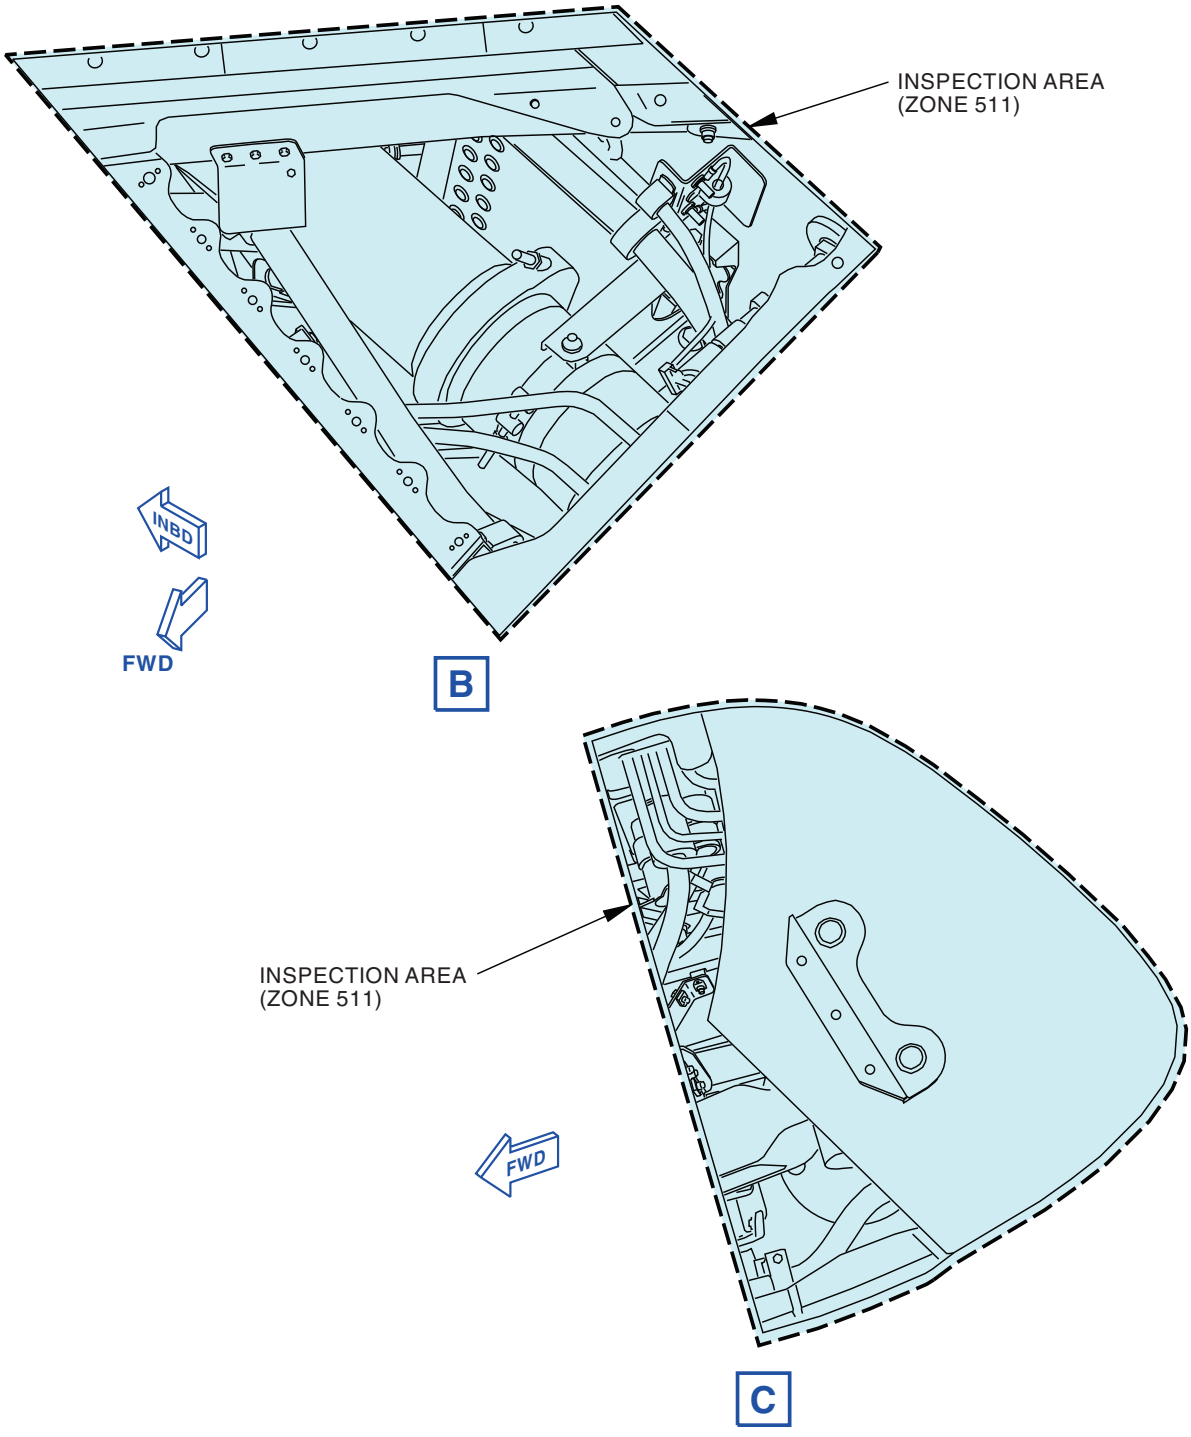

Leading Edge to Front Spar (Inboard of Nacelle Strut) Left Wing - General Visual (Internal)
Figure 205/05-41-05-990-805 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

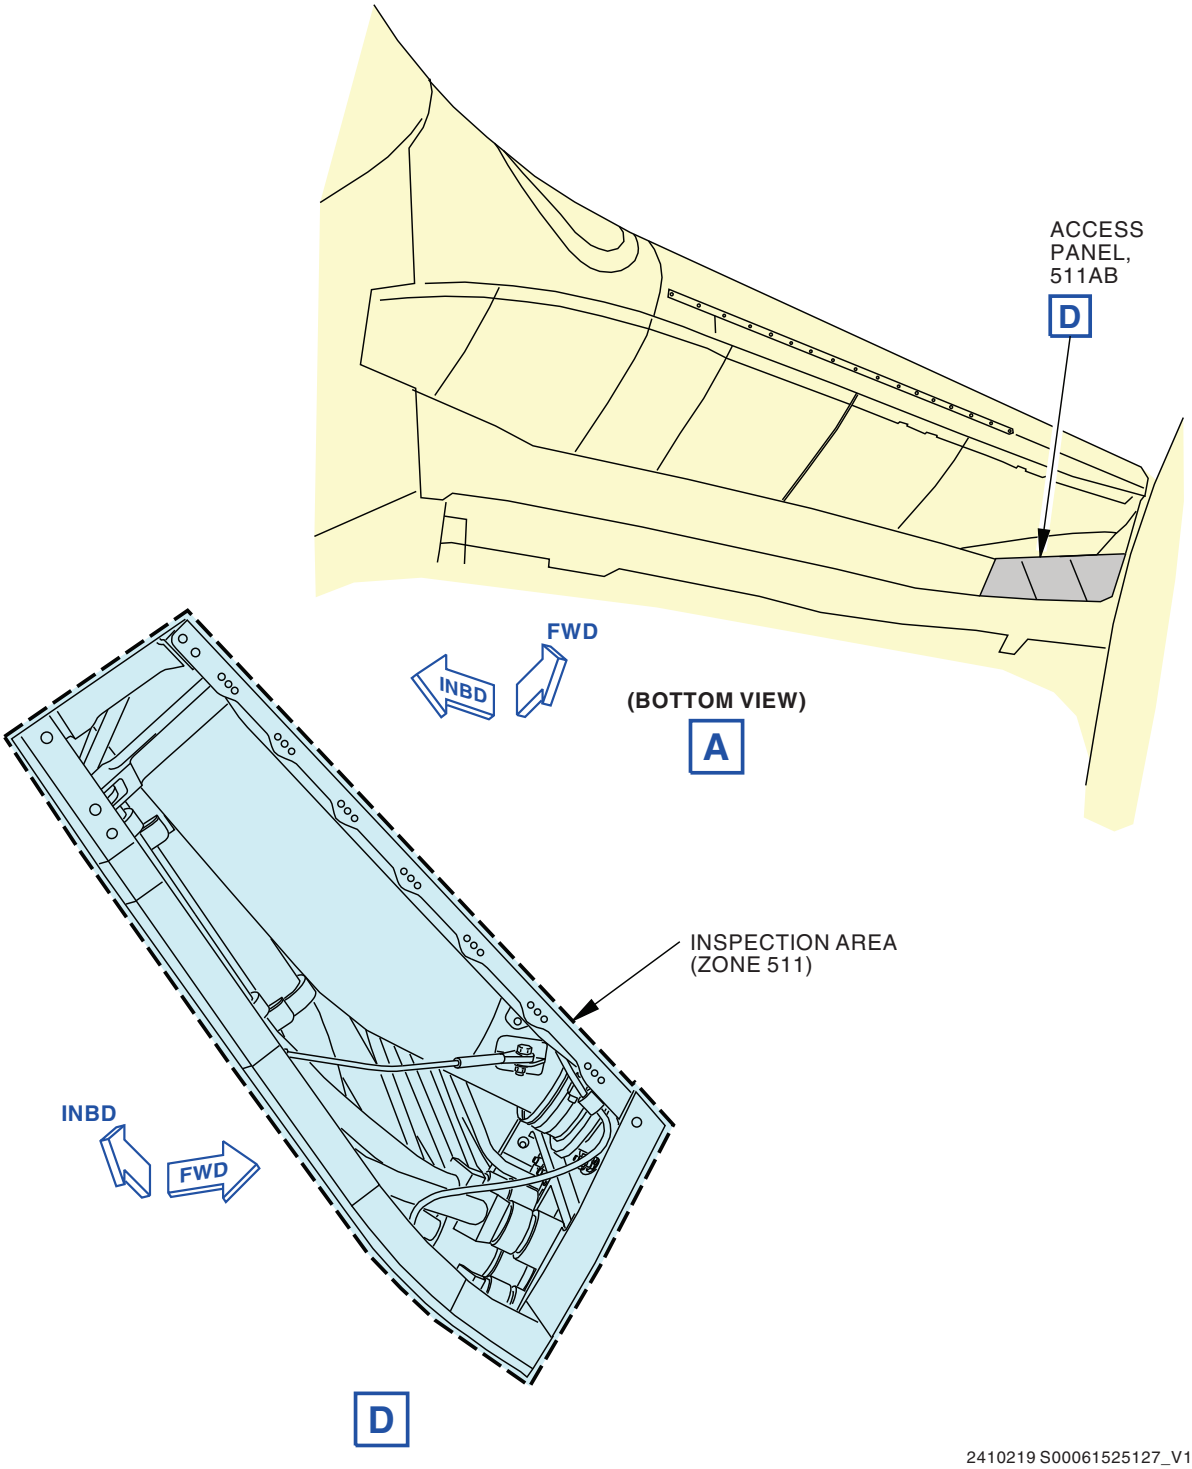

Leading Edge to Front Spar (Inboard of Nacelle Strut) Left Wing - General Visual (Internal)
Figure 205/05-41-05-990-805 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-806

6. EXTERNAL - ZONAL (GVI): Krueger Flaps No. 1 and 2 - Left Wing

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
512	Left Wing - Krueger Flap No. 2
513	Left Wing - Krueger Flap No. 1


B. Zonal Inspection

SUBTASK 05-41-05-210-006


(1) Perform an external zonal inspection (GVI) of the Krueger Flaps No. 1 and 2 - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

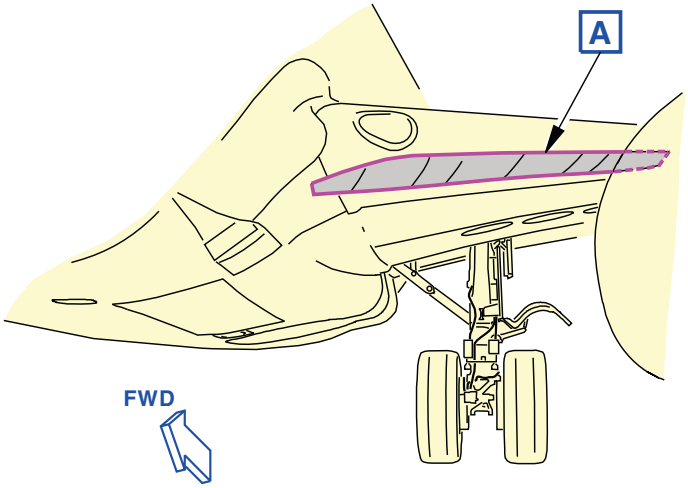

LEFT WING

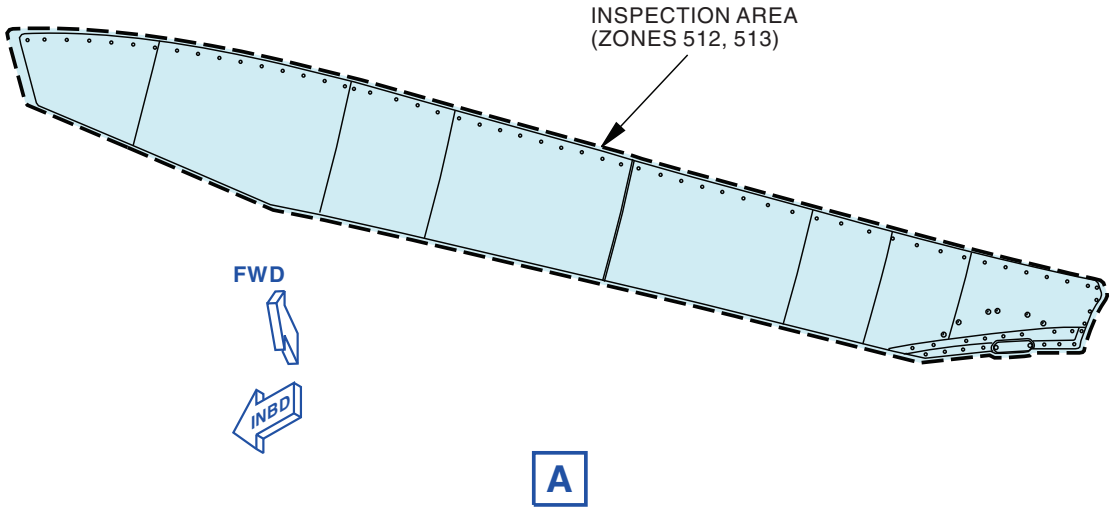

2410220 S00061525129_V2

Krueger Flaps No. 1 and 2 General Visual (External)
Figure 206/05-41-05-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-807

7. INTERNAL - ZONAL (GVI): Krueger Flaps No.1 and 2 - Left Wing

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
512	Left Wing - Krueger Flap No. 2
513	Left Wing - Krueger Flap No. 1

B. Zonal Inspection


NOTE: Flaps deployed.

SUBTASK 05-41-05-210-007

(1) Perform an internal zonal inspection (GVI) of the Krueger Flaps No. 1 and 2 - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

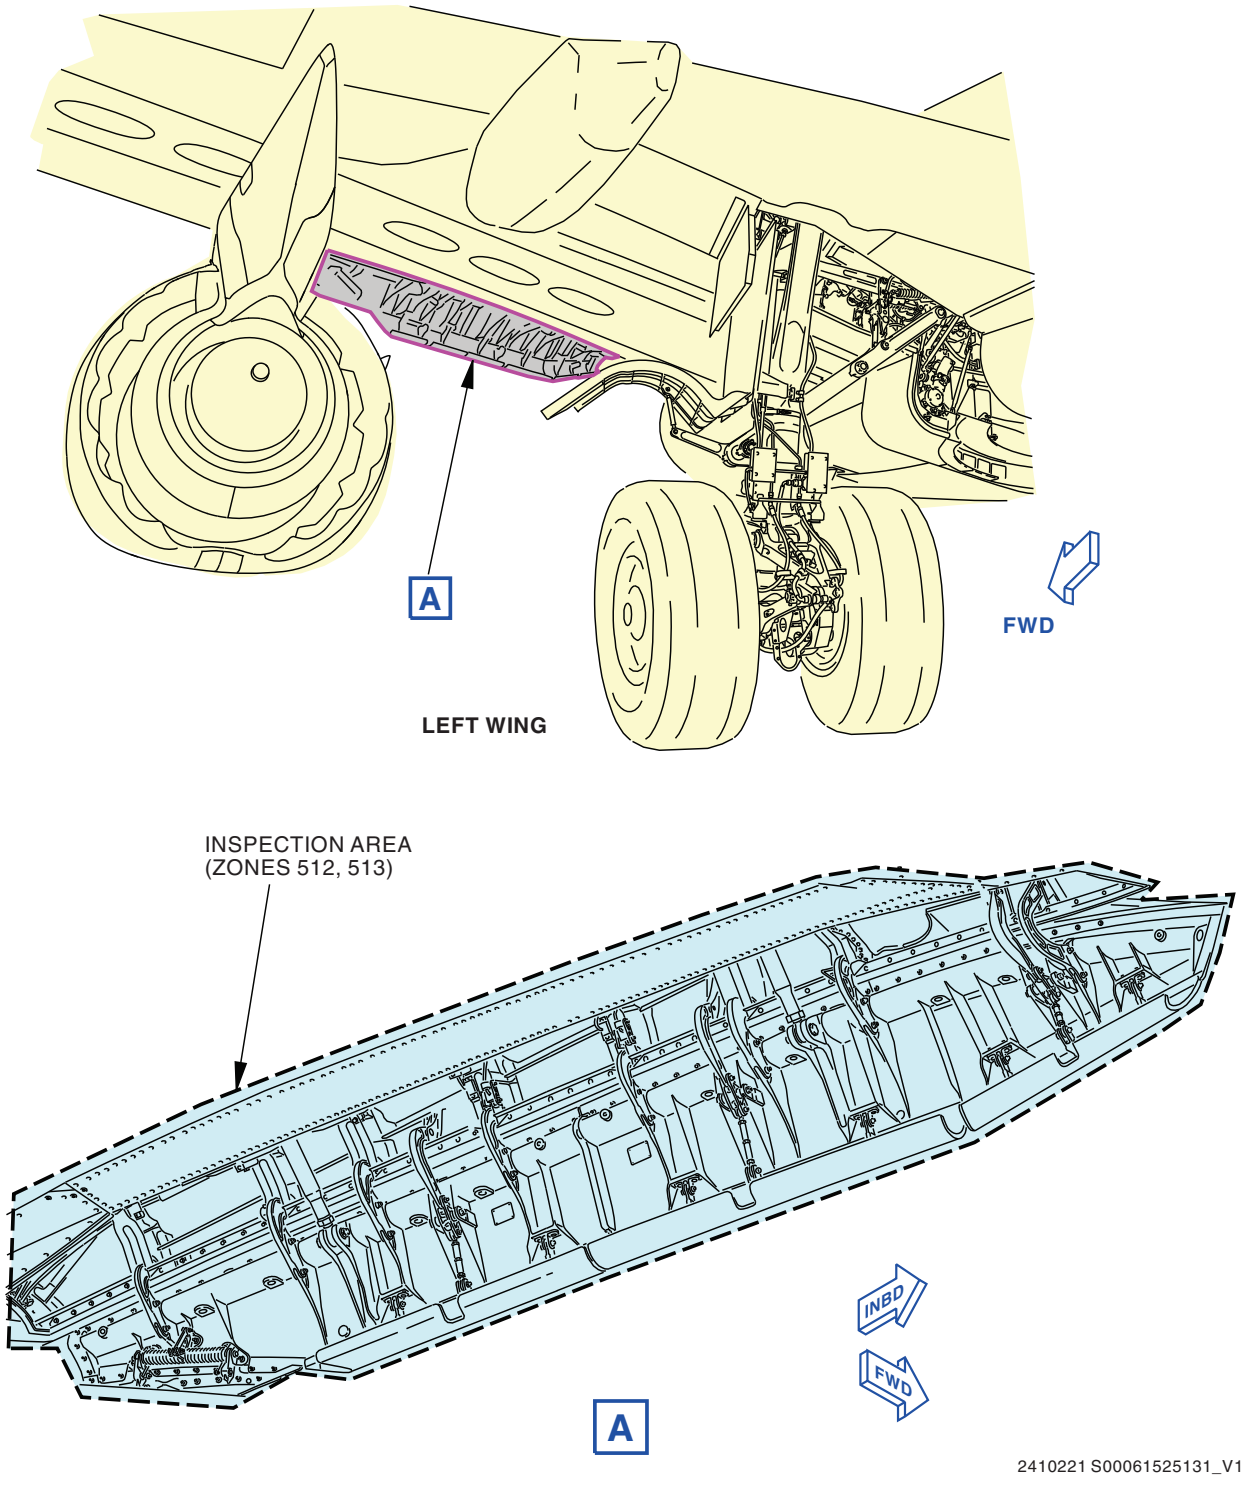

Krueger Flaps No. 1 and 2 General Visual (Internal)
Figure 207/05-41-05-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-808

8. EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
521	Left Wing - Leading Edge to Front Spar

B. Zonal Inspection


NOTE: Slats deployed.

SUBTASK 05-41-05-210-008

(1) Perform an external zonal inspection (GVI) of the Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

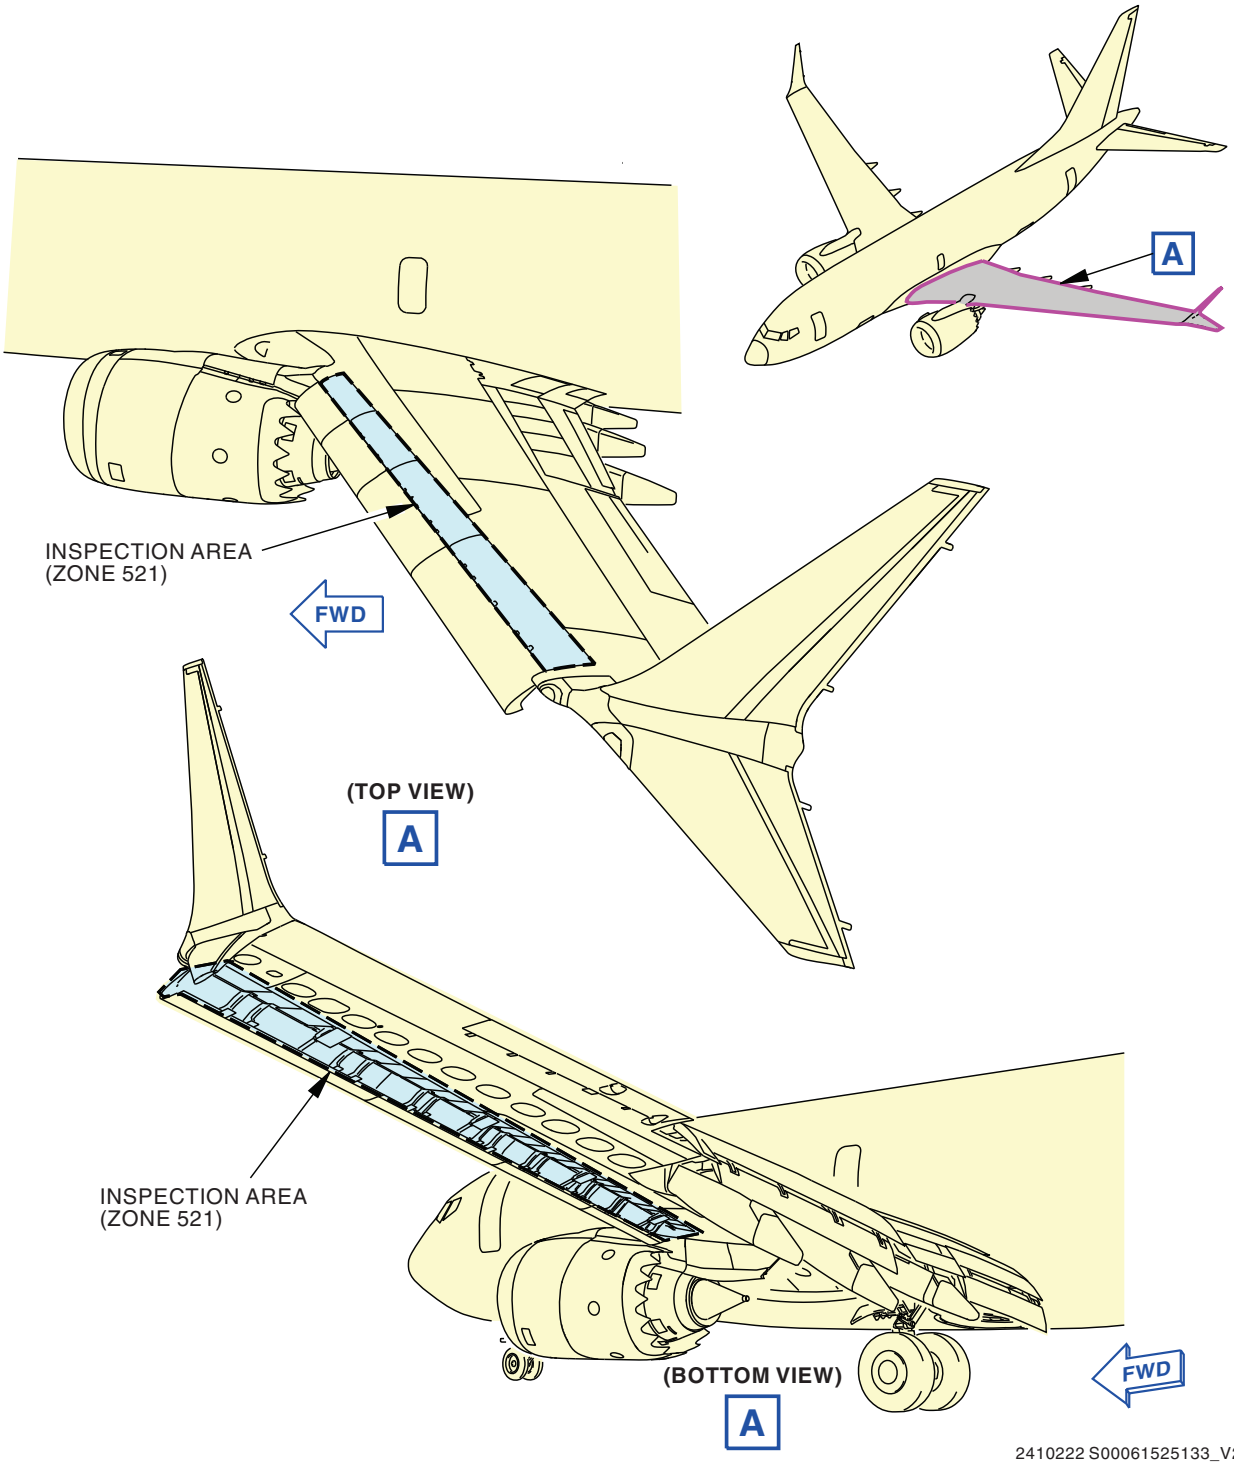

Leading Edge to Front Spar (Outboard of Nacelle Strut) Left Wing - General Visual (External)
Figure 208/05-41-05-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-809

9. INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
57-41-02-000-801	Leading Edge Access Panel Removal (P/B 201)
57-41-02-400-801	Leading Edge Access Panel Installation (P/B 201)

C. Location Zones

Zone	Area
521	Left Wing - Leading Edge to Front Spar

D. Access Panels

Number	Name/Location
521AAB	Lower Leading Edge Access Panel
521AB	Outboard Leading Edge Blowout Door
521ABB	Lower Leading Edge Access Panel
521BB	Outboard Lower Fixed Leading Edge Access Panel
521CB	Lower Leading Edge Access Panel
521DB	Lower Leading Edge Access Panel
521EB	Lower Leading Edge Access Panel
521FB	Lower Leading Edge Access Panel
521GB	Lower Leading Edge Access Panel
521HB	Lower Leading Edge Access Panel
521JB	Lower Leading Edge Access Panel
521KB	Lower Leading Edge Access Panel
521LB	Lower Leading Edge Access Panel
521MB	Lower Leading Edge Access Panel
521NB	Lower Leading Edge Access Panel
521PB	Lower Leading Edge Access Panel
521QB	Lower Leading Edge Access Panel
521RB	Lower Leading Edge Access Panel
521SB	Lower Leading Edge Access Panel
521TB	Lower Leading Edge Access Panel
521UB	Lower Leading Edge Access Panel
521VB	Lower Leading Edge Access Panel
521WB	Lower Leading Edge Access Panel

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
521XB	Lower Leading Edge Access Panel
521YB	Lower Leading Edge Access Panel
521ZB	Lower Leading Edge Access Panel

E. Zonal Inspection

SUBTASK 05-41-05-010-003

(1) Open these access panels:

(Leading Edge Access Panel Removal, TASK 57-41-02-000-801)

Number	Name/Location
521AAB	Lower Leading Edge Access Panel
521AB	Outboard Leading Edge Blowout Door
521ABB	Lower Leading Edge Access Panel
521BB	Outboard Lower Fixed Leading Edge Access Panel
521CB	Lower Leading Edge Access Panel
521DB	Lower Leading Edge Access Panel
521EB	Lower Leading Edge Access Panel
521FB	Lower Leading Edge Access Panel
521GB	Lower Leading Edge Access Panel
521HB	Lower Leading Edge Access Panel
521JB	Lower Leading Edge Access Panel
521KB	Lower Leading Edge Access Panel
521LB	Lower Leading Edge Access Panel
521MB	Lower Leading Edge Access Panel
521NB	Lower Leading Edge Access Panel
521PB	Lower Leading Edge Access Panel
521QB	Lower Leading Edge Access Panel
521RB	Lower Leading Edge Access Panel
521SB	Lower Leading Edge Access Panel
521TB	Lower Leading Edge Access Panel
521UB	Lower Leading Edge Access Panel
521VB	Lower Leading Edge Access Panel
521WB	Lower Leading Edge Access Panel
521XB	Lower Leading Edge Access Panel
521YB	Lower Leading Edge Access Panel
521ZB	Lower Leading Edge Access Panel

NOTE: Slats deployed.

SUBTASK 05-41-05-210-009

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-05-210-038

(3) Perform an internal zonal inspection (GVI) of the Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-05-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

SUBTASK 05-41-05-410-003


(5) Close these access panels:

(Leading Edge Access Panel Installation, TASK 57-41-02-400-801)

Number	Name/Location
521AAB	Lower Leading Edge Access Panel
521AB	Outboard Leading Edge Blowout Door
521ABB	Lower Leading Edge Access Panel
521BB	Outboard Lower Fixed Leading Edge Access Panel
521CB	Lower Leading Edge Access Panel
521DB	Lower Leading Edge Access Panel
521EB	Lower Leading Edge Access Panel
521FB	Lower Leading Edge Access Panel
521GB	Lower Leading Edge Access Panel
521HB	Lower Leading Edge Access Panel
521JB	Lower Leading Edge Access Panel
521KB	Lower Leading Edge Access Panel
521LB	Lower Leading Edge Access Panel
521MB	Lower Leading Edge Access Panel
521NB	Lower Leading Edge Access Panel
521PB	Lower Leading Edge Access Panel
521QB	Lower Leading Edge Access Panel
521RB	Lower Leading Edge Access Panel
521SB	Lower Leading Edge Access Panel
521TB	Lower Leading Edge Access Panel
521UB	Lower Leading Edge Access Panel
521VB	Lower Leading Edge Access Panel
521WB	Lower Leading Edge Access Panel
521XB	Lower Leading Edge Access Panel
521YB	Lower Leading Edge Access Panel
521ZB	Lower Leading Edge Access Panel


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

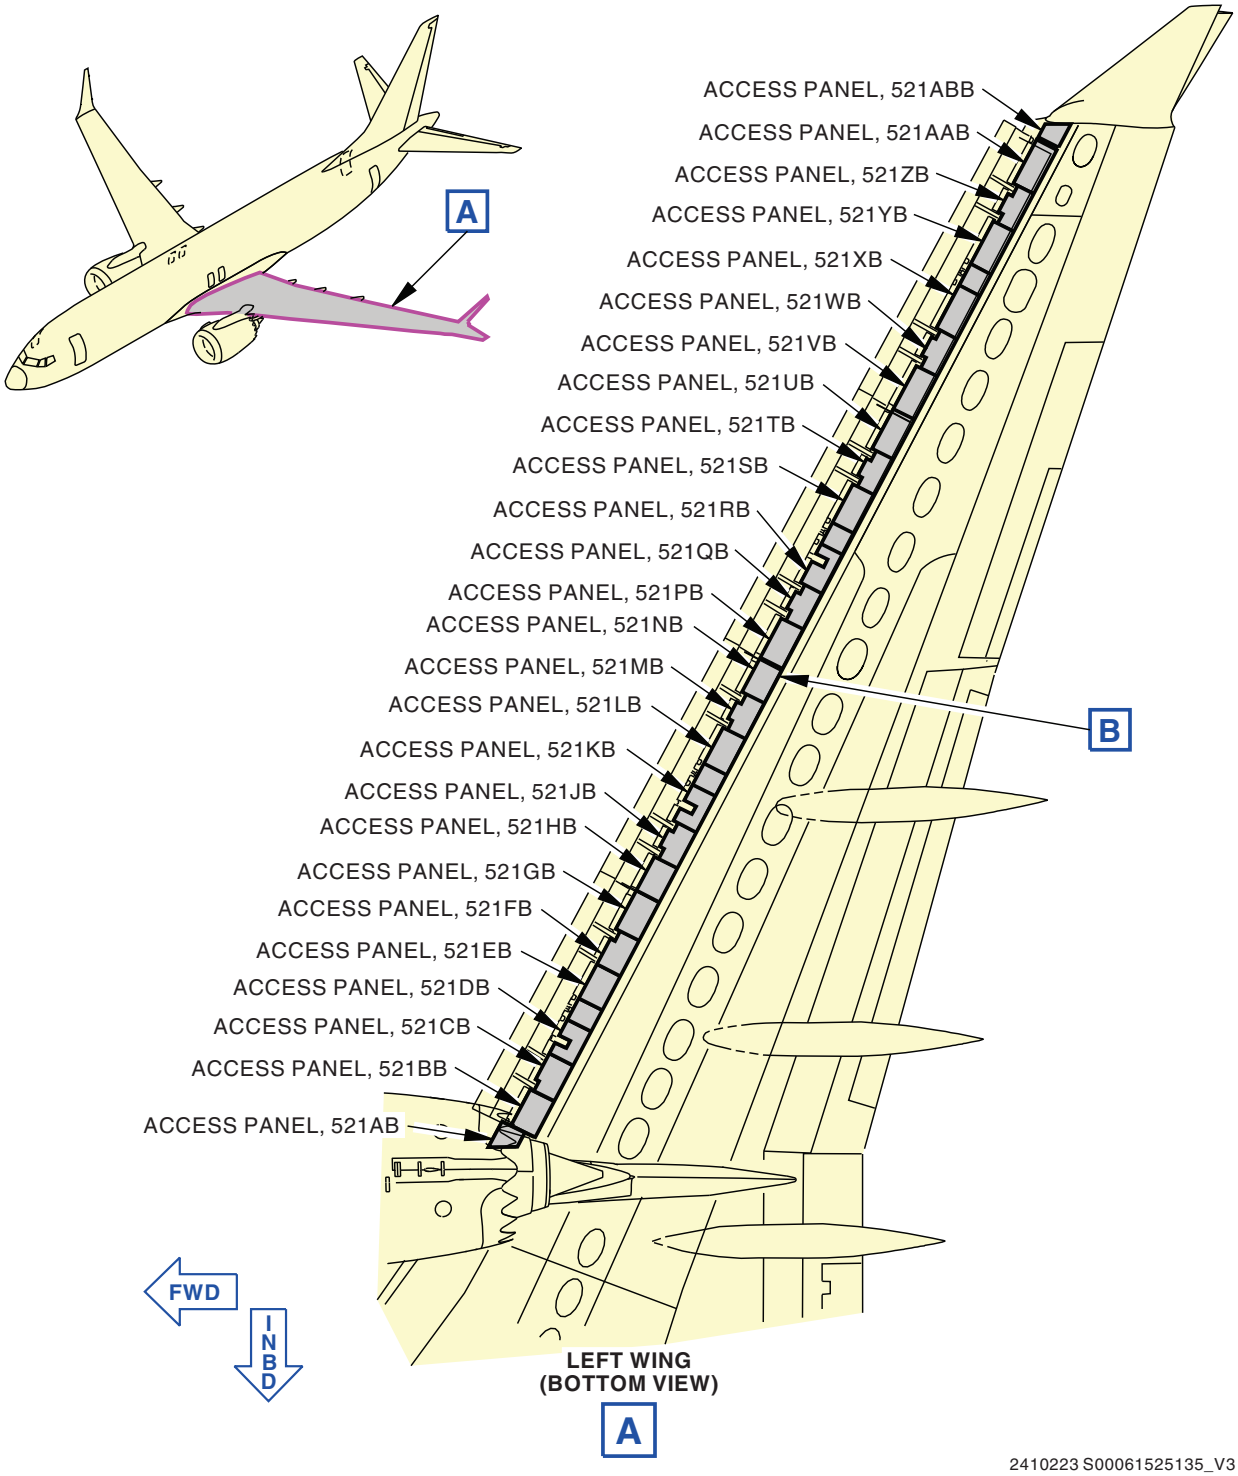

Leading Edge to Front Spar (Outboard of Nacelle Strut) Left Wing - General Visual (Internal)
Figure 209/05-41-05-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

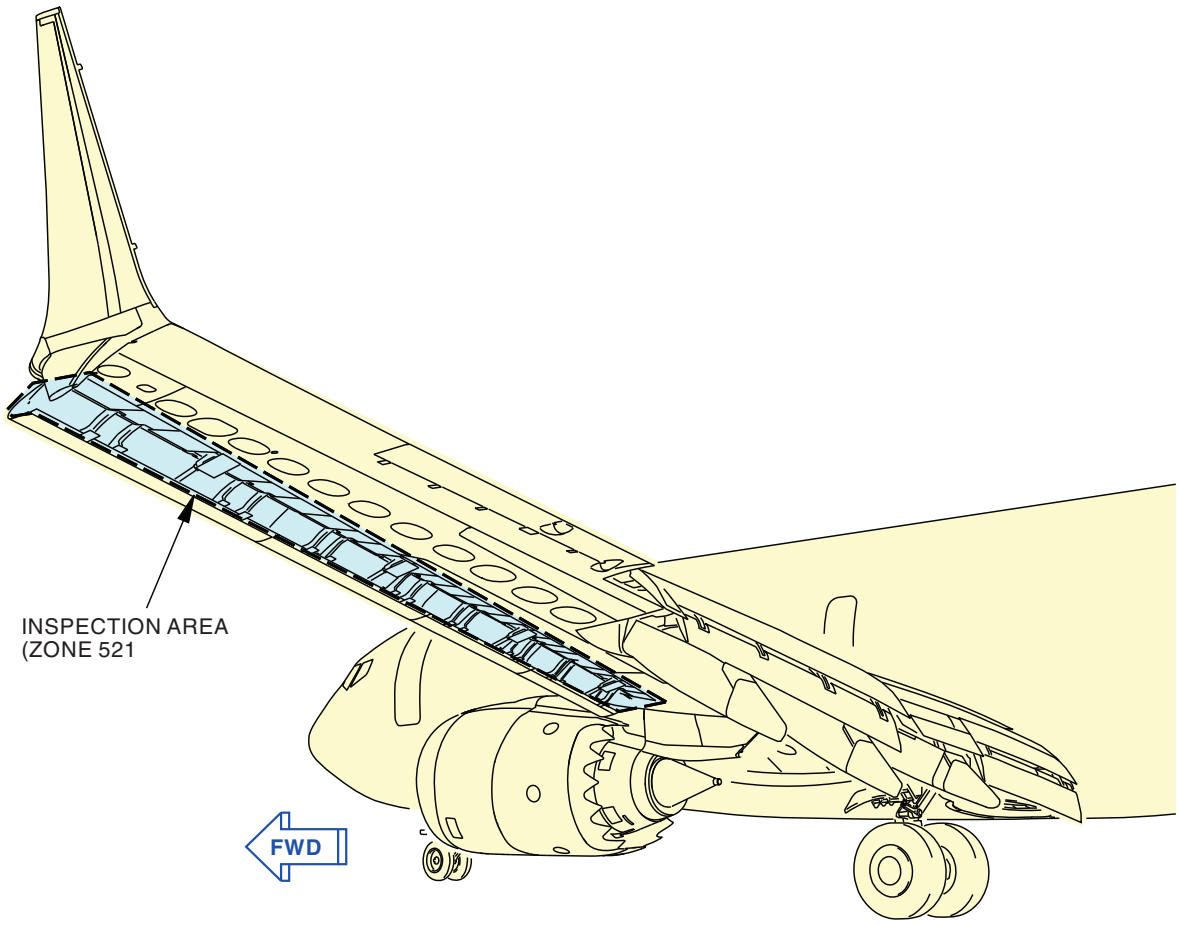

(BOTTOM VIEW)

B

2410224 S00061525136_V1

Leading Edge to Front Spar (Outboard of Nacelle Strut) Left Wing - General Visual (Internal)
Figure 209/05-41-05-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-810

10. EXTERNAL - ZONAL (GVI): Slats No. 1, 2, 3, 4 - Left Wing

(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
522	Left Wing - Slat No. 4
523	Left Wing - Slat No. 3
524	Left Wing - Slat No. 2
525	Left Wing - Slat No. 1

B. Zonal Inspection


NOTE: Slats in fully extended position.

SUBTASK 05-41-05-210-010

(1) Perform an external zonal inspection (GVI) of Slats No. 1, 2, 3, 4 - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

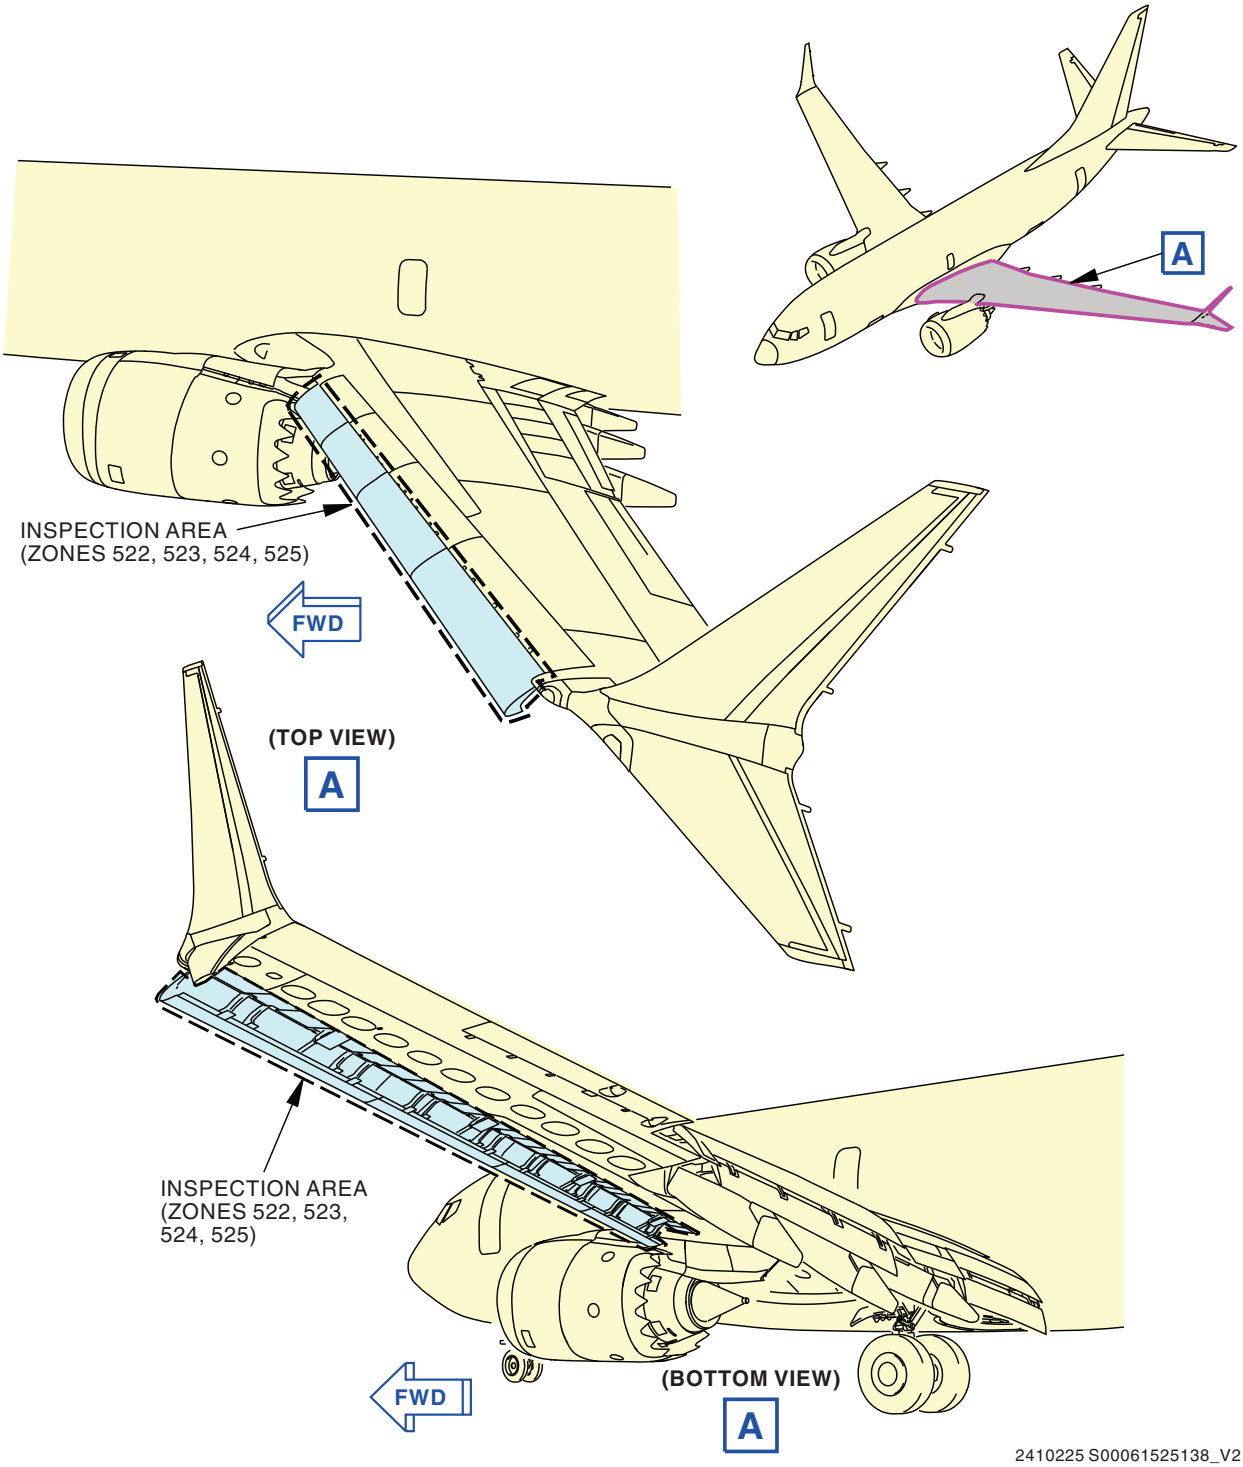

Leading Edge Slats No. 1 through 4 General Visual (External)
Figure 210/05-41-05-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-811

11. INTERNAL - ZONAL (GVI): Center Fuel Tank - Left Wing

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
531	Left Wing - Center Fuel Tank, Rib 1 to Rib 5

D. Access Panels

Number	Name/Location
531AB	Center Tank Access Door - Wing Station 168
531BB	Center Tank Access Door - Wing Station 192

E. Zonal Inspection

SUBTASK 05-41-05-010-004

(1) Open these access panels:

Number	Name/Location
531AB	Center Tank Access Door - Wing Station 168
531BB	Center Tank Access Door - Wing Station 192

SUBTASK 05-41-05-210-011

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Center Fuel Tank - Left Wing. (EZAP)

SUBTASK 05-41-05-910-010

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-05-410-004

(5) Close these access panels:

Number	Name/Location
531AB	Center Tank Access Door - Wing Station 168
531BB	Center Tank Access Door - Wing Station 192

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

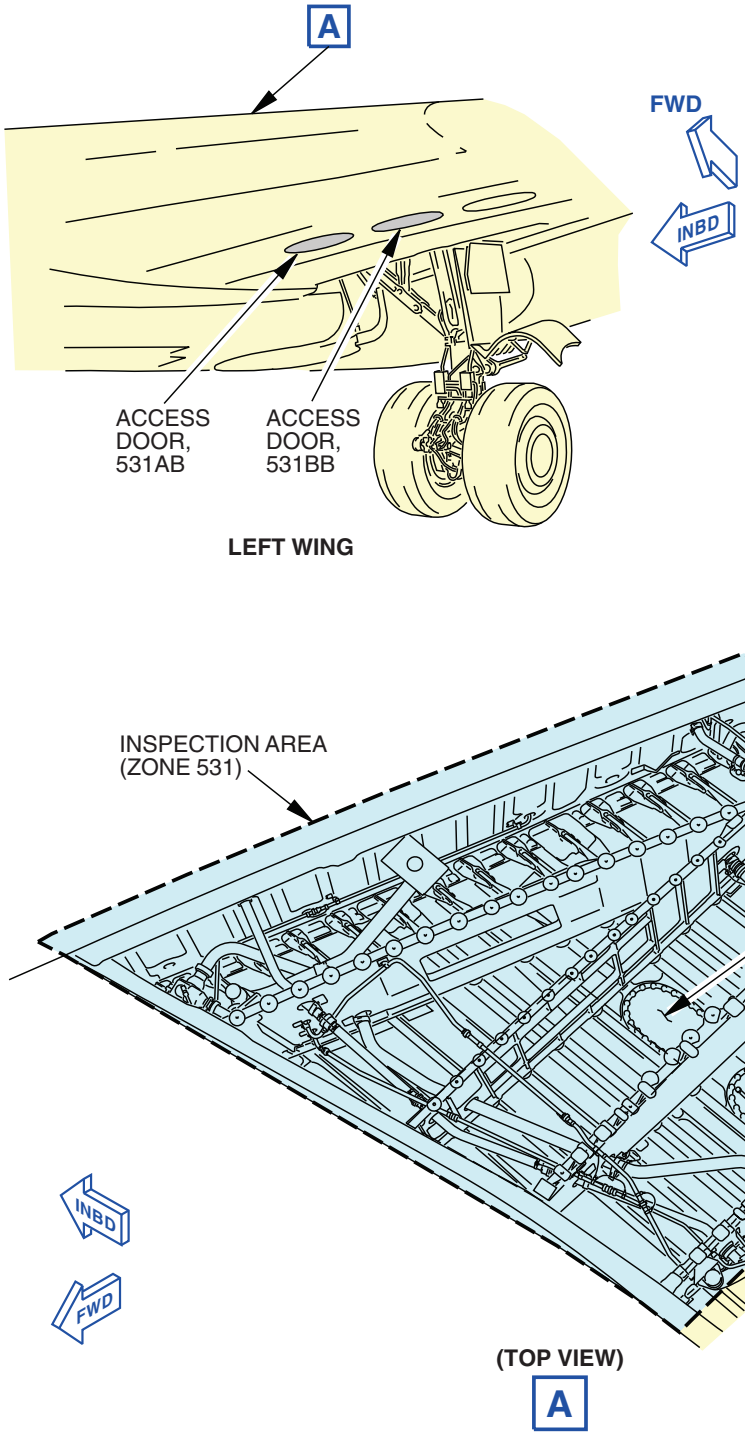

Center Fuel Tank - Left Wing General Visual (Internal)
Figure 211/05-41-05-990-811

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-812

12. EXTERNAL - ZONAL (GVI): Center Fuel Tank - Left Wing

(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
531	Left Wing - Center Fuel Tank, Rib 1 to Rib 5

B. Zonal Inspection


NOTE: Excluding surface under Wing-to-Body Fairing.

SUBTASK 05-41-05-210-012

(1) Perform an external zonal inspection (GVI) of the Center Fuel Tank - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

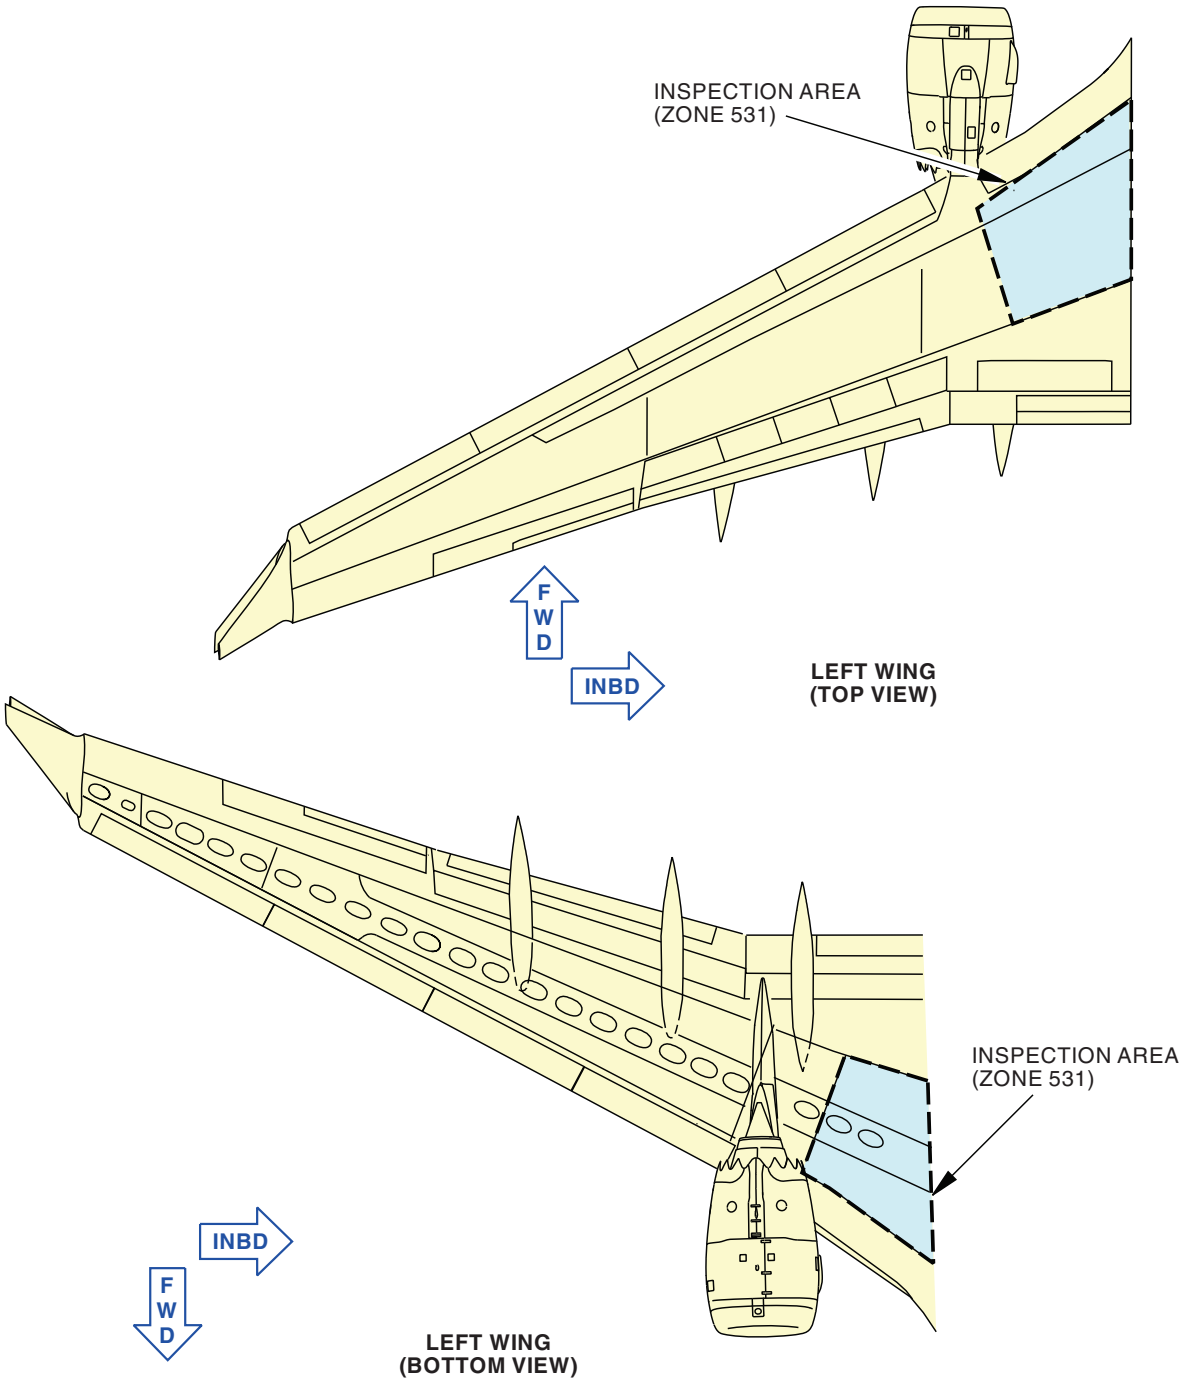

2410227 S00061525142_V1

Center Fuel Tank - Left Wing General Visual (External)
Figure 212/05-41-05-990-812

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-813

13. INTERNAL - ZONAL (GVI): Main Fuel Tank - Left Wing

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
532	Left Wing - Main Tank, Rib 5 to Rib 22, Wing Station 204.25 to Wing BL 643.50

B. Access Panels

Number	Name/Location
532AB	Main Tank Access Door - Wing Station 216
532AZ	Main Tank Inner Access at Rib 6
532BB	Main Tank Access Door - Wing Station 265
532BZ	Main Tank Inner Access at Rib 6
532CB	Main Tank Access Door - Wing Station 290
532DB	Main Tank Access Door - Wing Station 313
532EB	Main Tank Access Door - Wing Station 337
532FB	Main Tank Access Door - Wing Station 367
532GB	Main Tank Access Door - Wing Station 390
532HB	Main Tank Access Door - Wing Station 417
532JB	Main Tank Access Door - Wing Station 443
532KB	Main Tank Access Door - Wing Station 470
532LB	Main Tank Access Door - Wing Station 496
532MB	Main Tank Access Door - Wing Station 523
532NB	Main Tank Access Door - Wing Station 549
532PB	Main Tank Access Door - Wing Station 576
532QB	Main Tank Access Door - Wing Station 602
532RB	Main Tank Access Door - Wing Station 629

C. Zonal Inspection

CAUTION

DO NOT REMOVE 532AZ AND 532BZ AT THE SAME TIME.

SUBTASK 05-41-05-010-005

(1) Open these access panels:

Number	Name/Location
532AB	Main Tank Access Door - Wing Station 216
532AZ	Main Tank Inner Access at Rib 6
532BB	Main Tank Access Door - Wing Station 265
532BZ	Main Tank Inner Access at Rib 6
532CB	Main Tank Access Door - Wing Station 290
532DB	Main Tank Access Door - Wing Station 313
532EB	Main Tank Access Door - Wing Station 337
532FB	Main Tank Access Door - Wing Station 367
532GB	Main Tank Access Door - Wing Station 390

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
532HB	Main Tank Access Door - Wing Station 417
532JB	Main Tank Access Door - Wing Station 443
532KB	Main Tank Access Door - Wing Station 470
532LB	Main Tank Access Door - Wing Station 496
532MB	Main Tank Access Door - Wing Station 523
532NB	Main Tank Access Door - Wing Station 549
532PB	Main Tank Access Door - Wing Station 576
532QB	Main Tank Access Door - Wing Station 602
532RB	Main Tank Access Door - Wing Station 629

SUBTASK 05-41-05-210-013

(2) Perform an internal zonal inspection (GVI) of the Main Fuel Tank - Left Wing. (EZAP)


SUBTASK 05-41-05-410-005

(3) Close these access panels:

Number	Name/Location
532AB	Main Tank Access Door - Wing Station 216
532AZ	Main Tank Inner Access at Rib 6
532BB	Main Tank Access Door - Wing Station 265
532BZ	Main Tank Inner Access at Rib 6
532CB	Main Tank Access Door - Wing Station 290
532DB	Main Tank Access Door - Wing Station 313
532EB	Main Tank Access Door - Wing Station 337
532FB	Main Tank Access Door - Wing Station 367
532GB	Main Tank Access Door - Wing Station 390
532HB	Main Tank Access Door - Wing Station 417
532JB	Main Tank Access Door - Wing Station 443
532KB	Main Tank Access Door - Wing Station 470
532LB	Main Tank Access Door - Wing Station 496
532MB	Main Tank Access Door - Wing Station 523
532NB	Main Tank Access Door - Wing Station 549
532PB	Main Tank Access Door - Wing Station 576
532QB	Main Tank Access Door - Wing Station 602
532RB	Main Tank Access Door - Wing Station 629

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

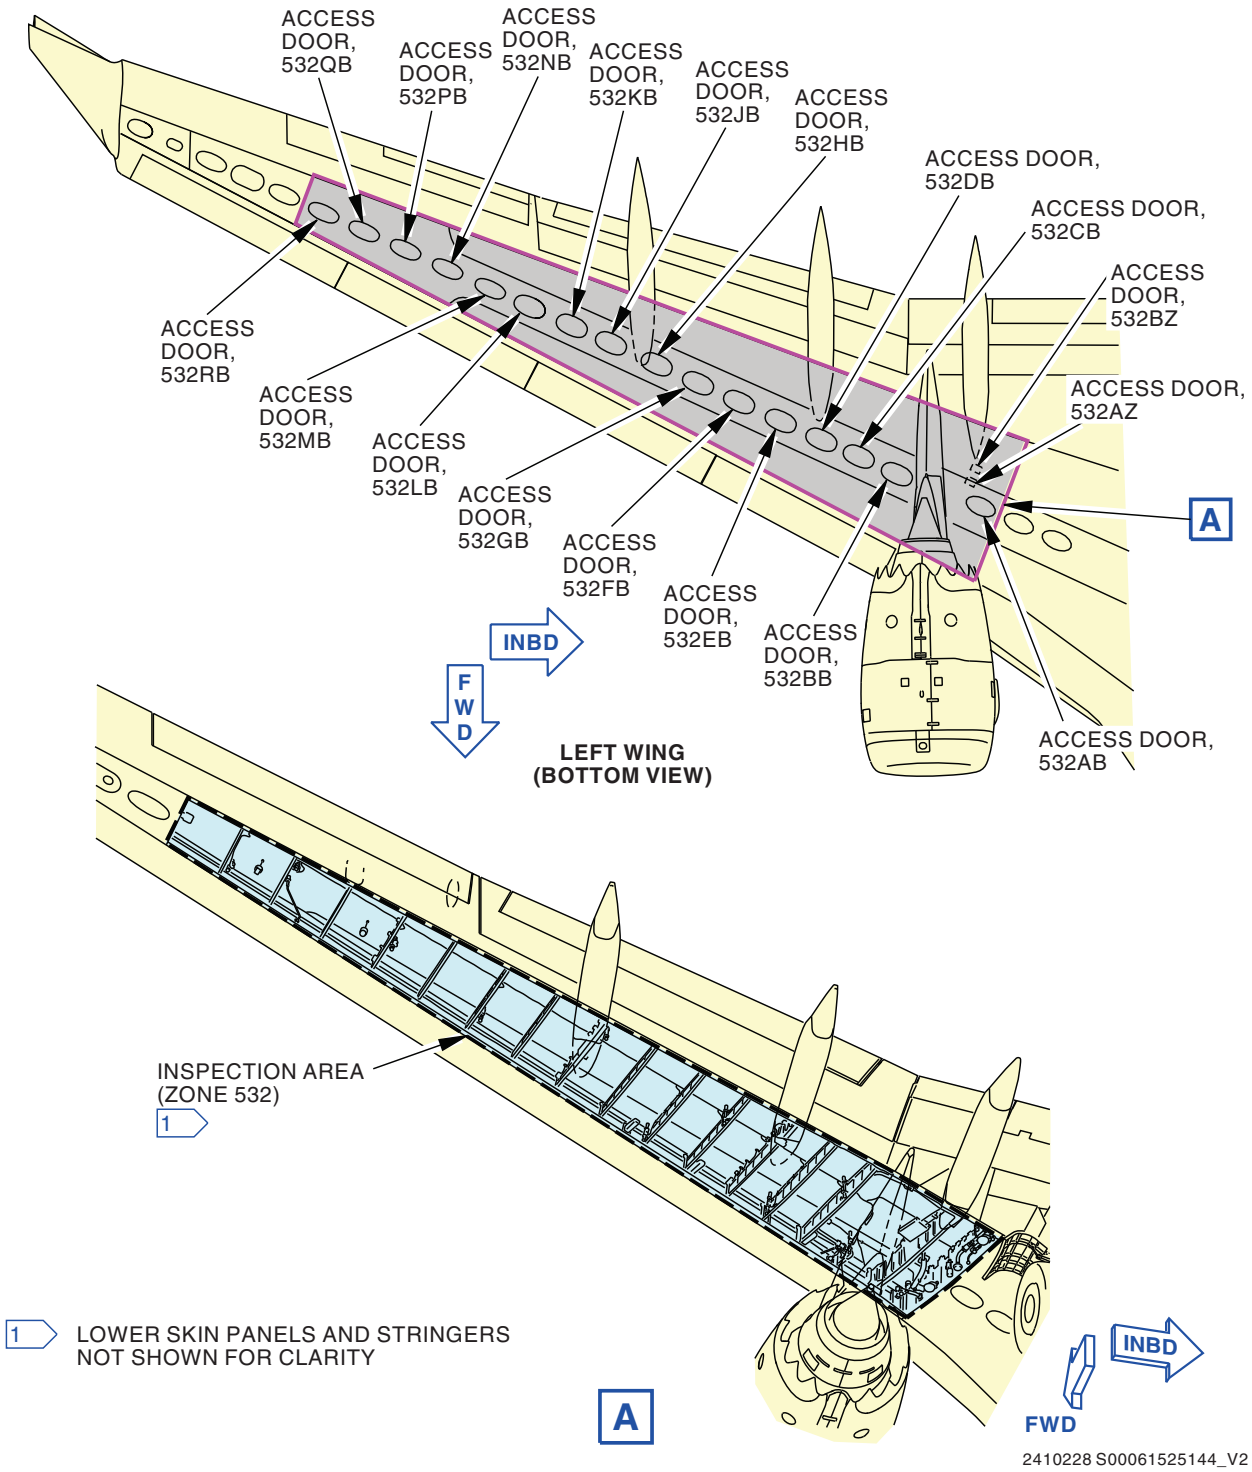

Main Fuel Tank - Left Wing General Visual (Internal)
Figure 213/05-41-05-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-814

14. EXTERNAL - ZONAL (GVI): Main Fuel Tank - Left Wing

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
532	Left Wing - Main Tank, Rib 5 to Rib 22, Wing Station 204.25 to Wing BL 643.50


B. Zonal Inspection

SUBTASK 05-41-05-210-014

(1) Perform an external zonal inspection (GVI) of the Main Fuel Tank - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

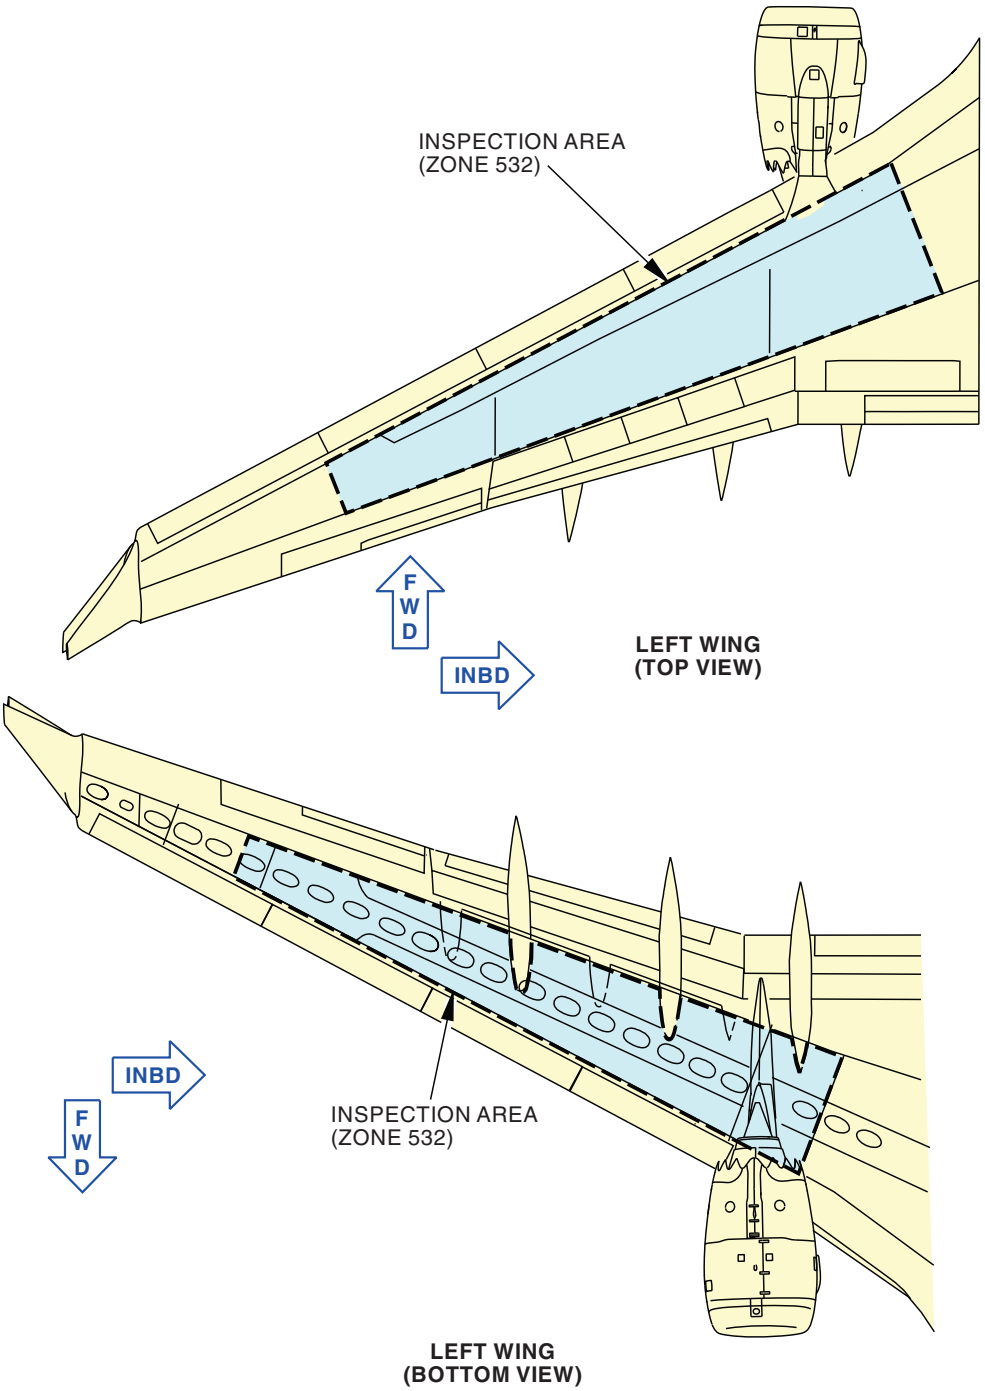

Main Fuel Tank - Left Wing General Visual (External)
Figure 214/05-41-05-990-814

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-815

15. INTERNAL - ZONAL (GVI): Surge Tank - Left Wing

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
533	Left Wing - Surge Tank, Rib 22 to Rib 25, Wing Station 643.50 to Wing BL 616.75

B. Access Panels

Number	Name/Location
533AB	Surge Tank Access Door - Wing Station 655
533BB	Surge Tank Access Door - Wing Station 679
533CB	Surge Tank Access Door - Wing Station 703

C. Zonal Inspection

SUBTASK 05-41-05-010-006

(1) Open these access panels:

Number	Name/Location
533AB	Surge Tank Access Door - Wing Station 655
533BB	Surge Tank Access Door - Wing Station 679
533CB	Surge Tank Access Door - Wing Station 703

SUBTASK 05-41-05-210-015

(2) Perform an internal zonal inspection (GVI) of the Surge Tank - Left Wing.


SUBTASK 05-41-05-410-006

(3) Close these access panels:

Number	Name/Location
533AB	Surge Tank Access Door - Wing Station 655
533BB	Surge Tank Access Door - Wing Station 679
533CB	Surge Tank Access Door - Wing Station 703

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

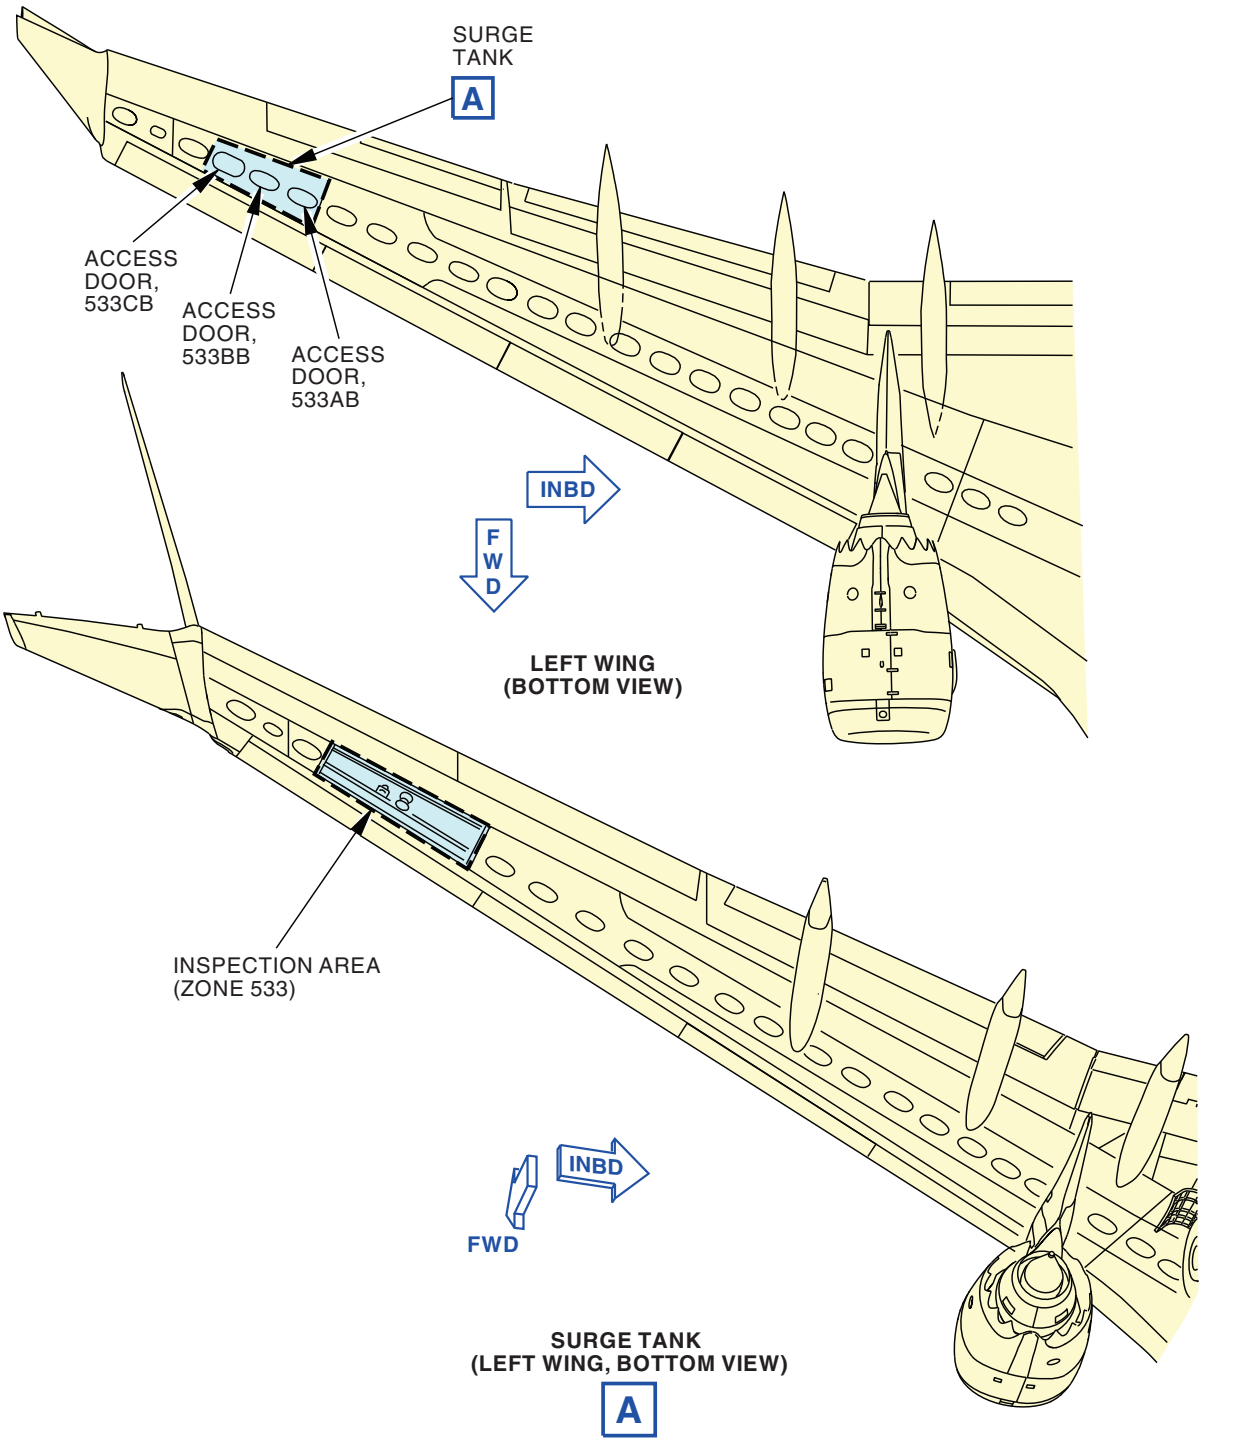

Surge Tank - Left Wing General Visual (Internal)
Figure 215/05-41-05-990-815

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-816

16. EXTERNAL - ZONAL (GVI): Surge Tank - Left Wing

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
533	Left Wing - Surge Tank, Rib 22 to Rib 25, Wing Station 643.50 to Wing BL 616.75


B. Zonal Inspection

SUBTASK 05-41-05-210-016

(1) Perform an external zonal inspection (GVI) of the Surge Tank - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

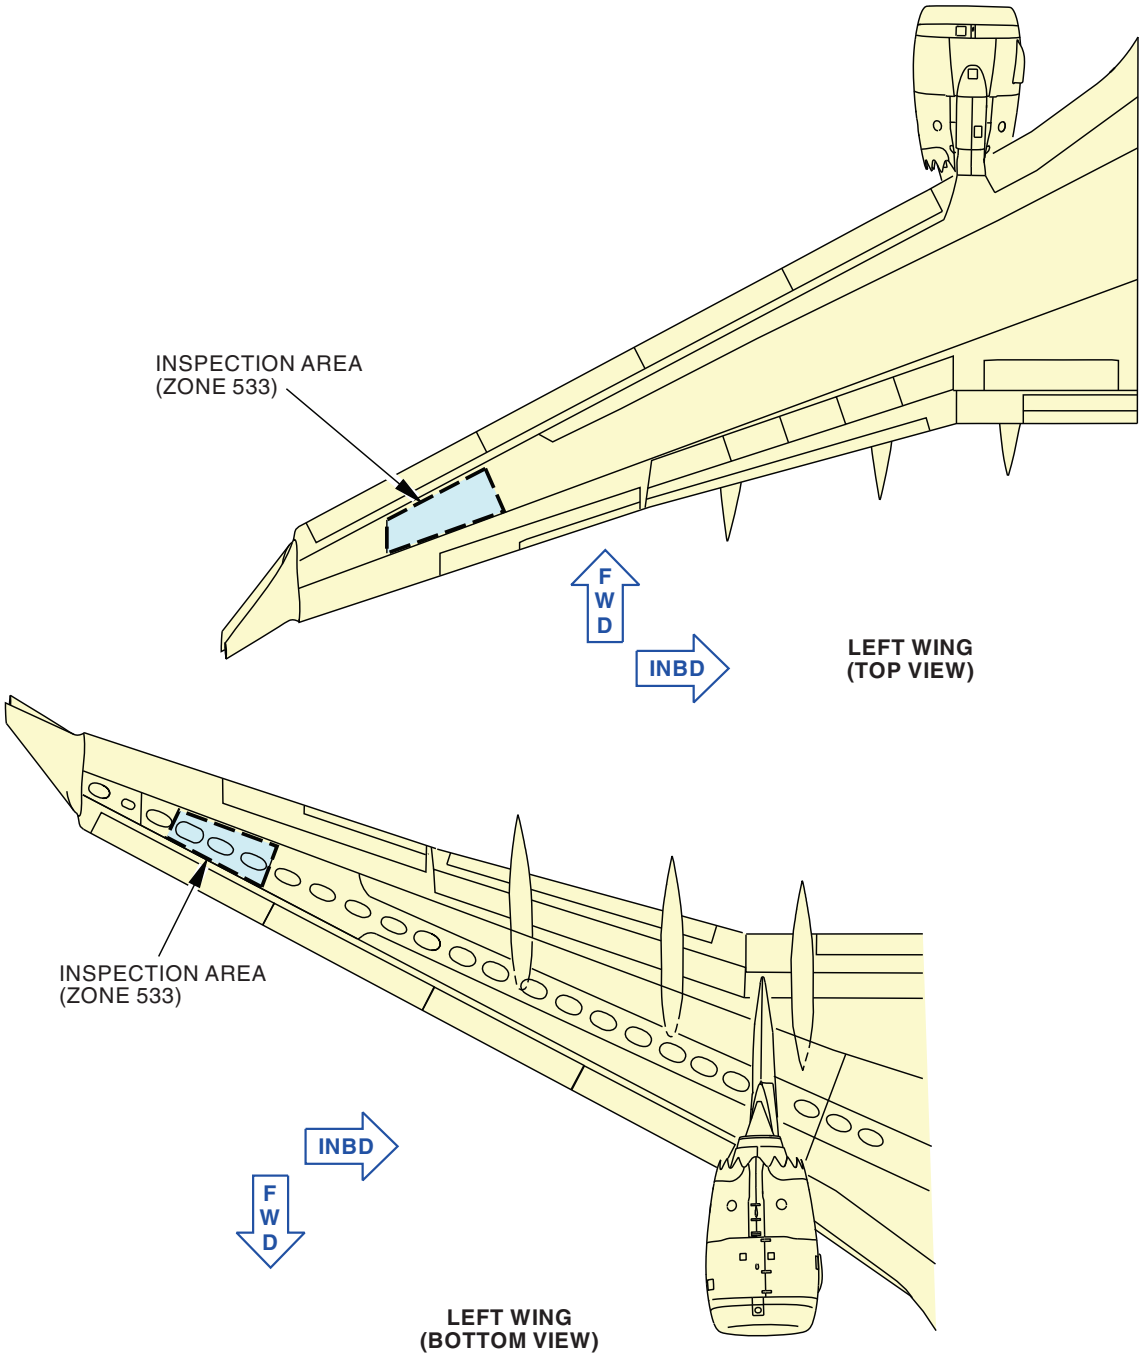

2410231 S00061525150_V1

Surge Tank - Left Wing General Visual (External)
Figure 216/05-41-05-990-816

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-817

17. EXTERNAL - ZONAL (GVI): Dry Bay - Left Wing

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
534	Left Wing - Dry Bay


B. Zonal Inspection

SUBTASK 05-41-05-210-017

(1) Perform an external zonal inspection (GVI) of the Dry Bay - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

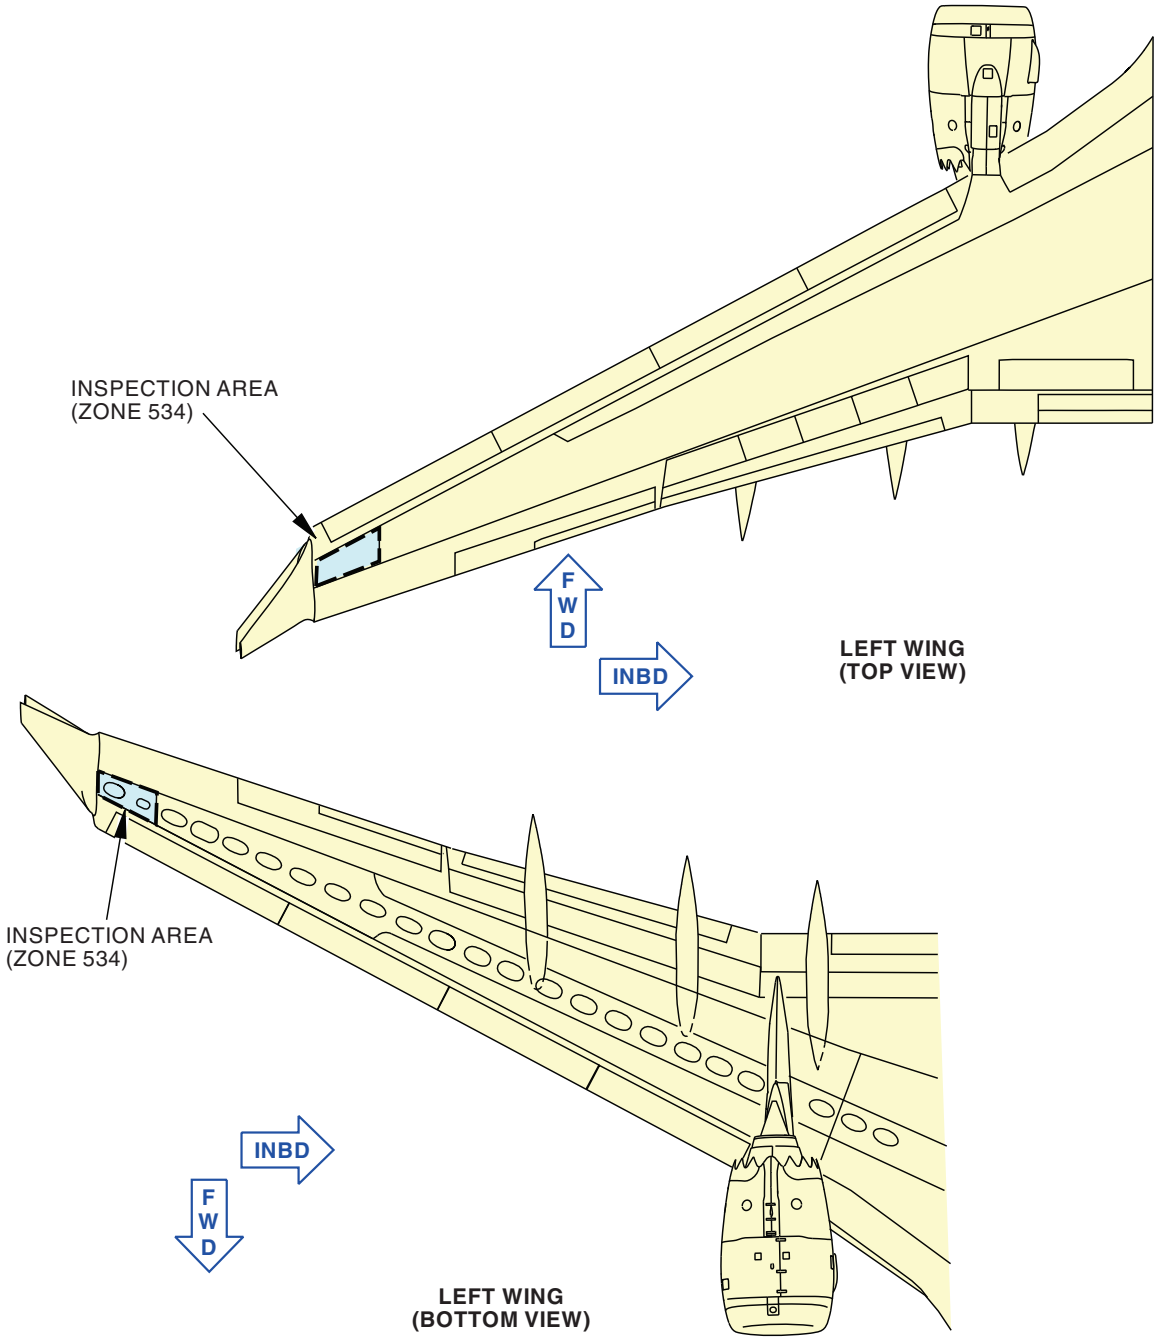

2410232 S00061525152_V1

Dry Bay - Left Wing General Visual (External)
Figure 217/05-41-05-990-817

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-837

18. INTERNAL - ZONAL (GVI): Dry Bay - Left Wing

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
534	Left Wing - Dry Bay


B. Zonal Inspection

SUBTASK 05-41-05-210-037

(1) Perform an internal zonal inspection (GVI) of the Dry Bay - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

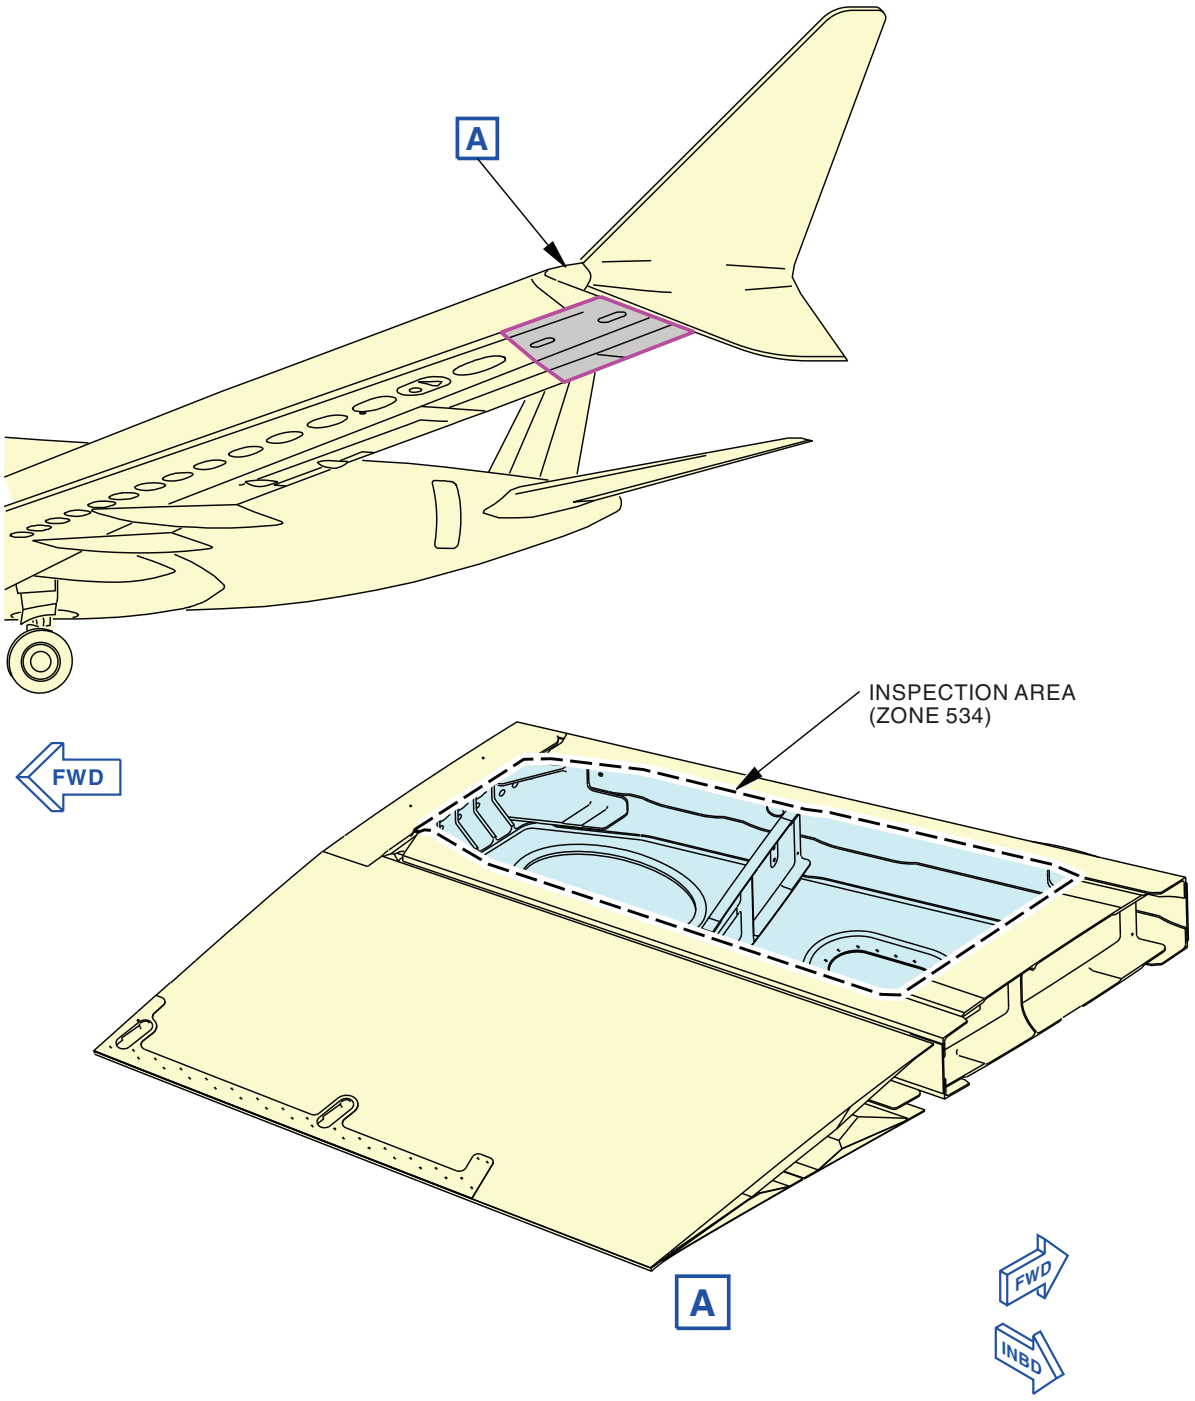

Dry Bay - Left General Visual (Internal)
Figure 218/05-41-05-990-837

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-818

19. INTERNAL - ZONAL (GVI): Flap Support No. 4 - Left Wing

(Figure 219)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)
53-51-21-000-803	Aft Wing-To-Body Fairing Panel Removal (P/B 401)
53-51-21-400-803	Aft Wing-To-Body Fairing Panel - Installation (P/B 401)

C. Location Zones

Zone	Area
133	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Left
194	Lower Wing-To-Body Fairing - Aft of Wheel Well
541	Left Wing - Fairing Flap Support No. 4

D. Access Panels

Number	Name/Location
194BL	Flap Track Lubrication Panel - Aft

E. Zonal Inspection

SUBTASK 05-41-05-010-012

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-05-040-001

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-05-010-007

(3) Remove this access panel on the wing to body fairing (Aft Wing-To-Body Fairing Panel Removal, TASK 53-51-21-000-803).

(a) Open this access panel:

Number	Name/Location
194BL	Flap Track Lubrication Panel - Aft

SUBTASK 05-41-05-210-018

(4) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(5) Perform an internal zonal inspection (GVI) of the Flap Support No. 4 - Left Wing - Section 46, Sta 727. (EZAP)

SUBTASK 05-41-05-910-003

(6) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-05-410-007

(7) Install these access panels on the wing to body fairing (Aft Wing-To-Body Fairing Panel - Installation, TASK 53-51-21-400-803).

(a) Close this access panel:

Number	Name/Location
194BL	Flap Track Lubrication Panel - Aft

SUBTASK 05-41-05-440-001


(8) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-05-410-012

(9) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

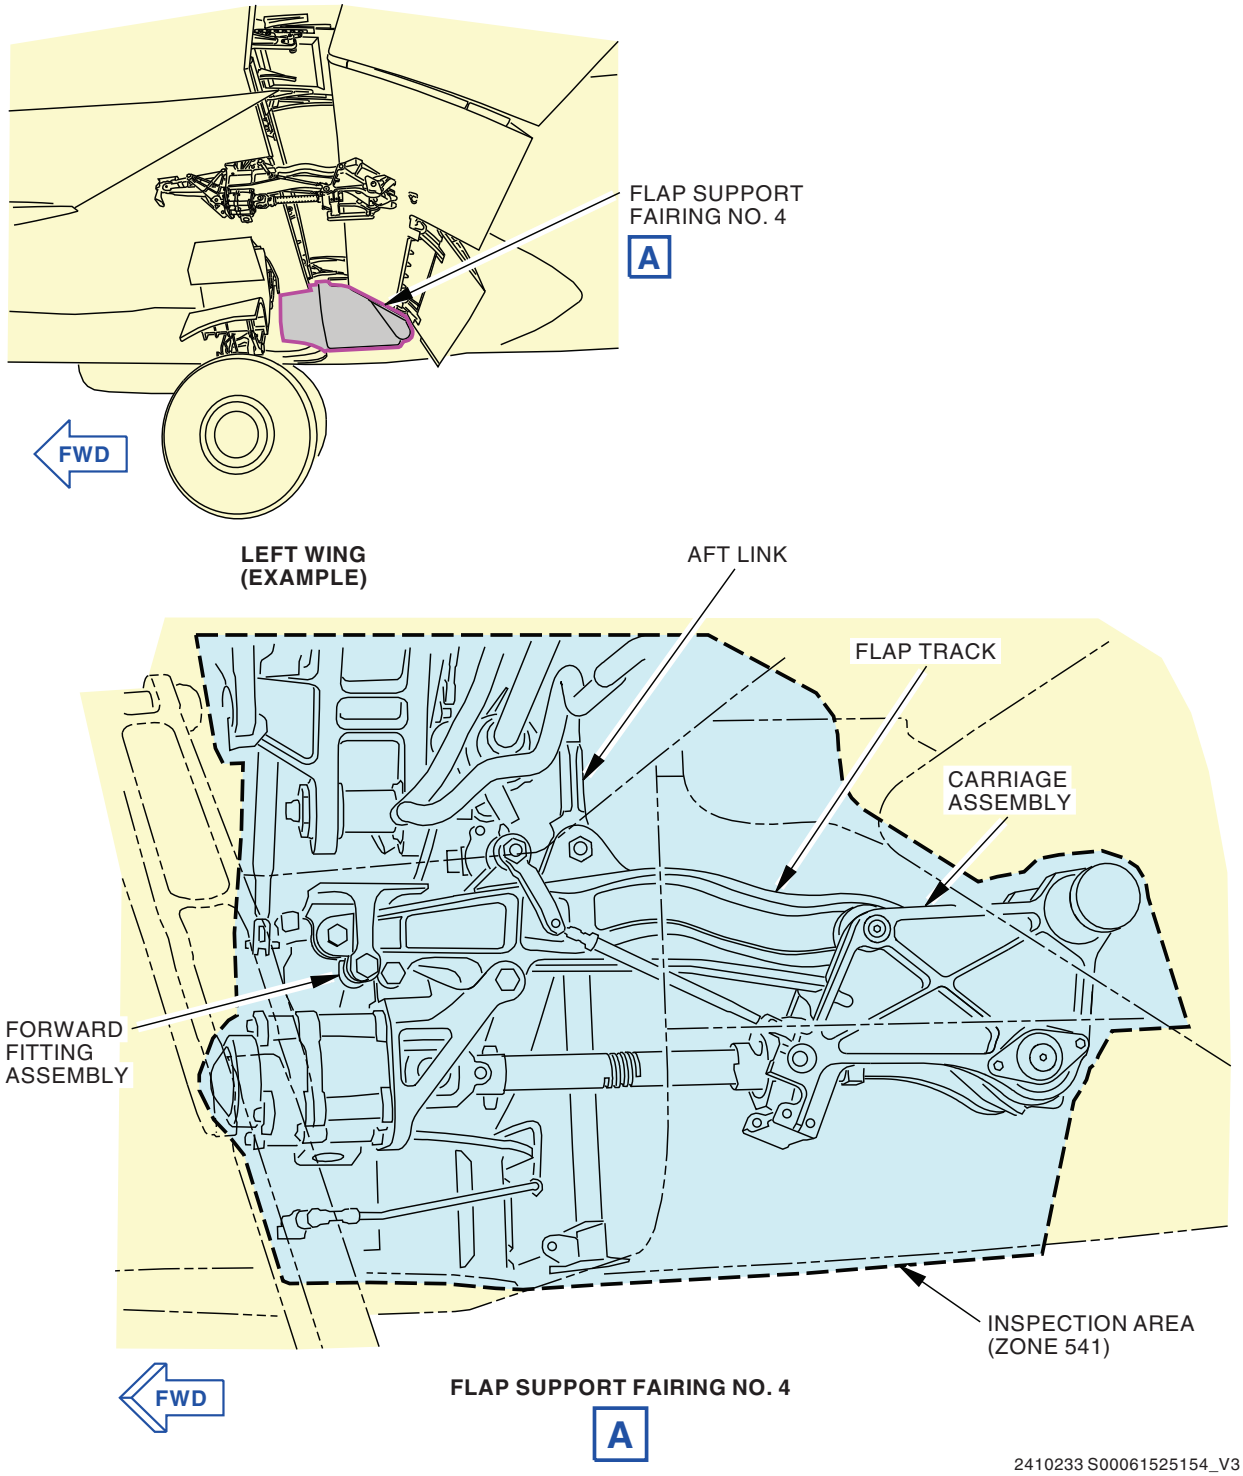

Flap Support Fairing No. 4 General Visual (Internal)
Figure 219/05-41-05-990-818

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-819

20. EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 3 - Left Wing

(Figure 220)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
542	Left Wing - Fairing Flap Support No. 3

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-05-210-019


(1) Perform an external zonal inspection (GVI) of the Fairing Flap Support No. 3 - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

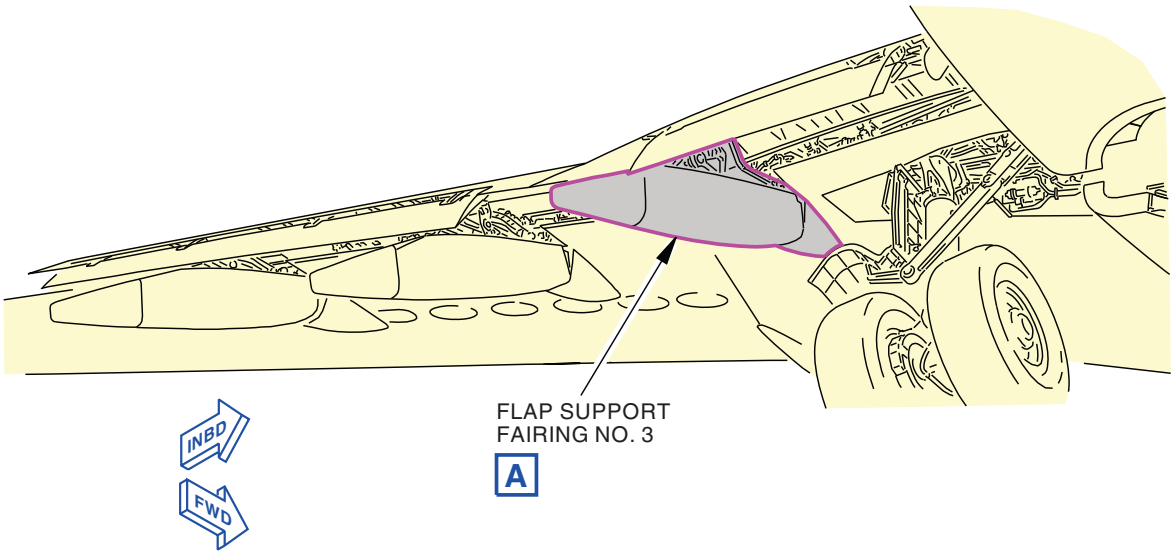

LEFT WING

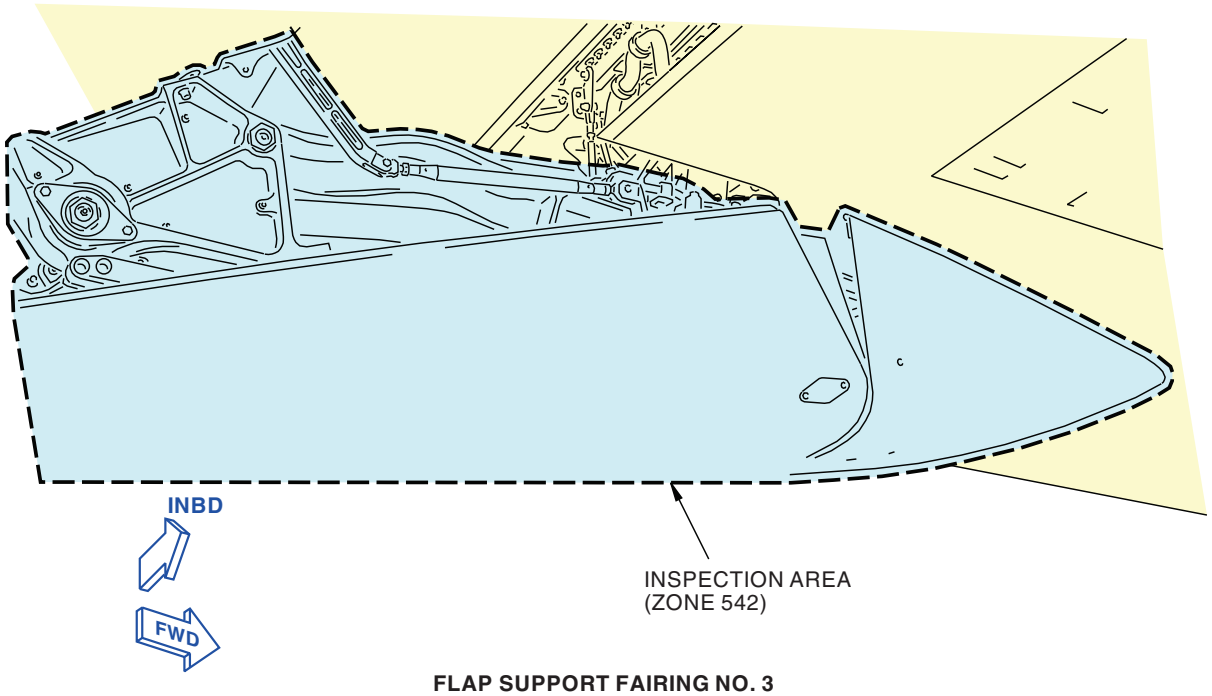

FLAP SUPPORT FAIRING NO. 3

A

2410234 S00061525156_V1

Flap Support Fairing No. 3 General Visual (External)
Figure 220/05-41-05-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-820

21. INTERNAL - ZONAL (GVI): Fairing Flap Support No. 3 - Left Wing

(Figure 221)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)

C. Location Zones

Zone	Area
542	Left Wing - Fairing Flap Support No. 3

D. Zonal Inspection

SUBTASK 05-41-05-010-013

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-05-040-002

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-05-210-020

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Fairing Flap Support No. 3 - Left Wing. (EZAP)

SUBTASK 05-41-05-910-004

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-05-440-002


(6) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-05-410-013

(7) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

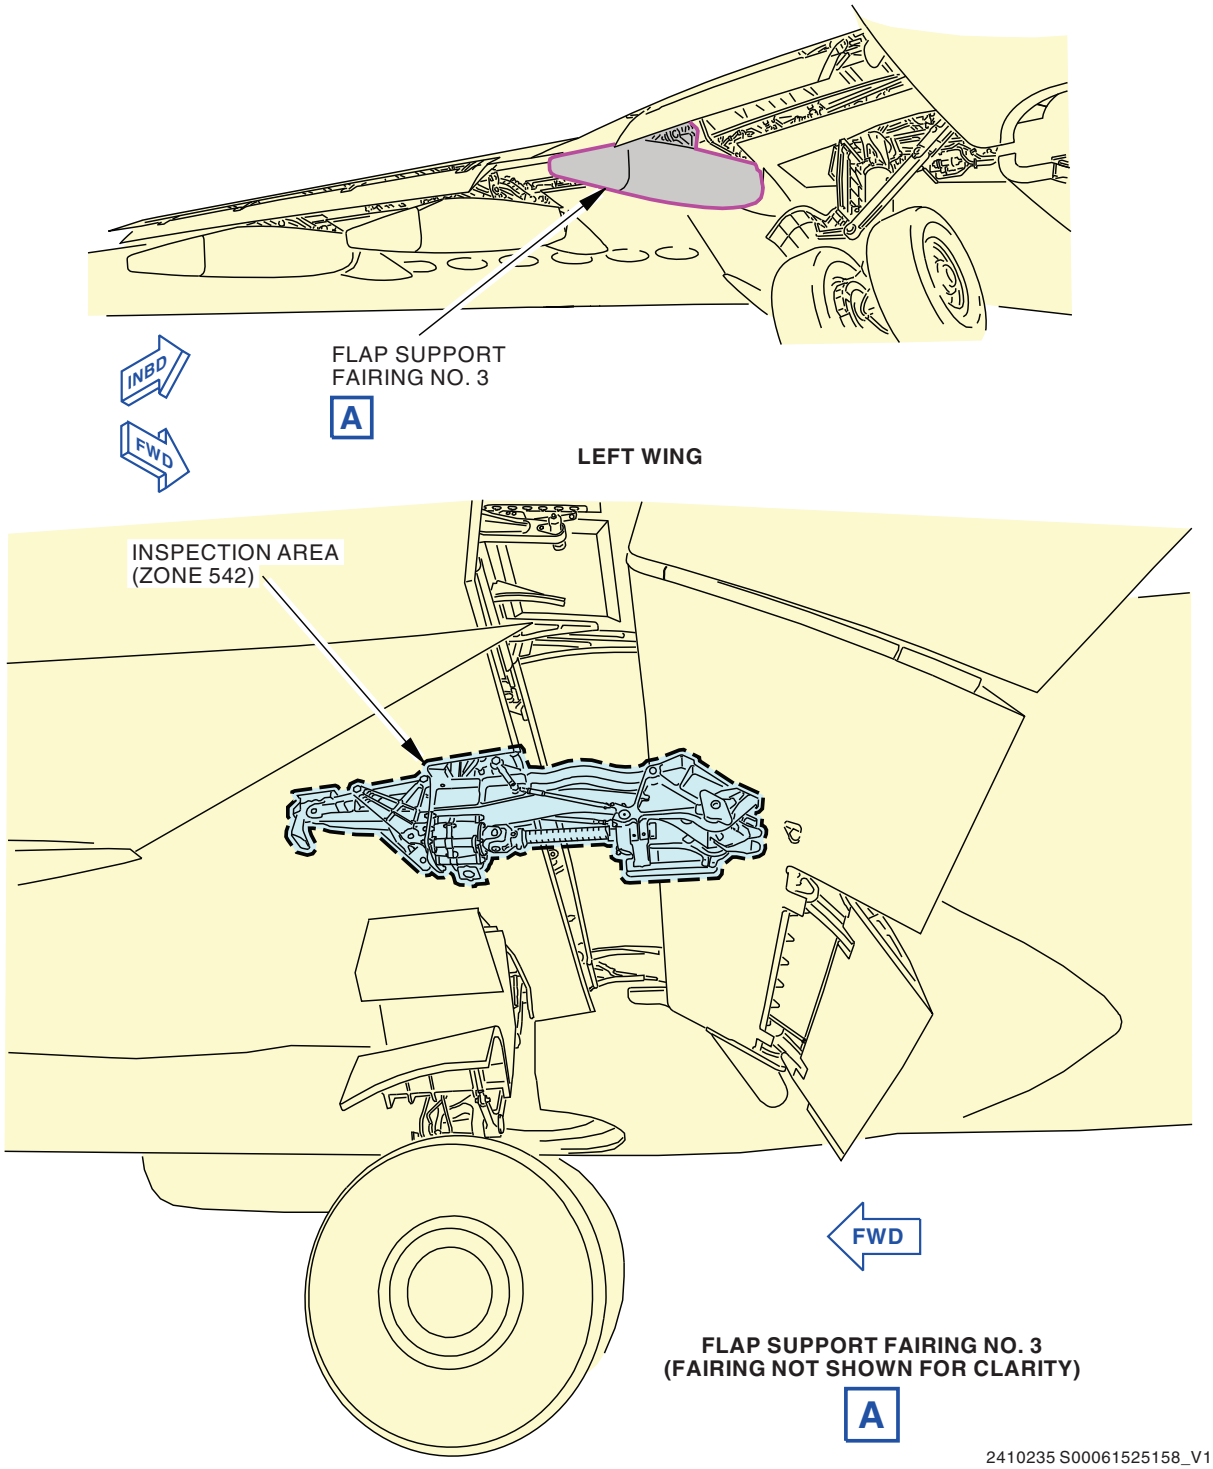

Flap Support Fairing No. 3 General Visual (Internal)
Figure 221/05-41-05-990-820

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-821

22. EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 2 - Left Wing

(Figure 222)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
543	Left Wing - Fairing Flap Support No. 2

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-05-210-021

(1) Perform an external zonal inspection (GVI) of the Fairing Flap Support No. 2 - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

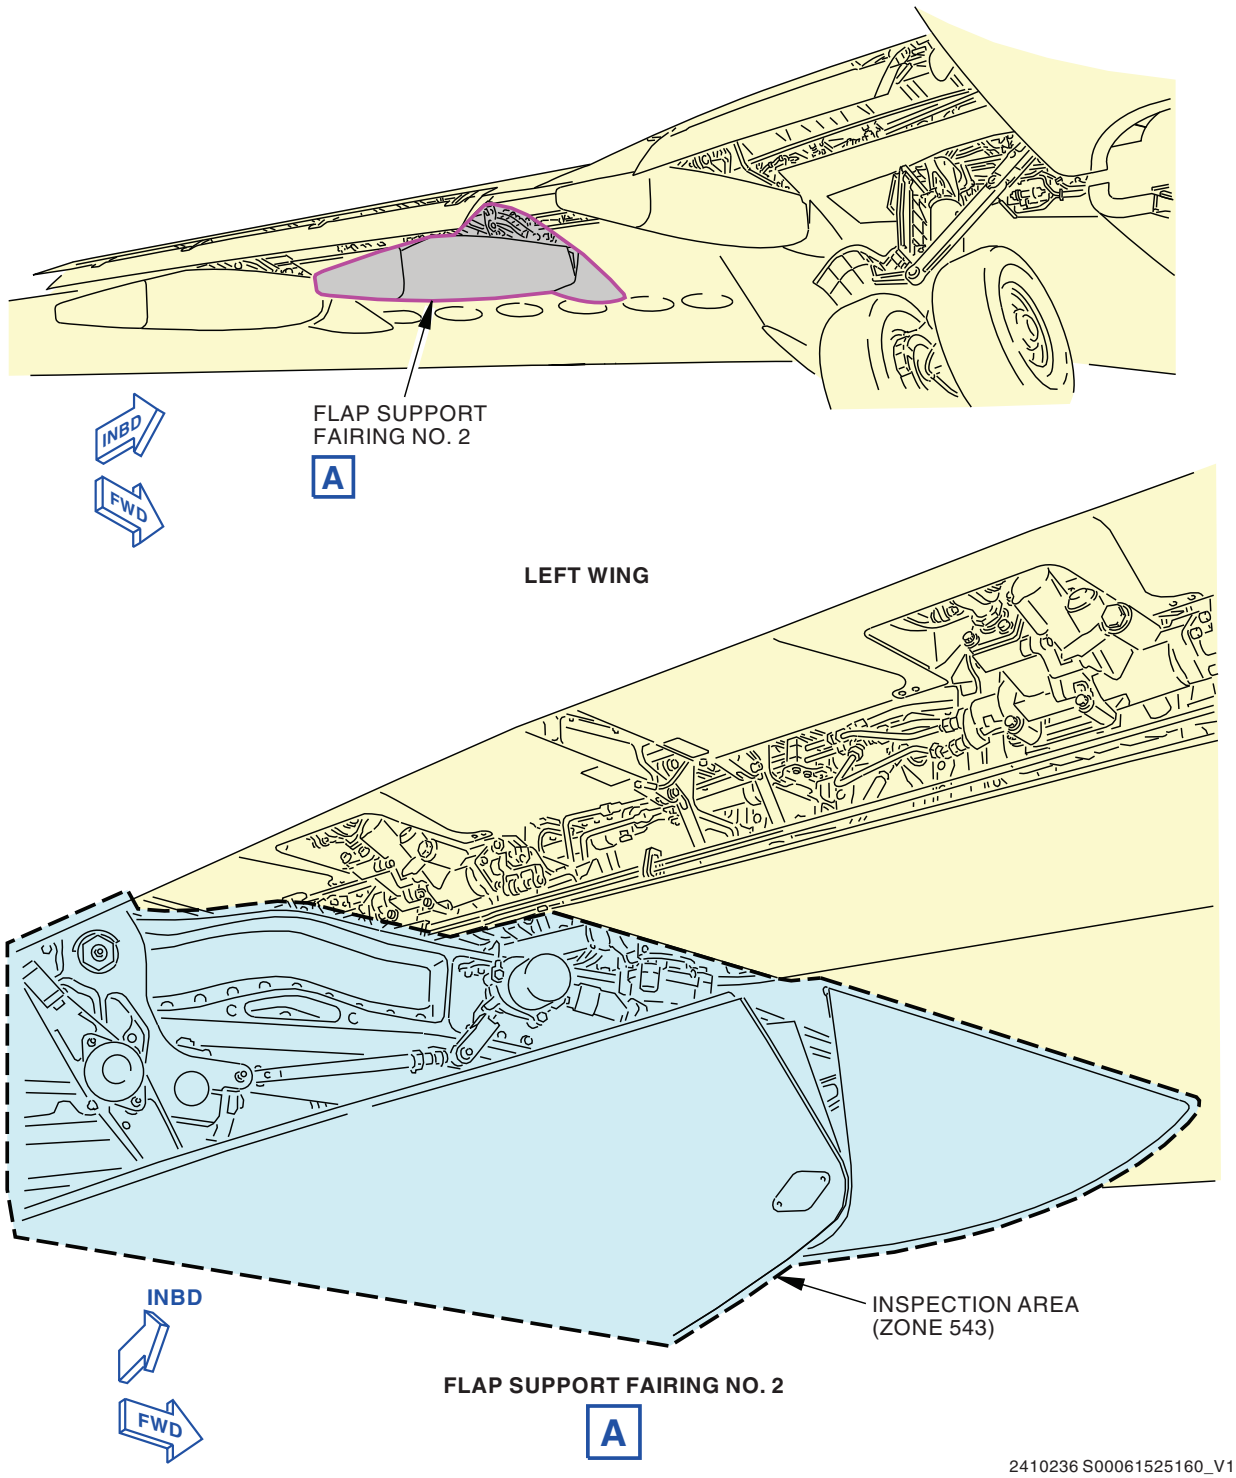

Flap Support Fairing No. 2 General Visual (External)
Figure 222/05-41-05-990-821

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-822

23. INTERNAL - ZONAL (GVI): Fairing Flap Support No. 2 - Left Wing

(Figure 223)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)

C. Location Zones

Zone	Area
543	Left Wing - Fairing Flap Support No. 2

D. Zonal Inspection

SUBTASK 05-41-05-010-014

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-05-040-003

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-05-210-022

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Fairing Flap Support No. 2 - Left Wing. (EZAP)

SUBTASK 05-41-05-910-005

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-05-440-003


(6) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-05-410-014

(7) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

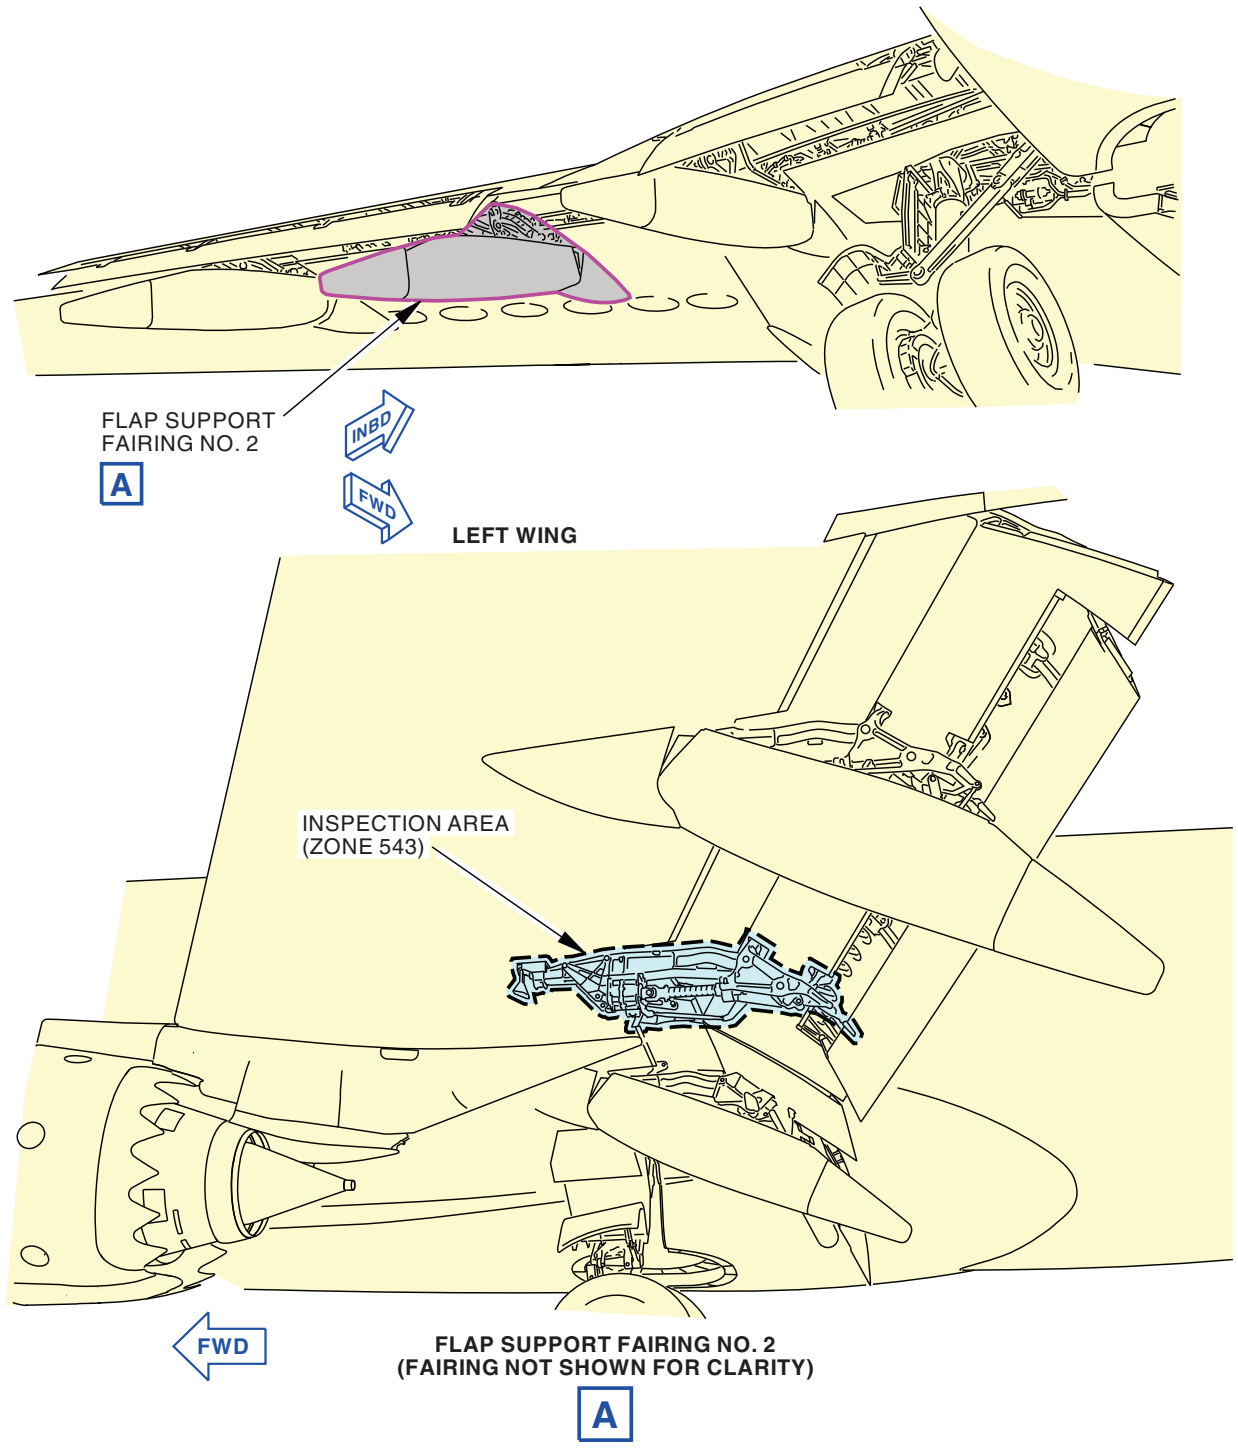

2410237 S00061525162_V1

Flap Support Fairing No. 2 General Visual (Internal)
Figure 223/05-41-05-990-822

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-823

24. EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 1 - Left Wing

(Figure 224)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
544	Left Wing - Fairing Flap Support No. 1

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-05-210-023

(1) Perform an external zonal inspection (GVI) of the Fairing Flap Support No. 1 - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

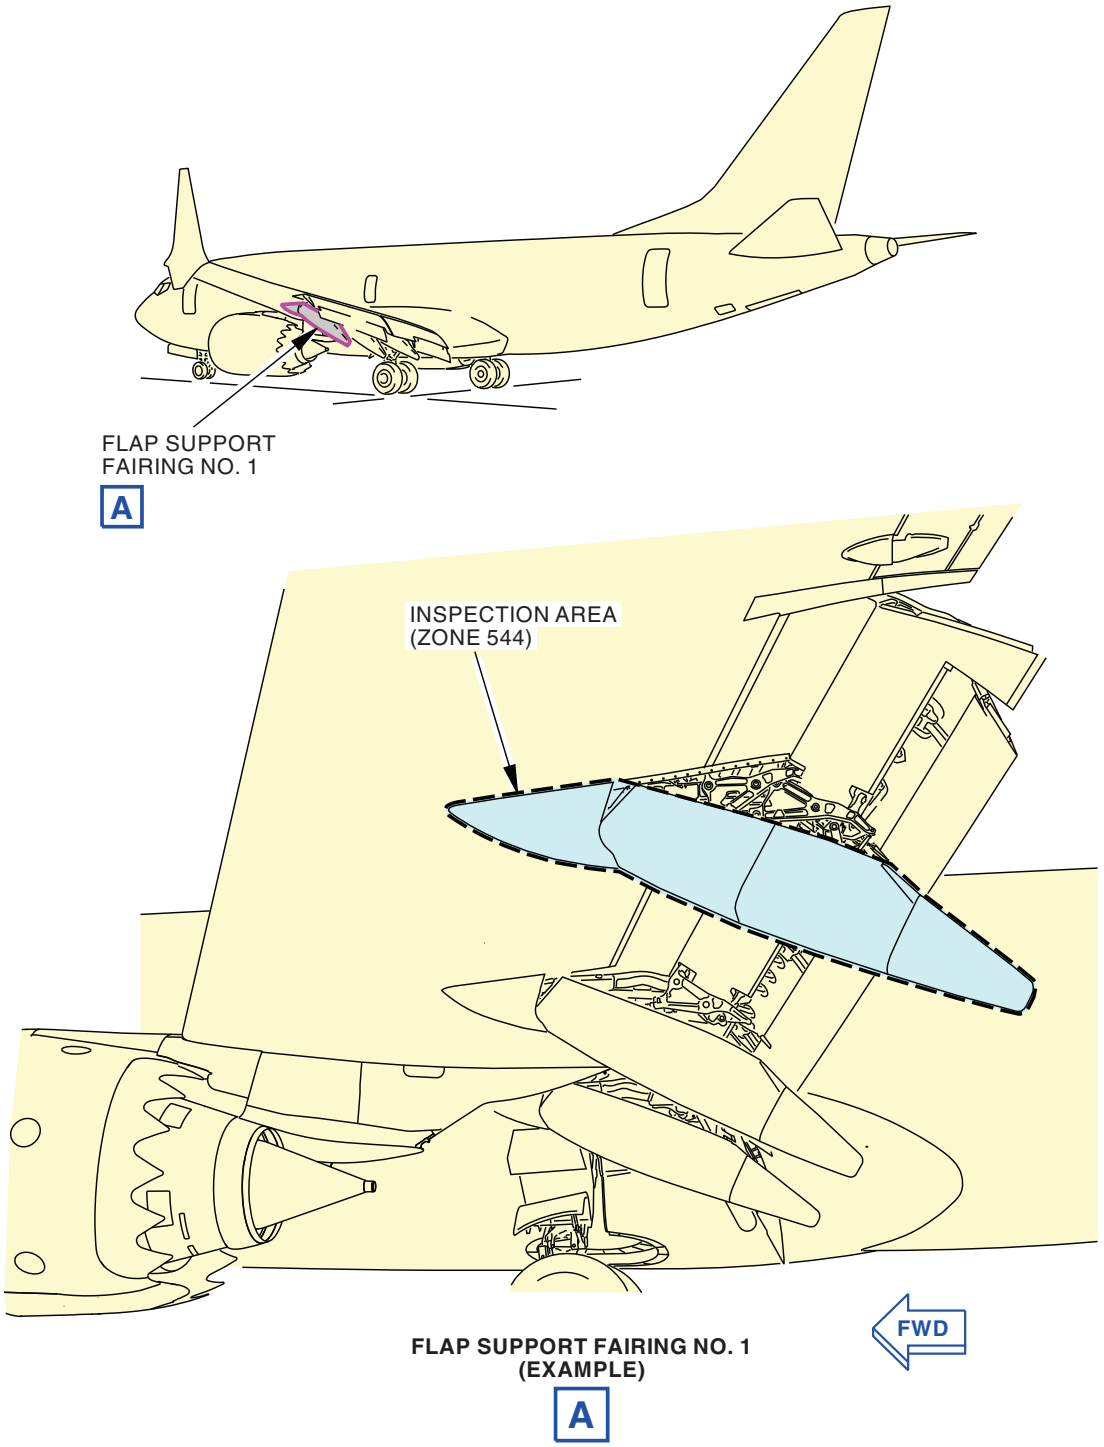

Flap Support Fairing No. 1 General Visual (External)
Figure 224/05-41-05-990-823

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-824

25. INTERNAL - ZONAL (GVI): Fairing Flap Support No. 1 - Left Wing

(Figure 225)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)

C. Location Zones

Zone	Area
544	Left Wing - Fairing Flap Support No. 1

D. Zonal Inspection

SUBTASK 05-41-05-010-015

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-05-040-004

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-05-210-024

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Fairing Flap Support No. 1 - Left Wing. (EZAP)

SUBTASK 05-41-05-910-006

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-05-440-004


(6) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-05-410-015

(7) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

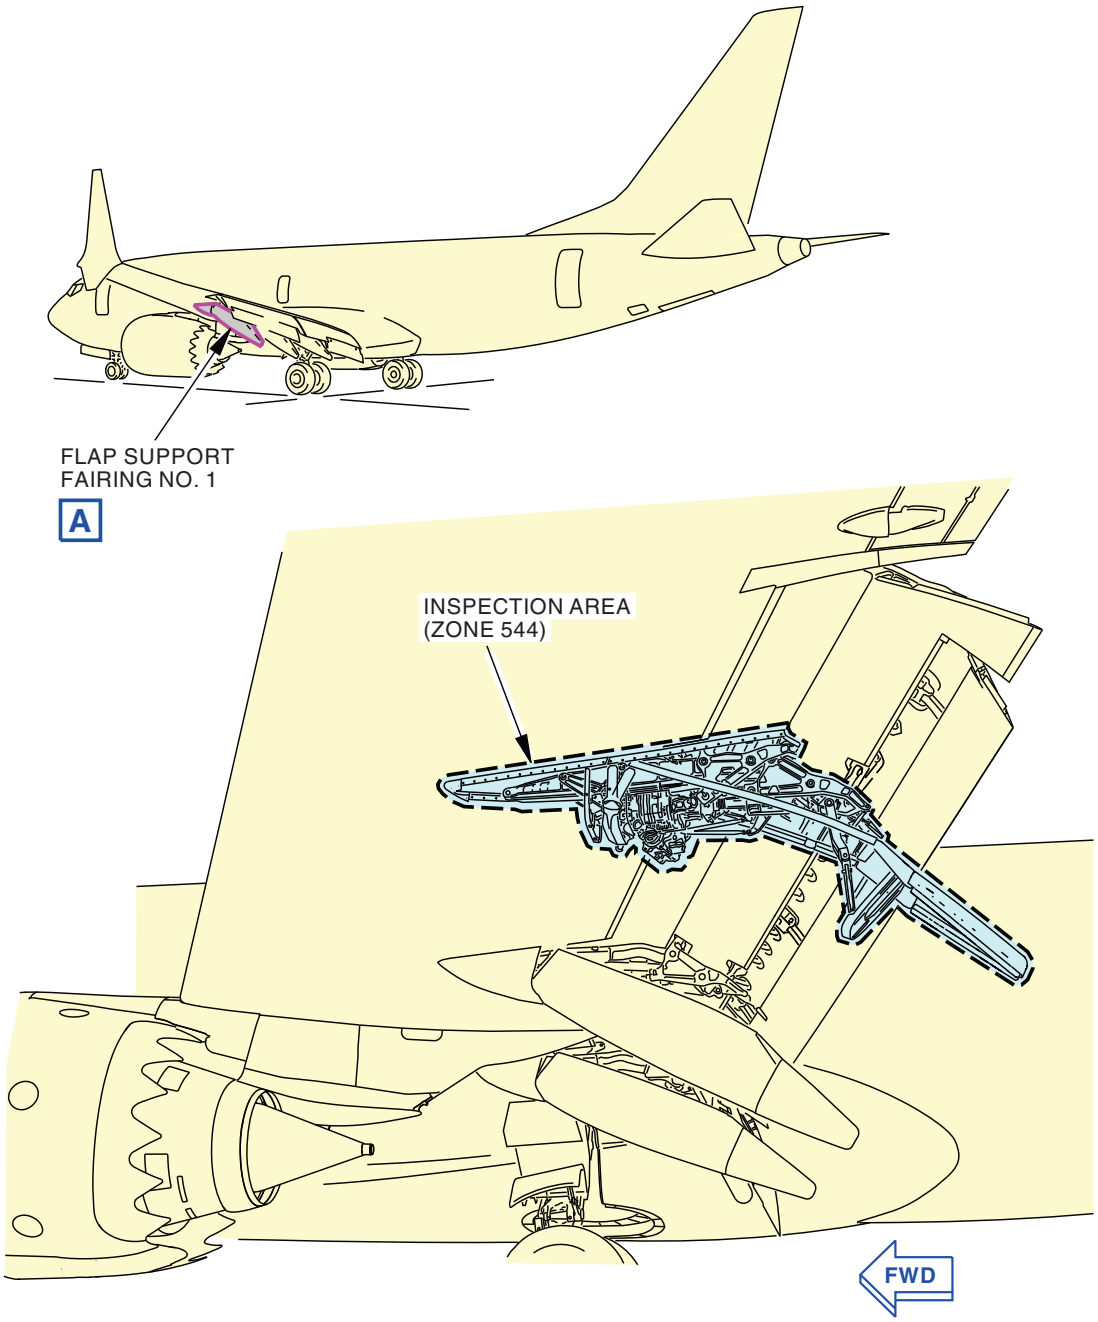

FLAP SUPPORT FAIRING NO. 1
(EXAMPLE)

A

2410239 S00061525166_V3

Flap Support Fairing No. 1 General Visual (Internal)
Figure 225/05-41-05-990-824

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-825

26. EXTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Left Wing

(Figure 226)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
551	Left Wing - Rear Spar To Landing Gear Support Beam

B. Zonal Inspection


NOTE: Excluding surface under wing to body fairing.

SUBTASK 05-41-05-210-025

(1) Perform an external zonal inspection (GVI) of the Rear Spar to Landing Gear Support Beam - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

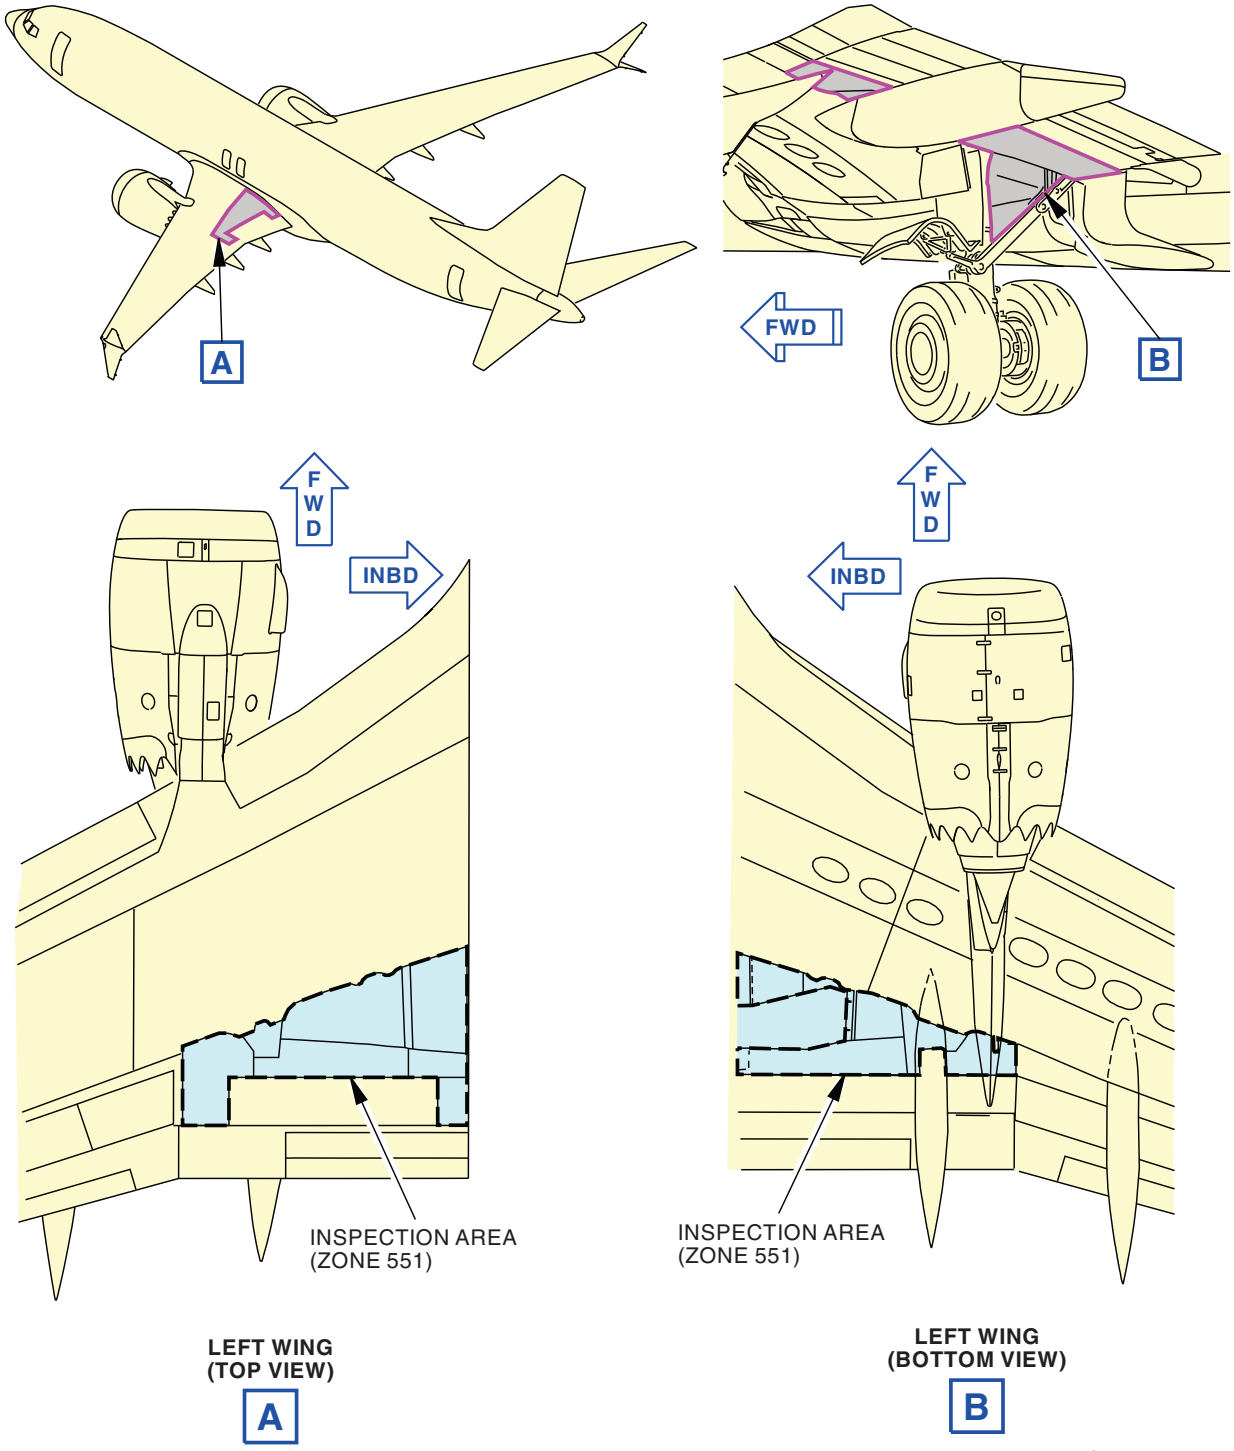

Rear Spar to Landing Gear Support Beam - Left Wing General Visual (External)
Figure 226/05-41-05-990-825

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-826

27. INTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Left Wing

(Figure 227)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
551	Left Wing - Rear Spar To Landing Gear Support Beam

D. Access Panels

Number	Name/Location
195CL	Wing-To-Body Fairing - Left Side
551AT	Upper Inboard Fixed Trailing Edge Access Panel
551BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
551CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
551DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
551FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel

E. Zonal Inspection

SUBTASK 05-41-05-010-008

(1) Open these access panels:

Number	Name/Location
195CL	Wing-To-Body Fairing - Left Side
551AT	Upper Inboard Fixed Trailing Edge Access Panel
551BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
551CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
551DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
551FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel

NOTE: Extend the trailing edge flaps and deploy spoilers.

SUBTASK 05-41-05-200-001

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-05-210-026

(3) Perform an internal zonal inspection (GVI) of the Rear Spar to Landing Gear Support Beam - Left Wing. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-05-910-009

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-05-410-008

(5) Close these access panels:

Number	Name/Location
195CL	Wing-To-Body Fairing - Left Side
551AT	Upper Inboard Fixed Trailing Edge Access Panel
551BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
551CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
551DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
551FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

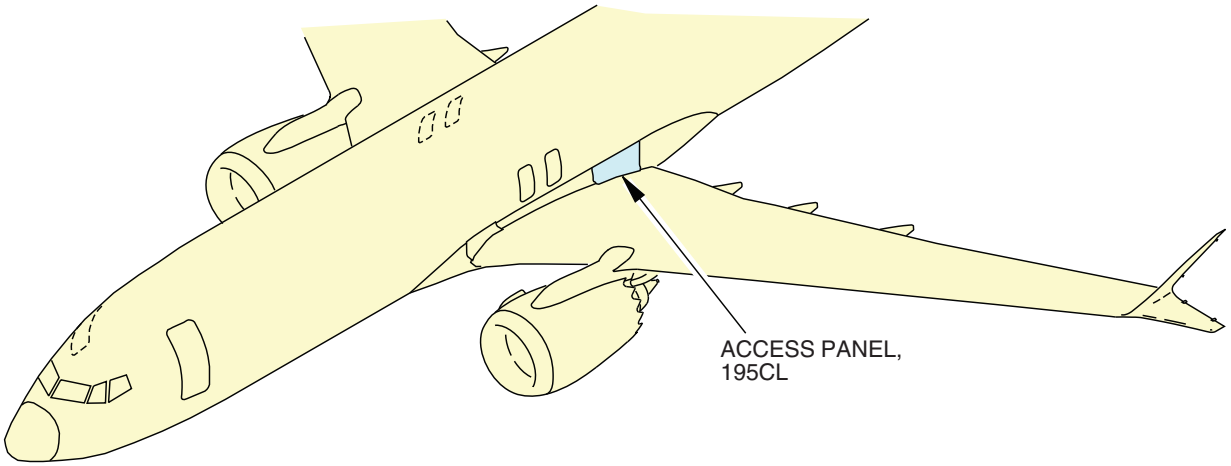

3111855 S0000850646_V1

Rear Spar to Landing Gear Support Beam - Left Wing General Visual (Internal)
Figure 227/05-41-05-990-826 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

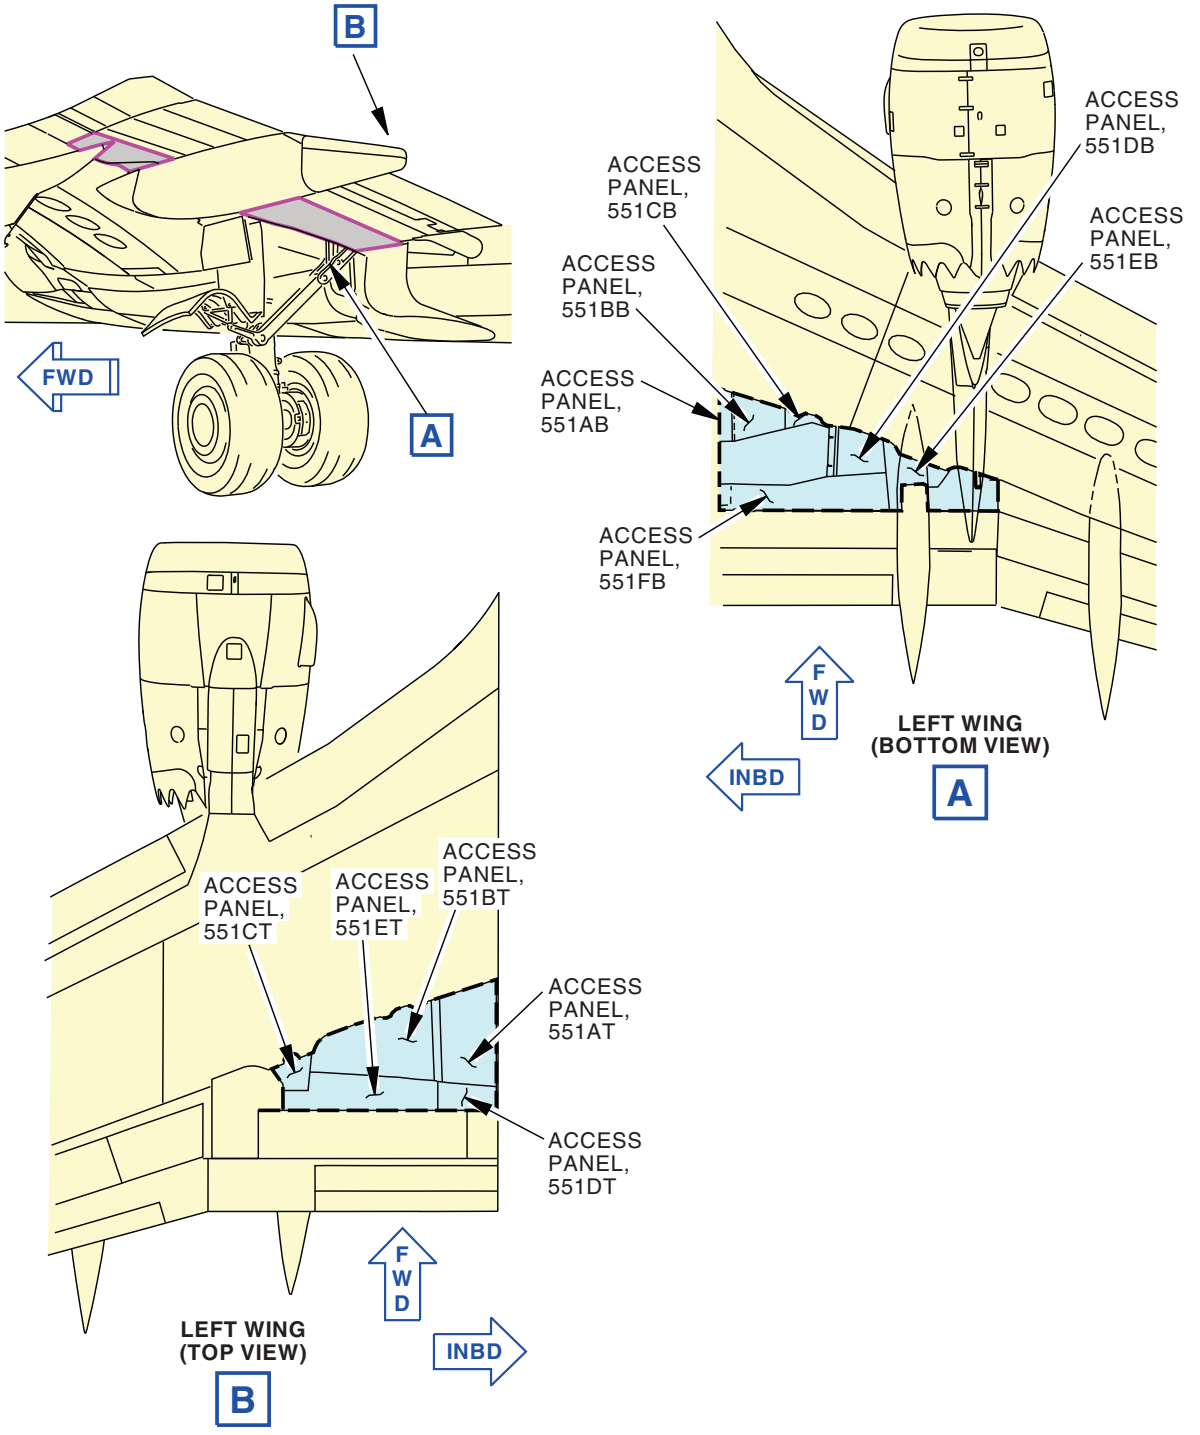

2410241 S00061525170_V2

Rear Spar to Landing Gear Support Beam - Left Wing General Visual (Internal)
Figure 227/05-41-05-990-826 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-827

28. EXTERNAL - ZONAL (GVI): Inboard Spoiler No. 6 - Left Wing

(Figure 228)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
552	Left Wing - Spoiler No. 6

B. Zonal Inspection


NOTE: Spoiler raised.

SUBTASK 05-41-05-210-027

(1) Perform an external zonal inspection (GVI) of the Inboard Spoiler No. 6 - Left Wing.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

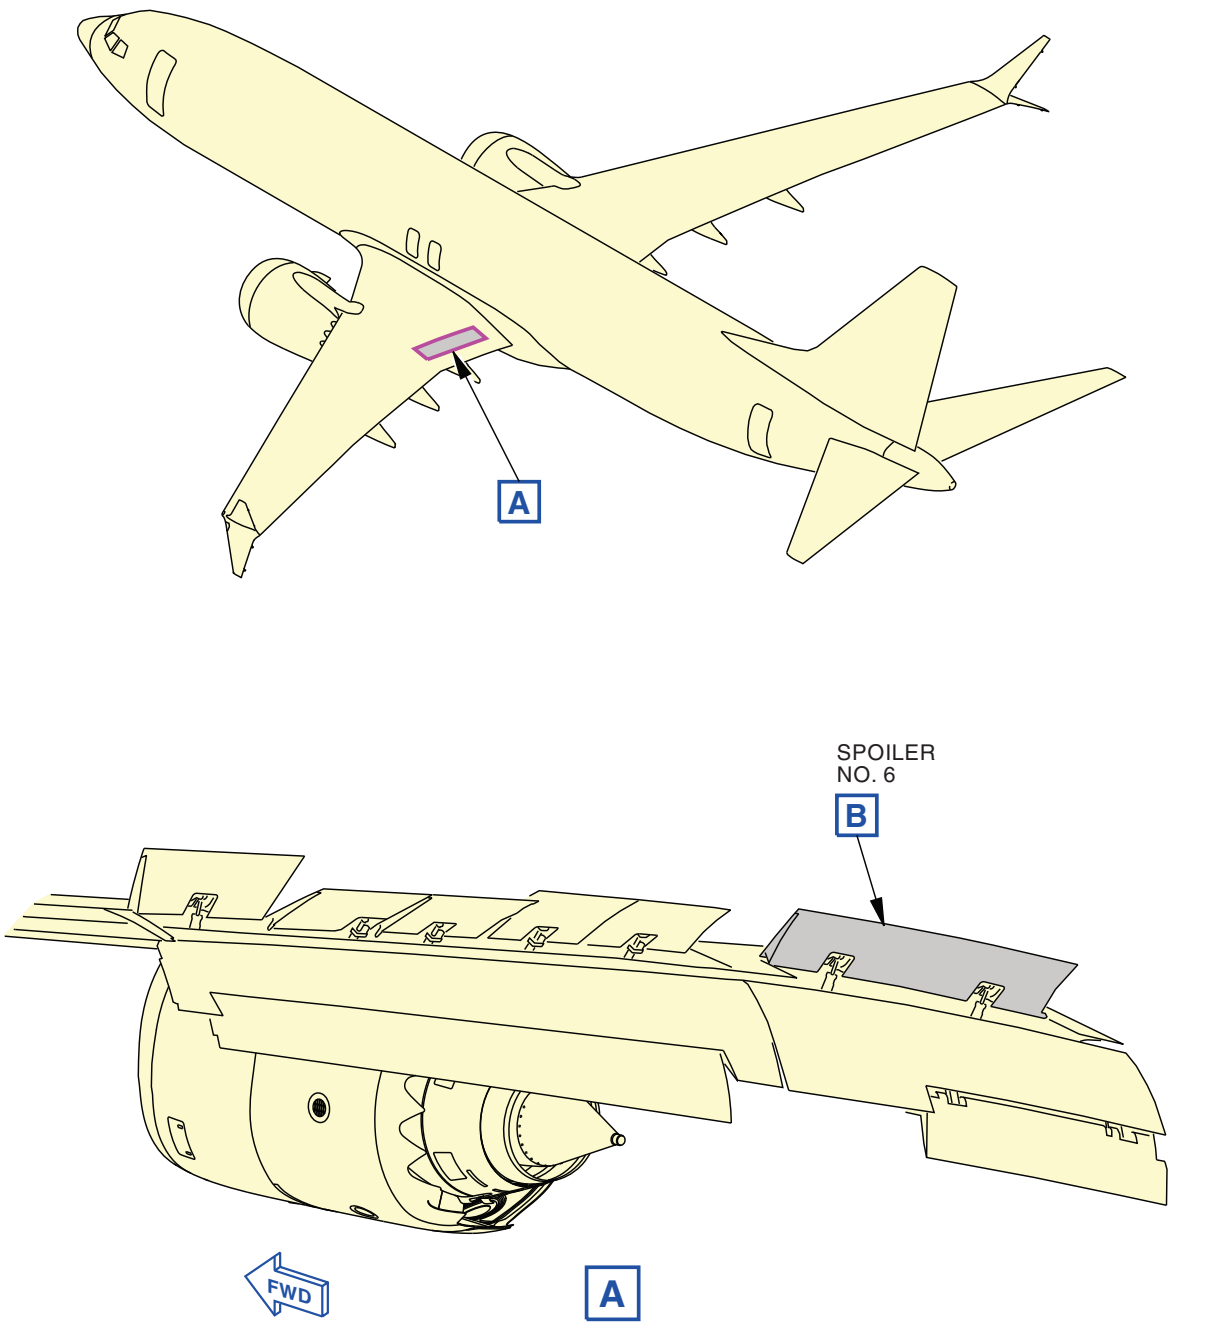

2410242 S00061525172_V2

Inboard Spoiler No. 6 General Visual (External)
Figure 228/05-41-05-990-827 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

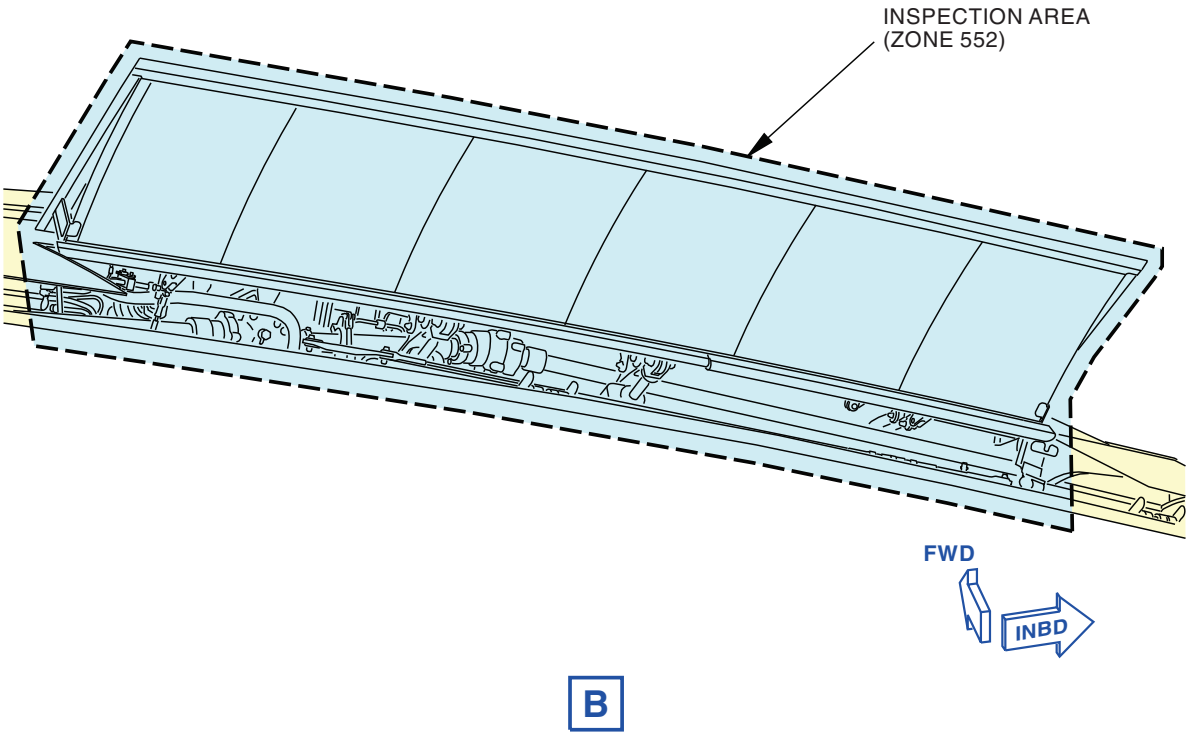

2410243 S00061525173_V1

Inboard Spoiler No. 6 General Visual (External)
Figure 228/05-41-05-990-827 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-828

29. EXTERNAL - ZONAL (GVI): Inboard Flaps - Left Wing

(Figure 229)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
553	Left Wing - Inboard Flap

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-05-210-028

(1) Perform an external zonal inspection (GVI) of the Inboard Flaps - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

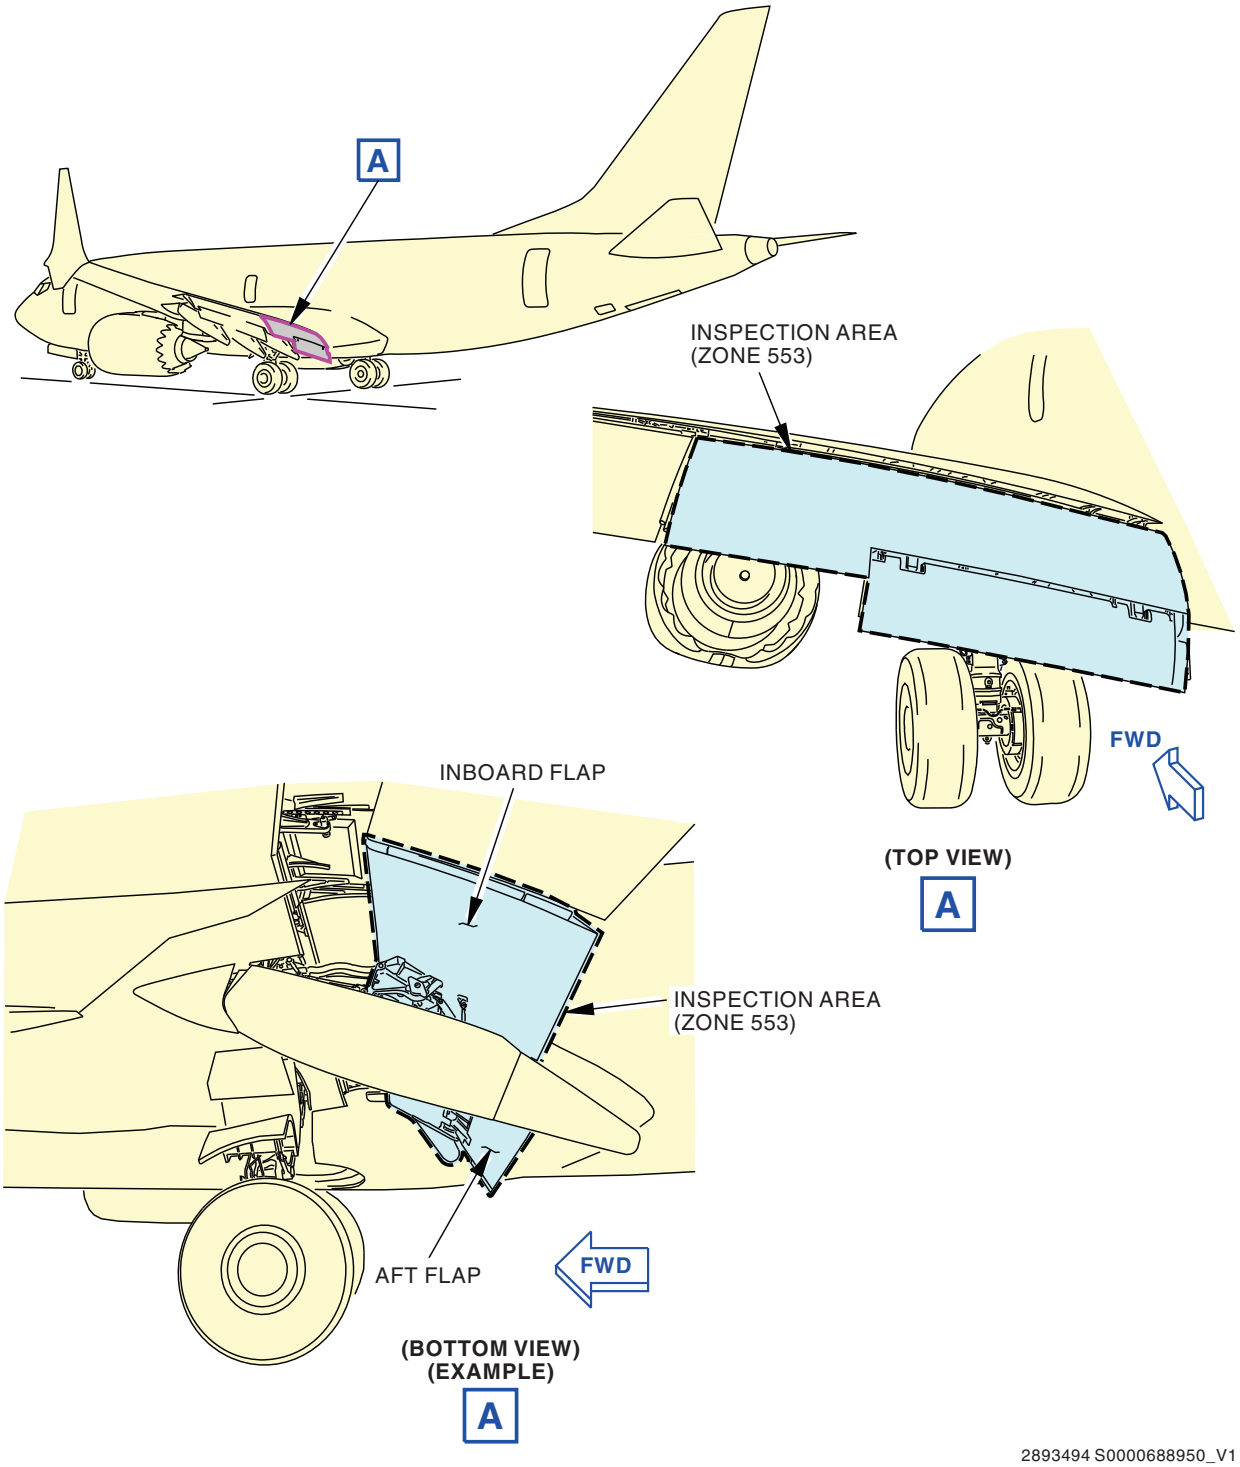

Inboard Trailing Edge Flaps - Left Wing General Visual (External)
Figure 229/05-41-05-990-828

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-829

30. INTERNAL - ZONAL (GVI): Inboard Main Flaps - Left Wing

(Figure 230)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
553	Left Wing - Inboard Flap

B. Access Panels

Number	Name/Location
553BB	Inboard Flap - Lower Skin

C. Zonal Inspection

SUBTASK 05-41-05-010-009

(1) Open this access panel:

Number	Name/Location
553BB	Inboard Flap - Lower Skin

NOTE: Flaps extended.

SUBTASK 05-41-05-210-029

(2) Perform an internal zonal inspection (GVI) of the Inboard Main Flaps - Left Wing.


SUBTASK 05-41-05-410-009

(3) Close this access panel:

Number	Name/Location
553BB	Inboard Flap - Lower Skin

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

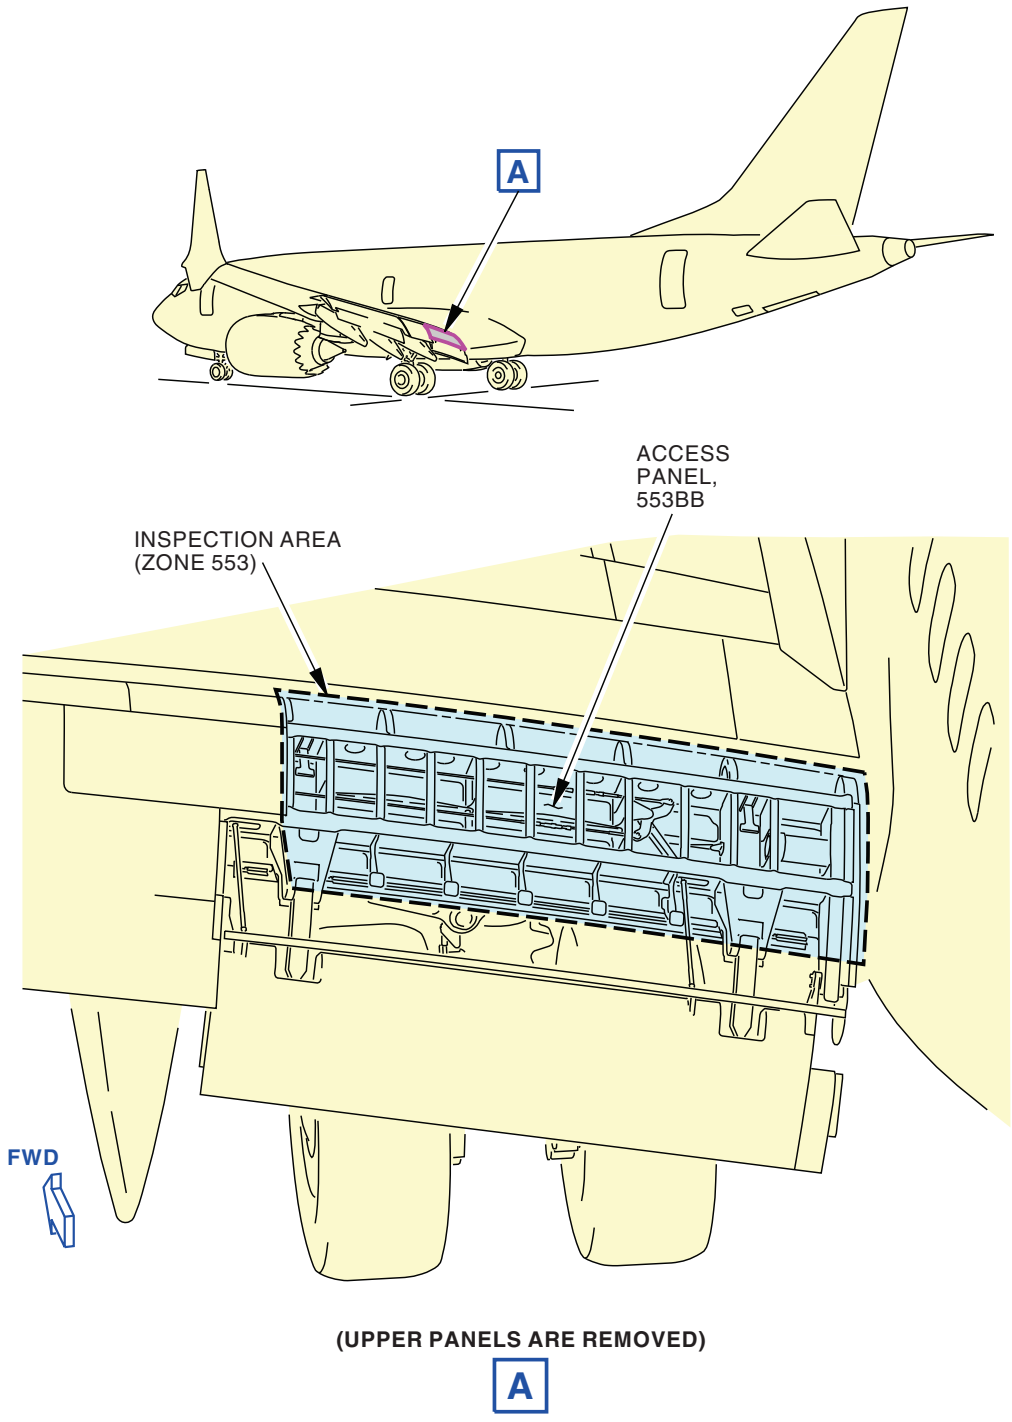

Inboard Trailing Edge Main Flap - Left Wing General Visual (Internal)
Figure 230/05-41-05-990-829

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-830

31. EXTERNAL - ZONAL (GVI): Rear Spar to T.E. - Outboard of Inboard Flap - Inboard of Fixed Trailing Edge - Left Wing

(Figure 231)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
561	Left Wing - Rear Spar to Trailing Edge, Outboard Of Inboard Flap, Inboard of Fixed Trailing Edge

D. Zonal Inspection

NOTE: Flaps down, spoilers raised.

SUBTASK 05-41-05-210-030

(1) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.


(2) Perform an external zonal inspection (GVI) of the Rear Spar to T.E. - Outboard of Inboard Flap - Inboard of Fixed Trailing Edge - Left Wing. (EZAP)

SUBTASK 05-41-05-910-007

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

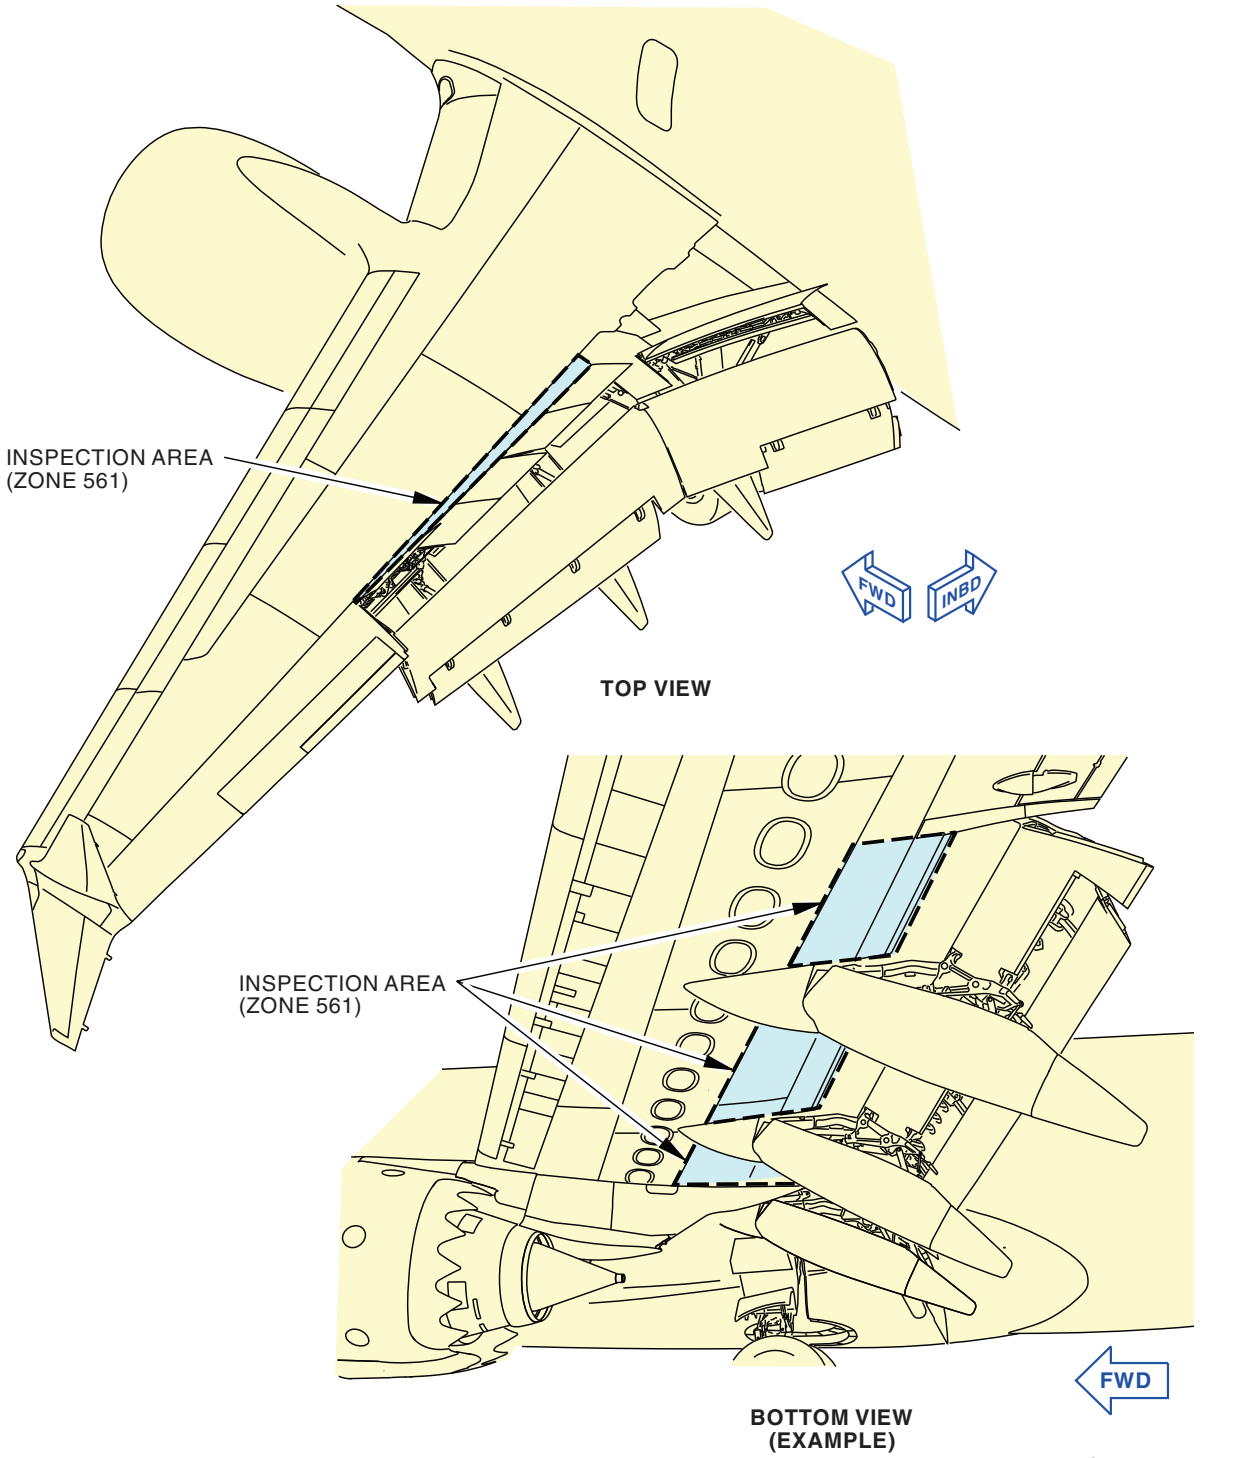

Rear Spar to Trailing Edge (Outboard of Inboard Flap and Inboard of Fixed Trailing Edge) - Left Wing
Figure 231/05-41-05-990-830

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-831

32. EXTERNAL - ZONAL (GVI): Spoilers No. 1, 2, 3, 4, 5 - Left Wing

(Figure 232)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
562	Left Wing - Spoiler No. 5
563	Left Wing - Spoiler No. 4
564	Left Wing - Spoiler No. 3
565	Left Wing - Spoiler No. 2
566	Left Wing - Spoiler No. 1

B. Zonal Inspection


NOTE: Spoilers raised.

SUBTASK 05-41-05-210-031

(1) Perform an external zonal inspection (GVI) of the Spoilers No. 1, 2, 3, 4, 5 - Left Wing.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

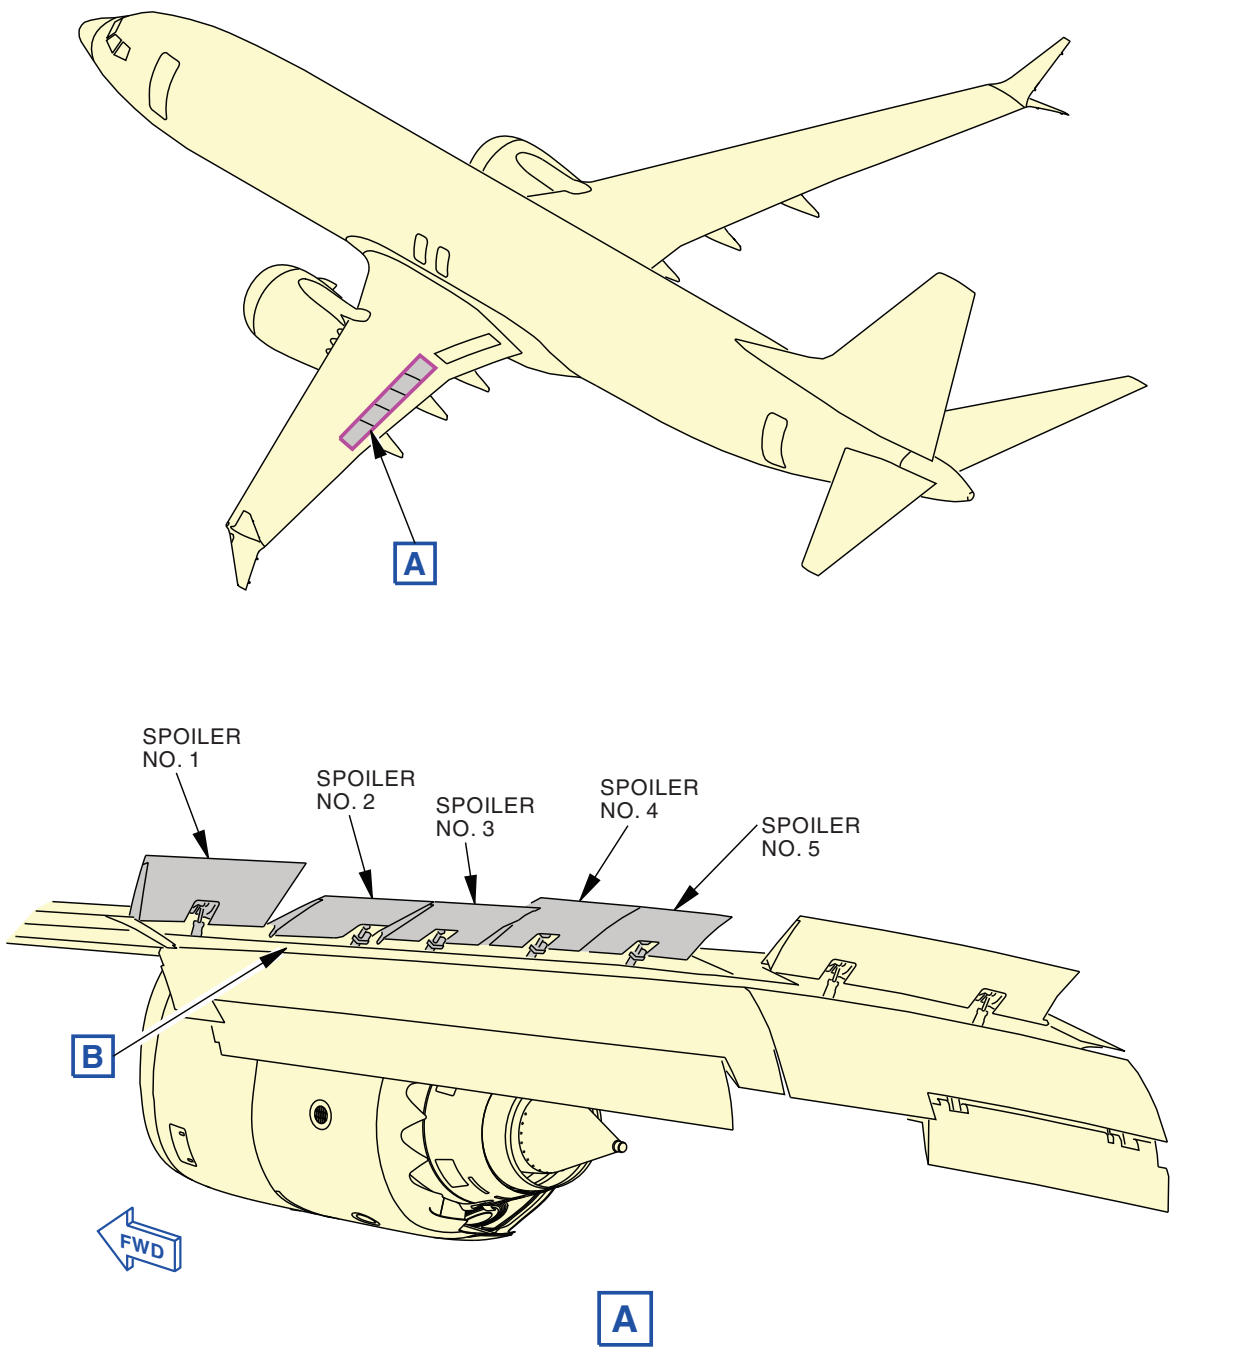

2410247 S00061525181_V2

Outboard Spoiler No. 1 through 5 General Visual (External)
Figure 232/05-41-05-990-831 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

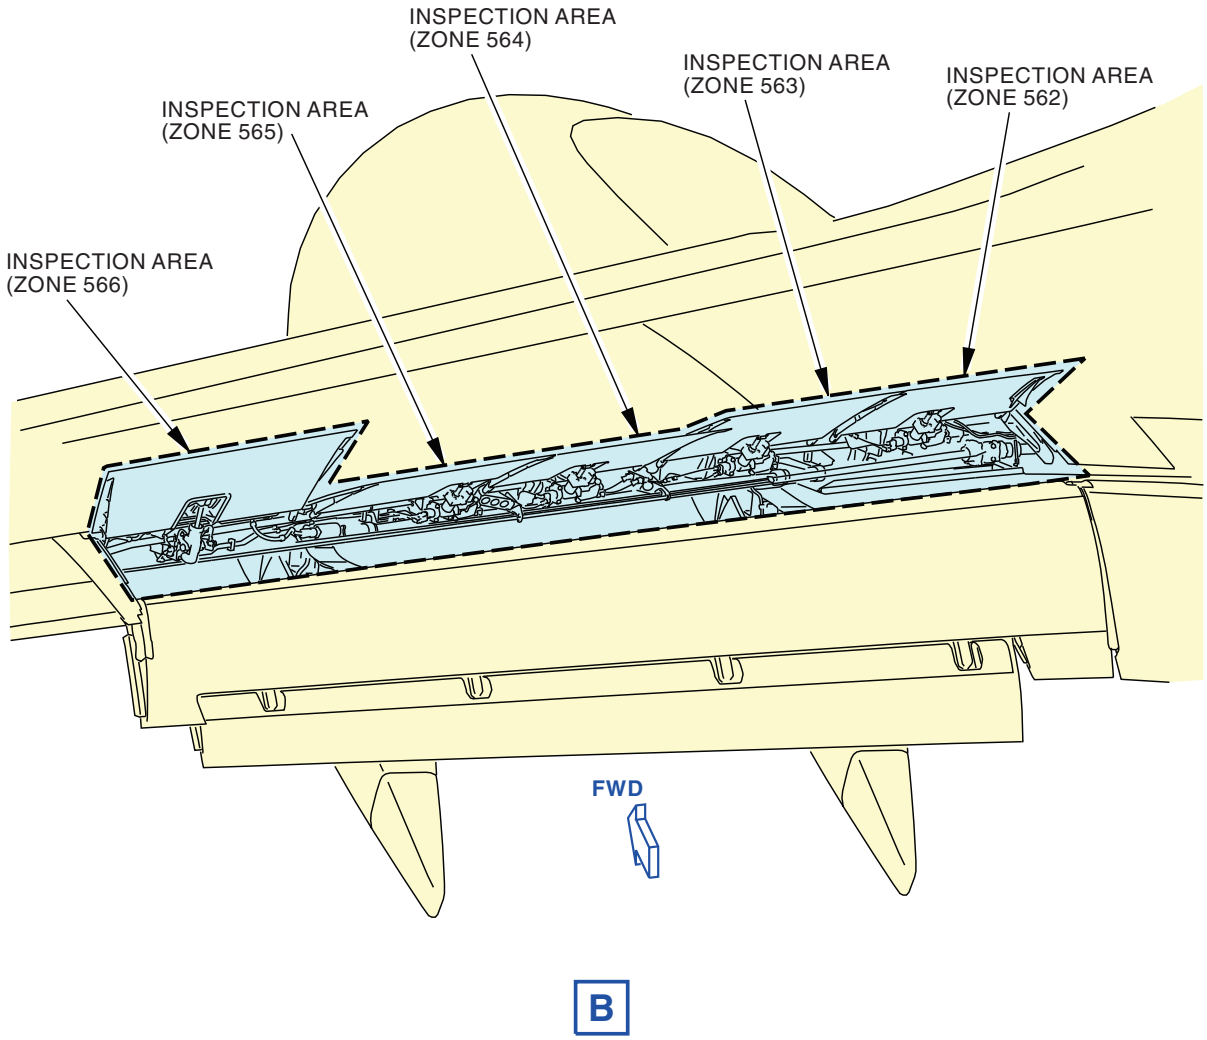

2410248 S00061525182_V1

Outboard Spoiler No. 1 through 5 General Visual (External)
Figure 232/05-41-05-990-831 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-832

33. EXTERNAL - ZONAL (GVI): Outboard Flaps - Left Wing

(Figure 233)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
567	Left Wing - Outboard Flap

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-05-210-032

(1) Perform an external zonal inspection (GVI) of the Outboard Flaps - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

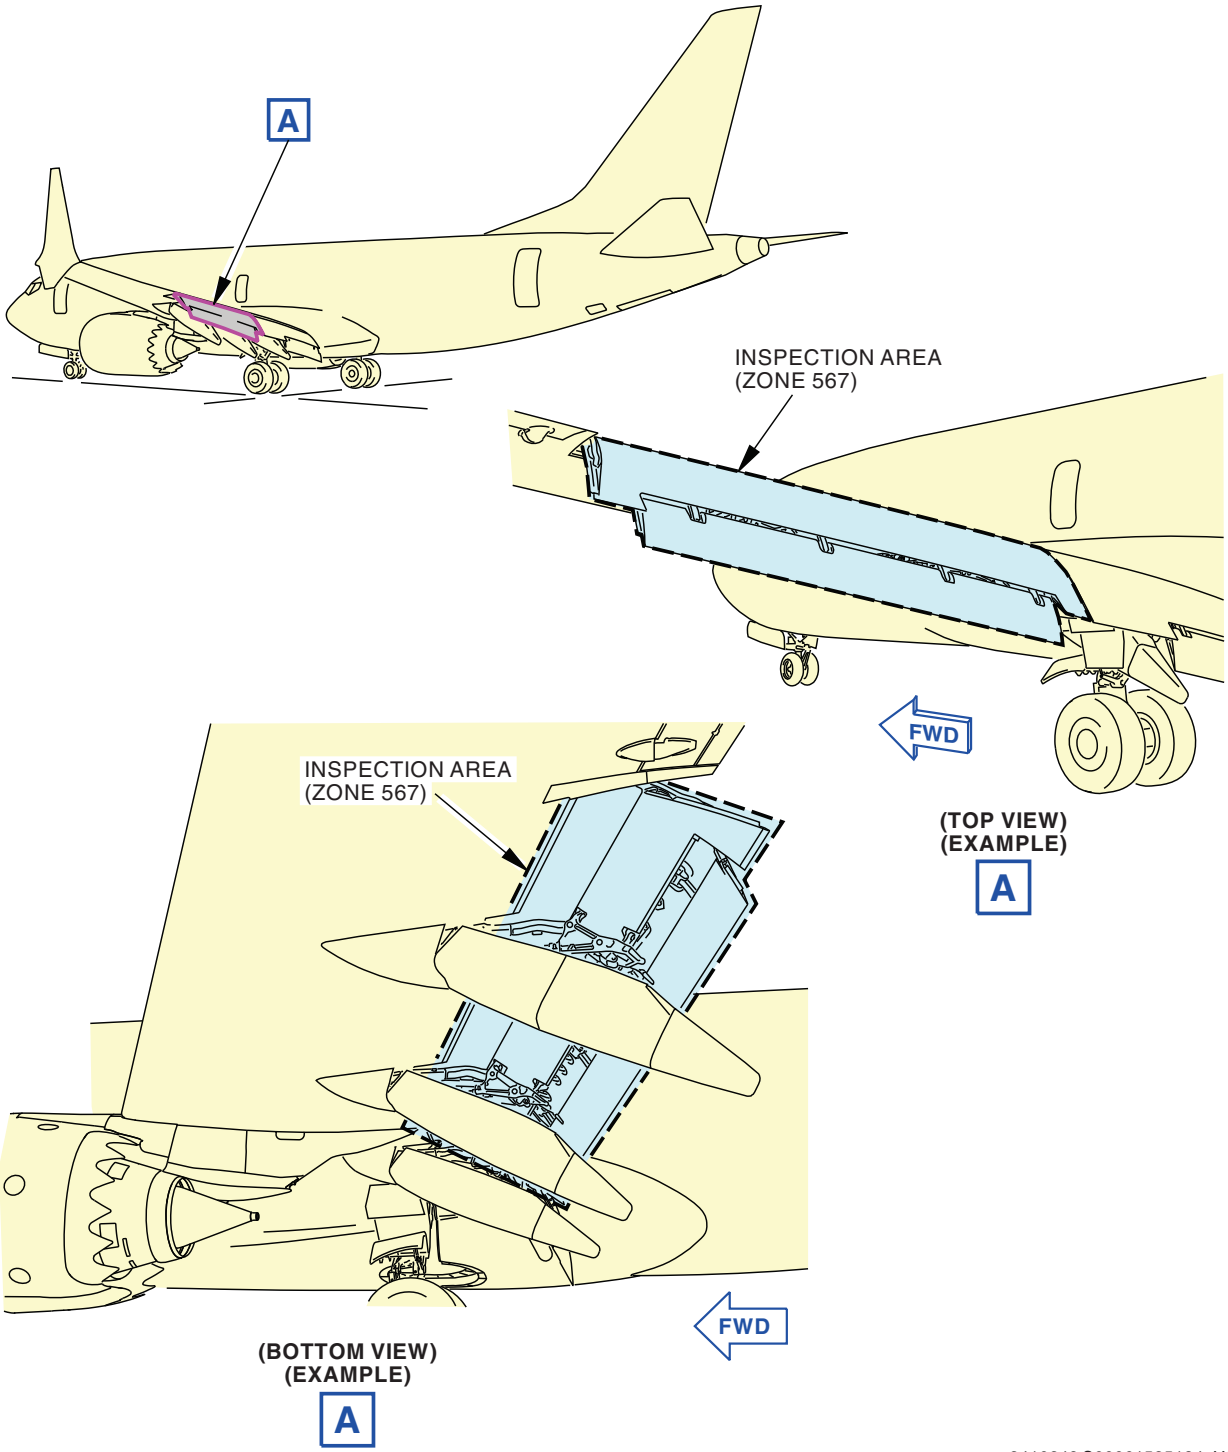

2410249 S00061525184_V3

Outboard Flap - Left Wing General Visual (External)
Figure 233/05-41-05-990-832

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-833

34. EXTERNAL - ZONAL (GVI): Fixed Trailing Edge - Left Wing

(Figure 234)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
571	Left Wing - Fixed Trailing Edge


B. Zonal Inspection

SUBTASK 05-41-05-210-033

(1) Perform an external zonal inspection (GVI) of the Fixed Trailing Edge - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

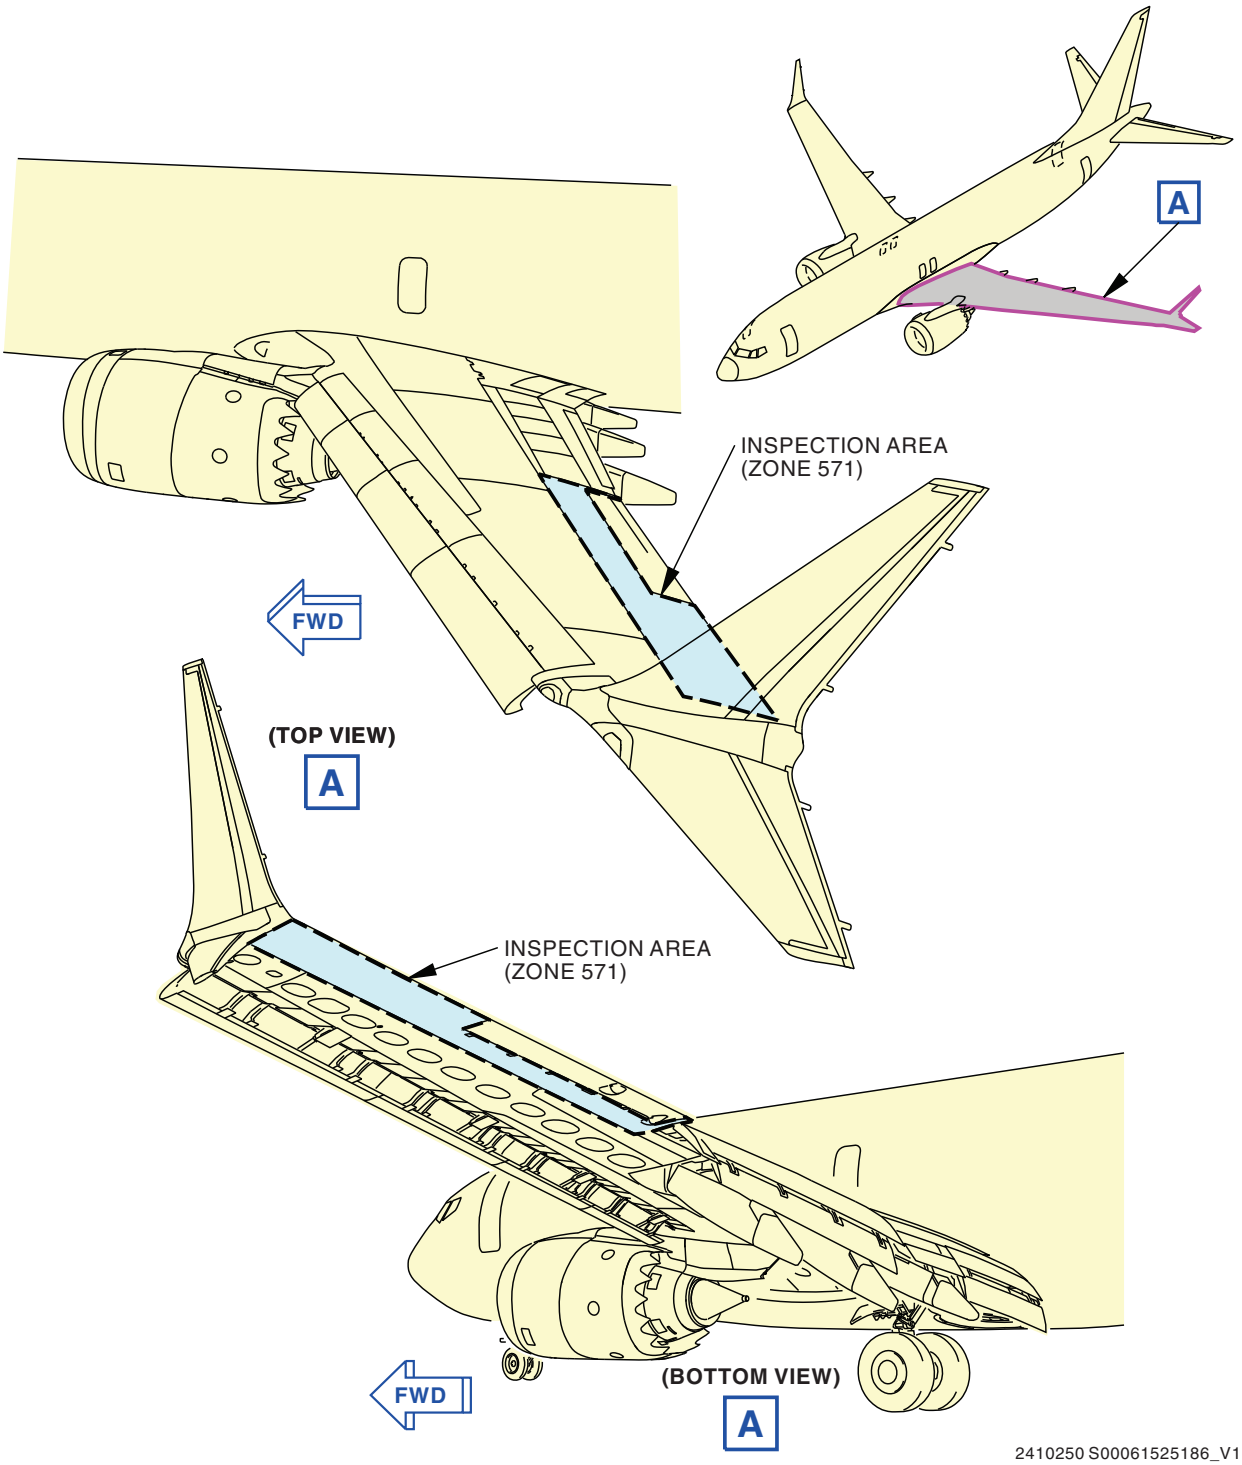

Fixed Trailing Edge - Left Wing General Visual (External)
Figure 234/05-41-05-990-833

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-834

35. INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Left Wing

(Figure 235)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
571	Left Wing - Fixed Trailing Edge

B. Access Panels

Number	Name/Location
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib
571AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
571BB	Lower Outboard Fixed Trailing Edge Access Panel
571BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
571CB	Lower Outboard Fixed Trailing Edge Access Panel
571DB	Lower Outboard Fixed Trailing Edge Access Panel
571EB	Lower Outboard Fixed Trailing Edge Wedge Access Panel
571FB	Lower Outboard Fixed Trailing Edge Wedge Access Panel

C. Zonal Inspection

SUBTASK 05-41-05-010-010

(1) Open these access panels:

Number	Name/Location
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib
571AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
571BB	Lower Outboard Fixed Trailing Edge Access Panel
571BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
571CB	Lower Outboard Fixed Trailing Edge Access Panel
571DB	Lower Outboard Fixed Trailing Edge Access Panel
571EB	Lower Outboard Fixed Trailing Edge Wedge Access Panel
571FB	Lower Outboard Fixed Trailing Edge Wedge Access Panel

SUBTASK 05-41-05-210-034

(2) Perform an internal zonal inspection (GVI) of the Fixed Trailing Edge - Left Wing.


SUBTASK 05-41-05-410-010

(3) Close these access panels:

Number	Name/Location
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib
571AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
571BB	Lower Outboard Fixed Trailing Edge Access Panel
571BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
571CB	Lower Outboard Fixed Trailing Edge Access Panel
571DB	Lower Outboard Fixed Trailing Edge Access Panel
571EB	Lower Outboard Fixed Trailing Edge Wedge Access Panel
571FB	Lower Outboard Fixed Trailing Edge Wedge Access Panel

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

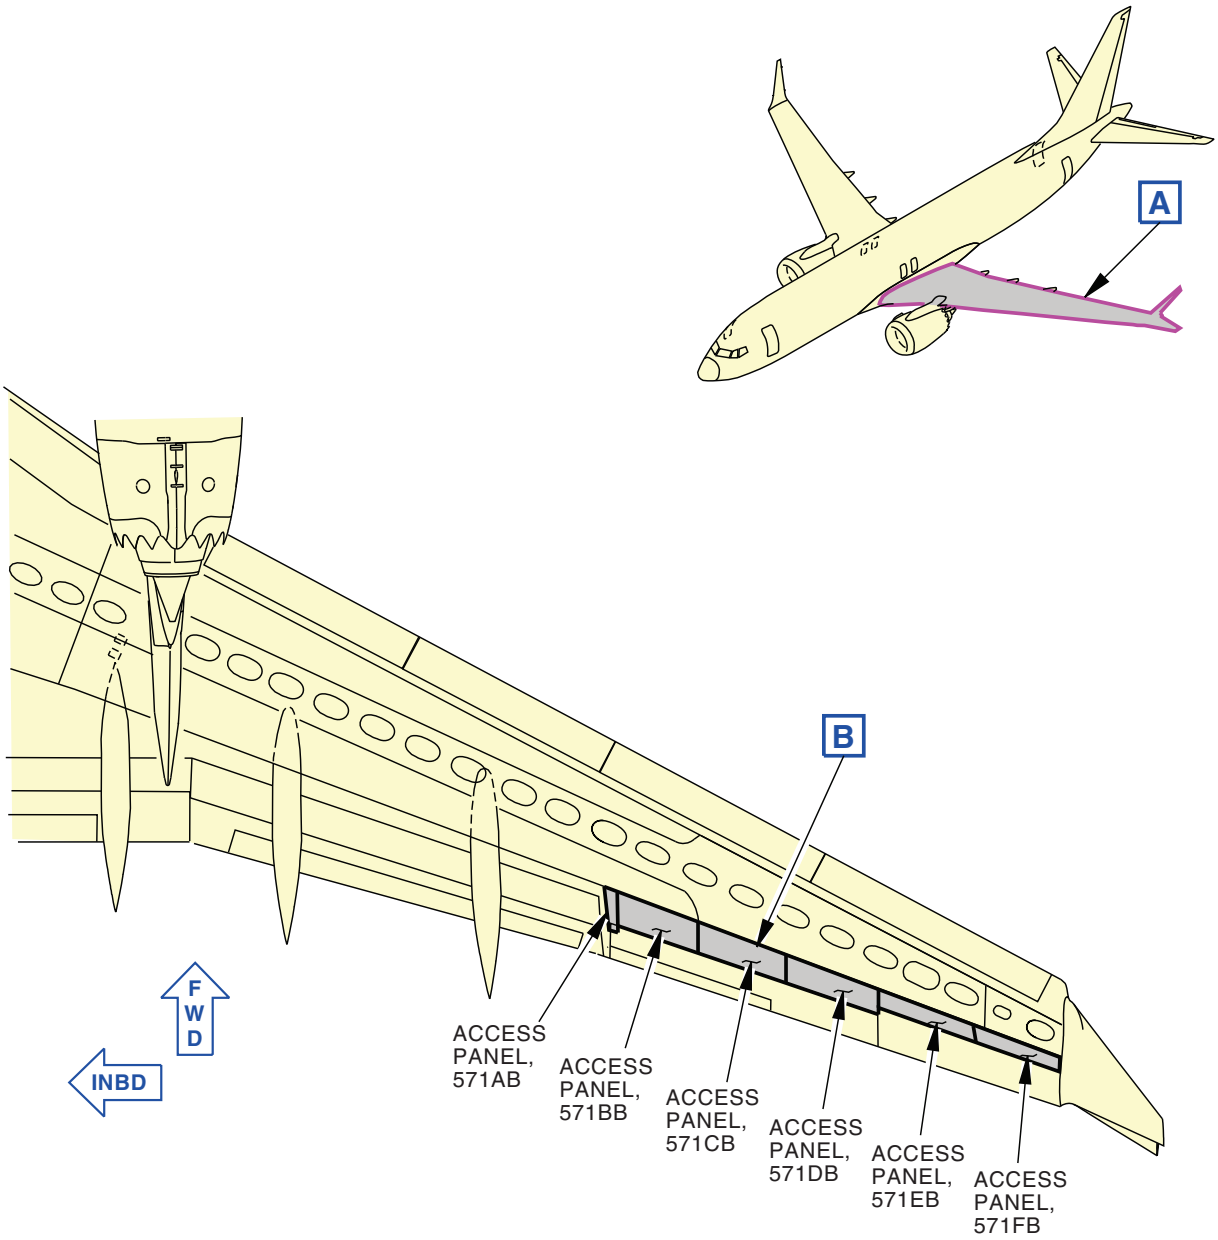


LEFT WING
(BOTTOM VIEW)

A

2410251 S00061525188_V1

Fixed Trailing Edge - Left Wing General Visual (Internal)
Figure 235/05-41-05-990-834 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

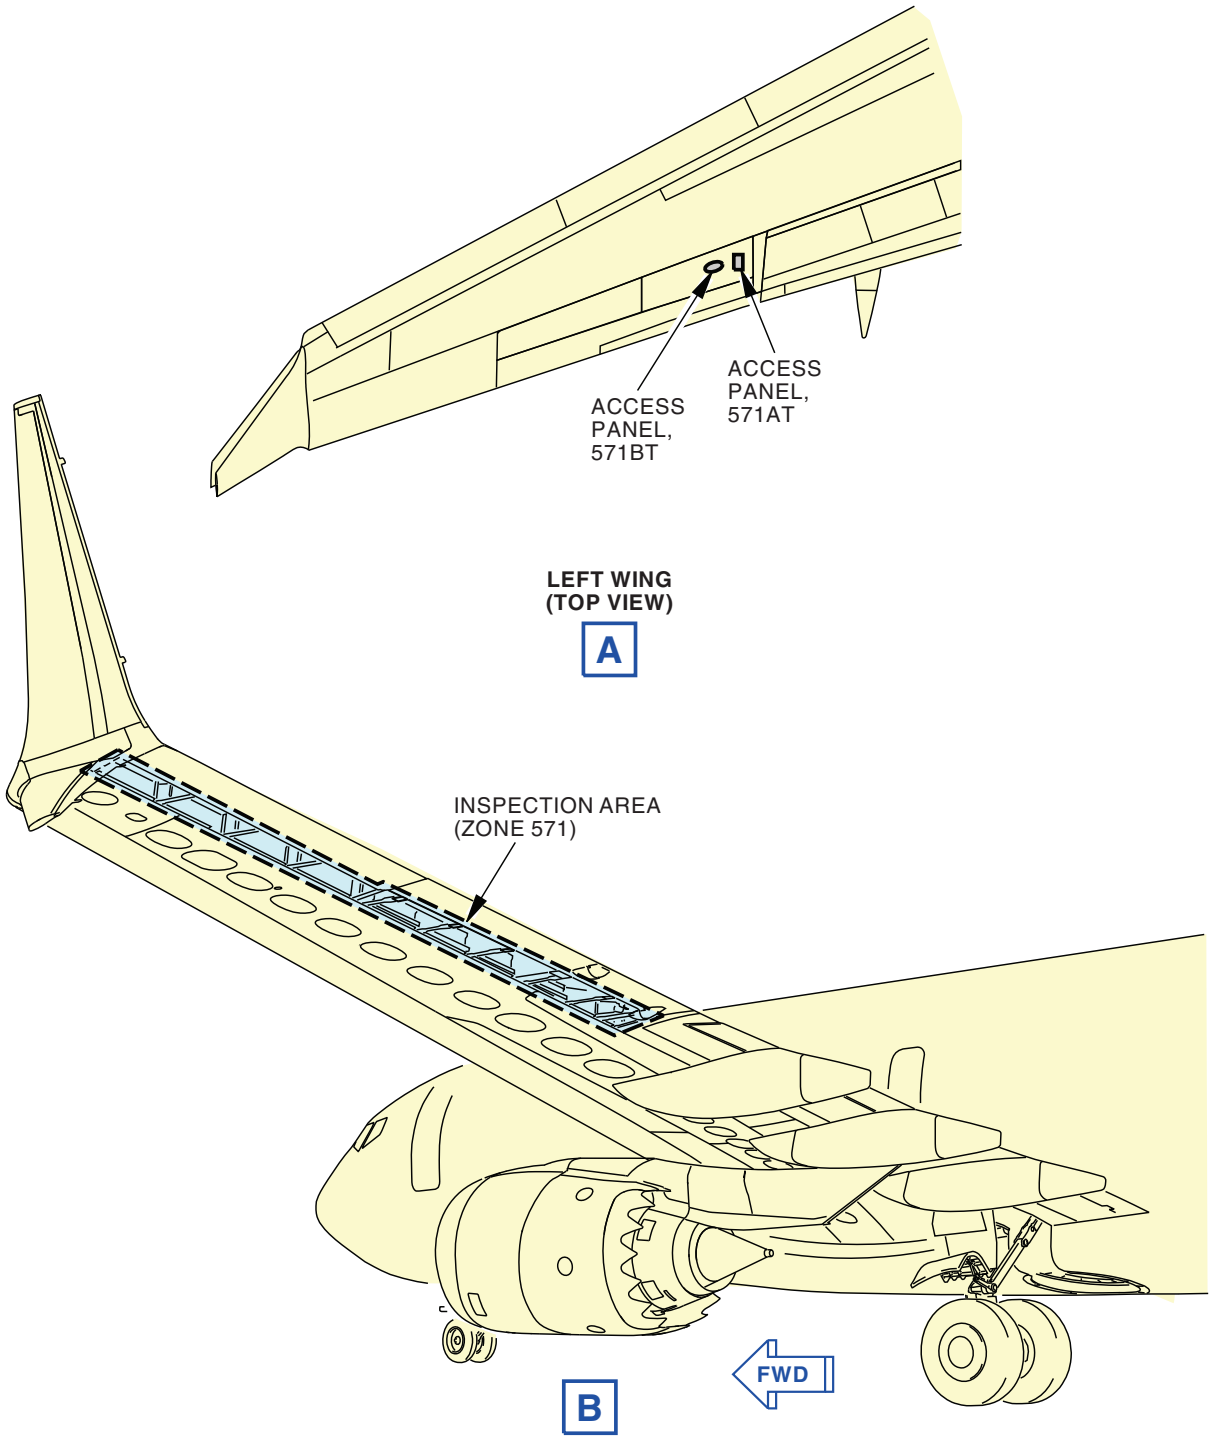

Fixed Trailing Edge - Left Wing General Visual (Internal)
Figure 235/05-41-05-990-834 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-05-210-835

36. INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Left Wing

(Figure 236)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
571	Left Wing - Fixed Trailing Edge

D. Access Panels

Number	Name/Location
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib
571BB	Lower Outboard Fixed Trailing Edge Access Panel

E. Zonal Inspection

SUBTASK 05-41-05-010-011

(1) Open these access panels:

Number	Name/Location
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib
571BB	Lower Outboard Fixed Trailing Edge Access Panel

NOTE: Aileron control area only.

SUBTASK 05-41-05-210-035

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Fixed Trailing Edge - Left Wing. (EZAP)

SUBTASK 05-41-05-910-008

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-05-410-011

(5) Close these access panels:

Number	Name/Location
571AB	Lower Outboard Fixed Trailing Edge Access Panel at Deflector Rib
571BB	Lower Outboard Fixed Trailing Edge Access Panel

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

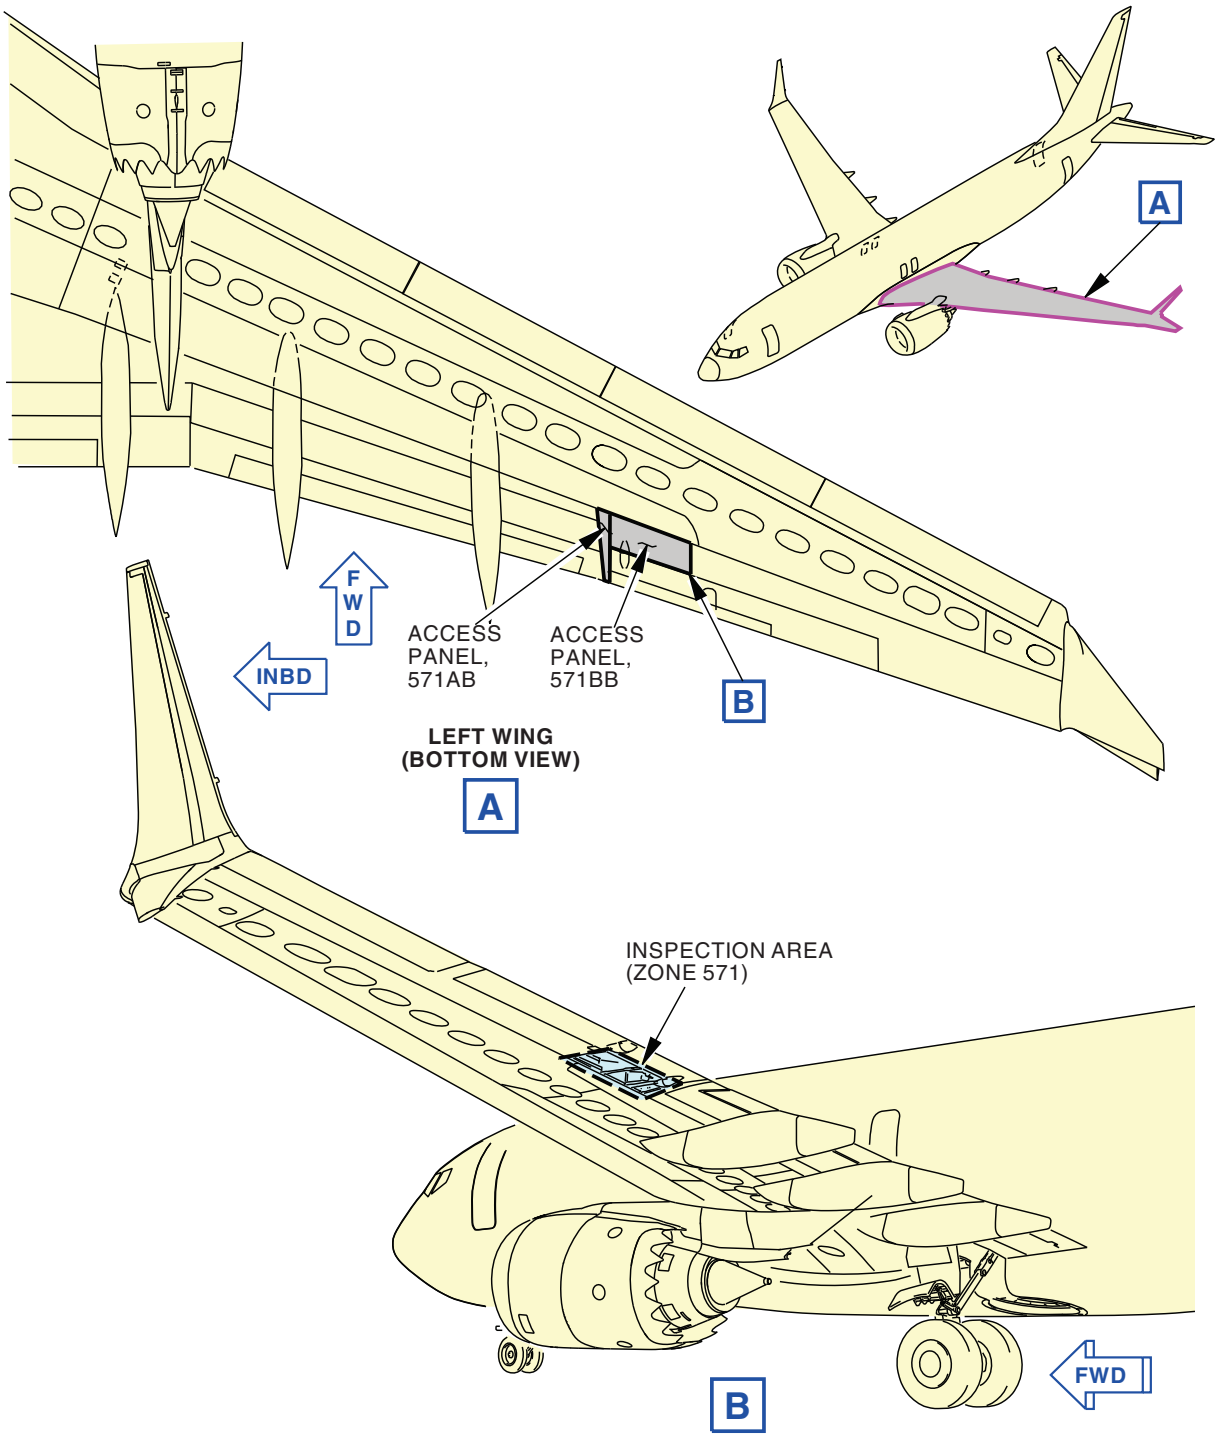

Fixed Trailing Edge - Left Wing General Visual (Internal)
Figure 236/05-41-05-990-835

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-05-210-836

37. EXTERNAL - ZONAL (GVI): Aileron - Left Wing

(Figure 237)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
572	Left Wing - Aileron


B. Zonal Inspection

SUBTASK 05-41-05-210-036

(1) Perform an external zonal inspection (GVI) of the Aileron - Left Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

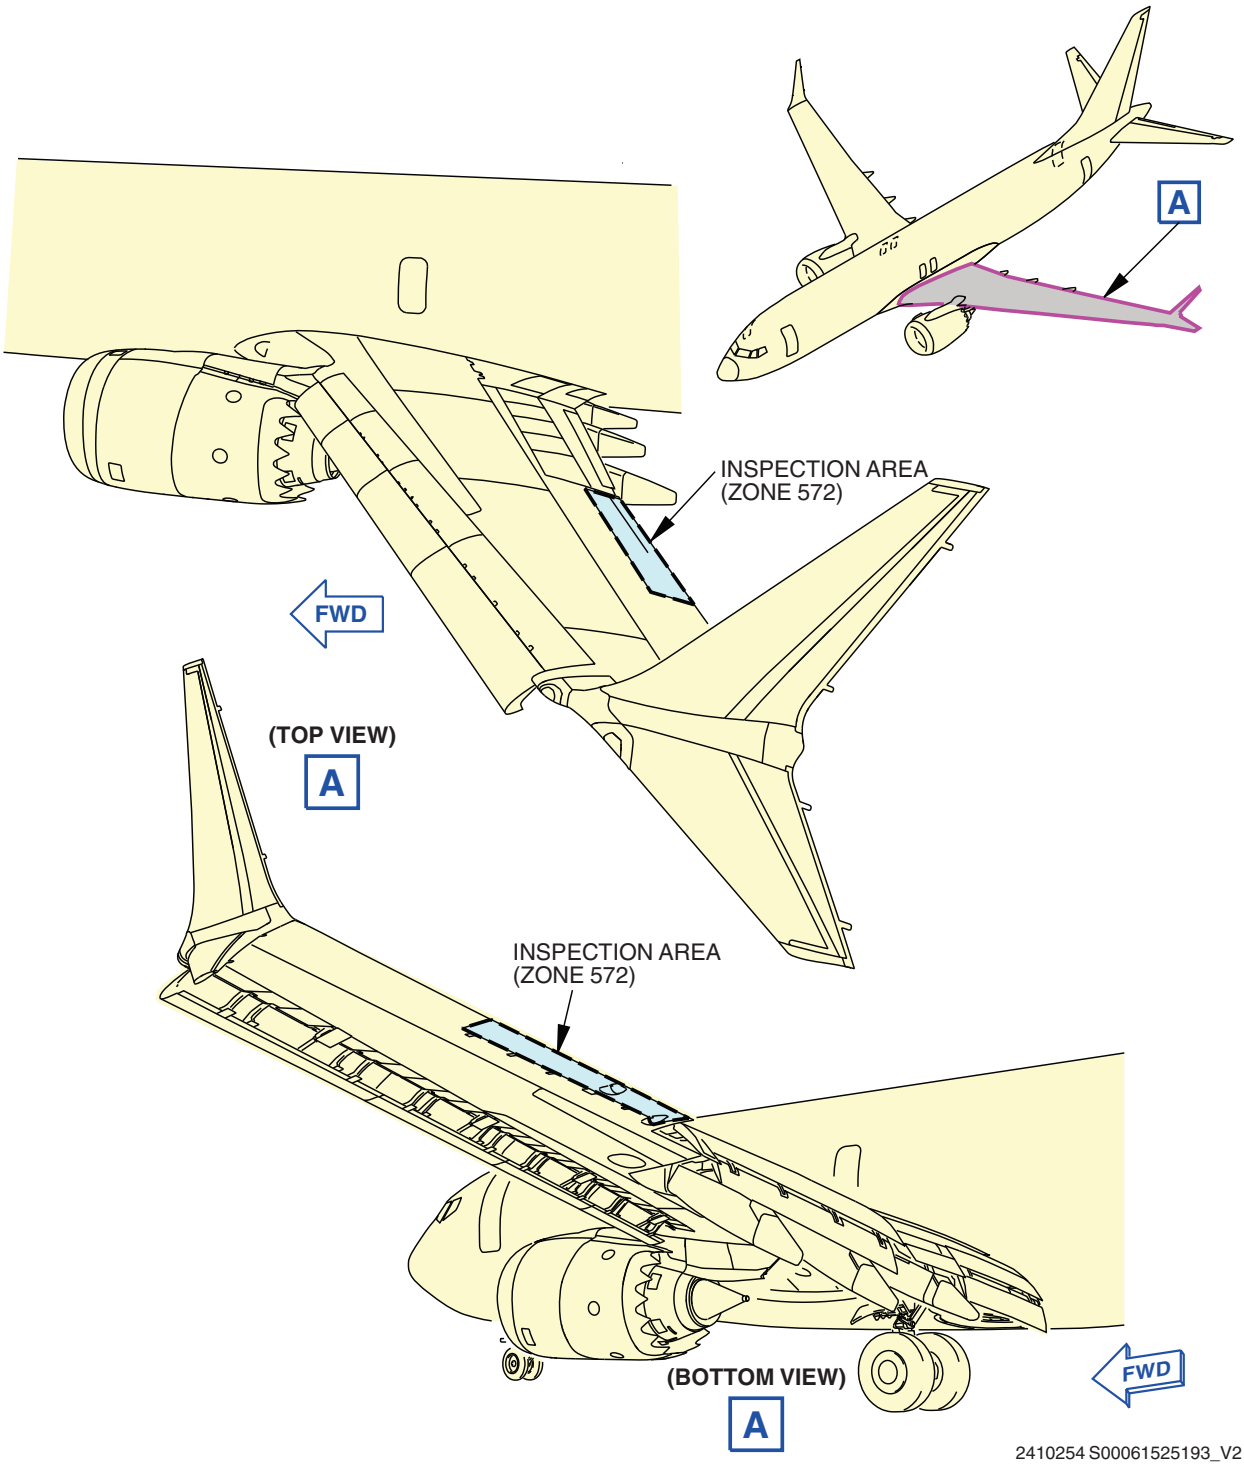

Aileron - Left Wing General Visual (External)
Figure 237/05-41-05-990-836

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-801

1. EXTERNAL - ZONAL (GVI): Right Wing

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
610	Subzone - Right Wing: Leading Edge, Forward of Front Spar, Inboard of Nacelle Strut, Including Gap Cover Area
620	Subzone - Right Wing: Leading Edge, Forward of Front Spar, Outboard of Nacelle Strut
630	Subzone - Right Wing: Inspar Area (Fuel Tanks), Inboard of Wing Rib 22, Wing Station 643.50
640	Subzone - Right Wing: Trailing Edge, Flap Track Fairings
650	Subzone - Right Wing: Trailing Edge, Aft of Rear Spar, Inboard of Outboard Trailing Edge Flap
660	Subzone - Right Wing: Trailing Edge, Aft of Rear Spar, Outboard of Inboard Trailing Edge Flap, Inboard of Fixed Trailing Edge
670	Subzone - Right Wing: Fixed Trailing Edge, Outboard of Outboard Flap, Inboard of Wing Tip, Wing Buttock Line 658.17


B. Zonal Inspection

SUBTASK 05-41-06-210-001

(1) Perform an external zonal inspection (GVI) of the right wing, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders. Control surfaces extended. No additional access panels required.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

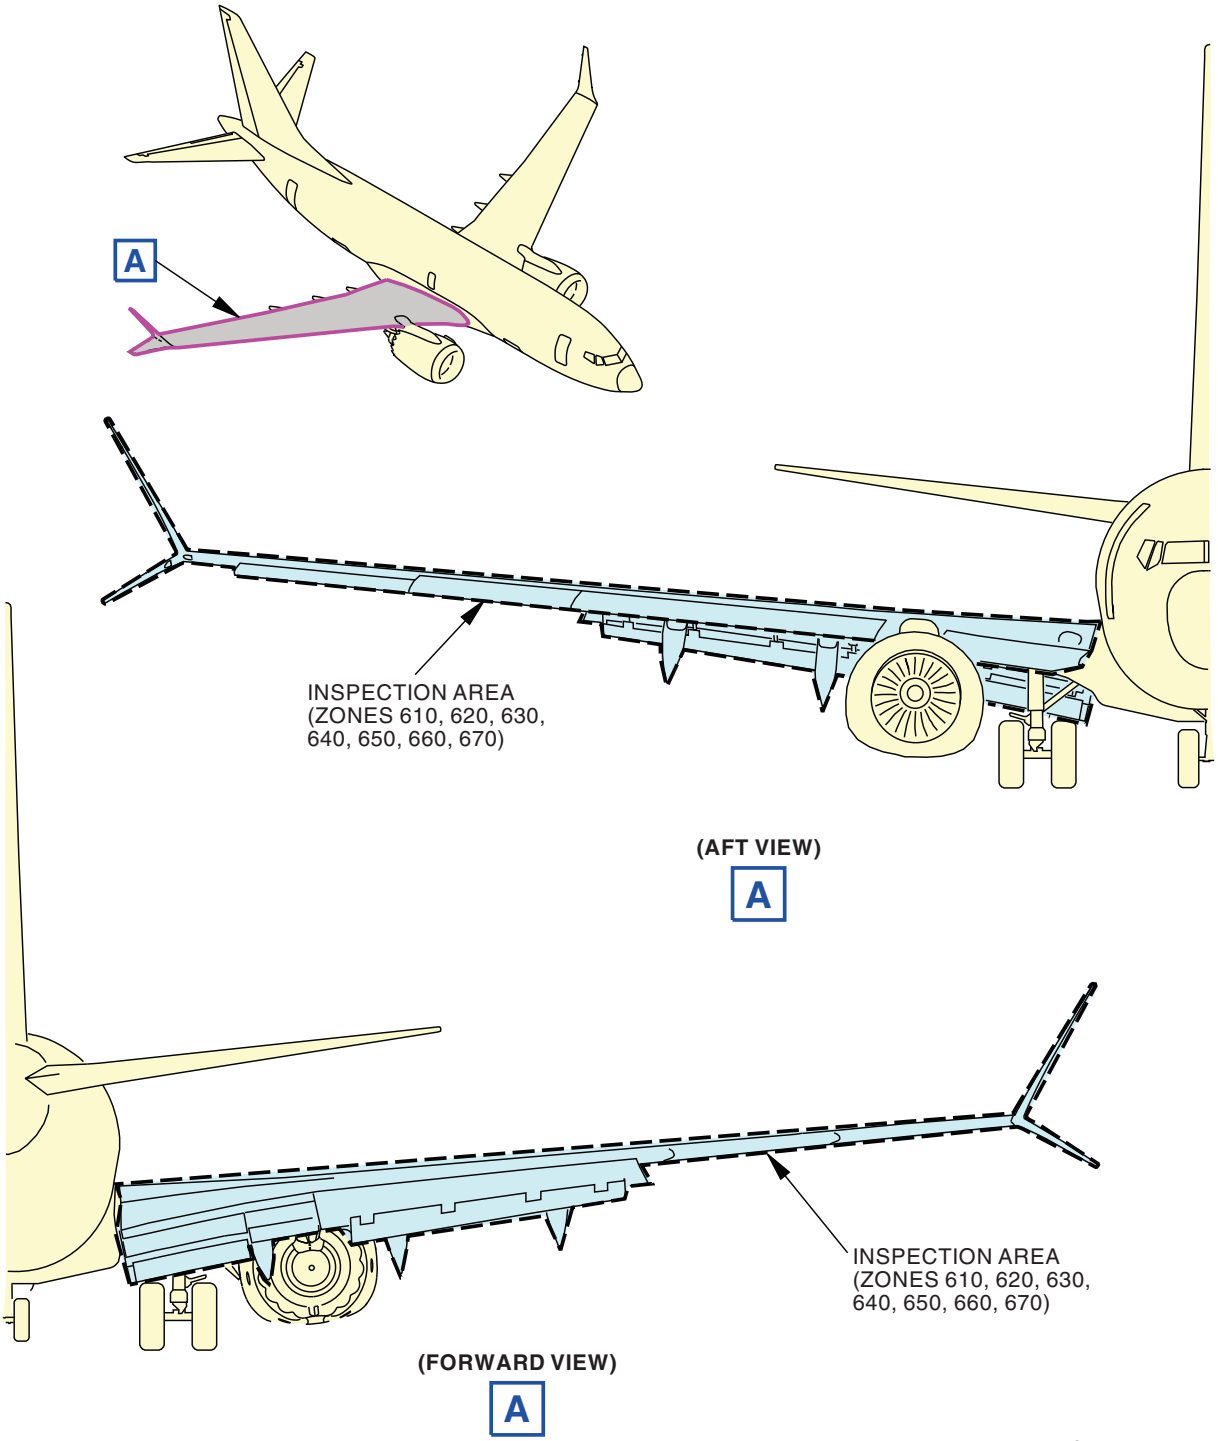

Right Wing - General Visual (External)
Figure 201/05-41-06-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

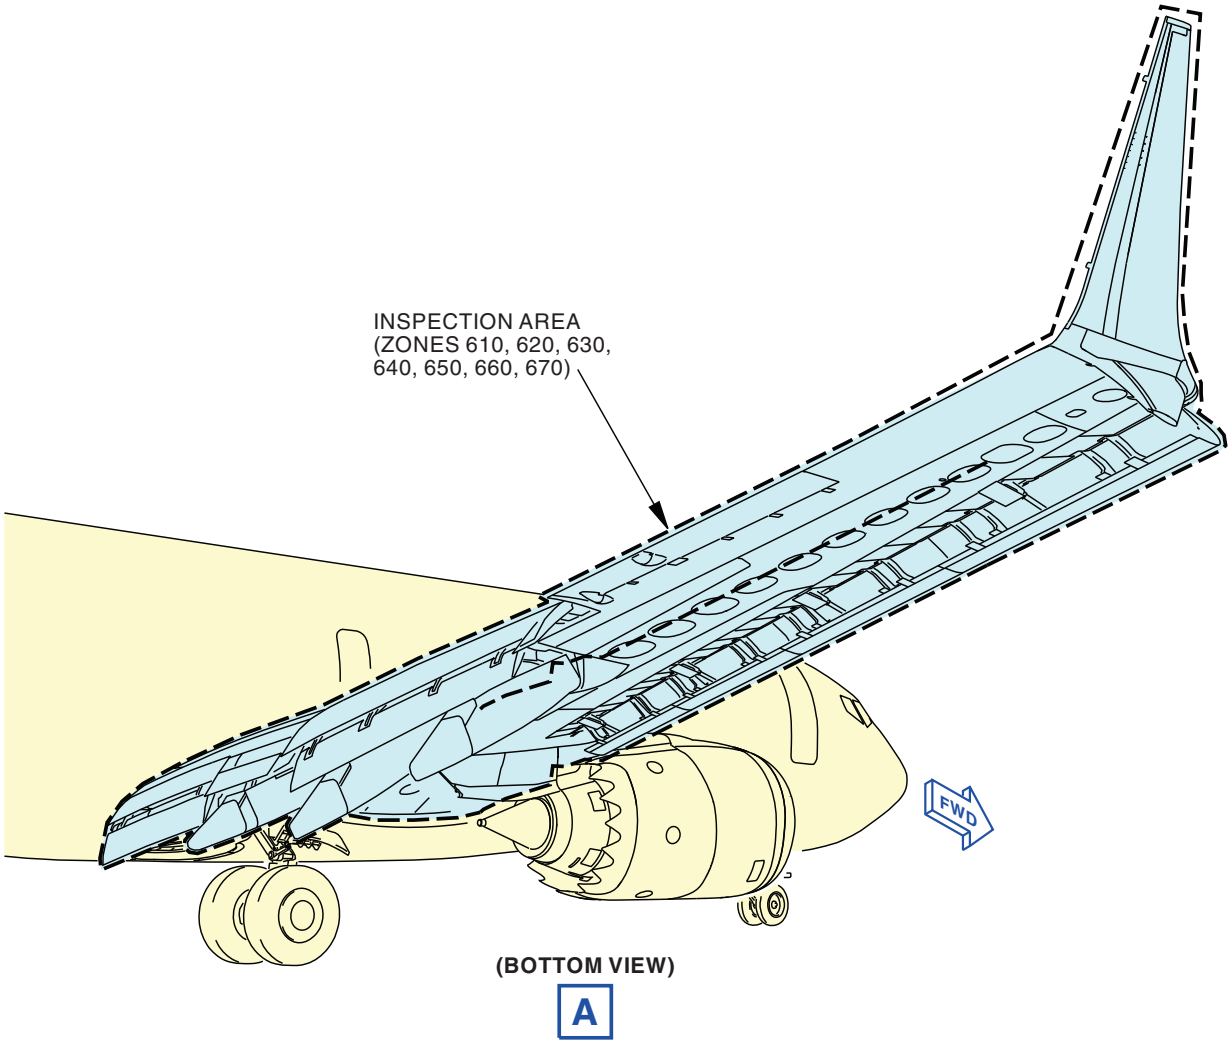

2410256 S00061525198_V1

Right Wing - General Visual (External)
Figure 201/05-41-06-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-802

2. EXTERNAL - ZONAL (GVI): Winglet - Right Wing.

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
627	Right Winglet


B. Zonal Inspection

SUBTASK 05-41-06-210-002

(1) Perform an external zonal inspection (GVI) of the Winglet - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

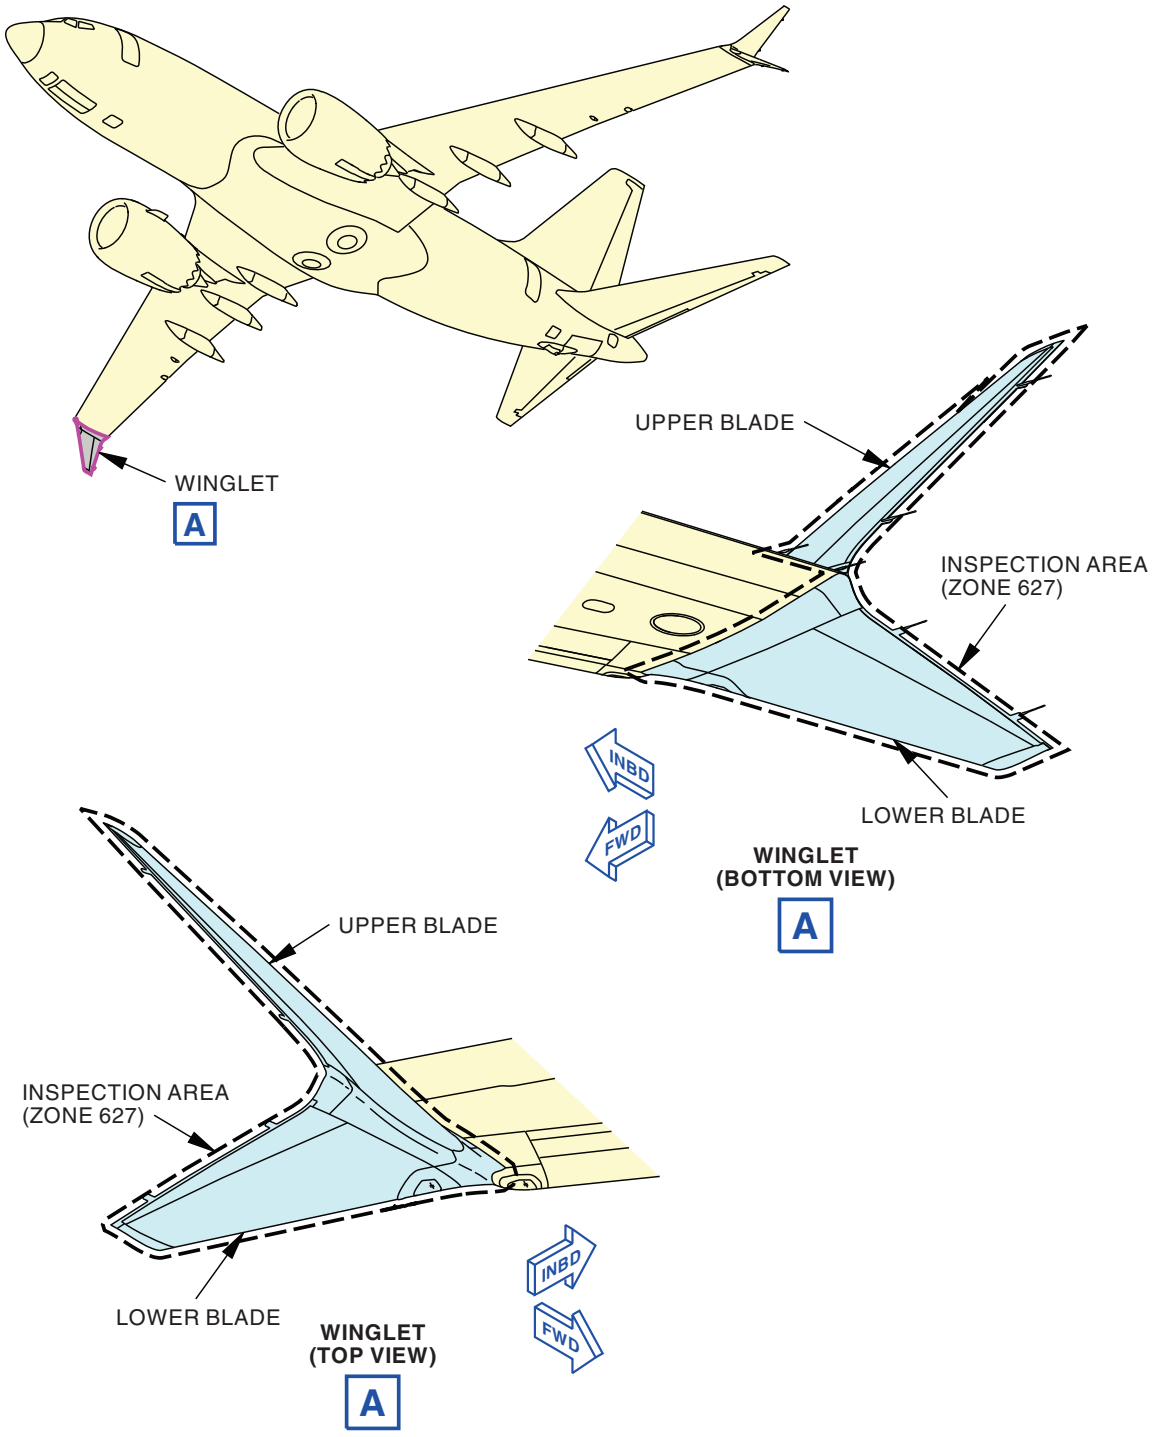

Right Winglet - General Visual (External)
Figure 202/05-41-06-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-803

3. INTERNAL - ZONAL (GVI): Winglet - Right Wing

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
57-31-25-000-801	Winglet Access Panels Removal (P/B 401)
57-31-25-400-801	Winglet Access Panel Installation (P/B 401)

B. Location Zones

Zone	Area
627	Right Winglet

C. Access Panels

Number	Name/Location
627BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
627BR	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
627BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET

D. Zonal Inspection

SUBTASK 05-41-06-010-001

(1) Remove these winglet access panels:

(TASK 57-31-25-000-801)

Number	Name/Location
627BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
627BR	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
627BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET

SUBTASK 05-41-06-210-003

(2) Perform an internal zonal inspection (GVI) of the Winglet - Right Wing.

SUBTASK 05-41-06-410-001


(3) Install these winglet access panels:

(TASK 57-31-25-400-801)

Number	Name/Location
627BB	ACCESS PANEL - CENTER INBOARD LOWER PANEL, WINGLET
627BR	ACCESS PANEL - CENTER OUTBOARD PANEL, WINGLET
627BT	ACCESS PANEL - CENTER INBOARD UPPER PANEL, WINGLET

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

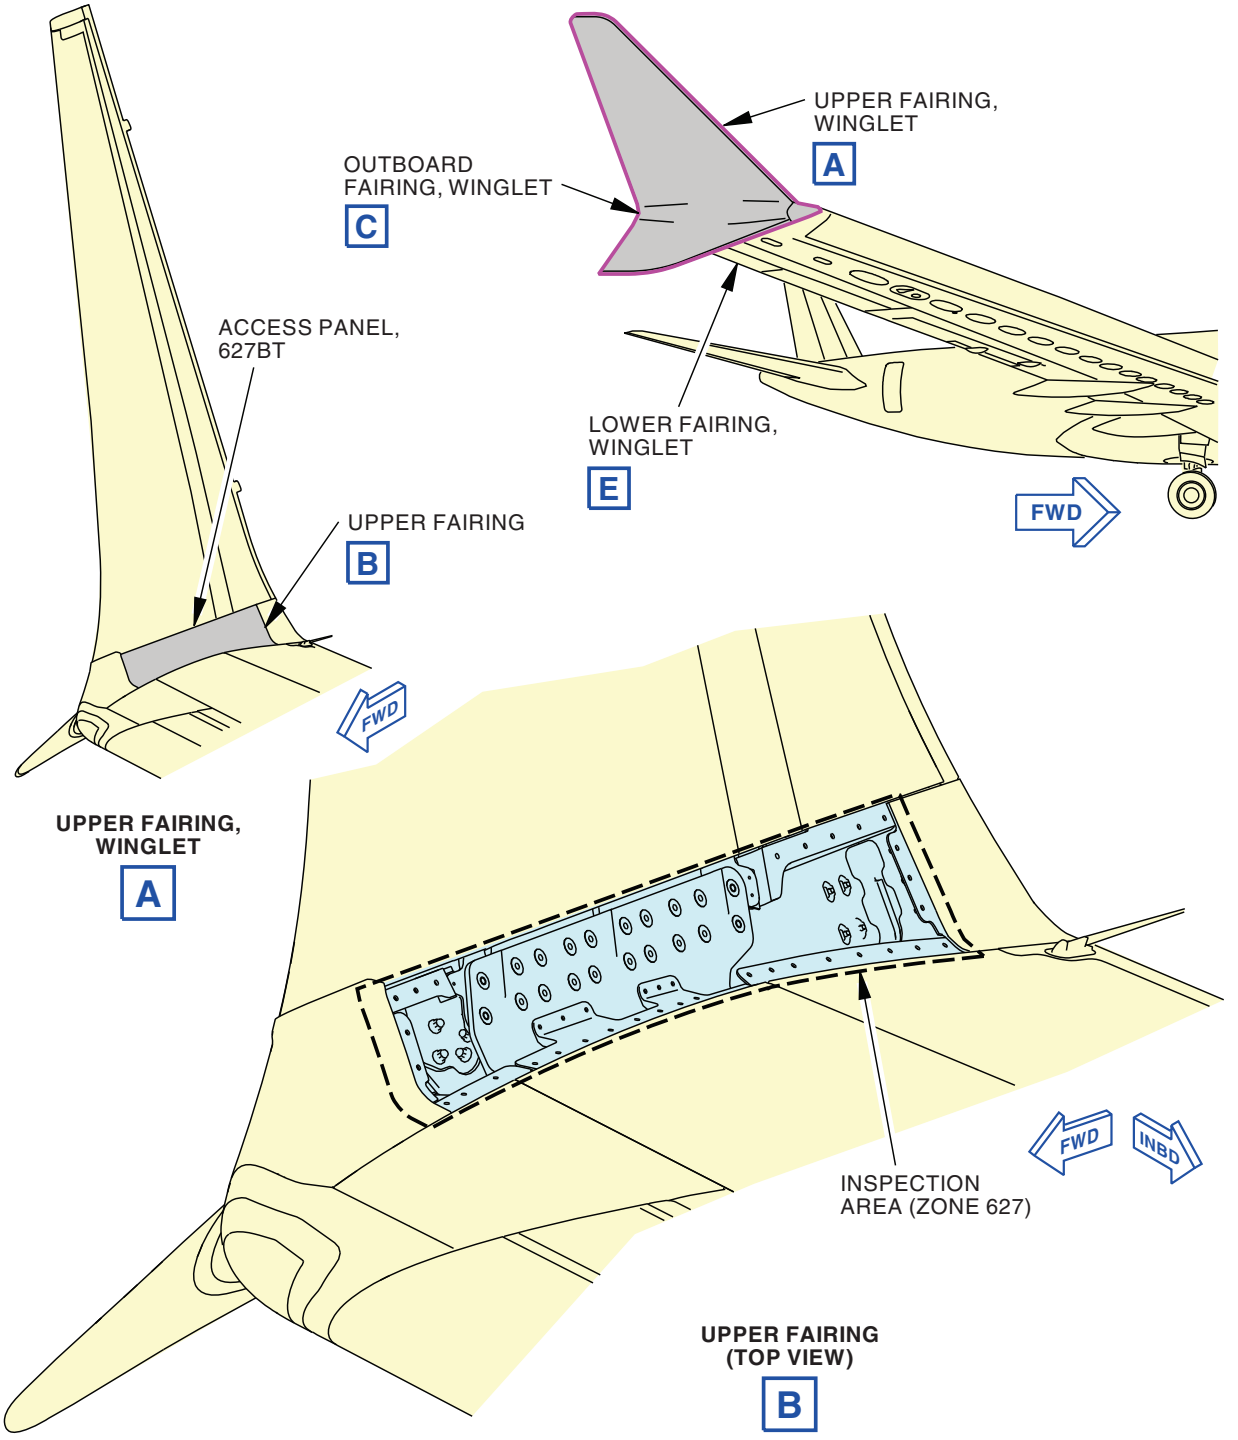

2410258 S00061525202_V2


Right Winglet - General Visual (Internal)
Figure 203/05-41-06-990-803 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

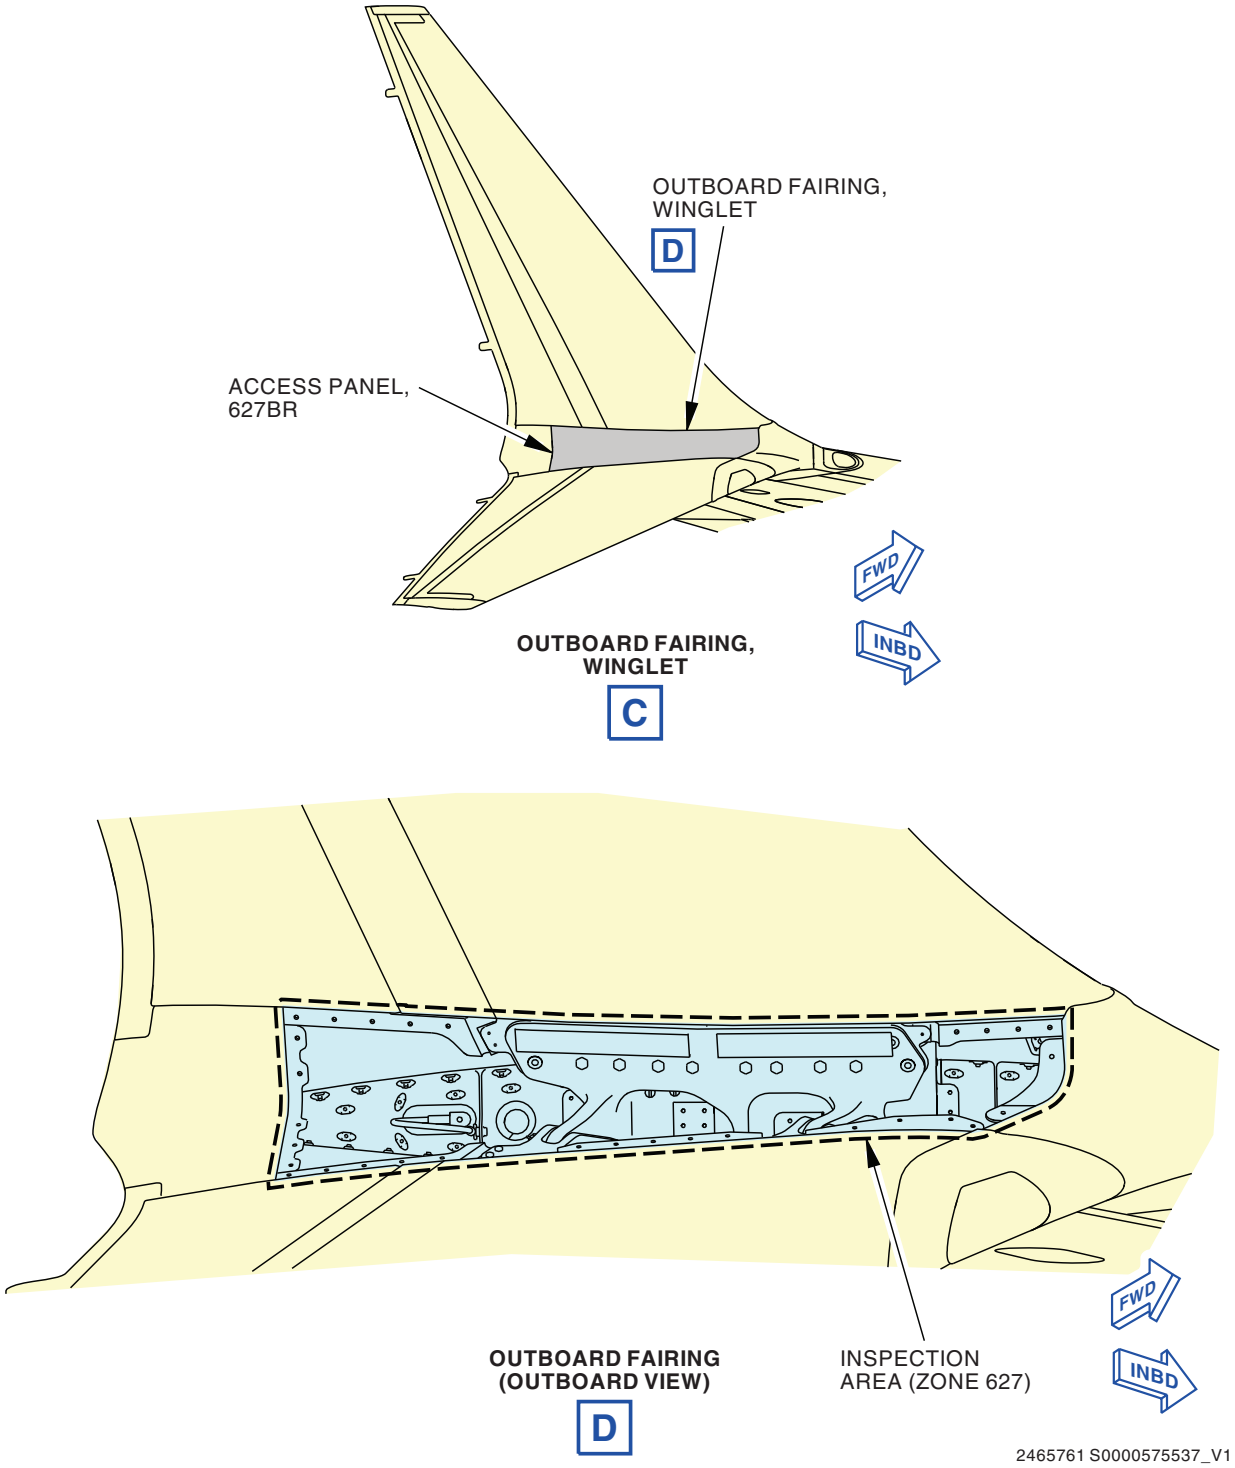

Right Winglet - General Visual (Internal)
Figure 203/05-41-06-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

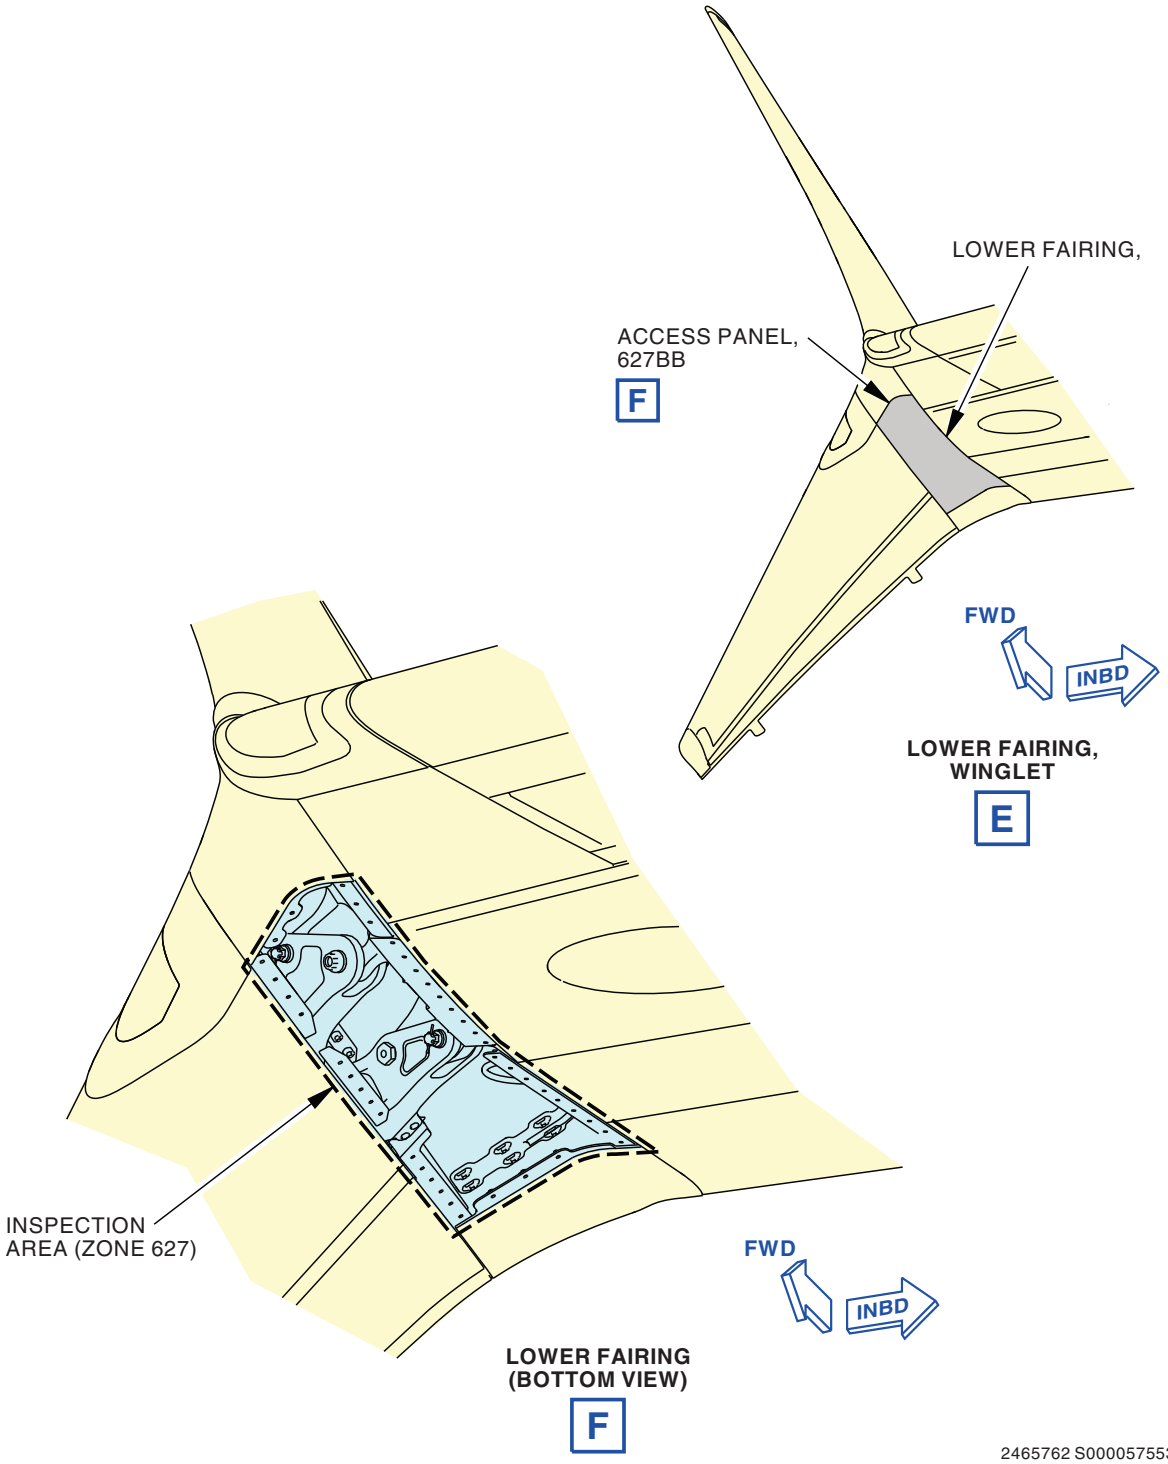

Right Winglet - General Visual (Internal)
Figure 203/05-41-06-990-803 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-804

4. EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
611	Right Wing - Leading Edge to Front Spar

B. Zonal Inspection


NOTE: Excluding surface under Wing-to-Body Fairing.

SUBTASK 05-41-06-210-004

(1) Perform an external zonal inspection (GVI) of the Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

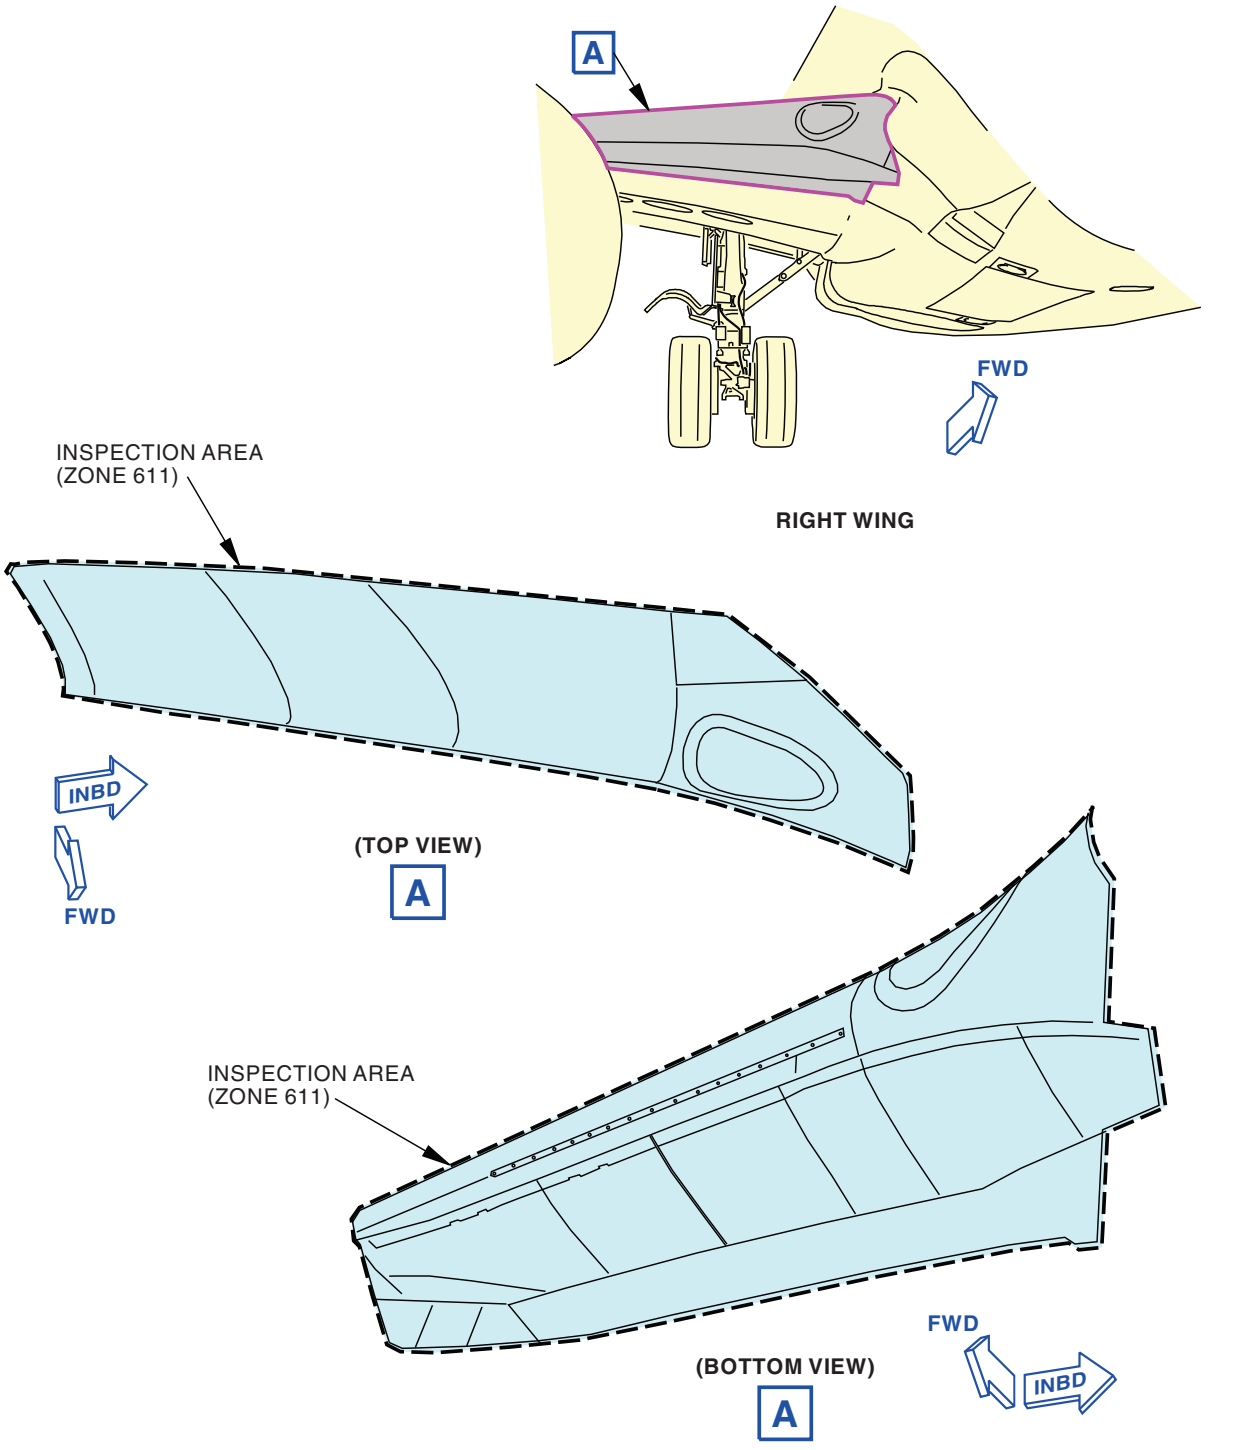

Leading Edge to Front Spar (Inboard of Nacelle Strut) Right Wing - General Visual (External)
Figure 204/05-41-06-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-805

5. INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Inboard of Nacelle Strut - Right

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
611	Right Wing - Leading Edge to Front Spar

D. Access Panels

Number	Name/Location
611AB	Inboard Leading Edge, Lower Removable Access Panel
611AT	Inboard Leading Edge, Strakelet Upper Access Panel
611BT	Fairing

E. Zonal Inspection

SUBTASK 05-41-06-010-002

(1) Open these access panels:

Number	Name/Location
611AB	Inboard Leading Edge, Lower Removable Access Panel
611AT	Inboard Leading Edge, Strakelet Upper Access Panel
611BT	Fairing

NOTE: Flaps deployed.

SUBTASK 05-41-06-210-005

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing. (EZAP)

SUBTASK 05-41-06-910-001

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-06-410-002

(5) Close these access panels:

Number	Name/Location
611AB	Inboard Leading Edge, Lower Removable Access Panel


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
611AT	Inboard Leading Edge, Strakelet Upper Access Panel
611BT	Fairing


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

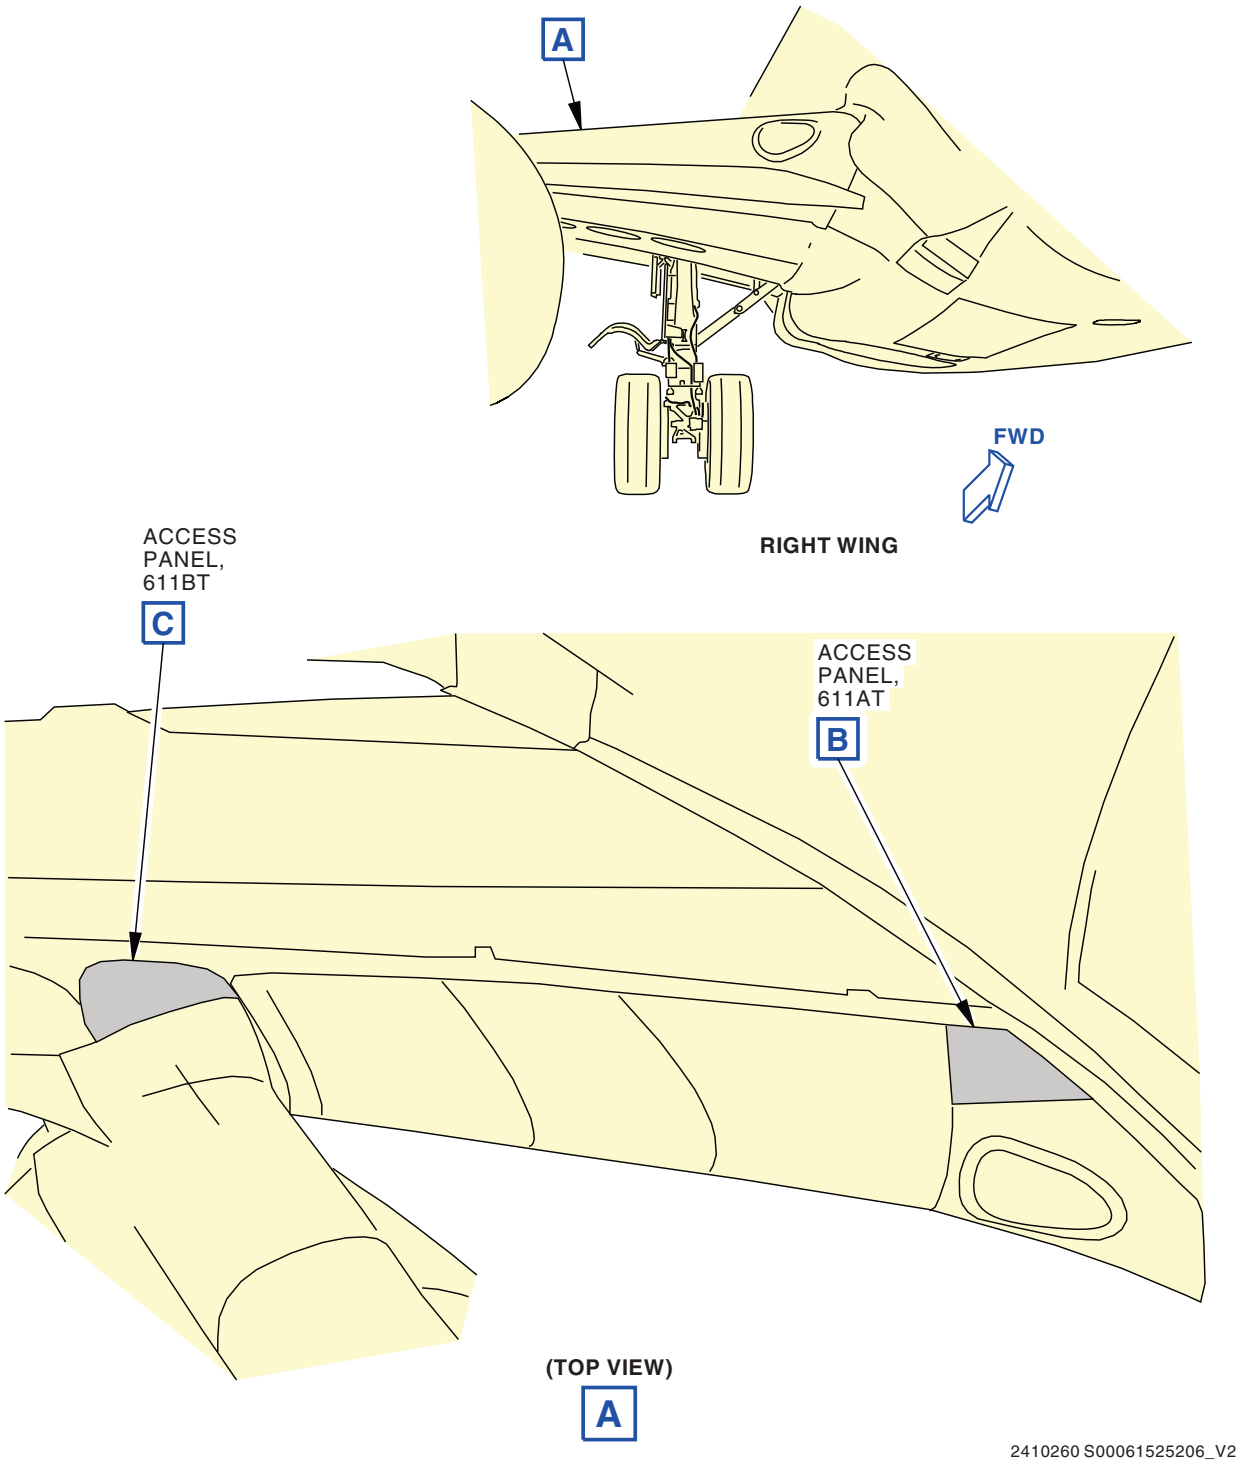


Leading Edge to Front Spar (Inboard of Nacelle Strut) Right Wing - General Visual (Internal)
Figure 205/05-41-06-990-805 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

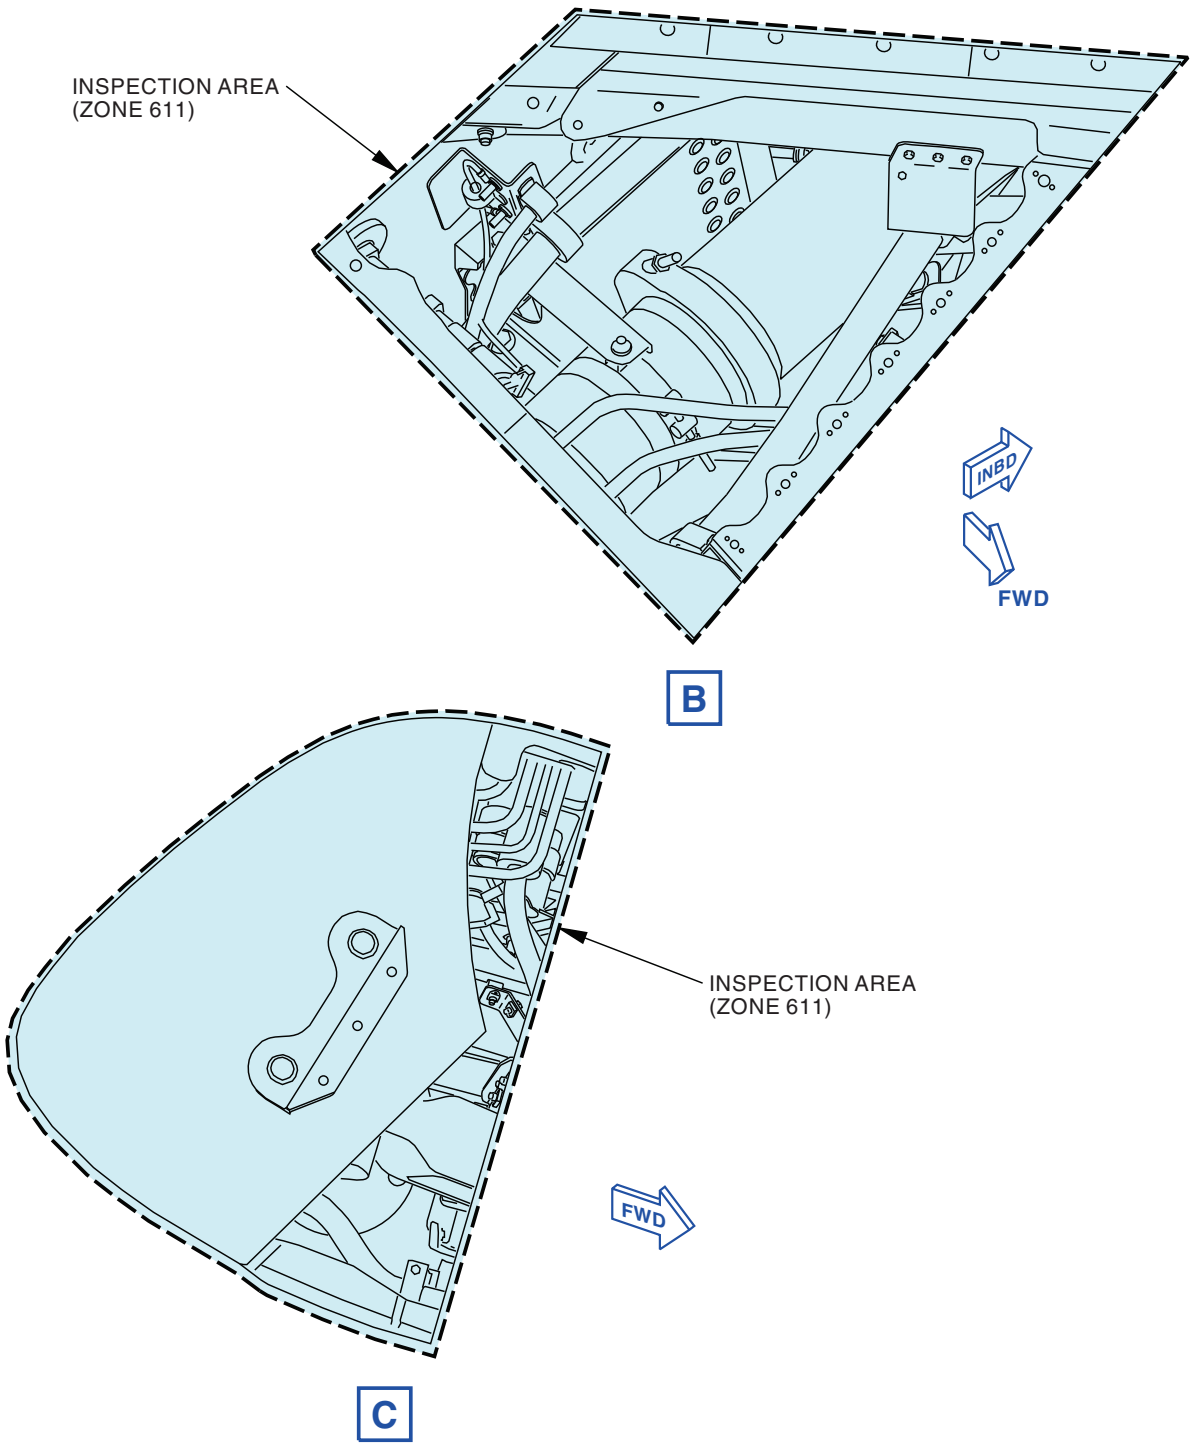

Leading Edge to Front Spar (Inboard of Nacelle Strut) Right Wing - General Visual (Internal)
Figure 205/05-41-06-990-805 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

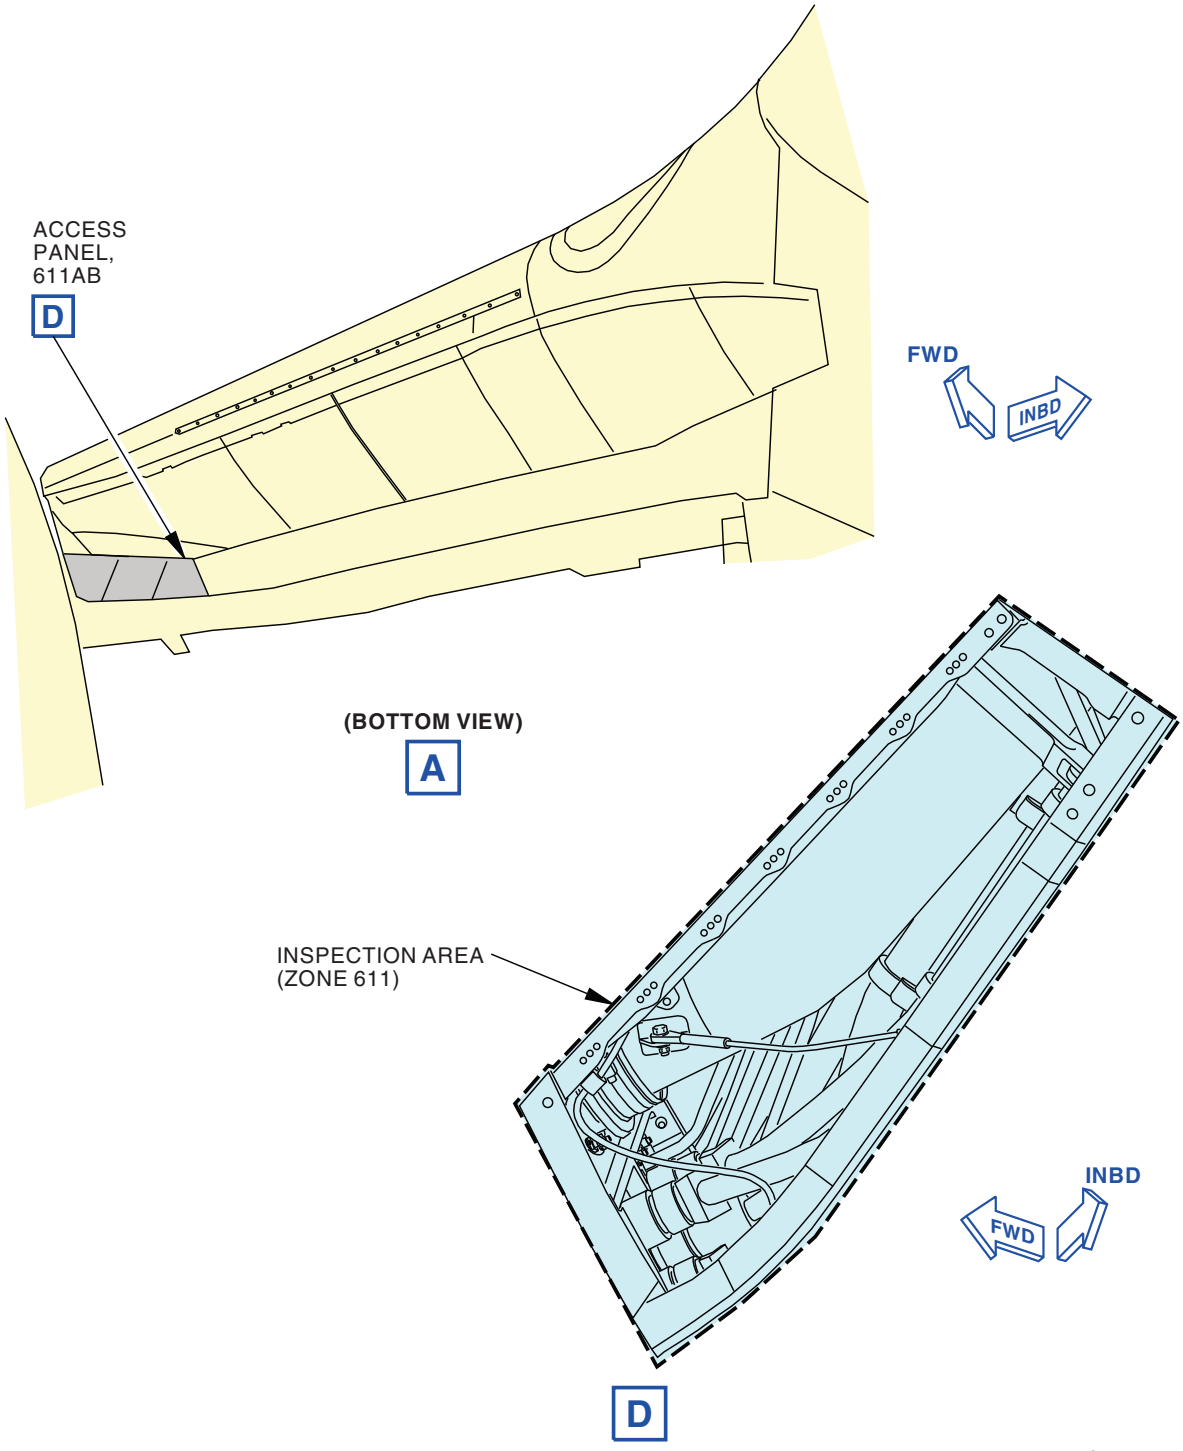

Leading Edge to Front Spar (Inboard of Nacelle Strut) Right Wing - General Visual (Internal)
Figure 205/05-41-06-990-805 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-806

6. EXTERNAL - ZONAL (GVI): Krueger Flaps No. 3 and 4 - Right Wing

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
612	Right Wing - Krueger Flap No. 3
613	Right Wing - Krueger Flap No. 4


B. Zonal Inspection

SUBTASK 05-41-06-210-006


(1) Perform an external zonal inspection (GVI) of the Krueger Flaps No. 3 and 4 - Right Wing.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

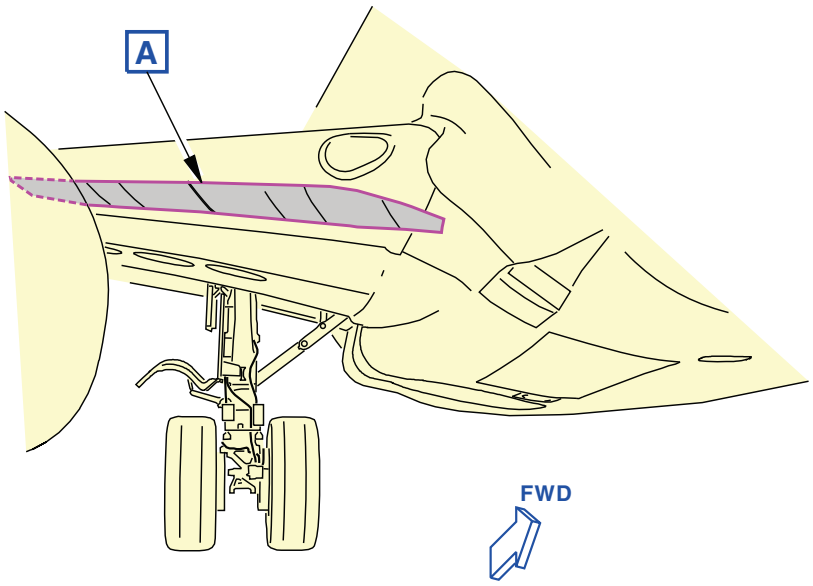

RIGHT WING

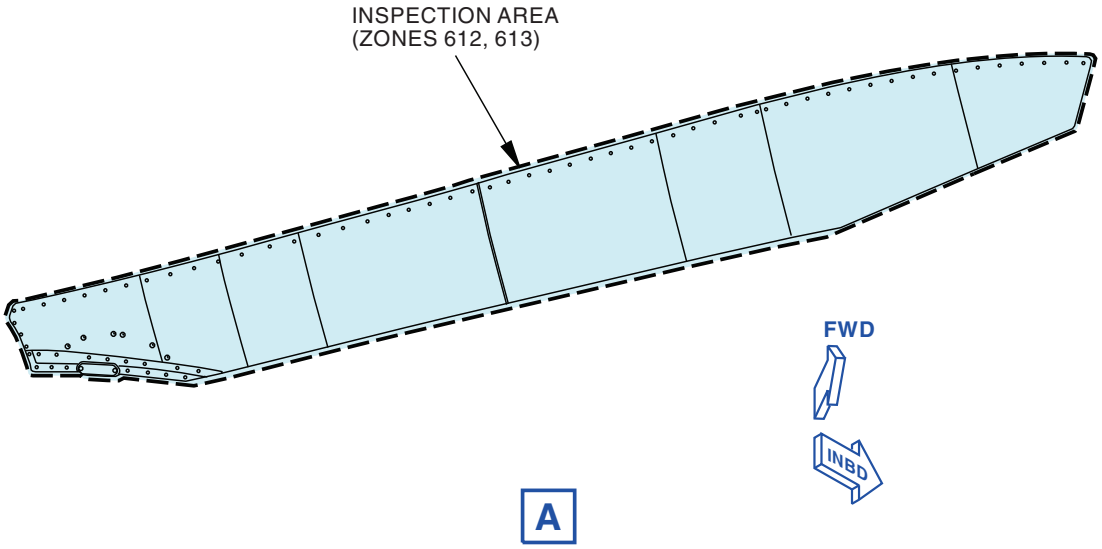

2410263 S00061525210_V2

Krueger Flaps No. 3 and 4 General Visual (External)
Figure 206/05-41-06-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-807

7. INTERNAL - ZONAL (GVI): Krueger Flaps No. 3 and 4 - Right Wing

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
612	Right Wing - Krueger Flap No. 3
613	Right Wing - Krueger Flap No. 4

B. Zonal Inspection


NOTE: Flaps deployed.

SUBTASK 05-41-06-210-007

(1) Perform an internal zonal inspection (GVI) of the Krueger Flaps No. 3 and 4 - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

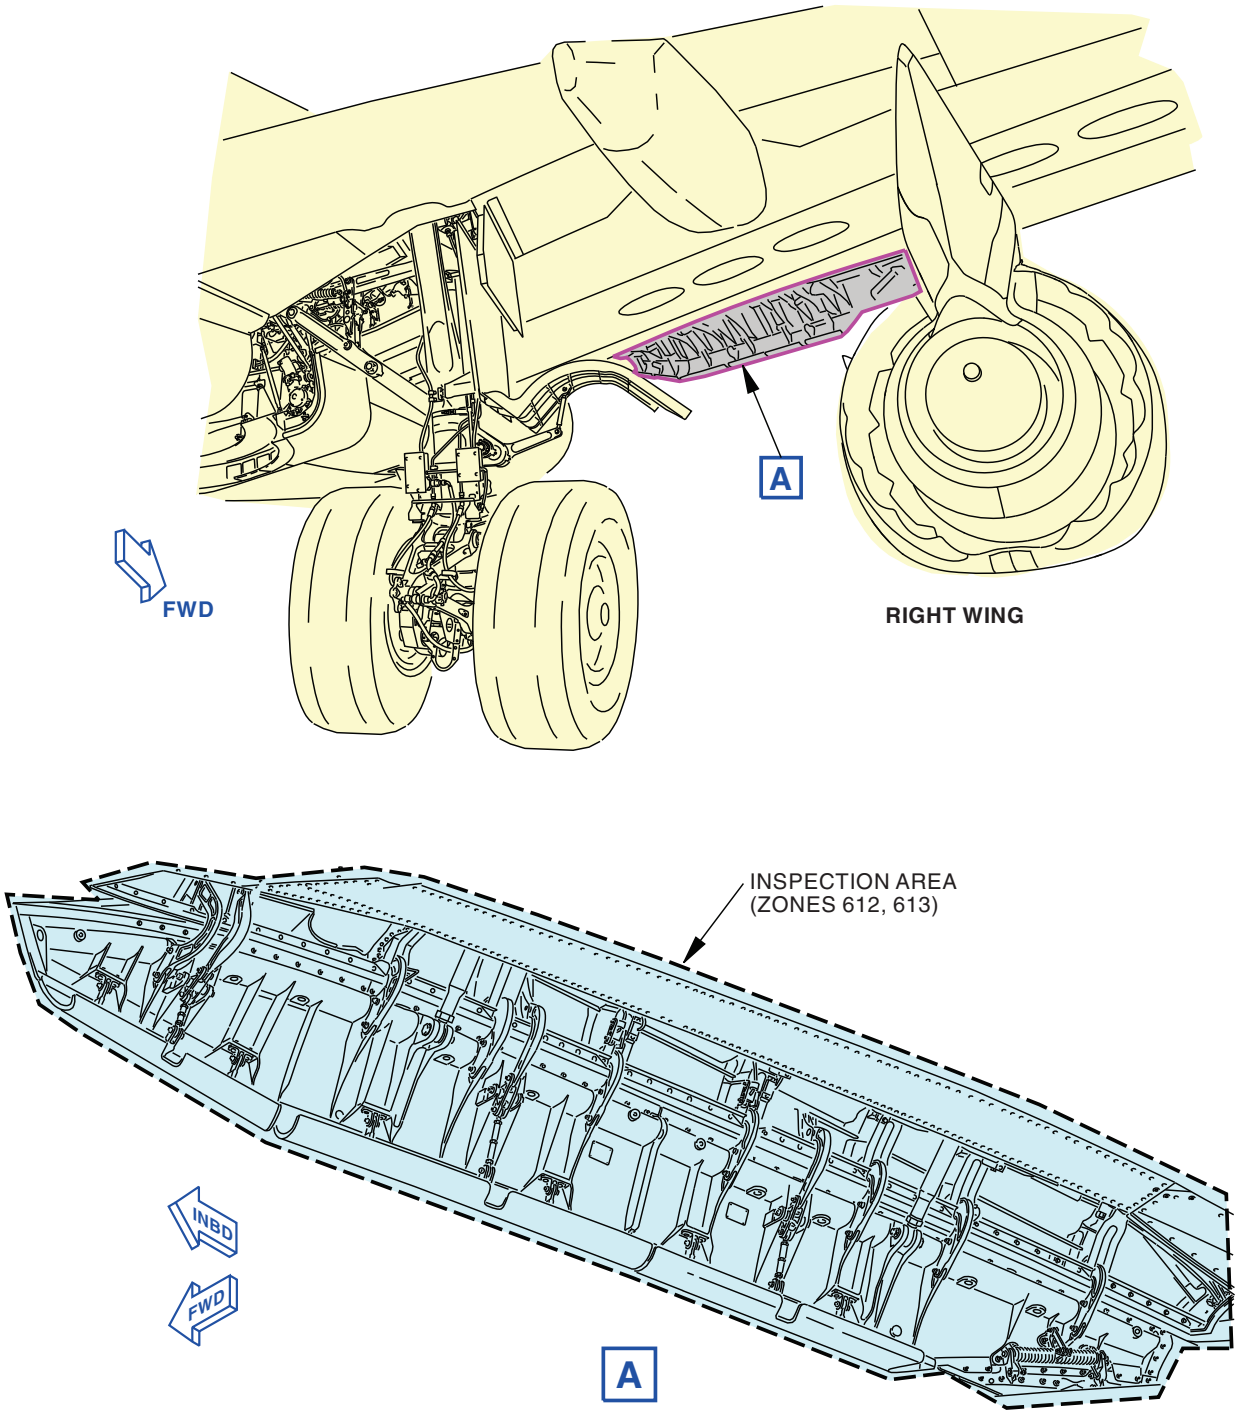

Krueger Flaps No. 3 and 4 General Visual (Internal)
Figure 207/05-41-06-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-808

8. EXTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
621	Right Wing - Leading Edge to Front Spar

B. Zonal Inspection


NOTE: Slats deployed.

SUBTASK 05-41-06-210-008

(1) Perform an external zonal inspection (GVI) of the Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

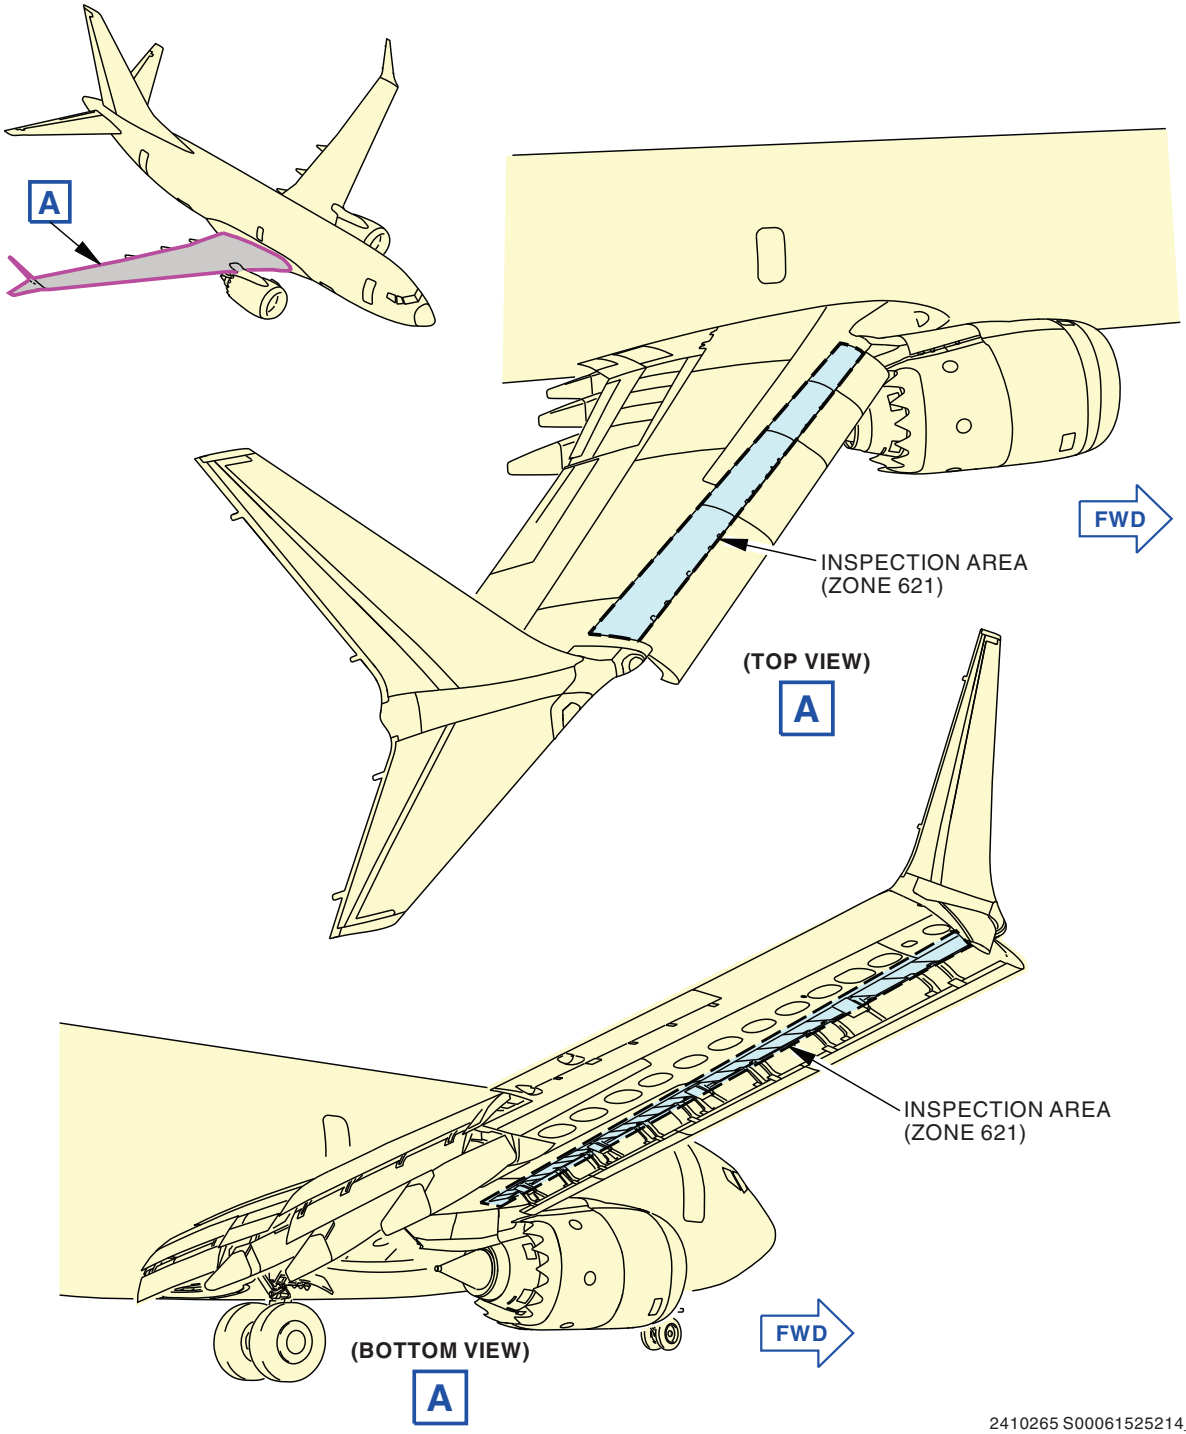

Leading Edge to Front Spar (Outboard of Nacelle Strut) Right Wing - General Visual (External)
Figure 208/05-41-06-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-809

9. INTERNAL - ZONAL (GVI): Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
621	Right Wing - Leading Edge to Front Spar

D. Access Panels

Number	Name/Location
621AAB	Lower Leading Edge Access Panel
621AB	Outboard Leading Edge Blowout Door
621ABB	Lower Leading Edge Access Panel
621BB	Outboard Lower Fixed Leading Edge Access Panel
621CB	Lower Leading Edge Access Panel
621DB	Lower Leading Edge Access Panel
621EB	Lower Leading Edge Access Panel
621FB	Lower Leading Edge Access Panel
621GB	Refuel Valve Door
621JB	Lower Leading Edge Access Panel
621KB	Lower Leading Edge Access Panel
621LB	Lower Leading Edge Access Panel
621MB	Lower Leading Edge Access Panel
621NB	Lower Leading Edge Access Panel
621PB	Lower Leading Edge Access Panel
621QB	Lower Leading Edge Access Panel
621RB	Lower Leading Edge Access Panel
621SB	Lower Leading Edge Access Panel
621TB	Lower Leading Edge Access Panel
621UB	Lower Leading Edge Access Panel
621VB	Lower Leading Edge Access Panel
621WB	Lower Leading Edge Access Panel
621XB	Lower Leading Edge Access Panel
621YB	Lower Leading Edge Access Panel
621ZB	Lower Leading Edge Access Panel

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Zonal Inspection

SUBTASK 05-41-06-010-003

(1) Open these access panels:

Number	Name/Location
621AAB	Lower Leading Edge Access Panel
621AB	Outboard Leading Edge Blowout Door
621ABB	Lower Leading Edge Access Panel
621BB	Outboard Lower Fixed Leading Edge Access Panel
621CB	Lower Leading Edge Access Panel
621DB	Lower Leading Edge Access Panel
621EB	Lower Leading Edge Access Panel
621FB	Lower Leading Edge Access Panel
621GB	Refuel Valve Door
621JB	Lower Leading Edge Access Panel
621KB	Lower Leading Edge Access Panel
621LB	Lower Leading Edge Access Panel
621MB	Lower Leading Edge Access Panel
621NB	Lower Leading Edge Access Panel
621PB	Lower Leading Edge Access Panel
621QB	Lower Leading Edge Access Panel
621RB	Lower Leading Edge Access Panel
621SB	Lower Leading Edge Access Panel
621TB	Lower Leading Edge Access Panel
621UB	Lower Leading Edge Access Panel
621VB	Lower Leading Edge Access Panel
621WB	Lower Leading Edge Access Panel
621XB	Lower Leading Edge Access Panel
621YB	Lower Leading Edge Access Panel
621ZB	Lower Leading Edge Access Panel

NOTE: Slats deployed.

SUBTASK 05-41-06-210-009

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-06-210-038

(3) Perform an internal zonal inspection (GVI) of the Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing. (EZAP)

SUBTASK 05-41-06-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

SUBTASK 05-41-06-410-003

(5) Close these access panels:

Number	Name/Location
621AAB	Lower Leading Edge Access Panel
621AB	Outboard Leading Edge Blowout Door
621ABB	Lower Leading Edge Access Panel


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
621BB	Outboard Lower Fixed Leading Edge Access Panel
621CB	Lower Leading Edge Access Panel
621DB	Lower Leading Edge Access Panel
621EB	Lower Leading Edge Access Panel
621FB	Lower Leading Edge Access Panel
621GB	Refuel Valve Door
621JB	Lower Leading Edge Access Panel
621KB	Lower Leading Edge Access Panel
621LB	Lower Leading Edge Access Panel
621MB	Lower Leading Edge Access Panel
621NB	Lower Leading Edge Access Panel
621PB	Lower Leading Edge Access Panel
621QB	Lower Leading Edge Access Panel
621RB	Lower Leading Edge Access Panel
621SB	Lower Leading Edge Access Panel
621TB	Lower Leading Edge Access Panel
621UB	Lower Leading Edge Access Panel
621VB	Lower Leading Edge Access Panel
621WB	Lower Leading Edge Access Panel
621XB	Lower Leading Edge Access Panel
621YB	Lower Leading Edge Access Panel
621ZB	Lower Leading Edge Access Panel


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

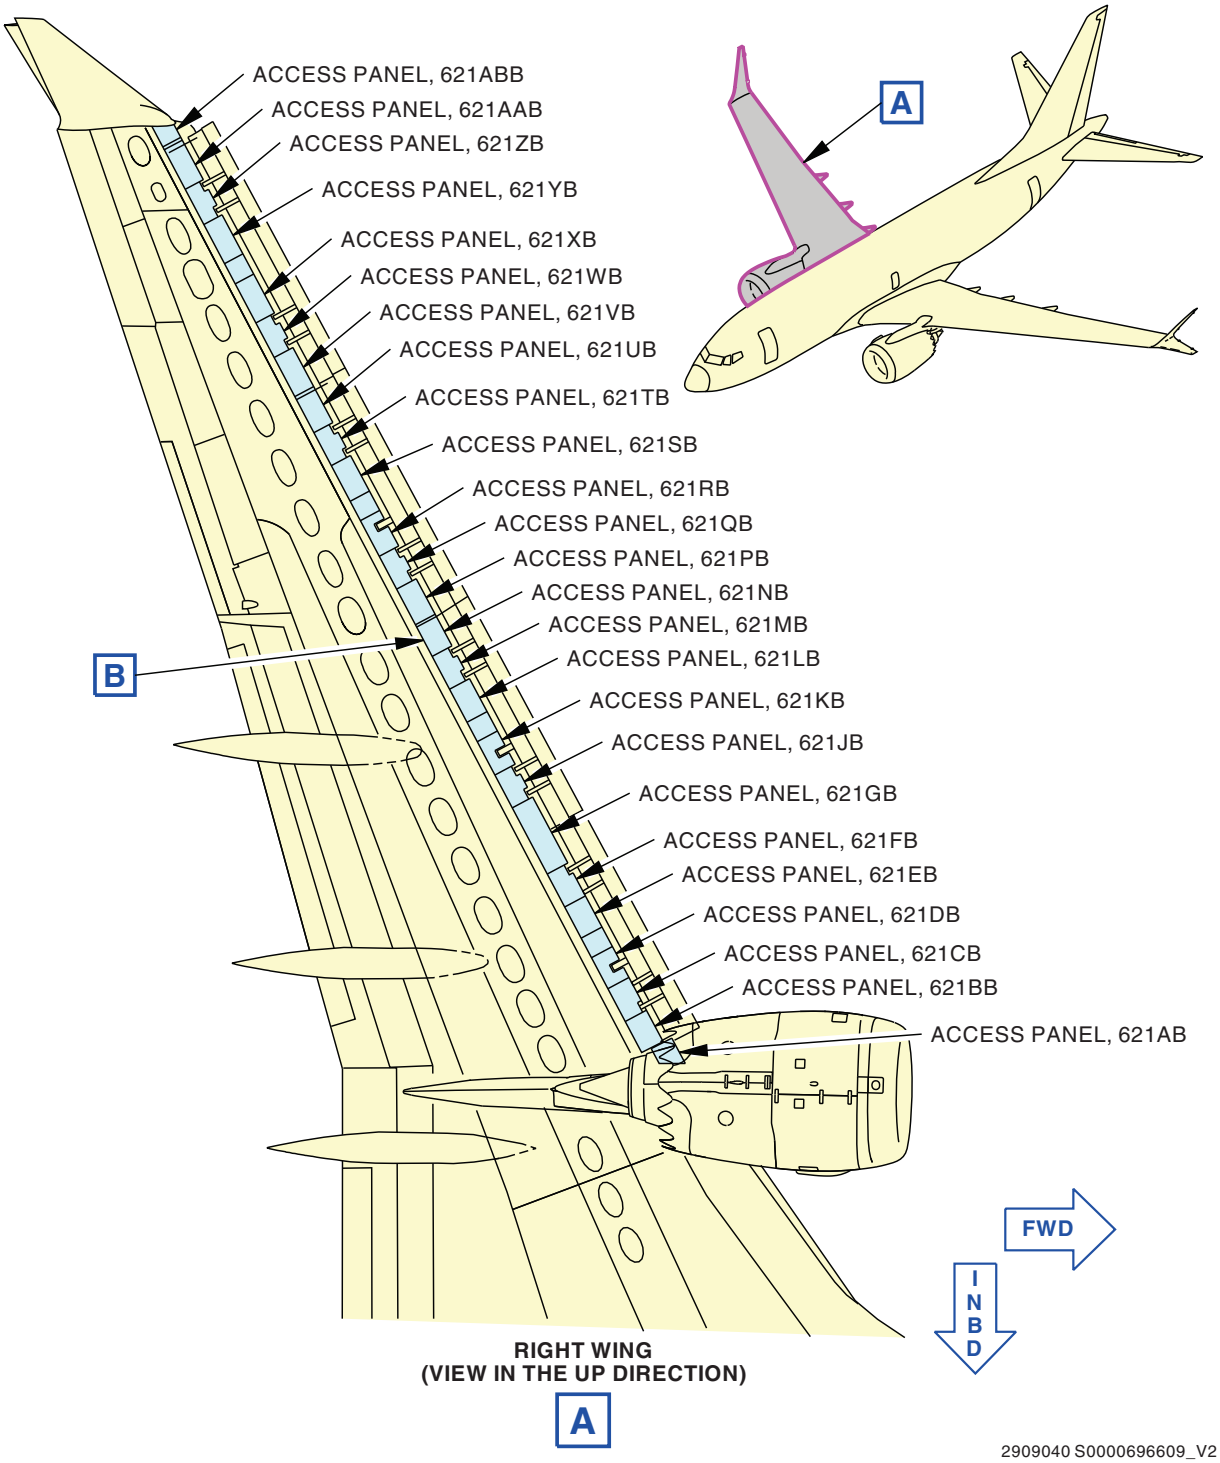

Leading Edge to Front Spar (Outboard of Nacelle Strut) Right Wing - General Visual (Internal)
Figure 209/05-41-06-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

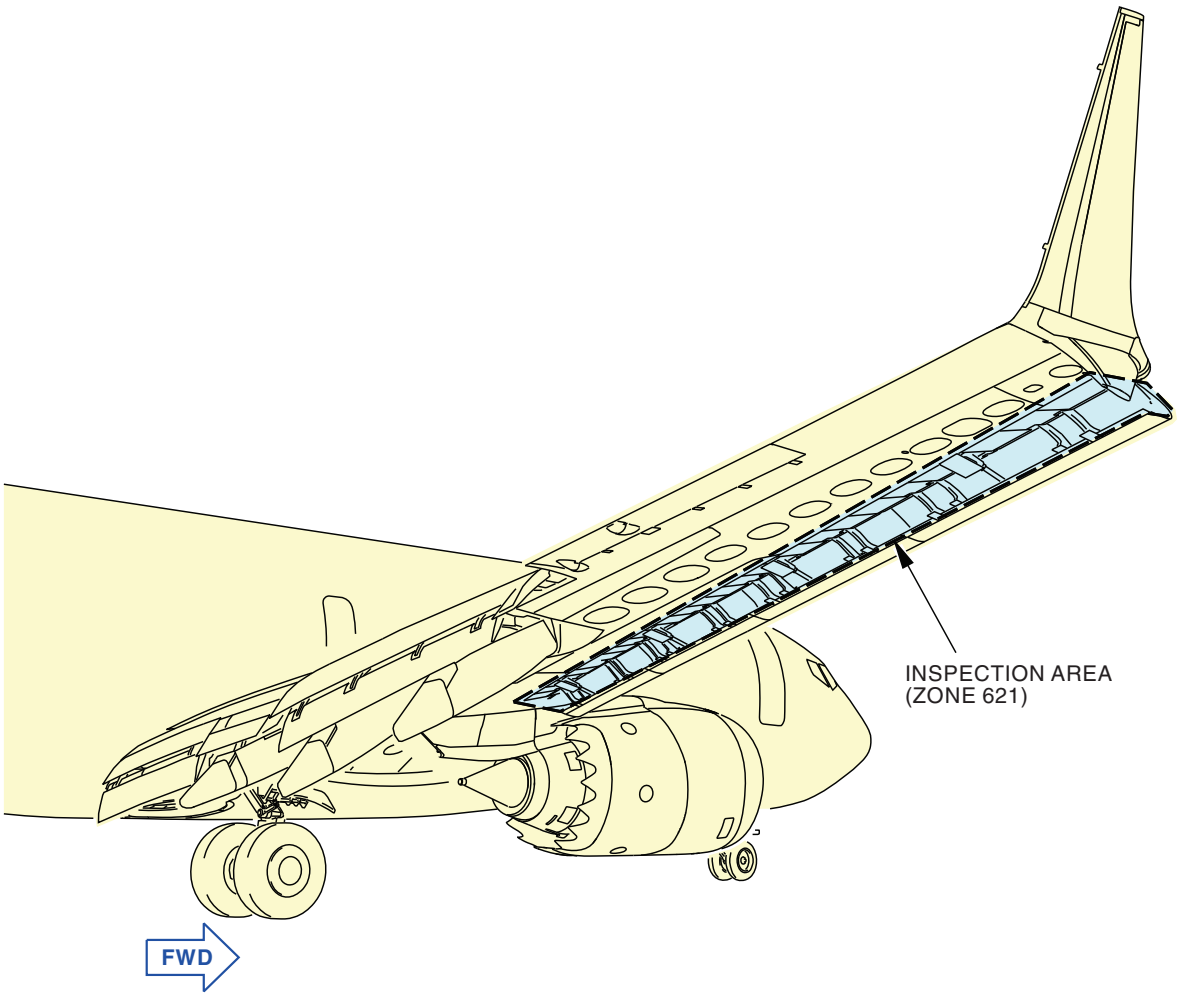

2410267 S00061525217_V1

Leading Edge to Front Spar (Outboard of Nacelle Strut) Right Wing - General Visual (Internal)
Figure 209/05-41-06-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-810

10. EXTERNAL - ZONAL (GVI): Slats No. 5, 6, 7, 8 - Right Wing

(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
622	Right Wing - Slat No. 5
623	Right Wing - Slat No. 6
624	Right Wing - Slat No. 7
625	Right Wing - Slat No. 8

B. Zonal Inspection


NOTE: Slats in fully extended position.

SUBTASK 05-41-06-210-010

(1) Perform an external zonal inspection (GVI) of the Slats No. 5, 6, 7, 8 - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

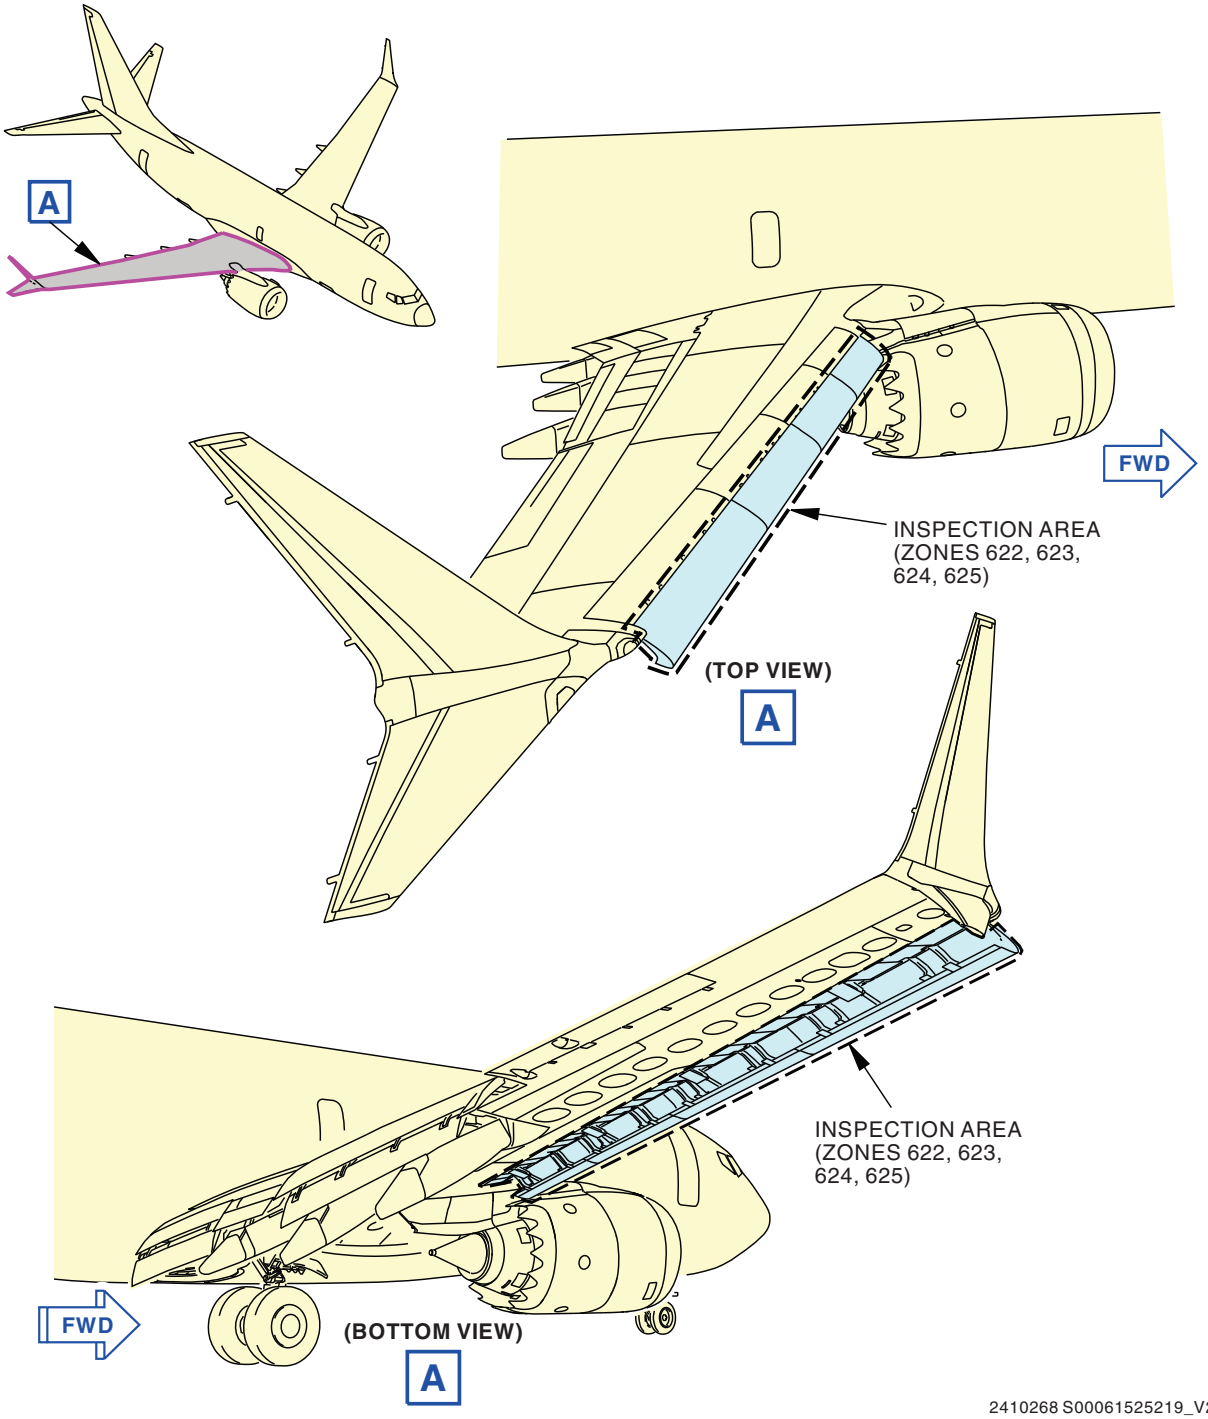

Leading Edge Slats No. 5 through 8 General Visual (External)
Figure 210/05-41-06-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-811

11. INTERNAL - ZONAL (GVI): Center Fuel Tank - Right Wing

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
631	Right Wing - Center Fuel Tank, Rib 1 to Rib 5

D. Access Panels

Number	Name/Location
631AB	Center Tank Access Door - Wing Station 168
631BB	Center Tank Access Door - Wing Station 192

E. Zonal Inspection

SUBTASK 05-41-06-010-004

(1) Open these access panels:

Number	Name/Location
631AB	Center Tank Access Door - Wing Station 168
631BB	Center Tank Access Door - Wing Station 192

SUBTASK 05-41-06-210-011

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Center Fuel Tank - Right Wing. (EZAP)

SUBTASK 05-41-06-910-010

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-06-410-004

(5) Close these access panels:

Number	Name/Location
631AB	Center Tank Access Door - Wing Station 168
631BB	Center Tank Access Door - Wing Station 192

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

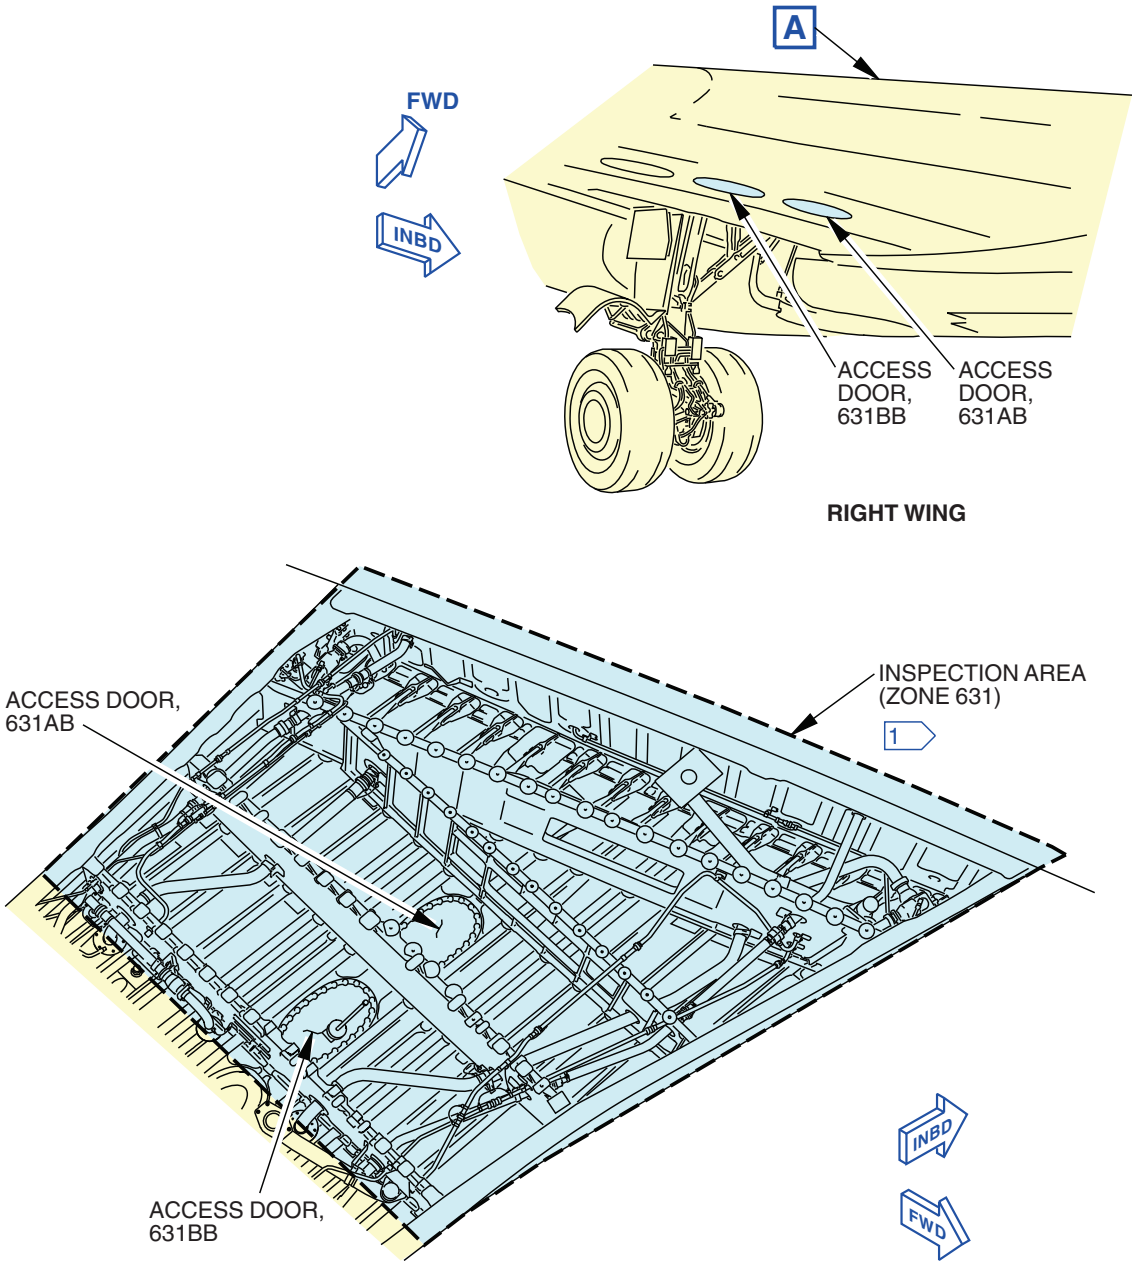

Center Fuel Tank - Right Wing General Visual (Internal)
Figure 211/05-41-06-990-811

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-812

12. EXTERNAL - ZONAL (GVI): Center Fuel Tank - Right Wing

(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
631	Right Wing - Center Fuel Tank, Rib 1 to Rib 5

B. Zonal Inspection


NOTE: Excluding surface under Wing-to-Body Fairing.

SUBTASK 05-41-06-210-012

(1) Perform an external zonal inspection (GVI) of the Center Fuel Tank - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

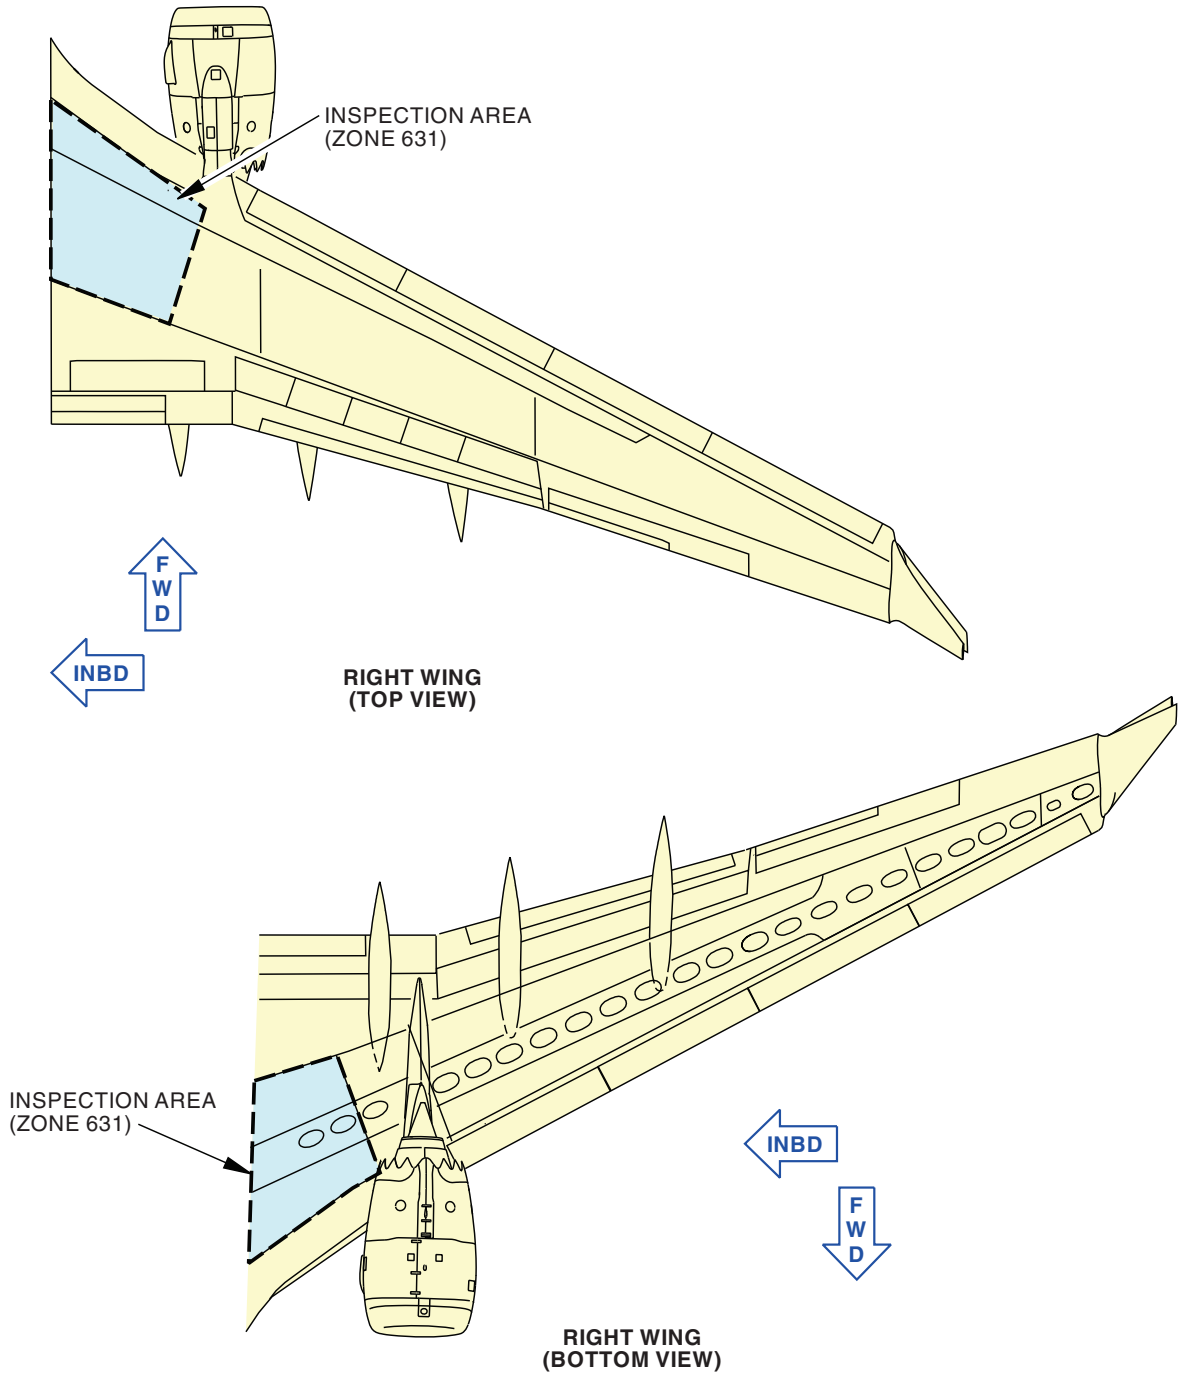

2410270 S00061525223_V1

Center Fuel Tank - Right Wing General Visual (External)
Figure 212/05-41-06-990-812

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-813

13. INTERNAL - ZONAL (GVI): Main Fuel Tank - Right Wing

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
632	Right Wing - Main Tank, Rib 5 to Rib 22, Wing Station 204.25 to Wing Station 643.50

B. Access Panels

Number	Name/Location
632AB	Main Tank Access Door - Wing Station 216
632AZ	Main Tank Inner Access at Rib 6
632BB	Main Tank Access Door - Wing Station 265
632BZ	Main Tank Inner Access at Rib 6
632CB	Main Tank Access Door - Wing Station 290
632DB	Main Tank Access Door - Wing Station 313
632EB	Main Tank Access Door - Wing Station 337
632FB	Main Tank Access Door - Wing Station 367
632GB	Main Tank Access Door - Wing Station 390
632HB	Main Tank Access Door - Wing Station 417
632JB	Main Tank Access Door - Wing Station 443
632KB	Main Tank Access Door - Wing Station 470
632LB	Main Tank Access Door - Wing Station 496
632MB	Main Tank Access Door - Wing Station 523
632NB	Main Tank Access Door - Wing Station 549
632PB	Main Tank Access Door - Wing Station 576
632QB	Main Tank Access Door - Wing Station 602
632RB	Main Tank Access Door - Wing Station 629

C. Zonal Inspection

CAUTION

DO NOT REMOVE 632AZ AND 632BZ AT THE SAME TIME.

SUBTASK 05-41-06-010-005

(1) Open these access panels:

Number	Name/Location
632AB	Main Tank Access Door - Wing Station 216
632AZ	Main Tank Inner Access at Rib 6
632BB	Main Tank Access Door - Wing Station 265
632BZ	Main Tank Inner Access at Rib 6
632CB	Main Tank Access Door - Wing Station 290
632DB	Main Tank Access Door - Wing Station 313
632EB	Main Tank Access Door - Wing Station 337
632FB	Main Tank Access Door - Wing Station 367

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
632GB	Main Tank Access Door - Wing Station 390
632HB	Main Tank Access Door - Wing Station 417
632JB	Main Tank Access Door - Wing Station 443
632KB	Main Tank Access Door - Wing Station 470
632LB	Main Tank Access Door - Wing Station 496
632MB	Main Tank Access Door - Wing Station 523
632NB	Main Tank Access Door - Wing Station 549
632PB	Main Tank Access Door - Wing Station 576
632QB	Main Tank Access Door - Wing Station 602
632RB	Main Tank Access Door - Wing Station 629

SUBTASK 05-41-06-210-013

(2) Perform an internal zonal inspection (GVI) of the Main Fuel Tank - Right Wing. (EZAP)


SUBTASK 05-41-06-410-005

(3) Close these access panels:

Number	Name/Location
632AB	Main Tank Access Door - Wing Station 216
632AZ	Main Tank Inner Access at Rib 6
632BB	Main Tank Access Door - Wing Station 265
632BZ	Main Tank Inner Access at Rib 6
632CB	Main Tank Access Door - Wing Station 290
632DB	Main Tank Access Door - Wing Station 313
632EB	Main Tank Access Door - Wing Station 337
632FB	Main Tank Access Door - Wing Station 367
632GB	Main Tank Access Door - Wing Station 390
632HB	Main Tank Access Door - Wing Station 417
632JB	Main Tank Access Door - Wing Station 443
632KB	Main Tank Access Door - Wing Station 470
632LB	Main Tank Access Door - Wing Station 496
632MB	Main Tank Access Door - Wing Station 523
632NB	Main Tank Access Door - Wing Station 549
632PB	Main Tank Access Door - Wing Station 576
632QB	Main Tank Access Door - Wing Station 602
632RB	Main Tank Access Door - Wing Station 629

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

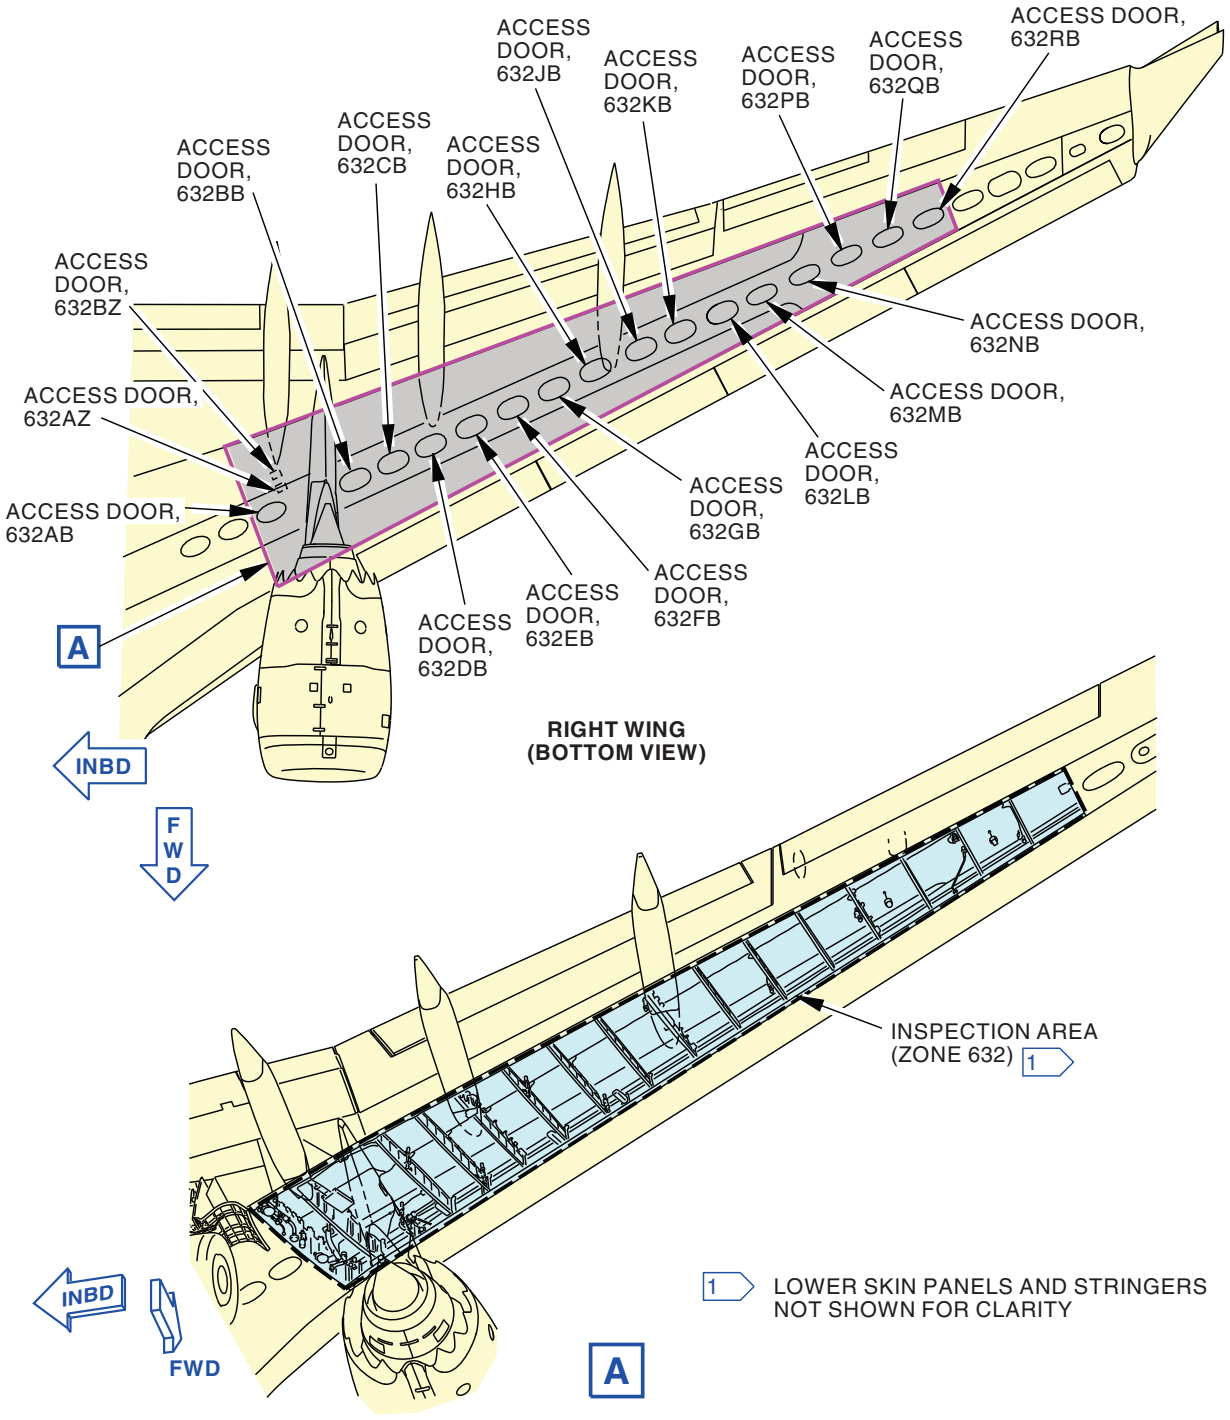

Main Fuel Tank - Right Wing General Visual (Internal)
Figure 213/05-41-06-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-814

14. EXTERNAL - ZONAL (GVI): Main Fuel Tank - Right Wing

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
632	Right Wing - Main Tank, Rib 5 to Rib 22, Wing Station 204.25 to Wing Station 643.50


B. Zonal Inspection

SUBTASK 05-41-06-210-014

(1) Perform an external zonal inspection (GVI) of the Main Fuel Tank - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

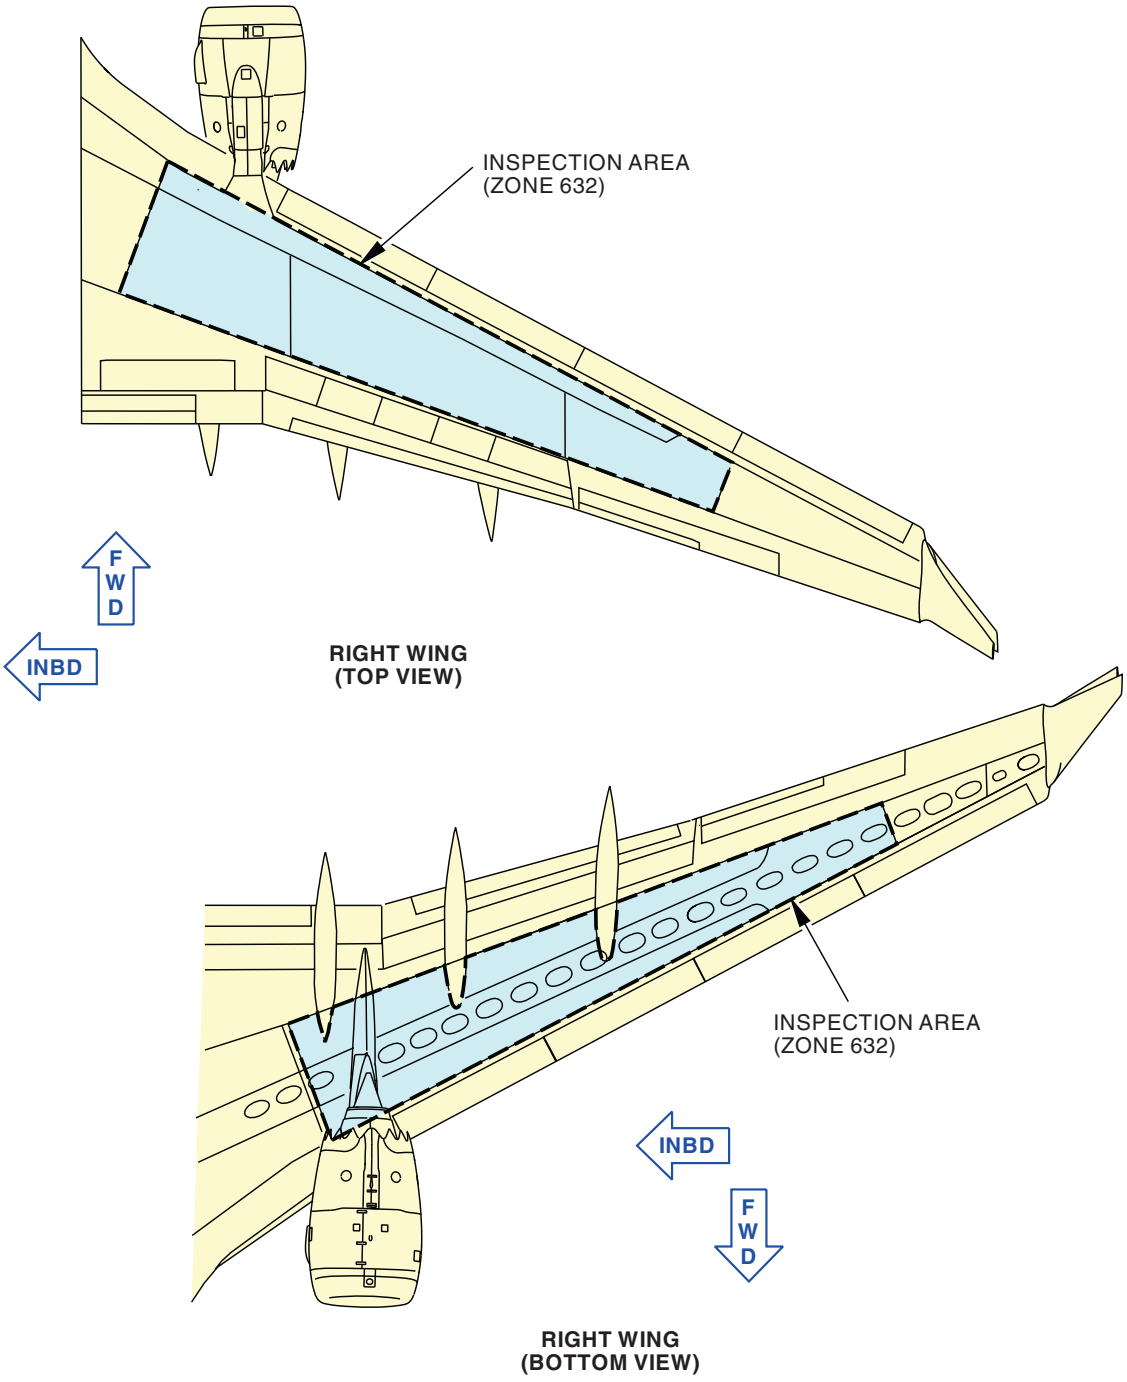

2410272 S00061525227_V1

Main Fuel Tank - Right Wing General Visual (External)
Figure 214/05-41-06-990-814

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-815

15. INTERNAL - ZONAL (GVI): Surge Tank - Right Wing

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
633	Right Wing - Surge Tank, Rib 22 to Rib 25, Wing Station 643.50 to Wing Buttock Line 616.75

B. Access Panels

Number	Name/Location
633AB	Surge Tank Access Door - Wing Station 655
633BB	Surge Tank Access Door - Wing Station 679
633CB	Surge Tank Access Door - Wing Station 703

C. Zonal Inspection

SUBTASK 05-41-06-010-006

(1) Open these access panels:

Number	Name/Location
633AB	Surge Tank Access Door - Wing Station 655
633BB	Surge Tank Access Door - Wing Station 679
633CB	Surge Tank Access Door - Wing Station 703

SUBTASK 05-41-06-210-015

(2) Perform an internal zonal inspection (GVI) of the Surge Tank - Right Wing.


SUBTASK 05-41-06-410-006

(3) Close these access panels:

Number	Name/Location
633AB	Surge Tank Access Door - Wing Station 655
633BB	Surge Tank Access Door - Wing Station 679
633CB	Surge Tank Access Door - Wing Station 703

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

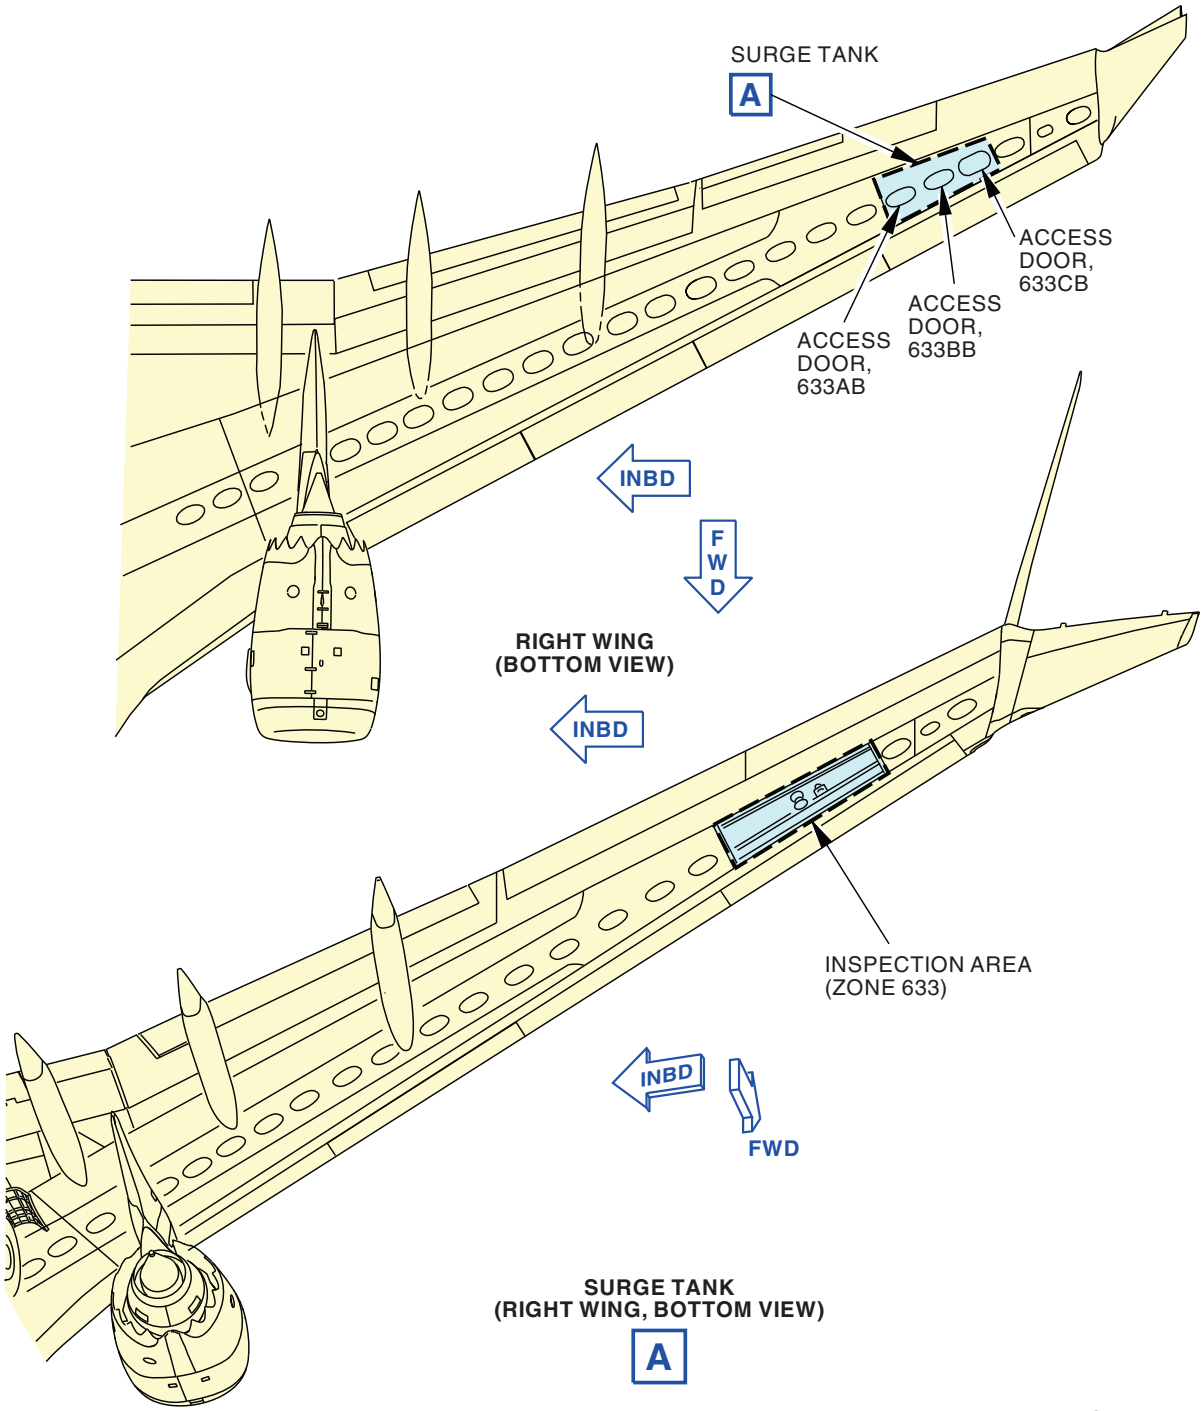

Surge Tank - Right Wing General Visual (Internal)
Figure 215/05-41-06-990-815

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-816

16. EXTERNAL - ZONAL (GVI): Surge Tank - Right Wing

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
633	Right Wing - Surge Tank, Rib 22 to Rib 25, Wing Station 643.50 to Wing Buttock Line 616.75


B. Zonal Inspection

SUBTASK 05-41-06-210-016

(1) Perform an external zonal inspection (GVI) of the Surge Tank - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

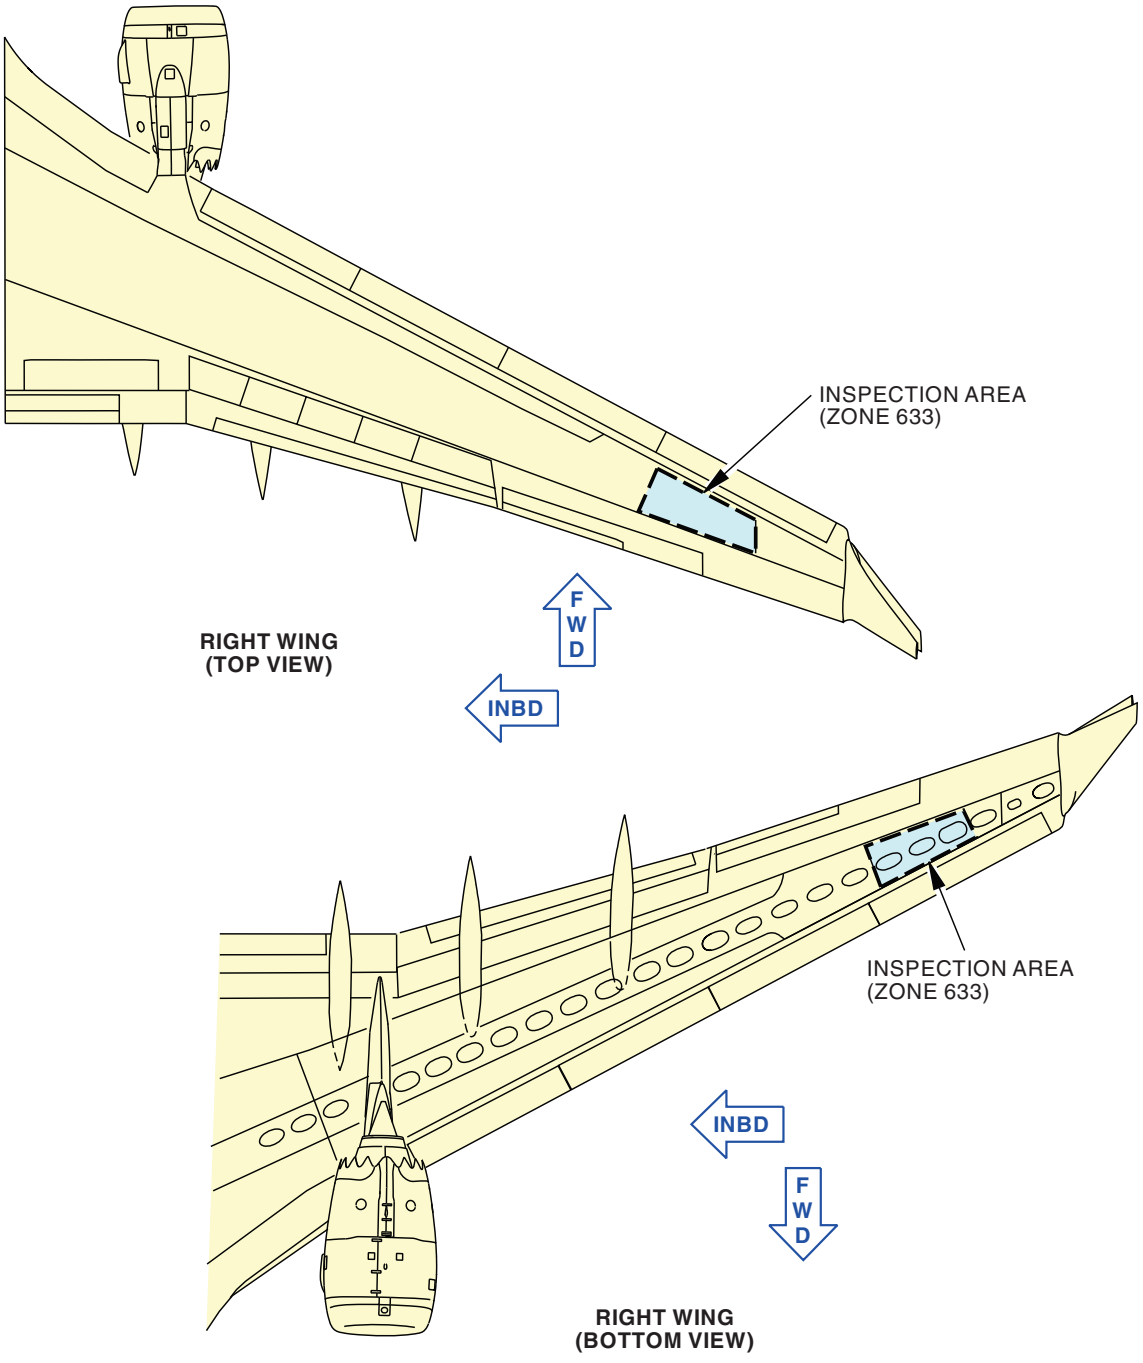

2410274 S00061525231_V1

Surge Tank - Right Wing General Visual (External)
Figure 216/05-41-06-990-816

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-817

17. EXTERNAL - ZONAL (GVI): Dry Bay - Right Wing

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
634	Right Wing - Dry Bay


B. Zonal Inspection

SUBTASK 05-41-06-210-017

(1) Perform an external zonal inspection (GVI) of the Dry Bay - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

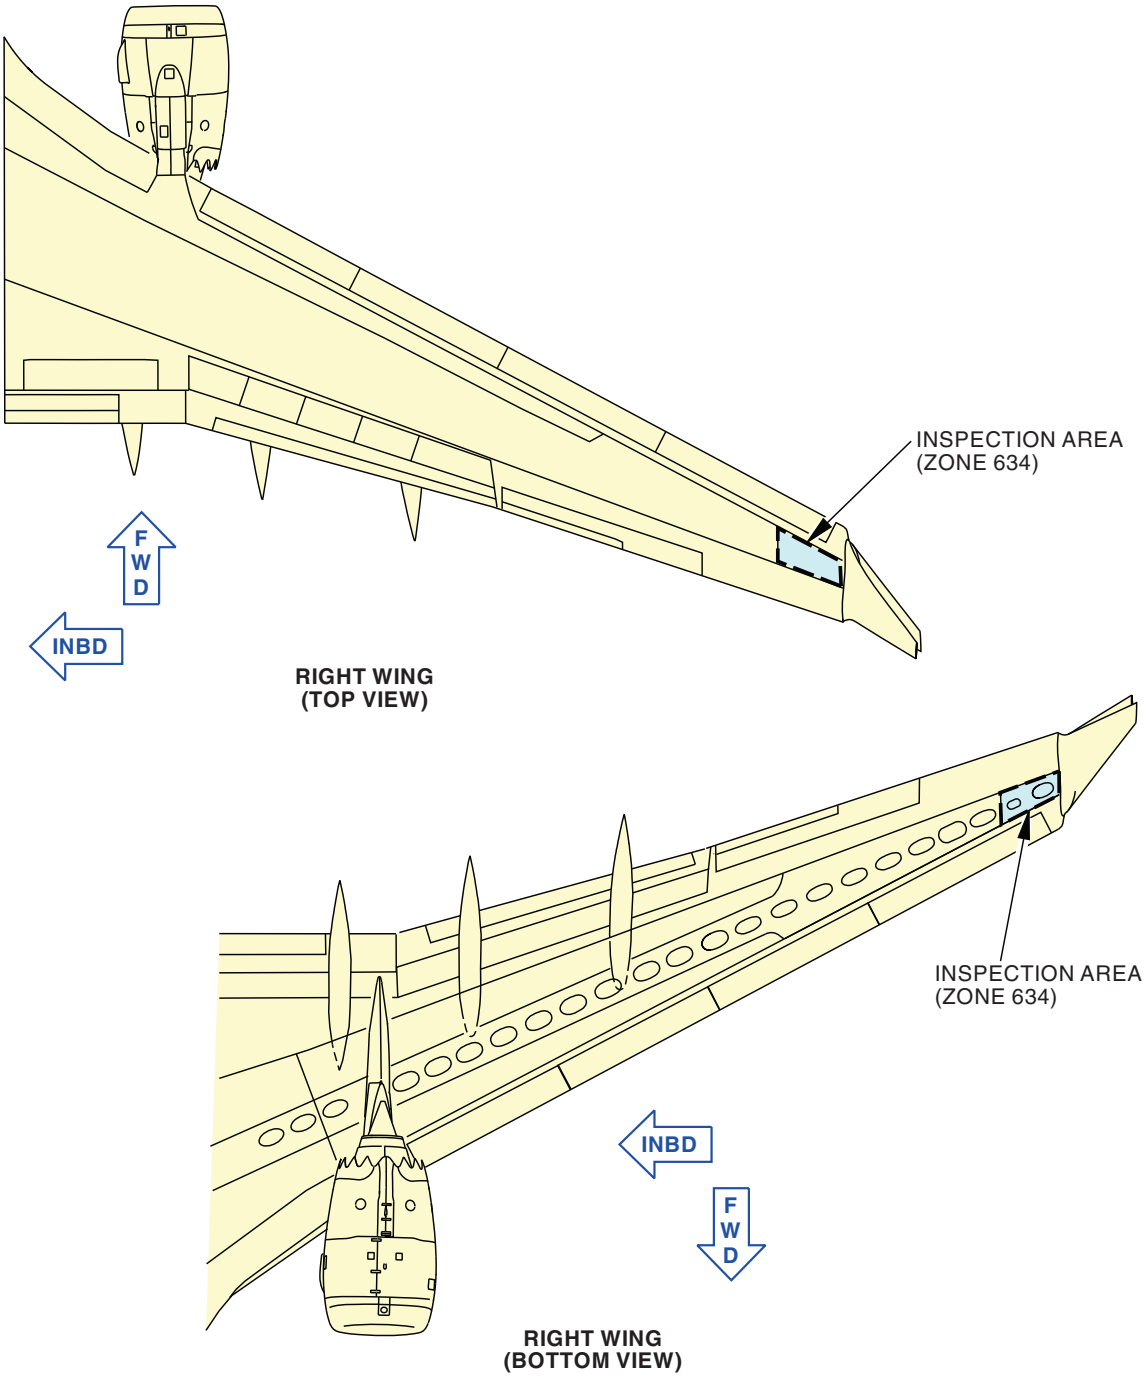

Dry Bay - Right Wing General Visual (External)
Figure 217/05-41-06-990-817

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-837

18. INTERNAL - ZONAL (GVI): Dry Bay - Right Wing

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
634	Right Wing - Dry Bay


B. Zonal Inspection

SUBTASK 05-41-06-210-037

(1) Perform an internal zonal inspection (GVI) of the Dry Bay - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

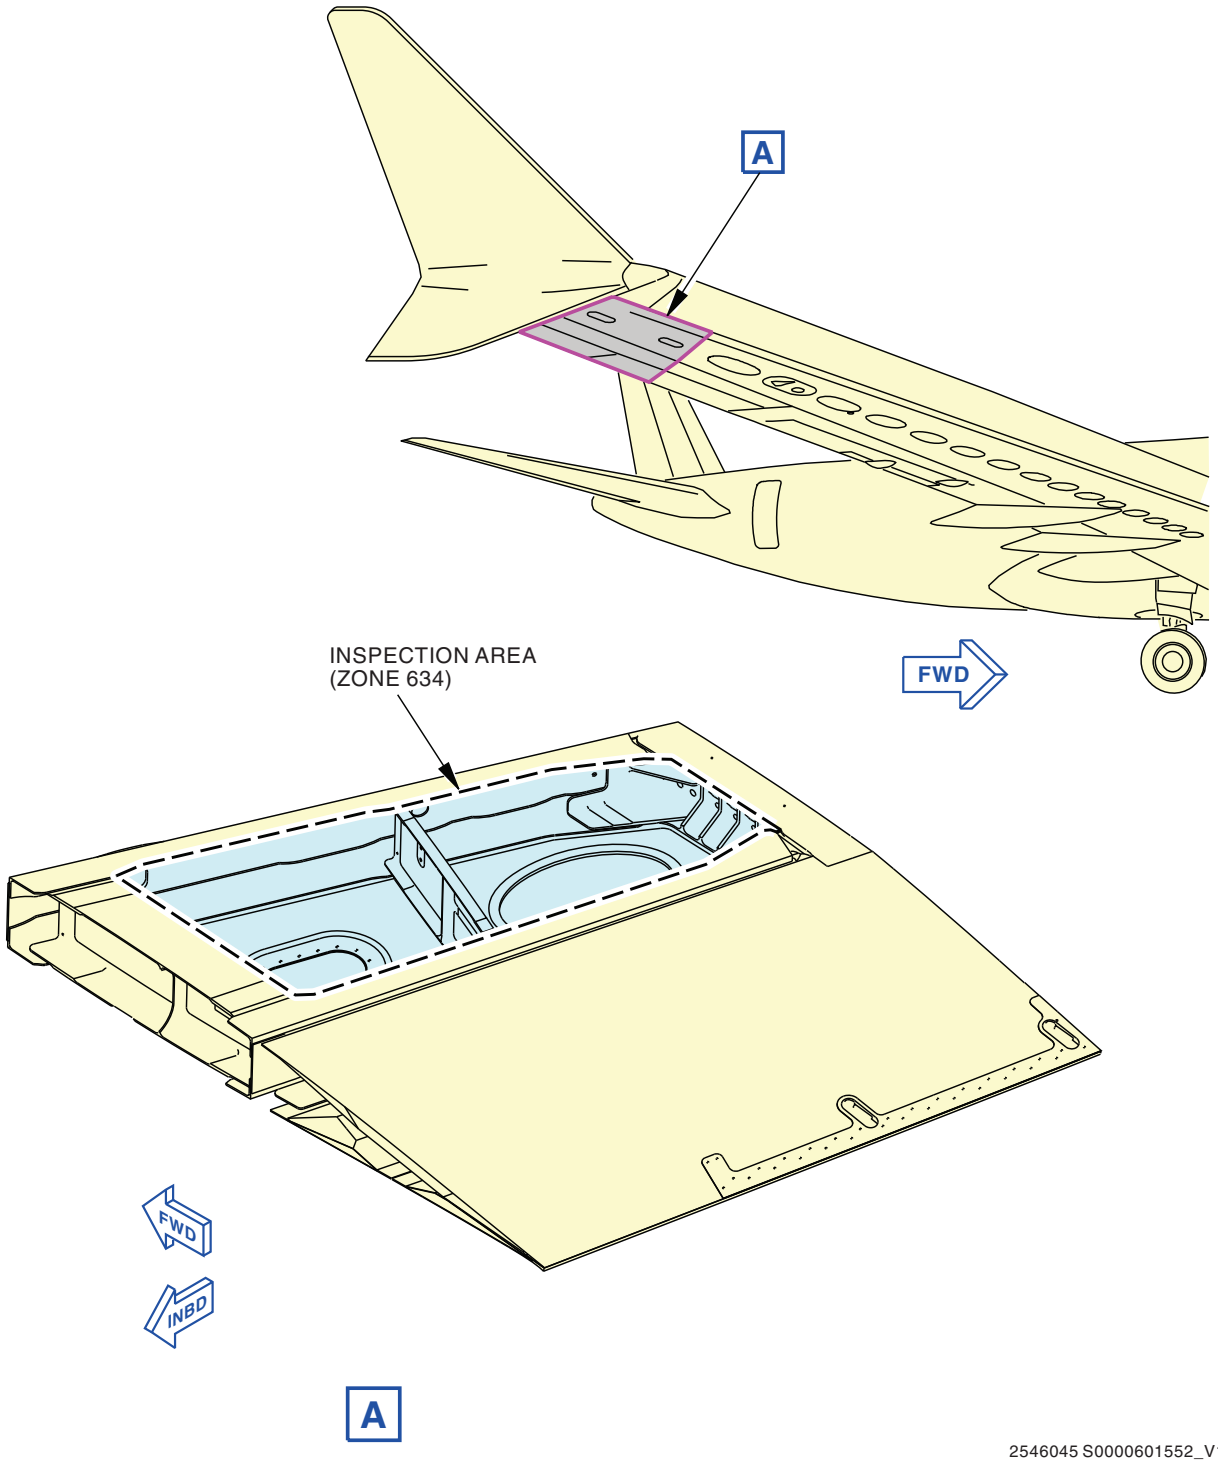

2546045 S0000601552_V1

Dry Bay - Right General Visual (Internal)
Figure 218/05-41-06-990-837

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-818

19. INTERNAL - ZONAL (GVI): Flap Support No. 5 - Right Wing

(Figure 219)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)
53-51-21-000-803	Aft Wing-To-Body Fairing Panel Removal (P/B 401)
53-51-21-400-803	Aft Wing-To-Body Fairing Panel - Installation (P/B 401)

C. Location Zones

Zone	Area
134	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Right
194	Lower Wing-To-Body Fairing - Aft of Wheel Well
641	Right Wing - Fairing Flap Support No. 5

D. Access Panels

Number	Name/Location
194BR	Flap Track Lubrication Panel - Aft

E. Zonal Inspection

SUBTASK 05-41-06-010-012

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-06-040-001

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-06-010-007

(3) Remove this access panel on the wing to body fairing (Aft Wing-To-Body Fairing Panel Removal, TASK 53-51-21-000-803).

(a) Open this access panel:

Number	Name/Location
194BR	Flap Track Lubrication Panel - Aft

SUBTASK 05-41-06-210-018

(4) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(5) Perform an internal zonal inspection (GVI) of the Flap Support No. 5 - Right Wing - Section 46, Sta 727. (EZAP)

SUBTASK 05-41-06-910-003

(6) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-06-410-007

(7) Install this access panel on the wing to body fairing (Aft Wing-To-Body Fairing Panel - Installation, TASK 53-51-21-400-803).

(a) Close this access panel:

Number	Name/Location
194BR	Flap Track Lubrication Panel - Aft

SUBTASK 05-41-06-440-001


(8) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-06-410-012


(9) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

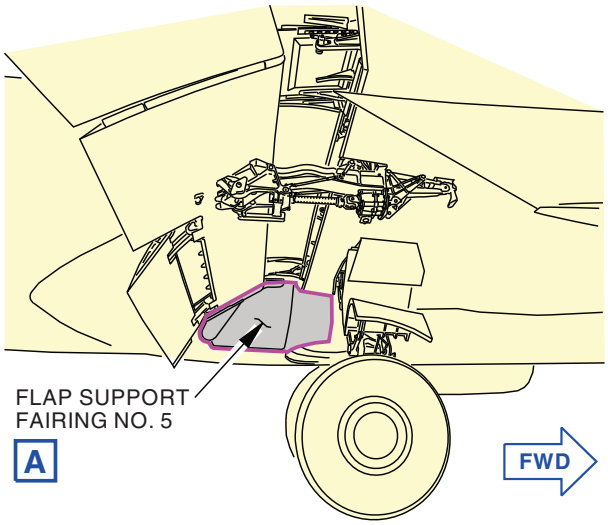

**RIGHT WING
(EXAMPLE)**

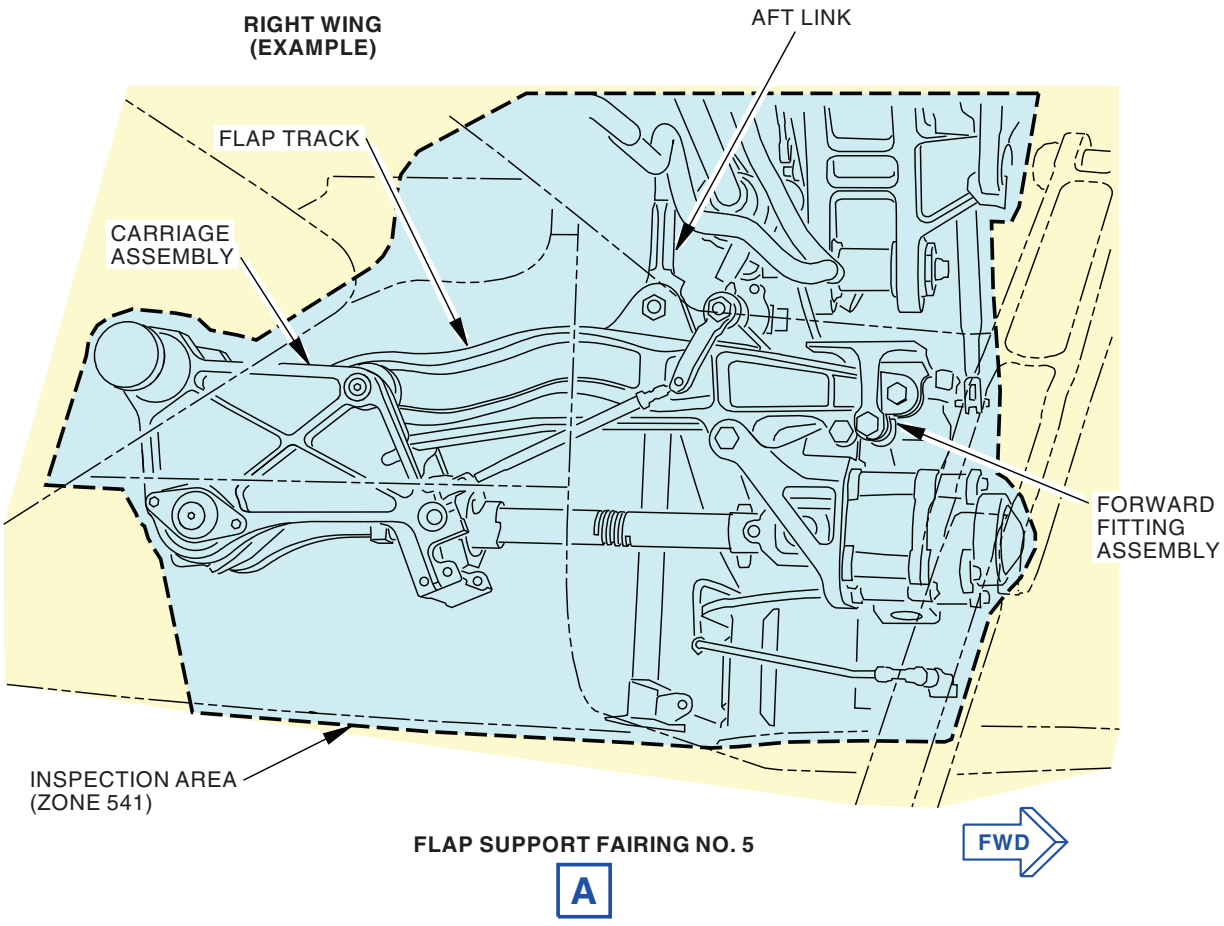

FLAP SUPPORT FAIRING NO. 5

2410276 S00061525235_V3

**Flap Support Fairing No. 5 General Visual (Internal)
Figure 219/05-41-06-990-818**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-819

20. EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 6 - Right Wing

(Figure 220)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
642	Right Wing - Fairing Flap Support No. 6

B. Zonal Inspection


NOTE: Flaps extended.


SUBTASK 05-41-06-210-019

(1) Perform an external zonal inspection (GVI) of the Fairing Flap Support No. 6 - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

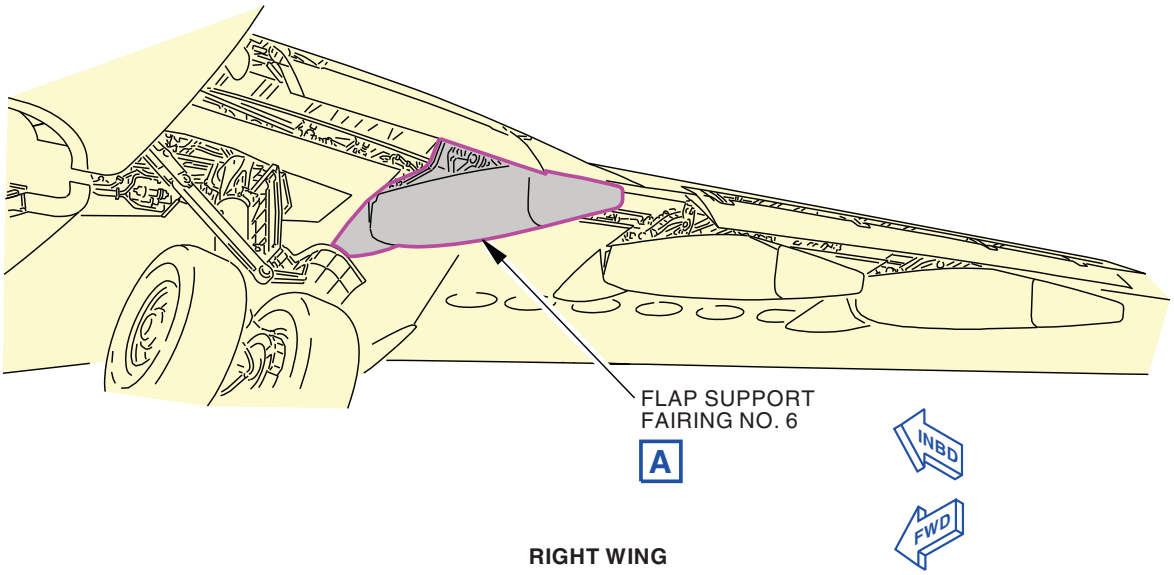

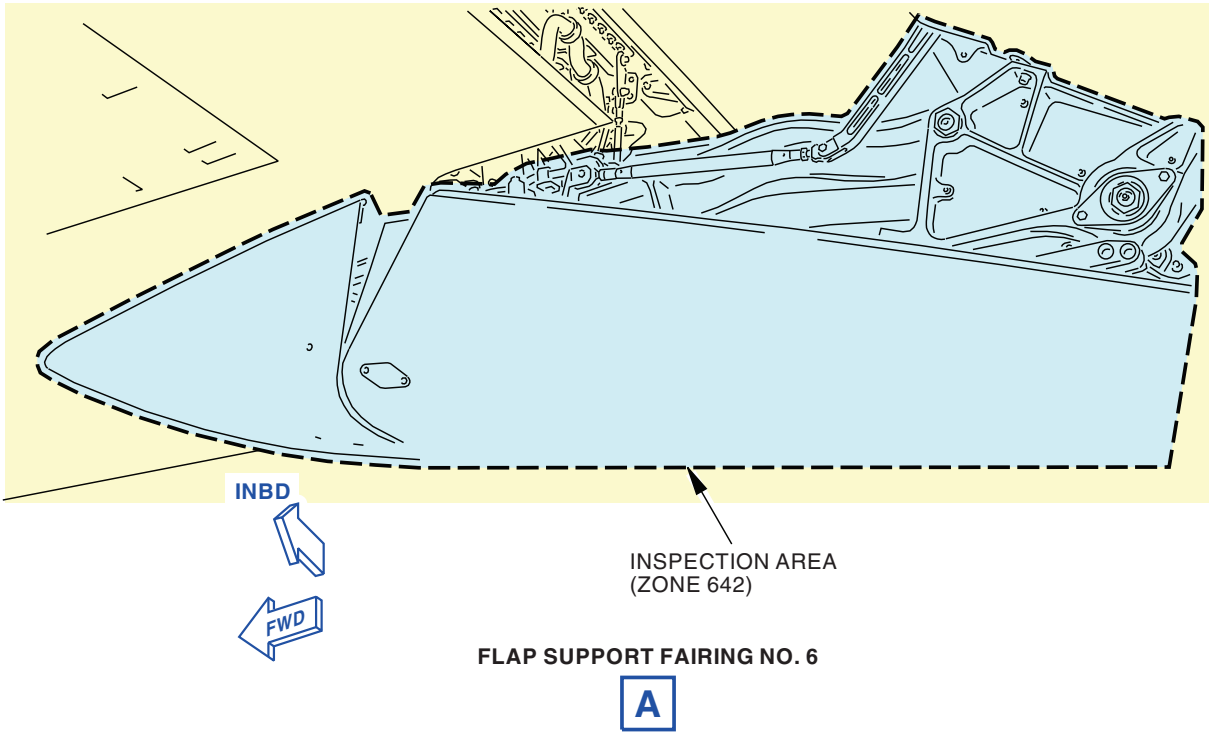

Flap Support Fairing No. 6 General Visual (External)
Figure 220/05-41-06-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-820

21. INTERNAL - ZONAL (GVI): Fairing Flap Support No. 6 - Right Wing

(Figure 221)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)

C. Location Zones

Zone	Area
642	Right Wing - Fairing Flap Support No. 6

D. Zonal Inspection

SUBTASK 05-41-06-010-013

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-06-040-002

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-06-210-020

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Fairing Flap Support No. 6 - Right Wing. (EZAP)

SUBTASK 05-41-06-910-004

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-06-440-002


(6) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-06-410-013

(7) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

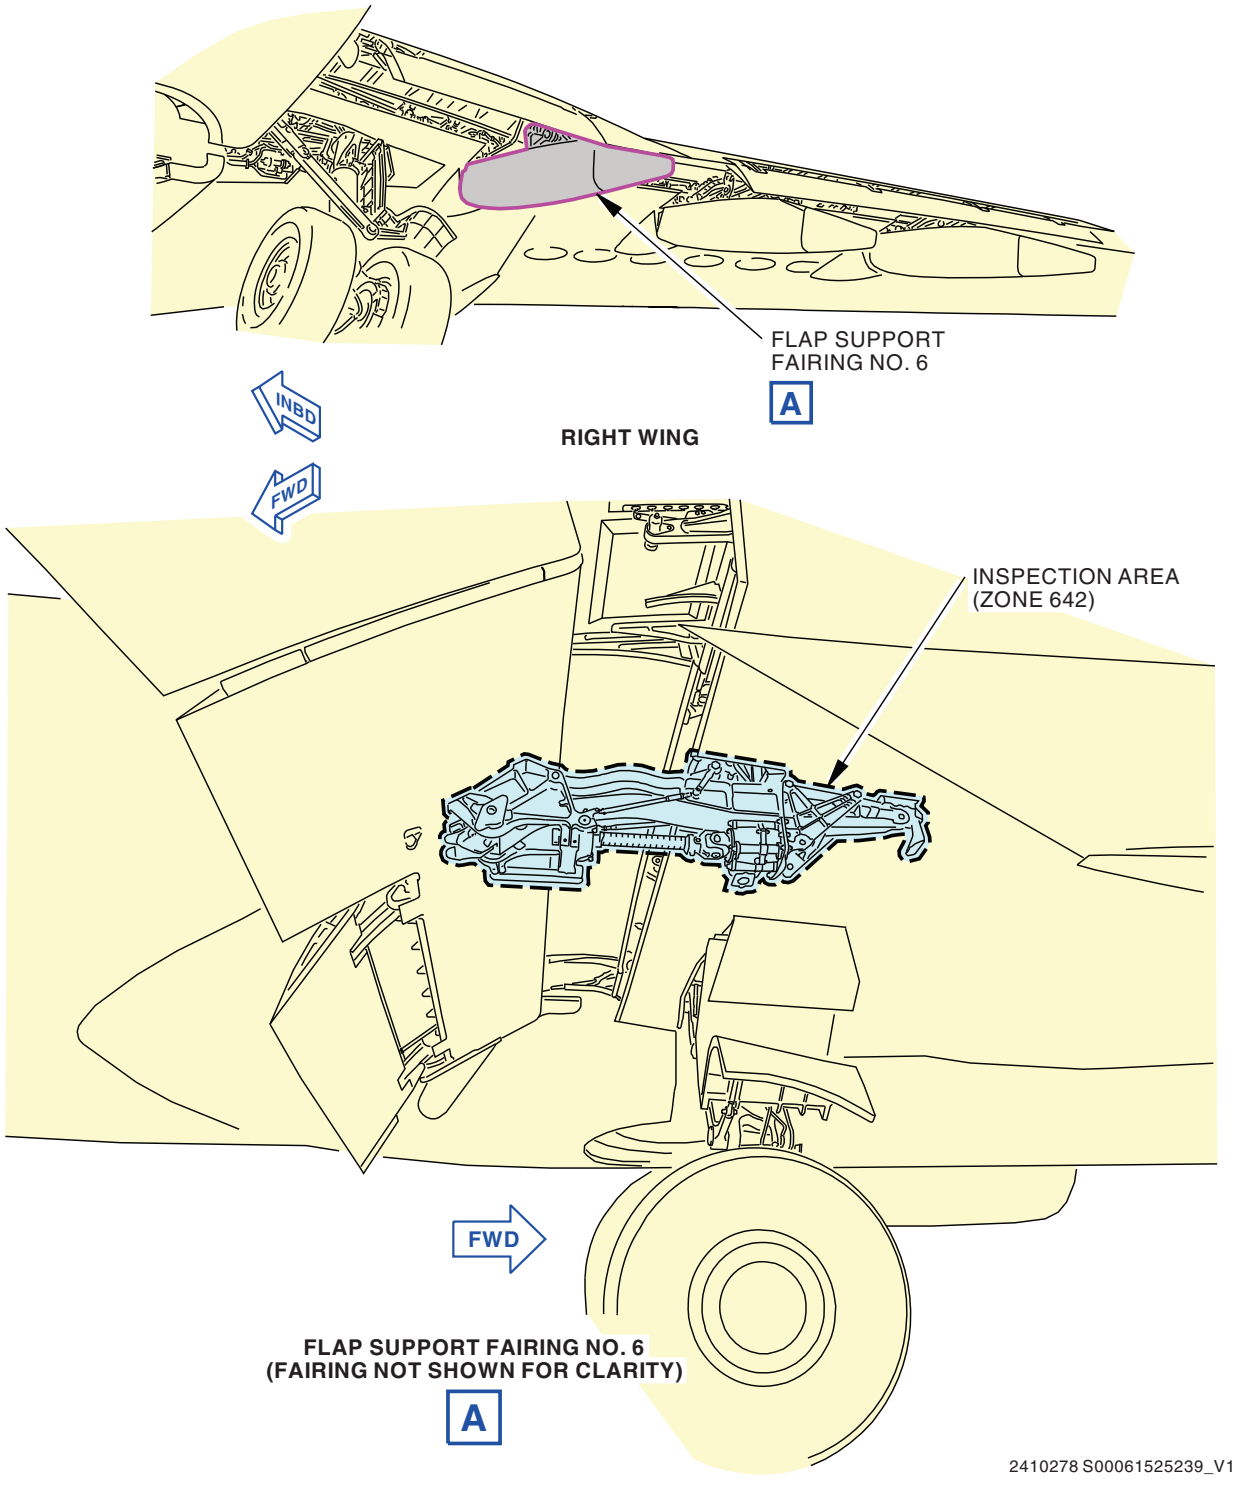

Flap Support Fairing No. 6 General Visual (Internal)
Figure 221/05-41-06-990-820

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-821

22. EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 7 - Right Wing

(Figure 222)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
643	Right Wing - Fairing Flap Support No. 7

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-06-210-021

(1) Perform an external zonal inspection (GVI) of the Fairing Flap Support No. 7 - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

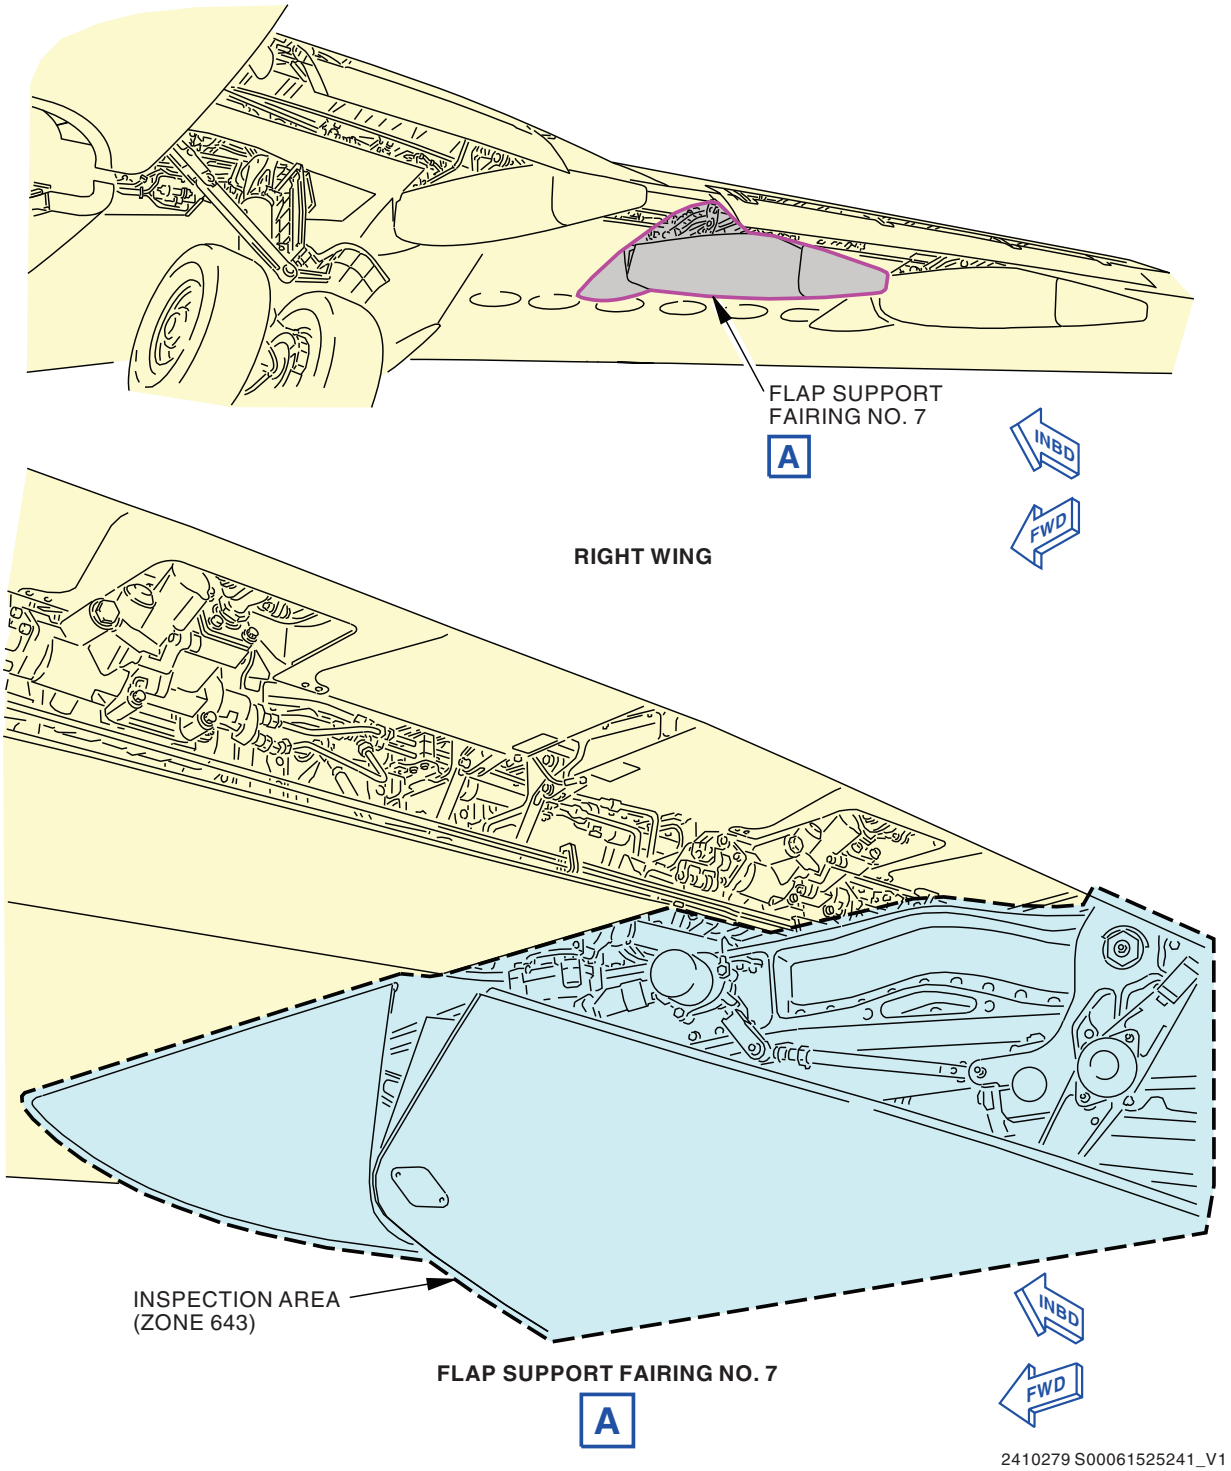

Flap Support Fairing No. 7 General Visual (External)
Figure 222/05-41-06-990-821

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-822

23. INTERNAL - ZONAL (GVI): Fairing Flap Support No. 7 - Right Wing

(Figure 223)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)

C. Location Zones

Zone	Area
643	Right Wing - Fairing Flap Support No. 7

D. Zonal Inspection

SUBTASK 05-41-06-010-014

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-06-040-003

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-06-210-022

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Fairing Flap Support No. 7 - Right Wing. (EZAP)

SUBTASK 05-41-06-910-005

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-06-440-003


(6) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-06-410-014

(7) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

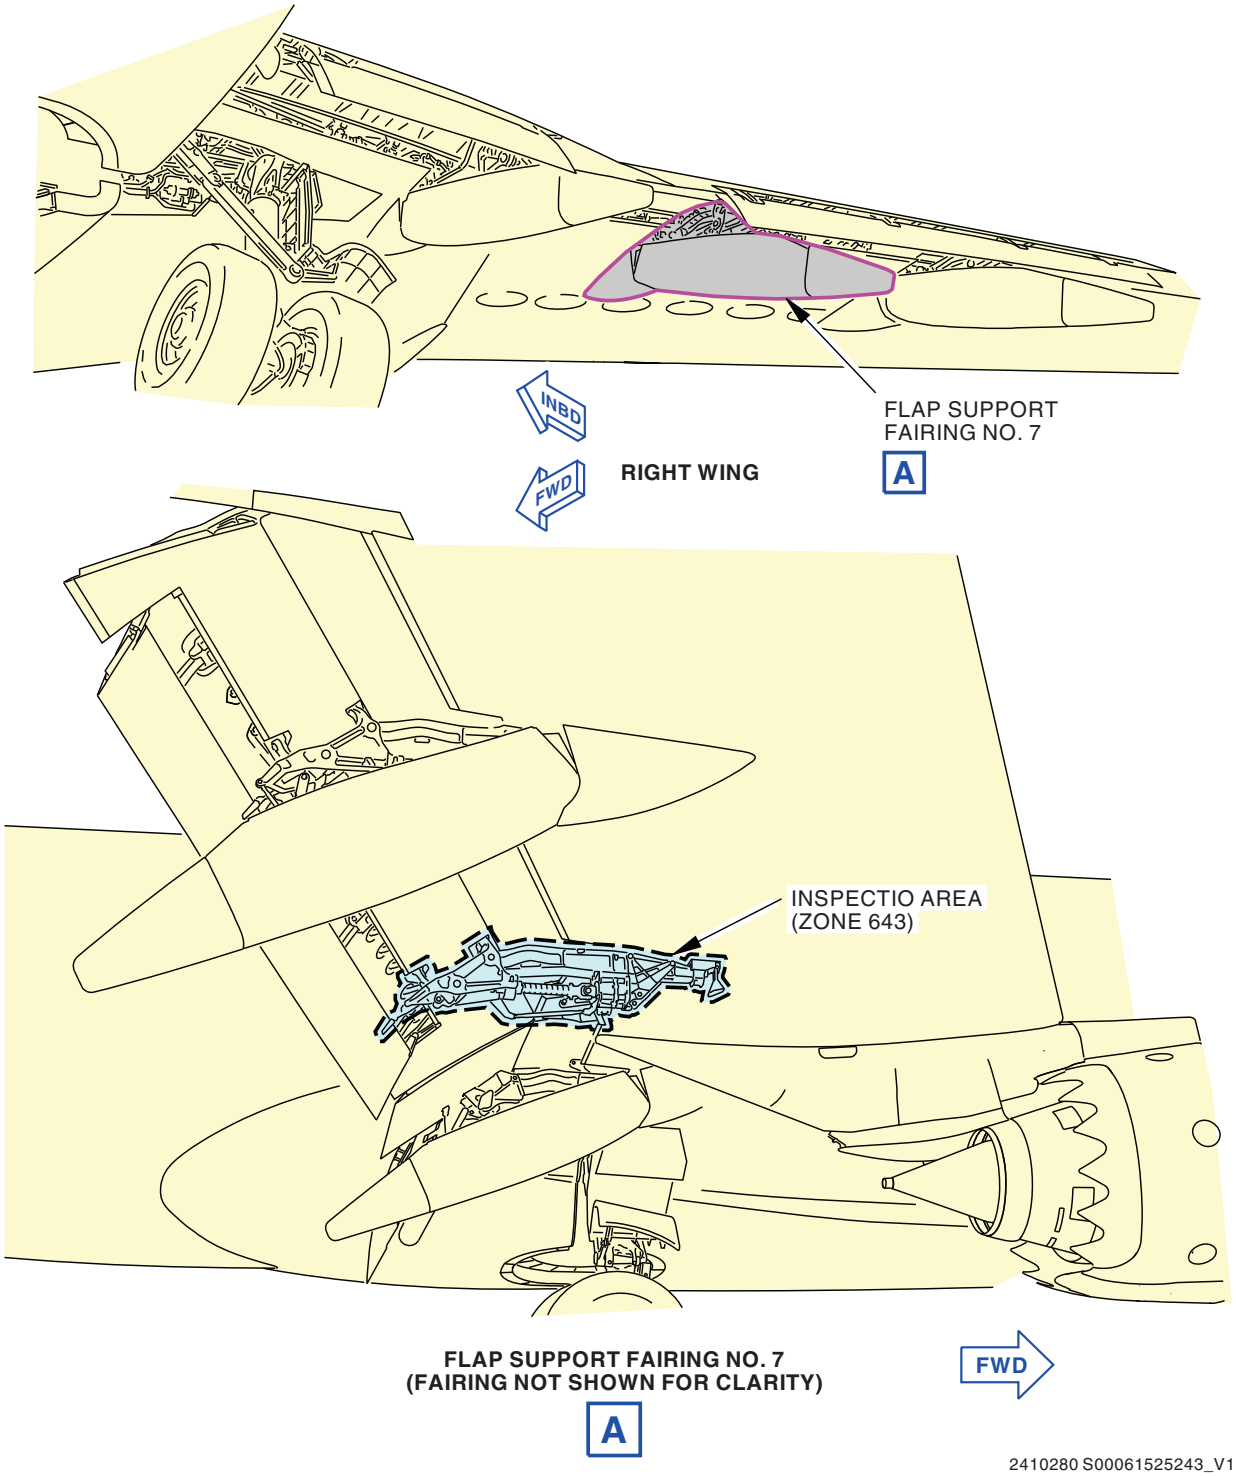

Flap Support Fairing No. 7 General Visual (Internal)
Figure 223/05-41-06-990-822

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-823

24. EXTERNAL - ZONAL (GVI): Fairing Flap Support No. 8 - Right Wing

(Figure 224)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
644	Right Wing - Fairing Flap Support No. 8

B. Zonal Inspection


NOTE: Flaps extended.


SUBTASK 05-41-06-210-023

(1) Perform an external zonal inspection (GVI) of the Fairing Flap Support No. 8 - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

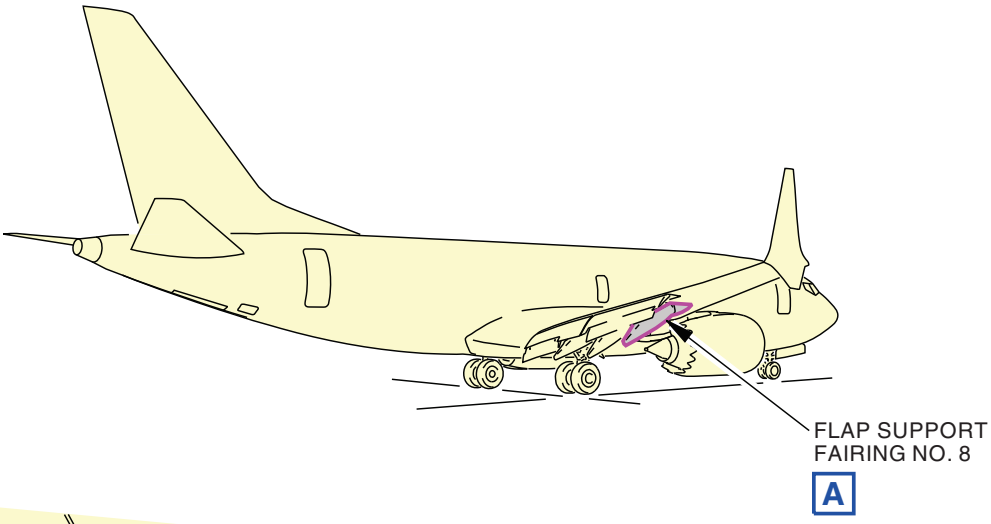

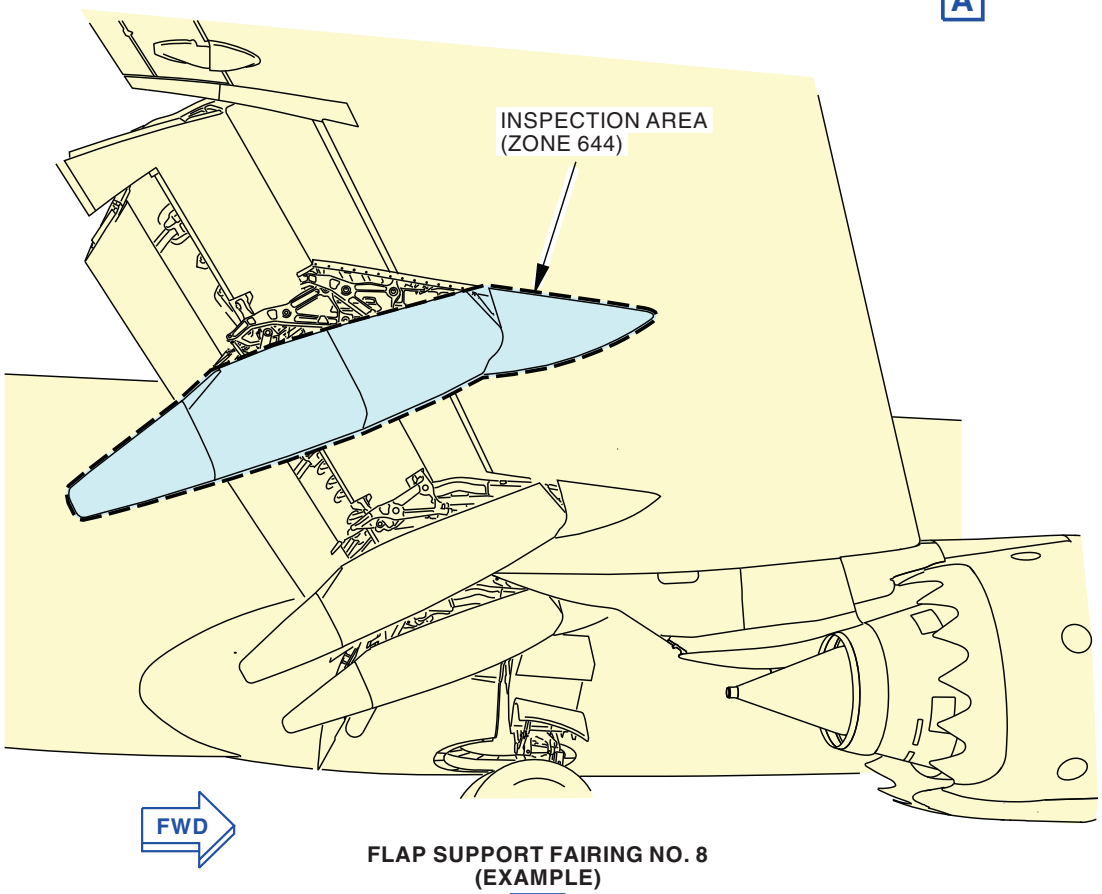

FLAP SUPPORT FAIRING NO. 8
(EXAMPLE)
A

2410281 S00061525245_V3

Flap Support Fairing No. 8 General Visual (External)
Figure 224/05-41-06-990-823

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-824

25. INTERNAL - ZONAL (GVI): Fairing Flap Support No. 8 - Right Wing

(Figure 225)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
27-51-00-040-801	Trailing Edge Flap System Deactivation (P/B 201)
27-51-00-440-801	Trailing Edge Flap System Reactivation (P/B 201)
27-51-00-860-803	Extend the Trailing Edge Flaps (P/B 201)
27-51-00-860-804	Retract the Trailing Edge Flaps (P/B 201)

C. Location Zones

Zone	Area
644	Right Wing - Fairing Flap Support No. 8

D. Zonal Inspection

SUBTASK 05-41-06-010-015

(1) Extend the trailing edge flaps, do this task: Extend the Trailing Edge Flaps, TASK 27-51-00-860-803.

SUBTASK 05-41-06-040-004

(2) Do this task: Trailing Edge Flap System Deactivation, TASK 27-51-00-040-801.

SUBTASK 05-41-06-210-024

(3) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(4) Perform an internal zonal inspection (GVI) of the Fairing Flap Support No. 8 - Right Wing. (EZAP)

SUBTASK 05-41-06-910-006

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-41-06-440-004


(6) Do this task: Trailing Edge Flap System Reactivation, TASK 27-51-00-440-801.

SUBTASK 05-41-06-410-015

(7) Retract the trailing edge flaps, do this task: Retract the Trailing Edge Flaps, TASK 27-51-00-860-804.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

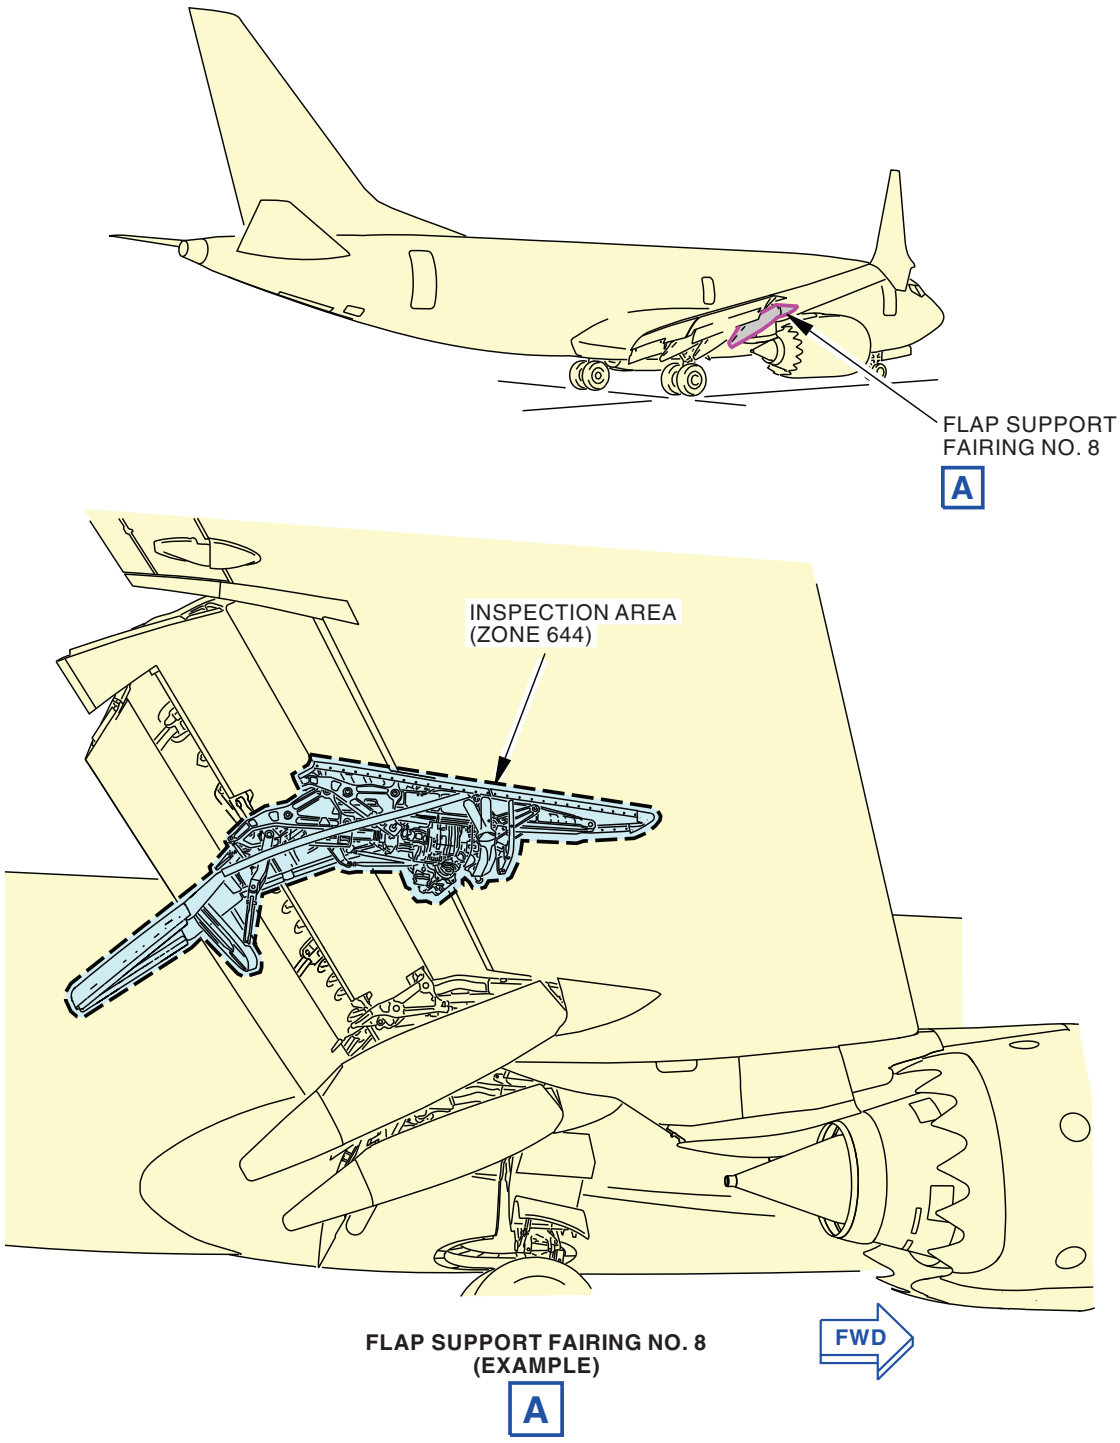

FLAP SUPPORT FAIRING NO. 8
(EXAMPLE)

A

2410282 S00061525247_V3

Flap Support Fairing No. 8 General Visual (Internal)
Figure 225/05-41-06-990-824

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-825

26. EXTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Right Wing

(Figure 226)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
651	Right Wing - Rear Spar to Landing Gear Support Beam

B. Zonal Inspection


NOTE: Excluding surface under Wing-to-Body Fairing.

SUBTASK 05-41-06-210-025

(1) Perform an external zonal inspection (GVI) of the Rear Spar to Landing Gear Support Beam - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

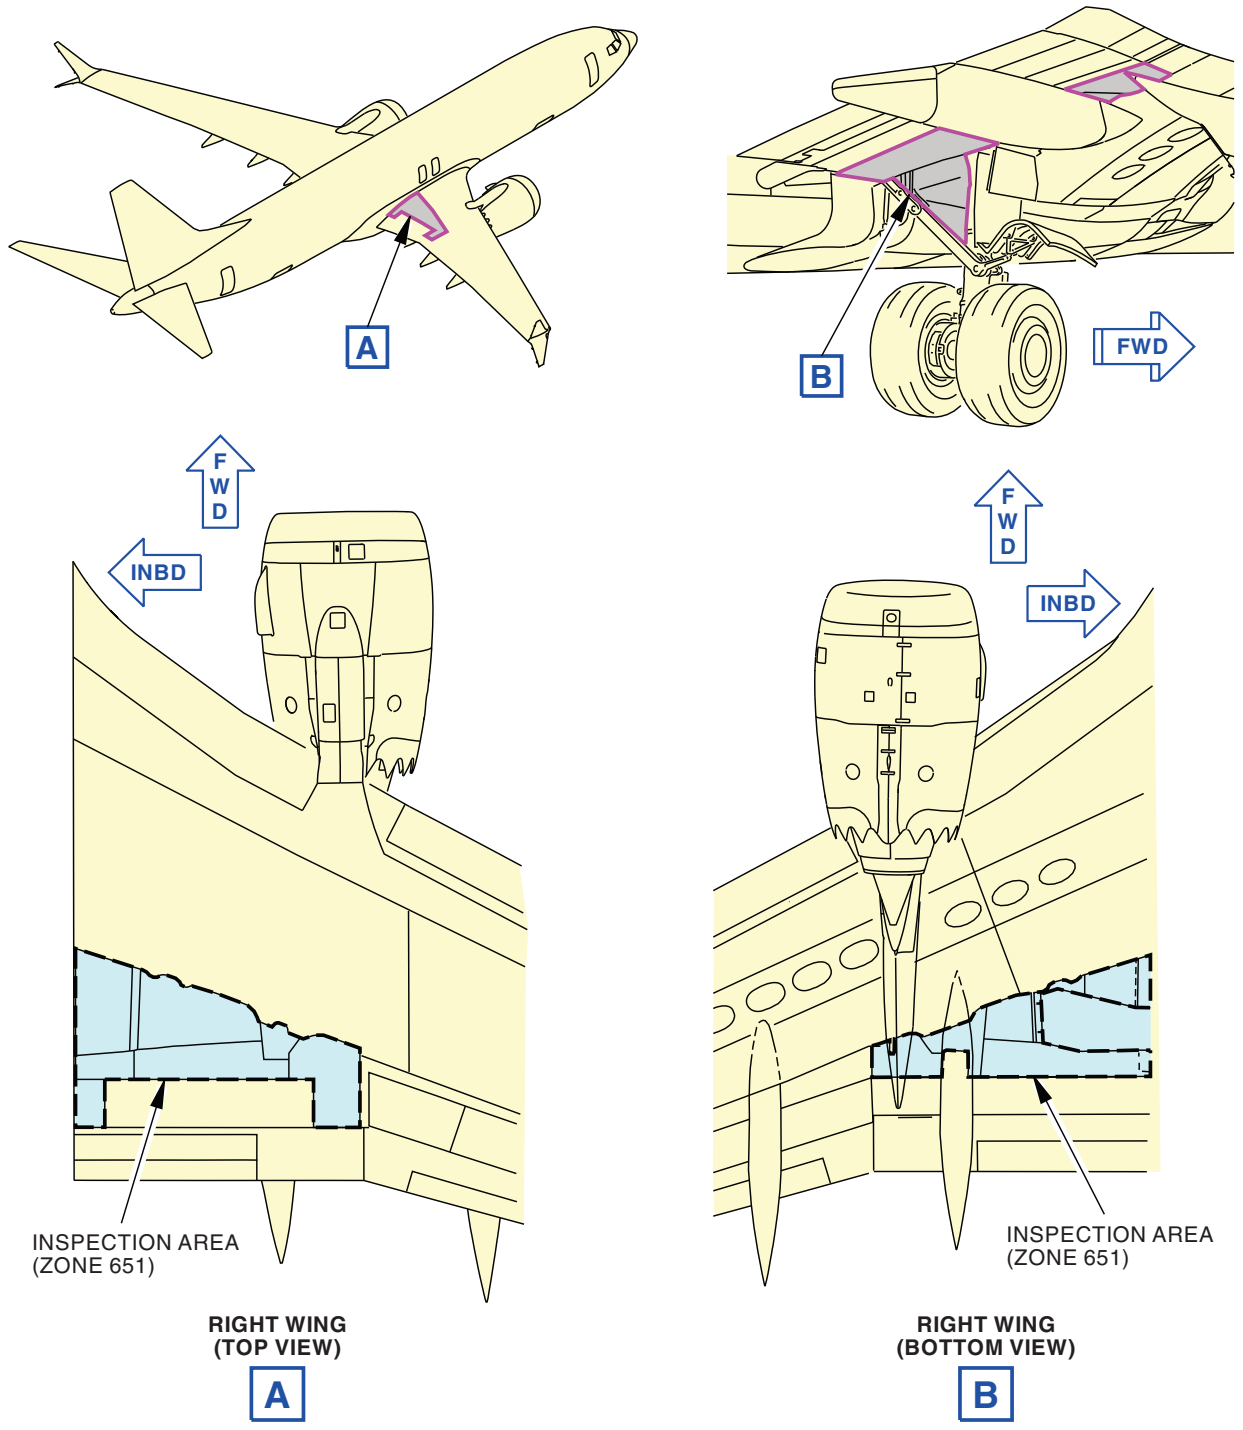

2410283 S00061525249_V3

Rear Spar to Landing Gear Support Beam - Right Wing General Visual (External)
Figure 226/05-41-06-990-825

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-826

27. INTERNAL - ZONAL (GVI): Rear Spar to Landing Gear Support Beam - Right Wing

(Figure 227)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
651	Right Wing - Rear Spar to Landing Gear Support Beam

D. Access Panels

Number	Name/Location
195CR	Wing-To-Body Fairing - Right Side
651AT	Upper Inboard Fixed Trailing Edge Access Panel
651BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
651CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
651DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
651FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel

E. Zonal Inspection

SUBTASK 05-41-06-010-008

(1) Open these access panels:

Number	Name/Location
195CR	Wing-To-Body Fairing - Right Side
651AT	Upper Inboard Fixed Trailing Edge Access Panel
651BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
651CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
651DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
651FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel

NOTE: Extend the trailing edge flaps and deploy spoilers.

SUBTASK 05-41-06-200-001

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

SUBTASK 05-41-06-210-026

(3) Perform an internal zonal inspection (GVI) of the Rear Spar to Landing Gear Support Beam - Right Wing. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-06-910-009

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-06-410-008

(5) Close these access panels:

Number	Name/Location
195CR	Wing-To-Body Fairing - Right Side
651AT	Upper Inboard Fixed Trailing Edge Access Panel
651BT	Upper Inboard Fixed Trailing Edge, MLG Actuator Access Panel
651CT	Upper Inboard Fixed Trailing Edge, Structural Pin Access Panel
651DB	Lower Inboard Fixed Trailing Edge, Lube Actuator & MLG Beam Outboard Attach Pin Access Panel
651FB	Lower Inboard Fixed Trailing Edge, Landing Gear Access Panel

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

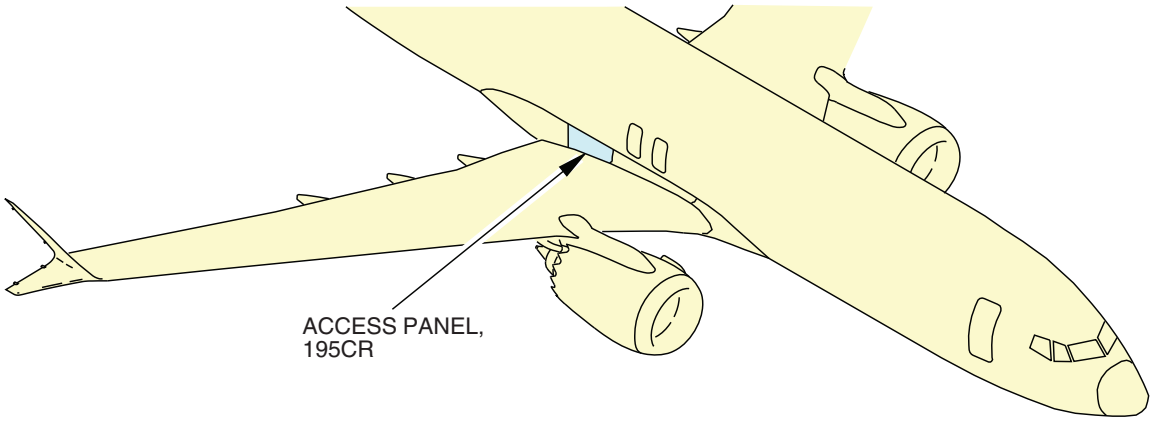

3111515 S0000850647_V1

Rear Spar to Landing Gear Support Beam - Right Wing General Visual (Internal)
Figure 227/05-41-06-990-826 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

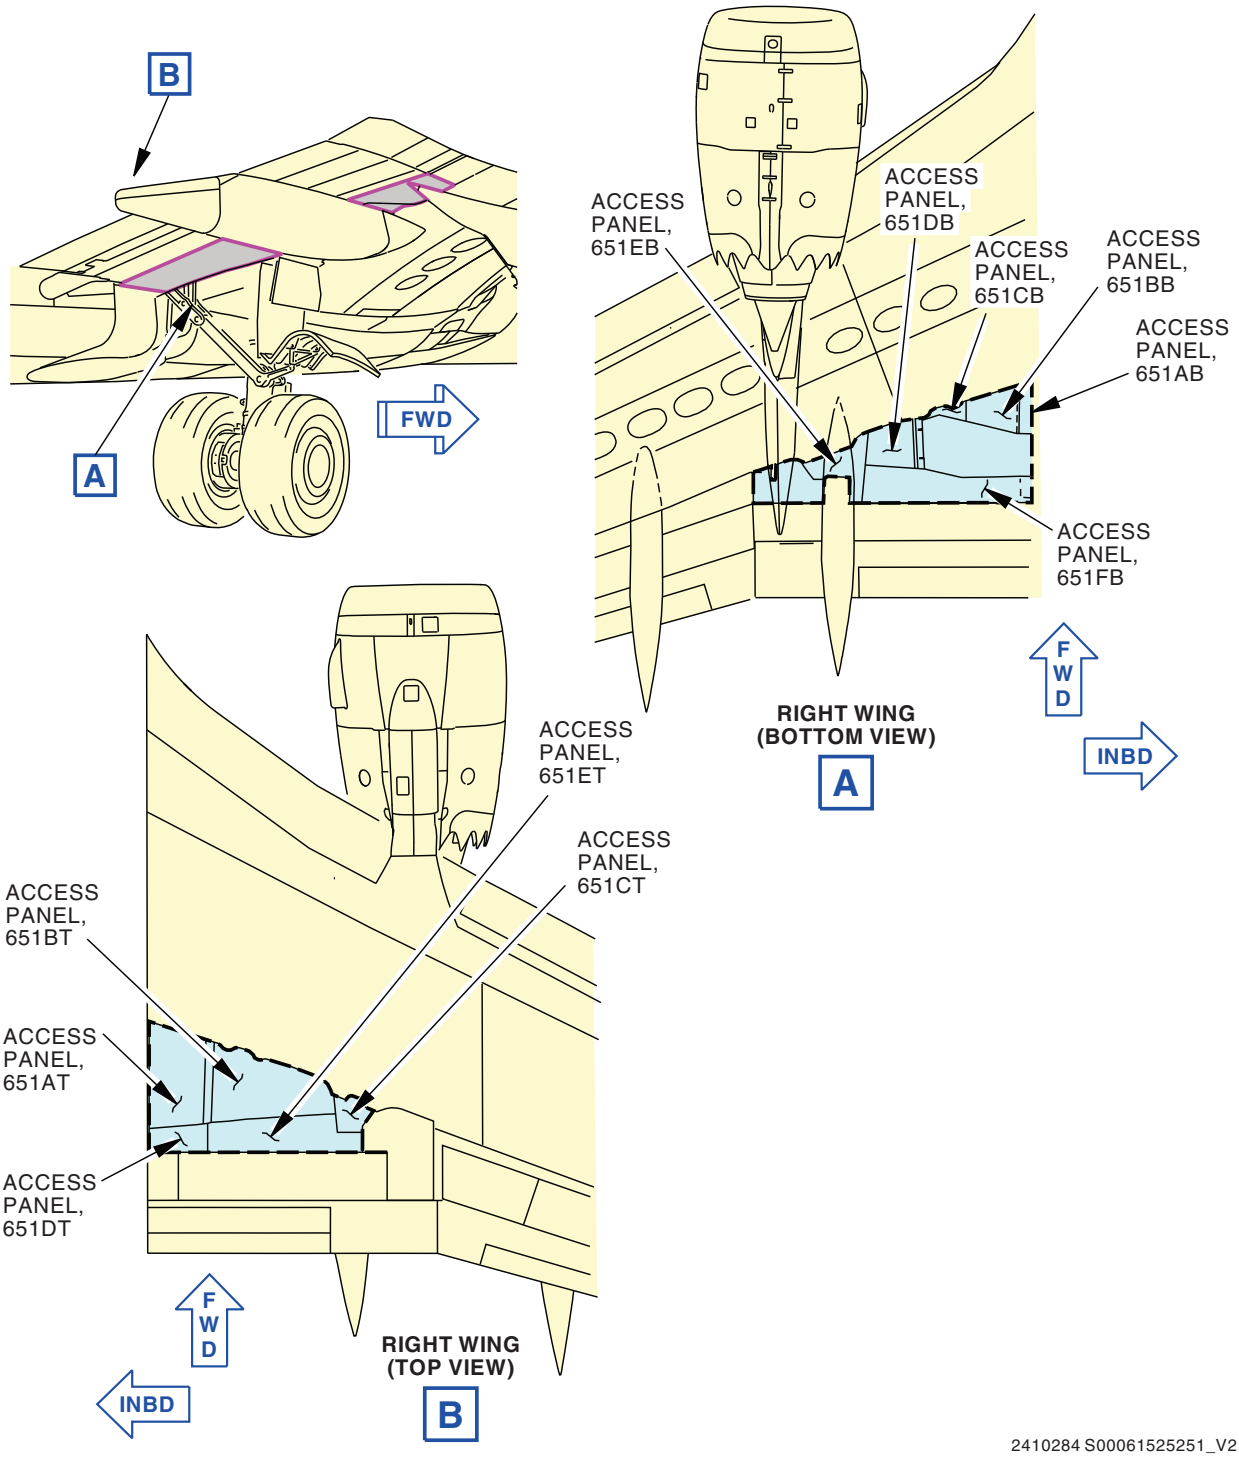

Rear Spar to Landing Gear Support Beam - Right Wing General Visual (Internal)
Figure 227/05-41-06-990-826 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-827

28. EXTERNAL - ZONAL (GVI): Inboard Spoiler No. 7 - Right Wing

(Figure 228)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
652	Right Wing - Spoiler No. 7

B. Zonal Inspection


NOTE: Spoiler raised.

SUBTASK 05-41-06-210-027

(1) Perform an external zonal inspection (GVI) of the Inboard Spoiler No. 7 - Right Wing.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

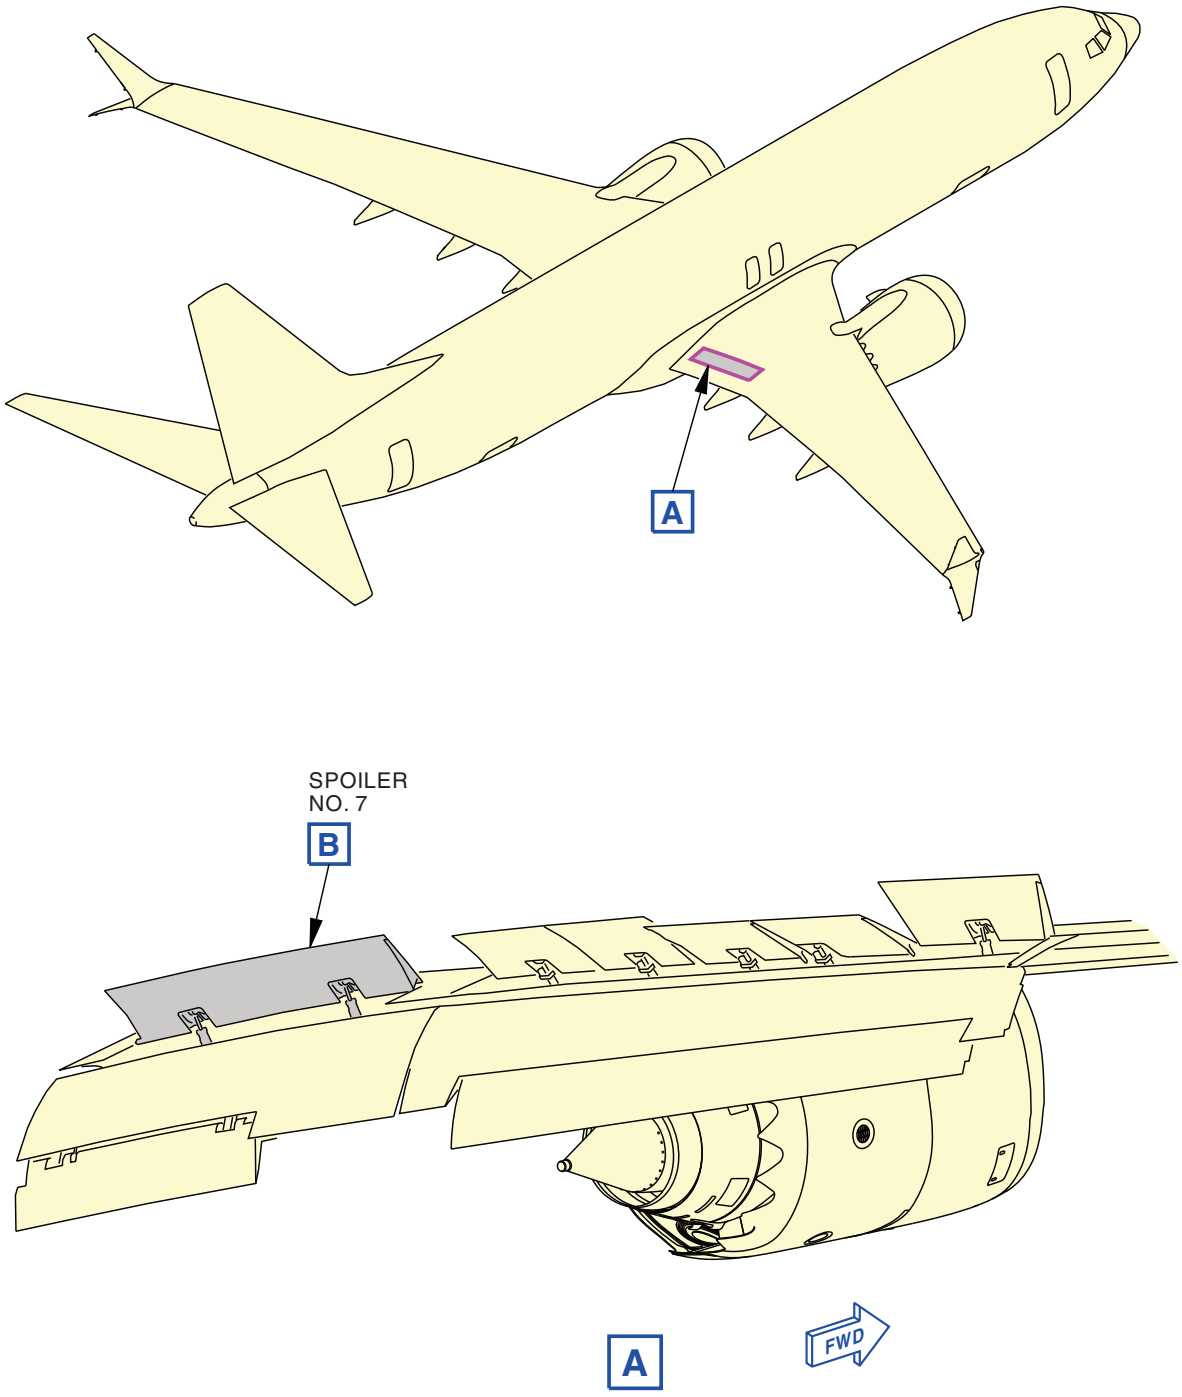

Inboard Spoiler No. 7 General Visual (External)
Figure 228/05-41-06-990-827 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

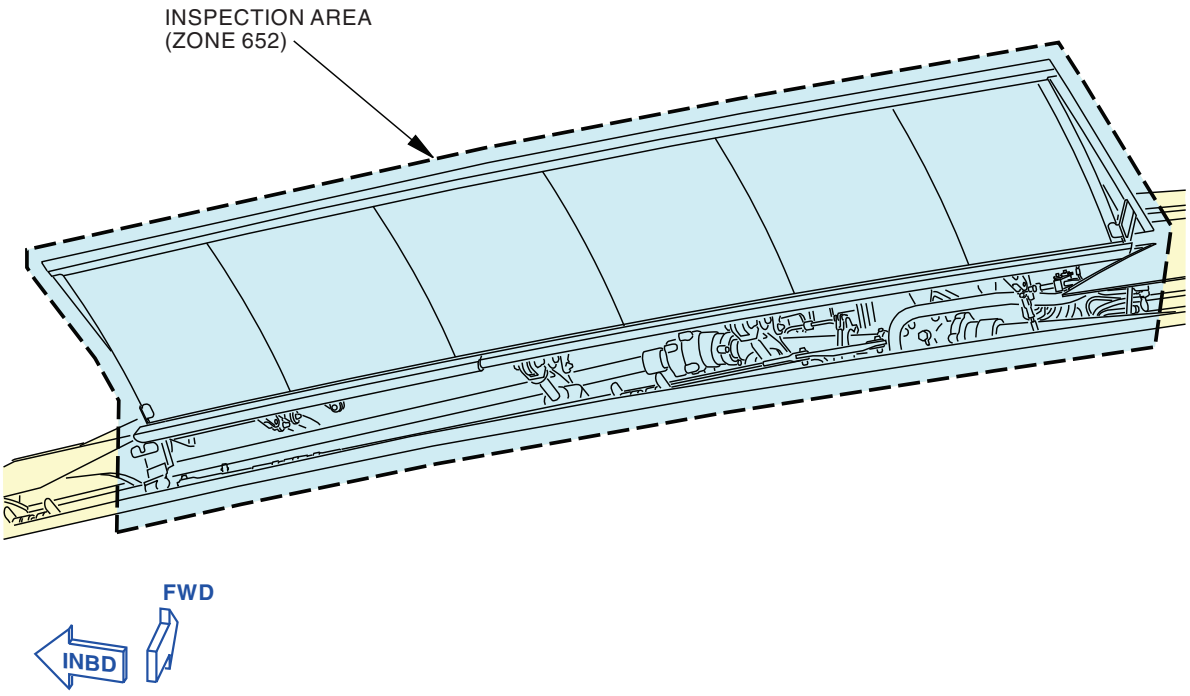

2410286 S00061525254_V1

Inboard Spoiler No. 7 General Visual (External)
Figure 228/05-41-06-990-827 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-828

29. EXTERNAL - ZONAL (GVI): Inboard Flaps - Right Wing

(Figure 229)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
653	Right Wing - Inboard Flap

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-06-210-028

(1) Perform an external zonal inspection (GVI) of the Inboard Flaps - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

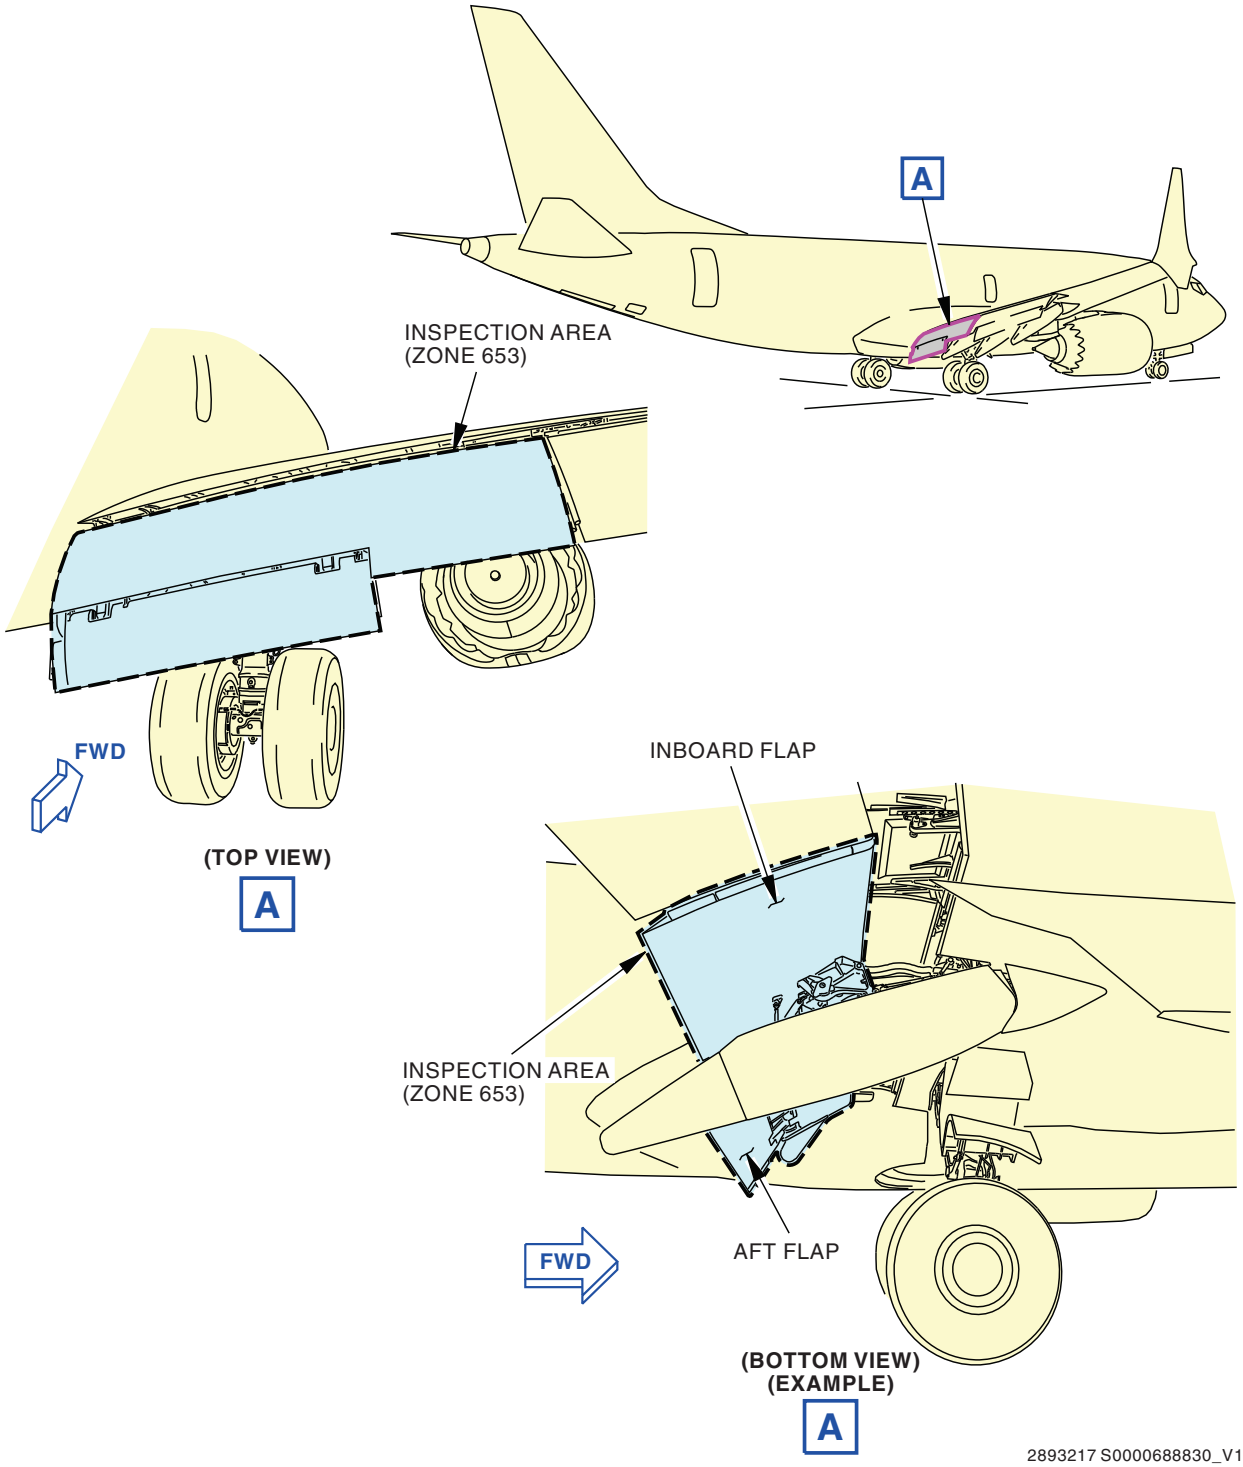

Inboard Trailing Edge Flaps - Right Wing General Visual (External)
Figure 229/05-41-06-990-828

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-829

30. INTERNAL - ZONAL (GVI): Inboard Main Flap - Right Wing

(Figure 230)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
653	Right Wing - Inboard Flap

B. Access Panels

Number	Name/Location
653BB	Inboard Flap - Lower Skin

C. Zonal Inspection

SUBTASK 05-41-06-010-009

(1) Open this access panel:

Number	Name/Location
653BB	Inboard Flap - Lower Skin

NOTE: Flaps extended.

SUBTASK 05-41-06-210-029

(2) Perform an internal zonal inspection (GVI) of the Inboard Main Flap - Right Wing.


SUBTASK 05-41-06-410-009

(3) Close this access panel:

Number	Name/Location
653BB	Inboard Flap - Lower Skin

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

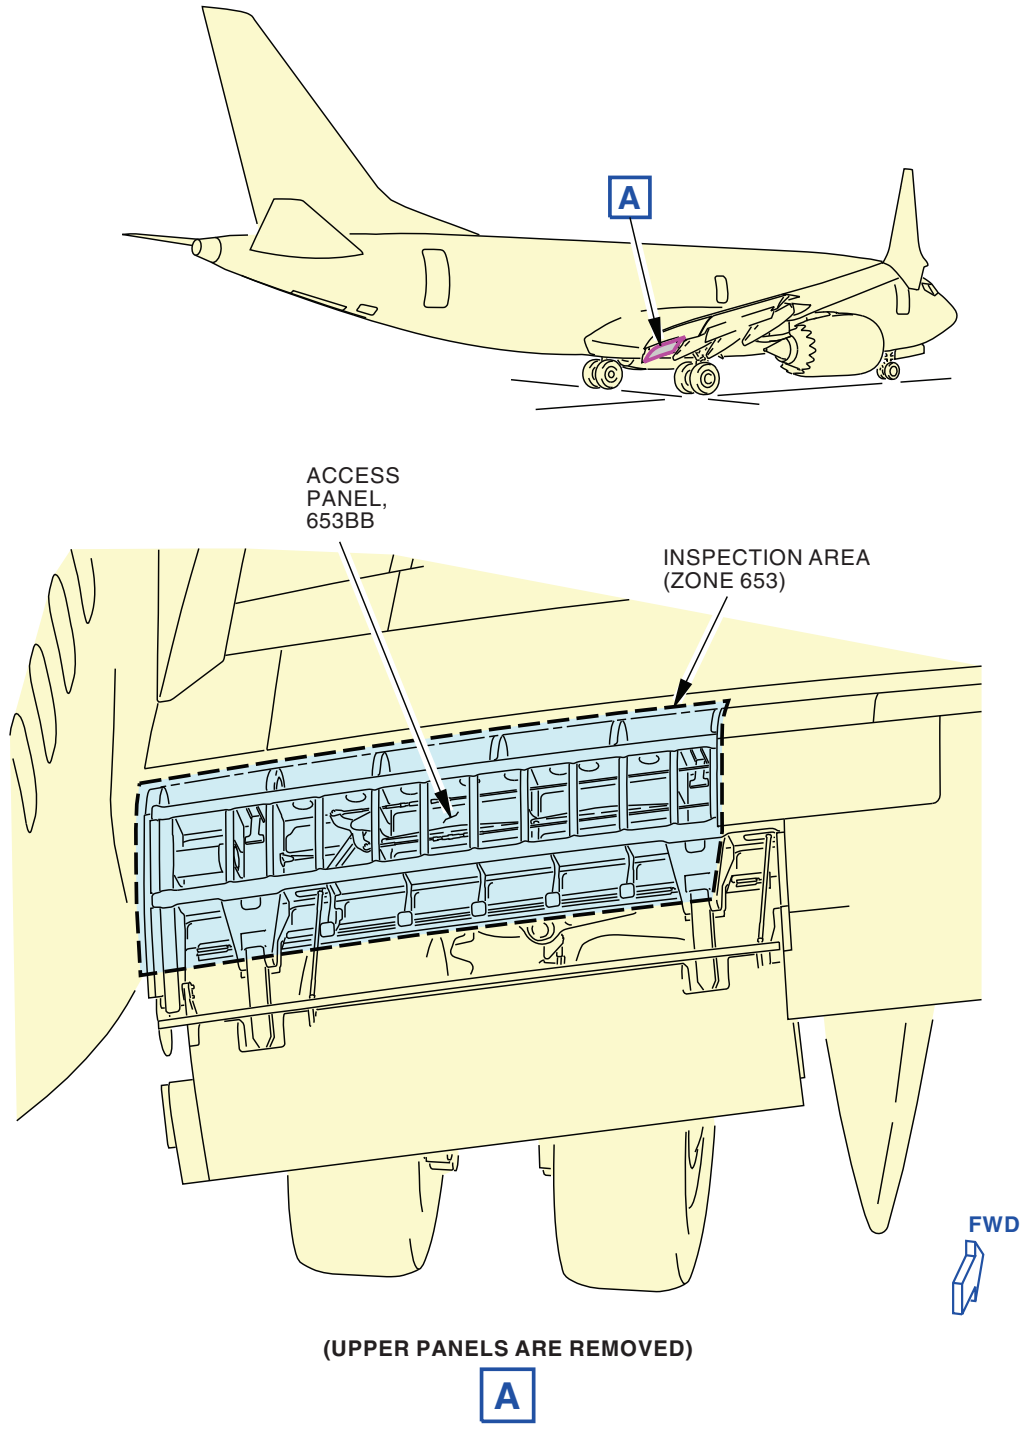

Inboard Trailing Edge Main Flap - Right Wing General Visual (Internal)
Figure 230/05-41-06-990-829

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-830

31. EXTERNAL - ZONAL (GVI): Rear Spar to Trailing Edge - Outboard of Inboard Flap - Inboard of Fixed Trailing Edge - Right Wing

(Figure 231)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
661	Right Wing - Rear Spar to Trailing Edge, Outboard of Inboard Flap, Inboard of Fixed Trailing Edge

D. Zonal Inspection

NOTE: Flaps down, spoilers raised.

SUBTASK 05-41-06-210-030

(1) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.


(2) Perform an external zonal inspection (GVI) of the Rear Spar to Trailing Edge - Outboard of Inboard Flap - Inboard of Fixed Trailing Edge - Right Wing. (EZAP)

SUBTASK 05-41-06-910-007

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

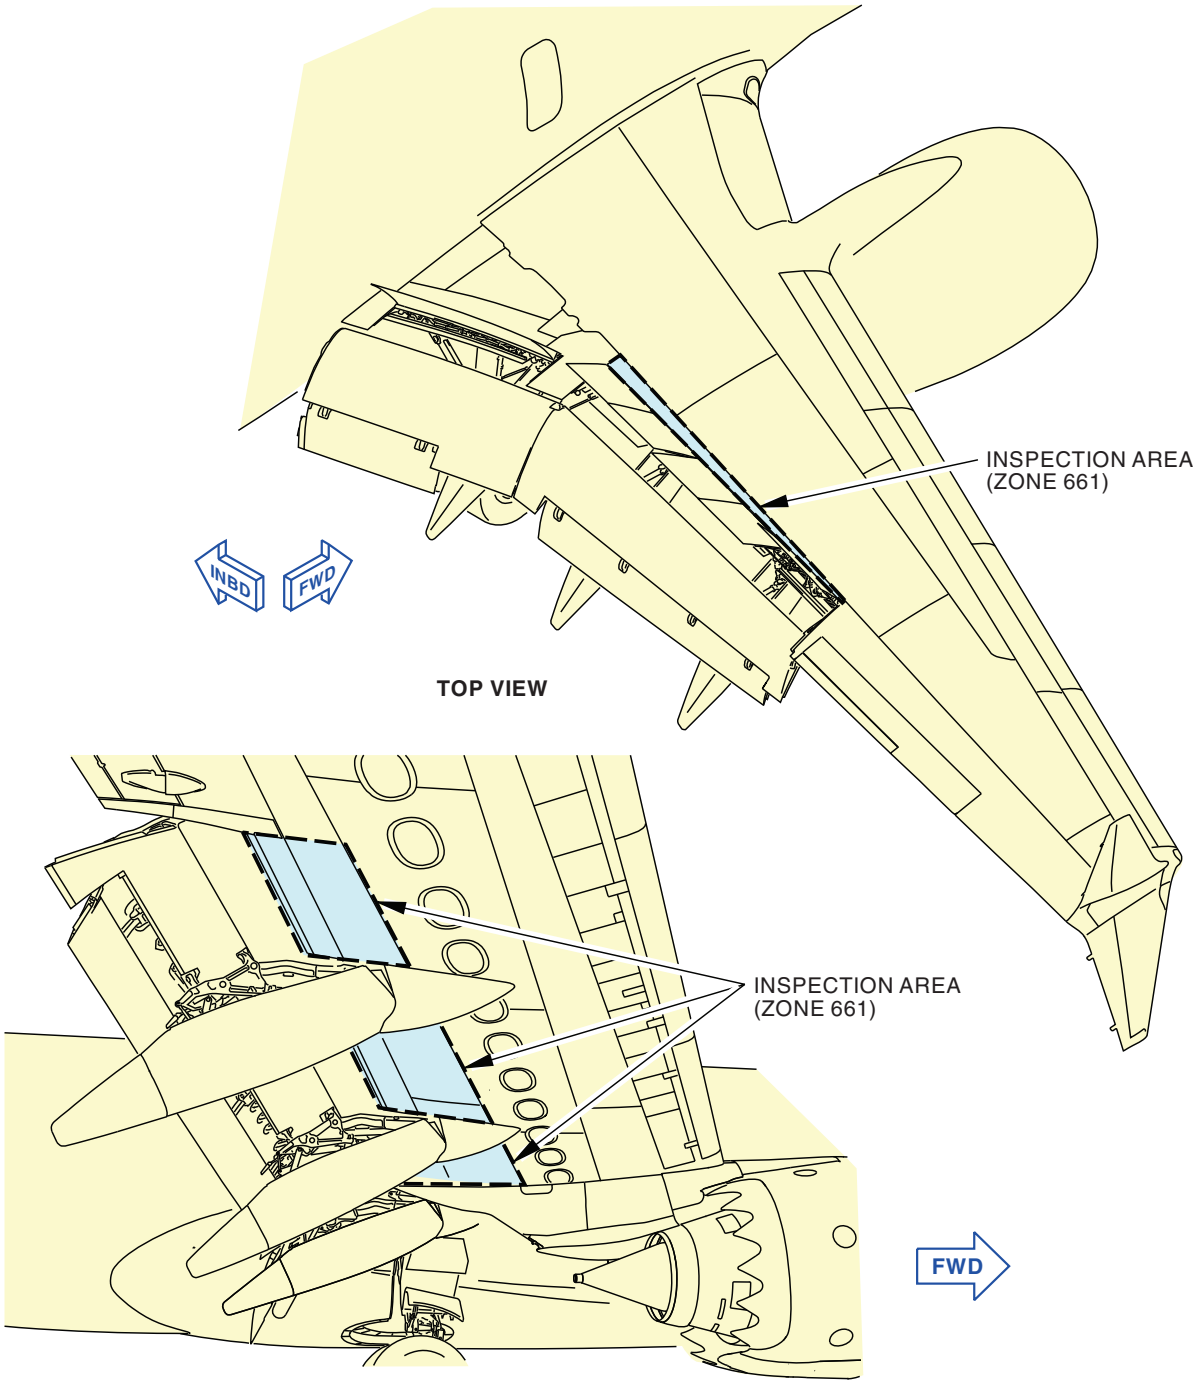

Rear Spar to Trailing Edge (Outboard of Inboard Flap and Inboard of Fixed Trailing Edge) - Right Wing
Figure 231/05-41-06-990-830

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-831

32. EXTERNAL - ZONAL (GVI): Spoilers No. 8, 9, 10, 11, 12 - Right Wing

(Figure 232)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
662	Right Wing - Spoiler No. 8
663	Right Wing - Spoiler No. 9
664	Right Wing - Spoiler No. 10
665	Right Wing - Spoiler No. 11
666	Right Wing - Spoiler No. 12

B. Zonal Inspection


NOTE: Spoilers Raised

SUBTASK 05-41-06-210-031

(1) Perform an external zonal inspection (GVI) of Spoilers No. 8, 9, 10, 11, 12 - Right Wing.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

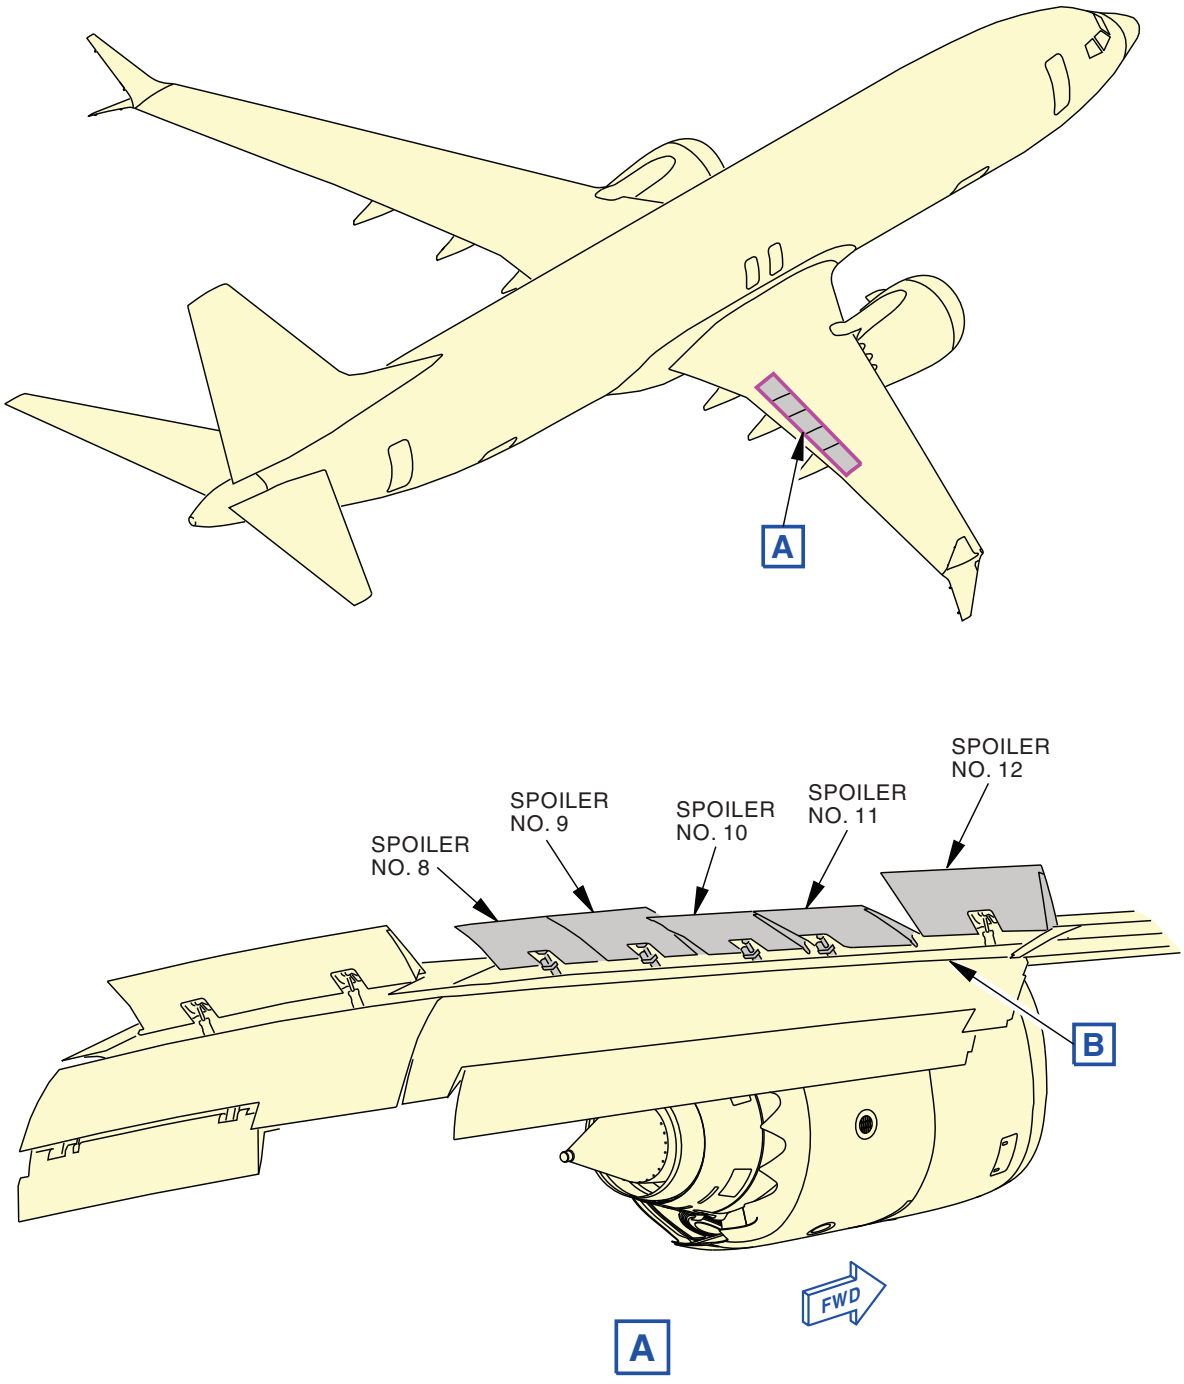

2410290 S00061525262_V2

Outboard Spoiler No. 8 through 12 General Visual (External)
Figure 232/05-41-06-990-831 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

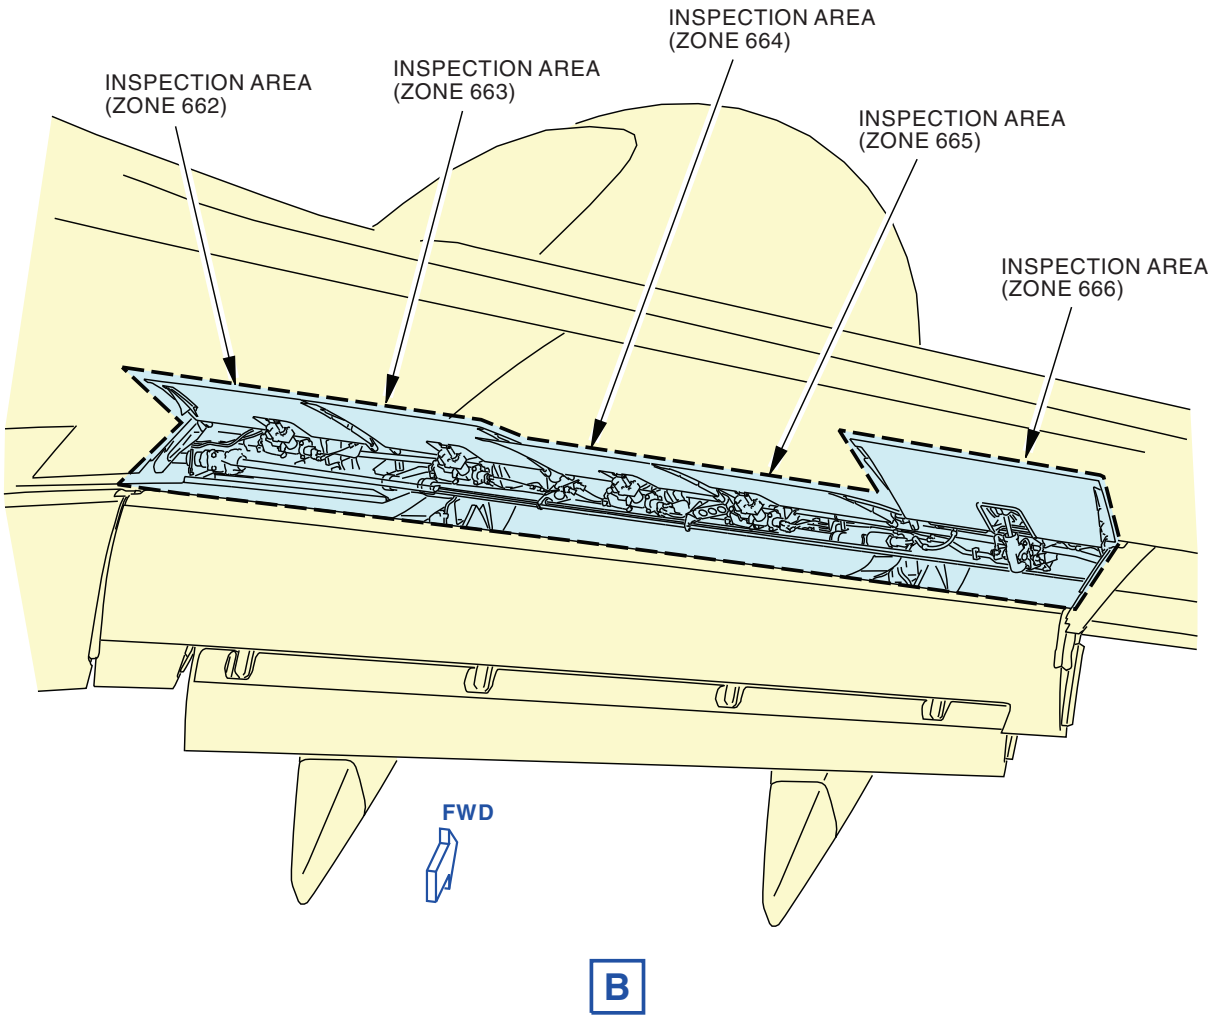

2410291 S00061525263_V1

Outboard Spoiler No. 8 through 12 General Visual (External)
Figure 232/05-41-06-990-831 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-832

33. EXTERNAL - ZONAL (GVI): Outboard Flaps - Right Wing

(Figure 233)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
667	Right Wing - Outboard Flap

B. Zonal Inspection


NOTE: Flaps extended.

SUBTASK 05-41-06-210-032

(1) Perform an external zonal inspection (GVI) of the Outboard Flaps - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

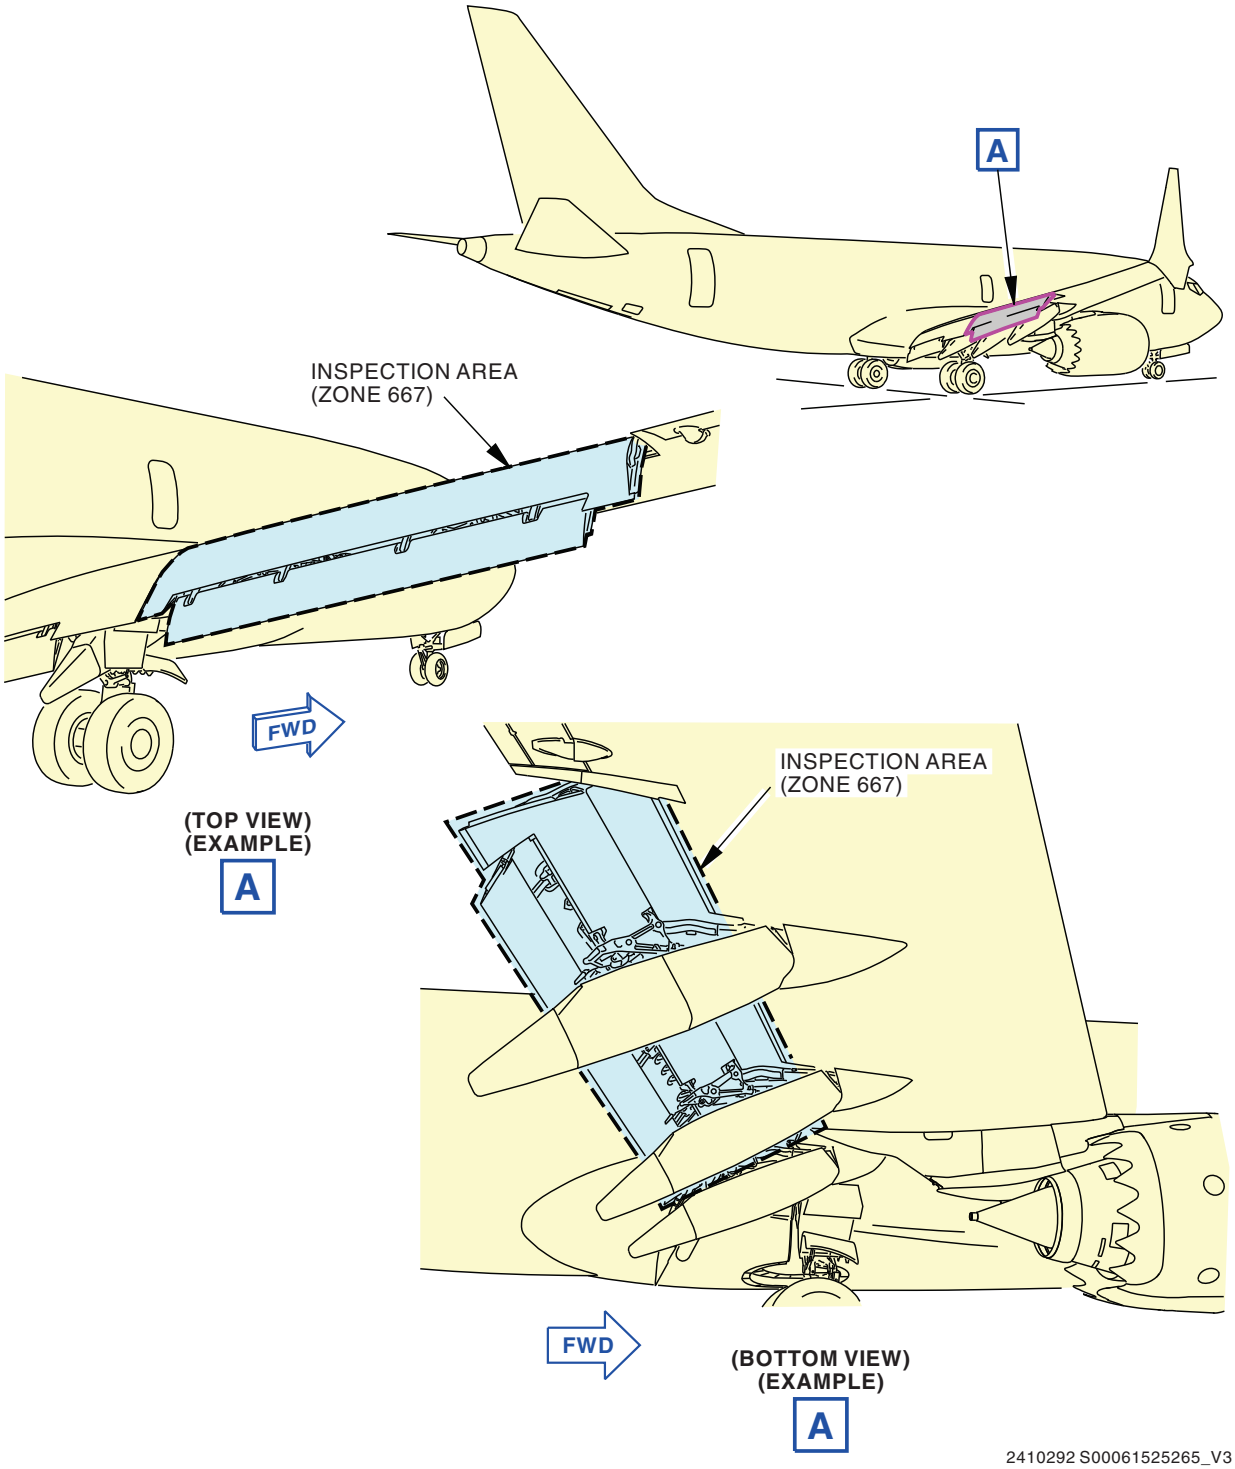

Outboard Flap - Right Wing General Visual (External)
Figure 233/05-41-06-990-832

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-833

34. EXTERNAL - ZONAL (GVI): Fixed Trailing Edge - Right Wing

(Figure 234)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
671	Right Wing - Fixed Trailing Edge


B. Zonal Inspection

SUBTASK 05-41-06-210-033

(1) Perform an external zonal inspection (GVI) of the Fixed Trailing Edge - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

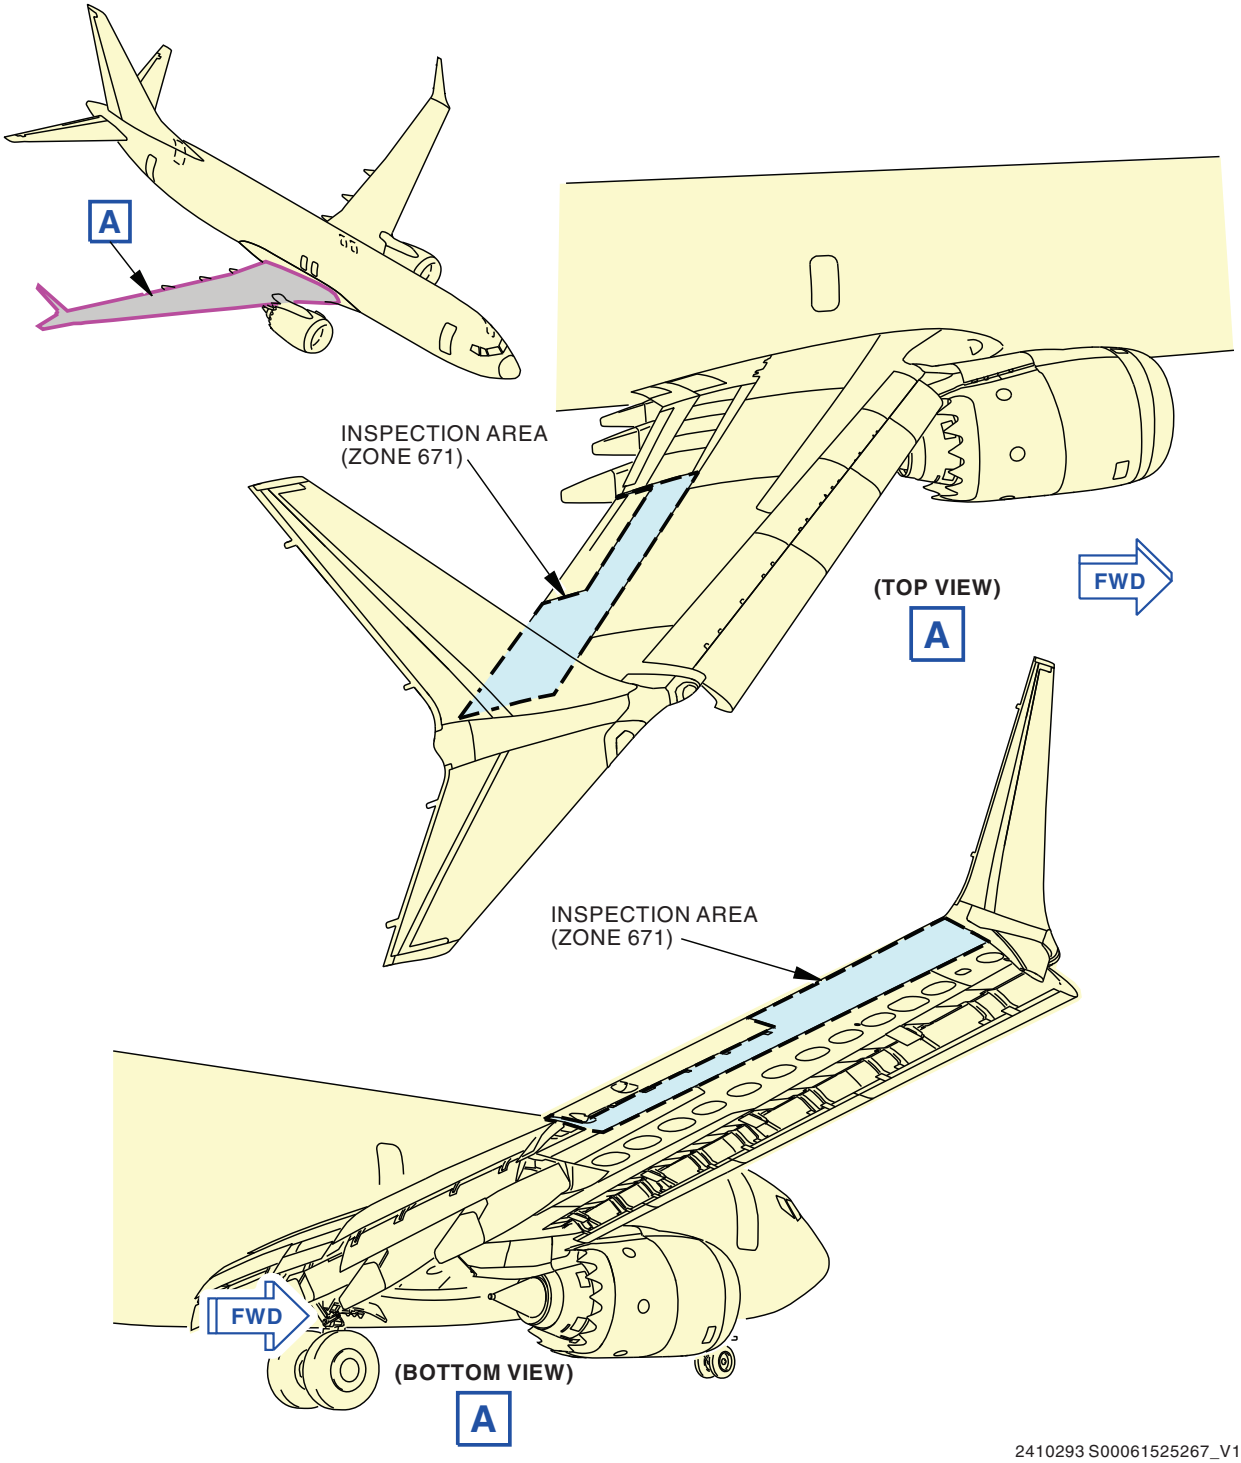

Fixed Trailing Edge - Right Wing General Visual (External)
Figure 234/05-41-06-990-833

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-834

35. INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Right Wing

(Figure 235)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
671	Right Wing - Fixed Trailing Edge

B. Access Panels

Number	Name/Location
671AB	Lower Outboard Fixed Trailing Edge Access Panel
671AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
671BB	Lower Outboard Fixed Trailing Edge Access Panel
671BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
671CB	Lower Outboard Fixed Trailing Edge Access Panel
671DB	Lower Outboard Fixed Trailing Edge Access Panel
671EB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel
671FB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel

C. Zonal Inspection

SUBTASK 05-41-06-010-010

(1) Open these access panels:

Number	Name/Location
671AB	Lower Outboard Fixed Trailing Edge Access Panel
671AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
671BB	Lower Outboard Fixed Trailing Edge Access Panel
671BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
671CB	Lower Outboard Fixed Trailing Edge Access Panel
671DB	Lower Outboard Fixed Trailing Edge Access Panel
671EB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel
671FB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel

SUBTASK 05-41-06-210-034

(2) Perform an internal zonal inspection (GVI) of the Fixed Trailing Edge - Right Wing.


SUBTASK 05-41-06-410-010

(3) Close these access panels:

Number	Name/Location
671AB	Lower Outboard Fixed Trailing Edge Access Panel
671AT	Upper Outboard Fixed Trailing Edge, Quadrant Bolt Access Panel
671BB	Lower Outboard Fixed Trailing Edge Access Panel
671BT	Upper Outboard Fixed Trailing Edge, Pulley Bolt Access Panel
671CB	Lower Outboard Fixed Trailing Edge Access Panel
671DB	Lower Outboard Fixed Trailing Edge Access Panel
671EB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel
671FB	Lower Outboard Fixed Trailing Edge, Wedge Access Panel


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

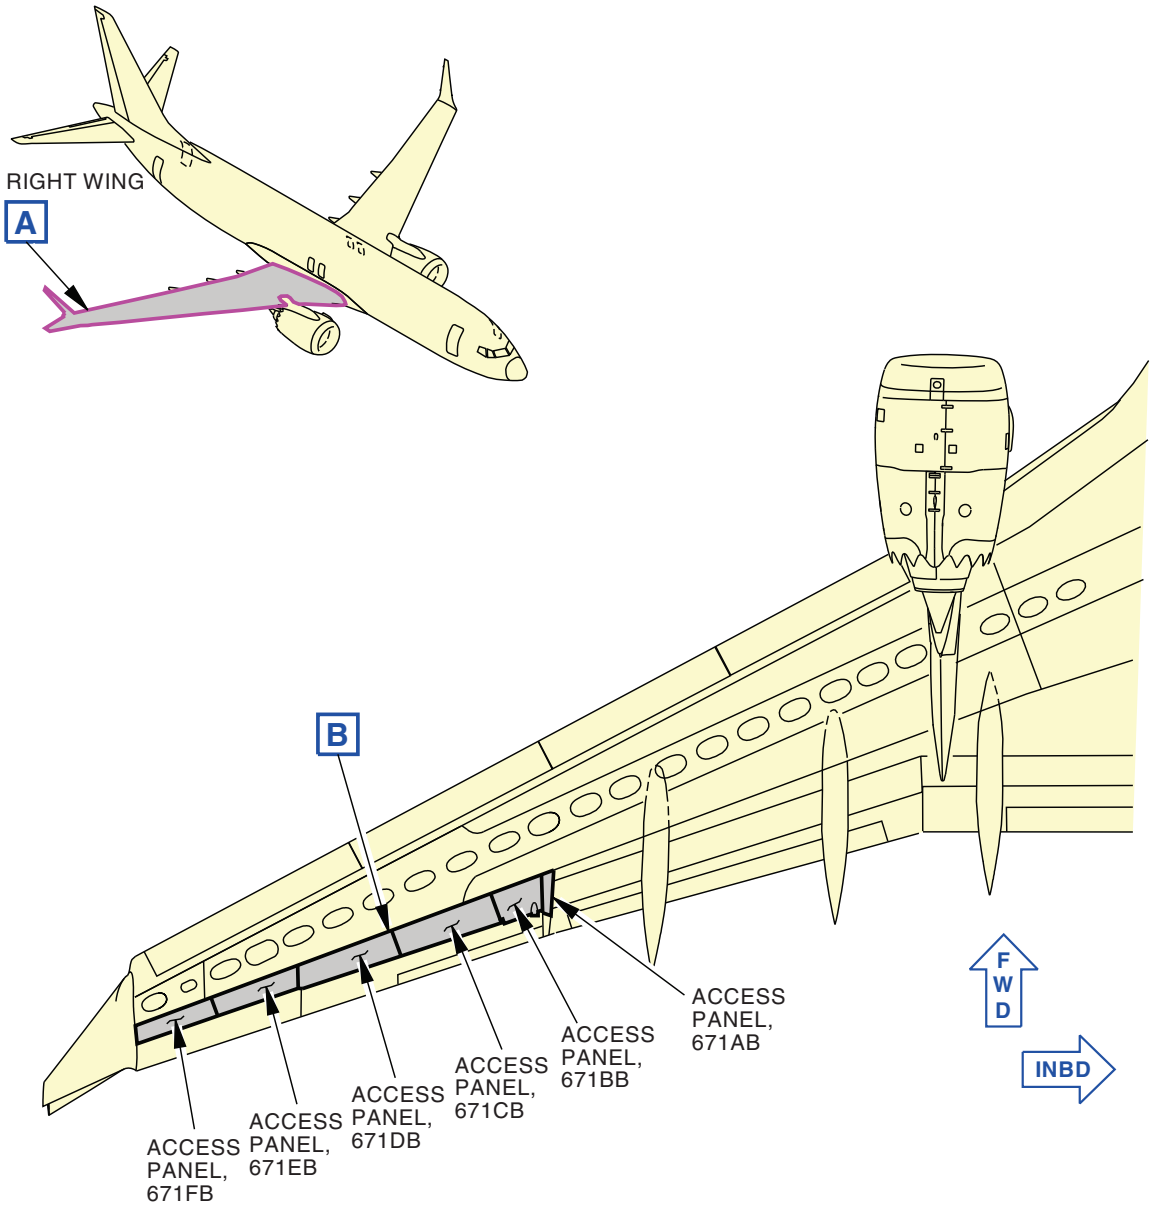

Fixed Trailing Edge - Right Wing General Visual (Internal)
Figure 235/05-41-06-990-834 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

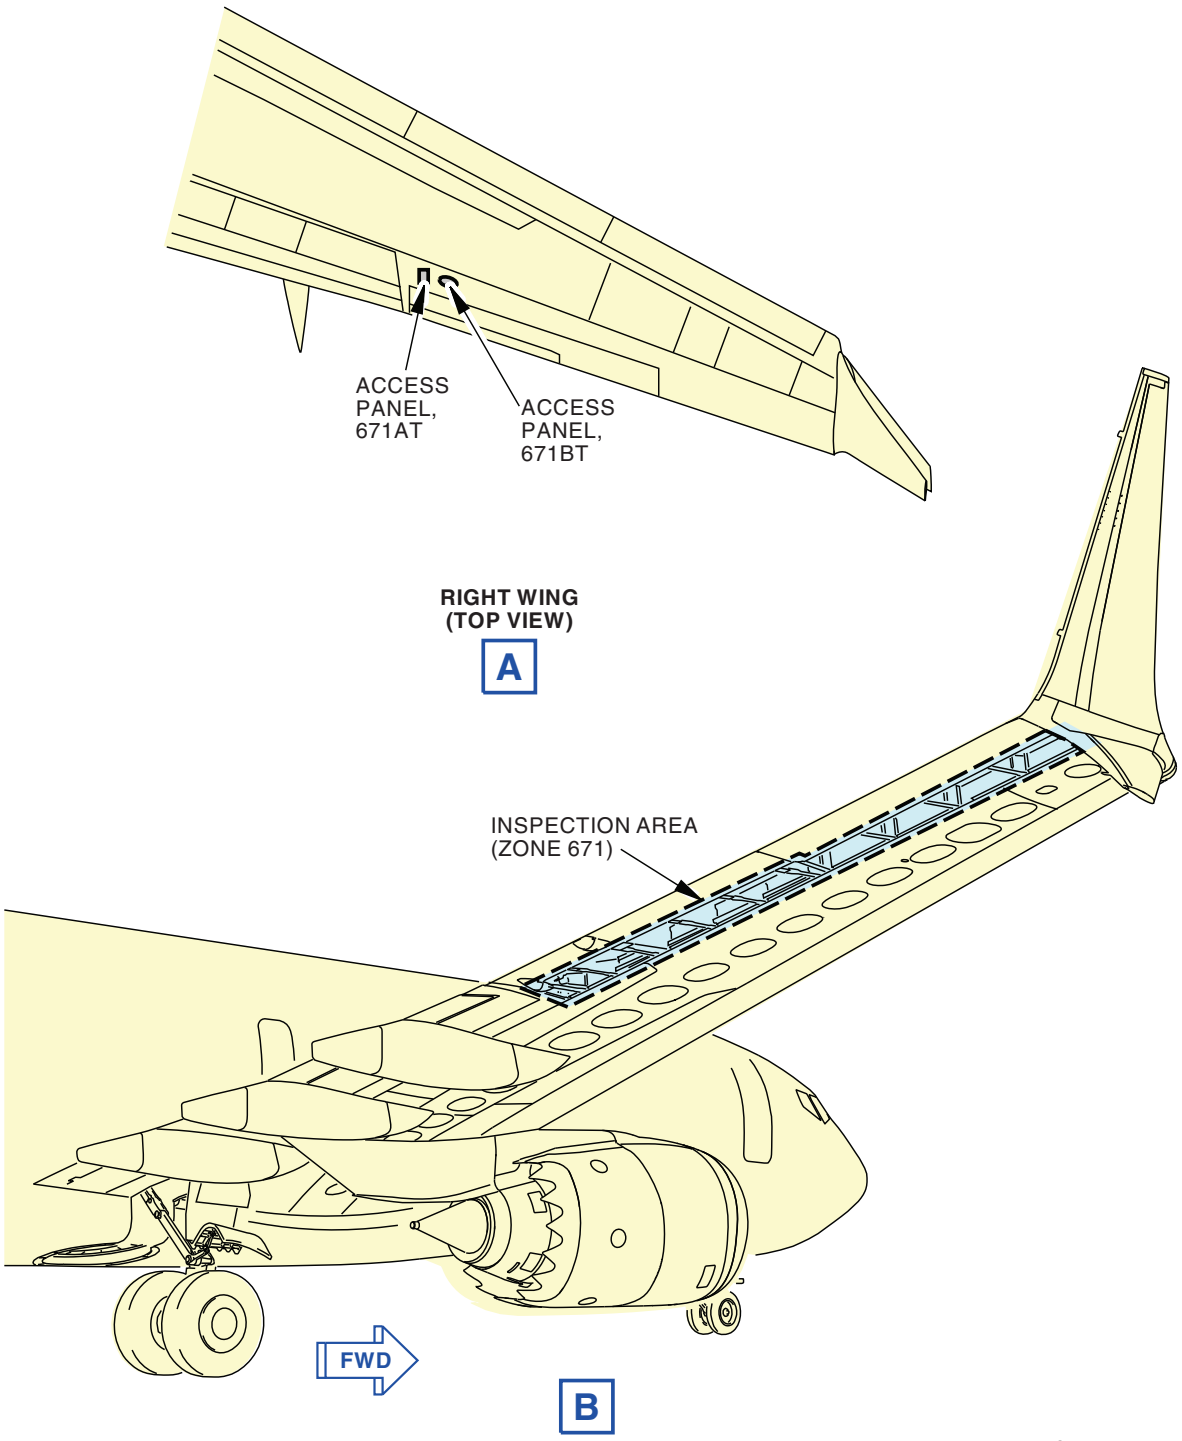

Fixed Trailing Edge - Right Wing General Visual (Internal)
Figure 235/05-41-06-990-834 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-06-210-835

36. INTERNAL - ZONAL (GVI): Fixed Trailing Edge - Right Wing

(Figure 236)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
671	Right Wing - Fixed Trailing Edge

D. Access Panels

Number	Name/Location
671AB	Lower Outboard Fixed Trailing Edge Access Panel
671BB	Lower Outboard Fixed Trailing Edge Access Panel

E. Zonal Inspection

SUBTASK 05-41-06-010-011

(1) Open these access panels:

Number	Name/Location
671AB	Lower Outboard Fixed Trailing Edge Access Panel
671BB	Lower Outboard Fixed Trailing Edge Access Panel

NOTE: Aileron control area only.

SUBTASK 05-41-06-210-035

(2) Do the zonal inspection following the procedures in Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.

(3) Perform an internal zonal inspection (GVI) of the Fixed Trailing Edge - Right Wing. (EZAP)

SUBTASK 05-41-06-910-008

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-41-06-410-011

(5) Close these access panels:

Number	Name/Location
671AB	Lower Outboard Fixed Trailing Edge Access Panel
671BB	Lower Outboard Fixed Trailing Edge Access Panel

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

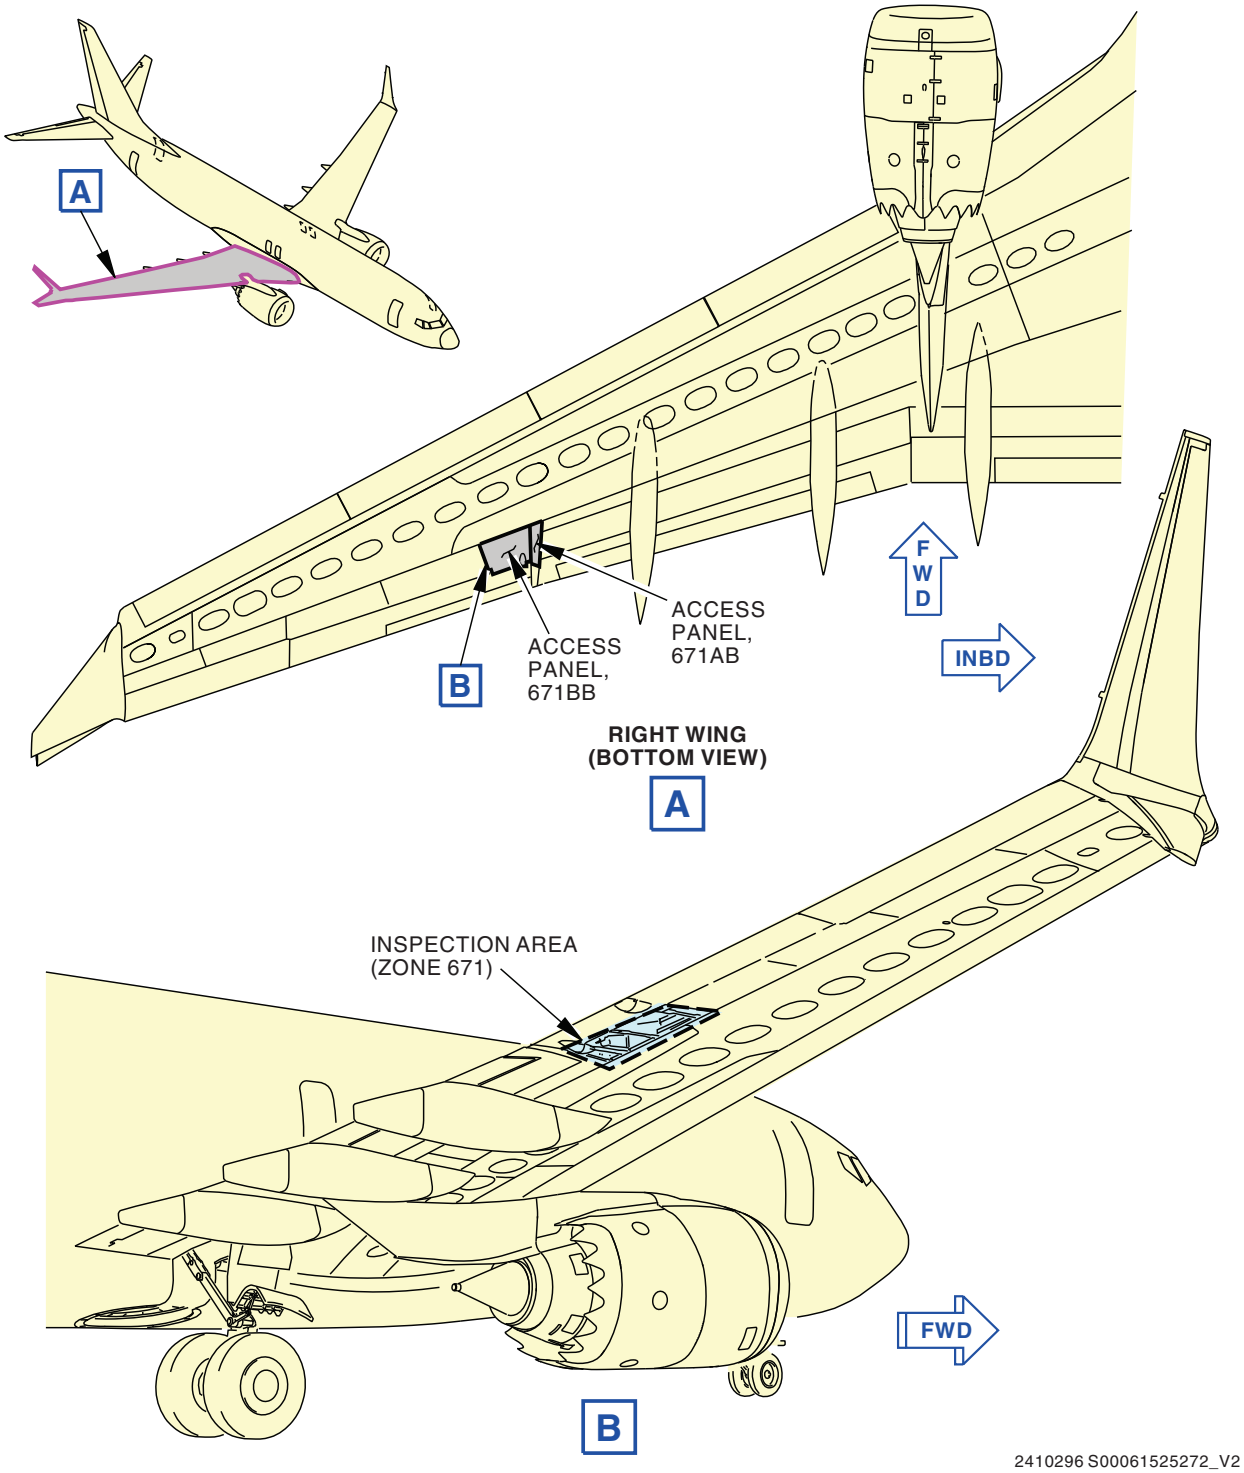

Fixed Trailing Edge - Right Wing General Visual (Internal)
Figure 236/05-41-06-990-835

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-06-210-836

37. EXTERNAL - ZONAL (GVI): Aileron - Right Wing

(Figure 237)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
672	Right Wing - Aileron


B. Zonal Inspection

SUBTASK 05-41-06-210-036

(1) Perform an external zonal inspection (GVI) of the Aileron - Right Wing.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

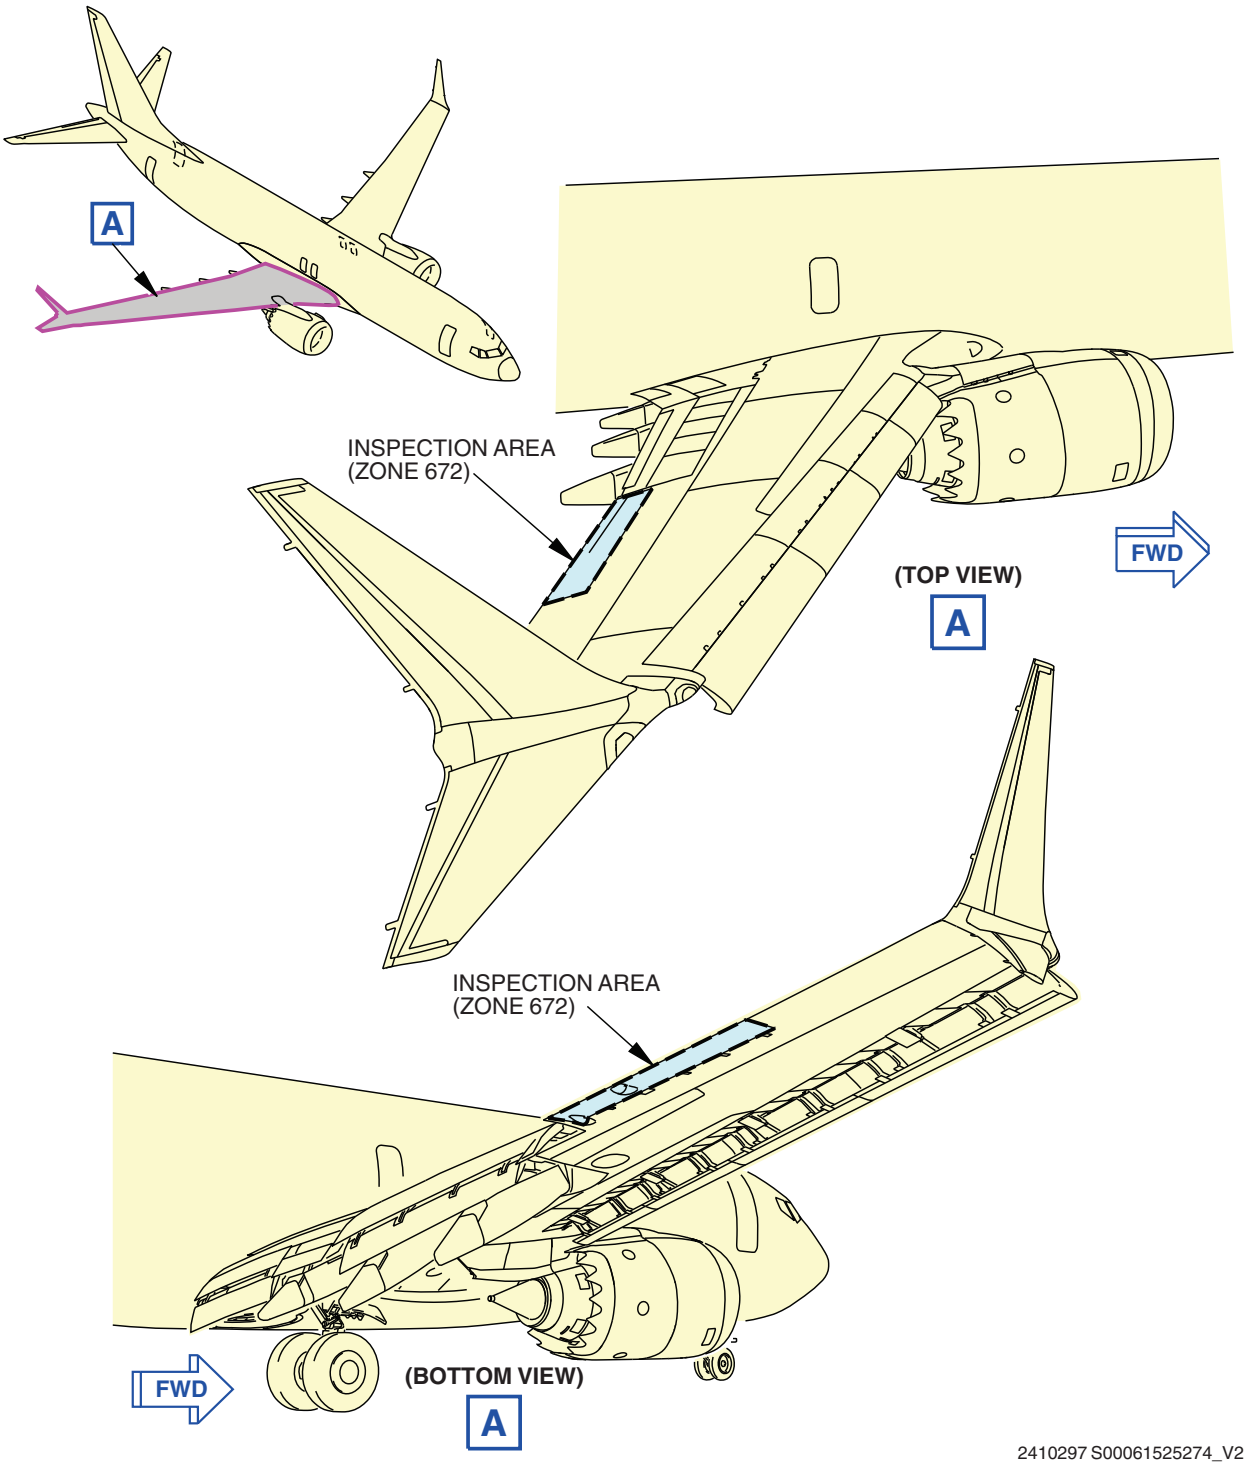

Aileron - Right Wing General Visual (External)
Figure 237/05-41-06-990-836

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-07-210-801

1. EXTERNAL - ZONAL (GVI): Nose Landing Gear and Landing Gear Doors (from Ground)

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
710	Subzone - Landing Gear: Nose Landing Gear and Landing Gear Doors


B. Zonal Inspection

SUBTASK 05-41-07-210-001

(1) Perform an external zonal inspection (GVI) of the Nose Landing Gear and Landing Gear Doors, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

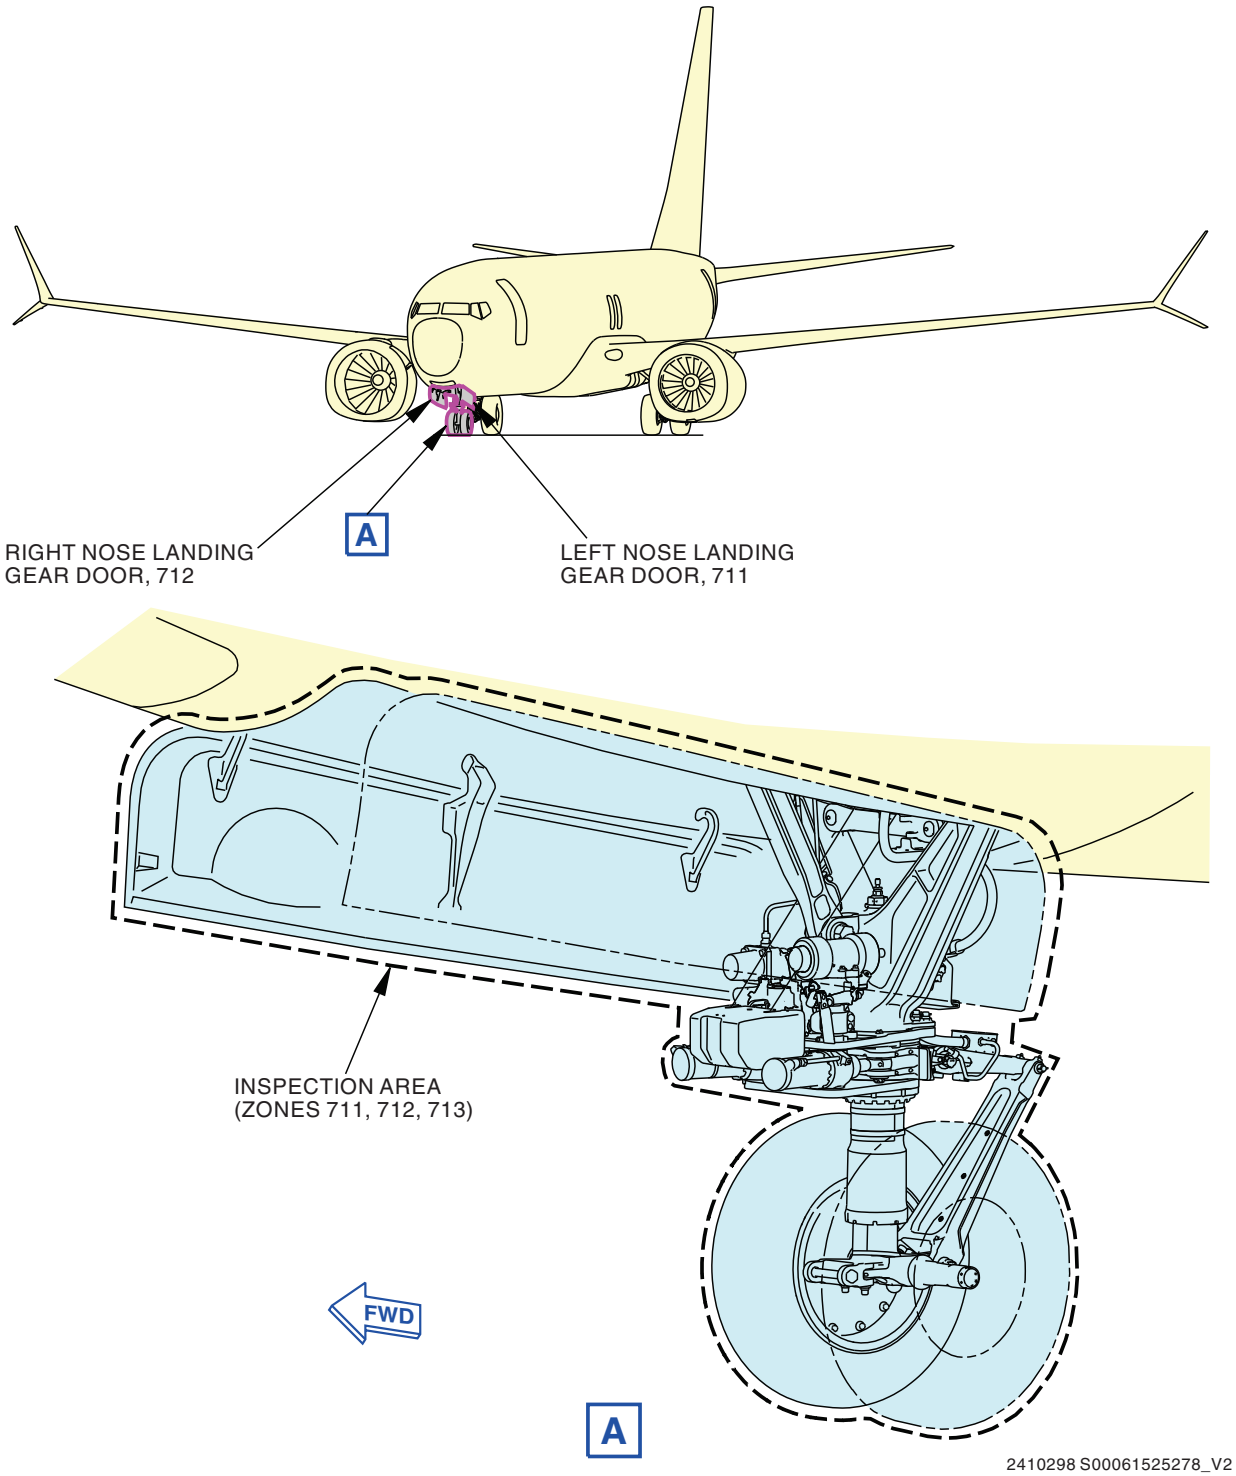

Nose Landing Gear and Landing Gear Doors General Visual (External)
Figure 201/05-41-07-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-07-210-806

2. EXTERNAL - ZONAL (GVI): Nose Landing Gear and Landing Gear Doors

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP - derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
711	Nose Landing Gear Door - Left
712	Nose Landing Gear Door - Right
713	Nose Landing Gear

D. Zonal Inspection

SUBTASK 05-41-07-210-006

(1) Do the zonal inspection following the procedures in the task: Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.


(2) Perform an external zonal inspection (GVI) of the Nose Landing Gear and Landing Gear Doors. (EZAP)

SUBTASK 05-41-07-910-004

(3) Refer to the task: Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

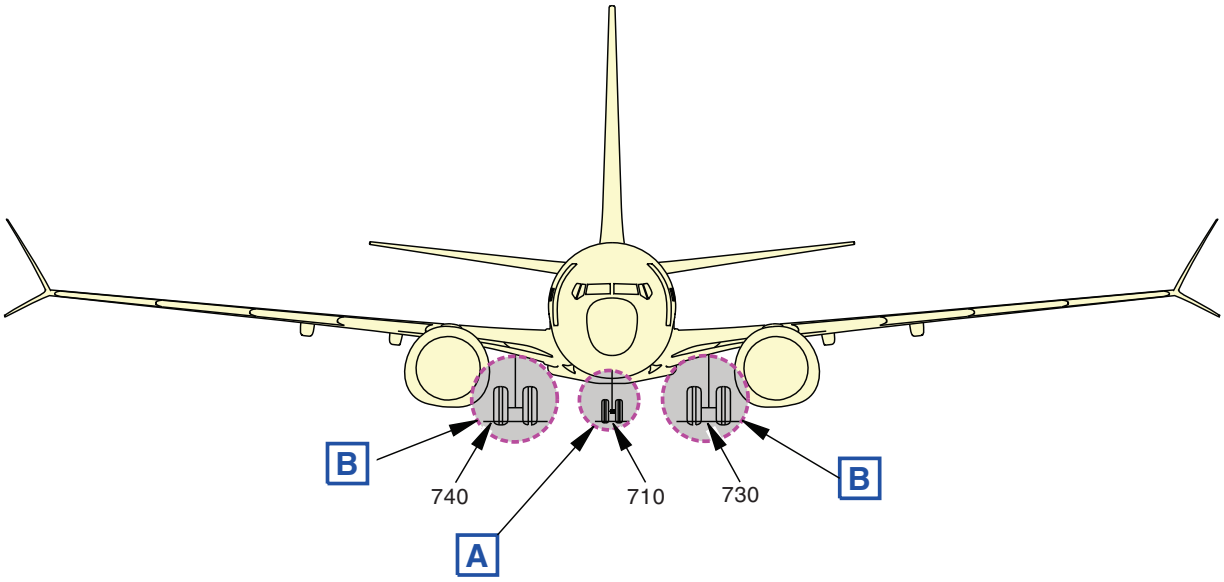


**NOSE AND MAIN LANDING GEAR
AND LANDING GEAR DOORS**

710 - NOSE LANDING GEAR AND LANDING GEAR DOORS
730 - LEFT MAIN LANDING GEAR AND LANDING GEAR DOORS
740 - RIGHT MAIN LANDING GEAR AND LANDING GEAR DOORS

2546046 S0000599253_V1


**Nose Landing Gear and Landing Gear Doors General Visual (External)
Figure 202/05-41-07-990-806 (Sheet 1 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

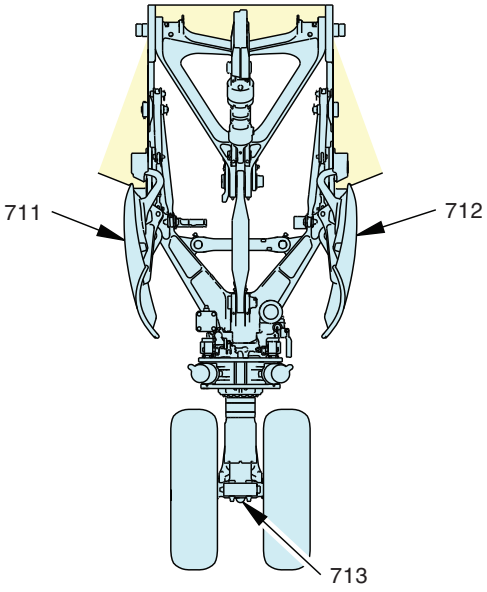

NOSE LANDING GEAR
(VIEW IN THE AFT DIRECTION)

A

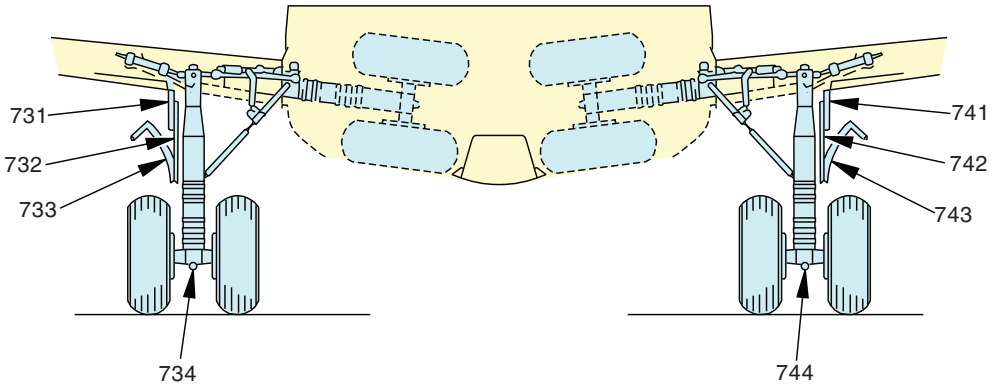

MAIN LANDING GEAR
(VIEW IN THE FORWARD DIRECTION)

B

2546047 S0000599254_V2

Nose Landing Gear and Landing Gear Doors General Visual (External)
Figure 202/05-41-07-990-806 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-07-210-802

3. EXTERNAL - ZONAL (GVI): Left Main Landing Gear and Landing Gear Doors (From Ground)

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
731	Left Main Landing Gear - Outboard Door
732	Left Main Landing Gear - Center Door
733	Left Main Landing Gear - Inboard Door
734	Left Main Landing Gear


B. Zonal Inspection

SUBTASK 05-41-07-210-002

(1) Perform an external zonal inspection (GVI) of the Left Main Landing Gear and Landing Gear Doors, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

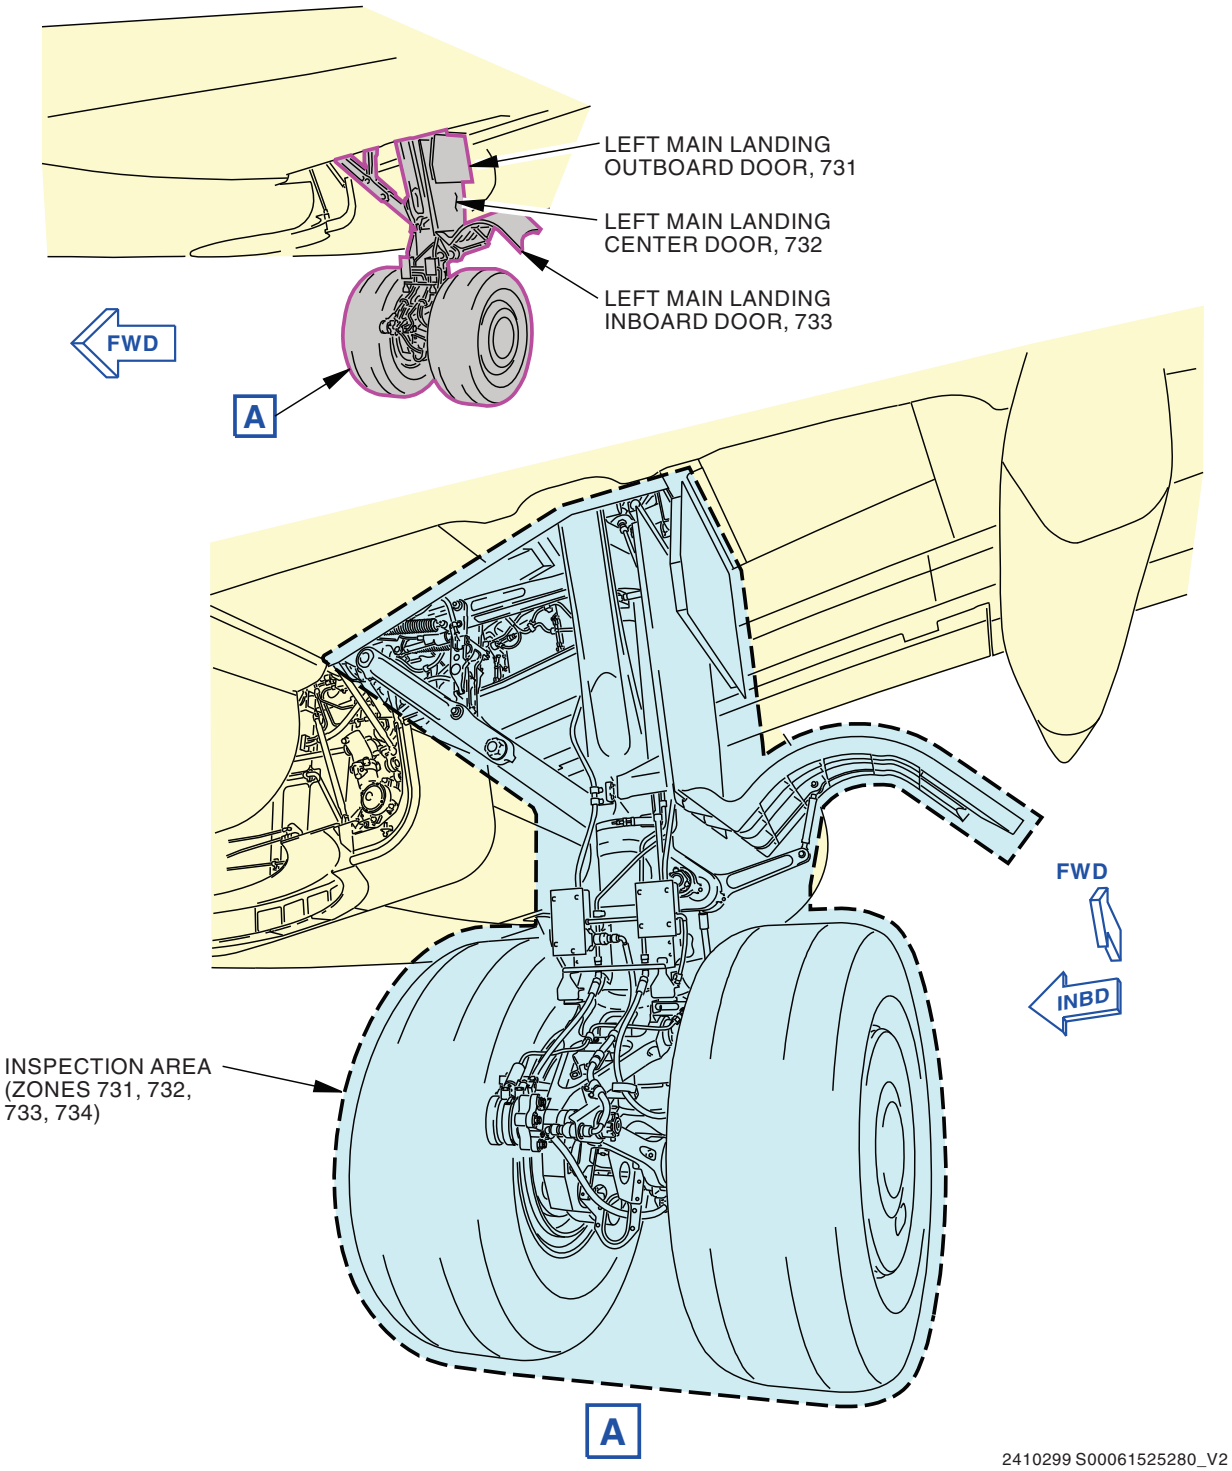

Left Main Landing Gear and Landing Gear Doors General Visual (External)
Figure 203/05-41-07-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-07-210-803

4. EXTERNAL - ZONAL (GVI): Left Main Landing Gear and Landing Gear Doors

(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
731	Left Main Landing Gear - Outboard Door
732	Left Main Landing Gear - Center Door
733	Left Main Landing Gear - Inboard Door
734	Left Main Landing Gear

D. Zonal Inspection

SUBTASK 05-41-07-210-003

(1) Do the zonal inspection following the procedures in task: Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.


(2) Perform an external zonal inspection (GVI) of the Left Main Landing Gear and Landing Gear Doors. (EZAP)

SUBTASK 05-41-07-910-002

(3) Refer to the task: Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

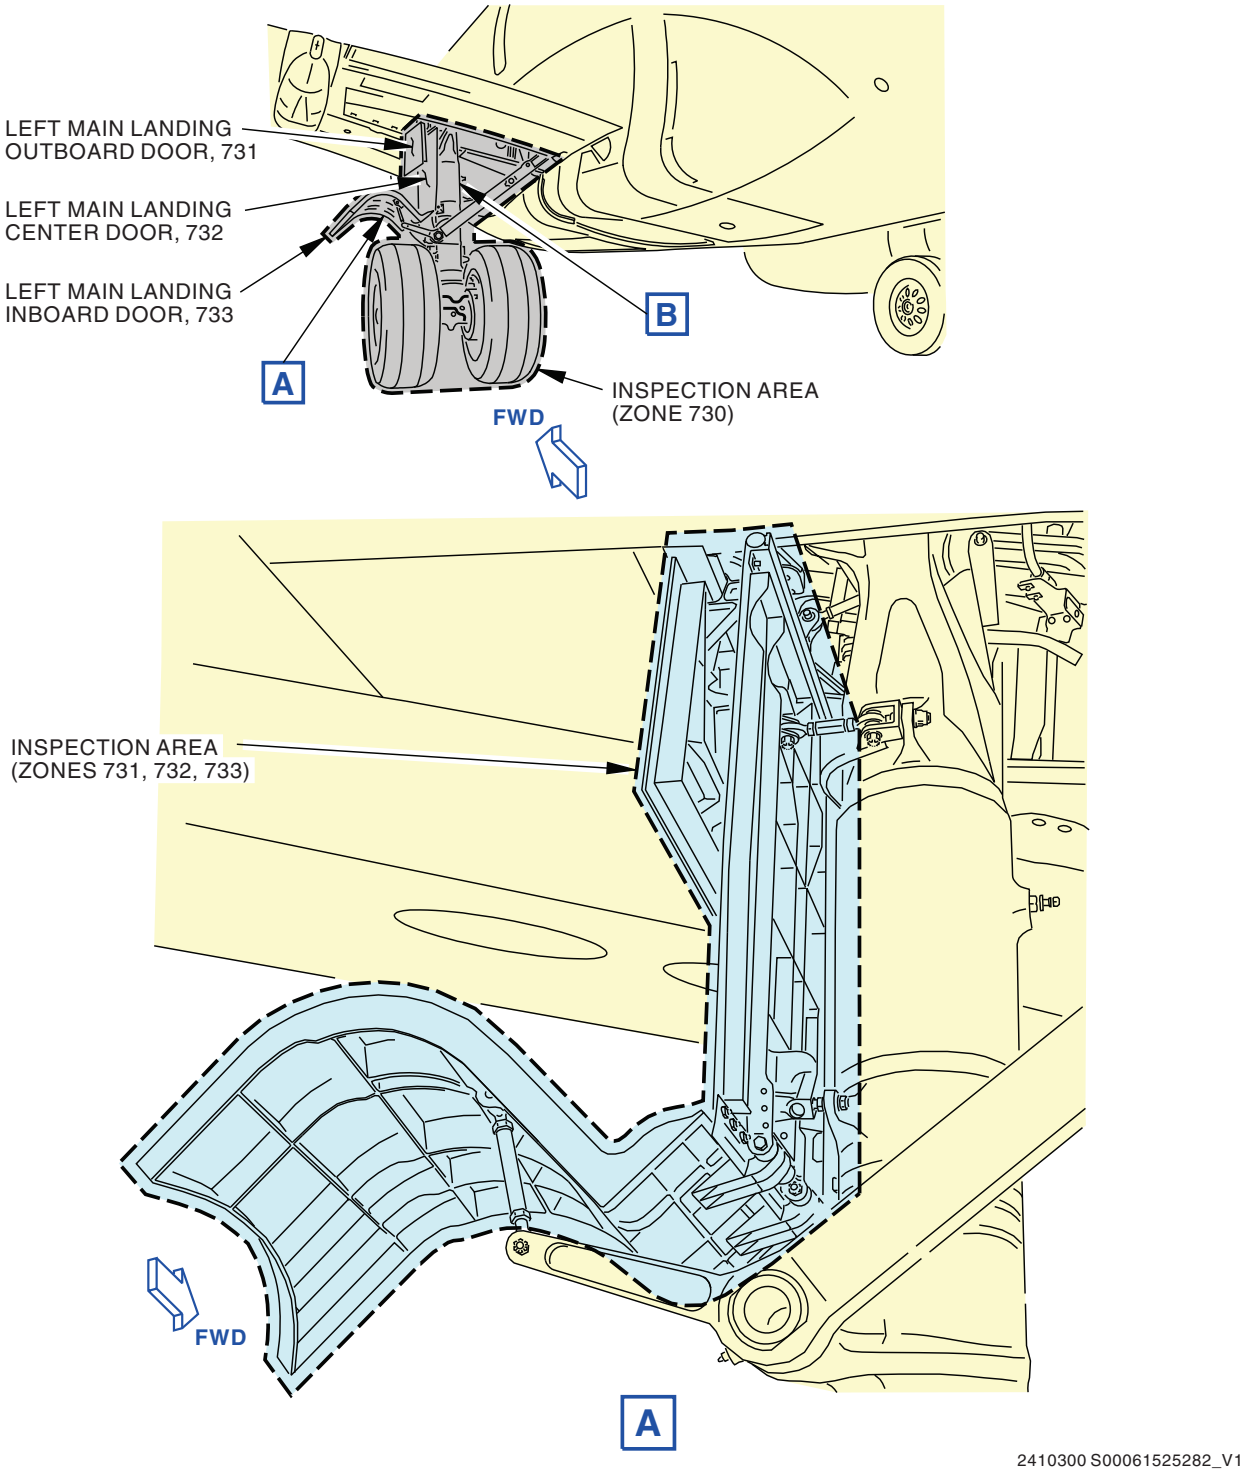

Landing Gear Doors - Left Main Landing Gear General Visual (External)
Figure 204/05-41-07-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

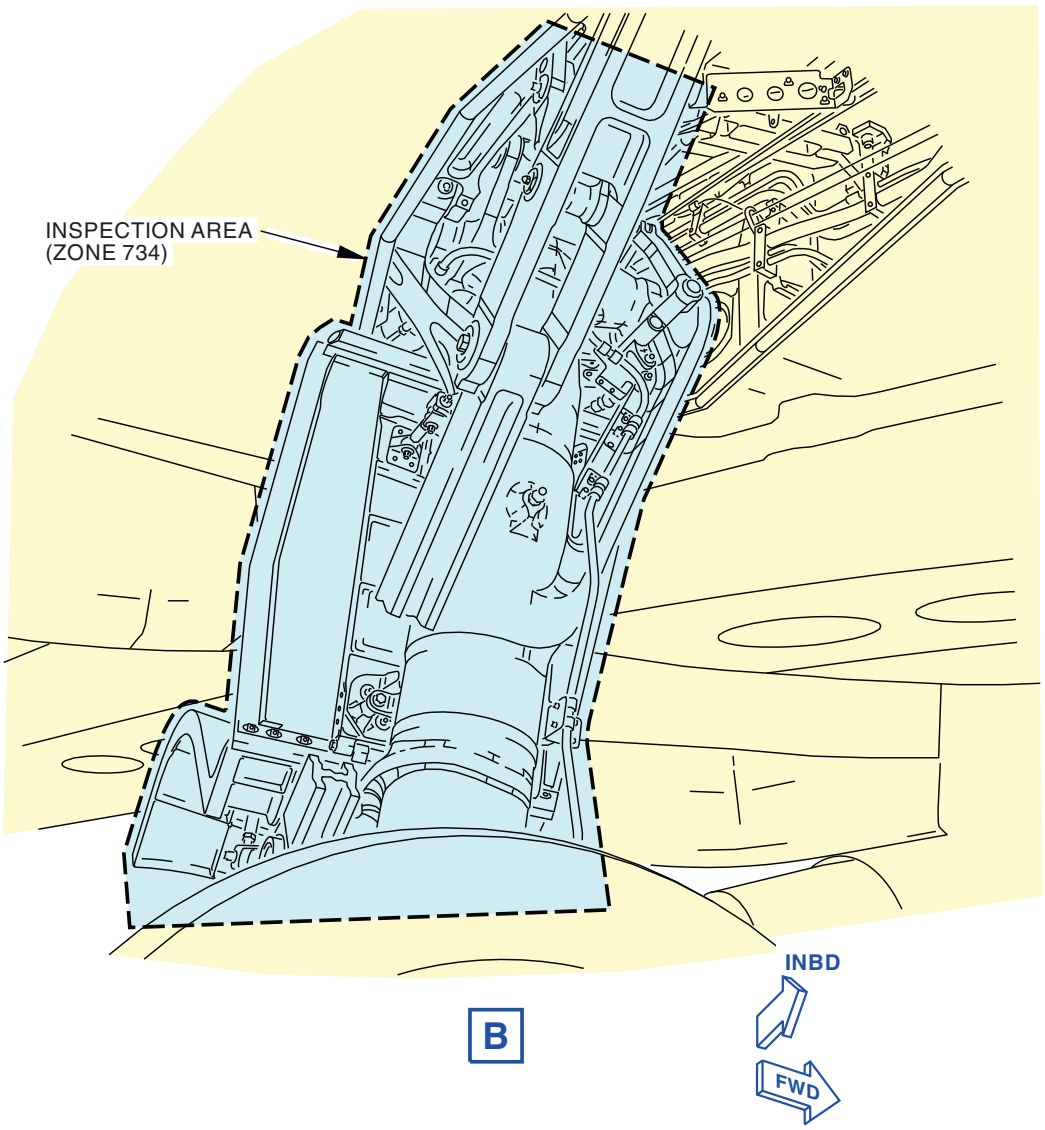

2410301 S00061525283_V1

Landing Gear Doors - Left Main Landing Gear General Visual (External)
Figure 204/05-41-07-990-803 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-07-210-804

5. EXTERNAL - ZONAL (GVI): Right Main Landing Gear and Landing Gear Doors (From Ground)

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
740	Subzone - Right Main Landing Gear and Landing Gear Doors


B. Zonal Inspection

SUBTASK 05-41-07-210-004

(1) Perform an external zonal inspection (GVI) of the Right Main Landing Gear and Landing Gear Doors, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

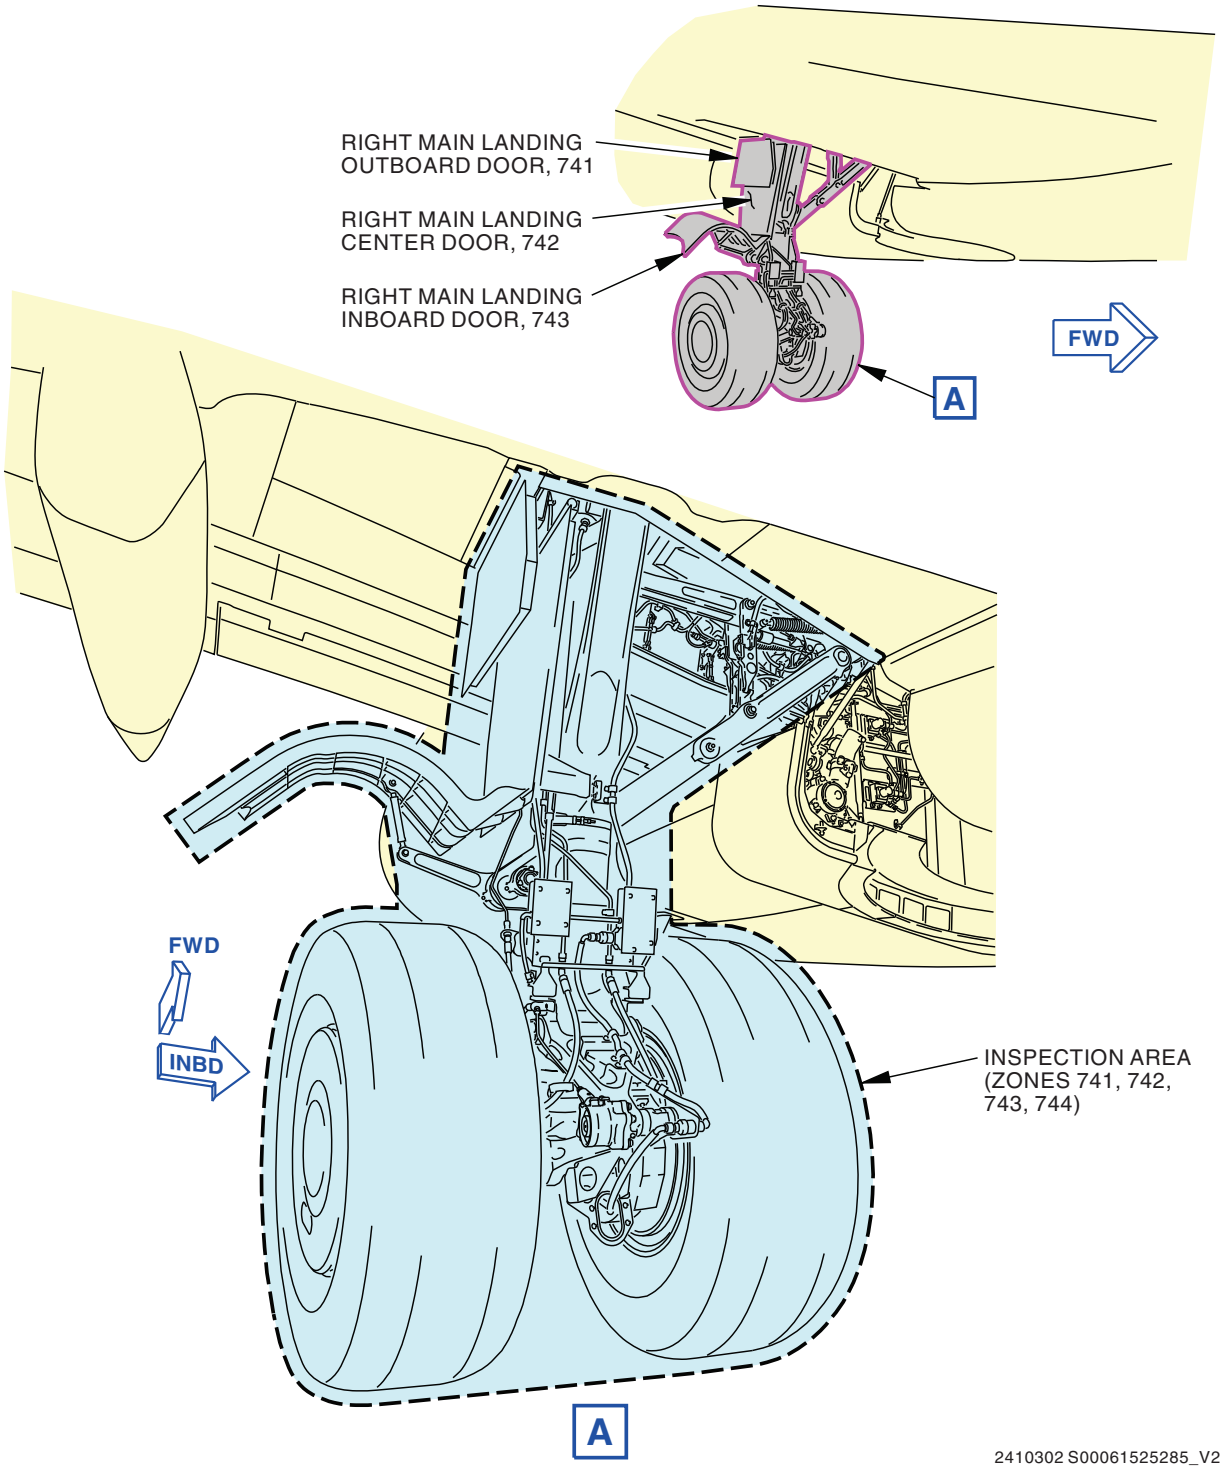

Right Main Landing Gear and Landing Gear Doors General Visual (External)
Figure 205/05-41-07-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-41-07-210-805

6. EXTERNAL - ZONAL (GVI): Right Main Landing Gear and Landing Gear Doors

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This Zonal inspection procedure satisfies the required EZAP-derived Zonal inspection requirement for this zone.

B. References

Reference	Title
05-00-00-910-802	Enhanced Zonal Inspection Program (EZAP) Precautions (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
741	Right Main Landing Gear - Outboard Door
742	Right Main Landing Gear - Center Door
743	Right Main Landing Gear - Inboard Door
744	Right Main Landing Gear

D. Zonal Inspection

SUBTASK 05-41-07-210-005

(1) Do the zonal inspection following the procedures in task: Enhanced Zonal Inspection Program (EZAP) Precautions, TASK 05-00-00-910-802.


(2) Perform an external zonal inspection (GVI) of the Right Main Landing Gear and Landing Gear Doors. (EZAP)

SUBTASK 05-41-07-910-003

(3) Refer to task: Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

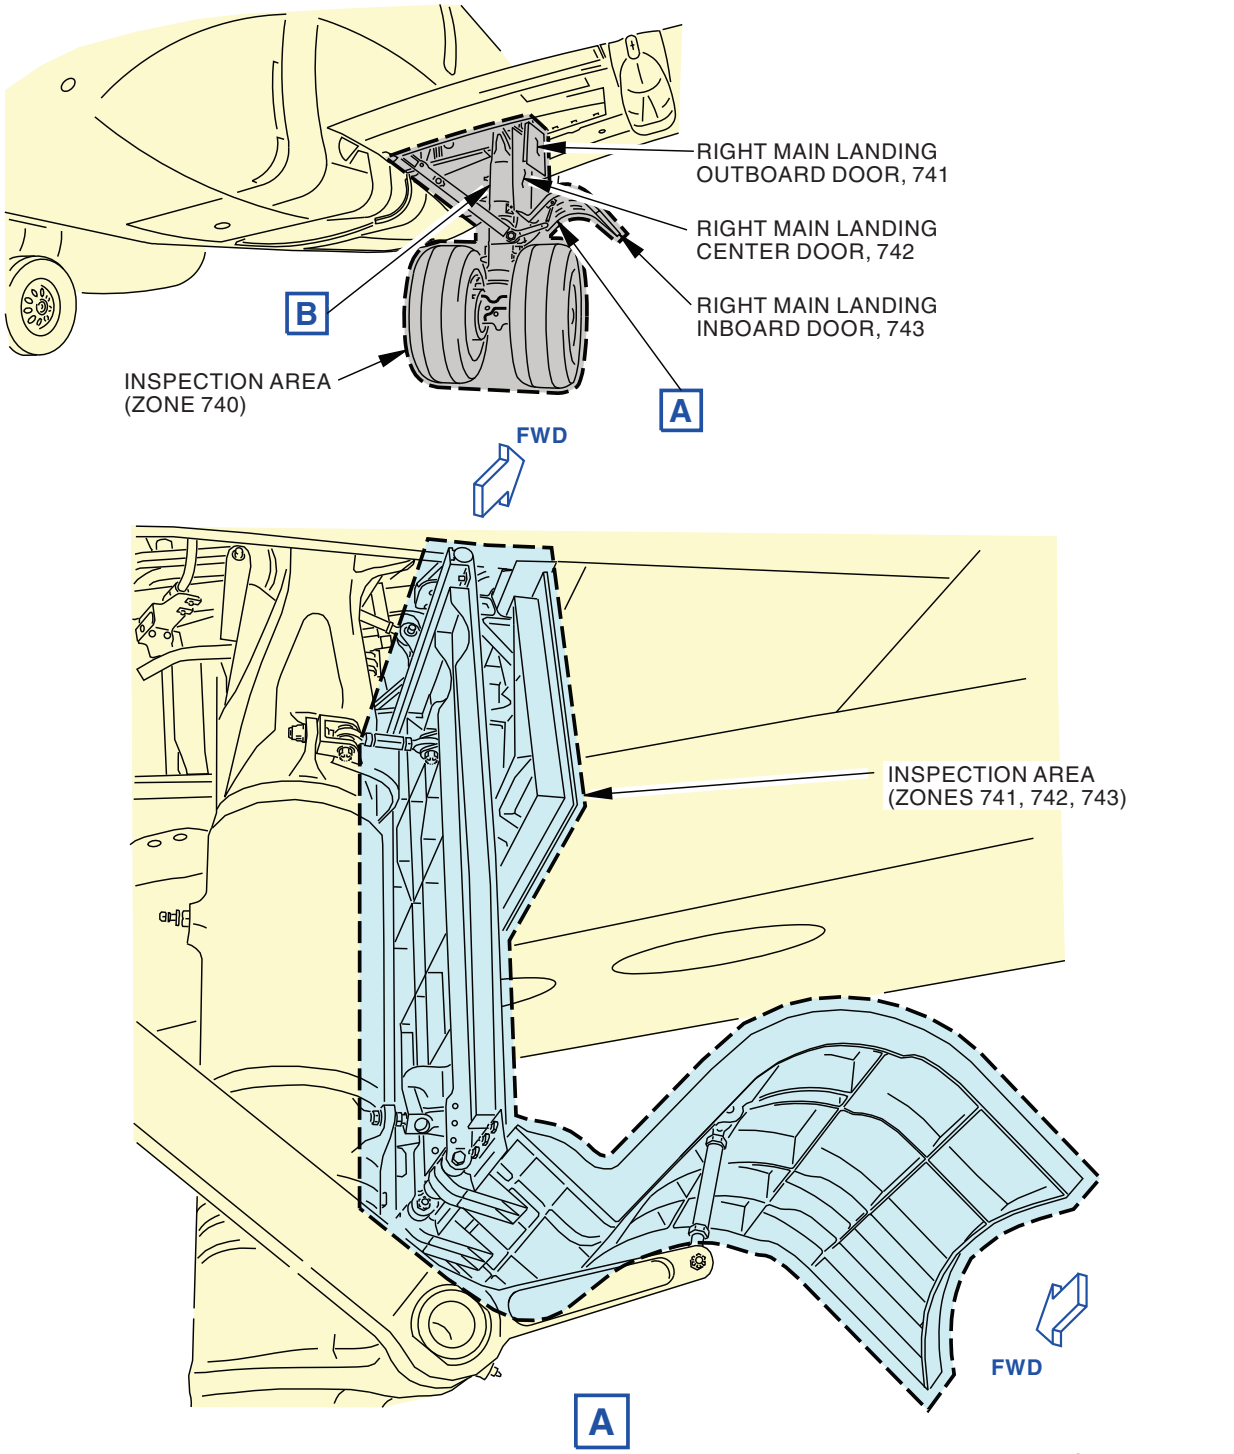

Landing Gear Doors - Right Main Landing Gear General Visual (External)
Figure 206/05-41-07-990-805 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

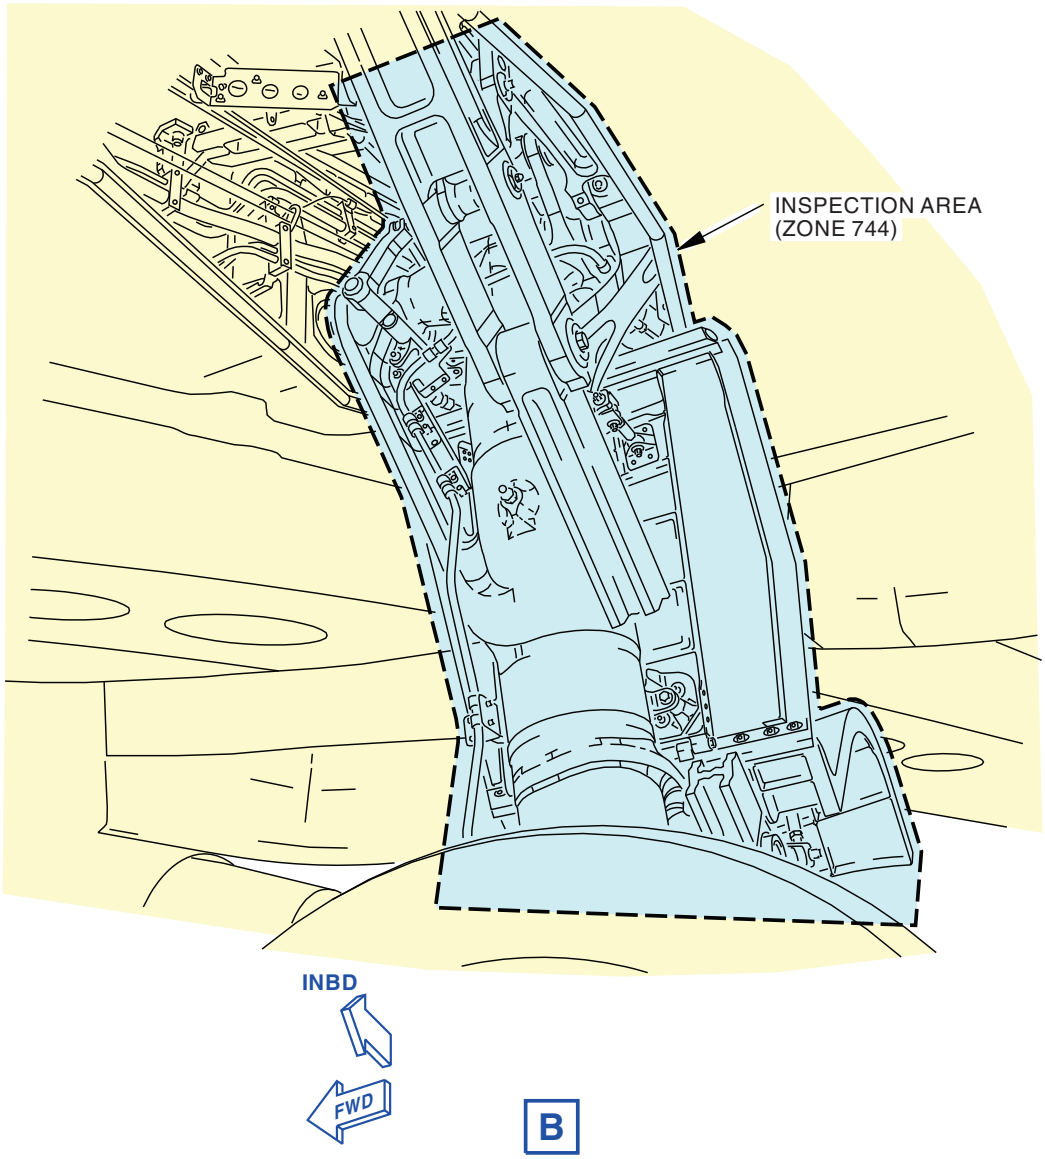

2410304 S00061525288_V1

Landing Gear Doors - Right Main Landing Gear General Visual (External)
Figure 206/05-41-07-990-805 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-801

1. EXTERNAL - ZONAL (GVI): Entry Doors, Service Doors, Automatic Overwing Exits, Mid-Exit Doors, and Cargo Doors

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
820	Doors - Lower Half of Fuselage - Right Side
830	Subzone - Passenger Compartment Doors, Left
840	Subzone - Passenger Compartment Doors, Right

B. Zonal Inspection


NOTE: Doors in closed position.

SUBTASK 05-41-08-210-001

(1) Perform an external zonal inspection (GVI) of the Entry Doors, Service Doors, Automatic Overwing Exits, Mid-Exit Doors, and Cargo Doors, as visible when viewed from the ground. Inspection is accomplished from the ground, without the use of stands or ladders.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

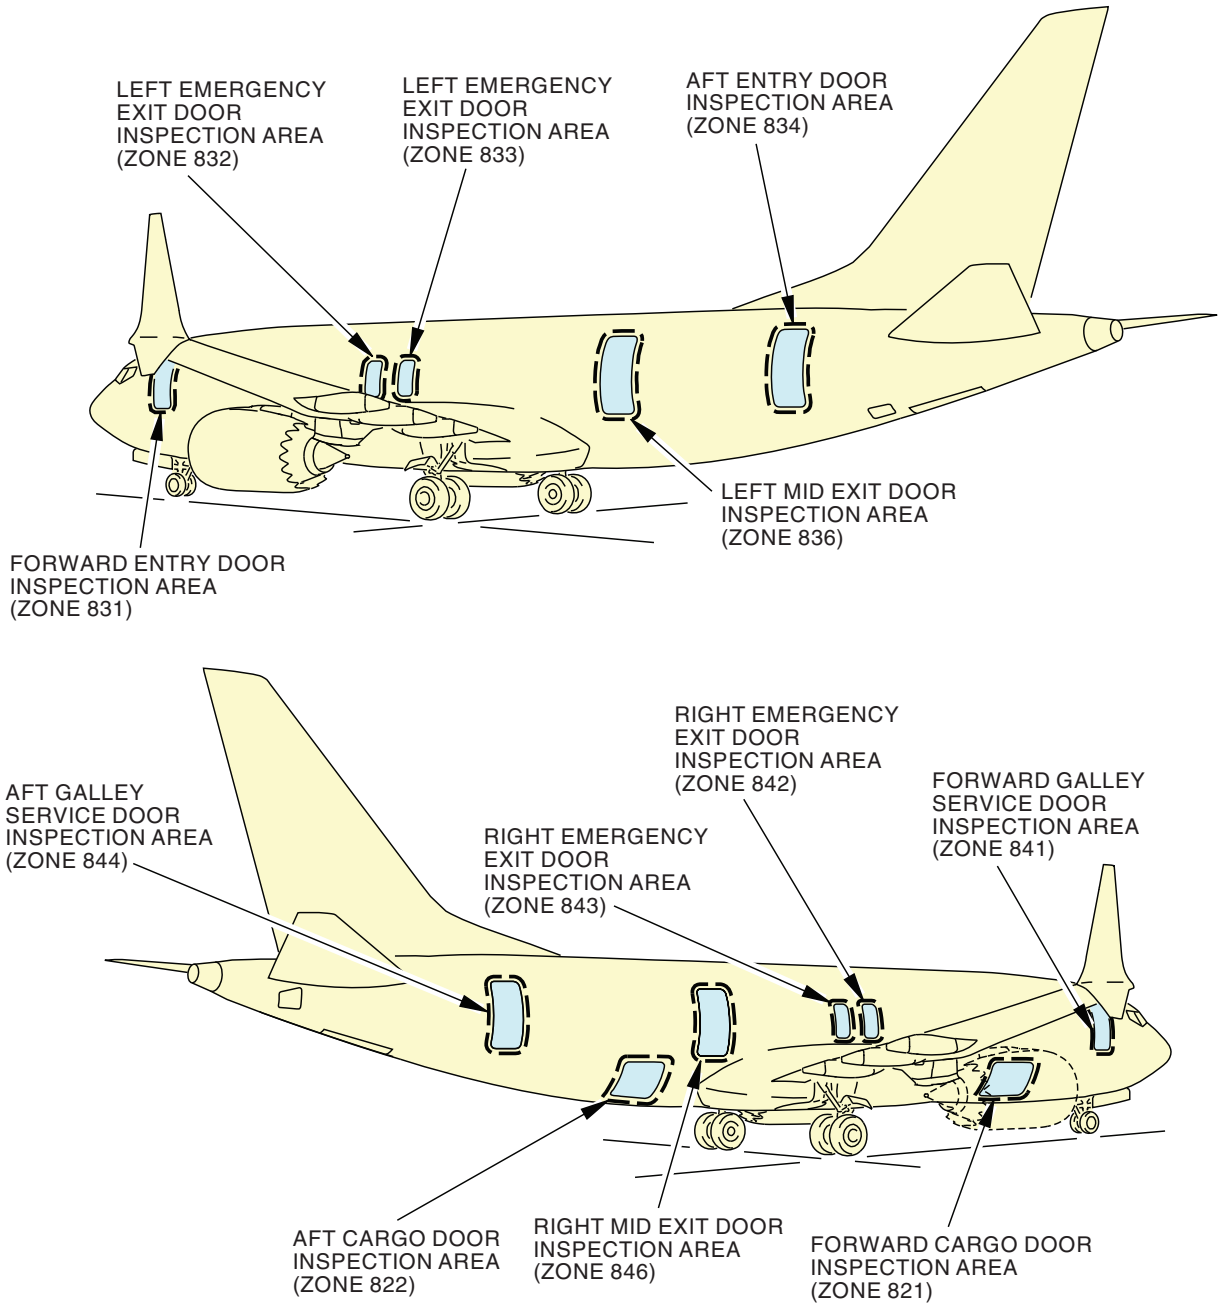

2410305 S00061525292_V4

Doors General Visual (External)
Figure 201/05-41-08-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-802

2. EXTERNAL - ZONAL (GVI): Forward Cargo Door

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
821	Forward Cargo Door

B. Access Panels

Number	Name/Location
821	Forward Cargo Door

C. Zonal Inspection

SUBTASK 05-41-08-010-001

(1) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

SUBTASK 05-41-08-210-002

(2) Perform an external zonal inspection (GVI) of the Forward Cargo Door.


SUBTASK 05-41-08-410-001

(3) Close this access panel:

Number	Name/Location
821	Forward Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

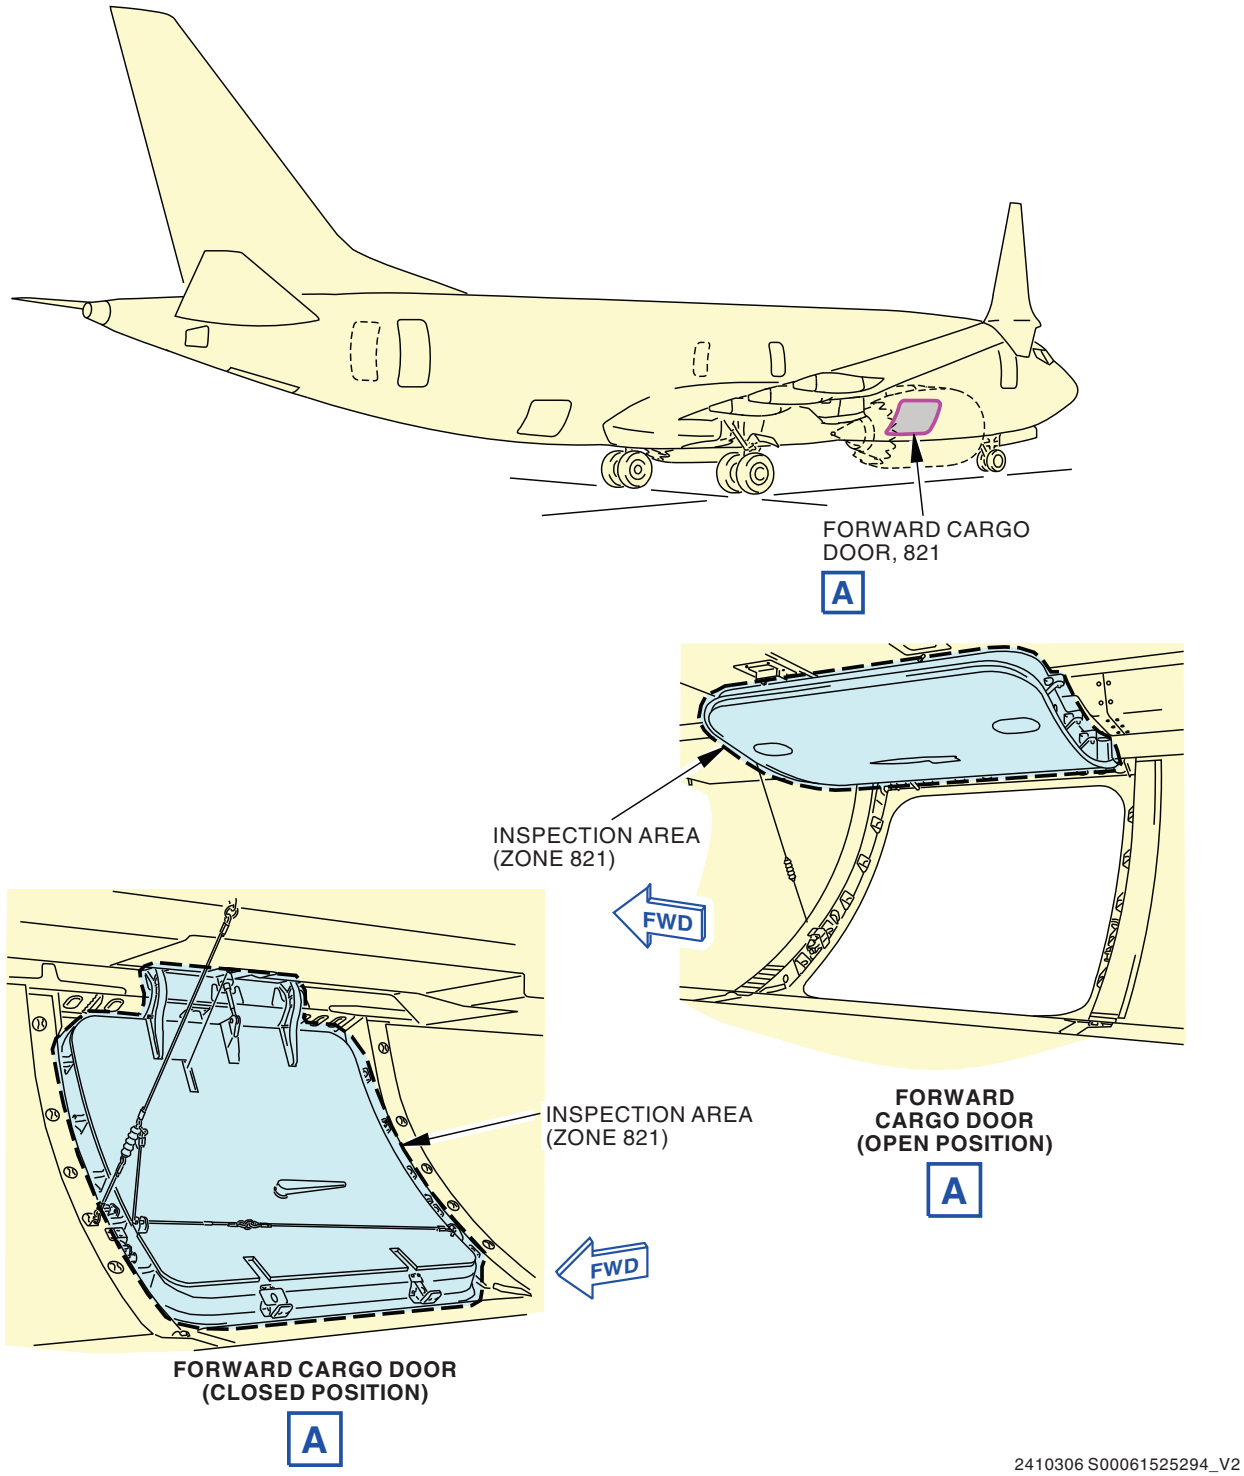

Forward Cargo Door General Visual (External)
Figure 202/05-41-08-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-803

3. INTERNAL - ZONAL (GVI): Forward Cargo Door

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
821	Forward Cargo Door

B. Access Panels

Number	Name/Location
821AZ	Panel Assy - Forward Cargo Door - Protective Pad Liner
821BZ	Panel Assy - Forward Cargo Door - Handle Box Cover Plate

C. Zonal Inspection

SUBTASK 05-41-08-010-002

(1) Open these access panels:

Number	Name/Location
821AZ	Panel Assy - Forward Cargo Door - Protective Pad Liner
821BZ	Panel Assy - Forward Cargo Door - Handle Box Cover Plate

SUBTASK 05-41-08-210-003

(2) Perform an internal zonal inspection (GVI) of the Forward Cargo Door - Section 43, Sta 460.


SUBTASK 05-41-08-410-002

(3) Close these access panels:

Number	Name/Location
821AZ	Panel Assy - Forward Cargo Door - Protective Pad Liner
821BZ	Panel Assy - Forward Cargo Door - Handle Box Cover Plate

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

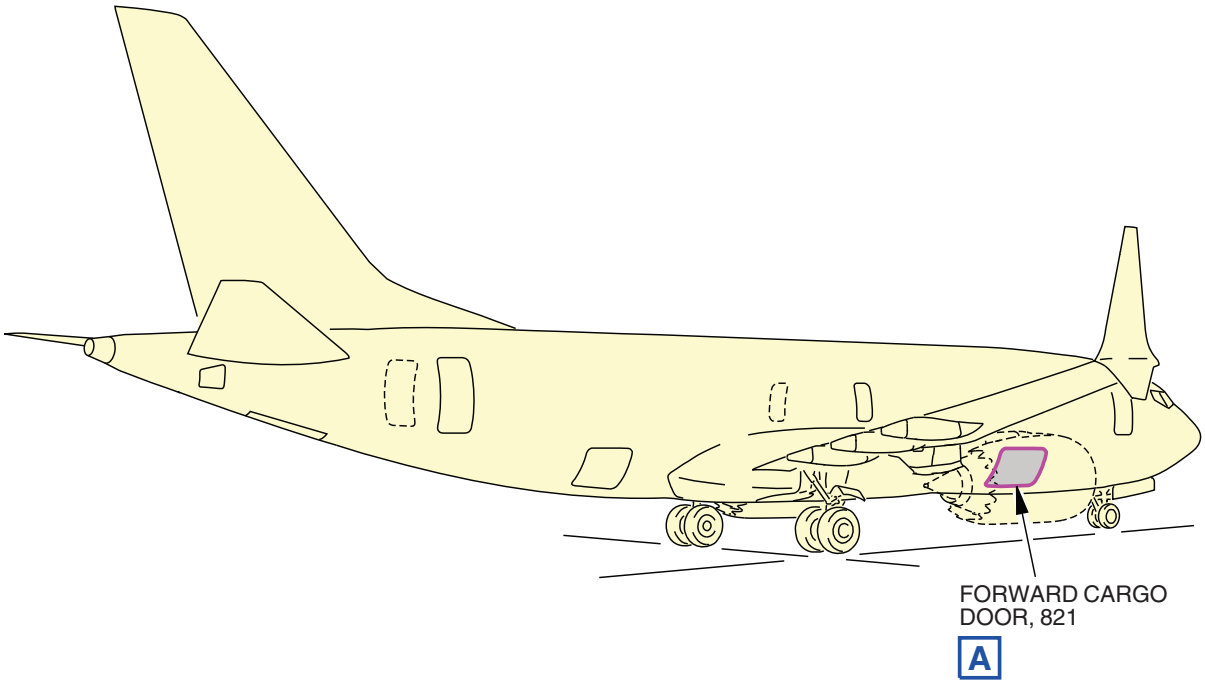

2410307 S00061525296_V3


Forward Cargo Door General Visual (Internal)
Figure 203/05-41-08-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

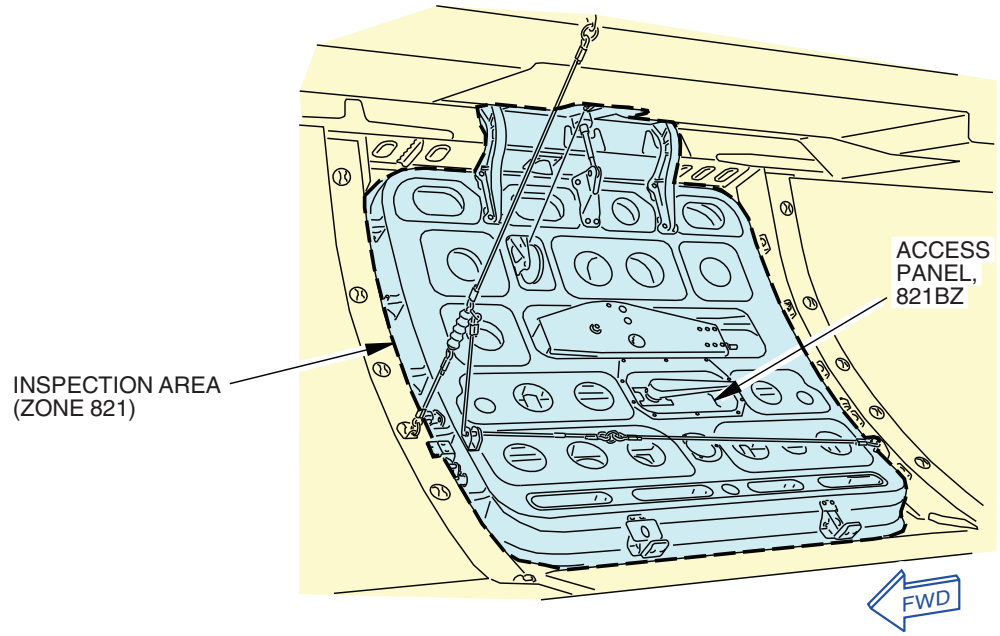

FORWARD CARGO DOOR (INTERIOR VIEW) (LINER REMOVED)

A

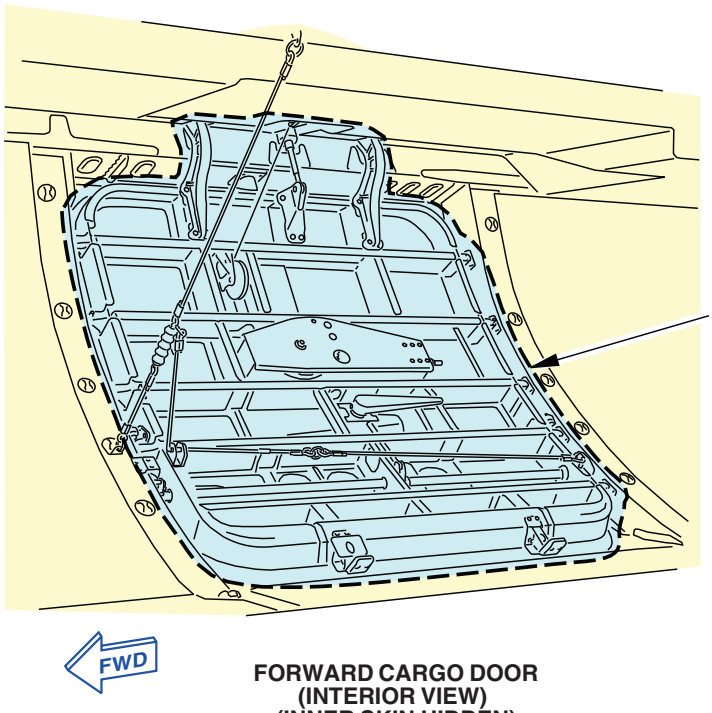

FORWARD CARGO DOOR (INTERIOR VIEW) (INNER SKIN HIDDEN)

A

2410308 S00061525297_V2

Forward Cargo Door General Visual (Internal)
Figure 203/05-41-08-990-803 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-804

4. EXTERNAL - ZONAL (GVI): Aft Cargo Door

(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
822	Aft Cargo Door

B. Access Panels

Number	Name/Location
822	Aft Cargo Door

C. Zonal Inspection

SUBTASK 05-41-08-010-003

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

SUBTASK 05-41-08-210-004

(2) Perform an external zonal inspection (GVI) of the Aft Cargo Door - Section 46, Sta 827.


SUBTASK 05-41-08-410-003

(3) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

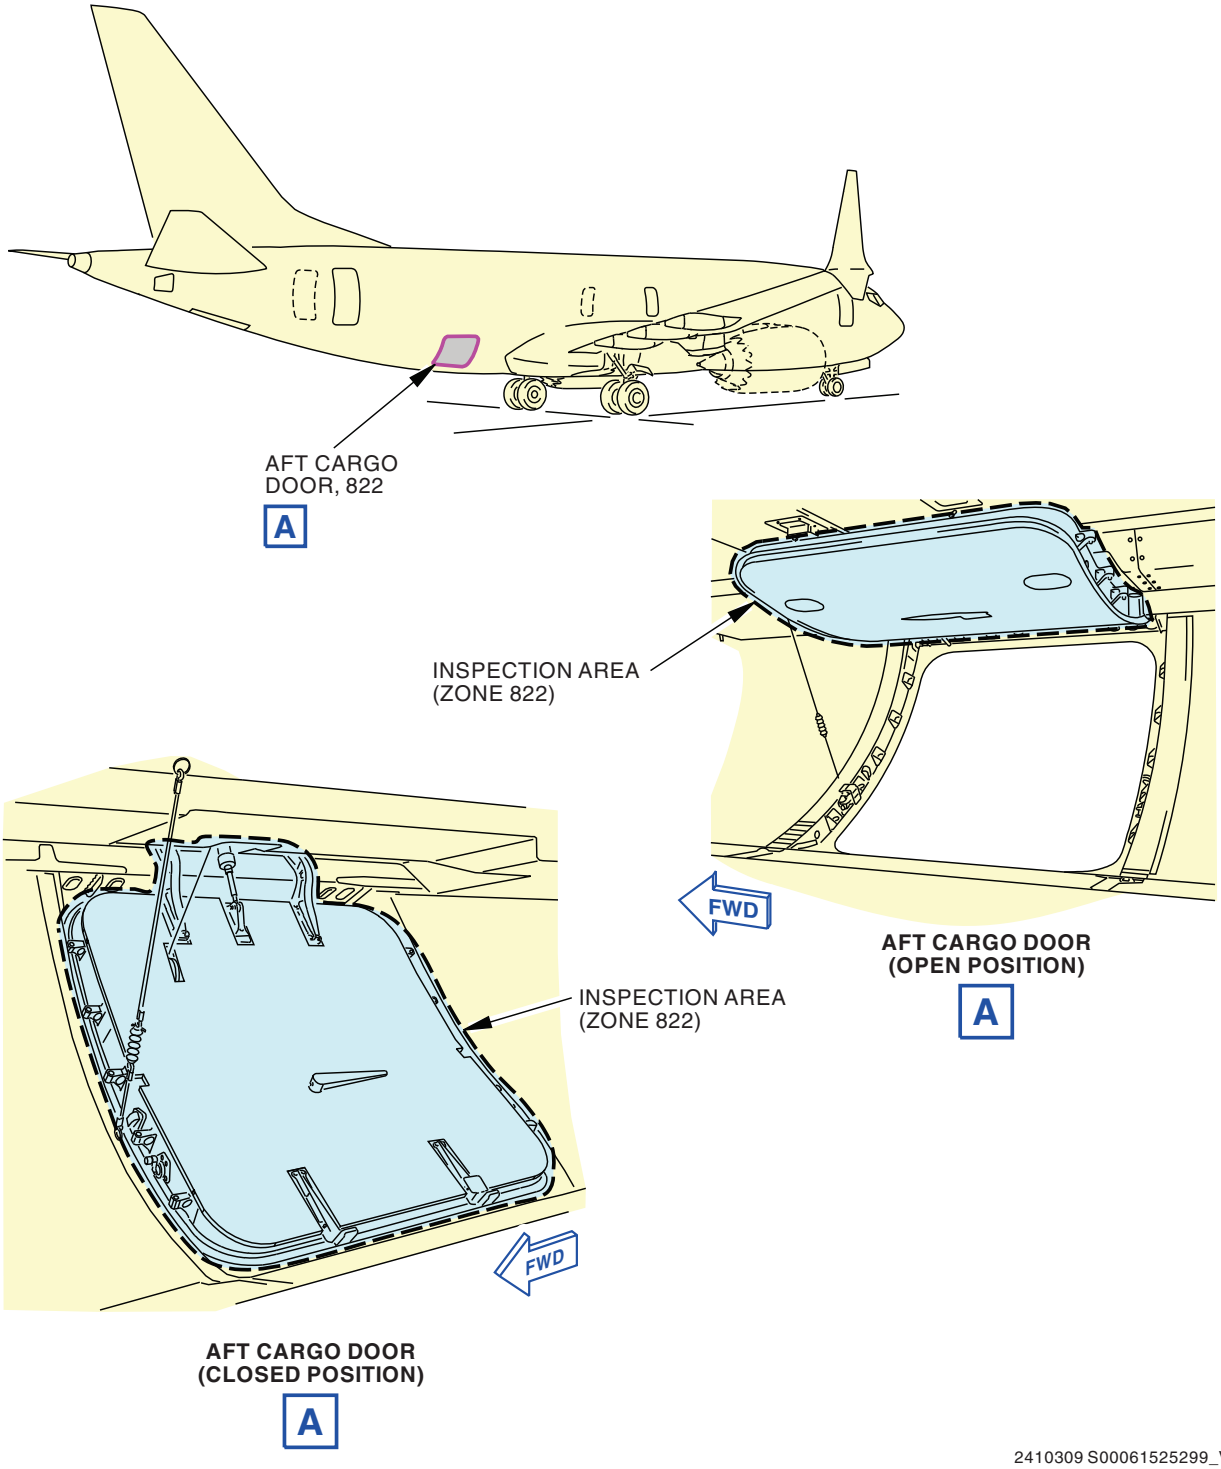

Aft Cargo Door General Visual (External)
Figure 204/05-41-08-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-805

5. INTERNAL - ZONAL (GVI): Aft Cargo Door

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
822	Aft Cargo Door

B. Access Panels

Number	Name/Location
822AZ	Panel Assy - Aft Cargo Door - Protective Pad Liner
822BZ	Panel Assy - Aft Cargo Door - Handle Box Cover Plate

C. Zonal Inspection

SUBTASK 05-41-08-010-004

(1) Open these access panels:

Number	Name/Location
822AZ	Panel Assy - Aft Cargo Door - Protective Pad Liner
822BZ	Panel Assy - Aft Cargo Door - Handle Box Cover Plate

SUBTASK 05-41-08-210-005

(2) Perform an internal zonal inspection (GVI) of the Aft Cargo Door - Section 46, Sta 827.


SUBTASK 05-41-08-410-004

(3) Close these access panels:

Number	Name/Location
822AZ	Panel Assy - Aft Cargo Door - Protective Pad Liner
822BZ	Panel Assy - Aft Cargo Door - Handle Box Cover Plate

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

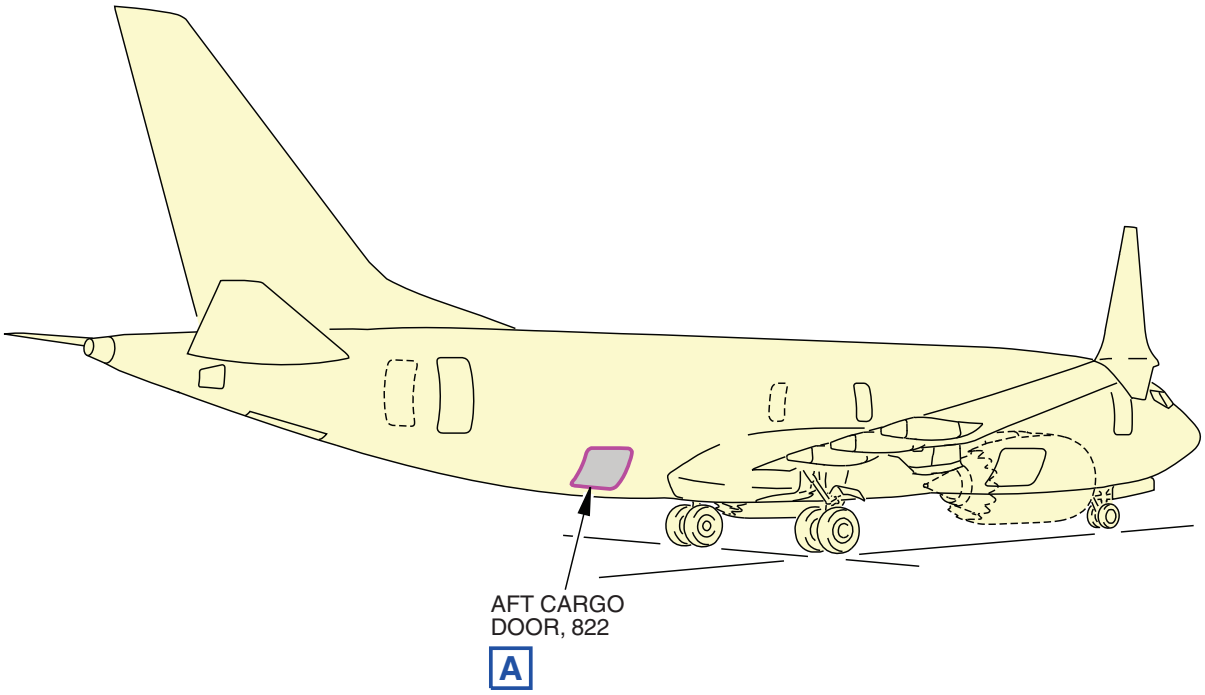

2410310 S00061525301_V3

Aft Cargo Door General Visual (Internal)
Figure 205/05-41-08-990-805 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

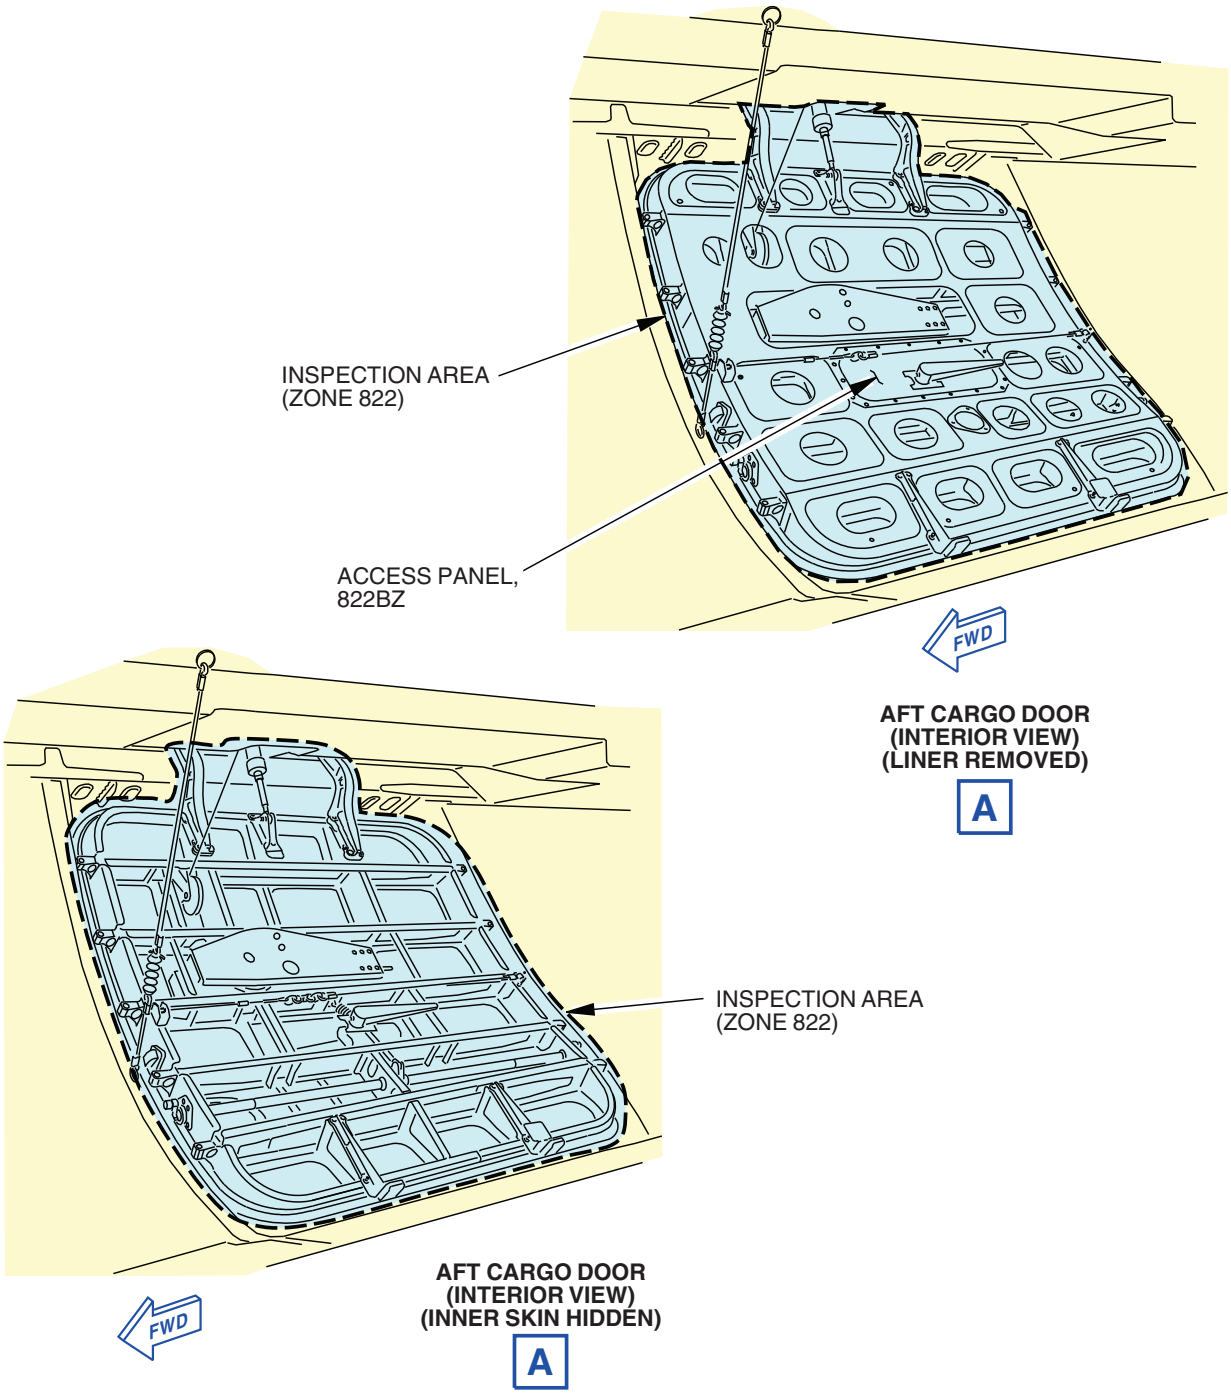

2410311 S00061525302_V2

Aft Cargo Door General Visual (Internal)
Figure 205/05-41-08-990-805 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-806

6. EXTERNAL - ZONAL (GVI): Forward Passenger Door

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
831	Forward Entry Door

B. Access Panels

Number	Name/Location
831	Forward Entry Door

C. Zonal Inspection

SUBTASK 05-41-08-010-005

(1) Open this access panel:

Number	Name/Location
831	Forward Entry Door

SUBTASK 05-41-08-210-006

(2) Perform an external zonal inspection (GVI) of the Forward Passenger Door - Section 41, Sta 345.


SUBTASK 05-41-08-410-005

(3) Close this access panel:

Number	Name/Location
831	Forward Entry Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

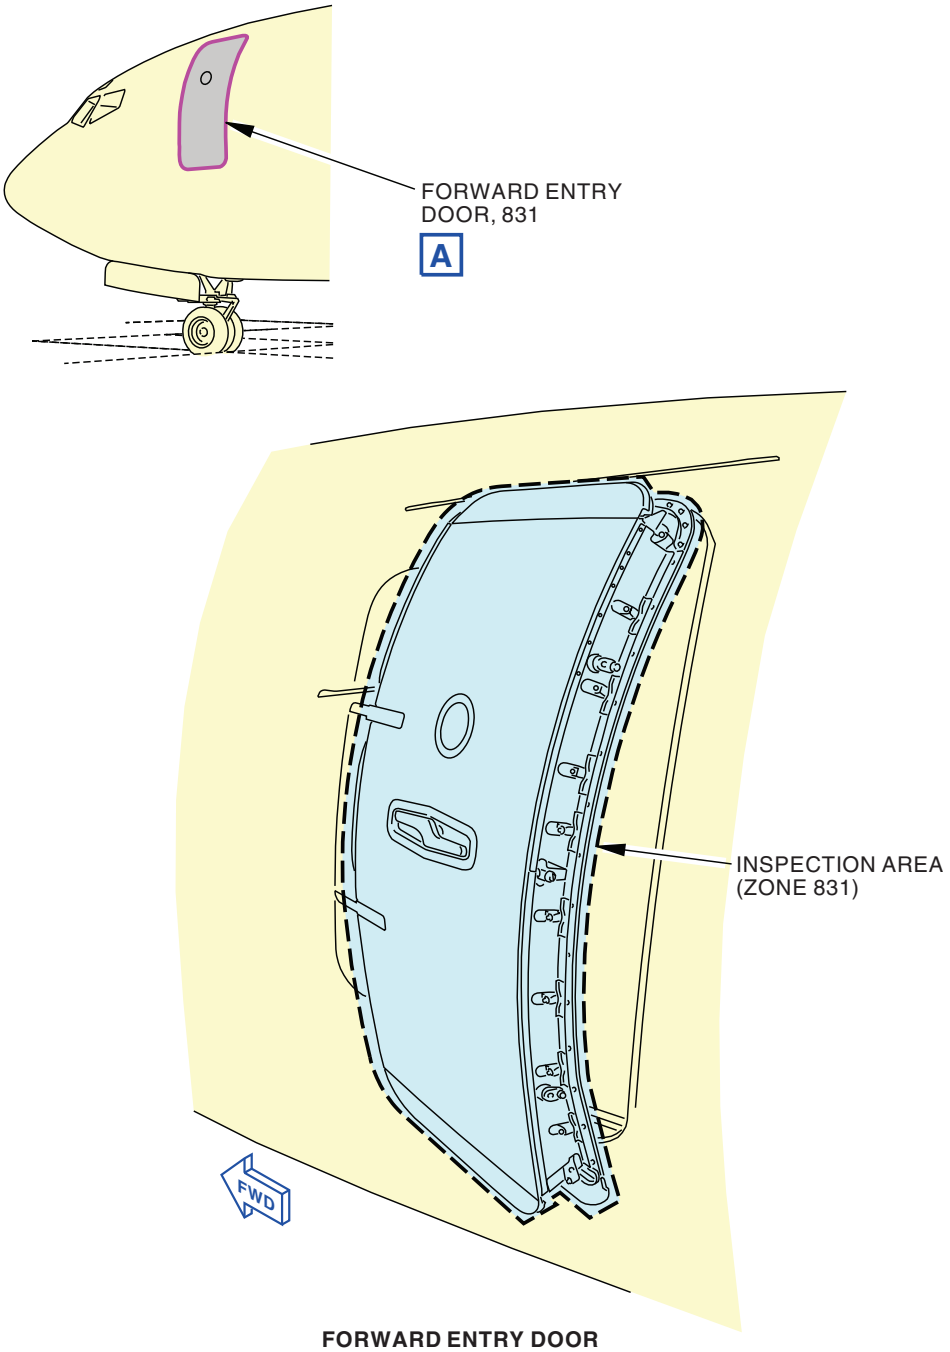


FORWARD ENTRY DOOR
(EXTERIOR VIEW)
A

2410312 S00061525304_V1

Forward Entry Door General Visual (External)
Figure 206/05-41-08-990-806 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

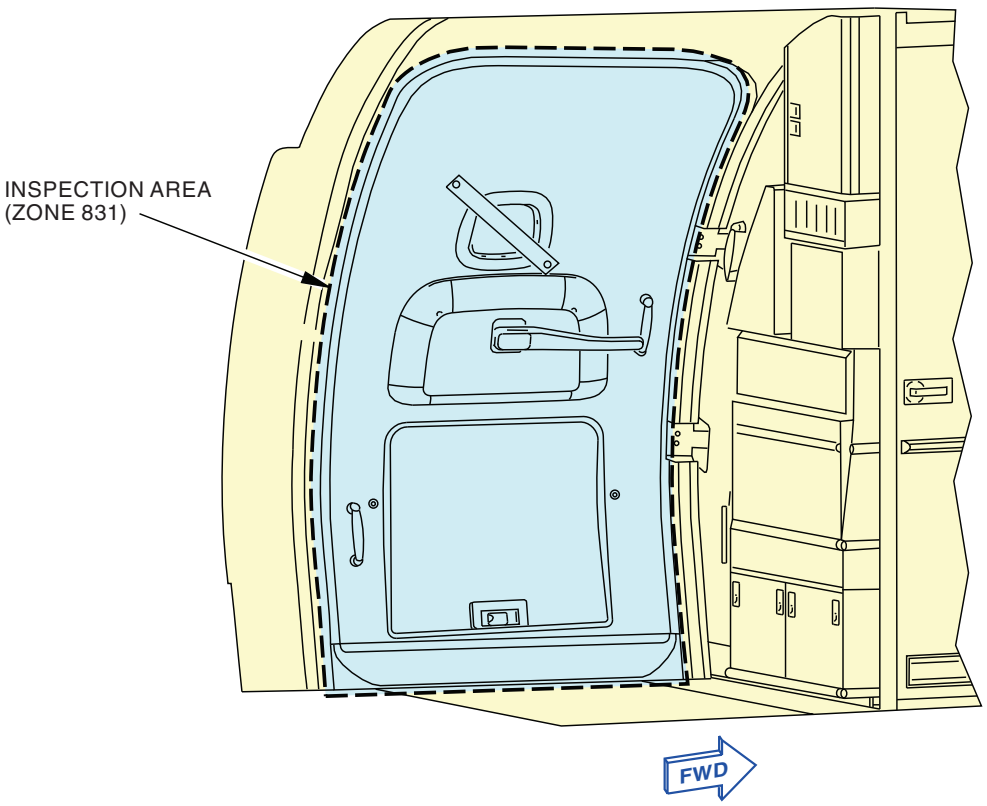

**FORWARD ENTRY DOOR
(INTERIOR VIEW)**

A

2410313 S00061525305_V1

**Forward Entry Door General Visual (External)
Figure 206/05-41-08-990-806 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-807

7. INTERNAL - ZONAL (GVI): Forward Passenger Door

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
831	Forward Entry Door

B. Access Panels

Number	Name/Location
831AW	Fwd Entry Door - Door Liner (Cosmetic)
831AZ	Forward Entry Door - Torque Tube Access
831BZ	Forward Entry Door - Handle Box and Cam for Handle Box Access
831CZ	Forward Entry Door - Handle Box Access
831DZ	Forward Entry Door - Gate Hinge Pin Access
831EZ	Forward Entry Door - Gate Hinge Pin Access

C. Zonal Inspection

SUBTASK 05-41-08-010-006

(1) Open these access panels:

Number	Name/Location
831AW	Fwd Entry Door - Door Liner (Cosmetic)
831AZ	Forward Entry Door - Torque Tube Access
831BZ	Forward Entry Door - Handle Box and Cam for Handle Box Access
831CZ	Forward Entry Door - Handle Box Access
831DZ	Forward Entry Door - Gate Hinge Pin Access
831EZ	Forward Entry Door - Gate Hinge Pin Access

SUBTASK 05-41-08-210-007

(2) Perform an internal zonal inspection (GVI) of the Forward Passenger Door - Section 41, Sta 345.


SUBTASK 05-41-08-410-006

(3) Close these access panels:

Number	Name/Location
831AW	Fwd Entry Door - Door Liner (Cosmetic)
831AZ	Forward Entry Door - Torque Tube Access
831BZ	Forward Entry Door - Handle Box and Cam for Handle Box Access
831CZ	Forward Entry Door - Handle Box Access
831DZ	Forward Entry Door - Gate Hinge Pin Access
831EZ	Forward Entry Door - Gate Hinge Pin Access

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

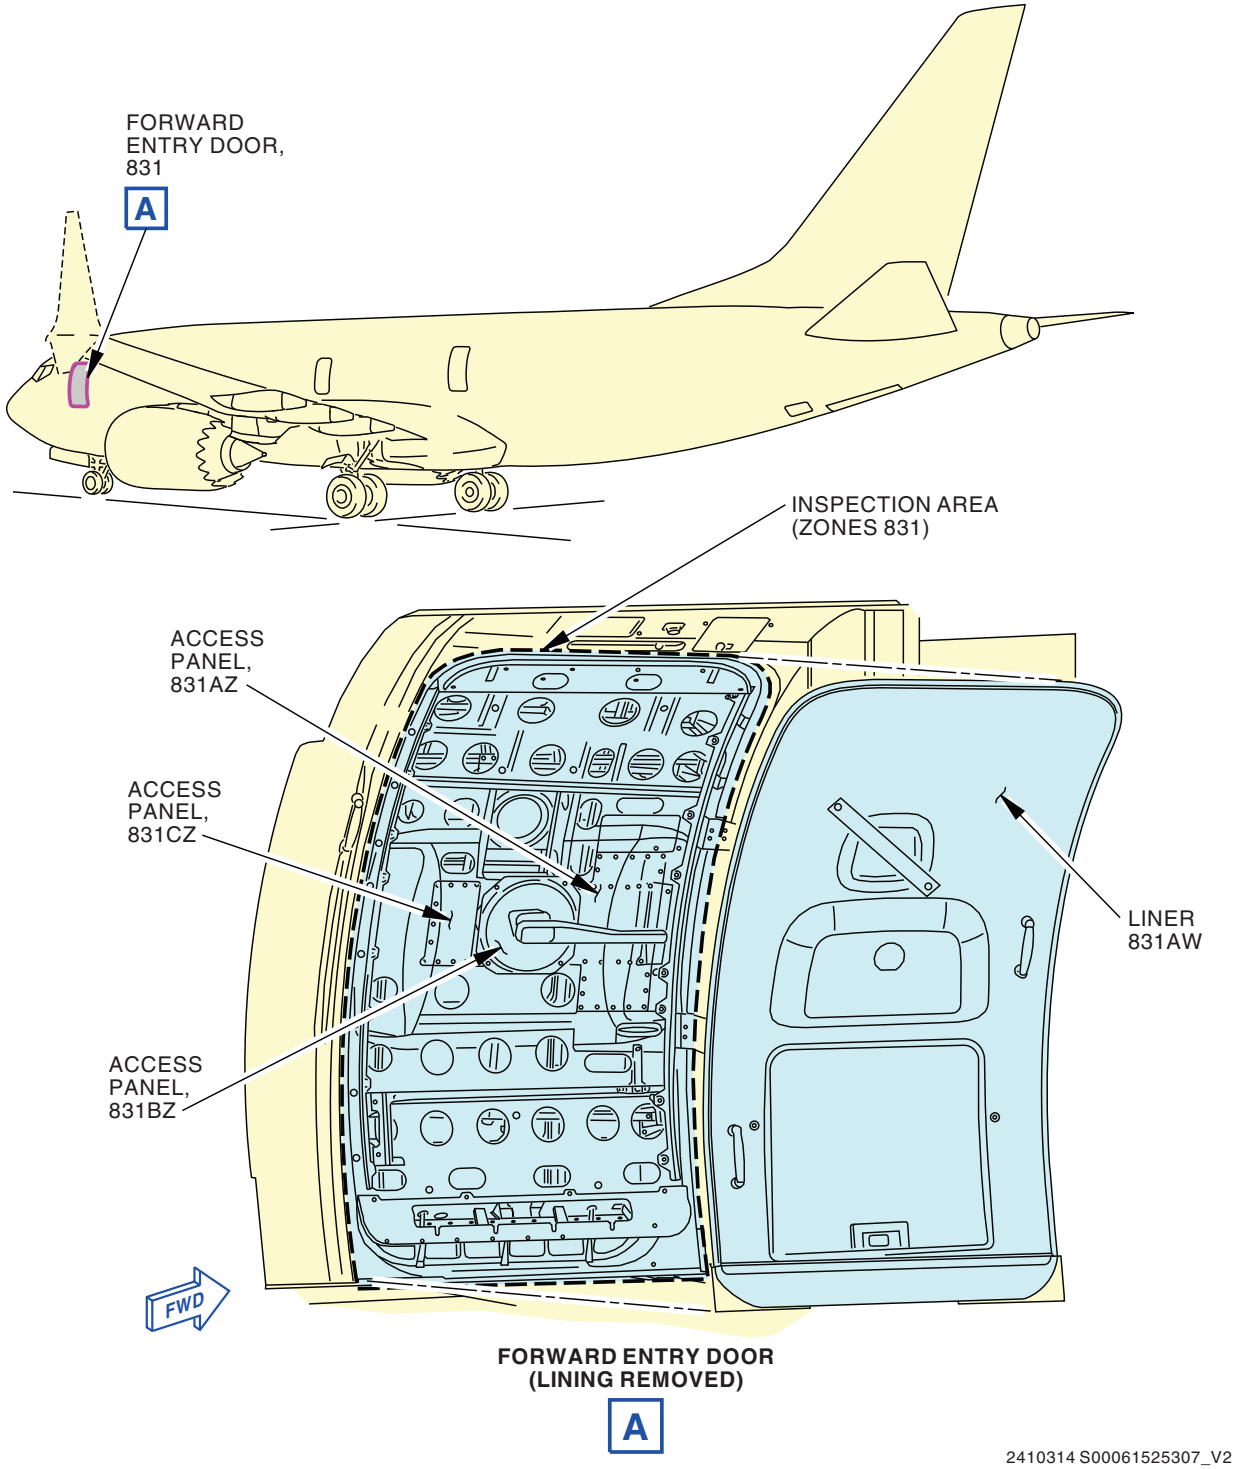

Forward Entry Door General Visual (Internal)
Figure 207/05-41-08-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-808

8. EXTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
832	Left Forward Emergency Exit

B. Access Panels

Number	Name/Location
832	Emergency Exit Door (AOE)

C. Zonal Inspection

SUBTASK 05-41-08-010-007

(1) Open this access panel:

Number	Name/Location
832	Emergency Exit Door (AOE)

SUBTASK 05-41-08-210-008

(2) Perform an external zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 589.5.


SUBTASK 05-41-08-410-007

(3) Close this access panel:

Number	Name/Location
832	Emergency Exit Door (AOE)

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

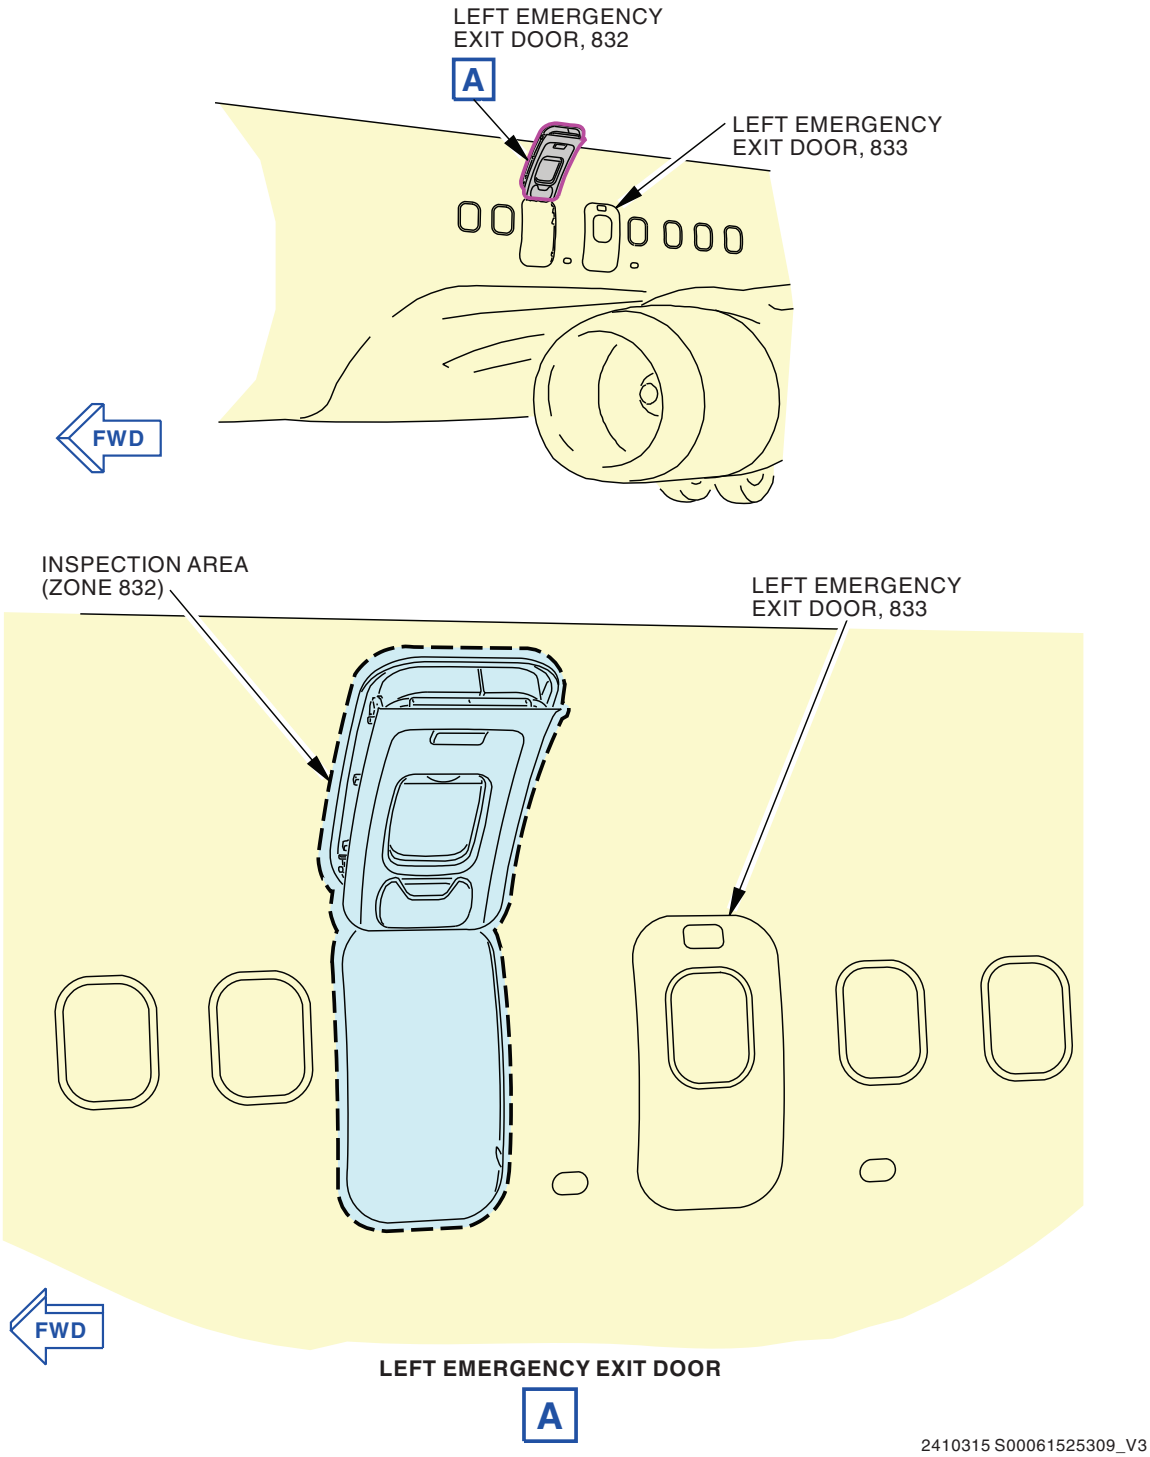

Left Emergency Exit Door General Visual (External)
Figure 208/05-41-08-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-809

9. INTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
832	Left Forward Emergency Exit

B. Access Panels

Number	Name/Location
832AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

C. Zonal Inspection

SUBTASK 05-41-08-010-008

(1) Open this access panel:

Number	Name/Location
832AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

NOTE: Automatic Overwing Exit Door liner removal required.

SUBTASK 05-41-08-210-009

(2) Perform an internal zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 589.5.


SUBTASK 05-41-08-410-008

(3) Close this access panel:

Number	Name/Location
832AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

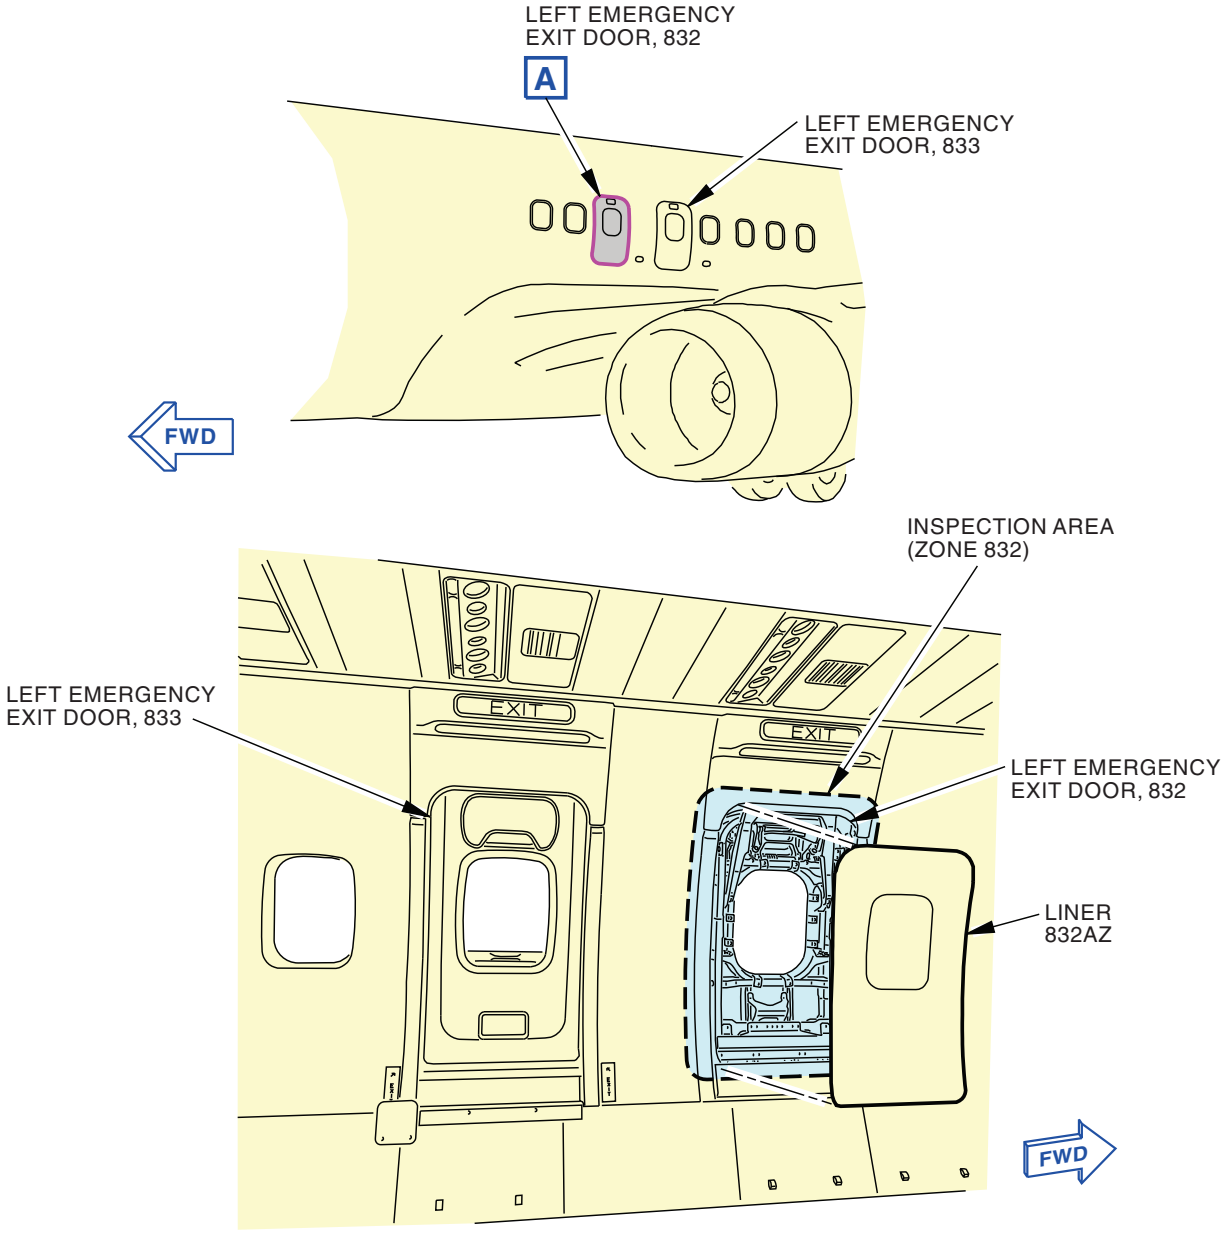

**LEFT EMERGENCY EXIT DOOR
(DOOR IN THE CLOSED POSITION
WITH DOOR LINING REMOVED)**

A

2410316 S00061525311_V3

**Left Emergency Exit Door General Visual (Internal)
Figure 209/05-41-08-990-809**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-810

10. EXTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
833	Left Emergency Exit (STA 627.5)

B. Access Panels

Number	Name/Location
833	Emergency Exit Door (AOE)

C. Zonal Inspection

SUBTASK 05-41-08-010-009

(1) Open this access panel:

Number	Name/Location
833	Emergency Exit Door (AOE)

SUBTASK 05-41-08-210-010

(2) Perform an external zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 627.


SUBTASK 05-41-08-410-009

(3) Close this access panel:

Number	Name/Location
833	Emergency Exit Door (AOE)

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

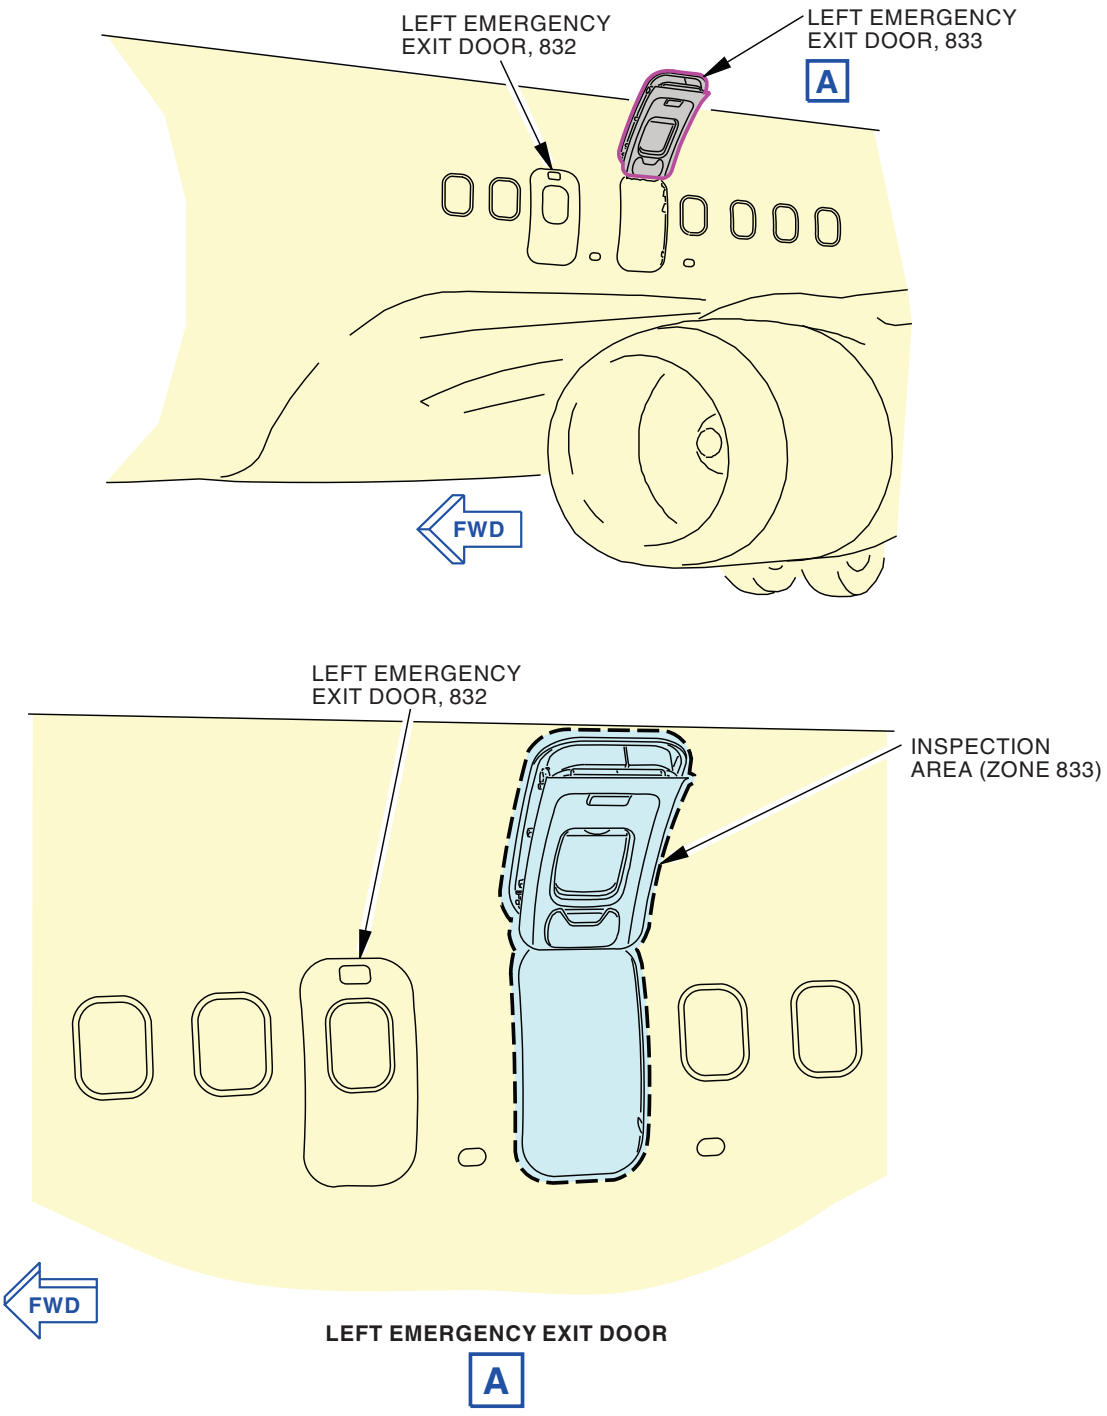

Left Emergency Exit Door General Visual (External)
Figure 210/05-41-08-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-811

11. INTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
833	Left Emergency Exit (STA 627.5)

B. Access Panels

Number	Name/Location
833AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

C. Zonal Inspection

SUBTASK 05-41-08-010-010

(1) Open this access panel:

Number	Name/Location
833AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

NOTE: Automatic overwing exit door liner removal required.

SUBTASK 05-41-08-210-011

(2) Perform an internal zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 627.


SUBTASK 05-41-08-410-010

(3) Close this access panel:

Number	Name/Location
833AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

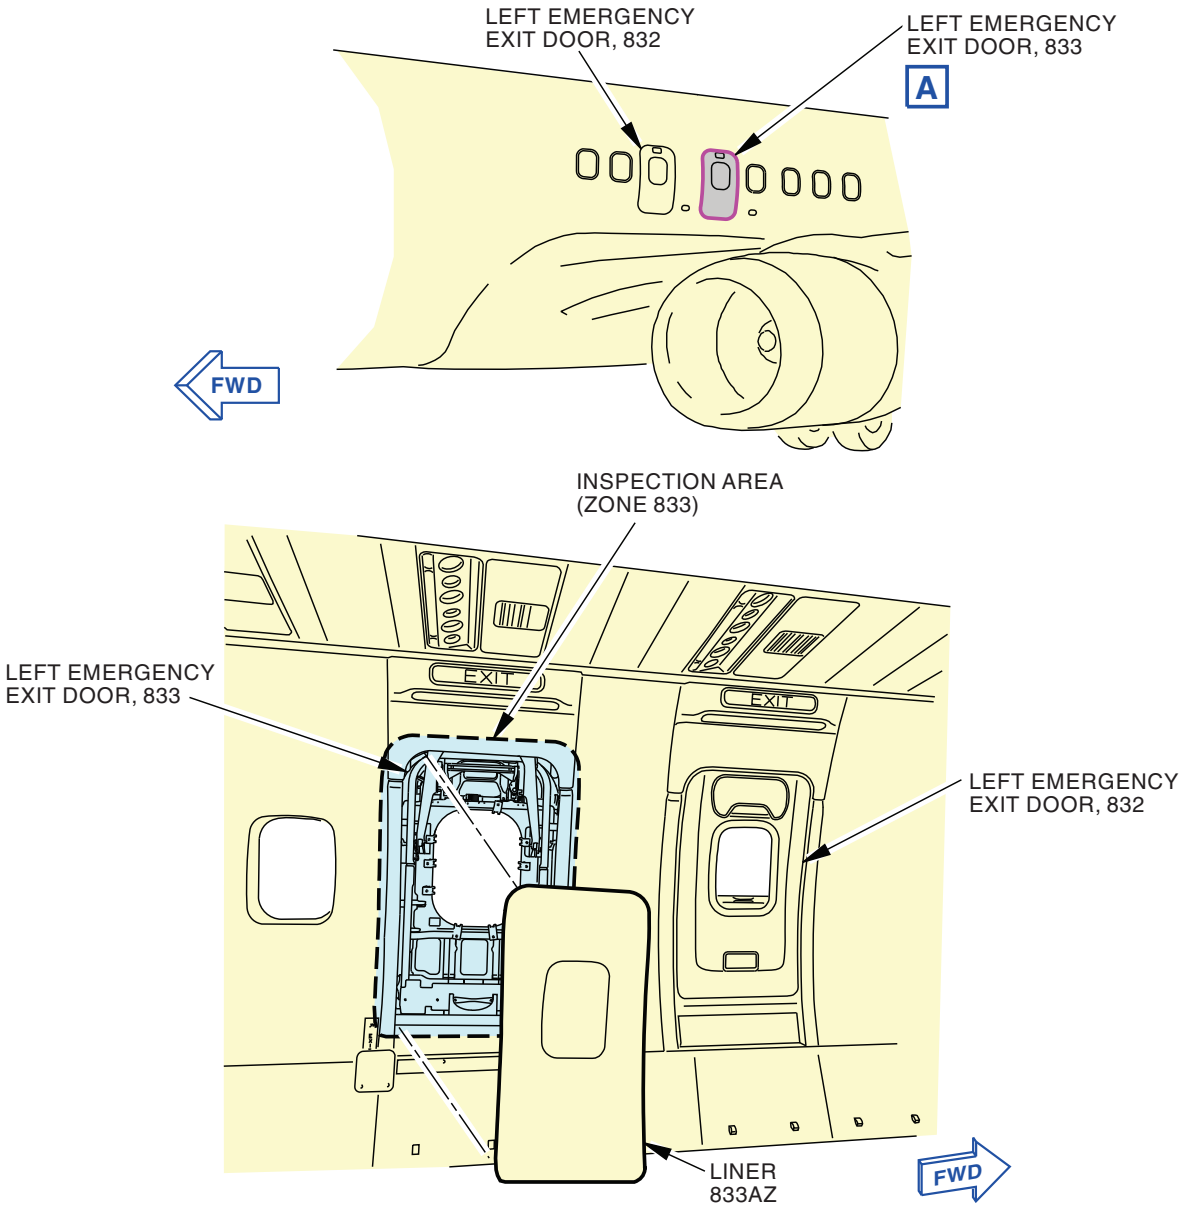

**LEFT EMERGENCY EXIT DOOR
(DOOR IN THE CLOSED POSITION
WITH DOOR LINING REMOVED)**

A

2410318 S00061525315_V4

**Left Emergency Exit Door General Visual (Internal)
Figure 211/05-41-08-990-811**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-812

12. EXTERNAL - ZONAL (GVI): Aft Passenger Door

(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
834	Left Aft Entry Door

B. Access Panels

Number	Name/Location
834	Aft Entry Door

C. Zonal Inspection

SUBTASK 05-41-08-010-011

(1) Open this access panel:

Number	Name/Location
834	Aft Entry Door

SUBTASK 05-41-08-210-012

(2) Perform an external zonal inspection (GVI) of the Aft Passenger Door - Section 47, Sta 980.


SUBTASK 05-41-08-410-011

(3) Close this access panel:

Number	Name/Location
834	Aft Entry Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

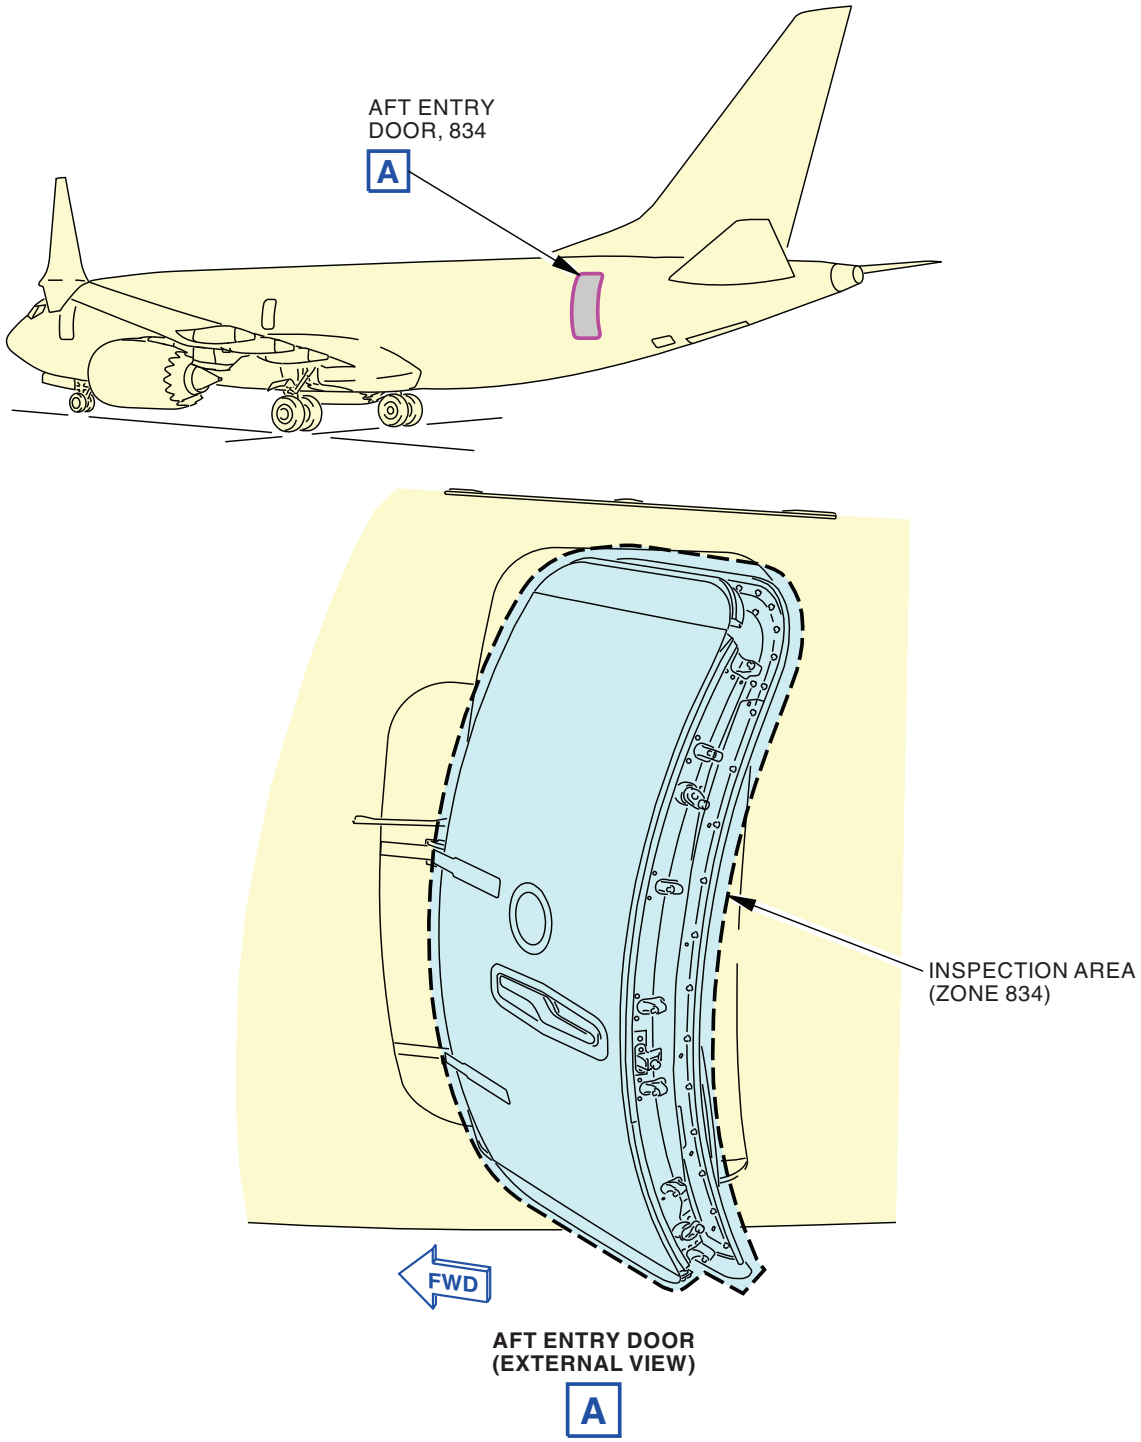

Aft Entry Door General Visual (External)
Figure 212/05-41-08-990-812 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

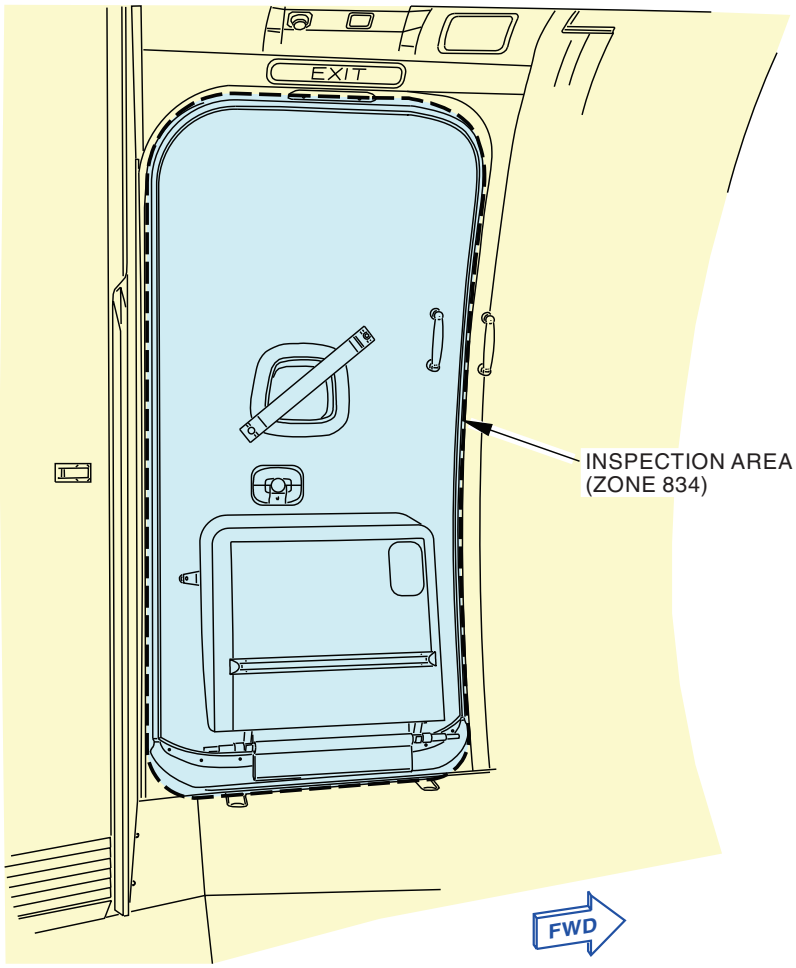

AFT ENTRY DOOR
(INTERIOR VIEW)

A

2410320 S00061525318_V1

Aft Entry Door General Visual (External)
Figure 212/05-41-08-990-812 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-813

13. INTERNAL - ZONAL (GVI): Aft Passenger Door

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
52-13-31-000-801	Aft Entry Door Lining Removal (P/B 401)
52-13-31-400-801	Aft Entry Door Lining Installation (P/B 401)
SOPM 20-50-19	General Sealing

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

C. Location Zones

Zone	Area
834	Left Aft Entry Door

D. Access Panels

Number	Name/Location
834AW	Aft Entry Door - Door Liner
834AZ	Aft Entry Door - Torque Tube Access
834BZ	Aft Entry Door - Handle Box and Cam for Handle Box Access
834CZ	Aft Entry Door - Handle Box Access
834DZ	Aft Entry Door - Lower Hinge Access
834EZ	Aft Entry Door - Upper Hinge Access
834FZ	Aft Entry Door - Torque Tube Access
834GZ	AFT Entry Door - Torque Tube Access

E. Zonal Inspection

SUBTASK 05-41-08-010-022

(1) Do this task: Aft Entry Door Lining Removal, TASK 52-13-31-000-801.

SUBTASK 05-41-08-010-012

(2) Open these access panels:

Number	Name/Location
834AW	Aft Entry Door - Door Liner
834AZ	Aft Entry Door - Torque Tube Access
834BZ	Aft Entry Door - Handle Box and Cam for Handle Box Access
834CZ	Aft Entry Door - Handle Box Access
834DZ	Aft Entry Door - Lower Hinge Access
834EZ	Aft Entry Door - Upper Hinge Access

SUBTASK 05-41-08-010-027

(3) Remove these access doors:

Number	Name/Location
834FZ	Aft Entry Door - Torque Tube Access
834GZ	AFT Entry Door - Torque Tube Access

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove a pressure fay surface seal that was previously applied between the mating surfaces of the cover plate and the inner skin (SOPM 20-50-19).

(b) Remove a parting agent that was previously applied on the mating surfaces of the cover plate (SOPM 20-50-19).

SUBTASK 05-41-08-210-013

(4) Perform an internal zonal inspection (GVI) of the Aft Passenger Door - Section 47, Sta 980.

SUBTASK 05-41-08-410-030

(5) Install these access doors:

Number	Name/Location
834FZ	Aft Entry Door - Torque Tube Access
834GZ	AFT Entry Door - Torque Tube Access

(a) Apply a parting agent to the mating surfaces of the cover plate (SOPM 20-50-19).

(b) Apply a pressure fay surface seal with sealant, A00247, between the mating surfaces of the cover plate and the inner skin (SOPM 20-50-19).

(c) Install the cover plate onto the door structure with the bolts and the washers.

1) If a new bolt is to be used, make sure that the grip length is the same as the original bolt.

NOTE: Grip length is important.

SUBTASK 05-41-08-410-012

(6) Close these access panels:


Number	Name/Location
834AW	Aft Entry Door - Door Liner
834AZ	Aft Entry Door - Torque Tube Access
834BZ	Aft Entry Door - Handle Box and Cam for Handle Box Access
834CZ	Aft Entry Door - Handle Box Access
834DZ	Aft Entry Door - Lower Hinge Access
834EZ	Aft Entry Door - Upper Hinge Access

SUBTASK 05-41-08-410-022

(7) Do this task: Aft Entry Door Lining Installation, TASK 52-13-31-400-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

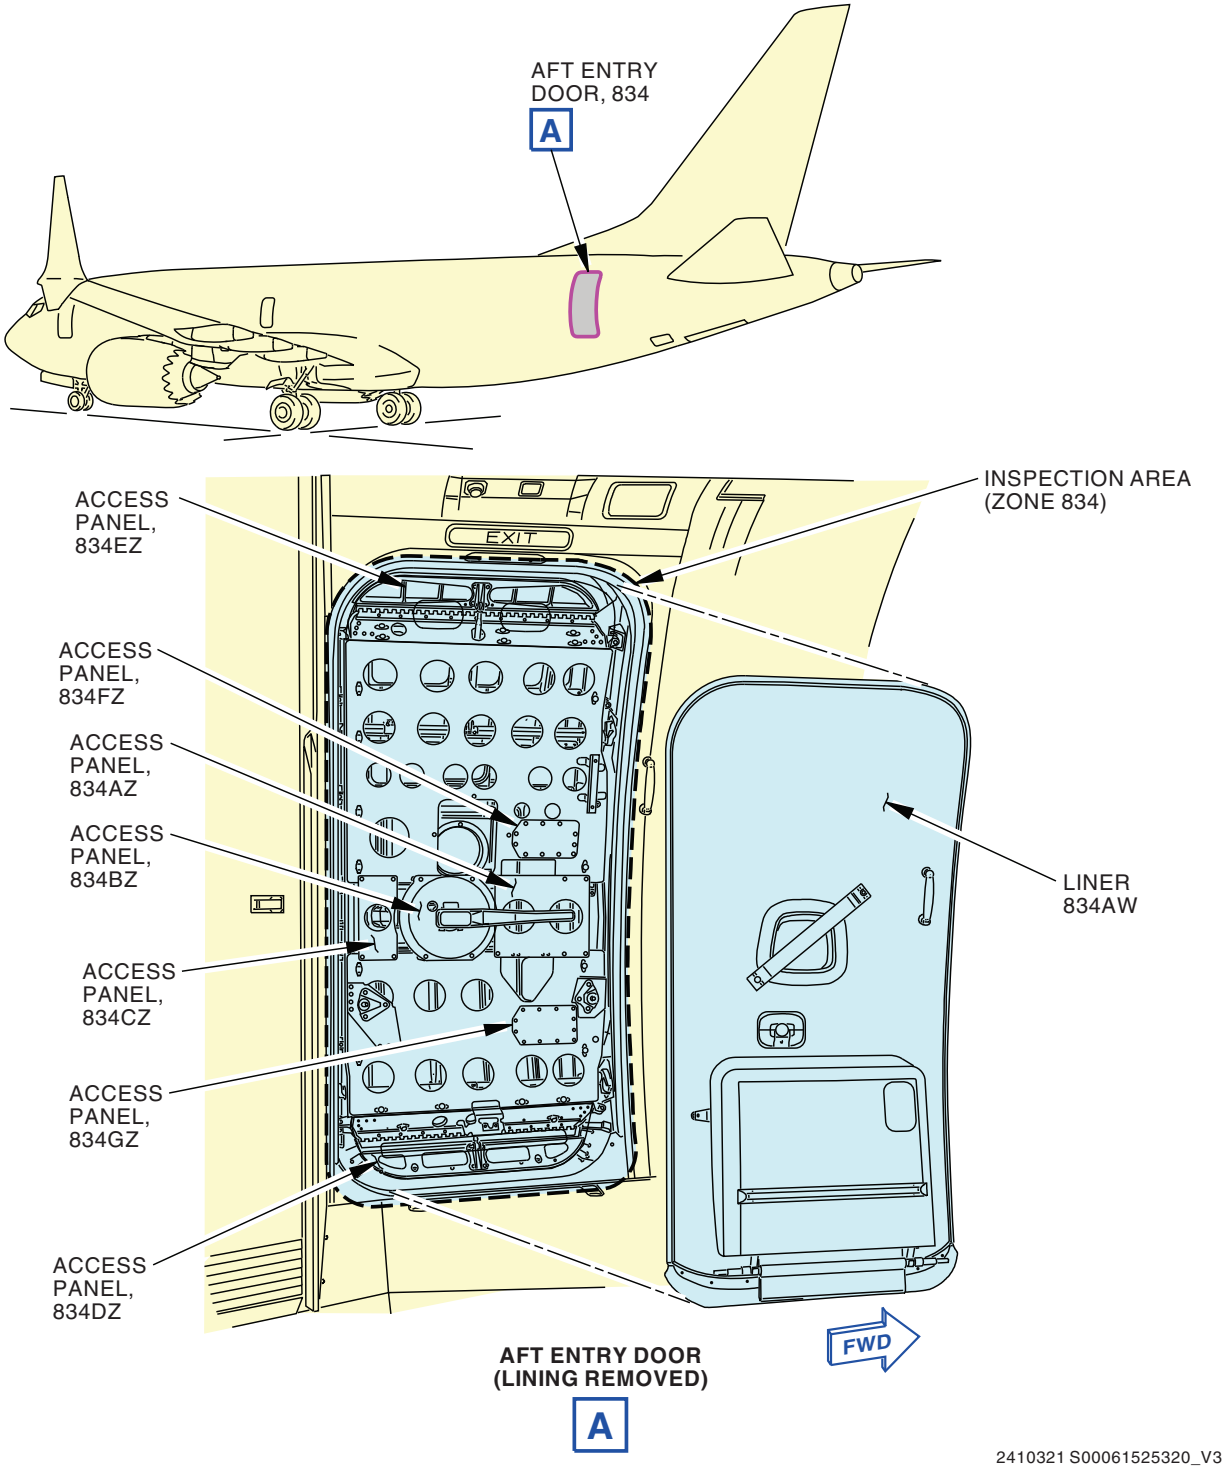

Aft Entry Door General Visual (Internal)
Figure 213/05-41-08-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-814

14. EXTERNAL - ZONAL (GVI): Forward Galley Service Door

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
841	Forward Galley Service Door

B. Access Panels

Number	Name/Location
841	Forward Galley Service Door

C. Zonal Inspection

SUBTASK 05-41-08-010-013

(1) Open this access panel:

Number	Name/Location
841	Forward Galley Service Door

SUBTASK 05-41-08-210-014

(2) Perform an external zonal inspection (GVI) of the Forward Galley Service Door - Section 41, Sta 340.


SUBTASK 05-41-08-410-013

(3) Close this access panel:

Number	Name/Location
841	Forward Galley Service Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

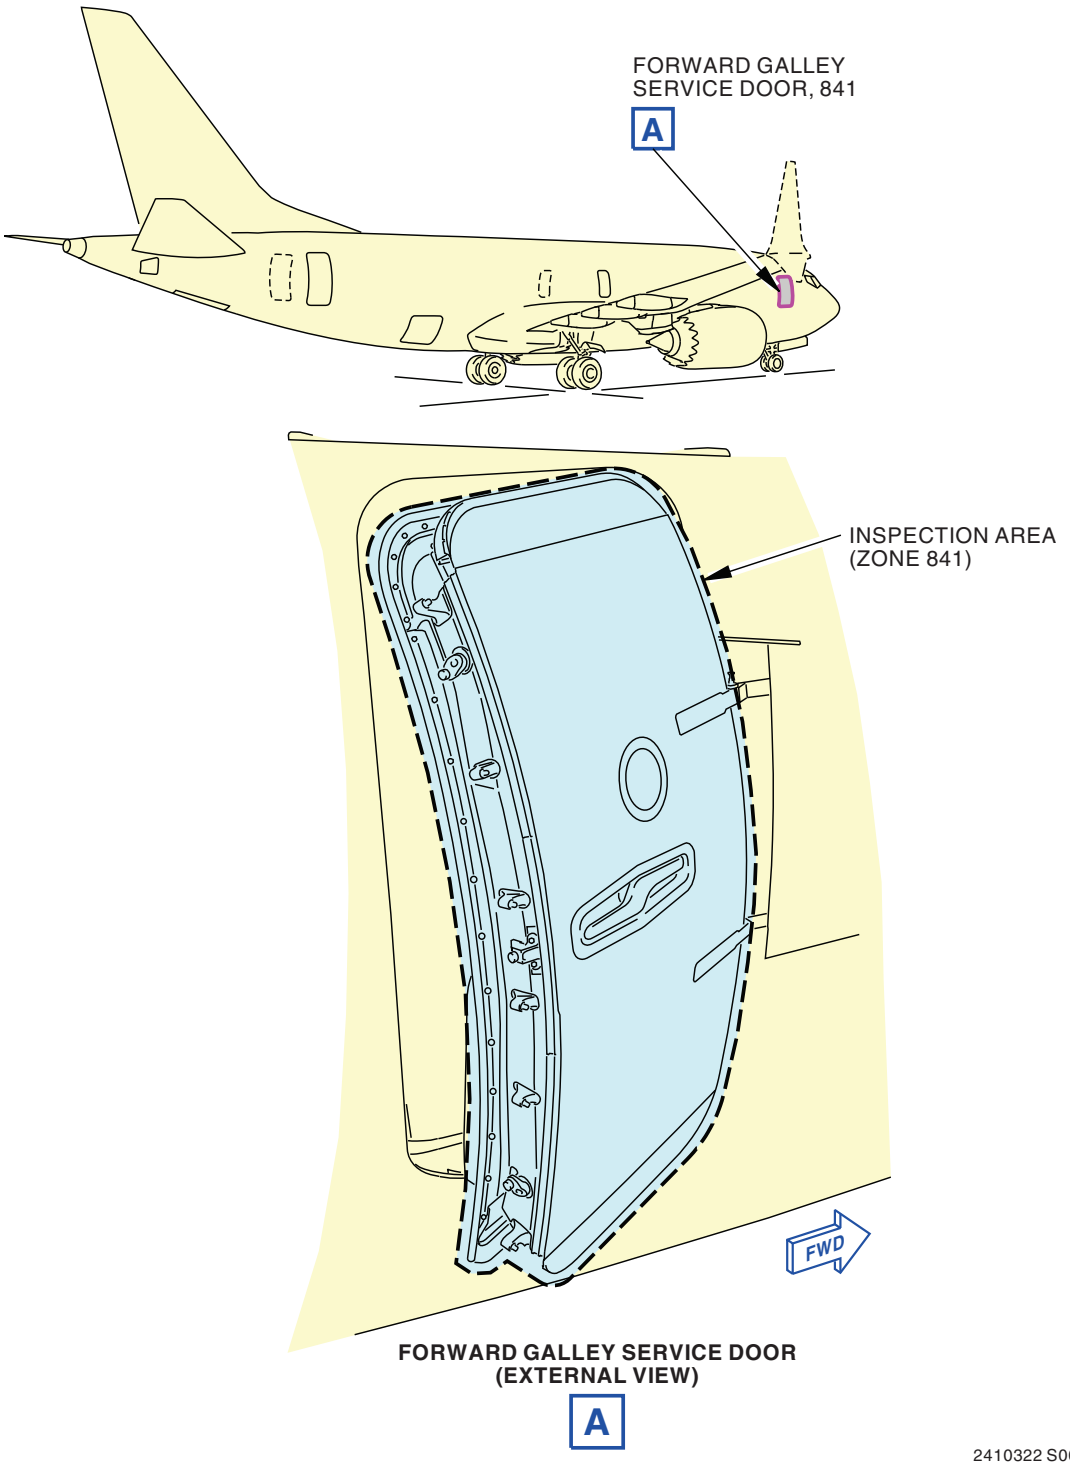

Forward Galley Service Door General Visual (External)
Figure 214/05-41-08-990-814 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

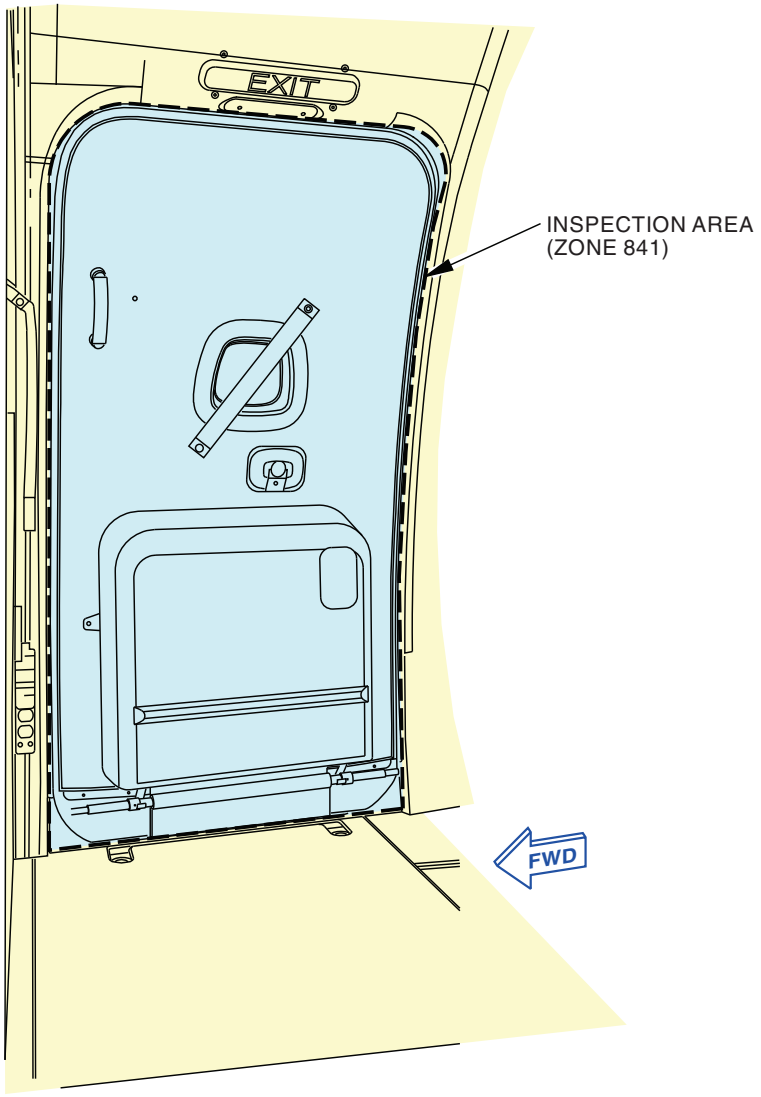

FORWARD GALLEY SERVICE DOOR
(INTERIOR VIEW)

A

2410323 S00061525323_V1

Forward Galley Service Door General Visual (External)
Figure 214/05-41-08-990-814 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-815

15. INTERNAL - ZONAL (GVI): Forward Galley Service Door

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
SOPM 20-50-19	General Sealing

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

C. Location Zones

Zone	Area
841	Forward Galley Service Door

D. Access Panels

Number	Name/Location
841AW	Fwd Galley Service Door - Door Liner
841AZ	Forward Galley Service Door - Torque Tube Access
841BZ	Forward Galley Service Door - Handle Box and Cam for Handle Box Access
841CZ	Forward Galley Service Door - Handle Box Access
841DZ	Forward Galley Service Door - Lower Hinge Access
841EZ	Forward Galley Service Door - Upper Hinge Access
841FZ	Forward Galley Service Door - Torque Tube Access
841GZ	Forward Galley Service Door - Torque Tube Access

E. Zonal Inspection

SUBTASK 05-41-08-010-014

(1) Open these access panels:

Number	Name/Location
841AW	Fwd Galley Service Door - Door Liner
841AZ	Forward Galley Service Door - Torque Tube Access
841BZ	Forward Galley Service Door - Handle Box and Cam for Handle Box Access
841CZ	Forward Galley Service Door - Handle Box Access
841DZ	Forward Galley Service Door - Lower Hinge Access
841EZ	Forward Galley Service Door - Upper Hinge Access

SUBTASK 05-41-08-010-028

(2) Remove these access doors:

Number	Name/Location
841FZ	Forward Galley Service Door - Torque Tube Access
841GZ	Forward Galley Service Door - Torque Tube Access

(a) Remove a pressure fay surface seal that was previously applied between the mating surfaces of the cover plate and the inner skin (SOPM 20-50-19).

(b) Remove a parting agent that was previously applied on the mating surfaces of the cover plate (SOPM 20-50-19).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-08-210-015

(3) Perform an internal zonal inspection (GVI) of the Forward Galley Service Door - Section 41, Sta 340.

SUBTASK 05-41-08-410-031

(4) Install these access doors:

Number	Name/Location
841FZ	Forward Galley Service Door - Torque Tube Access
841GZ	Forward Galley Service Door - Torque Tube Access

(a) Apply a parting agent to the mating surfaces of the cover plate (SOPM 20-50-19).

(b) Apply a pressure fay surface seal with sealant, A00247, between the mating surfaces of the cover plate and the inner skin (SOPM 20-50-19).

(c) Install the cover plate onto the door structure with the bolts and the washers.

1) If a new bolt is to be used, make sure that the grip length is the same as the original bolt.

NOTE: Grip length is important.


SUBTASK 05-41-08-410-014

(5) Close these access panels:

Number	Name/Location
841AW	Fwd Galley Service Door - Door Liner
841AZ	Forward Galley Service Door - Torque Tube Access
841BZ	Forward Galley Service Door - Handle Box and Cam for Handle Box Access
841CZ	Forward Galley Service Door - Handle Box Access
841DZ	Forward Galley Service Door - Lower Hinge Access
841EZ	Forward Galley Service Door - Upper Hinge Access

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

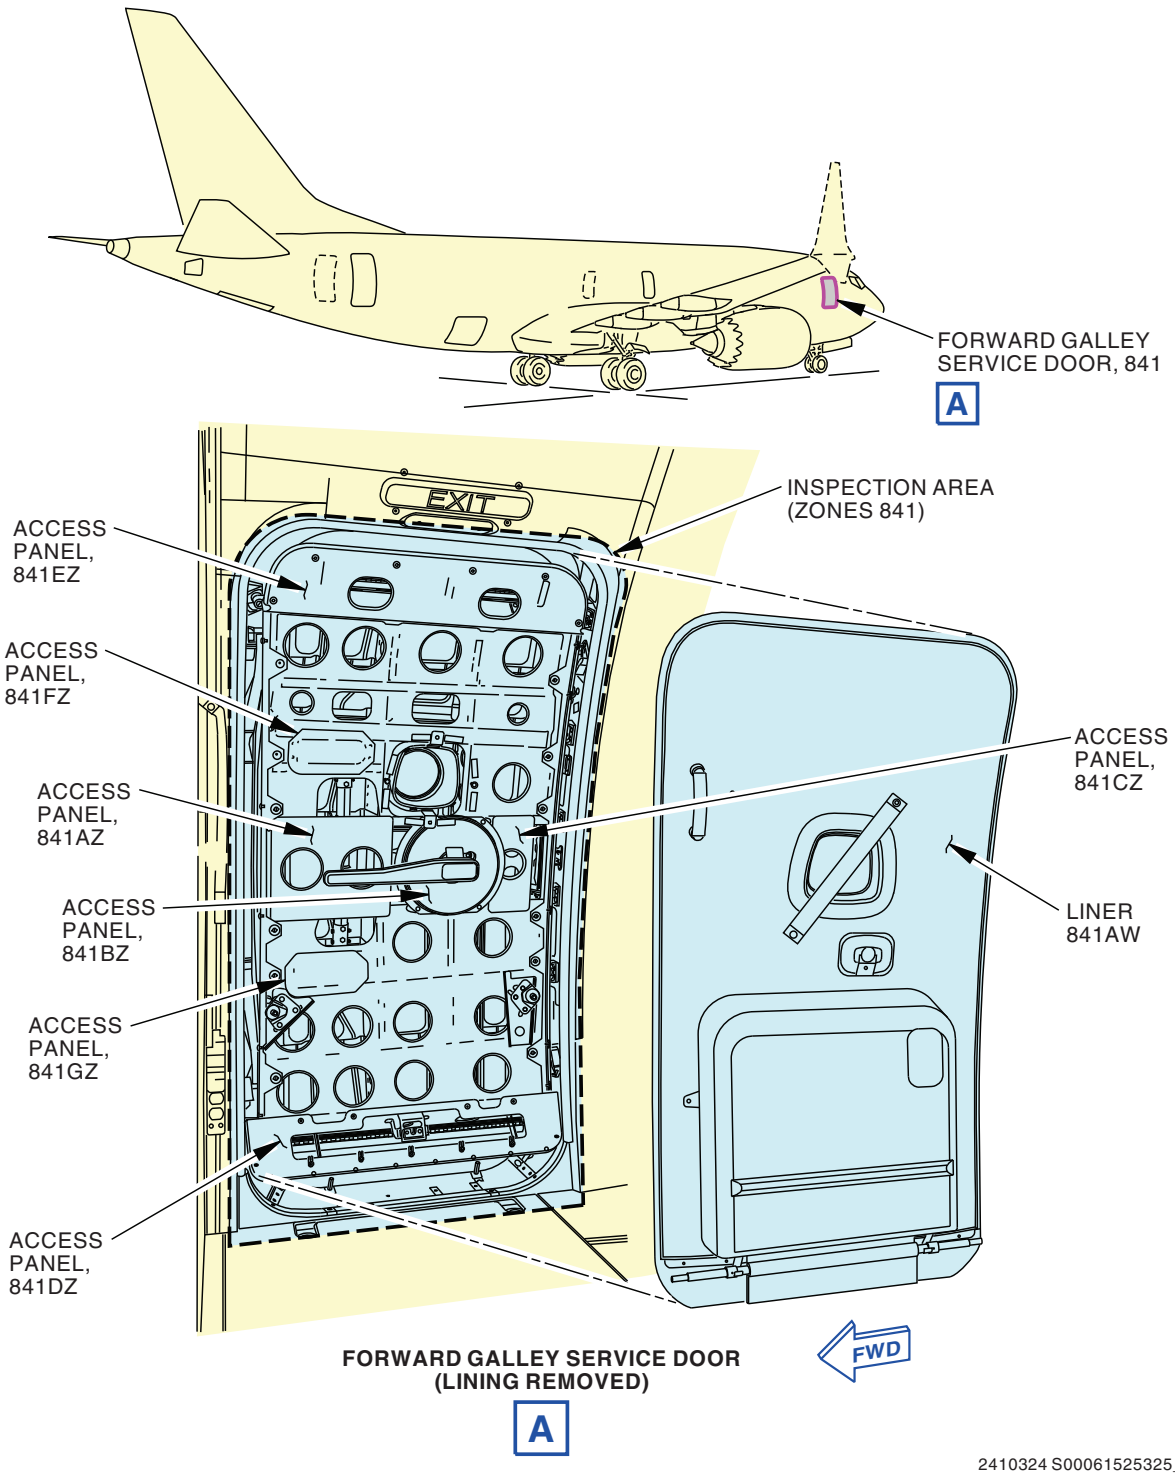

Forward Galley Service Door General Visual (Internal)
Figure 215/05-41-08-990-815

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-816

16. EXTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
842	Right Forward Emergency Exit

B. Access Panels

Number	Name/Location
842	Emergency Exit Door (AOE)

C. Zonal Inspection

SUBTASK 05-41-08-010-015

(1) Open this access panel:

Number	Name/Location
842	Emergency Exit Door (AOE)

SUBTASK 05-41-08-210-016

(2) Perform an external zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 589.5.


SUBTASK 05-41-08-410-015

(3) Close this access panel:

Number	Name/Location
842	Emergency Exit Door (AOE)

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

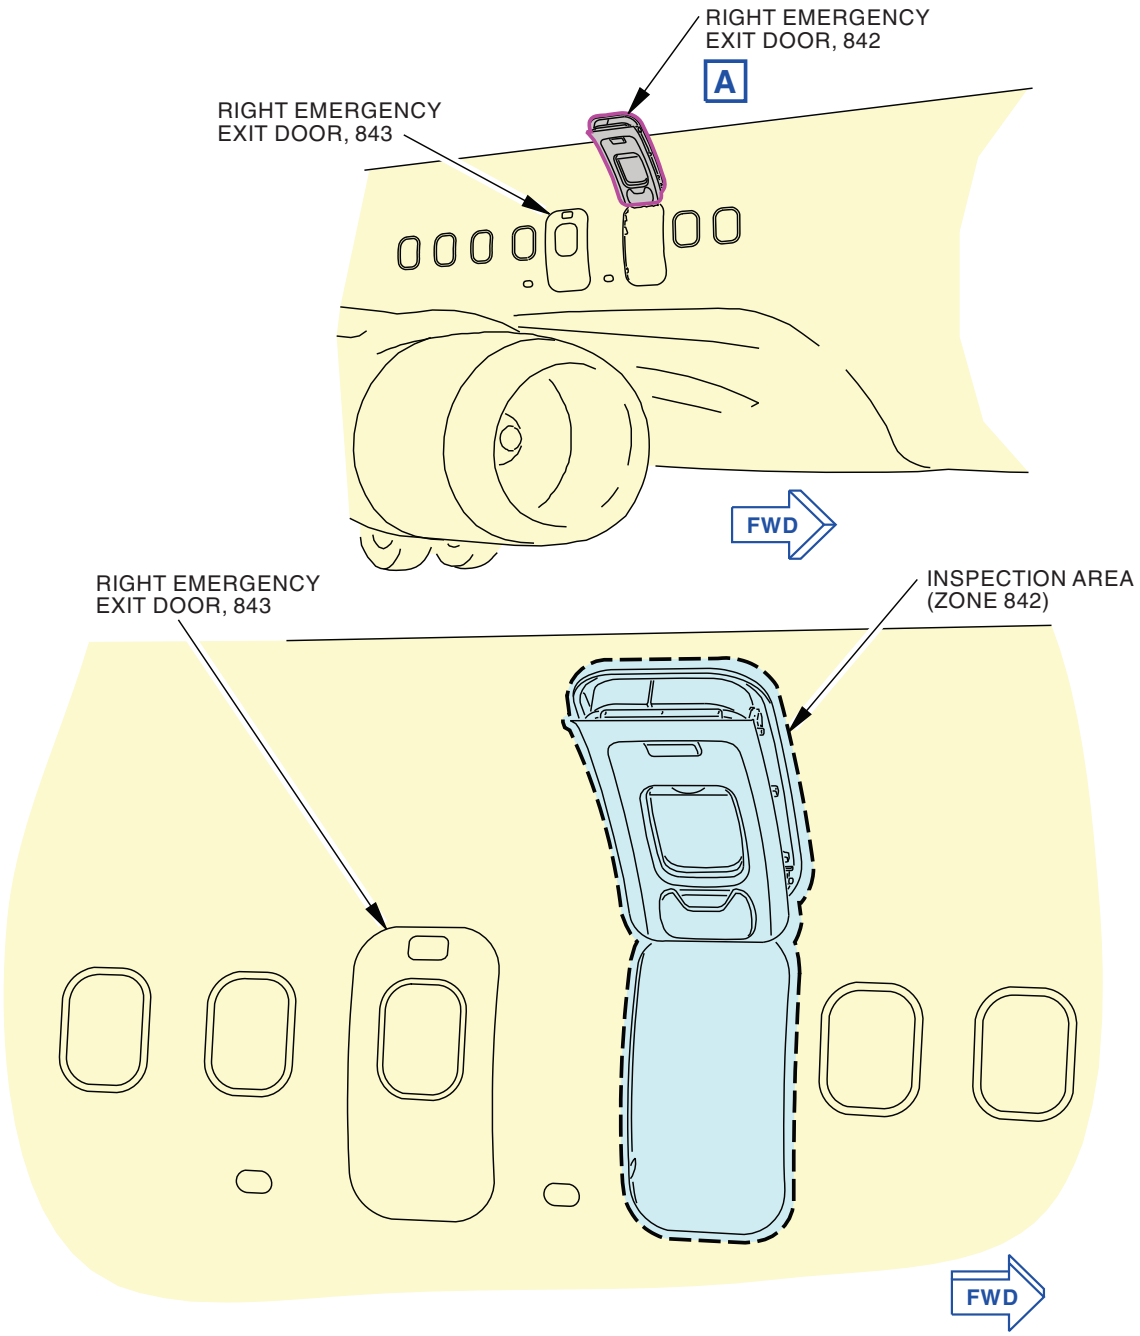

Right Emergency Exit Door General Visual (External)
Figure 216/05-41-08-990-816

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-817

17. INTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
842	Right Forward Emergency Exit

B. Access Panels

Number	Name/Location
842AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

C. Zonal Inspection

SUBTASK 05-41-08-010-016

(1) Open this access panel:

Number	Name/Location
842AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

NOTE: Automatic Overwing Exit Door liner removal required.

SUBTASK 05-41-08-210-017

(2) Perform an internal zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 589.5.


SUBTASK 05-41-08-410-016

(3) Close this access panel:

Number	Name/Location
842AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

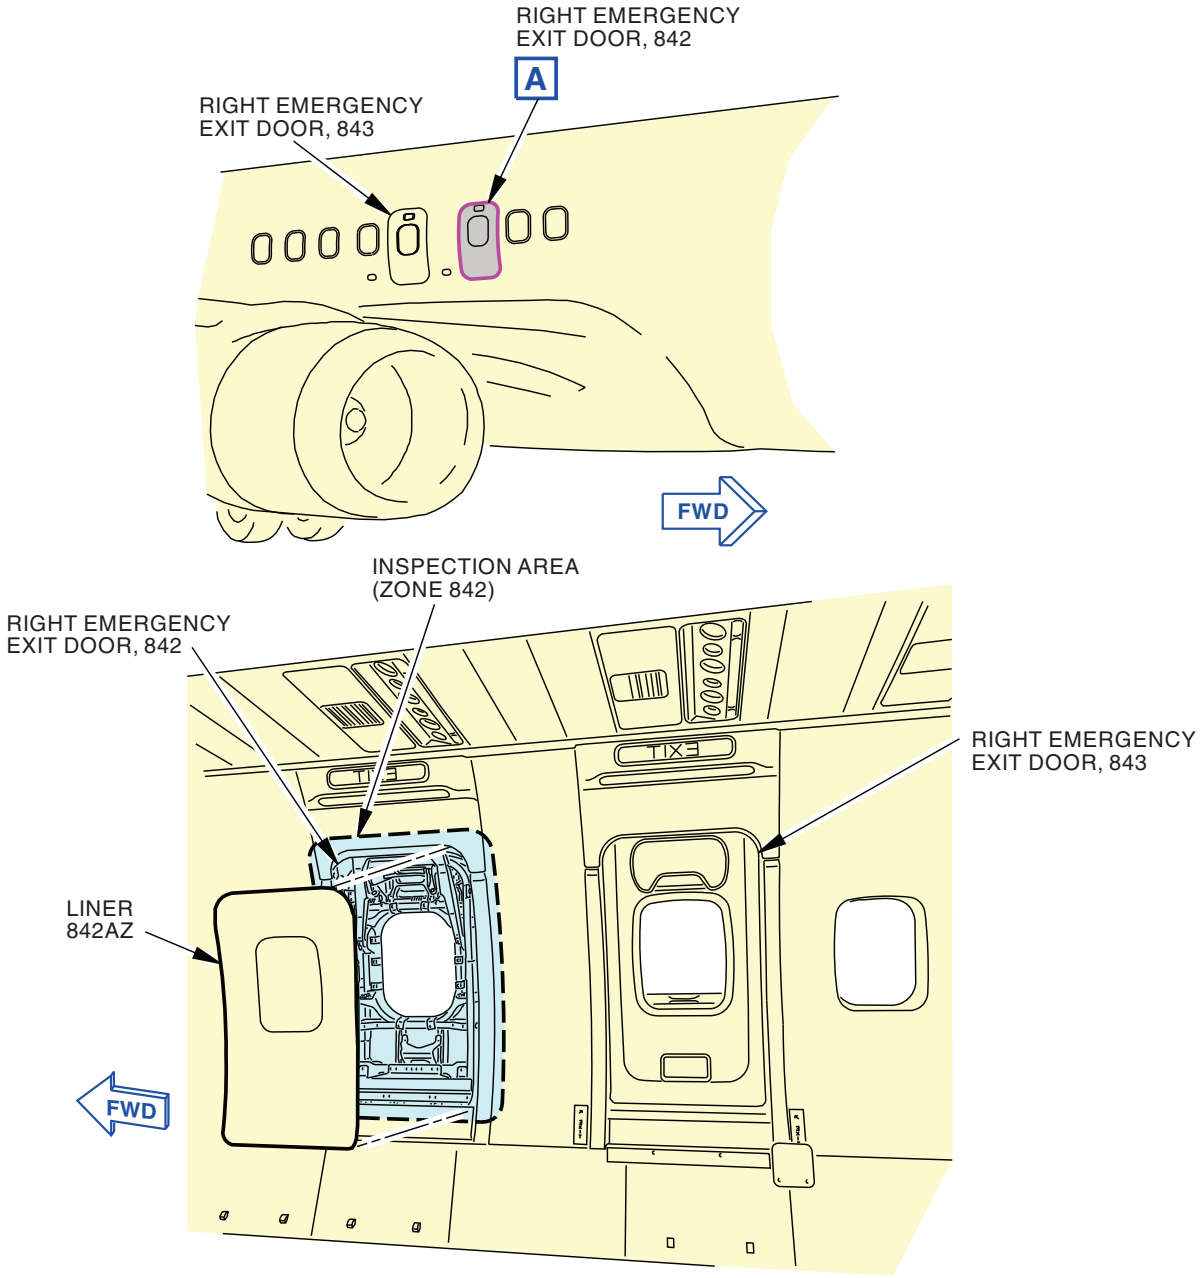

RIGHT EMERGENCY EXIT DOOR
(DOOR IN THE CLOSED POSITION WITH DOOR LINING REMOVED)

A

2410326 S00061525329_V4

Right Emergency Exit Door General Visual (Internal)
Figure 217/05-41-08-990-817

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-818

18. EXTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 218)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
843	Right Emergency Exit (STA 627.5)

B. Access Panels

Number	Name/Location
843	Emergency Exit Door (AOE)

C. Zonal Inspection

SUBTASK 05-41-08-010-017

(1) Open this access panel:

Number	Name/Location
843	Emergency Exit Door (AOE)

SUBTASK 05-41-08-210-018

(2) Perform an external zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 627.


SUBTASK 05-41-08-410-017

(3) Close this access panel:

Number	Name/Location
843	Emergency Exit Door (AOE)

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

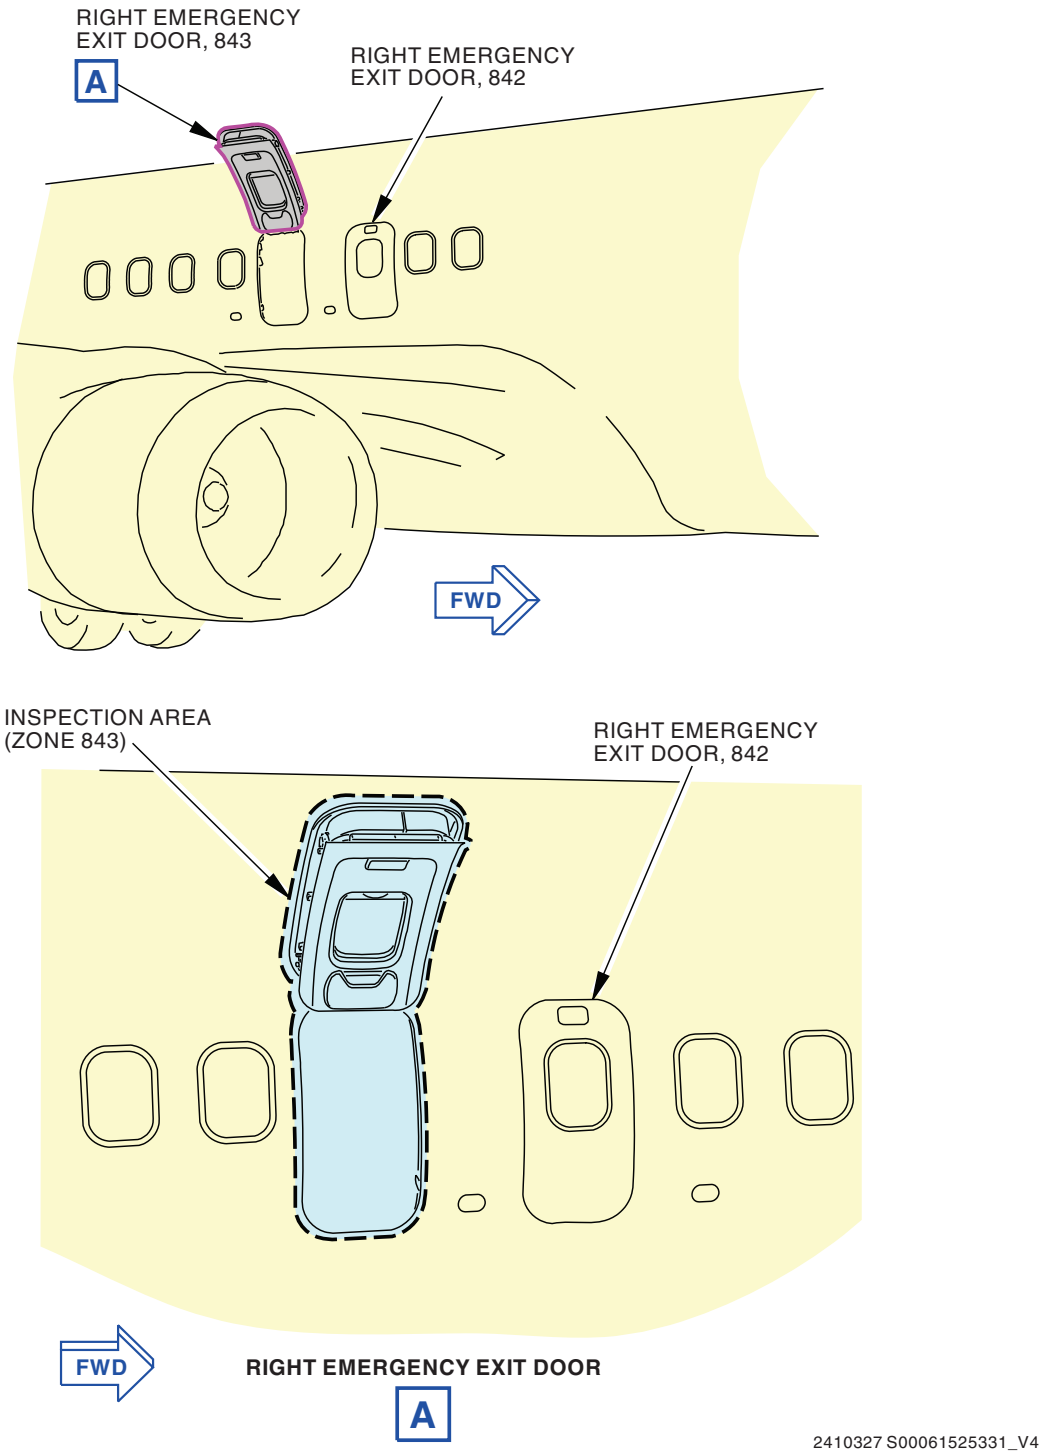

Right Emergency Exit Door General Visual (External)
Figure 218/05-41-08-990-818

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-819

19. INTERNAL - ZONAL (GVI): Automatic Overwing Exit

(Figure 219)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
843	Right Emergency Exit (STA 627.5)

B. Access Panels

Number	Name/Location
843AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

C. Zonal Inspection

SUBTASK 05-41-08-010-018

(1) Open this access panel:

Number	Name/Location
843AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

NOTE: Automatic Overwing Exit Door liner removal required.

SUBTASK 05-41-08-210-019

(2) Perform an internal zonal inspection (GVI) of the Automatic Overwing Exit - Section 44, Sta 627.


SUBTASK 05-41-08-410-018

(3) Close this access panel:

Number	Name/Location
843AZ	Panel Assy - Emergency Exit Door (AOE) - Door Liner

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

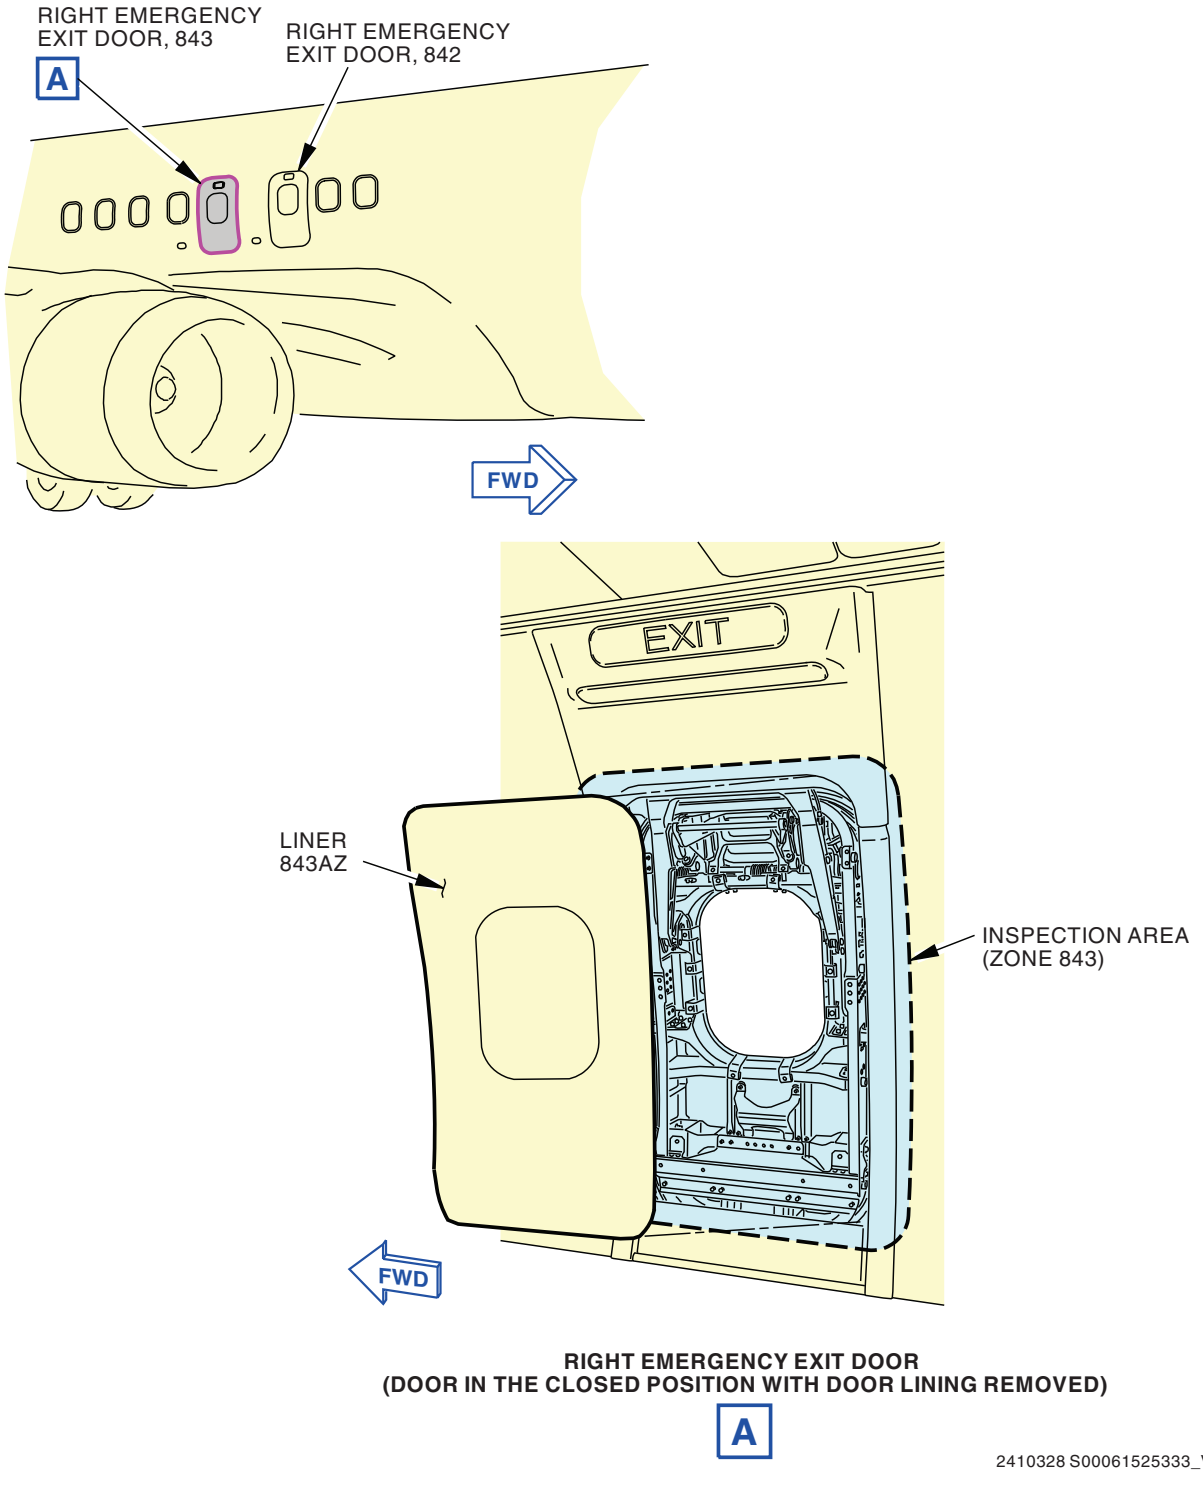

Right Emergency Exit Door General Visual (Internal)
Figure 219/05-41-08-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-820

20. EXTERNAL - ZONAL (GVI): Aft Galley Service Door

(Figure 220)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
844	Aft Galley Service Door

B. Access Panels

Number	Name/Location
844	Aft Galley Service Door

C. Zonal Inspection

SUBTASK 05-41-08-010-019

(1) Open this access panel:

Number	Name/Location
844	Aft Galley Service Door

SUBTASK 05-41-08-210-020

(2) Perform an external zonal inspection (GVI) of the Aft Galley Service Door - Section 47, Sta 980.


SUBTASK 05-41-08-410-019

(3) Close this access panel:

Number	Name/Location
844	Aft Galley Service Door


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

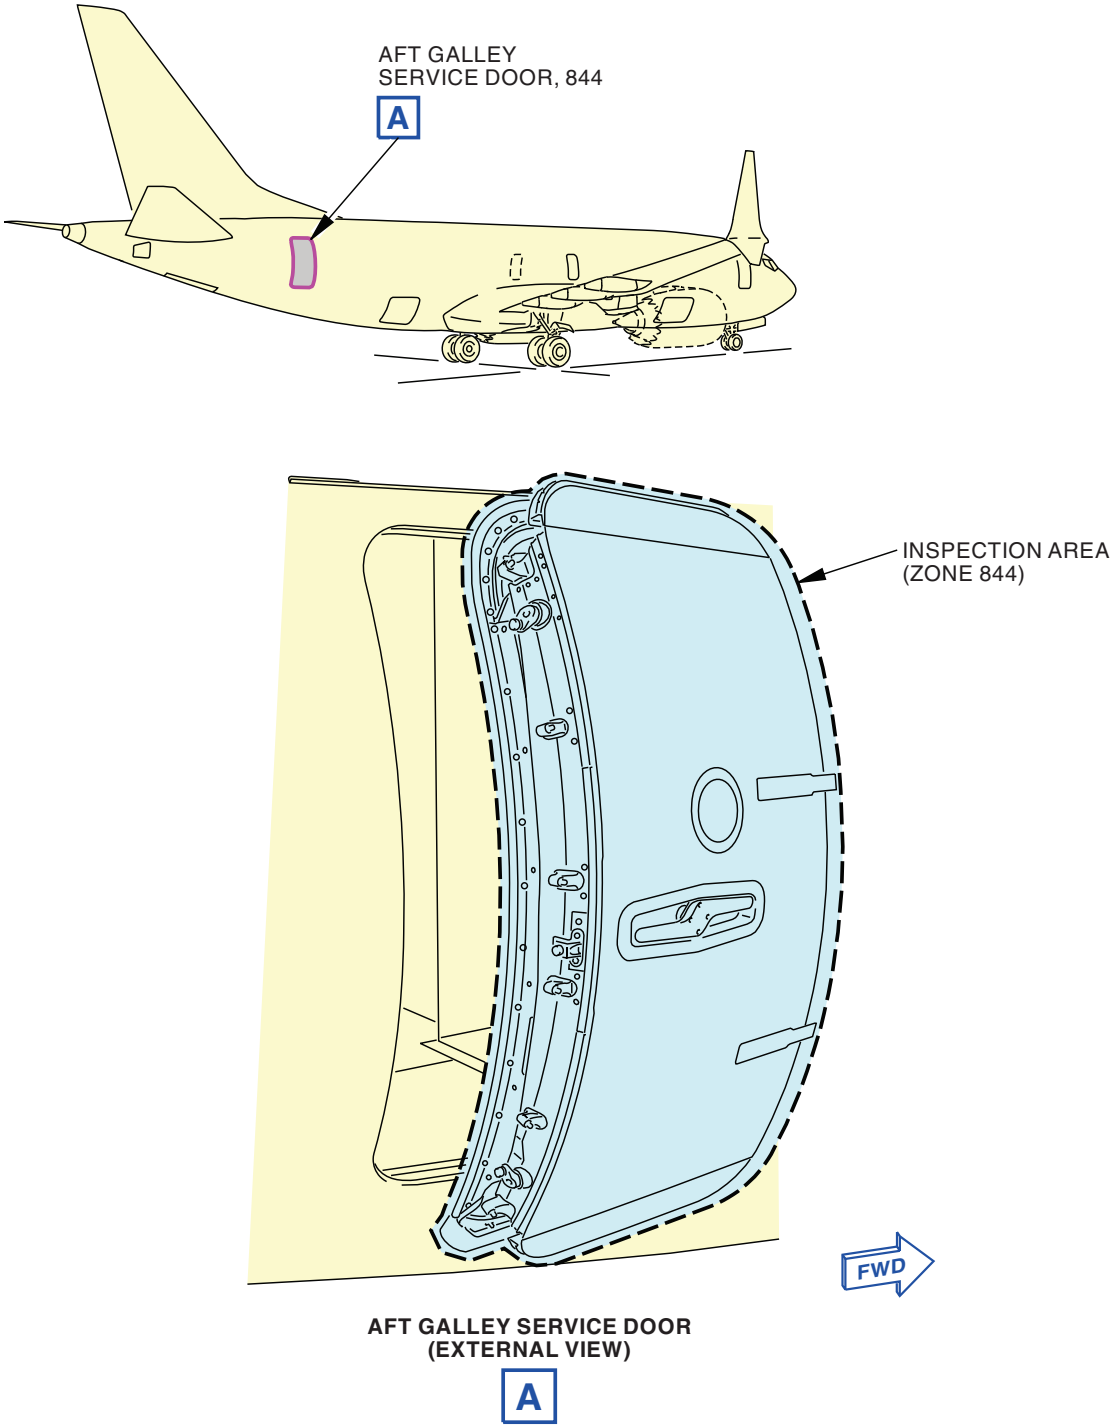

Aft Galley Service Door General Visual (External)
Figure 220/05-41-08-990-820 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

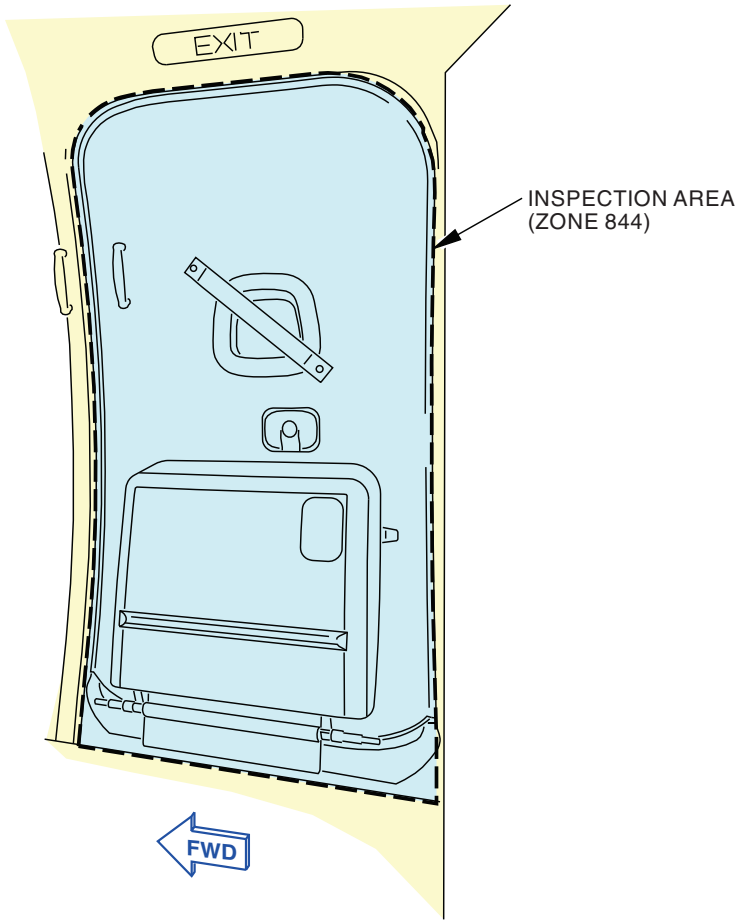

**AFT GALLEY SERVICE DOOR
(INTERIOR VIEW)**

A

2410330 S00061525336_V1

**Aft Galley Service Door General Visual (External)
Figure 220/05-41-08-990-820 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 05-41-08-210-821

21. INTERNAL - ZONAL (GVI): Aft Galley Service Door

(Figure 221)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
SOPM 20-50-19	General Sealing

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

C. Location Zones

Zone	Area
844	Aft Galley Service Door

D. Access Panels

Number	Name/Location
844AW	Aft Galley Service Door - Door Liner (Cosmetic)
844AZ	Aft Galley Service Door - Torque Tube Access
844BZ	Aft Galley Service Door - Handle Box and Cam for Handle Box Access
844CZ	Aft Galley Service Door - Handle Box Access
844DZ	Aft Galley Service Door - Lower Hinge Access
844EZ	Aft Galley Service Door - Upper Hinge Access
844FZ	Aft Galley Service Door - Torque Tube Access
844GZ	Aft Galley Service Door - Torque Tube Access

E. Zonal Inspection

SUBTASK 05-41-08-010-020

(1) Open these access panels:

Number	Name/Location
844AW	Aft Galley Service Door - Door Liner (Cosmetic)
844AZ	Aft Galley Service Door - Torque Tube Access
844BZ	Aft Galley Service Door - Handle Box and Cam for Handle Box Access
844CZ	Aft Galley Service Door - Handle Box Access
844DZ	Aft Galley Service Door - Lower Hinge Access
844EZ	Aft Galley Service Door - Upper Hinge Access

SUBTASK 05-41-08-010-029

(2) Remove these access doors:

Number	Name/Location
844FZ	Aft Galley Service Door - Torque Tube Access
844GZ	Aft Galley Service Door - Torque Tube Access

(a) Remove a pressure fay surface seal that was previously applied between the mating surfaces of the cover plate and the inner skin (SOPM 20-50-19).

(b) Remove a parting agent that was previously applied on the mating surfaces of the cover plate (SOPM 20-50-19).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-41-08-210-021

(3) Perform an internal zonal inspection (GVI) of the Aft Galley Service Door - Section 47, Sta 980.

SUBTASK 05-41-08-410-032

(4) Install these access doors:

Number	Name/Location
844FZ	Aft Galley Service Door - Torque Tube Access
844GZ	Aft Galley Service Door - Torque Tube Access

(a) Apply a parting agent to the mating surfaces of the cover plate (SOPM 20-50-19).

(b) Apply a pressure fay surface seal with sealant, A00247, between the mating surfaces of the cover plate and the inner skin (SOPM 20-50-19).

(c) Install the cover plate onto the door structure with the bolts and the washers.

1) If a new bolt is to be used, make sure that the grip length is the same as the original bolt.

NOTE: Grip length is important.


SUBTASK 05-41-08-410-020

(5) Close these access panels:

Number	Name/Location
844AW	Aft Galley Service Door - Door Liner (Cosmetic)
844AZ	Aft Galley Service Door - Torque Tube Access
844BZ	Aft Galley Service Door - Handle Box and Cam for Handle Box Access
844CZ	Aft Galley Service Door - Handle Box Access
844DZ	Aft Galley Service Door - Lower Hinge Access
844EZ	Aft Galley Service Door - Upper Hinge Access

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

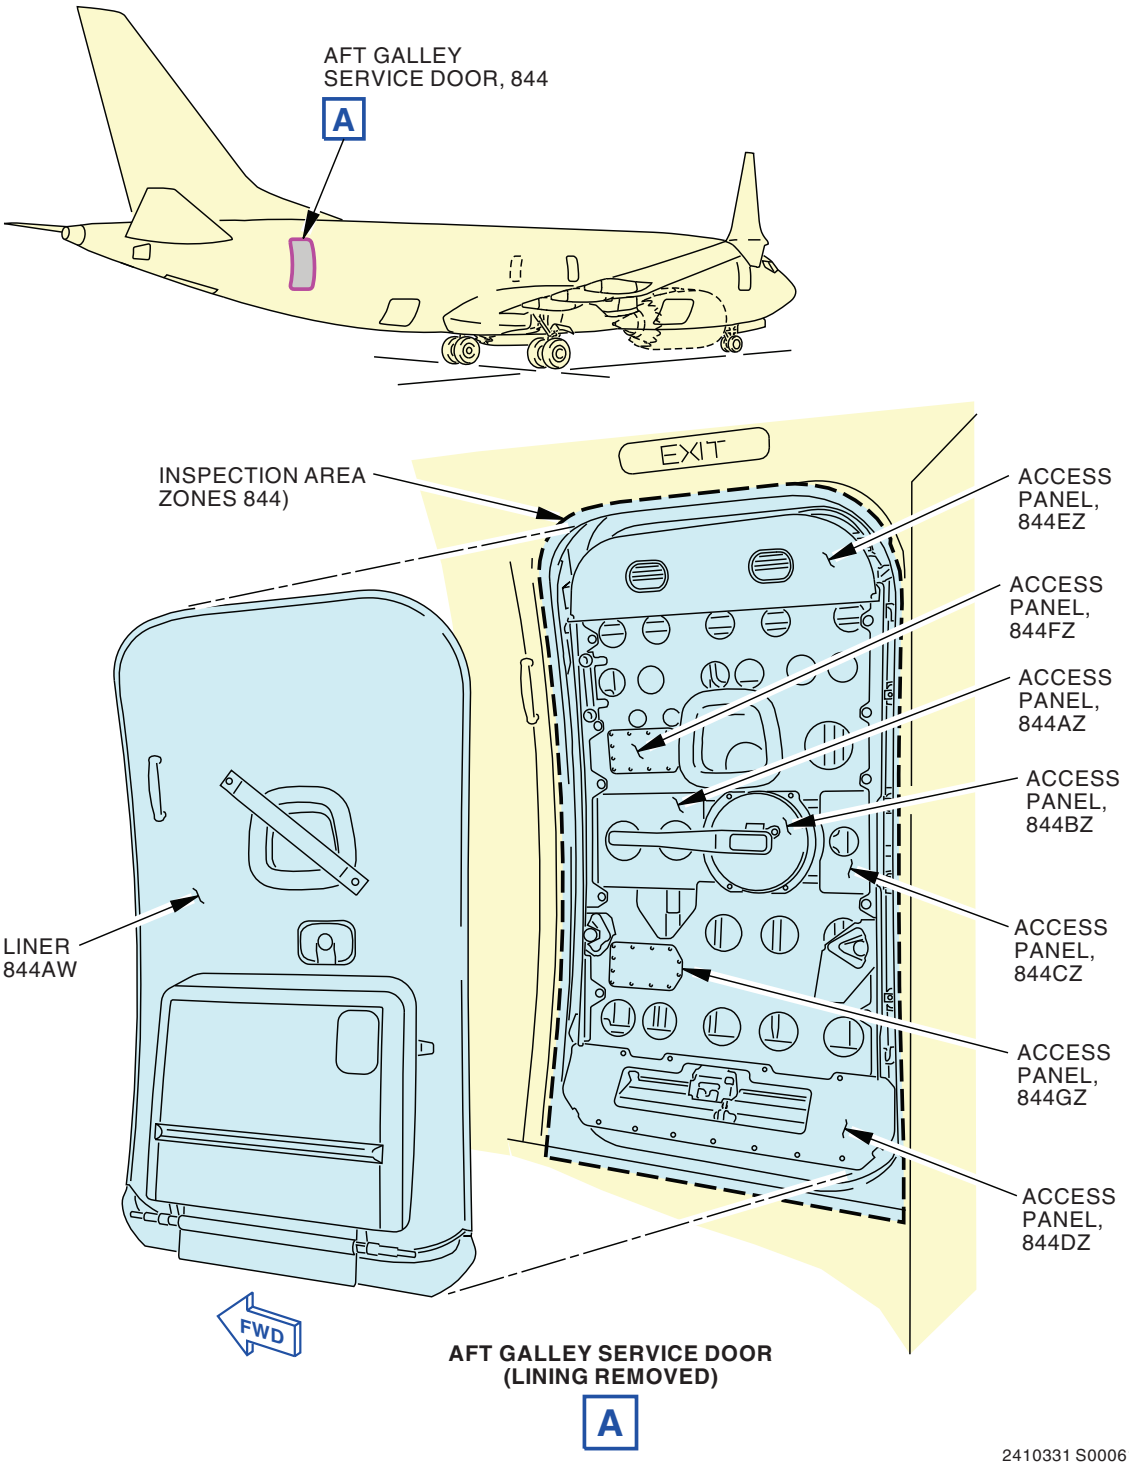

Aft Galley Service Door General Visual (Internal)
Figure 221/05-41-08-990-821

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1. General

A. This pageblock contains MSG-3 task card data.

EWIS

TASK 05-42-01-100-801

2. Restore: Area Forward of Nose Wheel Well. (EZAP)

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
112	Area Forward of Nose Landing Gear Wheel Well

D. Access Panels

Number	Name/Location
112A	Forward Access Door

E. Procedure

SUBTASK 05-42-01-010-001

(1) Open this access panel:

Number	Name/Location
112A	Forward Access Door

SUBTASK 05-42-01-160-001

(2) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.

(3) Restore (Clean) Area Forward of Nose Wheel Well. (EZAP)

SUBTASK 05-42-01-910-001

(4) Refer to the task: Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-42-01-410-001


(5) Close this access panel:

Number	Name/Location
112A	Forward Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

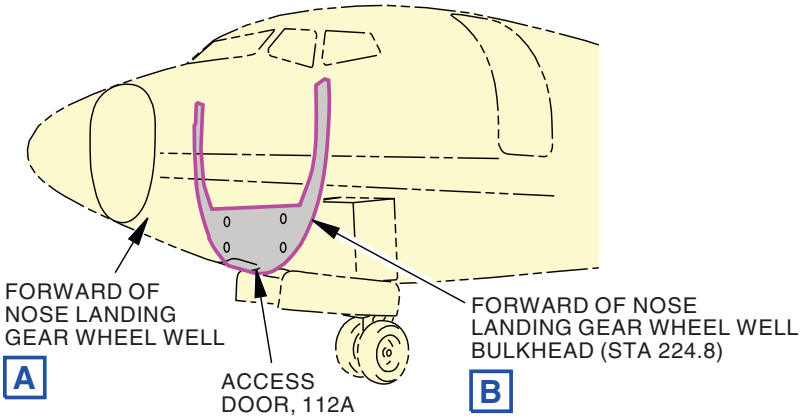

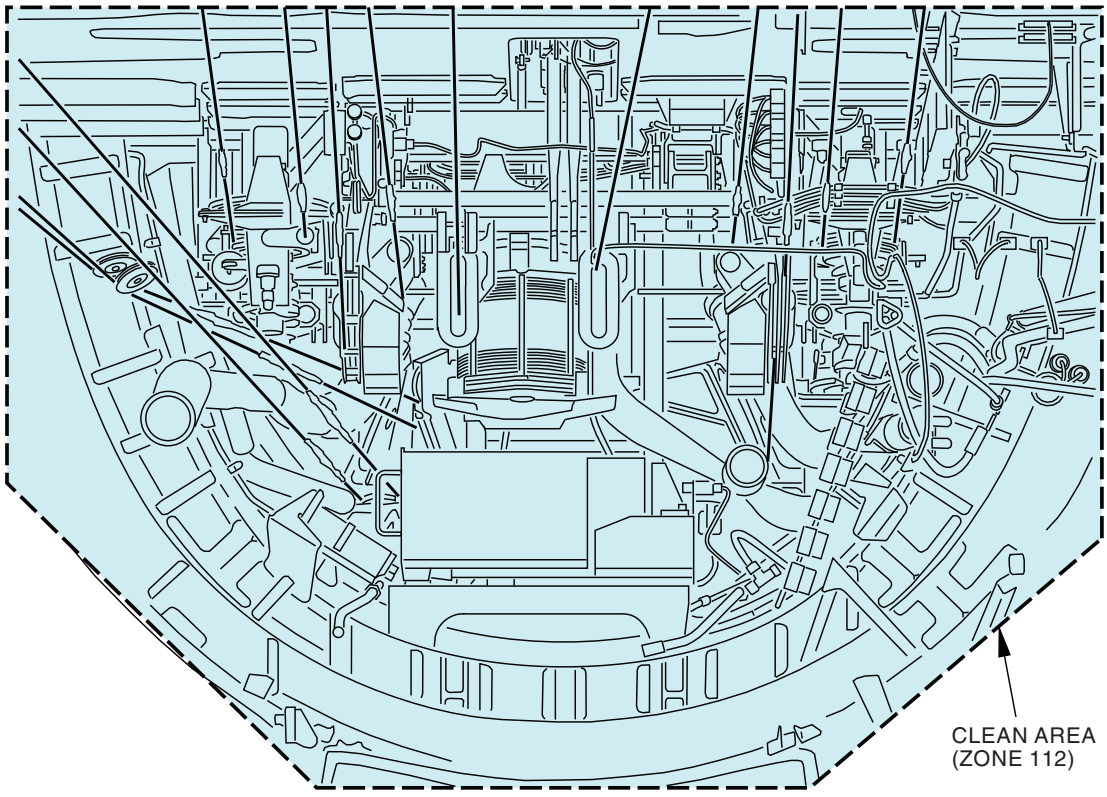


**FORWARD OF NOSE LANDING GEAR WHEEL WELL
(VIEW IN THE FORWARD DIRECTION)**

A

2410332 S00061525343_V1

**Area Forward of Nose Wheel Well
Figure 201/05-42-01-990-801 (Sheet 1 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

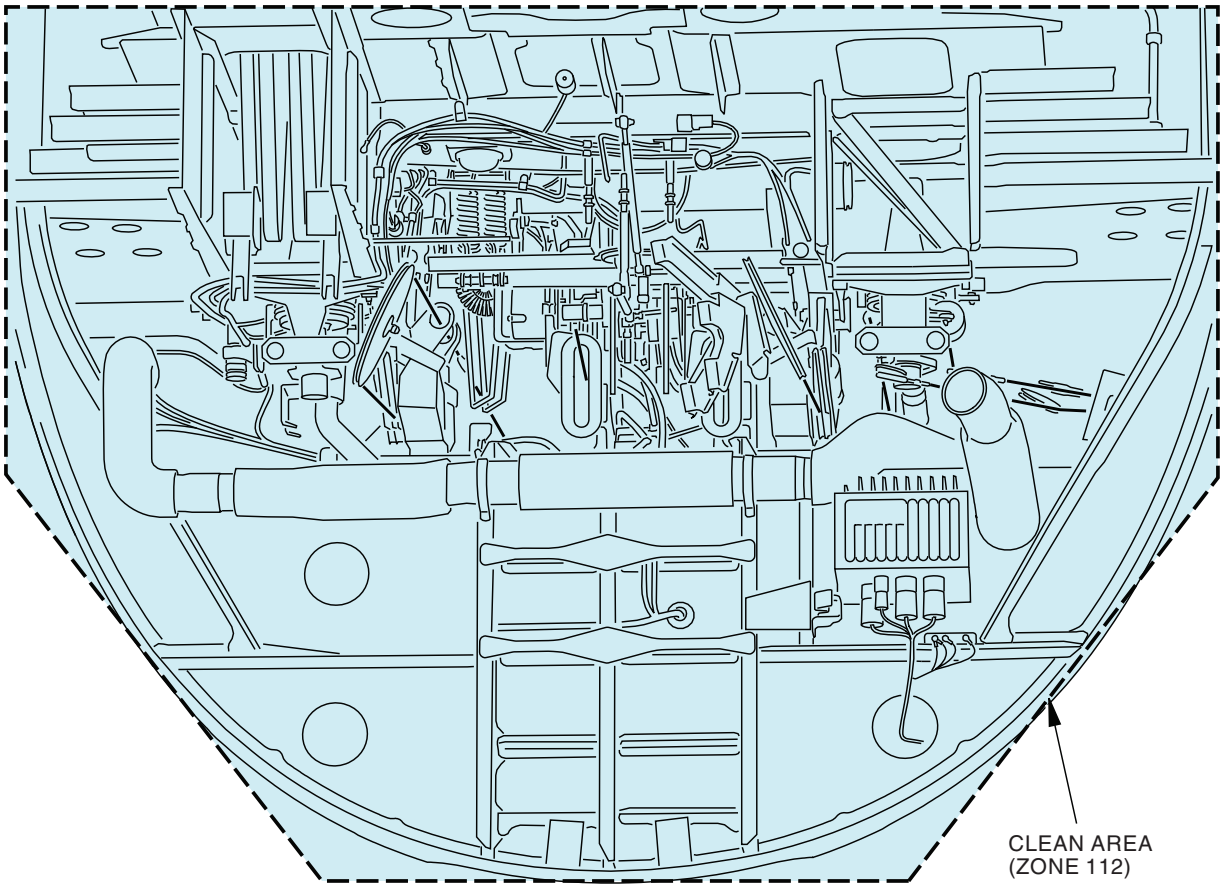

**FORWARD OF NOSE LANDING GEAR WHEEL WELL BULKHEAD (STA 224.8)
(VIEW IN THE AFT DIRECTION)**

B

2410333 S00061525344_V1

**Area Forward of Nose Wheel Well
Figure 201/05-42-01-990-801 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-802

3. **Restore: Areas Behind the Equipment Racks in the Electrical and Electronics Compartment. (EZAP)**

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door
117BL	Forward Airstair Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

E. Procedure

SUBTASK 05-42-01-010-002

(1) Open these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
117BL	Forward Airstair Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

SUBTASK 05-42-01-160-002

(2) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.

(3) Restore (Clean) areas behind the equipment racks in the Electrical and Electronics Compartment, and inside the Airstair Compartment (if installed). (EZAP)

SUBTASK 05-42-01-910-002

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 05-42-01-410-002

(5) Close these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
117BL	Forward Airstair Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

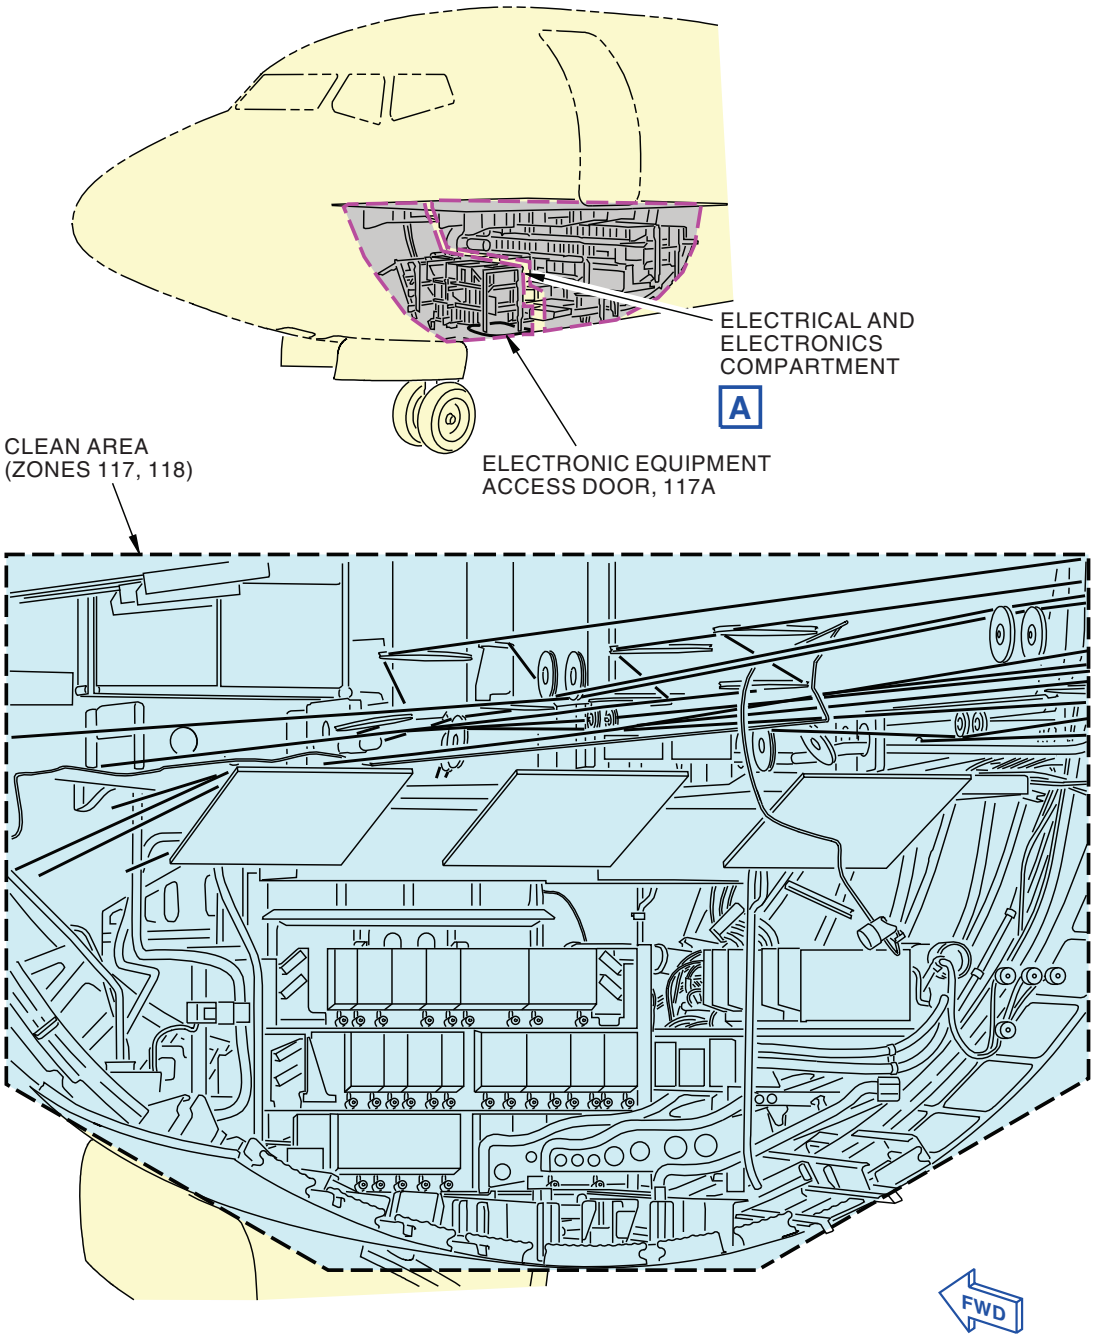


ELECTRICAL AND ELECTRONICS COMPARTMENT
(VIEW IN THE FORWARD DIRECTION)

A

2410334 S00061525346_V1

Electrical and Electronics Compartment
Figure 202/05-42-01-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

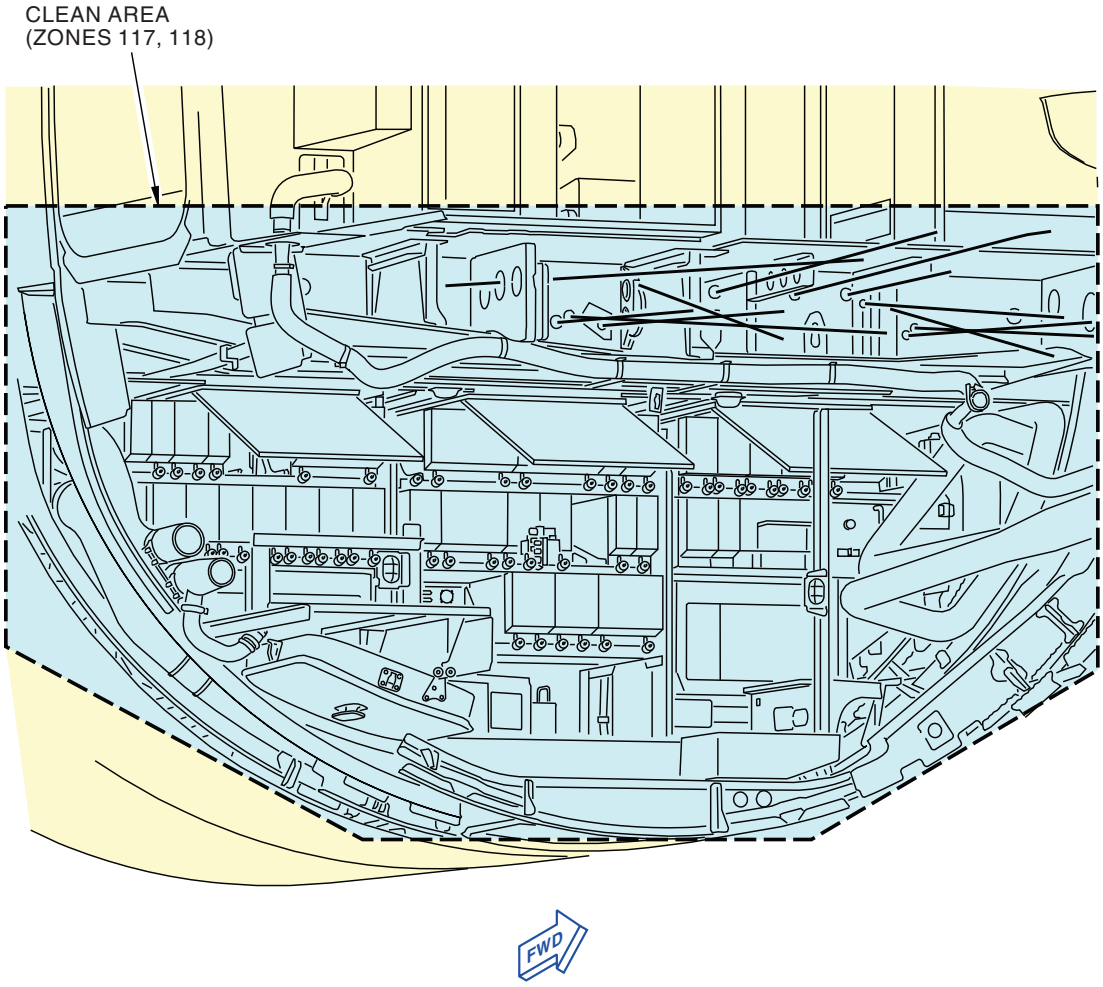

**ELECTRICAL AND ELECTRONICS COMPARTMENT
(VIEW IN THE AFT DIRECTION)**

A

2410335 S00061525347_V1

**Electrical and Electronics Compartment
Figure 202/05-42-01-990-802 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-803

4. Restore: Area Above and Outboard of Nose Wheel Well. (EZAP)

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
05-51-91-790-801	Cabin Pressure Leak Test (P/B 201)
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
53-14-01-020-801	Nose Wheel Well Access Panels Removal (P/B 401)
53-14-01-420-801	Nose Wheel Well Access Panels Installation (P/B 401)

C. Location Zones

Zone	Area
113	Area Above and Outboard of Nose Landing Gear Wheel Well - Left
114	Area Above and Outboard of Nose Landing Gear Wheel Well - Right

D. Access Panels

Number	Name/Location
113AC	Fwd Nose Wheel Well Upper Access Panel
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

E. Procedure

SUBTASK 05-42-01-010-003

(1) Open these access panels:

Number	Name/Location
113AC	Fwd Nose Wheel Well Upper Access Panel
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

NOTE: Remove/displace insulation blankets if it is required.

(a) Do this task: Nose Wheel Well Access Panels Removal, TASK 53-14-01-020-801.

SUBTASK 05-42-01-160-003

(2) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.

(3) Restore (Clean) area above and outboard of Nose Wheel Well. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-42-01-910-003

(4) Refer to the task: Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-42-01-410-003

(5) Close these access panels:


Number	Name/Location
113AC	Fwd Nose Wheel Well Upper Access Panel
113AW	Forward Nose Wheel Well Panel
113BW	Forward Nose Wheel Well Panel
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

(a) Do this task: Nose Wheel Well Access Panels Installation, TASK 53-14-01-420-801.

(b) Do this task: Cabin Pressure Leak Test, TASK 05-51-91-790-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

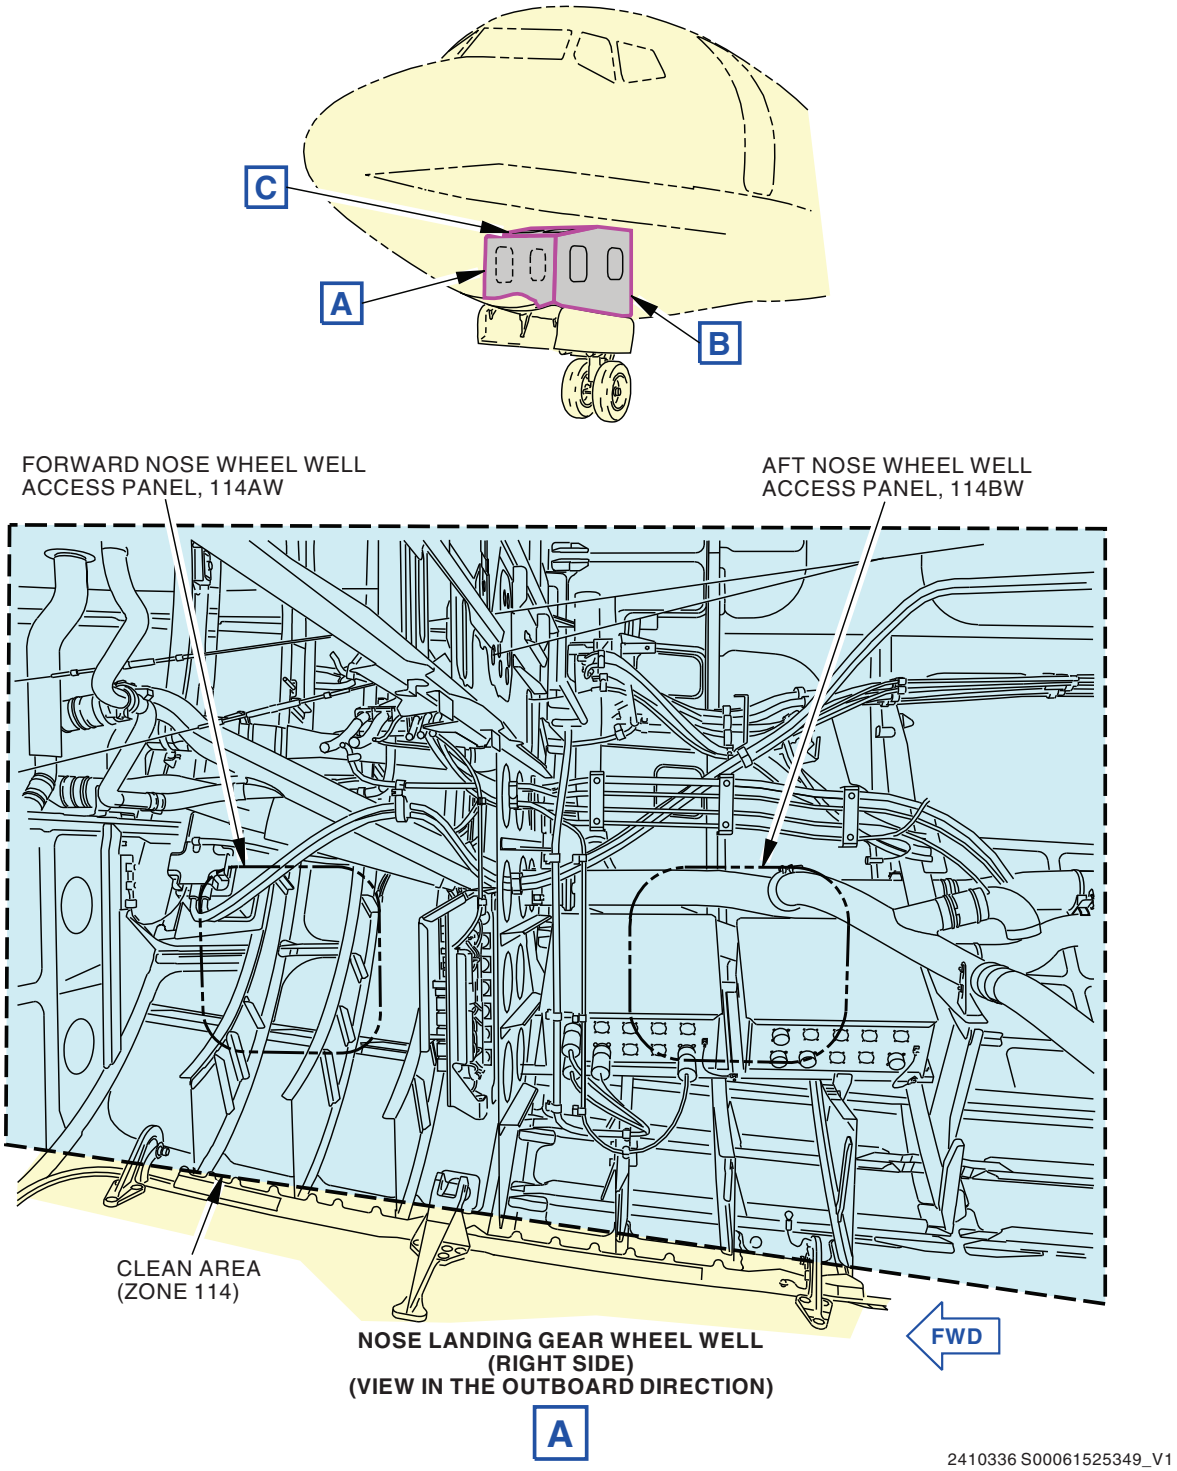

Nose Landing Gear Wheel Well
Figure 203/05-42-01-990-803 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

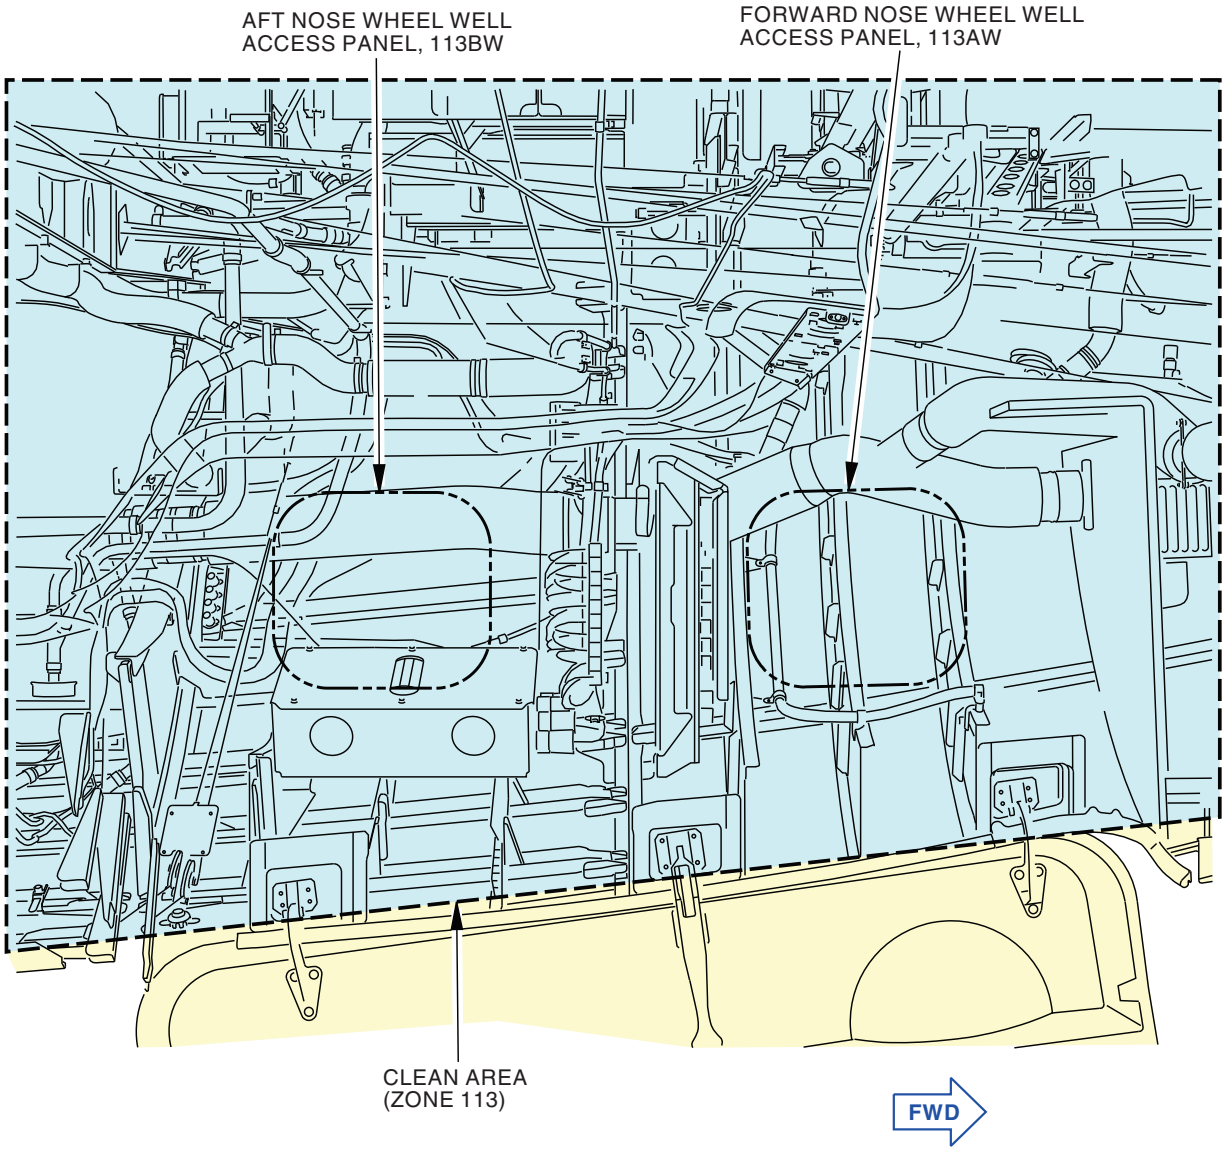


NOSE LANDING GEAR WHEEL WELL
(LEFT SIDE)
(VIEW IN THE OUTBOARD DIRECTION)

B

2410337 S00061525350_V1

Nose Landing Gear Wheel Well
Figure 203/05-42-01-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

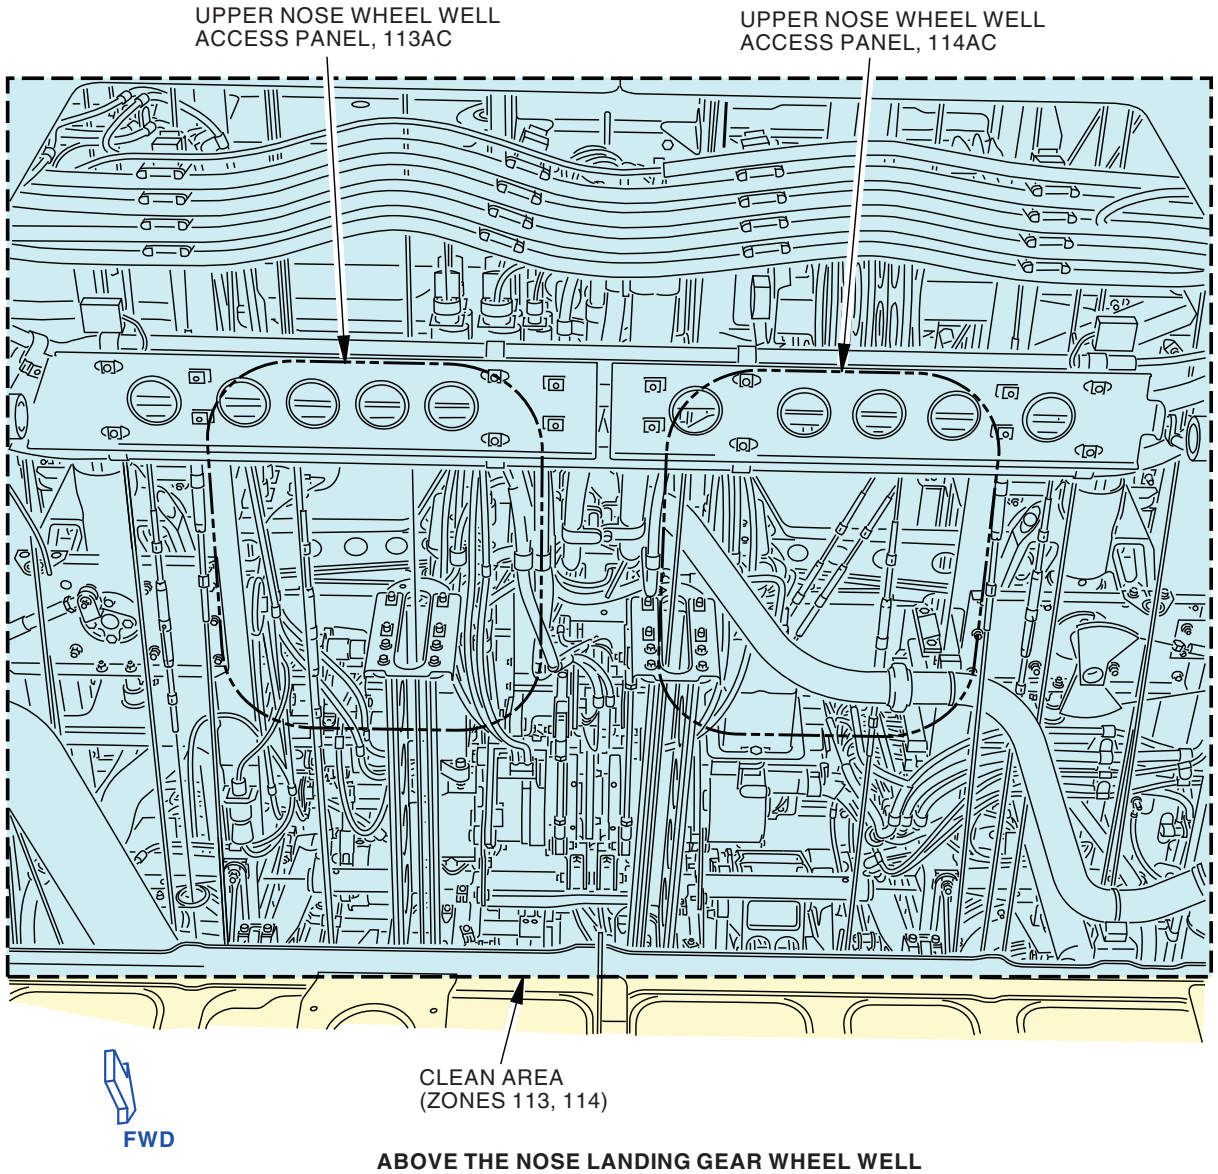

**ABOVE THE NOSE LANDING GEAR WHEEL WELL
(VIEW IN THE UP DIRECTION)**

C

2410338 S00061525351_V1

**Nose Landing Gear Wheel Well
Figure 203/05-42-01-990-803 (Sheet 3 of 3)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-804

5. Restore: Areas Behind Ceiling and Sidewall Panels in the Aft Cargo Compartment. (EZAP)
(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Procedure

NOTE: Ceiling and sidewall panels removal required.

SUBTASK 05-42-01-160-004

(1) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.


(2) Restore (Clean) areas behind ceiling and sidewall panels in the Aft Cargo Compartment. (EZAP)

SUBTASK 05-42-01-910-004

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

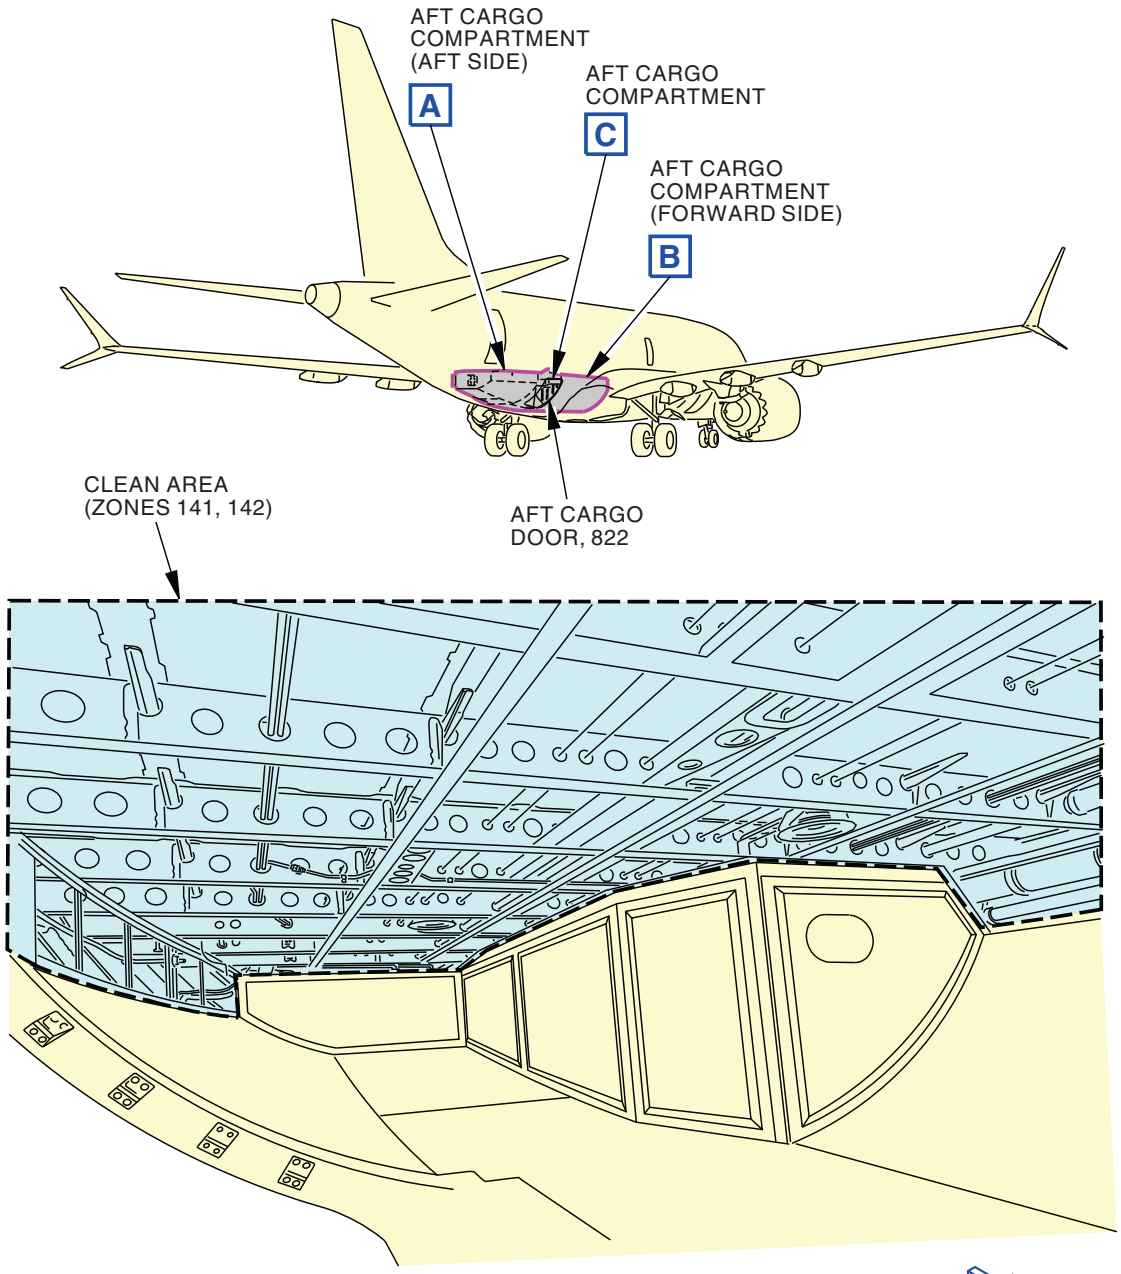


AFT CARGO COMPARTMENT
(AFT SIDE)
(UPPER ANGLED SIDEWALL AND CEILING PANELS REMOVED)

A

2410339 S00061525353_V1

Aft Cargo Compartment
Figure 204/05-42-01-990-804 (Sheet 1 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

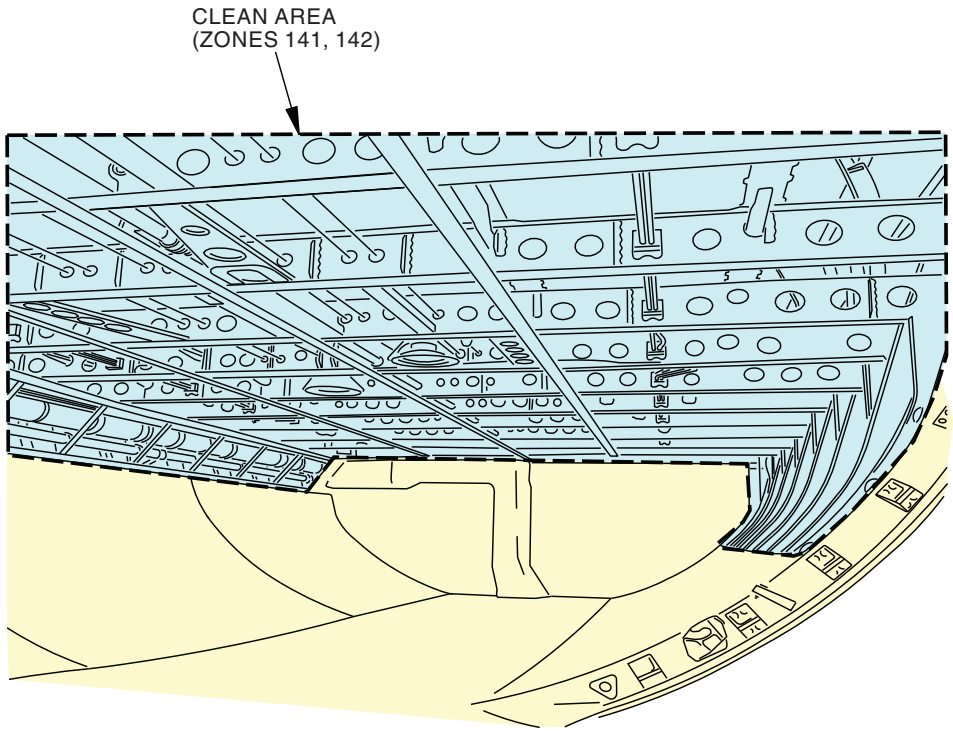


**AFT CARGO COMPARTMENT
(FORWARD SIDE)
(UPPER ANGLED SIDEWALL AND CEILING PANELS REMOVED)**

B

2410340 S00061525354_V1

**Aft Cargo Compartment
Figure 204/05-42-01-990-804 (Sheet 2 of 5)**


ECCN 9E991 BOEING PROPRIETARY - See title page for details

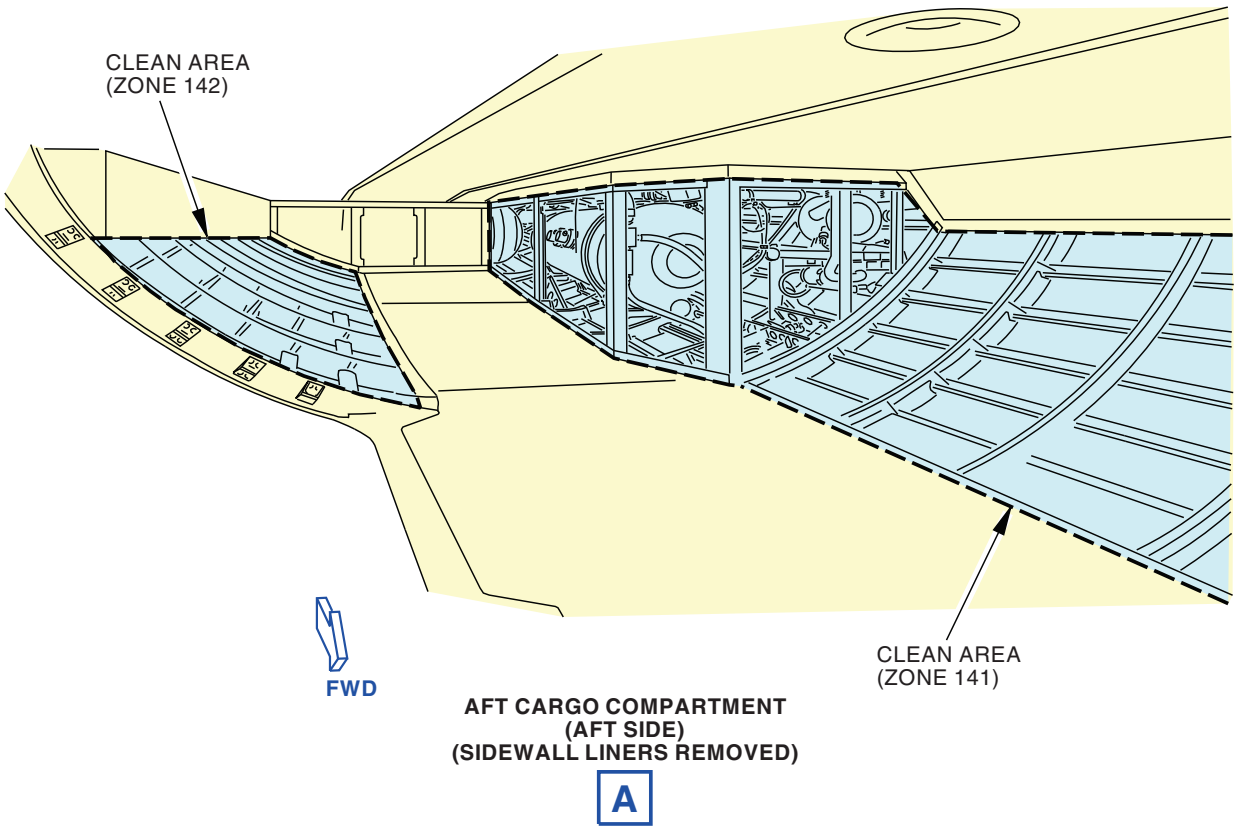

2410341 S00061525355_V1

Aft Cargo Compartment
Figure 204/05-42-01-990-804 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

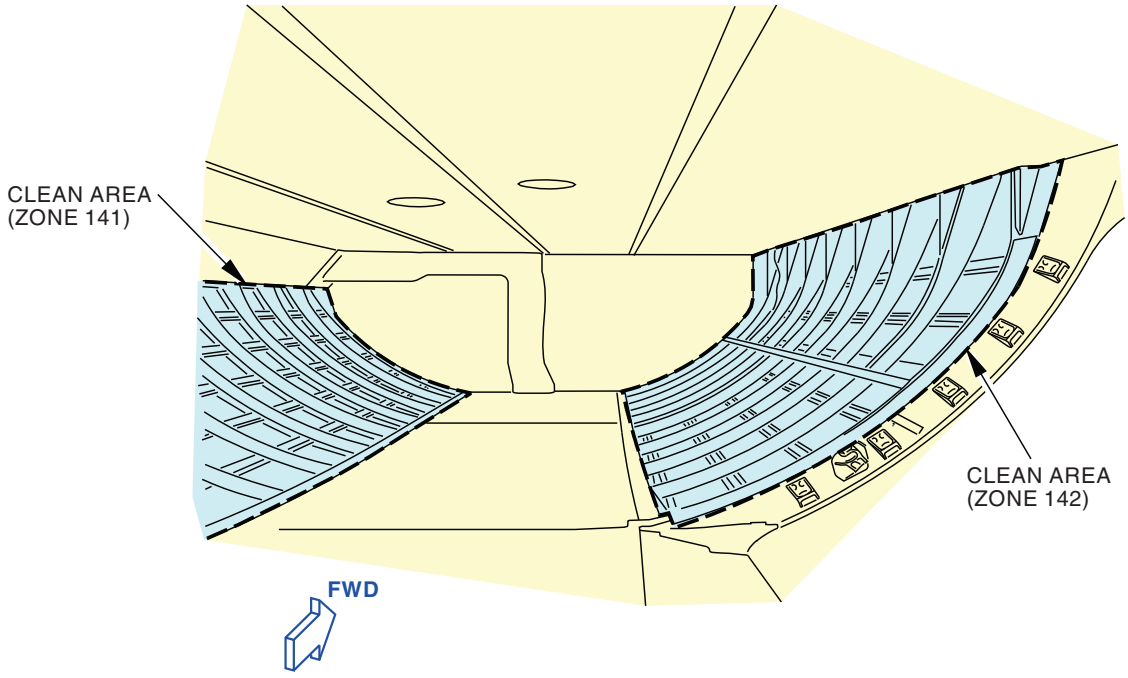


**AFT CARGO COMPARTMENT
(FORWARD SIDE)
(SIDEWALL LINERS REMOVED)**

B

2410342 S00061525356_V1

**Aft Cargo Compartment
Figure 204/05-42-01-990-804 (Sheet 4 of 5)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

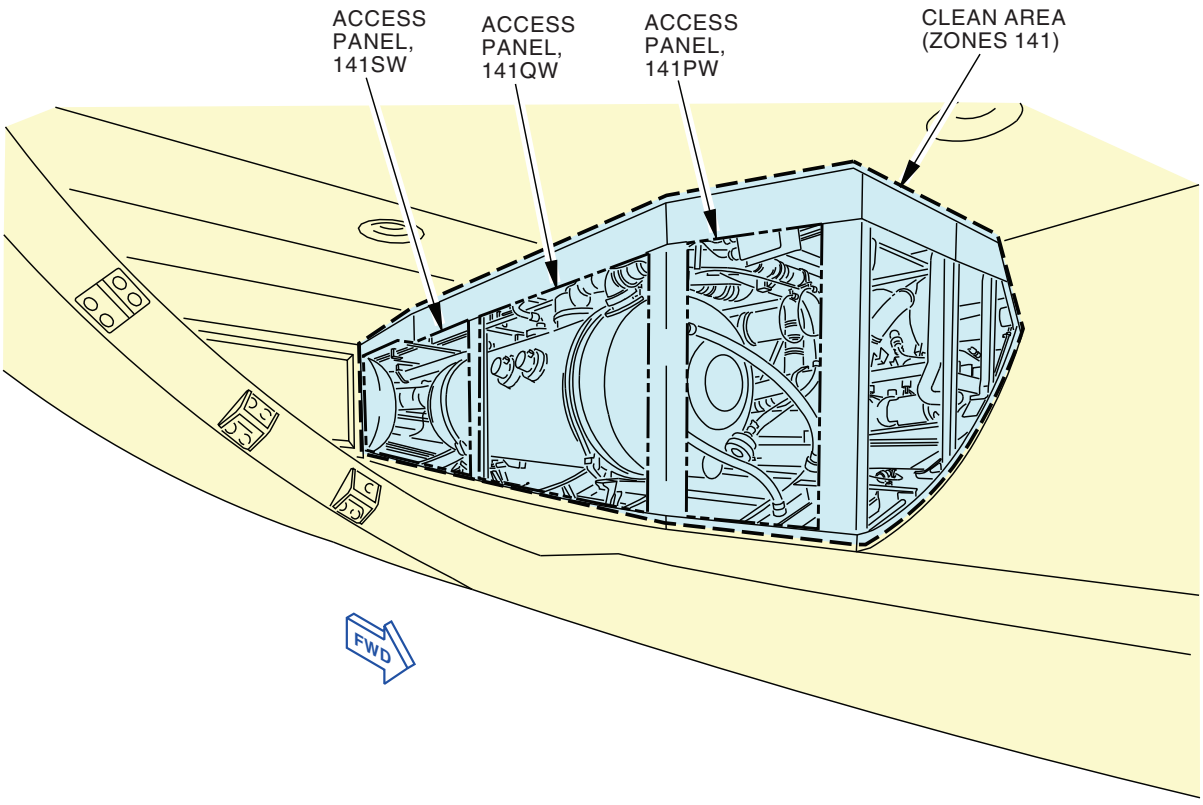

AFT CARGO COMPARTMENT
(VACUUM WASTE COMPARTMENT PANELS REMOVED)

C

2410343 S00061525357_V1

Aft Cargo Compartment
Figure 204/05-42-01-990-804 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-805

6. Restore: Area Aft of Forward Cargo Compartment. (EZAP)

(Figure 205)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
125	Air Conditioning Distribution Bay - Left
126	Air Conditioning Distribution Bay - Right

D. Access Panels

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead

E. Procedure

SUBTASK 05-42-01-010-004

(1) Open these access panels:

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead

SUBTASK 05-42-01-160-005

(2) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.

(3) Restore (Clean) area aft of Forward Cargo Compartment. (EZAP)

SUBTASK 05-42-01-910-005

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-42-01-410-004

(5) Close these access panels:

Number	Name/Location
121EW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
121HW	Panel Assy - FWD Cargo Compartment Aft Bulkhead
122GW	Panel Assy - FWD Cargo Compartment Aft Bulkhead

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

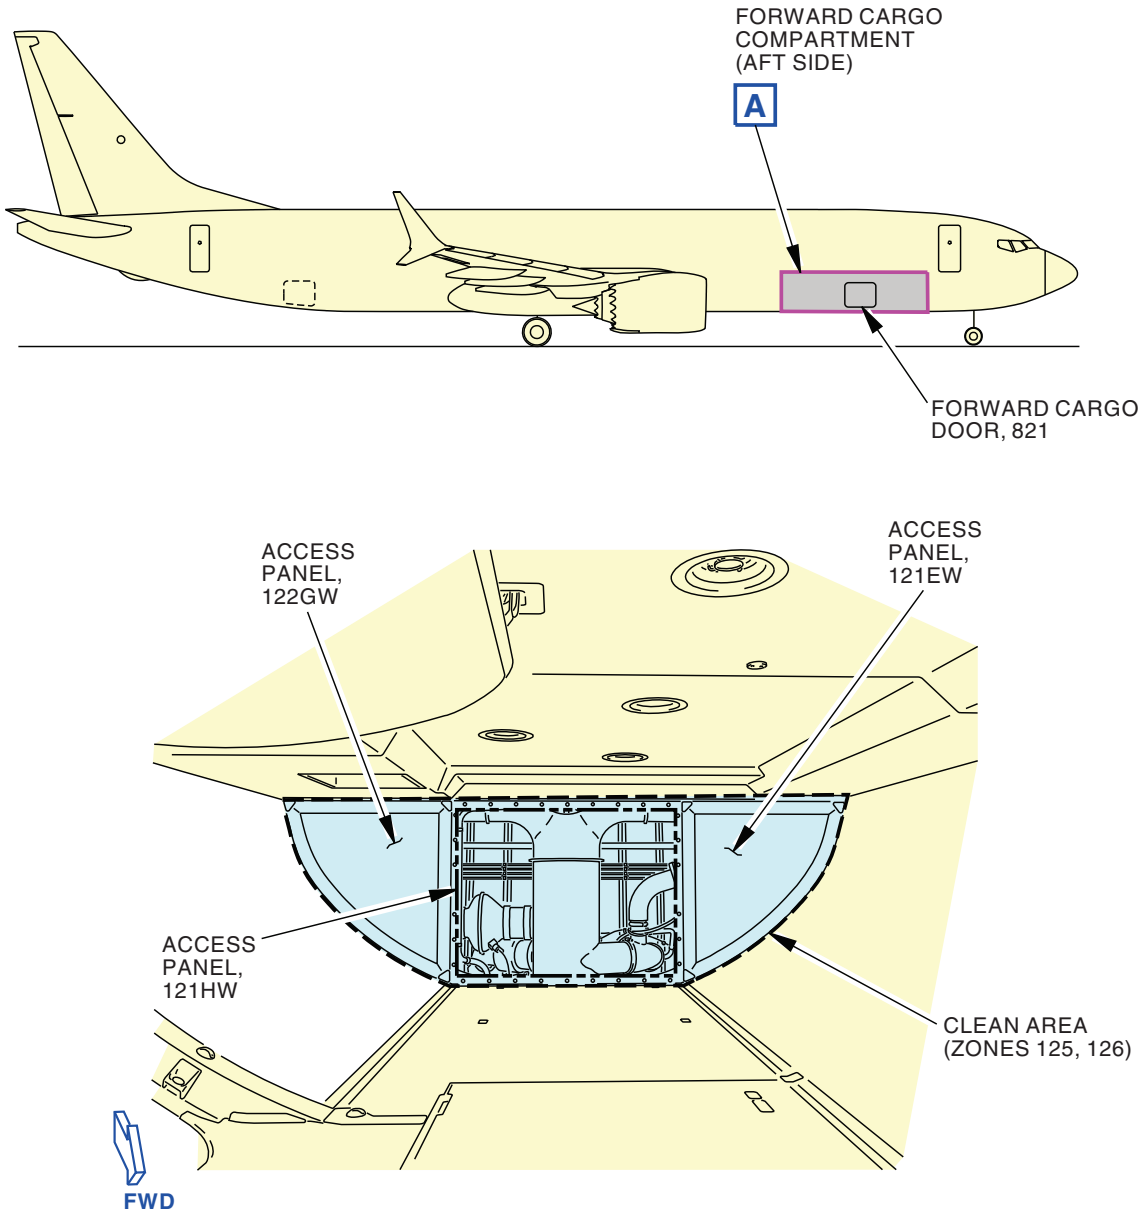

FORWARD CARGO COMPARTMENT
(AFT SIDE)
(AFT BULKHEAD CENTER PANEL REMOVED)

A

2410344 S00061525359_V1

Area Aft of Forward Cargo Compartment
Figure 205/05-42-01-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-806

7. Restore: Area Below Forward Cargo Compartment. (EZAP)

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
123	Forward Cargo Compartment - Left
124	Forward Cargo Compartment - Right

D. Procedure

NOTE: Center floor panels removal required. Cargo loading system removed/displaced as required.

SUBTASK 05-42-01-160-006

(1) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.


(2) Restore (Clean) area below Forward Cargo Compartment. (EZAP)


SUBTASK 05-42-01-910-006

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

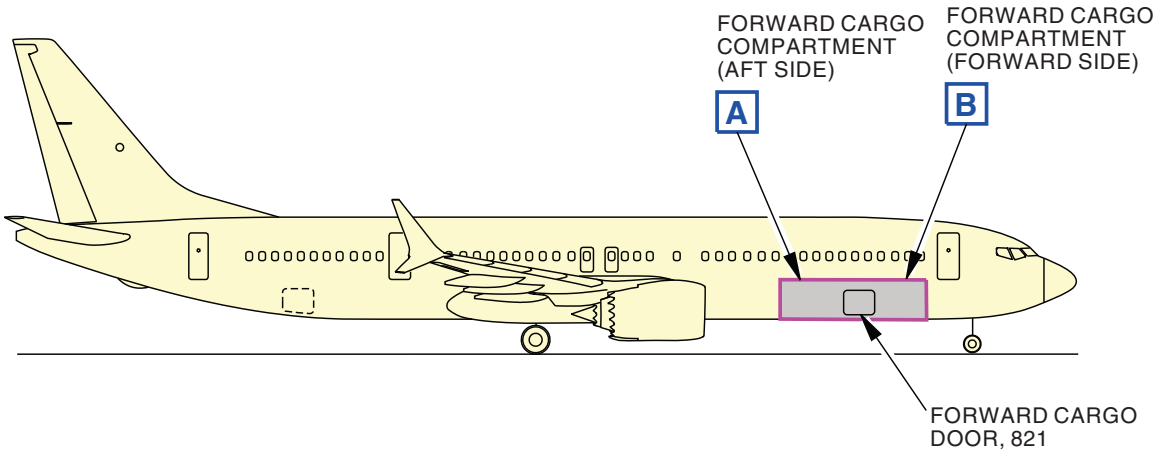


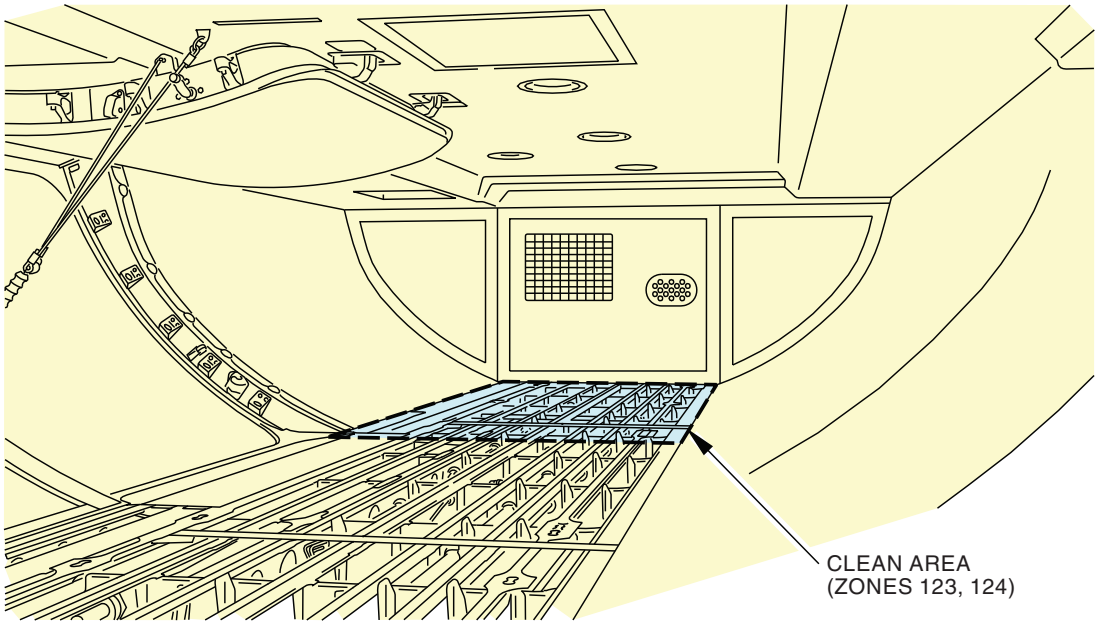

2410345 S00061525361_V1

Area Below Forward Cargo Compartment
Figure 206/05-42-01-990-806 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

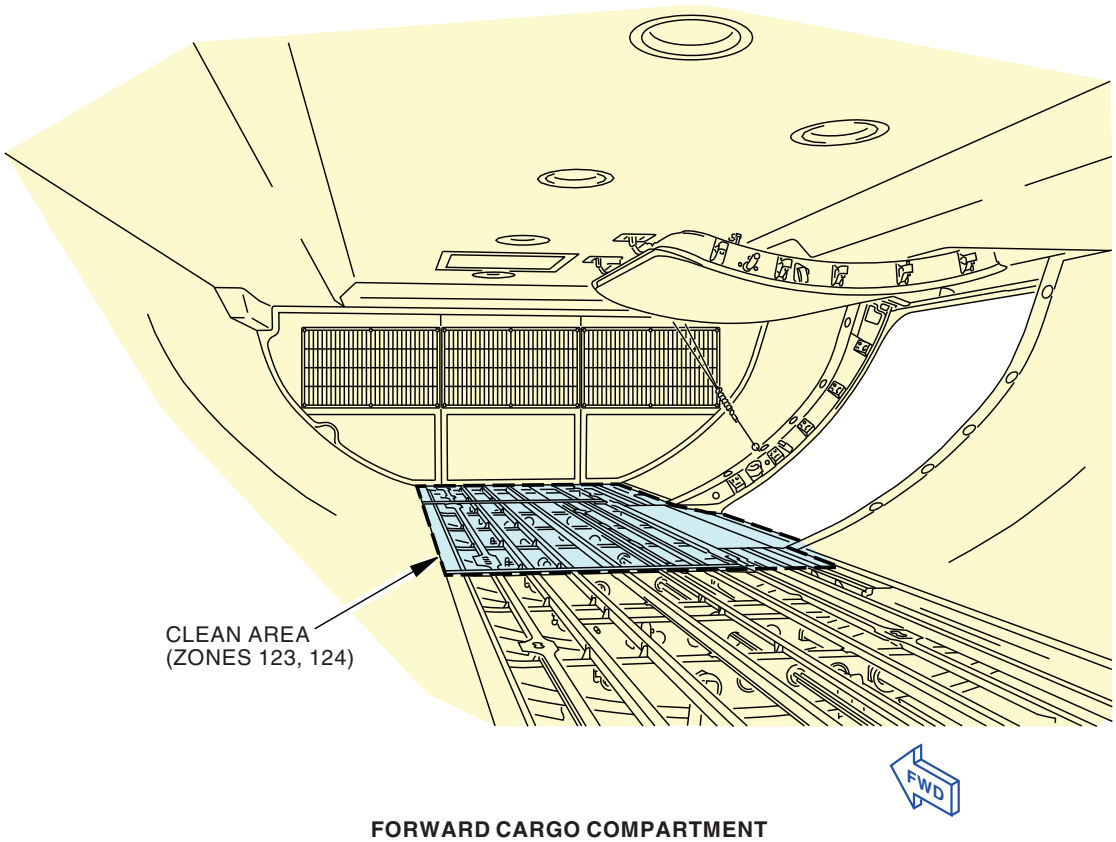

**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)
(FLOOR PANELS REMOVED)**

B

2410346 S00061525362_V2

**Area Below Forward Cargo Compartment
Figure 206/05-42-01-990-806 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-807

8. Restore: Areas Behind Ceiling and Sidewall Panels in the Forward Cargo Compartment. (EZAP)
(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

D. Procedure

NOTE: Ceiling and sidewall panels removal required.

SUBTASK 05-42-01-160-007

(1) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.


(2) Restore (Clean) areas behind ceiling and sidewall panels in the Forward Cargo Compartment. (EZAP)


SUBTASK 05-42-01-910-007

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to Electrical Wiring Interconnect Systems (EWIS) during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

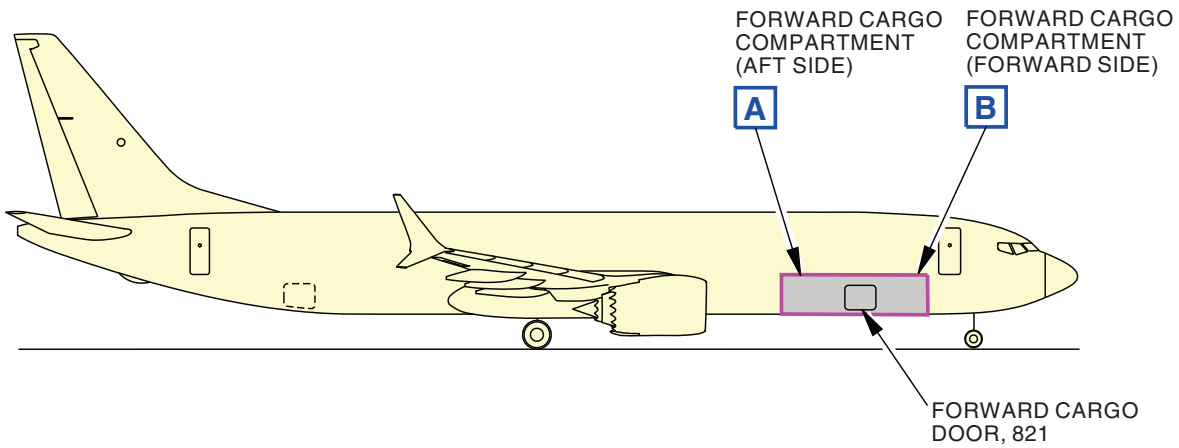

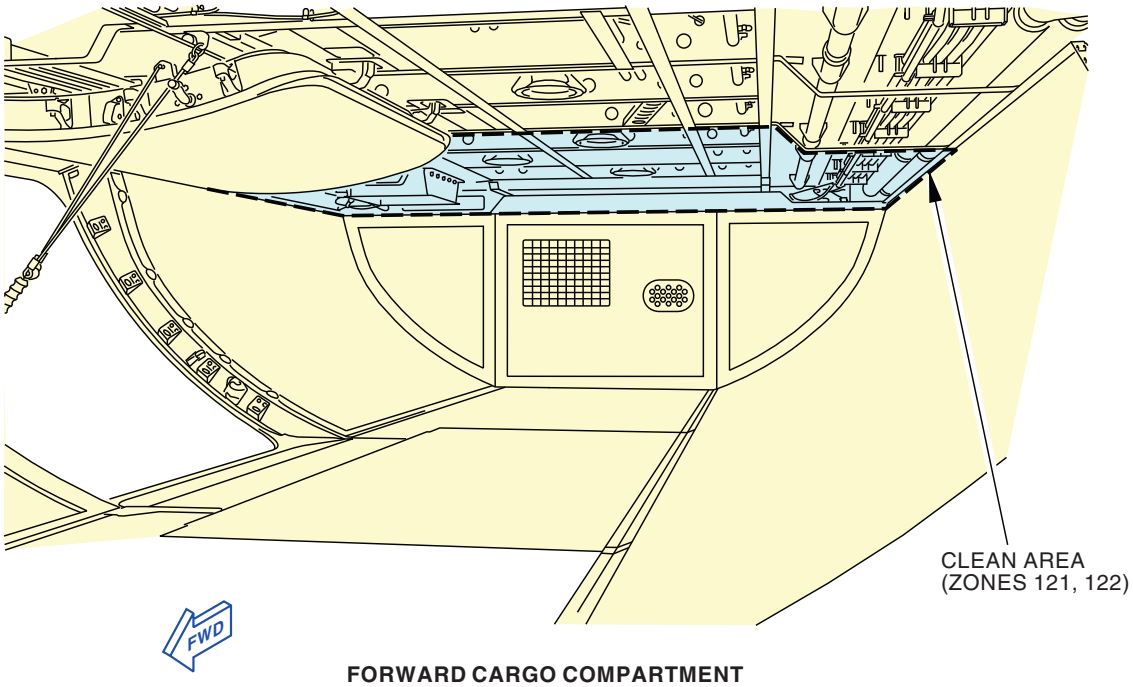


FORWARD CARGO COMPARTMENT (AFT SIDE) (CEILING LINERS REMOVED)

A

2410347 S00061525364_V1

Areas Behind Ceiling and Sidewalls in the Forward Cargo Compartment
Figure 207/05-42-01-990-807 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

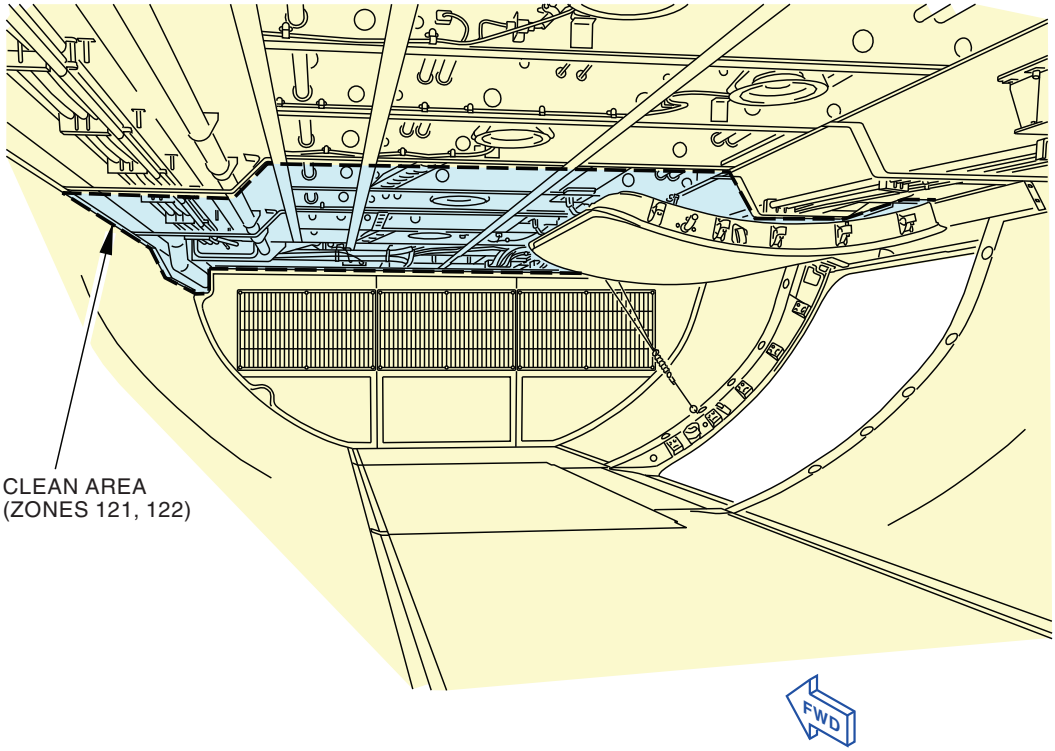


**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)
(CEILING LINERS REMOVED)**


B

2410348 S00061525365_V2

**Areas Behind Ceiling and Sidewalls in the Forward Cargo Compartment
Figure 207/05-42-01-990-807 (Sheet 2 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

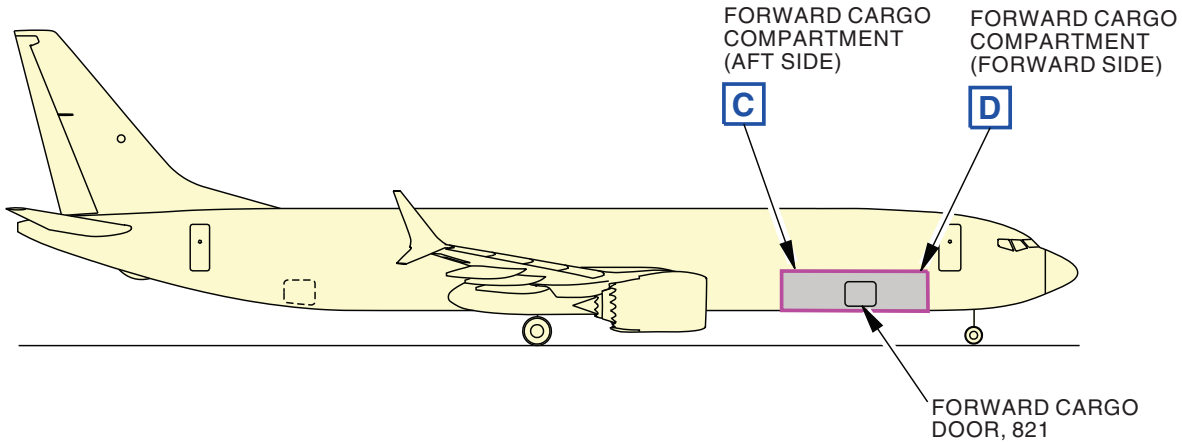

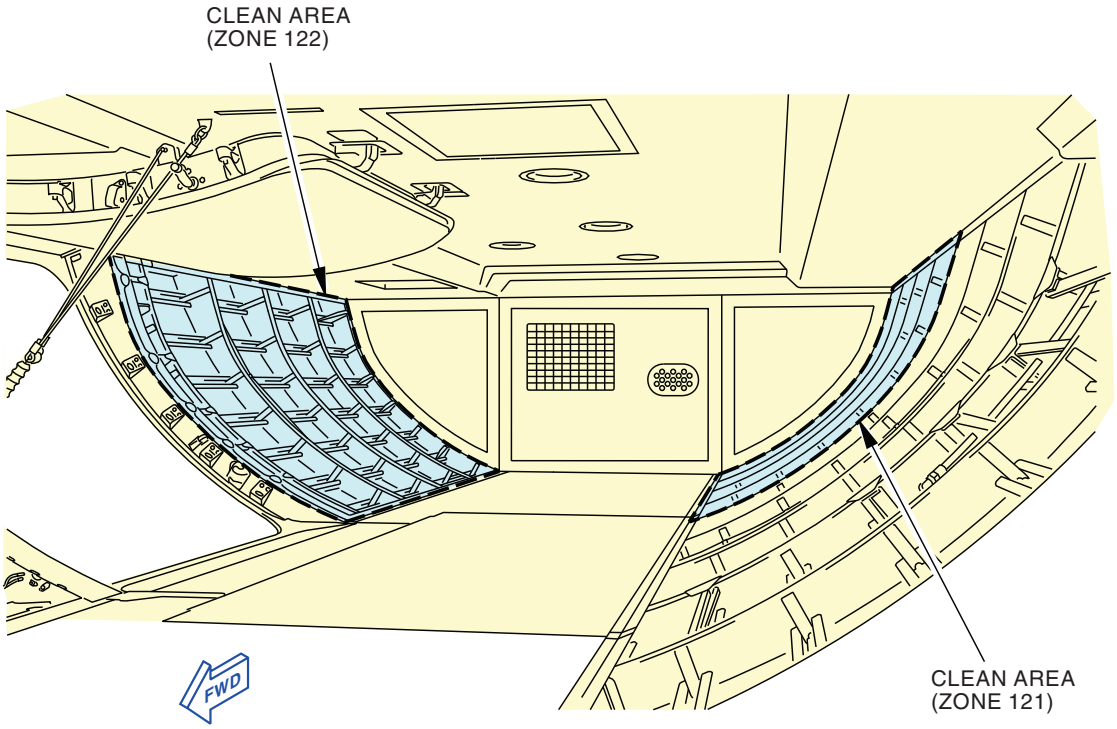


FORWARD CARGO COMPARTMENT (AFT SIDE) (SIDEWALL LINERS REMOVED)

C

2410349 S00061525366_V1

Areas Behind Ceiling and Sidewalls in the Forward Cargo Compartment
Figure 207/05-42-01-990-807 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

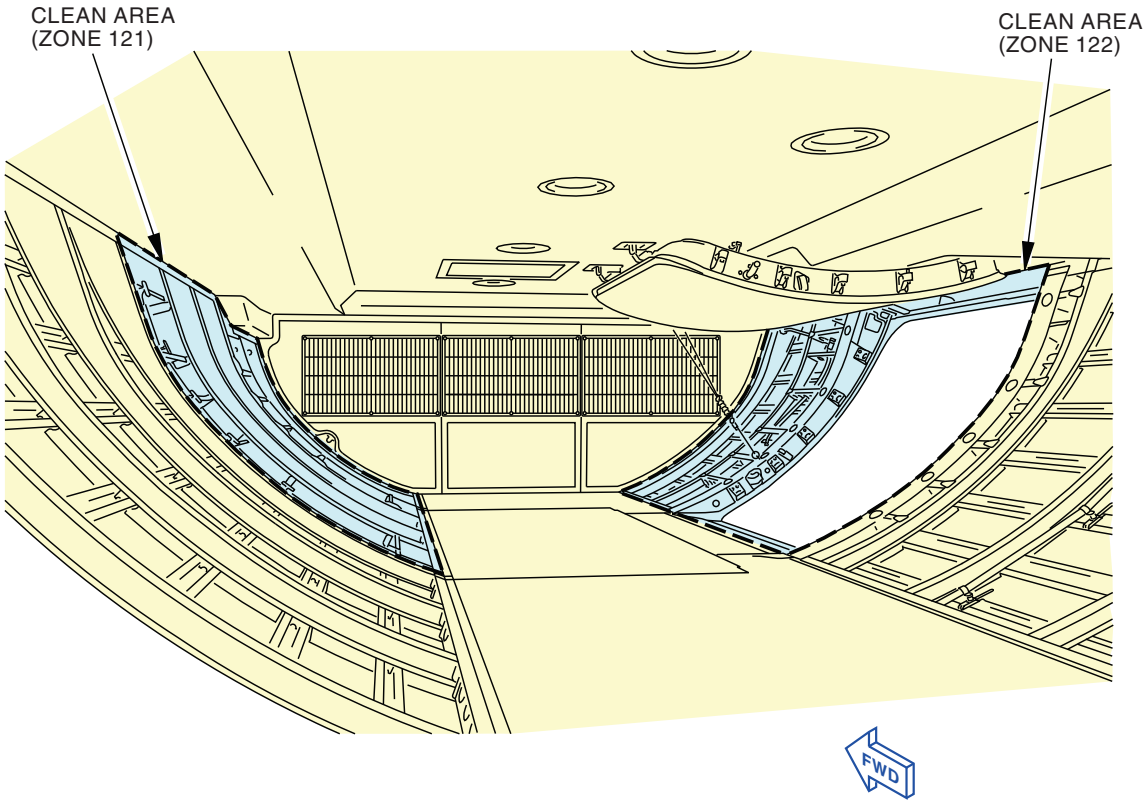

**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)
(SIDEWALL LINERS REMOVED)**

D

2410350 S00061525367_V2

**Areas Behind Ceiling and Sidewalls in the Forward Cargo Compartment
Figure 207/05-42-01-990-807 (Sheet 4 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-808

9. Restore: Area Aft of Aft Cargo Compartment. (EZAP)

(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
145	Aft Cargo Compartment Equipment Bay - Left
146	Aft Cargo Compartment Equipment Bay - Right

D. Procedure

NOTE: Removal of aft cargo panels at Sta. 947 bulkhead required.

SUBTASK 05-42-01-160-008

(1) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.


(2) Restore (Clean) Area Aft of Aft Cargo Compartment. (EZAP)


SUBTASK 05-42-01-910-008

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

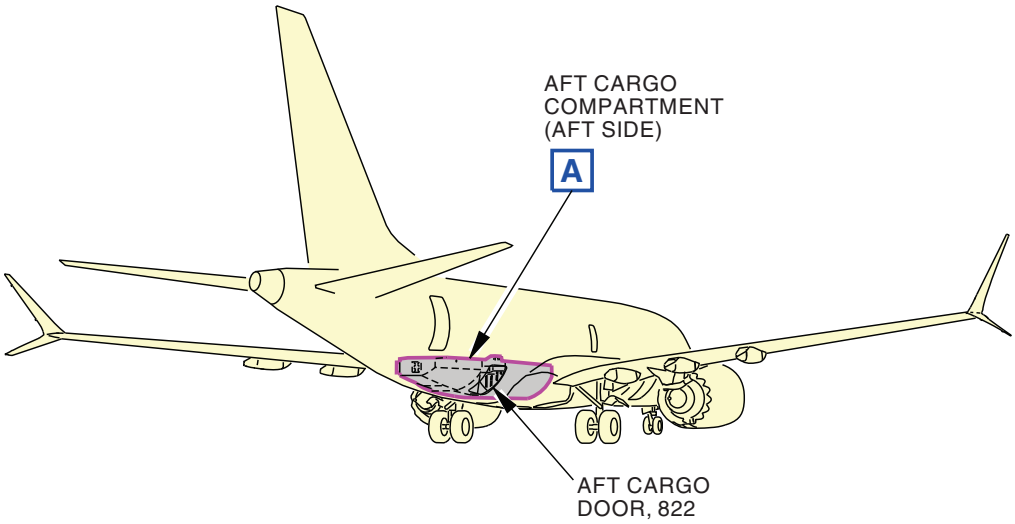

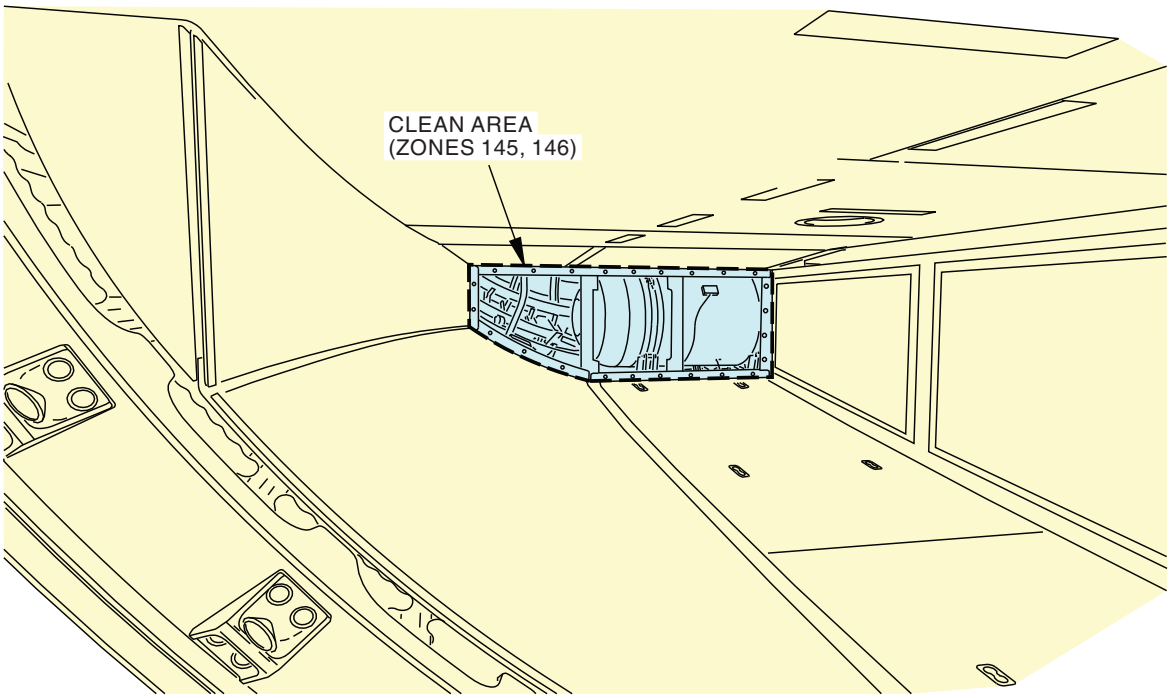

AFT CARGO COMPARTMENT
(AFT SIDE)
(ENDWALL LINERS REMOVED)
A

FWD

2410351 S00061525369_V1

Aft Cargo Compartment
Figure 208/05-42-01-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-100-809

10. Restore: Area Below Aft Cargo Compartment. (EZAP)

(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-803	Cleaning to Remove Combustible Material (P/B 701)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
143	Area Below Aft Cargo Compartment - Left
144	Area Below Aft Cargo Compartment - Right

D. Procedure

NOTE: Center floor panels removal required. Cargo loading system (if installed) removed/displaced as required.

SUBTASK 05-42-01-160-009

(1) Do this task: Cleaning to Remove Combustible Material, TASK 20-60-02-100-803.


(2) Restore (Clean) Area Below Aft Cargo Compartment. (EZAP)

SUBTASK 05-42-01-910-009

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

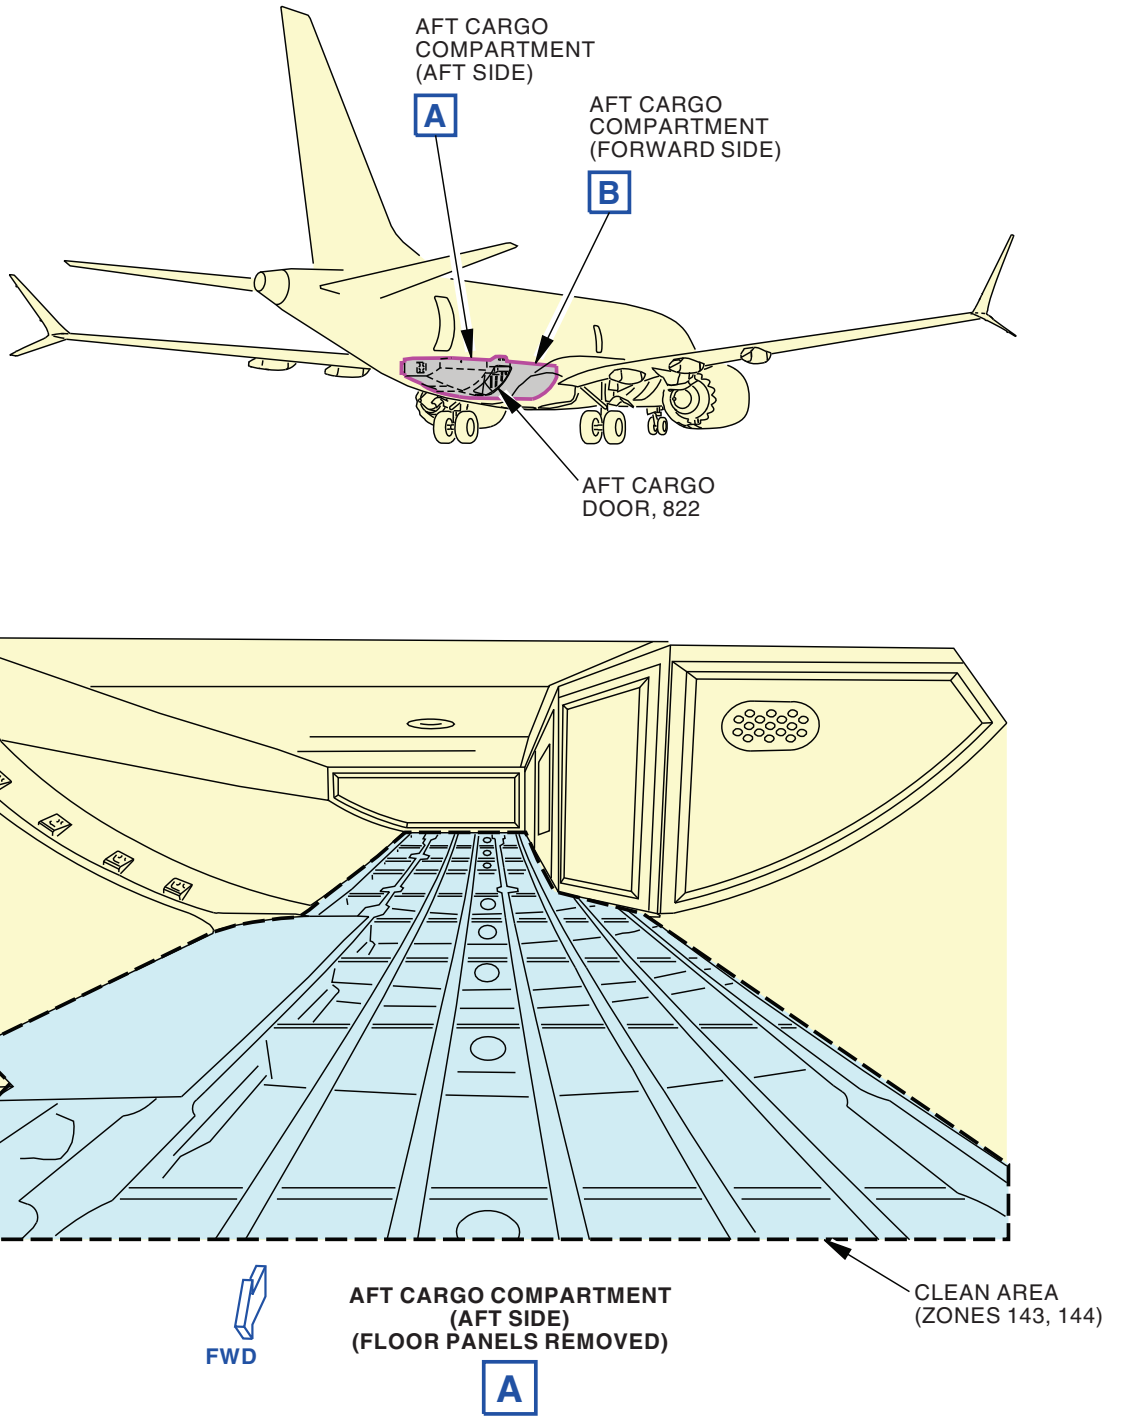

Area Below Aft Cargo Compartment
Figure 209/05-42-01-990-809 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

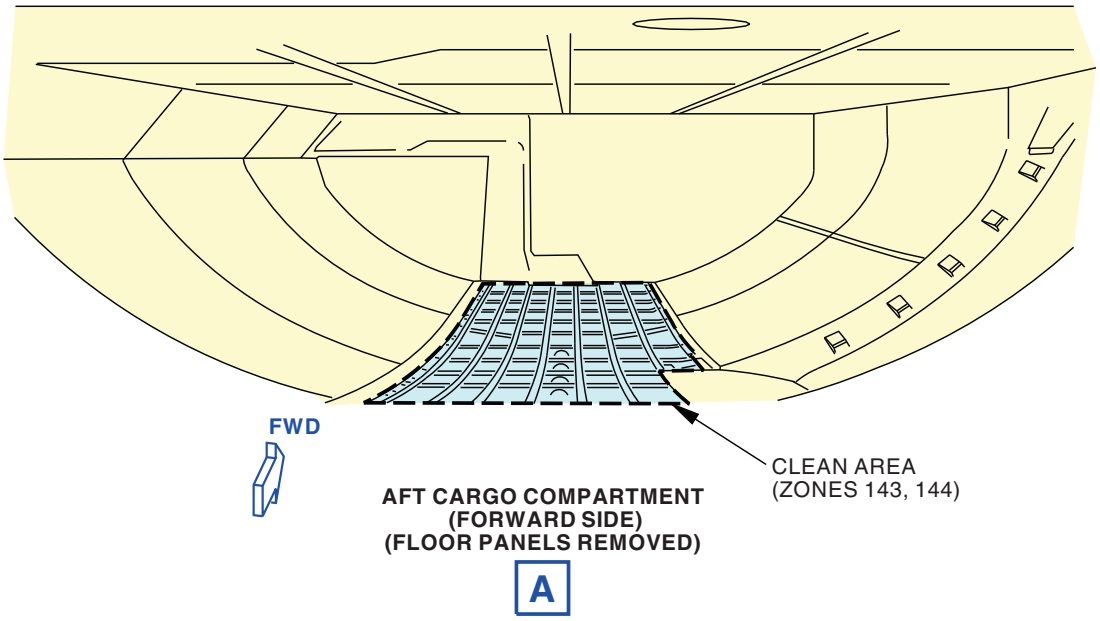

2410353 S00061525372_V1

Area Below Aft Cargo Compartment
Figure 209/05-42-01-990-809 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-210-801

11. General Visual Inspection: Exposed EWIS in Main Landing Gear Wheel Well. (EZAP)
(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-801	General Visual Inspection of EWIS (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
133	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Left
134	Main Landing Gear Wheel Well, Body Station 663.75 to Body Station 727.00 - Right

D. Inspection

NOTE: Through main landing gear opening.

SUBTASK 05-42-01-210-001

(1) Do this task: General Visual Inspection of EWIS, TASK 20-60-02-100-801.


(2) Inspect (General Visual) all exposed EWIS in the Main Landing Gear Wheel Well. (EZAP)

SUBTASK 05-42-01-910-010


(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

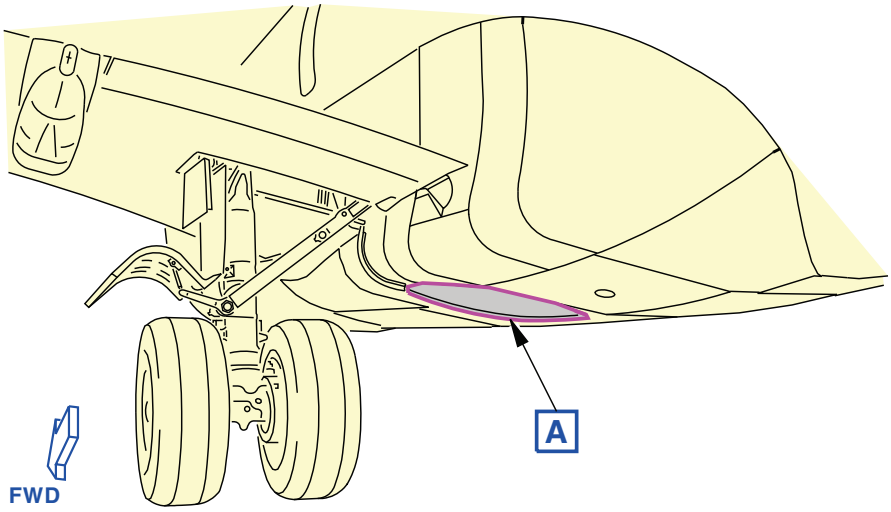


LEFT MAIN LANDING GEAR WHEEL WELL

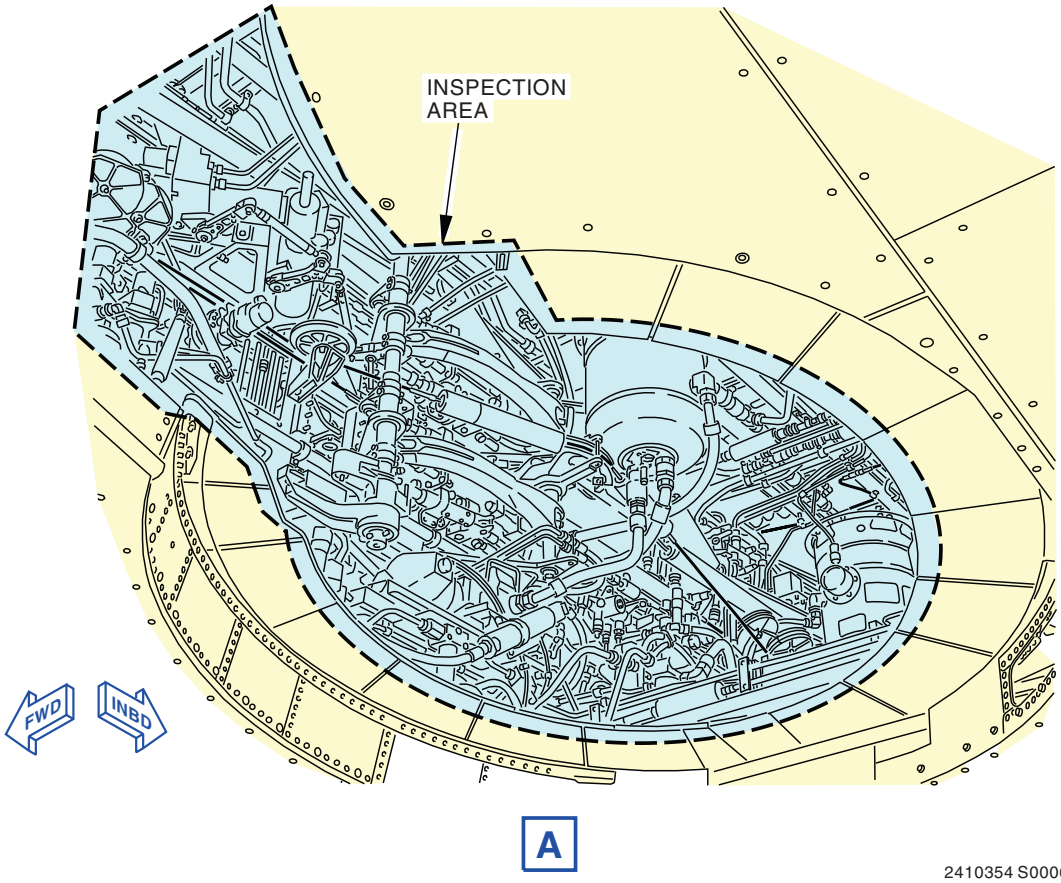


2410354 S00061525374_V1

Inspect (General Visual) - Exposed EWIS Main Landing Gear Wheel Well
Figure 210/05-42-01-990-810 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

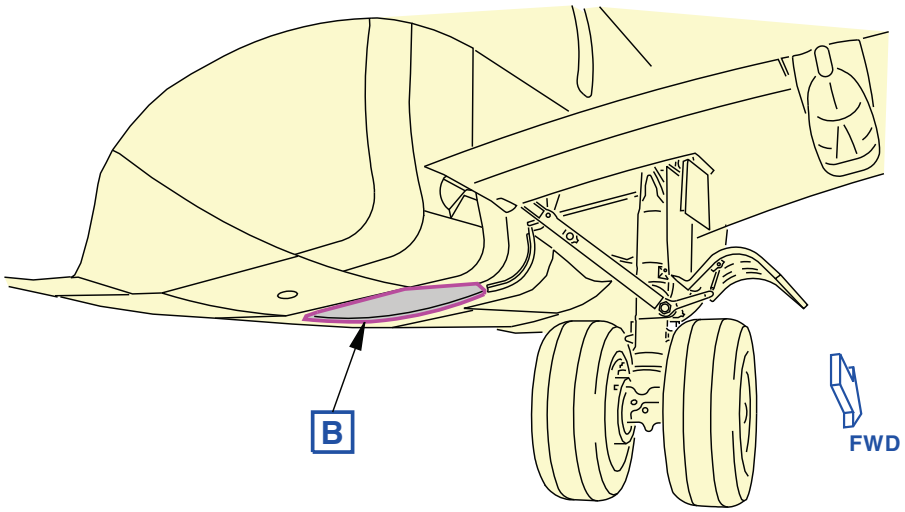

RIGHT MAIN LANDING GEAR WHEEL WELL

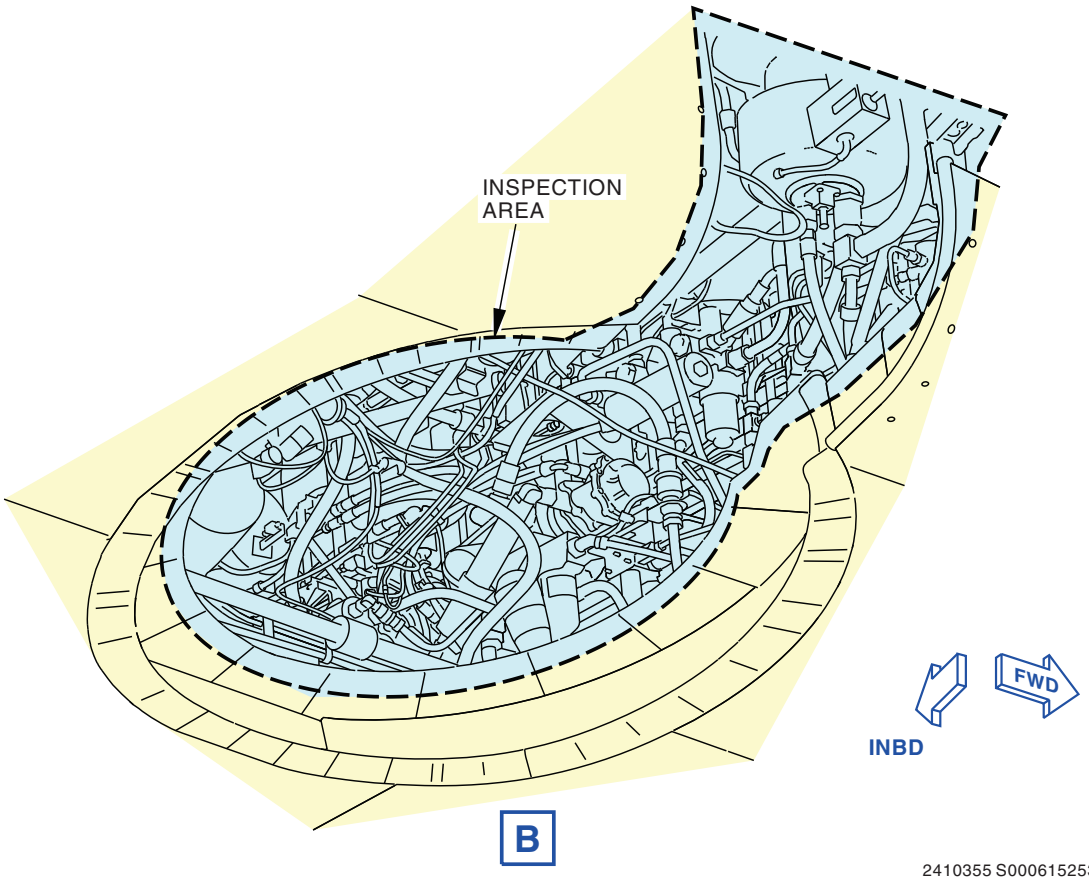

2410355 S00061525375_V1

Inspect (General Visual) - Exposed EWIS Main Landing Gear Wheel Well
Figure 210/05-42-01-990-810 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-210-802

12. General Visual Inspection: Exposed EWIS in the Forward Cargo Compartment. (EZAP)

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-801	General Visual Inspection of EWIS (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

D. Inspection

NOTE: Ceiling and sidewall panels removal required.

SUBTASK 05-42-01-210-002

(1) Do this task: General Visual Inspection of EWIS, TASK 20-60-02-100-801.


(2) Inspect (General Visual) all exposed Electrical Wiring Interconnect Systems (EWIS) in the Forward Cargo Compartment. (EZAP)


SUBTASK 05-42-01-910-011

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

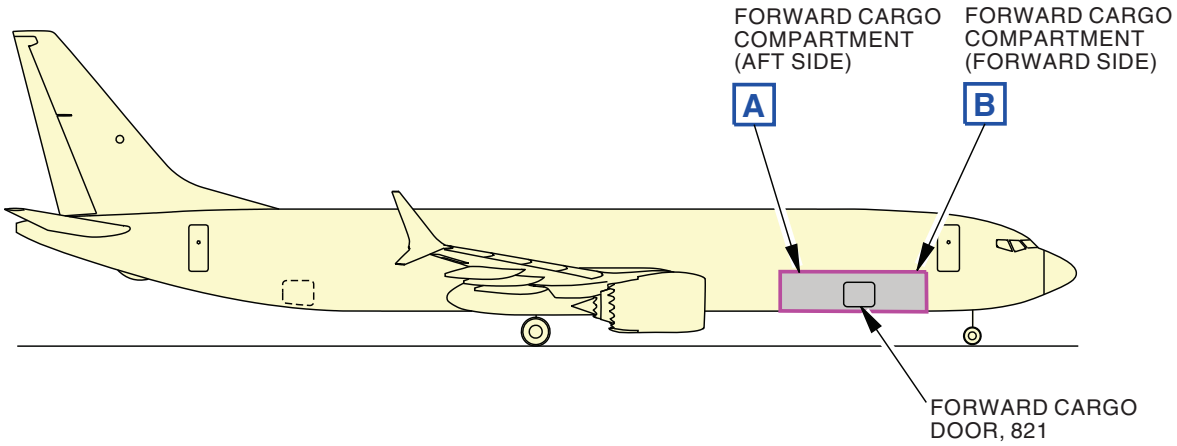

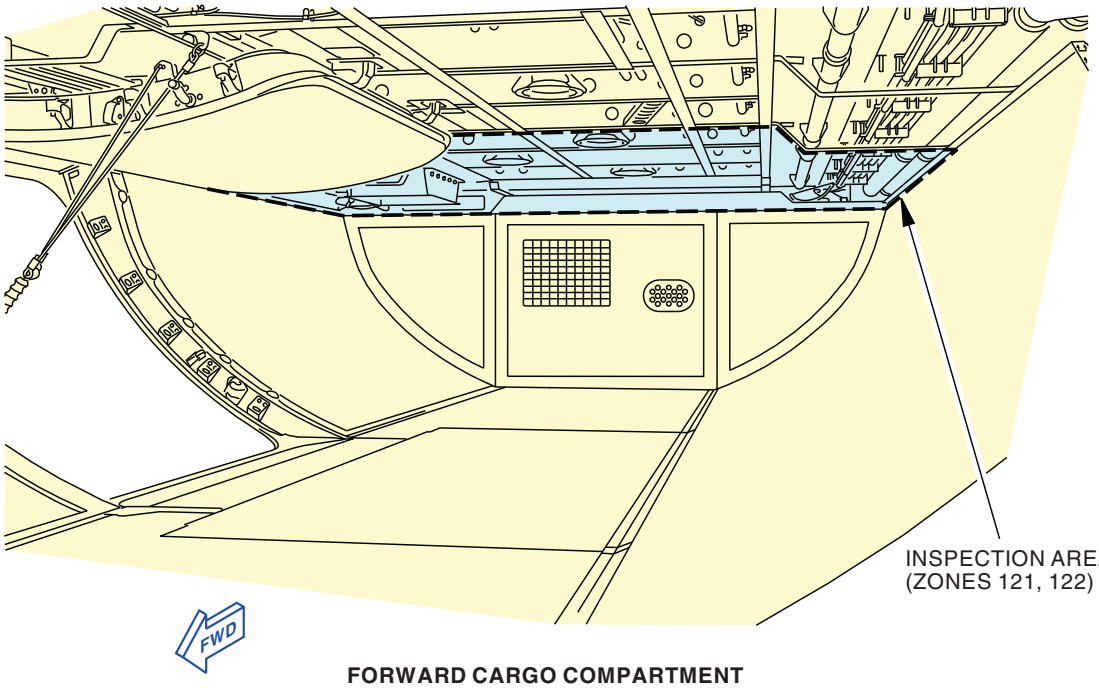


FORWARD CARGO COMPARTMENT (AFT SIDE) (CEILING LINERS REMOVED)

A

2410356 S00061525377_V1

Inspect (General Visual) - Exposed EWIS Forward Cargo Compartment (Ceiling Liners Removed)
Figure 211/05-42-01-990-811 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

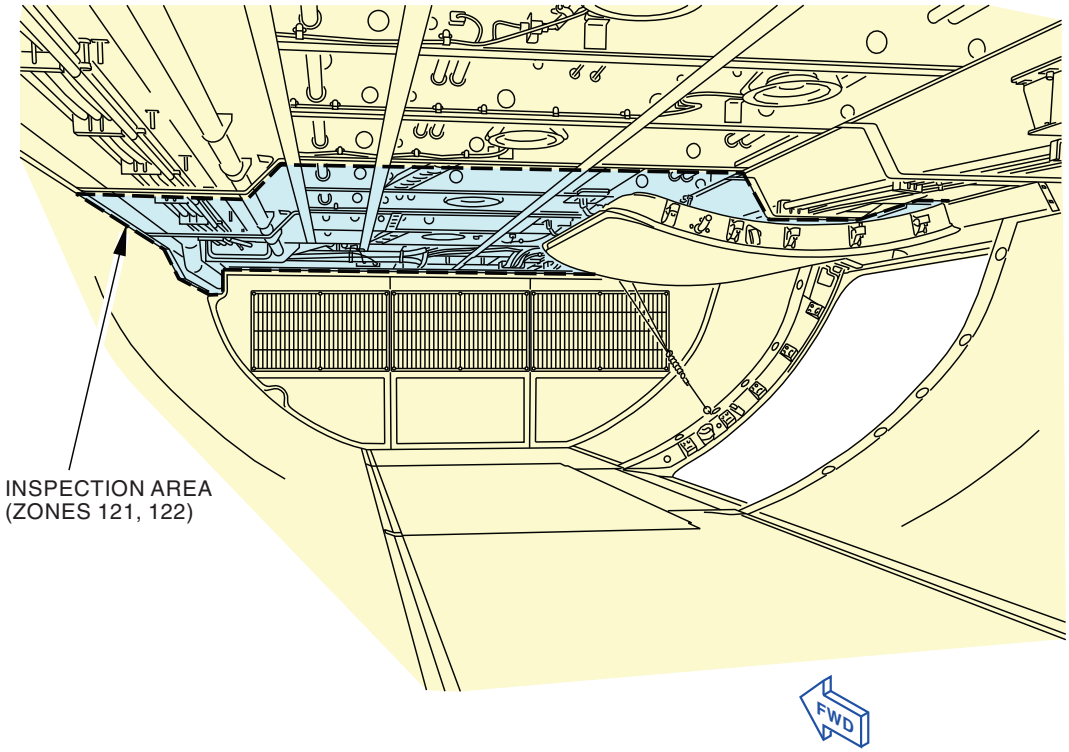


**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)
(CEILING LINERS REMOVED)**

B

2410357 S00061525378_V2

**Inspect (General Visual) - Exposed EWIS Forward Cargo Compartment (Ceiling Liners Removed)
Figure 211/05-42-01-990-811 (Sheet 2 of 4)**


ECCN 9E991 BOEING PROPRIETARY - See title page for details

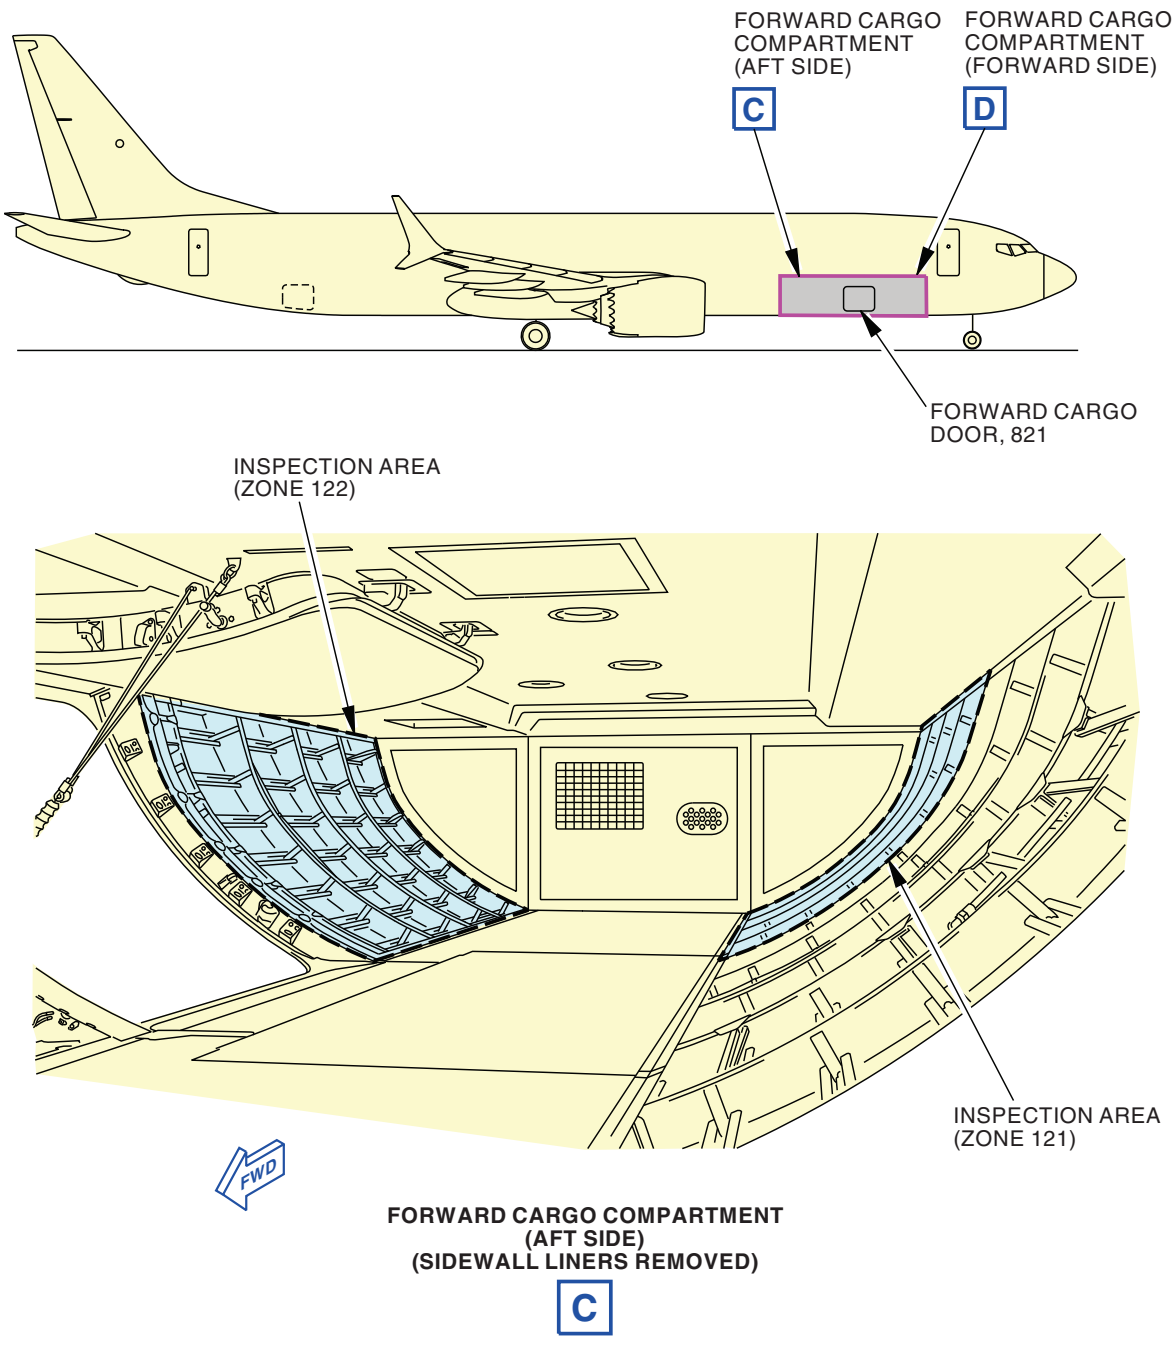

2410358 S00061525379_V1

Inspect (General Visual) - Exposed EWIS Forward Cargo Compartment (Ceiling Liners Removed)
Figure 211/05-42-01-990-811 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

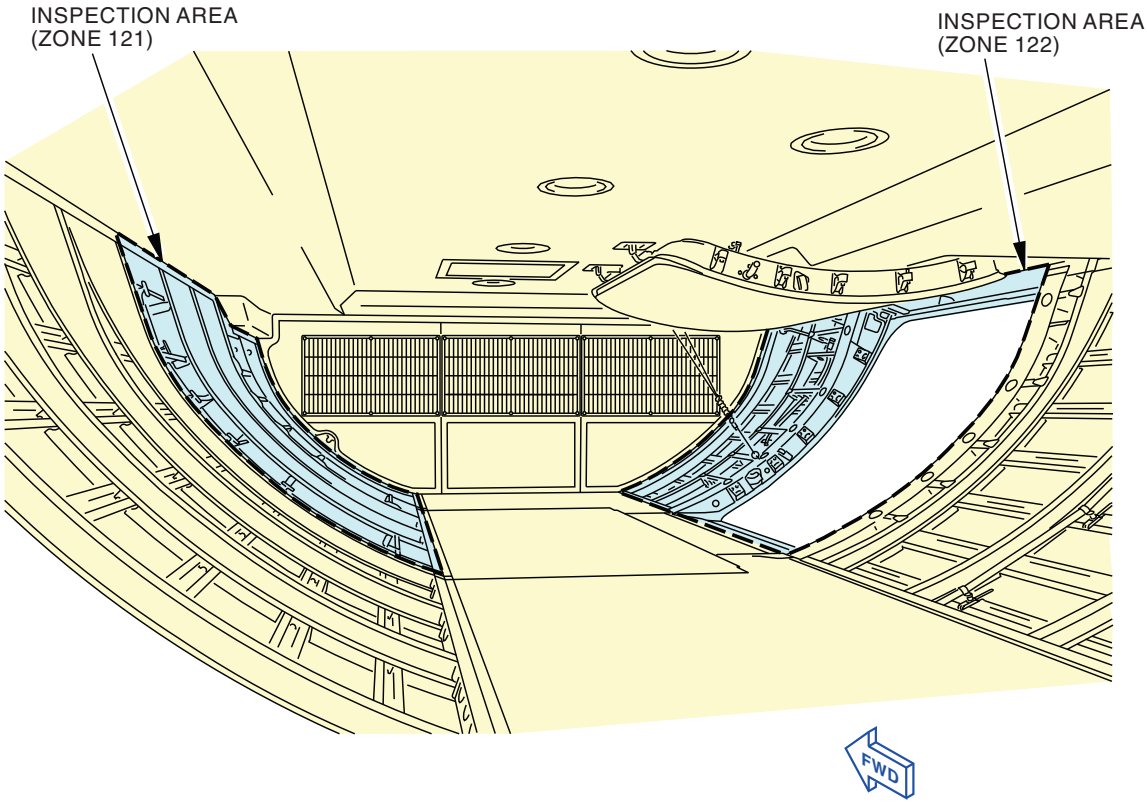

**FORWARD CARGO COMPARTMENT
(FORWARD SIDE)
(SIDEWALL LINERS REMOVED)**

D

2410359 S00061525380_V2

**Inspect (General Visual) - Exposed EWIS Forward Cargo Compartment (Ceiling Liners Removed)
Figure 211/05-42-01-990-811 (Sheet 4 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-210-803

13. General Visual Inspection: Exposed EWIS in the Electrical and Electronics Compartment. (EZAP)
(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-801	General Visual Inspection of EWIS (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

E. Inspection

SUBTASK 05-42-01-010-005

(1) Open these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

NOTE: Alternate access through panels 121MW, 121NW and 122JW is from Forward Cargo Compartment.

SUBTASK 05-42-01-210-003

(2) Do this task: General Visual Inspection of EWIS, TASK 20-60-02-100-801.

(3) Inspect (General Visual) all exposed Electrical Wiring Interconnect Systems (EWIS) in the Electrical and Electronics Compartment excluding the Integrated Drive Generator (IDG), Auxiliary Power Unit (APU) starter/generator, battery, and external power feeder wiring and connected EWIS. (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-42-01-910-012

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-42-01-410-005

(5) Close these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

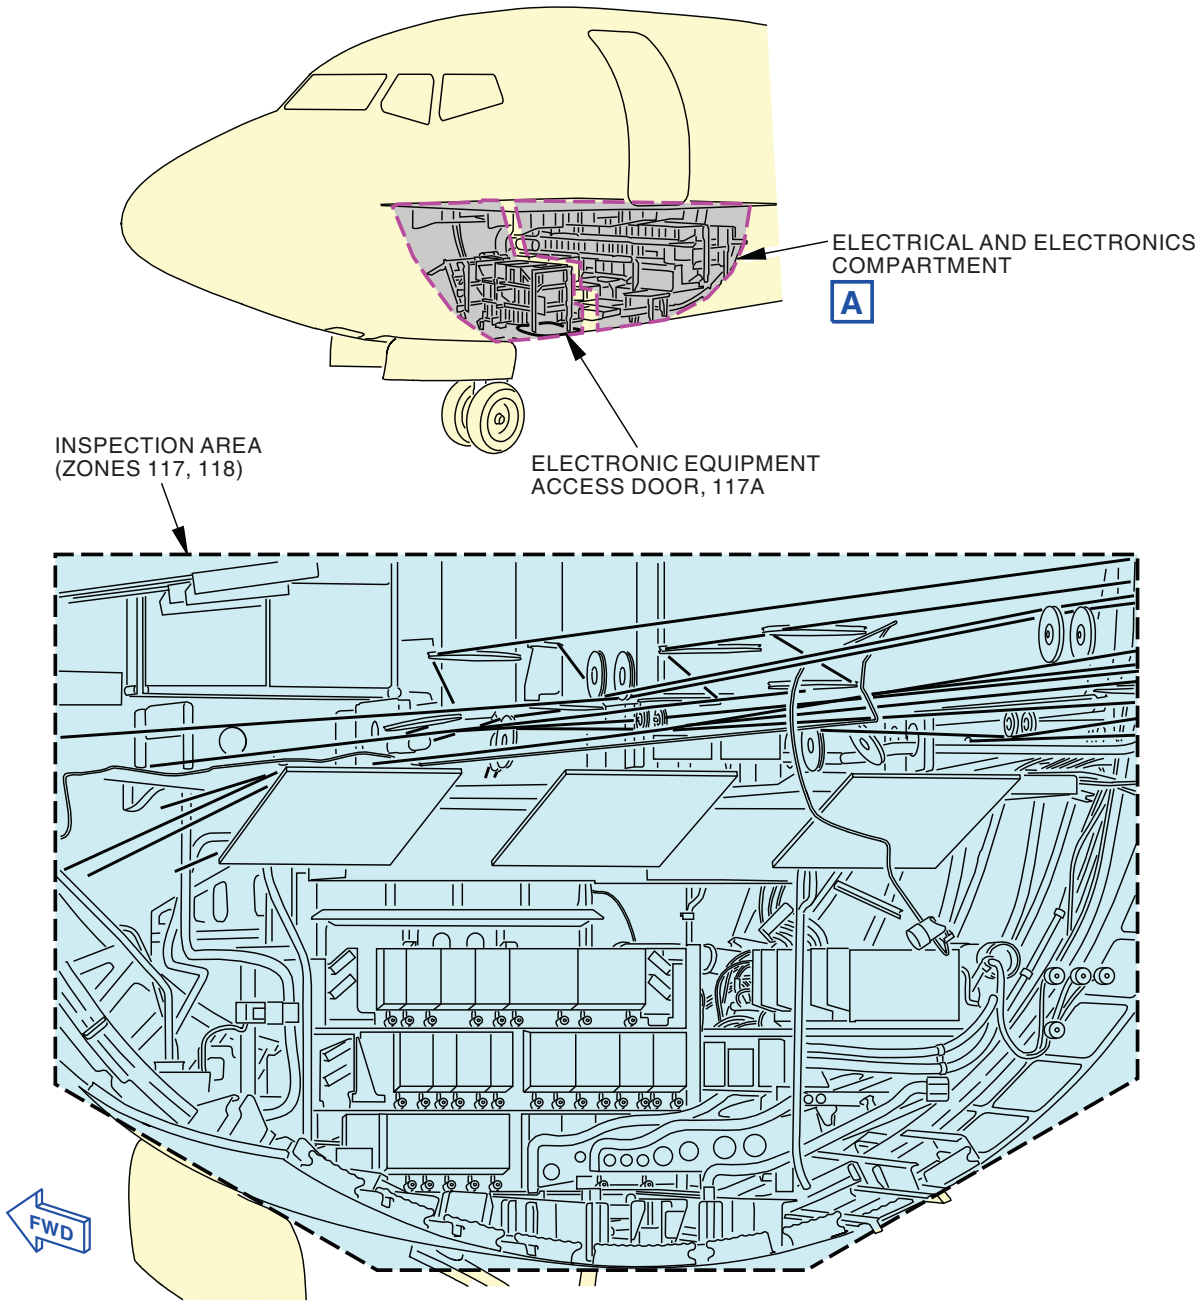


ELECTRICAL AND ELECTRONICS COMPARTMENT (VIEW IN THE FORWARD DIRECTION)

A

2410360 S00061525382_V1

Inspect (General Visual) - Exposed EWIS In Electrical and Electronics Compartment
Figure 212/05-42-01-990-812 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

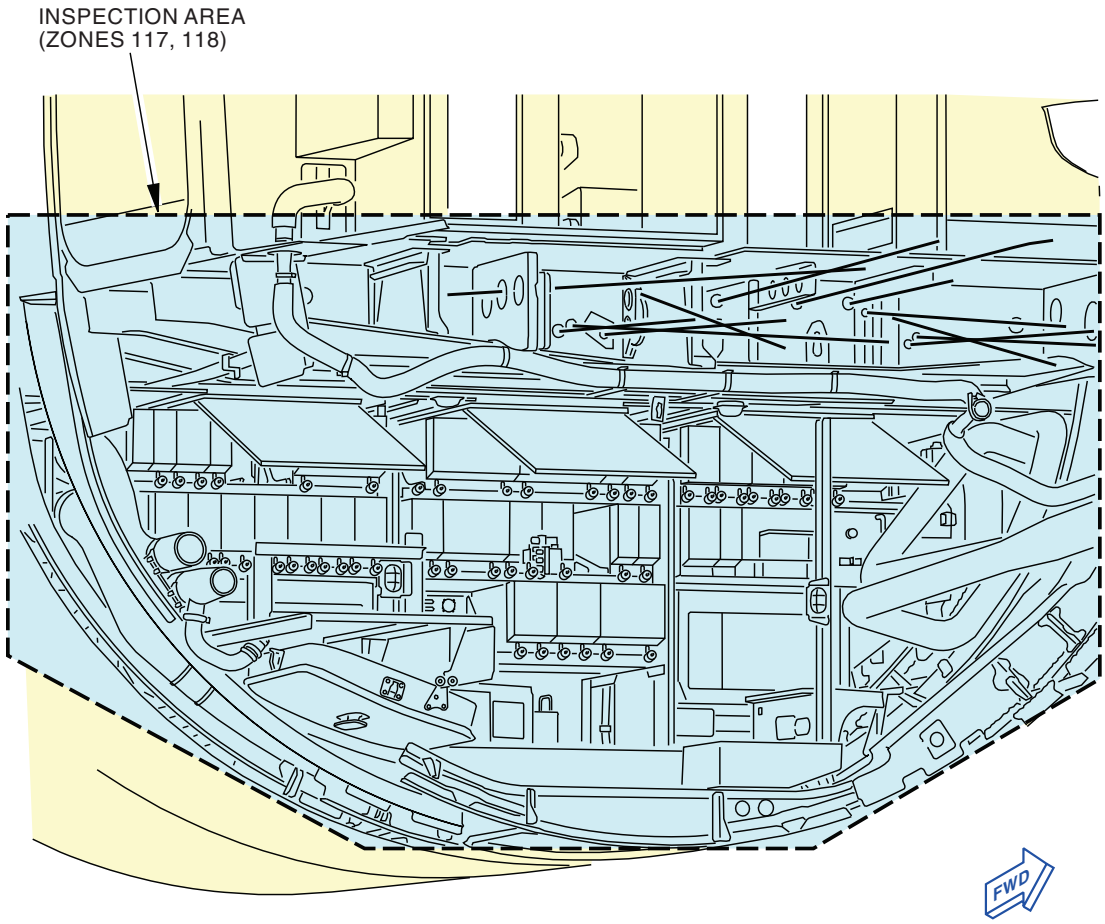

**ELECTRICAL AND ELECTRONICS COMPARTMENT
(VIEW IN THE AFT DIRECTION)**

A

2410361 S00061525383_V1

**Inspect (General Visual) - Exposed EWIS In Electrical and Electronics Compartment
Figure 212/05-42-01-990-812 (Sheet 2 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-210-804

14. General Visual Inspection: Exposed EWIS in the Aft Cargo Compartment. (EZAP)

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-801	General Visual Inspection of EWIS (P/B 201)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
141	Aft Cargo Compartment - Left
142	Aft Cargo Compartment - Right

D. Inspection

NOTE: Ceiling and sidewall panels removal required.

SUBTASK 05-42-01-210-004

(1) Do this task: General Visual Inspection of EWIS, TASK 20-60-02-100-801.


(2) Inspect (General Visual) all exposed Electrical Wiring Interconnect Systems (EWIS) in the Aft Cargo Compartment. (EZAP)

SUBTASK 05-42-01-910-013

(3) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

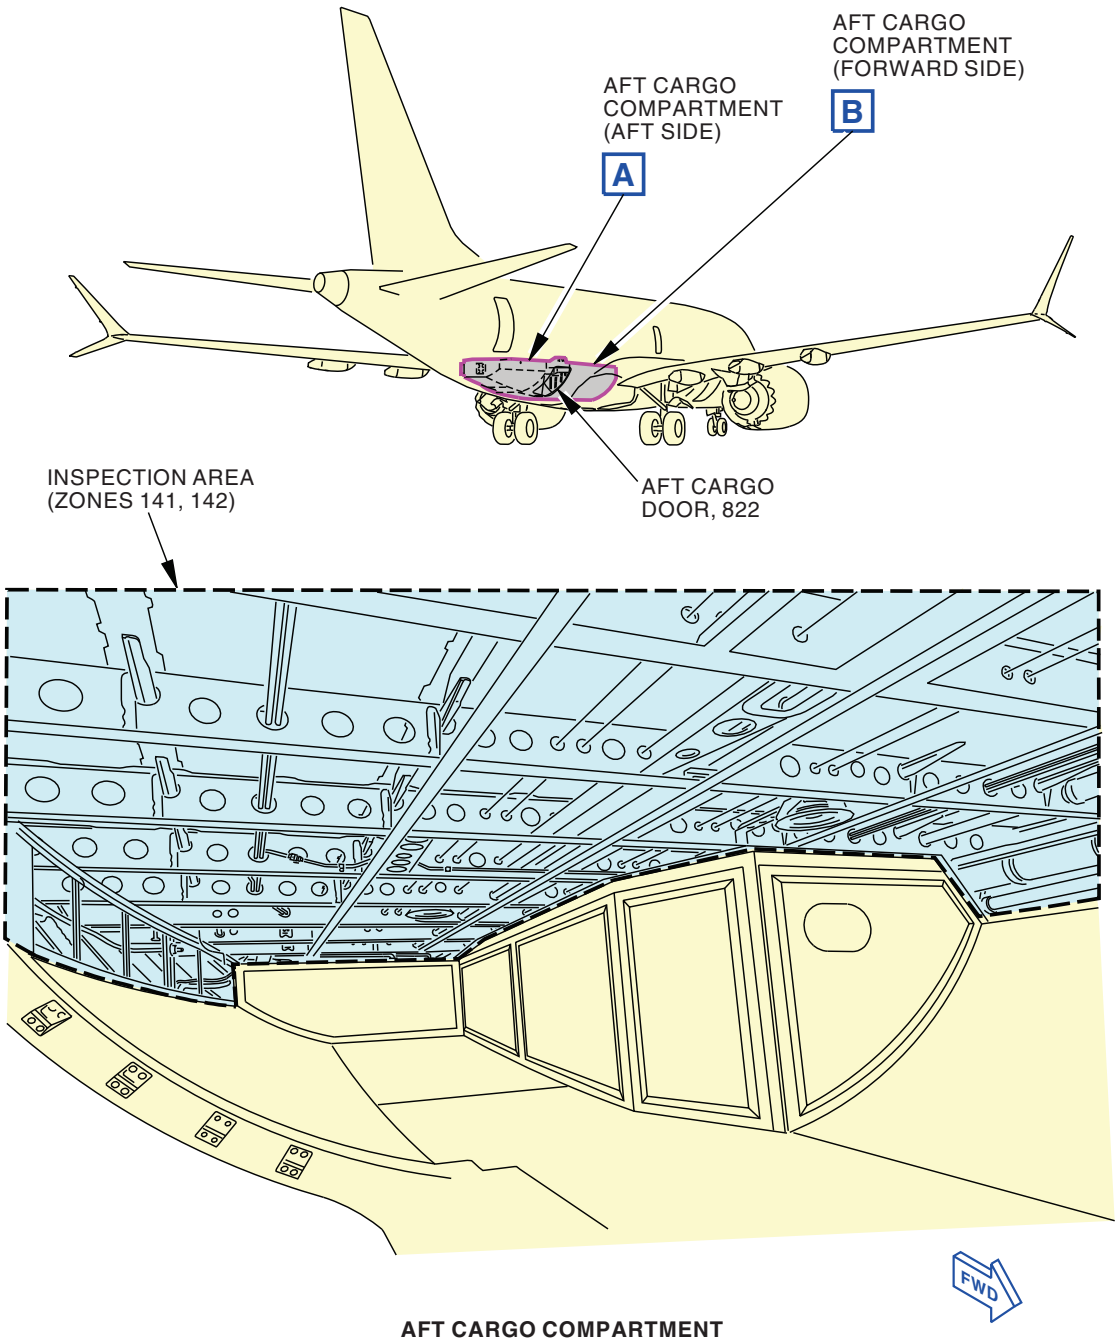


AFT CARGO COMPARTMENT
(AFT SIDE)
(UPPER ANGLED SIDEWALL AND CEILING PANELS REMOVED)

A

2410362 S00061525385_V1

Aft Cargo Compartment
Figure 213/05-42-01-990-813 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

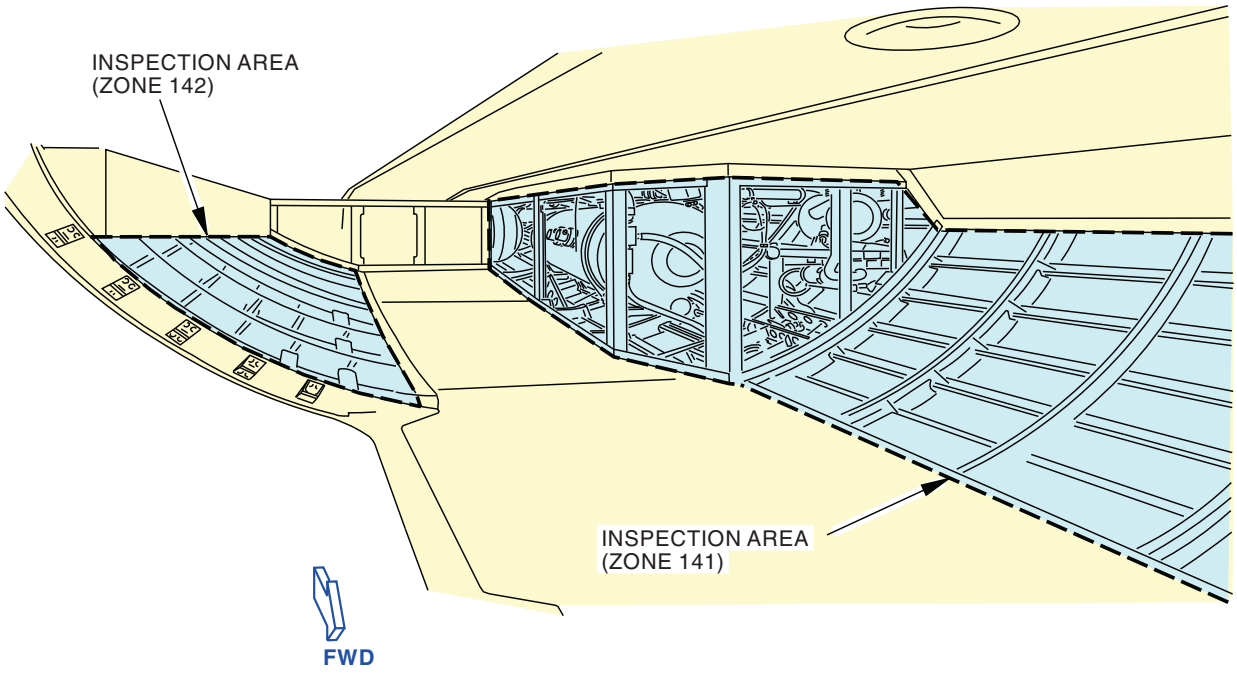


**AFT CARGO COMPARTMENT
(AFT SIDE)
(SIDEWALL LINERS REMOVED)**

A

2410363 S00061525386_V1

**Aft Cargo Compartment
Figure 213/05-42-01-990-813 (Sheet 2 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

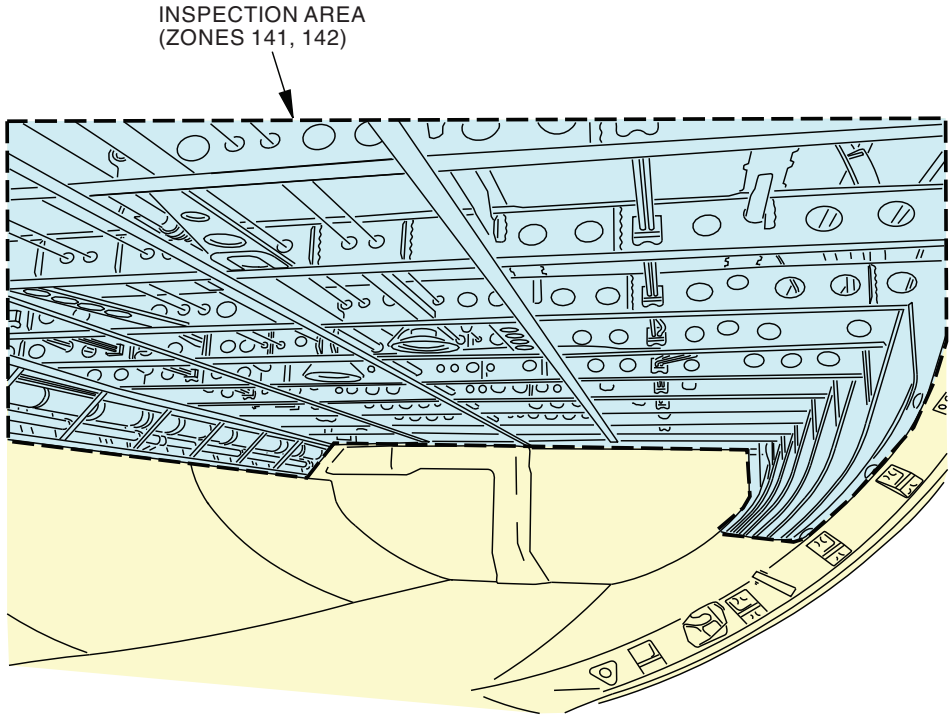


**AFT CARGO COMPARTMENT
(FORWARD SIDE)
(UPPER ANGLED SIDEWALL AND CEILING PANELS REMOVED)**

B

2410364 S00061525387_V1

**Aft Cargo Compartment
Figure 213/05-42-01-990-813 (Sheet 3 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

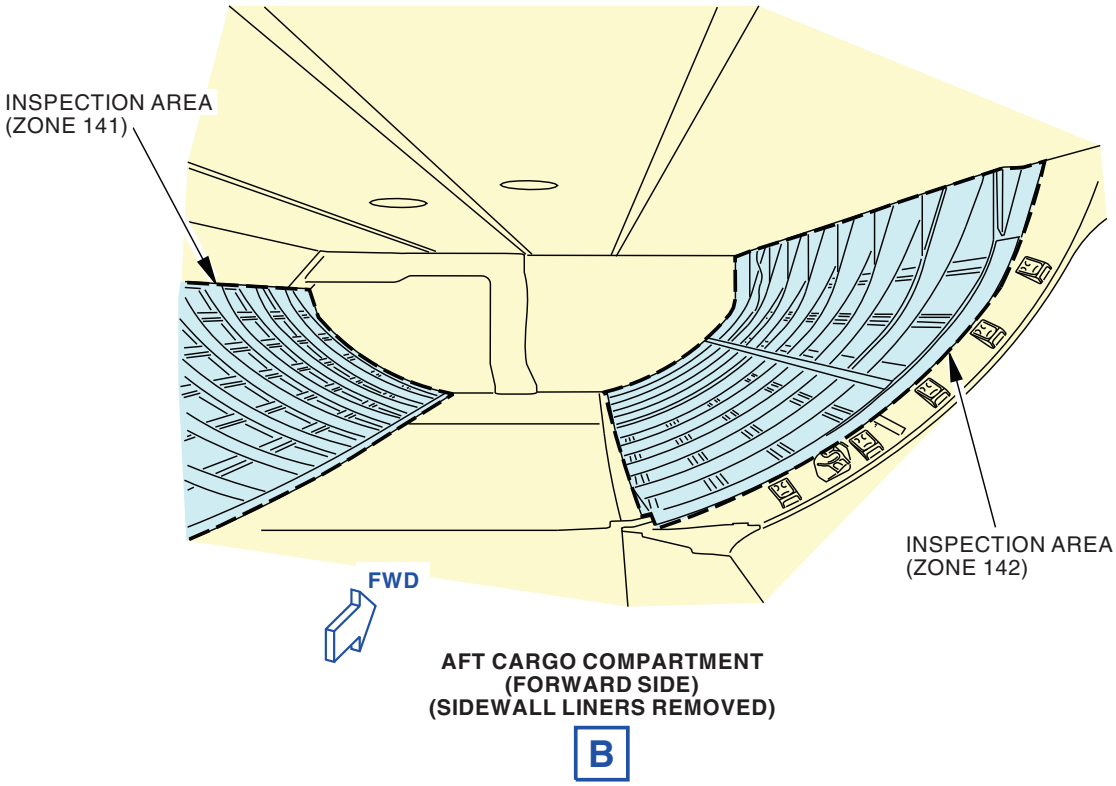

2410365 S00061525388_V1

Aft Cargo Compartment
Figure 213/05-42-01-990-813 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-211-801

15. Detailed Inspection: IDG, APU Starter/Generator, Battery, and External Power Feeder Wiring/ EWIS. (EZAP)

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-802	Detailed Inspection of EWIS (P/B 601)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

E. Inspection

SUBTASK 05-42-01-010-006

(1) Open these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

NOTE: Alternate access through panels 121MW, 121NW and 122JW is from Forward Cargo Compartment.

SUBTASK 05-42-01-211-001

(2) Do this task: Detailed Inspection of EWIS, TASK 20-60-02-100-802.

(3) Inspect (Detailed) the Integrated Drive Generator (IDG), Auxiliary Power Unit (APU) starter/generator, battery, and external power feeder wiring and connected Electrical Wiring Interconnect Systems (EWIS). (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-42-01-910-014

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.


SUBTASK 05-42-01-410-006

(5) Close these access panels:

Number	Name/Location
117A	Electronic Equipment Access Door
121MW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
121NW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD
122JW	PANEL ASSY - FORWARD CARGO COMPARTMENT FWD BULKHEAD

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

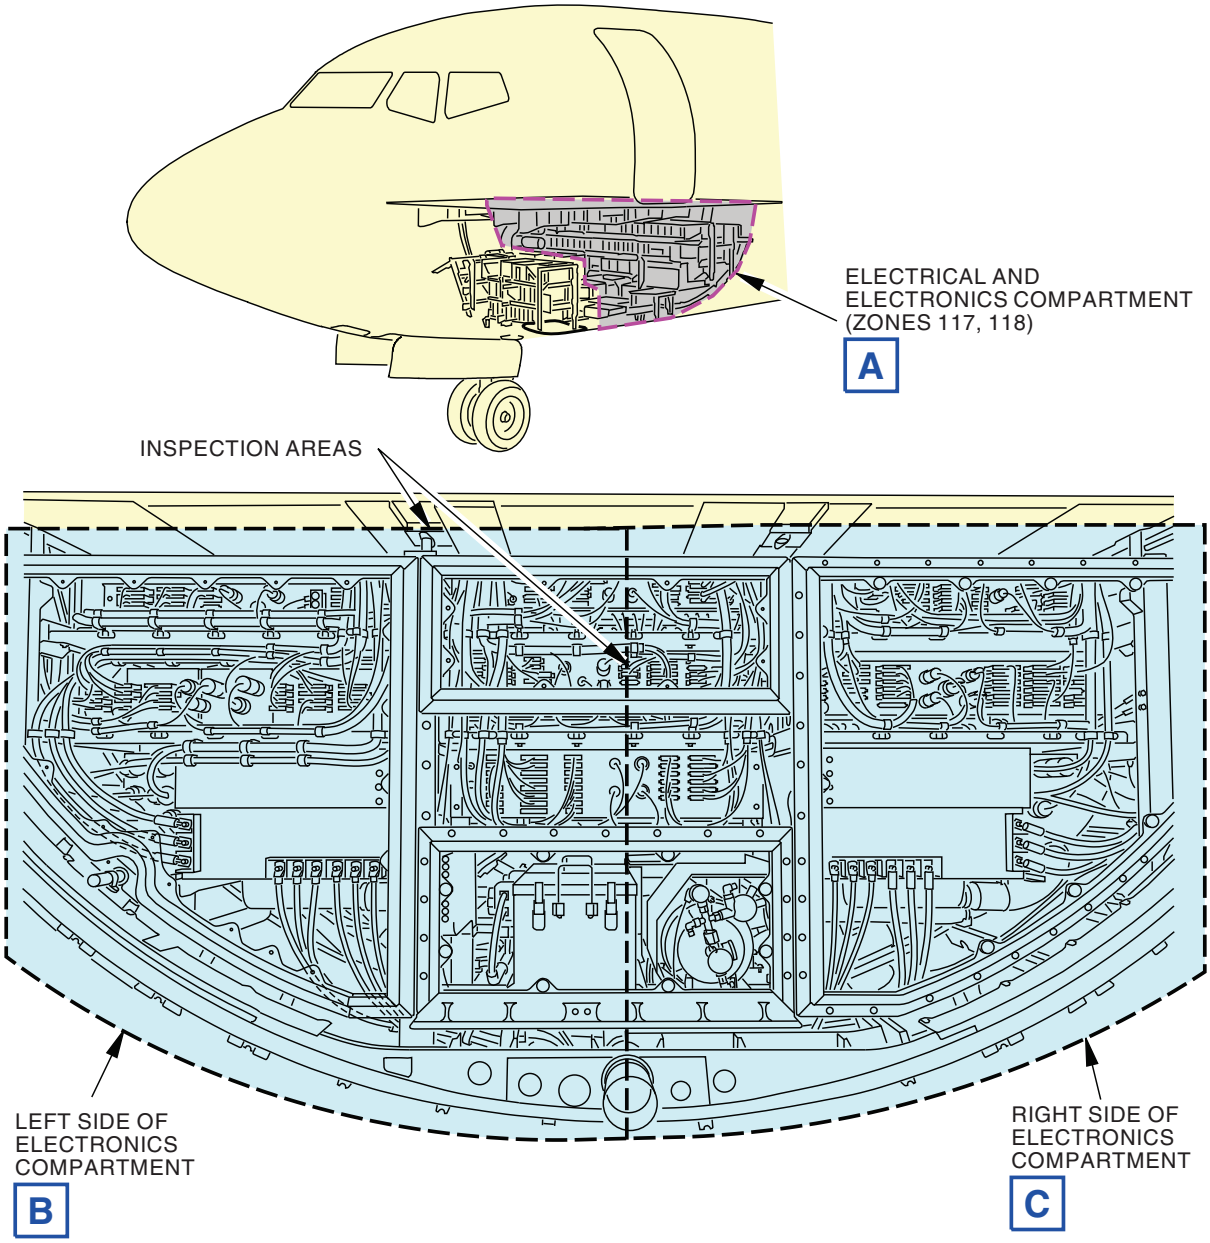


ELECTRICAL AND ELECTRONICS COMPARTMENT
(VIEW IN THE FORWARD DIRECTION)
(FORWARD CARGO COMPARTMENT ACCESS PANELS REMOVED)

A

2410366 S00061525390_V1

Electrical and Electronics Compartment (view in the forward direction)
Figure 214/05-42-01-990-814 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

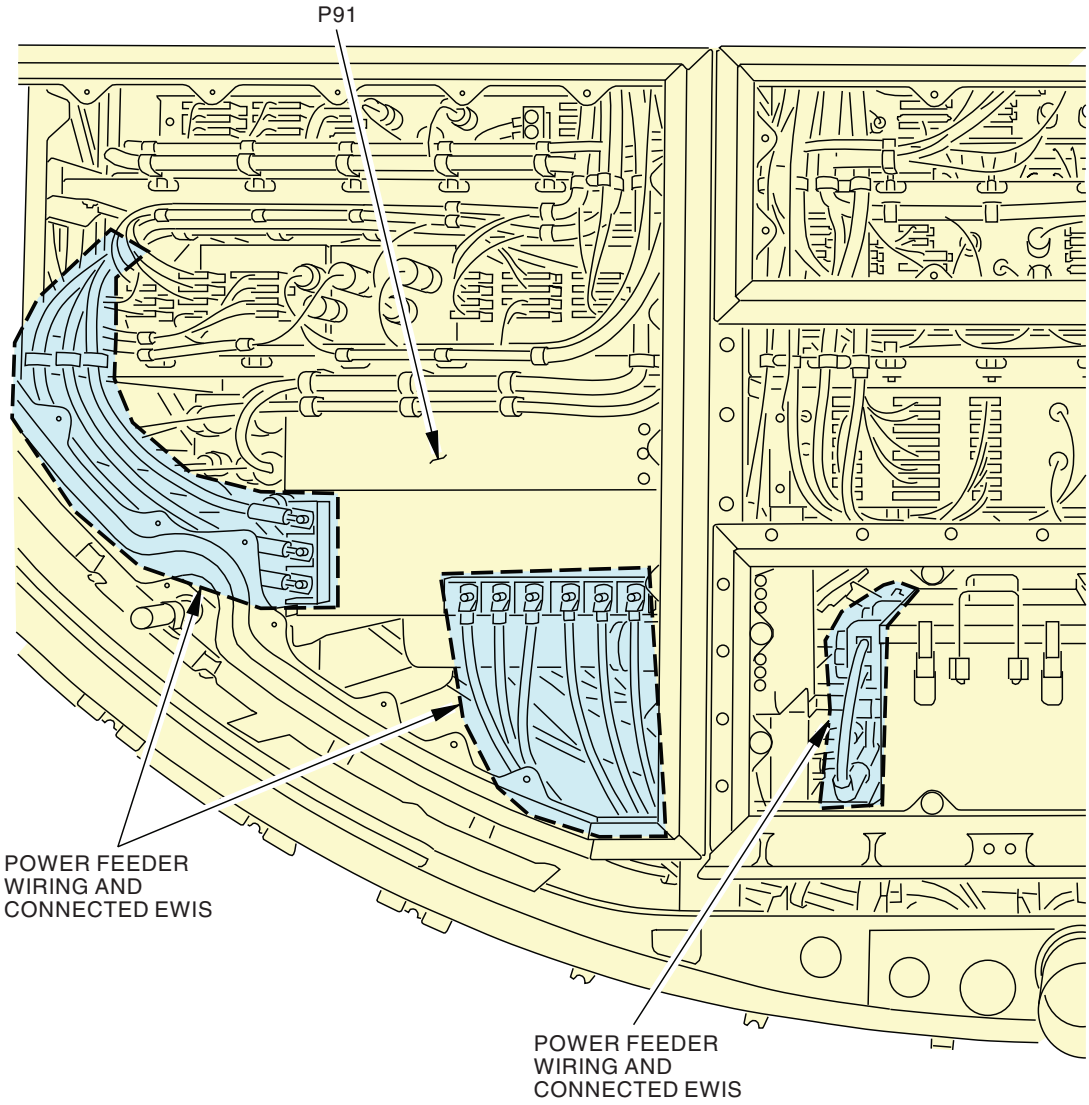

2410367 S00061525391_V1

Electrical and Electronics Compartment (view in the forward direction)
Figure 214/05-42-01-990-814 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

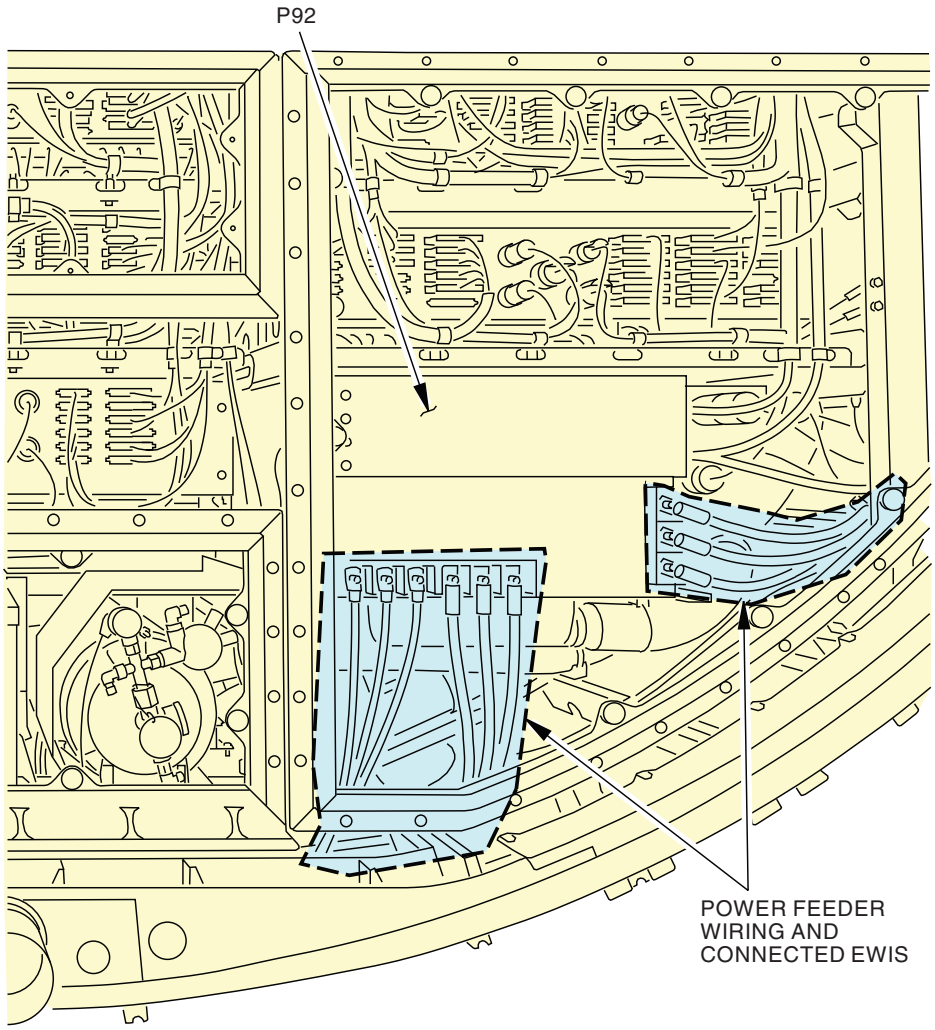

RIGHT SIDE OF ELECTRONICS COMPARTMENT

C

2410368 S00061525392_V1

Electrical and Electronics Compartment (view in the forward direction)
Figure 214/05-42-01-990-814 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-211-802

16. Detailed Inspection: External Power Feeder Wiring/ EWIS in the area outboard of Nose Wheel Well. (EZAP)

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
05-51-91-790-801	Cabin Pressure Leak Test (P/B 201)
20-60-02-100-802	Detailed Inspection of EWIS (P/B 601)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
53-14-01-020-801	Nose Wheel Well Access Panels Removal (P/B 401)
53-14-01-420-801	Nose Wheel Well Access Panels Installation (P/B 401)

C. Location Zones

Zone	Area
114	Area Above and Outboard of Nose Landing Gear Wheel Well - Right

D. Access Panels

Number	Name/Location
112A	Forward Access Door
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

E. Inspection

SUBTASK 05-42-01-010-007

(1) Open this access panel:

Number	Name/Location
112A	Forward Access Door

SUBTASK 05-42-01-010-009

(2) Open these access panels:

Number	Name/Location
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

(a) Do this task: Nose Wheel Well Access Panels Removal, TASK 53-14-01-020-801.

SUBTASK 05-42-01-211-002

(3) Do this task: Detailed Inspection of EWIS, TASK 20-60-02-100-802.

(4) Inspect (Detailed) the external power feeder wiring and connected EWIS in the area outboard of Nose Wheel Well (Right Side). (EZAP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 05-42-01-910-015

(5) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801, for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-42-01-410-007

(6) Close this access panel:

Number	Name/Location
112A	Forward Access Door

SUBTASK 05-42-01-410-009

(7) Close these access panels:


Number	Name/Location
114AC	Fwd Nose Wheel Well Upper Access Panel
114AW	Forward Nose Wheel Well Panel
114BW	Forward Nose Wheel Well Panel

(a) Do this task: Nose Wheel Well Access Panels Installation, TASK 53-14-01-420-801.

(b) Do this task: Cabin Pressure Leak Test, TASK 05-51-91-790-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

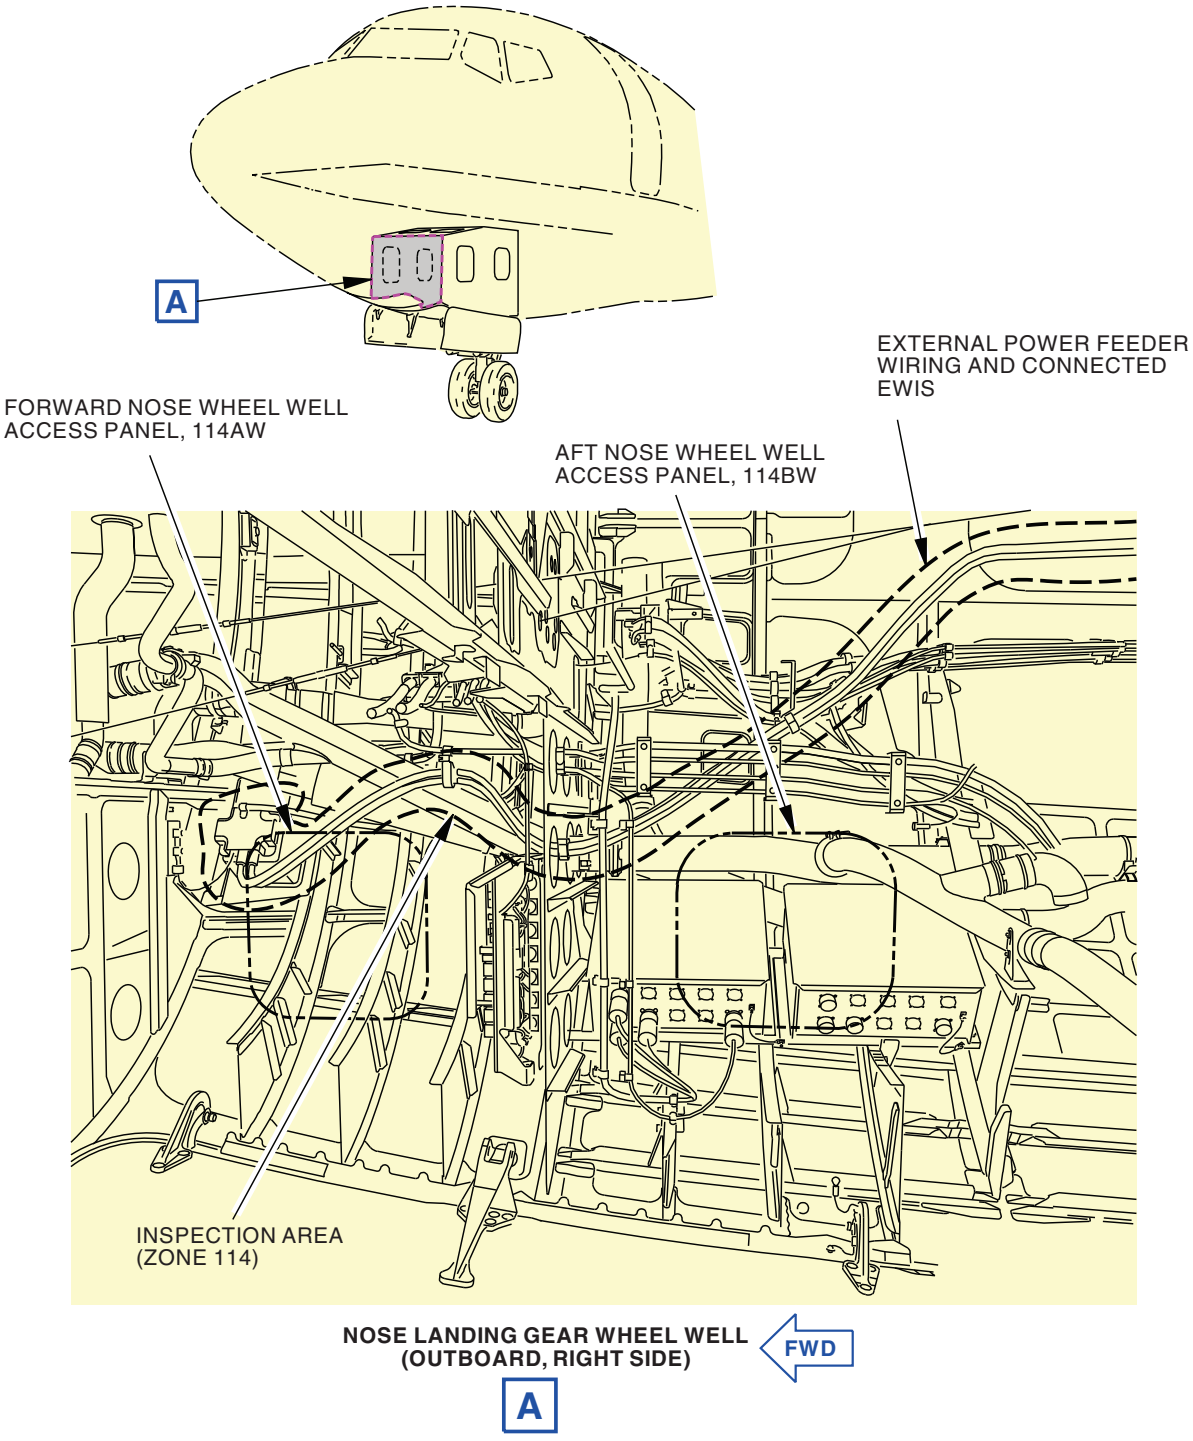

EWIS in Area Outboard of Nose Wheel Well - Right Side
Figure 215/05-42-01-990-815

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EWIS

TASK 05-42-01-211-803

17. Detailed Inspection: Exposed EWIS in the Center Section Wing Box (EZAP)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This procedure is an Enhanced Zonal Analysis Procedure (EZAP) task.

B. References

Reference	Title
20-60-02-100-802	Detailed Inspection of EWIS (P/B 601)
20-60-07-910-801	Protection of the EWIS During Maintenance (P/B 201)
28-11-31-000-801	Center Tank Access Door Removal (P/B 401)
28-11-31-400-801	Center Tank Access Door - Installation (P/B 401)

C. Location Zones

Zone	Area
131	Center Section Wing Box, Body Station 540.00 to Body Station 663.75 - Left
132	Center Section Wing Box, Body Station 540.00 to Body Station 663.75 - Right

D. Access Panels

Number	Name/Location
131AB	Center Tank Access

E. Inspection

SUBTASK 05-42-01-010-008

(1) Open this access panel:

(TASK 28-11-31-000-801)

Number	Name/Location
131AB	Center Tank Access

SUBTASK 05-42-01-211-003

(2) Do this task: Detailed Inspection of EWIS, TASK 20-60-02-100-802

(3) Inspect (Detailed) all exposed EWIS in the Center Section Wing Box (EZAP).

SUBTASK 05-42-01-910-016

(4) Refer to Protection of the EWIS During Maintenance, TASK 20-60-07-910-801 for the protection and caution information that will minimize contamination and accidental damage to EWIS during maintenance.

SUBTASK 05-42-01-410-008


(5) Close this access panel:

(TASK 28-11-31-400-801)

Number	Name/Location
131AB	Center Tank Access

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

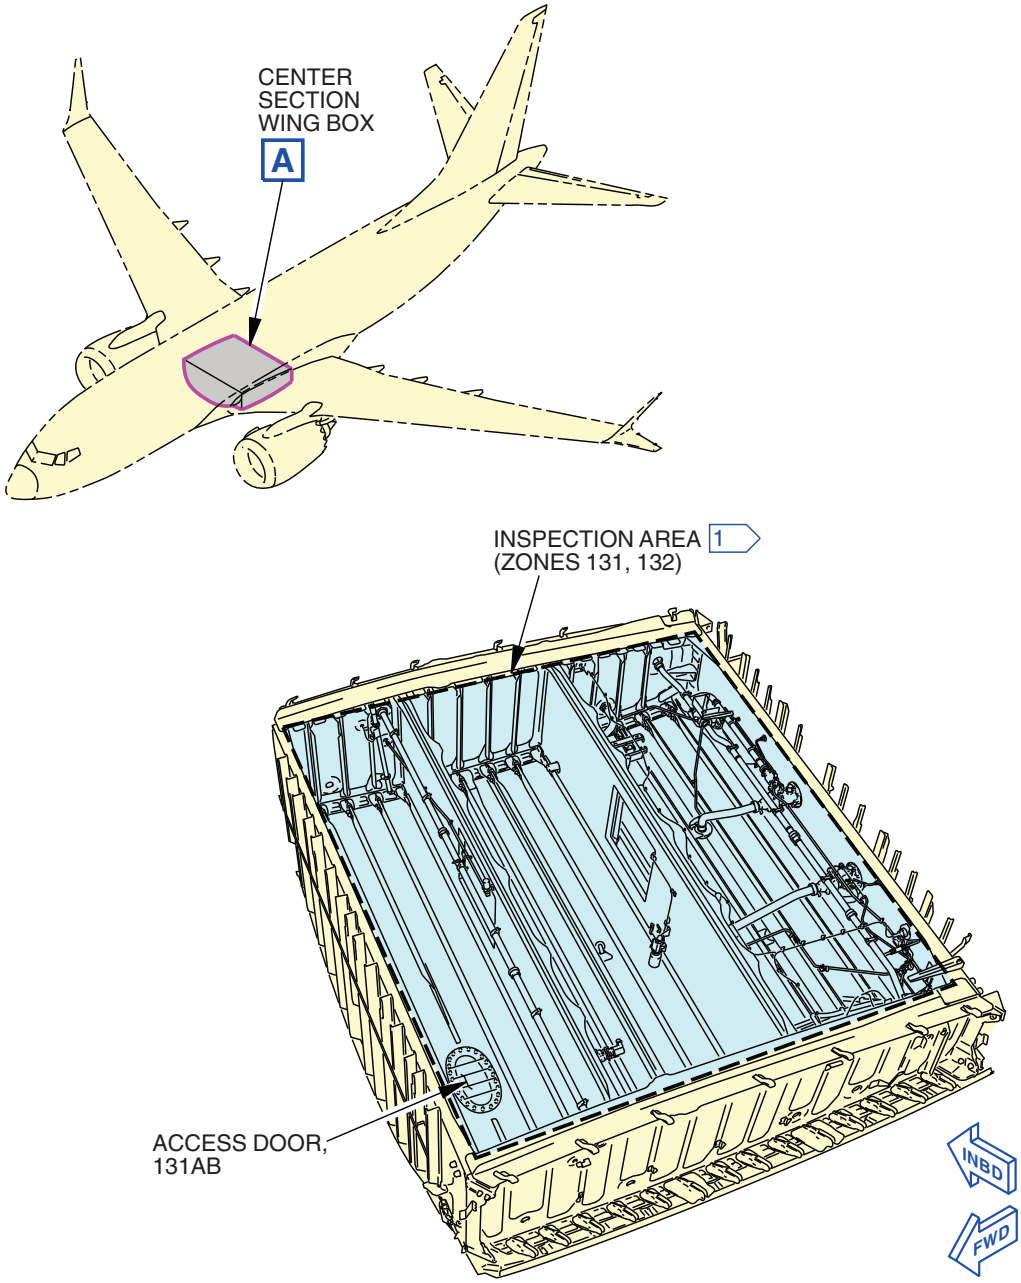

**CENTER SECTION WING BOX
(TOP VIEW)**

A

1 UPPER PANEL NOT SHOWN FOR CLARITY

3099527 S0000845619_V1

**All Exposed EWIS in the Center Section Wing Box (Detailed)
Figure 216/05-42-01-990-816**

ECCN 9E991 BOEING PROPRIETARY - See title page for details