Cabin Compartment – Seating Arrangement – General data

1. General

The commuter style seats comprise of a metal frame covered with padding and upholstery material, fitted with lap type safety belts. Increased seat padding and new seat covering material is introduced, the seat covering being easily removed for cleaning (Mod 6/2054 and Mod 6/2281). Single and double seats are provided, and are installed to a side track rail on the cabin wall and to a seat rail and track assembly on the cabin floor. Seats may be removed at the operator's discretion. However, any seating plan or carriage of cargo that deviates from Figure 1 through Figure 4 must be approved by Viking Air Limited, or the operators local airworthiness authority.

2. Configuration

Two configurations of commuter seating arrangements are available:

A. Commuter – Nineteen Seats (Basic)

The nineteen seat configuration comprises five double seats and one single seat on the right side of the cabin, five single seats on the left side and three single tip-up type seats mounted across the rear bulkhead, all of which face forward. Refer to Figure 1 and Figure 3 for details.

B. Commuter – Fourteen Seats (S.O.O. 6286)

The customer option fourteen passenger seat configuration comprises of six single seats on the right side of the cabin, five single seats on the left side and three single tip-up type seats mounted across the rear bulkhead, all of which face forward. Refer to Figure 2 and Figure 4 for details.


C. Commuter – Nineteen Seats (S.O.O. 6407)

The customer option nineteen passenger seat configuration comprises of six double seats on the right side of the cabin, five single seats on the left side and two single tip-up type seats on STA 332 bulkhead, all of which face forward. Refer to Figure 5.


Note S.O.O. 6389 (STA 332 Bulkhead Modification and Cargo Net Installation) and S.O.O. 6377 (Structural Provisions, 6th Row Double Seat RHS) are prerequisites of this option.

D. Commuter - Sixteen Seats (S.O.O. 6432)


The customer option sixteen passenger seat configuration comprises of four double seats and one single seat on the right side of the cabin, four single seats on the left side and three single tip-up type seats mounted across the rear bulkhead, all of which face forward. Refer to Figure 6 for details.

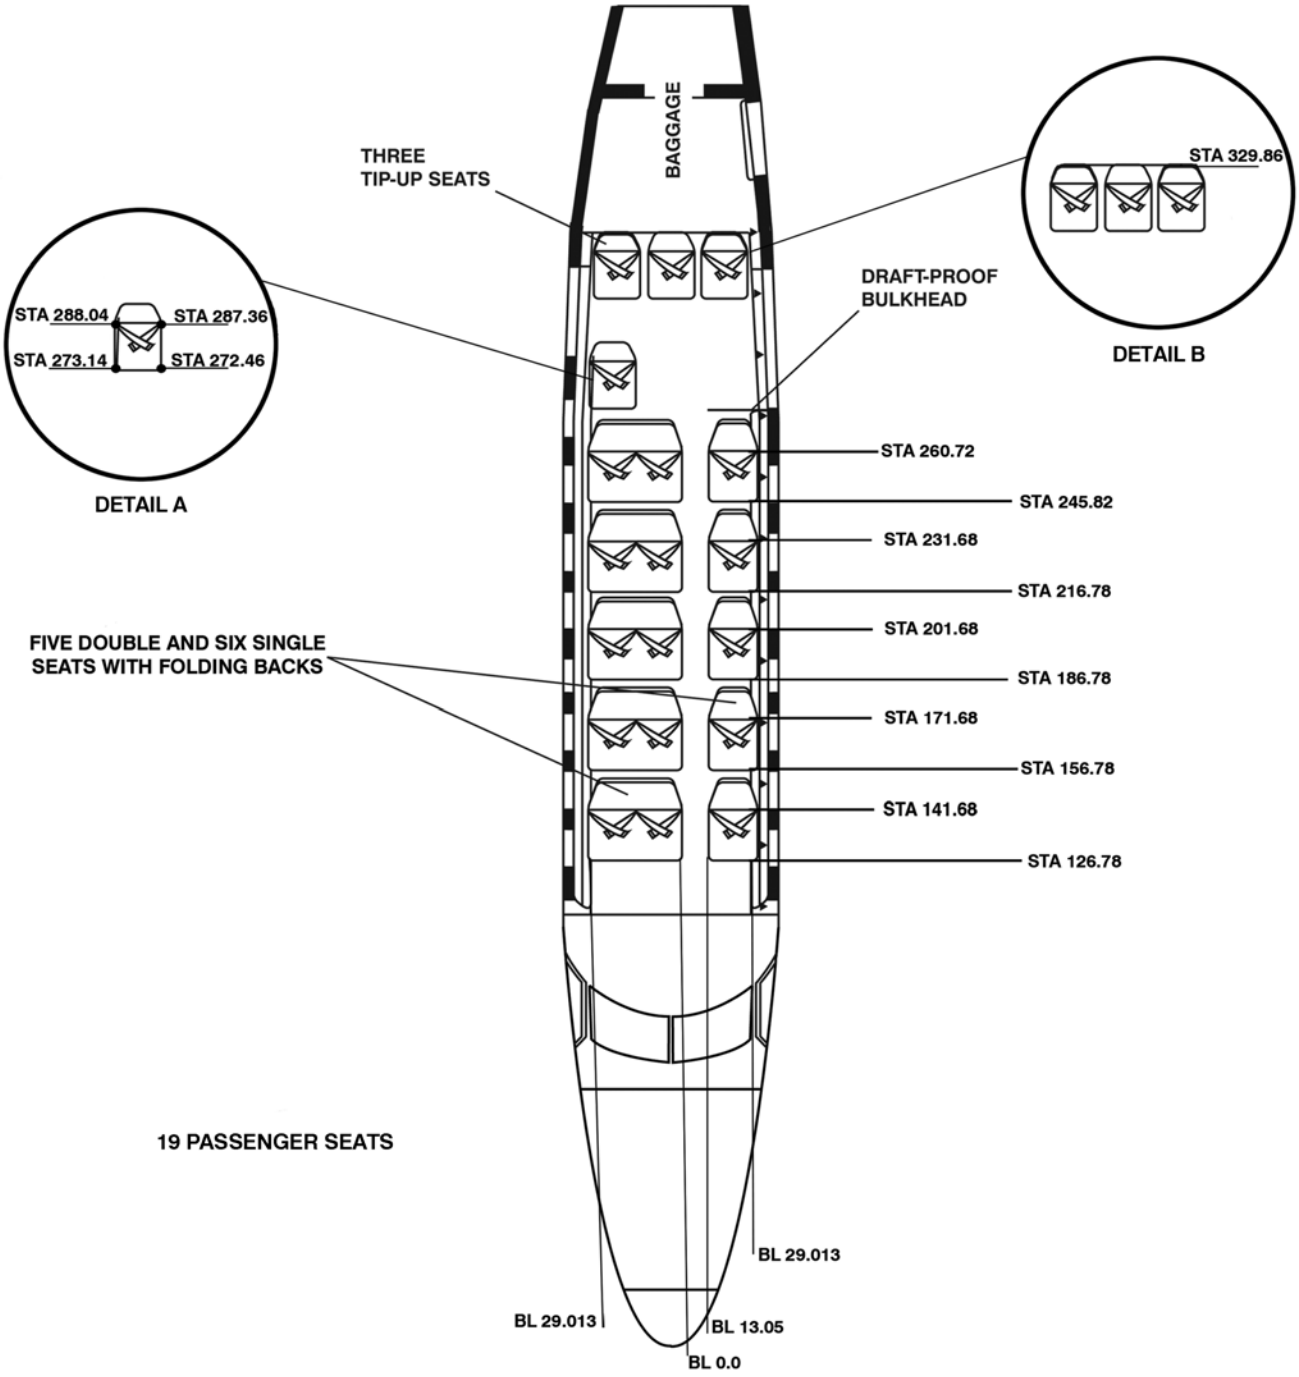


Seat Arrangement – Commuter – 19 Passenger (Pre Mod 6/2281)
Figure 1

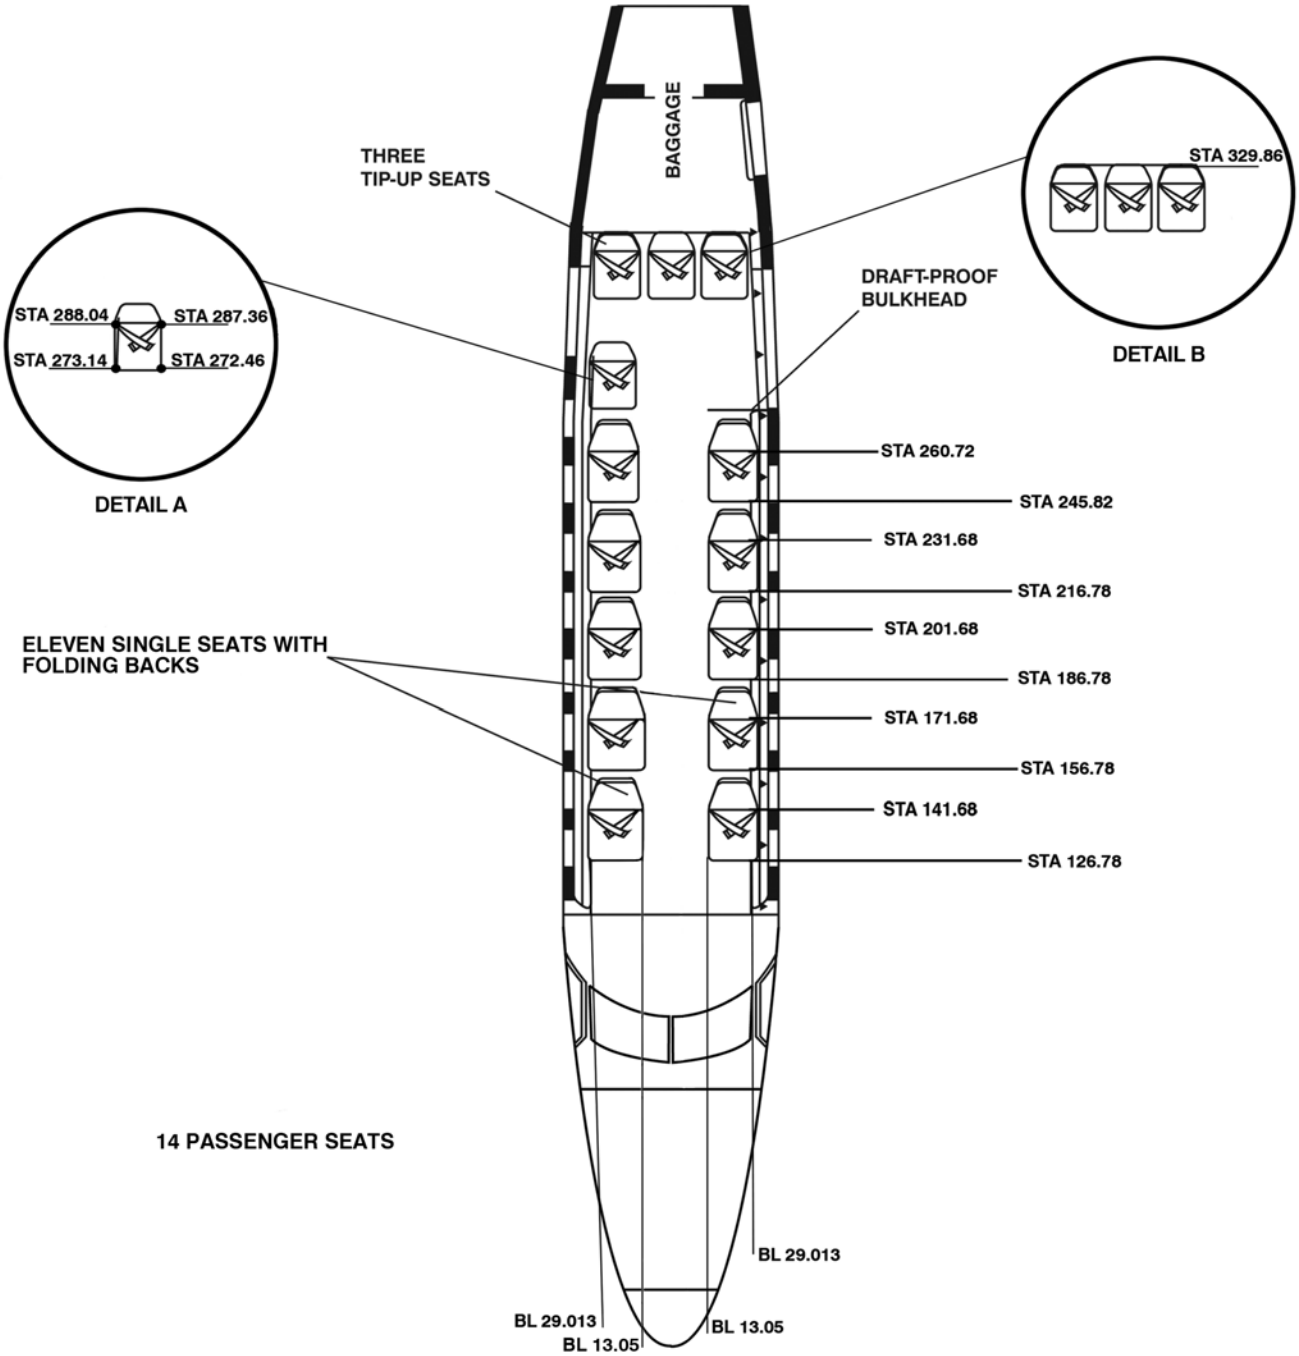


Seat Arrangement – Commuter – 14 Passenger (S.O.O. 6286) (Pre Mod 6/2281)
Figure 2

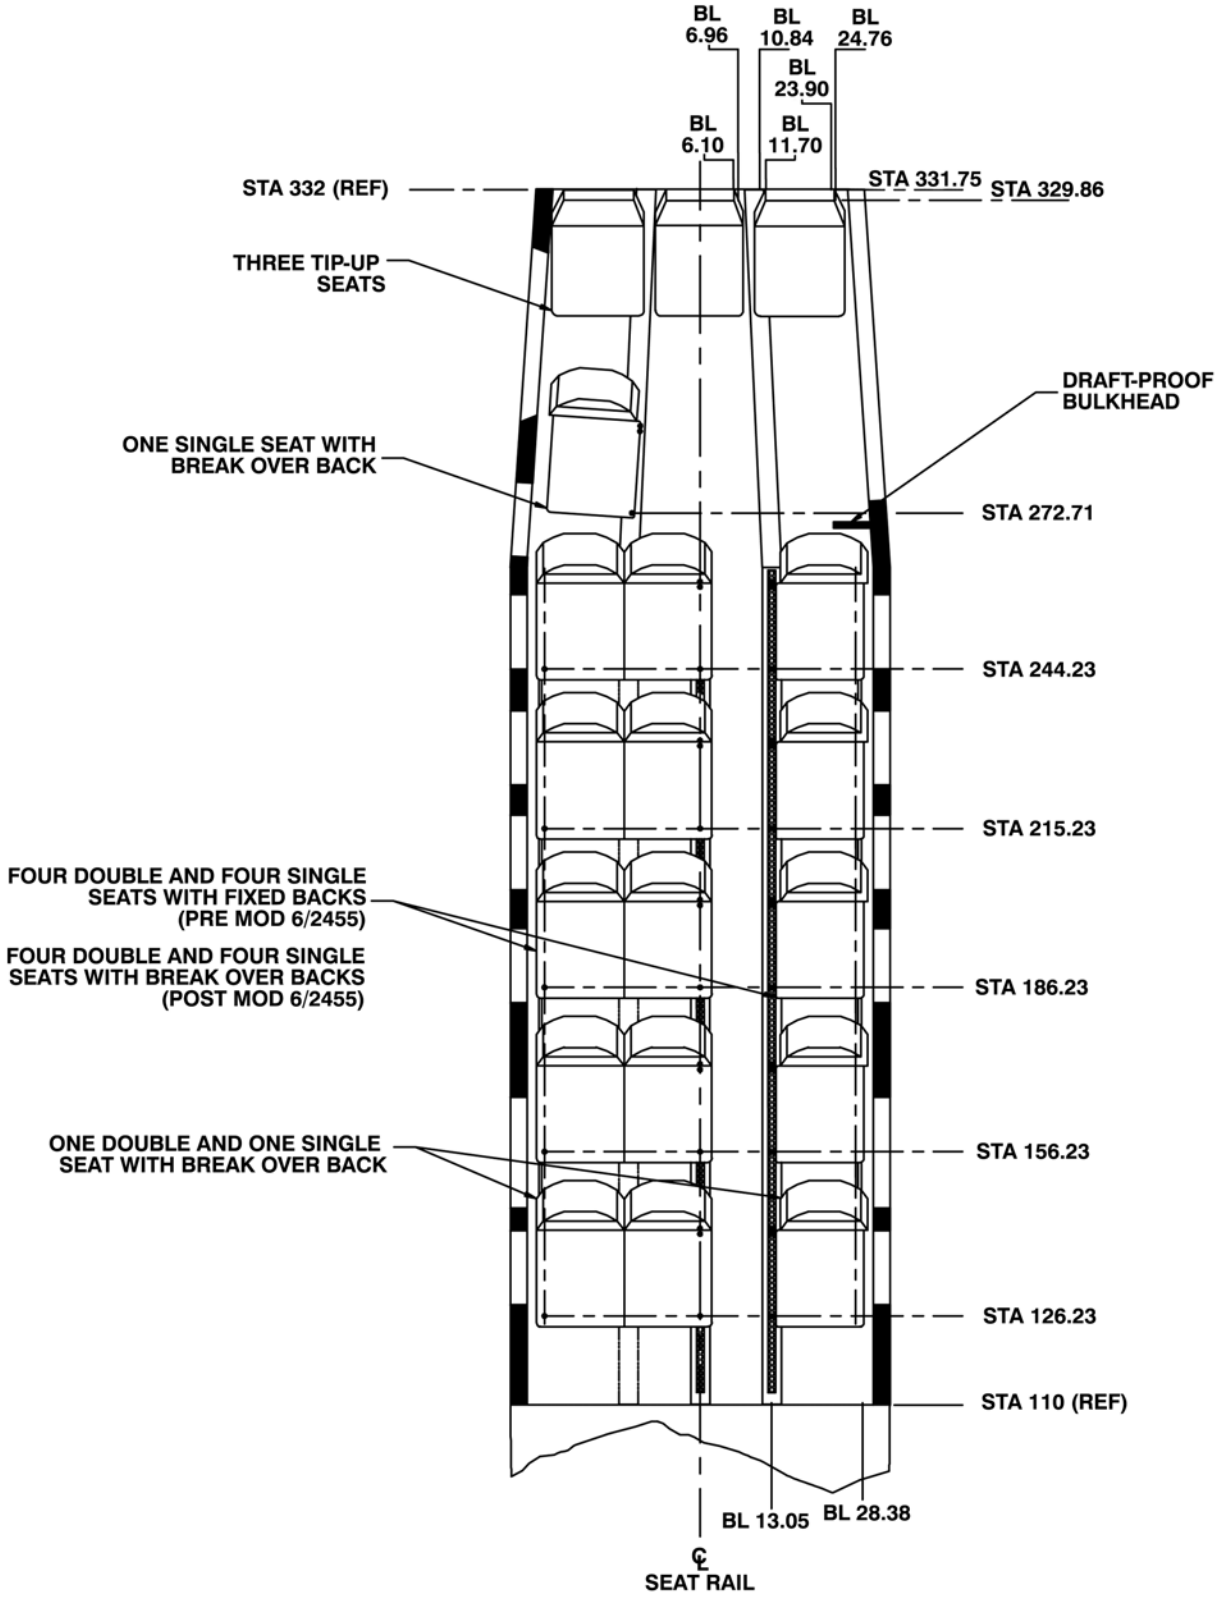


Seat Arrangement – Commuter – 19 Passenger (Post Mod 6/2281)
Figure 3

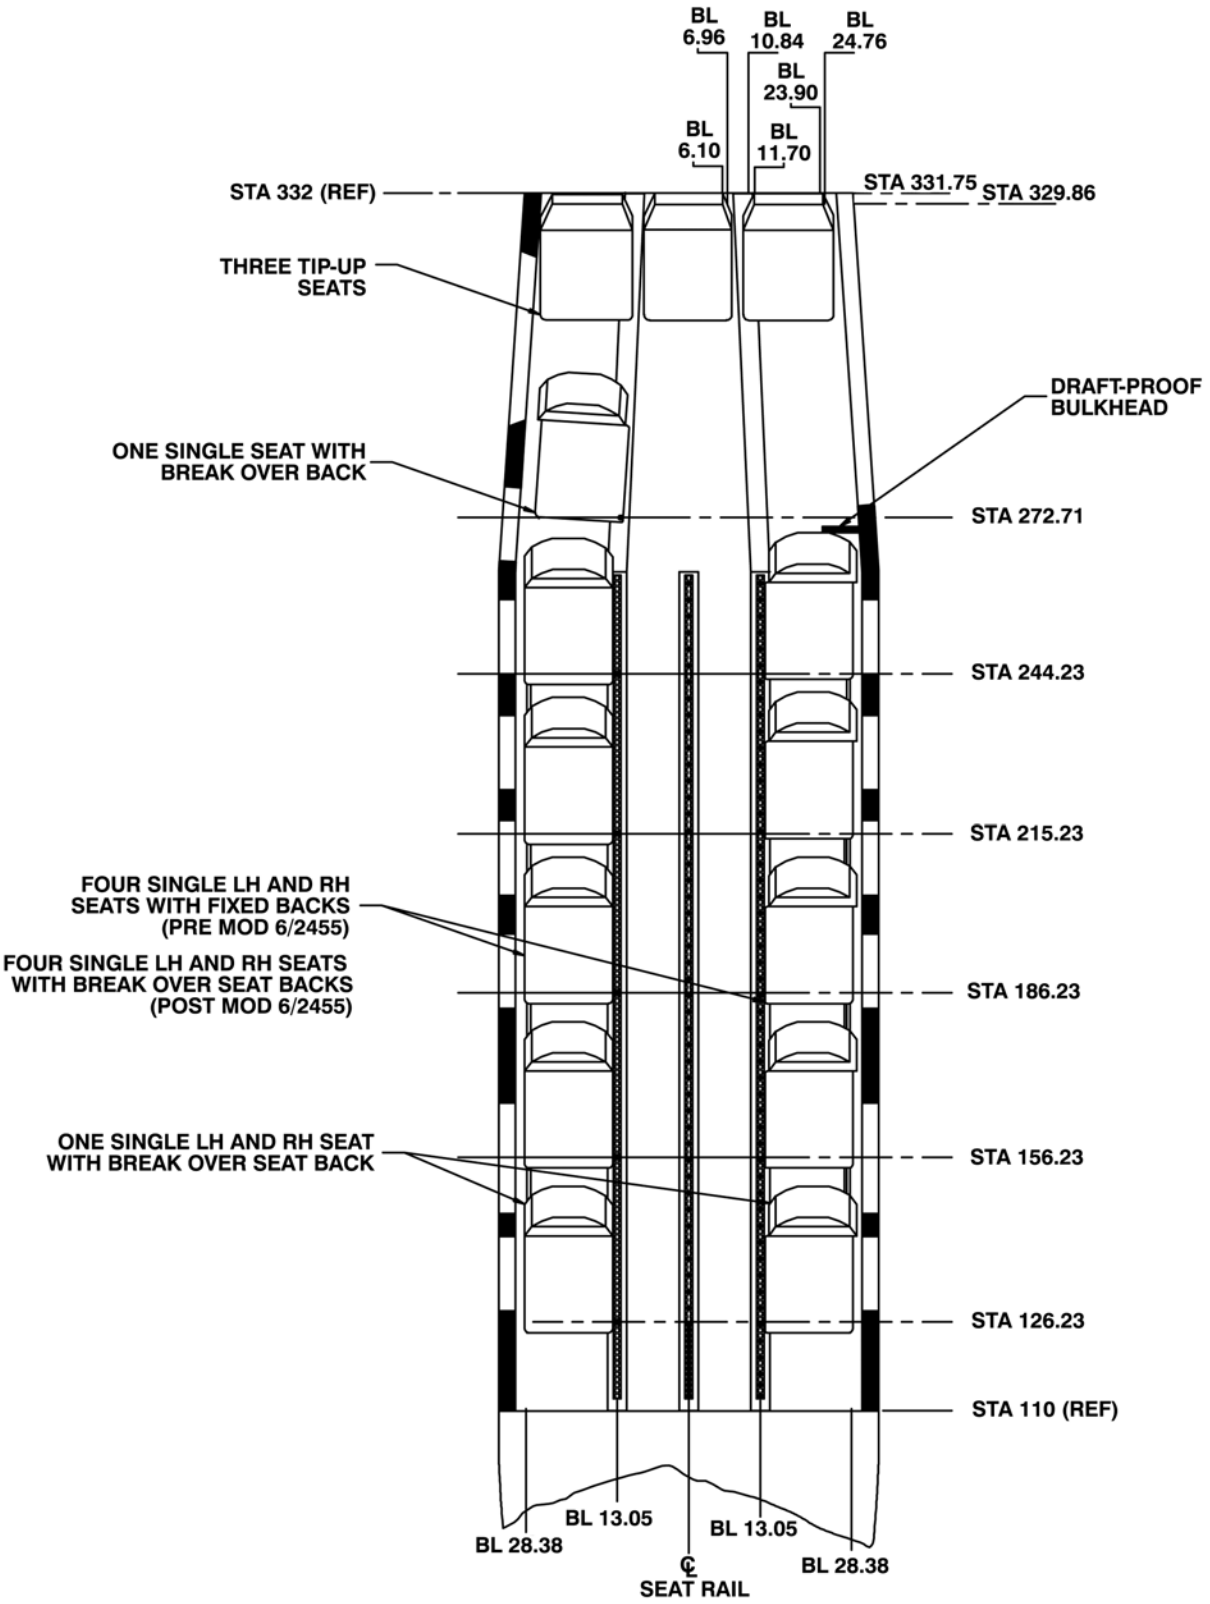

Seat Arrangement – Commuter – 14 Passenger (Post Mod 6/2281)
Figure 4

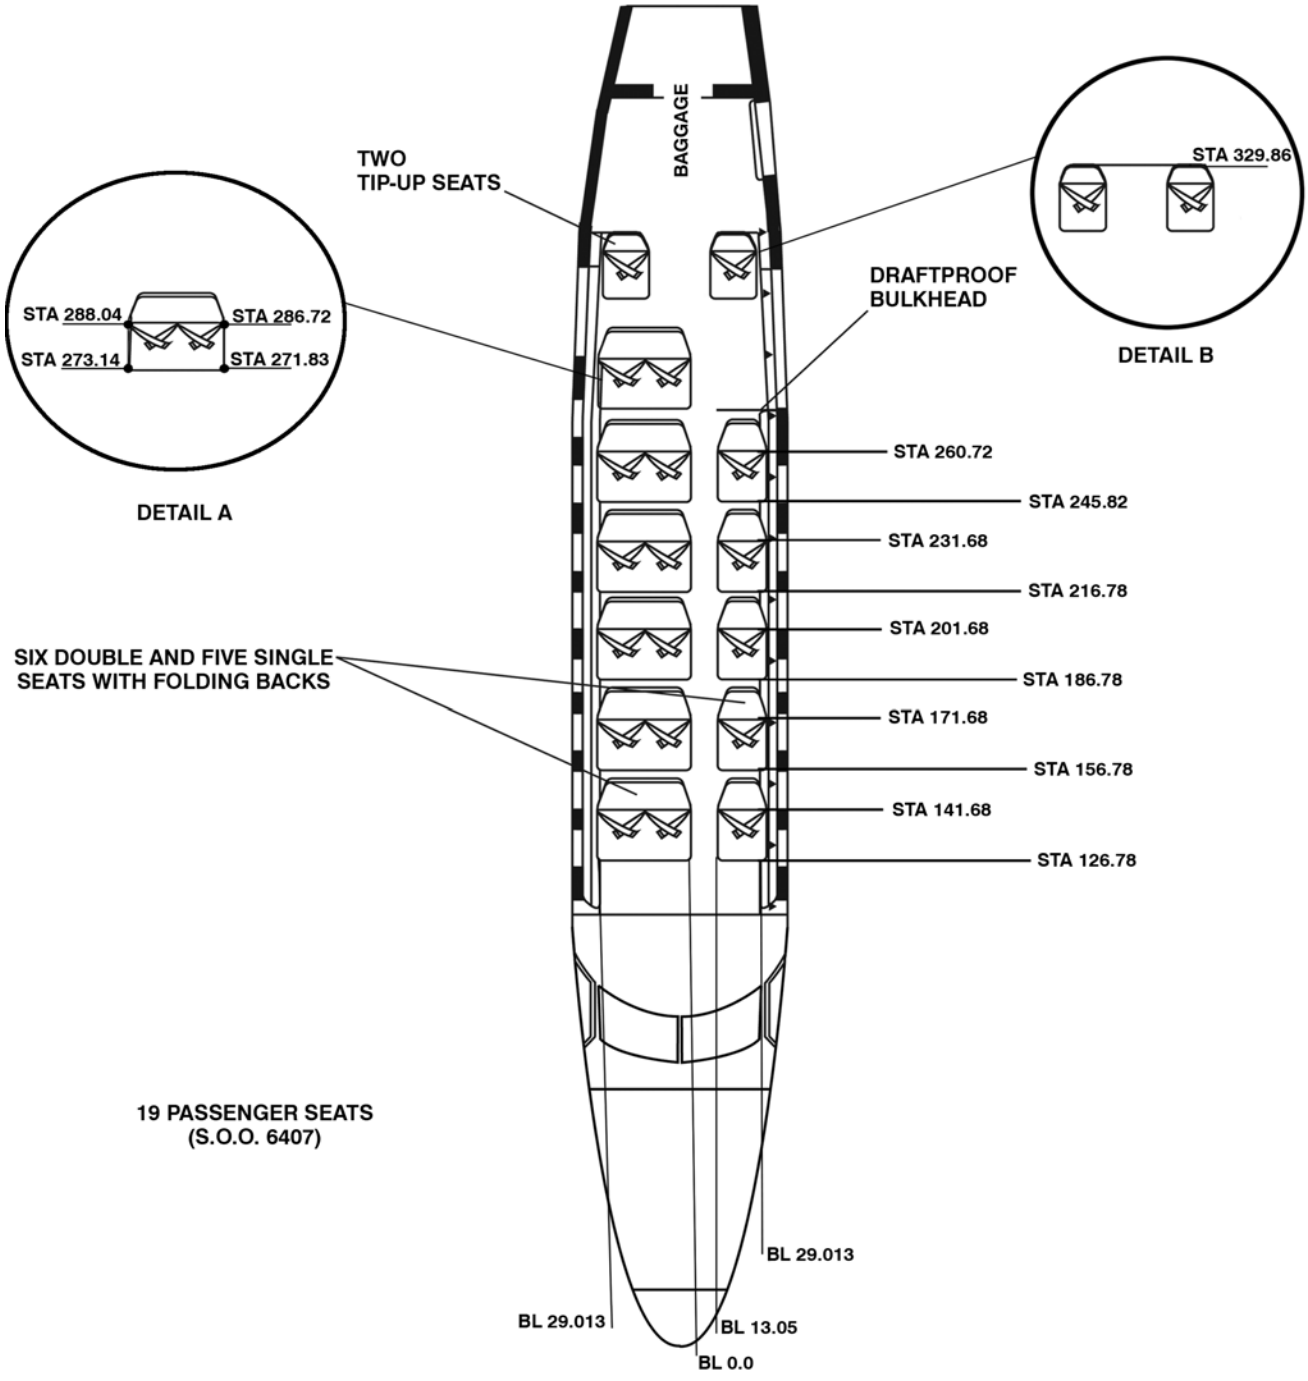

Seat Arrangement – Commuter – 19 Passenger (S.O.O. 6407)
Figure 5

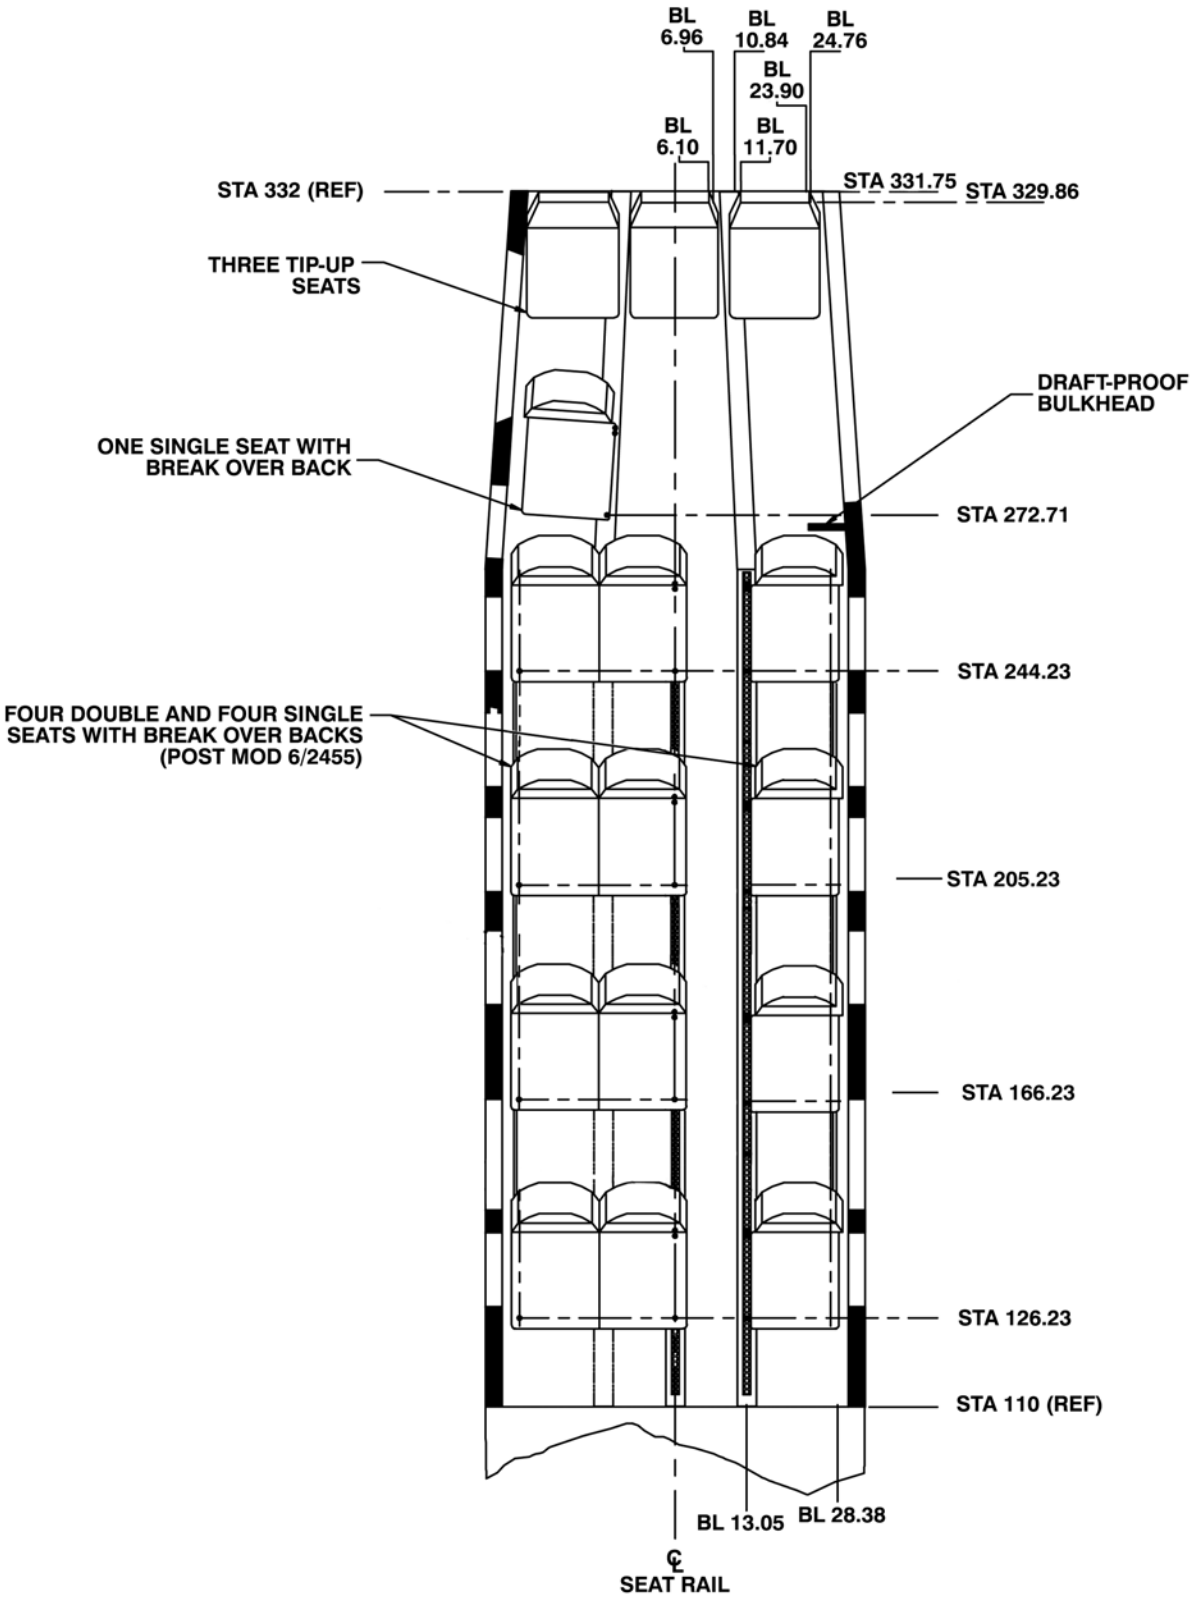

Seat Arrangement - Commuter - 16 Passenger (S.O.O. 6432)
Figure 6

3. Removal/Installation

A. Removal of Single or Double Seat (Pre Mod 6/2281)

1) Pull and rotate the spring loaded “lock and ring” on the forward outboard side of the seat and rotate until the roll pin protrudes from the seat lock.

2) Pull up and rotate the forward and aft spring loaded “lock collar” and slide the forward and aft seat legs clear of the seat track.

3) Slide the seat forward or aft until side seat support and lower seat leg supports are clear of the seat retaining tracks.

B. Installation of Single or Double Seat (Pre Mod 6/2281)

1) Pull and rotate the spring loaded “lock and ring” on the forward outboard side of the seat and rotate until the roll pin protrudes from seat lock.

2) Pull up on the forward and aft spring loaded seat leg “lock collars”.

3) Slide the seat assembly into the side and floor seat tracks at the correct locations. (Refer to Figure 1 and Figure 2 for locations).

4) Turn the forward outboard side “lock ring” to engage the forward seat lock.

5) Rotate the lower seat leg collar to engage the seat leg support in the floor track.

C. Removal of JB6 Series Seat Assemblies – Single or Double (Post Mod 6/2281)

Note Seat assemblies are secured to the aircraft seat tracks through the use of a stud and anti-rattle track lock.

1) Use an anti-rattle nut wrench to loosen the anti-rattle nuts located under the forward leg and sidewall attachment points.

2) Back out the threaded plunger on top of the aft track floor fitting and sidewall fitting.

3) Slide the seat assembly forward or aft one-half inch and lift aircraft seat off of tracks.

D. Installation of JB6 Series Seat Assemblies – Single or Double (Post Mod 6/2281)

Note Centered seat track (Mod 6/2280), is a prerequisite for installation of JB6 series seats.

1) Ensure the shear plungers are fully retracted on the aft sidewall fitting and floor track fitting.

2) Ensure anti-rattle nuts are fully backed off and against the seat frame.

3) Slide the seat assembly into the side and floor seat tracks at the correct locations. (Refer to Figure 3 and Figure 4 for locations).

4) Ensure break over seats are located at the first row (forward of emergency exit) and sixth row on the right hand side of the fuselage (refer to Figure 3 and Figure 4).

5) Thread the shear plungers into the wall and floor seat track mounts.

Note

- For floor track fitting torque to 36 to 40 in–lbs.
- For sidewall fitting torque to 28 to 32 in–lbs.

6) Using an anti-rattle nut wrench, tighten the anti-rattle nuts against the seat track. Hand tighten, plus 1/4 turn, the anti-rattle nuts against seat track using an anti-rattle nut wrench.

E. Removal of Station 332 Seats

1) Remove and retain two (2) AN5–4A bolts attaching the lower seat support to Station 332 bulkhead.

2) While supporting the seat, remove and retain two (2) AN5–7A bolts attaching the upper seat support to Station 332 bulkhead. Remove seat from aircraft and move to a suitable work area.

3) Repeat Para 3.E.1) and Para 3.E.2) on remaining 2 seats.

F. Installation of Station 332 Seats

1) Line up the seat mounting pads with bulkhead seat mounting locations.

2) Install upper support AN5–7A bolts prior to installing lower support AN5–4A bolts.

3) Repeat Para 3.F.1) and Para 3.F.2) on the remaining seats.

G. Removal of Dress Covers and Cushions – Single and Double

1) Carefully pull up on the seat bottom cushion to separate the hook and loop fasteners.

2) Remove dress cover upholstery from the seat bottom cushion.

3) Carefully pull the seat back cushion to separate hook and loop fasteners.

4) Remove dress cover upholstery from the seat back cushion.

H. Installation of Dress Covers and Cushions – Single and Double

1) Replace dress cover upholstery on the seat back cushion.

2) Carefully reconnect the seat back cushion hook and loop fasteners.

3) Replace dress cover upholstery to the seat bottom cushion.

4) Carefully reconnect the seat bottom cushion hook and loop fasteners.

This Page Intentionally Left Blank