CHAPTER

25

EQUIPMENT/ FURNISHINGS

CHAPTER 25
EQUIPMENT/FURNISHINGS

Subject/Page	Date	COC
25-EFFECTIVE PAGES		
1 thru 8	Sep 15/2026	
25-CONTENTS		
1	Jan 15/2025	
2	May 15/2024	
O 3	Sep 15/2026	
O 4	Sep 15/2026	
R 5	Sep 15/2026	
O 6	Sep 15/2026	
O 7	Sep 15/2026	
O 8	Sep 15/2026	
O 9	Sep 15/2026	
O 10	Sep 15/2026	
O 11	Sep 15/2026	
O 12	Sep 15/2026	
O 13	Sep 15/2026	
O 14	Sep 15/2026	
O 15	Sep 15/2026	
O 16	Sep 15/2026	
O 17	Sep 15/2026	
O 18	Sep 15/2026	
O 19	Sep 15/2026	
20	BLANK	
25-00-00		
701	May 15/2024	
R 702	Sep 15/2026	
R 703	Sep 15/2026	
R 704	Sep 15/2026	
R 705	Sep 15/2026	
O 706	Sep 15/2026	
O 707	Sep 15/2026	
O 708	Sep 15/2026	
O 709	Sep 15/2026	
O 710	Sep 15/2026	
O 711	Sep 15/2026	
O 712	Sep 15/2026	
O 713	Sep 15/2026	
25-00-00 (cont)		
O 714	Sep 15/2026	
O 715	Sep 15/2026	
O 716	Sep 15/2026	
O 717	Sep 15/2026	
O 718	Sep 15/2026	
O 719	Sep 15/2026	
O 720	Sep 15/2026	
O 721	Sep 15/2026	
O 722	BLANK	
25-00-00		
R 801	Sep 15/2026	
802	May 15/2024	
R 803	Sep 15/2026	
R 804	Sep 15/2026	
R 805	Sep 15/2026	
806	May 15/2024	
R 807	Sep 15/2026	
808	May 15/2024	
R 809	Sep 15/2026	
R 810	Sep 15/2026	
R 811	Sep 15/2026	
812	Jan 15/2025	
R 813	Sep 15/2026	
814	Jan 15/2025	
815	Jan 15/2025	
816	Jan 15/2025	
817	Jan 15/2025	
R 818	Sep 15/2026	
R 819	Sep 15/2026	
R 820	Sep 15/2026	
821	Jan 15/2025	
R 822	Sep 15/2026	
823	Jan 15/2025	
R 824	Sep 15/2026	
825	Jan 15/2025	
R 826	Sep 15/2026	
25-00-00 (cont)		
R 827	Sep 15/2026	
828	Jan 15/2025	
R 829	Sep 15/2026	
830	Jan 15/2025	
831	Jan 15/2025	
832	Jan 15/2025	
833	Jan 15/2025	
834	Jan 15/2025	
25-00-00		
R 901	Sep 15/2026	
O 902	Sep 15/2026	
903	May 15/2024	
904	May 15/2024	
905	Jan 15/2026	
906	Jan 15/2026	
907	May 15/2024	
R 908	Sep 15/2026	
A 909	Sep 15/2026	
A 910	Sep 15/2026	
25-11-00		
201	Jan 15/2026	
202	Jan 15/2026	
25-11-01		
401	May 15/2024	
402	May 15/2024	
R 403	Sep 15/2026	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
25-11-01		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
25-11-02		
401	May 15/2024	
R 402	Sep 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
25-11-02 (cont)		
R 403	Sep 15/2026	
R 404	Sep 15/2026	
25-11-03		
401	Jan 15/2026	
402	May 15/2024	
403	May 15/2024	
404	Jan 15/2026	
405	Jan 15/2026	
406	Jan 15/2026	
407	Jan 15/2026	
408	Jan 15/2026	
25-11-04		
401	Sep 15/2024	
402	Sep 15/2024	
403	Jan 15/2026	
404	Jan 15/2026	
25-11-11		
601	May 15/2025	
602	May 15/2025	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
606	May 15/2024	
25-11-21		
201	Jan 15/2026	
202	Jan 15/2026	
203	May 15/2026	
204	Jan 15/2026	
205	Jan 15/2026	
206	Jan 15/2026	
207	Jan 15/2026	
208	Jan 15/2026	
209	Jan 15/2026	
210	Jan 15/2026	
211	Jan 15/2026	
212	Jan 15/2026	
213	Jan 15/2026	
25-11-21 (cont)		
214	Jan 15/2026	
215	Jan 15/2026	
216	Jan 15/2026	
217	Jan 15/2026	
218	Jan 15/2026	
219	May 15/2026	
220	Jan 15/2026	
221	Jan 15/2026	
R 222	Sep 15/2026	
R 223	Sep 15/2026	
R 224	Sep 15/2026	
R 225	Sep 15/2026	
R 226	Sep 15/2026	
R 227	Sep 15/2026	
R 228	Sep 15/2026	
R 229	Sep 15/2026	
O 230	Sep 15/2026	
O 231	Sep 15/2026	
O 232	Sep 15/2026	
O 233	Sep 15/2026	
O 234	Sep 15/2026	
O 235	Sep 15/2026	
R 236	Sep 15/2026	
O 237	Sep 15/2026	
O 238	Sep 15/2026	
R 239	Sep 15/2026	
R 240	Sep 15/2026	
O 241	Sep 15/2026	
O 242	Sep 15/2026	
A 243	Sep 15/2026	
A 244	Sep 15/2026	
A 245	Sep 15/2026	
A 246	Sep 15/2026	
25-11-21		
A 601	Sep 15/2026	
A 602	Sep 15/2026	
25-11-21 (cont)		
A 603	Sep 15/2026	
A 604	Sep 15/2026	
A 605	Sep 15/2026	
A 606	Sep 15/2026	
A 607	Sep 15/2026	
A 608	Sep 15/2026	
A 609	Sep 15/2026	
A 610	Sep 15/2026	
A 611	Sep 15/2026	
A 612	Sep 15/2026	
A 613	Sep 15/2026	
A 614	Sep 15/2026	
A 615	Sep 15/2026	
A 616	Sep 15/2026	
25-11-22		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
25-21-01		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	BLANK	
25-21-12		
R 401	Sep 15/2026	
R 402	Sep 15/2026	
R 403	Sep 15/2026	
R 404	Sep 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
25-21-12 (cont)		
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	BLANK	
25-21-20		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
25-21-24		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2025	
405	May 15/2024	
406	BLANK	
25-21-25		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	Jan 15/2026	
405	Jan 15/2026	
406	Jan 15/2026	
407	May 15/2024	
408	BLANK	
25-21-30		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
25-21-30 (cont)		
404	Jan 15/2025	
405	Jan 15/2025	
406	Jan 15/2025	
407	Jan 15/2025	
408	Jan 15/2025	
25-21-31		
401	May 15/2026	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	Jan 15/2026	
406	May 15/2026	
407	Jan 15/2026	
408	BLANK	
25-21-34		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	Jan 15/2025	
405	Jan 15/2025	
406	Jan 15/2025	
407	Jan 15/2025	
408	Jan 15/2025	
25-21-35		
401	Sep 15/2024	
402	Sep 15/2024	
403	Sep 15/2024	
404	Jan 15/2026	
405	Jan 15/2026	
406	Sep 15/2024	
25-21-45		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
25-21-45 (cont)		
407	May 15/2024	
408	BLANK	
25-21-46		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	BLANK	
25-21-71		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	Jan 15/2025	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	Jan 15/2025	
411	Jan 15/2025	
412	Jan 15/2025	
413	Jan 15/2025	
414	Jan 15/2025	
415	Jan 15/2025	
416	Jan 15/2025	
417	Jan 15/2025	
418	Jan 15/2025	
419	Jan 15/2025	
420	Jan 15/2025	
421	Jan 15/2025	
422	Jan 15/2025	
R 423	Sep 15/2026	
R 424	Sep 15/2026	
O 425	Sep 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

Subject/Page	Date	COC
25-21-71 (cont)		
O 426	Sep 15/2026	
O 427	Sep 15/2026	
O 428	Sep 15/2026	
O 429	Sep 15/2026	
O 430	Sep 15/2026	
R 431	Sep 15/2026	
O 432	Sep 15/2026	
O 433	Sep 15/2026	
O 434	Sep 15/2026	
O 435	Sep 15/2026	
O 436	Sep 15/2026	
O 437	Sep 15/2026	
O 438	Sep 15/2026	
O 439	Sep 15/2026	
O 440	Sep 15/2026	
O 441	Sep 15/2026	
O 442	Sep 15/2026	
O 443	Sep 15/2026	
R 444	Sep 15/2026	
R 445	Sep 15/2026	
O 446	Sep 15/2026	
O 447	Sep 15/2026	
O 448	Sep 15/2026	
O 449	Sep 15/2026	
O 450	Sep 15/2026	
O 451	Sep 15/2026	
O 452	Sep 15/2026	
R 453	Sep 15/2026	
O 454	Sep 15/2026	
O 455	Sep 15/2026	
O 456	Sep 15/2026	
D 457	Sep 15/2026	
D 458	BLANK	
25-22-00		
401	Sep 15/2025	
402	May 15/2024	
25-22-00 (cont)		
403	May 15/2024	
404	May 15/2024	
405	Sep 15/2025	
406	Sep 15/2025	
25-22-00		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2025	
25-23-13		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	Sep 15/2024	
407	Sep 15/2024	
408	BLANK	
25-23-61		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2025	
407	May 15/2024	
408	May 15/2024	
409	May 15/2025	
410	May 15/2025	
411	May 15/2025	
412	Sep 15/2024	
413	Sep 15/2024	
414	Sep 15/2024	
415	May 15/2024	
416	May 15/2024	
417	May 15/2024	
418	BLANK	
25-24-05		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2025	
25-24-15		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	Sep 15/2024	
407	Sep 15/2024	
408	Sep 15/2024	
25-24-31		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	BLANK	
25-24-31		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	Jan 15/2025	
405	May 15/2024	
406	Jan 15/2025	
407	May 15/2024	
408	May 15/2024	
409	Sep 15/2025	
410	Sep 15/2025	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

Subject/Page	Date	COC
25-24-31 (cont)		
411	Sep 15/2025	
412	Sep 15/2025	
413	Sep 15/2025	
414	Sep 15/2025	
415	Sep 15/2025	
416	Sep 15/2025	
25-24-31		
601	May 15/2024	
602	BLANK	
25-24-70		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	BLANK	
25-25-12		
401	May 15/2024	
402	May 15/2024	
403	May 15/2026	
404	May 15/2026	
R 405	Sep 15/2026	
O 406	Sep 15/2026	
25-25-12		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
606	BLANK	
25-27-15		
401	May 15/2025	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	Sep 15/2024	
406	Sep 15/2024	
25-27-21		
401	May 15/2026	
402	May 15/2026	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
R 406	Sep 15/2026	
407	May 15/2026	
408	May 15/2026	
409	May 15/2026	
410	BLANK	
25-27-31		
401	Sep 15/2024	
402	Jan 15/2025	
403	May 15/2024	
404	Jan 15/2025	
405	May 15/2025	
406	BLANK	
25-29-07		
201	Sep 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	BLANK	
25-29-07		
401	Sep 15/2024	
402	May 15/2024	
403	May 15/2024	
404	Sep 15/2024	
405	May 15/2024	
406	BLANK	
25-31-00		
201	Jan 15/2025	
202	Jan 15/2025	
203	May 15/2024	
204	BLANK	
25-31-11		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	BLANK	
25-31-11		
401	May 15/2026	
402	May 15/2025	
403	May 15/2026	
404	Jan 15/2026	
405	May 15/2025	
406	Sep 15/2025	
407	May 15/2026	
408	May 15/2024	
409	May 15/2024	
410	May 15/2026	
411	Sep 15/2025	
R 412	Sep 15/2026	
R 413	Sep 15/2026	
O 414	Sep 15/2026	
O 415	Sep 15/2026	
416	BLANK	
25-31-21		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	BLANK	
25-31-21		
401	May 15/2024	
402	Jan 15/2026	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
R 410	Sep 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
25-31-21 (cont)		
O 411	Sep 15/2026	
O 412	Sep 15/2026	
R 413	Sep 15/2026	
O 414	Sep 15/2026	
25-31-41		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	BLANK	
25-31-41		
401	May 15/2024	
402	May 15/2026	
403	Jan 15/2025	
404	Jan 15/2026	
405	May 15/2025	
406	May 15/2025	
407	May 15/2025	
408	May 15/2025	
409	May 15/2025	
410	May 15/2025	
411	May 15/2025	
412	May 15/2026	
413	May 15/2025	
R 414	Sep 15/2026	
O 415	Sep 15/2026	
416	May 15/2025	
417	May 15/2025	
418	BLANK	
25-32-01		
401	Sep 15/2024	
402	Sep 15/2024	
403	Sep 15/2024	
404	BLANK	
25-32-01		
501	Sep 15/2024	
502	Sep 15/2024	
503	Sep 15/2024	
25-32-01 (cont)		
504	BLANK	
25-32-03		
R 401	Sep 15/2026	
R 402	Sep 15/2026	
R 403	Sep 15/2026	
404	BLANK	
25-32-03		
501	Sep 15/2024	
502	Sep 15/2024	
25-40-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
25-40-01		
R 401	Sep 15/2026	
R 402	Sep 15/2026	
403	May 15/2024	
404	May 15/2024	
405	Jan 15/2026	
406	BLANK	
25-40-08		
R 601	Sep 15/2026	
O 602	Sep 15/2026	
603	May 15/2024	
604	BLANK	
25-40-11		
R 401	Sep 15/2026	
O 402	Sep 15/2026	
O 403	Sep 15/2026	
R 404	Sep 15/2026	
R 405	Sep 15/2026	
R 406	Sep 15/2026	
R 407	Sep 15/2026	
408	May 15/2026	
25-40-11 (cont)		
R 409	Sep 15/2026	
R 410	Sep 15/2026	
R 411	Sep 15/2026	
412	Jan 15/2026	
413	Jan 15/2026	
414	Jan 15/2026	
25-40-14		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	Jan 15/2026	
409	Jan 15/2026	
410	Jan 15/2026	
411	Jan 15/2026	
412	Jan 15/2026	
413	Jan 15/2026	
414	Jan 15/2026	
25-40-15		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	Jan 15/2026	
407	Jan 15/2026	
408	Jan 15/2026	
409	Jan 15/2026	
410	Jan 15/2026	
411	Jan 15/2026	
412	BLANK	
25-61-10		
R 201	Sep 15/2026	
202	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Subject/Page	Date	COC
25-61-10 (cont)		
203	May 15/2024	
R 204	Sep 15/2026	
O 205	Sep 15/2026	
O 206	Sep 15/2026	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
R 210	Sep 15/2026	
O 211	Sep 15/2026	
R 212	Sep 15/2026	
213	May 15/2024	
214	BLANK	
25-61-13		
401	May 15/2026	
402	May 15/2024	
403	May 15/2024	
404	May 15/2026	
405	May 15/2024	
406	BLANK	
25-64-00		
201	Jan 15/2025	
202	Jan 15/2025	
203	Sep 15/2025	
R 204	Sep 15/2026	
O 205	Sep 15/2026	
206	May 15/2024	
207	Sep 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
25-64-00		
R 401	Sep 15/2026	
R 402	Sep 15/2026	
403	Jan 15/2025	
404	Jan 15/2025	
405	Jan 15/2025	
406	Jan 15/2025	
25-64-00 (cont)		
407	Jan 15/2025	
R 408	Sep 15/2026	
R 409	Sep 15/2026	
410	BLANK	
25-64-00		
501	Jan 15/2025	
502	May 15/2025	
503	Sep 15/2025	
504	Jan 15/2025	
505	Jan 15/2025	
506	Jan 15/2025	
507	Jan 15/2025	
508	Jan 15/2025	
25-66-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	BLANK	
25-66-00		
501	Jan 15/2026	
502	Jan 15/2026	
503	May 15/2024	
504	May 15/2024	
25-66-01		
401	May 15/2024	
402	Sep 15/2025	
403	Sep 15/2025	
404	Jan 15/2025	
405	Jan 15/2025	
406	Jan 15/2025	
407	Sep 15/2025	
408	Jan 15/2025	
409	May 15/2026	
25-66-01 (cont)		
410	Jan 15/2025	
411	Jan 15/2025	
R 412	Sep 15/2026	
413	Sep 15/2025	
R 414	Sep 15/2026	
R 415	Sep 15/2026	
416	Sep 15/2025	
417	Sep 15/2025	
418	Sep 15/2025	
419	Sep 15/2025	
420	Sep 15/2025	
421	Sep 15/2025	
422	Sep 15/2025	
423	Sep 15/2025	
424	May 15/2025	
25-66-01		
601	May 15/2024	
602	May 15/2024	
603	Jan 15/2026	
604	May 15/2024	
605	Jan 15/2026	
606	May 15/2024	
25-66-02		
201	May 15/2024	
202	Sep 15/2024	
203	Sep 15/2024	
204	Sep 15/2024	
25-80-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

Subject/Page	Date	COC
25-80-00 (cont)		
210	BLANK	
25-80-00		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
412	Jan 15/2026	
413	May 15/2024	
414	May 15/2024	
25-80-00		
801	Sep 15/2024	
802	Jan 15/2026	
803	May 15/2024	
804	May 15/2024	
805	May 15/2024	
806	Jan 15/2026	
807	May 15/2024	
808	Jan 15/2026	
809	May 15/2024	
810	May 15/2024	
811	May 15/2024	
812	Jan 15/2026	
813	May 15/2024	
814	May 15/2024	
815	May 15/2024	
816	May 15/2025	
817	May 15/2025	
818	May 15/2025	
819	May 15/2025	
820	May 15/2025	
25-80-00 (cont)		
821	May 15/2025	
822	May 15/2025	
823	May 15/2024	
824	May 15/2024	
825	May 15/2024	
826	May 15/2024	
827	May 15/2024	
828	May 15/2024	
829	May 15/2024	
830	May 15/2024	
831	May 15/2024	
832	May 15/2024	
833	May 15/2024	
834	May 15/2024	
835	May 15/2024	
836	Jan 15/2026	
837	May 15/2025	
838	May 15/2025	
839	May 15/2025	
840	May 15/2025	
841	May 15/2025	
842	May 15/2025	

Subject/Page	Date	COC

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

25-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EQUIPMENT/FURNISHINGS - CLEANING/PAINTING	25-00-00		701	PTF ALL
Equipment/Furnishings - Cleaning TASK 25-00-00-100-801			701	PTF ALL
Equipment/Furnishings - Disinfecting TASK 25-00-00-100-803			713	PTF ALL
Equipment/Furnishings - Painting TASK 25-00-00-370-801			717	PTF ALL
EQUIPMENT/FURNISHINGS - REPAIRS	25-00-00		801	PTF ALL
Crushed-Core and Sandwich Panel Repair TASK 25-00-00-300-801			801	PTF ALL
Decorative Surface Repair TASK 25-00-00-300-802			806	PTF ALL
Decorative Laminate Removal/Installation TASK 25-00-00-900-801			812	PTF ALL
Repair for Nomex Honeycomb Sandwich Panels with a Decorative Cover TASK 25-00-00-300-803			819	PTF ALL
Repair for Tedlar Covers of Aluminum Laminates TASK 25-00-00-300-804			823	PTF ALL
Perforated Panel Repair TASK 25-00-00-300-805			824	PTF ALL
Repair for Polycarbonate (Lexan), Ultem, and Declar Plastics TASK 25-00-00-340-801			828	PTF ALL
Repair Urethane Foam TASK 25-00-00-350-801			831	PTF ALL
Repair Aluminum Trim TASK 25-00-00-350-802			833	PTF ALL
EQUIPMENT/FURNISHINGS - DDG MAINTENANCE PROCEDURES	25-00-00		901	PTF ALL
DDG 25-11-01 Flight Crew Seats Inoperative - Preparation TASK 25-00-00-040-804			901	PTF ALL

25-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
DDG 25-11-01 Flight Crew Seats Inoperative - Restoration TASK 25-00-00-440-804			902	PTF ALL
DDG 25-22-01 Passenger Seats Inoperative - Preparation TASK 25-00-00-040-805			903	PTF ALL
DDG 25-22-01 Passenger Seats Inoperative - Restoration TASK 25-00-00-440-805			904	PTF ALL
DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Preparation TASK 25-00-00-040-806			904	PTF ALL
DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Restoration TASK 25-00-00-440-806			905	PTF ALL
DDG 25-28-01 Storage Bins/Cabin, Galley and Lavatory Storage Compartments/Closets Inoperative - Preparation TASK 25-00-00-040-807			905	PTF ALL
DDG 25-28-01 Storage Bins/Cabin, Galley and Lavatory Storage Compartments/Closets Inoperative - Restoration TASK 25-00-00-440-807			906	PTF ALL
DDG 25-31-01 Galley/Cabin Waste Receptacles Access Doors/Covers Inoperative - Preparation TASK 25-00-00-040-808			906	PTF ALL
DDG 25-31-01 Galley/Cabin Waste Receptacles Access Doors/Covers Inoperative - Restoration TASK 25-00-00-440-808			906	PTF ALL
DDG 25-40-02 Lavatory Waste Container Flapper/Access Doors Inoperative - Preparation TASK 25-00-00-040-809			907	PTF ALL
DDG 25-40-02 Lavatory Waste Container Flapper/Access Doors Inoperative - Restoration TASK 25-00-00-440-809			907	PTF ALL
DDG 25-40-03 Interior Lavatory Door Ashtrays Inoperative - Preparation TASK 25-00-00-040-811			908	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
DDG 25-40-03 Interior Lavatory Door Ashtrays Inoperative - Restoration TASK 25-00-00-440-811			908	PTF ALL
DDG 25-66-01 Escape Slides Inoperative - Preparation TASK 25-00-00-040-812			908	PTF ALL
DDG 25-66-01 Escape Slides Inoperative - Restoration TASK 25-00-00-440-812			909	PTF ALL
FLIGHT COMPARTMENT SEATS - MAINTENANCE PRACTICES	25-11-00		201	PTF ALL
Captain, First Officer, and Observer Seat Harness Detailed Visual Inspection TASK 25-11-00-200-801			201	PTF ALL
Captain, First Officer, and Observer Seat Harness and Inertia Reel Operational Check TASK 25-11-00-200-802			201	PTF ALL
CAPTAIN AND FIRST OFFICER SEAT - REMOVAL/INSTALLATION	25-11-01		401	PTF ALL
Captain and First Officer Seat Removal TASK 25-11-01-000-801			401	PTF ALL
Captain and First Officer Seat Installation TASK 25-11-01-400-801			405	PTF ALL
CAPTAIN AND FIRST OFFICER SEAT - INSPECTION/CHECK	25-11-01		601	PTF ALL
Captain or First Officer Seat Track and Locking Mechanism - Detailed Visual Inspection TASK 25-11-01-200-801			601	PTF ALL
OBSERVER SEAT - REMOVAL/INSTALLATION	25-11-02		401	PTF ALL
First Observer Seat Removal TASK 25-11-02-000-801			401	PTF ALL
First Observer Seat Installation TASK 25-11-02-400-801			404	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
FLIGHT COMPARTMENT STOWAGE BOX - REMOVAL/INSTALLATION	25-11-03		401	PTF ALL
Log Book Holder and Stowage Box Removal TASK 25-11-03-000-801			401	PTF ALL
Log Book Holder and Stowage Box Installation TASK 25-11-03-400-801			404	PTF ALL
Stowage Box with Retainer Removal TASK 25-11-03-000-803			404	PTF ALL
Stowage Box with Retainer Installation TASK 25-11-03-400-803			408	PTF ALL
FLIGHT COMPARTMENT FLOOR COVERING - REMOVAL/INSTALLATION	25-11-04		401	PTF ALL
Flight Compartment Floor Covering Removal TASK 25-11-04-000-801			401	PTF ALL
Flight Compartment Floor Covering Installation TASK 25-11-04-400-801			403	PTF ALL
FLIGHT COMPARTMENT SEAT TRACKS - INSPECTION/CHECK	25-11-11		601	PTF ALL
Seat Track Wear - Inspection TASK 25-11-11-200-801			601	PTF ALL
Flight Compartment Seat Tracks - Installation and Alignment TASK 25-11-11-400-801			605	PTF ALL
FLIGHT COMPARTMENT PANELS - MAINTENANCE PRACTICES	25-11-21		201	PTF ALL
Flight Compartment Forward Ceiling Panel Removal TASK 25-11-21-000-801			201	PTF ALL
Flight Compartment Forward Ceiling Panel Installation TASK 25-11-21-400-801			218	PTF ALL
Flight Compartment Dripshield Removal TASK 25-11-21-000-802			222	PTF ALL
Flight Compartment Dripshield Installation TASK 25-11-21-400-802			228	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Flight Compartment Sunvisor Adjustment and Test TASK 25-11-21-700-801			230	PTF ALL
Flight Compartment Aft Ceiling Panel Removal TASK 25-11-21-000-803			233	PTF ALL
Flight Compartment Aft Ceiling Panel Installation TASK 25-11-21-400-803			235	PTF ALL
Roller Sunshade Removal TASK 25-11-21-000-805			236	PTF ALL
Roller Sunshade Installation TASK 25-11-21-400-805			239	PTF ALL
Flight Compartment No.2 Sliding Window Lining Removal TASK 25-11-21-000-807			240	PTF ALL
Flight Compartment No.2 Sliding Window Lining Installation TASK 25-11-21-400-807			245	PTF ALL
FLIGHT COMPARTMENT PANELS - INSPECTION/CHECK	25-11-21		601	PTF ALL
Inspection Access - P18 Panel TASK 25-11-21-200-801			601	PTF ALL
Inspection Access - P5 Panel TASK 25-11-21-200-802			609	PTF ALL
FLIGHT COMPARTMENT FORWARD SIDE PANELS - REMOVAL/INSTALLATION	25-11-22		401	PTF ALL
Flight Compartment Forward Side Panel Removal TASK 25-11-22-000-801			401	PTF ALL
Flight Compartment Forward Side Panel Installation TASK 25-11-22-400-801			408	PTF ALL
CLOSEOUT SEAL - REMOVAL/INSTALLATION	25-21-01		401	PTF ALL
Closeout Seal Removal TASK 25-21-01-000-801			401	PTF ALL
Closeout Seal Installation TASK 25-21-01-400-801			404	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Closeout Seal Reinstallation TASK 25-21-01-400-802			405	PTF ALL
WINDOW SHADE AND REVEAL ASSEMBLY - REMOVAL/INSTALLATION	25-21-12		401	PTF ALL
Snap In Window Shade and Reveal Assembly Removal TASK 25-21-12-000-801			401	PTF ALL
Snap In Window Shade and Reveal Assembly Installation TASK 25-21-12-400-802			404	PTF ALL
Emergency Exit Door Snap In Window Shade and Reveal Assembly Removal TASK 25-21-12-000-803			405	PTF ALL
Emergency Exit Door Snap In Window Shade and Reveal Assembly Installation TASK 25-21-12-400-804			408	PTF ALL
EMERGENCY EXIT DOORWAY LINING - REMOVAL/INSTALLATION	25-21-20		401	PTF ALL
Emergency Exit Doorway Lining Removal TASK 25-21-20-000-801			401	PTF ALL
Emergency Exit Doorway Lining Installation TASK 25-21-20-400-801			407	PTF ALL
AFT DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION	25-21-24		401	PTF ALL
Aft Door Doorway Header Panel Removal TASK 25-21-24-000-801			401	PTF ALL
Aft Door Doorway Header Panel Installation TASK 25-21-24-400-801			404	PTF ALL
AFT ENTRY AND AFT SERVICE DOORWAYS SIDEWALL LINING PANELS - REMOVAL/INSTALLATION	25-21-25		401	PTF ALL
Aft Entry and Service Doorways Sidewall Lining Panel - Removal TASK 25-21-25-020-801			401	PTF ALL
Aft Entry and Service Doorways Sidewall Lining Panel - Installation TASK 25-21-25-420-801			405	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
FORWARD ENTRY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION	25-21-30		401	PTF ALL
Forward Entry Door Doorway Header Panel Removal TASK 25-21-30-020-801			401	PTF ALL
Forward Entry Door Doorway Header Panel Installation TASK 25-21-30-420-801			406	PTF ALL
FORWARD ENTRY DOORWAY SIDEWALL LINING PANELS - REMOVAL/INSTALLATION	25-21-31		401	PTF ALL
Forward Entry Doorway Sidewall Lining Panel - Removal TASK 25-21-31-000-801			401	PTF ALL
Forward Entry Doorway Sidewall Lining Panel - Installation TASK 25-21-31-400-801			406	PTF ALL
FORWARD GALLEY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION	25-21-34		401	PTF ALL
Forward Galley Door Doorway Header Panel Removal TASK 25-21-34-000-801			401	PTF ALL
Forward Galley Door Doorway Header Panel Installation TASK 25-21-34-400-801			406	PTF ALL
FORWARD GALLEY DOORWAY SIDEWALL LINING PANELS - REMOVAL/INSTALLATION	25-21-35		401	PTF ALL
Forward Galley Doorway Sidewall Lining Panel - Removal TASK 25-21-35-020-801			401	PTF ALL
Forward Galley Doorway Sidewall Lining Panel - Installation TASK 25-21-35-420-801			405	PTF ALL
CEILING PANEL - REMOVAL/INSTALLATION	25-21-45		401	PTF ALL
Main Ceiling Panel - Removal TASK 25-21-45-000-801			401	PTF ALL
Main Ceiling Panel - Installation TASK 25-21-45-400-801			406	PTF ALL

25-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
SIDEWALL PANEL ASSEMBLY - REMOVAL/INSTALLATION	25-21-46		401	PTF ALL
Sidewall Panel - Removal TASK 25-21-46-000-801			401	PTF ALL
Sidewall Panel - Installation TASK 25-21-46-400-801			405	PTF ALL
LOWERED CEILING PANELS - REMOVAL/INSTALLATION	25-21-71		401	PTF ALL
Lowered Ceiling Removal TASK 25-21-71-000-801			401	PTF ALL
Lowered Ceiling Installation TASK 25-21-71-400-801			406	PTF ALL
Cove Bullnose Ceiling Panel Removal TASK 25-21-71-000-802			409	PTF ALL
Cove Bullnose Ceiling Panel Installation TASK 25-21-71-400-802			415	PTF ALL
Horseshoe Ceiling Panel Removal TASK 25-21-71-000-803			417	PTF ALL
Horseshoe Ceiling Panel Installation TASK 25-21-71-400-803			423	PTF ALL
Cove Horseshoe Ceiling Panel Removal TASK 25-21-71-000-804			425	PTF ALL
Cove Horseshoe Ceiling Panel Installation TASK 25-21-71-400-804			431	PTF ALL
Close Out Ceiling Panel Removal TASK 25-21-71-000-805			433	PTF ALL
Close Out Ceiling Panel Installation TASK 25-21-71-400-805			436	PTF ALL
Forward Entry Ceiling Panel Removal TASK 25-21-71-000-806			437	PTF ALL
Forward Entry Ceiling Panel Installation TASK 25-21-71-400-806			444	PTF ALL
Aft Entry Ceiling Panel Removal TASK 25-21-71-000-807			447	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Aft Entry Ceiling Panel Installation TASK 25-21-71-400-807			453	PTF ALL
PASSENGER SEATS - REMOVAL/INSTALLATION	25-22-00		401	PTF ALL
Passenger Seat Removal TASK 25-22-00-000-801			401	PTF ALL
Passenger Seat Installation TASK 25-22-00-400-801			405	PTF ALL
PASSENGER SEATS - INSPECTION/CHECK	25-22-00		601	PTF ALL
Passenger Seat Belt Check TASK 25-22-00-200-801			601	PTF ALL
Passenger Seat Recline Operational Check and Inspection TASK 25-22-00-710-801			601	PTF ALL
Passenger Seat Breakover Check at Emergency Exits TASK 25-22-00-710-802			602	PTF ALL
Passenger Seat Recline Restriction Check at Emergency Exits TASK 25-22-00-710-803			602	PTF ALL
Track-mounted Passenger Seat Check and Inspection TASK 25-22-00-200-802			604	PTF ALL
ATTENDANT AND LAVATORY SERVICE UNITS - REMOVAL/INSTALLATION	25-23-13		401	PTF ALL
Attendant/Lavatory Service Unit Removal TASK 25-23-13-000-801			401	PTF ALL
Attendant/Lavatory Service Unit Installation TASK 25-23-13-400-801			406	PTF ALL
PASSENGER SERVICE UNIT (PSU) - REMOVAL/INSTALLATION	25-23-61		401	PTF ALL
Passenger Service Unit - Removal TASK 25-23-61-000-801			401	PTF ALL
Passenger Service Unit - Installation TASK 25-23-61-400-801			409	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Fixed PSU Spacer Panel - Removal TASK 25-23-61-000-803			412	PTF ALL
Fixed PSU Spacer Panel - Installation TASK 25-23-61-400-803			412	PTF ALL
Adjustable PSU Spacer Panel - Removal TASK 25-23-61-000-804			413	PTF ALL
Adjustable PSU Spacer Panel - Installation TASK 25-23-61-400-804			413	PTF ALL
Passenger Cabin Temperature Sensor Panel - Removal TASK 25-23-61-000-802			414	PTF ALL
Passenger Cabin Temperature Sensor Panel - Installation TASK 25-23-61-400-802			416	PTF ALL
CEILING MOUNTED CURTAIN AND TRACK - REMOVAL/INSTALLATION	25-24-05		401	PTF ALL
Ceiling Mounted Curtain and Track Removal TASK 25-24-05-000-801			401	PTF ALL
Ceiling Mounted Curtain and Track Installation TASK 25-24-05-400-801			404	PTF ALL
PARTITIONS - REMOVAL/INSTALLATION	25-24-15		401	PTF ALL
Forward Windscreen with Stowage - Removal TASK 25-24-15-000-802			401	PTF ALL
Forward Windscreen with Stowage - Installation TASK 25-24-15-400-802			406	PTF ALL
OVERHEAD STOWAGE BIN - MAINTENANCE PRACTICES	25-24-31		201	PTF ALL
Bin Assist Mechanism Activation TASK 25-24-31-440-801			201	PTF ALL
Bin Assist Mechanism Removal TASK 25-24-31-000-805			203	PTF ALL
Bin Assist Mechanism Installation TASK 25-24-31-400-806			205	PTF ALL
Bin Assist Gas Spring Removal TASK 25-24-31-000-806			205	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Bin Assist Gas Spring Installation TASK 25-24-31-400-807			208	PTF ALL
Overhead Stowage Bin - Alternate Open Method TASK 25-24-31-820-801			208	PTF ALL
OVERHEAD STOWAGE BIN - REMOVAL/INSTALLATION	25-24-31		401	PTF ALL
Overhead Stowage Bin - Removal TASK 25-24-31-000-801			401	PTF ALL
Overhead Stowage Bin - Installation TASK 25-24-31-400-801			407	PTF ALL
Overhead Stowage Bin Module - Removal TASK 25-24-31-000-802			407	PTF ALL
Overhead Stowage Bin Module - Installation TASK 25-24-31-400-802			414	PTF ALL
OVERHEAD STOWAGE BIN - INSPECTION	25-24-31		601	PTF ALL
OVERHEAD STOWAGE BIN - GENERAL VISUAL INSPECTION TASK 25-24-31-210-801			601	PTF ALL
WALL-MOUNTED STOWAGE BOX - REMOVAL/INSTALLATION	25-24-70		401	PTF ALL
Wall-Mounted Stowage Box Removal TASK 25-24-70-000-801			401	PTF ALL
Wall-Mounted Stowage Box Installation TASK 25-24-70-400-801			403	PTF ALL
CABIN ATTENDANT SEAT - REMOVAL/INSTALLATION	25-25-12		401	PTF ALL
Cabin Attendant Seat Removal TASK 25-25-12-000-801			401	PTF ALL
Cabin Attendant Seat Installation TASK 25-25-12-400-801			405	PTF ALL
CABIN ATTENDANT SEAT - INSPECTION/CHECK	25-25-12		601	PTF ALL
Attendant Seat and Harness Attachment Examination TASK 25-25-12-200-801			601	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Attendant Seat - Seat Pan Check TASK 25-25-12-710-801			605	PTF ALL
Attendant Seat Harness - Inertia Reel Operational Check TASK 25-25-12-710-802			605	PTF ALL
CARPETS - REMOVAL/INSTALLATION	25-27-15		401	PTF ALL
Carpet Removal TASK 25-27-15-000-801			401	PTF ALL
Carpet - Installation TASK 25-27-15-400-801			405	PTF ALL
ENTRY AND SERVICE AREA FLOOR COVERING - REMOVAL/INSTALLATION	25-27-21		401	PTF ALL
Entry and Service Area Floor Covering - Removal TASK 25-27-21-000-801			401	PTF ALL
Entry and Service Area Floor Covering - Installation TASK 25-27-21-400-801			406	PTF ALL
RACEWAYS - REMOVAL/INSTALLATION	25-27-31		401	PTF ALL
Raceway - Removal TASK 25-27-31-000-801			401	PTF ALL
Raceway - Installation TASK 25-27-31-400-801			404	PTF ALL
SERVICE OUTLETS - MAINTENANCE PRACTICES	25-29-07		201	PTF ALL
Service Outlets - Deactivation TASK 25-29-07-040-801			201	PTF ALL
Service Outlets - Activation TASK 25-29-07-440-801			204	PTF ALL
SERVICE OUTLETS - REMOVAL/INSTALLATION	25-29-07		401	PTF ALL
Service Outlet - Removal TASK 25-29-07-000-801			401	PTF ALL
Service Outlet - Installation TASK 25-29-07-400-801			404	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
GALLEY WATER FILTERS - MAINTENANCE PRACTICES	25-31-00		201	PTF ALL
Galley Water Filter Replacement TASK 25-31-00-960-801			201	PTF ALL
GALLEY NO. 1 - MAINTENANCE PRACTICES	25-31-11		201	PTF ALL
Galley No. 1 - Deactivation TASK 25-31-11-040-801			201	PTF ALL
Galley No. 1 - Activation TASK 25-31-11-440-801			202	PTF ALL
GALLEY NO. 1 - REMOVAL/INSTALLATION	25-31-11		401	PTF ALL
Galley No. 1 - Removal TASK 25-31-11-000-801			401	PTF ALL
Galley No. 1 - Installation TASK 25-31-11-400-801			410	PTF ALL
GALLEY NO. 2 - MAINTENANCE PRACTICES	25-31-21		201	PTF ALL
Galley No. 2 - Deactivation TASK 25-31-21-040-801			201	PTF ALL
Galley No. 2 - Activation TASK 25-31-21-440-801			202	PTF ALL
GALLEY NO. 2 - REMOVAL/INSTALLATION	25-31-21		401	PTF ALL
Galley No. 2 - Removal TASK 25-31-21-000-801			401	PTF ALL
Galley No. 2 - Installation TASK 25-31-21-400-801			410	PTF ALL
GALLEY G4 - MAINTENANCE PRACTICES	25-31-41		201	PTF ALL
Galley No. 4 - Deactivation TASK 25-31-41-040-801			201	PTF ALL
Galley No. 4 - Activation TASK 25-31-41-440-801			202	PTF ALL
GALLEY G4 - REMOVAL/INSTALLATION	25-31-41		401	PTF ALL
Galley G4 Removal TASK 25-31-41-000-801			401	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Galley G4 Installation TASK 25-31-41-400-801			411	PTF ALL
COFFEE MAKER - REMOVAL/INSTALLATION	25-32-01		401	PTF ALL
Coffee Maker Removal TASK 25-32-01-000-801			401	PTF ALL
Coffee Maker Installation TASK 25-32-01-400-801			403	PTF ALL
COFFEE MAKER - ADJUSTMENT/TEST	25-32-01		501	PTF ALL
Coffee Maker - Operational Test TASK 25-32-01-710-801			501	PTF ALL
GALLEY OVEN - REMOVAL/INSTALLATION	25-32-03		401	PTF ALL
Convection Oven Removal TASK 25-32-03-000-801			401	PTF ALL
Convection Oven Installation TASK 25-32-03-400-801			403	PTF ALL
GALLEY OVEN - ADJUSTMENT/TEST	25-32-03		501	PTF ALL
Convection Oven - Operational Test TASK 25-32-03-710-802			501	PTF ALL
LAVATORIES - MAINTENANCE PRACTICES	25-40-00		201	PTF ALL
Water Heater Power Deactivation TASK 25-40-00-040-801			201	PTF ALL
Water Heater Power Activation TASK 25-40-00-440-801			201	PTF ALL
Lavatory Power Deactivation TASK 25-40-00-040-802			202	PTF ALL
Lavatory Power Activation TASK 25-40-00-440-802			204	PTF ALL
LAVATORY SEALANT - REMOVAL/INSTALLATION	25-40-01		401	PTF ALL
Lavatory Sealant - Installation TASK 25-40-01-400-801			401	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
LAVATORY WASTE COMPARTMENT - INSPECTION/CHECK	25-40-08		601	PTF ALL
Lavatory Waste Compartment Inspection TASK 25-40-08-200-801			601	PTF ALL
MODULAR LAVATORY A - REMOVAL/INSTALLATION	25-40-11		401	PTF ALL
Lavatory A Removal TASK 25-40-11-000-801			401	PTF ALL
Lavatory A Installation TASK 25-40-11-400-801			408	PTF ALL
MODULAR LAVATORY D - REMOVAL/INSTALLATION	25-40-14		401	PTF ALL
Lavatory D Removal TASK 25-40-14-000-801			401	PTF ALL
Lavatory D Installation TASK 25-40-14-400-801			408	PTF ALL
MODULAR LAVATORY E - REMOVAL/INSTALLATION	25-40-15		401	PTF ALL
Lavatory E Removal TASK 25-40-15-000-801			401	PTF ALL
Lavatory E Installation TASK 25-40-15-400-801			406	PTF ALL
ESCAPE ROPES AND LIFE LINES - MAINTENANCE PRACTICES	25-61-10		201	PTF ALL
Flight Compartment Escape Rope Removal TASK 25-61-10-000-801			201	PTF ALL
Flight Compartment Escape Rope Installation TASK 25-61-10-400-801			204	PTF ALL
Flight Compartment Escape Rope Inspection TASK 25-61-10-210-801			205	PTF ALL
Emergency Exit Door Life Line Removal TASK 25-61-10-000-802			206	PTF ALL
Emergency Exit Door Life Line Installation TASK 25-61-10-400-802			210	PTF ALL

25-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Emergency Exit Door Life Line Inspection TASK 25-61-10-710-801			211	PTF ALL
DOOR WARNING STRAP REEL - REMOVAL/INSTALLATION	25-61-13		401	PTF ALL
Door Warning Strap Reel Removal TASK 25-61-13-000-801			401	PTF ALL
Door Warning Strap Reel Installation TASK 25-61-13-400-801			404	PTF ALL
DETACHABLE EMERGENCY EQUIPMENT - MAINTENANCE PRACTICES	25-64-00		201	PTF ALL
Life Jacket Restoration TASK 25-64-00-900-801			201	PTF ALL
Megaphone Operational Test TASK 25-64-00-710-801			201	PTF ALL
Megaphone Battery Replacement TASK 25-64-00-900-803			203	PTF ALL
Portable Emergency Locator Transmitter Battery Replacement (If Installed) TASK 25-64-00-900-804			203	PTF ALL
Detachable Emergency Equipment Visual Check TASK 25-64-00-210-801			204	PTF ALL
Flashlight Check (With Flashing or Push To Test - LED Indicator) TASK 25-64-00-200-801			205	PTF ALL
Flashlight Battery Replacement (With Flashing or Push To Test - LED Indicator) TASK 25-64-00-900-805			207	PTF ALL
Smoke Hood (Protective Breathing Equipment) Inspection TASK 25-64-00-200-802			208	PTF ALL
Smoke Hood (Protective Breathing Equipment) Replacement TASK 25-64-00-900-806			209	PTF ALL
First Aid Kit Restoration TASK 25-64-00-900-807			209	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 25
EQUIPMENT/FURNISHINGS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Medical Kit Restoration TASK 25-64-00-900-808			209	PTF ALL
Portable Oxygen Cylinder Replacement TASK 25-64-00-900-810			210	PTF ALL
PORTABLE EMERGENCY LOCATOR TRANSMITTER - REMOVAL/INSTALLATION	25-64-00		401	PTF ALL
Portable Emergency Locator Transmitter - Removal TASK 25-64-00-000-801			401	PTF ALL
Portable Emergency Locator Transmitter - Installation TASK 25-64-00-400-801			408	PTF ALL
PORTABLE EMERGENCY LOCATOR TRANSMITTER - ADJUSTMENT/TEST	25-64-00		501	PTF ALL
Portable Emergency Locator Transmitter Operational Test TASK 25-64-00-710-802			501	PTF ALL
DOOR-MOUNTED ESCAPE SYSTEM - MAINTENANCE PRACTICES	25-66-00		201	PTF ALL
Escape System Restoration TASK 25-66-00-840-801			201	PTF ALL
Door-Mounted Escape System - Deactivation TASK 25-66-00-040-801			204	PTF ALL
Door-Mounted Escape System - Activation TASK 25-66-00-440-801			207	PTF ALL
DOOR-MOUNTED ESCAPE SYSTEM - ADJUSTMENT/TEST	25-66-00		501	PTF ALL
Escape System Operational Test TASK 25-66-00-710-801			501	PTF ALL
DOOR-MOUNTED ESCAPE SYSTEM - REMOVAL/INSTALLATION	25-66-01		401	PTF ALL
Escape Slide Pack and Cover Removal TASK 25-66-01-000-801			401	PTF ALL
Escape Slide Pack and Cover Installation TASK 25-66-01-400-801			411	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Escape Slide Pack Removal TASK 25-66-01-000-802			413	PTF ALL
Escape Slide Pack Installation TASK 25-66-01-400-802			415	PTF ALL
Escape Slide Pack Installation (Unscheduled) TASK 25-66-01-400-804			419	PTF ALL
Escape Slide Girt Bar Removal TASK 25-66-01-000-803			422	PTF ALL
Escape Slide Girt Bar Installation TASK 25-66-01-400-803			423	PTF ALL
DOOR-MOUNTED ESCAPE SYSTEM - INSPECTION/CHECK	25-66-01		601	PTF ALL
Escape Slide Pack Inflation Cylinder Check TASK 25-66-01-200-801			601	PTF ALL
Escape Slide Pack Check TASK 25-66-01-200-802			603	PTF ALL
FLOOR-MOUNTED ESCAPE SLIDE BRACKETS - MAINTENANCE PRACTICES	25-66-02		201	PTF ALL
Floor-Mounted Escape Slide Bracket Removal TASK 25-66-02-000-801			201	PTF ALL
Floor-Mounted Escape Slide Bracket Installation TASK 25-66-02-400-801			203	PTF ALL
INSULATION BLANKET - REMOVAL/INSTALLATION	25-80-00		401	PTF ALL
Insulation Blanket Removal TASK 25-80-00-000-801			401	PTF ALL
Insulation Blanket Installation TASK 25-80-00-400-801			411	PTF ALL
INSULATION BLANKET - MAINTENANCE PRACTICES	25-80-00		201	PTF ALL
Crown Antenna Installation - Insulation Blanket Access TASK 25-80-00-400-802			201	PTF ALL
Crown Hardware Installation - Insulation Blanket Protection TASK 25-80-00-400-803			207	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Cover Film Repairs TASK 25-80-00-300-801			207	PTF ALL
Cargo Bilge Antenna Installation - Insulation Blanket Access TASK 25-80-00-400-804			208	PTF ALL
INSULATION - REPAIRS	25-80-00		801	PTF ALL
Repair the Insulation Blanket with BMS8-377 Cover Material TASK 25-80-00-340-801			801	PTF ALL
Repair the Insulation Blanket with BMS8-370 Cover Material TASK 25-80-00-340-802			805	PTF ALL
Repair the Insulation Blanket that has BMS8-396 Fire Resistant Material TASK 25-80-00-340-803			807	PTF ALL
Repair the Insulation Blanket that has BMS8-380 Cover Material TASK 25-80-00-340-804			811	PTF ALL
Insulation Blanket Manufacturing (per Production Part Specifications) TASK 25-80-00-300-802			815	PTF ALL
Repair of Cargo Door Insulation Blankets TASK 25-80-00-340-805			835	PTF ALL
Insulation Blanket Manufacturing (per Universal Blanket Template) TASK 25-80-00-300-803			837	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EQUIPMENT/FURNISHINGS - CLEANING/PAINTING

1. General

A. This procedure contains these tasks:

(1) The cleaning of the airplane equipment and furnishings.

(2) The disinfecting of the airplane equipment and furnishings.

(3) The painting of the airplane equipment and furnishings.

NOTE: When cleaning areas of the aircraft where electrical system wiring and components are present, refer to ELECTRICAL WIRING INTERCONNECTION SYSTEM - CLEANING/PAINTING, PAGEBLOCK 20-60-02/701 and PROTECTION OF EWIS (EZAP) - MAINTENANCE PRACTICES, PAGEBLOCK 20-60-07/201 procedures.

TASK 25-00-00-100-801

2. Equipment/Furnishings - Cleaning

(Figure 701)

A. General

(1) Many of the decorative surfaces contain different materials. Some of these materials are:

(a) Tedlar

(b) Polycarbonate (Lexan)

(c) Fabrics

(d) Silicone

(e) Rubber

(f) Metal

(g) Ultem

(h) Declar

(2) Be careful not to get the clean surfaces dirty when cleaning adjacent surfaces.

B. References

Reference	Title
25-00-00-300-802	Decorative Surface Repair (P/B 801)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-2477	Tools - Vacuum Cleaner Set Part #: AVQ250-2 Supplier: U1761 Opt Part #: 02146A Supplier: 0A5X2 Opt Part #: 44SPEC Supplier: 0Y8U0 Opt Part #: 655406-7M Supplier: 0Y8U0 Opt Part #: C-39485-41 Supplier: 16893 Opt Part #: R80 Supplier: $0373 Opt Part #: WD80 Supplier: $0373
STD-123	Brush - Soft Bristle
STD-183	Cleaner - Vacuum

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description
STD-810	Spatula - Fillet Smoothing, Hardwood or Plastic
STD-1064	Scraper - Phenolic, Hard Resin
STD-3911	Brush - Bristle, Medium Nylon
STD-4048	Bottle - Hand Spray

D. Consumable Materials

Reference	Description	Specification
B00032	Cleaner - Glass - GLYST A-1859 (Use until stock depleted)	
B00033	Cleaner - Glass - Glasswax (Use until stock depleted)	
B00068	Alcohol - Denatured, Ethyl (Ethanol)	AMS 3002, MIL-E-51454 Type II
B00081	Solvent - Trichloroethylene	ASTM D4080
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
B00090	Solvent - Inhibited Trichloroethane 1,1,1	MIL-T-81533
B00093	Solvent - Tetrachloroethylene (Perchloroethylene)	ASTM D4081
B00094	Solvent - Toluene	A-A-59107
B00148	Solvent - Methyl Ethyl Ketone (MEK)	ASTM D740
B00334	Cleaner - Sodium Bicarbonate	ASTM D928, or commercially available product
B00460	Cleaner - Multi-Purpose - Winsol APC-120-WX	BAC5150
B00541	Cleaner - General Purpose Household Detergent	
B00634	Solvent - Stabilized Limonene Cleaner	BMS11-10 Type 1, 2, or 3
B00641	Cleaner - Aircraft (Interior And Exterior) - Turco 5948	
B00700	Polish - Aluminum, Met-All	
B00702	Cleaner - Acrylic Window - Dustless (An alternative is Static Stop)	BAC5038
B00703	Compound - Plastic Polish	P-P-560
B00710	Cleaner - Clear Plastic, Meguiar's Mirror Glaze 17 - (Formerly Meguiar's MGH-17)	
B50078	Solvent - Aliphatic Naphtha (For Organic Coatings)	TT-N-95 Type I (Supersedes BMS3-2 Type I)
B50079	Solvent - Aliphatic Naphtha (For Acrylic Plastics)	TT-N-95 Type II (Supersedes BMS3-2 Type II)
B50119	Solvent - Chlorinated	BAC5150
B50120	Solvent - Fluorocarbon	BAC5750
B50123	Cleaner - Glass	BAC5150

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
B50189	Polish - Clear Plastic, Meguiar's Mirror Glaze 10 - (Formerly Meguiar's MGH-10)	
B50225	Solvent - Citra-Safe (Deodorized)	BAC5750
B50226	Solvent - Citra-Safe	BAC5750
B50251	Cleaner - Miller-Stephenson MS-260 Safezone Cleaner For Plastic, Glass And Metal	
B50264	Detergent - General, Sanikleen, 10 percent	N/A
B50265	Detergent - Ultra Spic and Span	Commercially Available
B50266	Detergent - General	Commercially Available
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00110	Sponge - Silicone Rubber, Closed-Cell, General Purpose, Non-Solvent Use	BMS1-23
G00116	Sponge - Synthetic	
G00215	Brush - Soft Bristle Fiber	
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)
G02360	Tape - Textile Hook And Loop Fasteners Tape (Polypropylene Hook & Nylon Loop)	BMS8-285 Type V
G02414	Brush - Stainless Steel	
G50138	Cloth - Soft Cotton	
G50222	Brush - Tampico Fiber, Non-Metallic	

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Cleaning of the Equipment and Furnishings

SUBTASK 25-00-00-160-001

(1) Use these special tools and equipment:

(a) vacuum cleaner tool set, COM-2477.

SUBTASK 25-00-00-160-002

(2) Use these standard tools and equipment:

(a) hand spray bottle, STD-4048

(b) tampico fiber brush, G50222 - Stiff fiber, 0.5 in. (12.7 mm) long bristles, 1.125 ±0.875 in. (28.6 ±22.3 mm) wide (glue brushes or paint brushes with bristles cut to length).

(c) medium nylon bristle brush, STD-3911 - Medium fiber bristles, 4 in. (10 cm) wide

(d) brush, G02414 - Hand, solvent - resistant

(e) hard resin phenolic scraper, STD-1064

(f) cotton wiper, G00034

(g) hardwood or plastic fillet smoothing spatula, STD-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(h) sponge, G00116.

SUBTASK 25-00-00-110-001

(3) Use any of these detergents:

(a) Winsol APC-120-WX cleaner, B00460

(b) general detergent, B50264

(c) Spic and Span, B50265

(d) JB/B2, B50266.

SUBTASK 25-00-00-110-002

(4) Use any of these cleaners:

(a) GLYST A-1859 cleaner, B00032

(b) Glasswax cleaner, B00033

(c) Spic and Span, B50265

(d) sodium bicarbonate cleaner, B00334

(e) Dustless cleaner, B00702

(f) compound, B00703

(g) clear plastic cleaner, B00710

(h) general purpose household detergent cleaner, B00541

(i) glass cleaner, B50123

(j) clear plastic polish, B50189

(k) MS-260 cleaner, B50251

(l) general detergent, B50264.

SUBTASK 25-00-00-110-003

(5) Use any of these solvents:

(a) alcohol, B00068

(b) solvent, B00090

(c) solvent, B00081

(d) solvent, B00083

(e) solvent, B00093

(f) solvent, B00094

(g) solvent, B00148

(h) aliphatic naphtha, B50078

(i) aliphatic naphtha, B50079

(j) chlorinated solvent, B50119

(k) fluorocarbon solvent, B50120

(l) citra-safe solvent, B50225

(m) citra-safe solvent, B50226.

SUBTASK 25-00-00-110-004

(6) Use this metal polish:

(a) Met-All polish, B00700.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Prepare for the Cleaning

SUBTASK 25-00-00-160-003

(1) Use this recommended detergent mixture:

NOTE: If not specified, use a cleaner at the concentration provided by the supplier.

(a) Mix one part Winsol APC-120-WX cleaner, B00460, to 32 parts water (by volume).

H. Clean the Opaque Plastic and Painted Surfaces

SUBTASK 25-00-00-110-005

(1) Use foam and a vacuum cleaner, STD-183, to remove unwanted materials from perforated or acoustic surfaces.

(a) If you cannot use foam and a vacuum cleaner, use a moist soft cotton cloth, G50138, or a sponge, G00110.

NOTE: If the cloth is soaked, too much fluid will go through the perforations and openings.

SUBTASK 25-00-00-160-004

(2) To clean a small area on the surface, do the steps that follow:

NOTE: Do not rub solid colored Tedlar surfaces when they are dry. The surface is hard to clean if particles get pushed into the surface of the material.

(a) Lift the loose unwanted material with a cotton wiper, G00034.

1) Do not rub, spread, or push the unwanted material into the textured or perforated surfaces, joints, or seams.

(b) Apply general purpose household detergent cleaner, B00541, to the dirty area with a hand spray bottle, STD-4048, or moist sponge, G00116.

(c) Lightly rub the area with a cotton wiper, G00034.

1) For textured surfaces, remove the unwanted materials from recesses with a small fiber brush, G00215.

(d) Remove the general purpose household detergent cleaner, B00541, with a sponge, G00116, that is moist with water.

(e) Dry the area with a clean cotton wiper, G00034.

1) Rub the area in a straight line movement.

2) If the area stays dirty do the steps that follow:

WARNING DO NOT GET THE SOLVENT IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM IT. PUT ON GOGGLES AND GLOVES WHEN YOU USE IT. KEEP IT AWAY FROM SPARKS, FLAMES, AND HEAT. IT IS POISONOUS AND FLAMMABLE. THE SOLVENT CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

CAUTION DO NOT USE MORE SOLVENT THAN IS NECESSARY. DAMAGE TO THE SURFACE CAN OCCUR IF THE CONCENTRATION OF THE SOLUTION TO THE AREA IS HIGH.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(CAUTION PRECEDES)

CAUTION

USE ONLY FREON OR ALIPHATIC NAPHTHA TYPE II TO CLEAN PLASTICS. BUT DO NOT USE FREON IF THE PART IS PAINTED WITH A WATER-BASED PAINT. THE FREON WILL CAUSE DAMAGE TO THE PAINT. YOU CAN USE ALIPHATIC NAPHTHA FOR PAINTED SURFACES, BUT FIRST YOU MUST REMOVE THE PART FROM THE AIRPLANE.

a) Carefully rub the dirty area with a cotton wiper, G00034, that is moist with solvent, B00083, or Limonene solvent, B00634.

b) Do the steps again to remove the solvent with a detergent.

SUBTASK 25-00-00-160-005

(3) To clean all of the surface, do the steps that follow:

(a) Apply Turco 5948 cleaner, B00641, to the surface with a sponge, G00116, or a hand spray bottle, STD-4048.

(b) Let the Turco 5948 cleaner, B00641, stay on the surface for one-half to two minutes.

(c) Rub the surface with a cotton wiper, G00034, that is moist with clean water.

(d) Remove the Turco 5948 cleaner, B00641, with a clean cotton wiper, G00034, that is soaked with clean water.

(e) Dry the surface with a clean dry cotton wiper, G00034.

I. Clean Tedlar Covered Surfaces

SUBTASK 25-00-00-160-006

(1) To clean the Tedlar covered surface of a part while it is installed in the airplane, do these steps:

(a) Apply the Turco 5948 cleaner, B00641, with a soft bristle brush, STD-123.

1) Rub the surface in all directions with the soft bristle brush, STD-123.

(b) Remove the Turco 5948 cleaner, B00641, with a sponge, G00116, that is moist with clean water.

(c) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-160-007

(2) To clean the Tedlar coated surface of a part that is out of the airplane, do the steps that follow:

(a) Repair all the damaged parts (TASK 25-00-00-300-802).

(b) You can use the same method to clean the parts you would use if the parts were installed, or you can use the method that follows:

1) Remove or cover with Scotch Flatback Masking Tape 250, G00270, all the plastic and painted surfaces which are not resistant to solvent damage.

NOTE: These solvents will remove the paint from the edge of the part.

WARNING

DO NOT GET THE SOLVENT IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM IT. PUT ON GOGGLES AND GLOVES WHEN YOU USE IT. KEEP IT AWAY FROM SPARKS, FLAMES, AND HEAT. IT IS POISONOUS AND FLAMMABLE. THE SOLVENT CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

2) Clean the part with a clean cotton wiper, G00034, and one of these solvents:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

a) solvent, B00148

b) solvent, B00094

c) A 50%-50% mixture of solvent, B00148, and solvent, B00094.

d) alcohol, B00068

e) solvent, B00093, or solvent, B00090

f) aliphatic naphtha, B50078

g) aliphatic naphtha, B50079

h) chlorinated solvent, B50119

i) fluorocarbon solvent, B50120.

3) If you accidentally removed paint from a part when you used the solvent, do this task: Equipment/Furnishings - Painting, TASK 25-00-00-370-801.

J. Clean the Translucent and Transparent Plastic Surfaces (Does Not Include Windows)

SUBTASK 25-00-00-160-008

CAUTION

DO NOT RUB THE SURFACES WITH A DRY CLOTH. YOU WILL CAUSE SCRATCHES AND STATIC ELECTRICITY. DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Rub the surface lightly with a clean cotton wiper, G00034, that is soaked with mixed detergent.

SUBTASK 25-00-00-160-009

(2) Remove the mixed detergent with a clean cotton wiper, G00034, that is moist with water.

SUBTASK 25-00-00-160-010

(3) Dry the surface with a clean cotton wiper, G00034.

(a) Do not rub the plastic after it is dry.

SUBTASK 25-00-00-160-011

(4) Remove a thin dust layer or electrostatic charge with a clean cotton wiper, G00034, that is moist with water.

K. Clean the Mirrors

SUBTASK 25-00-00-160-012

(1) To clean the glass mirrors, do these steps:

(a) Use a razor blade to remove dry paint and other unwanted materials that are not easy to rub off.

(b) Use GLYST A-1859 cleaner, B00032, Glasswax cleaner, B00033, glass cleaner, B50123, or MS-260 cleaner, B50251, to clean the glass.

NOTE: Obey the manufacture's CAUTIONS and instructions.

SUBTASK 25-00-00-160-013

CAUTION

DO NOT RUB THE SURFACES WITH A DRY CLOTH. YOU WILL CAUSE SCRATCHES AND STATIC ELECTRICITY. DAMAGE TO EQUIPMENT CAN OCCUR.

(2) To clean the plastic mirrors, do these steps:

(a) Remove the loose unwanted materials with a clean cotton wiper, G00034.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Rub the stains with a cotton wiper, G00034, that is moist with general purpose household detergent cleaner, B00541.

(c) Remove the general purpose household detergent cleaner, B00541, with a cotton wiper, G00034, that is moist with water.

(d) Rub all of the surface very lightly with a cotton wiper, G00034, that is moist with water to remove the sharp particles.

(e) Polish the plastic with a clean cotton wiper, G00034, and clear plastic cleaner, B00710, or clear plastic polish, B50189.

L. Clean the Fabrics

SUBTASK 25-00-00-160-014

(1) Clean the carpets, the seat upholstery, and equivalent equipment as follows:

(a) To clean a small area on the surface, do these steps:

NOTE: Remove stains as soon as possible. It is not possible to remove some materials from the fabric if you do not remove them immediately.

1) To remove tea, coffee, fruit juices, wines, fruit, catsup, soft and mixed drinks, chocolate, syrups, perfumes, vomit, and urine, do these steps:

CAUTION DO NOT USE TOO MUCH HAND PRESSURE WHEN YOU RUB THE FABRIC WITH THE PLASTIC SCRAPER. TOO MUCH PRESSURE CAN DAMAGE THE FABRIC.

a) Carefully rub the area with a hard resin phenolic scraper, STD-1064, to loosen the unwanted material from the fabric.

b) Apply a mixed detergent to the dirty area.

c) Rub the area with a hard resin phenolic scraper, STD-1064.

d) Use a vacuum cleaner to remove the detergent and the unwanted materials.

<1> If it is necessary, use a soft cloth to remove the remaining moisture.

2) If there is an odor, do these steps:

a) Mix one teaspoon of bicarbonate of soda in six ounces of water.

b) Apply the mixture to the area.

c) Rub the area with a hard resin phenolic scraper, STD-1064.

d) Remove the moisture with a cotton wiper, G00034.

3) To remove fresh paints, greases, lipsticks, permanent inks, oils, jet fuel, hydraulic fluid, powdered graphite, and powdered aluminum, do these steps:

a) Remove the loose unwanted material as soon as possible with a cotton wiper, G00034.

b) Apply a mixed detergent to the area.

c) Let it soak for 30 seconds.

d) Apply an additional quantity of the mixed detergent to the area.

e) Carefully rub the area with the blunt end of hard resin phenolic scraper, STD-1064, to lift the unwanted material into the detergent.

f) Use a vacuum cleaner tool set, COM-2477, to remove the detergent and the unwanted material.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

g) If it is necessary, use a cotton wiper, G00034, to remove all the remaining moisture.

h) If the area is not fully clean, do the above steps again until the area is fully clean.

i) Use a soft bristle brush, STD-123, to straighten and lift the fabric pile.

4) To remove adhesives, sealants, paints, asphalt, and gum, do these steps:

a) Use a vacuum cleaner tool set, COM-2477, to remove all the loose unwanted material from the fabric.

b) Put a cover on the plastic and painted surfaces adjacent to the dirty area.

<1> Use a hand spray bottle, STD-4048, with a nozzle to apply chlorinated solvent, B50119, to the dirty area.

NOTE: Use only the minimum quantity of chlorinated solvent necessary to remove the unwanted material. Chlorinated solvent on an uncovered surface can make a new stain.

c) Let the solution soak for up to 30 seconds.

d) Carefully rub the fabric with a hard resin phenolic scraper, STD-1064, to remove unwanted materials.

e) Remove the unwanted materials with a cotton wiper, G00034.

f) Do the above steps again until the area is fully clean.

g) Immediately after the area looks fully clean, clean the area with a mixed detergent to remove the solvent.

NOTE: Refer to the instructions given before for the use of detergents on small areas.

(b) To do regular cleaning, do these steps:

1) Use a vacuum cleaner tool set, COM-2477, to remove loose materials from the fabric.

2) Use one of the recommended detergent mixtures.

CAUTION

APPLY ONLY THE FOAM FROM THE MIXTURE. THE LIQUID WILL SOAK INTO THE FABRIC AND WILL CAUSE DAMAGE.

3) Carefully rub the foam from the mixture into the fabric with a sponge, G00116, or a medium-fiber soft bristle brush, STD-123.

NOTE: Clean only a small area at a time until you are done.

a) Use a circular motion and make it to overlap with each motion.

4) Use a brush, G02414, to lift the fabric pile.

NOTE: Carefully rub the fabric in one direction only or the fabric will not look satisfactory.

5) When the fabric is fully dry use a vacuum cleaner tool set, COM-2477, to remove the remaining unwanted materials.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) To clean seat covers and drapes, do these steps:

NOTE: Fabrics are treated with fire retardant. If you do the instructions that follow, the fire retardant will stay satisfactory. If there are instructions for the fabric from the manufacturer or supplier, obey their instructions.

1) Attach the hook and loop fastener tape, G02360, together to prevent contamination or damage to the hook and pile.

2) To remove tea, coffee, liqueurs, fruit juice, chocolate, syrup, perfume, vomit, urine, do these steps:

a) Make the unwanted material soft with a mixed detergent and steam.

b) Remove the moisture and the unwanted material with a cotton wiper, G00034.

3) Turn the seat covers inside out (turn the inner surface to the outer side).

CAUTION YOU MUST USE COLD WATER. DO NOT USE MORE THAN 8% WATER IN THE MIXTURE. IF YOU ADD TOO MUCH WATER OR NOT COLD WATER, THE FABRIC WILL BECOME SMALLER.

4) Mix the solvent, B00093, chlorinated solvent, B50119, or fluorocarbon solvent, B50120, and mix detergent and cold waters:

a) Obey the proportion information given by the manufacturer or the supplier of the detergent and the solvent.

<1> Add cold water, up to 8% to the mixture.

b) Use a cleaning drum temperature that is not hotter than 72°F (22°C).

5) Dry the fabric at a maximum temperature (air into the drum) of 130°F (54°C).

6) Remove the remaining stains with a detergent and steam.

7) If it is necessary, remove the hook and loop fastener tape, G02360.

M. Clean the Leather or Naugahyde

SUBTASK 25-00-00-160-015

(1) To clean a small area on the surface, do these steps:

(a) Remove water based stains with a mixed detergent.

NOTE: Refer to the paragraph below for regular cleaning instructions.

WARNING DO NOT GET THE SOLVENT IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM IT. PUT ON GOGGLES AND GLOVES WHEN YOU USE IT. KEEP IT AWAY FROM SPARKS, FLAMES, AND HEAT. IT IS POISONOUS AND FLAMMABLE. THE SOLVENT CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

CAUTION DO NOT USE MORE FREON THAN IS NECESSARY. MAKE SURE THAT YOU PREVENT THE CONTAMINATION OF THE ADJACENT AREAS BY THE FREON. IF YOU USE TOO MUCH FREON, DAMAGE TO THE PARTS WILL OCCUR.

(b) Rub oil-based stains with a cotton wiper, G00034, that is moist with solvent, B00081.

(c) Then, use a mixed detergent to clean the area.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-160-016

(2) To clean by the usual procedure do these steps:

(a) Mix one part of Winsol APC-120-WX cleaner, B00460, to 32 parts of water.

(b) Apply only the foam to the leather or naugahyde with a clean cotton wiper, G00034.

1) Rub carefully in a circular movement.

(c) Remove the detergent with a clean cotton wiper, G00034, that is moist with water.

(d) Rub the surface with a dry soft cotton wiper, G00034.

N. Clean the Painted, Plastic or Rubber Floor Coverings

SUBTASK 25-00-00-160-017

(1) Use a vacuum cleaner tool set, COM-2477, to remove loose and unwanted materials.

SUBTASK 25-00-00-160-018

(2) Apply mixed detergent to the floor covering.

SUBTASK 25-00-00-160-019

(3) If it is necessary, rub the surface with a medium nylon bristle brush, STD-3911.

SUBTASK 25-00-00-160-020

(4) Flush the surface with clean water.

SUBTASK 25-00-00-160-021

(5) Remove the loose or unwanted materials with a clean cotton wiper, G00034.

SUBTASK 25-00-00-160-022

(6) Do the steps again until the surface is fully clean.

O. Clean the Silicone Seals

SUBTASK 25-00-00-110-006

(1) Apply mixed detergent with a hand spray bottle, STD-4048, and sponge, G00116.

SUBTASK 25-00-00-160-023

(2) Let it soak on the seal for one-half to two minutes.

SUBTASK 25-00-00-160-024

(3) Rub the surface of the seal with a cotton wiper, G00034, that is moist with water.

SUBTASK 25-00-00-160-025

(4) Remove the detergent from the seal with a clean cotton wiper, G00034, that is soaked with water.

SUBTASK 25-00-00-160-026

(5) Dry the seal with a clean dry cotton wiper, G00034.

P. Clean the Bare Metal Surfaces

SUBTASK 25-00-00-160-027

CAUTION

USE ONLY CLEAN OR CHLORINATED WATER WHEN YOU CLEAN THE FRONT COVERS OF THE OVENS. DETERGENTS WILL CAUSE DETERIORATION OF THE SURFACE FINISH.

(1) To clean a small area of an aluminum surface, do these steps:

(a) Apply mixed detergent to the surface with a sponge, G00116, or a hand spray bottle, STD-4048.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Let it soak on the surface for one-half to two minutes.

(c) Rub the surface with a clean cotton wiper, G00034, that is soaked with water.

(d) Remove the detergent with a sponge, G00116, that is moist with water.

WARNING DO NOT GET THE SOLVENT IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM IT. PUT ON GOGGLES AND GLOVES WHEN YOU USE IT. KEEP IT AWAY FROM SPARKS, FLAMES, AND HEAT. IT IS POISONOUS AND FLAMMABLE. THE SOLVENT CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

CAUTION DO NOT USE MORE FREON THAN IS NECESSARY. MAKE SURE THAT YOU PREVENT THE CONTAMINATION OF THE ADJACENT AREAS BY THE FREON. IF YOU USE TOO MUCH FREON, DAMAGE TO THE PARTS WILL OCCUR.

(e) Dry the surface with a clean cotton wiper, G00034.

NOTE: Rub the surface in a straight line movement. If the area is still dirty, do the steps that follow:

1) Rub the area with a cotton wiper, G00034, that is moist with solvent, B00081.

2) After the surface looks fully clean, remove the solvent, B00081, with a mixed detergent.

SUBTASK 25-00-00-160-028

(2) To clean aluminum with a usual procedure do these steps:

(a) Apply mixed detergent to the surface with a sponge, G00116, or a hand spray bottle, STD-4048.

(b) Let it soak on the surface for one-half to two minutes.

(c) Rub the surface with a cotton wiper, G00034, that is moist with water.

(d) Remove the detergent with a clean cotton wiper, G00034, that is soaked with water.

(e) Dry the surface with a clean dry cotton wiper, G00034.

SUBTASK 25-00-00-160-029

(3) To clean stainless steel, do these steps:

(a) Do the procedure given for opaque plastic or painted surfaces to clean the stainless steel; then polish the stainless steel with the following steps:

1) Use a cotton wiper, G00034, to apply polish to a small area.

NOTE: Use Met-All polish, B00700, for highly-polished surfaces and satin finishes.

2) Rub the area until the polish becomes black.

3) Rub the surface with a clean, dry cotton wiper, G00034, until the rubbed area looks bright and continuous.

4) Remove the remaining polish with a mixed detergent.

Q. Clean the Air Grill Panels

SUBTASK 25-00-00-160-030

(1) Use a vacuum cleaner tool set, COM-2477, to clean the air grill panels.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-100-803

3. Equipment/Furnishings - Disinfecting

A. General

(1) This procedure is to provide guidance on disinfectant materials for the use on surfaces of the aircraft interior and exterior, and cargo compartment.

NOTE: Cleaning works by using soap (or detergent) and water to physically remove germs from surfaces. Disinfecting works by using chemicals to kill germs on surfaces or objects and requires contact/dwell time.

(2) Repeated disinfection may cause staining, discoloration and/or other visual defects to surfaces.

(3) When using disinfectants on the aircraft, operators should consider the guidance below, the Environmental Protection Agency (EPA) List N (https://www.epa.gov/), and the local public health authority for applicable disinfectants and contact/dwell times.

(4) Boeing is not qualified to specify the disinfectant materials that may be effective for a given disease or the specific disinfection frequency. We must refer operators to the World Health Organization (WHO), the Centers for Disease Control and Prevention (CDC), other public health authorities, or International Air Transport Association (IATA) to provide this type of information.

(5) For the most current guidance on disinfectant materials, refer to the latest communication from Boeing Customer Support.

B. Tools/Equipment

Reference	Description
STD-6435	Respirator - Particulate (Meets NIOSH 42 CFR 84 Class N95, EN149 Class FFP2, or Better)
STD-6437	Goggles - Safety, Non Vented
STD-6439	Coveralls - Hooded

C. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
B50073	Alcohol - Isopropyl	ASTM D 770
B50280	Cleaner - Disinfectant - Zip-Chem Products Calla 1452	BAC5150
B50363	Cleaner - Disinfectant - Zip-Chem Products AeroDis 7127	BAC5150
B50364	Cleaner - Disinfectant - Matrix #3	BAC5150
B50367	Cleaner - Disinfectant - Sani Cide EX3	BAC5150
B50369	Cleaner - Disinfectant - mPerial	
B50375	Cleaner - Disinfectant - Bioesque Botanical	
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00624	Bag - Plastic, General Purpose	
G01043	Cloth - Lint-free	
G50140	Gloves - Protective, Latex or Nitrile	

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

E. Prepare for the Disinfecting

SUBTASK 25-00-00-940-001

WARNING

WEAR APPLICABLE PROTECTIVE EQUIPMENT (PPE) WHEN YOU DO THIS TASK. BEFORE YOU USE PPE, READ, UNDERSTAND AND OBEY ALL INSTRUCTIONS FOR ITS USE. THESE INSTRUCTIONS INCLUDE INSTRUCTIONS FROM THE DISINFECTANT MANUFACTURER, YOUR EMPLOYER AND GOVERNMENT REGULATIONS. GET INSTRUCTIONS FROM YOUR EMPLOYER ON WHICH PPE IS NECESSARY. IF YOU DO NOT OBEY PPE INSTRUCTIONS, INJURY TO PERSONNEL CAN OCCUR.

(1) Before you disinfect the surfaces of the aircraft interior and exterior, put on the personal protective equipment listed below:

(a) safety goggles, STD-6437

(b) particulate respirator, STD-6435

(c) protective gloves, G50140

NOTE: Nitrile gloves are preferred when in contact with alcohol.

(d) hooded coveralls, STD-6439

F. Disinfect the Passenger Cabin Interior and Exterior Surfaces

SUBTASK 25-00-00-670-001

(1) If necessary, to disinfect the interior surfaces, do these steps:

(a) Disinfect surfaces with either Matrix #3 cleaner, B50364, Sani-Cide EX3 cleaner, B50367, Calla 1452 cleaner, B50280, AeroDis 7127 cleaner, B50363, Bioesque cleaner, B50375 or mPerial cleaner, B50369.

NOTE: Follow the disinfectant manufacturer's instruction and refer to the EPA List N for applicable contact/dwell time. Applications should be carefully monitored to prevent any running or pooling of fluid on any surface.

NOTE: For seats, In Flight Entertainment (IFE) equipment, galleys, and lavatories, refer to the manufacturer's recommendation for disinfecting these parts.

WARNING

ISOPROPYL ALCOHOL IS POISONOUS AND FLAMMABLE. USE PROTECTION EQUIPMENT. MAKE SURE THAT YOU USE ISOPROPYL ALCOHOL IN AN AREA WITH AIRFLOW. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

1) Alternatively, disinfect surfaces with a solution of minimum 70% alcohol, B00130, or alcohol, B50073.

NOTE: Isopropyl alcohol should be applied in accordance with BAC5750 and BAC5150.

2) Wipe the surface with a cotton wiper, G00034 that is moist with the solution.

NOTE: Refer to the EPA List N or local health authority guidance for required contact/dwell time for Isopropyl Alcohol to be used as a disinfectant.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Make sure to not oversaturate the cotton wiper to prevent the solution to drip into crevices or drip and soak into porous surfaces.

4) Wipe the surface dry with a clean cotton wiper, G00034.

SUBTASK 25-00-00-670-004

(2) If necessary, to disinfect the carpets, do these steps:

(a) Disinfect carpet with either Calla 1452 cleaner, B50280, AeroDis 7127 cleaner, B50363, or Matrix #3 cleaner, B50364.

NOTE: Follow the disinfectant manufacturer's instruction and refer to the EPA List N for applicable contact/dwell time. Applications should be carefully monitored to prevent any running or pooling of fluid on any surface.

1) Alternatively, disinfect the carpets with a solution of minimum 70% alcohol, B00130.

2) Wipe the surface with a cotton wiper, G00034 that is moist with the solution.

NOTE: Refer to the EPA List N or local health authority guidance for required contact/dwell time for Isopropyl Alcohol to be used as a disinfectant.

3) Make sure to not oversaturate the cotton wiper to prevent the solution to drip into crevices or drip and soak into porous surfaces.

4) Wipe the surface dry with a clean cotton wiper, G00034.

G. Disinfect the Cargo Compartment

SUBTASK 25-00-00-670-003

(1) If necessary, to disinfect the cargo compartment components, do these steps:

(a) Disinfect hard non-porous surfaces, except the cargo handling system equipment, with Calla 1452 cleaner, B50280, or Matrix #3 cleaner, B50364.

NOTE: Follow the disinfectant manufacturer's instruction and refer to the EPA List N for applicable contact/dwell time.

WARNING ISOPROPYL ALCOHOL IS POISONOUS AND FLAMMABLE. USE PROTECTION EQUIPMENT. MAKE SURE THAT YOU USE ISOPROPYL ALCOHOL IN AN AREA WITH AIRFLOW. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

(b) Alternatively, disinfect hard non-porous surfaces with a solution of 70% alcohol, B00130.

NOTE: Do not apply alcohol to the cargo liner joint sealing tapes or nets.

(c) Mix a solution of 70 percent alcohol, B00130 with 30 percent de-ionized water.

(d) Wipe the surface with a cotton wiper, G00034 that is moist with the solution.

NOTE: Refer to the EPA List N or local health authority guidance for required contact/dwell time for Isopropyl Alcohol to be used as a disinfectant.

(e) Wipe the surface dry with a clean cotton wiper, G00034.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING ISOPROPYL ALCOHOL IS POISONOUS AND FLAMMABLE. USE PROTECTION EQUIPMENT. MAKE SURE THAT YOU USE ISOPROPYL ALCOHOL IN AN AREA WITH AIRFLOW. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

(f) Disinfect the cargo handling system equipment with a solution of 70% alcohol, B00130. Wipe on the solution using a cotton wiper, G00034.

NOTE: Refer to the EPA List N or local health authority guidance for required contact/dwell time for Isopropyl Alcohol to be used as a disinfectant.

(g) Disinfect the cargo handling system screens and displays as follows:

WARNING ISOPROPYL ALCOHOL IS POISONOUS AND FLAMMABLE. USE PROTECTION EQUIPMENT. MAKE SURE THAT YOU USE ISOPROPYL ALCOHOL IN AN AREA WITH AIRFLOW. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

CAUTION DO NOT APPLY CLEANER DIRECTLY ON THE DISPLAY SURFACE OR THE UNIT. ALWAYS APPLY CLEANER TO THE CLOTH. THIS WILL HELP PREVENT DAMAGE TO THE DISPLAY SURFACE OR THE UNIT.

1) Soak a lint-free cloth, G01043 with a solution of 70% alcohol, B00130.

CAUTION DO NOT USE TOO MUCH FORCE WHEN YOU CLEAN THE DISPLAY SURFACE. TOO MUCH FORCE WILL CAUSE DAMAGE TO THE DISPLAY SURFACE.

2) Disinfect the screen or display with the moist lint-free cloth, G01043.

NOTE: Refer to the EPA List N or local health authority guidance for required contact/dwell time for Isopropyl Alcohol to be used as a disinfectant.

3) Dry the screen or display with a clean dry lint-free cloth, G01043.

H. Post-Disinfecting Cleanup

SUBTASK 25-00-00-020-017

WARNING DISCARD ALL PERSONAL PROTECTIVE EQUIPMENT AFTER YOU USE IT ONE TIME. DO NOT TRY TO CLEAN IT. DISCARD THE EQUIPMENT IN A PLASTIC DISPOSAL BAG. OBEY THESE INSTRUCTIONS TO PREVENT INJURIES TO PERSONNEL.

(1) Remove the personal protective equipment and put them in a plastic bag, G00624 with any used cloths. Seal the bag closed with tape.

WARNING OBEY THE AIRLINE POLICY, LOCAL HEALTH DEPARTMENT, AND LAW ENFORCEMENT REGULATIONS WHEN YOU DISCARD THIS MATERIAL. OBEY THESE INSTRUCTIONS TO PREVENT INJURIES TO PERSONNEL.

(a) Discard the bag with the personal protective equipment. Refer to the airline, local health, safety and regulatory procedures for disposal of material.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-110-016

WARNING CLEAN YOUR HANDS WITH SOAP AND FLUSH WITH HOT WATER. DIRTY HANDS WITH CONTAMINATION CAN CAUSE DISEASE AND ILLNESSES TO PERSONS.

(2) Clean your hands with soap and running hot water.

END OF TASK

TASK 25-00-00-370-801

4. Equipment/Furnishings - Painting

(Figure 701)

A. General

(1) It is necessary to paint the equipment when the surface finish is damaged.

(2) Apply the paint with a paint sprayer, hand brush, or air brush.

(3) Apply a surface finish that is equivalent to the initial surface finish.

(4) There should be no visual difference between the initial surface finish and new surface finish.

(5) The procedures that follow are divided into groups of decorative surfaces that you will be painting. These groups are Tedlar, polycarbonate (Lexan), ULTEM, and Declar.

(6) Fully mix the paint before you use it. It is better to use a mechanical mixer. Do not shake the water emulsion paint too much, because air bubbles will occur.

(7) Mix the paint to the correct consistency before you spray it. Do not mix thinners from different vendors.

(8) Keep the air clean. Dirt or lint can contaminate the paint before it is dry.

(9) The color of the paint must be the same as the old paint or you will see an outline. Use paint with high-grade commercial standards.

B. Consumable Materials

Reference	Description	Specification
B00102	Abrasive - Aluminum Oxide Coated Cloth	
B00130	Alcohol - Isopropyl	TT-I-735
B00148	Solvent - Methyl Ethyl Ketone (MEK)	ASTM D740
B00157	Cleaner - Detergent - Spraywhite E	
B00158	Cleaner - Clean Quick Broad Range Quaternary Sanitizer	
B00159	Cleaner - Detergent - Glo Do-All Formula 3B	
B00161	Cleaner - Detergent - Orvus W. A. paste	
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
B00294	Cleaner - Detergent - Glo Do-All Formula 1D	
B50117	Detergent - General	
C00039	Primer - Interior Decorative Urethane, White	BMS10-83 Type I
C00040	Coating - Interior Decorative Urethane Topcoat, Semigloss	BMS10-83 Type II
C00923	Coating - Interior Decorative Urethane Enamel, Low Gloss	BMS10-83 Type III

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
D00147	Compound - Interior Surface Filling, Polyester Resin	BMS5-136
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)
G02408	Abrasive - Paper, #50 to #400 grit	

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Equipment/Furnishings Painting

SUBTASK 25-00-00-110-007

WARNING OBEY THE AIRLINE POLICY, LOCAL HEALTH DEPARTMENT, AND LAW ENFORCEMENT REGULATIONS WHEN YOU DISCARD THIS MATERIAL. OBEY THESE INSTRUCTIONS TO PREVENT INJURIES TO PERSONNEL.

WARNING OBEY ALL OF THE WARNINGS AND CAUTIONS IN THE REFERENCED PROCEDURE. IF YOU DO NOT OBEY THE WARNINGS AND CAUTIONS, INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

WARNING DO NOT GET THESE MATERIALS IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM THESE MATERIALS. PUT ON A RESPIRATOR, GOGGLES, AND GLOVES WHEN YOU USE THESE MATERIALS. KEEP THESE MATERIALS AWAY FROM SPARKS, FLAME, AND HEAT. THESE MATERIALS ARE POISONOUS AND FLAMMABLE. THEY CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(1) Use these consumable materials:

(a) alcohol, B00130

(b) solvent, B00148

(c) primer, C00039

(d) coating, C00040

(e) coating, C00923

(f) compound, D00147

(g) Scotch Flatback Masking Tape 250, G00270

(h) #50 to #400 grit abrasive paper, G02408.

NOTE: The minimum grit number to be used is 180 grit.

SUBTASK 25-00-00-110-008

(2) Use these detergents:

(a) Spraywhite E cleaner, B00157

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Clean Quick sanitizer, B00158

(c) Glo Do-All Formula 1D cleaner, B00294

(d) Glo Do-All Formula 3B cleaner, B00159

(e) Orvus WA paste cleaner, B00161.

SUBTASK 25-00-00-170-001

(3) Use the following steps to paint the Tedlar surfaces:

WARNING DO NOT GET THE SOLVENT IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM IT. PUT ON GOGGLES AND GLOVES WHEN YOU USE IT. KEEP IT AWAY FROM SPARKS, FLAMES, AND HEAT. IT IS POISONOUS AND FLAMMABLE. THE SOLVENT CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

CAUTION DO NOT KEEP THE SOLVENTS ON THE PLASTICS FOR TOO MUCH TIME. IF THE SOLVENTS STAY ON THE PLASTICS FOR TOO MUCH TIME, DAMAGE TO THE PLASTICS WILL OCCUR.

(a) Rub the surface with cotton wiper, G00034, that is moist with solvent, B00184.

(b) Dry the surface with a clean dry cotton wiper, G00034, before the solvent becomes dry.

(c) Apply Scotch Flatback Masking Tape 250, G00270, to the adjacent surfaces.

(d) Apply primer, C00039, to the area you will paint.

SUBTASK 25-00-00-170-002

(4) Prepare to paint the polycarbonate (Lexan) surfaces using the following steps:

(a) Clean the surface with cotton wiper, G00034, that is moist with a mixed detergent.

(b) Rub the surface lightly with 180 grit abrasive cloth, B00102, to remove gloss.

(c) Clean the surface with a clean cotton wiper, G00034, that is moist with the mixed detergent.

SUBTASK 25-00-00-210-001

(5) Examine the surface for porosity and voids.

(a) If you find surface porosity and voids, do these steps:

1) Put putty on a clean cotton wiper, G00034, at package consistency.

2) Rub the surface with cotton wiper, G00034, to push the putty into surface defects.

3) Let the putty dry for 3/4 to one hour.

4) Remove the unwanted putty with abrasive cloth, B00102.

5) Clean the surface with cotton wiper, G00034, that is moist with mixed detergent.

SUBTASK 25-00-00-370-001

CAUTION YOU MUST USE THE CORRECT PRIMER BEFORE YOU PAINT THE POLYCARBONATE SURFACES. IF YOU DO NOT USE THE CORRECT PRIMER, THE SOLVENTS IN THE PAINT CAN CAUSE DAMAGE TO THE POLYCARBONATE.

(6) Apply primer, C00039, to the surface of the part you want to paint.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-110-009

(7) Use the following steps to prepare to paint the ULTEM and Declar surfaces:

(a) Clean the surface of the part with cotton wiper, G00034, that is moist with a mixed general detergent, B50117, or alcohol, B00130.

1) If you use alcohol, wipe the surface dry quickly.

a) Do not let the alcohol dry first.

(b) Dry the surface with a clean dry cotton wiper, G00034.

(c) Examine the surface for porosity or voids.

1) If you find surface porosity or voids, refer to the steps given before to repair the surfaces of polycarbonate materials.

(d) Clean the surface of the part again with cotton wiper, G00034, that is moist with mixed general detergent, B50117, or alcohol, B00130.

1) If you use alcohol, wipe the surface dry quickly.

a) Do not let the alcohol dry first.

(e) Dry the surface with a clean dry cotton wiper, G00034.

E. Prepare to Paint the Tedlar, Polycarbonate, ULTEM, and Declar Surfaces

SUBTASK 25-00-00-370-002

(1) Mix coating, C00040, or coating, C00923.

(a) Use the manufacturer's instructions to mix paint.

SUBTASK 25-00-00-370-003

(2) Apply several cross-layers of paint until the color agrees with the adjacent areas.

SUBTASK 25-00-00-370-004

(3) If it is applicable, remove Scotch Flatback Masking Tape 250, G00270.

SUBTASK 25-00-00-370-005

(4) Let the first layer of paint cure for two hours at 70°F (21°C) to 80°F (27°C) before you touch it.

SUBTASK 25-00-00-370-006

(5) Let the first layer cure for one hour before you apply a texture coat.

SUBTASK 25-00-00-370-007


(6) If it is necessary, apply a texture layer of the same paint (do not make it thin).

SUBTASK 25-00-00-370-008

(7) Let it dry for three hours before you touch it.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

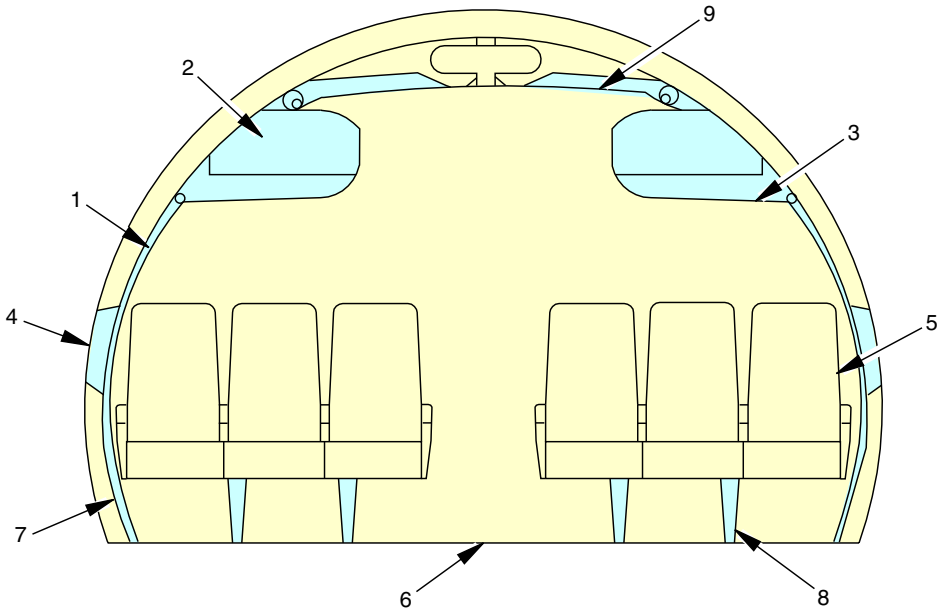

1. SIDEWALL PANELS - DECORATIVE TEDLAR COVERED CRUSHED CORE
2. STOWAGE BINS - DECORATIVE TEDLAR COVERED HONEYCOMB
3. PASSENGER SERVICE UNITS (PSUs) - TEDLAR CLAD ALUMINUM
4. WINDOW REVEALS - POLYCARBONATE
   DUST COVER - HARD COATED POLYCARBONATE
   SHADE - TEDLAR COVERED POLYCARBONATE
5. SEAT UPHOLSTERY - 100% WOOL OR 90% WOOL AND 10% NYLON
6. CARPETS - 100% WOOL FACE PILE
7. RISER PANEL FACING - 100% WOOL FABRIC
8. SEAT TRACK COVERS - POLYURETHANE
   SEAT TRACKS - ALUMINUM ALLOY
9. CEILING PANELS - DECORATIVE TEDLAR COVERED CRUSHED CORE

2411816 S00061529139_V2

Example Advanced Technology Interior Material Identification
Figure 701/25-00-00-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EQUIPMENT/FURNISHINGS - REPAIRS

1. General

A. This procedure contains these tasks:

(1) Crushed-Core and Sandwich Panel Repair

(2) Decorative Surface Repair

(3) Decorative Tedlar removal/installation

(4) Repair for Nomex Honeycomb Sandwich Panels with a Decorative Tedlar Cover

(5) Repair for Tedlar Covers of Aluminum Laminates

(6) Perforated Panel Repair

(7) Repair for Polycarbonate (Lexan), Ultem, and Declar Plastics

(8) Urethane Foam Repair

(9) Aluminum Trim.

TASK 25-00-00-300-801

2. Crushed-Core and Sandwich Panel Repair

A. General

(1) This procedure gives instructions to repair crushed-core and sandwich panels that have these types of damage:

(a) Small scratches and dents

(b) Large dents in thin crushed-core panels

(c) Small holes and gouges

(d) Damage that is more than 0.5 in^2 (3.2 cm^2) but has no core damage

(e) Damage that is more than 0.5 in^2 (3.2 cm^2) with core damage

B. References

Reference	Title
20-10-27-910-801	Precautions for Heat Devices (P/B 201)

C. Tools/Equipment

Reference	Description
STD-442	Gun - Heat, 180 deg. F (82 deg. C) Maximum Output Temperature
STD-552	Knife - Utility

D. Consumable Materials

Reference	Description	Specification
A01021	Compound - Honeycomb Edge Filling & Potting, Epoxy Based, 2 Part, RT Cure (12-25 Min Gel)	BMS5-28 Type 18
B00102	Abrasive - Aluminum Oxide Coated Cloth	
B01027	Solvent - Butyl Carbitol (Dow Chemical - E-Series Glycol Ethers)	BAC5750
D00147	Compound - Interior Surface Filling, Polyester Resin	BMS5-136

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00316	Fabric - Woven Glass Reinforcements For Laminating Plastics	BMS9-3
G02480	Tape - Mylar, Clear, 3.5 mils, Maximum 16.5" Width - Permacel P-255	
G50077	Abrasive - Aluminum Oxide Paper, 240 grit or finer	
G50400	Resin - Fiberglass Layup, Short Worklife, Non-Brominated	BMS8-201 Type IV (Supersedes BMS8-201 Type II)

E. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

F. Small Scratch and Dent Repair

SUBTASK 25-00-00-350-001

(1) Make sure the area you want to repair is smaller than 100 in^2 (645 cm^2). If the area is larger than 100 in^2 (645 cm^2), you must apply a foil-backed decorative laminate over the repair. Refer to the Decorative Surface Repair, TASK 25-00-00-300-802.

(2) Use this process to repair panels that have damage that does not go into the fiberglass or carbon skins.

(3) For panels that are 0.25 in. (6.35 mm) thick or more, use this procedure to repair scratches and small surface dents that are not more than 0.1 in. (2.5 mm) deep.

(4) For panels that are less than 0.25 in. (6.35 mm) thick, use this repair procedure to repair scratches and small surface dents that are not more than 0.005 in. (0.127 mm) deep.

(5) Fill the damaged area with compound, D00147 to make a crown above the adjacent areas.

SUBTASK 25-00-00-350-002

(6) After the filler is hard, rub it with abrasive cloth, B00102 (400 to 600 grit) to the same level as the surface of the panel.

SUBTASK 25-00-00-350-003

(7) If this is a decorative panel, do this task: Decorative Surface Repair, TASK 25-00-00-300-802.

G. Large Dent Repair for Crushed-Core Panels

SUBTASK 25-00-00-350-004

(1) This procedure is for panels less than 0.25 in. (6.35 mm) thick with dents that are more than 0.005 in. (0.127 mm) deep.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION

BE CAREFUL WHEN YOU APPLY HEAT NEAR MATERIALS THAT CAN BURN. THE TEMPERATURE OF THE TEDLAR MUST NOT BE MORE THAN 200° F (93.3° C) OR THE TEMPERATURE AT WHICH THE TEDLAR DISTORTS, WHICHEVER IS LOWER. TOO MUCH HEAT CAN CAUSE DAMAGE TO THE TEDLAR.

(2) On the side that does not have dents, increase the temperature of the panel.

(a) Use a standard heat 180 deg. F (82 deg. C) maximum output temperature heat gun, STD-442 until the panel is approximately 200°F (93°C).

NOTE: The area of the panel will get more flexible, and very hot. Refer to TASK 20-10-27-910-801 for cautions to obey when you use heat guns.

SUBTASK 25-00-00-350-005

(3) Push the backside of the panel forward with the round surface of a tool to remove as much of the dent as you can.

SUBTASK 25-00-00-350-006

(4) After the panel is cool do the process to remove small scratches and dents, if it is necessary.

H. Small Hole and Gouge Repair

SUBTASK 25-00-00-350-007

(1) This repair is for:

(a) Damage that is less than 0.5 in^2 (3.2 cm^2) and goes through the face sheets.

(b) Core damage that is less than 0.5 in^2 (3.2 cm^2).

(2) Remove loose and broken pieces, contamination, and other unwanted material from the damaged area.

(a) Use 240 grit or finer abrasive paper, G50077 and a utility knife, STD-552.

SUBTASK 25-00-00-160-033

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(3) Clean the area with a cotton wiper, G00034 that is soaked with Butyl Carbitol solvent, B01027.

SUBTASK 25-00-00-160-034

(4) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-340-001

(5) Fill the hole with the compound, A01021.

SUBTASK 25-00-00-280-001

(6) Let the compound cure for 7 days at 77 ±2°F (25 ±1°C), or 5 hours at 125 ±10°F (52 ±6°C).

SUBTASK 25-00-00-300-001

(7) If it is a decorative panel, do this task: Decorative Surface Repair, TASK 25-00-00-300-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Repair for Panels with No Core Damage

SUBTASK 25-00-00-020-001

(1) Use this procedure to repair panels that have more than 0.5 in. (12.7 mm) damage but no core damage.

(2) Remove the damaged part of the panel skin.

SUBTASK 25-00-00-120-001

(3) Rub the area and two inches more on all the sides of the area with abrasive cloth, B00102 (400 to 600 grit) until the area is not glossy.

SUBTASK 25-00-00-160-035

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

I

(4) Clean the area with a cotton wiper, G00034 that is soaked with Butyl Carbitol solvent, B01027.

SUBTASK 25-00-00-160-036

(5) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-340-002

(6) Follow the manufacturer's instructions to mix the resin, G50400.

SUBTASK 25-00-00-340-003

(7) Apply fabric, G00316 that is soaked with the mixed adhesive and make an overlap of approximately 0.5 in. (12.7 mm).

NOTE: Use 50% more glass fabric than the initial skin.

SUBTASK 25-00-00-340-004

(8) Let the fabric, G00316 and adhesive cure for 24 to 36 hours at 75°F (24°C) to 90°F (32°C), or for 3 to 4 hours at 140°F (60°C) to 160°F (71°C).

SUBTASK 25-00-00-350-008

(9) If this is a decorative panel, do this task: Decorative Surface Repair, TASK 25-00-00-300-802.

J. Repair for Panels with Core Damage

SUBTASK 25-00-00-020-002

(1) Use this procedure to repair panels that have more than 0.5 in. (12.7 mm) of damage and damaged core.

(2) Remove the damaged skin until you can see at least 0.5 in. (12.7 mm) of core that does not have damage.

SUBTASK 25-00-00-020-003

(3) Remove the damaged part of the core.

(a) Make sure 0.5 in. (12.7 mm) of core without damage is shown on all sides of the damaged area.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-160-037

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(4) Clean the area with a cotton wiper, G00034 soaked with Butyl Carbitol solvent, B01027.

SUBTASK 25-00-00-160-038

(5) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-350-009

(6) Use the manufacturer's instructions to mix the compound, A01021.

SUBTASK 25-00-00-350-010

(7) Fill the damaged area with the adhesive mixture.

SUBTASK 25-00-00-350-011

(8) Let the repair cure for 3 hours at 75°F (24°C).

SUBTASK 25-00-00-350-012

(9) Repair the skin with the steps given for panels that do not have core damage.

K. Potted Insert Repair

SUBTASK 25-00-00-020-004

(1) Remove the damaged skin and approximately 0.5 in. (12.7 mm) more on all sides of the damage.

SUBTASK 25-00-00-160-039

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(2) Clean the area with a cotton wiper, G00034 that is soaked with Butyl Carbitol solvent, B01027.

SUBTASK 25-00-00-160-040

(3) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-280-002

(4) Cut around the insert from the backside of the panel with a hole saw or an equivalent tool.

NOTE: Be careful not to cut the front side of the panel.

SUBTASK 25-00-00-280-003

CAUTION

BE CAREFUL WHEN YOU APPLY HEAT NEAR MATERIALS THAT CAN BURN. THE TEMPERATURE OF THE TEDLAR MUST NOT BE MORE THAN 200° F (93.3° C) OR THE TEMPERATURE AT WHICH THE TEDLAR DISTORTS, WHICHEVER IS LOWER. TOO MUCH HEAT CAN CAUSE DAMAGE TO THE TEDLAR.

(5) Carefully increase the temperature of the insert until you can remove the insert from the panel.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-340-005

(6) Use the manufacturer's instructions to mix the compound, A01021.

SUBTASK 25-00-00-340-006

(7) Fill the hole with the adhesive mixture.

SUBTASK 25-00-00-340-007

(8) Push the new insert slowly into the mixture.

(a) Let the mixture flow around the insert and completely fill the hole.

SUBTASK 25-00-00-340-008

(9) Let the adhesive mixture cure at 75°F (24°C) for 3 hours.

SUBTASK 25-00-00-300-002

(10) Repair the skin with the procedure given for panels that do not have core damage.

L. Bassinet Fitting Repair

SUBTASK 25-00-00-340-009

(1) Fully remove the old epoxy material.

SUBTASK 25-00-00-340-010

(2) Remove some material from under the top skin.

SUBTASK 25-00-00-340-011

(3) Use the manufacturer's instructions to mix the compound, A01021.

SUBTASK 25-00-00-340-012

(4) Fill the hole with the adhesive mixture.

SUBTASK 25-00-00-340-013

(5) Apply Permacel P-255 tape, G02480 to make a cover on the end of the hole in the bassinet fitting.

SUBTASK 25-00-00-340-014

(6) Slowly push the fitting in the hole.

SUBTASK 25-00-00-340-015

(7) Remove the unwanted adhesive that comes out when you push the insert in the hole.

SUBTASK 25-00-00-340-016

(8) Let the adhesive cure for 3 hours minimum.

——— END OF TASK ———

TASK 25-00-00-300-802

3. Decorative Surface Repair

A. General

(1) This task contains instructions to repair painted or Tedlar laminate surfaces that have small scratches, small holes, and gouges.

(2) This task has these repairs:

(a) A repair of small scratches and unwanted marks.

(b) A repair of the pattern on the tedlar laminate.

(c) A repair of small holes and gouges.

(d) Application of decorative tedlar laminate - non-acoustical (non-adhesive-back).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Application of decorative tedlar laminate with a pressure sensitive adhesive (adhesive-back).

NOTE: This is the preferred repair when tedlar material will be applied inside the airplane.

(3) The area for repair of decorative surfaces must be smaller than 100 in^2 (645.2 cm^2). If the area is larger than 100 in^2 (645 cm^2), you must replace the part.

B. References

Reference	Title
20-10-27-910-801	Precautions for Heat Devices (P/B 201)

C. Tools/Equipment

Reference	Description
STD-442	Gun - Heat, 180 deg. F (82 deg. C) Maximum Output Temperature
STD-1080	Brush - Paint
STD-1089	Vacuum Source, 0 to -5.0 psig
STD-1133	Gun - Spray, Paint, with Interchangeable Nozzles
STD-1205	Wheel - Buffer, Cotton Cloth, 80/92 Thread Count, Spiral Sewn, 6 Inch Diameter, 7/8 Inch Thick, 1/4 Inch Arbor Hole
STD-6639	Vacuum Source, 30 to 10 Inches HgA (absolute)

D. Consumable Materials

Reference	Description	Specification
A00555	Adhesive - For Bonding Decorative Laminate, 2 Part, Sprayable	BMS5-127 Type II
A00693	Rubber - Silicone Casting - RTV 41	
A01052	Rubber - Silicone Casting - RTV 61	
B00026	Compound - Buffing - Learok 119	
B00027	Compound - Buffing - Learok 884E (Formerly Learock 888)	
B00102	Abrasive - Aluminum Oxide Coated Cloth	
B00148	Solvent - Methyl Ethyl Ketone (MEK)	ASTM D740
B01027	Solvent - Butyl Carbitol (Dow Chemical - E-Series Glycol Ethers)	BAC5750
C00063	Ink - Screen Printing, Pigmented	BMS10-73 Type I
C00368	Ink - Screen Printing, Clear	BMS10-73 Type II
D00147	Compound - Interior Surface Filling, Polyester Resin	BMS5-136
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G02310	Ink - Water-Based, Screen Printing	BMS10-107
G02446	Laminate - Tedlar	BAC5596 Type XIII

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Small Scratch and Unwanted Mark Repair

SUBTASK 25-00-00-120-002

(1) The repair depth cannot be larger than 0.10 in. (2.5 mm) in a Tedlar laminate covered panel that is 0.25 in. (6.35 mm) thick or more, or 0.005 in. (0.127 mm) deep in a panel that is less than 0.25 in. (6.35 mm) thick.

SUBTASK 25-00-00-120-005

(2) Make sure the area you want to repair is smaller than 100 in^2 (645 cm^2). If the area is larger than 100 in^2 (645 cm^2), you must replace the full decorative tedlar part (TASK 25-00-00-900-801).

SUBTASK 25-00-00-120-006

CAUTION

DO NOT RUB THROUGH THE TEDLAR WHEN YOU REPAIR THE SMALL SCRATCHES OR UNWANTED MARKS. YOU WILL CAUSE MORE REPAIRS TO BE NECESSARY IF YOU RUB THROUGH THE TEDLAR.

(3) Rub the surface lightly with abrasive cloth, B00102 paper (400 to 600 grit) until the area is not rough.

SUBTASK 25-00-00-340-017

(4) Polish the damaged area with the buffing cotton cloth buffer wheel, STD-1205 until the area is as glossy as the adjacent areas.

(a) Use buffing Learok 119 compound, B00026 or buffing Learok 884E compound, B00027.

G. Tedlar Pattern Repair

SUBTASK 25-00-00-370-009

(1) Apply ink, C00063 or ink, C00368 of the correct color.

(a) Let the ink dry for 15 minutes.

SUBTASK 25-00-00-370-010

(2) To reduce the gloss of the silk screen ink, lightly apply a clear acrylic with a spray paint spray gun with interchangeable nozzles, STD-1133.

H. Small Hole and Gouge Repair

SUBTASK 25-00-00-340-018

(1) Apply compound, D00147 to the area with damage.

NOTE: Apply more filler than is necessary to make sure the gouge is fully filled. You will remove the unwanted filler in the subsequent steps.

SUBTASK 25-00-00-340-019

(2) When the filler is hard, rub the area with abrasive cloth, B00102 paper (240 to 320 grit) until the filler is level with the adjacent surfaces.

(a) Do not rub through the tedlar that is not damaged.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-340-020

WARNING	DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(3) Use these steps to make a silicone embossing pad of the surface that is adjacent to the area you will repair.

(a) Clean the surface with a clean cotton wiper, G00034 soaked with Butyl Carbitol solvent, B01027.

(b) Dry the surface with a clean cotton wiper, G00034.

(c) Make a frame approximately ⅜ in. (10 mm) wide by ½ in. (13 mm) high, around the clean surface.

1) Use wood, clay, or high temperature vacuum sealant tape for the frame.

(d) Apply a thin level of prepared silicone rubber on the textured surface in the frame with a brush.

1) Apply a thin layer of the prepared silicone RTV 41 rubber, A00693 or RTV 61 rubber, A01052 on the textured surface in the frame with a paint brush, STD-1080.

NOTE: Almost all brands, types, or colors of castable silicone rubber are satisfactory, but not the dark red types which contain finely divided iron oxide. XIAMETER, from Dow Corning, RTV Silicone Moldmaking Materials and Momentive Performance Materials RTV Silicone Rubber Compounds are also preferred. Prepare the silicone rubber with the manufacturer's instructions.

2) Continue to use the brush until you cannot see air bubbles.

(e) Pour the remaining silicone RTV 41 rubber, A00693 or RTV 61 rubber, A01052 on the brushed surface until it is ¼ in. (6 mm) thick.

NOTE: One pound of prepared silicone rubber will make a 10 in. (25 cm) by 10 in. (25 cm) by ¼ in. (6 mm) replica.

1) Let the silicone cure at room temperature for 48 hours.

(f) When the silicone is dry, remove the embossed pad from the surface.

SUBTASK 25-00-00-370-011

(4) Apply ink, G02310 or ink, C00368 of the correct color to the repair surface.

(a) Let the ink dry for 15 minutes.

SUBTASK 25-00-00-340-021

(5) Apply the silicone embossing pad to the repaired surface.

SUBTASK 25-00-00-340-022

(6) Use a vacuum source (30 to 10 inches HgA), STD-6639 to apply a vacuum of approximately 10 in. (25 cm) of mercury at 160°F (71°C).

SUBTASK 25-00-00-340-023

(7) If the above procedure is not satisfactory, replace the decorative laminate (TASK 25-00-00-900-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Apply Decorative Tedlar Laminate - Non-Acoustical (Non-adhesive-back)

NOTE: If it is necessary, repair the panel before you apply the tedlar.

SUBTASK 25-00-00-020-005

(1) Remove the trim strips from the panel.

SUBTASK 25-00-00-120-003

(2) Rub the area with abrasive cloth, B00102 paper where you will apply the adhesive.

SUBTASK 25-00-00-160-041

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(3) Clean the area with a cotton wiper, G00034 that is moist with Butyl Carbitol solvent, B01027 or solvent, B00148.

SUBTASK 25-00-00-160-042

(4) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-340-024

(5) Mix sixteen parts adhesive (by volume) with one part curing agent of adhesive, A00555.

(a) Let the mixture set for two minutes.

SUBTASK 25-00-00-340-025

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(6) If you want to spray the adhesive mixture, mix (by volume) one part adhesive mixture with one part solvent, B00148.

SUBTASK 25-00-00-340-026

(7) Carefully spray the mixture with a paint spray gun with interchangeable nozzles, STD-1133 or apply the mixture with a brush.

(a) Let the surface dry at room temperature for a minimum of two hours.

NOTE: The surface must be fully dry before you install the tedlar laminate. If you install the tedlar to a wet surface, you will not get a satisfactory bond.

SUBTASK 25-00-00-210-002

(8) Put the decorative Tedlar laminate, G02446 in position.

(a) Make sure the decorative tedlar laminate has the correct color and pattern.

NOTE: Use the masking tape to hold the decorative Tedlar laminate in the correct position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-880-001

CAUTION

BE CAREFUL WHEN YOU APPLY HEAT NEAR MATERIALS THAT CAN BURN. THE TEMPERATURE OF THE TEDLAR MUST NOT BE MORE THAN 200° F (93.3° C) OR THE TEMPERATURE AT WHICH THE TEDLAR DISTORTS, WHICHEVER IS LOWER. TOO MUCH HEAT CAN CAUSE DAMAGE TO THE TEDLAR.

(9) Use a heat 180 deg. F (82 deg. C) maximum output temperature heat gun, STD-442 to reactivate the adhesive.

NOTE: Make sure the temperature is constant across the surface of the laminate. Refer to TASK 20-10-27-910-801 for cautions to obey when you use the heat guns.

NOTE: These steps are recommended to achieve a better adhesion.

SUBTASK 25-00-00-340-027

(10) Use a vacuum source (0 to -5.0 psig), STD-1089 to make sure the laminate touches all of the panel:

NOTE: These steps are recommended to achieve a better repair. They are not required.

(a) Use the maximum vacuum possible that will not cause damage to the panel.

(b) Cure the laminate for 24 hours at room temperature, or for two hours at 120°F (49°C), or for 30 minutes at 180°F (82°C).

(c) Let the part cool to 90°F (32°C) before you remove the vacuum pressure.

J. Apply Decorative Tedlar Laminate with a Pressure Sensitive Adhesive (adhesive-back)

NOTE: Use this procedure to apply laminate to non-acoustical (not perforated) panels with flat or simple contours. If it is necessary, repair the panel before you apply the tedlar.

SUBTASK 25-00-00-020-006

(1) Remove the trim strips from the panel.

SUBTASK 25-00-00-340-028

(2) Rub the area where you will apply the Tedlar laminate with abrasive cloth, B00102 to remove the surface contamination.

SUBTASK 25-00-00-110-010

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(3) Clean the area with a cotton wiper, G00034 that is soaked with Butyl Carbitol solvent, B01027 or solvent, B00148.

SUBTASK 25-00-00-110-011

(4) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-020-007

(5) Remove the release paper from the laminate you want to apply.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-420-001

(6) Apply the laminate.

NOTE: Make sure the pattern is in the correct position. If the patterns are not aligned, the repair will not look satisfactory.

NOTE: Bubbles will result if you allow air to get below the laminate.

SUBTASK 25-00-00-880-002

CAUTION

BE CAREFUL WHEN YOU APPLY HEAT NEAR MATERIALS THAT CAN BURN. THE TEMPERATURE OF THE TEDLAR MUST NOT BE MORE THAN 200° F (93.3° C) OR THE TEMPERATURE AT WHICH THE TEDLAR DISTORTS, WHICHEVER IS LOWER. TOO MUCH HEAT CAN CAUSE DAMAGE TO THE TEDLAR.

(7) Use a heat 180 deg. F (82 deg. C) maximum output temperature heat gun, STD-442 to increase the temperature of the tedlar laminate.

NOTE: Make sure the temperature remains constant across the surface of the laminate. Refer to (TASK 20-10-27-910-801) for cautions to obey when you use heat guns.

SUBTASK 25-00-00-340-029

(8) Rub the tedlar laminate until the bond is satisfactory and you cannot see bubbles.

SUBTASK 25-00-00-340-030

(9) Use a vacuum source (0 to -5.0 psig), STD-1089 to make sure the laminate touches all of the panel:

NOTE: These steps are recommended to achieve a better repair. They are not required.

(a) Use the maximum vacuum possible that will not cause damage to the panel.

(b) Cure the laminate for 24 hours at room temperature, or for two hours at 120°F (49°C), or for 30 minutes at 180°F (82°C).

(c) Let the part cool to 90°F (32°C) before you remove the vacuum pressure.

——— END OF TASK ———

TASK 25-00-00-900-801

4. Decorative Laminate Removal/Installation

A. General

(1) This task gives instructions to replace damaged Decorative Laminate (DL) on the honeycomb sandwich panels.

NOTE: Replace the damaged area with the same type of laminate material that the damaged area was initially made from.

NOTE: Changes to the DL or the installation procedure can have an effect on compliance to FAA regulation, 14CFR 25.853 (a) and (d).

(2) This task has these repairs:

(a) Removal of the DL.

(b) Installation of the DL (non-adhesive-backed).

(c) Installation of DL with a pressure sensitive adhesive (adhesive-backed).

(3) Laminate that is cured with the panel cannot be removed and replaced (for example in a stowbin).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(4) The maintenance procedures in this task are for Boeing made interior parts (the aircraft doors sidewall, ceilings, and stowbins). For monuments (for example galleys, lavatories, and seat furniture) refer to the applicable Component Maintenance Manual (CMM) for the DL and how to apply the adhesive.

B. References

Reference	Title
20-10-27-910-801	Precautions for Heat Devices (P/B 201)

C. Tools/Equipment

Reference	Description
STD-94	Bag - Vacuum
STD-552	Knife - Utility
STD-821	Squeegee - Plastic
STD-1181	Gloves - Heat Protective

D. Consumable Materials

Reference	Description	Specification
A00555	Adhesive - For Bonding Decorative Laminate, 2 Part, Sprayable	BMS5-127 Type II
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
B01027	Solvent - Butyl Carbitol (Dow Chemical - E-Series Glycol Ethers)	BAC5750
B50201	Wipe - Alcohol (Isopropyl Alcohol)	
C00063	Ink - Screen Printing, Pigmented	BMS10-73 Type I
C00662	Thinner - C25/90S	
C00923	Coating - Interior Decorative Urethane Enamel, Low Gloss	BMS10-83 Type III
C50127	Coating - Paint, Krylon 1311 Matte Finish Coating	
D00147	Compound - Interior Surface Filling, Polyester Resin	BMS5-136
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G02310	Ink - Water-Based, Screen Printing	BMS10-107
G50133 [P05-274]	Abrasive - Silicon Carbide Paper, 80 grit	
G50339	Abrasive Paper - Aluminum Oxide, 600 Grit	
G50693	Powder - Untreated Fumed Silica, Cab-O-Sil HS-5	

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Decorative Laminate Removal

SUBTASK 25-00-00-000-001

(1) Do these steps to remove the DL from the base panel.

NOTE: This repair procedure is best completed after the panel is removed from the airplane.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Attach the panel safely with the decorative side in the up position.

(b) Put on the heat protective gloves, STD-1181.

(c) Use a heat gun to apply heat to the corner of the panel, (TASK 20-10-27-910-801).

NOTE: Do not let the heat collect in one spot for more than 20 seconds.

(d) Start removing the laminate by prying at the corner of the panel.

(e) Slowly pull the laminate from the panel surface.

(f) Point the heat gun in front of the area where the laminate continues to be attached to the panel.

1) Keep a constant pressure on the laminate as you pull it from the panel.

2) When the temperature reaches the correct level, the laminate will release from the panel.

(g) Continue this procedure until the laminate is fully removed.

G. Decorative Laminate Installation

SUBTASK 25-00-00-340-031

(1) Do the following steps to install the DL to the base panel.

(a) Do these steps to prepare the surface of the part:

1) Scrape excess resin build up with a utility knife, STD-552.

2) Remove dust or visible contaminates with compressed air or a cloth.

3) If necessary, fill surface imperfections with compound, D00147.

a) Make sure that the filler dries sufficiently.

b) Sand the filled area with 80 grit abrasive paper, G50133 [P05-274], or finer.

c) Blow or vacuum all remaining residue.

d) Clean with a dry or water-moistened cloth.

e) Repeat the cleaning process until the wipers are not dirty and the surface is visibly clean.

(b) Clean the panel surface again with a clean cotton wiper, G00034, that is soaked with solvent, B00184.

(c) Apply adhesive, A00555, to the panel surface.

NOTE: It is not necessary to use a vacuum bag, STD-94, for flat surfaces or simple contours to install DL with adhesive, A00555. But it is recommended for minimum bubbles and wrinkles.

NOTE: For complex contoured shapes, a vacuum bag, STD-94, is required. The DL will not bond and stay around the contours during the cure.

1) If a vacuum bag is not used, apply the DL and use a plastic squeegee, STD-821, from the center of the panel to remove creases and bubbles.

(d) Preheat the DL to a temperature that allows the laminate to form to the panel contours when vacuum is applied.

NOTE: This cycle will have to be determined for each part.

(e) Align the laminate by the pattern location and apply to the adhesive coated panel.

NOTE: This should be done within 8 hours of the adhesive application.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION DO NOT USE MORE THAN 20 IN/HG (67.7 KPA) OF VACUUM PRESSURE TO CURE THE LAMINATE. IF YOU DO NOT OBEY, DAMAGE TO THE PANEL CAN OCCUR.

(f) Put the adhesive coated panel in the appropriate vacuum bag, STD-94.

NOTE: For specific, complex contours, it is necessary to replace the DL with a part specified vacuum tool to prevent wrinkles. This vacuum tool is not available for order and has to be made.

(g) Use a vacuum bag, STD-94, to decrease the quantity of bubbles with a maximum pressure of 20 in/Hg (67.7 kPa).

1) Make sure that there is a constant pressure during the cure.

(h) Let the part cure for 12 hours minimum at room temperature of minimum 68°F (20°C).

(i) Remove the vacuum bag, STD-94, only when the part cools to 90°F (32.2°C) or below or to a temperature that will make sure that the DL does not delaminate from the panel.

NOTE: At temperatures above 90°F (32°C), the adhesive may not be fully hardened.

(j) Make sure that the individual part meets these requirements:

1) Make sure that the part has no visible blisters or other delamination and has no signs of poor adhesion of the DL.

2) Make sure that the part is inspected for correct orientation, dirt, unwanted material, cracks, pits, or other imperfections detrimental to the color, texture, and general appearance.

(k) Do these steps to bond the edge wrap of the DLs:

CAUTION DO NOT LET THE LAMINATE HIT OTHER OBJECTS WHEN YOU MOVE THE PANEL. THE LAMINATE IS BRITTLE. DAMAGE TO THE PANEL WILL OCCUR.

1) Use precautions to protect the surface when you move the panel.

NOTE: The DL that extends beyond the panel is brittle. Tears or splits can cause panel rejection.

2) Put the DL face down on the correct nesting tool.

3) If necessary, trim the DL.

4) Brush or spray adhesive, A00555, to both flap and part.

NOTE: It is not necessary to use a vacuum bag for flat surfaces or simple contours to install DL with adhesive, A00555. But it is recommended for minimum bubbles and wrinkles.

NOTE: For complex contoured shapes, a vacuum is required. The DL will not bond and stay around the contours during the cure.

a) If a vacuum bag is not used, apply the DL and use a plastic squeegee, STD-821, from the center of the panel to remove creases and bubbles.

5) Pull the DL over the edge to form a smooth surface.

6) Put the flap tightly onto the back of the part.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION MAKE SURE THAT YOU DO NOT APPLY MORE THAN 220°F (104°C) OF HEAT TO THE LAMINATE. TOO MUCH HEAT CAN CAUSE DAMAGE TO THE LAMINATE.

7) Rub or apply pressure tightly against the edge to form a good bond between the DL and the part.

NOTE: Heat can be applied to carefully soften the DL.

8) If necessary, the part can be vacuum bagged to hold the edge wrap in place.

9) Cure the part at 75°F (23.9°C) for 12 hours minimum.

NOTE: Heat can be applied instead to achieve the same results, for example, use 120 ±10°F (48.9 ±5.6°C) for 2 hours minimum or 180 ±10°F (82.2 ±5.6°C) for 30 minutes minimum.

a) If the part is heated, cool to below 90°F (32.2°C) before you release the vacuum.

(l) Do these steps for general rework of the decorative surfaces for scratches, chips, scuff marks, and small entrapped particles:

1) If the damaged area is less than 0.25 in. (6.35 mm) in diameter and less than 0.005 in. (0.127 mm) deep do these steps:

a) Clean the panel surface with a clean cotton wiper, G00034, that is soaked with solvent, B00184.

b) Remove excess solvent with clean dry cotton wiper, G00034.

NOTE: Use alcohol wipes, B50201, to remove any slow evaporating residual solvent.

c) Sand the area lightly with 600 grit abrasive paper, G50339.

d) Blow or vacuum all remaining residue.

e) Clean with a dry or water-moistened cloth.

f) Repeat the cleaning process until the wipers are not dirty and the surface is visibly clean.

g) Apply ink, G02310, ink, C00063, or coating, C00923, of the correct color to the damaged area.

NOTE: If necessary, use C25/90S thinner, C00662, for proper viscosity adjustments. Tap water is acceptable for the ink, G02310. Cab-O-Sil HS-5 Silica Powder, G50693, can also be added to provide for filling properties.

h) Allow the ink or paint to dry to room temperature for 15 minutes minimum.

i) Use coating, C50127, to reduce the gloss or match the appearance of the surrounding rework area.

2) Do these steps for general rework for small particles trapped under the DL:

a) Small particles can be broken apart with light pressure and left in the panel, provided the panel still meets the appearance and texture requirements.

<1> Clean the panel surface with a clean cotton wiper, G00034, that is soaked with solvent, B00184.

<2> Put a piece of clear film over the entrapped particle.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

<3> Gently press the particle into the panel, taking care not to damage the decorative surface.

NOTE: Heat may be used to soften the DL but do not exceed 200°F (93.3°C) to avoid delamination or discoloration of the DL.

b) If the particle does not break apart do these tasks:

<1> Clean the panel surface again with a clean cotton wiper, G00034, that is soaked with solvent, B00184.

<2> Make a small cut into the DL.

<3> Lift the DL back to remove the particle.

<4> Apply adhesive, A00555, to both faying surfaces.

NOTE: Heat may be used to soften the DL but do not exceed 200°F (93.3°C)

<5> Join the faying surfaces and apply pressure to make sure of correct contact.

NOTE: Make sure that you avoid trapping air or creating wrinkles.

NOTE: It is not necessary to use a vacuum bag for flat surfaces or simple contours to install DLs with adhesive, A00555. But it is recommended for minimum bubbles and wrinkles.

NOTE: For complex contoured shapes, a vacuum is required. The DL will not bond and stay around the contours during the cure.

<a> If a vacuum bag is not used, apply the DL and use a plastic squeegee, STD-821, from the center of the panel to remove creases and bubbles.

<6> Wipe off excess adhesive and sand smooth with 600 grit abrasive paper, G50339.

<7> Blow or vacuum all remaining residue.

<8> Clean with a dry or moist cloth.

<9> Repeat the cleaning process until the wipers are not dirty and the surface is visibly clean.

<10> Apply ink, C00063, ink, G02310, or coating, C00923, of the correct color to the damaged area.

NOTE: If necessary, use C25/90S thinner, C00662, for proper viscosity adjustments. Tap water is acceptable for the ink, G02310. Cab-O-Sil HS-5 Silica Powder, G50693 can also be added to provide for filling properties.

<11> Allow the ink or paint to dry to room temperature for 15 minutes minimum.

<12> Use coating, C50127, to reduce the gloss or match the appearance of the surrounding rework area.

(m) Do these steps for small area minor DL edge delaminations of less than 3 in. (7.6 cm) in diameter within the periphery of the panel:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Apply adhesive, A00555, to the delaminated area of the panel.

NOTE: It is not necessary to use a vacuum bag for flat surfaces or simple contours to install DLs with adhesive, A00555. But it is recommended for minimum bubbles and wrinkles.

NOTE: For complex contoured shapes, a vacuum is required. The DL will not bond and stay around the contours during the cure.

a) If a vacuum bag is not used, apply the DL and use a plastic squeegee, STD-821, from the center of the panel to remove creases and bubbles.

2) Reapply the laminate to the adhesive coated panel.

NOTE: Make sure that you avoid trapping air or creating wrinkles.

3) Use a vacuum bag, STD-94, with a minimum pressure of 20 in/Hg (67.7 kPa) to pull the flexible DL onto the panel surface.

4) Let the part cure.

NOTE: Follow the predetermined cure cycle time that was used before to provide the bondline temperature at 170°F (76.7°C).

5) Cool the assembly to below 90°F (32.2°C) before removing the vacuum.

H. Decorative Laminate Installation (pressure sensitive adhesive-backed)

NOTE: Use this task to apply laminate to non-acoustical (not perforated) panels with flat or simple contours.

SUBTASK 25-00-00-100-001



WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

I

(1) Do these steps to install the laminate to the base panel.

(a) Clean the area with a clean cotton wiper, G00034, that is wet with Butyl Carbitol solvent, B01027.

(b) Dry the area with a clean cotton wiper, G00034.

(c) Remove the release paper from the laminate you want to apply.

(d) Apply the laminate.

NOTE: Make sure that the pattern is in the correct position. If the patterns are not aligned, the installation will not look satisfactory.

(e) Rub the laminate, starting from the center, until the bond is satisfactory and you cannot see bubbles.

(f) Do these steps with a vacuum bag, STD-94, to make sure that the laminate touches all of the panel:

1) Use the maximum vacuum possible that will not cause damage to the panel.



CAUTION

DO NOT LET PRESSURE SENSITIVE ADHESIVES GET BELOW 55F BEFORE THE END OF THE 24 HOUR CURE. IF YOU DO NOT OBEY, IT CAN CAUSE DELAMINATION AND BUBBLES.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(CAUTION PRECEDES)

CAUTION BE CAREFUL WHEN CURING THE PANEL FOR ONLY 8-12 HOURS AT ROOM TEMPERATURE. DELAMINATION AND DAMAGE TO THE FLAT PANEL CAN OCCUR.

2) Cure the laminate for 24 hours at room temperature (75 ±15°F (24 ±8°C)) for parts with contours and flat panels.
   a) For faster cures, cure the laminate for 2 hours at 120°F (49°C).
   b) If the part is a flat panel, it is optional to cure the laminate at room temperature for 8-12 hours.
3) If the temperature is above 90°F (32°C), let the part cool to 90°F (32°C) before you remove the vacuum pressure.

NOTE: At temperatures above 90°F (32°C) the adhesive cannot be fully hardened.

NOTE: Vacuum bagging is necessary for good adhesion of Pressure Sensitive Adhesive (PSA)-backed DLs.

——— END OF TASK ———

TASK 25-00-00-300-803

5. Repair for Nomex Honeycomb Sandwich Panels with a Decorative Cover

A. General

(1) This task gives instructions to repair damage that went through the Decorative Laminate (DL) into the honeycomb sandwich panels.

(2) The area to be repaired must be smaller than 100 in^2 (645.2 cm^2). If the area to be repaired is larger than 100 in^2 (645.2 cm^2) you must replace the part.

(3) The repairs in this procedure are not effective for the panels in the cargo compartment. Refer to CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS, PAGEBLOCK 50-10-01/801 for the applicable repair.

B. References

Reference	Title
50-10-01 P/B 801	CARGO COMPARTMENT LINING AND FLOOR PANEL - REPAIRS

C. Tools/Equipment

Reference	Description
STD-94	Bag - Vacuum

D. Consumable Materials

Reference	Description	Specification
A00273	Adhesive - Epoxy Polyamide, 2 Part, Natural Colored	BMS5-126 Type II Class 1
A00693	Rubber - Silicone Casting - RTV 41	
A01052	Rubber - Silicone Casting - RTV 61	
B00102	Abrasive - Aluminum Oxide Coated Cloth	
B01027	Solvent - Butyl Carbitol (Dow Chemical - E-Series Glycol Ethers)	BAC5750
C00063	Ink - Screen Printing, Pigmented	BMS10-73 Type I

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
C00368	Ink - Screen Printing, Clear	BMS10-73 Type II
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)
G01288	Tape - Carpet	BMS5-133
G50400	Resin - Fiberglass Layup, Short Worklife, Non-Brominated	BMS8-201 Type IV (Supersedes BMS8-201 Type II)

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Repair for Flat Panels or Simple Contoured Panels with Large Radii Bead

SUBTASK 25-00-00-340-032

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

I

(1) Use these steps to make a silicone embossing pad of the surface that is adjacent to the area you will repair:

(a) Clean the area with a clean cotton wiper, G00034, that is wet with Butyl Carbitol solvent, B01027.

(b) Dry the area with a clean cotton wiper, G00034.

(c) Make a frame, approximately ⅜ in. (9.5 mm) wide by ½ in. (12.7 mm) high, around the clean surface.

NOTE: Use wood, clay, or high temperature vacuum sealant tape for the frame.

(d) Apply a thin layer of prepared silicone RTV 41 rubber, A00693, or RTV 61 rubber, A01052, on the textured surface in the frame with a brush.

NOTE: Almost all brands, types, or colors of castable silicone rubber are satisfactory, but not the dark red types which contain finely divided iron oxide. XIAMETER, from Dow Corning, RTV Silicone Moldmaking Materials and Momentive Performance Materials RTV Silicone Rubber Compounds are also preferred. Prepare the silicone with the manufacturer's instructions.

(e) Pour the remaining RTV 41 rubber, A00693, or RTV 61 rubber, A01052, on the brushed surface until it is ¼ in. (6.4 mm) thick.

NOTE: One pound of prepared silicone rubber will make a 10 in. (25.4 cm) by 10 in. (25.4 cm) by ¼ in. (6.4 mm) replica.

1) Let the silicone cure at room temperature for 48 hours.

(f) When the silicone is dry, remove the embossed pad from the surface.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-340-033

(2) Attach a template with the correct hole diameter on the damaged area with the carpet tape, G01288.

(a) Use the hole saw to remove the damaged area.

1) Use a guard to make sure that you do not cut the aft surface of the panel.

SUBTASK 25-00-00-340-034

(3) Mix the adhesive, A00273.

(a) If the adhesive is a four-component system, do the steps that follow:

1) Mix 80 parts (by weight) of Epon 828 or DER 331 with 20 parts (by weight) Heloxy 68 to make component A.

2) Mix 50 parts (by weight) of Versamid 115 with 50 parts (by weight) of Versamid 125 to make component B.

3) Mix equal parts (by weight) of components A and B to make the adhesive mixture.

SUBTASK 25-00-00-340-035

(4) Bond a piece of DL of the correct color, design and texture to a piece of foam with the adhesive mixture.

NOTE: The foam thickness must be the same thickness as the honeycomb core from the damaged area.

(a) Let the adhesive cure.

SUBTASK 25-00-00-340-036

(5) Attach a template to a piece of foam with the carpet tape, G01288.

NOTE: The hole diameter of the foam must equal the inner diameter of the cutter.

SUBTASK 25-00-00-340-037

(6) Cut a repair plug from the piece of foam.

SUBTASK 25-00-00-340-038

(7) Rub the repair plug with abrasive cloth, B00102, paper (120 to 200 grit) if it is necessary to get a satisfactory fit.

SUBTASK 25-00-00-340-039

(8) Bond the repair plug in the hole with the adhesive, A00273, mixture.

NOTE: Use the minimum quantity possible to get a satisfactory bond.

SUBTASK 25-00-00-340-040

(9) Fill the clearance around the repair plug with the adhesive, A00273, mixture.

NOTE: Apply more than is necessary to make sure that the clearance is fully filled. The unwanted material is removed in the following step.

SUBTASK 25-00-00-340-041

(10) Let the adhesive, A00273, mixture cure.

SUBTASK 25-00-00-950-001

(11) Apply the Scotch Flatback Masking Tape 250, G00270, to the area around the repair.

SUBTASK 25-00-00-340-042

(12) Rub the area with 240 to 320 grit abrasive cloth, B00102, paper until it is smooth and level with the adjacent surfaces.

SUBTASK 25-00-00-370-012

(13) Apply ink, C00063, or ink, C00368, of the correct color to match the adjacent area.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Let the ink dry for 15 minutes.

SUBTASK 25-00-00-340-043

(14) Apply the silicone embossing pad to the surface you repaired.

(a) Apply vacuum pressure (approximately 10 in/Hg (33.9 kPa)).

(b) Keep this configuration until the surface is cured (15 minutes) at 160°F (71.1°C).

G. Compound Curative Panel Repair

SUBTASK 25-00-00-280-004

(1) Attach a template with the correct hole diameter on the damaged area with the carpet tape, G01288.

SUBTASK 25-00-00-340-044

(2) Cut out the damaged area; go through the full thickness of the panel (non-decorative skin too).

SUBTASK 25-00-00-300-005

(3) In areas where you cannot use a template, do the steps that follow:

(a) Drill a ¼ in. (6.4 mm) hole through the damaged area.

(b) Use a hole saw with the ¼ in. (6.4 mm) pilot to remove the damaged area.

SUBTASK 25-00-00-340-045

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(4) Use these steps to make a silicone embossing pad of the surface that is adjacent to the area you will repair:

(a) Clean the area with a clean cotton wiper, G00034, that is wet with Butyl Carbitol solvent, B01027.

(b) Dry the area with a clean cotton wiper, G00034.

(c) Make a frame, approximately ⅜ in. (9.5 mm) wide by ½ in. (12.7 mm) high, around the clean surface.

NOTE: Use wood, clay, or high temperature vacuum sealant tape for the frame.

(d) Apply a thin layer of prepared silicone RTV 41 rubber, A00693, or RTV 61 rubber, A01052, on the textured surface in the frame with a brush.

NOTE: Almost all brands, types, or colors of castable silicone rubber are satisfactory, but not the dark red types which contain finely divided iron oxide. XIAMETER, from Dow Corning, RTV Silicone Moldmaking Materials and Momentive Performance Materials RTV Silicone Rubber Compounds are also preferred. Prepare the silicone with the manufacturer's instructions.

(e) Pour the remaining silicone RTV 41 rubber, A00693, or RTV 61 rubber, A01052, on the brushed surface until it is ¼ in. (6.4 mm) thick.

NOTE: One pound of prepared silicone rubber will make a 10 in. (25.4 cm) by 10 in. (25.4 cm) by ¼ in. (6.4 mm) replica.

1) Let the silicone cure at room temperature for 48 hours.

(f) When the silicone is dry, remove the embossed pad from the surface.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-340-046

(5) Put the silicone embossing pad over the hole in the decorative face of the panel.

SUBTASK 25-00-00-340-047

(6) Hold the texture blanket in the correct position with weights or a vacuum bag, STD-94.

(a) In areas where you cannot use a texture blanket, seal the hole with Scotch Flatback Masking Tape 250, G00270.

SUBTASK 25-00-00-340-048

WARNING DO NOT GET THE RESIN IN YOUR MOUTH, EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES. PUT ON PROTECTIVE SPLASH GOGGLES AND GLOVES. THE RESIN CAN CAUSE INJURIES TO PERSONNEL.

(7) Fill the hole from the non-decorative side of the panel with resin, G50400.

SUBTASK 25-00-00-340-049

(8) Let the adhesive cure at room temperature for 24 hours, or at 140°F (60.0°C) for 2 hours.

SUBTASK 25-00-00-020-008

(9) Remove the silicone embossing pad or the tape.

SUBTASK 25-00-00-370-013

(10) Apply ink, C00063, or ink, C00368, of the correct color.

SUBTASK 25-00-00-370-014

(11) Let the ink dry for 15 minutes.

SUBTASK 25-00-00-340-050

(12) Apply the silicone embossing pad to the repaired surface, if it is possible.

(a) Apply vacuum pressure (approximately 10 in/Hg (33.9 kPa)).

SUBTASK 25-00-00-340-051

(13) Let the surface cure for about 15 minutes at 160°F (71.1°C) before you remove the embossing pad.

END OF TASK

TASK 25-00-00-300-804

6. Repair for Tedlar Covers of Aluminum Laminates

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Procedure

SUBTASK 25-00-00-300-003

(1) To repair scratches or small dents (not more than 0.050-inch (12.7 mm) depth), do the repair procedures given for Crushed-Core and Sandwich Panel Repair, TASK 25-00-00-300-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-300-805

7. Perforated Panel Repair

A. General

(1) This task gives the instructions to repair damage of not more than 1.5 in. (38.1 mm) in diameter to the following panels:

(a) A repair of acoustical panels that have damage through the decorative surface and the fiberglass screen.

(b) To apply Tedlar laminate to the surface of the acoustical panels.

B. References

Reference	Title
20-10-27-910-801	Precautions for Heat Devices (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1474	Generator - Vacuum Part #: ST9999-VBA-1 Supplier: 81205 Part #: ST9999-VBA-201 Supplier: 81205 Opt Part #: ST9999-VBA-301 Supplier: 81205
STD-442	Gun - Heat, 180 deg. F (82 deg. C) Maximum Output Temperature
STD-1080	Brush - Paint

D. Consumable Materials

Reference	Description	Specification
A00039	Adhesive - Epibond 126-A/B Epoxy Adhesive (126-A/B System)	
A00040	Resin - Self-Extinguishing Laminating - Epocast 50-A1 with Epocast 9816	BMS8-201 Type III (Long work life)
A00153	Adhesive - Low Odor, Synthetic Rubber Cement	BMS5-30
B00094	Solvent - Toluene	A-A-59107
B00102	Abrasive - Aluminum Oxide Coated Cloth	
B00148	Solvent - Methyl Ethyl Ketone (MEK)	ASTM D740
B01027	Solvent - Butyl Carbitol (Dow Chemical - E-Series Glycol Ethers)	BAC5750
C00063	Ink - Screen Printing, Pigmented	BMS10-73 Type I
C00368	Ink - Screen Printing, Clear	BMS10-73 Type II
D00147	Compound - Interior Surface Filling, Polyester Resin	BMS5-136
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00423	Film, Polyvinyl Fluoride	BMS8-98
G00450	Fabric, Flow Resistant Acoustic	BMS8-64
G01288	Tape - Carpet	BMS5-133
G02446	Laminate - Tedlar	BAC5596 Type XIII
G02480	Tape - Mylar, Clear, 3.5 mils, Maximum 16.5" Width - Permacel P-255	

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Repair Perforated Panels

SUBTASK 25-00-00-420-002

(1) Put a routing template, with a hole diameter larger than the damaged area, over the area with damage.

(2) Hold the template in place with carpet tape, G01288.

SUBTASK 25-00-00-010-001

(3) Remove the damaged area with a router.

(a) Make sure that the depth of the router does not cause damage to the screen under the decorative layer.

(b) For panels with tedlar covers, put one or two layers of Permacel P-255 tape, G02480, over the damaged area and over the perforated decorative sheet.

SUBTASK 25-00-00-340-052

(4) Remove the flow resistant fabric.

SUBTASK 25-00-00-340-053

(5) Mix the adhesive as follows:

(a) Mix (by weight) 60 to 65 parts of resin, A00040, with 100 parts of Epibond 126-A/B epoxy adhesive, A00039.

WARNING DO NOT GET SOLVENTS IN YOUR MOUTH, EYES, OR SKIN. DO NOT BREATHE FUMES FROM SOLVENTS. REFER TO PRODUCT MATERIAL SAFETY DATA SHEETS (MSDS) AND LOCAL REQUIREMENTS FOR PROPER HANDLING. SOLVENTS ARE HAZARDOUS MATERIALS AND MAY BE FLAMMABLE OR HARMFUL TO THE ENVIRONMENT.

1) Mix (by volume) one part of the adhesive mixture with one part of solvent, B00148, and one part of solvent, B00094.

SUBTASK 25-00-00-340-054

(6) Cut a piece of flow-resistant fabric, G00450, that is larger than the damaged area.

SUBTASK 25-00-00-340-055

(7) Bond the flow-resistant fabric, G00450, to a piece of perforated film, G00423, with the adhesive mixture.

SUBTASK 25-00-00-340-056

(8) Use a routing template to cut a patch from the perforated sheet you made in the previous step.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-340-057

(9) Rub the patch with abrasive cloth, B00102, paper (240 to 400 grit) to make sure the patch fits correctly in the cutout.

(10) Make two marks on the patch and on the adjacent surface.

NOTE: This will help you install the patch in the position that it has the best fit.

SUBTASK 25-00-00-950-002

(11) Apply masking Scotch Flatback Masking Tape 250, G00270, to the decorative side of the patch and around the cutout area.

SUBTASK 25-00-00-110-012

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(12) Clean the surface with a cotton wiper, G00034, that is moist with Butyl Carbitol solvent, B01027.

(13) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-340-058

(14) Apply a heavy layer of the mixed adhesive with a paint brush, STD-1080, on the mating surfaces of the patch and the cutout.

(a) Let the adhesive dry for 10 minutes.

SUBTASK 25-00-00-340-059

(15) Remove the masking tape from the patch and panel.

SUBTASK 25-00-00-340-060

(16) Apply the carpet tape, G01288, to the decorative side of the patch and to the area around the cutout.

NOTE: The patch marks you made must show.

SUBTASK 25-00-00-340-061

(17) Put the patch on a piece of transparent plexiglass which is slightly larger than the patch.

(18) Put the flow-resistant fabric between the patch and the fiberglass screen.

SUBTASK 25-00-00-340-062

(19) Put the patch into the cutout.

(20) Look through the plexiglass to align the marks that you made.

SUBTASK 25-00-00-340-063

(21) Apply pressure to the plexiglass, as necessary.

(a) Make sure that the patch is level with the adjacent surfaces.

SUBTASK 25-00-00-340-064

(22) Let the patch cure for 24 hours at room temperature, or for 3 hours at 115°(46.1C) to 125° F (51.7°C).

SUBTASK 25-00-00-340-065

(23) Put the compound, D00147, in all of the cracks that you can see.

(a) Let the compound, D00147, cure.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-340-066

(24) Apply masking Scotch Flatback Masking Tape 250, G00270, to the area around the repair.

SUBTASK 25-00-00-340-067

(25) Rub the compound, D00147, with 240 to 320 grit abrasive cloth, B00102, paper until it is smooth and level with the adjacent surfaces.

SUBTASK 25-00-00-370-015

(26) Apply ink, C00063, or ink, C00368, of the correct color to match the adjacent area.

(a) Let the ink dry.

SUBTASK 25-00-00-340-068

(27) If it is necessary, drill holes to make perforations.

NOTE: Use a piece of perforated material for a template.

G. Apply Decorative Tedlar to Acoustical (Perforated) Panels

SUBTASK 25-00-00-020-009

(1) Remove the trim strips from the panel.

SUBTASK 25-00-00-120-004

(2) Rub the area which you will apply the adhesive with abrasive cloth, B00102, paper until the area is not glossy.

SUBTASK 25-00-00-110-013

WARNING DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(3) Clean the area with a cotton wiper, G00034, that is moist with Butyl Carbitol solvent, B01027.

SUBTASK 25-00-00-100-002

(4) Dry the area with a clean cotton wiper, G00034.

SUBTASK 25-00-00-110-014

WARNING DO NOT GET SOLVENTS IN YOUR MOUTH, EYES, OR SKIN. DO NOT BREATHE FUMES FROM SOLVENTS. REFER TO PRODUCT MATERIAL SAFETY DATA SHEETS (MSDS) AND LOCAL REQUIREMENTS FOR PROPER HANDLING. SOLVENTS ARE HAZARDOUS MATERIALS AND MAY BE FLAMMABLE OR HARMFUL TO THE ENVIRONMENT.

(5) Mix (by volume) one part adhesive, A00153, adhesive with one part solvent, B00148.

SUBTASK 25-00-00-340-069

(6) Carefully apply the mixture to the surface with a paint brush, STD-1080.

SUBTASK 25-00-00-370-016

CAUTION MAKE SURE THAT THE SURFACE IS FULLY DRY BEFORE YOU INSTALL THE TEDLAR LAMINATE. IF YOU INSTALL THE TEDLAR LAMINATE TO A WET SURFACE, YOU WILL NOT GET A SATISFACTORY BOND. DAMAGE TO EQUIPMENT CAN OCCUR.

(7) Let the surface dry at room temperature for a minimum of 2 hours.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-210-003

(8) Put the decorative tedlar laminate, G02446, in position.

NOTE: Use masking Scotch Flatback Masking Tape 250, G00270, to hold the decorative tedlar laminate in position. If you use perforated tedlar for the repair, align the holes in the tedlar with the holes in the panel you will cover.

(a) Make sure that the decorative tedlar laminate has the correct color and pattern.

SUBTASK 25-00-00-880-003

CAUTION

BE CAREFUL WHEN YOU APPLY HEAT NEAR MATERIALS THAT CAN BURN. THE TEMPERATURE OF THE TEDLAR MUST NOT BE MORE THAN 200° F (93.3° C) OR THE TEMPERATURE AT WHICH THE TEDLAR DISTORTS, WHICHEVER IS LOWER. TOO MUCH HEAT CAN CAUSE DAMAGE TO THE TEDLAR.

(9) Use a heat 180 deg. F (82 deg. C) maximum output temperature heat gun, STD-442, to increase the temperature of the tedlar laminate

NOTE: Make sure the temperature remains constant across the surface of the laminate. Refer to (TASK 20-10-27-910-801) for cautions to obey when you use heat guns.

SUBTASK 25-00-00-340-070

(10) Use a vacuum generator, SPL-1474, to make sure the laminate touches all of the panel:

(a) Use the maximum vacuum possible that will not cause damage to the panel.

(b) Cure the laminate for 24 hours at room temperature, for 2 hours at 120° F (48.9°C), or for 30 minutes at 180° F (82.2°C).

(c) Let the part cool to 90° F (32.2°C) before you remove the vacuum pressure.

——— END OF TASK ———

TASK 25-00-00-340-801

8. Repair for Polycarbonate (Lexan), Ultem, and Declar Plastics

A. General

(1) The following data gives instructions to repair cracks and gouges in decorative and non-decorative plastics.

(2) Make sure that the repaired area does not exceed 25% of the surface area and is smaller than 100 in^2 (645 cm^2). If the area is larger than 100 in^2 (645 cm^2) the part must be replaced.

B. References

Reference	Title
25-00-00-100-801	Equipment/Furnishings - Cleaning (P/B 701)
25-00-00-370-801	Equipment/Furnishings - Painting (P/B 701)

C. Consumable Materials

Reference	Description	Specification
A00028	Adhesive - Modified Epoxy For Rigid PVC, Foam Cored Sandwiches	BAC5010 Type 70 (BMS5-92 Type 1)
A00112	Hardener - Adhesive - Hysol 3561	
A50005	Resin - Adhesive, Flame-Out Casting - Hysol EE1067 (use until stock depleted)	

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
A50186	Adhesive - For Bonding Decorative Laminates to Interior Parts and Core Splicing for Exterior Parts	BMS5-127 Type I
A50541	Tape - Cargo Lining Joint Seal	BMS5-146 Type II Class 2 Grade A
A50561	Resin - Adhesive, Loctite EA 9365FST AERO	
B00102	Abrasive - Aluminum Oxide Coated Cloth	
C00040	Coating - Interior Decorative Urethane Topcoat, Semigloss	BMS10-83 Type II
C00302	Coating - Interior Decorative Water Emulsion Paint	BMS10-55 Type I
G50172	Fabric - Woven Glass Reinforcements for Laminating Plastics, Style 181	BMS9-3 Type H
G50173	Fabric - Glass Fabric Reinforcements For Laminated Plastics Products	BMS9-3 Type H-3 Style 7781
G50593	Fabric - Woven Glass Reinforcements For Laminating Plastics	BMS9-3 Type H-2 Class 7

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Repair the Cracked Areas

SUBTASK 25-00-00-340-071

(1) Drill a 1/16 in. (2 mm) diameter hole at each end of the crack.

SUBTASK 25-00-00-340-086

(2) Clean the parts (TASK 25-00-00-100-801).

(a) Thoroughly sand with abrasive cloth, B00102 (80 to 100 grit), the surface to be reinforced and remove all gloss.

(b) Reclean the surface (TASK 25-00-00-100-801).

SUBTASK 25-00-00-340-075

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM SOLVENTS. PUT ON A RESPIRATOR, PROTECTIVE SPLASH GOGGLES, AND GLOVES WHEN YOU USE SOLVENTS. KEEP THE SOLVENTS AWAY FROM SPARKS, FLAME, AND HEAT. SOLVENTS ARE POISONOUS AND FLAMMABLE. SOLVENTS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(3) Use one of the two methods described below to accomplish the reinforcement.

NOTE: For decorative surfaces, pigments in accordance with BAC5568 Section 5.1.e may be added to the reinforcement resin to match the surrounding surface.

(a) Method 1:

1) Mix one of these mixtures per the manufacturer's instructions:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

- Hysol EE1067 resin, A50005, with Hysol 3561 hardener, A00112, mixture or Loctite EA 9365FST AERO resin, A50561.

NOTE: If using Loctite EA 9365FST AERO resin, A50561, gel time the usable work life of the mixed resin at room temperature is five hours. It is permissible to accelerate the gel time by exposing the reinforced part to no higher than 120°F (49°C) for a minimum of 135 minutes. If accelerated gel time is not used, then the part must sit undisturbed for a minimum of 24 hours before handling or additional operations are performed.

2) Fill the crack with the repair resin.

3) Let the repair resin cure until it is hard.

NOTE: If using Hysol EE1067 resin, A50005, with Hysol 3561 hardener, A00112, resin must be allowed to cure for a minimum of 24 hours at ambient temperature greater than 67°F (19°C). Alternatively, polyetherketone ketone (Declar) materials may be allowed to cure for a minimum of 3 hours at 140°F (60°C) to 160°F (71°C).

NOTE: If using Loctite EA 9365FST AERO resin, A50561, the resin must be allowed to cure for a minimum of 7 days at ambient temperature greater than 67°F (19°C).

4) Apply one of these materials fabric, G50172, fabric, G50173, or fabric, G50593, that is soaked with the repair resin to make the repair stronger.

a) If it is necessary to repair a decorative part, put the fabric on the side that is not decorative.

NOTE: The glass fabric layers must be at least as thick as the part where the crack was.

b) Make the glass fabric 0.5 in. (12.7 mm) smaller around the edge for each layer that is applied.

NOTE: If the crack is at or near an edge, it is not necessary to make each layer smaller.

5) Remove all the unwanted resin.

6) Rub the area with abrasive cloth, B00102, until the repair is smooth.

7) Apply the emulsion coating, C00302, to the area.

a) If it is necessary to paint the part out of the airplane, use coating, C00040, (TASK 25-00-00-370-801).

(b) Method 2:

1) Fill the crack with adhesive, A50186, or adhesive, A00028.

a) Mix and cure per manufacturers instructions.

2) After the adhesive is cured, cover the crack with fiberglass tape, A50541.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

a) Apply one or more layers of fiberglass tape necessary to achieve minimum thickness requirement as defined on the applicable engineering drawing.

NOTE: Application of tape must include sufficient force to ensure intimate contact between part and tape, but must not be so high as to risk cracking or breaking the part. Tape will reach full adhesion at 24 hours after application. Parts may be handled immediately after tape application.

NOTE: Tape must not be applied in environments where the ambient temperature is below 50°F (10°C). Do not apply solvents to the tape, or abrade fiberglass tape in between application layers. No solvents or solvent based materials may be applied immediately next to the tape until 24 hours after tape application.

F. Repair the Gouged Areas

SUBTASK 25-00-00-340-083

(1) If there is not a dent around the gouge, make the gouge smooth with abrasive cloth, B00102.

SUBTASK 25-00-00-340-084

(2) If the appearance is not satisfactory after it is smooth, fill the gouge with adhesive, A50186, or adhesive, A00028.

(a) Mix and cure per manufacturers instructions.

(b) Do the steps above to repair the cracked areas.

SUBTASK 25-00-00-340-085

(3) If the surface has dents, remove the area with dents and do the repair for cracked areas.

——— END OF TASK ———

TASK 25-00-00-350-801

9. Repair Urethane Foam

A. General

(1) The task gives instructions on how to repair the urethane foam material with these alternatives:

(a) Repair the foam with a plug

(b) Repair the foam with an adhesive resin.

B. Tools/Equipment

Reference	Description
STD-821	Squeegee - Plastic

C. Consumable Materials

Reference	Description	Specification
A00188	Adhesive - Urethane, Two Component	BMS5-105 Type V
A01021	Compound - Honeycomb Edge Filling & Potting, Epoxy Based, 2 Part, RT Cure (12-25 Min Gel)	BMS5-28 Type 18
D00091	Oil - General Purpose, Low Temperature, Lubricating	MIL-PRF-7870 (NATO O-142)
G00111	Sheet - Mylar	
G01288	Tape - Carpet	BMS5-133

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Repair the Foam with a Plug

SUBTASK 25-00-00-350-013

(1) Remove the damage with a cork bore or an equivalent tool.

NOTE: The tool size must be equal to the size of the damaged area, or up to ½ in. (12.7 mm) larger in diameter.

SUBTASK 25-00-00-350-014

(2) Use the same tool to cut a repair plug from foam to fit in damaged area.

SUBTASK 25-00-00-350-015

(3) Apply a layer of adhesive, A00188, to each surface of the repair plug and damaged area.

SUBTASK 25-00-00-350-016

(4) Let adhesive, A00188, dry until tacky.

NOTE: Do not stress the adhesive bond for 24 hours.

SUBTASK 25-00-00-420-003

(5) Push the repair plug into the damaged area with hand pressure.

F. Repair the Foam with an Adhesive Resin

SUBTASK 25-00-00-350-017

(1) Remove the damage with a cork bore or equivalent tool.

NOTE: The tool size must be equal to the size of the damaged area, or up to ½ in. (12.7 mm) larger in diameter.

SUBTASK 25-00-00-350-018

(2) Use the manufacturers instructions to mix potting compound, A01021.

SUBTASK 25-00-00-350-019

(3) Fill the area fully with potting compound, A01021.

SUBTASK 25-00-00-350-020

(4) Put a sheet of mylar sheet, G00111, over potting compound, A01021.

NOTE: Potting compound, A01021, must go 2 in. (50.8 mm) beyond the edge of the filled area all around.

SUBTASK 25-00-00-350-021

(5) Put a small portion of the oil, D00091, on the top surface of mylar sheet, G00111.

SUBTASK 25-00-00-350-022

(6) Start at the center of the repair and rub potting compound, A01021, with a plastic squeegee, STD-821, until you get the shape necessary.

SUBTASK 25-00-00-350-023

(7) Apply carpet tape, G01288, to hold mylar sheet, G00111, in position.

SUBTASK 25-00-00-350-024

(8) Let potting compound, A01021, cure for 1 hour at room temperature and then 5 hours at 115°F (46°C).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-350-025

(9) Carefully remove mylar sheet, G00111, after potting compound, A01021, is cured.

END OF TASK

TASK 25-00-00-350-802

10. Repair Aluminum Trim

A. General

(1) This procedure gives instructions to repair aluminum trim.

B. References

Reference	Title
20-10-27-910-801	Precautions for Heat Devices (P/B 201)

C. Tools/Equipment

Reference	Description
STD-6554	Gun - Heat

D. Consumable Materials

Reference	Description	Specification
A00028	Adhesive - Modified Epoxy For Rigid PVC, Foam Cored Sandwiches	BAC5010 Type 70 (BMS5-92 Type 1)
A00279	Adhesive - Fast-Setting Epoxy	BMS5-123 or BAC5010 Type 71
D00147	Compound - Interior Surface Filling, Polyester Resin	BMS5-136
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)
G01601	Abrasive - Aluminum Oxide Coated Cloth, 400 to 600 grit	

E. Location Zones

Zone	Area
200	Upper Half of Fuselage

F. Repair aluminum trim

SUBTASK 25-00-00-350-026

(1) Remove any fasteners from the aluminum trim if they are installed.

SUBTASK 25-00-00-020-010

(2) Remove the aluminum trim from the panel.

(a) If the trim is bonded, use a heat gun, STD-6554 to help remove the trim, (TASK 20-10-27-910-801).

1) Apply heat while pulling trim away from the panel.

2) Remove the trim progressively from one end to the other.

SUBTASK 25-00-00-840-001

(3) Restore the trim to it's original straightness and contour.

NOTE: Use metal working techniques to remove dents and straighten the trim as much as possible.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-410-001

(4) Put the trim onto the panel and reattach any fasteners.

(a) If the trim is applied with fasteners and adhesive, apply epoxy adhesive to the edge of the panel and quickly reattatch the trim with the fasteners.

(b) If the trim is applied with adhesive only, apply an epoxy adhesive to the edge of the panel and quickly position the trim.

NOTE: adhesive, A00279 has a very short working life. If more time is required for the repair, use an adhesive such as adhesive, A00028.

(c) Use Scotch Flatback Masking Tape 250, G00270 to hold the trim in the correct position until the adhesive is fully cured.

SUBTASK 25-00-00-300-004

(5) Fill any dents, gouges, or imperfections with compound, D00147 to make a crown above the ajacent area.

(a) After the compound, D00147 is hard, rub it with 400 to 600 grit abrasive cloth, G01601 to the same level as the surface of the panel.

SUBTASK 25-00-00-370-017

(6) Apply aluminum spray paint to the repaired area. Any commercially available spray paint is acceptable.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EQUIPMENT/FURNISHINGS - DDG MAINTENANCE PROCEDURES

1. General

A. This procedure has maintenance tasks for the Master Minimum Equipment List (MMEL) maintenance requirements as shown in the Dispatch Deviations Guide (DDG). These tasks are used to prepare the airplane for flight with certain systems/components inoperative.

B. This procedure also has the tasks that put the airplane back to its usual condition.

C. These are the tasks for the equipment/furnishings components:

(1) DDG 25-11-01 Flight Crew Seats Inoperative - Preparation

(2) DDG 25-11-01 Flight Crew Seats Inoperative - Restoration

(3) DDG 25-22-01 Passenger Seats Inoperative - Preparation

(4) DDG 25-22-01 Passenger Seats Inoperative - Restoration

(5) DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Preparation

(6) DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Restoration

(7) DDG 25-28-01 Storage Bins/Cabin, Galley and Lavatory Storage Compartments/Closets Inoperative - Preparation

(8) DDG 25-28-01 Storage Bins/Cabin, Galley and Lavatory Storage Compartments/Closets Inoperative - Restoration

(9) DDG 25-31-01 Galley/Cabin Waste Receptacles Access Doors/Covers Inoperative - Preparation

(10) DDG 25-31-01 Galley/Cabin Waste Receptacles Access Doors/Covers Inoperative- Restoration

(11) DDG 25-40-02 Lavatory Waste Container Flapper/Access Doors Inoperative - Preparation

(12) DDG 25-40-02 Lavatory Waste Container Flapper/Access Doors Inoperative - Restoration

(13) DDG 25-40-03 Interior Lavatory Door Ashtrays Inoperative - Preparation

(14) DDG 25-40-03 Interior Lavatory Door Ashtrays Inoperative - Restoration

(15) DDG 25-66-01 Escape Slides Inoperative - Preparation

(16) DDG 25-66-01 Escape Slides Inoperative - Restoration.

TASK 25-00-00-040-804

2. DDG 25-11-01 Flight Crew Seats Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight when a Flight Crew Seat is inoperative.

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Flight Crew Seat Recline Mechanism Deactivation

SUBTASK 25-00-00-040-015

(1) Secure the seat in an acceptable position for the affected crew member.

(a) Make sure that full travel of the seat on its track is not impaired.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-00-00-040-007

(2) Tell the flight crew of the inoperative recline mechanism.

NOTE: The seat must be satisfactory for the affected crew member.

D. Flight Crew Seat Vertical Adjustment Deactivation

SUBTASK 25-00-00-040-016

(1) Secure the seat in an acceptable position for the affected crew member.

SUBTASK 25-00-00-040-008

(2) Do one or both of these steps if it is necessary:

(a) Disconnect the vertical adjustment cable to put the seat in a fixed vertical position.

(b) Disconnect the vertical adjustment pushrod mechanism to put the seat in a fixed vertical position.

SUBTASK 25-00-00-040-009

(3) Tell the flight crew of the inoperative vertical adjustment.

NOTE: The seat must be satisfactory for the affected crew member.

E. Flight Crew Seat Armrests Deactivation

SUBTASK 25-00-00-040-010

(1) Remove the armrest or safety the armrest in an upright position.

SUBTASK 25-00-00-040-011

(2) Tell the flight crew of the inoperative armrest.

NOTE: The seat must be satisfactory for the affected crew member.

——— END OF TASK ———

TASK 25-00-00-440-804

3. DDG 25-11-01 Flight Crew Seats Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with a Flight Crew Seat inoperative.

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Flight Crew Seat Vertical Adjustment Reactivation

SUBTASK 25-00-00-420-006

(1) Do one or both of these steps if necessary:

(a) Connect the vertical adjustment cable if disconnected during deactivation.

(b) Connect the vertical adjustment pushrod mechanism if disconnected during deactivation.

D. Flight Crew Seat Armrest Reactivation

SUBTASK 25-00-00-440-005

(1) If necessary, install the armrest.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-040-805

4. DDG 25-22-01 Passenger Seats Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight when a Passenger Seat is inoperative.

B. References

Reference	Title
25-22-00-000-801	Passenger Seat Removal (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Passenger Seat Recline Mechanism Deactivation

SUBTASK 25-00-00-040-017

(1) Do these steps for an inoperative passenger seat in the upright position:

(a) Safety the seat in the upright position.

NOTE: Refer to the seat manufacturer's specifications to safety the seat in the upright position.

NOTE: The seat may be used during flight if the seat belts operate correctly.

SUBTASK 25-00-00-040-018

(2) Do these steps for an inoperative passenger seat in the reclined position:

(a) Make sure that the inoperative passenger seat does not cause a blockage to the aisle or the emergency exit.

1) If the inoperative seat does cause a blockage to an emergency exit, remove the inoperative seat (TASK 25-22-00-000-801).

2) If the inoperative seat does cause a blockage to the aisle, safety the row of seats aft of the inoperative passenger seat.

SUBTASK 25-00-00-040-019

(3) Tell the flight crew of any seats with inoperative recline mechanisms.

E. Passenger Seat Armrest Deactivation

SUBTASK 25-00-00-040-005

(1) If possible, safety the seat in the upright position.

NOTE: Refer to the seat manufacturer's specifications to safety the seat in the upright position.

SUBTASK 25-00-00-040-020

(2) Make sure that the arm rest does not cause a blockage to the aisle or the emergency exit.

(a) If the armrest does cause a blockage, remove the passenger seat (TASK 25-22-00-000-801).

SUBTASK 25-00-00-040-021

(3) Tell the flight crew of any seats with inoperative armrests.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-440-805

5. DDG 25-22-01 Passenger Seats Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with a Passenger Seat inoperative.

B. References

Reference	Title
25-22-00-400-801	Passenger Seat Installation (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Passenger Seat Reactivation

SUBTASK 25-00-00-410-002

(1) If necessary, install the passenger seat (TASK 25-22-00-400-801).

SUBTASK 25-00-00-020-012

(2) If necessary, remove the safety for the row with the inoperative passenger seat.

——— END OF TASK ———

TASK 25-00-00-040-806

6. DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight when a Flight Attendant Seat Assembly is inoperative.

B. References

Reference	Title
25-25-12-000-801	Cabin Attendant Seat Removal (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Flight Attendant Seat Assembly Deactivation

SUBTASK 25-00-00-040-001

(1) Secure the seat in the stowed position.

(a) If the flight attendant seat will not stay closed, remove the inoperative seat (TASK 25-25-12-000-801).

SUBTASK 25-00-00-040-003

(2) Notify the cabin crew of the inoperative flight attendant seat.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-440-806

7. DDG 25-25-01 Flight Attendant Seat Assembly Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with a Flight Attendants Seat inoperative.

B. References

Reference	Title
25-25-12-400-801	Cabin Attendant Seat Installation (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Flight Attendant Seat Assembly Reactivation

SUBTASK 25-00-00-410-003

(1) If necessary, install the flight attendants seat (TASK 25-25-12-400-801).

——— END OF TASK ———

TASK 25-00-00-040-807

8. DDG 25-28-01 Storage Bins/Cabin, Galley and Lavatory Storage Compartments/Closets Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight when a Storage Bin/Cabin, or Galley and Lavatory Storage Compartment/Closet is inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Compartment/Closet Deactivation

SUBTASK 25-00-00-040-024

(1) To secure the compartment door closed, do these steps:

(a) Install a DO NOT USE placard on the associated bin or compartment.

1) Do not use for storage of any item, except those permanently affixed.

NOTE: If no partitions are installed, the entire overhead storage compartment is considered one bin or compartment.

SUBTASK 25-00-00-040-014

(2) To remove the affected compartment door, do these steps:

(a) Install a DO NOT USE placard on the associated bin or compartment.

1) Do not use for storage of any item, except those permanently affixed.

NOTE: If no partitions are installed, the entire overhead storage compartment is considered one bin or compartment.

NOTE: Any emergency equipment located in the associated compartment (permanently affixed) is available for use.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-440-807

9. DDG 25-28-01 Storage Bins/Cabin, Galley and Lavatory Storage Compartments/Closets Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with a Storage Bin/Cabin, or Galley and Lavatory Storage Compartment/Closet inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-00-00-020-013

(1) If the bin or compartment was secured closed, remove any restrictions and return it to its previous configuration.

SUBTASK 25-00-00-410-004

(2) If necessary, install the bin or compartment.

SUBTASK 25-00-00-020-014

(3) If necessary, remove the DO NOT USE placards.

——— END OF TASK ———

TASK 25-00-00-040-808

10. DDG 25-31-01 Galley/Cabin Waste Receptacles Access Doors/Covers Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight when a Galley/Cabin Waste Receptacle Access Door/Cover is inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Galley/Cabin Waste Receptacle Access Door/Cover Deactivation

SUBTASK 25-00-00-210-004

(1) Verify that the associated waste container is empty.

SUBTASK 25-00-00-040-013

(2) Safety the galley/cabin waste receptacle access door/cover to prevent waste from being deposited into the container.

——— END OF TASK ———

TASK 25-00-00-440-808

11. DDG 25-31-01 Galley/Cabin Waste Receptacles Access Doors/Covers Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with a Galley/Cabin Waste Receptacle Access Door/Cover inoperative.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Galley/Cabin Waste Receptacles Access Door/Cover Reactivation

SUBTASK 25-00-00-020-015

(1) Restore the deactivated galley/cabin waste receptacle access door/cover.

——— END OF TASK ———

TASK 25-00-00-040-809

12. DDG 25-40-02 Lavatory Waste Container Flapper/Access Doors Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for flight when a Lavatory Waste Container Flapper/Access Door is inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Lavatory Waste Container Flapper/Access Door Deactivation

SUBTASK 25-00-00-170-003

(1) Empty the associated lavatory waste receptacle.

SUBTASK 25-00-00-040-022

(2) Safety and secure the flapper/access door closed in a manner that will prevent waste from being deposited into the receptacle.

SUBTASK 25-00-00-040-023

(3) Close and lock the associated lavatory door.

——— END OF TASK ———

TASK 25-00-00-440-809

13. DDG 25-40-02 Lavatory Waste Container Flapper/Access Doors Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with a Lavatory Waste Container Flapper/Access Door inoperative

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Lavatory Waste Container Flapper/Access Door Reactivation

SUBTASK 25-00-00-440-004

(1) Unlock the associated lavatory door.

SUBTASK 25-00-00-020-016

(2) Restore the deactivated lavatory waste container flapper/access cover.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-00-00-040-811

14. DDG 25-40-03 Interior Lavatory Door Ashtrays Inoperative - Preparation

A. General

(1) This task gives the maintenance steps that prepare the airplane for flight with the interior lavatory door ashtrays inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Interior Lavatory Door Deactivation

SUBTASK 25-00-00-040-027

(1) If the interior lavatory door ashtrays do not operate, do these steps:

(a) Close and lock the associated lavatory door.

(b) Install an INOPERATIVE - DO NOT ENTER placard on the lavatory door.

NOTE: Lavatory use or inspections by crew members is allowed.

——— END OF TASK ———

TASK 25-00-00-440-811

15. DDG 25-40-03 Interior Lavatory Door Ashtrays Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with an interior lavatory door ashtrays inoperative.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Interior Lavatory Door Restoration

SUBTASK 25-00-00-440-007

(1) Remove the INOPERATIVE - DO NOT ENTER placard from the lavatory door.

SUBTASK 25-00-00-440-006

(2) Unlock the lavatory door.

——— END OF TASK ———

TASK 25-00-00-040-812

16. DDG 25-66-01 Escape Slides Inoperative - Preparation

A. General

(1) This task gives the maintenance steps which prepare the airplane for the flight with an escape slide inoperative.

B. References

Reference	Title
52-11-00-860-802	Close the Door with the Exterior Handle (P/B 201)
52-11-00-860-804	Close the Door with the Interior Handle (P/B 201)
52-13-00-860-802	Close the AFT Door with the Exterior Handle (P/B 201)
52-13-00-860-804	Close the AFT Door with the Interior Handle (P/B 201)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Title
52-41-00-860-802	Close the Galley Service Door with the Exterior Handle (P/B 201)
52-41-00-860-804	Close the Galley Service Door with the Interior Handle (P/B 201)

C. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

D. Prepare for Deactivation

SUBTASK 25-00-00-860-001

(1) Close and latch the door with inoperative escape slide.

(a) Do one of these tasks to close the door from the inside of the airplane:

1) Close the Door with the Interior Handle, TASK 52-11-00-860-804.

2) Close the AFT Door with the Interior Handle, TASK 52-13-00-860-804.

3) Close the Galley Service Door with the Interior Handle, TASK 52-41-00-860-804.

(b) Do one of these tasks to close the door from the outside of the airplane:

1) Close the Door with the Exterior Handle, TASK 52-11-00-860-802.

2) Close the AFT Door with the Exterior Handle, TASK 52-13-00-860-802.

3) Close the Galley Service Door with the Exterior Handle, TASK 52-41-00-860-802.

E. Escape Slide Deactivation

SUBTASK 25-00-00-480-001

(1) Install a barrier strap or rope to prevent access to the door with inoperative escape slide.

(a) Install a “DO NOT USE” placard on the door.

(b) Make sure that the barrier strap, rope and placard are a different color from the interior of the airplane.

SUBTASK 25-00-00-480-002

(2) Put a cover on the emergency exit signs unique to the door with inoperative escape slide to remove them from view.

SUBTASK 25-00-00-480-003

(3) Put a cover on the floor proximity lights unique to the door with inoperative escape slide to remove them from view.

——— END OF TASK ———

TASK 25-00-00-440-812

17. DDG 25-66-01 Escape Slides Inoperative - Restoration

A. General

(1) This task puts the airplane back to its usual condition after operation with an escape slide inoperative.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Escape Slide Activation

SUBTASK 25-00-00-080-001

(1) Remove the barrier strap or rope from the door.

(a) Remove the “DO NOT USE” placard.

SUBTASK 25-00-00-080-002

(2) Remove the cover from the floor proximity lights.

SUBTASK 25-00-00-080-003

(3) Remove the cover from the emergency exit signs.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT SEATS - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A detailed inspection of the captain, first officer, and observer seat harness

(2) An operational check of the captain, first officer, and observer seat harness and inertia reel.

TASK 25-11-00-200-801

2. Captain, First Officer, and Observer Seat Harness Detailed Visual Inspection

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

B. Captain, First Officer, and Observer Seat Harness Detailed Visual Inspection

SUBTASK 25-11-00-210-001

(1) Do a detailed visual inspection of the restraint harness straps.

(a) Make sure that the straps are not damaged.

1) Look for loose stitching, cuts, tears, fraying, and discoloration.

SUBTASK 25-11-00-210-002

(2) Do a detailed visual inspection of the restraint harness fittings.

(a) Make sure that the fittings are not bent, loose, or corroded.

SUBTASK 25-11-00-210-003

(3) Do a detailed visual inspection of the restraint harness securing hardware.

(a) Make sure that the securing hardware is not bent, loose, or corroded.

——— END OF TASK ———

TASK 25-11-00-200-802

3. Captain, First Officer, and Observer Seat Harness and Inertia Reel Operational Check

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

B. Procedure

SUBTASK 25-11-00-200-001

(1) Do the steps that follow to test the restraint harness and inertia reel:

(a) Make sure the harness reel lock control is in the unlocked position.

(b) Quickly pull one shoulder strap in the forward direction.

1) Make sure the inertia reel locks.

2) Make sure the strap does not extend.

(c) Release the pressure on the strap.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure the inertia reel releases the strap.

(d) Quickly pull the other shoulder strap in the forward direction.

NOTE: Steps to check the second shoulder strap inertia reel and harness reel lock are only applicable to the captain and first officer seats.

1) Make sure the inertia reel locks.

2) Make sure the strap does not extend.

(e) Release the pressure on the strap.

1) Make sure the inertia reel releases the strap.

(f) Pull one of the shoulder straps slowly out of the seat back as far as possible.

(g) Move the harness reel lock control to the locked position.

(h) Release the shoulder strap until it retracts approximately two inches at a time, until it is fully retracted.

1) At each stage, pull on the shoulder to make sure the strap locks.

(i) Move the harness reel lock control to the unlocked position.

(j) Pull the other shoulder strap slowly out of the seat back as far as possible.

(k) Move the harness reel lock control to the locked position.

(l) Release the shoulder strap until it retracts approximately two inches at a time until it is fully retracted.

1) At each stage, pull on the shoulder strap to make sure the strap locks.

(m) Put the harness reel lock control in the unlocked position.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAPTAIN AND FIRST OFFICER SEAT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the captain and first officer seat

(2) An installation of the captain and first officer seat.

TASK 25-11-01-000-801

2. Captain and First Officer Seat Removal

(Figure 401)

A. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

B. Captain and First Officer Seat Removal

SUBTASK 25-11-01-010-001

(1) Move the seat [1] to its fully aft and outboard position.

(a) Pull up on the horizontal control handle [2] to move the seat [1].

SUBTASK 25-11-01-030-001

(2) Do these steps to remove the stops [9] from the front of the seat tracks:

(a) Remove the bolt [8], washers [7], and nut [6].

(b) Remove the stops [9].

SUBTASK 25-11-01-020-001


(3) Move the seat [1] forward until the rollers are free from the seat tracks.


SUBTASK 25-11-01-020-002

(4) Lift the seat [1] and remove it from the airplane.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

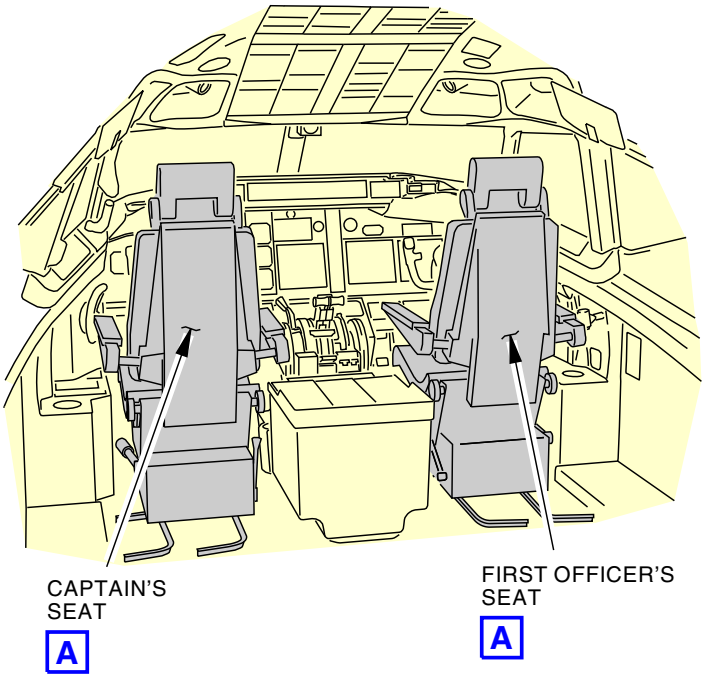


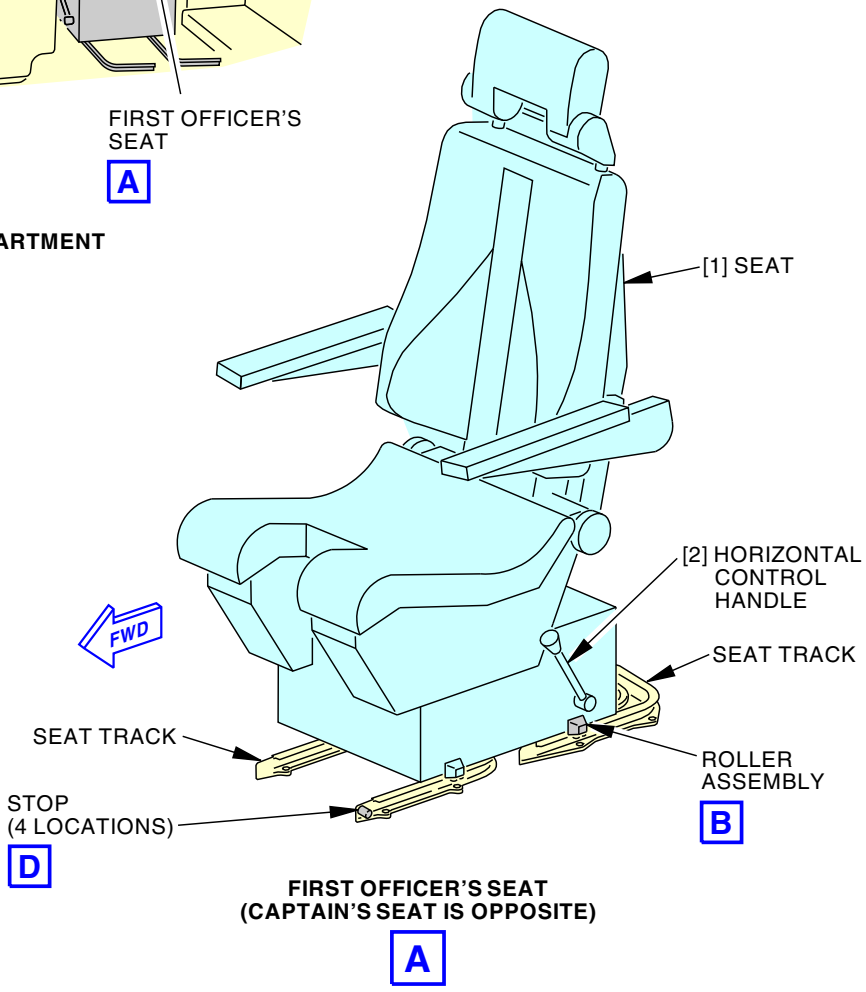

2411817 S00061529181_V1


Captain's and First Officer's Seat Installation
Figure 401/25-11-01-990-804 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

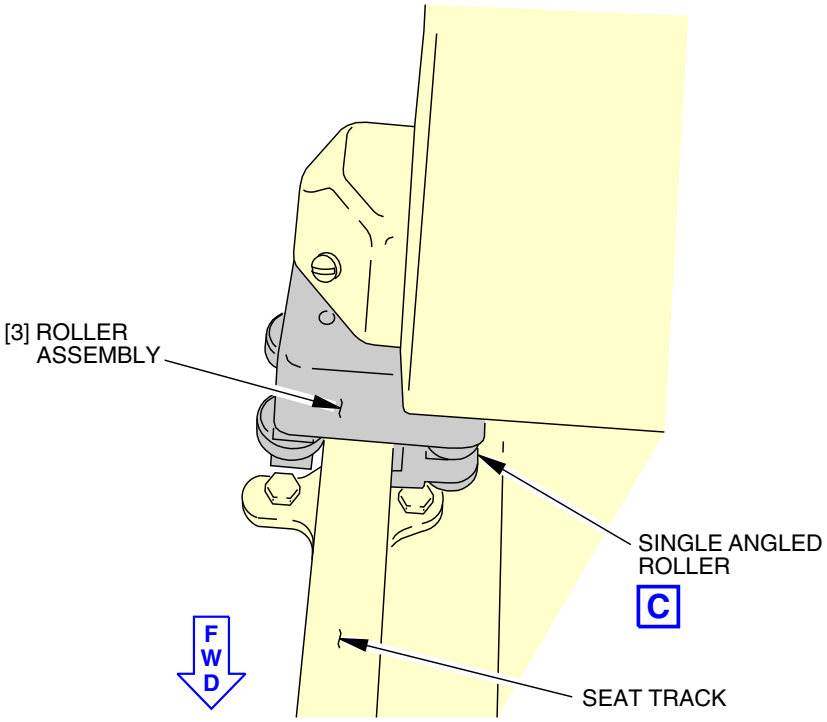


ROLLER ASSEMBLY (EXAMPLE)

B

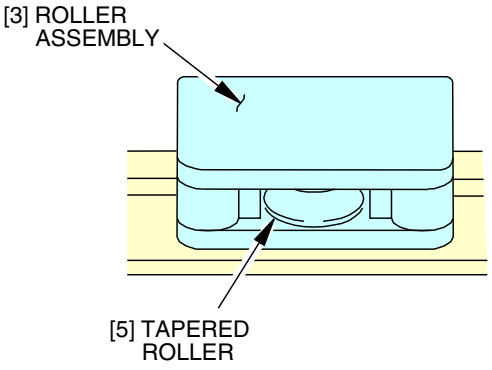

SINGLE FIXED ANGLED ROLLER

C 1

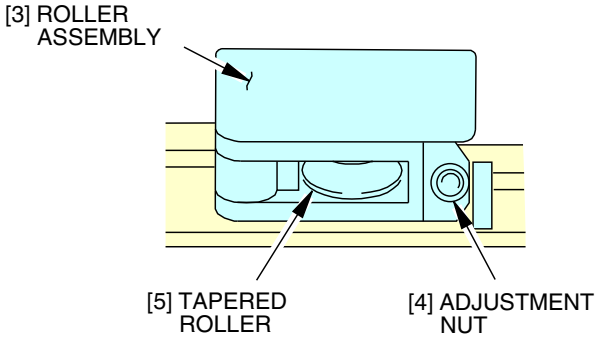

SINGLE ADJUSTABLE ANGLED ROLLER


C 2

1 AIRPLANES WITH FIXED ROLLER
2 AIRPLANES WITH ADJUSTABLE ROLLER

2411818 S00061529182_V2

Captain's and First Officer's Seat Installation
Figure 401/25-11-01-990-804 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

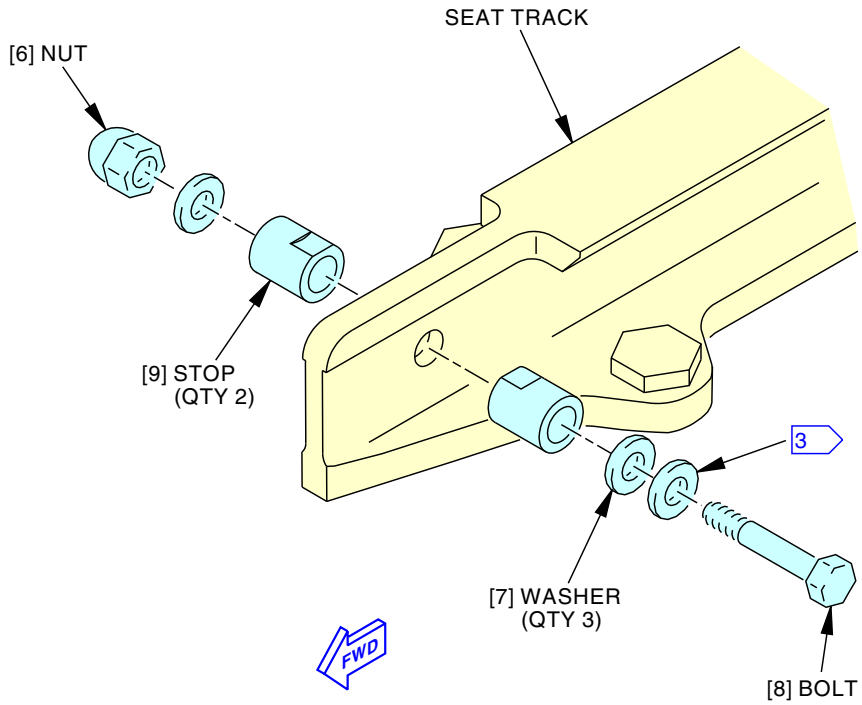

STOP
(EXAMPLE)

D

3 OPTIONAL WASHER

2411819 S00061529183_V2

Captain's and First Officer's Seat Installation
Figure 401/25-11-01-990-804 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-01-400-801

3. Captain and First Officer Seat Installation

(Figure 401)

A. Consumable Materials

Reference	Description	Specification
D00633	Grease - Aircraft General Purpose	BMS3-33

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Seat	25-11-01-01-005	PTF ALL
		25-11-01-01-010	PTF ALL

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Captain and First Officer Seat Installation

SUBTASK 25-11-01-640-001

(1) Apply a light layer of grease, D00633, to the upper surfaces of the aft seat track and the pinning holes.

SUBTASK 25-11-01-410-001

(2) Put the seat [1] immediately forward of the seat tracks.

SUBTASK 25-11-01-420-001

(3) Align the roller assemblies [3] with the seat tracks.

NOTE: The single tapered roller must be on the inboard side of the track.

SUBTASK 25-11-01-430-001

(4) Engage the front and rear roller assemblies [3] with the seat tracks.

SUBTASK 25-11-01-430-002

(5) Move the seat [1] aft and release the control handle.

SUBTASK 25-11-01-430-003

(6) Pull horizontal control handle [2] up and aft to lift lock pins.

NOTE: Handle is located on the inboard aft side of seat.

SUBTASK 25-11-01-430-004

(7) Do these steps to install the stops [9] on the seat tracks:

(a) Install the bolt [8], washers [7], stops [9], and nut [6] on each inboard seat track stop location (View D, Figure 401).

NOTE: The bolts must be installed with the bolt head oriented inboard.

1) If it is necessary, install an optional washer so that the upper surfaces of the aft tracks are co-planar within 0.015 in. (0.4 mm) after bolt installation.

(b) Tighten the bolts [8] on the seat tracks to 25 in-lb (3 N·m) - 35 in-lb (4 N·m).

SUBTASK 25-11-01-700-001

(8) If it is installed, tighten the adjustment nut [4] of the tapered rollers [5] so that the roller lightly touches the inboard rail.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-01-710-001

(9) Do the operational check for the movement of the seat [1].

(a) While you are on the seat [1], operate the horizontal control handle [2] and move the seat [1] forward and aft through its full range of the travel.

(b) Make sure that the seat [1] moves freely forward and aft along the seat tracks through its full range of movement.

(c) Operate the seat [1] and release the control lever.

(d) Make sure that the seat [1] locks in position.

SUBTASK 25-11-01-400-001

WARNING MAKE SURE THAT THE LOCK PIN FULLY ENGAGES AT EACH POSITION FOR SEAT TRACK LOCKS. UNLOCKED SEATS CAN MOVE AND CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(10) Make sure that the seat track lock pin is fully engaged in all seat track positions.

(a) Make sure that the seat track lock pin fully engages in all seat track lock positions.

NOTE: Positions are engaged from the farthest forward position to the farthest aft position on the straight section of the seat tracks.

(b) Make sure that the seat track lock positions are engaged in the parked position.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAPTAIN AND FIRST OFFICER SEAT - INSPECTION/CHECK

1. General

A. This procedure contains this task:

(1) Captain and First Officer Seat Track and Locking Mechanism Detailed Visual Inspection.

NOTE: The detailed visual inspection is applicable to the inner and outer seat track for the captain and first officer seats.

TASK 25-11-01-200-801

2. Captain or First Officer Seat Track and Locking Mechanism - Detailed Visual Inspection

(Figure 601, Figure 602)

NOTE: This procedure is a scheduled maintenance task.

A. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1638	Gauge - Inspection, Seat Track, Flight Crew Seats (A25020-5 part of A25020-8) Part #: A25020-8 Supplier: 81205 Opt Part #: A25020-4 Supplier: 81205

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Captain or First Officer Seat Track and Locking Mechanism Detailed Visual Inspection

SUBTASK 25-11-01-210-001

(1) Do a detailed visual inspection to make sure that the captain’s or first officer’s seat tracks are fully attached to the floor:

(a) Use the horizontal control lever to move the seat forward and aft to examine all of the track.

(b) Try to move the seat tracks to make sure that they are securely attached.

1) If loose bolts are found on the seat tracks, tighten them.

(c) Do a detailed visual inspection for cracks and corrosion on the seat tracks.

SUBTASK 25-11-01-210-002

(2) Do these steps to inspect the seat tracks for wear:

(a) There are two conditions during which the seat track can become worn:

1) Condition 1:

a) The lock pin rubs on the surface of the seat track while the seat is adjusted.

2) Condition 2:

a) The lock hole becomes larger when the locking pin hits the edge of the lock hole too many times when the seat is adjusted.

(b) The seat track is in good condition when:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) The maximum depth of a groove on the surface of the seat track is not more than 0.065 in. (1.651 mm) for Condition 1.

2) The lock hole is 0.30 in. (7.62 mm) or less in diameter at a depth of 0.1 in. (2.54 mm) for the Condition 2.

SUBTASK 25-11-01-210-003

(3) Do these steps to do a check of the surface of the seat track:

(a) Put the point of the inspection gauge, SPL-1638, in a groove that is on the surface of the seat track.

(b) If the protrusion touches the surface of the seat track, replace the seat track.

SUBTASK 25-11-01-210-004

(4) Do these steps to do a check of the lock hole:

(a) Put the protrusion of the inspection gauge, SPL-1638, in the lock hole.

(b) If the bottom of the inspection gage touches the surface of the seat track, replace the seat track.

SUBTASK 25-11-01-210-005


(5) Do a detailed visual inspection to make sure that the seat track lock pins are fully engaged at all seat track lock positions.

(a) Use the horizontal control lever to move the seat forward and aft to examine lock pin engagement in all track lock holes.


(b) Make sure that the seat track lock pins are fully engaged in all seat track lock positions.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

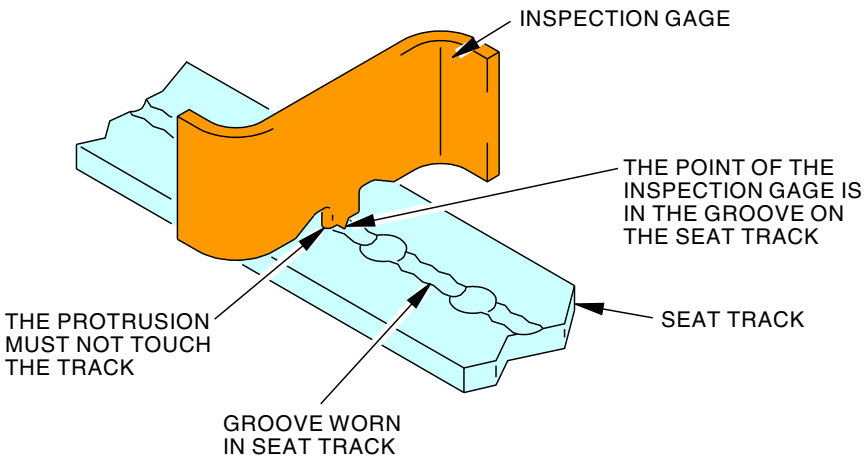

INSPECTION ON THE SURFACE OF THE SEAT TRACK

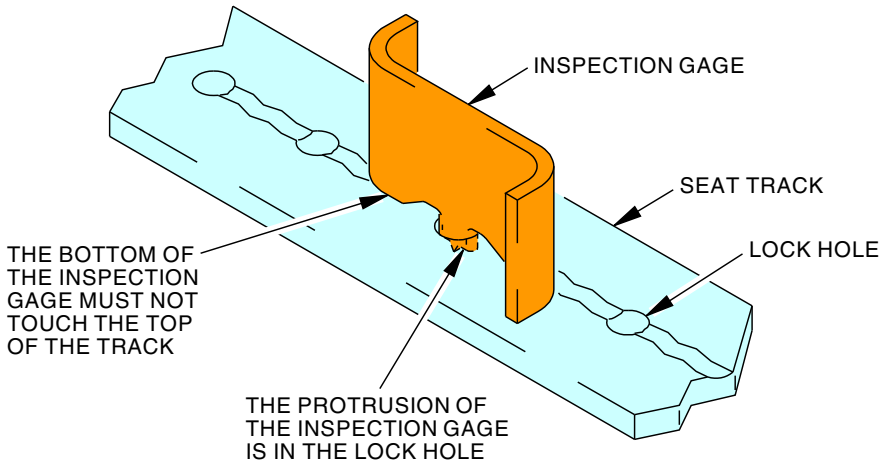


INSPECTION OF THE LOCK HOLE

2411820 S00061529186_V1

Seat Track Inspection
Figure 601/25-11-01-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

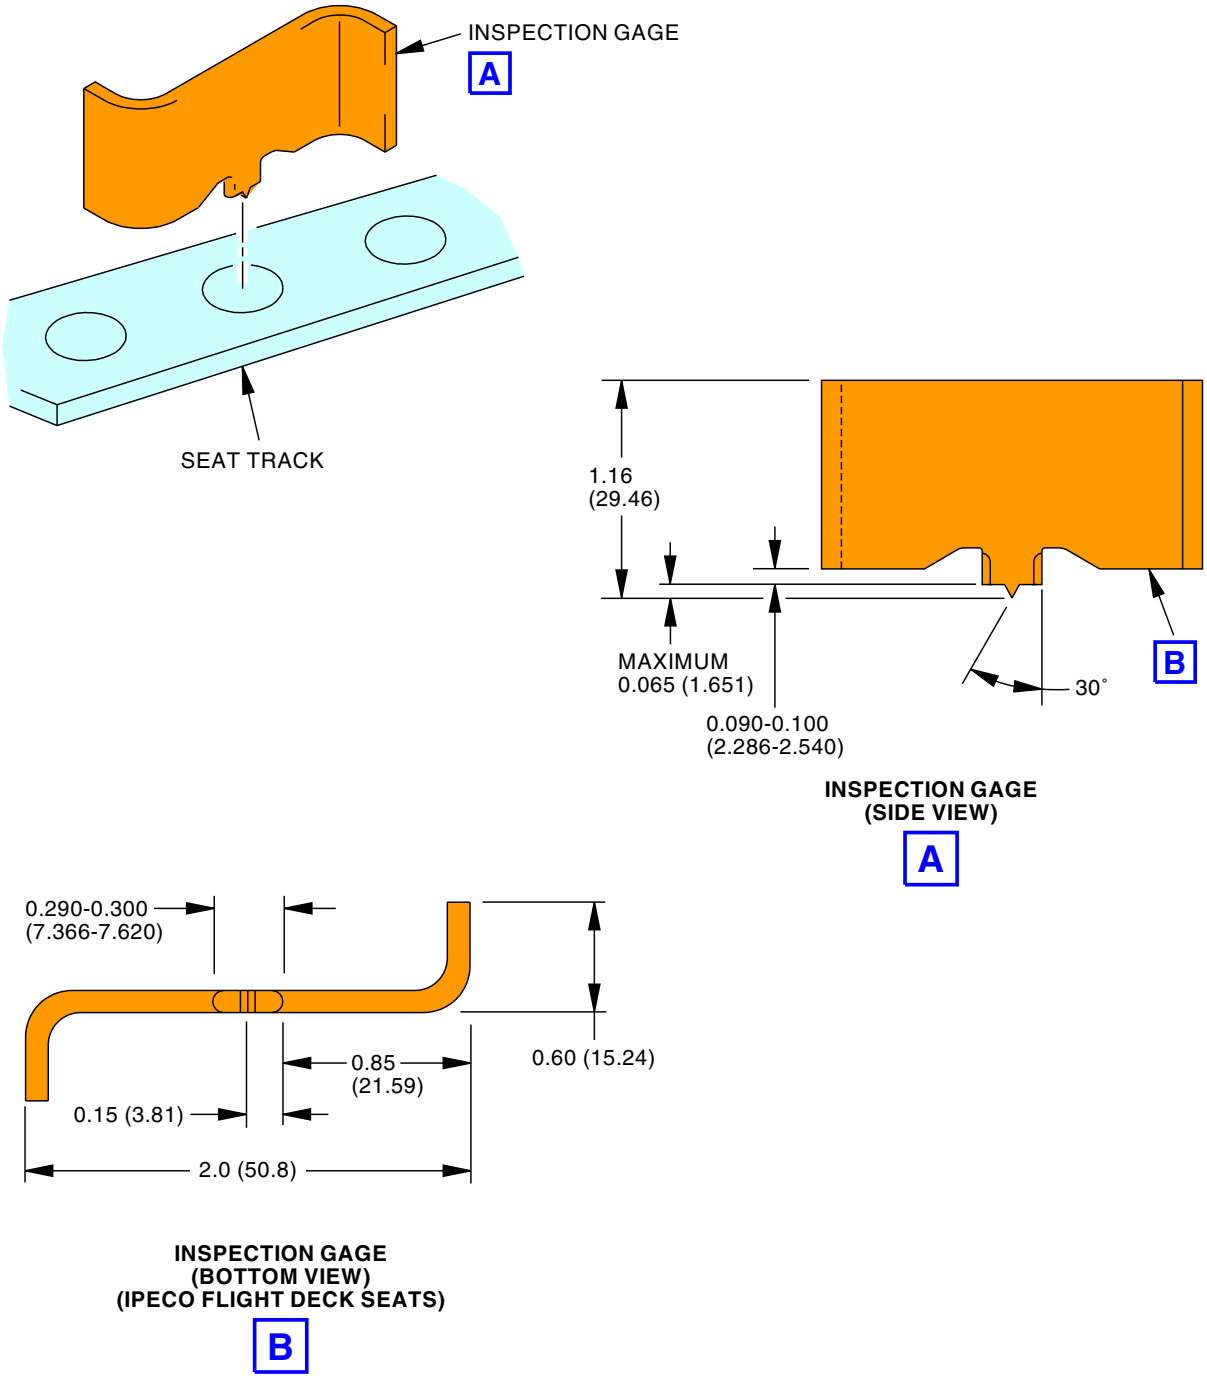

NOTE:

ALL DIMENSIONS ARE IN INCHES (mm).

2411821 S00061529187_V1

Seat Track Inspection Gage
Figure 602/25-11-01-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OBSERVER SEAT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) First observer seat removal

(2) First observer seat installation

TASK 25-11-02-000-801

2. First Observer Seat Removal

(Figure 401)

A. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

B. First Observer Seat Removal

SUBTASK 25-11-02-030-001


(1) Remove the five screws [21] that attach the first observer seat [1] to the seat structure.

SUBTASK 25-11-02-020-001

(2) Remove the first observer seat [1].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

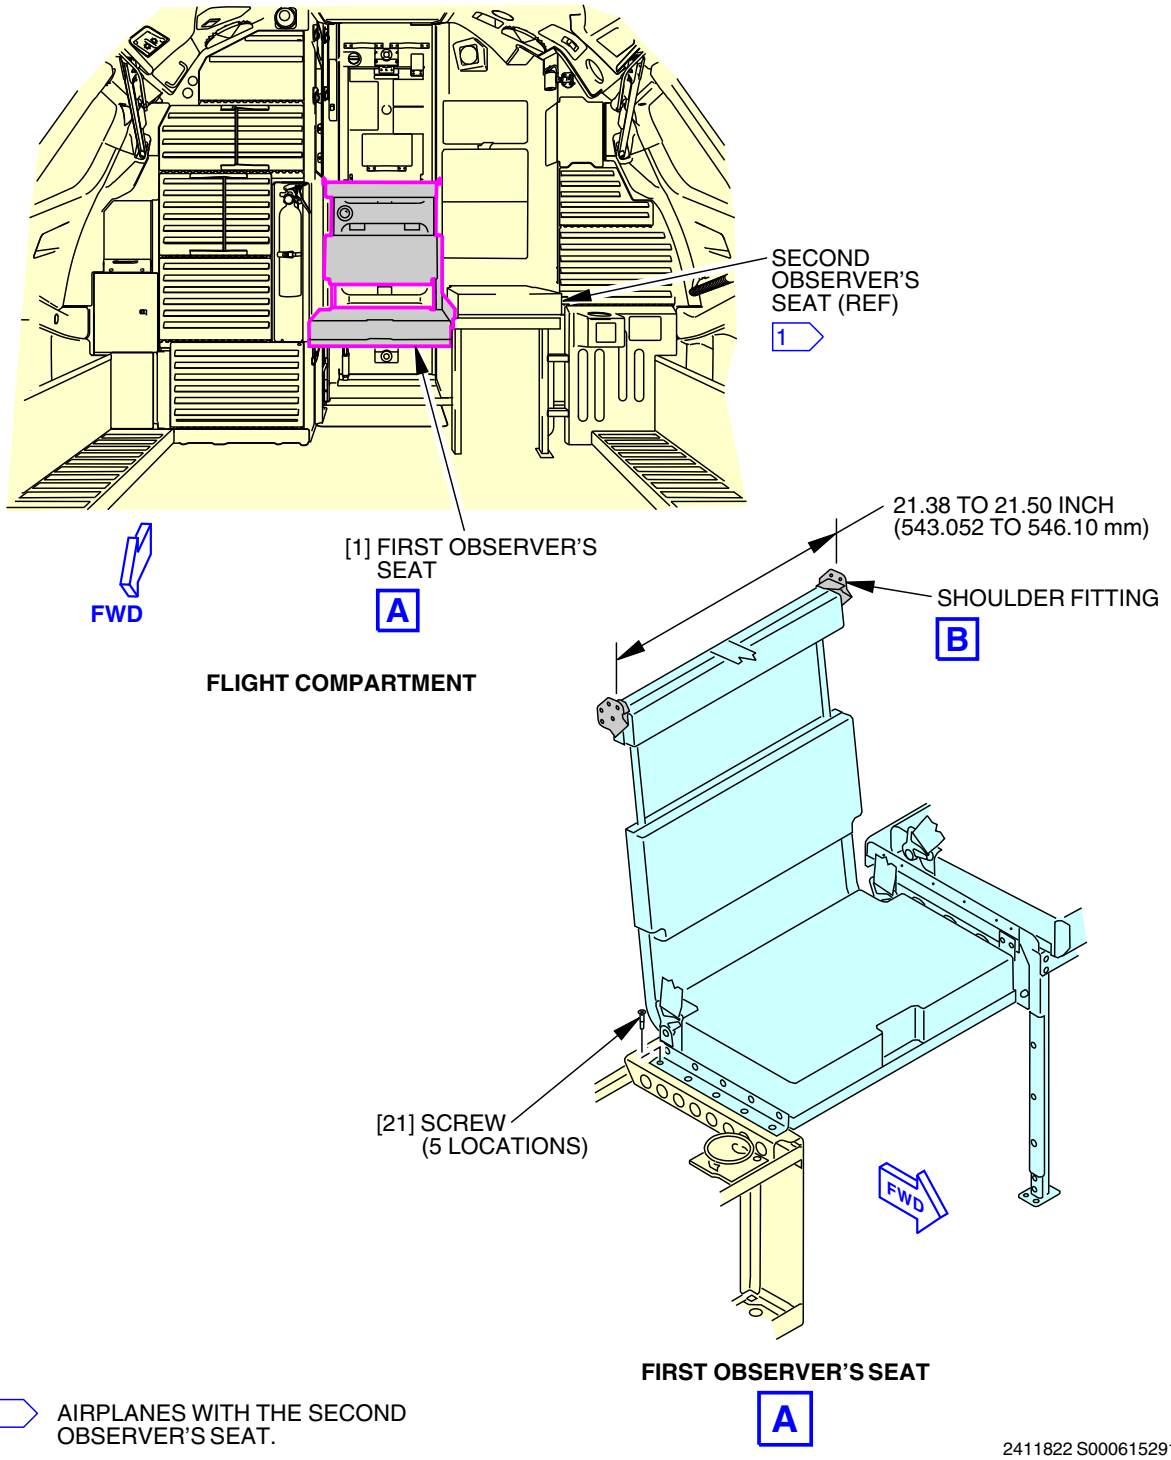

First Observer Seat Installation
Figure 401/25-11-02-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

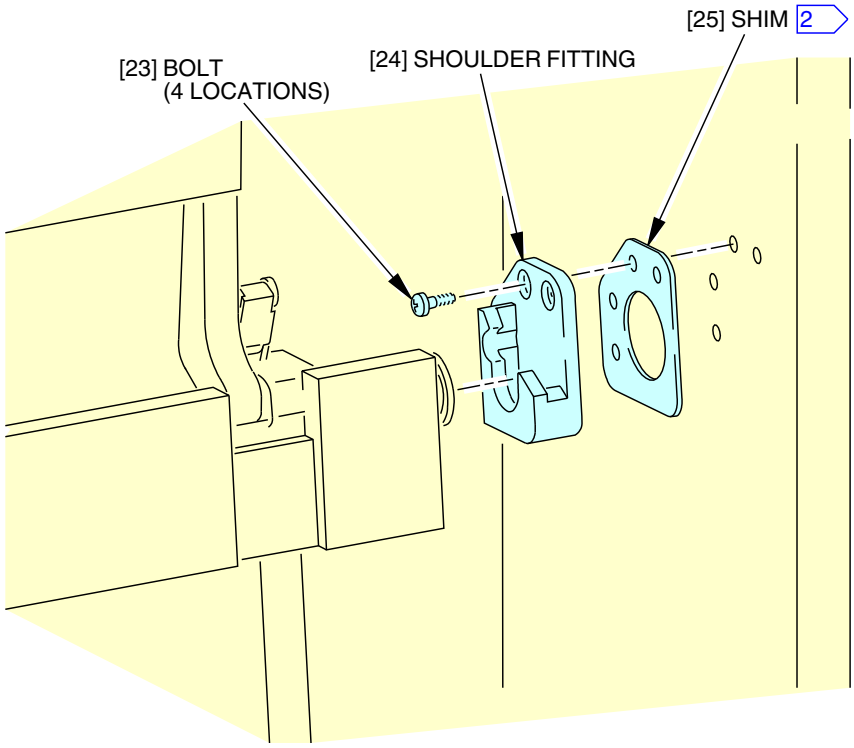

SHOULDER FITTING
(EXAMPLE)

B

2 NOT INSTALLED ON ALL AIRPLANES

2411824 S00061529196_V2

First Observer Seat Installation
Figure 401/25-11-02-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-02-400-801

3. First Observer Seat Installation

(Figure 401)

A. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	First observer seat	25-11-02-01-010	PTF ALL

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. First Observer Seat Installation

SUBTASK 25-11-02-400-001

(1) Put the first observer seat [1] on the seat structure and align the screw holes.

SUBTASK 25-11-02-430-001

(2) Install the five screws [21] into the seat bottom and frame.

SUBTASK 25-11-02-700-001

(3) Open the first observer seat [1] and make sure that it engages the two shoulder fittings [24] correctly.

(a) If the distance between the two shoulder fittings [24] is not 21.44 ±0.06 in. (54.46 ±0.15 cm), do these steps:

1) Remove the bolts [23] and shoulder fittings [24].

2) Add or remove the shims [25] as necessary.

NOTE: The shims are not installed on all airplanes.

3) Install the bolts [23] and shoulder fittings [24].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT STOWAGE BOX - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Log book holder and stowage box removal

(2) Log book holder and stowage box installation

(3) Stowage box with retainer removal

(4) Stowage box with retainer installation.

TASK 25-11-03-000-801

2. Log Book Holder and Stowage Box Removal

A. Location Zones

Zone	Area
211	Flight Compartment - Left

B. Log Book Holder Box Removal

(Figure 401)

SUBTASK 25-11-03-020-001

(1) Remove the bolts that attach the log book holder bracket [1] to the aisle stand.

SUBTASK 25-11-03-020-002

(2) Disconnect the log book holder strap [5].

SUBTASK 25-11-03-020-003

(3) If necessary, remove the screw [3] and washers [4] that connect the log book holder strap [5] to the monument.

SUBTASK 25-11-03-020-004

(4) Remove the log book holder bracket [1].

C. Stowage Box Removal

(Figure 402)


SUBTASK 25-11-03-020-005

(1) Remove the five screws [2] that connect the P6 stowage box door assembly [1] to the P6 panel.

(a) Remove the P6 stowage box door assembly [1].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

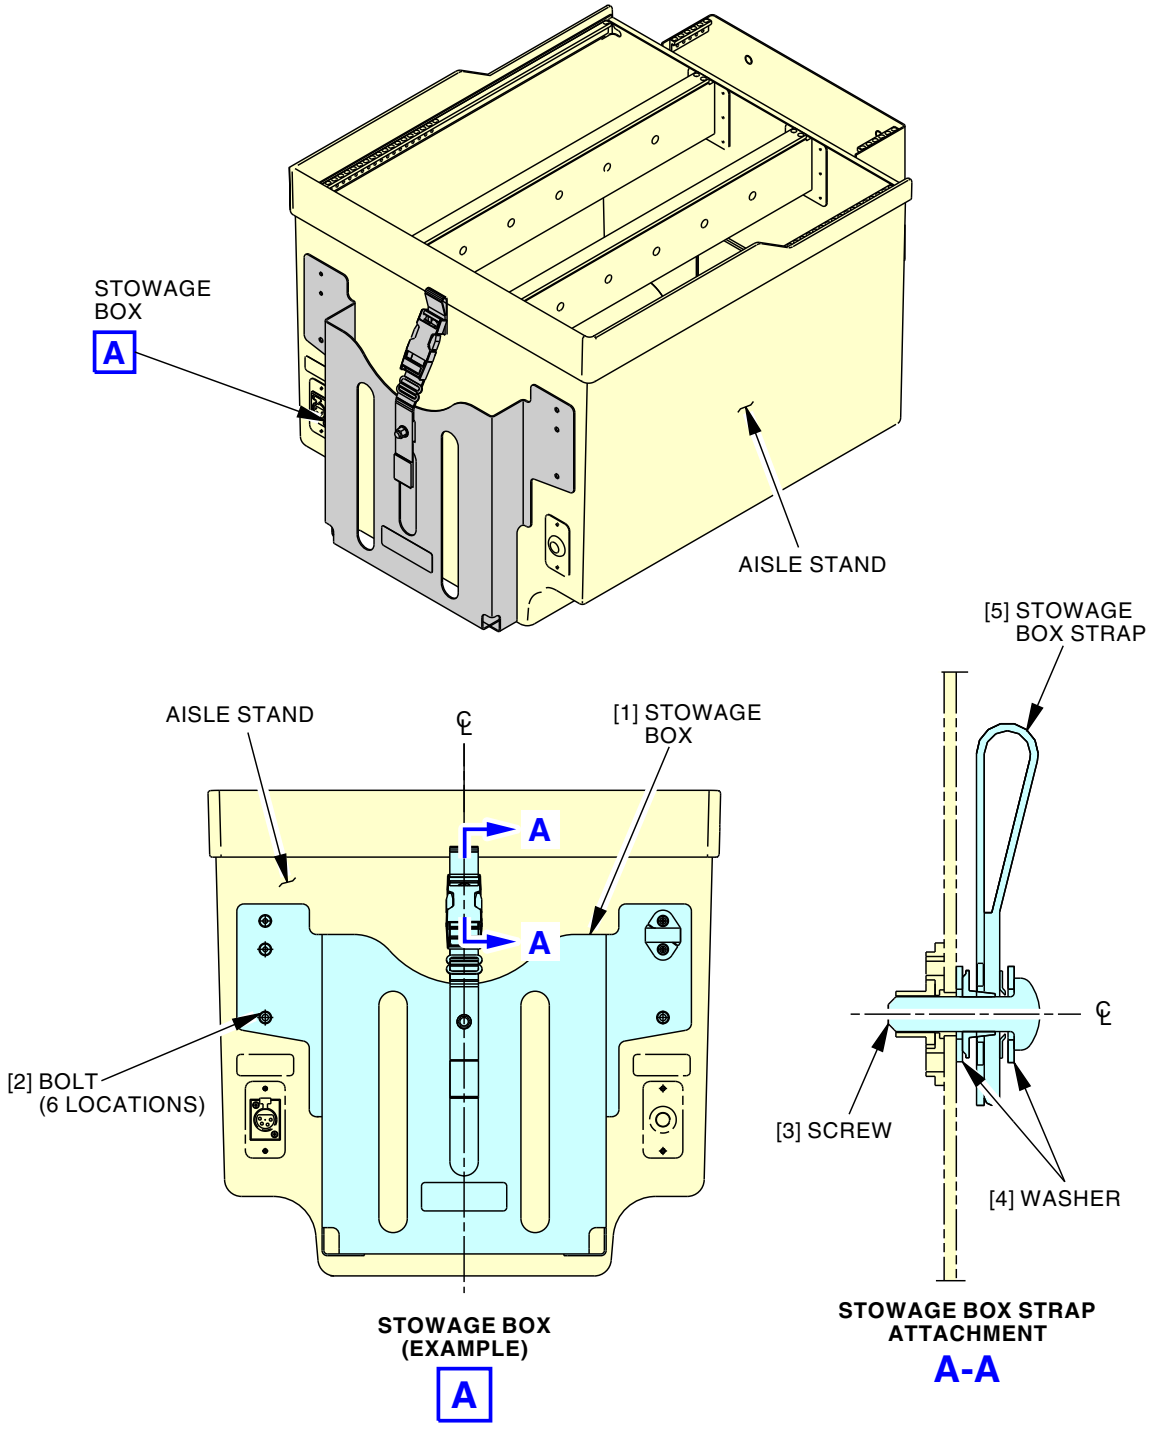

Log Book Holder Installation
Figure 401/25-11-03-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

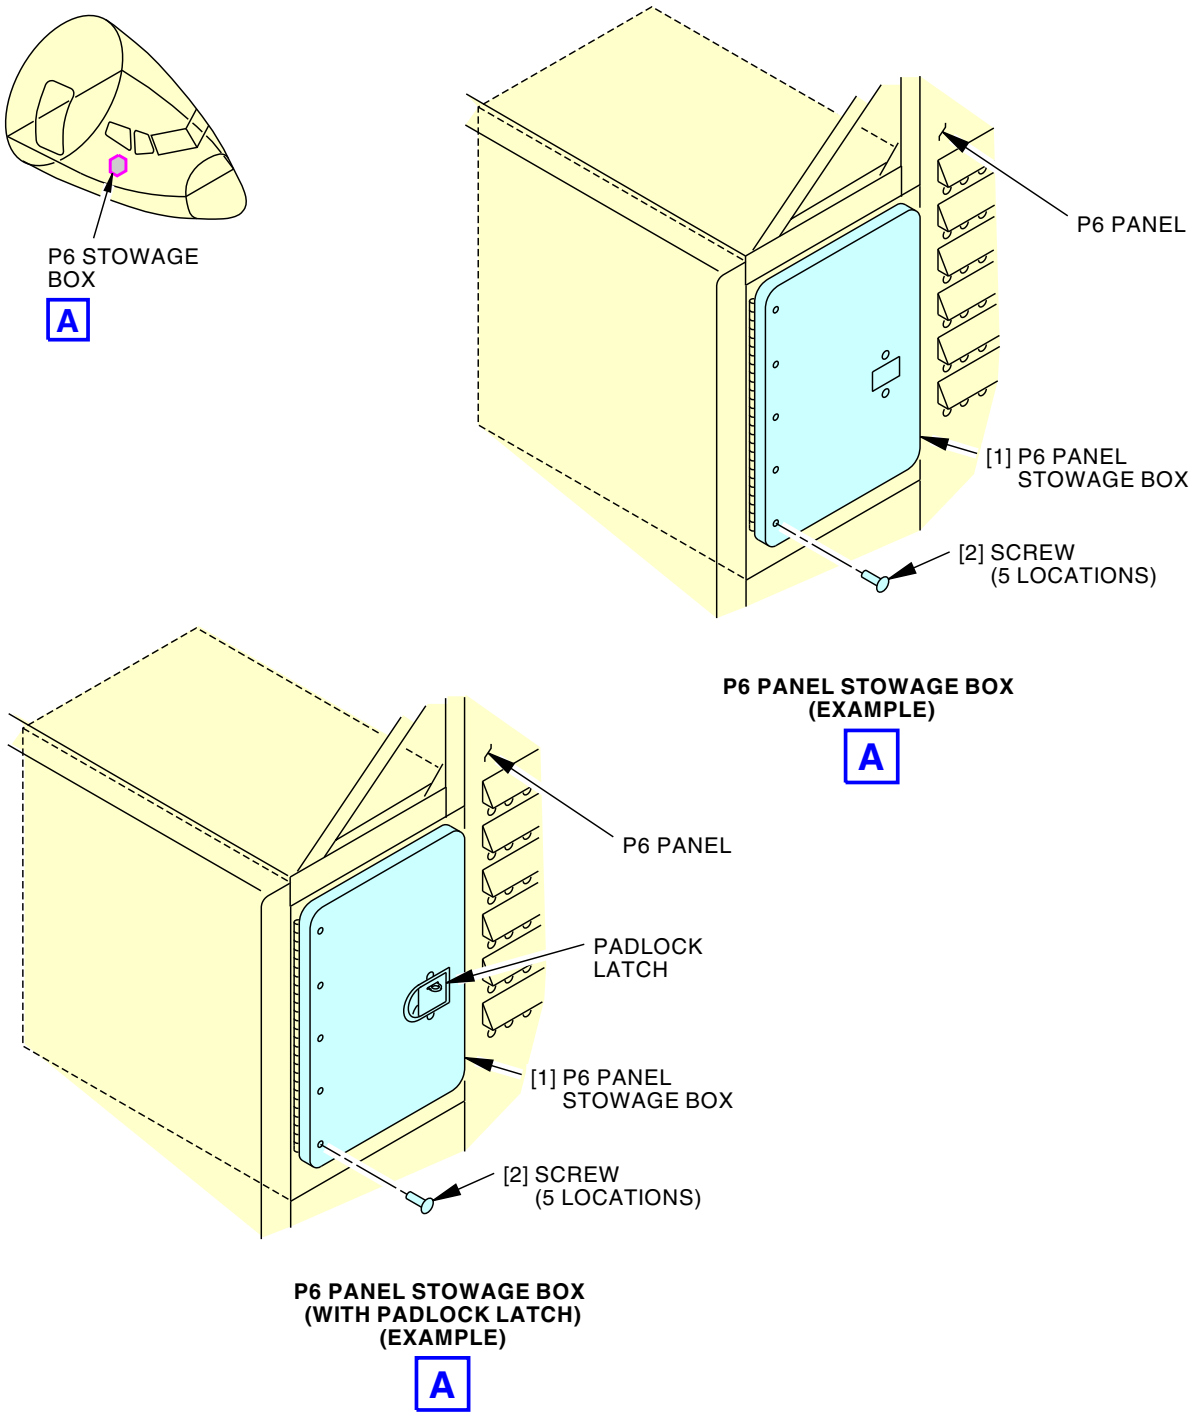

2411826 S00061529202_V1

P6 Panel Stowage Box Installation
Figure 402/25-11-03-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-03-400-801

3. Log Book Holder and Stowage Box Installation

(Figure 401)

A. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	P6 stowage box door assembly	25-11-03-01-015	PTF ALL

B. Location Zones

Zone	Area
211	Flight Compartment - Left

C. Log Book Holder Installation

SUBTASK 25-11-03-840-001

(1) Align the holes on the log book holder bracket [1] with the aisle stand attachment points.

SUBTASK 25-11-03-420-001

(2) Install the eight bolts [2].

SUBTASK 25-11-03-420-002

(3) If applicable, install the screw [3] and washers [4] that connect the log book holder strap [5] to the aisle stand.

D. Stowage Box Removal

(Figure 402)

SUBTASK 25-11-03-420-003

(1) Install the P6 stowage box door assembly [1] on the P6 panel.

(a) Install the five screws [2] that connect the P6 stowage box door assembly [1] to the P6 panel.

——— END OF TASK ———

TASK 25-11-03-000-803

4. Stowage Box with Retainer Removal

(Figure 403)

A. General

(1) This task is for the removal of a stowage box with retainer.

B. Location Zones

Zone	Area
212	Flight Compartment - Right

C. Stowage Box with Retainer Removal

SUBTASK 25-11-03-020-011

(1) Remove the screws [4] that attach the retainer assembly [1]

SUBTASK 25-11-03-020-012

(2) Remove the brackets [2] and endcaps [3].

SUBTASK 25-11-03-020-013

(3) If it is necessary to remove the brackets [6], do these steps:


(a) Remove the screws [5] that attach the brackets [6].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Remove brackets [6].

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

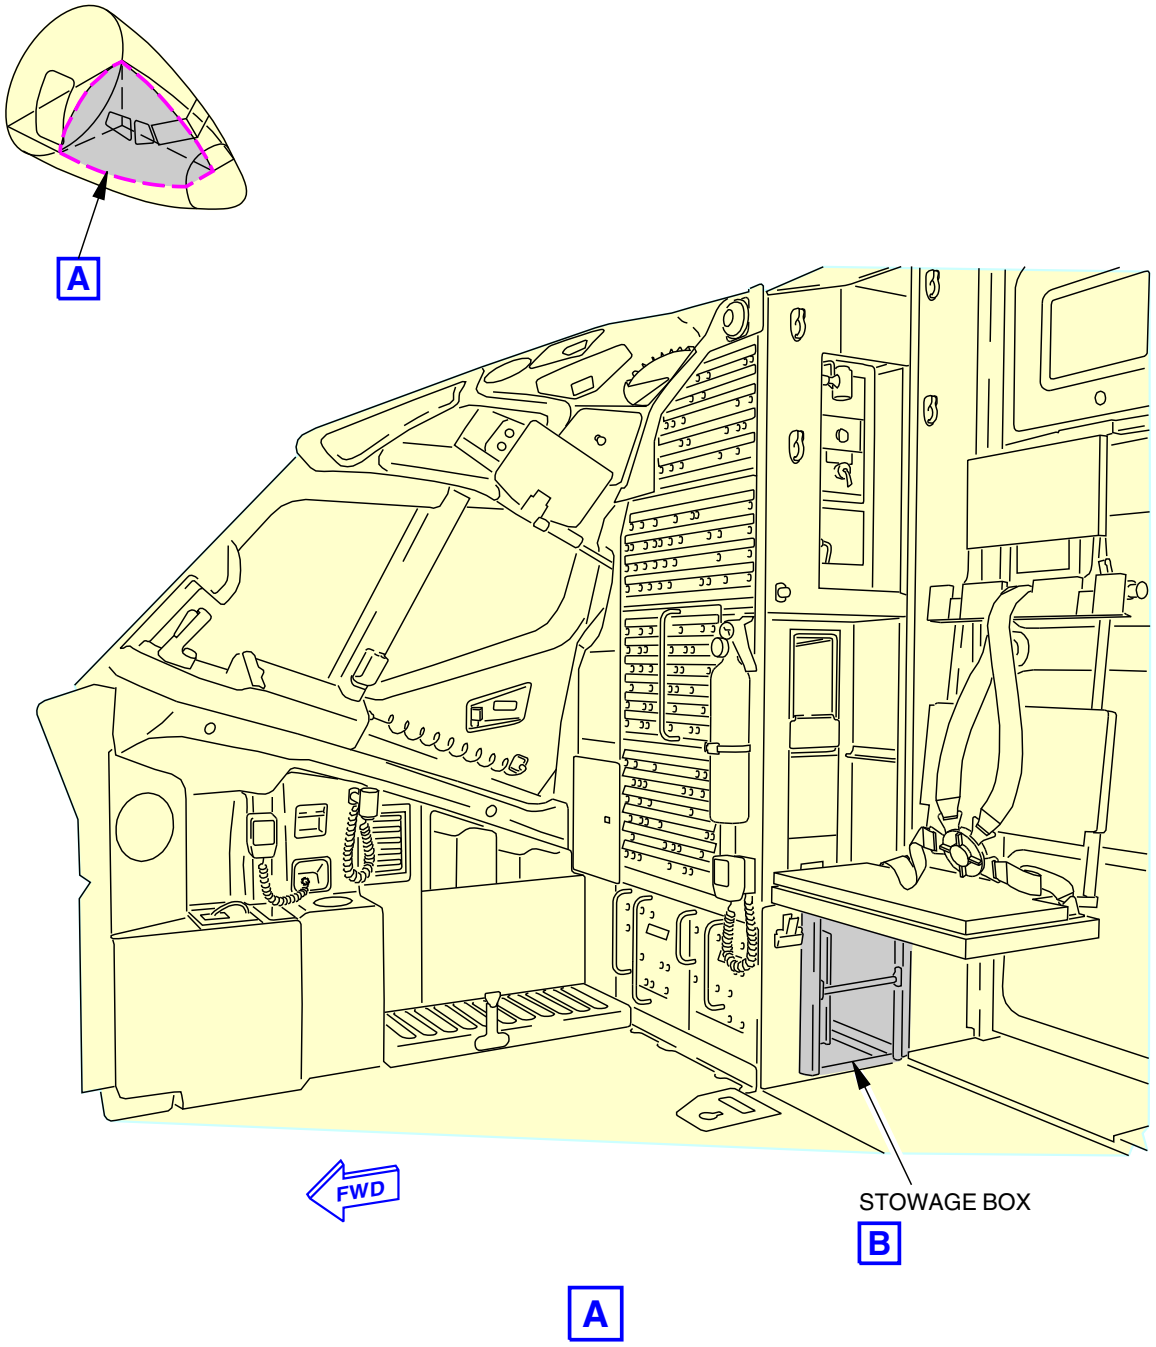

3112909 S0000851443_V1

Stowage Box with Retainer Installation
Figure 403/25-11-03-990-807 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

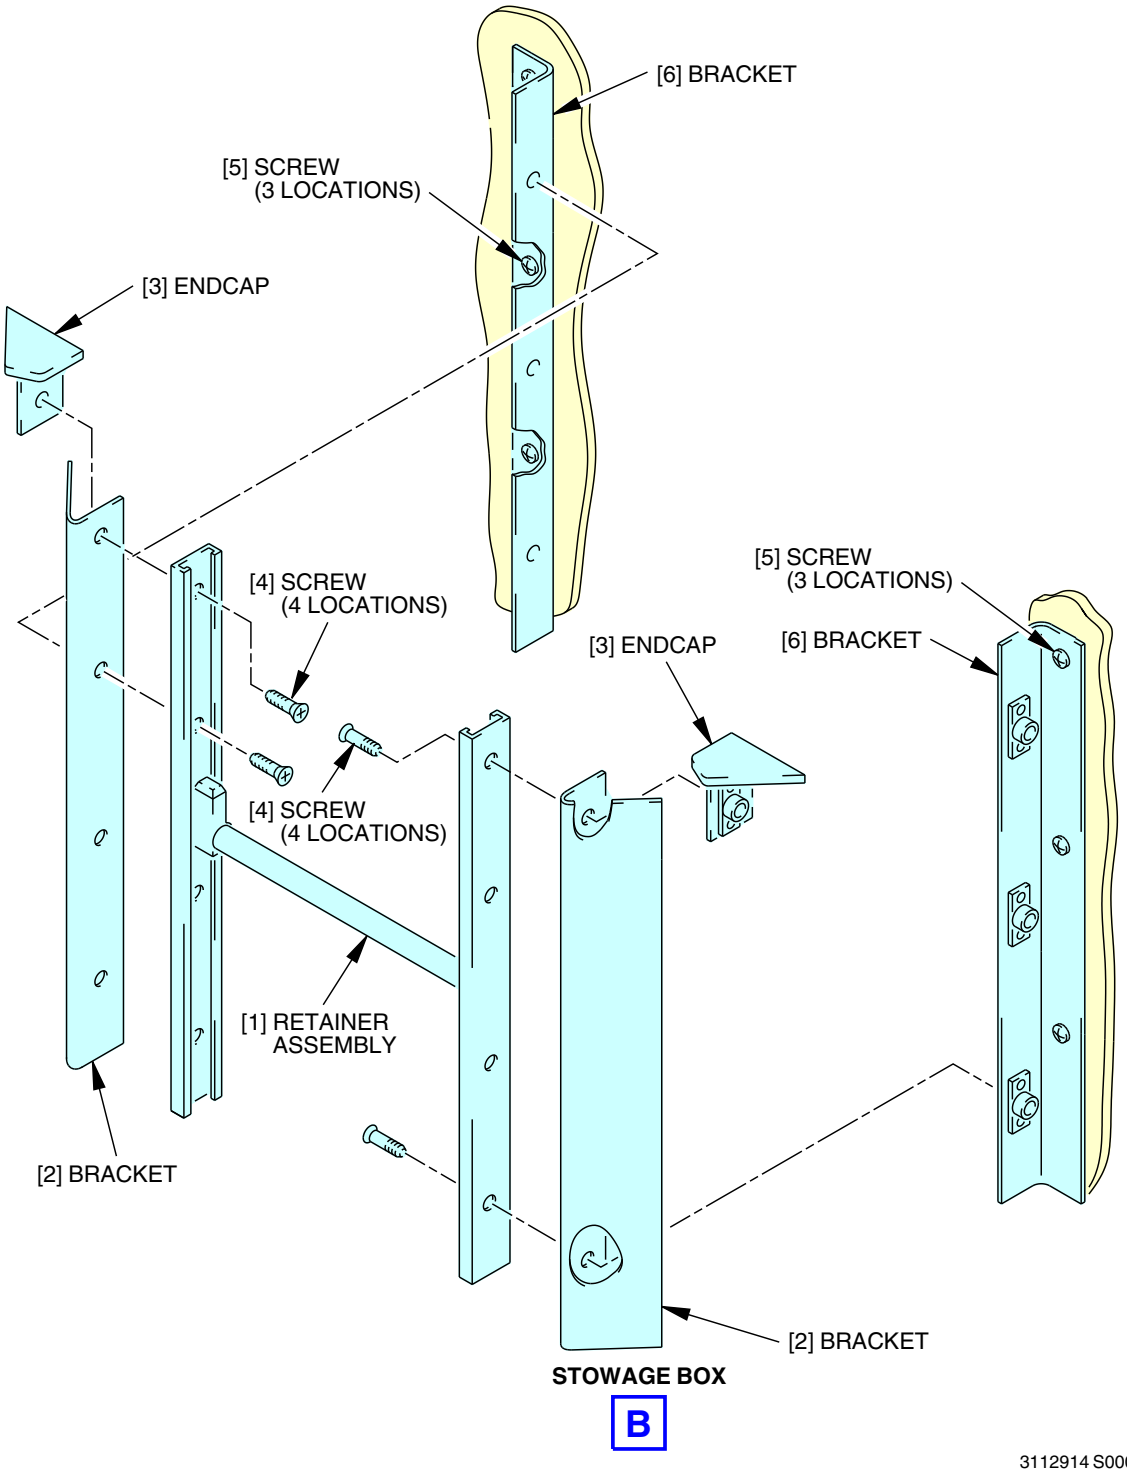

Stowage Box with Retainer Installation
Figure 403/25-11-03-990-807 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-03-400-803

5. Stowage Box with Retainer Installation

(Figure 403)

A. General

(1) This task is for the installation of a stowage box with retainer.

B. Location Zones

Zone	Area
212	Flight Compartment - Right

C. Stowage Box with Retainer Installation

SUBTASK 25-11-03-420-008

(1) If it was removed, install the brackets [6].

(a) Put the brackets [6] to its place.

(b) Install the screws [5].

SUBTASK 25-11-03-420-009

(2) Put the retainer assembly [1], brackets [2], and endcaps [3] to the brackets [6].

SUBTASK 25-11-03-420-010

(3) Install the screws [4] that attaches retainer assembly [1] and endcaps [3].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT FLOOR COVERING - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) The flight compartment floor covering removal.

(2) The flight compartment floor covering installation.

TASK 25-11-04-000-801

2. Flight Compartment Floor Covering Removal

(Figure 401)

A. General

(1) This task includes the steps to remove the flight compartment floor covering.

B. References

Reference	Title
25-11-01-000-801	Captain and First Officer Seat Removal (P/B 401)
25-11-02-000-801	First Observer Seat Removal (P/B 401)

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Flight Compartment Floor Covering Removal

SUBTASK 25-11-04-020-001

(1) Remove the first observer's seats, if it is necessary (TASK 25-11-02-000-801).

SUBTASK 25-11-04-020-003

(2) Remove the captain’s and first officer's seat, if it is necessary (TASK 25-11-01-000-801).

SUBTASK 25-11-04-020-004

(3) Remove the screws which attach the threshold at the flight compartment door, if it is applicable

SUBTASK 25-11-04-020-005

(4) Remove the threshold.

SUBTASK 25-11-04-020-006

(5) Pull up along all the edges of the floor covering section to remove it from the floor.


NOTE: The floor covering section is attached to the floor with double-back tape.

SUBTASK 25-11-04-020-007

(6) Remove and discard the old tape.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

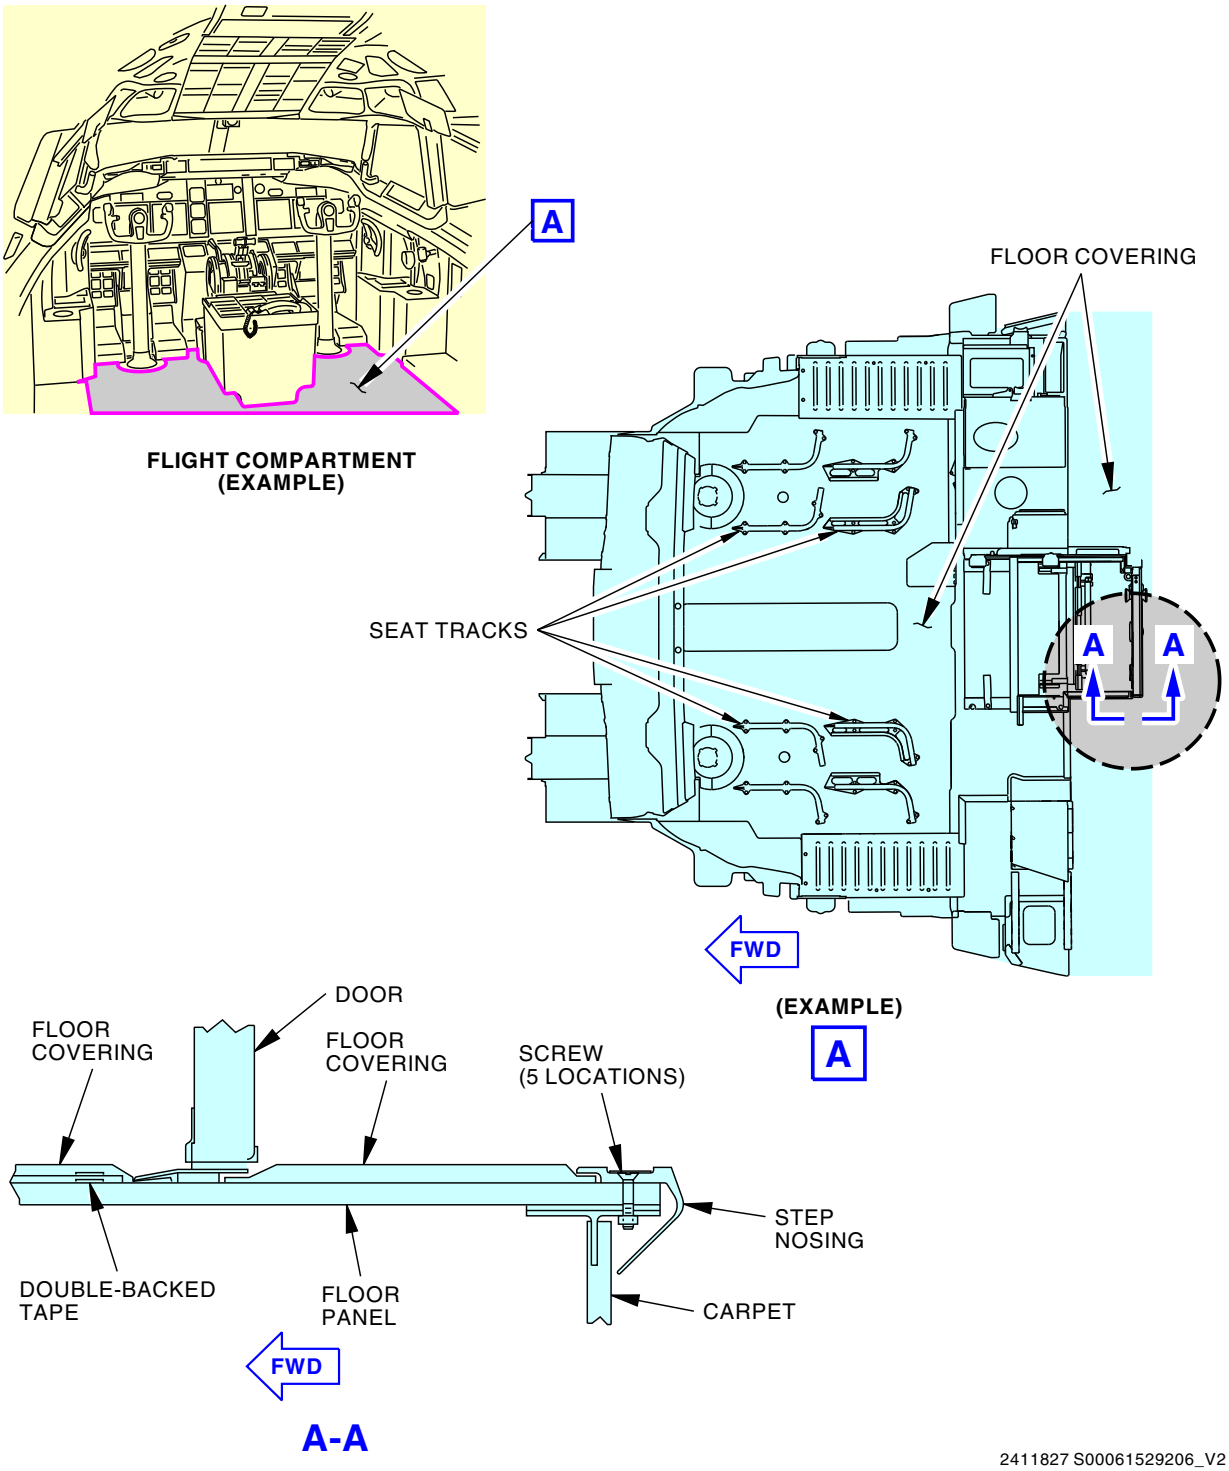

Flight Compartment Floor Covering Installation
Figure 401/25-11-04-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-04-400-801

3. Flight Compartment Floor Covering Installation

(Figure 401)

A. General

(1) This task includes the steps to install the flight compartment floor covering.

B. References

Reference	Title
25-11-01-400-801	Captain and First Officer Seat Installation (P/B 401)
25-11-02-400-801	First Observer Seat Installation (P/B 401)
51-22-00-390-806	Fillet Seal Application (P/B 201)

C. Consumable Materials

Reference	Description	Specification
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
B00068	Alcohol - Denatured, Ethyl (Ethanol)	AMS 3002, MIL-E-51454 Type II
B00130	Alcohol - Isopropyl	TT-I-735
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G01288	Tape - Carpet	BMS5-133

D. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

E. Flight Compartment Floor Covering Installation

SUBTASK 25-11-04-420-001

(1) Install the new double-back tape (carpet tape, G01288) to the floor, if necessary.

SUBTASK 25-11-04-420-002

(2) Install the floor covering sections on the floor.

(a) Make sure that the double-back tape holds the floor covering sections to the floor.

SUBTASK 25-11-04-420-003

(3) Install the threshold at the flight compartment door, if applicable.

(a) Make sure that you tighten the threshold screws sufficiently, to keep the edges of the floor covering section in its position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING

DO NOT GET SOLVENTS IN YOUR MOUTH OR EYES, OR ON YOUR SKIN. DO NOT BREATHE THE FUMES FROM THESE MATERIALS. PUT ON A PROTECTIVE SPLASH GOGGLE AND GLOVES WHEN YOU USE THESE MATERIALS. KEEP THESE MATERIALS AWAY FROM SPARKS, FLAME, AND HEAT. THESE MATERIALS ARE POISONOUS AND FLAMMABLE AND CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

(b) Clean the mating surfaces of the threshold and floor with a cotton wiper, G00034, soaked with alcohol, B00068, or alcohol, B00130.

(c) Dry the surfaces with clean cotton wiper, G00034.

(d) Clean the sufficient area around the sealant application area, to prevent contamination from the adjacent area, into the area where sealant will be apply.

(e) Do the cleaning procedure, until the wipers are not dirty and the surfaces are free of soils and contamination.

(f) Apply RTV6708 adhesive, A50030, to the threshold perimeter (TASK 51-22-00-390-806).

SUBTASK 25-11-04-420-004

(4) Install the captain’s and first officer's seat, if removed (TASK 25-11-01-400-801).

SUBTASK 25-11-04-420-006

(5) Install the first observer's seats, if removed (TASK 25-11-02-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT SEAT TRACKS - INSPECTION/CHECK

1. General

A. This procedure contains these tasks:

(1) Seat Track Wear Inspection.

(2) Seat Track Alignment Check.

TASK 25-11-11-200-801

2. Seat Track Wear - Inspection

(Figure 601, Figure 602)

A. General

(1) There are two conditions during which the seat track can become worn:

(a) Condition 1:

1) The lock pin rubs on the surface of the seat track while the seat is adjusted.

(b) Condition 2:

1) The lock hole becomes larger when the locking pin hits the edge of the lock hole too many times when the seat is adjusted.

(2) The seat track is in good condition when:

(a) The maximum depth of a groove on the surface of the seat track is not more than 0.065 in. (1.651 mm) for Condition 1.

(b) The lock hole is not larger than 0.30 in. (7.62 mm) in diameter at a depth of 0.1 in. (2.54 mm) for the Condition 2.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1638	Gauge - Inspection, Seat Track, Flight Crew Seats (A25020-5 part of A25020-8) Part #: A25020-8 Supplier: 81205 Opt Part #: A25020-4 Supplier: 81205
SPL-3894	Gauge - Inspection, Seat Track, Flight Crew Seats (A25020-9 part of A25020-8) Part #: A25020-8 Supplier: 81205 Opt Part #: A25020-1 Supplier: 81205 Opt Part #: A25020-4 Supplier: 81205

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Seat Track Wear Inspection

SUBTASK 25-11-11-200-001

(1) To do a check on the surface of the seat track, do the steps that follow:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Put the point of the inspection gauge, SPL-1638, in a groove that is on the surface of the seat track.

(b) If the protrusion touches the surface of the seat track, replace the seat track.

SUBTASK 25-11-11-200-002


(2) To do a check of the lock hole, do the steps that follow:

(a) Put the protrusion of the inspection gauge, SPL-1638, or gauge, SPL-3894, in the lock hole.


(b) If the bottom of the inspection gage touches the surface of the seat track, replace the seat track.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

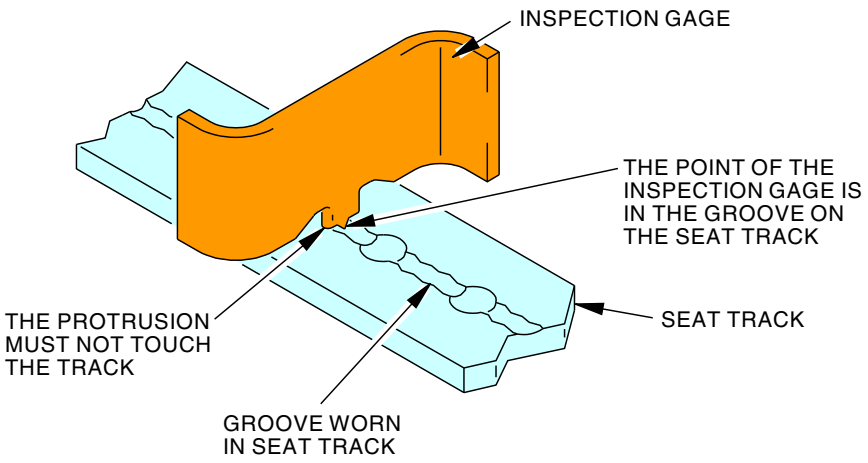

INSPECTION ON THE SURFACE OF THE SEAT TRACK

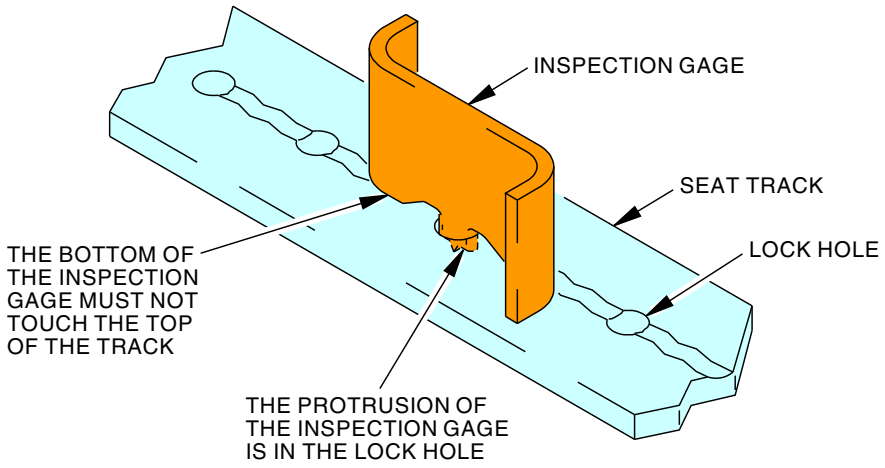


INSPECTION OF THE LOCK HOLE

2411820 S00061529186_V1

Seat Track Inspection
Figure 601/25-11-11-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

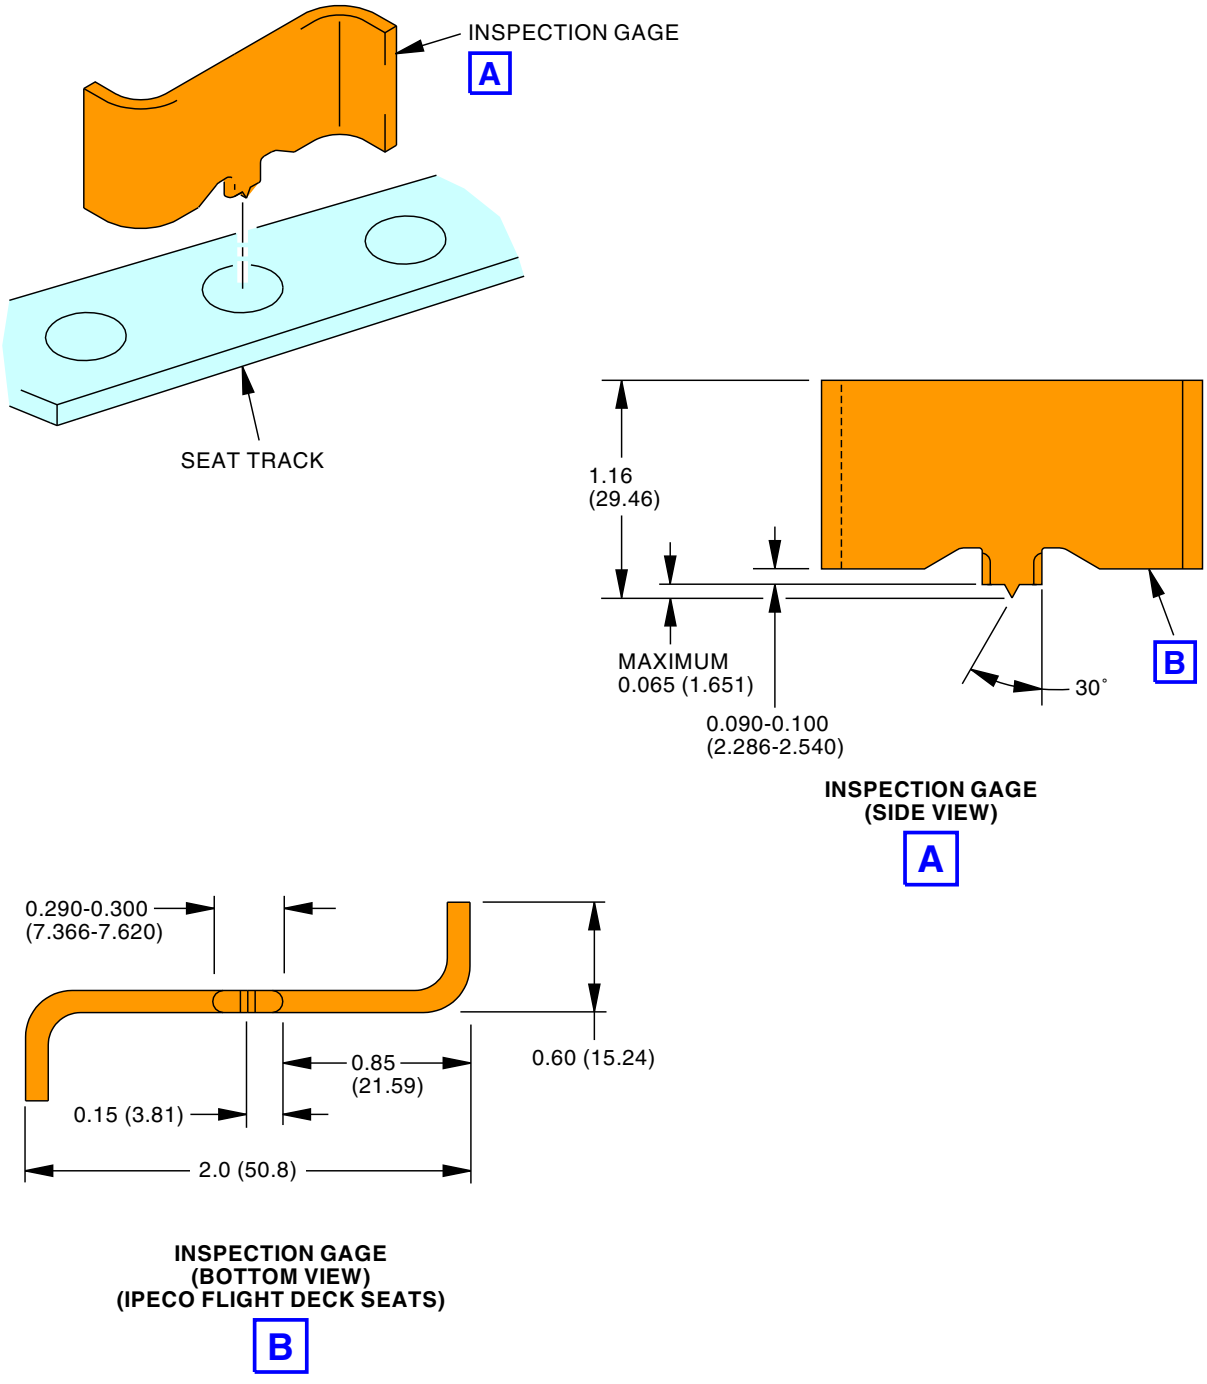

NOTE:

ALL DIMENSIONS ARE IN INCHES (mm).

2411821 S00061529187_V1

Seat Track Inspection Gage
Figure 602/25-11-11-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-11-400-801

3. Flight Compartment Seat Tracks - Installation and Alignment

A. References

Reference	Title
25-11-01-000-801	Captain and First Officer Seat Removal (P/B 401)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1644	Fixture - Track Setting Part #: 0T900-0247 Supplier: K9075

C. Location Zones

Zone	Area
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Flight Compartment Seat Tracks Installation and Alignment

SUBTASK 25-11-11-010-001

(1) Do this task: Captain and First Officer Seat Removal, TASK 25-11-01-000-801.

SUBTASK 25-11-11-400-001

(2) Mount the tracks in the proper positions.

NOTE: Do not tighten the bolts.

SUBTASK 25-11-11-280-001

(3) Do these steps to align the seat tracks:

(a) Remove any "stops" that extend above the top surface of the seat tracks.

(b) Put the fixture, COM-1644, over the seat tracks.

(c) Make sure the fixture, COM-1644, goes easily into the tracks.

NOTE: The seat tracks are correctly aligned if all eight pins of the fixture, COM-1644, engage in the holes on the top surface of each seat track when you apply only light downward pressure.

(d) If the fixture, COM-1644, does not go easily into the seat tracks, loosen all of the bolts in the seat tracks.

SUBTASK 25-11-11-480-001

(4) Put the fixture, COM-1644, over the seat tracks.

SUBTASK 25-11-11-420-001

(5) Apply a slight downward pressure.

NOTE: The locating pins of the fixture, COM-1644, should fully engage in the holes in the top surface of each track.

SUBTASK 25-11-11-420-002

(6) Tighten the seat track bolts that you can get access to.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-11-000-001

(7) Remove the fixture, COM-1644.

SUBTASK 25-11-11-420-003

(8) Tighten all the seat track bolts.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT PANELS - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Flight Compartment Forward Ceiling Panel Removal
(2) Flight Compartment Forward Ceiling Panel Installation
(3) Flight Compartment Dripshield Removal
(4) Flight Compartment Dripshield Installation
(5) Flight Compartment Sunvisor Adjustment and Test
(6) Flight Compartment Aft Ceiling Panel Removal
(7) Flight Compartment Aft Ceiling Panel Installation
(8) Roller Sunshade Removal
(9) Roller Sunshade Installation
(10) Flight Compartment No.2 Sliding Window Lining Removal
(11) Flight Compartment No.2 Sliding Window Lining Installation.

TASK 25-11-21-000-801

2. Flight Compartment Forward Ceiling Panel Removal

A. General

(1) This task gives instructions to remove the forward ceiling panels from the right and left sides of the flight compartment.

B. References

Reference	Title
25-61-10-000-801	Flight Compartment Escape Rope Removal (P/B 201)
33-17-00-960-803	Chart Light - Lamp Replacement (P/B 201)
SWPM 20-60-06	Standard Wiring Practices Manual
SWPM 20-63-13	Standard Wiring Practices Manual
WDM 23-51-11	Wiring Diagram Manual
WDM 23-51-21	Wiring Diagram Manual
WDM 30-41-11	Wiring Diagram Manual
WDM 30-41-12	Wiring Diagram Manual
WDM 33-14-12	Wiring Diagram Manual
WDM 33-17-11	Wiring Diagram Manual

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Prepare to Remove the Left and Right Forward Ceiling Panels.

SUBTASK 25-11-21-860-014

(1) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
A	9	C00308	CONTROL CABIN LIGHTING MAP & KIT
C	9	C00219	PANEL & INSTR CB PANEL

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	8	C00394	WINDOW HEAT POWER RIGHT FRONT
B	9	C00392	WINDOW HEAT POWER LEFT SIDE
B	20	C00393	WINDOW HEAT POWER RIGHT SIDE
B	21	C00228	WINDOW HEAT POWER LEFT FRONT

SUBTASK 25-11-21-020-001

(2) Remove the upper closure panel [1] and the lower closure panel [3] (View A, Figure 201):

(a) Remove the screws [2].

NOTE: The closure panels are attached with hook-and-loop fasteners.

SUBTASK 25-11-21-020-002

(3) Remove the lower lining [4] from the No. 3 window (View A and View B Figure 201):

(a) Disconnect the coil cord assembly [5] from the connector receptacle [12].

(b) Remove the screws [6] and screw [7].

(c) Move the lower lining [4] to get access to the back side of the lower lining [4].

(d) Disconnect the cable from the light assembly [8] at the electrical splice (WDM 33-14-12).

(e) Remove the nut [9], washer [10], and terminal [11].

(f) Remove the connector receptacle [12] from the back of the lower lining [4] (WDM 30-41-11, WDM 30-41-12, SWPM 20-60-06, SWPM 20-63-13).

SUBTASK 25-11-21-020-003

(4) Remove the upper lining [13] from the No. 3 window (View A, Figure 201):

(a) Remove the screws [14].

SUBTASK 25-11-21-020-004

(5) Remove the sunvisor track [16] (View D, Figure 201):

(a) Remove the screws [15] and the screws [17].

NOTE: The sunvisor will be removed with the sunvisor track. It is not necessary to separate the sunvisor from the sunvisor track.

SUBTASK 25-11-21-020-005

(6) Remove the forward lining cover [18] from the No. 1 window (View E, Figure 201):

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the screws [19].

(b) Let the forward lining cover [18] hang from the drain hoses.

NOTE: You can let the forward lining cover hang from the hoses.

(c) If it is necessary, remove the forward lining cover [18] from the airplane.

1) Remove the straps [20] to disconnect the tubes [21] from the drain hoses.

SUBTASK 25-11-21-020-007

(7) Remove the eyebrow pad [22] (View F, Figure 201):

(a) Open the No.2 sliding window for access.

(b) Remove the screws [23].

(c) Lower the eyebrow pad [22].

(d) Disconnect the electrical terminals from the chart light assembly [24] (WDM 33-17-11).

(e) Disconnect the cables from the interphone jacks at the electrical splices (WDM 23-51-21).

SUBTASK 25-11-21-020-038

(8) Remove the eyebrow pad [25] (View G, Figure 201):

(a) Open the No.2 sliding window for access.

(b) Remove the cover [26].

1) Remove the screws [27].

(c) Remove the screw [28].

(d) Lower the eyebrow pad [25].

(e) Remove the bracket [29] from the chart light assembly [30] (TASK 33-17-00-960-803).

(f) Disconnect the electrical terminals from the chart light assembly [30] (WDM 33-17-11).

(g) Disconnect the cables from the map light [31] at the electrical splices (WDM 33-17-11).

(h) Disconnect the cables from the interphone jacks at the electrical splices (WDM 23-51-11).

SUBTASK 25-11-21-020-008

(9) Remove the escape ropes (View H, Figure 201):

(a) Do this task: Flight Compartment Escape Rope Removal, TASK 25-61-10-000-801.

SUBTASK 25-11-21-020-009

(10) Remove the rubber trim strips [32] from the aft edge of the ceiling panel (View I, Figure 201):

NOTE: The rubber trim strips are attached to the ceiling panel edges with hook-and-loop fasteners.

SUBTASK 25-11-21-020-047

(11) Remove the trim pad [33].

NOTE: The trim pad is attached with hook-and-loop fasteners.

E. Remove the Left and Right Forward Ceiling Panels

SUBTASK 25-11-21-020-010

(1) Remove the ceiling panel [34] (View J and View K, Figure 201):

(a) Remove the screws [35].

NOTE: One screw is located in the spare bulb compartment.

(b) Lower the ceiling panel [34].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Disconnect the connector [36] from the speaker.

(d) Remove the screw [37], washer [38], and terminal [39] from the light assembly.

(e) Remove the nut [40], washer [41], and terminal [42] from the light assembly.

(f) Remove the duct [43] from the plenum.

1) Remove the strap [44].

SUBTASK 25-11-21-020-016

(2) Remove the ceiling panel [45] (View L and View M, Figure 201):

(a) Remove the screws [46].

(b) Lower the ceiling panel [45].

(c) Disconnect the connector [47] from the speaker.

(d) Remove the duct [48] from the plenum.

1) Remove the strap [49].

(e) Remove the duct [50] from the plenum.


1) Remove the strap [51].

(f) Remove the drain tube [52] from the drain.

1) Remove the strap [53].

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

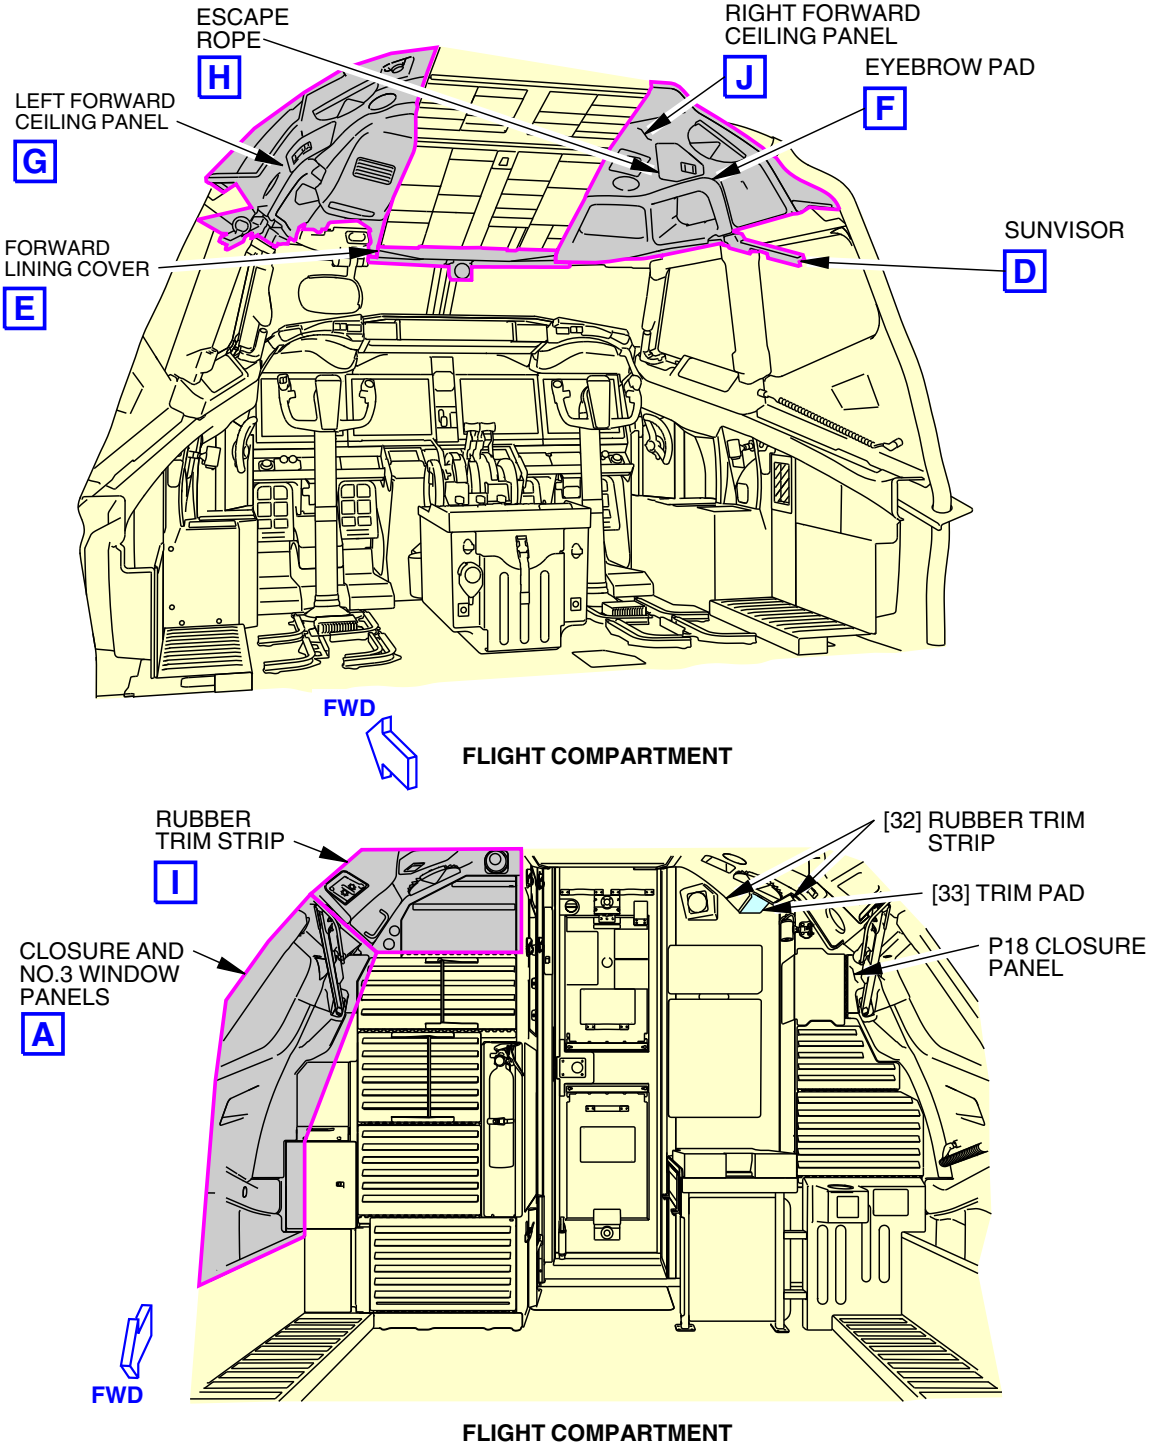

3090177 S0000841220_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 1 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

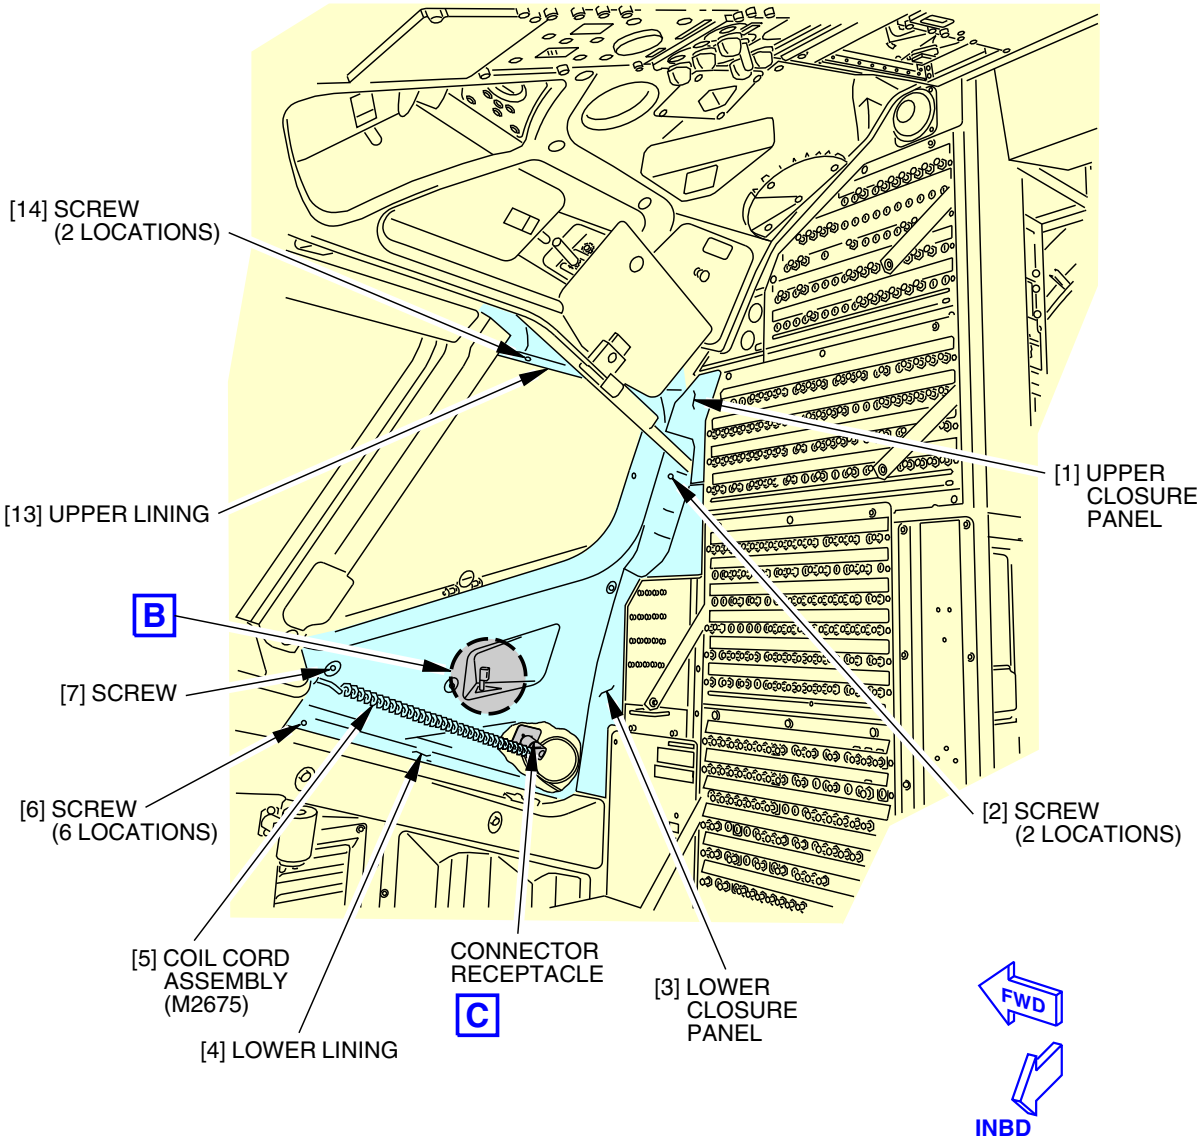


CLOSURE AND WINDOW PANELS
(RIGHT SIDE IS SHOWN, LEFT SIDE IS OPPOSITE)

A

3090181 S0000841221_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 2 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

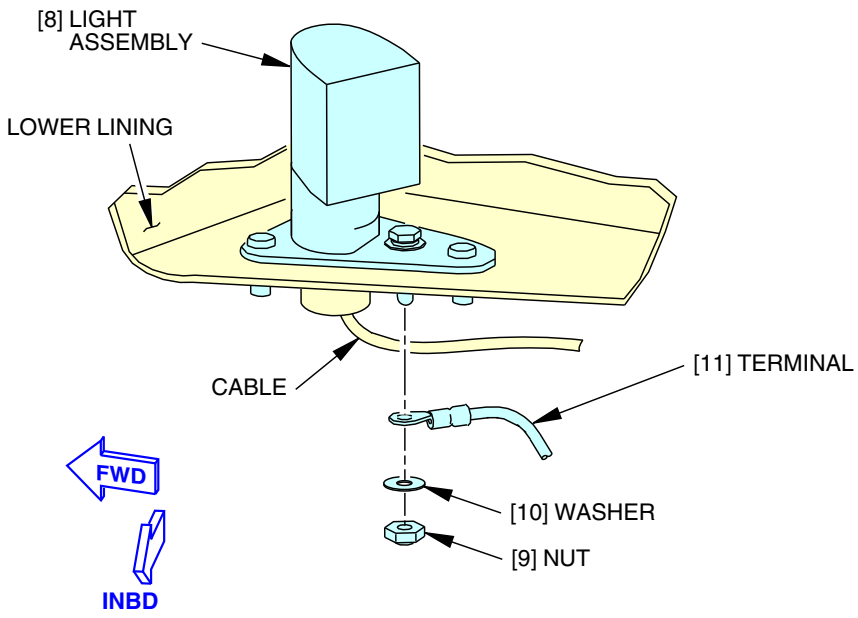

3090187 S0000841222_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 3 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

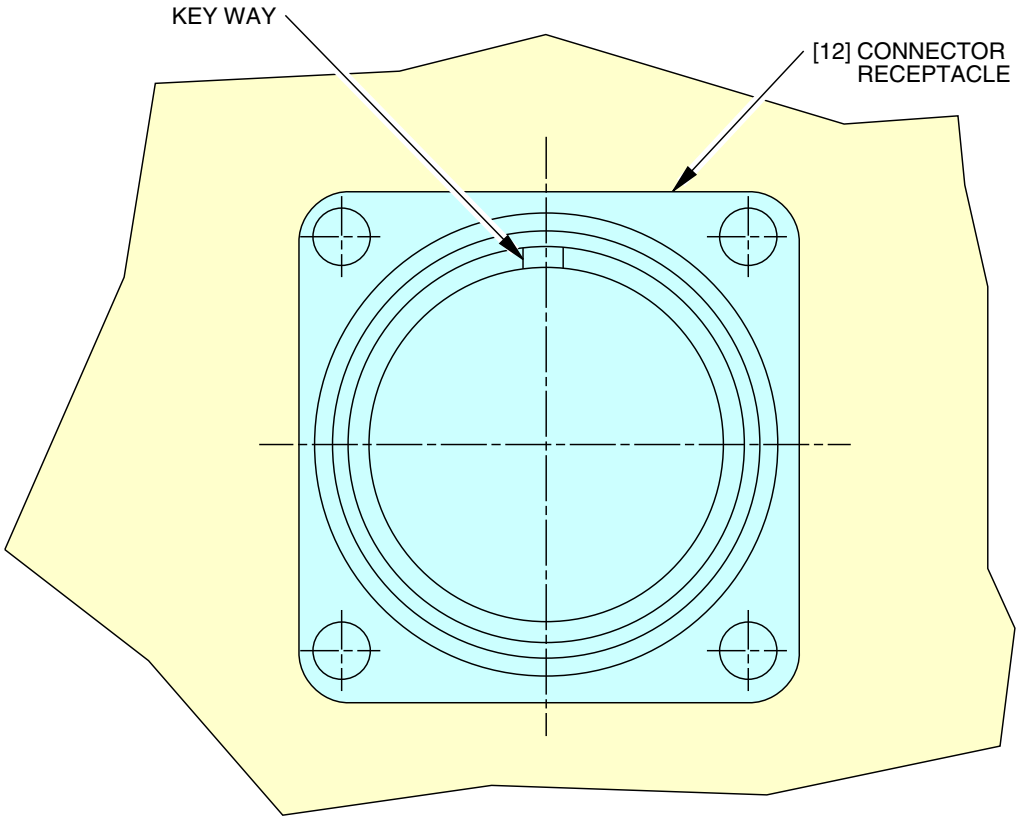


CONNECTOR RECEPTACLE (EXAMPLE)

C

3090195 S0000841224_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 4 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

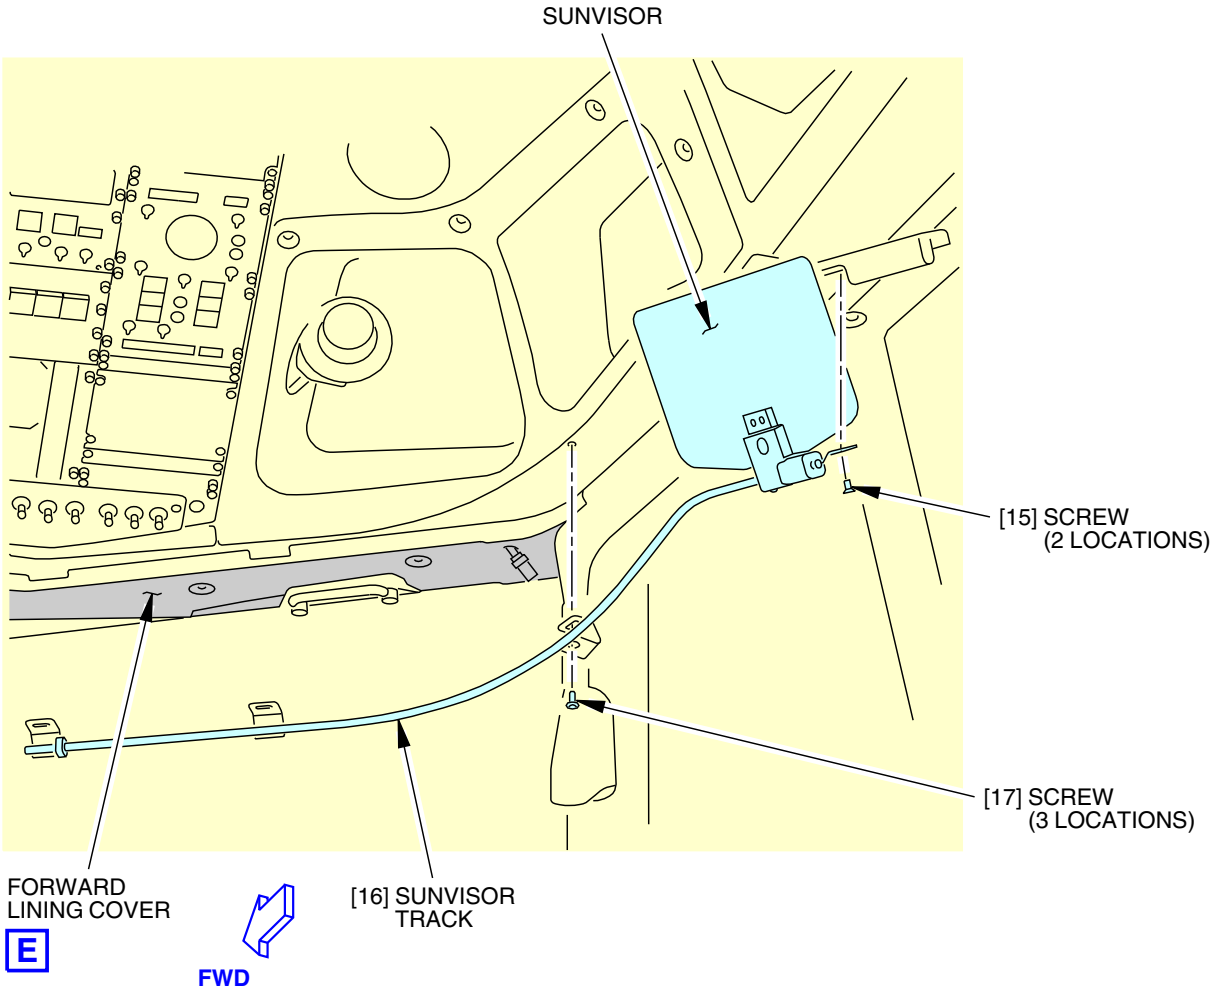


SUNVISOR
(RIGHT SIDE IS SHOWN, LEFT SIDE IS ALMOST THE SAME)
D

3090203 S0000841225_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 5 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

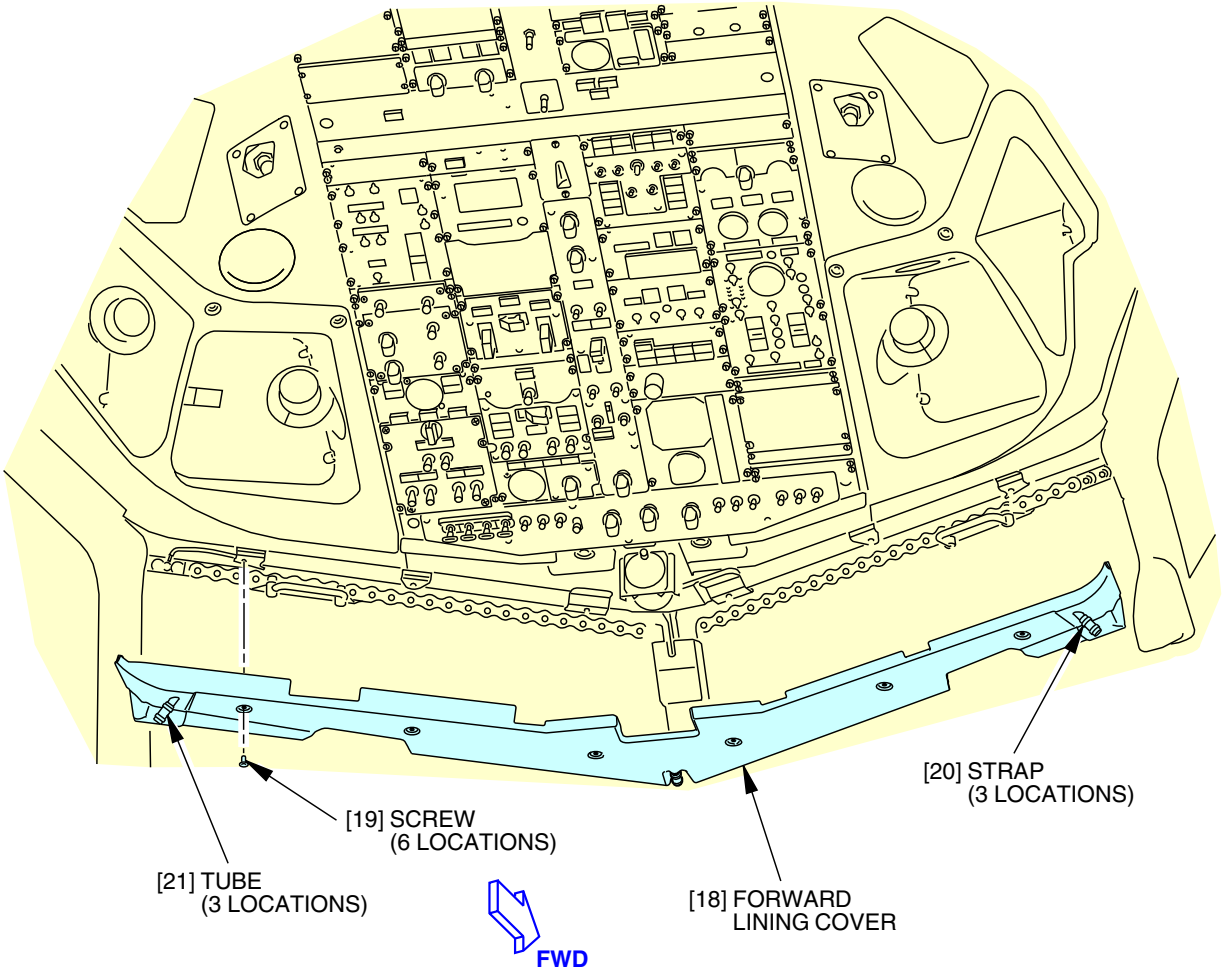


FORWARD LINING COVER

E

3090219 S0000841226_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 6 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

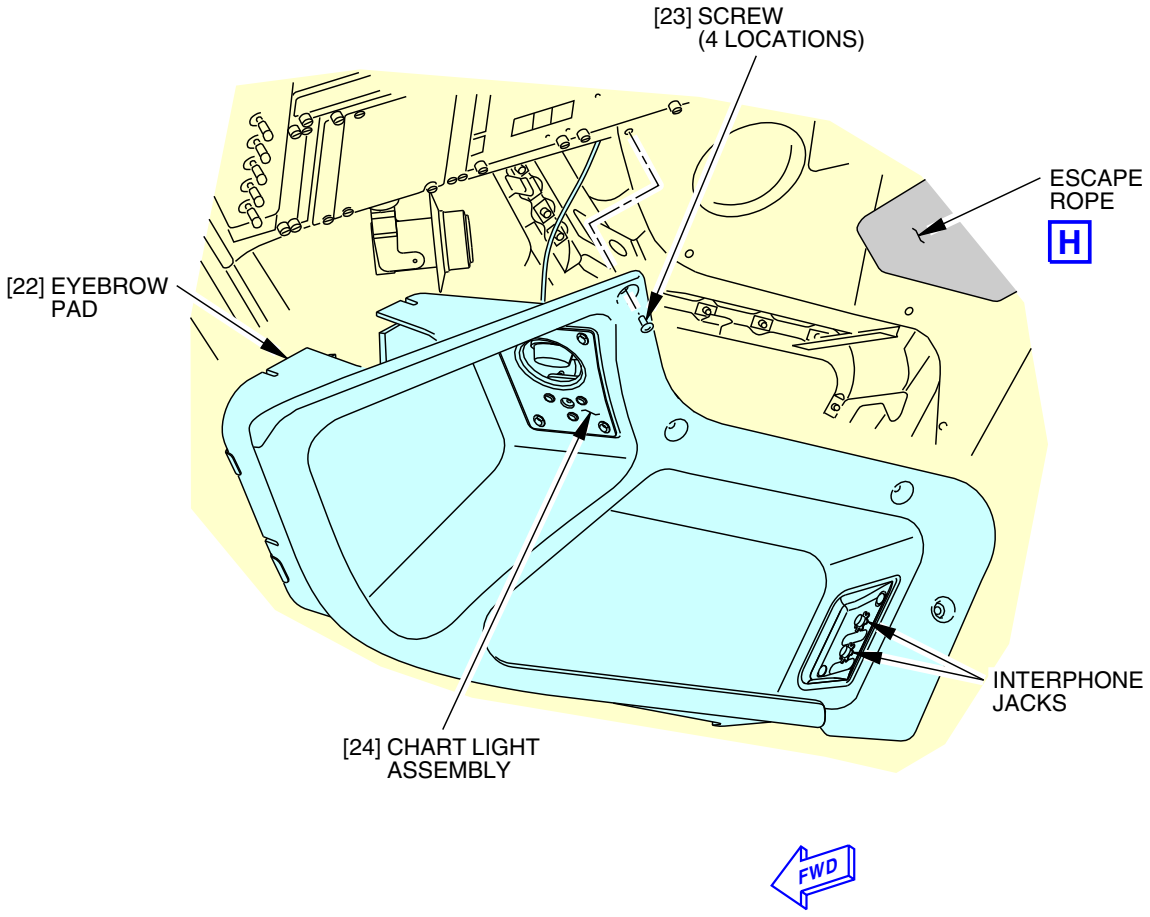

3090220 S0000841227_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 7 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

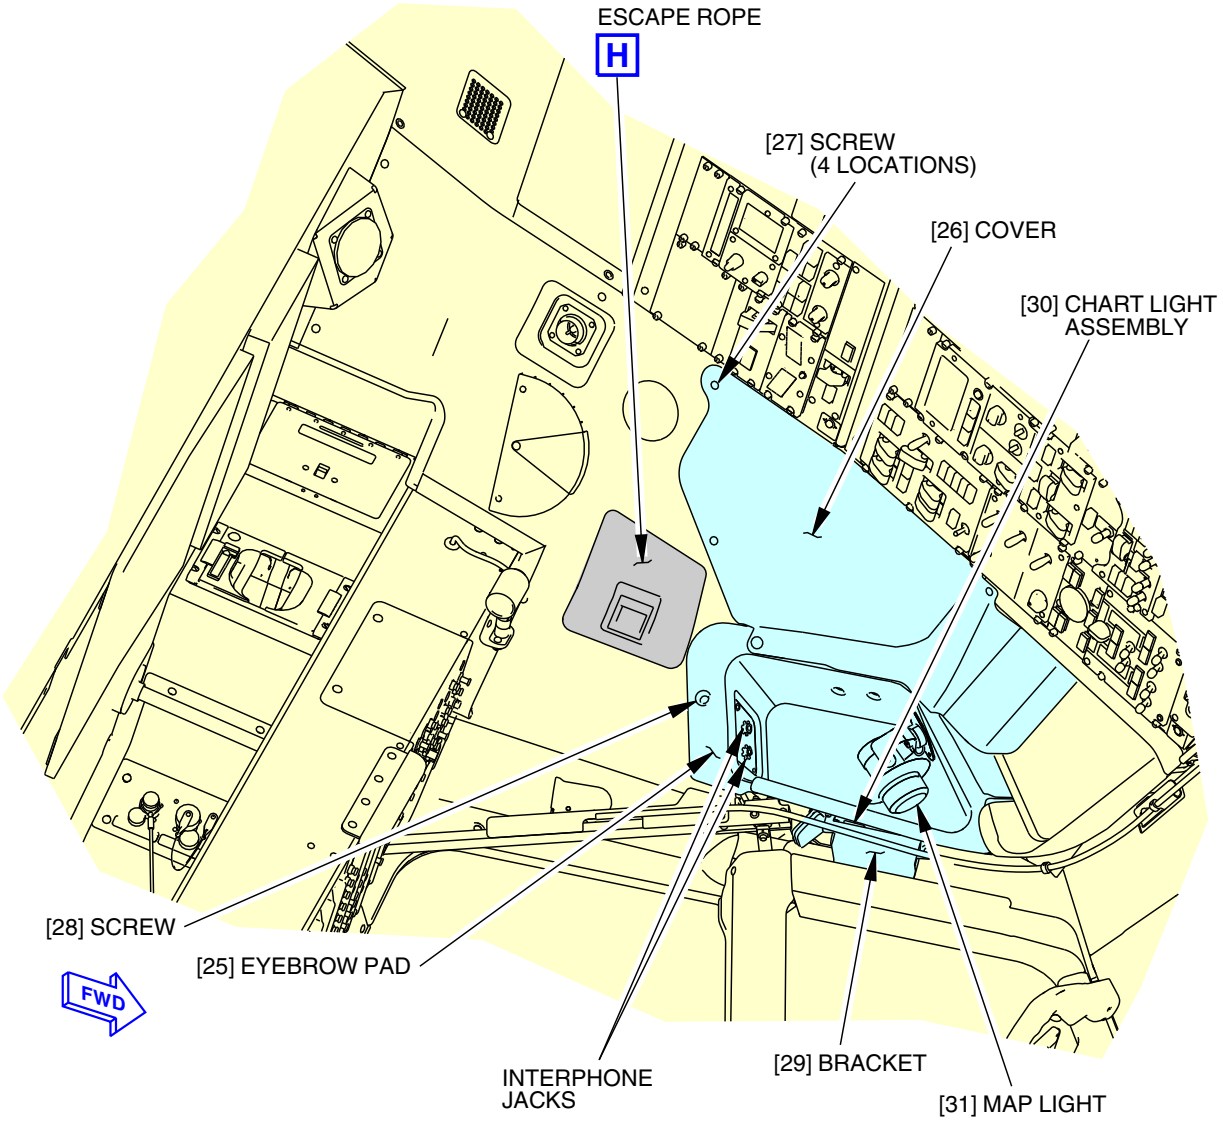


LEFT FORWARD CEILING PANEL

G

3090224 S0000841230_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 8 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

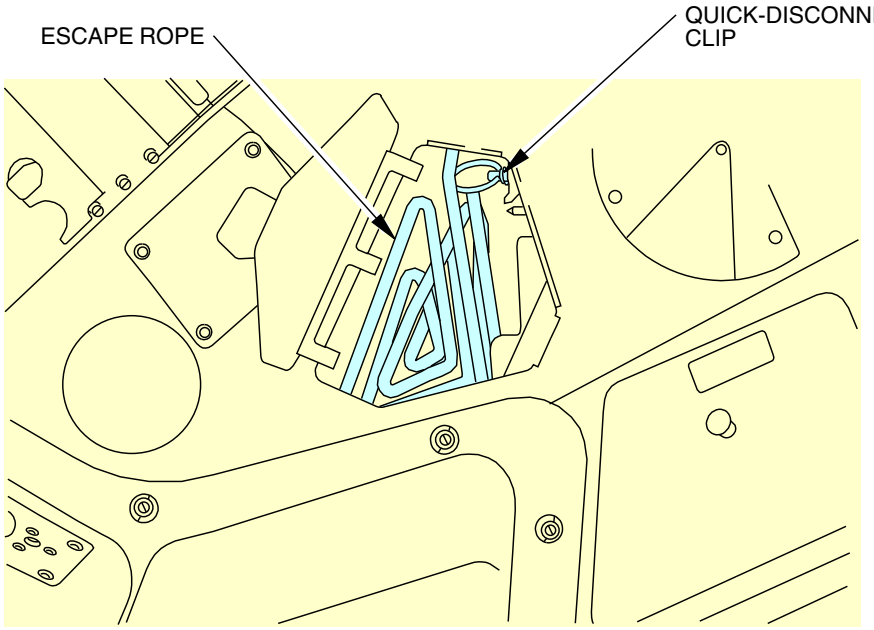

FWD

ESCAPE ROPE
(RIGHT SIDE IS SHOWN, LEFT SIDE IS ALMOST THE SAME)

H

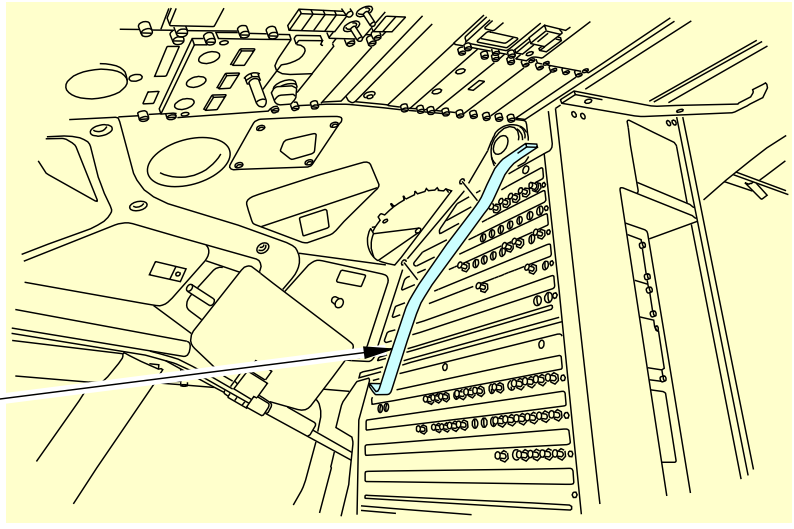

FWD


RUBBER TRIM STRIP
(RIGHT SIDE IS SHOWN, LEFT SIDE IS OPPOSITE)

I

3090223 S0000841229_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 9 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

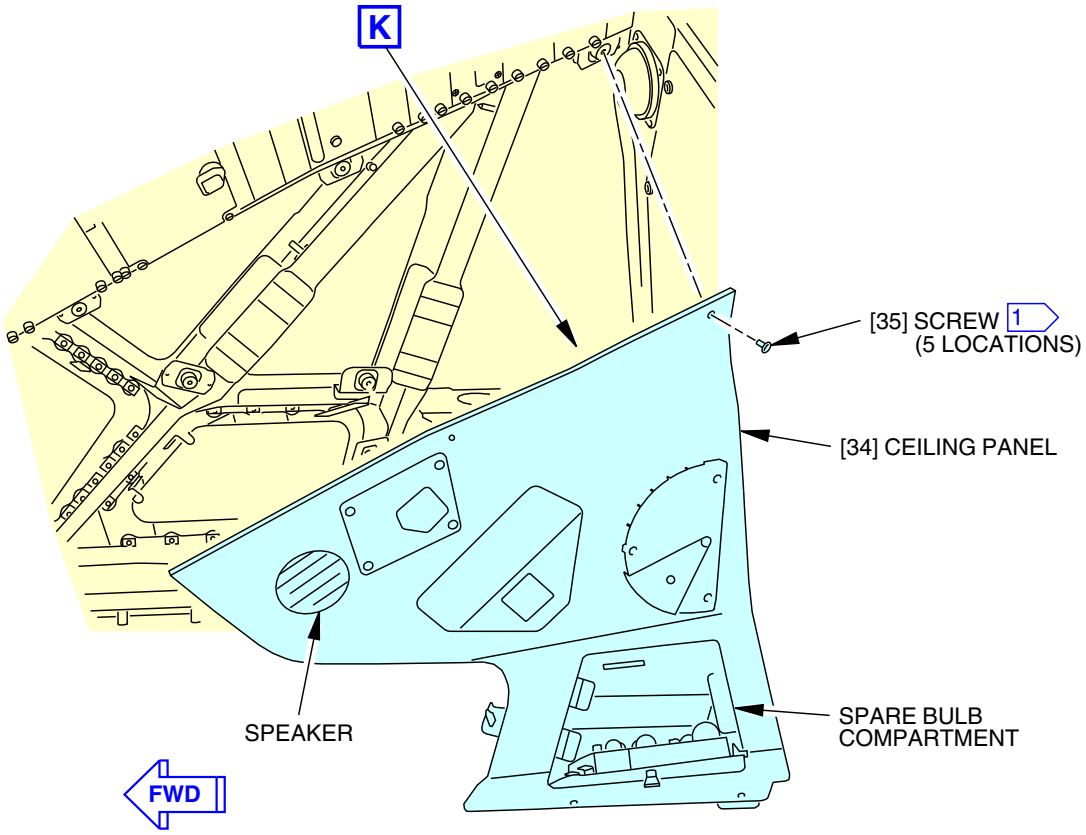

RIGHT FORWARD CEILING PANEL


J

1 THE SCREW IS INSIDE THE SPARE BULB COMPARTMENT.

3090222 S0000841228_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 10 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

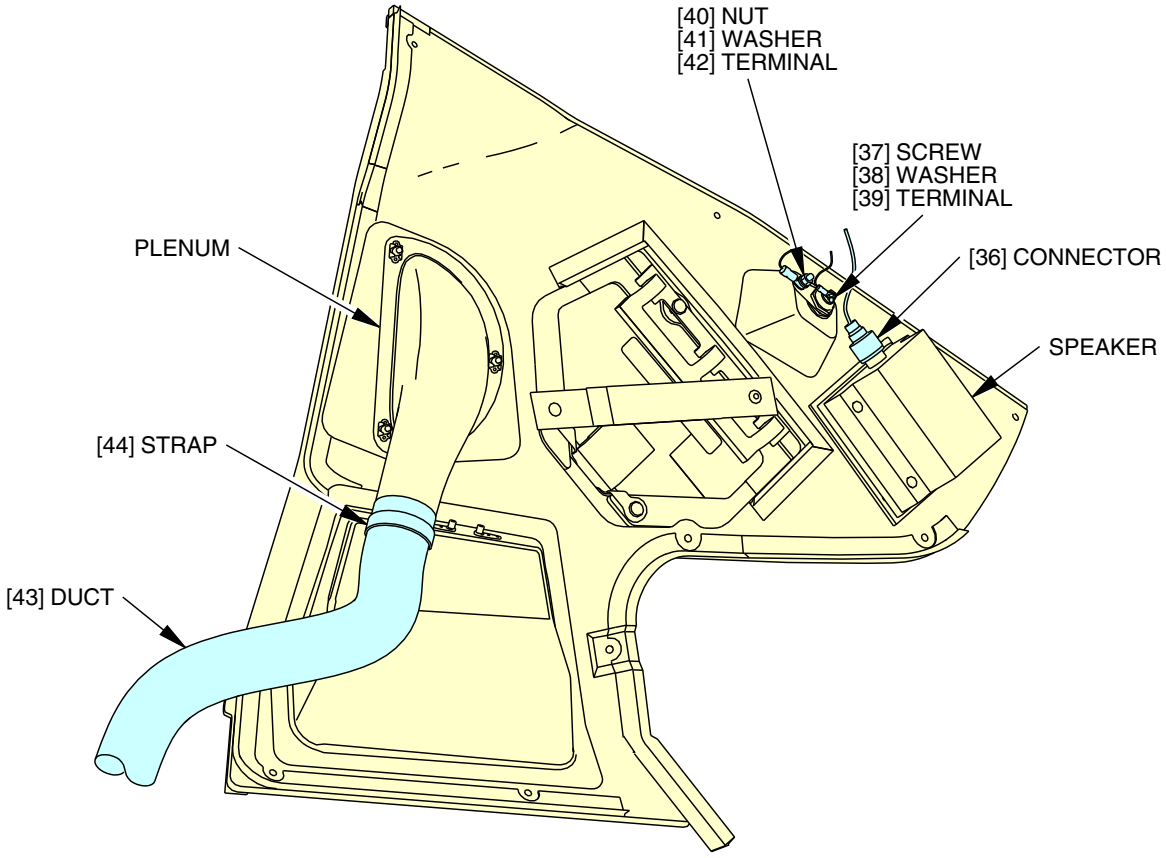

3090310 S0000841231_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 11 of 13)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

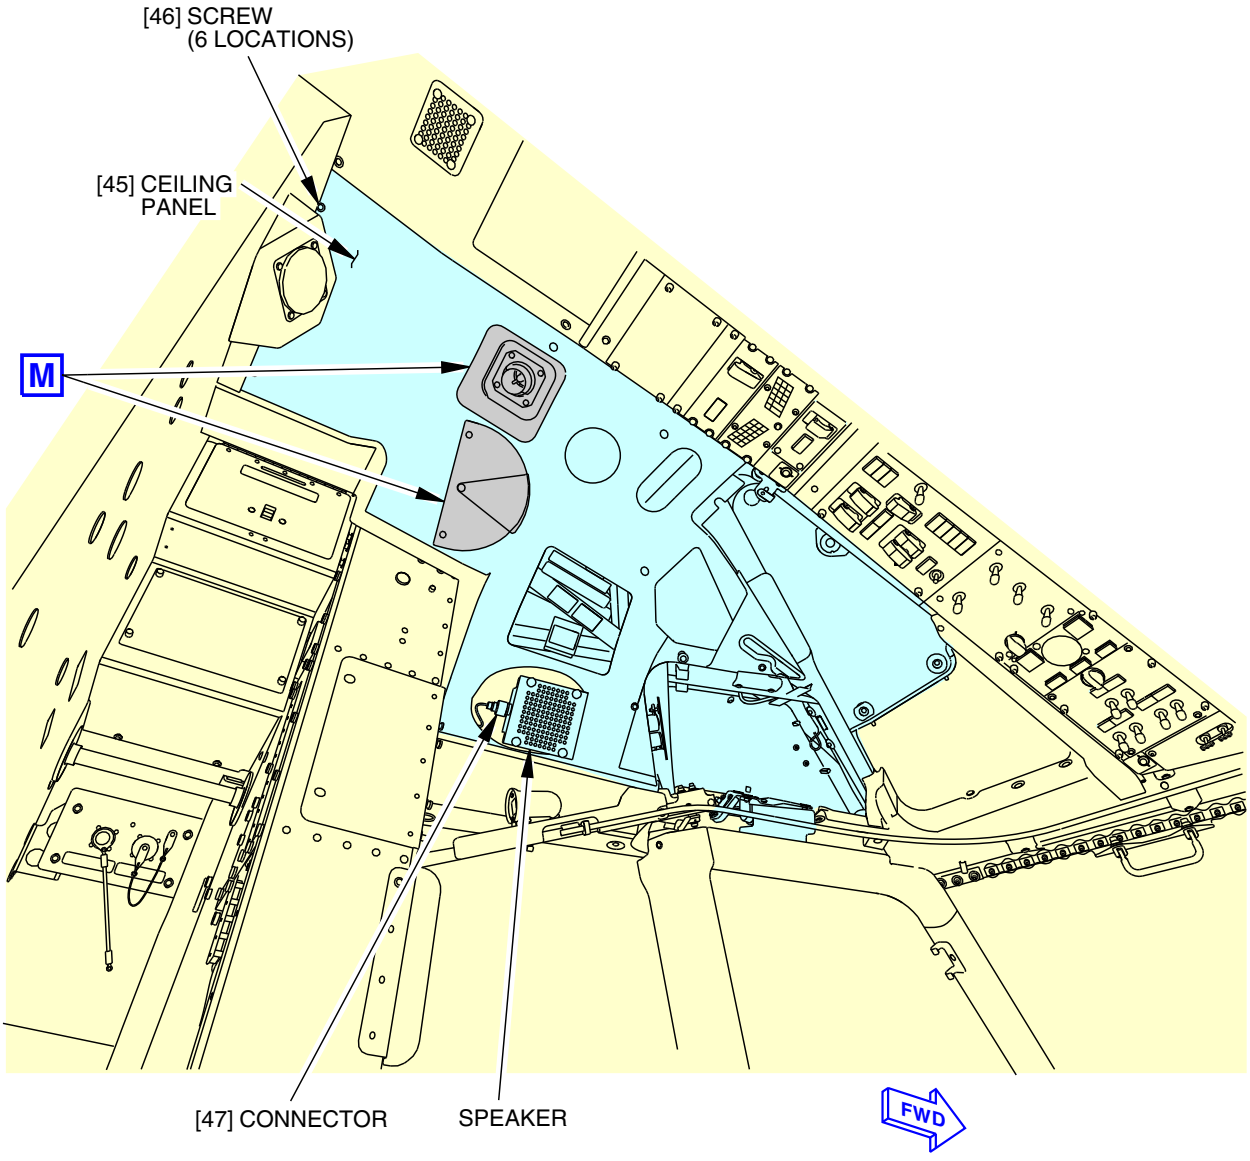

3099647 S0000845226_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 12 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

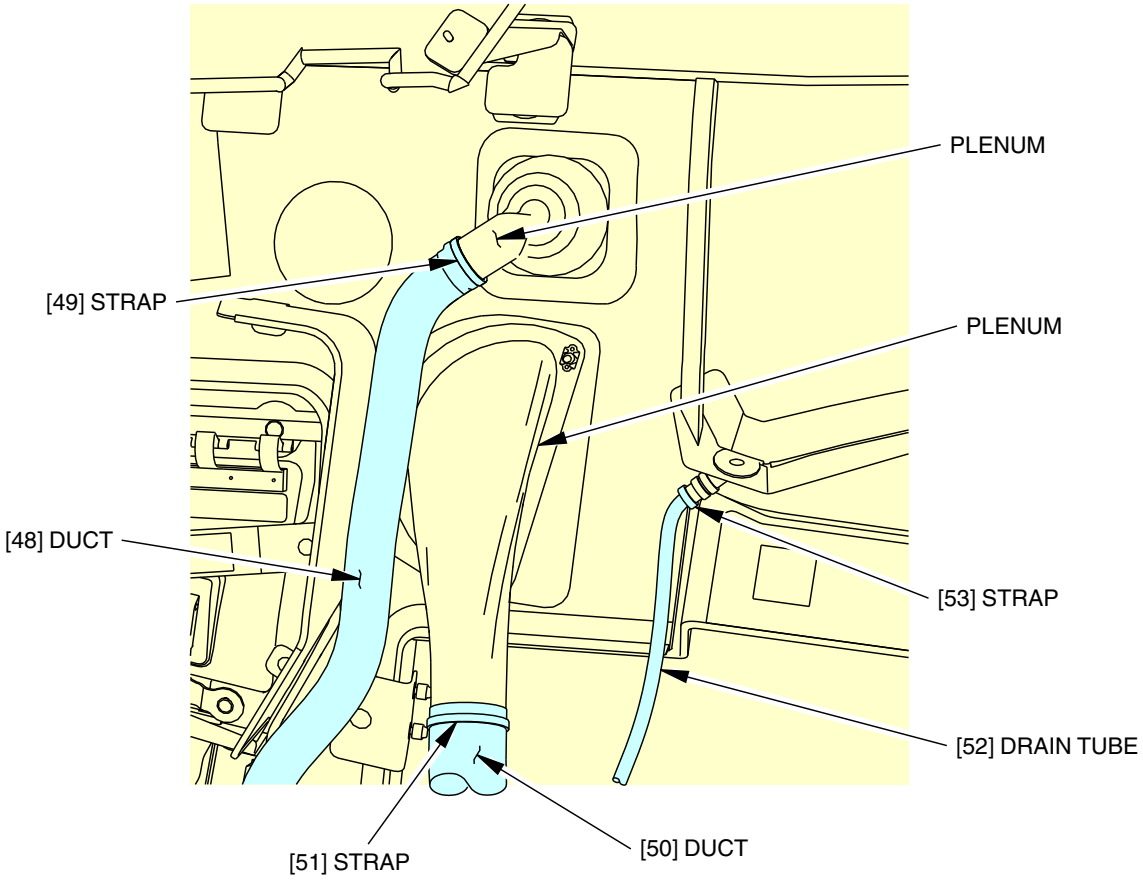

3090330 S0000841232_V1

Flight Compartment Forward Ceiling Panel Installation
Figure 201/25-11-21-990-806 (Sheet 13 of 13)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-400-801

3. Flight Compartment Forward Ceiling Panel Installation

A. General

(1) This task gives instructions to install the forward ceiling panels to the right and left sides of the flight compartment.

B. References

Reference	Title
23-51-00-710-801	Flight Interphone System Operational Test (P/B 501)
25-61-10-400-801	Flight Compartment Escape Rope Installation (P/B 201)
33-17-00-960-801	Map Light - Lamp Replacement (P/B 201)
33-17-00-960-803	Chart Light - Lamp Replacement (P/B 201)
SWPM 20-20-00	ELECTRICAL BONDING PROCESSES
SWPM 20-20-10	Replacement of Ground Studs and Bonding Jumper Installation
SWPM 20-60-06	Standard Wiring Practices Manual
SWPM 20-63-13	Standard Wiring Practices Manual
WDM 23-51-11	Wiring Diagram Manual
WDM 23-51-21	Wiring Diagram Manual
WDM 30-41-11	Wiring Diagram Manual
WDM 33-14-12	Wiring Diagram Manual
WDM 33-17-11	Wiring Diagram Manual

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-614	Bonding Meters - Non-Intrinsically Safe (For use in outside Class I, Divisions I & II non-hazardous locations. For hazardous locations, use COM-1550). Part #: 247000 Supplier: 00426 Part #: 620LK Supplier: 1CRL2 Part #: BLR-0003-XX Supplier: KC432 Part #: BT51 Supplier: 00426 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659 Opt Part #: 247001 Supplier: 00426

D. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
B50085	Solvent - Skykleen 1000	BAC5750
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

F. Install the Forward Ceiling Panel

SUBTASK 25-11-21-420-001

(1) Install the ceiling panel [45] (View L and View M, Figure 201):

(a) Install the drain tube [52] to the drain.

1) Install the strap [53].

(b) Install the duct [50] to the plenum.

1) Install the strap [51].

(c) Install the duct [48] to the plenum.

1) Install the strap [49].

(d) Connect the connector [47] to the speaker.

(e) Put the ceiling panel [45] into the correct position.

(f) Install the screws [46].

SUBTASK 25-11-21-420-039

(2) Install the ceiling panel [34] (View J and View K, Figure 201):

(a) Install the duct [43] to the plenum.

1) Install the strap [44].

(b) Install the electrical cables to the light assembly (WDM 33-14-12).

1) Use the cotton wiper, G00034, moist in solvent, B50085, or alcohol, B00130, to clean the terminal [42] and mating surfaces.

2) Install the terminal [42] to the light assembly with the washer [41] and the nut [40].

3) Tighten the nut [40] to 28 in-lb (3.2 N·m) - 35 in-lb (4.0 N·m).

4) Measure the electrical bonding resistance between the terminal [42] and the airplane structure (SWPM 20-20-10).

a) Use a non-intrinsically safe bonding meter, COM-614.

b) Make sure that the resistance is 0.001 ohm (1.0 milliohm) or less.

5) Install the terminal [39] to the light assembly with the washer [38] and the screw [37].

(c) Connect the connector [36] to the speaker.

(d) Put the ceiling panel [34] into the correct position.

(e) Install the screws [35].

NOTE: One screw is located in the spare bulb compartment.

SUBTASK 25-11-21-420-002

(3) Do these steps to install the items removed for access:

(a) Install the rubber trim strip [32] on the edges of the ceiling panels (View I, Figure 201).

(b) Install the trim pad [33].

NOTE: The trim pad is installed on the aft corner above the small stowage compartment.

(c) Install the escape ropes (View H, Figure 201).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Do this task: Flight Compartment Escape Rope Installation, TASK 25-61-10-400-801.

(d) Install the eyebrow pad [25] (View G, Figure 201).

1) Open the No.2 sliding window for access.
2) Connect the cables to the interphone jacks at the electrical splices (WDM 23-51-11).
3) Connect the cables to the map light [31] at the electrical splices (WDM 33-17-11).
4) Connect the electrical terminals to the chart light assembly [30] (WDM 33-17-11).
5) Install the bracket [29] to the chart light assembly [30] (TASK 33-17-00-960-803).
6) Put the left eyebrow pad [25] into position.
7) Install the screw [28].
8) Install the cover [26] with the screws [27].

(e) Install the eyebrow pad [22] (View F, Figure 201).

1) Open the No.2 sliding window for access.
2) Connect the cables to the interphone jacks at the electrical splices (WDM 23-51-21).
3) Connect the electrical terminals to the chart light assembly [24] (WDM 33-17-11).
4) Put the eyebrow pad [22] into the correct position.
5) Install the screws [23].

(f) Install the forward lining cover [18] to the No. 1 window (View E, Figure 201).

1) If the forward lining cover [18] was removed from the airplane, do these steps:
   a) Connect the tubes [21] to the drain hoses.
   b) Install the straps [20].
2) Put the forward lining cover [18] into the correct position.
3) Install the screws [19].

(g) Install the sunvisor track [16] with the screws [17] and the screws [15] (View D, Figure 201).

(h) Install the upper lining [13] to the No. 3 window with the screws [14] (View A, Figure 201).

(i) Install the lower lining [4] to the No. 3 window (View A, View B, and View C Figure 201).

1) Install the connector receptacle [12] to the back of the lower lining [4] (WDM 30-41-11, SWPM 20-60-06, SWPM 20-63-13).
   a) Make sure that the connector receptacle [12] keyway is aligned to the top of the receptacle (12 o'clock position) (View C, Figure 201).
2) Use the cotton wiper, G00034, moist in solvent, B50085, or alcohol, B00130, to clean the terminal [11] and mating surfaces.
3) Install the terminal [11], washer [10], and nut [9].
4) Tighten the nut [9] to 15 in-lb (1.7 N·m).
5) Measure the electrical bonding resistance between the terminal [11] and structure (SWPM 20-20-00).
   a) Use a non-intrinsically safe bonding meter, COM-614.
   b) Make sure that the resistance is 0.001ohm (1.0 milliohm) or less.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

6) Connect the cable from the light assembly [8] to the airplane electrical wiring (WDM 33-14-12).

7) Put the lower lining [4] into the correct position.

8) Install the screw [7] and screws [6].

9) Connect the coil cord assembly [5] to the connector receptacle [12].

(j) Install the lower closure panel [3] and the upper closure panel [1] with the screws [2] (View A, Figure 201).

SUBTASK 25-11-21-860-007

(4) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
A	9	C00308	CONTROL CABIN LIGHTING MAP & KIT
C	9	C00219	PANEL & INSTR CB PANEL

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	8	C00394	WINDOW HEAT POWER RIGHT FRONT
B	9	C00392	WINDOW HEAT POWER LEFT SIDE
B	20	C00393	WINDOW HEAT POWER RIGHT SIDE
B	21	C00228	WINDOW HEAT POWER LEFT FRONT

G. Installation Tests

SUBTASK 25-11-21-710-002

(1) Do a check of the window No.2 heat system:

NOTE: If the window temperature is more than 110°F (43°C), the Window Heat Control Unit (WHCU) will not supply electrical power to heat the window.

(a) Put the applicable WINDOW HEAT power switch on the window/pitot heat control panel, P5-9, to the ON position.

(b) Make sure that the corresponding ON light on the window/pitot heat control panel comes on.

NOTE: It can take up to 15 seconds for a light to come on.

NOTE: If the window temperature is more than 110°F (43°C), the corresponding On light on the window/pitot heat control panel stays off.

(c) Make sure that the OVERHEAT light does now come on.

(2) Do an operational test of the interphone jacks and the speakers in the flight compartment (TASK 23-51-00-710-801).

SUBTASK 25-11-21-710-010

(3) Do a test of the Captain's Map Light (TASK 33-17-00-960-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-21-710-011

(4) Do a test of the Captain's and the First Officer (F/O)'s Chart Light (TASK 33-17-00-960-803).

SUBTASK 25-11-21-710-012

(5) Do a test of the Captain's and the F/O's Circuit Breaker (CB) Panel lights (TASK 33-17-00-960-803).

SUBTASK 25-11-21-710-003

(6) Make sure that the sunvisor operates correctly.

(a) Do this task: Flight Compartment Sunvisor Adjustment and Test, TASK 25-11-21-700-801.

——— END OF TASK ———

TASK 25-11-21-000-802

4. Flight Compartment Dripshield Removal

(Figure 202)

A. References

Reference	Title
25-11-21-200-802	Inspection Access - P5 Panel (P/B 601)
25-80-00-000-801	Insulation Blanket Removal (P/B 401)

B. Tools/Equipment

Reference	Description
STD-765	Scraper - Plastic

C. Consumable Materials

Reference	Description	Specification
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
B00666	Solvent - Methyl Propyl Ketone	BMS11-9

D. Location Zones

Zone	Area
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50
211	Flight Compartment - Left
212	Flight Compartment - Right

E. Remove the Dripshield

SUBTASK 25-11-21-010-001

(1) Remove the P5 overhead instrument modules.

SUBTASK 25-11-21-010-002

(2) Do this task: Flight Compartment Forward Ceiling Panel Removal, TASK 25-11-21-000-801.

SUBTASK 25-11-21-010-003

(3) Remove the support structure of the P5 overhead panel (TASK 25-11-21-200-802).

SUBTASK 25-11-21-010-004

(4) Remove the dripshield [38] as follows:

(a) Remove the wire supports and clips as necessary.

(b) Loosen the wire bundles as necessary.

(c) Remove the nut [67], washer [68], and jumper [69].

1) If necessary, remove sealant.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Remove the bolts [65], washers [66], bolt [70], washer [71], bolts [72], washers [73], bolts [75], bolts [76], and washers [77].

1) If necessary, remove sealant.

(e) If installed, remove the black foam [74] from the forward 1/4 turn bracket.

1) Clean the forward 1/4 turn bracket with a plastic scraper, STD-765, and solvent, B00184, or solvent, B00666.

2) Clean the surfaces until there is no visible residue.

SUBTASK 25-11-21-210-001


(5) Remove the insulation blanket (TASK 25-80-00-000-801).

SUBTASK 25-11-21-210-002


(6) Do a general visual inspection of the flight compartment structure above the forward and aft P5 panel dripshield [38].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

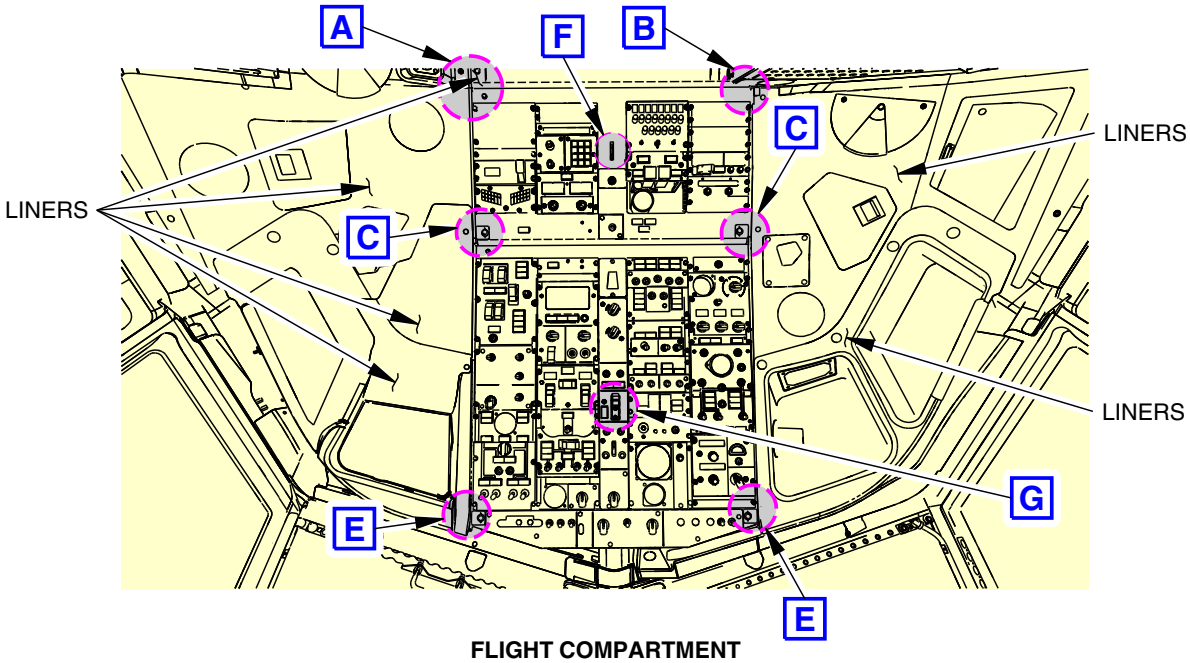

**FLIGHT COMPARTMENT
(VIEW IN THE UP DIRECTION)**

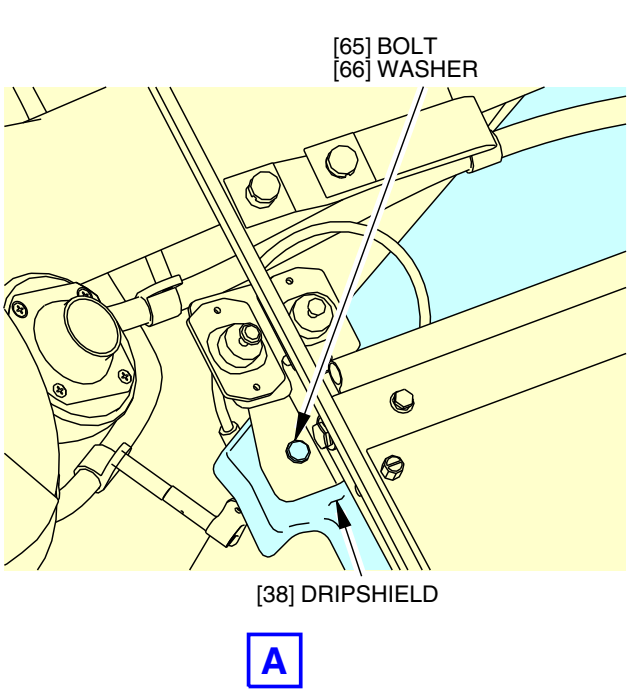


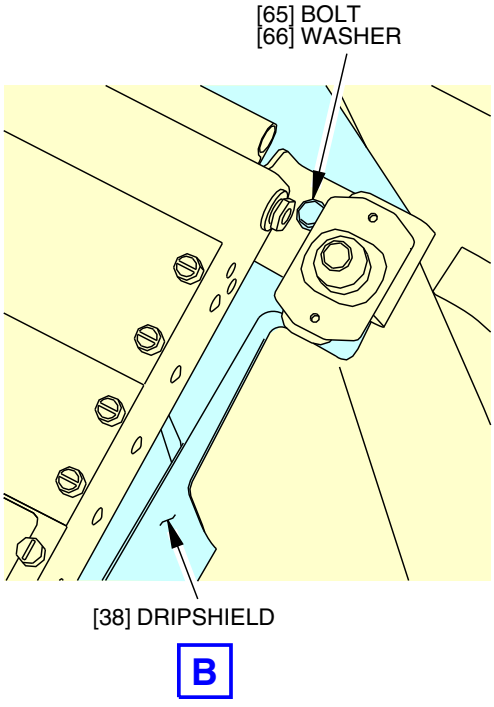

2411836 S00061529225_V3


**Flight Compartment Dripshield Installation
Figure 202/25-11-21-990-802 (Sheet 1 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

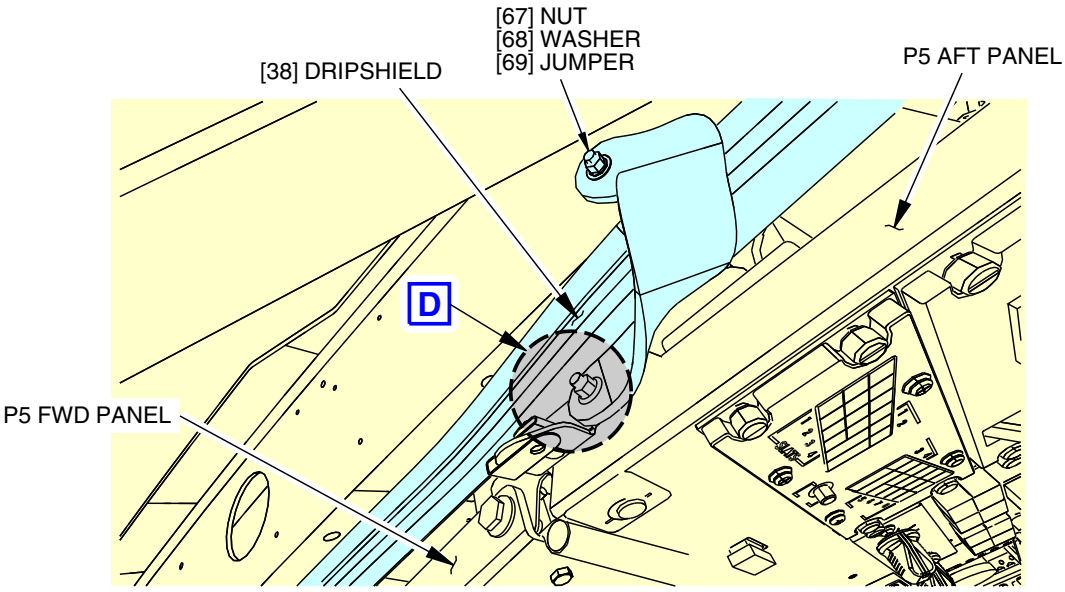

(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)

C

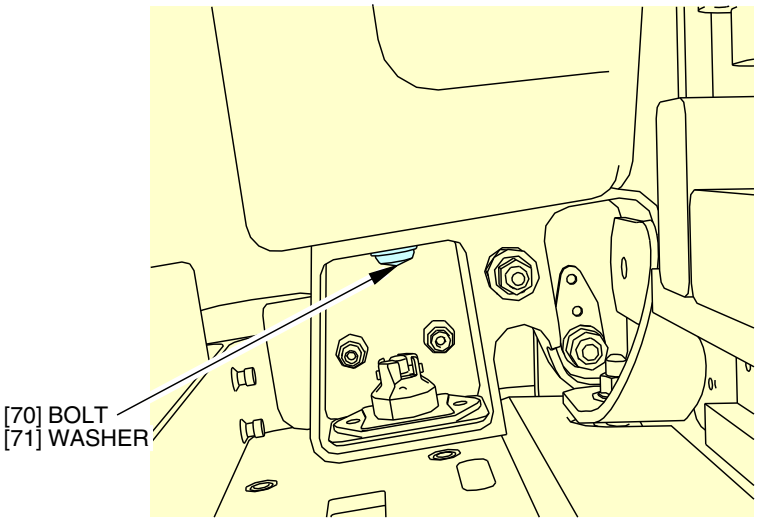


(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)

D

3120589 S0000855008_V1

Flight Compartment Dripshield Installation
Figure 202/25-11-21-990-802 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

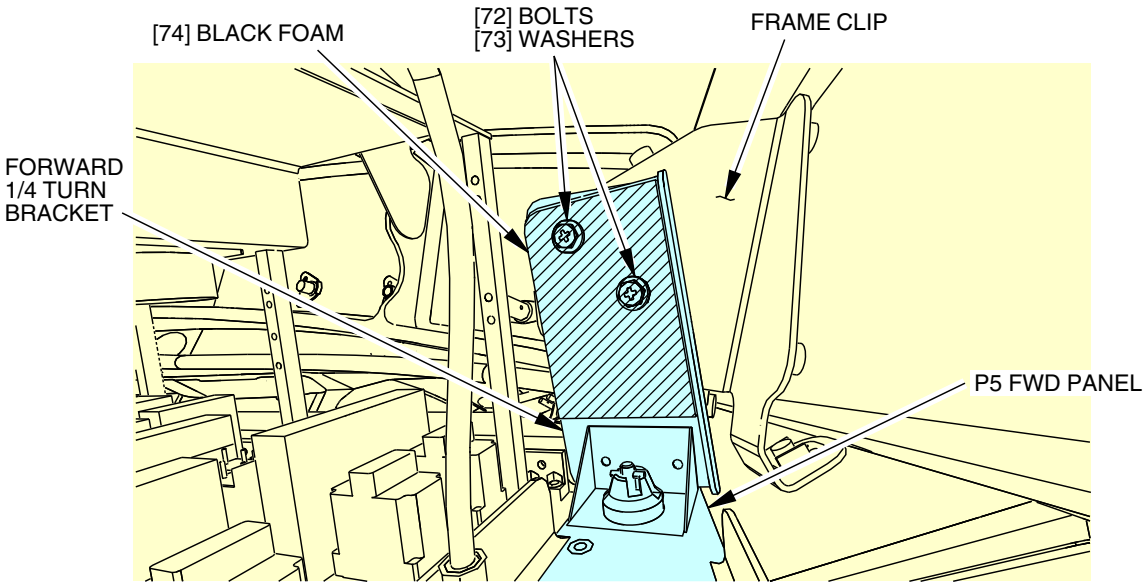


(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)

NOTE:

DRIPSHIELD PAN OMITTED FOR CLARITY.

E

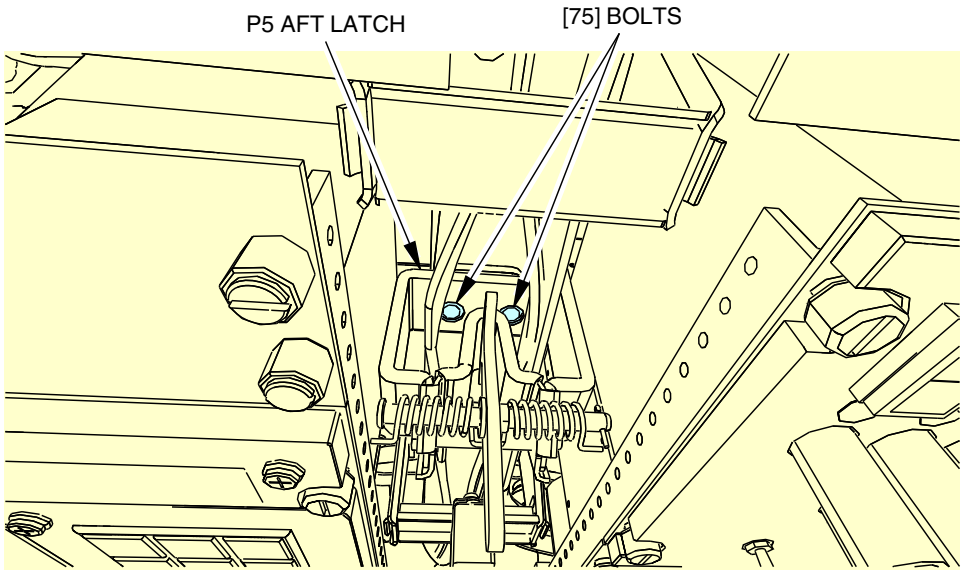


F

3120581 S0000855009_V1

Flight Compartment Dripshield Installation
Figure 202/25-11-21-990-802 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

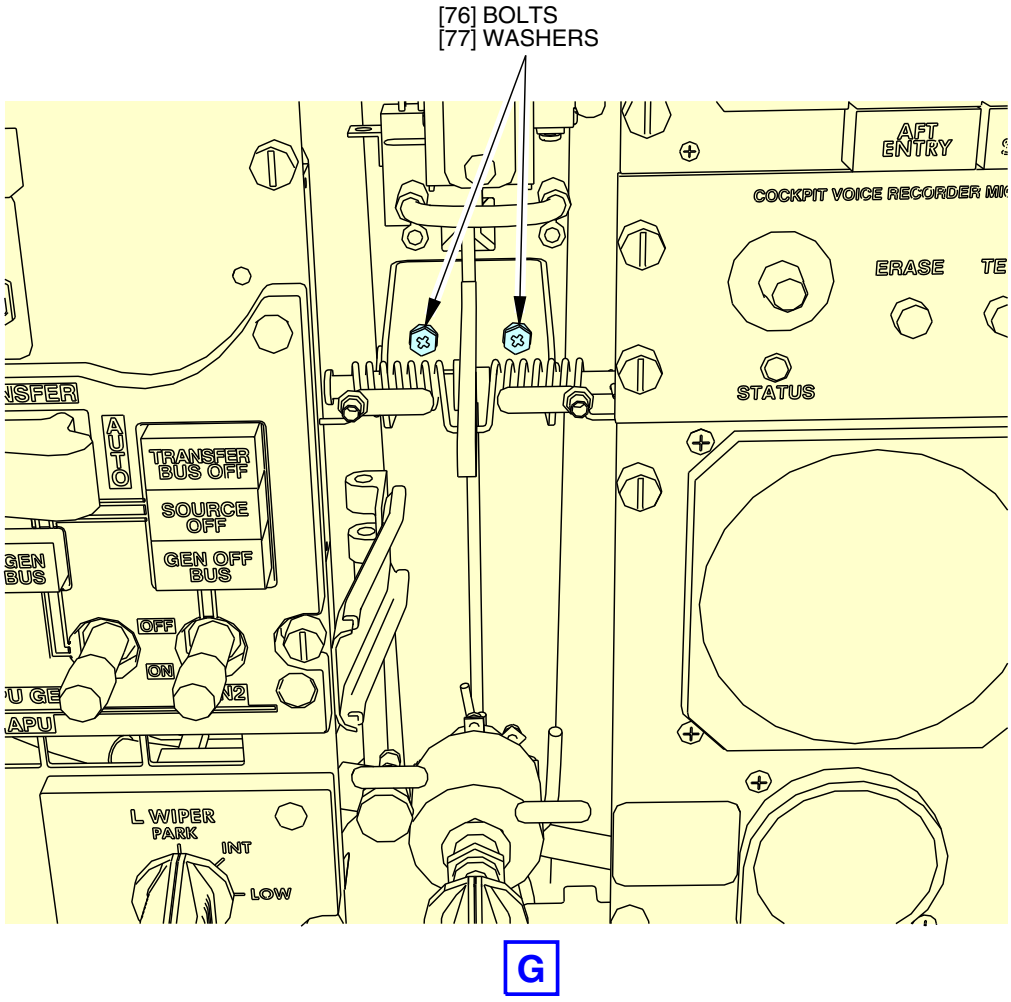

3120599 S0000855010_V1

Flight Compartment Dripshield Installation
Figure 202/25-11-21-990-802 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-400-802

5. Flight Compartment Dripshield Installation

(Figure 202)

A. References

Reference	Title
25-11-21-200-802	Inspection Access - P5 Panel (P/B 601)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
SWPM 20-20-00	ELECTRICAL BONDING PROCESSES

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

C. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A50110	Sealant - Fuel Tank	BMS5-45 Class B-2
A50231	Sealant - Pressure And Environmental - Chromate Type	BMS5-95 Class B
B00130	Alcohol - Isopropyl	TT-I-735
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G50019	Tape - Flexible Foam Sound Damping And Sealing Tape	BMS8-283 Type I

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
38	Dripshield	25-11-21-10-235	PTF ALL

E. Location Zones

Zone	Area
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50
211	Flight Compartment - Left
212	Flight Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Install the Dripshield

SUBTASK 25-11-21-420-011

(1) Install the insulation blanket (TASK 25-80-00-400-801).

SUBTASK 25-11-21-420-012

(2) Install the dripshield [38] as follows:

(a) If necessary, install a new black foam [74] (tape, G50019).

1) Cut the tape, G50019, to the shape of the forward 1/4 turn bracket.

2) Attach the tape, G50019, to the structure.

(b) If necessary, clean the bolts [65], washers [66], bolt [70], washer [71], bolts [72], washers [73], bolt [75], bolts [76], washers [77], latches, and dripshield [38] mating surfaces to remove sealant.

(c) Install the fasteners as follows:

1) Install bolts [65], washers [66], bolt [70], washer [71], bolts [72], and washers [73] through the dripshield [38] and the frame.

2) Install bolts [75] at the P5 aft latch.

3) Install the bolts [76] and washers [77] at the P5 forward latch.

4) Seal the fasteners with adhesive, A00027.

(d) Install the jumper [69] as follows:

1) Clean the surfaces of the aluminum stud and jumper [69].

a) Apply alcohol, B00130, to a cotton wiper, G00034.

b) Use a small amount of pressure on the cotton wiper, G00034.

c) Clean the surfaces until there is no visible residue.

2) Install the nut [67], washer [68], and jumper [69] on the ground stud.

a) Tighten the nut [67] to 30 in-lb (3.4 N·m) - 35 in-lb (4.0 N·m).

3) Measure the electrical bonding resistance between the frame and jumper [69] (SWPM 20-20-00).

a) Use an intrinsically safe approved bonding meter, COM-1550.

b) Make sure that the resistance is 0.0010 Ω (1.0 mΩ) or less.

4) Apply sealant, A50110, or sealant, A50231, to fay seal the jumper [69] to the aluminum stud.

(e) Install the wire supports and clips as necessary.

(f) Tighten the wire bundles as necessary.

SUBTASK 25-11-21-410-002

(3) Install the support structure of the P5 overhead panel (TASK 25-11-21-200-802).

SUBTASK 25-11-21-410-003

(4) Install the overhead instrument modules.

SUBTASK 25-11-21-410-004

(5) Do this task: Flight Compartment Forward Ceiling Panel Installation, TASK 25-11-21-400-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-700-801

6. Flight Compartment Sunvisor Adjustment and Test

(Figure 203)

A. General

(1) The sunvisor adjustment procedure will make sure that the force necessary to move the flight compartment sunvisors is correct.

B. Tools/Equipment

Reference	Description
STD-1397	Gauge - Force
STD-4787	Wrench - Allen, Hex, 9/64 inch

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Adjust the Sunvisor

SUBTASK 25-11-21-720-001

(1) Adjust the force to turn the sunvisor around the perimeter of the sunvisor track.

(a) Put the sunvisor in the fully down position.

(b) Put the sunvisor lock release lever to the lock position.

(c) Use the 9/64 inch allen wrench, STD-4787 to adjust the brake tension screws.

(d) Adjust the two screws to the correct tension.

1) Adjust the setscrew in 1/4 turn increments clockwise to loosen the tension

2) Adjust the setscrew in 1/4 turn increments counterclockwise to tighten the tension

(e) Use a force gauge, STD-1397 to measure the force.

1) Measure the force applied perpendicular to the vertical edge of the sunvisor plate to turn the sunvisor around the sunvisor track.

(f) Make sure that the force is between 0.8 lbf (3.6 N) to 1.2 lbf (5.3 N)

SUBTASK 25-11-21-720-002

(2) Adjust the force to turn the sunvisor.

(a) Put the sunvisor in the fully down position.

(b) Put the sunvisor lock release lever to the lock position.

(c) Adjust the two screws to the correct tension.

1) Adjust the screws in 1/4 turn increments clockwise to loosen the tension

2) Adjust the screws in 1/4 turn increments counterclockwise to tighten the tension

(d) Use a force gauge, STD-1397 to measure the force.

(e) Make sure that the force is between1.0 lbf (4.4 N) to 1.5 lbf (6.7 N).

SUBTASK 25-11-21-800-001

(3) Make sure that the clamping block assembly operates correctly.

(a) Put the sunvisor lock release lever to the unlock position on the clamp block assembly.

(b) Make sure that the sunvisor slides smoothly along the sunvisor track.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Put the sunvisor lock release lever in the locked position on the clamp block assembly.


(d) Make sure that the sunvisor cannot move on the sunvisor track.

(e) Replace the sunvisor.

NOTE: When the clamp block assembly is in the locked position and continues to move, the clamp assembly is worn and must be replaced.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

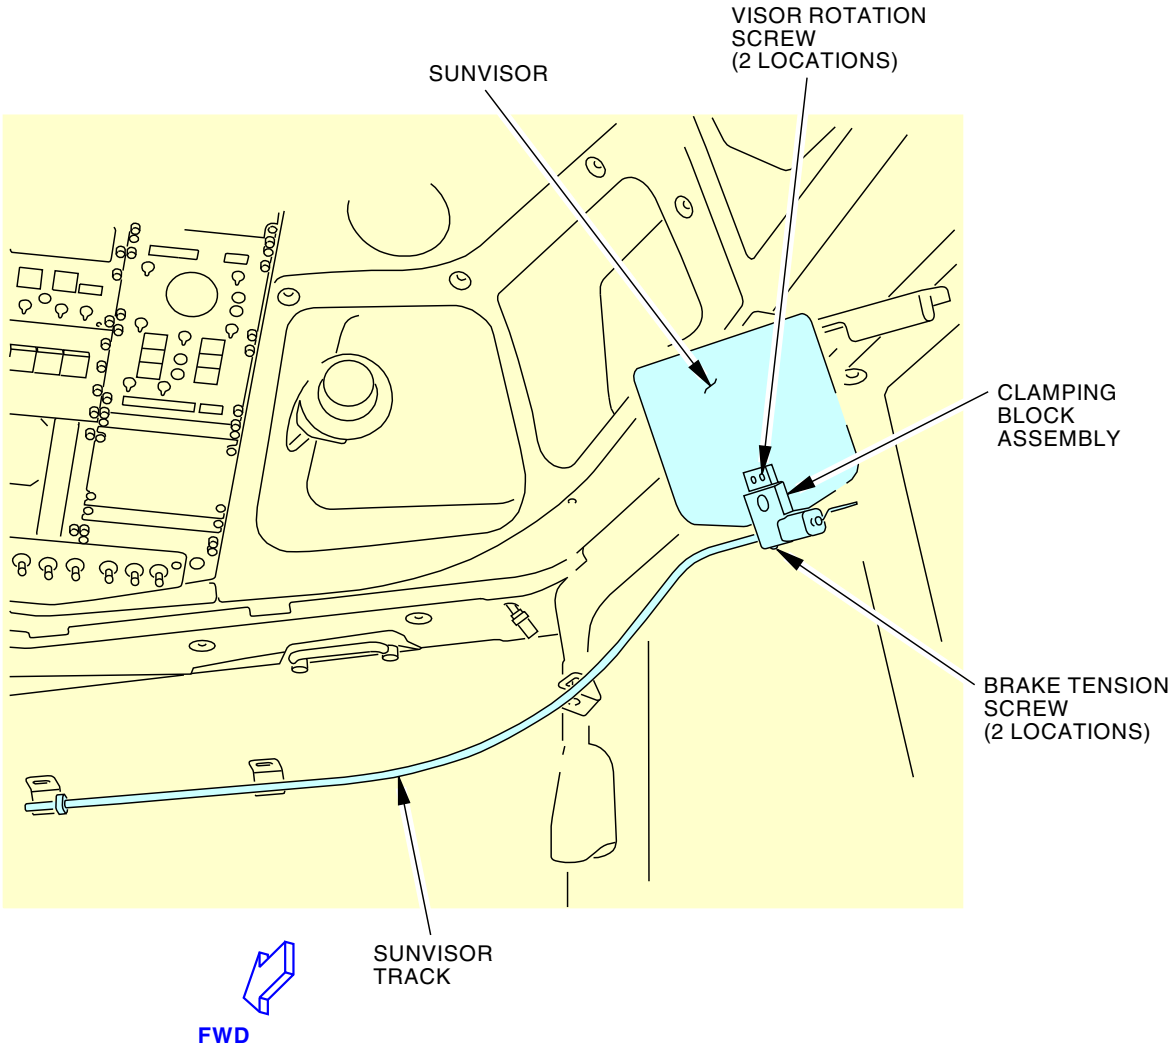

SUNVISOR
(RIGHT SIDE IS SHOWN, LEFT SIDE IS ALMOST THE SAME)

2531484 S0000599396_V1

Sunvisor Adjustment and Test
Figure 203/25-11-21-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-000-803

7. Flight Compartment Aft Ceiling Panel Removal

(Figure 204)

A. References

Reference	Title
21-51-00-800-801	Air Cycle Air Conditioning and Temperature Control System - Deactivation (P/B 201)
36-00-00-860-806	Remove Pressure from the Pneumatic System (P/B 201)

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Prepare for the Flight Compartment Aft Ceiling Panel Removal

SUBTASK 25-11-21-860-010

(1) Do this task: Remove Pressure from the Pneumatic System, TASK 36-00-00-860-806.

SUBTASK 25-11-21-860-011

(2) On the P5 panel, set the L PACK, R PACK and BLEED switches to OFF.

SUBTASK 25-11-21-860-012

(3) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
A	9	C01158	AIR CONDITIONING PACK CONTROL LEFT DC
A	11	C01159	AIR CONDITIONING PACK CONTROL LEFT AC
B	3	C01163	A/C ZONE TEMP VALVE/FAN CONT FLT DECK
B	9	C01161	AIR CONDITIONING PACK CONT RIGHT DC
B	11	C01162	AIR CONDITIONING PACK CONT RIGHT AC

SUBTASK 25-11-21-040-001

(4) Do this task: Air Cycle Air Conditioning and Temperature Control System - Deactivation, TASK 21-51-00-800-801.

D. Flight Compartment Aft Ceiling Panel Removal

SUBTASK 25-11-21-020-015

(1) Do these steps to remove the panel assembly [24]:


(a) Remove the screws [26] from the panel assembly [24].

(b) Disconnect the electrical connectors [22] from the cabin temperature sensor fan.

(c) Carefully remove the panel assembly [24] from the Velcro [25] and the seals [23].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

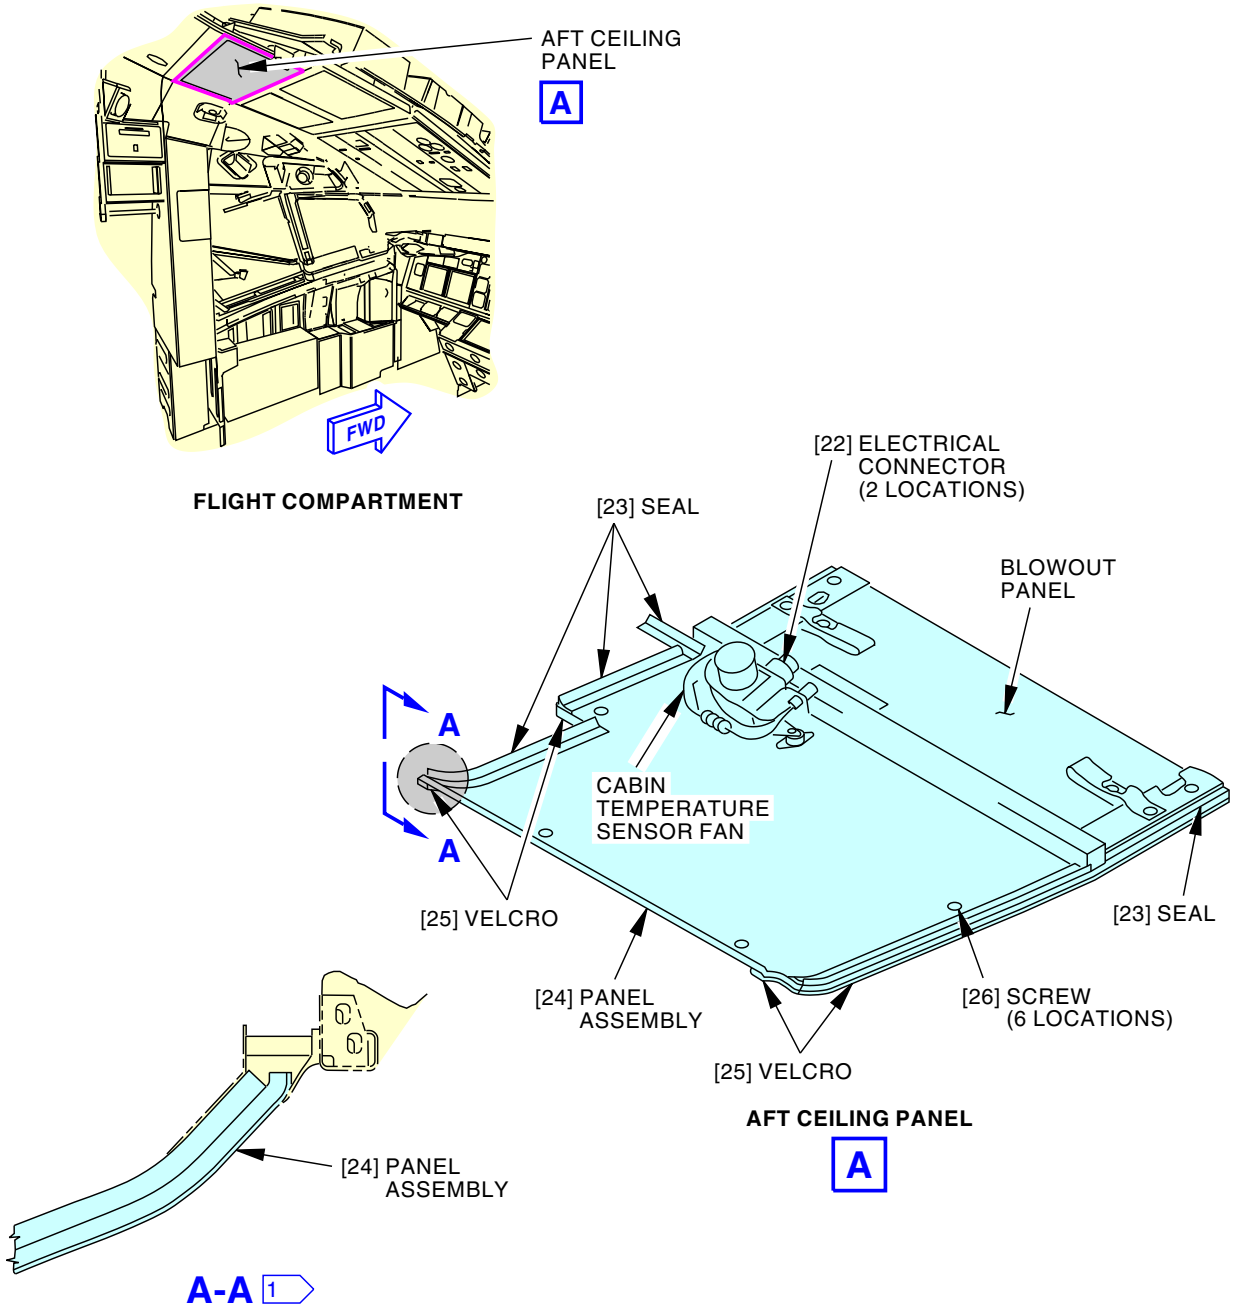

NOTE:

1 MAKE SURE THAT THE DOOR HEADER SEAL IS INSTALLED ON THE BOTTOM SURFACE OF THE PANEL ASSEMBLY.

2411844 S00061529236_V1

Flight Compartment Aft Ceiling Panel Installation
Figure 204/25-11-21-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-400-803

8. Flight Compartment Aft Ceiling Panel Installation

A. References

Reference	Title
21-61-00-700-801	Cabin Temperature Control and Indication - Operational Test (P/B 501)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
23	Seal	25-11-21-38-055	PTF ALL
		25-11-21-38-060	PTF ALL
		25-11-21-38-065	PTF ALL
		25-11-21-38-070	PTF ALL
24	Panel assembly	25-11-21-37-050	PTF ALL

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Flight Compartment Aft Ceiling Panel Installation

SUBTASK 25-11-21-420-013

(1) Do these steps to install the panel assembly [24]:

(a) Connect the electrical connectors [22] to the cabin temperature sensor fan.

(b) Carefully align the panel assembly [24] between the seals [23] and the Velcro [25].

1) Make sure that the door header seal is installed on the bottom surface of the panel assembly [24] (Section A-A, Figure 204).

(c) Install the screws [26] to attach the panel assembly [24] to the aft ceiling structure.

SUBTASK 25-11-21-860-013

(2) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
A	9	C01158	AIR CONDITIONING PACK CONTROL LEFT DC
A	11	C01159	AIR CONDITIONING PACK CONTROL LEFT AC
B	3	C01163	A/C ZONE TEMP VALVE/FAN CONT FLT DECK
B	9	C01161	AIR CONDITIONING PACK CONT RIGHT DC
B	11	C01162	AIR CONDITIONING PACK CONT RIGHT AC

SUBTASK 25-11-21-740-001

(3) Make sure that the temperature sensor fan was connected correctly.

(a) Do this task: Cabin Temperature Control and Indication - Operational Test, TASK 21-61-00-700-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-000-805

9. Roller Sunshade Removal

(Figure 205)

A. General

(1) This procedure is for airplanes equipped with the roller sunshade installed on the No. 2 and No. 3 windows.

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Remove the Roller Shade

SUBTASK 25-11-21-860-005

(1) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
C	9	C00219	PANEL & INSTR CB PANEL

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	8	C00394	WINDOW HEAT POWER RIGHT FRONT
B	9	C00392	WINDOW HEAT POWER LEFT SIDE
B	20	C00393	WINDOW HEAT POWER RIGHT SIDE
B	21	C00228	WINDOW HEAT POWER LEFT FRONT

SUBTASK 25-11-21-020-028

(2) For the No. 3 window, remove the roller sunshade [27] from the window structure as follows:

(a) Remove the four screws [35] that attach the electrical connector [36] to the sidewall panel [29].

(b) Remove the electrical connector [36].

(c) Remove the bolt [31], two screws [34], and washer [33] that attach the light [35] to the sidewall panel [29].

(d) Remove the six screws [28] that attach the sidewall panel [29] to the window structure.

(e) Remove the sidewall panel [29].

(f) Remove the two bolts [28] that attach the roller sunshade [27] to the window structure.

(g) Remove the roller sunshade [27].

SUBTASK 25-11-21-020-037


(3) For the No. 2 window, remove the roller sunshade [40] as follows:

(a) Remove the bolts [39] that attach the roller sunshade [40] to the window structure.


(b) Remove the roller sunshade [40].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

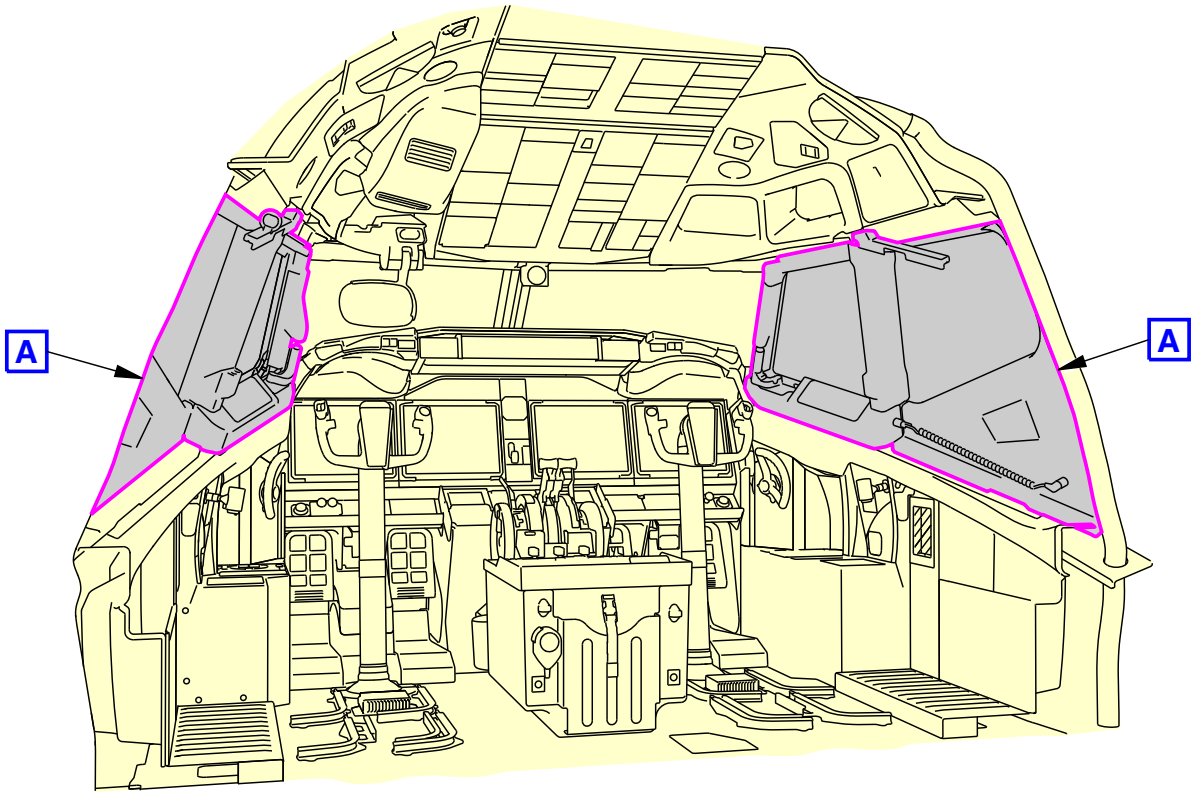


FLIGHT COMPARTMENT

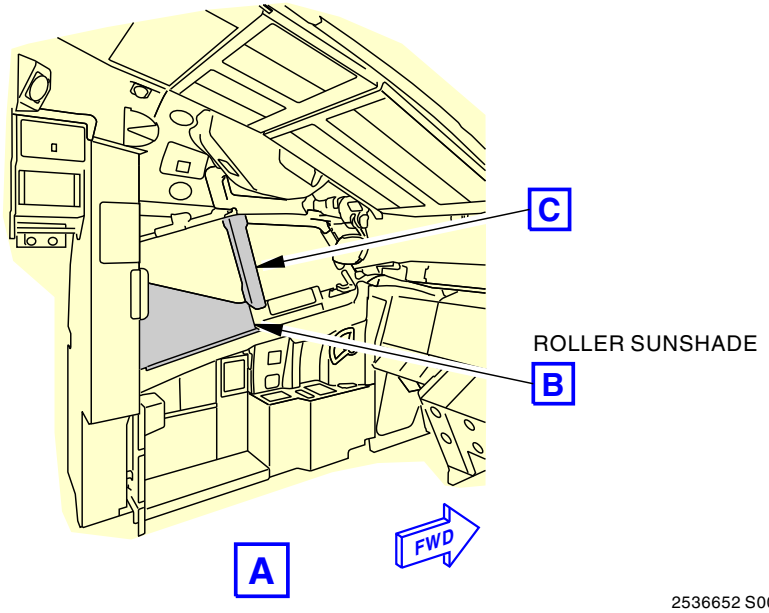

2536652 S0000602001_V2

Roller Sunshade Installation
Figure 205/25-11-21-990-808 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

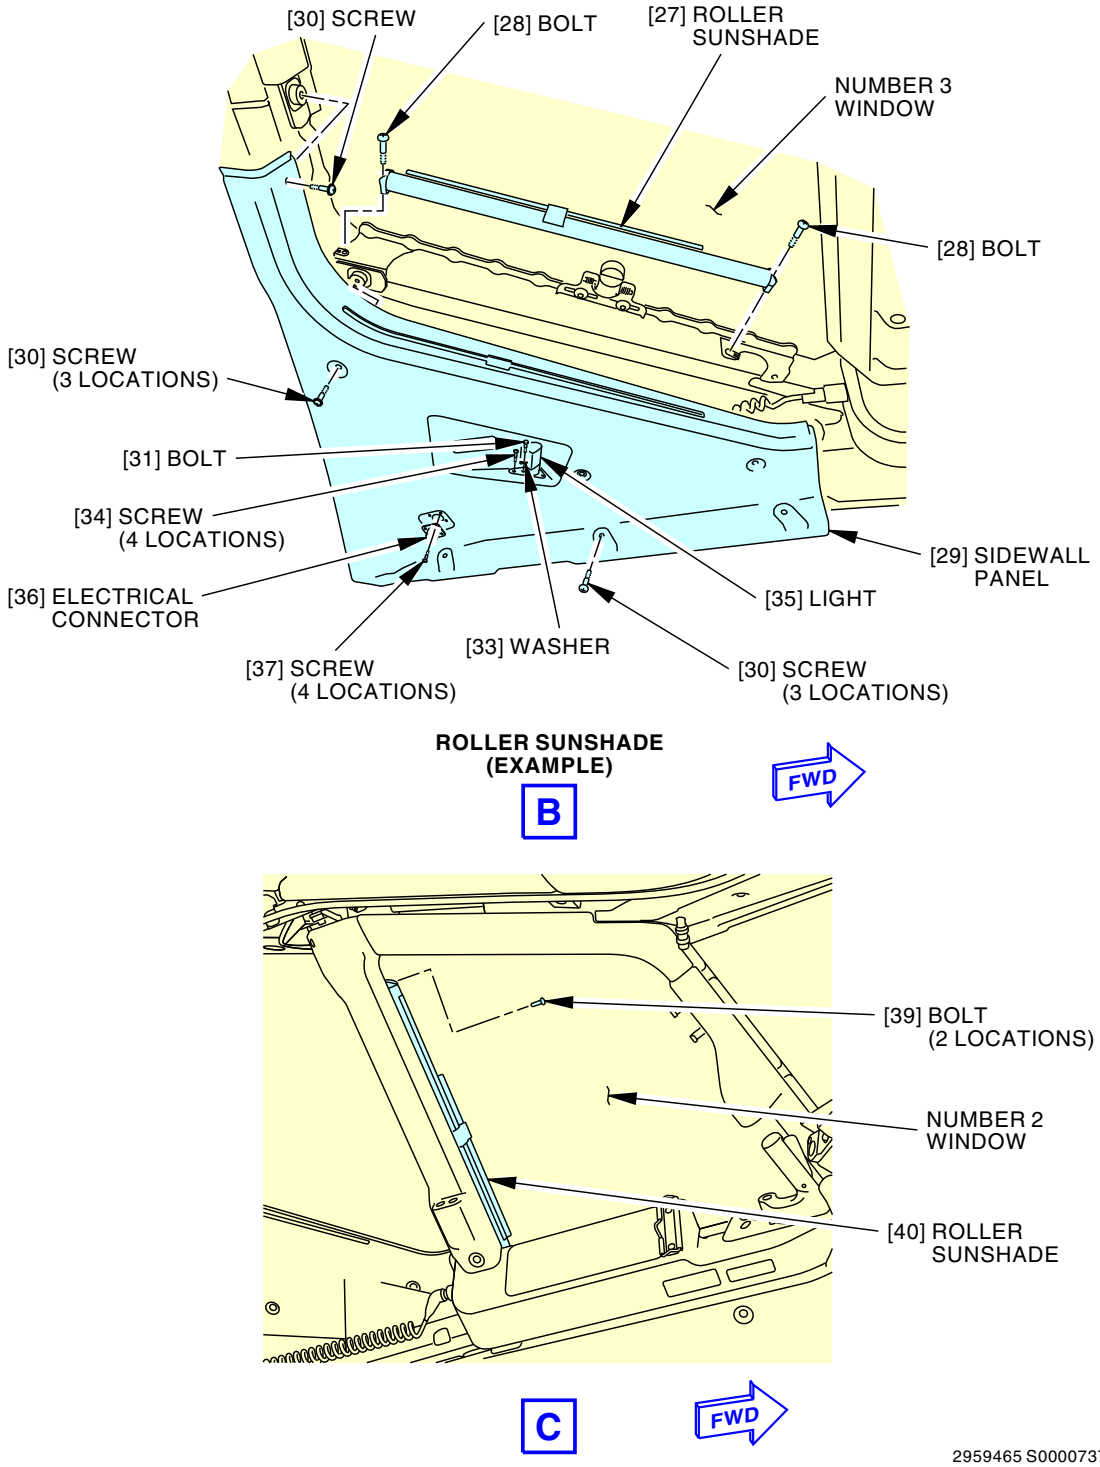

Roller Sunshade Installation
Figure 205/25-11-21-990-808 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-400-805

10. Roller Sunshade Installation

(Figure 205)

A. General

(1) This procedure is for airplanes equipped with the roller sunshade installed on the No. 2 and No. 3 windows.

B. References

Reference	Title
30-41-00-710-801	Window Heat System - Operational Test (P/B 501)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
27	Roller sunshade	25-11-00-10-030	PTF ALL
		25-11-00-10-035	PTF ALL
29	Sidewall panel	25-11-21-07A-105	PTF ALL
		25-11-21-08A-065	PTF ALL
40	Roller sunshade	25-11-00-10-010	PTF ALL
		25-11-00-10-015	PTF ALL

D. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

E. Install the Roller Sunshade

SUBTASK 25-11-21-420-026

(1) For the No. 3 window, install the roller sunshade [27] in the window structure as follows:

(a) Align the roller sunshade [27] in the window structure.

(b) Install the two bolts [28] to attach the roller sunshade [27] to the window structure.

(c) Align the sidewall panel [29] on the window structure.

(d) Align the light [35] in the correct position.

(e) Install the bolt [31], two screws [34], and washer [33] to attach the light [35] to the sidewall panel [29].

(f) Align the electrical connector [36] in the correct position.

1) Make sure that the receptacle connector keyway is aligned to the top, 12 o'clock position.

(g) Install the four screws [35] to attach the electrical connector [36] to the sidewall panel [29].

(h) Install the six screws [28] to attach the sidewall panel [29] to the window structure.

SUBTASK 25-11-21-420-037

(2) For the No. 2 window, install the to the window structure as follows:

(a) Align the roller sunshade [40] on the window structure.

(b) Install the bolts [39] to attach the roller sunshade [40] to the window structure.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-21-860-004

(3) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
C	9	C00219	PANEL & INSTR CB PANEL

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	8	C00394	WINDOW HEAT POWER RIGHT FRONT
B	9	C00392	WINDOW HEAT POWER LEFT SIDE
B	20	C00393	WINDOW HEAT POWER RIGHT SIDE
B	21	C00228	WINDOW HEAT POWER LEFT FRONT

SUBTASK 25-11-21-710-015

(4) Do an operational test of the No. 2 Window heat system (TASK 30-41-00-710-801).

SUBTASK 25-11-21-710-006

(5) Do a test of the roller sunshade [27] and roller sunshade [40].

(a) Make sure the roller sunshade [27] and roller sunshade [40] are operational.

(b) Make sure the light [35] comes on.

——— END OF TASK ———

TASK 25-11-21-000-807

11. Flight Compartment No.2 Sliding Window Lining Removal

(Figure 206)

A. General

(1) The procedure in this task removes the linings from the No.2 sliding windows in the flight compartment.

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
B00148	Solvent - Methyl Ethyl Ketone (MEK)	ASTM D740
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
G51677	Cloth - 100% Synthetic or Blended Synthetic, Cotton or Cellulose Material	AMS3819 Class 1, 2, or 4, Grade A or B, Form 1

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Procedure

SUBTASK 25-11-21-010-007

(1) Open the No.2 sliding window for access.

SUBTASK 25-11-21-020-040

(2) Remove the lining [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the screws [2] and the washer [3].

SUBTASK 25-11-21-020-041

(3) Remove the lightshade [4].

(a) Remove the screws [5].

SUBTASK 25-11-21-020-042

(4) Remove the upper cover [6].

(a) Remove the screws [7].

SUBTASK 25-11-21-020-043

(5) Remove the lower cover [8].

(a) Remove the screws [9], screws [10], and screw [11].

SUBTASK 25-11-21-020-044

(6) Remove the lining [12]:

(a) Remove the screws [13] and washers [14].

(b) Remove the lining [12].

(c) Remove sealant, A00247, with cloth, G51677, soaked in solvent, B00184, or solvent, B00148, from the screws [13] and washers [14].

SUBTASK 25-11-21-020-045

(7) Remove the upper lining [15]:

(a) Remove the screws [16] and washers [17].

(b) Remove the upper lining [15].


(c) Remove sealant, A00247, with cloth, G51677, soaked in solvent, B00184, or solvent, B00148,from the screws [16] and washers [17].

SUBTASK 25-11-21-410-007

(8) If necessary, close the No.2 sliding window.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

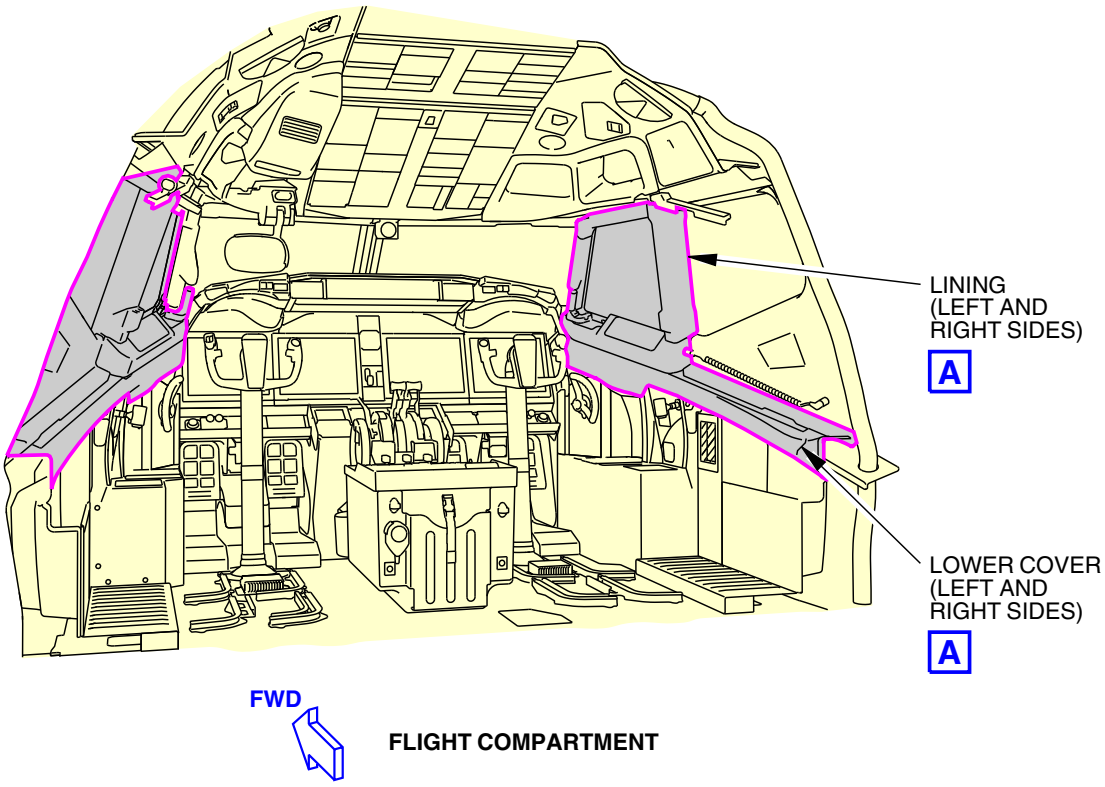

3100634 S0000846169_V1

Flight Compartment No.2 Sliding Window Lining Installation
Figure 206/25-11-21-990-809 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

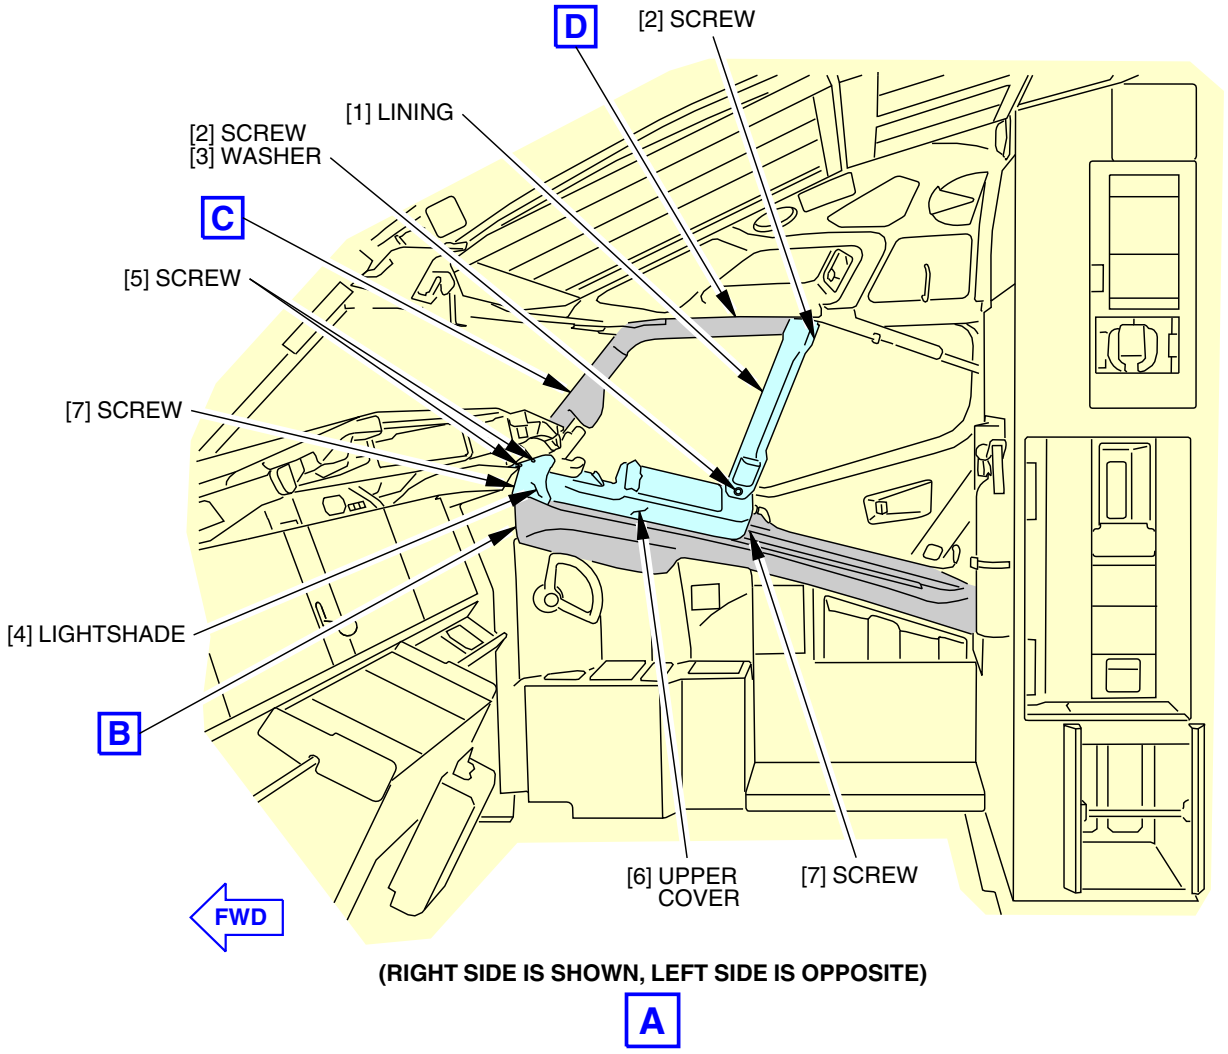

2947092 S0000723892_V4

Flight Compartment No.2 Sliding Window Lining Installation
Figure 206/25-11-21-990-809 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

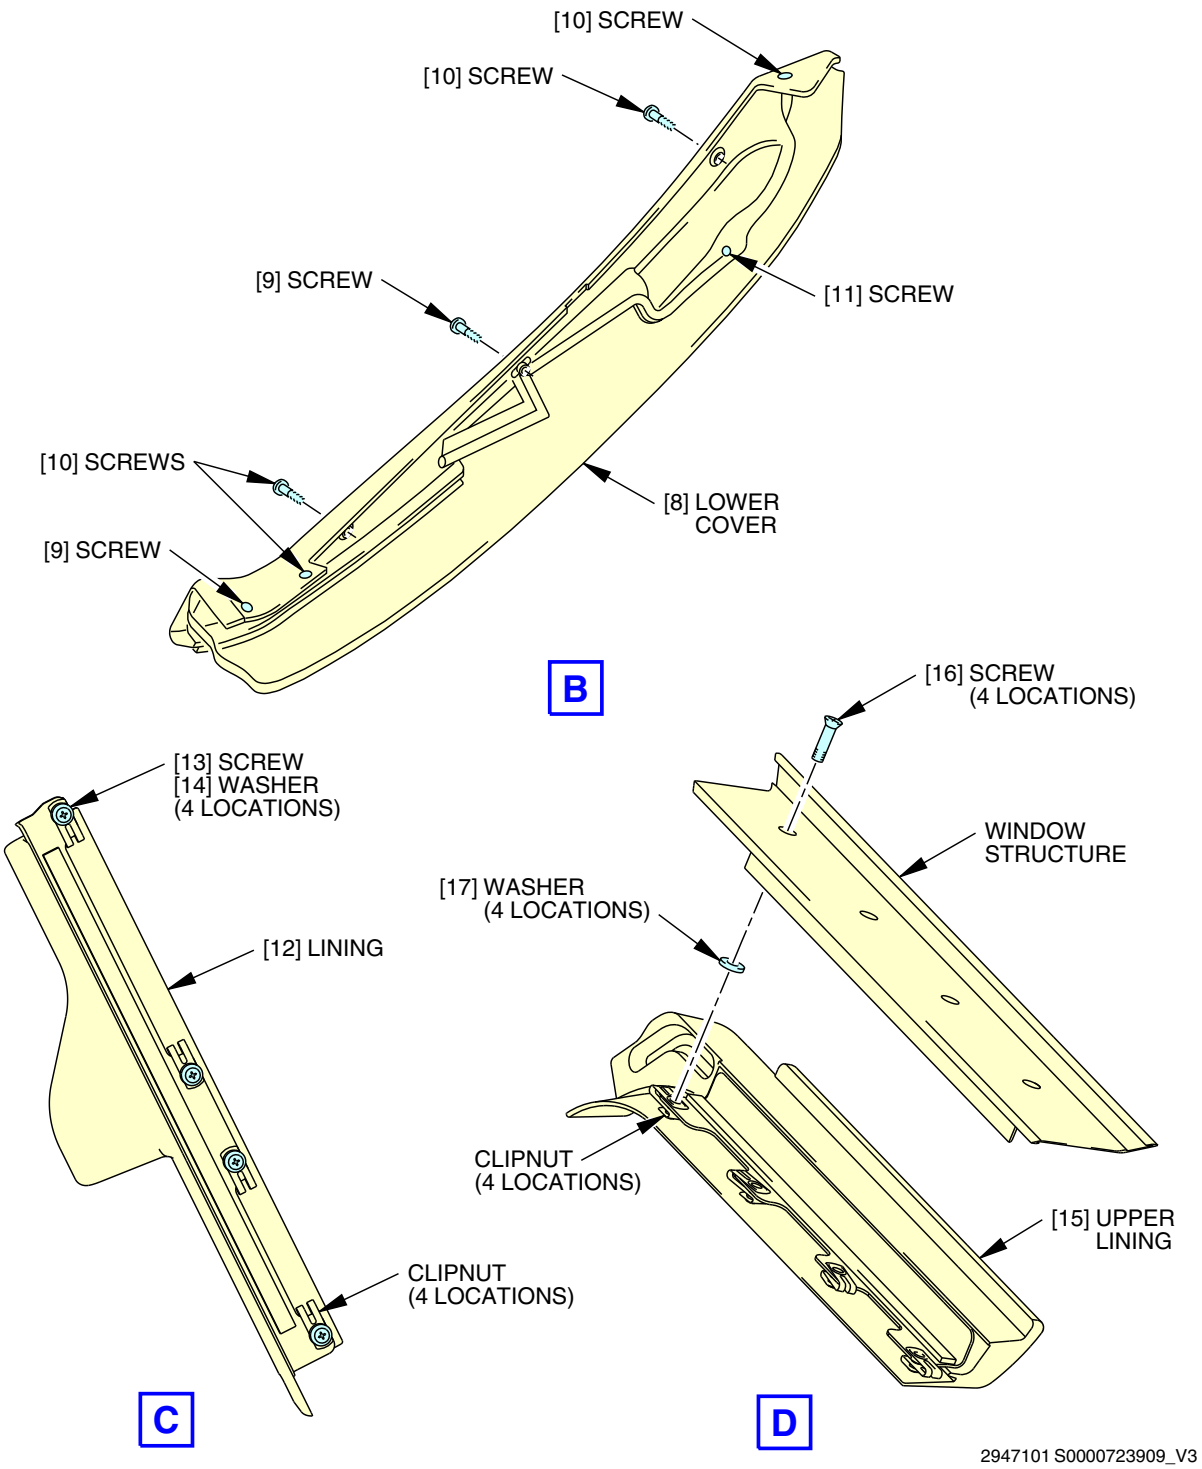

Flight Compartment No.2 Sliding Window Lining Installation
Figure 206/25-11-21-990-809 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-400-807

12. Flight Compartment No.2 Sliding Window Lining Installation

(Figure 206)

A. General

(1) The procedure in this task installs the linings to the No.2 sliding windows in the flight compartment.

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Procedure

SUBTASK 25-11-21-010-006

(1) Open the No.2 sliding window for access.

SUBTASK 25-11-21-420-045

(2) Install the upper lining [15]:

(a) Put the upper lining [15] in position.

(b) Apply sealant, A00247, to the shanks of the screws [16].

(c) Apply sealant, A00247, to one or both sides of the washers [17] to get sufficient squeeze-out.

(d) Install the screws [16] and washers [17].

(e) Make sure that a continuous bead of sealant, A00247, comes out of the heads of the screws [16] and washers [17].

SUBTASK 25-11-21-420-046

(3) Install the lining [12]:

(a) Put the lining [12] in position.

(b) Apply sealant, A00247, to the shanks of the screws [13].

(c) Apply sealant, A00247, to one or both sides of the washers [14] to get sufficient squeeze-out.

(d) Install the screws [13] and washers [14].

(e) Make sure that a continuous bead of sealant, A00247, comes out of the heads of the screws [13] and washers [14].

SUBTASK 25-11-21-420-041

(4) Install the lower cover [8]:

(a) Put the lower cover [8] in position.

(b) Install the screw [11], screws [10], and screws [9].

SUBTASK 25-11-21-420-042

(5) Install the upper cover [6]:

(a) Put the upper cover [6] in position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Install the screws [7].

SUBTASK 25-11-21-420-043

(6) Install the lightshade [4]:

(a) Put the lightshade [4] in position.

(b) Install the screws [5].

SUBTASK 25-11-21-420-044

(7) Install the lining [1]:

(a) Put the lining [1] in position.

(b) Install the screws [2] and washer [3].

SUBTASK 25-11-21-410-006

(8) If necessary, close the No.2 sliding window.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT PANELS - INSPECTION/CHECK

1. General

A. This procedure has these tasks:

(1) An inspection access to the P18 panel

(2) An inspection access to the P5 panel.

TASK 25-11-21-200-801

2. Inspection Access - P18 Panel

(Figure 601)

A. General

(1) This task supplies access to the airplane structure behind the P18 panel to support a General Visual Inspection (GVI) task card.

(2) The P18 Panel will be moved without the removal of the circuit breakers. Thus an installation or functional test is not necessary when the Panel is put back to its usual position.

B. References

Reference	Title
24-22-00-860-801	Supply Electrical Power (P/B 201)
24-22-00-860-802	Remove Electrical Power (P/B 201)
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
35-12-00-040-801	Crew Oxygen System - Deactivation (P/B 201)
35-12-00-440-801	Crew Oxygen System - Activation (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Consumable Materials

Reference	Description	Specification
A50110	Sealant - Fuel Tank	BMS5-45 Class B-2
A50155	Sealant - Fuel Tank	BMS5-45 Class C
A50231	Sealant - Pressure And Environmental - Chromate Type	BMS5-95 Class B
A50296	Sealant - Pressure And Environmental - Chromate Type	BMS5-95 Class C

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
C00259	Coating - Chemical And Solvent Resistant Finish, Corrosion Inhibiting Primer	BMS10-11 Type I
C50475	Coating - Chemical Conversion - Bonderite M-CR 600 Aero	BAC5719 Type II Class D
G51918	Abrasive - Sanding, Scouring, Deburring	BAC5748 Type II Class 5

E. Location Zones

Zone	Area
211	Flight Compartment - Left

F. Prepare for the Inspection Access

SUBTASK 25-11-21-860-015

(1) Do this task: Remove Electrical Power, TASK 24-22-00-860-802.

SUBTASK 25-11-21-860-016

(2) Do this task: Crew Oxygen System - Deactivation, TASK 35-12-00-040-801.

SUBTASK 25-11-21-010-008

(3) If not done in the task card, remove these items when it is necessary:

- Lavatory A
- Second Observer's Seat
- Flight Compartment Forward Ceiling Panel
- Flight Compartment Aft Ceiling Panel
- Second Observer's Stowage and Seat Closeout Plate
- Second Observer's Panel Closure
- P-18 Test Receptacles
- Seal Install Lining
- P-18 Closet Liner
- Oxygen Mask Stowage Box
- 2nd Observer Module
- Dome Light
- Lining Install - Clg Hall
- Lining Install - Forward Clg and Eyebrow Pad
- Cover Install - Side
- No. 3 Window Lining Install.

G. Move the P18 Panel for Task Card Inspection

SUBTASK 25-11-21-020-048

CAUTION

DO NOT PULL, CATCH OR TWIST THE WIRE HARNESSES WHEN YOU MOVE THE P18 PANEL. YOU CAN CAUSE DAMAGE TO THE WIRES TO MULTIPLE SYSTEMS.

(1) Move the P18 Panel [1] as follows:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove bolts [2], washers [3], clipnuts [4], screw [13], and washer [14] from the aft side of the P18 Panel [1].

(b) Remove or loosen the last wire clamp [12] before the AP1800B disconnect panel.

(c) Remove or loosen wire clamps or cable ties on the top or side of the P18 Panel [1] as necessary.

(d) Remove the bolts [9], washers [16], bushings [17], and clipnuts [18] at the lower, outboard side of the P18 Panel [1].

(e) Remove the bolt [15] and washer [6] from the base of the P18 Panel [1].

(f) Remove the bolts [5], bolts [9], bolts [10], bolt [11], and washers [6] from the forward side of the P18 Panel [1].

(g) To disconnect the ground strap, remove the screw [7] and washers [8].

(h) Carefully move the P18 Panel [1] 4.5 ±0.5 in. (11.4 ±1.3 cm) inboard.

(i) If necessary, safety the P18 Panel [1] with some rope or ties.

SUBTASK 25-11-21-010-009

(2) Do this task: Insulation Blanket Removal, TASK 25-80-00-000-801.

H. Install the P18 Panel after Task Card Inspection

SUBTASK 25-11-21-410-008

(1) Do this task: Insulation Blanket Installation, TASK 25-80-00-400-801.

SUBTASK 25-11-21-420-047

(2) Install the P18 Panel [1] as follows:

(a) If necessary, remove the rope or ties that the P18 Panel [1] safe.

(b) Carefully move the P18 Panel [1] back into its position.

(c) Install the bolts [5], bolts [9], bolts [10], bolt [11], and washers [6] at the base of the P18 Panel [1].

(d) Install the bolt [15] and washer [6] at the base of the P18 Panel [1] below the floor.

(e) Install the bolts [2], washers [3], clipnuts [4], screw [13], and washer [14] on the aft side of the P18 Panel [1].

(f) Install the bolts [9], washers [16], bushings [17], and clipnuts [18] at the lower, outboard side of the P18 Panel [1].

(g) Attach or tighten the last wire clamp [12].

(h) If necessary, attach or tighten the wire clamps or cable ties on the top or side of the P18 Panel [1].

(i) Install the ground strap, do these steps:

1) Clean the surfaces of the screw [7], washers [8], ground strap, and floor.

a) Apply alcohol, B00130, to an abrasive, G51918.

b) Use a small quantity of pressure on the abrasive, G51918, while you clean the surfaces.

c) Continue to clean until there is no visible residue on the surfaces.

2) Apply a fay surface seal between the mating surfaces of the floor, washers [8], ground strap, and screw [7] with sealant, A50110, sealant, A50155, sealant, A50231, or sealant, A50296.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Install the screw [7], washers [8] and ground strap.

NOTE: Install one washer on each side of the ground strap.

a) Tighten the screw [7] to 145 ±15 in-lb (16.4 ±1.7 N·m).

4) Measure the electrical bonding resistance between the floor and the ground strap.

a) Use an intrinsically safe approved bonding meter, COM-1550.

b) Make sure that the electrical bonding resistance is 0.0007 Ω (0.7 mΩ) or less.

5) Apply a Bonderite M-CR 600 Aero coating, C50475, to the bare aluminum screw [7], washer [8], and ground strap surfaces.

6) Apply a primer, C00259, to the bare aluminum screw [7], washer [8], and ground strap surfaces.

I. Put the Airplane Back to Its Usual Condition

SUBTASK 25-11-21-410-009

(1) If necessary, install these items:

- Lavatory A
- Second Observer's Seat
- Flight Compartment Forward Ceiling Panel
- Flight Compartment Aft Ceiling Panel
- Second Observer's Stowage and Seat Closeout Plate
- Second Observer's Panel Closure
- P-18 Test Receptacles
- Seal Install Lining
- P-18 Closet Liner
- Oxygen Mask Stowage Box
- 2nd Observer Module
- Dome Light
- Lining Install - Clg Hall
- Lining Install - Forward Clg and Eyebrow Pad
- Cover Install - Side
- No. 3 Window Lining Install.

SUBTASK 25-11-21-860-017


(2) Do this task: Crew Oxygen System - Activation, TASK 35-12-00-440-801.

SUBTASK 25-11-21-860-018

(3) If necessary, do this task: Supply Electrical Power, TASK 24-22-00-860-801.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

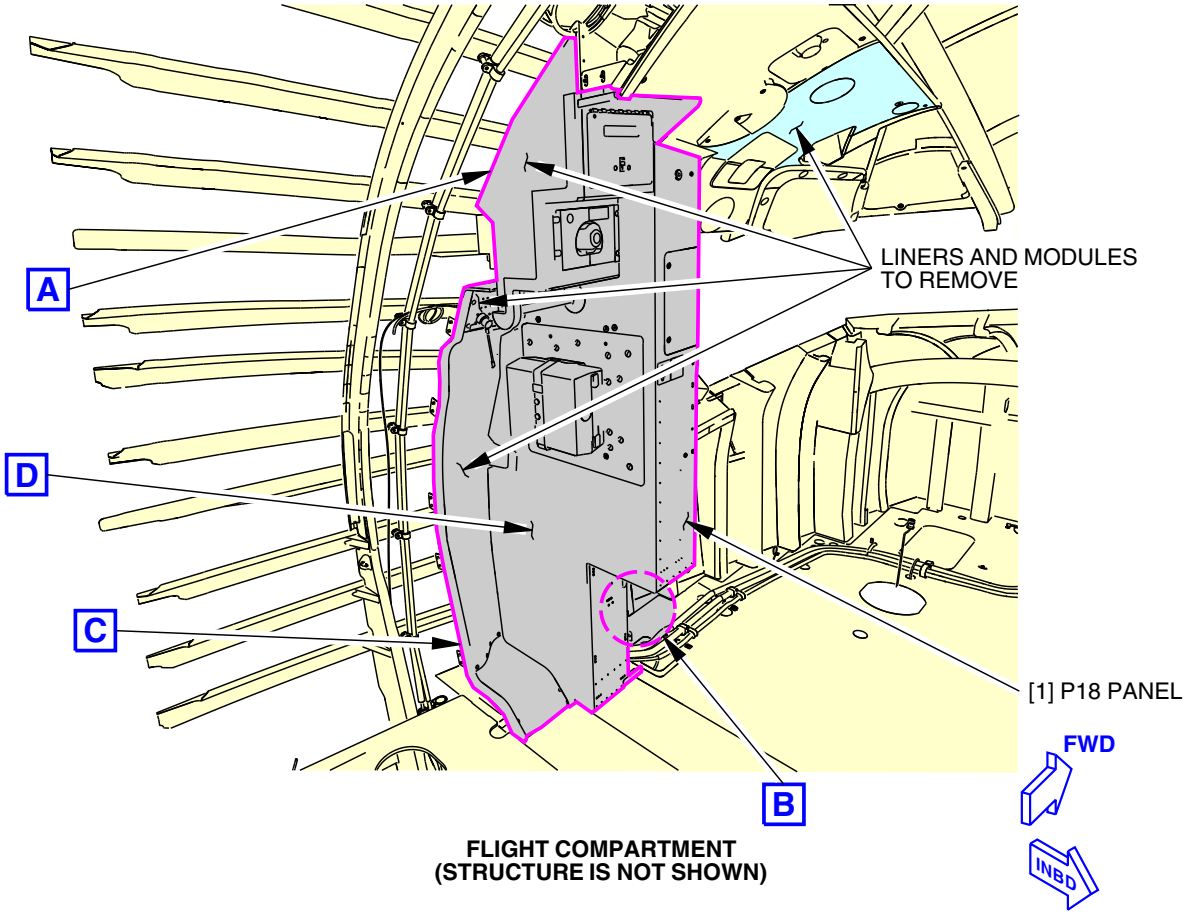

3119084 S0000854340_V1


P18 Panel Fastener Locations
Figure 601/25-11-21-990-812 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

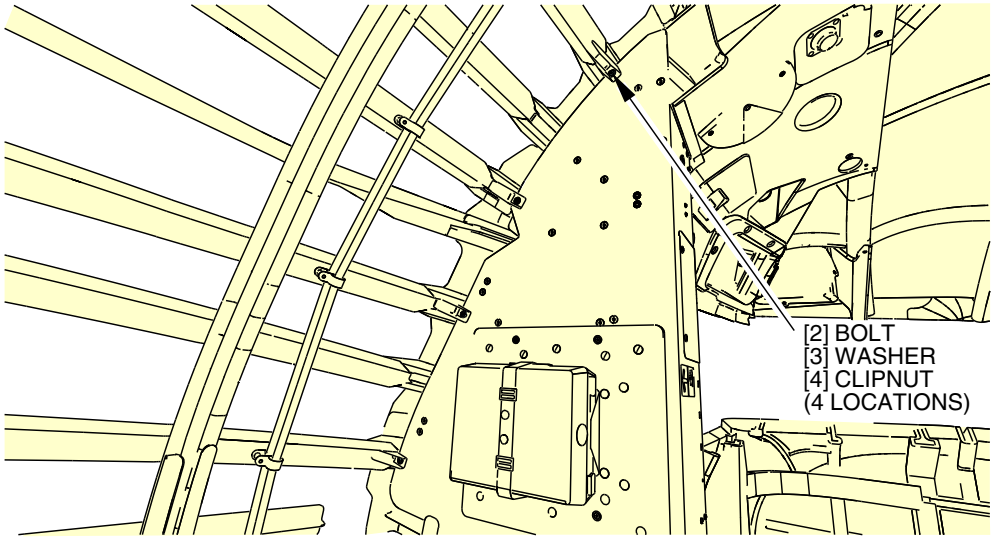

UPPER AFT P18 PANEL
(LINER AND MODULE ARE NOT SHOWN)

A

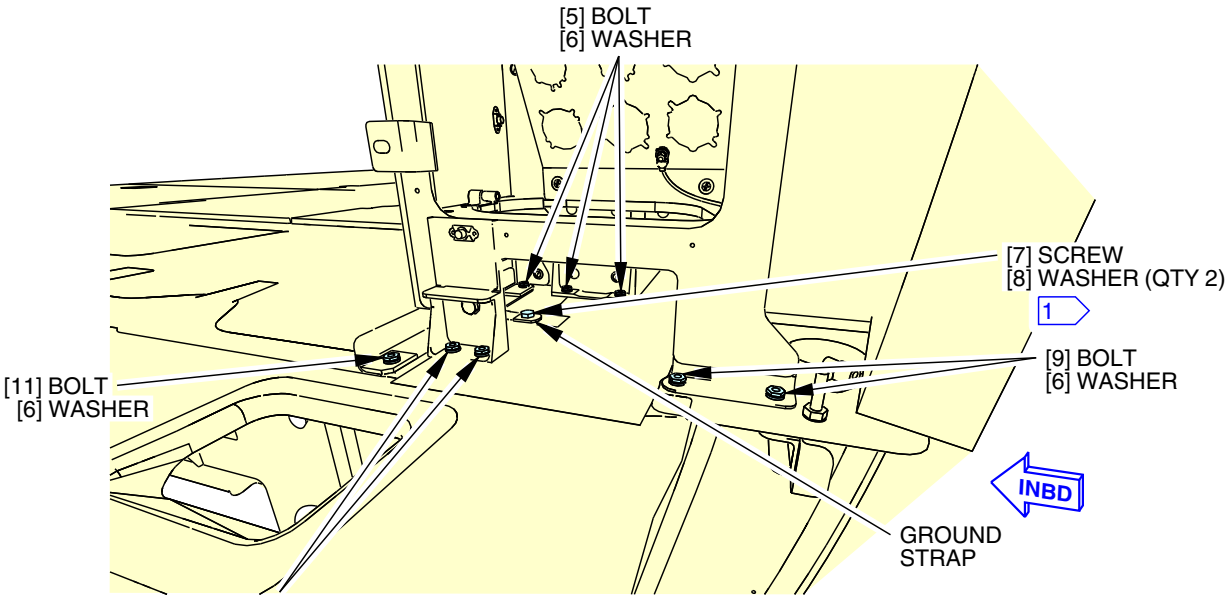

LOWER FRONT P18 PANEL
(WIRE HARNESS IS NOT SHOWN)
(VIEW IN THE AFT DIRECTION)


B

1 INSTALL ONE WASHER ON EACH SIDE OF THE GROUND STRAP.

3119247 S0000854341_V1


P18 Panel Fastener Locations
Figure 601/25-11-21-990-812 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

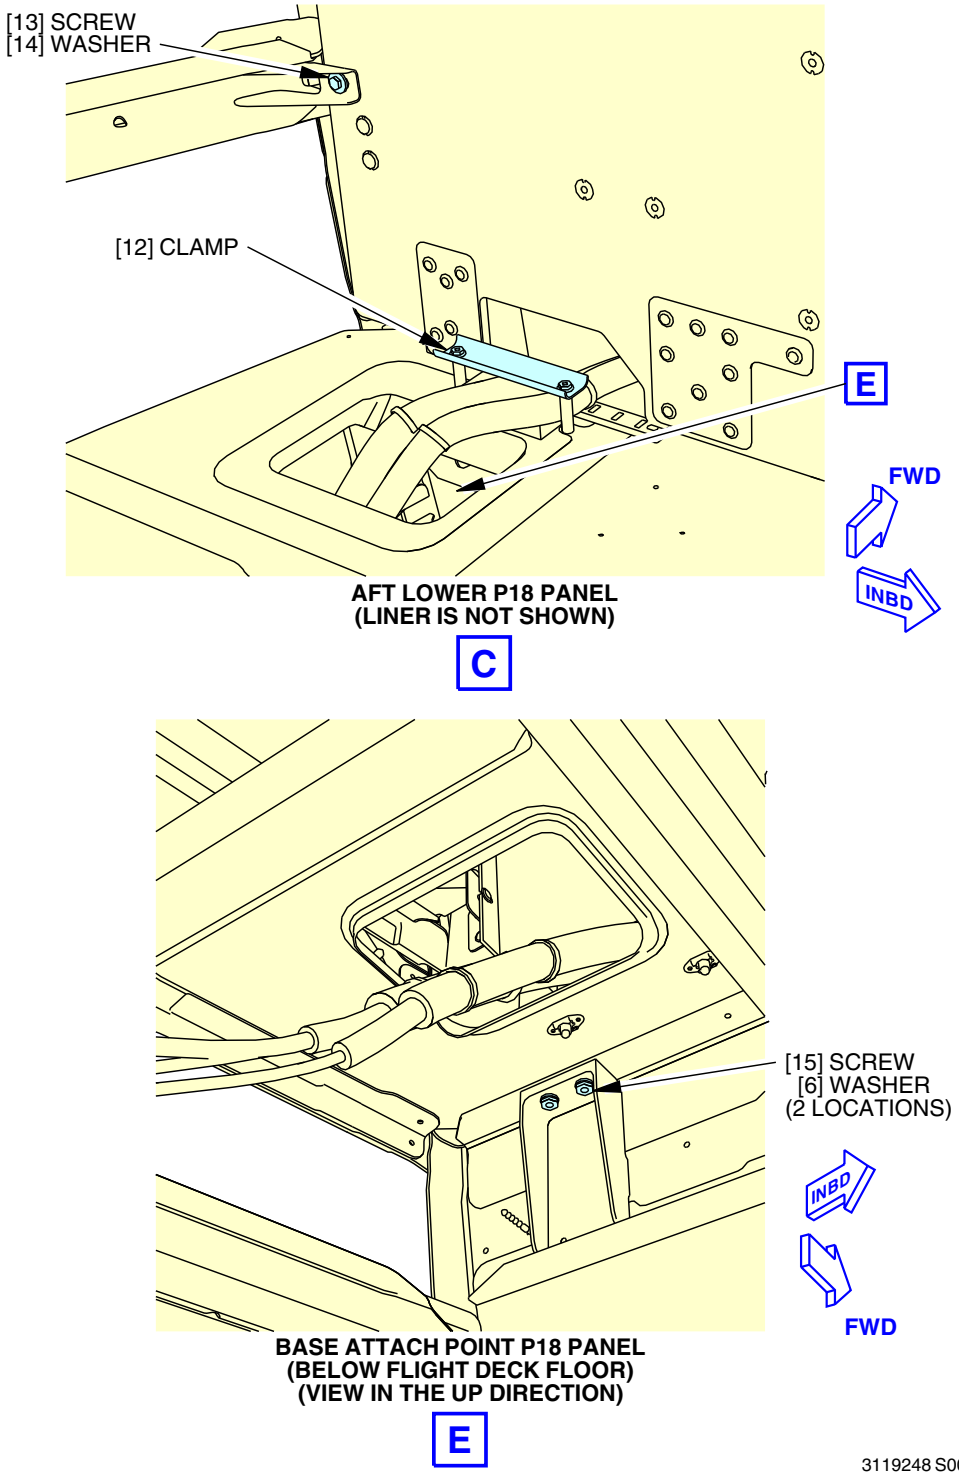

P18 Panel Fastener Locations
Figure 601/25-11-21-990-812 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

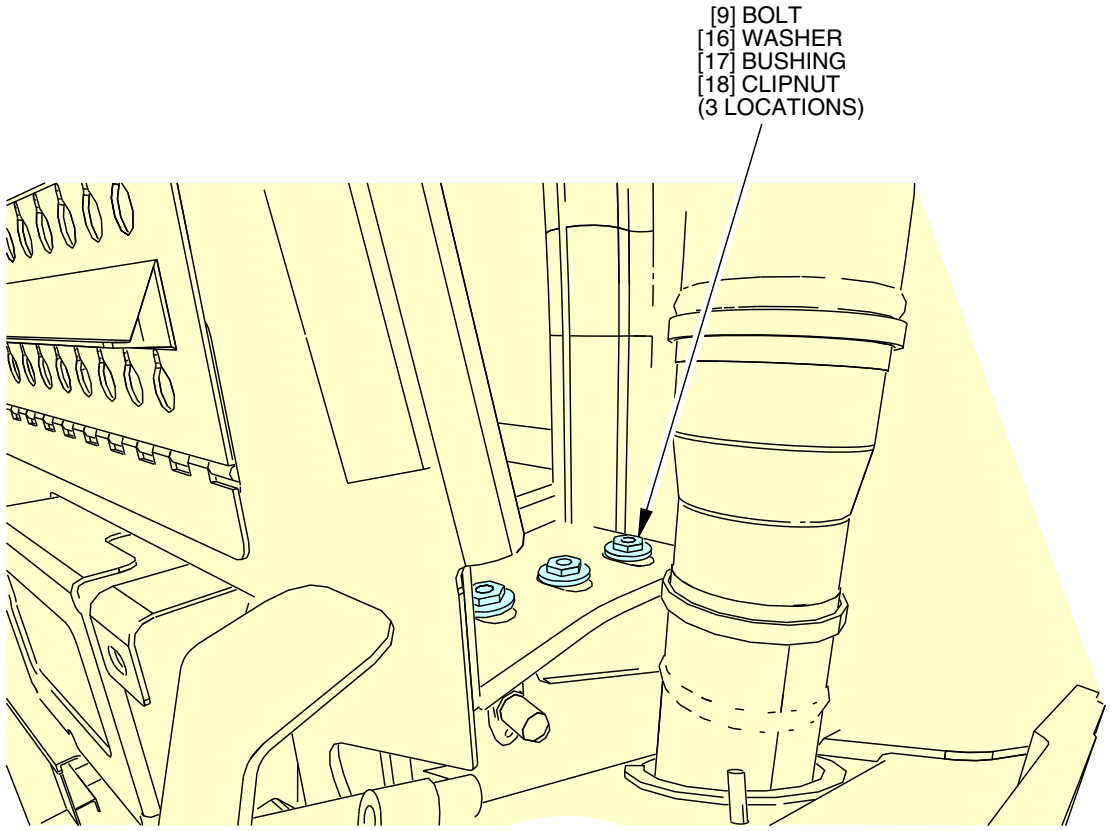

3119256 S0000854344_V1

P18 Panel Fastener Locations
Figure 601/25-11-21-990-812 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-21-200-802

3. Inspection Access - P5 Panel

(Figure 602)

A. General

(1) This task supplies access to the airplane structure behind the P5 Panel to support a General Visual Inspection (GVI) task card.

(2) The P5 forward and aft Panels will be moved without the removal of each Line Replaceable Unit (LRU) from the panels. Thus an installation or functional test is not necessary when the panels are put back to their usual position.

B. References

Reference	Title
24-22-00-860-801	Supply Electrical Power (P/B 201)
24-22-00-860-802	Remove Electrical Power (P/B 201)
25-11-21-000-802	Flight Compartment Dripshield Removal (P/B 201)
25-11-21-400-802	Flight Compartment Dripshield Installation (P/B 201)
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
35-12-00-040-801	Crew Oxygen System - Deactivation (P/B 201)
35-12-00-440-801	Crew Oxygen System - Activation (P/B 201)
SWPM 20-20-00	ELECTRICAL BONDING PROCESSES

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

E. Location Zones

Zone	Area
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Prepare for the Inspection Access

SUBTASK 25-11-21-860-019

(1) Do this task: Remove Electrical Power, TASK 24-22-00-860-802.

SUBTASK 25-11-21-860-020

(2) Do this task: Crew Oxygen System - Deactivation, TASK 35-12-00-040-801.

SUBTASK 25-11-21-010-010

(3) If necessary, remove these items:

- Flight Compartment Forward Ceiling Panel
- Seal Install - Ceiling
- Dome Light
- Lining Install - Ceiling Hall
- Lining Install - Forward Ceiling and Eyebrow Pad
- Cover Install - Forward Control Cabin Floor Raceway
- No. 1 Window Lining Install
- Pilots Standby Compass.

G. Move the P5 Panel for Task Card Inspection

SUBTASK 25-11-21-020-049

(1) Move the P5 aft panel [20] as follows:

(a) Loosen the 1/4 turn P5 AFT, indexed lock fasteners

(b) Push the P5 AFT, latch release.

1) Lower the P5 aft panel [20].

(c) Remove the wire supports and clips as necessary.

(d) Loosen the wire bundles as necessary.

(e) Remove the hex screws [31], washers [32], and spacers [33] to disconnect the terminal tracks [34] from the dripshield [24].

(f) Remove the nut [21] and washer [22] to remove the jumper [23] from the frame.

(g) Remove the bolts [25] and bushings [26] to remove the P5 aft panel [20] from the dripshield [24].

(h) Safety the P5 aft panel [20]:

1) Hang the panel with rope or ties through the bolt [25] fastener holes.

2) Do not hang the P5 aft panel [20] on the wire harness.

SUBTASK 25-11-21-020-050

(2) Move the P5 fwd panel [27] as follows:

(a) Loosen the 1/4 turn P5 FWD, indexed lock fasteners.

(b) Push the P5 FWD, latch release.

1) Lower the P5 fwd panel [27].

(c) Remove the wire supports and clips as necessary.

(d) Loosen the wire bundles as necessary.

(e) Remove the nut [28] and washer [29] to remove the jumper [30] from the dripshield [24].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Remove the bolts [25] and bushings [26] to remove the P5 fwd panel [27] from the dripshield [24].

(g) Safety the P5 fwd panel [27]:

1) Hang the panel with rope or ties through the bolt [25] fastener holes.

2) Do not hang the P5 fwd panel [27] on the wire harness.

SUBTASK 25-11-21-020-051

(3) Remove the dripshield [24] (TASK 25-11-21-000-802).

SUBTASK 25-11-21-010-011

(4) Do this task: Insulation Blanket Removal, TASK 25-80-00-000-801.

H. Install the P5 Panel after Task Card Inspection

SUBTASK 25-11-21-410-010

(1) Do this task: Insulation Blanket Installation, TASK 25-80-00-400-801.

SUBTASK 25-11-21-420-048

(2) Install the dripshield [24] (TASK 25-11-21-400-802).

SUBTASK 25-11-21-420-049

CAUTION

DO NOT PULL, CATCH OR TWIST THE WIRE HARNESSES WHEN YOU MOVE THE P18 PANEL. YOU CAN CAUSE DAMAGE TO THE WIRES TO MULTIPLE SYSTEMS.

(3) Install the P5 fwd panel [27] as follows:

(a) Put the P5 fwd panel [27] against the dripshield [24].

(b) Install the bolts [25] and bushings [26] through the P5 fwd panel [27] and dripshield [24].

(c) Install the jumper [30] to the dripshield [24]:

1) Clean the surfaces of the aluminum stud and jumper [30]:

a) Apply alcohol, B00130, to a cotton wiper, G00034.

b) Use a small amount of pressure on the cotton wiper, G00034.

c) Clean the surfaces until there is no visible residue.

2) Install the nut [28] and washer [29] to the jumper [30] and ground stud.

a) Tighten the nut [28] to 28 in-lb (3.2 N·m) - 35 in-lb (4.0 N·m).

3) Measure the electrical bonding resistance between the dripshield [24] and the jumper [30] (SWPM 20-20-00).

a) Use an intrinsically safe approved bonding meter, COM-1550.

b) Make sure that the resistance is 0.0010 Ω (1.0 mΩ) or less.

(d) Install the wire supports and clips as necessary.

(e) Tighten the wire bundles as necessary.

(f) Push the P5 fwd panel [27] up until the latches engage.

(g) Tighten the 1/4 turn P5 FWD, indexed lock fasteners.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-21-420-050

CAUTION

DO NOT PULL, CATCH OR TWIST THE WIRE HARNESSES WHEN YOU MOVE THE P18 PANEL. YOU CAN CAUSE DAMAGE TO THE WIRES TO MULTIPLE SYSTEMS.

(4) Install the P5 aft panel [20] as follows:

(a) Put the P5 aft panel [20] against the dripshield [24].

(b) Install the bolts [25] and bushings [26] through the P5 fwd panel [27] and dripshield [24].

(c) Install the jumper [23] to the dripshield [24]:

1) Clean the surfaces of the aluminum stud and jumper [23]:

a) Apply alcohol, B00130, to a cotton wiper, G00034.

b) Use a small amount of pressure on the cotton wiper, G00034.

c) Clean the surfaces until there is no visible residue.

2) Install the nut [21] and washer [22] to the jumper [23] and the ground stud.

a) Tighten the nut [21] to 28 in-lb (3.2 N·m) - 35 in-lb (4.0 N·m).

3) Measure the electrical bonding resistance between the dripshield [24] and the jumper [23] (SWPM 20-20-00).

a) Use an intrinsically safe approved bonding meter, COM-1550.

b) Make sure that the resistance is 0.0010 Ω (1.0 mΩ) or less.

(d) Install the terminal tracks [34] to the dripshield [24] with the hex screws [31], washers [32], and spacers [33].

(e) Install the wire supports and clips as necessary.

(f) Tighten the wire bundles as necessary.

(g) Push the P5 aft panel [20] up until the latches engage.

(h) Tighten the 1/4 turn P5 AFT, indexed lock fasteners.

I. Put the Airplane Back to Its Usual Condition

SUBTASK 25-11-21-410-011

(1) As necessary, install these items:

- Flight Compartment Forward Ceiling Panel
- Seal Install - Ceiling
- Dome Light
- Lining Install - Ceiling Hall
- Lining Install - Forward Ceiling and Eyebrow Pad
- Cover Install - Forward Control Cabin Floor Raceway
- No. 1 Window Lining Install
- Pilots Standby Compass.

SUBTASK 25-11-21-860-021

(2) Do this task: Crew Oxygen System - Activation, TASK 35-12-00-440-801.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-21-860-022


(3) If necessary, do this task: Supply Electrical Power, TASK 24-22-00-860-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

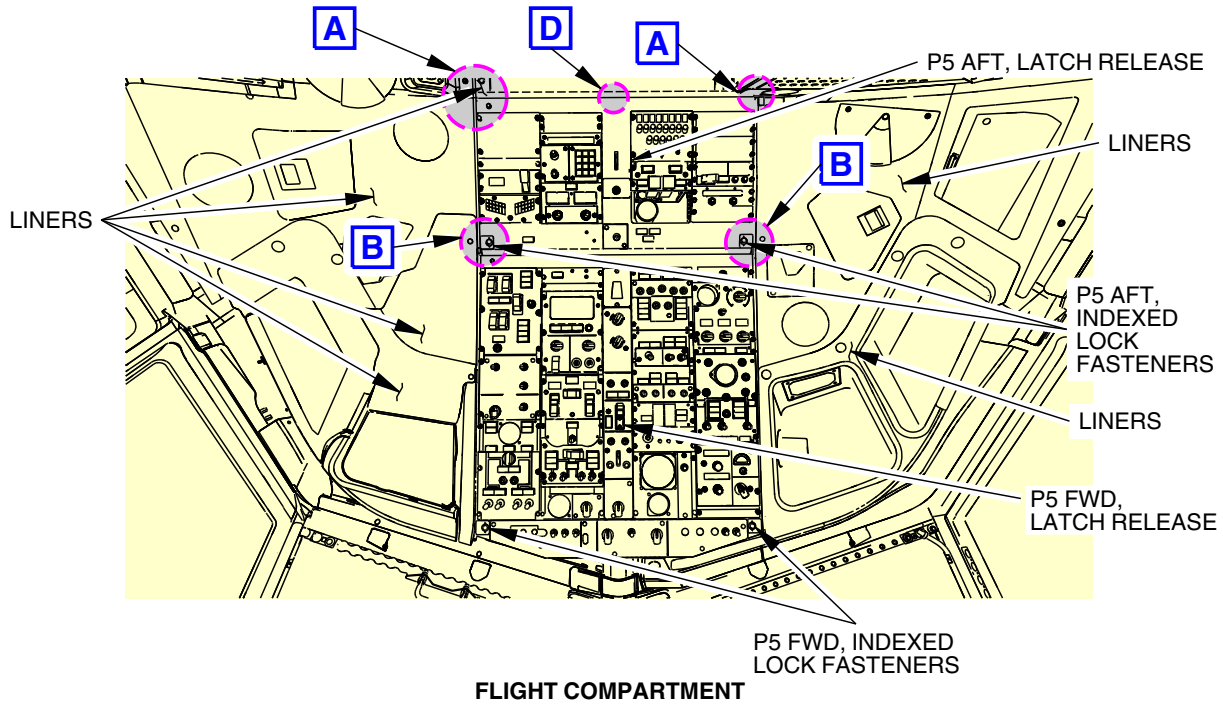

FLIGHT COMPARTMENT
(VIEW IN THE UP DIRECTION)

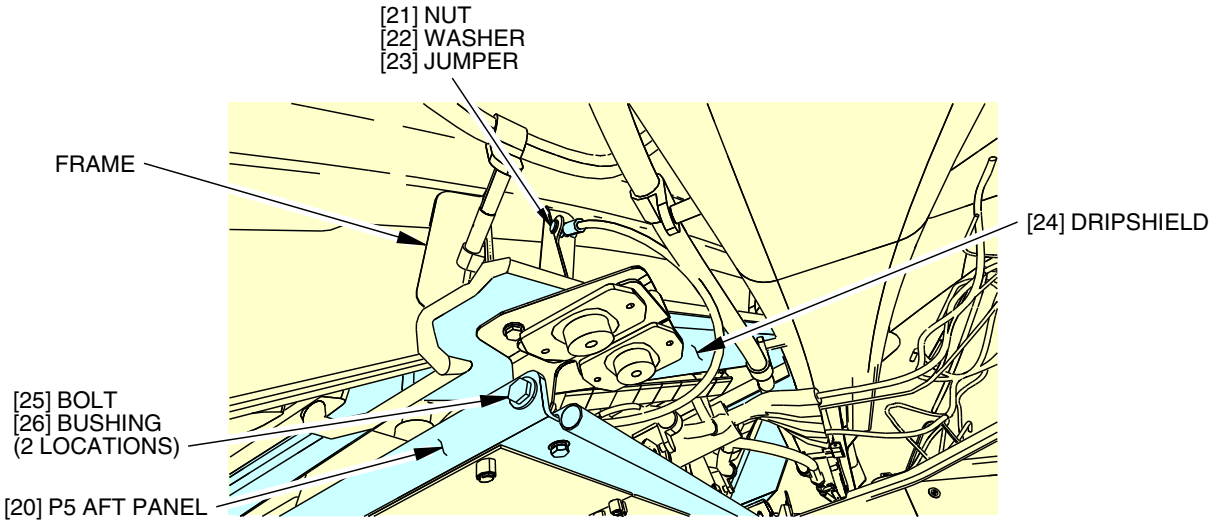


P5 FWD PANEL AND DRIPSHIELD ATTACH POINTS
(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)

A

3119257 S0000854591_V1


P5 Panel Fastener Locations
Figure 602/25-11-21-990-813 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

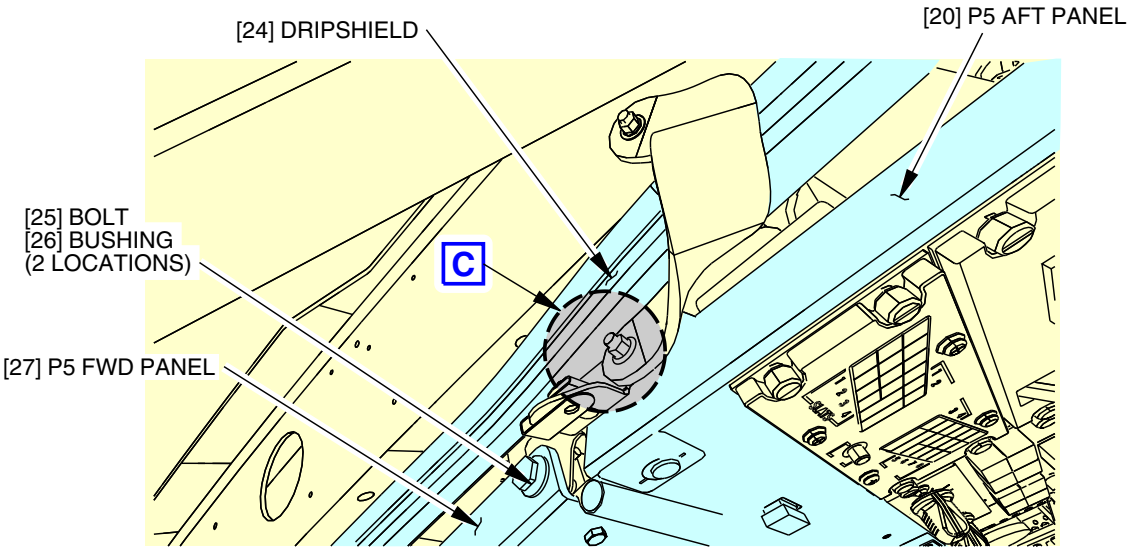

P5 FWD PANEL AND DRIPSHIELD ATTACH POINTS
(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)

B

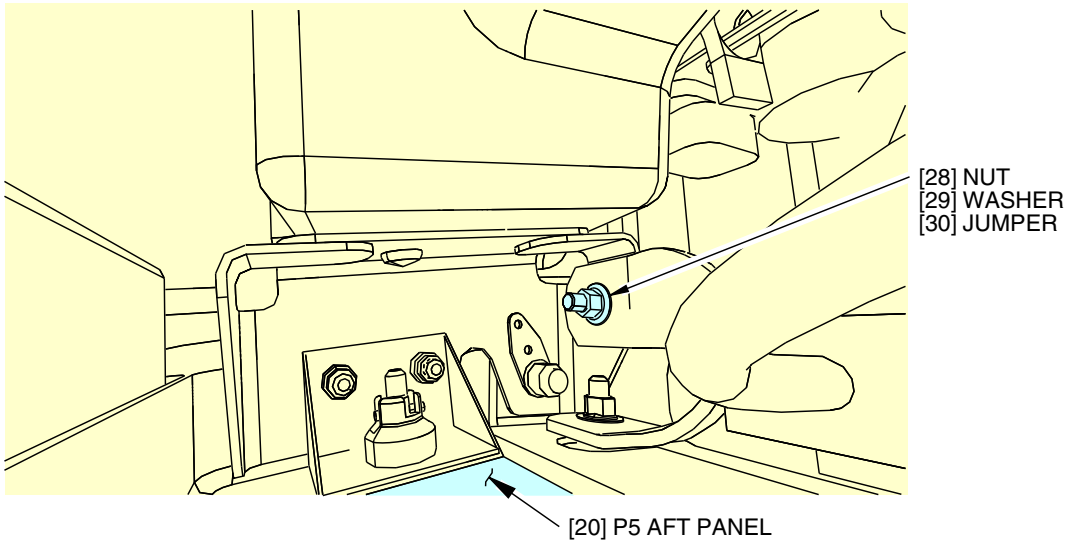

P5 FWD PANEL JUMPER AND DRIPSHIELD ATTACH POINTS
(LEFT SIDE IS SHOWN, RIGHT SIDE IS ALMOST THE SAME)


C

3119258 S0000854592_V1

P5 Panel Fastener Locations
Figure 602/25-11-21-990-813 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

-

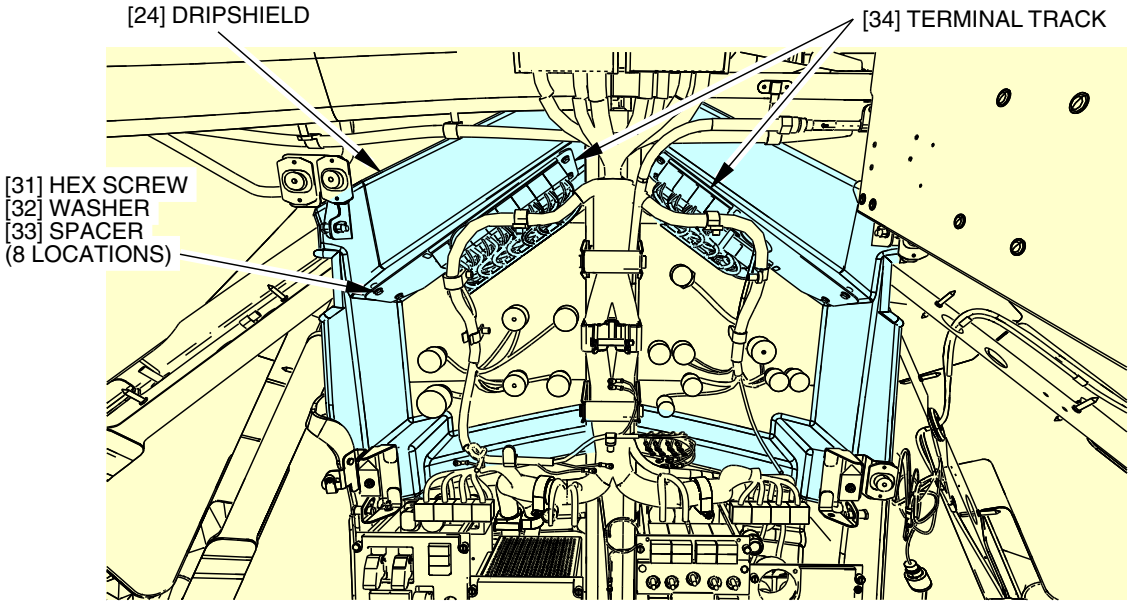

TERMINAL TRACK ATTACH POINTS

D

3119271 S0000854593_V1

P5 Panel Fastener Locations
Figure 602/25-11-21-990-813 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLIGHT COMPARTMENT FORWARD SIDE PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Flight Compartment Forward Side Panel Removal

(2) Flight Compartment Forward Side Panel Installation

TASK 25-11-22-000-801

2. Flight Compartment Forward Side Panel Removal

(Figure 401)

A. General

(1) This procedure is for the removal and installation of the captain's and first officer's forward side panel.

B. References

Reference	Title
25-11-01-000-801	Captain and First Officer Seat Removal (P/B 401)
32-51-41-000-801	Nose Landing Gear Steering Control Wheel Removal (P/B 401)
33-17-00-960-801	Map Light - Lamp Replacement (P/B 201)
35-12-85-000-801	Oxygen Mask Stowage Box Removal (P/B 401)

C. Location Zones

Zone	Area
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Prepare for the Removal

SUBTASK 25-11-22-860-001

(1) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
A	9	C00308	CONTROL CABIN LIGHTING MAP & KIT
B	9	C00331	PANEL & INSTR 28V PRI CAPT & CTR
B	10	C00335	PANEL & INSTR 28V PRI F/O
D	8	C00701	EMER PANEL LTG

SUBTASK 25-11-22-020-001

(2) Remove the captain's or first officer's seat (TASK 25-11-01-000-801).

SUBTASK 25-11-22-020-002

(3) Remove the oxygen mask stowage box (TASK 35-12-85-000-801).

(a) Remove the screw [15] through this access opening.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Forward Side Panel Removal

SUBTASK 25-11-22-010-001

(1) Remove the map holder to get access to the screws [16].

SUBTASK 25-11-22-010-002

(2) Remove the screws that attach the glareshield lower cover assembly [1] to the flight control panel.

SUBTASK 25-11-22-020-003

(3) Remove the quarter sill lining [3].

SUBTASK 25-11-22-020-004

(4) Remove the raceway cover [5] and flight kit tiedown strap [4].

(a) Remove the screws [7] from the raceway cover [5] and flight kit tiedown strap [4].

(b) Remove the raceway cover [5] and flight kit tiedown strap [4].

SUBTASK 25-11-22-000-001

(5) Remove the bracket [11] from the forward side panel [6] to the middle side panel [8].

(a) Remove the screw [9] and screw [10] from the bracket [11] assembly.

(b) Remove the bracket [11].

SUBTASK 25-11-22-020-005

(6) Remove the utility light [22] (TASK 33-17-00-960-801).

NOTE: Slide the cord through the slot in the grommet and then the slot in the panel.

SUBTASK 25-11-22-000-002

(7) Remove the nose landing gear steering wheel control wheel [2] (TASK 32-51-41-000-801).

SUBTASK 25-11-22-000-003

(8) Remove the screws [13] from the tiller assembly access cover [12].

SUBTASK 25-11-22-000-004

(9) Remove the screws [14] from the forward side panel [6].

SUBTASK 25-11-22-000-005

(10) Remove the map light control module.

SUBTASK 25-11-22-020-006

(11) Disconnect the hand microphone from the sidewall connector.

SUBTASK 25-11-22-020-007

(12) Disconnect the electrical connector [17] from the oxygen light [18].

SUBTASK 25-11-22-020-008

(13) Remove the screws [19] that attach the interphone jack [20] to the forward side panel [6].

SUBTASK 25-11-22-020-009

(14) Disconnect the electrical connector [21].

SUBTASK 25-11-22-020-010

(15) Examine the forward side panel [6] to make sure that all of the fasteners are removed.

SUBTASK 25-11-22-080-001

(16) Carefully remove the forward side panel [6].

(a) Make sure that the forward side panel [6] does not hit or get caught on components.


1) Hold the forward side panel [6]l at the top forward corner then bend down and inboard to clear obstacles.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


2) Hold the forward side panel [6] at the rear bottom corner and pull inboard and then back.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

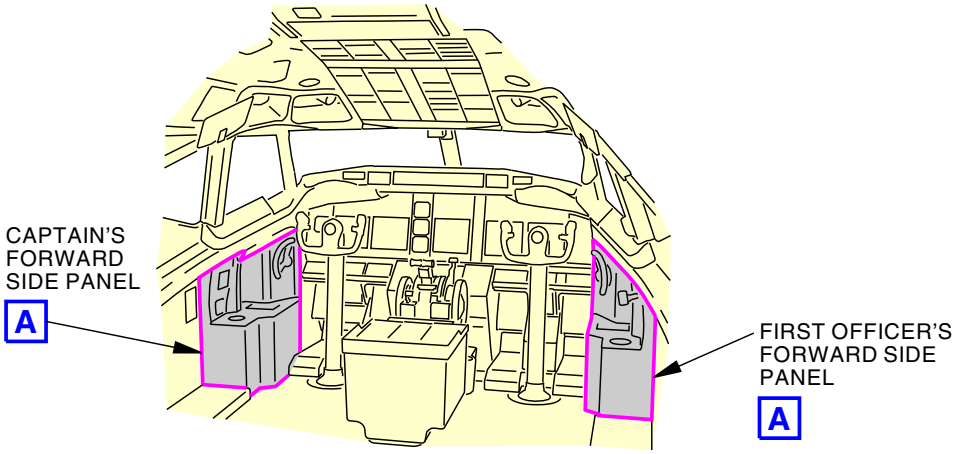

FLIGHT COMPARTMENT

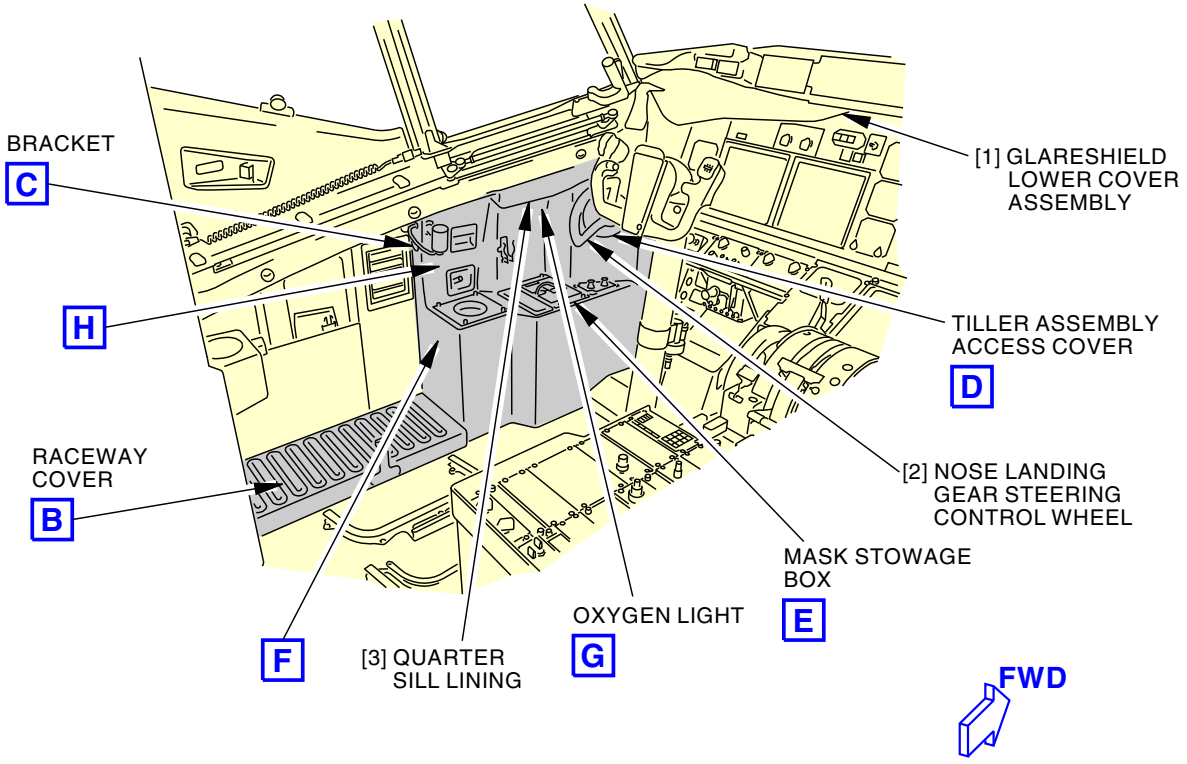


CAPTAIN'S FORWARD SIDE PANEL (FIRST OFFICER'S PANEL IS OPPOSITE)

A

2411845 S00061529242_V2


Flight Compartment Forward Side Panels
Figure 401/25-11-22-990-802 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

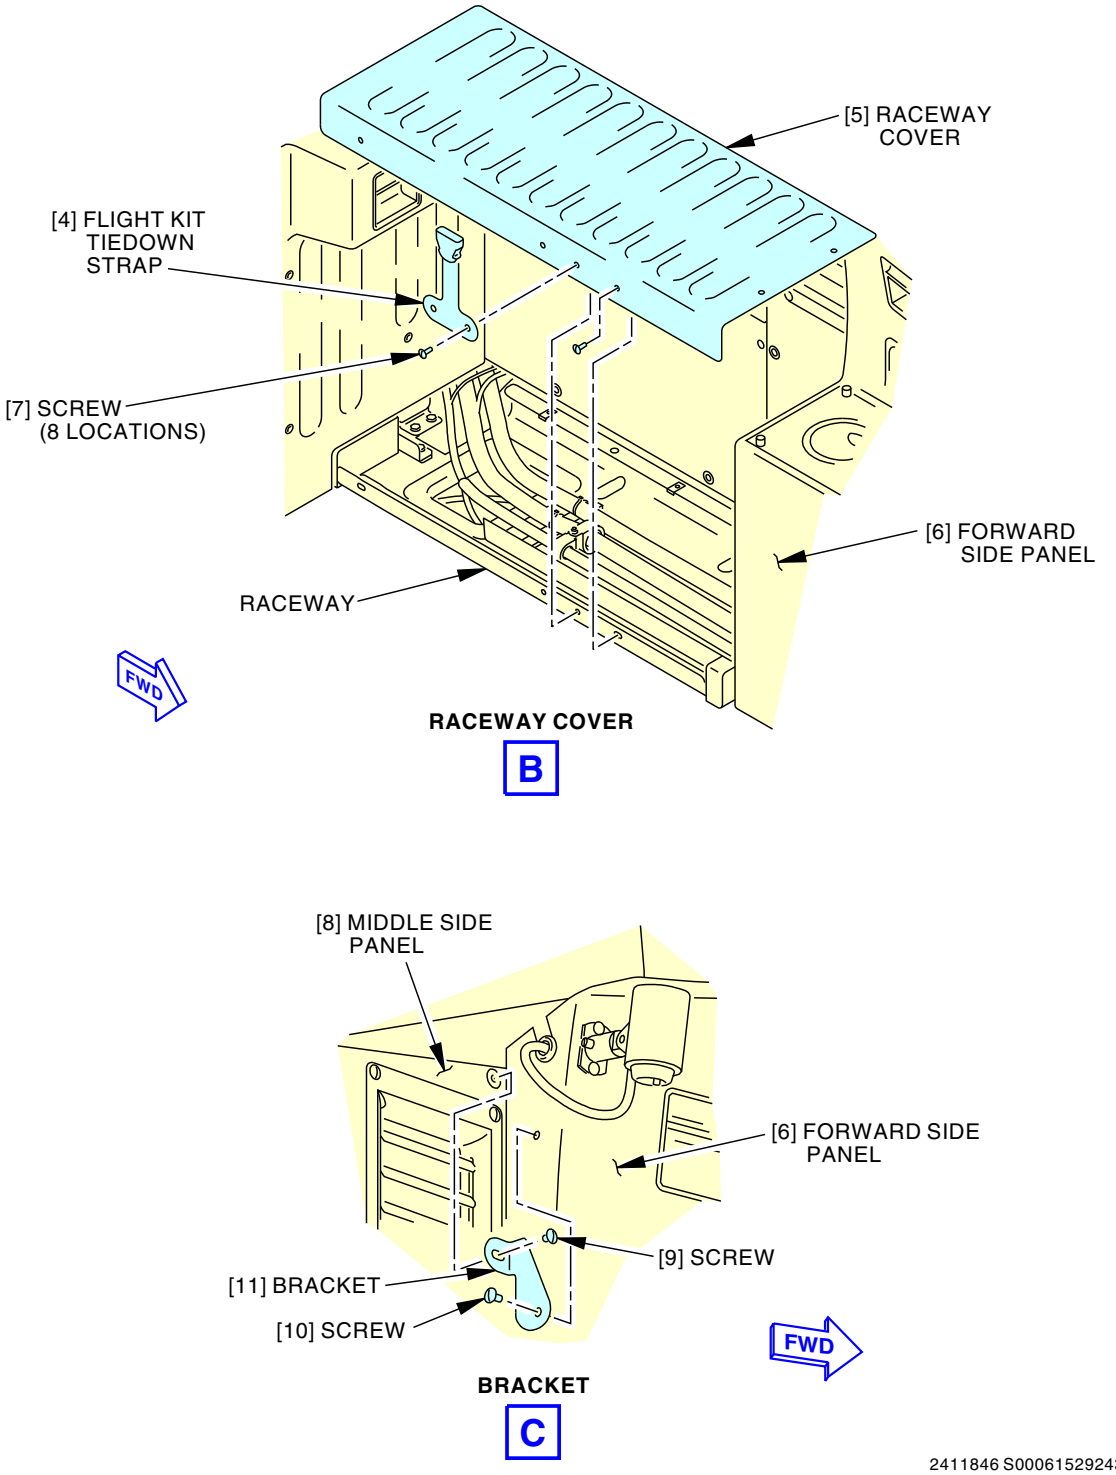


Flight Compartment Forward Side Panels
Figure 401/25-11-22-990-802 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

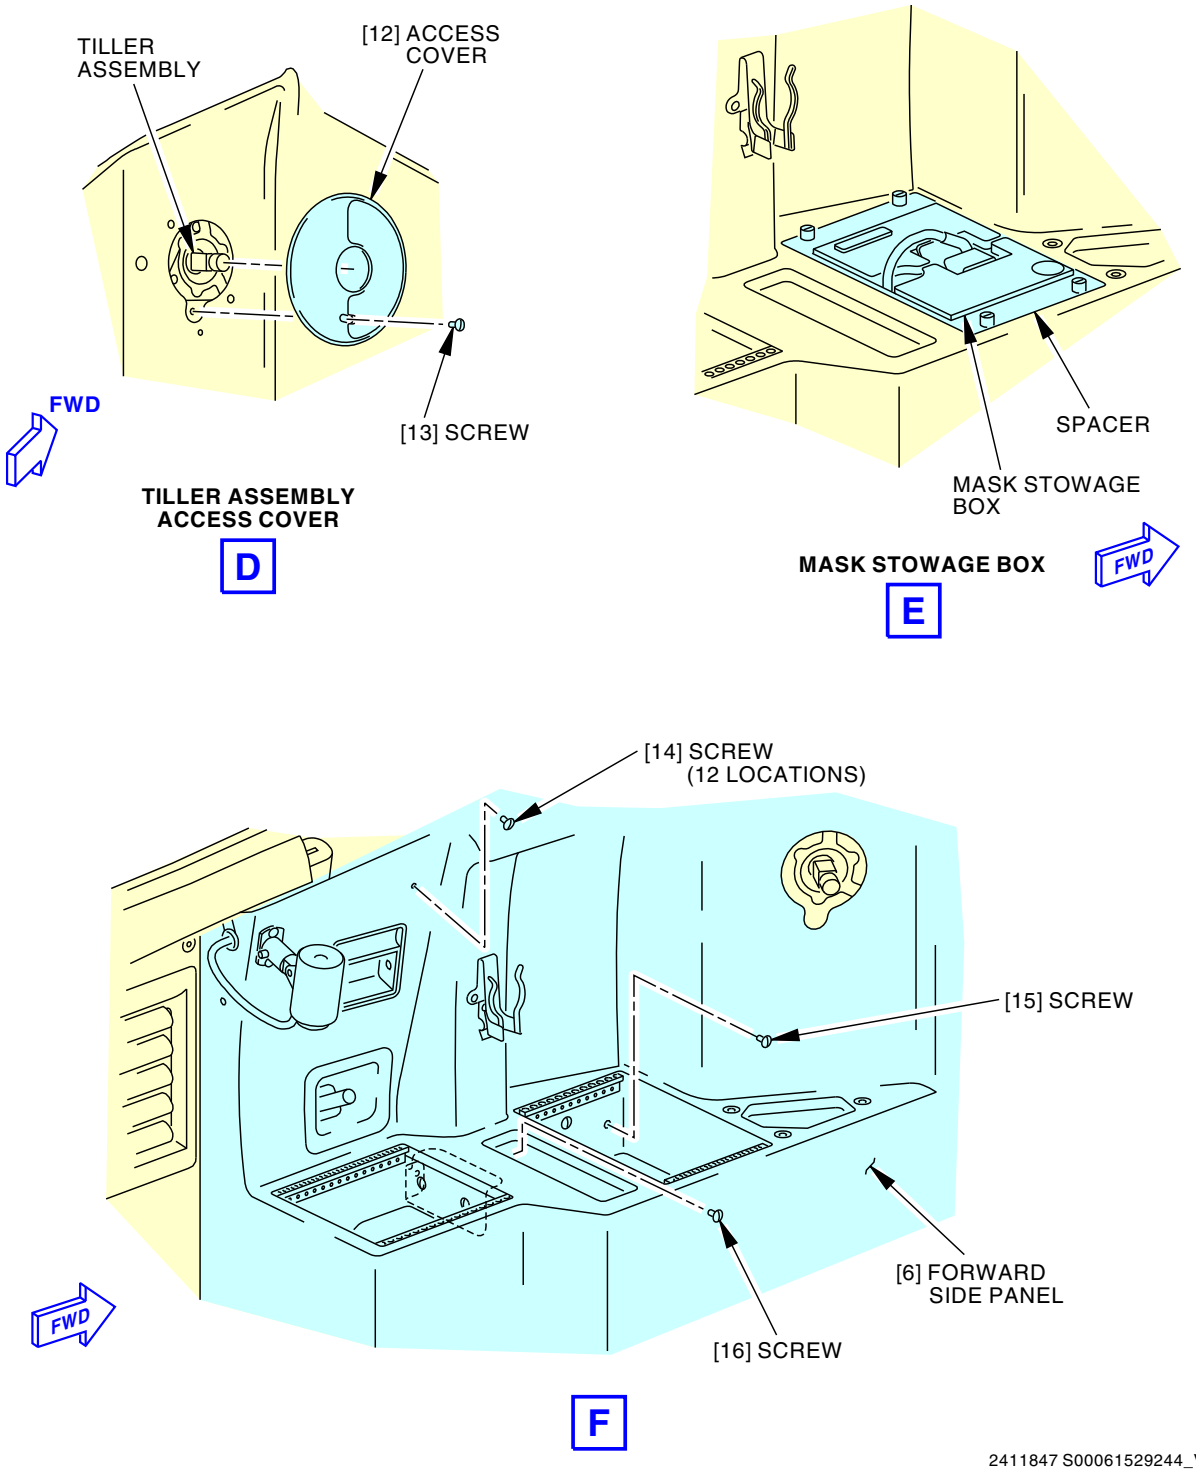


Flight Compartment Forward Side Panels
Figure 401/25-11-22-990-802 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

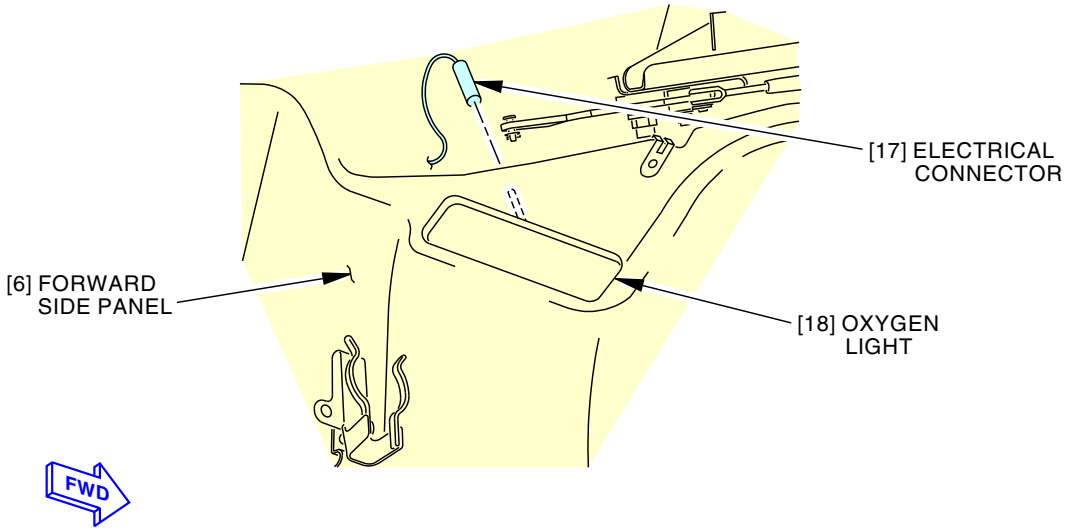

OXYGEN LIGHT

G

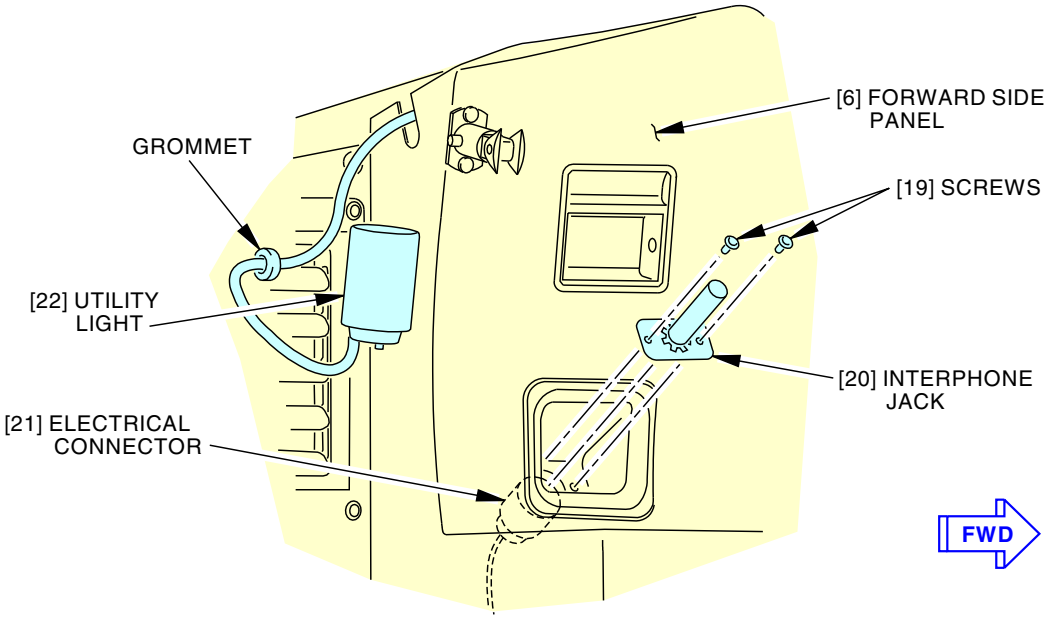

UTILITY LIGHT AND INTERPHONE JACK

H

2411848 S00061529245_V1

Flight Compartment Forward Side Panels
Figure 401/25-11-22-990-802 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-11-22-400-801

3. Flight Compartment Forward Side Panel Installation

(Figure 401)

A. References

Reference	Title
23-51-00-710-801	Flight Interphone System Operational Test (P/B 501)
25-11-01-400-801	Captain and First Officer Seat Installation (P/B 401)
32-51-41-400-801	Nose Landing Gear Steering Control Wheel Installation (P/B 401)
35-12-00-700-802	Crew Oxygen Mask-Regulator Test (P/B 501)
35-12-85-400-801	Oxygen Mask Stowage Box Installation (P/B 401)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
6	Forward side panel	25-11-22-01-320	PTF ALL
		25-11-22-01-325	PTF ALL
		25-11-22-01-330	PTF ALL
		25-11-22-01-335	PTF ALL

C. Location Zones

Zone	Area
210	Subzone - Control Compartment - Body Station 178.00 to Body Station 259.50
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Forward Side Panel Installation

SUBTASK 25-11-22-420-001

(1) Align the forward side panel [6] in the correct position.

(a) Make sure that you can access the electrical connections.

SUBTASK 25-11-22-400-001

(2) Connect the electrical connector for the map light control module.

SUBTASK 25-11-22-430-001

(3) Install the screw [15].

SUBTASK 25-11-22-420-002

(4) Connect the electrical connector to the interphone jack [20].

SUBTASK 25-11-22-420-003

(5) Connect the electrical connector for the utility light [22].

(a) Slide the electrical cord through the slot in the panel then the slot in the grommet.

SUBTASK 25-11-22-420-004

(6) Connect the electrical connector [17] to the oxygen light [18].

SUBTASK 25-11-22-420-006

(7) Install the screw [9] and screw [10] to attach the bracket [11] to the forward side panel [6] and middle side panel [8].

SUBTASK 25-11-22-430-002

(8) Install the screws [19] to attach the interphone jack [20] to the forward side panel [6].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-22-420-007

(9) Connect the electrical connector [17] for the oxygen light [18].

SUBTASK 25-11-22-420-008

(10) Install the oxygen light [18].

SUBTASK 25-11-22-410-001

(11) Install the forward side panel [6].

CAUTION

DO NOT LET THE PANEL CATCH ON THE STEERING CABLES. IF THE PANEL CATCHES ON THE STEERING CABLES, THE AIRPLANE WILL NOT TURN CORRECTLY. DAMAGE TO EQUIPMENT CAN OCCUR.

(a) Make sure that the forward side panel [6] does not hit or get caught on components.

1) Hold the forward side panel [6] at the top forward corner then bend down and inboard to clear obstacles.

2) Hold the forward side panel [6] at the rear bottom corner and pull inboard and then back.

(b) Install screws [14] to attach the forward side panel [6] to the structure.

(c) Install the screw [9] and screw [10] to attach the bracket [11] to the middle side panel [8] and forward side panel [6].

SUBTASK 25-11-22-430-003

(12) Install the screw [13] to attach the access cover [12] to the tiller assembly.

SUBTASK 25-11-22-420-009

(13) Make sure that the tiller assembly access cover [12] is installed correctly.

(a) Install the nose landing gear steering control wheel, if applicable (TASK 32-51-41-400-801).

SUBTASK 25-11-22-410-003

(14) Install the screws [7] and flight kit tiedown strap [4] to attach the raceway cover [5] to the forward side panel [6] raceway.

SUBTASK 25-11-22-410-004

(15) Install the quarter sill lining [3].

SUBTASK 25-11-22-410-005

(16) Install the screws to attach the glareshield lower cover assembly [1] to the structure.

SUBTASK 25-11-22-400-003

(17) Install the screw [16] to attach the map holder to the forward side panel [6].

E. Put the Airplane Back to its Usual Condition

SUBTASK 25-11-22-410-007

(1) Install the oxygen mask stowage box (TASK 35-12-85-400-801).

SUBTASK 25-11-22-410-006

(2) Install the captain's or first officer's seat (TASK 25-11-01-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-11-22-860-002

(3) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
A	9	C00308	CONTROL CABIN LIGHTING MAP & KIT
B	9	C00331	PANEL & INSTR 28V PRI CAPT & CTR
B	10	C00335	PANEL & INSTR 28V PRI F/O
D	8	C00701	EMER PANEL LTG

F. Installation Test

SUBTASK 25-11-22-710-001

(1) Do a test of the flight kit/reading light.

(a) Put the light switch in the ON position.

(b) Make sure that the light comes on.

(c) Put the light switch to the OFF position.

(d) Make sure that the light goes off.

SUBTASK 25-11-22-710-002

(2) Do a test of the map/chart light assembly at the P21 or P22 panel.

(a) Put the map switch to the dim position.

(b) Make sure that the light goes dim.

(c) Put the light switch to the full bright position.

(d) Make sure that the light is bright.

(e) Put the map switch to the off position.

(f) Make sure that the map light goes off.

SUBTASK 25-11-22-710-004

(3) Do an operational test of the crew oxygen mask (TASK 35-12-00-700-802).

SUBTASK 25-11-22-710-005

(4) Do a test of the boom microphone (TASK 23-51-00-710-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CLOSEOUT SEAL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) The removal of the closeout seal.

(2) The installation of the closeout seal.

(3) The reinstallation of the closeout seal if it has come out of the retainer.

TASK 25-21-01-000-801

2. Closeout Seal Removal

Figure 401

A. References

Reference	Title
25-00-00-100-801	Equipment/Furnishings - Cleaning (P/B 701)

B. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Procedure

SUBTASK 25-21-01-000-001

(1) Remove the seal:

(a) Disengage the seal from the seal retainer.


(b) Remove the seal from the seal retainer.

SUBTASK 25-21-01-100-001

(2) If necessary, clean the residue of adhesive, A00027 (TASK 25-00-00-100-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

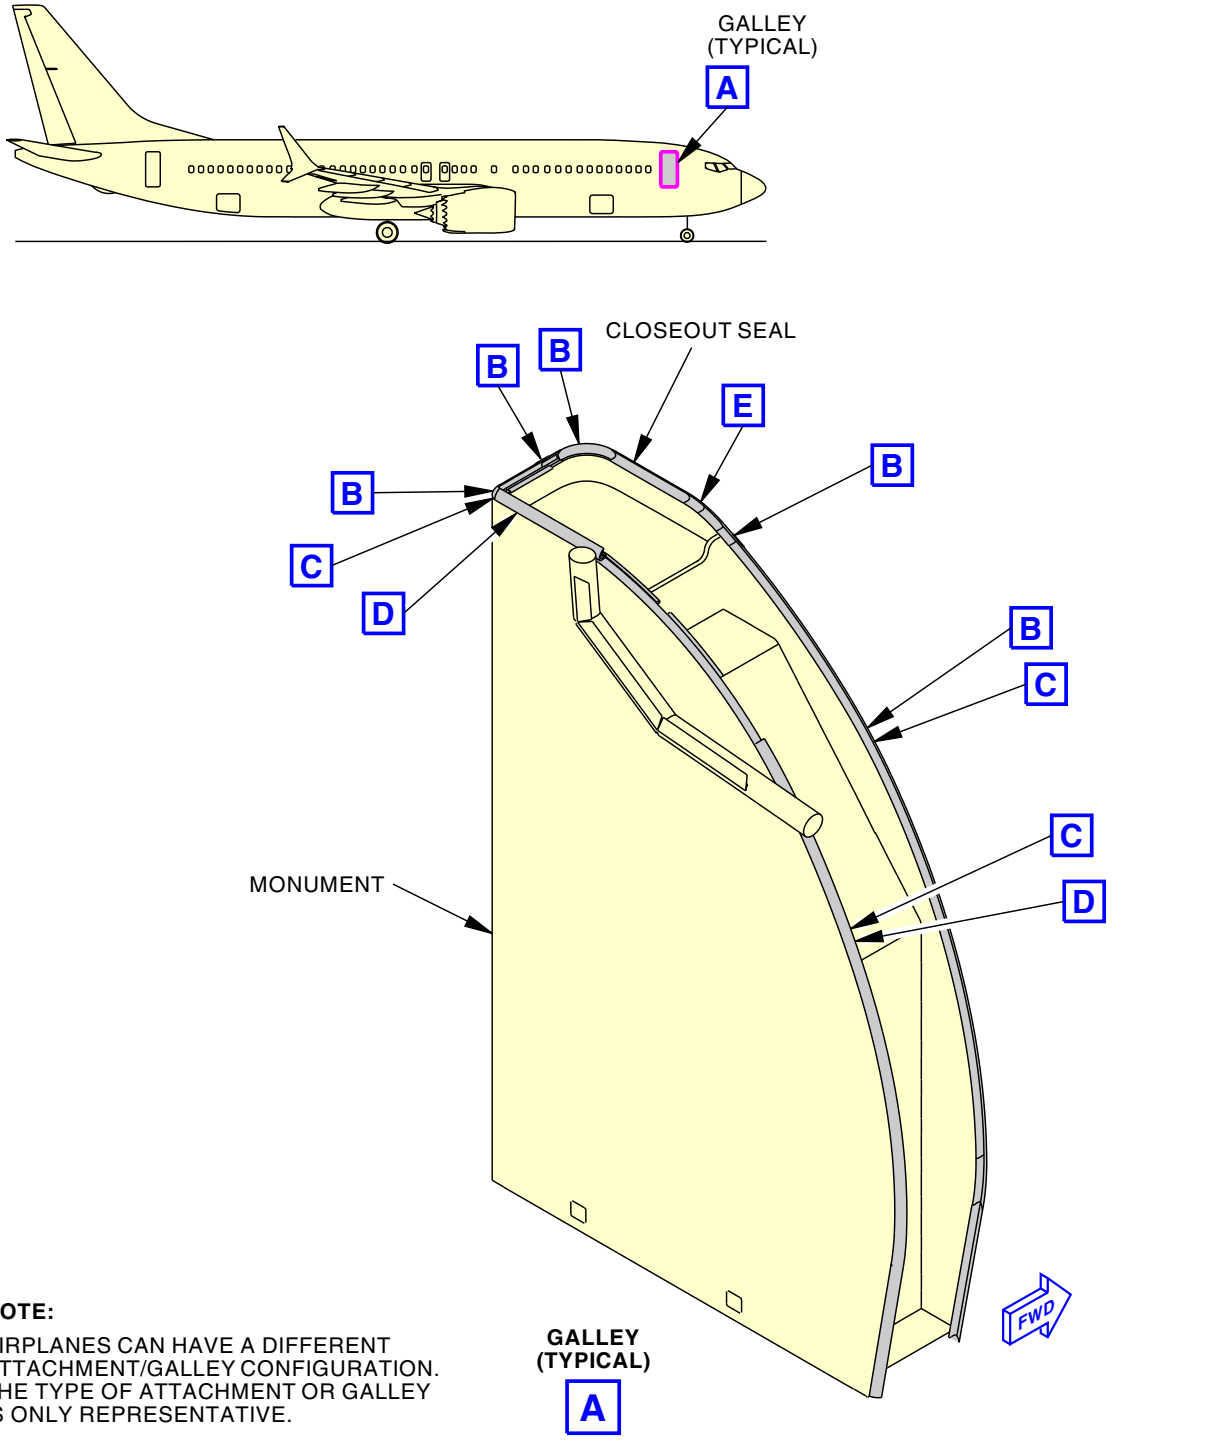


NOTE:

AIRPLANES CAN HAVE A DIFFERENT ATTACHMENT/GALLEY CONFIGURATION. THE TYPE OF ATTACHMENT OR GALLEY IS ONLY REPRESENTATIVE.

Closeout Seal Installation
Figure 401/25-21-01-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

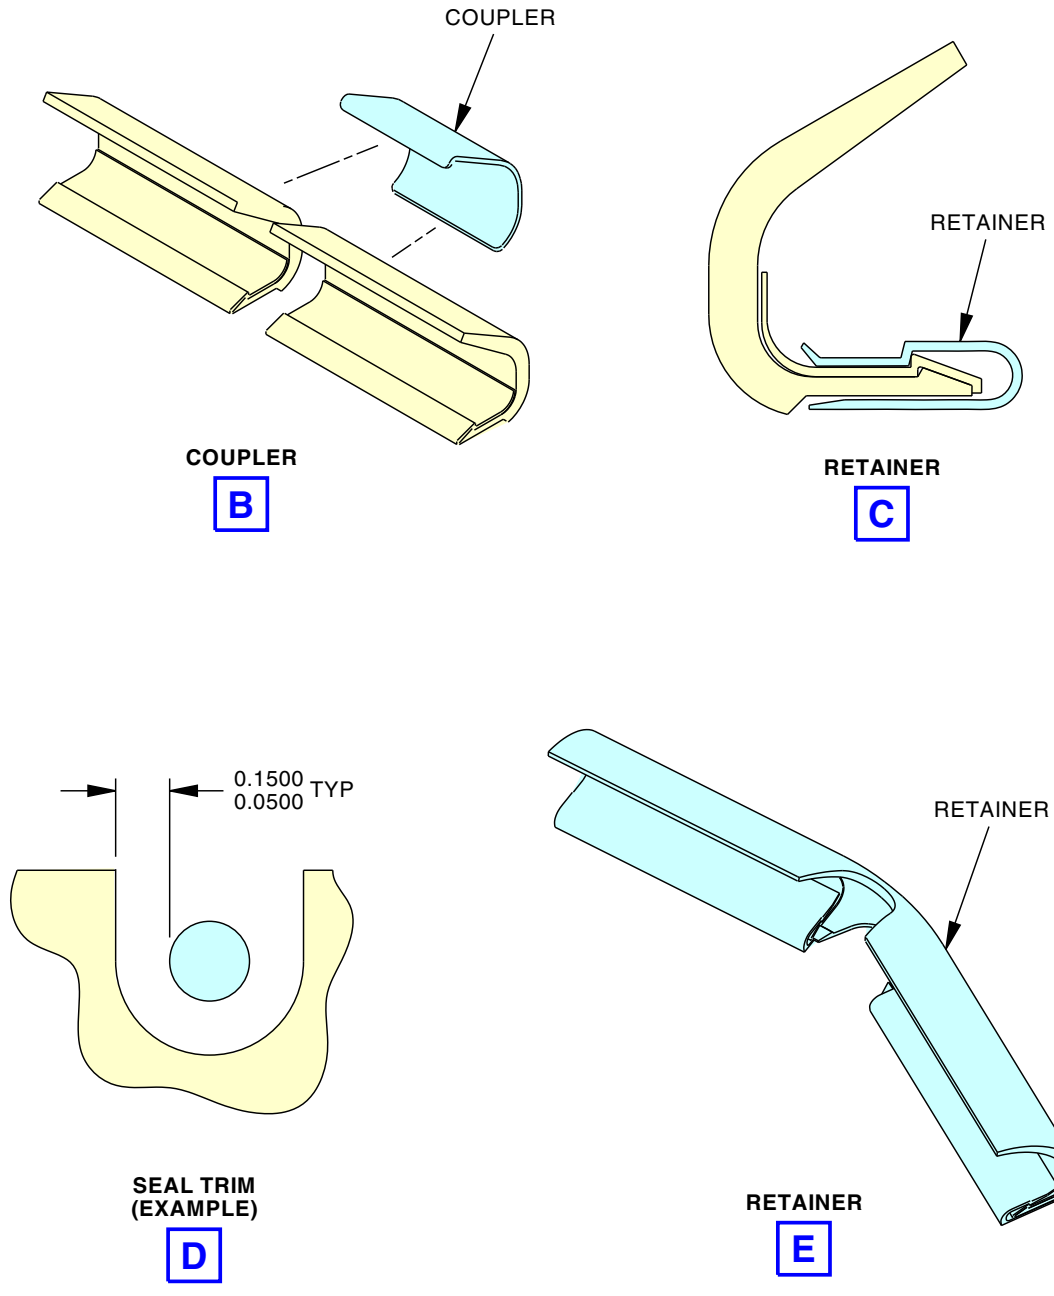

Closeout Seal Installation
Figure 401/25-21-01-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-01-400-801

3. Closeout Seal Installation

Figure 401

A. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-21-01-020-001

(1) If applicable, remove the installed foam seal.

(a) Remove the remaining adhesive.

SUBTASK 25-21-01-400-001

(2) Where two seals connect, do the steps that follow:

(a) Do not use adhesive.

(b) Cut the end off one seal until the coupler on the other seal overlaps it.

(c) Where a coupler is not available at the end of a seal, install a coupler.

NOTE: The coupler dimensions must agree with the largest mating seal.

SUBTASK 25-21-01-420-001

(3) Push the seal locking device into the installed retainer until the locking device engages.

(a) Push the seal tightly until a click is heard or you can feel it snapping into the retainer.

(b) Do not use adhesive.

SUBTASK 25-21-01-420-002

(4) Apply adhesive, A00027 to fill spaces that stay after all other seals are installed.

SUBTASK 25-21-01-350-001

(5) Trim the seal to fit.

SUBTASK 25-21-01-420-003

(6) Bond one side of the seal and push the pointed end into the gap until only the decorative endcap can be seen.

SUBTASK 25-21-01-020-002

(7) Where the seal turns a corner:

(a) Remove the non-decorative cross section if necessary to install the seal.

SUBTASK 25-21-01-020-003

(8) Trim the seal to fit the installation space.

SUBTASK 25-21-01-020-004

(9) If there is interference between the seal and wires or support structure:

(a) Trim the seal to remove the interference.

NOTE: Do not trim the seal so far that the relief can be seen in the cabin interior.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-01-400-802

4. Closeout Seal Reinstallation

Figure 401

A. Consumable Materials

Reference	Description	Specification
A50055	Adhesive - Two-Part, RT Cure, Urethane	BAC5010 Type 89 (BMS5-105)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-21-01-210-001

(1) Make sure that the retainer is not damaged or missing.

SUBTASK 25-21-01-420-004

(2) Install the seal:

(a) Push the seal locking device into the installed retainer until the locking device engages.

1) Push the seal tightly until a click is heard or you can feel it snapping into the retainer.

2) Do not use adhesive.

(b) If necessary, add some urethane adhesive, A50055 to some locations to help with the seal staying in its position.

NOTE: During removal, this can cause damage to the seal or retainer. This is optional if the seal only needs to be removed at high time/cycle intervals.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WINDOW SHADE AND REVEAL ASSEMBLY - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Snap in window shade and reveal assembly removal

(2) Snap in window shade and reveal assembly installation

(3) Emergency exit door snap in window shade and reveal assembly removal

(4) Emergency exit door snap in window shade and reveal assembly installation.

TASK 25-21-12-000-801

2. Snap In Window Shade and Reveal Assembly Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the window shade and reveal assembly, or to remove only the window shade.

(2) The skin wedge, STD-1178, or metal guide, STD-7754, must be placed on one at a time top of the 6 reveal tabs to release window reveal.

B. Tools/Equipment

Reference	Description
STD-1178	Skin Wedge - a commercially available hand tool or made from a 1 1/2 inch putty knife with rounded corners and between 0.020 and 0.035 inches thick.
STD-7754	Guide - Metal, Window Latch Opening (0.09x1.00x7.00)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Snap In Window Shade and Reveal Assembly Removal

SUBTASK 25-21-12-000-005

(1) To remove the window shade and reveal assembly [1], do these steps:

(a) Move the windows shade [3] to the closed position.

(b) Start with one of the sidewall tabs first.

(c) Put the skin wedge, STD-1178, or metal guide, STD-7754, between the sidewall panel and window shade and reveal assembly [1].

(d) Push the sidewall panel outboard with the skin wedge, STD-1178, or metal guide, STD-7754. At the same time, carefully and quickly rotate the skin wedge, STD-1178, handle, or metal guide, STD-7754, in the direction of the center of the window.

SUBTASK 25-21-12-020-016

(2) Disengage the other side window shade and reveal assembly [1] from the sidewall panel.

(a) Put the skin wedge, STD-1178, or metal guide, STD-7754, between the sidewall panel and one of the top two window shade and reveal assembly [1] tabs.

(b) Push the sidewall panel outboard with the skin wedge, STD-1178, or metal guide, STD-7754. At the same time, carefully and quickly rotate the skin wedge, STD-1178, handle, or metal guide, STD-7754, in the direction of the center of the window.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-12-020-017

(3) With one hand hold the top of the window shade and reveal assembly [1] and pull up.

SUBTASK 25-21-12-020-018

(4) Disengage the two lower corner window shade and reveal assembly [1] tabs from the sidewall panel.

(a) Put the skin wedge, STD-1178, or metal guide, STD-7754, between the sidewall panel and one of the top two window shade and reveal assembly [1] tabs.

(b) Push the sidewall panel outboard with the skin wedge, STD-1178, or metal guide, STD-7754. At the same time, carefully and quickly rotate the skin wedge, STD-1178, handle, or metal guide, STD-7754, in the direction of the center of the window.

SUBTASK 25-21-12-000-006

(5) Carefully shake the window shade and reveal assembly [1] free and remove it.

SUBTASK 25-21-12-020-019

(6) If it is necessary to remove the window inner pane, do these steps:


(a) Carefully spread apart the upper lips of the inner pane tracks on the window reveal.

NOTE: This will prevent sliding contact damage to the window inner pane.

(b) Slide the window inner pane out from the window reveal.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

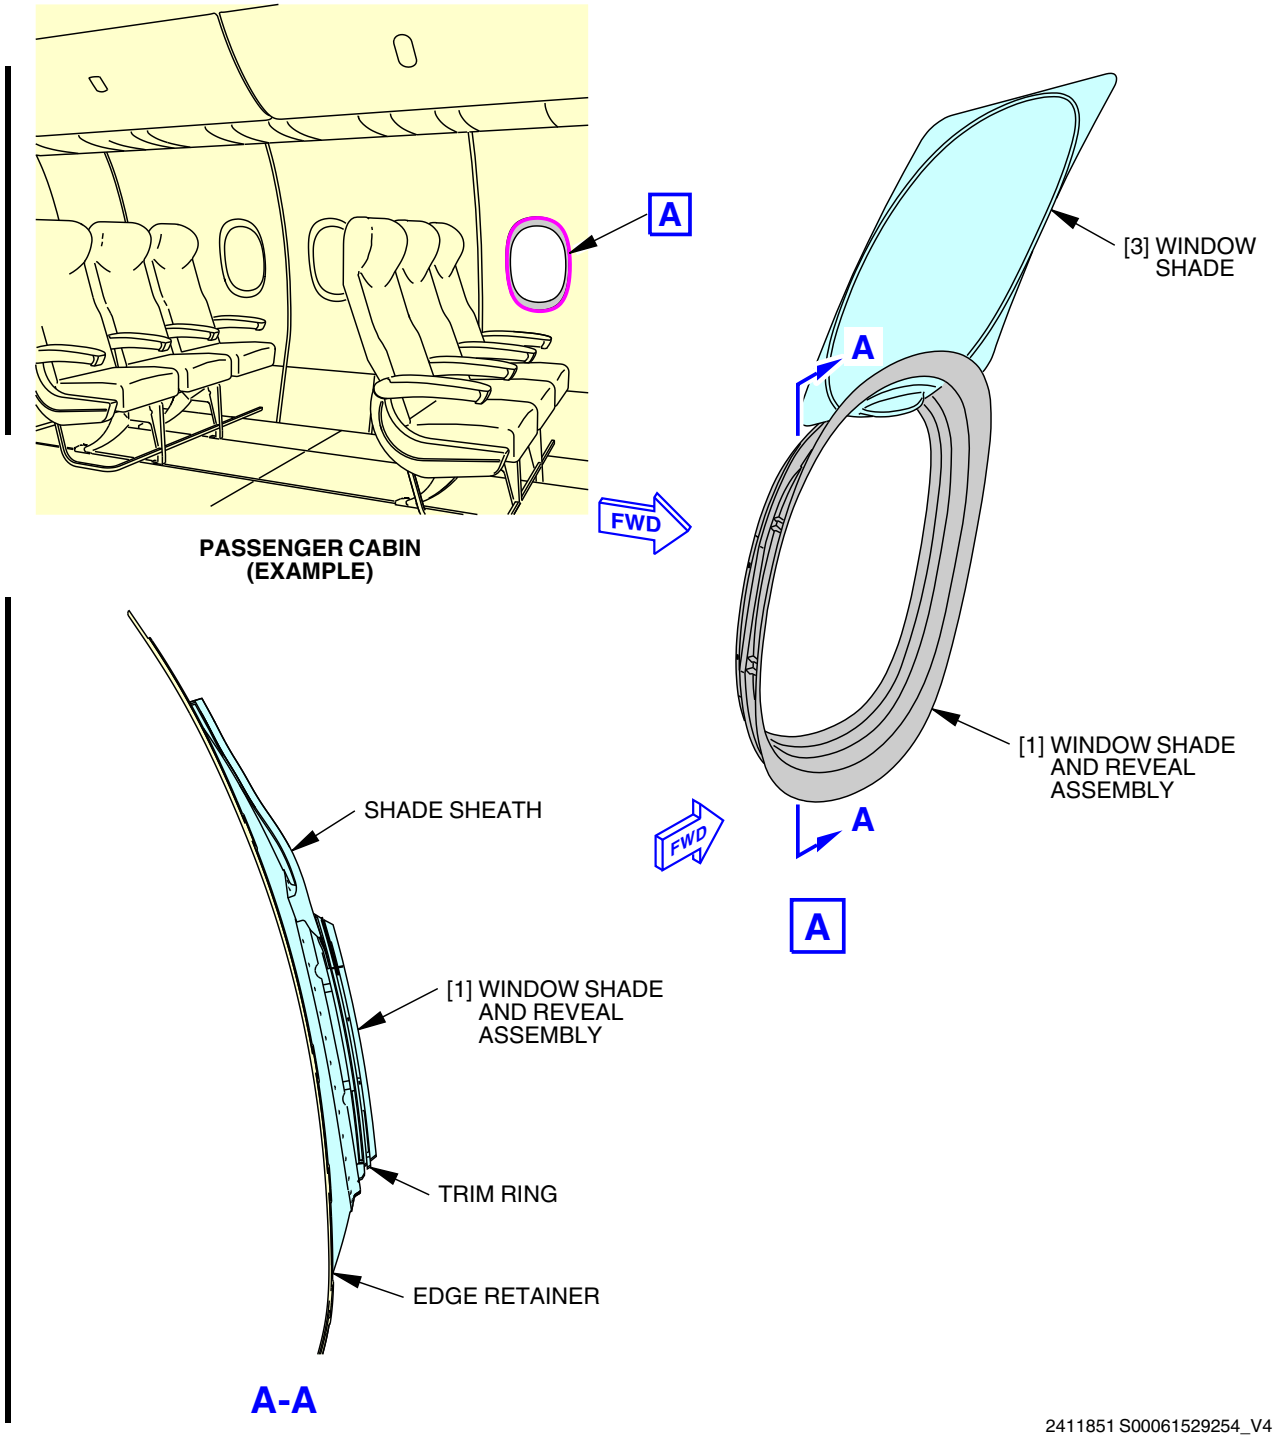

Snap In Window Shade and Reveal Assembly Installation
Figure 401/25-21-12-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-12-400-802

3. Snap In Window Shade and Reveal Assembly Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the window shade and reveal assembly.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Window shade and reveal assembly	25-21-12-34C-005	PTF ALL
		25-21-12-34C-010	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Snap In Window Shade and Reveal Assembly Installation

SUBTASK 25-21-12-420-002

(1) If it is necessary, do these steps to install the window inner pane:

NOTE: No special tools are necessary for installation.

(a) Carefully spread apart the upper lips of the inner pane tracks on the window reveal.

(b) Put the window inner pane into the window reveal.

SUBTASK 25-21-12-400-001

(2) To install the window shade and reveal assembly [1], do these steps:

(a) Put the window shade and reveal assembly [1] into the window opening.

(b) Insert the top of the windows shade [3] into the shade sheath.

(c) Move the windows shade [3] into the shade sheath not to the fully up position.

(d) Engage the window shade and reveal assembly [1] upper tabs into the trim ring.

(e) Hold the upper part of the window shade and reveal assembly [1] and apply light pressure upward to the window shade and reveal assembly [1].

(f) Turn the window shade and reveal assembly [1] into its place until you hear click sound on the sides of the window shade and reveal assembly [1].

NOTE: When you hear click sound the window assembly is secured to the sidewall panel.

(g) Pull up on the top of the window shade and reveal assembly [1] to make sure that all of the tabs are fully engaged.

(h) Move the windows shade [3] up and down to make sure that the shade operates smoothly.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-12-000-803

4. Emergency Exit Door Snap In Window Shade and Reveal Assembly Removal

(Figure 402)

A. General

(1) This task gives the instructions to remove the window shade and reveal assembly, or to remove only the window shade.

B. References

Reference	Title
52-22-51-000-801	Emergency Exit Door Lining Removal (P/B 401)

C. Tools/Equipment

Reference	Description
STD-1178	Skin Wedge - a commercially available hand tool or made from a 1 1/2 inch putty knife with rounded corners and between 0.020 and 0.035 inches thick.

D. Location Zones

Zone	Area
200	Upper Half of Fuselage
832	Left Forward Emergency Exit
833	Left Emergency Exit (STA 627.5)
842	Right Forward Emergency Exit
843	Right Emergency Exit (STA 627.5)

E. Emergency Exit Door Snap In Window Shade and Reveal Assembly Removal

SUBTASK 25-21-12-010-006

(1) Do this task: Emergency Exit Door Lining Removal, TASK 52-22-51-000-801.

SUBTASK 25-21-12-010-008

(2) Move the shade to the closed position.

SUBTASK 25-21-12-000-003

(3) To remove the window shade and reveal assembly [2], do these steps:

(a) Disengage the upper reveal tabs from the sidewall panel.

1) Put the skin wedge, STD-1178, between the sidewall panel and one of the two upper window reveal tabs.

NOTE: The skin wedge, STD-1178, must be placed on one at a time, on top of the 6 reveal tabs to release the window reveal.

2) Push the sidewall panel outboard with the skin wedge, STD-1178.

3) At the same time, carefully and quickly push the skin wedge, STD-1178, handle in the direction to the center of the window.

4) Disengage the other upper reveal tab by the same way.

(b) Disengage the upper lateral reveal tabs from the sidewall panel.

1) Put the skin wedge, STD-1178, between the sidewall panel and one of the two upper lateral window reveal tabs.

2) Push the sidewall panel outboard with the skin wedge, STD-1178.

3) At the same time, carefully and quickly push the skin wedge, STD-1178, handle in the direction to the center of the window.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

4) Disengage the other upper lateral reveal tab by the same way.

(c) Disengage the lower lateral reveal tabs from the sidewall panel.

1) Put the skin wedge, STD-1178, between the sidewall panel and one of the two lower lateral window reveal tabs.

2) Push the sidewall panel outboard with the skin wedge, STD-1178.

3) At the same time, carefully and quickly push the skin wedge, STD-1178, handle in the direction to the center of the window.

4) Disengage the other lower lateral reveal tab by the same way.


(d) Disengage the lower reveal tabs from the sidewall panel.

1) Pull down the shade to make space to remove window reveal from the window opening.


2) Carefully shake the window reveal free and remove it.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

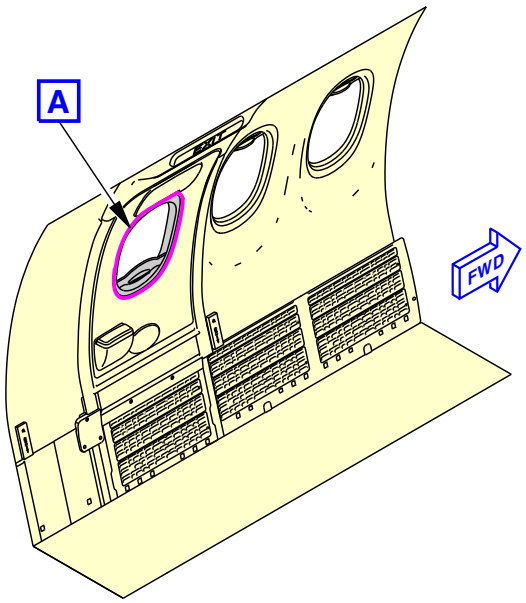

EMERGENCY EXIT DOOR (EXAMPLE)

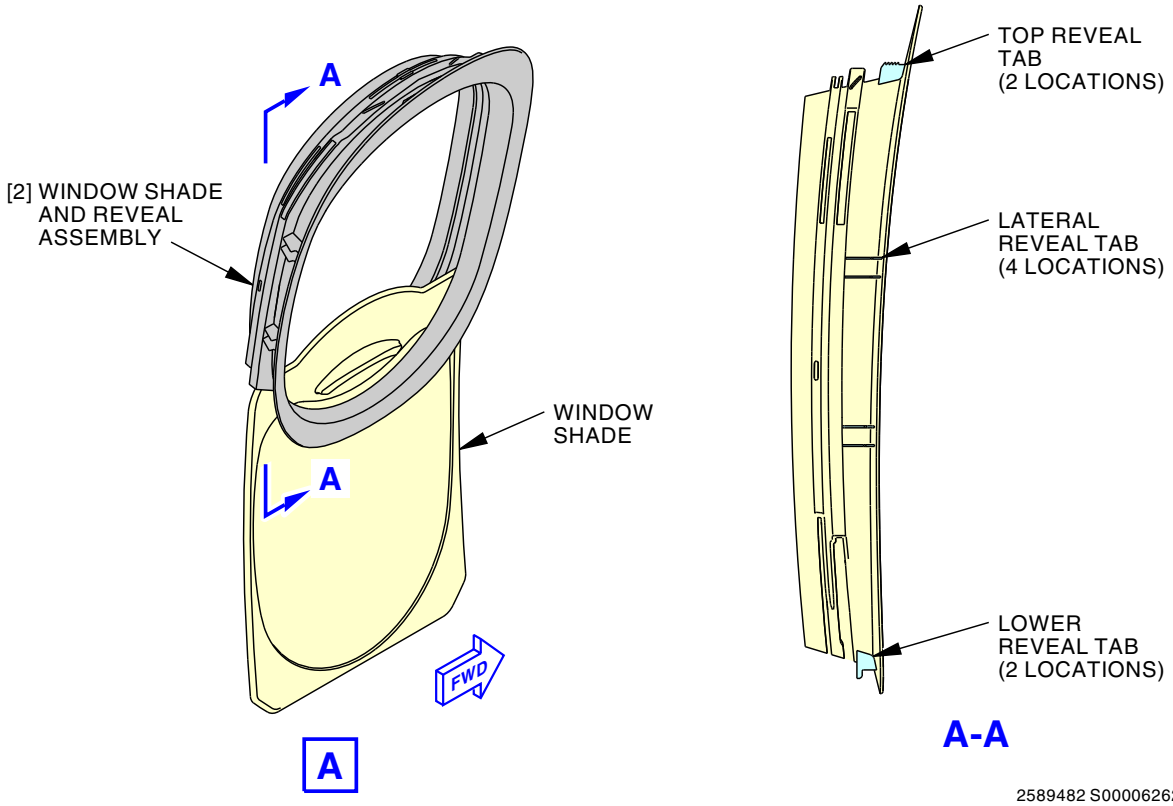

Emergency Exit Door Snap In Window Shade and Reveal Assembly Installation
Figure 402/25-21-12-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-12-400-804

5. Emergency Exit Door Snap In Window Shade and Reveal Assembly Installation

(Figure 402)

A. General

(1) This task gives the instructions to install the window shade and reveal assembly.

B. References

Reference	Title
52-22-51-400-801	Emergency Exit Door Lining Installation (P/B 401)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Window shade and reveal assembly	25-21-12-05-005	PTF ALL
		25-21-12-05-010	PTF ALL

D. Location Zones

Zone	Area
200	Upper Half of Fuselage
832	Left Forward Emergency Exit
833	Left Emergency Exit (STA 627.5)
842	Right Forward Emergency Exit
843	Right Emergency Exit (STA 627.5)

E. Emergency Exit Door Snap In Window Shade and Reveal Assembly Installation

SUBTASK 25-21-12-400-002

NOTE: No special tools are necessary for installation.

(1) To install the window shade and reveal assembly [2], do these steps:

(a) Put the window reveal into the window opening.

(b) The bottom of the shade will guide itself into the shade sheath.

(c) Engage the two lower reveal tabs.

(d) Push the two lower lateral tabs outboard one at a time to engage the window reveal tabs.

(e) The tabs must move past the window opening.

(f) Push the two upper lateral tab outboard one at a time to engage the window reveal tabs.

(g) The tab must move past the window opening.

(h) Pull down the shade to make space to install the two lower reveal tabs.

(i) Push on the top of the window reveal outboard until the two upper tabs are fully engaged against the sidewall window panel.

NOTE: When installed correctly, the top of the window reveal will fit tightly against the sidewall panel.

(j) Push the reveal outboard and away from the window center.

(k) Pull up on the top of the window reveal to make sure that all of the tabs are fully engaged.

(l) Move the window shade up and down to make sure that the shade operates smoothly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-12-410-001

(2) Do this task: Emergency Exit Door Lining Installation, TASK 52-22-51-400-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

EMERGENCY EXIT DOORWAY LINING - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Emergency Exit Doorway Lining Removal

(2) Emergency Exit Doorway Lining Installation

TASK 25-21-20-000-801

2. Emergency Exit Doorway Lining Removal

(Figure 401)

A. General

(1) This task includes the steps to remove the emergency exit doorway linings from the passenger compartment.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
832	Left Forward Emergency Exit
833	Left Emergency Exit (STA 627.5)
842	Right Forward Emergency Exit
843	Right Emergency Exit (STA 627.5)

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Prepare for the Removal

SUBTASK 25-21-20-860-001

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

SUBTASK 25-21-20-010-006

(2) To get access to the P91 and P92 panels, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-20-860-009

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

> **WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
D	9	C01280	DOOR AREA HTR-FWD

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	11	C00594	WINDOW LIGHT RIGHT
E	12	C00776	WINDOW LIGHT LEFT

SUBTASK 25-21-20-010-001

> **WARNING** MAKE SURE THAT THE DOOR OPENING PATH IS CLEAR BEFORE YOU RELEASE THE DOOR HANDLE. THE DOOR IS SPRING-LOADED TO OPEN AUTOMATICALLY AND CAN CAUSE INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT.

(4) Open the emergency exit door.

E. Emergency Exit Doorway Lining Removal

SUBTASK 25-21-20-010-002

(1) Remove the seat intrusion control blocks.

(a) Remove the screws [3].

(b) Remove the block [8].

(c) Remove the screw [4].

(d) Remove the block [6] with the screws [5] and washers [7].

SUBTASK 25-21-20-020-001

(2) Remove the closeout lining assembly [1].

(a) Pull the closeout lining assembly [1] up and inboard.

(b) Remove the screws [12] and washers [13].

(c) Disconnect the heater blanket electrical lead [11].

(d) Remove the closeout lining assembly [1].

(e) If necessary, remove the block assembly [10].

SUBTASK 25-21-20-020-002

(3) Remove the trim strip assembly [14] and the trim strip assembly [15].

NOTE: The trim strip assembly [14] is opposite the trim strip assembly [15]. Use the same procedure to remove the trim strip assemblies.

(a) Remove the screw [18] and dimpled washer [19].

(b) Remove the nuts [16] and washers [17].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Disconnect the electrical wiring for the heater blanket.

(d) Remove the trim strip assembly [15] and trim strip assembly [14].

(e) Remove the washers [20].

SUBTASK 25-21-20-020-003

(4) Remove the upper lining assembly [2].

(a) Disengage the zipper [21] that attaches the seal on the upper lining assembly [2] to the moisture control seal.


(b) Remove the screws [22] and washers [23].

(c) Disconnect the electrical wiring for the emergency exit light.


(d) Remove the upper lining assembly [2].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

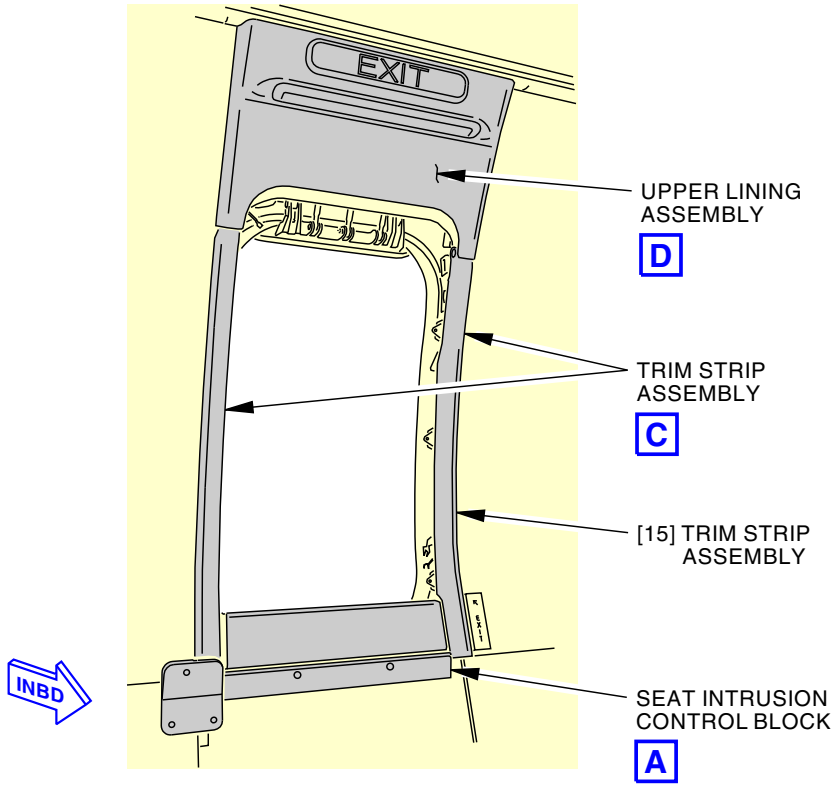

EMERGENCY EXIT DOOR (EXAMPLE)

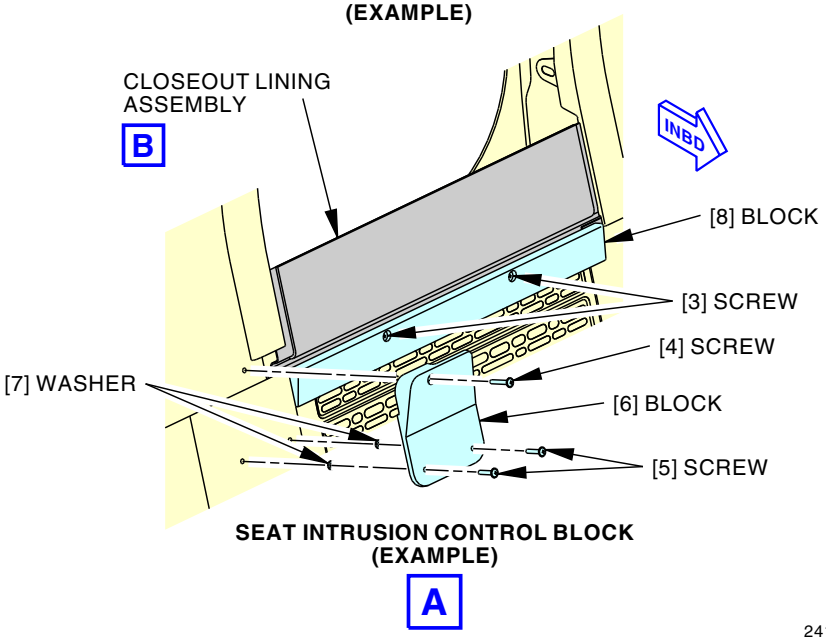


SEAT INTRUSION CONTROL BLOCK (EXAMPLE)

A

2411853 S00061529265_V2


Emergency Exit Doorway Lining Installation
Figure 401/25-21-20-990-802 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

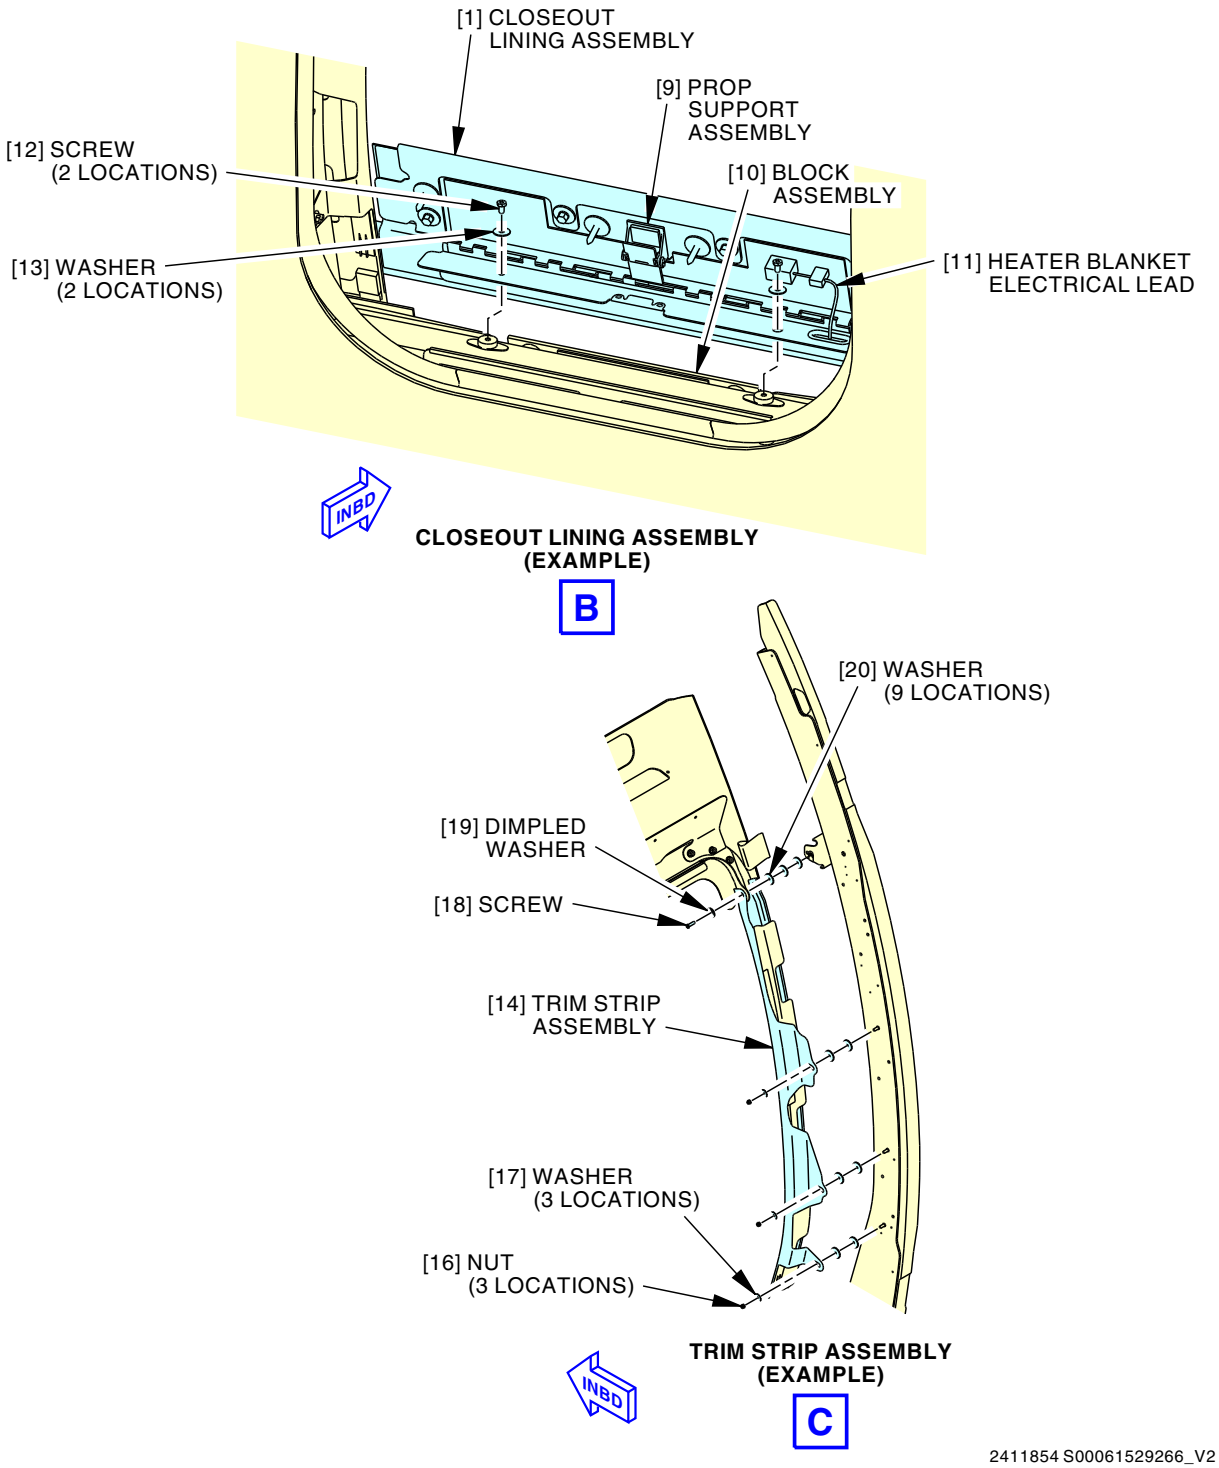

Emergency Exit Doorway Lining Installation
Figure 401/25-21-20-990-802 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

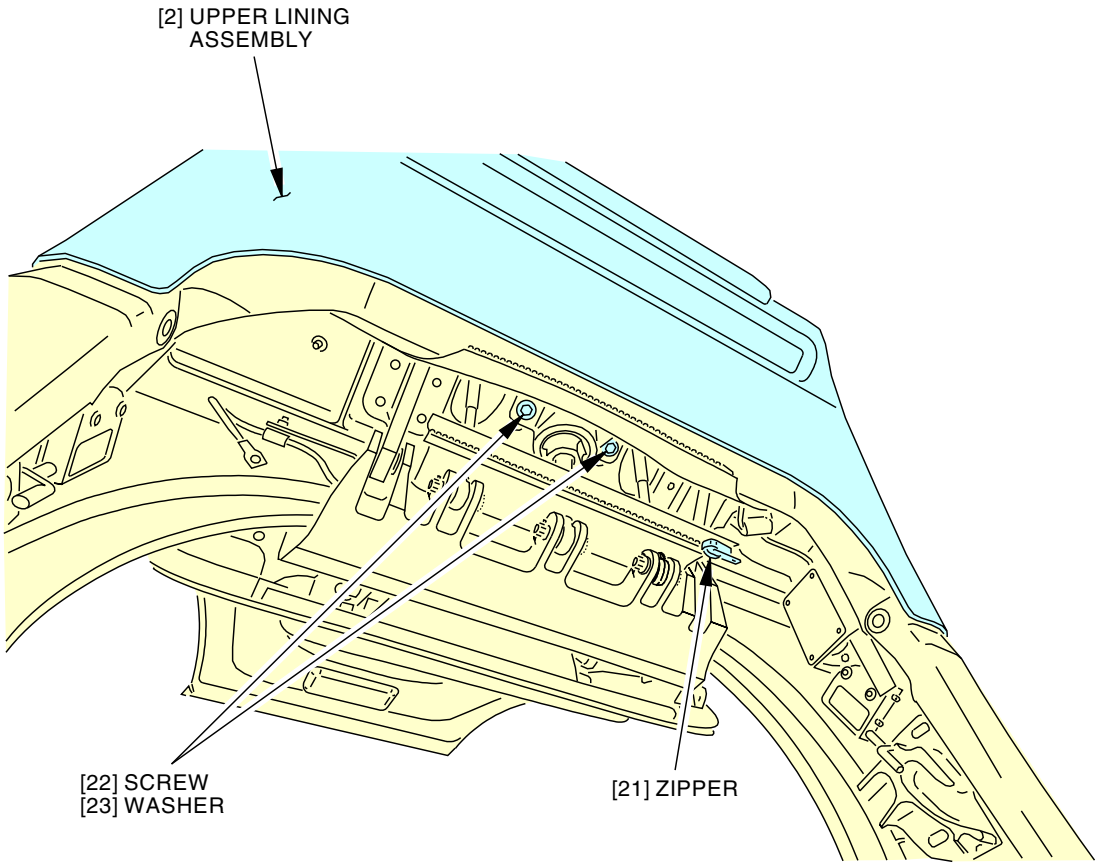

Emergency Exit Doorway Lining Installation
Figure 401/25-21-20-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-20-400-801

3. Emergency Exit Doorway Lining Installation

(Figure 401)

A. General

(1) This task includes the steps to install the emergency exit doorway linings in the passenger compartment.

B. References

Reference	Title
21-45-00-700-802	Emergency Exit Hatch Heaters Operational Test (P/B 501)

C. Consumable Materials

Reference	Description	Specification
G00291	Tape - Aluminum Foil, 3M 425	AMS-T-23397 / L-T-80

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Closeout lining assembly	52-22-51-03-325	PTF ALL
		52-22-51-03-330	PTF ALL
		52-22-51-04-330	PTF ALL
		52-22-51-04-335	PTF ALL
2	Upper lining assembly	52-22-51-03-005	PTF ALL
		52-22-51-04-009	PTF ALL

E. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
832	Left Forward Emergency Exit
833	Left Emergency Exit (STA 627.5)
842	Right Forward Emergency Exit
843	Right Emergency Exit (STA 627.5)

F. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

G. Emergency Exit Doorway Lining Installation

SUBTASK 25-21-20-420-001

(1) Install the upper lining assembly [2].

(a) If necessary, install 3M 425 Aluminum Foil Tape, G00291, on the rear side of the upper lining assembly [2].

1) Add tape on the support assembly below the opening for the emergency exit light to prevent light leakage.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION

MAKE CERTAIN ELECTRICAL CONNECTORS ARE NOT CROSSED DURING INSTALLATION.

(b) Connect the electrical wiring for the emergency exit light.

(c) Bend the clips on the upper lining assembly [2] by a small quantity, to install them below the installed sidewall.

1) Make sure that the electrical wires are behind the upper lining assembly [2].

(d) Put the top of the upper lining assembly [2] into the slot in the A/C extrusion.

1) Use the slotted holes to adjust the upper lining assembly [2].

a) Make sure that the upper lining assembly [2] is level and aligned with the door linings.

b) Make sure that the upper lining assembly [2] does not lock onto the electrical wires.

(e) Install the screws [22] and washers [23].

1) Do not tighten the screws [22].

SUBTASK 25-21-20-420-002

(2) Install the trim strip assembly [15] and trim strip assembly [14].

NOTE: The trim strip assembly [15] is opposite the trim strip assembly [14]. Use the same procedure to install the trim strip assemblies.

CAUTION

MAKE CERTAIN ELECTRICAL CONNECTORS ARE NOT CROSSED DURING INSTALLATION.

(a) Connect the electrical wiring for the heater blanket.

(b) Install the washers [20].

(c) Put the trim strip assembly [15] and trim strip assembly [14] in the correct position.

1) Put the top of the trim strip assembly [15] and trim strip assembly [14] below the upper lining assembly [2].

2) Add or remove the washers [20] to make sure that the distance between the linings on the forward and aft sides is the same.

3) Make sure that the trim strip assembly [15] and trim strip assembly [14] do not lock onto the electrical wires.

(d) Install the screws [18] and the dimpled washers [19].

(e) Install the washers [17] and nuts [16].

SUBTASK 25-21-20-420-003

(3) Complete the installation of the upper lining assembly [2].

(a) Push up on the upper lining assembly [2] while you tighten the screws [22].

(b) Engage the zipper [21] to attach the seal on the upper lining assembly [2] to the moisture seal.

SUBTASK 25-21-20-420-004

(4) Install the closeout lining assembly [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) If necessary, install the block assembly [10].

CAUTION

MAKE CERTAIN ELECTRICAL CONNECTORS ARE NOT CROSSED DURING INSTALLATION.

(b) Connect the heater blanket electrical lead [11].

(c) Engage the bottom of the trim strip assembly [15] and the trim strip assembly [14] into the closeout lining assembly [1].

(d) Install the screws [12] and washers [13].

SUBTASK 25-21-20-410-002

(5) Install the seat intrusion control blocks.

(a) Install the block [6] with the screws [5] and washers [7].

1) Install the washers [7] between the air grille and the block [6] if necessary to fill in the space between the air grilles.

(b) Install the screw [4].

(c) Install the block [8] with the screws [3].

H. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-20-410-003

(1) Close the emergency exit door.

(a) Engage the prop support assembly [9] on the rear side of the closeout lining assembly [1].

SUBTASK 25-21-20-860-010

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
D	9	C01280	DOOR AREA HTR-FWD

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	11	C00594	WINDOW LIGHT RIGHT
E	12	C00776	WINDOW LIGHT LEFT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-20-410-007

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-20-860-003

(4) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

SUBTASK 25-21-20-710-001

(5) Do this task: Emergency Exit Hatch Heaters Operational Test, TASK 21-45-00-700-802.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Removal of the aft door doorway header panel

(2) Installation of the aft door doorway header panel

B. These tasks are applicable to the left and the right aft doors.

TASK 25-21-24-000-801

2. Aft Door Doorway Header Panel Removal

(Figure 401)

A. Location Zones

Zone	Area
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

B. Aft Door Doorway Header Panel Removal

SUBTASK 25-21-24-020-001

(1) Remove the seal depressor [8] and retainers [7].

(a) To remove them, pull back the seal depressor [8] and remove the screws [9].

SUBTASK 25-21-24-020-002

(2) Remove the plug buttons [5] that are along the top edge of the header panel [2].

SUBTASK 25-21-24-020-003

(3) Hold the header panel [2] up and remove the bolts [4] at the top edge of the header panel [2] and the screws [6] at the door opening.

SUBTASK 25-21-24-020-004


(4) Lower the header panel [2] until you can disconnect the ECS duct and the electrical connector.

SUBTASK 25-21-24-020-005


(5) Remove the header panel [2].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

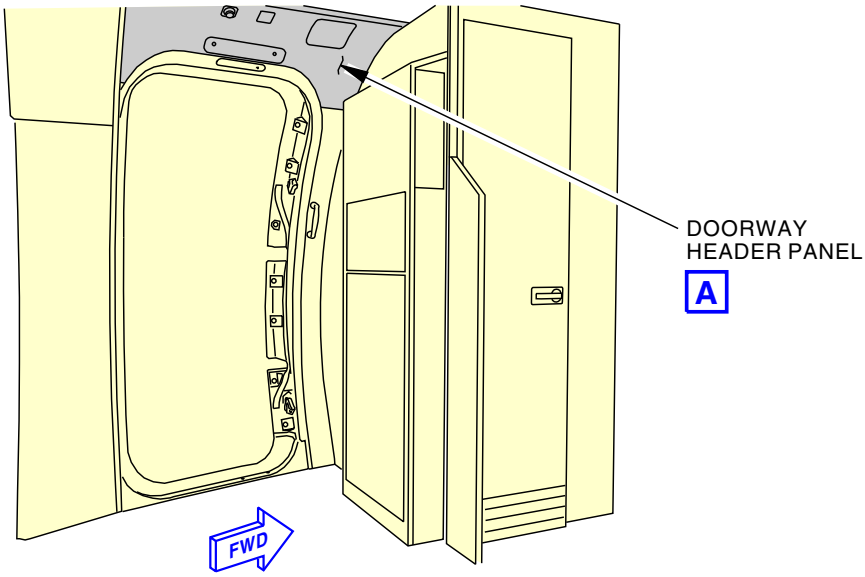

AFT ENTRY DOOR
(EXAMPLE)

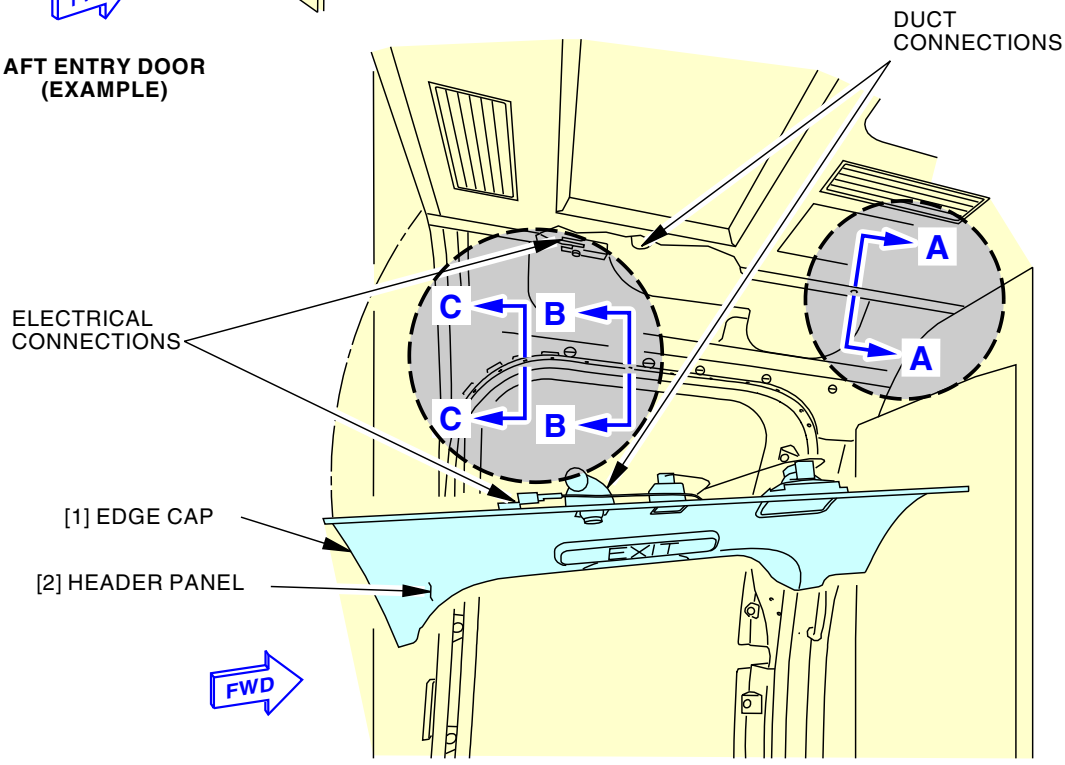


DOORWAY HEADER PANEL
(EXAMPLE)

A


2411855 S00061529270_V1

Aft Doorway Header Panel Installation
Figure 401/25-21-24-990-801 (Sheet 1 of 2)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

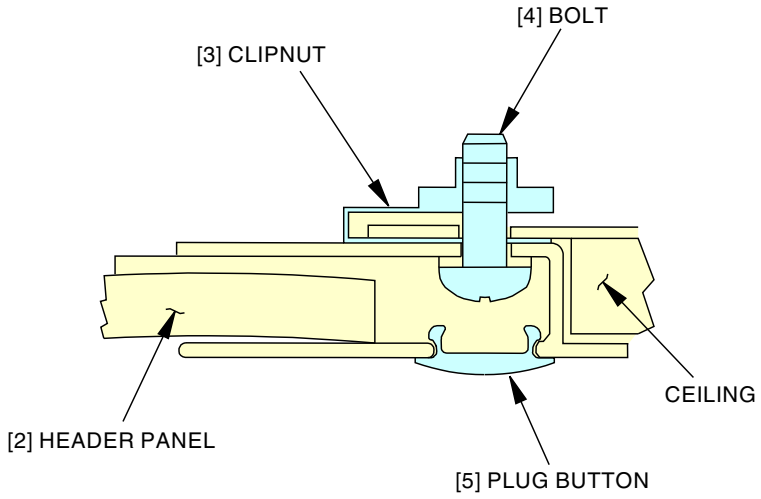

A-A

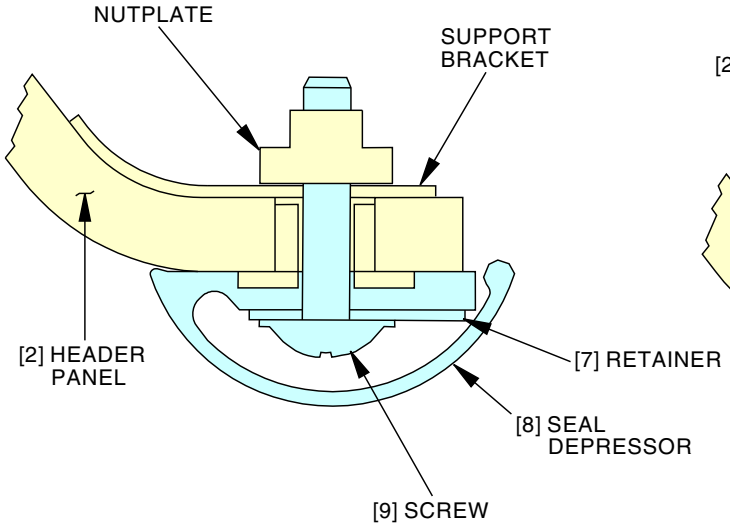

B-B

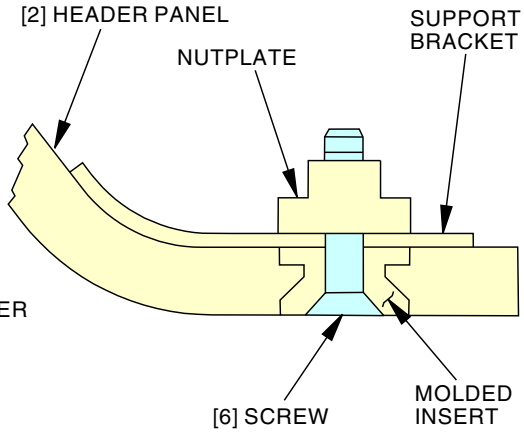

(SHOWN WITH SEAL DEPRESSOR REMOVED)

C-C

2411856 S00061529271_V1

Aft Doorway Header Panel Installation
Figure 401/25-21-24-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-24-400-801

3. Aft Door Doorway Header Panel Installation

(Figure 401)

A. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Header panel	25-21-24-09-150	PTF ALL
		25-21-24-25-140	PTF ALL

C. Location Zones

Zone	Area
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

D. Prepare for the Installation

SUBTASK 25-21-24-420-001

(1) To install a new header panel [2], do these steps:

(a) Apply adhesive, A00027 (clear grade 2), to the back edge of the header panel [2] where you will install the edge cap [1].

(b) Put the edge cap [1] on the header panel [2].

(c) After you install the header panel [2] (per the steps below) adjust the edge cap [1] so that it touches the adjacent wall.

SUBTASK 25-21-24-420-002

(2) To install the same header panel [2] that you removed, do these steps:

(a) Hold the header panel [2] in its position and make sure the edge cap [1] aligns with the adjacent wall satisfactorily.

(b) If there is a large clearance between the edge cap [1] and the wall, or if the screw holes in the panel will not align with the nut plates (because the edge cap touches the wall), then do these steps:

1) Remove the edge cap [1] from the header panel [2].

NOTE: It is held with adhesive, A00027.

2) Apply new adhesive, A00027 (clear grade 2), to the back edge of the header panel [2].

3) Put the edge cap [1] back on the header panel [2].

4) After you install the header panel [2] (per the steps below) adjust the edge cap [1] so that it touches the adjacent wall.

E. Aft Door Doorway Header Panel Installation

SUBTASK 25-21-24-420-003

(1) Hold the header panel [2] up and connect the electrical connector and the ECS duct.

SUBTASK 25-21-24-420-004

(2) Install the bolts [4] at top of the header panel [2], and the screws [6] around the door opening.

SUBTASK 25-21-24-420-005

(3) Install the seal depressor [8] and retainers [7] with the screws [9].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-24-420-006

(4) Install the plug buttons [5] along the top edge of the header panel [2].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AFT ENTRY AND AFT SERVICE DOORWAYS SIDEWALL LINING PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the aft entry and service doorways sidewall lining panel

(2) An installation of the aft entry and service doorways sidewall lining panel.

TASK 25-21-25-020-801

2. Aft Entry and Service Doorways Sidewall Lining Panel - Removal

(Figure 401)

A. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

B. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

C. Prepare for the Removal

SUBTASK 25-21-25-010-001

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-25-840-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	9	C00119	VAC OUTLET AFT

SUBTASK 25-21-25-840-002

(3) Remove the cover for the AFT electrical outlet.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-25-840-003

(4) If it is necessary to get access to the sidewall lining panel [2], remove the passenger equipment.

D. Aft Entry and Service Doorways Sidewall Lining Panel Removal

SUBTASK 25-21-25-020-007

(1) Remove the forward scuff plate [6].

(a) Remove the screws [9] and screw [10].

SUBTASK 25-21-25-020-008

(2) Remove the aft scuff plate [7].

(a) Remove the screws [9] and screw [10].

SUBTASK 25-21-25-020-009

(3) Remove the central scuff plate [8].

(a) Remove the screws [10].

SUBTASK 25-21-25-020-001

(4) Remove the rubber seal [3] that covers the seal retainers [1].

SUBTASK 25-21-25-020-002

(5) Remove the screws [4] and washers [5] that attach the seal retainers [1] to the reveal assembly.

SUBTASK 25-21-25-020-005

(6) If it is installed, remove the aid handle that is forward of the entry door.


SUBTASK 25-21-25-020-006

(7) Remove the sidewall lining panel [2] as follows:


(a) Remove the aft, top, and forward segments of the sidewall lining panel [2].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

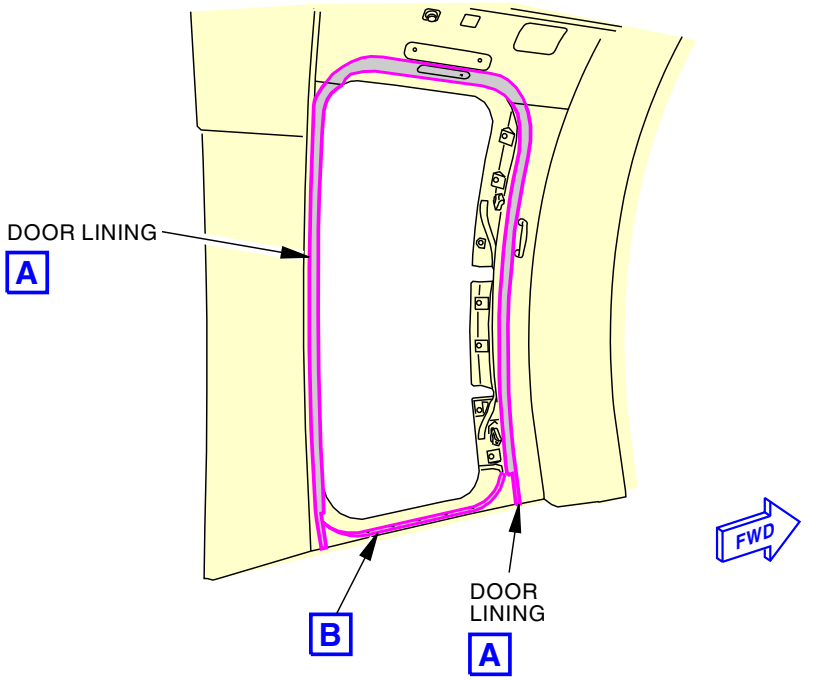

AFT ENTRY DOOR
(AFT SERVICE DOOR IS OPOSITE)

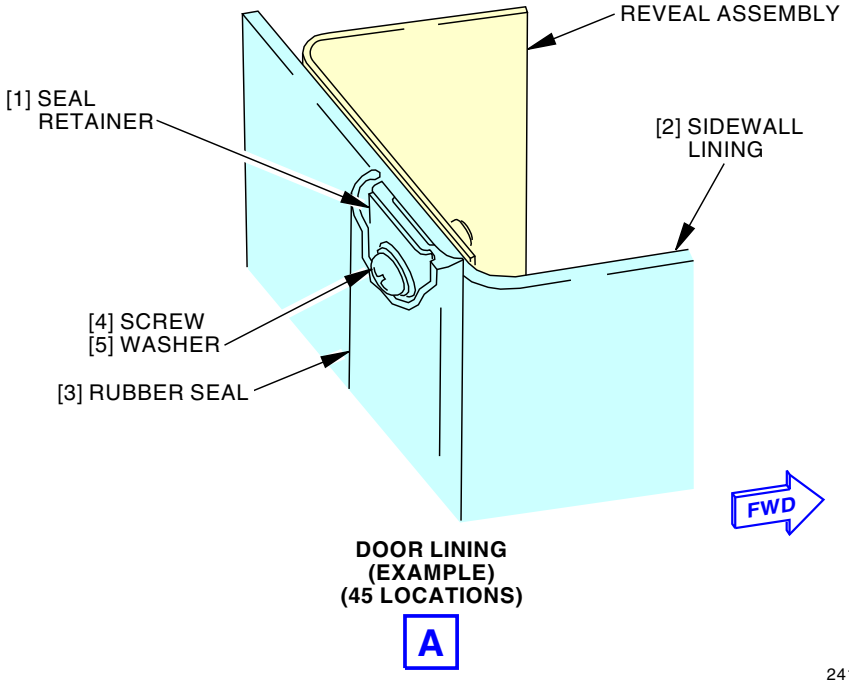


DOOR LINING
(EXAMPLE)
(45 LOCATIONS)

A

2411857 S00061529277_V3

Aft Entry and Service Door Sidewall Lining Panels Installation
Figure 401/25-21-25-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

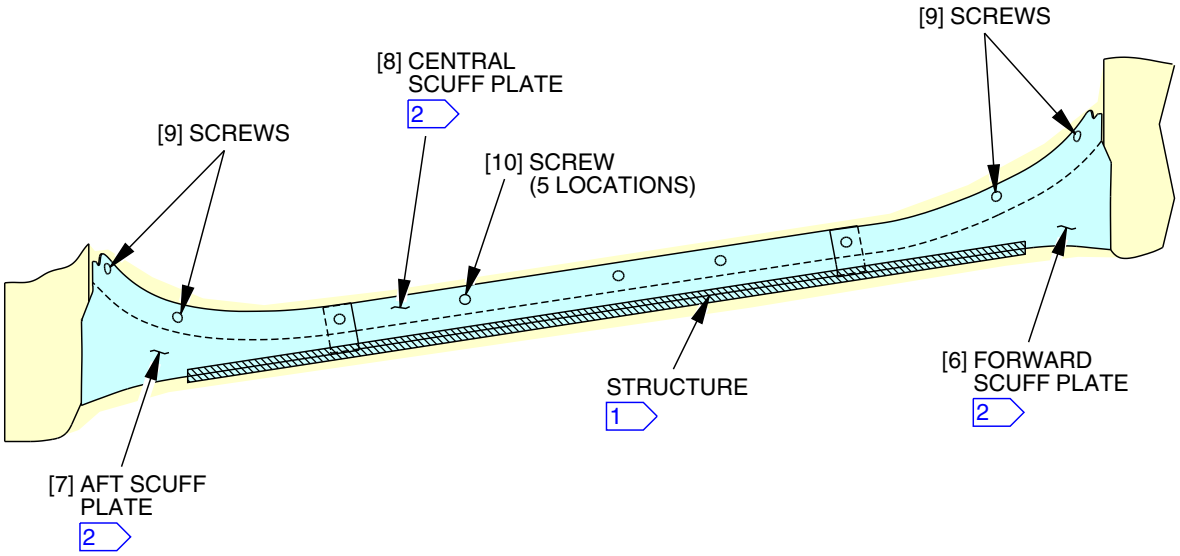

1 INSTALL WITH SEALANT RTV 108
2 INSTALL WITH SEALANT BMS5-95

3064746 S0000827015_V2

Aft Entry and Service Door Sidewall Lining Panels Installation
Figure 401/25-21-25-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-25-420-801

3. Aft Entry and Service Doorways Sidewall Lining Panel - Installation

(Figure 401)

A. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A50614	Adhesive - Sealant, Silicone Rubber, RTV108 (Translucent)	BAC5055 Type 2

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Sidewall lining panel	25-21-25-09-100	PTF ALL
		25-21-25-09-120	PTF ALL
		25-21-25-25-105	PTF ALL
		25-21-25-25-155	PTF ALL

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Aft Entry and Service Doorways Sidewall Lining Panel Installation

SUBTASK 25-21-25-420-001

(1) Move the sidewall lining panel [2] edges into the slot at the trim angle and onto the reveal assembly.

SUBTASK 25-21-25-420-013

(2) Install the sidewall lining panel [2] that is aft of the door.

(a) Place the panel on the reveal assembly.

(b) Attach the seal retainers [1] to the reveal assembly with screws [4] and washers [5].

SUBTASK 25-21-25-420-014

(3) Install the sidewall lining panel [2] that is forward of the door.

(a) Place the panel on the reveal assembly.

(b) Attach the seal retainers [1] to the reveal assembly with screws [4] and washers [5].

SUBTASK 25-21-25-420-015

(4) Install the sidewall lining panel [2] around the top to sidewall structure.

(a) Place the panel on the reveal assembly.

(b) Attach the seal retainers [1] to the reveal assembly with screws [4] and washers [5].

SUBTASK 25-21-25-420-002

(5) Install the new rubber seal [3] around the door opening.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-25-420-010

(6) Apply sealant, A00247, to the structural threshold side of the aft scuff plate [7], forward scuff plate [6], and central scuff plate [8].

SUBTASK 25-21-25-420-009

(7) Install the central scuff plate [8] and attach with screws [10].

SUBTASK 25-21-25-420-007

(8) Install the forward scuff plate [6] and attach with screws [9] and screw [10].

SUBTASK 25-21-25-420-008

(9) Install the aft scuff plate [7] and attach with screws [9] and screw [10].

SUBTASK 25-21-25-860-001

(10) Make sure that sealant, A00247, is dry.

SUBTASK 25-21-25-420-011

(11) Apply fillet seal with RTV108 adhesive, A50614, to the cavity common to the central scuff plate [8], aft scuff plate [7], forward scuff plate [6], and structure (View B, Figure 401).

SUBTASK 25-21-25-420-017

(12) Apply fillet seal with RTV108 adhesive, A50614, between the door lining and aft scuff plate [7], and between the door lining and forward scuff plate [6].

SUBTASK 25-21-25-420-005

(13) If it is applicable, install the aid handle that is forward of the entry door.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-25-420-006

(1) Install any equipment that was removed to gain access.

SUBTASK 25-21-25-840-004

(2) Install the cover for the aft electrical outlet.

SUBTASK 25-21-25-840-005

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	9	C00119	VAC OUTLET AFT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-25-410-001

(4) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FORWARD ENTRY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the forward entry door doorway header panel

(2) An installation of the forward entry door doorway header panel.

TASK 25-21-30-020-801

2. Forward Entry Door Doorway Header Panel Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the forward entry door doorway header panel.

B. References

Reference	Title
21-00-00-800-802	Remove Conditioned Air from the Airplane (P/B 201)
23-31-03-040-801	Attendant Speaker - Deactivation (P/B 201)
23-75-00-040-801	Video Surveillance System - Deactivation (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
52-11-00-860-803	Open the Door with the Interior Handle (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-2005	Personnel Barrier - Passenger and Galley Door Part #: C52012-59 Supplier: 81205 Part #: C52012-66 Supplier: 81205

D. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

E. Prepare for the Removal

SUBTASK 25-21-30-010-001

WARNING MAKE SURE THAT THE GIRT BAR IS NOT ENGAGED IN THE FLOOR-MOUNTED ESCAPE SLIDE BRACKETS. THE ESCAPE SYSTEM CAN DEPLOY WHEN YOU OPEN THE DOOR AND CAUSE INJURIES TO PERSONNEL OR DAMAGE TO EQUIPMENT.

CAUTION DO NOT OPERATE THE DOOR IN STABLE WINDS OF MORE THAN 40 KNOTS. DO NOT LET THE DOOR STAY OPEN IN WIND GUSTS THAT ARE MORE THAN 65 KNOTS. STRONG WINDS CAN CAUSE DAMAGE TO THE STRUCTURE OF THE AIRPLANE.

(1) Open the forward entry door.

(a) Do this task: Open the Door with the Interior Handle, TASK 52-11-00-860-803.

(b) Put the personnel barrier, SPL-2005, across the door opening.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-30-040-001

(2) Do this task: Video Surveillance System - Deactivation, TASK 23-75-00-040-801.

SUBTASK 25-21-30-040-002

(3) Do this task: Attendant Speaker - Deactivation, TASK 23-31-03-040-801.

SUBTASK 25-21-30-800-001

(4) Do this task: Remove Conditioned Air from the Airplane, TASK 21-00-00-800-802.

SUBTASK 25-21-30-000-001

(5) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 25-21-30-860-001

(6) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 25-21-30-860-002

(7) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	9	C00073	PASSENGER CABIN CREW CALL
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

F. Forward Entry Door Doorway Header Panel Removal

SUBTASK 25-21-30-020-001

(1) Remove the seal depressor [8] and retainers [7] form the header panel [2] (View B-B, Figure 401).

(a) Remove the seal depressor [8] from the retainers [7] to get access to the screws [9].

(b) Remove the screws [9] form the top of the doorway and doorway corners.

(c) Remove the retainers [7].

SUBTASK 25-21-30-020-002

(2) Remove the plug buttons [5] installed on the top edge of the header panel [2] (View A-A, Figure 401).

SUBTASK 25-21-30-020-003

(3) Hold the header panel [2] in position.

SUBTASK 25-21-30-020-006

(4) Remove the bolts [4] and washers [10] at the top edge of the header panel [2] (View A-A, Figure 401).

SUBTASK 25-21-30-020-007

(5) Remove the screws [6] at the door opening (View C-C, Figure 401).


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-30-020-005

(6) Remove the header panel [2].


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

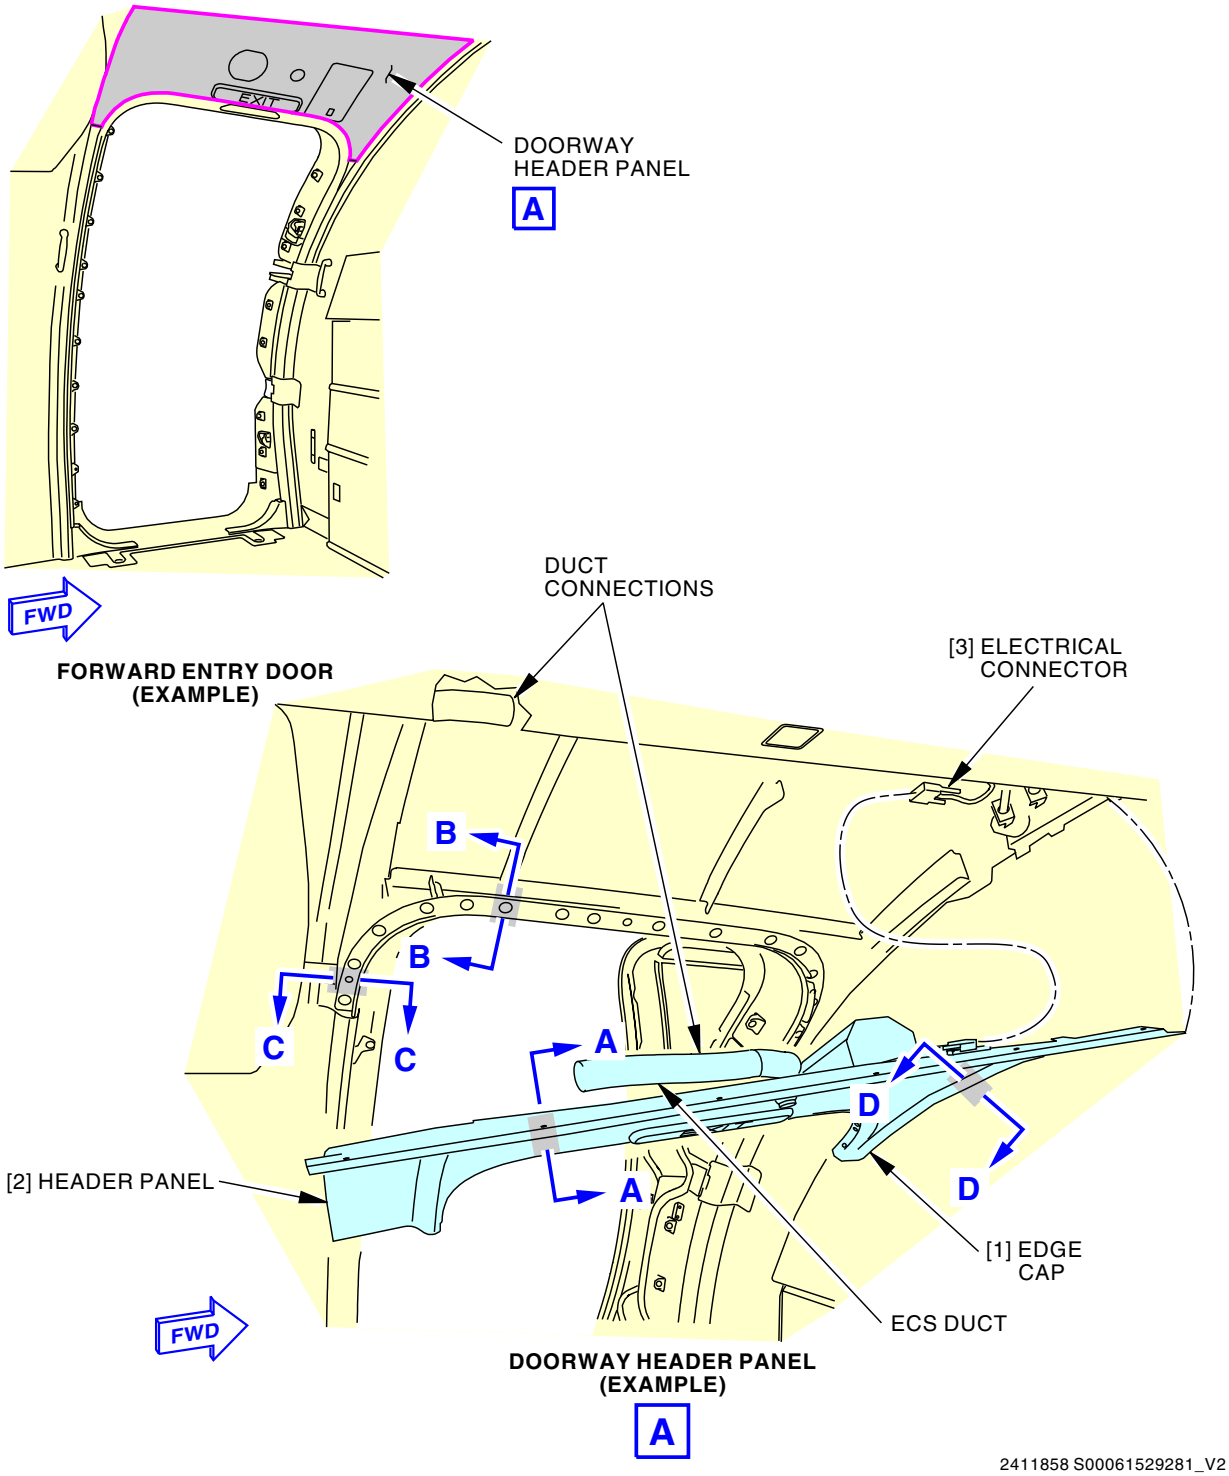

Forward Entry Doorway Header Panel Installation
Figure 401/25-21-30-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

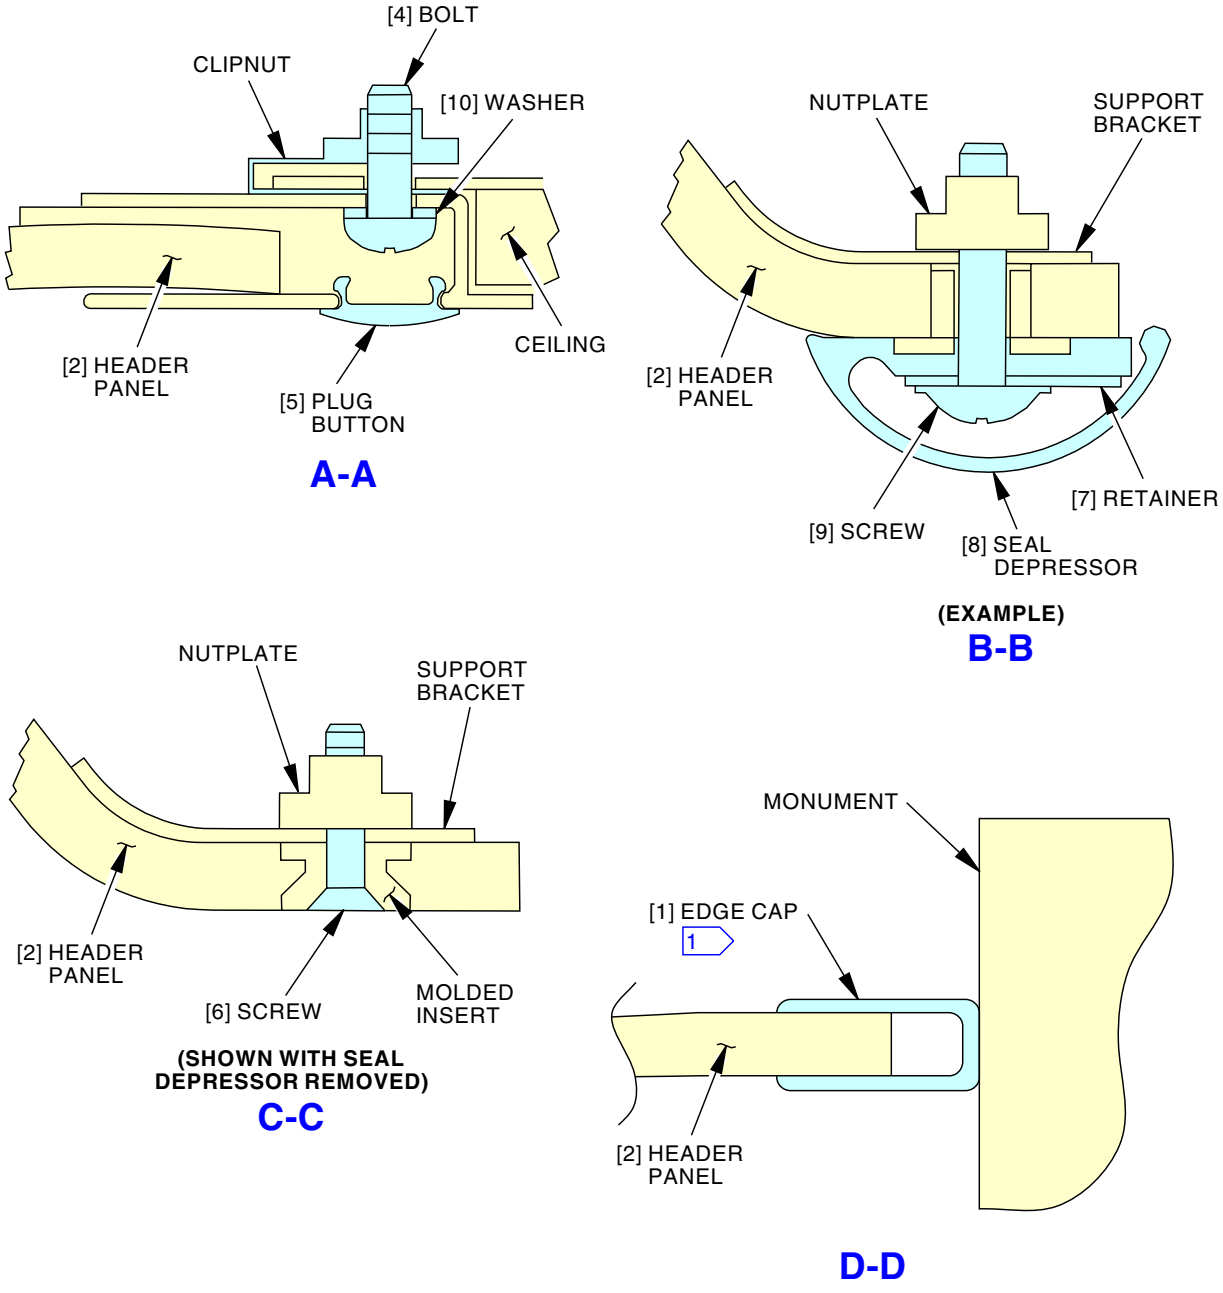

1 ADJUST THE EDGE CAP ON THE HEADER PANEL MOVE THE HEADER PANEL UP AND INBOARD AGAINST THE CEILING ATTACH BRACKET AND FORWARD AGAINST THE MONUMENT

2984287 S0000761976_V1

Forward Entry Doorway Header Panel Installation
Figure 401/25-21-30-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-30-420-801

3. Forward Entry Door Doorway Header Panel Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the forward entry door doorway header panel.

B. References

Reference	Title
21-00-00-800-801	Supply Conditioned Air to the Airplane (P/B 201)
23-31-03-440-801	Attendant Speaker - Activation (P/B 201)
23-75-00-440-801	Video Surveillance System - Activation (P/B 201)
35-22-00-210-801	Oxygen Generator Visual Inspection (P/B 501)
52-11-00-860-804	Close the Door with the Interior Handle (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-2005	Personnel Barrier - Passenger and Galley Door Part #: C52012-59 Supplier: 81205 Part #: C52012-66 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
G50019	Tape - Flexible Foam Sound Damping And Sealing Tape	BMS8-283 Type I

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Header panel	25-21-30-01-050	PTF ALL
		25-21-30-01-150	PTF ALL

F. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

G. Prepare for the Installation

SUBTASK 25-21-30-210-001

(1) Check that the oxygen generator is activated, do this task: Oxygen Generator Visual Inspection, TASK 35-22-00-210-801.

SUBTASK 25-21-30-420-001

(2) Prepare a new header panel [2], do these steps:

(a) Apply adhesive, A00027, to the back edge of the header panel [2] where you will install the edge cap [1].

(b) Put the edge cap [1] on the back of the header panel [2].

(c) After you install the panel (per the steps below) adjust the edge cap [1] so that it touches the adjacent wall.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-30-420-002

(3) Prepare the same header panel [2] that you removed, do these steps:

(a) Align the header panel [2] in the correct position.

1) Align the edge cap [1] on the header panel [2].

2) Move the header panel [2] up and inboard against the ceiling attach bracket and forward against the monument.

3) Make sure that the holes of the screws [6] on the header panel [2] align with the nutplates.

4) Make sure that the clearance is not more than 0.032 in. (0.813 mm) between the edge cap [1] and monument.

5) If it is necessary, apply tape, G50019, to the area of the joint between the overlapping panels to align the mating edge cap [1].

NOTE: The total bonding area of the tape, G50019, must not exceed 9 in^2 (58 cm^2).

(b) If the clearance is not correct, do these steps:

1) Remove the edge cap [1] from the header panel [2].

2) If it is necessary, remove adhesive, A00027.

3) If it is necessary, cut the edge cap [1] to get the correct clearance.

4) Apply adhesive, A00027, to the back edge of the header panel [2].

5) Put the edge cap [1] on the back edge of the header panel [2].

6) Make sure that the clearance is not more than 0.032 in. (0.813 mm) between the edge cap [1] and monument.

H. Forward Entry Door Doorway Header Panel Installation

SUBTASK 25-21-30-420-003

(1) Align the header panel [2] in the correct position.

SUBTASK 25-21-30-420-007

(2) Connect the electical connector [3].

(a) Remove the protective caps from the electrical connections.

SUBTASK 25-21-30-420-009

(3) Connect the Environmental Control System (ECS) duct to the gasper.

(a) Remove the protective caps from the duct connections.

SUBTASK 25-21-30-420-004

(4) Install the washers [10] and bolts [4] to attach the top of the header panel [2] to the structure (View A-A, Figure 401).

SUBTASK 25-21-30-420-010

(5) Install the screws [6] to attach the header panel [2] to the door opening (View C-C, Figure 401).

SUBTASK 25-21-30-420-005

(6) Install the screws [9] to attach the retainers [7] to the header panel [2] (View B-B, Figure 401).

SUBTASK 25-21-30-420-011

(7) Install the seal depressor [8].

SUBTASK 25-21-30-420-006

(8) Install the plug buttons [5] along the top edge of the header panel [2] (View A-A, Figure 401).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-30-410-001

(1) Close the forward entry door.

(a) Remove the personnel barrier, SPL-2005, from the door opening.

(b) Do this task: Close the Door with the Interior Handle, TASK 52-11-00-860-804.

SUBTASK 25-21-30-860-003

(2) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	9	C00073	PASSENGER CABIN CREW CALL
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

SUBTASK 25-21-30-860-004

(3) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 25-21-30-800-002

(4) Do this task: Supply Conditioned Air to the Airplane, TASK 21-00-00-800-801.

SUBTASK 25-21-30-440-001

(5) Do this task: Attendant Speaker - Activation, TASK 23-31-03-440-801.

SUBTASK 25-21-30-440-002

(6) Do this task: Video Surveillance System - Activation, TASK 23-75-00-440-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FORWARD ENTRY DOORWAY SIDEWALL LINING PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Removal of the Forward Entry Doorway Sidewall Lining Panel

(2) Installation of the Forward Entry Doorway Sidewall Lining Panel

TASK 25-21-31-000-801

2. Forward Entry Doorway Sidewall Lining Panel - Removal

(Figure 401)

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Forward Entry Doorway Sidewall Lining Panel Removal

SUBTASK 25-21-31-020-001

(1) Remove the passenger equipment, if it is necessary, to get access to the sidewall lining panel [1].

SUBTASK 25-21-31-020-008

(2) Remove the upper hinge cover panel [10] and lower hinge cover panel [11].

(a) Remove the screws [9] and nuts [12].

SUBTASK 25-21-31-020-009

(3) Remove the forward scuff plate [5].

(a) Remove the screws [6] and screw [13].

SUBTASK 25-21-31-020-010

(4) Remove the aft scuff plate [7].

(a) Remove the screws [8] and screw [13].

SUBTASK 25-21-31-020-002

(5) If installed, remove the aid handle that is forward of the door.

SUBTASK 25-21-31-020-003

(6) Remove the rubber seal [3] from the retainer [4] around the door opening.

SUBTASK 25-21-31-020-004

(7) Remove the screws [2] that attach the trim angle.

(a) Remove the seal retainer [4].

SUBTASK 25-21-31-020-005

(8) Remove the fasteners that attach the lining panel [1] to the sidewall structure.


SUBTASK 25-21-31-020-007

(9) Remove the lining panel [1] as follows:

(a) Remove the aft, top, forward top, forward middle, and forward bottom segments of the lining panel [1].


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

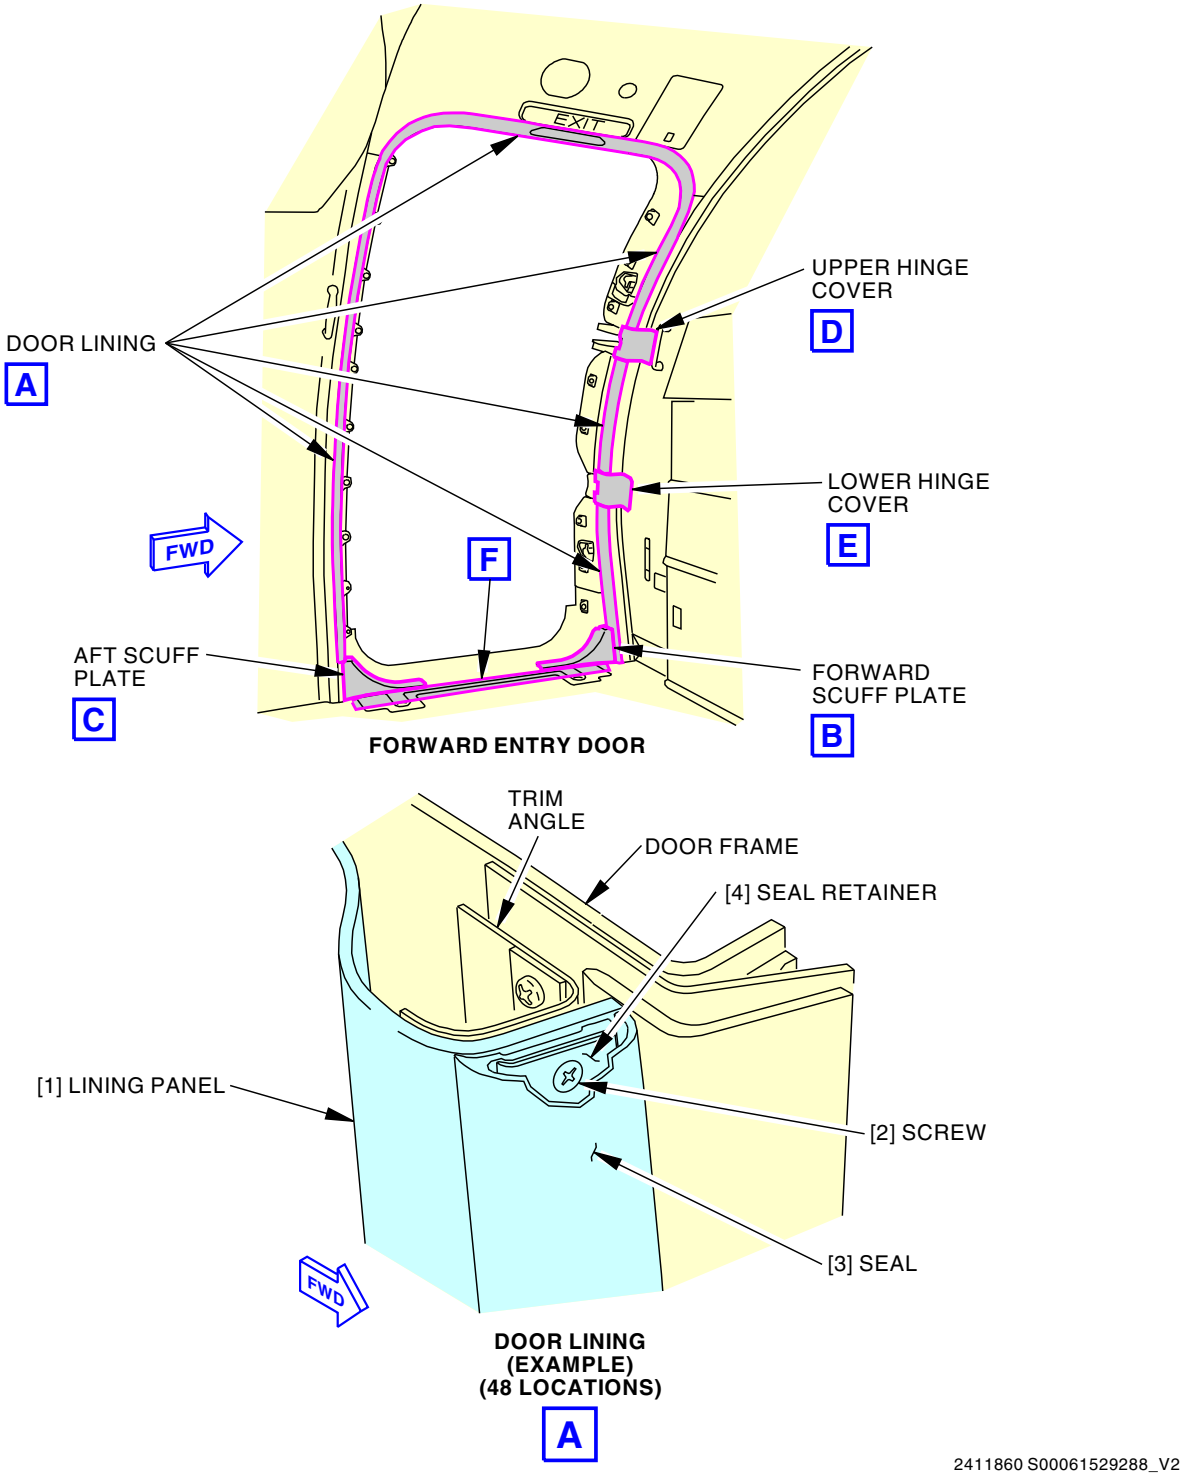


Forward Entry Doorway Sidewall Lining Panels Installation
Figure 401/25-21-31-990-802 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

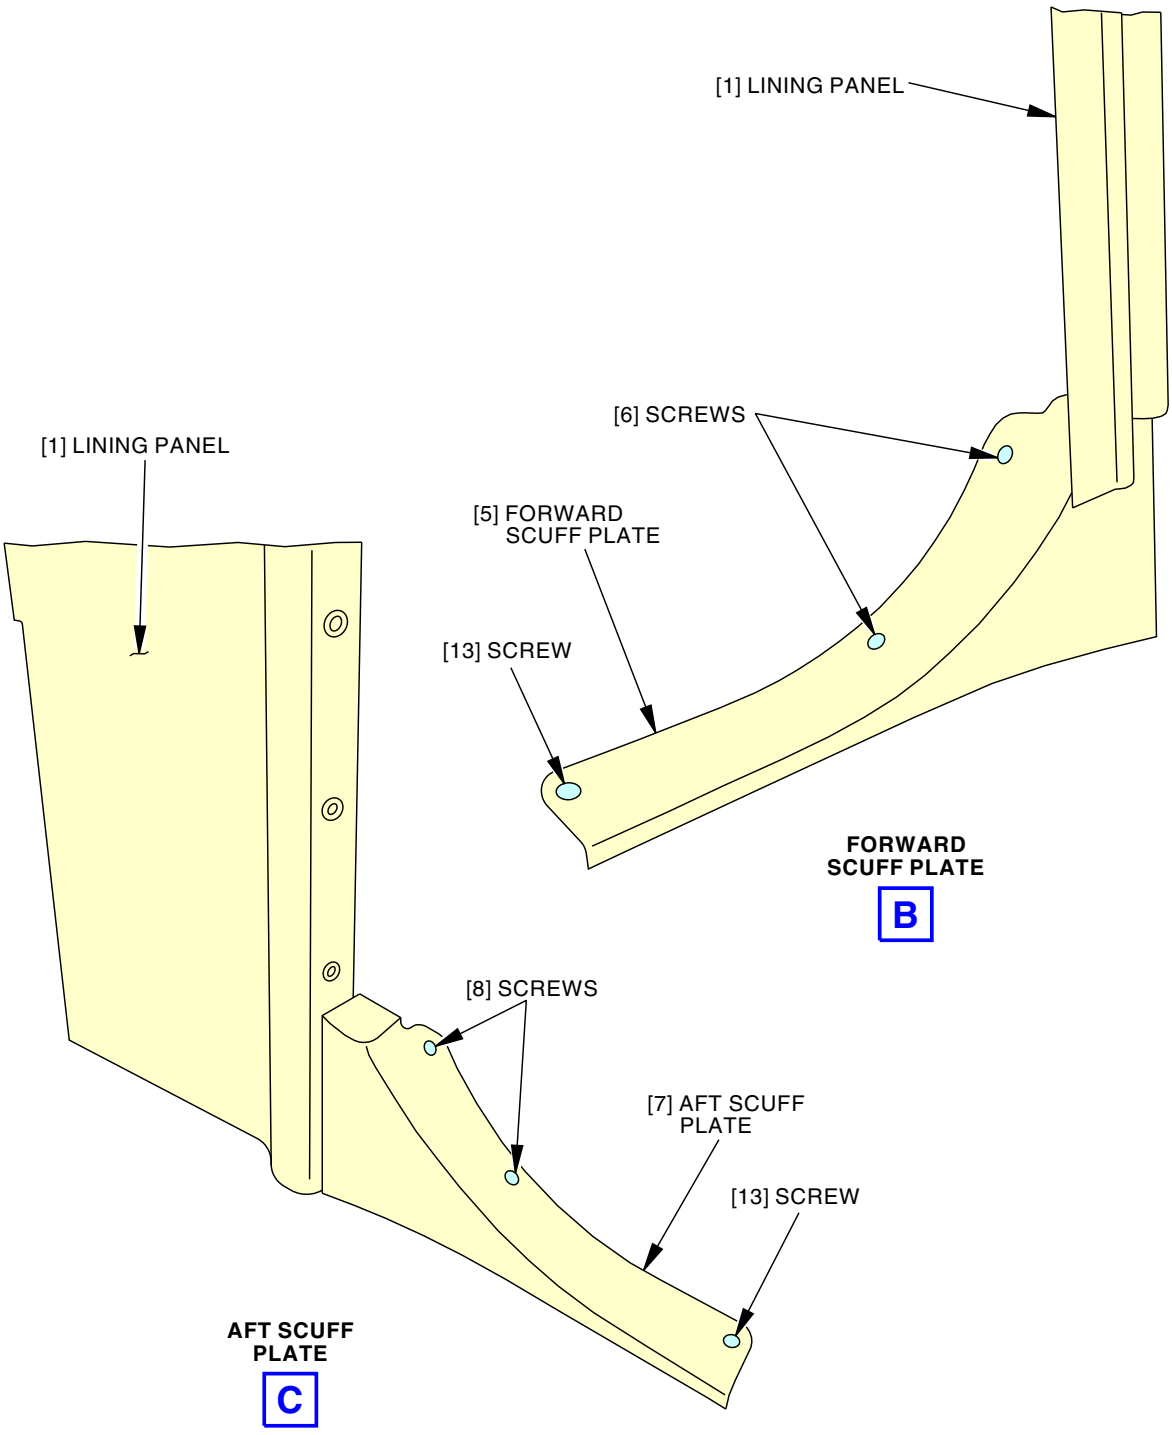


Forward Entry Doorway Sidewall Lining Panels Installation
Figure 401/25-21-31-990-802 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

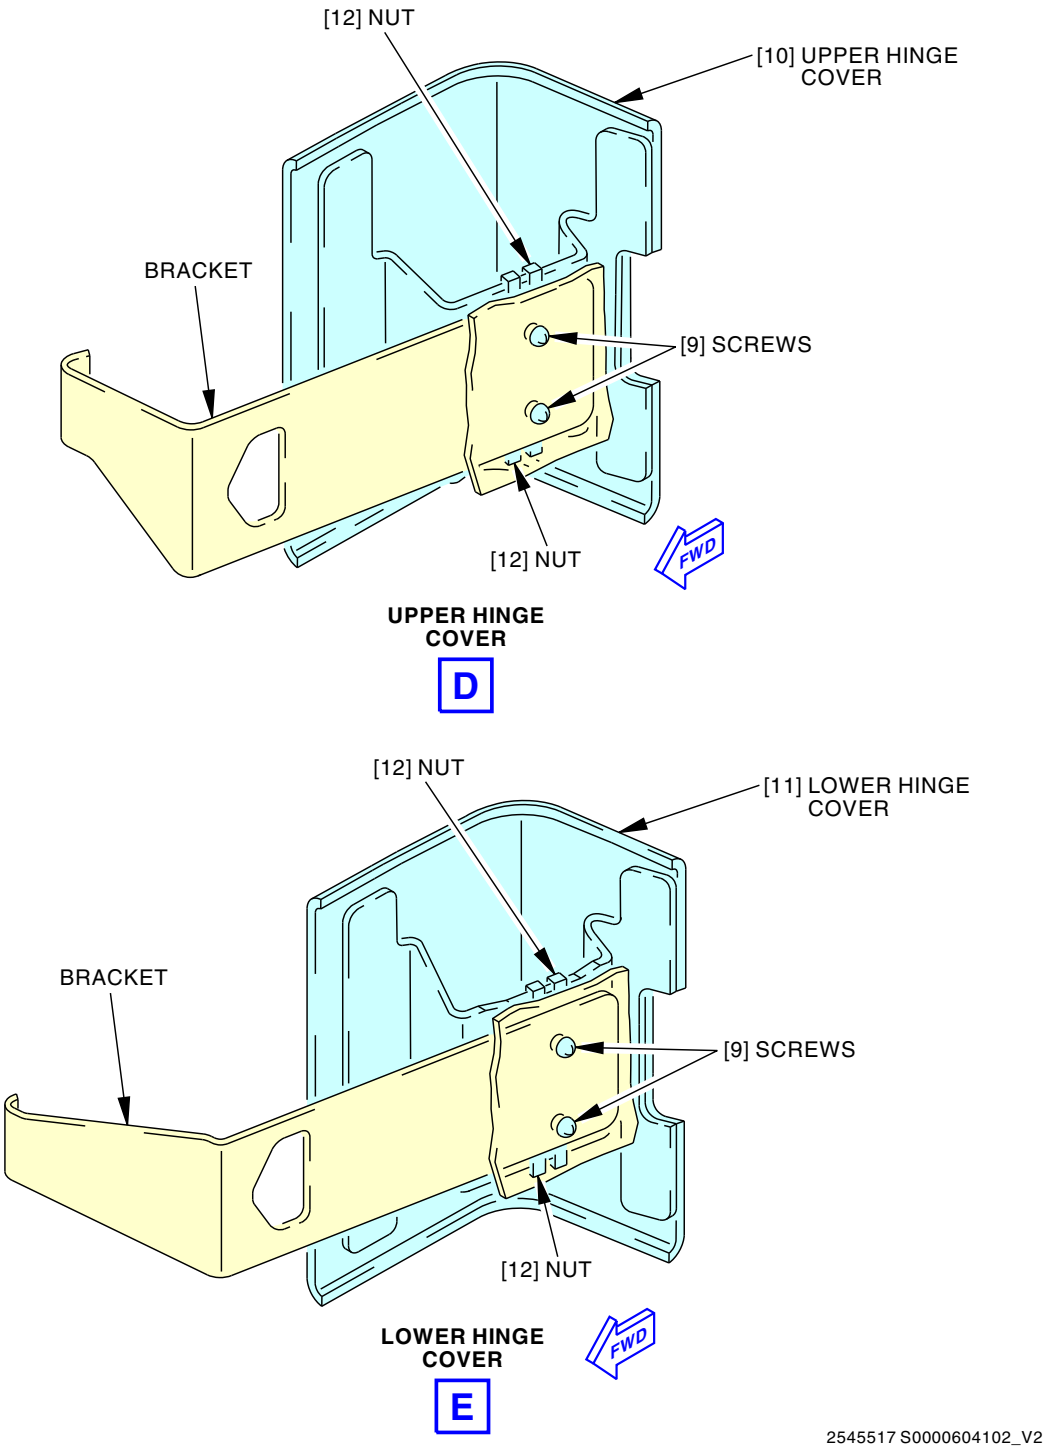

Forward Entry Doorway Sidewall Lining Panels Installation
Figure 401/25-21-31-990-802 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

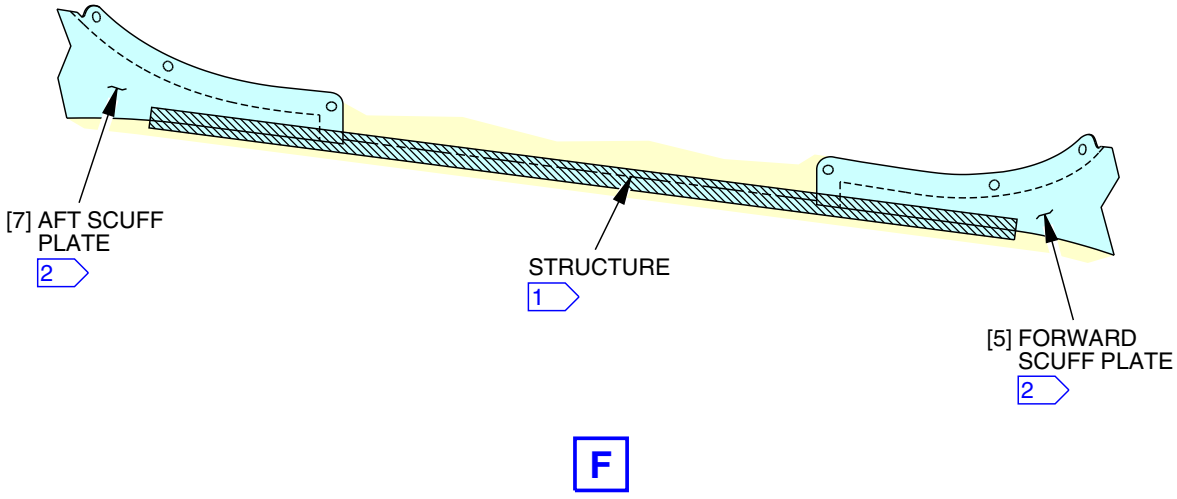

1 INSTALL WITH SEALANT RTV 108
2 INSTALL WITH SEALANT BMS5-95

3064748 S0000826990_V2

Forward Entry Doorway Sidewall Lining Panels Installation
Figure 401/25-21-31-990-802 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-31-400-801

3. Forward Entry Doorway Sidewall Lining Panel - Installation

(Figure 401)

A. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A50614	Adhesive - Sealant, Silicone Rubber, RTV108 (Translucent)	BAC5055 Type 2

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Lining panel	25-21-31-01-070	PTF ALL
		25-21-31-01-085	PTF ALL
		25-21-31-01-090	PTF ALL
		25-21-31-01-105	PTF ALL
		25-21-31-01-110	PTF ALL
		25-21-31-01-125	PTF ALL
		25-21-31-01-130	PTF ALL
		25-21-31-01-145	PTF ALL
3	Seal	52-09-16-01-030	PTF ALL
5	Forward scuff plate	25-21-31-01-055	PTF ALL
7	Aft scuff plate	25-21-31-01-050	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Forward Entry Doorway Sidewall Lining Panel Installation

SUBTASK 25-21-31-420-001

(1) Place the aft lining panel [1] on the trim angle.

(a) Install screws [2] to attach the seal retainer [4] to the trim angle.

SUBTASK 25-21-31-420-002

(2) Place the top lining panel [1] on the trim angle.

(a) Install screws [2] to attach the seal retainer [4] to the trim angle.

SUBTASK 25-21-31-420-009

(3) Place the forward top lining panel [1] on the trim angle.

(a) Install screws [2] to attach the retainer [4] to the trim angle.

SUBTASK 25-21-31-420-003

(4) Place the forward middle lining panel [1] on the trim angle.

(a) Install screws [2] to attach the retainer [4] to the trim angle.

SUBTASK 25-21-31-420-017

(5) Place the forward bottom lining panel [1] on the trim angle.

(a) Install screws [2] to attach the retainer [4] to the trim angle.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-31-420-004

(6) Install the rubber new seal [3].

SUBTASK 25-21-31-420-012

(7) Apply sealant, A00247, to the structural threshold side of the aft scuff plate [7] and forward scuff plate [5].

SUBTASK 25-21-31-420-005

(8) Install the forward scuff plate [5] and attach screws [6] and screw [13].

SUBTASK 25-21-31-420-011

(9) Install the aft scuff plate [7] and attach screws [8] and screw [13].

SUBTASK 25-21-31-860-001

(10) Make sure that sealant, A00247, is dry.

SUBTASK 25-21-31-420-013

(11) Apply fillet seal with RTV108 adhesive, A50614, to the cavity common to the aft scuff plate [7], forward scuff plate [5], and structure (View F, Figure 401).

SUBTASK 25-21-31-420-016

(12) Apply fillet seal with RTV108 adhesive, A50614, between the lining panel [1] and aft scuff plate [7], and between the lining panel [1] and forward scuff plate [5].

SUBTASK 25-21-31-420-006

(13) Install the aid handle, if applicable.

SUBTASK 25-21-31-420-007

(14) Install the upper hinge cover panel [10] with screws [9] and nuts [12].

SUBTASK 25-21-31-420-010

(15) Install the lower hinge cover panel [11] with screws [9] and nuts [12].

SUBTASK 25-21-31-420-008

(16) Install all the passenger equipment which you removed for access to doorway lining panels [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FORWARD GALLEY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the forward galley door doorway header panel

(2) An installation of the forward galley door doorway header panel.

TASK 25-21-34-000-801

2. Forward Galley Door Doorway Header Panel Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the forward galley door doorway header panel.

B. References

Reference	Title
21-00-00-800-802	Remove Conditioned Air from the Airplane (P/B 201)
23-31-03-040-801	Attendant Speaker - Deactivation (P/B 201)
23-75-00-040-801	Video Surveillance System - Deactivation (P/B 201)
52-11-00-860-803	Open the Door with the Interior Handle (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-2005	Personnel Barrier - Passenger and Galley Door Part #: C52012-59 Supplier: 81205 Part #: C52012-66 Supplier: 81205

D. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

E. Prepare for the Removal

SUBTASK 25-21-34-010-001

WARNING MAKE SURE THE GIRT BAR IS NOT ENGAGED IN THE FLOOR-MOUNTED ESCAPE SLIDE BRACKETS. IF THE GIRT BAR IS ENGAGED IN THE BRACKETS, THE ESCAPE SYSTEM CAN DEPLOY WHEN YOU OPEN THE DOOR. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

CAUTION DO NOT OPERATE THE DOOR IN STABLE WINDS OF MORE THAN 40 KNOTS. DO NOT LET THE DOOR STAY OPEN IN WIND GUSTS THAT ARE MORE THAN 65 KNOTS. STRONG WINDS CAN CAUSE DAMAGE TO THE STRUCTURE OF THE AIRPLANE.

(1) Open the forward galley door.

(a) Do this task: Open the Door with the Interior Handle, TASK 52-11-00-860-803.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Put the personnel barrier, SPL-2005, across the door opening.

SUBTASK 25-21-34-040-001

(2) Do this task: Video Surveillance System - Deactivation, TASK 23-75-00-040-801.

SUBTASK 25-21-34-040-002

(3) Do this task: Attendant Speaker - Deactivation, TASK 23-31-03-040-801.

SUBTASK 25-21-34-800-001

(4) Do this task: Remove Conditioned Air from the Airplane, TASK 21-00-00-800-802.

SUBTASK 25-21-34-860-001

(5) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 25-21-34-860-002

(6) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	9	C00073	PASSENGER CABIN CREW CALL
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

F. Forward Galley Door Doorway Header Panel Removal

SUBTASK 25-21-34-020-001

(1) Remove the seal depressor [8] and seal retainers [7] from the header panel [1] (View B-B, Figure 401).

(a) Remove the seal depressor [8] from the seal retainers [7] to get access to the screws [9].

(b) Remove the screws [9] from the top of the doorway and the doorway corners.

(c) Remove the seal retainers [7].

SUBTASK 25-21-34-020-002

(2) Remove the plug buttons [5] installed on the top edge of the header panel [1] (View A-A, Figure 401).

SUBTASK 25-21-34-020-003

(3) Hold the header panel [1] in position.

SUBTASK 25-21-34-020-004

(4) Remove the bolts [4] and washers [10] at the top edge of the header panel [1] (View A-A, Figure 401).

SUBTASK 25-21-34-020-006

(5) Remove the screws [6] at the door opening (View C-C, Figure 401).


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-34-020-008

(6) Remove the header panel [1].


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

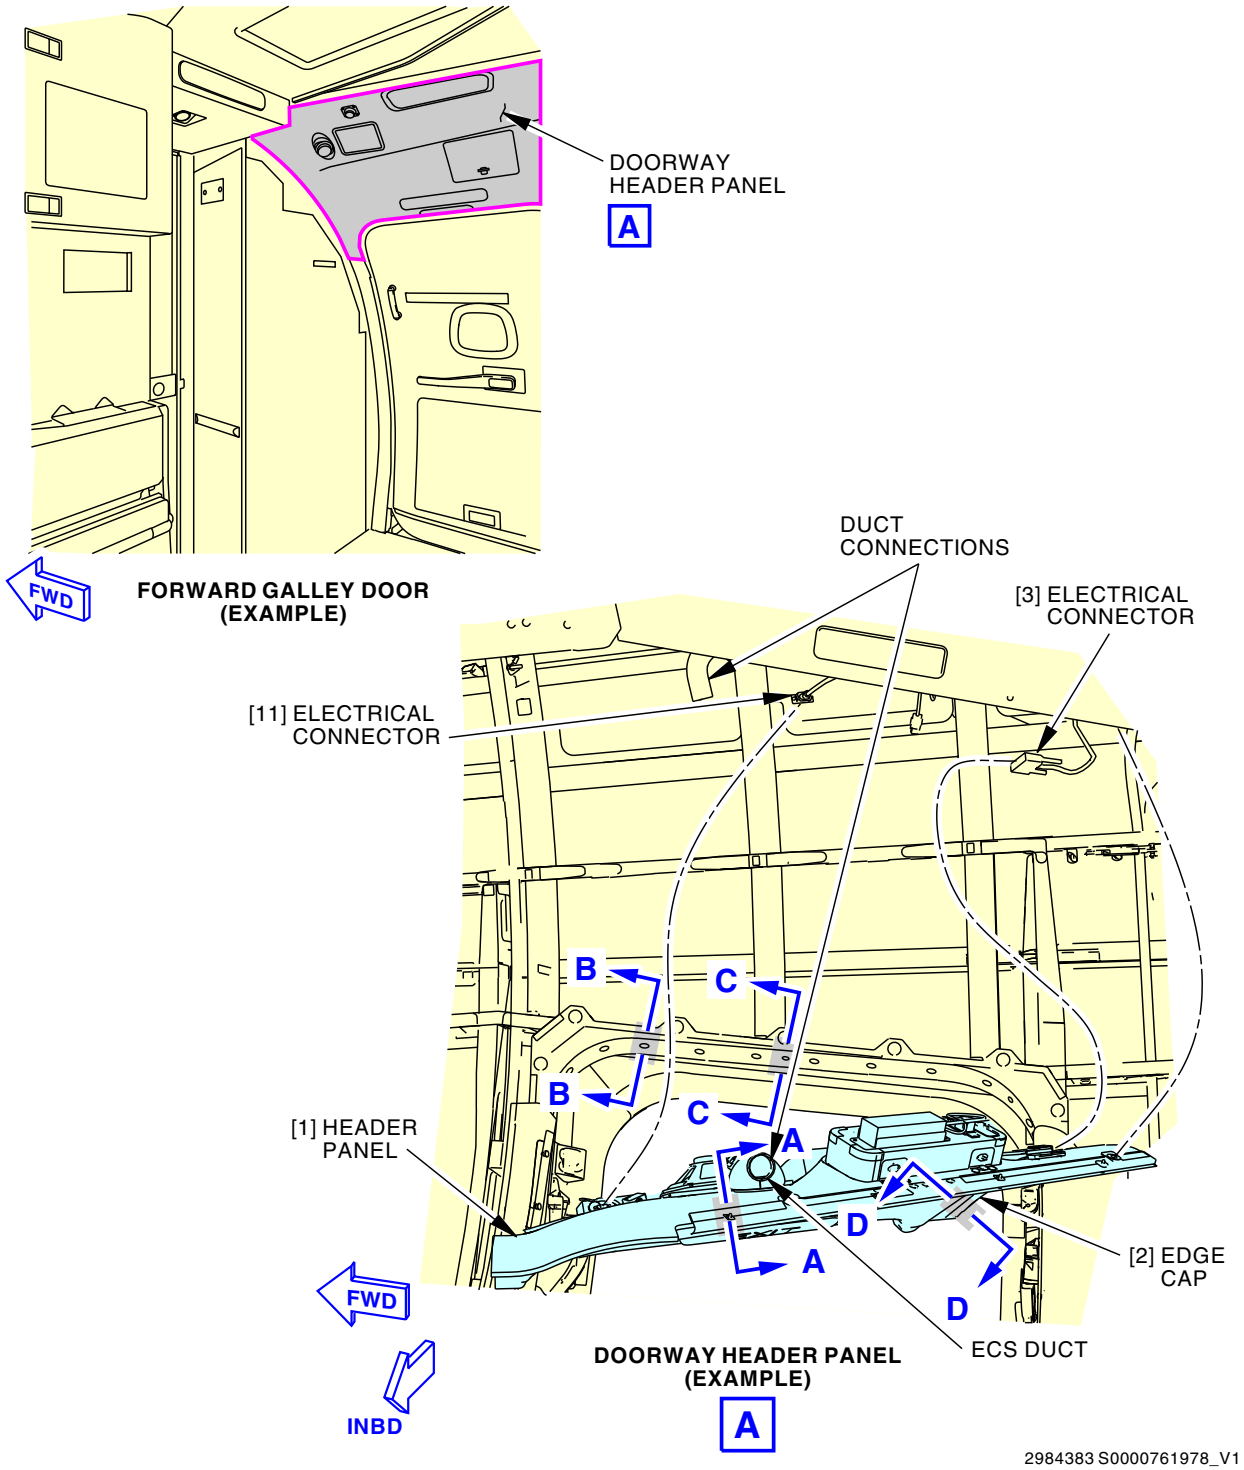


Forward Galley Doorway Header Panel Installation
Figure 401/25-21-34-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

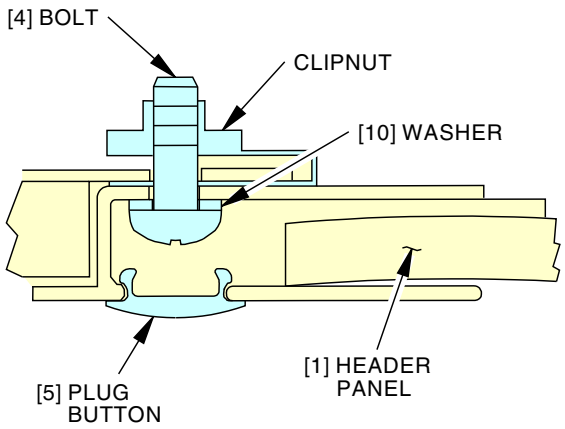


A-A

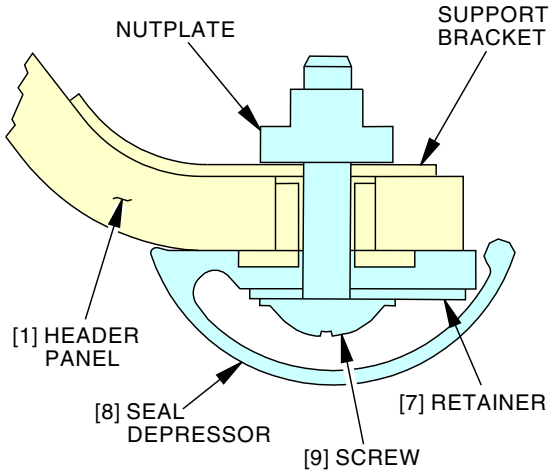


(EXAMPLE)

B-B

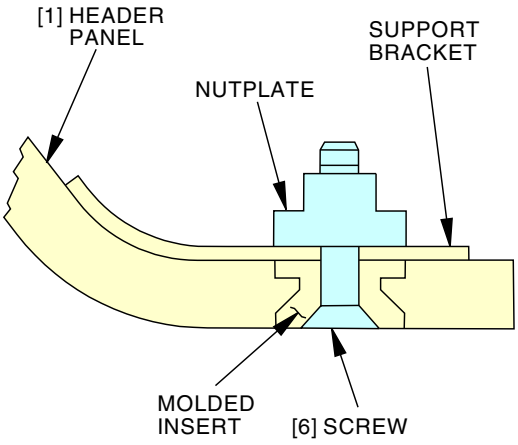

(SHOWN WITH SEAL DEPRESSOR REMOVED)

C-C

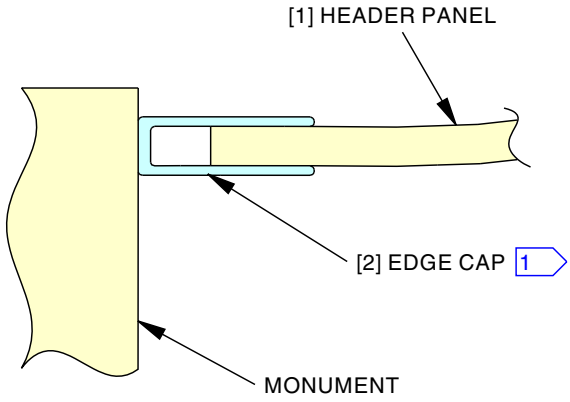

D-D

1 ADJUST THE EDGE CAP ON THE HEADER PANEL MOVE THE HEADER PANEL UP AND INBOARD AGAINST THE CEILING ATTACH BRACKET AND FORWARD AGAINST THE MONUMENT

2411862 S00061529293_V3

Forward Galley Doorway Header Panel Installation
Figure 401/25-21-34-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-34-400-801

3. Forward Galley Door Doorway Header Panel Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the forward galley door doorway header panel.

B. References

Reference	Title
21-00-00-800-801	Supply Conditioned Air to the Airplane (P/B 201)
23-31-03-440-801	Attendant Speaker - Activation (P/B 201)
23-75-00-440-801	Video Surveillance System - Activation (P/B 201)
35-22-00-210-801	Oxygen Generator Visual Inspection (P/B 501)
52-11-00-860-804	Close the Door with the Interior Handle (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-2005	Personnel Barrier - Passenger and Galley Door Part #: C52012-59 Supplier: 81205 Part #: C52012-66 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
G50019	Tape - Flexible Foam Sound Damping And Sealing Tape	BMS8-283 Type I

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Header panel	25-21-34-95A-050	PTF ALL
5	Plug button	25-21-34-95A-030	PTF ALL
8	Seal depressor	52-09-16-05-030	PTF ALL

F. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

G. Prepare for the Installation

SUBTASK 25-21-34-210-001

(1) Check that the oxygen generator is activated, do this task: Oxygen Generator Visual Inspection, TASK 35-22-00-210-801.

SUBTASK 25-21-34-840-001

(2) Prepare the new header panel [1], do these steps:

(a) Apply adhesive, A00027, to the back edge of the header panel [1] where you will install the edge cap [2].

(b) Put the edge cap [2] on the back edge of the header panel [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-34-840-002

(3) Prepare the same header panel [1] that you removed, do these steps:

(a) Align the header panel [1] in the correct position.

1) Align the edge cap [2] on the header panel [1] assembly.

2) Move the header panel [1] up and inboard against the ceiling attach bracket and forward against the monument.

3) Make sure that the screw [6] holes on the header panel [1] align with the nutplates.

4) Make sure that the clearance is not more than 0.032 in. (0.813 mm) between the edge cap [2] and monument.

5) If it is necessary, apply tape, G50019, to the area of the joint between the overlapping panels to align the mating edge caps [2].

NOTE: The total bonding area of the tape, G50019, must not exceed 9 in^2 (58 cm^2).

(b) If the clearance is not correct, do these steps:

1) Remove the edge cap [2] from the header panel [1].

2) If it is necessary, remove adhesive, A00027.

3) If it is necessary, cut the edge cap [2] to get the correct clearance.

4) Apply adhesive, A00027, to the back edge of the header panel [1].

5) Put the edge cap [2] on the back edge of the header panel [1].

6) Make sure that the clearance is not more than 0.032 in. (0.813 mm) between the edge cap [2] and monument.

H. Forward Galley Door Doorway Header Panel Installation

SUBTASK 25-21-34-420-003

(1) Align the header panel [1] in the correct position.

SUBTASK 25-21-34-420-007

(2) Connect the electrical connector [3].

(a) Remove the protective caps from the electrical connections.

SUBTASK 25-21-34-420-011

(3) Connect the electrical connector [11].

(a) Remove the protective caps from the electrical connections.

SUBTASK 25-21-34-420-008

(4) Connect the Environmental Control System (ECS) duct to the gasper.

(a) Remove the protective caps from the duct connections.

SUBTASK 25-21-34-420-004

(5) Install the washers [10] and bolts [4] to attach the top of the header panel [1] to the structure (View A-A, Figure 401).

SUBTASK 25-21-34-420-009

(6) Install the screws [6] to attach the header panel [1] to the door opening (View C-C, Figure 401).

SUBTASK 25-21-34-420-005

(7) Install the screws [9] to attach the seal retainers [7] to the header panel [1] (View B-B, Figure 401).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-34-420-006

(8) Install the seal depressor [8].

SUBTASK 25-21-34-420-010

(9) Install the five plug buttons [5] on the top edge of the header panel [1] (View A-A, Figure 401).

I. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-34-410-001

(1) Close the entry door.

(a) Remove the personnel barrier, SPL-2005, from the door opening.

(b) Do this task: Close the Door with the Interior Handle, TASK 52-11-00-860-804.

SUBTASK 25-21-34-860-003

(2) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	9	C00073	PASSENGER CABIN CREW CALL
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

SUBTASK 25-21-34-860-004

(3) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

SUBTASK 25-21-34-800-002

(4) Do this task: Supply Conditioned Air to the Airplane, TASK 21-00-00-800-801.

SUBTASK 25-21-34-440-001

(5) Do this task: Attendant Speaker - Activation, TASK 23-31-03-440-801.

SUBTASK 25-21-34-440-002

(6) Do this task: Video Surveillance System - Activation, TASK 23-75-00-440-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FORWARD GALLEY DOORWAY SIDEWALL LINING PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Removal of the Forward Galley Doorway Sidewall Panel

(2) Installation of the Forward Galley Doorway Sidewall Panel

TASK 25-21-35-020-801

2. Forward Galley Doorway Sidewall Lining Panel - Removal

(Figure 401)

A. General

(1) This procedure only applies to the door sidewall panel installed on the structure around the forward galley doorway.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Forward Galley Doorway Sidewall Lining Panel Removal

SUBTASK 25-21-35-020-001

(1) Remove the passenger equipment, if it is necessary, to get access to the door sidewall panels [2].

SUBTASK 25-21-35-020-007

(2) Remove the forward scuff plate [8].

(a) Remove the screws [11].

SUBTASK 25-21-35-020-008

(3) Remove the aft scuff plate [9].

(a) Remove the screws [11].

SUBTASK 25-21-35-020-009

(4) Remove the central scuff plate [10].

(a) Remove the screws [12].

SUBTASK 25-21-35-020-005


(5) Remove the door sidewall panels [2].

(a) Remove the seal [13].

(b) Remove the screws [3] to remove the seal retainers [1].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

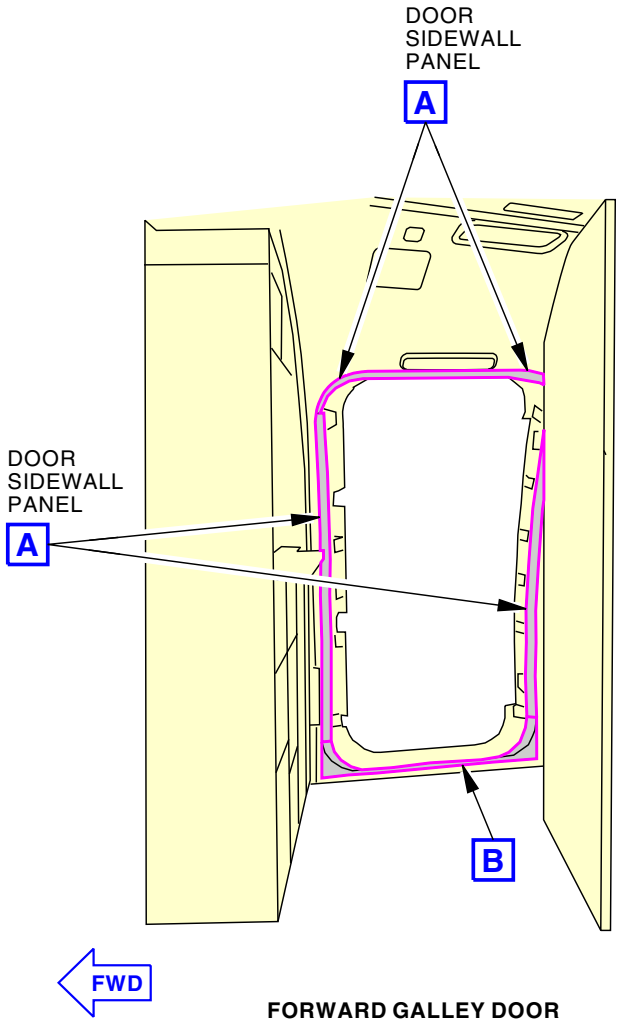


FORWARD GALLEY DOOR

2411863 S00061529299_V2

Forward Galley Doorway Sidewall Panel Installation
Figure 401/25-21-35-990-802 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

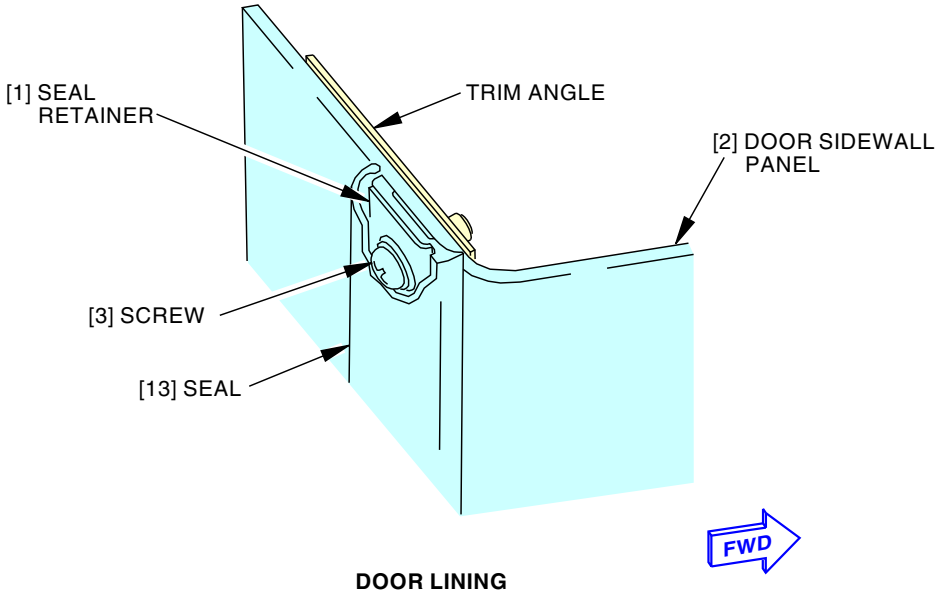


DOOR LINING (EXAMPLE) (40 LOCATIONS)

A

2539853 S0000603158_V2

Forward Galley Doorway Sidewall Panel Installation
Figure 401/25-21-35-990-802 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

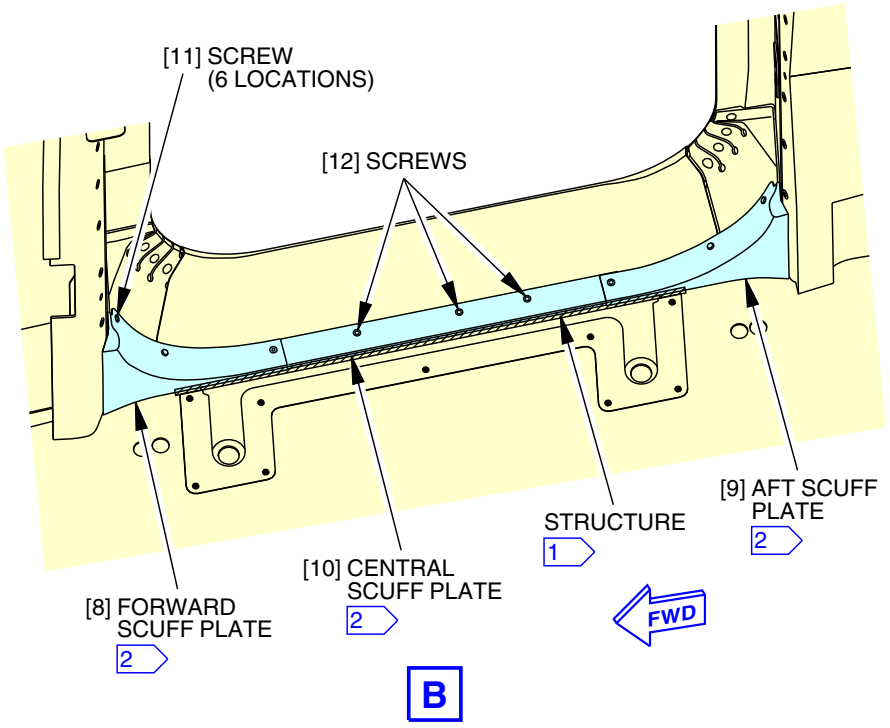

1 INSTALL WITH SEALANT RTV 108
2 INSTALL WITH SEALANT BMS5-95

3064778 S0000827012_V2

Forward Galley Doorway Sidewall Panel Installation
Figure 401/25-21-35-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-35-420-801

3. Forward Galley Doorway Sidewall Lining Panel - Installation

(Figure 401)

A. General

(1) This procedure only applies to the sidewall lining panels installed on the structure around the forward galley doorway.

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A50614	Adhesive - Sealant, Silicone Rubber, RTV108 (Translucent)	BAC5055 Type 2

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Door sidewall panel	25-21-35-95-060	PTF ALL

D. Location Zones

Zone	Area
200	Upper Half of Fuselage
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

E. Forward Galley Doorway Sidewall Lining Panel Installation

SUBTASK 25-21-35-420-001

(1) Place each of the door sidewall panel [2] on the trim angle.

(a) Install the seal retainer [1] on top of the door sidewall panel [2].

(b) Install the screw [3].

SUBTASK 25-21-35-420-002

(2) Install the new seal [13] on top of the seal retainers [1] and door sidewall panels [2].

SUBTASK 25-21-35-420-009

(3) Apply sealant, A00247, to the structural threshold side of the forward scuff plate [8], aft scuff plate [9], and central scuff plate [10].

SUBTASK 25-21-35-420-008

(4) Install the central scuff plate [10] and attach with screws [12].

SUBTASK 25-21-35-420-006

(5) Install the forward scuff plate [8] and attach with screws [11].

SUBTASK 25-21-35-420-007

(6) Install the aft scuff plate [9] and attach with screws [11].

SUBTASK 25-21-35-860-001

(7) Make sure that sealant, A00247, is dry.

SUBTASK 25-21-35-420-010

(8) Apply fillet seal with RTV108 adhesive, A50614, to the cavity common to the central scuff plate [10], forward scuff plate [8], aft scuff plate [9], and structure (View E, Figure 401).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-35-420-015

(9) Apply fillet seal with RTV108 adhesive, A50614, between the door lining and aft scuff plate [9], and between the door lining and forward scuff plate [8].

SUBTASK 25-21-35-420-012

(10) If it is applicable, install the aid handle that is forward of the entry door.

SUBTASK 25-21-35-420-004

(11) Install the passenger equipment removed for access to the door sidewall panels [2].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CEILING PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Main Ceiling Panel Removal

(2) Main Ceiling Panel Installation

TASK 25-21-45-000-801

2. Main Ceiling Panel - Removal

(Figure 401)

A. General

(1) This task includes the steps to remove the main ceiling panel [1] from the passenger cabin.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-13566	Installation/Removal Tool - 737 BSI Ceiling Panels Part #: C25002-1 Supplier: 81205

C. Location Zones

Zone	Area
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

D. Prepare for the removal

SUBTASK 25-21-45-860-008

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

SUBTASK 25-21-45-010-006

(2) If necessary, remove the monuments, furnishings, or lowered ceiling panels that prevent the main ceiling panel [1] removal.

SUBTASK 25-21-45-020-002

(3) If applicable, remove the emergency exit sign from the ceiling panel [1].

E. Ceiling Panel Removal

SUBTASK 25-21-45-020-001

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to remove the ceiling panel [1]:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Push the release levers [2] to release the ceiling fittings on the ceiling panel [1].

NOTE: Each ceiling panel [1] has two ceiling fittings.

(b) Move the ceiling panel [1] in the outboard direction until the inboard edge disengages from the air outlet extrusion [7].

1) Use installation/removal tool, SPL-13566 if necessary.

(c) Carefully lower the ceiling panel [1].

(d) Disconnect the lanyard [8] from the ceiling panel [1].


(e) Lift the ceiling panel [1] out of the stowage bin hinge-halves [6].

(f) Remove the ceiling panel [1].

(g) If necessary, remove the lanyard hook [9] from the ECS duct [10].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

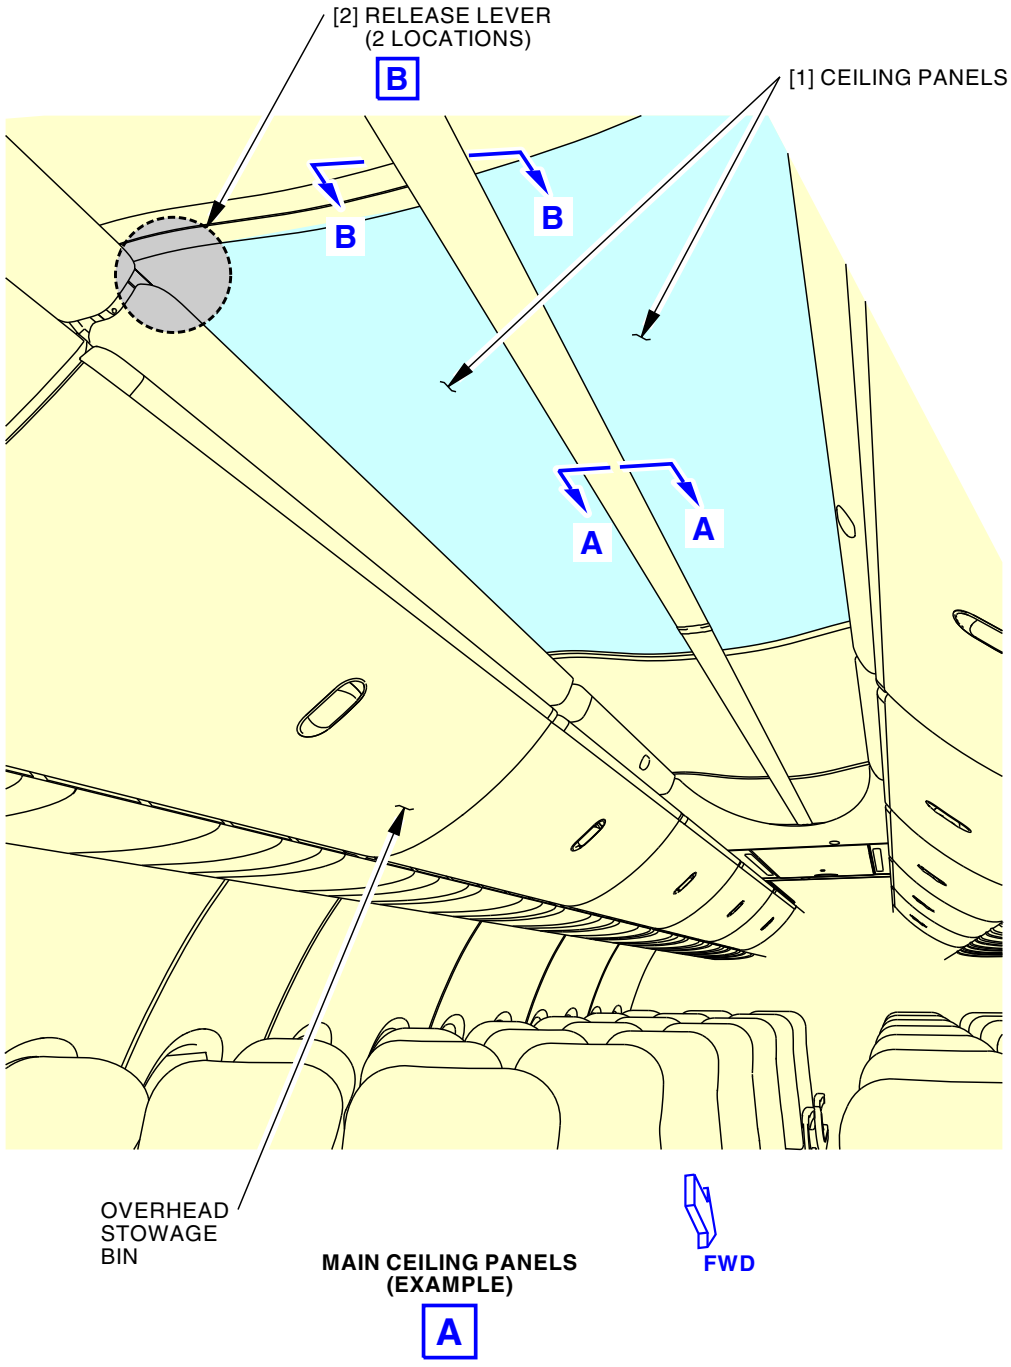


Main Ceiling Panel Installation
Figure 401/25-21-45-990-807 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

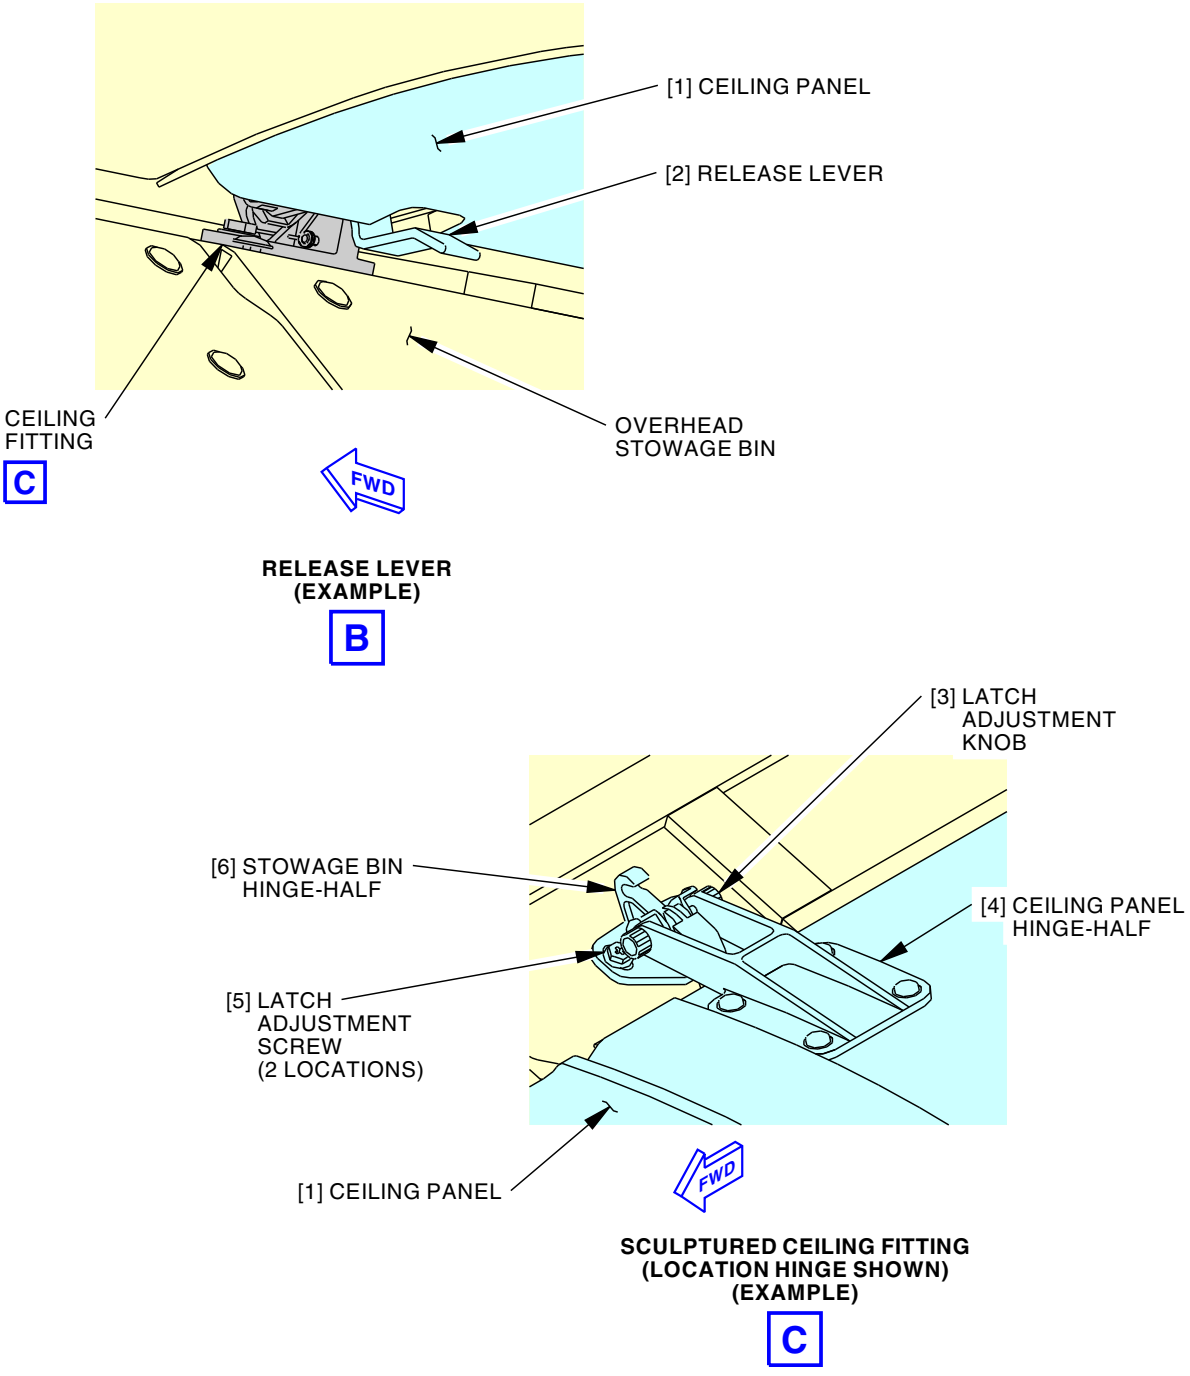


Main Ceiling Panel Installation
Figure 401/25-21-45-990-807 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

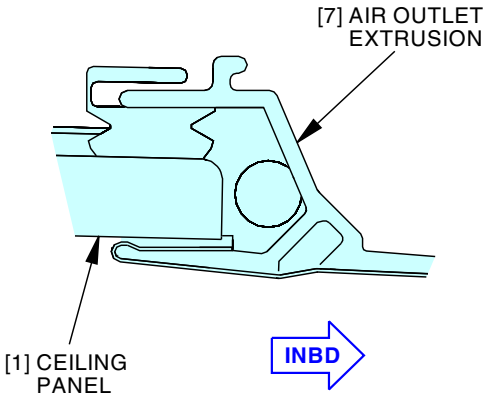

A-A

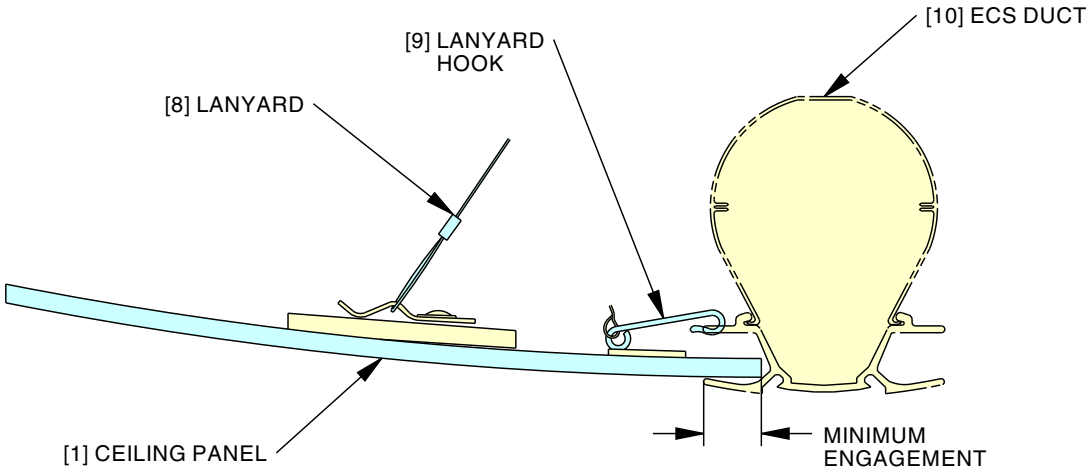

(EXAMPLE)

B-B

2539213 S0000601742_V1

Main Ceiling Panel Installation
Figure 401/25-21-45-990-807 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-45-400-801

3. Main Ceiling Panel - Installation

(Figure 401)

A. General

(1) This task includes the steps to install the main ceiling panel [1] in the passenger cabin.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-13566	Installation/Removal Tool - 737 BSI Ceiling Panels Part #: C25002-1 Supplier: 81205

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Ceiling panel	25-21-45-85-005	PTF ALL
		25-21-45-85-010	PTF ALL
		25-21-45-85-015	PTF ALL
		25-21-45-85-025	PTF ALL
		25-21-45-85-030	PTF ALL
		25-21-45-85-035	PTF ALL
		25-21-45-85-060	PTF ALL
		25-21-45-85-065	PTF ALL
		25-21-45-85-070	PTF ALL

D. Location Zones

Zone	Area
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

E. Ceiling Panel Installation

SUBTASK 25-21-45-420-001

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to install the ceiling panel [1]:

(a) Make sure that the lanyard hook [9] is connected to the hole in the ECS duct [10].

(b) Place the outboard edge of the ceiling panel [1] over the stow bin, with the ceiling panel hinge-halves [4] resting over the stowage bin hinge-halves [6].

(c) Connect the lanyard [8] to the ceiling panel [1].

(d) Lift the inboard edge of the ceiling panel [1] until it engages with the air outlet extrusion [7].

SUBTASK 25-21-45-420-015

(2) Align the panels if necessary.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that there is a minimum engagement of 0.5000 in. (1.2700 cm) between the inboard edge of the ceiling panel [1] and the ECS duct [10].

1) Use installation/removal tool, SPL-13566 if necessary.

(b) Make sure that the clearance between the ceiling panels [1] is uniform from left to right.

(c) Turn the latch adjustment knob [3] to move the ceiling panel [1] forward and aft.

1) The latch adjustment knob [3] lets you adjust the ceiling panel [1] ± 0.15 in. (0.38 cm).

(d) Adjust the latch adjustment screws [5] to move the ceiling panel [1] inboard and outboard or up and down.

1) The slots let you adjust the ceiling panel [1] ± 0.15 in. (0.38 cm).

2) Make sure that you tighten the latch adjustment screws [5] after the adjustment.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-45-410-017

(1) If removed, install the emergency exit sign.

SUBTASK 25-21-45-410-018

(2) Install the monuments, furnishings, or lowered ceiling panels that you removed for access.

SUBTASK 25-21-45-860-009

(3) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SIDEWALL PANEL ASSEMBLY - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) A removal of the sidewall panel

(2) An installation of the sidewall panel.

TASK 25-21-46-000-801

2. Sidewall Panel - Removal

(Figure 401)

A. General

(1) This task includes the steps to remove the sidewall panel [1] from the passenger compartment.

B. References

Reference	Title
21-23-03-000-801	Return Air Grille Removal (P/B 201)
25-21-12-000-801	Snap In Window Shade and Reveal Assembly Removal (P/B 401)
25-22-00-000-801	Passenger Seat Removal (P/B 401)

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Prepare for the Removal

SUBTASK 25-21-46-010-004

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-46-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	11	C00594	WINDOW LIGHT RIGHT
E	12	C00776	WINDOW LIGHT LEFT

SUBTASK 25-21-46-010-001

(3) If necessary, remove the passenger seats for access to the sidewall panel [1].

(a) Do this task: Passenger Seat Removal, TASK 25-22-00-000-801.

SUBTASK 25-21-46-010-002

(4) If necessary, remove the window shade and reveal assembly.

(a) Do this task: Snap In Window Shade and Reveal Assembly Removal, TASK 25-21-12-000-801.

SUBTASK 25-21-46-010-003

(5) Do this task to remove the air grille from below the sidewall panel [1]: Return Air Grille Removal, TASK 21-23-03-000-801.

F. Sidewall Panel Removal

SUBTASK 25-21-46-020-002

CAUTION DO NOT SCRATCH OR HIT THE SIDEWALL PANEL ASSEMBLIES WHEN YOU REMOVE OR INSTALL THE TRIM STRIPS. YOU CAN EASILY CAUSE DAMAGE TO THE SIDEWALL PANELS.

(1) Remove the trim strips [2] on each side of the sidewall panel [1].

(a) Pull the trim strips [2] down and out of the sidewall panel track until they are clear of the sidewall panel [1].

SUBTASK 25-21-46-020-003

(2) Hold the sidewall panel [1] while you remove the screws [4], retainers [3], and washers [5] at the shock mounts [6].

SUBTASK 25-21-46-020-006

CAUTION DO NOT SCRATCH OR HIT THE SIDEWALL PANEL ASSEMBLIES WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE SIDEWALL PANELS.

(3) Remove the sidewall panel [1].

(a) Move the sidewall panel [1] down until the top edge of the panel disengages from the air outlet extrusion.


(b) Disconnect the electrical connector from the sidewall light if necessary.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Remove the sidewall panel [1] from the frame [7].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

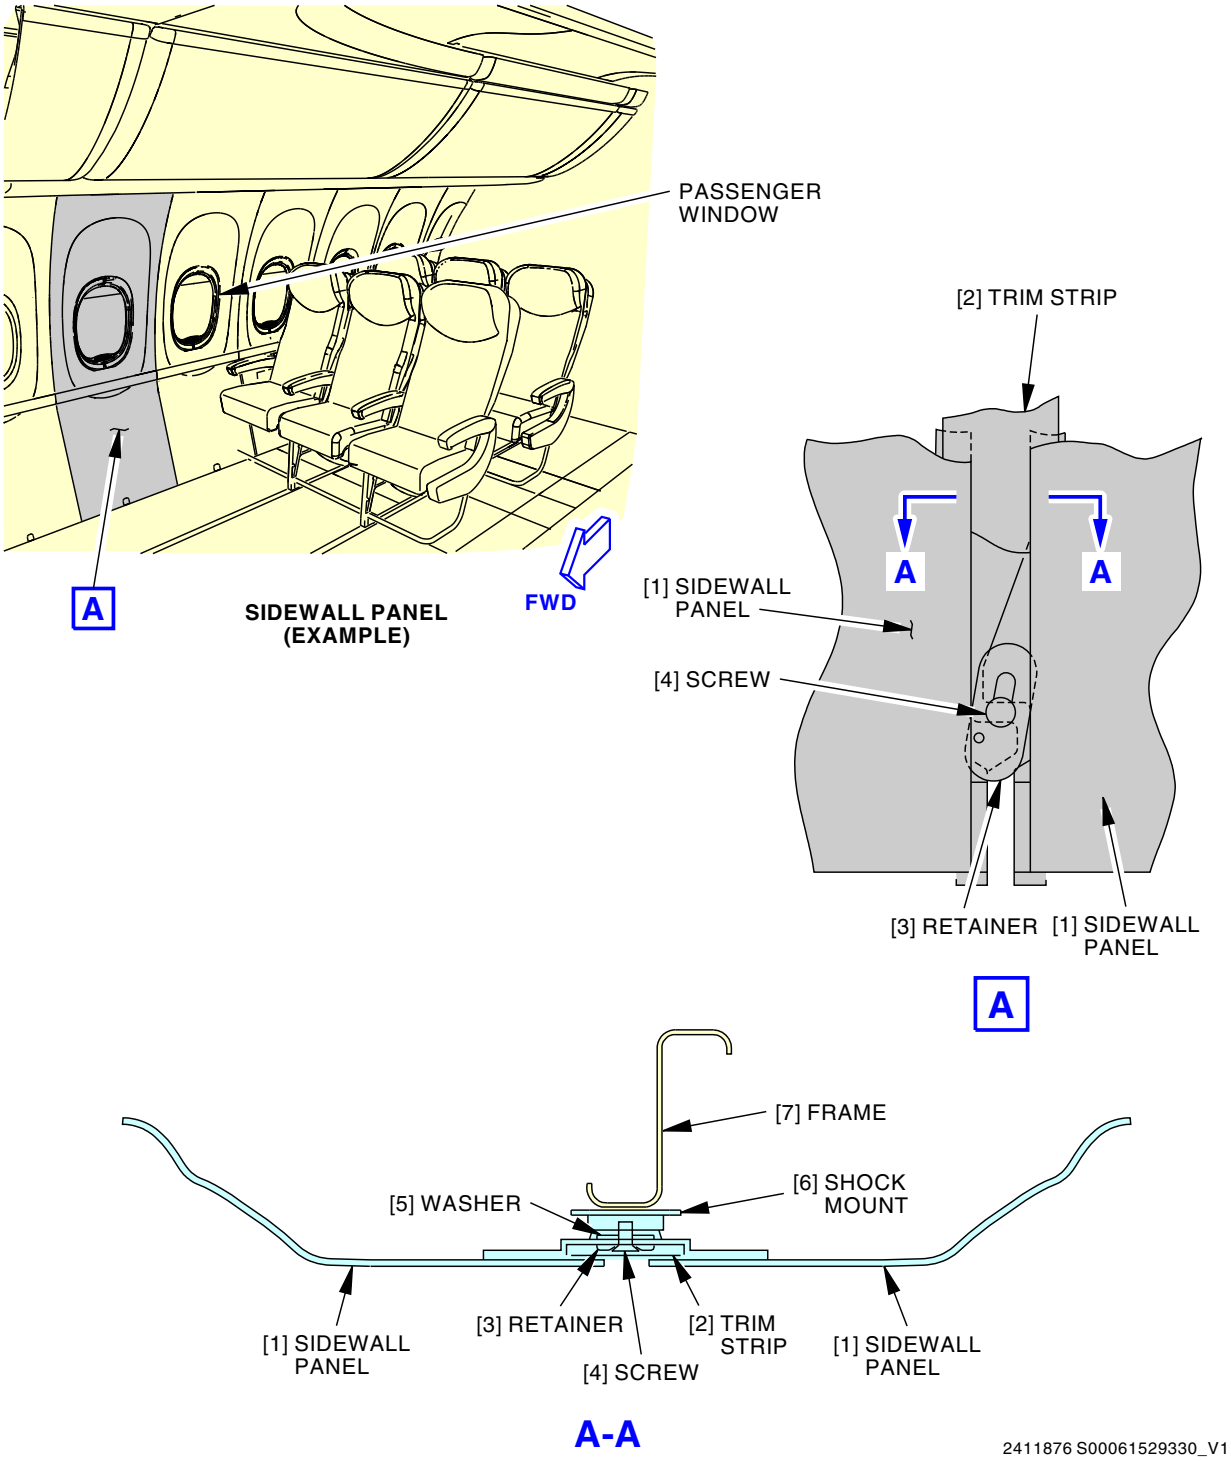

Sidewall Panel Installation
Figure 401/25-21-46-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-46-400-801

3. Sidewall Panel - Installation

(Figure 401)

A. General

(1) This task includes the steps to install the sidewall panel [1] in the passenger compartment.

B. References

Reference	Title
21-23-03-400-802	Return Air Grille Installation (P/B 201)
25-21-12-400-802	Snap In Window Shade and Reveal Assembly Installation (P/B 401)
25-22-00-400-801	Passenger Seat Installation (P/B 401)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Sidewall panel	25-21-46-07A-025	PTF ALL
		25-21-46-07A-070	PTF ALL
		25-21-46-07A-075	PTF ALL
		25-21-46-07A-105	PTF ALL
		25-21-46-08A-020	PTF ALL
		25-21-46-08A-025	PTF ALL
		25-21-46-08A-030	PTF ALL
		25-21-46-08A-085	PTF ALL
		25-21-46-08A-090	PTF ALL
		25-21-46-08A-095	PTF ALL
		25-21-46-08A-100	PTF ALL
		25-21-46-08A-105	PTF ALL
		25-21-46-08A-110	PTF ALL
		25-21-46-08A-115	PTF ALL
		25-21-46-08A-190	PTF ALL
		25-21-46-08A-240	PTF ALL
		25-21-46-08A-285	PTF ALL
		25-21-46-08A-330	PTF ALL
		25-21-46-08A-375	PTF ALL
		25-21-46-08A-420	PTF ALL
		25-21-46-08A-460	PTF ALL
		25-21-46-08A-530	PTF ALL
		25-21-46-08A-535	PTF ALL
		25-21-46-08A-540	PTF ALL
		25-21-46-08A-595	PTF ALL
		25-21-46-08A-640	PTF ALL
		25-21-46-08A-685	PTF ALL
		25-21-46-29A-035	PTF ALL
		25-21-46-29A-075	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

AMM Item	Description	AIPC Reference	AIPC Effectivity
1 (cont.)		25-21-46-33A-045	PTF ALL
		25-21-46-33A-090	PTF ALL
		25-21-46-66-045	PTF ALL
		25-21-46-66-090	PTF ALL
		25-21-46-94-045	PTF ALL
		25-21-46-94-090	PTF ALL

D. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Sidewall Panel Installation

SUBTASK 25-21-46-420-001

CAUTION DO NOT SCRATCH OR HIT THE SIDEWALL PANEL ASSEMBLIES WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE SIDEWALL PANELS.

(1) Install the sidewall panel [1] to the frame [7].

NOTE: The sidewall panel can be trimmed to fit if necessary. Trim only the edge of the panel that touches a monument.

(a) Connect the electrical connector to the sidewall light if necessary.

(b) Put the top edge of the sidewall panel [1] into the air outlet extrusion.

SUBTASK 25-21-46-420-004

(2) Align and hold the sidewall panel [1] while you install the screws [4], washers [5], and retainers [3] at the shock mounts [6].

(a) Do not tighten the screws [4] at this time.

SUBTASK 25-21-46-420-005

CAUTION DO NOT SCRATCH OR HIT THE SIDEWALL PANEL ASSEMBLIES WHEN YOU REMOVE OR INSTALL THE TRIM STRIPS. YOU CAN EASILY CAUSE DAMAGE TO THE SIDEWALL PANELS.

(3) Install the trim strips [2].

NOTE: The trim strips can be trimmed to fit if necessary.

(a) Put the trim strips [2] into the bottom edges of the sidewall panel [1].

(b) Lift the trim strips [2] to the lower shock mounts [6]

(c) Install the screws [4] at the lower shock mounts [6] to align the sidewall panel [1].

1) Tighten the screws [4] from 25 in-lb (29 kg-cm) to 30 in-lb (35 kg-cm).

(d) Do these steps again at each shock mount [6]:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Lift the trim strips [2] to the next shock mount [6].
2) Install the screws [4].
3) Tighten the screws [4] from 25 in-lb (29 kg-cm) to 30 in-lb (35 kg-cm).

G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-46-410-002

(1) Do this task to install the air grille: Return Air Grille Installation, TASK 21-23-03-400-802.

SUBTASK 25-21-46-410-001

(2) If removed, install the window shade and reveal assembly.

(a) Do this task: Snap In Window Shade and Reveal Assembly Installation, TASK 25-21-12-400-802.

SUBTASK 25-21-46-410-003

(3) If removed, install the passenger seats.

(a) Do this task: Passenger Seat Installation, TASK 25-22-00-400-801.

SUBTASK 25-21-46-860-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	11	C00594	WINDOW LIGHT RIGHT
E	12	C00776	WINDOW LIGHT LEFT

SUBTASK 25-21-46-410-004

(5) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-46-710-001

(6) Do an operational check of the applicable electrical equipment.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

LOWERED CEILING PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the lowered ceiling

(a) You must remove the individual panels of the forward or aft lowered ceiling in the order shown in this task.

(2) An installation of the lowered ceiling

(a) You must install the individual panels of the forward or aft lowered ceiling in the order shown in this task.

(3) A removal of the cove bullnose panel

(4) An installation of the cove bullnose panel

(5) A removal of the horseshoe panel

(6) An installation of the horseshoe panel

(7) A removal of the cove horseshoe panel

(8) An installation of the cove horseshoe panel

(9) A removal of the close out panel

(10) An installation of the close out panel

(11) A removal of the forward entry panel

(12) An installation of the forward entry panel

(13) A removal of the aft entry panel

(14) An installation of the aft entry panel.

TASK 25-21-71-000-801

2. Lowered Ceiling Removal

(Figure 401)

A. General

(1) This task includes the steps to remove the forward and aft lowered ceilings from the passenger cabin.

(2) You must remove the individual panels of the lowered ceiling in the order shown in this procedure.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Prepare for the Removal

SUBTASK 25-21-71-010-033

(1) To get access to the P91 and P92 panels, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-015

(2) To remove the forward lowered ceiling, open all related circuit breakers.

(a) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(b) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	3	C00140	WORK AND THSHD LTS

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-860-016

(3) To remove the aft lowered ceiling, open all related circuit breakers.

(a) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
C	9	C00109	FLIGHT RECORDER AC
C	10	C00468	FLIGHT RECORDER DC

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	18	C01949	CABIN EMER LIGHTS

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(b) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-010-031

(4) If necessary, remove the monuments or furnishings that prevent the removal of the forward or aft lowered ceiling.

E. Forward Lowered Ceiling Removal

SUBTASK 25-21-71-020-001

(1) Remove the forward cove bullnose panel assembly [1].

(a) Do this task: Cove Bullnose Ceiling Panel Removal, TASK 25-21-71-000-802.

SUBTASK 25-21-71-020-002

(2) Remove the horseshoe panel assembly [2].

(a) Do this task: Horseshoe Ceiling Panel Removal, TASK 25-21-71-000-803.

SUBTASK 25-21-71-020-003

(3) Remove the close out panel assembly [3].

(a) Do this task: Close Out Ceiling Panel Removal, TASK 25-21-71-000-805.

SUBTASK 25-21-71-020-004

(4) Remove the forward entry panel assembly [4].

(a) Do this task: Forward Entry Ceiling Panel Removal, TASK 25-21-71-000-806.

F. Aft Lowered Ceiling Removal

SUBTASK 25-21-71-020-005

(1) Remove the aft cove bullnose panel assembly [5].

(a) Do this task: Cove Bullnose Ceiling Panel Removal, TASK 25-21-71-000-802.

SUBTASK 25-21-71-020-006

(2) Remove the cove horseshoe panel assembly [6].

(a) Do this task: Cove Horseshoe Ceiling Panel Removal, TASK 25-21-71-000-804.


SUBTASK 25-21-71-020-051

(3) Remove the aft entry panel assembly [7].


(a) Do this task: Aft Entry Ceiling Panel Removal, TASK 25-21-71-000-807.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

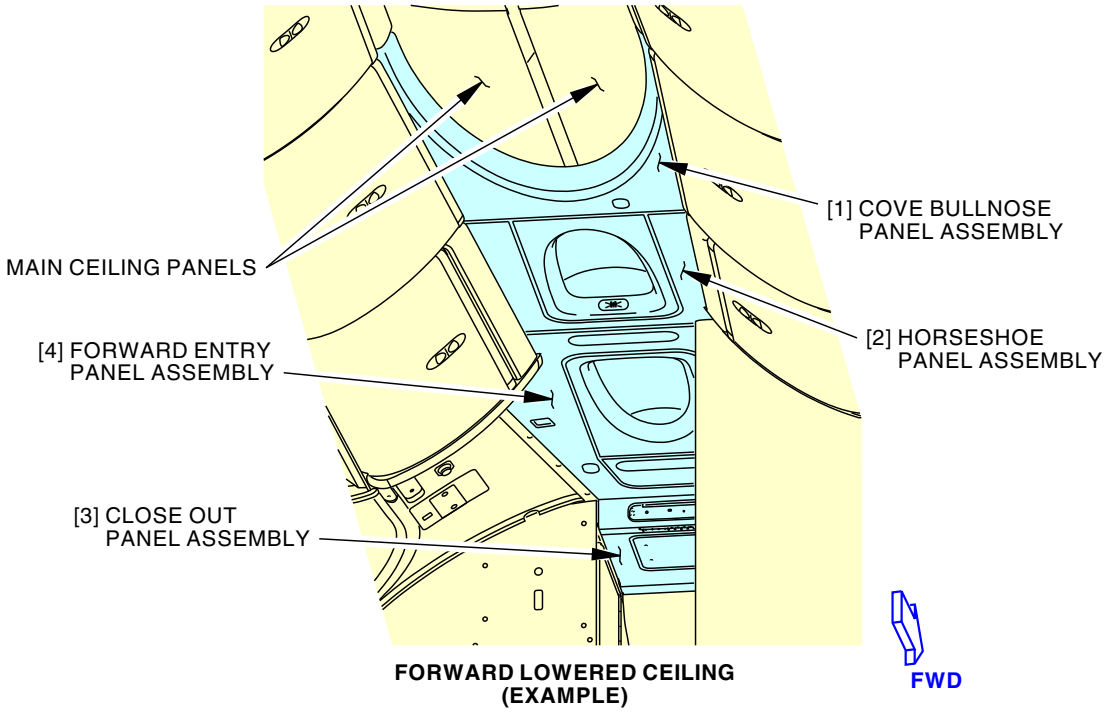

FORWARD LOWERED CEILING (EXAMPLE)

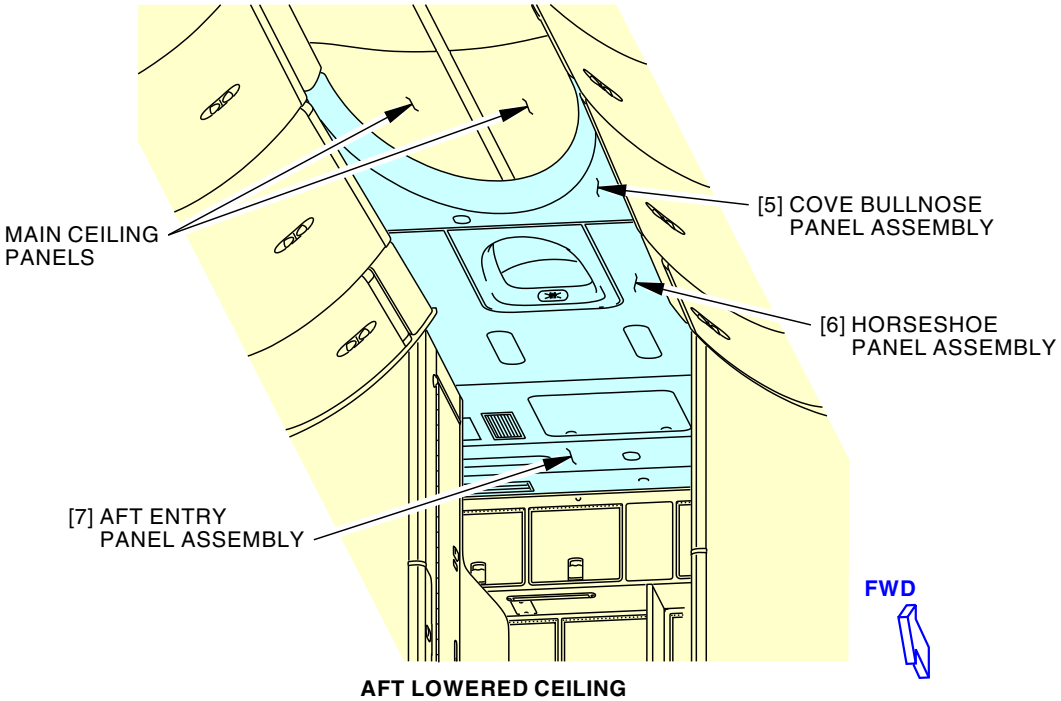

AFT LOWERED CEILING (EXAMPLE)

2411877 S00061529335_V2

Lowered Ceiling Installation
Figure 401/25-21-71-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-801

3. Lowered Ceiling Installation

(Figure 401)

A. General

(1) This task includes the steps to install the forward and aft lowered ceilings in the passenger cabin.

(2) You must install the individual panels of the lowered ceiling panels in the order shown in this procedure.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Forward Lowered Ceiling Installation

SUBTASK 25-21-71-420-001

(1) Install the forward entry panel assembly [4].

(a) Do this task: Forward Entry Ceiling Panel Installation, TASK 25-21-71-400-806.

SUBTASK 25-21-71-420-002

(2) Install the close out panel assembly [3].

(a) Do this task: Close Out Ceiling Panel Installation, TASK 25-21-71-400-805.

SUBTASK 25-21-71-420-003

(3) Install the horseshoe panel assembly [2].

(a) Do this task: Horseshoe Ceiling Panel Installation, TASK 25-21-71-400-803.

SUBTASK 25-21-71-420-004

(4) Install the forward cove bullnose panel assembly [1].

(a) Do this task: Cove Bullnose Ceiling Panel Installation, TASK 25-21-71-400-802.

E. Aft Lowered Ceiling Installation

SUBTASK 25-21-71-420-005

(1) Install the aft entry panel assembly [7].

(a) Do this task: Aft Entry Ceiling Panel Installation, TASK 25-21-71-400-807.

SUBTASK 25-21-71-420-040

(2) Install the cove horseshoe panel assembly [6].

(a) Do this task: Cove Horseshoe Ceiling Panel Installation, TASK 25-21-71-400-804.

SUBTASK 25-21-71-420-041

(3) Install the aft cove bullnose panel assembly [5].

(a) Do this task: Cove Bullnose Ceiling Panel Installation, TASK 25-21-71-400-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-860-017

(1) For the forward lowered ceiling, close all related circuit breakers.

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(a) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	3	C00140	WORK AND THSHD LTS

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

(b) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

SUBTASK 25-21-71-860-018

(2) For the aft lowered ceiling, close all related circuit breakers.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(a) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

(b) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
C	9	C00109	FLIGHT RECORDER AC
C	10	C00468	FLIGHT RECORDER DC

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	18	C01949	CABIN EMER LIGHTS

SUBTASK 25-21-71-410-030

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

——— END OF TASK ———

TASK 25-21-71-000-802

4. Cove Bullnose Ceiling Panel Removal

(Figure 402)

A. General

(1) This task includes the steps to remove the cove bullnose panel from the passenger cabin.

(2) There are these types of cove bullnose panels:

(a) Forward cove bullnose panel.

(b) Aft cove bullnose panel.

B. References

Reference	Title
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

E. Prepare for the Removal

SUBTASK 25-21-71-860-009

(1) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

SUBTASK 25-21-71-010-018

(2) If it is necessary, remove the monuments or furnishings that prevent the panel removal.

SUBTASK 25-21-71-010-019

(3) If it is necessary to get access, remove the overhead stowage bins or overhead stowage bin modules.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Do one of these tasks: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

F. Cove Bullnose Panel Removal

SUBTASK 25-21-71-010-020

(1) If it is necessary, do these steps to open the cove dome panel that is in the adjacent horseshoe panel assembly:

(a) Find the two access holes in the space between the cove bullnose panel assembly and the horseshoe panel assembly.

(b) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(c) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let the cove dome panel open a small distance.

(d) Disconnect the lanyard.

(e) Open the cove dome panel fully.

SUBTASK 25-21-71-020-034

(2) Disconnect the electrical connector [14].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-035

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(3) To remove the cove bullnose panel assembly [1], do these steps:

(a) Remove the screws [21] and washers [22] from the bracket assemblies [20].

(b) Remove the screws [18] and washers [19] from the bracket assemblies [11].

(c) Turn the cove bullnose panel assembly [1] out of its position.

(d) Remove the cove bullnose panel assembly [1].

SUBTASK 25-21-71-020-038

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(4) To remove the cove bullnose panel assembly [5], do these steps:

(a) Remove the screws [16] and washers [17] from the bracket assemblies [12].

(b) Remove the screws [16] and washers [17] from the bracket assemblies [13].


(c) Remove the screws [18] and washers [19] from the bracket assemblies [11].

(d) Turn the cove bullnose panel assembly [5] out of its position.

(e) Remove the cove bullnose panel assembly [5].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

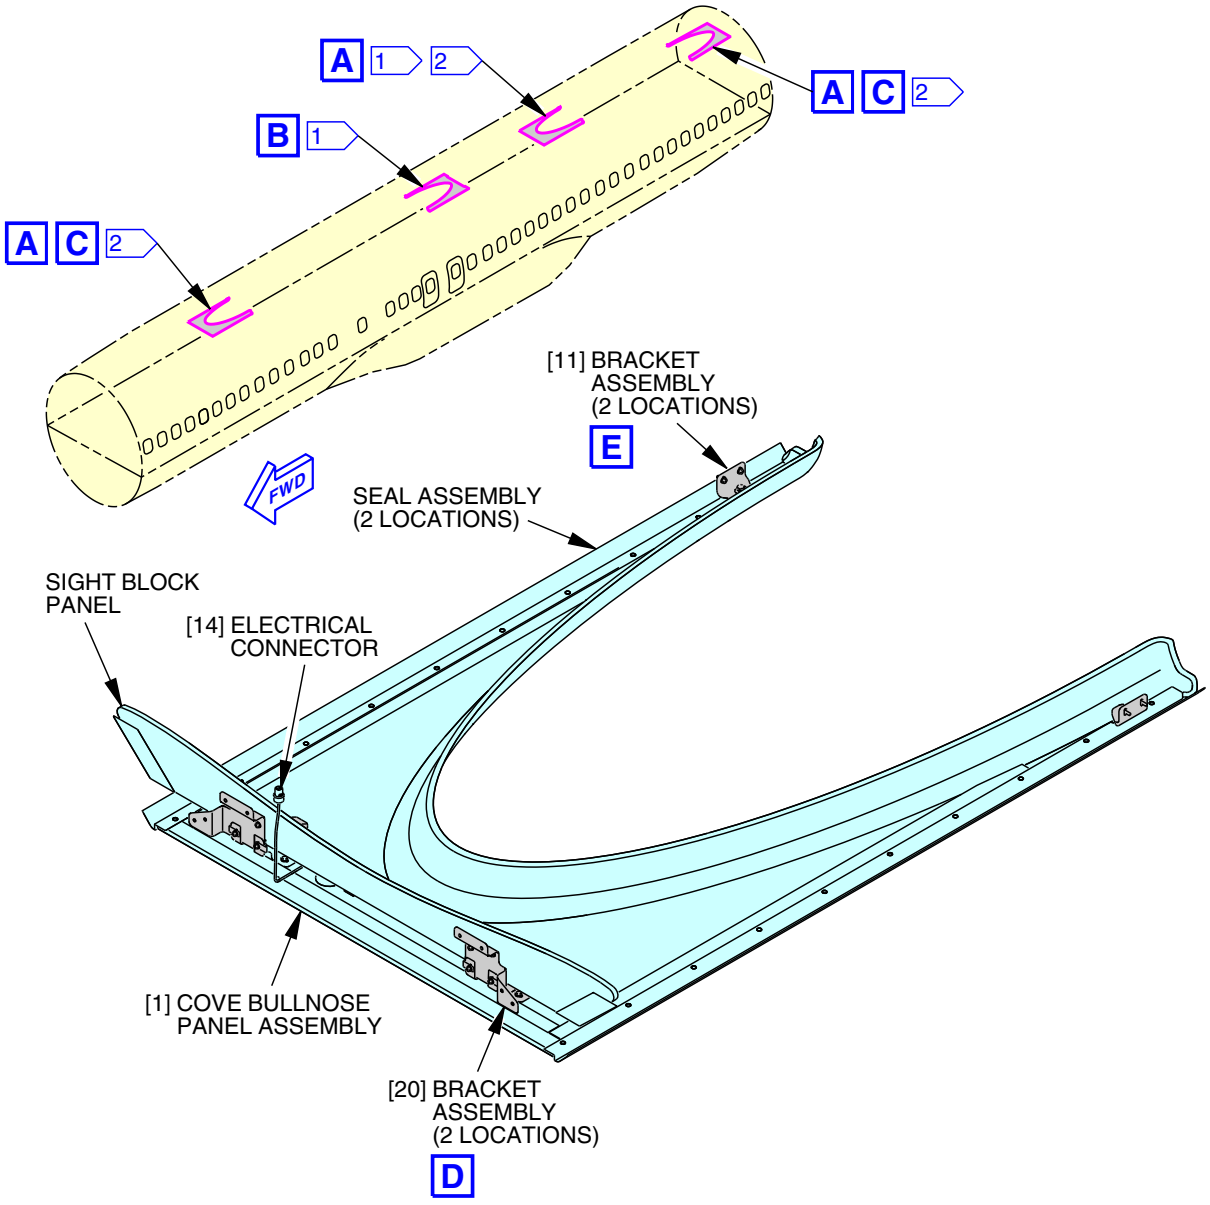

COVE BULLNOSE CEILING PANEL (EXAMPLE)


A

1 IF INSTALLED
2 APPROXIMATE LOCATION

2536832 S0000601466_V4


Cove Bullnose Ceiling Panel Installation
Figure 402/25-21-71-990-803 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

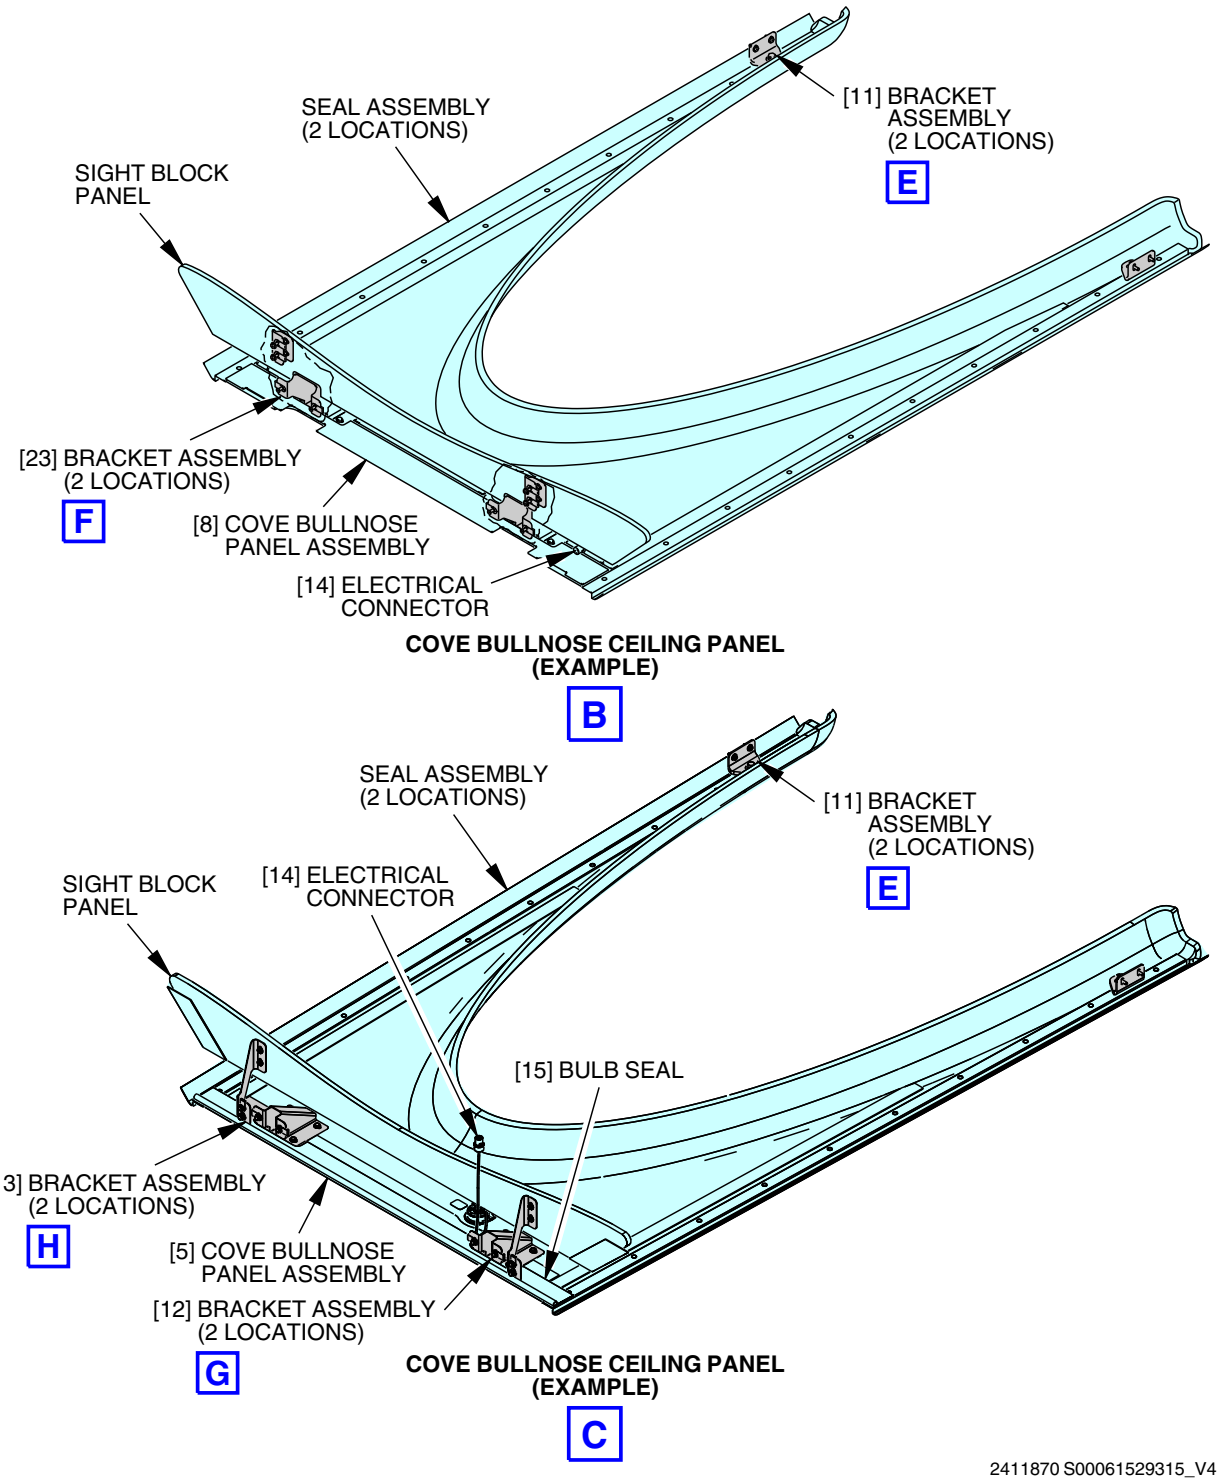


Cove Bullnose Ceiling Panel Installation
Figure 402/25-21-71-990-803 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

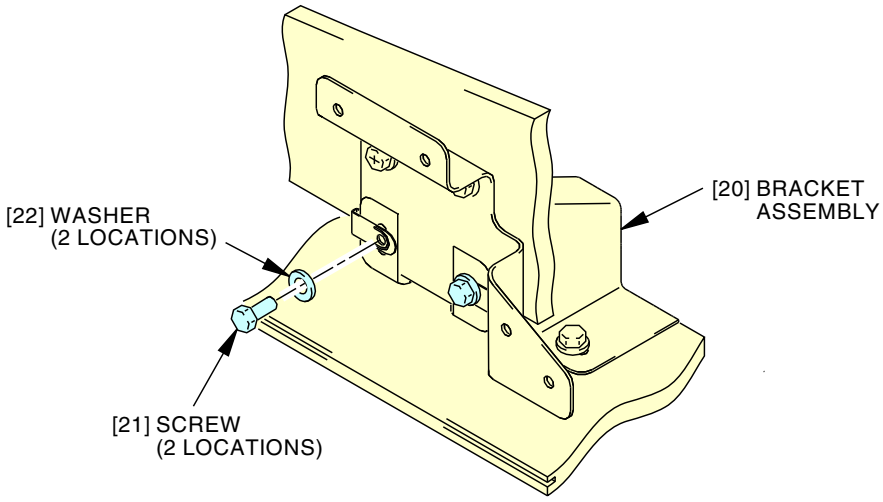

BRACKET ASSEMBLY
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

D

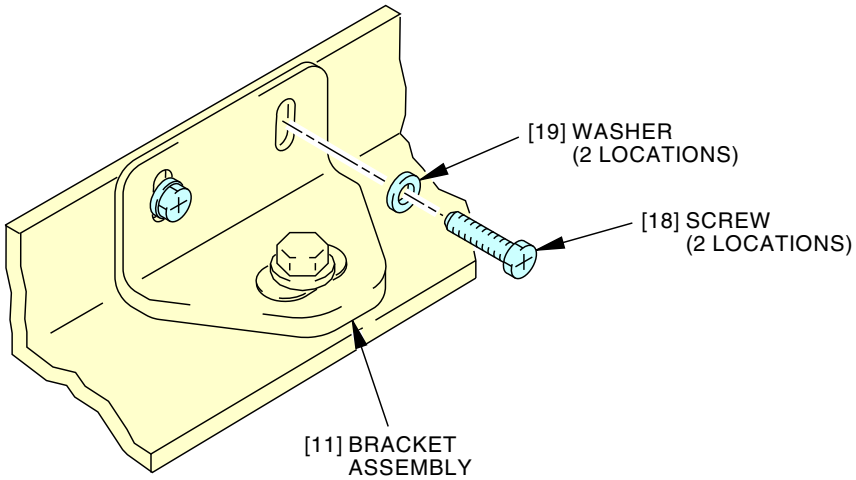


BRACKET ASSEMBLY
(TYPICAL)

E

2536854 S0000601469_V1

Cove Bullnose Ceiling Panel Installation
Figure 402/25-21-71-990-803 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

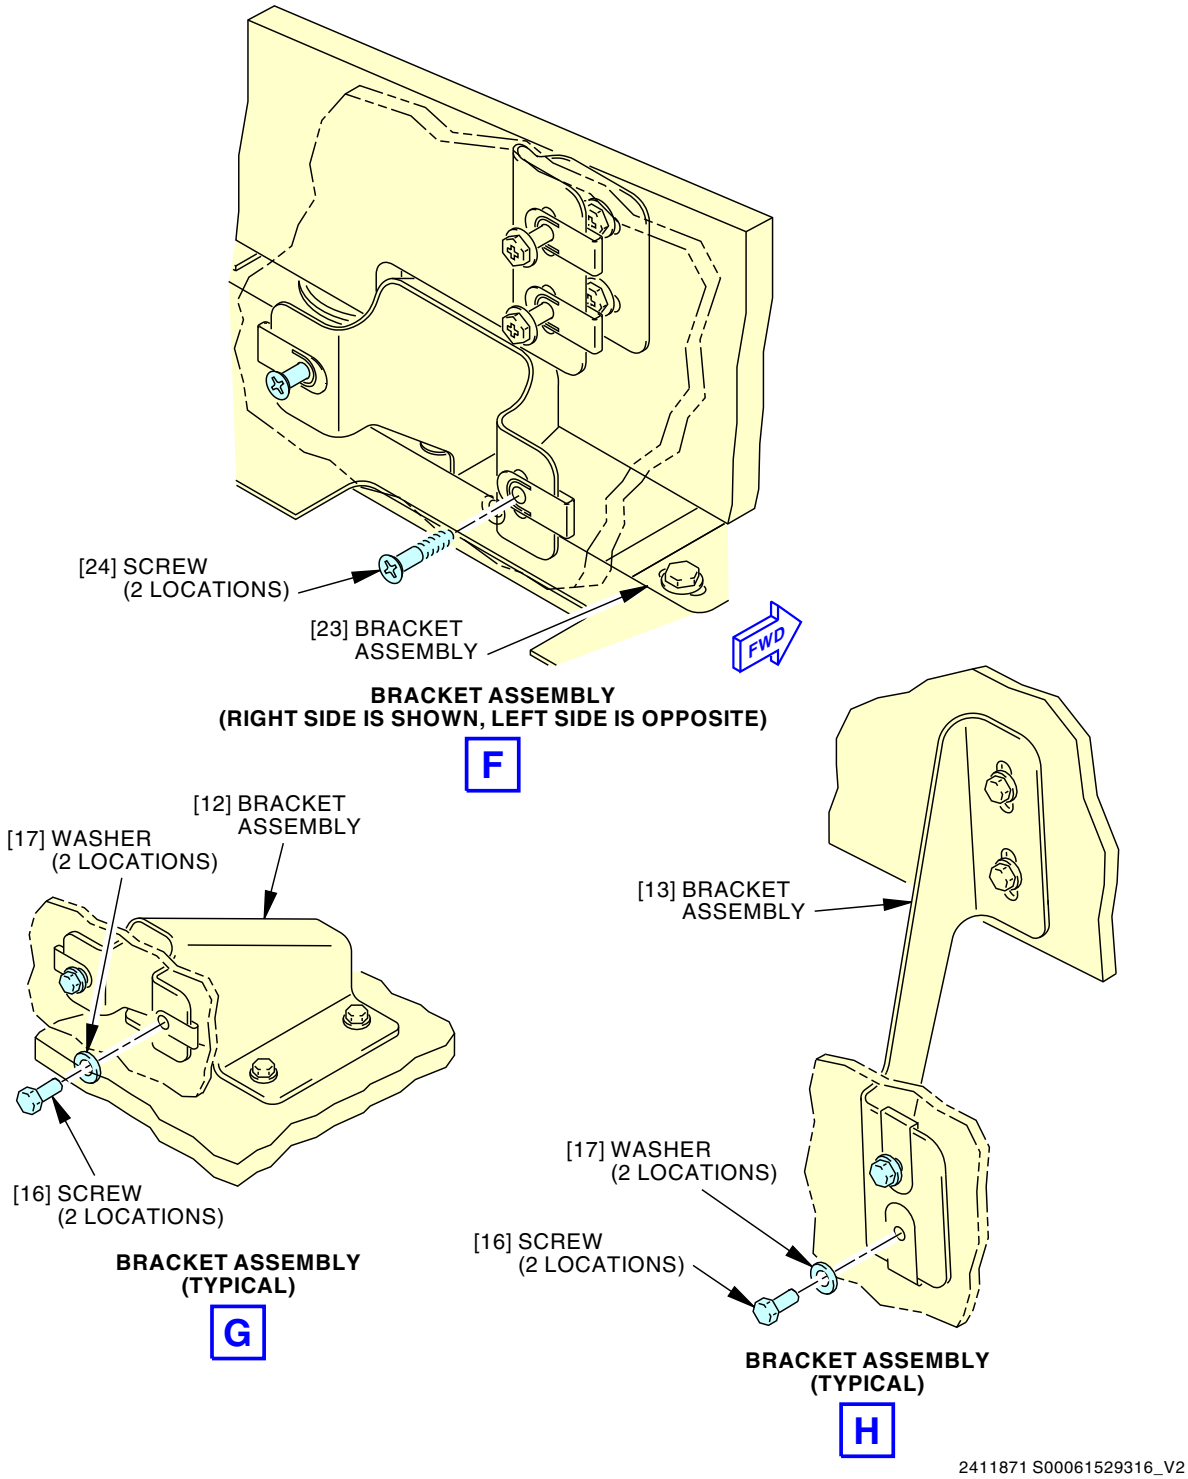

Cove Bullnose Ceiling Panel Installation
Figure 402/25-21-71-990-803 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-802

5. Cove Bullnose Ceiling Panel Installation

(Figure 402)

A. General

(1) This task includes the steps to install the cove bullnose panel in the passenger cabin.

(2) There are these types of cove bullnose panels:

(a) Forward cove bullnose panel.

(b) Aft cove bullnose panel.

B. References

Reference	Title
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Consumable Materials

Reference	Description	Specification
G50333	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372

E. Location Zones

Zone	Area
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

F. Cove Bullnose Panel Installation

SUBTASK 25-21-71-420-028

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) To install the cove bullnose panel assembly [1], do these steps:

(a) Lift the cove bullnose panel assembly [1] into its correct position.

(b) Install the screws [18] and washers [19] to the bracket assemblies [11].

1) Do not tighten the screws [18] at this time.

(c) Install the screws [21] and washers [22] to the bracket assemblies [20].

1) Do not tighten the screws [21] at this time.

(d) Align the cove bullnose panel assembly [1] while you tighten the screws [18] and screws [21].

1) Make sure that the bottom of the panel is flush with the lowered ceiling and adjacent light valence, ± 0.030 in. (0.076 cm).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-420-006

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(2) To install the cove bullnose panel assembly [5], do these steps:

(a) If it is necessary, apply new tape, G50333, to the bulb seal [15].

(b) Lift the cove bullnose panel assembly [5] into its correct position.

(c) Install the screws [18] and washers [19] to the bracket assemblies [11].

1) Do not tighten the screws [18] at this time.

(d) Install the screws [16] and washers [17] to the bracket assembly [13].

1) Do not tighten the screws [16] at this time.

(e) Install the screws [16] and washers [17] to the bracket assemblies [12].

1) Do not tighten the screws [16] at this time.

(f) Align the cove bullnose panel assembly [5] while you tighten the screws [18] and screws [16].

1) Make sure that the bottom of the panel is flush with the lowered ceiling and adjacent light valence, ± 0.030 in. (0.076 cm).

SUBTASK 25-21-71-420-030

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(3) To install the cove bullnose panel assembly [8], do these steps:

(a) Lift the cove bullnose panel assembly [8] into its correct position.

(b) Install the screws [18] and washers [19] to the bracket assemblies [11].

1) Do not tighten the screws [18] at this time.

(c) Install the screws [24] to the bracket assemblies [23].

1) Do not tighten the screws [24] at this time.

(d) Align the cove bullnose panel assembly [8] while you tighten the screws [18] and screws [24].

1) Make sure that the bottom of the panel is flush with the adjacent light valence, ± 0.030 in. (0.076 cm).

SUBTASK 25-21-71-420-029

(4) Connect the electrical connector [14].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-410-018

(5) If you opened the cove dome panel, do these steps to close and lock it:

(a) Attach the lanyard.

(b) Close the cove dome panel.

(c) Find the two access holes in the space between the cove bullnose panel assembly and the horseshoe panel assembly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(e) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) clockwise.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-410-019

(1) If removed, install the overhead stowage bins or overhead stowage bin modules.

(a) Do one of these tasks: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

SUBTASK 25-21-71-410-020

(2) Install the monuments or furnishings that you removed for access.

SUBTASK 25-21-71-860-010

(3) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT

END OF TASK

TASK 25-21-71-000-803

6. Horseshoe Ceiling Panel Removal

(Figure 403)

A. General

(1) This task includes the steps to remove the forward horseshoe panel assembly [2] from the passenger cabin.

B. References

Reference	Title
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Prepare for the Removal

SUBTASK 25-21-71-860-011

(1) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

SUBTASK 25-21-71-010-034

(2) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-021

WARNING WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that this circuit breaker is open and has safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-010-024

(4) If necessary, remove the monuments or furnishings that prevent the panel removal.

SUBTASK 25-21-71-010-022

(5) If necessary to get access, remove the overhead stowage bins or overhead stowage bin modules.

(a) Do one of these tasks: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

SUBTASK 25-21-71-010-023

(6) You must remove the forward cove bullnose panel assembly before you remove the horseshoe panel assembly [2].

(a) If you have not removed the forward cove bullnose panel assembly, then do this task : Cove Bullnose Ceiling Panel Removal, TASK 25-21-71-000-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Horseshoe Ceiling Panel Removal

SUBTASK 25-21-71-010-005

(1) Do these steps to open the cove dome panel [29] that is in the center of the horseshoe panel assembly [2]:

(a) Find the two access holes in the clearance space forward of the horseshoe panel assembly [2].

(b) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(c) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let the cove dome panel open a small distance.

(d) Disconnect the lanyard [30].

(e) Open the cove dome panel [29] fully.

SUBTASK 25-21-71-020-042

(2) Disconnect the electrical connectors [31].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-043

(3) Disconnect the electrical connector [32].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-044

(4) Do these steps to disconnect the horseshoe panel assembly [2] from the forward entry panel assembly [4]:

(a) If necessary, cut and discard the cable ties to disconnect the wire harness from the clamps.

(b) Remove the screw [42] and washer [43] to disconnect the wire harness clamp.

(c) Remove the screws [40] and washers [41].

(d) Remove the bolts [44] and washers [45] from the corner brackets.

SUBTASK 25-21-71-020-045

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(5) Do these steps to remove the horseshoe panel assembly [2]:

(a) Remove the bolts [33], bolt [34], bolts [35], washers [36], bushings [37], bushings [38], and nuts [39] from each of the tie rod assemblies.

NOTE: Keep the bolts, washers, bushings, and nuts with each tie rod. They are not all the same.


1) Move the tie rods in the UP direction for clearance.

(b) Carefully lower the horseshoe panel assembly [2] out of its position.

(c) Remove the horseshoe panel assembly [2].

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

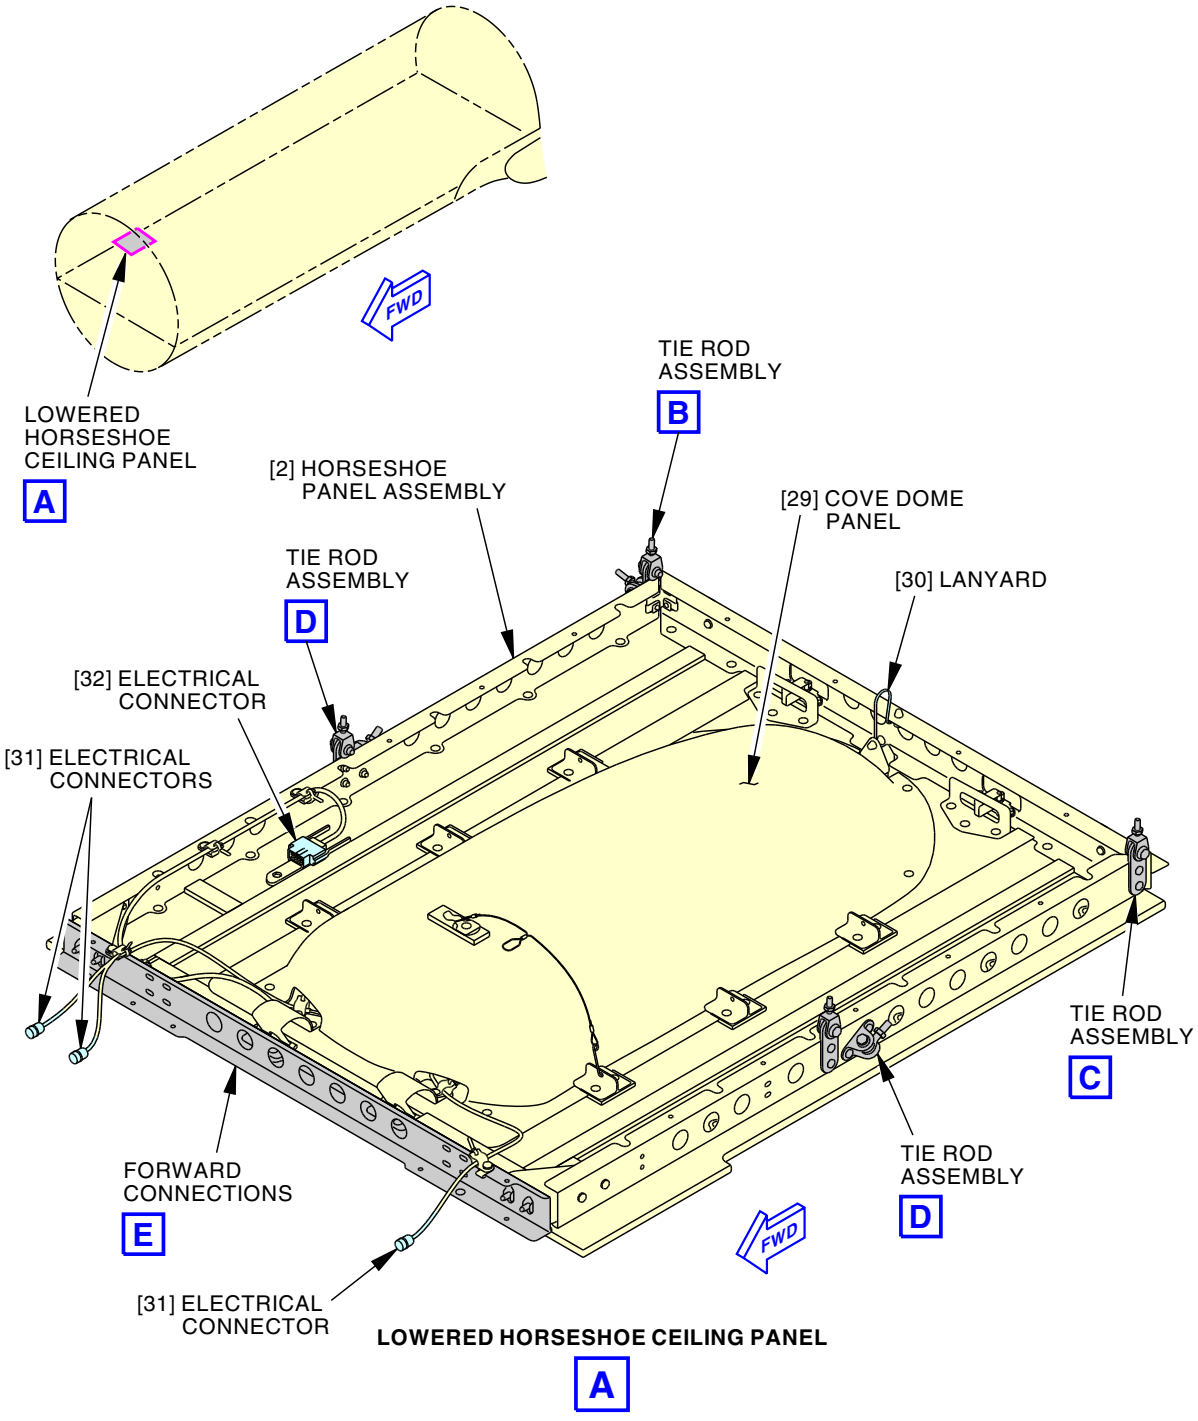

2411868 S00061529311_V1


Horseshoe Ceiling Panel Installation
Figure 403/25-21-71-990-808 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

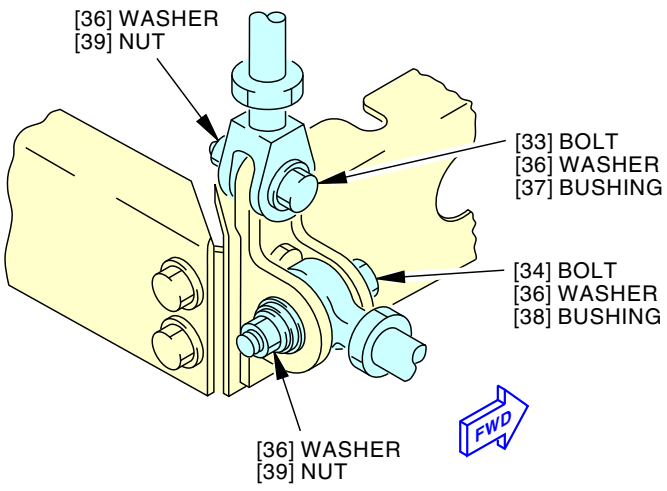


TIE ROD ASSEMBLY

B

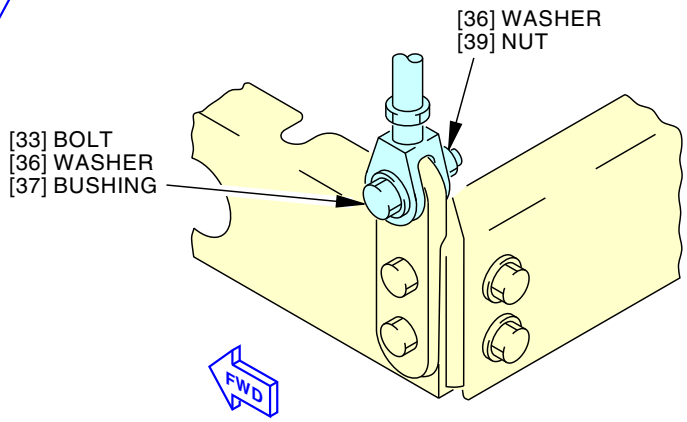

TIE ROD ASSEMBLY

C

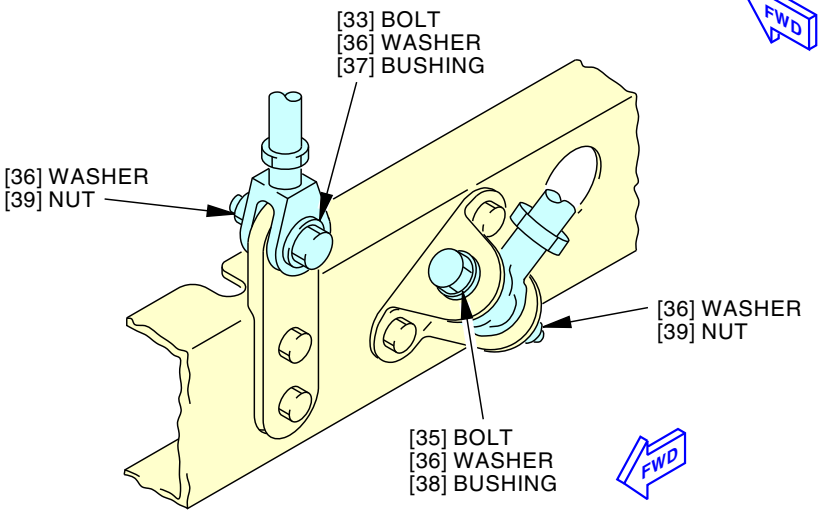


TIE ROD ASSEMBLY
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

D

2411869 S00061529312_V1

Horseshoe Ceiling Panel Installation
Figure 403/25-21-71-990-808 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

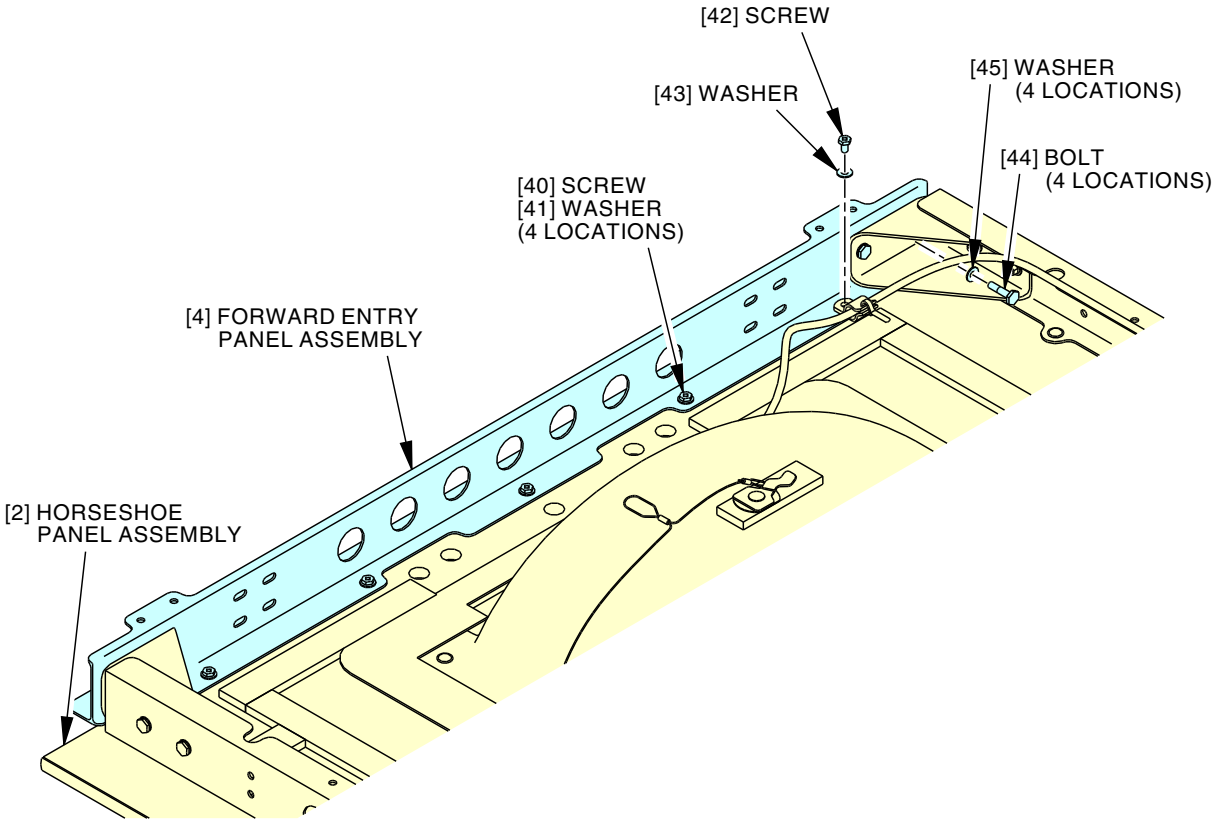

2540110 S0000601833_V1

Horseshoe Ceiling Panel Installation
Figure 403/25-21-71-990-808 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-803

7. Horseshoe Ceiling Panel Installation

(Figure 403)

A. General

(1) This task includes the steps to install the forward horseshoe panel assembly [2] in the passenger cabin.

B. References

Reference	Title
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Horseshoe Ceiling Panel Installation

SUBTASK 25-21-71-420-007

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to install the horseshoe panel assembly [2]:

(a) Lift the horseshoe panel assembly [2] into its correct position.

(b) If necessary, open the cove dome panel [29].

(c) Connect the horseshoe panel assembly [2] to the tie rods with the bolts [33], bolt [34], bolts [35], washers [36], bushings [37], bushings [38], and nuts [39].

1) Make sure that the lanyard tab is pointed in the UP direction.

SUBTASK 25-21-71-420-008

(2) Do these steps to connect the horseshoe panel assembly [2] to the forward entry panel assembly [4]:

(a) Install the bolts [44] and washers [45] to the corner brackets.

1) Make sure that the clearance between the panels is 0.20 in. (0.51 cm) to 0.30 in. (0.76 cm).

(b) Install the screws [40] and washers [41].

(c) Install the screw [42] and washer [43] to connect the wire harness clamp.

(d) If removed, install new cable ties to connect the wire harness to the clamps.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-420-035

(3) Connect the electrical connector [32].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-036

(4) Connect the electrical connectors [31].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-410-004

(5) Do these steps to close and lock the cove dome panel [29]:

(a) Attach the lanyard [30].

(b) Close the cove dome panel [29].

(c) Find the two access holes in the clearance space forward of the horseshoe panel assembly [2].

(d) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(e) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) clockwise.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-410-021

(1) Do this task to install the forward cove bullnose panel assembly: Cove Bullnose Ceiling Panel Installation, TASK 25-21-71-400-802.

SUBTASK 25-21-71-410-022

(2) If removed, install the overhead stowage bins or overhead stowage bin modules.

(a) Do one of these tasks: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

SUBTASK 25-21-71-410-023

(3) Install the monuments or furnishings that you removed for access.

SUBTASK 25-21-71-860-029

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-410-035

(5) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-012

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

——— END OF TASK ———

TASK 25-21-71-000-804

8. Cove Horseshoe Ceiling Panel Removal

(Figure 404)

A. General

(1) This task includes the steps to remove the aft cove horseshoe panel assembly [6] from the passenger cabin.

B. References

Reference	Title
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)
31-31-11-000-801	Flight Data Recorder Removal (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Prepare for the Removal

SUBTASK 25-21-71-860-003

(1) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
C	9	C00109	FLIGHT RECORDER AC

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
C	10	C00468	FLIGHT RECORDER DC

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

SUBTASK 25-21-71-010-035

(2) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-023

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that this circuit breaker is open and has safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-010-011

(4) If it is necessary, remove the monuments or furnishings that prevent the panel removal.

SUBTASK 25-21-71-010-012

(5) If it is necessary to get access, remove the overhead stowage bins or overhead stowage bin modules.

(a) Do one of these tasks: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

SUBTASK 25-21-71-020-010

(6) You must remove the aft cove bullnose panel assembly [5] before you remove the cove horseshoe panel assembly [6].

(a) Do this task: Cove Bullnose Ceiling Panel Removal, TASK 25-21-71-000-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Cove Horseshoe Ceiling Panel Removal

SUBTASK 25-21-71-010-006

(1) Do these steps to open the cove dome panel [54] that is in the center of the cove horseshoe panel assembly [6]:

(a) Find the two access holes in the clearance space forward of the cove horseshoe panel assembly [6].

(b) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(c) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let the cove dome panel open a small distance.

(d) Disconnect the lanyard [50].

(e) Open the cove dome panel [54] fully.

SUBTASK 25-21-71-020-012

(2) Do this task: Flight Data Recorder Removal, TASK 31-31-11-000-801

SUBTASK 25-21-71-020-030

(3) Disconnect the electrical connectors [51].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-013

(4) Disconnect the electrical connector [53].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-015

(5) Disconnect the cove horseshoe panel assembly [6] from the aft entry panel assembly [7].

(a) Remove the bolts [66] and washers [67] from the bracket assemblies [52].

SUBTASK 25-21-71-020-016

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(6) Do these steps to remove the cove horseshoe panel assembly [6]:

(a) Remove the bolts [56], bolts [57], bolt [58], washers [59], washers [60], washers [61], lanyards [62], bushings [63], bushings [64], and nuts [65] from each of the tie rod assemblies.

NOTE: Keep the bolts, washers, bushings, and nuts with each tie rod. They are not all the same.


1) If necessary, move the tie rods in the UP direction for clearance.

(b) Carefully lower the cove horseshoe panel assembly [6] out of its position.

(c) Remove the cove horseshoe panel assembly [6].

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

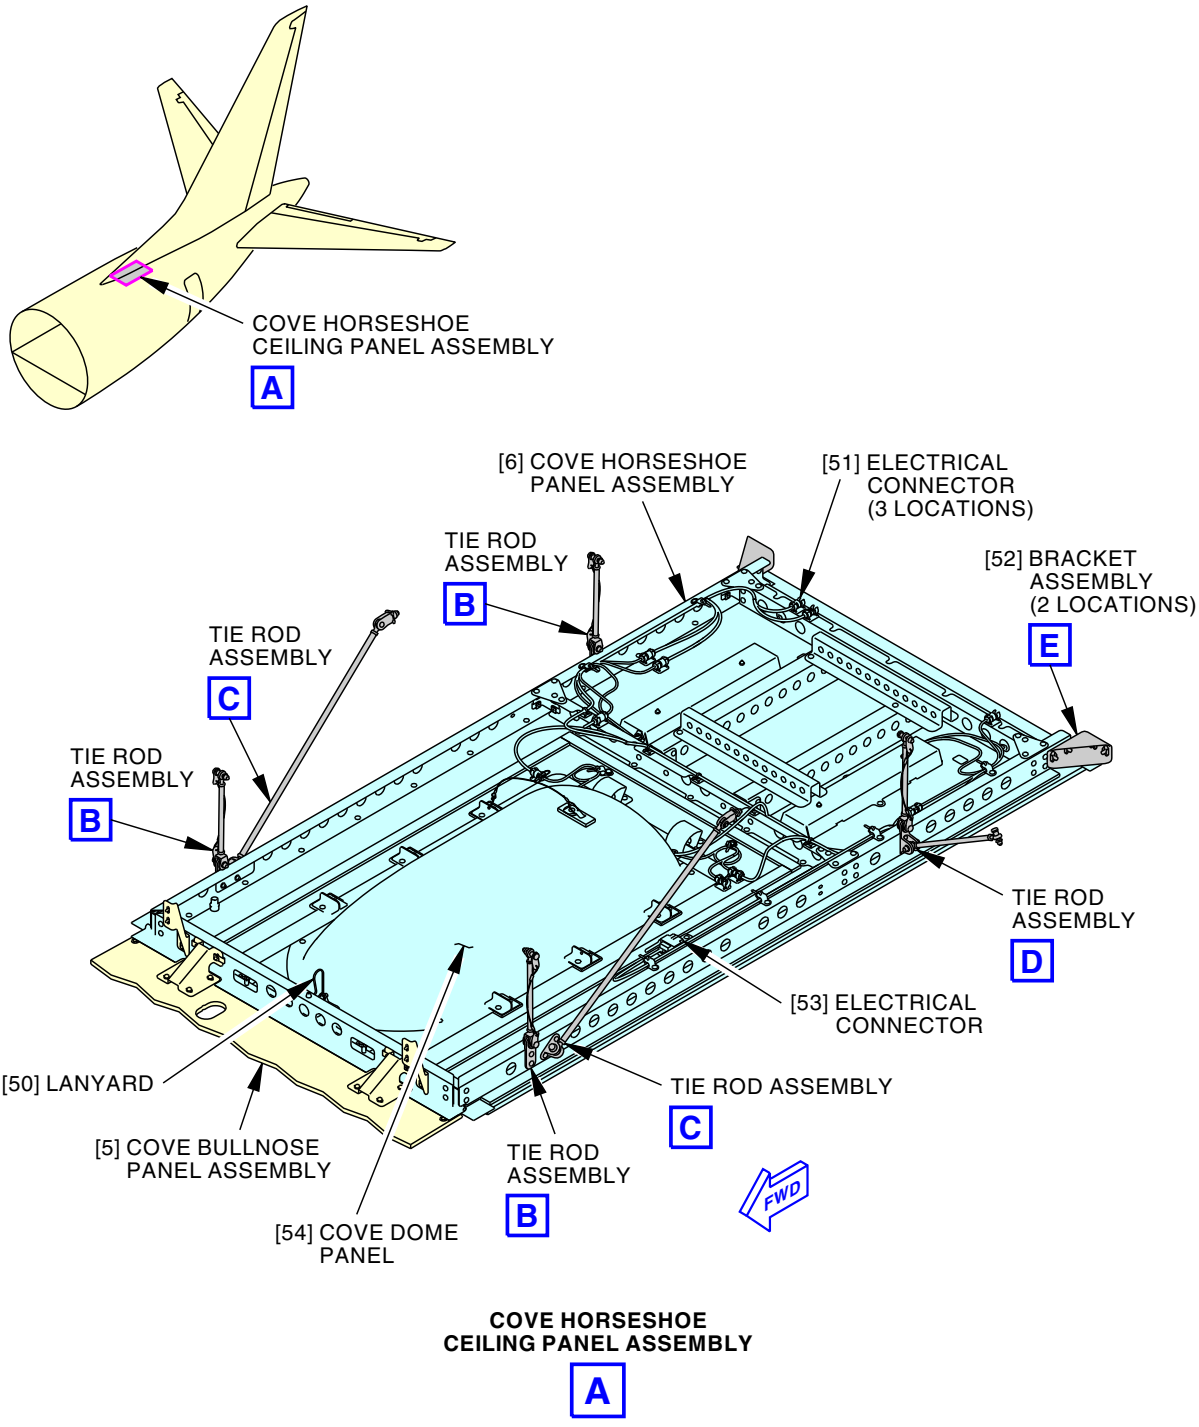

2411872 S00061529319_V1


Cove Horseshoe Ceiling Panel Installation
Figure 404/25-21-71-990-805 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

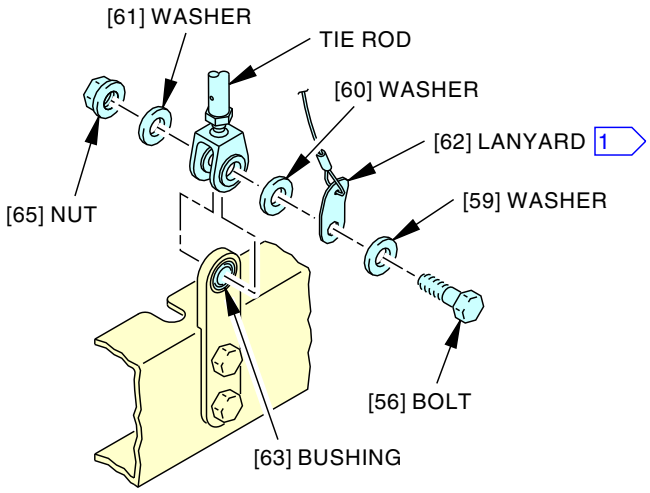

TIE ROD ASSEMBLY
(TYPICAL)

B

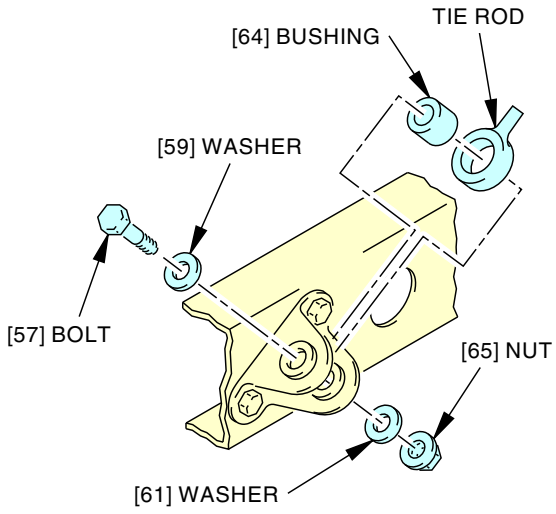

TIE ROD ASSEMBLY
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)


C

1 THE LANYARD TAB MUST BE POINTED IN THE UP DIRECTION.

2411873 S00061529320_V1


Cove Horseshoe Ceiling Panel Installation
Figure 404/25-21-71-990-805 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

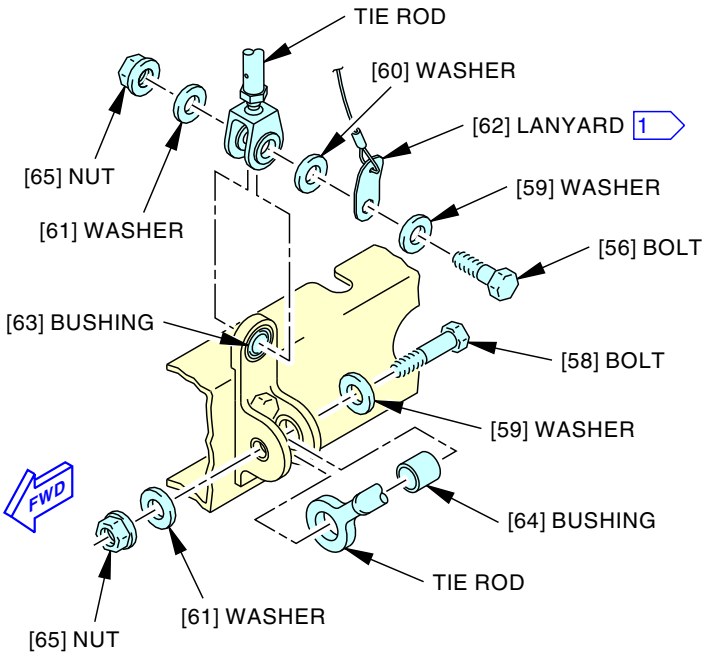

TIE ROD ASSEMBLY

D

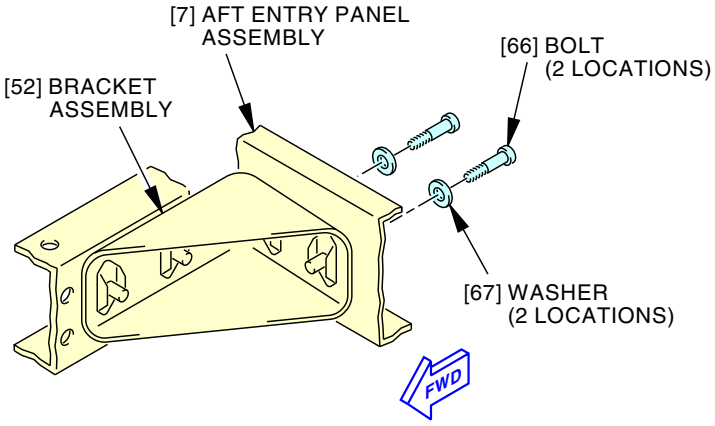

BRACKET ASSEMBLY
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

E

1 THE LANYARD TAB MUST BE POINTED IN THE UP DIRECTION.

2537297 S0000602311_V1

Cove Horseshoe Ceiling Panel Installation
Figure 404/25-21-71-990-805 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-804

9. Cove Horseshoe Ceiling Panel Installation

(Figure 404)

A. General

(1) This task includes the steps to install the aft cove horseshoe panel assembly [6] in the passenger cabin.

B. References

Reference	Title
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)
31-31-11-400-801	Flight Data Recorder Installation (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
6	Cove horseshoe panel assembly	Not Specified	

E. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

F. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

G. Cove Horseshoe Ceiling Panel Installation

SUBTASK 25-21-71-420-009

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to install the cove horseshoe panel assembly [6]:

(a) Lift the cove horseshoe panel assembly [6] into its correct position.

(b) If necessary, open the cove dome panel [54].

(c) Connect the cove horseshoe panel assembly [6] to the tie rods with the bolts [56], bolts [57], bolt [58], washers [59], washers [60], washers [61], lanyards [62], bushings [63], bushings [64], and nuts [65].

1) Make sure that the lanyard tab is pointed in the UP direction.

SUBTASK 25-21-71-420-010

(2) Connect the cove horseshoe panel assembly [6] to the aft entry panel assembly [7].

(a) Install the bolts [66] and washers [67] to the bracket assemblies [52].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the clearance between the panels is 0.20 in. (0.51 cm) to 0.30 in. (0.76 cm).

SUBTASK 25-21-71-420-011

(3) Connect the electrical connector [53].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-012

(4) Connect the electrical connectors [51].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-013

(5) Do this task: Flight Data Recorder Installation, TASK 31-31-11-400-801.

SUBTASK 25-21-71-410-011

(6) Do these steps to close and lock the cove dome panel [54]:

(a) Attach the lanyard [50].

(b) Close the cove dome panel [54].

(c) Find the two access holes in the clearance space forward of the cove horseshoe panel assembly [6].

(d) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(e) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) clockwise.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-410-008

(1) Do this task to install the aft cove bullnose panel assembly [5]: Cove Bullnose Ceiling Panel Installation, TASK 25-21-71-400-802.

SUBTASK 25-21-71-410-009

(2) If removed, install the overhead stowage bins or overhead stowage bin modules.

(a) Do one of these tasks: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

SUBTASK 25-21-71-410-010

(3) Install the monuments or furnishings that you removed for access.

SUBTASK 25-21-71-860-030

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-410-036

(5) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-004

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
C	9	C00109	FLIGHT RECORDER AC
C	10	C00468	FLIGHT RECORDER DC

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

END OF TASK

TASK 25-21-71-000-805

10. Close Out Ceiling Panel Removal

(Figure 405)

A. General

(1) This task includes the steps to remove the forward close out panel assembly from the passenger cabin.

B. Tools/Equipment

Reference	Description
STD-6761	Wrench - Allen, 5/32 inch

C. Location Zones

Zone	Area
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Prepare for the Removal

SUBTASK 25-21-71-860-005

(1) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT

SUBTASK 25-21-71-010-030

(2) If it is necessary, remove the monuments or furnishings that prevent the panel removal.

E. Close Out Ceiling Panel Removal

SUBTASK 25-21-71-010-016

(1) Do these steps to open the close out door [76] that is in the center of the close out panel assembly [3]:

(a) Find the two access holes in the close out door [76].

(b) Put a 5/32 inch allen wrench, STD-6761, through the access holes.

(c) Turn the 5/32 inch allen wrench, STD-6761, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let the close out door open a small distance.

(d) Disconnect the lanyard [75].

(e) Open the close out door [76] fully.

SUBTASK 25-21-71-020-018

(2) Disconnect the electrical connector [70].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-020

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(3) Do these steps to remove the close out panel assembly [3]:


(a) Remove the screws [71] and washers [72] from the brackets [74].

(b) Carefully lower the close out panel assembly [3] out of its position.

(c) Remove the close out panel assembly [3].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

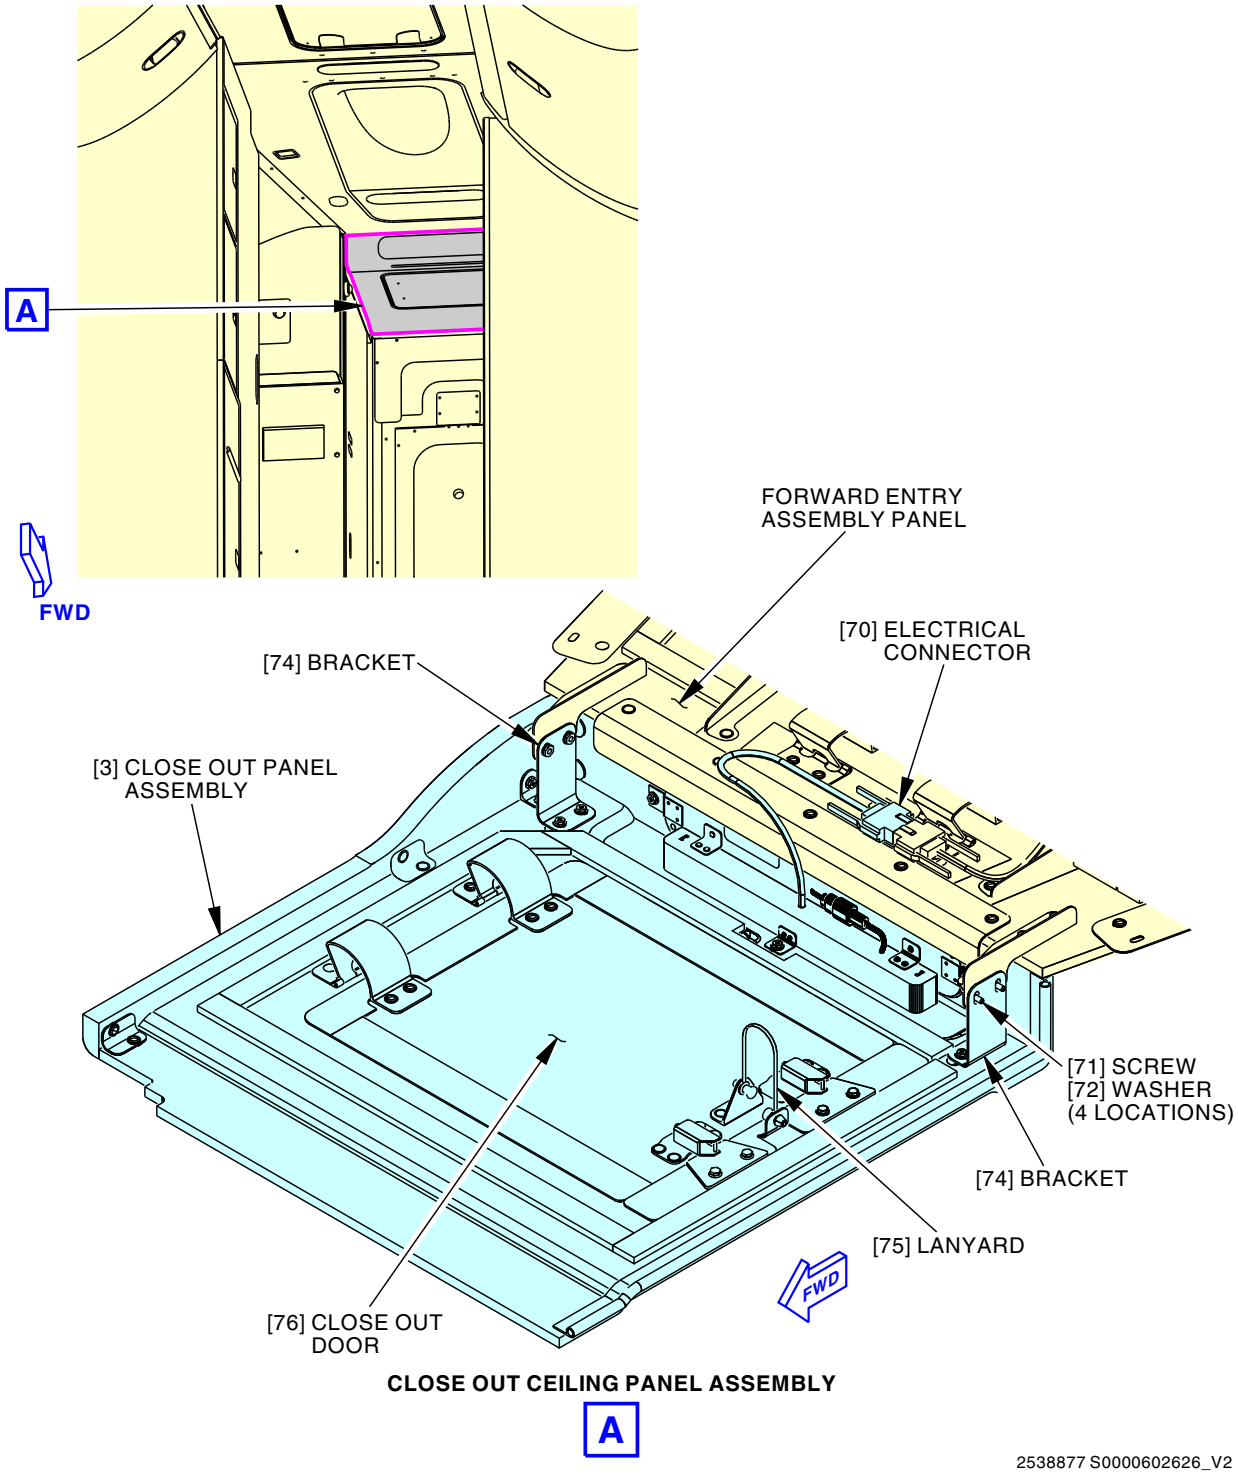

Close Out Ceiling Panel Installation
Figure 405/25-21-71-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-805

11. Close Out Ceiling Panel Installation

(Figure 405)

A. General

(1) This task includes the steps to install the forward close out panel assembly in the passenger cabin.

B. Tools/Equipment

Reference	Description
STD-6761	Wrench - Allen, 5/32 inch

C. Location Zones

Zone	Area
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00

D. Close Out Ceiling Panel Installation

SUBTASK 25-21-71-420-017

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to install the close out panel assembly [3]:

(a) Lift the close out panel assembly [3] into its correct position.

(b) If it is necessary, open the close out door [76].

(c) Install the screws [71] and washers [72] to the brackets [74].

1) Make sure that the clearance on the left side and right side of the panel is equal.

SUBTASK 25-21-71-420-018

(2) Connect the electrical connector [70].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-410-012

(3) Do these steps to close and lock the close out door [76]:

(a) Attach the lanyard [75].

(b) Close the close out door [76].

(c) Find the two access holes in the close out door [76].

(d) Put a 5/32 inch allen wrench, STD-6761, through the access holes.

(e) Turn the 5/32 inch allen wrench, STD-6761, 90°arc (2 rad) clockwise.

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-410-028

(1) Install the monuments or furnishings that you removed for access.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-860-006

(2) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT

END OF TASK

TASK 25-21-71-000-806

12. Forward Entry Ceiling Panel Removal

(Figure 406)

A. General

(1) This task includes the steps to remove the forward entry panel assembly [4] from the passenger cabin.

B. References

Reference	Title
23-75-00-040-801	Video Surveillance System - Deactivation (P/B 201)
25-21-30-020-801	Forward Entry Door Doorway Header Panel Removal (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Prepare for the Removal

SUBTASK 25-21-71-860-013

(1) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

SUBTASK 25-21-71-010-036

(2) To get access to the P91 and P92 panels, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-025

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that these circuit breakers are open and have safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	3	C00140	WORK AND THSHD LTS

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-040-002

(4) Do this task: Video Surveillance System - Deactivation, TASK 23-75-00-040-801.

SUBTASK 25-21-71-010-025

(5) If necessary, remove the monuments or furnishings that prevent the panel removal.

SUBTASK 25-21-71-010-026

(6) If necessary, remove the horseshoe panel assembly [2].

(a) To remove the horseshoe panel assembly [2], do this task: Horseshoe Ceiling Panel Removal, TASK 25-21-71-000-803.

SUBTASK 25-21-71-010-027

(7) You must remove the close out panel assembly before you remove the forward entry panel assembly [4].

(a) If you have not removed the close out panel assembly, then do this task: Close Out Ceiling Panel Removal, TASK 25-21-71-000-805.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-010-028

(8) Do this task to remove the left and right doorway header panels: Forward Entry Door Doorway Header Panel Removal, TASK 25-21-30-020-801.

G. Forward Entry Ceiling Panel Removal

SUBTASK 25-21-71-010-029

(1) Do these steps to open the cove dome panel [81] that is in the center of the forward entry panel assembly [4]:

(a) Find the two access holes in the clearance that is immediately forward of the cove dome panel [81].

(b) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(c) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let you open the cove dome panel a small distance.

(d) Disconnect the lanyard [83].

(e) Open the cove dome panel [81] fully.

SUBTASK 25-21-71-020-046

(2) Disconnect the electrical connector [82].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-047

(3) Disconnect the electrical connectors [85].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-053

(4) Disconnect the electrical connector [79].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-048

(5) Remove the strap [84] to disconnect the muffler assembly from the duct assembly.

SUBTASK 25-21-71-020-049

(6) If the horseshoe panel assembly [2] is installed, then do these steps to disconnect it from the forward entry panel assembly [4]:

(a) Disconnect the three electrical connectors [80].

1) Install caps on the electrical connections to prevent contamination.

(b) If necessary, cut and discard the cable ties to disconnect the wire harness from the clamps on the forward entry panel assembly [4].

(c) Remove the screw [97] and washer [98] to disconnect the wire harness clamp.

(d) Remove the screws [95] and washers [96].

(e) Remove the bolts [99] and washers [100] to disconnect the corner brackets.

SUBTASK 25-21-71-020-050

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(7) Do these steps to remove the forward entry panel assembly [4]:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the bolts [86], bolt [87], bolts [88], bolt [89], washers [90], bushings [91], bushings [92], bushing [93], and nuts [94] from each of the tie rod assemblies.

NOTE: Keep the bolts, washers, bushings, and nuts with each tie rod. They are not all the same.


1) If necessary, move the tie rods in the UP direction for clearance.

(b) Carefully lower the forward entry panel assembly [4] out of its position.

(c) Remove the forward entry panel assembly [4].

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

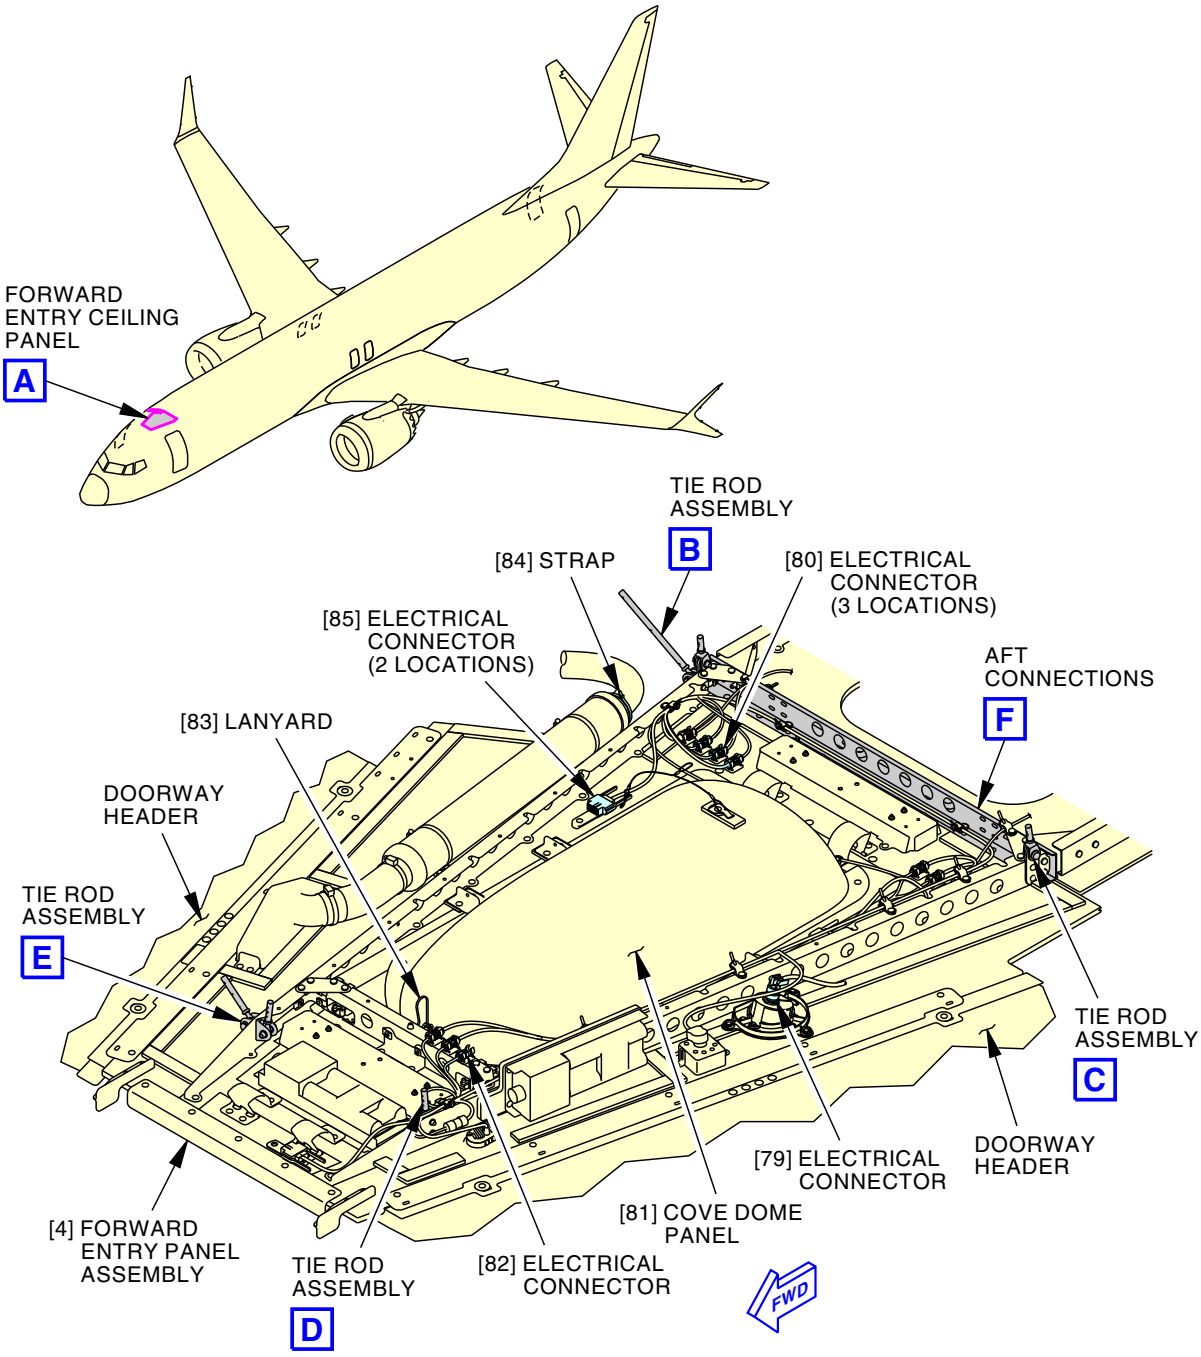

2990928 S0000767979_V1

Forward Entry Ceiling Panel Installation
Figure 406/25-21-71-990-809 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

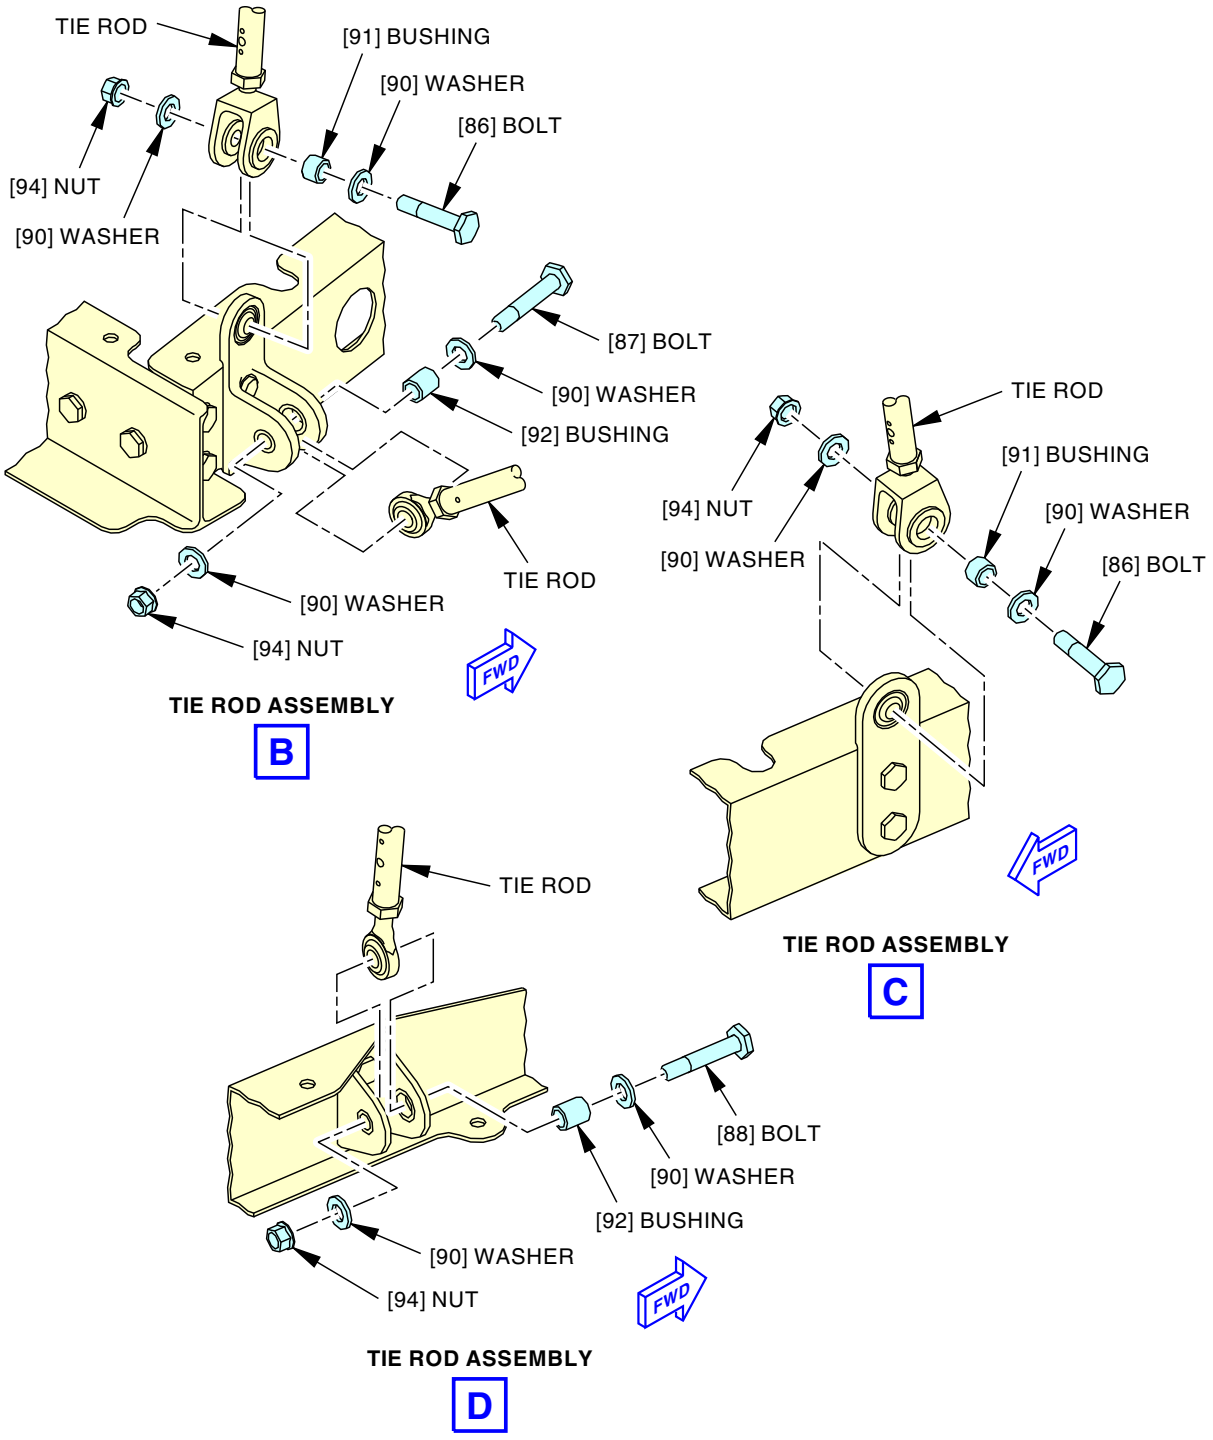

2541070 S0000602205_V1

Forward Entry Ceiling Panel Installation
Figure 406/25-21-71-990-809 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

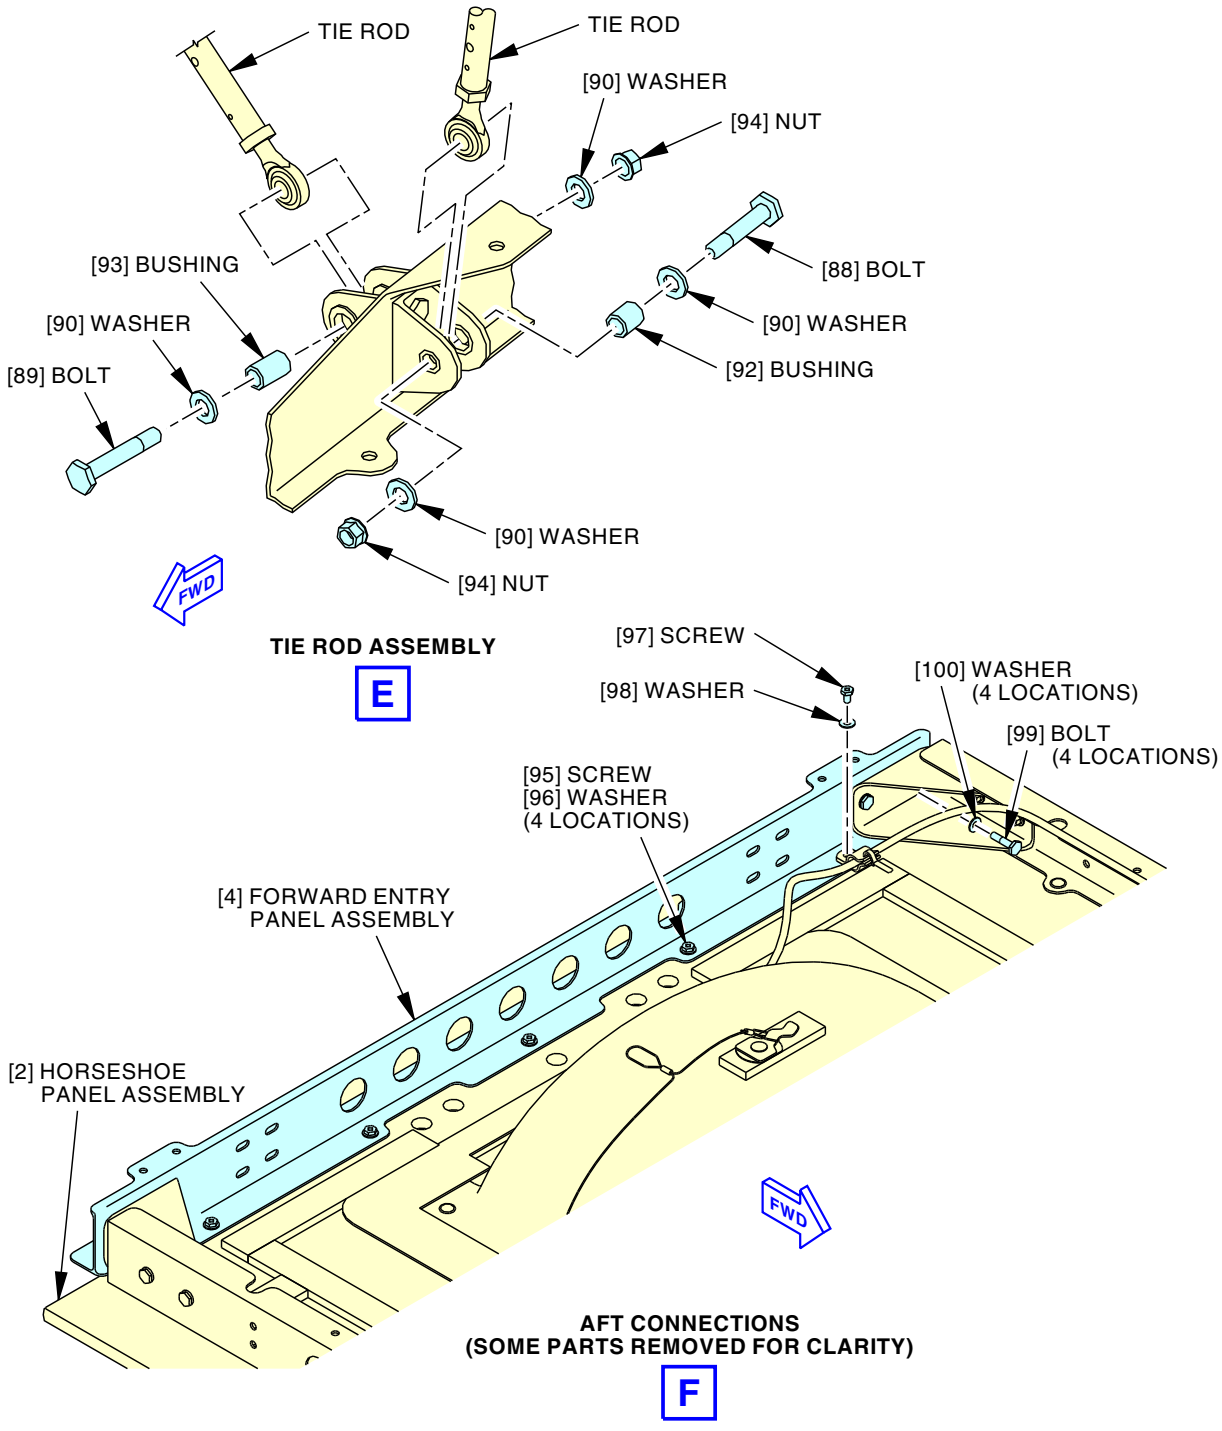

2541074 S0000602206_V1

Forward Entry Ceiling Panel Installation
Figure 406/25-21-71-990-809 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-806

13. Forward Entry Ceiling Panel Installation

(Figure 406)

A. General

(1) This task includes the steps to install the forward entry panel assembly [4] in the passenger cabin.

B. References

Reference	Title
23-75-00-440-801	Video Surveillance System - Activation (P/B 201)
25-21-30-420-801	Forward Entry Door Doorway Header Panel Installation (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Forward Entry Ceiling Panel Installation

SUBTASK 25-21-71-420-020

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to install the forward entry panel assembly [4]:

(a) Lift the forward entry panel assembly [4] into its correct position.

(b) If necessary, open the cove dome panel [81].

(c) Connect the forward entry panel assembly [4] to the tie rods with the bolts [86], bolt [87], bolts [88], bolt [89], washers [90], bushings [91], bushings [92], bushing [93], and nuts [94].

SUBTASK 25-21-71-420-021

(2) If the horseshoe panel assembly [2] is installed, then do these steps to connect it to the forward entry panel assembly [4]:

(a) Install the bolts [99] and washers [100] to connect the corner brackets.

1) Make sure that the clearance between the panels is 0.20 in. (0.51 cm) to 0.30 in. (0.76 cm).

(b) Remove the screws [95] and washers [96].

(c) Install the screw [97] and washer [98] to connect the wire harness clamp.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) If removed, install new cable ties to connect the wire harness to the clamps.

(e) Connect the three electrical connectors [80].

1) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-037

(3) Install the strap [84] to connect the muffler assembly to the duct assembly.

SUBTASK 25-21-71-420-043

(4) Connect the electrical connector [79].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-038

(5) Connect the electrical connectors [85].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-039

(6) Connect the electrical connector [82].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-410-006

(7) Do these steps to close and lock the cove dome panel [81]:

(a) Attach the lanyard [83].

(b) Close the cove dome panel [81].

(c) Find the two access holes in the clearance that is immediately forward of the cove dome panel [81].

(d) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(e) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) clockwise.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-410-024

(1) Do this task to install the left and right doorway header panels: Forward Entry Door Doorway Header Panel Installation, TASK 25-21-30-420-801.

SUBTASK 25-21-71-410-025

(2) Do this task to install the close out panel assembly: Close Out Ceiling Panel Installation, TASK 25-21-71-400-805.

SUBTASK 25-21-71-410-026

(3) If removed, do this task to install the horseshoe panel assembly [2]: Horseshoe Ceiling Panel Installation, TASK 25-21-71-400-803.

SUBTASK 25-21-71-410-027

(4) Install the monuments or furnishings that you removed for access.

SUBTASK 25-21-71-440-002

(5) Do this task: Video Surveillance System - Activation, TASK 23-75-00-440-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-860-031

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(6) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	3	C00140	WORK AND THSHD LTS

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-410-037

(7) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-014

(8) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-000-807

14. Aft Entry Ceiling Panel Removal

(Figure 407)

A. General

(1) This task includes the steps to remove the aft entry panel assembly from the passenger cabin.

B. References

Reference	Title
25-21-24-000-801	Aft Door Doorway Header Panel Removal (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Prepare for the Removal

SUBTASK 25-21-71-860-007

(1) Make sure that these circuit breakers are open and have safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	18	C01949	CABIN EMER LIGHTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-010-037

(2) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-027

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that this circuit breaker is open and has safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-010-017

(4) If necessary, remove the monuments or furnishings that prevent the panel removal.

SUBTASK 25-21-71-010-013

(5) If necessary, remove the cove horseshoe panel assembly [6].

(a) To remove the cove horseshoe panel assembly [6], do this task: Cove Horseshoe Ceiling Panel Removal, TASK 25-21-71-000-804.

SUBTASK 25-21-71-010-014

(6) Do this task to remove the left and right doorway header panels: Aft Door Doorway Header Panel Removal, TASK 25-21-24-000-801.

G. Aft Entry Ceiling Panel Removal

SUBTASK 25-21-71-010-010

(1) Do these steps to open the access panel [114]:

(a) Find the two access holes in the clearance that is immediately aft of the access panel [114].

(b) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(c) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let you open the access panel a small distance.

(d) Disconnect the lanyard [110].

(e) Open the access panel fully.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-010-015

(2) Do these steps to open the door panel [113]:

(a) Find the three access holes in the clearance that is immediately forward of the door panel [113].

(b) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(c) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) counterclockwise to release the latches.

NOTE: This will let you open the door panel a small distance.

(d) Disconnect the lanyard [110].

(e) Open the door panel fully.

SUBTASK 25-21-71-020-025

(3) Disconnect the electrical connectors on the battery packs [116].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-032

(4) Disconnect the electrical connector [111].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-033

(5) Disconnect the electrical connectors [117].

(a) Install caps on the electrical connections to prevent contamination.

SUBTASK 25-21-71-020-026

(6) Remove the straps [112] to disconnect the hoses and ducts from the aft entry panel assembly [7].

SUBTASK 25-21-71-020-027

(7) If the cove horseshoe panel assembly [6] is installed, then do these steps to disconnect it from the aft entry panel assembly [7]:

(a) Disconnect the three electrical connectors [115].

1) Install caps on the electrical connections to prevent contamination.

(b) Remove the bolts [127] and washers [128] to disconnect the corner brackets.

SUBTASK 25-21-71-020-028

CAUTION

DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(8) Do these steps to remove the aft entry panel assembly [7]:

(a) Remove the bolts [119], bolts [120], washers [121], washers [122], bushings [123], bushings [124], nuts [125], and lanyards [126] from each of the tie rod assemblies.

NOTE: Keep the bolts, washers, bushings, and nuts with each tie rod. They are not all the same.


1) If necessary, move the tie rods in the UP direction for clearance.

(b) Carefully lower the aft entry panel assembly [7] out of its position.

(c) Remove the aft entry panel assembly [7].

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

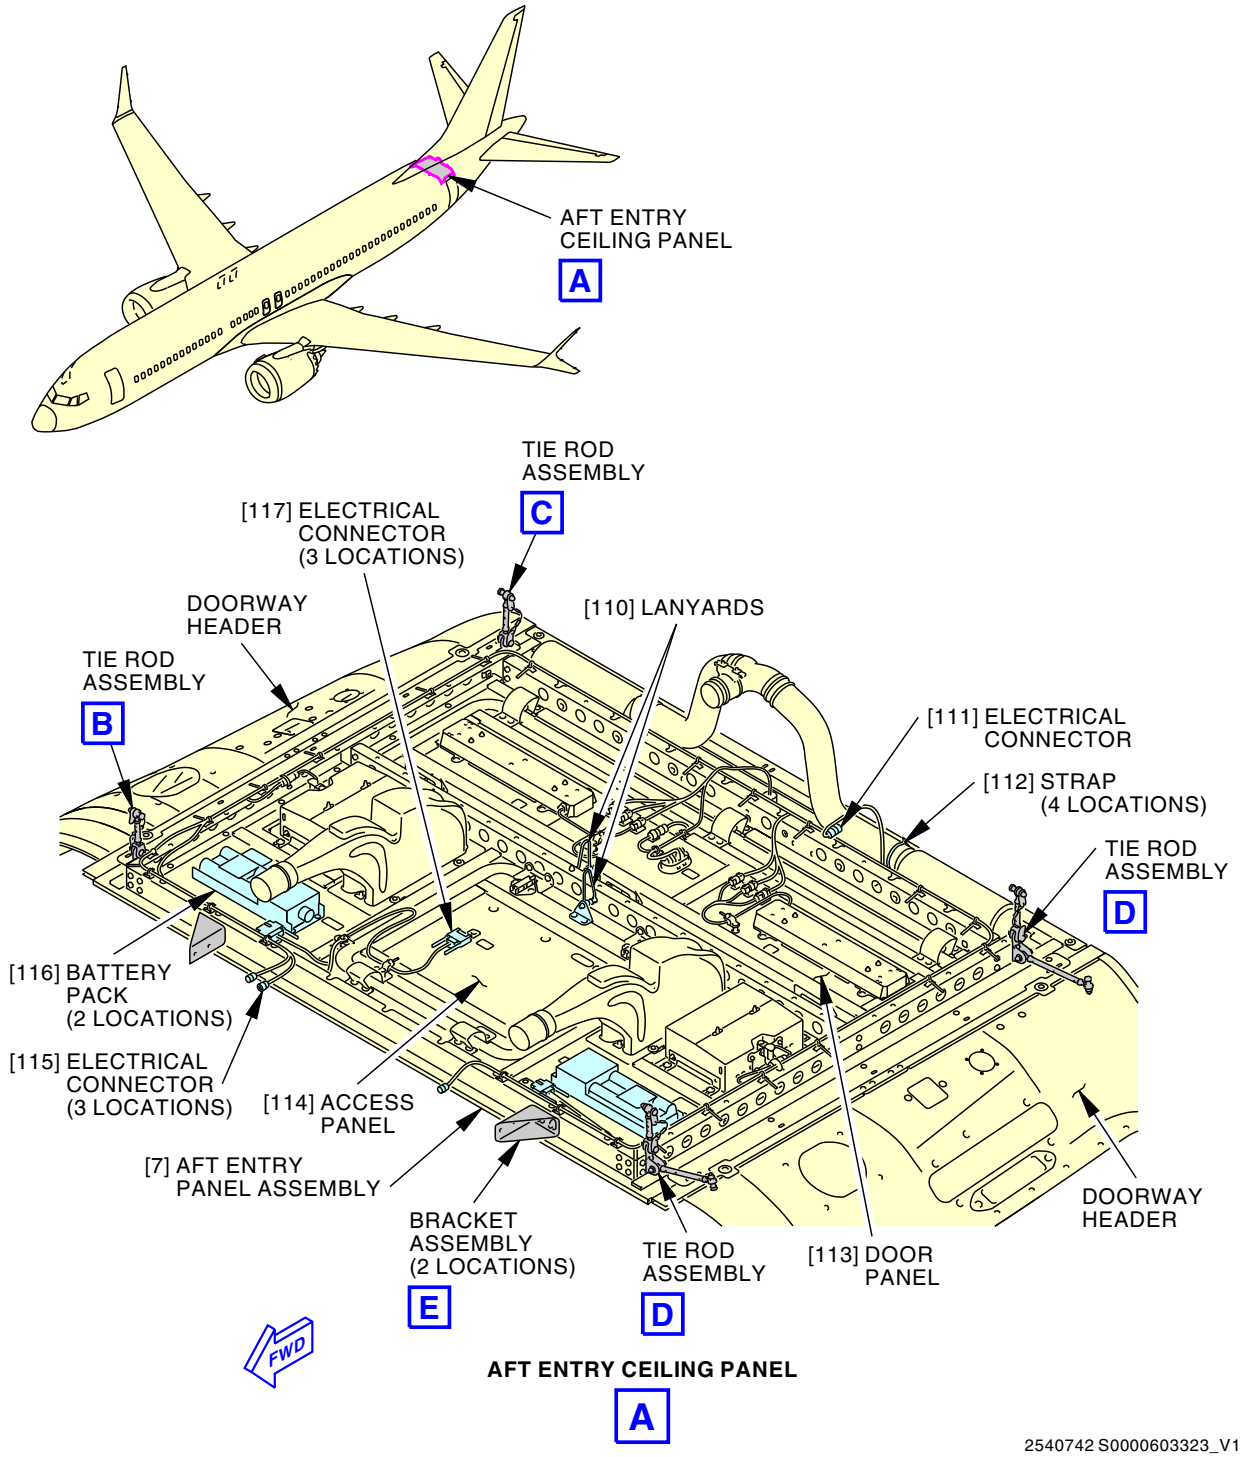

2540742 S0000603323_V1


Aft Entry Ceiling Panel Installation
Figure 407/25-21-71-990-807 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

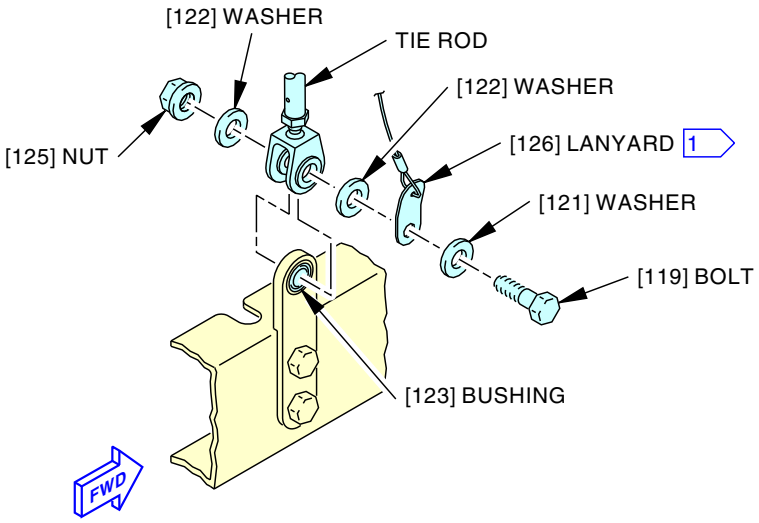

TIE ROD ASSEMBLY

B

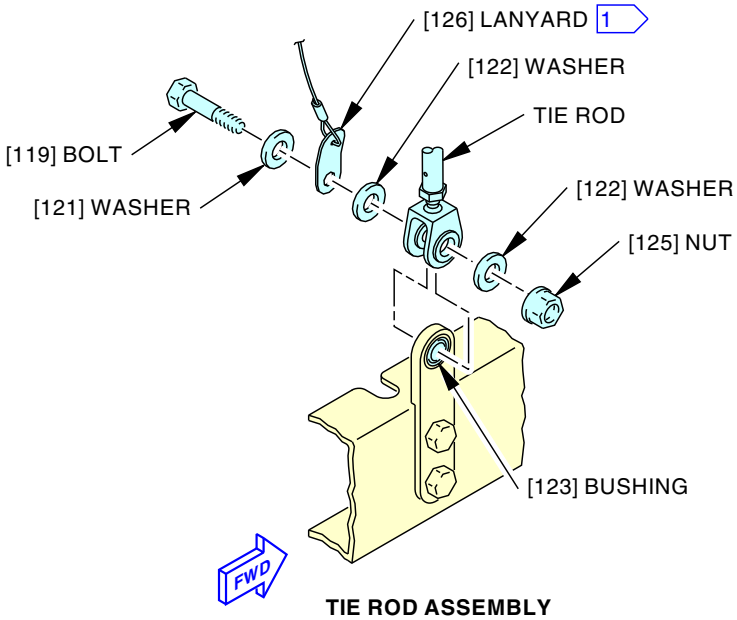


TIE ROD ASSEMBLY

C

2540760 S0000603324_V1


Aft Entry Ceiling Panel Installation
Figure 407/25-21-71-990-807 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

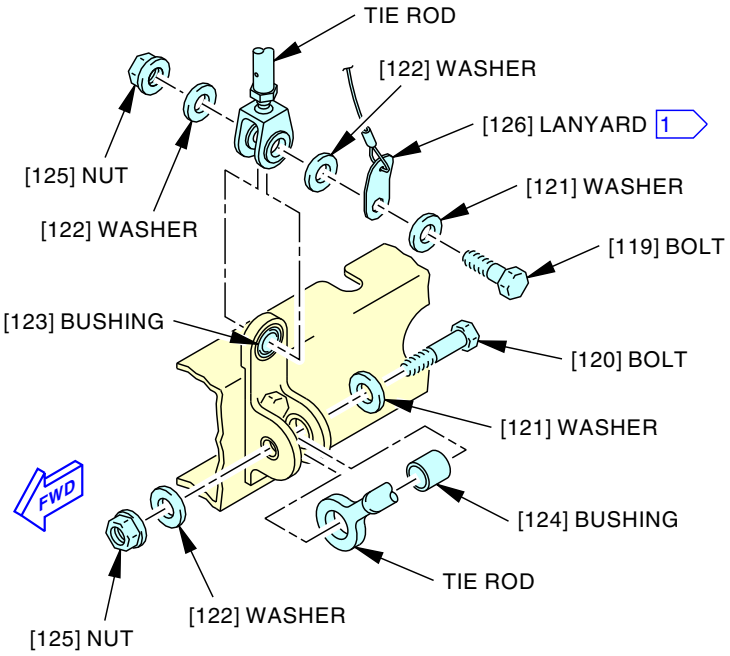

TIE ROD ASSEMBLY
(TYPICAL)

D

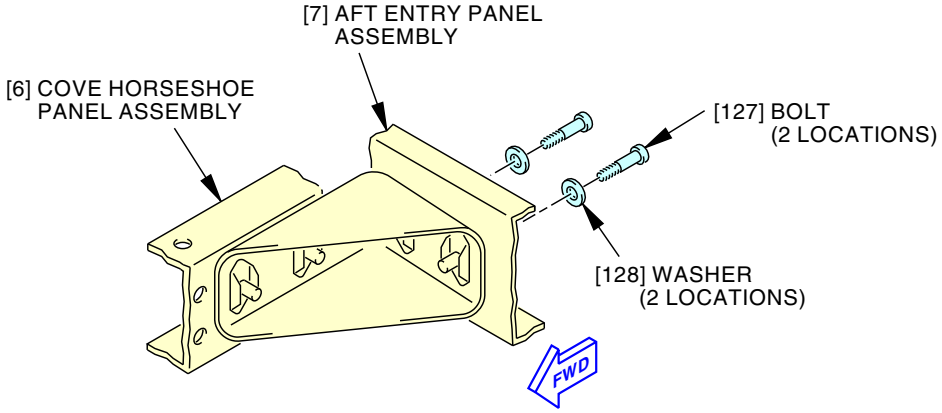

BRACKET ASSEMBLY
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

E

1 THE LANYARD TAB MUST BE POINTED IN THE UP DIRECTION.

2540769 S0000603325_V1

Aft Entry Ceiling Panel Installation
Figure 407/25-21-71-990-807 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-21-71-400-807

15. Aft Entry Ceiling Panel Installation

(Figure 407)

A. General

(1) This task includes the steps to install the aft entry panel assembly [7] in the passenger cabin.

B. References

Reference	Title
25-21-24-400-801	Aft Door Doorway Header Panel Installation (P/B 401)

C. Tools/Equipment

Reference	Description
STD-15030	Wrench - Allen, 1/8 inch

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
7	Aft entry panel assembly	Not Specified	

E. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

F. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

G. Aft Entry Ceiling Panel Installation

SUBTASK 25-21-71-420-022

CAUTION DO NOT SCRATCH OR HIT THE CEILING PANELS WHEN YOU REMOVE OR INSTALL THEM. YOU CAN EASILY CAUSE DAMAGE TO THE CEILING PANELS.

(1) Do these steps to install the aft entry panel assembly [7]:

(a) Lift the aft entry panel assembly [7] into its correct position.

(b) If necessary, open the access panel [114] and the door panel [113].

(c) Connect the aft entry panel assembly [7] to the tie rods with the bolts [119], bolts [120], washers [121], washers [122], bushings [123], bushings [124], nuts [125], and lanyards [126].

1) Make sure that the lanyard tab is pointed in the UP direction.

SUBTASK 25-21-71-420-023

(2) If the cove horseshoe panel assembly [6] is installed, then do these steps to connect it to the aft entry panel assembly [7]:

(a) Install the bolts [127] and washers [128] to connect the corner brackets.

1) Make sure that the clearance between the panels is 0.20 in. (0.51 cm) to 0.30 in. (0.76 cm).

(b) Connect the three electrical connectors [115].

1) Remove the caps from the electrical connections.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-420-024

(3) Install the straps [112] to connect the hoses and ducts to the aft entry panel assembly [7].

SUBTASK 25-21-71-420-025

(4) Connect the electrical connectors [117].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-026

(5) Connect the electrical connector [111].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-420-027

(6) Connect the electrical connectors on the battery packs [116].

(a) Remove the caps from the electrical connections.

SUBTASK 25-21-71-410-013

(7) Do these steps to close and lock the door panel [113]:

(a) Attach the lanyard [110].

(b) Close the door panel [113].

(c) Find the three access holes in the clearance that is immediately forward of the door panel [113].

(d) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(e) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) clockwise.

SUBTASK 25-21-71-410-014

(8) Do these steps to close and lock the access panel [114]:

(a) Attach the lanyard [110].

(b) Close the access panel [114].

(c) Find the two access holes in the clearance that is immediately aft of the access panel [114].

(d) Put a 1/8 inch allen wrench, STD-15030, through the access holes.

(e) Turn the 1/8 inch allen wrench, STD-15030, 90°arc (2 rad) clockwise.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 25-21-71-410-015

(1) Do this task to install the left and right doorway header panels: Aft Door Doorway Header Panel Installation, TASK 25-21-24-400-801.

SUBTASK 25-21-71-410-016

(2) If removed, do this task to install the cove horseshoe panel assembly [6]: Cove Horseshoe Ceiling Panel Installation, TASK 25-21-71-400-804

SUBTASK 25-21-71-410-017

(3) Install the monuments or furnishings that you removed for access.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-21-71-860-032

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-21-71-410-038

(5) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-21-71-860-008

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
E	9	C00155	ENTRY LIGHTS DIM

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	18	C01949	CABIN EMER LIGHTS

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER SEATS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Passenger Seat Removal

(2) Passenger Seat Installation

TASK 25-22-00-000-801

2. Passenger Seat Removal

(Figure 401)

A. General

(1) This task has instructions to remove a passenger seat (referred to as passenger seat [1]).

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-6918	Cart - Passenger Seat Part #: J25008-57 Supplier: 81205 Opt Part #: J25008-1 Supplier: 81205

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Passenger Seat Removal

SUBTASK 25-22-00-020-001

(1) Remove the covers on the front and rear seat tracks.

SUBTASK 25-22-00-860-002

(2) Disconnect the electrical connectors for the electrical equipment, if installed.

SUBTASK 25-22-00-020-002

(3) Loosen the aft track fitting screws [2] on the rear leg track fitting to the fully up position.

NOTE: Use care to not back out the fitting screw too far, as damage can occur to the screw retention device.

SUBTASK 25-22-00-020-003

(4) Loosen the anti-rattle devices [4] on the front leg stud to the full up position.

SUBTASK 25-22-00-010-001

(5) Move the passenger seat [1] forward or aft approximately 0.50 in. (12.70 mm) to align the flanges on the seat track fittings with the holes in the seat tracks.

SUBTASK 25-22-00-020-005

WARNING CAREFULLY LIFT, LOWER, OR MOVE THE SEATS. BECAUSE SOME SEATS HAVE A WEIGHT OF ALMOST 250 LB (113 KG), INJURIES TO PERSONNEL CAN OCCUR.


(6) Remove the passenger seat [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Use the seat cart, SPL-6918, to help move the passenger seat [1], if it is necessary.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

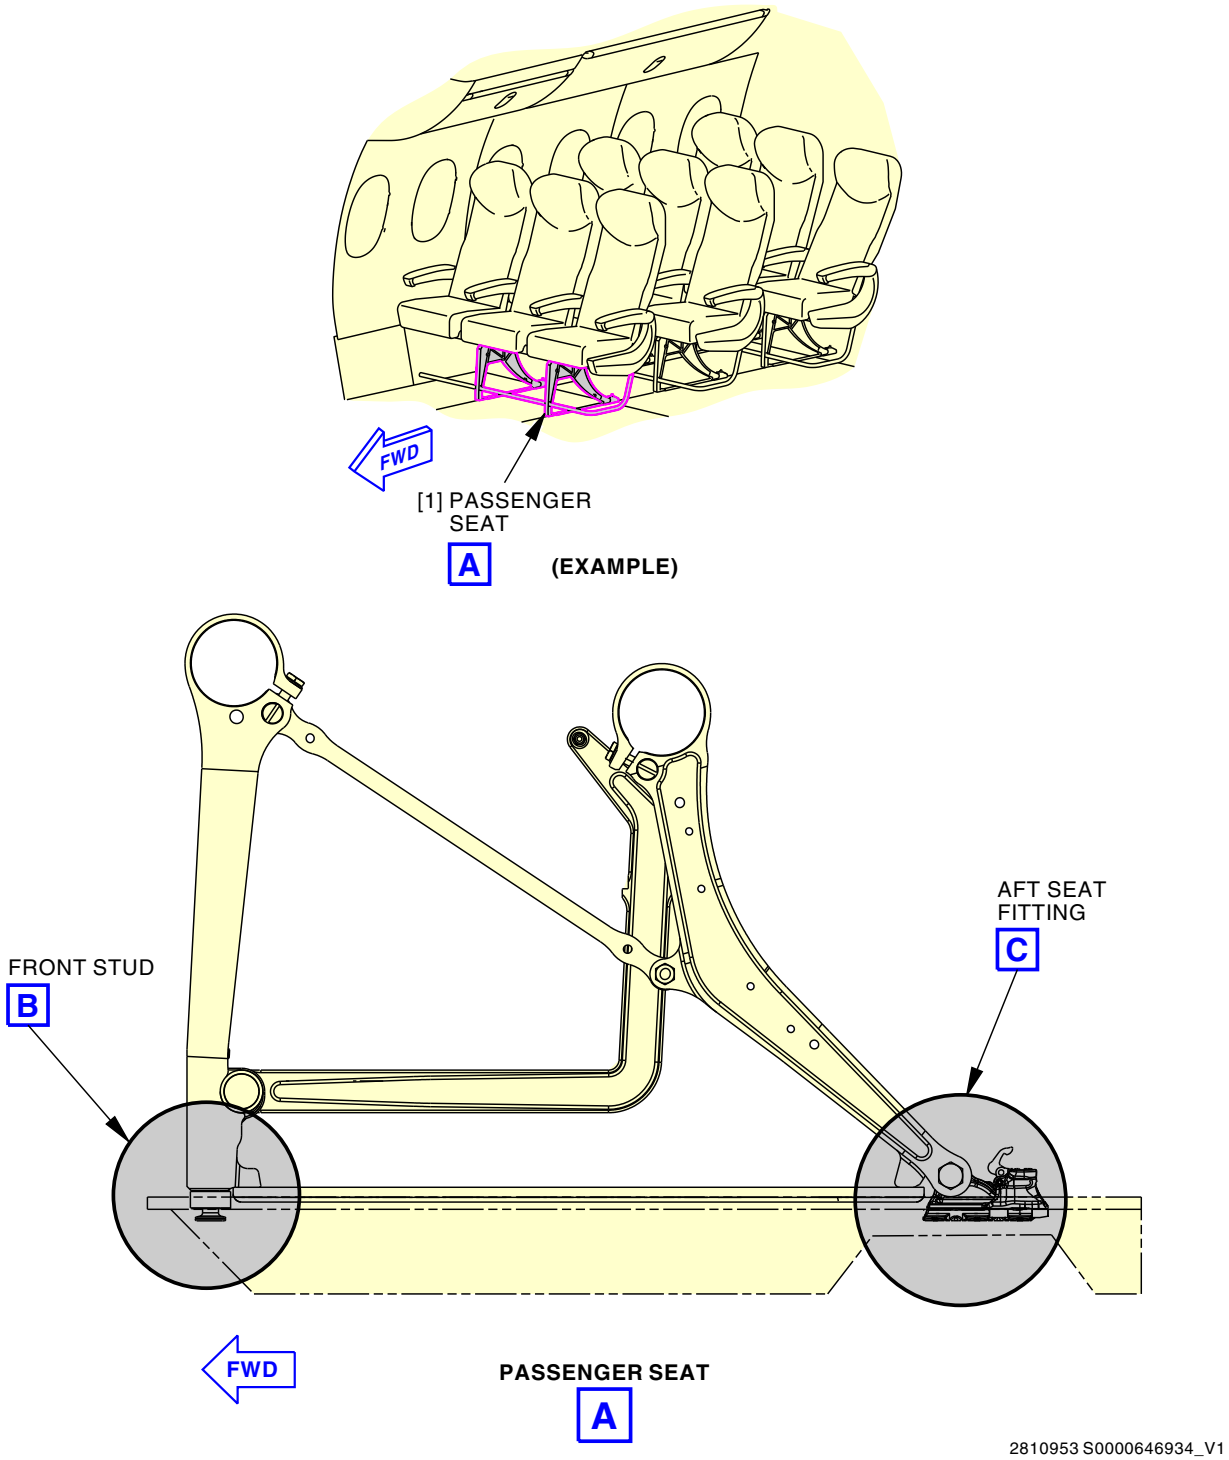


3710 Passenger Seat Installation
Figure 401/25-22-00-990-817 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

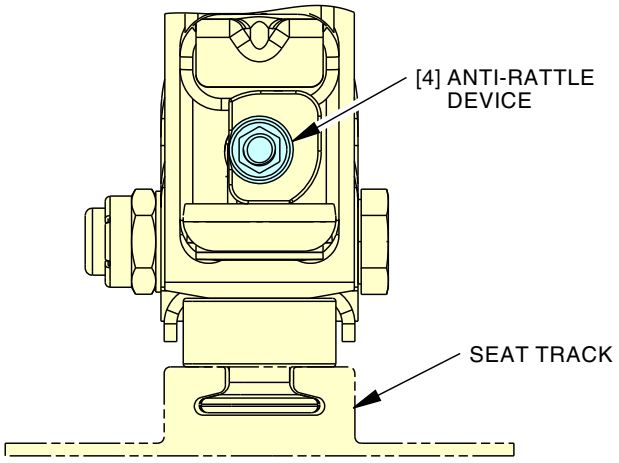

FRONT STUD
(VIEW IN THE AFT DIRECTION)

B

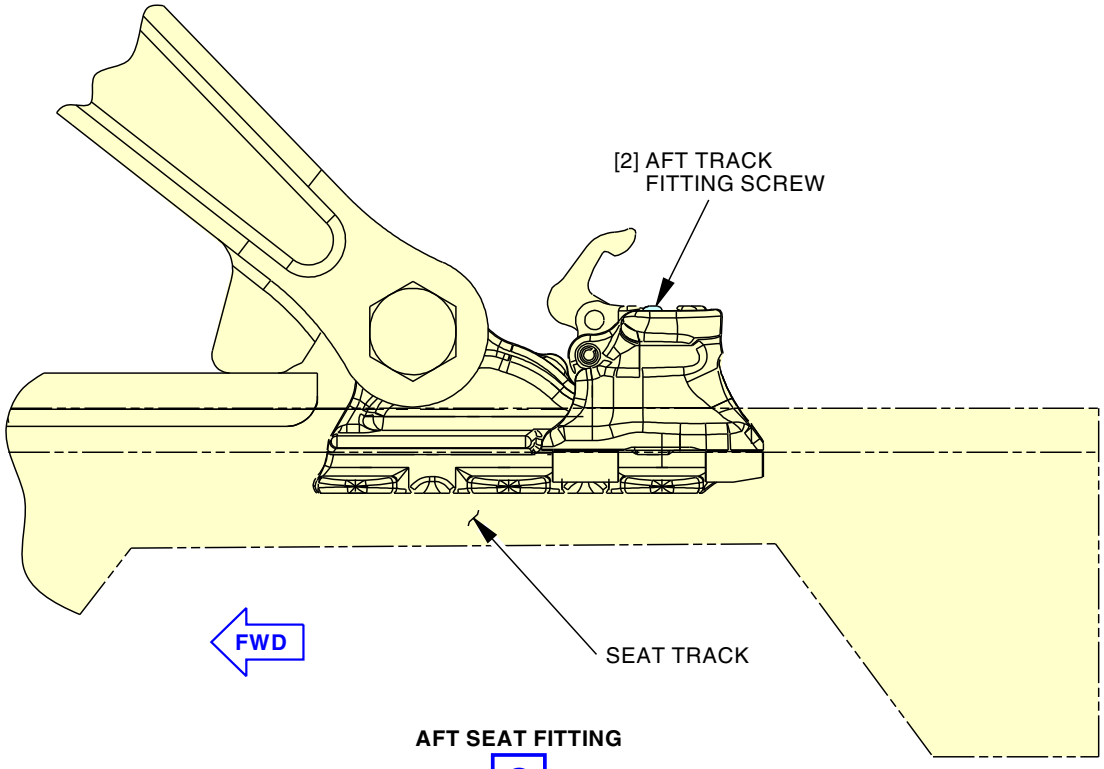

AFT SEAT FITTING

C

2811392 S0000646935_V1

3710 Passenger Seat Installation
Figure 401/25-22-00-990-817 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-22-00-400-801

3. Passenger Seat Installation

(Figure 401)

A. General

(1) This task has instructions to install a passenger seat (referred to as passenger seat [1]).

B. References

Reference	Title
20-60-07-910-802	Inspection, Cleaning and Sealing of Electrical Connectors (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1643	Wrench - Kit, Anti-Rattle Part #: G25012-8 Supplier: 81205 Opt Part #: C25001-1 Supplier: 81205 Opt Part #: G25012-1 Supplier: 81205 Opt Part #: ST2580-334C-1-185 Supplier: 81205

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Passenger Seat Installation

SUBTASK 25-22-00-420-001

(1) Make sure that the anti-rattle devices [4] and aft track fitting screws [2] are loose and in the full up position.

SUBTASK 25-22-00-420-002

(2) Put the passenger seat [1] in the correct position in the seat tracks.

(a) Make sure that the flanges on the seat track fittings engage between the cutouts in the seat track.

SUBTASK 25-22-00-420-003

(3) Move the passenger seat [1] in the forward or aft direction to get the correct seat pitch.

SUBTASK 25-22-00-210-001

(4) Tighten the seat track fittings.

SUBTASK 25-22-00-420-025

(5) For the passenger seat [1], do these steps:

(a) Tighten the aft track fitting screw [2] on the rear leg track fitting to the applicable torque shown in the table.

NOTE: The screw is installed correctly when the screw head is flush with the top of the seat track fitting.

(b) Tighten the anti-rattle device [4] on the forward leg track fitting to the applicable torque shown in the table.

1) If applicable, use anti-rattle wrench, SPL-1643, to tighten the anti-rattle device [4].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Table 401/25-22-00-993-827 Recaro Passenger Seats

Model Series	Parts	Torque Value
3510	aft track fitting screw [2]	80 ±8 in-lb (9 ±1 N·m)
	anti-rattle device [4]	Hand tighten with an additional 1/4 turn
3520	aft track fitting screw [2]	80 ±8 in-lb (9 ±1 N·m)
	anti-rattle device [4]	Turn 90° clockwise
3530	aft track fitting screw [2]	80 ±8 in-lb (9 ±1 N·m)
	anti-rattle device [4]	Turn 90° clockwise
3710	aft track fitting screw [2]	Initial torque of 26 in-lb (3 N·m)-35 in-lb (4 N·m). Then tighten to a maximum of 106 in-lb (12 N·m) to align the crown.
	anti-rattle device [4]	Turn 90° clockwise
3810	aft track fitting screw [2]	Initial torque of 26 in-lb (3 N·m)-35 in-lb (4 N·m). Then tighten to a maximum of 106 in-lb (12 N·m) to align the crown.
	anti-rattle device [4]	Turn 90° clockwise
4400	aft track fitting screw [2]	80 ±8 in-lb (9 ±1 N·m)
	anti-rattle device [4]	Hand tighten with an additional 1/4 turn
5710	aft track fitting screw [2]	80 ±8 in-lb (9 ±1 N·m)
	anti-rattle device [4]	Turn 90° clockwise

SUBTASK 25-22-00-210-004

(6) If electrical equipment is installed, inspect any visible wiring for chafing and breakage and do a check of the electrical connectors (TASK 20-60-07-910-802).

SUBTASK 25-22-00-420-009

(7) Connect the electrical connectors for the electrical equipment, if installed.

SUBTASK 25-22-00-420-010

(8) Install the seat track covers.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER SEATS - INSPECTION/CHECK

1. General

A. This procedure has these tasks:

(1) Passenger Seat Belt Check

(2) Passenger Seat Recline Operational Check and Inspection

(3) Passenger Seat Breakover Check at Emergency Exits

(4) Passenger Seat Recline Restriction Check at Emergency Exits

(5) Track-mounted Passenger Seat Check and Inspection

TASK 25-22-00-200-801

2. Passenger Seat Belt Check

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Passenger Seat Belt Check

SUBTASK 25-22-00-210-002

(1) Do a visual check to make sure that the passenger seat belts are not:

(a) Worn

(b) Frayed

(c) Damaged.

SUBTASK 25-22-00-280-001

(2) Pull on the passenger seat belts.

(a) Make sure that the passenger seat belts are attached tightly to the seat.

SUBTASK 25-22-00-280-002

(3) Put the tongue end of the passenger seat belt in the buckle.

(a) Make sure that you hear a click when the tongue is engaged in the buckle.

SUBTASK 25-22-00-280-003

(4) Lift the release handle on the buckle to disengage the passenger seat belt halves.

END OF TASK

TASK 25-22-00-710-801

3. Passenger Seat Recline Operational Check and Inspection

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Passenger Seat Recline Operational Check and Inspection

SUBTASK 25-22-00-710-001

(1) Push the recline button and push on the back of the seat.

(a) Make sure that the seat back reclines.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-22-00-710-002

(2) Release the recline button and the back of the seat.

(a) Make sure that the seat back stays reclined.

SUBTASK 25-22-00-710-003

(3) Push the recline button.

(a) Make sure that the seat back moves to its upright position.

SUBTASK 25-22-00-710-004

(4) Release the recline button, and push on the back of the seat.

(a) Make sure that the seat back does not recline.

——— END OF TASK ———

TASK 25-22-00-710-802

4. Passenger Seat Breakover Check at Emergency Exits

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Passenger Seat Breakover Check at Emergency Exits

SUBTASK 25-22-00-980-001

(1) Examine the passenger seats that are forward and aft of the emergency exits.

NOTE: The Interior Configuration Specification for your airplanes must show the requirements for the emergency exit aisles.

(a) Make sure that the passenger seats do not breakover into the pathways of the emergency exits.

——— END OF TASK ———

TASK 25-22-00-710-803

5. Passenger Seat Recline Restriction Check at Emergency Exits

Figure 601

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right

B. Procedure

SUBTASK 25-22-00-211-001


(1) Make sure that the passenger seats that are in the area of the emergency exit doors do not recline into the emergency exit aisles:


(a) The minimum dimension of the emergency exit aisle for a three seat is 13 in. (33 cm).

(b) The minimum dimension of the emergency exit aisle for a two seat is 6 in. (15.2 cm).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

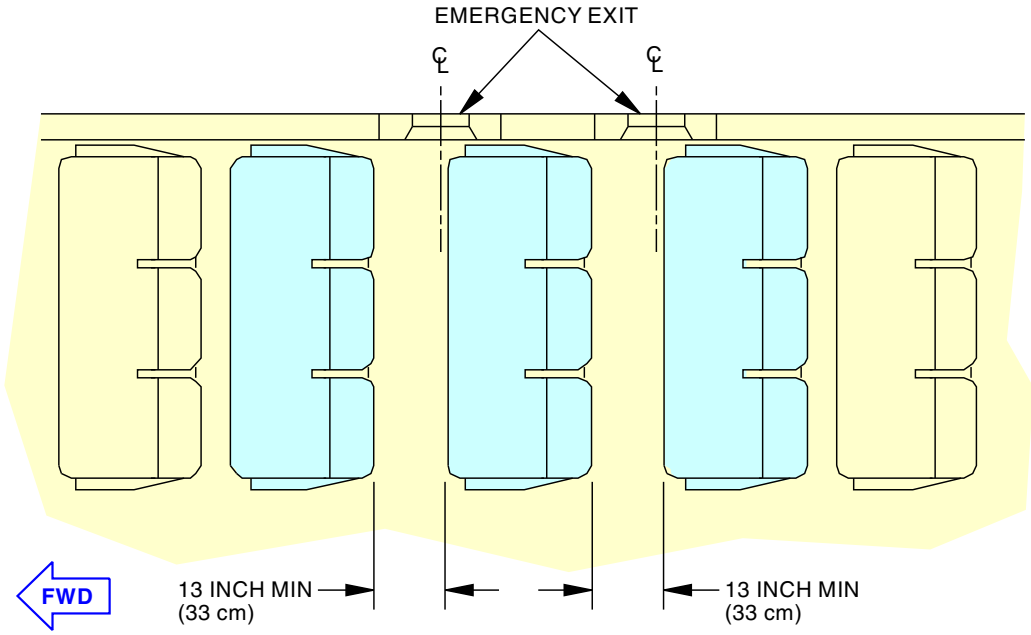

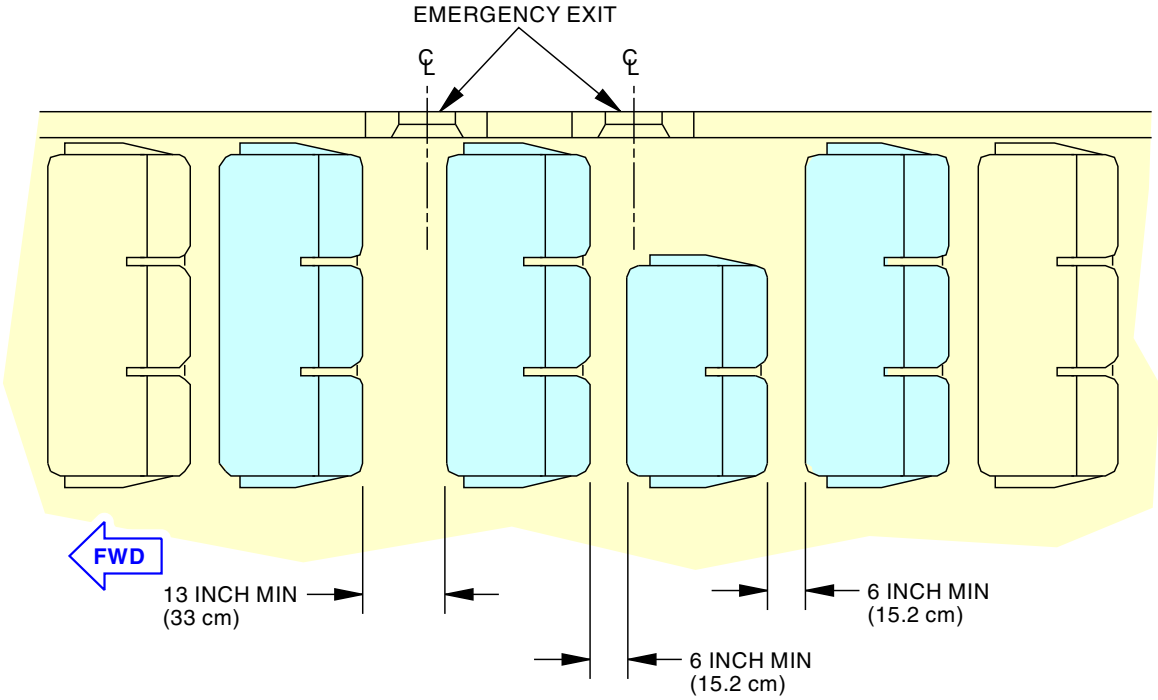

2411884 S00061529366_V1

Minimum Emergency Exit Aisle Dimensions
Figure 601/25-22-00-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-22-00-200-802

6. Track-mounted Passenger Seat Check and Inspection

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
25-22-00-400-801	Passenger Seat Installation (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Track-mounted Passenger Seat Inspection

SUBTASK 25-22-00-210-003

(1) Make sure that the seat track fittings are installed correctly.

SUBTASK 25-22-00-700-001

(2) Hold the seat leg and try to move the seat forward and aft.

NOTE: The seat assembly must not move at the seat track fittings.

SUBTASK 25-22-00-010-002

(3) If the seat moves, do these steps:

(a) Remove the seat track covers.

(b) Tighten the rear seat track fitting to the recommended torque (TASK 25-22-00-400-801).

(c) Tighten the forward anti-rattle device to the recommended torque (TASK 25-22-00-400-801).

1) If there is no anti-rattle, tighten front fitting to the recommended torque.

(d) Install the seat track covers.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ATTENDANT AND LAVATORY SERVICE UNITS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Attendant/Lavatory Service Units Removal

(2) Attendant/Lavatory Service Units Installation

TASK 25-23-13-000-801

2. Attendant/Lavatory Service Unit Removal

(Figure 401 or Figure 402)

A. General

(1) The attendant service unit contains emergency oxygen masks and an oxygen generator.

(2) The lavatory service unit contains emergency oxygen masks and an oxygen cylinder.

(3) The attendant and lavatory service units are also called oxygen boxes.

(4) You can remove the oxygen masks and oxygen generator with the attendant service unit installed.

(5) You can remove the oxygen masks and oxygen cylinder with the lavatory service units installed.

B. References

Reference	Title
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)
35-22-51-040-801	Oxygen Cylinder (CDS) Deactivation (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-14266	Screwdriver - Driver Assembly Part #: 29-90-114-10 Supplier: 94222 Part #: 29-90-214-10 Supplier: 94222

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Attendant Service Unit Removal

SUBTASK 25-23-13-040-001

(1) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

SUBTASK 25-23-13-020-001

(2) Remove the screws [2] from the side of the service unit [1].

NOTE: The screws [2] are on the inside edge of the oxygen box.

NOTE: Some service units have easy access to the back (top) side. Examples of these would be the one in the aft lowered ceiling, If you want, you can remove these service units by removing the screws from the back (top) side of the ceiling panel.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-13-020-002

(3) Move the service unit [1] inboard and disconnect the electrical connector [3].

SUBTASK 25-23-13-020-003

(4) Remove the service unit [1].

F. Lavatory Service Unit Removal

SUBTASK 25-23-13-040-002

(1) Do this task: Oxygen Cylinder (CDS) Deactivation, TASK 35-22-51-040-801.

SUBTASK 25-23-13-020-004

(2) To gain access to the top (back) side of the service unit, do these steps

(a) Use the driver assembly screwdriver, SPL-14266, to loosen the fasteners [23] in the lavatory ceiling panel [22].

(b) Lower the lavatory ceiling panel [22] until secured by the lanyards.

SUBTASK 25-23-13-020-005


(3) Disconnect the electrical connector [25].

SUBTASK 25-23-13-020-006

(4) Disconnect the screws [24] and remove the service unit [21] unit from the lavatory structure.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

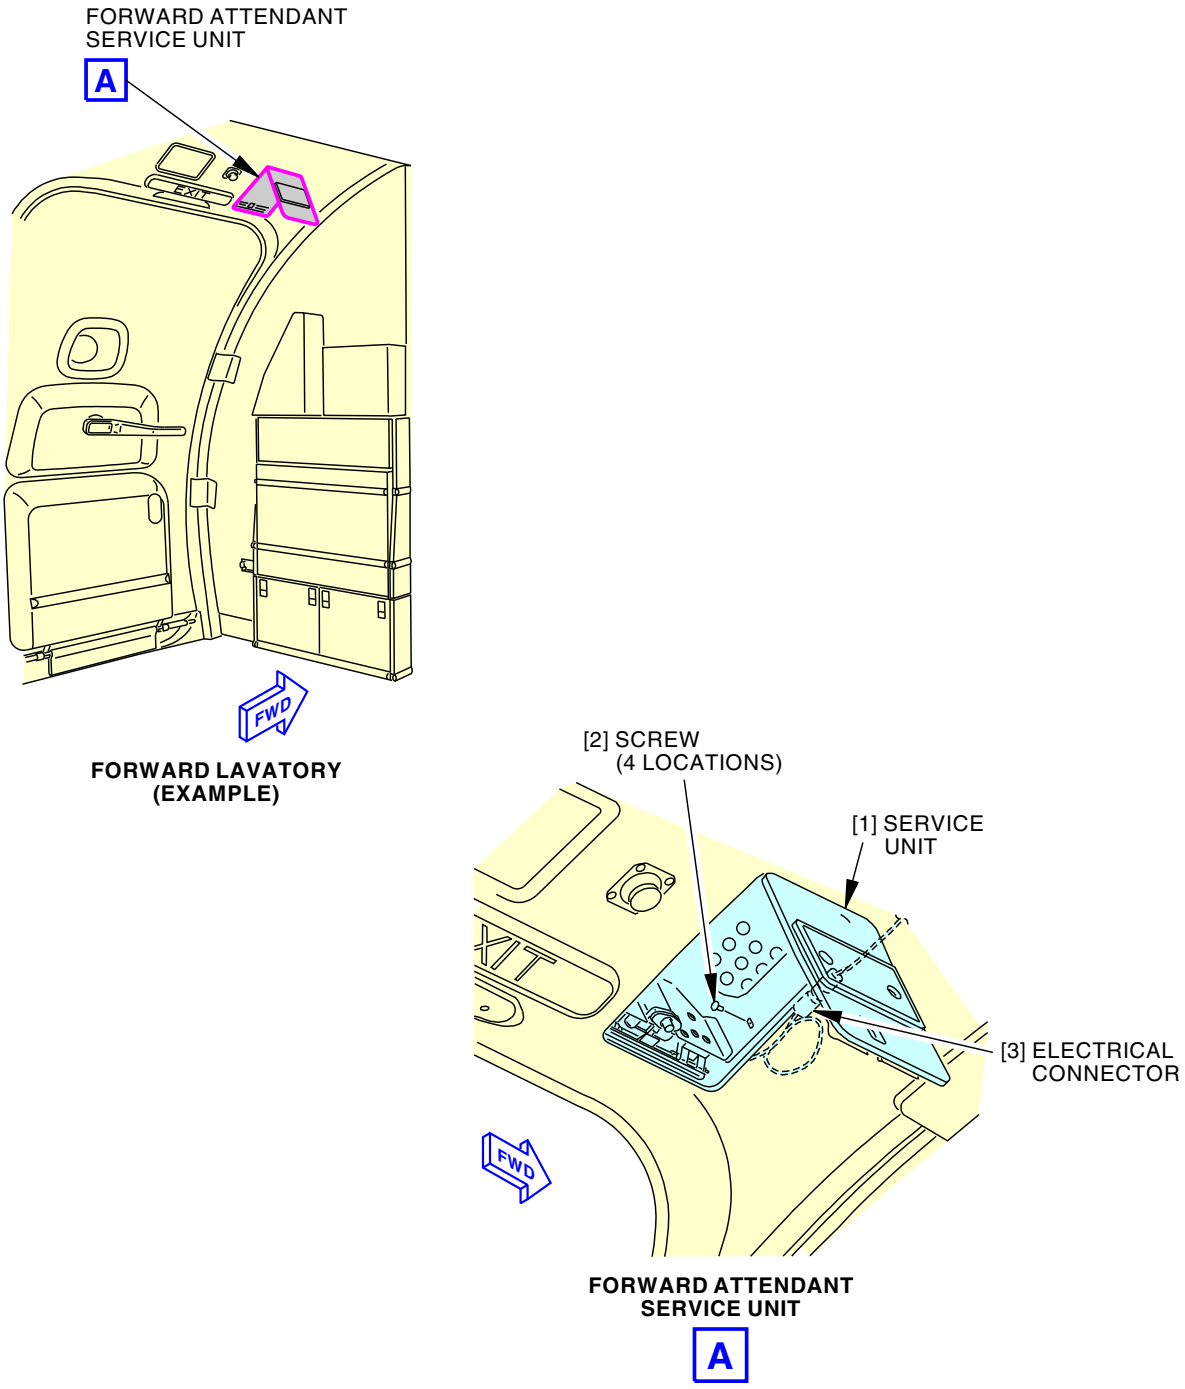

2411885 S00061529372_V1


Attendant Service Unit Installation
Figure 401/25-23-13-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

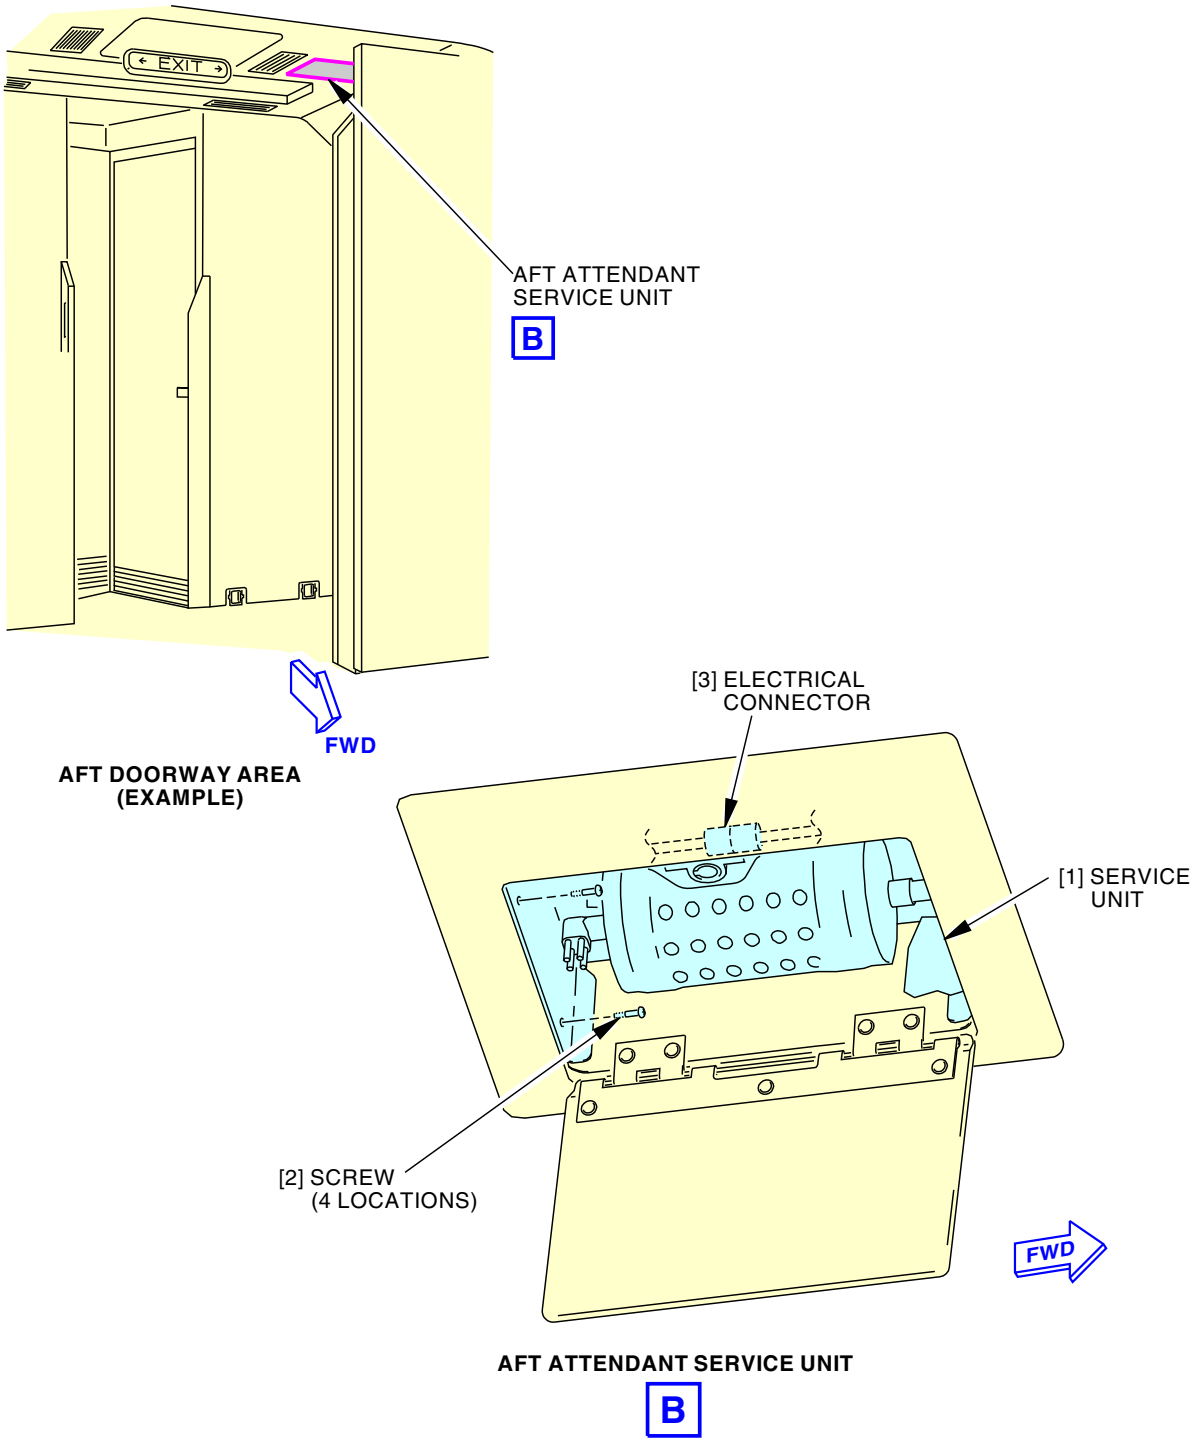

Attendant Service Unit Installation
Figure 401/25-23-13-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

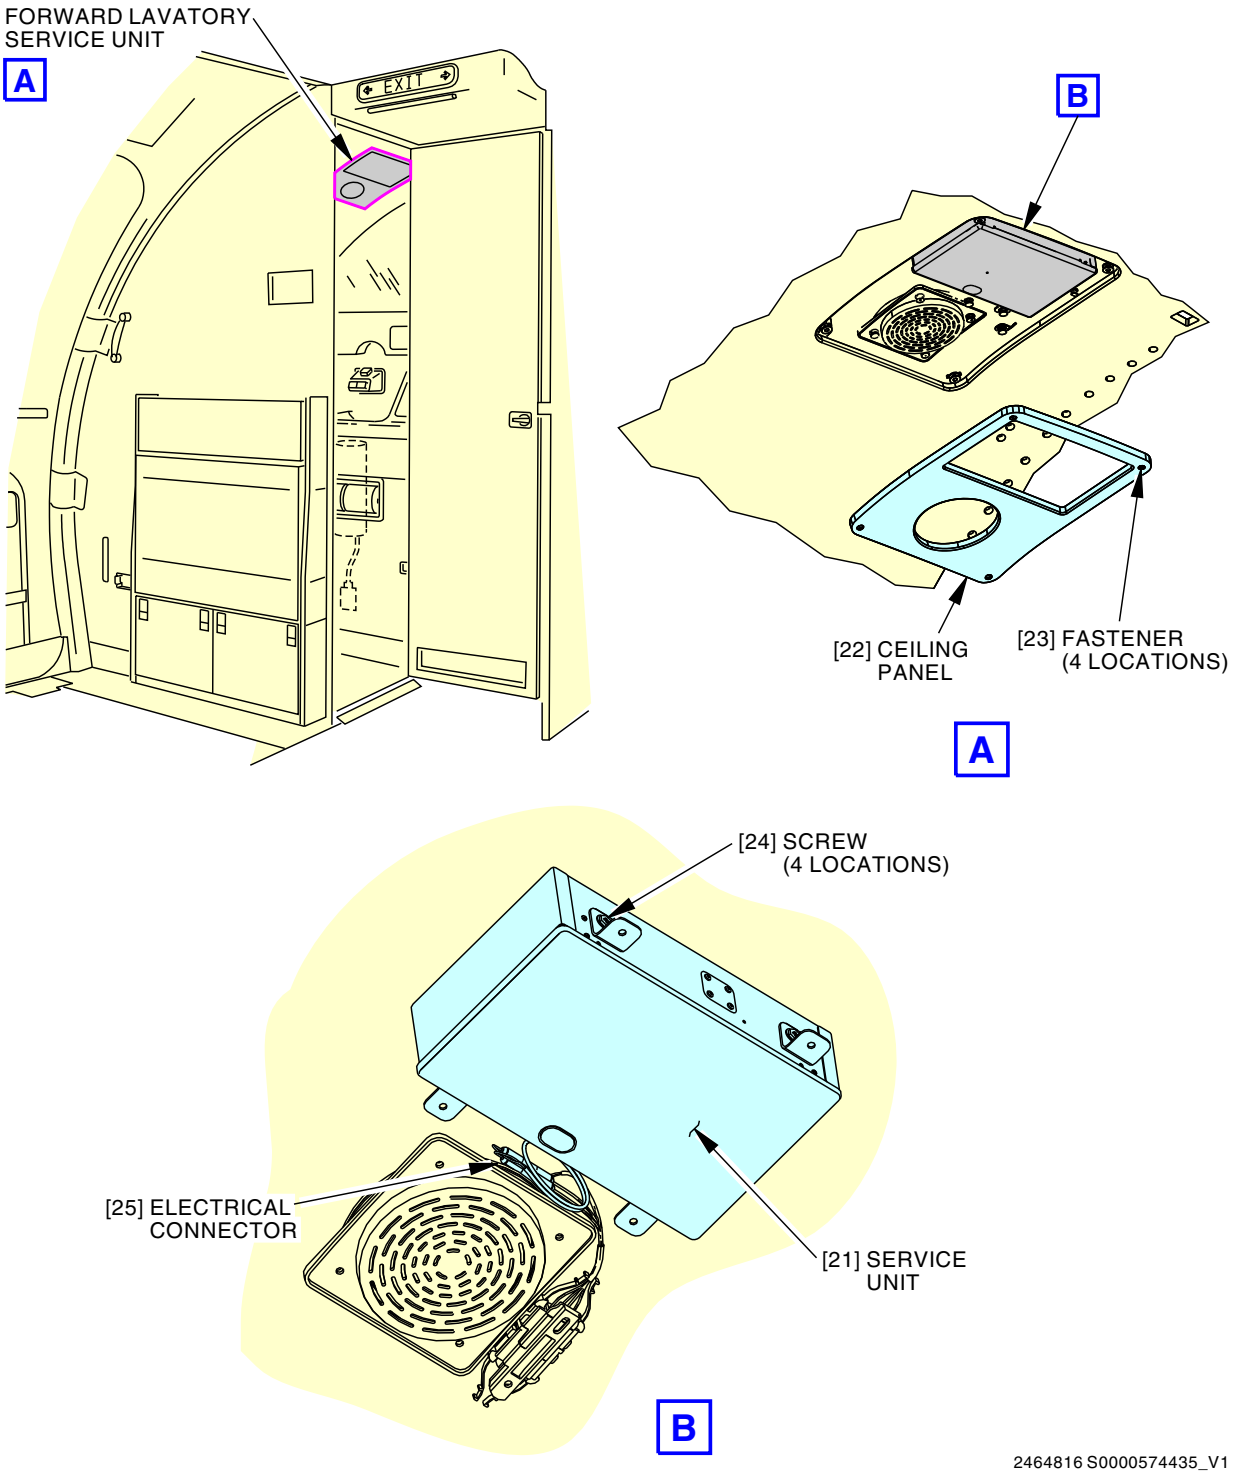

Lavatory Service Unit Installation
Figure 402/25-23-13-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-23-13-400-801

3. Attendant/Lavatory Service Unit Installation

(Figure 401 or Figure 402)

A. General

(1) The attendant service unit contains emergency oxygen masks and an oxygen generator.

(2) The lavatory service unit contains emergency oxygen masks and an oxygen cylinder.

(3) The attendant and lavatory service units are also called oxygen boxes.

(4) You can remove the oxygen masks and oxygen generator with the attendant service unit installed.

(5) You can remove the oxygen masks and oxygen cylinder with the lavatory service units installed.

B. References

Reference	Title
25-21-30 P/B 401	FORWARD ENTRY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION
25-21-34 P/B 401	FORWARD GALLEY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION
35-22-00-700-801	Passenger Oxygen System Automatic Actuation Functional Test (P/B 501)
35-22-00-700-802	Passenger Oxygen System Manual Deploy Operational Test (P/B 501)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)
35-22-51-440-801	Oxygen Cylinder (CDS) Activation (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-14266	Screwdriver - Driver Assembly Part #: 29-90-114-10 Supplier: 94222 Part #: 29-90-214-10 Supplier: 94222

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Attendant Service Unit Installation

SUBTASK 25-23-13-420-001

(1) Connect the electrical connector [3] for the service unit [1].

SUBTASK 25-23-13-420-002

(2) Put the service unit [1] into the opening in the ceiling panel.

SUBTASK 25-23-13-210-001

(3) Make sure the service unit [1] is correctly aligned in the ceiling panel.

SUBTASK 25-23-13-200-001

(4) To align the oxygen box door, do these steps:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure there are three equal gaps between the oxygen box door and the ceiling panel cutout.

1) Make sure there is a slightly larger gap at the hinge side of the oxygen box assembly.

(b) To adjust the alignment of the door in the panel assembly, the doorway header panel that contains the oxygen box assembly may have to be removed.

1) Do the applicable task in this procedure: FORWARD ENTRY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION, PAGEBLOCK 25-21-30/401.

2) Do the applicable task in this procedure: FORWARD GALLEY DOOR DOORWAY HEADER PANEL - REMOVAL/INSTALLATION, PAGEBLOCK 25-21-34/401.

SUBTASK 25-23-13-420-003

(5) Install the screws [2].

SUBTASK 25-23-13-440-001

(6) Activate the service unit [1] (TASK 35-22-11-400-801).

F. Lavatory Service Unit Installation

SUBTASK 25-23-13-420-004

(1) Put the service unit [21] in position on the back side of lavatory ceiling panel [22] and install the screws [24].

SUBTASK 25-23-13-420-005

(2) Connect the electrical connector [25].

SUBTASK 25-23-13-420-006

(3) Put the ceiling panel [22] in position against the lavatory structure.

SUBTASK 25-23-13-420-007

(4) Install the fasteners [23] with the driver assembly screwdriver, SPL-14266.

SUBTASK 25-23-13-440-002

(5) Activate the service unit [21] (TASK 35-22-51-440-801).

G. Attendant/Lavatory Service Unit Installation Test

SUBTASK 25-23-13-720-002

(1) Do this task: Passenger Oxygen System Automatic Actuation Functional Test, TASK 35-22-00-700-801 or Passenger Oxygen System Manual Deploy Operational Test, TASK 35-22-00-700-802.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PASSENGER SERVICE UNIT (PSU) - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) Passenger Service Unit Removal.

(2) Passenger Service Unit Installation.

(3) Fixed PSU Spacer Panel Removal.

(4) Fixed PSU Spacer Panel Installation.

(5) Adjustable PSU Spacer Panel Removal.

(6) Adjustable PSU Spacer Panel Installation.

(7) Passenger Cabin Temperature Sensor Panel Removal.

(8) Passenger Cabin Temperature Sensor Panel Installation.

(9) Life Vest Panel Removal.

(10) Life Vest Panel Installation.

B. The PSU has these functions:

(1) Oxygen Unit.

(2) Reading Lights.

(3) NS / FSB Sign.

(4) Air Gaspers.

(5) Speaker.

(6) Attendant Call Button.

TASK 25-23-61-000-801

2. Passenger Service Unit - Removal

(Figure 401)

A. References

Reference	Title
25-23-13-000-801	Attendant/Lavatory Service Unit Removal (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-11-000-801	Oxygen Generator Deactivation (P/B 201)

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Prepare to Remove the Passenger Service Unit (PSU)

SUBTASK 25-23-61-860-010

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R
C	9	C04071	PASS CABIN SIGNS FASTEN SEAT BELT L
D	11	C00442	PASSENGER CABIN SIGNS PASS SIGN CONT
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

These circuit breakers are inoperative and should remain open:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
C	10	C01408	PASS CABIN SIGNS NO SMOKING R (INOP)
C	11	C01407	PASS CABIN SIGNS NO SMOKING L (INOP)

SUBTASK 25-23-61-010-012

(2) To get access to the P91 and P92 panels, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-23-61-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
B	1	C00094	PASS READING LIGHTS-RIGHT STA 340-464
B	2	C00095	PASS READING LIGHTS-RIGHT
B	3	C00096	PASS READING LIGHTS-RIGHT
B	4	C00097	PASS READING LIGHTS-RIGHT
B	5	C00098	PASS READING LIGHTS-RIGHT
B	6	C00099	PASS READING LIGHTS-RIGHT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
B	7	C00774	PASS READING LIGHTS-RIGHT
B	8	C01437	PASS READING LIGHTS-RIGHT
B	9	C01438	PASS READING LIGHTS-RIGHT

SUBTASK 25-23-61-860-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
B	1	C00087	PASS READING LIGHTS LEFT
B	2	C00088	PASS READING LIGHTS-LEFT
B	3	C00089	PASS READING LIGHTS-LEFT
B	4	C00090	PASS READING LIGHTS-LEFT
B	5	C00091	PASS READING LIGHTS-LEFT
B	6	C00092	PASS READING LIGHTS-LEFT
B	7	C00773	PASS READING LIGHTS-LEFT
B	8	C01152	PASS READING LIGHTS-LEFT
B	9	C01153	PASS READING LIGHTS-LEFT

SUBTASK 25-23-61-010-001

(5) Do this task: Attendant/Lavatory Service Unit Removal, TASK 25-23-13-000-801.

SUBTASK 25-23-61-010-002

(6) Do these steps to open the Passenger Service Unit (PSU):

(a) Put an Allen wrench in the PSU release holes.

NOTE: Most of the PSUs have two latches. If the PSU has a small width, then it may only have one latch.

(b) Push up to release the latch (2 places).

(c) Disconnect the lanyard from the PSU rail.

(d) Let the PSU hang from the opposite end.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-61-040-001

CAUTION

MAKE SURE THAT THE RELEASE PIN FOR THE CHEMICAL OXYGEN GENERATOR STAYS ENGAGED IN THE FIRING PIN. IF THE CHEMICAL OXYGEN GENERATOR ACCIDENTALLY OPERATES, IT IS MANDATORY THAT YOU REPLACE IT.

(7) Do this task: Oxygen Generator Deactivation, TASK 35-22-11-000-801.

NOTE: This task isolates the oxygen generator and installs the safety pin. This task must be done prior to removal.

E. Remove the PSU

SUBTASK 25-23-61-020-001

(1) On the oxygen generator, do this task to disconnect the breathable oxygen lines: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

(2) On the gasper, disconnect the clamp from the flexible duct.

(3) Remove the flexible duct from the manifold.

(4) Disconnect the electrical connector.


(5) Release the latches located near the rail.

(a) Push in latches to release pins from rail.

(6) Remove the unit from the rail.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

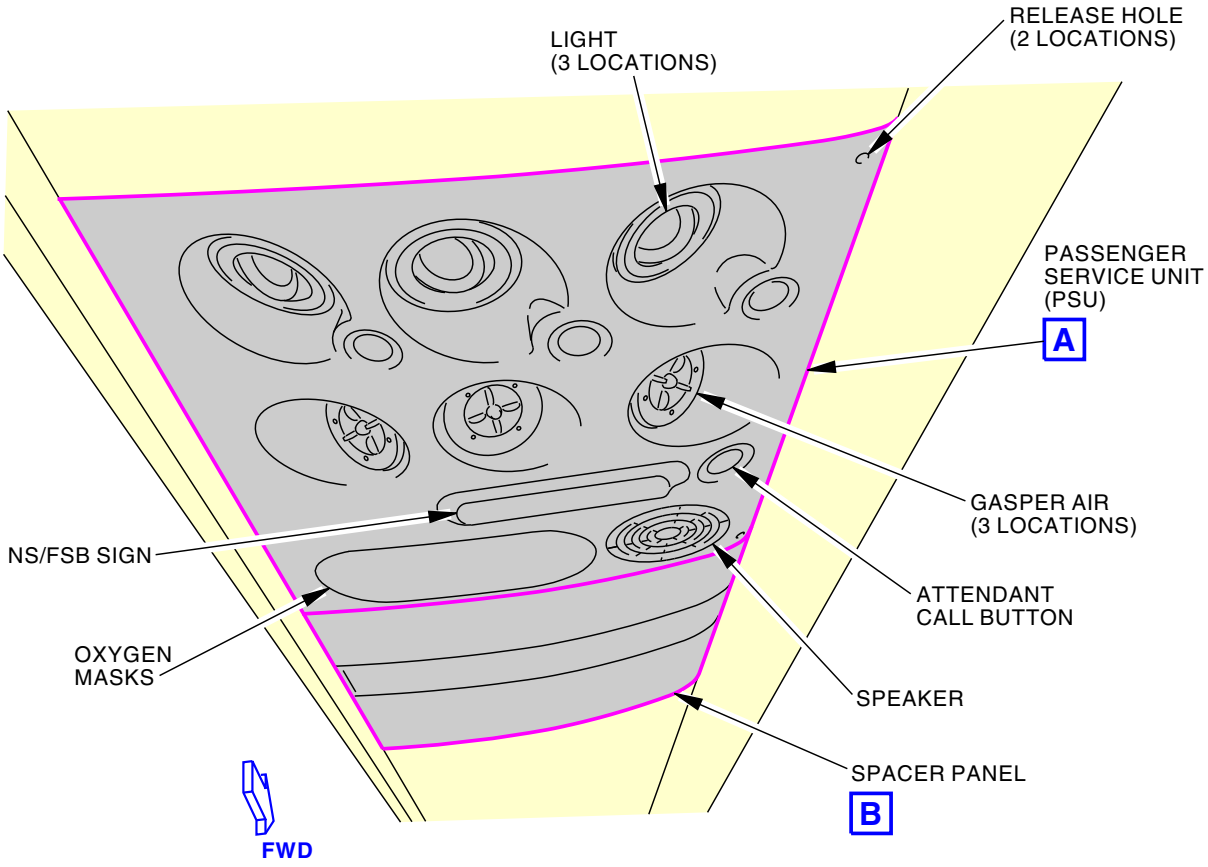


**PASSENGER SERVICE UNIT (PSU)
(LEFT SIDE PASSENGER SERVICE UNIT IS SHOWN,
RIGHT SIDE PASSENGER SERVICE UNIT IS EQUIVALENT)**

2411888 S00061529379_V2

**Passenger Service Unit (Sky Interior)
Figure 401/25-23-61-990-801 (Sheet 1 of 4)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

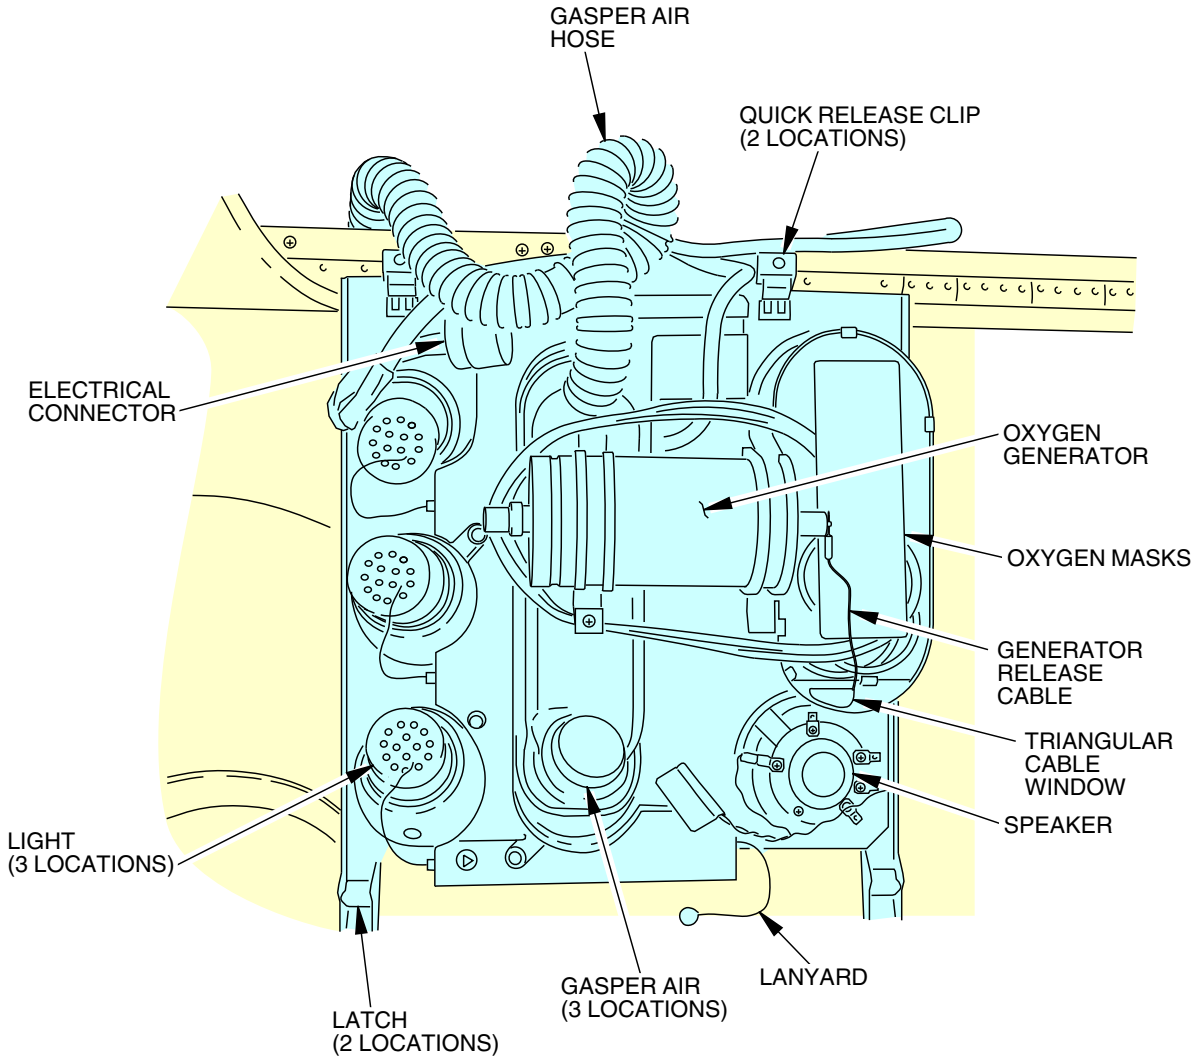


PASSENGER SERVICE UNIT (PSU)

A

2411889 S00061529380_V2

Passenger Service Unit (Sky Interior)
Figure 401/25-23-61-990-801 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

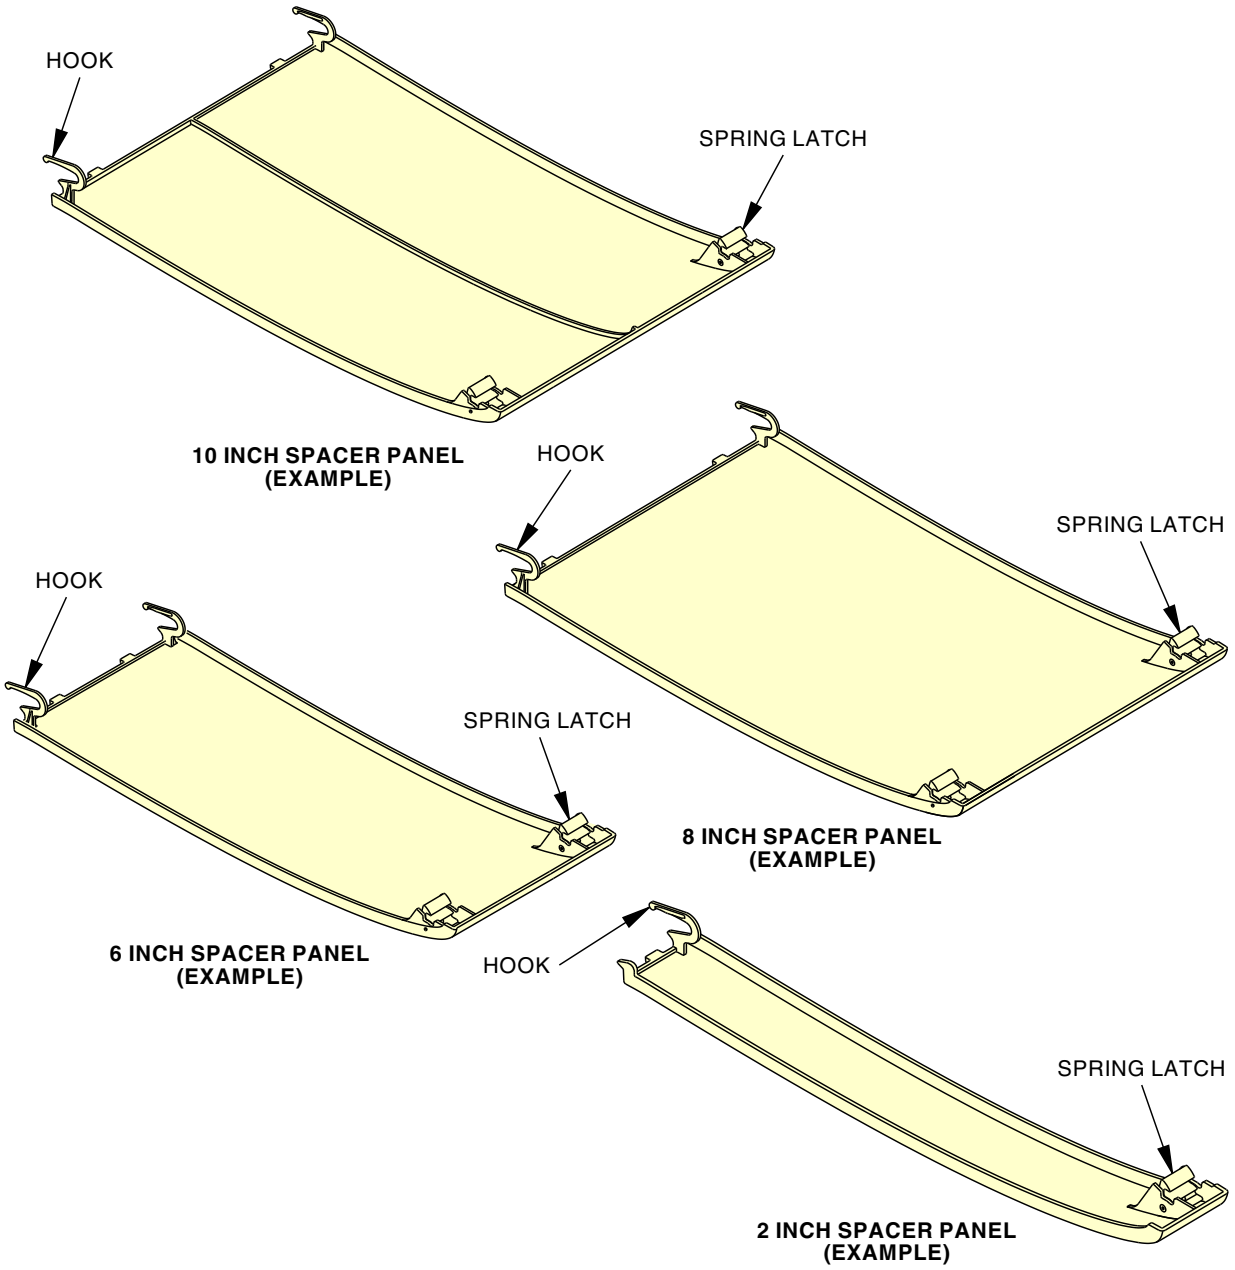


FIXED SPACER PANEL
(LEFT SIDE SPACER PANEL IS SHOWN,
RIGHT SIDE SPACER PANEL IS EQUIVALENT)

B

2783881 S0000631381_V1

Passenger Service Unit (Sky Interior)
Figure 401/25-23-61-990-801 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

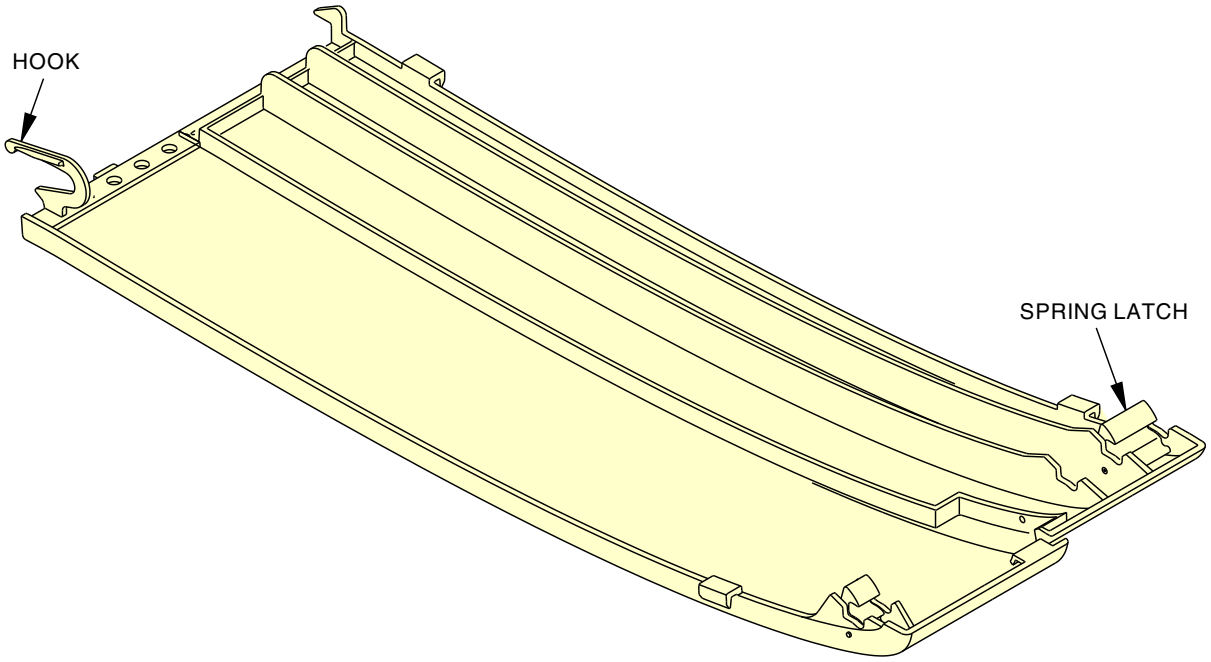

ADJUSTABLE SPACER PANEL
(3-5 INCH, EXAMPLE)
(LEFT SIDE SPACER PANEL IS SHOWN,
RIGHT SIDE SPACER PANEL IS EQUIVALENT)

B

2783882 S0000631382_V1

Passenger Service Unit (Sky Interior)
Figure 401/25-23-61-990-801 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-23-61-400-801

3. Passenger Service Unit - Installation

(Figure 401)

A. References

Reference	Title
25-23-13-400-801	Attendant/Lavatory Service Unit Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-22-00-700-802	Passenger Oxygen System Manual Deploy Operational Test (P/B 501)
35-22-11-400-801	Oxygen Generator Activation (P/B 201)

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Install the PSU

SUBTASK 25-23-61-420-001

(1) Do this task: Attendant/Lavatory Service Unit Installation, TASK 25-23-13-400-801.

SUBTASK 25-23-61-860-023

(2) Make sure that the generator release cable is put through the triangular cable window of the mask box.

SUBTASK 25-23-61-420-002

NOTE: Prior to installing PSU, verify that the chemical oxygen generator is secured with clamps that have pads that are NOT installed with pressure sensitive adhesive (PSA). The incorrect PSA pad material is identified as a pad that is flat and adhered to the inside surface of the clamp. The correct, Non-PSA pad material is identified by having channel features that wrap the edges of the clamp to keep them secured.

(3) Passenger Service Unit (PSU) Installation

(a) Put the panel in the correct position.

(b) Engage latches to PSU rail.

1) Make sure that pins are engaged. You may have to wiggle the panel slightly to ensure pins are engaged.

(c) Let the PSU hang freely from the outboard side

(d) Install the flexible air duct to the manifold.

(e) Connect the clamp to the flexible duct.

(f) Do this task to connect the breathable oxygen lines: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

(g) Connect the electrical connector.

SUBTASK 25-23-61-440-001

(4) Do this task: Oxygen Generator Activation, TASK 35-22-11-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-61-860-012

(5) Make sure that the call select switch is in the same position as the call select switch on the removed PSU.

NOTE: The call select switch sends a signal to the aft or forward exit sign.

SUBTASK 25-23-61-410-001

(6) Do these steps to close the PSU:

(a) Connect the lanyard to the PSU rail.

(b) Push the PSU up until you hear the latch or latches engage in the PSU rail.

WARNING MAKE SURE THAT THE PSU LATCHES ARE ENGAGED. IF YOU DO NOT CORRECTLY ENGAGE THE LATCHES, THE PSU CAN FALL AND CAUSE INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT.

(c) If there is more than one latch, lightly pull down on the edges of the PSU to make sure the latches are engaged.

SUBTASK 25-23-61-860-005

WARNING WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(7) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
B	1	C00087	PASS READING LIGHTS LEFT
B	2	C00088	PASS READING LIGHTS-LEFT
B	3	C00089	PASS READING LIGHTS-LEFT
B	4	C00090	PASS READING LIGHTS-LEFT
B	5	C00091	PASS READING LIGHTS-LEFT
B	6	C00092	PASS READING LIGHTS-LEFT
B	7	C00773	PASS READING LIGHTS-LEFT
B	8	C01152	PASS READING LIGHTS-LEFT
B	9	C01153	PASS READING LIGHTS-LEFT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-61-860-006

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(8) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
B	1	C00094	PASS READING LIGHTS-RIGHT STA 340-464
B	2	C00095	PASS READING LIGHTS-RIGHT
B	3	C00096	PASS READING LIGHTS-RIGHT
B	4	C00097	PASS READING LIGHTS-RIGHT
B	5	C00098	PASS READING LIGHTS-RIGHT
B	6	C00099	PASS READING LIGHTS-RIGHT
B	7	C00774	PASS READING LIGHTS-RIGHT
B	8	C01437	PASS READING LIGHTS-RIGHT
B	9	C01438	PASS READING LIGHTS-RIGHT

SUBTASK 25-23-61-860-011

(9) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	8	C01403	PASSENGER CABIN PASS CALL LEFT
B	8	C01404	PASSENGER CABIN PASS CALL RIGHT
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R
C	9	C04071	PASS CABIN SIGNS FASTEN SEAT BELT L
D	11	C00442	PASSENGER CABIN SIGNS PASS SIGN CONT
F	8	C00785	OXYGEN MAN CONT
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

These circuit breakers are inoperative and should remain open:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
C	10	C01408	PASS CABIN SIGNS NO SMOKING R (INOP)
C	11	C01407	PASS CABIN SIGNS NO SMOKING L (INOP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Put the Airplane in Its Usual Condition

SUBTASK 25-23-61-410-002

(1) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-23-61-700-001

(2) Do the Manual Deploy Functional Test: Passenger Oxygen System Manual Deploy Operational Test, TASK 35-22-00-700-802.

——— END OF TASK ———

TASK 25-23-61-000-803

4. Fixed PSU Spacer Panel - Removal

(Figure 401)

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Procedure

SUBTASK 25-23-61-010-004

(1) Lower the adjacent spacer panel or Passenger Service Unit (PSU).

SUBTASK 25-23-61-010-005

(2) Push in the latch extension of the spring latches and pull downward on the panel bases until all the latches disengage from the PSU rail.

SUBTASK 25-23-61-010-006

(3) Lower the inboard edge of the spacer panel while you pull out the outboard hook attachment of the panel from the beam detail air extrusion.

——— END OF TASK ———

TASK 25-23-61-400-803

5. Fixed PSU Spacer Panel - Installation

(Figure 401)

A. General

(1) A fixed spacer panel can be of the widths that follow:

(a) 2 inch.

(b) 6 inch.

(c) 8 inch.

(d) 10 inch.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-23-61-420-004

(1) Select and install the spacer panel of the necessary width to close any gap with adjacent Passenger Service Unit (PSU) panels.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-61-420-005

(2) Put the outboard hook attachments of the spacer panels into the beam detail air extrusion holes.

SUBTASK 25-23-61-420-006

(3) Push the inboard edge of the spacer panel upward until the spring latches engage the PSU rail.

SUBTASK 25-23-61-420-007

(4) Apply upward pressure to the panel base under the spring latches to fully engage the latches.

NOTE: The latches will make a “click” sound when fully engaged.

——— END OF TASK ———

TASK 25-23-61-000-804

6. Adjustable PSU Spacer Panel - Removal

(Figure 401)

A. General

(1) A termination panel is one which is against the stowage bin end cap.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-23-61-010-007

(1) Lower the adjacent spacer panel or Passenger Service Unit (PSU).

SUBTASK 25-23-61-010-008

(2) Push in the latch extension of the spring latches and pull downward on the panel bases until all the latches disengage from the PSU rail.

SUBTASK 25-23-61-020-002

(3) Lower the inboard edge of the spacer panel while you pull out the outboard hook attachment of the panel from the beam detail extrusion.

——— END OF TASK ———

TASK 25-23-61-400-804

7. Adjustable PSU Spacer Panel - Installation

(Figure 401)

A. General

(1) The adjustable spacer panels can be adjusted between 3 inch and 5 inch.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-23-61-420-008

(1) Adjust the panel to the necessary width.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-61-420-009

(2) Put the outboard hook attachments of the spacer panels into the beam detail air extrusion holes.

SUBTASK 25-23-61-420-010

(3) Push the inboard edge of the spacer panel upward until the spring latches engage the Passenger Service Unit (PSU) rail.

SUBTASK 25-23-61-420-011

(4) Apply upward pressure to the panel base under the spring latches to fully engage the latches.

NOTE: The latches will make a “click” sound when fully engaged.

——— END OF TASK ———

TASK 25-23-61-000-802

8. Passenger Cabin Temperature Sensor Panel - Removal

(Figure 402)

A. Location Zones

Zone	Area
200	Upper Half of Fuselage
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

B. Prepare for the Removal

SUBTASK 25-23-61-860-008

(1) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
A	3	C01170	A/C ZONE TEMP VALVE/FAN CONT AFT PASS
A	9	C01158	AIR CONDITIONING PACK CONTROL LEFT DC
A	11	C01159	AIR CONDITIONING PACK CONTROL LEFT AC
B	2	C01167	A/C ZONE TEMP VALVE/FAN CONT FWD PASS
B	3	C01163	A/C ZONE TEMP VALVE/FAN CONT FLT DECK
B	9	C01161	AIR CONDITIONING PACK CONT RIGHT DC
B	11	C01162	AIR CONDITIONING PACK CONT RIGHT AC

C. Passenger Cabin Temperature Sensor Panel Removal

SUBTASK 25-23-61-010-003

(1) Lower the cabin temperature sensor panel [3].

(a) Put a small allen wrench or other applicable tool in the access holes to release the latches.

(b) Partially lower the cabin temperature sensor panel [3] and disconnect the lanyard [4].

(c) Move the panel to the fully lowered position.

(2) Disconnect the electrical connectors [2].


(3) Release the clamp [5] located near the rail.

(a) Push in on the clamp [5] to release pin from the rail.

(4) Remove the cabin temperature sensor panel [3] from the rail.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

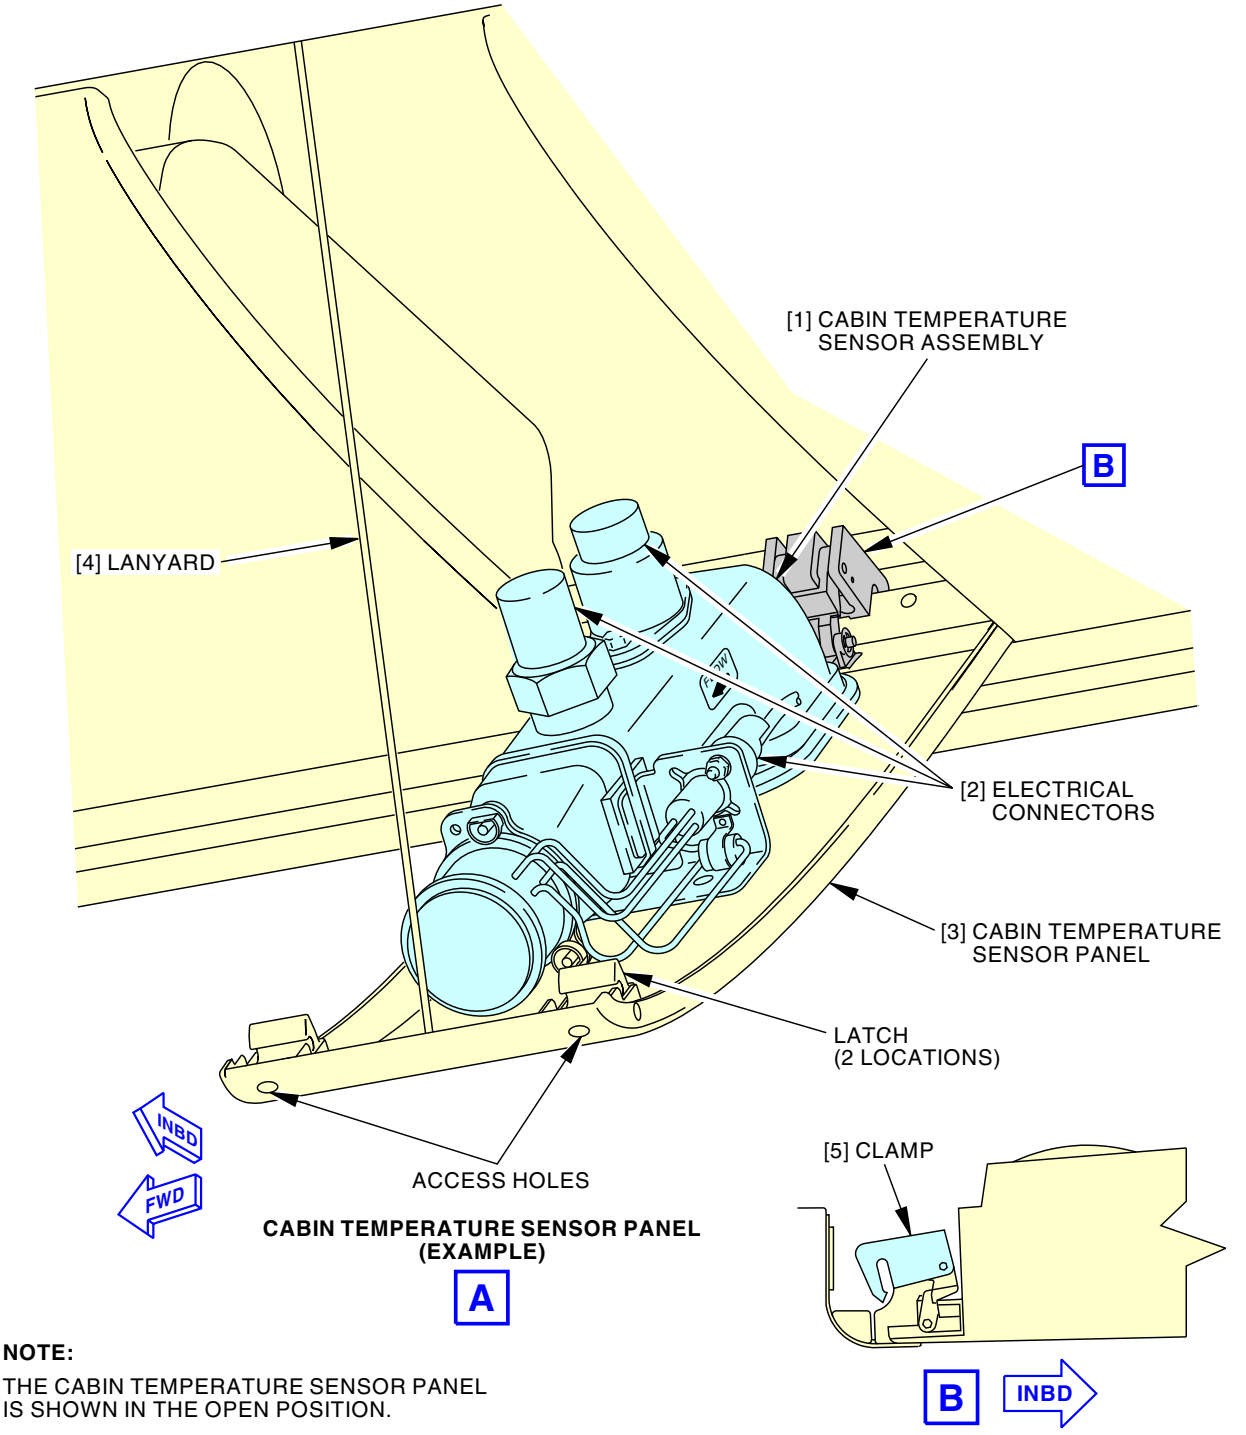

CABIN TEMPERATURE SENSOR PANEL (EXAMPLE)

NOTE:

THE CABIN TEMPERATURE SENSOR PANEL IS SHOWN IN THE OPEN POSITION.

2538620 S0000602628_V1

Passenger Cabin Temperature Sensor Panel - Removal
Figure 402/25-23-61-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-23-61-400-802

9. Passenger Cabin Temperature Sensor Panel - Installation

(Figure 402)

A. References

Reference	Title
21-00-00-730-801	Air Conditioning, System Test, Air Conditioning IBIT (P/B 501)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
5	Clamp	25-23-61-50-120	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

D. Passenger Cabin Temperature Sensor Panel Installation

SUBTASK 25-23-61-860-009

(1) Make sure that these circuit breakers are open and have safety tags:

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
A	3	C01170	A/C ZONE TEMP VALVE/FAN CONT AFT PASS
A	9	C01158	AIR CONDITIONING PACK CONTROL LEFT DC
A	11	C01159	AIR CONDITIONING PACK CONTROL LEFT AC
B	2	C01167	A/C ZONE TEMP VALVE/FAN CONT FWD PASS
B	3	C01163	A/C ZONE TEMP VALVE/FAN CONT FLT DECK
B	9	C01161	AIR CONDITIONING PACK CONT RIGHT DC
B	11	C01162	AIR CONDITIONING PACK CONT RIGHT AC

SUBTASK 25-23-61-420-003

(2) Find the location for the cabin temperature sensor panel [3].

(3) Put the panel in the correct position.

(4) Engage the clamp [5] on to the Passenger Service Unit (PSU) rail.

(a) Make sure that the pins are engaged. You may have to wiggle the panel slightly to make sure that the pin is engaged.

(5) Connect the electrical connectors [2].

(6) Connect the lanyard [4] to the PSU rail.

(7) Push the cabin temperature sensor panel [3] up until you hear the latches engage it the PSU rail.

WARNING MAKE SURE THAT THE PSU LATCHES ARE ENGAGED. IF YOU DO NOT CORRECTLY ENGAGE THE LATCHES, THE PSU CAN FALL AND CAUSE INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT.

(8) If there is more than one latch, lightly pull down on the edges of the cabin temperature sensor panel [3] to make sure the latches are engaged.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-23-61-860-007

(9) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-4

Row	Col	Number	Name
A	3	C01170	A/C ZONE TEMP VALVE/FAN CONT AFT PASS
A	9	C01158	AIR CONDITIONING PACK CONTROL LEFT DC
A	11	C01159	AIR CONDITIONING PACK CONTROL LEFT AC
B	2	C01167	A/C ZONE TEMP VALVE/FAN CONT FWD PASS
B	3	C01163	A/C ZONE TEMP VALVE/FAN CONT FLT DECK
B	9	C01161	AIR CONDITIONING PACK CONT RIGHT DC
B	11	C01162	AIR CONDITIONING PACK CONT RIGHT AC

E. Cabin Temperature Sensor Test

SUBTASK 25-23-61-720-001

(1) To do a test of the sensor that was replaced, do the steps that follow:

(a) Do the IBIT test on the right Integrated Air System Controller, M2957 if you replaced the sensor for one of these zones:

1) The flight compartment zone.

2) The FORWARD passenger compartment zone.

(b) Do the IBIT test on the left Integrated Air System Controller, M2939 if you replaced the sensor for the AFT passenger compartment zone.

(c) To do the IBIT test, do this task: Air Conditioning, System Test, Air Conditioning IBIT, TASK 21-00-00-730-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CEILING MOUNTED CURTAIN AND TRACK - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) Ceiling Mounted Curtain and Track Removal,

(2) Ceiling Mounted Curtain and Track Installation.

(3) Crew Rest Area Removal.

(4) Crew Rest Area Installation.

TASK 25-24-05-000-801

2. Ceiling Mounted Curtain and Track Removal

(Figure 401)

A. General

(1) This task is for the removal of the ceiling mounted curtain and tracks in the passenger compartment.

B. References

Reference	Title
25-21-71-000-805	Close Out Ceiling Panel Removal (P/B 401)

C. Location Zones

Zone	Area
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

D. Prepare for the Removal

SUBTASK 25-24-05-010-001

(1) If it is necessary, do this task: Close Out Ceiling Panel Removal, TASK 25-21-71-000-805.

E. Ceiling Mounted Curtain and Track Removal

SUBTASK 25-24-05-020-004

(1) Remove the curtain and track from the ceiling:

(a) If applicable, remove the cap [7] and the magnetic cap [6] from the ends of the curtain track [1].

(b) Remove the curtain [2] from the curtain track [1].


(c) If applicable, remove the screw [3] from the curtain track [1].

(d) Remove the screws [4] from the curtain track [1].


(e) Remove the curtain track [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

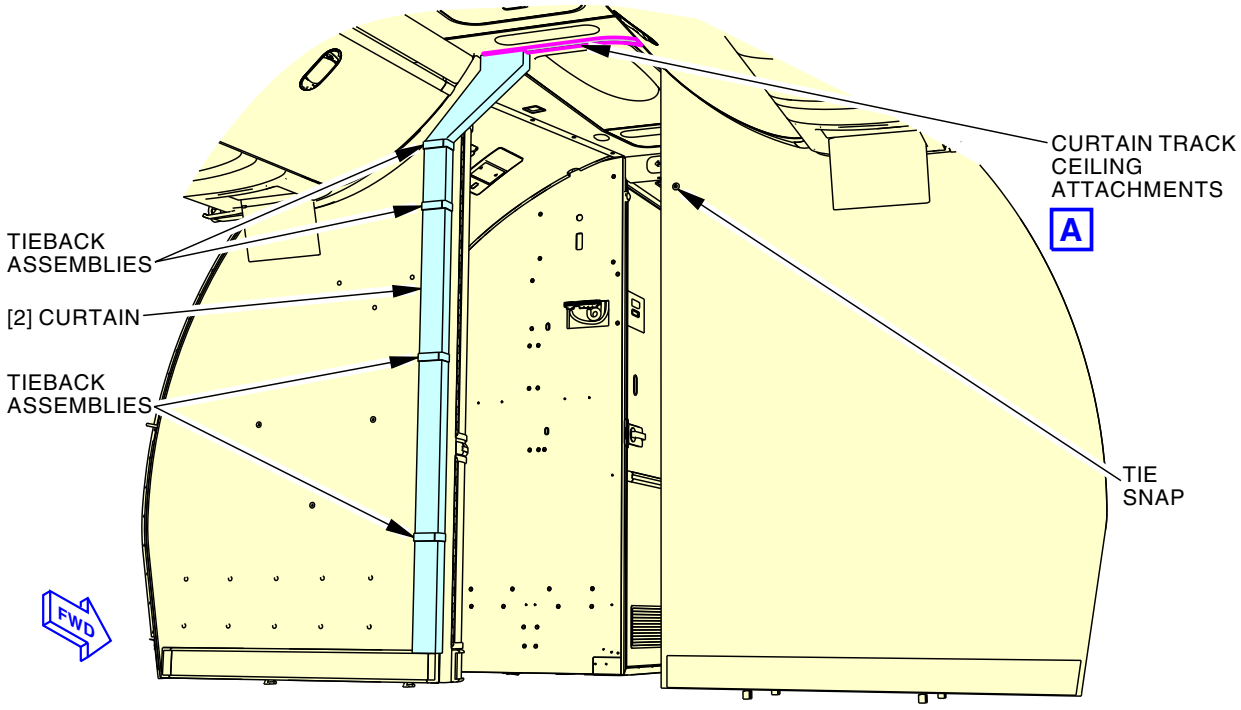

FORWARD PASSENGER COMPARTMENT (EXAMPLE)

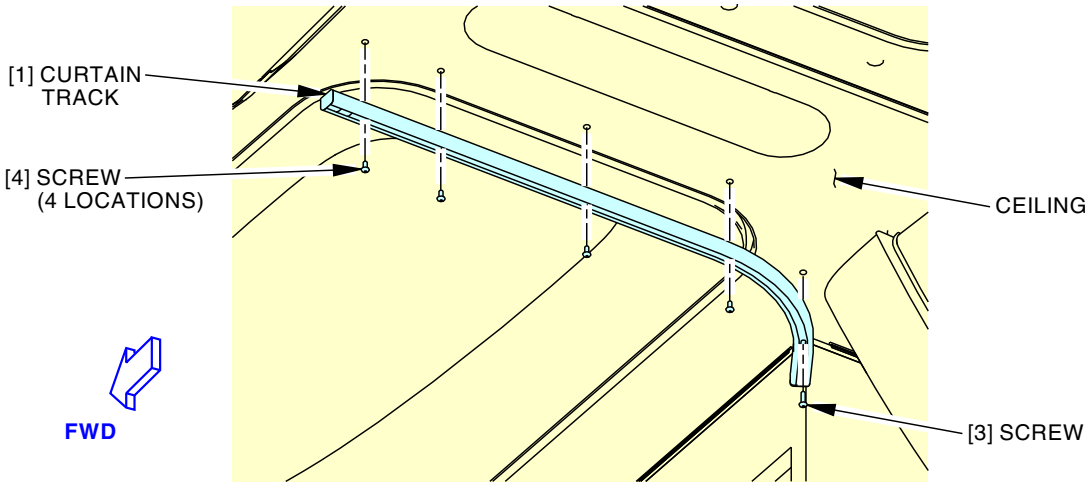


CURTAIN TRACK ATTACHMENT (EXAMPLE)

A

2411890 S00061529387_V1

Ceiling Mounted Curtain and Track Installation
Figure 401/25-24-05-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

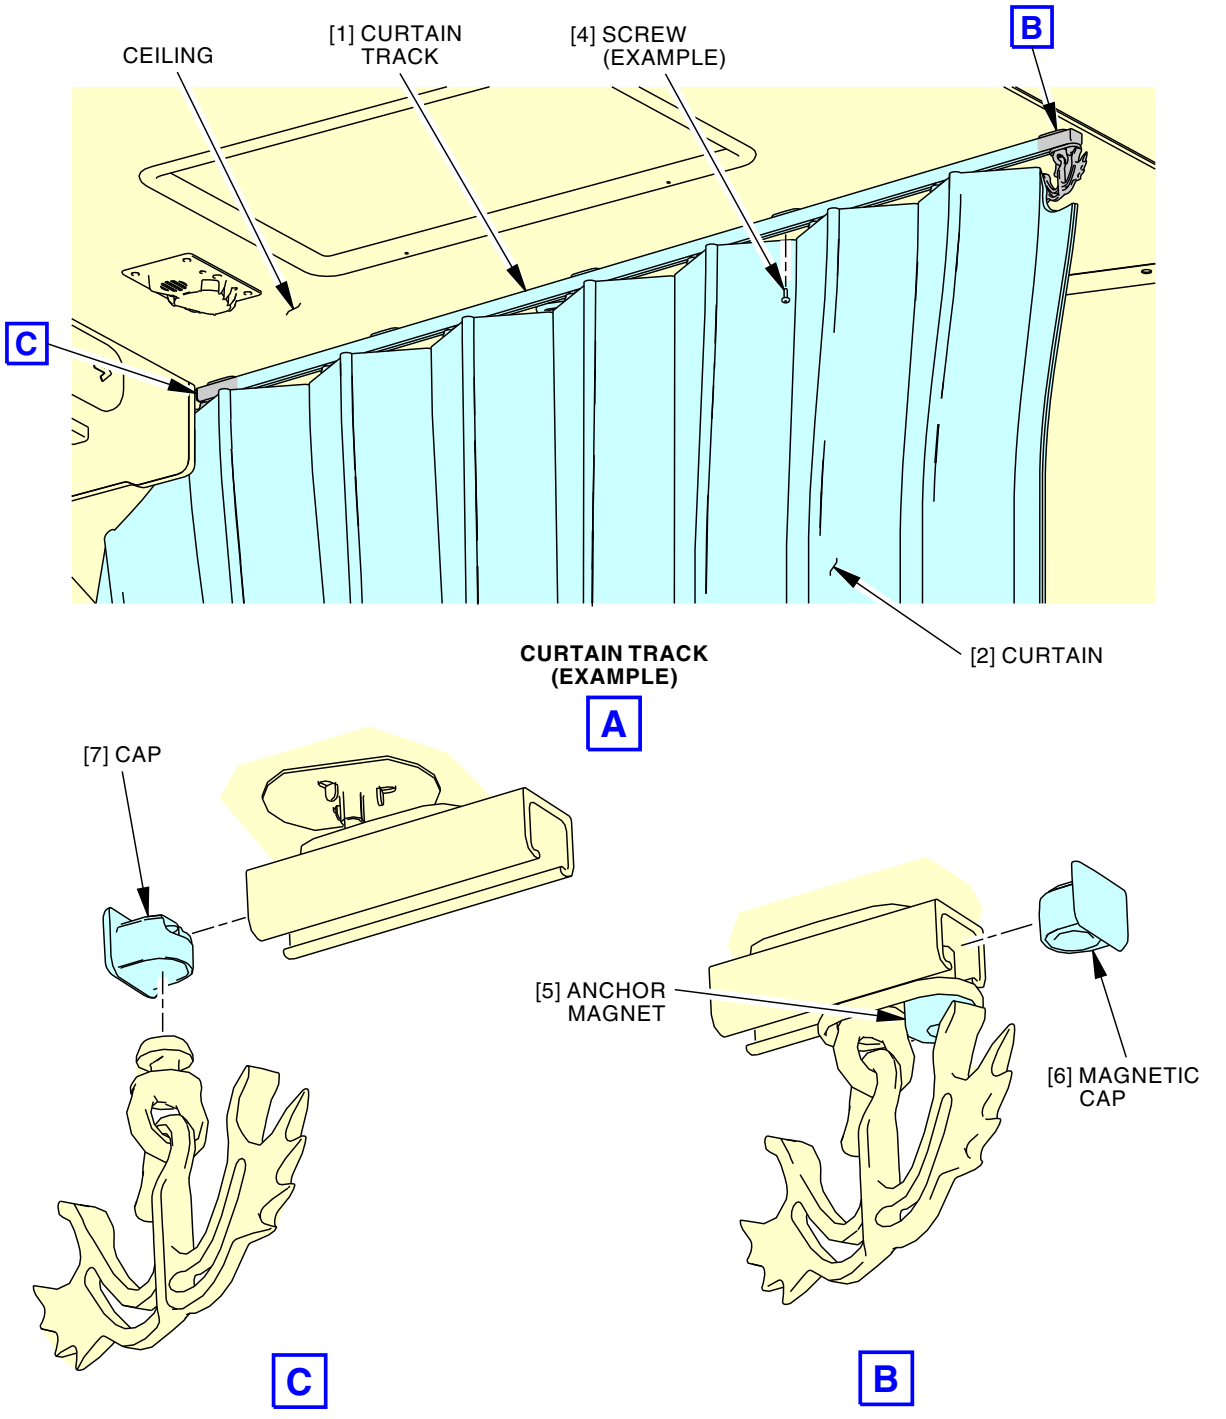

Ceiling Mounted Curtain and Track Installation
Figure 401/25-24-05-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-05-400-801

3. Ceiling Mounted Curtain and Track Installation

(Figure 401)

A. General

(1) This task is for the installation of the ceiling mounted curtain and tracks in the passenger compartment.

B. References

Reference	Title
25-21-71-400-805	Close Out Ceiling Panel Installation (P/B 401)

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Curtain track	25-24-07-02-145	PTF ALL
		25-24-07-11-155	PTF ALL
2	Curtain	25-24-07-02-070	PTF ALL
		25-24-07-11-070	PTF ALL

D. Location Zones

Zone	Area
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

E. Ceiling Mounted Curtain and Track Installation

SUBTASK 25-24-05-020-003

(1) Install the curtain and track to the ceiling:

(a) Install the curtain track [1] to the ceiling with the screws [4].

(b) If applicable, install the screw [3].

(c) Install the curtain [2] on the curtain track [1].

(d) If applicable, attach the cap [7] and the magnetic cap [6] to the ends of the curtain track [1].

1) Make sure that the anchor magnet [5] is at the end of the magnetic cap [6].

F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-24-05-410-001

(1) If it is removed, do this task: Close Out Ceiling Panel Installation, TASK 25-21-71-400-805.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PARTITIONS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Forward Windscreen with Stowage Removal

(2) Forward Windscreen with Stowage Installation

TASK 25-24-15-000-802

2. Forward Windscreen with Stowage - Removal

(Figure 401)

A. General

(1) This task includes the steps to remove the forward windscreen [21] with stowage.

B. References

Reference	Title
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)
33-26-04-040-801	Closet Lights - Deactivation (P/B 201)

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Prepare for the Removal

SUBTASK 25-24-15-860-009

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
C	9	C04071	PASS CABIN SIGNS FASTEN SEAT BELT L
D	11	C00442	PASSENGER CABIN SIGNS PASS SIGN CONT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

This circuit breaker is inoperative and should remain open:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
C	11	C01407	PASS CABIN SIGNS NO SMOKING L (INOP)

SUBTASK 25-24-15-010-008

(2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-24-15-860-005

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

MAKE SURE THAT YOU DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-24-15-040-001

(4) If it is necessary, do this task: Closet Lights - Deactivation, TASK 33-26-04-040-801.

SUBTASK 25-24-15-010-001

(5) If it is necessary, do this task: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

SUBTASK 25-24-15-010-002

(6) If it is necessary, remove the equipment or furnishings that are attached to the windscreen [21].

SUBTASK 25-24-15-010-003

(7) If it is necessary, remove all loose items from the stowage compartments in the windscreen [21].

F. Forward Windscreen With Stowage Removal

SUBTASK 25-24-15-020-003

(1) Disconnect the electrical connectors [28].

(a) Install the caps on the electrical connections to prevent contamination.

SUBTASK 25-24-15-020-004

(2) Do these steps to disconnect the windscreen [21] from the tie rod [24]:

(a) Remove the access panel [26] with the fasteners.

1) You can find the access panel [26] in the upper stowage compartment.

(b) Remove the cover [27] to access the quick release pin [25].

(c) Remove the quick release pin [25].

SUBTASK 25-24-15-020-005

(3) Do these steps to remove the windscreen [21] from each bottom attachment:

(a) If applicable, remove the access panel [29] with the fasteners.

1) You can find the access panel [29] in the lower stowage compartment.

(b) Loosen the anti-rattle screw [30].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Disengage the shear plunger from the seat track [31].

(d) Move the fitting [32] aft or forward until it moves freely out of the seat track [31].

SUBTASK 25-24-15-020-006

(4) Remove the windscreen [21].


(a) Disengage the support pin [23] from the fitting [22].

SUBTASK 25-24-15-020-007

(5) If it is necessary, remove the trim seals along the top and outboard edges of the windscreen [21].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

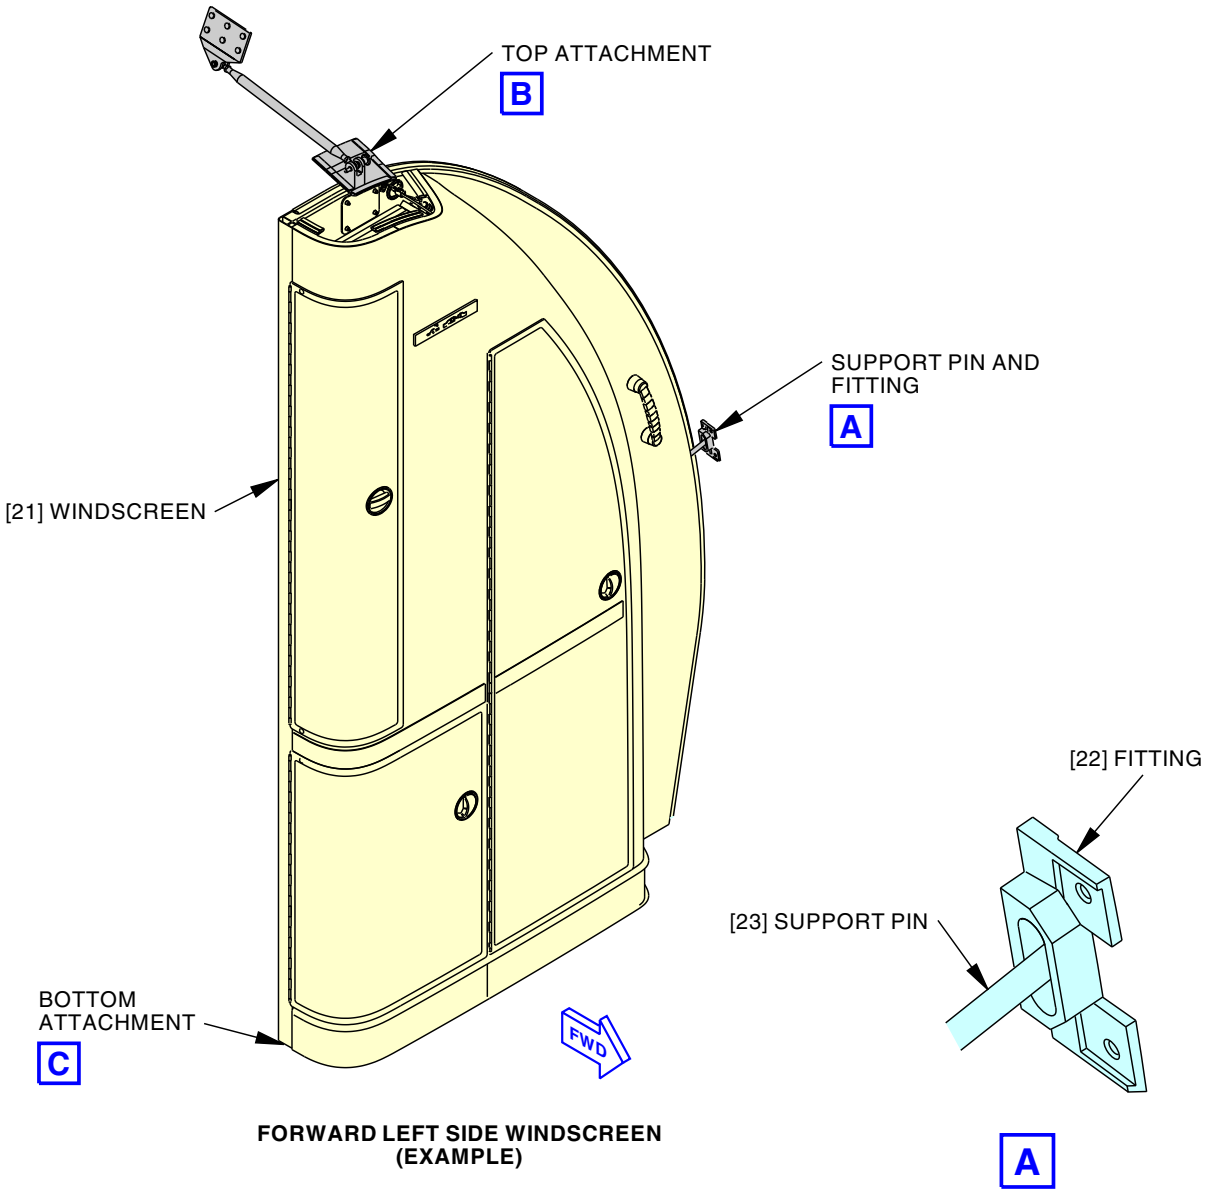


FORWARD LEFT SIDE WINDSCREEN (EXAMPLE)

2546758 S0000604580_V1

Forward Windscreen with Stowage Installation
Figure 401/25-24-15-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

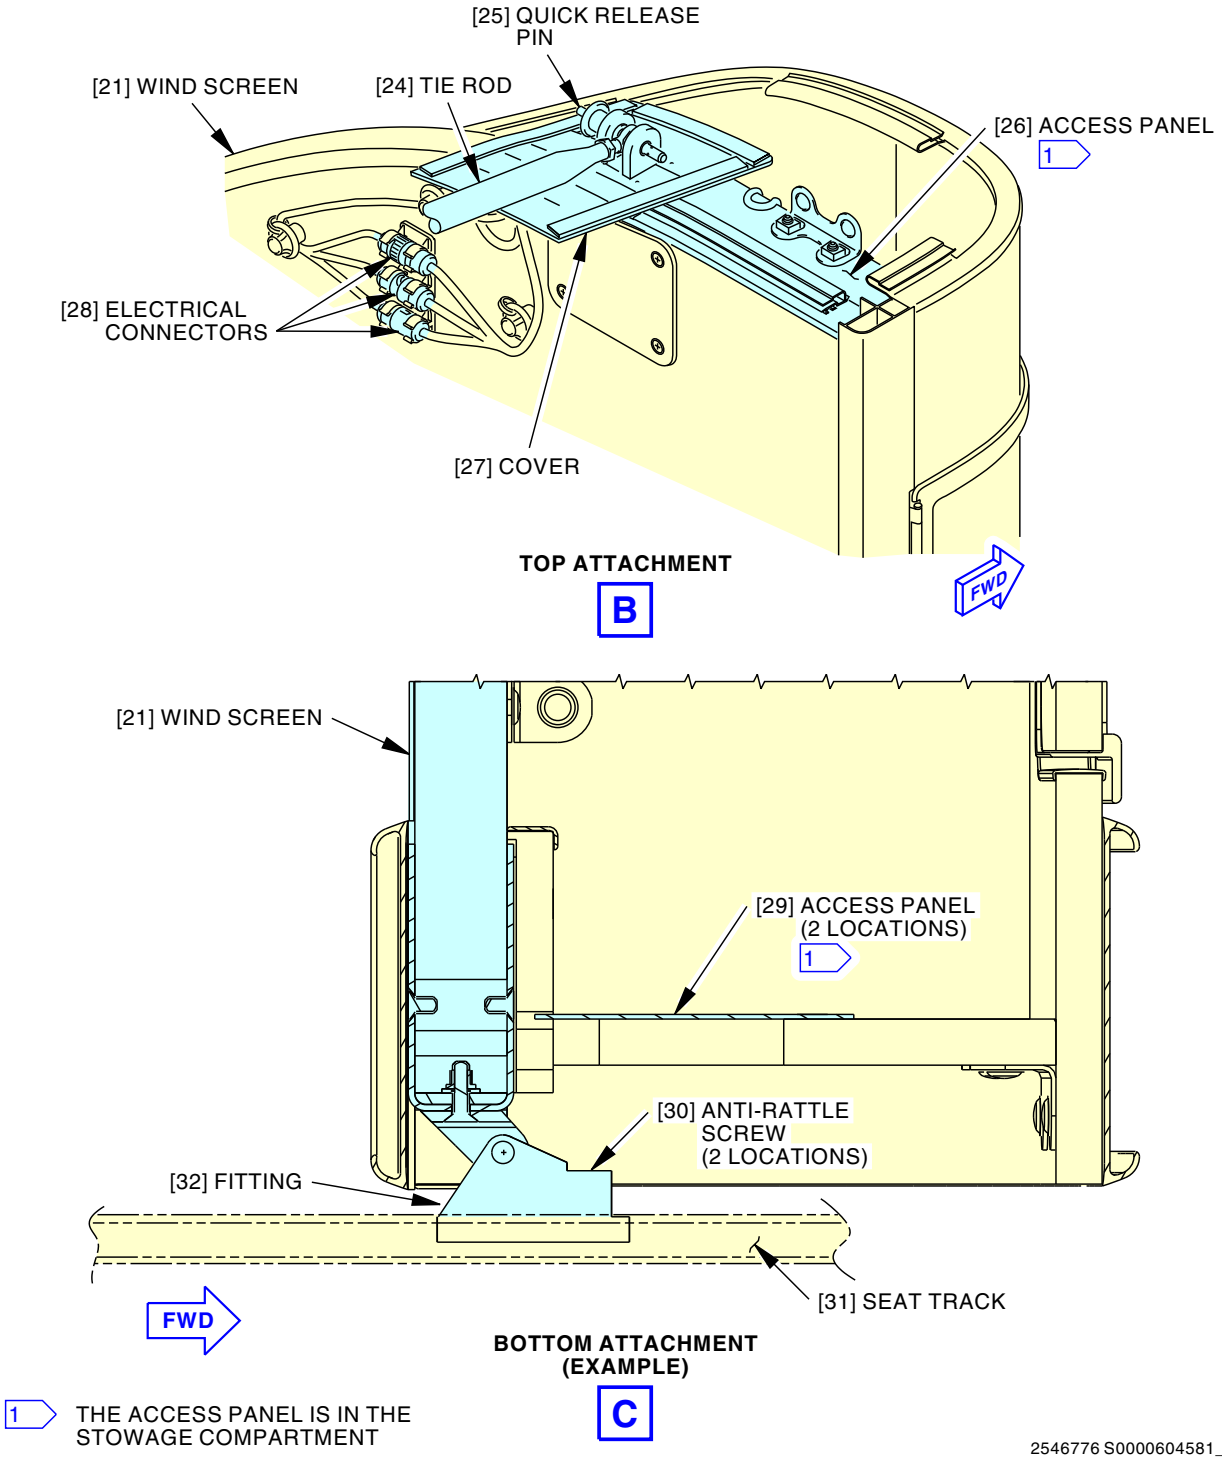

Forward Windscreen with Stowage Installation
Figure 401/25-24-15-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-15-400-802

3. Forward Windscreen with Stowage - Installation

(Figure 401)

A. General

(1) This task includes the steps to install the forward windscreen [21] with stowage.

B. References

Reference	Title
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)
33-26-04-440-801	Closet Lights - Activation (P/B 201)

C. Consumable Materials

Reference	Description	Specification
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
A50414	Adhesive - Silicone Rubber - RTV 108 (Clear)	BAC5010 Type 60 Class A Grade 2 / MIL-A-46106 Type 1
A50614	Adhesive - Sealant, Silicone Rubber, RTV108 (Translucent)	BAC5055 Type 2
B00067	Alcohol - Denatured, Ethyl (Ethanol)	AMS 3002 (Supersedes O-E-760)

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
21	Windscreen	25-24-15-01A-420	PTF ALL
24	Tie rod	25-24-15-01-045	PTF ALL

E. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
220	Subzone - Passenger Compartment - Body Station 259.50 to 360.00

F. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

G. Forward Windscreen With Stowage Installation

SUBTASK 25-24-15-420-002

(1) If it is necessary, install the trim seals along the top and outboard edges of the windscreen [21].

SUBTASK 25-24-15-420-003

(2) Put the windscreen [21] in the correct position on the seat tracks [31].

(a) Engage the support pin [23] with the fitting [22].

SUBTASK 25-24-15-420-004

(3) Do these steps to connect the windscreen [21] to the seat tracks:

(a) Engage the shear plunger into the seat track [31].

(b) Tighten the anti-rattle screw [30] until it makes contact with the seat track, then tighten it an additional quarter-turn.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) If applicable, install the access panel [29] with the fasteners in the lower stowage compartment.

SUBTASK 25-24-15-420-005

(4) Do these steps to seal the windscreen [21] with the floor mat:

(a) Clean the area with alcohol, B00067.

(b) Apply RTV 108 adhesive, A50414, RTV6708 adhesive, A50030, or RTV108 adhesive, A50614 between the windscreen [21] and mat floor covering.

SUBTASK 25-24-15-420-006

(5) Do these steps to connect the windscreen [21] to the tie rod [24]:

(a) Install the quick release pin [25].

1) The direction of the quick release pin [25] is optional.

(b) Install the cover [27].

1) Apply a silicone rubber seal around the tie rod fitting.

(c) Install the access panel [26] with the fasteners in the upper stowage compartment.

SUBTASK 25-24-15-420-007

(6) Connect the electrical connectors [28].

(a) Remove the caps from the electrical connections.

H. Put the Airplane Back to its Usual Condition

SUBTASK 25-24-15-410-003

(1) If it is necessary, install the loose items that you removed from the stowage compartments in the windscreen [21].

SUBTASK 25-24-15-410-001

(2) If removed, install the equipment or furnishings to the windscreen [21].

SUBTASK 25-24-15-410-002

(3) If it is necessary, do this task: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

SUBTASK 25-24-15-860-006



WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

MAKE SURE THAT YOU DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	5	C01939	COVE LIGHT

SUBTASK 25-24-15-410-008

(5) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-24-15-860-010

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
C	9	C04071	PASS CABIN SIGNS FASTEN SEAT BELT L
D	11	C00442	PASSENGER CABIN SIGNS PASS SIGN CONT

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	12	C01936	ATTENDANT PANELS

This circuit breaker is inoperative and should remain open:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
C	11	C01407	PASS CABIN SIGNS NO SMOKING L (INOP)

SUBTASK 25-24-15-440-001

(7) If it is necessary, do this task: Closet Lights - Activation, TASK 33-26-04-440-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OVERHEAD STOWAGE BIN - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Bin assist mechanism activation

(2) Bin assist mechanism removal

(3) Bin assist mechanism installation

(4) Bin assist gas spring removal

(5) Bin assist gas spring installation

(6) Overhead stowage bin alternate open method.

TASK 25-24-31-440-801

2. Bin Assist Mechanism Activation

(Figure 201)

A. General

(1) This task gives instructions for the activation of the bin assist mechanism.

B. Bin Assist Mechanism Activation

SUBTASK 25-24-31-440-001

(1) Activate the bin assist mechanism as follows:

(a) Turn the inboard edge of the bin bucket up a minimum of 1.5 in. (38.1 mm) or 3°arc (0 rad).

NOTE: Rotate the inboard edge more than 1.5 in. (38.1 mm) to make sure that the bearing passes the cam bracket.

(b) Use a hex wrench to tighten the bin assist screw to 20 in-lb (2 N·m) - 23 in-lb (3 N·m).

NOTE: The head of the screw will be 0.33 in. (8.38 mm) from the outer edge of the cover plate when correctly installed.

(c) Push the assist mechanism lever.

NOTE: The assist will not activate until load is applied to the bucket.

(d) Pull down on the threshold to apply load.

(e) Make sure that bin assist activates and start to pull the bin to close.

(f) When assist is detected, reapply load to the threshold.

(g) When the bin approaches the fully open position make sure that you hear two audible clicks.


NOTE: The assist is now reset. The assist mechanism lever will be in its initial position.

NOTE: The bin bucket will turn freely, open and closed, without the activation of the assist.

NOTE: Bucket misalignment in the open position can happen because of the assist mechanism. This condition is permitted.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

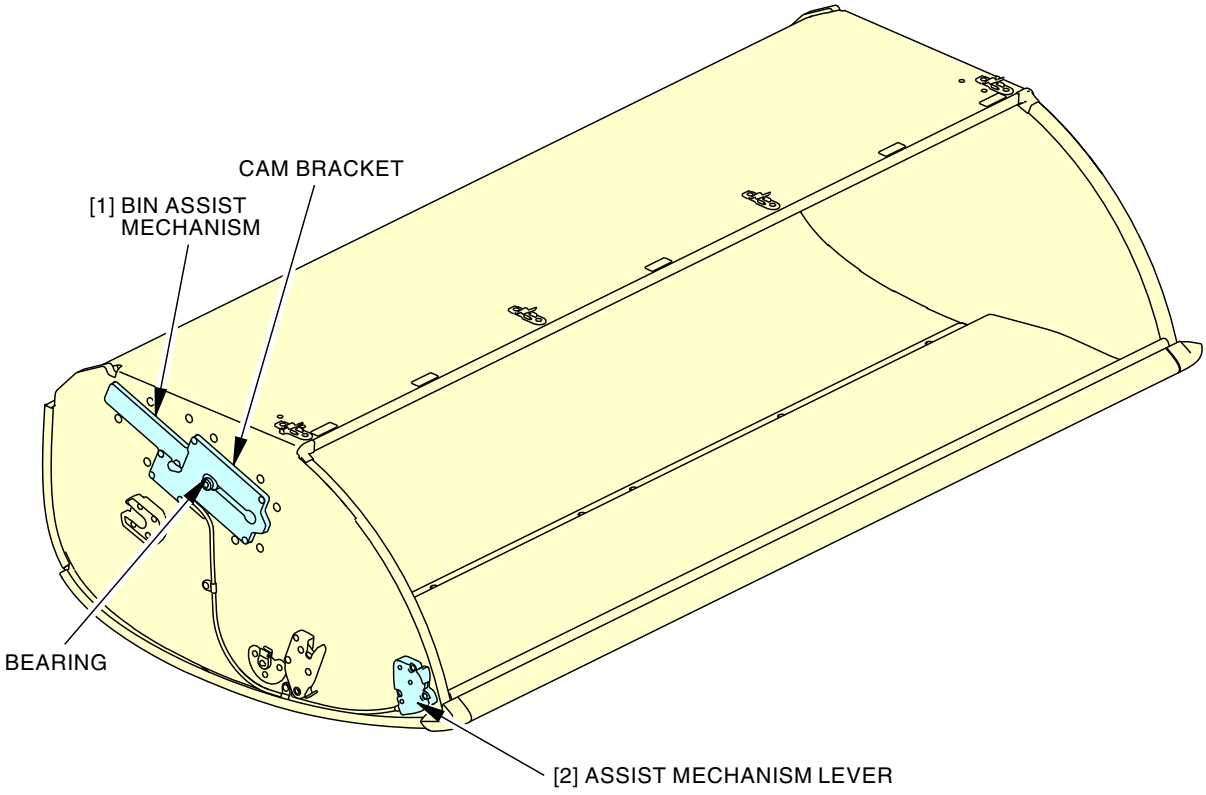

2812635 S0000647579_V1

Bin Assist Mechanism - Activation
Figure 201/25-24-31-990-811

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-31-000-805

3. Bin Assist Mechanism Removal

(Figure 202)

A. General

(1) This task is for the removal of the overhead stowage bin assist mechanism.

B. References

Reference	Title
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Removal

SUBTASK 25-24-31-010-004

(1) Do this task: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

E. Bin Assist Mechanism Removal

SUBTASK 25-24-31-010-005

(1) Remove the two screws [5] and the two clamps [4] from the bin assist cable [23].

SUBTASK 25-24-31-010-006

(2) Remove the three screws [3] that attach the assist mechanism lever [2] to the stowage bin.

SUBTASK 25-24-31-010-007


(3) Remove the 10 screws [6] that attach the bin assist mechanism [1] to the inner side of the stowage bin.

SUBTASK 25-24-31-020-022

(4) Remove the bin assist mechanism [1] from the stowage bin.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

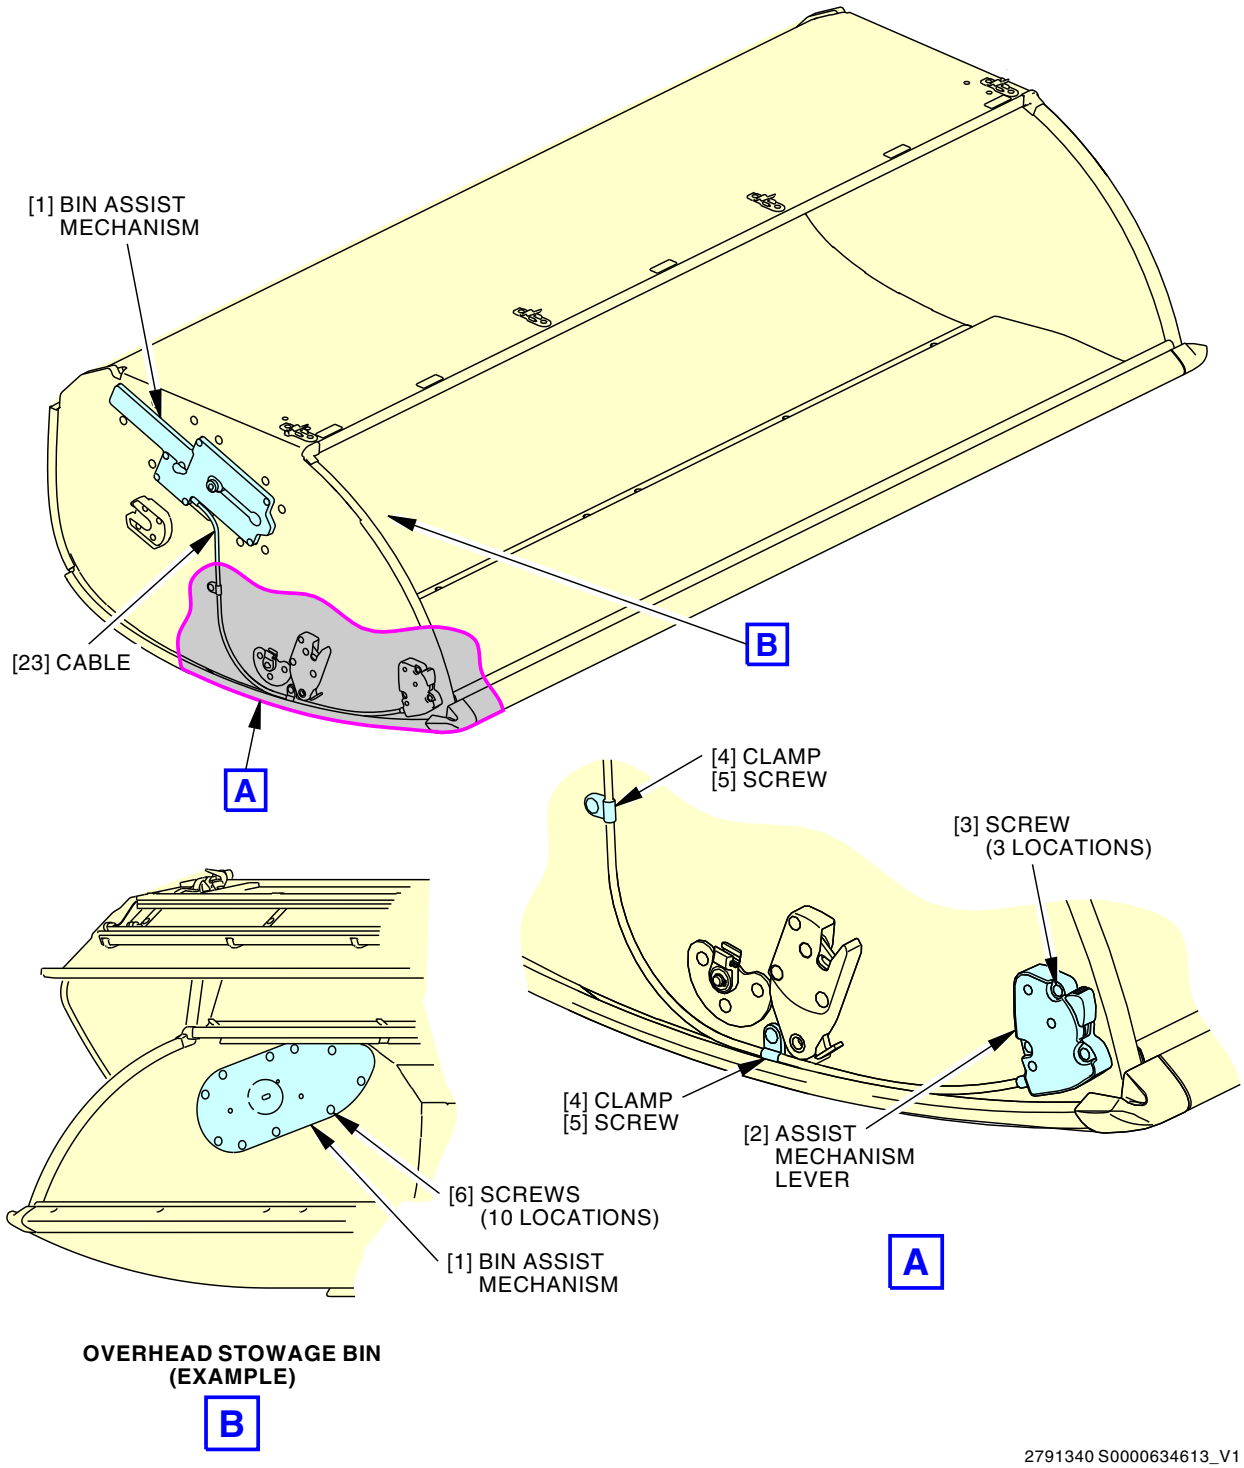

Bin Assist Mechanism Installation
Figure 202/25-24-31-990-809

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-31-400-806

4. Bin Assist Mechanism Installation

(Figure 202)

A. General

(1) This task is for the installation of the overhead stowage bin assist mechanism.

B. References

Reference	Title
20-50-11-910-801	Standard Torque Values (P/B 201)
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Bin Assist Mechanism Installation

SUBTASK 25-24-31-420-025

(1) Install the bin assist mechanism [1] and cable [23] through the inner opening of the stowage bin.

SUBTASK 25-24-31-410-002

(2) Install the 10 screws [6] that attach the bin assist mechanism [1] to the stowage bin.

SUBTASK 25-24-31-420-026

(3) Tighten the screws [6] to standard torque value (TASK 20-50-11-910-801).

SUBTASK 25-24-31-410-003

(4) Install the three screws [3] that attach the assist mechanism lever [2] to the stowage bin.

SUBTASK 25-24-31-420-027

(5) Tighten the three screws [3] to the standard torque value (TASK 20-50-11-910-801).

SUBTASK 25-24-31-410-004

(6) Install the two screws [5] and two clamps [4] that attach the cable [23] to the stowage bin.

SUBTASK 25-24-31-420-028

(7) Tighten the two screws [5] to the standard torque value (TASK 20-50-11-910-801).

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-24-31-410-005

(1) Do this task: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

END OF TASK

TASK 25-24-31-000-806

5. Bin Assist Gas Spring Removal

(Figure 203)

A. General

(1) This task is for the removal of the bin assist gas spring.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. References

Reference	Title
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Removal

SUBTASK 25-24-31-010-008

(1) Do this task: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

E. Bin Assist Gas Spring Removal

SUBTASK 25-24-31-860-001

(1) Release the tension from the gas spring [21] as follows:

(a) Push the assist mechanism lever [2].

(b) Make sure that the gas spring [21] is in the extended position.

NOTE: The spring is in the extended position when the roller on the assist mechanism is towards the bin opening.

SUBTASK 25-24-31-010-009

(2) Remove the six screws [19] from the cover [20].

SUBTASK 25-24-31-860-002

(3) Use a bolt to compress the carriage [17] and the gas spring [21].

NOTE: This will disengage the hook from the gas spring tension.

NOTE: Use a bolt that is 5/16-18 x 4 inches long.

SUBTASK 25-24-31-010-010

(4) Loosen the bolt until the gas spring [21] is extended and has no tension.


SUBTASK 25-24-31-020-023

(5) Remove the retaining ring [18], the gas spring [21] and the washer [22].

NOTE: The washer is used on the bin assist mechanism that have P/N 412A7251-7C.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

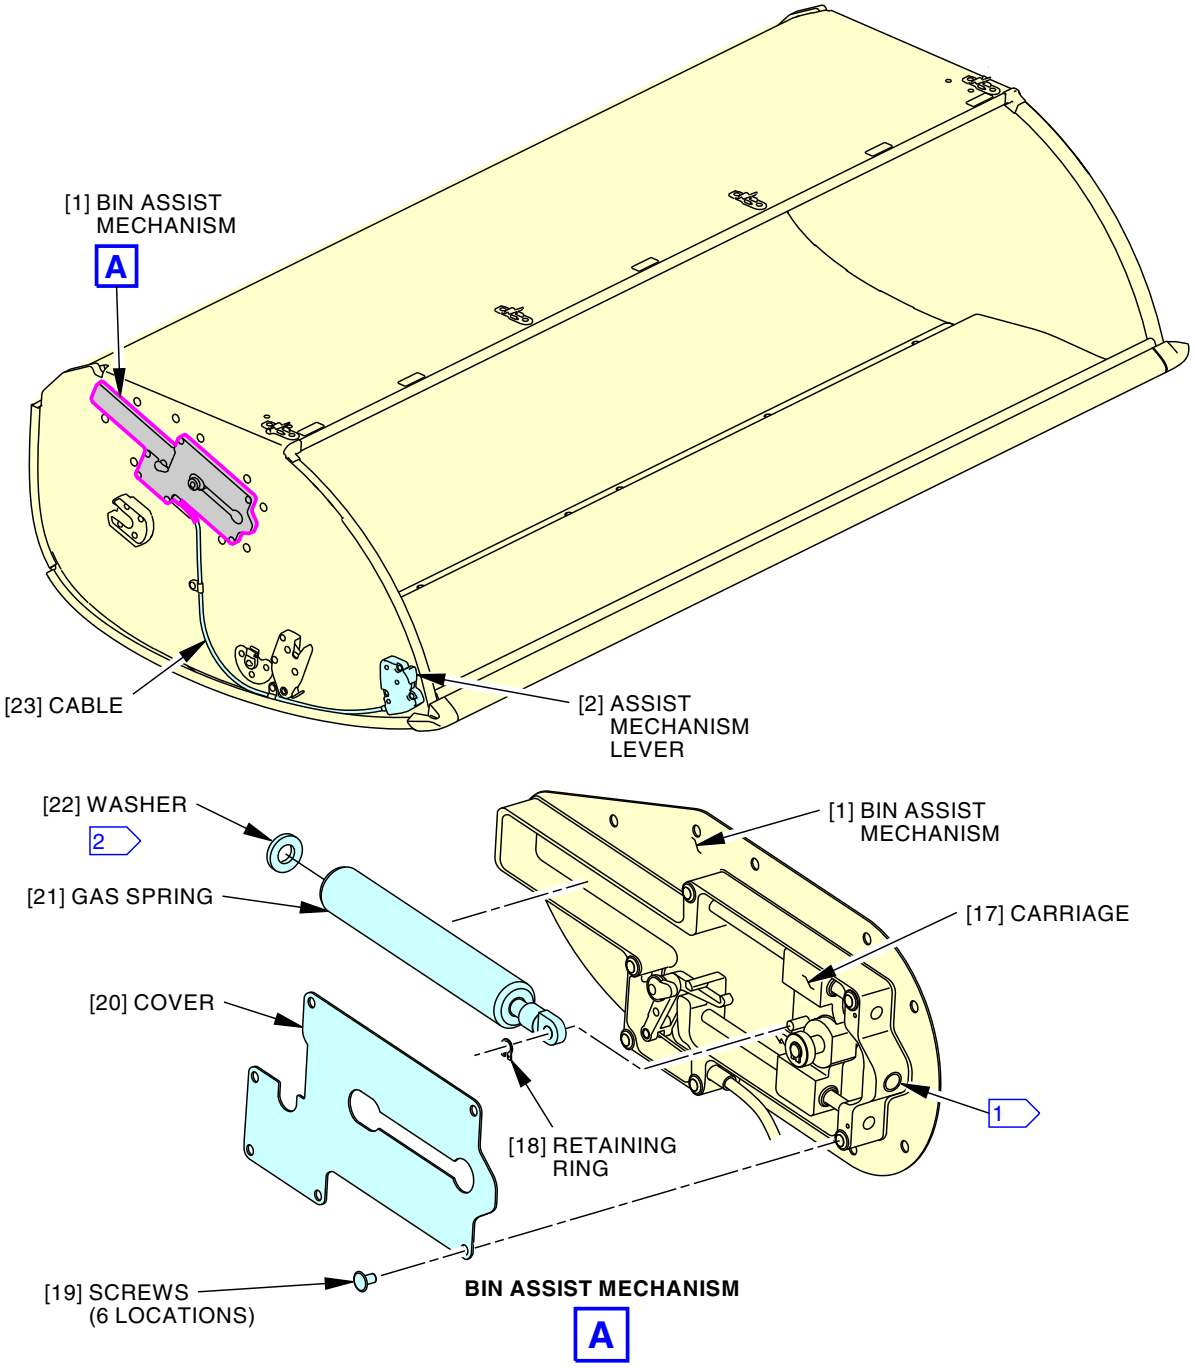

1 THREADED HOLE IS TO ASSIST IN REMOVAL AND INSTALLATION FOR GAS SPRING.

2 REFER TO IPC FOR APPLICABILITY.

2791343 S0000634618_V1

Bin Assist Mechanism Gas Spring Installation
Figure 203/25-24-31-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-31-400-807

6. Bin Assist Gas Spring Installation

(Figure 203)

A. General

(1) This task is for the Installation of the bin assist gas spring.

B. References

Reference	Title
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Bin Assist Gas Spring Installation

SUBTASK 25-24-31-420-029

(1) Install the washer [22], the gas spring [21], the retaining ring [18] on the carriage [17].

NOTE: The washer is used on bin assist mechanism that have P/N 412A7251-7C.

SUBTASK 25-24-31-860-003

(2) Use a bolt to compress the carriage [17] and the gas spring [21].

NOTE: Compress the spring enough to engage the hook to the carriage and allow the gas spring to have some tension.

NOTE: Use a bolt that is 5/16-18 x 4 inches long.

SUBTASK 25-24-31-860-004

(3) Loosen the bolt until the gas spring [21] is extended and has no tension.

SUBTASK 25-24-31-080-001

(4) Remove the bolt.

SUBTASK 25-24-31-420-030

(5) Install the six screws [19] that attach the cover [20] to the bin assist mechanism [1].

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-24-31-410-006

(1) Do this task: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

——— END OF TASK ———

TASK 25-24-31-820-801

7. Overhead Stowage Bin - Alternate Open Method

A. General

(1) This task opens the overhead stowage bin with a malfunctioning latch.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Reference	Description
SPL-1641	Lever - Stowage Bin Release Part #: J25001-5 Supplier: 81205

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Procedure

SUBTASK 25-24-31-820-005

(1) If you can not open the stowage bin with the stowage bin handle, then do these steps to move the emergency release lever to release the stowage bin latch.

NOTE: Usually the stowage bin handle will release one of the two latches. Use the emergency release lever to release the other latch. Pull down lightly at each end of the stowage bin, while you pull on the handle, to find which end is not released.

Procedure 1 (Using the lever, SPL-1641)

(a) Put the lever, SPL-1641 between the stowage bins above the latch.

NOTE: Two to three inches below the top edge of the stowage bin is a good location to start.

NOTE: The lever, SPL-1641 should work at all latch locations, but it is a tight fit at the slip joint locations. If you use it at a slip joint be careful not to damage the seal (make sure the lever, SPL-1641 does not have sharp edges).

(b) Turn the lever, SPL-1641 to point toward the stowage bin you want to open.

(c) Move the lever, SPL-1641 down and outboard, keeping it in contact with the lip of the stowage bin. At the same time, pull on the stowage bin handle (to release the other latch) and pull down on the stowage bin to open it.

NOTE: You will feel the lever, SPL-1641 hit the emergency release lever. Push on the lever, SPL-1641 until the latch opens.

NOTE: You must hold the emergency release lever until you open the bin. Usually the latch will close again if you release the emergency release lever before you open the bin.

(d) Procedure 2 (When the lever, SPL-1641, is not available)

NOTE: If the lever, SPL-1641, is available use it. It is the easier way to open the bin.

1) Open the stowage bin that is adjacent to the latch that will not release.

NOTE: If you cannot open a stowage bin adjacent to the latch you want to release then you cannot use this procedure. You must use Procedure 1 above that uses the lever, SPL-1641.

2) Put your finger (not all fingers will fit) or a small object (such as a 1/4 inch drive deep socket or a Chapstick) in the channel at the edge of the stowage bin. Move it down the channel behind the latch and push down on the emergency release lever with it. At the same time, pull on the stowage bin handle (to release the other latch) and pull down on the stowage bin to open it.

NOTE: You must hold the emergency release lever until you open the bin. Usually the latch will close again if you release the emergency release lever before you open the bin.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-24-31-820-006

(2) Replace or adjust latch if it is necessary.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

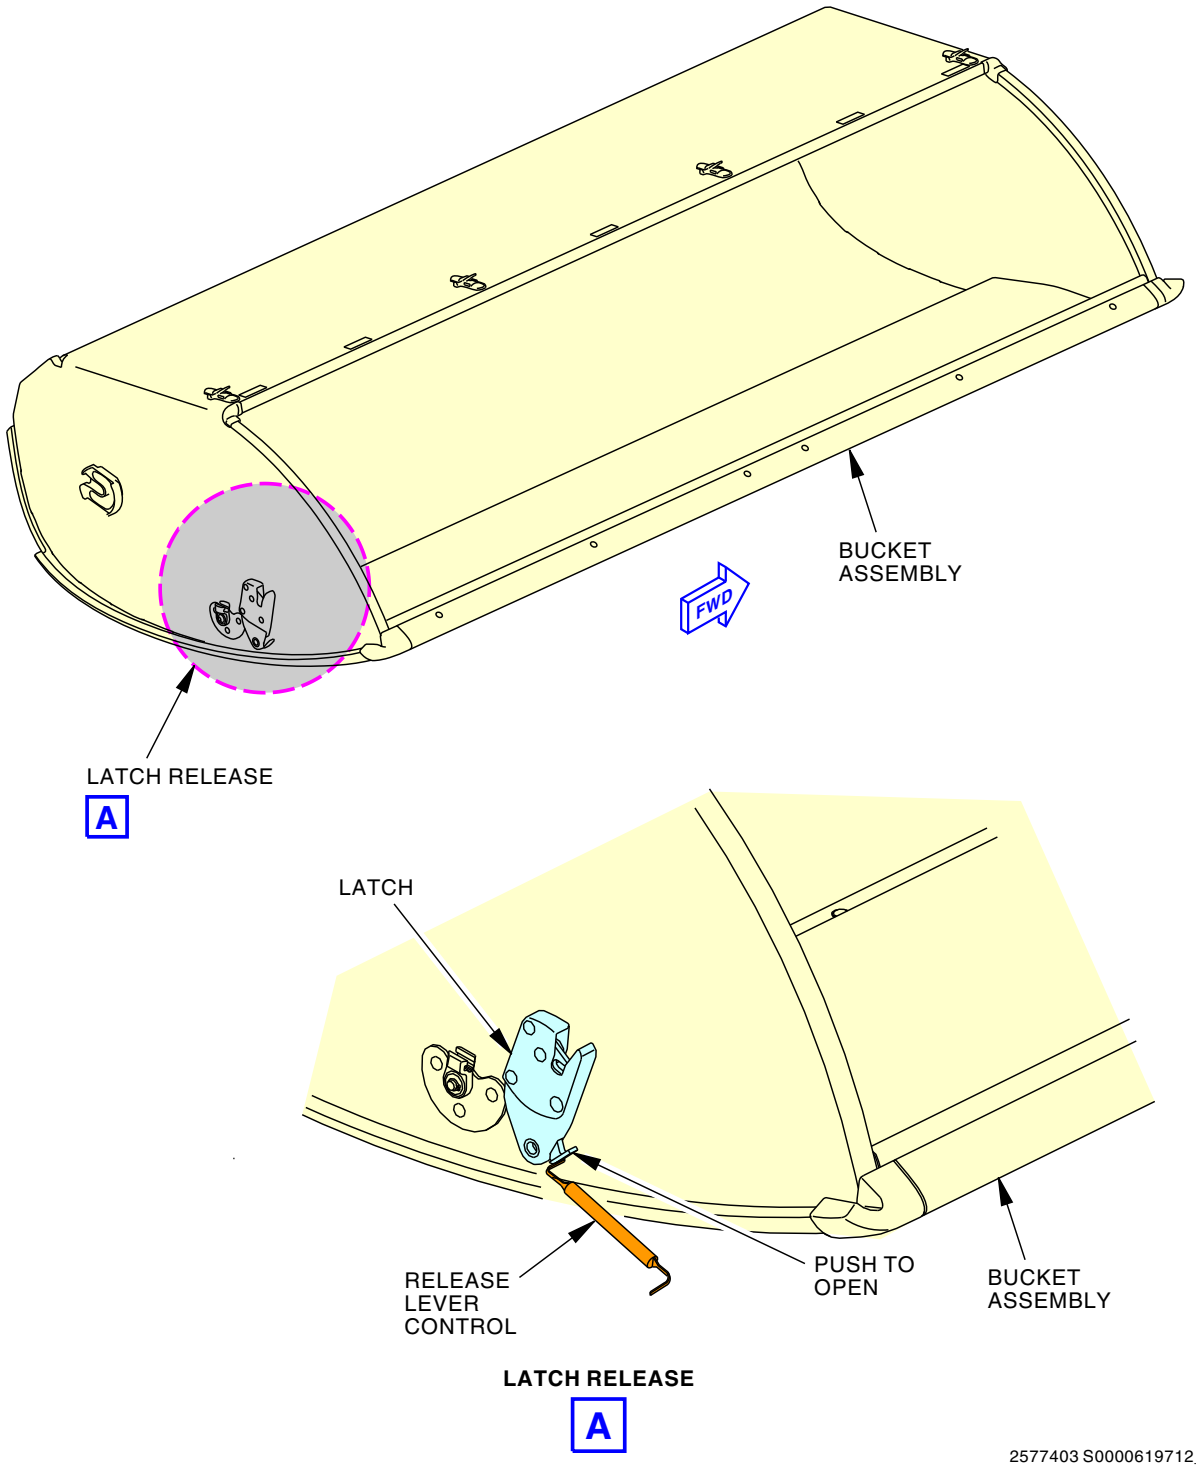

Stowage Bin Latch Release
Figure 204/25-24-31-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OVERHEAD STOWAGE BIN - REMOVAL/INSTALLATION

1. General

A. The procedure has these tasks:

NOTE: The strongback assembly will be called the overhead stowage bin module in these procedures.

(1) Removal of the overhead stowage bin

(2) Installation of the overhead stowage bin

(3) Removal of the overhead stowage bin module

(4) Installation of the overhead stowage bin module

TASK 25-24-31-000-801

2. Overhead Stowage Bin - Removal

(Figure 401 or Figure 402)

A. References

Reference	Title
25-22-00 P/B 401	PASSENGER SEATS - REMOVAL/INSTALLATION

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-13897	Release Key - Pivot Bin Snubber, Boeing Sky Interior Part #: ST1066RB-1 Supplier: 81205
STD-1101	Wrench - Hexagonal, 7/64 Inch, Long Shaft
STD-13607	Wrench - Allen, 1/16 inch

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. General

NOTE: It is recommended that two maintenance personnel do the removal of the overhead stowage bin.

E. Prepare for the Removal

SUBTASK 25-24-31-010-001

(1) Do the applicable task in this procedure if it is necessary: PASSENGER SEATS - REMOVAL/INSTALLATION, PAGEBLOCK 25-22-00/401.

SUBTASK 25-24-31-020-001

(2) Open the stowage bin [1].

F. Remove the Stowage bin

SUBTASK 25-24-31-020-002

(1) Remove the close out cloth [2] from the stowage bin [1]:

(a) Carefully use a small flat blade screwdriver to release the closeout cloth attach clips [3].

(b) Lift the flap on the close out cloth [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Pull the rod [4] from the attach clips [3].

SUBTASK 25-24-31-020-003

(2) Loosen the bin assist screw [5] if it is installed.

SUBTASK 25-24-31-020-004

WARNING HOLD THE STOWAGE BIN BUCKET TIGHTLY. IF IT TURNS, IT WILL DISENGAGE FROM THE PIVOT FITTING. INJURIES TO PERSONNEL CAN OCCUR.

PTF ALL; AIRPLANES WITH SNUBBER P/N SP23988

(3) Disconnect the lower end of the rate control snubber [6] from each side of the stowage bin [1].

(a) Pull down the bin bucket and hold the stowage bin [1] tightly.

(b) Make sure that the rate control snubber [6] is fully extended.

(c) Put the release key, SPL-13897, or allen wrench, STD-13607 into the rate control snubber [6].

NOTE: The tool should stop at the internal pin releasing the spring clip.

(d) Move the rate control snubber [6] away from the tool until the snubber disengages from the rate control receiver [7].

(e) Remove the release key, SPL-13897, or allen wrench, STD-13607.

PTF ALL; AIRPLANES WITH SNUBBER P/N SP25133

(4) Disconnect the lower end of the rate control snubber [6] from each side of the stowage bin [1].

(a) Pull down the bin bucket and hold the stowage bin [1] tightly.

(b) Make sure that the rate control snubber [6] is fully extended.

(c) Use a 7/64 inch long shaft hexagonal wrench, STD-1101 as a handle assist to disengage the rate control snubber [6] from the rate control receiver [7].

PTF ALL

SUBTASK 25-24-31-020-005

(5) Turn the stowage bin [1] downward 10.0°arc (0.2 rad).


SUBTASK 25-24-31-020-006

(6) Pull the stowage bin [1] from the module.


NOTE: The bin bucket pivot must disengage from the support assembly pivot.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

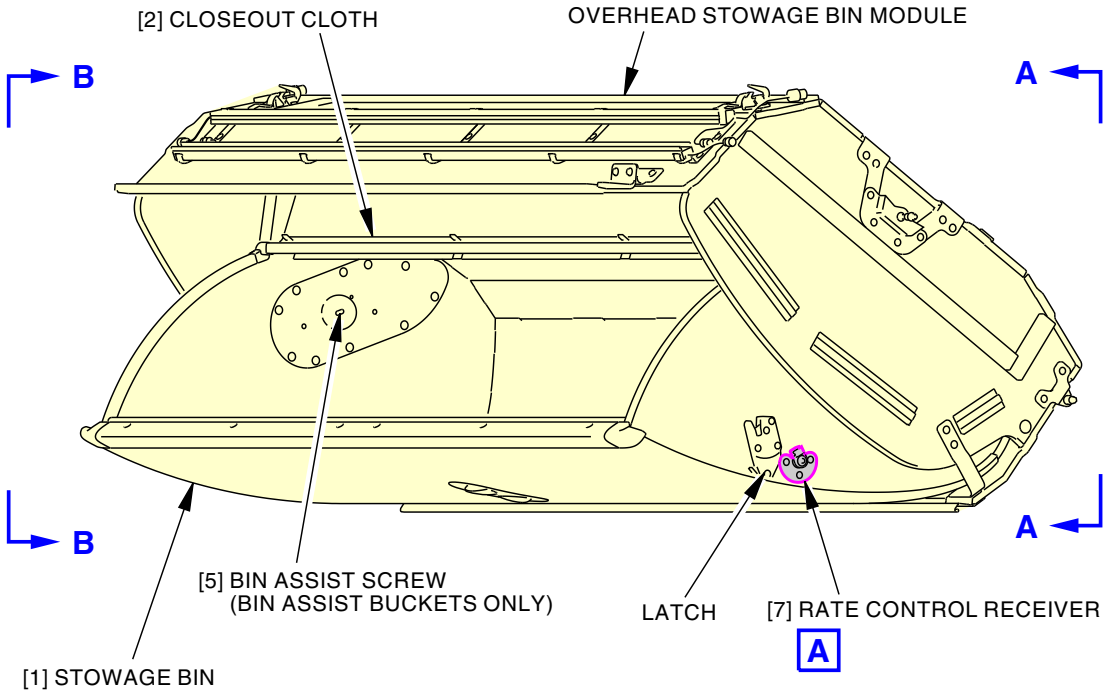

OVERHEAD STOWAGE BIN (EXAMPLE)

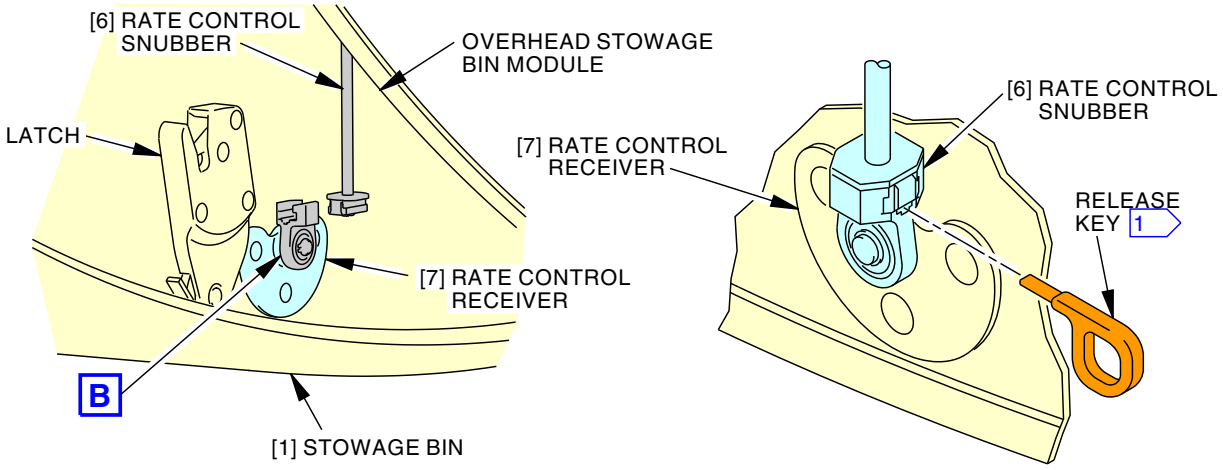

RATE CONTROL RECEIVER

A

(EXAMPLE)

B


NOTE:

1 RELEASE KEY SPL-13897, OR 1/16TH INCH STANDARD ALLEN WRENCH.

2411902 S00061529415_V1


Overhead Stowage Bin Installation
Figure 401/25-24-31-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

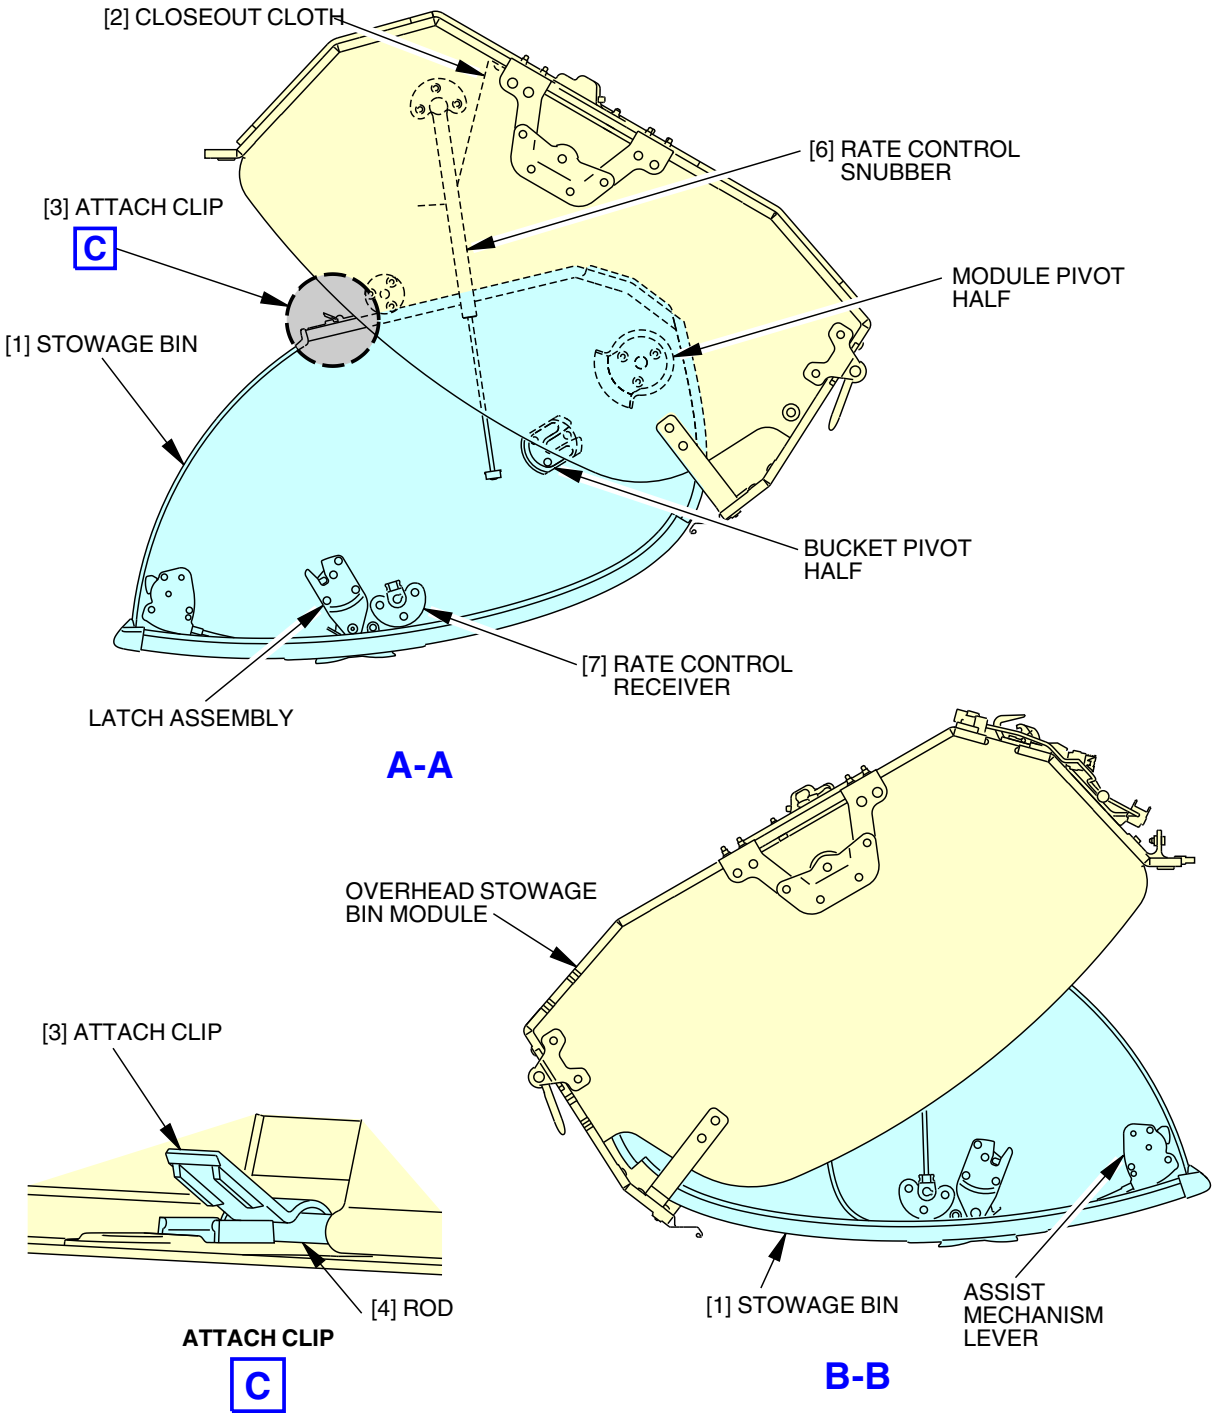


Overhead Stowage Bin Installation
Figure 401/25-24-31-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

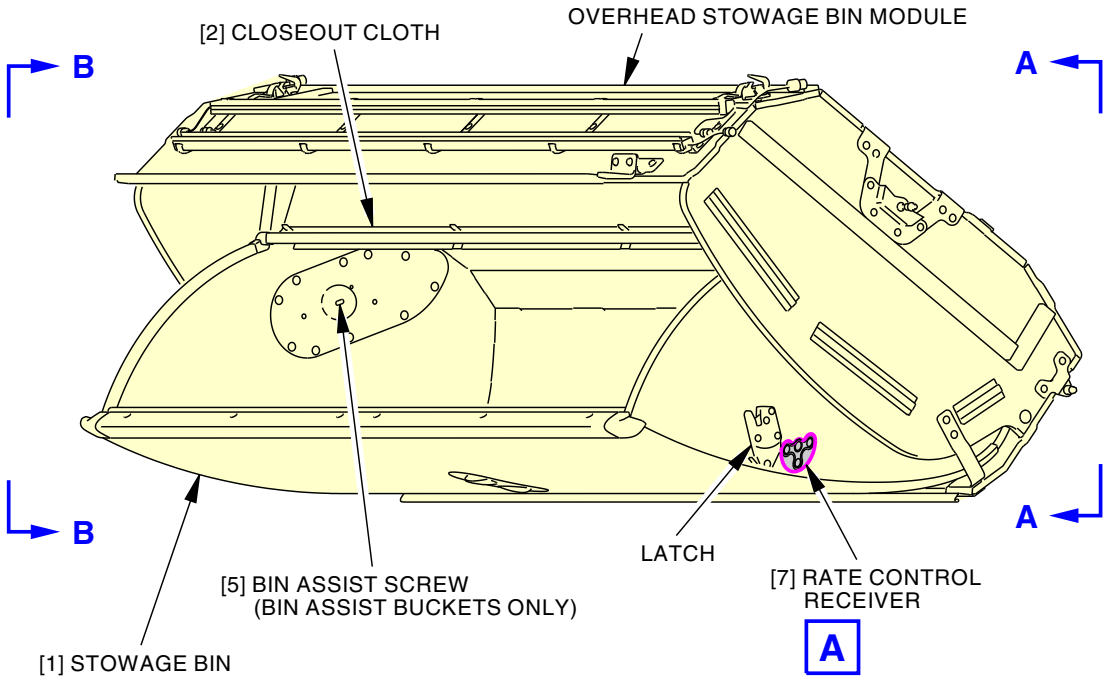

OVERHEAD STOWAGE BIN (EXAMPLE)

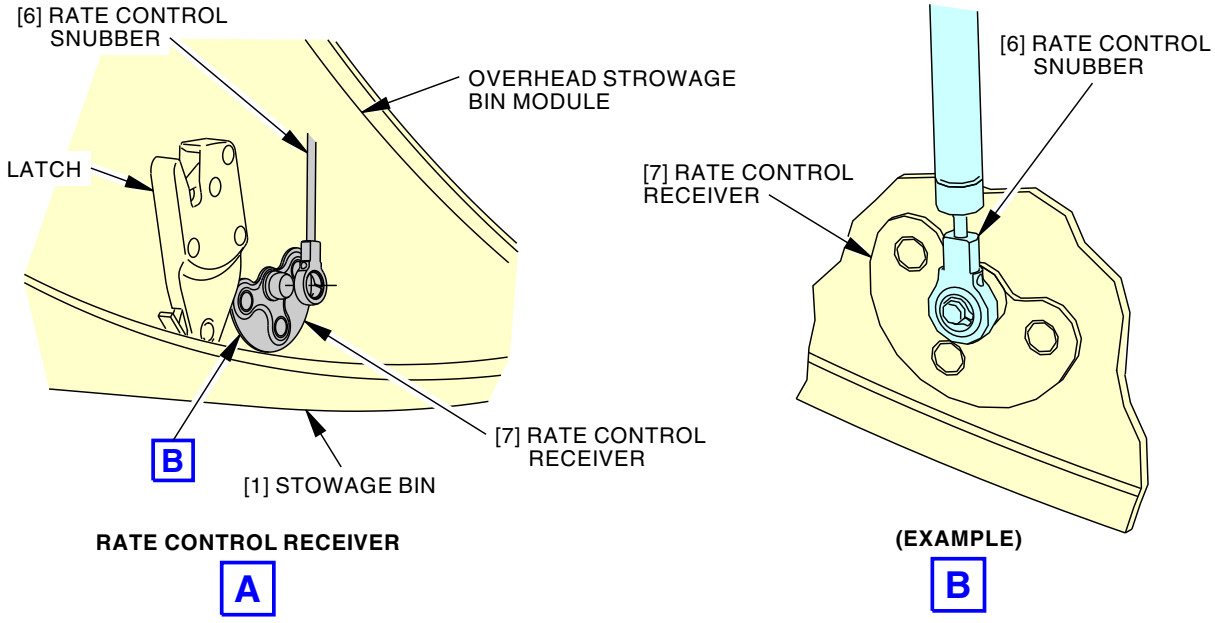

RATE CONTROL RECEIVER

A


(EXAMPLE)

B

3011133 S0000785045_V1

Overhead Stowage Bin Installation
Figure 402/25-24-31-990-812 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

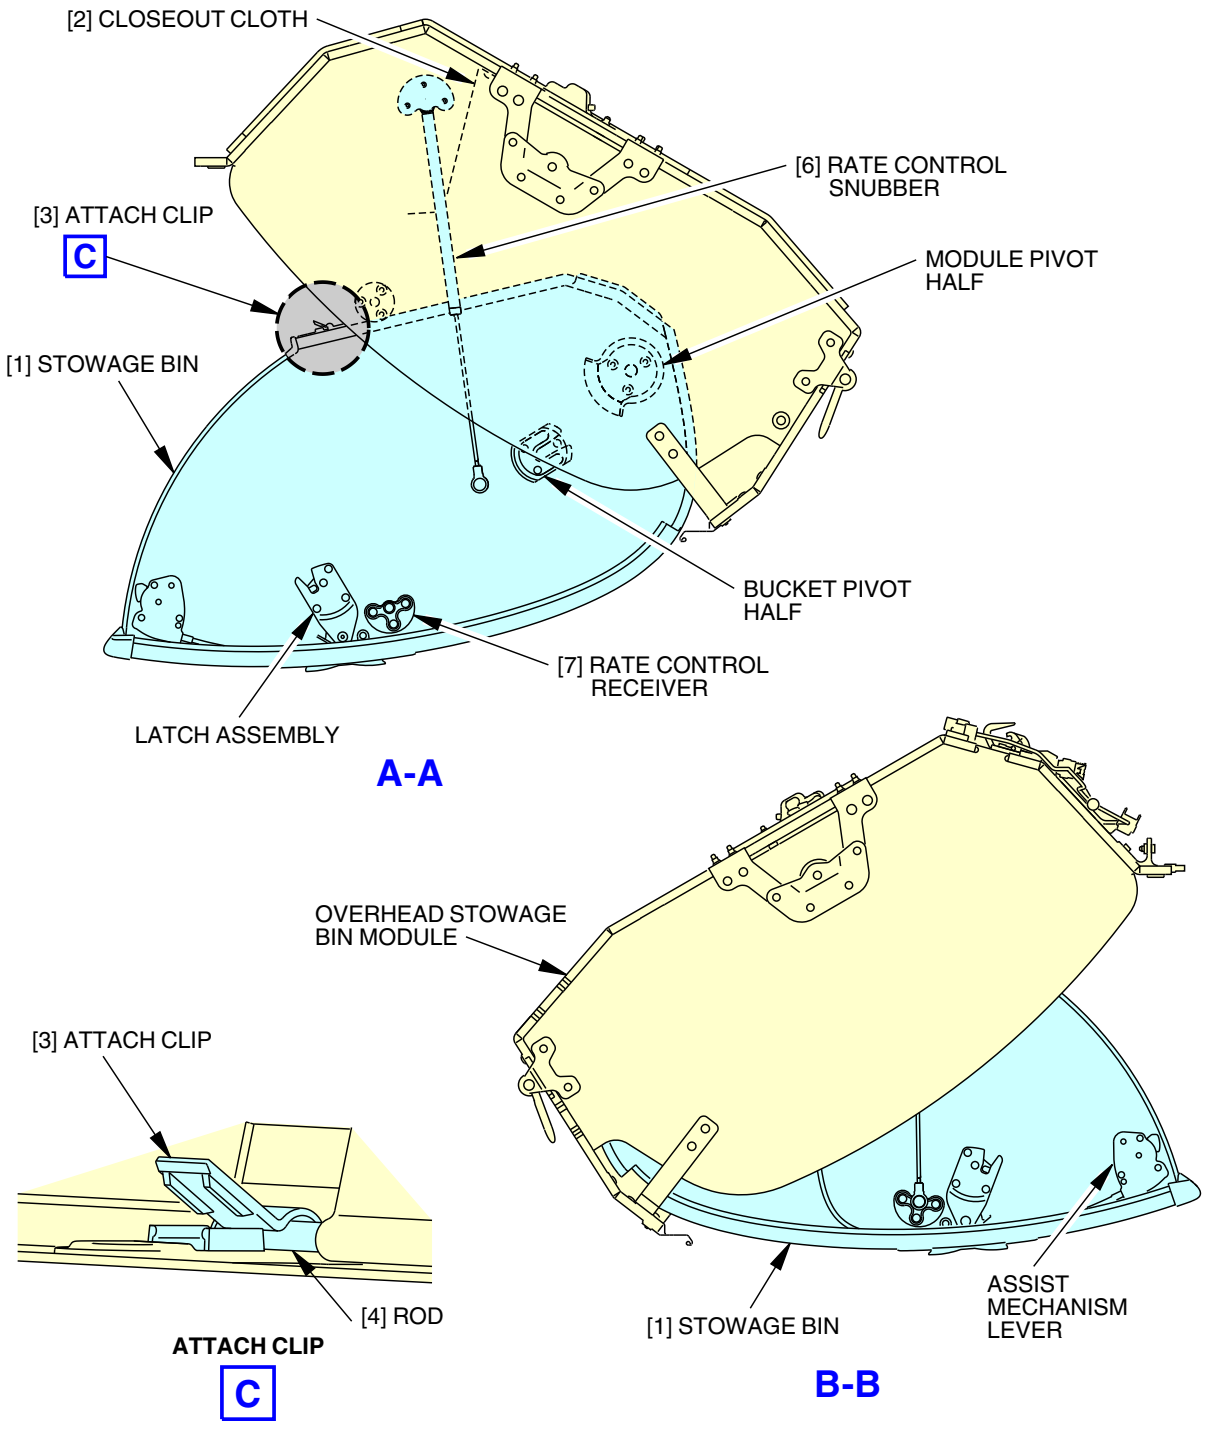

Overhead Stowage Bin Installation
Figure 402/25-24-31-990-812 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL

TASK 25-24-31-400-801

3. Overhead Stowage Bin - Installation

(Figure 401 or Figure 402)

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Install the Stowage Bin

SUBTASK 25-24-31-420-001

(1) Put the stowage bin [1] in its correct position.

SUBTASK 25-24-31-420-002

(2) Raise the stowage bin [1] slightly to align the pivot halves.

SUBTASK 25-24-31-420-003

(3) Turn the stowage bin [1] up approximately 10°arc (0 rad) until the pivot halves fully engage.

SUBTASK 25-24-31-420-004

(4) If necessary, torque the bin assist screw [5] to 20 in-lb (2.26 N·m) - 23 in-lb (2.60 N·m).

SUBTASK 25-24-31-420-005

(5) Make sure that the rate control snubber [6] is fully extended.

SUBTASK 25-24-31-420-006

(6) Install the rate control snubber [6] to the rate control receiver [7] on the stowage bin [1].

SUBTASK 25-24-31-420-007

(7) Install the close out cloth [2] to the stowage bin [1]:

(a) Push the rod [4] into the attach clips [3] on the stowage bin [1].

(b) Push down on the leg of the attach clip [3] until it engages the lower part of the clip.

(c) Fold down the flap and fully engage the hook and loop strips to the stowage bin [1].

END OF TASK

TASK 25-24-31-000-802

4. Overhead Stowage Bin Module - Removal

Figure 403

A. References

Reference	Title
25-21-45-000-801	Main Ceiling Panel - Removal (P/B 401)
25-23-61-000-801	Passenger Service Unit - Removal (P/B 401)
35-00-00-420-801	Installation of Caps on Open Oxygen Lines (P/B 201)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-00-00-910-802	Safety Precautions (P/B 201)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Prepare for the Removal

SUBTASK 25-24-31-910-001

(1) When you do maintenance to the Oxygen Systems, you must read or fully know the precautions and general instructions below:

(a) Follow the safety precautions.

1) Do this task: Safety Precautions, TASK 35-00-00-910-802.

(b) Follow the general maintenance practices.

1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

(c) Follow the procedure for the installation of the caps on the open oxygen lines.

1) Do this task: Installation of Caps on Open Oxygen Lines, TASK 35-00-00-420-801.

SUBTASK 25-24-31-040-001

(2) To prevent the activation of the Emergency Lighting System, do these steps:

(a) At the overhead panel P5, set the EMER LIGHTS switch to OFF.

1) Attach a DO-NOT-OPERATE tag on the switch.

(b) On the master attendant switch panel (ASP), on the attendant seat headrest at door 1L or 2L (if applicable), make sure that the EMER LIGHTS switch is OFF (red LED on the switch is OFF).

1) Attach a DO-NOT-OPERATE tag on the switch.

SUBTASK 25-24-31-020-007

(3) Remove the ceiling panels adjacent to the stowage bin modules.

(a) Do this task: Main Ceiling Panel - Removal, TASK 25-21-45-000-801.

SUBTASK 25-24-31-020-008

(4) Remove the stowage bin bucket from the stowage bin module.

(a) Do this task: Overhead Stowage Bin - Removal, TASK 25-24-31-000-801

D. Stowage Bin Module Removal

SUBTASK 25-24-31-020-009

(1) Remove the Passenger Service Units, if applicable.

(a) Do this task: Passenger Service Unit - Removal, TASK 25-23-61-000-801.

SUBTASK 25-24-31-020-010

(2) Remove the applicable PSU oxygen equipment, if applicable.

SUBTASK 25-24-31-020-011

(3) To remove the PSU wire bundles from the applicable stowage bin module, do these steps:

(a) Disconnect the electrical connector from the applicable PSU equipment.

(b) Remove the screws to disconnect the wire-bundle electrical connector from the stowage bin module.

1) Disconnect the electrical connector from the aft-attached wire bundle.

(c) Disconnect the from the forward-attached wire bundle.

(d) Remove the clips to disconnect the PSU wire bundles from the stowage bin module.

(e) Remove and keep the PSU wire bundles.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-24-31-020-012

(4) Disconnect the wire-bundle electrical connectors from the adjacent lighting wire bundles.

SUBTASK 25-24-31-820-008

(5) Make sure that the tie-rod length is not modified when removing the stowage bin module [8].

NOTE: If the length of the tie-rod is modified, additional adjustment will be necessary during the stowage bin installation.

(a) Make sure that witness marks are visible on both rod ends of each tie-rod (View J, Figure 403).

1) If witness marks are not present, apply the witness marks before removing the tie-rod.

SUBTASK 25-24-31-020-014

WARNING

BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

(6) To remove a stowage bin module [8] from the airplane, do the applicable steps:

(a) Remove the quick-release pin [9] to disconnect the outboard end of the stowage bin module [8] from the tie rod [21] and tie rod [22].

NOTE: If the quick release pins are shared between two adjacent stowage bin modules, it is necessary to install the pins in order to give support to the adjacent stowage bin module.

(b) Remove the bolt [11], washers [12], bushing [13], and nut [14] to disconnect the outboard end of the stowage bin module [8] from the tie rod [10].

NOTE: If the hardware is shared between two adjacent stowage bin modules, it is necessary to install the hardware in order to give support to the adjacent stowage bin module.

(c) Remove the quick-release pin [9] from the tie rod [10].

(d) Remove the bolts [15], washers [16], bushings [17], and nuts [18] to disconnect the upper ends of the stowage bin module from the tie rod [21] and tie rod [22].

NOTE: The hardware is shared between two adjacent stowage bin modules. It is necessary to install the hardware in order to give support to the adjacent stowage bin module.

1) Remove tie rod cover to gain access.

(e) Remove the quick-release pin [9] to disconnect the stowage bin module [8] from the tie rod [23].


NOTE: The quick release pin is at the lower 9G tie rod attachment. The attachment is located at the top forward fitting on the stowage bin module.

1) Remove tie rod cover to gain access.

(f) Remove the stowage bin module [8].


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

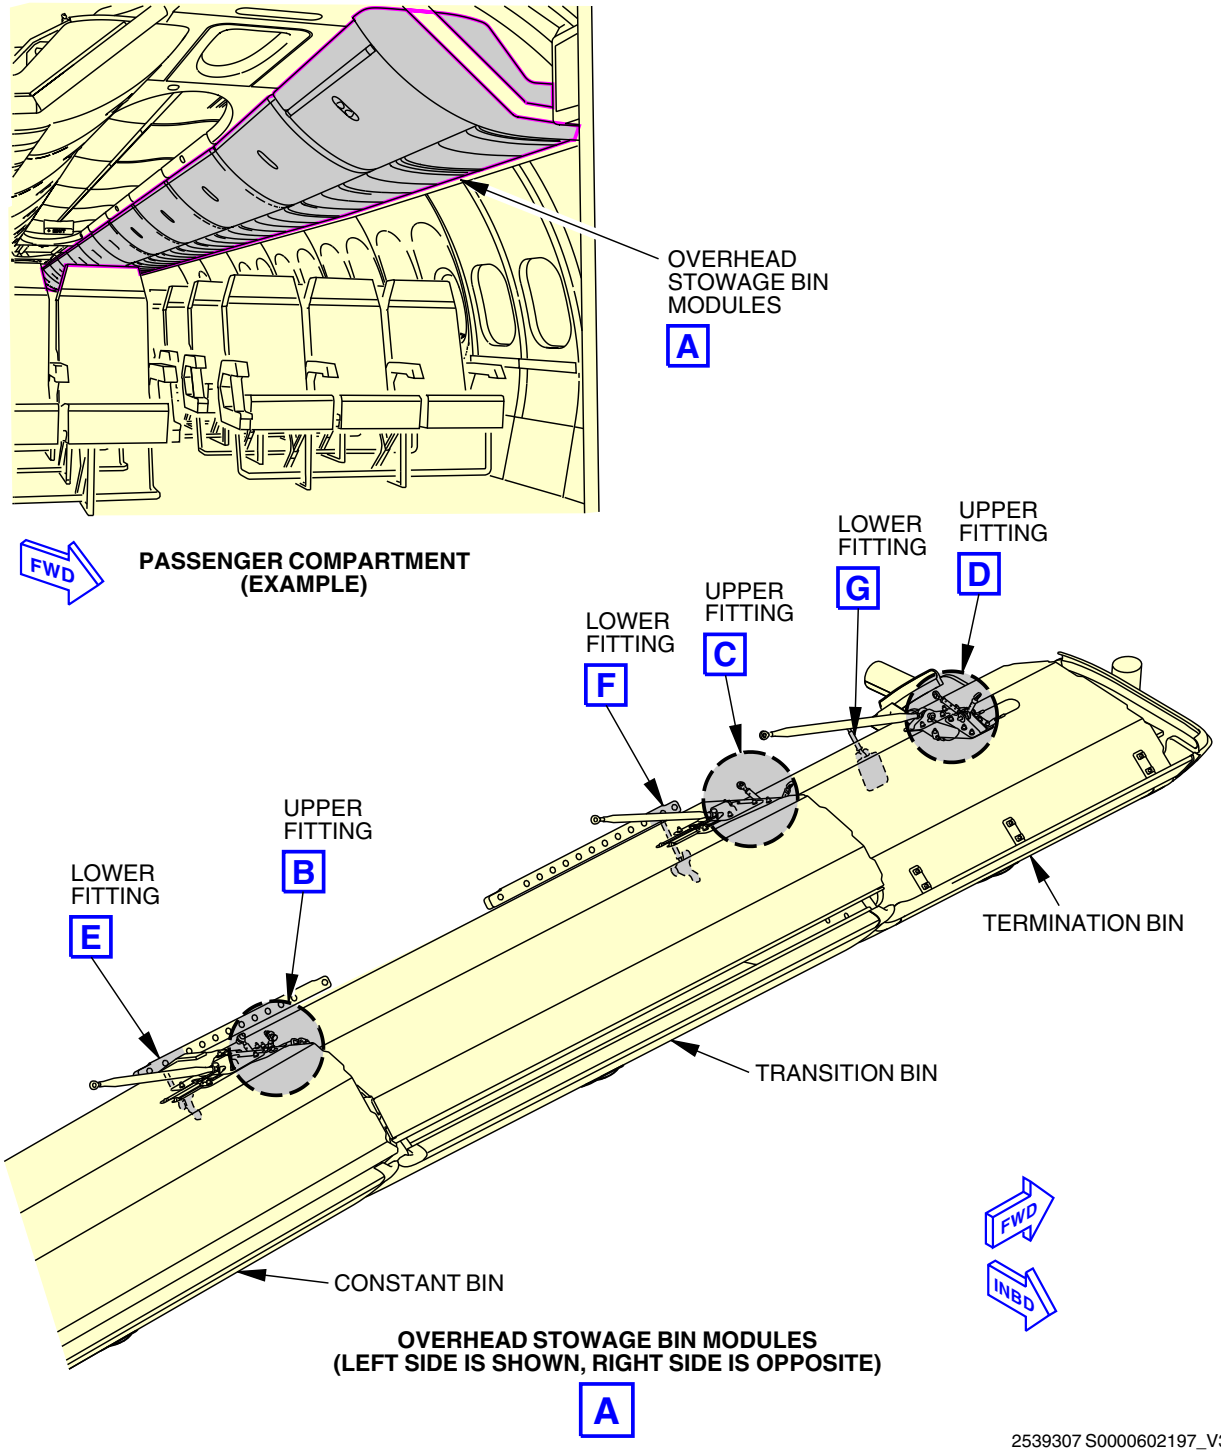


Overhead Stowage Bin Module Installation
Figure 403/25-24-31-990-804 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

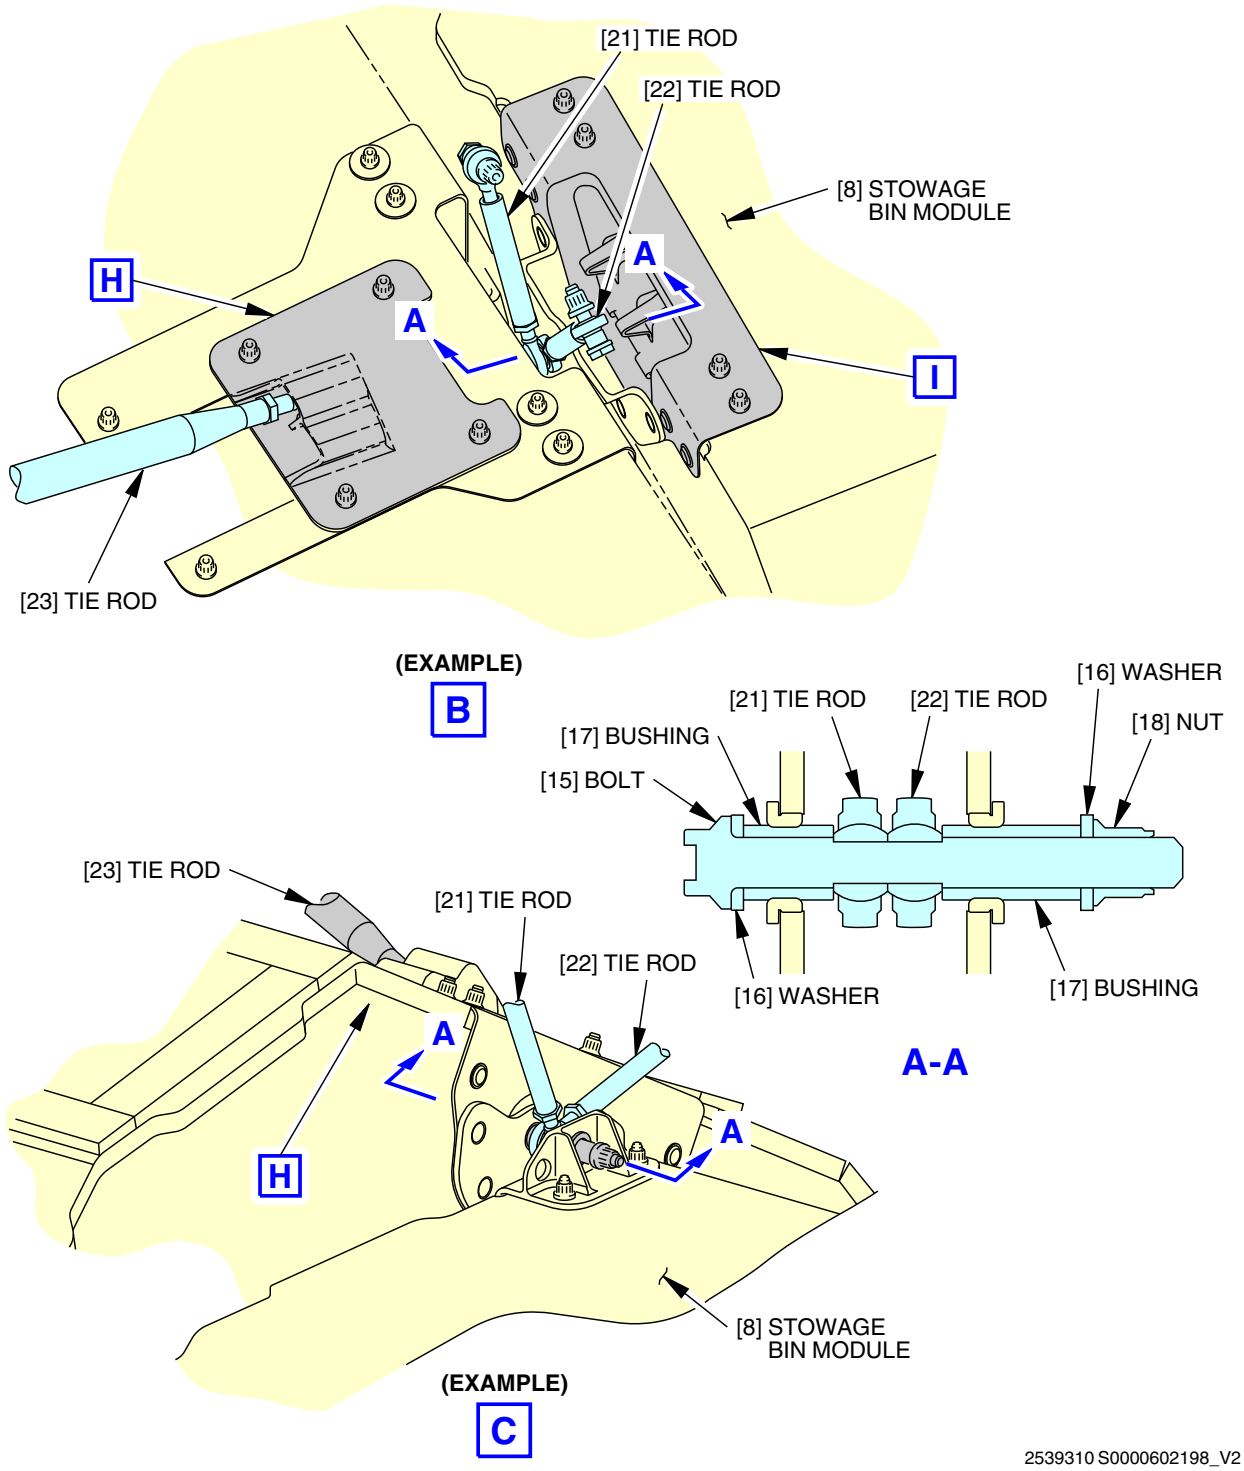

Overhead Stowage Bin Module Installation
Figure 403/25-24-31-990-804 (Sheet 2 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

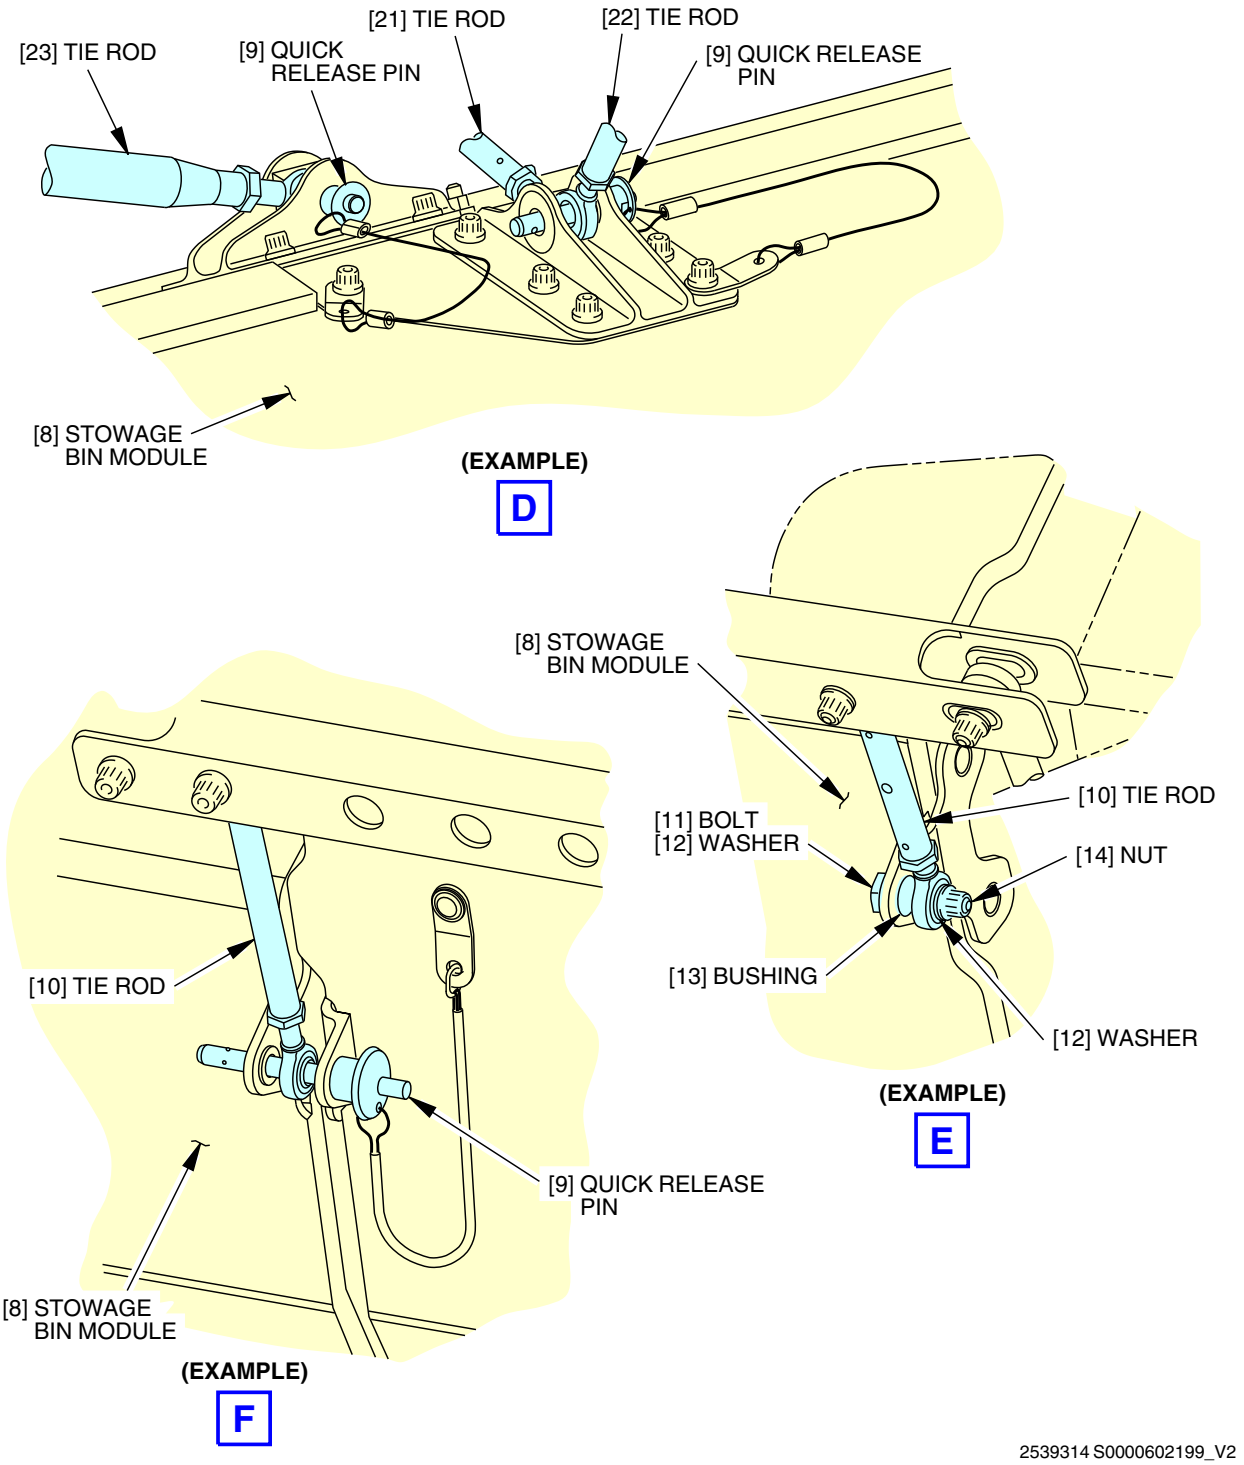

2539314 S0000602199_V2

Overhead Stowage Bin Module Installation
Figure 403/25-24-31-990-804 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

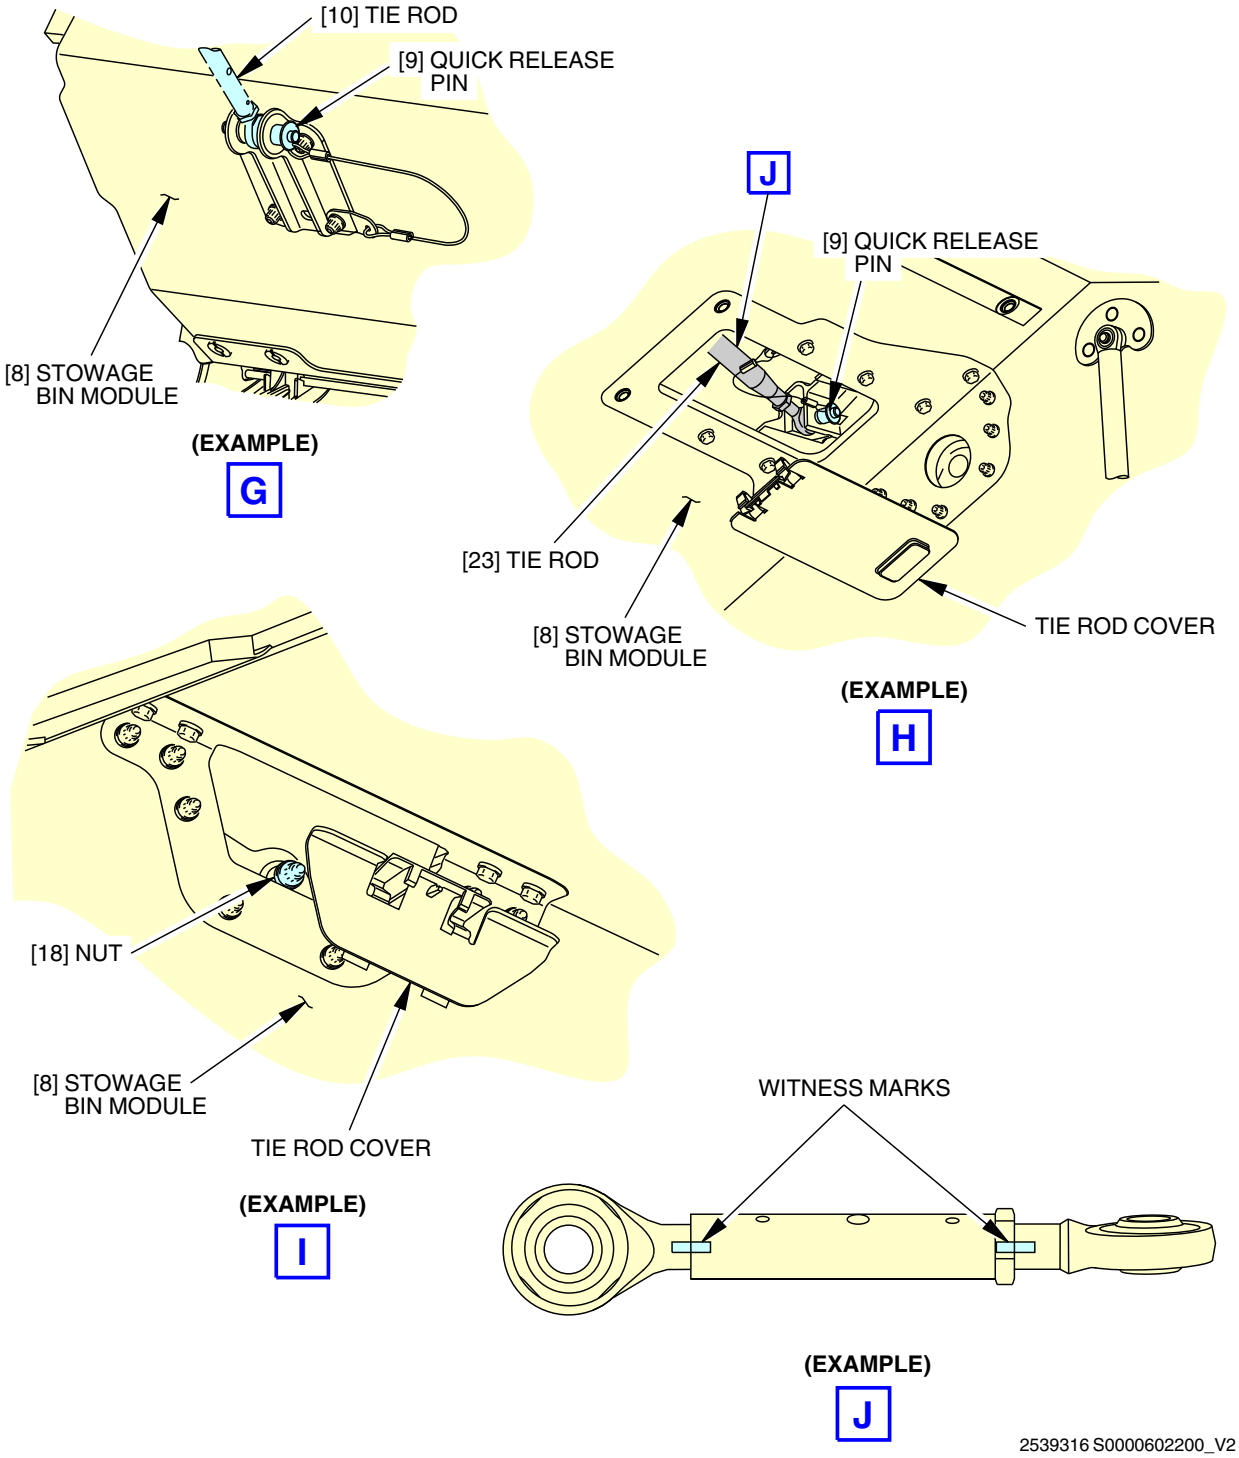

Overhead Stowage Bin Module Installation
Figure 403/25-24-31-990-804 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-31-400-802

5. Overhead Stowage Bin Module - Installation

(Figure 403)

A. References

Reference	Title
25-21-45-400-801	Main Ceiling Panel - Installation (P/B 401)
25-23-61-400-801	Passenger Service Unit - Installation (P/B 401)
35-00-00-910-801	Oxygen System General Maintenance Practices (P/B 201)
35-00-00-910-802	Safety Precautions (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A00226	Compound - Tamper-Proof Putty	BMS8-45

C. Prepare for the Installation

SUBTASK 25-24-31-910-002

WARNING

MAKE SURE YOU OBEY ALL LOCAL SAFETY PROCEDURES BEFORE YOU DO WORK ON THE GASEOUS OXYGEN SYSTEM. THIS WILL PREVENT INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

(1) When you do maintenance to the Passenger Oxygen Systems, you must read or fully know the precautions and general instructions below:

(a) Follow the safety precautions.

1) Do this task: Safety Precautions, TASK 35-00-00-910-802.

(b) Follow the general maintenance practices.

1) Do this task: Oxygen System General Maintenance Practices, TASK 35-00-00-910-801.

D. Overhead Stowage Bin Module Installation

SUBTASK 25-24-31-420-008

WARNING

BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

(1) To install the stowage bin module [8], do the applicable steps:

(a) Put the stowage bin module [8] in its position in the passenger compartment.

CAUTION

DO NOT USE MALLETS OR HAMMERS WHEN YOU INSTALL A QUICK RELEASE PIN. IF YOU DO NOT OBEY, DAMAGE TO BUSHING CAN OCCUR.

(b) Attach the stowage bin module [8] with the tie rod [21] and tie rod [22] with the quick-release pin [9] or bolt [15], washers [16], bushings [17], and nut [18].

1) Tighten the nut [18] to 90 in-lb (10.2 N·m) - 125 in-lb (14.1 N·m).

(c) Move the outboard end of the stowage bin module [8] into its position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Install the quick-release pin [9] to connect the outboard end of the stowage bin module [8] to the tie rod [10].

2) Install the bolt [11], washers [12], bushing [13], and nut [14] to connect the outboard end of the stowage bin module [8] to the tie rod [10].

(d) Install the quick-release pin [9] to connect the stowage bin module [8] to the tie rod [23].

(e) If it is necessary, adjust the length of the tie rod [21], tie rod [22], tie rod [10], and tie rod [23].

1) Adjust the applicable tie rod by finger pressure.

2) Tighten the jam nuts on the applicable tie rod.

3) Apply the compound, A00226, across the ends of the applicable tie rod and jam nuts.

4) Insert a 0.063 in. (1.600 mm) diameter wire or pin into both inspection holes at each end of the applicable tie rod.

a) Make sure that the wire is stopped by the tie rod end.

NOTE: Adjustment is acceptable if the wire is stopped by the tie rod end.

(f) Install the tie rod covers.

SUBTASK 25-24-31-420-011

(2) Connect the electrical connectors for the lighting-wire bundle to the adjacent lighting-wire bundles.

SUBTASK 25-24-31-420-012

(3) To install the PSU wire bundles in the applicable stowage bin module, do these steps:

(a) Install the clips to connect the PSU wire bundles to the stowage bin module.

(b) Connect the electrical connector from the forward-attached wire bundle.

(c) Connect the electrical connector from the aft-attached wire bundle.

(d) Install the screws to connect the wire-bundle electrical connector.

(e) Connect the wire-bundle electrical connector to the applicable PSU equipment.

SUBTASK 25-24-31-420-013

(4) Install the passenger air outlets if applicable.

(a) Do this task: Passenger Service Unit - Installation, TASK 25-23-61-400-801.

SUBTASK 25-24-31-420-014

(5) Install the applicable PSU oxygen equipment.

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-24-31-420-015

(1) Install the bin bucket in the stowage bin module.

(a) Do this task: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

SUBTASK 25-24-31-420-016

(2) Install the main ceiling panels that were removed for access.

(a) Do this task: Main Ceiling Panel - Installation, TASK 25-21-45-400-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-24-31-860-006

(3) Remove DO NOT OPERATE tag from the EMER LIGHTS switch, on the P5 overhead panel, and master Attendant Switch Panel (ASP).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

OVERHEAD STOWAGE BIN - INSPECTION

1. General

A. This procedure has this inspection task:

(1) Overhead Stowage Bin - General Visual Inspection

TASK 25-24-31-210-801

2. OVERHEAD STOWAGE BIN - GENERAL VISUAL INSPECTION

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Overhead Stowage Bin Inspection

SUBTASK 25-24-31-210-001

(1) Rippling of the bottom shelf material of the overhead stowage bins may develop over time. There is no limitation on the size or number of ripples. The bins retain their structural integrity regardless of how many ripples they have or the size of the ripples. This is an aesthetic condition only and does not affect safety. No re-occuring inspection is required or necessary.

SUBTASK 25-24-31-210-002

(2) Dents on strong back face sheet may develop over time. This is an aesthetic condition only and the bins retain their structural integrity as long as the condition does not penetrate into the glass reinforcement.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WALL-MOUNTED STOWAGE BOX - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Wall-mounted stowage box removal

(2) Wall-mounted stowage box installation.

TASK 25-24-70-000-801

2. Wall-Mounted Stowage Box Removal

(Figure 401)

A. General

(1) This task gives the instructions for the removal of the wall-mounted stowage box.

B. References

Reference	Title
23-31-07-000-801	Pre-Recorded Announcement Machine (PRAM) Removal (P/B 401)

C. Location Zones

Zone	Area
831	Forward Entry Door

D. Wall-Mounted Stowage Box Removal

SUBTASK 25-24-70-010-001

(1) Release the stowage box door latch [2].

SUBTASK 25-24-70-010-002

(2) Open the stowage box [1].

SUBTASK 25-24-70-000-001

(3) Do this task: Pre-Recorded Announcement Machine (PRAM) Removal, TASK 23-31-07-000-801.

SUBTASK 25-24-70-020-001

(4) Remove the four bolts [3] that attach the stowage box [1] to the lavatory wall.


NOTE: Hold the stowage box before you remove the last bolt.

SUBTASK 25-24-70-020-002

(5) Remove the stowage box [1] from the lavatory wall.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

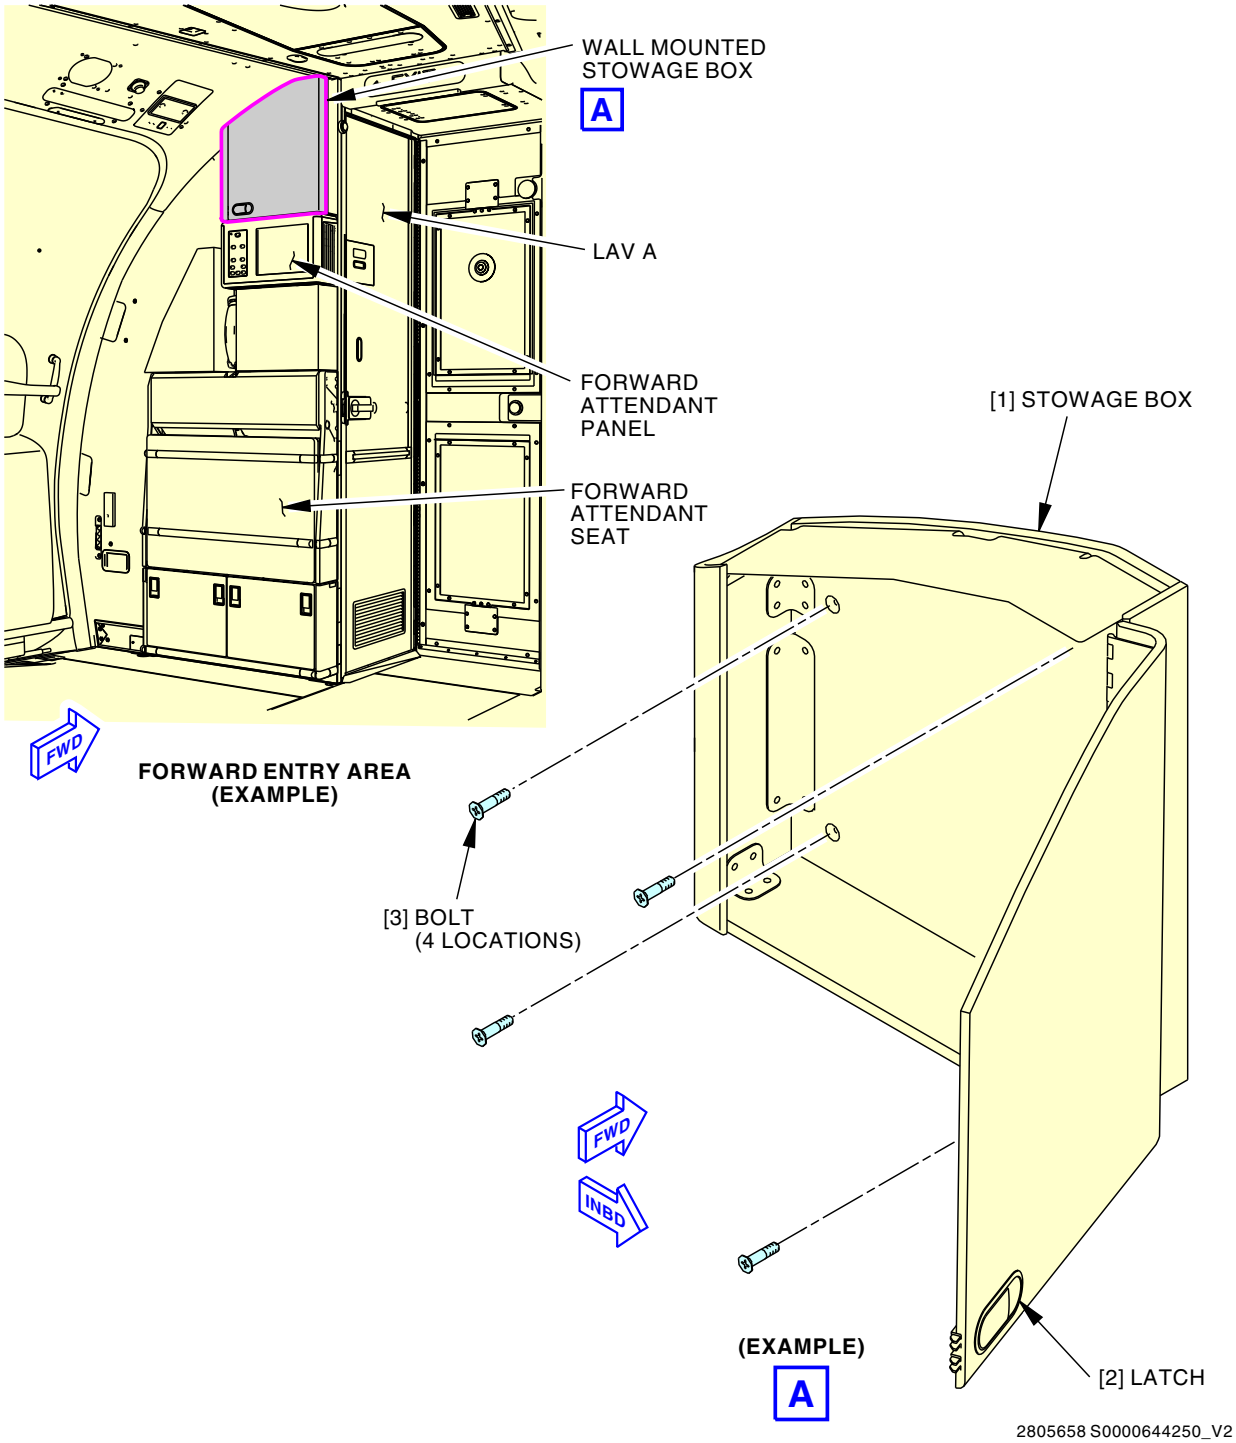

Wall-Mounted Stowage Box Installation
Figure 401/25-24-70-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-24-70-400-801

3. Wall-Mounted Stowage Box Installation

(Figure 401)

A. General

(1) This task gives the instructions for the installation of the wall-mounted stowage box.

B. References

Reference	Title
20-50-11-910-801	Standard Torque Values (P/B 201)
23-31-07-400-801	Pre-Recorded Announcement Machine (PRAM) Installation (P/B 401)

C. Location Zones

Zone	Area
831	Forward Entry Door

D. Wall-Mounted Stowage Box Installation

SUBTASK 25-24-70-420-001

(1) Put the wall-mounted stowage box [1] over the bolt holes on the lavatory wall.

SUBTASK 25-24-70-420-002

(2) Install the stowage box [1] with four bolts [3].

SUBTASK 25-24-70-420-003

(3) Tighten the four bolts [3] to specifications (TASK 20-50-11-910-801).

SUBTASK 25-24-70-400-001

(4) Do this task: Pre-Recorded Announcement Machine (PRAM) Installation, TASK 23-31-07-400-801.

SUBTASK 25-24-70-410-001

(5) Close the stowage box [1].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CABIN ATTENDANT SEAT - REMOVAL/INSTALLATION

1. General

A. This procedure contains these tasks:

(1) Cabin Attendant Seat Removal

(2) Cabin Attendant Seat Installation.

TASK 25-25-12-000-801

2. Cabin Attendant Seat Removal

(Figure 401)

A. References

Reference	Title
23-42-01-000-802	Attendant Handset Cord Removal (P/B 401)

B. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Prepare for the Removal

SUBTASK 25-25-12-010-003

(1) Remove the upper backrest cushion:

(a) Pull the Velcro on the upper backrest cushion loose.

(b) Pull the bottom of the upper backrest cushion away from the attendant seat.

SUBTASK 25-25-12-010-004

(2) Disconnect the attendant handset cord (TASK 23-42-01-000-802).

SUBTASK 25-25-12-410-002

(3) Install the upper backrest cushion.

D. Double Cabin Attendant Seat Removal

SUBTASK 25-25-12-020-001

(1) Remove the two headrests [4].

NOTE: The headrests are attached to the Velcro on the partition wall.

SUBTASK 25-25-12-020-005

(2) Remove the four hex head bolts [2] and washers [3] that attach the inertia reel bracket to the partition wall.

SUBTASK 25-25-12-020-002

(3) Open the storage compartment doors below the seat pan.

SUBTASK 25-25-12-020-006

(4) Remove the six hex head bolts [2] and washers [3] that attach the attendant seat [1] to the partition wall.

SUBTASK 25-25-12-010-001

(5) Open the two lower backrest cushions:

(a) Lower the seat pan a small distance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Pull the fabric flap Velcro on the lower backrest cushion away from the upper backrest cushion to expose the release knobs.

(c) Pull and then slide the release knobs toward each other to disengage the lower backrest cushion.

(d) Pull the lower backrest cushions down on the seat pan.

SUBTASK 25-25-12-020-003


(6) Remove the two hex head bolts [2] and washers [3] from the mounting brackets.

SUBTASK 25-25-12-020-004

(7) Remove the attendant seat [1].


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

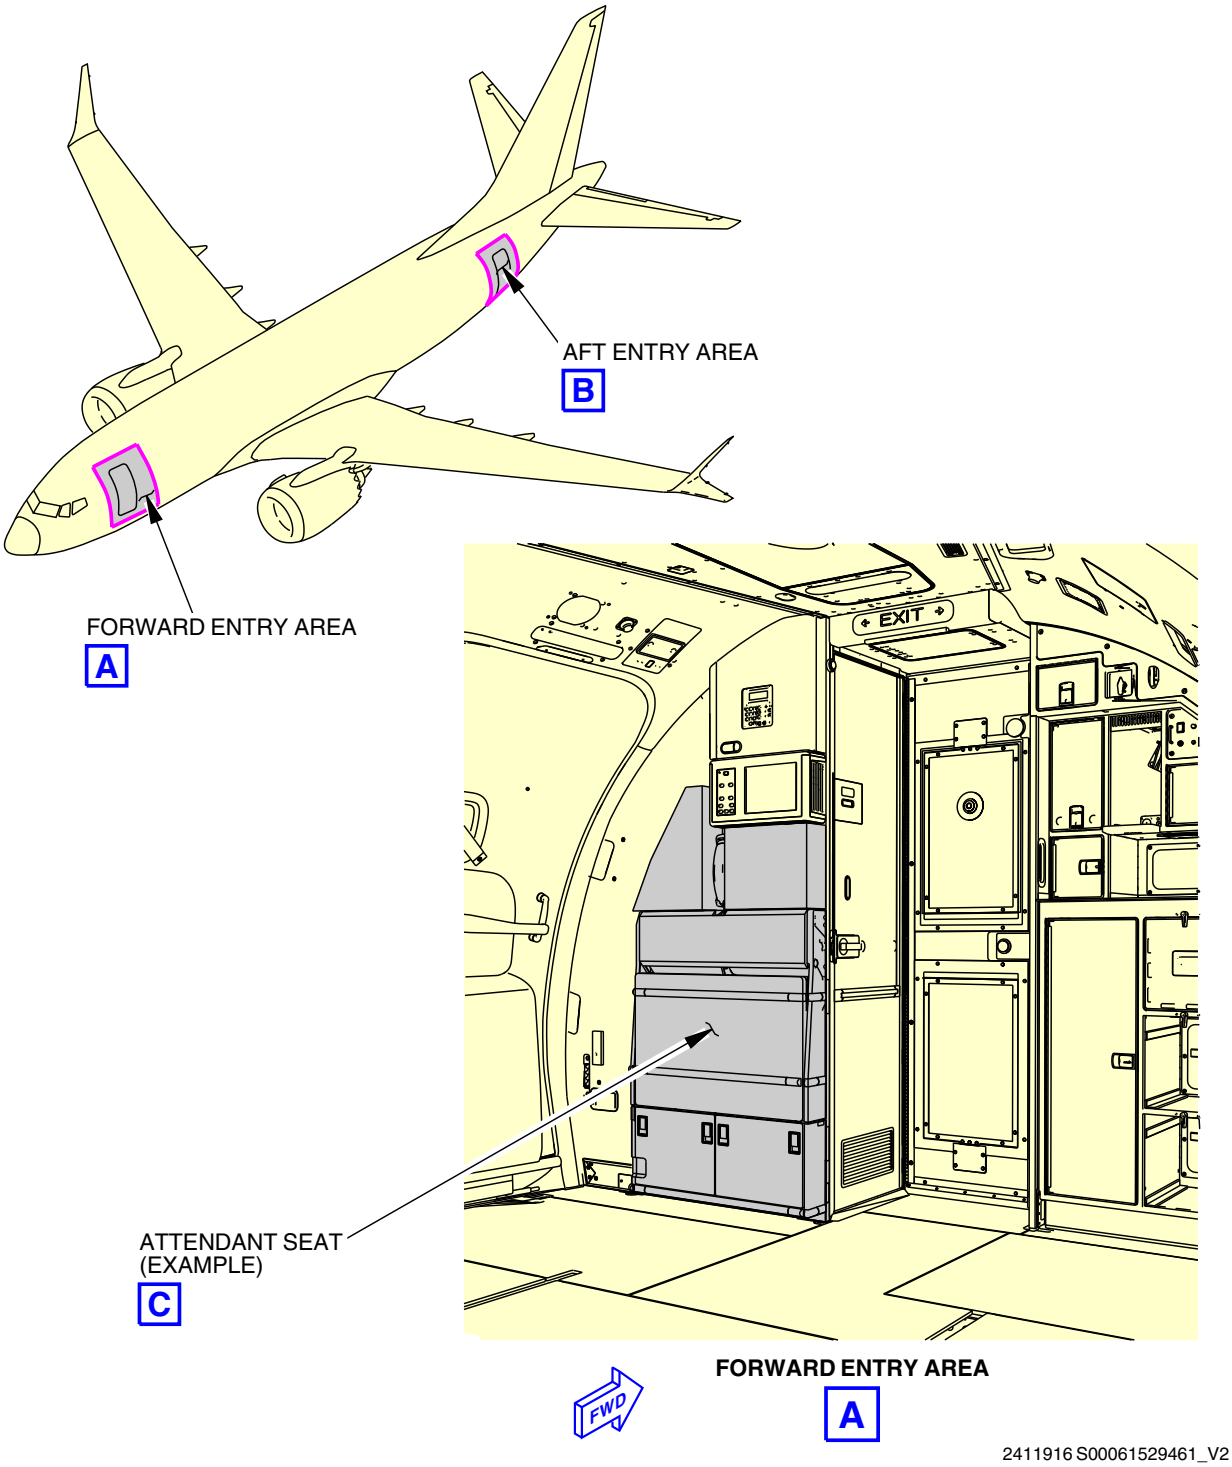

Cabin Attendant Seats Installation
Figure 401/25-25-12-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

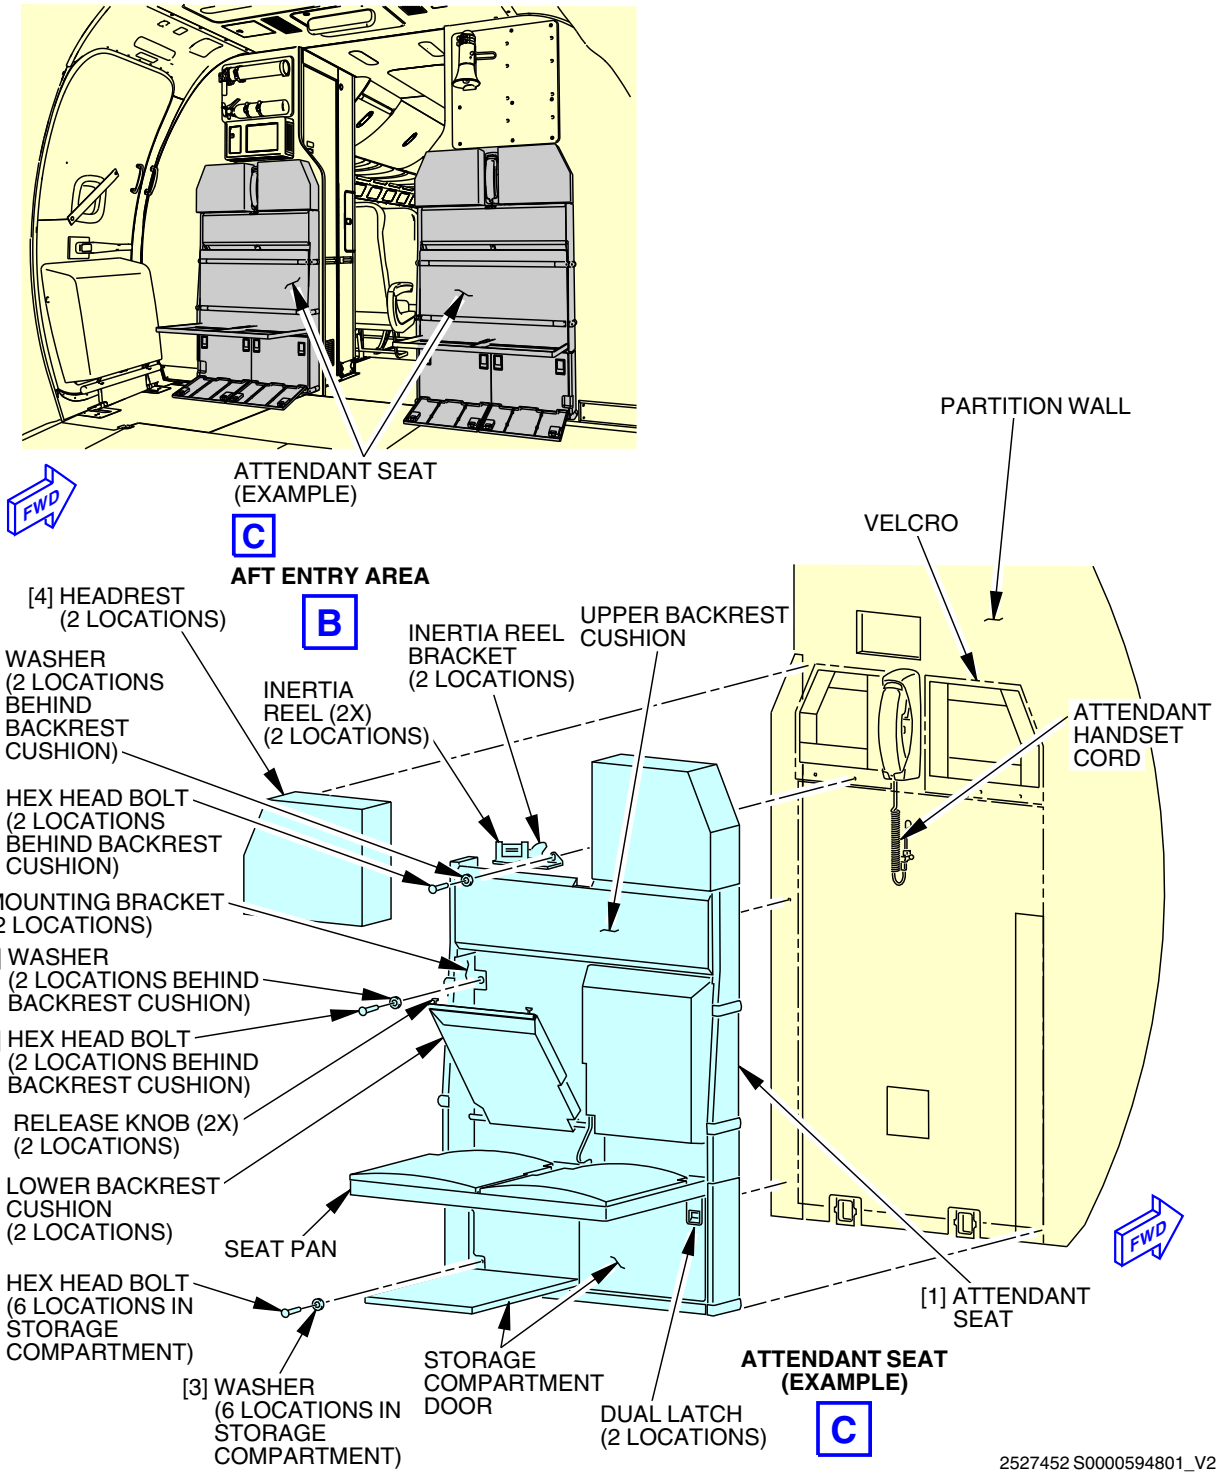

Cabin Attendant Seats Installation
Figure 401/25-25-12-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-25-12-400-801

3. Cabin Attendant Seat Installation

(Figure 401)

A. References

Reference	Title
23-42-01-000-802	Attendant Handset Cord Removal (P/B 401)
23-42-01-400-802	Attendant Handset Cord Installation (P/B 401)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Attendant seat	25-25-12-01-025	PTF ALL
		25-25-12-21A-025	PTF ALL

C. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

D. Prepare for the Installation

SUBTASK 25-25-12-010-005

(1) Make sure that the attendant handset cord is disconnected from the partition wall (TASK 23-42-01-000-802).

E. Double Cabin Attendant Seat Installation

SUBTASK 25-25-12-420-001

(1) Align the attendant seat [1] in its position on the partition wall and open the storage compartment doors below the seat pan.

NOTE: The attendant seat will need to be lifted approximately 1.5 in. (3.8 cm) to align the mounting holes to the partition wall.

(a) If the stowage box of the attendant seat [1] has a cut-out, make sure that the cut-out is on the outboard side.

NOTE: The cut-out provides additional clearance for the girt bar of the adjacent entry door.

SUBTASK 25-25-12-420-002

(2) Install the six hex head bolts [2] and washers [3] in the storage compartment.

(a) Hand tighten the hex head bolts [2].

SUBTASK 25-25-12-420-006

(3) Install the four hex head bolts [2] and washers [3] to attach the inertia reel bracket to the partition wall.

NOTE: The mounting holes on the inertia reel brackets are behind the inertia reels.

(a) Hand tighten the hex head bolts [2].

SUBTASK 25-25-12-010-002

(4) Open the lower backrest cushion:

(a) Lower the seat pan a small distance.

(b) Pull the fabric flap Velcro on the lower backrest cushion away from the upper backrest cushion to expose the release knobs.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Pull and then slide the release knobs toward each other to disengage the lower backrest cushion.

(d) Pull the lower backrest cushions down onto the seat pan.

SUBTASK 25-25-12-420-003

(5) Install the two hex head bolts [2] and washers [3] to attach the mounting brackets to the partition wall.

(a) Hand tighten the hex head bolts [2].

SUBTASK 25-25-12-420-007

(6) Tighten the 12 hex head bolts [2] to 60 ±10 in-lb (6.8 ±1.2 N·m).

SUBTASK 25-25-12-410-001

(7) Close the lower backrest cushion:

(a) Lift the lower back cushion up and slide the release knobs outward.

(b) Attach the fabric flap Velcro on the lower backrest cushion.

(c) Close the seat pan.

SUBTASK 25-25-12-420-005

(8) Install the two headrests [4] on the partition wall.

NOTE: The headrests are attached to a Velcro strip.

(a) Make sure that the headrests [4] sits on top of the attendant seat [1].

(b) Make sure that the restraints do not interfere with the Velcro.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-25-12-410-003

(1) Close the storage compartment doors.

SUBTASK 25-25-12-010-006

(2) Remove the upper backrest cushion.

(a) Pull the Velcro on the upper backrest cushion loose.

(b) Pull the bottom of the upper backrest cushion away from the attendant seat.

SUBTASK 25-25-12-410-004

(3) Install the attendant handset cord (TASK 23-42-01-400-802).

SUBTASK 25-25-12-410-005

(4) Install the upper backrest cushion.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CABIN ATTENDANT SEAT - INSPECTION/CHECK

1. General

A. This procedure contains these tasks:

(1) Attendant Seat and Harness Attachment Examination

(2) Attendant Seat - Seat Pan Examination

(3) Attendant Seat Harness - Inertia Reel Operational Check

TASK 25-25-12-200-801

2. Attendant Seat and Harness Attachment Examination

(Figure 601)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

B. Attendant Seat and Harness Attachment Examination

SUBTASK 25-25-12-210-001

(1) Make sure that the lap belts and the shoulder harnesses are not worn or damaged.

SUBTASK 25-25-12-210-002

(2) Examine the hex head bolts [4] and mounting bolts [6] behind the headrest [5]:

(a) Remove the headrests [5].

NOTE: The headrests are attached to the Velcro on the partition wall.

(b) Make sure that the hex head bolts [4] that attach the inertia reel bracket to the partition wall are not loose.

(c) Make sure that the mounting bolts [6] that attach the inertia reels to the inertia reel bracket are not loose.

(d) Install the headrests [5].

SUBTASK 25-25-12-210-003

(3) Examine the hex head bolts [3] behind the lower backrest cushion:

(a) Open the lower backrest cushion.

1) Lower the seat pan a small distance.

2) Pull the fabric flap Velcro on the lower backrest cushion away from the upper backrest cushion to get to the release knobs.

3) Pull and then move the release knobs to each other to disengage the lower backrest cushion.

4) Pull the lower backrest cushions down on the seat pan.

(b) Make sure that the hex head bolts [3] that attach the mounting bracket to the partition wall are not loose.

(c) Close the lower backrest cushion.

1) Lift the lower backrest cushion up and then move the release knobs outward.

2) Attach the fabric flap Velcro on the lower backrest cushion.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Close the seat pan.

SUBTASK 25-25-12-210-004

(4) Examine the hex head bolts [2] in the storage compartment:

(a) Open the storage compartment doors below the seat pan.

(b) Make sure that the hex head bolts [2] that attach the attendant seat [1] to the partition wall are not loose.

(c) Close the storage compartment doors.

SUBTASK 25-25-12-210-005

(5) Examine the lower attachment points for the restraint system:

(a) Lower the seat pan to the open position.

(b) Pull the seat pan cushions away from the attachment points.

(c) Make sure that the bolts [7] are tight.

(d) Install the seat pan cushions.

SUBTASK 25-25-12-200-001

(6) Examine the pivot points on the seat pan:


(a) Lower the seat pan to the open position.


(b) Hold the seat pan near its rear corners and shake the seat pan to make sure that it is not loose.

(c) Make sure that the seat pan has no apparent cracks.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

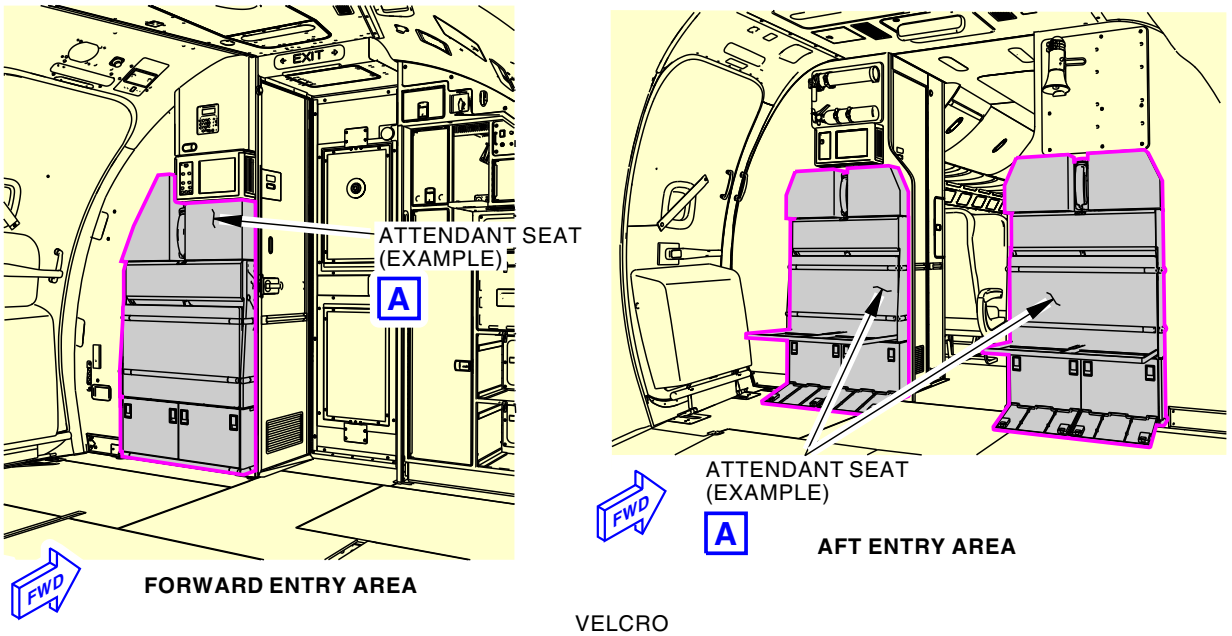

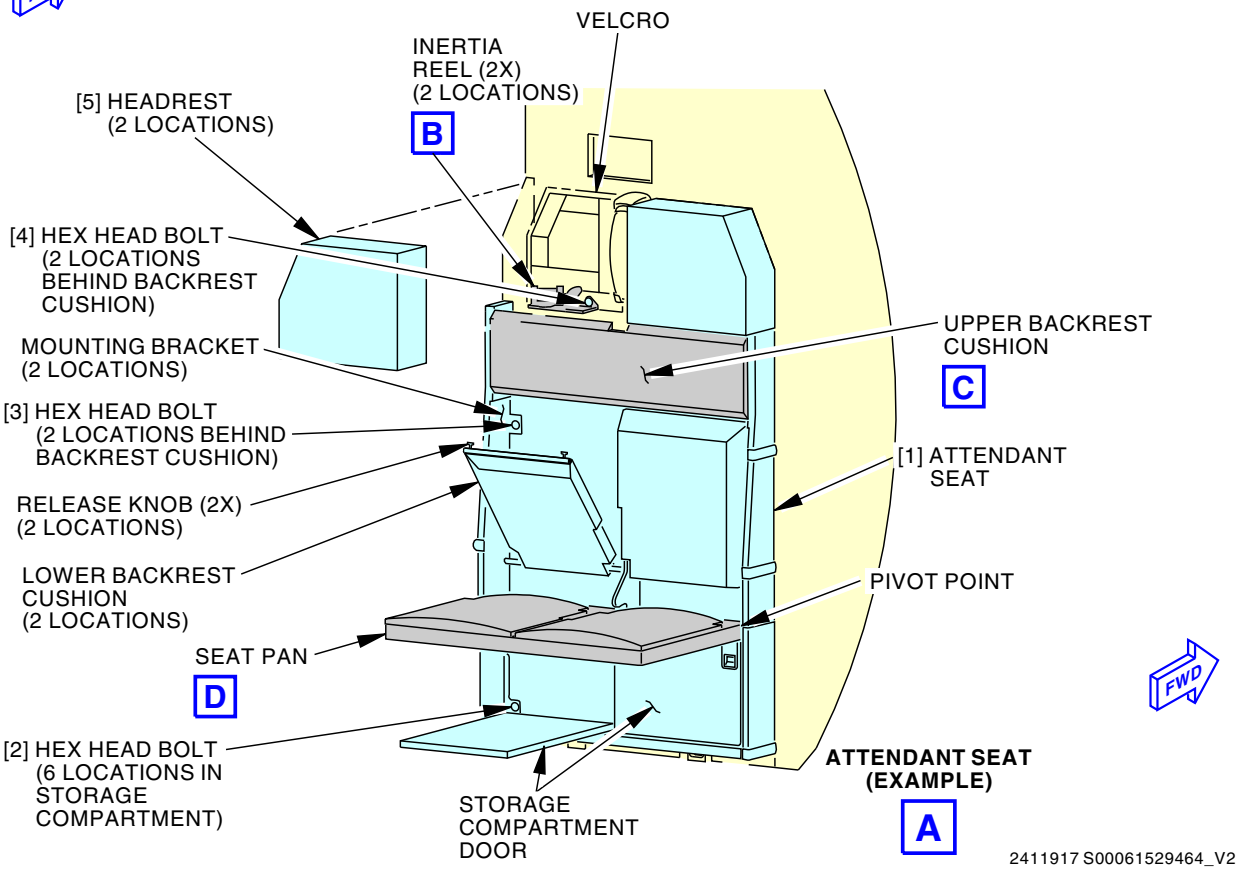

Double Cabin Attendant Seat Examination
Figure 601/25-25-12-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

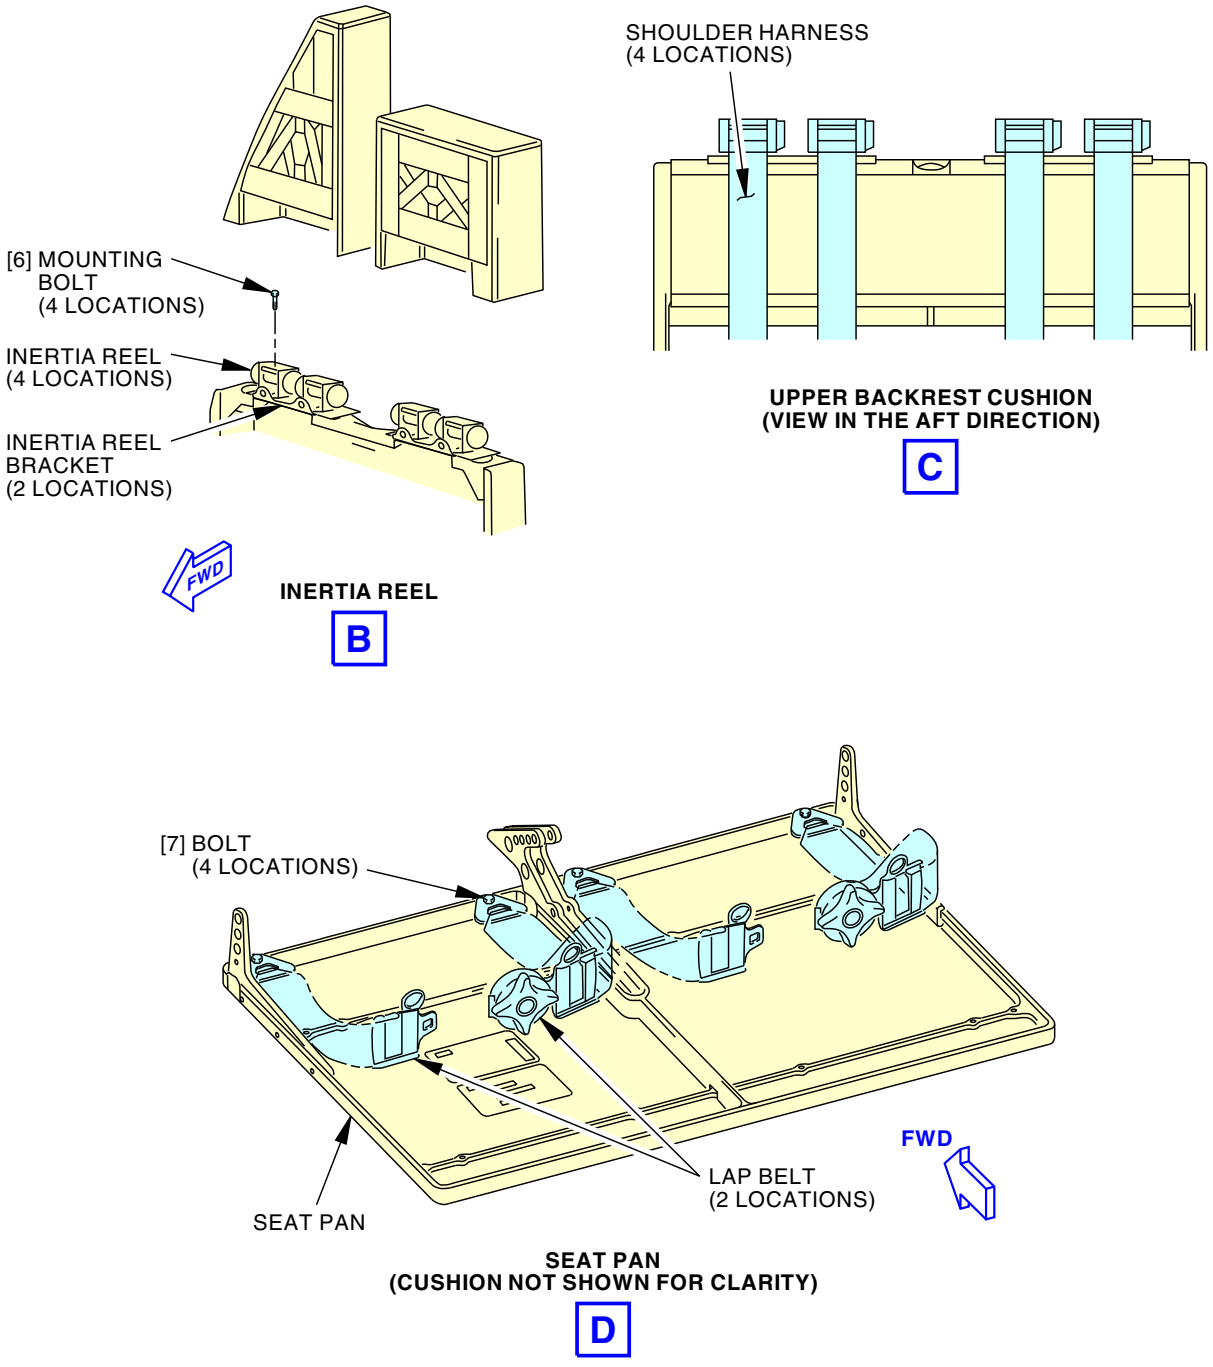

2528799 S0000597971_V1

Double Cabin Attendant Seat Examination
Figure 601/25-25-12-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-25-12-710-801

3. Attendant Seat - Seat Pan Check

(Figure 601)

A. General

(1) This task is an inspection of the attendant seat bottom, referred to in this procedure as the seat pan.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Attendant Seat - Seat Pan Check

SUBTASK 25-25-12-710-001

(1) Push the seat pan fully down (open) and release it.

(a) Make sure that the seat pan retracts to its closed position without aid.

SUBTASK 25-25-12-210-006

(2) Examine the pivot points on the seat pan:

(a) Lower the seat pan to the open position.

(b) Hold the seat pan near its rear corners and shake the seat pan to make sure that it is not loose.

(c) Make sure that the seat pan has no apparent cracks.

——— END OF TASK ———

TASK 25-25-12-710-802

4. Attendant Seat Harness - Inertia Reel Operational Check

(Figure 601)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Attendant Seat Harnesses - Inertia Reel Operational Check

SUBTASK 25-25-12-710-003

(1) Pull the shoulder harness approximately half out of the inertia reel.

SUBTASK 25-25-12-720-001

(2) Pull suddenly on the shoulder harness.

(a) Make sure that each shoulder harness locks and does not extend to the full length.

SUBTASK 25-25-12-710-002

(3) Release the shoulder harness.

(a) Make sure that each shoulder harness retracts.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CARPETS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Carpet Removal

(2) Carpet Installation.

TASK 25-27-15-000-801

2. Carpet Removal

(Figure 401)

A. Tools/Equipment

Reference	Description
STD-764	Scraper - Non-metallic

B. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
B00634	Solvent - Stabilized Limonene Cleaner	BMS11-10 Type 1, 2, or 3
B50003	Solvent - Cleaning - HFE 71DE	BAC5402
B50005	Solvent - Cleaning - Vertrel MCA	BAC5402
B50225	Solvent - Citra-Safe (Deodorized)	BAC5750
B50226	Solvent - Citra-Safe	BAC5750
G01288	Tape - Carpet	BMS5-133

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Remove the Carpet

NOTE: The carpets that are installed over an access panel in the floor are identified with a push stud fastener (a snap).

SUBTASK 25-27-15-020-001

(1) Remove the track covers, if applicable.

SUBTASK 25-27-15-020-002

(2) Pull the carpet edges to release the carpet from the carpet tape, G01288 on the cabin floor.

SUBTASK 25-27-15-020-003

(3) Pull the carpet free from the carpet tape, G01288 and remove the carpet.

SUBTASK 25-27-15-020-004

(4) Remove and discard the used carpet tape, G01288 from the floor.

SUBTASK 25-27-15-020-005

CAUTION

BE CAREFUL WHEN YOU REMOVE ADHESIVE FROM THE FLOOR PANEL SURFACES. DAMAGE TO THE FLOOR PANEL CAN OCCUR.

(5) Remove the unwanted adhesive from the floor panels, do these steps:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Use a non-metallic scraper, STD-764 and a vacuum cleaner to remove unwanted adhesive.

(b) Remove adhesive that remains with one of these solvents:

NOTE: Use of solvents is only recommended when a thin layer of adhesive remains after scraping.

WARNING

DO NOT GET ALCOHOL IN YOUR MOUTH, EYES, OR ON YOUR SKIN. PUT ON A RESPIRATOR, GOGGLES, AND GLOVES. DO NOT BREATHE THE FUMES. KEEP ALCOHOL AWAY FROM SPARKS, FLAME, AND HEAT. MAKE SURE THAT THERE IS SUFFICIENT AIR FLOW IN THE WORK AREA. ALCOHOL IS POISONOUS AND FLAMMABLE. YOU CAN ABSORB POISONOUS MATERIALS FROM THE ALCOHOL THROUGH YOUR SKIN. IT CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

1) Isopropyl alcohol, B00130 (IPA).

2) Make sure that the area has the correct air flow. Remove all of the ignition sources.

NOTE: This solvent has a high flash point and is a lower risk. It can be safely used with the usual precautions with electrical power on the airplane.

3) Vertrel MCA solvent, B50005 or HFE 71DE solvent, B50003

4) Limonene solvent, B00634


5) citra-safe solvent, B50225

6) citra-safe solvent, B50226


NOTE: These solvents are not flammable.

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

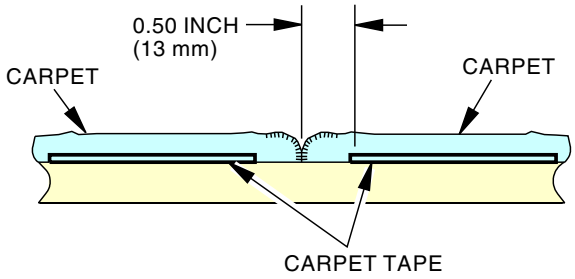


**BUTT JOINT
(EXAMPLE)**

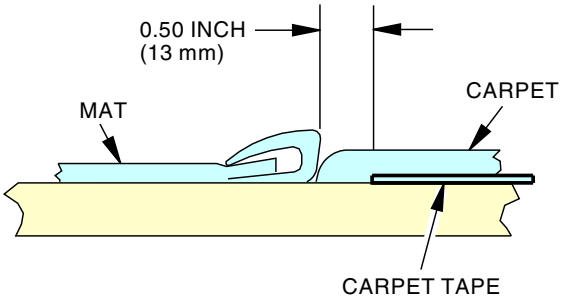

**CARPET TO MAT
(EXAMPLE 1)**

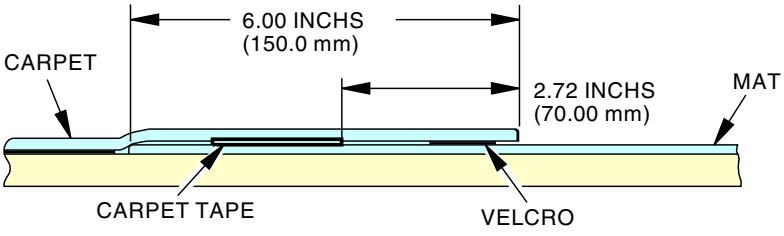

**CARPET TO MAT
(EXAMPLE 2)**

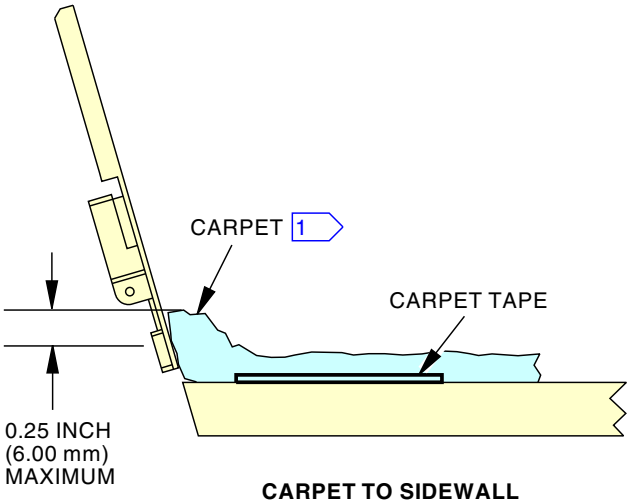


**CARPET TO SIDEWALL
(EXAMPLE)**

1 THIS CARPET MAY EXTEND UP THE SIDEWALL A MAXIMUM OF 0.25 INCH (6 mm). DO NOT PUT THE CARPET UNDER THE EDGE OF THE AIR GRILL.

2411918 S00061529471_V1

**Carpet Installation
Figure 401/25-27-15-990-801 (Sheet 1 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

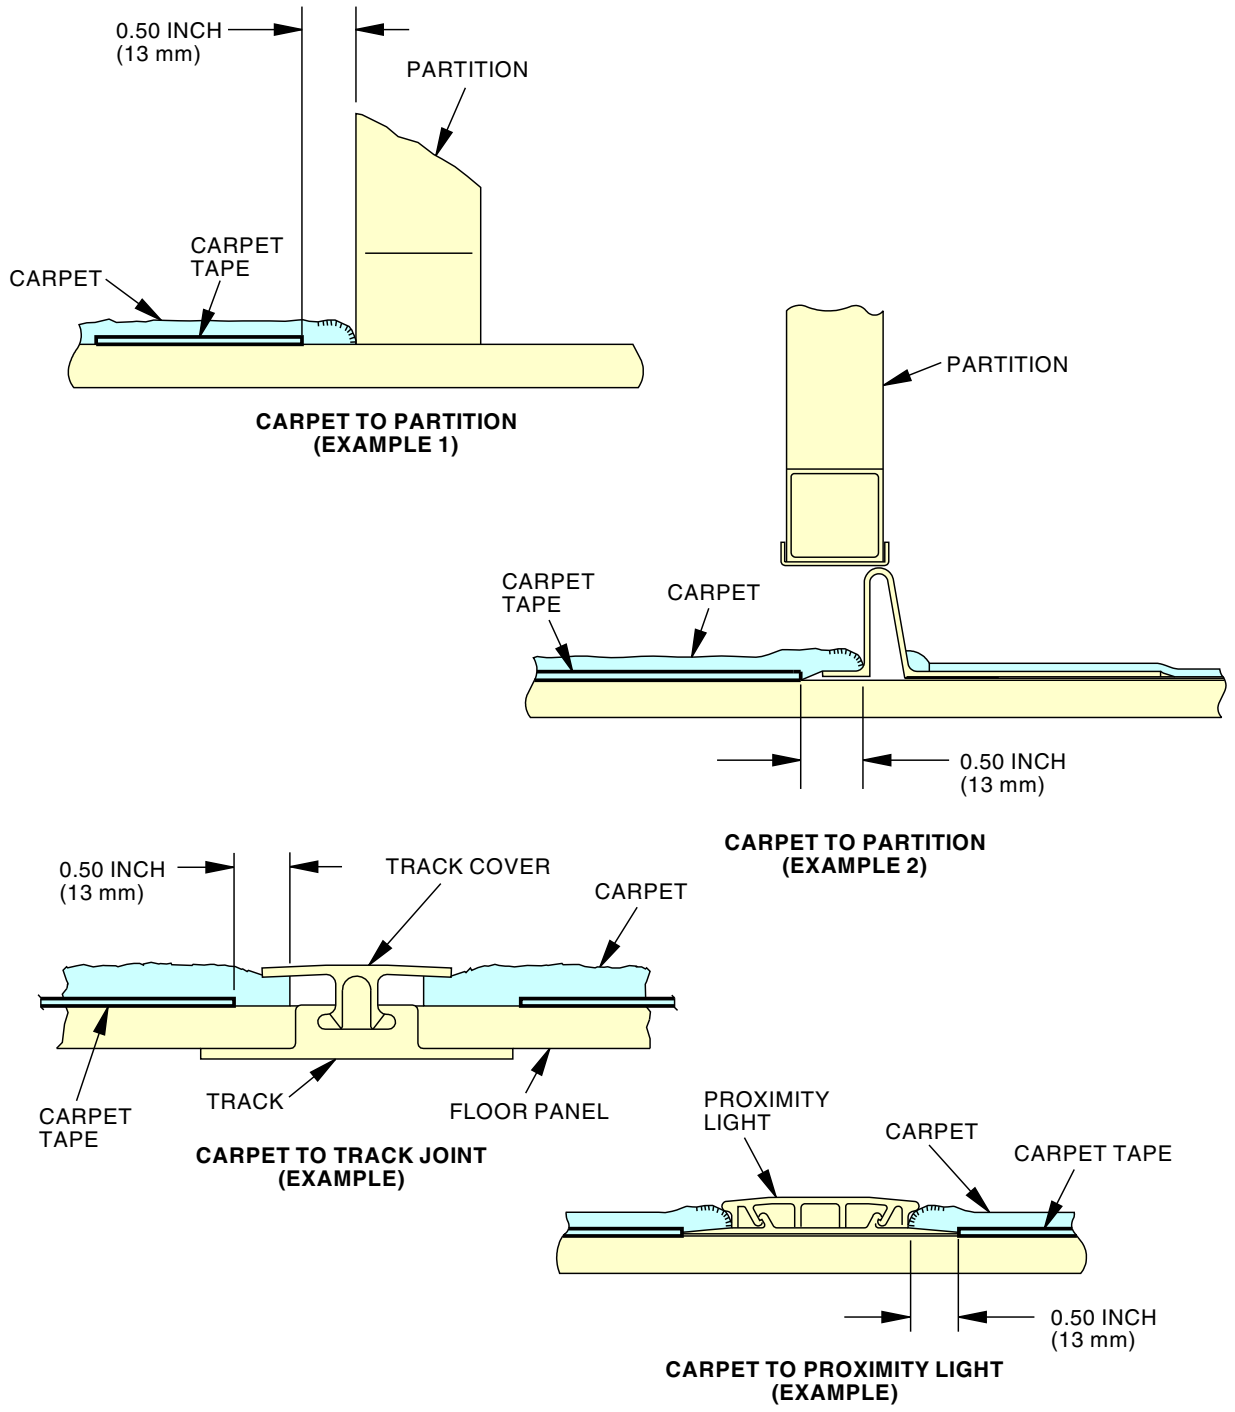

Carpet Installation
Figure 401/25-27-15-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-27-15-400-801

3. Carpet - Installation

(Figure 401)

A. Tools/Equipment

Reference	Description
STD-6636	Vacuum Cleaner - wet and dry type

B. Consumable Materials

Reference	Description	Specification
G01288	Tape - Carpet	BMS5-133
G50036	Tape - Carpet, Double-sided, 5 oz/sq yd., Black on side 2. Differential Tack. Storage Life 36 Months.	BMS5-133 Type IV Class 1
G50069	Tape - Carpet, Double-backed, Adhesive - BMS5-133, Type IV, Class 1	BMS5-133 Type IV Class 1
G50155	Tape - Carpet, Double-sided, 16 oz/sq. yd., White. Storage Life 18 Months.	BMS5-133 Type II Class 1
G50156	Tape - Carpet, Double-sided, 16 oz/sq. yd., Black. Storage Life 18 Months.	BMS5-133 Type II Class 2

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Carpet Installation

SUBTASK 25-27-15-160-001

(1) Make sure that the floor panels are clean.

SUBTASK 25-27-15-420-001

CAUTION

DO NOT USE NITTO P-55 (A BRAND OPTION FOR G50155) OR P-55B (A BRAND OPTION OF G50156) DIRECTLY ON FLOOR PANEL SURFACES. THESE TAPES WILL DELAMINATE FLOOR PANEL SURFACES WHEN THEY ARE REMOVED.

(2) Apply one of the following optional tapes around the edges of the carpet segments:

- carpet tape, G01288
- tape, G50036
- carpet tape, G50069
- tape, G50155
- tape, G50156.

(a) Apply tape approximately 0.5 in. (13 mm) from the edge of the carpet.

SUBTASK 25-27-15-420-002

(3) Apply one of the above optional tapes down the middle along the length of the aisle carpet.

SUBTASK 25-27-15-420-003

(4) Install the carpet in the correct position.

SUBTASK 25-27-15-160-002

(5) Use a vacuum cleaner, STD-6636, to clean the carpet.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-27-15-420-005

(6) Install the seat track covers between the seats, if applicable.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ENTRY AND SERVICE AREA FLOOR COVERING - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Entry and Service Area Floor Covering - Removal

(2) Entry and Service Area Floor Covering - Installation

B. These tasks have standard and alternate procedures that were approved for use on all mat installations.

TASK 25-27-21-000-801

2. Entry and Service Area Floor Covering - Removal

(Figure 401)

A. References

Reference	Title
25-66-02-000-801	Floor-Mounted Escape Slide Bracket Removal (P/B 201)

B. Consumable Materials

Reference	Description	Specification
G00088	Fabric, General Purpose, Rigid, Fire Retarded, Glass Fabric Reinforced Plastic Sheeting	BMS8-2
G02423	Tape - Moisture Barrier - 3 Feet Wide - 3M 8663	
G02500	Tape - Moisture Barrier - 4 inch Wide - 3M 8663DL	
G51482	Tape - Moisture Barrier - 4 Feet Wide - 3M 8663	

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Entry and Service Area Mat Removal - Standard Method

SUBTASK 25-27-21-000-001

(1) Remove the entry and service area mat.

(a) Remove the threshold plate from the edge of the mat.

(b) Remove or loosen the threshold to release the mats.

SUBTASK 25-27-21-000-002

(2) Remove the entry and service area floor covering.

(a) Release the mat from the edge thresholds.

(b) Remove all unwanted sealant from around the mat.

(c) Carefully pull the mat from the tape that holds the mat to the waterseal.

NOTE: Do not damage the waterseal.

(d) Remove the waterseal if all of the area is to be replaced.

1) Pull the strips of 3M 8663 tape, G02423, 3M 8663 tape, G51482, or 3M 8663DL tape, G02500, from the floor.

2) Remove the fillet seal from the edges of the sidewall.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Entry and Service Area Mat Removal - Alternate Method

SUBTASK 25-27-21-000-003

(1) Remove the entry and service area floor covering.

(a) Remove the fasteners from the doorway threshold and the flight deck threshold.

(b) Remove the girt bar latch fittings (TASK 25-66-02-000-801).

(c) Remove or loosen the doorway threshold and the flight deck threshold to release the mats.

CAUTION

OBEY THESE PRECAUTIONS. IF YOU IGNORE THESE PRECAUTIONS, DAMAGE TO EQUIPMENT WILL OCCUR.

1) Be careful when you remove the mat, do not damage the waterseal when you use a skin wedge or equivalent.

(d) Remove the plastic aisle threshold with a skin wedge or equivalent

SUBTASK 25-27-21-000-004

(2) Entry and service area floor covering with monuments installed.

(a) Separate the edge of the mat from the tape.

(b) If necessary, remove the sealant around the mat.

(c) Pull the mat upward from the tape and toward the monument wall.

NOTE: This area is where the mat will be trimmed.

(d) Put a protective strip of fabric, G00088, or equivalent between the waterseal and the mat.

NOTE: The waterseal can be damaged if the fabric, G00088, (or equivalent) is not used for protection.

(e) Carefully cut the mat that is adjacent to the monument walls.

NOTE: This starts the mat removal procedure.

(f) Release the rest of the mat.

(g) Carefully pull the mat from under the monument wall.

SUBTASK 25-27-21-000-005


(3) Remove the waterseal if all of the area is to be replaced.

(a) Pull the strips of 3M 8663 tape, G02423, 3M 8663 tape, G51482, or 3M 8663DL tape, G02500, from the floor.


(b) Remove the fillet seal from the edges of the sidewall.

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

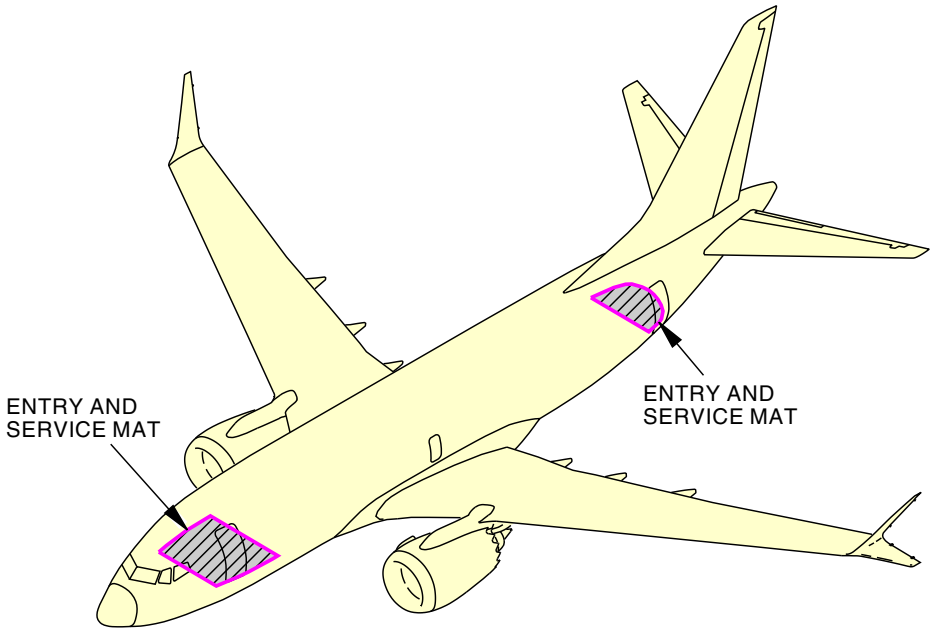

ENTRY AND SERVICE AREA MAT

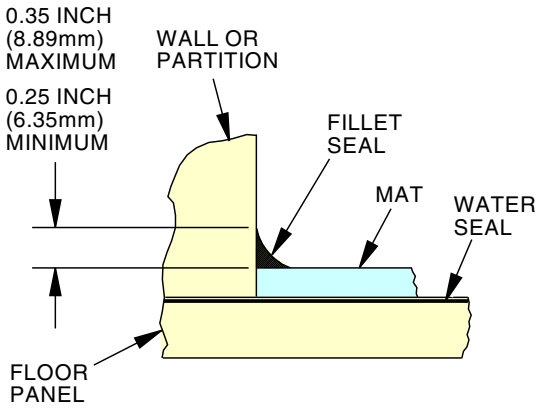

MAT TO PARTITION (SEALED EDGE)

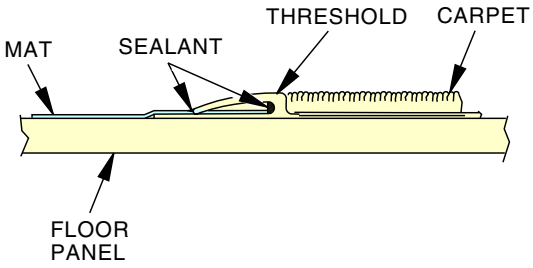


CARPET TO MAT


2411920 S00061529478_V2

Entry and Service Area Mat Installation
Figure 401/25-27-21-990-802 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

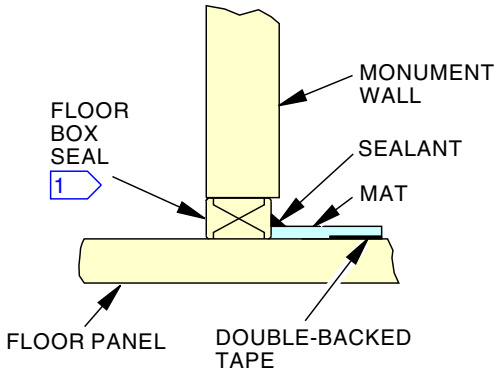


MAT TO MONUMENT

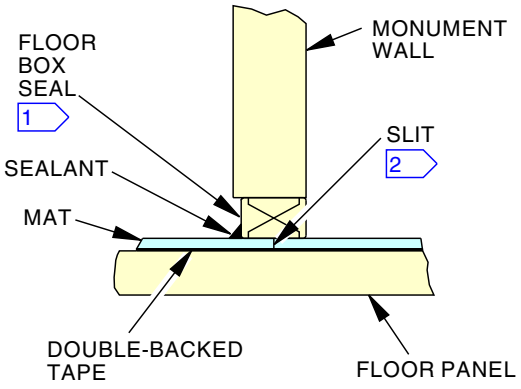

MAT TO MONUMENT (ALTERNATE METHOD)

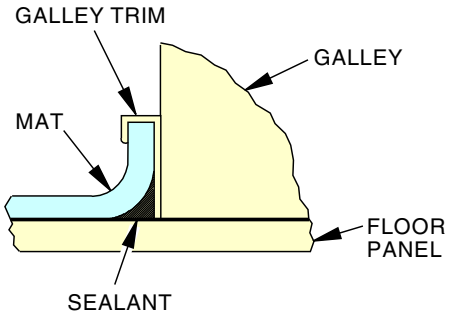

MAT TO GALLEY

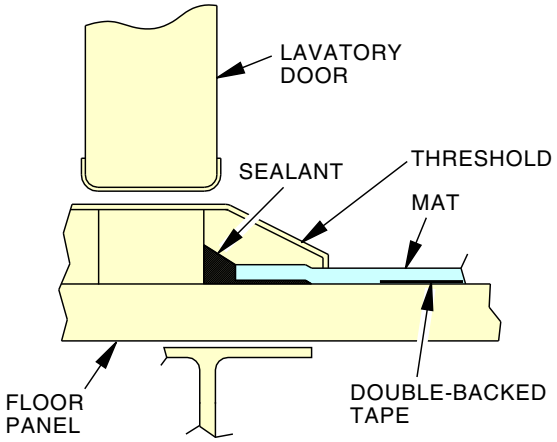

LAVATORY THRESHOLD


1 SILICON FOAM, BMS 1-68

2 OPTIONAL METHOD, PRECUT A SLIT CENTERED BETWEEN MONUMENT WALLS


2411921 S00061529479_V1

Entry and Service Area Mat Installation
Figure 401/25-27-21-990-802 (Sheet 2 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

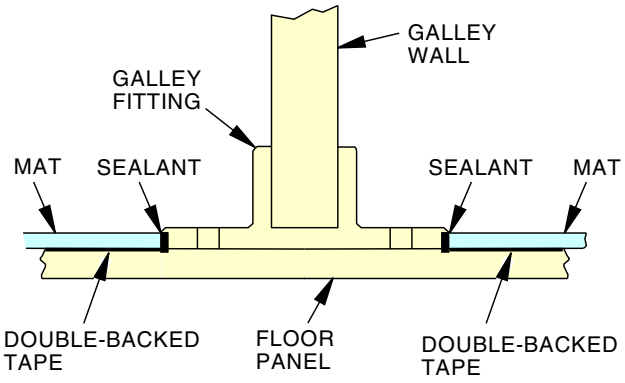


MAT TO GALLEY FITTING

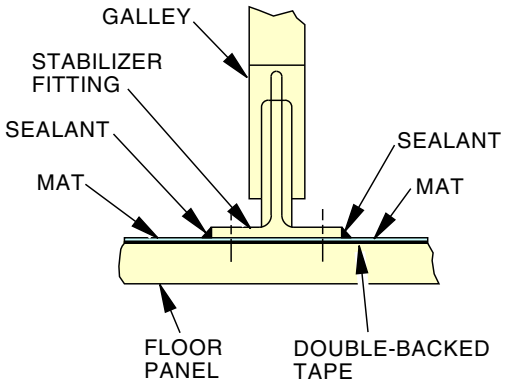

MAT TO GALLEY FITTING (ALTERNATE METHOD)

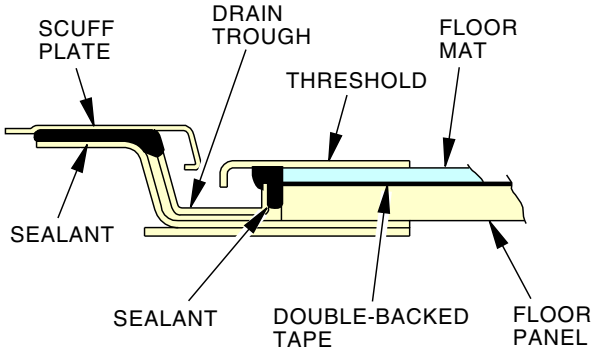

TROUGH TYPE DOOR MAT DRAIN

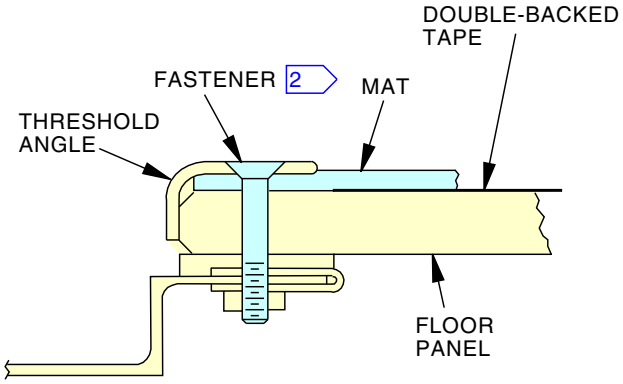

CONTROL CABIN THRESHOLD

2 INSTALL WITH SEALANT BMS 5-142 (BMS 5-95 OPTIONAL)

2411922 S00061529480_V1

Entry and Service Area Mat Installation
Figure 401/25-27-21-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-27-21-400-801

3. Entry and Service Area Floor Covering - Installation

(Figure 401)

A. References

Reference	Title
25-66-02-400-801	Floor-Mounted Escape Slide Bracket Installation (P/B 201)
53-21-00-300-801	Polyurethane Waterseal Repair (P/B 801)
53-21-11-300-801	Vinyl Water Barrier Repair (P/B 801)
53-21-11-300-802	Mylar Water Barrier Repair (P/B 801)

B. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A00930	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 109
A50009	Sealant - Low Density, Non-Chromate Type. (Formerly Chromate - Synthetic Rubber)	BMS5-142 Type II Class B-1 or B-2
B00062	Solvent - Acetone (99.5% Grade)	ASTM D 329 (Supersedes O-A-51)
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G01288	Tape - Carpet	BMS5-133
G02423	Tape - Moisture Barrier - 3 Feet Wide - 3M 8663	
G02500	Tape - Moisture Barrier - 4 inch Wide - 3M 8663DL	
G50179	Tape - Moisture Barrier, Adhesive One-side, Clear Polyurethane	BMS8-346 Type I
G50885	Tape - Nitto P-55 (Formerly Permacel) Flame Retardant Double Coated Cloth Tape	BMS5-133
G51340	Tape - Moisture Barrier, Adhesive One-side	BMS8-346 Type II Class 4
G51482	Tape - Moisture Barrier - 4 Feet Wide - 3M 8663	

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Prepare for the Installation

SUBTASK 25-27-21-840-001

WARNING DO NOT GET SOLVENTS IN YOUR MOUTH, EYES, OR SKIN. DO NOT BREATHE FUMES FROM SOLVENTS. REFER TO PRODUCT MATERIAL SAFETY DATA SHEETS (MSDS AND LOCAL REQUIREMENTS FOR PROPER HANDLING. SOLVENTS ARE HAZARDOUS MATERIALS AND MAY BE FLAMMABLE OR HARMFUL TO THE ENVIRONMENT.

(1) If the waterseal is not removed or replaced, do these steps to prepare the waterseal surface.

(a) Examine the waterseal for cuts, tears, abrasions, or other damage.

(b) Repair the waterseal.

1) Do this task: Vinyl Water Barrier Repair, TASK 53-21-11-300-801 or Mylar Water Barrier Repair, TASK 53-21-11-300-802.

2) Do this task: Polyurethane Waterseal Repair, TASK 53-21-00-300-801.

(c) Clean the waterseal with an oil-free cotton wiper, G00034, moistened with solvent, B00062, or solvent, B00184.

(d) Remove the sealant from the edge thresholds.

1) Make sure that the solvent does not get on the waterseal or the existing sealant.

SUBTASK 25-27-21-840-002

(2) Prepare the floor panels for the waterseal if the waterseal has been removed.

(a) Clean the floor panels:

1) Apply solvent, B00062, or solvent, B00184, with a clean oil-free cotton wiper, G00034.

2) Rub the surface to remove the soil.

3) Use a clean cotton wiper, G00034, to remove solvent, B00062, or solvent, B00184, before it evaporates.

(b) Protect the floor tracks from corrosion (SRM SUBJECT 51-20-01).

(c) Keep the floor panels clean prior to applying the waterseal.

E. Entry and Service Area Floor Covering Installation

SUBTASK 25-27-21-420-007

(1) Install the waterseal.

(a) Apply moisture barrier tape, G50179, to all floor panel seams in the galley and lavatory area, extending 20 in. (508 mm) AFT of the FWD wet area and 20 in. (508 mm) FWD of the AFT wet area.

(b) Apply moisture barrier tape 3M 8663DL tape, G02500, 3M 8663 tape, G02423, 3M 8663 tape, G51482, or moisture barrier tape, G51340, across the entire area perpendicular to the centerline of the airplane.

1) Make sure that there is a minimum of a 1.0 in. (25.4 mm) overlap of each strip.

(c) Push down on all the tape areas.

(d) Apply sealant, A50009, or sealant, A00247, to the edges, cracks and small holes.

1) Make sure that the waterseal and the adjacent structure has a complete seal.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Entry and Service Area Mat Installation - Standard Method

NOTE: The galleys, lavatories and partitions that border the sides of the entry mat must be installed before the mat.

SUBTASK 25-27-21-420-002

(1) Standard Method - Installation

(a) If necessary, install the entry monuments.

(b) Cut the mat to the correct size.

(c) Apply carpet tape, G01288, 6.0 in. (15.2 cm) wide, on the floor surface leaving no gaps.

NOTE: Avoid running the tape over the raised areas and floor panel inserts. The direction of the tape is optional.

NOTE: Adhesive Nitto P-55 tape, G50885, has displayed better results in countering mat buckling. Recommend to use Nitto P-55 tape, G50885, in areas of observed buckling.

NOTE: Nitto P-55 tape, G50885, has stronger adhesion properties making it more difficult to remove, care should be taken in its removal.

1) Keep the tape at least 0.25 in. (6.35 mm) and no more than 0.50 in. (12.70 mm) from the mat edges.

(d) Apply adhesive, A00930, for faying surfaces on the trim as well as sealing all the cracks and small holes.

NOTE: The adhesive, A00027, is optional to adhesive, A00930.

(e) Align the mat in the correct location.

1) Push firmly on all of the tape.

(f) Apply adhesive, A00930, at least 0.25 in. (6.35 mm) and no more than 0.35 in. (8.89 mm) wide, between the edge of the mat and floor panel.

NOTE: The adhesive, A00027, is optional to adhesive, A00930.

(g) Put the edges in the edge thresholds before the sealant starts to get hard.

G. Entry and Service Area Mat Installation - Alternate Method

SUBTASK 25-27-21-420-003

(1) Cut the mat to the correct size as follows:

(a) Precut a slit, centered between the monument walls.

NOTE: Use the template or remove and use the installed mat as a template to cut the new mat. Cutting a slit in the mat prepares the mat for future removal.

(b) Cut the mat to extend 0.15 in. (3.81 mm) to 0.35 in. (8.89 mm) past the galley walls.

NOTE: The mat will be installed under the galley wall and the foam seals.

NOTE: Do not cut the mat around the galley partition fittings. The fittings will be installed on top of the mat.

(c) If installed, cut the mat to extend under the closet installation.

(d) Cut the mat to fit around the forward fixed lavatory.

(e) If necessary, precut a slit, centered between the monument walls.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Apply carpet tape, G01288, that is 6.0 in. (15.2 cm) wide on the floor surface, no gaps permitted.

NOTE: Do not let the tape go over the raised areas and floor panel inserts. The direction of the tape is optional.

1) Keep the tape a minimum of 0.25 in. (6.35 mm) and a maximum of 0.50 in. (12.70 mm) from the mat edges.

(g) Apply adhesive, A00930, for faying surfaces on the slit edges of the mat running adjacent to the monuments.

NOTE: The adhesive, A00027, is optional to adhesive, A00930.

(h) Seal all the cracks and small holes.

(i) Put the mat in the correct location and push firmly on the tape.

(j) Apply a 0.25 in. (6.35 mm) to 0.35 in. (8.89 mm) fillet seal between the mat and the monuments with adhesive, A00930.

NOTE: The adhesive, A00027, is optional to adhesive, A00930.

(k) Put the edges in the edge threshold before the sealant starts to get hard.

SUBTASK 25-27-21-420-004

(2) Put the carpet in the edge thresholds for the mats.

SUBTASK 25-27-21-390-003

(3) Apply adhesive, A00930, (adhesive, A00027, is optional) to the threshold.

SUBTASK 25-27-21-420-005

(4) If necessary, install or tighten the mat to the carpet thresholds.

SUBTASK 25-27-21-420-006

(5) Install the threshold plate on the edge of the mat and drain trough.

SUBTASK 25-27-21-390-001

(6) Install the floor brackets for the escape slide adjacent to the entry and service doors (TASK 25-66-02-400-801).

SUBTASK 25-27-21-390-002

(7) Install the threshold over the edge of the mat at the drain trough.

(a) Apply adhesive, A00930, along the joint between the galley mat and drain trough (View TROUGH TYPE DOOR MAT DRAIN, Figure 401).

NOTE: The adhesive, A00027, is optional to adhesive, A00930.

(b) Make sure that there is a water-tight surface.

SUBTASK 25-27-21-160-001

(8) Remove excess sealant.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

RACEWAYS - REMOVAL/INSTALLATION

1. General

A. This procedure contains the following tasks:

(1) A removal of the raceways

(2) An installation of the raceways.

B. Wires are routed to the passenger seats through raceways. The raceways protect the wires from damage.

C. Wires go to the seats for the following electrical systems:

(1) On some airplanes, power for the seat adjustments

(2) On some airplanes, Seat Electronic Boxes (SEBs).

D. Double back tape attaches the raceways to the airplane deck.

TASK 25-27-31-000-801

2. Raceway - Removal

(Figure 401)

A. References

Reference	Title
25-21-46-000-801	Sidewall Panel - Removal (P/B 401)
25-22-00-000-801	Passenger Seat Removal (P/B 401)
25-27-15-000-801	Carpet Removal (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Raceway Removal

SUBTASK 25-27-31-860-006

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	18	C01949	CABIN EMER LIGHTS

These circuit breakers are inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
B	9	C01945	IFE AC (INOP)
B	10	C01952	IFE DC (INOP)

SUBTASK 25-27-31-020-015

(2) Remove the passenger seats if it is necessary (TASK 25-22-00-000-801).

SUBTASK 25-27-31-020-016

(3) Remove the track covers [2] between the seats.

SUBTASK 25-27-31-020-017

(4) Remove the carpet above the seat-to-sidewall raceways [1] (TASK 25-27-15-000-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-27-31-020-018

(5) Remove the straps that attach the cable to the seat leg.

(a) Disconnect the cable.

SUBTASK 25-27-31-010-001

(6) To access the seat-to-sidewall disconnect, remove the applicable sidewall panel (TASK 25-21-46-000-801).

SUBTASK 25-27-31-020-019

(7) As required, disconnect the cables from both seat-to-seat and seat-to-sidewall connectors.

SUBTASK 25-27-31-020-020

(8) Remove the cables from the raceways [1].


SUBTASK 25-27-31-020-021

(9) Lift and remove the raceways [1] from the floor panels.


NOTE: For installation, make a note of the location of the wire and of the location of each light.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

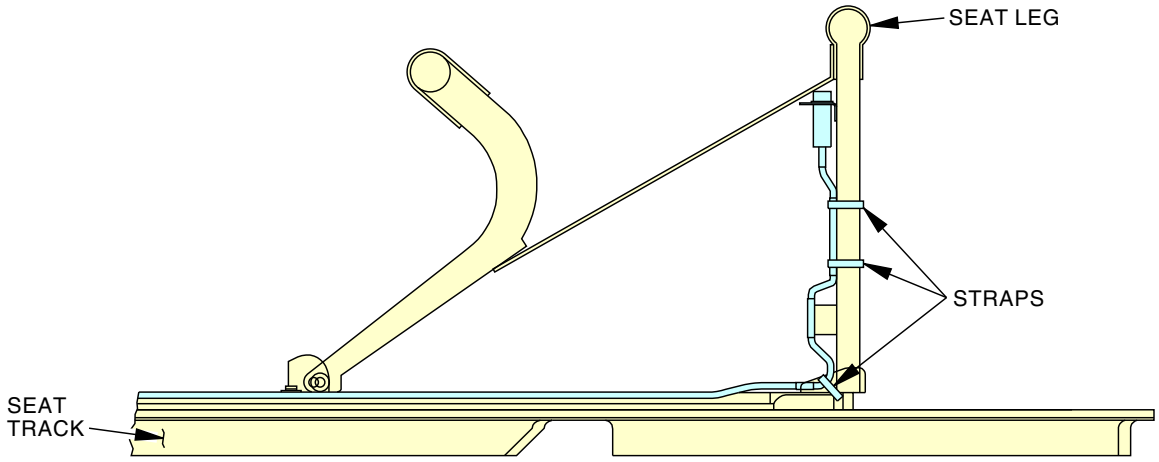

**SEAT-MOUNTED PROXIMITY LIGHTING
SEAT LEG CABLE ROUTING
(EXAMPLE)**

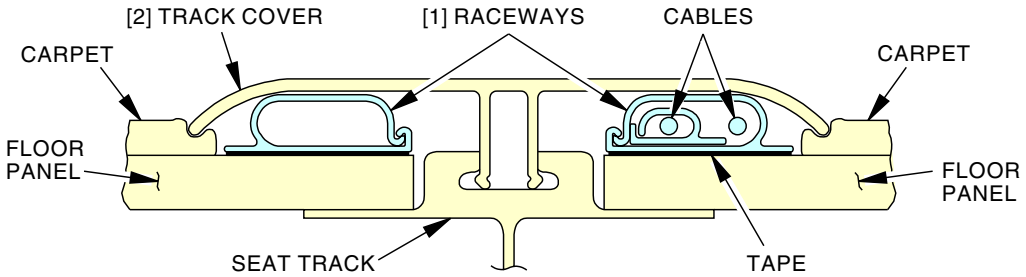

**SEAT-MOUNTED PROXIMITY LIGHTING RACEWAY
(EXAMPLE)**

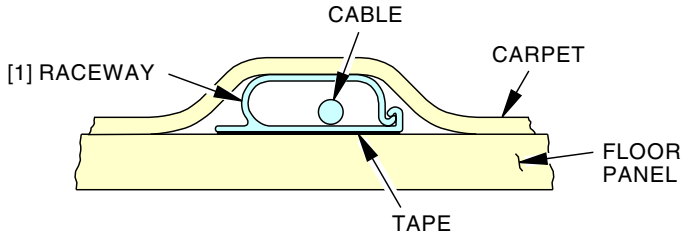

**SEAT TO SIDEWALL RACEWAY
(EXAMPLE)**

2901622 S0000693345_V1

**Raceway Installation
Figure 401/25-27-31-990-802**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-27-31-400-801

3. Raceway - Installation

(Figure 401)

A. References

Reference	Title
25-21-46-400-801	Sidewall Panel - Installation (P/B 401)
25-22-00 P/B 601	PASSENGER SEATS - INSPECTION/CHECK
25-22-00-400-801	Passenger Seat Installation (P/B 401)
25-27-15-400-801	Carpet - Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
G01288	Tape - Carpet	BMS5-133
G50218	Strap - Plastic, Adjustable, Self-locking, 27.50 Inches (698.50MM) Long	BACS38K6

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Raceway Installation

SUBTASK 25-27-31-100-001

(1) If it is necessary, clean the floor in the area of the new raceway installation.

SUBTASK 25-27-31-420-026

(2) Install new carpet tape, G01288, on the floor panels for the raceways [1] and along the seat tracks.

SUBTASK 25-27-31-420-027

(3) Install the raceways [1] on the floor panels.

SUBTASK 25-27-31-420-028

(4) Install the cables in the raceways [1].

SUBTASK 25-27-31-420-029

(5) Install the track covers [2].

SUBTASK 25-27-31-420-030

(6) Connect the cables to the seat- to-sidewall connections.

SUBTASK 25-27-31-420-031

(7) Install the sidewall panels (TASK 25-21-46-400-801).

SUBTASK 25-27-31-420-032

(8) Install the carpet for the seat to sidewall raceway [1] (TASK 25-27-15-400-801).

SUBTASK 25-27-31-420-033

(9) Install the passenger seats, if they were removed (TASK 25-22-00-400-801).

SUBTASK 25-27-31-420-034

(10) Connect the cables to both the seat leg and sidewall connectors.

SUBTASK 25-27-31-400-001

(11) Route cable from connectors directly into the raceway.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Install wires and cables so they do not rub or touch sharp faces that could damage the installation.

SUBTASK 25-27-31-400-002

(12) Coil, stow, and secure extra cable directly into the raceway, behind the sidewall or in the seat shroud at connectors.

(a) Install wires and cables so they do not rub or touch sharp surfaces that could damage the installation.

(b) Ensure that stowed extra cable does not protrude from shroud or lay on the airplane floor.

(c) If extra slag is present, distribute slack evenly through the length of the bundle.

NOTE: Prefer Cable bend radii is 6 times the diameter of the bundle containing standard wire. But it shall never be less than 3 times.

SUBTASK 25-27-31-420-035

(13) Attach the cables to seat leg with the adjustable plastic strap, G50218.

(a) Make sure the first plastic strap is placed so that it does not excessively bend or pull on the cable.

NOTE: Allow enough distance to avoid distortion of the connector grommet holes.

E. Installation Test

SUBTASK 25-27-31-860-005

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
B	18	C01949	CABIN EMER LIGHTS

These circuit breakers are inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
B	9	C01945	IFE AC (INOP)
B	10	C01952	IFE DC (INOP)

SUBTASK 25-27-31-710-004

(2) Do a test of the seats and systems for correct operation (PAGEBLOCK 25-22-00/601).

SUBTASK 25-27-31-710-005

(3) Do a test of the PC Power Systems for correct operation (Reference Not Currently Available).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SERVICE OUTLETS - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A Deactivation of the Service Outlets

(2) An Activation of the Service Outlets.

TASK 25-29-07-040-801

2. Service Outlets - Deactivation

A. General

(1) This task will deactivate the power to the service outlets.

B. Tools/Equipment

Reference	Description
STD-6481	Voltmeter - Digital

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Prepare for the Deactivation

SUBTASK 25-29-07-020-001

(1) To get access to the P92 panel, open this access door:

Number	Name/Location
117A	Electronic Equipment Access Door

F. Service Outlets Deactivation

SUBTASK 25-29-07-020-010

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
F	1	C00117	28V DC SERVICE OUTLETS

SUBTASK 25-29-07-020-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	7	C00116	SERVICE OUTLETS
E	8	C00118	VAC OUTLET FWD
E	9	C00119	VAC OUTLET AFT

SUBTASK 25-29-07-410-001

(3) Close this access door:

Number	Name/Location
117A	Electronic Equipment Access Door

G. Service Outlets - Tryout

NOTE: This tryout is to make sure that the power to the service outlets is in zero energy state.

SUBTASK 25-29-07-210-001


(1) Use a digital voltmeter, STD-6481, to measure the voltage at the applicable service outlet.

(a) For the 115 VAC service outlet, make sure that it has the correct voltage (0 ±1 VAC).

(b) For the 28 VDC service outlet, make sure that it has the correct voltage (0 ±1 VDC).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

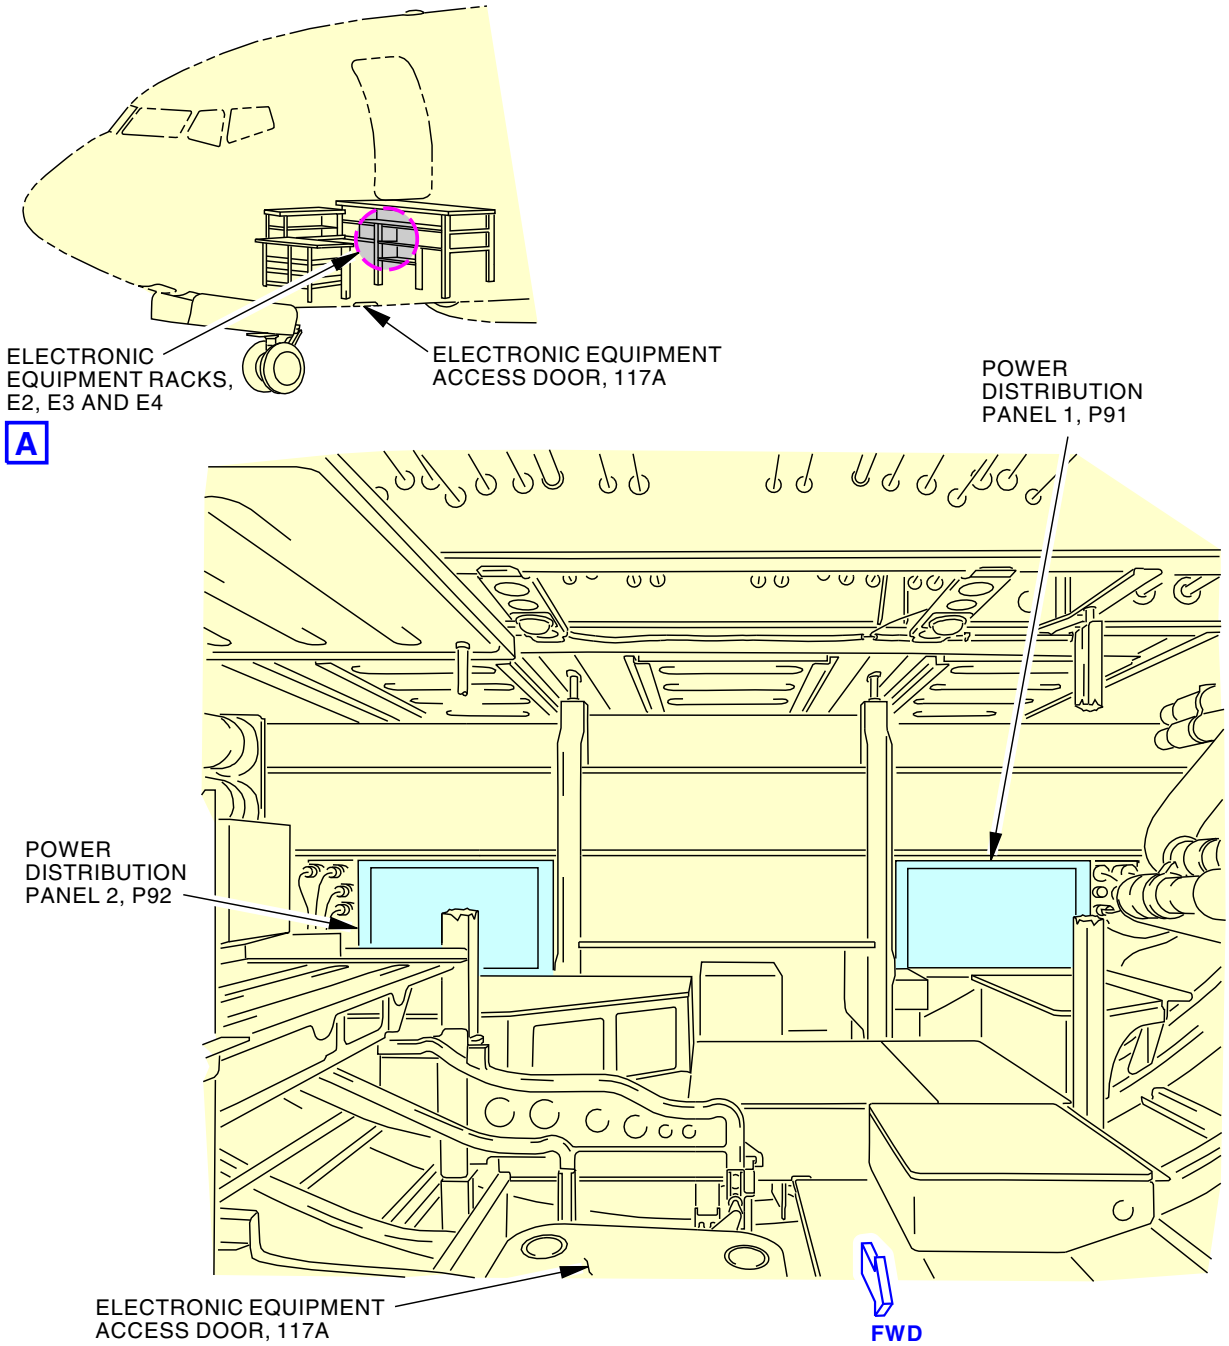

ELECTRONIC EQUIPMENT RACKS, E2, E3 AND E4

A

2533637 S0000600768_V1

Service Outlets - Electrical Control Panels P91 and P92
Figure 201/25-29-07-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-29-07-440-801

3. Service Outlets - Activation

(Figure 201)

A. General

(1) This task will activate the power to the service outlets.

B. Tools/Equipment

Reference	Description
STD-6481	Voltmeter - Digital

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Service Outlets Activation

SUBTASK 25-29-07-010-001

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-29-07-860-003

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	7	C00116	SERVICE OUTLETS
E	8	C00118	VAC OUTLET FWD
E	9	C00119	VAC OUTLET AFT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-29-07-410-002

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-29-07-420-001

(4) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
F	1	C00117	28V DC SERVICE OUTLETS

SUBTASK 25-29-07-210-002

(5) Use a digital voltmeter, STD-6481, to measure the voltage at the applicable service outlet.

(a) For the 115 VAC service outlet, make sure that it has the correct voltage (115 ±5 VAC).

(b) For the 28 VDC service outlet, make sure that it has the correct voltage (28 ±5 VDC).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SERVICE OUTLETS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A Removal of the Service Outlet

(2) An Installation of the Service Outlet.

B. The vacuum cleaner outlets are installed on the right side of the airplane, aft and forward entry doors. Other service outlets are installed on the sidewall panels in the passenger cabin. The removal and installation procedures for the service outlets are equivalent.

TASK 25-29-07-000-801

2. Service Outlet - Removal

(Figure 401)

A. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

B. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

C. Prepare for the Removal

SUBTASK 25-29-07-860-004

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
F	1	C00117	28V DC SERVICE OUTLETS

SUBTASK 25-29-07-010-002

(2) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-29-07-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	7	C00116	SERVICE OUTLETS
E	8	C00118	VAC OUTLET FWD
E	9	C00119	VAC OUTLET AFT

D. Service Outlet Removal

SUBTASK 25-29-07-020-003

(1) Remove the receptacle cover [1] (lift to open) from the housing [3].

SUBTASK 25-29-07-020-004

(2) Remove the four screws [9], washers [8], and spacers [7] that attach the housing [3] to the support [5].

SUBTASK 25-29-07-020-005

(3) Remove the housing [3].

SUBTASK 25-29-07-020-006

(4) Remove the two screws [6] and washers [2] (if installed) that attach the outlet [4] to the support [5].

SUBTASK 25-29-07-020-007

(5) Pull the outlet [4] from the support [5].

SUBTASK 25-29-07-020-008


(6) Disconnect the wires from the outlet [4].

SUBTASK 25-29-07-020-009


(7) Remove the outlet [4].

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

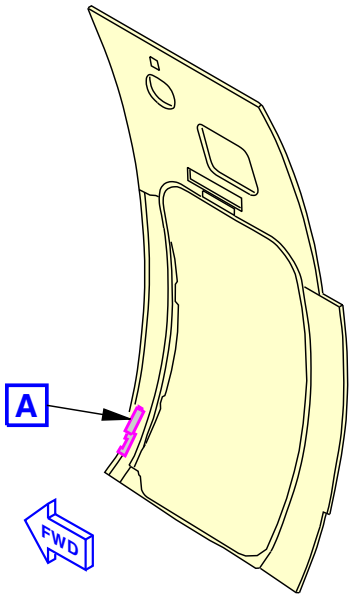

FORWARD ENTRY DOOR
(RIGHT SIDE)

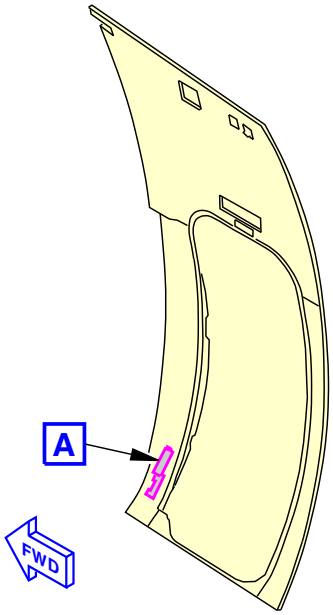

AFT ENTRY DOOR
(RIGHT SIDE)

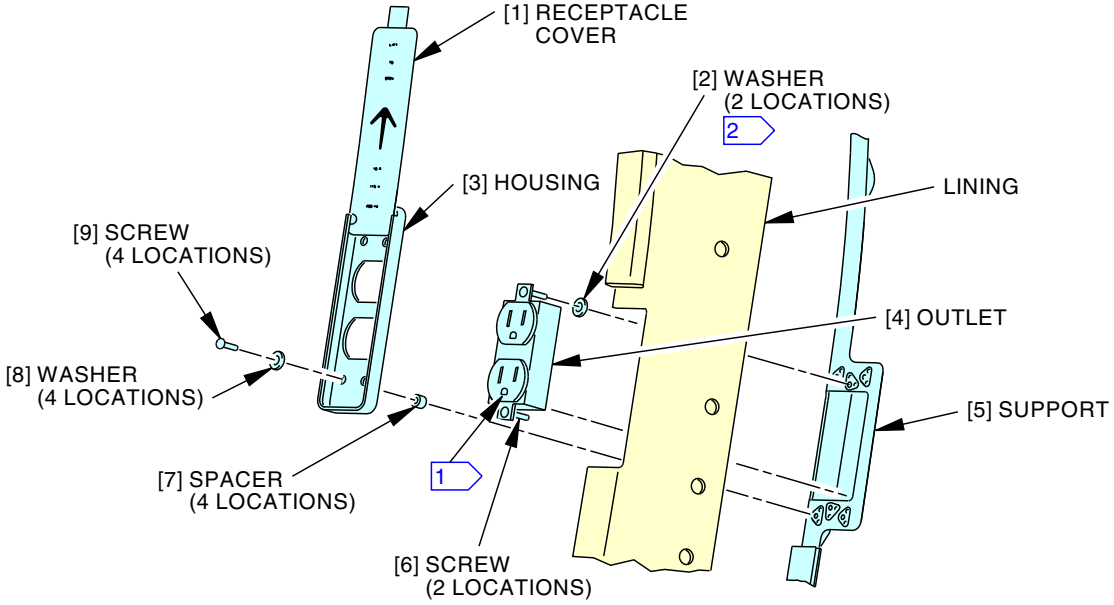

SERVICE OUTLET
(EXAMPLE)

1 INSTALL THE OUTLET WITH THE GROUND POSITIONED AT THE BOTTOM OF THE OUTLET (AS SHOWN).

2 IF INSTALLED

A

FWD

2411926 S00061529496_V2

Service Outlet Installation
Figure 401/25-29-07-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-29-07-400-801

3. Service Outlet - Installation

(Figure 401)

A. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
4	Outlet	25-29-59-03-035	PTF ALL

B. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
200	Upper Half of Fuselage

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Service Outlet Installation

SUBTASK 25-29-07-420-002

(1) Align the new outlet [4] in the correct position on the support [5].

SUBTASK 25-29-07-420-003

(2) Connect the wires to the outlet [4].

SUBTASK 25-29-07-420-004

(3) Install the two screws [6] and washers [2] (if installed) to attach the outlet [4] to the support [5].

SUBTASK 25-29-07-420-005

(4) Align the housing [3] on the outlet [4] and the support [5].

SUBTASK 25-29-07-420-006

(5) Install the four screws [9], washers [8], and spacers [7] to attach the housing [3] to the support [5].

SUBTASK 25-29-07-420-007

(6) Install the receptacle cover [1] on the housing [3].

E. Put the Airplane Back to Its Usual Condition

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

SUBTASK 25-29-07-860-002

(1) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	7	C00116	SERVICE OUTLETS
E	8	C00118	VAC OUTLET FWD
E	9	C00119	VAC OUTLET AFT

SUBTASK 25-29-07-410-003

(2) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-29-07-860-005

(3) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-3

Row	Col	Number	Name
F	1	C00117	28V DC SERVICE OUTLETS

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY WATER FILTERS - MAINTENANCE PRACTICES

1. General

A. This procedure has this task:

(1) Galley Water Filter Replacement.

B. This is a general task and not customized for a specified galley location or a supplier.

TASK 25-31-00-960-801

2. Galley Water Filter Replacement

(Figure 201)

A. References

Reference	Title
38-42-00-800-802	Potable Water System - Activation (P/B 201)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
4	Filter cartridge	Not Specified	

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Galley Water Filter Replacement

SUBTASK 25-31-00-840-001

(1) Prepare to replace the Water Filter:

(a) At the Overhead Panel, P5, set the CAB/UTIL switch to the OFF position.

(b) Turn the water shutoff valve [2] in the galley to the OFF position.

(c) Open the faucet to release the water pressure and drain some of the water.

(d) Close the faucet when the water stops.

E. Galley Water Filter Replacement

SUBTASK 25-31-00-900-001

(1) Remove the Water Filter:

(a) Put a container or cloth below the filter case [3] to absorb spilled water.

(b) Loosen the vent screw [6] (where applicable) and let the water drain from the pressure vessel.

(c) Remove the clamp [5] at the top of the filter case [3].

(d) Remove the filter cartridge [4] from the filter case [3].

(e) If necessary, examine the cartridge seal and housing gasket.

NOTE: Contact the galley manufacturer for the part numbers of the seal or gaskets.

SUBTASK 25-31-00-960-001

(2) Replace the Water Filter:

(a) Clean the inner part of the filter case [3] with a clean cloth.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Install a clean filter cartridge [4].

NOTE: Make sure that all new cartridges have been flushed at the time of installation. This is done by running water through the filter at full flow from the service top for three minutes or until water runs clear.

(c) Install the clamp [5] and tighten the wingnut.

1) Make sure that the clamp [5] is installed in the correct position and head of the wingnut does not cause the interference with the cart.

(d) Open the water shutoff valve [2].

(e) At the Overhead Panel P5, set the CAB/UTIL switch to the ON position.

(f) Open the vent screw [6] at the top of the filter case [3] to bleed air.

(g) Close the vent screw [6].


(h) Pressurize the potable water system, do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

(i) Open the faucet.


(j) Make sure that there are no leaks around the water filter assembly [1].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

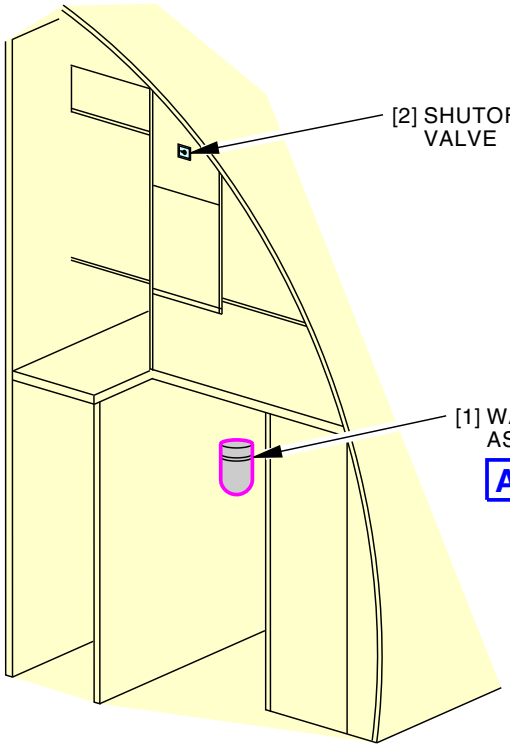

FORWARD GALLEY
(EXAMPLE)

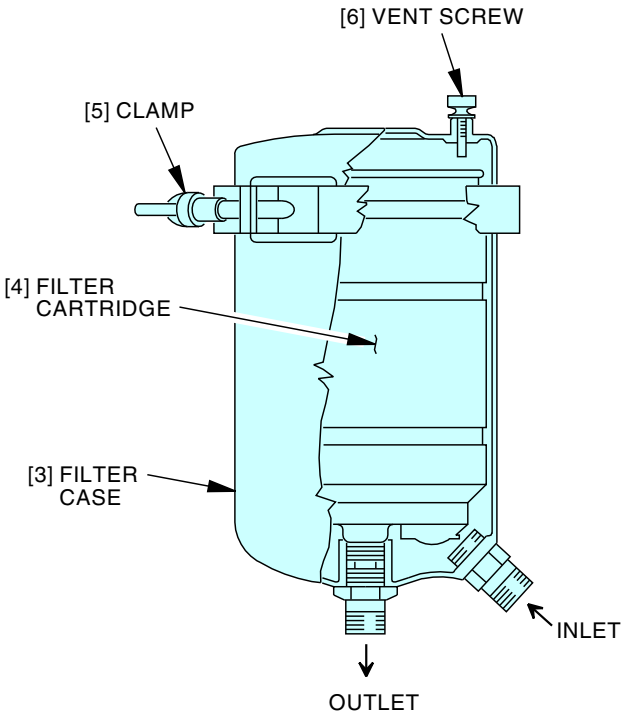

WATER FILTER ASSEMBLY
(EXAMPLE)

A

2997948 S0000774478_V1

Galley Water Filter
Figure 201/25-31-00-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY NO. 1 - MAINTENANCE PRACTICES

1. General

A. This procedure has these two tasks:

(1) Galley No. 1 - Deactivation

(2) Galley No. 1 - Activation

TASK 25-31-11-040-801

2. Galley No. 1 - Deactivation

A. General

(1) This task will deactivate galley No. 1 power systems.

B. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Deactivate Galley No. 1

SUBTASK 25-31-11-010-002

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-31-11-860-005

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	10	C00242	GALLEY LTS
F	8	C00914	GALLEY BUS B

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Galley Power Systems - Tryout

NOTE: This tryout will make sure that the galley power systems are in a zero energy state.

SUBTASK 25-31-11-210-001

(1) Make sure that the GALLEY POWER indicator light on the electrical control panel on the galley unit is off.

SUBTASK 25-31-11-420-001

(2) Put the WORK LIGHT BRT/OFF/DIM switch on the galley electrical control panel to BRT or DIM position. Make sure the light does not come on.

SUBTASK 25-31-11-020-002

(3) Put the WORK LIGHT BRT/OFF/DIM switch on the galley electrical control panel to the OFF position.

SUBTASK 25-31-11-410-005

(4) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

——— END OF TASK ———

TASK 25-31-11-440-801

3. Galley No. 1 - Activation

A. General

(1) This task will activate the galley No. 1 power systems.

B. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Activate Galley No. 1

SUBTASK 25-31-11-010-003

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-31-11-420-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
E	10	C00242	GALLEY LTS
F	8	C00914	GALLEY BUS B

SUBTASK 25-31-11-410-004

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY NO. 1 - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Galley No. 1 Removal

(2) Galley No. 1 Installation

B. The No. 1 galley unit is bolted to the airplane floor with floor-mounted fittings and are sealed to prevent penetration of moisture. Tie rods secure the upper attachment of the galley unit to the airplane structure. Electrical wiring and connectors supply electricity to operate the equipment and lighting in the work area. Water is supplied by the airplane potable water system. The galley sink is connected to the airplane drainage system.

TASK 25-31-11-000-801

2. Galley No. 1 - Removal

(Figure 401)

A. General

(1) During removal procedures, portable galley cart, SPL-21406, may be used to lift, hold, and transport the galley unit to correct locations or positions.

B. References

Reference	Title
25-21-34-000-801	Forward Galley Door Doorway Header Panel Removal (P/B 401)
25-21-35-020-801	Forward Galley Doorway Sidewall Lining Panel - Removal (P/B 401)
25-31-11-040-801	Galley No. 1 - Deactivation (P/B 201)
33-51-01-960-802	Exit Sign - Light Assembly Replacement (P/B 201)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-21406	Portable Cart - Galley Assy Part #: C25005-54 Supplier: 81205

D. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Prepare for the Removal

SUBTASK 25-31-11-040-001

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Deactivate Galley No. 1 (TASK 25-31-11-040-801).

SUBTASK 25-31-11-020-003

(2) Remove the light assembly for the floor proximity lights.

(a) Do this task: Floor Proximity Light - Light Assembly Replacement, TASK 33-51-14-960-802.

SUBTASK 25-31-11-020-023

(3) Remove the exit sign light assembly (TASK 33-51-01-960-802).

SUBTASK 25-31-11-020-004

(4) Remove the galley doorway header panel, if it is necessary.

(a) Do this task: Forward Galley Door Doorway Header Panel Removal, TASK 25-21-34-000-801.

SUBTASK 25-31-11-020-005

(5) Remove the forward galley doorway sidewall lining panel, if it is necessary.

(a) Do this task: Forward Galley Doorway Sidewall Lining Panel - Removal, TASK 25-21-35-020-801.

SUBTASK 25-31-11-860-002

(6) Deactivate the potable water system.

(a) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-31-11-020-006

(7) Drain the water supply system.

(a) Put the water shutoff valve [16] in the open position.

(b) Make sure that all water is drained from the water supply connection [32] galley equipment.

SUBTASK 25-31-11-020-007

(8) Remove the galley carts and all applicable inserts from the galley unit.

F. Galley (G1) Removal

SUBTASK 25-31-11-020-017

(1) Remove the trim flange outboard top [2] from the galley unit, if applicable (View D, Figure 401).

(a) Remove the six screws [4] and washers [3] that attach the trim flange outboard top [2] to the galley unit.

SUBTASK 25-31-11-020-018

(2) Remove the trim flange outboard bottom [5] from the galley unit, if applicable (View D, Figure 401).

(a) Remove the four screws [7] and washers [6] that attach the trim flange outboard bottom [5] to the galley unit.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-11-020-019

(3) Remove the waste container [14] from the galley unit, if applicable (View A, Figure 401).

SUBTASK 25-31-11-020-020

(4) Remove the box assembly from the galley unit, if applicable (View A, Figure 401).

(a) Remove all unwanted sealant to get access to the floor seal.

1) Carefully remove the sealant to prevent damage to the galley mat.

(b) Remove the four inner screws and bushings from the left wall of the box assembly.

(c) Remove the four inner screws and bushings from the right wall of the box assembly.

(d) Remove the floor seal, if it is necessary.

(e) Carefully remove the box assembly to prevent damage to the galley mat.

SUBTASK 25-31-11-020-008

(5) Disconnect the two electrical connectors [15] (View B, Figure 401).

(a) Open the ceiling access panel.

(b) Disconnect the two electrical connectors [15].

SUBTASK 25-31-11-020-009

(6) Disconnect the water supply connection [32] from the galley unit (View C, Figure 401).

(a) Cut the five tie straps [22] that attach the shroud [19] to the water connection.

(b) Disconnect the water supply connection [32] from the water supply line [18].

SUBTASK 25-31-11-020-010

(7) Disconnect the door flexible duct [8] from the galley unit (View E, Figure 401).

(a) Get access to the door flexible duct [8] from the lower galley access panel.

(b) Loosen the hose clamp [10].

(c) Disconnect the door flexible duct [8].

SUBTASK 25-31-11-020-011

(8) Disconnect the drain line [9] from the galley unit (View E, Figure 401).

(a) Get access to the drain line [9] line from the lower galley access panel.

(b) Loosen the hose clamp [10].

(c) Disconnect the drain line [9].

SUBTASK 25-31-11-020-012

(9) Disconnect the tie rod [28] from the upper attachment fitting [17] (View H, Figure 401).

(a) Remove the quick-release pin [29] that attaches the tie rod [28] to the upper attachment fitting [17].

(b) Disconnect the tie rod [28] from the upper attachment fitting [17].

SUBTASK 25-31-11-140-001

(10) Remove all unwanted sealant to get access to the floor fitting fasteners, the stabilizer (if it is necessary) and the floor seal.

(a) Carefully remove the sealant to prevent damage to the galley mat.

SUBTASK 25-31-11-020-013

(11) Remove the cover plates [33] from the floor fittings [23] and the floor fittings [24] on the galley unit (View F and View G, Figure 401).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the three screws [34] that attach the cover plate [33] to the floor fitting [24] (2 locations).

(b) Remove the four screws [34] that attach the cover plate [33] to the floor fitting [23] (2 locations).

SUBTASK 25-31-11-020-022

(12) If installed, remove the stabilizer [35] as follows:

(a) Remove the bolts [36] and washers [37] from the floor panel.

(b) Move the stabilizer [35] from the galley panel.

SUBTASK 25-31-11-160-001

WARNING USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(13) If it is necessary, remove the grease from the bolts [25].

SUBTASK 25-31-11-020-015

(14) Remove the two bolts [25], washers [26], and shims [27] at the four hard point locations (View F and View G, Figure 401).

(a) Record the location and quantity of shims [27] for the subsequent installation.

SUBTASK 25-31-11-020-021


(15) If installed, remove the floor seal [31] between the galley wall panels, the galley mat and the floor fittings.

SUBTASK 25-31-11-020-016

(16) Carefully remove the Galley No. 1 [1] to prevent damage to the galley mat.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

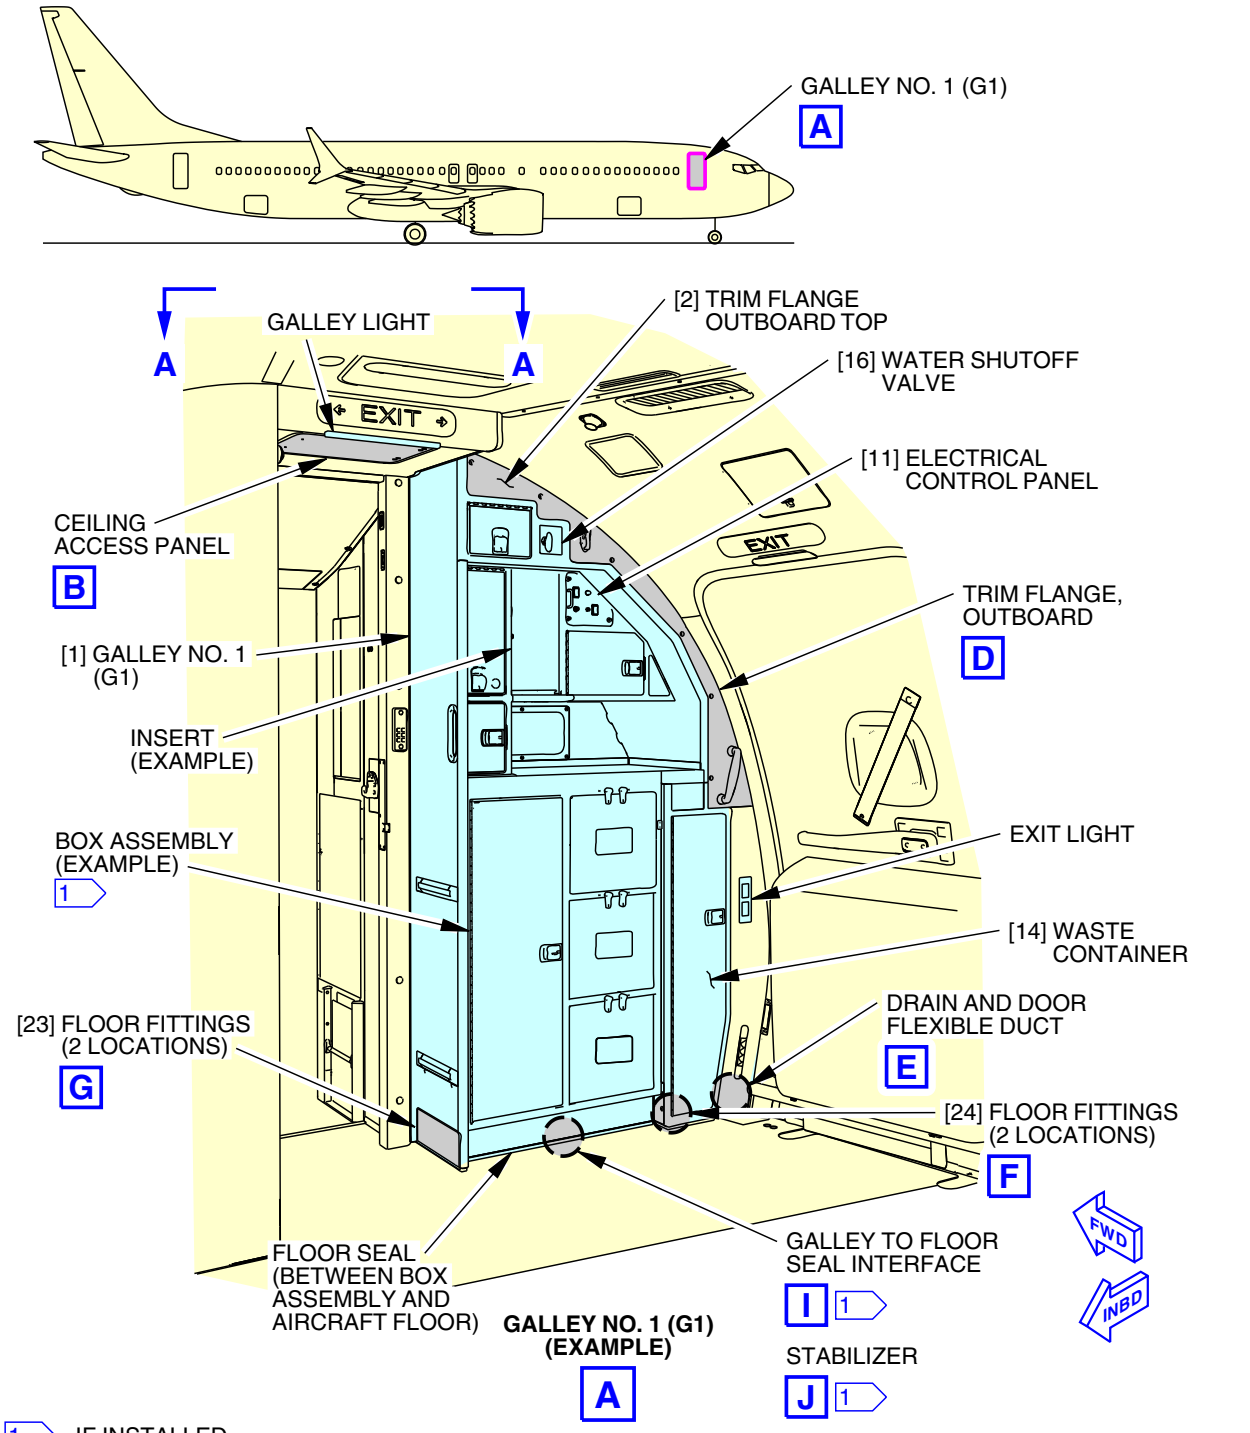


Galley No. 1 (G1) Installation
Figure 401/25-31-11-990-801 (Sheet 1 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

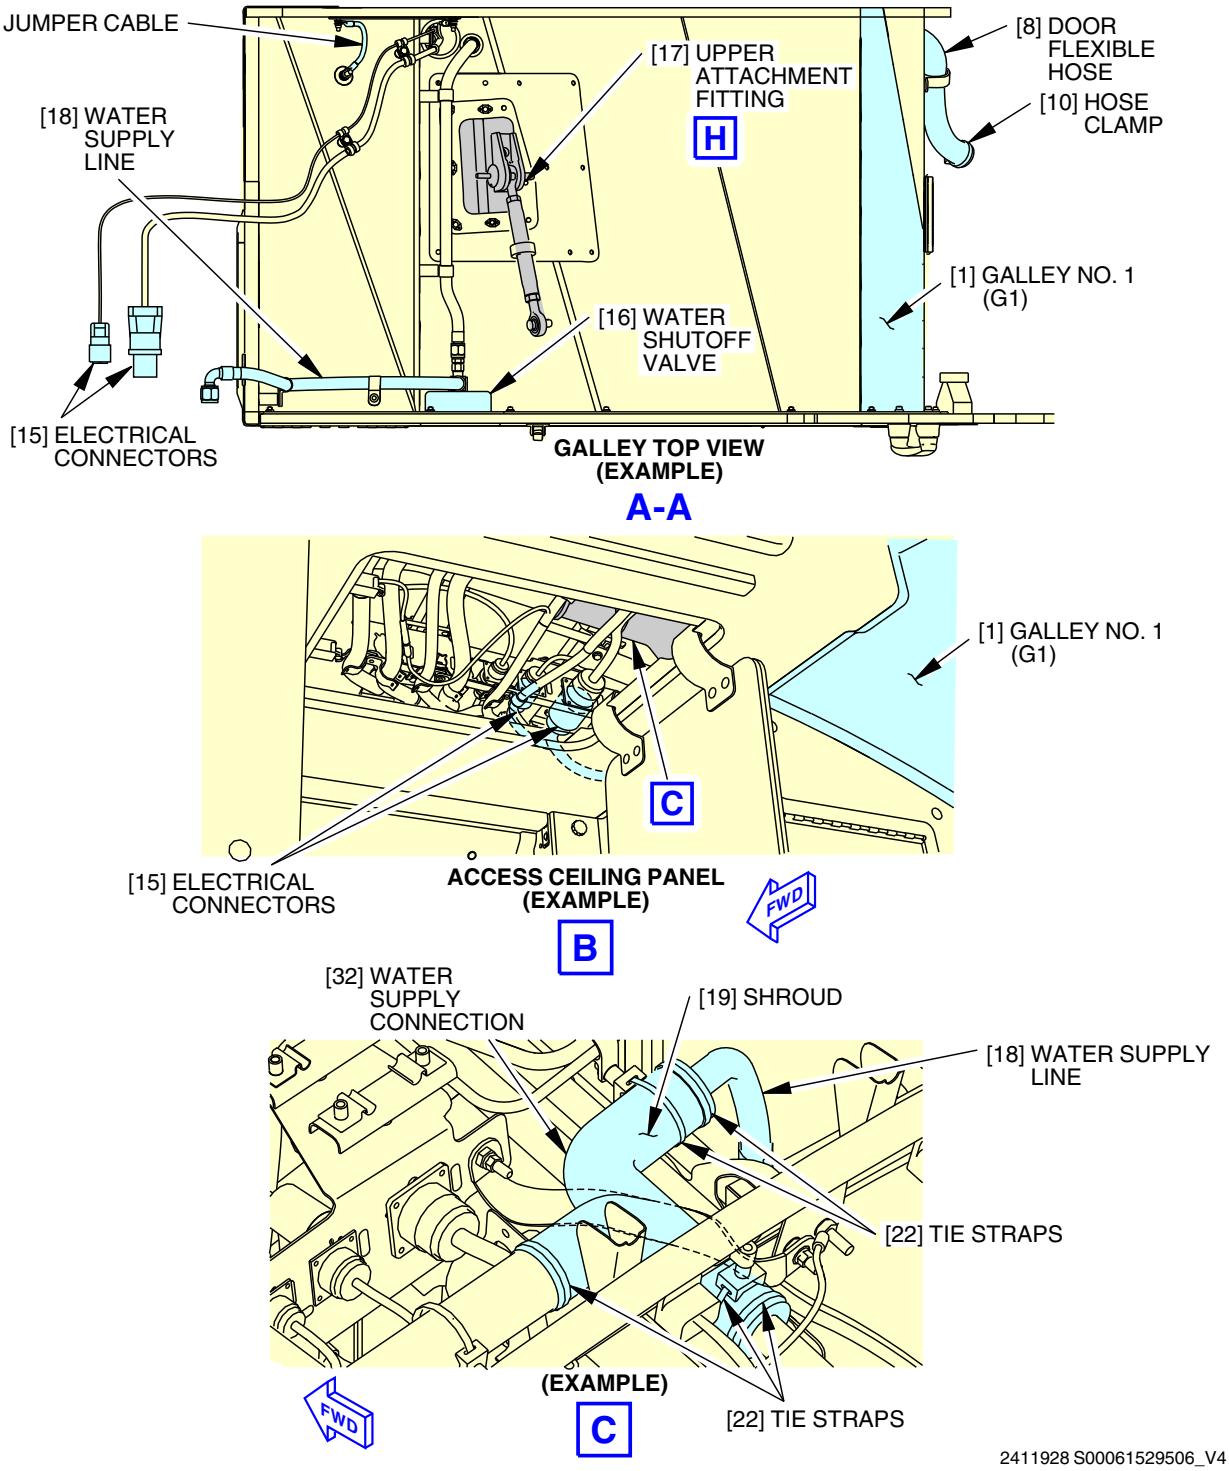


Galley No. 1 (G1) Installation
Figure 401/25-31-11-990-801 (Sheet 2 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

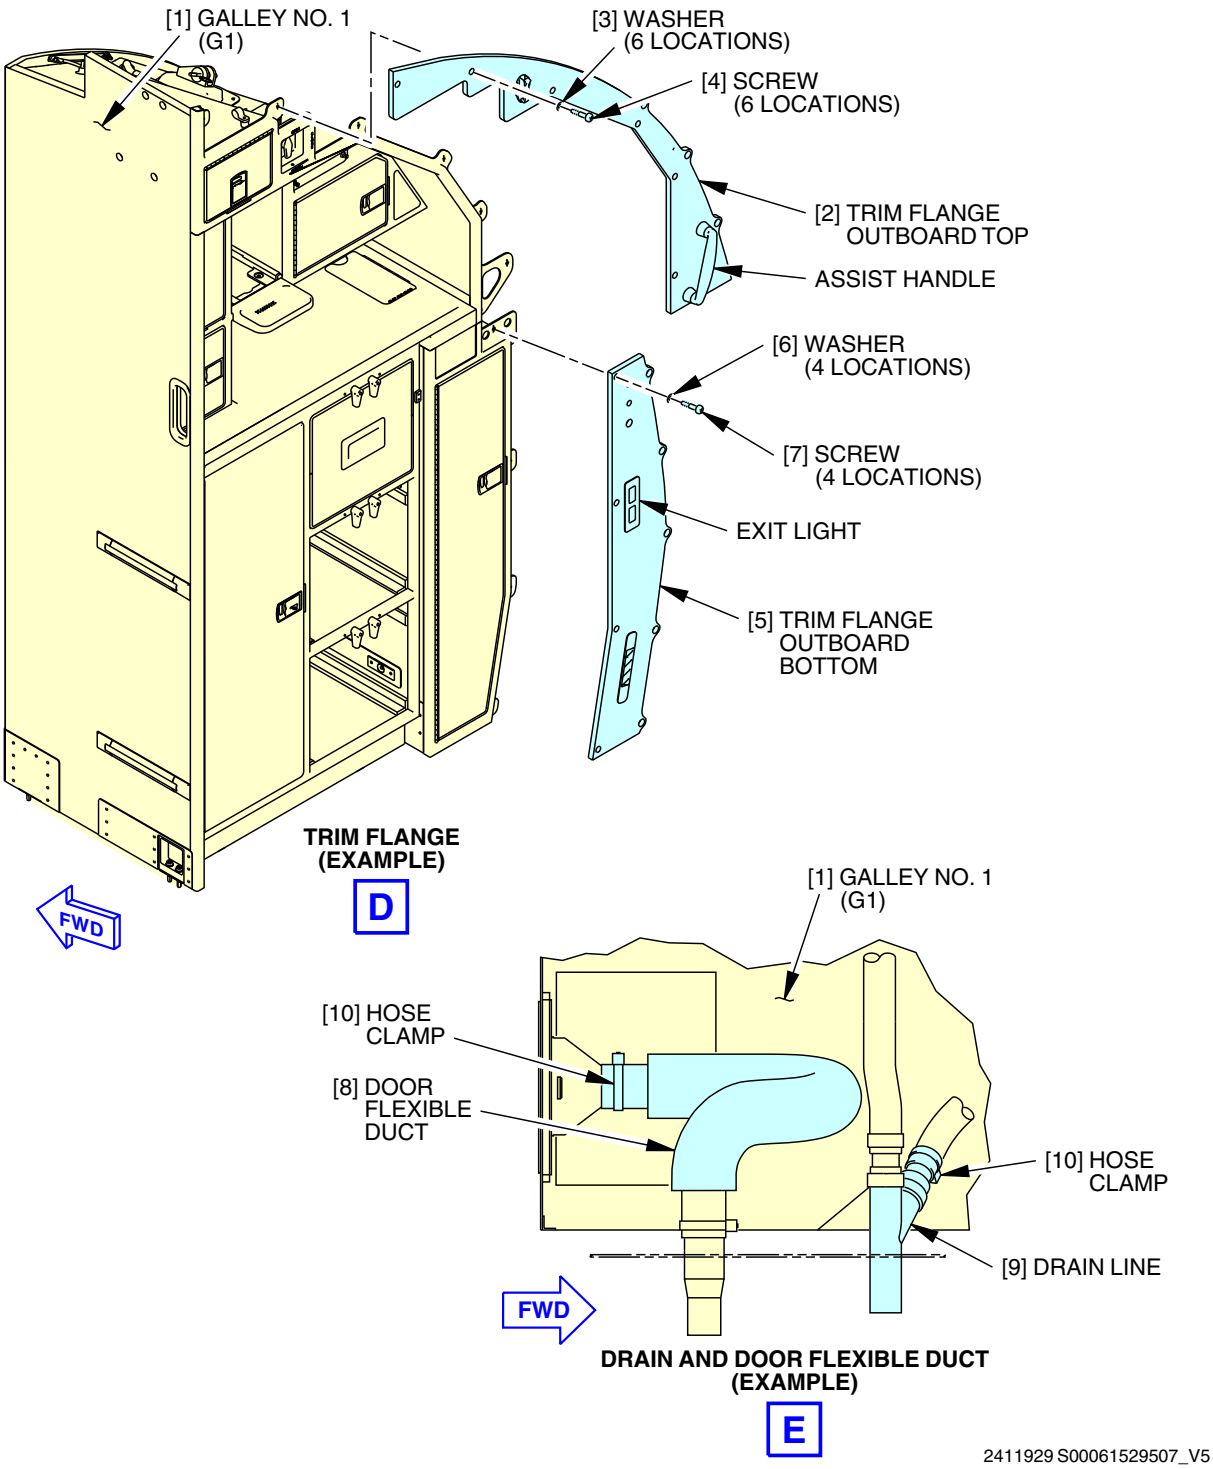


Galley No. 1 (G1) Installation
Figure 401/25-31-11-990-801 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

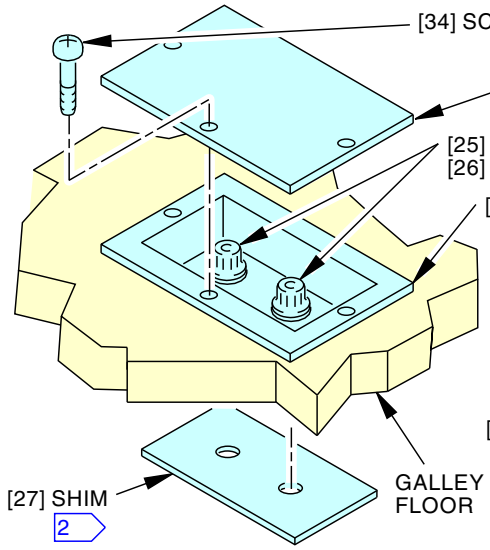


FLOOR FITTING (EXAMPLE)

F

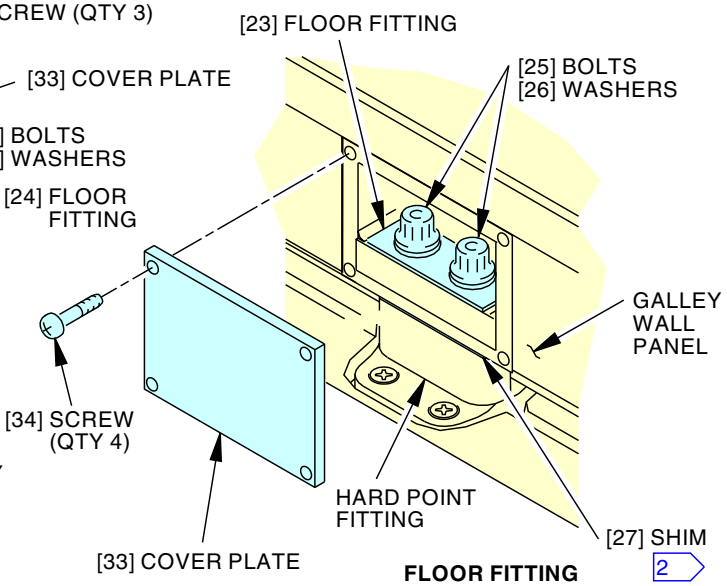

FLOOR FITTING (EXAMPLE)

G

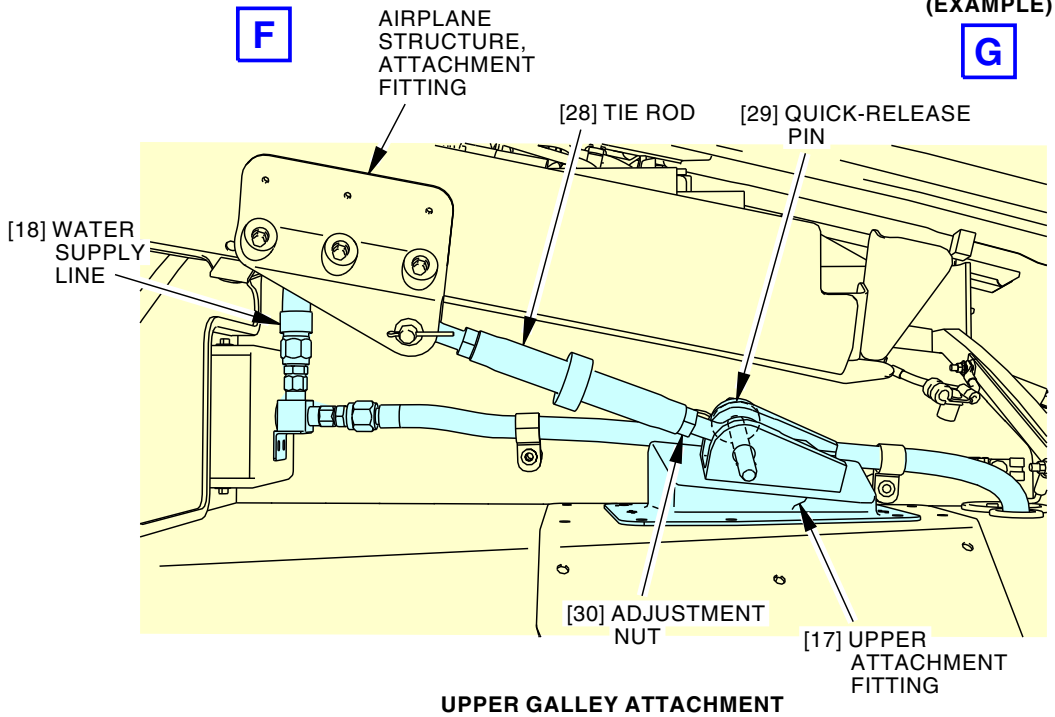

UPPER GALLEY ATTACHMENT FITTING AND TIE ROD (EXAMPLE)

H


NOTE:
SHIMS ARE INSTALLED BETWEEN GALLEY AND FLOOR.

2 INSTALL SHIMS AS NECESSARY.

2534399 S0000596162_V3

Galley No. 1 (G1) Installation
Figure 401/25-31-11-990-801 (Sheet 4 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

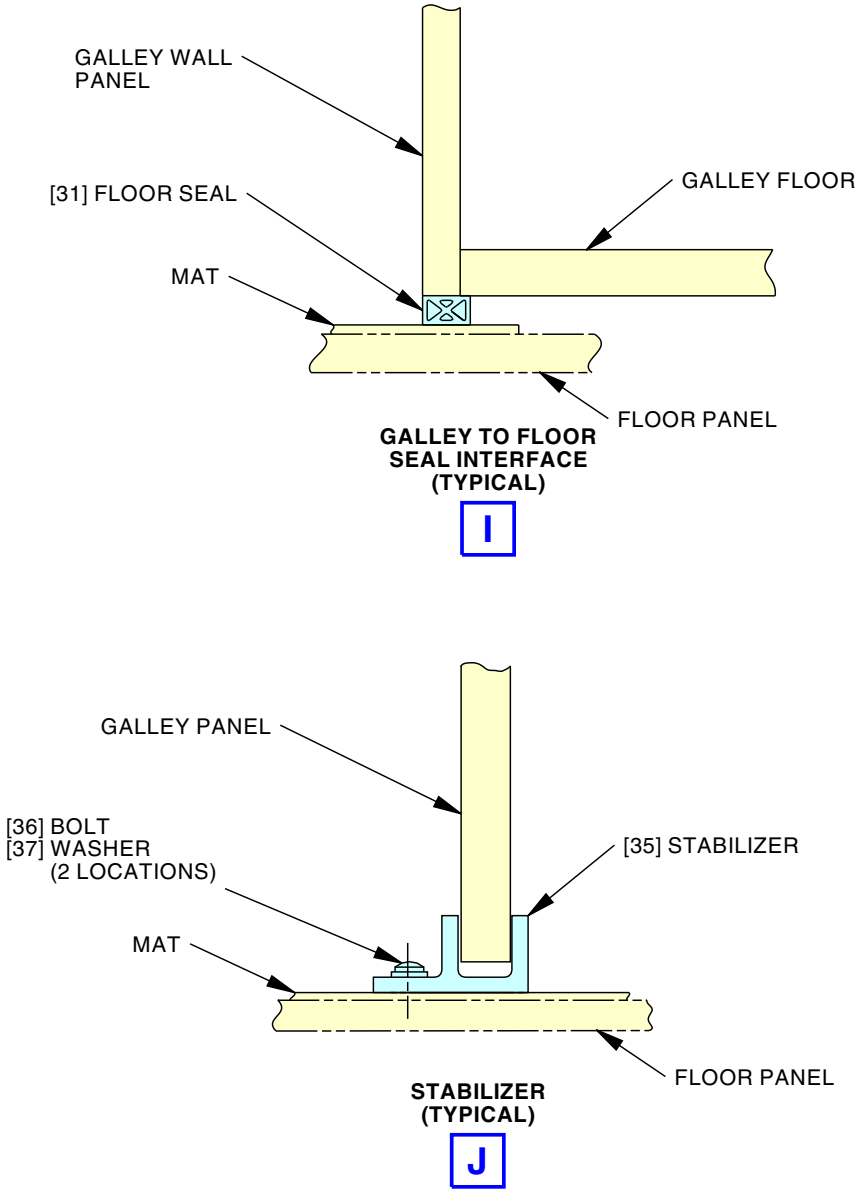

Galley No. 1 (G1) Installation
Figure 401/25-31-11-990-801 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-31-11-400-801

3. Galley No. 1 - Installation

(Figure 401)

A. General

(1) During installation procedures, portable galley cart, SPL-21406, may be used to lift, hold, and transport galley unit to correct locations or positions.

B. References

Reference	Title
25-21-34-400-801	Forward Galley Door Doorway Header Panel Installation (P/B 401)
25-21-35-420-801	Forward Galley Doorway Sidewall Lining Panel - Installation (P/B 401)
25-27-21-400-801	Entry and Service Area Floor Covering - Installation (P/B 401)
25-31-11-440-801	Galley No. 1 - Activation (P/B 201)
33-51-01-960-802	Exit Sign - Light Assembly Replacement (P/B 201)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-10-00-600-801	Potable Water System Disinfectant (P/B 201)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
38-42-00-800-802	Potable Water System - Activation (P/B 201)
51-22-00-390-806	Fillet Seal Application (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-21406	Portable Cart - Galley Assy Part #: C25005-54 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A00930	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 109
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
C00528	Compound - Corrosion Preventive, Petroleum Hot Application (Soft Film)	MIL-C-11796 Class III
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Galley No. 1	25-31-11-05A-045	PTF ALL
22	Tie strap	38-10-51-02-030	PTF ALL
27	Shim	25-31-11-05A-030	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

AMM Item	Description	AIPC Reference	AIPC Effectivity
31	Floor seal	25-31-11-05A-035	PTF ALL

F. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

G. Prepare for the Installation

SUBTASK 25-31-11-210-003

(1) Make sure that the floor seals and water barrier on the galley floor are not damaged.

(a) Do this task: Entry and Service Area Floor Covering - Installation, TASK 25-27-21-400-801.

SUBTASK 25-31-11-110-001

(2) Clean the galley mat with solvent, B00083.

(a) Repair the galley mat, if it is necessary.

H. Galley No. 1 Installation

SUBTASK 25-31-11-420-003

(1) Carefully move the galley unit inboard near the installed position.

NOTE: Do not to damage the galley mat when you install the galley unit.

SUBTASK 25-31-11-420-005

(2) Connect the two electrical connectors [15].

SUBTASK 25-31-11-420-006

(3) Put the wires through the panel for the exit light.

NOTE: Exit sign installed near the entry door.

SUBTASK 25-31-11-420-007

(4) Align the Galley No. 1 [1] to the correct, installed position.

SUBTASK 25-31-11-420-008

(5) Connect the water supply system (View C, Figure 401).

(a) Open the ceiling access door.

(b) Connect the water supply connection [32] at the top of the galley.

(c) Install the shroud [19] on the water supply connection [32] and secure with the five new tie straps [22].

SUBTASK 25-31-11-420-009

(6) Loosely install the bolts [25], washers [26], and shims [27] at the four floor hard points.

NOTE: This prevents the galley unit from movement when the floor seal is installed.

NOTE: Install the shims in the same locations as recorded when removed. The maximum is three shims per attachment fitting.

SUBTASK 25-31-11-420-025

(7) Install the new floor seal [31] below the cart compartment walls and the wall adjacent to the airplane door. Bond the floor seals with adhesive, A00027, or adhesive, A00930 (View I, Figure 401).

(a) If it is necessary, cut the seal on installation.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) In view areas, make sure that the seal is one continuous piece.

1) For corners, use a 90°arc (2 rad) bevel cut, if it is necessary.

a) Do not cut all the way through the seal.

(c) Fillet seal to the galley mat, floor fittings and the galley (TASK 51-22-00-390-806).

1) Fill ends, if it is necessary.

2) Apply enough sealant to produce squeeze out.

3) Clean to a smooth, continuous fillet seal.

(d) Do not install on the stabilizer wall panel.

SUBTASK 25-31-11-420-026

(8) Install the stabilizer [35] as necessary, as follows (View J):

(a) Align the stabilizer [35] with the galley panel and the holes in the mat.

(b) Apply RTV6708 adhesive, A50030, to the shank and threads on each bolt [36].

(c) Apply RTV6708 adhesive, A50030, to each washer [37].

(d) Install the bolts [36] and washers [37] to attach the stabilizer [35] to the floor panel.

1) Torque the bolts [36] to 22.5 ±2.5 in-lb (2.5 ±0.3 N·m).

(e) Fillet seal the stabilizer to the floor mat and the galley wall with adhesive, A00027, or adhesive, A00930 (TASK 51-22-00-390-806).

SUBTASK 25-31-11-420-010

(9) Remove the loosely installed bolts [25] and washers [26] at the four floor hard points.

SUBTASK 25-31-11-420-033

(10) Make sure that the shims [27] are in the correct position.

SUBTASK 25-31-11-390-002

WARNING USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(11) Apply preferred Cor-Ban 27L Compound, G50237 (but compound, C00528 may be used), to each bolt [25].

SUBTASK 25-31-11-390-003

(12) Apply preferred Cor-Ban 27L Compound, G50237 (but compound, C00528 may be used), to each washer [26].

SUBTASK 25-31-11-420-034

(13) Install the bolts [25] and washers [26] to attach the galley unit and the shims [27] to the four floor hard points.

(a) Torque the bolts [25] to 107.5 ±17.5 in-lb (12.1 ±2.0 N·m).

SUBTASK 25-31-11-420-018

(14) Install the two floor fitting cover plates [33] on the floor fittings [24] (View F, Figure 401).

(a) Install the three screws [34] to attach the cover plate [33] to the floor fitting [24] (2 locations).

(b) Fillet seal the two cover plates [33] with adhesive, A00027, or adhesive, A00930 (TASK 51-22-00-390-806).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-11-420-011

(15) Install the two floor fitting cover plates [33] on the floor fittings [23] and (View G, Figure 401).

(a) Install the four screws [34] to attach the cover plates [33] to the floor fitting [23] (2 locations).

(b) Fillet seal the two cover plates [33] with adhesive, A00027, or adhesive, A00930 (TASK 51-22-00-390-806).

SUBTASK 25-31-11-820-001

(16) Connect the tie rod [28] to the upper attachment fitting [17] (View H, Figure 401).

(a) Connect the tie rod [28] to the upper attachment fitting [17].

(b) Turn the adjustment nut [30] to get the correct clearance between the jamnut and overhead support.

(c) After adjustment, make sure that the thread of the tie rod [28] blocks the inspection hole in the body of the tie rod.

(d) Tighten the jamnut to 65.0 in-lb (7.3 N·m).

(e) Install the quick-release pin [29].

SUBTASK 25-31-11-420-012

(17) Connect the galley water supply and water waste drain line.

(a) Get access to the drain line [9] line through the lower outboard access panel.

(b) Connect the galley water supply connection [32] to the water supply line [18].

(c) Connect the galley waste drain line [9] hose to the airplane drain fitting.

(d) Tighten the hose clamp [10] on the drain line.

SUBTASK 25-31-11-420-013

(18) Connect the door flexible duct [8].

(a) Get access to the door flexible duct [8] through the lower outboard access panel.

(b) Tighten the hose clamp [10] on the door flexible duct [8].

SUBTASK 25-31-11-420-022

(19) Install the box assembly in the cart compartment (View A, Figure 401), if applicable:

(a) Carefully position the box assembly in the galley to prevent damage to the galley mat.

(b) Install the new floor seal [31] below the front box assembly wall. Bond the floor seal with adhesive, A00027, or adhesive, A00930 (View I, Figure 401).

1) Make sure that the seal is one continuous piece.

2) Fillet seal to the galley mat and the box assembly (TASK 51-22-00-390-806).

a) Fill ends, if it is necessary.

b) Apply enough sealant to produce squeeze out.

c) Clean to a smooth, continuous fillet seal.

(c) Install the four inner screws and bushings to the left wall of the box assembly.

(d) Install the four inner screws and bushings to the right wall of the box assembly.

SUBTASK 25-31-11-390-001

(20) In the galley wet area, apply a fillet seal to galley kickstrip retainer or kick plate with adhesive, A00027, or adhesive, A00930.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Put the Airplane Back to Its Usual Condition

SUBTASK 25-31-11-420-032

(1) Install the exit sign light assembly (TASK 33-51-01-960-802).

SUBTASK 25-31-11-420-021

(2) Install the light assembly for the floor proximity lights.

(a) Do this task: Floor Proximity Light - Light Assembly Replacement, TASK 33-51-14-960-802.

SUBTASK 25-31-11-410-001

(3) Install the forward galley doorway header panel, if removed.

(a) Do this task: Forward Galley Door Doorway Header Panel Installation, TASK 25-21-34-400-801.

SUBTASK 25-31-11-410-002

(4) Install the forward galley doorway sidewall lining panel, if removed.

(a) Do this task: Forward Galley Doorway Sidewall Lining Panel - Installation, TASK 25-21-35-420-801.

SUBTASK 25-31-11-420-023

(5) Install the waste container [14] in the waste compartment (View A, Figure 401).

SUBTASK 25-31-11-420-016

(6) Install the applicable inserts that were removed from the galley unit.

J. Installation Tests

SUBTASK 25-31-11-440-001

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Activate Galley No. 1 (TASK 25-31-11-440-801).

SUBTASK 25-31-11-710-006

(2) Galley unit AREA LIGHT operational test.

(a) On the electrical control panel [11], put the AREA LIGHT switch, in the OFF/DIM/BRT positions, to do an operational test.

1) OFF - Make sure that the area light is not on.

2) DIM - Make sure that the area light comes on dim.

3) BRT - Make sure that the area light comes on bright.

SUBTASK 25-31-11-710-007

(3) Galley unit WORK LIGHT operational test.

(a) On the electrical control panel [11], put the WORK LIGHT switch, in the OFF/DIM/BRT positions, to do an operational test.

1) OFF - Make sure that the area light is not on.

2) DIM - Make sure that the area light comes on dim.

3) BRT - Make sure that the area light comes on bright.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-11-710-001

(4) Make sure that the electrical components on Galley No. 1 [1] operate correctly.

(a) Make sure that the exit light comes on, if installed.

(b) Make sure that the floor proximity lights come on.

(c) Make sure that the No Smoking Fasten Seat Belt sign comes on, if installed.

SUBTASK 25-31-11-710-005

(5) Do the leak check of the galley water connections.

(a) Do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

(b) Open the water faucets in the galley and let the water flow for 2 minutes.

(c) Close the water faucets.

(d) Keep the pressure for at least 5 minutes.

(e) Do a visual check to make sure that there are no leaks at the water connections.

(f) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-31-11-420-027

(6) Install the trim flange outboard bottom [5] on the galley unit, if applicable (View D, Figure 401).

(a) Install the four screws [7] and washers [6] to attach the trim flange outboard bottom [5] to the galley unit.

SUBTASK 25-31-11-420-028

(7) Install the trim flange outboard top [2] on the galley unit, if applicable (View D, Figure 401).

(a) Install the six screws [4] and washers [3] to attach the trim flange outboard top [2] to the galley unit.

SUBTASK 25-31-11-670-001

(8) Clean the potable water system.

(a) Do this task: Potable Water System Disinfectant, TASK 38-10-00-600-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY NO. 2 - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Galley No. 2 - deactivation.

(2) Galley No. 2 - activation

TASK 25-31-21-040-801

2. Galley No. 2 - Deactivation

A. General

(1) This task will deactivate the Galley Power Systems.

B. References

Reference	Title
WDM 25-31-11	Wiring Diagram Manual

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Galley No. 2 - Deactivation

SUBTASK 25-31-21-010-004

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

NOTE: Please refer to WDM 25-31-11 to determine which CB to pull for a specific galley.

SUBTASK 25-31-21-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING	DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open this circuit breaker and install safety tag:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
F	7	C00912	GALLEY BUS A

F. Galley Power Systems - Tryout

NOTE: This tryout is to make sure that the galley power systems are in a zero energy state.

SUBTASK 25-31-21-210-001

(1) Make sure that the Power On indicator light on the galley is off.

SUBTASK 25-31-21-420-001

(2) Turn the work light switch on the galley control panel to the BRT or DIM position.

(a) Make sure that the work light does not come on.

SUBTASK 25-31-21-020-001

(3) Turn the work light switch on the galley control panel to the OFF position.

SUBTASK 25-31-21-410-017

(4) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

——— END OF TASK ———

TASK 25-31-21-440-801

3. Galley No. 2 - Activation

A. General

(1) This task will activate the Galley Power Systems.

B. References

Reference	Title
WDM 25-31-11	Wiring Diagram Manual

C. Location Zones

Zone	Area
118	Electrical and Electronics Compartment - Right
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Galley No. 2 - Activation

SUBTASK 25-31-21-010-005

(1) To get access to the P92 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

NOTE: Please refer to WDM 25-31-11 to determine which CB to pull for a specific galley.

SUBTASK 25-31-21-420-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tag and close this circuit breaker:

Power Distribution Panel Number 2, P92

Row	Col	Number	Name
F	7	C00912	GALLEY BUS A

SUBTASK 25-31-21-410-014

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY NO. 2 - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Galley No. 2 - Removal

(2) Galley No. 2 - Installation.

TASK 25-31-21-000-801

2. Galley No. 2 - Removal

(Figure 401)

A. General

(1) Be careful during the removal of the galley to prevent damage to the galley mat. The galley mat is a cover of the floor panels in the galley area.

B. References

Reference	Title
25-21-34-000-801	Forward Galley Door Doorway Header Panel Removal (P/B 401)
25-21-35-020-801	Forward Galley Doorway Sidewall Lining Panel - Removal (P/B 401)
25-31-21-040-801	Galley No. 2 - Deactivation (P/B 201)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)

C. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

D. Prepare for Removal

SUBTASK 25-31-21-860-002

WARNING DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Deactivate Galley No. 2 (TASK 25-31-21-040-801).

SUBTASK 25-31-21-020-015

(2) If necessary, remove the equipment or furnishings that are attached to the galley [1].

SUBTASK 25-31-21-020-003

(3) Do this task: Forward Galley Door Doorway Header Panel Removal, TASK 25-21-34-000-801.

SUBTASK 25-31-21-020-004

(4) Do this task: Forward Galley Doorway Sidewall Lining Panel - Removal, TASK 25-21-35-020-801.

SUBTASK 25-31-21-020-005

(5) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-21-680-001

(6) Drain the water from the applicable galley equipment.

SUBTASK 25-31-21-860-003

(7) Prepare the galley [1] for the removal procedure.

(a) Make sure that power is removed from the galley equipment.

(b) Remove the equipment from the galley [1] before doing the procedure.

(c) Remove the necessary access panels from the galley [1] to complete the task.

(d) Remove the necessary trim panels from the galley [1] to complete the task.

SUBTASK 25-31-21-010-001

(8) Remove the drain access cover [25].

SUBTASK 25-31-21-020-006

(9) Through the lower access cover [25], loosen the clamp [26], then disconnect the drain line [24].

SUBTASK 25-31-21-010-002

(10) Access the tie rod area, as follows:

(a) Open the applicable galley panel.

(b) Remove the bolts [4], washers [3], and access cover [2].

SUBTASK 25-31-21-020-016

(11) Disconnect the water connection [6] above the top of the galley [1].

SUBTASK 25-31-21-160-001

(12) Remove all unwanted sealant to get access to the floor fitting fasteners, the stabilizer (if necessary) and the floor seals.

(a) Carefully remove the sealant to prevent damage to the galley mat.

E. Galley No. 2 Removal

SUBTASK 25-31-21-020-007

(1) Disconnect the tie rod [7].

(a) Remove the quick-release pin [10] that attaches the tie rod [7] to the lug fitting [8].

SUBTASK 25-31-21-020-008

(2) To remove the galley floor hard points, do these steps:

(a) Remove any hard point cover plates to access the four bolts [14].

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE CORBAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(b) Remove the grease from the attachment fitting to get access to the fasteners, if necessary.

(c) If necessary, remove the forward caster guide from the inboard hard point(s).

(d) Remove the bolts [14], washers [15], and shims [16] at the four hard point locations.

1) Record the quantity of shims for a given location when you remove the shims.

2) Keep the shims for the galley installation.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-21-020-009

(3) Remove the stabilizer [23], as follows:

(a) Remove the bolts [17], washers [18], and nuts [19] at the bearing block [20].

(b) Remove the bearing block [20].

(c) Remove the bolts [21] and washers [22] at the stabilizer [23].

(d) Remove the stabilizer [23].

SUBTASK 25-31-21-020-010

(4) If necessary, move the galley [1] out slightly for easier access to the electrical connectors [11] and ground stud.

SUBTASK 25-31-21-020-011

(5) Disconnect the electrical power at the connections above the galley.

(a) Disconnect the electrical connectors [11].

SUBTASK 25-31-21-020-012

(6) Remove the nut [13], washer [12], and ground strap [9] from the ground stud at the top of the galley [1].

SUBTASK 25-31-21-020-032


(7) If installed, remove the floor seal between the galley wall panel, the galley mat and the floor fittings.

SUBTASK 25-31-21-020-013

(8) Carefully remove the galley [1] to prevent damage to the galley mat.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

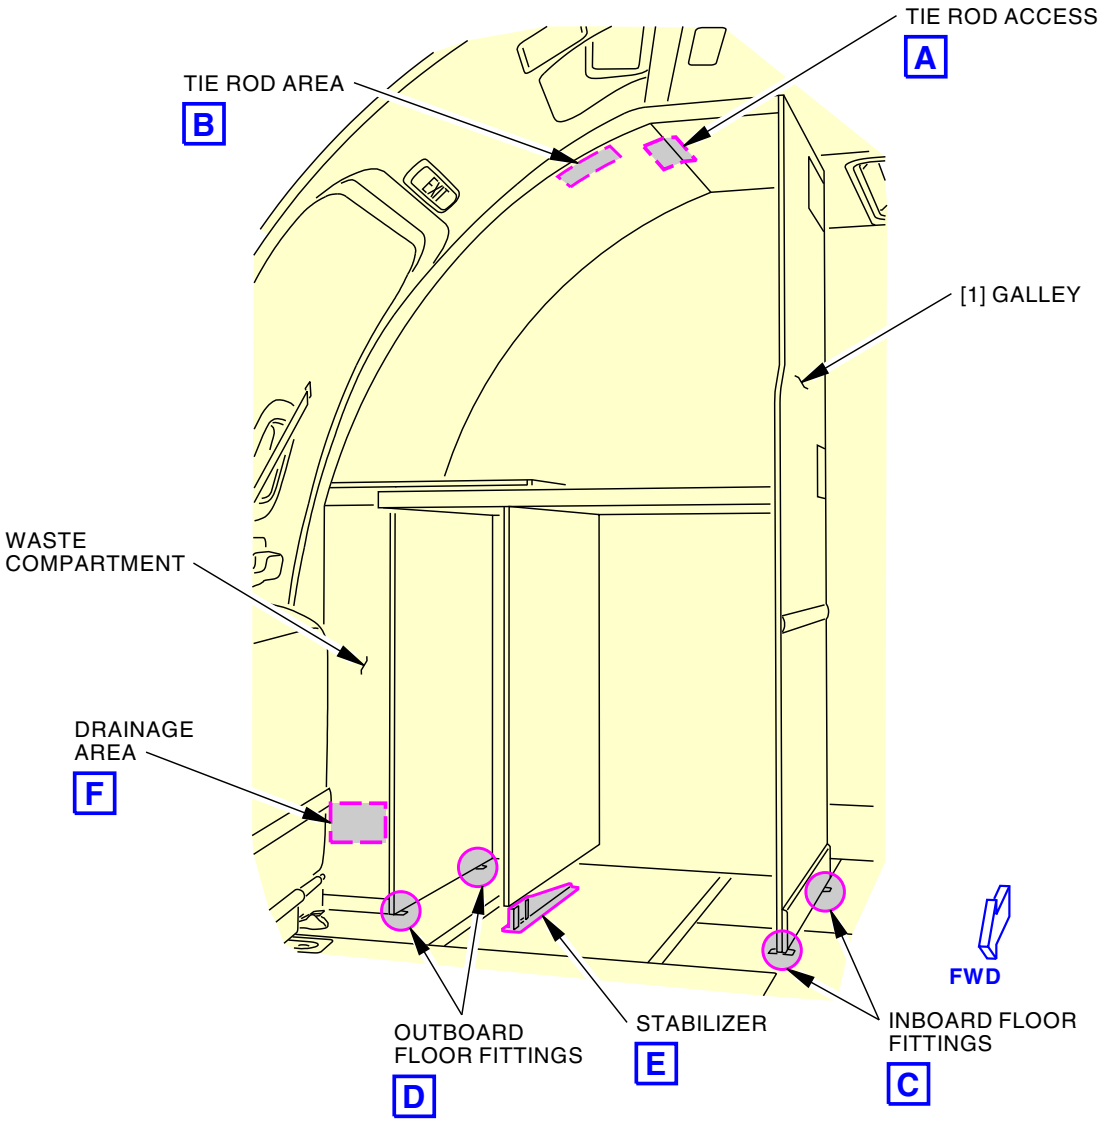


GALLEY NO. 2
(EXAMPLE)

2546957 S0000605734_V2

Galley No. 2 Installation
Figure 401/25-31-21-990-801 (Sheet 1 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

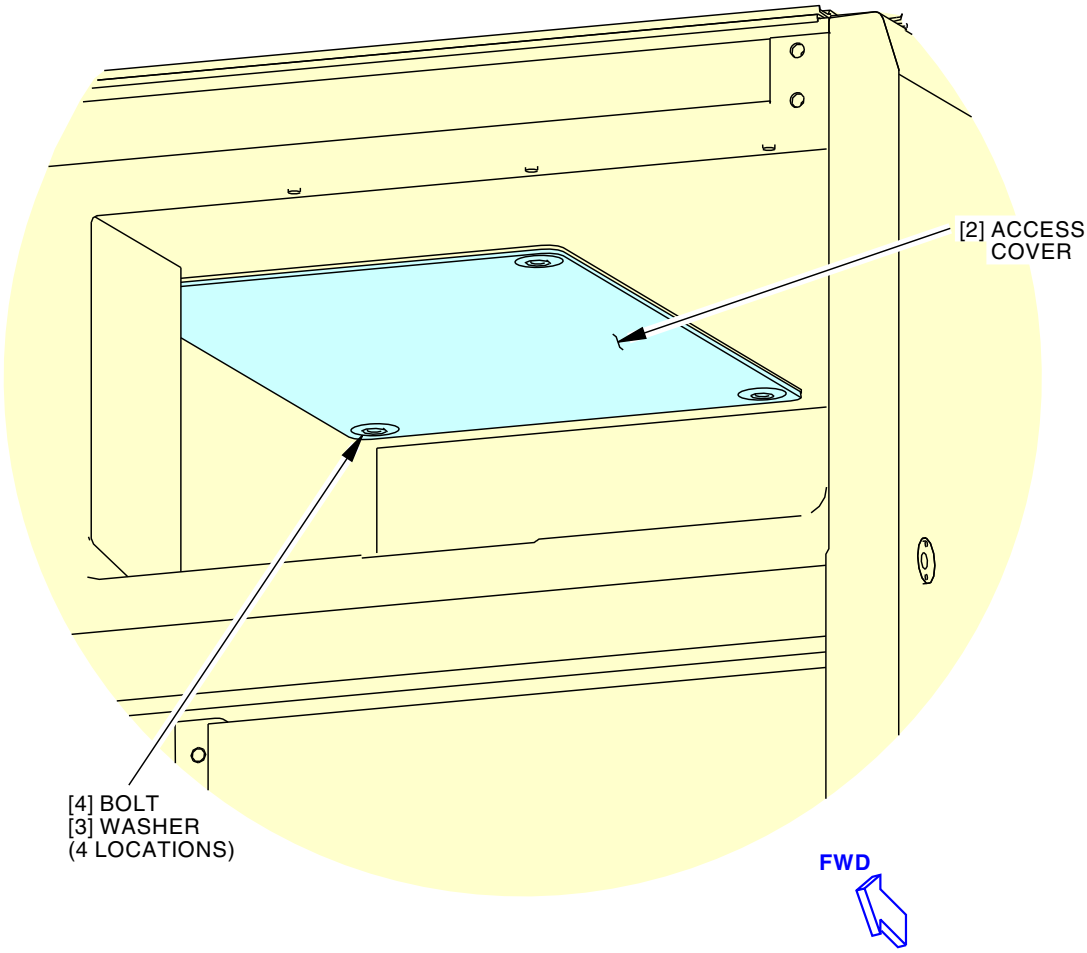


TIE ROD ACCESS
(FRONT PANEL IS NOT SHOWN)
(EXAMPLE)

A

2791441 S0000634759_V1


Galley No. 2 Installation
Figure 401/25-31-21-990-801 (Sheet 2 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

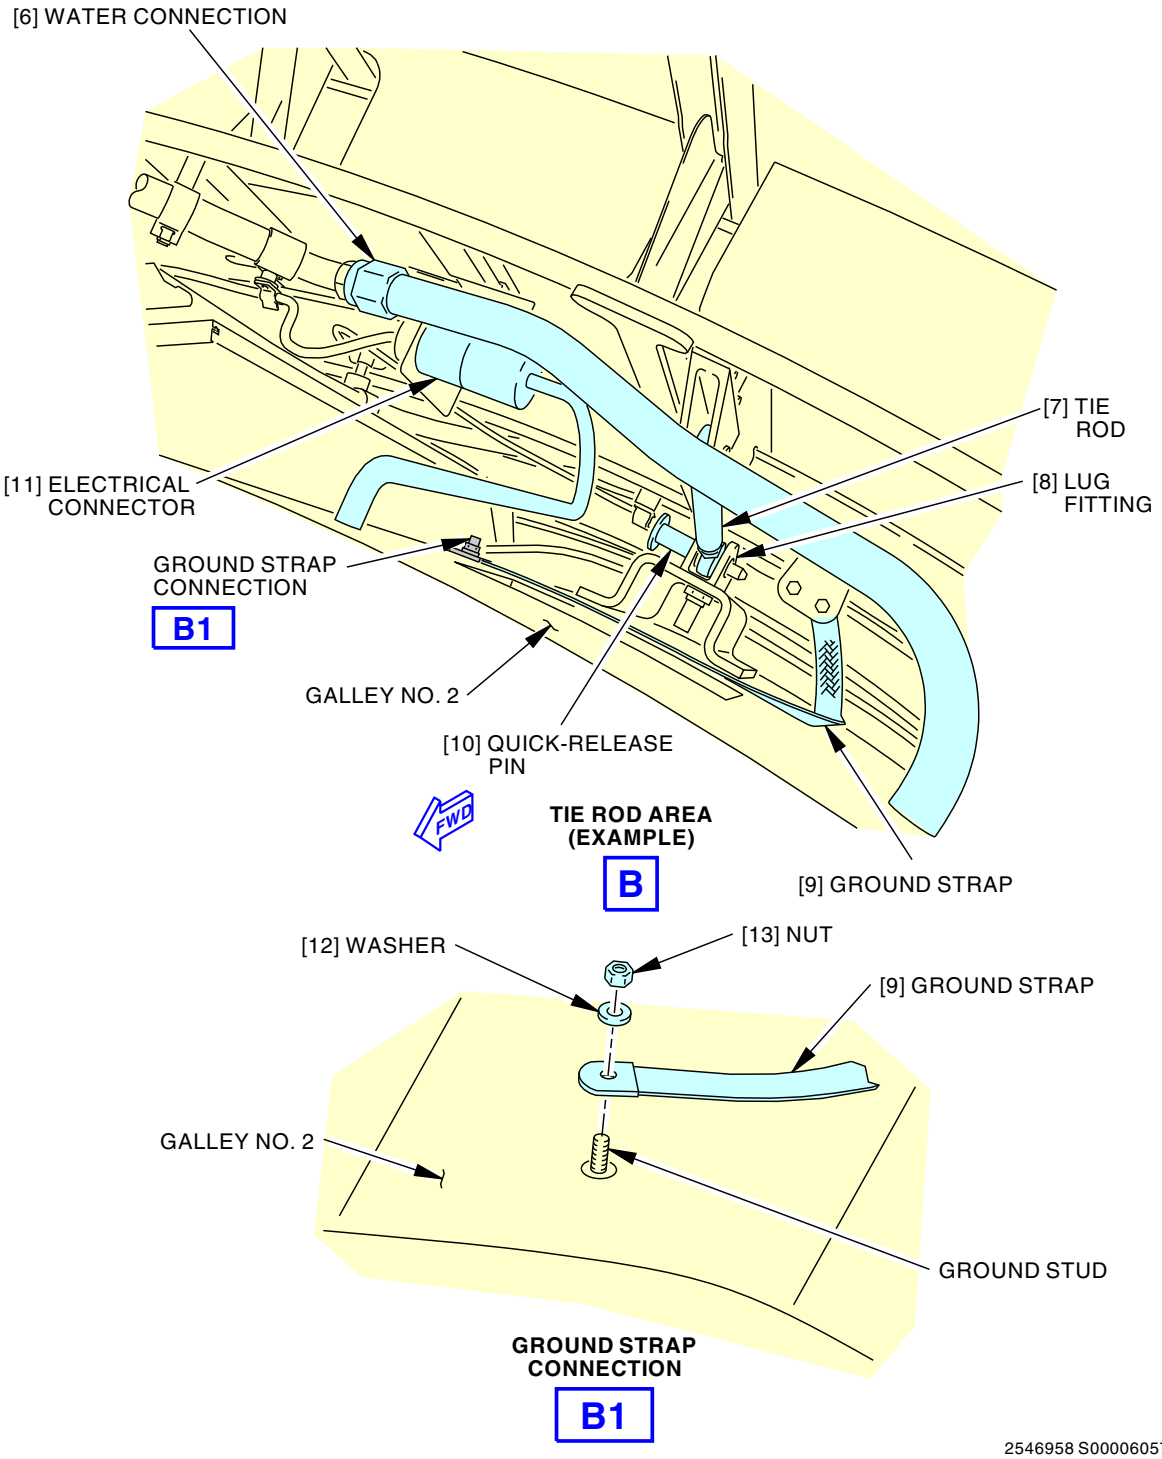


Galley No. 2 Installation
Figure 401/25-31-21-990-801 (Sheet 3 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

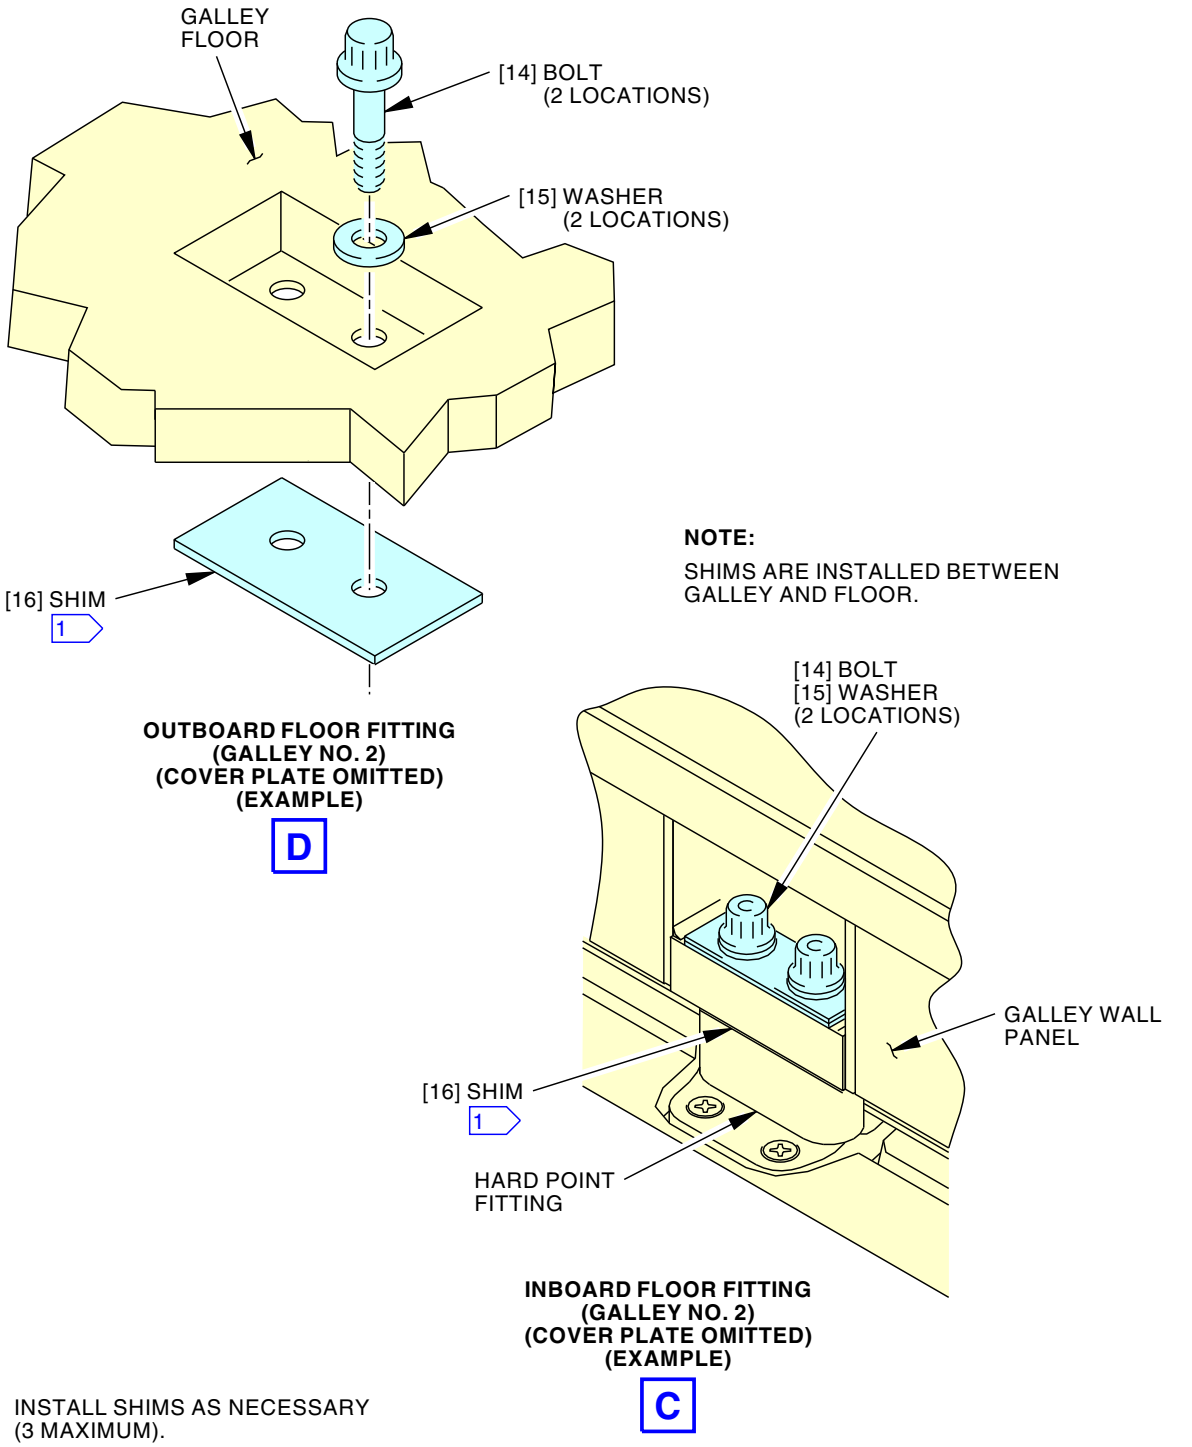

Galley No. 2 Installation
Figure 401/25-31-21-990-801 (Sheet 4 of 6)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

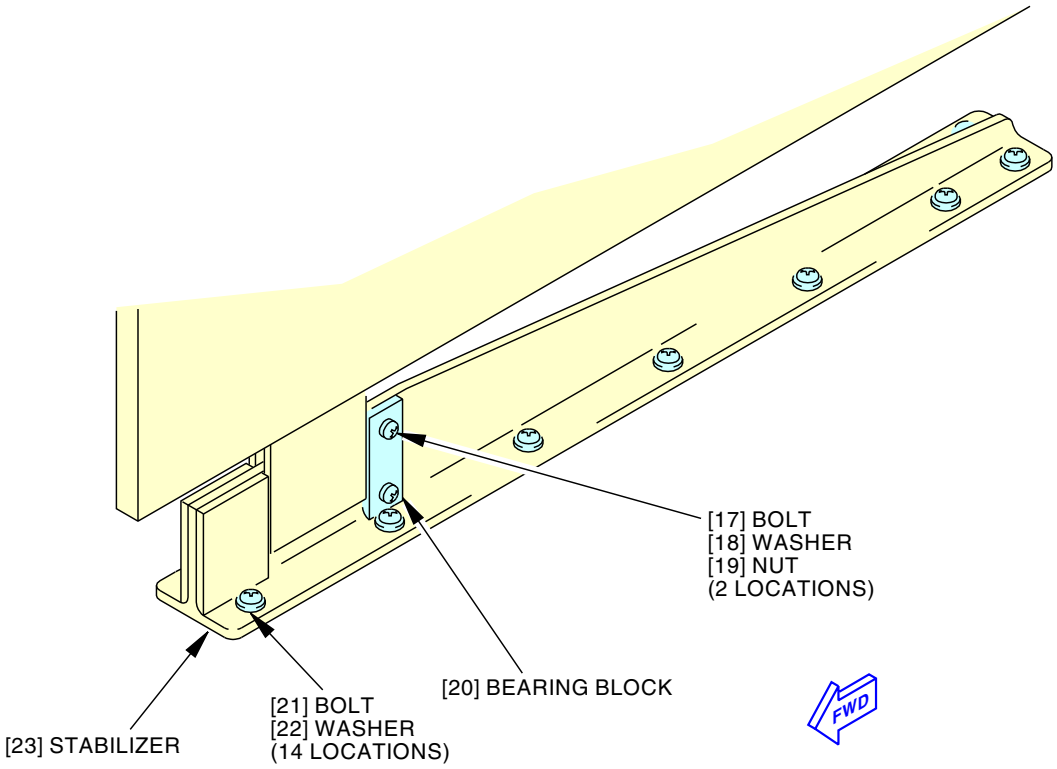

2547152 S0000605832_V2

Galley No. 2 Installation
Figure 401/25-31-21-990-801 (Sheet 5 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

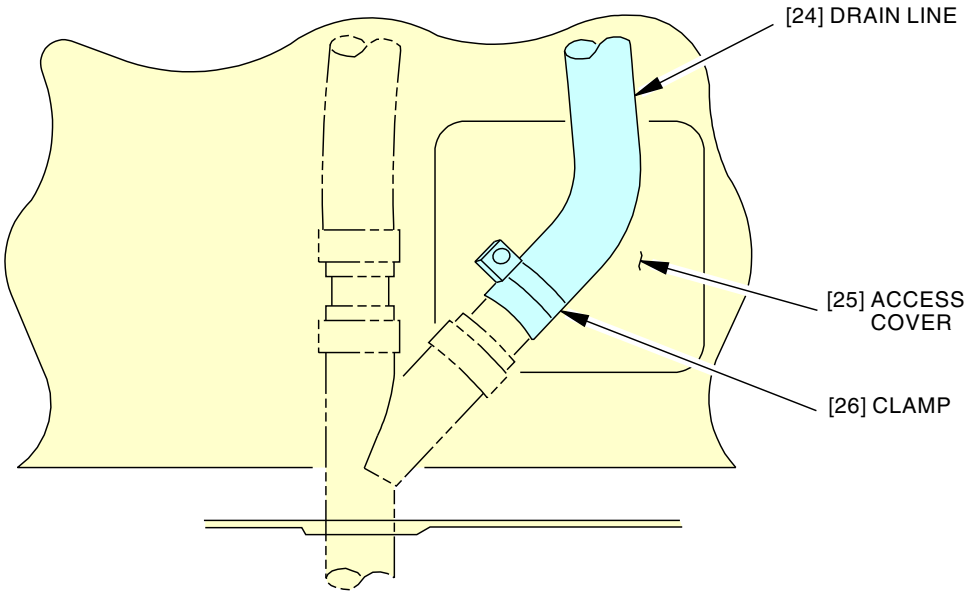

F

2791434 S0000634731_V1

Galley No. 2 Installation
Figure 401/25-31-21-990-801 (Sheet 6 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-31-21-400-801

3. Galley No. 2 - Installation

(Figure 401)

A. General

(1) Be careful during the installation of the galley to prevent damage to the galley mat. The galley mat is a cover on the floor panels in the galley area.

B. References

Reference	Title
25-21-34-400-801	Forward Galley Door Doorway Header Panel Installation (P/B 401)
25-21-35-420-801	Forward Galley Doorway Sidewall Lining Panel - Installation (P/B 401)
25-21-71-400-801	Lowered Ceiling Installation (P/B 401)
25-27-21-400-801	Entry and Service Area Floor Covering - Installation (P/B 401)
25-31-21-440-801	Galley No. 2 - Activation (P/B 201)
38-10-00-600-801	Potable Water System Disinfectant (P/B 201)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
38-42-00-800-802	Potable Water System - Activation (P/B 201)
51-22-00-390-806	Fillet Seal Application (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-614	Bonding Meters - Non-Intrinsically Safe (For use in outside Class I, Divisions I & II non-hazardous locations. For hazardous locations, use COM-1550). Part #: 247000 Supplier: 00426 Part #: 620LK Supplier: 1CRL2 Part #: BLR-0003-XX Supplier: KC432 Part #: BT51 Supplier: 00426 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659 Opt Part #: 247001 Supplier: 00426

D. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A00930	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 109
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
C00528	Compound - Corrosion Preventive, Petroleum Hot Application (Soft Film)	MIL-C-11796 Class III

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38

E. Location Zones

Zone	Area
222	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Right

F. Prepare for the Installation

SUBTASK 25-31-21-210-002

(1) Do a check of the water barrier on the galley floor for damage.

(a) If it is necessary, do this task: Entry and Service Area Floor Covering - Installation, TASK 25-27-21-400-801.

SUBTASK 25-31-21-110-001

(2) Clean the galley mat on the floor in the galley area with solvent, B00083.

SUBTASK 25-31-21-300-001

(3) Repair the galley mat, if it is necessary.

G. Galley Installation

SUBTASK 25-31-21-420-004

(1) Move the galley [1] inboard.

SUBTASK 25-31-21-420-005

(2) Install the ground strap [9], washer [12], and nut [13] to the ground stud.

SUBTASK 25-31-21-420-018

(3) Tighten the nut [13] to 67.5 ±2.5 in-lb (7.6 ±0.3 N·m).

SUBTASK 25-31-21-760-001

(4) Measure the electrical bonding resistance between the ground stud on the galley [1] and the airplane ground stud with a non-intrinsically safe bonding meter, COM-614 (SWPM 20-20-10).

(a) Make sure that the electrical bonding resistance is of 0.00250 Ohms (2.50 milliohms) or less.

SUBTASK 25-31-21-420-006

(5) Connect the electrical connectors [11] in the ceiling above the galley [1].

SUBTASK 25-31-21-420-007

(6) Adjust the galley [1], if it is necessary.

SUBTASK 25-31-21-420-008

(7) Lift and pull the galley [1] into the correct position.

SUBTASK 25-31-21-420-009

(8) If it is necessary, loosely install the bolts [14], washers [15], and shims [16] at the four hard points.

NOTE: This will prevent galley [1] movement while the floor seals are installed.

Use the shim quantity recorded during the removal for a given location.

SUBTASK 25-31-21-390-005

(9) Install the floor seal below the cart compartment walls and the wall adjacent to the airplane door.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Bond the floor seals with adhesive, A00027, or adhesive, A00930.

(b) If it is necessary, cut the seal on installation.

(c) In view areas, make sure that the seal is one continuous piece.

1) For corners, use a 90°arc (2 rad) bevel cut, if it is necessary.

a) Do not cut all the way through the seal.

(d) Fillet seal to the galley mat, floor fittings and the galley (TASK 51-22-00-390-806).

1) Fill ends, if it is necessary.

2) Apply enough sealant to produce squeeze out.

3) Clean to a smooth, continuous fillet seal.

(e) Do not install on the stabilizer wall panel.

SUBTASK 25-31-21-420-011



WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(10) Install the bolts [14] to the floor fittings, as follows:

(a) Make sure that the shims [16] are in the correct position.

(b) Apply preferred Cor-Ban 27L Compound, G50237 (but compound, C00528 may be used), to the shank and threads on each bolt [14].

(c) Apply preferred Cor-Ban 27L Compound, G50237 (but compound, C00528 may be used), to each washer [15].

(d) Install the two bolts [14] and washers [15] to the galley [1], shims [16] and the hard point fitting (4 locations).

NOTE: The shim [16] installation can not be more than three shims [16] for each floor fitting.

(e) Tighten the bolts [14] to 107.5 ±17.5 in-lb (12.1 ±2.0 N·m).

SUBTASK 25-31-21-410-015

(11) Install the hard point cover plates.

SUBTASK 25-31-21-420-013

(12) Install the stabilizer [23], as follows:

(a) Put the stabilizer [23] below the galley [1].

(b) Apply RTV6708 adhesive, A50030, to the shank and threads on each bolt [21].

(c) Apply RTV6708 adhesive, A50030, to each washer [22].

(d) Install the bolts [21] and washers [22] to the stabilizer [23].

1) Torque the bolts [21] to 22.5 ±2.5 in-lb (2.5 ±0.3 N·m).

(e) Install the bearing block [20] on the stabilizer [23].

(f) Install the bolts [17], washers [18], and nuts [19] at the bearing block [20].

NOTE: Washers can be installed between the bearing block and floor stabilizer as necessary.

(g) Fillet seal the stabilizer with adhesive, A00930.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-21-420-014

(13) Attach the tie rod [7] to the lug fitting [8] on the galley [1].

(a) If it is necessary, adjust the tie rod [7] to the correct length.

1) Adjust only one end of the assembly without the lockwasher and the lockwire.

2) Make sure that the thread of the tie rod block the inspection hole in the body of the tie rod.

3) Tighten the jamnut to 65.0 in-lb (7.3 N·m).

(b) Install the quick-release pin [10] at the galley end of the tie rod [7].

NOTE: Install the end of the tie rod [7] with the lockwasher and the lockwire at the fitting on the fuselage.

SUBTASK 25-31-21-420-020

(14) Connect the water connection at the top of the galley [1].

SUBTASK 25-31-21-420-015

(15) Through the lower outboard access panel, connect the drain line [24] and tighten the clamp [26].

SUBTASK 25-31-21-420-021

(16) Connect the ducts and vents.

SUBTASK 25-31-21-410-002

(17) If it is necessary, install the forward lowered ceiling, do this task: Lowered Ceiling Installation, TASK 25-21-71-400-801.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 25-31-21-410-003

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Activate Galley No. 2 (TASK 25-31-21-440-801).

SUBTASK 25-31-21-420-017

(2) If it is necessary, install the equipment or furnishings that are attached to the galley [1].

SUBTASK 25-31-21-420-016

(3) Install the carts and all of the other equipment in the galley [1].

SUBTASK 25-31-21-710-001

(4) Make sure that the electrical components in the galley [1] operate correctly.

SUBTASK 25-31-21-710-002

(5) If an exit light is installed on the galley [1], make sure that it comes on.

SUBTASK 25-31-21-710-003

(6) If a floor proximity light is installed on the galley [1], make sure that it comes on.

SUBTASK 25-31-21-790-001

(7) If applicable, do the leak check of the galley water connections.

(a) Do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Open the water faucets in the galley and let the water flow for 2 minutes.

(c) Close the water faucets.

(d) Keep the pressure for at least 5 minutes.

(e) Do a visual check to make sure that there are no leaks at the water connections.

(f) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-31-21-410-016

(8) Install the access covers and seal with adhesive, A00027, or adhesive, A00930.

SUBTASK 25-31-21-420-042

(9) Install the applicable trim and access panels.

SUBTASK 25-31-21-110-002

(10) Use disinfectant to clean the potable water system (TASK 38-10-00-600-801).

SUBTASK 25-31-21-710-004

(11) If a No Smoking/Fasten Seat Belt sign is installed on the galley [1], make sure that it comes on.

SUBTASK 25-31-21-410-004

(12) Do this task: Forward Galley Door Doorway Header Panel Installation, TASK 25-21-34-400-801.

SUBTASK 25-31-21-410-005

(13) Do this task: Forward Galley Doorway Sidewall Lining Panel - Installation, TASK 25-21-35-420-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1. General

A. This procedure has these two tasks:

(1) Galley No. 4 - Deactivation

(2) Galley No. 4 - Activation

TASK 25-31-41-040-801

2. Galley No. 4 - Deactivation

A. General

(1) This task will deactivate the galley power systems.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Deactivate Galley No. 4

SUBTASK 25-31-41-010-011

(1) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-31-41-440-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
F	7	C00913	GALLEY BUS C
F	8	C00915	GALLEY BUS D

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Galley Power Systems - Tryout

NOTE: This tryout is to make sure that the galley power systems are in a zero energy state.

SUBTASK 25-31-41-210-001

(1) Make sure that the GALLEY POWER indicator light on the electrical control panel on the galley unit is off.

SUBTASK 25-31-41-420-001

(2) Put the WORK LIGHT BRT/OFF/DIM switch on the galley electrical control panel to BRT or DIM position to make sure the light does not come on.

SUBTASK 25-31-41-020-001

(3) Put the WORK LIGHT BRT/OFF/DIM switch on the galley electrical control panel to the OFF position.

SUBTASK 25-31-41-410-009

(4) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

——— END OF TASK ———

TASK 25-31-41-440-801

3. Galley No. 4 - Activation

A. General

(1) This task will activate the galley power systems.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Activate Galley No. 4

SUBTASK 25-31-41-010-012

(1) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-31-41-420-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
F	7	C00913	GALLEY BUS C
F	8	C00915	GALLEY BUS D

SUBTASK 25-31-41-410-008

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY G4 - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Galley G4 Removal

(2) Galley G4 Installation

B. The No. 4 galley unit is bolted to the airplane floor with floor-mounted fittings that are sealed to prevent penetration of moisture. Tie rods secure the upper attachment of the galley unit to the airplane structure. Electrical wiring and connectors supply electricity to operate the equipment and lighting in the work area. Water is supplied by the airplane potable water system. The galley sink is connected to the airplane drainage system.

TASK 25-31-41-000-801

2. Galley G4 Removal

(Figure 401, Figure 402)

A. General

(1) This procedure does not remove the Galley G4 unit from the airplane in two sections. The procedure moves the galley unit from the installed position to do maintenance. To remove the galley unit from the airplane, disconnect the top section of the galley from the bottom section. Remove or install the galley unit from the airplane one section at a time.

(2) During removal procedures, portable galley cart, SPL-21406, may be used to lift, hold, and transport galley unit [22] to correct locations or positions.

B. References

Reference	Title
12-14-00-600-801	Potable Water System - Drain (P/B 301)
25-21-24-000-801	Aft Door Doorway Header Panel Removal (P/B 401)
25-21-25-020-801	Aft Entry and Service Doorways Sidewall Lining Panel - Removal (P/B 401)
25-21-71-000-801	Lowered Ceiling Removal (P/B 401)
25-25-12-000-801	Cabin Attendant Seat Removal (P/B 401)
25-31-41-040-801	Galley No. 4 - Deactivation (P/B 201)
25-40-14-000-801	Lavatory D Removal (P/B 401)
25-40-15-000-801	Lavatory E Removal (P/B 401)
25-66-02-000-801	Floor-Mounted Escape Slide Bracket Removal (P/B 201)
33-25-00-960-801	Information Sign - Light Assembly Replacement for a Passenger Service Unit (PSU) Sign (P/B 201)
33-51-01-960-802	Exit Sign - Light Assembly Replacement (P/B 201)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Reference	Description
SPL-21406	Portable Cart - Galley Assy Part #: C25005-54 Supplier: 81205

D. Location Zones

Zone	Area
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

E. Prepare for the Removal

SUBTASK 25-31-41-040-001

WARNING MAKE SURE THAT YOU DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Deactivate Galley No. 4 (TASK 25-31-41-040-801).

SUBTASK 25-31-41-010-015

(2) If it is necessary, for the aft entry and service doors, do this task: Floor-Mounted Escape Slide Bracket Removal, TASK 25-66-02-000-801.

SUBTASK 25-31-41-010-001

(3) Remove the lowered ceiling panels (TASK 25-21-71-000-801).

SUBTASK 25-31-41-010-003

(4) Remove the aft entry and service doorway sidewall lining panels (TASK 25-21-25-020-801).

SUBTASK 25-31-41-010-002

(5) Remove the aft door doorway header panel (TASK 25-21-24-000-801).

SUBTASK 25-31-41-020-025

(6) Remove the applicable cabin attendant seats (TASK 25-25-12-000-801).

SUBTASK 25-31-41-010-004

(7) Remove the lavatory (TASK 25-40-14-000-801).

SUBTASK 25-31-41-010-005

(8) If necessary, remove the lavatory (TASK 25-40-15-000-801).

SUBTASK 25-31-41-010-006

(9) Do one of the steps that follow:

(a) Cover the light assembly for the floor proximity lights.

(b) Remove the light assembly for the floor proximity lights (TASK 33-51-14-960-802).

SUBTASK 25-31-41-020-015

(10) Disconnect the potable water system (TASK 38-42-00-800-801).

SUBTASK 25-31-41-680-001

(11) Drain the water supply system (TASK 12-14-00-600-801).

(a) Put the water shutoff valve in the open position.

(b) Remove the coffee maker.

(c) Push the valve seat on the end of the quick-disconnect couplings for the coffee maker rail.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Keep the valve seat open until you drain all the water from the coupling.

(e) Make sure that you drain all the water from the galley equipment.

F. Galley No. 4 Removal

SUBTASK 25-31-41-020-004

(1) Remove the necessary access panels.

(a) Remove the screws and washers that attach the access panels to the galley unit [22].

NOTE: Some access panels do not have washers, only screws that attach the access panels to the galley.

SUBTASK 25-31-41-010-007

(2) Remove the following equipment to get access to the floor fittings:

(a) Remove the left box assembly for the cart compartment.

(b) Remove the right box assembly for the cart compartment.

(c) Remove the center box assembly for the cart compartment.

SUBTASK 25-31-41-020-020

(3) Remove all other equipment from the galley unit [22].

SUBTASK 25-31-41-160-001

(4) Remove the fillet seal from between the galley mat, floor seal, floor fittings, and galley unit [22].

(a) Carefully remove the sealant to prevent damage to the galley mat.

SUBTASK 25-31-41-160-002

(5) Remove the fillet seal from these areas:

(a) The floor fitting cover plates and screws.

(b) If necessary, between the stabilizers [21] and galley mat.

NOTE: It is not necessary to remove the stabilizers to remove the galley unit.

1) Carefully remove the sealant to prevent damage to the galley mat.

(c) Between the stabilizers [21] and wall panels (galley).

SUBTASK 25-31-41-020-005

(6) Do these steps to disconnect the galley water supply:

(a) Get access through the lower access panel on the galley unit [22].

(b) Remove the insulation from around the galley water connection [4], if necessary.

(c) Disconnect the water connection [4].

SUBTASK 25-31-41-020-024

(7) Do these steps to disconnect the drain line [6]:

(a) Get access through the lower access panel on the galley unit [22].

(b) Loosen the clamp [5].

(c) Disconnect the drain line [6] from the galley unit [22].

SUBTASK 25-31-41-020-007

(8) Do these steps to disconnect the door flexible duct [8]:

(a) Get access through the lower access panel on the galley unit [22].

(b) Loosen the clamp [7].

(c) Disconnect the door flexible duct [8] from the galley unit [22].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-41-020-008

(9) Do these steps to disconnect the tie rods [9]:

(a) Get access to the tie rods [9].

(b) Remove the quick disconnect release pin [10] to disconnect the tie rod [9] from the galley lug fitting [11].

SUBTASK 25-31-41-020-010

(10) Do these steps to disconnect the galley unit [22] from the hard point fittings:

(a) Remove the screws, washers, and cover plates from the floor fittings.

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE CORBAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(b) If necessary, remove the grease to get access to the fasteners.

(c) Remove the bolts [12], washers [13], and shims [14] at the hard point locations.

(d) Keep the fasteners.

1) Record the location and quantity of shims for the installation procedure.

SUBTASK 25-31-41-020-012

(11) Do these steps to remove the bearing block [18] from the stabilizer [21]:

(a) Remove the bolts [15], washers [16], and nuts [17] at the bearing block [18].

(b) Remove the bearing block [18].

(c) Lift the galley unit [22] from the stabilizers [21].

NOTE: It is not necessary to remove the stabilizers to remove the galley unit.

(d) If necessary, remove the stabilizers [21].

SUBTASK 25-31-41-020-021

(12) Do these steps to disconnect the electrical connectors [1] and ground straps [2]:

(a) Get access to the electrical connectors [1] on the top of the galley.

1) If necessary, move the galley unit [22] to get access to the electrical connectors [1] and ground studs [3].

(b) Disconnect the electrical connectors [1].

(c) Disconnect the ground straps [2] from the ground studs [3].

SUBTASK 25-31-41-020-022

(13) If necessary, do these steps:

(a) Remove the applicable exit signs (TASK 33-51-01-960-802).

(b) Remove the applicable information signs (TASK 33-25-00-960-801).

SUBTASK 25-31-41-020-026


(14) If necessary, remove the floor seal [29].

SUBTASK 25-31-41-020-014

(15) Carefully move the galley unit [22] to prevent damage to the galley mat.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

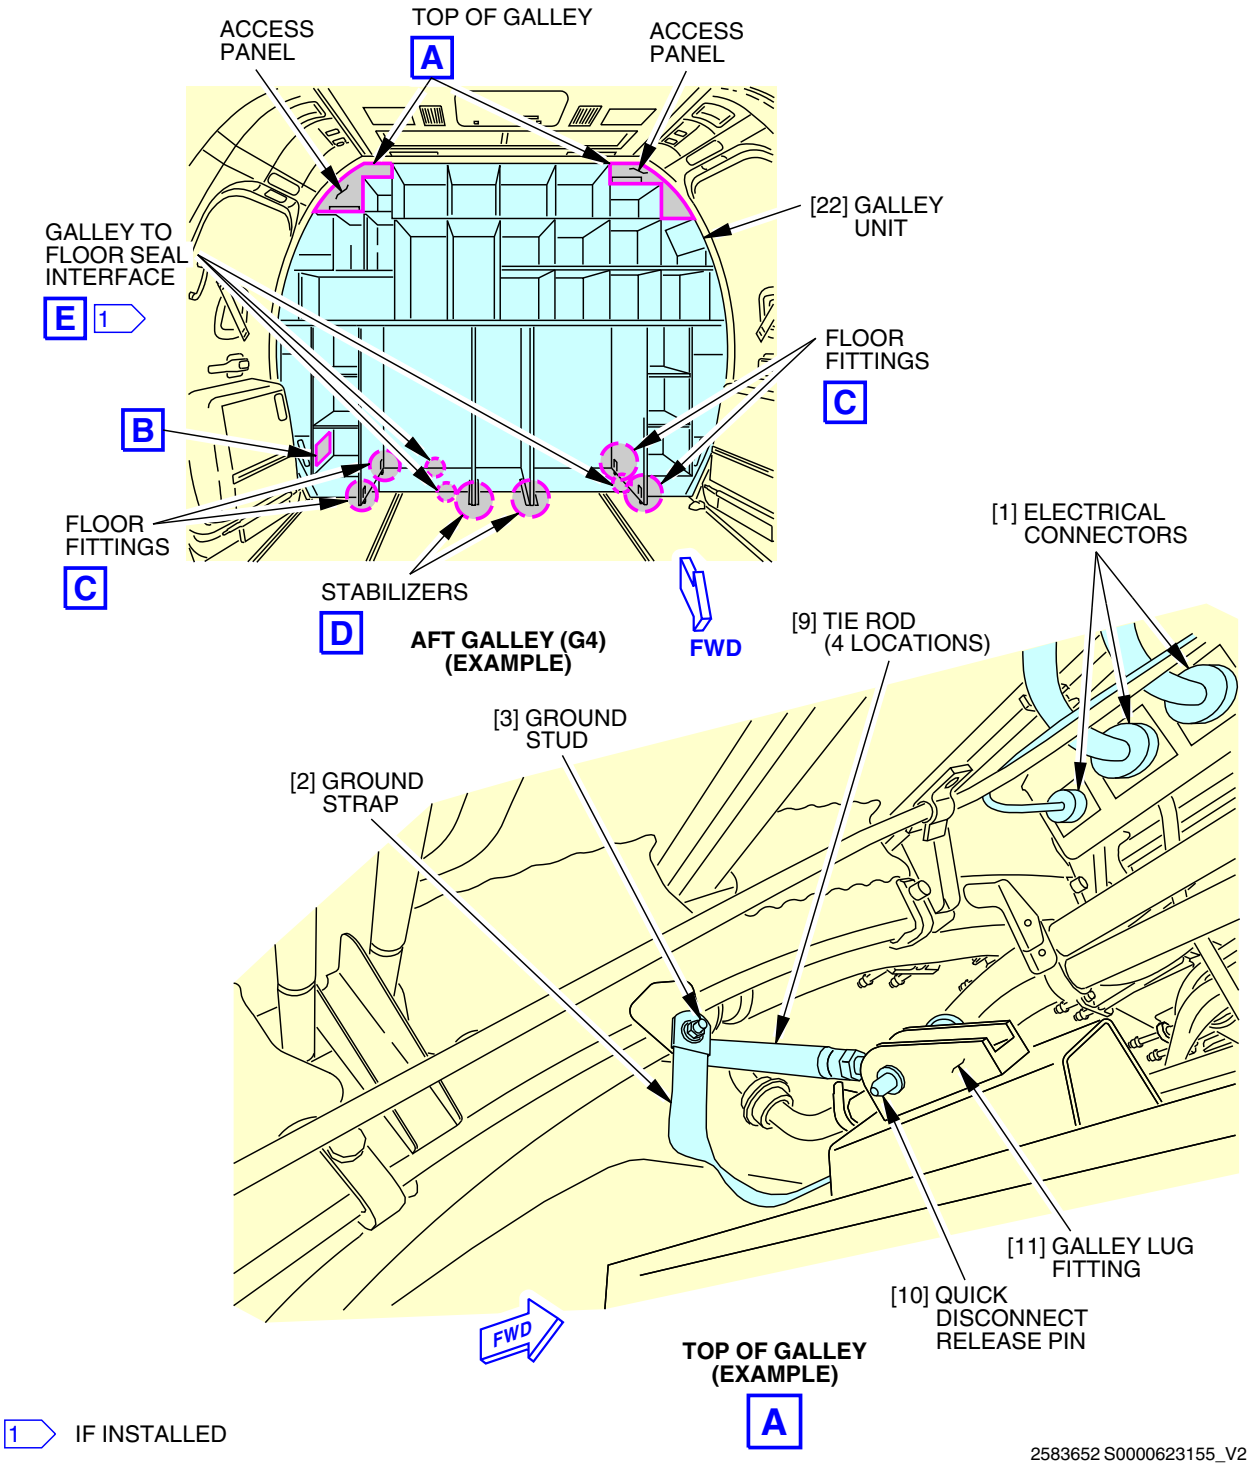


Galley G4 Installation
Figure 401/25-31-41-990-801 (Sheet 1 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

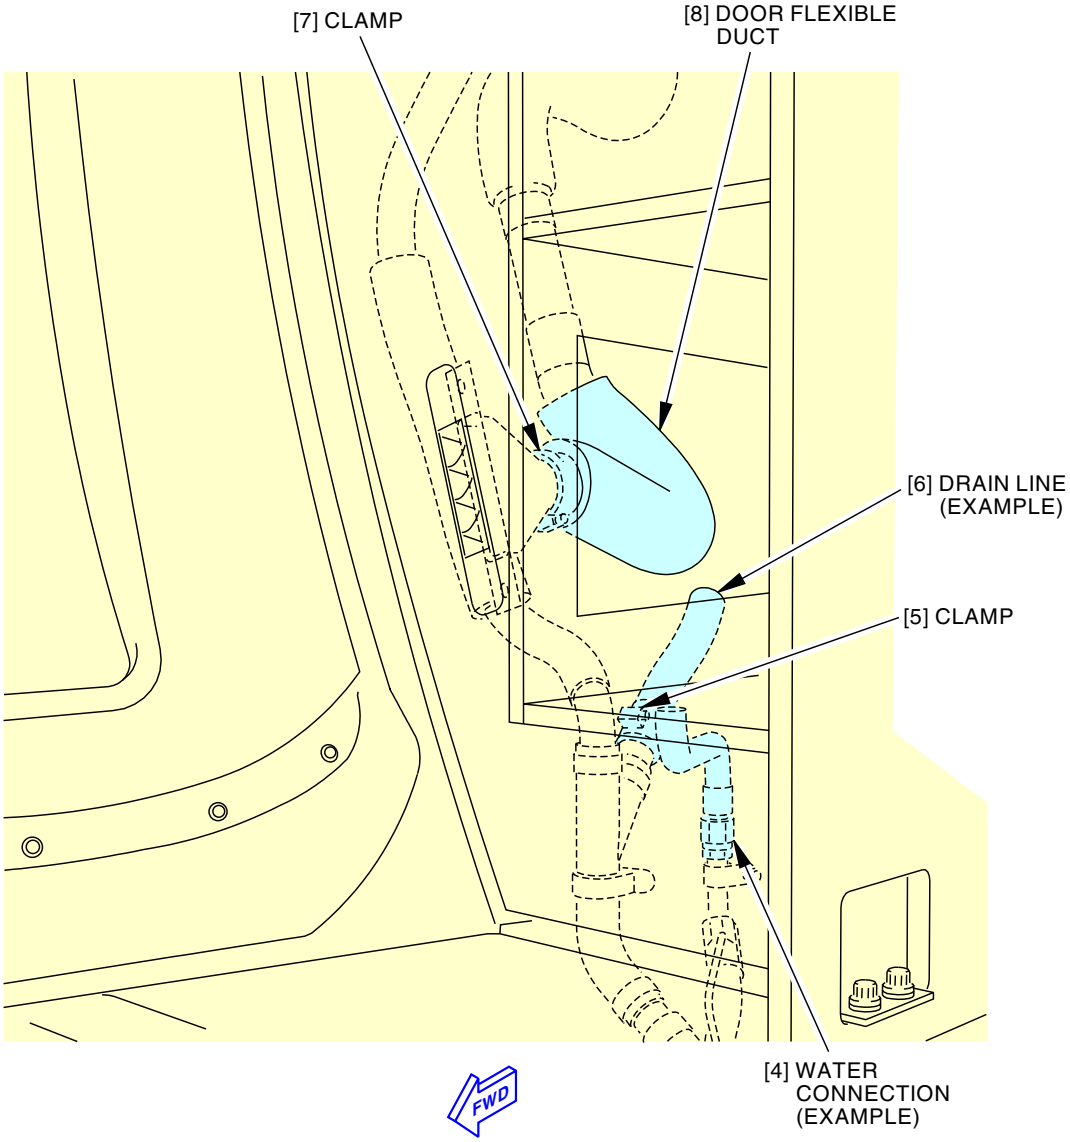

Galley G4 Installation
Figure 401/25-31-41-990-801 (Sheet 2 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

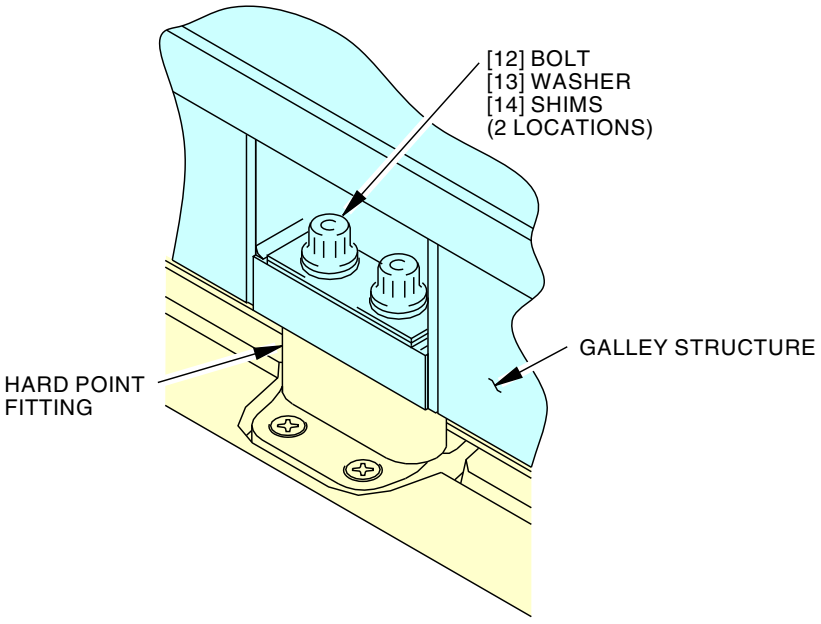


FLOOR FITTING
(EXAMPLE)

C

2411932 S00061529517_V2

Galley G4 Installation
Figure 401/25-31-41-990-801 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

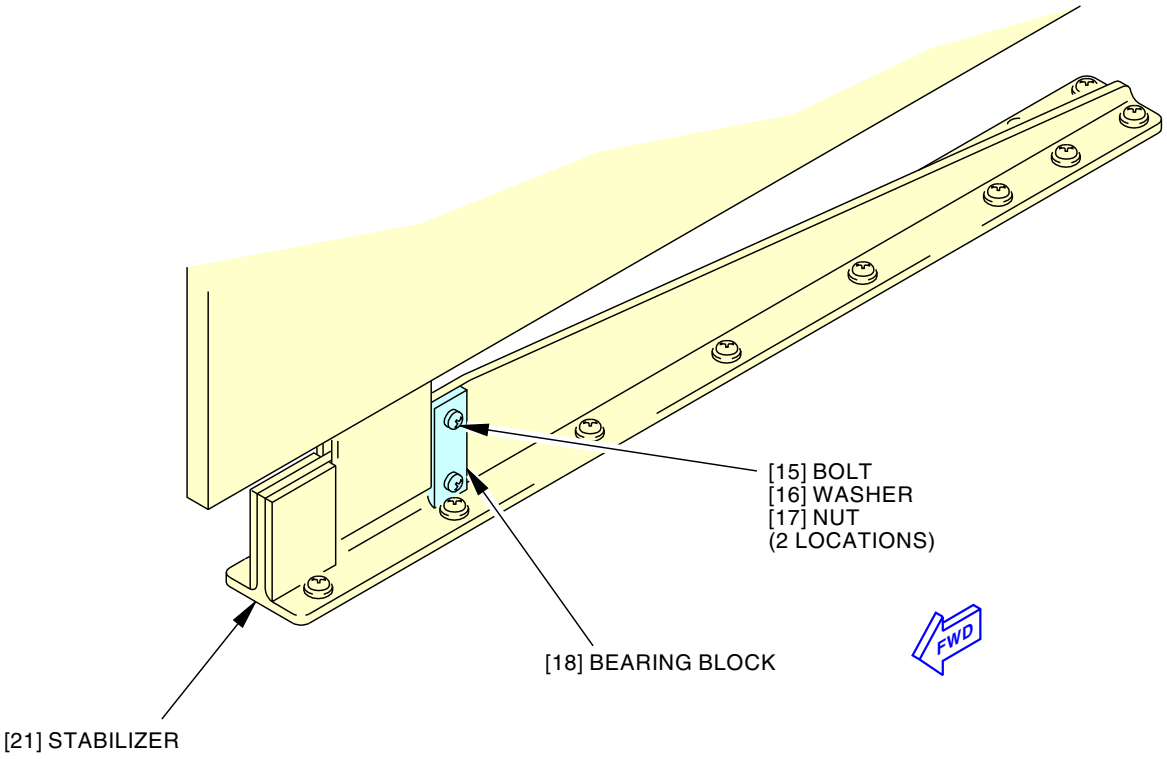


STABILIZER
(EXAMPLE)

D

2528765 S0000598080_V2

Galley G4 Installation
Figure 401/25-31-41-990-801 (Sheet 4 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

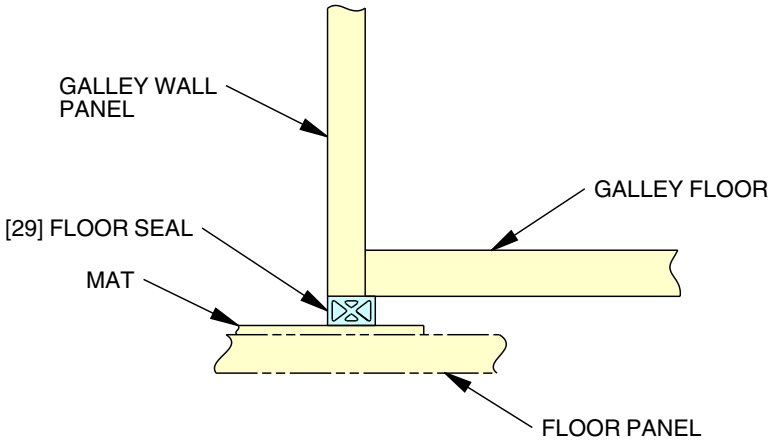


GALLEY TO FLOOR SEAL INTERFACE (EXAMPLE)

E

3084437 S0000838748_V1

Galley G4 Installation
Figure 401/25-31-41-990-801 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

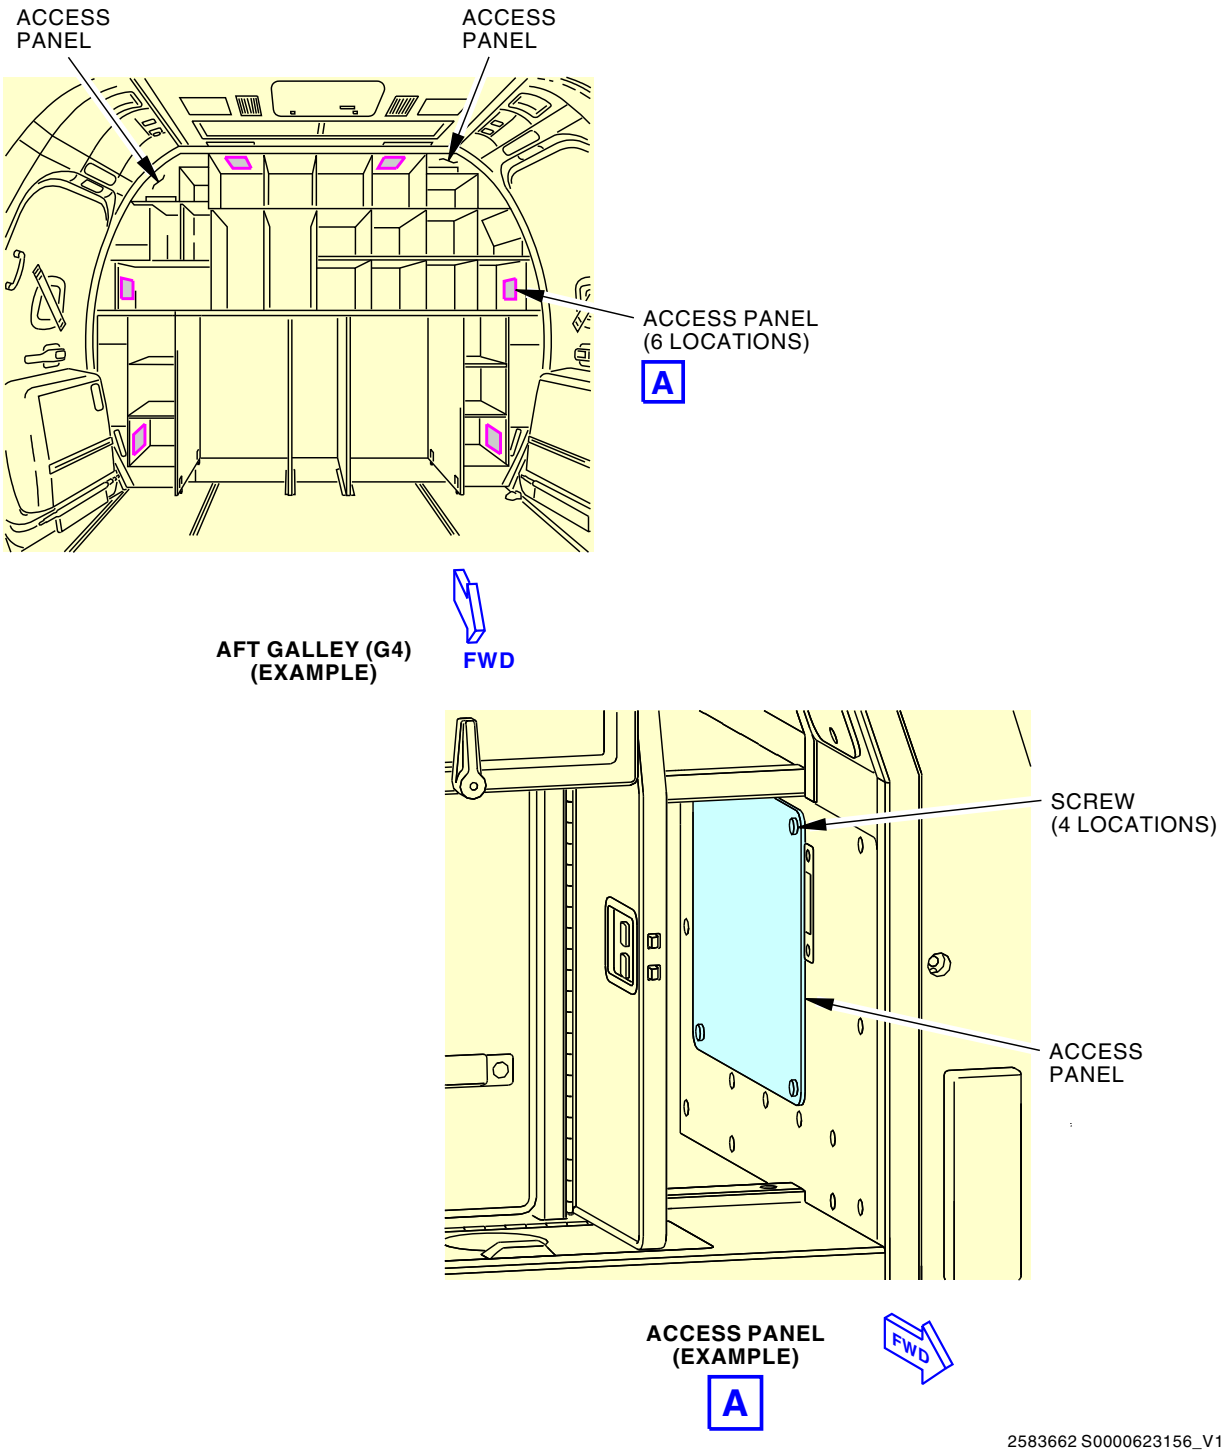

Galley No. 4 Access Panel Locations
Figure 402/25-31-41-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-31-41-400-801

3. Galley G4 Installation

(Figure 401, Figure 402)

A. General

(1) This procedure does not remove the Galley G4 unit from the airplane in two sections. The procedure moves the galley unit from the installed position to do maintenance. To remove the galley unit from the airplane, disconnect the top section of the galley from the bottom section. Remove or install the galley unit from the airplane one section at a time.

(2) During installation procedures, portable galley cart, SPL-21406, may be used to lift, hold , and transport galley unit [22] to the correct locations or positions.

B. References

Reference	Title
25-21-24-400-801	Aft Door Doorway Header Panel Installation (P/B 401)
25-21-25-420-801	Aft Entry and Service Doorways Sidewall Lining Panel - Installation (P/B 401)
25-21-71-400-801	Lowered Ceiling Installation (P/B 401)
25-27-21-400-801	Entry and Service Area Floor Covering - Installation (P/B 401)
25-31-41-440-801	Galley No. 4 - Activation (P/B 201)
25-40-14-400-801	Lavatory D Installation (P/B 401)
25-40-15-400-801	Lavatory E Installation (P/B 401)
25-66-02-400-801	Floor-Mounted Escape Slide Bracket Installation (P/B 201)
33-25-00-960-801	Information Sign - Light Assembly Replacement for a Passenger Service Unit (PSU) Sign (P/B 201)
33-51-01-960-802	Exit Sign - Light Assembly Replacement (P/B 201)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-10-00-600-801	Potable Water System Disinfectant (P/B 201)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
38-42-00-800-802	Potable Water System - Activation (P/B 201)
51-22-00-390-806	Fillet Seal Application (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-614	Bonding Meters - Non-Intrinsically Safe (For use in outside Class I, Divisions I & II non-hazardous locations. For hazardous locations, use COM-1550). Part #: 247000 Supplier: 00426 Part #: 620LK Supplier: 1CRL2 Part #: BLR-0003-XX Supplier: KC432 Part #: BT51 Supplier: 00426 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659 Opt Part #: 247001 Supplier: 00426

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description
SPL-21406	Portable Cart - Galley Assy Part #: C25005-54 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A00635	Adhesive - RTV 108 Translucent Silicone Rubber RTV Paste, One-part	BAC5010 Type 60 Class A Grade 2 / MIL-A-46106 Type 1
A00930	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 109
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
C00528	Compound - Corrosion Preventive, Petroleum Hot Application (Soft Film)	MIL-C-11796 Class III
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38
G50327	Tape - Advanced Insulation Blanket (use until stock depleted)	BMS5-157 Type I Class 1 Grade B Composition MPVF
G51139	Foam - Flexible Polyvinylidene Fluoride	BMS8-371 Type 1A Class 1 Grade 2
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
22	Galley unit	25-31-41-05-085	PTF ALL

F. Location Zones

Zone	Area
240	Subzone - Passenger Compartment - Body Station 663.75 to Body Station 1016.00

G. Prepare for the Installation

SUBTASK 25-31-41-390-001

(1) Make sure that the floor seals and water barrier on the galley floor are not damaged (TASK 25-27-21-400-801).

SUBTASK 25-31-41-100-001

(2) Clean the galley mat with solvent, B00083.

(a) If necessary, repair the galley mat.

H. Galley G4 Installation

NOTE: Be careful when you install the galley to prevent damage to the galley mat.

SUBTASK 25-31-41-420-003

(1) Align the galley unit [22] inboard near its installed position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-41-420-004

(2) Connect the applicable galley ground straps [2] to the ground studs [3].

(a) Measure the electrical bonding resistance between the ground stud [3] on the galley and airplane ground stud.

1) Use a non-intrinsically safe bonding meter, COM-614.

2) Make sure that the resistance is a maximum of 0.0025 ohm (2.5 milliohms).

SUBTASK 25-31-41-420-037

(3) Connect the electrical connectors [1] on the top of the galley unit [22].

SUBTASK 25-31-41-410-007

(4) If necessary, install the exit signs (TASK 33-51-01-960-802).

(a) Put the wires through the panel for the exit lights.

SUBTASK 25-31-41-420-032

(5) If necessary, install the information signs (TASK 33-25-00-960-801).

SUBTASK 25-31-41-420-006

(6) Align the lower front section of the galley unit [22] with the airplane floor fittings.

SUBTASK 25-31-41-420-007

(7) Loosely install the bolts [12], washers [13], and shims [14] at the hard points.

NOTE: This will prevent galley movement while the floor seal is installed.

(a) Install the shims [14] in the same locations as recorded.

NOTE: The maximum is three shims for each attachment fitting.

SUBTASK 25-31-41-420-008

(8) If necessary, install the floor seal [29] below the cart compartment walls and walls adjacent to the cabin interior.

(a) Bond the floor seal with adhesive, A00027, or adhesive, A00930.

(b) If necessary, cut the seal on installation.

(c) In view areas, make sure that the seal is one continuous piece.

1) If necessary, for corners, use a 90°arc (2 rad) bevel cut.

a) Do not cut all the way through the seal.

(d) Fillet seal to the galley mat, floor fittings, and galley (TASK 51-22-00-390-806).

1) If necessary, fill ends.

2) Apply enough sealant to produce squeeze out.

3) Clean to a smooth, continuous fillet seal.

(e) Do not install on the stabilizer wall panel.

SUBTASK 25-31-41-020-023

(9) Remove the loosely installed bolts [12] and washers [13], at the floor hard points.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-41-390-004

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(10) Apply Cor-Ban 27L Compound, G50237 (preferred), or compound, C00528 (alternate), to the shank and threads on each bolt [12].

SUBTASK 25-31-41-390-005

(11) Apply Cor-Ban 27L Compound, G50237 (preferred), or compound, C00528 (alternate), to each washer [13].

SUBTASK 25-31-41-420-033

(12) Do these steps to attach the galley unit [22] to the floor hard points:

(a) Install the bolts [12] and washers [13] to the floor hard points.

(b) Make sure that the shims [14] are still in position.

NOTE: The maximum is three shims for each attachment fitting.

(c) Tighten the bolts [12] to 107.5 ±17.5 in-lb (12.1 ±2.0 N·m).

(d) Install the hard point cover plates.

(e) Fillet seal the cover plates with adhesive, A00027, or adhesive, A00930.

SUBTASK 25-31-41-420-038

(13) Install the stabilizer as necessary, as follows:

(a) Align the stabilizer with the galley panel and holes in the mat.

(b) Apply RTV6708 adhesive, A50030, to the shank and threads on each bolt.

(c) Apply RTV6708 adhesive, A50030, to each washer.

(d) Install the bolts and washers to attach the stabilizer to the floor panel.

1) Torque the bolts to 22.5 ±2.5 in-lb (2.5 ±0.3 N·m).

(e) Fillet seal the stabilizer to the galley mat and galley wall with RTV 108 adhesive, A00635, or RTV6708 adhesive, A50030 (TASK 51-22-00-390-806).

SUBTASK 25-31-41-420-030

(14) Do these steps to install the bearing blocks [18] on the stabilizers [21]:

(a) Install the bolts [15], washers [16], and nuts [17] to attach the bearing blocks [18] to the stabilizers [21].

NOTE: For the right hand side stabilizer, if the bearing block was installed on the outboard side, then reinstall the bearing block on the outboard side.

SUBTASK 25-31-41-820-002

(15) Do these steps to connect the tie rods [9] to the top of the galley unit [22]:

(a) Adjust the tie rod [9] to the correct length, as follows:

1) Adjust the end of the tie rod [9] assembly without the lockwasher and lockwire.

2) Make sure that the thread of the tie rod [9] blocks the inspection hole in the body of the tie rod [9].

3) Tighten the jamnut to 65.0 in-lb (7.3 N·m).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Attach the quick disconnect release pins [10] at the galley end of the tie rod [9] to the galley lug fittings [11].

SUBTASK 25-31-41-420-013

(16) Connect the galley water connection [4].

SUBTASK 25-31-41-420-014

(17) Apply insulation to the water supply line, as follows:

(a) Apply insulation foam, G51139, around the water connection [4].

(b) Start the insulation foam, G51139, and overlap below the water connection [4].

(c) Continue to wind the insulation foam, G51139, around the fitting with a 0.2 +0.3 / -0.0 in. (5.1 +7.6 / -0.0 mm) overlap for each turn.

(d) Complete the insulation foam, G51139, wind approximately 2.0 in. (50.8 mm) above the end of the fitting.

NOTE: In areas where the fitting is bent to 90.0 degrees, small clearances between the insulation foam, G51139, and the fitting are permitted. You can apply the insulation foam, G51139, in pieces.

(e) Apply insulation tape, G50327, or tape, G51202, around the insulation foam, G51139, on the water supply line.

1) Start the insulation tape, G50327, or tape, G51202, and overlap before the insulation foam, G51139 starts.

2) Continue to wind the insulation tape, G50327, or tape, G51202, around the insulation foam, G51139, with a 0.2 +0.3 / -0.0 in. (5.1 +7.6 / -0.0 mm) overlap for each turn.

a) Stop after the insulation foam, G51139, stops.

3) Make sure that the insulation tape, G50327, or tape, G51202, fully overlap the seals above the ends of the insulation foam, G51139.

4) Make sure that you fully cover the insulation foam, G51139, with insulation tape, G50327, or tape, G51202.

SUBTASK 25-31-41-420-015

(18) Connect the drain line [6].

SUBTASK 25-31-41-420-028

(19) Tighten the hose clamp [5] on the drain line [6].

SUBTASK 25-31-41-420-016

(20) Connect the door flexible duct [8].

SUBTASK 25-31-41-420-029

(21) Tighten the hose clamp [7] on the door flexible duct [8].

SUBTASK 25-31-41-420-018

(22) If necessary, install the light assembly for the floor proximity light (TASK 33-51-14-960-802).

SUBTASK 25-31-41-390-002

(23) In the galley wet area, apply a fillet seal to the galley kickstrip retainer or kick plate with adhesive, A00027, or adhesive, A00930.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Put the Airplane Back to Its Usual Condition

SUBTASK 25-31-41-440-002

WARNING

MAKE SURE THAT YOU DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Activate Galley No. 4 (TASK 25-31-41-440-801).

SUBTASK 25-31-41-410-001

(2) Install the left, right, and center box assembly units in the galley unit [22].

SUBTASK 25-31-41-420-026

(3) Install the coffee maker, the rail, and other equipment in the galley unit [22].

SUBTASK 25-31-41-710-002

(4) At the attendant panel in the passenger compartment, set the emergency light switch to the ON mode.

(a) Make sure that the floor proximity lights come on.

(b) Make sure that the exit lights come on.

SUBTASK 25-31-41-710-004

(5) Make sure that the NS/FSB signs on the top left and right side of the galley unit [22] come on.

SUBTASK 25-31-41-710-005

(6) Do the leak check of the galley water connections.

(a) Do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

(b) Open the water faucets in the galley and let the water flow for 2 minutes.

(c) Close the water faucets.

(d) Keep the pressure for at least 5 minutes.

(e) Do a visual check to make sure that there are no leaks at the water connections.

(f) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-31-41-420-039

(7) Install the access covers on the galley unit [22].

(a) Install the screws and washers to attach the access covers to the structure.

NOTE: Some access panels do not have washers, only screws that attach the access panels to the galley.

SUBTASK 25-31-41-670-001

(8) Use a disinfectant to clean the potable water system (TASK 38-10-00-600-801).

SUBTASK 25-31-41-410-002

(9) Install the lavatory (TASK 25-40-14-400-801).

SUBTASK 25-31-41-410-003

(10) Install the lavatory (TASK 25-40-15-400-801).

SUBTASK 25-31-41-410-005

(11) Install the aft door doorway header panel (TASK 25-21-24-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-31-41-410-004

(12) Install the aft entry and service doorways sidewall lining panel (TASK 25-21-25-420-801).

SUBTASK 25-31-41-410-006

(13) Install the lowered ceiling (TASK 25-21-71-400-801).

SUBTASK 25-31-41-410-010

(14) If the escape slide brackets at the aft entry and service doors are removed, do this task: Floor-Mounted Escape Slide Bracket Installation, TASK 25-66-02-400-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

COFFEE MAKER - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Coffee Maker Removal

(2) Coffee Maker Installation.

TASK 25-32-01-000-801

2. Coffee Maker Removal

(Figure 401)

A. General

(1) This task gives the steps to remove the coffee maker.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Removal

SUBTASK 25-32-01-860-014

(1) Set the galley water supply switch to the CLOSE position.

(a) If it is necessary, drain the water from the coffee maker [1].

SUBTASK 25-32-01-860-015

(2) Set the secondary latch to the left position.

SUBTASK 25-32-01-020-017

(3) Set the handle to the up position to remove the server.

SUBTASK 25-32-01-860-001

(4) Open the applicable circuit breakers for the coffee maker [1] on the galley control panel.

D. Coffee Maker Removal

SUBTASK 25-32-01-020-003

(1) Release the coffee maker [1] from the galley rail assembly.

(a) Loosen the screws on the lockdown levers.

(b) Lift the lockdown levers.

NOTE: This will release the locking pins from the galley rail assembly.

SUBTASK 25-32-01-020-004

(2) Pull the coffee maker [1] out from the galley compartment.


NOTE: This disconnects the connectors on the coffee maker [1] from the water connector [2] and electrical connector [3] on the galley rail assembly.

SUBTASK 25-32-01-020-005


(3) Remove the coffee maker [1] from the galley.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

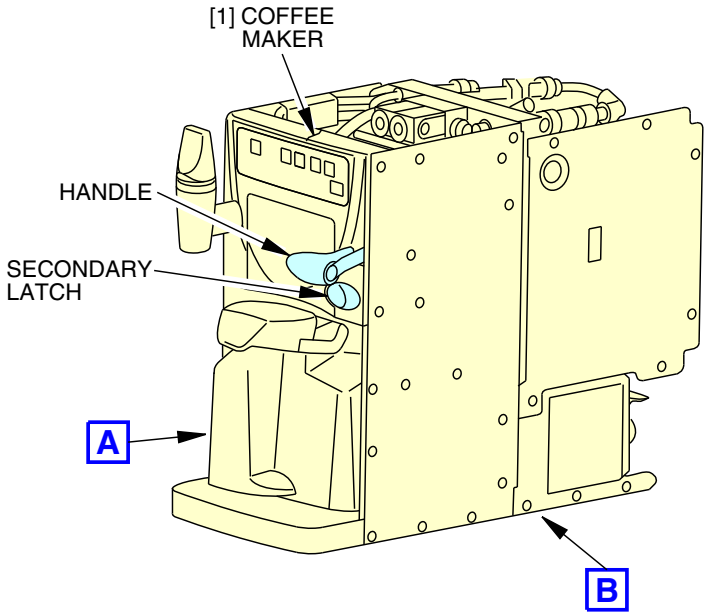


COFFEE MAKER (EXAMPLE)

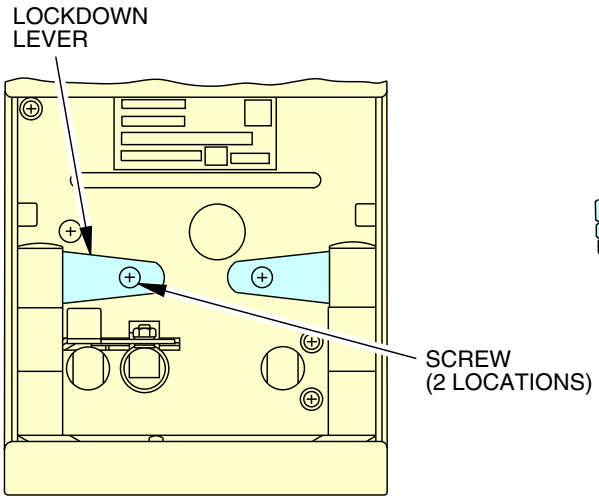

COFFEE MAKER (FRONT VIEW) (EXAMPLE)

A

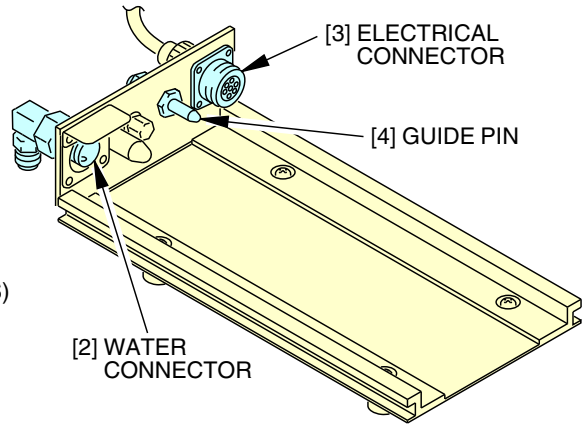

GALLEY RAIL ASSEMBLY (EXAMPLE)

B

2776013 S0000628609_V3

Coffee Maker Installation
Figure 401/25-32-01-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-32-01-400-801

3. Coffee Maker Installation

(Figure 401)

A. General

(1) This task gives the steps to install the coffee maker.

B. References

Reference	Title
25-32-01-710-801	Coffee Maker - Operational Test (P/B 501)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Coffee Maker Installation

SUBTASK 25-32-01-420-001

(1) Put the coffee maker [1] on the galley.

SUBTASK 25-32-01-420-003

(2) Push the coffee maker [1] into the galley compartment.

(a) Make sure that the connectors and guide pin hole on the coffee maker [1] engage with the water connector [2], electrical connector [3] and guide pin [4] on the galley rail assembly.

SUBTASK 25-32-01-420-005

(3) Lock the coffee maker [1] to the galley rail assembly.

(a) Push down the lockdown levers.

NOTE: This will latch the locking pins into the galley rail assembly.

(b) Tighten the screws on the lockdown levers.

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-32-01-420-006

(1) Put the server in the coffee maker [1].

SUBTASK 25-32-01-420-007

(2) Set the handle to the down position.

SUBTASK 25-32-01-860-008

(3) Set the secondary latch to the right position.

SUBTASK 25-32-01-860-003

(4) Close the applicable circuit breakers for the coffee maker [1] on the galley control panel.

SUBTASK 25-32-01-780-001

(5) Set the galley water supply switch to the OPEN position.

SUBTASK 25-32-01-710-001

(6) Do this task: Coffee Maker - Operational Test, TASK 25-32-01-710-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

COFFEE MAKER - ADJUSTMENT/TEST

1. General

A. This procedure has this task:

(1) Coffee Maker - Operational Test.

TASK 25-32-01-710-801

2. Coffee Maker - Operational Test

A. General

(1) This task gives the steps to do the operational test of the coffee maker.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Operational Test

SUBTASK 25-32-01-710-003

(1) Make sure that the brew cup and server are installed in the coffee maker.

SUBTASK 25-32-01-710-004

(2) Make sure that the handle is set to the down position.

SUBTASK 25-32-01-860-009

(3) Make sure that the secondary latch is set to the right position.

(a) Make sure that the secondary latch light is on in GREEN.

D. Coffee Maker Operational Test

SUBTASK 25-32-01-710-005

(1) Do the operational test of the coffee maker as follows:

(a) Push the POWER button.

1) Make sure that the POWER button comes on.

2) Make sure that the LOW WATER light is off.

a) If it is necessary, wait for the water tank to automatically fill.

(b) Push the BREW button.

1) Make sure that the BREW button comes on.

(c) Wait for the BREW button to go off.

(d) Set the secondary latch to the left position.

1) Make sure that the secondary latch light comes on in RED.

(e) Set the handle to the up position.

WARNING THE WATER CAN BE HOT. IT CAN CAUSE INJURIES.

(f) Remove the server.

1) Discard the water.

(g) Put the server in the coffee maker.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(h) Set the handle to the down position.


(i) Set the secondary latch to the right position.

1) Make sure that the secondary latch light comes on in GREEN.

(j) Push the POWER button.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

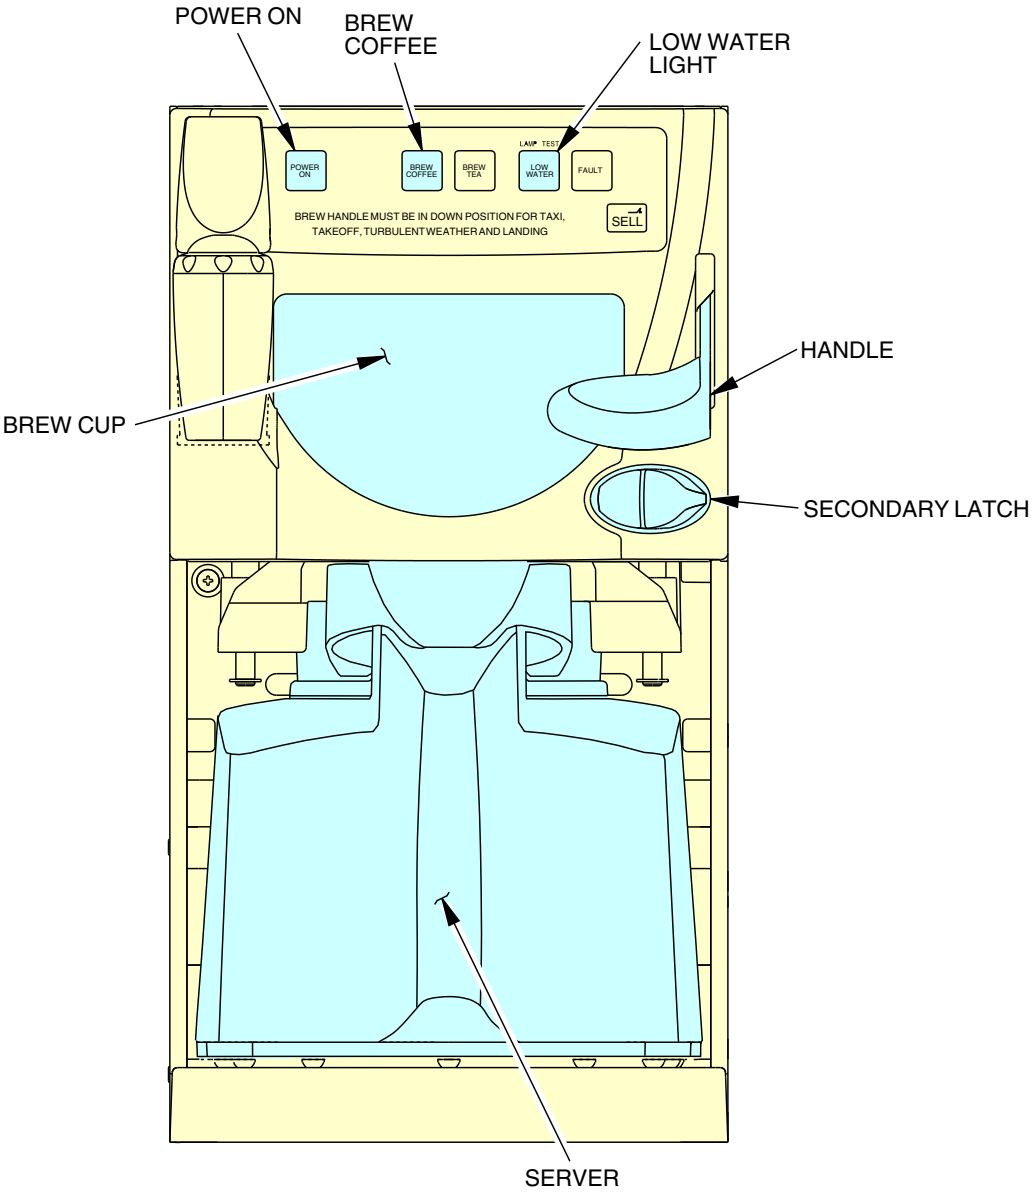

COFFEE MAKER (EXAMPLE)

2768327 S0000628610_V2

Coffee Maker Operational Test
Figure 501/25-32-01-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY OVEN - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Convection Oven Removal

(2) Convection Oven Installation

TASK 25-32-03-000-801

2. Convection Oven Removal

(Figure 401)

A. General

(1) This task gives the steps to remove the convection oven.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Removal

SUBTASK 25-32-03-860-001

(1) Open the applicable circuit breakers for the oven [1] on the galley control panel.

D. Convection Oven Removal

SUBTASK 25-32-03-020-001

(1) Remove the screws [2], washers [7] (if applicable), and washers [8] (if applicable) from the oven [1] and galley.

NOTE: The screws [2] are located in the galley compartment below the oven [1].

SUBTASK 25-32-03-020-002

(2) Pull the oven [1] out from the galley compartment.


NOTE: This disconnects the electrical connector [3] from the galley.

SUBTASK 25-32-03-020-004

(3) Remove the oven [1] from the galley.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

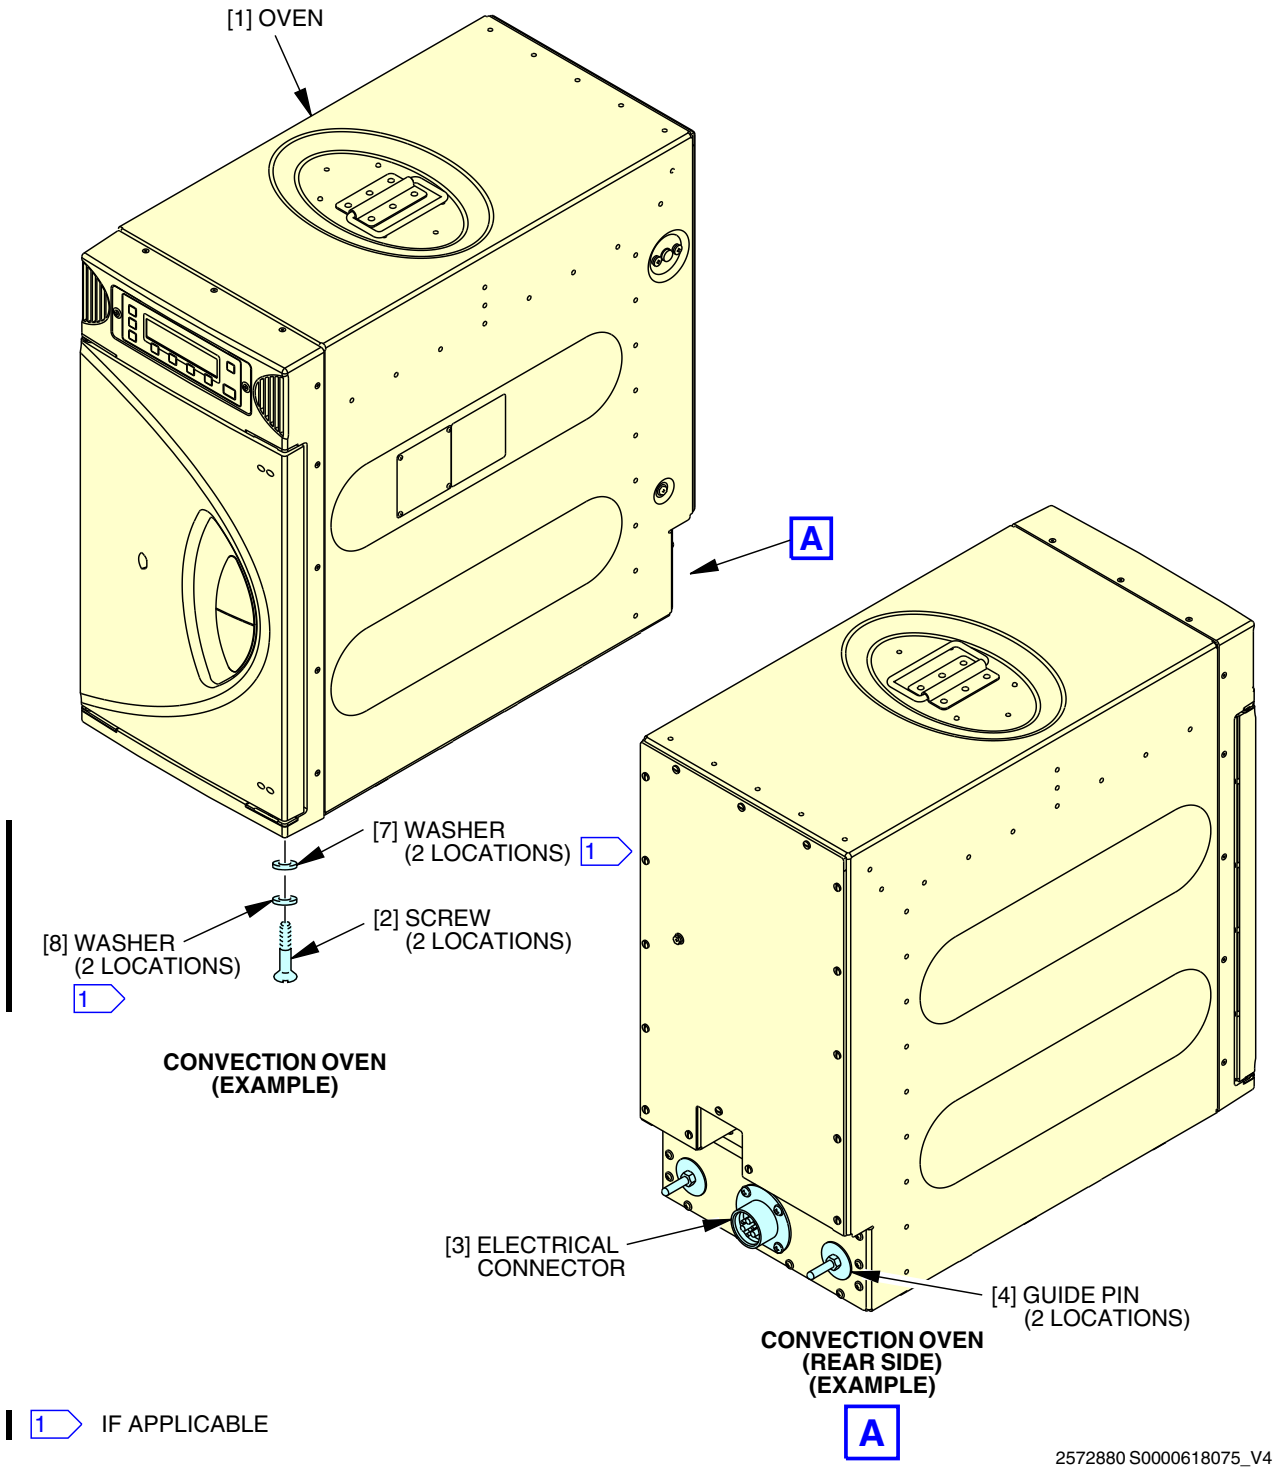

Convection Oven Installation
Figure 401/25-32-03-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-32-03-400-801

3. Convection Oven Installation

(Figure 401)

A. General

(1) This task gives the steps to install the convection oven.

B. References

Reference	Title
25-32-03-710-802	Convection Oven - Operational Test (P/B 501)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Convection Oven Installation

SUBTASK 25-32-03-420-006

(1) Put the oven [1] on the galley.

SUBTASK 25-32-03-420-002

(2) Push the oven [1] into the galley compartment.

(a) Make sure that the electrical connector [3] and guide pins [4] engage with the connector and guide pin holes on the galley.

SUBTASK 25-32-03-420-005

(3) Install the screws [2], washers [7] (if applicable), and washers [8] (if applicable) to the oven [1] and galley.

NOTE: The screws [2] are installed from the galley compartment below the oven [1].

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-32-03-860-003

(1) Close the applicable circuit breakers for the oven [1] on the galley control panel.

SUBTASK 25-32-03-710-001

(2) Do this task: Convection Oven - Operational Test, TASK 25-32-03-710-802.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

GALLEY OVEN - ADJUSTMENT/TEST

1. General

A. This procedure has these tasks:

(1) Convection Oven - Operational Test.

TASK 25-32-03-710-802

2. Convection Oven - Operational Test

A. General

(1) This task gives the steps to do the operational test of the convection oven.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Operational Test

SUBTASK 25-32-03-710-062

(1) Make sure that the oven door is closed and in the locked position.

D. Convection Oven Operational Test

SUBTASK 25-32-03-710-065

(1) Do an operational test of the convection oven as follows:

(a) Push the POWER ON button.

(b) Push the TIME buttons to set the timer to 5 minutes.

(c) Push the TEMPERATURE buttons to set the temperature to LOW.

(d) Push the START/PAUSE button to start the oven cycle.

(e) Unlock and open the oven door.

1) Make sure that the display shows CLOSE DOOR.

(f) Close and lock the oven door.

1) Make sure that the oven cycle starts automatically.

(g) Wait for the oven cycle to complete.

1) Make sure that the oven beeps.


2) Make sure that the display shows SERVE and flashes.

(h) Push the POWER ON button.


1) Make sure that the display shows SHUTDOWN.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

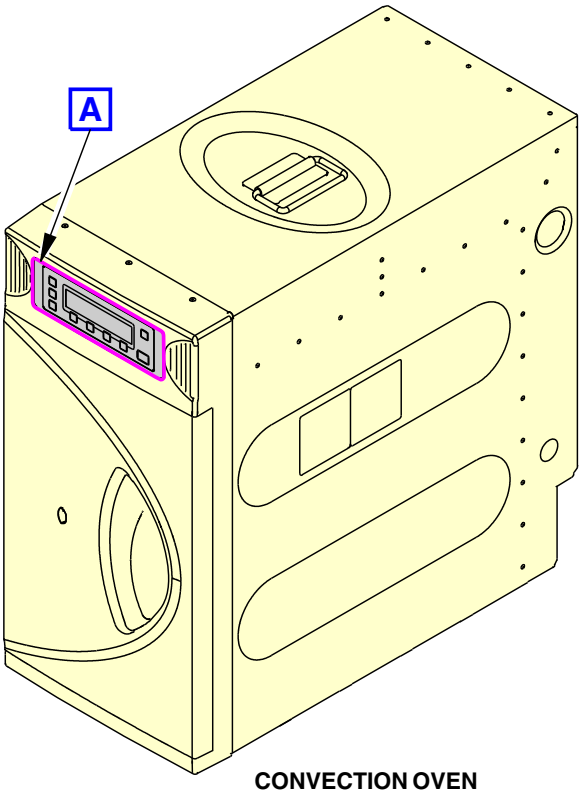

CONVECTION OVEN (EXAMPLE)

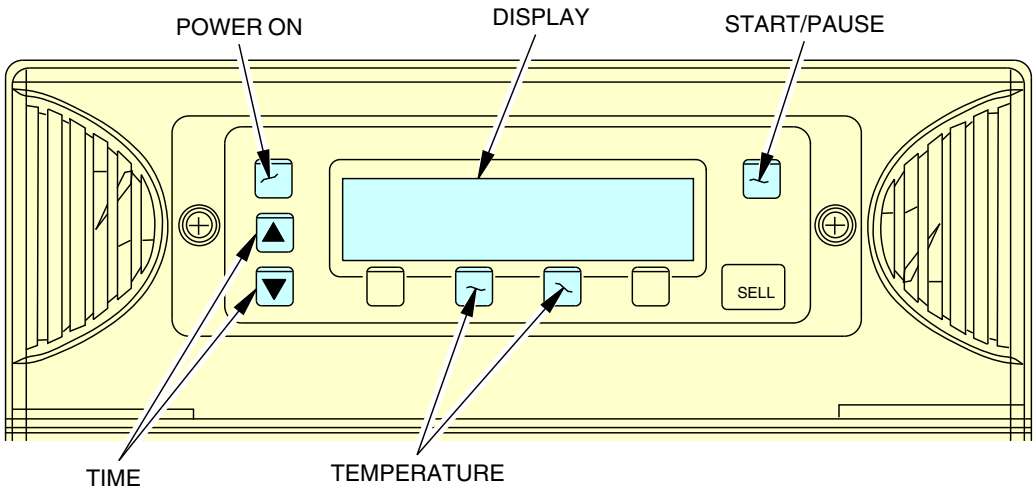

OVEN CONTROL MODULE (EXAMPLE)

A

3064557 S0000826682_V1

Convection Oven Operational Test
Figure 501/25-32-03-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

LAVATORIES - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Water heater power deactivation

(2) Water heater power activation

(3) Lavatory power deactivation

(4) Lavatory power activation.

TASK 25-40-00-040-801

2. Water Heater Power Deactivation

A. General

(1) This task will deactivate the power to the water heaters for the lavatories.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Procedure

SUBTASK 25-40-00-020-001

(1) Open the circuit breakers for the applicable lavatories and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	13	C00104	LAVATORY WATER HEATER A
F	14	C01073	LAVATORY WATER HEATER D
F	15	C01096	LAVATORY WATER HEATER E

D. Water Heater Power - Tryout

NOTE: This tryout is to make sure that the power to the water heaters is in zero energy state.

SUBTASK 25-40-00-410-001

(1) Turn on the faucet.

(a) Make sure that there is no hot water.

——— END OF TASK ———

TASK 25-40-00-440-801

3. Water Heater Power Activation

A. General

(1) This task will activate the power to the water heaters for the lavatories.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Procedure

SUBTASK 25-40-00-410-002

(1) Remove the safety tags and close these circuit breakers for the applicable lavatories:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	13	C00104	LAVATORY WATER HEATER A
F	14	C01073	LAVATORY WATER HEATER D
F	15	C01096	LAVATORY WATER HEATER E

SUBTASK 25-40-00-420-001

(2) Turn on the faucet.

(a) Make sure that there is hot water.

——— END OF TASK ———

TASK 25-40-00-040-802

4. Lavatory Power Deactivation

A. General

(1) This task will deactivate the power to the lavatories.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Lavatory Power Deactivation

SUBTASK 25-40-00-020-002

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
D	19	C01423	VACUUM WASTE
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	10	C00783	OXYGEN PASS LEFT
F	13	C00104	LAVATORY WATER HEATER A
F	14	C01073	LAVATORY WATER HEATER D
F	15	C01096	LAVATORY WATER HEATER E

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
C	6	C01583	ENTERTAINMENT PA SYS BAT
C	9	C00080	ENTERTAINMENT PA TAPE RPDR AC
D	4	C00082	COMMUNICATIONS PA AMPL BAT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	21	C00560	INTERPHONE POWER F/O DC 2
C	22	C00561	INTERPHONE POWER F/O BAT
C	23	C00239	INTERPHONE POWER CAPT DC 2
C	24	C00240	INTERPHONE POWER CAPT BAT
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 25-40-00-010-001

(2) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-40-00-040-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	9	C00138	WATER QTY IND
C	11	C01388	VACUUM WASTE CONT

This circuit breaker is inoperative and should remain open:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
E	11	C00413	BRT ENTRY LTS (INOP)

SUBTASK 25-40-00-410-004

(4) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

E. Lavatory Power Tryout

NOTE: This tryout is to make sure that the power to the lavatories is in a zero energy state.

SUBTASK 25-40-00-210-001

(1) Make sure that the mirror lights in the lavatories are off.

SUBTASK 25-40-00-210-003

(2) Do these steps to make sure that the power to the water heaters is off:

(a) Turn on the faucet.

(b) Make sure that the water is not hot.

——— END OF TASK ———

TASK 25-40-00-440-802

5. Lavatory Power Activation

A. General

(1) This task will activate the power to the lavatories.

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left
230	Subzone - Passenger Compartment - Body Station 360.00 to 663.75
231	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left
232	Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Lavatory Power Activation

SUBTASK 25-40-00-010-002

(1) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-40-00-860-001

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	9	C00138	WATER QTY IND
C	11	C01388	VACUUM WASTE CONT

This circuit breaker is inoperative and should remain open:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
E	11	C00413	BRT ENTRY LTS (INOP)

SUBTASK 25-40-00-410-003

(3) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-40-00-420-002

(4) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
D	19	C01423	VACUUM WASTE
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	10	C00783	OXYGEN PASS LEFT
F	13	C00104	LAVATORY WATER HEATER A
F	14	C01073	LAVATORY WATER HEATER D
F	15	C01096	LAVATORY WATER HEATER E

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
C	6	C01583	ENTERTAINMENT PA SYS BAT
C	9	C00080	ENTERTAINMENT PA TAPE RPDR AC
D	4	C00082	COMMUNICATIONS PA AMPL BAT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	21	C00560	INTERPHONE POWER F/O DC 2
C	22	C00561	INTERPHONE POWER F/O BAT
C	23	C00239	INTERPHONE POWER CAPT DC 2
C	24	C00240	INTERPHONE POWER CAPT BAT
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 25-40-00-210-004

(5) Make sure that the mirror lights in the lavatories are on.

SUBTASK 25-40-00-210-007

(6) Do these steps to make sure that the power to the water heaters is on:

(a) Turn on the faucet.

(b) Make sure that the water is hot.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

LAVATORY SEALANT - REMOVAL/INSTALLATION

1. General

A. This procedure has this task.

(1) Lavatory Sealant Installation

TASK 25-40-01-400-801

2. Lavatory Sealant - Installation

(Figure 401)

A. References

Reference	Title
51-22-00-160-801	Prepare For Sealing (P/B 201)
51-22-00-390-801	Non-Removable Faying (Mated) Surface Seal Application (P/B 201)
51-22-00-390-806	Fillet Seal Application (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A00081	Adhesive - Silicone Rubber - RTV 106	BAC5010 Type 74
A00635	Adhesive - RTV 108 Translucent Silicone Rubber RTV Paste, One-part	BAC5010 Type 60 Class A Grade 2 / MIL-A-46106 Type 1
A00930	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 109
A50011	Sealant - Silicone, Aluminum Color - RTV109	
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
A50067	Adhesive - Silicone Rubber - RTV 102 (White)	MIL-A-46106 Group 1 Type 1, BAC5010 Type 60 Class A Grade 1
A50119	Adhesive - Silicone Rubber - RTV 103 (Black)	MIL-A-46106

C. Sealant for Lavatories With Bi-Fold Doors Installation

SUBTASK 25-40-01-400-001

(1) Apply sealant to the threshold area.

(a) Remove the bi-fold door [5].

(b) Remove the threshold [2] installed below the lavatory [1] door, if necessary.

(c) Clean the area where the sealant will be applied (TASK 51-22-00-160-801).

(d) Apply a bead of RTV 108 adhesive, A00635, to sealant [3] around the bi-fold door pivot hole [11] (TASK 51-22-00-390-801).

(e) Install the threshold [2].

(f) Remove the excess RTV 108 adhesive, A00635, from the bi-fold door pivot hole [11].

(g) Apply a fillet seal [4] around the interior edges of the threshold [2] with RTV 108 adhesive, A00635 (TASK 51-22-00-390-806).

(h) Install the bi-fold door [5].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Sealant for Lavatories Without Bi-Fold Doors Installation

SUBTASK 25-40-01-400-002

(1) Apply sealant to the threshold area.

(a) Remove the threshold [2] installed below the lavatory [1] door, if necessary.

(b) Clean the area where the sealant will be applied (TASK 51-22-00-160-801).

(c) Install the threshold [2].

(d) Apply a fillet seal [4] around the interior edges of the threshold [2] with RTV 108 adhesive, A00635 (TASK 51-22-00-390-806).

SUBTASK 25-40-01-400-003

(2) Apply sealant to the lavatory cover plates [6].

I (a) Apply fay surface sealant [7] to the cover plates [6] with RTV6708 adhesive, A50030 (TASK 51-22-00-390-801).

(b) Install the screws to attach the cover plates [6] to the lavatory floor fittings [8].

SUBTASK 25-40-01-400-004

(3) Install the new floor sealant [3] between panels and floor and the wall adjacent to the airplane door.

(a) Clean the area where the sealant will be applied (TASK 51-22-00-160-801).

(b) Bond the floor seal with adhesive, A00027, or adhesive, A00930 (TASK 51-22-00-390-801).

NOTE: Seal on the wall panel seam must be continuous approximately 6 in. (152 mm) from the floor.

SUBTASK 25-40-01-400-005


(4) Apply one of these sealants to all exposed fasteners, gaps, or seams less than 6 in. (152.4 mm) up from the floor.

NOTE: Select the color to match the adjacent surfaces. It is possible to use RTV 108 adhesive, A00635, for all variations.

- RTV 102 adhesive, A50067
- RTV 103 adhesive, A50119
- RTV 106 adhesive, A00081
- RTV 108 adhesive, A00635
- RTV109 sealant, A50011.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

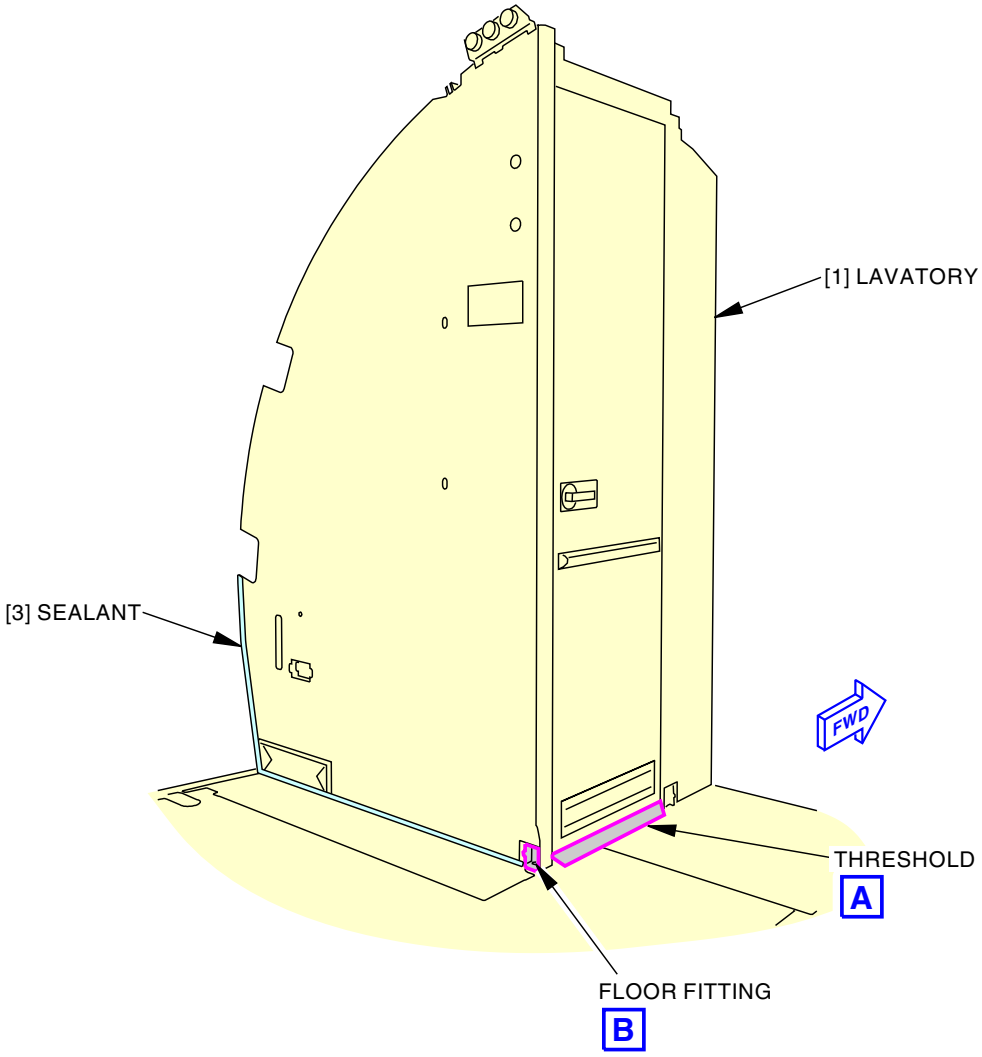

2411934 S00061529529_V2


Lavatory Sealant Installation
Figure 401/25-40-01-990-801 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

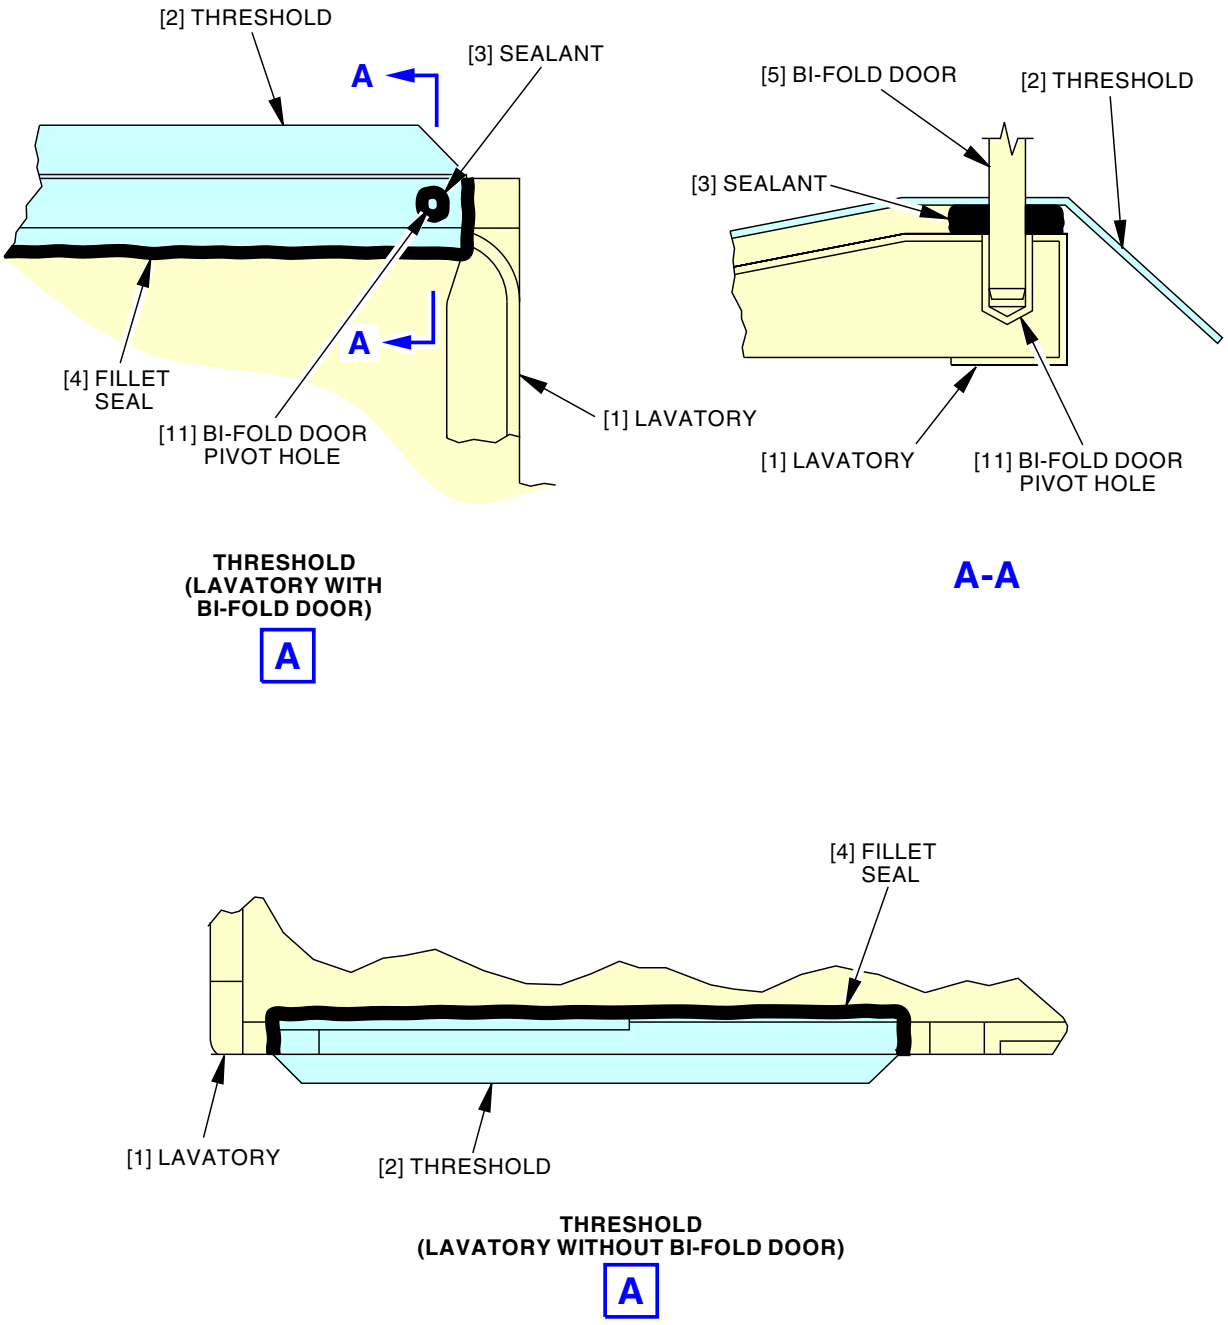

Lavatory Sealant Installation
Figure 401/25-40-01-990-801 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

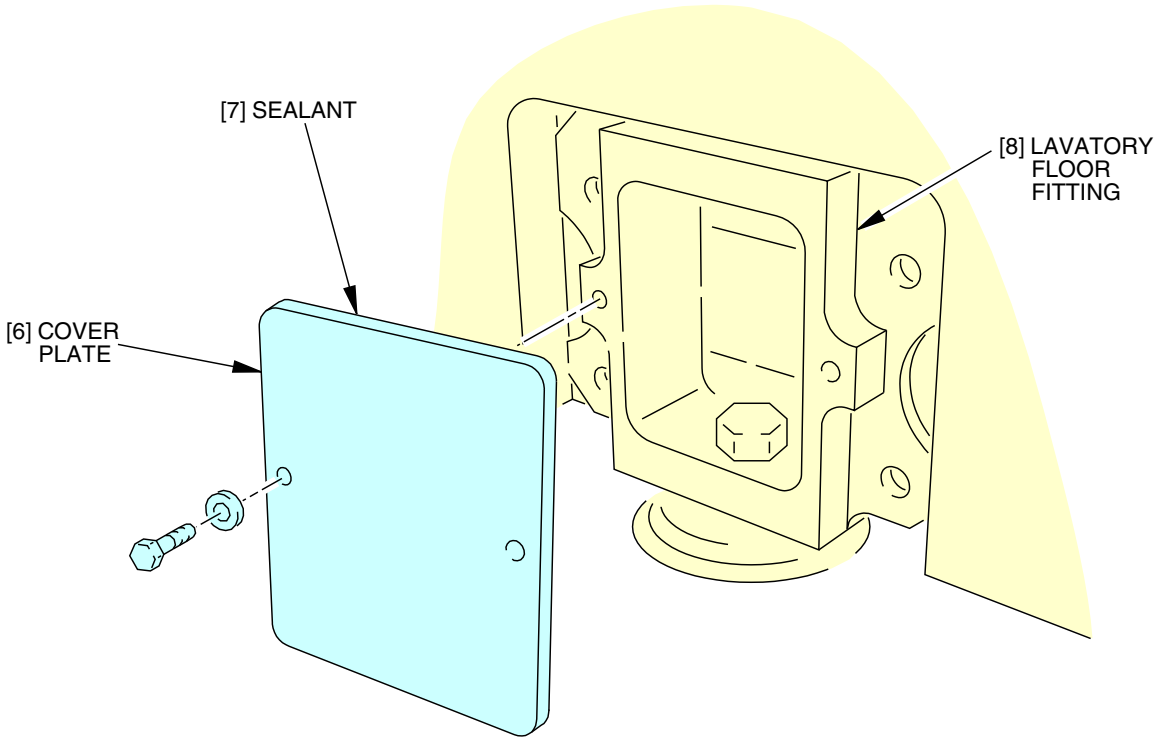

FLOOR FITTING (EXAMPLE)

B

2411936 S00061529531_V2

Lavatory Sealant Installation
Figure 401/25-40-01-990-801 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

LAVATORY WASTE COMPARTMENT - INSPECTION/CHECK

1. General

A. This procedure has this task:

(1) An inspection of the lavatory waste compartment.

TASK 25-40-08-200-801

2. Lavatory Waste Compartment Inspection

(Figure 601)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Outer Waste Compartment Door Inspection

SUBTASK 25-40-08-210-001

(1) Do these steps to make sure that the outer waste compartment door closes tightly:

(a) Push the lower latch at the bottom of the door.

(b) Open the door to the fullest open position.

(c) Make sure that the door moves smoothly.

(d) Close the door.

(e) Make sure that the door closes tightly.

C. Waste Compartment Flap Inspection

SUBTASK 25-40-08-210-002

(1) Do these steps to make sure that the waste compartment flap operates correctly:

(a) Push the waste compartment flap open.

1) If applicable, open the waste compartment flap using the foot actuated pedal.

(b) Release the waste compartment flap and make sure that it closes fully.

(c) Make sure that the waste compartment flap is not bent.

(d) The flap must close tightly to make sure that it can contain a fire.

D. Inner Waste Compartment Door Inspection

SUBTASK 25-40-08-210-003

(1) Do these steps to make sure that the inner waste compartment door closes tightly:

(a) Open the two latches on the door.

(b) Open the door to the full open position.

(c) Make sure that the door moves smoothly.

NOTE: The inner waste compartment door includes a spring loaded hinge. The door will close if you do not hold it in the open position.

(d) Remove the waste container.

(e) Make sure that the container has no damage and comes out of the compartment without resistance.

(f) Install the waste container.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


(g) Make sure that the container is in its correct position.

(h) Release the door.

(i) Make sure that the door fully latches.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

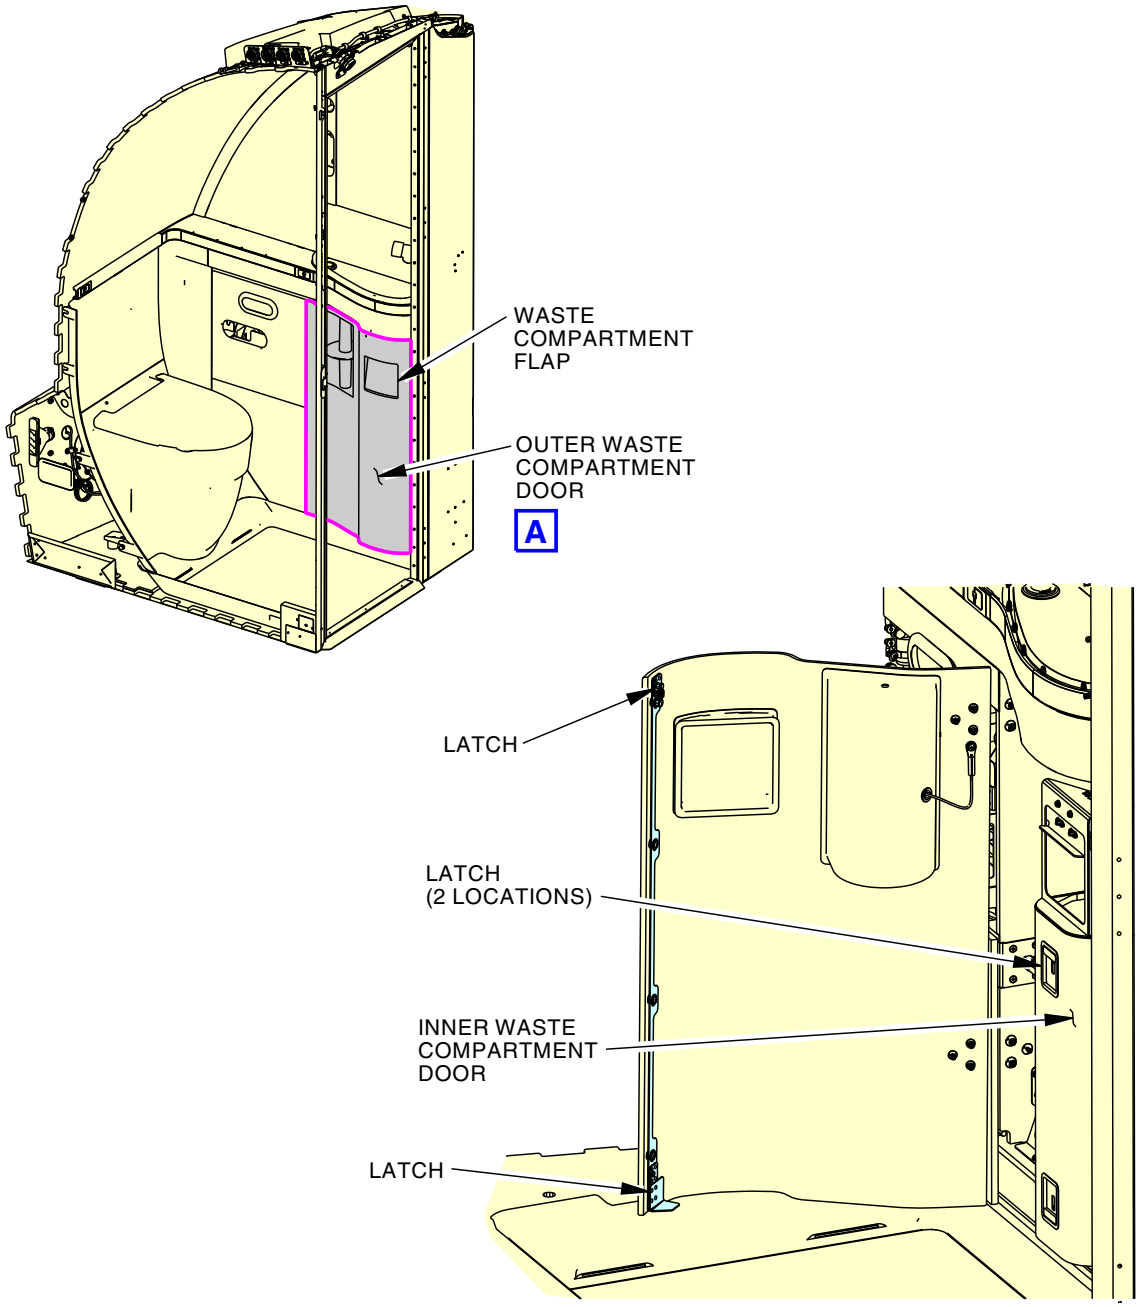

Lavatory Waste Compartment Inspection
Figure 601/25-40-08-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

MODULAR LAVATORY A - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Lavatory A Removal.

(2) Lavatory A Installation.

TASK 25-40-11-000-801

2. Lavatory A Removal

(Figure 401)

A. General

(1) Be careful during the removal of the lavatory to prevent damage to the galley mat. The galley mat is a cover on the floor panels in the galley and lavatory area.

B. References

Reference	Title
23-31-07-000-801	Pre-Recorded Announcement Machine (PRAM) Removal (P/B 401)
23-42-01-000-801	Attendant Handset Removal (P/B 401)
23-42-01-000-802	Attendant Handset Cord Removal (P/B 401)
23-42-01-000-803	Attendant Handset Cradle Removal (P/B 401)
23-42-03-000-801	Cabin Attendant LCD Control Panel Removal (P/B 401)
25-11-21-000-801	Flight Compartment Forward Ceiling Panel Removal (P/B 201)
25-21-30-020-801	Forward Entry Door Doorway Header Panel Removal (P/B 401)
25-21-31-000-801	Forward Entry Doorway Sidewall Lining Panel - Removal (P/B 401)
25-21-71-000-801	Lowered Ceiling Removal (P/B 401)
25-23-13-000-801	Attendant/Lavatory Service Unit Removal (P/B 401)
25-24-15-000-802	Forward Windscreen with Stowage - Removal (P/B 401)
25-24-31-000-801	Overhead Stowage Bin - Removal (P/B 401)
25-24-31-000-802	Overhead Stowage Bin Module - Removal (P/B 401)
25-25-12-000-801	Cabin Attendant Seat Removal (P/B 401)
26-14-01-000-801	Lavatory Smoke Detector Removal (P/B 401)
33-14-00-000-801	Dome Light - Removal (P/B 201)
33-51-01-960-802	Exit Sign - Light Assembly Replacement (P/B 201)
38-32-00-040-801	Toilet Deactivation (P/B 201)
38-32-01-000-802	Vacuum Toilet Assembly Removal (P/B 401)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
52-51-01-000-801	Flight Compartment Door Removal (P/B 401)

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Prepare for the Removal

SUBTASK 25-40-11-040-001

(1) Do this task: Toilet Deactivation, TASK 38-32-00-040-801.

SUBTASK 25-40-11-860-001

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
D	19	C01423	VACUUM WASTE
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	10	C00783	OXYGEN PASS LEFT
F	13	C00104	LAVATORY WATER HEATER A

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
C	6	C01583	ENTERTAINMENT PA SYS BAT
C	9	C00080	ENTERTAINMENT PA TAPE RPDR AC
D	4	C00082	COMMUNICATIONS PA AMPL BAT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	21	C00560	INTERPHONE POWER F/O DC 2
C	22	C00561	INTERPHONE POWER F/O BAT
C	23	C00239	INTERPHONE POWER CAPT DC 2
C	24	C00240	INTERPHONE POWER CAPT BAT
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 25-40-11-010-019

(3) To get access to the P91 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-11-040-002

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	9	C00138	WATER QTY IND
C	11	C01388	VACUUM WASTE CONT

This circuit breaker is inoperative and should remain open:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
E	11	C00413	BRT ENTRY LTS (INOP)

SUBTASK 25-40-11-010-001

(5) Do this task: Cabin Attendant LCD Control Panel Removal, TASK 23-42-03-000-801.

SUBTASK 25-40-11-010-002

(6) If it is applicable, remove the attendant's handset.

(a) Do this task: Attendant Handset Removal, TASK 23-42-01-000-801.

(b) Do this task: Attendant Handset Cord Removal, TASK 23-42-01-000-802.

(c) Do this task: Attendant Handset Cradle Removal, TASK 23-42-01-000-803.

SUBTASK 25-40-11-010-003

(7) Do this task: Cabin Attendant Seat Removal, TASK 25-25-12-000-801.

SUBTASK 25-40-11-010-004

(8) Do this task: Flight Compartment Door Removal, TASK 52-51-01-000-801.

SUBTASK 25-40-11-010-005

(9) Do this task: Dome Light - Removal, TASK 33-14-00-000-801.

SUBTASK 25-40-11-010-006

(10) Do this task: Flight Compartment Forward Ceiling Panel Removal, TASK 25-11-21-000-801.

SUBTASK 25-40-11-010-008

(11) If it is applicable, remove the fire axe from the flight compartment.

SUBTASK 25-40-11-010-018

(12) If it is necessary, remove the exit sign light assembly (TASK 33-51-01-960-802).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-11-010-009

(13) Do this task: Attendant/Lavatory Service Unit Removal, TASK 25-23-13-000-801.

NOTE: The Lav Service Unit (Oxygen box) must be removed before the lavatory can be moved because of the overhead structural frame.

SUBTASK 25-40-11-010-010

(14) Do this task: Lavatory Smoke Detector Removal, TASK 26-14-01-000-801.

SUBTASK 25-40-11-010-011

(15) Do this task: Lowered Ceiling Removal, TASK 25-21-71-000-801.

SUBTASK 25-40-11-010-023

(16) If it is necessary, do this task: Overhead Stowage Bin Module - Removal, TASK 25-24-31-000-802 or Overhead Stowage Bin - Removal, TASK 25-24-31-000-801.

SUBTASK 25-40-11-010-012

(17) Do this task: Forward Entry Door Doorway Header Panel Removal, TASK 25-21-30-020-801.

SUBTASK 25-40-11-010-013

(18) Do this task: Forward Entry Doorway Sidewall Lining Panel - Removal, TASK 25-21-31-000-801.

SUBTASK 25-40-11-010-014

(19) If it is applicable, do this task: Forward Windscreen with Stowage - Removal, TASK 25-24-15-000-802.

SUBTASK 25-40-11-010-017

(20) Do this task: Pre-Recorded Announcement Machine (PRAM) Removal, TASK 23-31-07-000-801.

(a) Pull the wire bundle out from the lavatory wall.

(b) If it is necessary, remove the connector.

(c) See Standard Wiring Practices Manual.

SUBTASK 25-40-11-870-001

(21) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-40-11-680-001

(22) Drain the water from the applicable lavatory equipment.

SUBTASK 25-40-11-010-015

(23) Do these steps to prepare the lavatory for the removal procedure:

(a) Remove the necessary trim panels from the lavatory to complete the task.

(b) Remove the necessary access panels from the lavatory to complete the task.

(c) Remove the necessary hose grommets from the lavatory to complete the task.

F. Lavatory A Removal

SUBTASK 25-40-11-020-001

(1) Disconnect the electrical connectors [2] above the lavatory [1].

SUBTASK 25-40-11-030-001

(2) Disconnect the ground connection from the lavatory [1].

(a) Remove the nut [3] and washer [4] from the ground stud [5] at the rear of the lavatory [1].

(b) Disconnect the ground strap [6] from the ground stud [5].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-11-020-002

(3) Disconnect the gasper air supply at the connection at the rear of the lavatory [1].

(a) Get access through the applicable access panel in the rear of the lavatory [1].

(b) Disconnect the gasper air connection [7] at the rear of the lavatory [1].

SUBTASK 25-40-11-020-003

(4) Disconnect the water supply at the connection at the rear of the lavatory [1].

(a) Get access through the applicable access panel in the rear of the lavatory [1].

(b) Disconnect the water supply connection [8] at the rear of the lavatory [1].

SUBTASK 25-40-11-020-004

(5) Disconnect the drain line at the connection at the rear of the lavatory [1].

(a) Get access through the applicable access panel in the rear of the lavatory [1].

(b) Loosen the clamp [9].

(c) Disconnect the drain line [10].

SUBTASK 25-40-11-020-005

(6) Disconnect the door flexible duct [11].

(a) Get access through the applicable access panel in the rear of the lavatory [1].

(b) Loosen the clamp [12] at the two ends of the door flexible duct [11].

(c) Remove the door flexible duct [11] from the lavatory [1].

SUBTASK 25-40-11-020-006

(7) Disconnect the toilet from the waste system tube through the applicable access panel.

SUBTASK 25-40-11-010-016

(8) If it is applicable, do this task: Vacuum Toilet Assembly Removal, TASK 38-32-01-000-802.

NOTE: The removal of the toilet is optional.

NOTE: Time can be saved if the toilet stays in the lavatory.

SUBTASK 25-40-11-020-007

(9) Remove tie rod [13] and tie rod [14].

(a) Remove the cotter pin [15], pin [16] and washer [17] at the two ends of tie rod [13] and tie rod [14].

(b) Remove tie rod [13] and tie rod [14] from the lavatory [1] and the airplane structure.

SUBTASK 25-40-11-020-013

(10) If it is necessary, remove the foam block [24] from the corner of the lavatory.

SUBTASK 25-40-11-020-008

(11) Remove the coverplate on the hard point fittings.

SUBTASK 25-40-11-020-009

(12) Remove the grease from the attachment fitting to get access to the fasteners, if it is necessary.

SUBTASK 25-40-11-020-010

(13) Remove the bolts [18] and the washers [19] at the four hard point fittings.


(a) If it is necessary, remove the shims [20] at the four hard point fittings.

SUBTASK 25-40-11-020-011

(14) Remove the lavatory [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

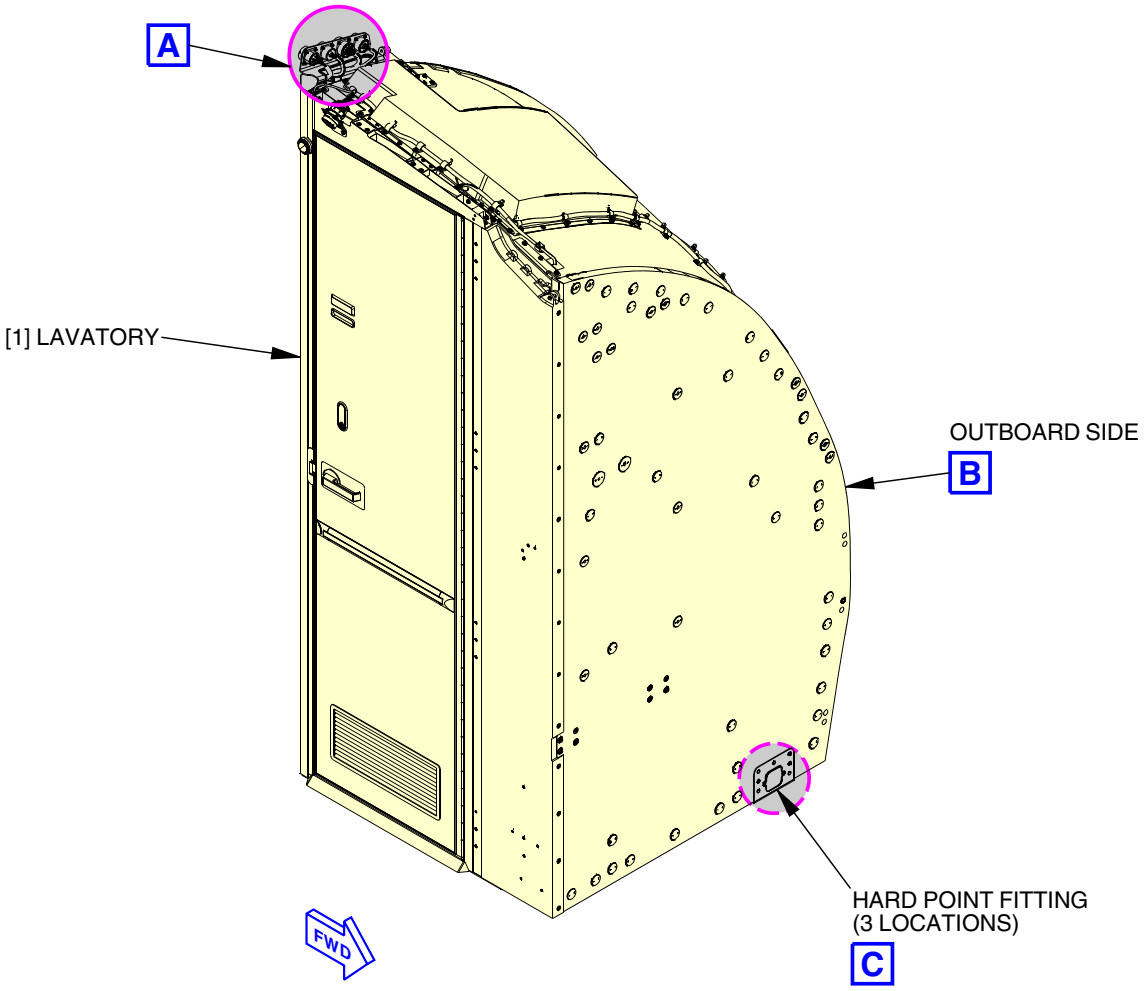


**LAVATORY A
(EXAMPLE)**

2411938 S00061529540_V4

**Lavatory A Installation
Figure 401/25-40-11-990-801 (Sheet 1 of 2)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

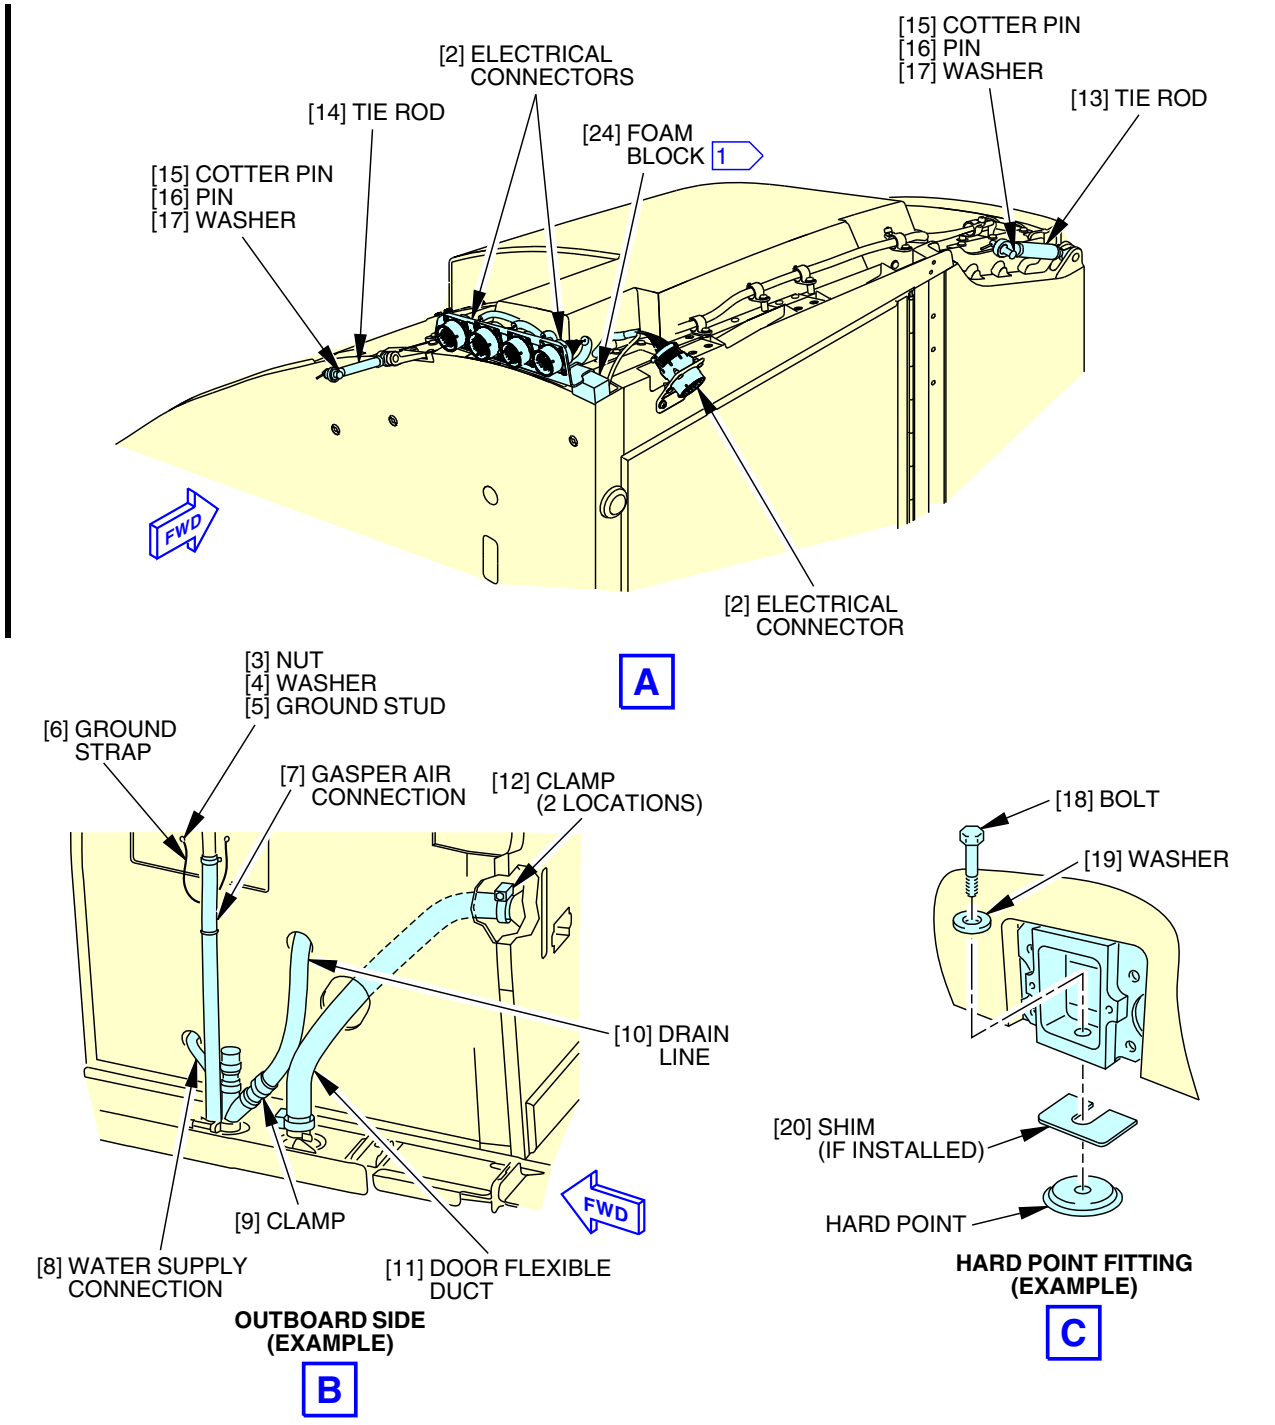

1 IF APPLICABLE

2411939 S00061529541_V4

Lavatory A Installation
Figure 401/25-40-11-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-40-11-400-801

3. Lavatory A Installation

(Figure 401)

A. References

Reference	Title
23-31-00-740-801	Passenger Address System - Operational Test (P/B 501)
23-31-07-400-801	Pre-Recorded Announcement Machine (PRAM) Installation (P/B 401)
23-42-01-400-801	Attendant Handset Cradle Installation (P/B 401)
23-42-01-400-802	Attendant Handset Cord Installation (P/B 401)
23-42-01-400-803	Attendant Handset Installation (P/B 401)
23-42-01-700-802	Attendant Handset Installation Test (P/B 501)
23-42-03-400-801	Cabin Attendant LCD Control Panel Installation (P/B 401)
25-11-21-400-801	Flight Compartment Forward Ceiling Panel Installation (P/B 201)
25-21-30-420-801	Forward Entry Door Doorway Header Panel Installation (P/B 401)
25-21-31-400-801	Forward Entry Doorway Sidewall Lining Panel - Installation (P/B 401)
25-21-71-400-801	Lowered Ceiling Installation (P/B 401)
25-23-13-400-801	Attendant/Lavatory Service Unit Installation (P/B 401)
25-24-15-400-802	Forward Windscreen with Stowage - Installation (P/B 401)
25-24-31-400-801	Overhead Stowage Bin - Installation (P/B 401)
25-24-31-400-802	Overhead Stowage Bin Module - Installation (P/B 401)
25-25-12-400-801	Cabin Attendant Seat Installation (P/B 401)
25-40-01-400-801	Lavatory Sealant - Installation (P/B 401)
26-14-00-730-801	Lavatory Smoke Detection - Smoke Test (P/B 501)
26-14-01-400-801	Lavatory Smoke Detector Installation (P/B 401)
33-14-00-400-801	Dome Light - Installation (P/B 201)
33-20-00-710-801	Passenger Compartment Lights - Operational Test (P/B 501)
33-51-01-960-802	Exit Sign - Light Assembly Replacement (P/B 201)
38-10-00-600-801	Potable Water System Disinfectant (P/B 201)
38-32-00-420-801	Toilet Activation (P/B 201)
38-32-00-700-802	Toilet - Operational Test (P/B 501)
38-32-01-400-802	Vacuum Toilet Assembly Installation (P/B 401)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
38-42-00-800-802	Potable Water System - Activation (P/B 201)
52-51-01-400-801	Flight Compartment Door Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
A00027	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 60
A00930	Adhesive - Silicone Rubber, 1 Part, RTV	BAC5010 Type 109
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Lavatory	25-40-11-01-062	PTF ALL
15	Cotter pin	25-40-51-01-050	PTF ALL

D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Lavatory A Installation

SUBTASK 25-40-11-110-001

(1) Clean the galley mat on the floor in the galley area with solvent, B00083.

NOTE: The galley mat is a cover on the floor panels in the galley and lavatory area.

SUBTASK 25-40-11-350-001

(2) If it is necessary, repair the galley mat.

SUBTASK 25-40-11-420-001

(3) Move the lavatory [1] inboard.

SUBTASK 25-40-11-420-002

CAUTION

REMOVE AND INSTALL THE LAVATORY CAREFULLY. YOU CAN CAUSE DAMAGE TO THE GALLEY MAT.

(4) Put the lavatory [1] on the hard point fittings until the lavatory floor is parallel with the airplane floor.

SUBTASK 25-40-11-420-003

(5) If it is necessary, install a shim [20] at the forward hard points.

(a) Make sure that clearance between the top of the hard point fittings and the bottom of the lavatory fittings is 0.01 in. (0.25 mm).

(b) Make sure that the shim's thickness does not exceed 0.10 in. (2.54 mm).

SUBTASK 25-40-11-420-004

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(6) Install the lavatory fasteners.

(a) Apply Cor-Ban 27L Compound, G50237, to the bolts [18] and washers [19].

(b) Install the bolts [18] and washers [19] at the four hard point fittings.

(c) Tighten the bolts [18] to 121 in-lb (13.7 N·m) - 129 in-lb (14.6 N·m).

1) Make sure that a layer of Cor-Ban 27L Compound, G50237, seals the connection.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-11-400-001

(7) Do this task: Lavatory Sealant - Installation, TASK 25-40-01-400-801.

(a) Install coverplates, the threshold (if removed), and kickstrips (if it is applicable).

SUBTASK 25-40-11-420-018

(8) If removed, install the foam block [24] to the corner of the lavatory with adhesive, A00027.

SUBTASK 25-40-11-820-001

(9) Attach tie rod [13] and tie rod [14] to the fittings on the lavatory [1] and the airplane structure.

(a) Adjust tie rod [13] and tie rod [14] to the correct length.

1) After the last tie rod adjustment is completed, make sure that the inspection holes at the two ends of tie rod [13] and tie rod [14] are blocked. Also make sure that the threads show in the inspection holes.

2) Tighten the jamnuts with your fingers.

3) If the pin-to-pin length of the tie rod [14] is more than 4 in. (10.2 cm), install a second jamnut on the tie rod.

4) Make sure that tie rod [13] and tie rod [14] are installed with the jamnut at the lower end.

(b) Install the pins [16] and washers [17] at the two ends of tie rod [13] and tie rod [14].

(c) Lock the pins [16] and washers [17] at the two ends of each tie rod with the new cotter pin [15].

SUBTASK 25-40-11-390-001

(10) Install a layer of adhesive, A00027, or adhesive, A00930, between the edge of the lavatory and the airplane floor.

SUBTASK 25-40-11-420-005

(11) Connect the water supply at the connection at the rear of the lavatory [1].

(a) Get access through the applicable access panel in the rear of the lavatory [1].

(b) Connect the water supply connection [8] at the rear of the lavatory [1].

SUBTASK 25-40-11-420-006

(12) Connect the drain line [10] at the connection at the rear of the lavatory [1].

(a) Through the applicable rear access panel, connect the drain line [10].

(b) Tighten the clamp [9] at the end of the drain line [10].

SUBTASK 25-40-11-420-007

(13) Connect the gasper air supply at the connection at the rear of the lavatory [1].

(a) Get access through the applicable access panel in the rear of the lavatory [1].

(b) Connect the gasper air connection [7] at the rear of the lavatory [1].

SUBTASK 25-40-11-420-008

(14) Connect the door flexible duct [11].

(a) Through the applicable rear access panel, connect the door flexible duct [11].

(b) Tighten the clamps [12] at the two ends of the door flexible duct [11].

SUBTASK 25-40-11-410-001

(15) If it is applicable, do this task: Vacuum Toilet Assembly Installation, TASK 38-32-01-400-802.

SUBTASK 25-40-11-420-009

(16) Connect the toilet to the waste system tube through the applicable access panel.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-11-420-010

(17) Connect the ground connection to the lavatory [1].

(a) Connect the ground strap [6] to the ground stud [5] on the rear of the lavatory [1].

(b) Install the nut [3] and washer [4] on the ground stud [5].

(c) Measure the resistance of the static ground from the ground stud [5] on the lavatory [1] to the airplane ground stud.

(d) Make sure that the resistance is 0.0025 ohm (2.5 milliohms) or less.

SUBTASK 25-40-11-420-011

(18) Connect the electrical connectors [2] in the ceiling above the lavatory [1].

G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-40-11-420-013

(1) Do this task: Pre-Recorded Announcement Machine (PRAM) Installation, TASK 23-31-07-400-801.

(a) Put the wire bundle for the Pre-Recorded Announcement Machine (PRAM) through the lavatory wall.

(b) If it is necessary, reinstall (re-pin) the connector.

(c) See Standard Wiring Practices Manual.

SUBTASK 25-40-11-410-002

(2) Install the lavatory hose grommets removed in the removal task.

SUBTASK 25-40-11-790-002

(3) Do the leak check of the lavatory water connections.

(a) Do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

(b) Open the water faucets in the lavatory and let the water flow for 2 minutes.

(c) Close the water faucets.

(d) Keep the pressure for at least 5 minutes.

(e) Do a visual check to make sure that there are no leaks at the water connections.

(f) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-40-11-410-018

(4) Do these steps to put the lavatory back to the serviceable condition:

(a) Install the lavatory access panels removed in the removal task.

(b) Install the lavatory trim panels removed in the removal task.

SUBTASK 25-40-11-670-001

(5) Do this task: Potable Water System Disinfectant, TASK 38-10-00-600-801.

SUBTASK 25-40-11-410-003

(6) If it is applicable, do this task: Forward Windscreen with Stowage - Installation, TASK 25-24-15-400-802.

SUBTASK 25-40-11-410-004

(7) Do this task: Forward Entry Doorway Sidewall Lining Panel - Installation, TASK 25-21-31-400-801.

SUBTASK 25-40-11-410-005

(8) Do this task: Forward Entry Door Doorway Header Panel Installation, TASK 25-21-30-420-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-11-420-012

(9) If it is necessary, do this task: Overhead Stowage Bin - Installation, TASK 25-24-31-400-801 or Overhead Stowage Bin Module - Installation, TASK 25-24-31-400-802.

SUBTASK 25-40-11-410-006

(10) Do this task: Lowered Ceiling Installation, TASK 25-21-71-400-801.

SUBTASK 25-40-11-410-007

(11) Do this task: Lavatory Smoke Detector Installation, TASK 26-14-01-400-801.

SUBTASK 25-40-11-410-008

(12) Do this task: Attendant/Lavatory Service Unit Installation, TASK 25-23-13-400-801.

SUBTASK 25-40-11-410-009

(13) Do this task: Flight Compartment Door Installation, TASK 52-51-01-400-801.

SUBTASK 25-40-11-410-010

(14) Do this task: Dome Light - Installation, TASK 33-14-00-400-801.

SUBTASK 25-40-11-410-011

(15) Do this task: Flight Compartment Forward Ceiling Panel Installation, TASK 25-11-21-400-801.

SUBTASK 25-40-11-410-017

(16) If removed, install and test the exit sign light assembly (TASK 33-51-01-960-802).

SUBTASK 25-40-11-410-013

(17) If it is applicable, install the fire axe in the flight compartment.

SUBTASK 25-40-11-410-014

(18) Do this task: Cabin Attendant Seat Installation, TASK 25-25-12-400-801.

SUBTASK 25-40-11-410-015

(19) If it is applicable, install the attendants handset.

(a) Do this task: Attendant Handset Cradle Installation, TASK 23-42-01-400-801.

(b) Do this task: Attendant Handset Cord Installation, TASK 23-42-01-400-802.

(c) Do this task: Attendant Handset Installation, TASK 23-42-01-400-803.

SUBTASK 25-40-11-410-016

(20) Do this task: Cabin Attendant LCD Control Panel Installation, TASK 23-42-03-400-801.

SUBTASK 25-40-11-860-004

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(21) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	9	C00138	WATER QTY IND
C	11	C01388	VACUUM WASTE CONT

This circuit breaker is inoperative and should remain open:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
E	11	C00413	BRT ENTRY LTS (INOP)

SUBTASK 25-40-11-410-021

(22) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-40-11-860-002

(23) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	11	C00250	PASS CABIN LIGHTING EMER CHGR FWD
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
D	19	C01423	VACUUM WASTE
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	10	C00783	OXYGEN PASS LEFT
F	13	C00104	LAVATORY WATER HEATER A

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
C	6	C01583	ENTERTAINMENT PA SYS BAT
C	9	C00080	ENTERTAINMENT PA TAPE RPDR AC
D	4	C00082	COMMUNICATIONS PA AMPL BAT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	21	C00560	INTERPHONE POWER F/O DC 2
C	22	C00561	INTERPHONE POWER F/O BAT
C	23	C00239	INTERPHONE POWER CAPT DC 2

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	24	C00240	INTERPHONE POWER CAPT BAT
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

H. Lavatory A Installation Test

SUBTASK 25-40-11-440-001

(1) Do this task: Toilet Activation, TASK 38-32-00-420-801.

SUBTASK 25-40-11-710-001

(2) Do this task: Lavatory Smoke Detection - Smoke Test, TASK 26-14-00-730-801.

SUBTASK 25-40-11-710-002

(3) If it is applicable, do this task: Attendant Handset Installation Test, TASK 23-42-01-700-802.

SUBTASK 25-40-11-710-003

(4) Do this task: Passenger Address System - Operational Test, TASK 23-31-00-740-801.

SUBTASK 25-40-11-710-004

(5) Do this task: Passenger Compartment Lights - Operational Test, TASK 33-20-00-710-801.

SUBTASK 25-40-11-710-005

(6) Do this task: Toilet - Operational Test, TASK 38-32-00-700-802.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

MODULAR LAVATORY D - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Lavatory D removal

(2) Lavatory D installation.

TASK 25-40-14-000-801

2. Lavatory D Removal

(Figure 401)

A. References

Reference	Title
23-42-01-000-801	Attendant Handset Removal (P/B 401)
23-42-01-000-802	Attendant Handset Cord Removal (P/B 401)
23-42-01-000-803	Attendant Handset Cradle Removal (P/B 401)
25-21-24-000-801	Aft Door Doorway Header Panel Removal (P/B 401)
25-21-25-020-801	Aft Entry and Service Doorways Sidewall Lining Panel - Removal (P/B 401)
25-21-71-000-801	Lowered Ceiling Removal (P/B 401)
25-22-00-000-801	Passenger Seat Removal (P/B 401)
25-25-12-000-801	Cabin Attendant Seat Removal (P/B 401)
26-14-01-000-801	Lavatory Smoke Detector Removal (P/B 401)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-32-00-040-801	Toilet Deactivation (P/B 201)
38-32-01-000-801	Toilet Shroud Removal (P/B 401)
38-32-01-000-802	Vacuum Toilet Assembly Removal (P/B 401)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)

B. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left

C. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

D. Prepare for the Removal

SUBTASK 25-40-14-040-001

(1) Deactivate the lavatory toilet (TASK 38-32-00-040-801).

SUBTASK 25-40-14-860-001

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
D	19	C01423	VACUUM WASTE
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	10	C00783	OXYGEN PASS LEFT
F	14	C01073	LAVATORY WATER HEATER D

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
C	6	C01583	ENTERTAINMENT PA SYS BAT
D	4	C00082	COMMUNICATIONS PA AMPL BAT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	21	C00560	INTERPHONE POWER F/O DC 2
C	22	C00561	INTERPHONE POWER F/O BAT
C	23	C00239	INTERPHONE POWER CAPT DC 2
C	24	C00240	INTERPHONE POWER CAPT BAT
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 25-40-14-010-013

(3) To get access to the P9 panel, open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-40-14-040-002



WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Open these circuit breakers and install safety tags:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	9	C00138	WATER QTY IND
C	11	C01388	VACUUM WASTE CONT

This circuit breaker is inoperative and should remain open:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
E	11	C00413	BRT ENTRY LTS (INOP)

SUBTASK 25-40-14-020-011

(5) If it is necessary, remove the equipment or furnishings that are attached to the lavatory [1].

SUBTASK 25-40-14-010-001

(6) If it is necessary, remove the attendant handset.

(a) Remove the attendant handset (TASK 23-42-01-000-801).

(b) Remove the attendant handset cord (TASK 23-42-01-000-802).

(c) Remove the attendant handset cradle (TASK 23-42-01-000-803).

SUBTASK 25-40-14-010-003

(7) Remove the lavatory smoke detector (TASK 26-14-01-000-801).

SUBTASK 25-40-14-020-012

(8) If it is applicable, remove stowage equipment.

SUBTASK 25-40-14-010-004

(9) Remove the lowered ceiling (TASK 25-21-71-000-801).

SUBTASK 25-40-14-010-005

(10) Remove the aft doorway header panel (TASK 25-21-24-000-801).

SUBTASK 25-40-14-010-006

(11) Remove the aft entry/service doorway sidewall lining panel (TASK 25-21-25-020-801).

SUBTASK 25-40-14-010-007

(12) If it is necessary, remove the last row of passenger seats (TASK 25-22-00-000-801).

SUBTASK 25-40-14-010-012

(13) If it is necessary, remove the attendant's seat (TASK 25-25-12-000-801).

SUBTASK 25-40-14-010-008

(14) If it is necessary, remove the floor proximity light assembly (TASK 33-51-14-960-802).

SUBTASK 25-40-14-870-001

(15) Deactivate the potable water system (TASK 38-42-00-800-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-14-680-001

(16) Drain all of the water from the lavatory equipment.

SUBTASK 25-40-14-010-009

(17) Remove only the necessary items that follow from the lavatory.

(a) Remove the step pad [2].

(b) If it is applicable, remove the lavatory door.

(c) Remove the trim panels.

(d) Remove the hose grommets.

E. Lavatory D Removal

SUBTASK 25-40-14-020-001

(1) Disconnect the components installed on the top of the lavatory [1].

(a) Disconnect the electrical connectors [13].

(b) If it is necessary, install a jumper wire between pins 29 and 30 on the D14372 connector.

NOTE: The jumper wire turns off the emergency exit lights.

(c) Remove the nut [3] and washer [4] from the ground stud [5].

(d) Remove the nut [8] and washer [9] from the ground stud [10].

(e) Disconnect the ends of the ground strap [6] from the ground stud [5] and ground stud [10].

(f) Disconnect the gasper air connection [7].

(g) Remove the quick-release pin [11] at each end of the tie rod [14].

(h) Remove the tie rod [14].

SUBTASK 25-40-14-020-013

(2) If it is applicable, remove the toilet shroud (TASK 38-32-01-000-801).

SUBTASK 25-40-14-020-014

(3) Remove the vacuum toilet assembly (TASK 38-32-01-000-802).

SUBTASK 25-40-14-020-005

(4) Disconnect the water supply from the lavatory [1].

(a) Remove the access panel on the rear of the lavatory [1].

(b) Remove the insulation from the water supply connection [21].

(c) Disconnect the water supply connection [21] from the lavatory [1].

SUBTASK 25-40-14-020-006

(5) Disconnect the drain line [19].

(a) Remove the access panel on the rear of the lavatory [1].

(b) Loosen the clamp [20] on the drain line [19].

(c) Disconnect the drain line [19] from the lavatory [1].

SUBTASK 25-40-14-020-007

(6) Remove the screws that attach the cover plates to the hard point fittings [17].

SUBTASK 25-40-14-020-008

(7) Remove the sealant from the hard point fittings [17] to get access to the fasteners.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-14-020-009

(8) Remove the bolts [15], washers [16], and the shims [18] (if installed) from the hard point fittings [17].

SUBTASK 25-40-14-020-010


CAUTION

REMOVE AND INSTALL THE LAVATORY CAREFULLY. YOU CAN CAUSE DAMAGE TO THE GALLEY MAT.

(9) Carefully remove the lavatory [1].


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

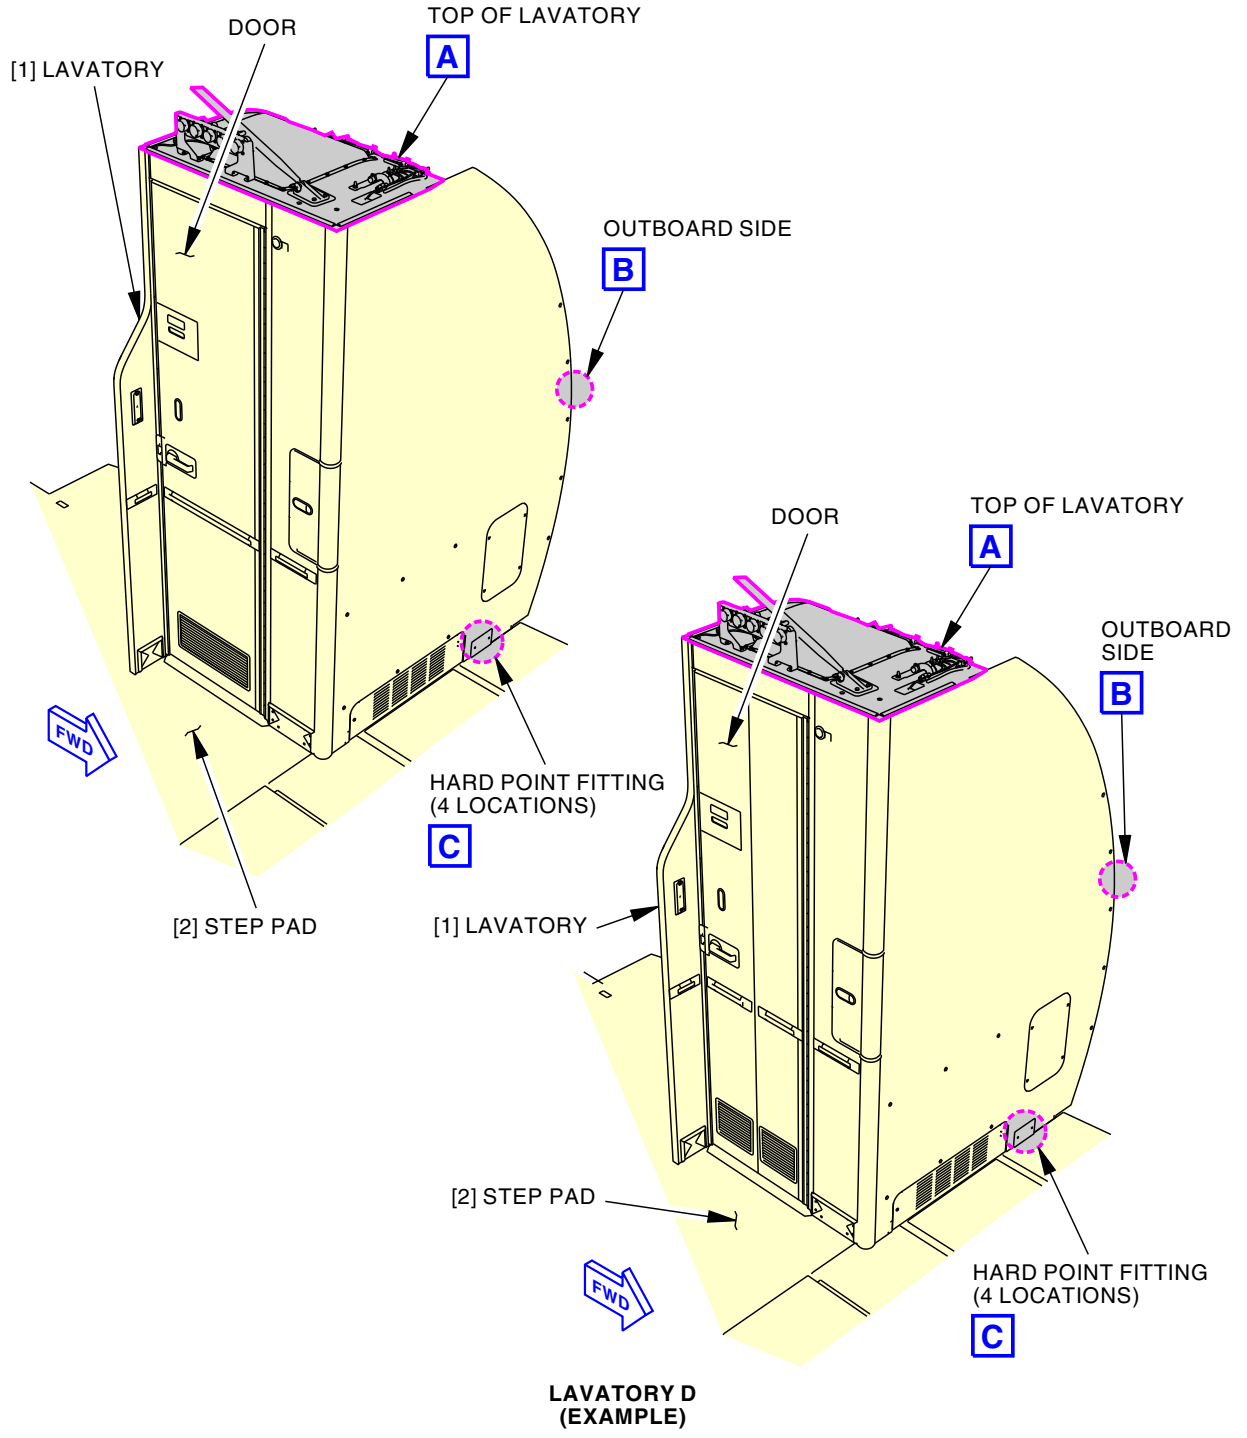

Lavatory D Installation
Figure 401/25-40-14-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

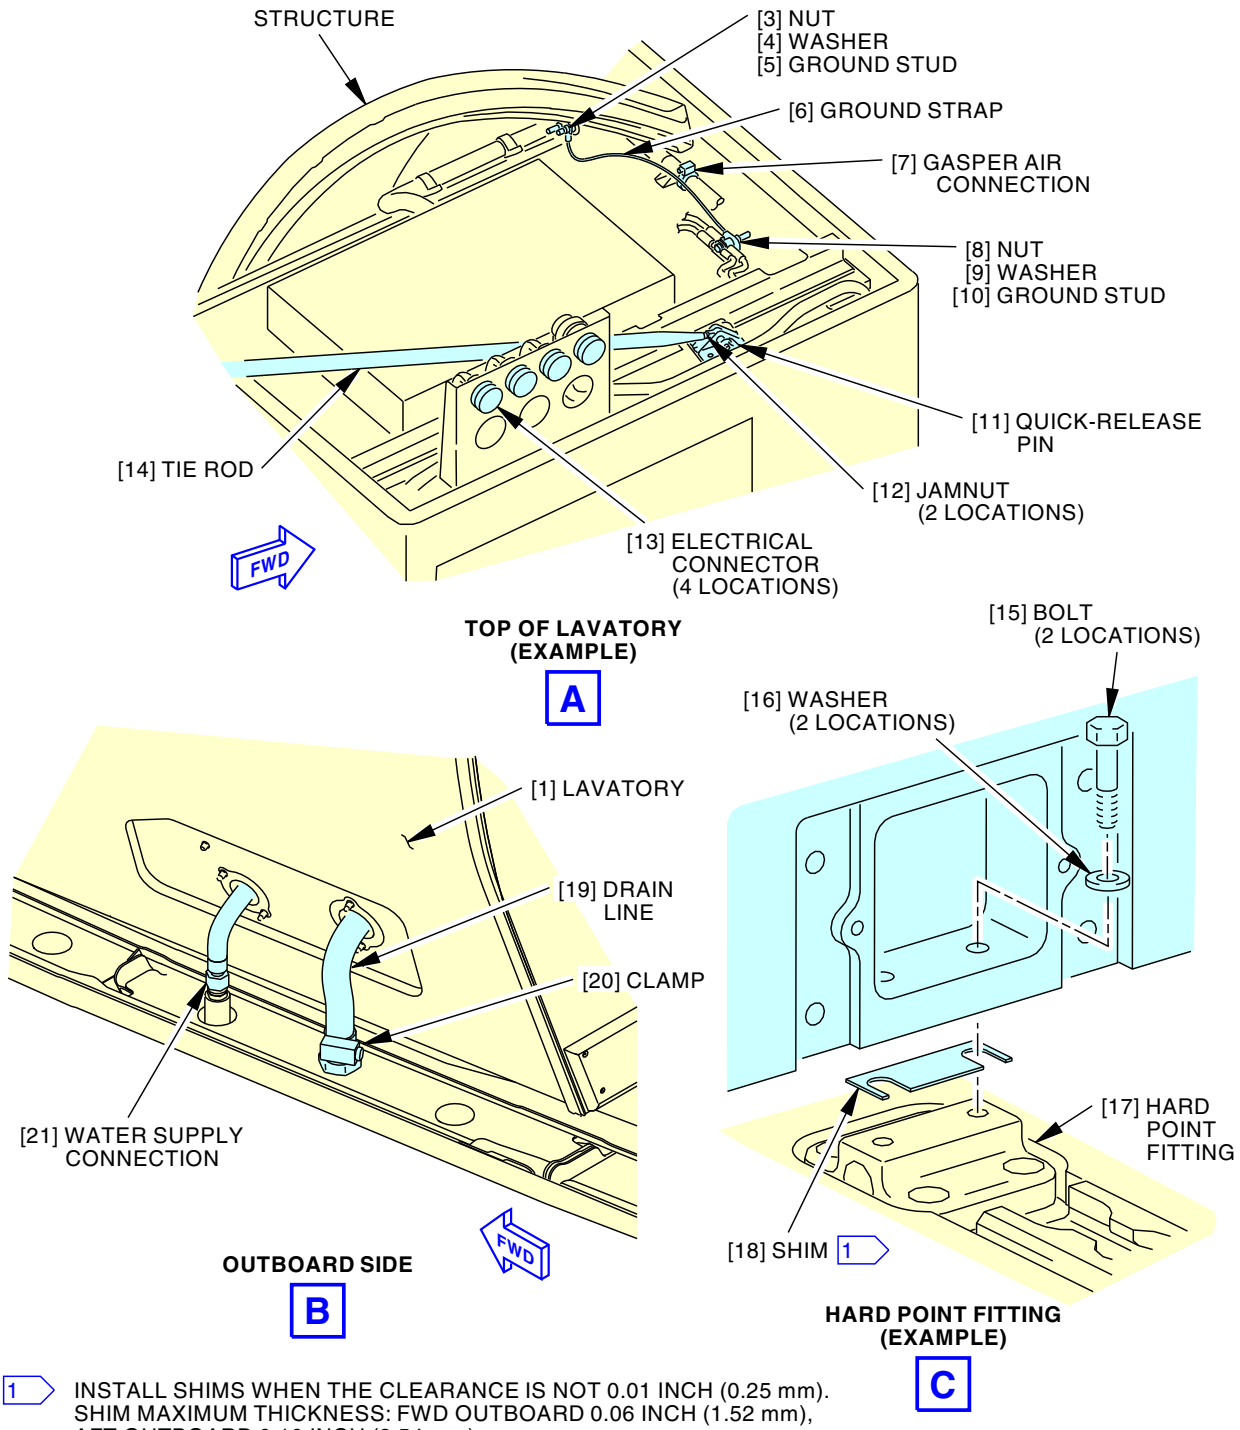

1 INSTALL SHIMS WHEN THE CLEARANCE IS NOT 0.01 INCH (0.25 mm). SHIM MAXIMUM THICKNESS: FWD OUTBOARD 0.06 INCH (1.52 mm), AFT OUTBOARD 0.10 INCH (2.54 mm).

2411941 S00061529547_V2

Lavatory D Installation
Figure 401/25-40-14-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-40-14-400-801

3. Lavatory D Installation

(Figure 401)

A. References

Reference	Title
23-31-00-740-801	Passenger Address System - Operational Test (P/B 501)
23-42-01-400-801	Attendant Handset Cradle Installation (P/B 401)
23-42-01-400-802	Attendant Handset Cord Installation (P/B 401)
23-42-01-400-803	Attendant Handset Installation (P/B 401)
23-42-01-700-802	Attendant Handset Installation Test (P/B 501)
25-21-24-400-801	Aft Door Doorway Header Panel Installation (P/B 401)
25-21-25-420-801	Aft Entry and Service Doorways Sidewall Lining Panel - Installation (P/B 401)
25-21-71-400-801	Lowered Ceiling Installation (P/B 401)
25-22-00-400-801	Passenger Seat Installation (P/B 401)
25-23-13-400-801	Attendant/Lavatory Service Unit Installation (P/B 401)
25-25-12-400-801	Cabin Attendant Seat Installation (P/B 401)
25-40-01-400-801	Lavatory Sealant - Installation (P/B 401)
26-14-00-730-801	Lavatory Smoke Detection - Smoke Test (P/B 501)
26-14-01-400-801	Lavatory Smoke Detector Installation (P/B 401)
33-20-00-710-801	Passenger Compartment Lights - Operational Test (P/B 501)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-10-00-600-801	Potable Water System Disinfectant (P/B 201)
38-32-00-420-801	Toilet Activation (P/B 201)
38-32-00-700-802	Toilet - Operational Test (P/B 501)
38-32-01-400-801	Toilet Shroud Installation (P/B 401)
38-32-01-400-802	Vacuum Toilet Assembly Installation (P/B 401)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
38-42-00-800-802	Potable Water System - Activation (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
C00528	Compound - Corrosion Preventive, Petroleum Hot Application (Soft Film)	MIL-C-11796 Class III
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38
G50327	Tape - Advanced Insulation Blanket (use until stock depleted)	BMS5-157 Type I Class 1 Grade B Composition MPVF
G50408	Foam - Flexible Polyvinylidene Fluoride	BMS8-371
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Lavatory	25-40-14-01-021	PTF ALL
		25-40-14-13X-475	PTF ALL

D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left

E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

F. Lavatory D Installation

SUBTASK 25-40-14-110-001

(1) Clean the galley mat with solvent, B00083.

SUBTASK 25-40-14-350-001

(2) Repair the galley mat if damage shows.

SUBTASK 25-40-14-420-001

CAUTION

REMOVE AND INSTALL THE LAVATORY CAREFULLY. YOU CAN CAUSE DAMAGE TO THE GALLEY MAT.

(3) Carefully move the lavatory [1] inboard.

SUBTASK 25-40-14-420-002

(4) Align the lavatory [1] on the four hard point fittings [17] until the lavatory floor is parallel with the airplane floor.

SUBTASK 25-40-14-420-003

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(5) Measure the clearance between the top of the four hard point fittings [17] and the bottom of the lavatory [1] fittings to make sure that the clearance is 0.01 in. (0.25 mm).

(a) Install shims [18] on the outboard hard point fitting [17] if the clearance is not correct.

1) At the forward outboard hard point fitting [17] the shim [18] maximum thickness is 0.06 in. (1.52 mm).

2) At the aft outboard hard point fitting [17] the shim [18] maximum thickness is 0.10 in. (2.54 mm).

3) Apply Cor-Ban 27L Compound, G50237 (preferred), or compound, C00528 (alternate), to the mating surfaces of the shims [18] and hard point fittings [17].

4) Install shims [18] as necessary to get the correct clearance of 0.01 in. (0.25 mm).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-14-420-004

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(6) Install the lavatory [1] fasteners to attach the lavatory [1] to the airplane structure.

(a) Apply sealant, A00247 (preferred), or Cor-Ban 27L Compound, G50237 (alternate), or compound, C00528 (alternate), to the two bolts [15] and washers [16] for the four hard point fittings [17].

1) Apply a sufficient quantity of compound for squeeze-out.

(b) Loosely install the two bolts [15] and washers [16] at the four hard point fittings [17].

NOTE: This will prevent the lavatory from movement. The bolts will be tightened correctly after connecting the lines and tie rod.

SUBTASK 25-40-14-420-005

(7) Connect the water supply connection [21] to the lavatory [1].

(a) Get access through the access panel in the rear of the lavatory [1].

(b) Connect the water supply connection [21] to the lavatory [1] connection.

SUBTASK 25-40-14-420-006

(8) Install the insulation foam on the water supply connection [21].

(a) Apply insulation foam, G50408 around the water supply connection [21].

1) Start the insulation foam, G50408 overlap below the water supply connection [21].

2) Continue to wrap the insulation foam, G50408 around the fitting with a 0.2 +0.3 / -0.0 in. (5.1 +7.6 / -0.0 mm) overlap for each turn.

3) Complete the insulation foam, G50408 wrap 2.0 in. (50.8 mm) above the end of the fitting.

NOTE: In areas where the fitting is bent to 90.0 degrees, small clearances between the insulation foam and the fitting are permitted. The insulation can be applied in segments.

SUBTASK 25-40-14-420-015

(9) Install the insulation tape, G50327 or tape, G51202 to cover the insulation foam around the water supply connection [21].

(a) Apply insulation tape, G50327 or tape, G51202 around the insulation foam, G50408.

1) Start the insulation tape, G50327 or tape, G51202 overlap before the insulation foam, G50408 begins.

2) Continue to wind the insulation tape, G50327 or tape, G51202 around the insulation foam, G50408 with a 0.2 +0.3 / -0.0 in. (5.1 +7.6 / -0.0 mm) overlap for each turn. Stop after the insulation foam, G50408 ends.

3) Make sure that the insulation tape, G50327 or tape, G51202 seals the ends of the insulation foam, G50408 completely.

a) Make sure that the insulation foam under the insulation tape does not show.

SUBTASK 25-40-14-420-007

(10) Connect the drain line [19] installed at the rear of the lavatory [1].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Get access to the access panel on the rear of the lavatory [1].

(b) Connect the drain line [19] to the lavatory [1].

(c) Tighten the clamp [20] on the drain line [19].

SUBTASK 25-40-14-820-001

(11) Connect the tie rod [14] to the lavatory [1] and airplane structure.

(a) Adjust the tie rod [14] to the correct length before installation.

1) Make sure that the inspection hole at the two ends of the tie rod [14] are blocked and that the threads are visible in the inspection holes.

2) Tighten the two jamnuts [12] finger tight.

(b) Install the two quick-release pins [11] to attach the tie rod [14] to the lavatory [1].

SUBTASK 25-40-14-420-009

(12) Connect the ground strap [6] to the ground stud [5] and ground stud [10] installed at the top of the lavatory [1] (View A).

(a) Install the nut [8] and washer [9] to connect the ground strap [6] to the ground stud [10].

(b) Install the nut [3] and washer [4] to connect the ground strap [6] to the ground stud [5].

(c) Do a resistance check of the static ground from the ground stud [5] on the lavatory [1] to the airplane ground stud.

(d) Make sure that the resistance is a maximum of 0.0025 Ohms.

SUBTASK 25-40-14-420-010

(13) Remove the jumper wire from pins 29 and 30 on connector D11066, if installed.

SUBTASK 25-40-14-420-016

(14) Connect the electrical connectors [13] on the top of the lavatory [1].

SUBTASK 25-40-14-420-014

(15) Connect the gasper air connection [7] to the connection on the top of the lavatory [1].

SUBTASK 25-40-14-420-011



WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(16) Do these steps at the four hard point fittings [17] on the lavatory [1] floor.

(a) Tighten the bolts [15] on the four hard point fittings [17] to 35 in-lb (4 N·m).

1) Make sure that the squeeze-out of compound is continuous and visible.

(b) Apply Cor-Ban 27L Compound, G50237 (preferred), or compound, C00528 (alternate), to the four hard point fittings [17].

(c) Install the screws to attach the four cover plates on the hard point fittings [17].

SUBTASK 25-40-14-400-001

(17) Seal the lavatory floor and the four hard point fittings [17] (TASK 25-40-01-400-801).

SUBTASK 25-40-14-420-012

(18) Install the vacuum toilet assembly and the toilet shroud, if applicable.

(a) Install the toilet shroud (TASK 38-32-01-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Install the vacuum toilet assembly (TASK 38-32-01-400-802).

G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-40-14-410-002

(1) Install the necessary items removed from the lavatory [1].

(a) Install the hose grommets.

(b) If applicable, install the lavatory door.

SUBTASK 25-40-14-790-002

(2) Do a leak check of the lavatory water connections.

(a) Do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

(b) Open the water faucets in the lavatory and let the water flow for 2 minutes.

(c) Close the water faucets.

(d) Keep the pressure for at least 5 minutes.

(e) Do a visual check to make sure that there are no leaks at the water connections.

(f) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-40-14-410-011

(3) Install the remaining necessary items removed from the lavatory [1]:

(a) Close the access panels.

(b) Install the trim panels.

(c) Install the step pad [2].

SUBTASK 25-40-14-670-001

(4) Clean the potable water system (TASK 38-10-00-600-801).

SUBTASK 25-40-14-410-003

(5) Install the floor proximity light assembly, if necessary (TASK 33-51-14-960-802).

SUBTASK 25-40-14-410-010

(6) If it is necessary, install the attendant's seat (TASK 25-25-12-400-801).

SUBTASK 25-40-14-010-011

(7) Install the last row of passenger seat, if removed (TASK 25-22-00-400-801).

SUBTASK 25-40-14-410-004

(8) Install the aft entry/service doorway sidewall lining panel (TASK 25-21-25-420-801).

SUBTASK 25-40-14-410-005

(9) Install the aft doorway header panel (TASK 25-21-24-400-801).

SUBTASK 25-40-14-410-006

(10) Install the lower ceiling panel (TASK 25-21-71-400-801).

SUBTASK 25-40-14-410-007

(11) Install the smoke detector (TASK 26-14-01-400-801).

SUBTASK 25-40-14-410-008

(12) Install the attendant/lavatory service unit (TASK 25-23-13-400-801).

SUBTASK 25-40-14-420-018

(13) If applicable, put the stowage equipment back to the stowage area.

SUBTASK 25-40-14-410-009

(14) Install the attendant handset, if removed.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Do this task: Attendant Handset Cradle Installation, TASK 23-42-01-400-801.

(b) Do this task: Attendant Handset Cord Installation, TASK 23-42-01-400-802.

(c) Do this task: Attendant Handset Installation, TASK 23-42-01-400-803.

SUBTASK 25-40-14-420-017

(15) If necessary, install the equipment or furnishings that are attached to the lavatory [1].

SUBTASK 25-40-14-860-003

WARNING

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

WARNING

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(16) Remove the safety tags and close these circuit breakers:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
C	9	C00138	WATER QTY IND
C	11	C01388	VACUUM WASTE CONT

This circuit breaker is inoperative and should remain open:

Power Distribution Panel Number 1, P91

Row	Col	Number	Name
E	11	C00413	BRT ENTRY LTS (INOP)

SUBTASK 25-40-14-410-013

(17) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

SUBTASK 25-40-14-860-002

(18) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
A	10	C01357	PASS CABIN LIGHTING EMER CHGR L AFT
B	10	C01358	PASS CABIN LIGHTING EMER CHGR R AFT
C	8	C04072	PASS CABIN SIGNS FASTEN SEAT BELT R
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
D	19	C01423	VACUUM WASTE
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	10	C00783	OXYGEN PASS LEFT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	14	C01073	LAVATORY WATER HEATER D

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
C	6	C01583	ENTERTAINMENT PA SYS BAT
D	4	C00082	COMMUNICATIONS PA AMPL BAT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	21	C00560	INTERPHONE POWER F/O DC 2
C	22	C00561	INTERPHONE POWER F/O BAT
C	23	C00239	INTERPHONE POWER CAPT DC 2
C	24	C00240	INTERPHONE POWER CAPT BAT
D	21	C00084	INTPH AND WARN
D	22	C00086	AUDIO F/O
D	23	C00083	AUDIO CAPT
D	24	C00085	AUDIO OBS

SUBTASK 25-40-14-440-001

(19) Activate the toilet system (TASK 38-32-00-420-801).

H. Lavatory D Installation Test

SUBTASK 25-40-14-710-001

(1) Do a test of the lavatory smoke detector (TASK 26-14-00-730-801).

SUBTASK 25-40-14-710-002

(2) Do a test of the attendant handset (TASK 23-42-01-700-802).

SUBTASK 25-40-14-710-003

(3) Do a test of the passenger address system (TASK 23-31-00-740-801).

SUBTASK 25-40-14-710-004

(4) Do a test of the passenger compartment light (TASK 33-20-00-710-801).

SUBTASK 25-40-14-710-005

(5) Do a test of the operation of the toilet (TASK 38-32-00-700-802).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

MODULAR LAVATORY E - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Lavatory E removal

(2) Lavatory E installation.

TASK 25-40-15-000-801

2. Lavatory E Removal

(Figure 401)

A. References

Reference	Title
23-42-01-000-801	Attendant Handset Removal (P/B 401)
23-42-01-000-802	Attendant Handset Cord Removal (P/B 401)
23-42-01-000-803	Attendant Handset Cradle Removal (P/B 401)
25-21-24-000-801	Aft Door Doorway Header Panel Removal (P/B 401)
25-21-25-020-801	Aft Entry and Service Doorways Sidewall Lining Panel - Removal (P/B 401)
25-21-71-000-801	Lowered Ceiling Removal (P/B 401)
25-22-00-000-801	Passenger Seat Removal (P/B 401)
25-25-12-000-801	Cabin Attendant Seat Removal (P/B 401)
26-14-01-000-801	Lavatory Smoke Detector Removal (P/B 401)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-32-00-040-801	Toilet Deactivation (P/B 201)
38-32-01-000-801	Toilet Shroud Removal (P/B 401)
38-32-01-000-802	Vacuum Toilet Assembly Removal (P/B 401)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)

B. Location Zones

Zone	Area
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

C. Prepare for the Removal

SUBTASK 25-40-15-040-001

(1) Deactivate the toilet system (TASK 38-32-00-040-801).

SUBTASK 25-40-15-860-001

(2) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT
F	15	C01096	LAVATORY WATER HEATER E

SUBTASK 25-40-15-010-001

(3) If necessary, remove the attendant handset.

(a) Do this task: Attendant Handset Removal, TASK 23-42-01-000-801.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Do this task: Attendant Handset Cord Removal, TASK 23-42-01-000-802.

(c) Do this task: Attendant Handset Cradle Removal, TASK 23-42-01-000-803.

SUBTASK 25-40-15-010-003

(4) Remove the lavatory smoke detector (TASK 26-14-01-000-801).

SUBTASK 25-40-15-010-013

(5) If necessary, remove the equipment or furnishings that are attached to the lavatory.

SUBTASK 25-40-15-010-004

(6) Remove the lowered ceiling (TASK 25-21-71-000-801).

SUBTASK 25-40-15-010-005

(7) Remove the aft doorway header panel (TASK 25-21-24-000-801).

SUBTASK 25-40-15-010-006

(8) Remove the aft entry/service doorway sidewall lining panel (TASK 25-21-25-020-801).

SUBTASK 25-40-15-010-007

(9) Remove the last row of passenger seats, if necessary (TASK 25-22-00-000-801).

SUBTASK 25-40-15-010-008

(10) Remove the cabin attendant seat, if necessary (TASK 25-25-12-000-801).

SUBTASK 25-40-15-010-009

(11) Remove the floor proximity light assembly, if necessary (TASK 33-51-14-960-802).

SUBTASK 25-40-15-870-001

(12) Deactivate the potable water system (TASK 38-42-00-800-801).

SUBTASK 25-40-15-680-001

(13) Drain all of the water from the lavatory equipment.

SUBTASK 25-40-15-010-010

(14) Remove only the necessary items that follow from the lavatory [1].

(a) Remove the trim panels.

(b) Remove the access panels to get access to the drain line and water supply connection.

(c) Remove the hose grommets.

SUBTASK 25-40-15-020-011

(15) If necessary, remove the door.

D. Lavatory E Removal

SUBTASK 25-40-15-020-001

(1) Disconnect the components installed in the top area of the lavatory [1] (View A).

(a) Disconnect the electrical connector [2].

(b) Remove the nut [3] and washer [4] that attach the ground strap [6] to the ground stud [5].

(c) Disconnect the ground strap [6] from the ground stud [5].

(d) Disconnect the gasper air connection [7].

SUBTASK 25-40-15-020-012

(2) Remove the toilet shroud, if applicable (TASK 38-32-01-000-801).

SUBTASK 25-40-15-020-013

(3) Remove the vacuum toilet assembly (TASK 38-32-01-000-802).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-40-15-020-004

(4) Disconnect the water supply connection [8] installed at the rear of the lavatory [1].

(a) Get access to the water supply connection [8] through the rear of the lavatory [1].

(b) Remove the insulation from around the water supply connection [8].

(c) Disconnect the water supply connection [8] from the lavatory [1].

SUBTASK 25-40-15-020-005

(5) Disconnect the drain line [10] installed at the rear of the lavatory [1].

(a) Get access to the drain line [10] through the access panel in the rear of the lavatory [1].

(b) Loosen the clamp [9] on the drain line [10].

(c) Disconnect the drain line [10] from the lavatory [1].

SUBTASK 25-40-15-020-006

(6) Remove the tie rod [13] from the top of the lavatory [1].

(a) Remove the two quick-release pins [11] from the ends of the tie rod [13].

(b) Remove the tie rod [13].

SUBTASK 25-40-15-020-007

(7) Remove the screws that attach the four cover plates to the four hard point fittings [17].

SUBTASK 25-40-15-020-008

(8) Remove the sealant from the hard point fittings [17] to get access to the bolts [14].

SUBTASK 25-40-15-020-009

(9) Remove the two bolts [14], washers [15] and the shim [16] (If installed) from the four hard point fittings [17].

SUBTASK 25-40-15-020-010


CAUTION

REMOVE AND INSTALL THE LAVATORY CAREFULLY. YOU CAN CAUSE DAMAGE TO THE GALLEY MAT.

(10) Carefully remove the lavatory [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

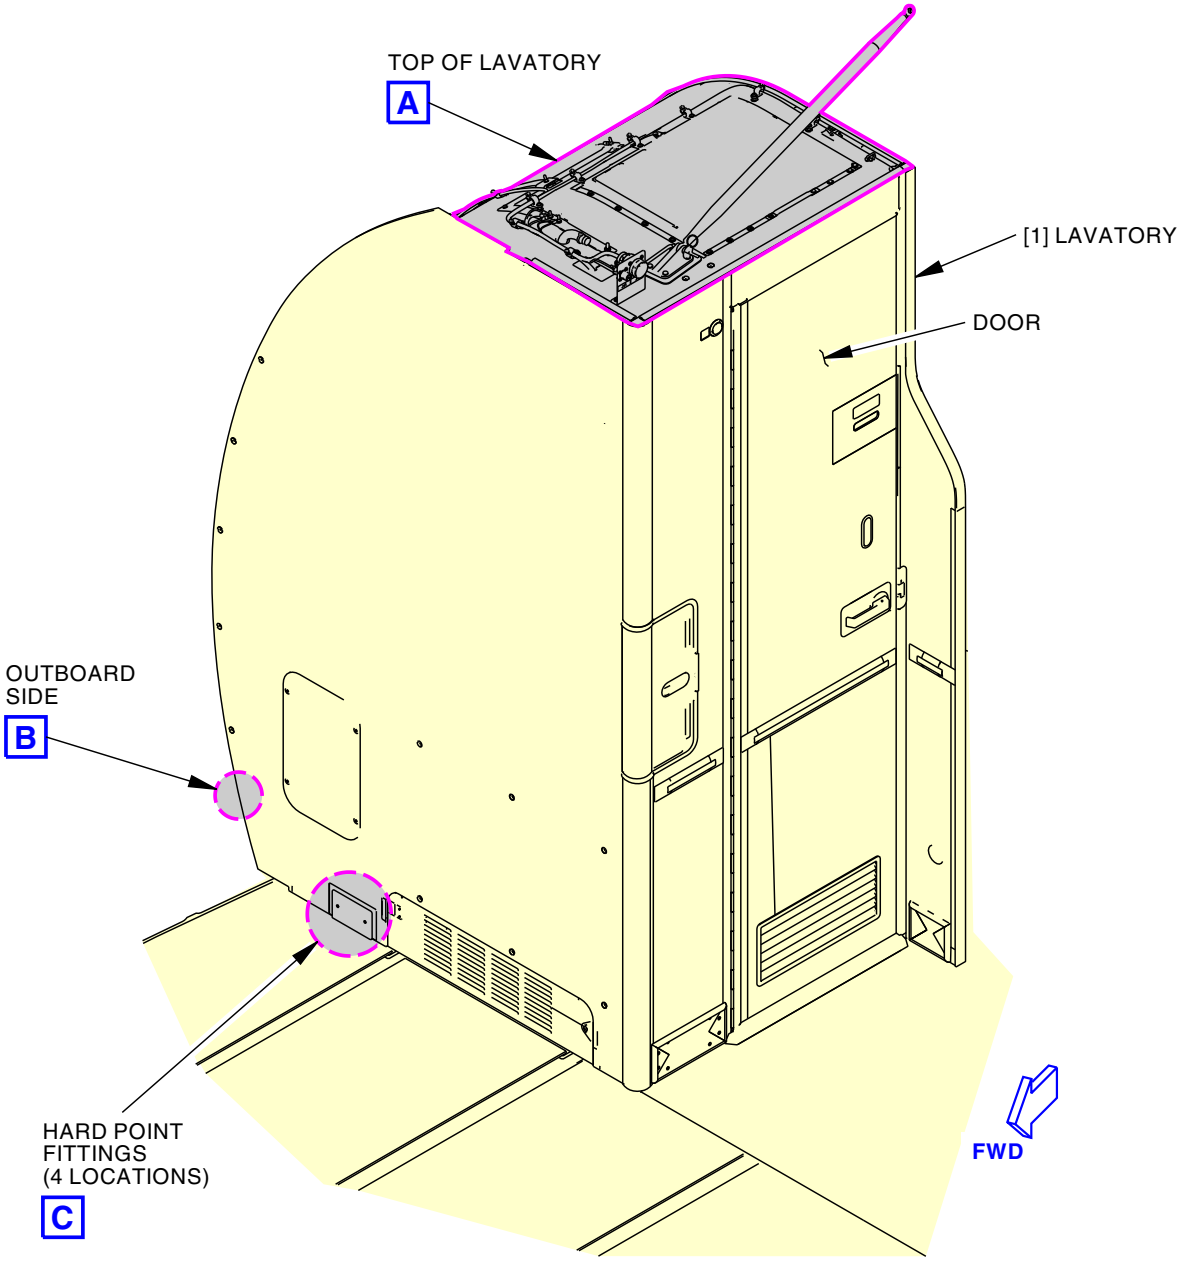


LAVATORY E
(EXAMPLE)

2411942 S00061529552_V3

Lavatory E Installation
Figure 401/25-40-15-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

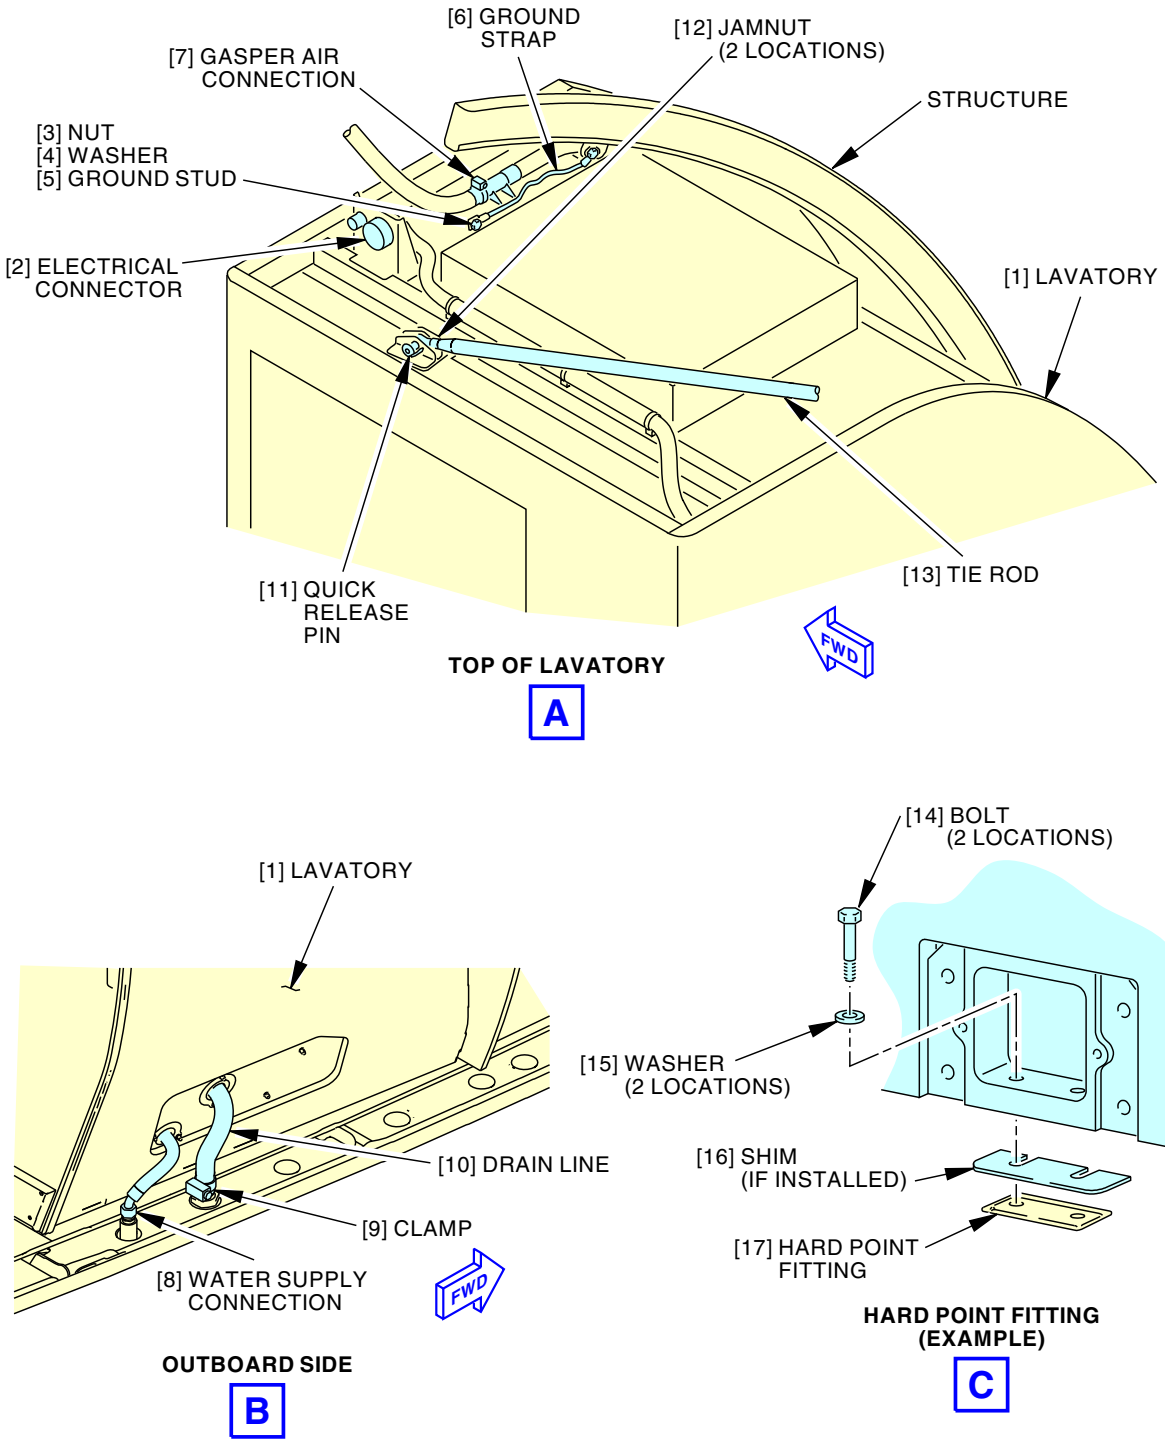

Lavatory E Installation
Figure 401/25-40-15-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-40-15-400-801

3. Lavatory E Installation

(Figure 401)

A. References

Reference	Title
23-31-00-740-801	Passenger Address System - Operational Test (P/B 501)
23-42-01-400-801	Attendant Handset Cradle Installation (P/B 401)
23-42-01-400-802	Attendant Handset Cord Installation (P/B 401)
23-42-01-400-803	Attendant Handset Installation (P/B 401)
23-42-01-700-802	Attendant Handset Installation Test (P/B 501)
25-21-24-400-801	Aft Door Doorway Header Panel Installation (P/B 401)
25-21-25-420-801	Aft Entry and Service Doorways Sidewall Lining Panel - Installation (P/B 401)
25-21-71-400-801	Lowered Ceiling Installation (P/B 401)
25-22-00-400-801	Passenger Seat Installation (P/B 401)
25-23-13-400-801	Attendant/Lavatory Service Unit Installation (P/B 401)
25-25-12-400-801	Cabin Attendant Seat Installation (P/B 401)
25-40-01-400-801	Lavatory Sealant - Installation (P/B 401)
26-14-00-730-801	Lavatory Smoke Detection - Smoke Test (P/B 501)
26-14-01-400-801	Lavatory Smoke Detector Installation (P/B 401)
33-20-00-710-801	Passenger Compartment Lights - Operational Test (P/B 501)
33-51-14-960-802	Floor Proximity Light - Light Assembly Replacement (P/B 201)
38-10-00-600-801	Potable Water System Disinfectant (P/B 201)
38-32-00-420-801	Toilet Activation (P/B 201)
38-32-00-700-802	Toilet - Operational Test (P/B 501)
38-32-01-400-801	Toilet Shroud Installation (P/B 401)
38-32-01-400-802	Vacuum Toilet Assembly Installation (P/B 401)
38-42-00-800-801	Potable Water System - Deactivation (P/B 201)
38-42-00-800-802	Potable Water System - Activation (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
C00528	Compound - Corrosion Preventive, Petroleum Hot Application (Soft Film)	MIL-C-11796 Class III
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38
G50327	Tape - Advanced Insulation Blanket (use until stock depleted)	BMS5-157 Type I Class 1 Grade B Composition MPVF
G50408	Foam - Flexible Polyvinylidene Fluoride	BMS8-371
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Lavatory	25-40-15-01-012	PTF ALL

D. Location Zones

Zone	Area
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

E. Lavatory E Installation

SUBTASK 25-40-15-110-001

(1) Clean the galley mat with solvent, B00083.

SUBTASK 25-40-15-350-001

(2) Repair the galley mat if damage shows.

SUBTASK 25-40-15-420-001

CAUTION

REMOVE AND INSTALL THE LAVATORY CAREFULLY. YOU CAN CAUSE DAMAGE TO THE GALLEY MAT.

(3) Carefully move the lavatory [1] inboard.

SUBTASK 25-40-15-420-002

(4) Align the lavatory [1] on the four hard point fitting [17] until the lavatory floor is parallel with the airplane floor.

SUBTASK 25-40-15-420-003

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(5) Measure the clearance between the top of the four hard point fittings [17] and the bottom of the lavatory [1] fittings to make sure that the clearance is 0.01 in. (0.25 mm).

(a) Install the shims [16] on the outboard hard point fitting [17] if the clearance is not correct.

1) At the forward outboard hard point fitting [17] the shim [16] maximum thickness is 0.06 in. (1.52 mm).

2) At the aft outboard hard point fitting [17] the shim [16] maximum thickness is 0.10 in. (2.54 mm).

3) Apply Cor-Ban 27L Compound, G50237 (preferred), or compound, C00528 (alternate), to the mating surfaces of the shims [16] and hard point fittings [17].

4) Install shims [16] as necessary to get the correct clearance of 0.01 in. (0.25 mm).

SUBTASK 25-40-15-420-004

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(6) Install the fasteners to attach the lavatory [1] to the airplane structure.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Apply sealant, A00247 (preferred), or Cor-Ban 27L Compound, G50237 (alternate), or compound, C00528 (alternate), to the two bolts [14] and washers [15] for the four hard point fittings [17].

1) Apply a sufficient quantity of compound for squeeze-out.

(b) Loosely install the two bolts [14] and washers [15] at the four hard point fittings [17].

NOTE: This will prevent the lavatory from movement. The bolts will be tightened correctly after connecting the lines and tie rod.

SUBTASK 25-40-15-420-012

(7) Connect the water supply connection [8] to the lavatory [1].

(a) Get access through the access panel in the rear of the lavatory [1].

(b) Connect the water supply connection [8] to the lavatory [1] connection.

SUBTASK 25-40-15-420-013

(8) Install the insulation foam on the water supply connection [8].

(a) Apply insulation foam, G50408 around the water supply connection [8].

1) Start the insulation foam, G50408 overlap below the water supply connection [8].

2) Continue to wrap the insulation foam, G50408 around the fitting with a 0.2 +0.3 / -0.0 in. (5.1 +7.6 / -0.0 mm) overlap for each turn.

3) Complete the insulation foam, G50408 wrap 2.0 in. (50.8 mm) above the end of the fitting.

NOTE: In areas where the fitting is bent to 90.0 degrees, small clearances between the insulation foam and the fitting are permitted. The insulation can be applied in segments.

SUBTASK 25-40-15-420-014

(9) Install the insulation tape, G50327 or tape, G51202 to cover the insulation foam around the water supply connection [8].

(a) Apply insulation tape, G50327 or tape, G51202 around the insulation foam, G50408.

1) Start the insulation tape, G50327 or tape, G51202 overlap before the insulation foam, G50408 begins.

2) Continue to wind the insulation tape, G50327 or tape, G51202 around the insulation foam, G50408 with a 0.2 +0.3 / -0.0 in. (5.1 +7.6 / -0.0 mm) overlap for each turn. Stop after the insulation foam, G50408 ends.

3) Make sure that the insulation tape, G50327 or tape, G51202 seals the ends of the insulation foam, G50408 completely.

4) Make sure that the insulation foam under the insulation tape does not show.

SUBTASK 25-40-15-420-015

(10) Connect the drain line [10] installed at the rear of the lavatory [1].

(a) Get access to the access panel on the rear of the lavatory [1].

(b) Connect the drain line [10] to the lavatory [1].

(c) Tighten the clamp [9] on the drain line [10].

SUBTASK 25-40-15-820-001

(11) Connect the tie rod [13] to the lavatory [1] and the airplane structure.

(a) Adjust the tie rod [13] to the correct length before installation.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the inspection hole at the two ends of the tie rod [13] are blocked and that the threads are visible in the inspection holes.

2) Tighten the two jamnuts [12] finger tight.

(b) Install the two quick-release pins [11] to attach the tie rod [13] to the lavatory [1] and airplane structure.

SUBTASK 25-40-15-420-016

(12) Connect the ground strap [6] to the ground studs [5] installed at the top of the lavatory [1].

(a) Install the nut [3] and washer [4] to connect the ground strap [6] to the ground stud [5] (2 locations).

(b) Do a resistance check of the static ground from the ground stud [5] on the lavatory [1] to the airplane ground stud.

(c) Make sure that the resistance is a maximum of 0.0025 Ohms.

SUBTASK 25-40-15-420-017

(13) Connect the electrical connectors [2] on the top of the lavatory [1].

SUBTASK 25-40-15-420-018

(14) Connect the gasper air connection [7] to the connection on the top of the lavatory [1].

SUBTASK 25-40-15-420-019

WARNING

USE NITRILE GLOVES FOR SKIN PROTECTION WHEN YOU USE COR-BAN 27L. IF IT GETS ON YOUR SKIN, IMMEDIATELY REMOVE IT WITH WATER. IF THIS MATERIAL GETS IN YOUR EYES, IMMEDIATELY FLUSH YOUR EYES WITH WATER. GET MEDICAL AID. THIS MATERIAL CONTAINS FLAMMABLE AGENTS WHICH CAN CAUSE INJURIES TO PERSONNEL.

(15) Do these steps at the four hard point fittings [17] on the lavatory [1] floor.

(a) Torque the bolts [14] to 35 in-lb (4 N·m) on the four hard point fittings [17].

1) Make sure that the squeeze-out of compound is continuous and visible.

(b) Apply Cor-Ban 27L Compound, G50237 (preferred), or compound, C00528 (alternate), to the four hard point fittings [17].

(c) Install the screws to attach the four cover plates on the four hard point fittings [17].

SUBTASK 25-40-15-390-002

(16) Seal the lavatory floor and the four hard point fitting [17] (TASK 25-40-01-400-801).

SUBTASK 25-40-15-410-001

(17) Install the vacuum toilet assembly and the toilet shroud, if applicable.

(a) Install the vacuum toilet assembly (TASK 38-32-01-400-802).

(b) Install the toilet shroud (TASK 38-32-01-400-801).

F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-40-15-410-013

(1) Install the necessary items removed from the lavatory [1]:

(a) Install the hose grommets.

(b) If applicable, install the lavatory door.

SUBTASK 25-40-15-790-003

(2) Do the leak check of the lavatory water connections.

(a) Do this task: Potable Water System - Activation, TASK 38-42-00-800-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Open the water faucets in the lavatory and let the water flow for 2 minutes.

(c) Close the water faucets.

(d) Keep the pressure for at least 5 minutes.

(e) Do a visual check to make sure that there are no leaks at the water connections.

(f) Do this task: Potable Water System - Deactivation, TASK 38-42-00-800-801.

SUBTASK 25-40-15-410-012

(3) Install the remaining necessary items removed from the lavatory [1]:

(a) Close the access panels.

(b) Install the trim panels.

SUBTASK 25-40-15-670-002

(4) Disinfect the potable water system (TASK 38-10-00-600-801).

SUBTASK 25-40-15-410-003

(5) Install the floor proximity light assembly, if applicable (TASK 33-51-14-960-802).

SUBTASK 25-40-15-410-004

(6) Install the attendant seat, if necessary (TASK 25-25-12-400-801).

SUBTASK 25-40-15-010-012

(7) Install the last row of passenger seats, if removed (TASK 25-22-00-400-801).

SUBTASK 25-40-15-410-005

(8) Install the aft entry and service doorways sidewall lining panel (TASK 25-21-25-420-801).

SUBTASK 25-40-15-410-006

(9) Install the aft door doorway header panel (TASK 25-21-24-400-801).

SUBTASK 25-40-15-410-007

(10) Install the lowered ceiling (TASK 25-21-71-400-801).

SUBTASK 25-40-15-410-008

(11) Install the lavatory smoke detector (TASK 26-14-01-400-801).

SUBTASK 25-40-15-410-011

(12) If necessary, install the equipment or furnishings that are attached to the lavatory.

SUBTASK 25-40-15-410-009

(13) Install the attendant/lavatory service unit (TASK 25-23-13-400-801).

SUBTASK 25-40-15-410-010

(14) Install the attendants handset, if applicable.

(a) Install the attendant handset cradle (TASK 23-42-01-400-801).

(b) Install the attendant handset cord (TASK 23-42-01-400-802).

(c) Install the attendant handset (TASK 23-42-01-400-803).

SUBTASK 25-40-15-860-002

(15) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
D	10	C01217	PASS CAB SIGNS LAV OCC SIGN
E	12	C01125	LAVATORY SMOKE
E	14	C01648	LAVATORY MIRROR LIGHT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	15	C01096	LAVATORY WATER HEATER E

G. Lavatory E Installation Test

SUBTASK 25-40-15-440-001

(1) Activate the toilet system (TASK 38-32-00-420-801).

SUBTASK 25-40-15-710-001

(2) Do a smoke test of the lavatory smoke detection system (TASK 26-14-00-730-801).

SUBTASK 25-40-15-710-002

(3) Do a test of the attendant handset (TASK 23-42-01-700-802).

SUBTASK 25-40-15-710-003

(4) Do an operational test of the passenger address system (TASK 23-31-00-740-801).

SUBTASK 25-40-15-710-004

(5) Do an operational test of the passenger compartment lights (TASK 33-20-00-710-801).

SUBTASK 25-40-15-710-005

(6) Do an operational test of the toilet (TASK 38-32-00-700-802).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

ESCAPE ROPES AND LIFE LINES - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A removal of the flight compartment escape rope

(2) An installation of the flight compartment escape rope

(3) An inspection of the flight compartment escape rope

(4) A removal of the emergency exit door life line

(5) An installation of the emergency exit door life line

(6) An inspection of the emergency exit door life line.

TASK 25-61-10-000-801

2. Flight Compartment Escape Rope Removal

(Figure 201)

A. General

(1) There are two escape ropes (lanyards) installed the flight compartment. The escape rope are installed in the forward ceiling above the captain and first officer's seat.

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Remove the Escape Rope

SUBTASK 25-61-10-010-001

(1) Use the latch to open the escape rope [1] door.

SUBTASK 25-61-10-020-001

(2) Remove the escape rope [1] from the stowage compartment.

(a) Open the Velcro hook and loop strap.

(b) Pull the escape rope [1] from the stowage compartment.

(c) Remove the cotter pin [3].


NOTE: The escape rope anchor plate [5] is attached to the lanyard ring [2] at the end of the escape rope [1].

SUBTASK 25-61-10-020-002


(3) Pull the anchor fitting [4] against the spring [6]. Disengage the anchor fitting [4] from the anchor plate [5].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

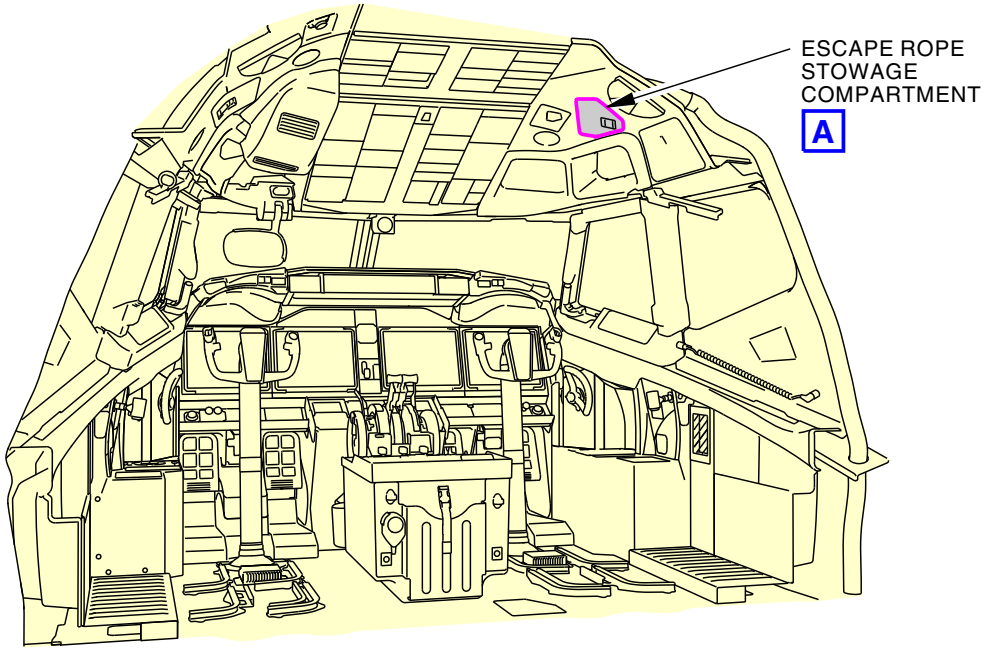

FLIGHT COMPARTMENT

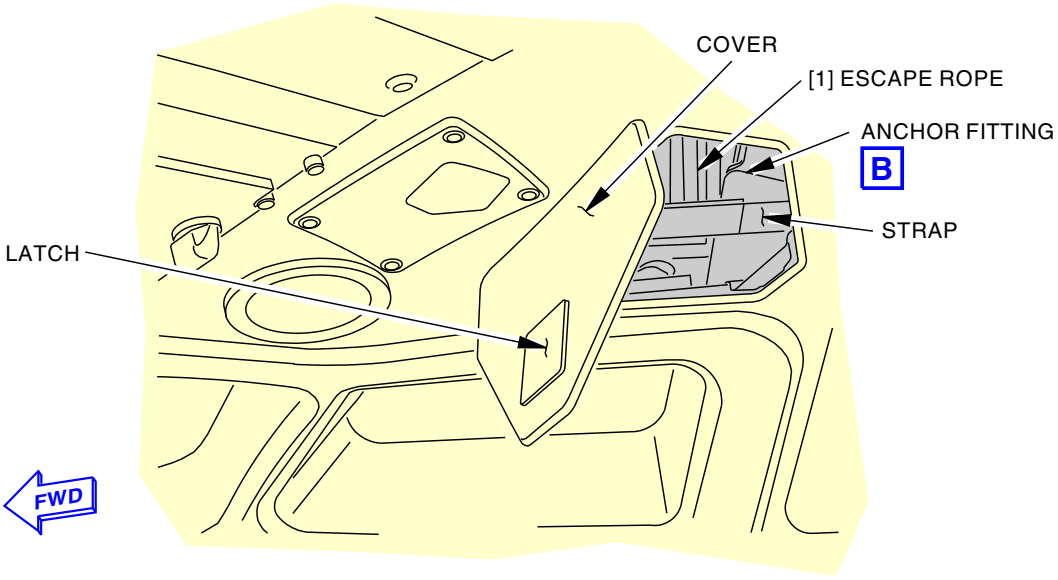


ESCAPE ROPE STOWAGE COMPARTMENT
(RIGHT SIDE IS SHOWN, LEFT SIDE IS OPPOSITE)

A

2535460 S0000600961_V2

Escape Rope Installation
Figure 201/25-61-10-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

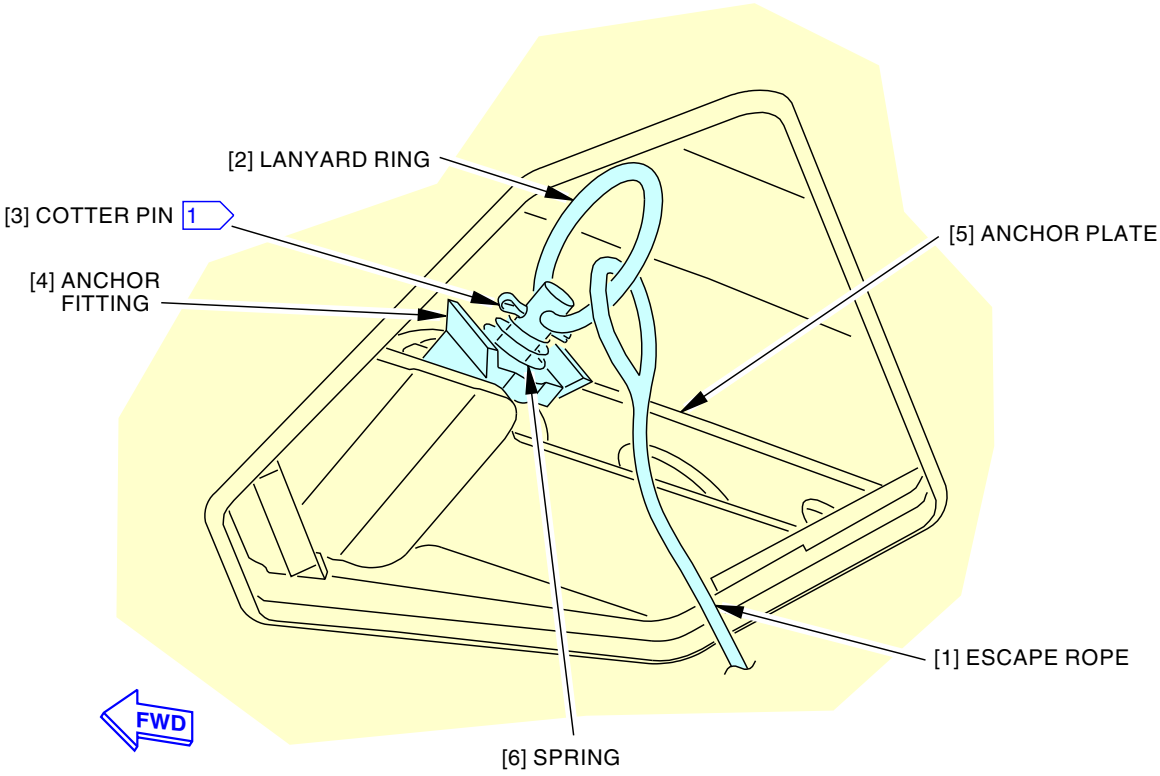

ANCHOR FITTING
(DOOR NOT SHOWN)

B

1 INSTALL THE COTTER PIN WHEN THE LANYARD RING HAS A HOLE ON THE SHAFT NEAR THE SPRING.

2535462 S0000600963_V2

Escape Rope Installation
Figure 201/25-61-10-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-61-10-400-801

3. Flight Compartment Escape Rope Installation

(Figure 201)

A. General

(1) There are two escape ropes (lanyards) installed the flight compartment. The escape ropes are installed in the forward ceiling above the captain and first officer's seat.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Escape rope	25-61-10-01-010	PTF ALL
		25-61-10-01-055	PTF ALL

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Install the Escape Rope

SUBTASK 25-61-10-420-001

(1) Install the anchor fitting [4] in the anchor plate [5].

SUBTASK 25-61-10-420-002

(2) Make sure that the anchor fitting [4] is engaged correctly in the detent at the center of the anchor plate [5].

NOTE: The escape rope anchor plate [5] is attached to the lanyard ring [2] at the end of the escape rope [1].

(a) Install the cotter pin [3].

NOTE: When the lanyard ring [2] has a hole on the shaft near the spring [6], a cotter pin [3] must be installed.

SUBTASK 25-61-10-410-002

(3) Do a check of the escape rope [1] to see if it was used by personnel (TASK 25-61-10-210-801).

WARNING

IF PERSONNEL USED THE ESCAPE ROPE, REPLACE IT. YOU CANNOT EXAMINE THE CORE FOR DAMAGE. IF YOU DO NOT REPLACE A USED ESCAPE ROPE, INJURIES TO PERSONS CAN OCCUR.

(4) Replace the escape rope [1] if it was used by personnel.

SUBTASK 25-61-10-420-003

(5) Install the escape rope [1].

(a) Start at the fitting end of the escape rope [1].

(b) Wind the escape rope [1] in a coil around the entire stowage compartment.

(c) Keep approximately the last 4 in. (102 mm) of escape rope [1] out of the coil.

(d) Stop winding the escape rope [1] when the end of the rope is in the center of the coil.

(e) Use the Velcro hook and loop straps to hold the escape rope [1] in position.

(f) Put the free end of the escape rope [1] between the hook [9] and loop straps.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(g) Make sure that the captain and first officer can see the end of the escape rope [1] and that it is accessible.

(h) Close and latch the cover.

——— END OF TASK ———

TASK 25-61-10-210-801

4. Flight Compartment Escape Rope Inspection

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) There are two escape (lanyards) installed the flight compartment. The escape ropes are installed in the forward ceiling above the captain and first officer's seat.

(2) When the escape rope shows signs of damage or used, replace the escape rope.

B. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

C. Inspect the Escape Rope

SUBTASK 25-61-10-020-003

(1) Remove the escape rope [1] (TASK 25-61-10-000-801).

SUBTASK 25-61-10-210-001

(2) Make sure that the escape rope [1] was not used.

(a) Look at the aircraft records.

(b) Look for indications that the escape rope [1] was used.

(c) When indications show that the escape rope [1] was used, replace the escape rope [1].

1) Do this task: Flight Compartment Escape Rope Removal, TASK 25-61-10-000-801.

2) Do this task: Flight Compartment Escape Rope Installation, TASK 25-61-10-400-801.

SUBTASK 25-61-10-210-002

(3) If the escape rope [1] was not replaced, check the two escape ropes [1] for damage.

(a) Make sure that the escape rope [1] is not wet or knotted.

(b) Make sure that the escape rope [1] does not show fraying or worn areas.

SUBTASK 25-61-10-210-003

(4) Make sure the anchor plate [5] is not loose or shows signs of corrosion.

(5) Make sure the anchor fitting [4] is not bent or shows signs of corrosion.

SUBTASK 25-61-10-210-004

(6) Install the escape rope [1] (TASK 25-61-10-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-61-10-000-802

5. Emergency Exit Door Life Line Removal

(Figure 202)

A. General

(1) The emergency exit life line is also referred to as an escape strap.

(2) The life line (escape straps) are stowed in a stowage tube that is installed above the right and left overwing emergency exit doors.

B. References

Reference	Title
25-21-20-000-801	Emergency Exit Doorway Lining Removal (P/B 401)

C. Location Zones

Zone	Area
833	Left Emergency Exit (STA 627.5)
843	Right Emergency Exit (STA 627.5)

D. Remove the Life Line

SUBTASK 25-61-10-010-002

WARNING MAKE SURE THAT THE DOOR OPENING PATH IS CLEAR BEFORE YOU RELEASE THE DOOR HANDLE. THE DOOR IS SPRING-LOADED TO OPEN AUTOMATICALLY AND CAN CAUSE INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT.

(1) Make sure that the area is clear of personnel and equipment before opening the emergency exit door.

SUBTASK 25-61-10-010-006

(2) Open the emergency exit door.

SUBTASK 25-61-10-010-003

(3) Open the cloth cover that holds the hook [9] and life line [8].

SUBTASK 25-61-10-020-004

(4) Pull the life line [8] from the stowage tube [7].

SUBTASK 25-61-10-020-005

(5) Remove the sidewall lining (TASK 25-21-20-000-801).

SUBTASK 25-61-10-020-006


(6) Remove the nut [10], two washers [13], and bushing [11] that attach the life line [8] anchor [14] to the retainer [12].

SUBTASK 25-61-10-020-007

(7) Remove the life line [8].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

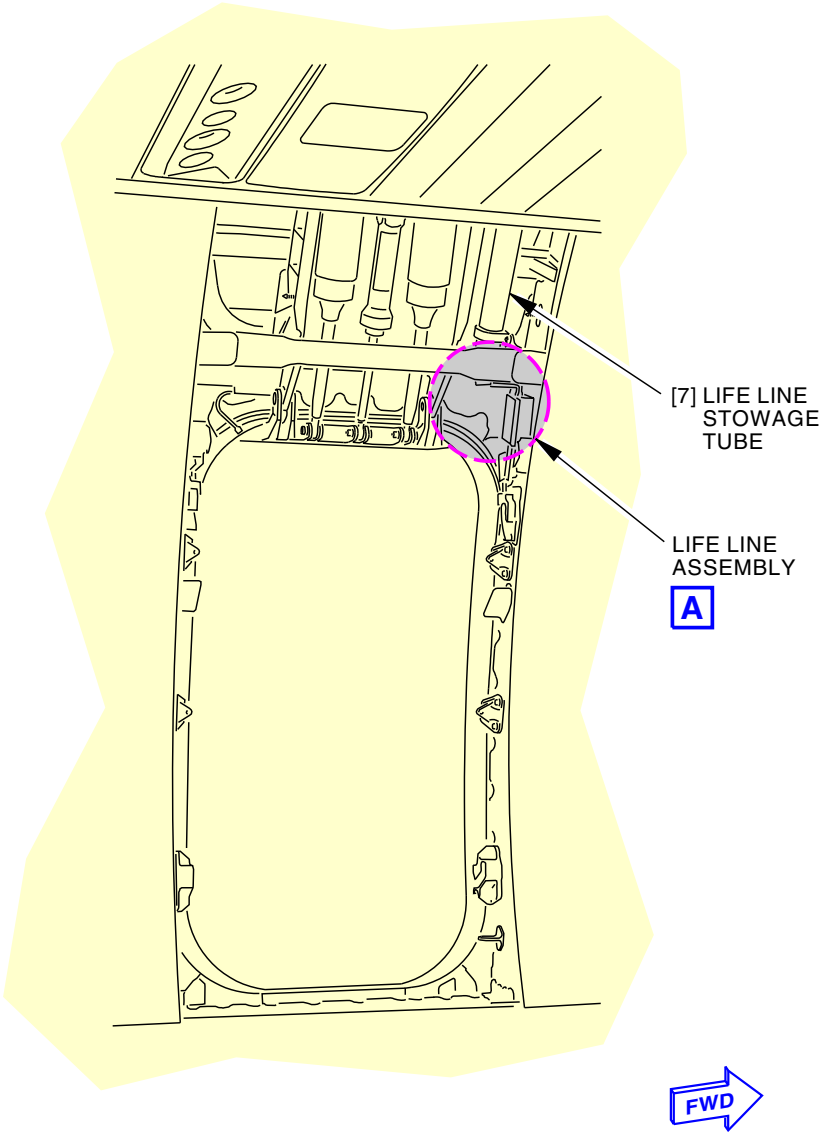


EMERGENCY EXIT DOOR
(DOOR SHOWN IN OPEN POSITION)
(DOOR LINER REMOVED)
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

2536160 S0000601458_V2


Emergency Exit Door Life Line Installation
Figure 202/25-61-10-990-805 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

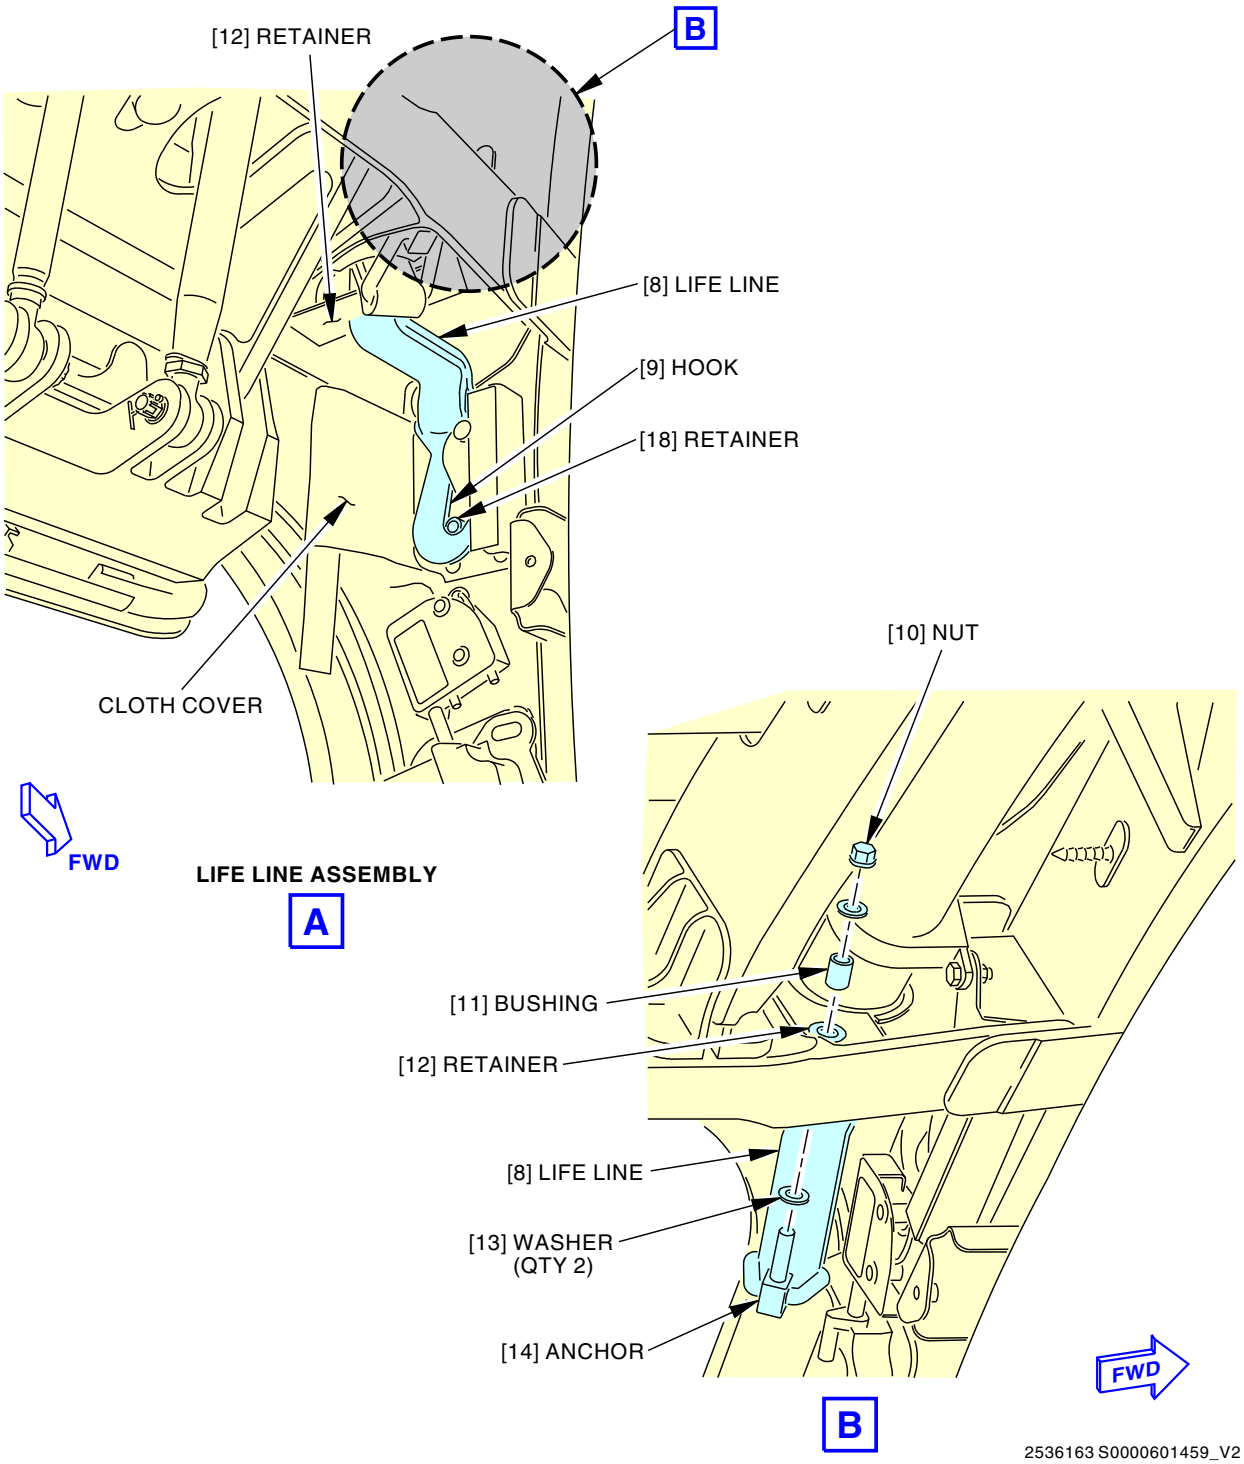

Emergency Exit Door Life Line Installation
Figure 202/25-61-10-990-805 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

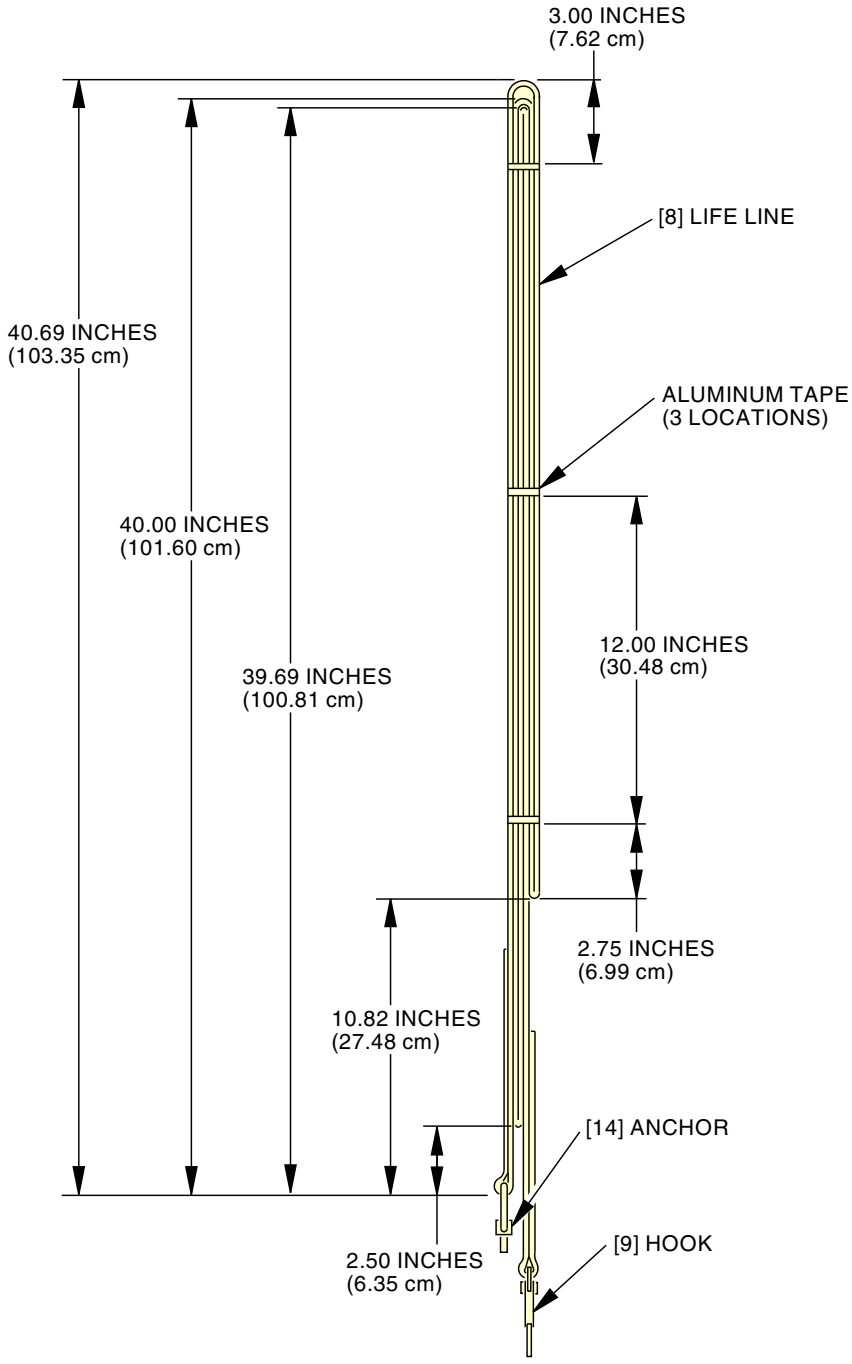

2536164 S0000601460_V2

Emergency Exit Door Life Line Installation
Figure 202/25-61-10-990-805 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-61-10-400-802

6. Emergency Exit Door Life Line Installation

(Figure 202)

A. References

Reference	Title
25-21-20-400-801	Emergency Exit Doorway Lining Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
G00291	Tape - Aluminum Foil, 3M 425	AMS-T-23397 / L-T-80

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
8	Life line	25-61-10-03-205	PTF ALL
		25-61-10-03-210	PTF ALL

D. Location Zones

Zone	Area
833	Left Emergency Exit (STA 627.5)
843	Right Emergency Exit (STA 627.5)

E. Prepare to Install the Life Line

SUBTASK 25-61-10-420-004

(1) Prepare the life line [8] to install in the stowage tube [7].

(a) Fold the life line [8].

(b) Use 3M 425 Aluminum Foil Tape, G00291, to secure the life line [8].

(c) Wrap the 3M 425 Aluminum Foil Tape, G00291, around the life line [8] a maximum of 1.5 times at the three locations (Sheet 3, Figure 202).

(d) Put the life line [8] in the stowage tube [7].

F. Install the Life Line

SUBTASK 25-61-10-420-005

(1) Align the stowage tube [7] in the correct position.

SUBTASK 25-61-10-420-006

(2) Install the two washers [13], bushing [11] and the nut [10] to attach the life line [8] anchor [14] to the retainer [12].

SUBTASK 25-61-10-420-007

(3) Close the cloth cover.

SUBTASK 25-61-10-420-008

(4) Install the sidewall lining (TASK 25-21-20-400-801).

SUBTASK 25-61-10-420-009

(5) Close the emergency exit door.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-61-10-710-801

7. Emergency Exit Door Life Line Inspection

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) The emergency exit life line is also referred to as an escape strap.

(2) The life line (escape straps) are stowed in a stowage tube that is installed above the right and left overwing emergency exit doors.

B. References

Reference	Title
SOPM 20-43-04	Standard Overhaul Practices Manual

C. Tools/Equipment

Reference	Description
STD-130	Brush - Soft-bristle Stainless Steel Wire

D. Consumable Materials

Reference	Description	Specification
G00291	Tape - Aluminum Foil, 3M 425	AMS-T-23397 / L-T-80
G51031 [C10-105]	Abrasive - 120 Grit, Aluminum Oxide, Sandpaper Roll	

E. Location Zones

Zone	Area
833	Left Emergency Exit (STA 627.5)
843	Right Emergency Exit (STA 627.5)

F. Examine the Life Line

SUBTASK 25-61-10-710-002

WARNING MAKE SURE THAT THE DOOR OPENING PATH IS CLEAR BEFORE YOU RELEASE THE DOOR HANDLE. THE DOOR IS SPRING-LOADED TO OPEN AUTOMATICALLY AND CAN CAUSE INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT.

(1) Make sure that the area is clear of personnel and equipment before opening the emergency exit door.

SUBTASK 25-61-10-010-004

(2) Open the emergency exit door.

SUBTASK 25-61-10-010-005

(3) Open the cloth cover that holds the hook [9] and life line [8].

SUBTASK 25-61-10-020-008

(4) Pull the hook [9] end of the life line [8] out over the wing to the wing hook [9] fitting.

SUBTASK 25-61-10-710-001

(5) Make sure that the life line [8] attaches to the fitting on the wing correctly.

SUBTASK 25-61-10-210-005

(6) Examine the condition of the life line [8].

(a) Make sure that the life line [8] does not show worn areas.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Make sure that the life line [8] does not show signs of moisture.

(c) Make sure that the anchor [14] is not loose and does not show signs of corrosion or damage.

SUBTASK 25-61-10-210-006

(7) Examine the condition of the hook [9] assembly.

(a) If the hook [9] is bent, replace the life line [8].

NOTE: It is recommended that the emergency hook [9] assemblies are cadmium plated for improved wear resistance.

(b) Make sure that the hook [9] assembly operates correctly.

1) The spring keeper snap hook [16] on the hook [9] assembly must open smoothly.

2) The spring [17] must close the spring keeper snap hook [16].

(c) Make sure that the hook [9] assembly does not show signs of corrosion.

1) If corrosion is found, clean the repaired area (SOPM 20-43-04).

a) Remove corrosion from the hook [9].

b) Remove corrosion from the spring [17].

c) Remove corrosion from the spring keeper snap hook [16].

d) Remove minor corrosion.

<1> Use a soft-bristle stainless steel wire brush, STD-130, or sandpaper, G51031 [C10-105].

(d) Replace the life line [8] when corrosion prevents the hook [9] assembly from correct operation.

(e) When the spring [17] is missing or the keeper snap hook [15] is defective, replace the life line [8].

SUBTASK 25-61-10-420-010

(8) Prepare the life line [8] to install in the stowage tube [7].

(a) Fold the life line [8].

(b) Use 3M 425 Aluminum Foil Tape, G00291, to secure the life line [8].

(c) Wrap 3M 425 Aluminum Foil Tape, G00291, around the life line [8] a maximum of 1.5 times at the three locations (Sheet 3, Figure 202).

(d) Put the life line [8] in the stowage tube [7].

SUBTASK 25-61-10-420-011


I (9) Put the hook [9] into the retainer [18] and close the cloth cover.

SUBTASK 25-61-10-420-012

(10) Close and latch the emergency exit door.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

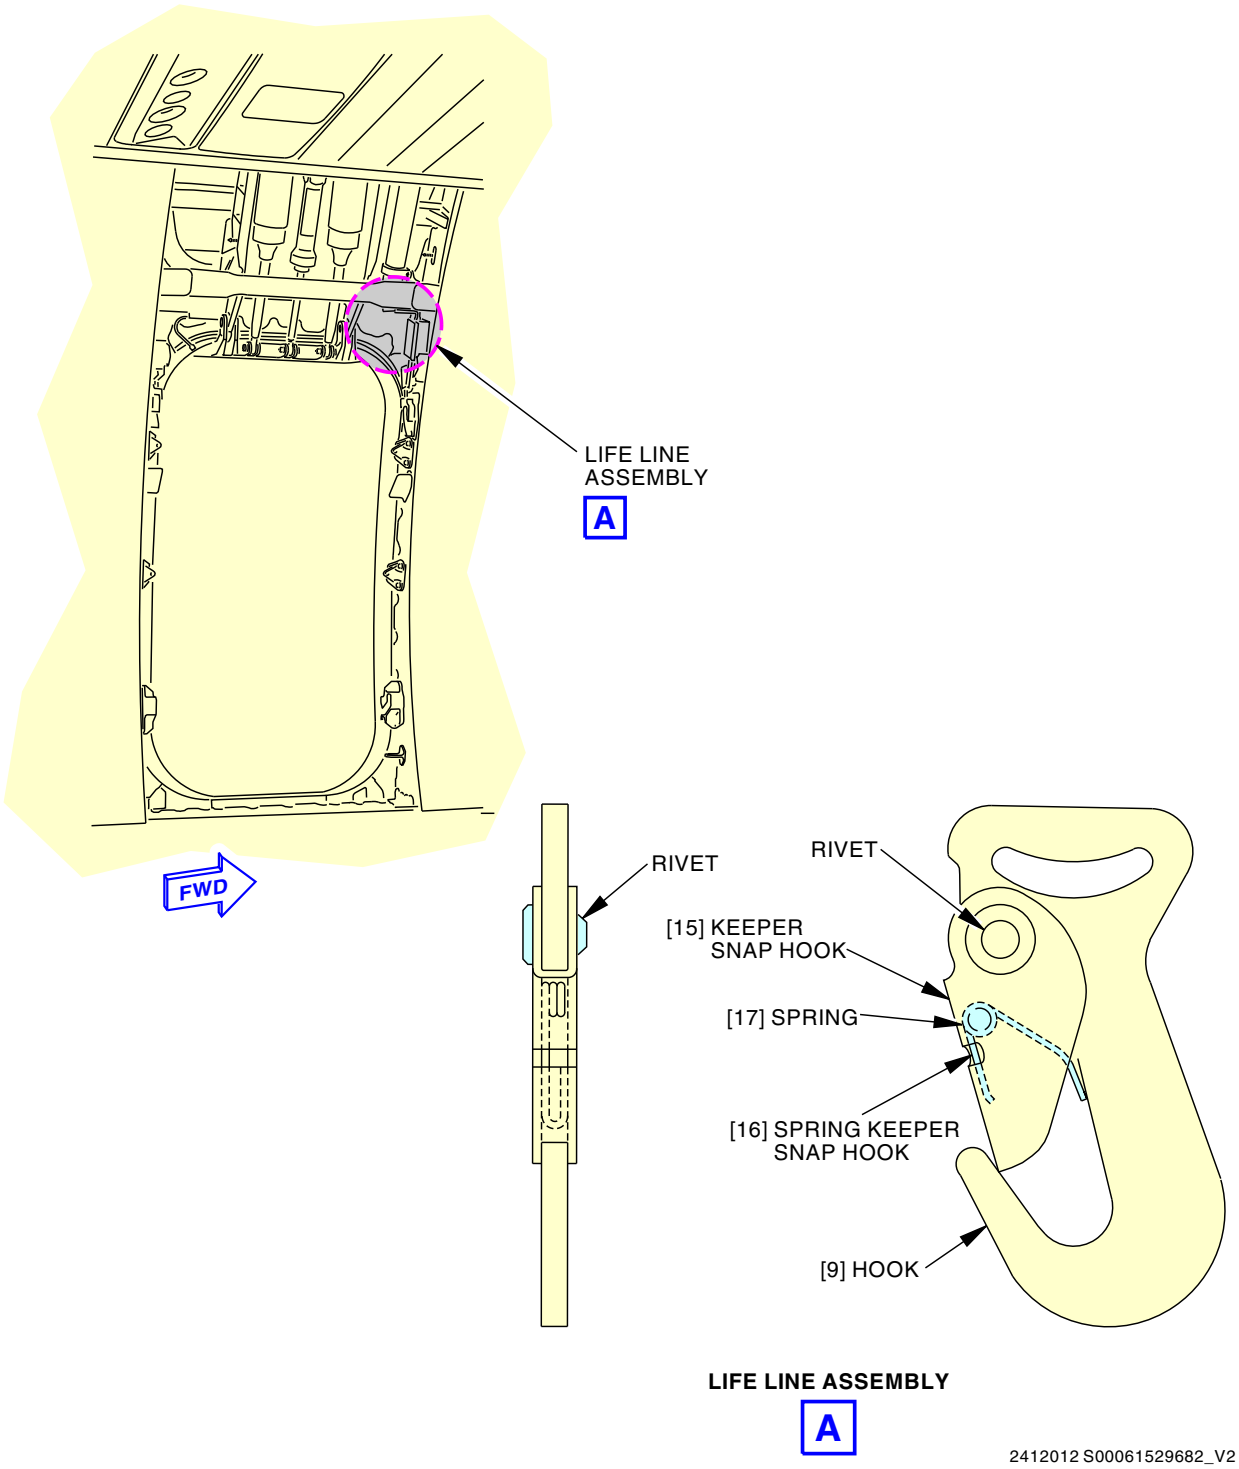

Emergency Exit Door Life Line Inspection
Figure 203/25-61-10-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DOOR WARNING STRAP REEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these two tasks:

(1) A removal of the door warning strap reel

(2) An installation of the door warning strap reel.

TASK 25-61-13-000-801

2. Door Warning Strap Reel Removal

(Figure 401)

A. General

(1) The door warning strap reels are installed on the airplane doorways. The door warning strap is connected to the opposite side of the entry door during maintenance. The straps do not keep a person from falling through the doorway.

B. References

Reference	Title
25-21-31-000-801	Forward Entry Doorway Sidewall Lining Panel - Removal (P/B 401)
25-21-35-020-801	Forward Galley Doorway Sidewall Lining Panel - Removal (P/B 401)
25-24-15-000-802	Forward Windscreen with Stowage - Removal (P/B 401)
25-31-11-000-801	Galley No. 1 - Removal (P/B 401)
25-31-41-000-801	Galley G4 Removal (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for Removal

SUBTASK 25-61-13-000-001

(1) If it is necessary, remove the fixed class divider (TASK 25-24-15-000-802).

SUBTASK 25-61-13-000-002

(2) If it is necessary, remove galley No. 1 (TASK 25-31-11-000-801).

SUBTASK 25-61-13-000-003

(3) If it is necessary, remove galley No. 4 (TASK 25-31-41-000-801).

SUBTASK 25-61-13-020-001

(4) Remove the necessary doorway sidewall lining panels to get access to the door warning strap reel [1] (TASK 25-21-31-000-801 or TASK 25-21-35-020-801).

E. Door Warning Strap Reel Removal

SUBTASK 25-61-13-000-004

(1) Slide the door warning strap [3] through the retainer [4] slit installed on the door structure.

SUBTASK 25-61-13-000-005

(2) Remove the four screws [2] that attach the door warning strap reel [1] to the doorway structure.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-61-13-000-006


(3) Remove the door warning strap reel [1].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

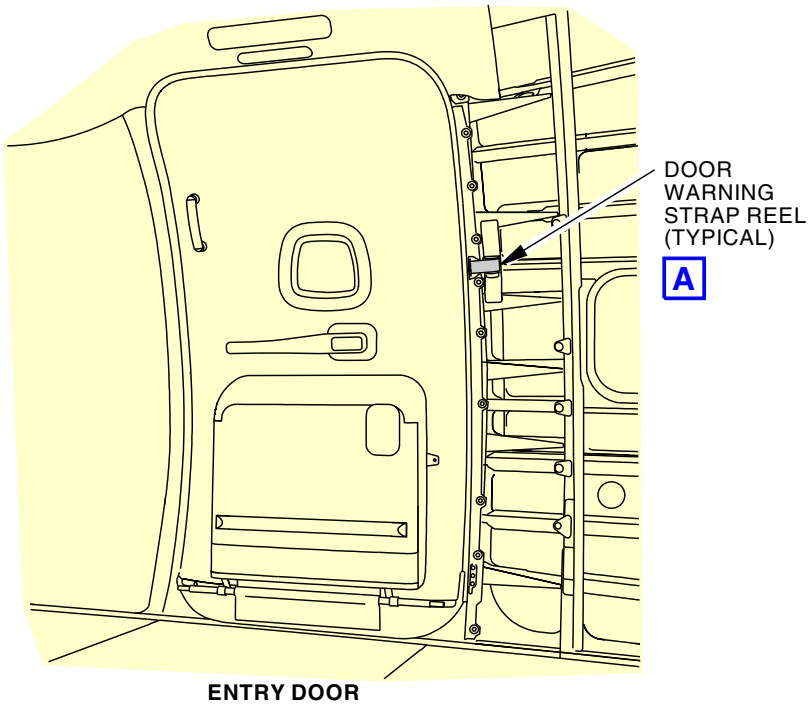

ENTRY DOOR (EXAMPLE)

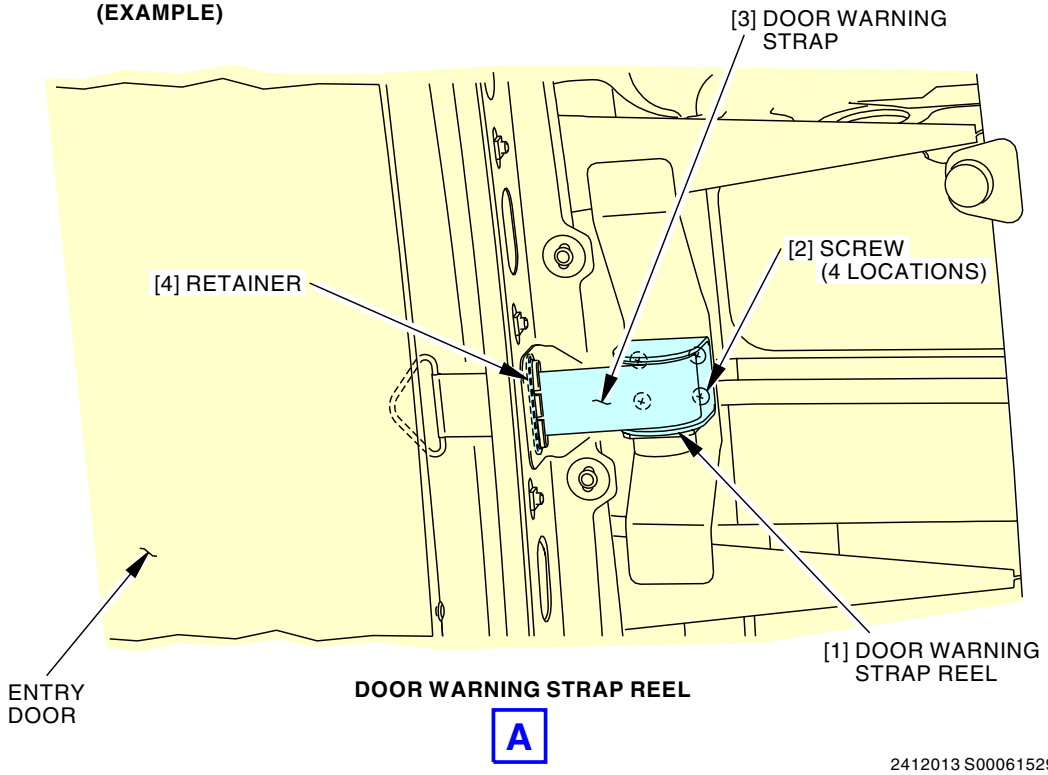

Door Warning Strap Reel Installation
Figure 401/25-61-13-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-61-13-400-801

3. Door Warning Strap Reel Installation

(Figure 401)

A. References

Reference	Title
25-21-31-400-801	Forward Entry Doorway Sidewall Lining Panel - Installation (P/B 401)
25-21-35-420-801	Forward Galley Doorway Sidewall Lining Panel - Installation (P/B 401)
25-24-15-400-802	Forward Windscreen with Stowage - Installation (P/B 401)
25-31-11-400-801	Galley No. 1 - Installation (P/B 401)
25-31-41-400-801	Galley G4 Installation (P/B 401)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Door warning strap reel	25-66-10-03-025	PTF ALL
		25-66-10-03-027	PTF ALL
		25-66-10-03-030	PTF ALL
		25-66-10-03-032	PTF ALL

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Door Warning Strap Reel Installation

SUBTASK 25-61-13-400-001

(1) Align the door warning strap reel [1] in the correct position on the doorway structure.

NOTE: The spring housing direction is up for the LH FWD and AFT doorways. The spring housing direction is down for the RH FWD and AFT doorways.

SUBTASK 25-61-13-400-002

(2) Slide the door warning strap [3] through the slit on the retainer [4] installed on the doorway structure.

SUBTASK 25-61-13-400-003

(3) Install the four screws [2] to attach the door warning strap reel [1] to the doorway structure.

E. Put the Airplane Back to Its Usual Condition

SUBTASK 25-61-13-420-001

(1) Install the doorway sidewall lining panels (TASK 25-21-31-400-801 or TASK 25-21-35-420-801).

SUBTASK 25-61-13-400-004

(2) Install the fixed class divider, if removed (TASK 25-24-15-400-802).

SUBTASK 25-61-13-400-005

(3) If it is removed, install galley No. 1 (TASK 25-31-11-400-801).

SUBTASK 25-61-13-400-006

(4) If it is removed, install galley No. 4 (TASK 25-31-41-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Door Warning Strap Reel Installation Test

SUBTASK 25-61-13-710-001

(1) Pull the door warning strap [3] from the door warning strap reel [1].

(a) Attach the door warning strap [3] to the fitting on the opposite side of the door frame.

SUBTASK 25-61-13-710-002

(2) Unhook the door warning strap [3] from the fitting.

SUBTASK 25-61-13-710-003

(3) Make sure that the door warning strap [3] retracts back into the door warning strap reel [1].

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DETACHABLE EMERGENCY EQUIPMENT - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Life Jacket Restoration

(2) Megaphone Operational Test

(3) Megaphone Battery Replacement

(4) Portable Emergency Locator Transmitter Battery Replacement (If Installed)

(5) Detachable Emergency Equipment Visual Check

(6) Flashlight Check (With Flashing or Push to Test LED Indicator)

(7) Flashlight Battery Replacement (With Flashing LED Indicator)

(8) Smoke Hood (Protective Breathing Equipment) Inspection

(9) Smoke Hood (Protective Breathing Equipment) Replacement

(10) First Aid Kit Restoration

(11) Medical Kit Restoration

(12) Portable Oxygen Cylinder Replacement

B. This procedure contains tasks that are necessary to make the Automated Customized Task Cards. Most of the tasks in this procedure do not contain detailed instructions. Use the standard method of your airline to do these tasks.

TASK 25-64-00-900-801

2. Life Jacket Restoration

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Life Jacket Restoration

SUBTASK 25-64-00-900-001

(1) Replace the life jackets.

(a) Use the standard method of your airline to replace the life jackets.

——— END OF TASK ———

TASK 25-64-00-710-801

3. Megaphone Operational Test

NOTE: This procedure is a scheduled maintenance task.

A. Consumable Materials

Reference	Description	Specification
B50073	Alcohol - Isopropyl	ASTM D 770

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Megaphone Operational Test

SUBTASK 25-64-00-020-001

(1) Disconnect the clamp and remove the megaphone from the mounting bracket.

SUBTASK 25-64-00-710-001

(2) Put the microphone near your mouth while you point the horn at the opposite end of the airplane.

SUBTASK 25-64-00-710-002

(3) Pull the trigger while you count slowly in a clear voice.

SUBTASK 25-64-00-710-003

(4) Make sure that your voice can be heard clearly by another person at the opposite end of the airplane.

SUBTASK 25-64-00-710-004

(5) If the voice output is weak, do these steps:

(a) Do this task: Megaphone Battery Replacement, TASK 25-64-00-900-803.

(b) Do the operational test above again.

(c) If the voice output remains weak, replace the megaphone.

SUBTASK 25-64-00-710-005

(6) If you have a megaphone type that has a long lanyard and siren, do the steps that follow to examine the megaphone siren (optional):

NOTE: The megaphone may have a long lanyard with an alarm plug which operates as an anti-theft alarm.

(a) Remove the alarm plug pin to start the siren automatically.

1) If the alarm is of usual amplitude and sound, the megaphone is operating correctly.

a) Install the alarm pin to stop the siren when you release the handle.

2) If the sound output from siren is low, do these steps:

a) Do this task: Megaphone Battery Replacement, TASK 25-64-00-900-803.

b) Do the operational test above again.

c) If new batteries do not help, do a check of the amplifier.

d) Do a check of the sound output.

e) If the sound remains low, replace the megaphone.

<1> Make sure that you put the alarm pin back and release the handle on the bad megaphone.

3) If the sound output from siren is abnormal, do these steps:

a) Do this task: Megaphone Battery Replacement, TASK 25-64-00-900-803.

b) Do a check of the siren circuitry.

NOTE: Follow the manufacturer's instructions to disassemble, check the circuitry, and assemble the megaphone off-wing.

<1> Replace the megaphone, if it is necessary.

<a> Make sure that you put the alarm pin back and release the handle on the bad megaphone.

4) If there is no sound output from siren, do these steps:

a) Remove the microphone, mouthpiece assembly, and batteries.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

<1> Make sure that the microphone and battery contacts are clean.

<a> If it is necessary, use alcohol, B50073, and clean applicator to clean the contacts.

b) Install the microphone, mouthpiece assembly, and batteries that you removed.

c) Do a check of the sound output from siren.

<1> If there is no sound output from siren, replace the megaphone.

<a> Make sure that you put the alarm pin back and release the handle on the bad megaphone.

SUBTASK 25-64-00-420-001

WARNING MAKE SURE THAT YOU ATTACH THE MEGAPHONE CORRECTLY OR THE MEGAPHONE CAN FALL OUT. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

(7) Attach the megaphone to the mounting bracket with the clamp.

(a) If the megaphone has a pin, make sure that the pin is installed correctly.

(b) Make sure that the installation of the megaphone is correct and that the megaphone has a tight fit.

NOTE: The mounting bracket must attach to the opening of the megaphone. The clamps must close around the megaphone between the handle and the mouthpiece/microphone assembly.

(c) Replace the mounting bracket if it cannot hold the megaphone correctly.

END OF TASK

TASK 25-64-00-900-803

4. Megaphone Battery Replacement

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Megaphone Battery Replacement

SUBTASK 25-64-00-900-003

(1) Replace the batteries in the megaphones.

(a) Use the manufacturer's maintenance recommendations for the megaphone or the standard method of your airline to replace the batteries.

(b) Use the manufacturer's maintenance recommendations for the megaphone batteries check after the replacement.

END OF TASK

TASK 25-64-00-900-804

5. Portable Emergency Locator Transmitter Battery Replacement (If Installed)

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Procedure

SUBTASK 25-64-00-900-004

(1) Replace the batteries in the portable emergency locator transmitter.

(a) Use the standard method of your airline to replace the batteries.

——— END OF TASK ———

TASK 25-64-00-210-801

6. Detachable Emergency Equipment Visual Check

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) These task is for the visual check of the detachable emergency equipment.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Detachable Emergency Equipment Visual Check

SUBTASK 25-64-00-210-001

(1) Make sure that these emergency equipment are in the applicable passenger compartment locations and have no visible defects:

(a) Crash ax

(b) Dangerous Goods Kit (if installed)

(c) Defibrillator (if installed)

(d) Door Inop Kit (if installed)

(e) Flashlights

(f) First Aid Kits

(g) Fire Extinguisher

(h) Fire Gloves

(i) Medical Kits

(j) Megaphones

(k) Portable Oxygen Cylinders (if installed)

(l) Protective Breathing Equipment (TASK 25-64-00-200-802)

(m) Seat Belt Extensions

(n) Smoke Goggles

(o) Structural Fire Fighter Gloves (if installed)

(p) Life jacket

(q) Wheelchair (if installed).

SUBTASK 25-64-00-210-004

(2) Make sure that these emergency equipment are in the flight compartment and have no visible defects:

(a) Crew life vests in the Captain and First Officers seat back pouch

(b) Protective breathing equipment on the second observers seat stanchions

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Flashlights on the second observers seat stanchions.

——— END OF TASK ———

TASK 25-64-00-200-801

7. Flashlight Check (With Flashing or Push To Test - LED Indicator)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Operational Test

SUBTASK 25-64-00-720-001

(1) Do a check of the LED indicator:

(a) Make sure that the flashlight is correctly positioned in the mounting bracket.

(b) If the LED indicator is on the bracket:

1) Push the PUSH-TO-TEST button momentarily and release.

2) If the LED comes ON green, then the flashlight can stay in service.

3) If the LED comes ON red, schedule the battery pack for replacement within three weeks.

NOTE: The battery pack will operate for approximately three weeks if the LED comes on red.

4) If the LED does not come ON, refer to the Table 201 to identify the problem.

(c) If the LED indicator is on the flashlight:

1) If the LED flashes with an interval of less than 10 seconds, then the flashlight can stay in service.

2) If the LED flashes with an interval of more than 10 seconds or the LED does not flash, refer to the Table 202 to identify the problem.

NOTE: The battery pack will operate for approximately 10 days if the LED flashes with an interval greater than 10 seconds.

SUBTASK 25-64-00-020-006

(2) For a flashlight with tamper shield, remove the tamper shield.

(a) For a flashlight with LED indicator on the bracket, discard the tamper shield.

SUBTASK 25-64-00-020-007

(3) Remove the flashlight from the mounting bracket.

(a) Make sure that the flashlight comes ON when the flashlight is removed from the mounting bracket.

(b) If the flashlight does not come ON, or it is weak, then refer to the Table 201 or Table 202 to identify the problem:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Table 201/25-64-00-993-804

Symptom	Probable	Corrective Action
The LED indicator does not operate correctly when the check of the LED indicator is performed.	The battery pack is depleted or has failed.	Remove the flashlight from the mounting bracket. If the flashlight does not come ON immediately, then remove and replace the battery pack. After the battery pack is replaced, make sure that the flashlight comes ON when the flashlight is not in the mounting bracket. Install the flashlight in the mounting bracket and perform the applicable check of the LED indicator.
	Electrical failure in the flashlight.*[1]	If the flashlight does not come ON after the battery pack is replaced, there is an electrical failure in the flashlight. Return the flashlight for repairs.
	Failure in the mounting bracket.*[1]	If the flashlight comes ON when removed from the mounting bracket, there may be a failure in the mounting bracket. Replace the mounting bracket, if necessary. Return the defective unit for repairs.
	Pogo contacts do not touch the flashlight.	While the flashlight is securely installed in the bracket, move the flashlight slightly in the left direction and the right direction. Make sure that the Pogo contacts touch the flashlight.
	Battery pack installed incorrectly (backwards).	Install the battery pack correctly.
The flashlight does not come ON when removed from the mounting bracket.	The battery pack is depleted or has failed.	Replace the battery pack. After the battery pack is replaced, make sure that the flashlight comes ON when the flashlight is not in the mounting bracket. Install the flashlight in the mounting bracket and perform the applicable check of the LED indicator.
	Electrical failure in the flashlight.	If the flashlight does not come ON after the battery pack is replaced, there is an electrical failure in the flashlight. Return the flashlight for repairs.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Table 201/25-64-00-993-804 (Continued)

Symptom	Probable	Corrective Action
The flashlight does not go OFF when installed on the mounting bracket.	Failure in the mounting bracket or the flashlight.	If a second flashlight goes OFF when installed in the mounting bracket, then the electrical failure is in the flashlight. Replace the flashlight. If the flashlight does not go OFF when returned on the mounting bracket, then there may be a failure in the mounting bracket. Replace the mounting bracket.

*[1] The temperature inside the airplane has an impact on the internal resistance of the battery pack. Extreme cabin temperatures can make the LED indicator operate incorrectly. This type of condition is normal and is not viewed as a failure.

Table 202/25-64-00-993-808

Symptom	Probable	Corrective Action
LED is not flashing.	Battery is depleted.	Replace battery.
	Lamp is burned out.	Replace lamp.
	LED is inoperative.	Return unit for service.
	Defective Bracket. Flashlight did not turn off when installed in bracket.	Return entire system to factory for check.
LED is flashing at interval of 10 seconds or greater.	Battery is at or beyond cut-off point.	Replace battery within 10 days.
LED is weak (flashes too dimly).	Battery is depleted.	Replace battery within 10 days.
Flashlight does not turn on when removed from bracket.	Unauthorized use of flashlight. Battery depleted.	Replace battery.
	Lamp is burned out.	Replace lamp.
	Battery pack not installed or connected.	Check battery and connection.
	Broken contacts in flashlight body.	Return flashlight for service.
	Defective bracket. Flashlight did not turn off when installed in bracket.	Return entire system to factory for check.

SUBTASK 25-64-00-420-006

(4) Install the flashlight on the mounting bracket.

SUBTASK 25-64-00-420-007

(5) if it is necessary, install a new tamper shield for a flashlight with LED indicator on the bracket.

SUBTASK 25-64-00-420-025

(6) If it is necessary, install the tamper shield for a flashlight with LED indicator is on the flashlight.

——— END OF TASK ———

TASK 25-64-00-900-805

8. Flashlight Battery Replacement (With Flashing or Push To Test - LED Indicator)

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Procedure

SUBTASK 25-64-00-900-005

(1) Replace the batteries in the flashlights.

(a) Use the manufacturer's maintenance recommendations for the flashlight or the standard method of your airline to replace the batteries.

(2) Do this task: Flashlight Check (With Flashing or Push To Test - LED Indicator), TASK 25-64-00-200-801

——— END OF TASK ———

TASK 25-64-00-200-802

9. Smoke Hood (Protective Breathing Equipment) Inspection

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Smoke Hood Inspection

SUBTASK 25-64-00-210-003

(1) Use the applicable steps that follow to do an inspection of the smoke hoods:

NOTE: There are various shapes and sizes of smoke hoods. Most smoke hood containers have warning indicators that show when the smoke hood is no longer good for use.

PTF ALL; AIRPLANES WITH SMOKE HOOD CONTAINERS WITH TAMPER TAGS

(a) Do a visual check of the tamper tags to make sure they are not broken or ripped.

PTF ALL; AIRPLANES WITH SMOKE HOOD CONTAINERS WITH AN INDICATOR WINDOW

CAUTION DO ONLY A VISUAL CHECK OF THE INDICATOR WINDOW ON THE CONTAINER. IF YOU OPEN THE CONTAINER, YOU CAN CAUSE DAMAGE TO THE SMOKE HOOD OR OTHER COMPONENTS.

(b) Do a visual check of the indicator window on the container to make sure the smoke hood has not filled the window.

PTF ALL; AIRPLANES WITH SMOKE HOOD CONTAINERS WITH MOISTURE INDICATOR STRIPS

(c) Do a visual check of the indicator window on the container to make sure the moisture indicator strip has not changed to pink.

NOTE: The color of the moisture indicator may change, but not to pink, and remain serviceable. If the color of the moisture indicator changes to gray or white, the unit is still serviceable.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL; AIRPLANES WITH SMOKE HOOD CONTAINERS WITHOUT AN INDICATOR WINDOW

(d) Feel the smoke hood to make sure it remains hard and solid.

NOTE: The smoke hood is vacuum packed. If the smoke hood feels soft, then the package has a leak.

PTF ALL

——— END OF TASK ———

TASK 25-64-00-900-806

10. Smoke Hood (Protective Breathing Equipment) Replacement

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Procedure

SUBTASK 25-64-00-900-006

(1) Replace the smoke hoods.

(a) Use the standard method of your airline to replace the smoke hoods.

——— END OF TASK ———

TASK 25-64-00-900-807

11. First Aid Kit Restoration

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Procedure

SUBTASK 25-64-00-900-007

(1) Replace the first aid kit.

(a) Use the standard method of your airline to replace the first aid kit.

——— END OF TASK ———

TASK 25-64-00-900-808

12. Medical Kit Restoration

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
200	Upper Half of Fuselage

B. Procedure

SUBTASK 25-64-00-900-008

(1) Replace the medical kit.

(a) Use the standard method of your airline to replace the medical kit.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-64-00-900-810

13. Portable Oxygen Cylinder Replacement

A. References

Reference	Title
35-31-01-960-801	Replace Portable Oxygen Cylinder (P/B 401)

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Procedure

SUBTASK 25-64-00-900-010

(1) Replace the portable oxygen cylinder (TASK 35-31-01-960-801).

(a) Use the manufacturer's maintenance recommendations for the portable oxygen cylinder or the standard method of your airline to replace the portable oxygen cylinder.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE EMERGENCY LOCATOR TRANSMITTER - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Portable Emergency Locator Transmitter Removal

(2) Portable Emergency Locator Transmitter Installation.

TASK 25-64-00-000-801

2. Portable Emergency Locator Transmitter - Removal

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the removal of the portable Emergency Locator Transmitter (ELT).

(2) The portable ELT location may vary depending on your airplane configuration. The portable ELT can be located in a overhead stowage bin, forward galley, forward stowage cabinet, or the flight deck.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Portable ELT Removal

SUBTASK 25-64-00-010-003

(1) Remove the portable ELT [1] cover, if necessary.

SUBTASK 25-64-00-020-009

(2) For the portable ELT [1] with a metal lanyard, do these steps:

(a) Remove the screw that attaches the metal lanyard to the bracket.

(b) Remove the metal lanyard from the bracket.

SUBTASK 25-64-00-020-005

(3) Remove the portable ELT [1].

(a) Unfasten the strap that holds the portable ELT [1] to its bracket.

WARNING BE CAREFUL WHEN YOU REMOVE THE PORTABLE ELT FROM THE BRACKET. THE ANTENNA CAN QUICKLY EXTEND WHEN YOU RELEASE THE VELCRO STRAP. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

(b) Remove the portable ELT [1] from its bracket.

SUBTASK 25-64-00-020-012

(4) If installed, make sure that the four-position rotary switch is set to the correct position, refer to the airlines regulatory requirements.

NOTE: The four-position rotary switch should be set to the OFF position.

NOTE: Some portable ELT have a three position ON/OFF/ARMED switch. The three-position switch should be set to the OFF position.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-64-00-020-008

(5) Remove the Activation / Identification Module (AIM) from the portable ELT [1].


NOTE: If the AIM configuration uses the airplane registry (tail ID) or the airplane 24 BIT address ID, the AIM must stay with the airplane.

NOTE: If the AIM configuration uses the portable ELT identification, the AIM must stay with the removed portable ELT.

NOTE: Some portable ELT are not equipped with AIM.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

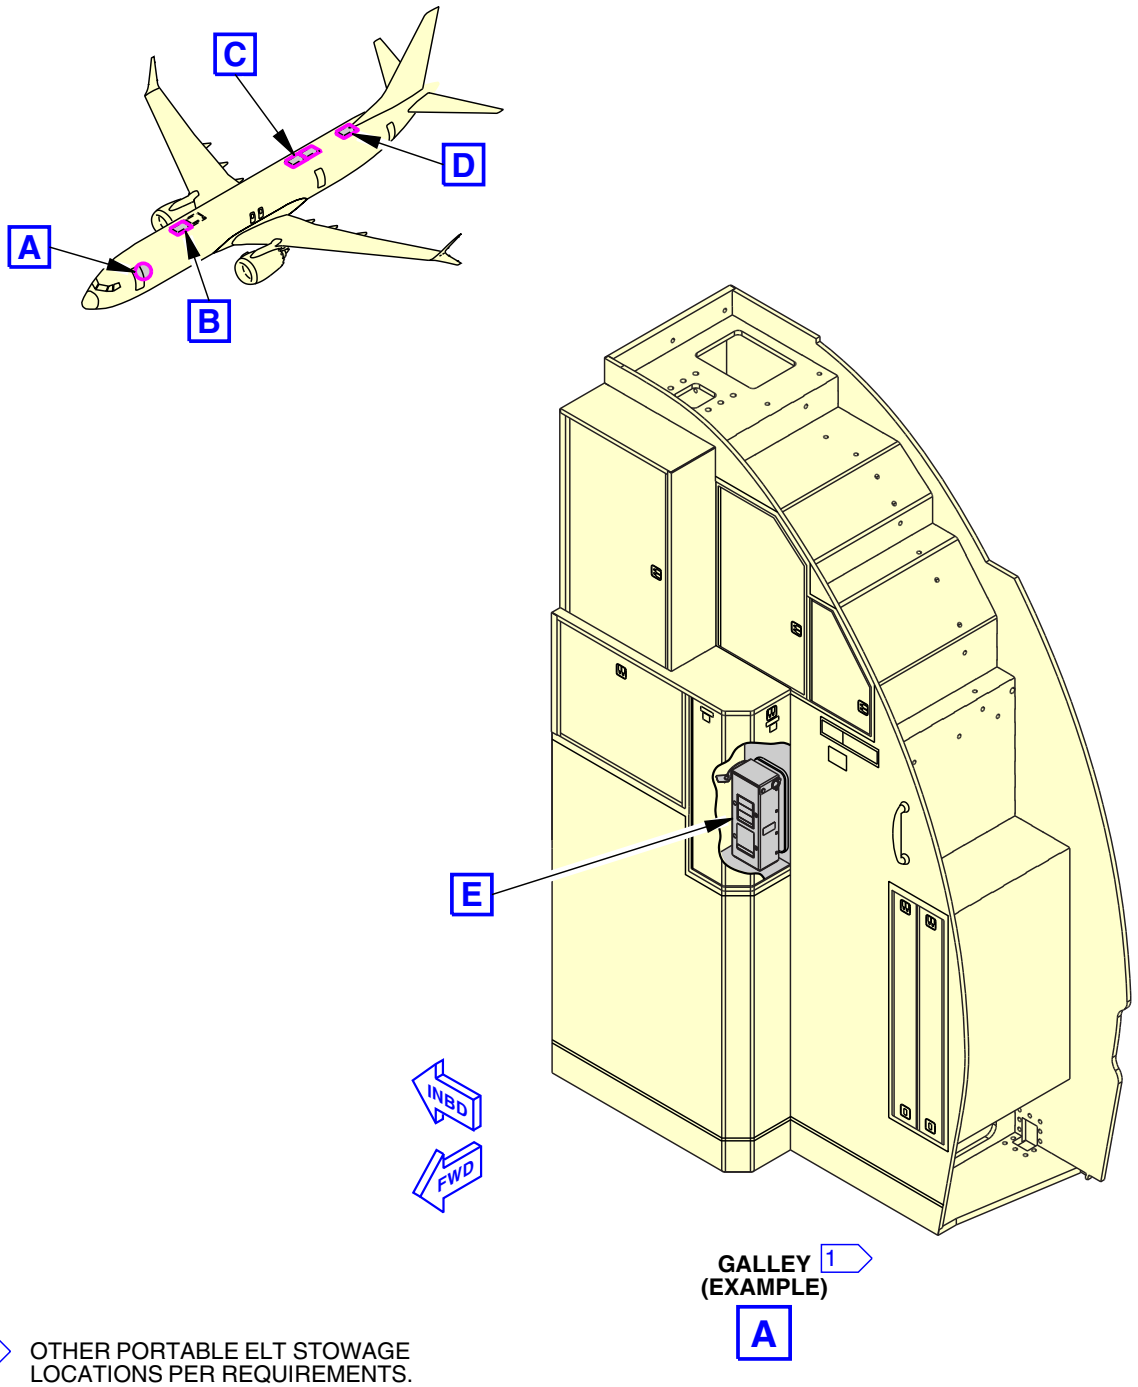

Portable Emergency Locator Transmitter Installation
Figure 401/25-64-00-990-801 (Sheet 1 of 5)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

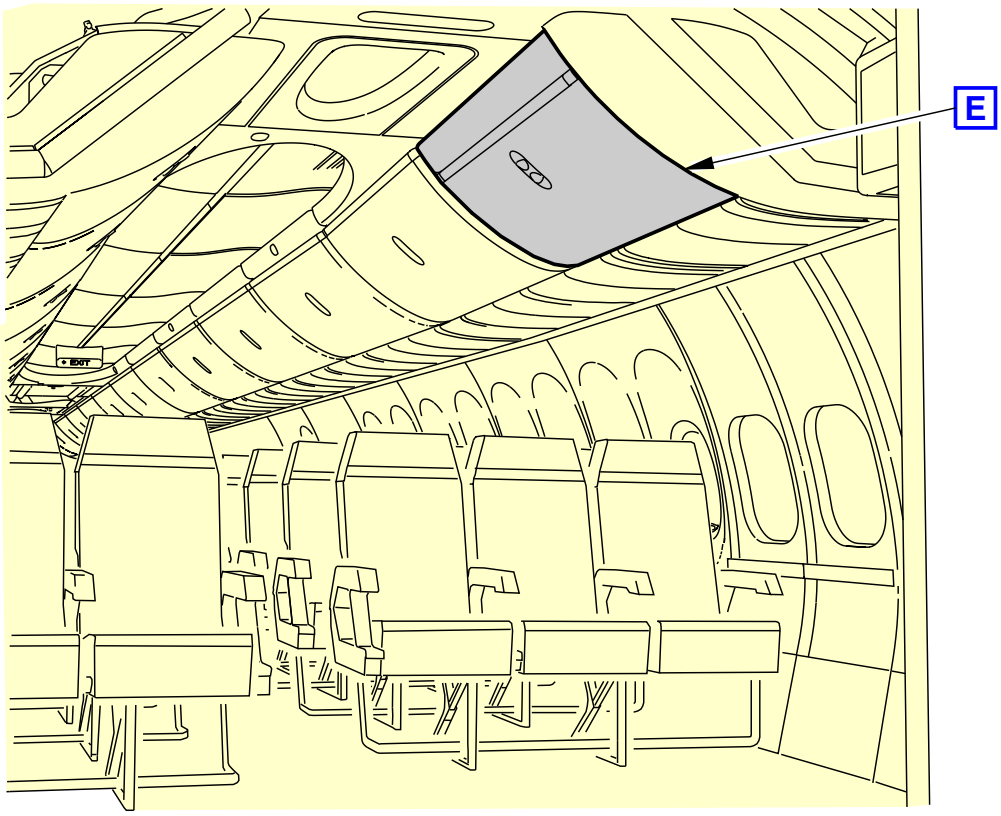

2566742 S0000612372_V5

Portable Emergency Locator Transmitter Installation
Figure 401/25-64-00-990-801 (Sheet 2 of 5)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

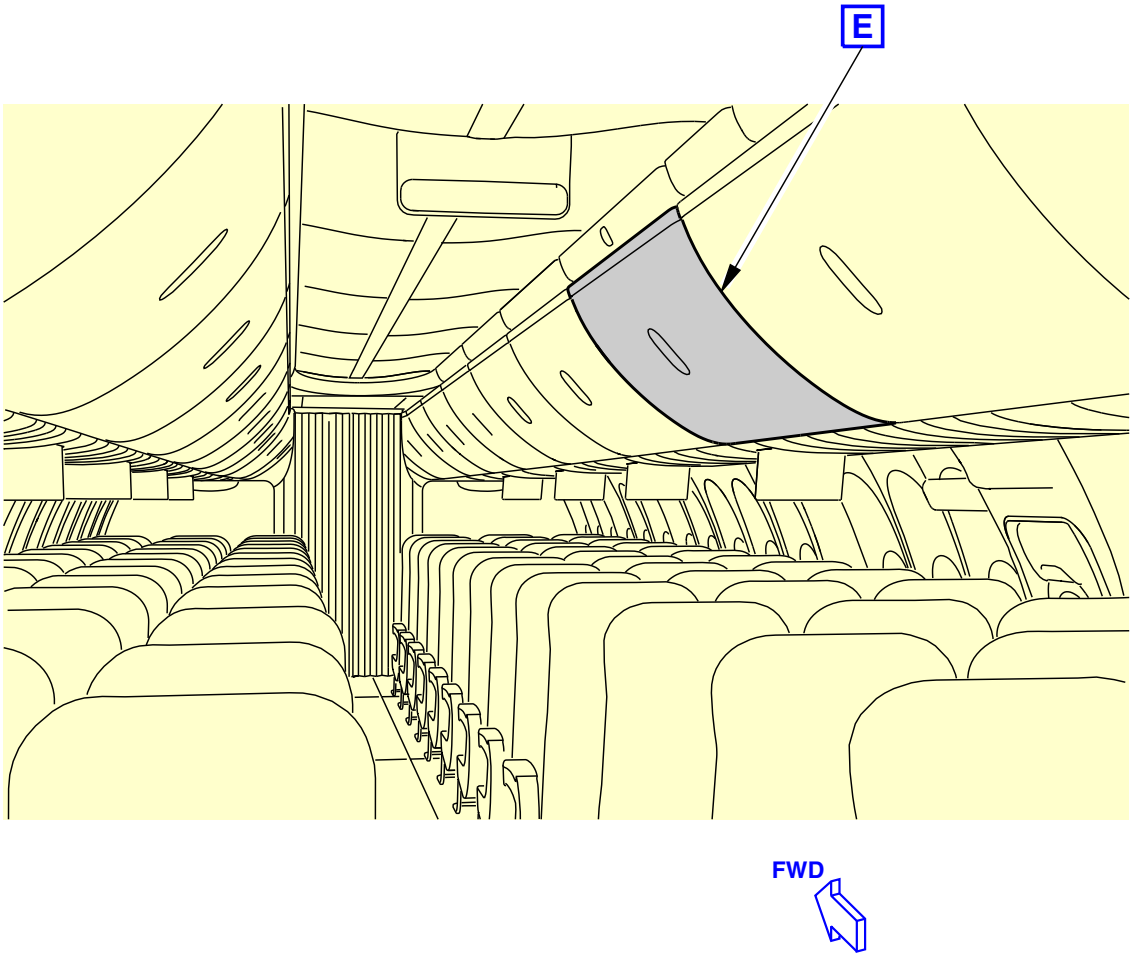

2815200 S0000645481_V4

Portable Emergency Locator Transmitter Installation
Figure 401/25-64-00-990-801 (Sheet 3 of 5)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

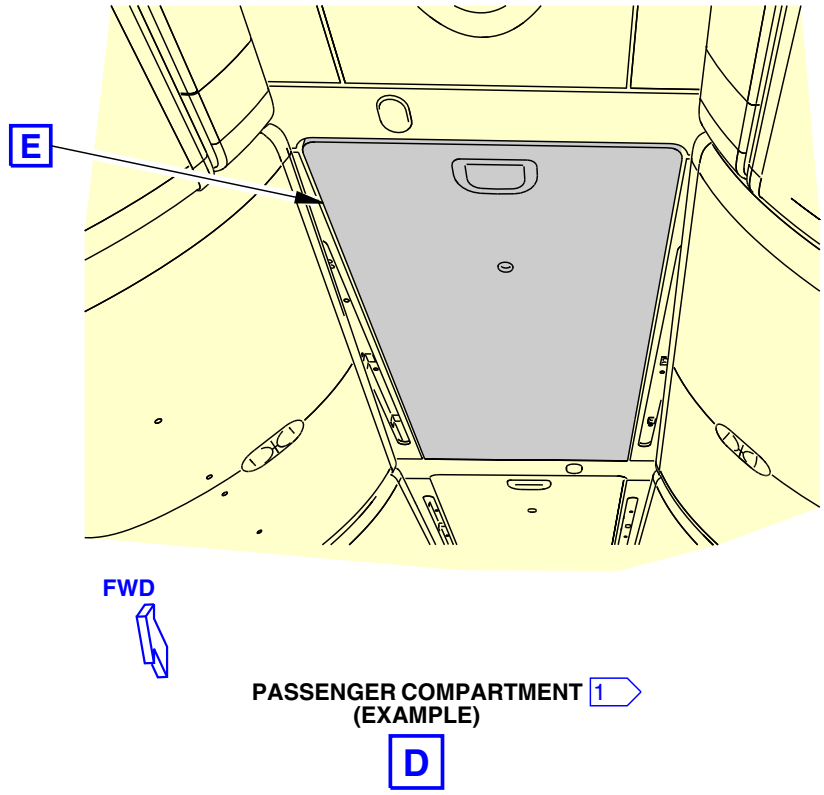

2854057 S0000669964_V3

Portable Emergency Locator Transmitter Installation
Figure 401/25-64-00-990-801 (Sheet 4 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

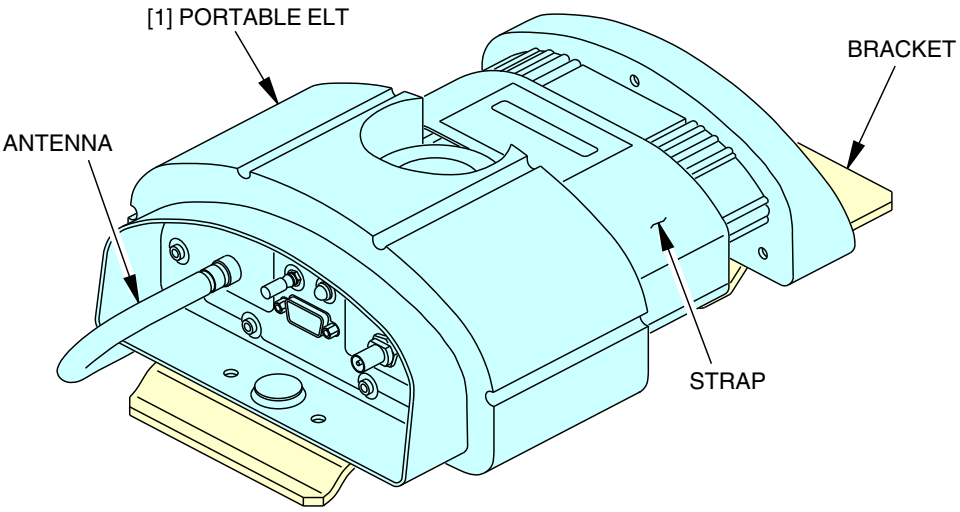

PORTABLE ELT (EXAMPLE)

E 2

2 LANYARD ASSEMBLY IS LOCATED BETWEEN THE PORTABLE ELT AND THE BRACKET.

2566743 S0000612419_V4

Portable Emergency Locator Transmitter Installation
Figure 401/25-64-00-990-801 (Sheet 5 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-64-00-400-801

3. Portable Emergency Locator Transmitter - Installation

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the installation of the portable Emergency Locator Transmitter (ELT).

(2) The portable ELT location may vary depending on your airplane configuration. The portable ELT can be located in a overhead stowage bin, forward galley, forward stowage cabinet, or the flight deck.

B. Location Zones

Zone	Area
200	Upper Half of Fuselage

C. Prepare for the Installation

SUBTASK 25-64-00-400-001

(1) Install the Activation / Identification Module (AIM) on the portable ELT.

NOTE: If the AIM configuration uses the airplane registry (tail ID) or airplane 24 BIT address, install the AIM from the removal task.

NOTE: Some portable ELT are not equipped with AIM.

NOTE: It is the responsibility of the airlines to report any change in the registered portable ELT information to their designated registration authority.

(a) Make sure that the DIRECTION OF FLIGHT airplane symbol on the AIM Identification Label points to the front of the airplane.

NOTE: The DIRECTION OF FLIGHT airplane symbol must point to the front of the airplane for correct acceleration sensor (G. switch) operation.

SUBTASK 25-64-00-860-003

(2) If installed, set the four-position rotary switch to the correct position.

NOTE: The four-position rotary switch must be set to the ARMED position.

NOTE: Some portable ELT have a three-position ON/OFF/ARMED switch. The three-position switch must be set to the ARMED position.

D. Portable ELT Installation

SUBTASK 25-64-00-420-013

(1) Install the portable ELT [1].

(a) Install the portable ELT [1] to its bracket.

1) If there is an alignment placard installed on the ELT mounting bracket, follow the instructions on the placard to align the portable ELT [1].

(b) Install the strap that holds the portable ELT [1] to its bracket.

SUBTASK 25-64-00-420-014

(2) For portable ELT [1] with a metal lanyard, do these steps:

(a) Attach the end of the lanyard under a bracket screw head.

(b) Make sure that the lanyard is below the Velcro strap.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Make sure that the strap can be accessed for easy release of the Velcro fastener.

NOTE: The snap fastener must be visible and can be accessed. The placard on the strap must be centered on the portable ELT.

SUBTASK 25-64-00-410-005

(3) Close the portable ELT [1] cover.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PORTABLE EMERGENCY LOCATOR TRANSMITTER - ADJUSTMENT/TEST

1. General

A. This procedure has this task:

(1) Portable Emergency Locator Transmitter Operational Test

TASK 25-64-00-710-802

2. Portable Emergency Locator Transmitter Operational Test

(Figure 501)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task provides a procedure to do an operational test of the portable Emergency Locator Transmitter (ELT).

B. References

Reference	Title
25-64-00-400-801	Portable Emergency Locator Transmitter - Installation (P/B 401)

C. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

D. Prepare for the Operational Test

SUBTASK 25-64-00-910-001

(1) Make sure that you do the portable ELT test in the first five minutes of the hour (UTC).

NOTE: Free Space Transmission Tests from the aircraft on 121.5/243 MHz are generally allowed any time within five minutes after each hour. Check your local regulations. THERE IS NO ALLOWANCE FOR TRANSMITTING A VALID 406 MHZ MESSAGE AT ANY TIME.

The portable ELT will begin transmitting on 121.5/243 MHz immediately following activation and 406 MHz distress signals approximately 50 seconds after activation. If the portable ELT is inadvertently kept in the ON position for longer than approximately 50 seconds, you will hear a brief interruption of the 121.5 MHz signal while the 406 MHz message is transmitted. If this occurs, then you must reset the portable ELT immediately and tell the local emergency authorities. This will prevent emergency search and rescue operations that are not necessary.

(a) If you do the portable ELT test outside of the first five minutes of the hour (UTC), do this step:

1) Speak with the local emergency authority (Air Traffic Control Tower or Flight Service Station) to let them know there will be an ELT Test Transmission on the Emergency Frequencies 121.5/243 MHz.

SUBTASK 25-64-00-910-002

WARNING MAKE SURE THAT YOU FOLLOW THE LOCAL ELT OPERATION REGULATIONS. IF YOU MAKE AN ACCIDENTAL TRANSMISSION, TELL THE AUTHORITIES. THIS WILL PREVENT EMERGENCY SEARCH OPERATIONS THAT ARE NOT NECESSARY.

(2) Follow the local ELT operation requirements.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Self-Test at the Front Panel of the Portable ELT

SUBTASK 25-64-00-000-001

(1) Remove the cover from the portable ELT.

SUBTASK 25-64-00-000-006

(2) Release the velcro strap.

SUBTASK 25-64-00-000-007

WARNING BE CAREFUL WHEN YOU REMOVE THE PORTABLE ELT FROM THE BRACKET. THE ANTENNA CAN QUICKLY EXTEND WHEN YOU RELEASE THE VELCRO STRAP. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

(3) Remove the portable ELT from its bracket and extend the antenna before doing the self test.

(a) Hold the portable ELT at arm's length in the aisle to free the antenna from the wall.

SUBTASK 25-64-00-730-001

(4) Do these steps to do the self-test at the portable ELT front panel:

NOTE: The self-test includes a 406 MHz test transmission. This test transmission does not cause a search operation.

CAUTION READ ALL THE STEPS THAT FOLLOW BEFORE YOU START THE ELT TEST PROCEDURE. YOU MUST BECOME FAMILIAR WITH THE INSTRUCTIONS. MAKE SURE THAT YOU USE A TIMING DEVICE TO MONITOR THE TIME DURING THE ELT TEST. YOU MUST COMPLETE THE ELT TEST PROCEDURE IN LESS THAN 50 SECONDS. THIS WILL HELP PREVENT ACCIDENTAL ACTIVATION OF THE ELT.

(a) Read all of the instructions below before you do the next step.

CAUTION MAKE SURE THAT YOU DO THE ELT LIVE TRANSMISSION TEST IN THE FIRST FIVE MINUTES OF THE HOURS (UTC). LET THE APPLICABLE LOCAL EMERGENCY AUTHORITY (AIR TRAFFIC CONTROL TOWER OR FLIGHT SERVICE STATION) FOR THE APPROVAL OF THIS TEST. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT CAN OCCUR.

CAUTION IF THE EMERGENCY SIGNAL OCCURS DURING THIS TEST, IMMEDIATELY TELL THE APPLICABLE EMERGENCY PERSONNEL. THE SIGNAL TELLS EMERGENCY PERSONNEL TO DO A SEARCH FOR A MISSING AIRCRAFT.

CAUTION PULL THE SWITCH BEFORE YOU MOVE IT TO A DIFFERENT POSITION. IF YOU MOVE THE SWITCH BEFORE YOU PULL IT, YOU WILL CAUSE DAMAGE TO THE SWITCH.

(b) Pull and move the portable ELT ARMED/OFF/ON switch to the ARMED position (on the portable ELT front panel).

NOTE: The lever lock toggle switch on the portable ELT front panel is locked into the position in which it is placed. Pull out on the toggle to allow movement before attempting to move switch to another position. The toggle will lock into the new position when released.

(c) Push the TEST push button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Release the TEST push button after the two short flash of the TX LED.

(e) Make sure that after approximately 3 seconds the red TX LED light comes on and the portable ELT buzzer sounds for approximately 6 seconds.

(f) After the 6 seconds, make sure that the red TX LED light goes off for a moment and then stays on steady for 10 seconds. If the red LED light stays on steady for 10 seconds, this shows that the BITE test is good.

(g) If the red LED light stays off or flashes for 10 seconds, this shows that the BITE test is failed.

NOTE: Different flash rates indicate different failures.

- 10 flashes is a portable ELT Cospas-Sarsat identification missing. The Activation / Identification Module (AIM) has failed.
- 20 flashes is a portable ELT output power failure (UHF and/or VHF). The battery has low power and needs to be replaced.
- 40 flashes is a portable ELT internal circuit board checksum failure. The portable ELT has internal failure and needs to be replaced.

NOTE: The portable ELT returns automatically to ARMED mode when the self-test report is over.

(h) Make sure that the red TX LED light goes off and self-test process is complete.

(i) Make sure that the ARMED/OFF/ON switch is moved to the OFF position within 30 seconds after the self-test is complete to avoid transmission of a real distress signal.

SUBTASK 25-64-00-730-002

WARNING BE CAREFUL WHEN YOU REMOVE THE PORTABLE ELT FROM THE BRACKET. THE ANTENNA CAN QUICKLY EXTEND WHEN YOU RELEASE THE VELCRO STRAP. IF YOU DO NOT OBEY, INJURY TO PERSONNEL CAN OCCUR.

(5) If the self-test passes:

(a) Make sure that the portable ELT is stowed with the ARMED/ON/OFF toggle switch in the ARMED position (TASK 25-64-00-400-801).

SUBTASK 25-64-00-730-008

(6) If the self-test fails:

(a) Make sure that the close environment of the portable ELT antenna is not disturbed by local presence of metallic parts.

1) Do the self-test three times to confirm the failure.

(b) If the failure remains, make sure that the antenna is extended and re-do the self-test.

(c) If the failure is confirmed, replace the portable ELT.


F. Put the Airplane Back to Its Usual Condition

SUBTASK 25-64-00-910-003

(1) Tell the local emergency authority that the portable ELT test is completed (if applicable).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

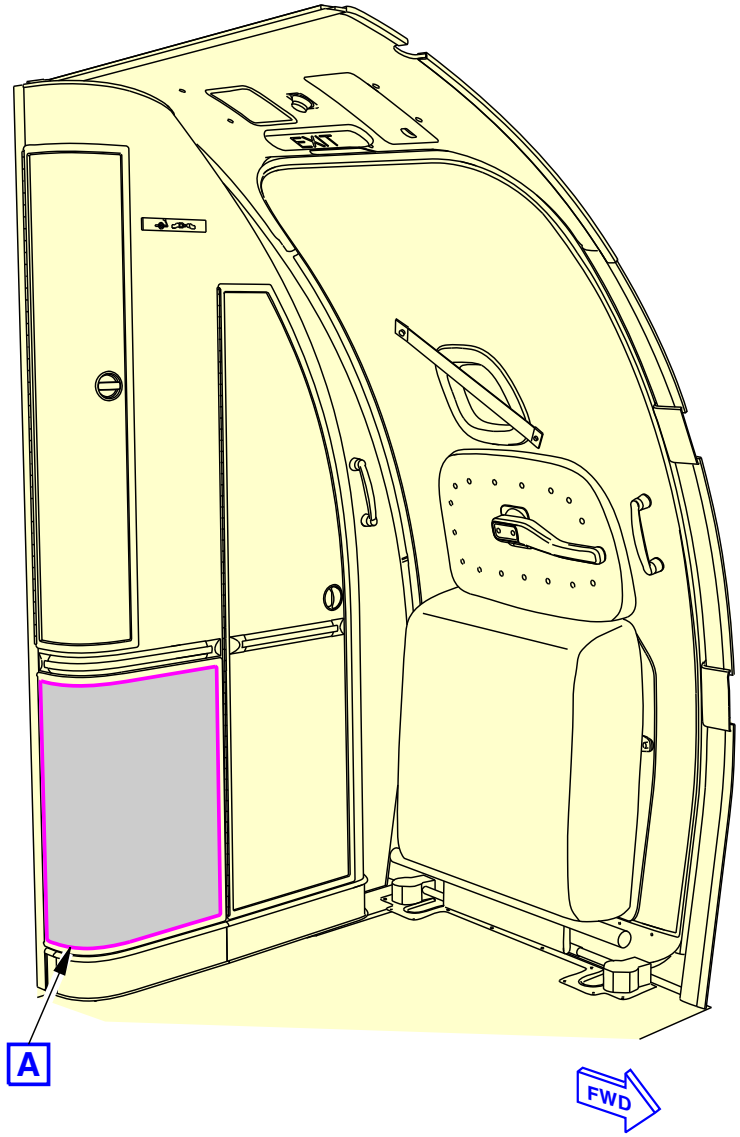


FORWARD ENTRY AREA 1
(EXAMPLE)

1 OTHER PORTABLE ELT STOWAGE LOCATIONS PER REQUIREMENTS.

3040968 S0000808771_V2

Portable Emergency Locator Transmitter
Figure 501/25-64-00-990-806 (Sheet 1 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

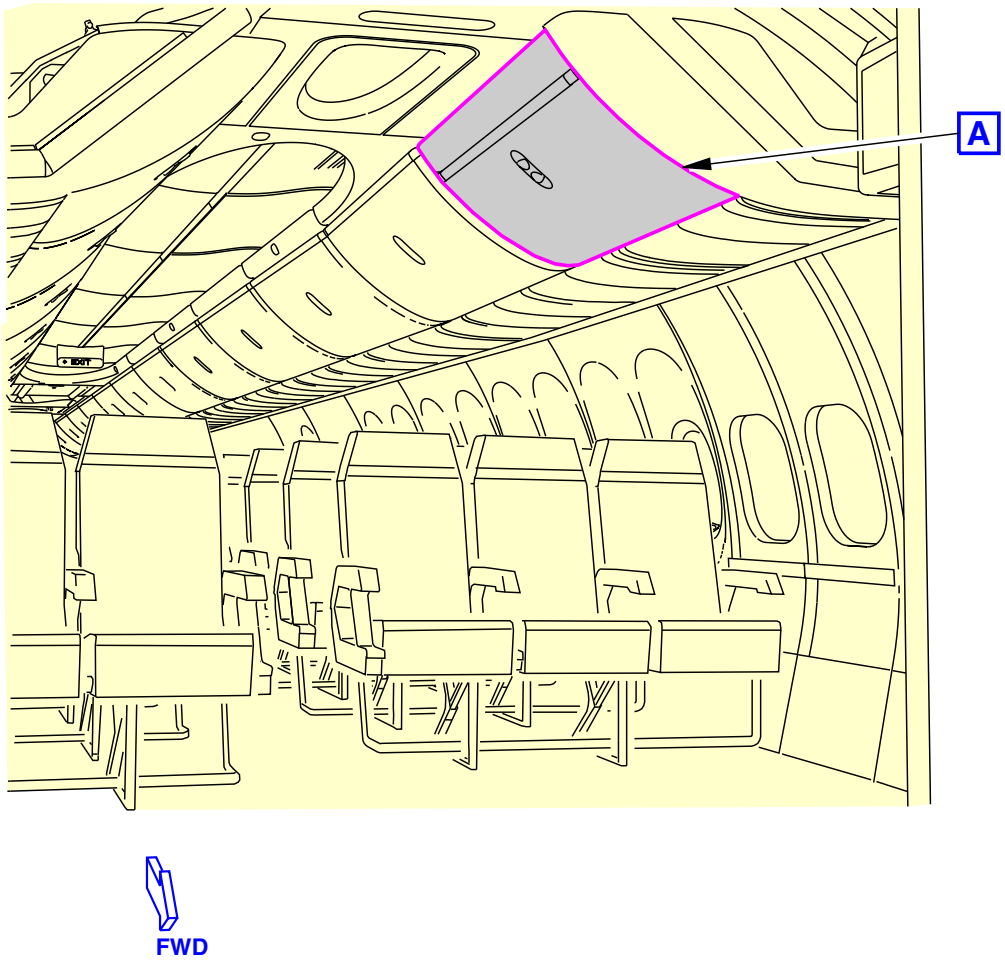


PASSENGER COMPARTMENT 1
(EXAMPLE)

3040969 S0000808772_V2

Portable Emergency Locator Transmitter
Figure 501/25-64-00-990-806 (Sheet 2 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

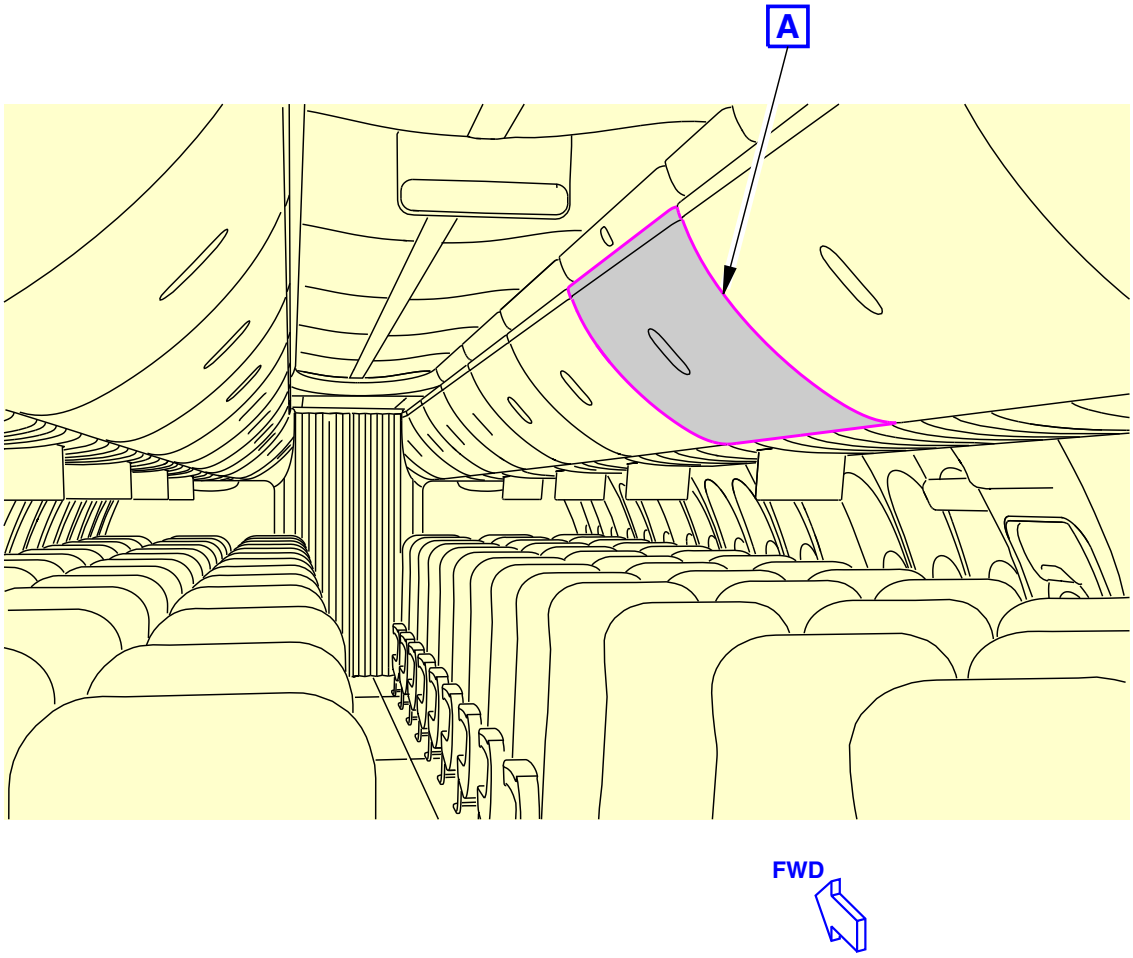


PASSENGER COMPARTMENT 1
(EXAMPLE)

3040970 S0000808773_V2

Portable Emergency Locator Transmitter
Figure 501/25-64-00-990-806 (Sheet 3 of 5)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

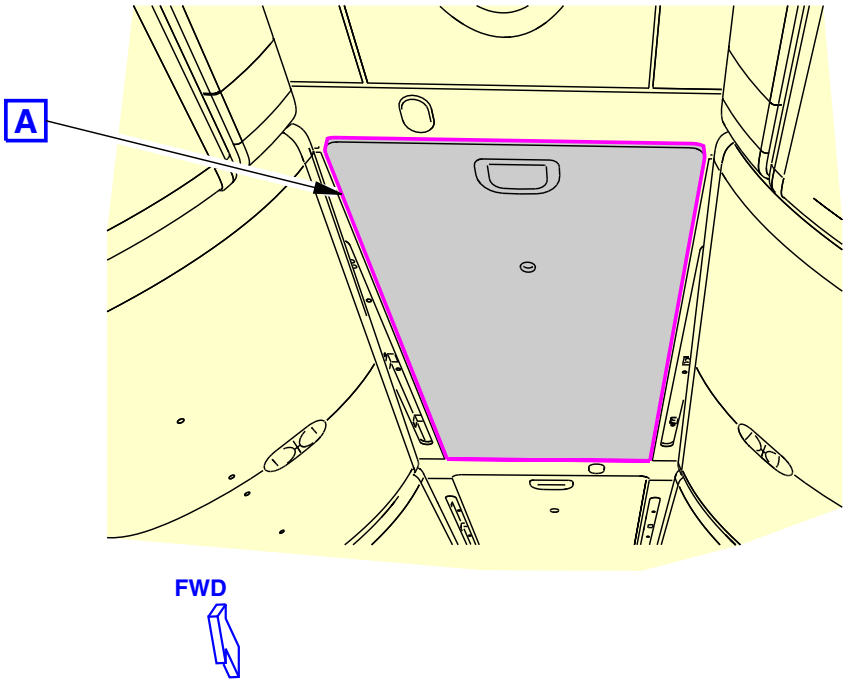


**PASSENGER COMPARTMENT
(EXAMPLE)**

3040971 S0000808774_V2

**Portable Emergency Locator Transmitter
Figure 501/25-64-00-990-806 (Sheet 4 of 5)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

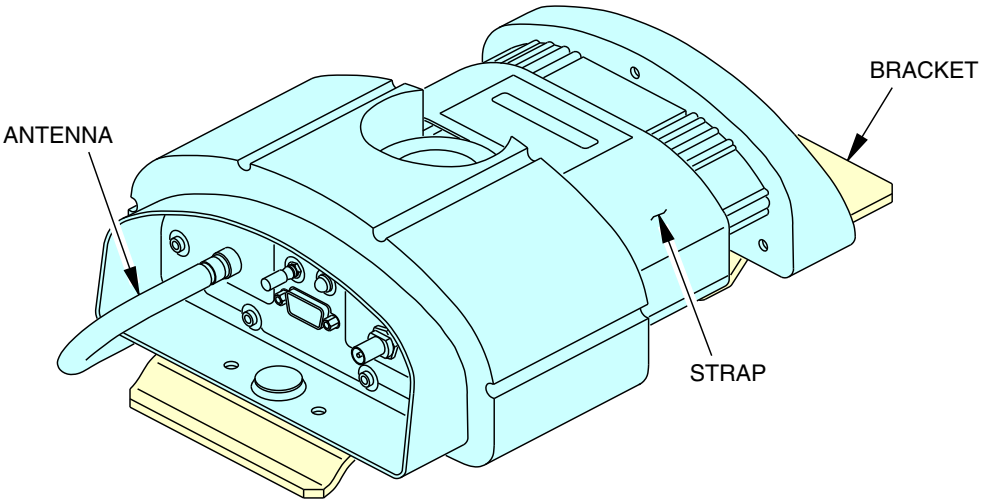

**PORTABLE ELT
(EXAMPLE)**

A

3040972 S0000808775_V2

**Portable Emergency Locator Transmitter
Figure 501/25-64-00-990-806 (Sheet 5 of 5)**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DOOR-MOUNTED ESCAPE SYSTEM - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A restoration of the escape system after an escape slide deployment.

(2) Door-mounted escape system - deactivation.

(3) Door-mounted escape system - activation.

TASK 25-66-00-840-801

2. Escape System Restoration

(Figure 201)

A. References

Reference	Title
25-66-01-000-801	Escape Slide Pack and Cover Removal (P/B 401)
25-66-01-400-801	Escape Slide Pack and Cover Installation (P/B 401)

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Procedure

SUBTASK 25-66-00-840-001

(1) Restore the escape slide as follows:

NOTE: Three persons are necessary to do parts of this procedure. One person in the aircraft disconnects the escape slide. One person on a ladder, external to the aircraft, opens the aspirator flapper door and lowers the escape slide. One person on the ground receives the escape slide.

WARNING DO NOT USE THE WARNING STRAP TO SUPPORT THE WEIGHT OF A PERSON. IF THE WARNING STRAP SUPPORTS THE WEIGHT OF A PERSON IT CAN BREAK. IF THE WARNING STRAP BREAKS, INJURY TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

(a) Install the door warning strap across the door opening.

(b) Disconnect the wires from the battery pack to the escape slide lights.

NOTE: The battery pack is located on the bottom surface of the escape slide near the inflation cylinder.

(c) Open the aspirator flapper door to deflate the escape slide until the escape slide is soft.

NOTE: Make sure the escape slide keeps its shape.

(d) Disconnect the girt bar from the floor-mounted escape slide brackets.

NOTE: Release tension in the girt to disconnect the girt bar easily.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING BE CAREFUL WHEN YOU LOWER THE ESCAPE SLIDE. THE ESCAPE SLIDE WEIGHS APPROXIMATELY 50 POUNDS (22.7 KILOGRAMS). IF THE ESCAPE SLIDE AND ITS COMPONENTS FALL, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

CAUTION MAKE SURE THE AREA BELOW THE ESCAPE SLIDE IS CLEAR BEFORE YOU LOWER THE ESCAPE SLIDE TO THE GROUND. OBJECTS BELOW THE SLIDE CAN CAUSE DAMAGE TO THE SLIDE AND ITS COMPONENTS.

(e) Carefully lower the escape slide to the person on the ground.

(f) Carefully install a clamp on the aspirator to fully deflate the escape slide.

(g) Remove the clamp from the aspirator.

(h) Refer to the instructions from the escape slide manufacturer to examine, repair, and repack the escape slide.

SUBTASK 25-66-00-840-002

(2) Restore the door as follows:

(a) Remove the door warning strap from across the door opening if it is installed.

(b) Close and latch the door.


(c) Do this task: Escape Slide Pack and Cover Removal, TASK 25-66-01-000-801.

NOTE: The escape slide pack and girt bar are not in the cover.

(d) Do this task: Escape Slide Pack and Cover Installation, TASK 25-66-01-400-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

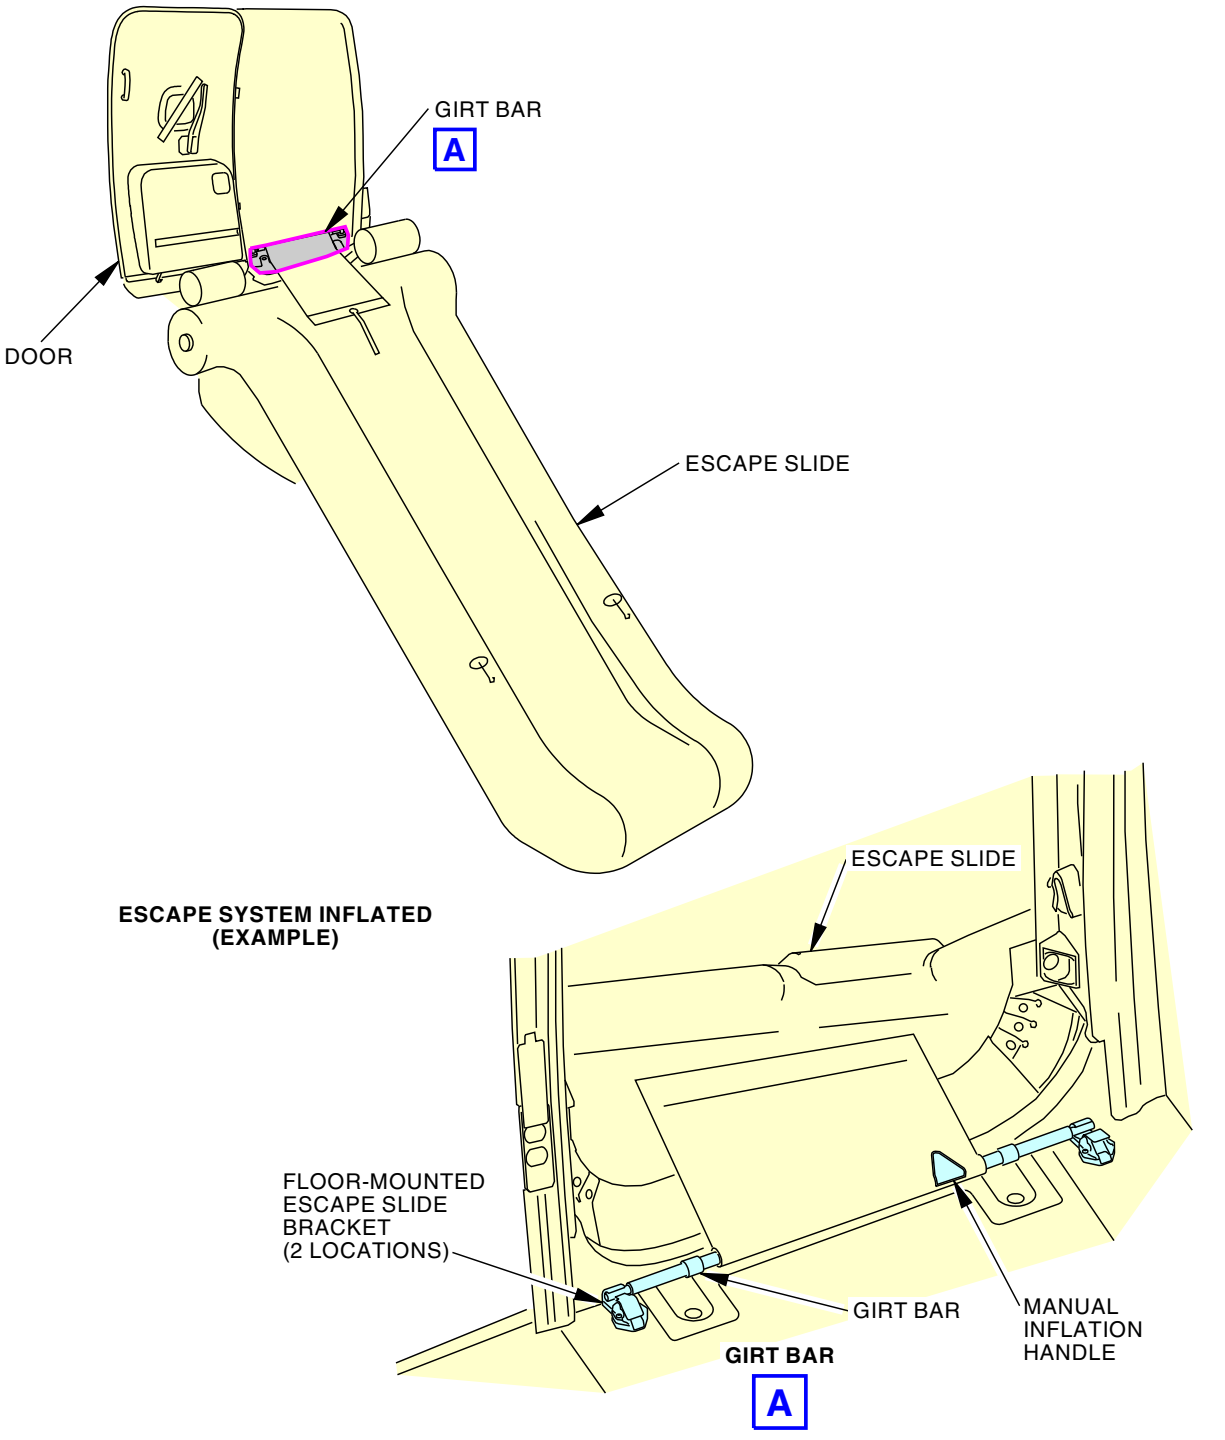

Escape System Restoration
Figure 201/25-66-00-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-66-00-040-801

3. Door-Mounted Escape System - Deactivation

A. General

(1) This task will deactivate the door-mounted escape system.

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Procedure

SUBTASK 25-66-00-210-001

WARNING KEEP PERSONNEL, EQUIPMENT, AND OTHER ITEMS OUT OF THE HAZARDOUS ENERGY ZONES. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Make sure that there is no blockage in the area near the door from the fuselage to 33 ft (10 m) outboard of the fuselage and from 6 ft (2 m) t forward of the door to 6 ft (2 m) aft of the door.

SUBTASK 25-66-00-020-001

(2) For forward and aft door slides, do these steps:

(a) Stow the girt bar in the girt bar retainer clips on the slide compartment.

(b) Use nylon zip ties to attach the girt bar in its position.

(c) Install a DO NOT OPERATE tag on the girt bar.

D. Door-Mounted Escape System - Tryout

NOTE: This tryout is to make sure that the door-mounted escape system is in a zero energy state.

SUBTASK 25-66-00-210-002

(1) For forward and aft door slides, do these steps:


(a) Make sure that the slide girt bar is stowed and attached in the girt bar retainer clips with nylon zip ties.

(b) Align the girt bar nylon release stop assembly/bar lock forward and aft of the girt bar retainer clips.

(c) Make sure that the DO NOT OPERATE tag is installed.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

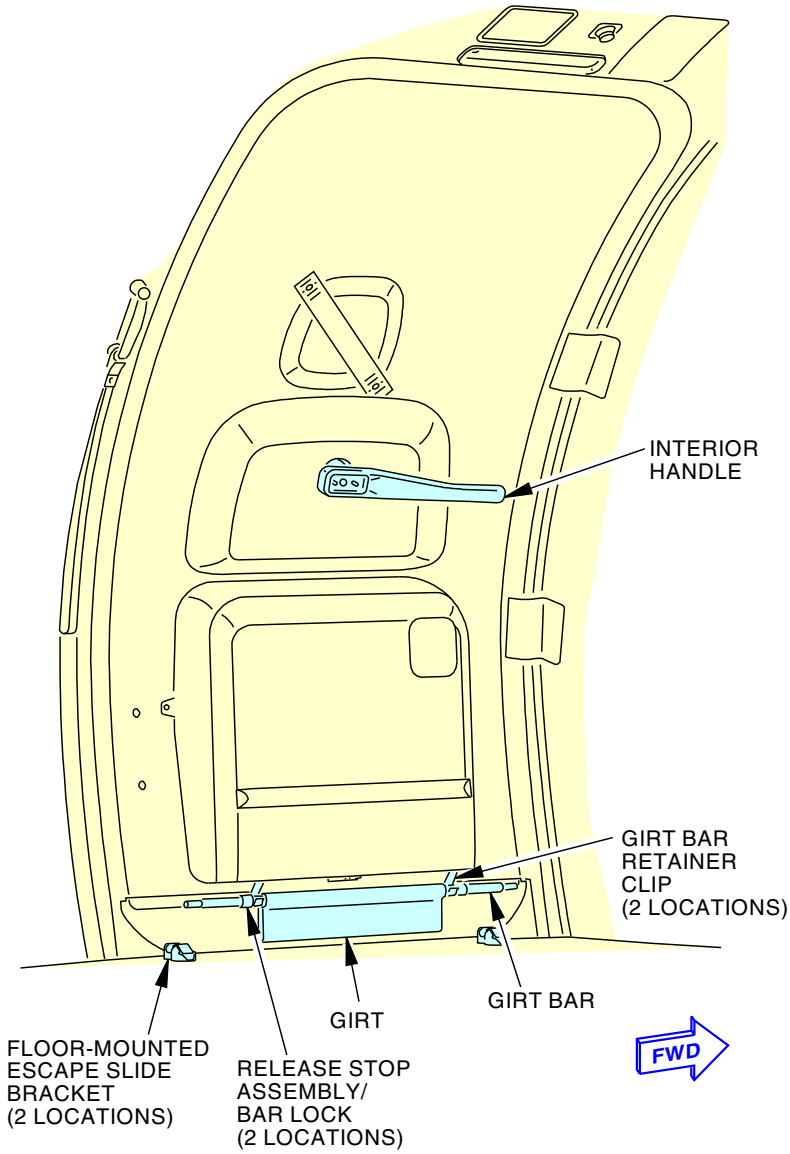


DOOR (EXAMPLE)

2412015 S00061529713_V2

Door-Mounted Escape System
Figure 202/25-66-00-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

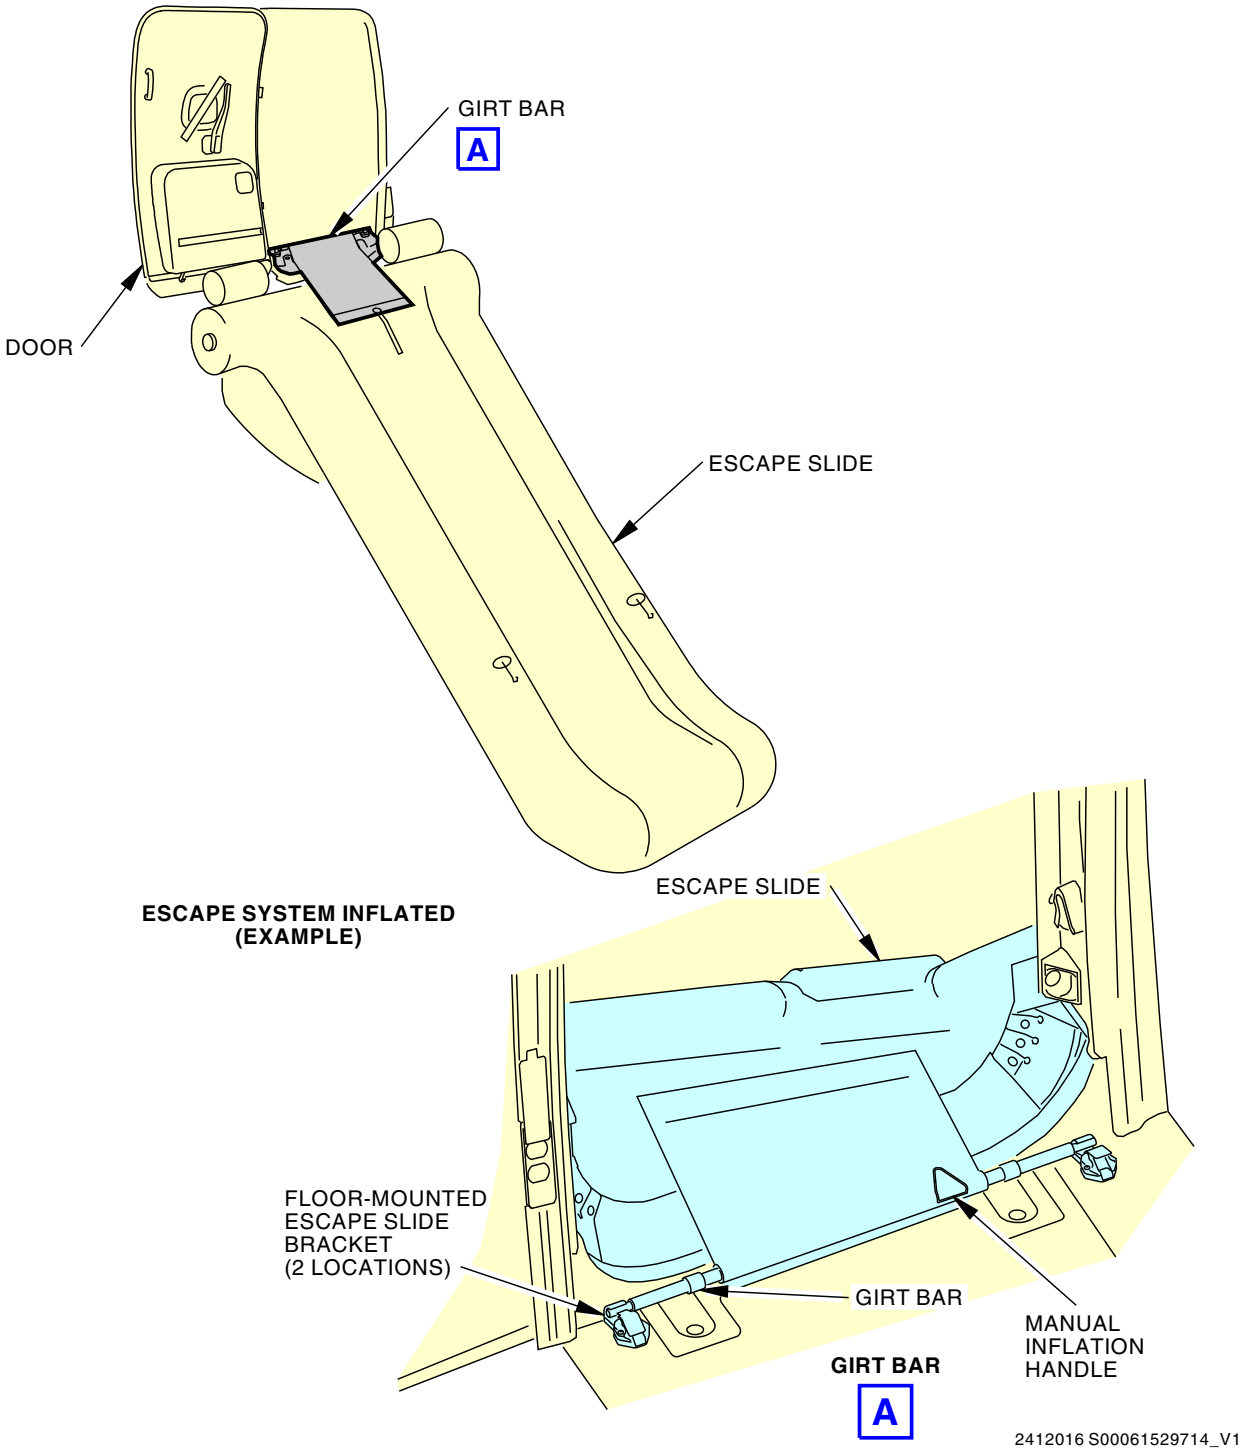

Door-Mounted Escape System
Figure 202/25-66-00-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-66-00-440-801

4. Door-Mounted Escape System - Activation

(Figure 202)

A. General

(1) This task will activate the door-mounted escape system.

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Procedure

SUBTASK 25-66-00-210-004

WARNING KEEP PERSONNEL, EQUIPMENT, AND OTHER ITEMS OUT OF THE HAZARDOUS ENERGY ZONES. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Make sure that there is no blockage in the area near the door from the fuselage to 33 ft (10 m) outboard of the fuselage and from 6 ft (2 m) forward of the door to 6 ft (2 m) aft of the door.

SUBTASK 25-66-00-420-001

(2) For forward and aft door slides, do these steps:

(a) Remove the DO NOT OPERATE tag from the escape slide girt bar.

(b) Remove the nylon zip ties used to attach the girt bar in the girt bar retainer clips on the slide compartment.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DOOR-MOUNTED ESCAPE SYSTEM - ADJUSTMENT/TEST

1. General

A. This procedure has this task:

(1) An operational test of the escape system.

TASK 25-66-00-710-801

2. Escape System Operational Test

(Figure 501)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
25-66-00-840-801	Escape System Restoration (P/B 201)
25-66-01-200-801	Escape Slide Pack Inflation Cylinder Check (P/B 601)

B. Tools/Equipment

Reference	Description
STD-836	Stopwatch
STD-1146	Pad - Protective, Ensolite or Equivalent 1/2 Inch by 72 Inches by 96 Inches

C. Consumable Materials

Reference	Description	Specification
G50689	Tape - Polyken 223 Multi-Purpose Duct Tape	

D. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

E. Prepare for the Test

SUBTASK 25-66-00-860-001

(1) Prepare the airplane for the test as follows:

CAUTION

YOU MUST ATTACH THE PROTECTIVE PAD TO THE FUSELAGE BELOW THE APPLICABLE DOOR. IF YOU DO NOT INSTALL THE PROTECTIVE PAD, DAMAGE TO THE FUSELAGE SKIN AND PAINT CAN OCCUR.

(a) Install the protective pad, STD-1146, to the fuselage below the applicable door with the long side parallel to the ground.

1) Use 3-inch Olive Drab Polyken 223 Tape, G50689, to make sure that no edges come loose when the slide is deployed.

a) Make sure that the protective pad is correctly attached to the fuselage.

NOTE: If the protective pad is not attached correctly, the protective pad can come loose and stop the slide from deploying correctly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Put a pad on the ground where the escape slide will inflate.

NOTE: It is not required to adhere protective covering to the ground.

(c) Make sure that the door is closed and latched.

SUBTASK 25-66-00-210-005

(2) Do this task: Escape Slide Pack Inflation Cylinder Check, TASK 25-66-01-200-801.

F. Escape System Operational Test

SUBTASK 25-66-00-710-001

WARNING KEEP PERSONNEL, EQUIPMENT, AND OTHER ITEMS OUT OF THE HAZARDOUS ENERGY ZONES. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Do the operational test of the escape system:

(a) Remove the girt bar from the girt bar retainers on the cover.

(b) Install the girt bar in the floor-mounted escape slide brackets.

WARNING MAKE SURE THAT THERE ARE NO PERSONS OR EQUIPMENT IN THE AREA BELOW THE DOOR. IF THE AREA IS NOT CLEAR WHEN THE SLIDE DEPLOYS, INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT CAN OCCUR.

(c) Move the interior handle to the open position and open the door fully.

(d) Use a stopwatch, STD-836, to make sure that the escape slide fully inflates in 0-10 seconds after the escape slide releases from the door.

NOTE: The escape slide must inflate automatically to pass the operational test.

(e) If the escape slide does not inflate automatically, do these steps:

1) Contact Boeing for engineering analysis.

2) Pull the manual inflation handle to inflate the escape slide.

(f) Make sure that the escape slide is fully inflated.

(g) Make sure that the lights on the slide are on.


G. Put the Airplane Back to Its Usual Condition

SUBTASK 25-66-00-860-002

(1) Do this task: Escape System Restoration, TASK 25-66-00-840-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

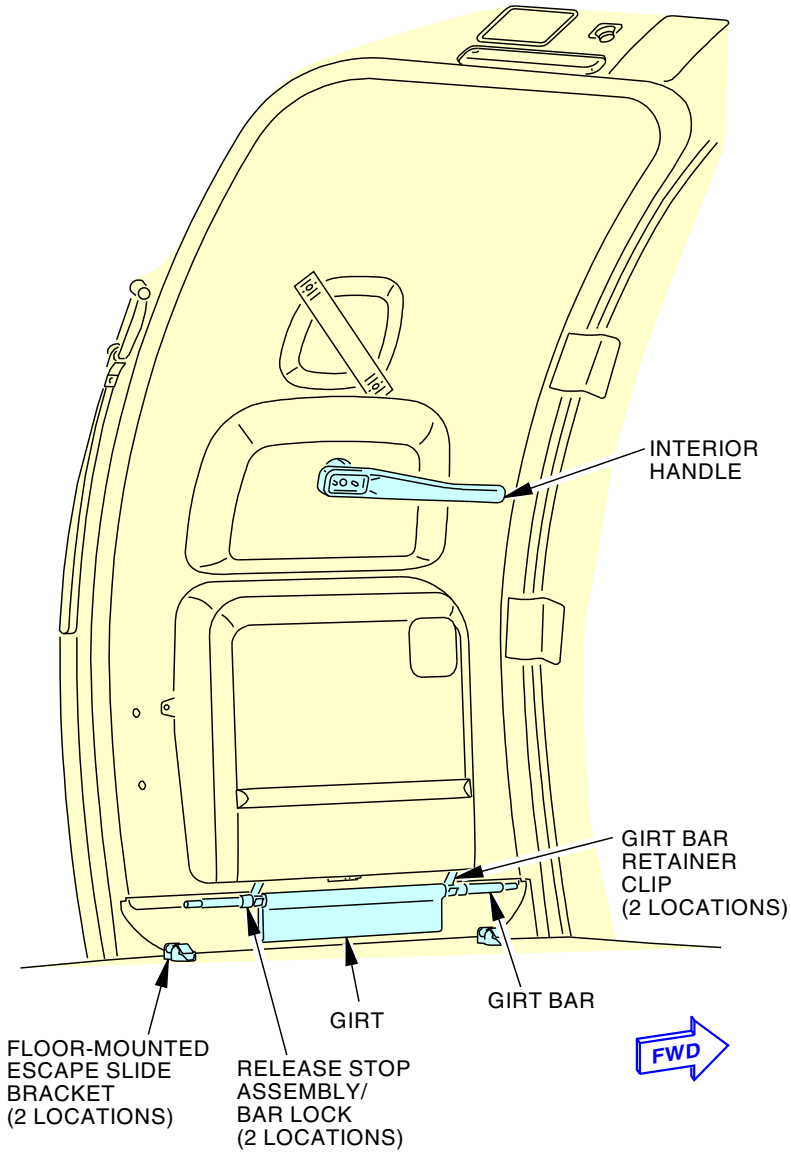


DOOR (EXAMPLE)

2412015 S00061529713_V2

Escape System Operational Test
Figure 501/25-66-00-990-803 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

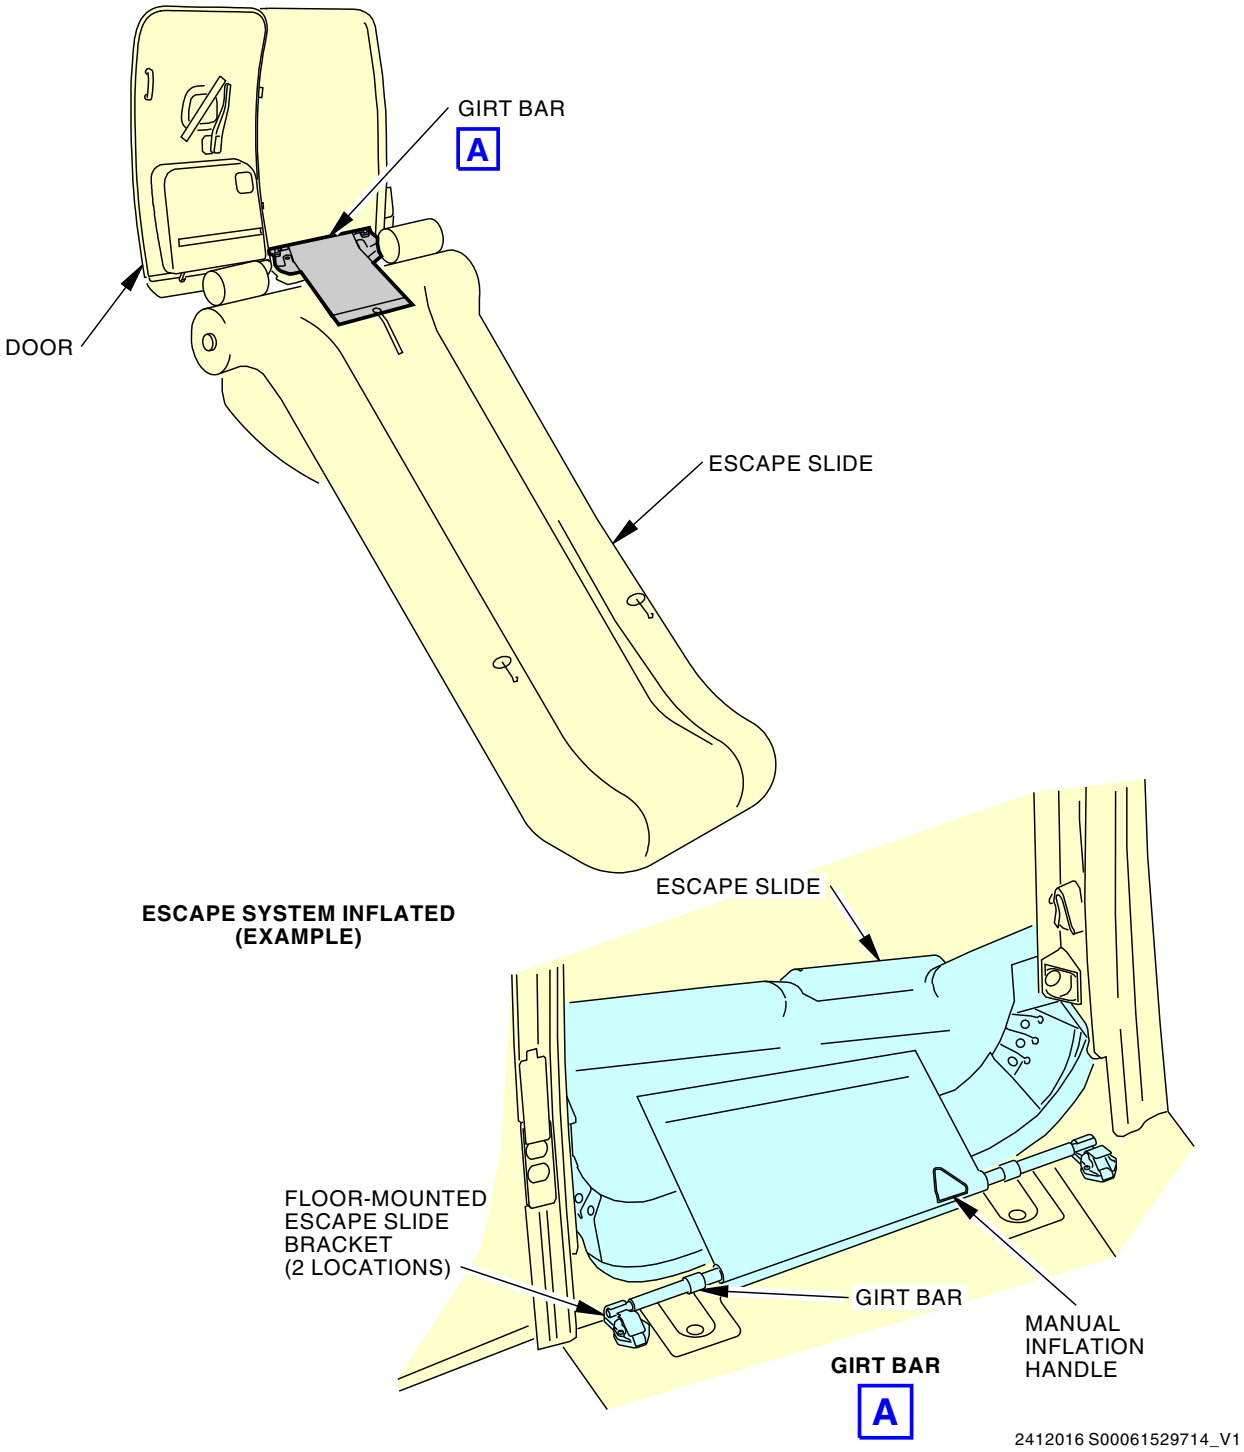

Escape System Operational Test
Figure 501/25-66-00-990-803 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DOOR-MOUNTED ESCAPE SYSTEM - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the escape slide pack and cover

(2) An installation of the escape slide pack and cover

(3) A removal of the escape slide pack

(4) An installation of the escape slide pack

(5) A removal of the escape slide girt bar

(6) An installation of the escape slide girt bar.

B. This procedure is the same for the entry or galley service door.

C. Two persons are necessary to lift or move the escape slide pack and cover. The weight of the escape slide pack and cover is approximately 55 lb (25 kg).

TASK 25-66-01-000-801

2. Escape Slide Pack and Cover Removal

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the removal of the escape slide pack and cover.

B. Consumable Materials

Reference	Description	Specification
G50236	Tie - Cable Wrap - PLT1.5M	SS-5540

C. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

D. Prepare for the Removal

SUBTASK 25-66-01-860-001

WARNING KEEP PERSONNEL, EQUIPMENT, AND OTHER ITEMS OUT OF THE HAZARDOUS ENERGY ZONES. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Make sure that the door is closed and latched.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-66-01-210-003

WARNING

MAKE SURE THAT YOU INSTALL THE GIRT BAR IN THE GIRT-BAR RETAINER CLIPS. IF YOU DO NOT INSTALL THE GIRT BAR IN THE RETAINER CORRECTLY, ACCIDENTAL INFLATION OF THE ESCAPE SLIDE CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL OR DAMAGE TO THE EQUIPMENT.

(2) Make sure that the girt bar [4] is installed in the in the girt bar retainer clips [5].

NOTE: There are two types of girt bars. First configuration has a release stop assembly and a bar lock on opposite ends, and the second configuration has two bar locks, one on each end.

NOTE: The clip engagement area is between the nylon release stop assembly/bar lock and the thick part of the girt bar.

(a) Make sure that the girt [6] is not caught in the girt bar retainer clips [5].

SUBTASK 25-66-01-480-001

(3) Use tie wraps - PLT1.5M, G50236 to secure the girt bar [4] to the girt bar retainer clips [5].

E. Escape Slide Pack and Cover Removal

SUBTASK 25-66-01-020-001

(1) Remove the escape slide pack and cover [2] from the door as follows:

(a) Remove the two screws [9] and two washers [10] that attach the escape slide pack and cover [2] to the door.

(b) Make a note of the two screws [9] lengths and locations for the subsequent installation.

(c) Pull the top of the escape slide pack and cover [2] inboard until it is clear of the door structure.

WARNING

BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

(d) Lift and remove the escape slide pack and cover [2] to disengage the lower fitting [15] from the bottom support bracket [14].

NOTE: The escape slide pack and cover weigh approximately 55 lb (25 kg).

(e) Put the escape slide pack and cover [2] on a clean horizontal surface with the cover backing pan [11] against the horizontal surface.

NOTE: The steps that follow are not necessary if you will not do additional work on the escape slide pack and cover [2].

SUBTASK 25-66-01-860-002

(2) If you will do additional work on escape slide pack and cover [2], do these steps:

NOTE: When the compartment is open, the escape slide pack can expand. Plan the work so the compartment is open for a minimum time to avoid the expansion of the escape slide pack.

(a) Do these steps to install the safety pin [19] in the inflation cylinder valve [17]:

1) Remove the latch [7] from the latch bracket [13].

2) Open the cover [3] to get access to the bonding jumpers [12].

ECCN 9E991 BOEING PROPRIETARY - See title page for details


3) Remove the pins [33] and ladder ties [32] from the studs [31] on the backing pan [11].
4) Remove the bonding jumpers [12] from the studs [31].
5) Fully open the cover [3] to get access to the inflation cylinder valve [17].

WARNING INSTALL THE SAFETY PIN IN THE INFLATION CYLINDER IF YOU REMOVE THE COVER. WITHOUT THE SAFETY PIN, THE ESCAPE SLIDE CAN INFLATE ACCIDENTALLY. IF IT INFLATES, INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

6) Remove the safety pin [19] from the pocket [18].
7) Put the safety pin [19] into the inflation cylinder valve [17].


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

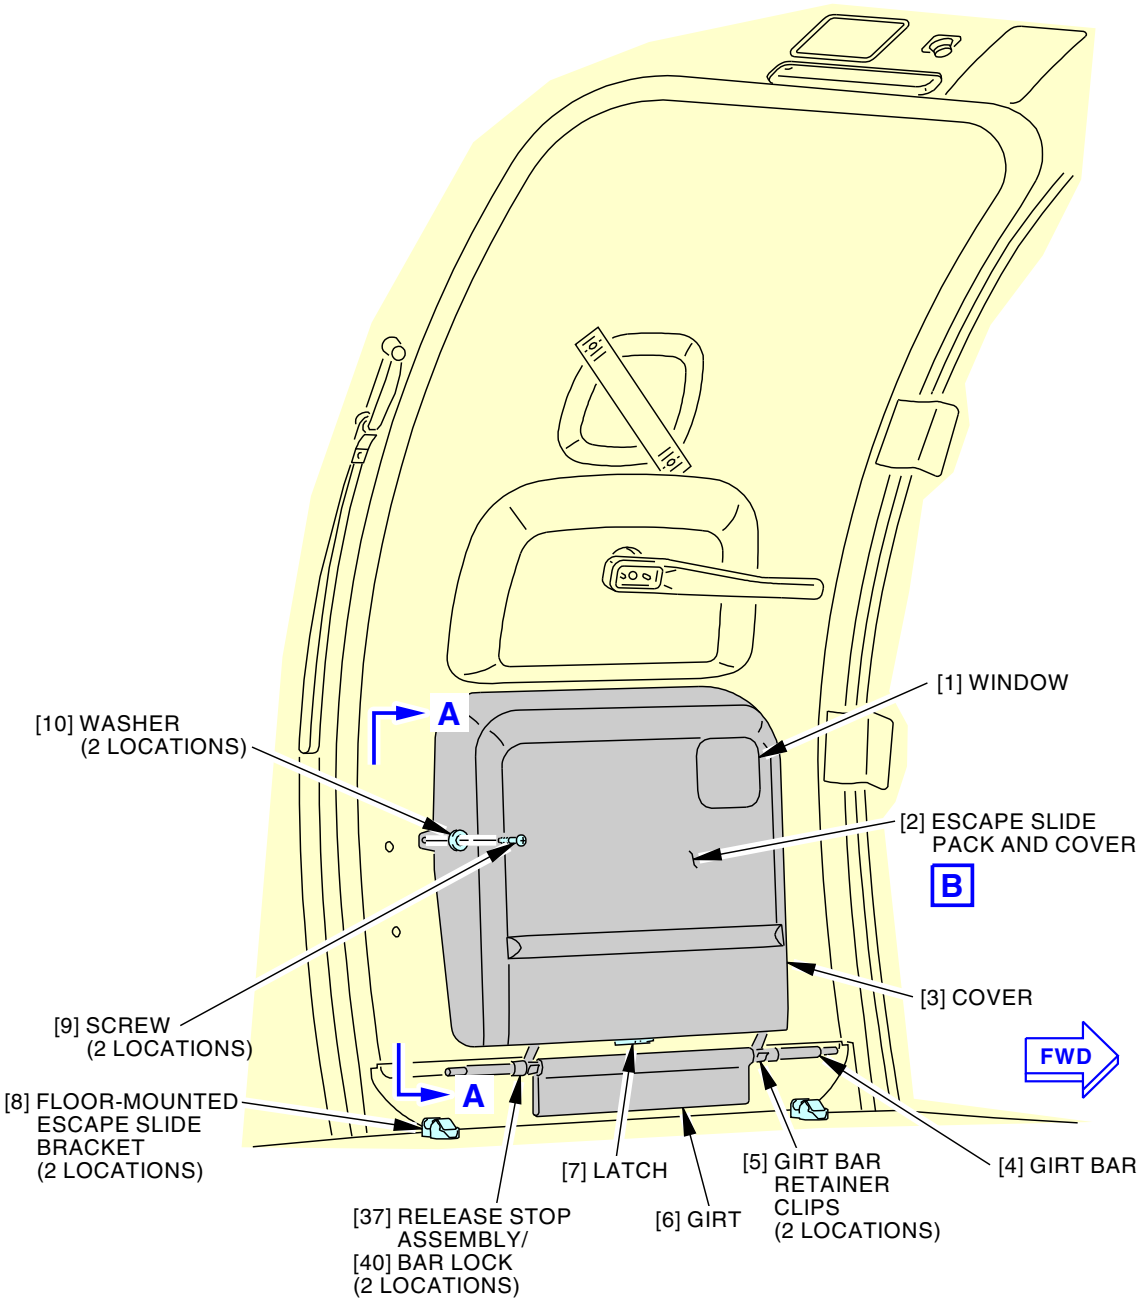

Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 1 of 7)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

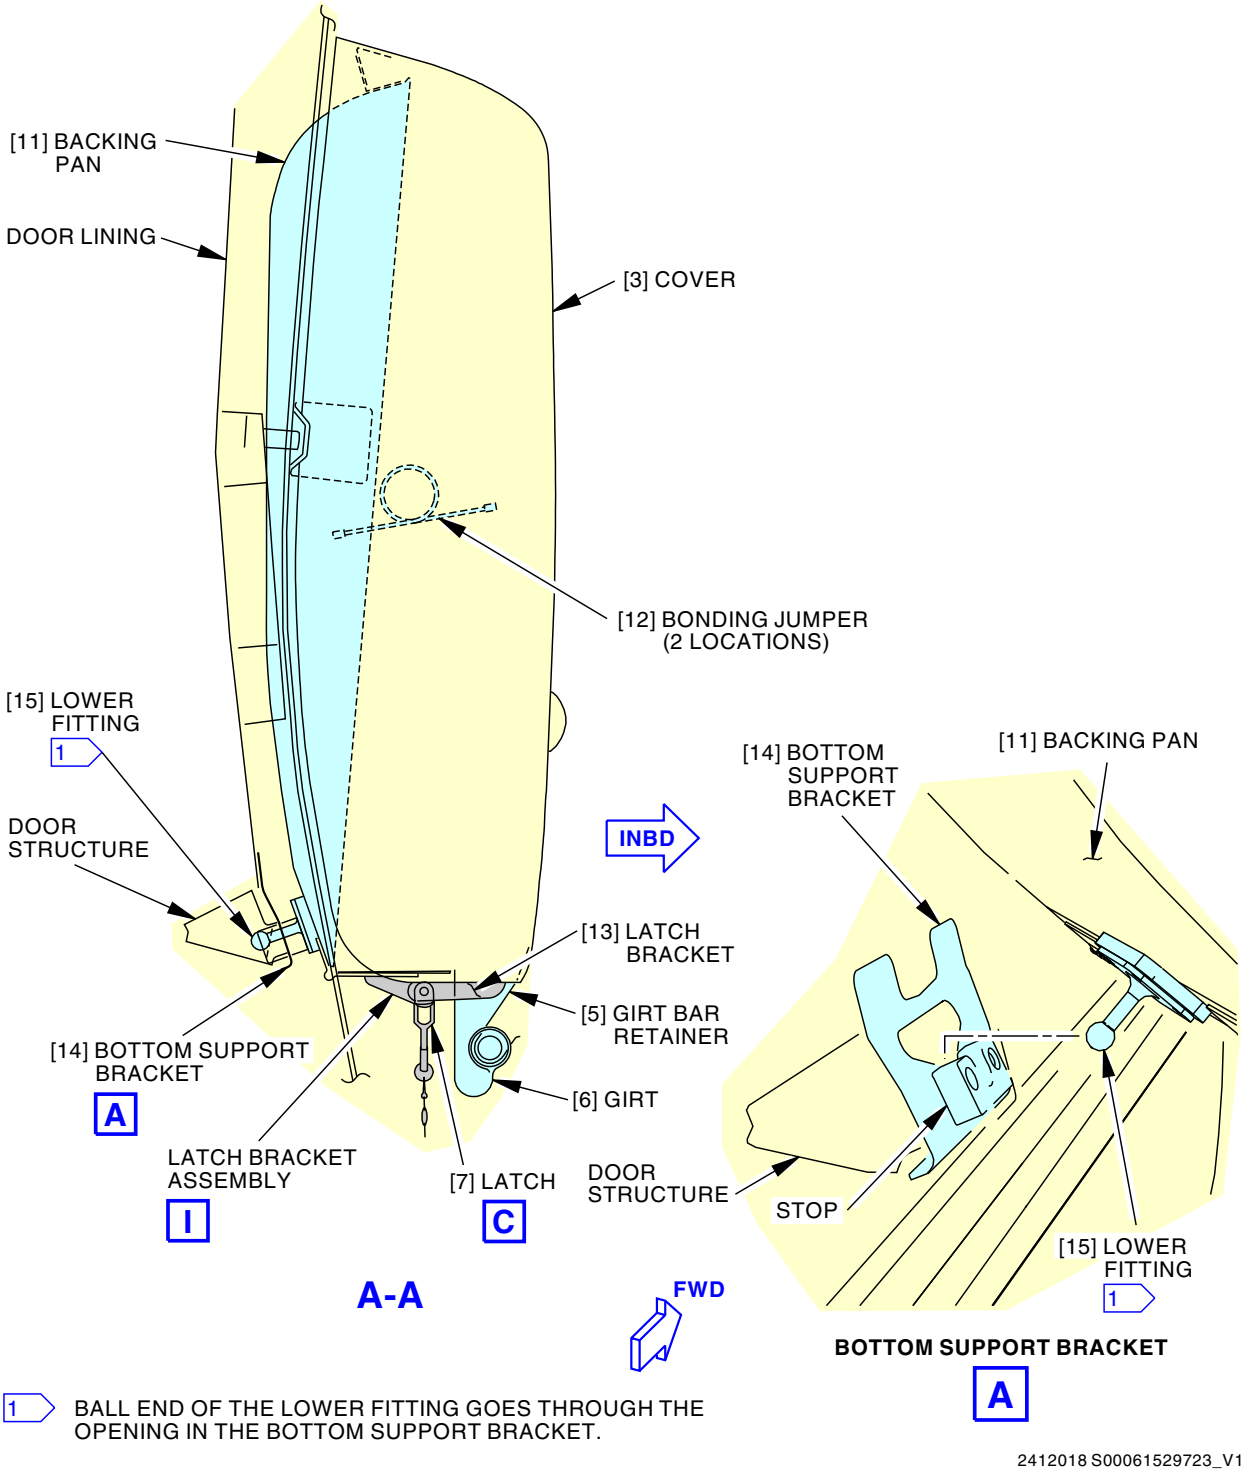

2412018 S00061529723_V1


Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 2 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

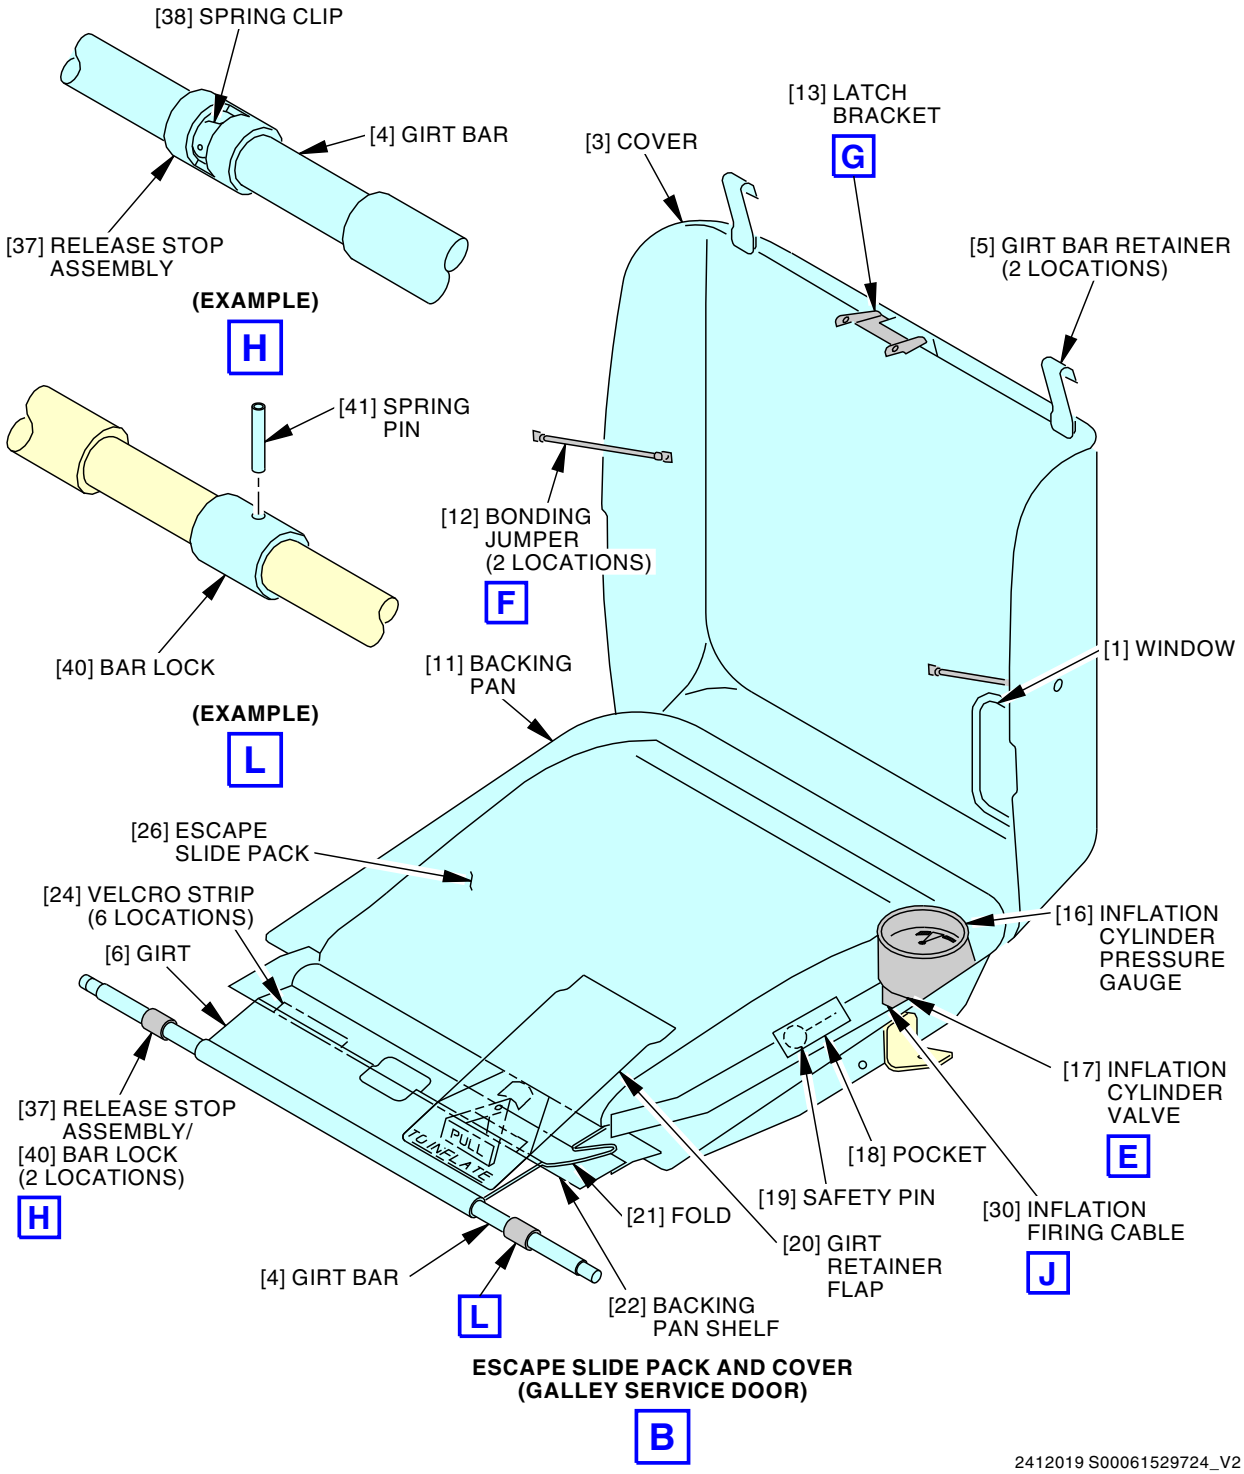

Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 3 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

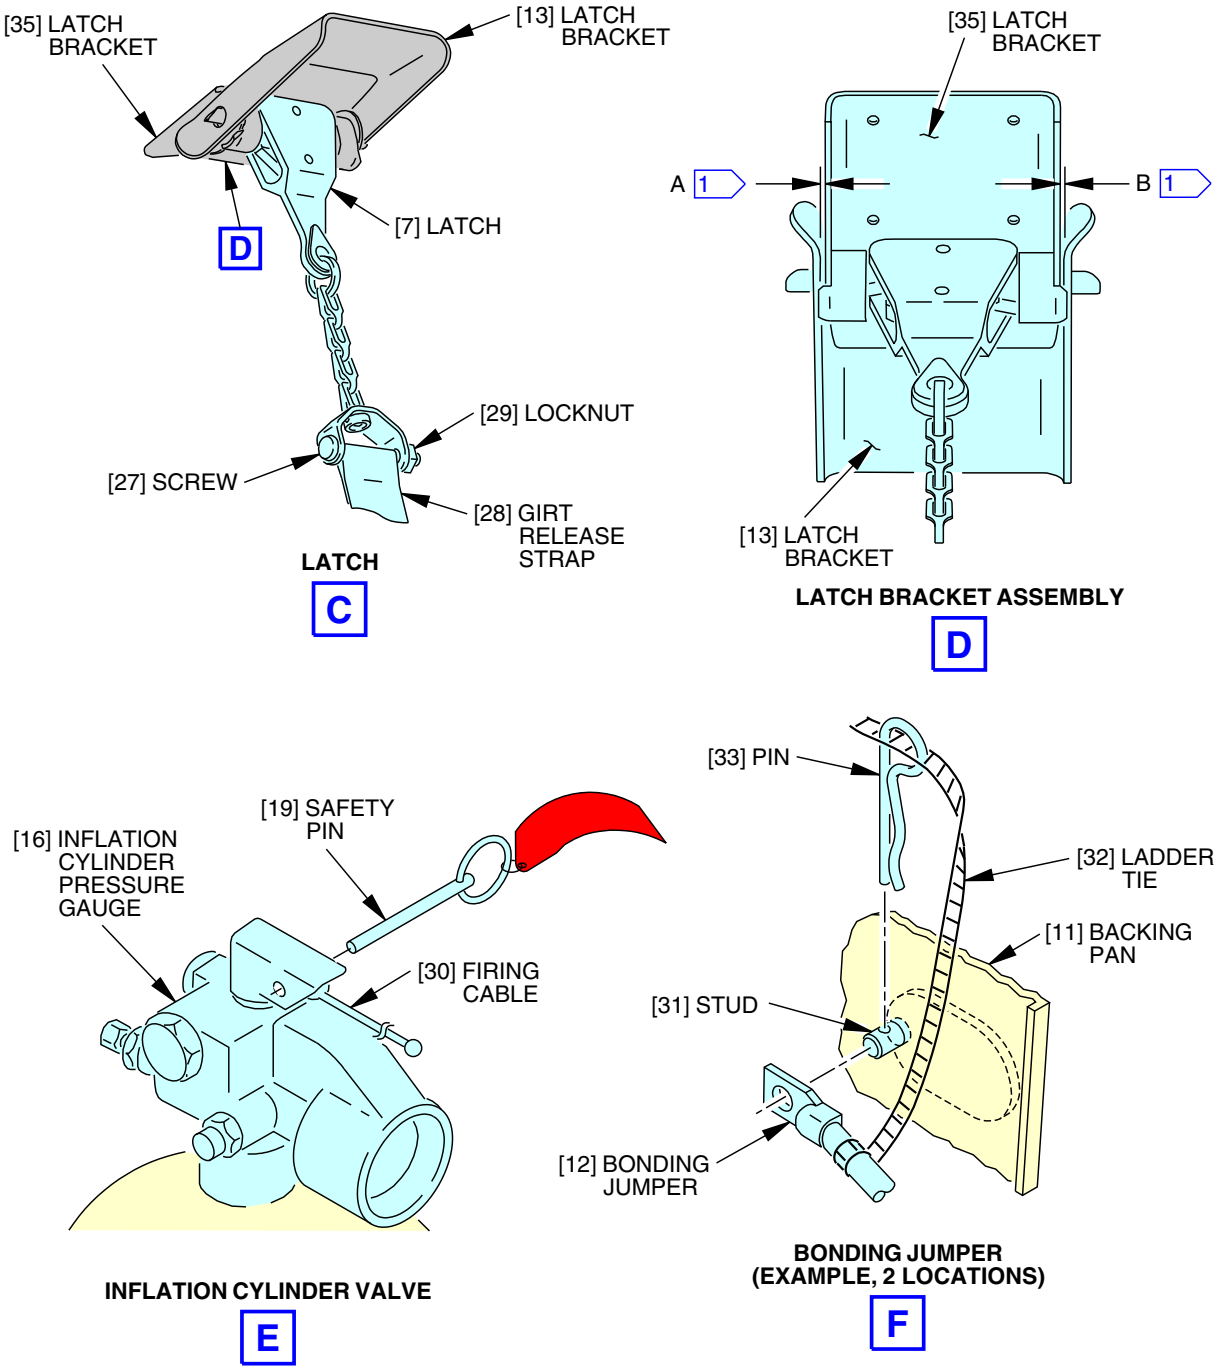


1 THE SUM OF THE CLEARANCES AT A AND B MUST BE NO MORE THAN 0.01 INCH (0.254 mm)

2412020 S00061529725_V2


Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 4 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

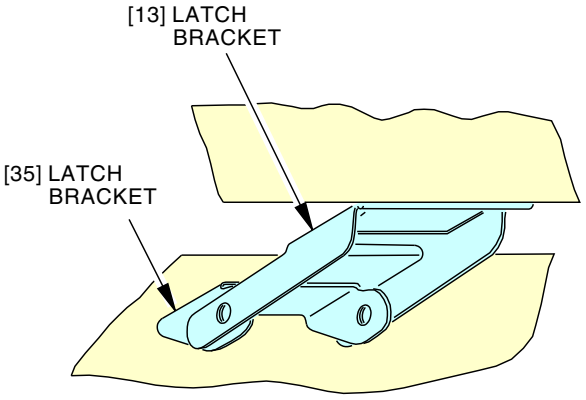


STEP 1
(ALIGN BRACKETS)

G

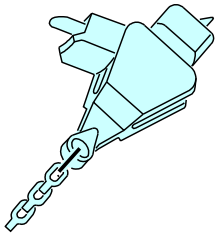


STEP 2
(COCK LATCH)

G

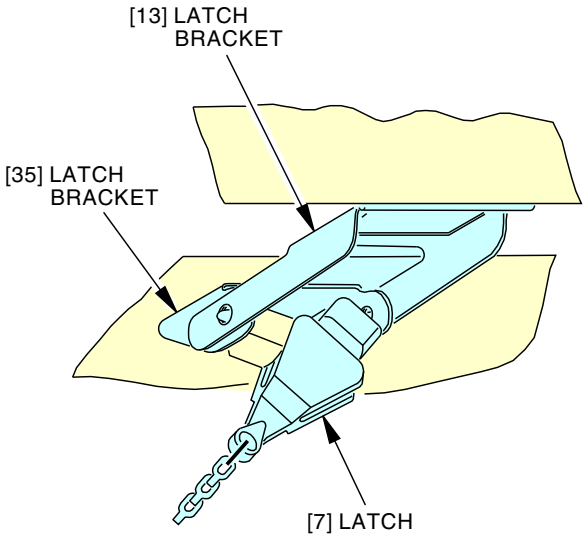

STEP 3
(POSITION LATCH AS SHOWN)

G

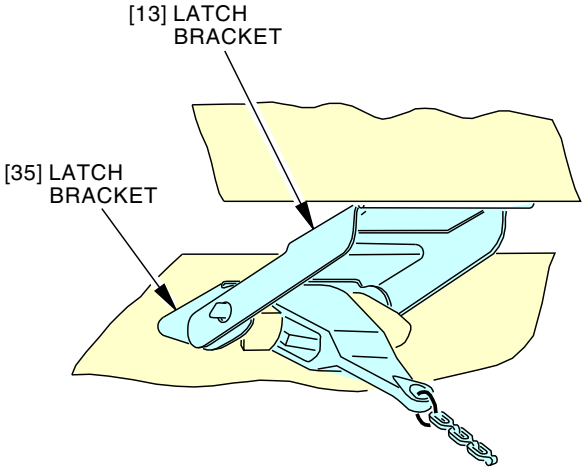


STEP 4
(LATCH IN LOCKED POSITION)

G

2412021 S00061529726_V1

Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 5 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

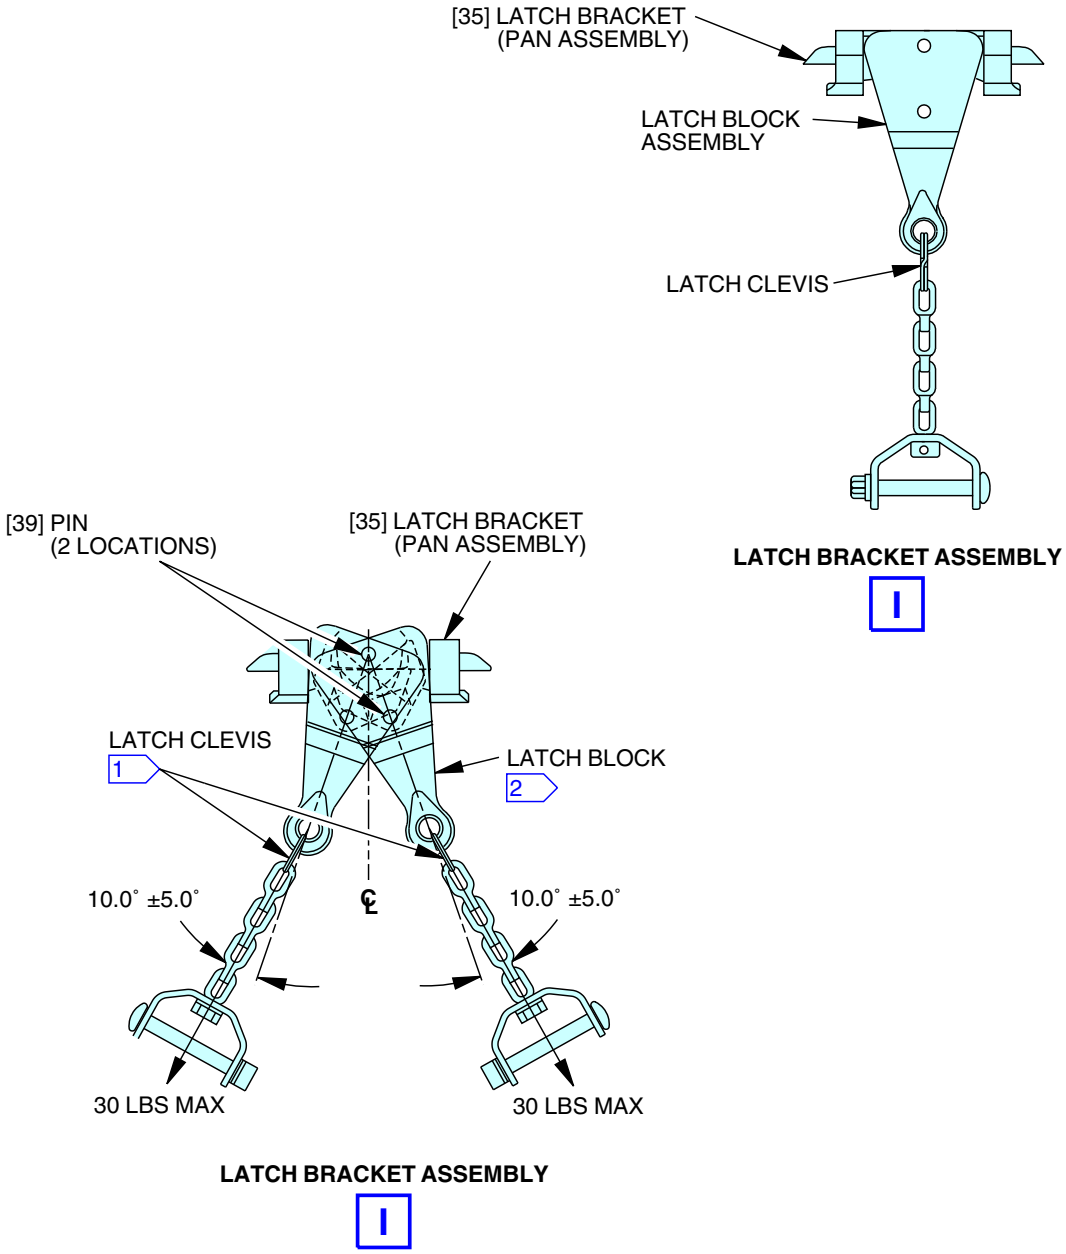

LATCH BRACKET ASSEMBLY

I

LATCH BRACKET ASSEMBLY

I


1 MAKE SURE THAT THE CLEVIS CAN ROTATE FREELY IN THE LATCH BLOCK ASSEMBLY.

2 USE A MAXIMUM OF 30 POUNDS OF FORCE TO RELEASE THE LATCH.

2412022 S00061529727_V2


Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 6 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

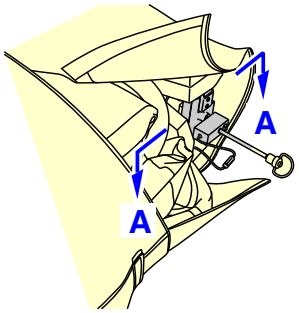


INFLATION FIRING CABLE
(ESCAPE SLIDE WITH TRIGGER HOUSING)

J

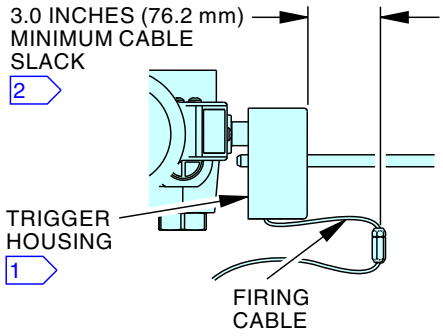


A-A

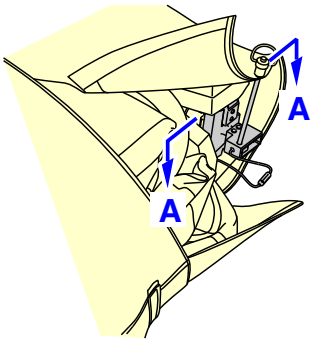


INFLATION FIRING CABLE
(ESCAPE SLIDE WITH ACTUATOR ASSEMBLY)

J

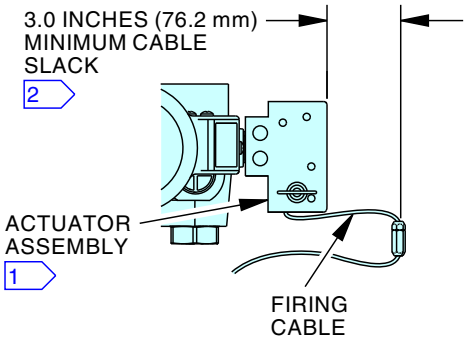


A-A

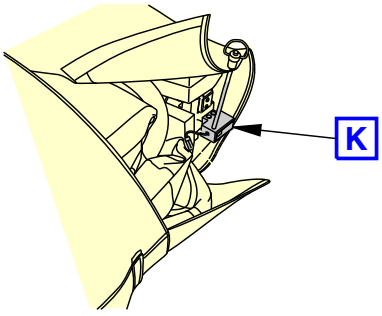

INFLATION FIRING CABLE
(WITH SAFETY TIE)
(EXAMPLE)

J

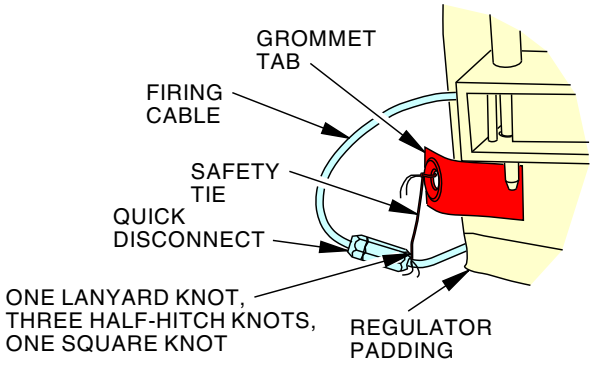

K

1 EACH ESCAPE SLIDE WILL HAVE ONE TRIGGER HOUSING OR ONE ACTUATOR ASSEMBLY.

2 IF THE SAFETY TIE IS INSTALLED ON THE FIRING CABLE, THE FIRING CABLE WILL HAVE THE MINIMUM AMOUNT OF SLACK REQUIRED.

2412023 S00061529728_V3

Escape System Installation
Figure 401/25-66-01-990-804 (Sheet 7 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-66-01-400-801

3. Escape Slide Pack and Cover Installation

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the installation of the escape slide pack and cover.

B. References

Reference	Title
25-66-01-200-801	Escape Slide Pack Inflation Cylinder Check (P/B 601)

C. Consumable Materials

Reference	Description	Specification
G50236	Tie - Cable Wrap - PLT1.5M	SS-5540

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Escape slide pack and cover	25-66-01-01-010	PTF ALL
		25-66-01-02-025	PTF ALL
		25-66-01-03-025	PTF ALL
		25-66-01-04-025	PTF ALL

E. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

F. Prepare for the Installation

SUBTASK 25-66-01-410-001

(1) Make sure that the escape slide pack [26] is in the cover [3] (TASK 25-66-01-400-802).

SUBTASK 25-66-01-410-002

(2) Make sure that the door is closed and latched.

SUBTASK 25-66-01-410-003

(3) Do these steps to make sure that the safety pin [19] is not in the inflation cylinder valve [17]:

(a) Put the escape slide pack and cover [2] on a clean flat horizontal surface with the backing pan [11] against the clean flat horizontal surface.

(b) Remove the latch [7] from the latch bracket [13].

(c) Remove the tie wraps - PLT1.5M, G50236, from the girt bar [4] and the girt bar retainer clips [5].

(d) Remove the girt bar [4] from the girt bar retainer clips [5].

(e) Open the cover [3] sufficiently to see the inflation cylinder valve [17].

NOTE: When the compartment is open, the escape slide pack can expand. Plan the work so the compartment is open for a minimum time to avoid expansion of the escape slide pack.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING REMOVE THE SAFETY LOCK PIN ON THE SLIDE PACK. IF YOU DO NOT REMOVE THE SAFETY LOCK PIN, THE ESCAPE SLIDE WILL NOT INFLATE IN AN EMERGENCY.

(f) Make sure that the safety pin [19] is not in the inflation cylinder valve [17].

WARNING BE CAREFUL WHEN YOU HANDLE THE ESCAPE SLIDE PACK. WHEN THE SAFETY PIN IS REMOVED FROM THE INFLATION CYLINDER VALVE, THE ESCAPE SLIDE CAN ACCIDENTALLY INFLATE. THIS CAN CAUSE INJURIES TO PERSONS OR DAMAGE TO EQUIPMENT.

(g) If the safety pin [19] is installed in the inflation cylinder valve [17], do these steps:

1) If necessary, disconnect the bonding jumpers [12] from the backing pan [11].
   a) Remove the pins [33] and ladder ties [32] from the studs [31] on the backing pan [11].
   b) Remove the bonding jumpers [12] from the studs [31].
2) Fully open the cover [3] to get access to the inflation cylinder valve [17].
3) Remove the safety pin [19] from the inflation cylinder valve [17].
4) Put the safety pin [19] into the pocket [18] on the escape slide pack [26].
5) If removed, connect the bonding jumpers [12] to the backing pan [11].
   a) Put the bonding jumpers [12] fully on to the studs [31] on the backing pan [11].
   b) Install the pins [33] and ladder ties [32] to the studs [31] to secure the bonding jumpers [12].

(h) Close the cover [3] (TASK 25-66-01-400-802).

(i) Install the girt bar [4] to the girt bar retainer clips [5].

NOTE: There are two types of girt bars. First configuration has a release stop assembly and a bar lock on opposite ends, and the second configuration has two bar locks, one on each end.

NOTE: The clip engagement area is between the nylon release stop assembly/bar lock and the thick part of the girt bar.

1) Make sure that the girt [6] is not caught in the girt bar retainer clips [5].

(j) Install the tie wraps - PLT1.5M, G50236, to secure the girt bar [4] to the girt bar retainer clips [5].

(k) Install the latch [7] into the latch bracket [13].

G. Escape Slide Pack and Cover Installation

SUBTASK 25-66-01-420-001

WARNING KEEP PERSONNEL, EQUIPMENT, AND OTHER ITEMS OUT OF THE HAZARDOUS ENERGY ZONES. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Install the escape slide pack and cover [2] on the door as follows:

NOTE: The escape slide weighs approximately 55 lb (25 kg).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

(a) Make sure that the ball end of the lower fitting [15] goes through the opening in the bottom support bracket [14].

(b) Push the top of the escape slide pack and cover [2] outboard until it is against the door.

NOTE: When the compartment is open, the escape slide pack can expand. Plan the work so the compartment is open for a minimum time to avoid the expansion of the escape slide pack.

(c) Install the two screws [9] and two washers [10] that attach the escape slide pack and cover [2] to the door as follows:

1) Make sure that you use the correct length of screws [9] as noted in the removal procedure.

(d) Remove the tie wraps - PLT1.5M, G50236, used to secure the girt bar [4] to the girt bar retainer clips [5].

(e) Make sure that you can arm the escape slide by installing the girt bar [4] into the floor-mounted bracket [8].

CAUTION MAKE SURE THAT YOU INSTALL THE FORWARD GIRT BARS FOR THE FORWARD DOORS AND AFT GIRT BARS FOR THE AFT DOORS. THE FORWARD GIRT BARS WILL NOT CORRECTLY INSTALL INTO THE AFT FLOOR-MOUNTED ESCAPE-SLIDE BRACKETS. THE AFT GIRT BARS WILL NOT CORRECTLY INSTALL INTO THE FORWARD FLOOR-MOUNTED ESCAPE-SLIDE BRACKETS. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT CAN OCCUR.

(f) Install the girt bar [4] into the girt bar retainer clip [5].

NOTE: The length of the girt bar for the FWD (Forward) Door is 33.2 in. (84.3 cm) long.

The length for the girt bar for the AFT Door is 29.2 in. (74.2 cm) long.

NOTE: The clip engagement area is between the nylon release stop assembly/bar lock and the thick part of the girt bar.

1) Make sure that the girt [6] is not caught in the girt bar retainer clips [5].

H. Put the Airplane Back to Its Usual Condition

SUBTASK 25-66-01-200-001

(1) Do this task: Escape Slide Pack Inflation Cylinder Check, TASK 25-66-01-200-801.

END OF TASK

TASK 25-66-01-000-802

4. Escape Slide Pack Removal

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the removal of the escape slide pack.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Consumable Materials

Reference	Description	Specification
G50236	Tie - Cable Wrap - PLT1.5M	SS-5540

C. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

D. Prepare for the Removal

SUBTASK 25-66-01-010-001

WARNING KEEP PERSONNEL, EQUIPMENT, AND OTHER ITEMS OUT OF THE HAZARDOUS ENERGY ZONES. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Do this task: Escape Slide Pack and Cover Removal, TASK 25-66-01-000-801.

E. Escape Slide Pack Removal

SUBTASK 25-66-01-420-002

(1) Remove the escape slide pack [26] from the cover [3] as follows:

(a) Remove tie wraps - PLT1.5M, G50236, that attach the girt bar [4] to the girt bar retainer clips [5].

(b) Remove the girt bar [4] from the girt bar retainer clip [5].

(c) Remove the latch [7] from the latch bracket [13].

(d) Open the cover [3] to get access to the bonding jumper [12].

NOTE: When the compartment is open, the escape slide pack can expand. Plan the work so the compartment is open for a minimum time to avoid the expansion of the escape slide pack.

(e) Remove the pin [33], ladder tie [32], and stud [31] that attach the bonding jumpers [12] to the backing pan [11] as shown.

(f) Fully open the cover [3] to get access to the escape slide pack [26].

WARNING IF THE SAFETY PIN IS NOT IN THE INFLATION CYLINDER VALVE, THE ESCAPE SLIDE CAN ACCIDENTALLY INFLATE. ACCIDENTAL INFLATION OF THE ESCAPE SLIDE CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

(g) Make sure that the safety pin [19] is in the inflation cylinder valve [17].

1) If the safety pin [19] is not in the inflation cylinder valve [17], do these steps:

a) Remove the safety pin [19] from the pocket [18] on the escape slide pack [26].

b) Put the safety pin [19] into the inflation cylinder valve [17].

(h) Remove the escape slide pack [26] from the backing pan [11] and put it on a clean horizontal surface.

NOTE: You must put the slide in the transport box immediately after removal from the backing pan. If it takes too long, the slide will grow and not fit into the backing pan.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(i) If required, remove the locknut [29] and screw [27] to remove the latch [7] from the girt release strap [28].

NOTE: The latch can be needed for a replacement escape slide.

——— END OF TASK ———

TASK 25-66-01-400-802

5. Escape Slide Pack Installation

(Figure 401)

NOTE: This procedure is a scheduled maintenance task.

A. General

(1) This task is for the installation of the escape slide pack [26].

B. Consumable Materials

Reference	Description	Specification
D00113	Lubricant - Solid Film, Liquid Dispersed	BMS3-8
D00670	Oil - Penetrating (For Loosening Frozen Metallic Parts)	A-A-50493
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G50236	Tie - Cable Wrap - PLT1.5M	SS-5540

C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
26	Escape slide pack	25-66-01-01-420	PTF ALL
		25-66-01-02-410	PTF ALL
		25-66-01-03-420	PTF ALL
		25-66-01-04-420	PTF ALL

D. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

E. Prepare for the Installation

SUBTASK 25-66-01-860-003

(1) Make sure that the cover [3] and backing pan [11] are on a clean horizontal surface with the backing pan [11] against the clean horizontal surface.

SUBTASK 25-66-01-860-004

(2) Make sure that the cover [3] is open.

NOTE: When the compartment is open, the escape slide pack [26] can expand. Plan the work so the compartment is open for a minimum time to avoid the expansion of the escape slide pack.

SUBTASK 25-66-01-600-001

(3) Lubricate the latch assembly as follows:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Inspect the escape slide latch component for damage to the solid film lubricant.

1) If damage is found, remove and reapply solid film lubricant, D00113, to the escape slide latch.

(b) Apply penetrating oil, D00670, to the two pins [39] and allow the oil to penetrate.

(c) Apply penetrating oil, D00670, to the two pins [39] again to make sure that the oil fully penetrates the pins.

(d) Wipe the excess penetrating oil, D00670, from the latch assembly with a cotton wiper, G00034.

SUBTASK 25-66-01-700-001

(4) Do a check of the latch release as follows (View I, Figure 401):

(a) Move the latch block to the left or right side until the latch block cannot move.

NOTE: The test starts when you pull the latch block to the side and it cannot continue to move.

(b) Use a spring force scale to pull the latch chain or cable in the same direction 10 ±5°arc (0.17 ±0.09 rad).

(c) Make sure that the latch assembly releases with no more than 30 lbf (133 N).

SUBTASK 25-66-01-700-002

(5) Do the following steps for the check of the latch release again:

(a) Move the latch block in the opposite direction until the latch block cannot move.

NOTE: To complete the latch release check, it is necessary to do the check again in the opposite direction.

(b) Use a spring force scale to pull the latch chain or cable in the same direction 10 ±5°arc (0.17 ±0.09 rad).

(c) Make sure that the latch assembly releases with no more than 30 lbf (133 N).

SUBTASK 25-66-01-860-005

WARNING IF THE SAFETY PIN IS NOT IN THE INFLATION CYLINDER VALVE, THE ESCAPE SLIDE CAN ACCIDENTALLY INFLATE. ACCIDENTAL INFLATION OF THE ESCAPE SLIDE CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

(6) Make sure that the safety pin [19] is in the inflation cylinder valve [17].

F. Installation of the Escape Slide Pack

SUBTASK 25-66-01-420-003

(1) Install the escape slide pack [26] in the cover [3] as follows:

NOTE: The slide must be installed in the backing pan immediately after removal from the transport box. If it takes too long, the slide will grow and not fit into the backing pan.

(a) Put the escape slide pack [26] in the backing pan [11].

NOTE: If the escape slide pack expands and cannot be fitted into the compartment, the escape slide pack must be replaced.

(b) Carefully extend the girt [6].

(c) Make a "Z" fold [21] in the girt [6] as shown.

(d) Align and push together the velcro strips [24] on the bottom side of the girt [6] with the velcro strips [24] on the backing pan shelf [22].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Make sure that the velcro strips [24] on the bottom side of the girt [6] and on the backing pan shelf [22] are clean and function as intended.

1) If the velcro strip [24] is not clean and does not function as intended, replace the velcro strip [24].

a) Remove the three rivets that attach the velcro strip [24] to the backing pan shelf [22] (SRM 51-40-02).

b) Replace the velcro strip [24].

c) Install the three rivets to attach the velcro strip [24] to the backing pan shelf [22] (SRM 51-40-02).

(f) Align and push together the velcro strips [24] on the girt flap retainer [20] and the velcro strips [24] on the girt [6].

(g) If required, install the screw [27] and locknut [29] to attach the latch [7] to the girt release strap [28].

1) Make sure that the screw [27] extends through the locknut [29] by 1 to 2 threads.

(h) Make sure that there is the minimum amount of slack in the inflation firing cable [30] near the inflation cylinder valve [17].

NOTE: If the safety tie is installed on the firing cable, the firing cable will have the minimum amount of slack required.

(i) If there is not enough slack in the inflation firing cable [30], do these steps:

1) Make sure that the safety pin [19] is installed.

2) Make sure that the slide is correctly installed in the backing pan [11].

3) Make sure that the "Z" fold [21] in the girt [6] is correct.

4) Make sure that the velcro strip [24] on the girt flap retainer [20] and velcro strip [24] on the girt [6] are attached.

5) Make sure that there is the minimum amount of slack in the inflation firing cable [30] near the inflation cylinder valve [17] as follows:

NOTE: If the safety tie is installed on the firing cable, the firing cable will have the minimum amount of slack required.

a) Hold the inflation firing cable [30] at the inflation cylinder valve [17].

b) Pull the slack in the inflation firing cable [30] away from the girt [6], in the direction of the inflation cylinder valve [17] until you get the minimum amount of slack.

NOTE: If the minimum slack is not achieved, the escape slide pack must be repacked.

c) Place the slack in the firing cable between the back of the aspirator and the inflation cylinder valve [17].

WARNING

BE CAREFUL WHEN YOU HANDLE THE ESCAPE SLIDE PACK. WHEN THE SAFETY PIN IS REMOVED FROM THE INFLATION CYLINDER VALVE, THE ESCAPE SLIDE CAN ACCIDENTALLY INFLATE. THIS CAN CAUSE INJURIES TO PERSONS OR DAMAGE TO EQUIPMENT.

(j) Remove the safety pin [19] from the inflation cylinder valve [17].

(k) Put the safety pin [19] into the pocket [18] on the escape slide pack [26].

(l) Close the cover [3].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(m) Make sure that you can clearly see the pressure gauge [16] of the inflation cylinder in the window [1].

(n) If it is necessary, adjust as follows:

1) Fully open the cover [3] to get access to the escape slide pack [26].

2) Remove the safety pin [19] from the pocket [18] and install safety pin [19] in the inflation cylinder valve [17].

3) Move the escape slide pack [26] to get the pressure gauge [16] in the center of the window [1].

4) Make sure that there is the minimum amount of slack in the inflation firing cable [30] near the inflation cylinder valve [17] as follows:

NOTE: If the safety tie is installed on the firing cable, the firing cable will have the minimum amount of slack required.

a) Hold the inflation firing cable [30] at the inflation cylinder valve [17].

b) Pull the slack in the inflation firing cable [30] away from the girt [6], in the direction of the inflation cylinder valve [17] until you get the minimum amount of slack

NOTE: If the minimum slack is not achieved, the escape slide pack must be repacked.

c) Place the slack in the firing cable between the back of the aspirator and the inflation cylinder valve [17].

5) Remove the safety pin [19] from the inflation cylinder valve [17].

6) Put the safety pin [19] into the pocket [18] on the escape slide pack [26].

(o) Close the cover [3] sufficiently to connect the bonding jumpers [12] to the backing pan [11].

(p) Install the stud [31], ladder tie [32] and pin [33] to attach the bonding jumpers [12] to the backing pan [11].

(q) Close the cover [3].

(r) Make sure that the distance between the center of the lower edge of the cover [3] to the center of the girt bar [4] is 10.5 in. (266.7 mm) to 12.0 in. (304.8 mm).

(s) Align the holes in the latch bracket [13] and latch bracket [35] to install the latch [7].

(t) Install the latch [7] in the latch bracket [13] and latch bracket [35] as shown.

(u) Make sure that the sum of the clearances at 'A' and 'B' between the latch bracket [13] and latch bracket [35] is no more than 0.01 in. (0.25 mm).

(v) Install the girt bar [4] in the girt bar retainer clips [5].

NOTE: There are two types of girt bars. First configuration has a release stop assembly and a bar lock on opposite ends, and the second configuration has two bar locks, one on each end.

NOTE: The clip engagement area is between the nylon release stop assembly/bar lock and thick part of the girt bar.

1) Make sure that the girt [6] is not caught in the girt bar retainer clips [5].

2) Use tie wraps - PLT1.5M, G50236, to attach the girt bar [4] to the girt bar retainer clips [5].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-66-01-400-804

6. Escape Slide Pack Installation (Unscheduled)

(Figure 401)

A. Consumable Materials

Reference	Description	Specification
G50236	Tie - Cable Wrap - PLT1.5M	SS-5540

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Prepare for the Installation

SUBTASK 25-66-01-860-008

(1) Make sure that the cover [3] and backing pan [11] are on a clean horizontal surface with the backing pan [11] against the clean horizontal surface.

SUBTASK 25-66-01-860-009

(2) Make sure that the cover [3] is open.

NOTE: When the compartment is open, the escape slide pack [26] can expand. Plan the work so the compartment is open for a minimum time to avoid the expansion of the escape slide pack [26].

SUBTASK 25-66-01-700-003

(3) Do a check of the latch release (Figure 401).

(a) Move the latch block to the left or right side until the latch block cannot move.

NOTE: The test starts when you pull the latch block to the side and it cannot continue to move.

(b) Use a spring force scale to pull the latch chain in the same direction.

1) Pull the latch chain or cable in the same direction 10 ±5°arc (0.17 ±0.09 rad).

(c) Make sure that the latch assembly releases with no more than 30 lbf (133 N).

SUBTASK 25-66-01-700-004

(4) Do the steps for the check of the latch release again.

(a) Move the latch block in the opposite direction.

NOTE: To complete the latch release check, it is necessary to do the check again in the opposite direction.

SUBTASK 25-66-01-420-004

WARNING IF THE SAFETY PIN IS NOT IN THE INFLATION CYLINDER VALVE, THE ESCAPE SLIDE CAN ACCIDENTALLY INFLATE. ACCIDENTAL INFLATION OF THE ESCAPE SLIDE CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

(5) Make sure that the safety pin [19] is in the inflation cylinder valve [17].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Installation of the Escape Slide Pack

SUBTASK 25-66-01-400-001

(1) Install the escape slide pack [26] in the cover [3] as follows:

NOTE: The slide must be installed in the backing pan [11] immediately after removal from the transport box. If it takes too long, the slide will grow and not fit into the backing pan [11].

(a) Put the escape slide pack [26] in the backing pan [11].

NOTE: If the escape slide pack [26] expands and can not be fitted into the compartment, a new escape slide pack [26] must be installed.

(b) Carefully extend the girt [6].

(c) Make a "Z" fold [21] in the girt [6] as shown.

(d) Align and push together the velcro strip [24] on the bottom side of the girt [6] with the velcro strip [24] on the backing pan shelf [22].

(e) Make sure that the velcro strips [24] on the bottom side of the girt [6] and on the backing pan shelf [22] are clean and function as intended.

1) If the velcro strip [24] is not clean and does not function as intended, replace the velcro strip [24].

a) Remove the three rivets that attach the velcro strip [24] to the backing pan shelf [22] (SRM 51-40-02).

b) Replace the velcro strip [24].

c) Install the three rivets to attach the velcro strip [24] to the backing pan shelf [22] (SRM 51-40-02).

(f) Align and push together the velcro strip [24] on the girt flap retainer [20] and the velcro strip [24] on the girt [6].

(g) If required, install the screw [27] and locknut [29] to attach the latch [7] to the girt release strap [28].

1) Make sure that the screw [27] extends through the locknut [29] by 1 to 2 threads.

(h) Make sure that there is at least the minimum amount of slack in the inflation firing cable [30] near the inflation cylinder valve [17] (Figure 401).

NOTE: If the safety tie is installed on the firing cable, the firing cable will have the minimum amount of slack required.

(i) If there is not enough slack in the inflation firing cable [30] (Figure 401), do these steps:

1) Do not remove the safety pin [19].

2) Make sure that the slide is correctly installed in the backing pan [11].

3) Make sure the "Z" fold [21] in the girt [6] is correct. Make sure that the velcro strip [24] on the girt flap retainer [20] and the velcro strip [24] on the girt [6] are attached.

4) Make sure that there is at least the minimum amount of slack in the inflation firing cable [30] near the inflation cylinder valve [17] (Figure 401).

NOTE: If the safety tie is installed on the firing cable, the firing cable will have the minimum amount of slack required.

a) Hold the inflation firing cable [30] at the inflation cylinder valve [17] and pull the slack from the cable.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

<1> Pull the slack in the inflation firing cable [30] away from the girt [6], in the direction of the inflation cylinder valve [17] until all slack is removed and the minimum amount of slack is achieved. If the minimum slack is not achieved, the escape slide pack [26] must be repacked.

<2> Place the slack in the firing cable between the back of the aspirator and the inflation cylinder valve [17].

WARNING BE CAREFUL WHEN YOU HANDLE THE ESCAPE SLIDE PACK. WHEN THE SAFETY PIN IS REMOVED FROM THE INFLATION CYLINDER VALVE, THE ESCAPE SLIDE CAN ACCIDENTALLY INFLATE. THIS CAN CAUSE INJURIES TO PERSONS OR DAMAGE TO EQUIPMENT.

(j) Carefully remove the safety pin [19] from the inflation cylinder valve [17].

(k) Put the safety pin [19] into the pocket [18] on the escape slide pack [26].

(l) Close the cover [3].

(m) Make sure that you can clearly see the pressure gauge [16] of the inflation cylinder in the window [1]. If necessary, adjust as follows:

1) Fully open the cover [3] to get access to the escape slide pack [26]

2) Remove the safety pin [19] from the pocket [18] and install the safety pin [19] in the inflation cylinder valve [17].

3) Move the escape slide pack [26] to get the pressure gauge [16] in the center of the window [1].

4) Make sure that there is the minimum amount of slack in the inflation firing cable [30] near the inflation cylinder valve [17] (Figure 401).

a) Hold the inflation firing cable [30] at the inflation cylinder valve [17] and pull the slack from the cable.

<1> Pull the slack in the inflation firing cable [30] away from the girt [6], in the direction of the inflation cylinder valve [17] until all slack is removed and the minimum amount of slack is achieved. If the minimum slack is not achieved, the escape slide pack [26] must be repacked.

<2> Place the slack in the firing cable between the back of the aspirator and the inflation cylinder valve [17].

5) Remove the safety pin [19] from the inflation cylinder valve [17].

6) Put the safety pin [19] into the pocket [18] on the escape slide pack [26].

(n) Close the cover [3] sufficiently to connect the bonding jumpers [12] to the backing pan [11].

(o) Install the stud [31], ladder tie [32], and pin [33] to attach the bonding jumpers [12] to the backing pan [11].

(p) Close the cover [3].

(q) Make sure that the distance between the center of the lower edge of the cover [3] to the center of the girt bar [4] is 10.5 in. (266.7 mm) to 12.0 in. (304.8 mm).

(r) Align the holes in the latch bracket [13] and latch bracket [35] to install the latch [7].

(s) Install the latch [7] in the latch bracket [13] and latch bracket [35] as shown.

(t) Make sure that the sum of the clearances at 'A' and 'B' between the latch bracket [13] and latch bracket [35] is no more than 0.01 in. (0.25 mm) (Figure 401).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(u) Make sure that you can arm the escape slide by installing the girt bar [4] into the floor-mounted bracket [8] between the release stop assembly [37]/bar lock [40] and the girt [6].

(v) Install the girt bar [4] in the girt bar retainer clip [5].

NOTE: There are two types of girt bars. First configuration has a release stop assembly [37] and a bar lock [40] on opposite ends, and the second configuration has two bar locks [40], one on each end.

NOTE: : The clip engagement area is between the nylon release stop assembly [37]/bar lock [40] and the thick part of the girt bar [4].

1) Make sure that the girt [6] is not caught in the girt bar retainer clips [5].

(w) Use tie wrap - PLT1.5M, G50236 to attach the girt bar [4] to the girt bar retainer clip [5].

——— END OF TASK ———

TASK 25-66-01-000-803

7. Escape Slide Girt Bar Removal

(Figure 401)

A. General

(1) This task is for the removal of the escape slide girt bar.

B. Tools/Equipment

Reference	Description
STD-1242	Hammer - Standard
STD-3908	Punch - Standard

C. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

D. Prepare for the Removal

SUBTASK 25-66-01-860-006

(1) Make sure that the door is fully closed or fully open.

SUBTASK 25-66-01-020-006

(2) Remove the girt bar [4] from the girt bar retainer clips [5].

E. Escape Slide Girt Bar Removal

SUBTASK 25-66-01-020-002

(1) For the girt bars [4] with bar lock [40] and spring pin [41] on each end of the girt bar [4], do these steps:

(a) Use the standard hammer, STD-1242, and standard punch, STD-3908, to remove one spring pin [41] from one of the bar locks [40].

NOTE: Use pliers to help in the removal when the spring pin is not fully out of the bar lock.

(b) Slide the bar lock [40] off the girt bar [4].

(c) Pull the girt bar [4] out of the girt [6].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Record the length of the girt bar [4] for each door for the installation task.

SUBTASK 25-66-01-020-003

(2) For the girt bars [4] with a release stop assembly [37] and spring clip [38], do these steps:

(a) Use a flat head screw driver or equivalent to lift the spring clip [38] until the pin comes out of the hole in the release stop assembly [37].

(b) Slide the release stop assembly [37] off the girt bar [4].

(c) Pull the girt bar [4] out of the girt [6].

1) Record the length of the girt bar [4] for each door for the subsequent installation task.

END OF TASK

TASK 25-66-01-400-803

8. Escape Slide Girt Bar Installation

(Figure 401)

A. General

(1) This task is for the installation of the escape slide girt bar.

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
4	Girt bar	25-66-01-01-390	PTF ALL
		25-66-01-02-386	PTF ALL
		25-66-01-03-392	PTF ALL
		25-66-01-04-395	PTF ALL

C. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

D. Prepare for the Installation

SUBTASK 25-66-01-860-007

(1) Make sure that the door is fully closed or fully open.

E. Escape Slide Girt Bar Installation

SUBTASK 25-66-01-020-004

(1) For the girt bars with a bar lock [40] and spring pin [41] on each end of the girt bar [4], do these steps:

(a) Refer to the length of the girt bar recorded during the removal task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION

MAKE SURE THAT YOU INSTALL THE FORWARD GIRT BARS FOR THE FORWARD DOORS AND AFT GIRT BARS FOR THE AFT DOORS. THE FORWARD GIRT BARS WILL NOT CORRECTLY INSTALL INTO THE AFT FLOOR-MOUNTED ESCAPE-SLIDE BRACKETS. THE AFT GIRT BARS WILL NOT CORRECTLY INSTALL INTO THE FORWARD FLOOR-MOUNTED ESCAPE-SLIDE BRACKETS. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT CAN OCCUR.

(b) Make sure that you install the correct length girt bar for each door.

NOTE: The length of the girt bar for the FWD Door is 33.2 in. (84.3 cm) long.

The length for the girt bar for the AFT Door is 29.2 in. (74.2 cm) long.

(c) With a bar lock [40] and spring pin [41] removed from one end, slide the girt bar [4] through the girt [6].

(d) Slide the bar lock [40] on to the girt bar [4].

(e) Align the holes in the bar lock [40] with the holes in the girt bar [4].

(f) Install a spring pin [41] in the hole.

NOTE: The spring pin should be flush with each end of the sleeve when completed.

SUBTASK 25-66-01-020-005

(2) For the girt bars with the release stop assembly [37] and spring clip [38], do these steps:

(a) Refer to the length of the girt bar recorded during the removal task.

(b) Make sure that you install the correct length girt bar for each door.

(c) With the release stop assembly [37] removed from the girt bar [4], slide the girt bar through the girt [6].

(d) Slide the release stop assembly [37] on to the girt bar [4].

(e) Align the hole in the girt bar [4] with the hole in the release stop assembly [37].

NOTE: When the holes are properly aligned, the spring clip pin will release and engage the hole on the release stop assembly and girt bar.

(f) When the spring clip [38] is engaged, make sure that the release stop assembly [37] will not rotate around the girt bar [4].

NOTE: The release stop assembly will not rotate when installed correctly.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DOOR-MOUNTED ESCAPE SYSTEM - INSPECTION/CHECK

1. General

A. This procedure has these tasks:

(1) Escape Slide Pack Inflation Cylinder Check.

(2) Escape Slide Pack Check.

TASK 25-66-01-200-801

2. Escape Slide Pack Inflation Cylinder Check

(Figure 601)

A. General

(1) The pressure gage of the escape slide pack inflation cylinder has a temperature compensator.

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Escape Slide Pack Inflation Cylinder Check

SUBTASK 25-66-01-210-001

(1) Do a check of the inflation cylinder pressure level:

(a) Make sure the inflation cylinder temperature is constant (± 5 degrees F / ± 3 degrees C) for two hours or more.

(b) Look through the window in the cover at the inflation cylinder pressure gage.

(c) Make sure the pressure indicator needle is in the GO band (green) or not more than one needle width to the right of the GO band (green).


NOTE: It is best to do a check on the pressure gage when it has been at a constant temperature for 2 hours or more. The GO band (green) moves more quickly than the pressure gage needle in response to a large temperature change. This can cause an incorrect pressure indication.

(d) If you will do an initial install of the escape slide assembly, make sure the pressure indicator needle aligns with the black line on the GO band (green).


NOTE: The escape slide will operate with the pressure indicator needle at the left side of the GO band (green). This is not recommended for the initial installation of the escape slide assembly.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

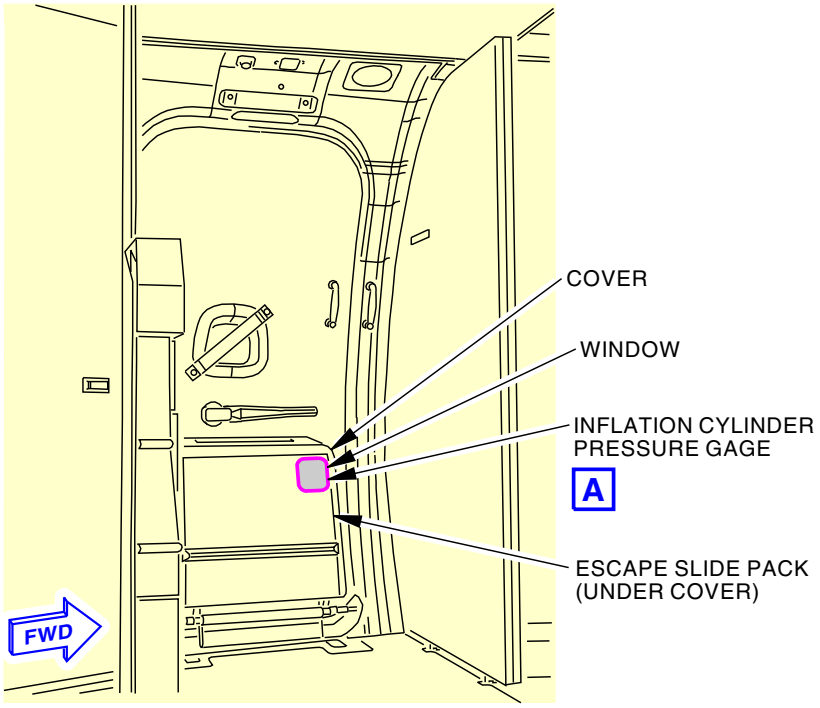

DOOR
(EXAMPLE)

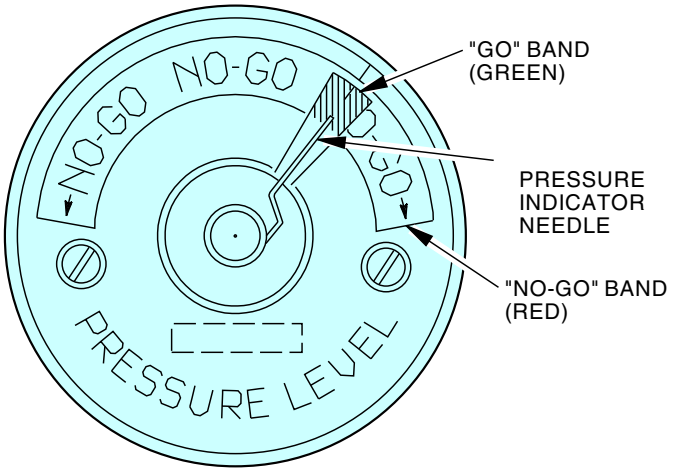

INFLATION CYLINDER
PRESSURE GAGE
A

2412024 S00061529736_V1

Escape Slide Pack Inflation Cylinder Check
Figure 601/25-66-01-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-66-01-200-802

3. Escape Slide Pack Check

(Figure 602)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
25-66-01-000-803	Escape Slide Girt Bar Removal (P/B 401)
25-66-01-400-803	Escape Slide Girt Bar Installation (P/B 401)

B. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

C. Escape Slide Pack Check

SUBTASK 25-66-01-210-002

(1) Do a check of the escape slide pack as follows:

(a) Examine the escape slide girt for fraying.

(b) Look for worn areas.

(c) Repair or replace the slide pack or the girt if there is damage that could cause the slide to operate incorrectly.

NOTE: Refer to the vendor Component Maintenance Manual (CMM) for repair instructions.

(d) Make sure that the velcro strips on the girt are attached to the velcro strips on the backing pan shelf.

(e) Make sure that the fasteners that attach the escape slide pack cover to the door are tight.

(f) Examine the escape slide girt bar:

1) Do this task: Escape Slide Girt Bar Removal, TASK 25-66-01-000-803.

2) Make sure that there is no corrosion on the girt bar.

3) Examine the girt bar retainer clips as follows:

a) Make sure that there is no deformation in the retainer clips (View B, Figure 602).

b) If there is retainer clip deformation, replace the clips or bend the clips to conform with (View B, Figure 602).

4) Do this task: Escape Slide Girt Bar Installation, TASK 25-66-01-400-803.

(g) Make sure that there is no corrosion on the latch.

1) Make sure that the spring pins are not corroded or bent.

(h) Do a check of the latch assembly.


1) Make sure that the latch block assembly turns freely.

2) Make sure that the clevis bolt turns freely in the latch block.

(i) Make sure that the latch operates easily through its range of angular movement.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

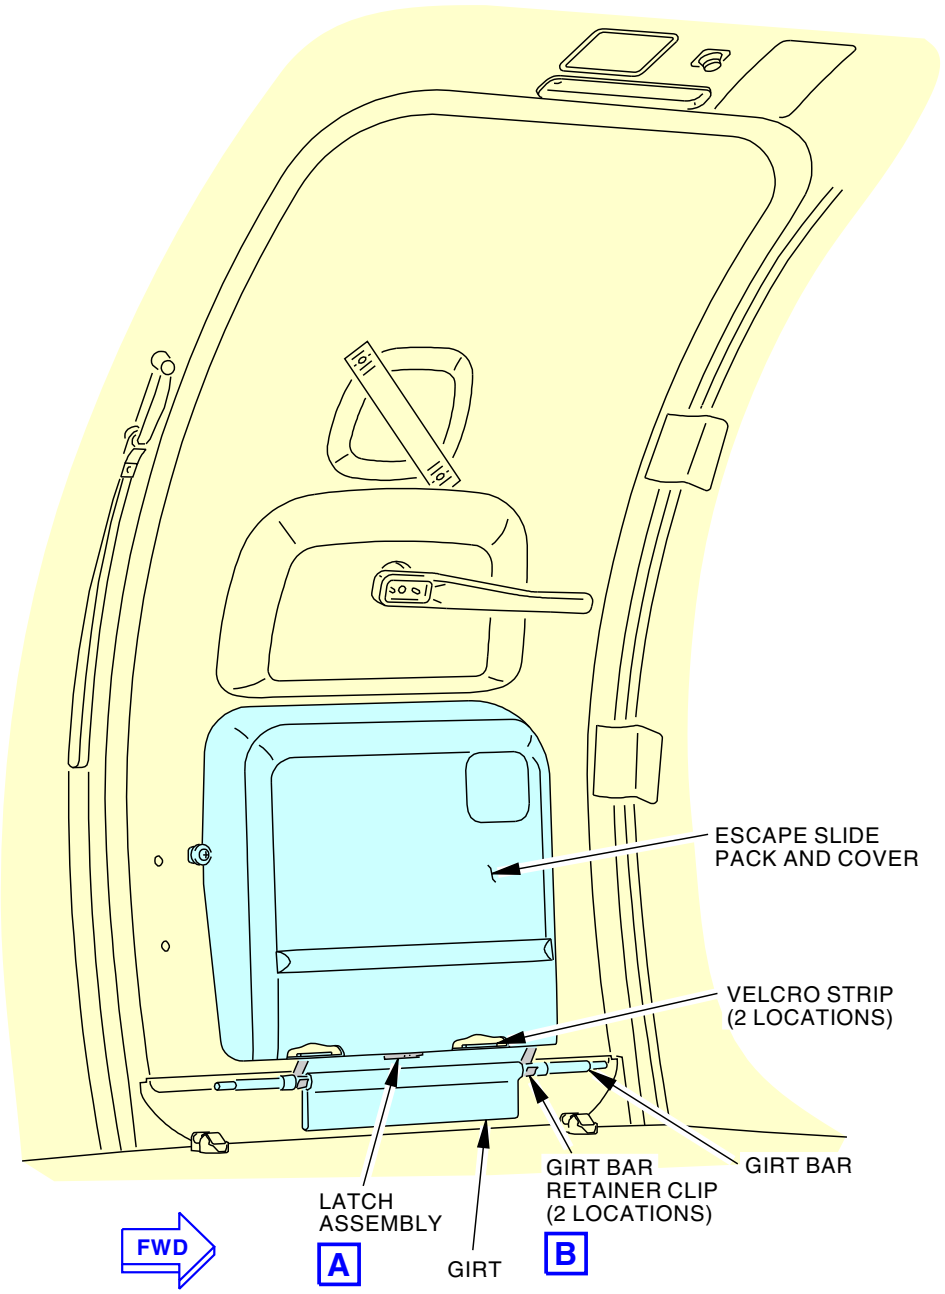


DOOR
(EXAMPLE)

2412025 S00061529737_V3

Escape System Inspection
Figure 602/25-66-01-990-803 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

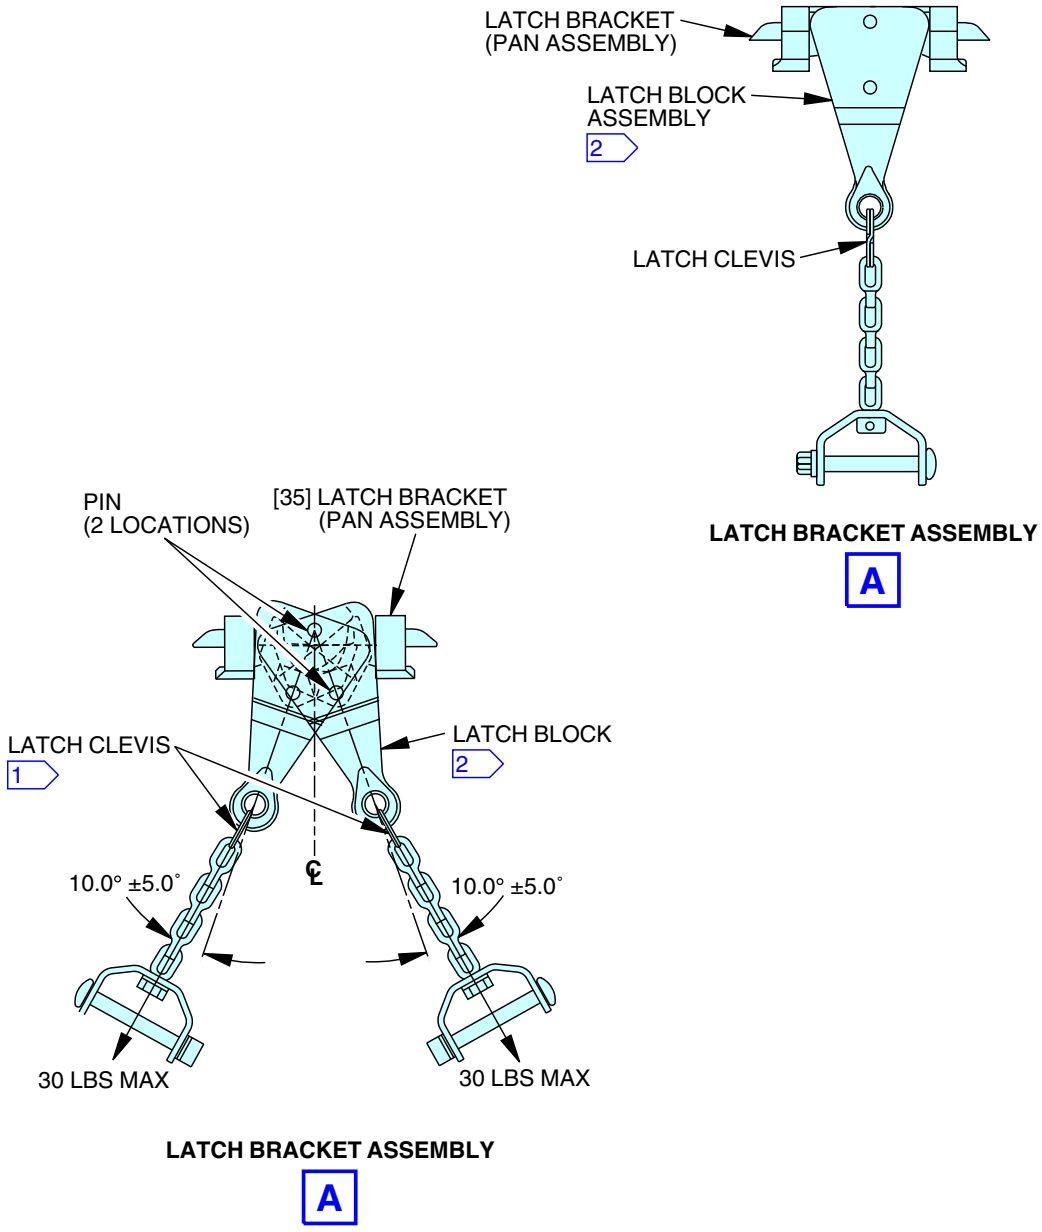


1 MAKE SURE THAT THE CLEVIS CAN ROTATE FREELY IN THE LATCH BLOCK ASSEMBLY

2 THE LATCH ASSEMBLY RELEASES AT 10 DEGREES, ±5 DEGREES, WITH A MAXIMUM OF 30 LBF (133.45 NM)

2412026 S00061529738_V2

Escape System Inspection
Figure 602/25-66-01-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

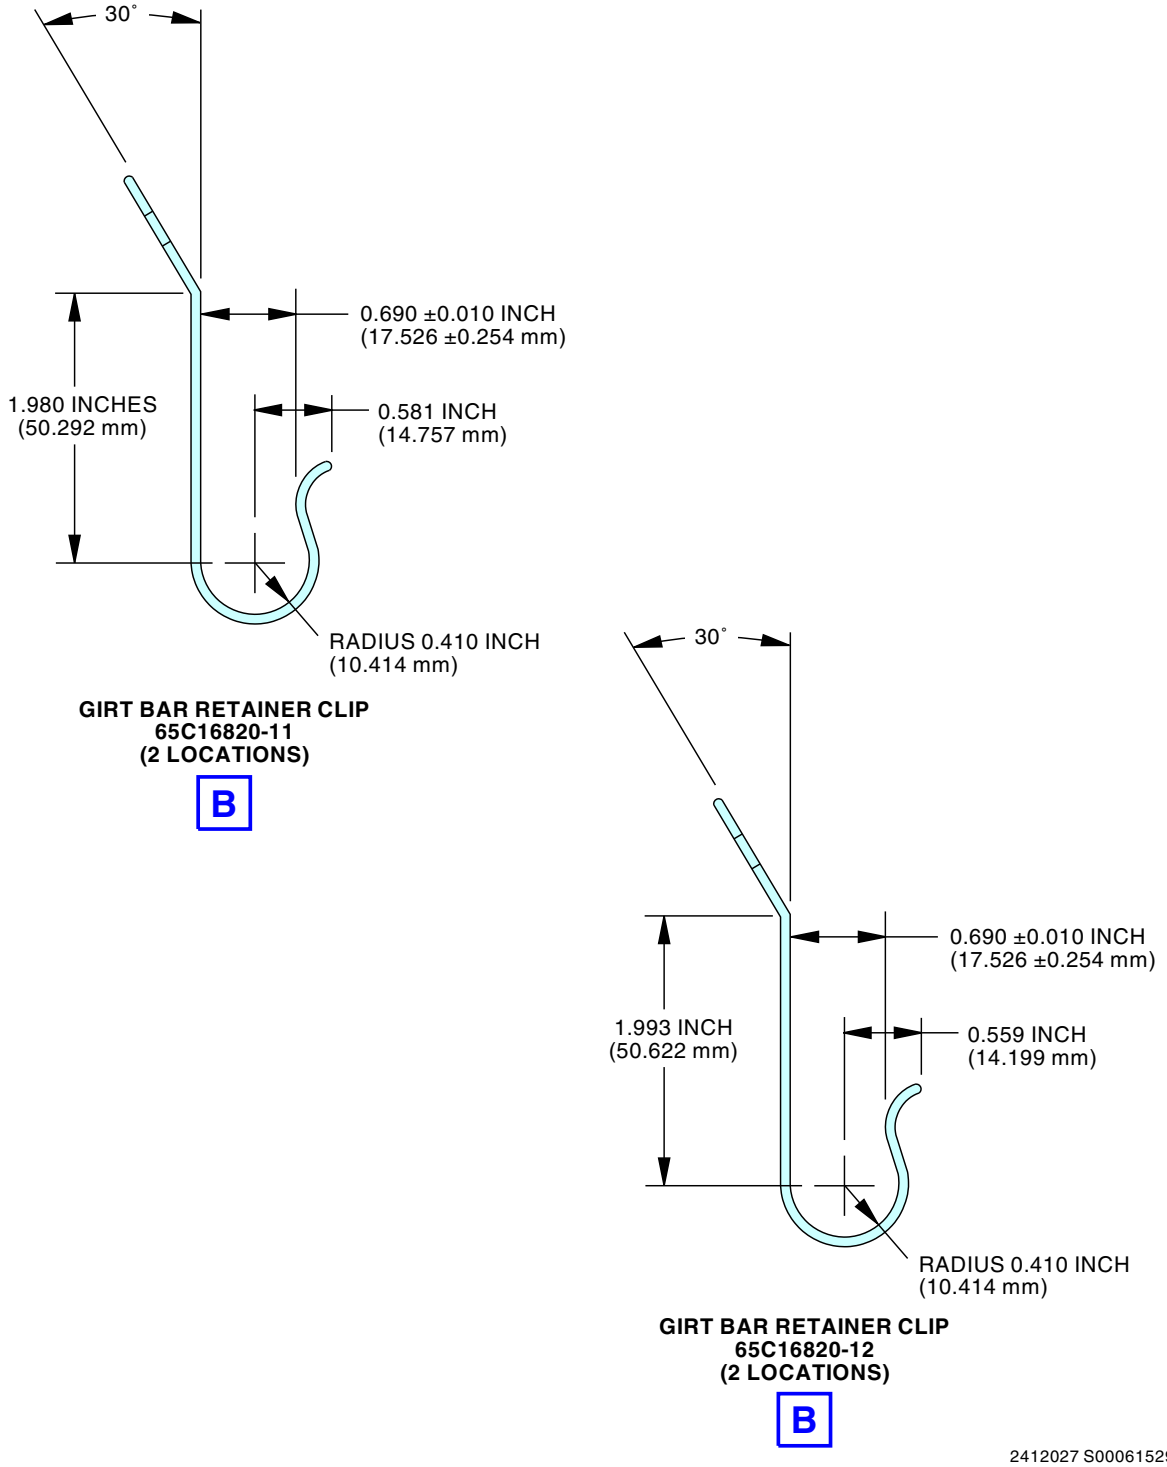

Escape System Inspection
Figure 602/25-66-01-990-803 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FLOOR-MOUNTED ESCAPE SLIDE BRACKETS - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) A removal of the entry or galley service door floor-mounted escape slide brackets.

(2) An installation of the entry or galley service door floor-mounted escape slide brackets.

B. There are two floor-mounted escape slide brackets: one on each side of the door sill. The removal and installation of the brackets are the same.

TASK 25-66-02-000-801

2. Floor-Mounted Escape Slide Bracket Removal

(Figure 201)

A. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

B. Floor-Mounted Escape Slide Bracket Removal

SUBTASK 25-66-02-020-001

(1) Remove the bracket [1] of the floor-mounted escape slide floor:

(a) Remove the bolts [2] and lock washers [3] that attach the bracket [1] to the adapter plate [5].

(b) Pull the bracket [1] and shim [7] from the adapter plate [5].

(c) Remove the screws [6] that attach the adapter plate [5] to the floor.


1) Identify the screws [6] and their correct locations for the subsequent installation.

NOTE: The screws do not always have the same length on every installation.

(d) Remove the adapter plate [5] from the floor.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

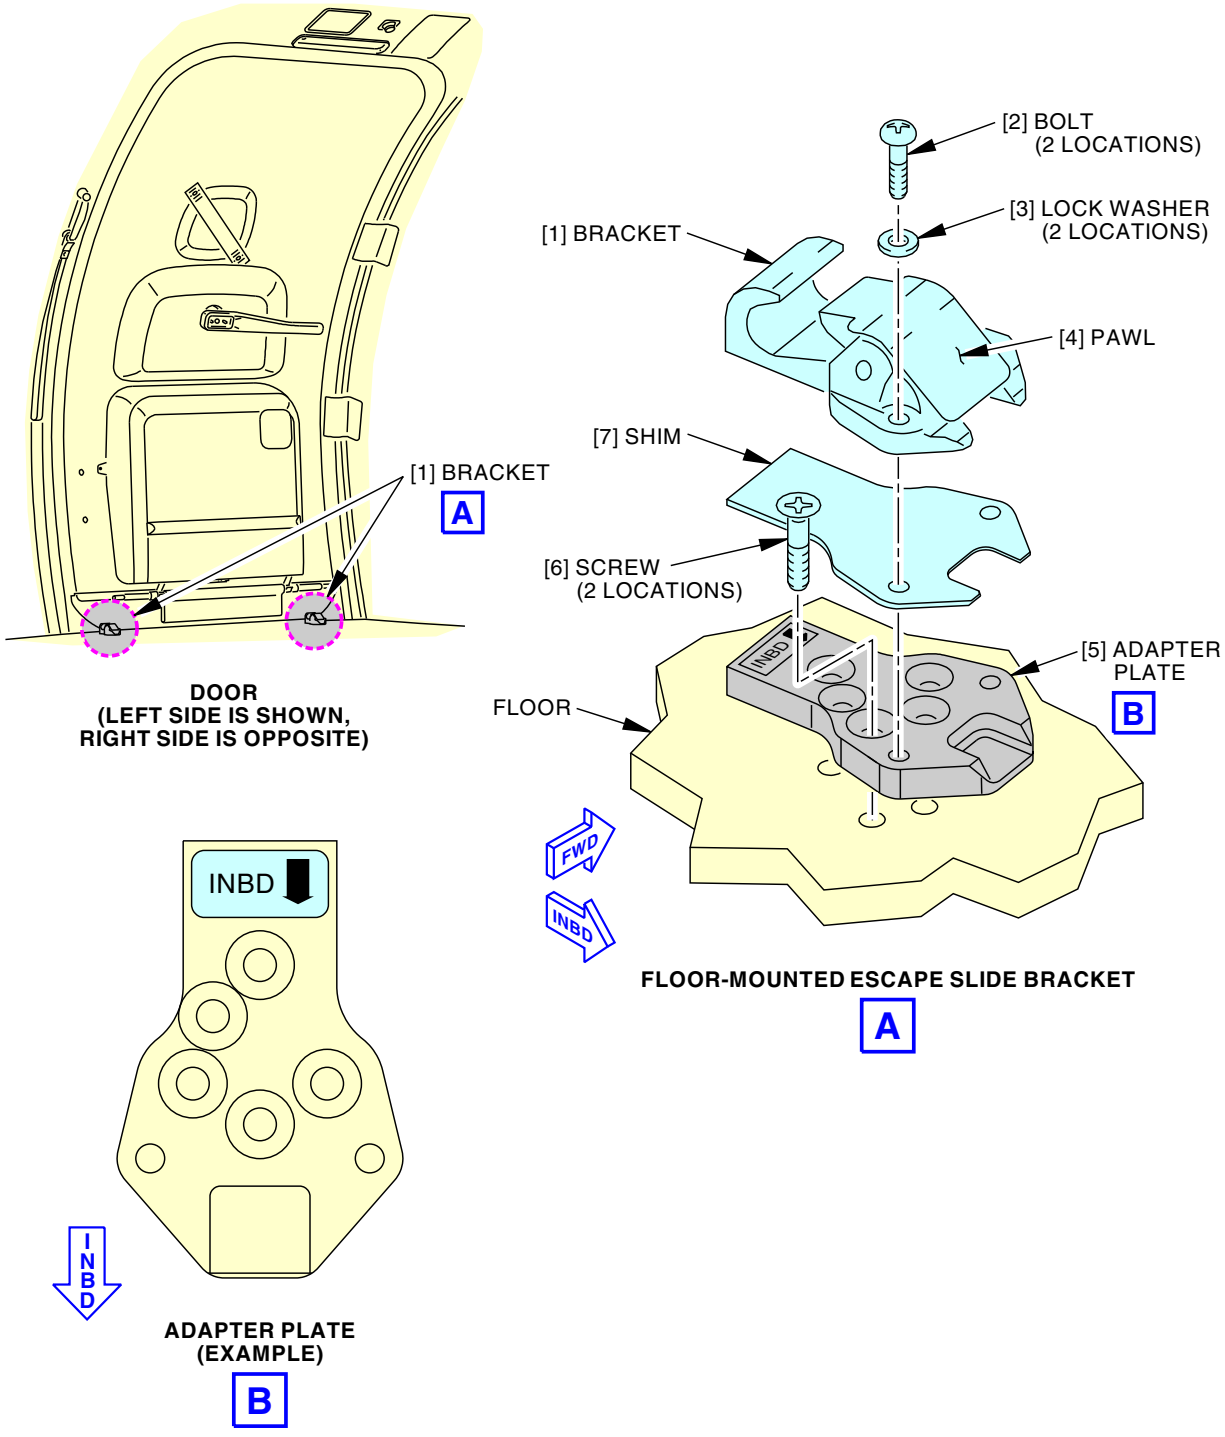

2412028 S00061529744_V2

Floor-Mounted Escape Slide Bracket Installation
Figure 201/25-66-02-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-66-02-400-801

3. Floor-Mounted Escape Slide Bracket Installation

(Figure 201)

A. Consumable Materials

Reference	Description	Specification
A50030	Adhesive - Translucent RT Vulcanizing Silicone Rubber - RTV6708	BAC5010 Type 109 Grade 2
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
D50180	Grease - Aircraft General Purpose (AeroShell Grease 33)	BMS3-33, MIL-PRF-23827
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

B. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Bracket	25-66-02-01-010	PTF ALL
		25-66-02-01-210	PTF ALL
		25-66-02-02-010	PTF ALL

C. Location Zones

Zone	Area
831	Forward Entry Door
834	Left Aft Entry Door
841	Forward Galley Service Door
844	Aft Galley Service Door

D. Floor-Mounted Escape Slide Bracket Installation

SUBTASK 25-66-02-420-001

(1) Install the bracket [1] of the floor-mounted escape slide floor:

(a) Examine the adapter plate [5] for corrosion.

(b) If you find corrosion, replace the adapter plate [5].

(c) Clean the holes in the adapter plate [5] and mating surfaces of the adapter plate [5], bracket [1], shim [7], and floor with solvent, B00184.

(d) Clean the screws [6] with solvent, B00184.

(e) Dry the screws [6], holes in the adapter plate [5] and mating surfaces of the adapter plate [5], bracket [1], shim [7], and floor with a clean cotton wiper, G00034.

(f) Apply RTV6708 adhesive, A50030, to the screws [6].

(g) Apply RTV6708 adhesive, A50030, between mating surfaces of the adapter plate [5], bracket [1], shim [7], and floor.

1) Fill unused holes in the adapter plate [5] with RTV6708 adhesive, A50030.

(h) Put the adapter plate [5] over the holes in the floor.

1) Make sure that you obey the direction of the arrow on the placard (View B, Figure 201).

(i) Install the screws [6].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(j) Make sure that the pawl [4] is installed on the bracket [1].

(k) Put the shim [7] and bracket [1] in their correct position on the adapter plate [5].

(l) Clean the bolts [2] with solvent, B00184.

(m) Dry the bolts [2] with a clean cotton wiper, G00034.

(n) Apply RTV6708 adhesive, A50030 (Preferred), or AeroShell Grease 33, D50180 (Alternative), to the threads of the bolts [2].

(o) Install the bolts [2] and lock washers [3] to attach the bracket [1] to the adapter plate [5].

(p) Make sure that the adapter plate [5] and bracket [1] are in the correct position.

E. Installation Test

SUBTASK 25-66-02-210-001

(1) Do a check on the brackets [1] as follows:

(a) Make sure that the door is safe:

1) Make sure that the door is closed and latched.

WARNING

MAKE SURE THAT THE GIRT BAR IS NOT ENGAGED IN THE BRACKETS OF THE FLOOR-MOUNTED ESCAPE SLIDE. IF THE GIRT BAR IS ENGAGED IN THE BRACKETS, THE ESCAPE SYSTEM CAN OPERATE WHEN YOU OPEN THE DOOR. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

2) Make sure that the girt bar is not engaged in the brackets [1].

3) Put the orange slide warning pennant across the window.

(b) Remove the girt bar from the girt bar retainers on the cover.

(c) Install the girt bar in the brackets [1].

(d) Make sure that the brackets [1] operate correctly.

(e) Remove the girt bar from the brackets [1].

(f) Install the girt bar in the girt bar retainer on the cover.

(g) Remove the orange slide warning pennant from across the window.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

INSULATION BLANKET - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Insulation blanket removal

(2) Insulation blanket installation.

TASK 25-80-00-000-801

2. Insulation Blanket Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the insulation blanket.

B. Location Zones

Zone	Area
100	Lower Half of Fuselage
100	Lower Half of Fuselage
200	Upper Half of Fuselage

C. Insulation Blanket Removal

SUBTASK 25-80-00-010-001

(1) Remove the applicable panels and parts from the airplane interior for access to the insulation blankets [1] that you want to remove.

SUBTASK 25-80-00-930-001

(2) Put a tag on the blankets [1] to help you install them in the correct positions, where necessary.

SUBTASK 25-80-00-020-001

(3) Remove the disks [4] from the index pins [3].

SUBTASK 25-80-00-020-002


(4) Roll the clamps [5] off of the insulation blankets [1].

SUBTASK 25-80-00-020-003


(5) Remove the insulation blankets [1], moisture control blankets or capstrips [2].

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

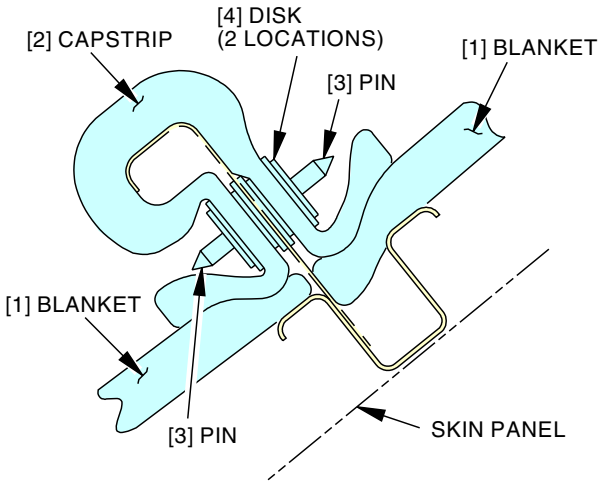


CAPSTRIP AND PIN INSTALLATION (EXAMPLE)

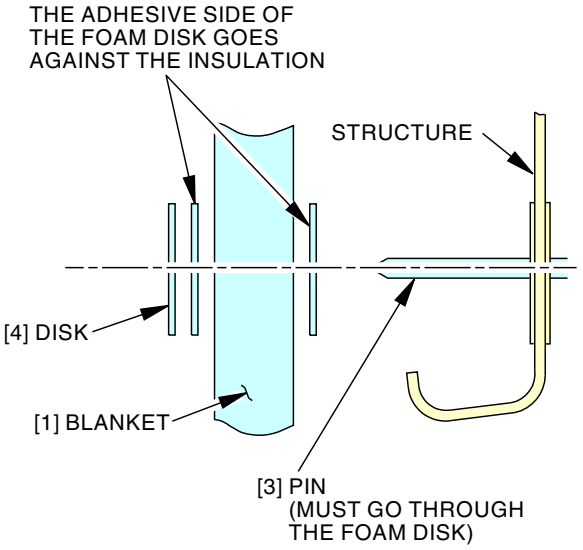

PIN AND DISK INSTALLATION (EXAMPLE)

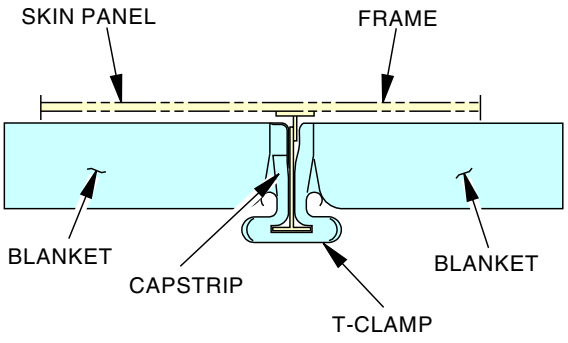

FRAME T-CLAMP (INSTALLED) (EXAMPLE)

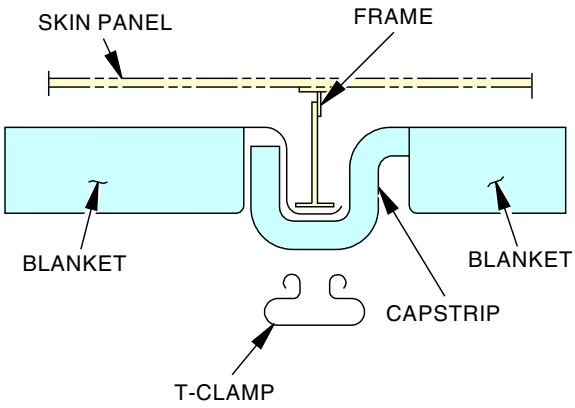


FRAME T-CLAMP (INSTALLED) (EXPLODED)

2412034 S00061529764_V2

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 1 of 9)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

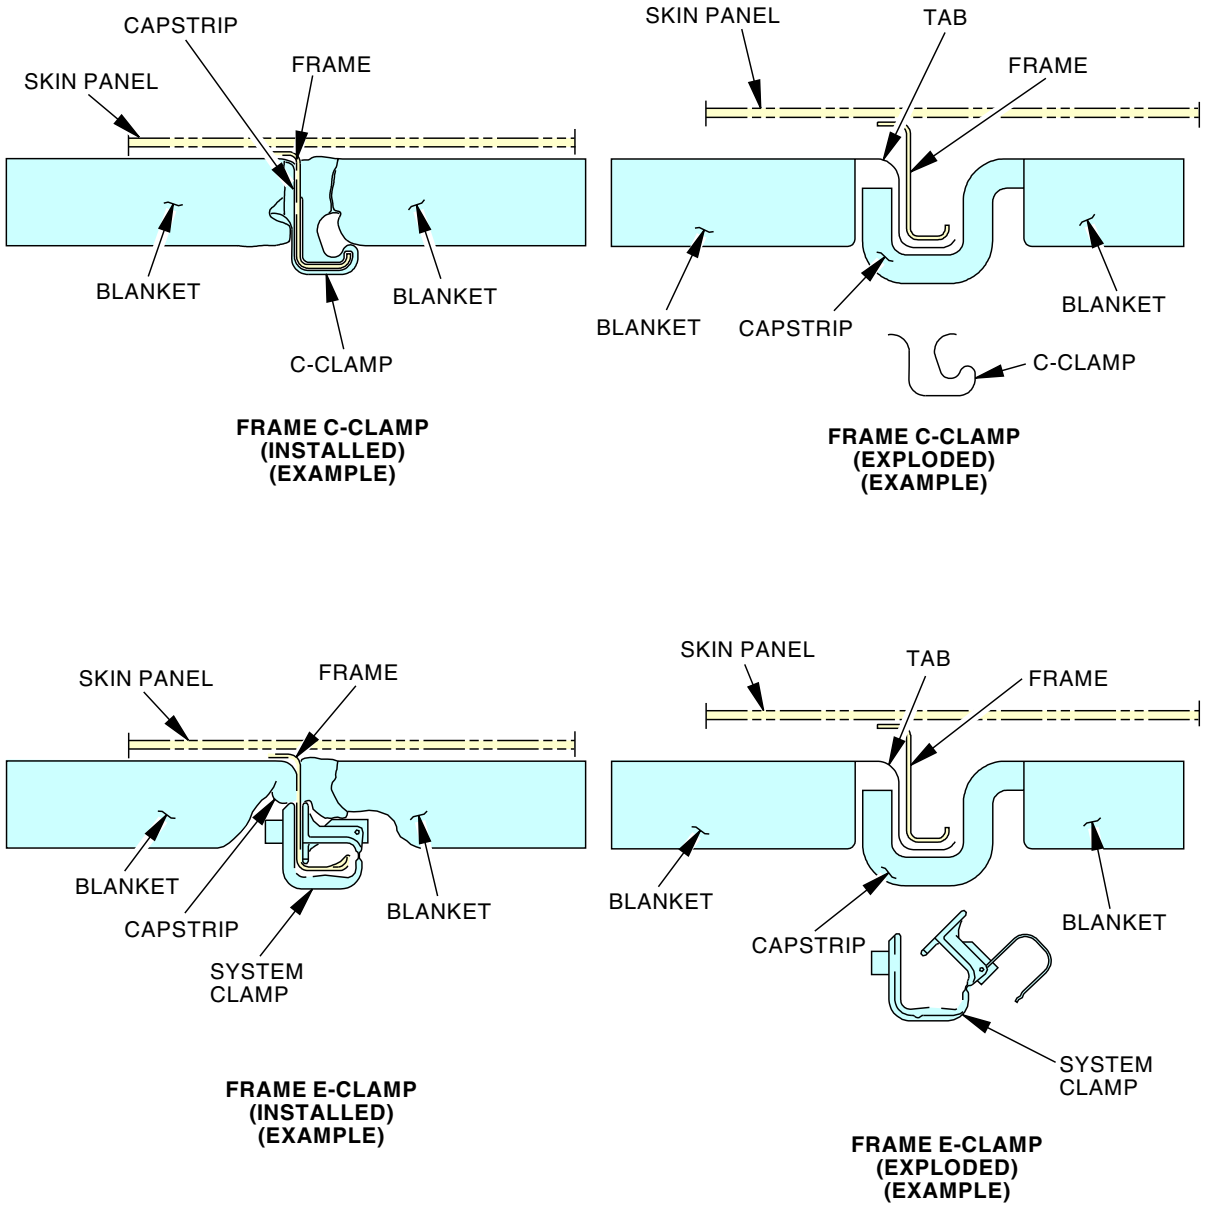

2412035 S00061529765_V1


Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 2 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

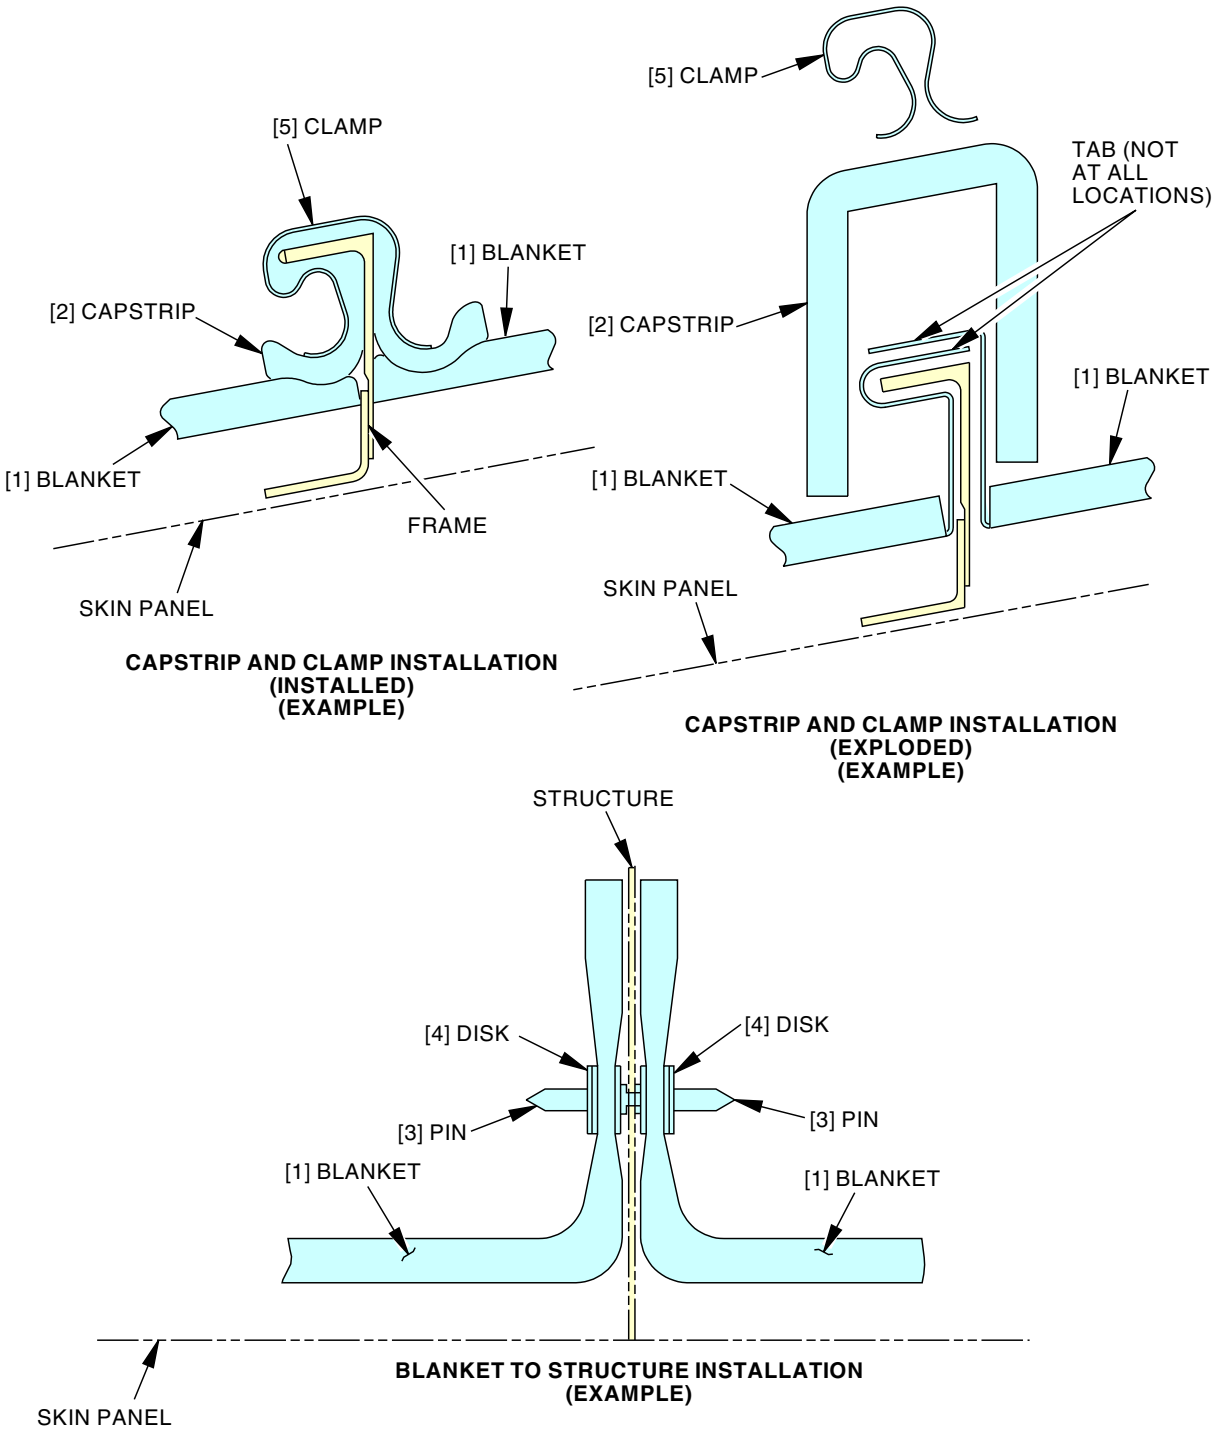


Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 3 of 9)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

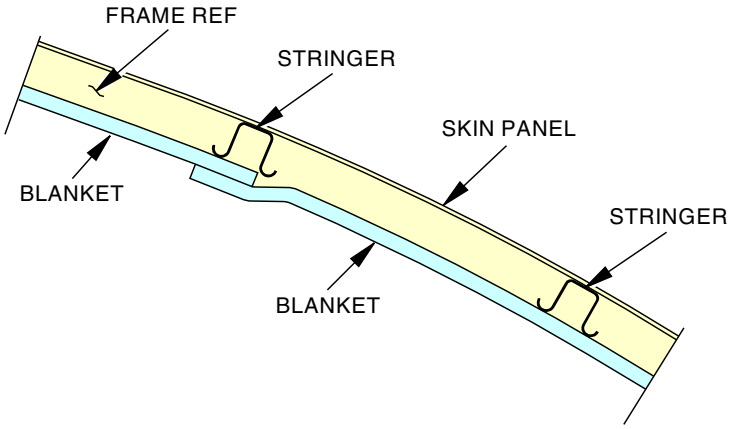

BLANKET TO BLANKET INSTALLATION (EXAMPLE)

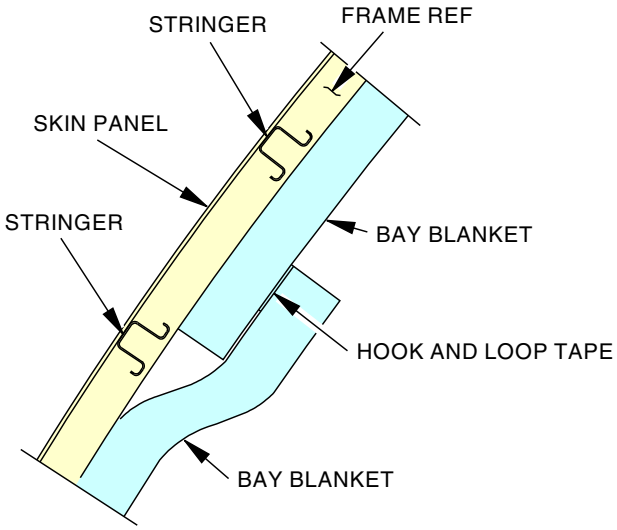

BLANKET OVERLAP (EXAMPLE)

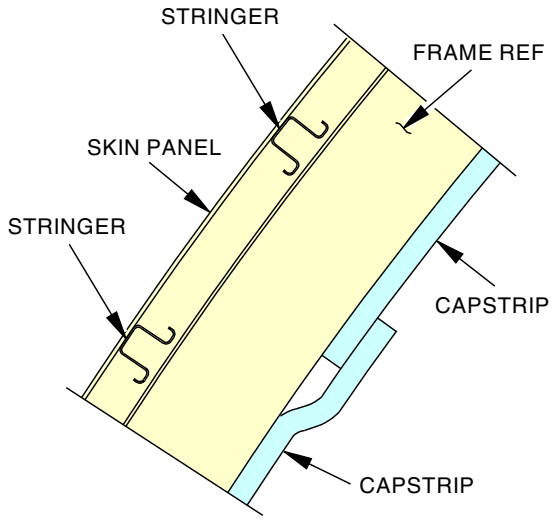


CAPSTRIP OVERLAP (EXAMPLE)


2412037 S00061529767_V1

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 4 of 9)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

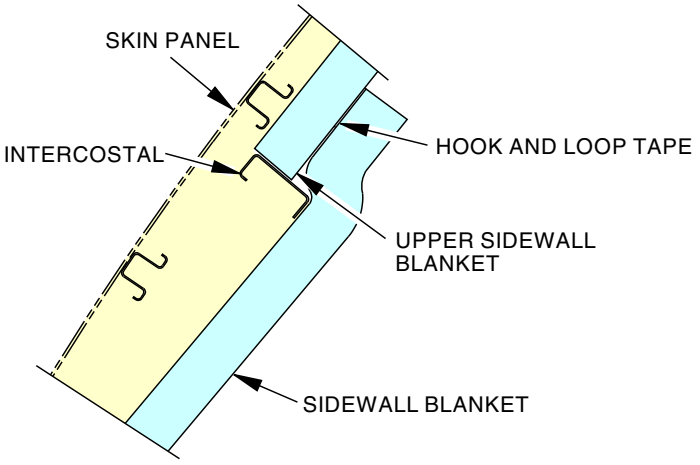

SIDEWALL BLANKET OVERLAP AT THE INTERCOSTAL (EXAMPLE)

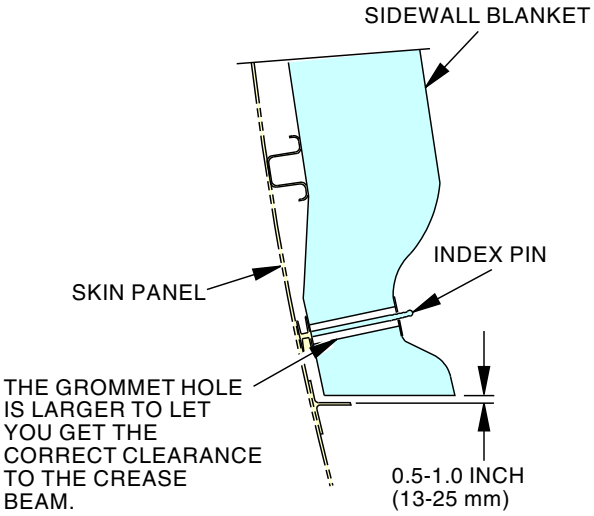

BLANKET INDEX PIN INSTALLATION AT FLOOR (EXAMPLE)

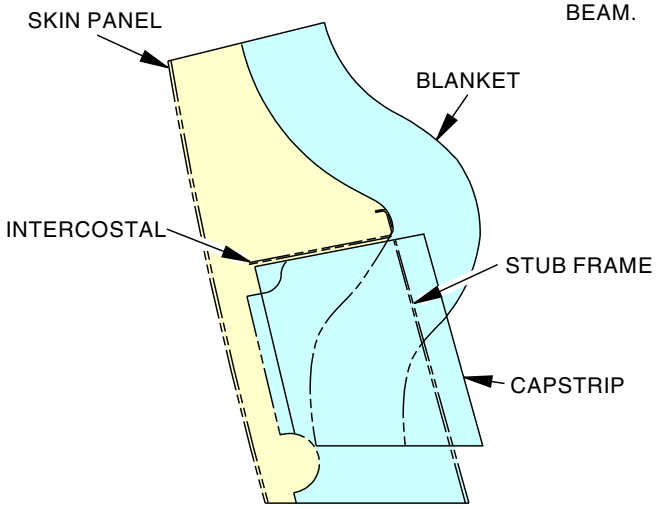


STUB FRAME CAPSTRIP INSTALLATION (EXAMPLE)


2412038 S00061529768_V1

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 5 of 9)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

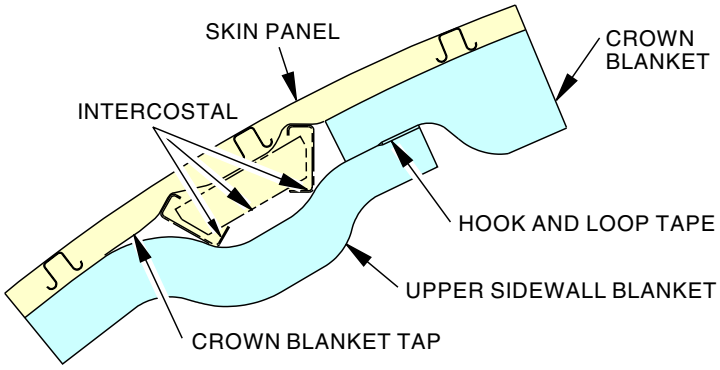

UPPER SIDEWALL BLANKET OVERLAP AT THE INTERCOSTAL (EXAMPLE)

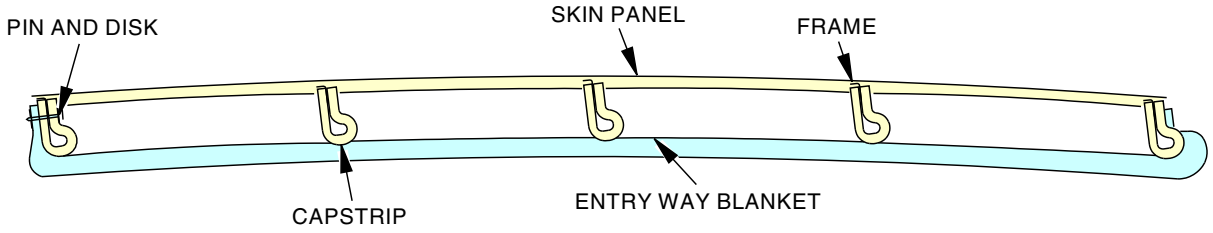

ENTRY WAY ABOVE DOOR INSTALLATION (EXAMPLE)

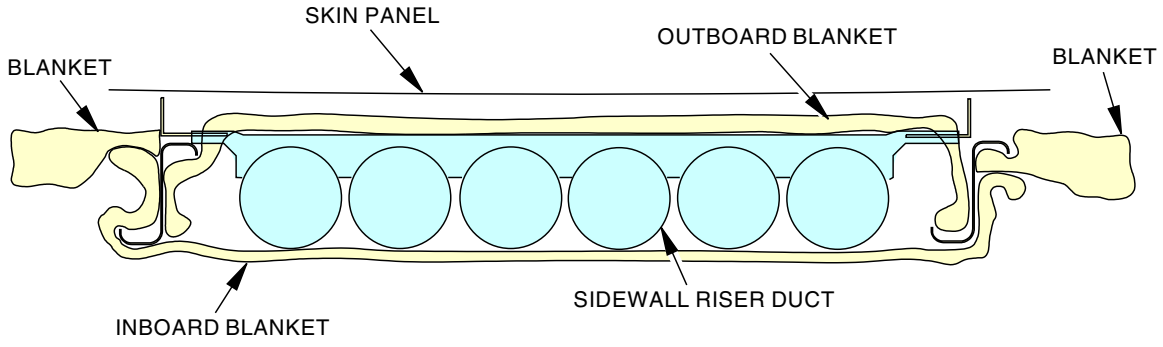


SIDEWALL RISER DUCT INSTALLATION (EXAMPLE)


2412039 S00061529769_V1

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 6 of 9)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

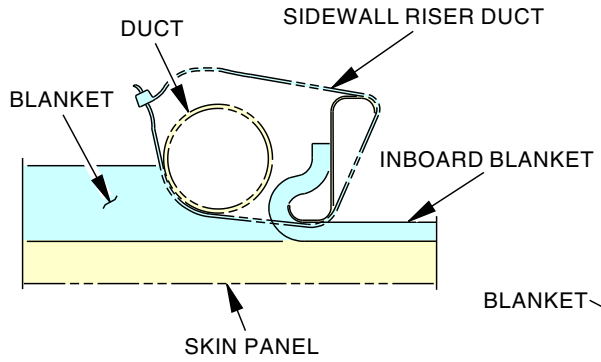


CAPSTRIP TO DUCT INSTALLATION (EXAMPLE)

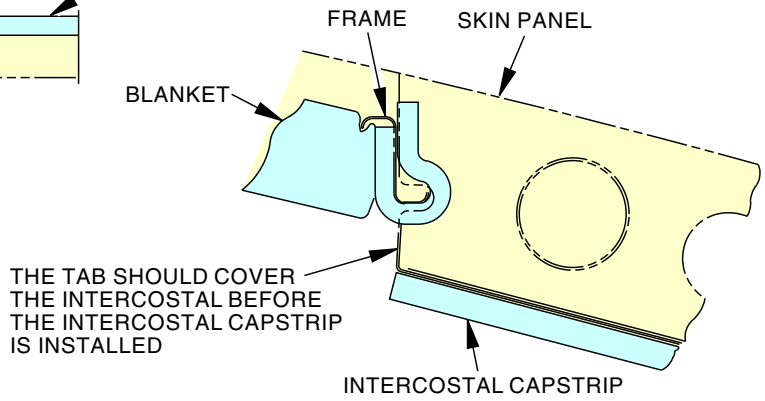

CROWN INTERCOSTAL/TAB INSTALLATION (EXAMPLE)

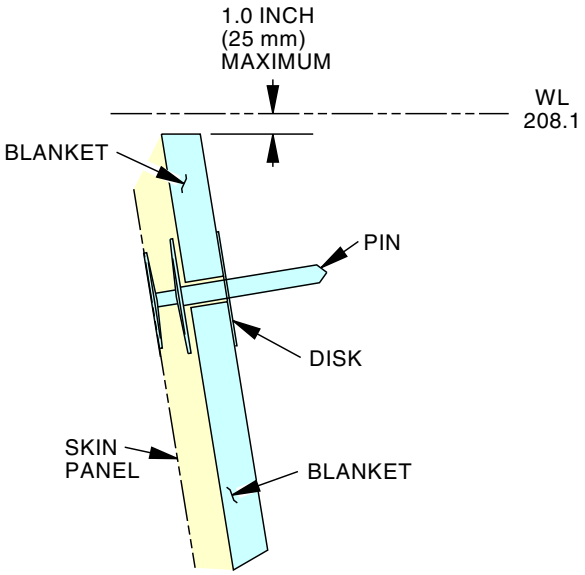

TOP EDGE OF BLANKET INSTALLATION (EXAMPLE)

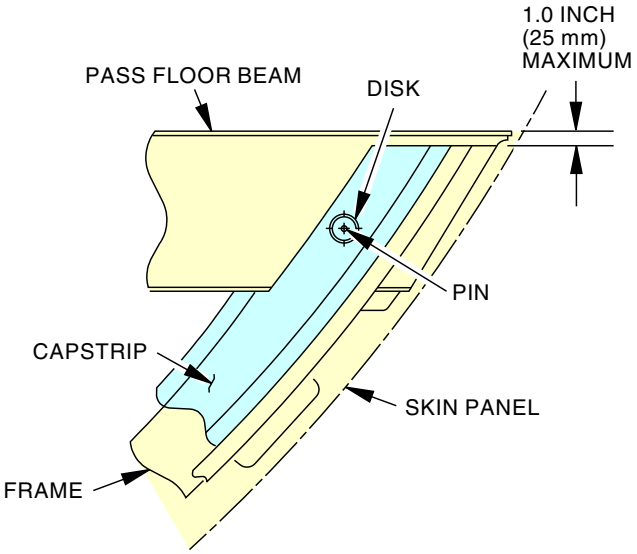


FLOOR BEAM CAPSTRIP INSTALLATION (EXAMPLE)


2412040 S00061529770_V1

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 7 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

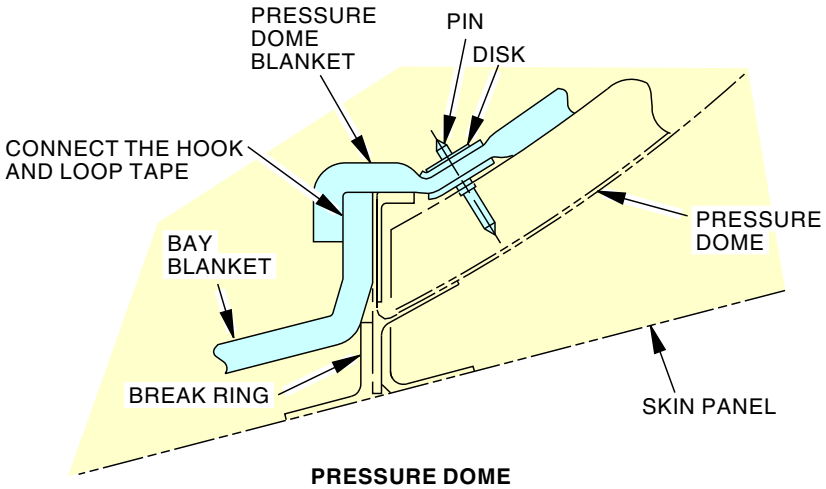

PRESSURE DOME BLANKET INSTALLATION

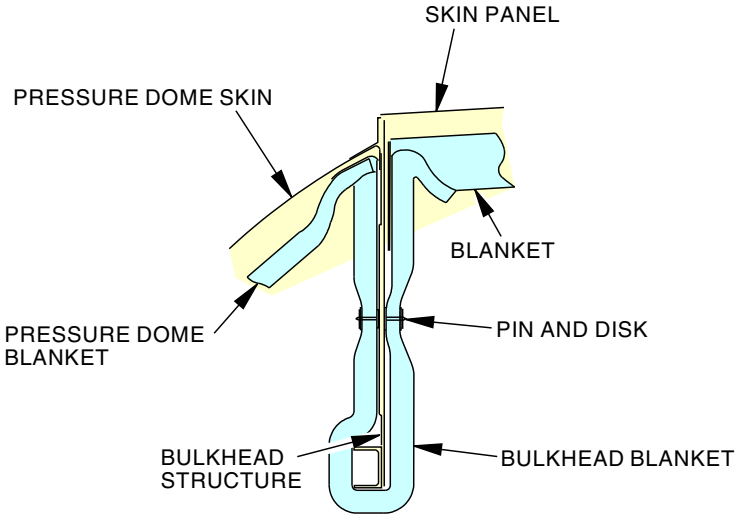


PRESSURE DOME BULKHEAD INSTALLATION (EXAMPLE)


2412041 S00061529771_V1

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 8 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

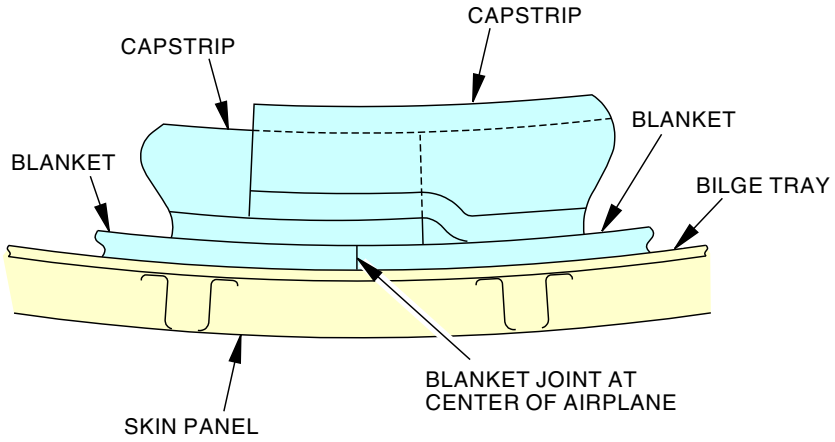

CAPSTRIP OVERLAP INTERFACE

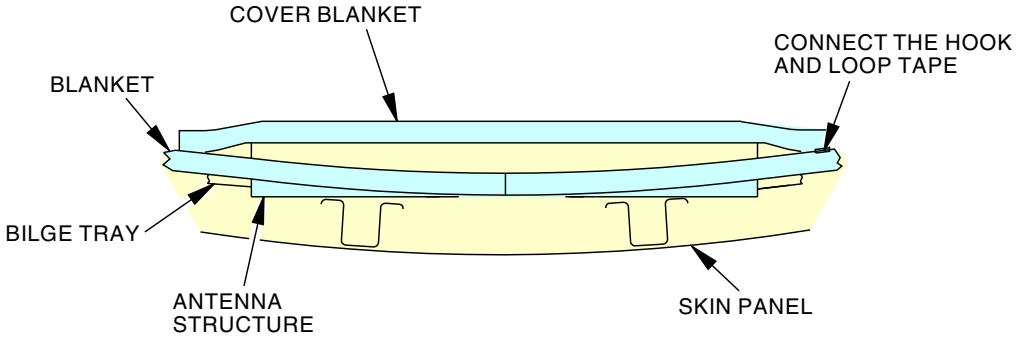

ANTENNA BLANKET INSTALLATION

2412042 S00061529772_V1

Insulation Blanket Installation
Figure 401/25-80-00-990-807 (Sheet 9 of 9)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-80-00-400-801

3. Insulation Blanket Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the insulation blanket.

(2) Use the tapes that follow for BMS5-157:

- The tape, G51202, or Class 1 Grade A equivalent with fabric, G50330 (BMS8-377).
- The tape, G50789, or Class 2 Grade C equivalent with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).
- The tape, G51205, or Class 3 Grade E equivalent with insulation cover, G51533 (BMS8-380, ECTFE).

B. References

Reference	Title
SOPM 20-41-05	Application of Corrosion Inhibiting Compounds

C. Consumable Materials

Reference	Description	Specification
C00755	Compound - Organic Corrosion Inhibiting, Heavy Duty	BMS3-26
C00915	Compound - Organic Corrosion Inhibiting, Advanced	BMS3-29
G00009	Compound - Organic Corrosion Inhibiting	BMS3-23
G50330	Fabric - Insulation Covering, Flame Propagation Resistant	BMS8-377
G50333	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF
G51205	Tape - Advanced Insulation	BMS5-157 Type I Class 3 Grade E Composition MPEEK
G51533	Cover - Insulation, Ethylene CholroTriFluoroEthylene (ECTFE) film	BMS8-380 Type 4 Class 2
G51553	Insulation - Flame Penetration Resistant	BMS8-396, Type 2
G51600	Cover - Insulation, Polyetheretherketone (PEEK) - Flame Propagation Resistant	BMS8-380 Type 3 Class 2

D. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Insulation Blanket Contamination Check

SUBTASK 25-80-00-110-001

WARNING LET THE CORROSION-INHIBITING COMPOUNDS (CIC) FULLY DRY. IF CIC GETS ON THE INSULATION BLANKET, THE BLANKET WILL BECOME LESS FLAME-RESISTANT, WHICH INCREASES THE RISK OF FIRE. FIRE CAN CAUSE INJURY.

(1) To prevent Corrosion Inhibiting Compound (CIC) contamination of insulation blankets, let the corrosion-inhibiting compounds fully dry before you install the insulation blankets.

(a) Let the corrosion-inhibiting compounds dry longer than the minimum times listed below if you have one of these conditions:

1) Low temperature.

2) High humidity.

3) Thick layer of corrosion-inhibiting compounds.

(b) Ventilate areas treated with CIC such as corrosion inhibiting compound, G00009, with good air flow for a minimum of one hour.

(c) Ventilate areas treated with CIC such as compound, C00755 or compound, C00915, with good air flow for a minimum of four hours.

SUBTASK 25-80-00-110-002

WARNING DO NOT USE DETERGENTS OR SOLVENTS TO CLEAN THE INSULATION BLANKET. IT CAN REMOVE FLAME RETARDANTS AND CAUSE FLAMMABLE RESIDUES ON THE INSULATION BLANKET WHICH INCREASES THE RISK OF FIRE. THIS CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(2) If there is CIC contamination, oily or waxy substances or other fluids (which typically changes the color and appearance of the insulation blanket cover), clean the insulation blankets with correct solvents, refer to SOPM 20-41-05.

NOTE: The CIC contamination can only be cleaned with solvents referenced in SOPM 20-41-05.

SUBTASK 25-80-00-160-001

(3) If there are dusts, lint or other loose debris on the insulation blanket, use a vacuum cleaner or a non-metallic soft brush to remove the contamination.

SUBTASK 25-80-00-210-001

(4) Make sure that the insulation blanket has no rips, tears or holes.

SUBTASK 25-80-00-160-002

(5) Make sure that the area is clean before you install the insulation blanket.

F. Insulation Blanket Installation

SUBTASK 25-80-00-420-001

CAUTION MAKE SURE THAT THE INSULATION BLANKET IS CLEAR OF MOVING PARTS, PULLEYS, CABLES, AND OPENINGS. IF YOU DO NOT CORRECTLY SECURE THE INSULATION BLANKETS, THEY CAN BECOME ENTANGLED IN MOVING PARTS WHICH CAN CAUSE DAMAGE.

(1) If you replace an insulation blankets [1] or a capstrip [2], install an insulation blankets [1] or a capstrip [2] that complies with FAR 25.856.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Use the tape, BMS5-157, and hooks and loop tape, G50333, where necessary.

NOTE: The tape, BMS5-157, and hook/loop tape, G50333 are FAR 25.856 compliant.

(b) Replace the part of the hooks and loop tape that is installed on the airplane structure where the replacement insulation blanket [1] attaches with hook and loop tape, G50333, if it is necessary.

SUBTASK 25-80-00-420-002

(2) Do these steps to install the insulation blankets [1] to the airplane structure:

(a) Put a membrane material around the frame if it is necessary.

(b) Put the side of the insulation blankets [1] with the clamp indicator inboard.

(c) Align the holes in the insulation blankets [1] with the index pins [3].

1) Put the insulation blankets [1] in its position.

2) Install the disks [4] on the index pins [3].

(d) Wrap the insulation blankets [1] correctly around the airplane structure.

1) Put the blankets [1] tab around the airplane structure.

2) Put the capstrip [2] over the blankets [1] tab.

SUBTASK 25-80-00-420-003

CAUTION

DO NOT USE FORCE TO PUSH THE CLAMP STRAIGHT ON THE AIRPLANE STRUCTURE. USE A ROLLING MOVEMENT WITH TWO HANDS TO INSTALL THE CLAMPS. IF YOU USE FORCE TO PUSH THE CLAMP STRAIGHT ON THE AIRPLANE STRUCTURE, YOU WILL CAUSE PERMANENT DAMAGE TO THE CLAMP AND TEAR THE INSULATION BLANKET.

(3) Attach the blanket [1] with clips, tapes, pins, and disk fasteners as applicable. Refer to the illustration for examples of the installation details (Figure 401).

(a) Look for clamp indicator on the insulation blanket [1].

(b) When you install the clamps [5], make sure that they are the minimum distance from the adjacent hoses, wires, or ducts:

Table 401/25-80-00-993-801

Separation Requirements	
Hoses, Wires, Ducts, or other Systems	**Minimum Distance from Clamp (Inch)**
Supported (at the stand off)	0.25 in. (6 mm)
Unsupported	0.5 in. (13 mm)

(c) Make sure that the openings in the intercostal are not blocked by the insulation blanket [1].

(d) Make sure that the passenger compartment sidewall blanket [1] is centered on the window opening.

1) Do not put the blanket [1] behind the window clips.

(e) Make sure that you cannot see structure after you install the insulation blanket [1].

(f) Make sure that you cannot see the bilge and sill trays in the cargo compartments.

(g) Make sure that the hooks and loop tape is fully engaged.

(h) Make sure that the tapes match.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-80-00-210-002

(4) Make sure that the moisture penetration through to the inboard side of the insulation blanket [1] is minimized.

(a) Make sure that all the insulation blankets [1] are correctly overlapped to keep out any condensation that can flow between insulation blankets [1] into the inboard side of the insulation blanket [1].

(b) Re-install any moisture control blankets at longitudinal (intercostal) structural locations.

(c) For insulation blanket [1] with fabric, G50330 cover material, use the tape, BMS5-157, and hooks and loop tape, G50333, where necessary to reduce any gaps between blankets [1], or between blankets [1] and structure.

SUBTASK 25-80-00-390-001

(5) For replacement insulation blanket [1], push on the insulation blanket [1] to remove the air that is inside the insulation blanket [1] through the vent hole(s).

(a) Peel off the attached release liner on the circle tape and seal the vent hole(s).

SUBTASK 25-80-00-010-002

(6) Install the panels and parts that you removed from the airplane interior.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

INSULATION BLANKET - MAINTENANCE PRACTICES

1. General

A. This procedure gives Boeing recommendations when operators install electronic equipment in the primary passenger cabin that requires changes to the fuselage insulation blankets.

B. The fuselage insulation blankets primary function is to provide thermal and acoustic performance to keep the main passenger cabin warm and quiet during flight. Also, the fuselage insulation system provides a moisture barrier to keep condensation in the passenger cabin to a minimum.

(1) All open holes, tears or damage to the insulation blanket cover films degrade the moisture barrier and airplane Cabin Moisture Management.

C. Boeing has four recommended tasks for maintenance of the fuselage insulation blankets:

NOTE: These tasks come from inspections of post-delivery installations on several in-service airplanes.

(1) Crown Antenna Installation – Insulation Blanket Access

(2) Crown Hardware Installation – Insulation Blanket Protection

(3) Cover Film Repairs

(4) Cargo Bilge Antenna Installation – Insulation Blanket Access

TASK 25-80-00-400-802

2. Crown Antenna Installation - Insulation Blanket Access

(Figure 201, Figure 202, and Figure 203)

A. General

(1) The typical crown antenna cable installation is through the crown insulation blankets. Do not permit an open hole or cutout in the crown insulation blanket. A hole or opening lets in warm, moist cabin air. This causes increased condensation and moisture into the passenger cabin, referred to as “rain in the plane”.

(2) Use the tapes that follow for BMS5-157:

- The tape, G51202, or Class 1 Grade A equivalent with fabric, G50330 (BMS8-377).
- The tape, G50789, or Class 2 Grade C equivalent with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).
- The tape, G51205, or Class 3 Grade E equivalent with insulation cover, G51533 (BMS8-380, ECTFE).

B. Consumable Materials

Reference	Description	Specification
G50330	Fabric - Insulation Covering, Flame Propagation Resistant	BMS8-377
G50333	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372
G50334	Felt - Needled, Flame Propagation Resistant	BMS8-373
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G51205	Tape - Advanced Insulation	BMS5-157 Type I Class 3 Grade E Composition MPEEK
G51533	Cover - Insulation, Ethylene CholroTriFluoroEthylene (ECTFE) film	BMS8-380 Type 4 Class 2
G51553	Insulation - Flame Penetration Resistant	BMS8-396, Type 2
G51600	Cover - Insulation, Polyetheretherketone (PEEK) - Flame Propagation Resistant	BMS8-380 Type 3 Class 2
G51863	Thread - Para-Aramid Stitching, Tex 40	A-A-55220

C. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

D. Access Provision

NOTE: The access is in the crown insulation blanket directly below the antenna installation.

SUBTASK 25-80-00-360-001

(1) Cut a slit in the insulation blanket from directly below the location of the antenna.

(a) Make sure that this slit is not more than 6-inches in length. This depends on the necessary opening.

(2) Make a box edge around the slit in the crown insulation blanket (Figure 201).

(a) Use the grommet, BACG20AJ.

(b) Grommet BACG20AJ01R16H is recommended for a 6-inch slit.

(c) Grommet BACG20AJ01N16H is recommended for a 4-inch slit.

SUBTASK 25-80-00-360-002

(3) Attach a strip of tape, G50333, on one side of the slit (Figure 202).

(a) 1-inch width is recommended for hook tape.

SUBTASK 25-80-00-360-003

(4) Make a flap on the other side of the slit with tape, BMS5-157, make sure that the loop tape, G50333, aligns with the hook tape used on the other side of the slit (Figure 202).

(a) 2-inch width is recommended for insulation tape

(b) 1-inch width is recommended for loop tape.

SUBTASK 25-80-00-360-004

(5) Attach the tape, BMS5-157, of the new flap on one side of the slit to make sure that the loop tape and hook tape give a tight fit of the slit (Figure 202).

(a) When the attachment to the crown insulation blanket is complete:

1) Cut a slit down the middle of the new flap to make two different flaps.

(b) Each flap will bring closure on the two sides of the antenna cable when it travels through the crown insulation blanket.

SUBTASK 25-80-00-360-005

(6) Make a water absorbent felt, G50334, cover for the slit in the insulation blanket (Figure 203).

(a) The dimension of the cover will depend on the length of the slit.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) The width of the cover must be a minimum of 4-inches.

2) The length of the cover must extend a minimum of 2-inches at each end of the slit.

(b) Sew the loop tape, G50333, around the perimeter of the cover with thread, G51863.

1) 1-inch width is recommended for loop tape

2) A double seam stitch is recommended.

SUBTASK 25-80-00-360-006

(7) Attach hook tape, G50333, to the crown insulation blanket to align the loop tape on the water absorbent cover (Figure 202).

(a) The location of the tape must center the cover around the slit in the crown insulation blanket.

SUBTASK 25-80-00-360-007

(8) Cut an opening in the water absorbent cover so that the antenna cable can move through the cover (Figure 203).

(a) The opening should be sufficient to let the antenna cable move through the cover.

E. Additional Moisture Provisions

SUBTASK 25-80-00-360-008

(1) When you complete the antenna cable installation:

(a) Attach the moisture absorbing felt, G50334, around the cable on the inboard side of the crown installation blanket.

1) If the cable uses a straight connector, use a 411A4904-15 felt.

2) If the cable uses an L-connector (90-degree), use a 411A4904-10 felt.

3) Put the felt on the inboard side of the crown insulation blanket.

NOTE: It should be touching the felt cover.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details



2412043 S00061529775_V1

Slit With Grommet Installed
Figure 201/25-80-00-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

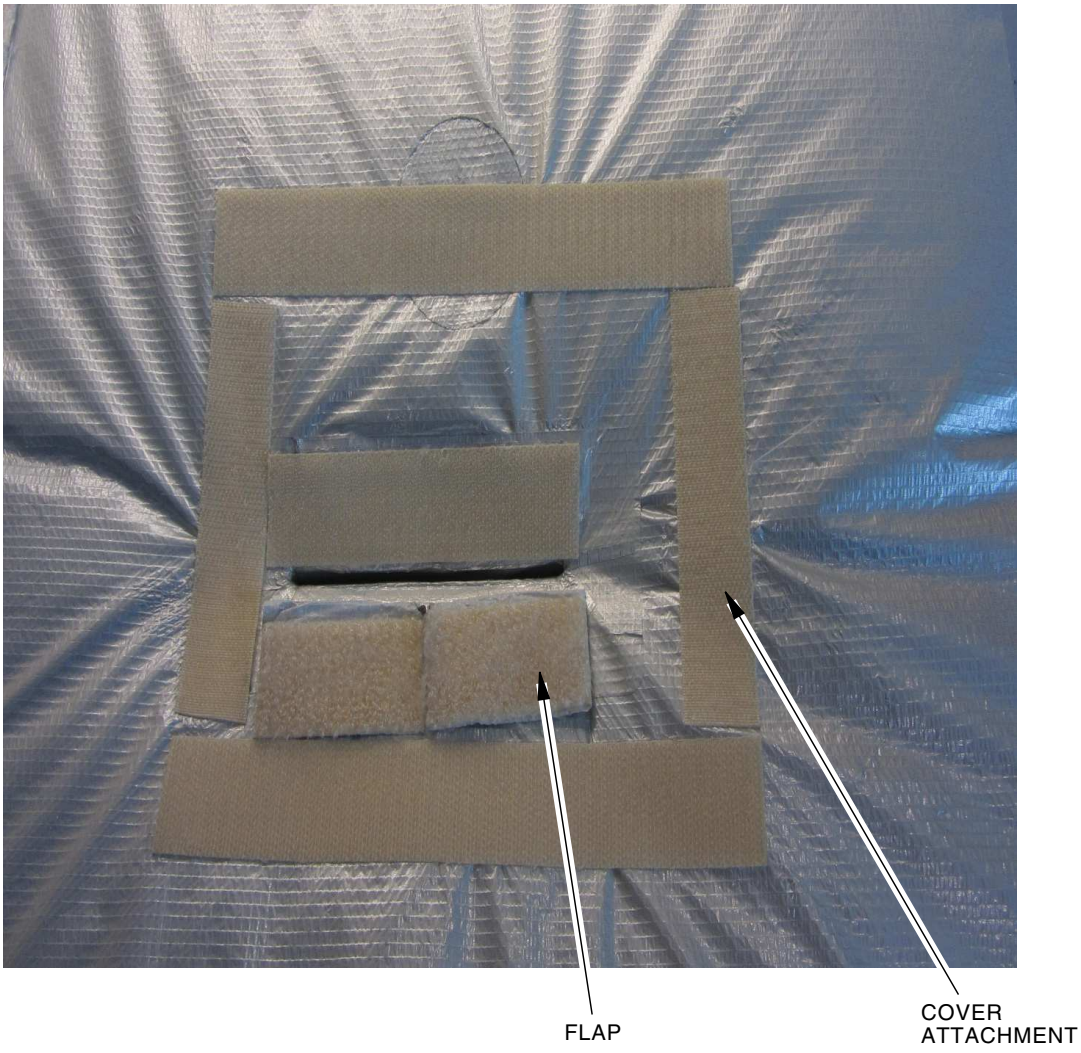

2412044 S00061529776_V1

Flap For Slit and Cover attachment
Figure 202/25-80-00-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details



2412045 S00061529777_V1

Cover For Antenna Access
Figure 203/25-80-00-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-80-00-400-803

3. Crown Hardware Installation - Insulation Blanket Protection

A. General

(1) Locations where there is hardware installed must have coverage with the fuselage insulation blanket. Do not compromise the moisture barrier function.

(2) Holes in the fuselage insulation blanket without correct foam disks can cause damage to the inboard and outboard cover films.

(3) Damaged cover films will let moisture into the insulation blanket and will cause moisture to release into the passenger cabin (i.e. – “rain in the plane”).

B. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

C. Procedure – Fuselage Blanket Penetration

SUBTASK 25-80-00-360-009

(1) Find all screws in the crown of the airplane or in the pressurized cabin that go through the fuselage insulation blanket.

(a) Install the BACW10DZ3 adhesive foam disks on the two sides of the insulation blanket.

(b) Tighten screws to 22.5 ±2.5 in-lb (2.54 ±0.28 N·m).

——— END OF TASK ———

TASK 25-80-00-300-801

4. Cover Film Repairs

A. General

(1) You must repair all damage to the inboard or outboard cover film of the insulation blanket during their modifications to keep them serviceable.

B. References

Reference	Title
25-80-00 P/B 801	INSULATION - REPAIRS

C. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

D. Procedure – Insulation Blanket Repairs

SUBTASK 25-80-00-360-010

(1) Repair damage to the insulation blanket or cover films. (INSULATION - REPAIRS, PAGEBLOCK 25-80-00/801.)

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-80-00-400-804

5. Cargo Bilge Antenna Installation - Insulation Blanket Access

A. General

(1) The primary problem for installation of antennas on the lower fuselage delivered after September 2009 is:

(a) Holes in the fuselage insulation blankets.

NOTE: These insulation blankets meet the requirements of Federal Aviation Regulation (FAR) 25.856(b) and 121.312(e)(3)

NOTE: For more information, see Boeing Service Letter 737-SL-25-135-A.

(2) The guidelines in AC25-856-2A, Page 8, Section 7.c.(2) read that penetration is unavoidable, but you must minimize the damage.

(3) If a cable must go through the fuselage insulation blanket, the dimension of the hole must be as small as possible.

(4) Use the tapes that follow for BMS5-157:

- The tape, G51202, or Class 1 Grade A equivalent with fabric, G50330 (BMS8-377).
- The tape, G50789, or Class 2 Grade C equivalent with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).
- The tape, G51205, or Class 3 Grade E equivalent with insulation cover, G51533 (BMS8-380, ECTFE).

B. Consumable Materials

Reference	Description	Specification
G50330	Fabric - Insulation Covering, Flame Propagation Resistant	BMS8-377
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF
G51205	Tape - Advanced Insulation	BMS5-157 Type I Class 3 Grade E Composition MPEEK
G51533	Cover - Insulation, Ethylene CholroTriFluoroEthylene (ECTFE) film	BMS8-380 Type 4 Class 2
G51553	Insulation - Flame Penetration Resistant	BMS8-396, Type 2
G51600	Cover - Insulation, Polyetheretherketone (PEEK) - Flame Propagation Resistant	BMS8-380 Type 3 Class 2

C. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Procedure – Insulation Blanket Antenna Cable Penetration

SUBTASK 25-80-00-360-011

(1) Find the location of the cable penetration.

NOTE: Use the lightening holes when possible to bring the cable from the outboard to the inboard side of the fuselage insulation blanket.

SUBTASK 25-80-00-360-012

(2) Cut the holes for the cable penetration.

SUBTASK 25-80-00-360-013

(3) When the cable is set, use the tape, BMS5-157, to seal the edges of the hole.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

INSULATION - REPAIRS

1. General

A. This procedure has these tasks:

(1) Repair the Insulation Blanket with BMS8-377 Cover Material.

(2) Repair the Insulation Blanket with BMS8-370 Cover Material.

(3) Repair the Insulation Blanket with BMS8-396 Cover Material

(4) Repair the Insulation Blanket with BMS8-380 Cover Material

(5) Insulation Blanket Manufacturing (per Production Part Specifications)

(6) Repair the Cargo Door Insulation Blankets

(7) Insulation Blanket Manufacturing (per Universal Blanket Template).

TASK 25-80-00-340-801

2. Repair the Insulation Blanket with BMS8-377 Cover Material

(Figure 801)

A. General

(1) This procedure gives instructions to repair insulation blankets that have the BMS8-377 cover material.

B. References

Reference	Title
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
SOPM 20-41-05	Application of Corrosion Inhibiting Compounds

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-11573	Installation Tool - Garment Tag Part #: 10651-0 Supplier: 16956
STD-126	Brush - Soft-bristle, Non-metallic
STD-6636	Vacuum Cleaner - wet and dry type

D. Consumable Materials

Reference	Description	Specification
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
D50299	Tape - Advanced Insulation Blanket	BMS5-157 Grade A Composition MPVF
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G00086	Insulation - Thermal-Acoustical Fiberglass (Water-Repellant, Punk-Resistant Fiberglass Batting)	BMS8-48 Type III

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G50330	Fabric - Insulation Covering, Flame Propagation Resistant	BMS8-377
G50333	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372
G50442	Fastener - Garment Tag, Nylon (Avery Dennison Standard T-End Swiftach)	
G50521	Tape - Advanced Insulation	BMS5-157 Type IV Class 1 Grade A Form 1 MPVF
G50522	Tape - Advanced Insulation	BMS5-157 Type III Class 1 Grade A Form 1 MPVF
G50523	Tape - Advanced Insulation	BMS5-157 Type II Class I Grade A Form 1 PVF

E. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

F. Prepare to Repair the Insulation Blanket

SUBTASK 25-80-00-212-001

(1) Visually check the amount of damage to the insulation blanket.

(a) If the amount of damage is more than 25 percent of the total area on either the front side or back side of the insulation blanket, replace the insulation blanket. Do these tasks:

1) Insulation Blanket Removal, TASK 25-80-00-000-801.

2) Insulation Blanket Installation, TASK 25-80-00-400-801.

(b) If the amount of damage is less than 25 percent of the total area on either the front side or back side of the insulation blanket, continue.

SUBTASK 25-80-00-160-003

WARNING DO NOT USE DETERGENTS OR SOLVENTS TO CLEAN THE INSULATION BLANKET. IT CAN REMOVE FLAME RETARDANTS AND CAUSE FLAMMABLE RESIDUES ON THE INSULATION BLANKET WHICH INCREASES THE RISK OF FIRE. THIS CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(2) If there is Corrosion Inhibiting Compound (CIC) contamination, oily or waxy substances or other fluids (which typically changes the color and appearance of the insulation blanket cover), clean the insulation blankets with correct solvents, refer to SOPM 20-41-05.

NOTE: The CIC contamination can only be cleaned with solvents referenced in SOPM 20-41-05.

SUBTASK 25-80-00-160-004

(3) If there are dust, lint or other loose debris on the insulation blanket, use a vacuum cleaner, STD-6636, or a soft-bristle non-metallic brush, STD-126, to remove the contamination.

SUBTASK 25-80-00-160-005

(4) Make sure that the repair area is clean and dry.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Repair the Insulation Blanket with BMS8-377 Cover Material

NOTE: BMS8-377 cover material is a thin opaque gray plastic film with an open weave scrim on one side and has a grid-like appearance.

SUBTASK 25-80-00-340-001

(1) To repair a grommet hole in the insulation blanket, do these steps:

(a) Make two round tape patches from tape, D50299(BMS5-157), with a 1.5 in. (38.1 mm) to 2 in. (51 mm) larger than the grommet hole.

1) You can use these (BMS5-157) tapes if necessary: tape, G50521, tape, G50523, or tape, G50522.

(b) Make a fiberglass plug from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket.

(c) Put the fiberglass plug into the grommet hole.

(d) Put the round tape patches over the grommet hole on both sides of the insulation blanket.

1) Make sure the tape patch overlaps the edge of the grommet hole by a minimum of 0.75 in. (19.05 mm).

(e) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-002

(2) To remove a line of stitching do these steps:

(a) Remove the thread from the line of stitching.

(b) Cover the affected area with tape, D50299.

SUBTASK 25-80-00-340-003

(3) To replace snaps with hook and loop tape, do these steps:

(a) Remove the snaps.

NOTE: Be careful to do as little damage as is possible to the blanket material.

(b) Cover all of the snap holes with tape, D50299.

(c) Cover both sides of the blanket if it is necessary.

(d) Install the tape, G50333.

NOTE: Apply the tape using normal fabrication methods.

SUBTASK 25-80-00-340-004

(4) To repair a tear in the insulation blanket, do these steps:

(a) Clean the area with a cotton wiper, G00034, wet with solvent, B00184.

(b) Dry the area with a clean cotton wiper, G00034.

(c) Make a tape patch from tape, D50299 (BMS5-157), that is 0.75 in. (19.05 mm) to 1.5 in. (38.1 mm) larger than the tear on all sides.

1) Make sure that the corners on the tape patch are rounded.

2) You can use these (BMS5-157) tapes if necessary: tape, G50521, tape, G50523, or tape, G50522.

(d) Put the tape patch over the tear.

1) Make sure that the tape patch overlaps the damaged area by 0.75 in. (19.05 mm) to 1.5 in. (38.1 mm) on all sides.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-005

(5) To repair damage that is larger than a tear in the insulation blanket cover, do these steps:

(a) Cut a rectangle out of the damaged blanket cover which fully removes the damaged area.

1) Keep the rectangle cutout as template to make a new replacement cover patch.

(b) Use the rectangle cutout template to make a rectangle cover patch that is similar in shape and size as the template from fabric, G50330 (BMS8-377).

(c) If there is damage to the fiberglass batting insulation, G00086 (BMS8-48), inside the blanket cover, do these steps:

1) If the damaged area is only on the first layer of the fiberglass batting, do these steps:

a) Cut a rectangle out of the damaged fiberglass batting to fully remove the damaged area on the first layer of the fiberglass batting, and leave behind a rectangular void in the blanket.

b) Cut a ply of replacement fiberglass patch from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket.

<1> Make sure that the patch extends a minimum of 2 in. (51 mm) past the edges of the rectangular void.

c) Put the replacement fiberglass patch over the center of the rectangular void and under the blanket cover.

2) If the damaged area is on multiple layers of the fiberglass batting, do these steps:

a) Cut out the damaged fiberglass batting to fully remove the damaged area.

b) Interleave new plies of fiberglass batting from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket, as necessary

(d) Put the rectangle cover patch over the cutout on the insulation blanket cover.

(e) Make a tape patch from tape, D50299 (BMS5-157), that is a minimum of 1 in. (25 mm) larger than all sides of the rectangle cutout.

1) Make sure that the corners on the tape patch are rounded.

(f) Put the tape patches over the joints to keep the rectangle cover patch in place on all sides.

1) Make sure that the tape patch overlaps the joint by a minimum of 1 in. (25 mm) on all sides.

(g) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

(h) Use the garment tag installer, COM-11573, to install the external garment tag fastener, G50442, spaced at 6 in. (152 mm) into the overlapped fiberglass repair area to keep the fiberglass batting in position between the covers.

1) Cut a 1 in. (25 mm) diameter circle of tape from tape, D50299 (BMS5-157), for use as reinforcement tape.

2) Put the reinforcement tape over the area where the external garment tag fastener, G50442, is to be stapled through on both sides of the blanket.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Use the garment tag installer, COM-11573, to staple the external garment tag fastener, G50442, through all layers of the insulation blanket, which includes the reinforcement tapes.

4) Cut a 2 in. (51 mm) diameter circle of tape from tape, D50299 (BMS5-157), for use as covering tape.

5) Put the covering tape over the external garment tag fastener, G50442, and reinforcement tape onto the insulation cover on both sides of the insulation blanket.

6) Push on the tape to make sure there is a good bond with the insulation blanket cover.

(i) You can use these (BMS5-157) tapes if necessary: tape, G50521, tape, G50523, or tape, G50522.

SUBTASK 25-80-00-340-006

(6) To replace a damaged hook/loop tape on the insulation blanket cover, do these steps:

(a) Carefully removed the damaged part of the hook/loop tape from the insulation blanket cover.

(b) Clean and dry the adhesive surface left by the removal of the damaged hook/loop tape.

(c) Put a piece of tape, D50299 (BMS5-157), over the area left by the removal of the damaged hook/loop tape on both sides of the insulation blanket assembly, if it is necessary.

1) Make sure that the tape is larger than the damaged area on the insulation cover by a minimum of 1 in. (25 mm) on all sides.

2) You can use these (BMS5-157) tapes if necessary: tape, G50521, tape, G50523, or tape, G50522.

(d) Install the replacement hook/loop tape, G50333 (BMS8-372), at the correct location on the insulation blanket cover.

——— END OF TASK ———

TASK 25-80-00-340-802

3. Repair the Insulation Blanket with BMS8-370 Cover Material

(Figure 801)

A. General

(1) This procedure gives instructions to repair insulation blankets that have the BMS8-370 cover material.

B. References

Reference	Title
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
SOPM 20-41-05	Application of Corrosion Inhibiting Compounds

C. Tools/Equipment

Reference	Description
STD-126	Brush - Soft-bristle, Non-metallic
STD-6636	Vacuum Cleaner - wet and dry type

ECCN 9E991 BOEING PROPRIETARY - See title page for details

D. Consumable Materials

Reference	Description	Specification
A00153	Adhesive - Low Odor, Synthetic Rubber Cement	BMS5-30
G50328	Fabric - Advance Polymer Coated, Flame Propagation Resistant	BMS8-370
G50381	Abrasive - Aluminum Oxide Paper, 180 Grit	

E. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

F. Prepare to Repair the Insulation Blanket

SUBTASK 25-80-00-212-002

(1) Visually check the amount of damage to the insulation blanket.

(a) If the amount of damage is more than 25 percent of the total area on either the front side or back side of the insulation blanket, replace the insulation blanket. Do these tasks:

1) Insulation Blanket Removal, TASK 25-80-00-000-801.

2) Insulation Blanket Installation, TASK 25-80-00-400-801.

(b) If the amount of damage is less than 25 percent of the total area on either the front side or back side of the insulation blanket, continue.

SUBTASK 25-80-00-160-006

WARNING DO NOT USE DETERGENTS OR SOLVENTS TO CLEAN THE INSULATION BLANKET. IT CAN REMOVE FLAME RETARDANTS AND CAUSE FLAMMABLE RESIDUES ON THE INSULATION BLANKET WHICH INCREASES THE RISK OF FIRE. THIS CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(2) If there is Corrosion Inhibiting Compound (CIC) contamination, oily or waxy substances or other fluids (which typically changes the color and appearance of the insulation blanket cover), clean the insulation blankets with correct solvents, refer to SOPM 20-41-05.

NOTE: The CIC contamination can only be cleaned with solvents referenced in SOPM 20-41-05.

SUBTASK 25-80-00-160-007

(3) If there are dust, lint or other loose debris on the insulation blanket, use a vacuum cleaner, STD-6636, or a soft-bristle non-metallic brush, STD-126, to remove the contamination.

SUBTASK 25-80-00-160-008

(4) Make sure that the repair area is clean and dry.

G. Repair the Insulation Blanket with BMS8-370 Cover Material

NOTE: BMS8-370 cover material has a smooth and silky surface, typically white in appearance. It is used in only a few areas of the airplane.

SUBTASK 25-80-00-340-007

(1) Do these steps if there is damage on the insulation blanket cover:

(a) Identify the perimeter around the damaged area on the insulation blanket for a cover patch area that is larger than the damaged area by 1 in. (25 mm) to 1.5 in. (38.1 mm) on all sides.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) If the cover patch area that is identified on the damaged insulation blanket can fit into a 3 in. (76 mm) by 3 in. (76 mm) square, do these steps:

1) Make a cover patch from fabric, G50328 (BMS8-370), that is larger than the damaged area by 1 in. (25 mm) to 1.5 in. (38.1 mm) on all sides.

a) Make sure that the corners on the cover patch are rounded.

2) Lightly abrade the entire adhesive side of the cover patch and the area to be covered by the cover patch, with 180 grit abrasive paper, G50381, or finer paper to remove any gloss.

3) Apply adhesive, A00153 (BMS5-30), on the entire bonding surface of the cover patch area or insulation blanket cover.

4) Put the adhesive side of the cover patch over the damaged area of the insulation blanket cover.

5) Make sure there is an overlap of 1 in. (25 mm) to 1.5 in. (38.1 mm) between the damaged area and the edge of the cover patch on all sides.

6) Wipe off any adhesive, A00153 (BMS5-30), that is not necessary.

7) Push on the cover patch to make sure there is a good bond with the insulation blanket cover.

(c) If the cover patch area that is identified on the damaged insulation blanket is larger than a 3 in. (76 mm) by 3 in. (76 mm) square repeat the steps in (b) except that adhesive, A00153, shall be applied up to 1 in. (25 mm) wide around the periphery of the patch.

——— END OF TASK ———

TASK 25-80-00-340-803

4. Repair the Insulation Blanket that has BMS8-396 Fire Resistant Material

A. General

(1) This procedure gives instructions to repair insulation blankets that have the BMS8-396 fire resistant material.

B. References

Reference	Title
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
SOPM 20-41-05	Application of Corrosion Inhibiting Compounds

C. Tools/Equipment

Reference	Description
STD-126	Brush - Soft-bristle, Non-metallic
STD-6636	Vacuum Cleaner - wet and dry type

D. Consumable Materials

Reference	Description	Specification
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00086	Insulation - Thermal-Acoustical Fiberglass (Water-Repellant, Punk-Resistant Fiberglass Batting)	BMS8-48 Type III
G02470	Foam - Flexible Polyimide	BMS8-300 Type I
G50333	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372
G50779	Material - Insulation Flame Penetration Resistant, Barrier Covering	BMS8-396
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK

E. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

F. Prepare to Repair the Insulation Blanket

SUBTASK 25-80-00-340-008

(1) Visually check the amount of damage to the insulation blanket.

(a) If the amount of damage is more than 25 percent of the total area on either the front side or back side of the insulation blanket, replace the insulation blanket. Do these tasks:

1) Insulation Blanket Removal, TASK 25-80-00-000-801

2) Insulation Blanket Installation, TASK 25-80-00-400-801

(b) If the amount of damage is less than 25 percent of the total area on either the front side or back side of the insulation blanket, continue.

SUBTASK 25-80-00-340-009

WARNING DO NOT USE DETERGENTS OR SOLVENTS TO CLEAN THE INSULATION BLANKET. IT CAN REMOVE FLAME RETARDANTS AND CAUSE FLAMMABLE RESIDUES ON THE INSULATION BLANKET WHICH INCREASES THE RISK OF FIRE. THIS CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(2) If there is Corrosion Inhibiting Compound (CIC) contamination, oily or waxy substances or other fluids (which typically changes the color and appearance of the insulation blanket cover), clean the insulation blankets with correct solvents, refer to SOPM 20-41-05.

NOTE: The CIC contamination can only be cleaned with solvents referenced in SOPM 20-41-05.

SUBTASK 25-80-00-340-010

(3) If there is dust, lint or other loose debris on the insulation blanket, use a vacuum cleaner, STD-6636, or a non-metallic soft-bristle non-metallic brush, STD-126, to remove the contamination.

SUBTASK 25-80-00-340-011

(4) Make sure that the repair area is clean and dry.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Repair the Insulation Blanket that has the BMS8-396 Fire Resistant Barrier

NOTE: BMS8-396 cover material is a laminate of reinforced polymer films in combination with a paper fire- blocker. The film has a scrim on one or both side and has a opaque gray or pale yellow color with a grid like appearance.

SUBTASK 25-80-00-340-012

(1) To repair a grommet hole in the insulation blanket, do these steps:

(a) Make two round tape patches from tape, G50789 (BMS5-157), that are a minimum of 1.5 in. (38.1 mm) to 2 in. (51 mm) larger than the grommet hole.

(b) Make a fiberglass plug from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket.

(c) Put the fiberglass plug into the grommet hole.

(d) Put the round tape patches over the grommet hole on both sides of the insulation blanket.

1) Make sure that the tape patch overlaps the edge of the grommet hole by a minimum of 0.75 in. (19.05 mm).

(e) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-013

(2) To remove a line of stitching do these steps:

(a) Remove the thread from the line of stitching.

(b) Cover the affected area with tape, G50789.

SUBTASK 25-80-00-340-014

(3) To replace snaps with hook and loop tape, do these steps:

(a) Remove the snaps.

NOTE: Be careful to do as little damage as is possible to the blanket material.

(b) Cover all of the snap holes with tape, G50789.

(c) Cover both sides of the blanket if it is necessary.

(d) Install the tape, G50333.

NOTE: Apply the tape using normal fabrication methods.

SUBTASK 25-80-00-340-015

(4) To repair a tear in the insulation material, G50779, do these steps:

(a) Clean the area with a cotton wiper, G00034, wet with solvent, B00184.

(b) Dry the area with a cotton wiper, G00034

(c) Make a round tape patch from tape, G50789 (BMS5-157), that is a minimum of 0.75 in. (19.05 mm) to 1.5 in. (38.1 mm) larger than the tear.

1) Make sure that the corners on the tape patch are rounded.

(d) Put the tape patch over the tear.

1) Make sure that the tape patch overlaps the damaged area by 0.75 in. (19.05 mm) to 1.5 in. (38.1 mm) on all sides.

(e) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-016

(5) To repair damage that is larger than a tear in the insulation blanket cover, do these steps:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Leave the damaged cover in place, if possible. Do not remove it from the covering. Measure the damaged area.

1) Use the measurement as a template to make a new rectangle replacement cover patch.

(b) Use the measurement to make a rectangle cover patch that is similar in shape and size as the damage on insulation material, G50779 (BMS8-396).

(c) If there is damage to the fiberglass batting insulation, G00086 (BMS8-48), or to the foam insulation, G02470 (BMS8-300), inside the blanket cover, do these steps:

1) If the damaged area is only on the first layer of the fiberglass batting or foam, do these steps:

a) Cut a rectangle out of the damaged fiberglass batting or foam to fully remove the damaged area, and leave behind a rectangular void in the blanket.

b) Cut a ply of replacement fiberglass patch from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket.

c) Make sure that the patch extends a minimum of 2 in. (51 mm) past the edges of the rectangular void.

d) Make a foam plug from foam insulation, G02470 (BMS8-300), that is equivalent in type and grade of the damaged insulation blanket.

e) Put the replacement fiberglass patch or foam plug over the center of the rectangular void and under the blanket cover.

2) If the damaged area is on multiple layers of the fiberglass batting or a combination of foam and batting, do these steps:

a) Cut out the damaged fiberglass batting to fully remove the damaged area.

b) Interleave new plies of fiberglass batting insulation, G00086 (BMS8-48), or foam insulation, G02470 (BMS8-300), or combination that is equivalent in type/class/grade as those used in the insulation blanket, as necessary.

(d) Put the rectangle cover patch over the cutout on the insulation blanket cover.

(e) Make a tape patch from tape, G50789 (BMS5-157), that is a minimum of 1 in. (25 mm) larger than all sides of the rectangle cutout.

1) Make sure that the corners on the tape patch are rounded.

(f) Put the tape patches over the joints to keep the rectangle cover patch in place on all sides.

1) Make sure that the tape patch overlaps the joint by a minimum of 1 in. (25 mm) on all sides.

(g) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

(h) Install external garment tags, spaced at 6 in. (152 mm) onto the overlapped fiberglass repair area to keep the fiberglass batting in position between the covers.

1) Cut a 1 in. (25 mm) diameter circle of tape from tape, G50789 (BMS5-157), for use as reinforcement tape.

2) Put the reinforcement tape over the area where the external garment tag is to be stapled through on both sides of the blanket.

3) Staple the external garment tag through all layers of the insulation blanket, which includes the reinforcement tapes.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

4) Cut a 2 in. (51 mm) diameter circle of tape from tape, G50789 (BMS5-157), for use as covering tape.

5) Put the covering tape over the external garment tag and reinforcement tape onto the insulation cover on both sides of the insulation blanket.

6) Push on the tape to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-017

(6) To repair delamination of the cover material, do these steps:

NOTE: There is no limitation to the delamination repair area. Apply the tape patch to any damaged area.

(a) Make sure that the damage is limited to the outermost film only.

(b) Make a tape patch from tape, G50789, that is a minimum of 1 in. (25 mm) to 1.5 in. (38.1 mm) beyond the damaged area in all directions.

(c) Apply the tape to the damaged area

——— END OF TASK ———

TASK 25-80-00-340-804

5. Repair the Insulation Blanket that has BMS8-380 Cover Material

A. General

(1) This procedure gives instructions to repair insulation blankets that have the BMS8-380 fire resistant barrier.

(2) Use the tapes that follow for BMS5-157:

- The tape, G50789, or Class 2 Grade C equivalent with insulation cover, G51600 (BMS8-380, PEEK).
- The tape, G51205, or Class 3 Grade E equivalent with insulation cover, G51533 (BMS8-380, ECTFE).

B. References

Reference	Title
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
SOPM 20-41-05	Application of Corrosion Inhibiting Compounds

C. Tools/Equipment

Reference	Description
STD-126	Brush - Soft-bristle, Non-metallic
STD-6636	Vacuum Cleaner - wet and dry type

D. Consumable Materials

Reference	Description	Specification
B00184	Solvent - Presealing, Cleaning Solvent	BMS11-7
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00086	Insulation - Thermal-Acoustical Fiberglass (Water-Repellant, Punk-Resistant Fiberglass Batting)	BMS8-48 Type III
G50333	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372
G50606	Cover - Insulation, Polyetherketoneketone (PEKK) - Flame Propagation Resistant	BMS8-380 Type 2 Class 2
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK
G51205	Tape - Advanced Insulation	BMS5-157 Type I Class 3 Grade E Composition MPEEK
G51533	Cover - Insulation, Ethylene CholroTriFluoroEthylene (ECTFE) film	BMS8-380 Type 4 Class 2
G51600	Cover - Insulation, Polyetheretherketone (PEEK) - Flame Propagation Resistant	BMS8-380 Type 3 Class 2

E. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

F. Prepare to Repair the Insulation Blanket

SUBTASK 25-80-00-340-018

(1) Visually check the amount of damage to the insulation blanket.

(a) If the amount of damage is more than 25 percent of the total area on either the front side or back side of the insulation blanket, replace the insulation blanket. Do these tasks:

1) Insulation Blanket Removal, TASK 25-80-00-000-801.

2) Insulation Blanket Installation, TASK 25-80-00-400-801.

(b) If the amount of damage is less than 25 percent of the total area on either the front side or back side of the insulation blanket, continue.

SUBTASK 25-80-00-340-019

WARNING DO NOT USE DETERGENTS OR SOLVENTS TO CLEAN THE INSULATION BLANKET. IT CAN REMOVE FLAME RETARDANTS AND CAUSE FLAMMABLE RESIDUES ON THE INSULATION BLANKET WHICH INCREASES THE RISK OF FIRE. THIS CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(2) If there is Corrosion Inhibiting Compound (CIC) contamination, oily or waxy substances or other fluids (which typically changes the color and appearance of the insulation blanket cover), clean the insulation blankets with correct solvents, refer to SOPM 20-41-05.

NOTE: The CIC contamination can only be cleaned with solvents referenced in SOPM 20-41-05.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-80-00-340-020

(3) If there is dust, lint or other loose debris on the insulation blanket, use a vacuum cleaner, STD-6636, or a non-metallic soft-bristle non-metallic brush, STD-126, to remove contamination.

SUBTASK 25-80-00-340-021

(4) Make sure that the repair area is clean and dry.

G. Repair the Insulation Blanket that has the BMS8-380 Cover Material

NOTE: BMS8-380 cover material is a thin opaque gray plastic film with an open weave scrim on one side and has a grid-like appearance.

SUBTASK 25-80-00-340-022

(1) To repair a grommet hole in the insulation blanket, do these steps:

(a) Make two round tape patches from tape, BMS5-157, that are a minimum 1.5 in. (38.1 mm) to 2 in. (51 mm) larger than the grommet hole.

(b) Make a fiberglass plug from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket.

(c) Put the fiberglass plug into the grommet hole.

(d) Put the round tape patches over the grommet hole on both sides of the insulation blanket.

1) Make sure that the tape patch overlaps the edge of the grommet hole by a minimum of 0.75 in. (19.05 mm).

(e) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-023

(2) To remove a line of stitching do these steps:

(a) Remove the thread from the line of stitching.

(b) Cover the affected area with tape, BMS5-157.

SUBTASK 25-80-00-340-024

(3) To replace snaps with hook and loop tape, do these steps:

(a) Remove the snaps.

NOTE: Be careful to do as little damage as is possible to the blanket material.

(b) Cover all of the snap holes with tape, BMS5-157.

(c) Cover both sides of the blanket if it is necessary.

(d) Install the tape, G50333.

NOTE: Apply the tape using normal fabrication methods.

SUBTASK 25-80-00-340-025

(4) To repair a tear in the insulation cover, G50606, do these steps:

(a) Clean the area with a cotton wiper, G00034, wet with solvent, B00184.

(b) Dry the area with a cotton wiper, G00034.

(c) Make a round tape patch from tape, BMS5-157, that is a minimum of 0.75 in. (19.05 mm) to 1.5 in. (38.1 mm) larger than the tear on all sides.

1) Make sure that the corners on the tape patch are rounded.

(d) Put the tape patch over the tear.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the tape patch overlaps the damaged area by 0.75 in. (19.05 mm) to 1.5 in. (38.1 mm) on all sides.

(e) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-026

(5) To repair damage that is larger than a tear in the insulation blanket cover, do these steps:

(a) Cut a rectangle out of the damaged blanket cover which fully removes the damaged area.

1) Keep the rectangle cutout as template to make a new replacement cover patch.

(b) Use the rectangle cutout template to make a rectangle cover patch that is similar in shape and size as the template from insulation cover, G50606 (BMS8-380).

(c) If there is damage to the fiberglass batting insulation, G00086 (BMS8-48), inside the blanket cover, do these steps:

1) If the damaged area is only on the first layer of the fiberglass batting, do these steps:

a) Cut a rectangle out of the damaged fiberglass batting to fully remove the damaged area on the first layer of the fiberglass batting, and leave behind a rectangular void in the blanket.

b) Cut a ply of replacement fiberglass patch from fiberglass batting insulation, G00086 (BMS8-48), that extends a minimum of 2 in. (51 mm) past the edges of the rectangular void.

c) Put the replacement fiberglass patch over the center of the rectangular void and under the blanket cover.

2) If the damaged area is on multiple layers of the fiberglass batting, do these steps:

a) Cut out the damaged fiberglass batting to fully remove the damaged area.

b) Interleave new plies of fiberglass batting from fiberglass batting insulation, G00086 (BMS8-48), that is equivalent in type/class/grade as those used in the insulation blanket, as necessary.

(d) Put the rectangle cover patch over the cutout on the insulation blanket cover.

(e) Make a tape patch from tape, BMS5-157, that is a minimum of 1 in. (25 mm) larger than all sides of the rectangle cutout.

1) Make sure that the corners on the tape patch are rounded.

(f) Put the tape patches over the joints to keep the rectangle cover patch in place on all sides.

1) Make sure that the tape patch overlaps the joint by a minimum of 1 in. (25 mm) on all sides.

(g) Push on the tape patch to make sure there is a good bond with the insulation blanket cover.

(h) Install external garment tags, spaced at 6 in. (152 mm) onto the overlapped fiberglass repair area to keep the fiberglass batting in position between the covers.

1) Cut a 1 in. (25 mm) diameter circle of tape, BMS5-157, for use as reinforcement tape.

2) Put the reinforcement tape over the area where the external garment tag is to be stapled through on both sides of the blanket.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Staple the external garment tag through all layers of the insulation blanket, which includes the reinforcement tapes.

4) Cut a 2 in. (51 mm) diameter circle of tape, BMS5-157, for use as covering tape.

5) Put the covering tape over the external garment tag and reinforcement tape onto the insulation cover on both sides of the insulation blanket.

6) Push on the tape to make sure there is a good bond with the insulation blanket cover.

SUBTASK 25-80-00-340-027

(6) To replace damaged hook/loop tape, G50333 (BMS8-372), on the insulation blanket cover, do these steps:

(a) Carefully removed the damaged part of the hook/loop tape, G50333, from the insulation blanket cover.

(b) Clean and dry the adhesive surface left by the removal of the damaged hook/loop tape, G50333.

(c) Put a piece of tape, BMS5-157, over the area left by the removal of the damaged hook/loop tape, G50333, on both sides of the insulation blanket assembly, if it is necessary.

1) Make sure that the tape is larger than the damaged area on the insulation cover by a minimum of 1 in. (25 mm) on all sides.

(d) Install the replacement hook/loop tape, G50333 (BMS8-372), at the correct location on the insulation blanket cover

——— END OF TASK ———

TASK 25-80-00-300-802

6. Insulation Blanket Manufacturing (per Production Part Specifications)

(Figure 802)

A. General

(1) This procedure gives instructions to make a new insulation blanket per Production Part specifications.

(2) The new insulation blanket can either be made from the assembly of various component materials, or from a semi-finished insulation blanket strip, that is pre-assembled and built from equivalent component materials that are comparable in type/class/grade as those which are not pre-assembled.

(3) The damaged insulation blanket can be used as a template to make a new insulation blanket.

(4) Boeing has also provided a standardized ‘Universal Blanket’ template which can be used to fabricate insulation blankets in specific areas of the airplane (Insulation Blanket Manufacturing (per Universal Blanket Template), TASK 25-80-00-300-803).

NOTE: Some areas of the airplane are not considered part of the ‘Universal Blanket’ template; blankets in these areas may be fabricated per this task.

NOTE: Some universal blankets may have longer or extra stitches than original blanket. This may decrease the thermal and noise protection in the stitched area due to extra compression than needed.

NOTE: Some blankets will have quilting. Stitching on the universal blankets CAN be used instead of quilting.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(5) Operator has the option to fabricate a new insulation blanket to production part specifications as described in this task, or may utilize the 'Universal Blanket' template as described in Insulation Blanket Manufacturing (per Universal Blanket Template), TASK 25-80-00-300-803.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-11573	Installation Tool - Garment Tag Part #: 10651-0 Supplier: 16956

C. Consumable Materials

Reference	Description	Specification
G50019	Tape - Flexible Foam Sound Damping And Sealing Tape	BMS8-283 Type I
G50328	Fabric - Advance Polymer Coated, Flame Propagation Resistant	BMS8-370
G50329	Fabric - High Mass Coated, Flame Propagation Resistant	BMS8-374
G50330	Fabric - Insulation Covering, Flame Propagation Resistant	BMS8-377
G50334	Felt - Needled, Flame Propagation Resistant	BMS8-373
G50341	Thread - Kevlar Sewing (T40), Strip Machine Thread (T60)	A-A-55220 Bonded Tex 40, Tex 60
G50442	Fastener - Garment Tag, Nylon (Avery Dennison Standard T-End Swiftach)	
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK
G51202	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 1 Grade A Composition MPVF
G51205	Tape - Advanced Insulation	BMS5-157 Type I Class 3 Grade E Composition MPEEK
G51436	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type 1
G51533	Cover - Insulation, Ethylene CholroTriFluoroEthylene (ECTFE) film	BMS8-380 Type 4 Class 2
G51549	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type III
G51553	Insulation - Flame Penetration Resistant	BMS8-396, Type 2
G51595 [BMS8-300]	Foam - Flexble Polyimide	
G51600	Cover - Insulation, Polyetheretherketone (PEEK) - Flame Propagation Resistant	BMS8-380 Type 3 Class 2
G51607	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 3 Grade E

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G51610	Tape - Advanced Insulation Blanket	BMS5-157 Type III Class 2 Grade C
G51611	Tape - Advanced Insulation Blanket	BMS5-157 Type III Class 3 Grade E
G51614	Insulation - Thermal - Thermal-Acoustical Fiberglass (Water-Repellant, Punk-Resistant Fiberglass Batting)	BMS8-48
G51873	Tape Grommet - Advanced Insulation Blanket	BMS5-157 Class 2 Grade E
G51874	Tape Grommet - Advanced Insulation Blanket	BMS5-157 Class 3 Grade E
G51875	Tape - Advanced Insulation Blanket, 8 Inch Width, 2 Inch Edge, 6 Inch Tab	BMS5-157 Type IV Class 3

D. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

E. Make a New Insulation Blanket

NOTE: The new insulation blanket can either be made from the assembly of various component materials, or from a semi-finished insulation blanket strip, that is pre-assembled and built from equivalent component materials that are comparable in type/class/grade as those which are not pre-assembled.

NOTE: Cover, insulation, G51553 (BMS8-396), must be continuous when used as inboard or outboard covering.

NOTE: If specific insulation blanket build-up and raw material information (such as Type/Class/Grade) cannot be determined from the damaged blanket template, contact Boeing Engineering.

SUBTASK 25-80-00-340-028

(1) To make a new insulation blanket from component materials, do these steps:

(a) Use the damaged insulation blanket as a template to outline its shape.

(b) If the insulation blanket will be installed at the bottom of the windows or above, make the insulation cover (or combination of covers) from one of the following materials:

1) fabric, G50330 (BMS8-377).

2) fabric, G50328 (BMS8-370).

3) fabric, G50329 (BMS8-374).

4) felt, G50334 (BMS8-373).

(c) If the insulation blanket will be installed below the bottom of the windows, make the insulation cover (or combination of covers) from the following material:

1) insulation, G51553 (BMS8-396).

2) insulation cover, G51600 (BMS8-380).

(d) The use of fiberglass batting insulation, G51614 (BMS8-48), or the foam insulation, G51595 [BMS8-300].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that you use fiberglass batting insulation, G51614 (BMS8-48), or foam insulation, G51595 [BMS8-300], that are equivalent in type/class/grade as those in the template.

2) Interleave the fiberglass batting insulation, G51614 (BMS8-48), and foam insulation, G51595 [BMS8-300], if it is necessary to extend the blanket.

(e) Put the applicable fiberglass batting insulation and foam insulation in between the applicable inboard and outboard insulation covers.

SUBTASK 25-80-00-340-029

(2) To make a new insulation blanket from a semi-finished insulation blanket strip, do these steps:

(a) Make sure that you use a semi-finished insulation blanket strip that is pre-assembled and built from equivalent component materials that are comparable in type/class/grade as those which are not pre-assembled.

(b) Use the damaged insulation blanket as a template to outline its shape on the semi-finished insulation blanket strip.

(c) Cut the semi-finished insulation blanket strip to the same shape as the template outline.

(d) Interleave the fiberglass batting and foam insulation as applicable, if it is necessary to extend the blanket.

SUBTASK 25-80-00-340-030

(3) Do these steps to install external garment tag fastener, G50442, to connect the layers of insulation blanket materials:

NOTE: The garment tag is a commercially available plastic fastener that is stapled through all layers of the insulation blanket and fastened to keep the fiberglass batting inside the insulation blanket in the same position in relation to the blanket covers.

(a) Use tape, G51202, or Class 1 Grade A equivalent (BMS5-157) with fabric, G50330 (BMS8-377).

(b) Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157) with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).

(c) Use tape, G51205, or Class 3 Grade E equivalent (BMS5-157) with insulation cover, G51533 (BMS8-380, ECTFE).

(d) Cut a 1.00 in. (25.40 mm) diameter circle of tape for use as reinforcement tape.

(e) Put the reinforcement tape over the area where the external garment tag fastener, G50442, is to be stapled through on both sides of the blanket.

(f) Use the garment tag installer, COM-11573, to staple the external garment tag fastener, G50442, through all layers of the insulation blanket, which includes the reinforcement tapes.

1) Make sure that you use a garment tag fastener, G50442, of the correct length in relation to the nominal thickness of the insulation blanket (Table 801).

Table 801/25-80-00-993-802 Insulation Blanket Garment Tag Sizes

Nominal Thickess of Insulation Blanket	Garment Tag Length
NOTE: This is the total nominal thickness of all layers of raw material used in blankets.	
4.01 in. (101.85 mm) to 7.01 in. (178.05 mm)	3.00 in. (76.20 mm)
2.01 in. (51.05 mm) to 4.00 in. (101.60 mm)	2.00 in. (50.80 mm)
1.26 in. (32.00 mm) to 2.00 in. (50.80 mm)	1.00 in. (25.40 mm)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Table 801/25-80-00-993-802 Insulation Blanket Garment Tag Sizes (Continued)

Nominal Thickess of Insulation Blanket	Garment Tag Length
0.51 in. (12.95 mm) to 1.25 in. (31.75 mm)	0.50 in. (12.70 mm)
0.38 in. (9.65 mm) to 0.50 in. (12.70 mm)	0.25 in. (6.35 mm)

(g) Cut a 2.00 in. (50.80 mm) diameter circle of tape for use as covering tape.

(h) Put the covering tape over the external garment tag fastener, G50442, and reinforcement tape, onto the insulation cover on both sides of the blanket.

(i) Push on the tape to make sure there is a good bond with the blanket cover.

SUBTASK 25-80-00-340-031

(4) Do the applicable steps to close the edges and cutouts of the insulation blanket:

(a) Method 1: Sew the Edges

1) Fold the cover fabric over the edge of the blanket or wrap a strip of cover fabric over the edge of the blanket as applicable to bind the edge on the blanket.

2) Stitch the edge with kevlar sewing thread, G50341, at 4 to 6 stitches per each inch.

3) Make sure the stitches go through the edge binding on both sides of the insulation blanket.

4) Seal the stitching on the blanket with the applicable tape.

- Use tape, G51202, or Class 1 Grade A equivalent (BMS5-157) with fabric, G50330 (BMS8-377).
- Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157) with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).
- Use tape, G51205, or Class 3 Grade E equivalent (BMS5-157) with insulation cover, G51533 (BMS8-380, ECTFE).

(b) Method 2: Tape the Edges.

NOTE: This is applicable to BMS8-377, BMS8-396 materials only.

1) Use the applicable tape for fabric, G50330 (BMS8-377), and for insulation, G51553 (BMS8-396), that is sufficiently wide to overlap the top and bottom of the blanket by a minimum of 0.75 in. (19.05 mm).

- Use tape, G51202, or Class 1 Grade A equivalent (BMS5-157) with fabric, G50330 (BMS8-377).
- Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157) with insulation, G51553 (BMS8-396).

2) Make the edge the same height as the template.

(c) Method 3: Heat-seal the Edges

NOTE: Not all types of fabric can be heat sealed. Fabric that can be heat sealed may be heavier than fabric that cannot be heat sealed. Make sure that you use the correct type of fabric. Blanket edges can be heat sealed using thermal or ultra sonic equipment.

1) Hold the top and bottom covers together and heat-seal the edges of the blanket.

2) The width of the heat seal must be 0.25 in. (6.35 mm) to 0.5 in. (12.7 mm).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-80-00-340-032

(5) Install hook/loop tape, G51549 (BMS8-372 Type 3), or tape, G51436 (BMS8-372 Type 1)where applicable.

NOTE: Only use tape, G51549 (BMS8-372 Type 3) with insulation cover, G51533 (BMS8-380, ECTFE).

NOTE: Only use tape, G51436(BMS8-372 Type 1) with insulation cover, G51600 (BMS8-380, PEEK).

SUBTASK 25-80-00-340-033

(6) Install the water diverter on the insulation blanket with tape, G50019 (BMS8-283), or foam insulation, G51595 [BMS8-300], equivalent, where applicable.

SUBTASK 25-80-00-340-034

(7) To make a grommet through a hole in the insulation blanket with cover fabric, G50330 (BMS8-377), use tape, G51202, or Class 1 Grade A equivalent (BMS5-157), to bond it to the insulation blanket.

SUBTASK 25-80-00-340-035

(8) To make a grommet through a hole in the insulation blanket with insulation, G51553 (BMS8-396), use tape, G50789, or Class 2 Grade C equivalent (BMS5-157), to bond it to the insulation blanket.

SUBTASK 25-80-00-340-036

(9) Do these steps to install vents in the insulation blanket cover fabric, G50330 (BMS8-377):

(a) Use tape, G51202, or Class 1 Grade A equivalent (BMS5-157), with fabric, G50330 (BMS8-377).

(b) Make sure you install the vent so that it opens in the same direction as on the template.

(c) Cut a hole approximately 1 in. (25 mm) in diameter in the cover fabric.

(d) Cut a 2 in. (51 mm) circle of tape.

(e) Remove the release liner from a small part of the circle tape.

(f) Attach the circle tape over the hole in the blanket.

SUBTASK 25-80-00-340-037

(10) Do these steps to install vents in the insulation, G51553 (BMS8-396):

(a) Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157), with insulation, G51553 (BMS8-396).

(b) Make sure that you install the vent so that it opens in the same direction as on the template.

(c) Cut a hole approximately 1 in. (25 mm) in diameter in the cover fabric.

(d) Cut a 2 in. (51 mm) circle of tape.

(e) Remove the release liner from a small part of the circle tape.

(f) Attach the circle tape over the hole in the blanket.

SUBTASK 25-80-00-340-038

(11) Do these steps to quilt the blanket, where applicable:

(a) Quilt through all layers of the insulation blanket, from cover to cover with kevlar sewing thread, G50341, at 4 to 6 stitches per inch.

(b) Make sure that the grid size of the quilting is a minimum 1 in. (25 mm) by 1 in. (25 mm) square or larger.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Apply the applicable strips of tape over the quilting:

1) Use tape, G51202, or Class 1 Grade A equivalent (BMS5-157), with fabric, G50330 (BMS8-377).

2) Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157), with insulation, G51553 (BMS8-396).

(d) Overlap the strips of tape over both sides of the quilting at 0.75 in. (19.05 mm) intervals.

SUBTASK 25-80-00-340-059

(12) Do these steps to add provisions in the blanket.

NOTE: For insulation cover, G51600 (BMS8-380, PEEK), use tape, G51873. For insulation cover, G51533 (BMS8-380, ECTFE), use tape, G51874.

(a) Overlay removed blanket onto new blanket or measure provisions and transfer onto new blanket.

(b) Mark provisions onto new blanket with black sharpie pen.

(c) Cut slits with scissors through fiberglass batting and covers.

(d) Install tape, G51873, or tape, G51874, or tape, G51610, or tape, G51611, to seal fiberglass and reinforcement covers.

(e) Use tape, G51610, or tape, G51611, to continue sealing the slit provision.

NOTE: Tape should be at least 1 in. (2.54 cm) adhered to inboard and outboard covers along the slit.

(f) If voids exist, tape over it with 1 in. (2.54 cm) or 2 in. (5.08 cm) wide strip of tape, G51611, or tape, G51610.

NOTE: For end of new slit, cut tape, G51874, and tape, G51873, in half to be used.

NOTE: For inside corners, cut tape, G51874, or tape, G51873, into square or rectangle so that each corner is equal in size. Seal cover and batting similar to straight slit around new corner.

NOTE: For outside corner, use tape, G51610, or tape, G51611, to fold around the corners.

SUBTASK 25-80-00-340-060

(13) Do these steps to fill an unused cutout or notch.

(a) Obtain same batting used in fabrication of blanket.

(b) Obtain tape that is up to 6 in. (15.24 cm) wide.

- Use tape, G50789, or Class 2 Grade C equivalent, with insulation cover, G51600.
- Use tape, G51607, or Class 3 Grade E equivalent, with insulation cover, G51533.

(c) Remove foam tape and hook and loop tapes of applicable unused area.

(d) Cut batting to size of cutout that is being filled in.

(e) Cut and place tape at least 1 in. (2.54 cm) past area all around the outboard side and extending past heat-sealed edge.

(f) Place batting into cutout or notch area.

(g) Cut and place tape at least 1 in. (2.54 cm) past area all around the inboard side and extending past heat-sealed edge.

(h) Press tape together to create a new edge and trim edge even with existing edge.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-80-00-340-061

(14) Do these steps to add tabs:

(a) Obtain tape, G51875, and cut tape as needed.

(b) Install tape, G51875, where applicable.

SUBTASK 25-80-00-340-062

(15) Do these steps to attach or detach bay blanket to or from capstrip.

(a) Attach bay blanket to capstrip using tape, G51607.

(b) Cut the heat seal as needed to remove capstrip from bay blanket.

SUBTASK 25-80-00-340-039

(16) To add drain holes to the insulation blanket, cut 0.5 in. (12.7 mm) diameter drain holes at the bottom edge of the blanket on the inboard side at 2 in. (51 mm) intervals, where applicable.

SUBTASK 25-80-00-340-040

(17) Add this part information on the inboard side of the completed insulation blanket cover:

(a) Part Number.

(b) Supplier Name.

(c) Date of Manufacture.

SUBTASK 25-80-00-340-041


CAUTION

DO NOT COMPRESS THE INSULATION BLANKET BY MORE THAN 50 PERCENT. THIS DECREASES THE THERMAL AND ACOUSTIC PROPERTIES. IF YOU COMPRESS IT TOO MUCH, DAMAGE TO THE INSULATION BLANKET WILL OCCUR.


(18) Put the insulation blanket in a neat stack on a shelf or in a bag for shipping.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

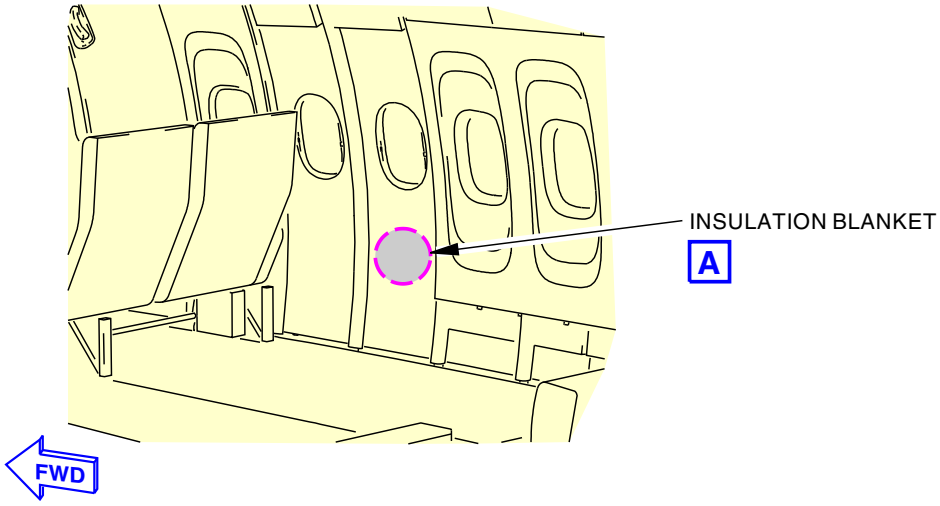

**PASSENGER COMPARTMENT SIDEWALL
(LINER REMOVED)**

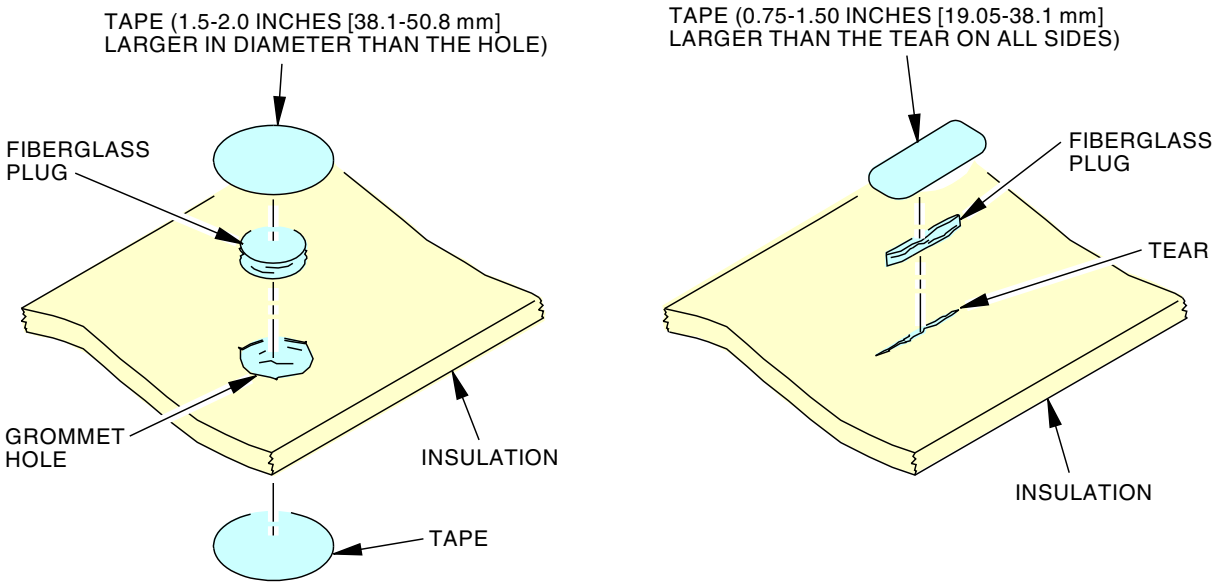


**INSULATION BLANKET REPAIR
(EXAMPLE)**

A


2412046 S00061529787_V2

**Insulation Blanket Repair
Figure 801/25-80-00-990-805 (Sheet 1 of 2)**


ECCN 9E991 BOEING PROPRIETARY - See title page for details

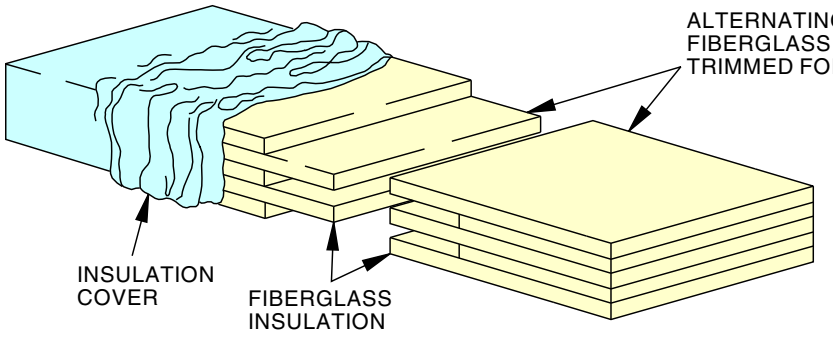

PROCEDURE TO INTERLEAVE FIBERGLASS INSULATION BATTING

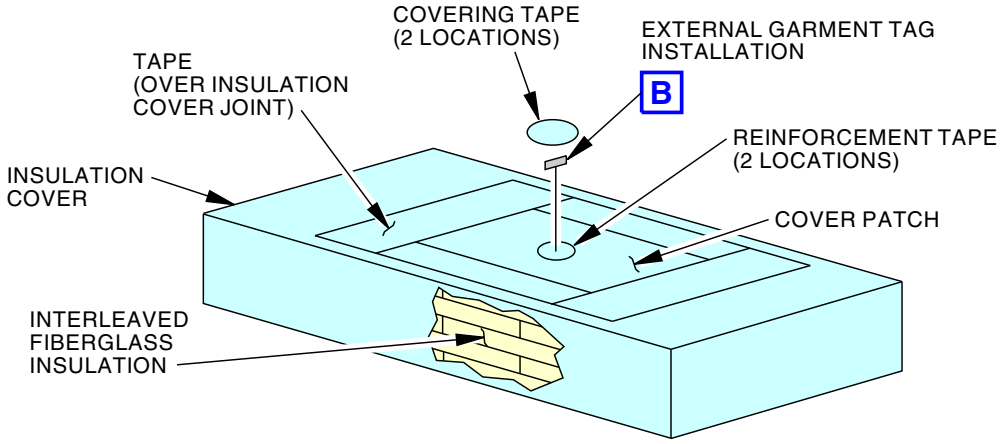


ATTACHMENT OF INTERLEAVED PARTS

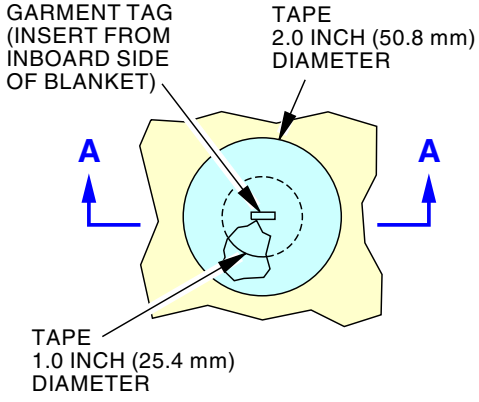

EXTERNAL GARMENT TAG INSTALLATION (EXAMPLE)


B

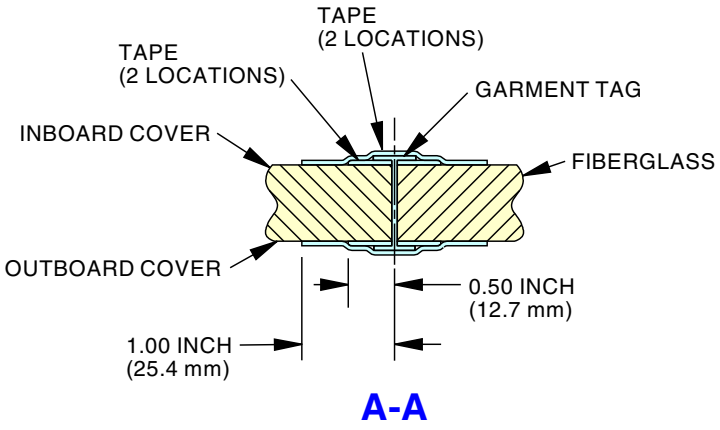


2412047 S00061529788_V2

Insulation Blanket Repair
Figure 801/25-80-00-990-805 (Sheet 2 of 2)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

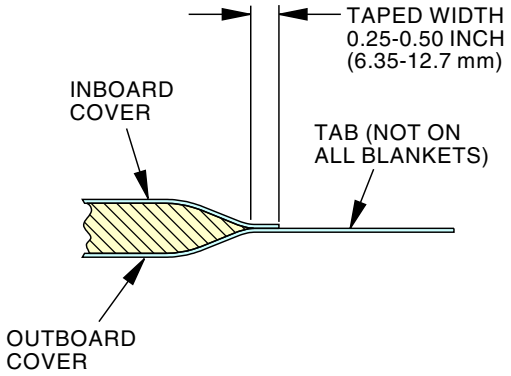

**KNIFE EDGE, HEAT SEALED
(EXAMPLE)**

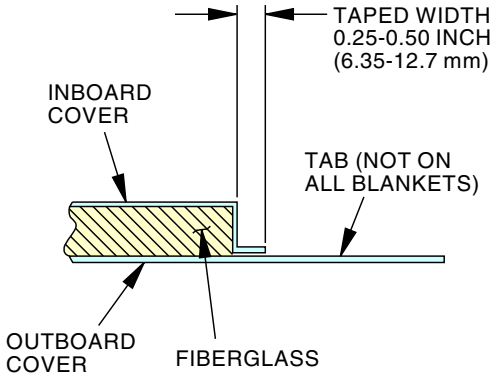

**BOX EDGE, HEAT SEALED
(EXAMPLE)**

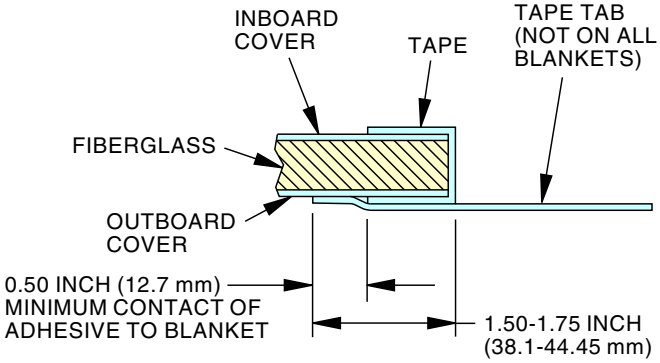


**BOX EDGE, TAPED
(EXAMPLE)**


2412048 S00061529789_V1

**Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 1 of 10)**


ECCN 9E991 BOEING PROPRIETARY - See title page for details

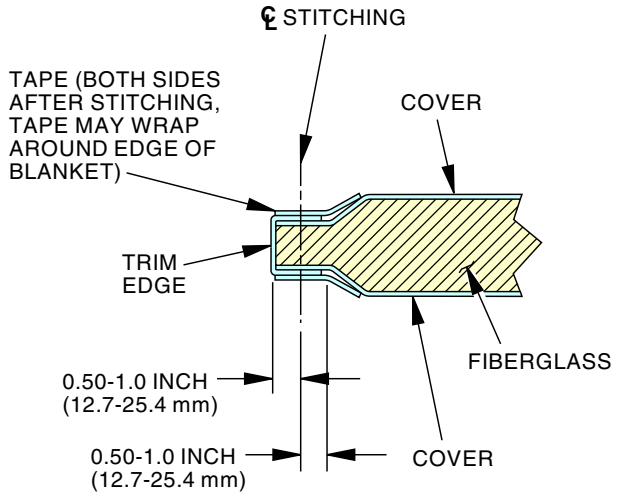


EDGE BINDING WITHOUT A TAB, SEWN EDGE

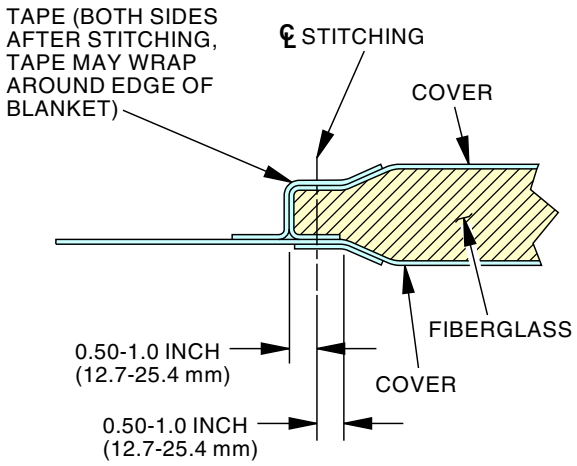

EDGE BINDING WITH A TAB, SEWN EDGE

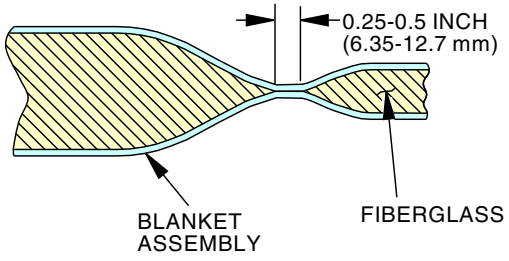

HEATSEAL SEAM LINE (EXAMPLE)

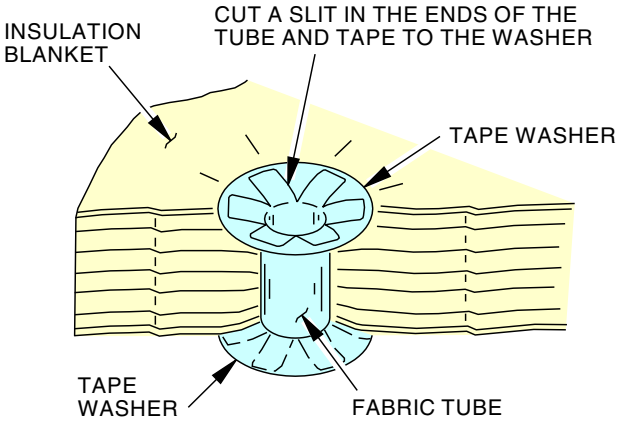


GROMMET INSTALLATION ON INSULATION BLANKETS


2412049 S00061529790_V2

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 2 of 10)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

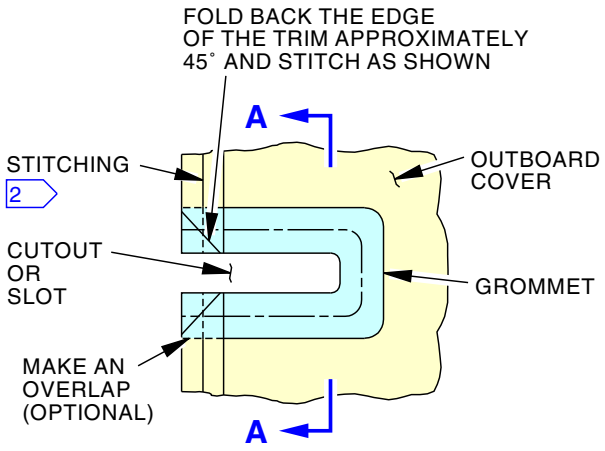

TRIM EDGE STITCHED CUTOUT OR SLOT

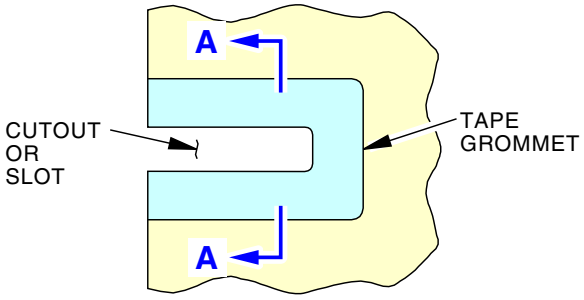

TRIM EDGE TAPED CUTOUT OR SLOT 3

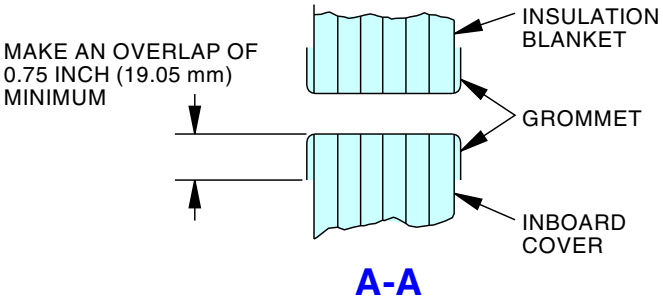

A-A

NOTE:


2 USE KEVLAR SEWING THREAD TO MAKE 5 ±1 STITCHES FOR EACH INCH

3 USE TAPE TO MAKE GROMMET


2412050 S00061529791_V2

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 3 of 10)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

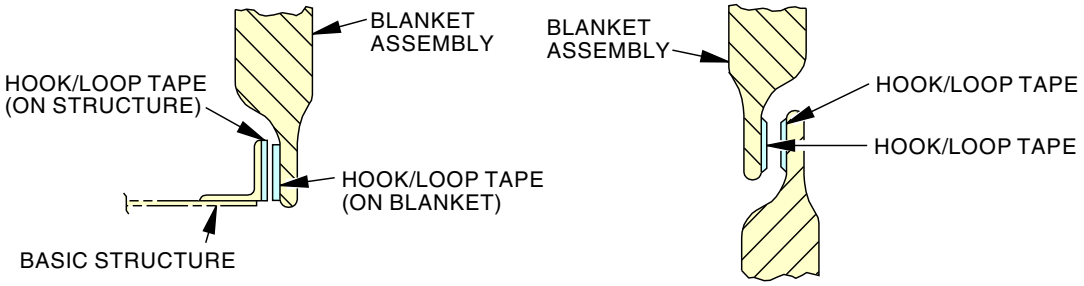

EXAMPLE PROCEDURE TO ATTACH THE BLANKET ASSEMBLIES TO THE AIRPLANE STRUCTURE OR TO OTHER BLANKET ASSEMBLIES WITH HOOK/LOOP TAPE

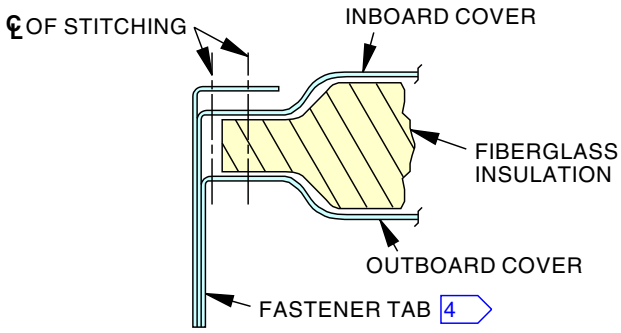

TRIM-EDGE WITH A TAB

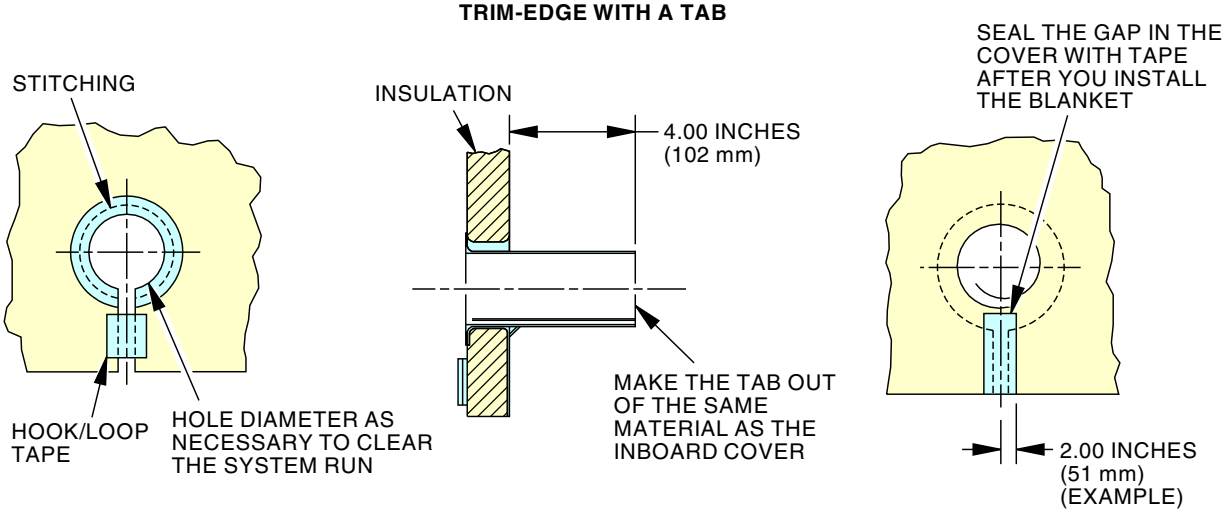

BLANKET OPENINGS FOR SYSTEM (TUBING, ETC)


NOTE:

4 MAKE THE FASTENER TAB FROM THE INBOARD AND OUTBOARD COVER, PLUS ONE LAYER OF COVER FABRIC.


2412051 S00061529792_V2

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 4 of 10)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

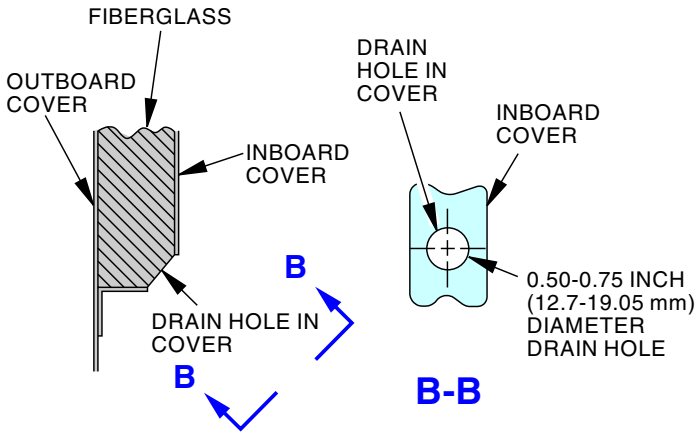


BOX EDGE DRAIN (EXAMPLE)

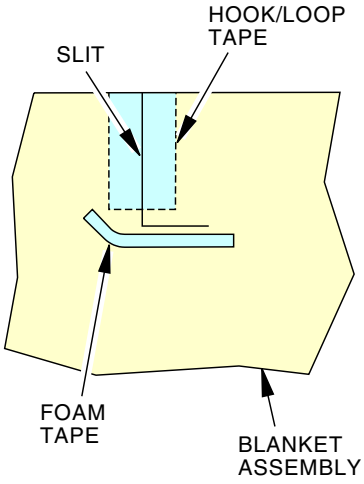


FOAM TAPE WATER DIVERTER (FOAM TAPE LOCATED ON OUTBOARD SIDE OF CAPSTRIP) (EXAMPLE)

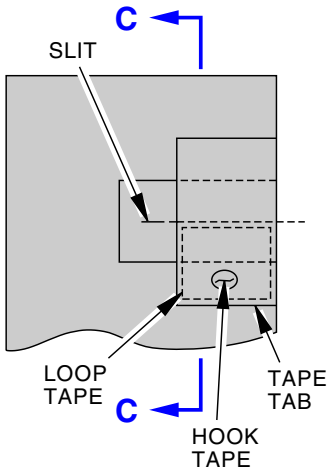

CLOSURE FOR SLITS (EXAMPLE)

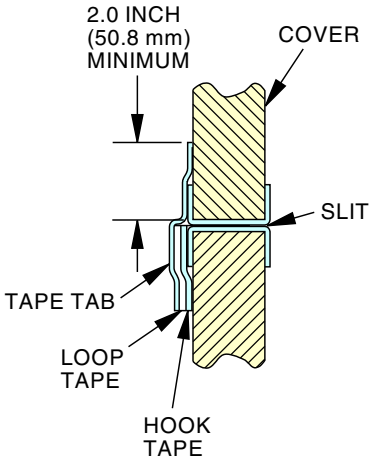

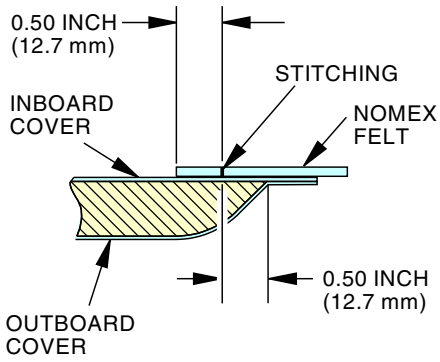


NOMEX ATTACHMENT (EXAMPLE)


2412052 S00061529793_V2

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 5 of 10)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

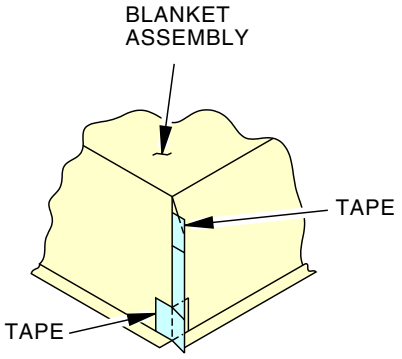

REINFORCED CORNER OF BOXED BLANKET (EXAMPLE)

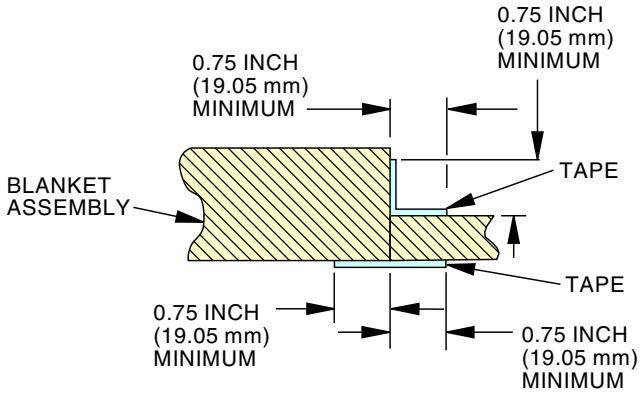

BLANKET ATTACHMENT (EXAMPLE)

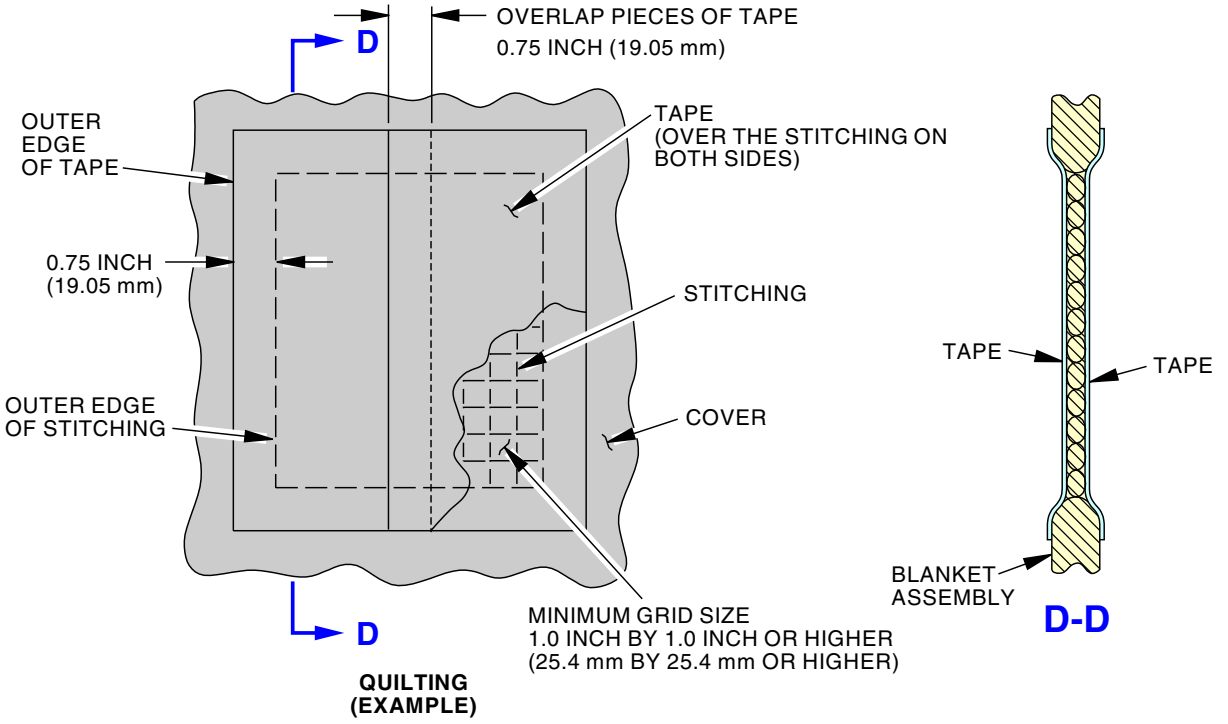


QUILTING (EXAMPLE)


2412053 S00061529794_V2

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 6 of 10)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

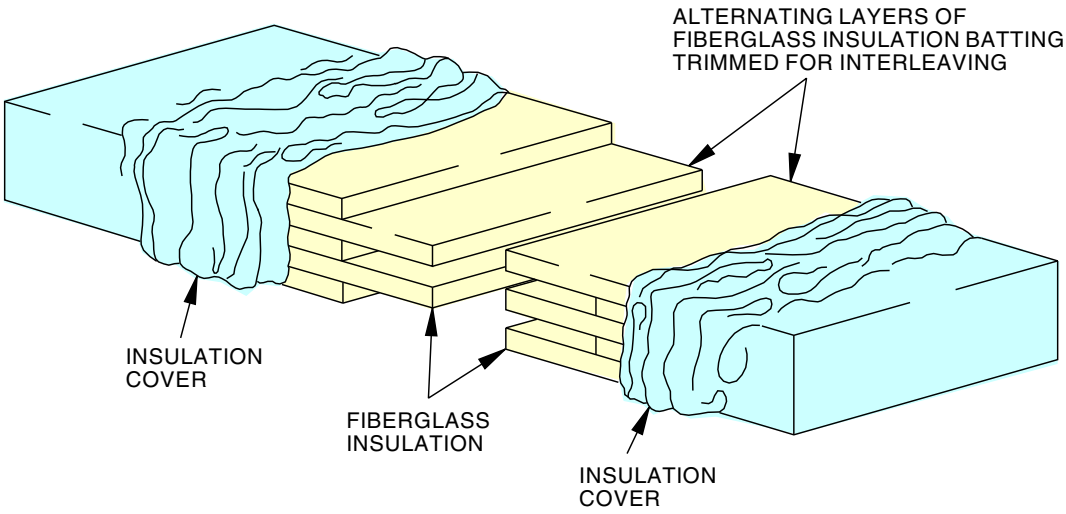

PROCEDURE TO INTERLEAVE FIBERGLASS INSULATION BATTING

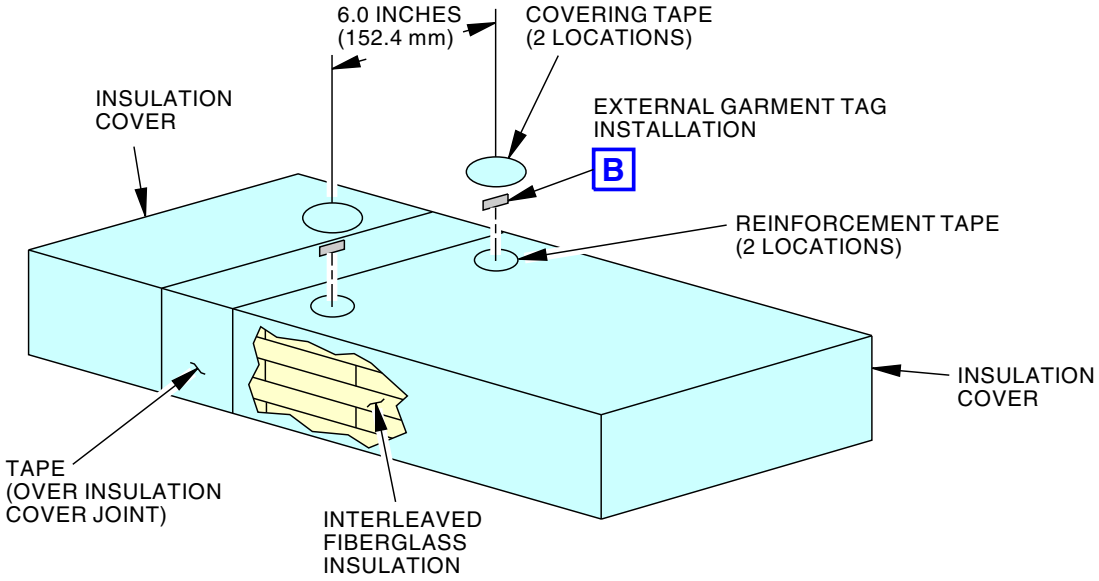


ATTACHMENT OF INTERLEAVED PARTS

2412054 S00061529795_V2


Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 7 of 10)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

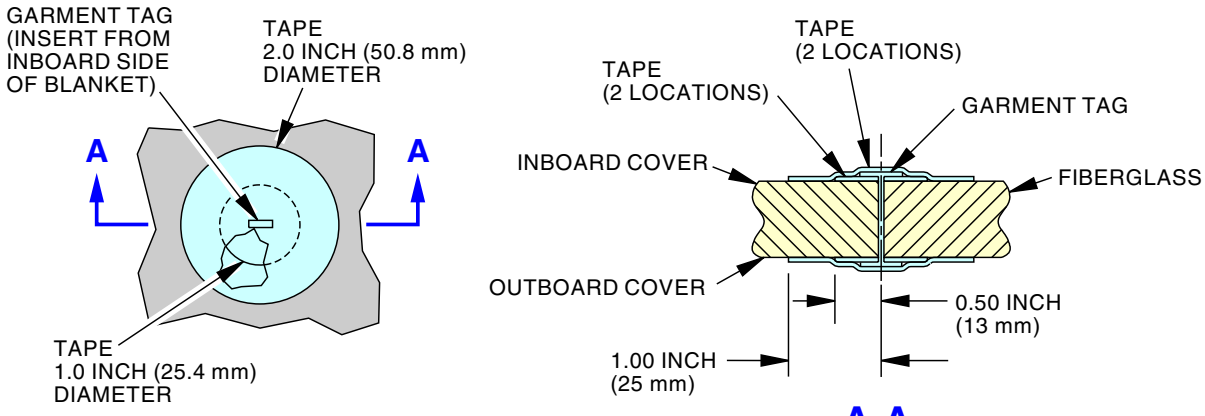

EXTERNAL GARMENT TAG INSTALLATION (EXAMPLE)

A

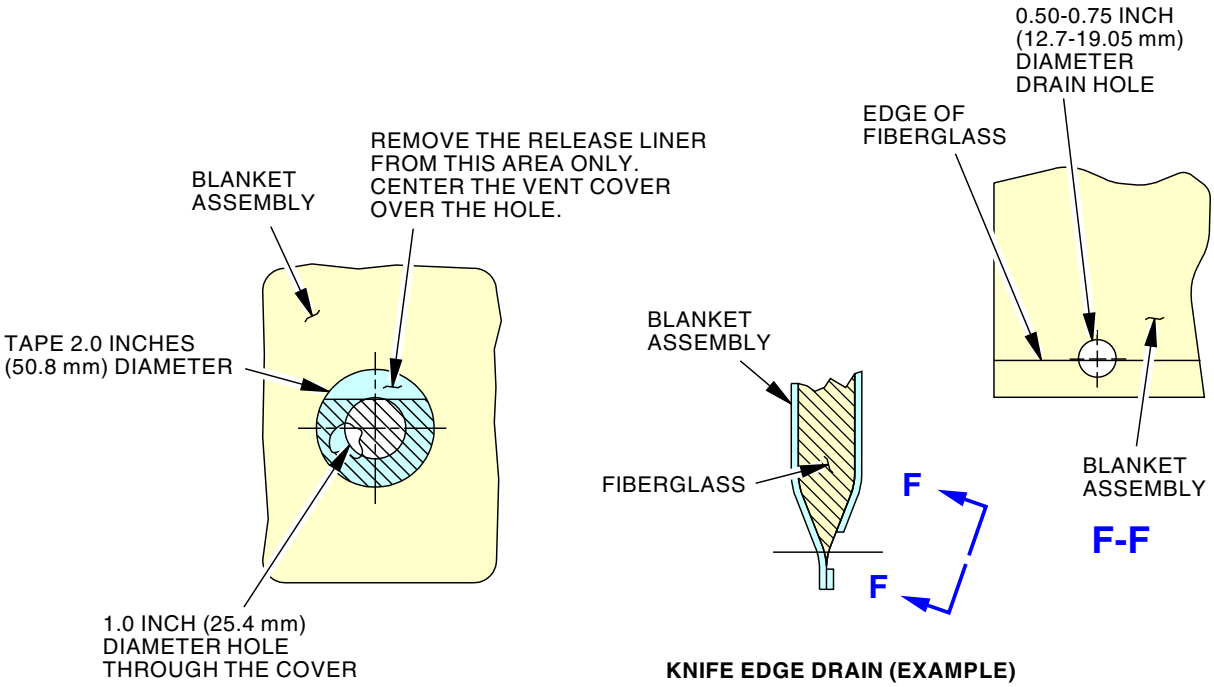


VENT INSTALLATION (EXAMPLE)

KNIFE EDGE DRAIN (EXAMPLE)


2412055 S00061529796_V2

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 8 of 10)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

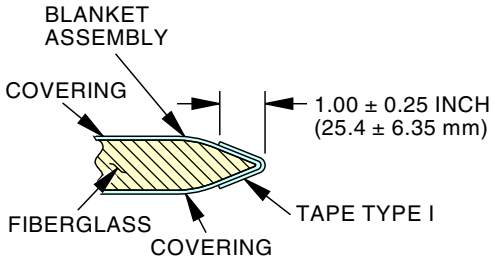


KNIFE EDGE, TAPED (EXAMPLE)

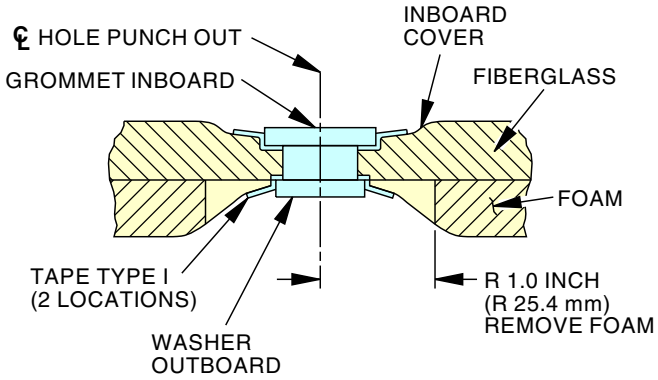

METAL GROMMET AND WASHER INSTALLATION (FOAM LAYER SHOWN, OUTBOARD SIDE) (EXAMPLE)

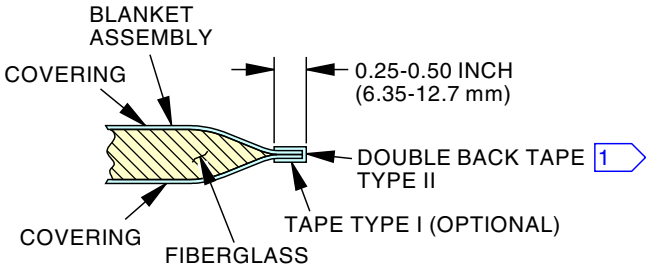

KNIFE EDGE, TAPED (EXAMPLE)

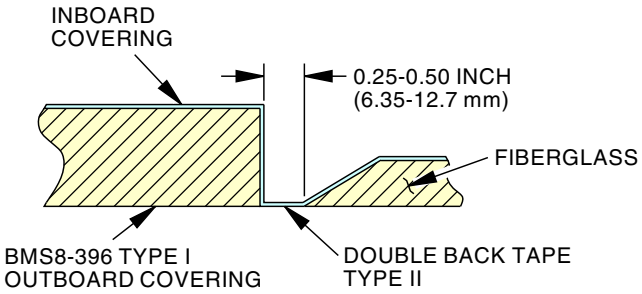

FIRE RESISTANT BARRIER COVER SEAM WITH TAPE (BOX EDGE BLANKET, MORE THAN 2 INCHES THICK) (EXAMPLE)


NOTE:

1 USE DOUBLE BACK TAPE TO ATTACH INBOARD AND OUTBOARD COVER TOGETHER


2412056 S00061529797_V1

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 9 of 10)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

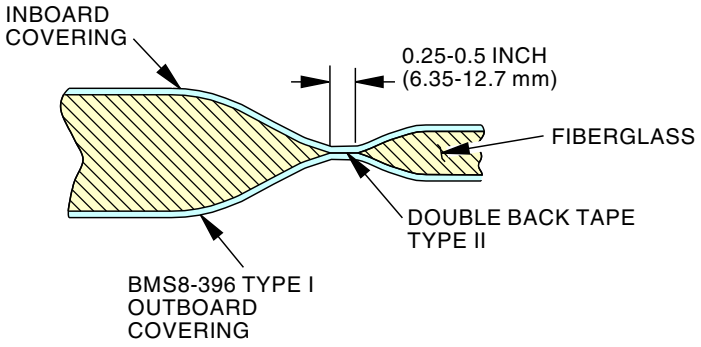

FIRE RESISTANT BARRIER COVER SEAM WITH TAPE (KNIFE EDGE BLANKET, 2 INCHES THICK OR LESS) (EXAMPLE)

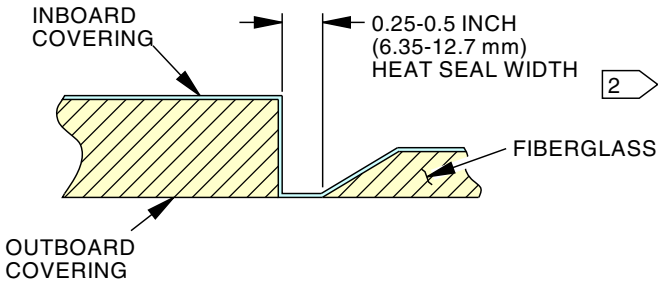

HEAT SEAL SEAM LINE (EXAMPLE)

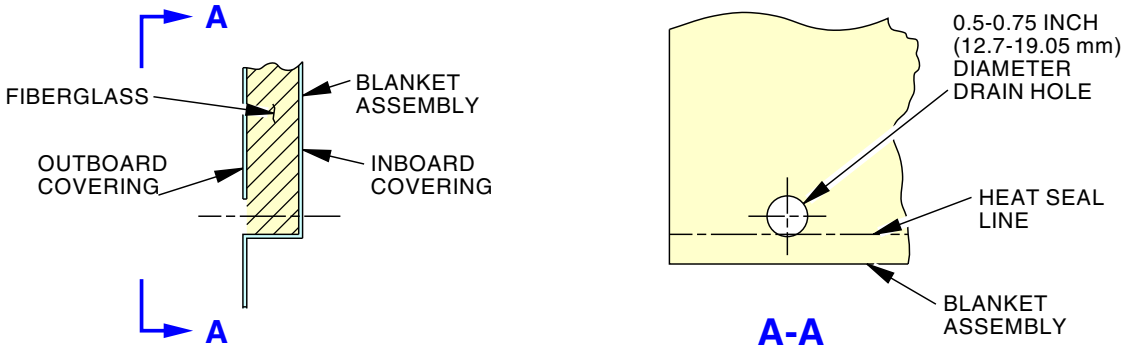

BOX EDGE DRAIN (OUTBOARD SIDE) (EXAMPLE)

NOTE:

2 USE ONLY THERMAL HEAT SEAL FOR FIRE RESISTANT BARRIER COVERING (BMS8-396).

2412057 S00061529798_V1

Insulation Blanket Manufacturing
Figure 802/25-80-00-990-806 (Sheet 10 of 10)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-80-00-340-805

7. Repair of Cargo Door Insulation Blankets

A. General

(1) This procedure gives instructions to make repairs to the cargo door insulation blankets.

(2) The area to be repair must be less than 25 percent of the total area of the inboard cover material.

(3) Make sure the patch overlaps the joint by a minimum of 1.0 inch (25 mm) on all sides

B. References

Reference	Title
25-80-00-000-801	Insulation Blanket Removal (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
SOPM 20-41-05	Application of Corrosion Inhibiting Compounds

C. Tools/Equipment

Reference	Description
STD-126	Brush - Soft-bristle, Non-metallic
STD-6636	Vacuum Cleaner - wet and dry type

D. Consumable Materials

Reference	Description	Specification
A00153	Adhesive - Low Odor, Synthetic Rubber Cement	BMS5-30
G50328	Fabric - Advance Polymer Coated, Flame Propagation Resistant	BMS8-370
G50381	Abrasive - Aluminum Oxide Paper, 180 Grit	

E. Location Zones

Zone	Area
100	Lower Half of Fuselage

F. Repairs To BMS8-343 Type III

SUBTASK 25-80-00-212-003

(1) Visually check the amount of damage to the insulation blanket.

(a) If the amount of damage is more than 25 percent of the total area on either the front side or back side of the insulation blanket, replace the insulation blanket. Do these tasks:

1) Insulation Blanket Removal, TASK 25-80-00-000-801

2) Insulation Blanket Installation, TASK 25-80-00-400-801

(b) If the amount of damage is less than 25 percent of the total area on either the front side or back side of the insulation blanket, continue.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-80-00-160-009

WARNING DO NOT USE DETERGENTS OR SOLVENTS TO CLEAN THE INSULATION BLANKET. IT CAN REMOVE FLAME RETARDANTS AND CAUSE FLAMMABLE RESIDUES ON THE INSULATION BLANKET WHICH INCREASES THE RISK OF FIRE. THIS CAN CAUSE INJURIES TO PERSONNEL, AND DAMAGE TO EQUIPMENT.

(2) If there is Corrosion Inhibiting Compound (CIC) contamination, oily or waxy substances or other fluids (which typically changes the color and appearance of the insulation blanket cover), clean the insulation blankets with correct solvents, refer to SOPM 20-41-05.

NOTE: The CIC contamination can only be cleaned with solvents referenced in SOPM 20-41-05.

(3) If there is dust, lint or other loose debris on the insulation blanket, use a vacuum cleaner, STD-6636, or a soft-bristle non-metallic brush, STD-126, to remove the contamination.

SUBTASK 25-80-00-160-010

(4) Make sure that the repair area is clean and dry.

SUBTASK 25-80-00-340-042

(5) Do these steps if there is damage on the insulation blanket cover:

(a) Identify the perimeter around the damaged area on the insulation blanket for a cover patch area that is larger than the damaged area by 1 in. (25 mm) to 1.5 in. (38.1 mm) on all sides.

(b) If the cover patch area that is identified on the damaged insulation blanket can fit into a 3 in. (76 mm) by 3 in. (76 mm) square, do these steps:

1) Make a cover patch from fabric, G50328, that is larger than the damaged area by 1 in. (25 mm) to 1.5 in. (38.1 mm) on all sides.

a) Make sure the corners on the cover patch are rounded.

2) Lightly abrade the entire adhesive side of the cover patch and the area to be covered by the cover patch, with 180 grit abrasive paper, G50381, or finer paper to remove any gloss.

3) Apply adhesive, A00153, on the entire bonding surface of the cover patch area or insulation blanket cover.

4) Put the adhesive side of the cover patch over the damaged area of the insulation blanket cover.

5) Make sure there is an overlap of 1 in. (25 mm) to 1.5 in. (38.1 mm) between the damaged area and the edge of the cover patch on all sides.

6) Wipe off any adhesive, A00153, that is not necessary.

7) Push on the cover patch to make sure there is a good bond with the insulation blanket cover.

(c) If the cover patch area that is identified on the damaged insulation blanket is larger than a 3 in. (76 mm) by 3 in. (76 mm) square repeat the steps in (b) except that adhesive, A00153, shall be applied up to 1 in. (25 mm) wide around the periphery of the patch.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 25-80-00-300-803

8. Insulation Blanket Manufacturing (per Universal Blanket Template)

(Figure 803)

A. General

(1) This procedure has instructions to make a new insulation blanket per a 'Universal Blanket' template.

NOTE: Some universal blankets may have longer or extra stitches than original blanket. This may decrease the thermal and noise protection in the stitched area due to extra compression than needed.

NOTE: Some blankets will have quilting. Stitching on the universal blankets CAN be used instead of quilting.

NOTE: Some side wall blankets will have garment tags over the window cutout. Stitching on the universal blanket CAN be used instead of garment tags.

(2) The damaged insulation blanket can be used as a template to make a new insulation blanket.

(3) Figure 803 shows all the areas where universal blanket templates are available.

NOTE: Blankets in areas of airplane where Universal Blanket templates are not available may be fabricated per the steps in Insulation Blanket Manufacturing (per Production Part Specifications), TASK 25-80-00-300-802.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-11573	Installation Tool - Garment Tag Part #: 10651-0 Supplier: 16956

C. Consumable Materials

Reference	Description	Specification
G50019	Tape - Flexible Foam Sound Damping And Sealing Tape	BMS8-283 Type I
G50341	Thread - Kevlar Sewing (T40), Strip Machine Thread (T60)	A-A-55220 Bonded Tex 40, Tex 60
G50442	Fastener - Garment Tag, Nylon (Avery Dennison Standard T-End Swiftach)	
G50789	Tape - Adhesive Insulation Blanket	BMS5-157 Type I Class 2 Grade C Composition MPEEK
G51205	Tape - Advanced Insulation	BMS5-157 Type I Class 3 Grade E Composition MPEEK
G51436	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type 1
G51533	Cover - Insulation, Ethylene CholroTriFluoroEthylene (ECTFE) film	BMS8-380 Type 4 Class 2
G51549	Tape - Hook/Loop Fastener, Flame Propagation Resistant	BMS8-372 Type III

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G51553	Insulation - Flame Penetration Resistant	BMS8-396, Type 2
G51600	Cover - Insulation, Polyetheretherketone (PEEK) - Flame Propagation Resistant	BMS8-380 Type 3 Class 2
G51607	Tape - Advanced Insulation Blanket	BMS5-157 Type I Class 3 Grade E
G51608	Tape - Advanced Insulation Blanket	BMS5-157 Type II Class 2 Grade C
G51609	Tape - Advanced Insulation Blanket	BMS5-157 Type II Class 3 Grade E
G51610	Tape - Advanced Insulation Blanket	BMS5-157 Type III Class 2 Grade C
G51611	Tape - Advanced Insulation Blanket	BMS5-157 Type III Class 3 Grade E
G51873	Tape Grommet - Advanced Insulation Blanket	BMS5-157 Class 2 Grade E
G51874	Tape Grommet - Advanced Insulation Blanket	BMS5-157 Class 3 Grade E
G51875	Tape - Advanced Insulation Blanket, 8 Inch Width, 2 Inch Edge, 6 Inch Tab	BMS5-157 Type IV Class 3

D. Location Zones

Zone	Area
100	Lower Half of Fuselage
200	Upper Half of Fuselage

E. Make a New Insulation Blanket Using an Universal Blanket

SUBTASK 25-80-00-340-045

(1) Do these steps to install external garment tag fastener, G50442, to connect the layers of insulation blanket materials:

NOTE: The garment tag is a commercially available plastic fastener that is stapled through all layers of the insulation blanket and fastened to keep the fiberglass batting inside the insulation blanket in the same position in relation to the blanket covers.

(a) Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157) with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).

(b) Use tape, G51205, or Class 3 Grade E equivalent (BMS5-157) with insulation cover, G51533 (BMS8-380, ECTFE).

(c) Cut a 1.00 in. (25.40 mm) diameter circle of tape for use as reinforcement tape.

(d) Put the reinforcement tape over the area where the external garment tag fastener, G50442, is to be stapled through on both sides of the blanket.

(e) Use the garment tag installer, COM-11573, to staple the external garment tag fastener, G50442, through all layers of the insulation blanket, which includes the reinforcement tapes.

1) Make sure to use a garment tag fastener, G50442, of the correct length in relation to the nominal thickness of the insulation blanket (Table 802).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Table 802/25-80-00-993-804 Insulation Blanket Garment Tag Sizes

Nominal Thickess of Insulation Blanket	Garment Tag Length
NOTE: This is the total nominal thickness of all layers of raw material used in blankets.	
4.01 in. (101.85 mm) to 7.01 in. (178.05 mm)	3.00 in. (76.20 mm)
2.01 in. (51.05 mm) to 4.00 in. (101.60 mm)	2.00 in. (50.80 mm)
1.26 in. (32.00 mm) to 2.00 in. (50.80 mm)	1.00 in. (25.40 mm)
0.51 in. (12.95 mm) to 1.25 in. (31.75 mm)	0.50 in. (12.70 mm)
0.38 in. (9.65 mm) to 0.50 in. (12.70 mm)	0.25 in. (6.35 mm)

(f) Cut a 2.00 in. (50.80 mm) diameter circle of tape for use as covering tape.

(g) Put the covering tape over the external garment tag fastener, G50442, and reinforcement tape, onto the insulation cover on both sides of the blanket.

(h) Push on the tape to make sure there is a good bond with the blanket cover.

SUBTASK 25-80-00-340-046

(2) Do the applicable steps to close the edges and cutouts of the insulation blanket:

(a) Method 1: Sew the edges.

1) Fold the cover fabric over the edge of the blanket or wrap a strip of cover fabric over the edge of the blanket as applicable to bind the edge on the blanket.

2) Stitch the edge with kevlar sewing thread, G50341, at 4 to 6 stitches per each inch.

3) Make sure that the stitches go through the edge binding on both sides of the insulation blanket.

4) Seal the stitching on the blanket with the applicable tape.

- Use tape, G50789, or Class 2 Grade C equivalent (BMS5-157) with insulation cover, G51600 (BMS8-380, PEEK), and insulation, G51553 (BMS8-396).
- Use tape, G51205, or Class 3 Grade E equivalent (BMS5-157) with insulation cover, G51533 (BMS8-380, ECTFE).

(b) Method 2: Tape the edges.

1) Use the applicable tape for insulation that is sufficiently wide to overlap the top and bottom of the blanket by a minimum of 0.75 in. (19.05 mm).

- Use tape, G51610, or Class 2 Grade C equivalent (BMS5-157) with insulation cover, G51600 (BMS8-380, PEEK).
- Use tape, G51611, or Class 3 Grade E equivalent (BMS5-157) with insulation cover, G51533 (BMS8-380, ECTFE).

(c) Method 3: Heat-seal the edges.

NOTE: Not all types of fabric can be heat sealed. Fabric that can be heat sealed may be heavier than fabric that cannot be heat sealed. Make sure you use the correct type of fabric. Blanket edges can be heat sealed using a thermal or ultrasonic equipment.

1) Hold the top and bottom covers together and heat-seal the edges of the blanket.

2) The width of the heat seal must be 0.25 in. (6.35 mm) to 0.5 in. (12.7 mm).

SUBTASK 25-80-00-340-047

(3) Install hook/loop where applicable.

- Only use tape, G51549, with insulation cover, G51533.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

- Only use tape, G51436 with insulation cover, G51600.

SUBTASK 25-80-00-340-048

(4) Install water diverter on the insulation blanket with tape, G50019 (BMS8-283), where applicable.

SUBTASK 25-80-00-340-065

(5) Do these steps to add provisions in the blanket:

(a) Overlay removed damaged blanket onto universal blanket or measure provisions from template and transfer onto universal blanket.

- Only use tape, G51610, or tape, G51873, with insulation cover, G51600.
- Only use tape, G51874, or tape, G51611, with insulation cover, G51533.

(b) Mark provisions onto new blanket.

(c) Cut slits through fiberglass batting and covers.

(d) Use the tapes to seal fiberglass and reinforce covers.

(e) Use tape, G51610, or tape, G51611, to continue sealing the split provision.

NOTE: Tape should be at least 1 in. (2.54 cm) adhered to inboard and outboard covers along the slit.

(f) If void exist, tape over it with 1 in. (2.54 cm) or 2 in. (5.08 cm) wide strip of tape, G51611, or tape, G51610.

(g) For end of new slit, cut tape, G51611, or tape, G51610, in half to be used.

(h) For inside corners, cut tape, G51611, or tape, G51610, into square or rectangle so that each corner is equal in size.

1) Seal cover and batting similar to straight slit.

(i) For outside corners, use tape, G51610, or tape, G51611, to fold around the corners.

SUBTASK 25-80-00-340-066

(6) Do these steps to fill an unused cutout or notch:

(a) Obtain same batting used in fabrication of blanket.

(b) Obtain tape, that is up to 6 in. (15.24 cm) wide.

- Use tape, G50789, or Class 2 Grade C equivalent, with insulation cover, G51600.
- Use tape, G51607, or Class 3 Grade E equivalent, with insulation cover, G51533.

(c) Remove foam tape and hook and loops tapes of applicable unused area.

(d) Cut batting to size of cutout that is being filled in.

(e) Cut and place tape, at least 1 in. (2.54 cm) past area all around the outboard side and extending past heat-sealed edge.

(f) Place batting into cutout or notch area.

(g) Cut and place tape at least 1 in. (2.54 cm) past area all around the inboard side and extending past heat-sealed edge.

(h) Press tapes together to create a new edge and trim edge evenly with existing edge.

SUBTASK 25-80-00-340-067

(7) Do these steps to add tab:

(a) Obtain tape, G51875, and cut tape as needed.

(b) Install tape, G51875, where applicable.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 25-80-00-340-068

(8) Do these steps to attach bay blanket to capstrip:

(a) Attach bay blanket to capstrip using tape.

- Use tape, G50789, or Class 2 Grade C equivalent, with insulation cover, G51600.
- Use tape, G51607, or Class 3 Grade E equivalent, with insulation cover, G51533

SUBTASK 25-80-00-340-069

(9) Do these steps to add a window cutout:

(a) Overlay removed blanket onto new blanket to measure or mark the window cutout.

NOTE: There is a dash line of a reference window cutout to show its actual size. This dash line may not be in the correct position. Window cutouts may be in different location for different blankets. Typically shifted 1 in. (2.54 cm) to 2 in. (5.08 cm) sideways.

(b) Cut along the marked cutout through fiberglass batting and covers.

(c) Apply 4 in. (10.16 cm) tape along the edges to seal the fiberglass and reinforce the covers.

NOTE: The Blanket will be compressed along the edge up to 2 in. (5.08 cm), with a minimum of 1 in. (2.54 cm) of adhesive on both inboard and outboard.

- Use tape, G51873, for blankets with insulation cover, G51600.
- Use tape, G51874, for blankets with insulation cover, G51533.

(d) For corners, cut the 1 in. (2.54 cm) adhesive edges approximately 1 in. (2.54 cm) apart. Peel and stick slightly overlapping until the corner is covered.

SUBTASK 25-80-00-340-070

(10) Add tapes to attach airdam to the blanket as necessary.

(a) Use tape, G51608, for blankets with insulation cover, G51600.

(b) Use tape, G51609, for blankets with insulation cover, G51533.

SUBTASK 25-80-00-340-052

(11) To add drain holes to the insulation blanket, cut 0.5 in. (12.7 mm) diameter drain holes at the bottom edge of the blanket on the inboard side at 2 in. (51 mm) intervals, where applicable.

SUBTASK 25-80-00-340-053

(12) Add these part information on the inboard side of the completed insulation blanket cover:

(a) Par Number.

(b) L/I Number.

(c) Supplier Name.

(d) Date of Manufacture.

SUBTASK 25-80-00-340-054


CAUTION

DO NOT COMPRESS THE INSULATION BLANKET BY MORE THAN 50 PERCENT. THIS DECREASES THE THERMAL AND ACOUSTIC PROPERTIES. IF YOU COMPRESS IT TOO MUCH, DAMAGE TO THE INSULATION BLANKET WILL OCCUR.

(13) Put the insulation blanket in a neat stack on a shelf or in a bag for shipping.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

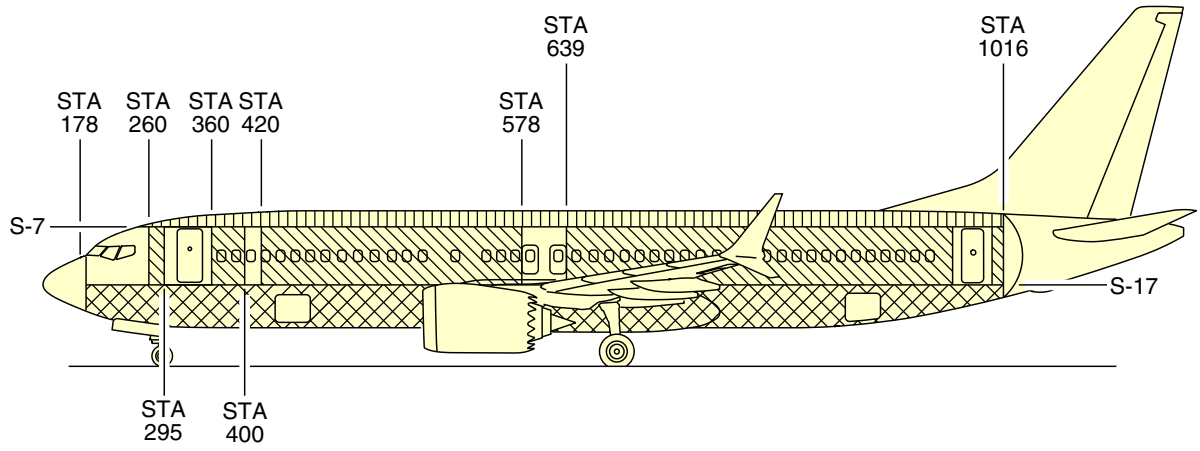

2914017 S0000699307_V2

Universal Blankets
Figure 803/25-80-00-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details