CHAPTER

22

AUTOFLIGHT

CHAPTER 22
AUTOFLIGHT

CH-SE-SU	Schem	Page	Sheet	Date
22-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
22-CONTENTS				
		1		May 15/2024
		2		Dec 24/2024
22-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
22-11-11				
		1	1	May 15/2024
			2	May 15/2024
22-11-12				
		1	1	May 15/2024
			2	May 15/2024
22-11-14				
		1		May 15/2024
22-11-18				
		1		May 15/2024
22-11-31				
		1	1	May 15/2024
			2	May 15/2024
22-11-51				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
			5	May 15/2024
22-11-53				
		1		May 15/2024
22-11-75				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
22-12-31				
		1		May 15/2024
22-12-41				
		1		May 15/2024
22-13-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
22-13-11 (cont)				
		1.1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
22-14-11				
		1	1	May 15/2024
			2	May 15/2024
22-18-11				
		1		May 15/2024
22-23-11				
		1		May 15/2024
22-23-12				
		1		Dec 24/2024
22-31-22				
		1		May 15/2024
22-31-31				
		1		May 15/2024
22-31-41				
		1		May 15/2024
22-31-51				
		1		May 15/2024
22-31-52				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 22
AUTOFLIGHT

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
DIGITAL FLIGHT CONTROL SYSTEM						
DFCS - A AND B FCC POWER AND 26V AC EXCITATION	22-11-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
DFCS - A AND B SYSTEM INTERLOCKS	22-11-12		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
DFCS - INTERSYSTEM SWITCHING	22-11-14		1		May 15/2024	ALL
DFCS INTERSYSTEM SWITCHING - VHF NAV ANTENNAS	22-11-18		1		May 15/2024	ALL
DFCS - A AND B A/P ROLL SENSORS AND ACTUATORS	22-11-31		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
DFCS - DIGITAL BUS INTERFACES - OUTPUT	22-11-51		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
				5	May 15/2024	ALL
DFCS - DIGITAL BUS INTERFACES - DATA LOADER	22-11-53		1		May 15/2024	ALL
DFCS - A AND B OPTION PINS	22-11-75		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
DFCS - A A/P PITCH SENSORS AND ACTUATORS	22-12-31		1		May 15/2024	ALL
DFCS - B A/P PITCH SENSORS AND ACTUATORS	22-12-41		1		May 15/2024	ALL
DFCS - A AND B SPEED AND STABILIZER TRIM	22-13-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
			1.1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL

22-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 22
AUTOFLIGHT

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
DFCS - ANNUNCIATION AND WARNING	22-14-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
DFCS - MACH TRIM	22-18-11		1		May 15/2024	ALL
YAW DAMPER SYSTEM						
YAW DAMPER ENGAGE INTERLOCKS	22-23-11		1		May 15/2024	ALL
YAW DAMPER RUDDER CONTROL	22-23-12		1		Dec 24/2024	ALL
AUTOTHROTTLE SYSTEM						
AUTOTHROTTLE SYSTEM - DIGITAL INPUTS FROM SMYDC'S AND RA'S	22-31-22		1		May 15/2024	ALL
AUTOTHROTTLE SYSTEM - SERVO MOTOR 1	22-31-31		1		May 15/2024	ALL
AUTOTHROTTLE SYSTEM - SERVO MOTOR 2	22-31-41		1		May 15/2024	ALL
AUTOTHROTTLE SYSTEM - ENGAGE/DISENGAGE	22-31-51		1		May 15/2024	ALL
AUTOTHROTTLE SYSTEM - MODE ANNUNCIATION	22-31-52		1		May 15/2024	ALL


ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 22
AUTOFLIGHT

CH-SE-SU	Title
22-31-22	AUTOTHROTTLE SYSTEM - DIGITAL INPUTS FROM SMYDC'S AND RA'S
22-31-51	AUTOTHROTTLE SYSTEM - ENGAGE/DISENGAGE
22-31-52	AUTOTHROTTLE SYSTEM - MODE ANNUNCIATION
22-31-31	AUTOTHROTTLE SYSTEM - SERVO MOTOR 1
22-31-41	AUTOTHROTTLE SYSTEM - SERVO MOTOR 2
22-12-31	DFCS - A A/P PITCH SENSORS AND ACTUATORS
22-11-31	DFCS - A AND B A/P ROLL SENSORS AND ACTUATORS
22-11-11	DFCS - A AND B FCC POWER AND 26V AC EXCITATION
22-11-75	DFCS - A AND B OPTION PINS
22-13-11	DFCS - A AND B SPEED AND STABILIZER TRIM
22-11-12	DFCS - A AND B SYSTEM INTERLOCKS
22-14-11	DFCS - ANNUNCIATION AND WARNING
22-12-41	DFCS - B A/P PITCH SENSORS AND ACTUATORS
22-11-53	DFCS - DIGITAL BUS INTERFACES - DATA LOADER
22-11-51	DFCS - DIGITAL BUS INTERFACES - OUTPUT
22-11-14	DFCS - INTERSYSTEM SWITCHING
22-18-11	DFCS - MACH TRIM
22-11-18	DFCS INTERSYSTEM SWITCHING - VHF NAV ANTENNAS
22-23-11	YAW DAMPER ENGAGE INTERLOCKS
22-23-12	YAW DAMPER RUDDER CONTROL

22-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

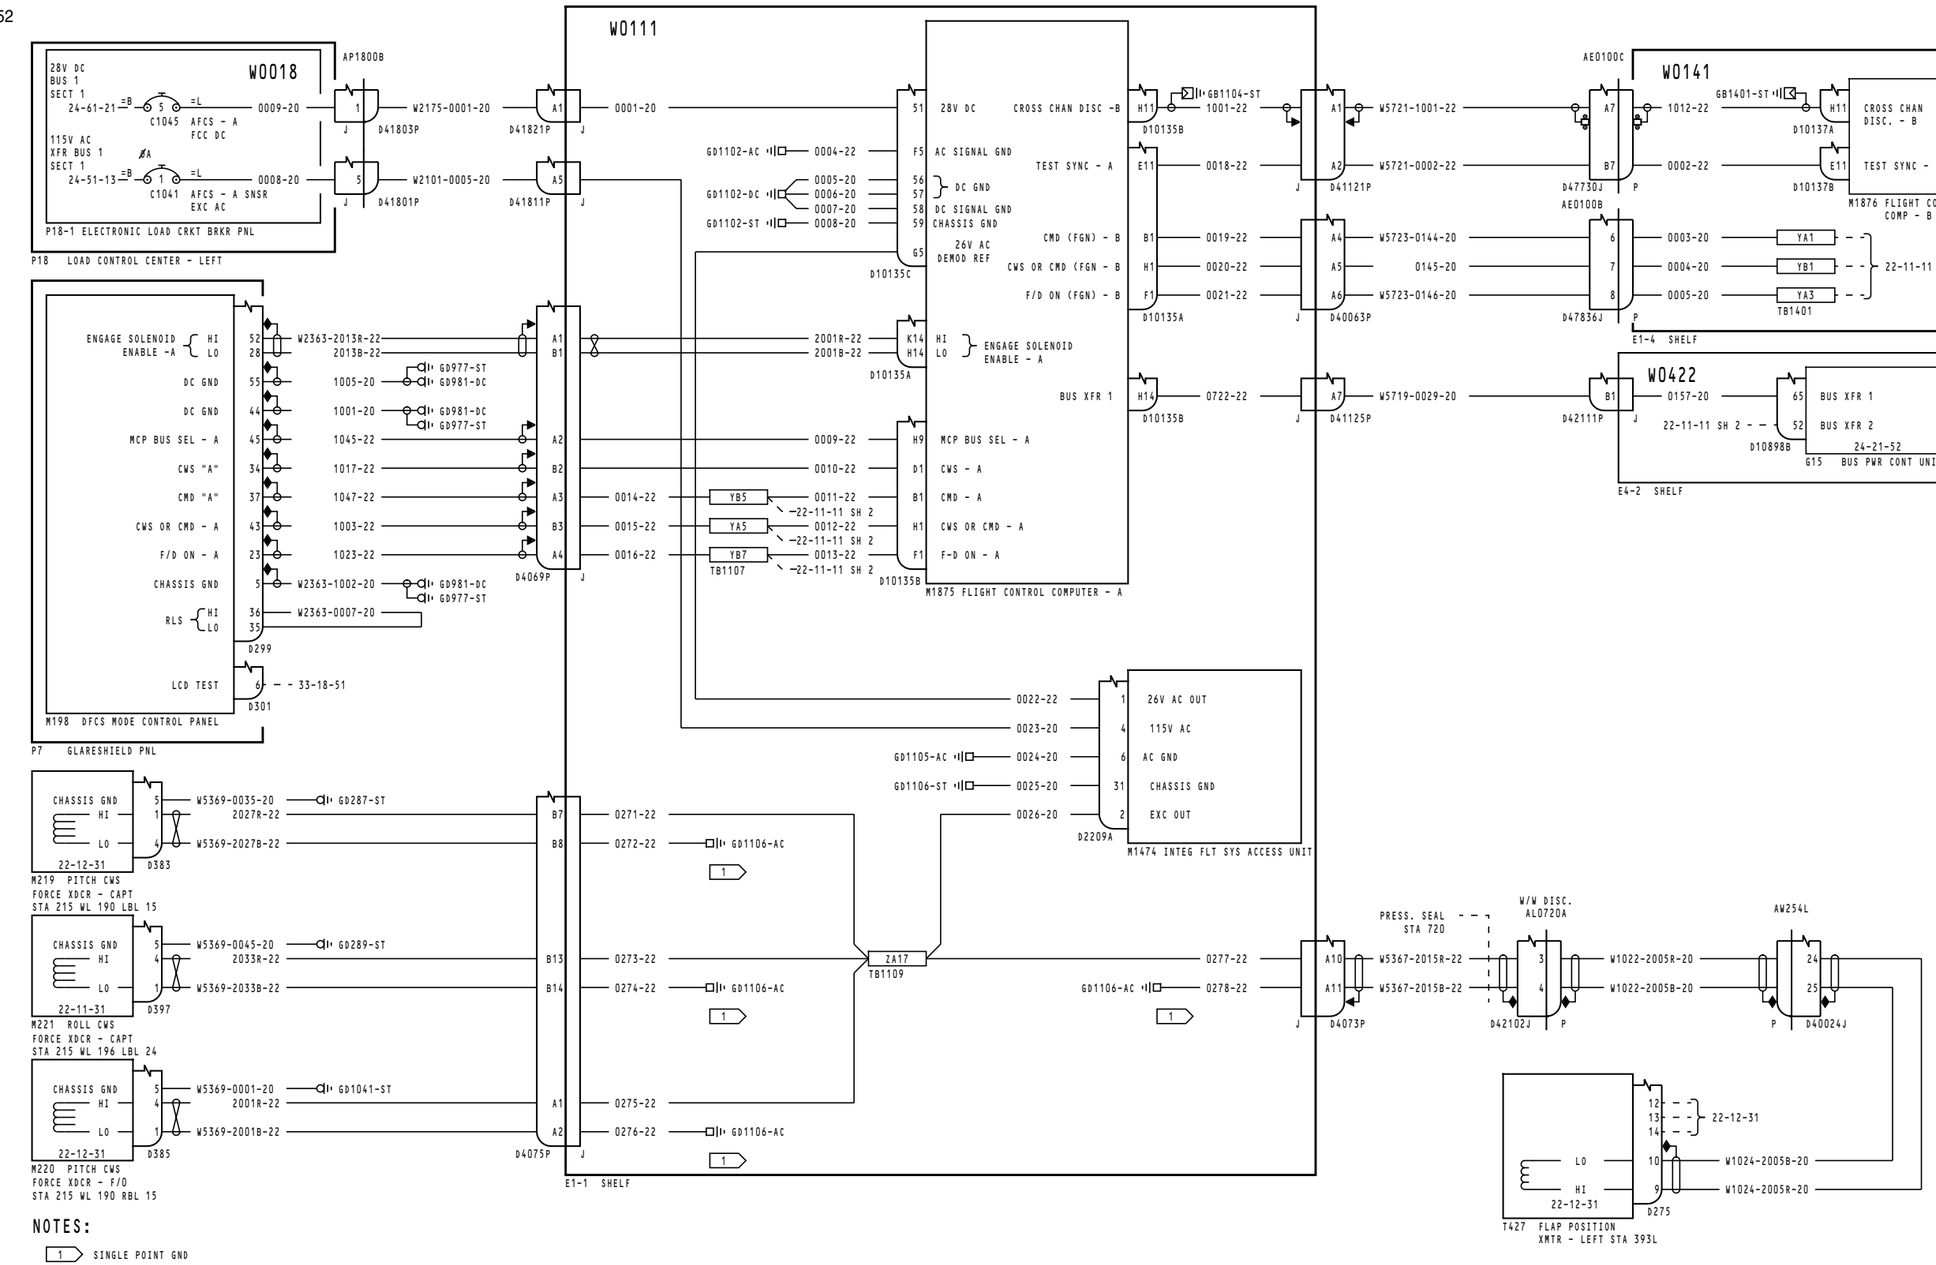


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
57

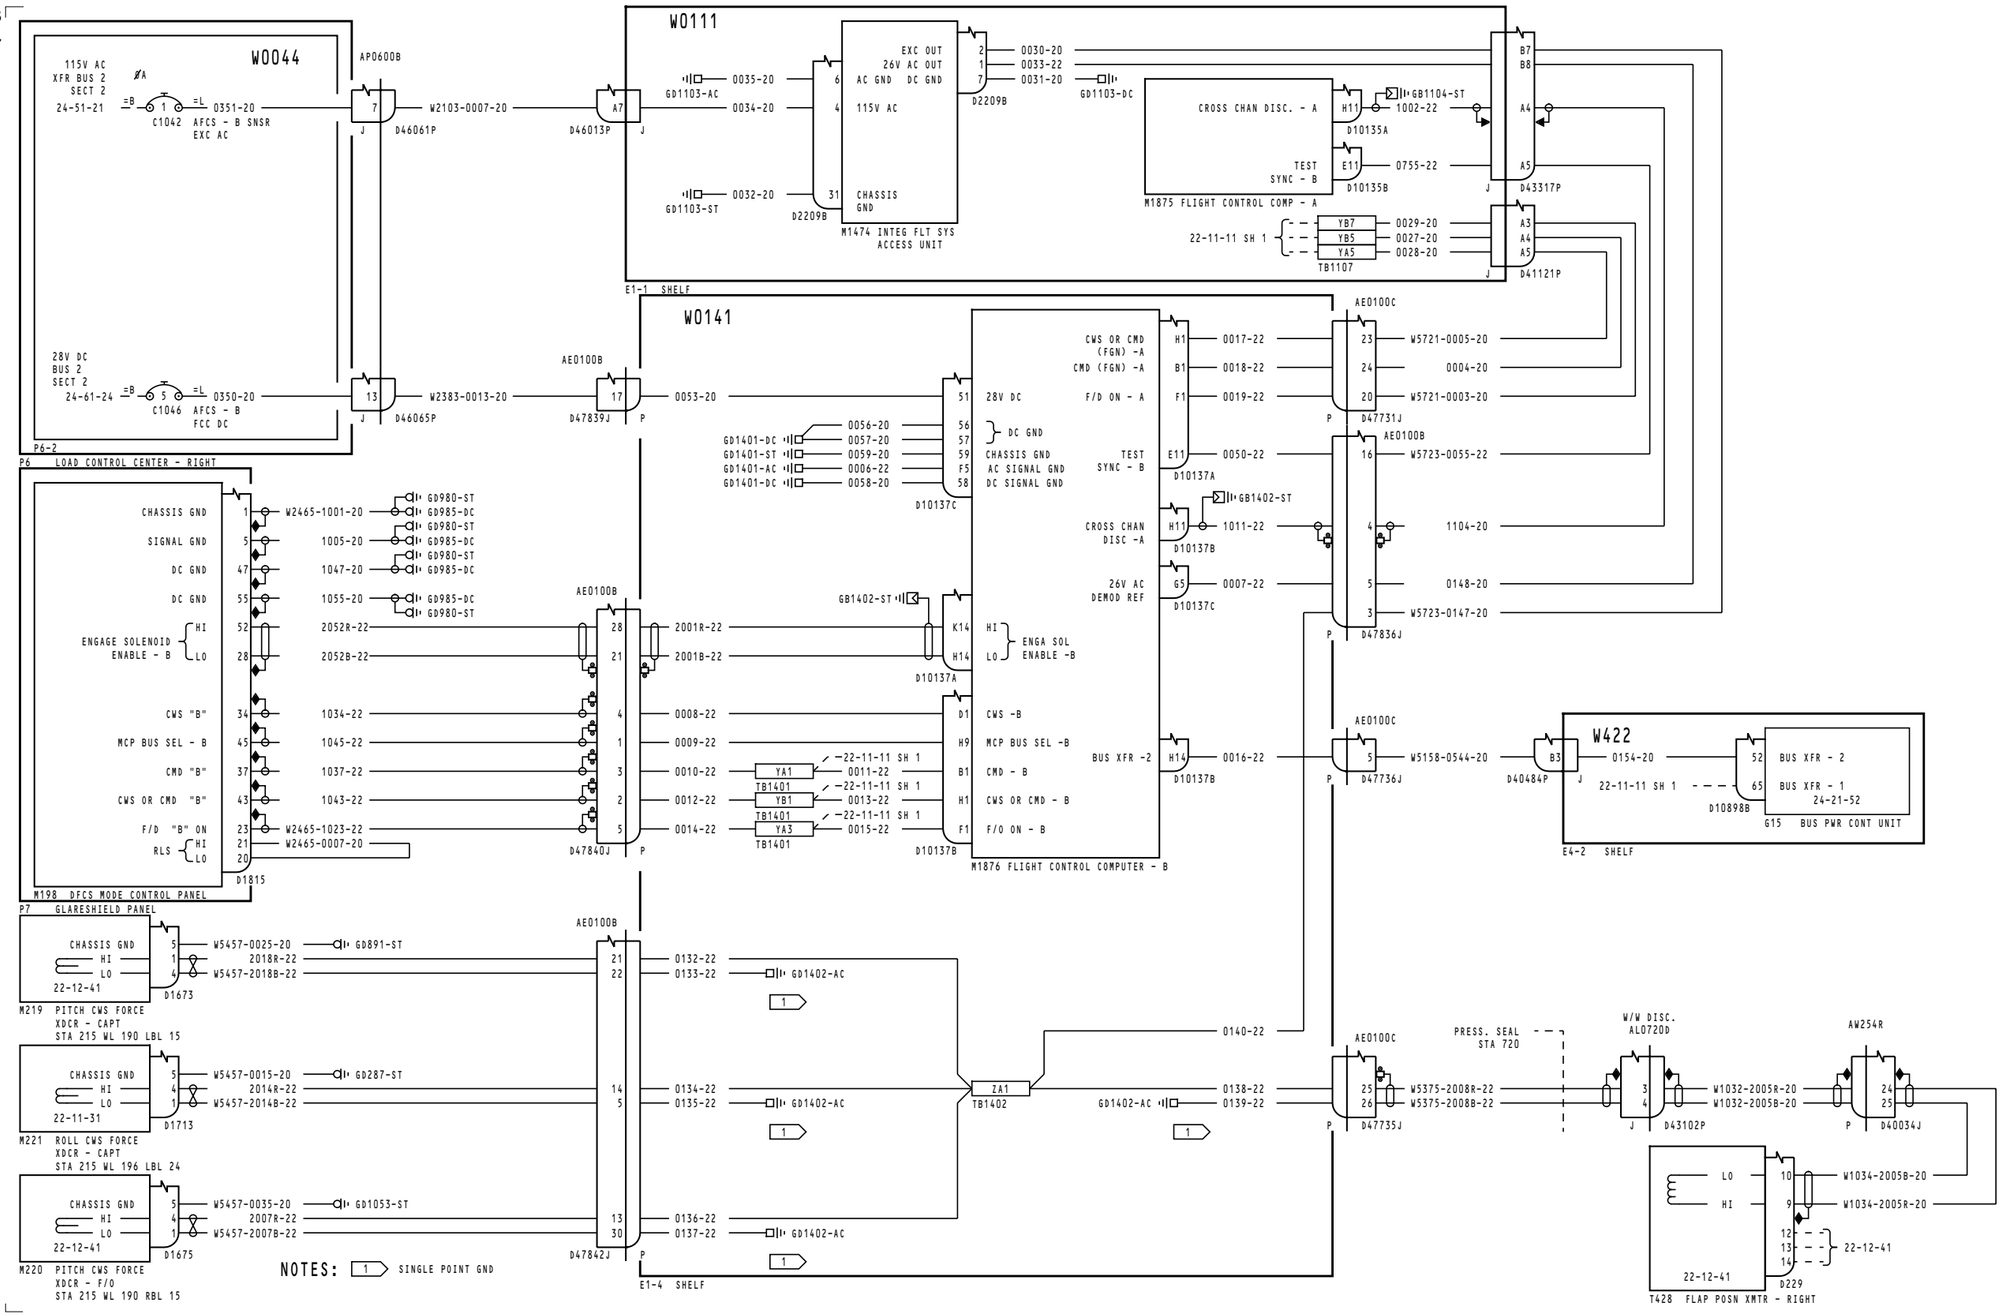


ALL	DFCS - A AND B FCC POWER AND 26V AC EXCITATION D280AM1215	22-11-11 Page 1 Sheet 2 May 15/2024	22-11-11 Page 1 Sheet 2 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

32

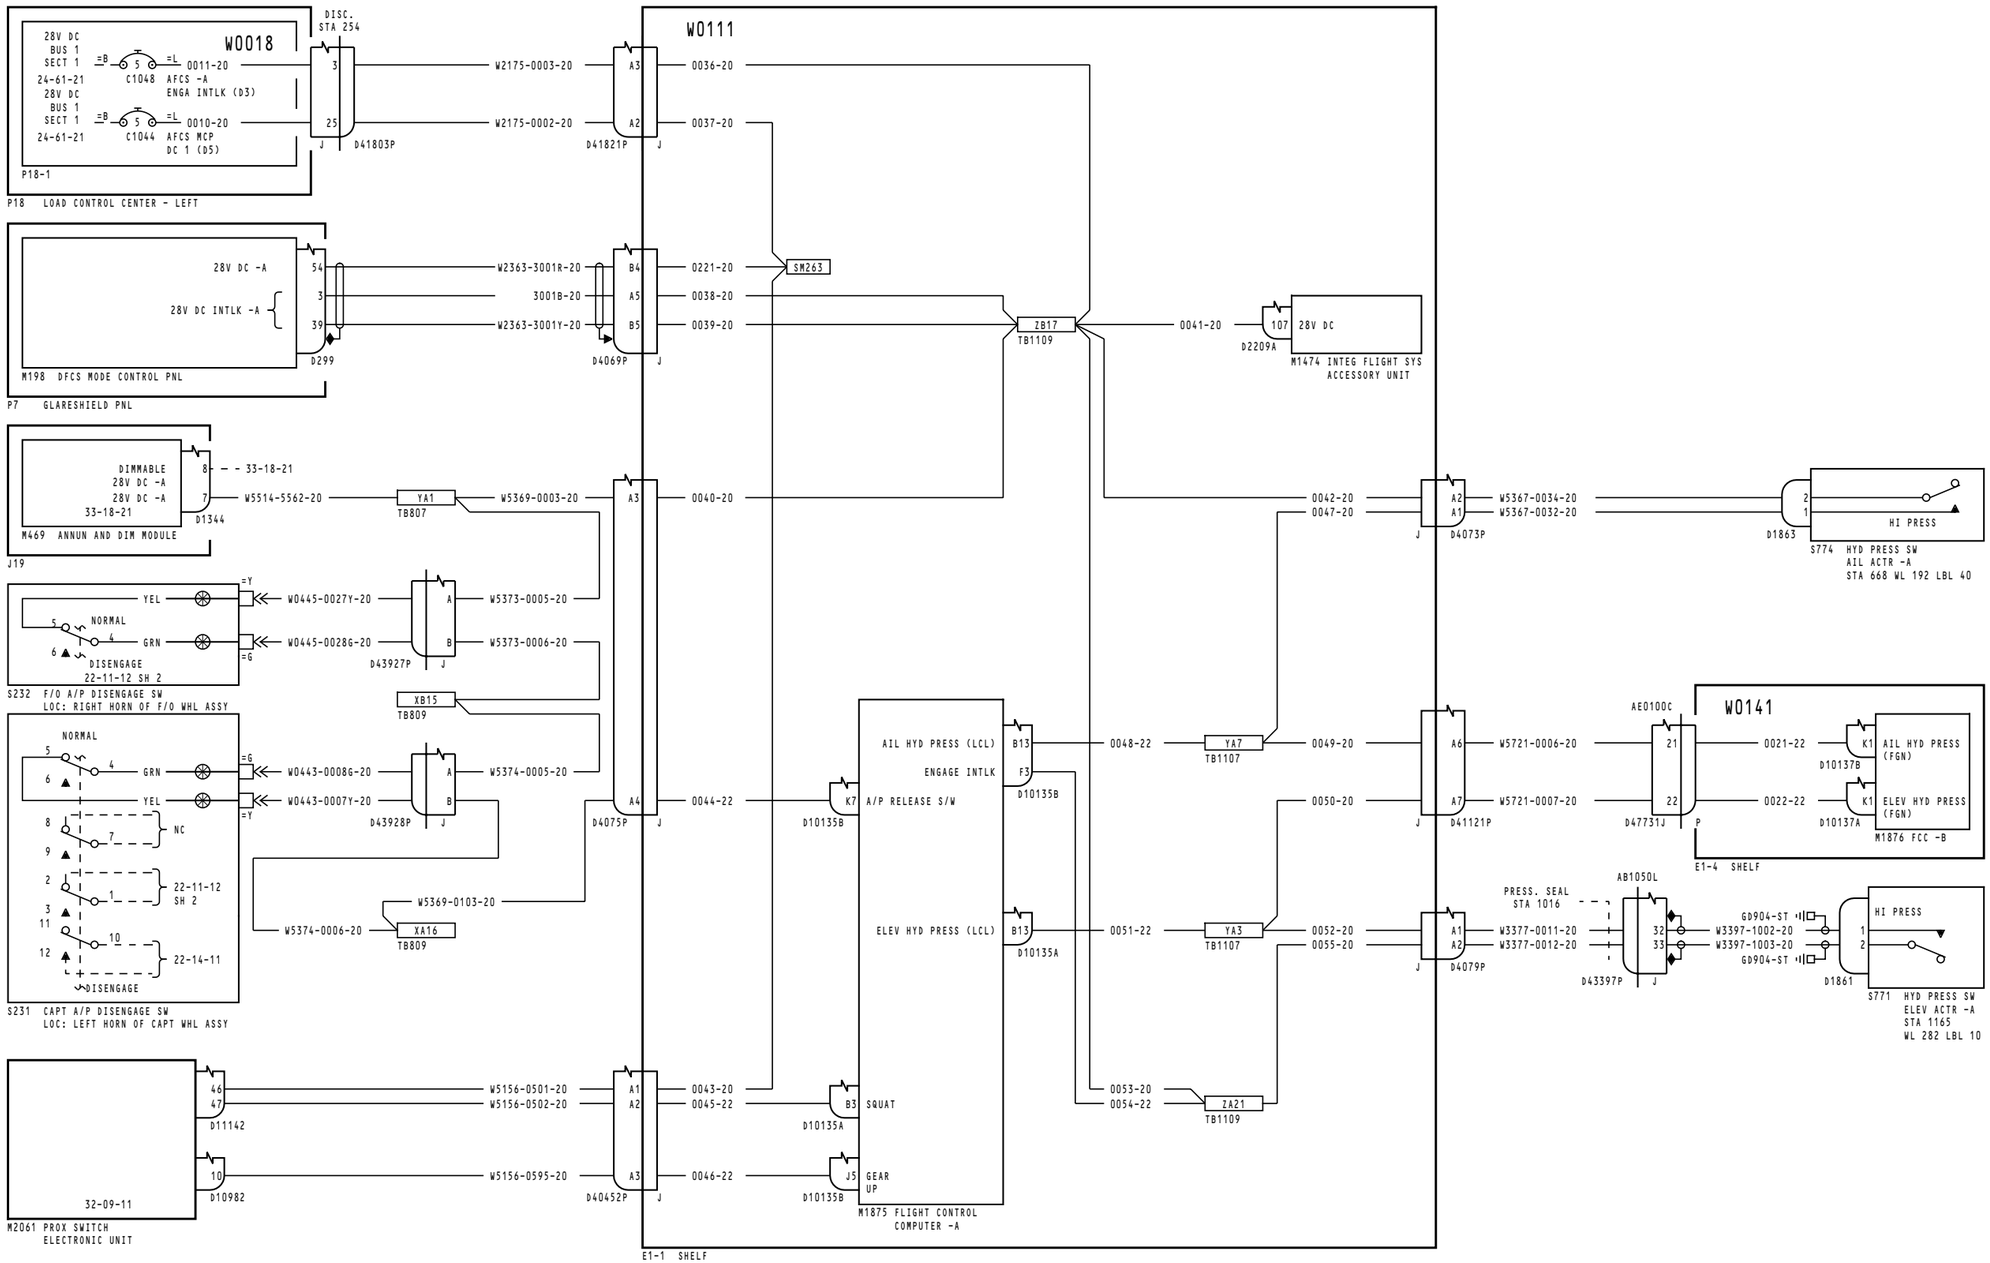


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-12

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

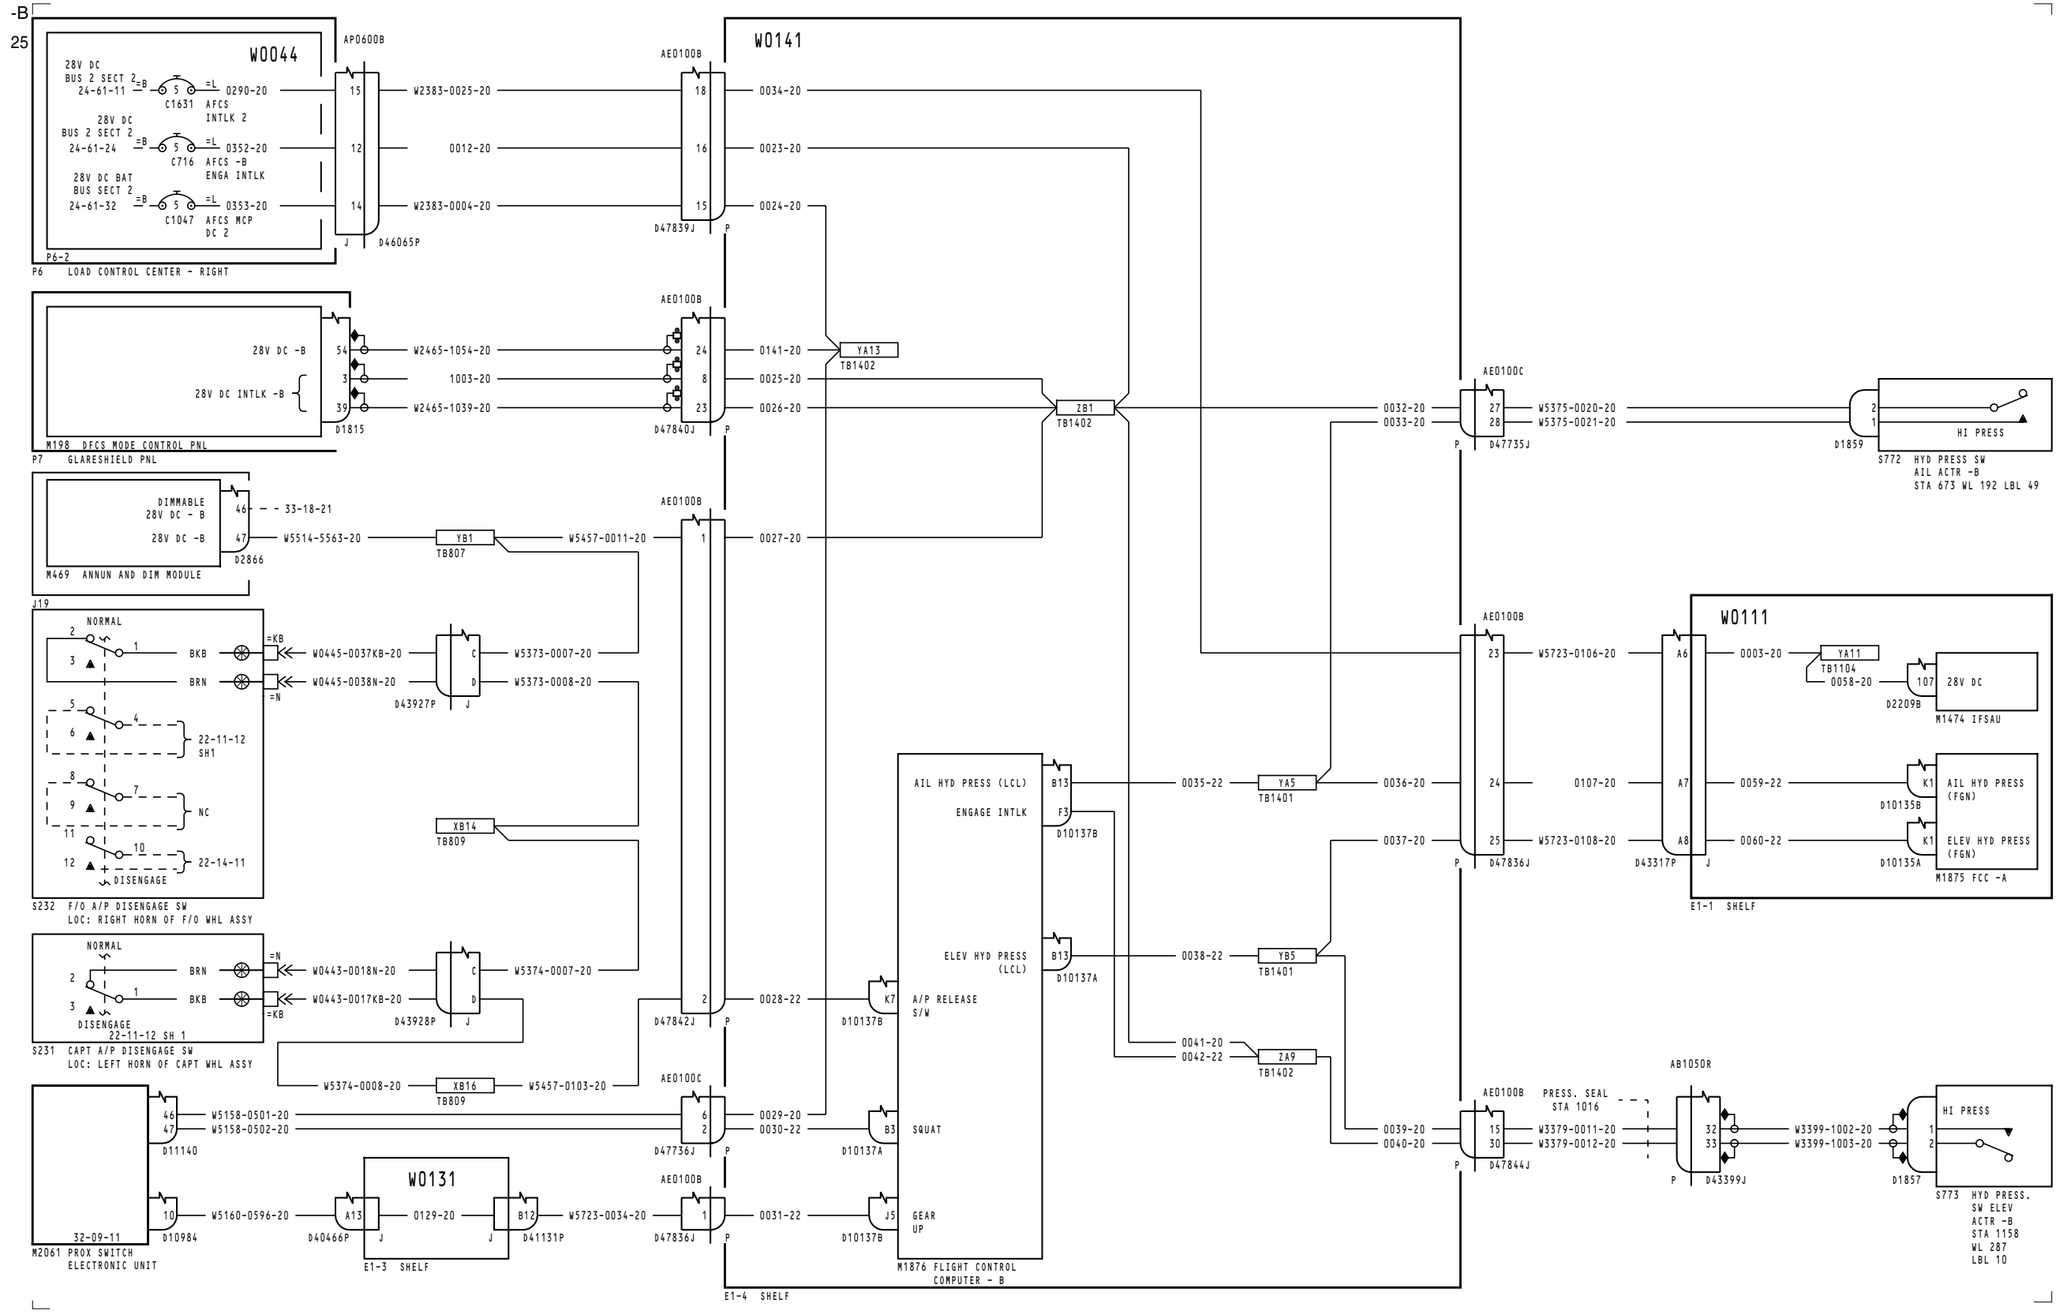


22-11-12

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
25

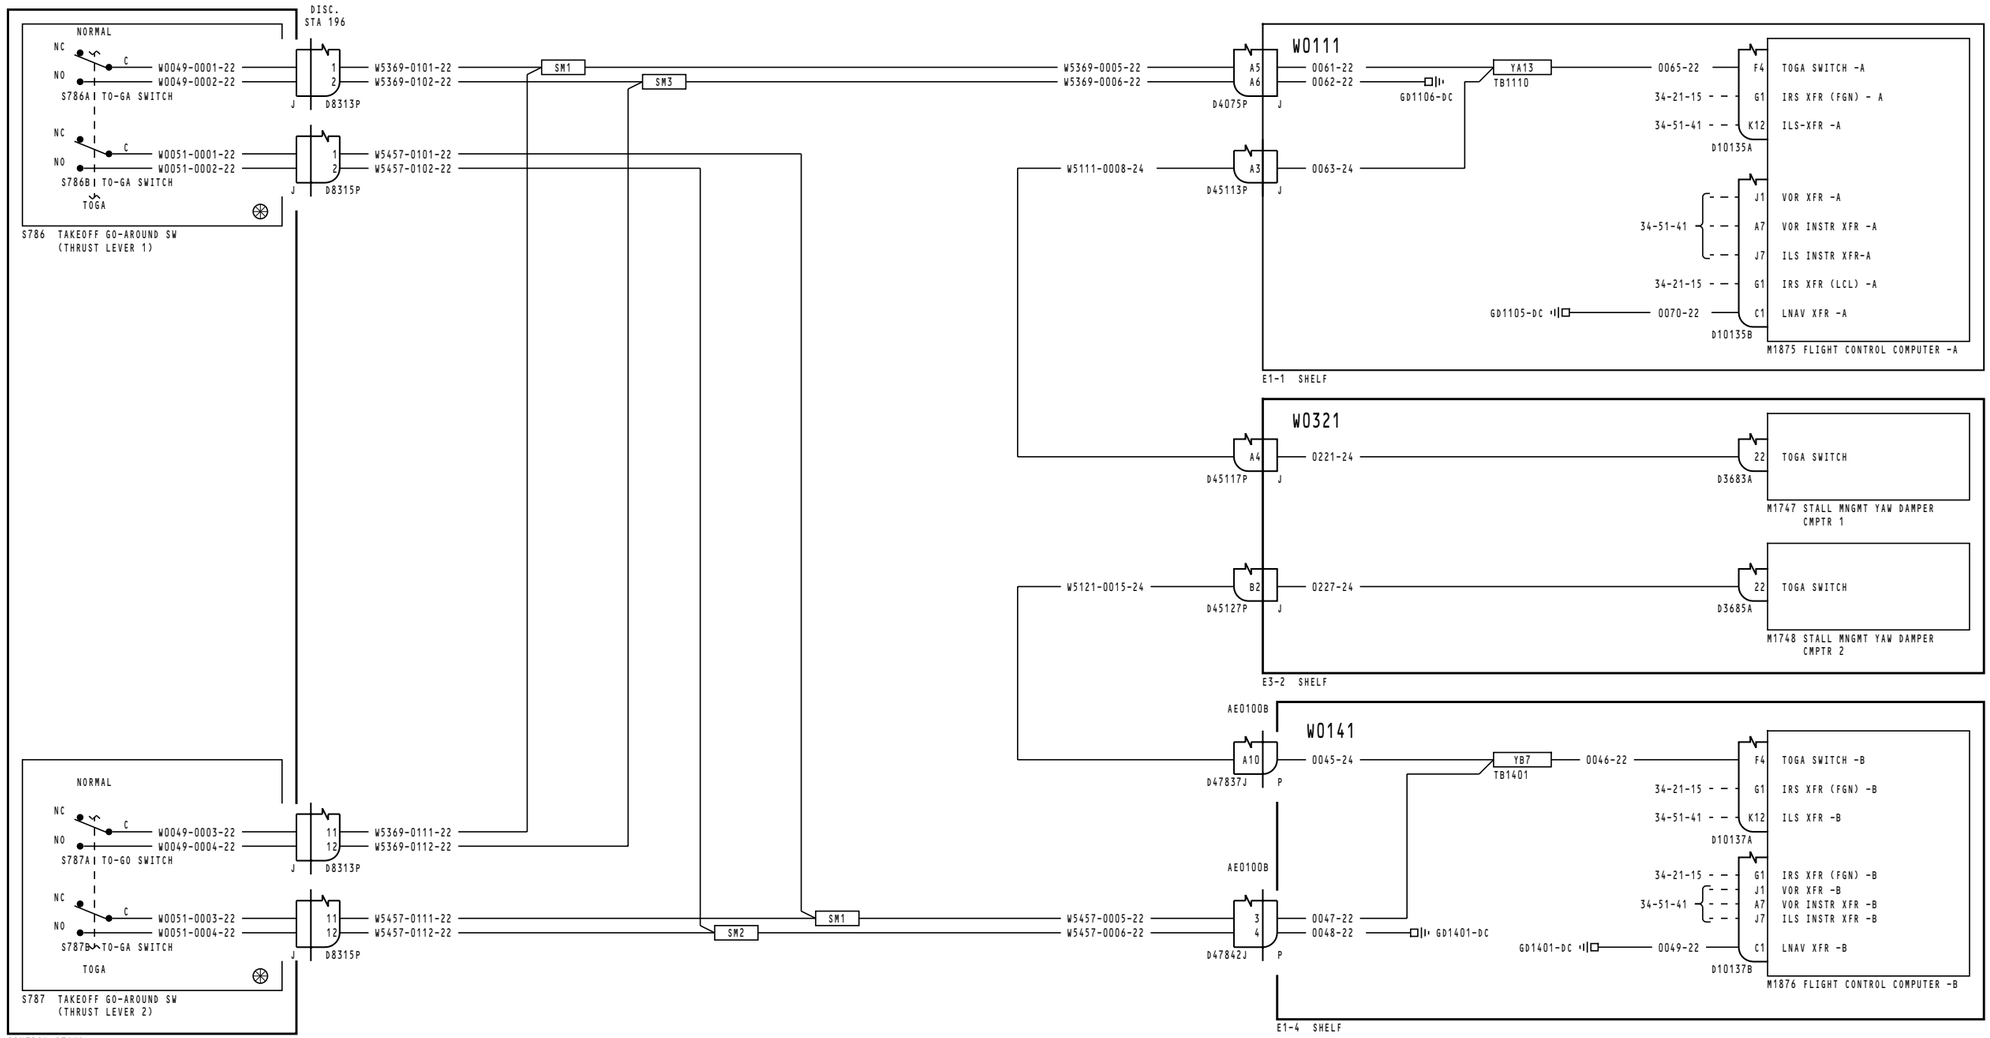



ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-14

Page 1

May 15/2024

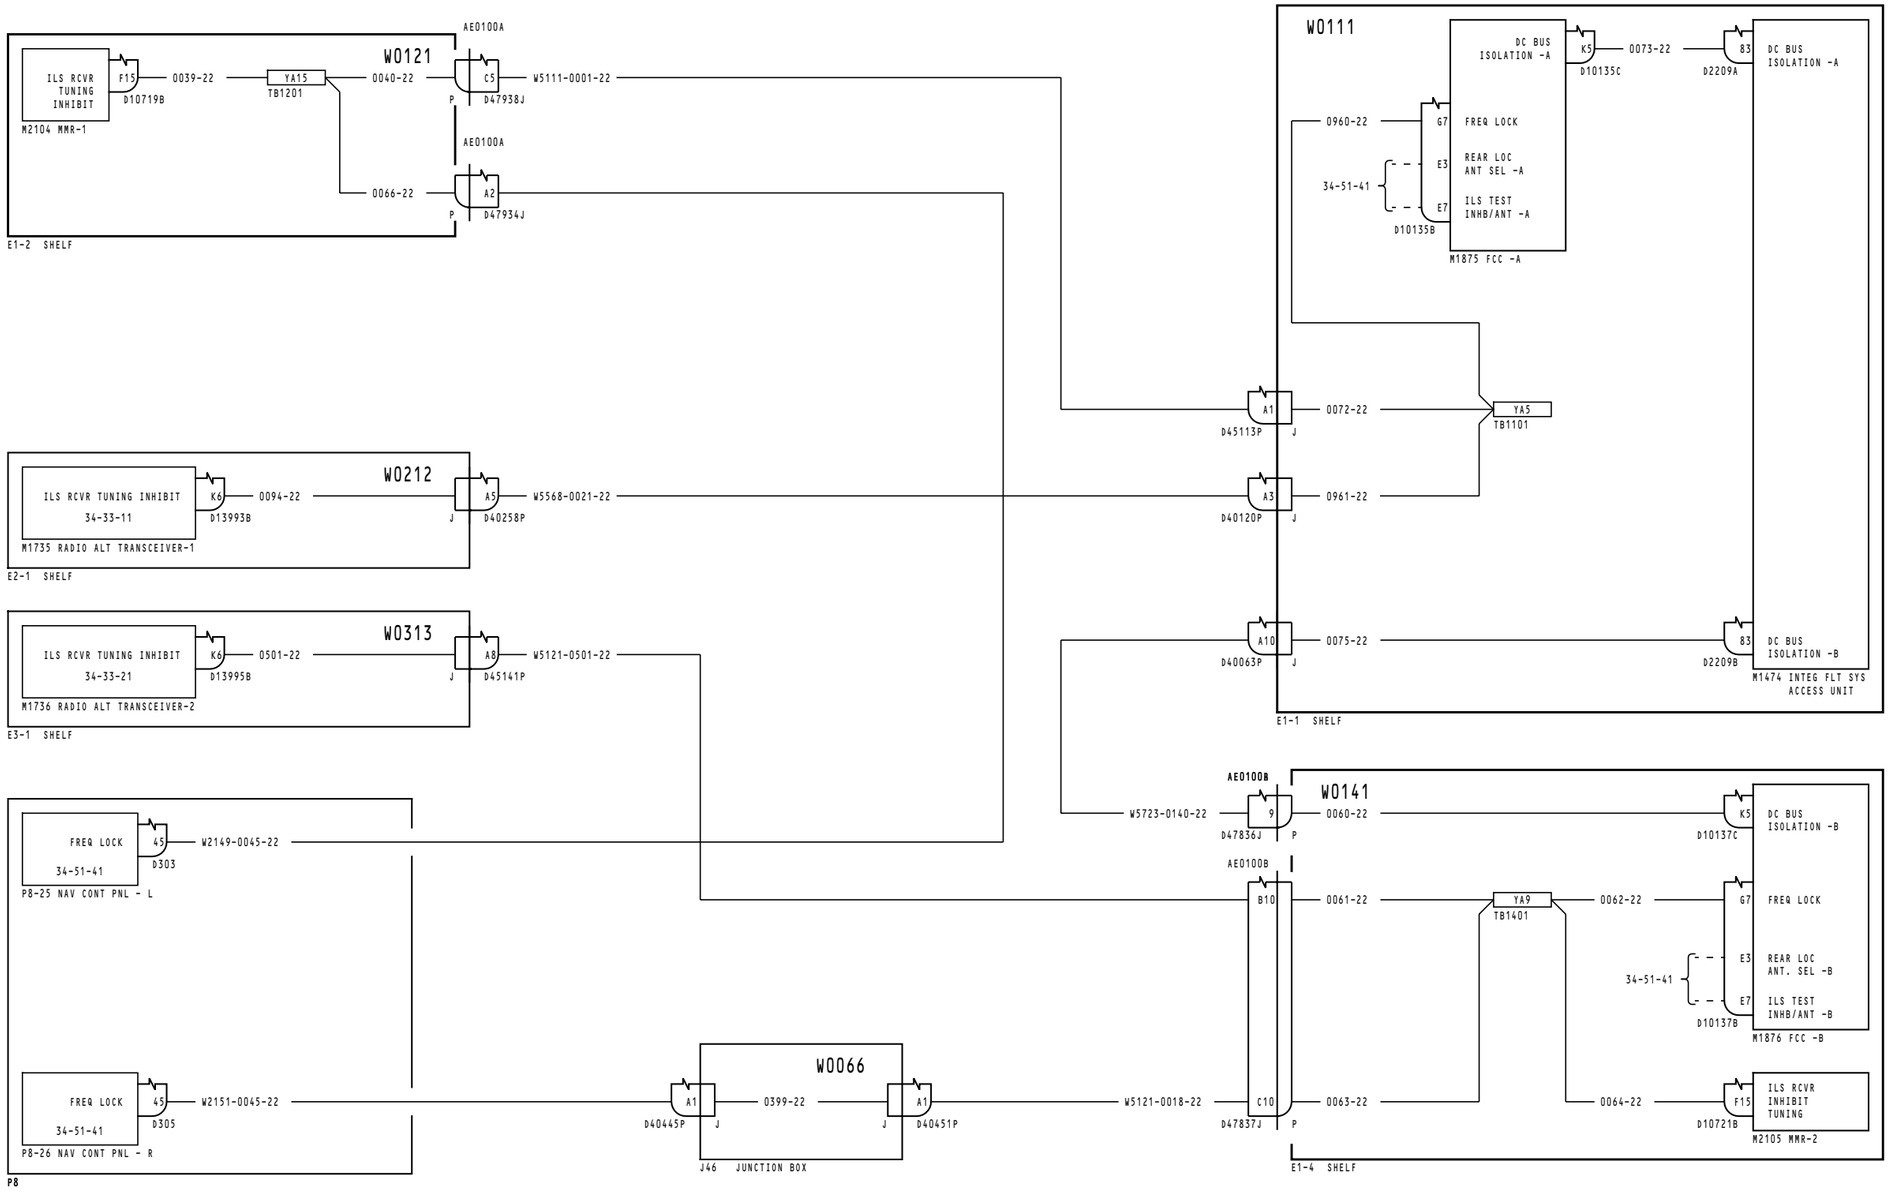
W0121
AE0100A
ILS RCVR TUNING INHIBIT
F15
D10719B
M2104 MMR-1
0039-22
YA15
TB1201
0040-22
C5
P
D47938J
W5111-0001-22
AE0100A
0066-22
A2
P
D47934J
E1-2 SHELF
W0111
DC BUS ISOLATION -A
K5
D10135C
0073-22
B3
D2209A
DC BUS ISOLATION -A
0960-22
G7
FREQ LOCK
34-51-41
E3
REAR LOC ANT SEL -A
E7
ILS TEST INHB/ANT -A
D10135B
M1875 FCC -A
A1
D45113P
J
0072-22
YA3
TB1101
W0212
ILS RCVR TUNING INHIBIT
34-33-11
K6
D13993B
M1735 RADIO ALT TRANSCEIVER-1
0094-22
A5
J
D40258P
W5568-0021-22
A3
D40120P
J
0961-22
E2-1 SHELF
W0313
ILS RCVR TUNING INHIBIT
34-33-21
K6
D13995B
M1736 RADIO ALT TRANSCEIVER-2
0501-22
A8
J
D45141P
W5121-0501-22
A10
D40063P
J
0075-22
B3
D2209B
DC BUS ISOLATION -B
M1474 INTEG FLT SYS ACCESS UNIT
E1-1 SHELF
E3-1 SHELF
AE0100B
W0141
W5723-0140-22
9
D47836J
P
0060-22
K5
D10137C
DC BUS ISOLATION -B
FREQ LOCK
34-51-41
45
D303
W2149-0045-22
P8-25 NAV CONT PNL - L
AE0100B
B10
0061-22
YA9
TB1401
0062-22
G7
FREQ LOCK
34-51-41
E3
REAR LOC ANT. SEL -B
E7
ILS TEST INHB/ANT -B
D10137B
M1876 FCC -B
FREQ LOCK
34-51-41
45
D305
W2151-0045-22
P8-26 NAV CONT PNL - R
P8
W0066
A1
D40445P
J
0399-22
A1
J
D40451P
J46 JUNCTION BOX
W5121-0018-22
C10
D47837J
P
0063-22
0064-22
F15
D10721B
ILS RCVR INHIBIT TUNING
M2105 MMR-2
E1-4 SHELF

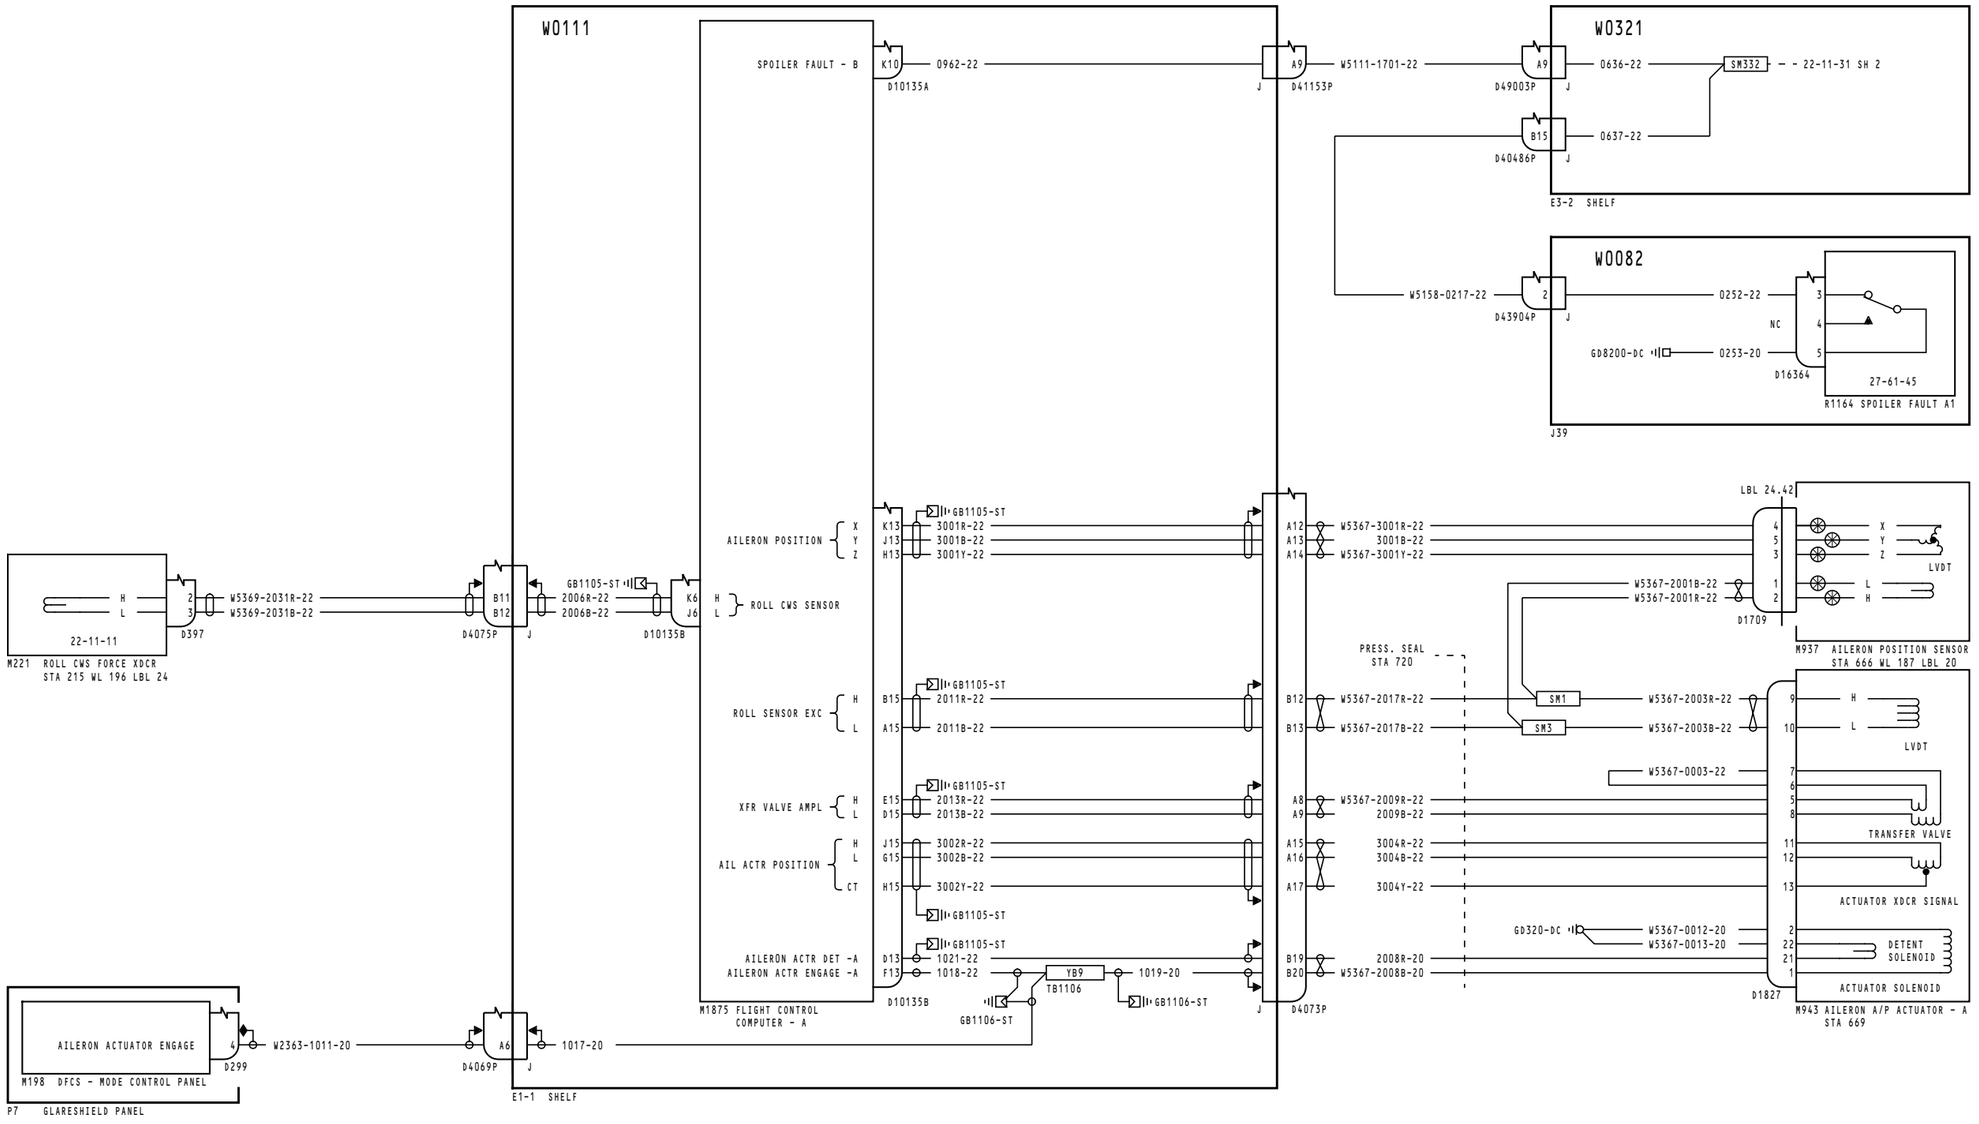


ALL	DFCS - A AND B A/P ROLL SENSORS AND ACTUATORS	22-11-31	22-11-31
	D280AM1215	Page 1 Sheet 1 May 15/2024	Page 1 Sheet 1 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
28

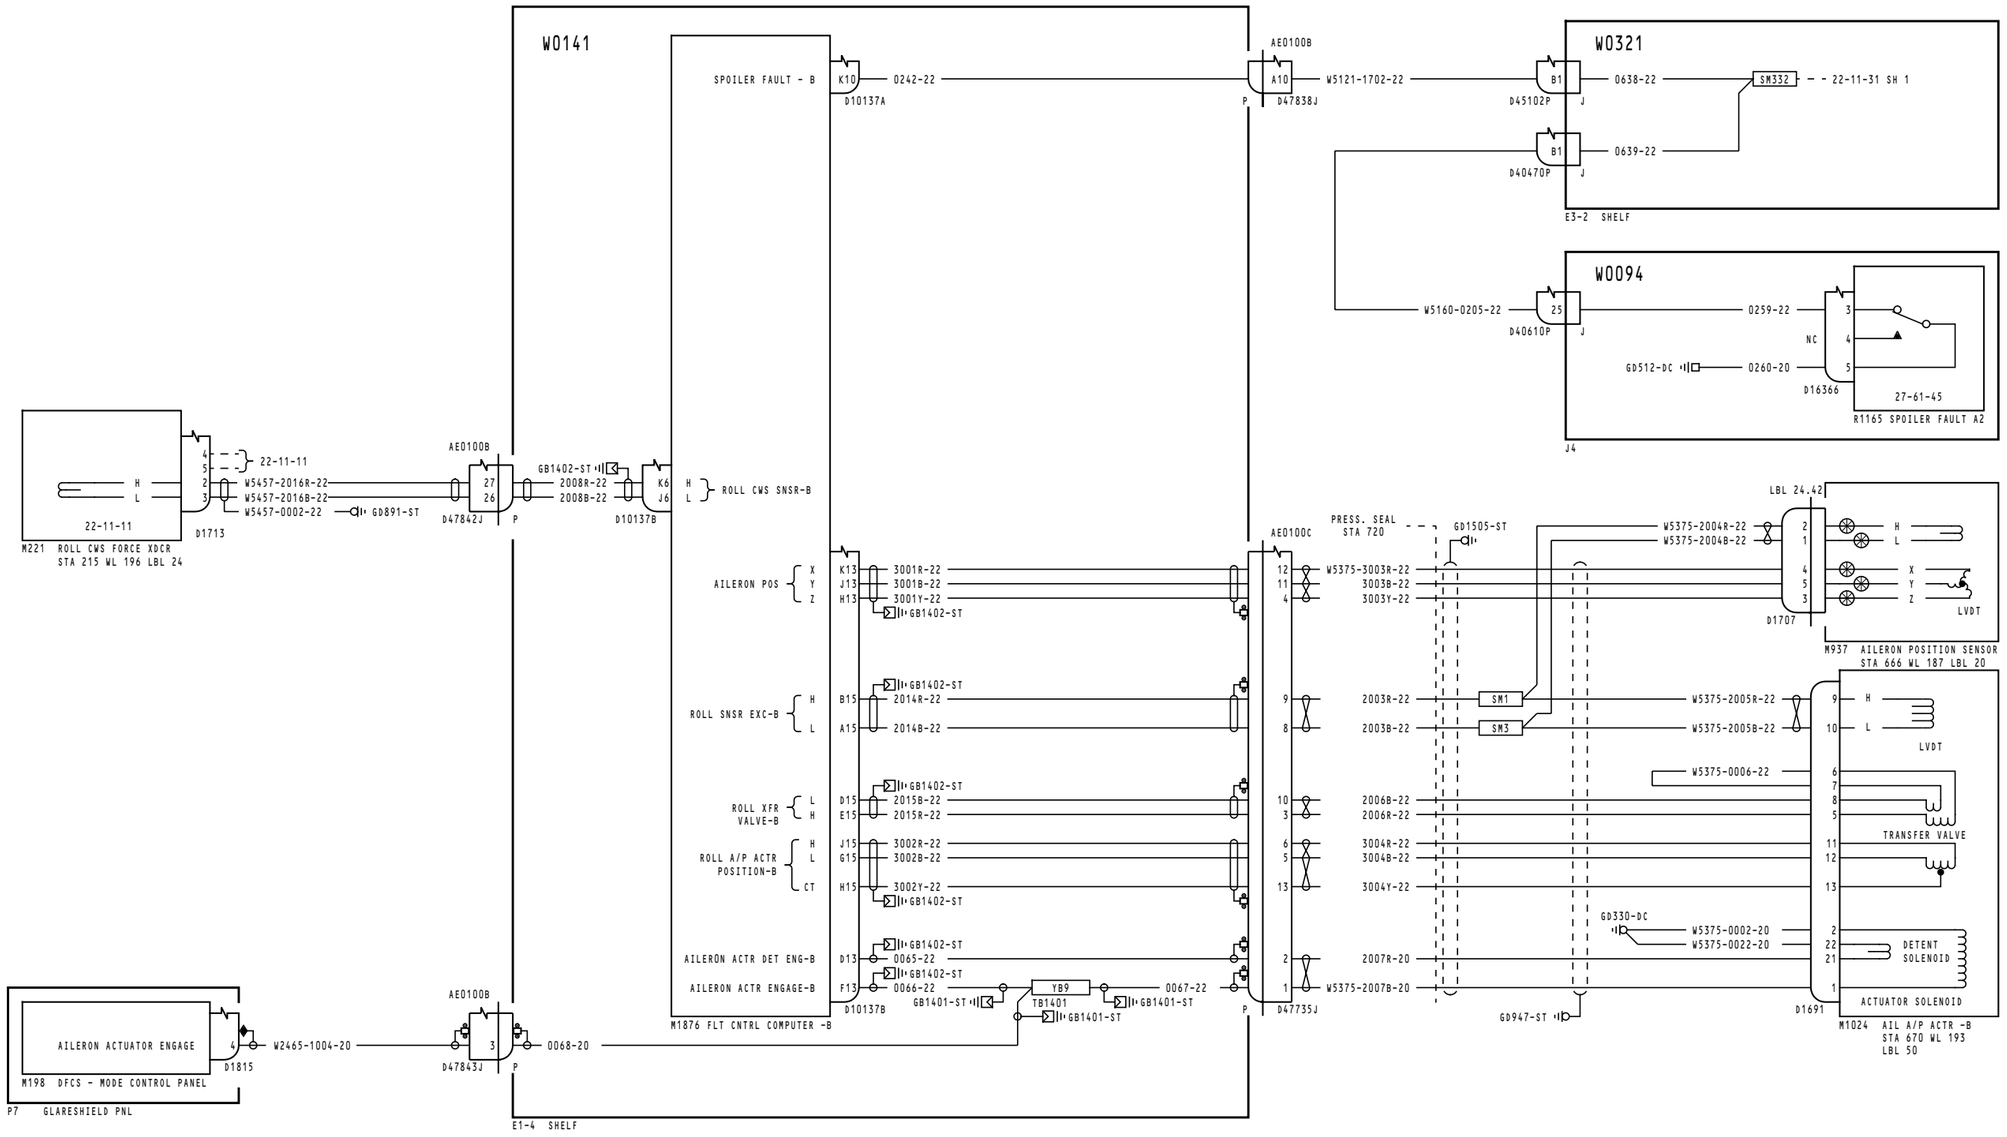

ALL

DFCS - A AND B A/P ROLL SENSORS AND ACTUATORS

D280AM1215

22-11-31


Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-31

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

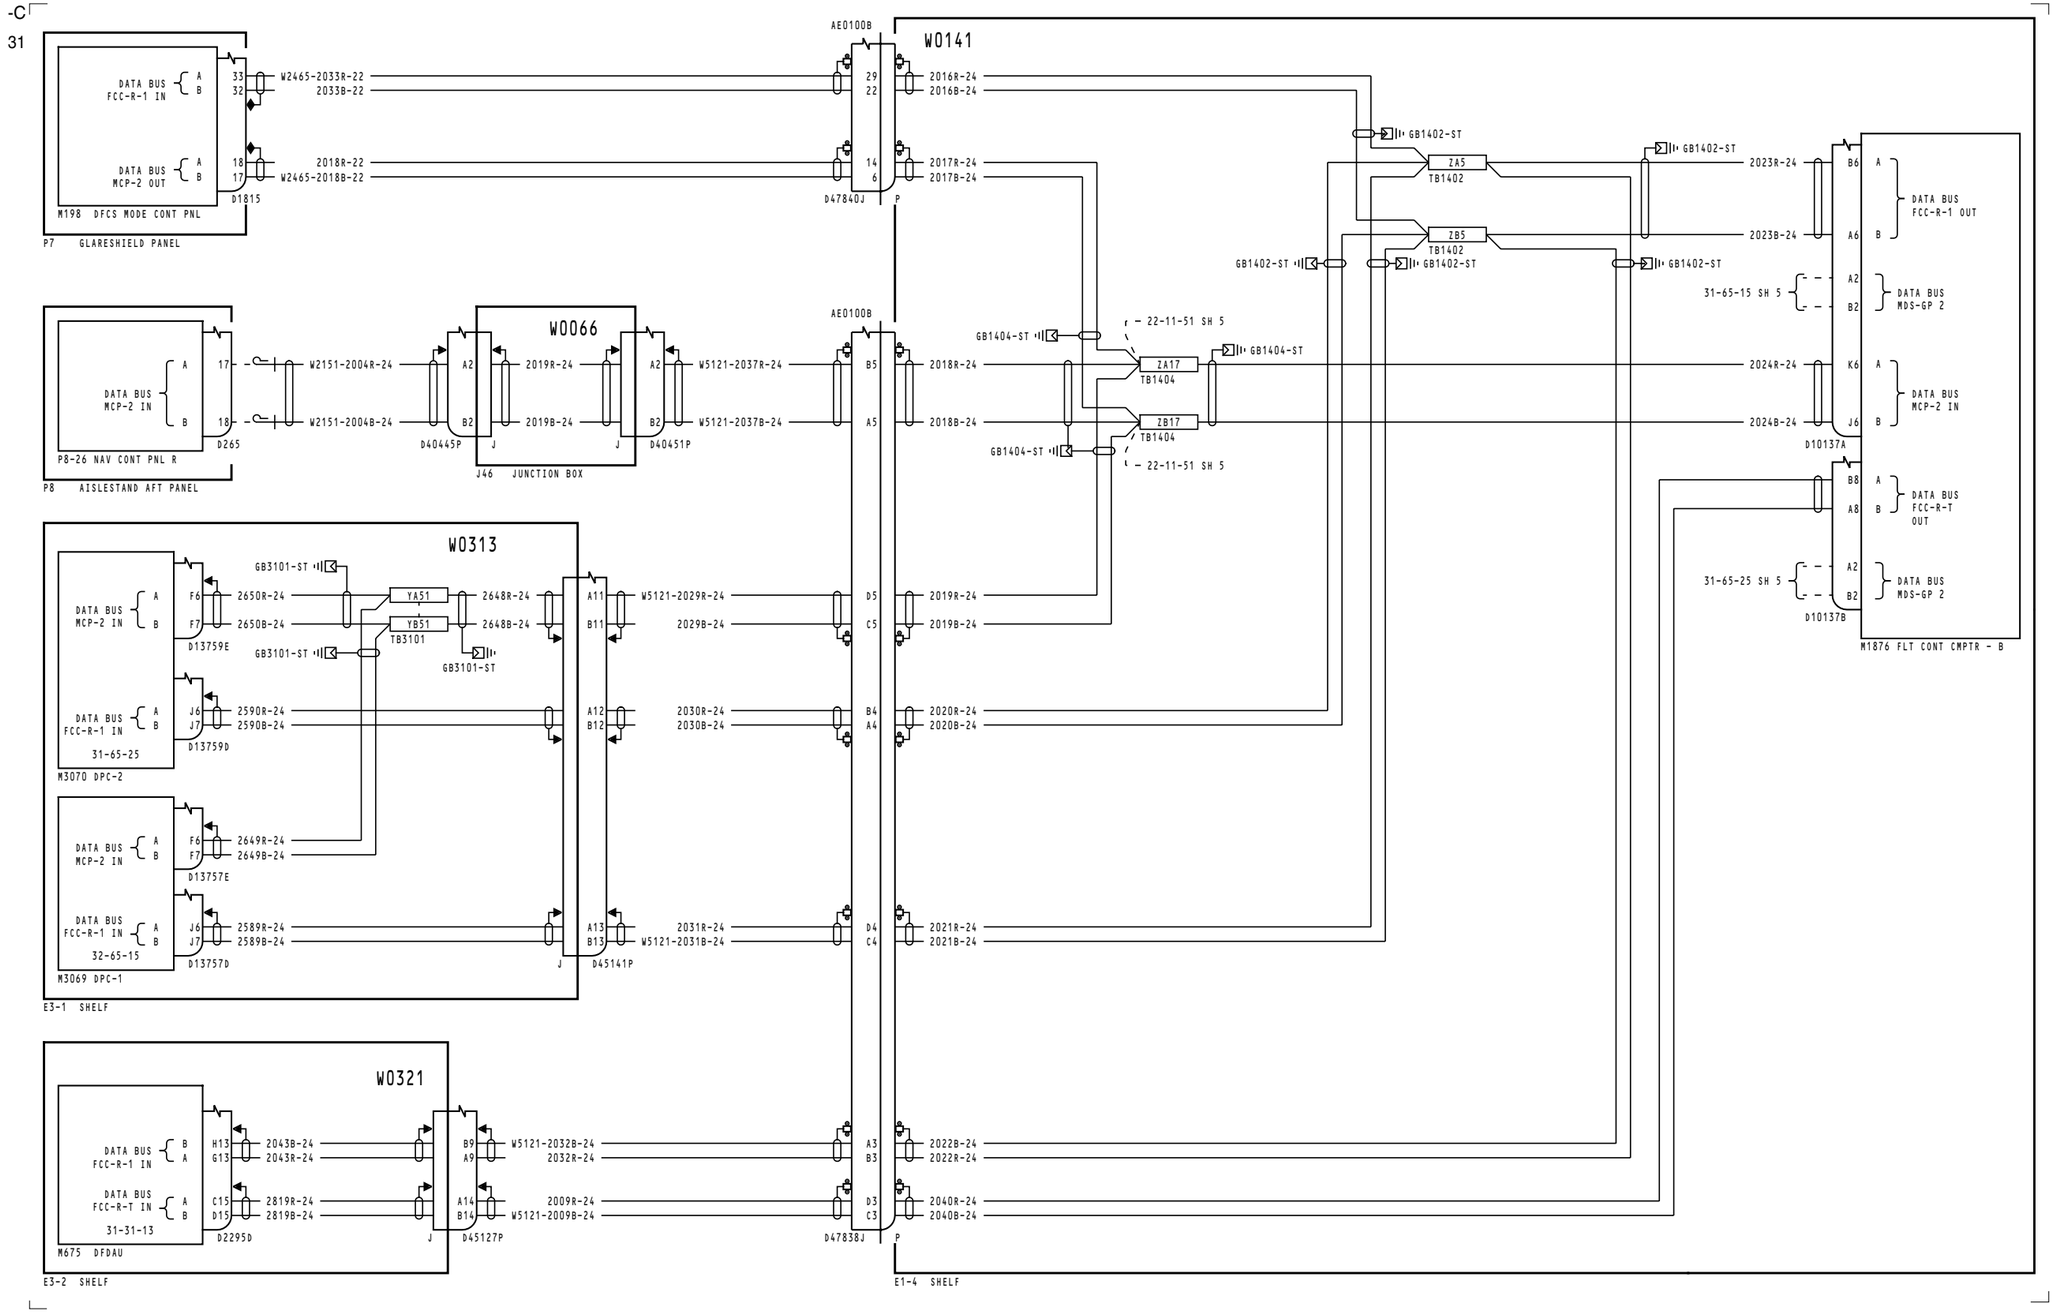

ALL

DFCS - DIGITAL BUS INTERFACES - OUTPUT

D280AM1215

22-11-51

Page 1
Sheet 1
May 15/2024


22-11-51

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
70

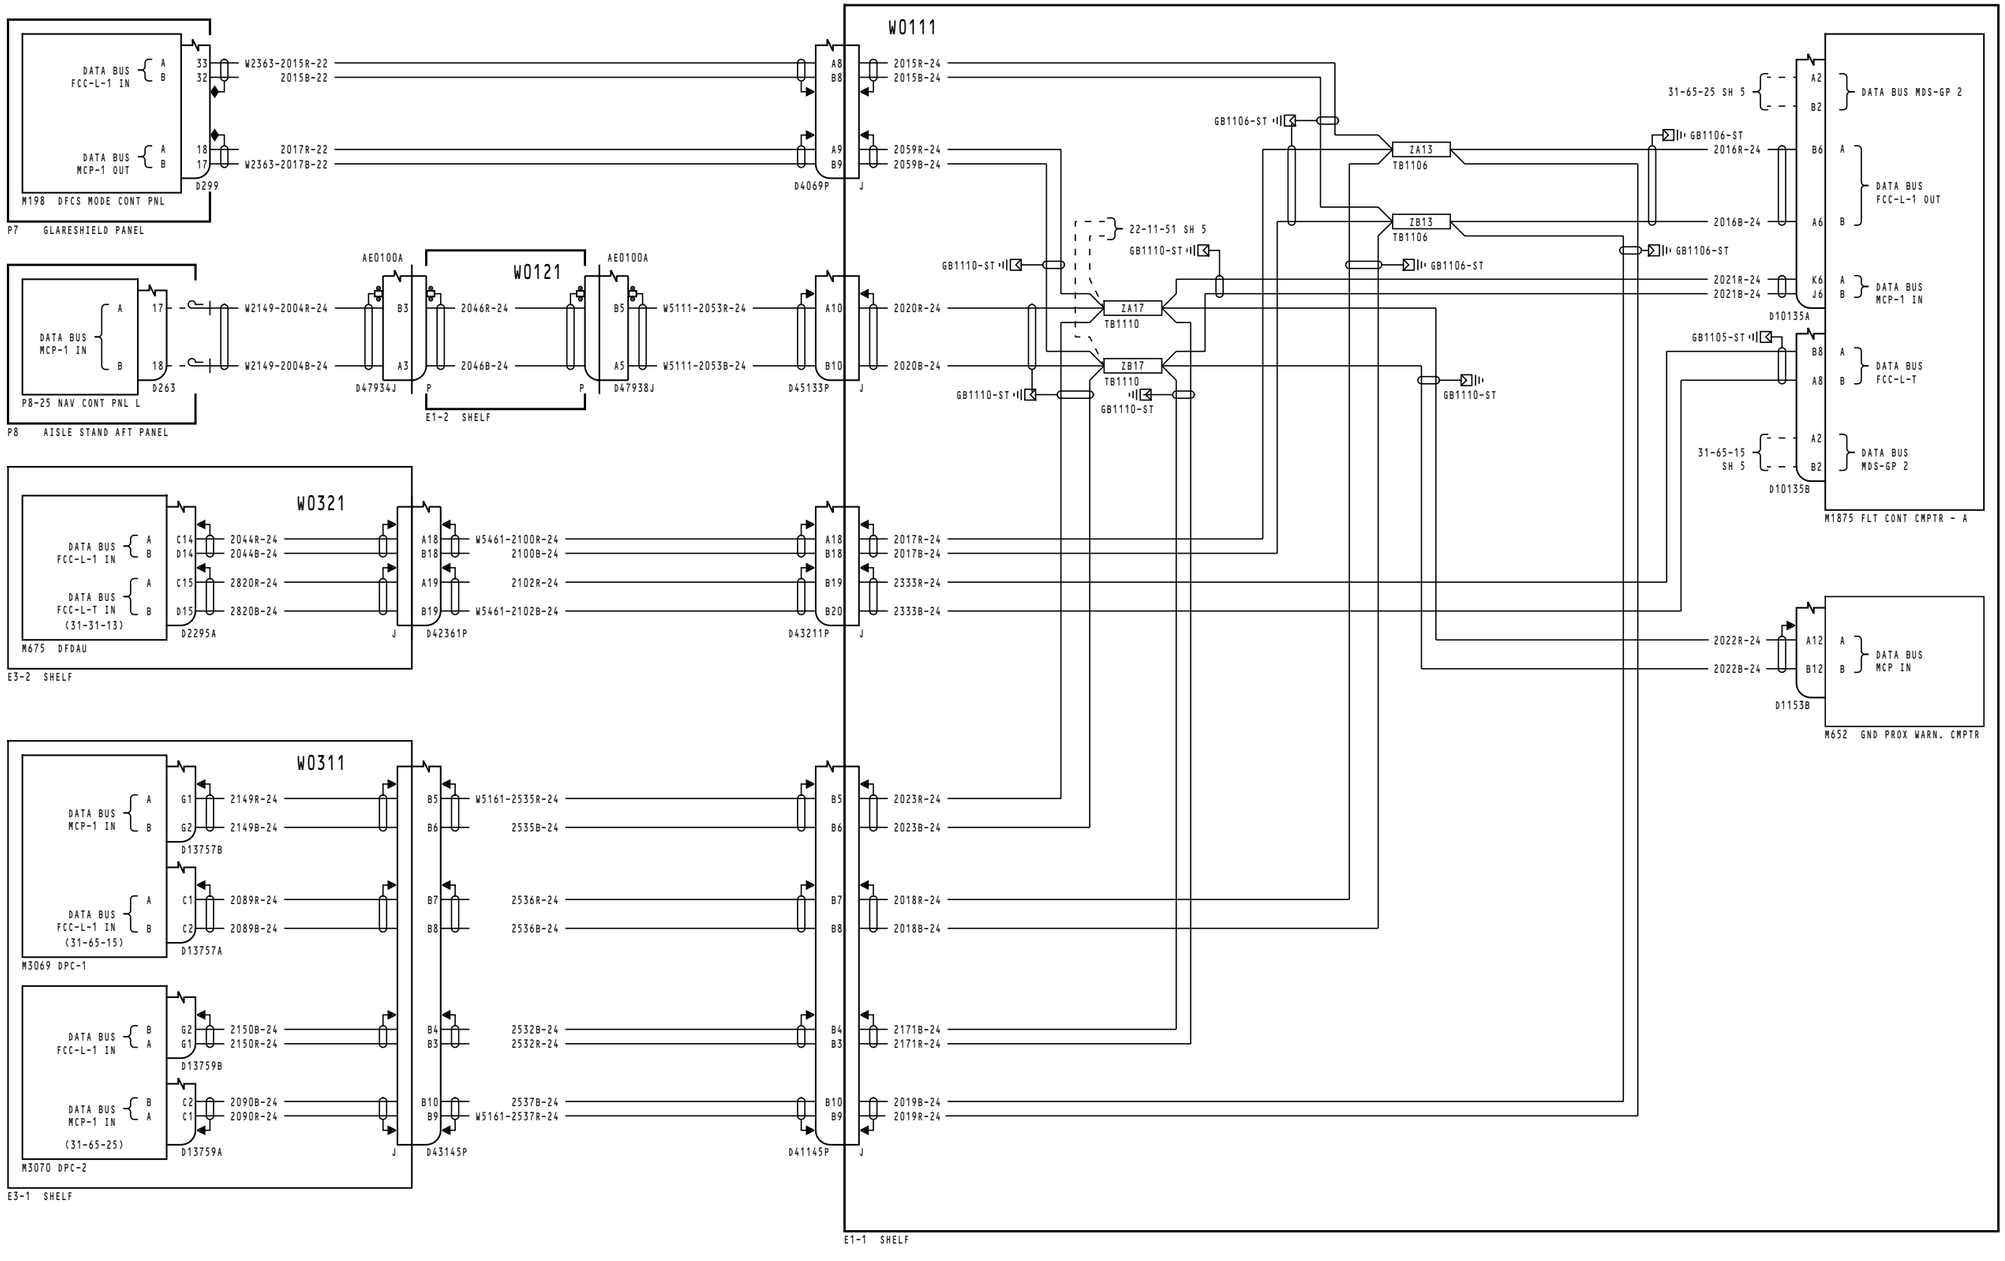

ALL	DFCS - DIGITAL BUS INTERFACES - OUTPUT

D280AM1215


22-11-51

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

178

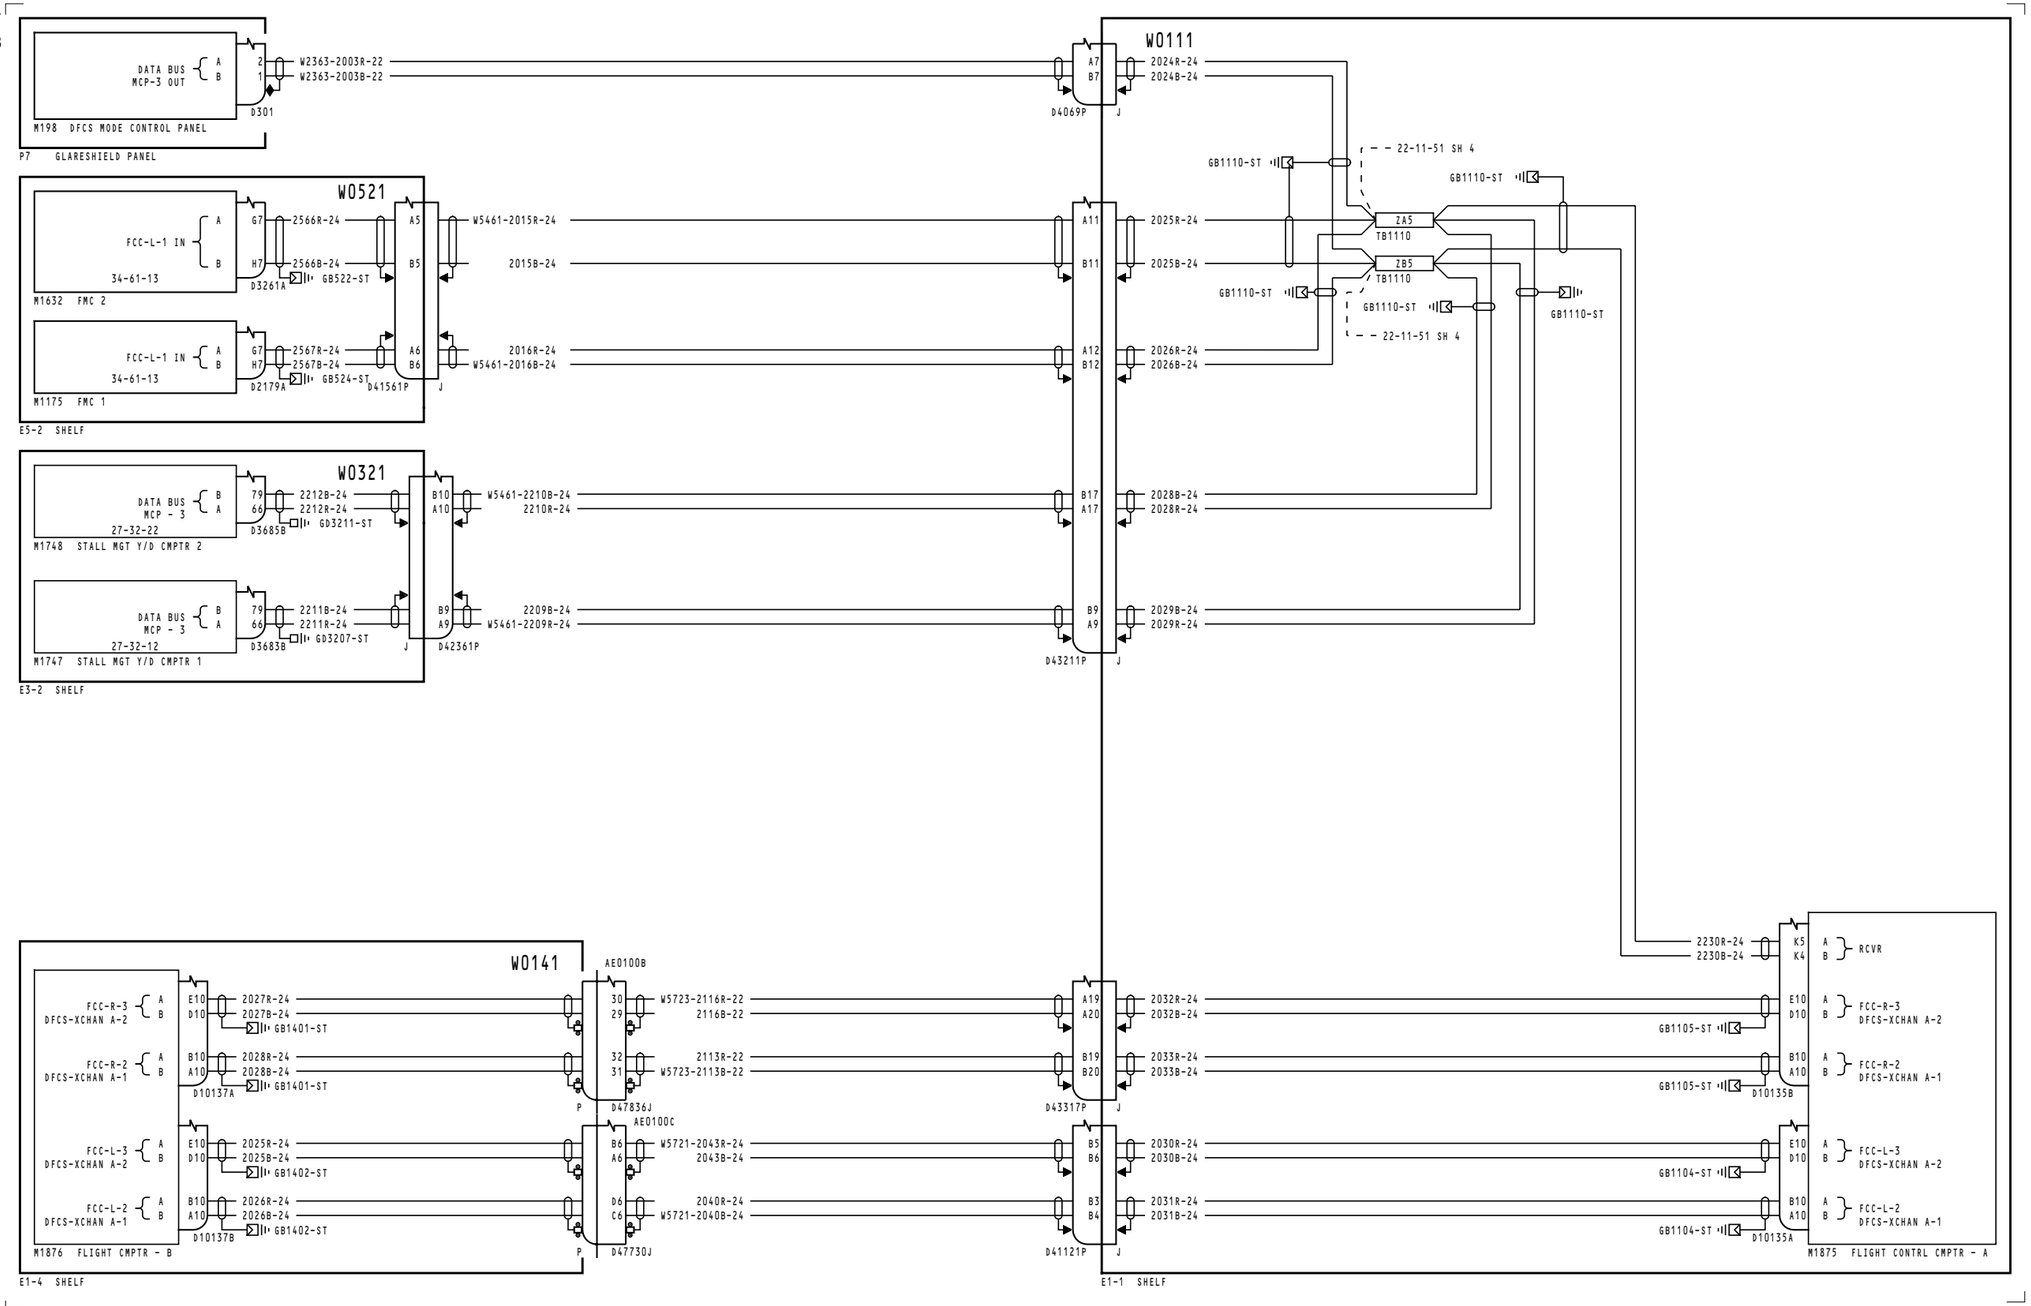


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-51

Page 1
Sheet 3
May 15/2024


737-8 WIRING DIAGRAM MANUAL

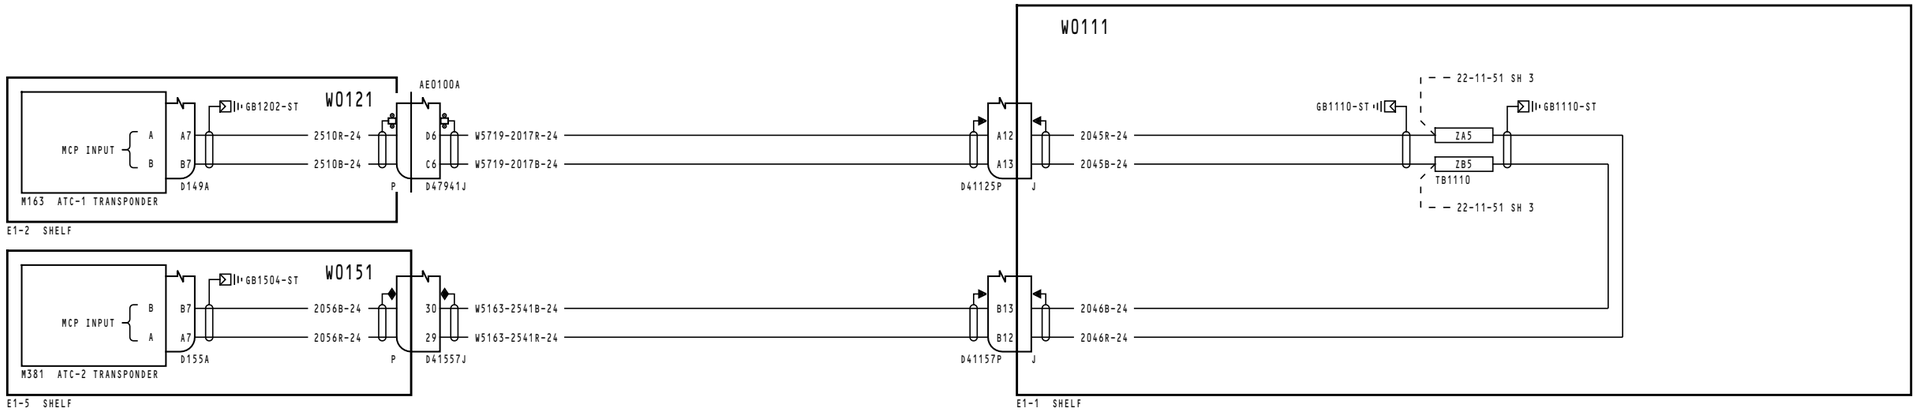

ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-51

Page 1
Sheet 4
May 15/2024

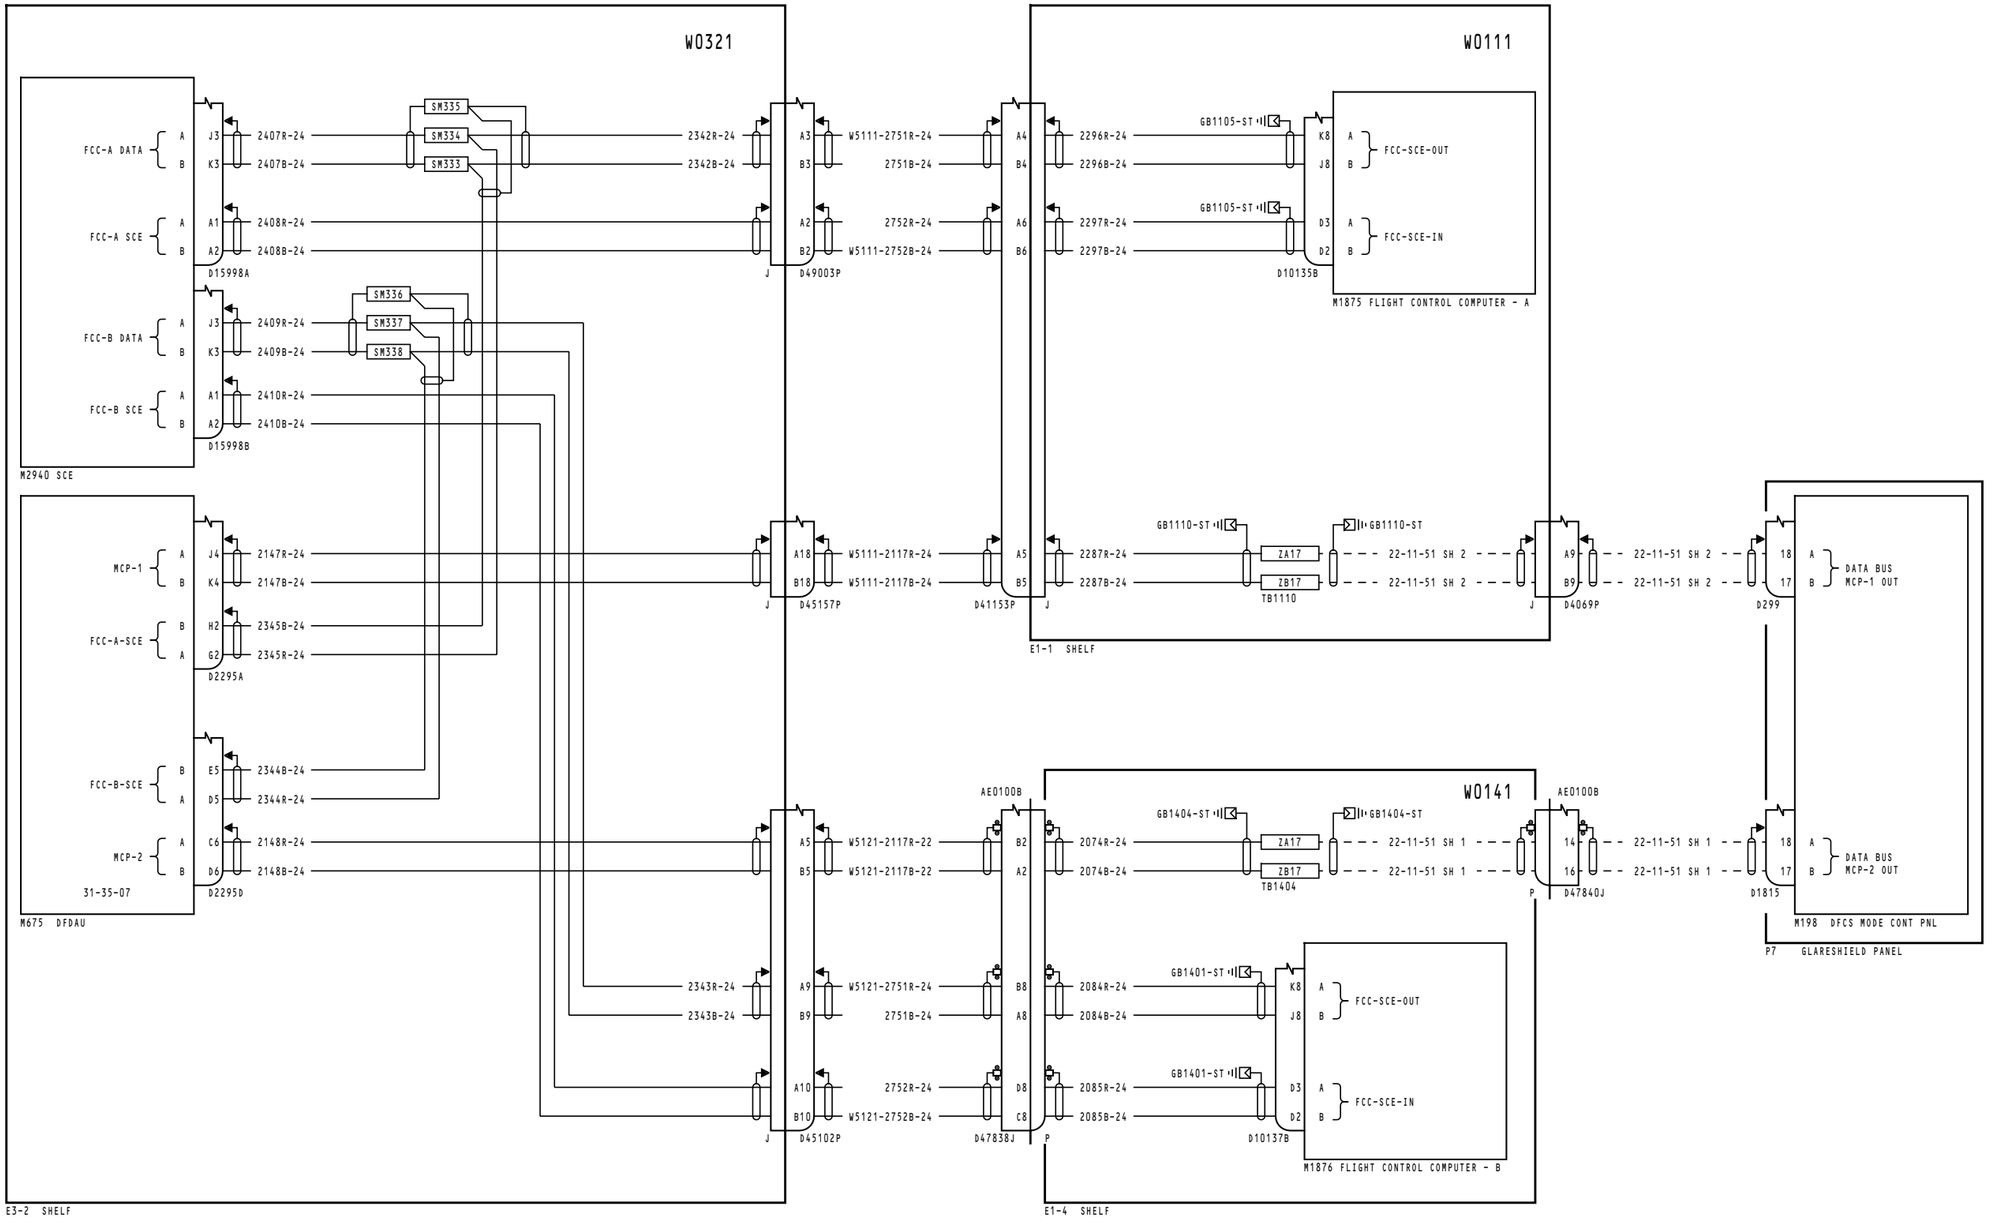


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-51

Page 1
Sheet 5
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
10

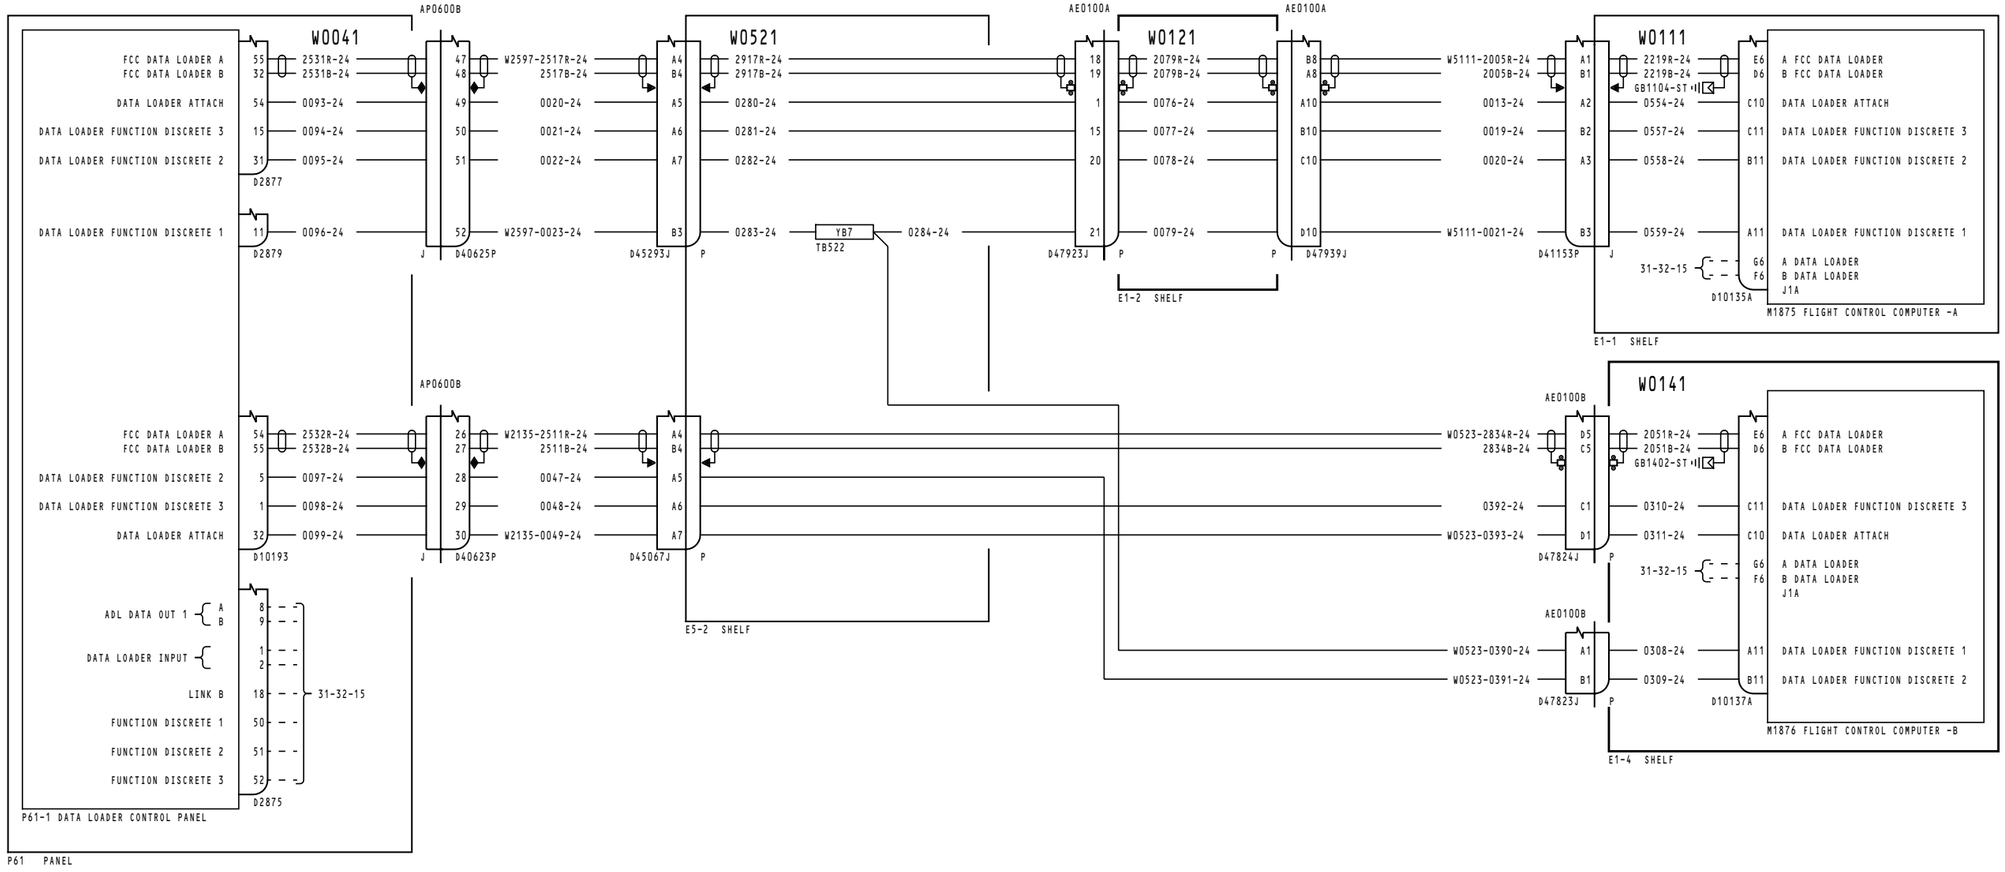

ECCN 9E991 BOEING PROPRIETARY - See title page for details


22-11-53

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

978

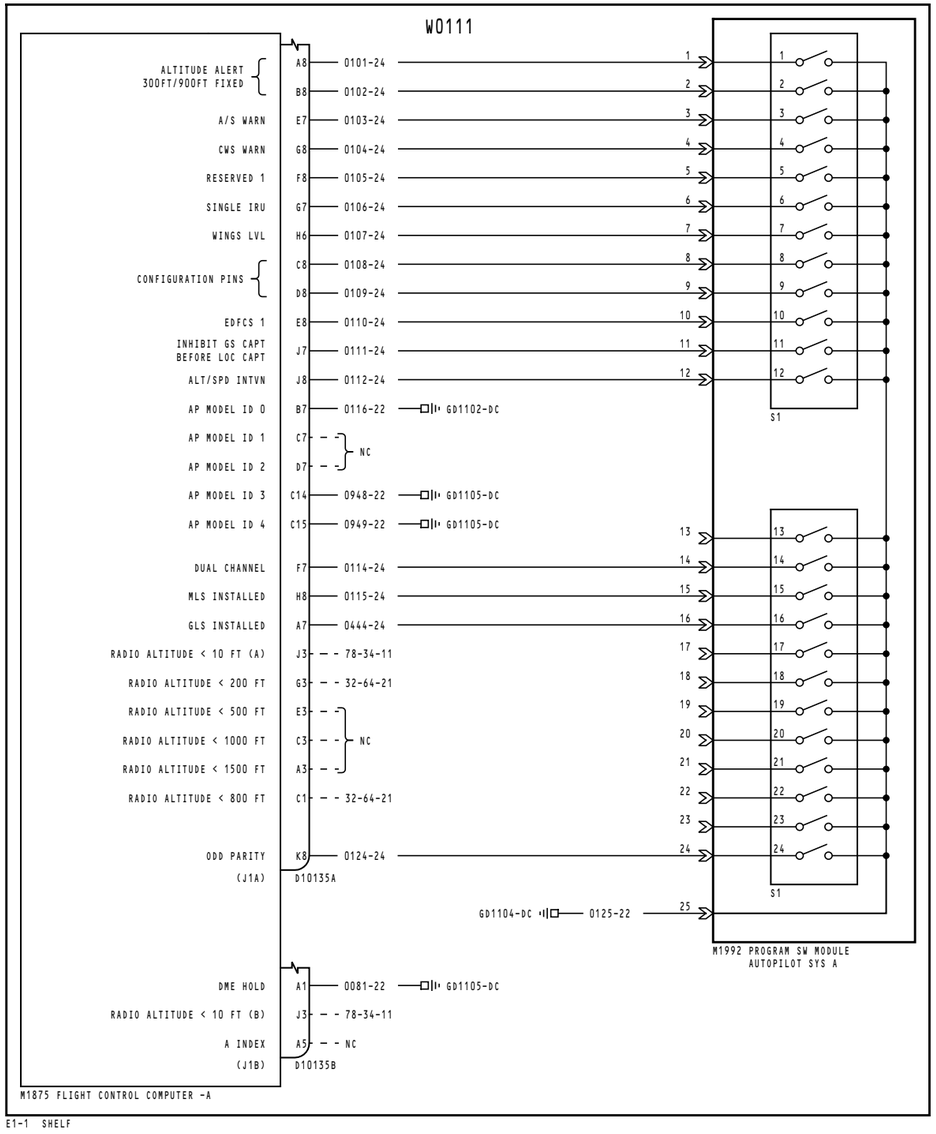

NOTES:

1. SEE CHART FOR SWITCH POSITION LOGIC "1" SWITCH IS ON (CLOSED) LOGIC "0" SWITCH IS OFF (OPEN)

1

M1992 (W0119)																							
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	0	1	1	0	0	1	0	0	1	1	1	0	1	0	1	0	0	0	0	0	0	0	1

ALL

DFCS - A AND B OPTION PINS

D280AM1215

22-11-75


Page 1
Sheet 1
May 15/2024

22-11-75

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

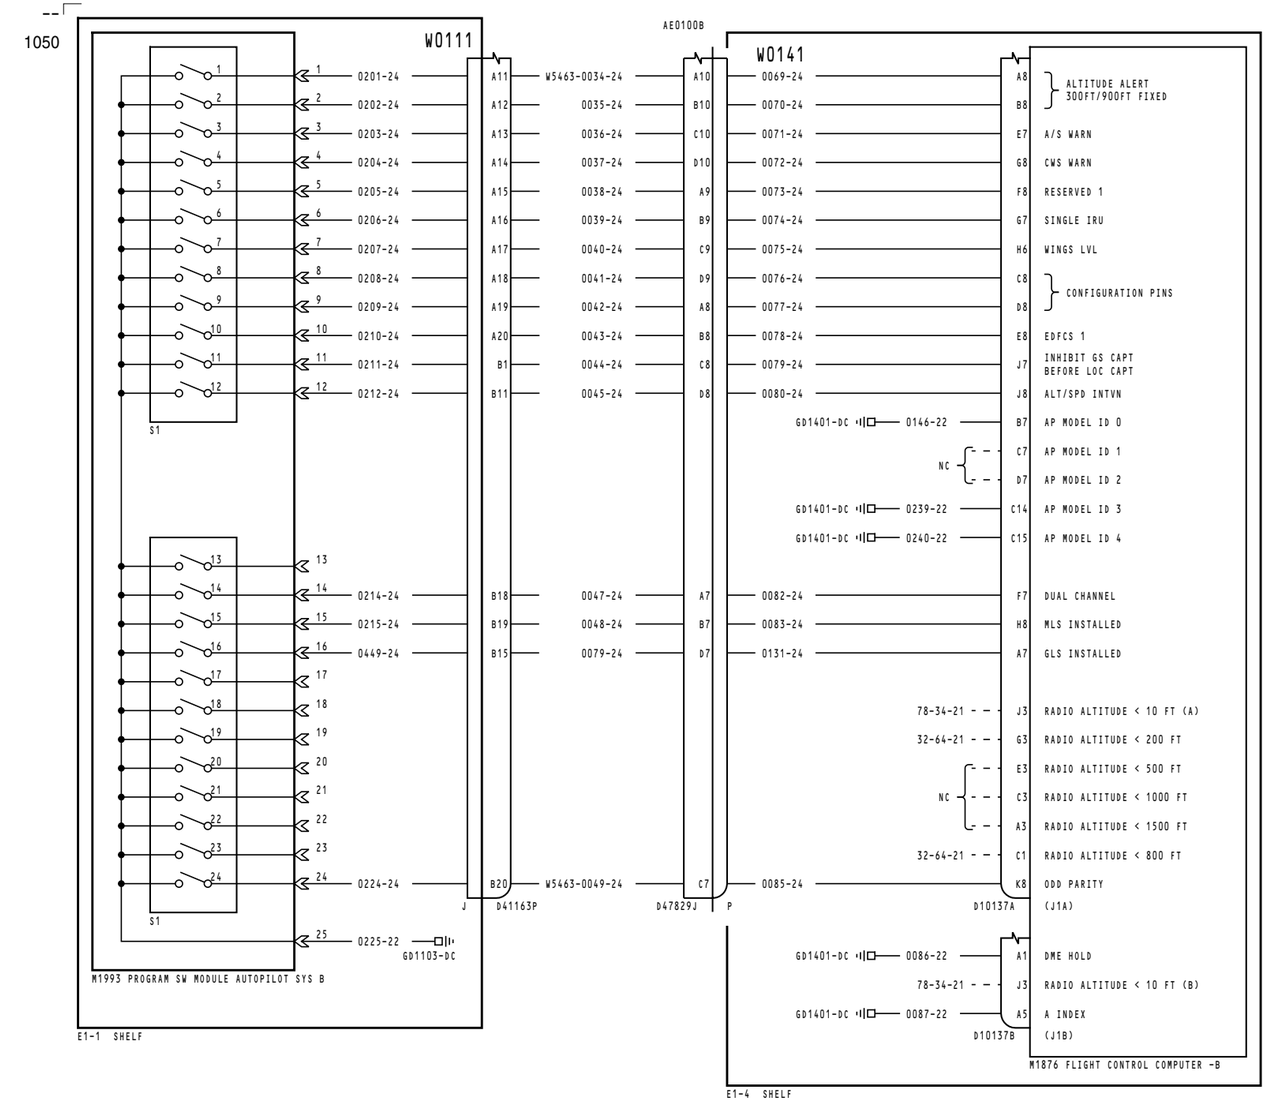

1	M1993																						(W0119)
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	0	0	1	1	0	0	1	0	0	1	1	1	0	1	0	1	0	0	0	0	0	0	0	1

NOTES:

1. SEE CHART FOR SWITCH POSITION
   LOGIC "1" SWITCH IS ON (CLOSED)
   LOGIC "0" SWITCH IS OFF (OPEN)

ALL	DFCS - A AND B OPTION PINS	22-11-75
	D280AM1215	Page 1 Sheet 2 May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-75

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

34

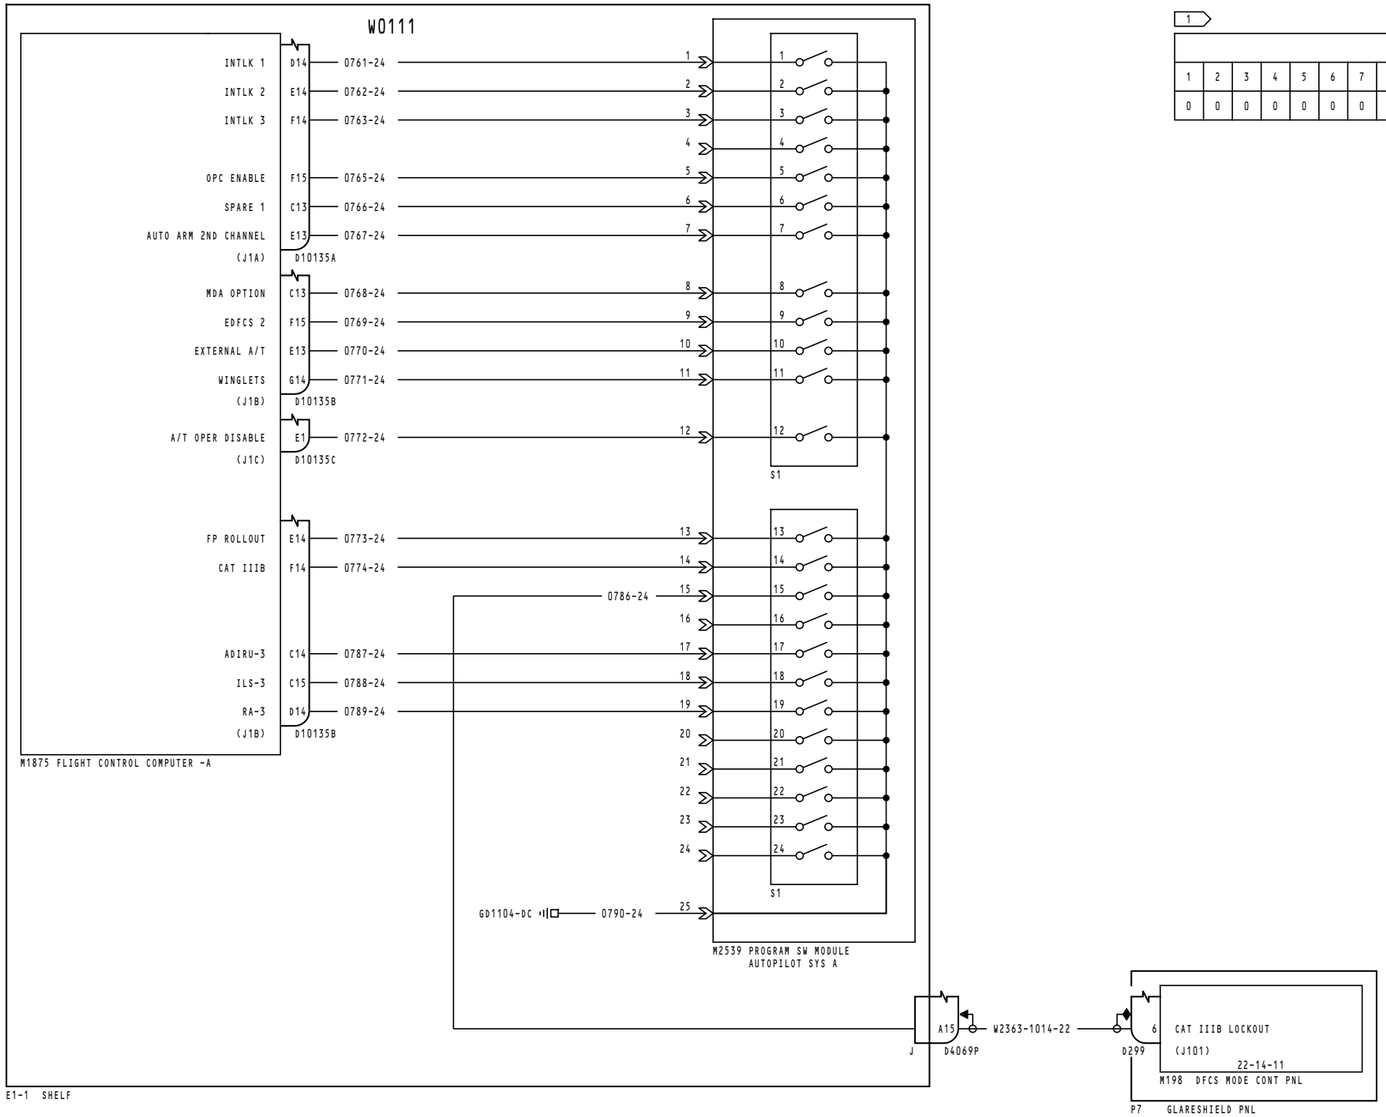

1	M2539																						(W0119)	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
1	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

NOTES:

1. SEE CHART FOR SWITCH POSITION
   LOGIC "1" SWITCH IS ON (CLOSED)
   LOGIC "0" SWITCH IS OFF (OPEN)


ALL	DFCS - A AND B OPTION PINS	22-11-75 Page 1 Sheet 3 May 15/2024
	D280AM1215	

22-11-75
Page 1
Sheet 3
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
46

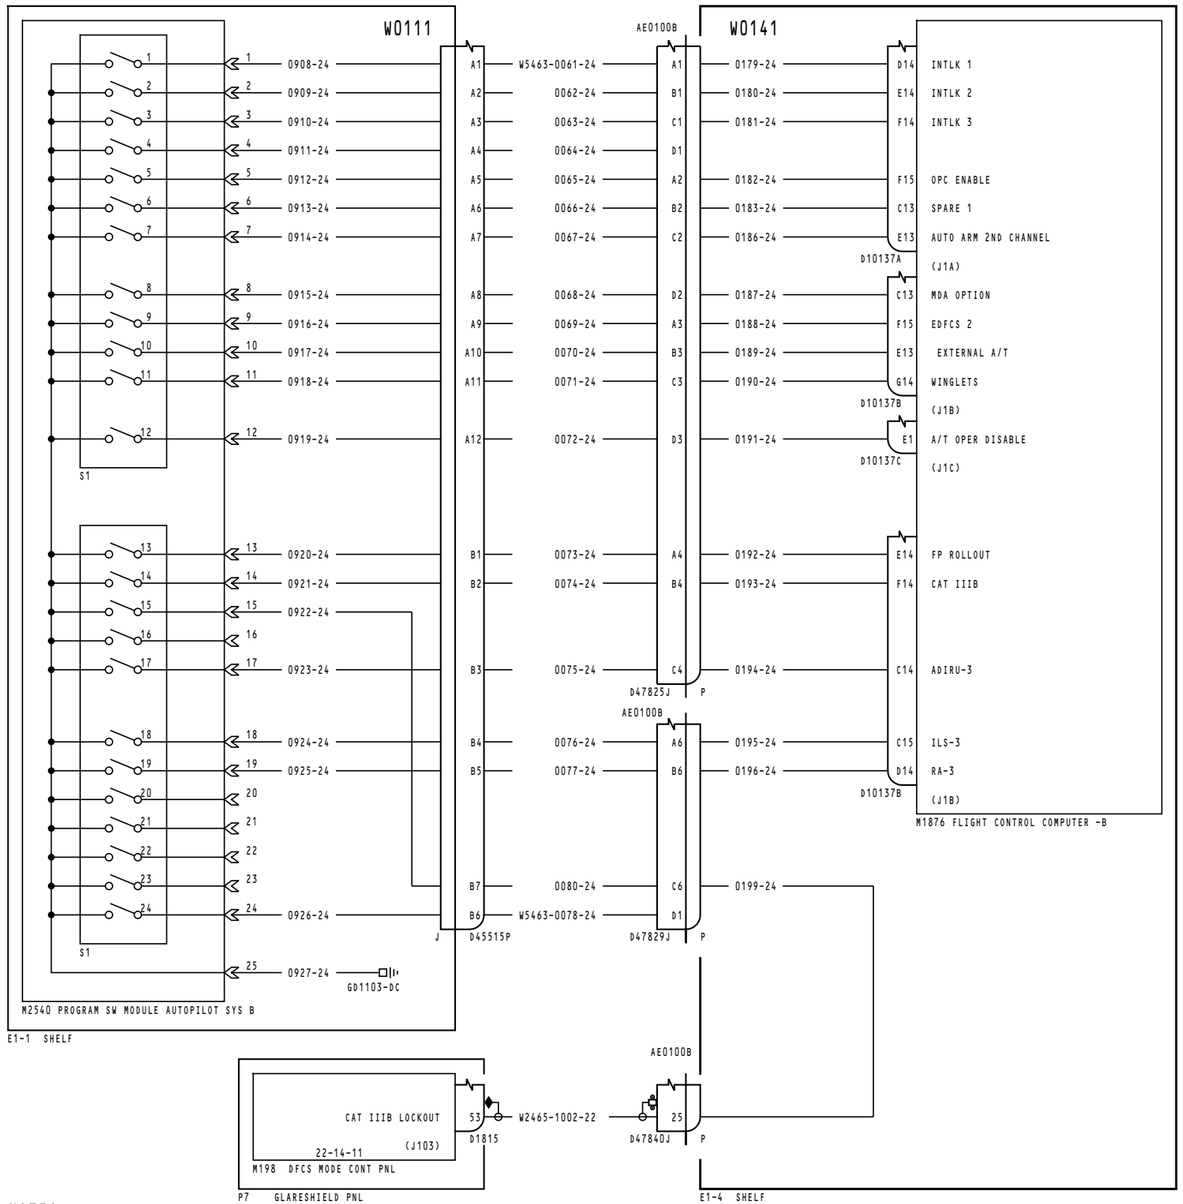

NOTES:

1 SEE CHART FOR SWITCH POSITION
LOGIC "1" SWITCH IS ON (CLOSED)
LOGIC "0" SWITCH IS OFF (OPEN)

1


M2540 (W0119)																							
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-11-75

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

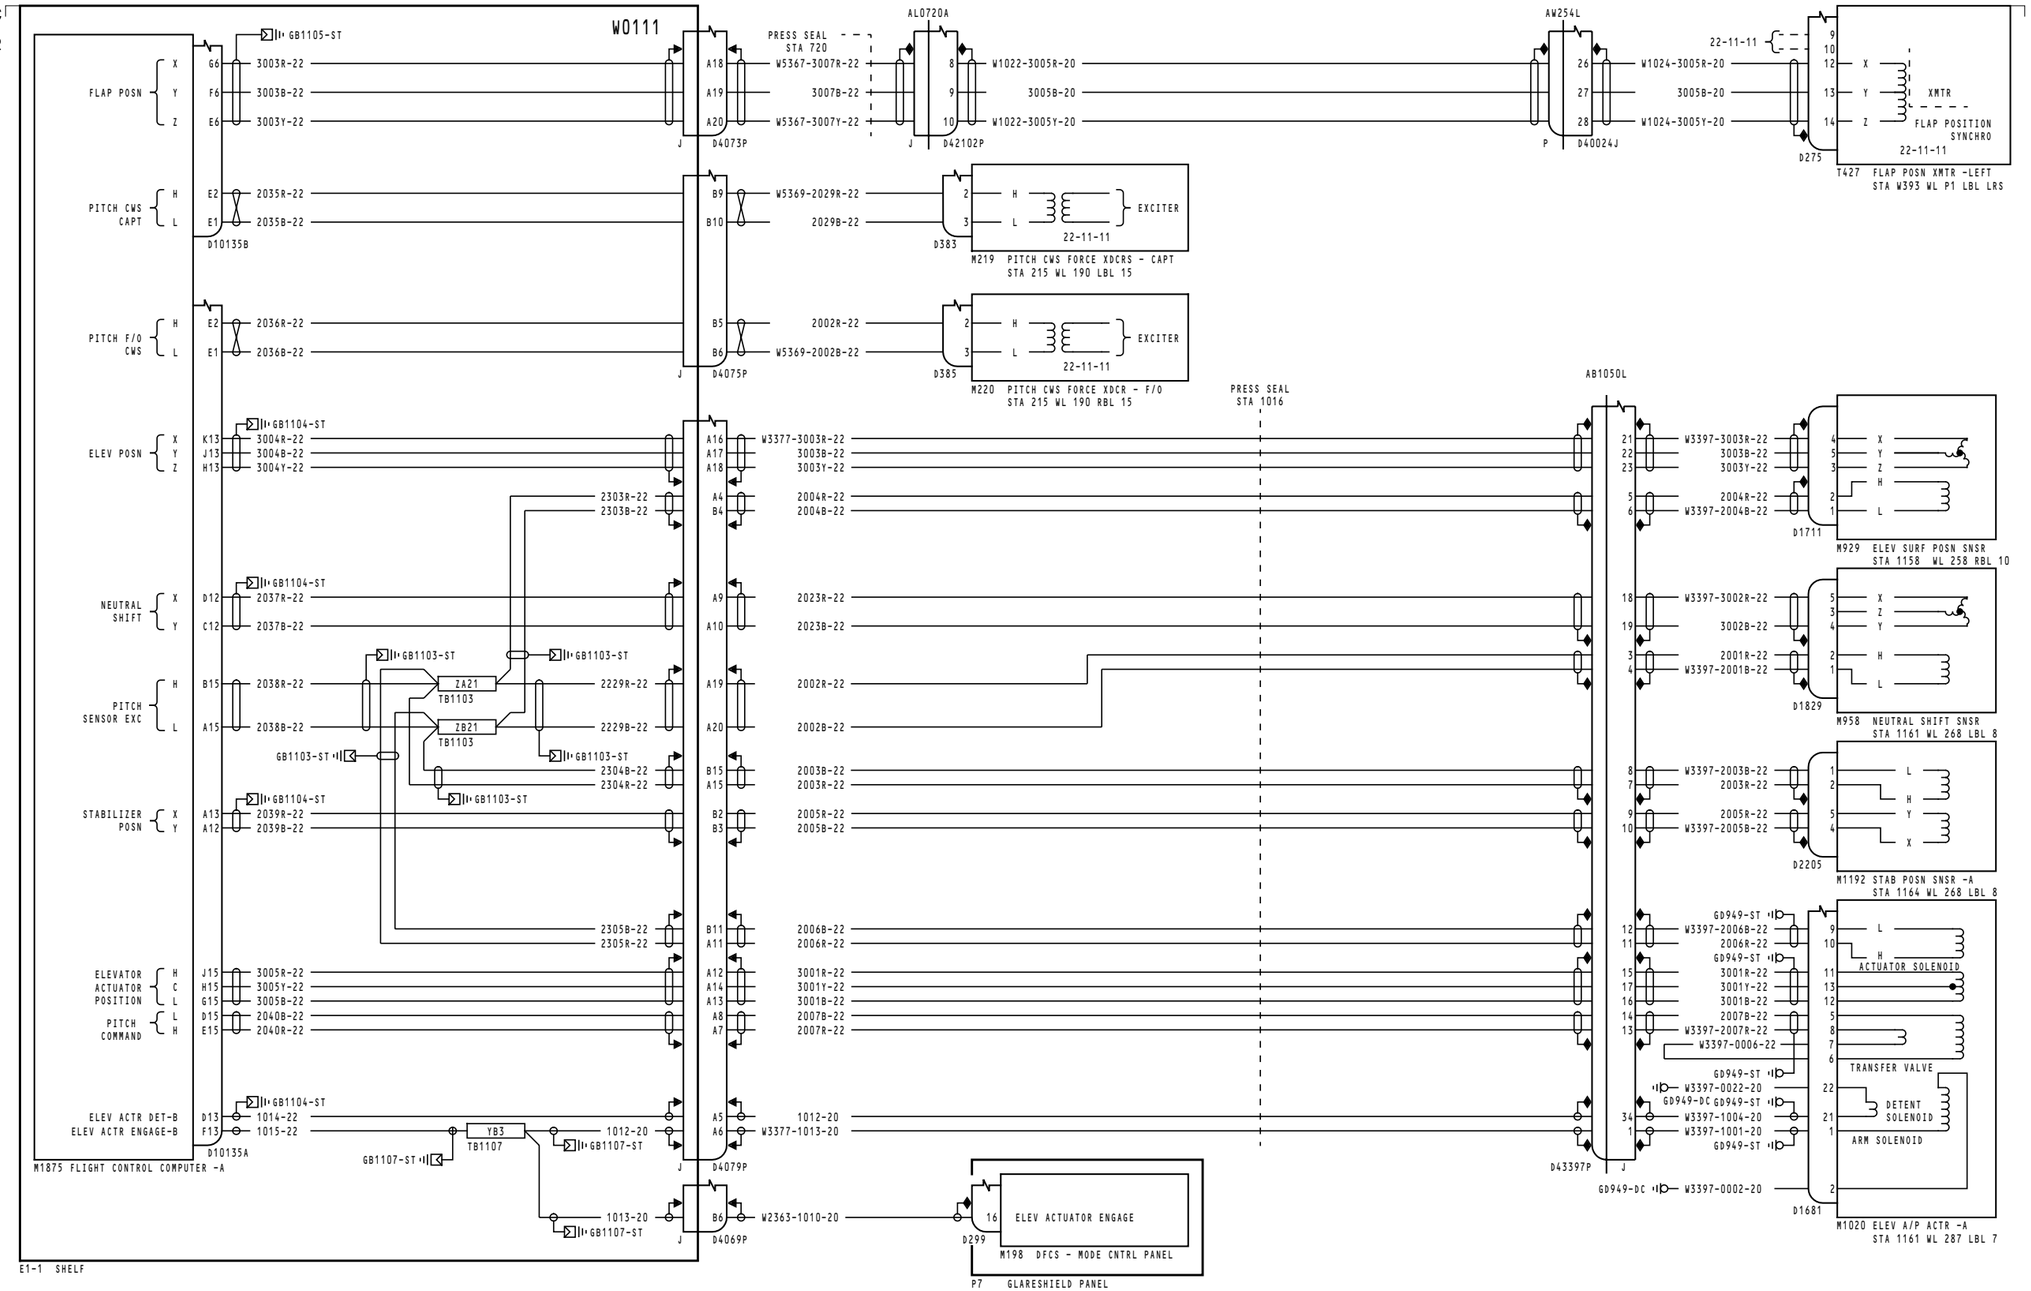


22-12-31

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

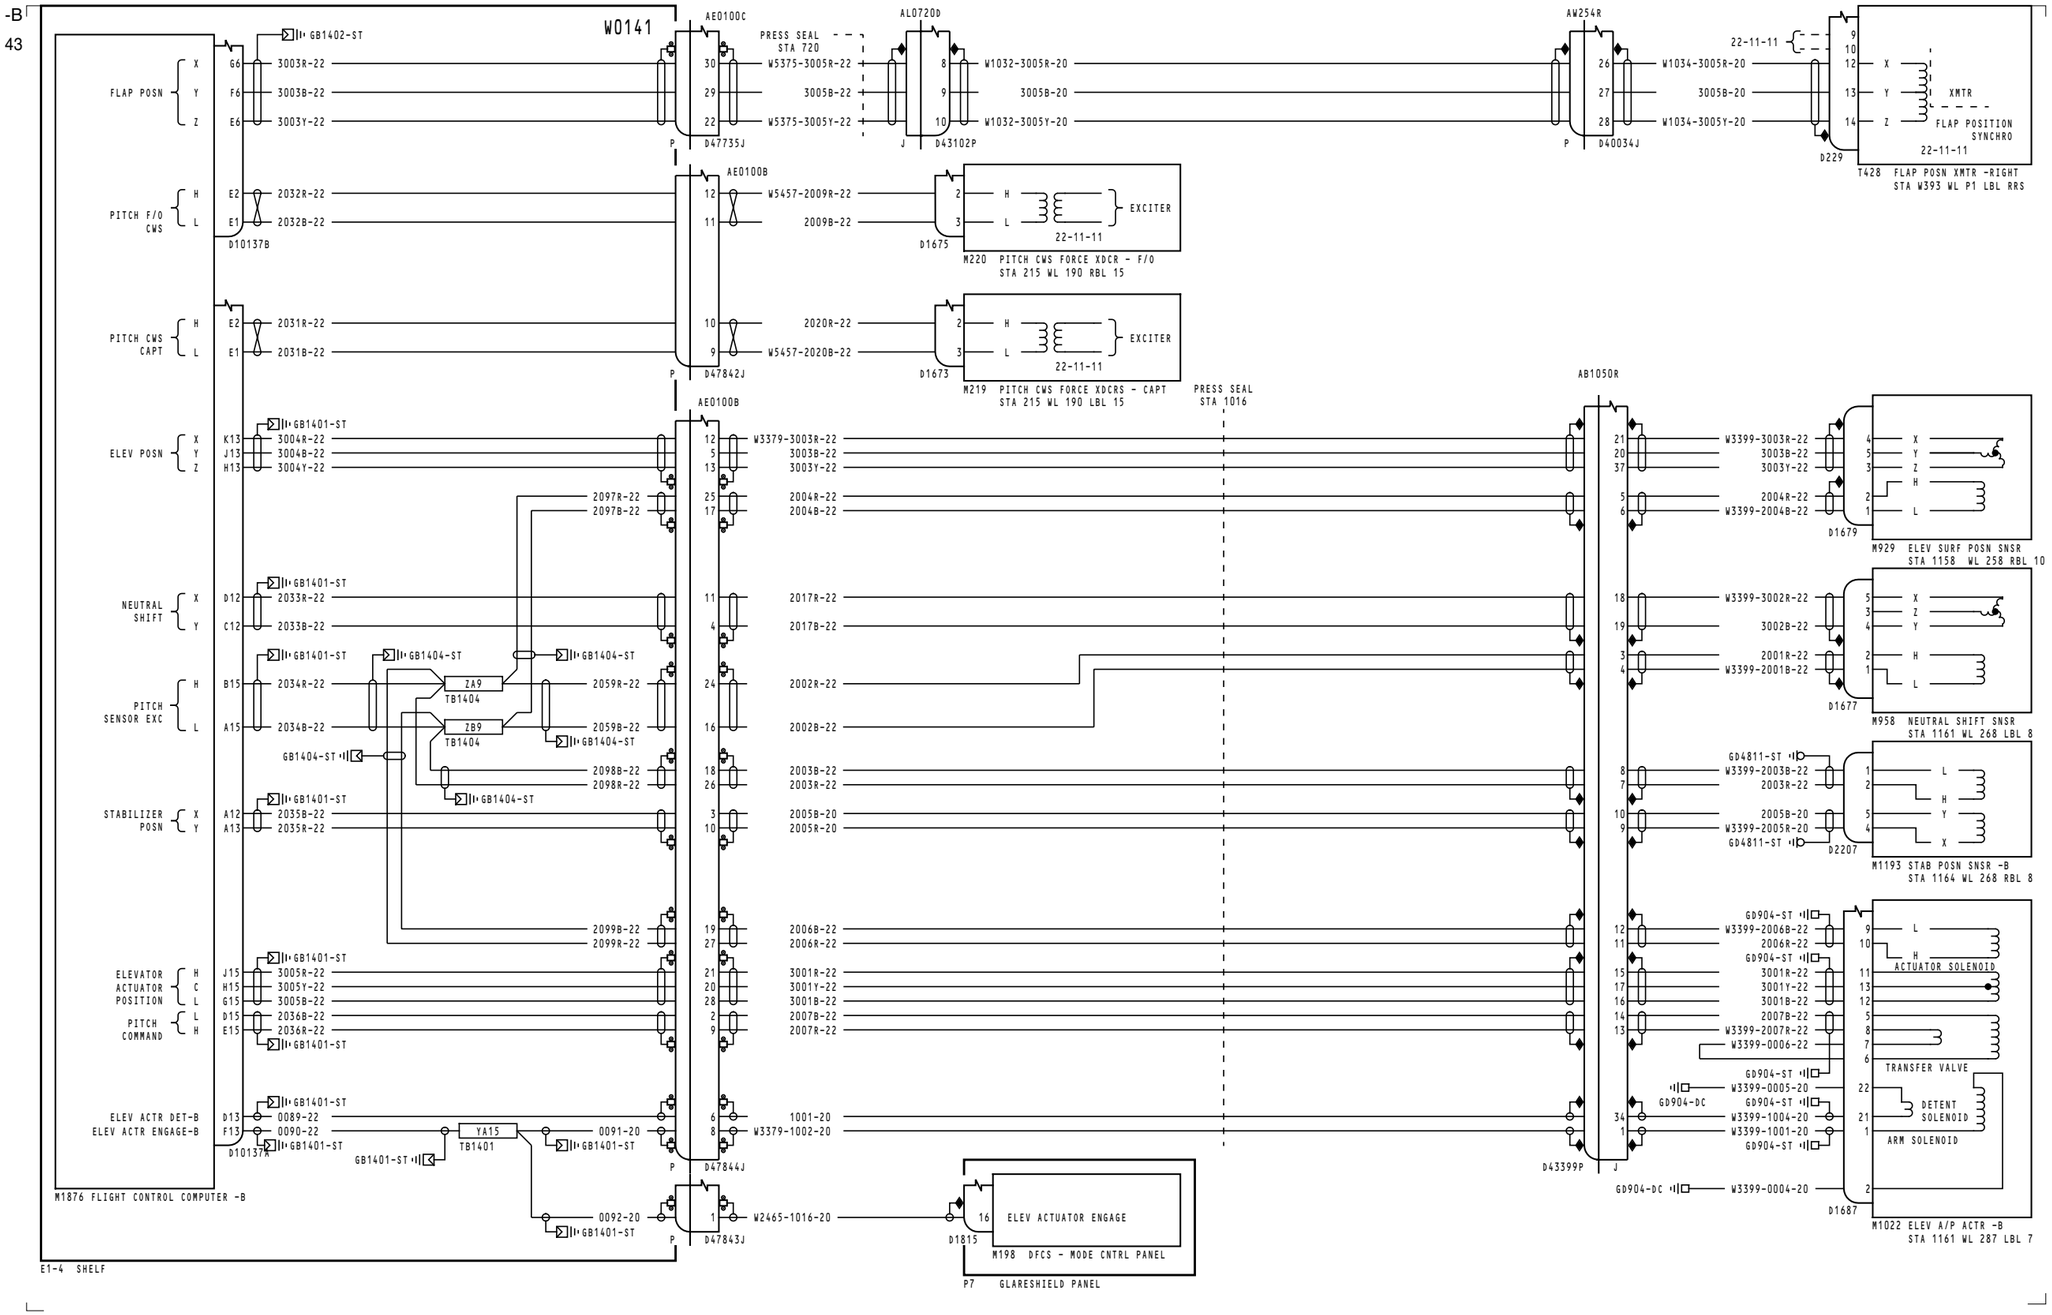

22-12-41


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-E
30

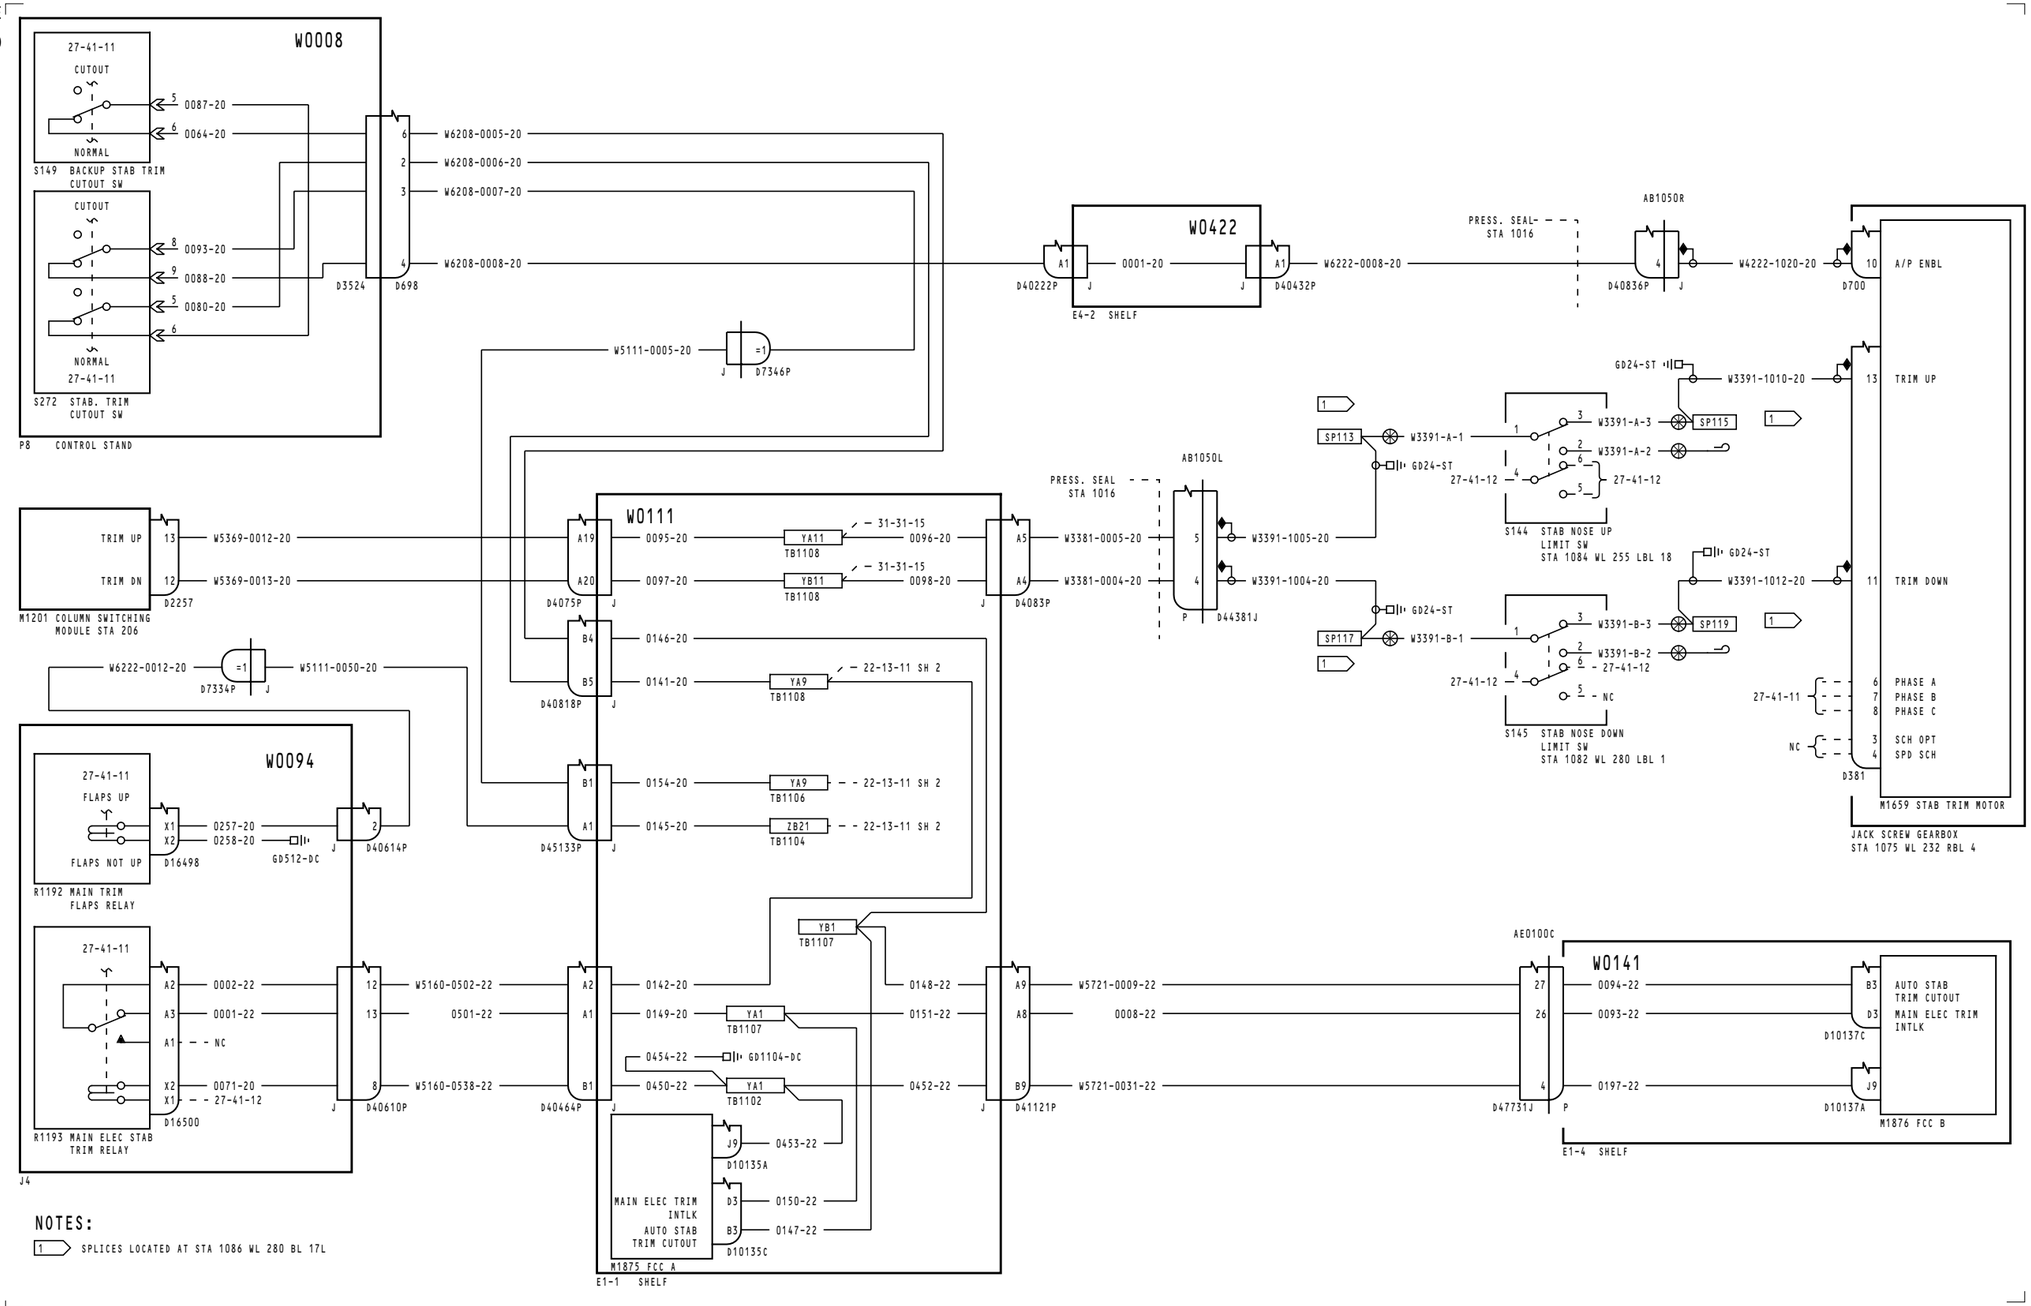

NOTES:

1 SPLICES LOCATED AT STA 1086 WL 280 BL 17L

ALL

DFCS - A AND B SPEED AND STABILIZER TRIM

D280AM1215


22-13-11

Page 1
Sheet 1
May 15/2024

22-13-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

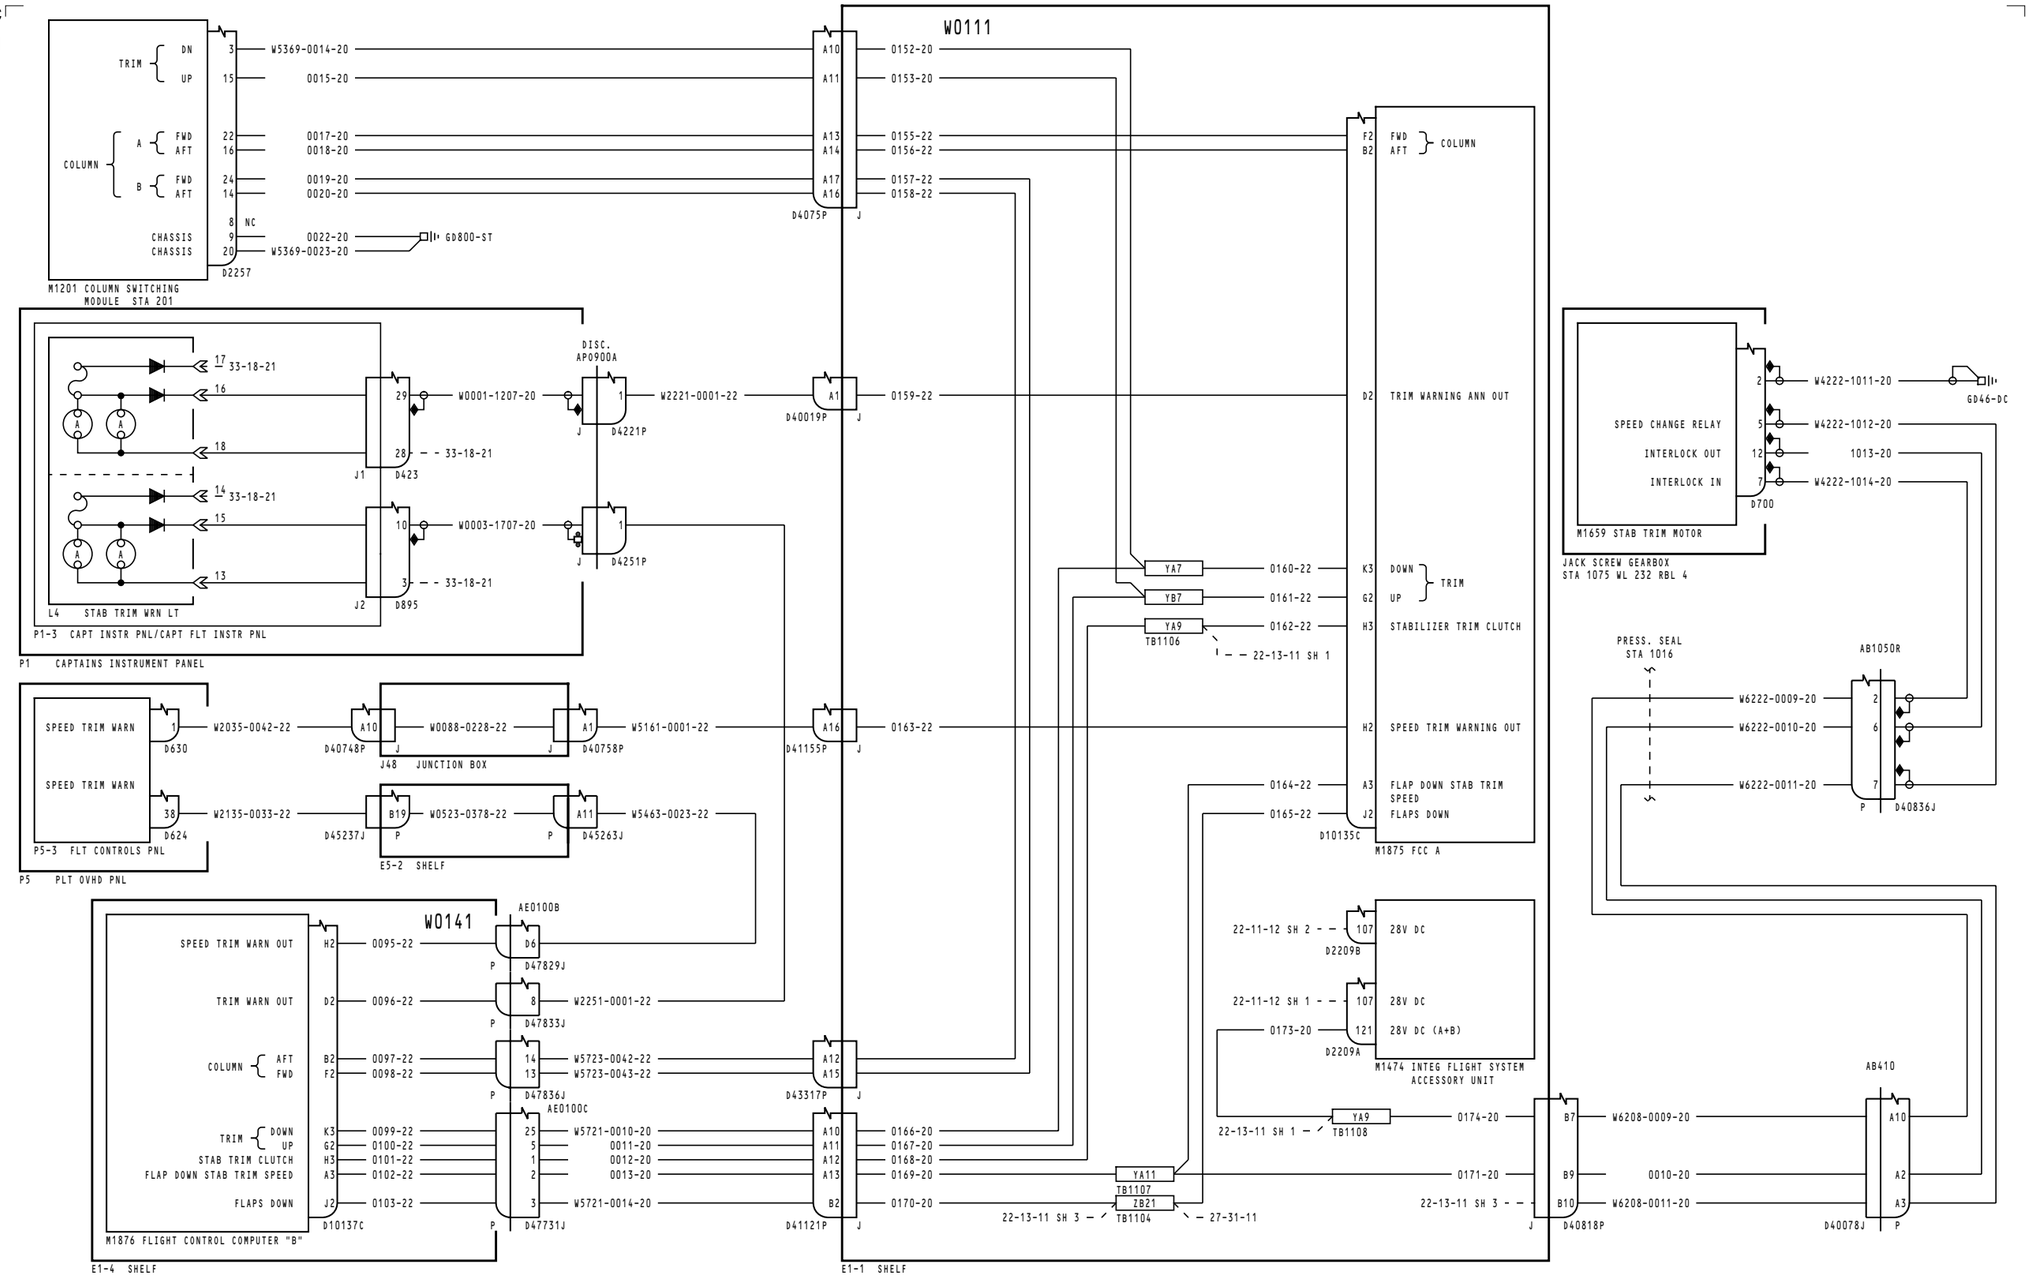


ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-D

5

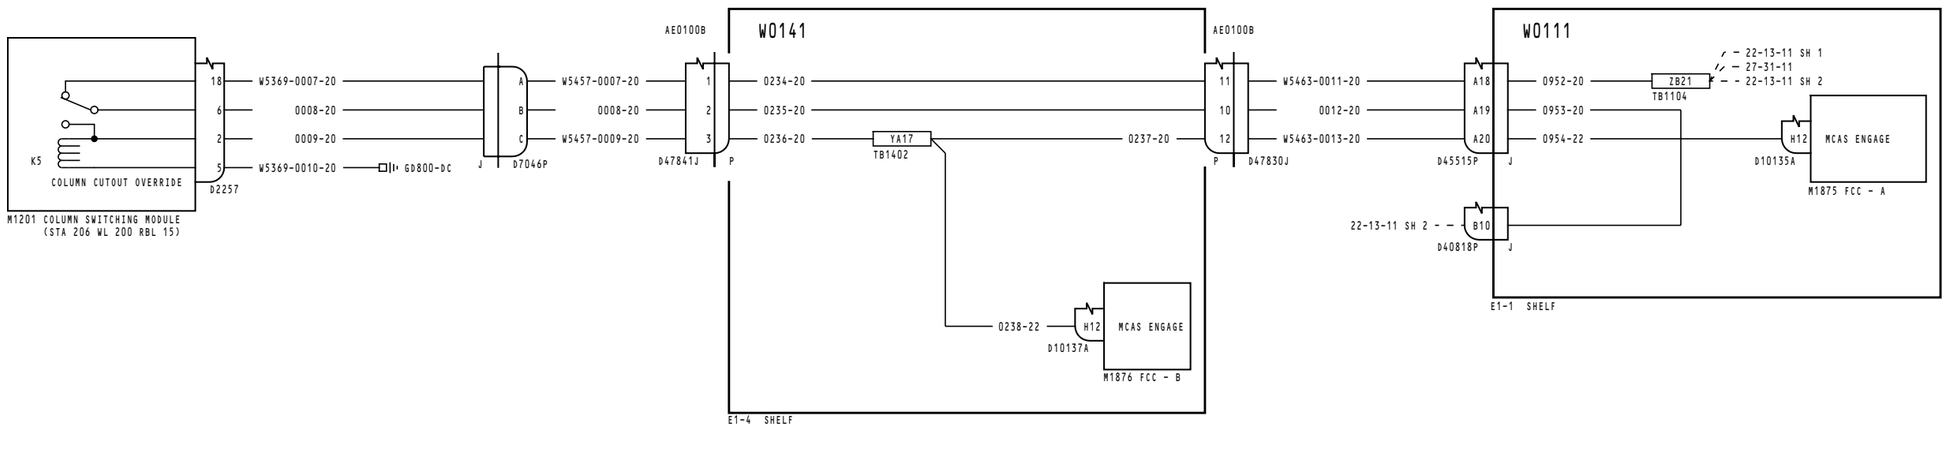

ALL	DFCS - A AND B SPEED AND STABILIZER TRIM
	D280AM1215


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-13-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL


-C
58

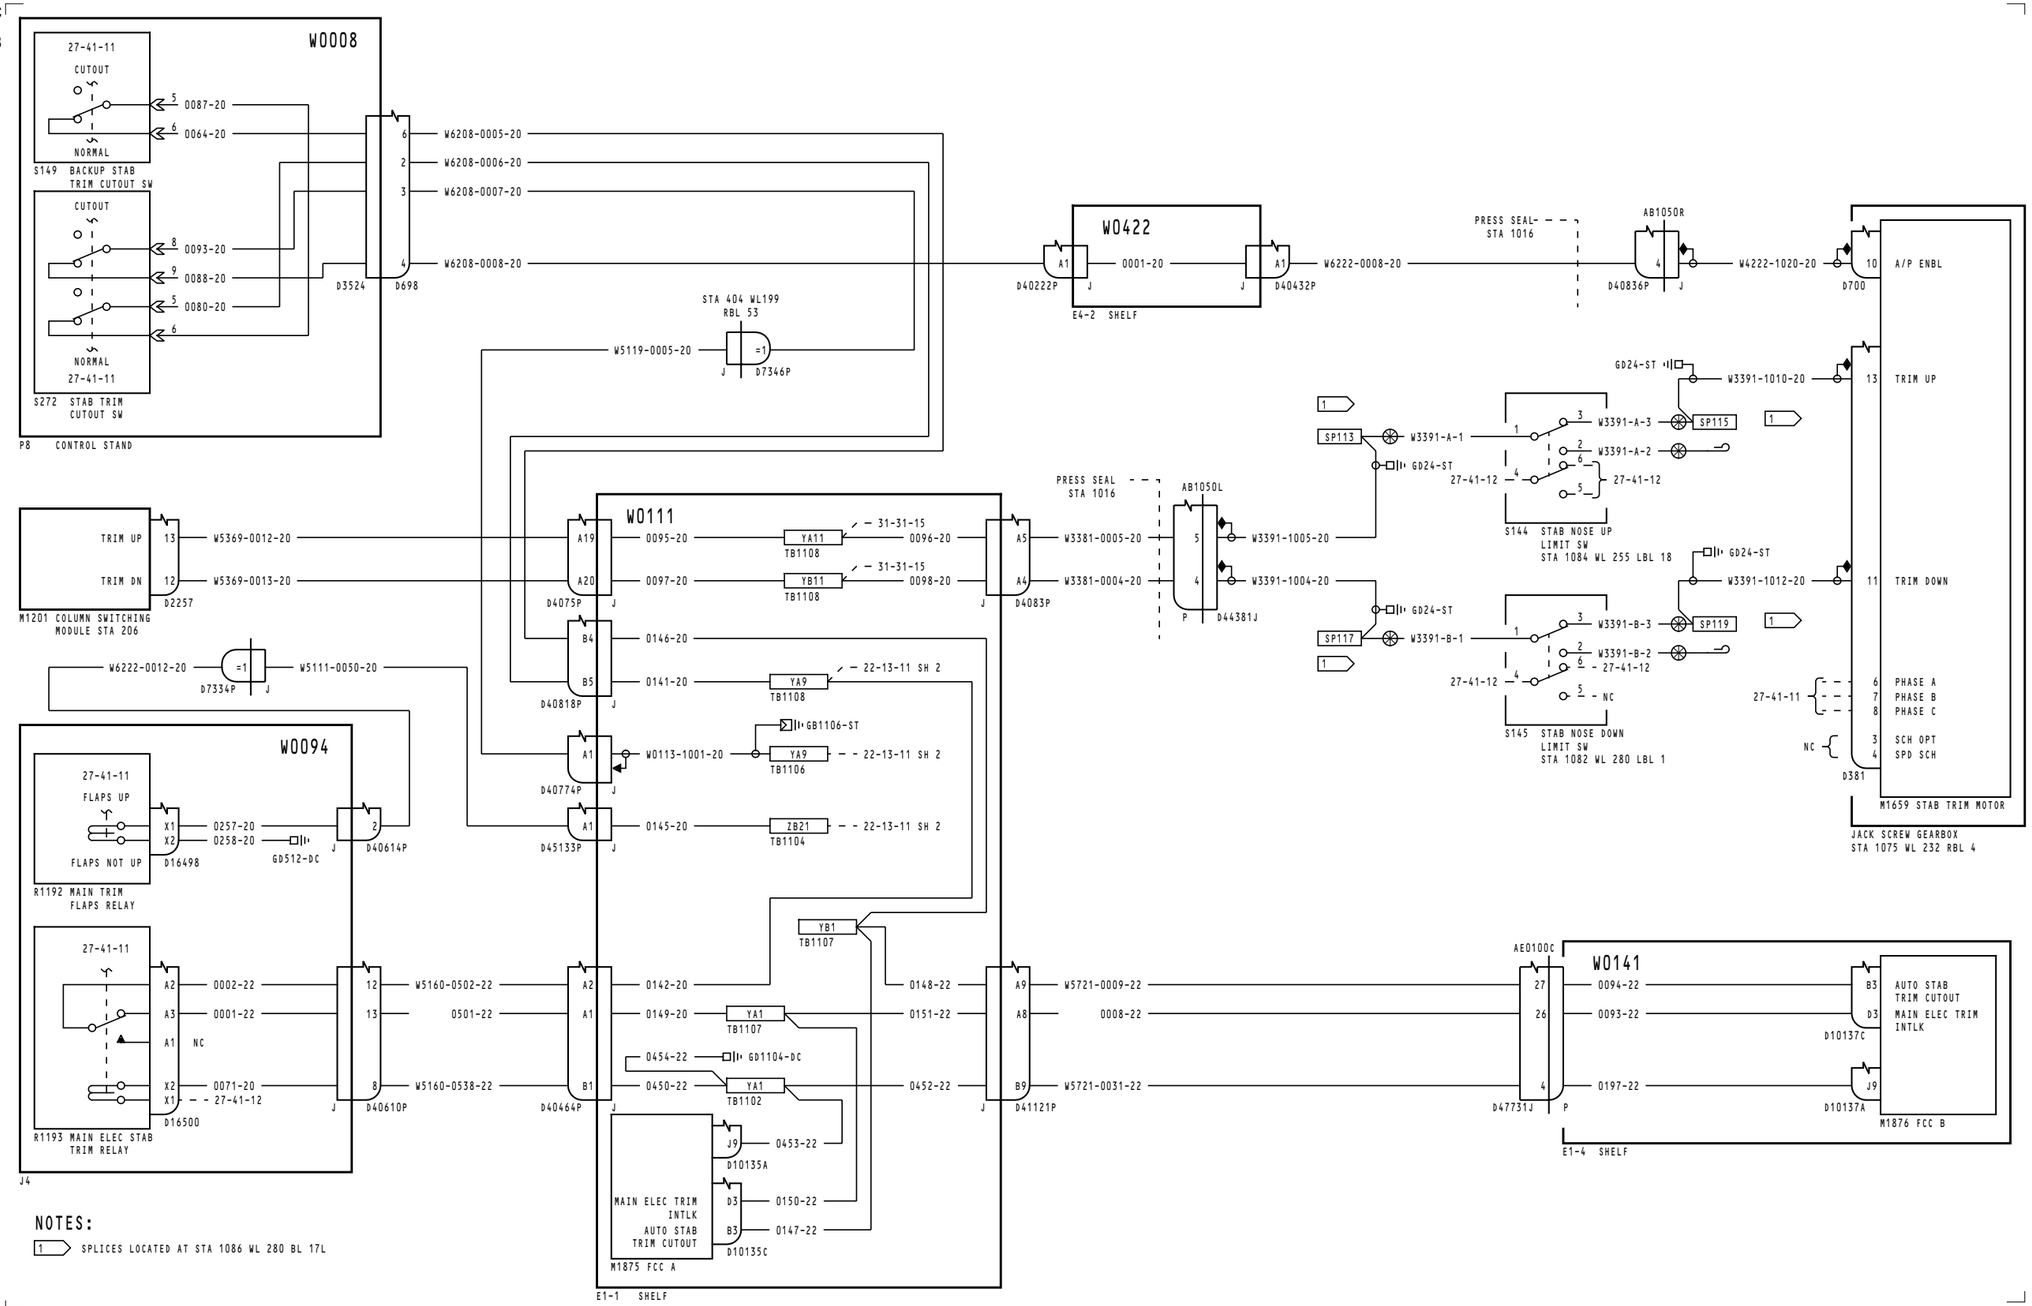

22-13-11


Page 1.1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

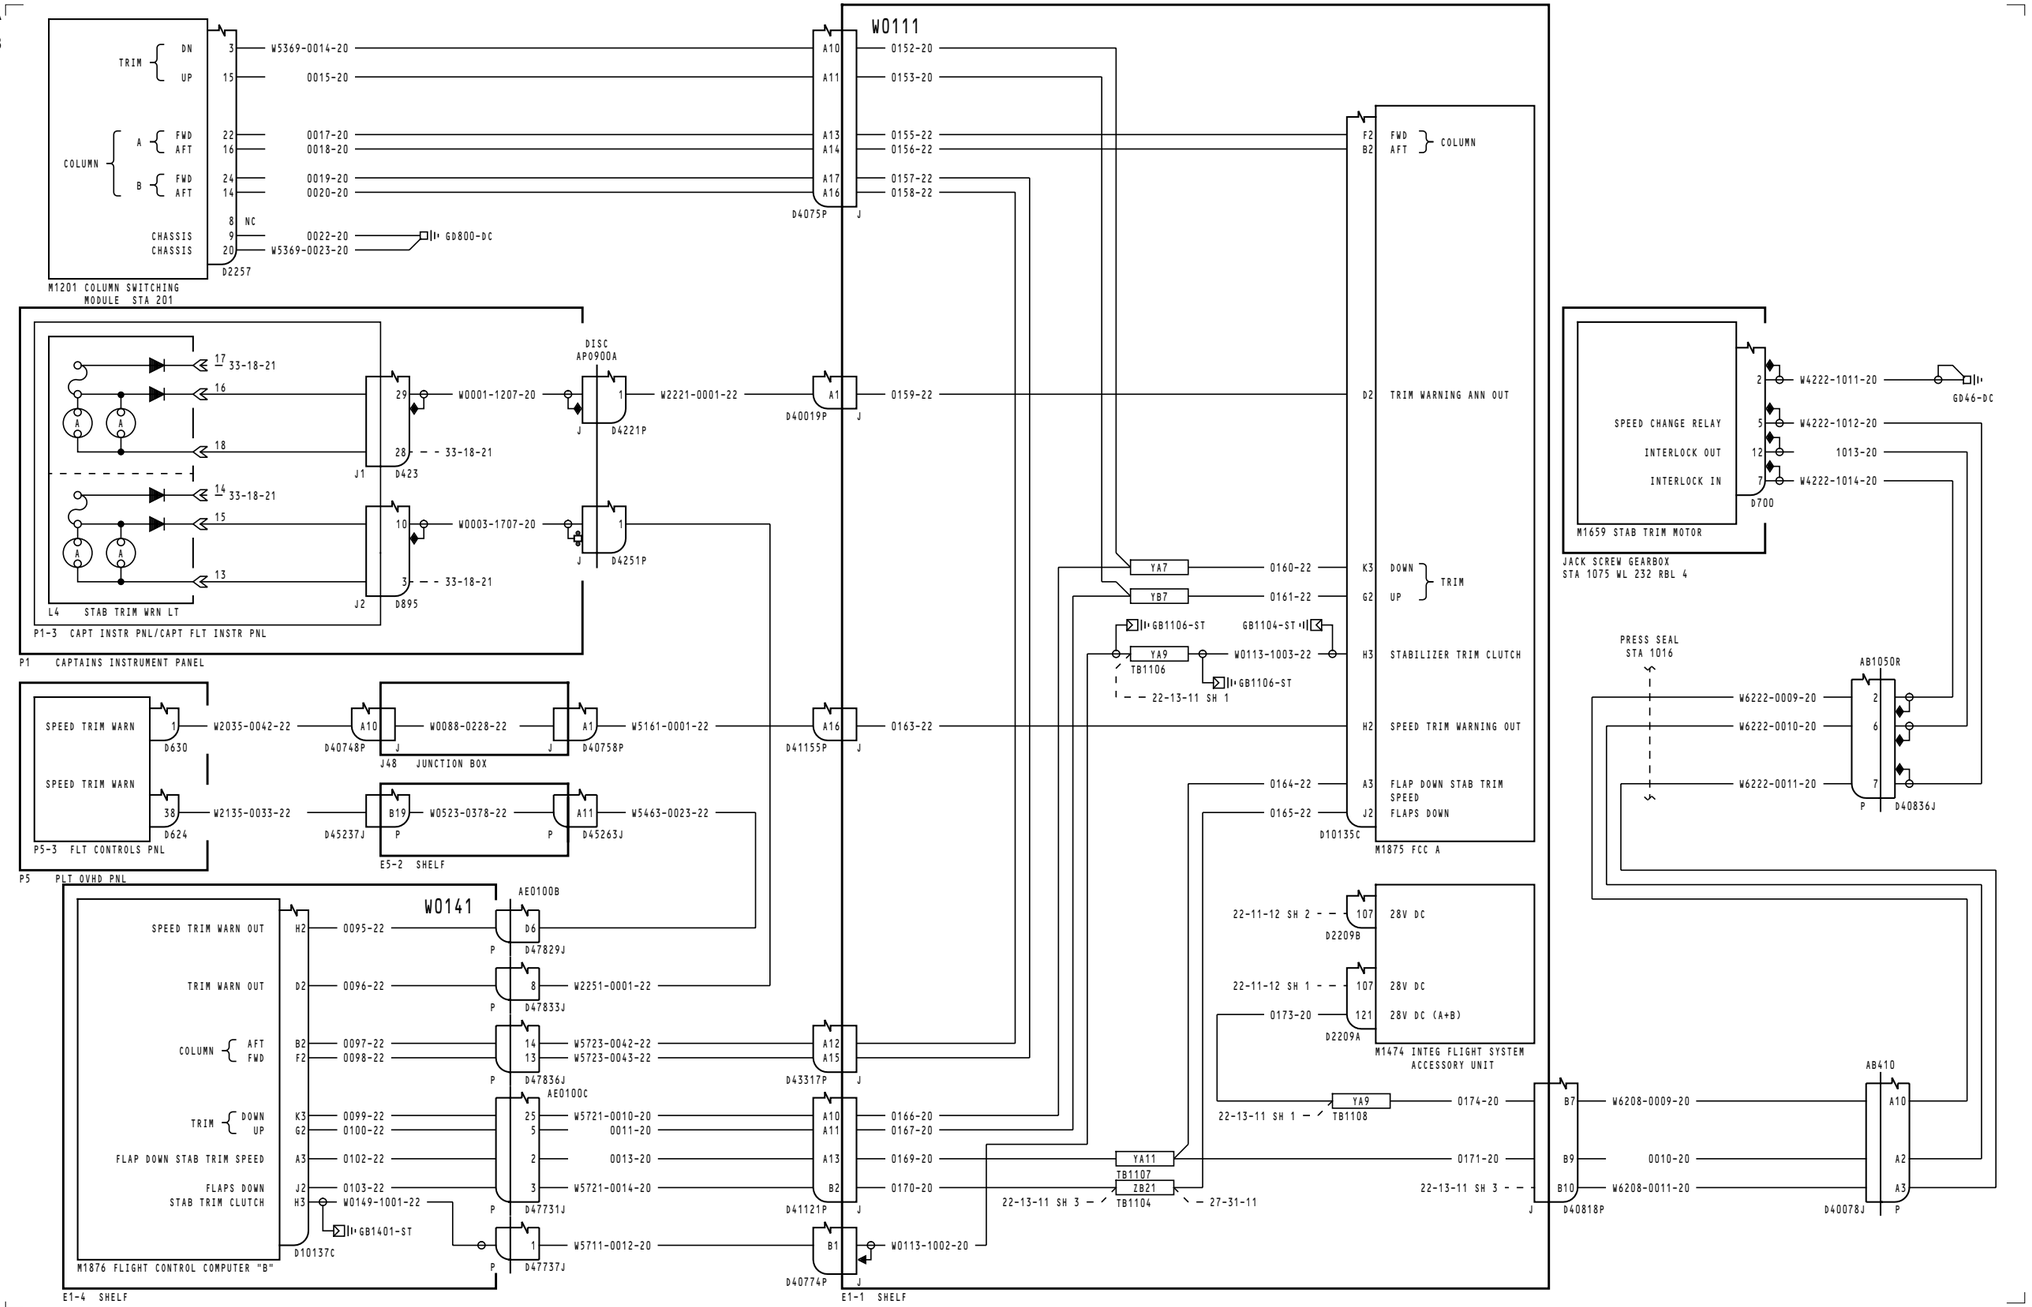

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

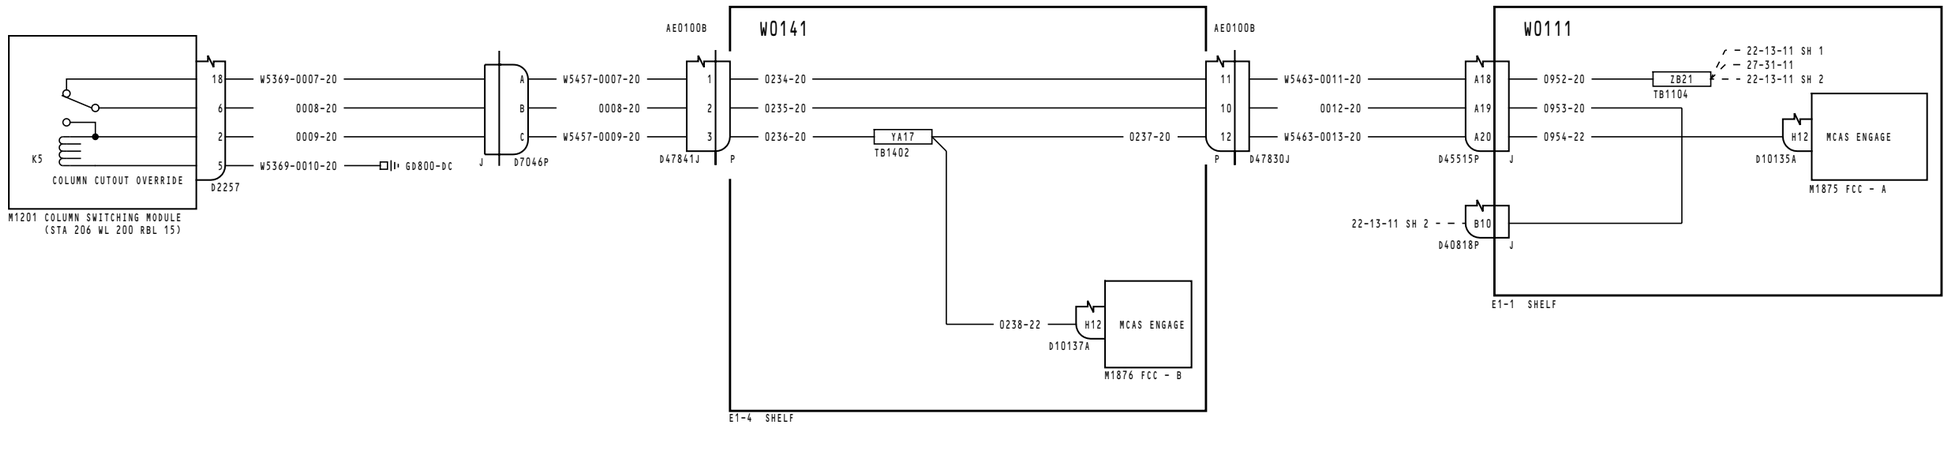


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-13-11

Page 1.1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
22

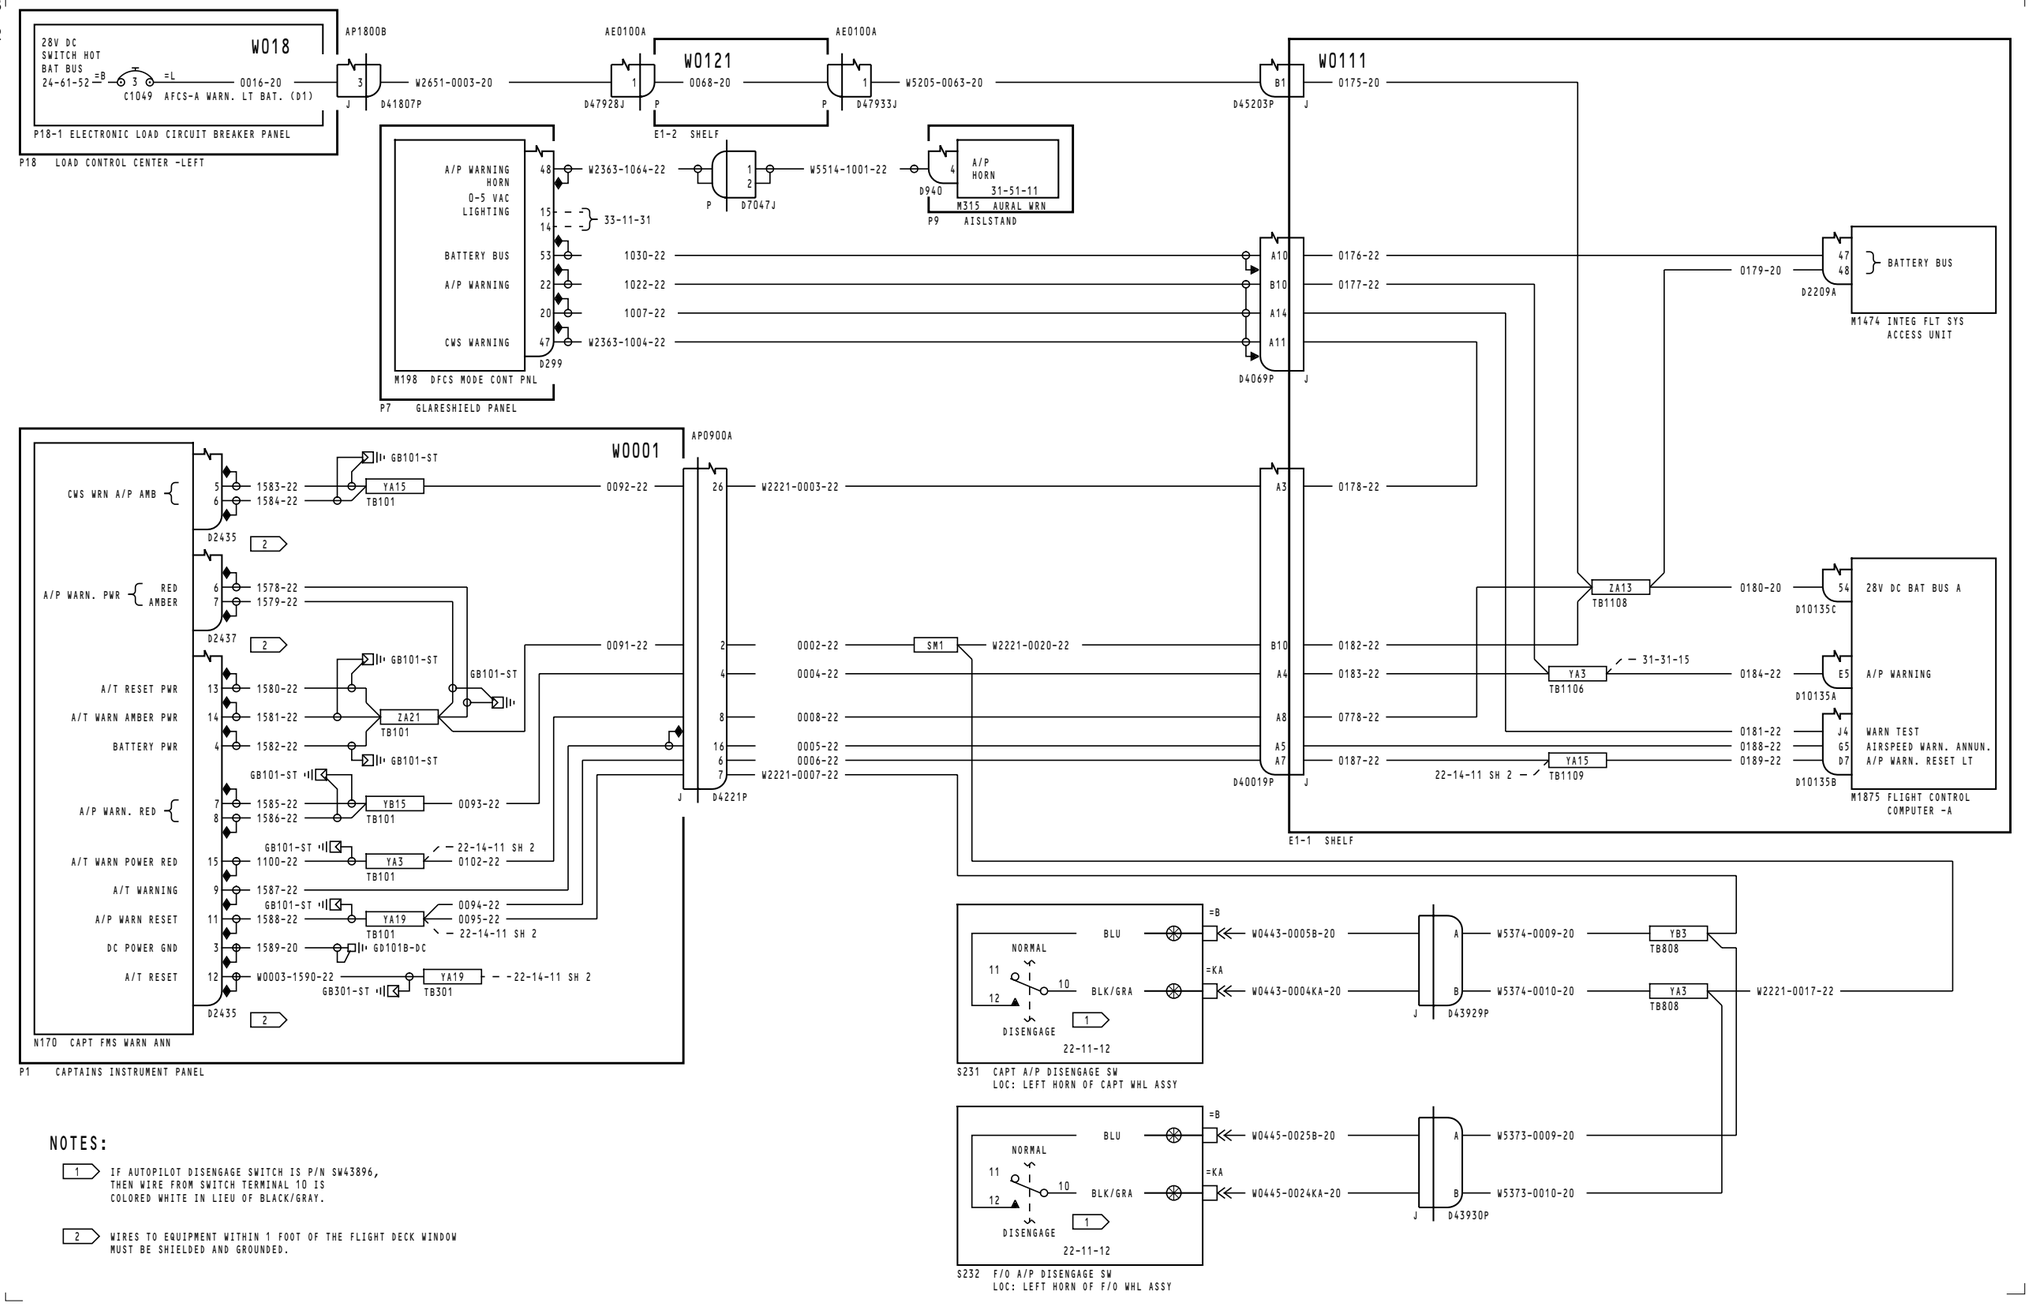

NOTES:

1. IF AUTOPILOT DISENGAGE SWITCH IS P/N SW43896, THEN WIRE FROM SWITCH TERMINAL 10 IS COLORED WHITE IN LIEU OF BLACK/GRAY.


2. WIRES TO EQUIPMENT WITHIN 1 FOOT OF THE FLIGHT DECK WINDOW MUST BE SHIELDED AND GROUNDED.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-14-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

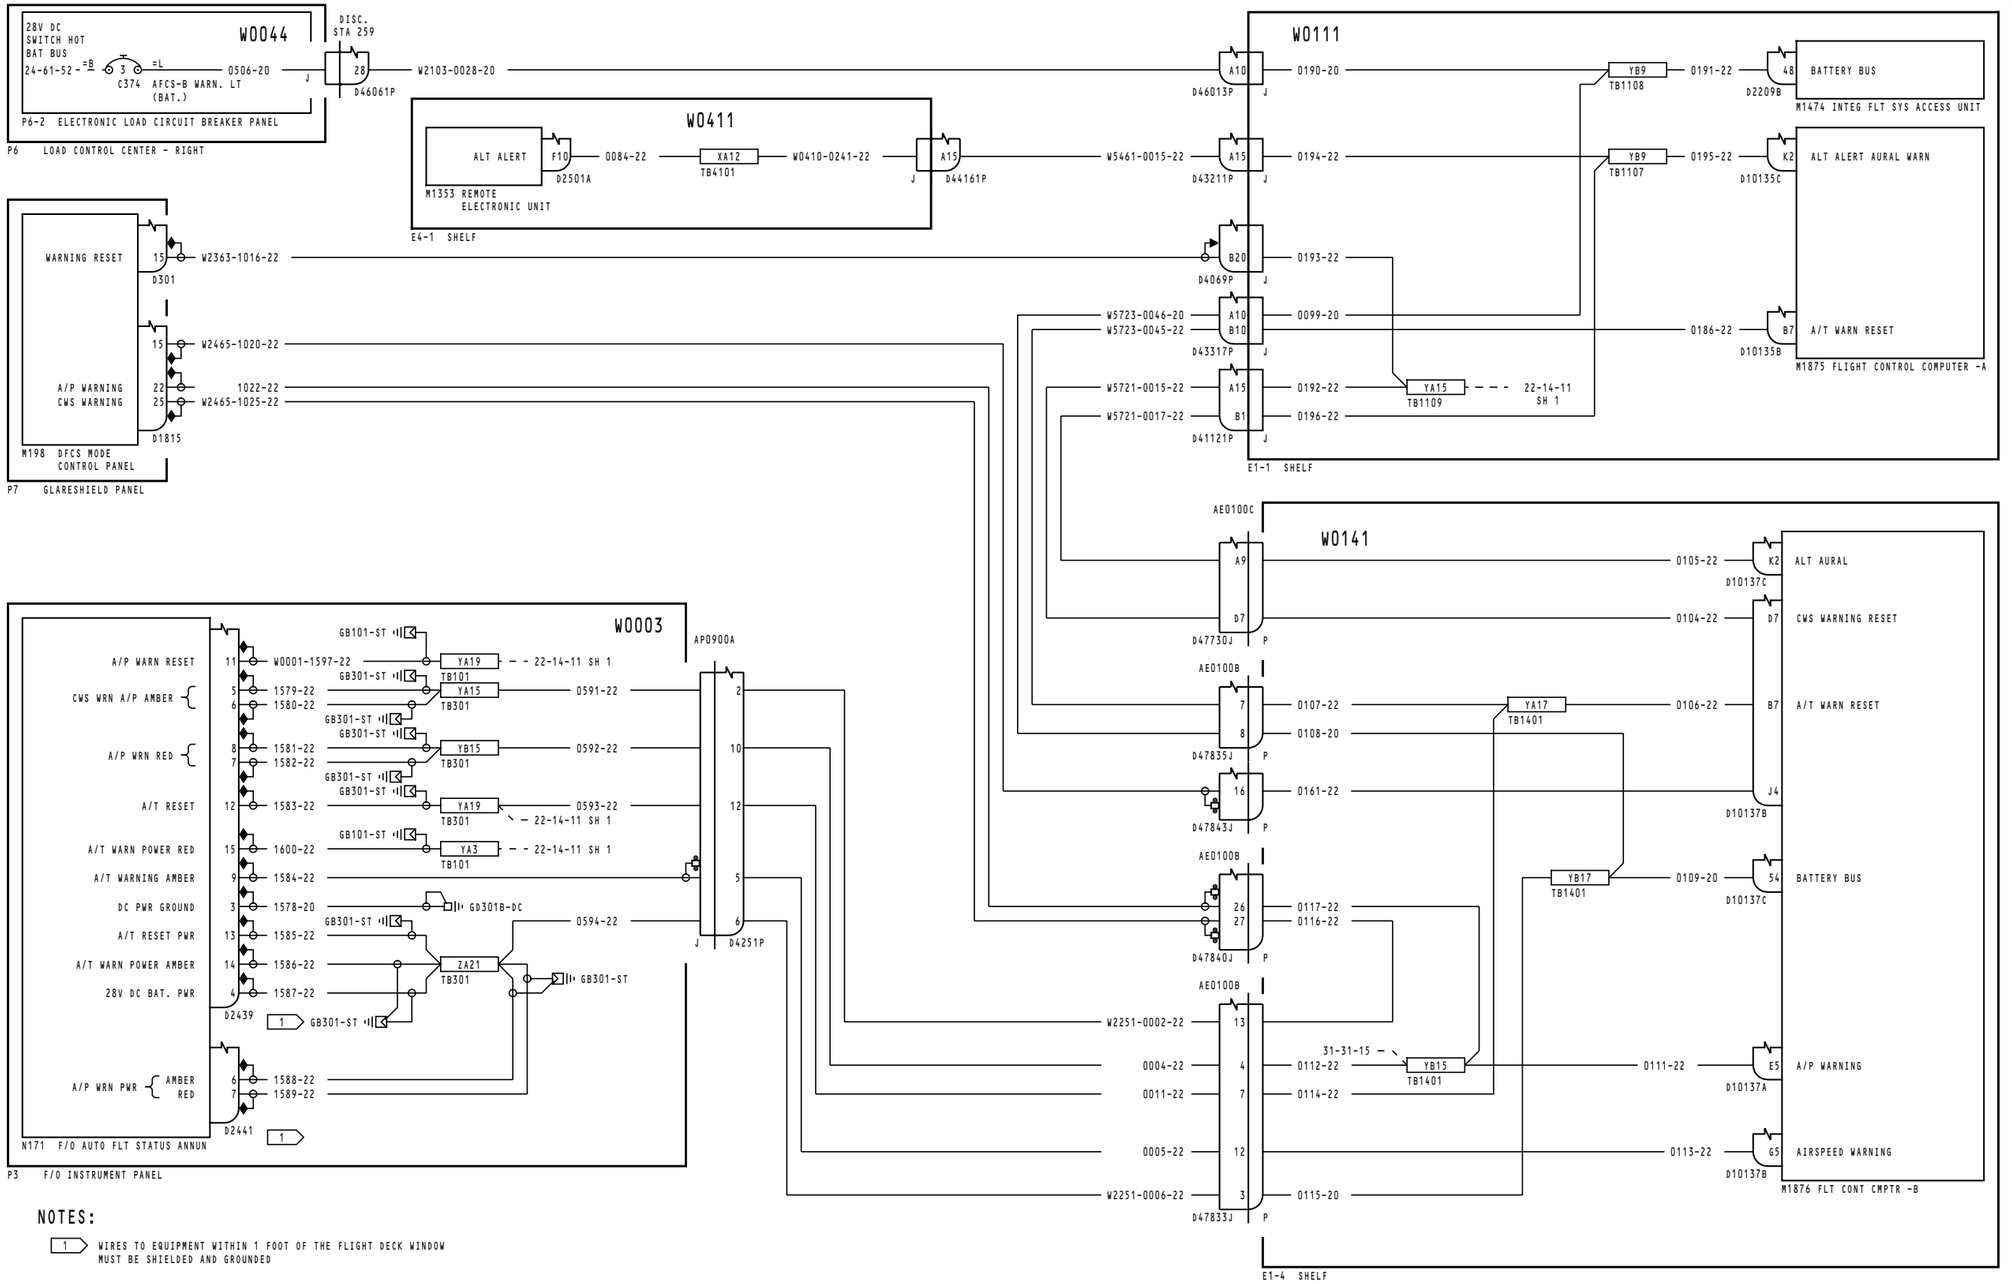


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-14-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

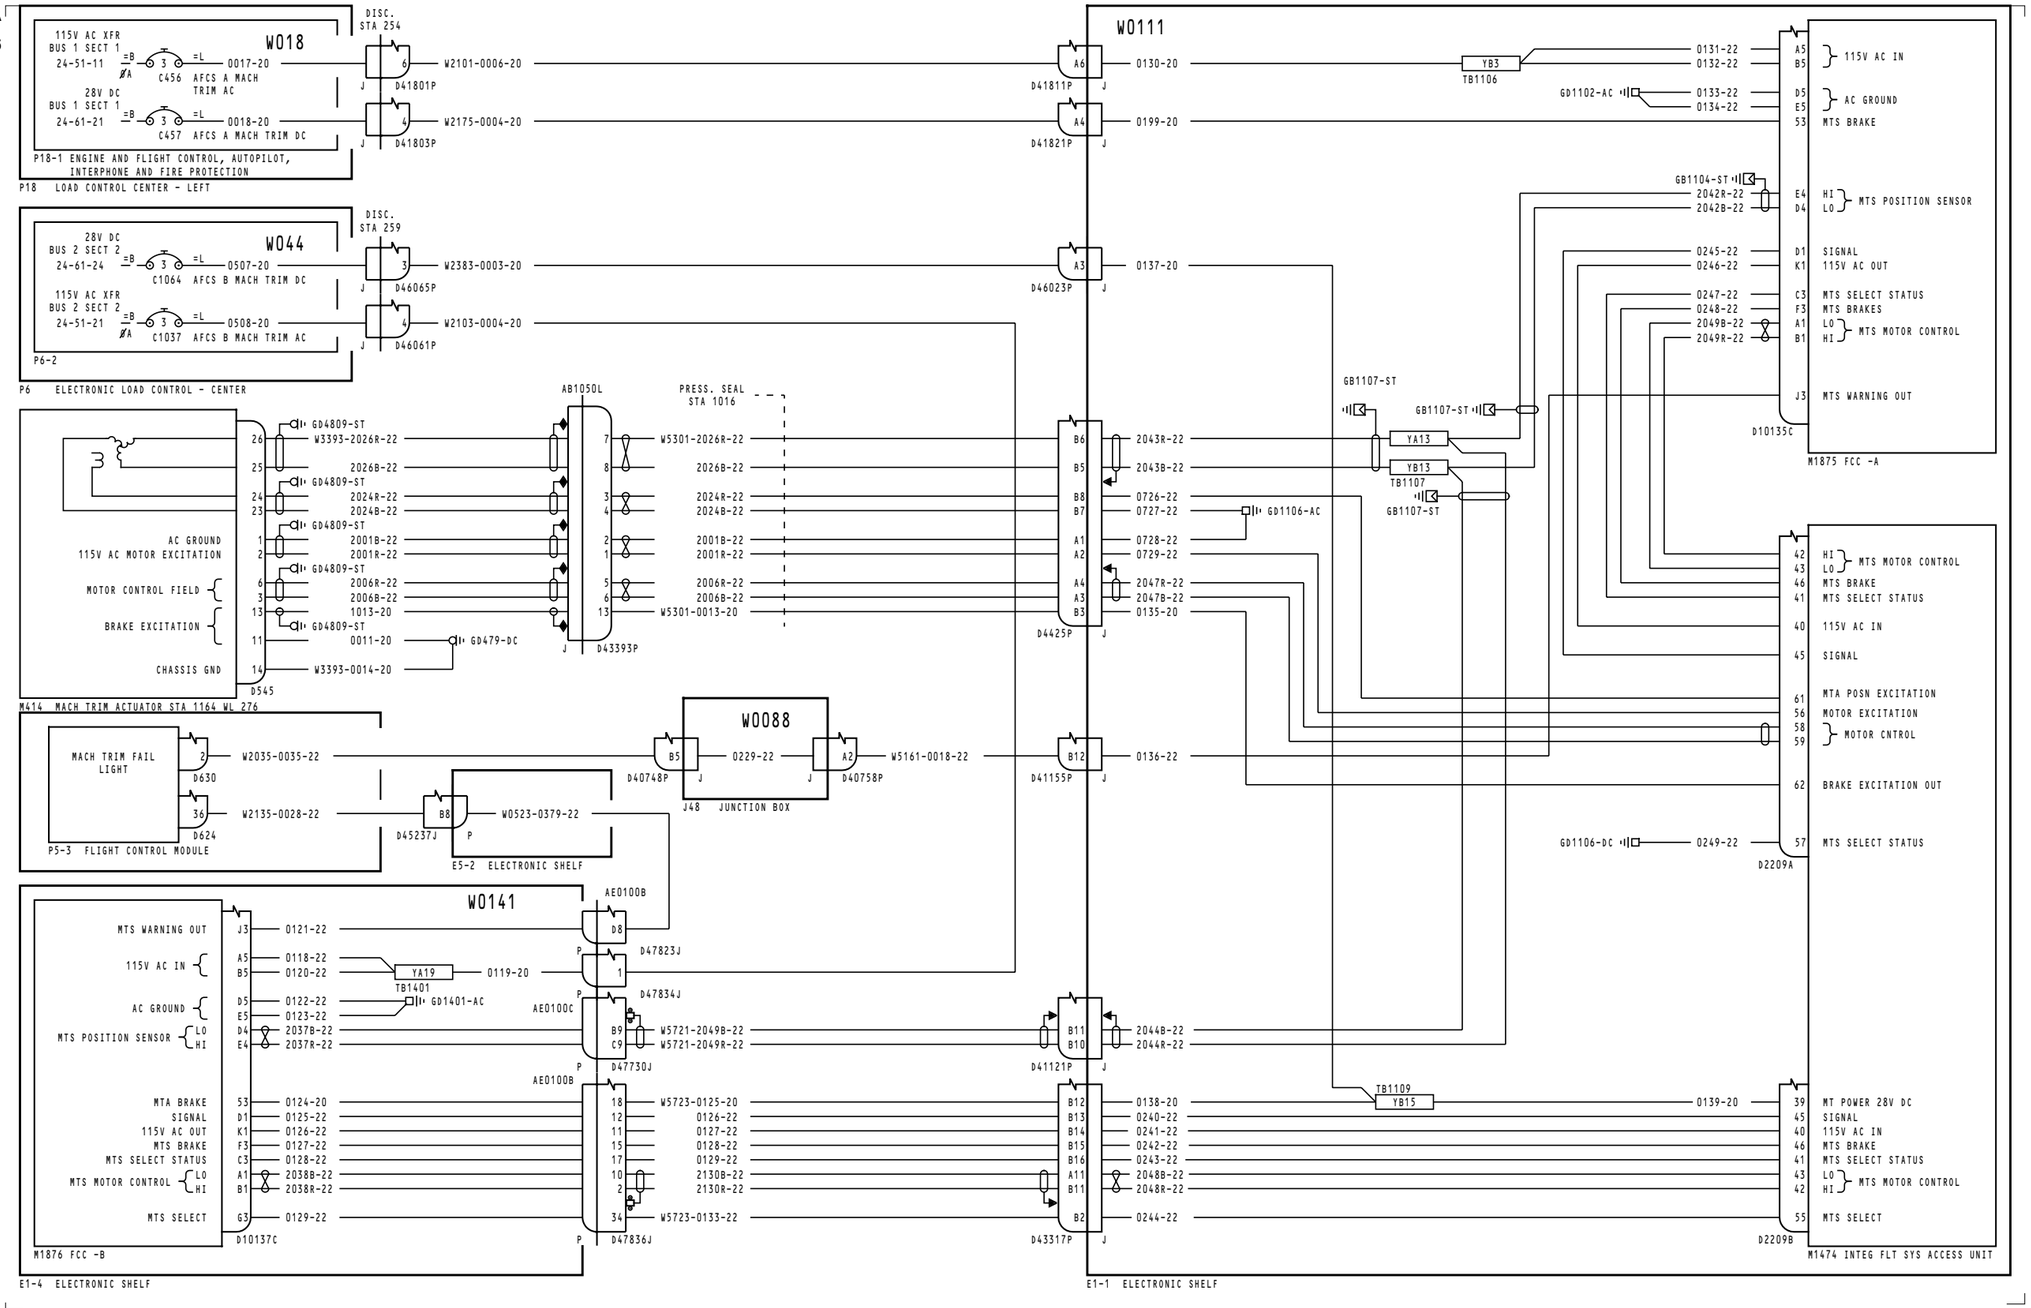

ECCN 9E991 BOEING PROPRIETARY - See title page for details


22-18-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
19

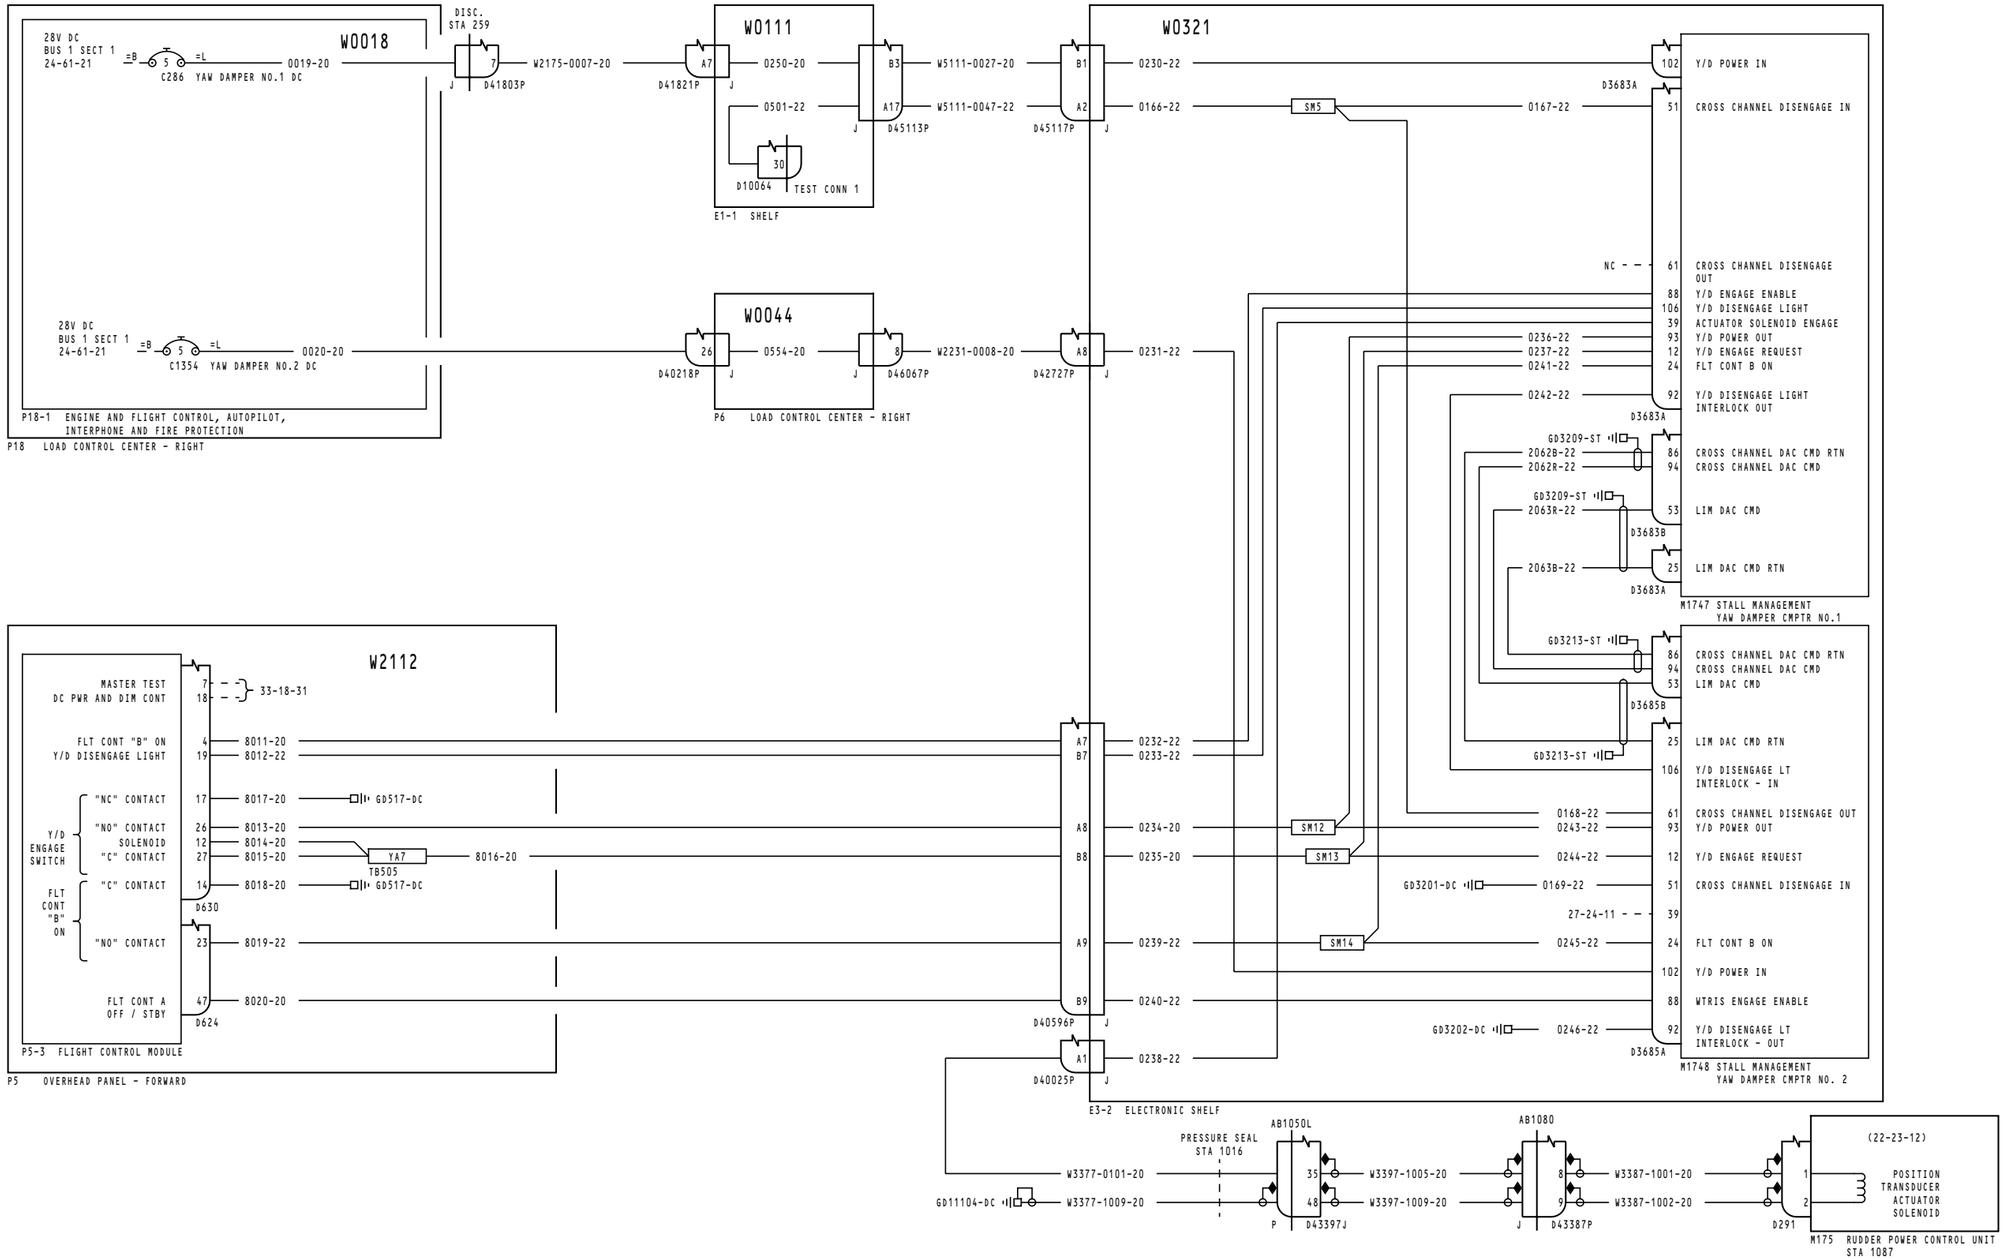


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-23-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

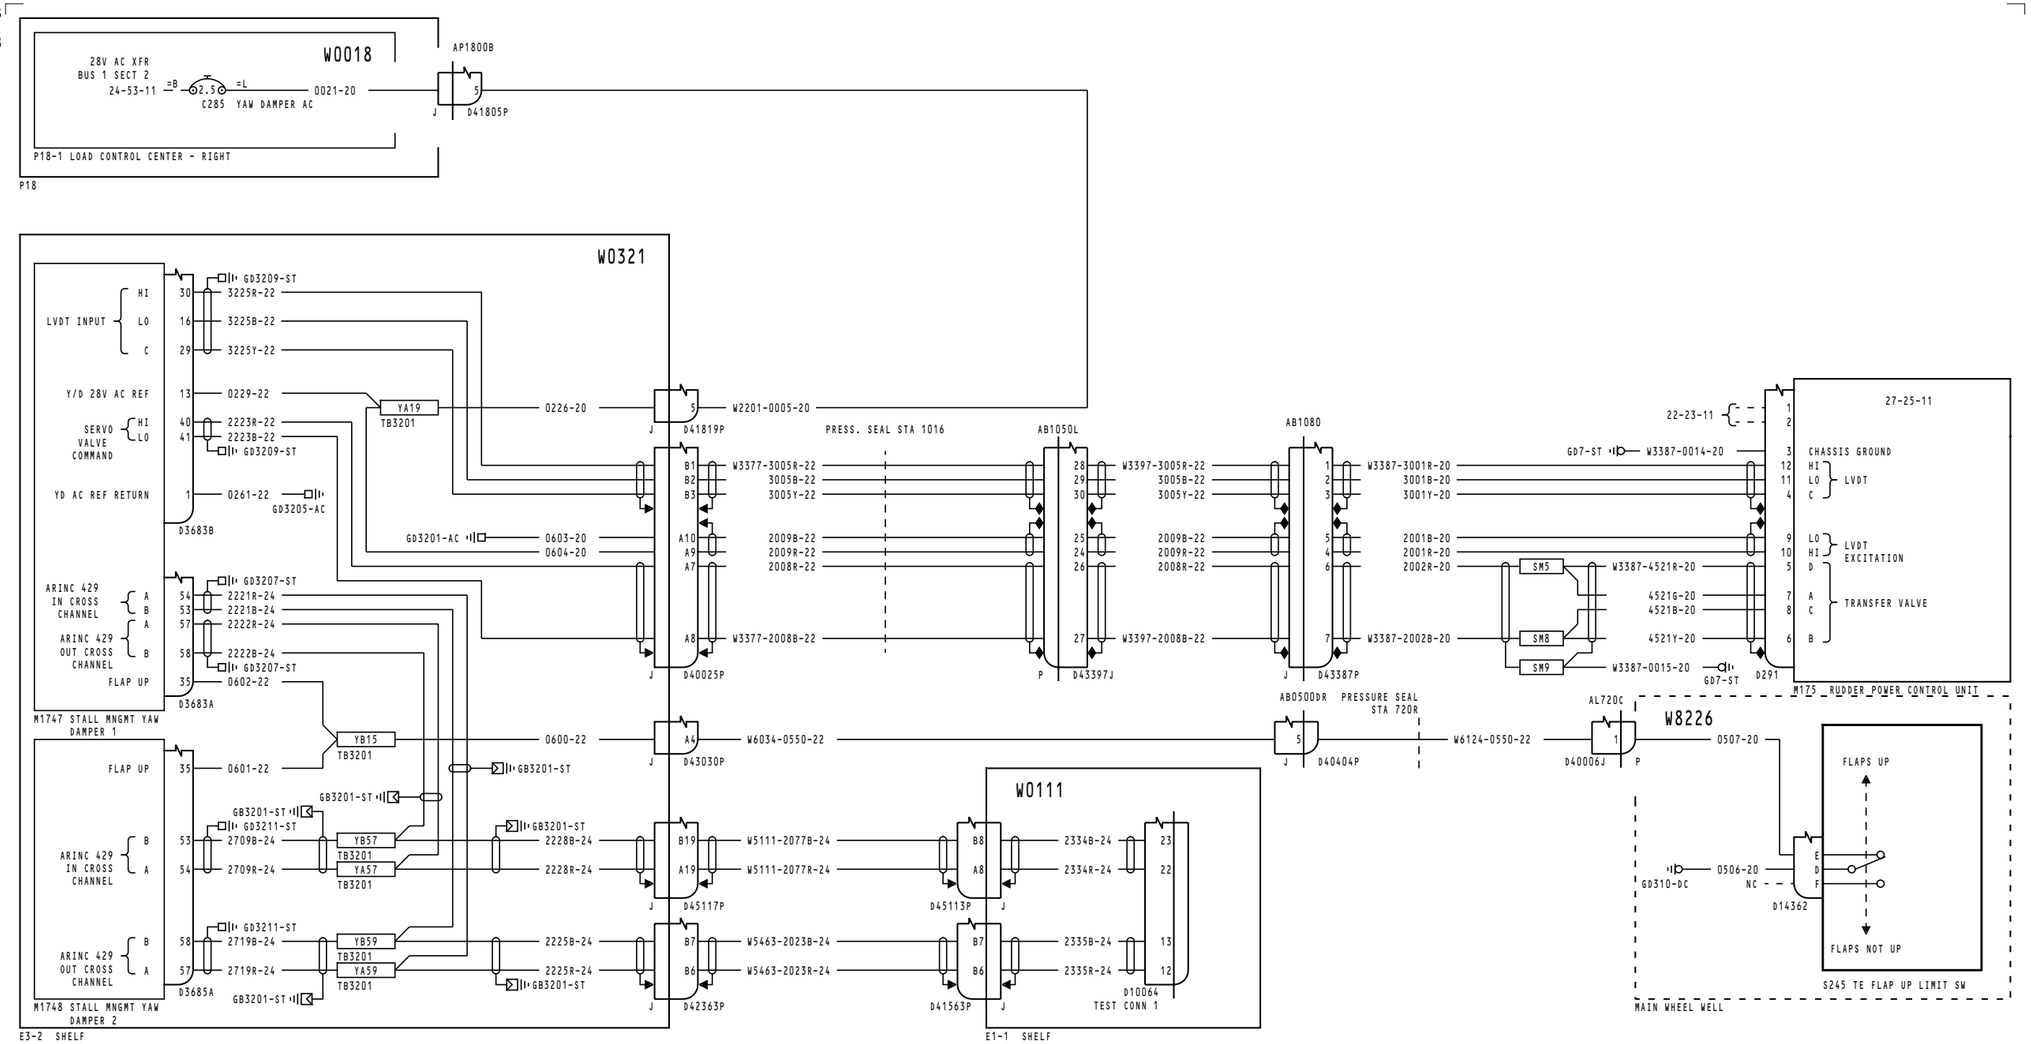


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-23-12

Page 1

Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

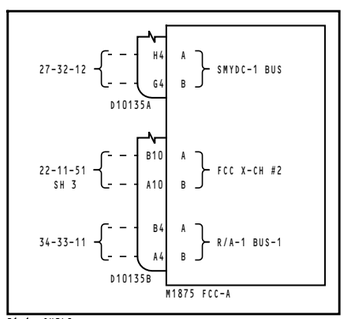

ALL	AUTOTHROTTLE SYSTEM - DIGITAL INPUTS FROM SMYDC'S AND RA'S D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details


22-31-22

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

10

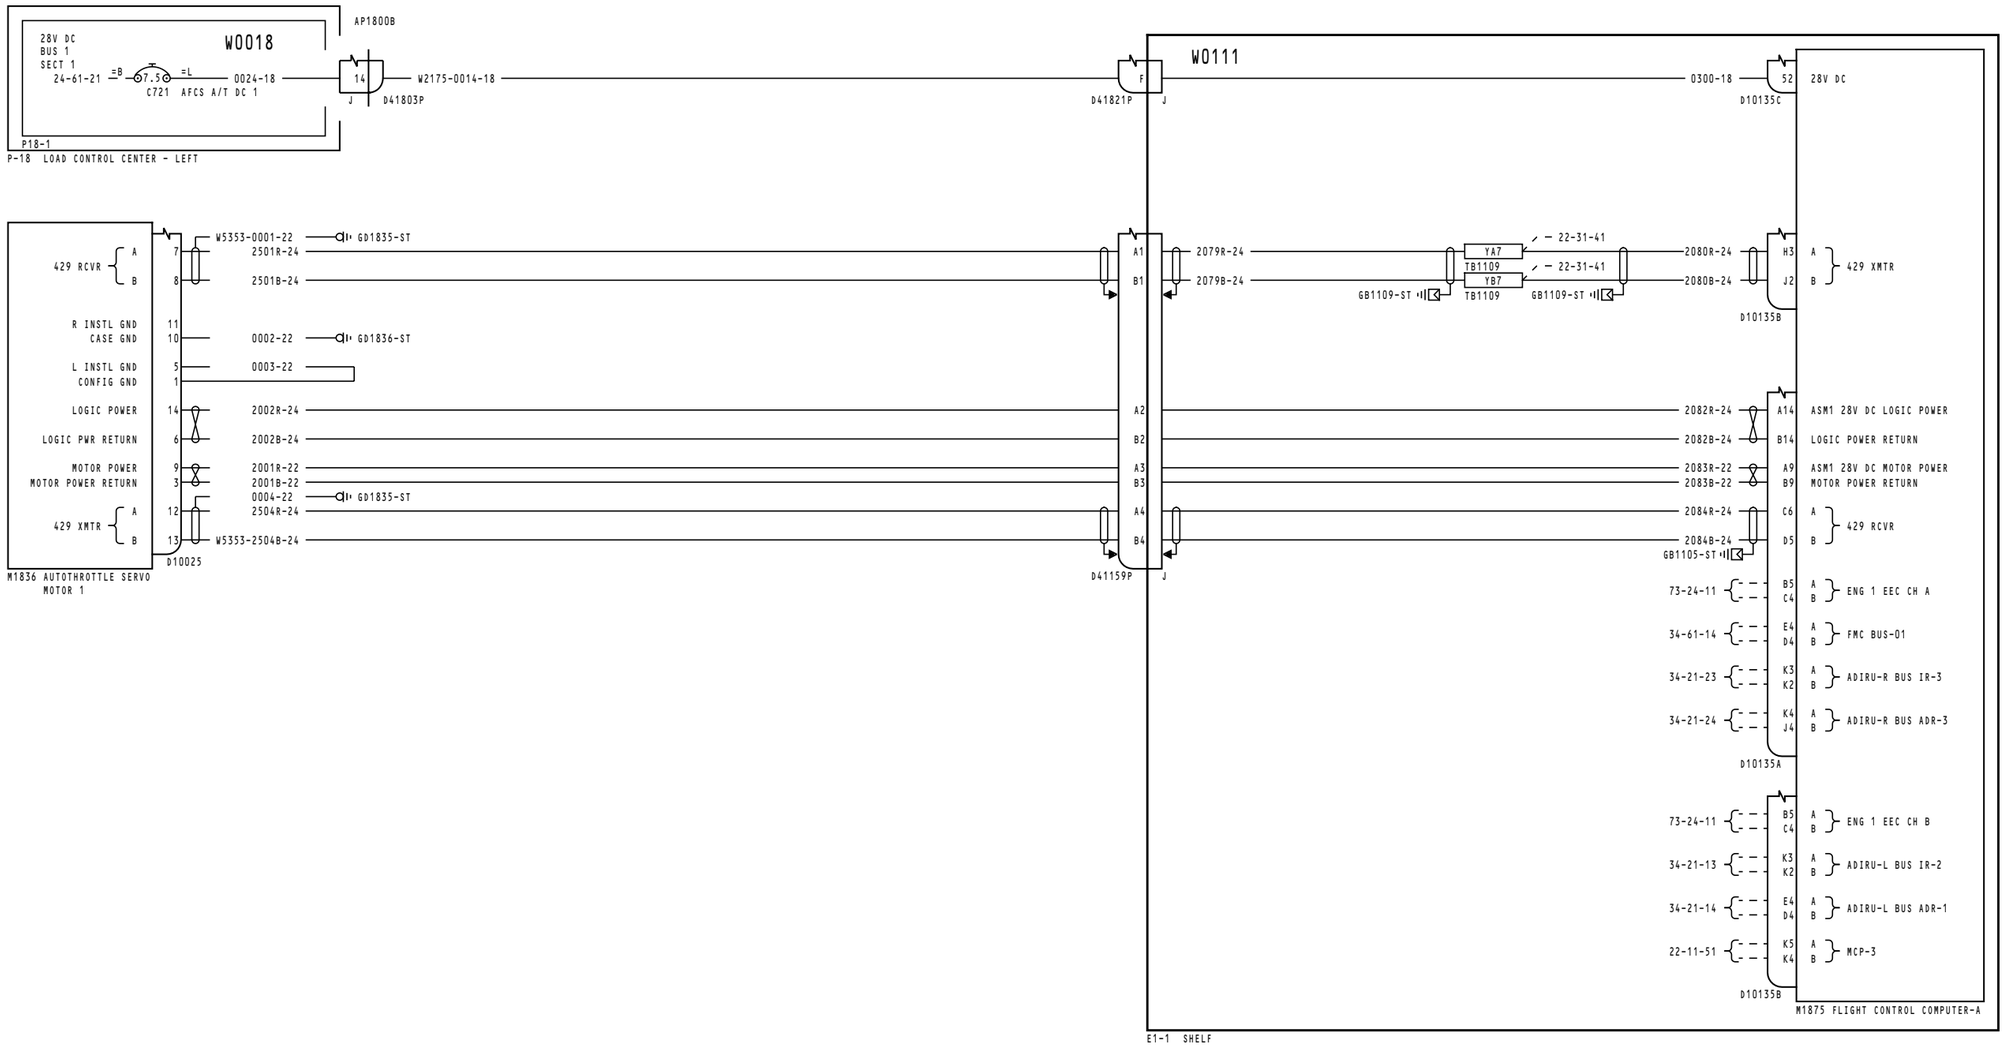

ECCN 9E991 BOEING PROPRIETARY - See title page for details


22-31-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

7

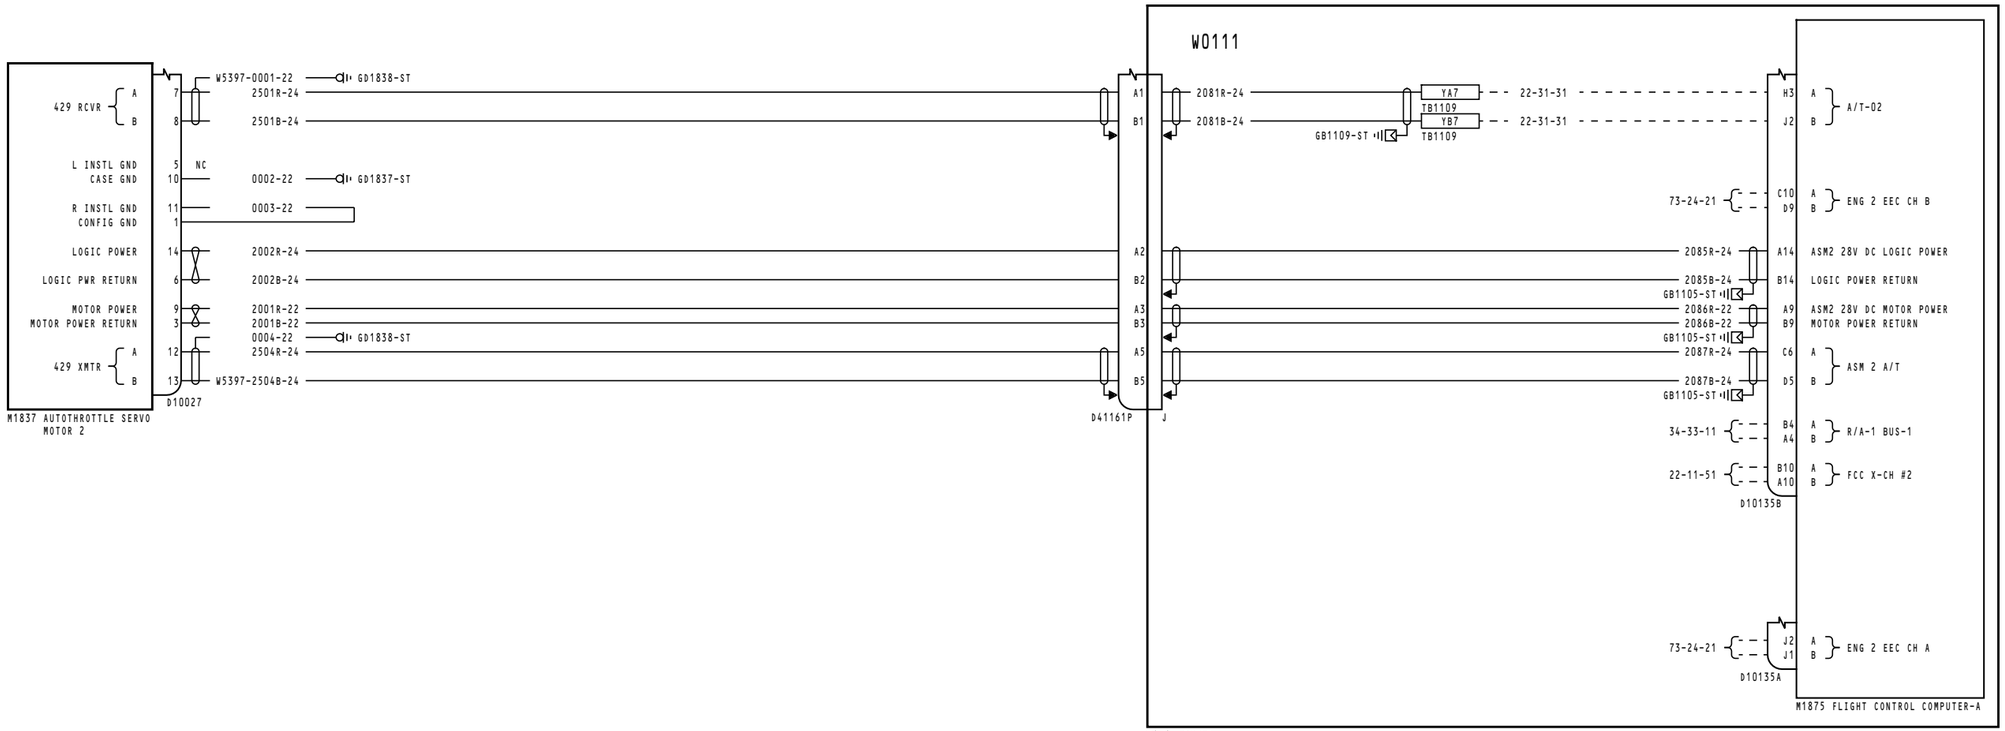

22-31-41


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
16

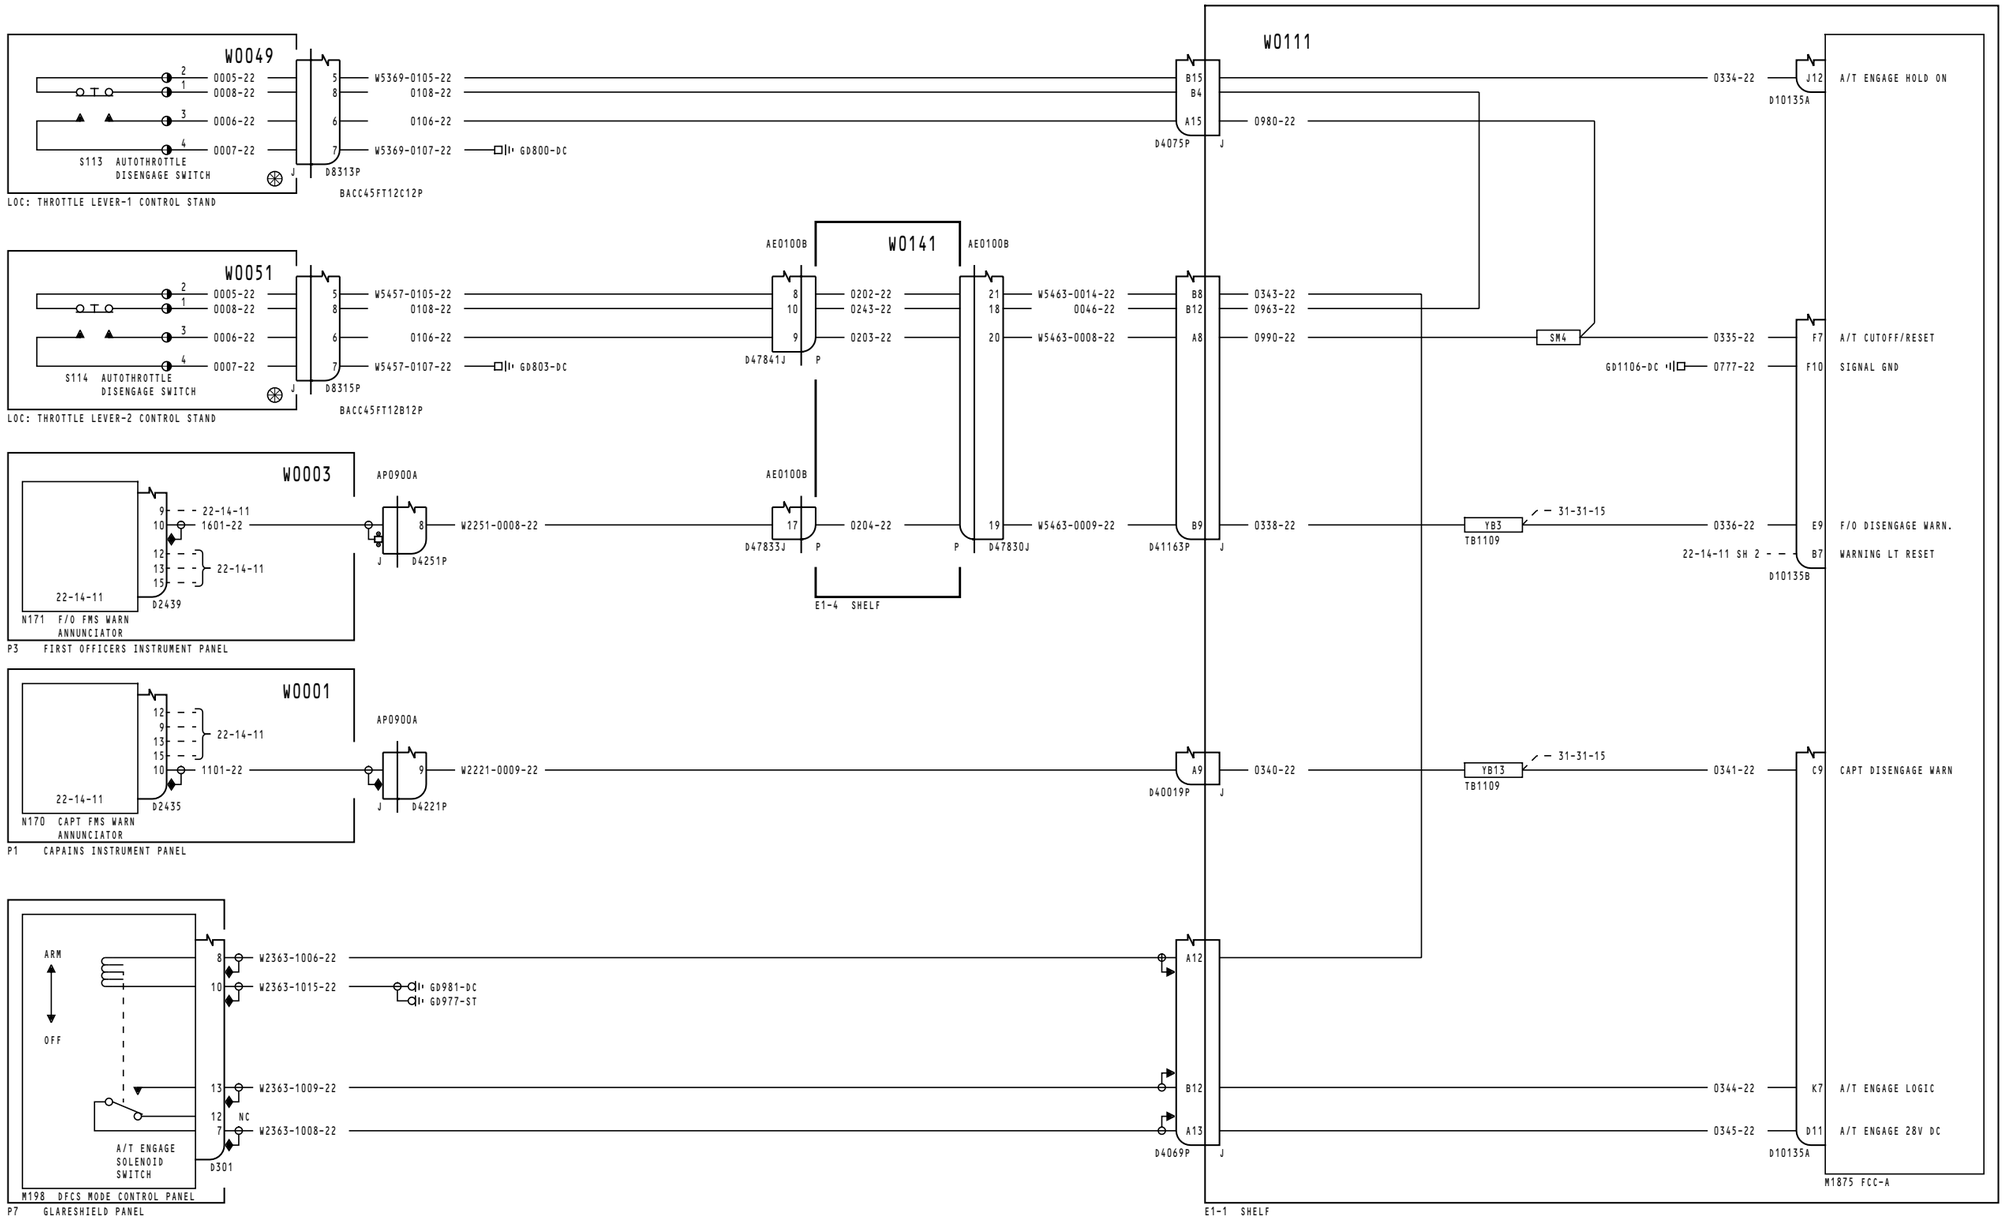


ECCN 9E991 BOEING PROPRIETARY - See title page for details

22-31-51

Page 1

May 15/2024

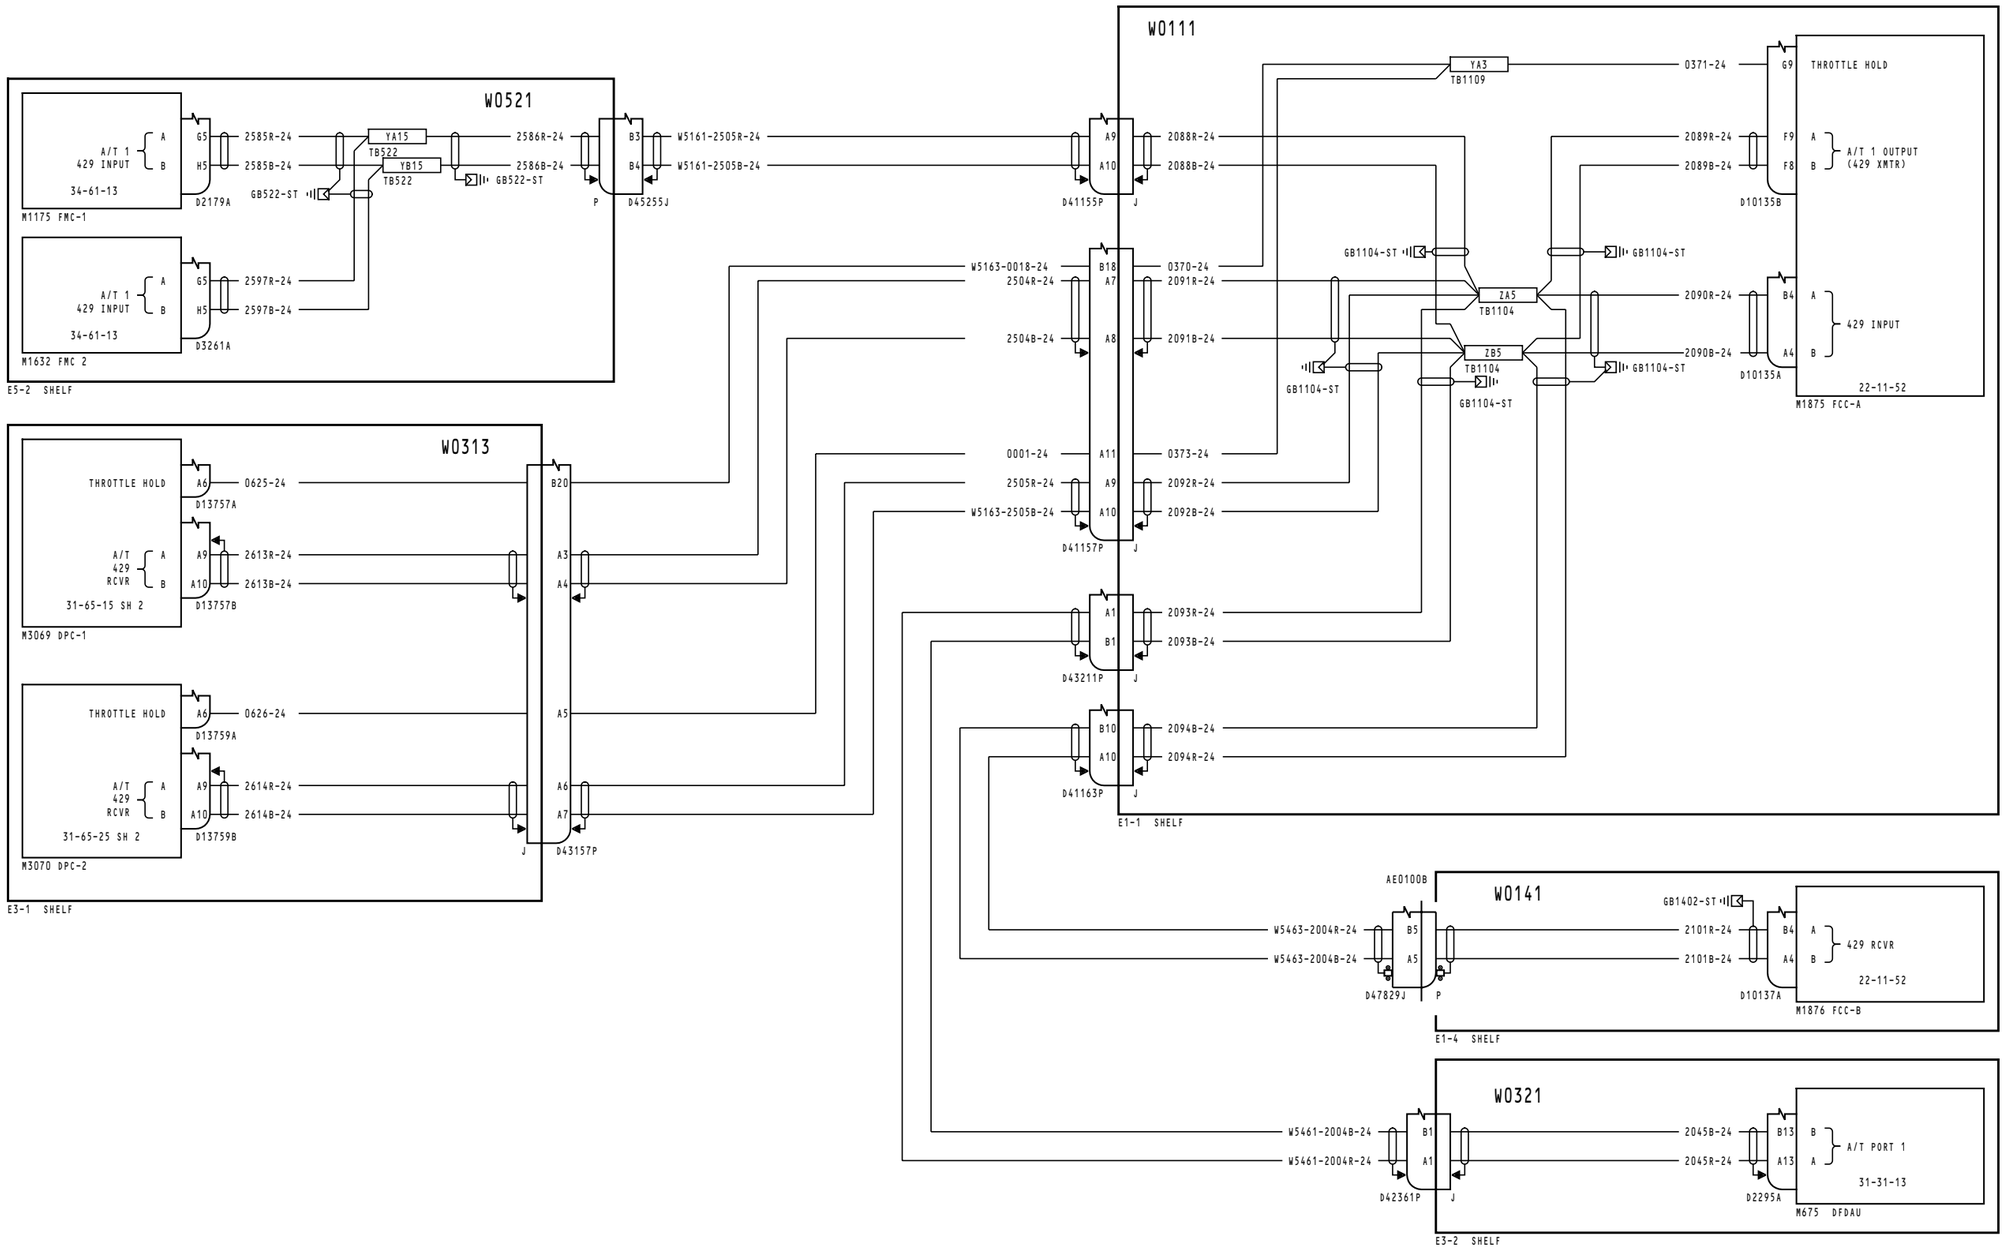

ECCN 9E991 BOEING PROPRIETARY - See title page for details