CHAPTER

26

FIRE PROTECTION

CHAPTER 26
FIRE PROTECTION

CH-SE-SU	Schem	Page	Sheet	Date
26-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
26-CONTENTS				
		1		Dec 24/2024
		2		BLANK
26-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
26-11-11				
		1	1	Dec 24/2024
			2	Dec 24/2024
26-11-21				
		1	1	May 15/2024
			2	Dec 24/2024
			3	Dec 24/2024
26-11-31				
		1		May 15/2024
26-12-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
26-14-11				
		1		May 15/2024
26-16-21				
		1		May 15/2024
26-16-22				
		1		May 15/2024
26-19-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
26-21-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
26-23-11				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 26
FIRE PROTECTION

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
ENGINE FIRE DETECTION						
ENGINE 1 FIRE DETECTION	26-11-11		1	1	Dec 24/2024	ALL
				2	Dec 24/2024	ALL
ENGINE 2 FIRE DETECTION	26-11-21		1	1	May 15/2024	ALL
				2	Dec 24/2024	ALL
				3	Dec 24/2024	ALL
APU FIRE DETECTION	26-11-31		1		May 15/2024	ALL
OVERHEAT DETECTION SYSTEM						
WHEEL WELL, WING AND LOWER AFT BODY OVERHEAT DETECTION	26-12-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
LAVATORY SMOKE DETECTION						
LAVATORY SMOKE DETECTORS	26-14-11		1		May 15/2024	ALL
CARGO COMPARTMENT SMOKE DETECTION						
FORWARD CARGO COMPARTMENT SMOKE DETECTION	26-16-21		1		May 15/2024	ALL
AFT CARGO COMPARTMENT SMOKE DETECTION	26-16-22		1		May 15/2024	ALL
E/E COOLING SMOKE DETECTION						
E/E COOLING SMOKE DETECTION	26-19-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
ENGINE FIRE EXTINGUISHING						
ENGINE AND APU FIRE EXTINGUISHING SYSTEM	26-21-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
CARGO COMPARTMENT FIRE EXTINGUISHING						
CARGO COMPARTMENT FIRE EXTINGUISHERS	26-23-11		1		May 15/2024	ALL

26-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 26
FIRE PROTECTION


CH-SE-SU	Title
26-16-22	AFT CARGO COMPARTMENT SMOKE DETECTION
26-11-31	APU FIRE DETECTION
26-23-11	CARGO COMPARTMENT FIRE EXTINGUISHERS
26-19-11	E/E COOLING SMOKE DETECTION
26-11-11	ENGINE 1 FIRE DETECTION
26-11-21	ENGINE 2 FIRE DETECTION
26-21-11	ENGINE AND APU FIRE EXTINGUISHING SYSTEM
26-16-21	FORWARD CARGO COMPARTMENT SMOKE DETECTION
26-14-11	LAVATORY SMOKE DETECTORS
26-12-11	WHEEL WELL, WING AND LOWER AFT BODY OVERHEAT DETECTION

26-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-E
10

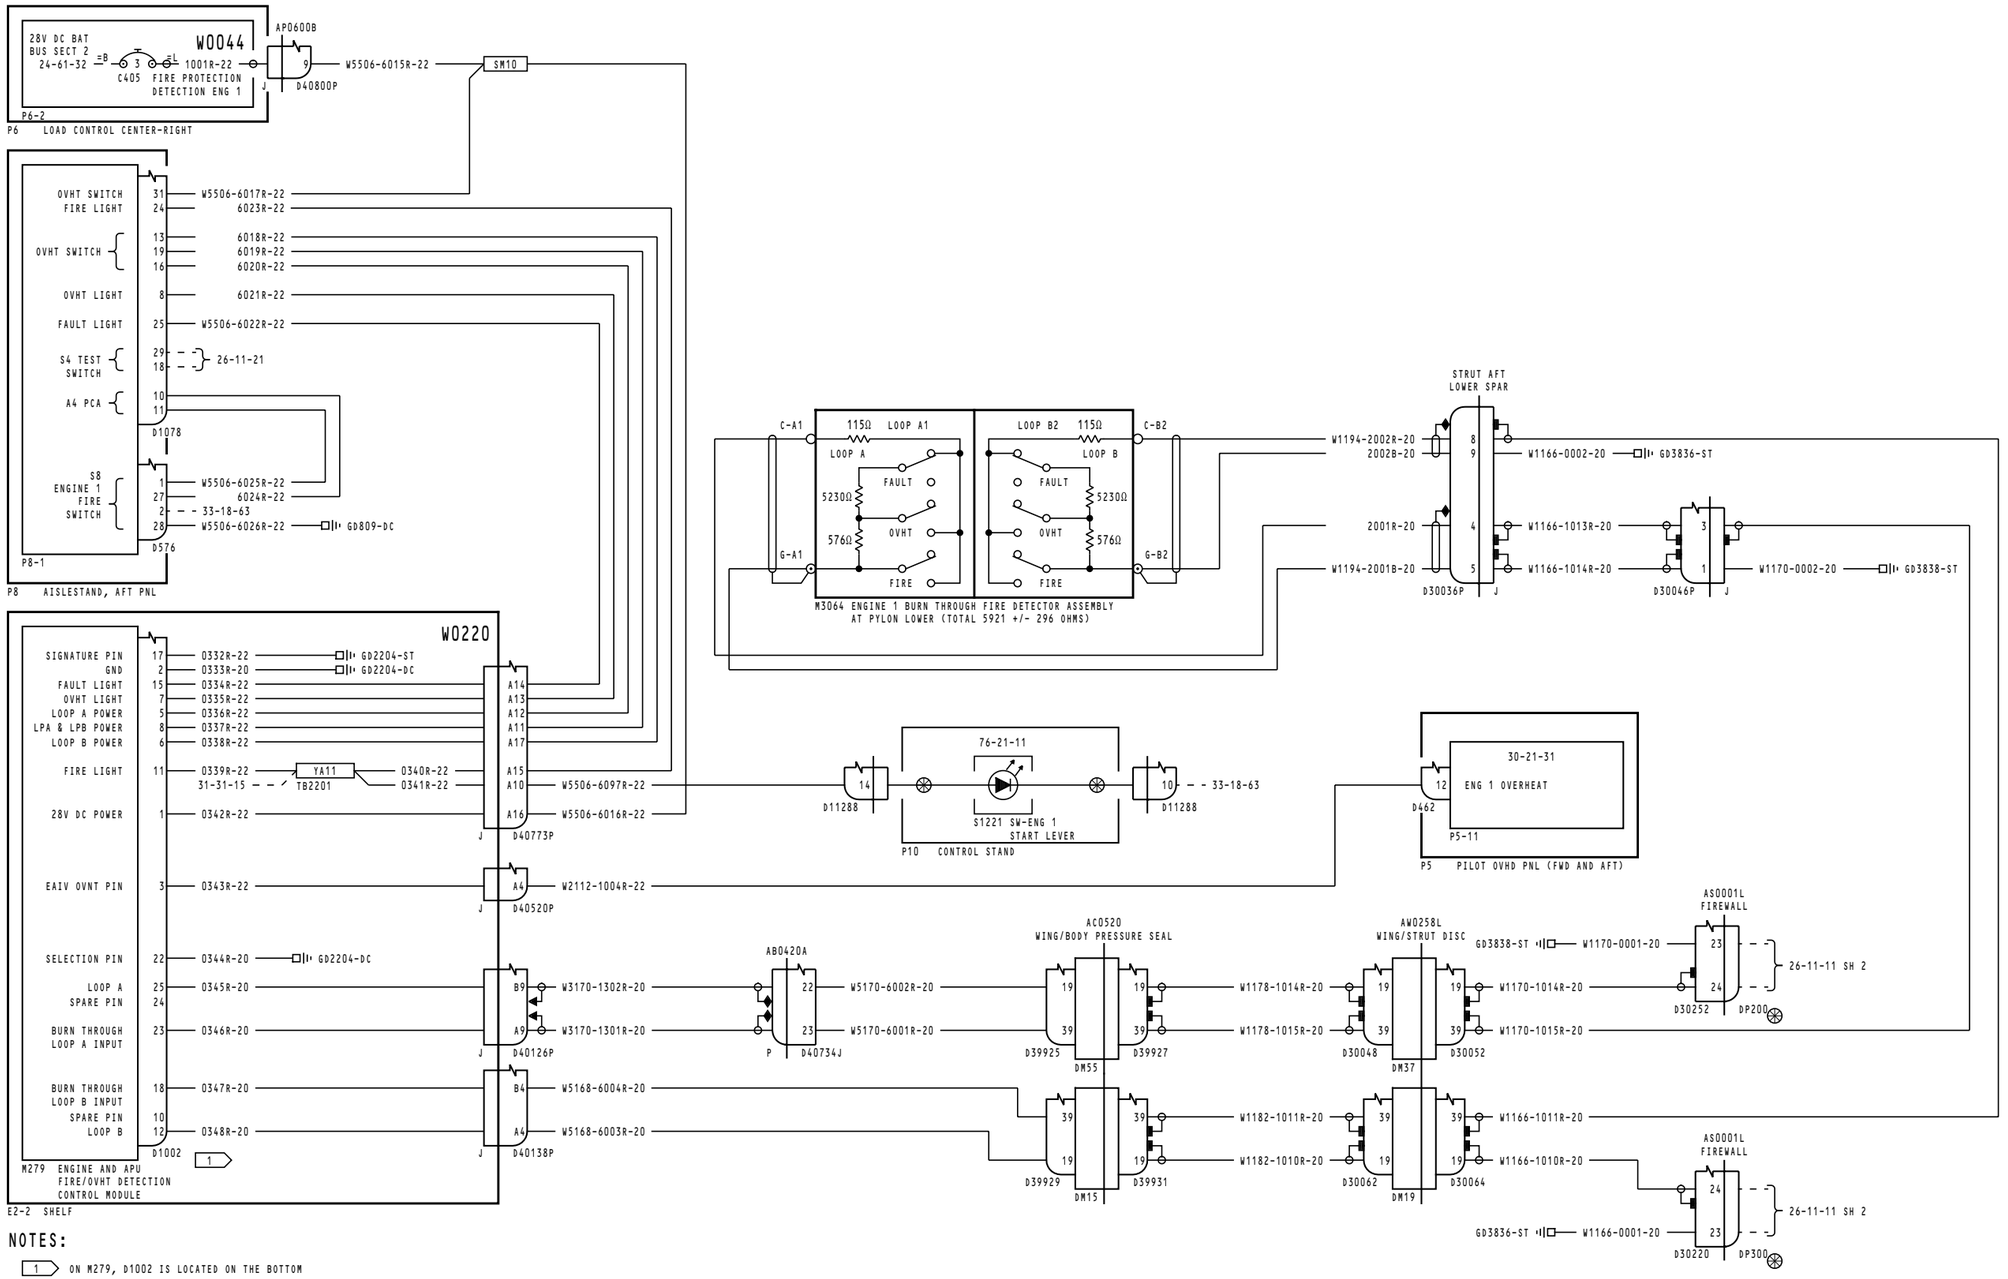

NOTES:

1 ON M279, D1002 IS LOCATED ON THE BOTTOM


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-11-11

Page 1
Sheet 1
Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

-C
1

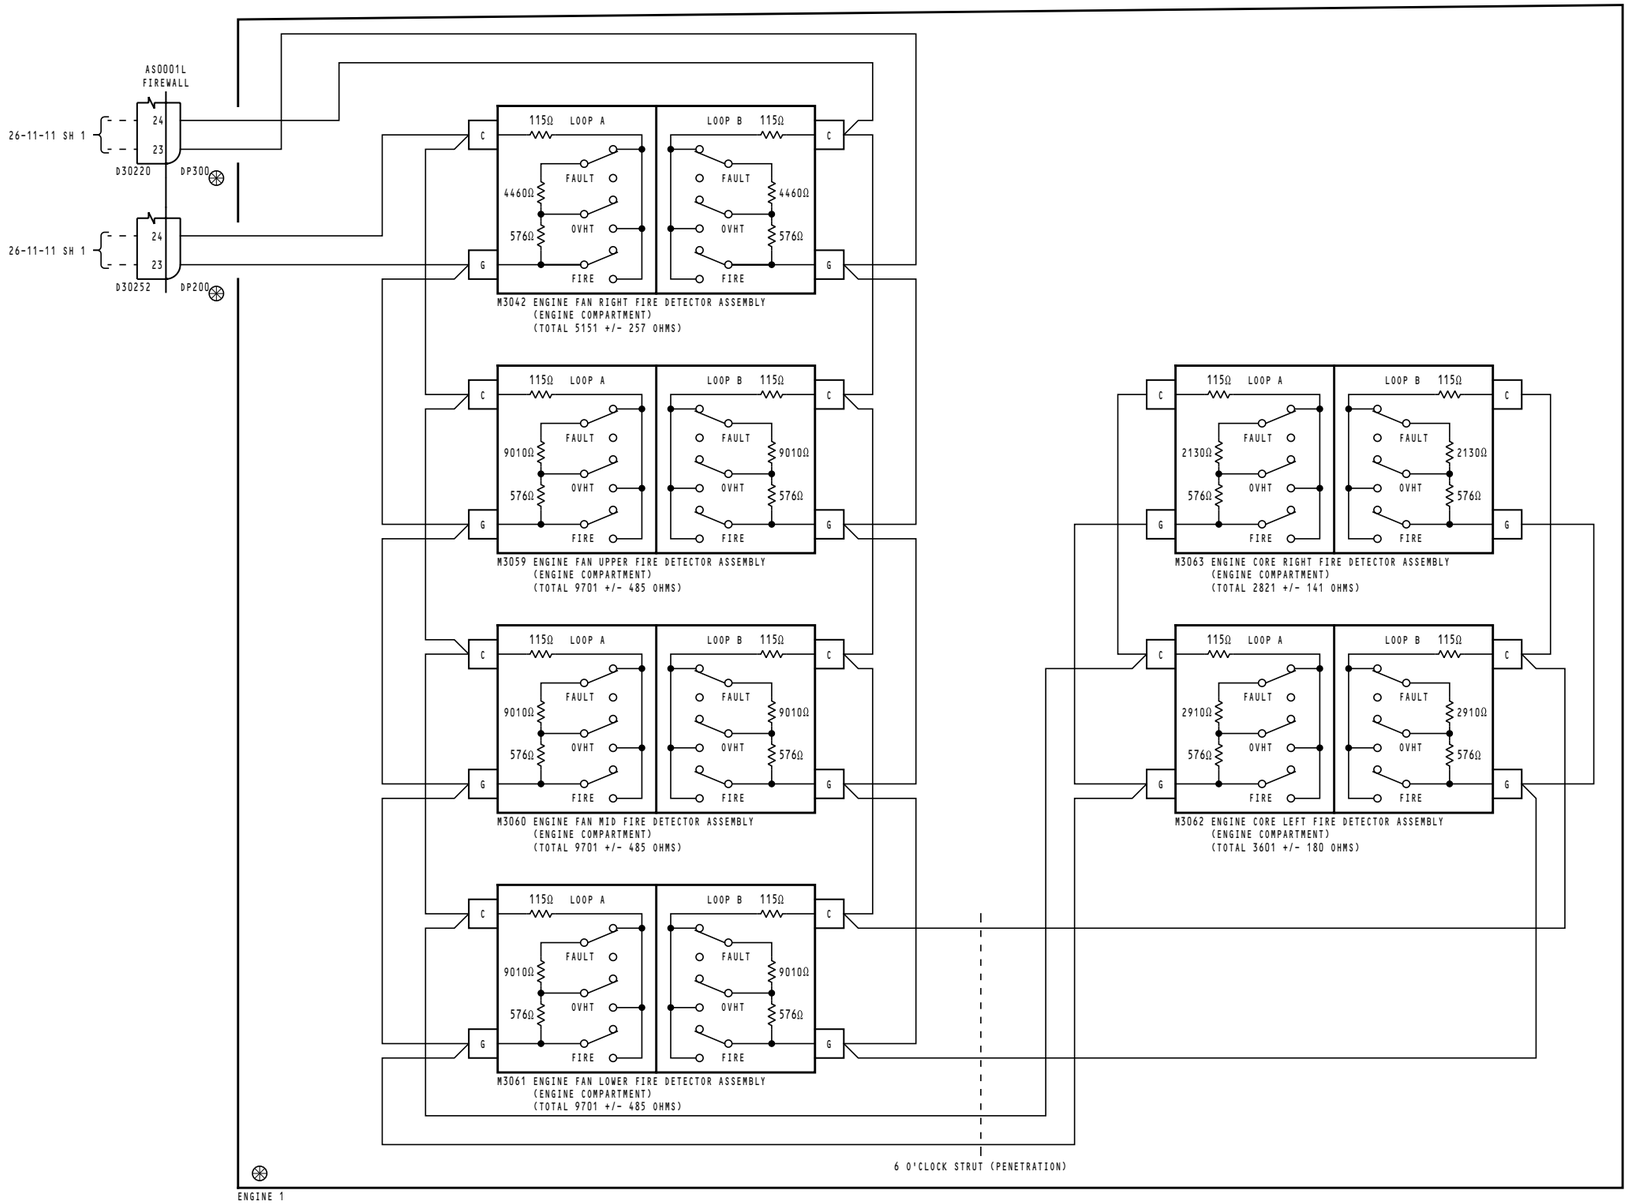


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-11-11

Page 1
Sheet 2
Dec 24/2024


737-8 WIRING DIAGRAM MANUAL

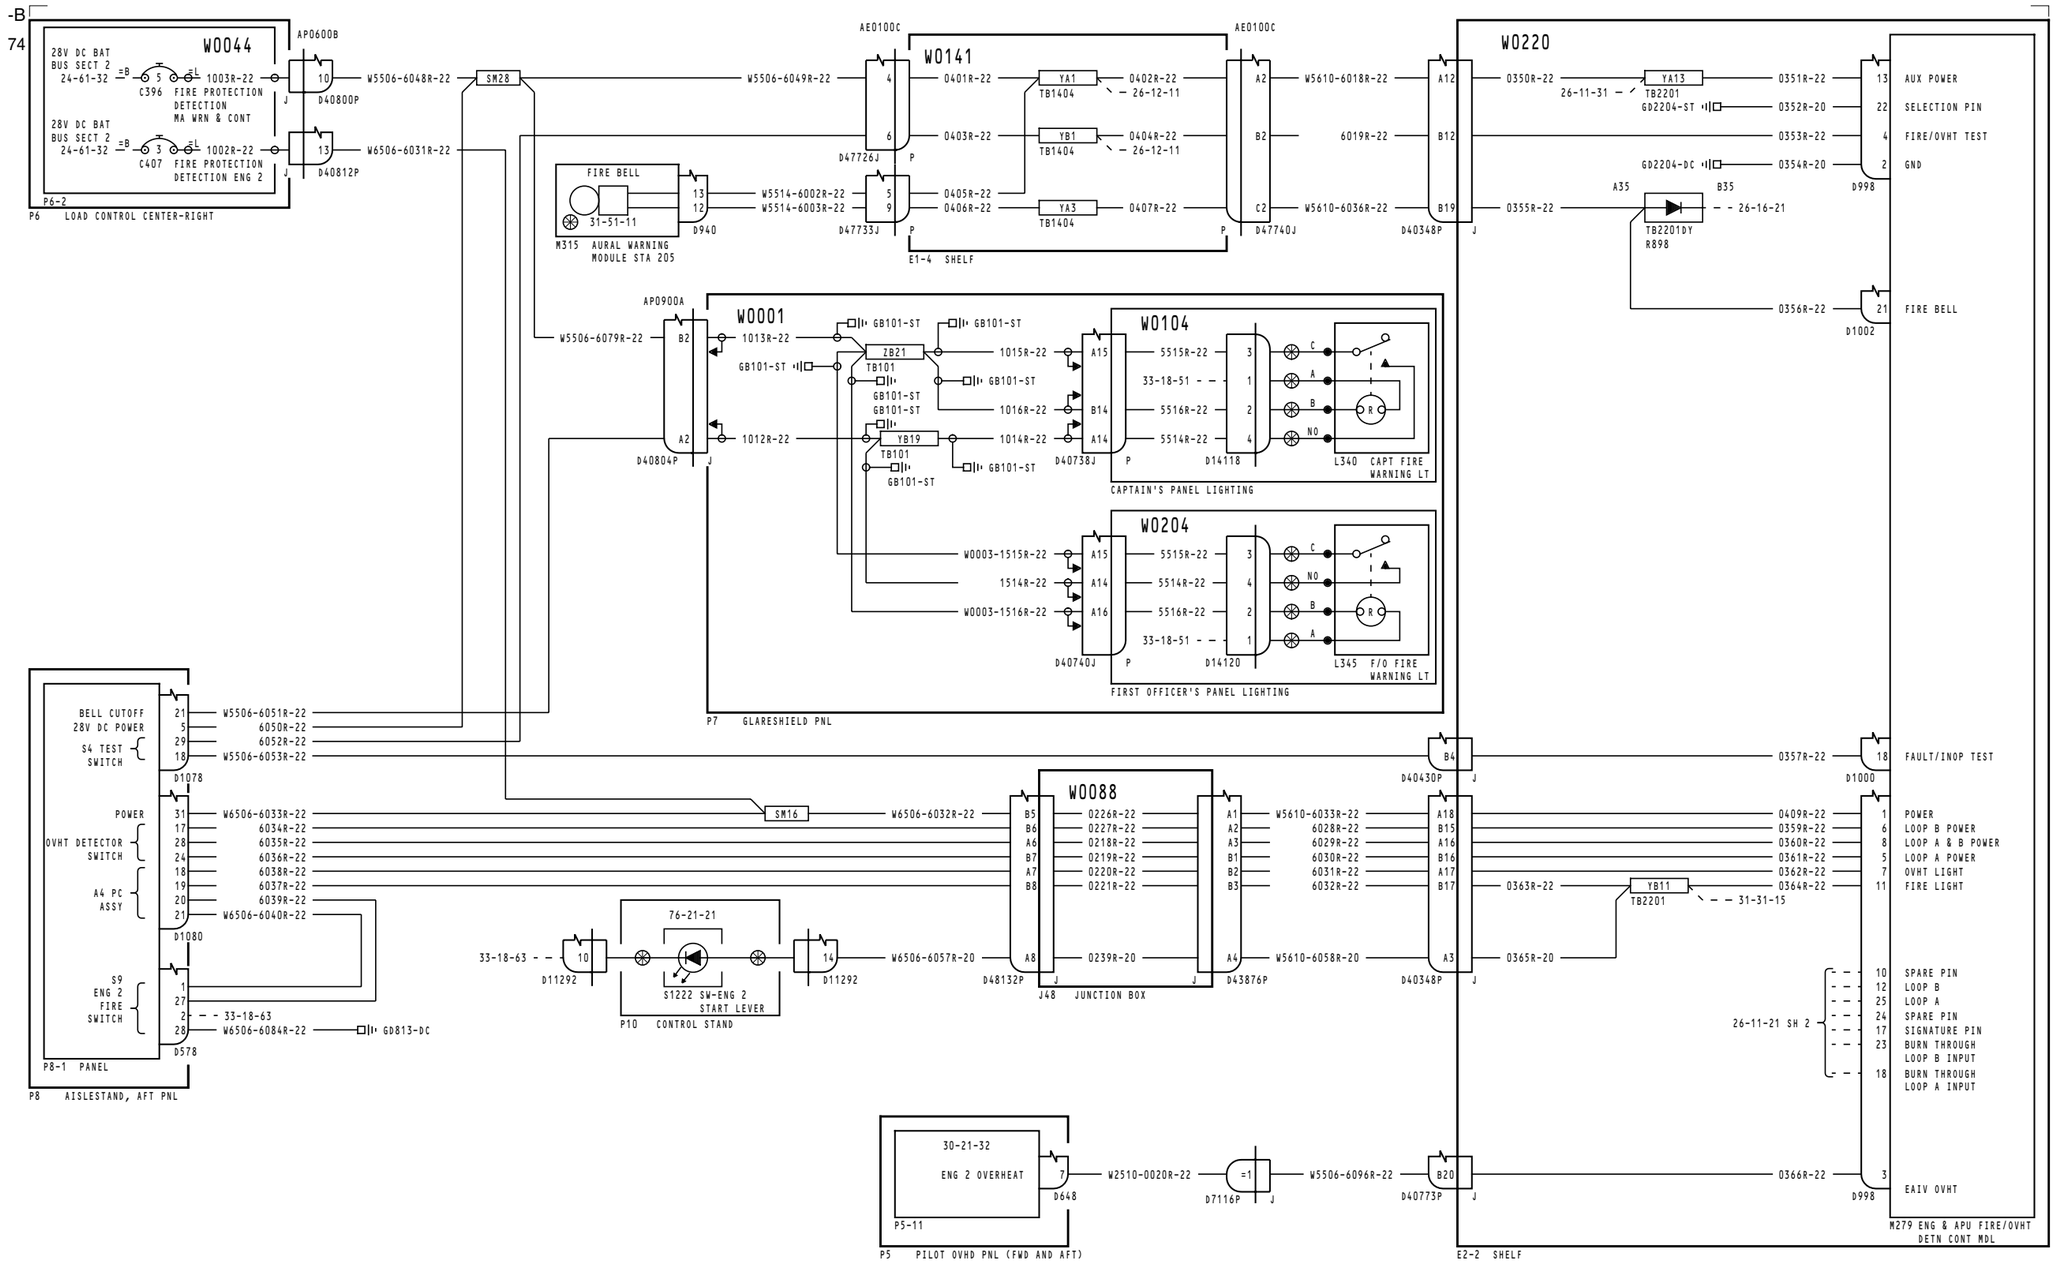

26-11-21

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

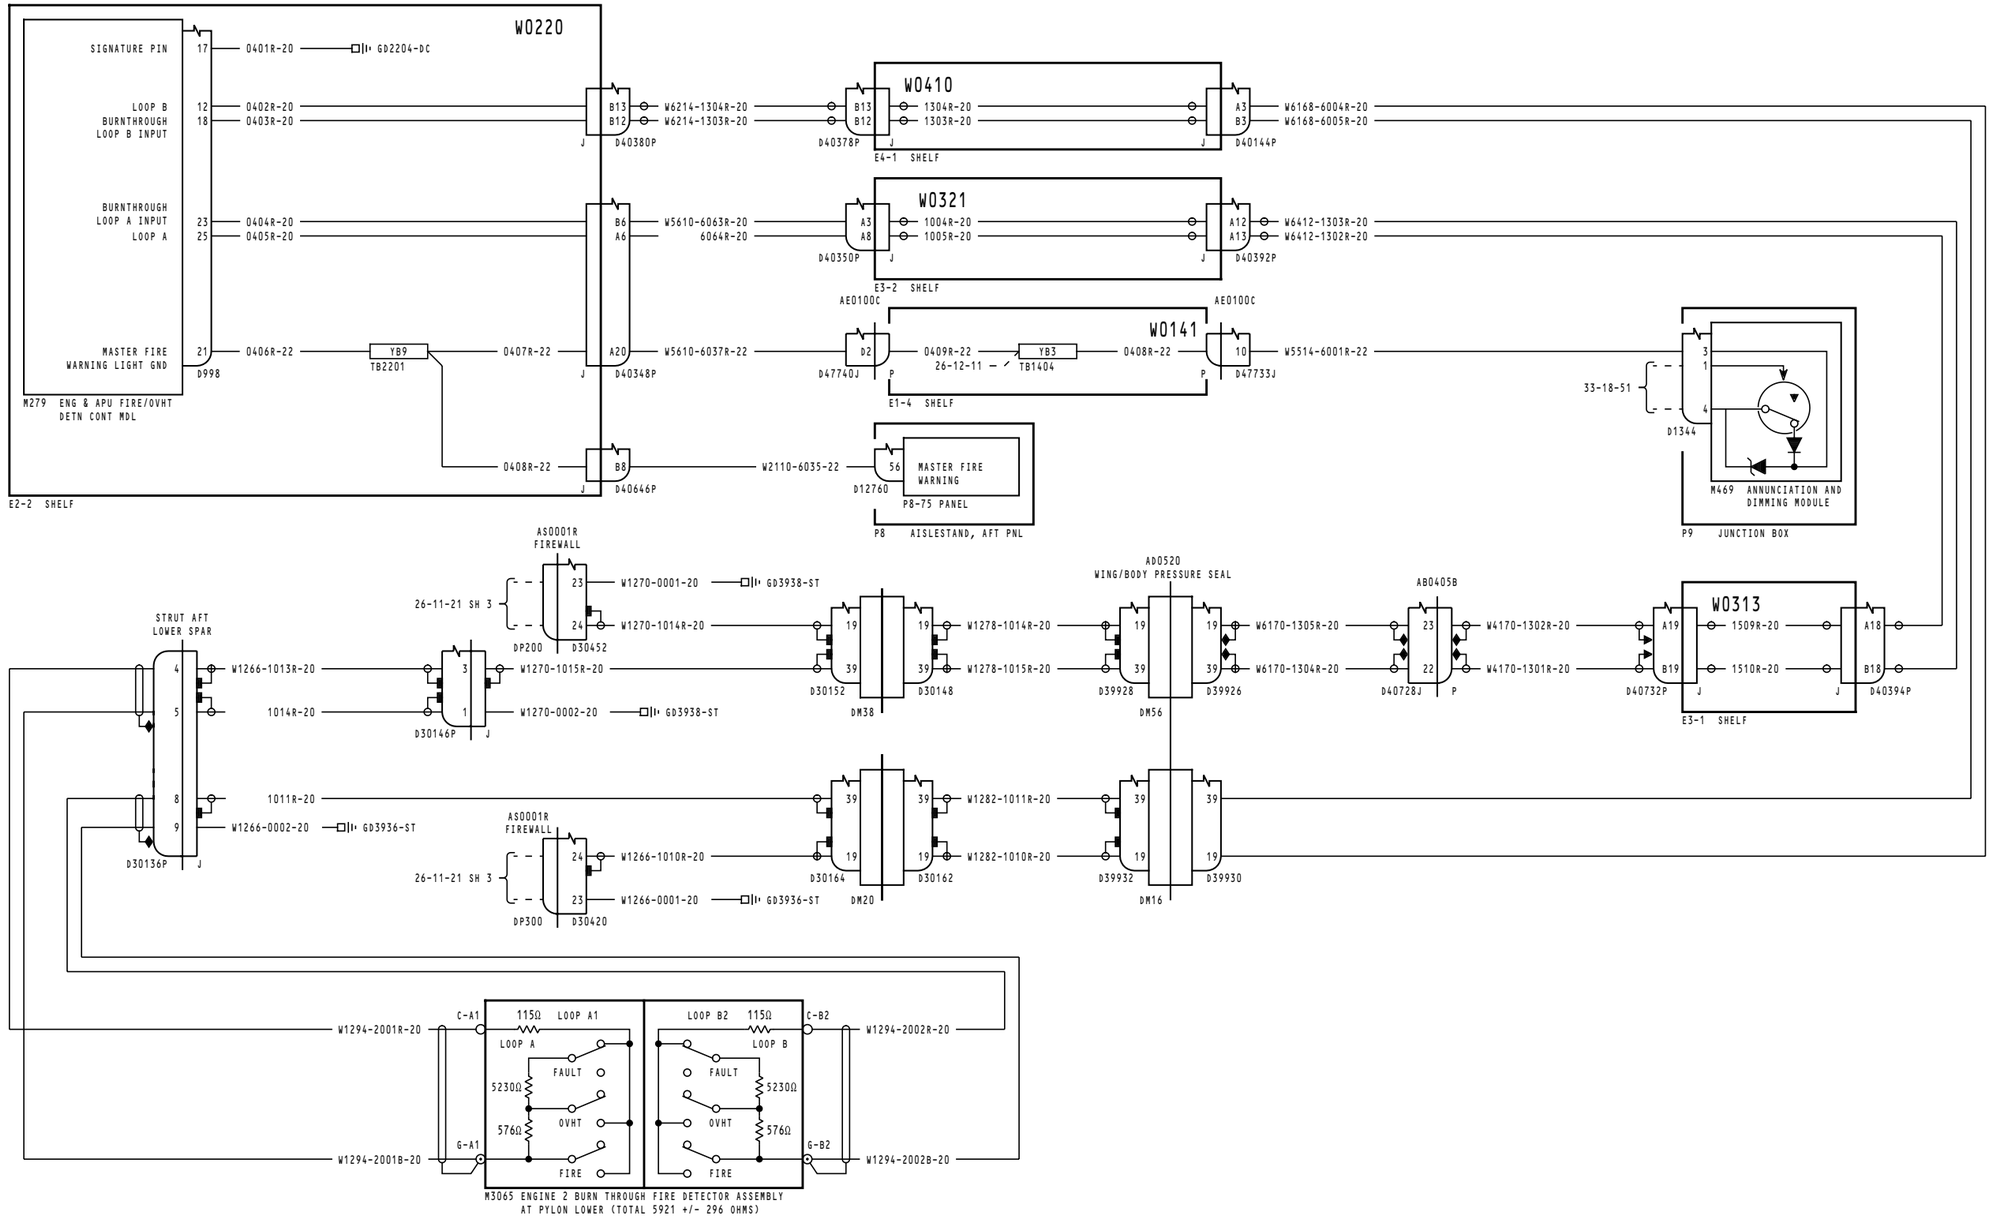

26-11-21
Page 1
Sheet 2
Dec 24/2024
ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C
1

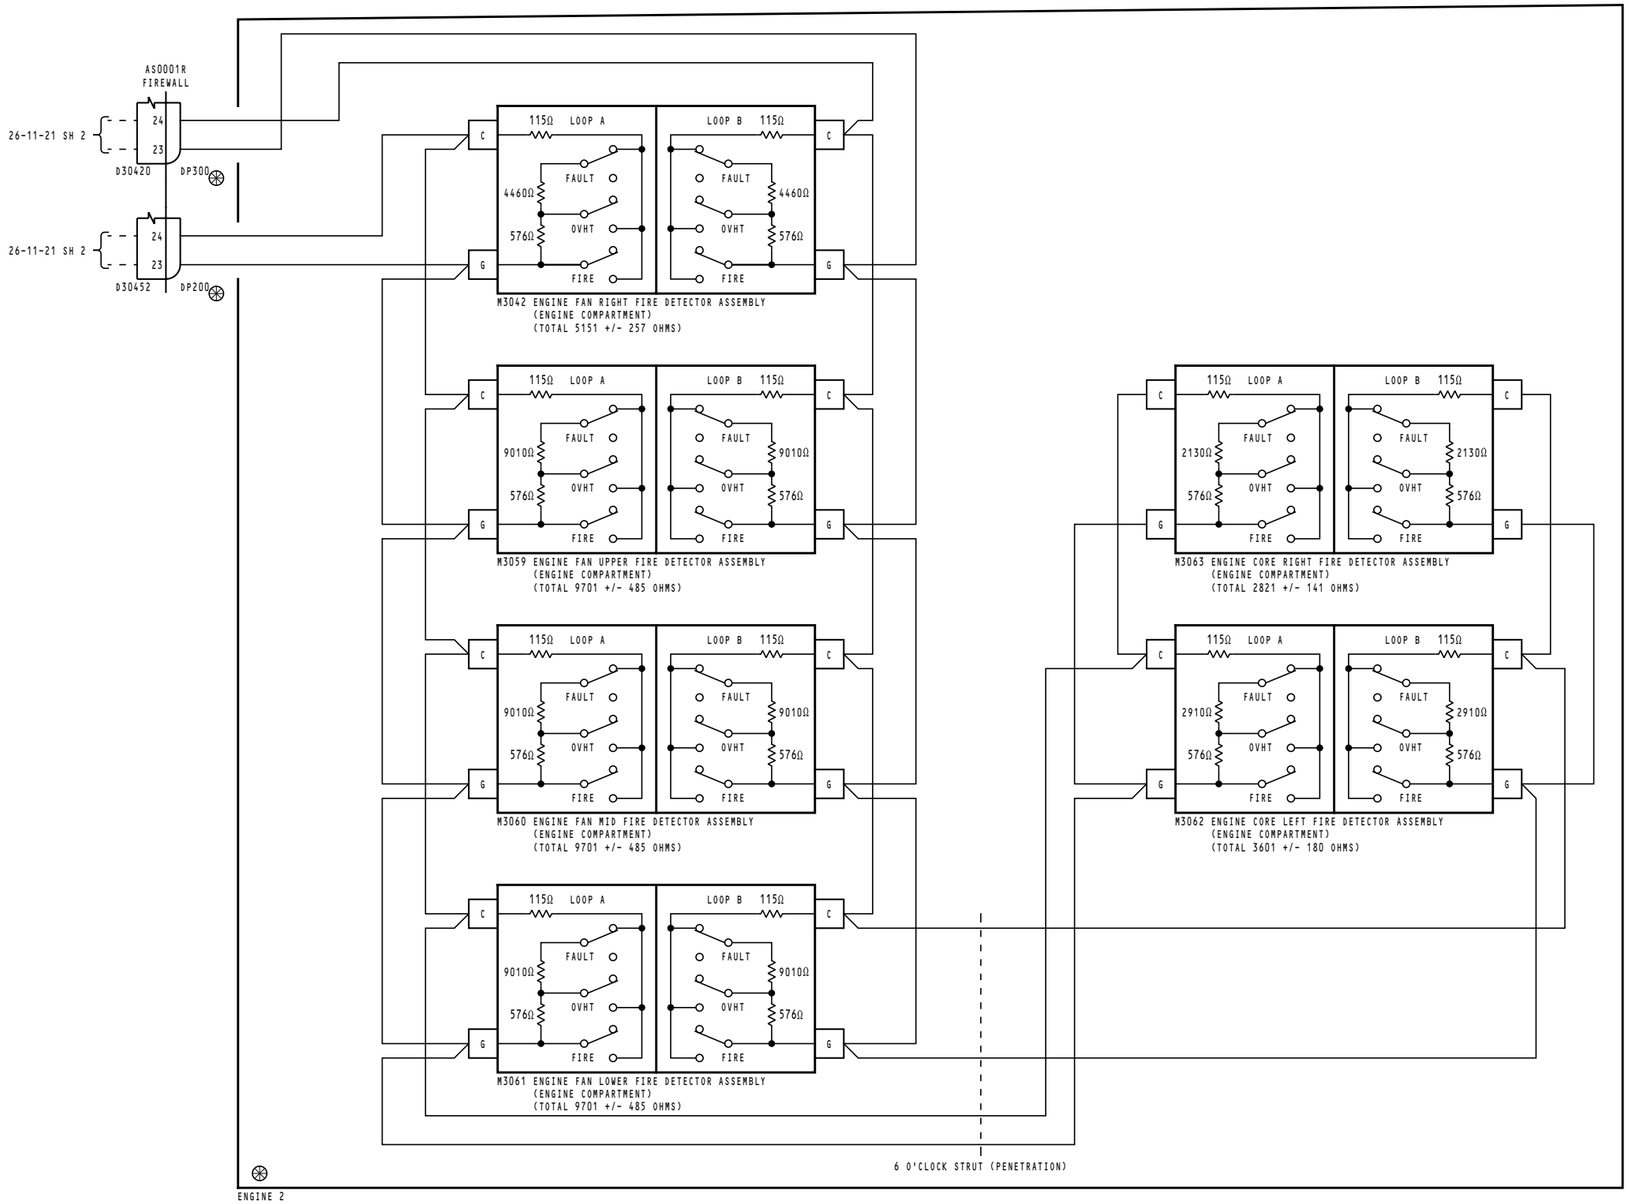


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-11-21

Page 1
Sheet 3
Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

20

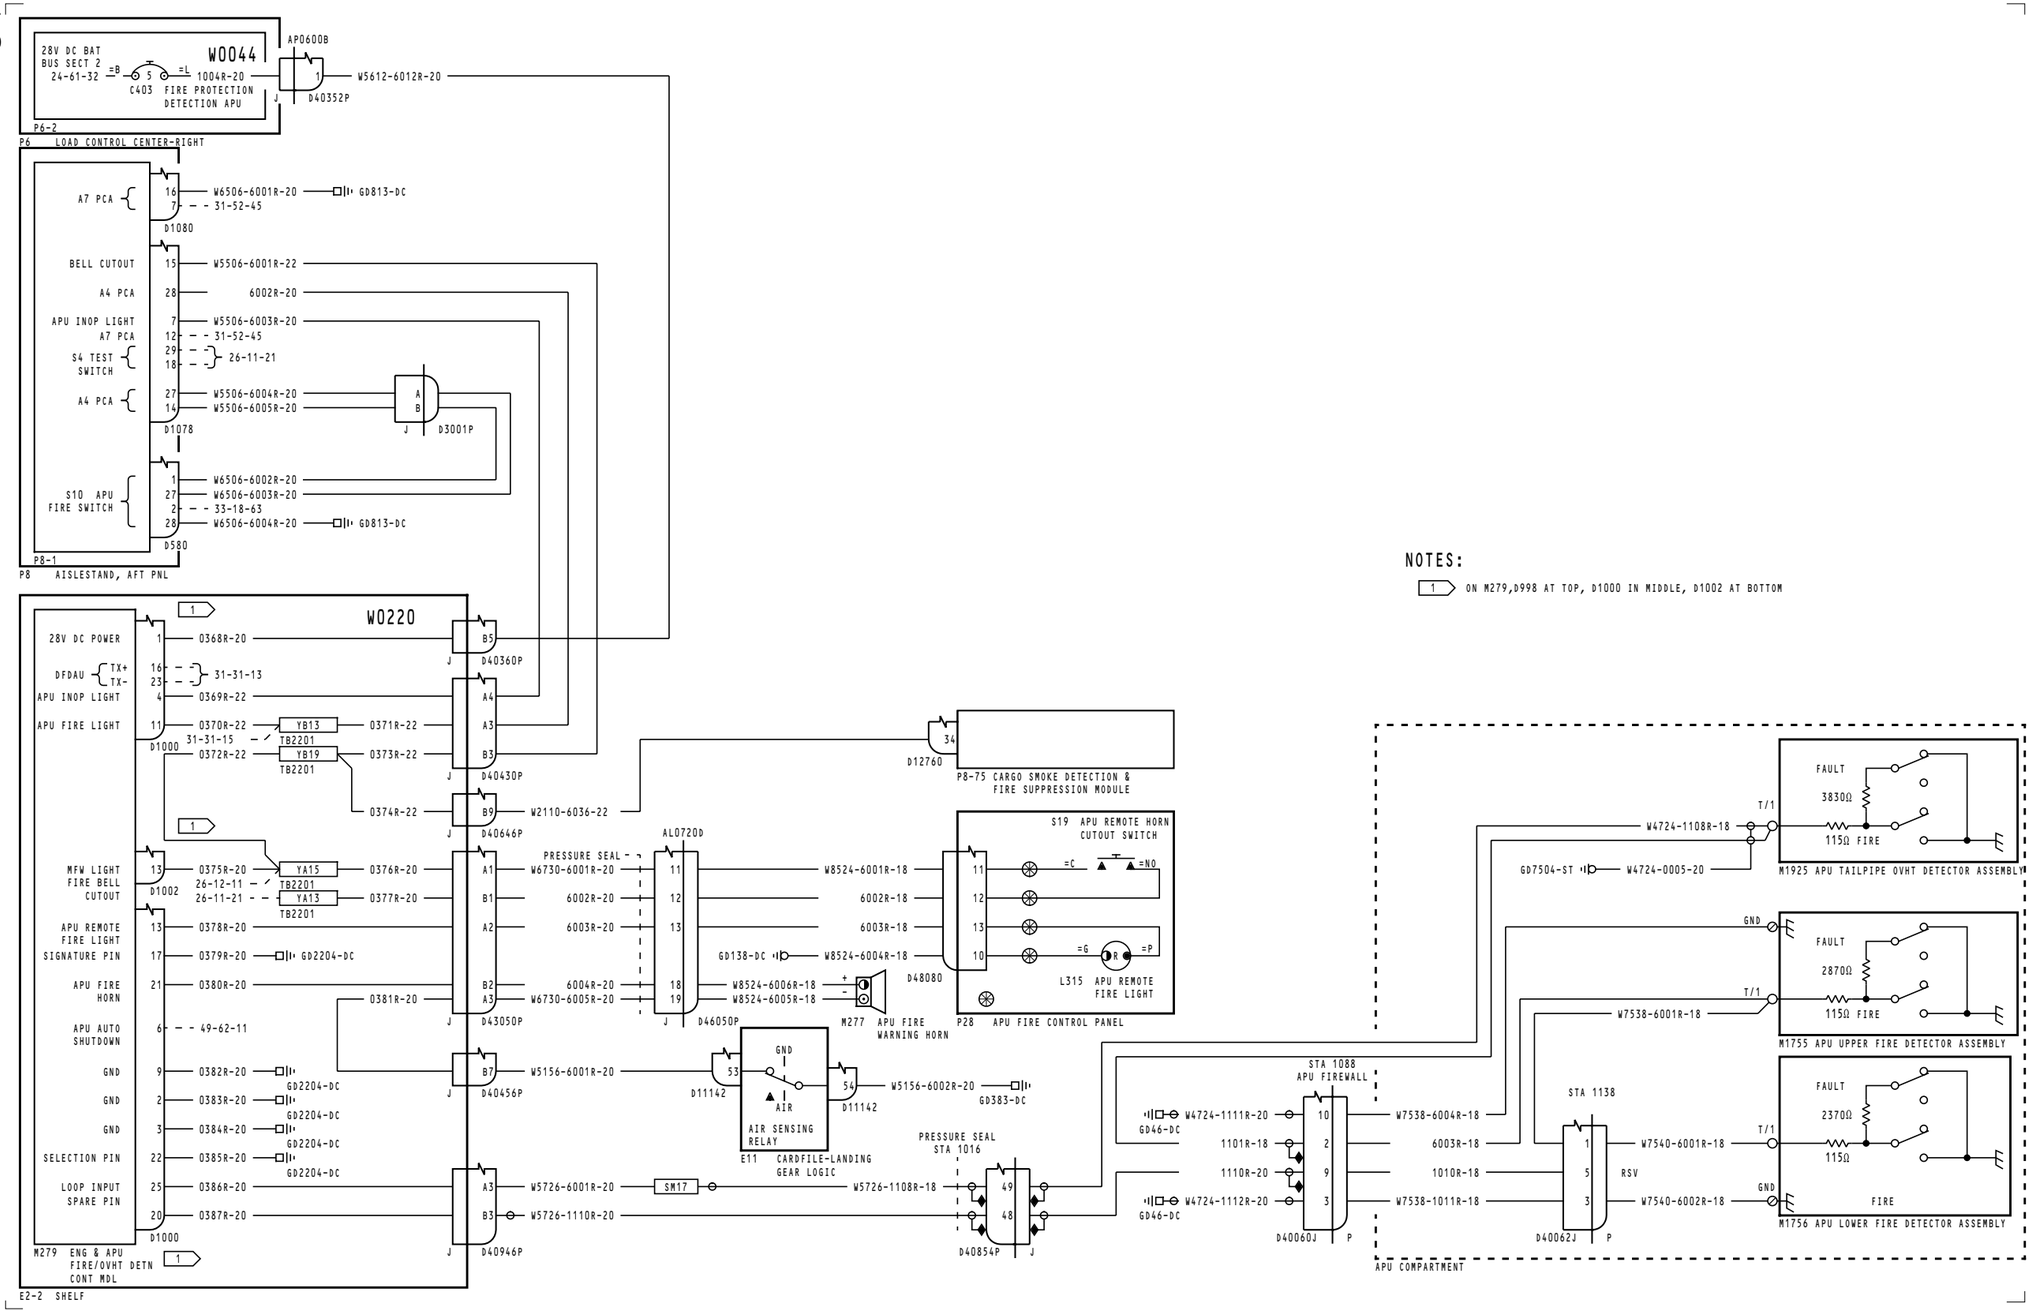

NOTES:

1 ON M279,D998 AT TOP, D1000 IN MIDDLE, D1002 AT BOTTOM

26-11-31


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

15

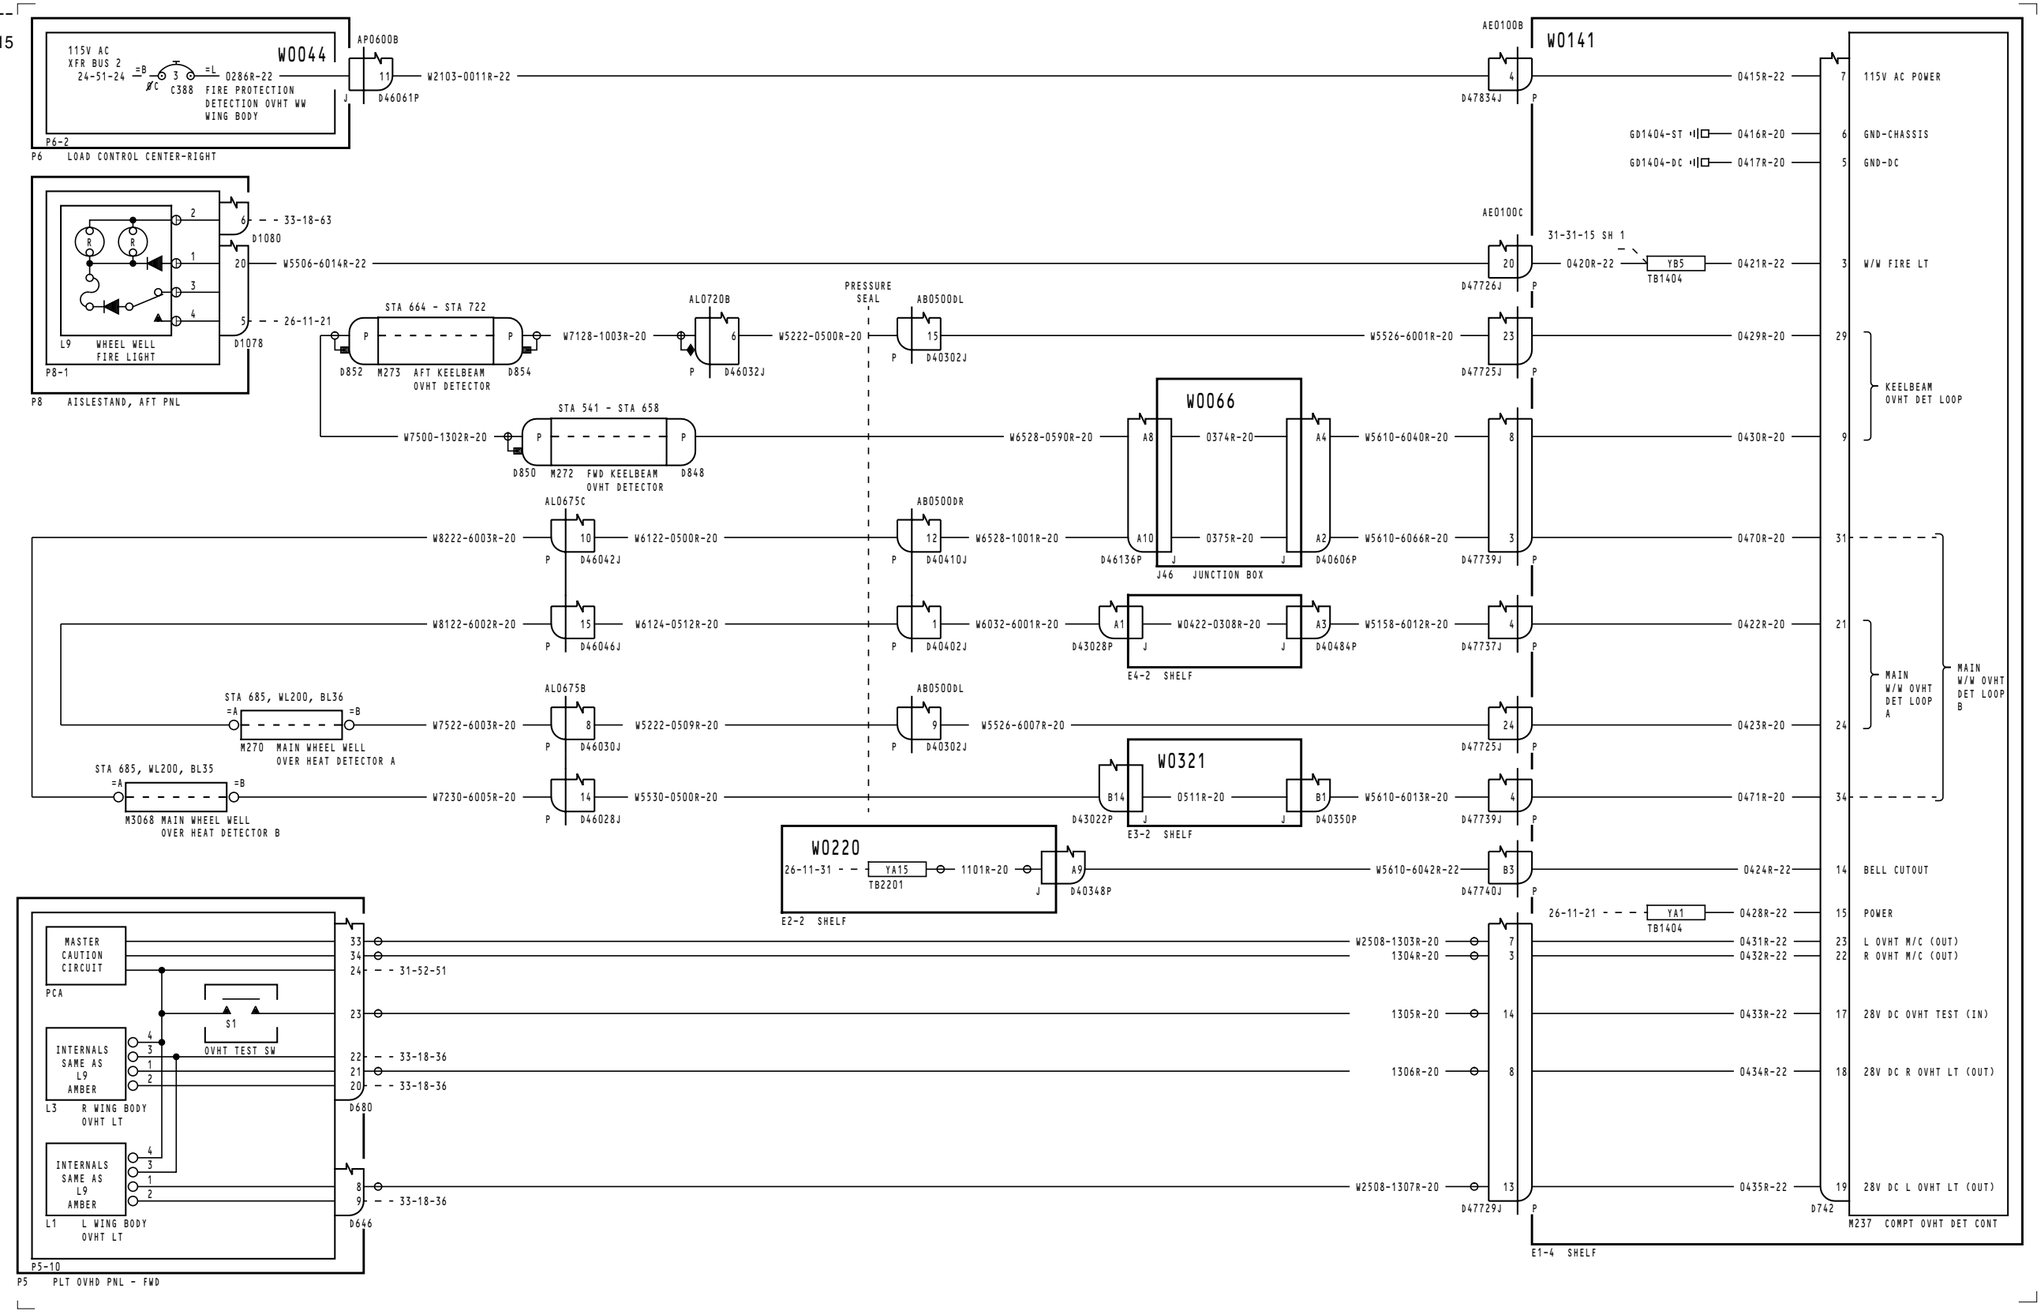


26-12-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

65

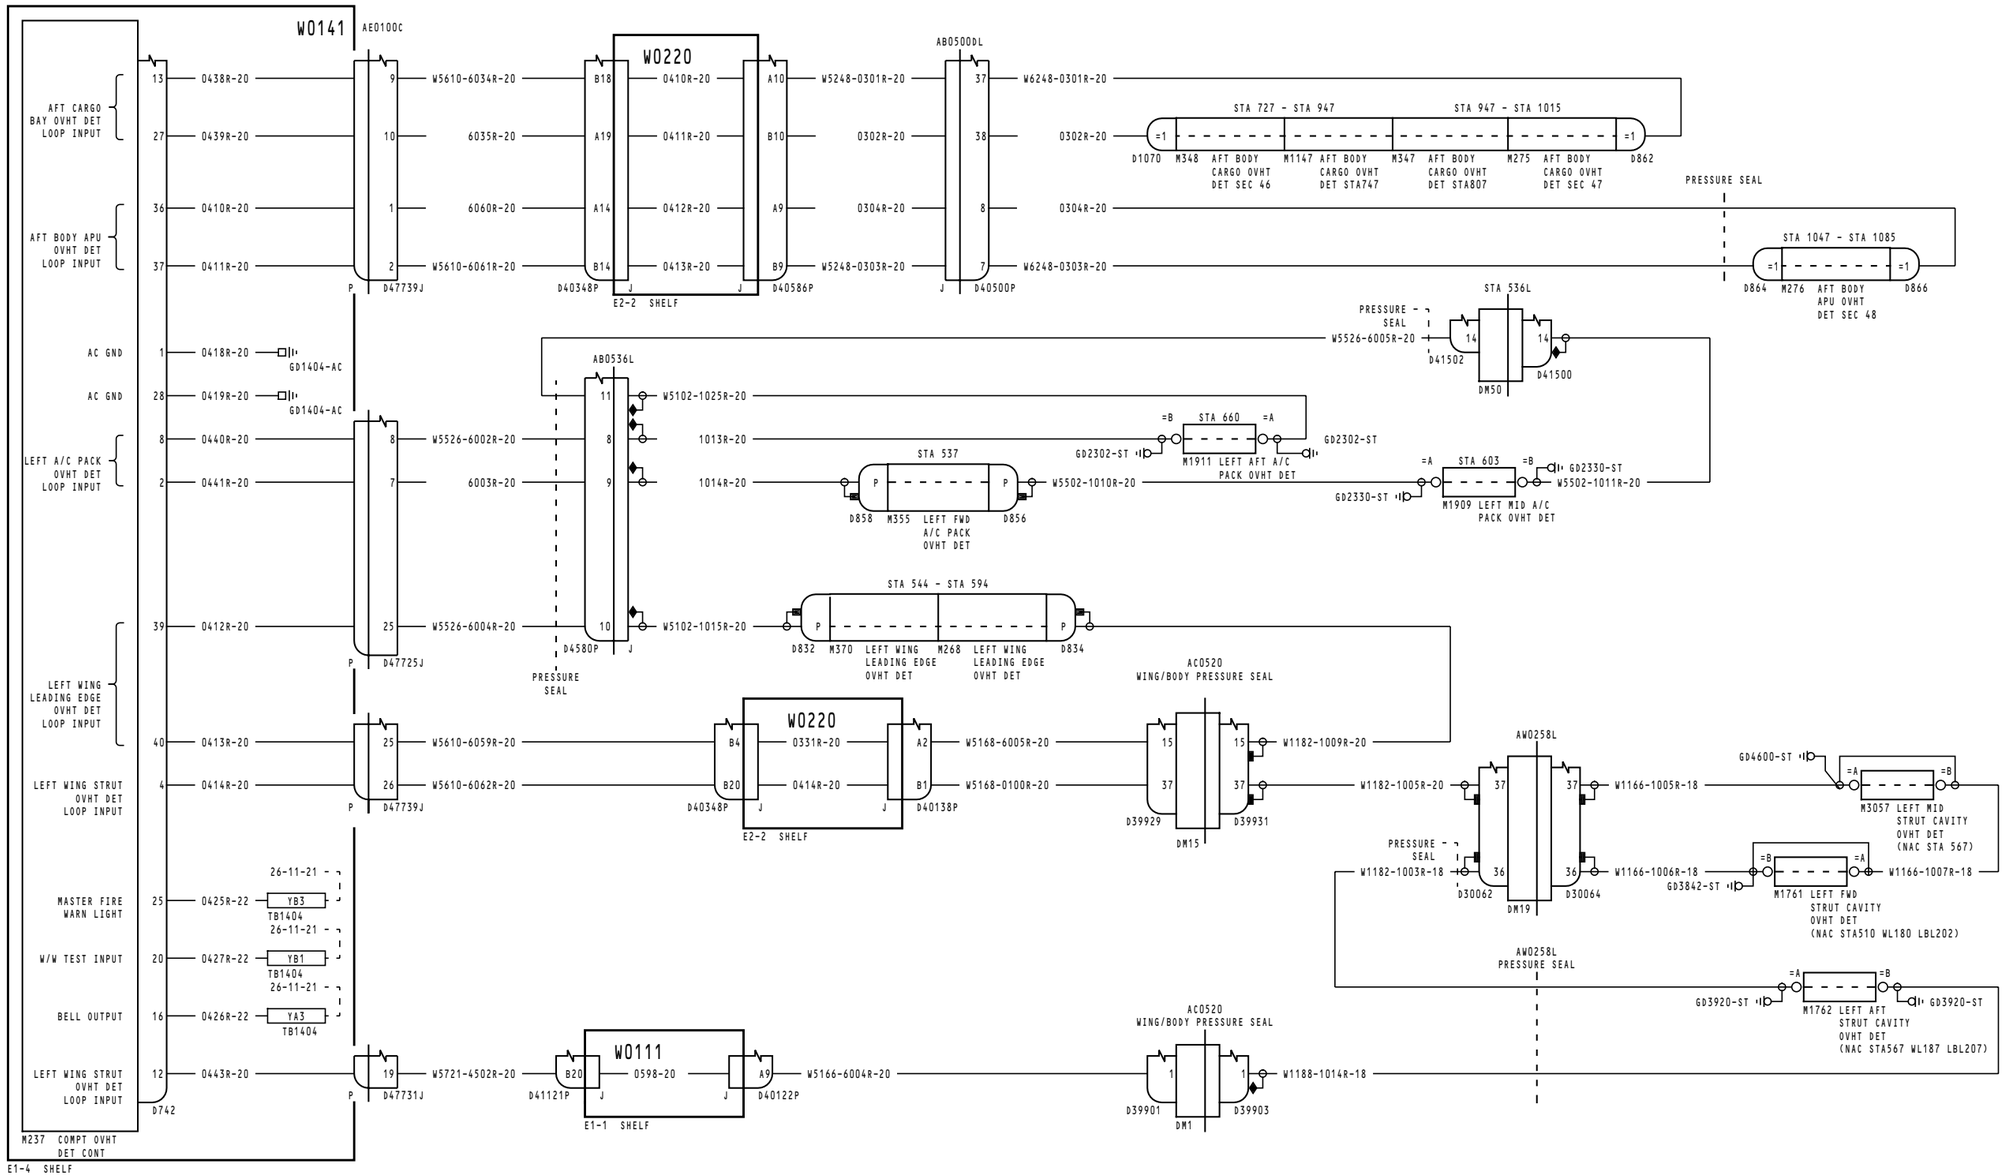


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-12-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

2

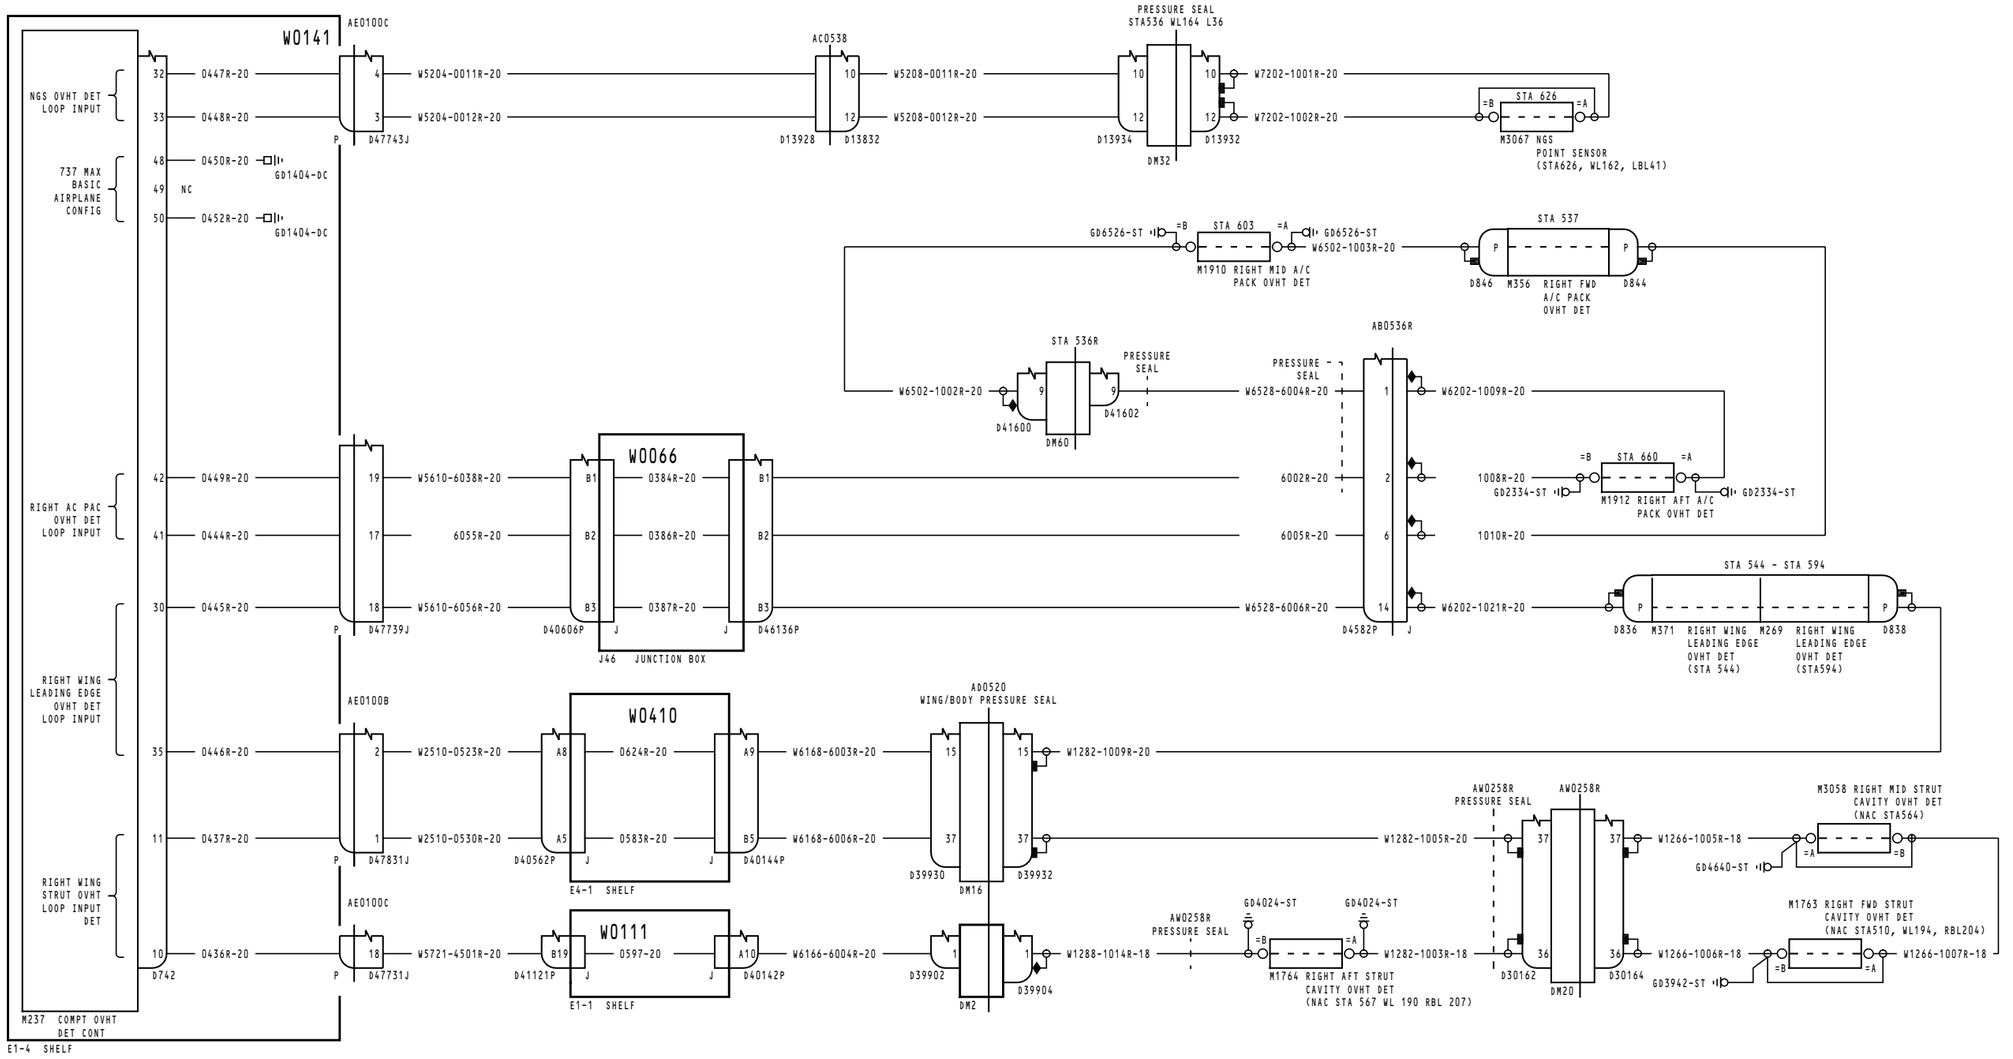


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-12-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

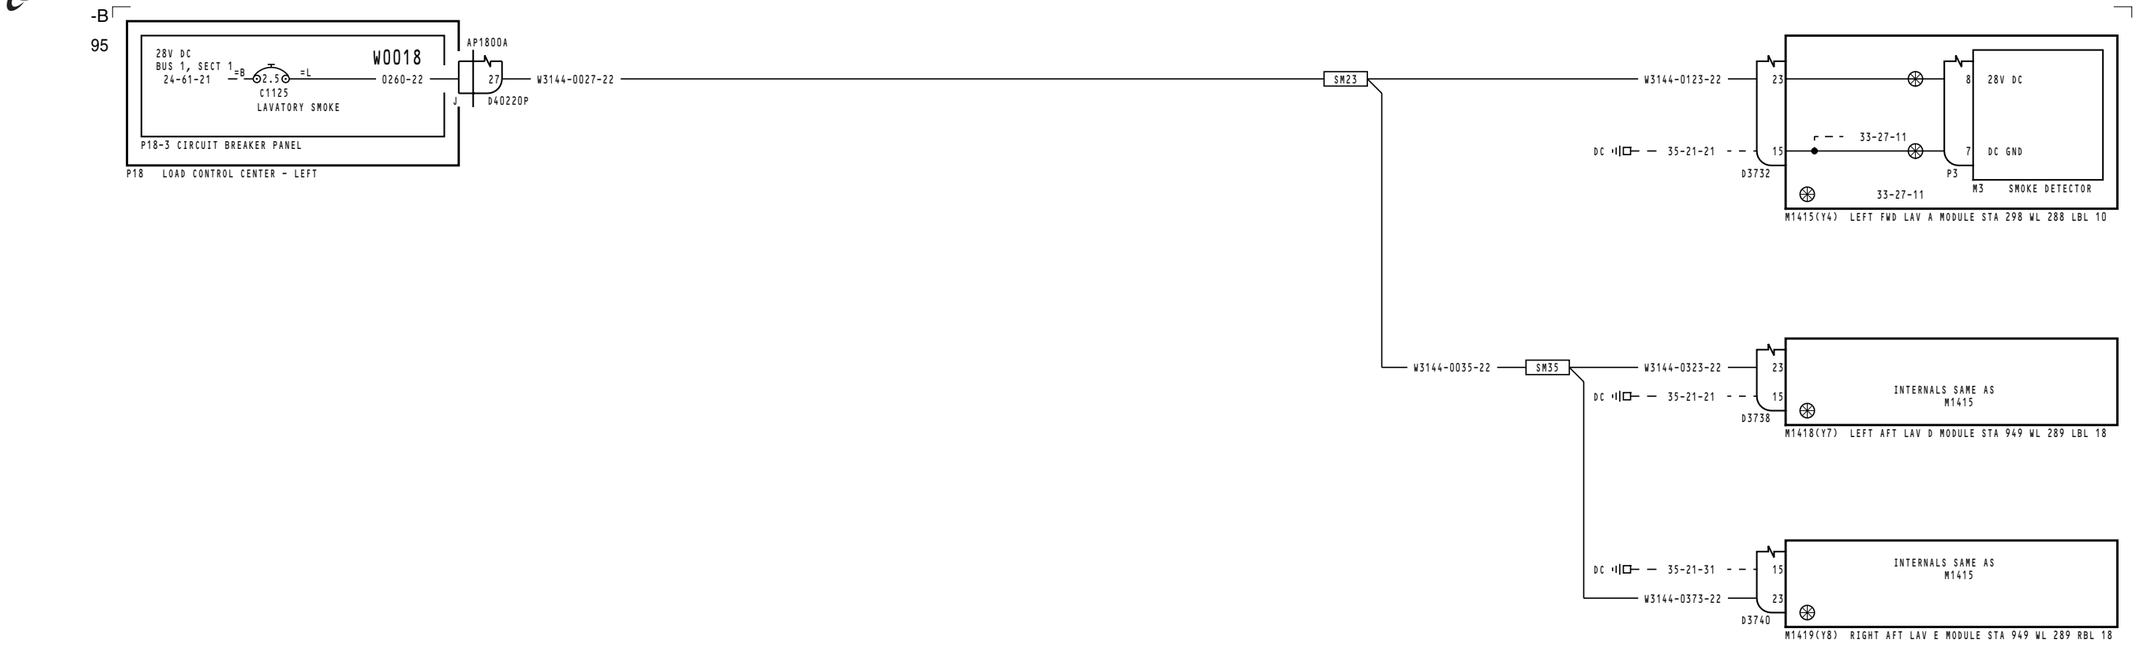

NOTE:
THE INTERNAL WIRING OF THE LAVATORY MODULE IS FOR REFERENCE ONLY.
PLEASE REFER TO LAVATORY COMPONENT MAINTENANCE MANUAL (CMM) FOR COMPLETE FUNCTIONALITY.
BOEING SHOWS ACCURATE WIRING UP TO DISCONNECT BRACKET ONLY.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


26-14-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

138

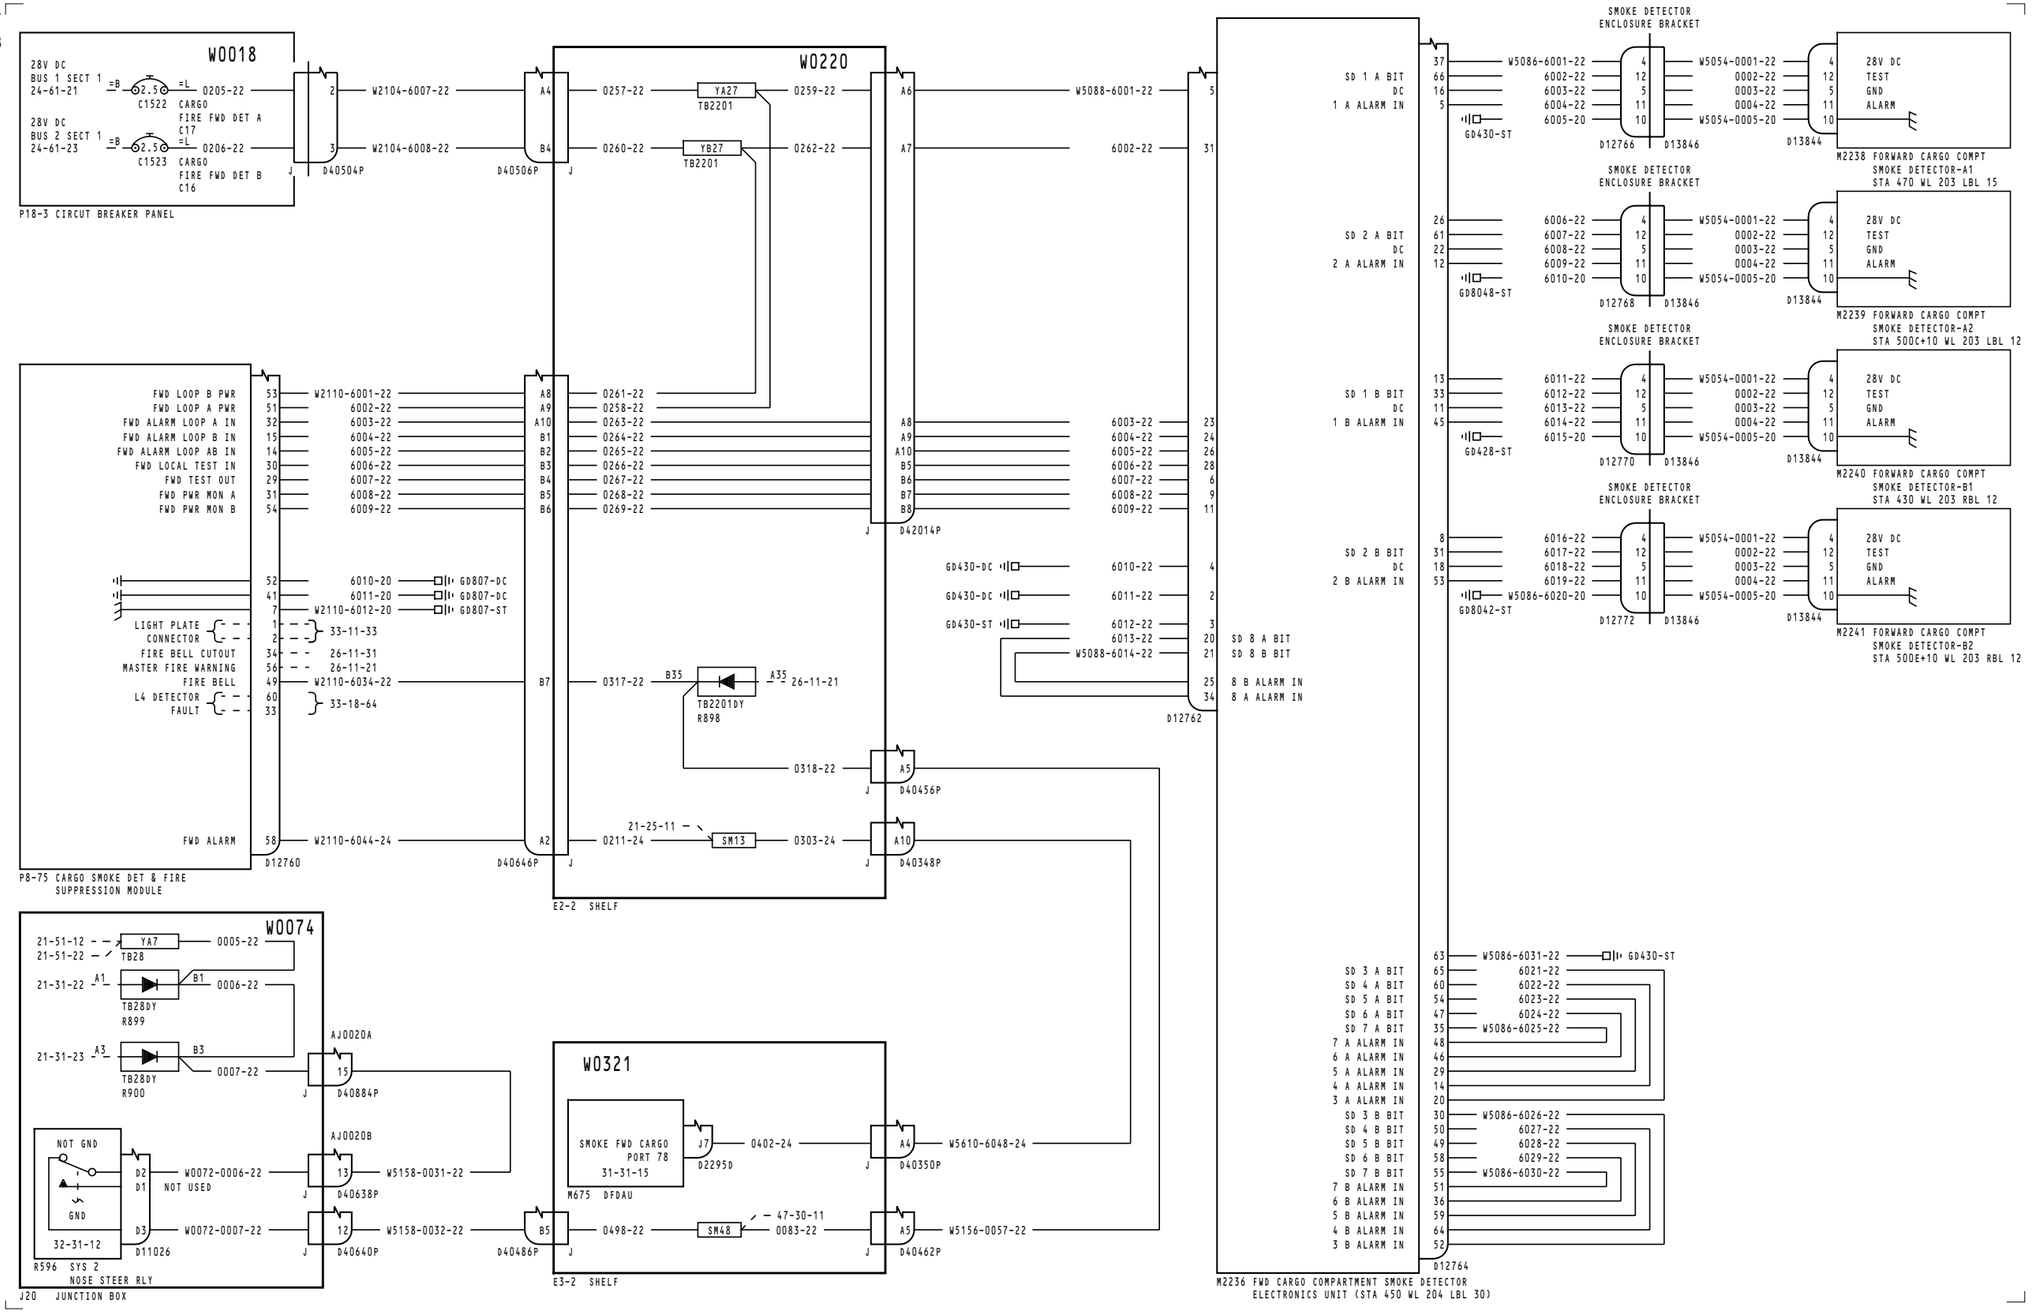

ECCN 9E991 BOEING PROPRIETARY - See title page for details


26-16-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
25

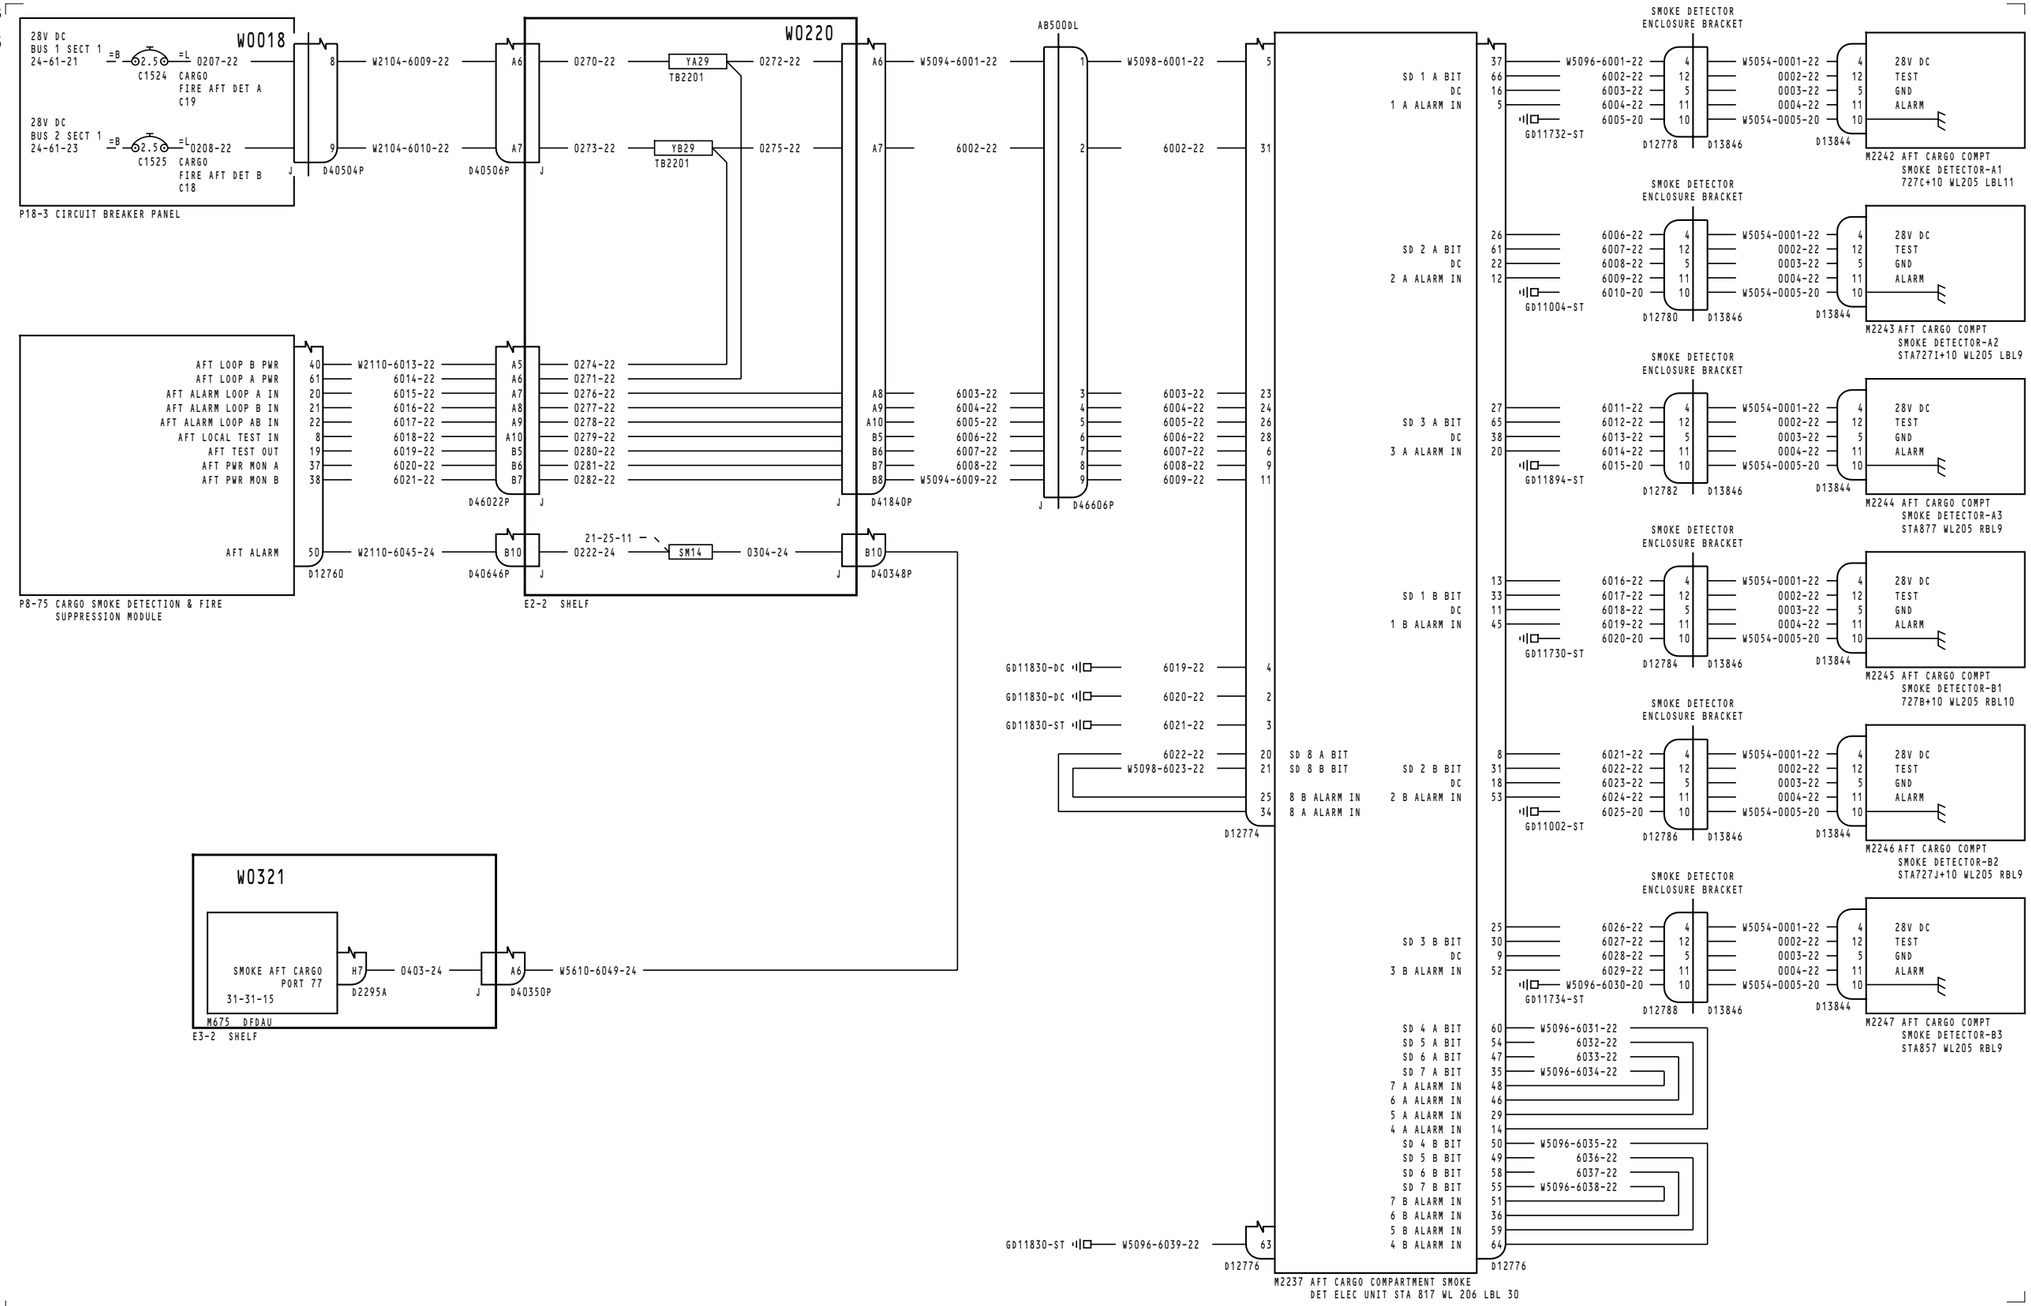


26-16-22

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

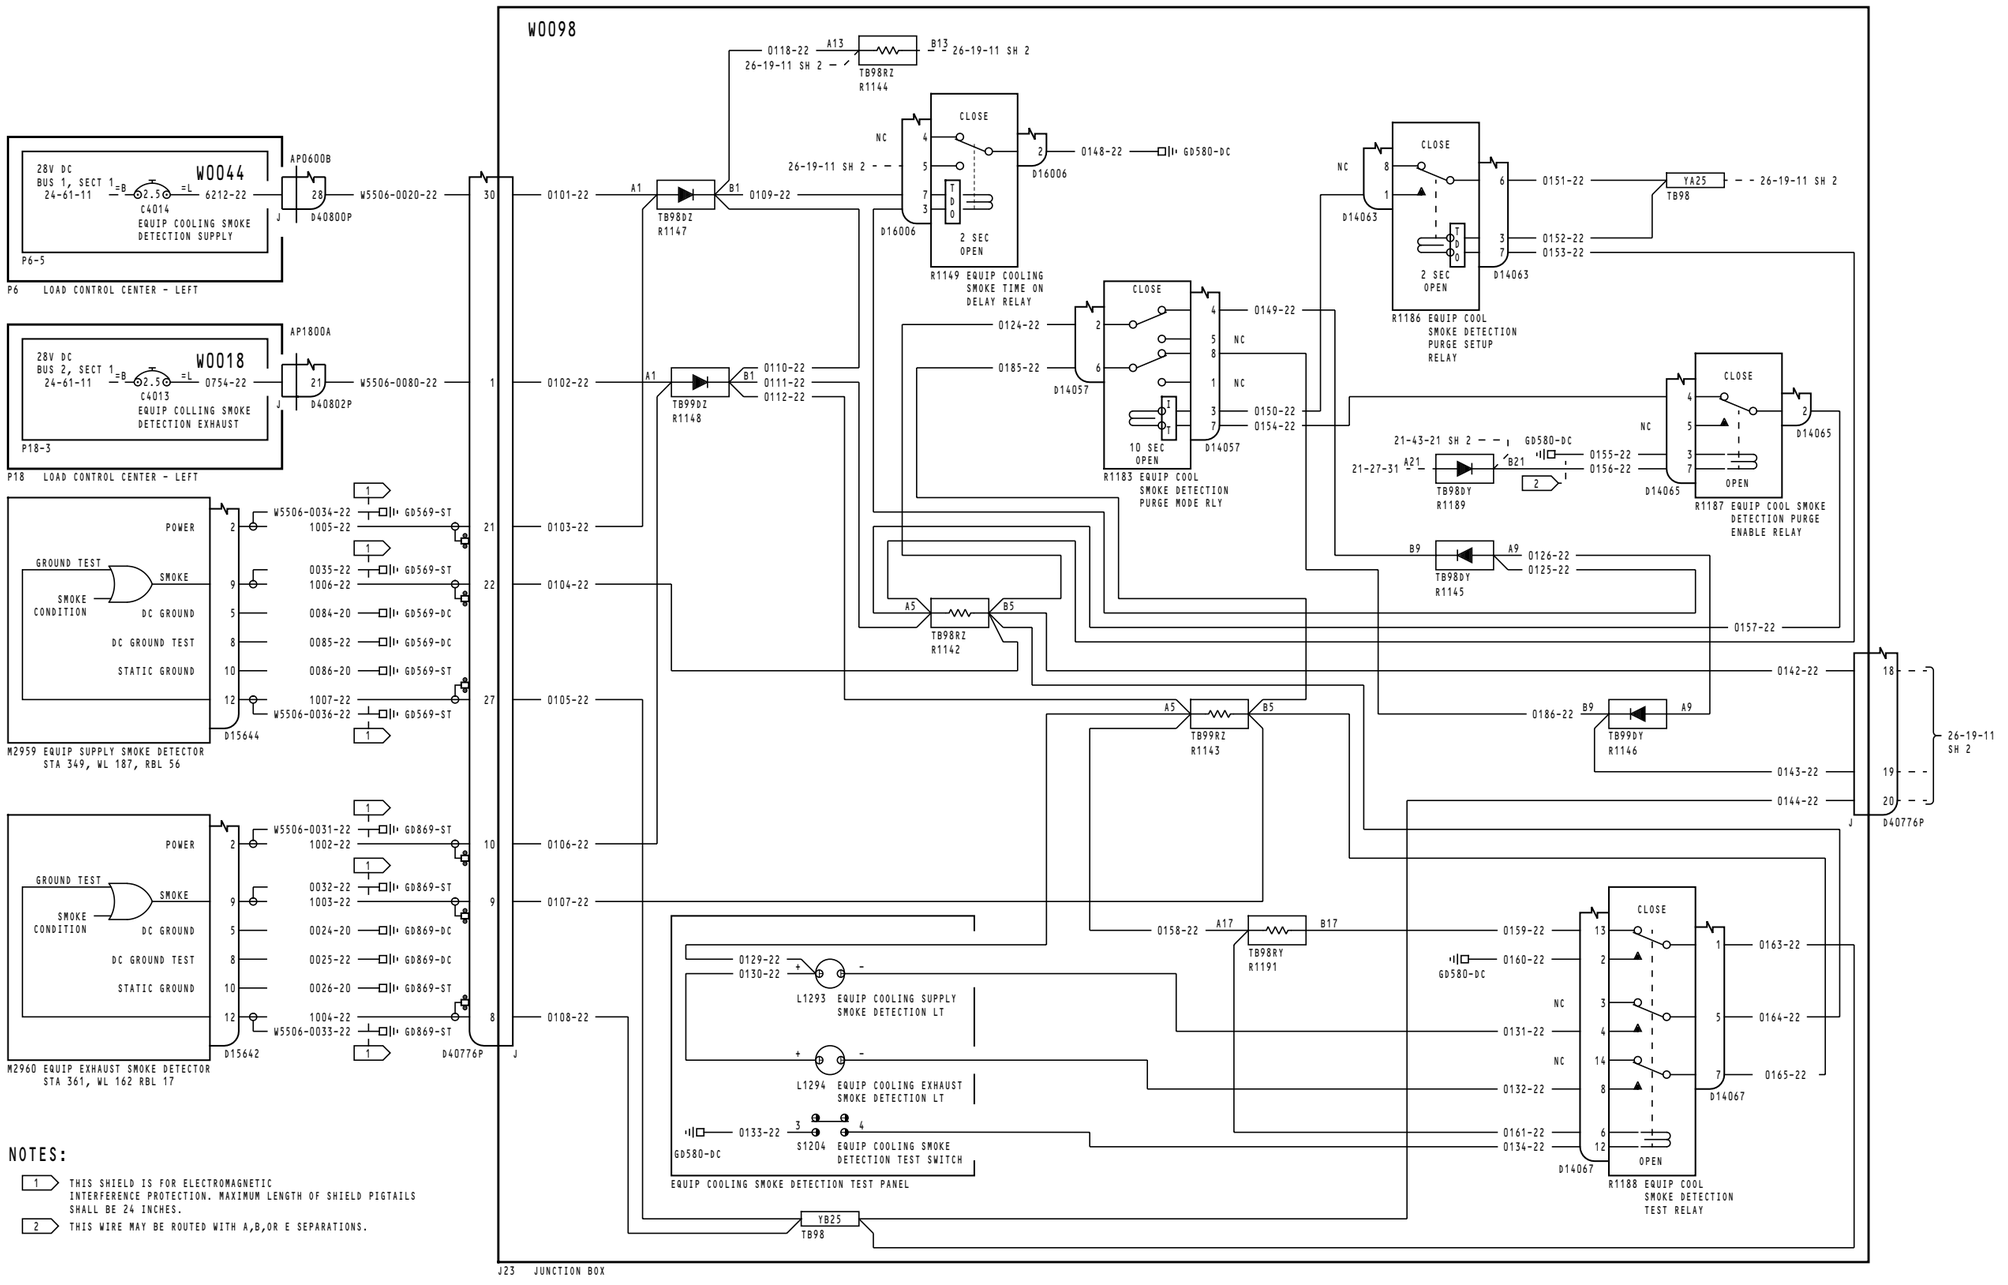

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

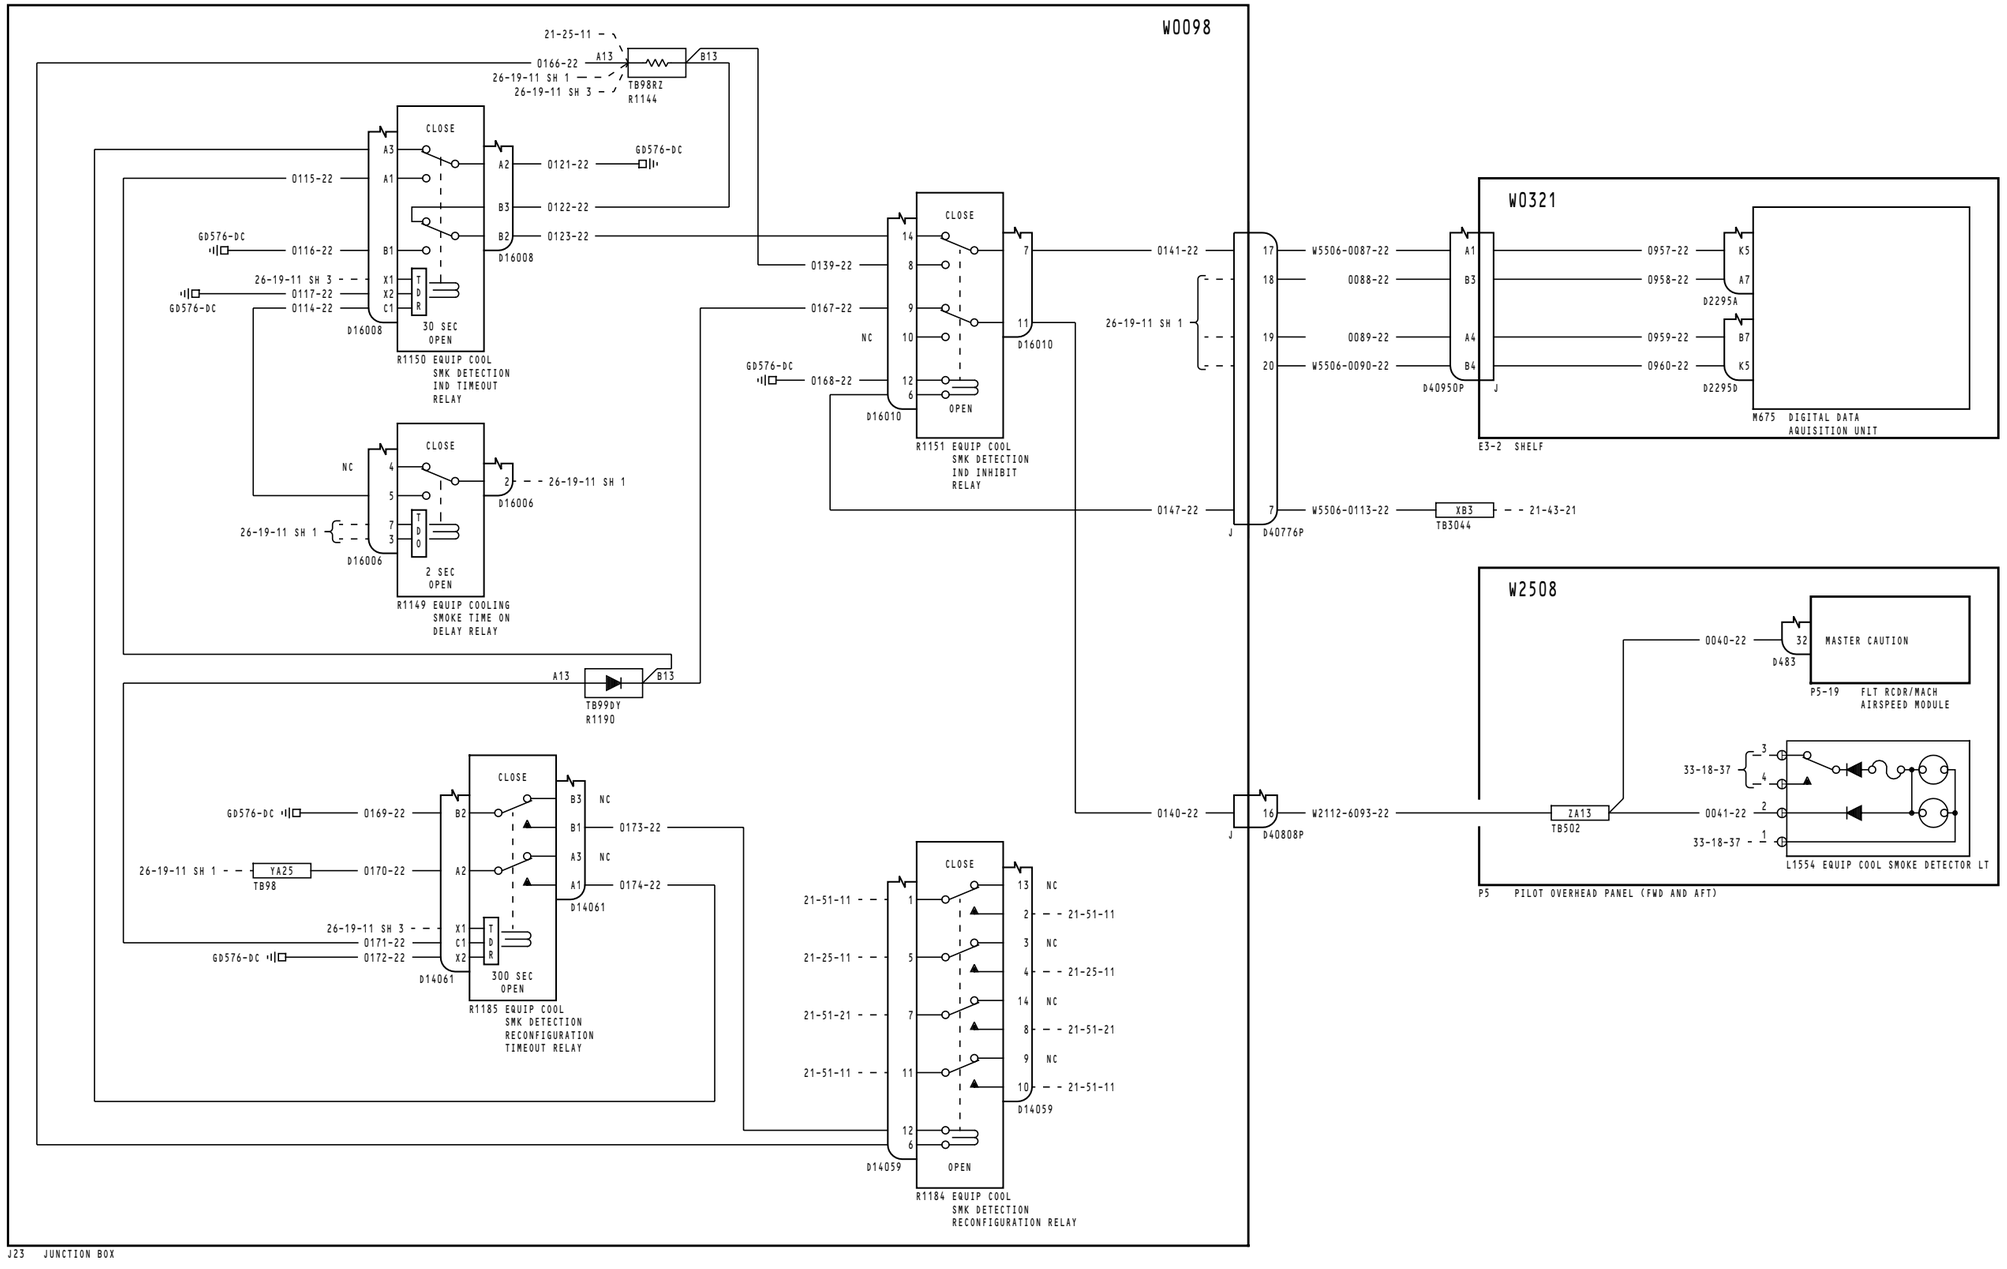

26-19-11


Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-D
1

W0098

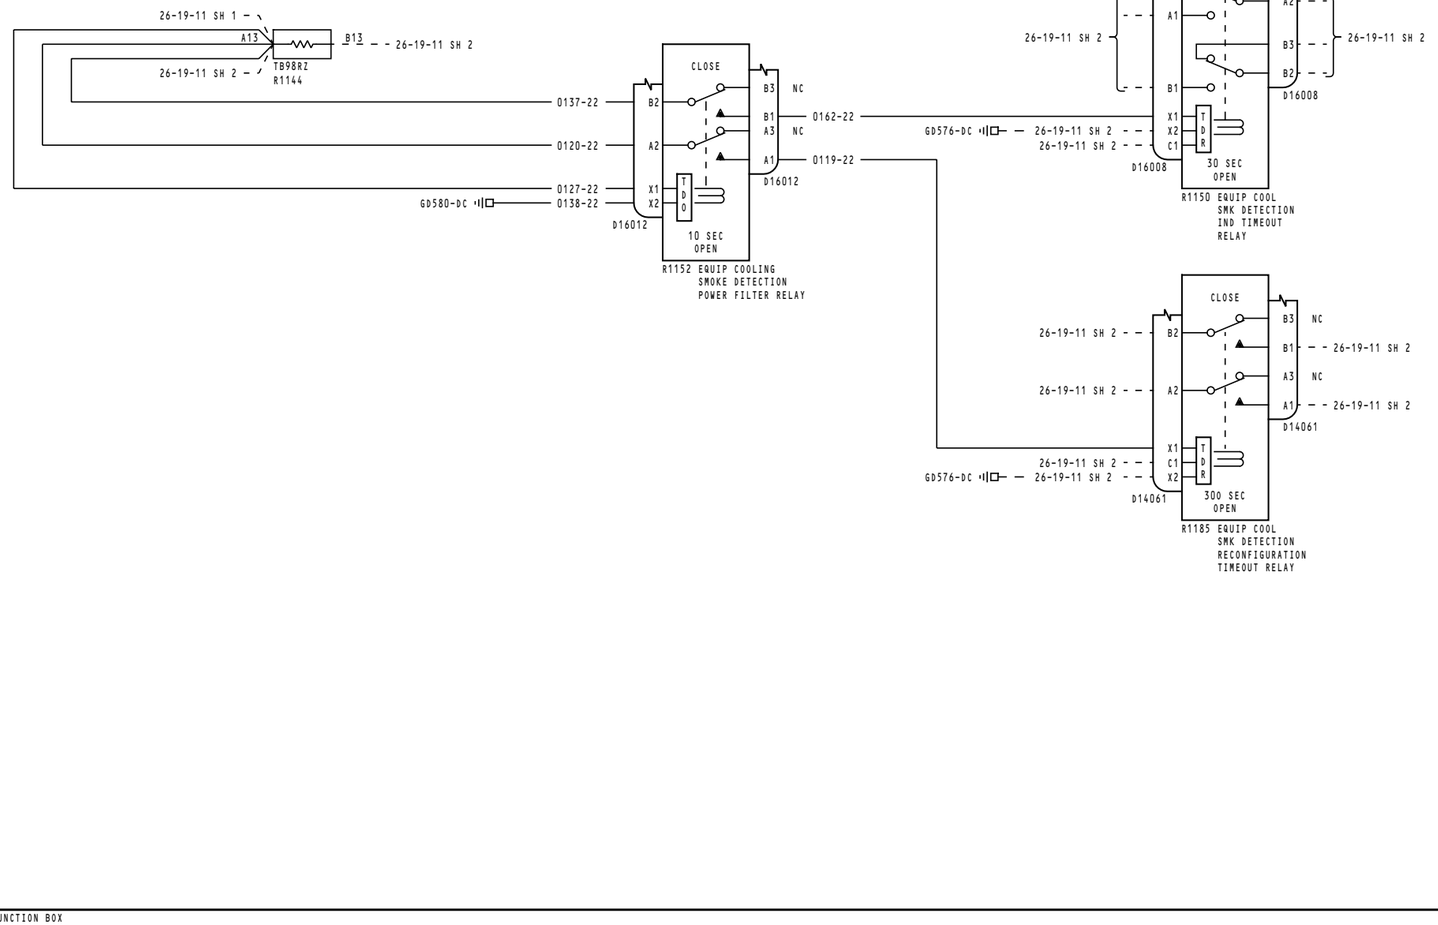


J23 JUNCTION BOX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-19-11

Page 1
Sheet 3
May 15/2024


737-8 WIRING DIAGRAM MANUAL

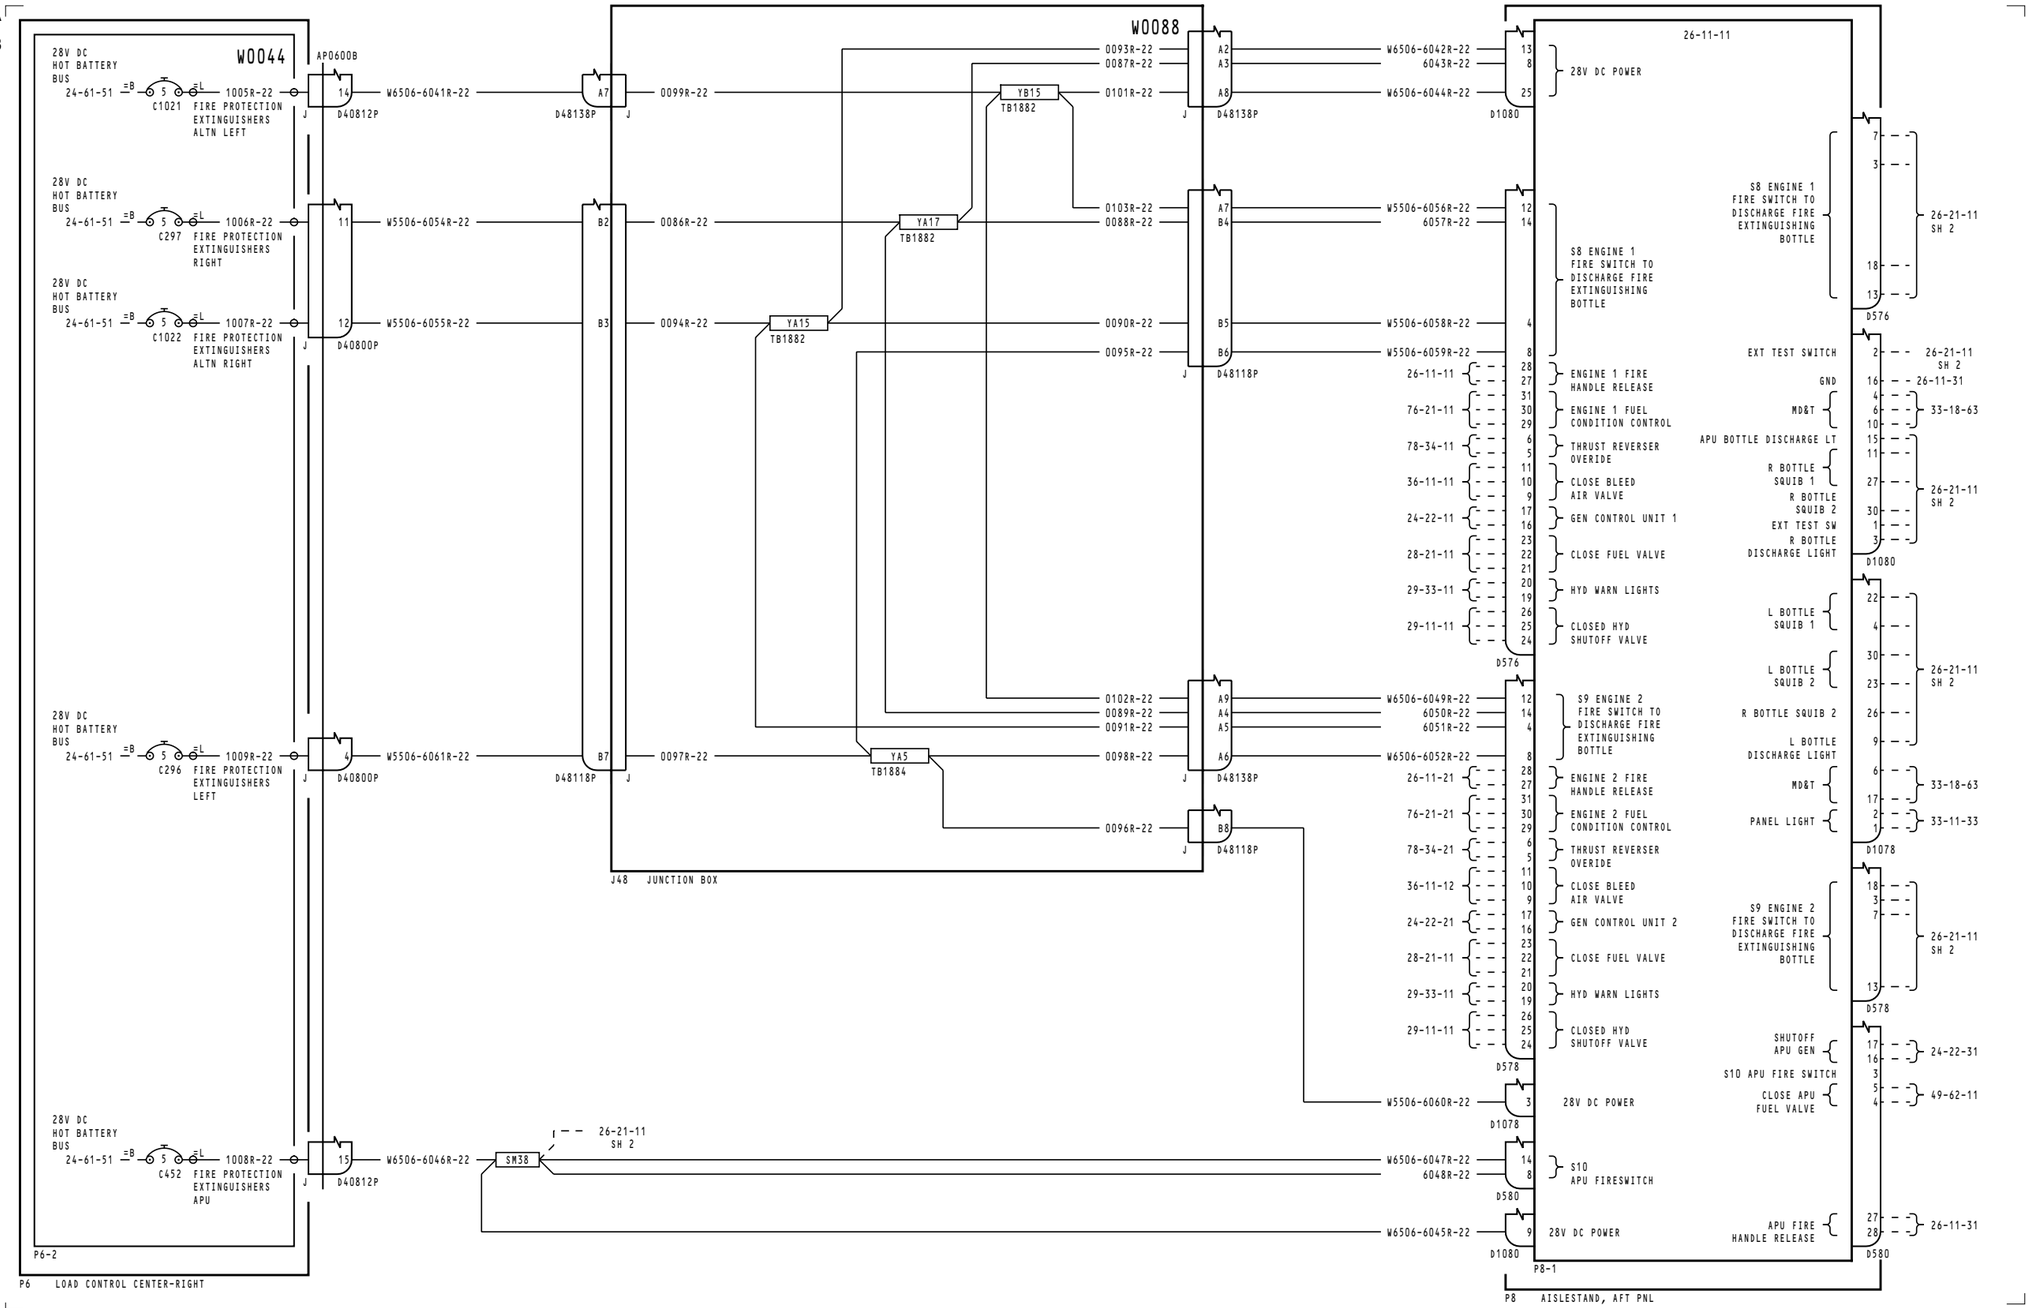

ALL	ENGINE AND APU FIRE EXTINGUISHING SYSTEM	26-21-11	26-21-11
	D280AM1215	Page 1 Sheet 1 May 15/2024	Page 1 Sheet 1 May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

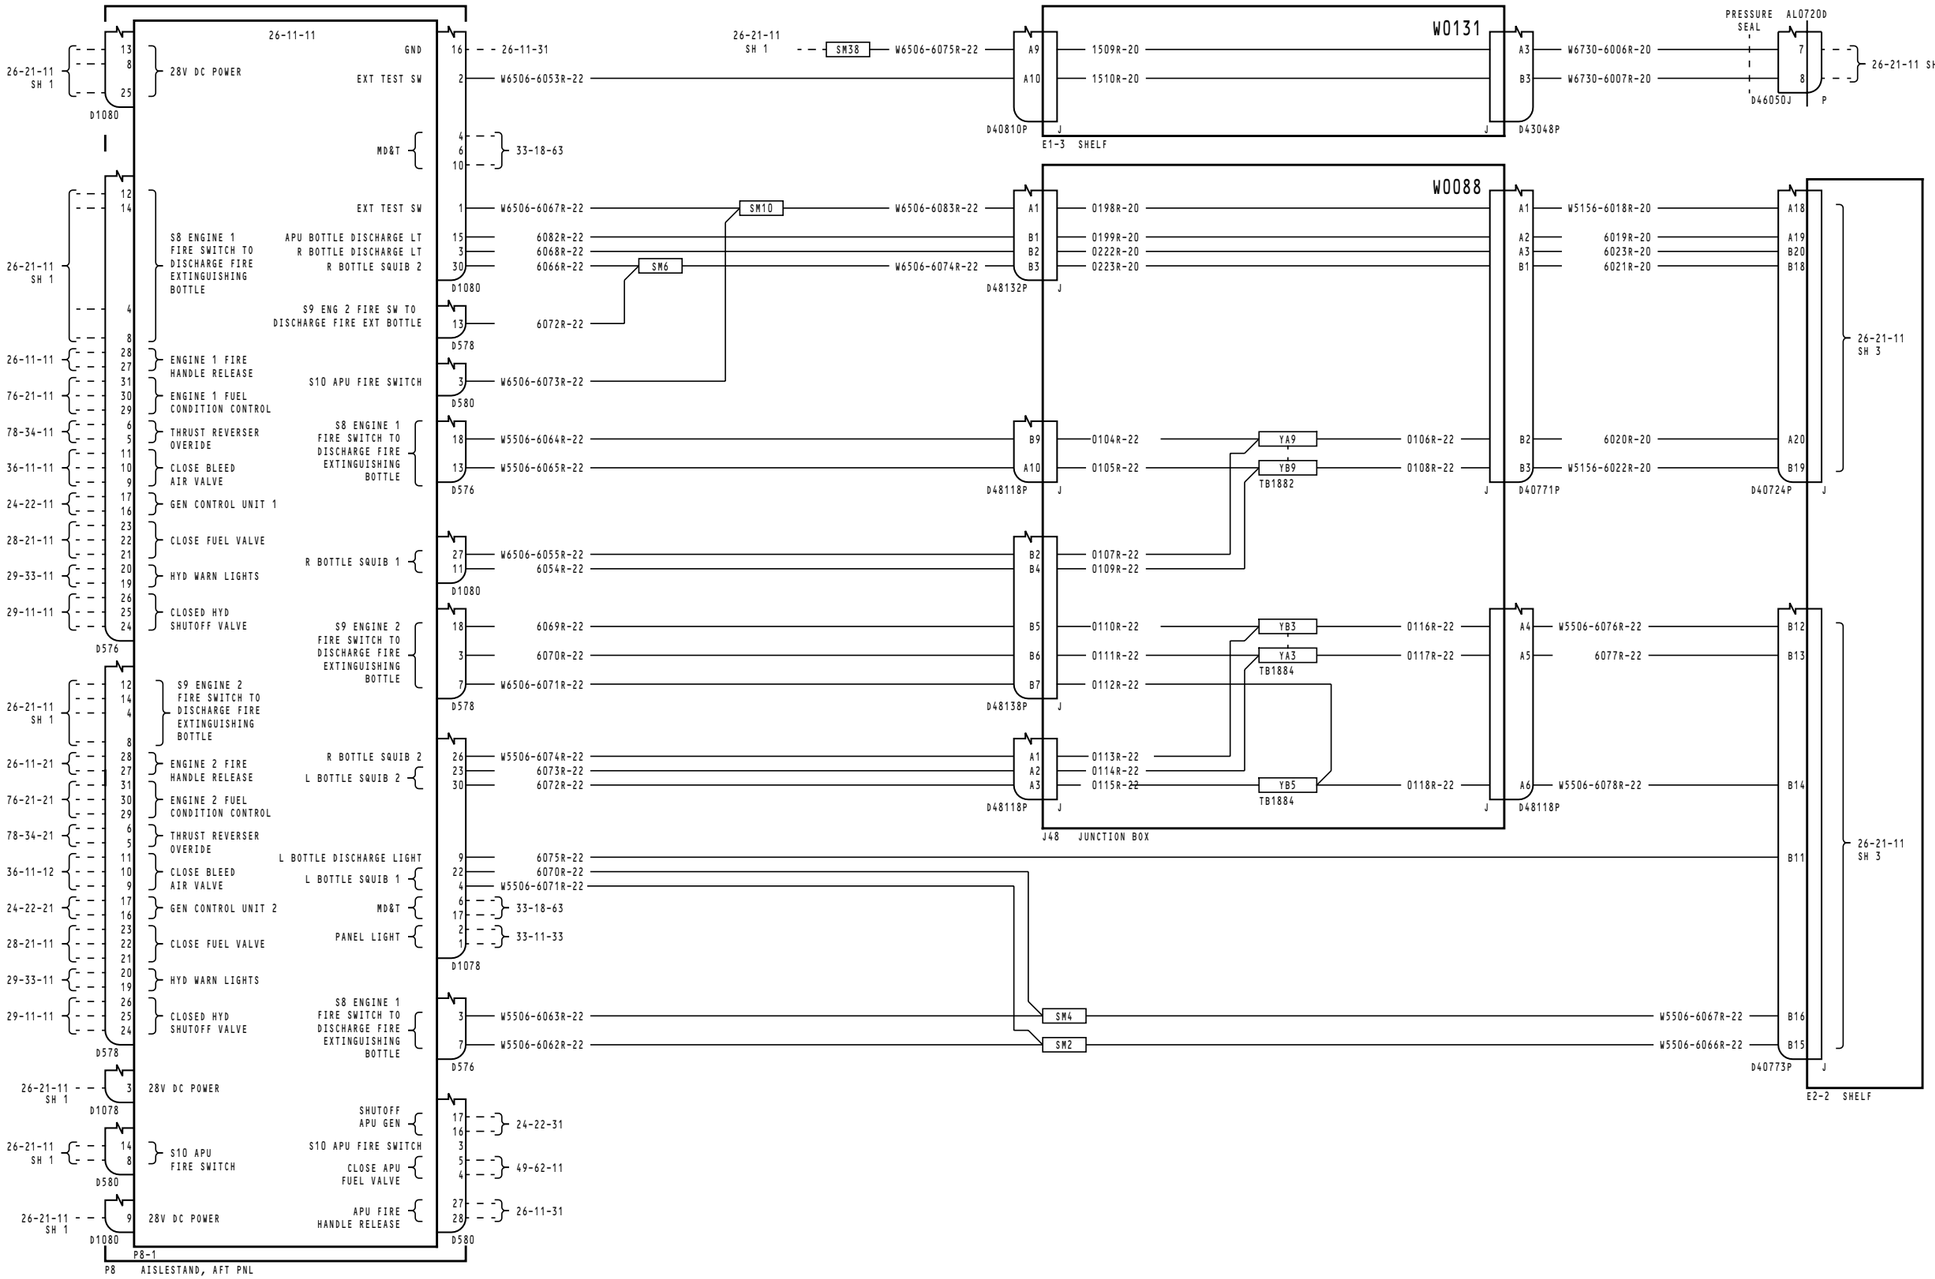

ALL

ENGINE AND APU FIRE EXTINGUISHING SYSTEM

D280AM1215

26-21-11

Page 1
Sheet 2
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-21-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
10

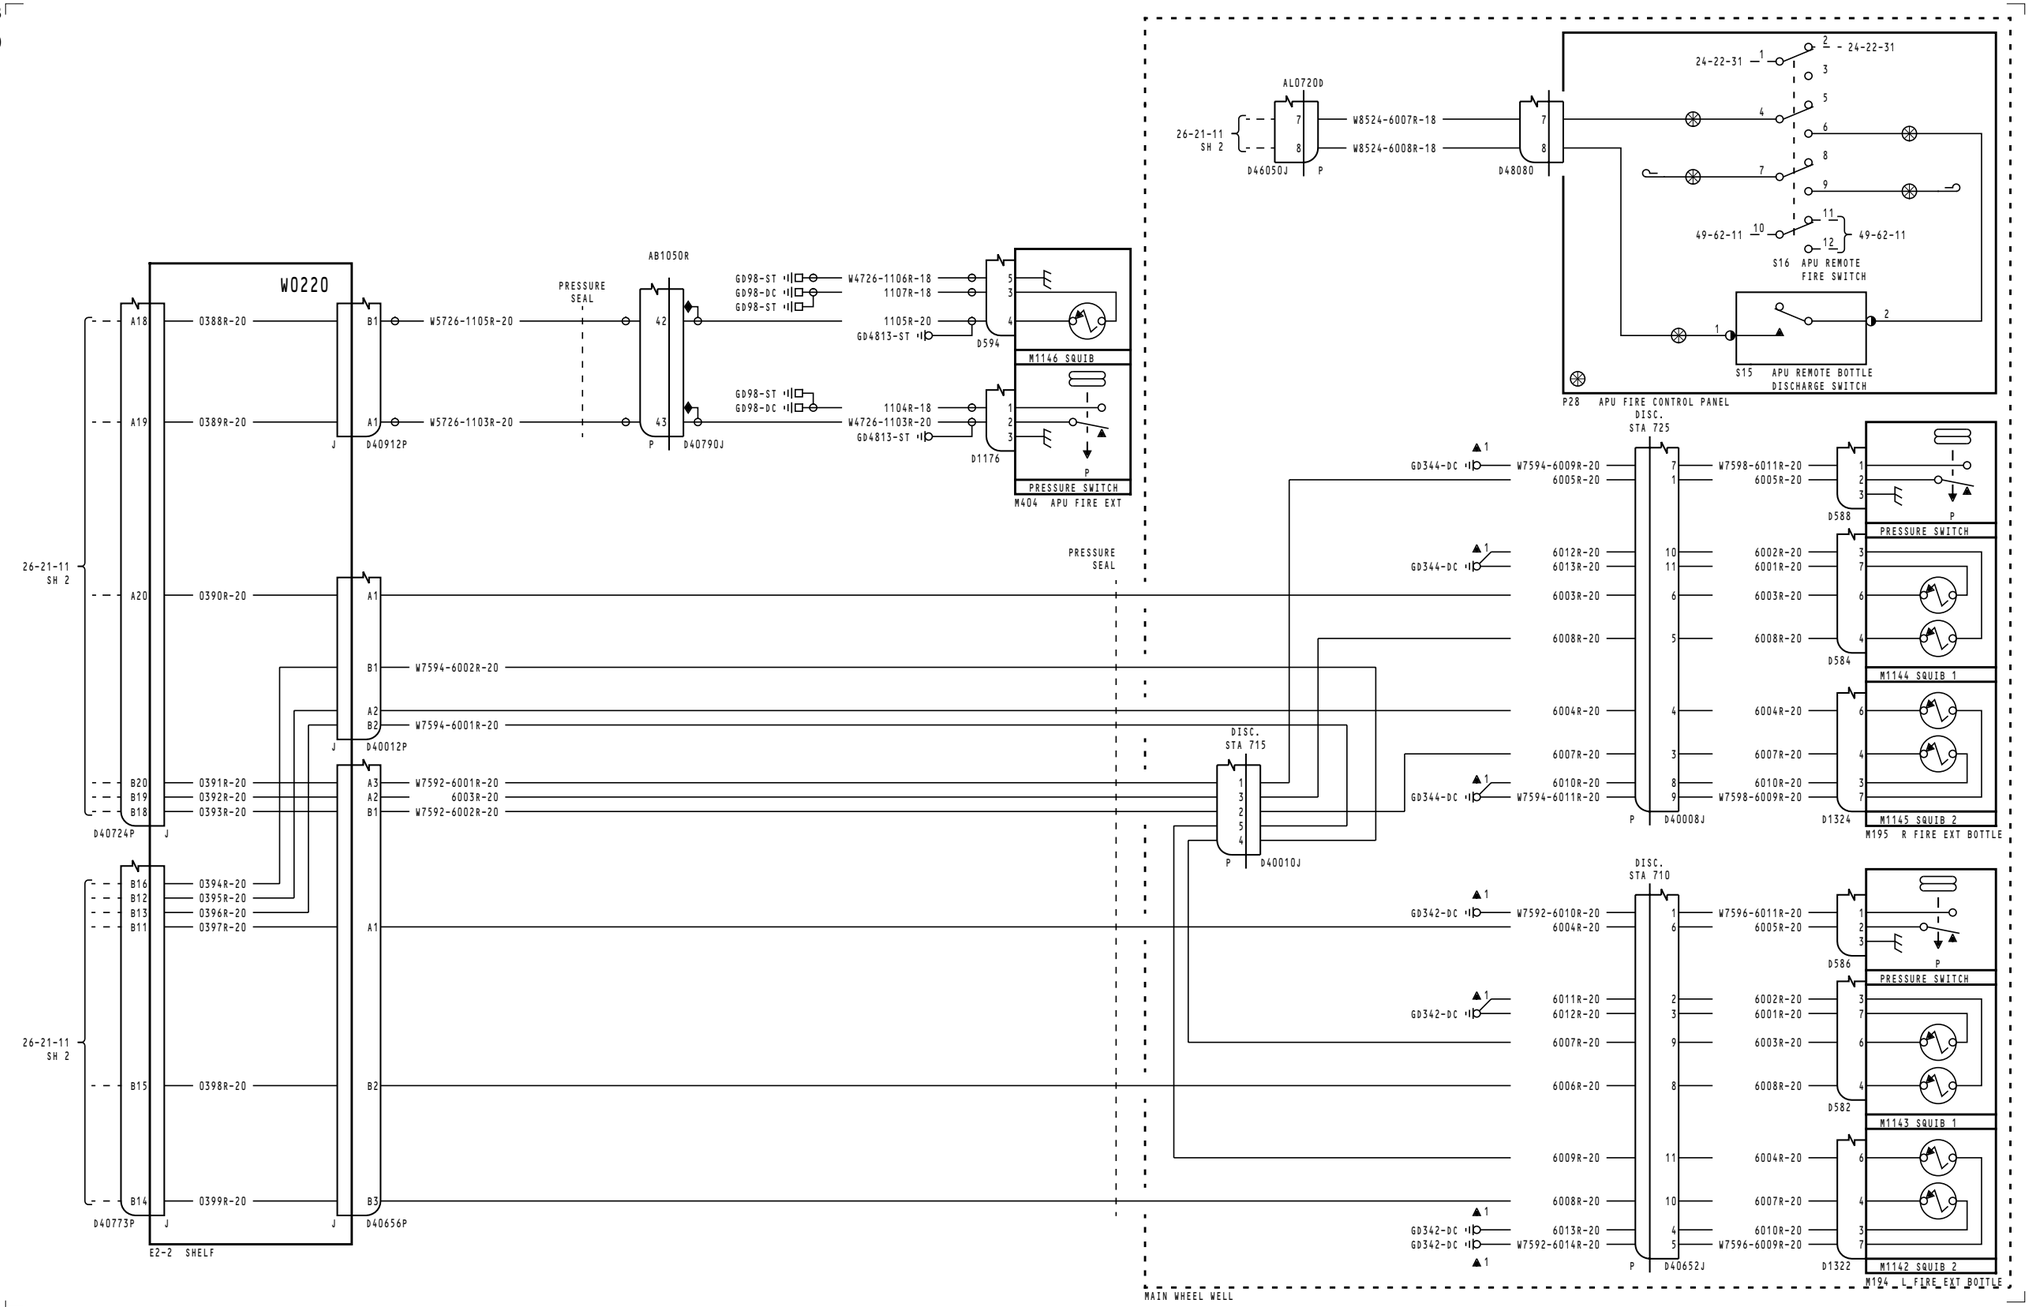


ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-21-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
40

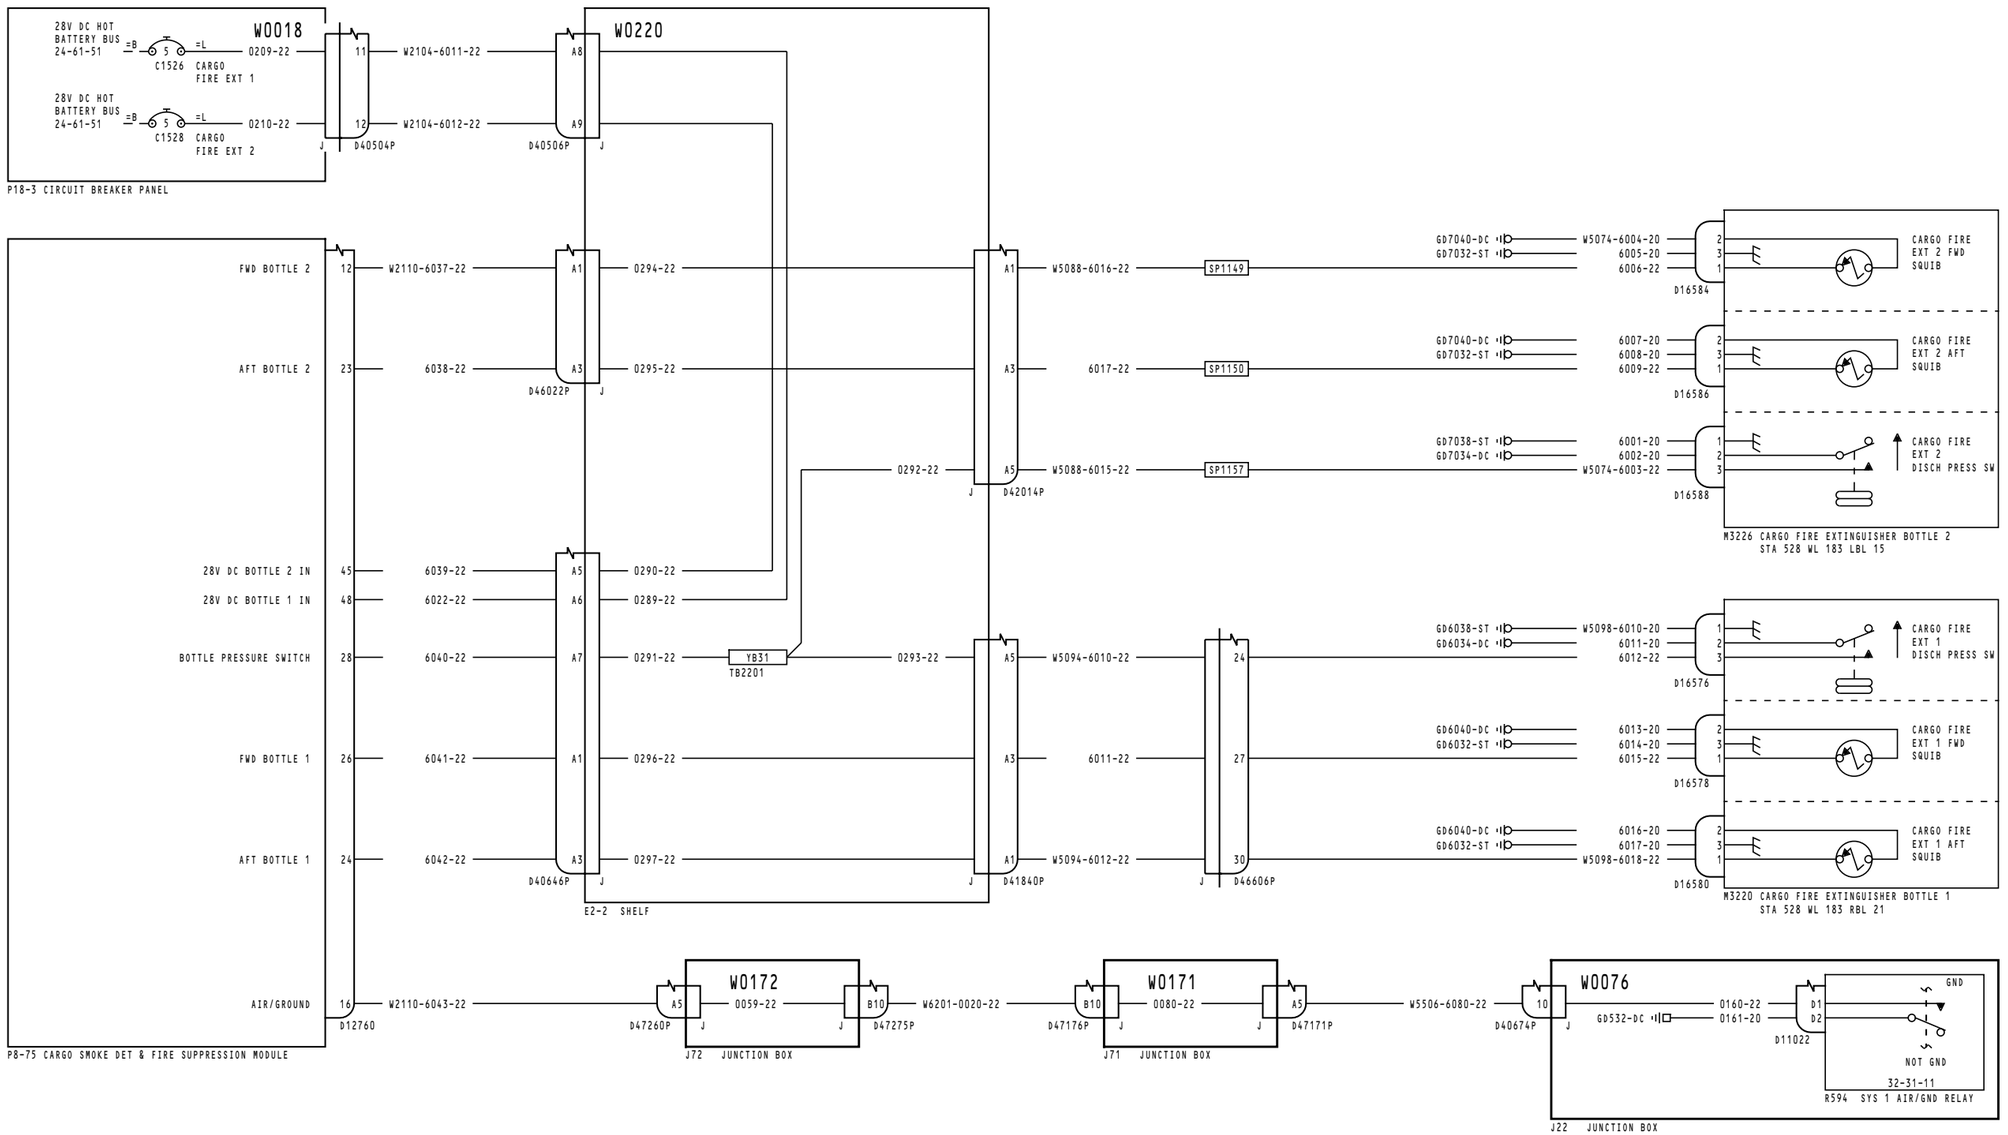

ECCN 9E991 BOEING PROPRIETARY - See title page for details

26-23-11

Page 1

May 15/2024