CHAPTER

28

FUEL

CHAPTER 28
FUEL

CH-SE-SU	Schem	Page	Sheet	Date
28-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
28-CONTENTS				
		1		May 15/2024
		2		BLANK
28-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
28-21-11				
		1	1	May 15/2024
			2	May 15/2024
28-21-21				
		1		May 15/2024
28-22-11				
		1		May 15/2024
28-23-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
28-41-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
			5	May 15/2024
28-42-11				
		1		May 15/2024
28-43-11				
		1		May 15/2024
28-44-11				
		1	1	May 15/2024
			2	May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 28
FUEL

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
ENGINE FUEL SYSTEM						
ENGINE FUEL SHUT-OFF VALVES	28-21-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
BATTERY AND CONTROL POWER ENGINE SPAR AND APU FUEL VALVES	28-21-21		1		May 15/2024	ALL
ENGINE FUEL FEED SYSTEM						
FUEL CROSSFEED VALVE	28-22-11		1		May 15/2024	ALL
FUEL BOOST PUMPS						
FUEL BOOST PUMPS	28-23-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
FUEL QUANTITY INDICATING SYSTEM						
FUEL QUANTITY	28-41-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
				5	May 15/2024	ALL
FUEL TEMPERATURE INDICATING SYSTEM						
FUEL TEMPERATURE INDICATION	28-42-11		1		May 15/2024	ALL
FUEL PRESSURE INDICATING SYSTEM						
FUEL BOOST PUMPS LOW PRESSURE WARNING LIGHTS	28-43-11		1		May 15/2024	ALL
REFUELING INDICATION						
GROUND REFUELING	28-44-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 28
FUEL


CH-SE-SU	Title
28-21-21	BATTERY AND CONTROL POWER ENGINE SPAR AND APU FUEL VALVES
28-21-11	ENGINE FUEL SHUT-OFF VALVES
28-23-11	FUEL BOOST PUMPS
28-43-11	FUEL BOOST PUMPS LOW PRESSURE WARNING LIGHTS
28-22-11	FUEL CROSSFEED VALVE
28-41-11	FUEL QUANTITY
28-42-11	FUEL TEMPERATURE INDICATION
28-44-11	GROUND REFUELING

28-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

24

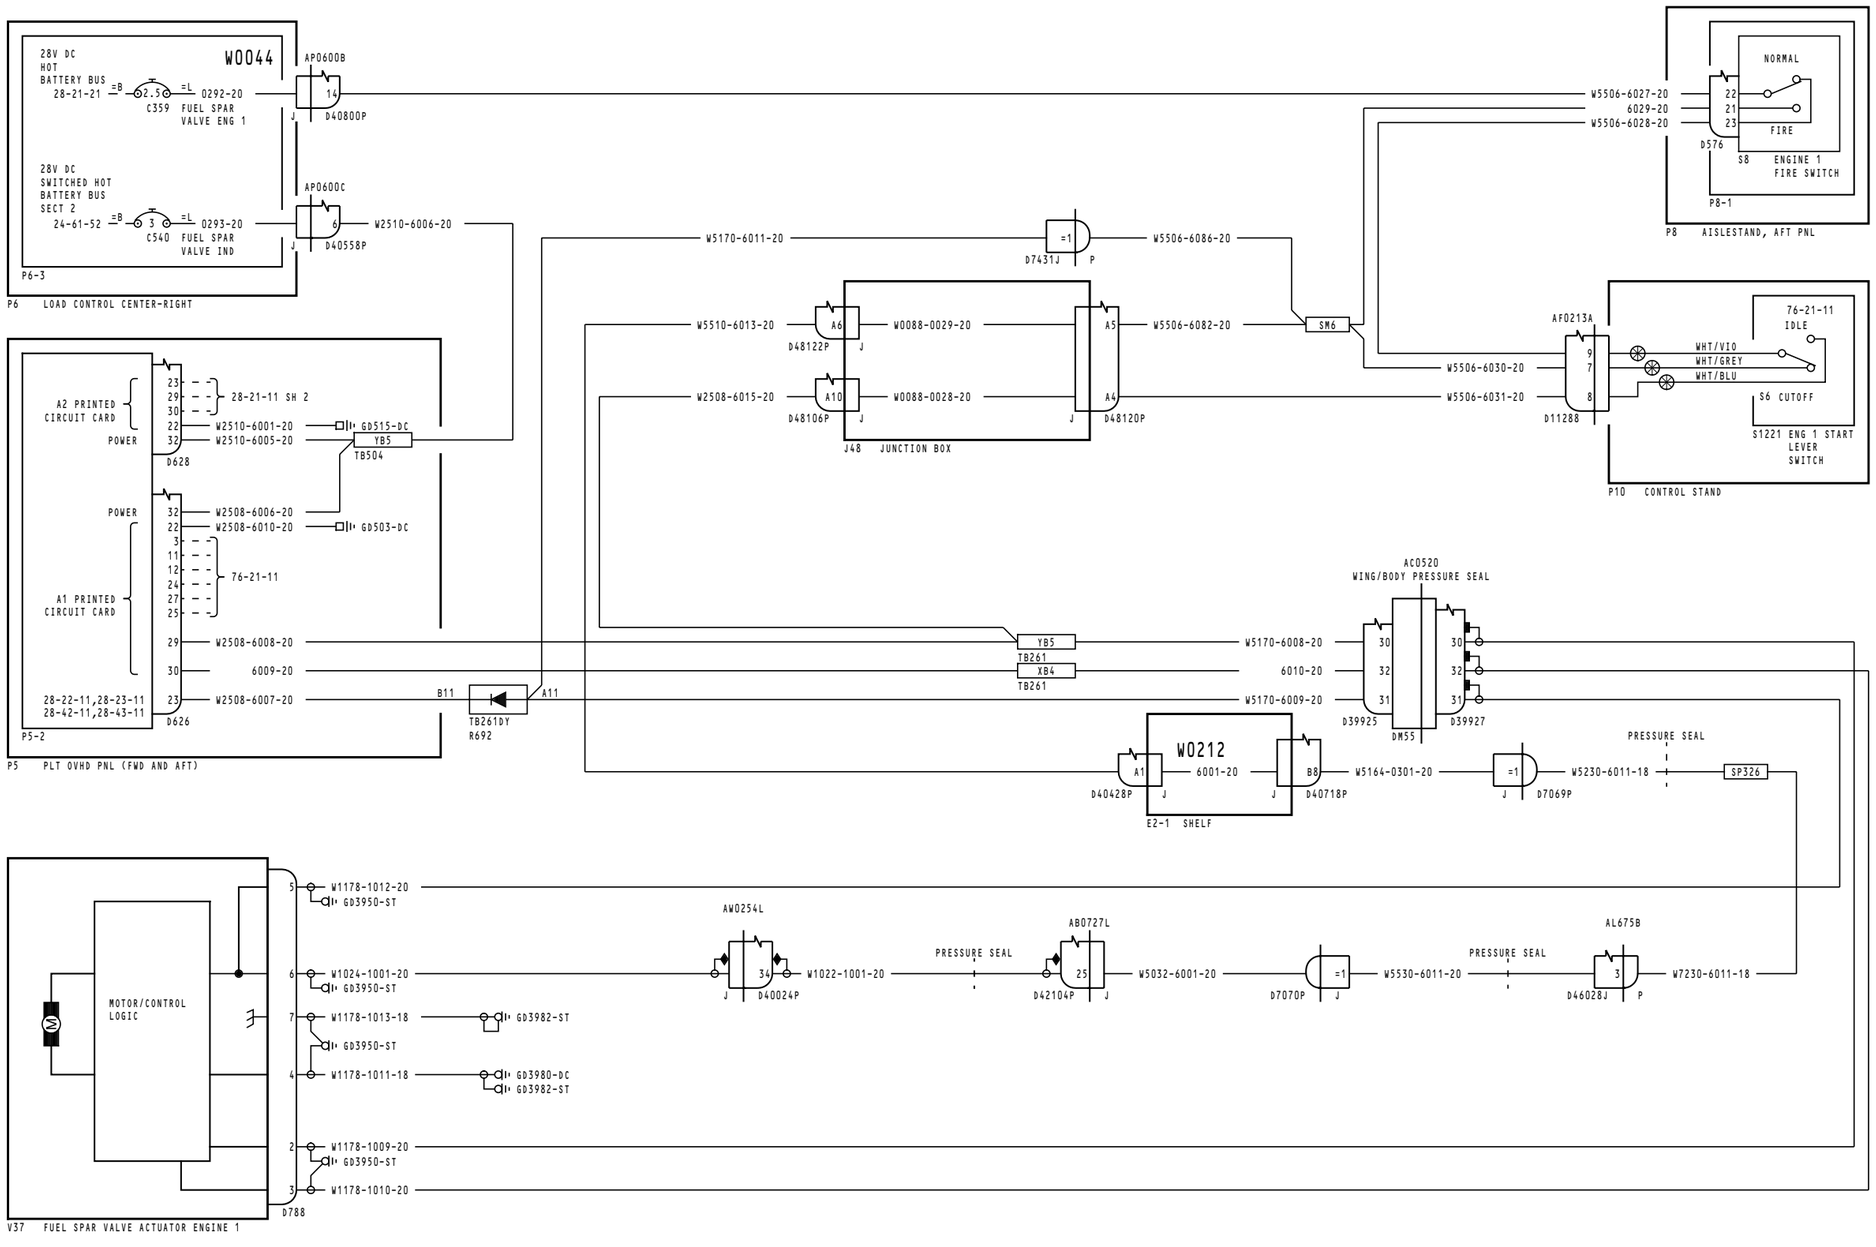

ALL

ENGINE FUEL SHUT-OFF VALVES

D280AM1215

28-21-11

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-21-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
30

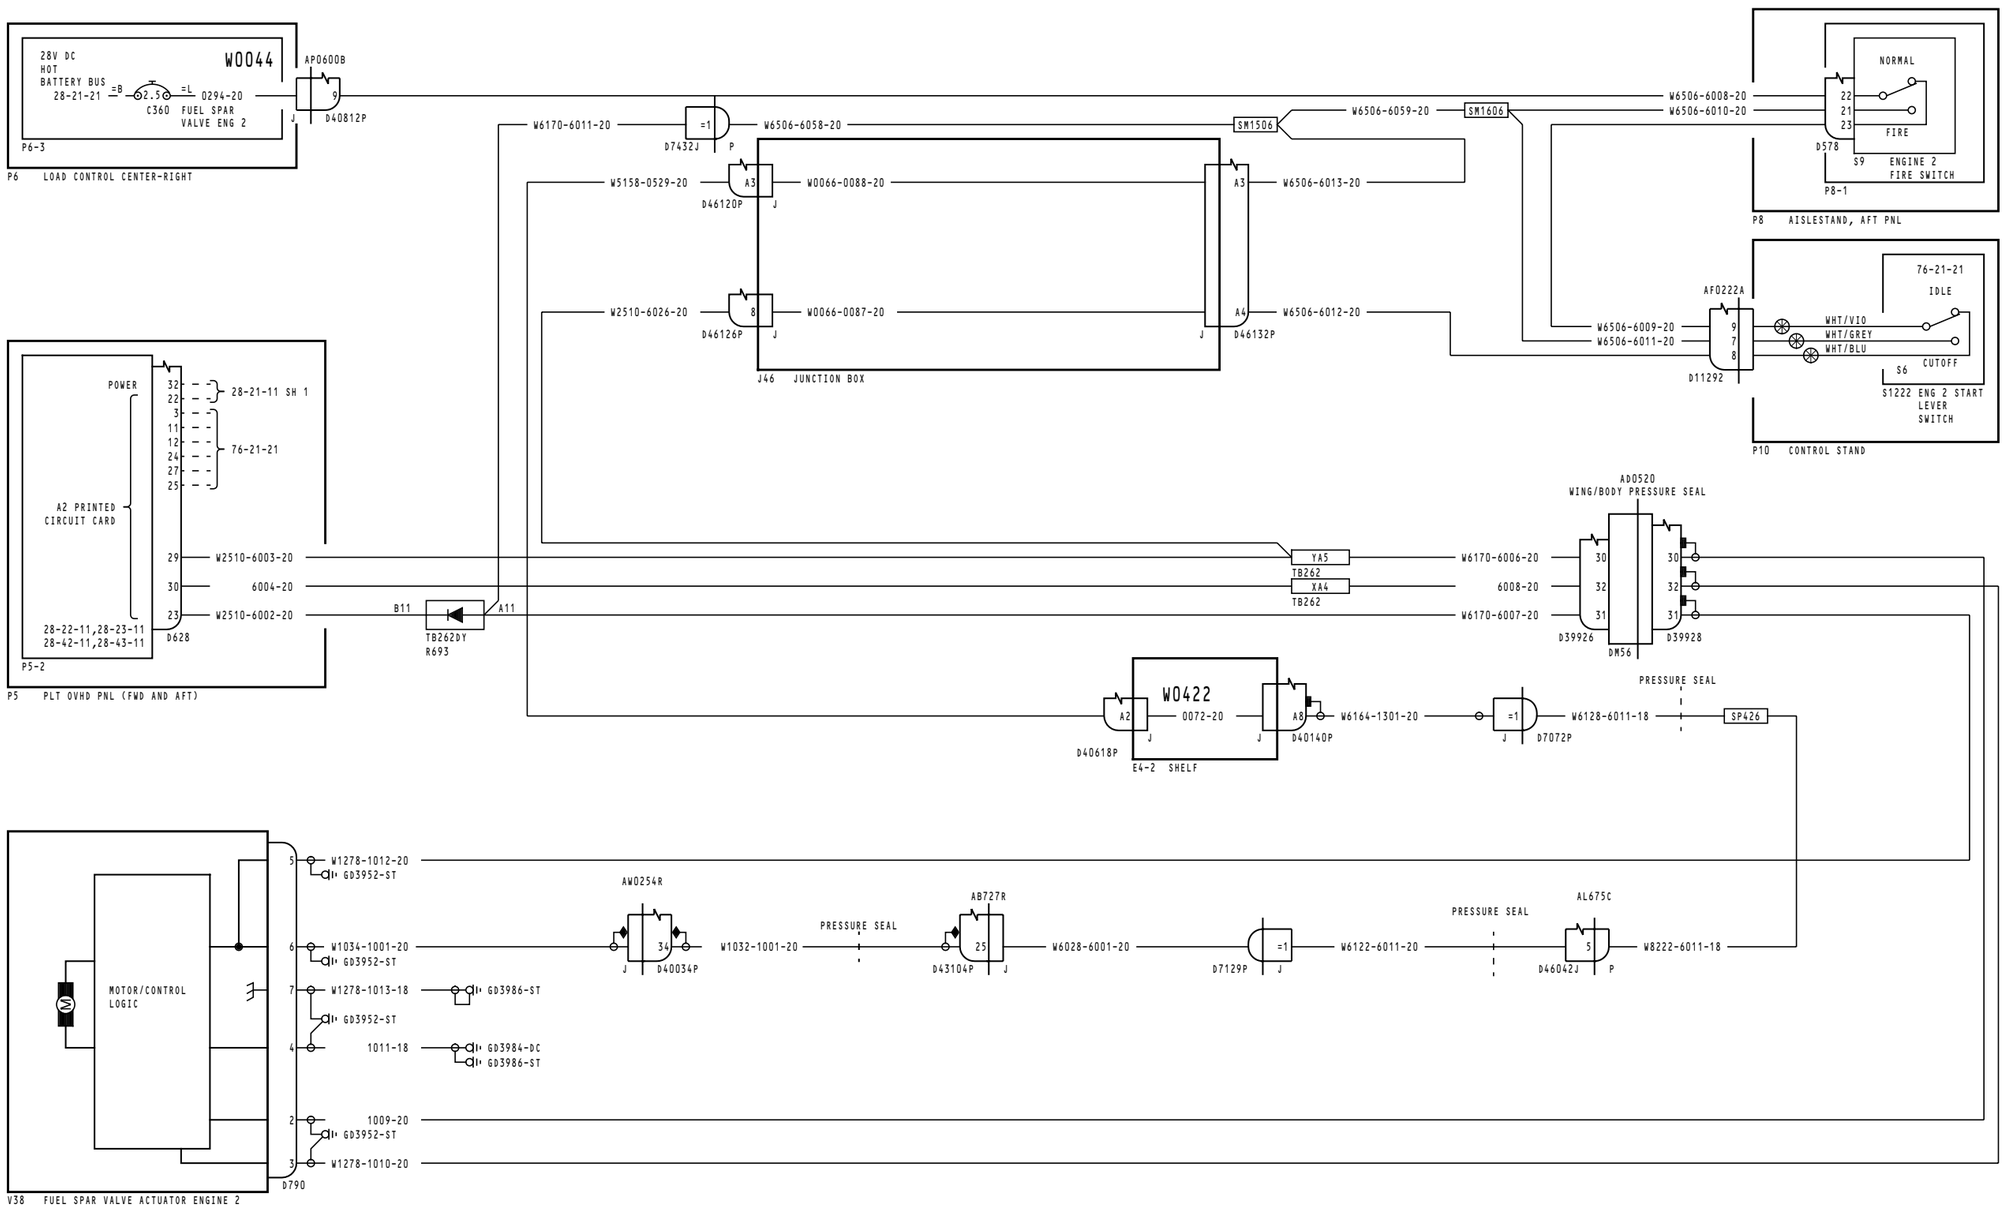

NOTES:

A FOR SEPARATION PURPOSES, DO NOT REPLACE THE SPLICE WITHOUT SYSTEM'S APPROVAL.


28-21-11

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
3

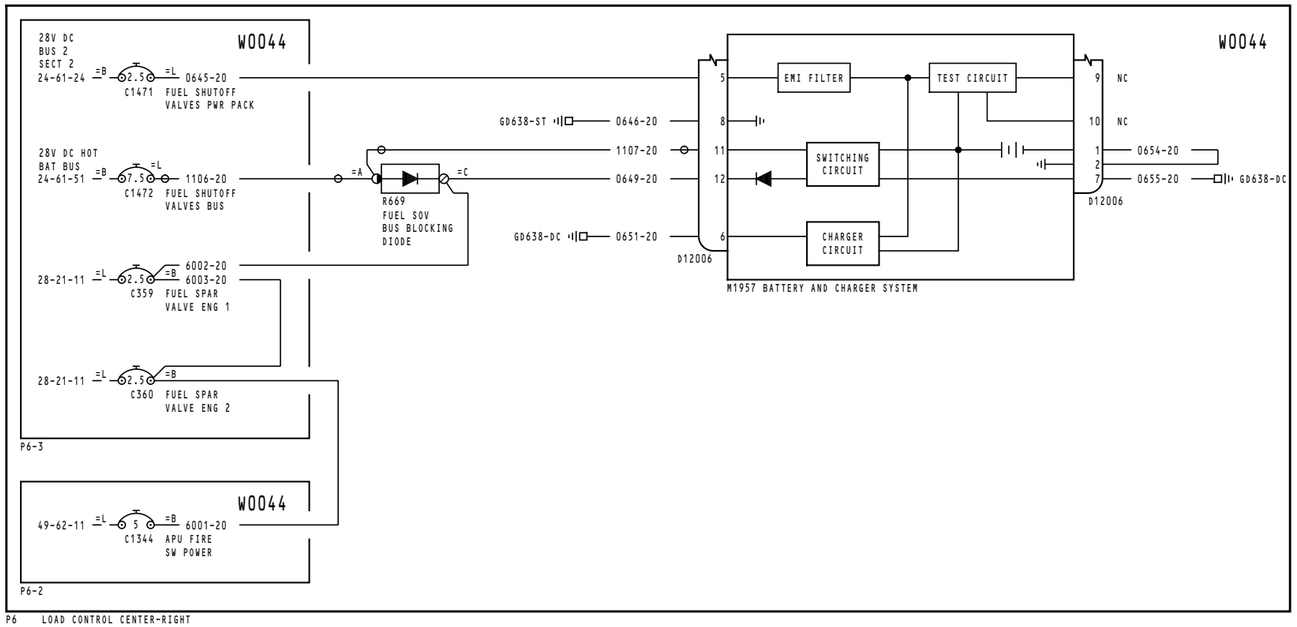

P6 LOAD CONTROL CENTER-RIGHT

ECCN 9E991 BOEING PROPRIETARY - See title page for details


28-21-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
4

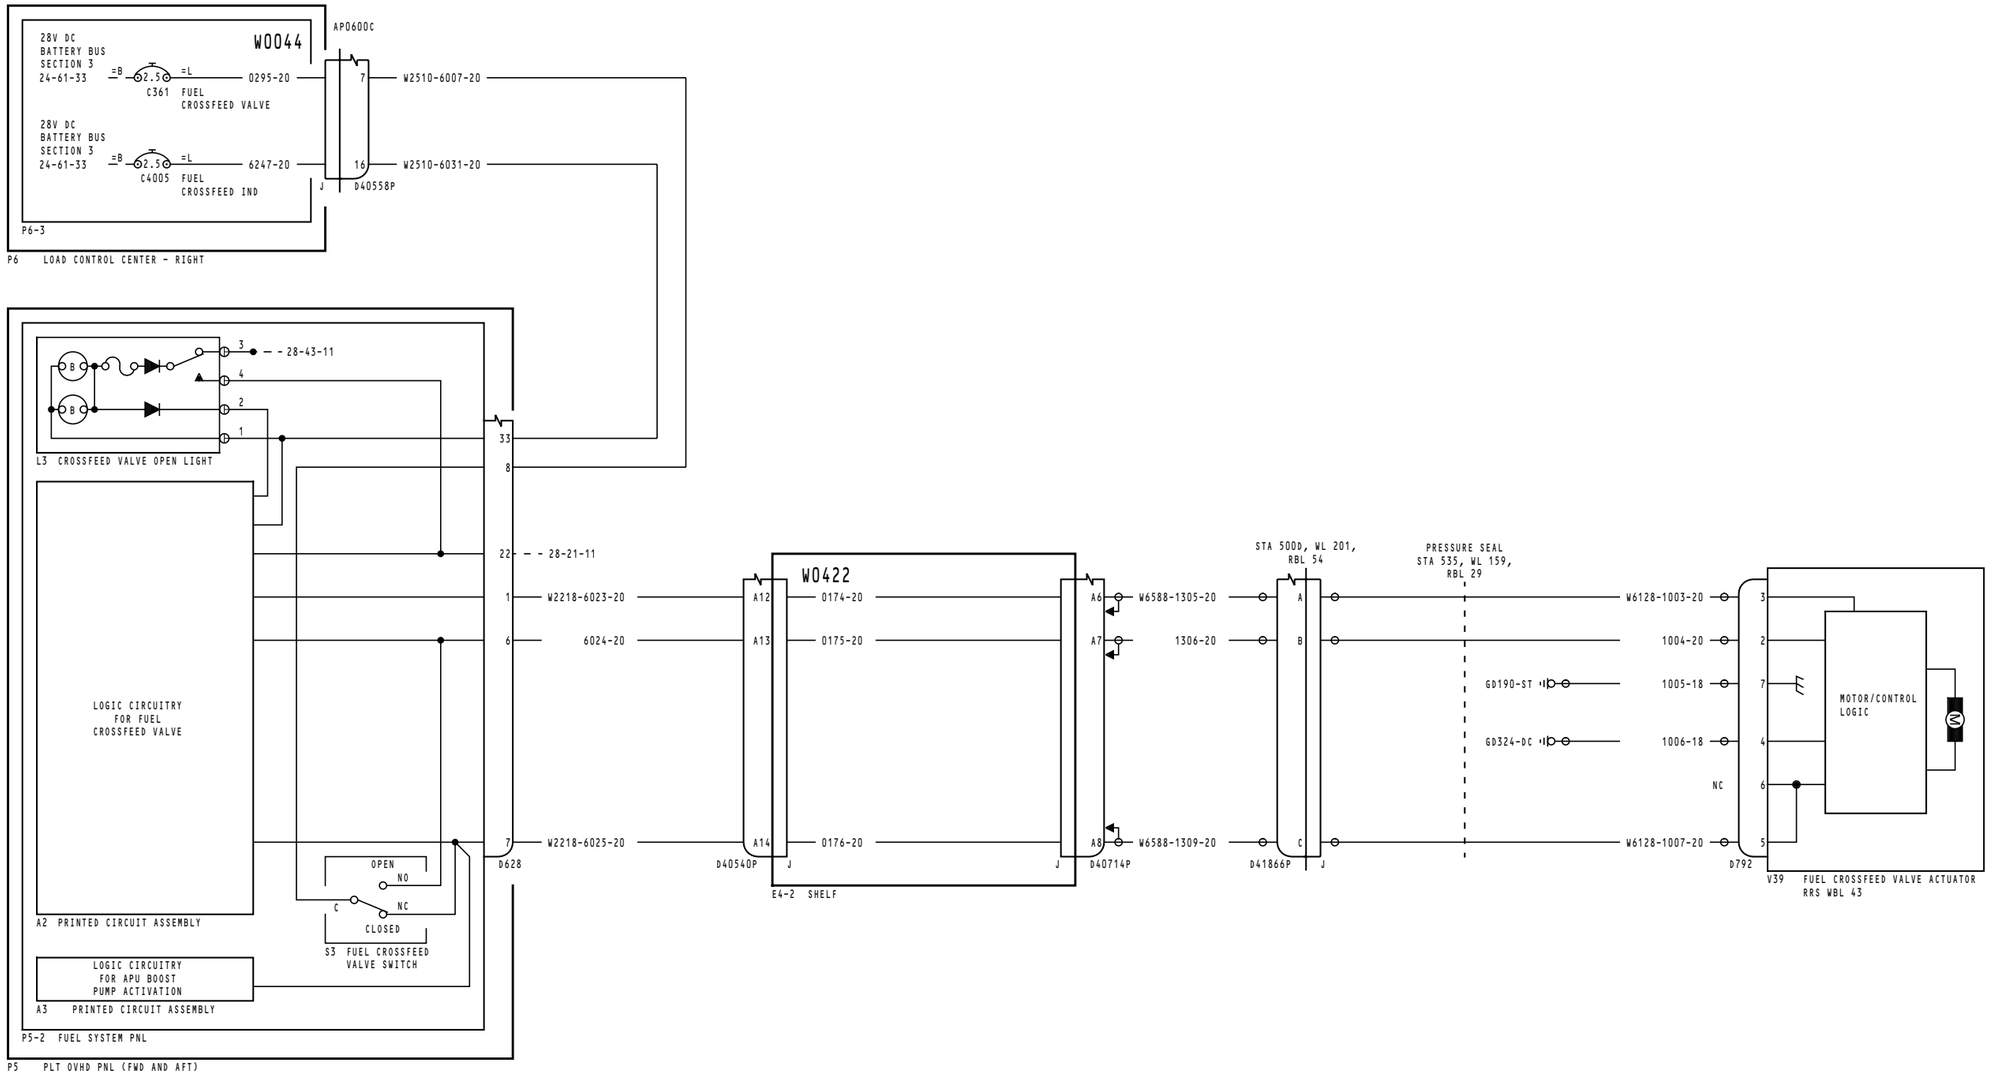


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-22-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

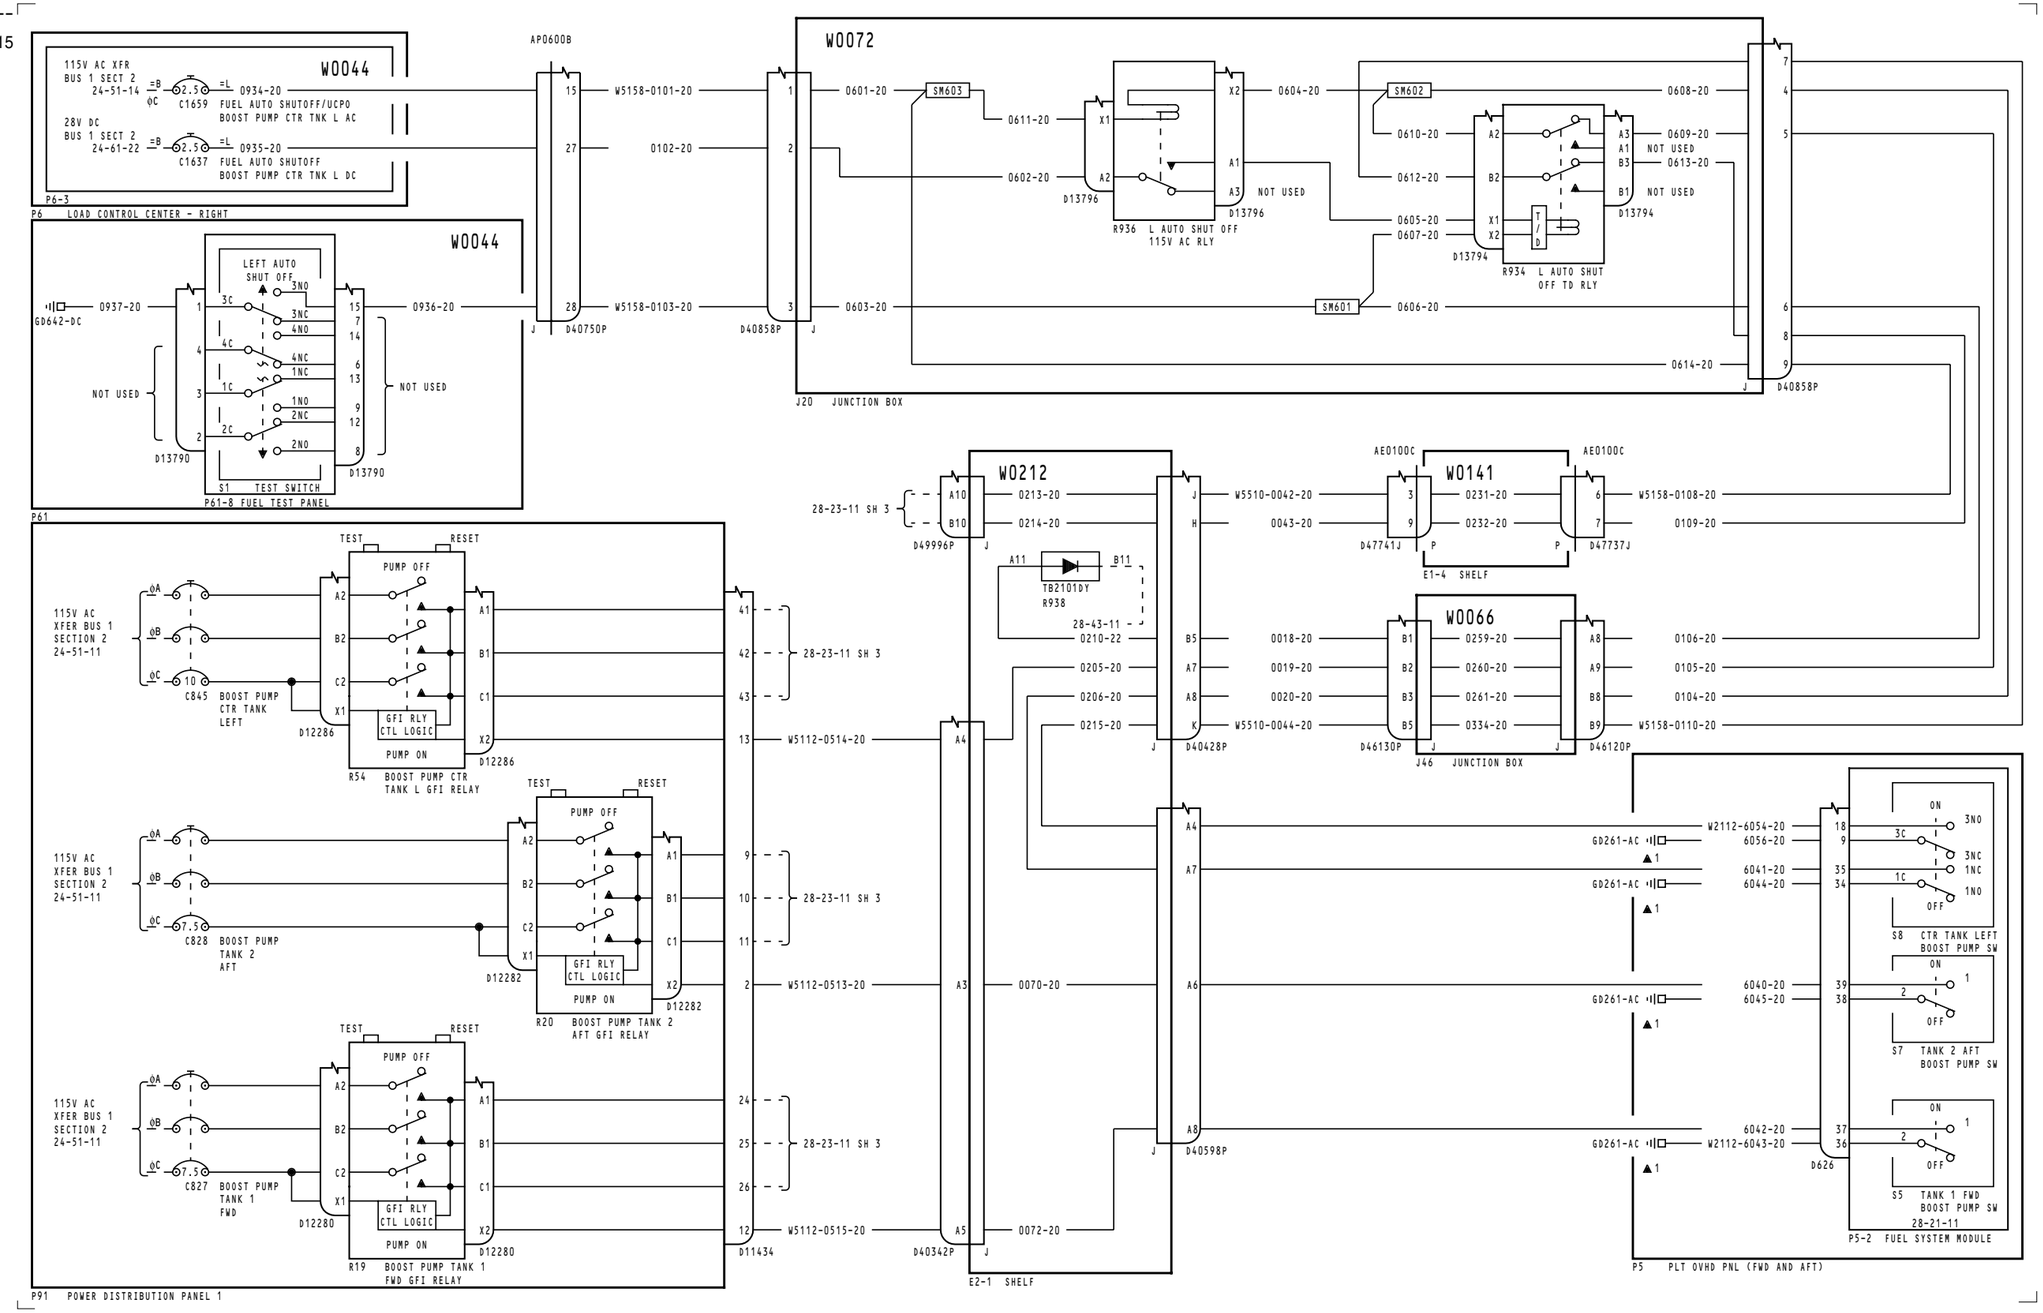


28-23-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


737-8 WIRING DIAGRAM MANUAL

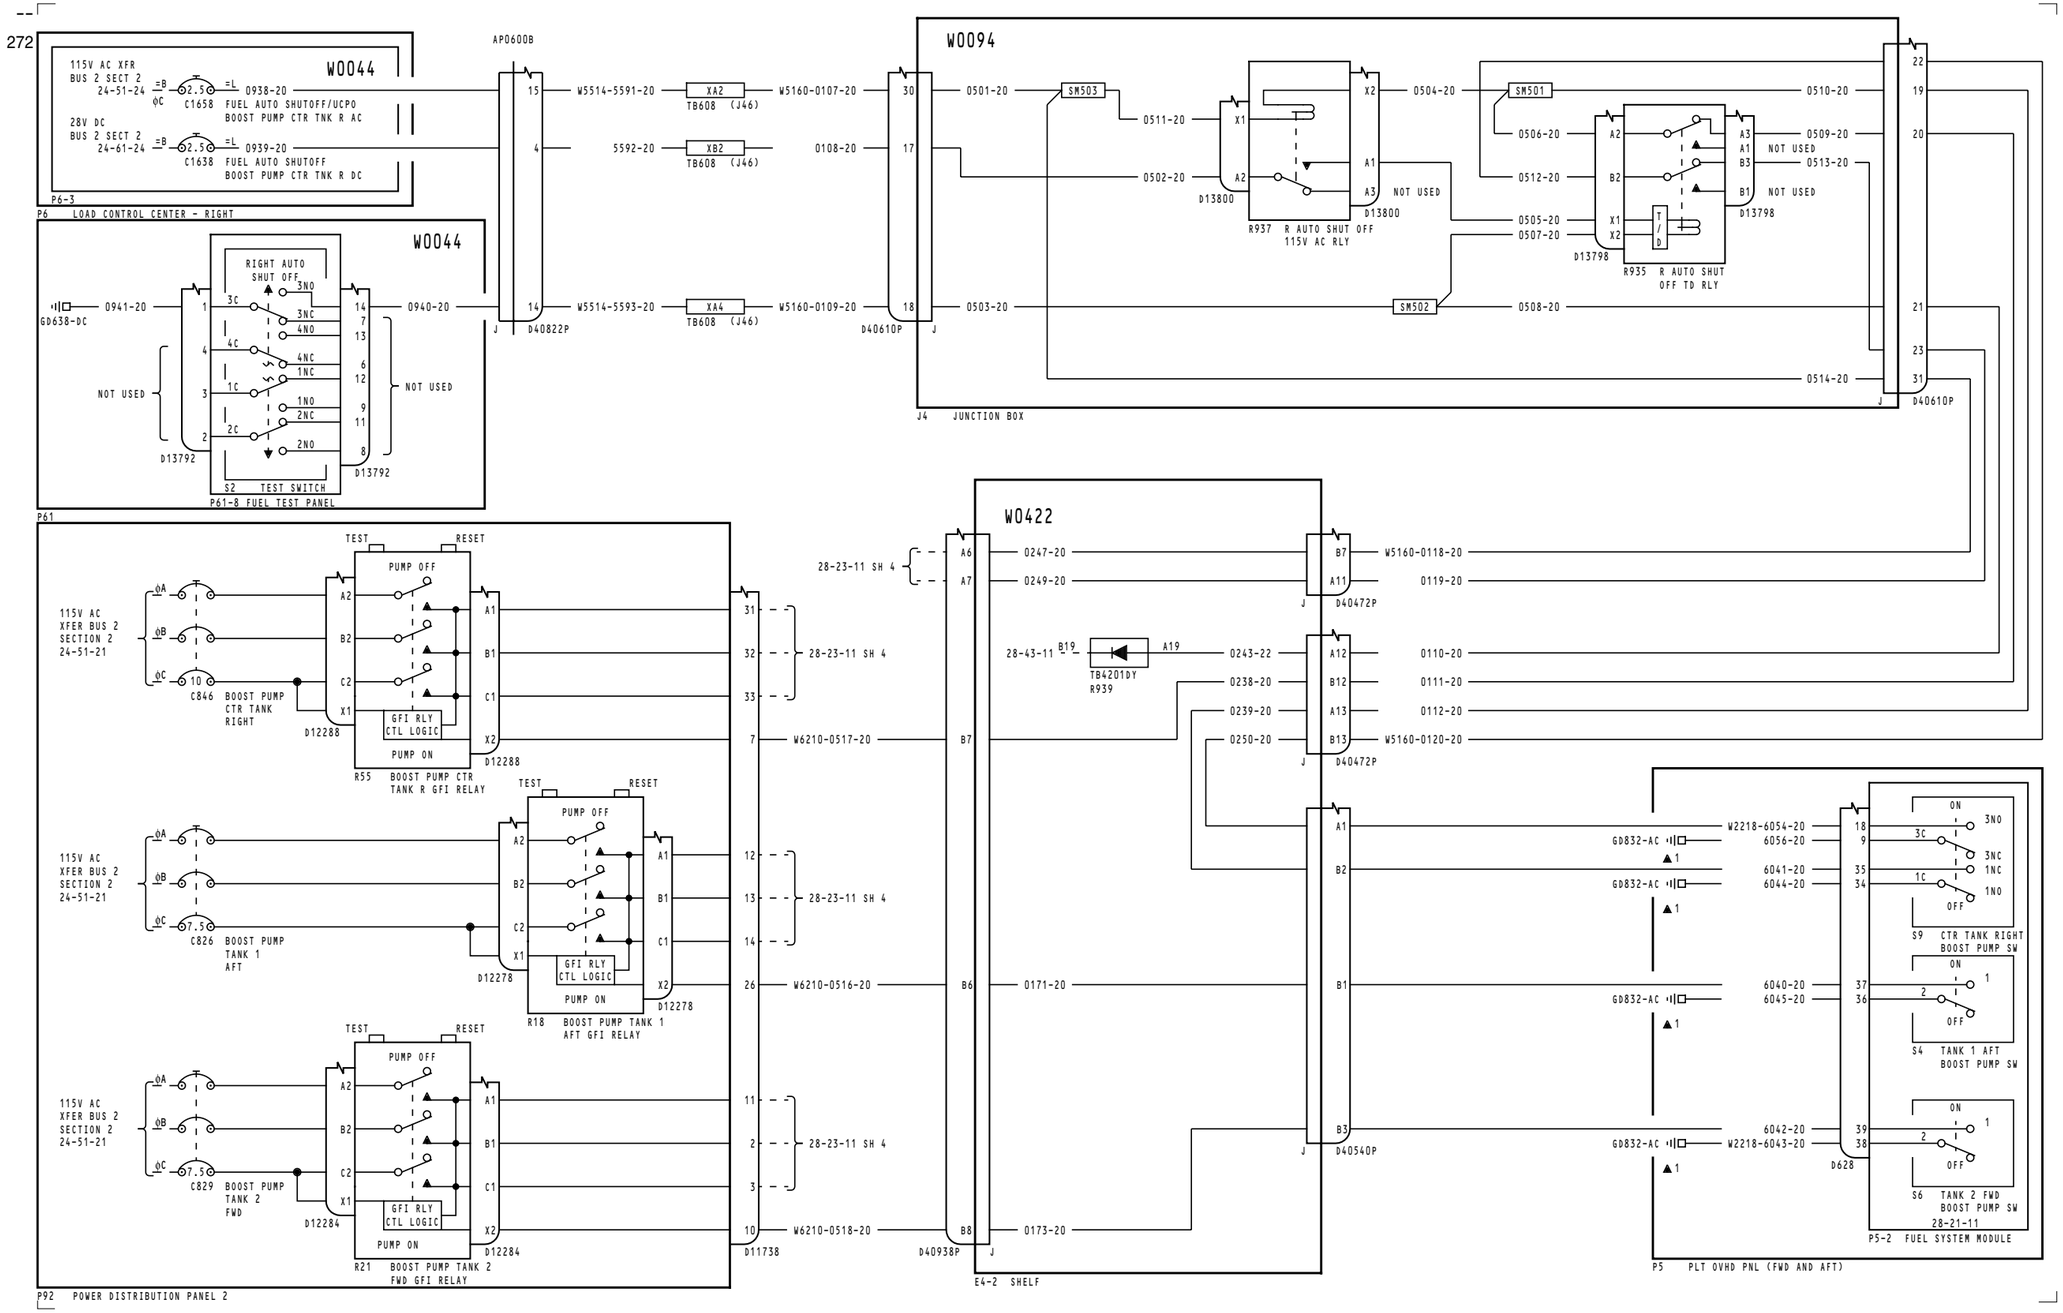

28-23-11

Page 1
Sheet 2
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

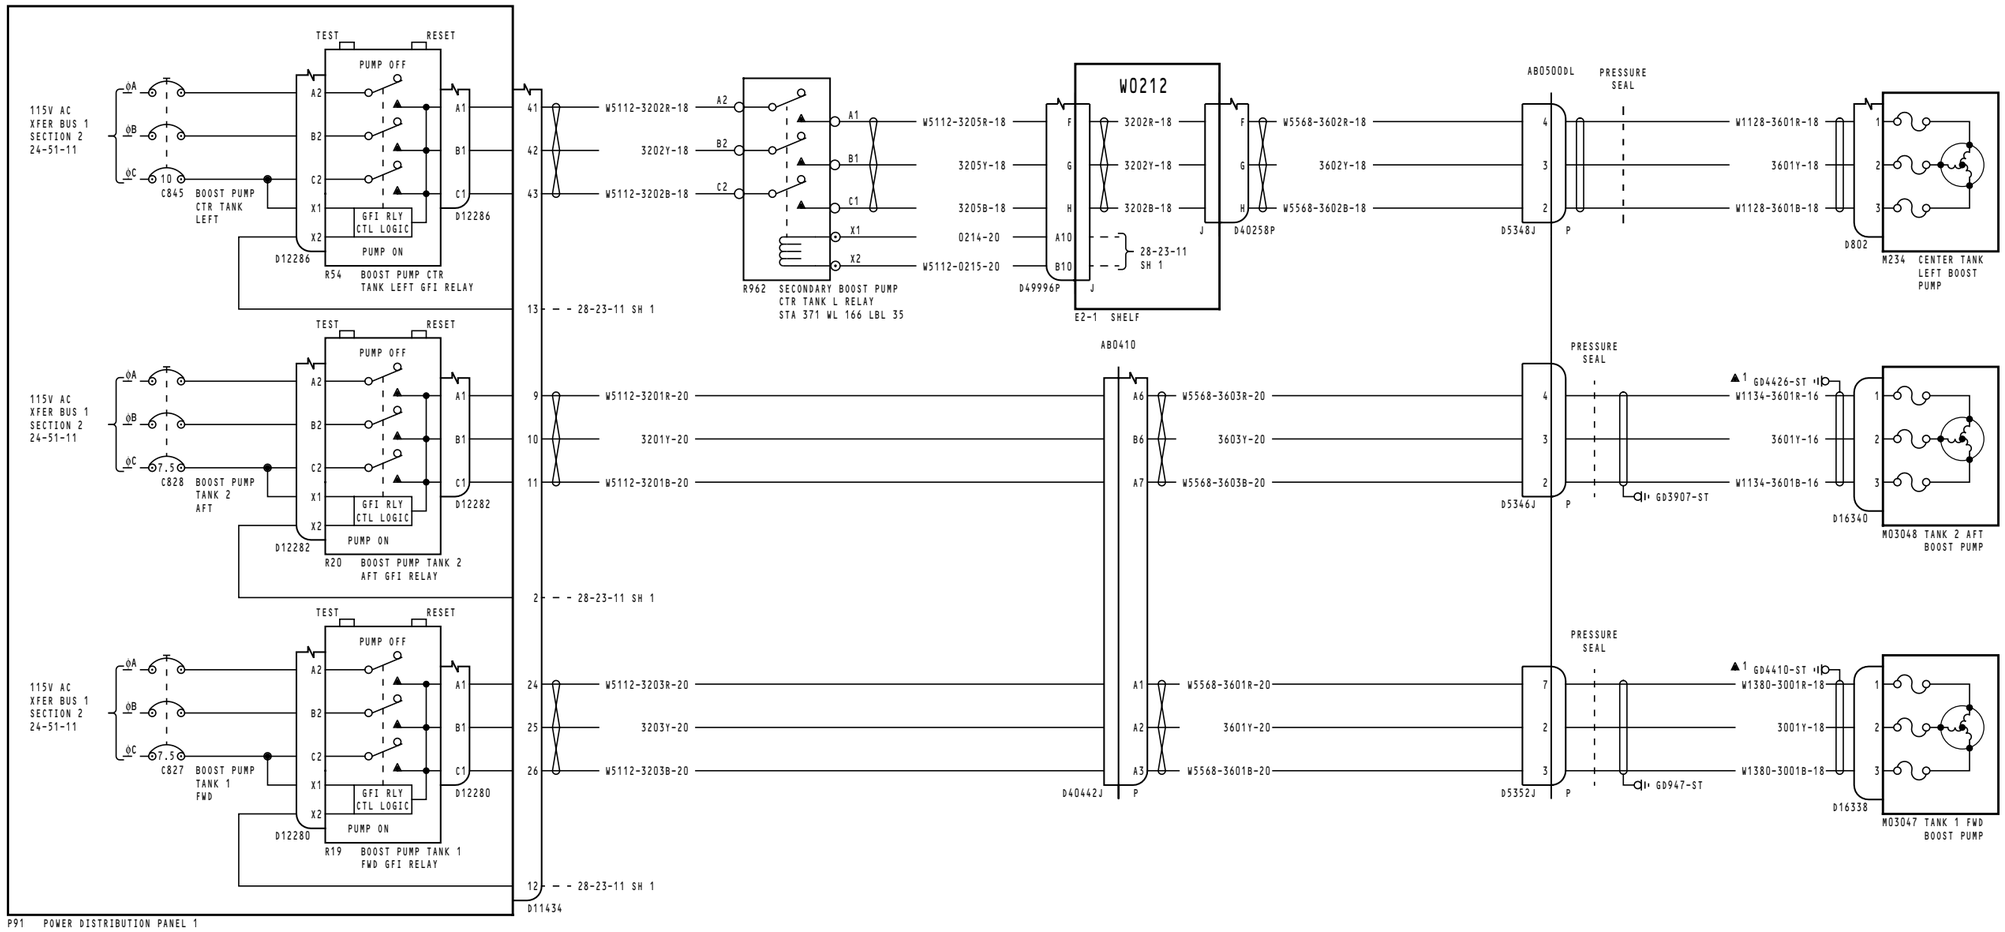

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-G
98

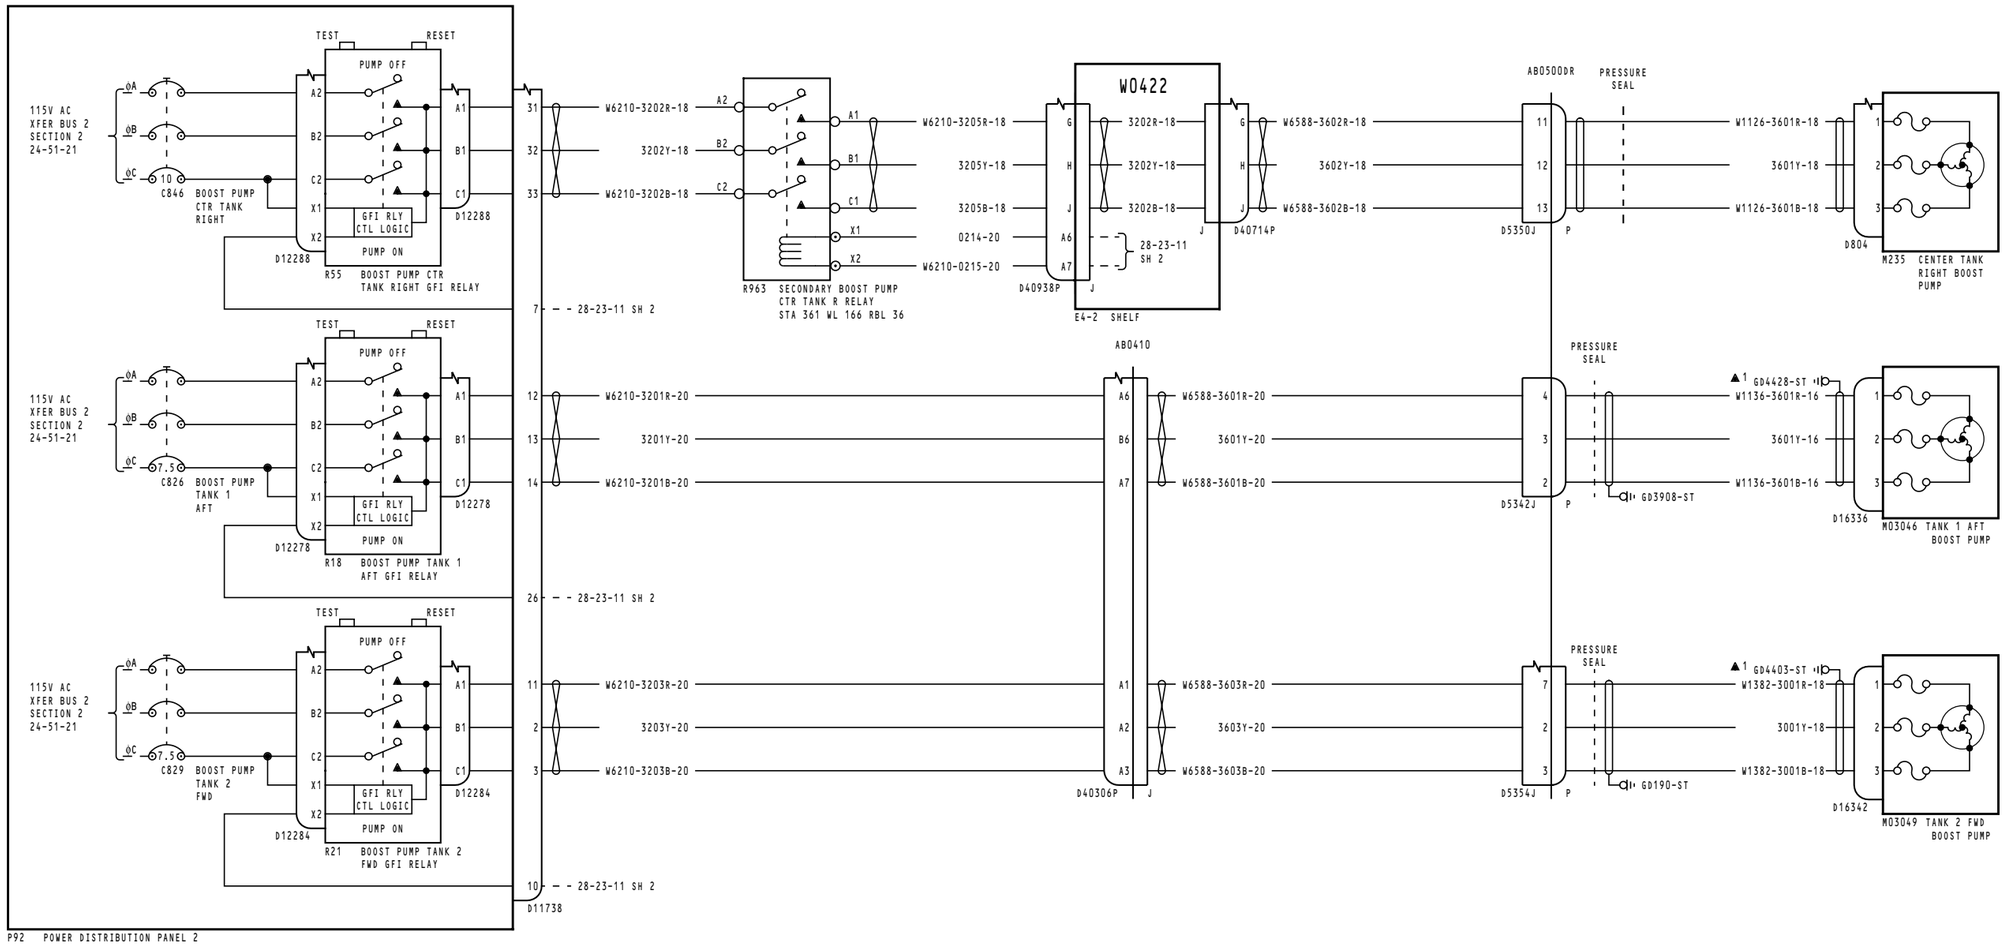


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-23-11

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
95

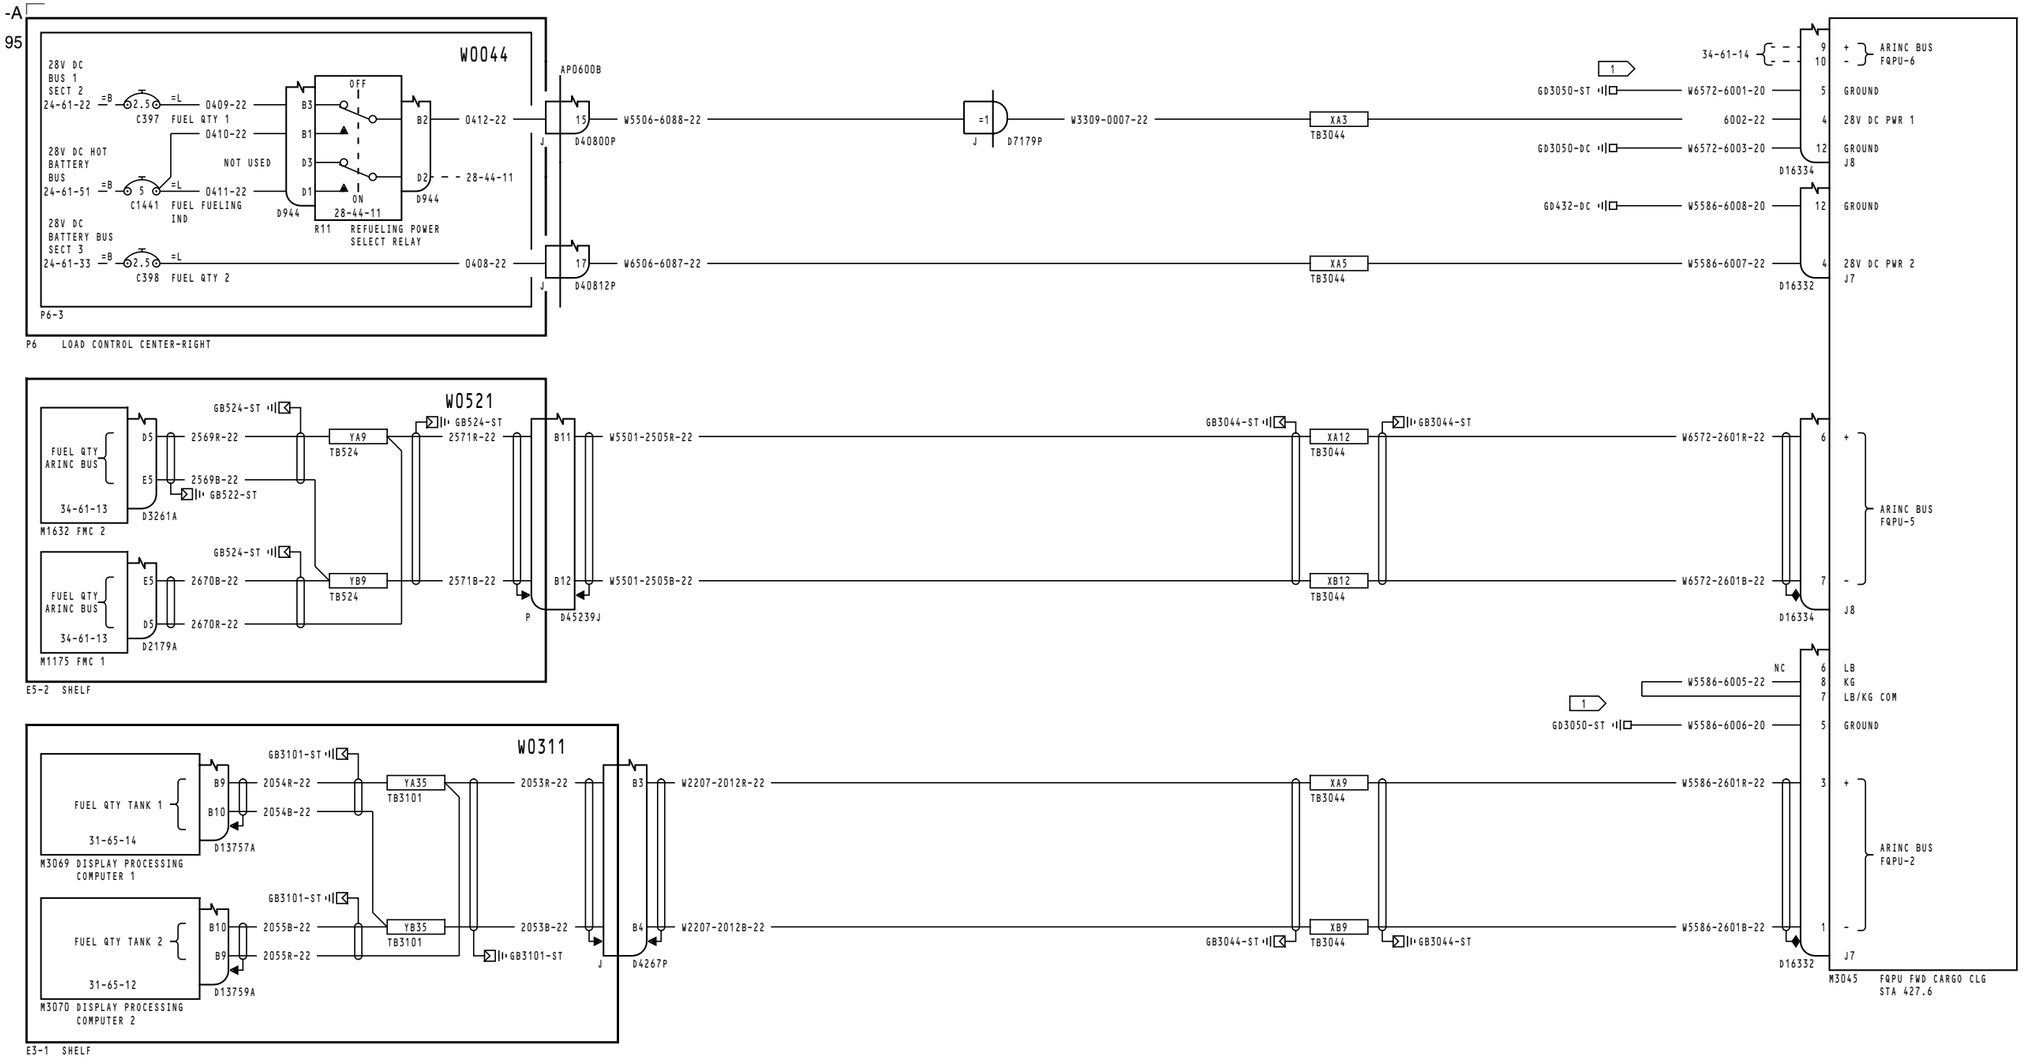

NOTES:

1 MAXIMUM WIRE LENGTH IS 10 INCHES.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-41-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

111

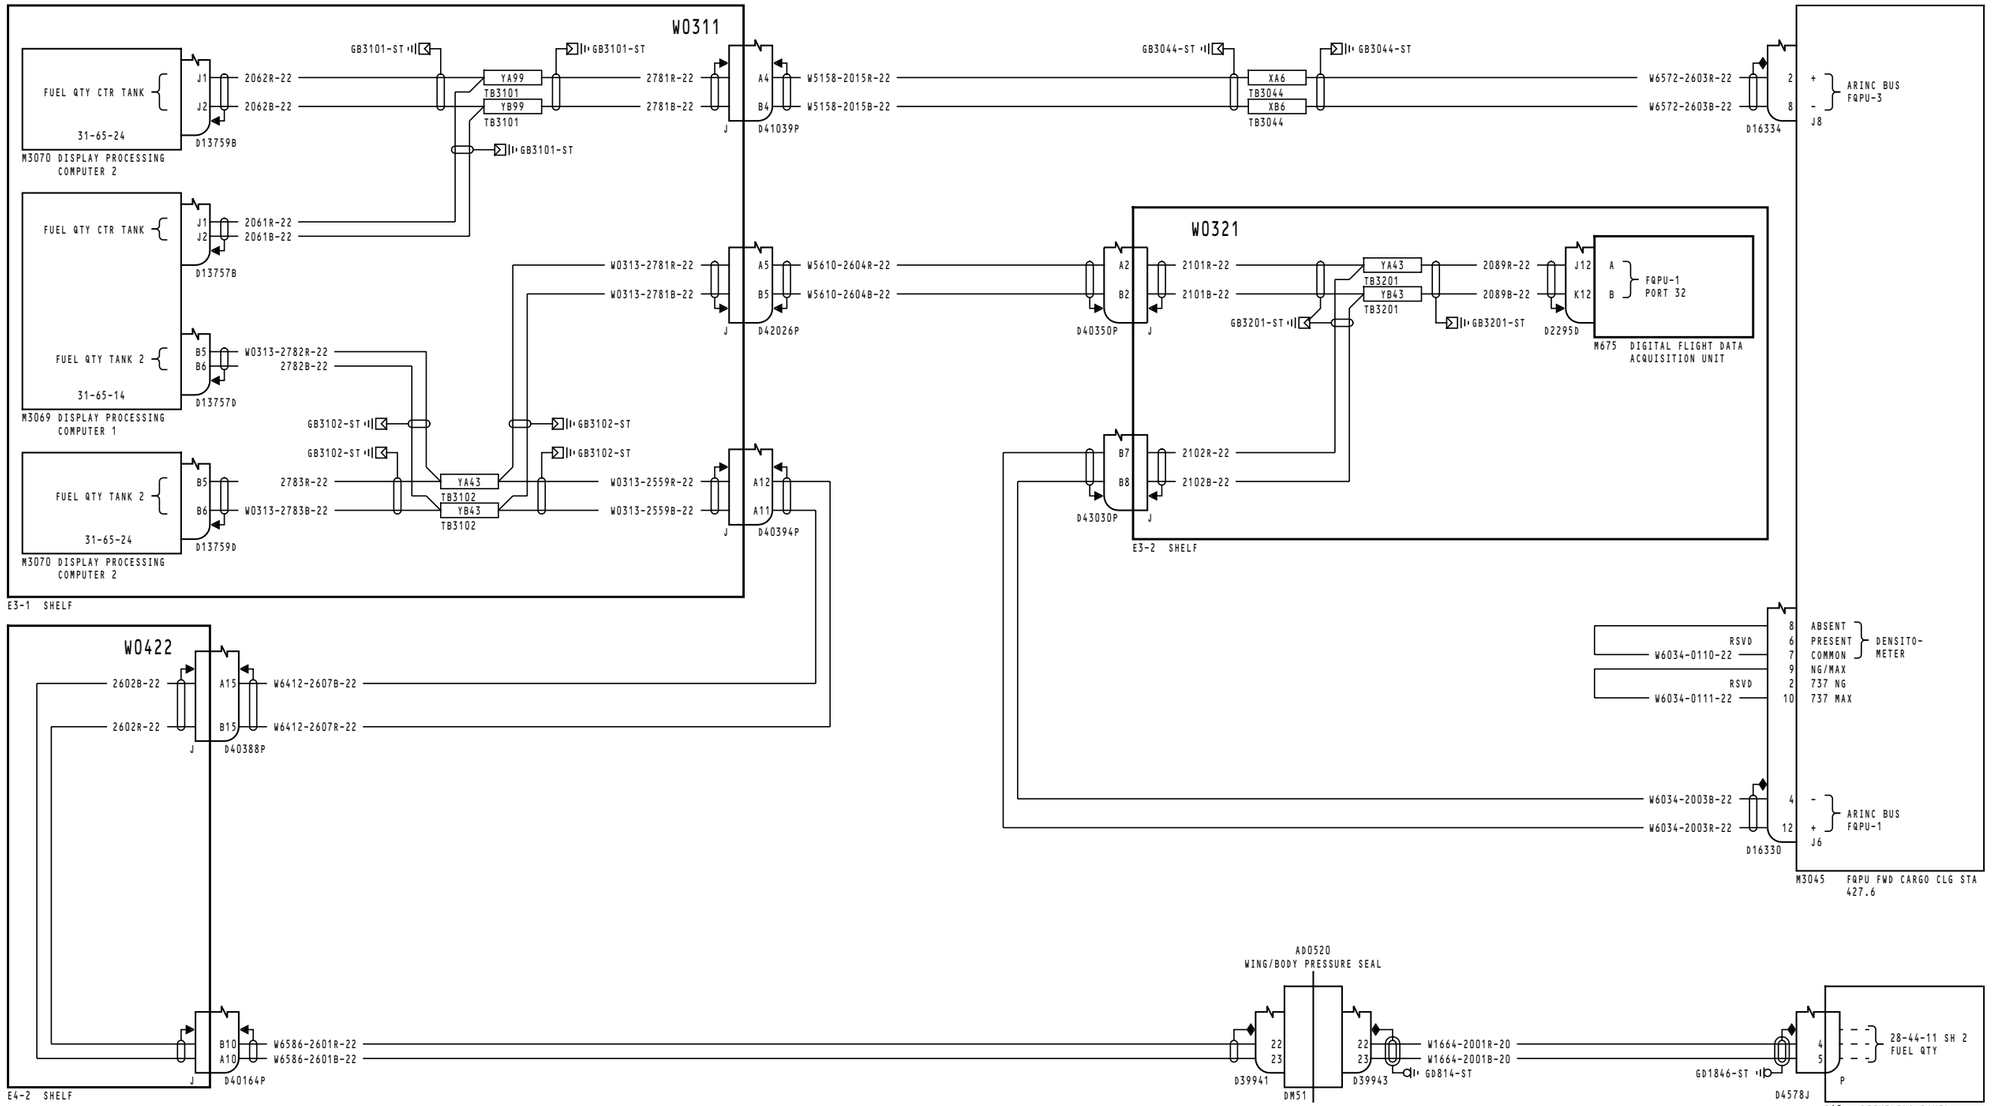


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-41-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

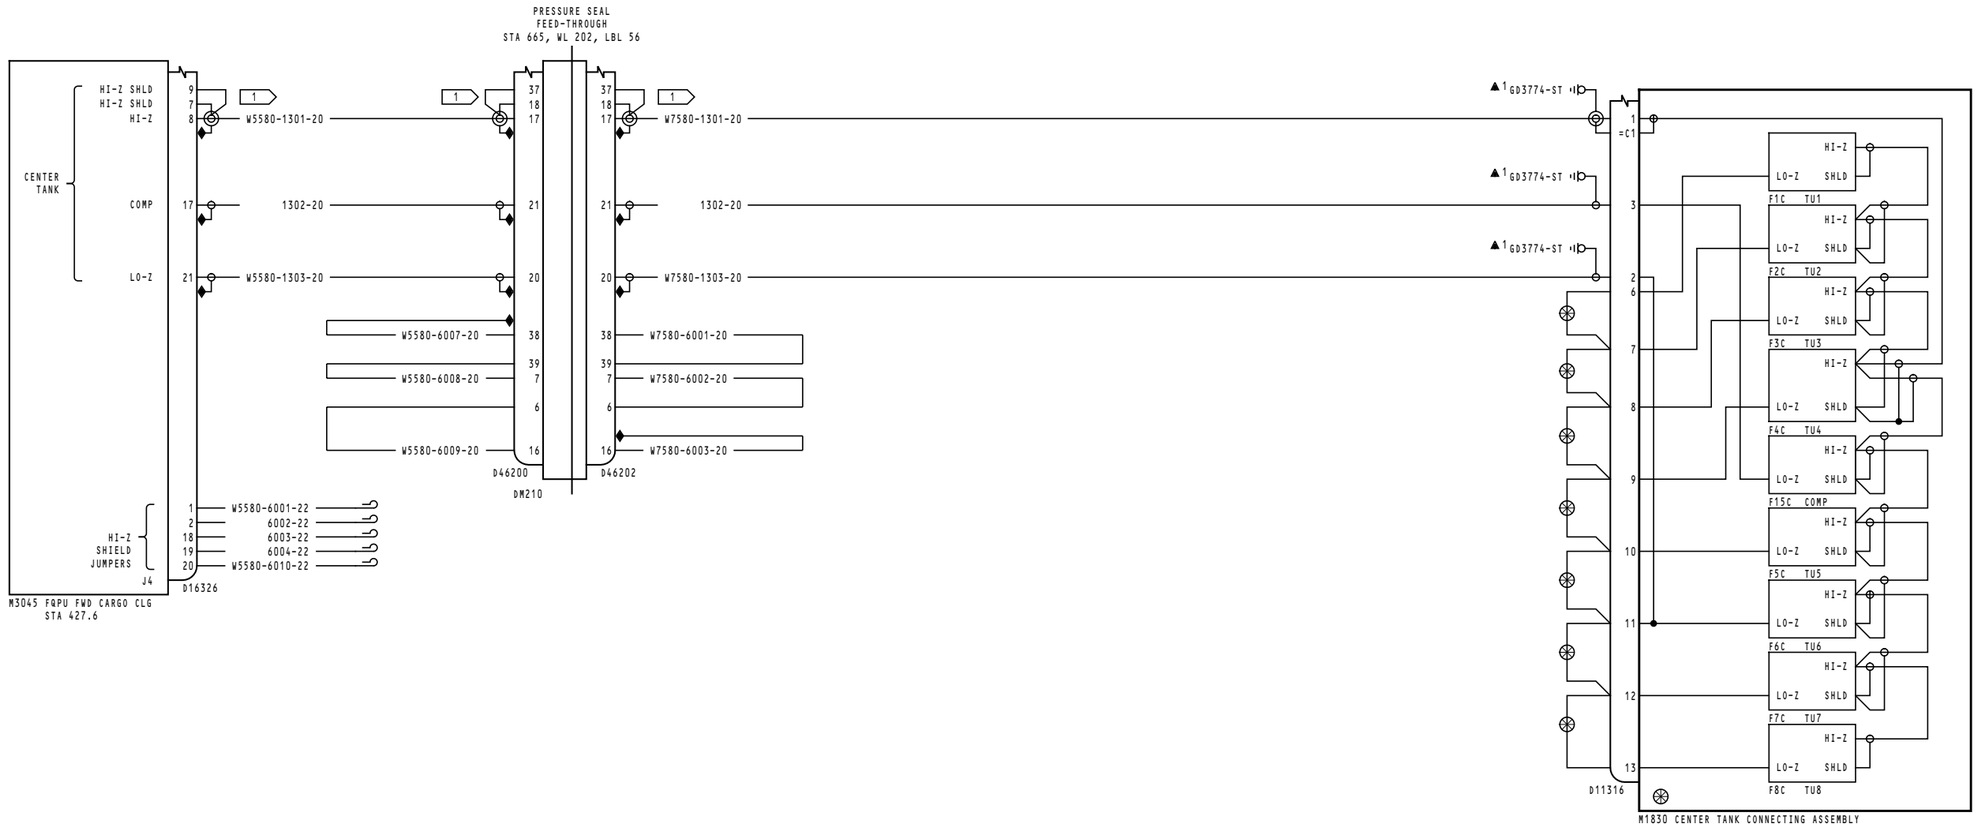

NOTES:

1. EXTEND INNER SHIELD OF WIRE TO WITHIN 1/4" (=/- 1/8") OF CONNECTOR GROMMET.


28-41-11

Page 1
Sheet 3
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C
3

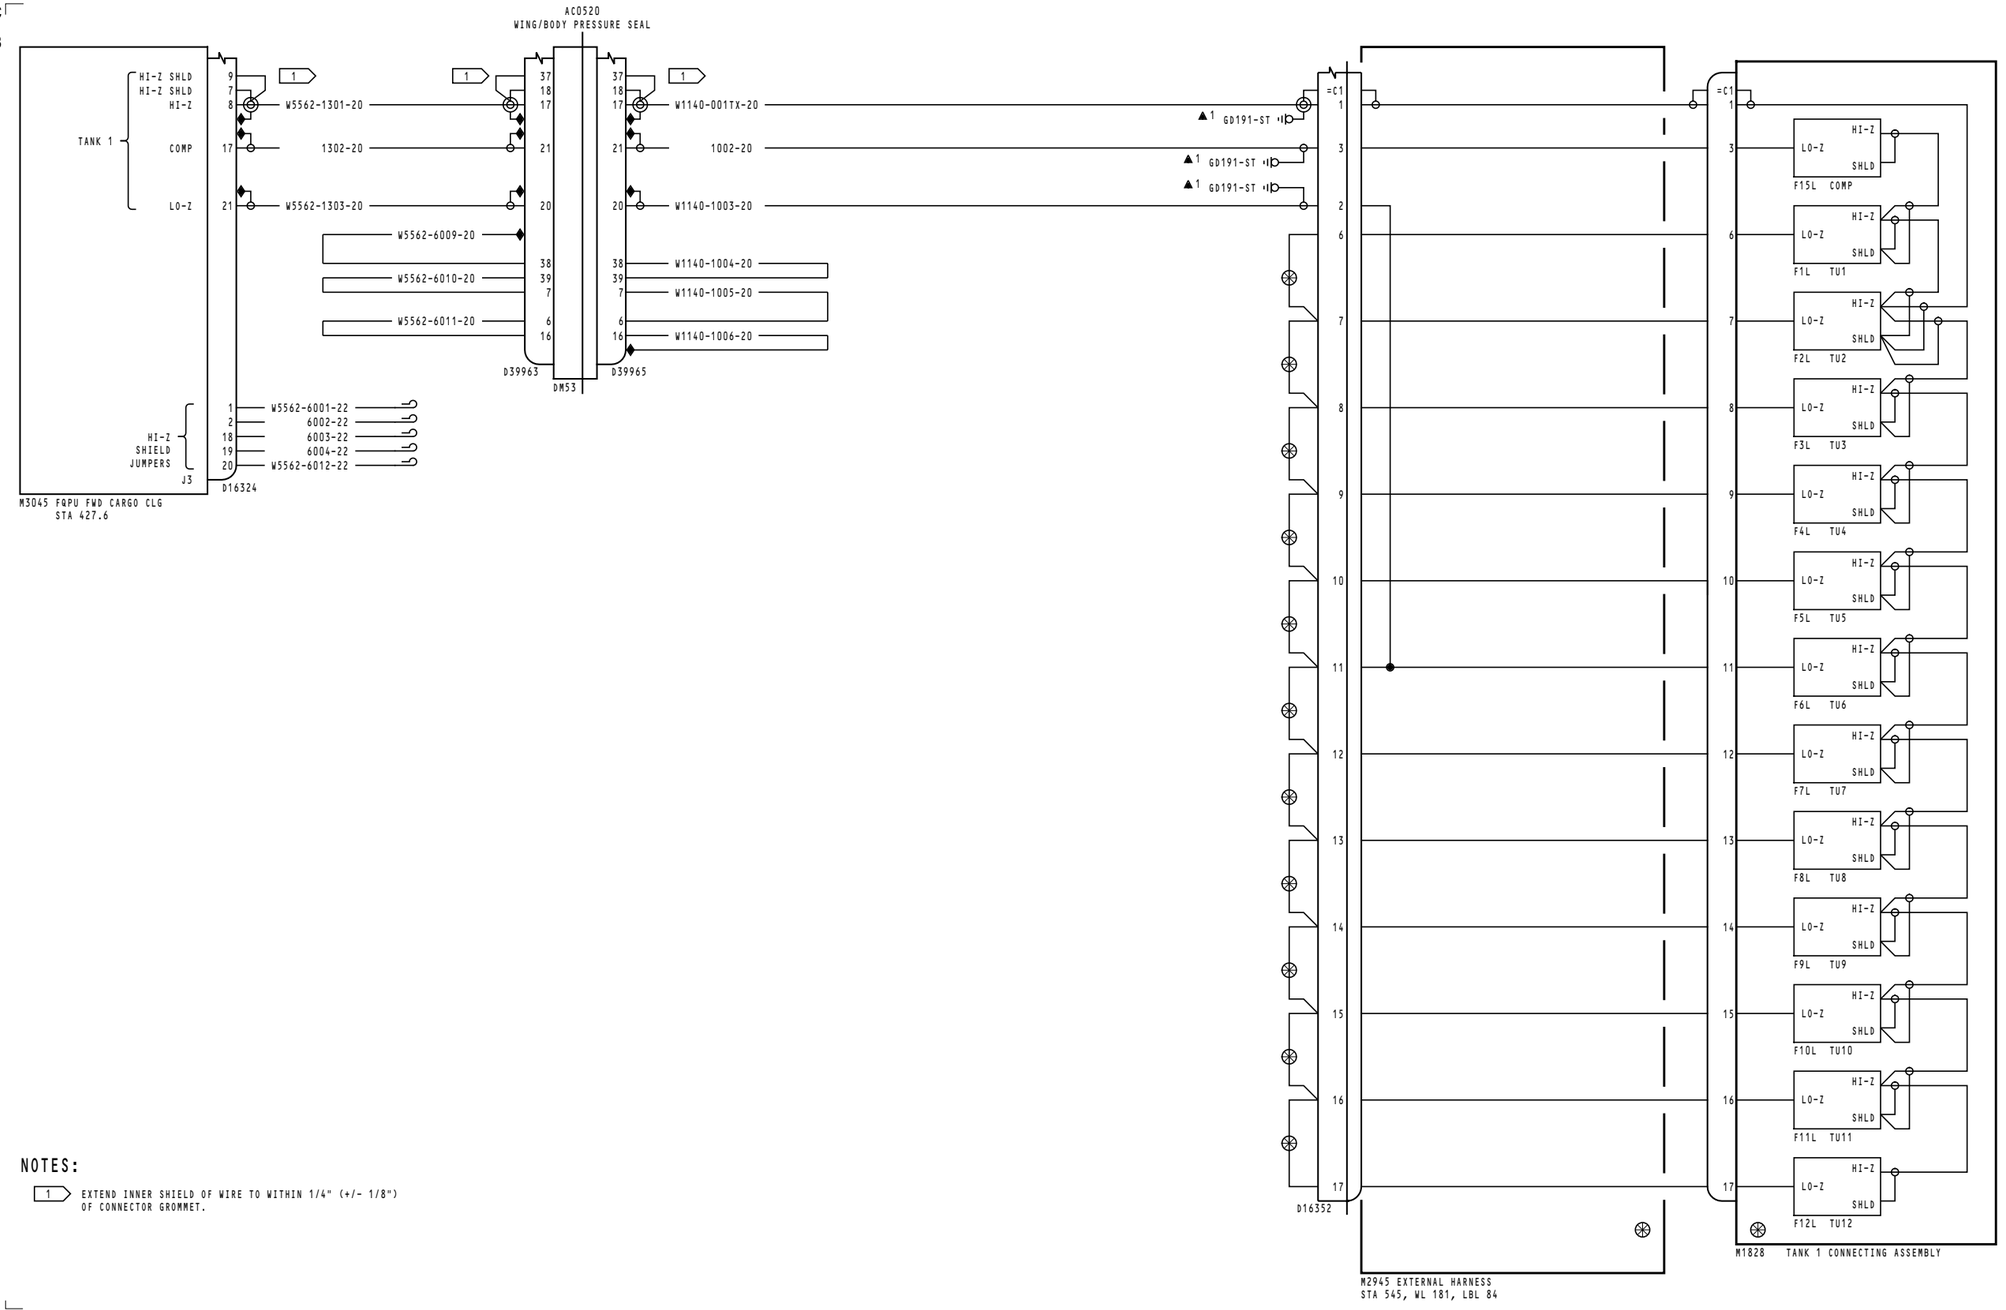

NOTES:


1 EXTEND INNER SHIELD OF WIRE TO WITHIN 1/4" (+/- 1/8") OF CONNECTOR GROMMET.

28-41-11

Page 1
Sheet 4
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

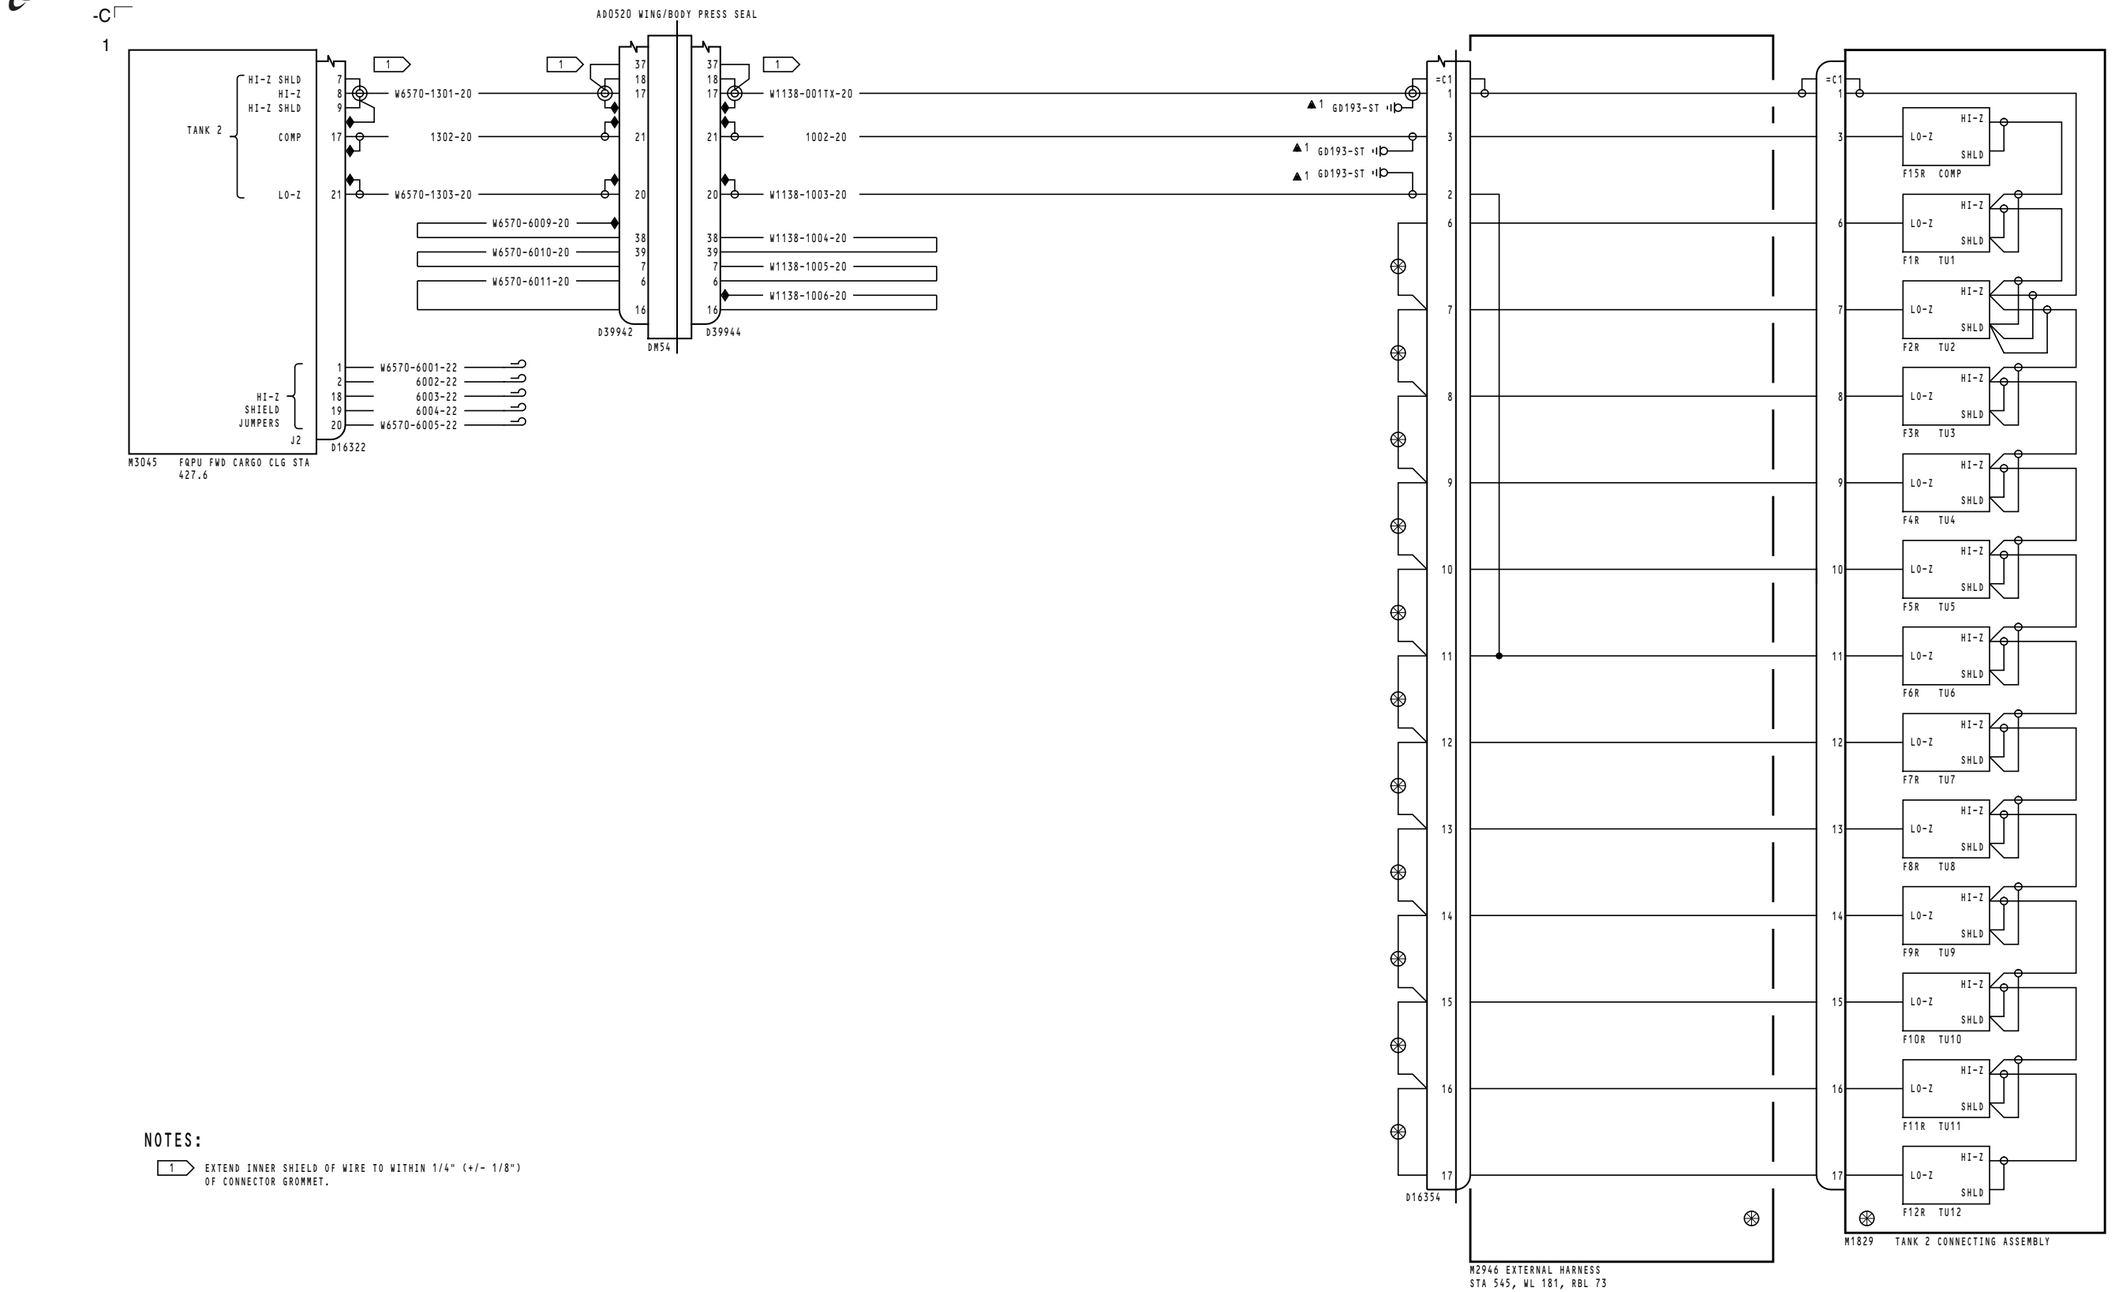

NOTES:

1 EXTEND INNER SHIELD OF WIRE TO WITHIN 1/4" (+/- 1/8") OF CONNECTOR GROMMET.


28-41-11

Page 1
Sheet 5
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

7

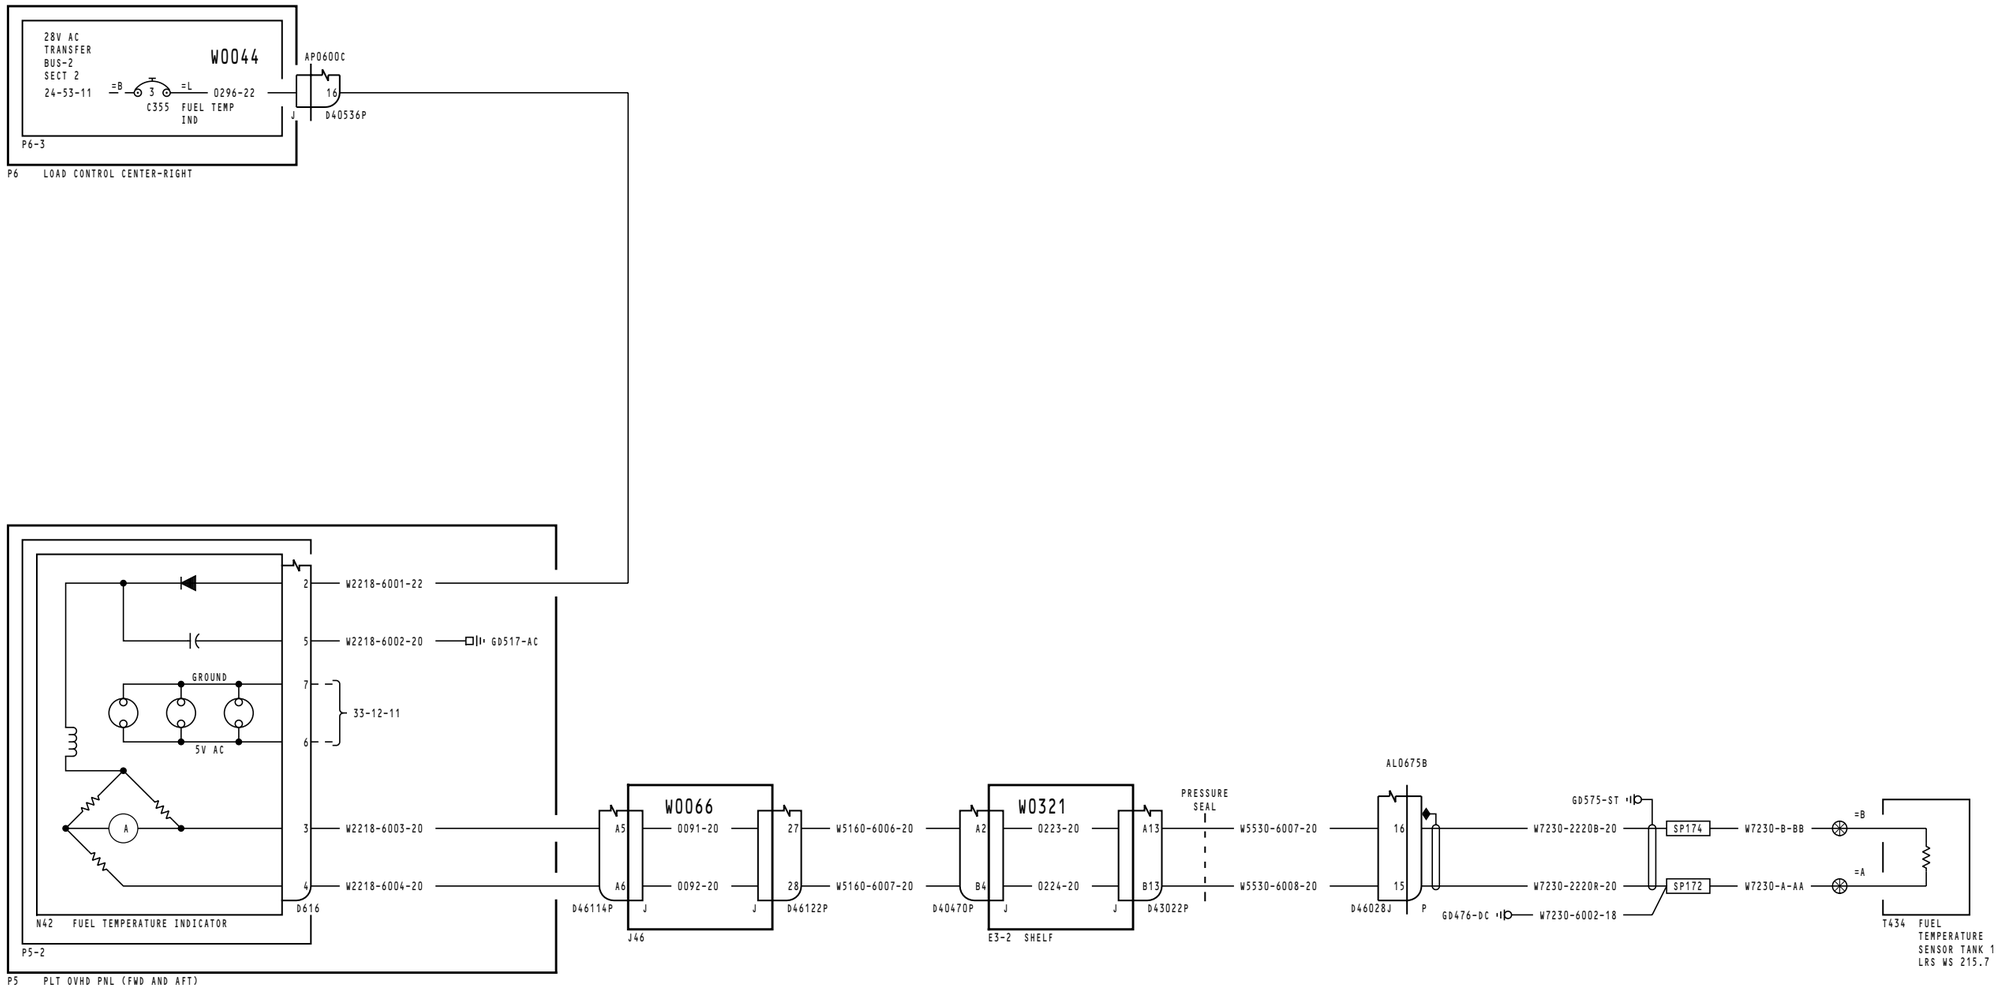


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-42-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

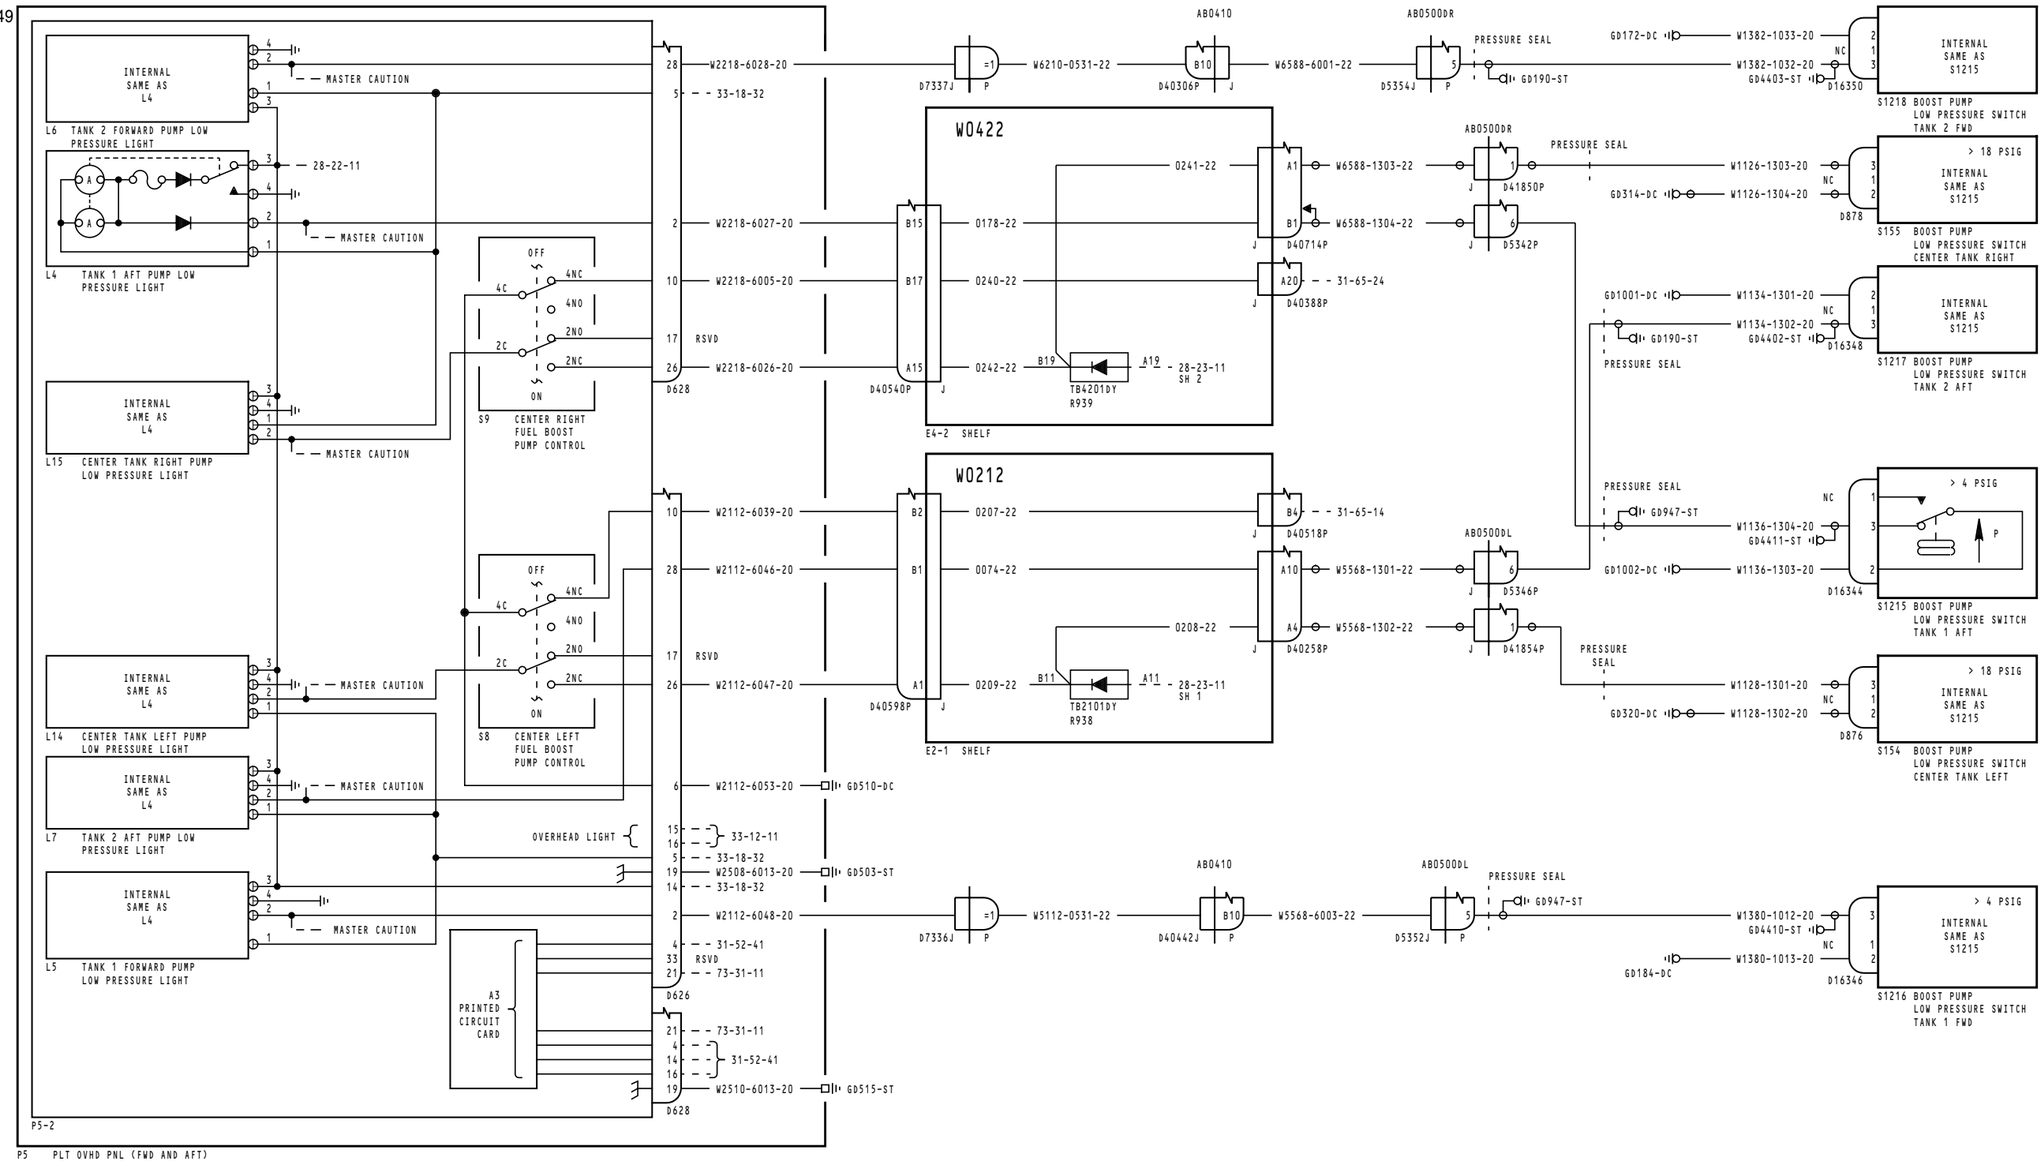

ECCN 9E991 BOEING PROPRIETARY - See title page for details


28-43-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
18

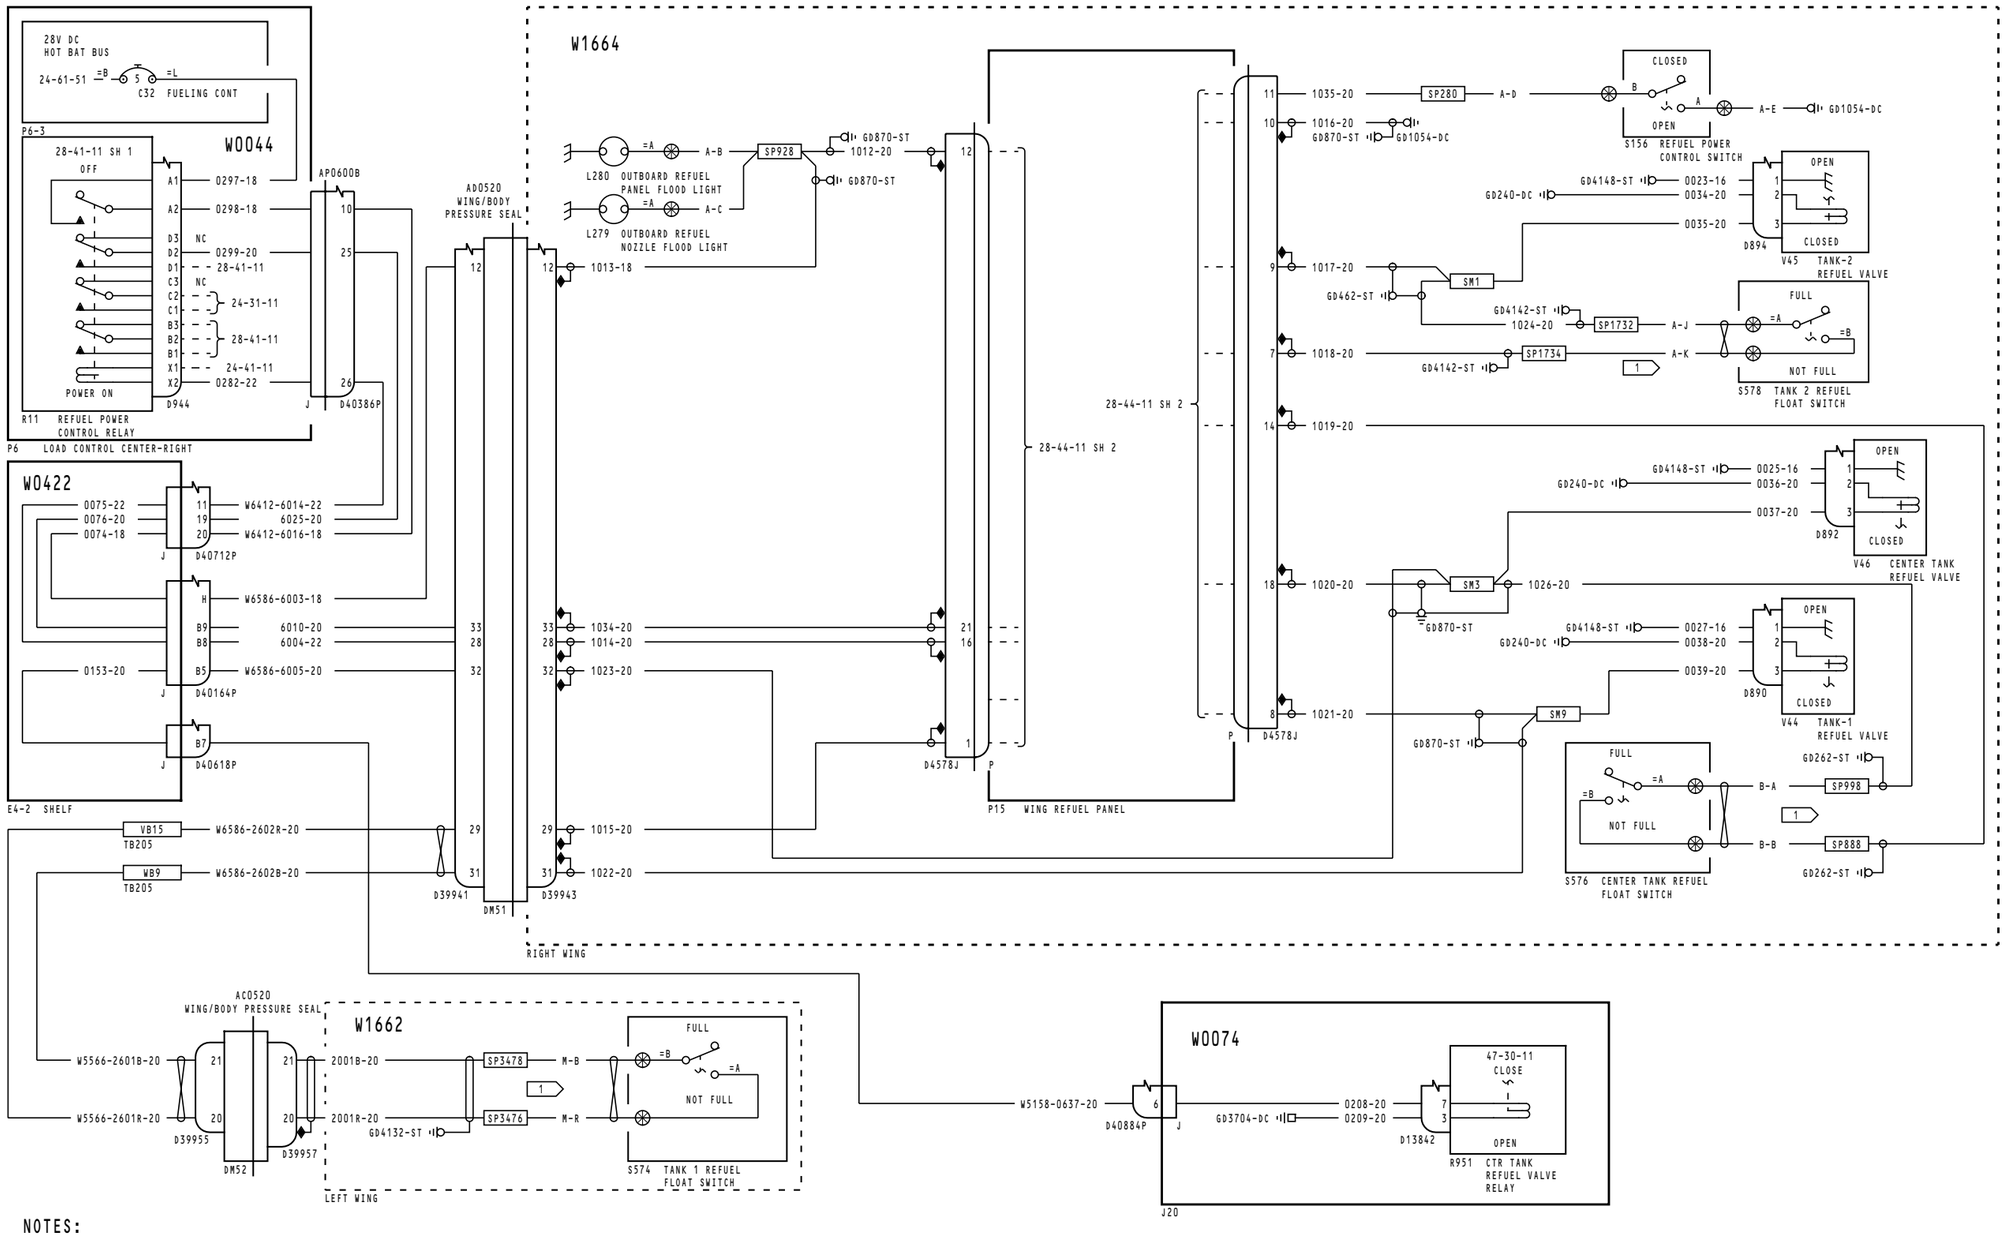


ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-44-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

5

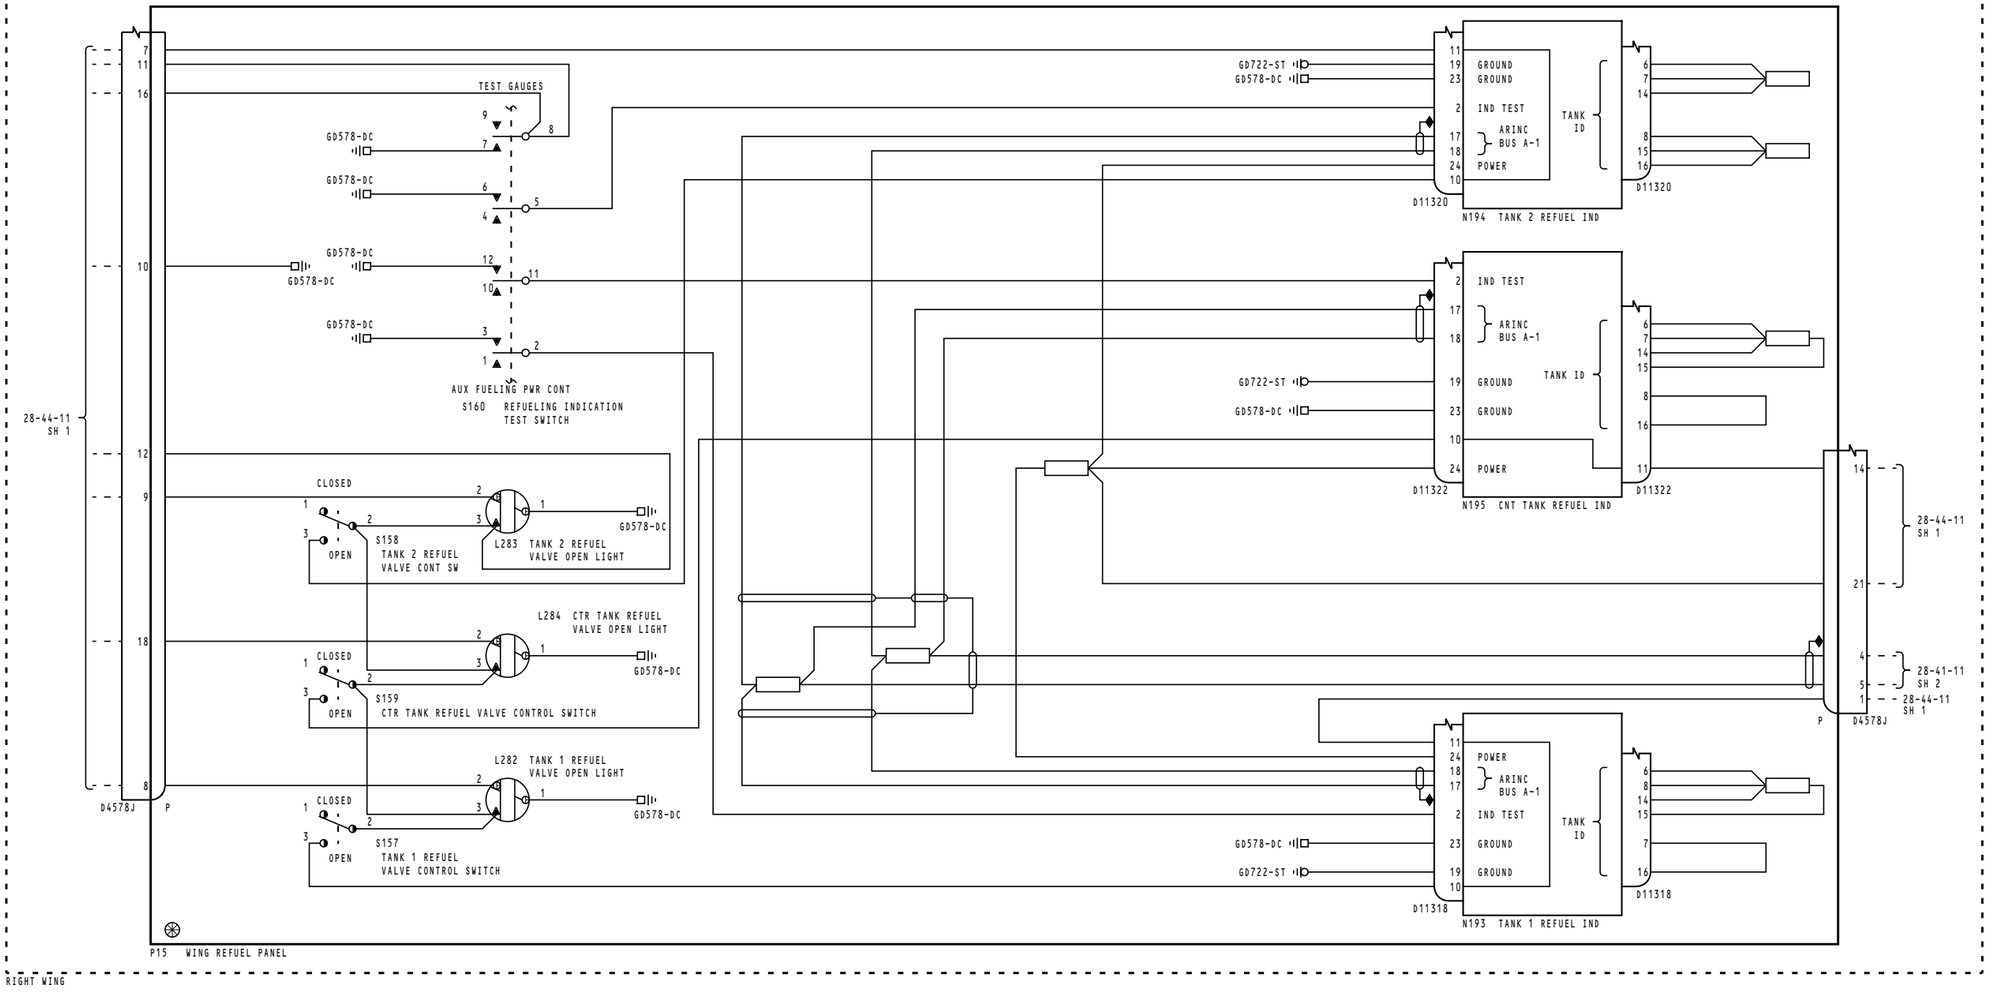

ECCN 9E991 BOEING PROPRIETARY - See title page for details

28-44-11

Page 1
Sheet 2
May 15/2024