Steering Collar (with Mods S.O.O. 6001 and 6048) (Post Mod 6/2331) – Maintenance Practices

1. Adjustment/Test

Refer to Figure 1 for details.

Note The following adjustment procedures are only applicable to nose legs incorporating shimmy damper provisions for use with wheel-skis or intermediate flotation gear. If wheel-skis or intermediate flotation gear are not fitted. Refer to 32-20-34, Steering Collar – Maintenance Practices.

A. Adjust Steering Collar Torque Loading

1) With the nose wheel jacked clear of ground (refer to 07-00-00, Lifting and Shoring – General Data), disconnect steering actuator from steering collar and remove pin from torque links. Slacken locking clip and remove key.

2) If new friction disc has been installed, wear in and seat disc as follows:

a) Torque ring nut until torque required to turn steering collar is 800 to 1000 pound–inches (70 to 90 pounds to move steering collar with spring balance attached to end of torque link).


b) Operate steering collar under load for a minimum of ten cycles.

Note Steering collar may be operated manually or, if hydraulic power is available, by connecting and operating steering actuator. Disconnect actuator, if used, after operation.

c) Back off torque on ring nut until steering collar rotates freely. Proceed to Para 1.A.3).

3) Torque ring nut to 800 to 1000 pound–inches, to align with slots, ensuring steering collar is snug but free to rotate. If required, add one or two shims between the friction disk and the ring nut to achieve torque preload (70 to 90 pounds to move steering collar with a spring balance attached to end of torque link).

4) Install locking key and secure with clamp. Reconnect steering actuator to steering collar and install pin in torque links. Lower aircraft to ground.

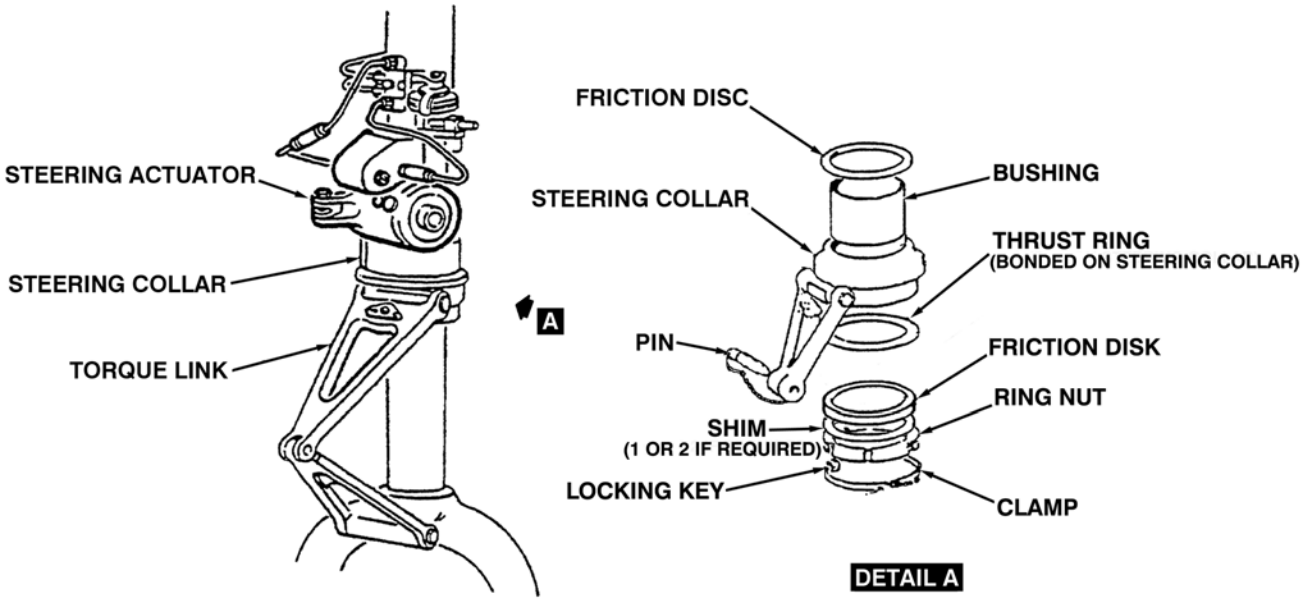

NOTE: REFER TO PSM 1-6-6A FOR ASSEMBLY CONFIGURATION

Steering Collar Torque Adjustment
Figure 1