Steering Collar (Post Mod 6/2331) – Maintenance Practices

1. Removal/Installation

Refer to Figure 1 for details.

A. Remove Steering Collar

WARNING BEFORE DOING ANY MAINTENANCE TO, IN, OR AROUND THE MAIN LANDING GEAR AND/OR THE NOSE LANDING GEAR, REFER TO ALL SAFETY PRECAUTIONS.

1) Jack aircraft until nose wheel is clear of ground. (Refer to 07-00-00, Lifting and Shoring – General Data, Para 9.).

2) Remove cover on underside of fuselage at nose leg and retain hardware.

3) Place container under nose landing gear to receive spillage.

WARNING ENSURE ALL NITROGEN PRESSURE IS RELEASED BEFORE REMOVING NOSE WHEEL FORK FROM NOSE GEAR SHOCK STRUT. FAILURE TO DO SO COULD CAUSE SERIOUS INJURY.

4) Remove nose wheel. (Refer to 32-40-61, Nose Wheel – General Data, Para 2.A).

5) Remove nose wheel fork. (Refer to 32-20-32, Nose Wheel Fork – Maintenance Practices, Para 1.A).

6) Remove screws securing cover.

7) Remove spring, cam, cotter pin, nut, washer and bolt securing upper torque arm to steering collar. Retain hardware.

8) Remove nuts, bolts and washers on cap fitting. Retain hardware.

9) Remove nut, washer, contour block, screw and clamp. Retain hardware.

10) Remove clamp, locking key, ring nut, shims (if installed), and friction disk from shock strut cylinder. Retain hardware.

11) Remove cotter pin, nut, and washer securing steering lever to steering collar.

12) Remove steering collar and bushing.

13) Remove bushing from steering collar.

B. Install Steering Collar

1) Install bushing in the steering collar and install on the shock strut cylinder.

2) Align the stud on the steering collar with actuator steering lever.

3) Install the friction disk and the ring nut on the shock strut cylinder and tighten ring nut finger tight.

4) Install washer and nut on the steering collar stud and the steering actuator lever. Torque nut to 240 pound–inches and advance nut to the nearest hole and install new cotter pin.

5) Install the upper torque arm to the steering collar with torque link bolt, spring, cam, washer and nut. Tighten nut finger tight and advance to nearest hole. Install a new cotter pin.

6) Install cover with screws.

7) Torque the ring nut to 360 pound–inches and back off to the nearest matching slots.

8) The steering collar must be snug but free to rotate. The steering collar should require a minimum of 8 pounds to move with a spring balance at the end of the extended upper torque arm.

   Note If required, add one or two shims between the friction disk and the ring nut to achieve torque preload and repeat Para 1.B.7) and Para 1.B.8).

9) Install locking key and secure the clamp with screw, contour block, washer and nut.

10) Install cap fitting with bolts, washers and nuts. For gap settings and torquing instructions refer to 32-20-11, Nose Gear Shock Strut – General Data, Para 3.

11) Install nose wheel fork. (Refer to 32-20-32, Nose Wheel Fork – Maintenance Practices, Para 1.B).

12) Install nose wheel. (Refer to 32-40-61, Nose Wheel – General Data, Para 2.B).


13) Charge the nose gear shock strut. (Refer to 32-20-11, Nose Gear Shock Strut – General Data, Para 2).

14) Install cover on underside of fuselage at nose leg.

15) Lower aircraft to ground.

16) Install screens and covers as necessary. Close nose baggage compartment.

17) Function test nose wheel steering. (Refer to 32-50-00, Nose Wheel Steering System – General Data, Para 3.B).

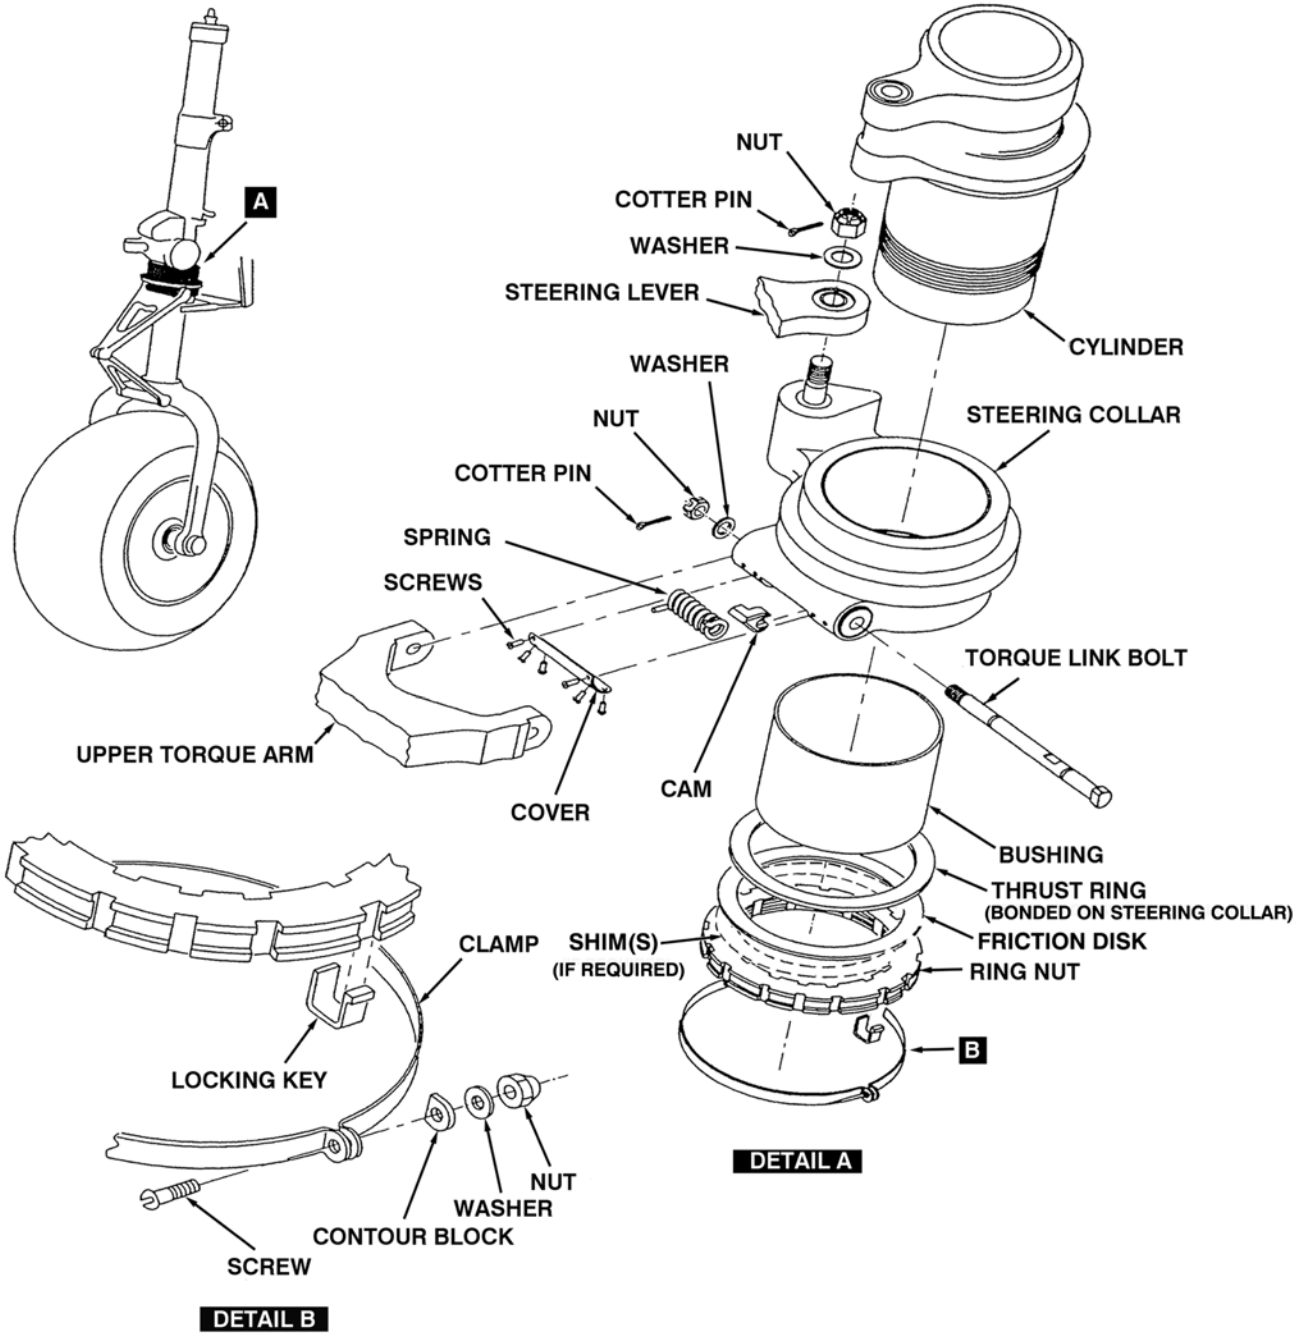

Steering Collar – Removal/Installation
Figure 1

This Page Intentionally Left Blank