Parking and Mooring – General Data

1. Parking Procedure

   A. General

      Park the aircraft by heading it into the wind, applying the parking brakes, locking the control surfaces, fitting protective covers and propeller restrainers as necessary, and closing all doors and access provisions. Before leaving the flight compartment ensure that controls are set as follows:

      - Propeller levers to full INCREASE
      - Power levers to IDLE (If propeller zero thrust latches are fitted and engaged, leave power levers at the ZERO THRUST STOP/START line)
      - Fuel levers to OFF
      - POWER SOURCE switch to OFF

   B. Parking Brake


      A push-pull type parking brake handle is located on a pedestal between the pilot's rudder pedals. To apply the parking brake, depress both brake pedals fully, pull out the parking brake handle and release pedals. To release parking brake, apply pressure to both brake pedals, push brake handle fully in and release pedals.

   C. Gust Lock Installation – Mods 6/1676 and 6/1726


      Position aileron and elevator gust lock hook assembly over left arm of control column and engage hand wheel inner spoke in padded support. Align hook assembly lug with eyebolt on control column and install pip pin. Move rudder pedals to neutral position, lift rudder gust lock lever and insert spring loaded spigot of strut assembly into socket below floor. Position the caution flag (Mod 6/1726) in the tube assembly so that the flag obscures the instrument panel. Move control column forward until end fitting of hook assembly is aligned with gust lock bracket on instrument panel. Push down on strut assembly and engage strut upper spigot pin through hook assembly end fitting and gust lock bracket (refer to Figure 1).

2. Mooring Procedure

   Mooring is accomplished by parking the aircraft as in Para 1., place chocks on the forward and aft side of each nose and main landing gear wheel, and tying aircraft down with mooring rope (SD12519) using aircraft tie-down points (refer to Figure 2).

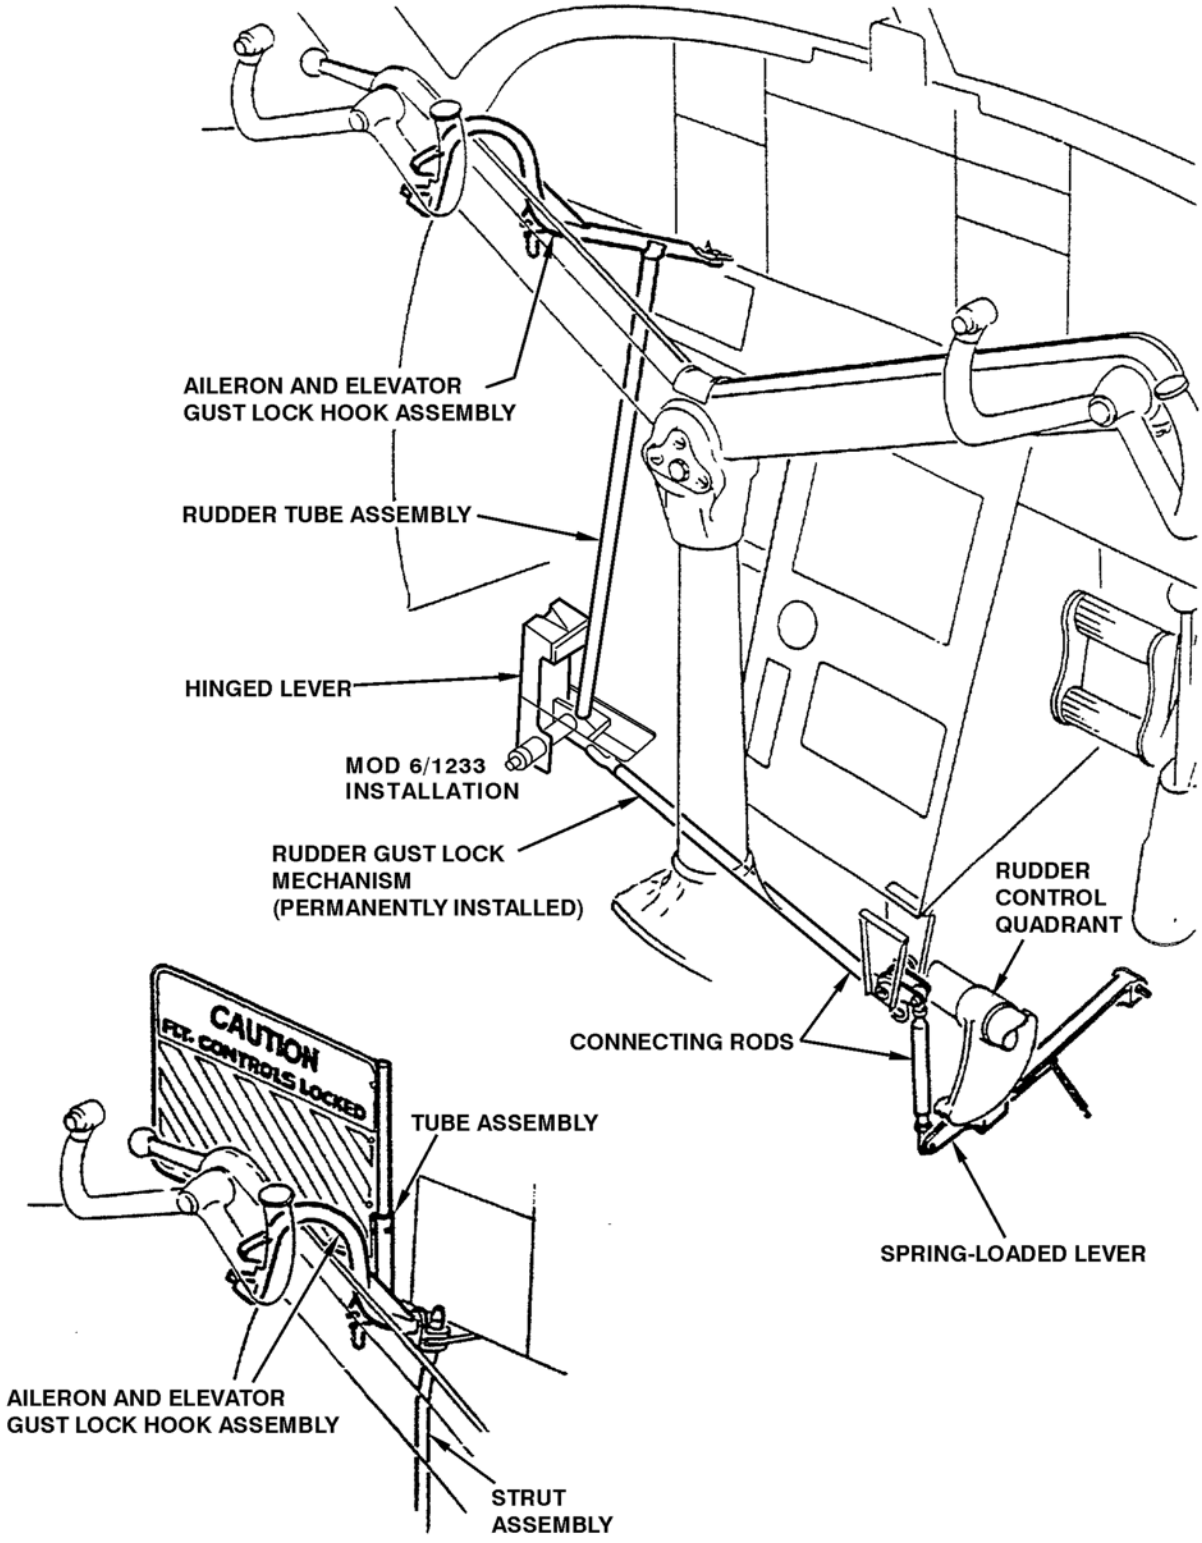

Gust Lock Installation
Figure 1

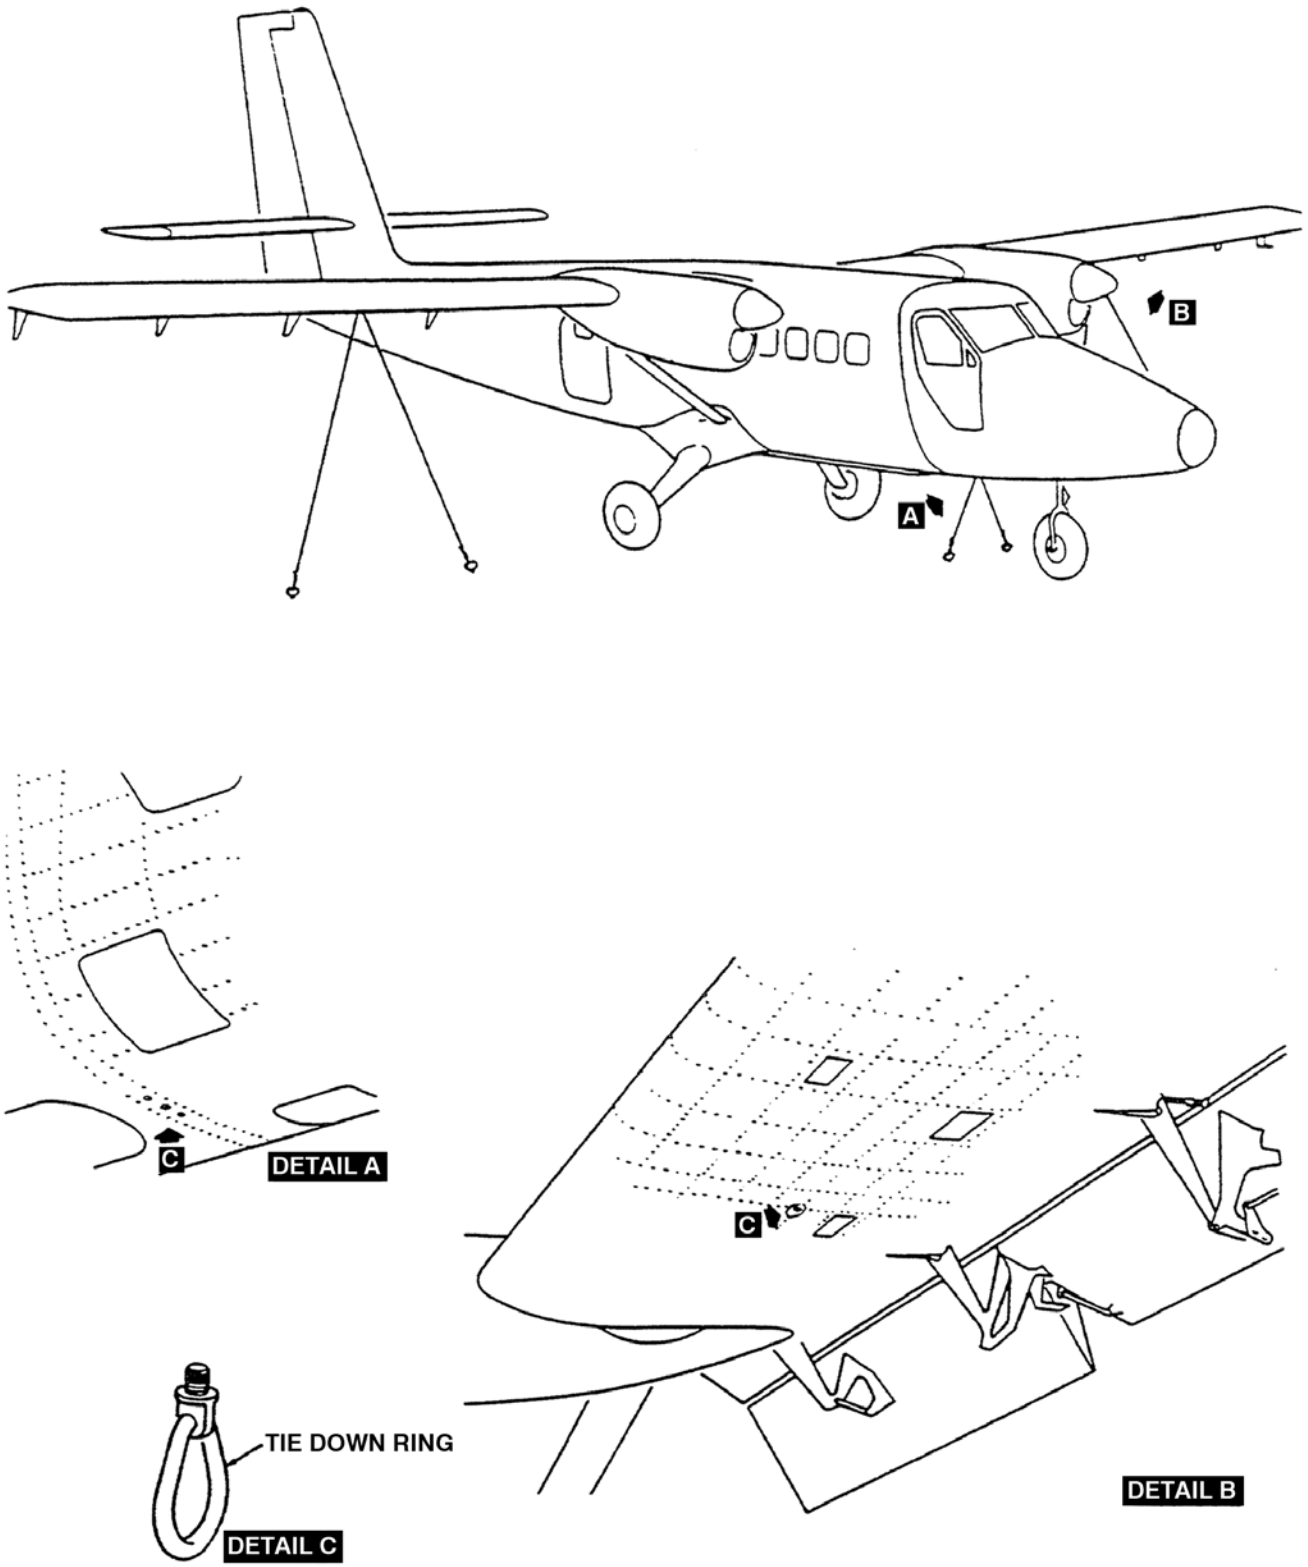

Aircraft Mooring Points
Figure 2

This Page Intentionally Left Blank