## Hydraulic System – General Data

1. General

   The hydraulic system is supplied by one reservoir mounted on the hydraulic power package which is installed beneath the flight compartment floor. The reservoir is accessible through an access panel located below the pilot's door (refer to Figure 1). The fluid level is recorded on a dipstick which is attached to the reservoir filler cap.

2. Checking Fluid Level

   A. Ensure that brakes are off and flaps up.

   B. Ensure discharge of brake and system damping accumulators by operating the brakes and wing flaps until accumulators are completely discharged (brake and hydraulic pressure indicators read zero).


   C. Unscrew hydraulic reservoir filler cap and check that fluid level is between REFILL and FULL marks on dipstick. Add hydraulic fluid. Specification MIL–H–5606, as necessary.

3. Charging the Wheel Brakes Accumulator

   The wheel brakes accumulator is mounted on the hydraulic power package located beneath the flight compartment floor. A remote air charging valve and pressure indicator are located at the left of the accumulator. To charge the accumulator, release accumulator hydraulic pressure by operating the brake pedals, then charge the accumulator with nitrogen or dry air to 700 to 800 psi.

4. Charging the Damping Accumulator

   The damping accumulator is mounted on the hydraulic power package alongside the wheel brakes accumulator, and is accessible through the same access door. To charge the accumulator, release accumulator hydraulic pressure by operating the wing flaps, then charge the accumulator with nitrogen or dry air to 700 to 800 psi.

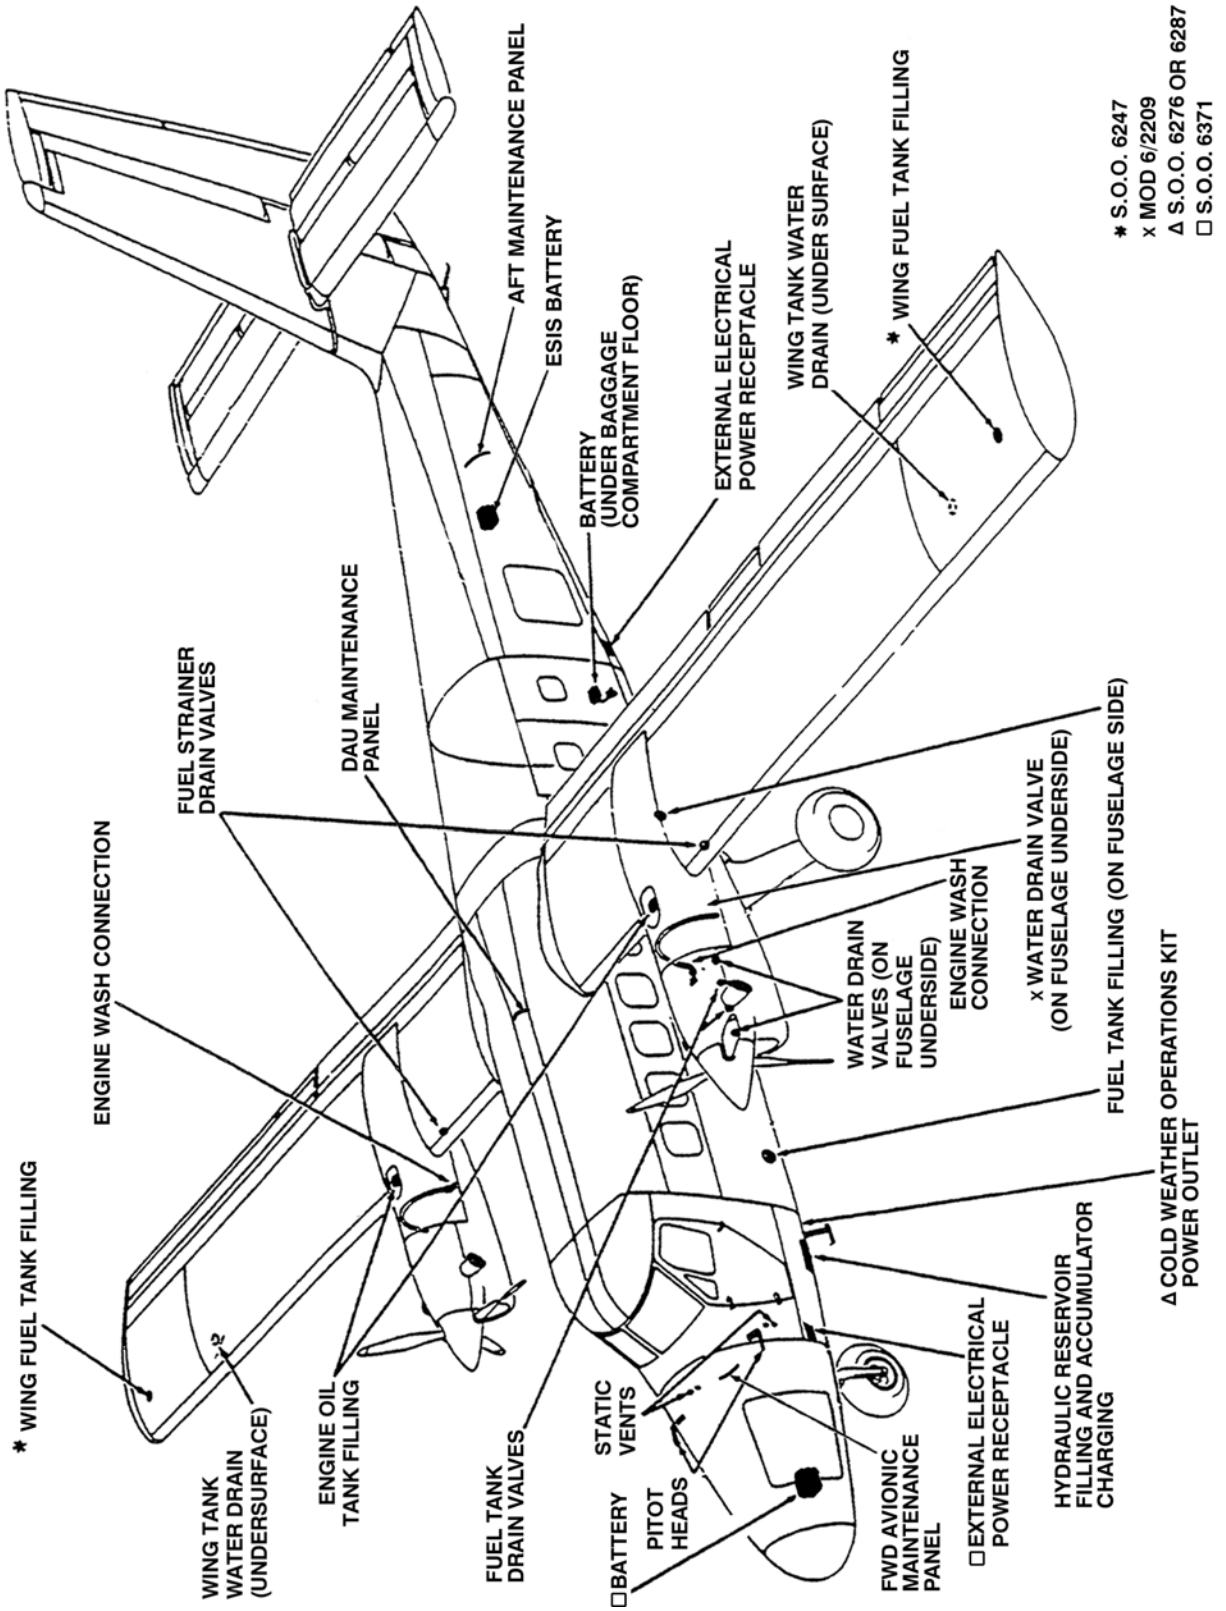


Servicing Diagram
Figure 1



Print Date: 2025-09-12