AIRBUS

AS 350
B3



Chapter 05
MASTER SERVICING MANUAL (MSM)

Issue date : 2013.06.13
Revision 023 : 2022.12.05

Airbus Helicopters
Direction Technique Support
Aéroport International Marseille Provence 13725 Marignane Cedex FRANCE
Contact: *contact.msm.ah@airbus.com*

IMPORTANT NOTE

The practical value of this manual depends entirely upon it being updated correctly by the operator.

The successive revisions should be recorded on the relevant page of the manual.

RECORD OF REVISIONS

Rev. No.	Issue Date	Inserted Date	Inserted Name

Rev. No.	Issue Date	Inserted Date	Inserted Name

LOEDU

1 Update

Refer to the **"Update" Document Unit**

2 "Type" Column Code

N-New, to be inserted
R-Revised, to be replaced
D-To be removed from the manual
- (No code) Unchanged with respect to the previous issue

D.U.	Type	Date	D.U.	Type	Date
TITLE	N	2022.12.05	05-21-01	R	2022.12.05
LOEDU	N	2022.12.05	05-21-02	-	2022.05.23
TABLE OF CONTENTS	N	2022.12.05	05-22-00	R	2022.12.05
HIGHLIGHTS OF THE REVISION	N	2022.12.05	05-22-01	R	2022.12.05
			05-22-02	R	2022.12.05
TECHNICAL PUBLICATIONS	-	2019.01.19	05-23-00	R	2022.12.05
			05-23-01	R	2022.12.05
GLOSSARY	-	2021.10.18	05-23-02	-	2016.07.11
STRUCTURE OF THE MSM	R	2022.12.05	05-25-00	R	2022.12.05
UPDATE OF THE MSM	-	2022.05.23	05-26-00	-	2021.10.18
BREAKDOWN OF THE MSM	R	2022.12.05	05-30-00	-	2017.12.04
			05-30-02	-	2017.12.04
USE OF THE MSM	R	2022.12.05	05-31-00	R	2022.12.05
OPTIONAL	-	2022.05.23	05-31-01	-	2017.12.04
SB INCORPORATED	R	2022.12.05	05-31-02	-	2022.05.23
05-10-00	-	2021.10.18	05-32-00	R	2022.12.05
05-11-00	R	2022.12.05	05-32-01	R	2022.12.05
05-12-00	-	2019.09.09	05-32-02	-	2022.05.23
05-20-00	-	2017.12.04	05-33-00	D	2022.12.05
05-20-01	-	2013.12.05	05-35-00	R	2022.12.05
05-20-02	-	2019.09.09	05-36-00	-	2022.05.23
05-21-00	-	2022.05.23			

End of the Document Unit

TABLE OF CONTENTS

TITLE

HIGHLIGHTS OF THE REVISION

1 GENERAL

2 OUTLINE OF THE REVISION

3 DETAILED DESCRIPTION

3.1 STRUCTURE OF THE MSM

3.2 BREAKDOWN OF THE MSM

3.3 USE OF THE MSM

3.4 SB INCORPORATED

3.5 Section 05.11.00

3.6 Section 05.21.01

3.7 Section 05.22.00

3.8 Section 05.22.01

3.9 Section 05.22.02

3.10 Section 05.23.00

3.11 Section 05.23.01

3.12 Section 05.25.00

3.13 Section 05.31.00

3.14 Section 05.32.00

3.15 Section 05.32.01

3.16 Section 05.35.00

TECHNICAL PUBLICATIONS

1 THE DOCUMENTATION

2 OPERATING DOCUMENTS

3 MAINTENANCE DOCUMENTS

4 IDENTIFICATION DOCUMENTS

5 SPECIAL DOCUMENTS

6 VENDOR'S DOCUMENTS

GLOSSARY

STRUCTURE OF THE MSM

1 GENERAL STRUCTURE OF THE MSM

2 BREAKDOWN OF THE MSM

TITLE

2.1 Identification of the DUs

2.2 Task codes

2.3 List Of Effective Document Units (LOEDU)

3 CLASSIFICATION OF INFORMATION

UPDATE OF THE MSM

1 REVISION OF THE MSM

2 UPDATE OF THE MSM

2.1 Update procedure

2.2 Identification of the modifications

3 CUSTOMER COMPLEMENT (CC): ISSUED ON A GREEN BACKGROUND

4 EFFECTIVITY

5 TECHNICAL QUERY

BREAKDOWN OF THE MSM

1 PURPOSE OF THE MSM

2 CHANGES TO THE MSM

3 COMPLIANCE TIME FOR NEW MAINTENANCE INTERVALS OR REDUCED MAINTENANCE INTERVALS

4 HELICOPTER MAINTENANCE

5 TYPES OF MAINTENANCE

6 DEFINITION OF THE MAINTENANCE MODES

6.1 Hard time maintenance

6.2 On-Condition maintenance

6.3 Condition monitoring maintenance

7 EFFECTIVITY - RESPONSIBILITY

8 MAINTENANCE INTERVAL

8.1 Daily checks

8.2 Supplementary inspection (S)

8.3 Additional inspection (F)

8.4 Basic inspection (T or A)

9 MAINTENANCE RELATED TO EQUIPMENT MANUFACTURER DOCUMENTATION

USE OF THE MSM

1 ADAPTATION OF THE MSM

2 INFORMATION FEEDBACK FROM THE OPERATOR TO THE MANUFACTURER

3 IN-SERVICE MONITORING

TITLE

3.1 Airframe monitoring

3.2 Monitoring of components

3.3 Specific case of elastomer hoses

4 COMPONENT PART NUMBERS

4.1 Definition

4.2 Part Number followed by a suffix

4.3 Applicability of the limits

4.4 Changes to Part Numbers

5 LIMITS

5.1 Flight Hours

5.2 Calendar time

5.2.1 Airframe initial aging date

5.2.2 Initial aging date for components

5.2.3 Equipment Delivery Date to end customer (EqDD)

5.3 Cycles

5.4 Periodic and Perform Once limits

5.5 Performance interval

5.6 Specific and severe atmospheric operating conditions

5.7 Maximum limit value

5.7.1 Definition of the margin

5.7.2 Application of the margin

5.7.3 Specification of the margin

5.7.4 Example of how the margin is used

6 AUTHORIZATION TO TRANSFER A COMPONENT (PART OR ASSEMBLY) FROM ONE AIRCRAFT VERSION TO ANOTHER AIRCRAFT VERSION

6.1 Versions on which the transfer of components is applicable

6.2 Components NOT subject to In-Service Monitoring (Condition Monitoring)

6.3 Components subject to In-Service Monitoring

6.3.1 Components subject to a Service Life Limit (SLL)

6.3.2 Components subject to Time Between Overhauls (TBO), Operating Time Limit (OTL), On-Condition maintenance (OC)

7 RECORDING

8 STORAGE HELICOPTER

TITLE

8.1 Helicopter in flight conditions - Parking

8.2 Storage duration « T0 » definition

8.3 Renewal procedure

8.4 Storage inspection tolerance

8.5 Sheltered/Unsheltered Area

9 MAINTENANCE CODES (MC)

10 CONTENT OF A TASK

OPTIONAL

1 COMPATIBILITY / INCOMPATIBILITY

2 TABLE OF APPROVED OPTIONAL INSTALLATIONS

SB INCORPORATED

End of the Document Unit

HIGHLIGHTS OF THE REVISION

1 GENERAL

- Check that the content of the sections is in accordance with the List Of Effective Document Units (LOEDU).
- Return the acknowledgment card.

2 OUTLINE OF THE REVISION

The revision is codified as follows:

- Revision 023 : 2022.12.05

3 DETAILED DESCRIPTION

3.1 STRUCTURE OF THE MSM

- § 1 GENERAL STRUCTURE OF THE MSM
  Modified

3.2 BREAKDOWN OF THE MSM

- § 3 COMPLIANCE TIME FOR NEW MAINTENANCE INTERVALS OR REDUCED MAINTENANCE INTERVALS
  Added
- § 8.4 Basis inspection (T or A)
  Modified

3.3 USE OF THE MSM

- § 8 STORAGE HELICOPTER
  Added

3.4 SB INCORPORATED

- SB 73.00.02
  Adding an attachment point to the fuel supply pipe of the main manifold
  Added

3.5 Section 05.11.00

25-62 OPT - EMERGENCY FLOATATION GEAR

- 25/62/10/401/000/130 — 120 M
  RH outer cover
  TSM becomes TSI
- 25/62/10/401/000/140 — 120 M
  LH outer cover
  TSM becomes TSI

63-20 MAIN GEARBOX

- 63/20/00/000/000/045 Oil filter - Filter element Limit modified	750 FH // 24 M
65-20 TAIL GEARBOX	
- 65/20/00/000/000/315 TRH pitch change unit - Bearing Limit modified	3000 FH

3.6 Section 05.21.01

62-30 MAIN ROTOR MAST	
- 62/30/00/000/000/370 Pitch change rod New task integrated	150 FH

3.7 Section 05.22.00

24-00 ELECTRICAL POWER	
- 24/00/00/000/000/000 Starter generator harness Task removed and renumbered 24/00/00/000/000/001	600 FH // 24 M
- 24/00/00/000/000/001 Starter generator harness New task integrated formely numbered 24/00/00/000/000/000 and modified limit	750 FH // 24 M
24-31 BATTERY	
- 24/31/00/000/000/015 Battery temperature sensor Task removed and transferred to section 05-25-00	600 FH // 24 M
- 24/31/00/000/000/016 Battery temperature sensor Task removed and transferred to section 05-25-00	600 FH // 24 M
- 24/31/00/000/000/090 Electrical power Task removed and renumbered 24/31/00/000/000/091	600 FH // 24 M
- 24/31/00/000/000/091 Electrical power New task integrated formely numbered 24/31/00/000/000/090 and modified limit	750 FH // 24 M
25-10 COCKPIT	
- 25/10/11/000/000/040 Pilot and copilot seats Task removed and renumbered 25/10/11/000/000/041	600 FH // 24 M
- 25/10/11/000/000/041 Pilot and copilot seats New task integrated formely numbered 25/10/11/000/000/040 and modified limit	750 FH // 24 M
25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)	

- 25/66/00/000/000/015 — 600 FH // 24 M
  Emergency locator transmitter
  Task removed and renumbered 25/66/00/000/000/016 in section 05-25-00
- 25/66/00/000/000/035 — 600 FH // 24 M
  Emergency locator transmitter
  Task removed and renumbered 25/66/00/000/000/036 in section 05-25-00
- 25/66/00/000/000/130 — 600 FH // 24 M
  Emergency locator transmitter
  Task removed and renumbered 25/66/00/000/000/131 in section 05-25-00

28-00 FUEL SYSTEM

- 28/00/00/000/000/000 — 600 FH // 24 M
  Fuel system
  Task removed and renumbered 28/00/00/000/000/004
- 28/00/00/000/000/004 — 750 FH // 24 M
  Fuel system
  New task integrated formely numbered 28/00/00/000/000/000 and modified limit
- 28/00/00/402/000/000 — 600 FH // 24 M
  Fuel tank
  Task removed and renumbered 28/00/00/402/000/001
- 28/00/00/402/000/001 — 750 FH // 24 M
  Fuel tank
  New task integrated formely numbered 28/00/00/402/000/000 and modified limit
- 28/00/00/502/000/000 — 600 FH // 24 M
  Fuel tank
  Task removed and renumbered 28/00/00/502/000/002
- 28/00/00/502/000/002 — 750 FH // 24 M
  Fuel tank
  New task integrated formely numbered 28/00/00/502/000/000 and modified limit

28-10 FUELING ASSY

- 28/10/00/000/000/000 — 750 FH // 24 M
  Fueling system
  Limit modified
- 28/10/00/000/000/020 — 600 FH // 24 M
  Fuel shut-off valve
  Task removed and renumbered 28/10/00/000/000/021
- 28/10/00/000/000/021 — 750 FH // 24 M
  Fuel shut-off valve
  New task integrated formely numbered 28/10/00/000/000/020 and modified limit

28-20 FUEL DISTRIBUTION

- 28/20/00/000/000/035 — 600 FH // 24 M
  Fuel distribution - Fuel filter
  Task removed and transferred to section 05-25-00

28-40 FUEL CONTROLS AND MONITORING

- 28/40/00/000/000/000 — 600 FH // 24 M
  Fuel gaging system
  Task removed and renumbered 28/40/00/000/000/001
- 28/40/00/000/000/001 — 750 FH // 24 M
  Fuel gaging system
  New task integrated formely numbered 28/40/00/000/000/000 and modified limit

28-41 INDICATING

- 28/41/00/000/000/020 — 600 FH // 24 M
  Low fuel level warning
  Task removed and renumbered 28/41/00/000/000/021
- 28/41/00/000/000/021 — 750 FH // 24 M
  Low fuel level warning
  New task integrated formely numbered 28/41/00/000/000/020 and modified limit

29-10 MAIN HYDRAULIC GENERATION

- 29/10/10/302/000/000 — 600 FH // 24 M
  Accumulator
  Task removed and renumbered 29/10/10/302/000/001
- 29/10/10/302/000/001 — 750 FH // 24 M
  Accumulator
  New task integrated formely numbered 29/10/10/302/000/000 and modified limit

32-13 SKID LANDING GEAR

- 32/13/00/601/000/000 — 600 FH // 24 M
  Skid landing gear
  Task removed and renumbered 32/13/00/601/000/001
- 32/13/00/601/000/001 — 750 FH // 24 M
  Skid landing gear
  New task integrated formely numbered 32/13/00/601/000/000 and modified limit
- 32/13/00/603/000/000 — 600 FH // 24 M
  Skid type landing gear
  Task removed and renumbered 32/13/00/603/000/001
- 32/13/00/603/000/001 — 750 FH // 24 M
  Skid type landing gear
  New task integrated formely numbered 32/13/00/603/000/000 and modified limit
- 32/13/00/609/000/000 — 600 FH // 24 M
  DART footsteps
  Task removed and renumbered 32/13/00/609/000/001 in section 05-25-00

33-00 LIGHTING SYSTEM

- 33/00/00/000/000/000 — 600 FH // 24 M
  External light
  Task removed and renumbered 33/00/00/000/000/001
- 33/00/00/000/000/001 — 750 FH // 24 M
  External light
  New task integrated formely numbered 33/00/00/000/000/000 and modified limit

34-00 NAVIGATION

- 34/00/00/000/000/000 — 600 FH // 24 M
  Navigation system
  Task removed and renumbered 34/00/00/000/000/001
- 34/00/00/000/000/001 — 750 FH // 24 M
  Navigation system
  New task integrated formely numbered 34/00/00/000/000/000 and modified limit

34-21 GYROMAGNETIC COMPASS

- 34/21/00/000/000/005 — 750 FH // 24 M
  Pilot's and copilot's gyroscopic and directional horizon
  Limit modified

52-10 CREW AND PASSENGERS DOOR

- 52/10/00/501/000/000 — 600 FH // 24 M
  Crew door
  Task removed and renumbered 52/10/00/501/000/001
- 52/10/00/501/000/001 — 750 FH // 24 M
  Crew door
  New task integrated formely numbered 52/10/00/501/000/000 and modified limit
- 52/10/00/601/000/000 — 600 FH // 24 M
  Crew door
  Task removed and renumbered 52/10/00/601/000/001
- 52/10/00/601/000/001 — 750 FH // 24 M
  Crew door
  New task integrated formely numbered 52/10/00/601/000/000 and modified limit

52-30 CARGO DOOR

- 52/30/00/000/000/010 — 600 FH // 24 M
  Lateral cargo door
  Task removed and renumbered 52/30/00/000/000/011 in section 05-25-00
- 52/30/00/000/000/020 — 600 FH // 24 M
  Lateral cargo door
  Task removed and renumbered 52/30/00/000/000/021
- 52/30/00/000/000/021 — 750 FH // 24 M
  Lateral cargo door
  New task integrated formely numbered 52/30/00/000/000/020 and modified limit

52-32 REAR CARGO HOLD DOOR

- 52/32/00/000/000/030 — 600 FH // 24 M
  Rear cargo compartment door
  Task removed and renumbered 52/32/00/000/000/031
- 52/32/00/000/000/031 — 750 FH // 24 M
  Rear cargo compartment door
  New task integrated formely numbered 52/32/00/000/000/030 and modified limit

52-90 SLIDING DOOR

- 52/90/00/000/000/000 — 600 FH // 24 M
  Sliding door
  Task removed and renumbered 52/90/00/000/000/001 in section 05-25-00

- 52/90/00/000/000/020 — 600 FH // 24 M
  Sliding door
  Task removed and renumbered 52/90/00/000/000/021 in section 05-25-00

53-00 FUSELAGE

- 53/00/00/000/000/060 — 600 FH // 24 M
  Structure
  Task deleted and renumbered 53/00/00/000/000/061
- 53/00/00/000/000/061 — 750 FH // 24 M
  Structure
  New task integrated formely numbered 53/00/00/000/000/060 and modified limit
- 53/00/00/601/000/000 — 600 FH // 24 M
  Fuselage
  Task deleted and renumbered 53/00/00/601/000/001 in section 05-25-00
- 53/00/00/601/000/002 — 750 FH // 24 M
  Fuselage
  New task integrated

53-10 PRIMARY STRUCTURE

- 53/10/00/000/000/010 — 600 FH // 24 M
  Windshield, glazed panel, door window
  Task deleted and renumbered 53/10/00/000/000/011
- 53/10/00/000/000/011 — 750 FH // 24 M
  Windshield, glazed panel, door window
  New task integrated formely numbered 53/10/00/000/000/010 and modified limit
- 53/10/00/000/000/070 — 600 FH // 24 M
  Cabin vibrator absorber blade support
  Task removed and renumbered 53/10/00/000/000/071 in section 05-25-00

55-10 HORIZONTAL STABILIZER

- 55/10/00/000/000/020 — 600 FH // 24 M
  Horizontal stabilizer
  Task deleted and renumbered 55/10/00/000/000/021
- 55/10/00/000/000/021 — 750 FH // 24 M
  Horizontal stabilizer
  New task integrated formely numbered 55/10/00/000/000/020 and modified limit

55-20 VERTICAL FINS ASSY

- 55/20/00/000/000/010 — 600 FH // 24 M
  Upper and lower fin
  Task removed and renumbered 55/20/00/000/000/011 in section 05-25-00
- 55/20/00/000/000/060 — 600 FH // 24 M
  Upper and lower fin
  Task removed and renumbered 55/20/00/000/000/061 in section 05-25-00

62-10 MAIN ROTOR BLADE

- 62/10/20/601/000/010 — 600 FH // 24 M
  Main rotor blade
  Task deleted and renumbered 62/10/20/601/000/011
- 62/10/20/601/000/011 — 750 FH // 24 M
  Main rotor blade
  New task integrated formely numbered 62/10/20/601/000/010 and modified limit

62-20 MAIN ROTOR HEAD

- 62/20/00/000/000/080 — 600 FH // 24 M
  MRH
  Task deleted and renumbered 62/20/00/000/000/081
- 62/20/00/000/000/081 — 750 FH // 24 M
  MRH
  New task integrated formely numbered 62/20/00/000/000/080 and modified limit
- 62/20/00/000/000/210 — 600 FH // 24 M
  Droop restrainer ring
  Task deleted and renumbered 62/20/00/000/000/211
- 62/20/00/000/000/211 — 750 FH // 24 M
  Droop restrainer ring
  New task integrated formely numbered 62/20/00/000/000/210 and modified limit

62-30 MAIN ROTOR MAST

- 62/30/00/000/000/030 — 600 FH // 24 M
  Pitch change rod
  Task deleted and renumbered 62/30/00/000/000/031
- 62/30/00/000/000/031 — 750 FH // 24 M
  Pitch change rod
  New task integrated formely numbered 62/30/00/000/000/030 and modified limit
- 62/30/00/000/000/065 — 600 FH // 24 M
  Rotor mast - Upper visible section
  Task deleted and renumbered 62/30/00/000/000/066
- 62/30/00/000/000/066 — 750 FH // 24 M
  Rotor mast - Upper visible section
  New task integrated formely numbered 62/30/00/000/000/065 and modified limit
- 62/30/00/000/000/310 — 600 FH // 24 M
  Scissor link
  Task removed and renumbered 62/30/00/000/000/311 in section 05-25-00
- 62/30/00/000/000/330 — 600 FH // 24 M
  Diapason scissor link
  Task removed and renumbered 62/30/00/000/000/331 in section 05-25-00
- 62/30/00/000/000/340 — 600 FH // 24 M
  MRH - Upper casing attachment bolts/Flared housing
  Task deleted and renumbered 62/30/00/000/000/341
- 62/30/00/000/000/341 — 750 FH // 24 M
  MRH - Upper casing attachment bolts/Flared housing
  New task integrated formely numbered 62/30/00/000/000/340 and modified limit

- 62/30/00/601/000/000 — 600 FH // 24 M
  Pitch change link
  Task removed and renumbered 62/30/00/601/000/001 in section 05-25-00
- 62/30/00/601/000/010 — 600 FH // 24 M
  Swashplate
  Task deleted and renumbered 62/30/00/601/000/011
- 62/30/00/601/000/011 — 750 FH // 24 M
  Swashplate
  New task integrated formely numbered 62/30/00/601/000/010 and modified limit

63-10 ENGINE-TO-M.G.B. COUPLING

- 63/10/00/000/000/050 — 600 FH // 24 M
  Hydraulic pump - Belt
  Task deleted and renumbered 63/10/00/000/000/051
- 63/10/00/000/000/051 — 750 FH // 24 M
  Hydraulic pump - Belt
  New task integrated formely numbered 63/10/00/000/000/050 and modified limit
- 63/10/00/000/000/080 — 600 FH // 24 M
  Hydraulic pump - Bearing
  Task deleted and renumbered 63/10/00/000/000/081 in section 05-25-00
- 63/10/00/000/000/082 — 750 FH // 24 M
  Hydraulic pump - Bearing
  New task integrated
- 63/10/00/000/000/210 — 600 FH // 24 M
  Hydraulic pump - Belt
  Task removed and renumbered 63/10/00/000/000/211 in section 05-25-00
- 63/10/00/000/000/260 — 600 FH // 24 M
  Hydraulic pump - Bearing
  Task deleted and renumbered 63/10/00/000/000/261 in section 05-25-00
- 63/10/00/000/000/262 — 750 FH // 24 M
  Hydraulic pump - Bearing
  New task integrated

63-20 MAIN GEARBOX

- 63/20/00/000/000/080 — 600 FH // 24 M
  Mineral oil
  Task deleted and renumbered 63/20/00/000/000/081
- 63/20/00/000/000/081 — 750 FH // 24 M
  Mineral oil
  New task integrated formely numbered 63/20/00/000/000/080 and modified limit

63-30 MGB MOUNT AND ATTACHMENT

- 63/30/00/000/000/010 — 600 FH // 24 M
  Suspension bar
  Task deleted and renumbered 63/30/00/000/000/011

- 63/30/00/000/000/011 — 750 FH // 24 M
  Suspension bar
  New task integrated formely numbered 63/30/00/000/000/010 and modified limit

63-51 ROTOR BRAKE

- 63/51/00/000/000/000 — 600 FH // 24 M
  Rotor brake micro switch
  Task deleted and renumbered 63/51/00/000/000/001
- 63/51/00/000/000/001 — 750 FH // 24 M
  Rotor brake micro switch
  New task integrated formely numbered 63/51/00/000/000/000 and modified limit
- 63/51/00/000/000/010 — 600 FH // 24 M
  Rotor brake - Ball-type control
  Task deleted and renumbered 63/51/00/000/000/011
- 63/51/00/000/000/011 — 750 FH // 24 M
  Rotor brake - Ball-type control
  New task integrated formely numbered 63/51/00/000/000/010 and modified limit

64-10 TAIL ROTOR BLADE

- 64/10/00/000/000/065 — 750 FH // 24 M
  Blanking cap
  Limit modified
- 64/10/00/000/000/085 — 750 FH // 24 M
  Tail rotor blade
  Limit modified
- 64/10/00/000/000/100 — 750 FH // 24 M
  Tail rotor blade horn
  Limit modified

65-10 TAIL ROTOR DRIVE SHAFT

- 65/10/00/000/000/010 — 600 FH // 24 M
  Tail rotor drive shaft
  Task removed and renumbered 65/10/00/000/000/011 in section 05-25-00

65-20 TAIL GEARBOX

- 65/20/00/000/000/035 — 600 FH // 24 M
  Mineral oil
  Task deleted and renumbered 65/20/00/000/000/036
- 65/20/00/000/000/036 — 750 FH // 24 M
  Mineral oil
  New task integrated formely numbered 65/20/00/000/000/035 and modified limit
- 65/20/00/000/000/142 — 750 FH // 24 M
  Casing
  New task integrated and transferred from section 05-25-00
- 65/20/00/000/000/302 — 600 FH // 24 M
  TRH pitch change unit
  Task removed and renumbered 65/20/00/000/000/303 in section 05-25-00

- 65/20/00/000/000/307 — 600 FH // 24 M
  TRH pitch change unit - Greasable bearing
  Task removed and renumbered 65/20/00/000/000/308 in section 05-25-00
- 65/20/00/000/000/490 — 600 FH // 24 M
  TGB - Pitch rod
  Task removed and renumbered 65/20/00/000/000/491
- 65/20/00/000/000/491 — 750 FH // 24 M
  TGB - Pitch rod
  New task integrated formely numbered 65/20/00/000/000/490 and modified limit
- 65/20/00/000/000/500 — 600 FH // 24 M
  Tail rotor shaft
  Task removed and renumbered 65/20/00/000/000/501
- 65/20/00/000/000/501 — 750 FH // 24 M
  Tail rotor shaft
  New task integrated formely numbered 65/20/00/000/000/500 and modified limit
- 65/20/00/601/000/021 — 750 FH // 24 M
  Pitch control lever
  New task integrated formely numbered 65/20/00/601/000/020 and modified limit and transferred from section 05-25-00
- 65/20/00/601/000/030 — 600 FH // 24 M
  Pitch control lever
  Task removed and transferred to 05-25-00

67-10 MAIN ROTOR CONTROL

- 67/10/00/000/000/000 — 600 FH // 24 M
  Collective lever lock and "low pitch" locking tab
  Task deleted and renumbered 67/10/00/000/000/001 in section 05-25-00
- 67/10/00/000/000/010 — 600 FH // 24 M
  Main rotor flight controls
  Task deleted and renumbered 67/10/00/000/000/011
- 67/10/00/000/000/011 — 750 FH // 24 M
  Main rotor flight controls
  New task integrated formely numbered 67/10/00/000/000/010 and modified limit

67-20 TAIL ROTOR CONTROL

- 67/20/00/000/000/000 — 600 FH // 24 M
  Tail rotor flight controls
  Task deleted and renumbered 67/20/00/000/000/001
- 67/20/00/000/000/001 — 750 FH // 24 M
  Tail rotor flight controls
  New task integrated formely numbered 67/20/00/000/000/000 and modified limit

67-30 SERVOCONTROL

- 67/30/00/000/000/010 — 750 FH // 24 M
  Yaw channel trim system
  Limit modified
- 67/30/00/402/000/060 — 600 FH // 24 M
  Main servocontrol
  Task deleted and renumbered 67/30/00/402/000/061

- 67/30/00/402/000/061 — 750 FH // 24 M
  Main servocontrol
  New task integrated formely numbered 67/30/00/402/000/060 and modified limit
- 67/30/00/602/000/010 — 600 FH // 24 M
  Servocontrol - Single hydraulic system
  Task deleted and renumbered 67/30/00/602/000/011
- 67/30/00/602/000/011 — 750 FH // 24 M
  Servocontrol - Single hydraulic system
  New task integrated formely numbered 67/30/00/602/000/010 and modified limit

71-00 POWER PLANT

- 71/00/00/000/000/000 — 600 FH // 24 M
  Power plant installation
  Task removed and renumbered 71/00/00/000/000/001
- 71/00/00/000/000/001 — 750 FH // 24 M
  Power plant installation
  New task integrated formely numbered 71/00/00/000/000/000 and modified limit

76-20 EMERGENCY SHUTDOWN

- 76/20/00/501/000/010 — 600 FH // 24 M
  Emergency shut down - Fuel shut-off ball type control
  Task removed and transferred in section 05-22-02

77-00 ENGINE INDICATING

- 77/00/00/000/000/000 — 750 FH // 24 M
  Engine emergency governing system "EBCAU"
  Limit modified
  Description modified

79-00 LUBRICATION

- 79/00/00/601/000/000 — 600 FH // 24 M
  Power plant
  Task deleted and renumbered 79/00/00/601/000/001
- 79/00/00/601/000/001 — 750 FH // 24 M
  Power plant
  New task integrated formely numbered 79/00/00/601/000/000 and modified limit

3.8 Section 05.22.01

28-00 FUEL SYSTEM

- 28/00/00/000/000/001 — 750 FH
  Fuel system
  Limit modified
- 28/00/00/000/000/002 — 750 FH
  Fuel shut-off valve
  Limit modified
- 28/00/00/502/000/001 — 750 FH
  Fuel tank
  Limit modified

28-41 INDICATING

- 28/41/01/000/000/001 — 750 FH
  Low fuel level warning
  Limit modified

29-10 MAIN HYDRAULIC GENERATION

- 29/10/00/000/000/040 — 750 FH
  MGB Hydraulic pump
  Limit modified

53-10 PRIMARY STRUCTURE

- 53/10/00/000/000/110 — 600 FH
  Transmission deck
  Task deleted and renumbered 53/10/00/000/000/111
- 53/10/00/000/000/111 — 750 FH
  Transmission deck
  New task integrated formely numbered 53/10/00/000/000/110 and modified limit

62-30 MAIN ROTOR MAST

- 62/30/00/000/000/045 — 600 FH
  Chips detector
  Task deleted
- 62/30/00/000/000/090 — 600 FH
  Scissors drive coupling - Sealing bead
  Task deleted and renumbered 62/30/00/000/000/091
- 62/30/00/000/000/091 — 750 FH
  Scissors drive coupling - Sealing bead
  New task integrated formely numbered 62/30/00/000/000/090 and modified limit
- 62/30/00/000/000/215 — 600 FH
  Rotating swashplate - 4 contacts bearing
  Task deleted and renumbered 62/30/00/000/000/216
- 62/30/00/000/000/216 — 750 FH
  Rotating swashplate - 4 contacts bearing
  New task integrated formely numbered 62/30/00/000/000/215 and modified limit

63-20 MAIN GEARBOX

- 63/20/00/000/000/015 — 600 FH
  Chips detector
  Task deleted and renumbered 63/20/00/000/000/016
- 63/20/00/000/000/016 — 750 FH
  Chips detector
  New task integrated formely numbered 63/20/00/000/000/015 and modified limit
- 63/20/00/000/000/467 — 600 FH
  Input bevel gear assembly
  Task removed and transferred in section 05-25-00

63-51 ROTOR BRAKE

- 63/51/00/000/000/050 — 600 FH
  Rotor brake
  Task deleted and renumbered 63/51/00/000/000/051

- 63/51/00/000/000/051 Rotor brake New task integrated formely numbered 63/51/00/000/000/050 and modified limit	750 FH
65-20 TAIL GEARBOX	
- 65/20/00/000/000/005 Chips detector Task deleted and renumbered 65/20/00/000/000/006	600 FH
- 65/20/00/000/000/006 Chips detector New task integrated formely numbered 65/20/00/000/000/005 and modified limit	750 FH
- 65/20/00/603/000/000 Casing - Attachment bolt Task removed and renumbered 65/20/00/603/000/001 in section 05-25-00	600 FH
67-20 TAIL ROTOR CONTROL	
- 67/20/00/000/000/010 Lower crossbeams of the yaw control bellcrank support Task removed and renumbered 67/20/00/000/000/011 in section 05-25-00	600 FH
77-00 ENGINE INDICATING	
- 77/00/00/501/000/000 FADEC unit Task removed and transferred in section 05-25-00	600 FH
80-00 STARTING	
- 80/00/02/000/000/120 Starter generator Task removed and transferred in section 05-25-00	600 FH

3.9 Section 05.22.02

65-10 TAIL ROTOR DRIVE SHAFT	
- 65/10/00/000/000/110 Tail rotor drive shaft New task integrated	24 M
76-20 EMERGENCY SHUTDOWN	
- 76/20/00/501/000/010 Emergency shut down - Fuel shut-off ball type control New task integrated and modified limit and transferred from section 05-22-00	24 M

3.10 Section 05.23.00

21-00 AIR CONDITIONING	
- 21/00/00/000/000/000 Cabin ventilation airscoop Task removed and renumbered 21/00/00/000/000/001	1200 FH // 48 M

- 21/00/00/000/000/001 — 1500 FH // 48 M
  Cabin ventilation airscoop
  New task integrated formely numbered 21/00/00/000/000/000 and modified limit

25-10 COCKPIT

- 25/10/11/000/000/060 — 1200 FH // 48 M
  Pilot and copilot seats
  Task removed and transferred to 05-25-00
- 25/10/12/000/000/060 — 1200 FH // 48 M
  Pilot and copilot seats
  Task removed and transferred to 05-25-00

63-10 ENGINE-TO-M.G.B. COUPLING

- 63/10/00/000/000/010 — 1200 FH // 48 M
  Engine-to-MGB coupling - Hydraulic
  Task removed and renumbered 63/10/00/000/000/011 in section 05-25-00
- 63/10/00/000/000/100 — 1200 FH // 48 M
  Engine-to-MGB coupling - MGB
  Task removed and renumbered 63/10/00/000/000/101 in section 05-25-00
- 63/10/00/000/000/105 — 1200 FH // 48 M
  Engine-to-MGB coupling - Hydraulic
  Task removed and renumbered 63/10/00/000/000/106 in section 05-25-00
- 63/10/00/000/000/220 — 1200 FH // 48 M
  Hydraulic pump - Belt drive
  Task removed and renumbered 63/10/00/000/000/221 in section 05-25-00

63-20 MAIN GEARBOX

- 63/20/00/000/000/035 — 1200 FH // 48 M
  Synthetic oil
  Task removed and renumbered 63/20/00/000/000/036
- 63/20/00/000/000/036 — 1500 FH // 48 M
  Synthetic oil
  New task integrated formely numbered 63/20/00/000/000/035 and modified limit

65-20 TAIL GEARBOX

- 65/20/00/000/000/020 — 1200 FH // 48 M
  Synthetic oil
  Task deleted and renumbered 65/20/00/000/000/021
- 65/20/00/000/000/021 — 1500 FH // 48 M
  Synthetic oil
  New task integrated formely numbered 65/20/00/000/000/020 and modified limit

67-30 SERVOCONTROL

- 67/30/00/404/000/000 — 1200 FH // 48 M
  Load compensator assy - Lever
  Task removed and transferred in section 05-25-00

76-00 ENGINE CONTROLS

- 76/00/00/000/000/020 — 1200 FH // 48 M
  Engine fuel flow control
  Task removed and transferred in section 05-25-00

3.11 Section 05.23.01

25-10 COCKPIT

- 25/10/11/000/000/020 — 1200 FH
  Front seats with shock absorbers
  Task removed and renumbered 25/10/11/000/000/021 in section 05-25-00
- 25/10/11/000/000/025 — 1200 FH
  Front seats with shock absorbers
  Task removed and renumbered 25/10/11/000/000/026 in section 05-25-00

31-42 LIGHTING AND ANCILLARIES CONTROL UNIT (LACU)

- 31/42/00/000/000/001 — 1500 FH
  Lightning and ancillaries control unit (LACU)
  New task integrated

76-12 TWIST GRIP

- 76/12/00/000/000/000 — 1500 FH
  Twist grip - Switches
  Limit modified
- 76/12/00/000/000/010 — 1500 FH
  Twist grip - Switches
  Limit modified

76-30 TWIST GRIP FUEL FLOW CONTROL

- 76/30/12/000/000/000 — 1200 FH
  Twist grip - Load spring
  Task removed and transferred in section 05-25-00
- 76/30/12/000/000/010 — 1200 FH
  Twist grip - Load spring
  Task removed and transferred in section 05-25-00

77-00 ENGINE INDICATING

- 77/00/00/501/000/010 — 1500 FH
  FADEC unit
  Limit modified

3.12 Section 05.25.00

21-21 VENTILATION/DEMISTING

- 21/21/00/000/000/010 — 1800 FH // 72 M
  Heating pipe
  Task removed and renumbered 21/21/00/000/000/011
- 21/21/00/000/000/011 — 2250 FH // 72 M
  Heating pipe
  New task integrated formely numbered 21/21/00/000/000/010 and modified limit

24-31 BATTERY

- 24/31/00/000/000/015 Battery temperature sensor New task integrated and transferred from section 05-22-00	600 FH // 24 M
- 24/31/00/000/000/016 Battery temperature sensor New task integrated and transferred from section 05-22-00	600 FH // 24 M
25-10 COCKPIT	
- 25/10/11/000/000/021 Front seats with shock absorbers New task integrated formely numbered 25/10/11/000/000/020 and modified limit and transferred from section 05-23-01	1200 FH
- 25/10/11/000/000/026 Front seats with shock absorbers New task integrated formely numbered 25/10/11/000/000/025 and modified limit and transferred from section 05-23-01	1200 FH
- 25/10/11/000/000/060 Pilot and copilot seats New task integrated and transferred from section 05-23-00	1200 FH // 48 M
- 25/10/11/000/000/070 Pilot and copilot seats - Rails Limit modified	2250 FH
- 25/10/12/000/000/060 Pilot and copilot seats New task integrated and transferred from section 05-23-00	1200 FH // 48 M
- 25/10/12/000/000/070 Pilot and copilot seats - Rails Limit modified	2250 FH
25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)	
- 25/66/00/000/000/016 Emergency locator transmitter New task integrated formely numbered 25/66/00/000/000/015 and transferred from section 05-22-00	600 FH // 24 M
- 25/66/00/000/000/036 Emergency locator transmitter New task integrated formely numbered 25/66/00/000/000/035 and transferred from section 05-22-00	600 FH // 24 M
- 25/66/00/000/000/131 Emergency locator transmitter New task integrated formely numbered 25/66/00/000/000/130 and transferred from section 05-22-00	600 FH // 24 M
28-20 FUEL DISTRIBUTION	
- 28/20/00/000/000/000 Fuel shut-off valve New task integrated	300 FH
- 28/20/00/000/000/035 Fuel distribution - Fuel filter New task integrated and transferred from section 05-22-00	600 FH // 24 M
32-13 SKID LANDING GEAR	

- 32/13/00/609/000/001 DART footsteps New task integrated formely numbered 32/13/00/609/000/000 and transferred from section 05-22-00	600 FH // 24 M
52-30 CARGO DOOR	
- 52/30/00/000/000/011 Lateral cargo door New task integrated formely numbered 52/30/00/000/000/010 and transferred from section 05-22-00	600 FH // 24 M
52-90 SLIDING DOOR	
- 52/90/00/000/000/001 Sliding door New task integrated formely numbered 52/90/00/000/000/000 and transferred from section 05-22-00	600 FH // 24 M
- 52/90/00/000/000/021 Sliding door New task integrated formely numbered 52/90/00/000/000/020 and transferred from section 05-22-00	600 FH // 24 M
53-00 FUSELAGE	
- 53/00/00/601/000/001 Fuselage New task integrated formely numbered 53/00/00/601/000/000 and transferred from section 05-22-00	600 FH // 24 M
53-10 PRIMARY STRUCTURE	
- 53/10/00/000/000/030 Tail boom-to-fuselage junction Task deleted and renumbered 53/10/00/000/000/031	2500 FH // 72 M
- 53/10/00/000/000/031 Tail boom-to-fuselage junction New task integrated formely numbered 53/10/00/000/000/030 and modified limit	3000 FH // 72 M
- 53/10/00/000/000/071 Cabin vibrator absorber blade support New task integrated formely numbered 53/10/00/000/000/070 and transferred from section 05-22-00	600 FH // 24 M
55-20 VERTICAL FINS ASSY	
- 55/20/00/000/000/011 Upper and lower fin New task integrated formely numbered 55/20/00/000/000/010 and transferred from section 05-22-00	600 FH // 24 M
- 55/20/00/000/000/061 Upper and lower fin New task integrated formely numbered 55/20/00/000/000/060 and transferred from section 05-22-00	600 FH // 24 M
62-10 MAIN ROTOR BLADE	
- 62/10/00/401/000/000 Blade pin Task deleted and renumbered 62/10/00/401/000/001	600 FH // 6 M

- 62/10/00/401/000/001 Blade pin New task integrated formely numbered 62/10/00/401/000/000 and modified limit	150 FH // 6 M
62-30 MAIN ROTOR MAST	
- 62/30/00/000/000/311 Scissor link New task integrated formely numbered 62/30/00/000/000/310 and transferred from section 05-22-00	600 FH // 24 M
- 62/30/00/000/000/331 Diapason scissor link New task integrated formely numbered 62/30/00/000/000/330 and transferred from section 05-22-00	300 FH // 24 M
- 62/30/00/601/000/001 Pitch change link New task integrated formely numbered 62/30/00/601/000/000 and transferred from section 05-22-00	600 FH // 24 M
63-10 ENGINE-TO-M.G.B. COUPLING	
- 63/10/00/000/000/011 Engine-to-MGB coupling - Hydraulic New task integrated formely numbered 63/10/00/000/000/010 and transferred from section 05-23-00	1200 FH // 48 M
- 63/10/00/000/000/081 Hydraulic pump - Bearing New task integrated formely numbered 63/10/00/000/000/080 and transferred from section 05-22-00	600 FH // 24 M
- 63/10/00/000/000/101 Engine-to-MGB coupling - MGB New task integrated formely numbered 63/10/00/000/000/100 and transferred from section 05-23-00	1200 FH // 48 M
- 63/10/00/000/000/106 Engine-to-MGB coupling - Hydraulic New task integrated formely numbered 63/10/00/000/000/105 and transferred from section 05-23-00	750 FH // 48 M
- 63/10/00/000/000/211 Hydraulic pump - Belt New task integrated formely numbered 63/10/00/000/000/210 and transferred from section 05-22-00	600 FH // 24 M
- 63/10/00/000/000/221 Hydraulic pump - Belt drive New task integrated formely numbered 63/10/00/000/000/220 and transferred from section 05-23-00	1200 FH // 48 M
- 63/10/00/000/000/261 Hydraulic pump - Bearing New task integrated formely numbered 63/10/00/000/000/260 and transferred from section 05-22-00	600 FH // 24 M
63-20 MAIN GEARBOX	
- 63/20/00/000/000/467 Input bevel gear assembly New task integrated and transferred from section 05-22-01	600 FH
63-40 INDICATING SYSTEM	

- 63/40/00/000/000/000 Oil temperature warning system Task deleted and renumbered 63/40/00/000/000/001	2400 FH // 72 M
- 63/40/00/000/000/001 Oil temperature warning system New task integrated formely numbered 63/40/00/000/000/000 and modified limit	2250 FH // 72 M
65-10 TAIL ROTOR DRIVE SHAFT	
- 65/10/00/000/000/011 Tail rotor drive shaft New task integrated formely numbered 65/10/00/000/000/010 and transferred from section 05-22-00	600 FH // 24 M
65-20 TAIL GEARBOX	
- 65/20/00/000/000/142 Casing Task removed and transferred to 05-22-00	750 FH // 24 M
- 65/20/00/000/000/303 TRH pitch change unit New task integrated formely numbered 65/20/00/000/000/302 and transferred from section 05-22-00	600 FH // 24 M
- 65/20/00/000/000/308 TRH pitch change unit - Greasable bearing New task integrated formely numbered 65/20/00/000/000/307 and transferred from section 05-22-00	600 FH // 24 M
- 65/20/00/601/000/020 Pitch control lever Task removed and renumbered 65/20/00/601/000/021 from section 05-22-00	1200 FH // 24 M
- 65/20/00/601/000/030 Pitch control lever New task integrated and transferred from section 05-22-00	600 FH // 24 M
- 65/20/00/603/000/001 Casing - Attachment bolt New task integrated formely numbered 65/20/00/603/000/000 and transferred from section 05-22-01	600 FH
67-10 MAIN ROTOR CONTROL	
- 67/10/00/000/000/001 Collective lever lock and "low pitch" locking tab New task integrated formely numbered 67/10/00/000/000/000 and transferred from section 05-22-00	600 FH // 24 M
67-20 TAIL ROTOR CONTROL	
- 67/20/00/000/000/011 Lower crossbeams of the yaw control bellcrank support New task integrated formely numbered 67/20/00/000/000/010 and transferred from section 05-22-01	600 FH
67-30 SERVOCONTROL	
- 67/30/00/404/000/000 Load compensator assy - Lever New task integrated transferred from section 05-23-00	750 FH // 48 M
76-00 ENGINE CONTROLS	

- 76/00/00/000/000/020 — 1200 FH // 48 M
  Engine fuel flow control
  New task integrated transferred from section 05-23-00

76-30 TWIST GRIP FUEL FLOW CONTROL

- 76/30/12/000/000/000 — 1200 FH
  Twist grip - Load spring
  New task integrated transferred from section 05-23-01
- 76/30/12/000/000/010 — 1200 FH
  Twist grip - Load spring
  New task integrated transferred from section 05-23-01

77-00 ENGINE INDICATING

- 77/00/00/501/000/000 — 600 FH
  FADEC unit
  New task integrated transferred from section 05-22-01

80-00 STARTING

- 80/00/02/000/000/120 — 600 FH
  Starter generator
  New task integrated transferred from section 05-22-01
- 80/00/02/000/000/220 — 300 FH
  Starter generator
  MOD Applicability modified
- 80/00/02/000/000/230 — 600 FH
  Starter generator
  New task integrated

3.13 Section 05.31.00

25-81 OPT - SWING AND ACCESSORY

- 25/81/00/000/000/070 — 150 FH // 12 M
  Cargo swing Onboard - Fixed part
  Title modified
  MOD Applicability modified

3.14 Section 05.32.00

21-51 AIR CONDITIONING

- 21/51/20/000/000/030 — 600 FH // 24 M
  Freon air conditioning system
  Task deleted and renumbered 21/51/20/000/000/031
- 21/51/20/000/000/031 — 750 FH // 24 M
  Freon air conditioning system
  New task integrated formely numbered 21/51/20/000/000/030 and modified limit

22-10 OPT - TRIM ACTUATOR DETECTION

- 22/10/00/000/000/020 — 600 FH // 24 M
  Autopilot system
  Task deleted and renumbered 22/10/00/000/000/021

- 22/10/00/000/000/021 — 750 FH // 24 M
  Autopilot system
  New task integrated formely numbered 22/10/00/000/000/020 and modified limit

25-61 OPT - WIRE STRIKE PROTECTION SYSTEM

- 25/61/00/000/000/000 — 600 FH // 24 M
  Wire strike protection system
  Task deleted and renumbered 25/61/00/000/000/001
- 25/61/00/000/000/001 — 750 FH // 24 M
  Wire strike protection system
  New task integrated formely numbered 25/61/00/000/000/000 and modified limit

25-62 OPT - EMERGENCY FLOATATION GEAR

- 25/62/00/000/000/060 — 600 FH // 24 M
  Emergency floatation gear
  Task deleted and renumbered 25/62/00/000/000/061 in section 05-35-00
- 25/62/00/000/000/062 — 750 FH // 24 M
  Emergency floatation gear
  New task integrated

25-63 HOISTS ELECTRICAL

- 25/63/00/601/000/000 — 750 FH // 24 M
  Electric hoist
  Limit modified

25-80 OPT - SLING AND ACCESSORY

- 25/80/00/000/000/009 — 600 FH // 24 M
  Load release unit hook
  Task removed and renumbered 25/80/00/000/000/011 in section 05-35-00

25-81 OPT - SWING AND ACCESSORY

- 25/81/00/000/000/065 — 600 FH // 24 M
  Load release unit hook
  Task deleted and renumbered 25/81/00/000/000/066
- 25/81/00/000/000/066 — 750 FH // 24 M
  Load release unit hook
  New task integrated formely numbered 25/81/00/000/000/065 and modified limit
- 25/81/11/000/000/020 — 750 FH // 24 M
  Load release unit hook
  Limit modified
- 25/81/12/000/000/050 — 600 FH // 24 M
  Onboard load release unit
  Task deleted and renumbered 25/81/12/000/000/051
- 25/81/12/000/000/051 — 750 FH // 24 M
  Onboard load release unit
  New task integrated formely numbered 25/81/12/000/000/050 and modified limit

25-96 ELECTRICAL REAR VIEW MIRROR

- 25/96/00/000/000/010 — 600 FH // 24 M
  Electrical rear view mirror
  Task deleted and renumbered 25/96/00/000/000/011

- 25/96/00/000/000/011 — 750 FH // 24 M
  Electrical rear view mirror
  New task integrated formely numbered 25/96/00/000/000/010 and modified limit

30-42 WINDSCREEN WIPER

- 30/42/00/601/000/000 — 600 FH // 24 M
  Windshield wiper arm - Attachment
  Task deleted and renumbered 30/42/00/601/000/001
- 30/42/00/601/000/001 — 750 FH // 24 M
  Windshield wiper arm - Attachment
  New task integrated formely numbered 30/42/00/601/000/000 and modified limit

53-10 PRIMARY STRUCTURE

- 53/10/00/000/000/075 — 600 FH // 24 M
  Box
  Task deleted and renumbered 53/10/00/000/000/076
- 53/10/00/000/000/076 — 750 FH // 24 M
  Box
  New task integrated formely numbered 53/10/00/000/000/075 and modified limit

64-10 TAIL ROTOR BLADE

- 64/10/00/000/000/270 — 600 FH // 24 M
  Protector
  Task deleted and renumbered 64/10/00/000/000/272
- 64/10/00/000/000/272 — 750 FH // 24 M
  Protector
  New task integrated formely numbered 64/10/00/000/000/270 and modified limit

67-30 SERVOCONTROL

- 67/30/00/402/000/015 — 750 FH // 24 M
  Main servocontrol
  Limit modified
- 67/30/00/501/000/000 — 750 FH // 24 M
  Load compensator system
  Limit modified
- 67/30/00/602/000/000 — 750 FH // 24 M
  Servocontrol - Twin hydraulic system
  Limit modified

71-61 OPT - SAND-FILTER

- 71/61/01/601/000/000 — 600 FH // 24 M
  Sand filter
  Task deleted and renumbered 71/61/01/601/000/001
- 71/61/01/601/000/001 — 750 FH // 24 M
  Sand filter
  New task integrated formely numbered 71/61/01/601/000/000 and modified limit

3.15 Section 05.32.01

33-45 OPT - SEARCHLIGHT

- 33/45/03/000/000/040 — 600 FH
  Searchlight
  Task deleted and renumbered 33/45/03/000/000/041
- 33/45/03/000/000/041 — 750 FH
  Searchlight
  New task integrated formely numbered 33/45/03/000/000/040 and modified limit
- 33/45/03/000/000/050 — 600 FH
  Searchlight - Fan
  Task removed and renumbered 33/45/03/000/000/051 in section 05-35-00
- 33/45/03/000/000/060 — 600 FH
  Searchlight - Junction box
  Task removed and renumbered 33/45/03/000/000/061 in section 05-35-00

3.16 Section 05.35.00

25-62 OPT - EMERGENCY FLOATATION GEAR

- 25/62/00/000/000/061 — 600 FH // 24 M
  Emergency floatation gear
  New task integrated formely numbered 25/62/00/000/000/060 and transferred from section 05-32-00

25-80 OPT - SLING AND ACCESSORY

- 25/80/00/000/000/011 — 600 FH // 24 M
  Load release unit hook
  New task integrated formely numbered 25/80/00/000/000/009 and transferred from section 05-32-00

25-81 OPT - SWING AND ACCESSORY

- 25/81/00/000/000/080 — 1200 FH // 48 M
  Cargo swing Onboard - Fixed part
  New task integrated and transferred from section 05-33-00
- 25/81/00/000/000/090 — 1 M
  Cargo swing Onboard - Fixed part
  Title modified
  MOD Applicability modified
- 25/81/00/000/000/100 — 15 D
  Cargo swing Onboard - Fixed part
  Title modified
  MOD Applicability modified

33-45 OPT - SEARCHLIGHT

- 33/45/03/000/000/051 — 600 FH
  Searchlight - Fan
  New task integrated formely numbered 33/45/03/000/000/050 and transferred from section 05-32-01
- 33/45/03/000/000/061 — 600 FH
  Searchlight - Junction box
  New task integrated formely numbered 33/45/03/000/000/060 and transferred from section 05-32-01

End of the Document Unit

TECHNICAL PUBLICATIONS

1 THE DOCUMENTATION

The technical documentation intended for operators is mainly broken down into five groups:

2 OPERATING DOCUMENTS

- **The Master Servicing Manual (MSM)** is intended particularly for those responsible for helicopter maintenance. It specifies the maintenance limits.
- **The Airworthiness Limitations Section (ALS)** is intended for those responsible for helicopter maintenance. It defines the mandatory limits and checks.
- **The FLight Manual (FLM)** is intended for flight crews. It specifies the limits, standard and emergency procedures and helicopter performance data.
- **The Master Minimum Equipment List (MMEL)** specifies the minimum list of equipment necessary for flight.

3 MAINTENANCE DOCUMENTS

- **The Aircraft Maintenance Manual (AMM)** specifies the maintenance procedures necessary to service the helicopter.
- **The System Description Section (SDS)** comprises part 1 of the AMM and explains how the systems operate.
- **The Structural Repair Manual (SRM)** is used to identify and protect materials, and to repair or replace structural components, mechanical components and blades.
- **The standard practices manual (MTC)** combines all the general know-how and knowledge necessary regarding implementation, maintenance, checks, standard repairs and technical and safety instructions and storage conditions.
- **The Wiring Diagram Manual (WDM)** combines all the helicopter wiring diagrams.
- **The Special Index Modification (SIM)** lists the applicable modifications and their corresponding SBs where applicable.

4 IDENTIFICATION DOCUMENTS


- **The Illustrated Parts Catalog (IPC)** contains all the spare parts necessary to ensure continued serviceability of the helicopter.
- **The tools catalog (ICO)** contains all the tools necessary to ensure continued serviceability of the helicopter.

5 SPECIAL DOCUMENTS

- **Service Bulletins (SB)**, **Alert Service Bulletins (ASB)** and **Emergency Alert Service Bulletins (EASB)** are intended to inform the operators of instructions introduced following new events (incidents, modifications, etc.). These documents supplement the helicopter documents and are incorporated in the latter by updates if necessary.
- **Information Notices (IN)** and **Safety Information Notices (SIN)** are documents issued for information. Their purpose is to remind operators of existing maintenance procedures, or to inform them of changes validated by Airbus and undergoing introduction.

6 VENDOR'S DOCUMENTS

- This documentation comprises the following vendor's manuals: **Vendor's Service Bulletins (SBV)**, **Engine Maintenance Manual (EMM)** and **Component Maintenance Manual (CMM)**.

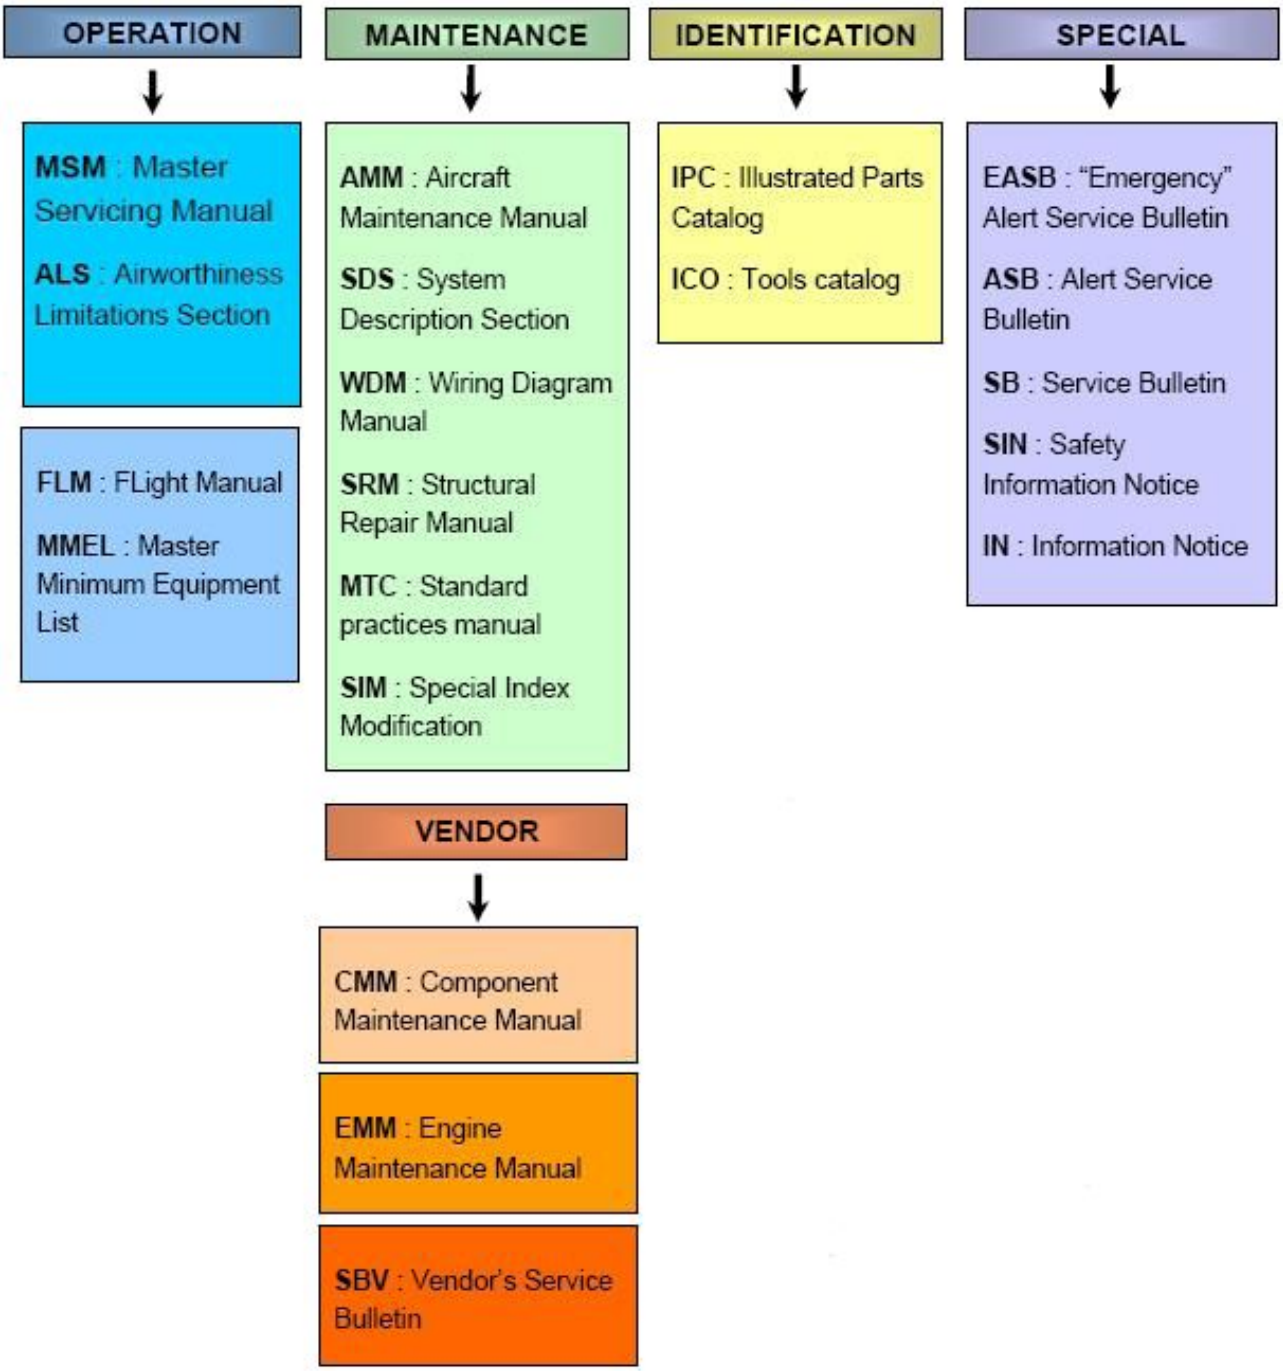

End of the Document Unit

GLOSSARY

(-):	Not indicated
&:	And
//:	Or
§:	Paragraph
A:	Basic inspection with a cAlendar limit
ALF:	Check After the Last Flight of the day
ALL MP/N:	ALL Manufacturer Part Numbers
ALS:	Airworthiness Limitations Section
AMM:	Aircraft Maintenance Manual
ASB:	Alert Service Bulletin
BFF:	Check Before the First Flight of the day
C:	Major inspection with a Calendar limit
CHK:	CHecK
CLN:	CLeaNing
CM:	Condition Monitoring
CMM:	Component Maintenance Manual
CSS:	Chapter / Section / Subject
D:	Day
DI:	Detailed Inspection
DRN:	DRaiNing
DS:	DiScard
DU:	Document Unit
EASA:	European Aviation Safety Agency
ED:	Expiry Date
EMM:	Engine Maintenance Manual
EqDD:	Equipment Delivery Date to end customer
EXC:	EXCept
F:	FAA inspection
FAA:	Federal Aviation Administration
FC:	Functional Check
FH:	Flight Hour
FLM:	FLight Manual
FM:	Log card
FT:	Functional Test
G:	Major inspection with an hour-based time limit
GR:	Ground Run
GVI:	General VIsual check (Visual inspection with access equipment and standard tools)
HC:	Hoist Cycle
HT:	Hard Time maintenance
INF:	INFinite

JAA:	Joint Aviation Authorities
LC:	Landing Cycle
LOEDU:	List Of Effective Document Units
LUB:	LUBrication
M:	Month
MC:	Maintenance Code
MGB:	Main GearBox
MMEL:	Master Minimum Equipment List
MP/N:	Manufacturer Part Number
MRH:	Main Rotor Hub
MSM:	Master Servicing Manual
NPT:	New Proof Test
OC:	On Condition
OPC:	OPerating Cycles
OPH:	OPerating Hours
OPT:	OPTion
OTL:	Operating Time Limit
P:	P-check
P/N:	Part Number
PO:	Perform Once
POST MOD:	After modification
PRE MOD:	Before modification
RIG:	RiggInG
RS:	ReStoration
RTQ:	Readjustment of the TorQue loading
S:	Supplementary inspection
SB:	Service Bulletin
SC:	Sling Cycle
SDI:	Special Detailed Inspection
SLL:	Service Life Limit
S/N:	Serial Number
SVC:	SerViCing
T:	Basic Technical inspection with an hour-based time limit
TA:	Turn Around check
TBO:	Time Between Overhauls
TC:	Torque Cycle
TCK:	Torque CheckK
TGB:	Tail GearBox
TL:	Type of Limit
TRH:	Tail Rotor Hub
TSI:	Time Since Installation
TSM:	Time Since Manufacture
VC:	Visual Check
VLV:	Inspection associated with the flights of the day
WC:	Work Card
WGH:	WeiGHing

End of the Document Unit

STRUCTURE OF THE MSM

1 GENERAL STRUCTURE OF THE MSM

The Master Servicing Manual (MSM) is broken down into two parts.

The first part comprises general information which explains how the MSM operates and how it must be used.

The second part which defines the scheduled maintenance comprises the following sections:

- 05-10-00, which lists the components subject to a Time Between Overhauls (TBO), as well as the corresponding limits.
- 05-11-00, which lists the components subject to an Operating Time Limit (OTL), as well as the corresponding limits.
- 05-12-00, which lists the components subject to On Condition (OC) maintenance, whose inspection interval are given in section 05-2X and 05-3X of the MSM.

05-2X-XX, Scheduled maintenance of the basic equipments :

Type of inspection	Chapter / Section / Subject	Interval	Frequency
Daily checks	05-20-00	BFF//TA//ALF	Periodic
Daily checks	05-20-01	10 FH	Periodic
P-check	05-20-02	10 FH // 7 D	Periodic
S Inspection	05-21-00	150 FH // 12 M	Periodic
S Inspection	05-21-01	150 FH	Periodic
S Inspection	05-21-02	12 M	Periodic
T or A Inspection	05-22-00	750 FH // 24 M	Periodic
T Inspection	05-22-01	750 FH	Periodic
A Inspection	05-22-02	24 M	Periodic
2T or 2A Inspection	05-23-00	1500 FH // 48 M	Periodic
2T Inspection	05-23-01	1500 FH	Periodic
2A Inspection	05-23-02	48 M	Periodic
-	05-25-00	specific	Periodic
-	05-26-00	specific	Perform once

These sections specify the maintenance operations to be performed on the helicopter, periodically or a limited number of times, regardless of the operating conditions.

05-3X-XX, Scheduled maintenance of the optional equipments :

Type of inspection	Chapter / Section / Subject	Interval	Frequency
Daily checks	05-30-00	BFF//TA//ALF	Periodic
P-check	05-30-02	10 FH // 7 D	Periodic
S Inspection	05-31-00	150 FH // 12 M	Periodic
S Inspection	05-31-01	150 FH	Periodic
S Inspection	05-31-02	12 M	Periodic
T or A Inspection	05-32-00	750 FH // 24 M	Periodic
T Inspection	05-32-01	750 FH	Periodic
A Inspection	05-32-02	24 M	Periodic
2T or 2A Inspection	05-33-00	1500 FH // 48 M	Periodic
-	05-35-00	specific	Periodic
-	05-36-00	specific	Perform once

These sections specify the maintenance operations to be performed on the optional equipment of the helicopter, periodically or a limited number of times, regardless of the operating conditions.

2 BREAKDOWN OF THE MSM

The various parts of the MSM are presented in the form of Document Units (DUs).

2.1 Identification of the DUs

Each DU is unique and is identified by the following:


- The title of the manual at the top right hand side of the page,
- The effectivity (helicopter type and version) marked at the bottom left hand side of the page,
- The date code of the DU at the bottom left hand side of the page below the effectivity (format: year.month.day),
- The number or title of the DU at the bottom right hand side of the page,
- The page number at the bottom right hand side of the page.

The end of each Document Unit is identified by " End of the Document Unit" on the last page.

2.2 Task codes

The DUs in sections 05-1X, 05-2X and 05-3X comprise maintenance tasks. These tasks are identified by a unique code specific to Airbus, comprising a group of 15 characters.

Example:

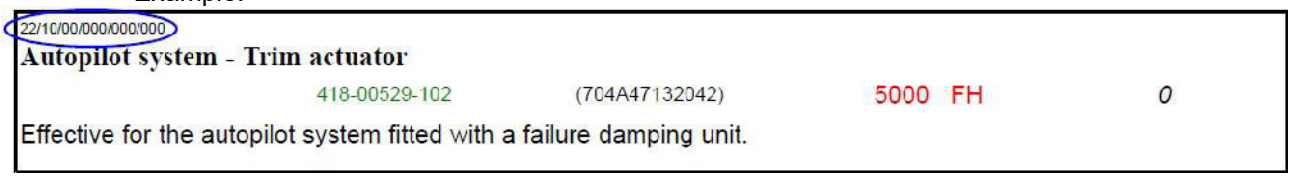

The first four digits (**22/10**/00/000/000/000) correspond to the ATA chapter/section breakdown.

The fifth and sixth digit (22/10/**00**/000/000/000) are used to subdivide an ATA chapter/section comprising several subjects into individual subjects.

The seventh to fifteenth digit (22/10/00/**000/000/000**) are used to identify the tasks per ATA chapter/section/subject.

2.3 List Of Effective Document Units (LOEDU)

The LOEDU specifies the following information, for each DU, in a table:

- The Document Unit (DU): this column specifies the number of the DU or the title of the DU (example: 05-20-00).
- The type: this column is coded with the letter "R" if the DU is revised, "D" if the DU is destroyed, "N" if the DU is new, or has no code for DUs which are unchanged.
- The date: this column indicates the DU date code.

3 CLASSIFICATION OF INFORMATION

The DUs in sections 05-10-00, 05-11-00, 05-12-00, 05-20-0x, 05-21-0x, 05-22-0x, 05-23-0x,05-25-00, 05-26-00, 05-30-0x, 05-31-0x, 05-32-0x, 05-33-0x, 05-35-00 and 05-36-00 are classed in increasing order according to ATA 100 numbering.

End of the Document Unit

UPDATE OF THE MSM

1 REVISION OF THE MSM

The MSM is revised approximately every 6 months.

The MSM cover page bears the issue date code (first issue), the current revision number taken in chronological order followed by the revision date code (example: Issue date: 2010.01.30, Revision 002: 2010.07.30, the last applicable revision is revision 002 with a date code of 2010.07.30).

The date code marked on the new or revised DUs corresponds to the revision date code marked on the cover page.

2 UPDATE OF THE MSM

2.1 Update procedure

The user is responsible for updating his documentation each time he receives a revision or a new issue from the manufacturer. The MSM is updated using the new LOEDU which specifies which DU must be inserted (new DU), replaced (revised DU) or removed (deleted DU). A deleted DU is issued with the wording "DU TO BE REMOVED FROM THE MANUAL" in the revision concerned.

Once the MSM has been updated, the date code of each DU indicated at the bottom left hand side of each page must correspond with the LOEDU.

The beginning of the MSM includes a "HIGHLIGHTS OF THE REVISION" page which explicitly summarizes the modifications made to each revision or new issue.

NOTE

After updating, the "RECORD OF REVISIONS" page at the beginning of the MSM must be completed (date, name and signature).

2.2 Identification of the modifications

Modifications are identified by a revision mark in the form of a vertical line in the right hand margin of the page.

Revision marks are not used in the following DUs:

- LOEDU,
- Table of contents,
- Highlights of the revision.

3 CUSTOMER COMPLEMENT (CC): ISSUED ON A GREEN BACKGROUND

The Customer Complement adds Document Units to the Basic Manual, which partially or totally modify the information it contains.

THE INFORMATION GIVEN ON THESE DOCUMENT UNITS TAKES PRECEDENCE OVER THE INFORMATION GIVEN IN THE BASIC MANUAL.

This information is specific to the customer and helicopter(s) identified at the bottom of the pages.

The Customer Complement Document Units can be revised by reissue of the complete typesetting for a given customer. No Basic Manual Revision Document Unit is cancelled by a Customer Complement Revision.

A supplement to the “LIST OF EFFECTIVE DOCUMENT UNITS” lists the Customer Complement Document Units. The Basic Manual Revisions (on a white background) are completely separate from the Customer Complement Revisions (issued on a green background).

4 EFFECTIVITY

The operator must check the effectivity of the MSM used (correctly updated) for the helicopter concerned.

The effectivity (helicopter type and version) is indicated on the cover page and is repeated at the bottom of each page comprising the MSM DUs.

5 TECHNICAL QUERY

All technical queries to Airbus must be raised throught the Technical Request Management tool, according to procedure MTC 20-08-05-107.

End of the Document Unit

BREAKDOWN OF THE MSM

1 PURPOSE OF THE MSM

The Master Servicing Manual (MSM) is drawn up by the helicopter manufacturer and specifies all the maintenance operations to be performed by the operator.

It specifies all the maintenance operations and limits recommended by the helicopter manufacturer, to ensure continued airworthiness, operational availability and performance of the helicopter (*), in all its varied operating missions.

For the maintenance operations and limits assigned to the engine components, refer to the engine manufacturer's documentation.

(*) Helicopter (type/version) defined by Airbus.

2 CHANGES TO THE MSM

The MSM is modified by the manufacturer according to changes in helicopter definition and operational feedback.

The technical content of this document is approved under authority DOA ref. EASA.21J.700.

3 COMPLIANCE TIME FOR NEW MAINTENANCE INTERVALS OR REDUCED MAINTENANCE INTERVALS



The following rules do not apply if a new maintenance interval or a reduced maintenance interval is published with an alert service bulletin. As long as the bulletin (with its actual revision number) is not marked as incorporated the compliance time of the bulletin is binding.

NOTE

To simplify the reading in the text, the words “inspections” and “checks” are summarized as “inspections”. “To inspect”, “to examine” and “to check” are summarized as “to inspect”.

Definitions:

1. An inspection task is a box in the list of inspections.
2. A new maintenance interval is either a complete new inspections following integration of a new element/equipment or a new inspection task introduced on existing element/equipment due to fleet experience, authority requirements or a new development of existing one.
3. A reduced maintenance interval is the modification of an inspection task from a higher to a lower maintenance interval. This may be the case due to fleet experience or authority requirements.

The general rules for new maintenance intervals are:

1. The inspection task shall be done at the next possible opportunity, at latest with the next scheduled inspection, depending on the maintenance interval.
2. Example 1: A new inspection task is introduced at 600 FH. The helicopter has accumulated 1250 FH. The last periodical inspection has been performed at 1200 FH. Therefore the new inspection task must be done with the next periodical inspection at 1800FH.
3. Example 2: A new inspection task is introduced with an interval of 100 FH. The helicopter has accumulated 1950FH. Therefore the new inspection task must be done with the next 100FH check at 2050 FH.

The general rules for reduced maintenance intervals are:

1. If the inspection task is not overdue in accordance with the reduced maintenance intervals and if there are more than 100FH remaining until due date of the inspection task, the inspection task must be performed at its due date.
2. If the inspection task is not overdue in accordance with the reduced maintenance intervals, the inspection task may be performed for the last time in accordance with the former maintenance interval or the next periodical inspection, whichever comes first.
3. Example 3: A maintenance intervals reduced from 6000FH to 5400FH. The helicopter has accumulated 5290 FH. 110FH are left until the maintenance intervals of the inspection task. Therefore the inspection task has to be performed at the maintenance interval of 5400 FH.
4. Example 4: A maintenance intervals reduced from 3600FH to 3200FH. The helicopter has accumulated 3300FH. Therefore at the latest, the inspection task must be done at the maintenance interval of 3600FH (one time extension). The inspection task thereafter must be done always at the maintenance interval 3200FH.

4 HELICOPTER MAINTENANCE

Helicopter maintenance consists in applying all the operations specified in the various sections of the MSM.

It must be performed by personnel with the required qualifications.

Maintenance includes the monitoring, servicing and reconditioning of a helicopter's components, as specified in the various manuals, taking into account the information that the manufacturer makes known to the operator via Alert Service Bulletins, Service Bulletins, Safety Information Notice, Information Notice etc.

5 TYPES OF MAINTENANCE

Preventive Maintenance:

Preventive maintenance consists of all the scheduled, and generally repetitive, operations to check and maintain a given operating condition.

Corrective Maintenance:

Corrective maintenance consists of all the operations that are performed after detection of a fault or failure in order to re-establish the initial operating condition.

Remedial Maintenance:

Remedial maintenance consists of all the operations initiated to permanently correct a failure, and to partially or wholly eliminate the preventive and corrective maintenance of this failure.

The preventive maintenance is given in the Master Servicing Manual.

6 DEFINITION OF THE MAINTENANCE MODES

There are three main maintenance modes:

- Hard time maintenance.
- On-condition maintenance.
- Condition monitoring maintenance.

The modes (defined below) differ mainly in how the replacement (or repair) of a component with a serviceable component is initiated. With the first two modes, the aim is to replace (or repair) the component before it fails, whereas in the third mode, to replace it after it fails.

6.1 Hard time maintenance

A component subject to hard time maintenance must be removed at the latest when it reaches its limit.

There are three types of hard time maintenance limits:

- **Service Life Limit (SLL)**

  The SLL is an airworthiness limitation.

  Components which are essential for operating safety which are subject to undetectable damage due to the loads they withstand, are covered by a Service Life Limit. These components must be removed from service when the specified limit is reached.

  These limits are listed in chapter 04.

- **Operating Time Limit (OTL)**

  Components whose possible failure would have lesser consequences on flight safety than components with a Service Life Limit, are assigned an Operating Time Limit. These components must be removed from service when the specified limit is reached.

- **Time Between Overhauls (TBO)**

  A TBO is assigned to a complete assembly. The interval corresponds to the operating time permitted before an overhaul is performed in a specialized workshop. The overhaul allows the assembly to be returned to service for a new period.

  The interval corresponds to a period during which any increase in damage cannot be detected by routine maintenance (example: internal corrosion, fretting leading to the loosening of bolted assemblies, etc.).

NOTE

The time limits assigned to components guarantee flight safety with regard to the flight load fatigue alteration of components with no external deterioration. These time limits are not a commercial guarantee because a component may be removed due to wear, fretting corrosion or scoring, etc., before the expiry of the time limits.

The only warranty applicable to the helicopter and any component is the warranty included in the Sales Contract for the helicopter and the components.

6.2 On-Condition maintenance

A component subject to On-Condition maintenance must be inspected periodically to confirm:

- that there is no damage,
- or that the damage found is within the removal or maintenance criteria specified in the documentation.

In both cases, the component is kept in service until the next inspection. The component must be removed from service when it reaches the criterion for removal, or made serviceable again as per the instructions given in the documentation.

The visual inspection is aimed at the overall external appearance of the component (no distortion, failure, cracks, scratches, signs of heating or wear, etc.), which would modify its original condition.

STANDING INSTRUCTIONS RELATIVE TO CONDITION: Surface deterioration and deterioration to protection and paint on all helicopter components must be examined and treated without delay in accordance with the applicable instructions (criteria, then reworking).

6.3 Condition monitoring maintenance

A component is subject to condition monitoring only after its failure (which has no impact on flight safety) has been detected. Such failures are detected during maintenance or in service. These components are not listed in the MSM.

NOTE

Some components can be subject to several maintenance modes, for example, an OTL during which a condition check (OC) is to be performed.

7 EFFECTIVITY - RESPONSIBILITY

The limits assigned to the component part numbers listed in the MSM are applicable to material:

- acquired directly from Airbus or through the Airbus subsidiaries or distribution network,
- purchased from the equipment vendors listed in our spare part catalogs, either directly or through their own distribution network.

In all cases, the manufacturing source is specified in the "airworthiness document" (JAA Form One or equivalent).

Airbus will not carry out repairs on components which were procured other than through the Airbus distribution network.

WARNING

IT IS PROHIBITED TO REUSE PARTS, EQUIPMENT OR ASSEMBLIES, COMING FROM A HELICOPTER WHICH HAS INVOLVED IN AN ACCIDENT, WITHOUT FORMAL TECHNICAL APPROVAL FROM THE AIRBUS CUSTOMER TECHNICAL SUPPORT DEPARTMENT.

REMINDER: THE AIR ACCIDENT INVESTIGATION BOARD OF THE COUNTRY CONCERNED IS RESPONSIBLE FOR CLASSING AN EVENT AS AN ACCIDENT.

8 MAINTENANCE INTERVAL

8.1 Daily checks

The purpose of the daily checks is to ensure the serviceability of the aircraft for the flights.

The daily checks are broken down as follows:

- **Check before the first flight of the day (BFF)**

The purpose of this check is to confirm the airworthiness of the aircraft once it has been positioned on the takeoff area after elimination of possible failures that have been reported by the pilot in the aircraft log book and that are liable to affect the safety level of the aircraft. The interval between this check and the first of the day should be as short as possible.

- **Turn-around check (TA)**

  The turn-around check is intended to confirm the short-term serviceability of the aircraft further to the preceding flight (checking the levels and mission related particular features etc.).

- **Check after the last flight of the day (ALF)**

  The check after the last flight of the day is intended to confirm the serviceability of the aircraft for the flights scheduled for the next flying day.

  This check must be performed after the last flight of the day without exceeding a 10 FH interval between two checks.

- **P-check**

  The P-check is intended to check the operational availability of the helicopter between two checks.

  This check must be performed at the latest at 10 FH without exceeding 7 days.

  There are three possible cases in which this check is to be triggered:

  - The helicopter flies 10 FH within less than 7 days. The P-check must be performed at the latest at 10 FH.

  - The helicopter flies less than 10 FH within 7 days. The P-check must be performed at the latest at 7 days.

  - The helicopter is grounded during 7 days or more. The P-check must be performed before resuming flights.

The purpose of these checks is to ensure the operational availability of the helicopter for flight and they must be performed by:

- a maintenance-qualified personnel,

or

- a crew member who has received an appropriate training by the operator's maintenance department, if authorized by local authorities.



If in doubt or if a failure is detected, the crew member must call on the head of maintenance in order to perform the maintenance operations.

In compliance with the criteria specified in Maintenance Manual, the mechanic will decide:

- Either to authorize flights while monitoring the defective component (in such a case the mechanic must inform the pilot of the criteria which must be observed to continue the flights of the day),
- or to carry out the remedial actions before resuming flights.

Acceptance of an aircraft by the pilot and/or when a modification is embodied on the aircraft:

The mechanic or the person in charge of the maintenance engineering must inform the pilot on a routine basis of:

- any modification to the definition that has been embodied on the aircraft,
- any possible change in the limit interval of the component modified.

- **Cold weather and very cold weather routine check**

  According to the lowest temperatures reached, a supplementary program is defined in the AMM (AMM 05-40-00, 6-3).

8.2 Supplementary inspection (S)

The supplementary inspection must be performed:

- every 150 FH and/or 12 months.

The inspection focuses on the condition of the components with short inspection intervals (less than the basic inspection).

The maintenance operations are to be carried out when the indicated time limit is reached.

8.3 Additional inspection (F)

Certain regulatory authorities require an inspection complying with the provisions of FAR 43-11 under certain conditions (e.g. renewal of Certificate of Airworthiness, change of owner, 100 FH inspection, etc.).

Far (or type "F") inspection (cf Work Card AMM 05-32-00, 6-1). This inspection is basically similar to the 100 FH interval operations.

8.4 Basic inspection (T or A)

The basic inspection comprises checks associated with:

- operation, to be performed every 750 FH (called T inspection) or every 24 months (called A inspection).

The basic inspection includes:

- condition monitoring of the components and systems by functional tests,
- inspection of the condition of the components which have a direct impact on the airworthiness of the helicopter.

It is aimed at checking the overall condition of the helicopter through detailed visual checks of the systems and equipment (no distortion, failure, cracks, scratches, corrosion, signs of heating, wear, impacts, etc.).

NOTE

At each inspection, make sure:

- that no additional action has recently been specified by the manufacturer by way of an Alert Service Bulletin or Service Bulletin, etc.,

- that no interval or limit has been modified by way of an Alert Service Bulletin or Service Bulletin, etc.,

- that no interval or limit specified by the MSM has been reached.

The limits (TBO, OTL, SLL) specified in MSM section 05-10-00, 05-11-00 and ALS section 04-10-00 must also be taken into account where necessary in order to replace components which must be replaced before the next inspection.

9 MAINTENANCE RELATED TO EQUIPMENT MANUFACTURER DOCUMENTATION

For the maintenance of equipment approved under STC (Supplemental Type Certificate), refer to the applicable supplier documentation provided upon delivery of this equipment.

End of the Document Unit

USE OF THE MSM

1 ADAPTATION OF THE MSM

The Master Servicing Manual (MSM) presents the limits for the maintenance operations recommended by the manufacturer.

It can be used as is or it can be adapted by each operator according to his operational needs on the condition he has the approval of his aviation authorities and that he complies with the interval for each maintenance operation.

2 INFORMATION FEEDBACK FROM THE OPERATOR TO THE MANUFACTURER

The operator must inform his local aviation authorities and the aircraft manufacturer of any significant failures discovered in operation or in maintenance, particularly when the component in question is maintained by condition monitoring.

This feedback can be essential for maintaining airworthiness (refer to chapter 04 – DU: USE OF THE ALS - §: "Occurrence reporting").

This is also applicable in case of an accident.

3 IN-SERVICE MONITORING

3.1 Airframe monitoring

The in-service monitoring of the airframe must be recorded in the helicopter logbook.

3.2 Monitoring of components

All the components listed in section 05-10-00, 05-11-00, 05-12-00 of the MSM are to be monitored in service, unless "not to be monitored in service" is specifically mentioned in the task.

The in-service monitoring of components consists in recording the date of installation, the number of flight hours and/or the calendar time and/or the cycles logged on the equipment log card **(FM)**.

If the component does not have a log card (component monitored via the log card of its higher assembly or component without a serial number, etc.), before installation, the operator must organize his documentation in order to comply with the inspection intervals and limits relating to this component (refer to Standard Practices Manual Work Card 20.08.05.101).

These records must be kept if the component is transferred from one helicopter to another.

All the documentation must be organized to enable recording of all the parameters used to comply with the limits.

3.3 Specific case of elastomer hoses

The operator must calculate the aging of elastomer hoses for rejection in accordance with the instructions of Standard Practices Manual (MTC) Work Card 20.09.01.902.

The operator must create a follow-up document (log card for example) in order to comply with the operating time limits.

4 COMPONENT PART NUMBERS

4.1 Definition


- **Manufacturer Part Number (MP/N)**: This is the identification number of the component marked on the identification plate or directly on the component.

- **Airbus Part Number (P/N)**: This is the Airbus part number which is associated with the manufacturer's part number (MP/N) for components which are not manufactured by Airbus.

The part numbers of the components or dynamic components which are given in the MSM are the manufacturer's part numbers (MP/N).

In the case of components which are not manufactured by Airbus, the MP/N is followed by the associated P/N (in brackets).

Example:

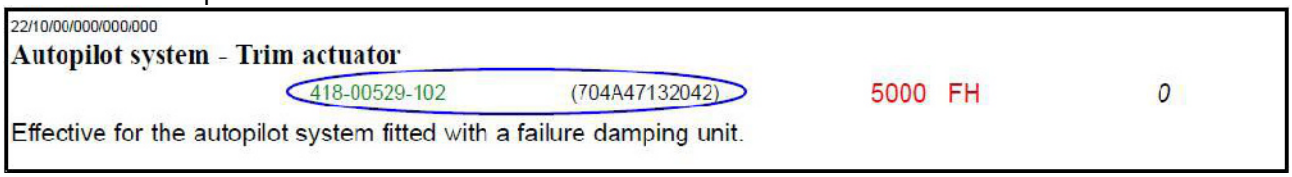

In some cases the P/N is not specified, in this case it is replaced by a hyphen.

4.2 Part Number followed by a suffix

In some cases, the MP/N can be assigned a suffix (example: MP/N 350A31-1831-04**M**), used for spares to indicate the installation of an optional component or a specific configuration.

These MP/Ns with a suffix generally do not appear in the MSM.


The limit applicable to an MP/N with a suffix is identical to that of the same MP/N without a suffix.

Example: the limit given for assembly MP/N 350A31-1831-04 is valid for assembly MP/N 350A31-1831-04 and assembly MP/N 350A31-1831-04M.

4.3 Applicability of the limits

The limit(s) specified for the first MP/N are valid for all the other MP/Ns listed in the same task.

Example:

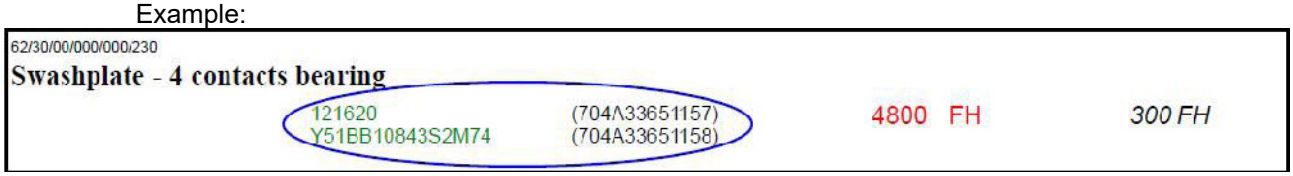

4.4 Changes to Part Numbers

Unless otherwise stated, the time limits and inspections apply to the component whose part number is listed in the MSM and to its future changes, including those not already indicated in this section. In this case, contact the Airbus technical support department to confirm the installation effectivity of the dash number.

5 LIMITS

A component or a maintenance operation can be subject to one or more limits, expressed in:

- flight hours,
- calendar time,
- cycles.

5.1 Flight Hours

- Flight Hours (FH), are counted from takeoff to landing.

5.2 Calendar time

Calendar time can be expressed:

- in Months (M),
- in Days (D),
- Before the First Flight of the day (BFF),
- Turn Around check (TA),
- After the Last Flight of the day (ALF),
- from the date marked on the equipment label (ED: Expiry Date).

5.2.1 Airframe initial aging date

The helicopter airframe initial aging date to be taken into account is the date marked on the helicopter identification plate.

5.2.2 Initial aging date for components

Unless specified differently by mentions TSI (Time Since Installation) or TSM (Time Since Manufacture) in each MSM Task concerned, the start date for aging (T0) to be taken into account is the date of first installation or first depreservation to be recorded on the Log Card for:

- new equipments or mechanical assemblies (with OTL or TBO) and their constitiants,


- not new equipments or mechanical assemblies (with TBO) and their constituant after accomplishment of an overhaul.

The storage time before installation is not to be taken into account in the aging calculation provided that storage was compliant with the applicable documentation, except for the special cases specified below.

Exception :


For some equipments and mechanical assemblies, the date to be taken into account for aging is the date of manufacture recorded on the Log Card. In this case, TSM (Time Since Manufacture) is specified in each MSM Task concerned.

Example:

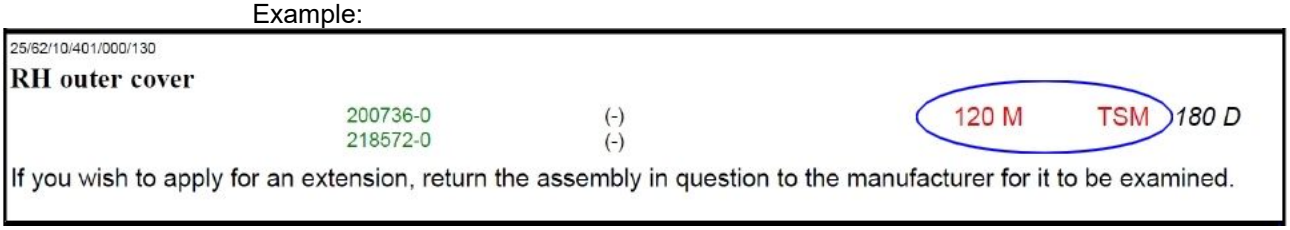

Some equipments and mechanical assemblies are subject to both a limitation since installation and a limitation since manufacture. In this case, TSI (Time Since Installation) or TSM (Time Since Manufacture) is specified behind the respective limitation.

Example:

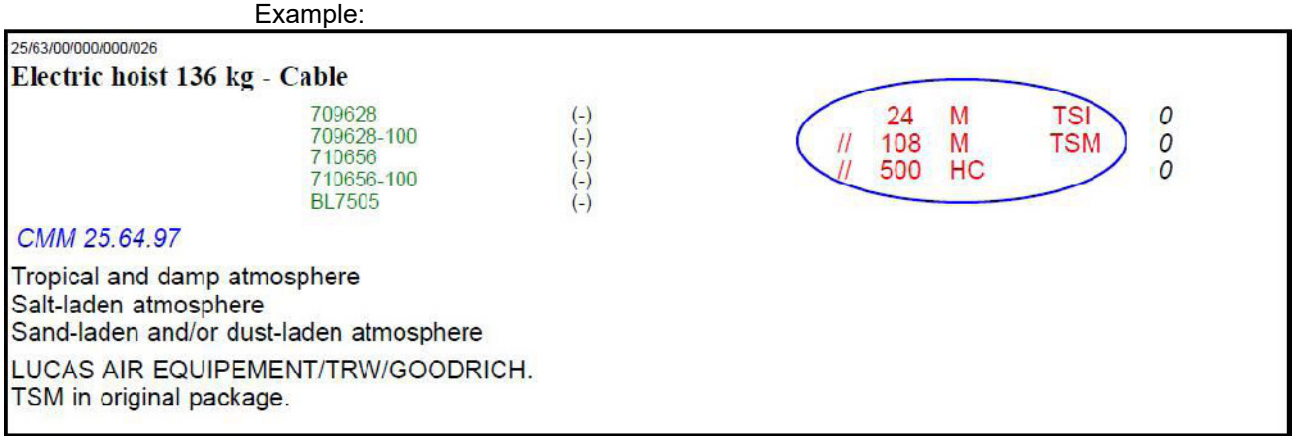

NOTE

Upon warehouse acceptance, if there is no Log Card, it is advisable to create a "Follow-up sheet" and to fill in the aircraft log book when the component is installed. Once the component is installed on the aircraft, the date to be taken into account is the date of manufacture marked on the component identification plate.

NOTE

Mechanical assemblies which have been subject to maintenance operations in specialized workshops or longterm storage in compliance with the applicable instructions during that period may be granted an extension to this calendar time limit.

The operator must file a request with the Airbus Helicopters Technical Support department and obtain a favorable response from the manufacturer and Supervisory Authorities.

5.2.3 Equipment Delivery Date to end customer (EqDD)

For some components, the Equipment Delivery Date to end customer (EqDD) must be taken into account:

- For equipment delivered with the helicopter (installed or not):

  - It is helicopter delivery date, which can be found in the form 52 or,

  - In case this information is not available, the date of the helicopter Certificate of conformity can be used.

- For spare parts:

  - If delivered by Airbus Helicopters, it is the date of the equipment certificate of conformity or,

  - If the equipment certificate of conformity is not available, the date of the equipment EASA form 1 can be used or,

  - If not delivered by Airbus Helicopters, the supplier delivery date can be used.

In this case the calculation of the counting depending of the EqDD is specified in the task description.

5.3 Cycles

According to the component, the cycles can be expressed either as:

- **Takeoff/landing cycles**: LC (Landing Cycle)

  1 LC = 1 takeoff/landing.

- **Sling cycles**: SC (Sling Cycle)

  1 SC = 1 release with load on ground and 3 SC = 1 release in flight (load not on the ground).

- **Hoisting cycles**: HC (Hoist Cycle)

  1 HC =

- In flight, one downward movement + one upward movement, whatever the length of cable and load involved.

- On the ground, one downward movement of 5 meters or more and one equivalent upward movement, whatever the load involved.

- **Operating cycles**: OPC (OPerating Cycles)

  The definition is specified in each concerned task.

- **Operating hours**: OPH (OPerating Hours)

  The definition is specified in each concerned task.

5.4 Periodic and Perform Once limits

The limits specified in section 05-2x-0x of the MSM must be complied with:

- **Periodically**: the maintenance operation must be performed at the latest when the indicated limit is reached.

NOTE

For operational reasons, the maintenance operation can be performed before the limit is reached, however, the maximum interval between two maintenance operations must be complied with.

or

- **Once only**: the maintenance operation must be performed once only, when the indicated limit is reached.

  It must not be performed before the limit is reached.

  These maintenance operations are identified by a dotted line around the task and by code PO (Perform Once) in front of the limit value.

  These operations can be performed either:

  - After installation of a component removed from the same helicopter,

  - After the introduction to service of a new, overhauled or repaired component,

  - After installation of a component originating from another helicopter,

  - Each time after the component is installed.

  The start of the maintenance operation is specified on a routine basis in each task concerned.

Example:

64/10/00/000/000/175

Tail rotor blade

AMM 64-10-00, 6-4 PO 30 FH *5 FH*

DI.

After the introduction to service of a new, overhauled or repaired component.
Perform a sound test (tapping) to check the bonding of the stainless steel leading edge and electrical bonding plate.

5.5 Performance interval

Some components and maintenance operations are assigned several performance limits separated by the **"//" or "&" sign**.

In the case of limits separated by the **"//" sign**, **the maintenance operation must be performed when the first limit is reached**.

The next limit at which the component is to be rejected or the maintenance operation is to be performed will once again be the first limit reached.

In the case of limits separated by the "&" sign, the maintenance operation must be performed at each limit indicated.

Example 1:

25/63/00/000/000/056

Electric hoist 136 kg

76370-110 76370-111 76370-130 76370-130-D 76370-140-D	(704A41815032) (704A41815033) (704A41815035) (-) (704A41815085)	//	48 M 1500 HC	146 D 150 HC

AMM 25-63-10, 4-2

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.

Section 05-10-00

. An electric hoist performs 1000 HC over a period of 48M (TSI). The first limit reached by the electric hoist therefore is 48 M; it must be removed for overhaul (TBO) and returned to service for another period.

. After overhaul, the electric hoist is installed on a helicopter and then performs 1500 HC in 24 M(TSI). The first limit reached by the electric hoist is therefore 1500 HC. It must therefore be removed for another overhaul (TBO).

Example 2:

53/10/00/000/000/020

Tail boom-to-fuselage junction

AMM 53-31-00, 6-1	PO	&	30 FH 600 FH	5 FH 10 FH

Each time after the component is installed.
Check.
TCK

Section 05-26-00

The maintenance operation must be performed once at 30 FH and once at 600 FH after installation. The maintenance operation must be repeated only if the component is removed then reinstalled or replaced.

5.6 Specific and severe atmospheric operating conditions

Certain specific and severe climatic conditions are considered as specific operating conditions. This concerns the use of helicopters in the following conditions:

- Tropical and damp atmosphere:

  . Combination of high ambient temperatures and humidity levels (from +28°C (+82.4°F) and 75% relative humidity).

- Salt-laden atmosphere:

. Ship-based or,

. Based for more than 50% of its time less than 1 km from the coast or,

. Spending more than 50% of its time in offshore flight at low altitude (below 1,000 feet).

- Sand- and/or dust-laden atmosphere:

  . Sand-laden wind and/or landing on sandy ground.

- Hot climatic conditions:

  . High solar radiation temperatures above +40°C (+104°F).

- Cold weather:

  . Temperatures observed or forecast from -10°C to -30°C (+14°F to -22°F).

- Very cold weather:

  . Temperatures observed or forecast from -30°C to -40°C (-22°F to -40°F).

The scheduled maintenance relating to these operating conditions is covered with all the MSM tasks.

These operating conditions require not only the operations specified in the MSM and standard maintenance operations, but also the preventive measures recommended in **AMM task 12-30-00, 3-4**. Since the interval is not specified, the operator must reapply the measures according to his own experience in the corresponding conditions.

5.7 Maximum limit value

The maximum limit value represents the limit not to be exceeded. No tolerance is permitted on the maximum limit value.

The maximum limit value equals to a limit value + margin value.

5.7.1 Definition of the margin

To introduce "flexibility" into maintenance planning in order to compensate for unpredictable situations (e.g. unforeseeable increase in the helicopter utilization rate), Airbus defines a value, called "margin", to be added to a limit value.

This margin, added to the limit value to which it is applicable, results in the maximum limit value (limit value + margin value) to be taken into account for two consecutive inspections.

5.7.2 Application of the margin

The margin can be used repetitively for each limit value interval (refer to figure which follows).

However, to maintain certain "flexibility" in maintenance planning, Airbus recommends to plan the maintenance operation using the limit value without taking the margin into account.

5.7.3 Specification of the margin


The margin value and its units are specified as shown in the following example.

Example:

21/51/00/000/003/030 **Air conditioning system** *AMM 21-51-10, 6-1* 500 FH // 24 M (50 FH 73 D) GVI. Check.	

No units are specified when the margin equals zero.

5.7.4 Example of how the margin is used

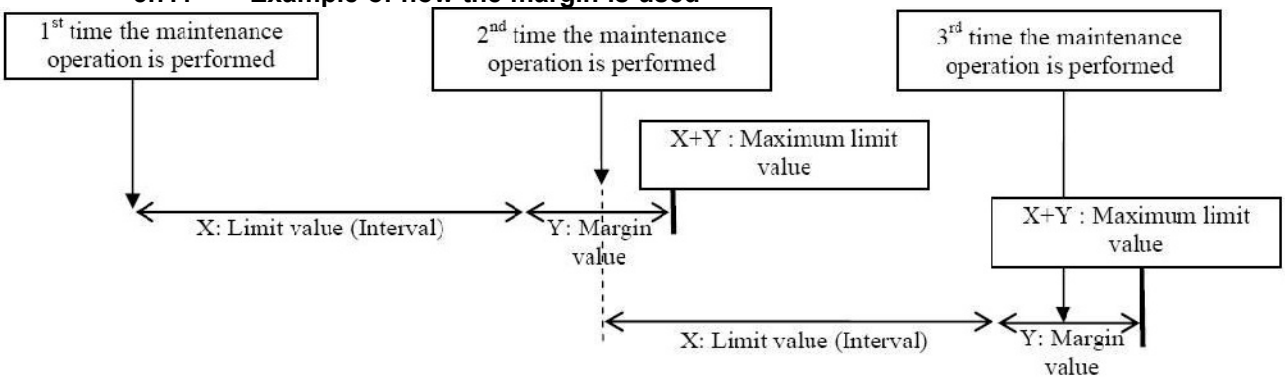

X is the limit value for performing the maintenance operation and Y is the margin value added to the limit value.

After using the first margin value (partially or completely), the next maintenance operation is to be performed again within the X+Y interval, that is to say before the next maximum limit value.

6 AUTHORIZATION TO TRANSFER A COMPONENT (PART OR ASSEMBLY) FROM ONE AIRCRAFT VERSION TO ANOTHER AIRCRAFT VERSION

6.1 Versions on which the transfer of components is applicable

The versions on which the transfer of components is applicable are listed in the table below:

Type of aircraft	Versions
AS 350	B, BA, BB, B1, B2, B3, D, L1
AS 355	E, F, FA, F1, F2, N, NP
AS 550	A2, C2, U2, C3
AS 555	AF, AN, SN, UF, UN, AP
EC 130	B4, T2

6.2 Components NOT subject to In-Service Monitoring (Condition Monitoring)

Transfer of components not subject to in-service monitoring is authorized on all the versions mentioned in the table above further to compliance with MTC Work Card 20.08.05.104.

6.3 Components subject to In-Service Monitoring

6.3.1 Components subject to a Service Life Limit (SLL)

The transfer rules are defined in the ALS.

6.3.2 Components subject to Time Between Overhauls (TBO), Operating Time Limit (OTL), On-Condition maintenance (OC)

6.3.2.1 Transfer Authorization

Transferring a component listed in the MSM, from an aircraft version "x" to an aircraft version "y" is only authorized if the following conditions are simultaneously met:

- the aircraft versions "x" and "y" are listed in the above table, transfer of components from any other aircraft version or type is prohibited,
- the part number of the component to be transferred is listed both in the MSM of version "x" and in the MSM of the version "y",
- no temporary limit of the component to be transferred is assigned in the MSM of version "x" or in the MSM of version "y".
- MTC Work Card 20.08.05.104 is applied during the transfer.

6.3.2.2 Application Rules

The following rules are to be applied if the transfer is authorized:

Components subject to Time Between Overhauls (TBO) and Operating Time Limit (OTL)

If the time intervals (flight hours and/or cycles and/or calendar time) for version “x” and version “y” are identical, keep on logging the flight hours (and/or cycles and/or calendar time) on version "y".

If the flight hours (and/or cycles and/or calendar time) for version “x” and version “y” are different, convert the flight hours (and/or cycles and/or calendar time) already logged (since new or since last overhaul) using the rule applicable for the service life as defined in the ALS chapter.

Then keep on logging the flight hours (and/or cycles and/or calendar time) adding them to the value obtained by applying the calculation rule.



If the flight hours of a TBO assembly have been converted, the operator must make sure that the SLL or the OTL of the components making up this assembly is sufficient to reach the TBO.

If this is not the case, the assembly must be removed when the component reaches its service life limit or operating time limit.

Components subject to On-Condition maintenance (OC)

If the component inspection intervals for version "x" and version "y" are identical, keep on logging the hours and cycles on version "y".

If the inspection intervals (and/or cycles and/or calendar time, etc.) of version "x" and version "y" are different, carry out these operations during the transfer, then observe the interval of application specific to version "y".

7 RECORDING

In all cases record the transfer information and calculation on the equipment log card of the component concerned.

An individual log card must be drawn up if the component has been monitored via the log card of its higher assembly.

8 STORAGE HELICOPTER

8.1 Helicopter in flight conditions - Parking

A helicopter is considered as operational (in flight conditions) when a flight (including at least 1 take off/landing phase) with a 20 minutes minimum duration is performed over the last 14 days.

In such case, helicopter parking shall take place under a sheltered area* or unsheltered area* (*refer to § 8.5).

After more than 14 days without a flight, operators shall comply with the associated helicopter storage procedures:

- Outdoor short term storage for under unsheltered storage,
- Another storage for under sheltered storage.

8.2 Storage duration « T0 » definition

Storage Type Storage beginning "T0"	Immobilization	Short Term Storage	Long Term Sheltered Storage	Cocoon Storage
Condition(s)	When Immobilization period follows a Parking : ➢ "T0" to be considered is the date of the last flight performed (for a minimum duration of 20 minutes) over the past 14 days maximum (time since T0 must not exceed 14 days).	➢ "T0" to be considered is the date of the last ground run performed with storage oil inside the MGB, IGB and TGB ➢ The Storage preparation operations shall be completed within a maximum of 14 days ➢ The same 14 days tolerance is also applicable at the end of the storage period for the reactivation operations.		

NOTE

For engine, please refer to the EMM for specific T0 identification.

8.3 Renewal procedure

The renewal storage operations shall take place within a 14-day maximum tolerance after the end of the previous storage duration.

8.4 Storage inspection tolerance

All storage inspections values defined in this Technical Note are subjected to tolerance that represents ±10% of the storage inspection value.

For example: a storage inspection required every 2 months could be carried out 6 days before or 6 days after the limit value of 2 months.

8.5 Sheltered/Unsheltered Area

Any facilities intended to protect helicopter from precipitation (Rain, snow, hail, sleet) and direct sun/moon lights are considered as a sheltered area. The sheltered areas shall be either closed (Closed hangar compliant with Part 145 or FAA equivalent definition) or shall be a Cocoon when helicopter is stored in an environment with severe climatic conditions as defined below:

- Damp Tropical atmosphere (Combination of high ambient temperature and humidity level),
- Salt-laden atmosphere (helicopter based onboard a ship or within 1 km away from the coast),
- Sand-laden atmosphere or Dust-laden atmosphere (Sand-laden wind or in a sandy areas),
- Cold and Hot.

The unsheltered areas shall be considered when the above requirements are not met.

Please note that this document is not restrictive and the customers remain free to decide to remove the parts they consider useful according to the mission spectrum, environmental and atmospheric conditions where helicopter is operated.

However, in order to preserve helicopter in optimal storage conditions, Airbus recommends different types of storage according to outside climatic conditions.

Please, follow storage procedure in compliance with these recommendations:

Climatic Conditions / Storage Type	Normal	Tropical & Damp atmosphere (1)	Dust and/or Sand laden atmosphere	Salt-laden atmosphere (2)	Cold or Hot (3)
Immobilization Sheltered	+++	+	+++	+++	+++
Short-Term Unsheltered	+	o	+	o	Contact AH
Short-Term Sheltered	+++	+	+++	+++	+++
Long-Term Sheltered	+++	+++	+++	+++	+++
Cocoon	+++	+++	+++	+++	+++
+++ : Preferred Storage method		+ : Acceptable Storage method		o : Storage method to follow in last alternative	

(1) *Combination of high ambient Temperatures (+28°C) and Humidity levels (75%)*
(2) *Storage located at less than 1km from the coast*
(3) *Temperatures below -15°C and above +40°C*

9 MAINTENANCE CODES (MC)

To make it easier to perform the maintenance operations, each maintenance operation included in section 05-20 and 04-20 is identified by one or mode codes as listed below:

- LUBrication/SerViCing **(LUB/SVC)**

  This includes work such as routine lubrication and servicing, filling/topping-up of oils, fluids, liquids and checking of pressures.

- Visual Check **(VC)**

  Visual inspection, without removal of the physical condition of certain components such as oil levels, tire wear, accumulator pressure, etc.

- General VIsual check **(GVI)**

  A general visual check is a visual inspection, without removal, to detect and assess deterioration or incorrect operation of a component or assembly. This check may require access equipment, ladders or platforms, and inspection means, mirror, light or screwdriver. The doors and hatches are opened or removed in order to access the components.

- Detailed Inspection **(DI)**

  A detailed inspection is an inspection to detect and assess deterioration or incorrect operation of a component or assembly. This inspection may require access equipment, ladders, platforms and specific tools, and may require removal of the component or assembly. The doors and hatches are open or removed.

- Special Detailed Inspection **(SDI)**

  A special detailed inspection is an inspection to detect and assess deterioration or incorrect operation of a component or assembly. This inspection may require a specific process such as dye penetrant inspection, radiography, etc.

- Functional Test **(FT)**

  A functional test/check is a test which is performed to determine whether one or more functions of a system operate within stipulated limits. Normally this test is performed without the removal of components and using a maintenance tool.

- CLeaNing **(CLN)**

  To remove dirt and/or foreign bodies from a system or surface. Cleaning may require removal of the component, such as for a filter for example.

- DiScard **(DS)**

  A component is withdrawn from service at a specified limit. Discarding normally applies to parts such as cartridges, containers, cylinders, batteries, etc.

- ReStoration **(RS)**

  This work involves restoring a component to a specific standard. Restoration can vary from cleaning or replacing detail parts to a complete overhaul.

- Readjustment of the TorQque loading (Retorque) **(RTQ)**

  Readjustment is a maintenance procedure which consists in applying the tightening torque to an assembly, without checking its value.

- Torque CheckK **(TCK)**

  The aim of the torque check procedure is to check that the tightening torque of the assembly is not below the specified minimum value.

- WeiGHing **(WGH)**

  The aim is to remove the equipment in order to weigh it using scales, to check its integrity and to make sure that there are no losses.

- New Proof Test **(NPT)**

  The aim is to perform a proof pressure test to check that there are no leaks.

- DRaiNing **(DRN)**

  Draining/replenishing consists in replacing all the fluid, liquid, oil or fuel in a component.

- Ground Run **(GR)**


A ground run consists in checking certain parameters of a component or a function with the rotor spinning or dynamically after operation.

- RiggInG **(RIG)**


  Rigging consists in adjusting a control channel or a set of components which must have an operating range in operation.

10 CONTENT OF A TASK


Section 05-1x-00

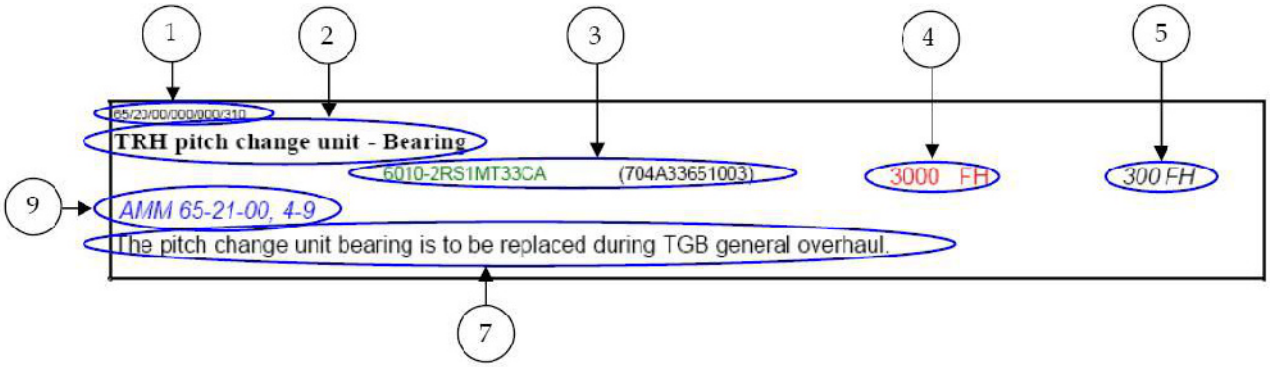

Section 05-2x-0x

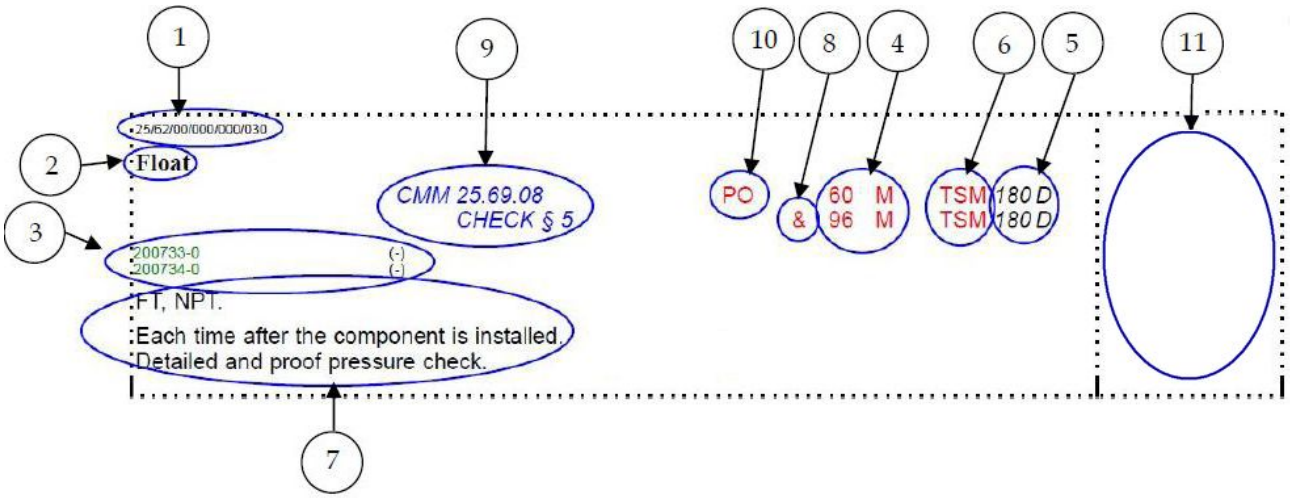

End of section

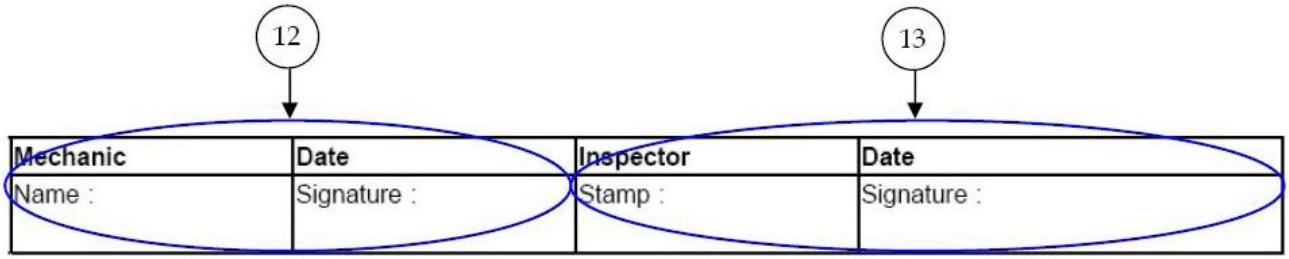

- 1 - Task number (refer to the "STRUCTURE OF THE MSM" DU in § 2.2)
- 2 - Designation
- 3 - Equipment manufacturer's part number and the Airbus management number (refer to § 4)

- 4 - Limit value(s) and unit(s) (refer to § 5.1 / 5.2 / 5.3)
- 5 - Margin value(s) and unit(s) (refer to § 5.7)
- 6 - Start of the limit (TSI, TSM) if necessary (refer to § 5.2.1 / 5.2.2)
- 7 - Comments if necessary
- 8 - //: or - &: and (refer to § 5.5)
- 9 - Reference documentation AMM, CMM, ...
- 10 - Perform Once operation (refer to § 5.4)
- 11 - Initial: Date of application and mechanic signature
- 12 - Mechanic: Date, name and signature
- 13 - Inspector: Date, stamp and signature

End of the Document Unit

OPTIONAL

1 COMPATIBILITY / INCOMPATIBILITY

A helicopter can be equipped with various optional items. There can be incompatibilities between certain optional installations which can appear at two levels:

At operational level:

- In this case, incompatibilities between optional items are specified in the Flight Manual.

At installation on the helicopter:

- Either it is impossible to install the fixed parts at the same time.
- Or there is total or partial installation incompatibility of the removable parts at the same time.

The following table lists all the approved optional installations with their incompatibilities or effects on operation, as specified in a Flight Manual Supplement.

2 TABLE OF APPROVED OPTIONAL INSTALLATIONS

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
1	B3, C3	Dual control - Copilot cyclic stick	–	32, 45
2	B3, C3	Twist grip throttle control on copilot's collective pitch levers	–	32, 45
3	B2	Dual flight B2	–	32, 45
4	B2, B3, C3	Hour meter	–	–
5	B2, B3, C3	Pilot's windshield wiper	–	–
6	B2, B3, C3	Copilot's windshield wiper	9	9

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
7	C3	Windshield cleaner	–	–
8	B2, B3, C3	Cold weather starting	–	–
9	B2, B3, C3	Air conditioning	6, 216	32, 57, 91
10	B2, B3, C3	Engine washing, cowlings closed	–	–
11	B2, B3, C3	Cable cutter	–	–
12	B2, B3, C3	Low landing gear	13, 43, 91, 92	24
13	B2, B3	Short footstep on high type landing gear	12	–
14	B2, B3	Short footstep on low type landing gear	13	15
15	B2, B3, C3	Emergency floatation gear	–	14, 16
16	B2, B3, C3	Ski installation (Surfair)	15	–
17	B2, B3, C3	Long protective shoes for landing skids	–	–
18	B2	FAURE HERMANN fuel flowmeter	–	–
19	B2, B3, C3	Sand filter	–	–
20	B2, B3, C3	Main and tail rotor blades: reinforced protection against erosion	–	–

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
21	B2, B3, C3	Tail rotor blades: reinforced protection against erosion	–	–
22	B2, B3, C3	Ferry flight fuel tank installation	–	32, 39, 44, 45, 46, 90, 92
23	B2, B3, C3	External load carrying installation with dynamometer (Cargo-sling 750 kg)	15, 217	24, 43, 217
24	B2, B3, C3	External load carrying installation with dynamometer 906 : Cargo-swing 1160 and 1400 kg	15, 217	12, 23, 43, 217
25	B2, B3, C3	AIR EQUIPEMENT / GOODRICH electric hoist (136 kg - Cable 40 m)	–	26, 66
26	B2, B3, C3	Electric hoist BREEZE 204 kg (450 lbs)	–	25, 66
27	B2, B3, C3	BREEZE 204 kg electric hoist support	–	–
28	B2, B3, C3	AIR EQUIPEMENT / GOODRICH 136 kg electric hoist support	–	–
29	B2, B3	Roping equipment (without rope)	–	–
30	B2, B3, C3	Electrical rear view mirror	31	92
31	B2, B3, C3	Mechanical rear view mirror	30	92
32	B2, B3, C3	Ambulance role lower stretcher (litter)	–	1, 2, 9, 22, 39, 44, 45, 46, 90, 92

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
33	B2, B3, C3	Left instrument panel entablature reduction	–	–
34	B2, B3, C3	Right sliding door (+ right reduced door see 35)	65	36, 92
35	B2, B3, C3	Forward right reduced door	–	–
36	B2, B3	Right normal door without visibility + window	–	34
37	B2, B3, C3	Sliding window on aft left sliding door	–	–
38	B2, B3, C3	Sliding window on aft right sliding door	–	–
39	B2, B3, C3	Drip pan	–	22, 32, 44, 56, 90, 92
40	B2, B3, C3	Swivelling landing light	–	–
41	B2, B3	Loud speakers	–	43
42	B2, B3	Power takeoff on MGB (32 kW)	–	–
43	B2, B3	SIMPLEX crop spraying installation	–	12, 23, 24, 41, 53, 91, 92
44	B2, B3, C3	Arm-rests + bench reinforcement + 3-point harness	–	22, 32, 39, 90, 92
45	B2, B3	Forward 2-place bench seat	–	1, 2, 22, 32, 90, 94

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
46	B2, B3	Coverings: - Sound-proof, standard - Comfort - Heuliez	218	22, 32, 90, 92, 94
47	B2, B3	"Stylence" cabin furnishing	–	–
48	B2, B3	Tinted transparent panel assy	–	–
49	B2, B3, C3	Tinted and curved transparent panel assy	–	–
50	B2, B3, C3	Curved transparent panel assy	–	–
51	B2, B3, C3	Main rotor blade folding system	–	–
52	B2, B3	Main rotor blade visibility marking	–	–
53	B2, B3, C3	Heavy weather mooring (land or boat)	–	43
54	B2, B3, C3	Marine lashing	–	–
55	B2, B3	Radio rack for left baggage hold	–	–
56	B2, B3	First-aid kit + emergency axe	–	–
57	B2, B3	Hydraulic system ground connector	–	–
58	B2, B3, C3	Strobe light on horizontal stabilizer	–	–

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
59	B2, B3	SFIM 85T31 3-AXIS autopilot	–	–
60	B2, B3	SFIM 85T31 3-AXIS autopilot with failure passivation unit	–	–
61	B3	200-Ampere starter generators	–	62
62	B2, B3, C3	160-Ampere starter generator	–	61
63	B2, B3, C3	AC power system	–	–
64	B2, B3	Modified entablature	–	–
65	B2, B3	Sling sight window	34	–
66	B2, B3, C3	MGB cowling hole blank for 300/450 lbs hoist	–	25, 26
68	B2, B3, C3	Marking	–	–
69	B2, B3, C3	Air / sea / road loading equipment	–	–
70	B3, C3	Thermal protection	–	–
73	B3	Twin hydraulic	–	–
90	C3	7,62 mm machine gun, door-mounted in cabin, left side	–	25, 43, 44

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
91	C3	Rocket launcher + CROUZET head-up display type 100	–	13, 41
92	C3	M621 20 mm axial cannon, right side + CROUZET head-up display type 100	–	13, 24, 25, 29, 41, 43
93	C3	TOW missiles and roof-mounted sight (FLIR)	–	–
94	C3	Pilot's/copilot's seat armor plating	–	44
95	B3, C3	Stiffened self-sealing dual pump fuel tank	–	–
96	B3, C3	FLIR support provision under bottom structure	–	–
97	C3	Lateral external loads 210 kg	–	–
98	C3	Armament-handling hoist 450 lbs	–	32
200	B2, B3, C3	Vertical Gyro GV 76-2	–	203
201	B2, B3	ADF (radiocompass) KR87 with RMI KI229	–	–
202	B2, B3	ICS with BOSE headset	–	–
203	B2, B3, C3	Directional gyro KCS55A	–	200
204	B2, B3, C3	Marker Antenna	–	–

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
205	B2, B3, C3	DME	–	–
206	B2, B3, C3	HF/SSB	–	–
207	B2, B3, C3	Radio altimeter	–	–
208	B2, B3, C3	GTX Transponder	–	–
209	B2, B3, C3	GPS GNS430 GARMIN (navigation)	–	–
210	B2, B3	Headgear DAVID CLARK H10-13H (HN/HZ)	–	–
211	B2, B3	Headgear BOSE aviation X (HN/HZ)	–	–
212	B2, B3, C3	Horizon H140 BHM2 without autopilot output	–	–
213	B2, B3, C3	H321 stand-by horizon	–	–
214	B2, B3, C3	Horizon H140 JAM1 with autopilot output	–	–
215	B3	Tail rotor drive shaft aerodynamic cowling	–	–
216	B3	Static plug in tailboom	9	–

N°	EFFECTIVITY	TYPE OF INSTALLATION	Fixed parts	Removable parts
			INCOMPATIBLE TO INSTALL AT THE SAME TIME	TOTAL OR PARTIAL INSTALLATION INCOMPATIBILITY AT THE SAME TIME
217	B3	External load carrying installation (Cargo-swing Onboard 1400kg)	23, 24	See STC (Supplemental type-certificate) documentation
218	B3	Rear windows on canopy	46	–

End of the Document Unit

SB INCORPORATED

Airbus is required to issue Service Bulletins (SB) subsequent to new events (incidents, etc).

The information contained in the SBs is incorporated in the MSM if, and only if:

The SB contains new periodic checks, or modifies the existing MSM limitations.

The table below specifies for each SB incorporated:

- the number of the SB and its revision number,
- the subject of the SB,
- the ATA chapter/section concerned,
- the date on which the SB is incorporated in the MSM.

SB N°	Subject	ATA	AD number	Incorporation date
05.00.35	Check of the attachment areas of the heat shield of the tail rotor drive shaft forward fairing	53-50		02.05
05.00.37	Checking tail servocontrol eye end fitting for correct locking	67-30		2002.05.14
05.00.40	Tail rotor blade skin check	64-10		2002.07.16
67.00.22	Dual locking of tail rotor servocontrol	67-30		2002.07.23
55.00.09	Check of fin attachment frame	53-10		2002.12.10
65.00.43	Tail rotor pitch change plate – Four-contact bearing	65-20		2003.05.13
63.00.13	Modified tightening torque of the MGB input bevel gear nut	63-20		2003.09.16
05.00.43	Check of the rear frame	53-10		2004.02.04
29.00.04R1	Lubrication of the splines on the hydraulic pump drive shaft	29-10		2004.01.27
05.00.33	Check for absence of rotation of the bearing spacer of the tail rotor rotating plate	65-20		2004.03.15
05.00.45R1	Replacement of hydraulic fluid in cold weather	29-00		2004.10.22
05.00.41R2	Check of the sliding door aft guide roller and middle rail	52-90		2006.09.01
05.00.46	Check of the upper and lower vertical fin spars	55-20		2004.11.22

SB N°	Subject	ATA	AD number	Incorporation date
05.22	Calendar time limit for the dynamic components	60-00		1992.04.07
05.00.31R1	Check of upper and lower fin attachment screws and spar fittings	55-20		2000.05.25
29.00.07	Improvement of the "hydraulic cut off" function	29-10		2004.03.23
05.00.52	Life raft kit check	25-69		2007.08.31
29.00.10	Hydraulic power – Replacement of the hydraulic hoses	29-10		2008.05.28
55.00.16R1	Improvement of the attachment strength for upper and lower fin skids	55-20		2008.12.22
05.00.56R1	Emergency floatation gear cover	25-62		2009.07.20
05.00.50R1	Collective pitch and yaw pitch anticipator potentiometers	76-00		2011.05.26
05.00.57R1	Check of the yaw load compensator accumulator charging pressure	29-10		2011.05.26
29.00.10R2	Replacement of the Hydraulic Hoses	29-10		2011.05.26
67.00.37R2	New collective lever hooking lock	67-10		2011.05.26
53.00.34	Containment box structure installation for RH cabin vibration damper	53-00		2011.05.26
05.00.32	Corrosion check and corrosion prevention at the 62-30 lower bearing and the splines of the main rotor shaft	62-30		2012.09.06
05.00.54	Oxygen cylinders	35-30		2012.09.06
05.00.68	SKURKA (ex APC) starter-generators (MP/N) 150SG122Q and 200SGL130Q	80-00		2012.12.06
05.00.53	Check of the upper and lower fin spar attachment frame and screws assembly	55-20		2014.05.29
05.00.67R1	Inspection of the longitudinal bulkheads	53-10		2014.05.29
05.00.76	Check of the condition of the drain control cable	28-00		2014.05.29
05.00.78	Check of the front lower part of the bottom structure (X970 - Y400)	53-10		2014.05.29
05.00.59R1	Visual check for cracks in the lower crossbeams of the yaw control bellcrank support	67-20		2015.06.11
05.00.79R1	Periodic check of the hydraulic pump drive bearing on helicopters with dual hydraulics	63-10		2015.06.11

SB N°	Subject	ATA	AD number	Incorporation date
05.00.82	Complementary Engine Back-up Control Ancillary Unit (EBCAU) tests	77-00		2015.06.11
63.00.24	New hydraulic pump drive bearing	63-10		2015.06.11
05.00.75	Periodic adjustment and check of the tensioning of the SKURKA (ex APC) starter-generator damper system	80-00		2015.12.10
01.00.70 R1	Tail rotor drive - Tail rotor drive shaft bearings	65-10		2017.12.04
63.00.24	Engine-to-MGB coupling - New hydraulic pump drive bearing	63-10		2017.12.04
05.00.36R1	Check for Absence of Play in the Pilot and Copilot Windshield Wiper Arm Attachment	30-42		2018.04.16
05.00.16	Monitoring Fuselage to Tail Boom junction	53-10		2019.01.19
05.00.93	Hydraulic pump - Greasing of the splines of the secondary hydraulic pump	29-00		2019.01.19
05.00.95	Check of starter generators MP/N 524-031 and 515-030	80-00		2019.09.09
05.00.63 R1	Emergency floatation gear - Check of the front and rear attachment brackets	25-62		2020.04.14
05.00.42	Check and Repair of the Buckets of Pilot and Copilot Seats	25-10		2020.04.14
05.00.83 R2	Periodic check for corrosion on the pipes of the P2 air heating/demisting system	21-21		2020.04.14
05.00.94	Introduction of an Operating Time Limit (OTL) for the laminated half-bearings of the tail rotor blades	64-10		2020.10.12
05.00.86R3	Pitch change rod Periodic check of the Tail Rotor Hub (TRH) pitch change rod	65-20		2021.04.05
62.00.43R1	Check of the main rotor mast shaft	62-30		2021.04.05
05.00.92	Fuselage - Check for the presence of the Main Gear Box (MGB) suspension bar attachment bracket screw head	53-10		2022.05.23
05.00.98	Electrical harnesses - Inspection of the electrical harnesses in the engine compartment	24-00		2022.05.23
05.01.02	Inspection of the Main Rotor Mast (MRM) upper housing	62-31		2022.05.23
73.00.02	Adding an attachment point to the fuel supply pipe of the main manifold	73-00		2022.12.05

End of the Document Unit

05-10-00

D.U.	TITLE
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 35	OXYGEN
ATA 63	ROTOR DRIVE (S)
ATA 65	TAIL ROTOR DRIVE
ATA 67	ROTOR FLIGHT CONTROLS
ATA 80	ENGINE STARTING

Task Number Description/Remarks	MP/N (PN)	Type of limit: TBO	Margin

25 - EQUIPMENTS AND FURNISHINGS

25-63 HOISTS ELECTRICAL

25/63/00/000/000/056

Electric hoist 136 kg

76370-110	(704A41815032)	48 M	TSI	*146 D*
76370-111	(704A41815033)	// 72 M	TSM	*180 D*
76370-130	(704A41815035)	// 1500 HC		*150 HC*
76370-130-D	(-)			
76370-140-D	(704A41815085)			

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM or overhaul.

25/63/00/000/000/058

Electric hoist 450 lbs

BL2970023	(704A41815056)	60 M		*180 D*
		// 2000 HC		*200 HC*

BREEZE.

25/63/00/402/000/000

Electric hoist 136 kg

BL16600-12	(-)	36 M		*109 D*
		// 2000 HC	TSM	*200 HC*

ERC BREEZE.
TSM or Overhaul.

25/63/00/402/000/005

Electric hoist 136 kg

BL16600-180-2	(-)	60 M		*180 D*
BL16600-90	(704A41815019)	// 2000 HC	TSM	*200 HC*

ERC BREEZE.
TSM or Overhaul.

25-80 OPT - SLING AND ACCESSORY

25/80/00/000/000/005

Load release unit hook

17149-1	(704A41811012)	36 M		*90 D*
		// 5000 SC		*300 SC*

Storage limit (original package): 60 M.

Task Number Description/Remarks	MP/N (PN)	Type of limit: TBO	Margin

25-81 OPT - SWING AND ACCESSORY

25/81/10/000/000/025

Load release unit hook

S1609-6	(704A41811027)	60 M	TSI	*180 D*
	//	120 M	TSM	*180 D*
	//	1500 SC		*150 SC*

Storage limit (original package): 60 M.

25/81/11/000/000/000

Load release unit hook

AS21-5-7	(704A41811029)	60 M	TSI	*180 D*
	//	120 M	TSM	*180 D*
	//	1500 SC		*150 SC*

Storage limit (original package): 60 M.

25/81/12/000/000/000

1400 kg cargo swing - Onboard load release unit

52802351	(704A41811035)	60 M	TSI	*180 D*
	//	120 M	TSM	*180 D*
	//	1000 OPH		*100 OPH*

OPH = Operating hours logged with underslung loads.
Apply a factor of 2 to the operating hours (OPH) logged in the following conditions:
- Sand-laden and/or dust-laden atmosphere,
- Logging operation,
- Load above 1200 kg (2646 lbs).

Storage limit (original package): 60 M.

35 - OXYGEN

35-30 OXYGEN

35/30/00/000/000/000

Oxygen cylinder

GLF311-1	(-)	60 M	TSM	*180 D*

Potential of the regulator and proof test of the oxygen cylinder.

35/30/00/000/000/030

Oxygen mask

MRAM-019	(704A42210007)	72 M	TSM	*180 D*

Task Number Description/Remarks	MP/N (PN)		Type of limit: TBO	Margin

63 - ROTOR DRIVE (S)

63-20 MAIN GEARBOX

63/20/00/000/000/250

Bevel reduction gear

350A32-0310-00	(-)		2000 FH	*200 FH*
350A32-0310-01	(-)	//	288 M	*180 D*

63/20/00/000/000/253

Bevel reduction gear

350A32-0310-02	(-)		3000 FH	*300 FH*
		//	288 M	*180 D*

63/20/00/000/000/254

Bevel reduction gear

350A32-0350-02	(-)		3000 FH	*300 FH*
		//	288 M	*180 D*

POST OP 3082 or POST OP 3346: Twin hydraulic system.

63/20/00/000/000/257

Bevel reduction gear

350A32-0350-00	(-)		2000 FH	*200 FH*
		//	288 M	*180 D*

POST OP 3082 or POST OP 3346: Twin hydraulic system.

63/20/00/000/000/320

Epicyclic reduction gear

350A32-0120-00	(-)		3000 FH	*300 FH*
350A32-0120-01	(-)	//	288 M	*180 D*

63/20/00/000/000/435

Oil pump

350A32-0400-00	(-)		3000 FH	*300 FH*
		//	288 M	*180 D*

PRE MOD 077175

63/20/00/000/000/445

Oil pump

350A32-0400-00	(-)		3500 FH	*300 FH*
		//	288 M	*180 D*

POST MOD 077175

63/20/00/000/000/530

Free wheel assembly

350A35-0450-00	(-)		3500 FH	*0*
		//	15 Y	*0*

TURBOMECA part number: 0.292.90.002.0
ARRIEL 2B/2B1 free wheel.
Replacement of splined sleeve MP/N 350A35-1210-20 each TBO.

Task Number Description/Remarks	MP/N (PN)	Type of limit: TBO	Margin

63/20/00/000/000/550

Free wheel unit

0.292.90.020.0	(704A43622004)	5000 FH	*0*

Free wheel ARRIEL 2D.

65 - TAIL ROTOR DRIVE

65-20 TAIL GEARBOX

65/20/00/000/000/125

TGB

350A33-0200-06	(-)	3000 FH		*300 FH*
	//	288 M		*180 D*

Must not be installed on helicopters with optional all-up weight extension installation: OP 3369.

65/20/00/000/000/330

TGB

350A33-0200-07	(-)	3000 FH		*300 FH*
350A33-0210-00	(-)	288 M		*180 D*

67 - ROTOR FLIGHT CONTROLS

67-30 SERVOCONTROL

67/30/00/402/000/000

Main servocontrol

SC5081	(704A44831123)	3000 FH		*300 FH*
SC5081-1	(704A44831137)	// 240 M	TSM	*180 D*
SC5081-2	(704A44831159)			
SC5082	(704A44831124)			
SC5082-1	(704A44831136)			
SC5082-2	(704A44831160)			
SC5083	(704A44831141)			
SC5083-1	(704A44831161)			
SC5084	(704A44831140)			
SC5084-1	(704A44831162)			

TSM or Overhaul.

67/30/00/402/000/025

Main servocontrol

SA7450-100	(704A44831170)	3000 FH		*300 FH*
SA7650-100	(704A44831171)	// 240 M	TSM	*180 D*
SC8042	(704A44831102)			
SC8043	(704A44831103)			

TSM or Overhaul.
POST OP 3082 or POST OP 3346: Installation of a twin hydraulic power system.

Task Number Description/Remarks	MP/N (PN)		Type of limit: TBO			Margin
67/30/00/402/000/040 **Main servocontrol**						
	AC64182 AC66442 AC67030 AC67034 AC67244 AC67246	(704A44831062) (704A44831065) (704A44831093) (704A44831095) (704A44831112) (704A44831113)	//	1800 FH 240 M	TSM	*180 FH* *180 D*
TSM or Overhaul.						
67/30/00/403/000/000 **Tail servocontrol**						
	SC5071 SC5071-1 SC5072	(704A44831125) (704A44831138) (704A44831142)	//	3000 FH 240 M	TSM	*300 FH* *180 D*
TSM or Overhaul.						
67/30/00/403/000/031 **Tail servocontrol**						
	AC66436 AC67032MOD2 AC67032MOD6	(704A44831063) (704A44831094) (704A44831115)	//	1800 FH 240 M	TSM	*180 FH* *180 D*
TSM or Overhaul.						
67/30/00/403/000/033 **Tail servocontrol**						
	AC67032	(704A44831094)	//	1800 FH 240 M	TSM	*180 FH* *180 D*
TSM or Overhaul. Effective for any modification to the servocontrol.						

80 - ENGINE STARTING

80-00 STARTING

80/00/00/402/000/050 **Starter generator**						
	150SG122Q	(704A46101020)	//	900 FH 60 M	TSM	*100 FH* *0*
TSM or Overhaul.						
80/00/00/402/000/070 **Starter generator**						
	200SGL130Q	(704A46101023)	//	900 FH 60 M	TSM	*100 FH* *0*
TSM or Overhaul.						

Task Number Description/Remarks	MP/N (PN)		Type of limit: TBO			Margin
80/00/00/402/000/105 **Starter generator** TSM or Overhaul.	150SG122Q-4 200SGL130Q-4	(704A46101027) (704A46101026)	//	1200 FH 60 M	TSM	*120 FH* *0*
80/00/02/000/000/020 **Starter generator** TSM or Overhaul. THALES.	515-030 524-031	(704A46101018) (704A46101011)	//	1200 FH 60 M	TSM	*20 FH* *0*

End of the Document Unit

05-11-00

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 26	FIRE PROTECTION
ATA 28	FUEL SYSTEM
ATA 31	IND./RECORDING SYSTEMS
ATA 33	LIGHTING SYSTEM
ATA 35	OXYGEN
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 64	TAIL ROTOR
ATA 65	TAIL ROTOR DRIVE

Task Number Description/Remarks	MP/N (PN)	Type of limit: OTL	Margin

21 - AIR CONDITIONING

21-51 AIR CONDITIONING

21/51/20/000/000/015

Freon air conditioning system - Poly "V" belt

5PK668	(-)	72 M	180 D

21/51/20/000/000/020

Freon air conditioning system - Belt

451400003	(-)	1200 FH	120 FH
		// 72 M	180 D

25 - EQUIPMENTS AND FURNISHINGS

25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/10/401/000/060

Cylinder

200740-2	(704A42693012)	180 M	TSM	0

Return the equipment to an approved repairer for Overhaul and replacement of the bare cylinder.

25/62/10/401/000/090

LH float

200733-0	(-)	120 M	TSM	0
218569-0	(-)			

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/120

RH float

200734-0	(-)	120 M	TSM	0
218570-0	(-)			

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/130

RH outer cover

200736-0	(-)	120 M	180 D
218572-0	(-)		

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

25/62/10/401/000/140

LH outer cover

200735-0	(-)	120 M	180 D
218571-0	(-)		

If you wish to apply for an extension, return the assembly in question to the manufacturer for it to be examined.

Task Number Description/Remarks	MP/N (PN)		Type of limit: OTL		Margin

25-63 HOISTS ELECTRICAL

25/63/00/000/000/026

Electric hoist 136 kg - Cable

709628	(-)		24 M	TSI	0
709628-100	(-)	//	84 M	TSM	0
710656	(-)	//	500 HC		0
710656-100	(-)				
BL7505	(-)				

Tropical and damp atmosphere
Salt-laden atmosphere
Sand-laden and/or dust-laden atmosphere

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM in original package.

25/63/00/000/000/029

Electric hoist 136 kg - Cable

709628	(-)		48 M	TSI	0
709628-100	(-)	//	108 M	TSM	0
710656	(-)	//	500 HC		0
710656-100	(-)				
BL7505	(-)				

LUCAS AIR EQUIPEMENT/TRW/GOODRICH.
TSM in original package.

25/63/00/000/000/035

Electric hoist 450 lbs - Cable

BL12606-1	(-)		500 HC		0

BREEZE.

25/63/00/000/000/040

Electric hoist 136 kg - Pyrotechnic cartridge

20CF4D	(N6714400100)		36 M	TSI	0
BL7811	(-)	//	60 M	TSM	0
Y-1265-12-1	(-)				

EQUIPEMENT/TRW/GOODRICH for MP/N 20CF4D.
ERC BREEZE for MP/N BL7811 & MP/N Y-1265-12-1.
TSM in original package.

25/63/00/402/000/025

Electric hoist 450 lbs - Pyrotechnic cartridge

Y126581	(704A38710039)		36 M	TSI	0
		//	108 M	TSM	0

BREEZE.
TSM in original package.

Task Number Description/Remarks	MP/N (PN)	Type of limit: OTL	Margin

25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

25/66/00/000/000/005

Battery pack

JE2-1978-3 JE2-1978-3NG	(N6742450122) (NR003100026)		ED	0

JOLLIET JE2/JE2NG.
NOTE: Replacement of dry-cell unit for all transmissions exceeding 1 hour.

25/66/00/000/000/025

Battery pack

56995-0101	(-)		ED		0
		//	1 OPH		0

ELT 910 NARCO.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/00/000/000/060

Battery

810-418A	(-)		24 M	TSM	0

N15F210B DUKANE.

25/66/00/000/000/070

Battery pack

ELT90A2560102001	(-)		48 M	TSM	0
		//	1 OPH		0

ELT 96-406 SOCATA. MP/N ELT96A2560000000.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/20/000/000/000

Battery pack

S1840510-01	(-)		ED		0
		//	1 OPH		0

KANNAD INTEGRA AP-H (ER).
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

25/66/34/000/000/000

Battery pack

S1820516-99	(-)		ED		0
		//	1 OPH		0

KANNAD 406 AF.
KANNAD 121AF-H.
KANNAD 406AF-H.
1 OPH = 1 hour of operation except for testing or operation for an unknown duration.

Task Number Description/Remarks	MP/N (PN)	Type of limit: OTL	Margin

26 - FIRE PROTECTION

26-22 OPT - EXTINGUISHER, FIRE, CABIN

26/22/00/000/000/000

Cabin fire extinguisher

12085-01	(S262A10T1001)	120 M	TSM	0
H1	(704A32810007)			
H1-0150101S	(704A32810009)			
H1-10	(704A32810003)			
H1-10AIR	(704A32810008)			
H1-CODE0150101A	(704A32810009)			
P2H	(704A32810006)			

26/22/00/000/000/010

Cabin fire extinguisher

P3APP003010D	(U262A50T1003)	144 M	TSM	0

26/22/01/000/000/000

Cabin fire extinguisher

PLA863520-00	(T262M50T0002)	60 M	TSM	0

28 - FUEL SYSTEM

28-41 INDICATING

28/41/00/000/000/010

Digital flowmeter - Battery

LS210PS30	(-)	24 M	TSI	0
PS30	(-) //	36 M	TSM	0
PS30LS210	(-)			

PRE AMENDMENT D

FAURE/HERMANN.
OTL applicable for fuel flowmeter M/PN 744-082, M/PN 744-082-3, M/PN 744-098-1.
Fuel flowmeter to be returned to the manufacturer for replacement of the battery.

31 - IND./RECORDING SYSTEMS

31-32 OPT - INDICATING AND RECORDING SYSTEMS

31/32/00/000/000/000

Lithium battery - FDRS

BR1225	(-)	84 M		0

Replacement of lithium battery of FDRS

Task Number Description/Remarks	MP/N (PN)		Type of limit: OTL		*Margin*
33 - LIGHTING SYSTEM					
33-45 OPT - SEARCHLIGHT					
33/45/03/000/000/000 **Searchlight - Aluminum gimbal arm**	019058-21 019059 021715 021716	(-) (-) (-) (-)	84 M		*180 D*
SPECTROLAB SX16.					
33/45/03/000/000/010 **Searchlight - Steel gimbal arm**	022929 022929-11 022929-81	(-) (-) (-)	120 M		*180 D*
SPECTROLAB SX16.					
35 - OXYGEN					
35-30 OXYGEN					
35/30/01/000/000/000 **Oxygen cylinder shell**	GLF311-1	(-)	300 M	TSM	*0*
35/30/01/000/000/010 **Oxygen cylinder shell**	GLF311-1	(-)	180 M	TSM	*0*
Salt-laden atmosphere					
62 - ROTOR (S)					
62-30 MAIN ROTOR MAST					
62/30/00/000/000/230 **Swashplate - 4 contacts bearing**	121620	(704A33651157)	4800 FH		*300 FH*
62/30/00/000/000/240 **Swashplate - 4 contacts bearing**	Y51BB10843S2M74	(704A33651158)	6300 FH		*300 FH*

Task Number Description/Remarks	MP/N (PN)		Type of limit: OTL	Margin

63 - ROTOR DRIVE (S)

63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/150

Hydraulic pump - Belt

FILONTYPEFO	(704A33690004)		1200 FH	*120 FH*
ULTRALUGTYPEL1	(704A33690003)			

63/10/00/000/000/160

Hydraulic pump - Poly "V" belt

POLY-V 597K4	(-)		1800 FH	*180 FH*
		//	72 M	*180 D*

63/10/00/000/000/180

Hydraulic pump - Drive bearing

593733	(704A33651206)		3600 FH	*300 FH*
594976	(704A33651269)	//	72 M	*180 D*
AB13547S1	(704A33651208)			
F-594448	(704A33651243)			
TTS6225	(704A33651207)			

63-20 MAIN GEARBOX

63/20/00/000/000/045

Oil filter - Filter element

CH48108	(-)		750 FH	*75 FH*
FA01315A	(7050A3632296)	//	24 M	*73 D*

63/20/00/000/000/540

Free wheel

350A35-1208-20	(-)		3500 FH	*0*

TURBOMECA part number: 9.292.90.001.0
ARRIEL 2B/2B1 free wheel.

63/20/00/000/000/560

Free wheel

9.560.90.123.0	(-)		5000 FH	*0*

Free wheel ARRIEL 2D.
Fitted to the assembly free wheel: MP/N 0.292.90.020.0.

63/20/00/000/000/570

Front ball bearing of free wheel

9.606.65.100.1	(-)		5000 FH	*0*

Free wheel ARRIEL 2D.
Fitted to the assembly free wheel: MP/N 0.292.90.020.0.

Task Number Description/Remarks	MP/N (PN)	Type of limit: OTL	Margin
63/20/00/000/000/580 **Rear ball bearing of free wheel**			
	9.606.68.100.1 (-)	5000 FH	*0*
Free wheel ARRIEL 2D. Fitted to the assembly free wheel: MP/N 0.292.90.020.0.			
63/20/00/000/000/590 **Rear ball bearing of the assembly free wheel**			
	9.606.49.060.6 (-)	5000 FH	*0*
Free wheel ARRIEL 2D. Fitted to the assembly free wheel: MP/N 0.292.90.020.0.			
63/20/00/000/000/610 **Free wheel - Bearing**			
	ALL MP/N (-)	7000 FH	*0*
ARRIEL 2B/2B1 free wheel.			

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

64/10/00/000/000/023 **Tail rotor blade - Laminated pitch half-bearing**					
	579063 579153	(704A33633116) (704A33633261)	120 M	TSM	*0*
Must not be mixed on a tail rotor blade assembly.					
64/10/00/000/000/026 **Tail rotor blade - Laminated pitch half-bearing**					
	579266	(704A33633303)	1200 FH		*120 FH*
		//	120 M	TSM	*0*
Must not be mixed on a tail rotor blade assembly.					

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/100 **Tail rotor drive shaft - Greasable bearing**					
	593404	(704A33651181)	3600 FH		*300 FH*
		//	60 M		*180 D*

Task Number Description/Remarks	MP/N (PN)	Type of limit: OTL	*Margin*

65-20 TAIL GEARBOX

65/20/00/000/000/305 **TRH pitch change unit - Greasable bearing**	704A33-651-210	(-)	3000 FH	*300 FH*
65/20/00/000/000/315 **TRH pitch change unit - Bearing**	6010-2RS1MT33CA	(704A33651003)	3000 FH	*300 FH*
The pitch change unit bearing is to be replaced during TGB Overhaul.				

End of the Document Unit

05-12-00

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 24	ELECTRICAL POWER
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 28	FUEL SYSTEM
ATA 34	NAVIGATION
ATA 47	WEAPONS ELECTRONICS
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 64	TAIL ROTOR
ATA 65	TAIL ROTOR DRIVE

Task Number Description/Remarks	MP/N (PN)	Type of limit: OC	*Margin*

21 - AIR CONDITIONING

21-51 AIR CONDITIONING

21/51/20/000/000/050

Freon air conditioning system - Compressor

350A500-5	(-)
5-AS350-34	(-)

24 - ELECTRICAL POWER

24-31 BATTERY

24/31/00/000/000/005

Battery

150CH-1	(7050A4243027)

24/31/00/000/000/008

Battery

151CH-1	(7050A4243040)

25 - EQUIPMENTS AND FURNISHINGS

25-00 EQUIPMENT AND FURNISHING

25/00/00/000/000/000

Belt and harness - Strap

ALL MP/N	(-)

Pilot, copilot, passenger and operator seat belt and harness straps.

28 - FUEL SYSTEM

28-20 FUEL DISTRIBUTION

28/20/00/000/000/043

Fuel pump

P94B12-209	(704A44510042)
P94B12-213	(704A44510055)
P99C16-623	(704A44510057)

Task Number Description/Remarks	MP/N (PN)	Type of limit: OC	*Margin*

28-41 INDICATING

28/41/00/000/000/011

Digital flowmeter - Battery

SL846-XOL (-)

POST AMENDMENT D

FAURE/HERMANN.
Maintenance applicable for fuel flowmeter M/PN 744-082, M/PN 744-082-3, M/PN 744-098-1.

34 - NAVIGATION

34-25 GYRO HORIZON

34/25/00/000/000/020

Stand-by battery

EE0033 (704A46140000)
EE0033A (704A46140000)

47 - WEAPONS ELECTRONICS

47-50 FLIR INSTALLATION

47/50/10/000/000/010

Flir

3205562 (-)

Star SAFIRE II.
Replacement of the turret desiccant cartridge.

62 - ROTOR (S)

62-20 MAIN ROTOR HEAD

62/20/00/000/000/065

MRH assy

ALL MP/N (-)

62/20/00/403/000/006

Vibration damper, spring type

350A31-0033-06 (-)

If the vibration level deteriorates, check the anti-vibrator as per task 62-21-00, 6-11 (AMM).

Task Number Description/Remarks	MP/N (PN)	Type of limit: OC	*Margin*

62-30 MAIN ROTOR MAST

62/30/00/000/000/015

Main rotor mast

350A37-0004-02 (-)

62/30/00/000/000/020

Main rotor mast

355A37-0006-00 (-)
355A37-0006-01 (-)

OP 3082: Twin hydraulic system.

63 - ROTOR DRIVE (S)

63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/035

Engine-to-MGB coupling

ALL MP/N (-)

63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/070

MGB suspension cross bar

ALL MP/N (-)

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

64/10/00/000/000/005

Tail rotor assy

ALL MP/N (-)

64/10/00/000/000/020

Tail rotor blade - Laminated pitch half-bearing

704A33-633-091 (-)

Must not be mixed on a tail rotor blade assembly.
Record replacement of laminated half-bearing on the FM of the blade assembly.

Task Number Description/Remarks	MP/N (PN)	Type of limit: OC	*Margin*

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/050

Tail rotor drive shaft assembly

ALL MP/N	(-)

65-20 TAIL GEARBOX

65/20/00/000/000/300

TRH pitch change unit

350A33-2004-05	(-)
350A33-2004-06	(-)
350A33-2030-00	(-)
350A33-2167-00	(-)
350A33-2167-01	(-)

65/20/00/000/000/420

TRH laminated hinge

563-073	(704A33633078)

Must not be mixed on the same hub.
Record replacement of laminated hinge on the TGB log card.

65/20/00/000/000/425

TRH laminated hinge

579-091	(704A33633171)

Must not be mixed on the same hub.
Record replacement of laminated hinge on the TGB log card.
Delivered in pairs: MP/N 350A33-2153-00.

65/20/00/401/000/265

TRH

350A33-2119-05	(-)

End of the Document Unit

05-20-00

ALF

D.U.	TITLE
ATA 05	TIME LIMITS/MAINTENANCE CHECKS
ATA 71	POWER PLANT

Task Number Description/ Remarks	Documentation	*Margin*	Initial

05 - TIME LIMITS/MAINTENANCE CHECKS

05-21 DAILY CHECK

05/21/00/605/000/000 **Daily check in cold weather** GVI|FT|GR	*AMM 05-40-00, 6-3*	*0*	

71 - POWER PLANT

71-00 POWER PLANT

71/00/00/000/000/010 **Power plant air intake (ALF)** PRE MOD 073453 Visual check of the attachments. VC	*AMM 05-40-00, 6-6*	*0*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-20-01

10 FH

D.U.	TITLE
ATA 62	ROTOR (S)
ATA 64	TAIL ROTOR

Task Number Description/ Remarks	Documentation	*Margin*	Initial

62 - ROTOR (S)

62-10 MAIN ROTOR BLADE

62/10/20/601/000/020 **Main rotor blade** *AMM 62-11-00, 6-3* *1 FH* Sand-laden and/or dust-laden atmosphere Check for erosion. In the event of intensive operation in heavily sand-laden areas, all the necessary measures should be taken to ensure optimum operation of the aircraft, if necessary, by shortening the suggested intervals. GVI	

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

64/10/00/000/000/220 **Tail rotor blade** *AMM 64-10-00, 6-1* *1 FH* Sand-laden and/or dust-laden atmosphere Check for erosion. In the event of intensive operation in heavily sand-laden areas, all the necessary measures should be taken to ensure optimum operation of the aircraft, if necessary, by shortening the suggested intervals. GVI	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-20-02

10 FH // 7 D

D.U.	TITLE
ATA 05	TIME LIMITS/MAINTENANCE CHECKS
ATA 53	FUSELAGE

Task Number Description/ Remarks	Documentation	*Margin*	Initial

05 - TIME LIMITS/MAINTENANCE CHECKS

05-21 DAILY CHECK

05/21/00/000/000/000 **P-Check** *AMM 05-40-00, 6-7* Note: Operations can be carried out by a crew member. GVI	*0* *0*	

53 - FUSELAGE

53-00 FUSELAGE

53/00/00/000/000/070 **Structure** *AMM 12-20-00, 3-3* Salt-laden atmosphere Rinsing and Drying. CLN	*0* *0*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-21-00

150 FH // 12 M

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 52	DOORS
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 65	TAIL ROTOR DRIVE
ATA 77	ENGINE INDICATING

Task Number Description/ Remarks	Documentation	*Margin*	Initial

21 - AIR CONDITIONING

21-21 VENTILATION/DEMISTING

21/21/00/000/000/000 **Heating pipe** PRE MOD 074765 // PRE MOD 074866 P2 installation. Check of the condition of the heat insulation and to make sure that there is no corrosion on the visible parts. If necessary, replace the pipes in accordance with task 21-21-00, 4-2 (AMM). DI	*AMM 21-21-00, 6-1*	*15 FH* *36 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-10 COCKPIT

25/10/11/000/000/050 **Pilot and copilot seats** FISCHER H110. Visual check. GVI	*AMM 25-21-00, 6-4*	*15 FH* *36 D*	
25/10/12/000/000/050 **Pilot and copilot seats** FISCHER H140. Visual check. GVI	*AMM 25-21-00, 6-9*	*15 FH* *36 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

52 - DOORS

52-30 CARGO DOOR

52/30/00/000/000/030 **Lateral cargo door** Functional test - Indicating system. FT	*AMM 52-31-00, 5-2*	*15 FH* *36 D*	

62 - ROTOR (S)

62-20 MAIN ROTOR HEAD

62/20/00/000/000/205 **Starflex star** Checking B/C/D/F areas. GVI	*AMM 62-21-00, 6-1*	*15 FH* *36 D*	
62/20/00/000/000/207 **Starflex star - Swivel bearing** Visual check and play check. GVI	*AMM 62-21-00, 6-2*	*15 FH* *36 D*	

62-30 MAIN ROTOR MAST

62/30/00/000/000/163 **Swashplates** Greasing the bearing. LUB	*AMM 62-32-00, 3-1*	*15 FH* *36 D*	

Task Number Description/ Remarks	Documentation	Margin	Initial
62/30/00/000/000/320 **Scissors bushings and attachment bolts** Sand-laden and/or dust-laden atmosphere Greasing. LUB	*AMM 62-33-00, 3-1*	*15 FH* *36 D*	

63 - ROTOR DRIVE (S)

63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/060 **Flexible coupling** Visual check. VC	*AMM 63-11-00, 6-18*	*15 FH* *36 D*	
63/10/00/000/000/065 **Hydraulic pump - Drive-belt and bearing** Check. VC	*AMM 63-11-00, 6-2* *AMM 63-11-00, 6-15*	*15 FH* *36 D*	
63/10/00/000/000/200 **Hydraulic pump - Belt drive** PRE MOD 079561 & PRE MOD 079566 Splines greasing. LUB	*AMM 63-11-00, 3-2*	*15 FH* *36 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/200 **Rubber sleeve** POST MOD 079059 Visual check. VC	*AMM 65-11-00, 6-13*	*15 FH* *36 D*	

77 - ENGINE INDICATING

77-00 ENGINE INDICATING

77/00/00/601/000/000 **FADEC unit** FADEC self-test. Engine ARRIEL 2B/2B1. FT	*AMM 73-20-00, 6-1*	*15 FH* *36 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-21-01

150 FH

D.U.	TITLE
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 29	HYDRAULIC POWER
ATA 53	FUSELAGE
ATA 55	STABILIZER
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 65	TAIL ROTOR DRIVE
ATA 76	ENGINE CONTROLS

Task Number Description/ Remarks	Documentation	*Margin*	Initial

25 - EQUIPMENTS AND FURNISHINGS

25-10 COCKPIT

25/10/11/000/000/000 **Pilot and copilot seats - Seat buckets and attachments** 350A77-0068-01 (-) Visual check. GVI	*AMM 25-21-00, 6-1*	*15 FH*	

29 - HYDRAULIC POWER

29-10 MAIN HYDRAULIC GENERATION

29/10/10/501/000/000 **Single hydraulic generation system - Servocontrol** Check of the electrical system part. DI	*AMM 29-10-00, 5-1*	*15 FH*	

53 - FUSELAGE

53-10 PRIMARY STRUCTURE

53/10/00/000/000/080 **Transmission deck** [PRE MOD 073362 // PRE MOD 073342] & POST AMM 53-10-00, 8-14 Check. CLN|GVI	*AMM 53-10-00, 6-1*	*15 FH*	
53/10/00/000/000/120 **Longitudinal bulkheads** PRE MOD 074349 Visual check. GVI	*AMM 53-10-00, 6-2*	*15 FH*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
53/10/01/000/000/000 **Tail rotor drive shaft bearing bracket mounts** Visual check of the bearing bracket mounts. GVI	*AMM 53-31-00, 6-4*	*15 FH*	

55 - STABILIZER

55-20 VERTICAL FINS ASSY

55/20/00/000/000/030 **Upper and lower fin** Check of skin. GVI	*AMM 55-20-00, 6-1*	*15 FH*	

62 - ROTOR (S)

62-10 MAIN ROTOR BLADE

62/10/00/000/000/005 **Skin** Check the skin in the area between 900mm and the blade tip. GVI	*AMM 62-11-00, 6-3*	*15 FH*	

62-30 MAIN ROTOR MAST

62/30/00/000/000/205 **Rotating swashplate – 4 contacts bearing** Y51BB10843S2M74 (704A33651158) Inspection of free rotation. Operation to be performed from 5100 FH to 6600 FH of the OTL. DI	*AMM 62-32-00, 6-8*	*15 FH*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

62/30/00/000/000/370

Pitch change rod

AMM 62-33-00, 6-8 *15 FH*

Check the alignement of the red paint line between the bolt head and the pitch horn and between the nut and the pitch horn (upper axis of the pitch rod).

VC

63 - ROTOR DRIVE (S)

63-20 MAIN GEARBOX

63/20/00/000/000/039

Oil filter - Filter element

AMM 63-21-00, 3-1 *15 FH*

PRE MOD 077162

Cleaning.

CLN

63/20/00/000/000/065

Spectrometric Oil Analysis Program (SOAP)

AMM 60-00-00, 6-1 *15 FH*

The sample must be taken during the inspection nearest to each due time.
Oil monitoring using SOAP is optional.

SDI

63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/100

MGB suspension cross bar

AMM 63-31-00, 6-5 *15 FH*

Check of laminated stops without removal.

GVI

Task Number Description/ Remarks	Documentation	*Margin*	Initial

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/003 **Tail rotor drive shaft** Condition check. GVI	*AMM 65-11-00, 6-11* *AMM 65-11-00, 6-13* *AMM 65-11-00, 6-14* *AMM 65-21-00, 6-20*	*15 FH*	

65-20 TAIL GEARBOX

65/20/00/000/000/055 **Spectrometric Oil Analysis Program (SOAP)** The sample must be taken during the inspection nearest to each due time. Oil monitoring using SOAP is optional. SDI	*AMM 60-00-00, 6-1*	*15 FH*	
65/20/00/000/000/270 **Pitch change unit - Swivel bearing** 350A33-2004-03 (-) 350A33-2004-05 (-) 350A33-2004-06 (-) 350A33-2030-00 (-) 350A33-2167-01 (-) Check. DI	*AMM 65-21-00, 6-16*	*15 FH*	
65/20/00/000/000/370 **TRH pitch change unit - Labyrinth seal - Lock washer** PRE MOD 076550 Check. GVI	*AMM 65-21-00, 6-15*	*15 FH*	
65/20/00/601/000/060 **Pitch control lever - Yoke lugs** Check. DI	*AMM 65-21-00, 6-24*	*15 FH*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

76 - ENGINE CONTROLS

76-00 ENGINE CONTROLS

76/00/00/000/000/030 **Engine fuel flow control - Twist grip** *AMM 76-12-02, 6-1* *15 FH* POST MOD 073222 & PRE MOD 073261 Functional check of the solenoid of the twist grip. FT	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-21-02

12 M

D.U.	TITLE
ATA 24	ELECTRICAL POWER
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 26	FIRE PROTECTION
ATA 34	NAVIGATION

Task Number Description/ Remarks	Documentation	*Margin*	Initial

24 - ELECTRICAL POWER

24-31 BATTERY

24/31/00/000/000/060 **Battery** 150CH-1 Check. DI	(7050A4243027)	*AMM 24-33-00, 6-2* *36 D*	
24/31/00/000/000/065 **Battery** 151CH-1 Check. DI	(7050A4243040)	*AMM 24-33-00, 6-2* *36 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-00 EQUIPMENT AND FURNISHING

25/00/00/000/000/015 **Belt and harness - Strap** Check and functional test. Operation to be carried out each 12 M (margin 36D) or after each installation of the seat or of the harness. DI|FT		*AMM 25-20-00, 5-1* *AMM 25-20-00, 6-1* *36 D*	

25-10 COCKPIT

25/10/40/000/000/000 **APPAREO camera** Functional test. FT		*AMM 25-10-40, 5-2* *36 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

25/66/20/000/000/020 **Emergency locator transmitter** KANNAD INTEGRA AP-H (ER). Installation check. DI|FT	*AMM 25-66-20, 6-1*	*36 D*	
25/66/34/000/000/030 **Emergency locator transmitter** KANNAD 406 AF. KANNAD 121 AF-H. KANNAD 406 AF-H. Installation check. DI|FT	*AMM 25-66-02, 6-1*	*36 D*	

26 - FIRE PROTECTION

26-22 OPT - EXTINGUISHER, FIRE, CABIN

26/22/01/000/000/020 **Cabin fire extinguisher** 12085-01 (S262A10T1001) PLA863520-00 (T262M50T0002) Weighing. Interval starting from the date of manufacture. WGH	*AMM 26-21-00, 6-2*	*36 D*	

34 - NAVIGATION

34-25 GYRO HORIZON

34/25/00/000/000/030 **Calibration battery** 010-01912-30 (704A47331111) FT	*AMM 34-25-32, 5-2*	*36 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-22-00

750 FH // 24 M

D.U.	TITLE
ATA 24	ELECTRICAL POWER
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 28	FUEL SYSTEM
ATA 29	HYDRAULIC POWER
ATA 32	LANDING GEAR
ATA 33	LIGHTING SYSTEM
ATA 34	NAVIGATION
ATA 52	DOORS
ATA 53	FUSELAGE
ATA 55	STABILIZER
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 64	TAIL ROTOR
ATA 65	TAIL ROTOR DRIVE
ATA 67	ROTOR FLIGHT CONTROLS
ATA 71	POWER PLANT
ATA 77	ENGINE INDICATING
ATA 79	ENGINE OIL

Task Number Description/ Remarks	Documentation	*Margin*	Initial

24 - ELECTRICAL POWER

24-00 ELECTRICAL POWER

24/00/00/000/000/001 **Starter generator harness** Detailed inspection of the harness. DI	*AMM 24-00-00, 6-3*	*75 FH* *73 D*	

24-31 BATTERY

24/31/00/000/000/091 **Electrical power** Check: - battery, - electrical master box, - ground power receptacle. DI	*AMM 24-00-00, 6-1*	*75 FH* *73 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-10 COCKPIT

Task Number Description/ Remarks	Documentation	*Margin*	Initial
25/10/11/000/000/041 **Pilot and copilot seats** Check. DI	*AMM 25-21-00, 6-1*	*75 FH* *73 D*	

28 - FUEL SYSTEM

28-00 FUEL SYSTEM

28/00/00/000/000/004 **Fuel system** Check. DI	*AMM 28-00-00, 6-1*	*75 FH* *73 D*	
28/00/00/402/000/001 **Fuel tank** Check. DI	*AMM 28-11-00, 6-1*	*75 FH* *73 D*	
28/00/00/502/000/002 **Fuel tank** Adjustment - Strap tension RTQ	*AMM 28-11-00, 5-1*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

28-10 FUELING ASSY

28/10/00/000/000/000 **Fueling system** POST MOD 073034 Cleaning of the strainer. CLN	*AMM 28-11-00, 4-4*	*75 FH* *73 D*	

28/10/00/000/000/021 **Fuel shut-off valve** Functional test. FT	*AMM 28-21-00, 5-2*	*75 FH* *73 D*	

28-40 FUEL CONTROLS AND MONITORING

28/40/00/000/000/001 **Fuel gaging system** Rigging. RIG	*AMM 28-41-00, 5-1*	*75 FH* *73 D*	

28-41 INDICATING

28/41/00/000/000/021 **Low fuel level warning** Functional test. FT	*AMM 28-41-00, 5-2*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

29 - HYDRAULIC POWER

29-10 MAIN HYDRAULIC GENERATION

29/10/10/302/000/001 **Accumulator** Test and check. DI|FT	*AMM 29-00-00, 3-7*	*75 FH* *73 D*	

32 - LANDING GEAR

32-13 SKID LANDING GEAR

32/13/00/601/000/001 **Skid landing gear** Check. DI|FT	*AMM 32-11-00, 6-1* *AMM 32-11-00, 6-3* *AMM 32-11-00, 6-4*	*75 FH* *73 D*	

32/13/00/603/000/001 **Skid type landing gear** Check of attachments of the hydraulic dampers. GVI	*AMM 32-11-00, 6-5*	*75 FH* *73 D*	

33 - LIGHTING SYSTEM

33-00 LIGHTING SYSTEM

Task Number Description/ Remarks	Documentation	*Margin*	Initial
33/00/00/000/000/001 **External light** Check of the lighting system. DI	*AMM 33-00-00, 6-1*	*75 FH* *73 D*	

34 - NAVIGATION

34-00 NAVIGATION

34/00/00/000/000/001 **Navigation system** Check. DI	*AMM 34-00-00, 6-1*	*75 FH* *73 D*	

34-21 GYROMAGNETIC COMPASS

34/21/00/000/000/005 **Pilot's and copilot's gyroscopic and directional horizon** PRE MOD 074723 Test. FT	*AMM 34-20-00, 5-1*	*75 FH* *73 D*	

52 - DOORS

52-10 CREW AND PASSENGERS DOOR

52/10/00/501/000/001 **Crew door** Functional test - Jettison. FT	*AMM 52-11-00, 5-1*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
52/10/00/601/000/001 **Crew door** Visual check without removal. GVI	*AMM 52-11-00, 6-1*	*75 FH* *73 D*	

52-30 CARGO DOOR

52/30/00/000/000/021 **Lateral cargo door** Visual check without removal. GVI	*AMM 52-31-00, 6-1*	*75 FH* *73 D*	

52-32 REAR CARGO HOLD DOOR

52/32/00/000/000/031 **Rear cargo compartment door** Visual check without removal. GVI	*AMM 52-32-00, 6-1*	*75 FH* *73 D*	

53 - FUSELAGE

53-00 FUSELAGE

Task Number Description/ Remarks	Documentation	*Margin*	Initial
53/00/00/000/000/061 **Structure** Cleaning of the helicopter. CLN	*AMM 12-20-00, 3-1*	*75 FH* *73 D*	
53/00/00/601/000/002 **Fuselage** Detailed check. DI	*AMM 53-00-00, 6-7*	*75 FH* *73 D*	

53-10 PRIMARY STRUCTURE

53/10/00/000/000/011 **Windshield, glazed panel, door window** Check for cracks. GVI	*AMM 56-11-00, 6-1*	*75 FH* *73 D*	

55 - STABILIZER

55-10 HORIZONTAL STABILIZER

55/10/00/000/000/021 **Horizontal stabilizer** Check. DI	*AMM 55-11-00, 6-1*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

62 - ROTOR (S)

62-10 MAIN ROTOR BLADE

62/10/20/601/000/011 **Main rotor blade** Check. Check every 30 FH (margin 3 FH) for 120 FH, if a defect (inside the limits) is found: blade skin separation or blade leading edge stainless steel strip separation, cracks in the stainless steel leading edge. If no development is noted during this period, return to the normal inspection cycle. DI	*AMM 62-11-00, 6-1*	*75 FH* *73 D*	

62-20 MAIN ROTOR HEAD

62/20/00/000/000/081 **MRH** Check. DI	*AMM 62-21-00, 6-3* *AMM 62-21-00, 6-4* *AMM 62-21-00, 6-5* *AMM 62-21-00, 6-6* *AMM 62-21-00, 6-7* *AMM 62-21-00, 6-8* *AMM 62-21-00, 6-9* *AMM 62-21-00, 6-12* *AMM 62-21-00, 6-14* *AMM 62-21-00, 6-16* *AMM 62-21-00, 6-17* *AMM 62-21-00, 6-21* *AMM 62-21-00, 6-22* *AMM 62-21-00, 6-10*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
62/20/00/000/000/211 **Droop restrainer ring** Detailed check. DI	*AMM 62-21-00, 6-13*	*75 FH* *73 D*	

62-30 MAIN ROTOR MAST

62/30/00/000/000/031 **Pitch change rod** Tightening torque check of the pitch rod bolts on the swashplate only. TCK	*AMM 62-33-00, 6-6*	*75 FH* *73 D*	
62/30/00/000/000/066 **Rotor mast - Upper visible section** Detailed check. DI	*AMM 62-31-00, 6-1* *AMM 62-31-00, 6-2* *AMM 62-31-00, 6-4*	*75 FH* *73 D*	
62/30/00/000/000/341 **MRH - Upper casing attachment bolts/Flared housing** POST MOD 076120 Tightening torque check. TCK	*AMM 62-31-00, 6-11*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
62/30/00/601/000/011 **Swashplate** Check. DI	*AMM 62-32-00, 6-7*	*75 FH* *73 D*	

63 - ROTOR DRIVE (S)

63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/051 **Hydraulic pump - Belt** Tension check. RIG	*AMM 63-11-00, 6-20*	*75 FH* *73 D*	
63/10/00/000/000/082 **Hydraulic pump - Bearing** POST MOD 079568 Check. DI	*AMM 63-11-00, 6-19*	*75 FH* *73 D*	
63/10/00/000/000/262 **Hydraulic pump - Bearing** POST MOD 079568 Greasing. LUB	*AMM 63-11-00, 3-1*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

63-20 MAIN GEARBOX

63/20/00/000/000/081 **Mineral oil** Oil change. Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard. DRN	*AMM 12-10-00, 3-1*	*75 FH* *73 D*	

63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/011 **Suspension bar** 704A33-633-035 704A33-633-036 B211000-074 FDT14193 FDT14194 Check. DI	*AMM 63-32-00, 6-1* *AMM 63-32-00, 6-2* (704A33633035) (704A33633036) (704A33633262) (704A33633074) (704A33633075)	*75 FH* *73 D*	

63-51 ROTOR BRAKE

63/51/00/000/000/001 **Rotor brake micro switch** Check. DI	*AMM 63-51-00, 5-1*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
63/51/00/000/000/011 **Rotor brake - Ball-type control** Test without removal. FT	*AMM 63-52-00, 5-1*	*75 FH* *73 D*	

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

64/10/00/000/000/065 **Blanking cap** 355A12-0050-12 (-) 355A12-0051-12 (-) 355A12-0060-00 (-) 355A12-0060-02 (-) Check. DI	*AMM 64-10-00, 6-12*	*75 FH* *73 D*	
64/10/00/000/000/085 **Tail rotor blade** Check with removal the rotors. - Should spar blade delaminate or crack, a check is to be performed every 30 FH (margin 3 FH) over 120 FH. - PRE MOD 075601: if bellow distortion is detected, the check must be carried out every 150 FH (margin 15 FH) over 750 FH. If no development is noted during these periods, return to the normal inspection cycle. DI	*AMM 64-10-00, 6-1* *AMM 64-10-00, 6-3* *AMM 64-10-00, 6-5*	*75 FH* *73 D*	
64/10/00/000/000/100 **Tail rotor blade horn** 355A12-5102-00 (-) 355A12-5102-01 (-) 355A12-5103-00 (-) Check. DI	*AMM 64-10-00, 6-10*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

65 - TAIL ROTOR DRIVE

65-20 TAIL GEARBOX

65/20/00/000/000/036 **Mineral oil** Oil change. Refer to WC 12-10-00, 3-1 (AMM) upon oil replacement. DRN	*AMM 12-10-00, 3-1*	*75 FH* *73 D*	
65/20/00/000/000/142 **Casing** 350A33-1090-02 (-) Visual check. Maintenance task aligned with T visit, can be performed up to 1200 FH // 24 M (Margin 120 FH // 73D). GVI	*AMM 65-21-00, 6-13*	*75 FH* *73 D*	

65/20/00/000/000/491 **TGB - Pitch rod** Check. DI	*AMM 65-21-00, 6-11*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	Margin	Initial
65/20/00/000/000/501 **Tail rotor shaft** Check. GVI	*AMM 65-21-00, 6-19*	*75 FH 73 D*	
65/20/00/601/000/021 **Pitch control lever** 350A33-1524-00 (-) 350A33-1526-00 (-) 350A33-1535-00 (-) Check. Maintenance task aligned with T visit, can be performed up to 1200 FH // 24 M (Margin 120 FH // 73 D). DI	*AMM 65-21-00, 6-27*	*75 FH 73 D*	

67 - ROTOR FLIGHT CONTROLS

67-10 MAIN ROTOR CONTROL

67/10/00/000/000/011 **Main rotor flight controls** Check. GVI	*AMM 67-10-00, 6-1*	*75 FH 73 D*	

67-20 TAIL ROTOR CONTROL

Task Number Description/ Remarks	Documentation	*Margin*	Initial
67/20/00/000/000/001 **Tail rotor flight controls** Check. GVI	*AMM 67-21-00, 6-1*	*75 FH* *73 D*	

67-30 SERVOCONTROL

67/30/00/000/000/010 **Yaw channel trim system** Installation of a simple hydraulic power system. Sealing check. FT	*AMM 67-34-00, 6-1*	*75 FH* *73 D*	
67/30/00/402/000/061 **Main servocontrol** Tightening torque check of attaching bolts. TCK	*AMM 67-32-00, 6-3*	*75 FH* *73 D*	
67/30/00/602/000/011 **Servocontrol - Single hydraulic system** Play check. TCK	*AMM 67-32-00, 6-2*	*75 FH* *73 D*	

71 - POWER PLANT

71-00 POWER PLANT

Task Number Description/ Remarks	Documentation	*Margin*	Initial
71/00/00/000/000/001 **Power plant installation** Check for correct condition and attachment of the items. GVI	*AMM 71-00-00, 6-1*	*75 FH* *73 D*	

77 - ENGINE INDICATING

77-00 ENGINE INDICATING

77/00/00/000/000/000 **Engine emergency governing system "EBCAU"** Engine ARRIEL 2B1. Engine ARRIEL 2D. Check. Maintenance task aligned with T visit, can be performed up to 1500 FH // 24 M (Margin 150 FH // 73 D). FT|GR	*AMM 77-00-00, 5-4* *FLM Section 8.3*	*75 FH* *73 D*	

79 - ENGINE OIL

79-00 LUBRICATION

79/00/00/601/000/001 **Power plant** Check of the condition, attachment and cleanliness of the tank and the lubricating system. DI	*AMM 79-00-00, 6-1*	*75 FH* *73 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-22-01

750 FH

D.U.	TITLE
ATA 28	FUEL SYSTEM
ATA 29	HYDRAULIC POWER
ATA 53	FUSELAGE
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 65	TAIL ROTOR DRIVE

Task Number Description/ Remarks	Documentation	*Margin*	Initial

28 - FUEL SYSTEM

28-00 FUEL SYSTEM

28/00/00/000/000/001 **Fuel system** Energy absorption fuel tank. Check. DI	*AMM 28-00-01, 6-1*	*75 FH*	
28/00/00/000/000/002 **Fuel shut-off valve** Energy absorption fuel tank. Functional test. FT	*AMM 28-21-01, 5-2*	*75 FH*	
28/00/00/502/000/001 **Fuel tank** Energy absorption fuel tank. Adjustment - Strap tension. RTQ	*AMM 28-11-01, 5-1*	*75 FH*	

28-41 INDICATING

28/41/01/000/000/001 **Low fuel level warning** Energy absorption fuel tank. Functional test. FT	*AMM 28-41-01, 5-2*	*75 FH*	

29 - HYDRAULIC POWER

29-10 MAIN HYDRAULIC GENERATION

29/10/00/000/000/040 **MGB Hydraulic pump** Greasing. LUB	*AMM 29-12-02, 3-1*	*75 FH*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

53 - FUSELAGE

53-10 PRIMARY STRUCTURE

53/10/00/000/000/111 **Transmission deck** *AMM 53-10-00, 6-1* *75 FH* POST MOD 073362 & POST MOD 073342 Check. CLN|GVI		

62 - ROTOR (S)

62-30 MAIN ROTOR MAST

62/30/00/000/000/091 **Scissors drive coupling - Sealing bead** *AMM 62-31-00, 6-6* *75 FH* Check. DI		

62/30/00/000/000/216 **Rotating swashplate - 4 contacts bearing** *AMM 62-32-00, 6-8* *75 FH* Y51BB10843S2M74 (704A33651158) Inspection of free rotation. Operation to be performed from 0 FH to 5100 FH of the OTL DI		

63 - ROTOR DRIVE (S)

63-20 MAIN GEARBOX

Task Number Description/ Remarks	Documentation	*Margin*	Initial
63/20/00/000/000/016 **Chips detector** Check of the magnetization of the electrical or non electrical magnetic plug. DI	*AMM 60-00-00, 6-4*	*75 FH*	

63-51 ROTOR BRAKE

63/51/00/000/000/051 **Rotor brake** Check. DI	*AMM 63-51-00, 6-1*	*75 FH*	

65 - TAIL ROTOR DRIVE

65-20 TAIL GEARBOX

65/20/00/000/000/006 **Chips detector** Check of the magnetization of the electrical or non electrical magnetic plug. DI	*AMM 60-00-00, 6-4*	*75 FH*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-22-02

24 M

D.U.	TITLE
ATA 24	ELECTRICAL POWER
ATA 26	FIRE PROTECTION
ATA 34	NAVIGATION
ATA 65	TAIL ROTOR DRIVE
ATA 76	ENGINE CONTROLS

Task Number Description/ Remarks	Documentation	*Margin*	Initial

24 - ELECTRICAL POWER

24-31 BATTERY

24/31/00/000/000/070 **Battery** 150CH-1 Overhaul. RS|FT	(7050A4243027)	*AMM 24-33-00, 6-3* *73 D*	
24/31/00/000/000/075 **Battery** 151CH-1 Overhaul. DI	(7050A4243040)	*AMM 24-33-00, 6-3* *73 D*	
24/31/00/000/000/080 **Battery** Battery compartment cleaning. CLN		*AMM 24-33-00, 2-1* *73 D*	

26 - FIRE PROTECTION

26-22 OPT - EXTINGUISHER, FIRE, CABIN

26/22/00/000/000/030 **Cabin fire extinguisher** P3APP003010D Check and weighing. DI|WGH	(U262A50T1003)	*AMM 26-21-00, 6-5* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

34 - NAVIGATION

34-10 PITOT SYSTEM

34/10/00/000/000/000 **Pitot System** Check for correct operation. FT	*AMM 34-10-00, 5-1*	*73 D*	

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/110 **Tail rotor drive shaft** Detailed inspection DI	*AMM 65-11-00, 6-5*	*73 D*	

76 - ENGINE CONTROLS

76-20 EMERGENCY SHUTDOWN

76/20/00/501/000/010 **Emergency shut down - Fuel shut-off ball type control** Lever on cabin ceiling or cabin desk. Test without removal. FT	*AMM 76-21-00, 5-1*	*73 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-23-00

1500 FH // 48 M

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 63	ROTOR DRIVE (S)
ATA 65	TAIL ROTOR DRIVE

Task Number Description/ Remarks	Documentation	*Margin*	Initial

21 - AIR CONDITIONING

21-00 AIR CONDITIONING

21/00/00/000/000/001 **Cabin ventilation airscoop** Check and functional test. GVI|FT	*AMM 21-00-00, 6-1*	*150 FH* *146 D*	

63 - ROTOR DRIVE (S)

63-20 MAIN GEARBOX

63/20/00/000/000/036 **Synthetic oil** Oil change. Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard. DRN	*AMM 12-10-00, 3-1*	*150 FH* *146 D*	

65 - TAIL ROTOR DRIVE

65-20 TAIL GEARBOX

Task Number Description/ Remarks	Documentation	*Margin*	Initial
65/20/00/000/000/021 **Synthetic oil** Oil change. Refer to WC 12-10-00, 3-1 (AMM) upon oil replacement. DRN	*AMM 12-10-00, 3-1*	*150 FH* *146 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-23-01

1500 FH

D.U.	TITLE
ATA 31	IND./RECORDING SYSTEMS
ATA 76	ENGINE CONTROLS
ATA 77	ENGINE INDICATING

Task Number Description/ Remarks	Documentation	*Margin*	Initial

31 - IND./RECORDING SYSTEMS

31-42 LIGHTING AND ANCILLARIES CONTROL UNIT (LACU)

31/42/00/000/000/001 **Lightning and ancillaries control unit (LACU)** Cleaning. CLN	*AMM 31-42-00, 7-1*	*150 FH*	

76 - ENGINE CONTROLS

76-12 TWIST GRIP

76/12/00/000/000/000 **Twist grip - Switches** 10AT531-1 POST MOD 074782 Engine ARRIEL 2B1 Check DI	*AMM 76-12-03, 6-3* (704A36530017)	*150 FH*	
76/12/00/000/000/010 **Twist grip - Switches** 10AT531-1 POST MOD 074782 Engine ARRIEL 2D Check DI	*AMM 76-12-04, 6-3* (704A36530017)	*150 FH*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

77 - ENGINE INDICATING

77-00 ENGINE INDICATING

77/00/00/501/000/010 **FADEC unit** *AMM 73-20-00, 6-2* *150 FH* POST MOD 074830 & POST MOD 074831 // POST MOD 074830 & POST MOD 0720015 Test of the overspeed protection system. Engine ARRIEL 2D. FT	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-23-02

48 M

D.U.	TITLE
ATA 32	LANDING GEAR
ATA 60	GENERAL - MECHANICS SYSTEMS

Task Number Description/ Remarks	Documentation	*Margin*	Initial

32 - LANDING GEAR

32-13 SKID LANDING GEAR

32/13/00/601/000/020 **Skid landing gear** Tropical and damp atmosphere Salt-laden atmosphere Check. DI	*AMM 32-11-00, 6-3*	*146 D*	

60 - GENERAL - MECHANICS SYSTEMS

60-00 GENERAL - MECHANICS SYSTEMS

60/00/00/000/000/100 **MRH - Main Rotor Mast - TRH - Tail rotor drive shaft - Engine/MGB coupling** Tropical and damp atmosphere Salt-laden atmosphere Operation to be carried out after having logged 96 M (margin 180 D) after initial setting to service. DI	*AMM 05-60-00, 6-1*	*146 D*	
60/00/00/000/000/130 **MGB assembly - TGB assembly** Tropical and damp atmosphere Salt-laden atmosphere Check. Operation to be carried out after having logged 96 M (margin 180 D) after initial setting to service or since the last Overhaul. DI	*AMM 05-60-00, 6-1*	*146 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-25-00

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 24	ELECTRICAL POWER
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 26	FIRE PROTECTION
ATA 28	FUEL SYSTEM
ATA 29	HYDRAULIC POWER
ATA 32	LANDING GEAR
ATA 52	DOORS
ATA 53	FUSELAGE
ATA 55	STABILIZER
ATA 60	GENERAL - MECHANICS SYSTEMS
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 64	TAIL ROTOR
ATA 65	TAIL ROTOR DRIVE
ATA 67	ROTOR FLIGHT CONTROLS
ATA 76	ENGINE CONTROLS
ATA 77	ENGINE INDICATING
ATA 80	ENGINE STARTING

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

21 - AIR CONDITIONING

21-21 VENTILATION/DEMISTING

21/21/00/000/000/011 **Heating pipe** POST MOD 074765 // POST MOD 074866 P2 installation. Check of the condition of the heat insulation and sleeves. DI	*AMM 21-21-00, 6-5*	2250 FH // 72 M	*225 FH* *180 D*	
21/21/00/000/000/020 **Heating pipe** POST MOD 074765 // POST MOD 074866 P2 installation. Leak detection. DI	*AMM 21-21-00, 6-6*	144 M	*180 D*	
21/21/00/000/000/030 **Heating pipe** PRE MOD 074765 // PRE MOD 074866 P2 installation. Replacement. DS	*AMM 21-21-00, 6-4*	144 M	*180 D*	

24 - ELECTRICAL POWER

24-31 BATTERY

24/31/00/000/000/015 **Battery temperature sensor** PRE OP 3827 Battery temperature test warning. FT	*AMM 24-33-00, 5-1*	600 FH // 24 M	*60 FH* *73 D*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
24/31/00/000/000/016 **Battery temperature sensor** POST OP 3827 Battery temperature test warning. FT	*AMM 24-33-00, 5-3*	600 FH // 24 M	*60 FH* *73 D*	
24/31/00/000/000/050 **Battery** 150CH-1 Hot climatic conditions Check. DI	*AMM 24-33-00, 6-1* (7050A4243027)	6 M	*18 D*	
24/31/00/000/000/055 **Battery** 151CH-1 Hot climatic conditions Check. DI	*AMM 24-33-00, 6-1* (7050A4243040)	6 M	*18 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-10 COCKPIT

25/10/11/000/000/010 **Front seats with shock absorbers** SICMA 159. Detailed check. DI	*AMM 25-21-00, 6-7*	1800 FH	*180 FH*	
25/10/11/000/000/021 **Front seats with shock absorbers** SICMA 159. Check DI	*AMM 25-21-00, 6-6*	1200 FH	*120 FH*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
25/10/11/000/000/026 **Front seats with shock absorbers** SICMA 198. Check. VC	*AMM 25-21-00, 6-11*	1200 FH	*120 FH*	
25/10/11/000/000/027 **Front seats with shock absorbers** SICMA 198. Detailed check. DI	*AMM 25-21-00, 6-12*	1800 FH	*180 FH*	
25/10/11/000/000/030 **Front seats with shock absorbers - Rails** SICMA 159. Check. DI	*AMM 25-21-00, 6-2*	1800 FH	*180 FH*	
25/10/11/000/000/035 **Front seats with shock absorbers - Rails** SICMA 198. Check. DI	*AMM 25-21-00, 6-2*	2400 FH	*240 FH*	
25/10/11/000/000/060 **Pilot and copilot seats** FISCHER H110. Detailed check. DI	*AMM 25-21-00, 6-5*	1200 FH // 48 M	*120 FH* *146 D*	
25/10/11/000/000/070 **Pilot and copilot seats - Rails** FISCHER H110. Check. DI	*AMM 25-21-00, 6-3*	2250 FH	*225 FH*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
25/10/12/000/000/060 **Pilot and copilot seats** FISCHER H140. Detailed check. DI	*AMM 25-21-00, 6-10*	1200 FH // 48 M	*120 FH* *146 D*	
25/10/12/000/000/070 **Pilot and copilot seats - Rails** FISCHER H140. Check. DI	*AMM 25-21-00, 6-8*	2250 FH	*225 FH*	

25-66 EMERGENCY LOCATOR TRANSMITTER (ELT)

25/66/00/000/000/010 **Emergency locator transmitter** JOLLIET JE2 AND JE25 NG. Fonctional tests. FT	*AMM 25-66-04, 5-1*	6 M	*18 D*	
25/66/00/000/000/016 **Emergency locator transmitter** JOLLIET JE2/JE2NG. On board system check. DI	*AMM 25-66-04, 6-1*	600 FH // 24 M	*60 FH* *73 D*	
25/66/00/000/000/030 **Emergency locator transmitter** ELT 910 NARCO. Fonctional tests. FT	*AMM 25-66-07, 5-1*	6 M	*18 D*	
25/66/00/000/000/036 **Emergency locator transmitter** ELT 910 NARCO. Installation check. DI	*AMM 25-66-07, 6-1*	600 FH // 24 M	*60 FH* *73 D*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
25/66/00/000/000/100 **Emergency locator transmitter** N15F210B DUKANE 210B. Clean and check. CLN|GVI	*CMM 25-69-73 Section III § 3,2* (704A45737011)	3 M	*9 D*	
25/66/00/000/000/120 **Emergency locator transmitter** ELT96A2560000000 SOCATA. Emergency locator transmitter self-test (3 consecutive phases). FT	*AMM 25-66-08, 5-1* (704A45737043)	6 M	*18 D*	
25/66/00/000/000/131 **Emergency locator transmitter** ELT96A2560000000 SOCATA. Check DI|FT	*AMM 25-66-08, 6-1* (704A45737043)	600 FH // 24 M	*60 FH* *73 D*	
25/66/20/000/000/010 **Emergency locator transmitter** S1854501-01 KANNAD INTEGRA AP-H (ER). Emergency locator transmitter autotest. FT	*AMM 25-66-20, 5-1* (704A45737078)	1 M	*3 D*	
25/66/34/000/000/020 **Emergency locator transmitter** KANNAD 406 AF. KANNAD 121 AF-H. KANNAD 406 AF-H. Emergency locator transmitter autotest. FT	*AMM 25-66-02, 5-1*	1 M	*3 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

26 - FIRE PROTECTION

26-22 OPT - EXTINGUISHER, FIRE, CABIN

26/22/00/000/000/020 **Cabin fire extinguisher** *CMM 26-21-99* *CMM 26-22-99* *CMM 26-24-04* Weigh the cylinders. - CMM 26-21-99 = MP/N P2H, MP/N H1. - CMM 26-22-99 = MP/N H1-code 0150101A, MP/N H1-0150101S. - CMM 26-24-04 = MP/N H1-10AIR, MP/N H1-10. WGH		6 M	*18 D*	
26/22/00/000/000/040 **Cabin fire extinguisher** *AMM 26-21-00, 6-4* P3APP003010D (U262A50T1003) Check. DI		1 M	*3 D*	

28 - FUEL SYSTEM

28-00 FUEL SYSTEM

28/00/00/502/000/010 **Fuel tank** *MTC 20.08.06.401* Tropical and damp atmosphere Check and maintenance. DI		3 M	*9 D*	

28-20 FUEL DISTRIBUTION

28/20/00/000/000/000 **Fuel shut-off valve** *AMM 28-21-00, 6-1* *AMM 28-21-01, 6-1* Visual inspection. GVI		300 FH	*30 FH*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
28/20/00/000/000/035 **Fuel distribution - Fuel filter** Fuel filter pre-clogging indication functional test. FT	*AMM 28-00-00, 5-1*	600 FH // 24 M	*60 FH* *73 D*	

29 - HYDRAULIC POWER

29-00 HYDRAULIC POWER

29/00/00/000/000/000 **Hydraulic system** Drain and fill. Servicing of the stainer and the filter. DRN	*AMM 29-00-00, 3-6*	3000 FH // 48 M	*300 FH* *146 D*	
29/00/00/000/000/010 **Hydraulic system** Salt-laden atmosphere Drain and fill. Servicing of the stainer and the filter. DRN	*AMM 29-00-00, 3-6*	3000 FH // 24 M	*300 FH* *73 D*	

29-10 MAIN HYDRAULIC GENERATION

29/10/10/302/000/020 **Accumulator - Yaw compensator** PRE MOD 074957 Check. DI	*AMM 29-00-00, 3-5*	150 FH // 6 M	*15 FH* *18 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
29/10/10/404/000/000 **Single hydraulic generation system - Hose** PRE MOD 074239 Replacement. DS	*AMM 29-10-00, 8-1*	5000 FH // 72 M	*300 FH* *180 D*	

32 - LANDING GEAR

32-00 LANDING GEAR

32/00/00/000/000/000 **Landing gear shock absorber** Detailed check. DI	*AMM 32-11-00, 6-2*	144 M	*180 D*	
32/00/00/000/000/010 **Landing gear shock absorber** Detailed check. DI|FT	*AMM 32-11-00, 5-1* *AMM 32-11-00, 6-2*	5400 FH	*300 FH*	

32-13 SKID LANDING GEAR

32/13/00/601/000/010 **Skid landing gear** Detailed check. DI|FT	*AMM 32-11-00, 6-3*	5400 FH	*300 FH*	
32/13/00/609/000/001 **DART footsteps** Detailed inspection. DI	*AMM 32-11-00, 6-9*	600 FH // 24 M	*60 FH* *73 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

52 - DOORS

52-30 CARGO DOOR

52/30/00/000/000/011 **Lateral cargo door** Functional test - Indicating system. FT	*AMM 52-31-00, 5-1*	// 600 FH 24 M	*60 FH* *73 D*	

52-90 SLIDING DOOR

52/90/00/000/000/001 **Sliding door** Detailed check. DI	*AMM 52-12-00, 6-1*	// 600 FH 24 M	*60 FH* *73 D*	
52/90/00/000/000/021 **Sliding door** Discard of the spring washer, pad and rollers. DS	*AMM 52-12-00, 4-3*	// 600 FH 24 M	*60 FH* *73 D*	

53 - FUSELAGE

53-00 FUSELAGE

53/00/00/000/000/000 **Corrosion preventive bead** Tropical and damp atmosphere Check. SVC	*AMM 12-30-00, 3-4*	// 150 FH 6 M	*15 FH* *18 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
53/00/00/000/000/010 **Corrosion preventive bead** Salt-laden atmosphere Check. After hovering or low-altitude flight, this operation should be carried out during the P check. SVC	*AMM 12-30-00, 3-4*	150 FH // 6 M	*15 FH* *18 D*	
53/00/00/000/000/020 **Protection** Tropical and damp atmosphere SVC	*AMM 12-30-00, 3-4*	7 D	*0*	
53/00/00/000/000/030 **Protection** Salt-laden atmosphere After hovering or low-altitude flight, this operation should be carried out during the P check. SVC	*AMM 12-30-00, 3-4*	7 D	*0*	
53/00/00/000/000/040 **Structure** Salt-laden atmosphere Washing. CLN	*AMM 12-20-00, 3-1*	7 D	*0*	
53/00/00/000/000/050 **Structure - Doors, fairings, panels** Tropical and damp atmosphere Salt-laden atmosphere Sand-laden and/or dust-laden atmosphere Cleaning and greasing. CLN|LUB	*AMM 12-30-00, 3-4*	7 D	*0*	
53/00/00/000/000/080 **Structure** Detailed check. DI	*AMM 53-00-00, 6-6* *AMM 53-31-00, 6-10*	144 M	*180 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
53/00/00/601/000/001 **Fuselage** Detailed check. DI	*AMM 53-00-00, 6-1*	600 FH // 24 M	*60 FH* *73 D*	

53-10 PRIMARY STRUCTURE

53/10/00/000/000/031 **Tail boom-to-fuselage junction** Check. TCK	*AMM 53-31-00, 6-1*	3000 FH // 72 M	*300 FH* *180 D*	
53/10/00/000/000/071 **Cabin vibrator absorber blade support** Check. RTQ|GVI	*AMM 53-32-00, 6-1*	600 FH // 24 M	*60 FH* *73 D*	
53/10/00/000/000/100 **Transmission deck** [PRE MOD 073362 // PRE MOD 073342] & PRE AMM 53-10-00, 8-14 Check. CLN|GVI	*AMM 53-10-00, 6-1*	100 FH	*10 FH*	

55 - STABILIZER

55-20 VERTICAL FINS ASSY

55/20/00/000/000/000 **Upper and lower fin** PRE MOD 073012 Check. GVI|TCK	*AMM 55-20-00, 6-2*	100 FH	*0*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
55/20/00/000/000/011 **Upper and lower fin** Check. GVI|TCK	*AMM 55-20-00, 6-2*	600 FH // 24 M	*0* *0*	
55/20/00/000/000/061 **Upper and lower fin** Readjustment of the tightening torque of the screws attaching the fin spars to the frame. RTQ	*AMM 55-20-00, 6-4*	600 FH // 24 M	*60 FH* *73 D*	
55/20/00/000/000/070 **Fin support** Check. DI	*AMM 55-20-00, 6-6*	144 M	*180 D*	

60 - GENERAL - MECHANICS SYSTEMS

60-00 GENERAL - MECHANICS SYSTEMS

60/00/00/000/000/120 **MRH - Main Rotor Mast - TRH - Tail rotor drive shaft - Engine/MGB coupling** Operation to be carried out after having logged 144 M (margin 180 D) after initial setting to service. DI	*AMM 05-60-00, 6-1*	72 M	*180 D*	
60/00/00/000/000/140 **MGB assembly - TGB assembly** Check. Operation to be carried out after having logged 144 M (margin 180 D) after initial setting to service or since the last Overhaul. DI	*AMM 05-60-00, 6-1*	72 M	*180 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

62 - ROTOR (S)

62-10 MAIN ROTOR BLADE

62/10/00/302/000/000 **Main rotor blade** Tropical and damp atmosphere Cleaning the blades. CLN	*AMM 62-11-00, 3-1*	30 FH	*3 FH*	
62/10/00/302/000/010 **Main rotor blade** Salt-laden atmosphere Cleaning the blades. After hovering or low-altitude flight, this operation should be carried out during the P check. CLN	*AMM 62-11-00, 3-1*	30 FH	*3 FH*	
62/10/00/401/000/001 **Blade pin** Greasing. LUB	*AMM 62-11-00, 3-3*	150 FH // 6 M	*15 FH* *18 D*	
62/10/00/401/000/010 **Blade pin** Tropical and damp atmosphere Greasing. LUB	*AMM 62-11-00, 3-3*	150 FH // 3 M	*15 FH* *9 D*	
62/10/00/401/000/020 **Blade pin** Salt-laden atmosphere Greasing. After hovering or low-altitude flight, this operation should be carried out during the P check. LUB	*AMM 62-11-00, 3-3*	150 FH // 3 M	*15 FH* *9 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

62-20 MAIN ROTOR HEAD

62/20/00/604/000/000 **Vibration damper, spring type** Check. DI	*AMM 62-21-00, 6-11*	3000 FH // 72 M	*300 FH* *180 D*	

62-30 MAIN ROTOR MAST

62/30/00/000/000/040 **Chips detector** Check. GVI	*AMM 60-00-00, 6-2*	100 FH	*10 FH*	
62/30/00/000/000/050 **Rod end-fitting** 350A37-1508-00 (-) 350A37-1508-01 (-) 350A37-1508-02 (-) 350A37-1508-03 (-) 350A37-1508-04 (-) 350A37-1508-05 (-) Measure the play at bearings. DI	*AMM 62-33-00, 6-1*	100 FH	*10 FH*	
62/30/00/000/000/085 **Main Rotor Mast – Detailled inspection with removal** 350A37-1076-XX (-) Detailed check. DI	*AMM 62-31-00, 6-5*	72 M	*180 D*	
62/30/00/000/000/086 **Main Rotor Mast – Detailled inspection with removal** 350A37-1290-XX (-) Detailed check. DI	*AMM 62-31-00, 6-5* *AMM 62-31-00, 6-13*	5400 FH // 72 M	*300 FH* *180 D*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
62/30/00/000/000/087 **Main rotor mast - Upper housing** Detailed check. DI	*AMM 62-31-00, 6-14*	5400 FH // 72 M	*300 FH* *180 D*	
62/30/00/000/000/210 **Swashplate** Visual check of the guide and swivel bearing. Detailed check of the swashplate. VC|DI	*AMM 62-32-00, 6-1* *AMM 62-32-00, 6-2* *AMM 62-32-00, 6-3*	300 FH	*30 FH*	
62/30/00/000/000/311 **Scissor link** Play check. TCK	*AMM 62-33-00, 6-3*	600 FH // 24 M	*60 FH* *73 D*	
62/30/00/000/000/331 **Diapason scissor link** Play check. TCK	*AMM 62-33-00, 6-2*	300 FH // 24 M	*30 FH* *73 D*	
62/30/00/601/000/001 **Pitch change link** Check. GVI	*AMM 62-33-00, 6-1*	600 FH // 24 M	*60 FH* *73 D*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

63 - ROTOR DRIVE (S)

63-10 ENGINE-TO-M.G.B. COUPLING

63/10/00/000/000/011

Engine-to-MGB coupling - Hydraulic

AMM 63-11-00, 6-11		1200 FH	*120 FH*
AMM 63-11-00, 6-17	//	48 M	*146 D*

PRE MOD 079566

Check.

DI

63/10/00/000/000/081

Hydraulic pump - Bearing

AMM 63-11-00, 6-19		600 FH	*60 FH*
	//	24 M	*73 D*

PRE MOD 079566

Check.

DI

63/10/00/000/000/101

Engine-to-MGB coupling - MGB

AMM 63-11-00, 6-4		1200 FH	*120 FH*
AMM 63-11-00, 6-5	//	48 M	*146 D*
AMM 63-11-00, 6-6			
AMM 63-11-00, 6-7			
AMM 63-11-00, 6-8			
AMM 63-11-00, 6-9			
AMM 63-11-00, 6-1			

Check.

DI

63/10/00/000/000/106

Engine-to-MGB coupling - Hydraulic

AMM 63-11-00, 6-12		750 FH	*570 FH*
AMM 63-11-00, 6-16	//	48 M	*146 D*

Check.

DI

63/10/00/000/000/211

Hydraulic pump - Belt

AMM 63-11-00, 3-2		600 FH	*60 FH*
	//	24 M	*73 D*

POST MOD 079561 & PRE MOD 079566

Splines greasing.

LUB

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
63/10/00/000/000/221 **Hydraulic pump - Belt drive** PRE MOD 079566 Check splines. DI	*AMM 63-11-00, 6-3*	1200 FH // 48 M	*120 FH* *146 D*	
63/10/00/000/000/261 **Hydraulic pump - Bearing** POST MOD 079558 Greasing. LUB	*AMM 63-11-00, 3-1*	600 FH // 24 M	*60 FH* *73 D*	

63-20 MAIN GEARBOX

63/20/00/000/000/010 **Chip detector** Check. GVI	*AMM 60-00-00, 6-2*	100 FH	*10 FH*	
63/20/00/000/000/467 **Input bevel gear assembly** PRE MOD 077203 // PRE MOD 077205 Readjust the tightening torque of the rotor brake flange/input bevel gear assembly attachment nut. RTQ	*AMM 63-51-00, 6-3*	600 FH	*60 FH*	

63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/060 **MGB suspension cross bar** Check with removal. DI	*AMM 63-31-00, 6-1* *AMM 63-31-00, 6-3*	3000 FH // 72 M	*300 FH* *180 D*	

63-40 INDICATING SYSTEM

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
63/40/00/000/000/001 **Oil temperature warning system** Check. DRN|DI|FT	*AMM 63-42-00, 5-2* *AMM 63-42-00, 5-1*	// 2250 FH 72 M	*390 FH* *180 D*	

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
64/10/00/000/000/230 **Tail rotor blade** Tropical and damp atmosphere Salt-laden atmosphere Cleaning. CLN	*AMM 64-10-00, 3-1*	30 FH	*3 FH*	

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
65/10/00/000/000/011 **Tail rotor drive shaft** Maintenance. TCK|DI	*AMM 65-11-00, 6-3* *AMM 65-11-00, 6-6* *AMM 65-11-00, 6-7* *AMM 65-11-00, 6-1*	// 600 FH 24 M	*60 FH* *73 D*	

65-20 TAIL GEARBOX

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
65/20/00/000/000/000 **Chips detector** Check. GVI	*AMM 60-00-00, 6-2*	100 FH	*10 FH*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
65/20/00/000/000/303 **TRH pitch change unit** Check. DI	*AMM 65-21-00, 6-16* *AMM 65-21-00, 6-9*	600 FH // 24 M	*60 FH* *73 D*	
65/20/00/000/000/308 **TRH pitch change unit - Greasable bearing** 704A33-651-210 (-) POST MOD 076550 Check bearing for friction points and greasing. DI|LUB	*AMM 65-21-00, 3-1* *AMM 65-21-00, 6-8*	600 FH // 24 M	*60 FH* *73 D*	
65/20/00/601/000/000 **Hinge bearing** Check. GVI	*AMM 65-21-00, 6-10*	1200 FH // 24 M	*120 FH* *73 D*	
65/20/00/601/000/030 **Pitch control lever** 350A33-1525-01 (-) Check. DI	*AMM 65-21-00, 6-27*	600 FH // 24 M	*60 FH* *73 D*	
65/20/00/603/000/001 **Casing - Attachment bolt** Tightening torque check. TCK	*AMM 65-21-00, 6-18*	600 FH	*60 FH*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

67 - ROTOR FLIGHT CONTROLS

67-00 ROTORS FLIGHT CONTROLS

67/00/00/000/000/070 **Rotors flight control** Detailed check of flight controls. DI	*AMM 67-00-00, 6-2*	144 M	*180 D*	

67-10 MAIN ROTOR CONTROL

67/10/00/000/000/001 **Collective lever lock and "low pitch" locking tab** PRE MOD 073237 Check. GVI	*AMM 67-12-00, 6-1*	600 FH // 24 M	*60 FH* *73 D*	

67-20 TAIL ROTOR CONTROL

67/20/00/000/000/011 **Lower crossbeams of the yaw control bellcrank support** PRE MOD 073466 Visual check for cracks. GVI	*AMM 67-21-00, 6-1*	600 FH	*60 FH*	

67-30 SERVOCONTROL

67/30/00/404/000/000 **Load compensator assy - Lever** Check. DI	*AMM 67-34-00, 6-2*	750 FH // 48 M	*570 FH* *146 D*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
67/30/00/406/000/000 **Tail servocontrol - Hose** PRE MOD 074239 Replacement. DS	*AMM 67-33-00, 8-1*	5000 FH // 72 M	*300 FH* *180 D*	

76 - ENGINE CONTROLS

76-00 ENGINE CONTROLS

76/00/00/000/000/020 **Engine fuel flow control** PRE MOD 073261 ARRIEL 2B Setting the control. FT|RIG	*AMM 76-12-02, 5-1* *AMM 76-12-02, 5-3*	1200 FH // 48 M	*120 FH* *146 D*	

76-30 TWIST GRIP FUEL FLOW CONTROL

76/30/12/000/000/000 **Twist grip - Load spring** 350A27-3249-24 (-) Engine ARRIEL 2B1. Replacement of the load spring. DS	*AMM 76-12-03, 4-2*	1200 FH	*120 FH*	
76/30/12/000/000/010 **Twist grip - Load spring** 350A27-3249-24 (-) Engine ARRIEL 2D. Replacement of the load spring. DS	*AMM 76-12-04, 4-2*	1200 FH	*120 FH*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

77 - ENGINE INDICATING

77-00 ENGINE INDICATING

77/00/00/000/000/010 **Engine parameter indicators** Engine ARRIEL 2D. Functional test. FT	*AMM 77-00-00, 5-1*	144 M	*180 D*	
77/00/00/501/000/000 **FADEC unit** FADEC test channel "B". Engine ARRIEL 2B1. FT	*AMM 73-20-00, 5-1*	600 FH	*60 FH*	

80 - ENGINE STARTING

80-00 STARTING

80/00/00/402/000/080 **Starter generator** 150SG122Q (704A46101020) 200SGL130Q (704A46101023) SKURKA. Checking generator, brushes, dampening system and splines. DI|TCK	*AMM 80-00-01, 6-1* *AMM 80-00-01, 6-2* *AMM 80-00-01, 6-4* *AMM 80-00-01, 6-5*	300 FH	*30 FH*	
80/00/02/000/000/120 **Starter generator** 515-030 (704A46101018) 524-031 (704A46101011) THALES. Checking generator, brushes and splines. DI	*AMM 80-00-02, 6-1* *AMM 80-00-02, 6-2* *AMM 80-00-02, 6-3*	600 FH	*60 FH*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
80/00/02/000/000/220 **Starter generator** 515-030 524-031 PRE MOD TU211 THALES. Check of radial play. DI	*AMM 80-00-02, 6-4* (704A46101018) (704A46101011)	300 FH	*30 FH*	
80/00/02/000/000/230 **Starter generator** 515-030 524-031 POST MOD TU211 THALES. Check of radial play. DI	*AMM 80-00-02, 6-4* (704A46101018) (704A46101011)	600 FH	*60 FH*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-26-00

D.U.	TITLE
ATA 28	FUEL SYSTEM
ATA 53	FUSELAGE
ATA 55	STABILIZER
ATA 62	ROTOR (S)
ATA 63	ROTOR DRIVE (S)
ATA 64	TAIL ROTOR
ATA 65	TAIL ROTOR DRIVE
ATA 67	ROTOR FLIGHT CONTROLS
ATA 80	ENGINE STARTING

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

28 - FUEL SYSTEM

28-00 FUEL SYSTEM

28/00/00/000/000/003

Fuel tank

AMM 28-11-01, 5-1	PO	2 FH	*8 FH*	

Energy absorption fuel tank.
Each time after the component is installed.
Adjustment - Strap tension.

RTQ

28/00/00/502/000/020

Fuel tank

AMM 28-11-00, 5-1	PO	2 FH	*8 FH*	

Each time after the component is installed.
Adjustment - Strap tension.

RTQ

28/00/00/504/000/000

Cradle fuel tank

AMM 28-11-00, 6-3	PO	30 FH	*5 FH*	

POST MOD 074705

Each time after the component is installed.
Tightening torque check.

TCK

53 - FUSELAGE

53-10 PRIMARY STRUCTURE

53/10/00/000/000/020

Tail boom-to-fuselage junction

AMM 53-31-00, 6-1	PO	30 FH	*5 FH*	
	&	600 FH	*10 FH*	

Each time after the component is installed.
Check.

TCK

53/10/00/000/000/065

Cabin anti-vibrator mount

AMM 53-32-00, 6-1	PO	2 FH	*8 FH*	

Each time after the component is installed.
Readjustment of the tightening torque load on the attachment bolts blade/mount.

RTQ

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

55 - STABILIZER

55-20 VERTICAL FINS ASSY

55/20/00/000/000/020

Upper and lower fin

AMM 55-20-00, 6-4	PO	2 FH	*8 FH*
AMM 55-20-00, 6-5	&	10 FH	*10 FH*

Each time after the component is installed.
Readjustement of torque value of the screws attaching the fin spars to the frame and of the screws attaching the fins to the tail boom.

RTQ

62 - ROTOR (S)

62-10 MAIN ROTOR BLADE

62/10/00/000/000/000

Skin

AMM 62-11-00, 6-3	PO	30 FH	*3 FH*

After the introduction to service of a new, overhauled or repaired component,
Check the skin in the area between 900 mm and the blade tip.

GVI

62/10/20/601/000/060

Main rotor blade

AMM 62-11-00, 6-1	PO	30 FH	*3 FH*
	&	150 FH	*15 FH*
	&	300 FH	*15 FH*
	&	450 FH	*15 FH*

After the introduction to service of a new, overhauled or repaired component,
Check.

DI

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

62-20 MAIN ROTOR HEAD

62/20/00/000/000/060

MRH

	AMM 62-21-00, 6-19 *AMM 62-21-00, 6-20* *AMM 62-33-00, 6-6*	PO	2 FH	*8 FH*

355A31-0001-03 (-)
355A31-0001-04 (-)
355A31-0001-06 (-)
355A31-0001-07 (-)
355A31-0001-08 (-)
355A31-0001-09 (-)
355A31-0002-00 (-)
355A31-0002-01 (-)
355A31-0002-02 (-)

Each time after the component is installed.
Tightening torque check: mast/hub coupling, spherical thrust bearing/sleeves, frequency adapters/sleeve, pitch change rod attachment bolts.

TCK

62-30 MAIN ROTOR MAST

62/30/00/000/000/025

Main rotor mast

	AMM 62-31-00, 6-8 *AMM 62-31-00, 6-9* *AMM 62-31-00, 6-10* *AMM 62-31-00, 6-11*	PO	2 FH	*8 FH*

Each time after the component is installed.
Tightening torque check:
- upper casing/flared housing attachment bolts (POST MOD 076120),
- flared housing/MGB main casing attachment bolts,
- swashplate guide-to-upper casing attachment bolts,
- scissors drive coupling.

TCK

62/30/00/000/000/026

Main rotor mast

	AMM 62-33-00, 6-7	PO	2 FH	*8 FH*

Each time after the equipment is installed.
Readjustment of the tightening torque:
- of the scissors hinge attachments (link between rotating scissors / scissors drive - link between non-rotating scissors / swashplate guide - connection between scissors links),
- of the delta-shaped ball joint attachments with the swashplates.

RTQ

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

63 - ROTOR DRIVE (S)

63-20 MAIN GEARBOX

63/20/00/000/000/000

MGB - Magnetic plug with electric detection system

AMM 60-00-00, 6-2	PO	10 FH	*2 FH*
	&	20 FH	*3 FH*
	&	30 FH	*5 FH*

After the introduction to service of a new, overhauled or repaired component,
After installation of a component removed from the same helicopter,
Check to be performed during the P check nearest the due time in question.

GVI

63/20/00/000/000/020

Mineral/Synthetic oil

AMM 12-10-00, 3-1	PO	30 FH	*5 FH*

After the introduction to service of a new, overhauled or repaired component,
Oil change.
Refer to WC 12-10-00, 3-1 (AMM) for change in oil standard.

DRN

63/20/00/000/000/050

Spectrometric Oil Analysis Program (SOAP)

AMM 60-00-00, 6-1	PO	1 FH	*2 FH*

After the introduction to service of a new, overhauled or repaired component,
First sampling on completion of the first ground run.
Oil monitoring using SOAP is optional.

SDI

63/20/00/000/000/055

Spectrometric Oil Analysis Program (SOAP)

AMM 60-00-00, 6-1	PO	10 FH	*2 FH*
	&	25 FH	*3 FH*
	&	50 FH	*5 FH*

After the introduction to service of a new, overhauled or repaired component,
The sample must be taken during the inspection nearest to each due time.
Oil monitoring using SOAP is optional.

SDI

63/20/00/000/000/070

MGB - Magnetic plug with non-electric detection system

AMM 60-00-00, 6-2	PO	30 FH	*5 FH*

After the introduction to service of a new, overhauled or repaired component,
Check after installation.

GVI

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial

63-30 MGB MOUNT AND ATTACHMENT

63/30/00/000/000/000

Suspension bar

AMM 63-32-00, 6-5 PO 2 FH *8 FH*

Each time after the component is installed.
Tightening torque check.

TCK

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

64/10/00/000/000/010

Tail rotor blade

AMM 64-10-00, 6-1 PO 150 FH *15 FH*

After the introduction to service of a new, overhauled or repaired component.
Check.

DI

64/10/00/000/000/180

Tracking fingers

AMM 64-10-00, 8-3 PO 1 FH *2 FH*

After the introduction to service of a new, overhauled or repaired component,
After installation of a component originating from another helicopter,
Mandatory check after first flight following installation.
Visual check the safetying of the tracking finger lock plate.

GVI

64/10/00/000/000/185

Tracking fingers

AMM 64-10-00, 8-3 PO 10 FH *2 FH*

After the introduction to service of a new, overhauled or repaired component,
After installation of a component originating from another helicopter,
Visual check the safetying of the tracking finger lock plate.

GVI

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

65 - TAIL ROTOR DRIVE

65-10 TAIL ROTOR DRIVE SHAFT

65/10/00/000/000/030

Tail rotor drive shaft

AMM 65-11-00, 5-1	PO	150 FH	*15 FH*

Each time after the component is installed.
Balance check after each removal/installation the shaft.

FT|GR

65/10/00/000/000/170

Forward shaft

AMM 65-11-00, 4-2	PO	2 FH	*8 FH*

PRE MOD 079052

Each time after the component is installed.
Play check between the flange and the fairing.

GVI

65-20 TAIL GEARBOX

65/20/00/000/000/010

TGB - Magnetic plug with electric detection system

AMM 60-00-00, 6-2	PO	10 FH	*2 FH*
	&	20 FH	*3 FH*
	&	30 FH	*5 FH*

After the introduction to service of a new, overhauled or repaired component,
Check to be performed during the P check nearest the due time in question.

GVI

65/20/00/000/000/040

Spectrometric Oil Analysis Program (SOAP)

AMM 60-00-00, 6-1	PO	1 FH	*2 FH*

After the introduction to service of a new, overhauled or repaired component,
First sampling on completion of the first ground run.
Oil monitoring using SOAP is optional.

SDI

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial

65/20/00/000/000/045

Spectrometric Oil Analysis Program (SOAP)

AMM 60-00-00, 6-1	PO	10 FH	*2 FH*
	&	25 FH	*3 FH*
	&	50 FH	*5 FH*

After the introduction to service of a new, overhauled or repaired component,
The sample must be taken during the inspection nearest to each due time.
Oil monitoring using SOAP is optional.

SDI

65/20/00/000/000/060

TGB

AMM 65-21-00, 6-23	PO	150 FH	*15 FH*

After the introduction to service of a new, overhauled or repaired component.
Oil change.
Replacement of the running-in oil by the operating oil.

DRN

65/20/00/000/000/070

TGB

AMM 65-21-00, 6-22	PO	2 FH	*8 FH*

After the introduction to service of a new, overhauled or repaired component.
Visual check and oil change.

GVI|DRN

65/20/00/000/000/080

Attachment bolt

AMM 65-21-00, 6-18	PO	2 FH	*8 FH*

Each time after the component is installed.
Tightening torque check.

TCK

65/20/00/000/000/550

TGB - Pitch rod

AMM 65-21-00, 6-25	PO	2 FH	*8 FH*

Each time after the component is installed.
Readjustment of the tightening torque check.
-pitch change rod/pitch lever attachment bolts.
-Anti-rotation bush attachment bolts.

RTQ

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

67 - ROTOR FLIGHT CONTROLS

67-30 SERVOCONTROL

67/30/00/402/000/050

Main servocontrol

	AMM 67-32-00, 6-1	PO	15 FH	*3 FH*
AC64182	(704A44831062)			

After the introduction to service of a new, overhauled or repaired component,
Loads check.

FT

67/30/00/402/000/080

Main servocontrol

	AMM 67-31-00, 6-4 *AMM 67-32-00, 6-4*	PO	2 FH	*8 FH*

Each time after the component is installed.
Readjustment of the tightening torque of attaching bolts.

RTQ

67/30/00/403/000/040

Tail servocontrol

	AMM 67-33-00, 6-2	PO	15 FH	*3 FH*
AC66436	(704A44831063)			

After the introduction to service of a new, overhauled or repaired component,
Loads check.

FT

80 - ENGINE STARTING

80-00 STARTING

80/00/00/402/000/115

Starter generator

	AMM 80-00-01, 6-1 *AMM 80-00-01, 6-3* *AMM 80-00-01, 6-5* *AMM 80-00-01, 6-6*	PO	300 FH	*30 FH*
150SG122Q-4	(704A46101027)			
200SGL130Q-4	(704A46101026)			

SKURKA.
After the introduction to service of a new or overhauled component.
Helicopter equipped with VEMD.
Checking generator, brushes, splines and manifold.

DI

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-30-00

BFF
TA
ALF

D.U.	TITLE
ATA 05	TIME LIMITS/MAINTENANCE CHECKS

Task Number Description/ Remarks	Documentation	*Margin*	Initial

05 - TIME LIMITS/MAINTENANCE CHECKS

05-21 DAILY CHECK

05/21/00/604/000/000 **Check before the first flight of the day (BFF) - Optional equipments** *AMM 05-40-00, 6-9* *0* Note: Operations can be carried out by a crew member. VC		
05/21/00/606/000/000 **Turnaround check (TA) - Optional equipments** *AMM 05-40-00, 6-5* *0* Note: Operations can be carried out by a crew member. VC		
05/21/00/607/000/000 **Check after the last flight of the day (ALF) - Optional equipments** *AMM 05-40-00, 6-10* *0* Note: Operations can be carried out by a crew member. VC		

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-30-02

10 FH // 7 D

D.U.	TITLE
ATA 05	TIME LIMITS/MAINTENANCE CHECKS

Task Number Description/ Remarks	Documentation	*Margin*	Initial

05 - TIME LIMITS/MAINTENANCE CHECKS

05-21 DAILY CHECK

05/21/00/000/000/010 **P-check - Optional equipments** *AMM 05-40-00, 6-8* *0* *0* Note: Operations can be carried out by a crew member. GVI	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-31-00

150 FH // 12 M

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 53	FUSELAGE

Task Number Description/ Remarks	Documentation	*Margin*	Initial

21 - AIR CONDITIONING

21-51 AIR CONDITIONING

21/51/20/000/000/025 **Freon air conditioning system** Visual inspection of the system. GVI	*AMM 21-51-10, 6-1*	*15 FH* *36 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-81 OPT - SWING AND ACCESSORY

25/81/00/000/000/070 **Cargo swing Onboard - Fixed part** POST MOD OP20070 Check. GVI	*AMM 25-91-02, 6-1*	*15 FH* *36 D*	

53 - FUSELAGE

53-10 PRIMARY STRUCTURE

53/10/00/000/000/200 **Tail rotor drive shaft aerodynamic cowling** POST OP 4860 Check. DI	*AMM 53-31-00, 6-9*	*15 FH* *36 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-31-01

150 FH

D.U.	TITLE
ATA 47	WEAPONS ELECTRONICS
ATA 71	POWER PLANT

Task Number Description/ Remarks	Documentation	*Margin*	Initial

47 - WEAPONS ELECTRONICS

47-50 FLIR INSTALLATION

47/50/10/000/000/030 **Flir - Turret - QDM** *AMM 47-50-10, 2-1* *15 FH* STAR SAFIRE II Cleaning CLN	

71 - POWER PLANT

71-61 OPT - SAND-FILTER

71/61/01/601/000/010 **Sand filter** *AMM 71-61-10, 5-1* *15 FH* Checking the sand filter installation indication on the VEMD. FT	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-31-02

12 M

D.U.	TITLE
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 34	NAVIGATION

Task Number Description/ Remarks	Documentation	*Margin*	Initial

25 - EQUIPMENTS AND FURNISHINGS

25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/00/000/000/010 **Emergency floatation gear** *CMM 25-69-08 CHECK § E.(1)* Maintenance. Maintenance interval counting starts with: - EqDD if EqDD occurs less than 3Y after manufacturing date, - Manufacturing date + 3Y if EqDD occurs 3Y or more after manufacturing date. For EqDD explanation, see USE OF THE MSM § 5.2.3. DI|FT		*36 D*	
25/62/00/000/000/070 **Emergency floatation gear frangible discs** *AMM 25-67-00, 5-2* Test. Check to be performed on and from initial installation. DI		*36 D*	
25/62/00/000/000/080 **Cylinder** *CMM 25-69-11 CHECK § D* 200740-2 (704A42693012) Cylinders weighing operation or pressure check. Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0 and 218570-0. Interval between 2 weighing operations or pressure check. Maintenance interval counting starts with: - EqDD if EqDD occurs less than 5Y after manufacturing date, - Manufacturing date + 5Y if EqDD occurs 5Y or more after manufacturing date. For EqDD explanation, see USE OF THE MSM § 5.2.3. DI|WGH		*36 D*	
25/62/00/000/000/100 **Emergency floatation gear** *CMM 25-69-40 CHECK § 4* Maintenance. Maintenance interval counting starts with: - EqDD if EqDD occurs less than 3Y after manufacturing date, - Manufacturing date + 3Y if EqDD occurs 3Y or more after manufacturing date. For EqDD explanation, see USE OF THE MSM § 5.2.3. DI|FT		*36 D*	

Task Number Description/ Remarks	Documentation	Margin	Initial
25/62/00/000/000/180 **Front and rear attachment brackets** 158172 (-) 158173 (-) 158288 (-) 158289 (-) System check. DI	*AMM 25-67-00, 6-2*	*36 D*	

25-69 LIFE-RAFT

25/69/10/401/000/010 **Life-raft** 210155-X (-) Check, life raft tightness testing, cylinder weighing. DI|FT|WGH	*CMM 25-64-01*	*36 D*	

25-81 OPT - SWING AND ACCESSORY

25/81/12/000/000/030 **Onboard load release unit** Clean and check. CLN|GVI	*AMM 25-92-00, 6-2*	*36 D*	

34 - NAVIGATION

34-25 GYRO HORIZON

34/25/00/000/000/010 **Stand-by horizon - Stand-by battery** EE0033 (704A46140000) EE0033A (704A46140000) Check and charge the battery. FT	*AMM 24-33-00, 5-2*	*36 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-32-00

750 FH // 24 M

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 22	AUTO FLIGHT
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 30	ICE AND RAIN PROTECTION
ATA 53	FUSELAGE
ATA 64	TAIL ROTOR
ATA 67	ROTOR FLIGHT CONTROLS
ATA 71	POWER PLANT

Task Number Description/ Remarks	Documentation	*Margin*	Initial

21 - AIR CONDITIONING

21-51 AIR CONDITIONING

21/51/20/000/000/031 **Freon air conditioning system** Detailed inspection of the installation. DI|FT|CLN	*AMM 21-51-10, 6-2*	*75 FH* *73 D*	

22 - AUTO FLIGHT

22-10 OPT - TRIM ACTUATOR DETECTION

22/10/00/000/000/021 **Autopilot system** System check. DI	*AMM 22-00-02, 6-1*	*75 FH* *73 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-61 OPT - WIRE STRIKE PROTECTION SYSTEM

25/61/00/000/000/001 **Wire strike protection system** Check. GVI	*AMM 25-61-00, 6-1*	*75 FH* *73 D*	

25-62 OPT - EMERGENCY FLOATATION GEAR

Task Number Description/ Remarks	Documentation	Margin	Initial
25/62/00/000/000/062 **Emergency floatation gear** Check and functional test. GVI	*AMM 25-67-00, 6-1*	*75 FH* *73 D*	

25-63 HOISTS ELECTRICAL

25/63/00/601/000/000 **Electric hoist** LUCAS AIR EQUIPEMENT/TRW/GOODRICH/ERC BREEZE. System check. DI	*AMM 25-63-10, 6-1* *AMM 25-63-11, 6-1*	*75 FH* *73 D*	

25-81 OPT - SWING AND ACCESSORY

25/81/00/000/000/066 **Load release unit hook** 14027-4 (704A41811013) 14027-7 (704A41811030) S1609-6 (704A41811027) Dynamometer calibration. RIG	*AMM 25-91-00, 5-3*	*75 FH* *73 D*	
25/81/11/000/000/020 **Load release unit hook** AS21-5-7 (704A41811029) Dynamometer calibration. RIG	*AMM 25-91-01, 5-3*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
25/81/12/000/000/051 **Onboard load release unit** Dynamometer calibration. RIG	*AMM 25-91-01, 5-3*	*75 FH* *73 D*	

25-96 ELECTRICAL REAR VIEW MIRROR

25/96/00/000/000/011 **Electrical rear view mirror** Check. DI	*AMM 25-96-00, 6-1*	*75 FH* *73 D*	

30 - ICE AND RAIN PROTECTION

30-42 WINDSCREEN WIPER

30/42/00/601/000/001 **Windshield wiper arm - Attachment** Check for absence of axial and vertical play. Lubrication of the windshield wiper arm drive spindle. GVI|LUB	*AMM 30-42-00, 6-1*	*75 FH* *73 D*	

53 - FUSELAGE

53-10 PRIMARY STRUCTURE

Task Number Description/ Remarks	Documentation	*Margin*	Initial
53/10/00/000/000/076 **Box** POST MOD 073325 Check. DI	*AMM 53-32-00, 6-2*	*75 FH* *73 D*	

64 - TAIL ROTOR

64-10 TAIL ROTOR BLADE

64/10/00/000/000/272 **Protector** POST MOD OP0478 Tightening torque check. TCK	*AMM 32-70-00, 6-1*	*75 FH* *73 D*	

67 - ROTOR FLIGHT CONTROLS

67-30 SERVOCONTROL

67/30/00/402/000/015 **Main servocontrol** POST OP3082 or OP3346: Optional installation of double hydraulic power system. Check for correct operation of the load detector of the RH servocontrol. FT	*AMM 67-31-00, 5-1*	*75 FH* *73 D*	
67/30/00/501/000/000 **Load compensator system** Test. POST OP3082 or OP3346: Installation of a twin hydraulic power system. FT	*AMM 67-34-00, 5-1* *AMM 67-34-00, 6-1*	*75 FH* *73 D*	

Task Number Description/ Remarks	Documentation	*Margin*	Initial
67/30/00/602/000/000 **Servocontrol - Twin hydraulic system** Play check. TCK	*AMM 67-31-00, 6-2*	*75 FH* *73 D*	

71 - POWER PLANT

71-61 OPT - SAND-FILTER

71/61/01/601/000/001 **Sand filter** System check. GVI|FT	*AMM 71-61-10, 6-1*	*75 FH* *73 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-32-01

750 FH

D.U.	TITLE
ATA 33	LIGHTING SYSTEM

Task Number Description/ Remarks	Documentation	*Margin*	Initial

33 - LIGHTING SYSTEM

33-45 OPT - SEARCHLIGHT

33/45/03/000/000/041 **Searchlight** SPECTROLAB SX16. Equipment test. FT	*AMM 33-45-03, 5-1*	*75 FH*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-32-02

24 M

D.U.	TITLE
ATA 31	IND./RECORDING SYSTEMS
ATA 35	OXYGEN

Task Number Description/ Remarks	Documentation	*Margin*	Initial

31 - IND./RECORDING SYSTEMS

31-32 OPT - INDICATING AND RECORDING SYSTEMS

31/32/00/000/000/010 **Functional test of flight data recording** 1000-1710-11 (706A45381041) FT	*AMM 31-32-01, 5-1*	*0*	
31/32/00/000/000/020 **Functional test of FDRS power source** 1000-1710-11 (706A45381041) FT	*AMM 31-32-01, 5-2*	*73 D*	

35 - OXYGEN

35-30 OXYGEN

35/30/00/000/000/025 **Oxygen mask** Check. GVI	*AMM 35-00-00, 6-1*	*73 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-33-00

1200 FH // 48 M

D.U.
TITLE

Task Number Description/ Remarks	Documentation	*Margin*	Initial

DU TO BE REMOVED FROM THE MANUAL

05-35-00

D.U.	TITLE
ATA 21	AIR CONDITIONING
ATA 25	EQUIPMENTS AND FURNISHINGS
ATA 28	FUEL SYSTEM
ATA 33	LIGHTING SYSTEM
ATA 35	OXYGEN
ATA 47	WEAPONS ELECTRONICS

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

21 - AIR CONDITIONING

21-51 AIR CONDITIONING

21/51/20/000/000/040 **Freon air conditioning system** Check for correct operation if not used during 1 month. FT	*AMM 21-51-10, 5-1*	1 M	*3 D*	

25 - EQUIPMENTS AND FURNISHINGS

25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/00/000/000/061 **Emergency floatation gear** Check and functional test. FT	*AMM 25-67-00, 5-1*	600 FH // 24 M	*60 FH* *73 D*	
25/62/10/401/000/110 **Cylinder** 200740-2 (704A42693012) Proof test. Fitted to the floats: MP/N 200733-0, 200734-0, 218569-0, 218570-0. Interval starting from the date of manufacture then from the date of the last proof test. 1 OPC = 1 utilization (ditching or untimely percussion of the inflation cylinder). To be returned to the manufacturer or to an approved workshop. NPT		60 M // 1 OPC	*0* *0*	

25-63 HOISTS ELECTRICAL

25/63/00/000/000/010 **Electric hoist 136 kg - Electric unit** LUCAS AIR EQUIPEMENT/TRW/GOODRICH. Resistance check. DI	*CMM 25-64-97*	100 HC	*10 HC*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
25/63/00/000/000/015 **Electric hoist 136 kg - Squib**	*AMM 25-63-10, 6-2*	6 M	*18 D*	
LUCAS AIR EQUIPEMENT/TRW/GOODRICH. Check. DI				
25/63/00/000/000/020 **Electric hoist 136 kg - Guiding fork**	*CMM 25-64-97*	750 HC	*75 HC*	
709595 (-) 709595-100 (-) LUCAS AIR EQUIPEMENT/TRW/GOODRICH. Replacement. DS				
25/63/00/000/000/024 **Electric hoist**	*CMM 25-64-97*	6 M	*18 D*	
LUCAS AIR EQUIPEMENT/TRW/GOODRICH. Check the anti-corrosion protection of the cable. GVI				
25/63/00/000/000/025 **Electric hoist**	*CMM 25-69-61*	6 M	*18 D*	
ERC BREEZE. Check. DI|FT				
25/63/00/000/000/060 **Electric hoist 136 kg**	*CMM 25-64-97*	6 M // 50 HC	*0* *0*	
LUCAS AIR EQUIPEMENT/TRW/GOODRICH. Check: - Operation of the limit switches. - The condition of the cable. - The unwinding and the winding of the cable. - The hook. - Lubrification/Lubrification if necessary. GVI|FT				

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial
25/63/00/000/000/070 **Electric hoist 450 lbs** BREEZE. Check that the hook rotates freely, check the condition of the cable, check the operation of the cable extraction mechanism. DI|FT	*CMM 25-61-00*	50 HC	*0*	
25/63/00/602/000/000 **Electric hoist - Pyrotechnic cartridge** ERC BREEZE. Check. DI	*AMM 25-63-10, 6-2*	6 M	*0*	
25/63/00/602/000/010 **Electric hoist - Cable** ERC BREEZE. Check. DI|FT	*CMM 25-69-61*	6 M // 50 HC	*18 D* *5 HC*	

25-69 LIFE-RAFT

25/69/10/401/000/000 **Life-raft** 206994-0 (-) Check, life raft tightness testing, cylinder weighing. DI|FT|WGH	*CMM 25-69-71*	6 M	*18 D*	
25/69/10/401/000/020 **Cylinder** Cylinders to be proof tested by the manufacturer or by an approved workshop. Intervals counted from the date of the last proof test. Fitted to the assemblies: MP/N 206994-0, 210155-X. NPT	*AMM 25-69-10, 4-1*	60 M	*0*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

25-80 OPT - SLING AND ACCESSORY

25/80/00/000/000/007 **Load release unit hook** 17149-1 (704A41811012) Inspection and test. GVI|RIG|FT	*AMM 25-92-00, 6-1*	24 M // 500 SC	*73 D* *50 SC*	
25/80/00/000/000/011 **Load release unit hook** 17149-1 (704A41811012) Dynamometer calibration. RIG	*AMM 25-92-00, 5-3*	600 FH // 24 M	*60 FH* *73 D*	

25-81 OPT - SWING AND ACCESSORY

25/81/00/000/000/060 **Control mechanical release** Functional test. FT	*AMM 25-91-01, 5-1*	7 D	*0*	
25/81/00/000/000/080 **Cargo swing Onboard - Fixed part** POST MOD OP20070 Detailed check. DI	*AMM 25-91-02, 6-2*	1200 FH // 48 M	*120 FH* *146 D*	
25/81/00/000/000/090 **Cargo swing Onboard - Fixed part** POST MOD OP20070 Cleaning. CLN	*AMM 25-91-02, 7-1*	1 M	*0*	

Task Number Description/ Remarks	Documentation	Interval	Margin	Initial
25/81/00/000/000/100 **Cargo swing Onboard - Fixed part** POST MOD OP20070 Tropical and damp atmosphere Salt-laden atmosphere Sand-laden and/or dust-laden atmosphere Cleaning. CLN	*AMM 25-91-02, 7-1*	15 D	*0*	
25/81/11/000/000/005 **Frame, 1400 kg cargo swing** PRE MOD 072820 Check for elongation of holes. GVI	*AMM 25-91-01, 6-1*	100 FH	*10 FH*	
25/81/11/000/000/010 **Load release unit hook** AS21-5-7 (704A41811029) S1609-6 (704A41811027) Check and test. GVI|RIG|FT	*AMM 25-91-01, 6-1* *AMM 25-91-01, 6-2* //	24 M 500 SC	*73 D* *50 SC*	
25/81/12/000/000/020 **Onboard load release unit** Salt-laden atmosphere Clean and check. CLN|GVI	*AMM 25-92-00, 6-2*	1 M	*3 D*	
25/81/12/000/000/040 **Onboard load release unit** OPH = Operating hours logged with underslung loads. Check and test. GVI|RIG|FT	*AMM 25-91-01, 6-1* *AMM 25-91-01, 6-2* //	24 M 350 OPH	*73 D* *35 OPH*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

28 - FUEL SYSTEM

28-92 OPT - FERRY FUEL TANK

28/92/00/000/000/000 **Ferry fuel tank** 330A87-1310-04 Checking the electrical bonding. DI	*AMM 28-91-00, 4-1* (-)	96 M	*180 D*	

33 - LIGHTING SYSTEM

33-45 OPT - SEARCHLIGHT

33/45/03/000/000/020 **Searchlight** SPECTROLAB SX16. Check. CLN|DI	*AMM 33-45-03, 6-2*	300 FH	*30 FH*	
33/45/03/000/000/030 **Searchlight** SPECTROLAB SX16. Check. GVI	*AMM 33-45-03, 6-1*	100 FH	*10 FH*	
33/45/03/000/000/051 **Searchlight - Fan** SPECTROLAB SX16. Check. DI	*CMM 33-45-96*	600 FH	*60 FH*	
33/45/03/000/000/061 **Searchlight - Junction box** SPECTROLAB SX16. Check. DI	*CMM 33-45-96*	600 FH	*60 FH*	

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

35 - OXYGEN

35-30 OXYGEN

35/30/01/000/000/020 **Oxygen cylinder** Installation check. CLN|DI	*AMM 35-00-00, 6-1*	1 M	*3 D*	

47 - WEAPONS ELECTRONICS

47-50 FLIR INSTALLATION

47/50/10/000/000/000 **Flir** Star SAFIRE II. Bleeding and nitrogen filling of the turret. SVC	*AMM 47-50-10, 3-2*	2 M	*6 D*	
47/50/10/000/000/020 **Flir** Star SAFIRE II. Turret desiccant cartridge check. VC	*AMM 47-50-10, 3-1*	1 M	*3 D*	
47/50/10/000/000/040 **Flir - Turret - QDM** STAR SAFIRE II. Visual check. GVI	*AMM 47-50-10, 6-1*	1200 FH // 12 M	*120 FH* *36 D*	

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit

05-36-00

D.U.	TITLE
ATA 25	EQUIPMENTS AND FURNISHINGS

Task Number Description/ Remarks	Documentation	Interval	*Margin*	Initial

25 - EQUIPMENTS AND FURNISHINGS

25-62 OPT - EMERGENCY FLOATATION GEAR

25/62/00/000/000/030

Emergency floatation gear

CMM 25-69-08	PO	60 M	*180 D*
CHECK § E.(2)	&	96 M	*180 D*

Detailed and proof pressure check.
Maintenance interval counting starts with:
- EqDD if EqDD occurs less than 3Y after manufacturing date,
- Manufacturing date + 3Y if EqDD occurs 3Y or more after manfacturing date.

If a major inspection is anticipated, the following inspections will have to be anticipated to respecting the 3 year interval between each inspection.
For EqDD explanation, see USE OF THE MSM § 5.2.3.

DI|NPT

25/62/00/000/000/140

Emergency floatation gear

CMM 25-69-40	PO	60 M	*180 D*
CHECK § 5	&	96 M	*180 D*

Detailed and proof pressure check.
Maintenance interval counting starts with:
- EqDD if EqDD occurs less than 3Y after manufacturing date,
- Manufacturing date + 3Y if EqDD occurs 3Y or more after manufacturing date.

If a major inspection is anticipated, the following inspections will have to be anticipated to respecting the 3 year interval between each inspection.
For EqDD explanation, see USE OF THE MSM § 5.2.3.

DI|NPT

Mechanic	Date	Inspector	Date
Name :	Signature :	Stamp :	Signature :

End of the Document Unit