# CHAPTER

# 11

# PLACARDS AND MARKINGS

## CHAPTER 11
## PLACARDS AND MARKINGS


| Subject/Page | Date | COC |
|---|---|---|
| 11-EFFECTIVE PAGES | | |
| 1 thru 2 | Sep 15/2026 | |
| 11-CONTENTS | | |
| 1 | May 15/2024 | |
| 2 | May 15/2024 | |
| 11-00-00 | | |
| 201 | May 15/2024 | |
| 202 | BLANK | |
| 11-21-13 | | |
| 201 | May 15/2024 | |
| 202 | Jan 15/2025 | |
| 203 | Jan 15/2025 | |
| 204 | Jan 15/2025 | |
| 11-21-16 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 11-21-20 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 11-23-01 | | |
| 201 | May 15/2024 | |
| R 202 | Sep 15/2026 | |
| R 203 | Sep 15/2026 | |
| R 204 | Sep 15/2026 | |
| R 205 | Sep 15/2026 | |
| R 206 | Sep 15/2026 | |
| R 207 | Sep 15/2026 | |
| R 208 | Sep 15/2026 | |
| A 209 | Sep 15/2026 | |
| A 210 | BLANK | |
| 11-24-01 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 11-24-01 (cont) | | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 11-24-04 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 11-25-03 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| R 204 | Sep 15/2026 | |
| 205 | Jan 15/2025 | |
| 206 | BLANK | |
| 11-30-01 | | |
| 201 | May 15/2024 | |
| R 202 | Sep 15/2026 | |
| R 203 | Sep 15/2026 | |
| R 204 | Sep 15/2026 | |
| R 205 | Sep 15/2026 | |
| R 206 | Sep 15/2026 | |
| R 207 | Sep 15/2026 | |
| R 208 | Sep 15/2026 | |
| R 209 | Sep 15/2026 | |
| R 210 | Sep 15/2026 | |
| R 211 | Sep 15/2026 | |
| R 212 | Sep 15/2026 | |
| A 213 | Sep 15/2026 | |
| A 214 | Sep 15/2026 | |
| A 215 | Sep 15/2026 | |
| A 216 | BLANK | |
| 11-30-02 | | |
| 201 | May 15/2024 | |
| R 202 | Sep 15/2026 | |
| 11-30-02 (cont) | | |
| 203 | Jan 15/2026 | |
| 204 | Jan 15/2026 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | Sep 15/2024 | |
| 11-30-03 | | |
| 201 | May 15/2024 | |
| 202 | Jan 15/2026 | |
| 203 | May 15/2024 | |
| 204 | Jan 15/2026 | |
| R 205 | Sep 15/2026 | |
| 206 | Jan 15/2026 | |
| 207 | Jan 15/2026 | |
| 208 | Jan 15/2026 | |
| 209 | Jan 15/2026 | |
| 210 | Jan 15/2026 | |
| 211 | Jan 15/2026 | |
| 212 | Jan 15/2026 | |
| 213 | Jan 15/2026 | |
| 214 | Jan 15/2026 | |
| 215 | Jan 15/2026 | |
| 216 | Jan 15/2026 | |
| 217 | Jan 15/2026 | |
| 218 | Jan 15/2026 | |
| 219 | Jan 15/2026 | |
| 220 | Jan 15/2026 | |
| 221 | Jan 15/2026 | |
| R 222 | Sep 15/2026 | |
| 223 | Jan 15/2026 | |
| 224 | Jan 15/2026 | |
| 225 | Jan 15/2026 | |
| 226 | Jan 15/2026 | |
| 227 | Jan 15/2026 | |
| 228 | Jan 15/2026 | |
| 229 | Jan 15/2026 | |


A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 11-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 11
## PLACARDS AND MARKINGS


| Subject/Page | Date | COC |
|---|---|---|
| 11-30-03 (cont) | | |
| 230 | Jan 15/2026 | |
| R 231 | Sep 15/2026 | |
| 232 | Jan 15/2026 | |
| 233 | Jan 15/2026 | |
| 234 | Jan 15/2026 | |
| R 235 | Sep 15/2026 | |
| R 236 | Sep 15/2026 | |
| R 237 | Sep 15/2026 | |
| R 238 | Sep 15/2026 | |
| R 239 | Sep 15/2026 | |
| R 240 | Sep 15/2026 | |
| R 241 | Sep 15/2026 | |
| R 242 | Sep 15/2026 | |
| R 243 | Sep 15/2026 | |
| R 244 | Sep 15/2026 | |
| R 245 | Sep 15/2026 | |
| R 246 | Sep 15/2026 | |
| R 247 | Sep 15/2026 | |
| R 248 | Sep 15/2026 | |
| R 249 | Sep 15/2026 | |
| R 250 | Sep 15/2026 | |
| R 251 | Sep 15/2026 | |
| R 252 | Sep 15/2026 | |
| R 253 | Sep 15/2026 | |
| R 254 | Sep 15/2026 | |
| R 255 | Sep 15/2026 | |
| R 256 | Sep 15/2026 | |
| R 257 | Sep 15/2026 | |
| R 258 | Sep 15/2026 | |
| R 259 | Sep 15/2026 | |
| R 260 | Sep 15/2026 | |
| R 261 | Sep 15/2026 | |
| R 262 | Sep 15/2026 | |
| R 263 | Sep 15/2026 | |
| O 264 | Sep 15/2026 | |
| O 265 | Sep 15/2026 | |
| O 266 | Sep 15/2026 | |
| O 267 | Sep 15/2026 | |
| O 268 | Sep 15/2026 | |
| O 269 | Sep 15/2026 | |
| O 270 | Sep 15/2026 | |
| O 271 | Sep 15/2026 | |
| O 272 | Sep 15/2026 | |
| O 273 | Sep 15/2026 | |
| O 274 | Sep 15/2026 | |
| A 275 | Sep 15/2026 | |
| A 276 | Sep 15/2026 | |
| A 277 | Sep 15/2026 | |
| A 278 | BLANK | |
| 11-30-04 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | Sep 15/2024 | |
| 11-30-05 | | |
| 201 | May 15/2024 | |
| R 202 | Sep 15/2026 | |
| 203 | May 15/2026 | |
| R 204 | Sep 15/2026 | |
| 205 | May 15/2026 | |
| 206 | May 15/2026 | |
| 207 | May 15/2026 | |
| 208 | May 15/2026 | |
| 209 | May 15/2026 | |
| 210 | May 15/2026 | |
| R 211 | Sep 15/2026 | |
| 212 | May 15/2026 | |
| 213 | May 15/2026 | |
| 214 | May 15/2026 | |
| 11-30-06 | | |
| 201 | May 15/2024 | |
| 202 | Jan 15/2025 | |
| 203 | May 15/2024 | |
| R 204 | Sep 15/2026 | |
| 205 | May 15/2024 | |
| 206 | BLANK | |
| 11-37-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | Jan 15/2025 | |
| 204 | BLANK | |


A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 11-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

# CHAPTER 11
# PLACARDS AND MARKINGS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-00-00 | | 201 | PTF ALL |
| **FUSELAGE EXTERIOR MARKINGS, SECTION 43 - MAINTENANCE PRACTICES** | 11-21-13 | | 201 | PTF ALL |
| Fuselage Exterior Markings, Section 43 - Maintenance Practices<br>TASK 11-21-13-890-801 | | | 201 | PTF ALL |
| **FUSELAGE EXTERIOR MARKINGS, SECTIONS 46 AND 47 - MAINTENANCE PRACTICES** | 11-21-16 | | 201 | PTF ALL |
| Fuselage Exterior Markings, Sections 46 and 47 - Maintenance Practices<br>TASK 11-21-16-890-801 | | | 201 | PTF ALL |
| **APU OIL SERVICING PLACARDS** | 11-21-20 | | 201 | PTF ALL |
| APU Oil Servicing - Maintenance Practices<br>TASK 11-21-20-890-801 | | | 201 | PTF ALL |
| **EXTERIOR PASSENGER DOORS AND EMERGENCY EXIT PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-23-01 | | 201 | PTF ALL |
| Exterior Passenger Door and Emergency Exit Placards and Markings - Maintenance Practices<br>TASK 11-23-01-890-801 | | | 201 | PTF ALL |
| **FUEL SYSTEM PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-24-01 | | 201 | PTF ALL |
| Fuel System Placards and Markings — Maintenance Practices<br>TASK 11-24-01-890-801 | | | 201 | PTF ALL |
| **WING PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-24-04 | | 201 | PTF ALL |
| Wing Placards and Markings - Maintenance Practices<br>TASK 11-24-04-890-801 | | | 201 | PTF ALL |
| **ENGINE FAN COWL PLACARDS AND MARKINGS** | 11-25-03 | | 201 | PTF ALL |
| Engine Fan Cowl Placards and Markings - Maintenance Practices<br>TASK 11-25-03-890-801 | | | 201 | PTF ALL |


# 11-CONTENTS


ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 11
## PLACARDS AND MARKINGS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **ENTRY/SERVICE DOORS AND EMERGENCY EXITS PLACARDS AND MARKINGS** | 11-30-01 | | 201 | PTF ALL |
| Entry/Service Doors and Emergency Exits Placards and Markings - Maintenance Practices TASK 11-30-01-890-801 | | | 201 | PTF ALL |
| **FLIGHT COMPARTMENT PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-30-02 | | 201 | PTF ALL |
| Flight Compartment Placards - Maintenance Practices TASK 11-30-02-890-801 | | | 201 | PTF ALL |
| **MAIN COMPARTMENT DIVIDER AND WALL PLACARDS - MAINTENANCE PRACTICES** | 11-30-03 | | 201 | PTF ALL |
| Main Compartment Placards - Maintenance Practices TASK 11-30-03-890-801 | | | 201 | PTF ALL |
| **OVERHEAD STOWAGE BIN PLACARDS - MAINTENANCE PRACTICES** | 11-30-04 | | 201 | PTF ALL |
| Overhead Stowage Bin - Maintenance Practices TASK 11-30-04-890-801 | | | 201 | PTF ALL |
| **LAVATORIES (FORWARD AND AFT) PLACARDS - MAINTENANCE PRACTICES** | 11-30-05 | | 201 | PTF ALL |
| Lavatories (Forward and Aft) - Maintenance Practices TASK 11-30-05-890-801 | | | 201 | PTF ALL |
| **ENHANCED SECURITY FLIGHT COMPARTMENT DOOR PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-30-06 | | 201 | PTF ALL |
| Enhanced Security Flight Compartment Door - Maintenance Practices TASK 11-30-06-890-801 | | | 201 | PTF ALL |
| **CARGO COMPARTMENT PLACARDS AND MARKINGS - MAINTENANCE PRACTICES** | 11-37-00 | | 201 | PTF ALL |
| Cargo Compartment Placards and Markings TASK 11-37-00-890-801 | | | 201 | PTF ALL |


# 11-CONTENTS


ECCN 9E991 BOEING PROPRIETARY - See title page for details

## PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

### 1. General

A. This chapter shows the symbolic or text placards that are installed on the airplane. The placards and markings in this chapter show emergency and instructional placards that are installed inside the airplane and around the external surface of the airplane.

B. This chapter is divided in two sections, Exterior Placards and Markings and Interior Placards and Markings. Exterior placards and markings include the fuselage, passenger doors and emergency exits, fuel and wing no step areas, and the engines. Interior placards include entry/service and emergency exit doors, flight compartment, main compartment dividers and walls, overhead stowage bins, lavatories, enhanced security flight compartment door, and the cargo compartment lower lobe placards.

C. The placards in this chapter are FAA required and may also be required by other regulatory agencies that shall be installed on the airplane. Placards that are unique to one or more foreign regulatory authorities are identified with an asterisk (*).

D. The placards and markings in this chapter can be different from the placards and markings installed on the airplane. When there are differences in the shape or in the placard text the word “(EXAMPLE)” is placed below the graphic. An example would be the Load Limit placards, which show “XX” as the load limit. The installed placards will show the correct load limits. There can also be a difference in the words used to describe an object, such as lavatory versus toilet.

E. When a symbol and text placard have the same meaning, the symbol placard is used unless a mandatory requirement precludes the use of the symbol placard. When text and symbolic placards are installed, position the text placard to the right of the symbolic placard and align to the top of the symbolic placard. Additional text placards will be stacked vertically down from the top of the text placard.

F. The arrow symbol is a stand-alone symbol or can be used in conjunction with symbolic and text placards. The direction of the arrow placard is absolute up or down, or any direction and is placed to the left of the symbol or symbols in a group. If the direction of the arrow is to be pointed to the right, the arrow symbol is to be placed to the right of all symbols in that group.

G. When placards are grouped, the symbolic placards are to be placed adjacent to each other on the same baseline in a horizontal row. Stacking symbolic placards should be avoided. If the space available does not allow a horizontal line of placards, vertical grouping of the placards is permitted but limited to 4- and 6-inch horizontal spacing.

H. The “No Stowage” placard must be installed on all areas where there is sufficient space for debris to accumulate that would cause a fire hazard or where stowage of items could damage the monument.

I. Install “Load Limit” placards in the compartments where storage is an option.

J. Install “Do Not Occupy During Taxi, Takeoff, or Landing” placards approximately 60 inches above the floor at eye level for visibility when a person is standing and directly in front of the occupant for seated units.

K. Install “Latch Closed During Taxi, Takeoff, Landing” placards when a piece of equipment or door is moveable or can be opened as a part of its intended normal usage.

L. Flagnote ”AS INSTALLED” shows that locators of markers are an example only.

M. Flagnote “IF INSTALLED” shows that there can be small differences in the equipment installed on an airplane.

N. Use the approved maintenance practices to install the placards, refer to Chapter 20, Standard Practices - Airframe. The location of the placard and the size and text shown in this chapter are examples only.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## FUSELAGE EXTERIOR MARKINGS, SECTION 43 - MAINTENANCE PRACTICES

1. General
   A. This task shows the exterior placards and markings on the airplane fuselage at section 43.
   B. The location of the placards and markings is for an example only.


**TASK 11-21-13-890-801**


2. Fuselage Exterior Markings, Section 43 - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

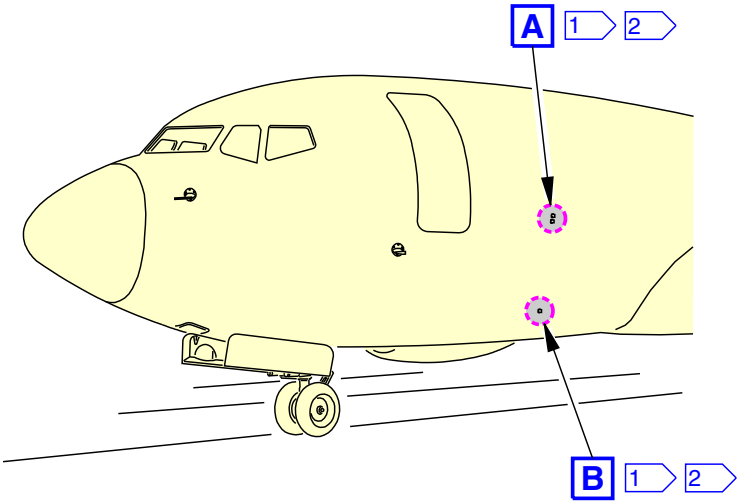

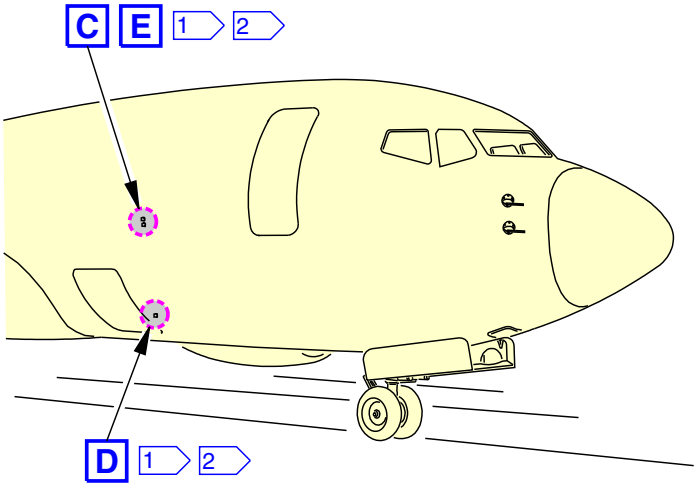

1 IF INSTALLED
2 AS INSTALLED


2475272 S0000580117_V4

**Fuselage Exterior Markings, Section 43**
**Figure 201/11-21-13-990-801 (Sheet 1 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

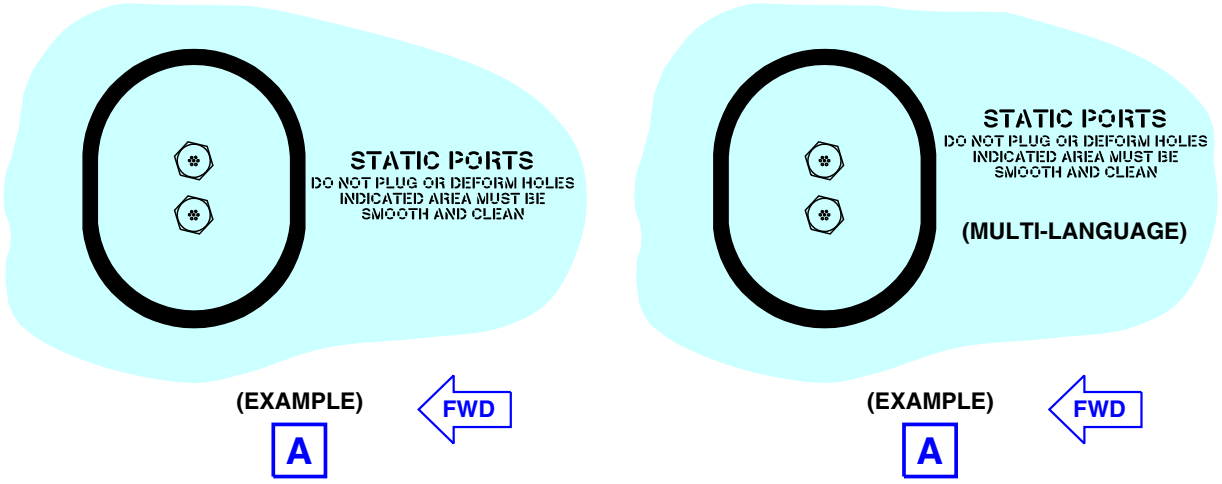

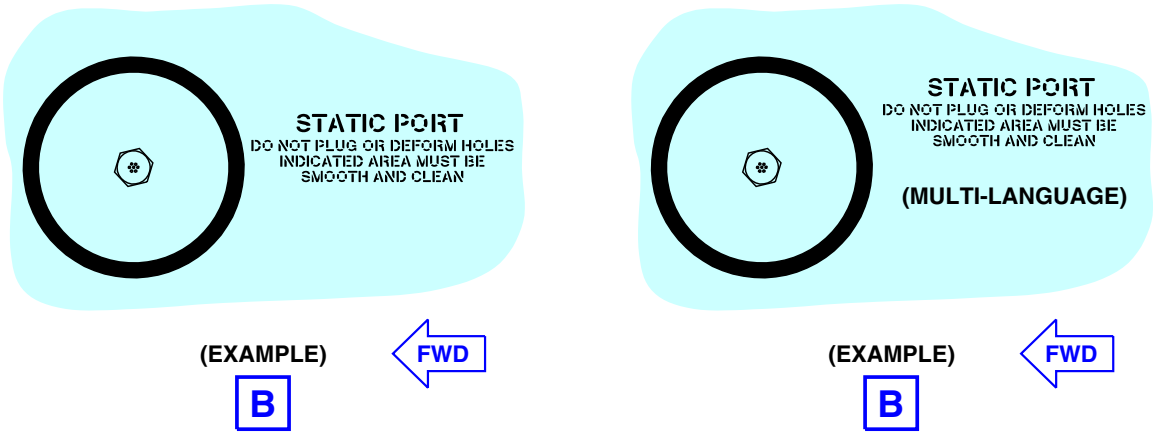




2475274 S0000580136_V5

**Fuselage Exterior Markings, Section 43**
**Figure 201/11-21-13-990-801 (Sheet 2 of 3)**

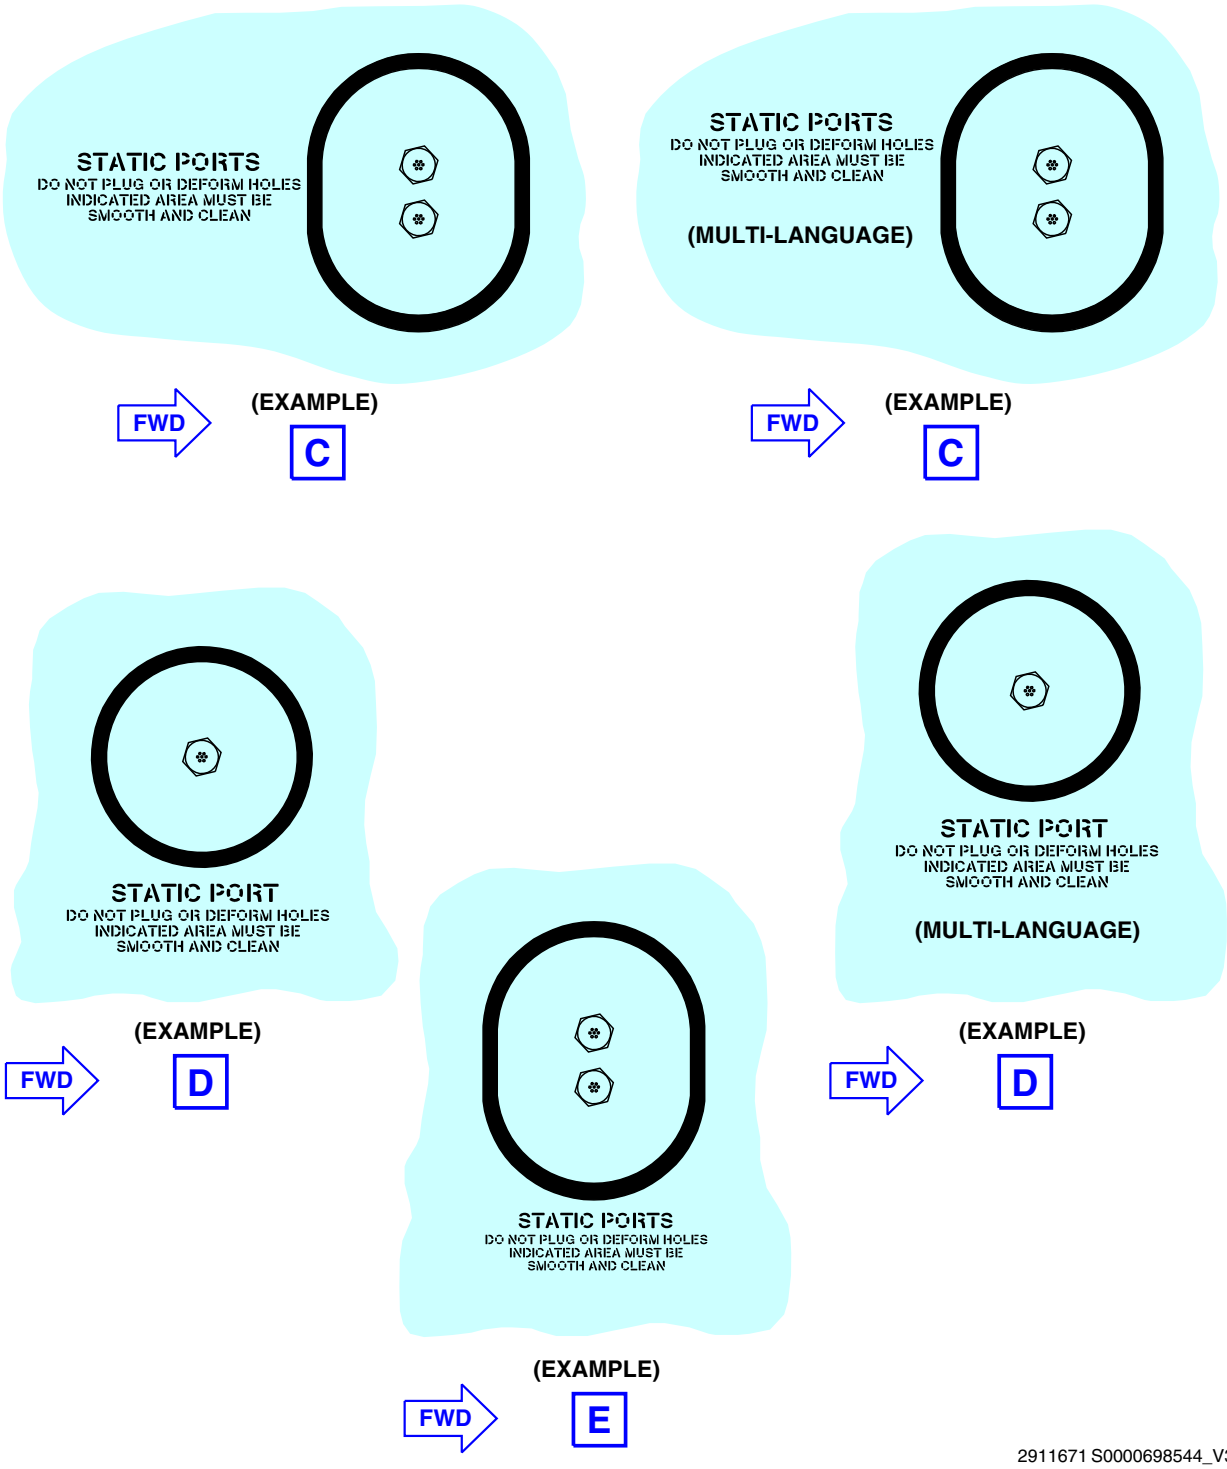

ECCN 9E991 BOEING PROPRIETARY - See title page for details




2911671 S0000698544_V3

**Fuselage Exterior Markings, Section 43**
**Figure 201/11-21-13-990-801 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## FUSELAGE EXTERIOR MARKINGS, SECTIONS 46 AND 47 - MAINTENANCE PRACTICES

1. General
   A. This task shows the exterior placards and markings on the airplane fuselage at sections 46 and 47.
   B. The location of the placards and markings is for an example only.


**TASK 11-21-16-890-801**

2. Fuselage Exterior Markings, Sections 46 and 47 - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

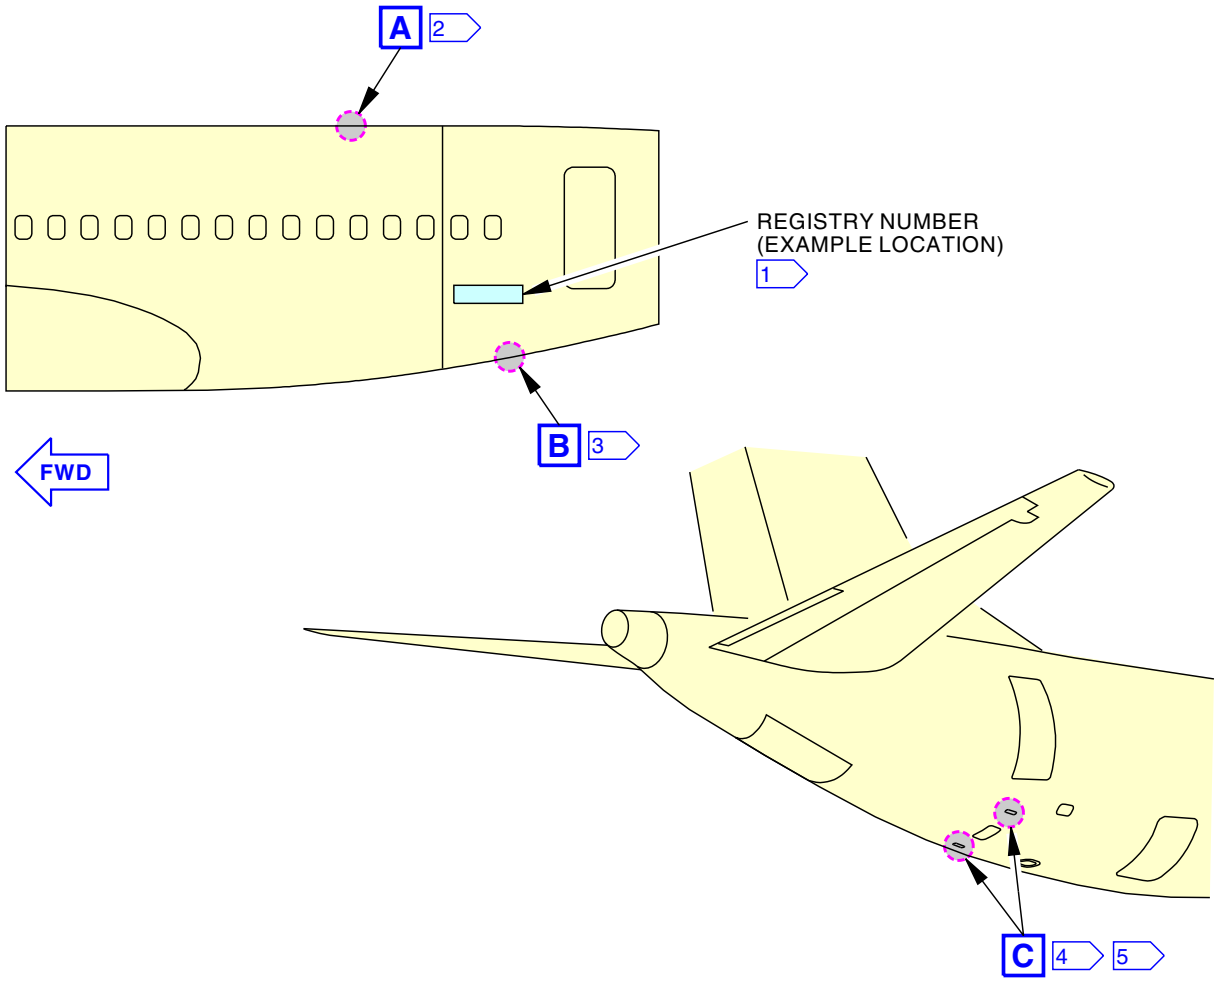


1 ONLY AFT FUSELAGE REGISTRY NUMBERS ARE FAA REQUIRED

2 ELT MARKER LOCATION TCCA REQUIRED ONLY

3 WATER FILL VALVE LOCATION ANAC REQUIRED ONLY

4 IF INSTALLED


5 AS INSTALLED

2410711 S00061526207_V5

**Fuselage Exterior Markings, Sections 46 and 47**
**Figure 201/11-21-16-990-801 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

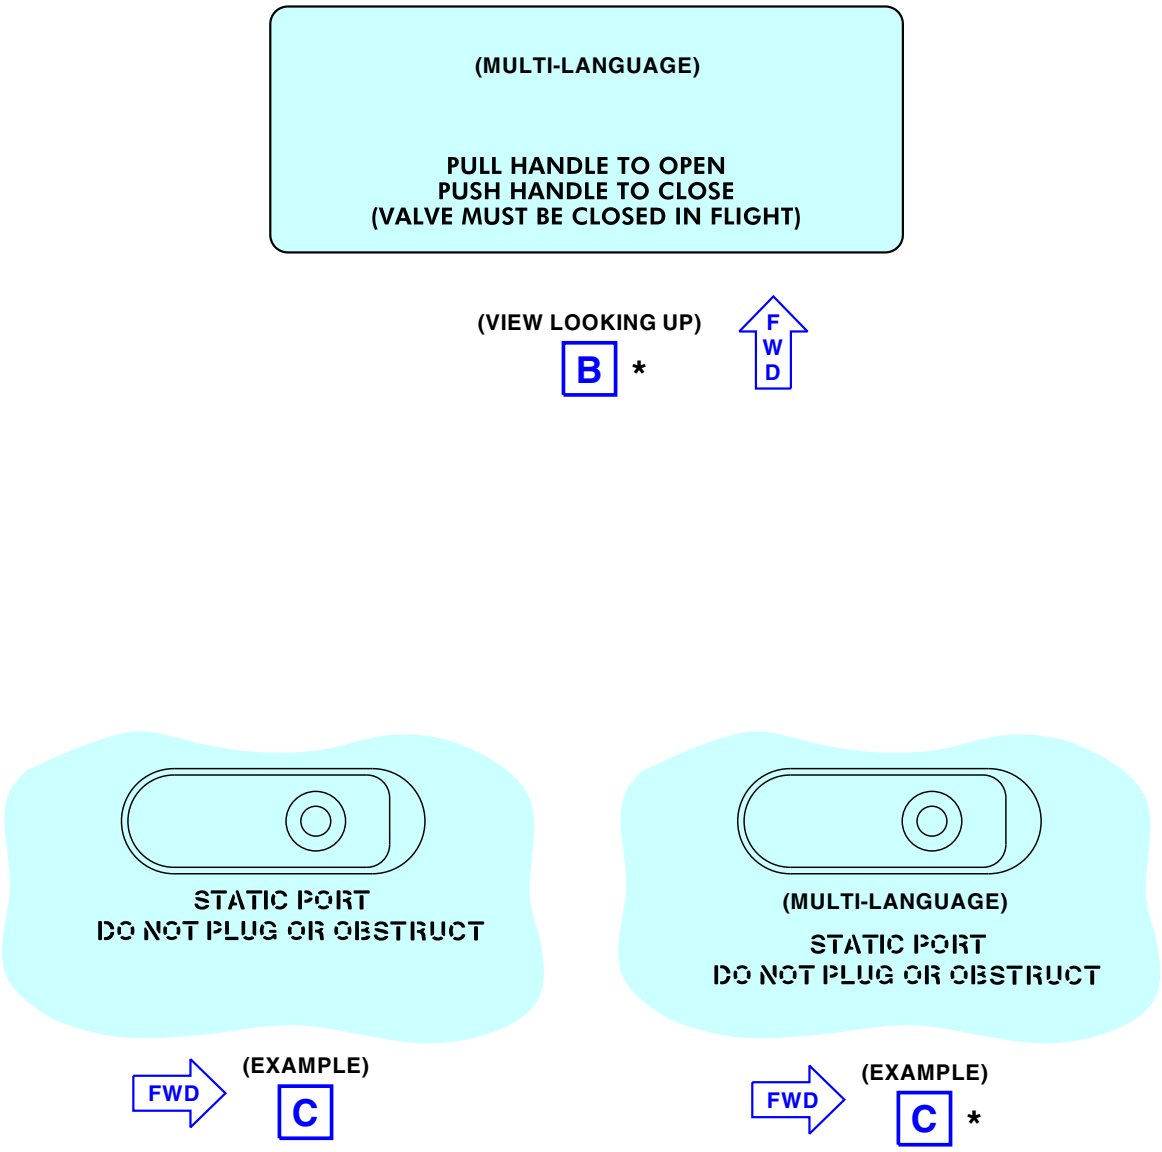



3056862 S0000820951_V1

**Fuselage Exterior Markings, Sections 46 and 47**
**Figure 201/11-21-16-990-801 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

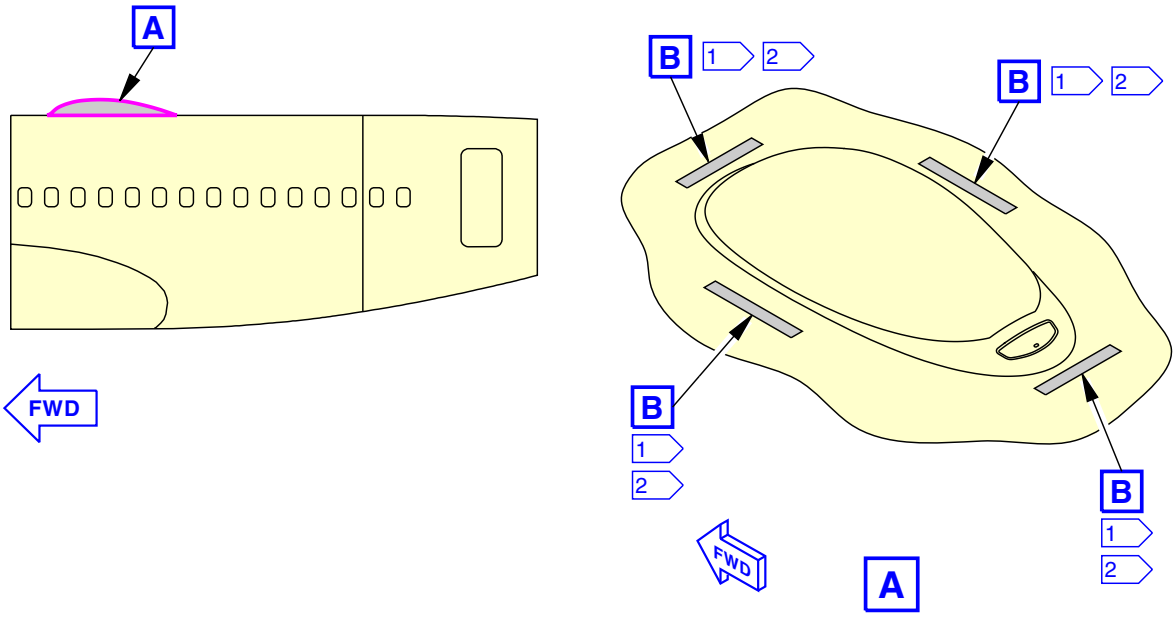


WARNING
POTENTIAL RADIO FREQUENCY RADIATION HAZARD
DEACTIVATE TRANSMITTER WHEN APPROACHING

(EXAMPLE)

B

WARNING
HIGH POWER RF TRANSMITTER, STAY BELOW OR BACK
XX FEET (X METERS), UNLESS TRANSMITTER IS DISABLED

(EXAMPLE)

B

1 IF INSTALLED
2 AS INSTALLED

2998897 S0000775332_V2

**Fuselage Exterior Markings, Sections 46 and 47, Broadband Radome**
**Figure 202/11-21-16-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## APU OIL SERVICING PLACARDS

1. **General**
   A. This task shows the placard and markings for the APU oil servicing.
   B. The location of placards and markings is for an example only.


**TASK 11-21-20-890-801**

2. **APU Oil Servicing - Maintenance Practices**

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

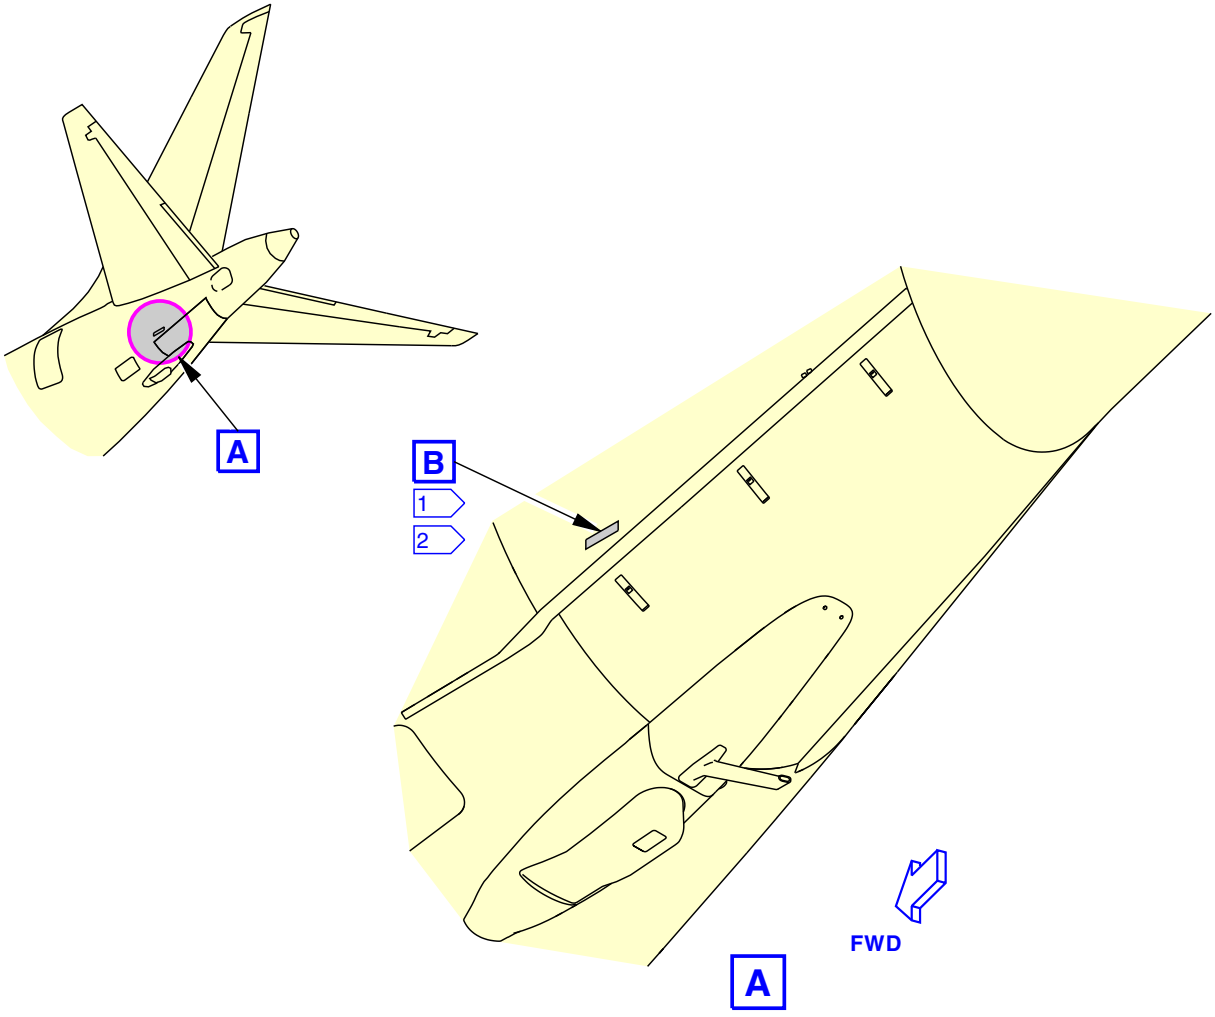


**APU Oil Servicing Placards and Markings**
**Figure 201/11-21-20-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## EXTERIOR PASSENGER DOORS AND EMERGENCY EXIT PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

### 1. General

A. This task shows the airplane exterior placards and markings for the passenger doors and emergency exits.

B. The location of the placards and markings is for an example only.


**TASK 11-23-01-890-801**


### 2. Exterior Passenger Door and Emergency Exit Placards and Markings - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

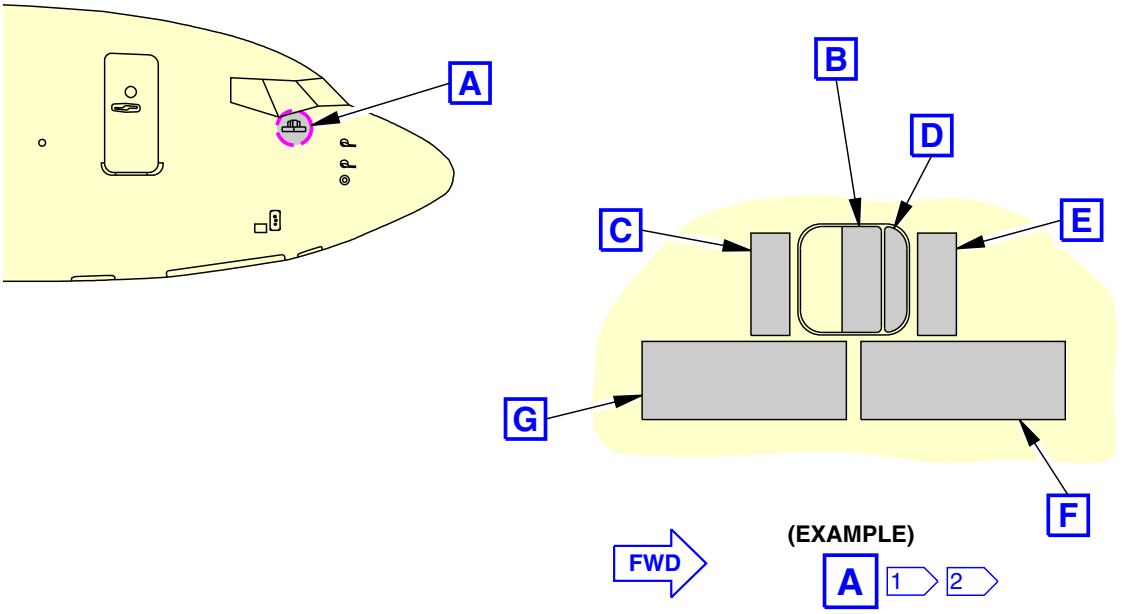

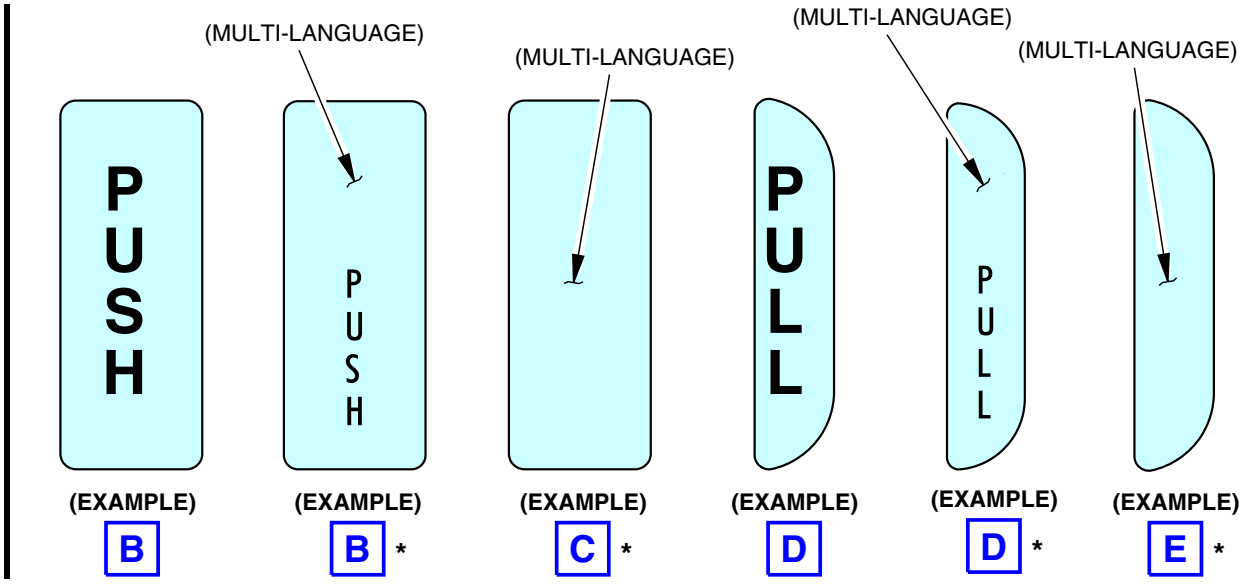

1 IF INSTALLED
2 AS INSTALLED

2410713 S00061526216_V6

**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 1 of 8)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

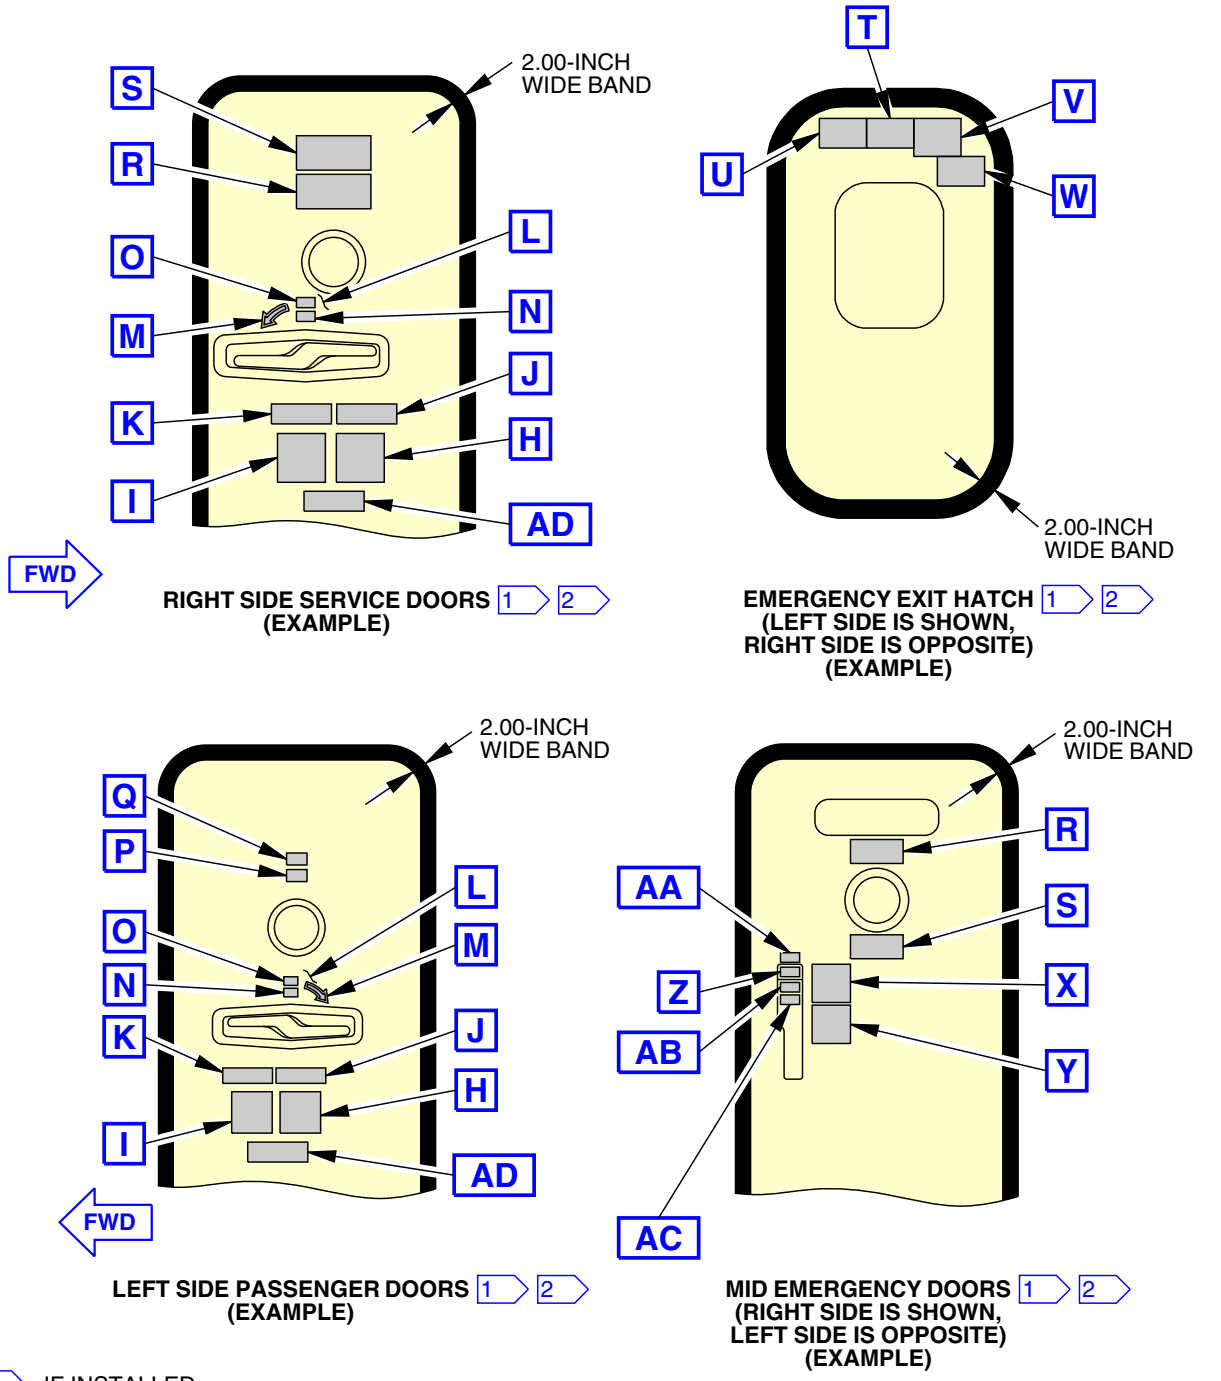


**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 2 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

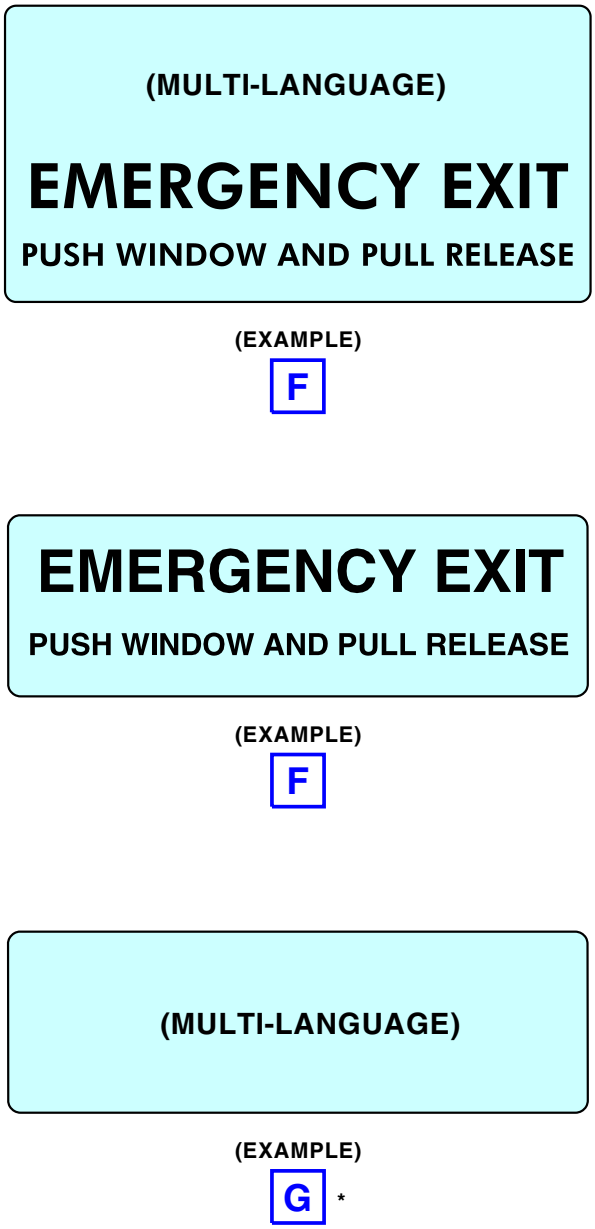



3064690 S0000826973_V1

**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 3 of 8)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

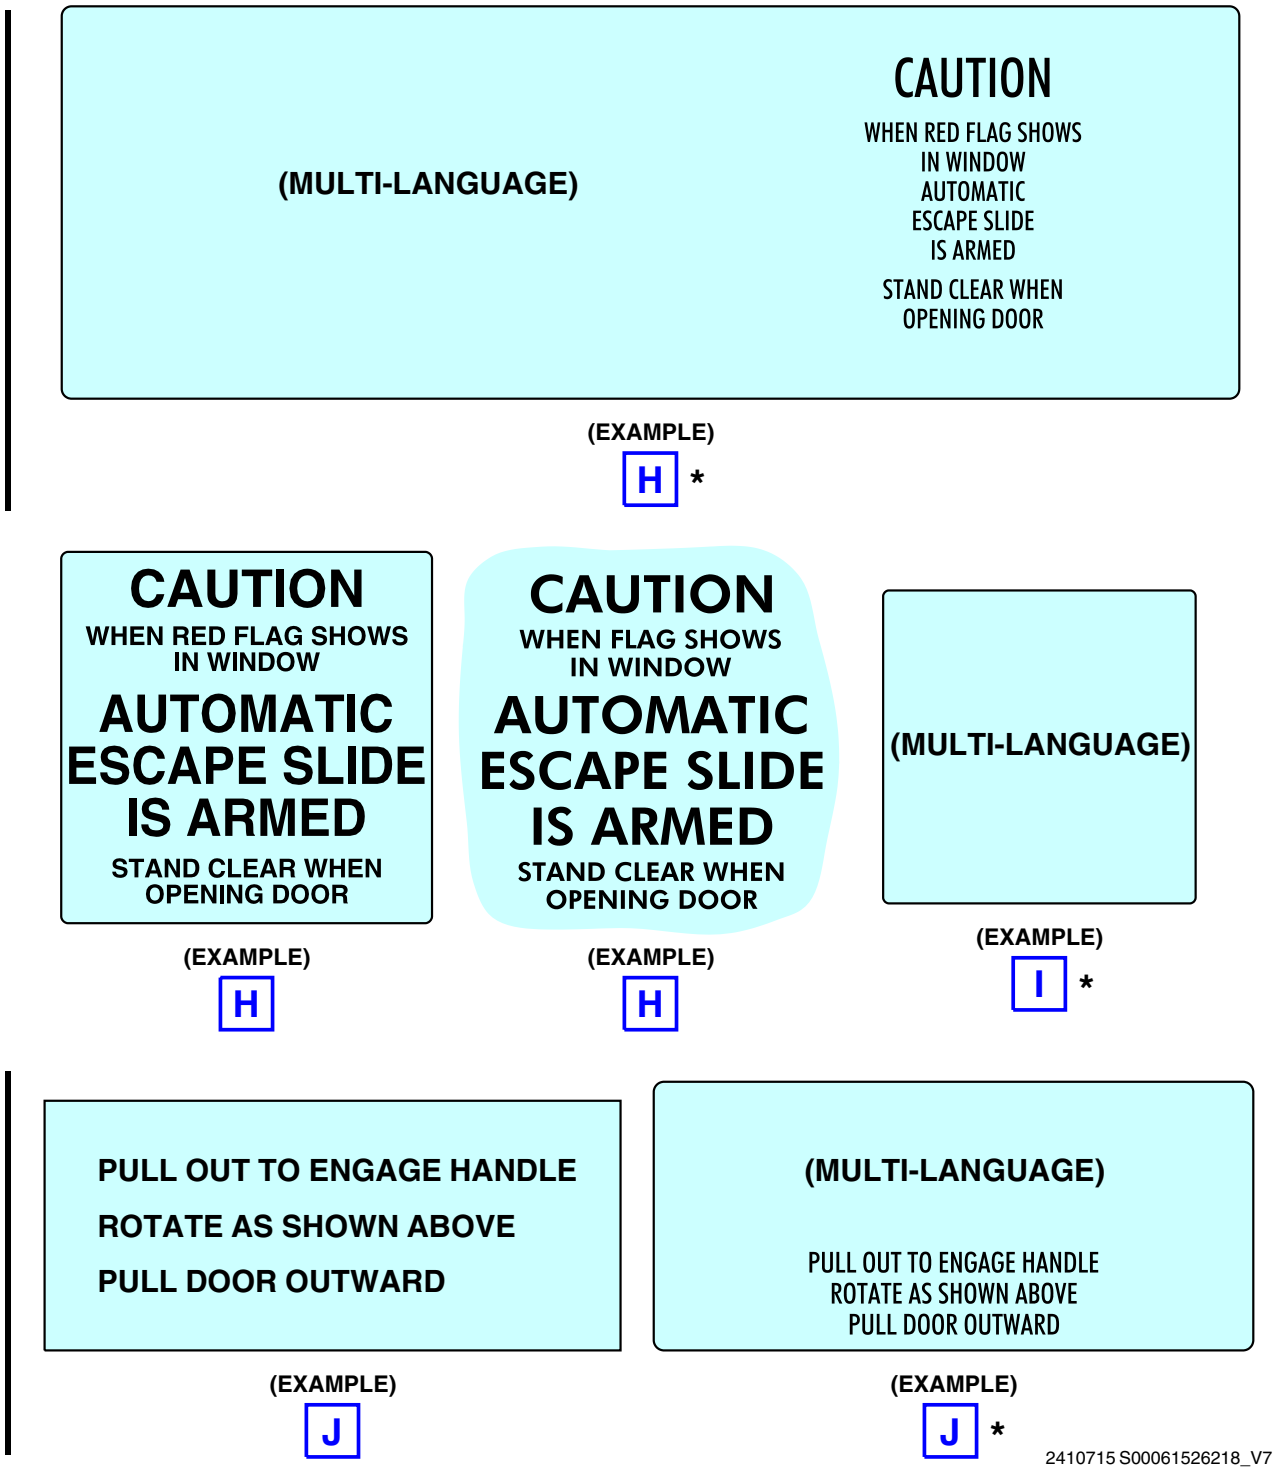


**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 4 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

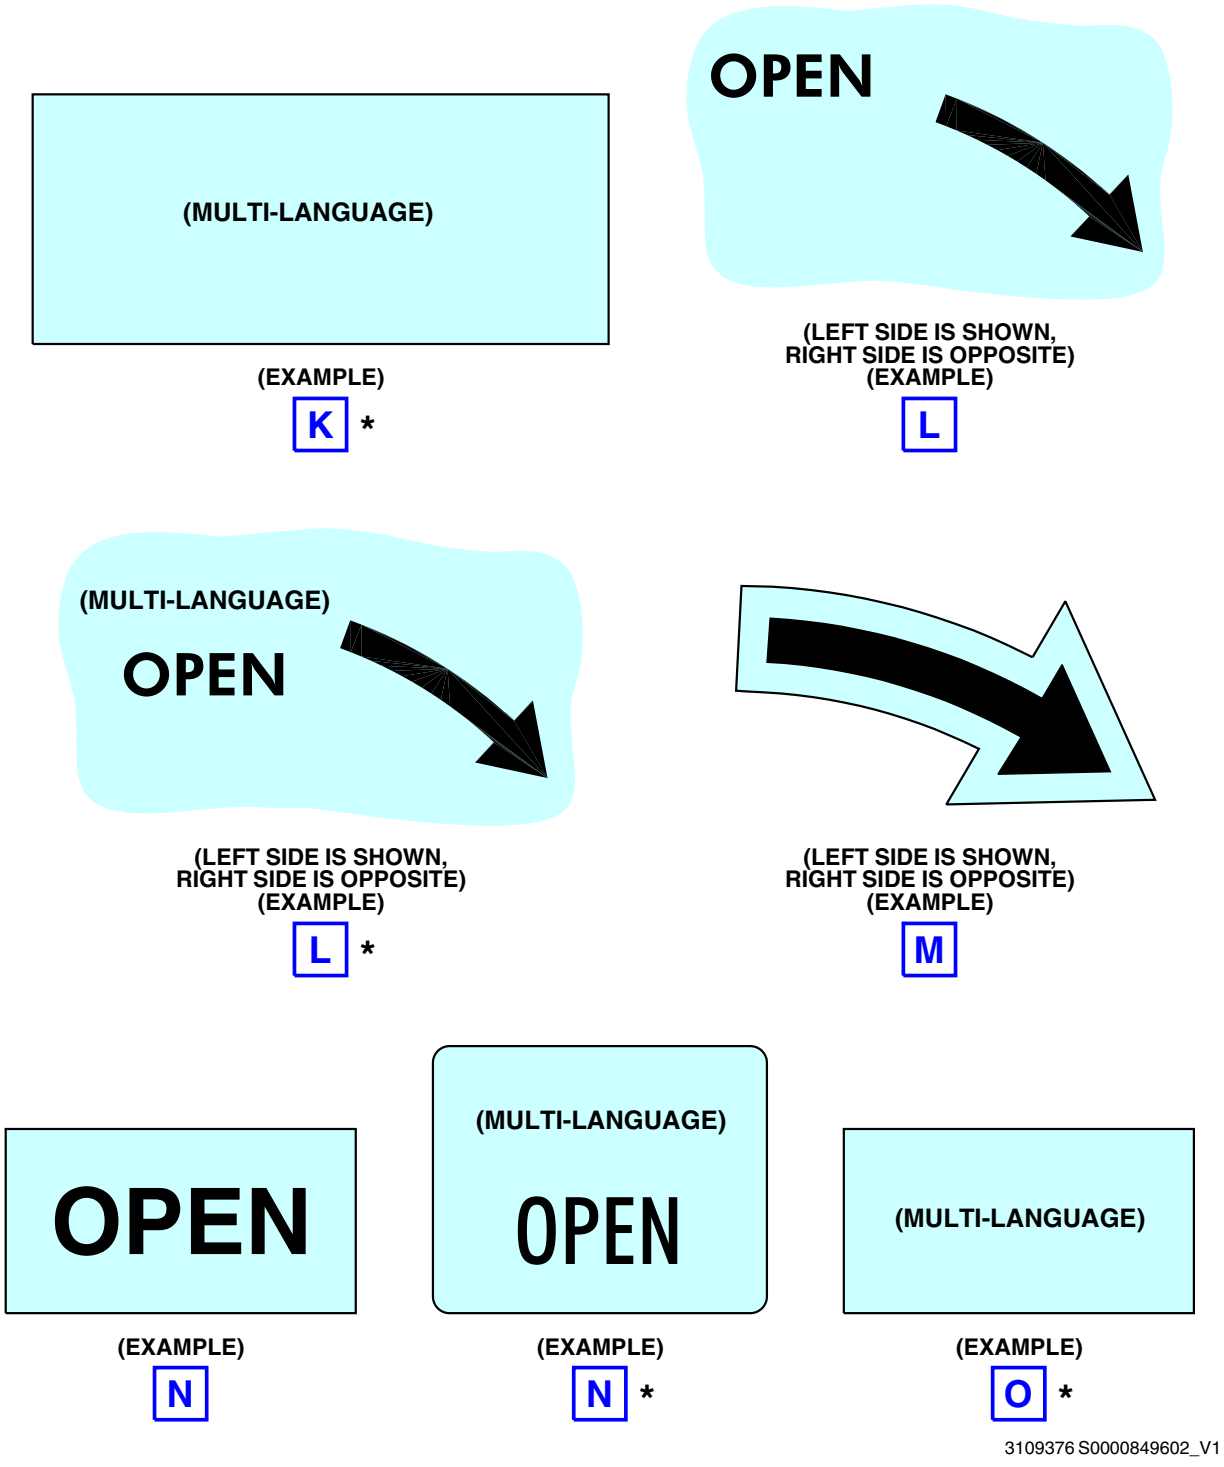



3109376 S0000849602_V1

**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 5 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

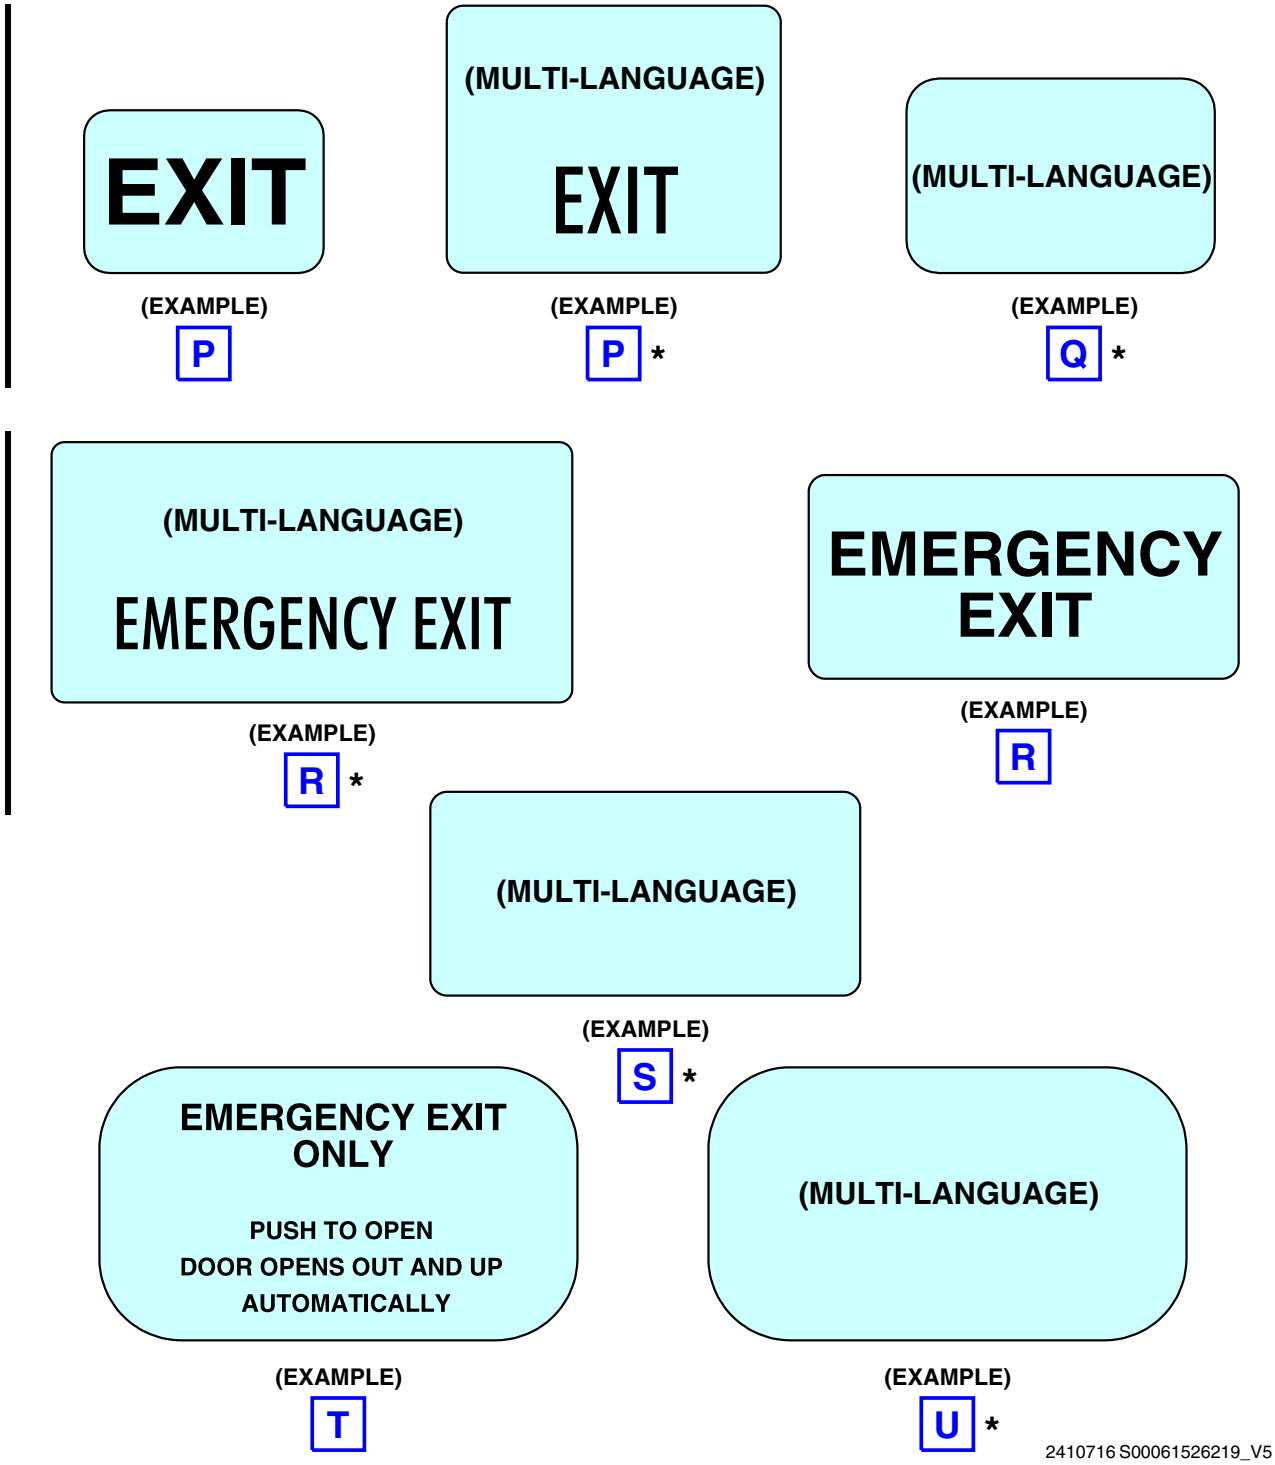


**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 6 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details





(EXAMPLE)

V





(EXAMPLE)

V

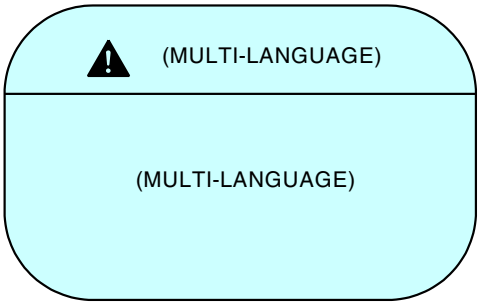


(EXAMPLE)

W *

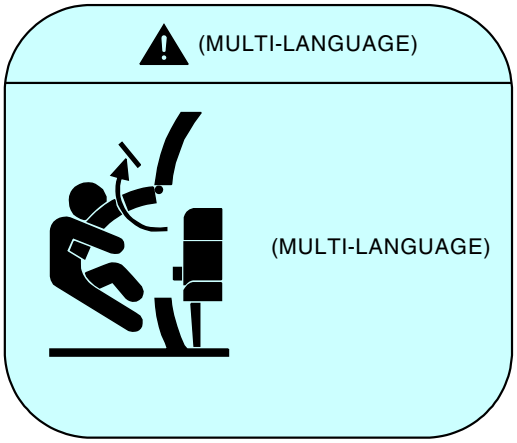


(EXAMPLE)


W *

2545617 S0000605221_V6

**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 7 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

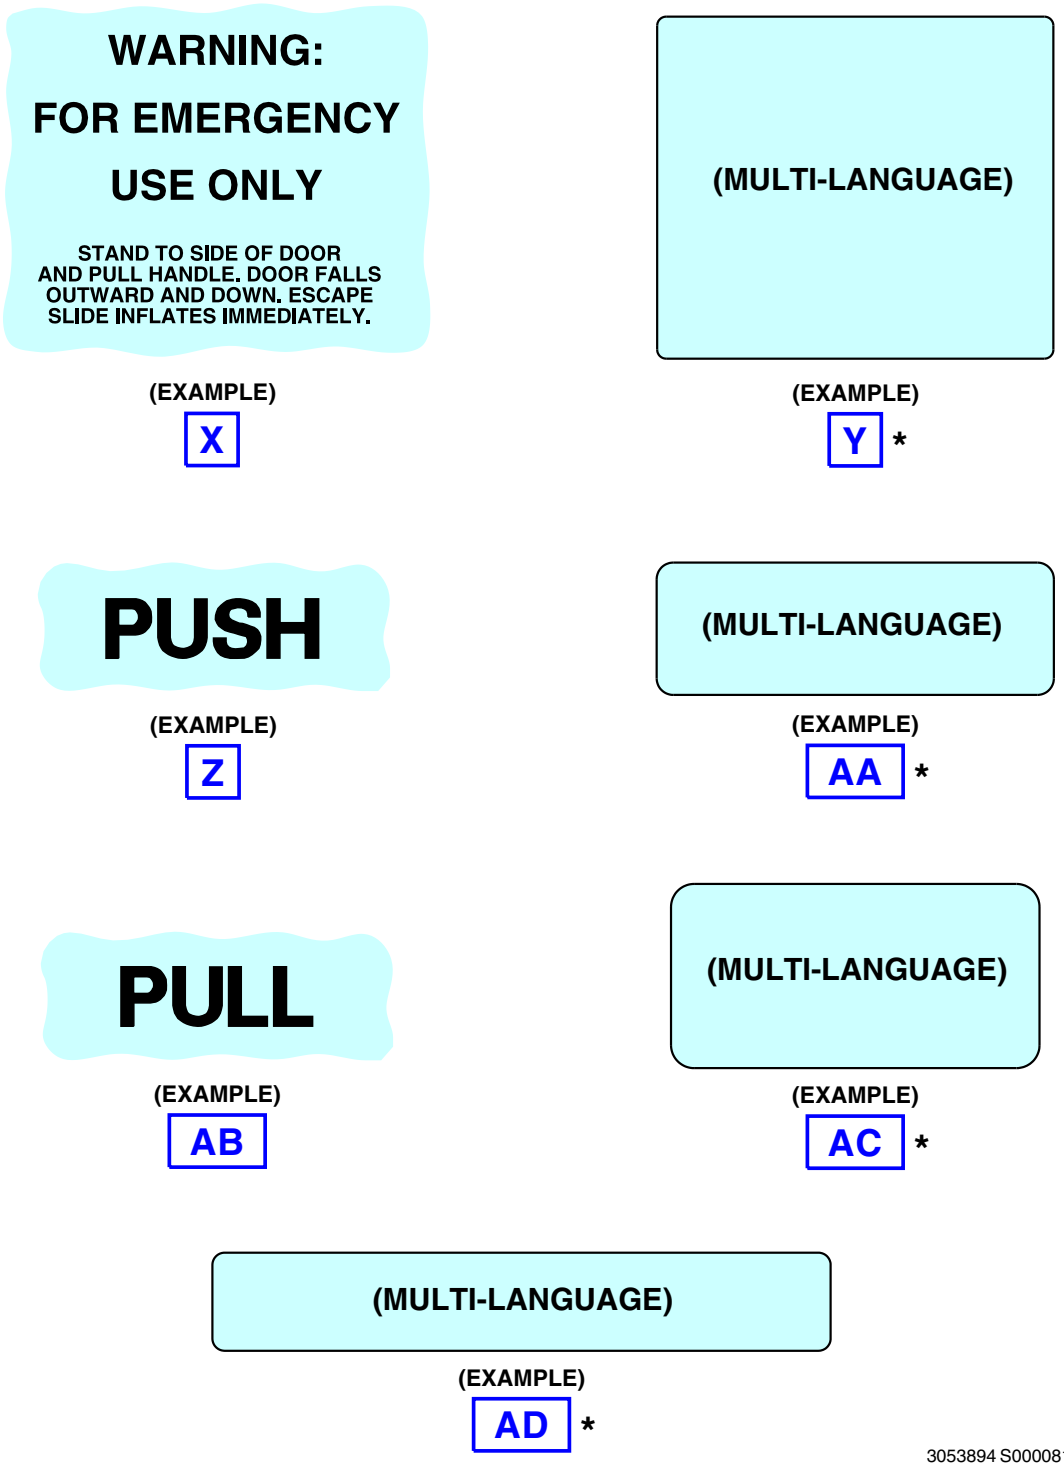


3053894 S0000818963_V2

**Exterior Passenger Door and Emergency Exit Placards and Markings**
**Figure 201/11-23-01-990-801 (Sheet 8 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## FUEL SYSTEM PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

1. General
   A. This task shows the placards and markings for the fuel system.
   B. The location of the placards and markings is for an example only.


**TASK 11-24-01-890-801**

2. Fuel System Placards and Markings — Maintenance Practices

——— END OF TASK ———




ECCN 9E991 BOEING PROPRIETARY - See title page for details

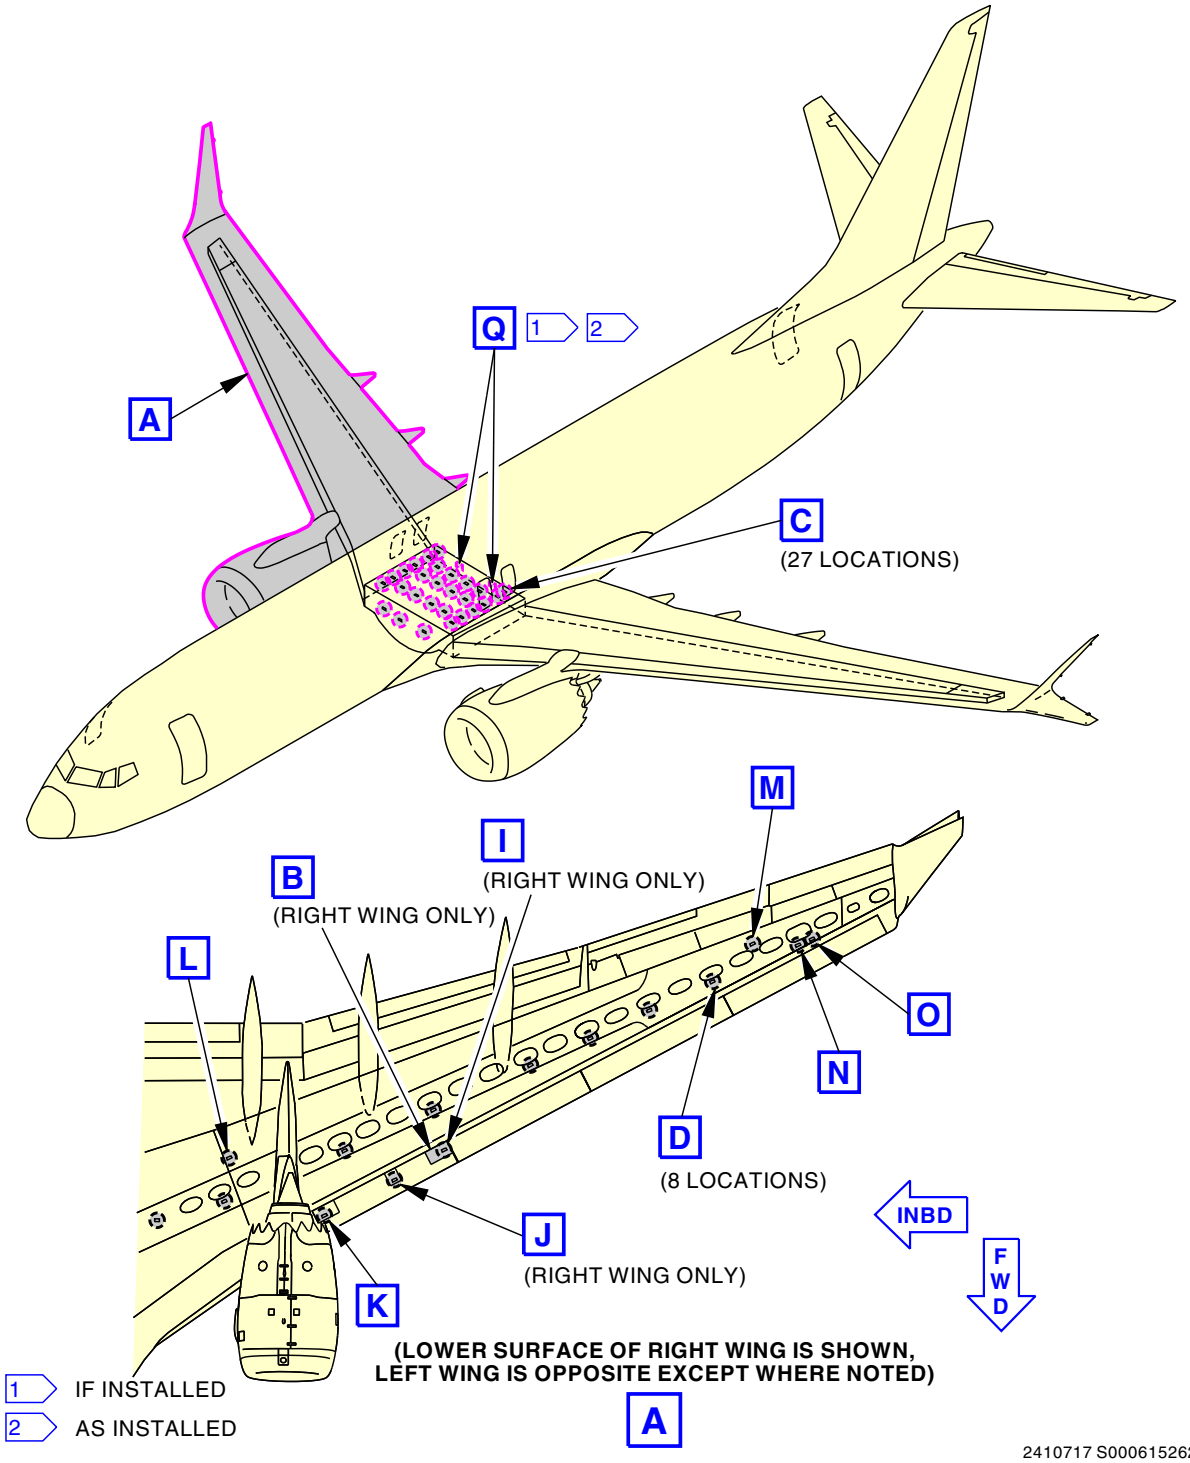


**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 1 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

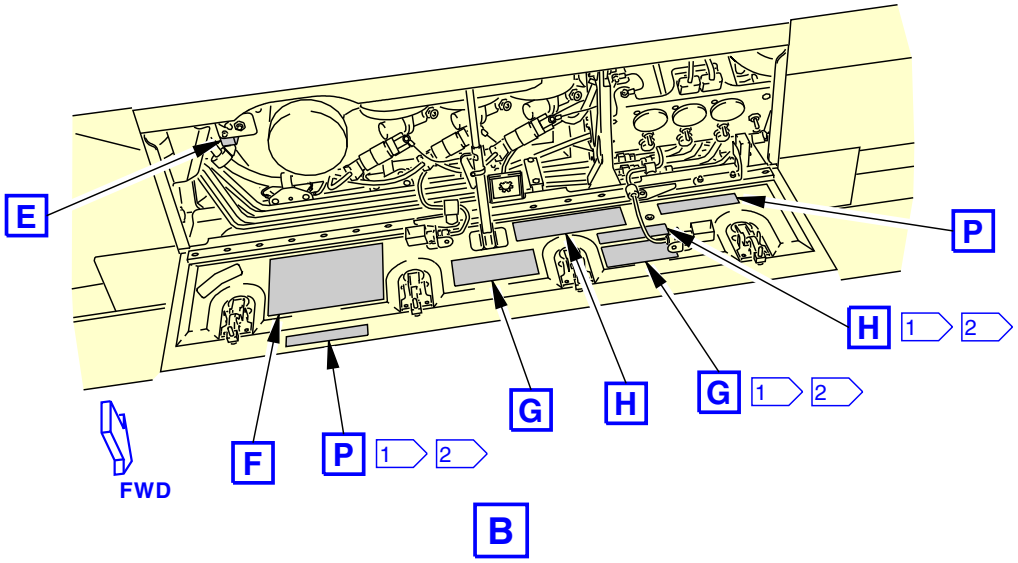


**CAUTION**

THIS SURFACE IS COATED WITH A SPECIAL FUEL BARRIER COATING. AVOID DAMAGE TO IT. IF DAMAGED REPAIR PER BAC 5527.

C

FUEL STICK _ LOCKED

(EXAMPLE)

D

GROUND HERE

(EXAMPLE)

E

(MULTI-LANGUAGE)

FUEL STICK _ LOCKED

(EXAMPLE)

D

GROUND HERE (MULTI-LANGUAGE)

(EXAMPLE)

E

2410718 S00061526225_V9

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 2 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

FUELING INSTRUCTIONS

1. INSTALL GROUNDING JACKS AND COUPLE FUELING NOZZLE.
2. TOGGLE SWITCH TO "TEST GAGES" POSITION-VERIFY ALL UPPER AND LOWER DISPLAYS READ 88888.
3. PRESS BLUE "VALVE POSITION LIGHTS"-VERIFY LIGHTS ILLUMINATE.
4. OPEN CONTROL SWITCHES FOR TANKS TO BE SERVICED. BEGIN FUEL FLOW.

CAUTION-FLASHING UPPER GAGE INDICATES MAXIMUM TANK CAPACITY HAS BEEN EXCEEDED. STOP FUELING AT TRUCK.

5. CLOSE CONTROL SWITCHES WHEN FUELING STOPS AT FULL TANK OR DESIRED QUANTITY IS REACHED.
6. UNCOUPLE NOZZLE AND REMOVE JACKS.
7. VERIFY ALL CONTROL SWITCHES ARE RETURNED TO THE OFF POSITION AND BLUE "VALVE POSITION LIGHTS" ARE OFF.

NOTE: BLUE LIGHT INDICATES VALVE ENERGIZED OPEN FOR FUELING OPERATION.

**(EXAMPLE)**

F

FUELING INSTRUCTIONS

1. INSTALL GROUNDING JACKS AND COUPLE FUELING NOZZLE.
2. TOGGLE SWITCH TO "TEST GAGES" POSITION-VERIFY ALL UPPER AND LOWER DISPLAYS READ 88888.
3. PRESS BLUE "VALVE POSITION LIGHTS"-VERIFY LIGHTS ILLUMINATE.
4. SELECT REQUIRED FUEL QUANTITIES ON GAGES.
5. OPEN CONTROL SWITCHES FOR TANKS TO BE SERVICED. BEGIN FUEL FLOW.

CAUTION-FLASHING UPPER GAGE INDICATES MAXIMUM TANK CAPACITY HAS BEEN EXCEEDED. STOP FUELING AT TRUCK.

6. CLOSE CONTROL SWITCHES WHEN FUELING STOPS.
7. UNCOUPLE NOZZLE AND REMOVE JACKS.
8. VERIFY ALL CONTROL SWITCHES ARE RETURNED TO THE OFF POSITION AND BLUE "VALVE POSITION LIGHTS" ARE OFF.

NOTE: BLUE LIGHT INDICATES VALVE ENERGIZED OPEN FOR FUELING OPERATION.

**(EXAMPLE)**

F

2410719 S00061526226_V3

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 3 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

FUELING INSTRUCTIONS

1. INSTALL GROUNDING JACKS AND COUPLE FUELING NOZZLE.
2. TOGGLE SWITCH TO "TEST GAGES" POSITION-VERIFY ALL UPPER AND LOWER DISPLAYS READ 88888.
3. PRESS BLUE "VALVE POSITION LIGHTS"-VERIFY LIGHTS ILLUMINATE.
4. OPEN CONTROL SWITCHES FOR TANKS TO BE SERVICED. BEGIN FUEL FLOW.

CAUTION-FLASHING UPPER GAGE INDICATES MAXIMUM TANK CAPACITY HAS BEEN EXCEEDED. STOP FUELING AT TRUCK.

5. CLOSE CONTROL SWITCHES WHEN FUELING STOPS AT FULL TANK OR DESIRED QUANTITY IS REACHED.
6. UNCOUPLE NOZZLE AND REMOVE JACKS.
7. VERIFY ALL CONTROL SWITCHES ARE RETURNED TO THE OFF POSITION AND BLUE "VALVE POSITION LIGHTS" ARE OFF.

NOTE: BLUE LIGHT INDICATES VALVE ENERGIZED OPEN FOR FUELING OPERATION.

**(MULTI-LANGUAGE)**

**(EXAMPLE)**

F

**FUELING INSTRUCTIONS**

1. INSTALL GROUNDING JACKS AND COUPLE FUELING NOZZLE.
2. TOGGLE SWITCH TO "TEST GAGES" POSITION - VERIFY ALL UPPER AND LOWER DISPLAYS READ 88888.
3. PRESS BLUE "VALVE POSITION LIGHTS" - VERIFY LIGHTS ILLUMINATE.
4. SELECT REQUIRED FUEL QUANTITIES ON GAGES.
5. OPEN CONTROL SWITCHES FOR TANKS TO BE SERVICED. BEGIN FUEL FLOW.

CAUTION - FLASHING UPPER GAGE INDICATES MAXIMUM TANK CAPACITY HAS BEEN EXCEEDED. STOP FUELING AT TRUCK.

6. CLOSE CONTROL SWITCHES WHEN FUELING STOPS.
7. UNCOUPLE NOZZLE AND REMOVE JACKS.
8. VERIFY ALL CONTROL SWITCHES ARE RETURNED TO THE OFF POSITION AND BLUE "VALVE POSITION LIGHTS" ARE OFF.

NOTE: BLUE LIGHT INDICATES VALVE ENERGIZED OPEN FOR FUELING OPERATION.

**(MULTI-LANGUAGE)**

**(EXAMPLE)**

F

**-FUELING INSTRUCTIONS-**

**TANKS 1, CENTER, AND 2 MUST BE FULL PRIOR TO FUELING AUX TANKS.**

NOTE: AUX FUEL "READY" LIGHT IS OFF.

1. INSTALL GROUNDING JACKS, REMOVE CAP, AND COUPLE FUELING NOZZLE.
2. TOGGLE SWITCH TO 'TEST GAGES' - VERIFY ALL UPPER AND LOWER DISPLAYS READ 88888.
3. PRESS BLUE 'VALVE POSITION LIGHTS' - VERIFY LIGHTS ILLUMINATE.
4. SELECT REQUIRED FUEL QUANTITIES ON GAGES FOR TANKS 1, CENTER, AND 2 AS REQUIRED.
5. OPEN CONTROL SWITCHES FOR TANKS TO BE SERVICED. BEGIN FUEL FLOW.

CAUTION: FLASHING UPPER GAGE INDICATES MAX. TANK CAPACITY HAS BEEN EXCEEDED. STOP FUELING AT TRUCK.

6. CLOSE CONTROL SWITCHES WHEN FUELING STOPS.
7. MAIN-CENTER/AUX TANKS SWITCH - 'AUX'. CONFIRM AUX FUEL "READY" LIGHT ILLUMINATED FA (FWD AUX) AND AA (AFT AUX) FUEL QTY INDICATORS - CONFIRM DISPLAY OF FA AND AA.
8. FA AND AA VALVE POSITION SWITCHES - "OPEN" CONFIRM FA AND AA VALVE OPEN LIGHTS AND AUX FUEL "FUELING" LIGHTS ARE ILLUMINATED.
9. HOLD SWITCH TO 'TEST GAGES' POSITION - VERIFY FA AND AA UPPER AND LOWER DISPLAYS READ 88888. CONFIRM FA AND AA VALVE OPEN AND AUX FUEL "FUELING" LIGHTS ARE EXTINGUISHED THEN RELEASE SWITCH.
10. 'TEST GAGES' SWITCH - OFF - CONFIRM FA AND AA VALVE OPEN LIGHTS ILLUMINATED.
11. FA AND/OR AA TANK FUEL LOAD - SELECT REQUIRED FUEL QUANTITIES ON GAGES.
12. OPEN CONTROL SWITCHES FOR TANKS TO BE SERVICED. BEGIN FUEL FLOW.
13. CLOSE CONTROL SWITCHES WHEN FUELING STOPS.
14. MAIN-CENTER/AUX TANKS SWITCH - 'MAIN/CENTER' CONFIRM THE AUX FUEL "READY" LIGHT IS OFF. CONFIRM #2 OR FA AND #1 OR AA FUEL QUANTITY INDICATORS DISPLAY 2 & 1 RESPECTIVELY.
15. UNCOUPLE NOZZLE AND REMOVE JACKS.
16. VERIFY ALL CONTROL SWITCHES ARE IN THE OFF POSITION AND ALL THE VALVE POSITION "LIGHTS" ARE EXTINGUISHED.
17. REFUELING PANEL DOOR - CLOSED AND SECURED.

NOTE: BLUE LIGHT INDICATES VALVE ENERGIZED OPEN FOR REFUELING OPERATIONS.

ALOFT AeroArchitects PN 8888-1188-488-8

**(FTG/ATG CONFIGURATION)**
**(EXAMPLE)**

F

2410720 S00061526227_V10

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 4 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION

DO NOT EXCEED 55 PSIG/379 kPa FUEL PRESSURE.
MINIMUM DEFUEL PRESSURE IS -5 PSIG/-35 kPa.
SERVICE THIS AIRPLANE WITH
JET FUEL SPEC. GE D50TF2 EXCEPT:

DO NOT USE WIDE CUT FUELS

(CLASS B PER GE D50TF2, JET B OR JP-4)

G

CAUTION

DO NOT EXCEED 55 PSIG/379 kPa FUEL PRESSURE.
MINIMUM DEFUEL PRESSURE IS -5 PSIG/-35 kPa.
SERVICE THIS AIRPLANE WITH
JET FUEL SPEC. D6-85140-101 EXCEPT:

DO NOT USE WIDE CUT FUELS

(JET B OR JP-4)

G

(MULTI-LANGUAGE)

G

⚠ CAUTION

DO NOT EXCEED +55 PSIG/+379 KPA FUEL PRESSURE AT THE NOZZLE.
MINIMUM DEFUEL PRESSURE IS -5 PSIG/-35 KPA.

SERVICE WITH FUEL MEETING BOEING JET FUEL SPEC D6-85140-101 SUCH AS
JET A/A-1 FUEL PER ASTM D1655.

FOR AIRFRAME/ENGINE-SPECIFIC FUEL LIMITATIONS REFER TO THE AIRPLANE FLIGHT MANUAL.

DO NOT USE WIDE CUT FUELS

(SUCH AS JET B OR JP-4)

G

⚠ (MULTI-LANGUAGE)

(MULTI-LANGUAGE)

G

2997491 S0000774177_V1

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 5 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

USABLE FUEL CAPACITY

| TANK NO. 1 | CENTER TANK | TANK NO. 2 |
|---|---|---|
| XX U.S. GALLONS<br>XX LITERS | XX U.S. GALLONS<br>XX LITERS | XX U.S. GALLONS<br>XX LITERS |

**(EXAMPLE)**

H

**(MULTI-LANGUAGE)**

**(EXAMPLE)**

H

FWD AUX TANK AFT AUX TANK
XXXX U.S. GALLONS XXXX U.S. GALLONS
XXXX LITERS XXXX LITERS
PART NO. XXXXX-X

**(BASED ON CONFIGURATION)**
**(EXAMPLE)**

H

FUELING STATION

I

**(MULTI-LANGUAGE)**

FUELING STATION


I

2410721 S00061526228_V4

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 6 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

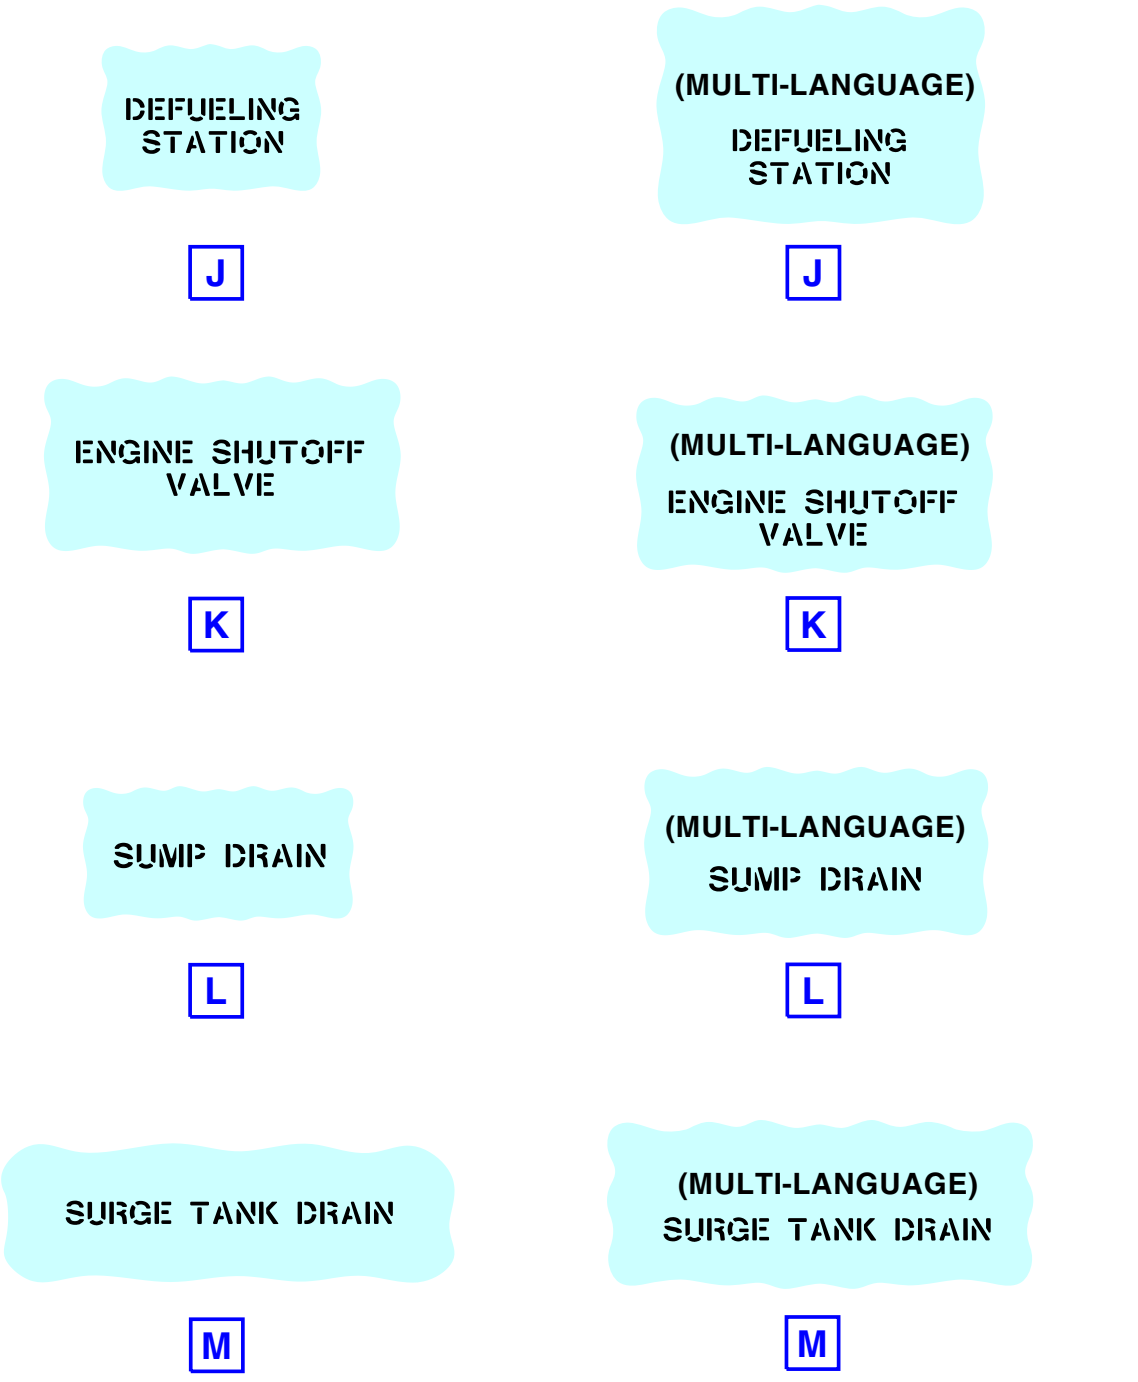


2410722 S00061526229_V4

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 7 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

PRESSURE RELIEF
FUEL TANK
IF OPEN, CHECK VENT FOR
BLOCKAGE BEFORE RESETTING

N

(MULTI-LANGUAGE)

PRESSURE RELIEF
FUEL TANK
IF OPEN, CHECK VENT FOR
BLOCKAGE BEFORE RESETTING

N

FUEL TANK
VENT

O

(MULTI-LANGUAGE)

FUEL TANK
VENT

O

DO NOT OPERATE ENGINE WITH
KATHON™ FP 1.5 BIOCIDE FUEL ADDITIVE

P

(MULTI-LANGUAGE)

P

DO NOT INSTALL SEALING
BOOT ON THIS PRESSURE
SWITCH


Q

2545602 S0000605210_V7

**Fuel System Placards and Markings**
**Figure 201/11-24-01-990-801 (Sheet 8 of 8)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

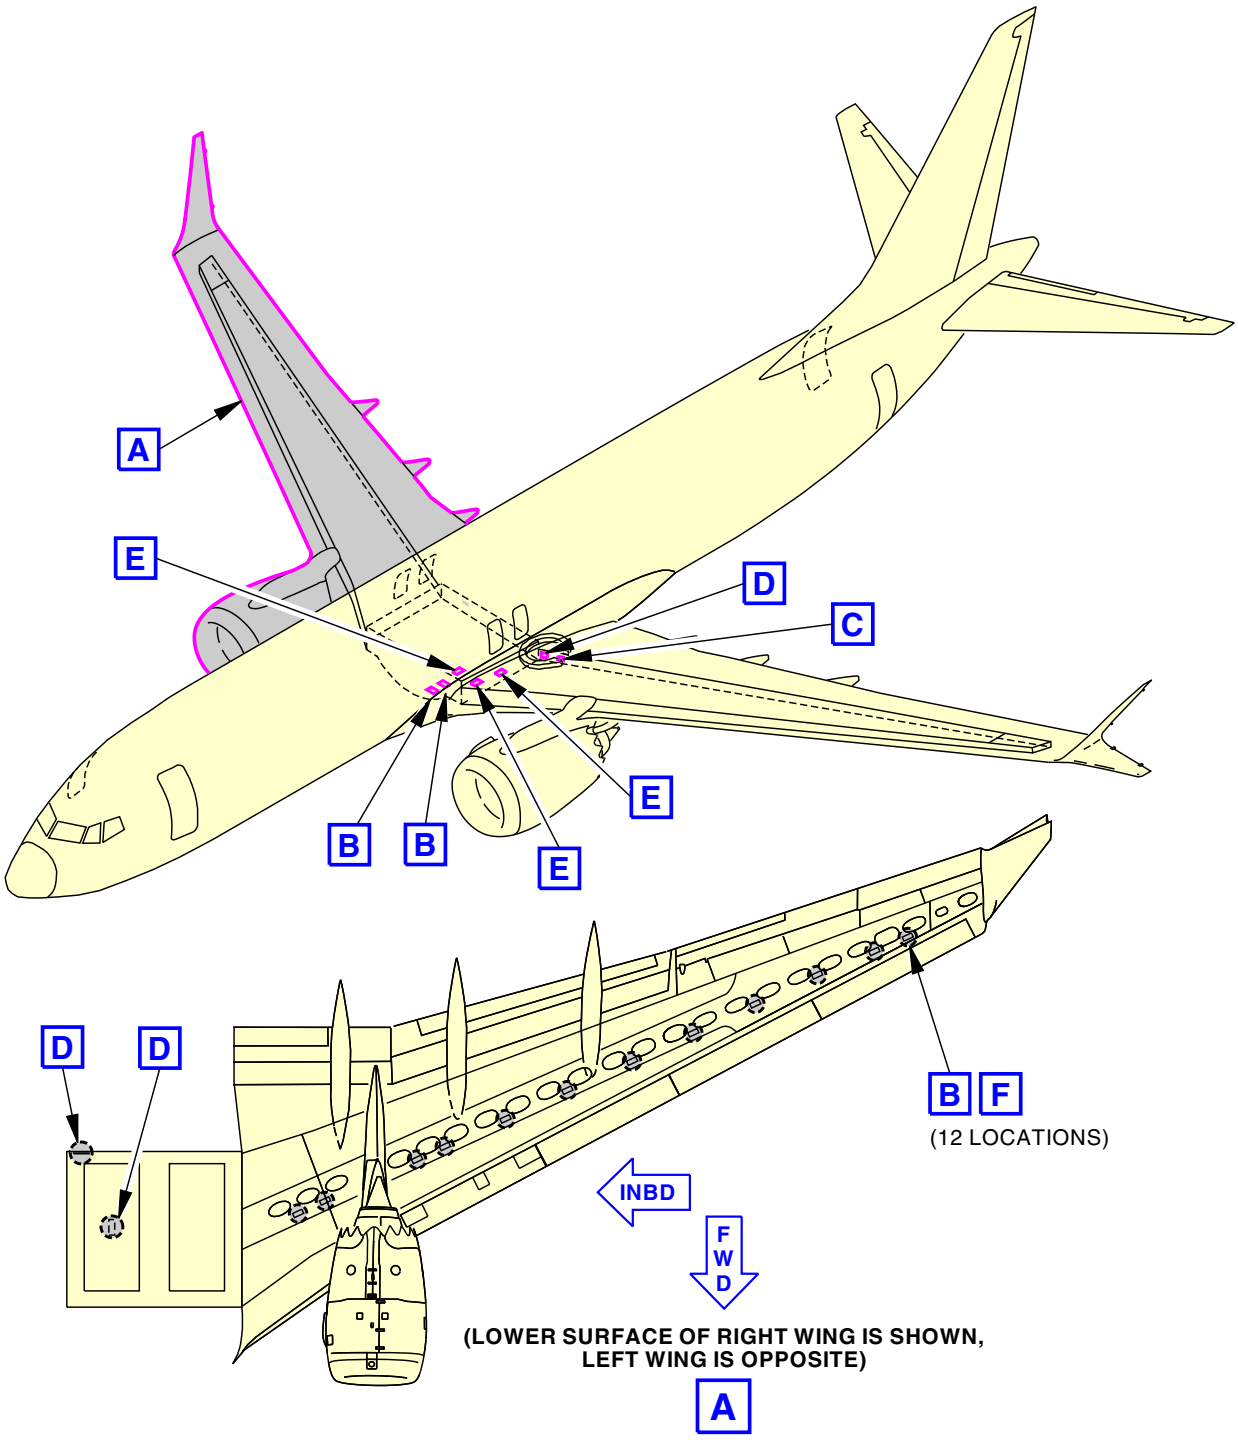


**Fuel System Placards and Markings**
**Figure 202/11-24-01-990-802 (Sheet 1 of 3)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

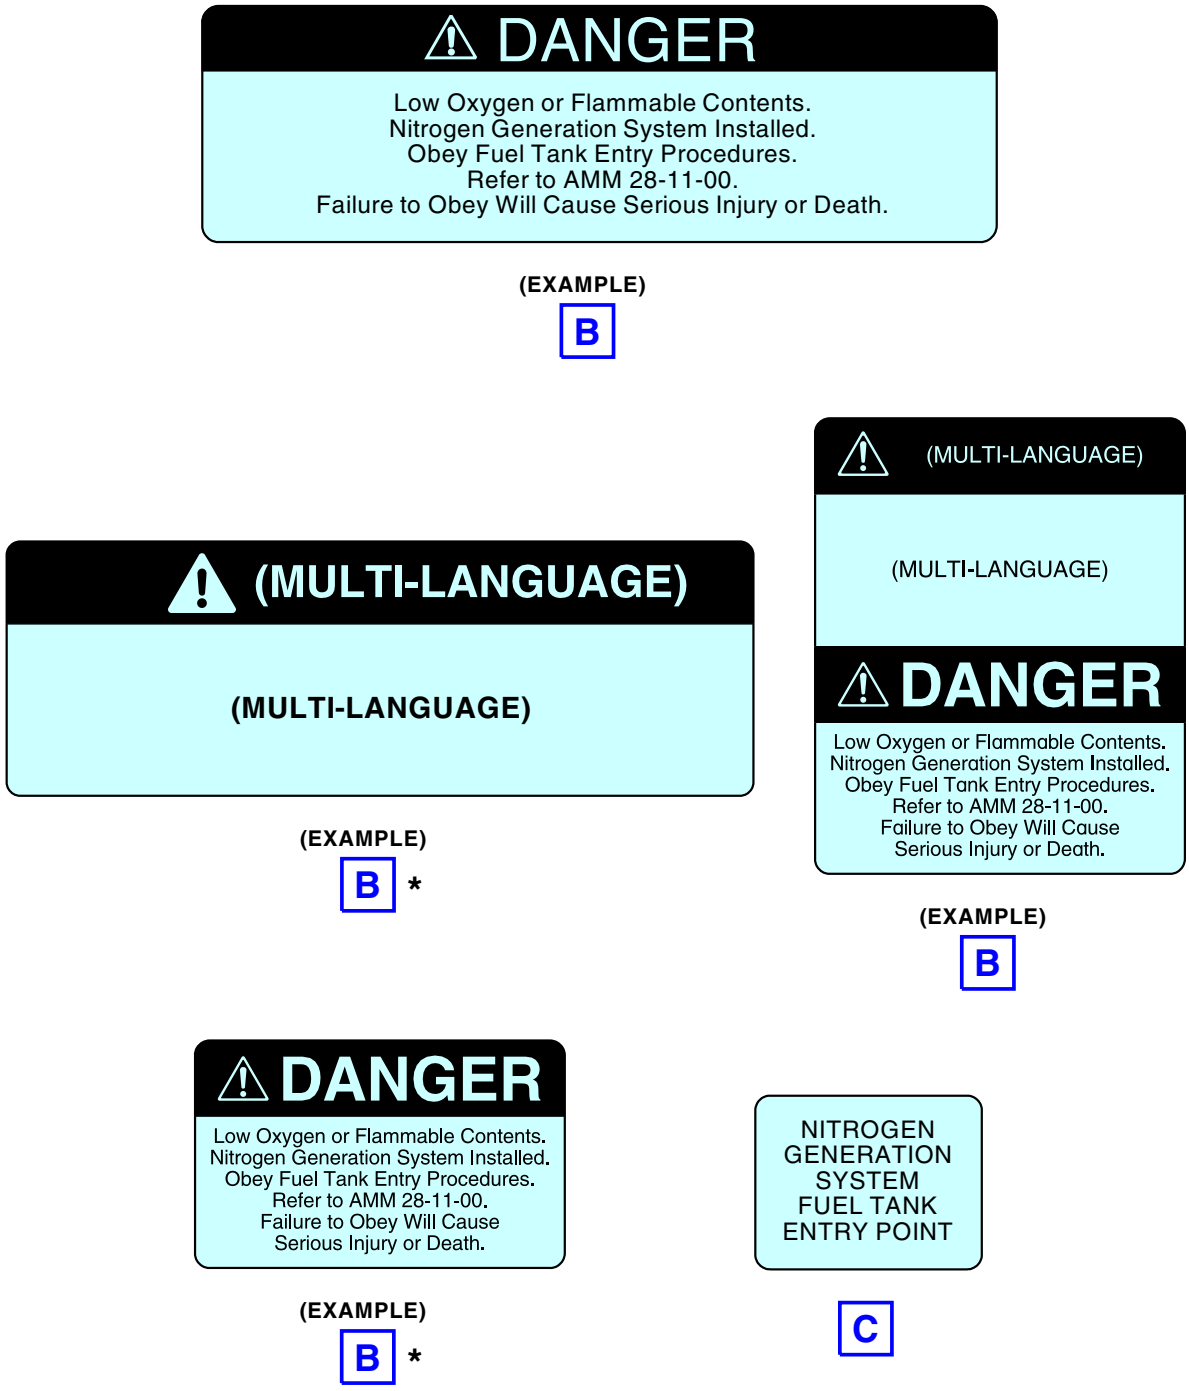


**Fuel System Placards and Markings**
**Figure 202/11-24-01-990-802 (Sheet 2 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

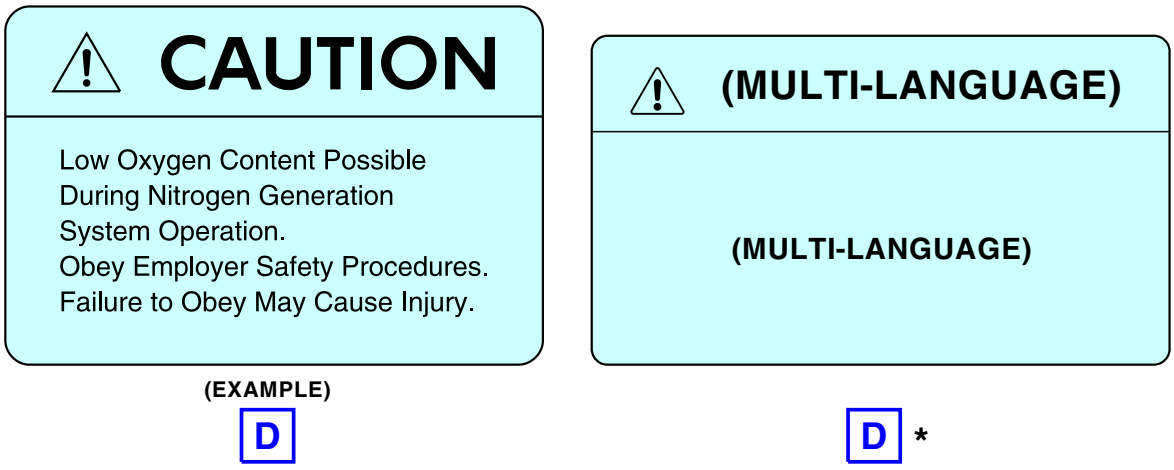


2410725 S00061526232_V7

**Fuel System Placards and Markings**
**Figure 202/11-24-01-990-802 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## WING PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

1. General
   A. This task shows the placards and markings on the wings.
   B. The location of the placards and markings is for an example only.


**TASK 11-24-04-890-801**

2. Wing Placards and Markings - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

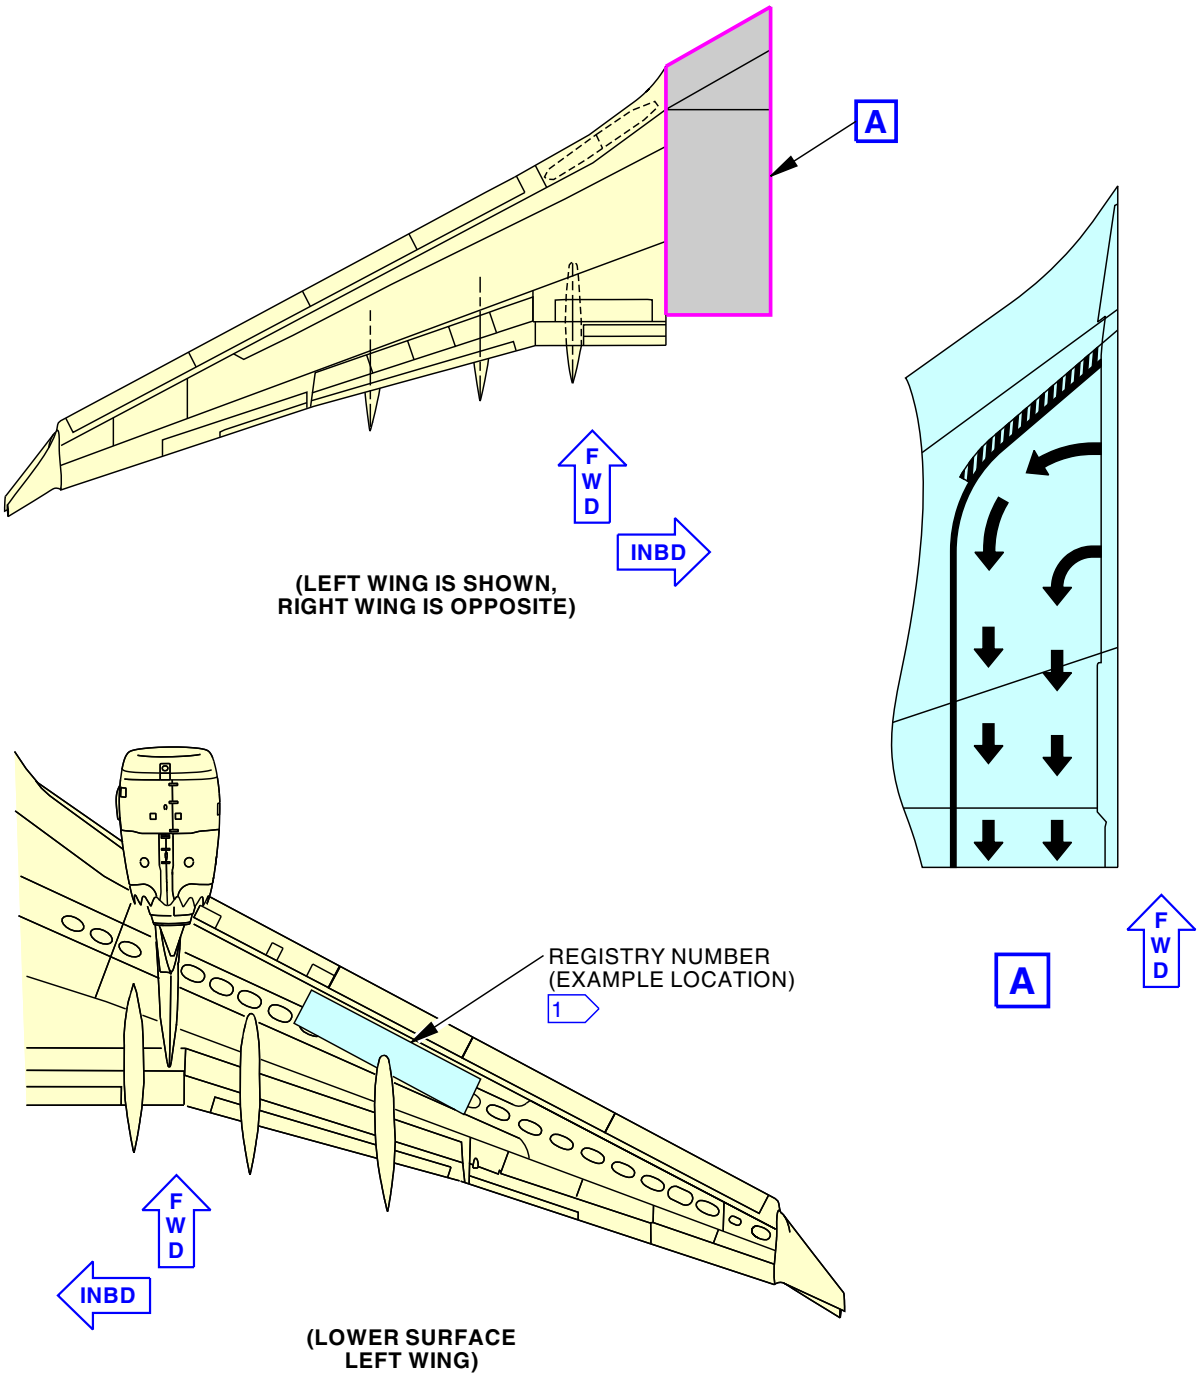


1 WING REGISTRY NUMBERS ARE CAAC REQUIRED ONLY

2410726 S00061526236_V2

**Wing Placards and Markings**
**Figure 201/11-24-04-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ENGINE FAN COWL PLACARDS AND MARKINGS

1. General
   A. This task shows the placards and markings for the engine fan cowl.
   B. The location of placards and markings is for an example only.


**TASK 11-25-03-890-801**

2. Engine Fan Cowl Placards and Markings - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

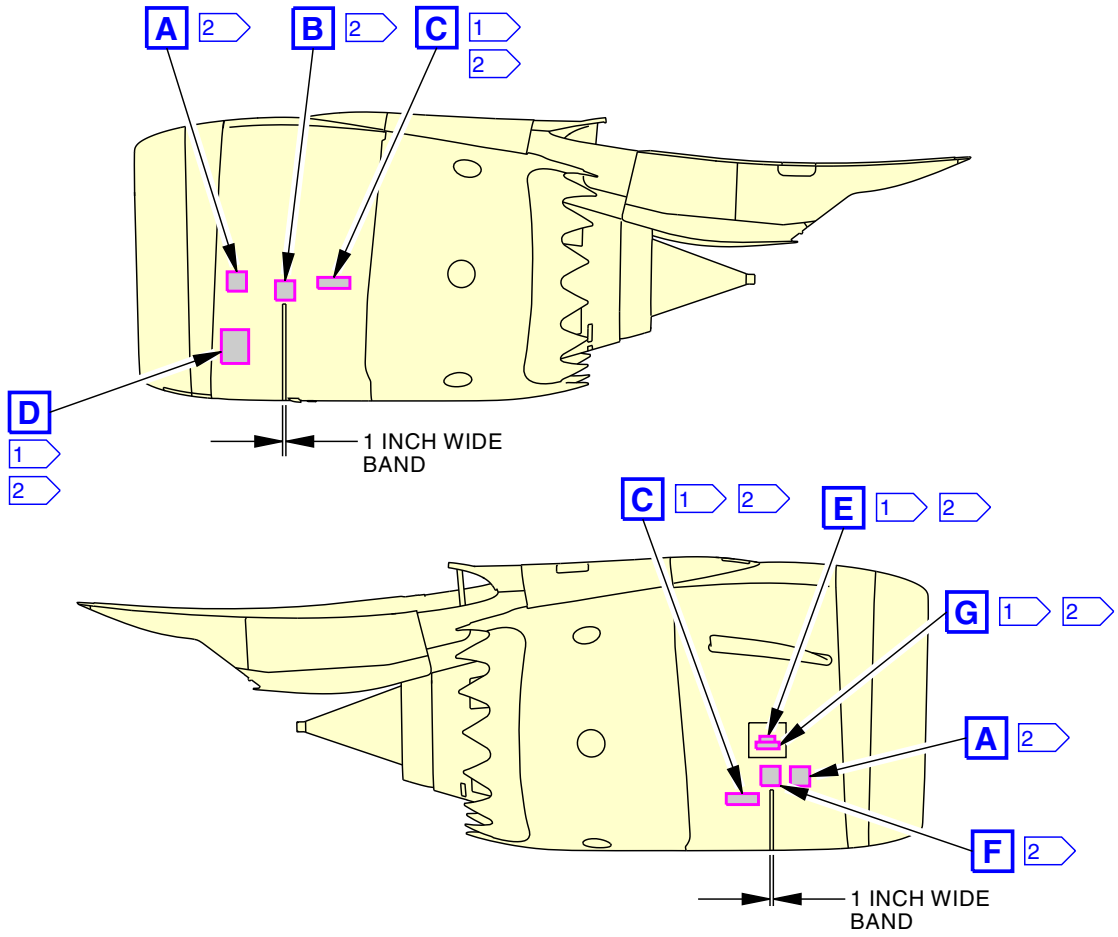




A


1 IF INSTALLED
2 AS INSTALLED

2410728 S00061526245_V5

**Engine Fan Cowl Placards and Markings**
**Figure 201/11-25-03-990-801 (Sheet 1 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

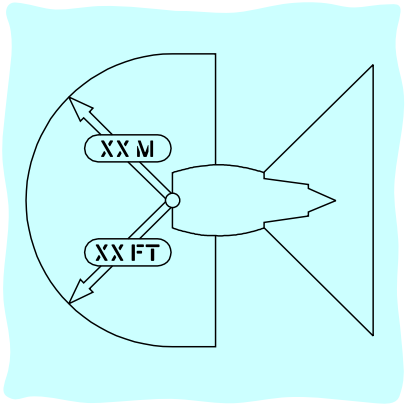


(EXAMPLE)

FWD B

WARNING:
STAND CLEAR OF
HAZARD AREAS WHILE
ENGINE IS RUNNING

(EXAMPLE)

C

(MULTI-LANGUAGE)

WARNING:
STAND CLEAR OF
HAZARD AREAS WHILE
ENGINE IS RUNNING

(EXAMPLE)

C *

IDG
OIL ACCESS

(EXAMPLE)

FWD D

2967774 S0000747088_V2


**Engine Fan Cowl Placards and Markings**
**Figure 201/11-25-03-990-801 (Sheet 2 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details


(MULTI-LANGUAGE)
IDG
OIL ACCESS

(EXAMPLE)




(MULTI-LANGUAGE)

(EXAMPLE)




ENGINE OIL ACCESS

(EXAMPLE)




(MULTI-LANGUAGE)
ENGINE OIL ACCESS


(EXAMPLE)




(MULTI-LANGUAGE)

(EXAMPLE)

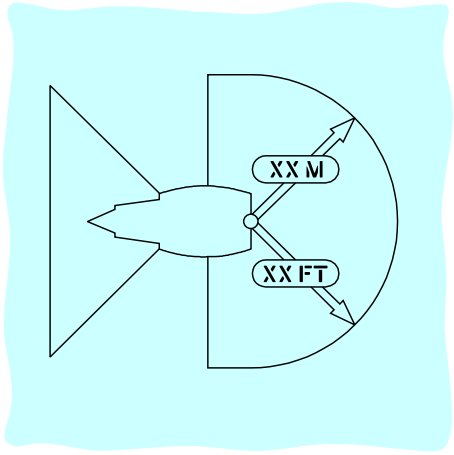


(EXAMPLE)




ETOPS REQUIREMENT
MAINTENANCE CONTROL
MUST BE CONTACTED
AFTER EVERY OIL SERVICE

(EXAMPLE)


G

2967775 S0000747089_V4


**Engine Fan Cowl Placards and Markings**
**Figure 201/11-25-03-990-801 (Sheet 3 of 3)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

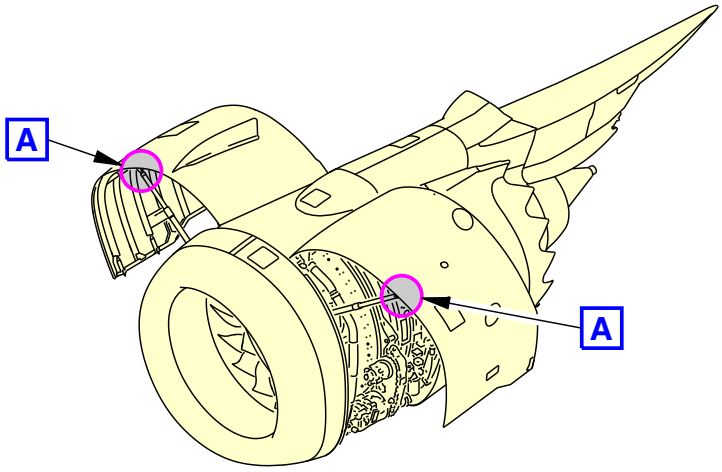


(LEFT SIDE IS SHOWN, RIGHT SIDE IS EQUIVALENT)

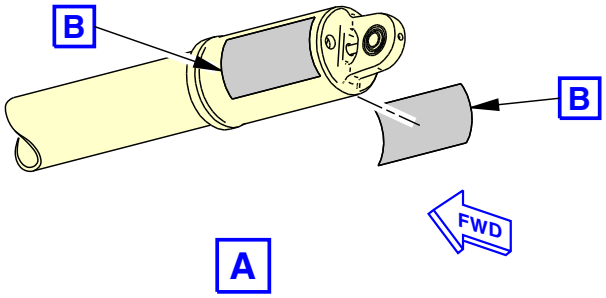

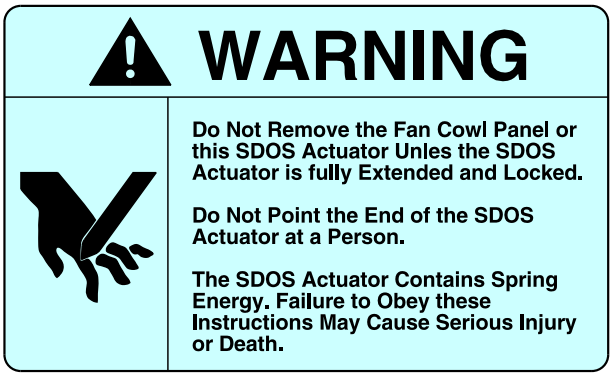
2945760 S0000722554_V2

**Engine Fan Cowl SDOS Actuator Placards and Markings**
**Figure 202/11-25-03-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ENTRY/SERVICE DOORS AND EMERGENCY EXITS PLACARDS AND MARKINGS

**1. General**

A. This task shows the internal placards and markings for the main entry and service doors, and the emergency exits.

B. The location of the placards and marking is for an example only.

C. This chapter shows English and MULTI-LANGUAGE placards installed on the airplane. The MULTI-LANGUAGE placards in this chapter only show the English text with a line of text that reads "(MULTI-LANGUAGE)" on the placard. The customer language will appear as a separate message on the same placard as is used for the standard English text placard. The customer language translation will be located adjacent to the English text. The exceptions are EXIT or lighted signs, or interior products such as closets that only use English.

D. Flagnote "AS INSTALLED" shows that locations of markers are an example only.

E. Flagnote "IF INSTALLED" shows that there can be small differences in the equipment installed on an airplane.


**TASK 11-30-01-890-801**

**2. Entry/Service Doors and Emergency Exits Placards and Markings - Maintenance Practices**


**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

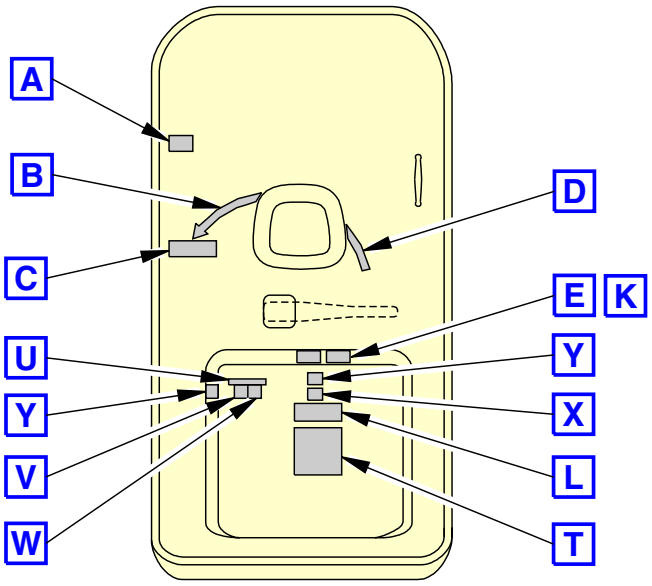


ENTRY/SERVICE DOOR 1 2
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)
(EXAMPLE)

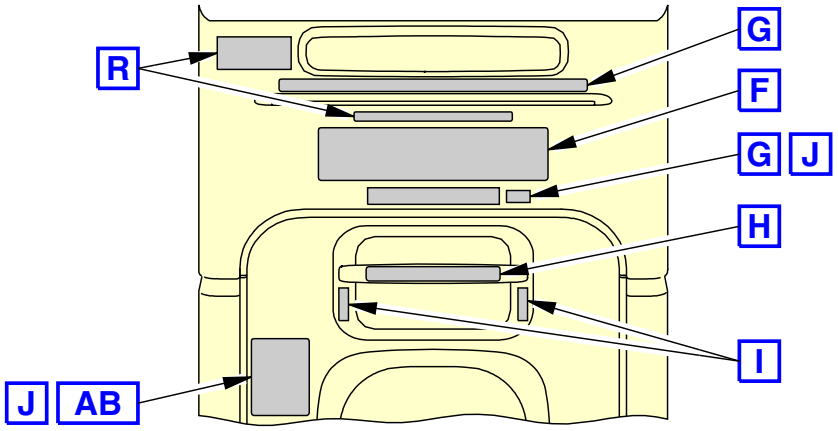


OVERWING EXIT 1 2
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)
(EXAMPLE)


1 IF INSTALLED
2 AS INSTALLED

2410729 S00061526250_V14


**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 1 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

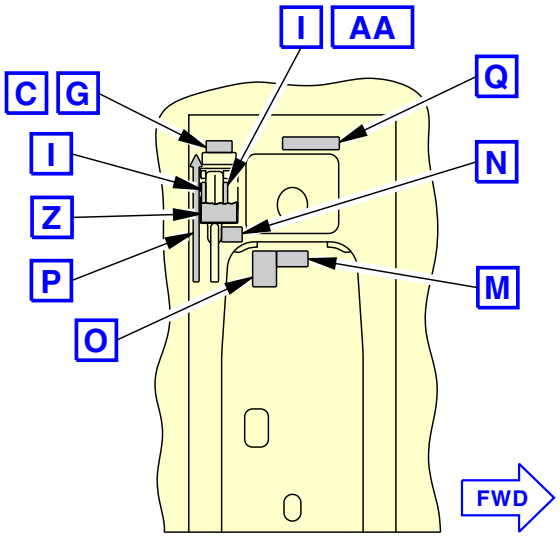


MID EXIT DOOR 1 2
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)
(EXAMPLE)

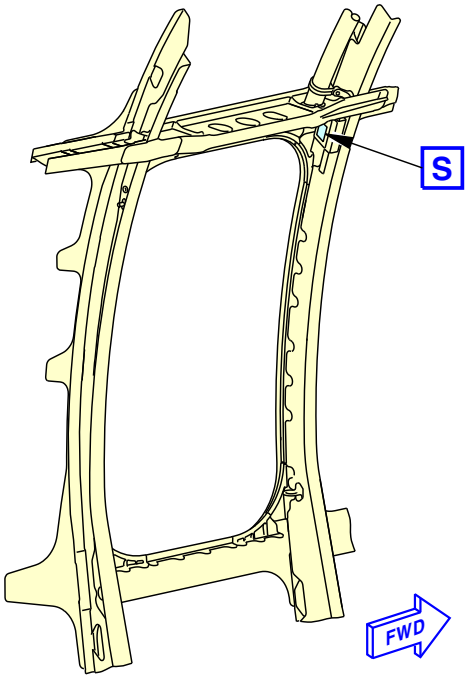


OVERWING EXIT 1 2
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)
(EXAMPLE)


1 IF INSTALLED
2 AS INSTALLED

2848317 S0000666291_V5

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 2 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

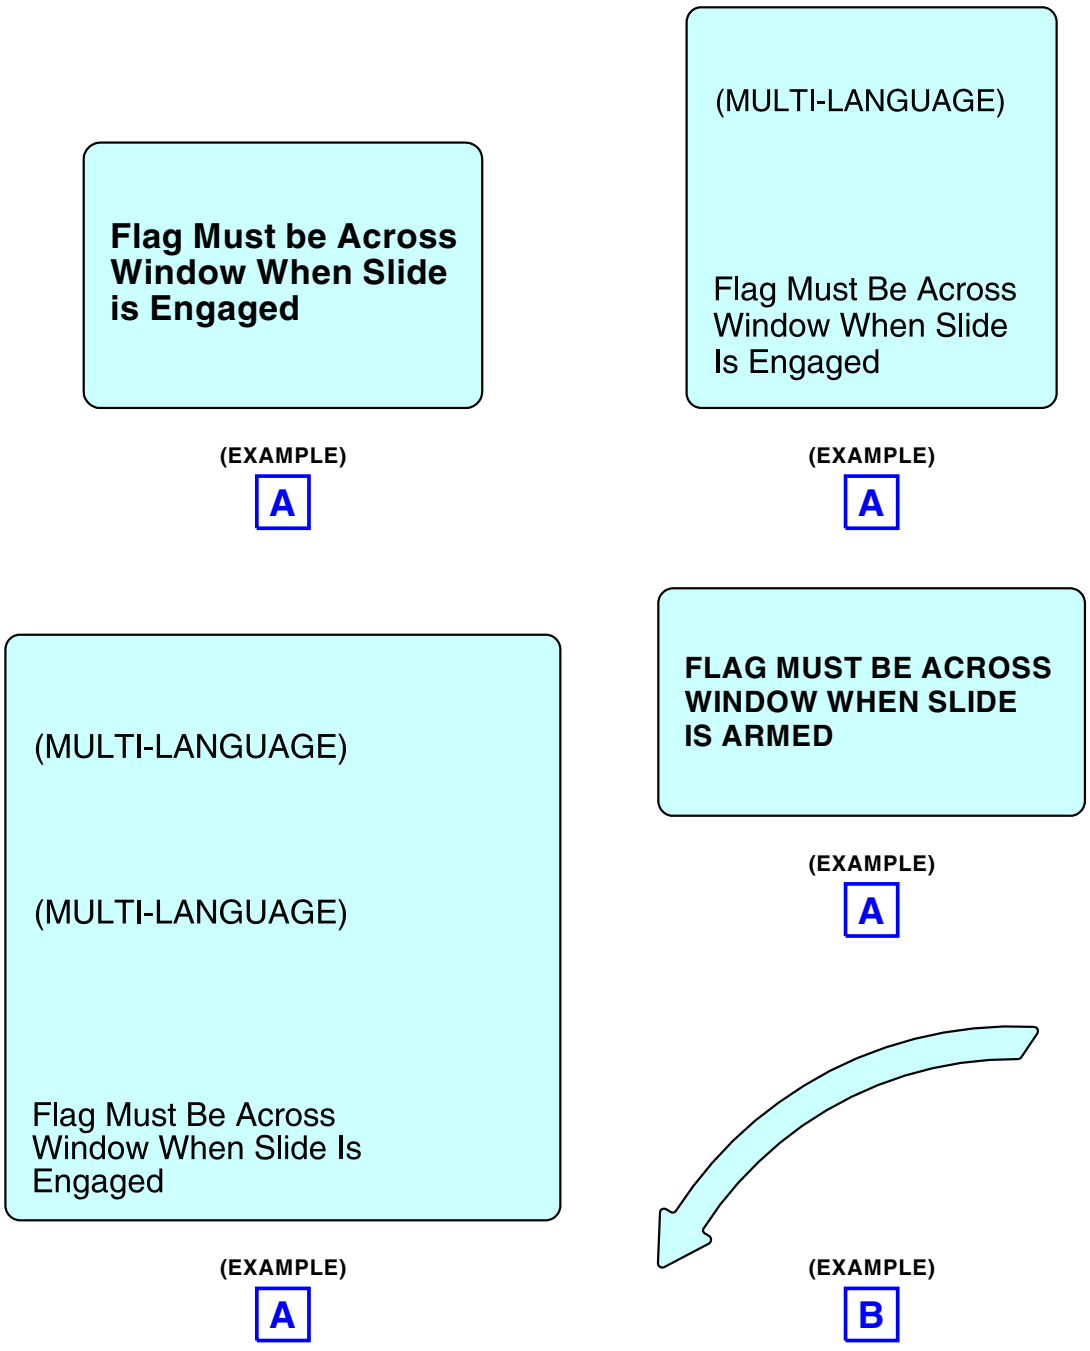



2483051 S0000583876_V6

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 3 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

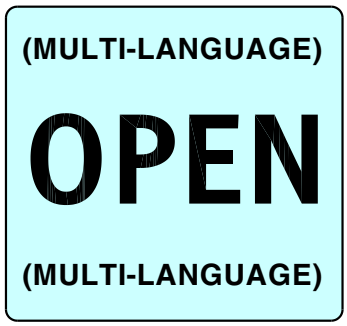


(EXAMPLE)

C





(EXAMPLE)

C




(EXAMPLE)

C

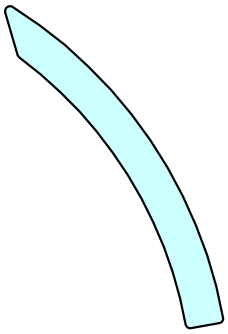

(EXAMPLE)

D

3032025 S0000802716_V1

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 4 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

Slide Inside

Slide Inflates Automatically When Engaged and Door Is Opened

(EXAMPLE)

E

SLIDE INSIDE

SLIDE INFLATES AUTOMATICALLY WHEN ARMED AND DOOR IS OPENED

(EXAMPLE)

E

SLIDE INSIDE

Slide inflates automatically when engaged and door is opened

(EXAMPLE)

E

(MULTI-LANGUAGE)

(MULTI-LANGUAGE)

Slide Inside

Slide Inflates Automatically When Engaged and Door Is Opened

(EXAMPLE)


E

2788483 S0000634163_V4

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 5 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

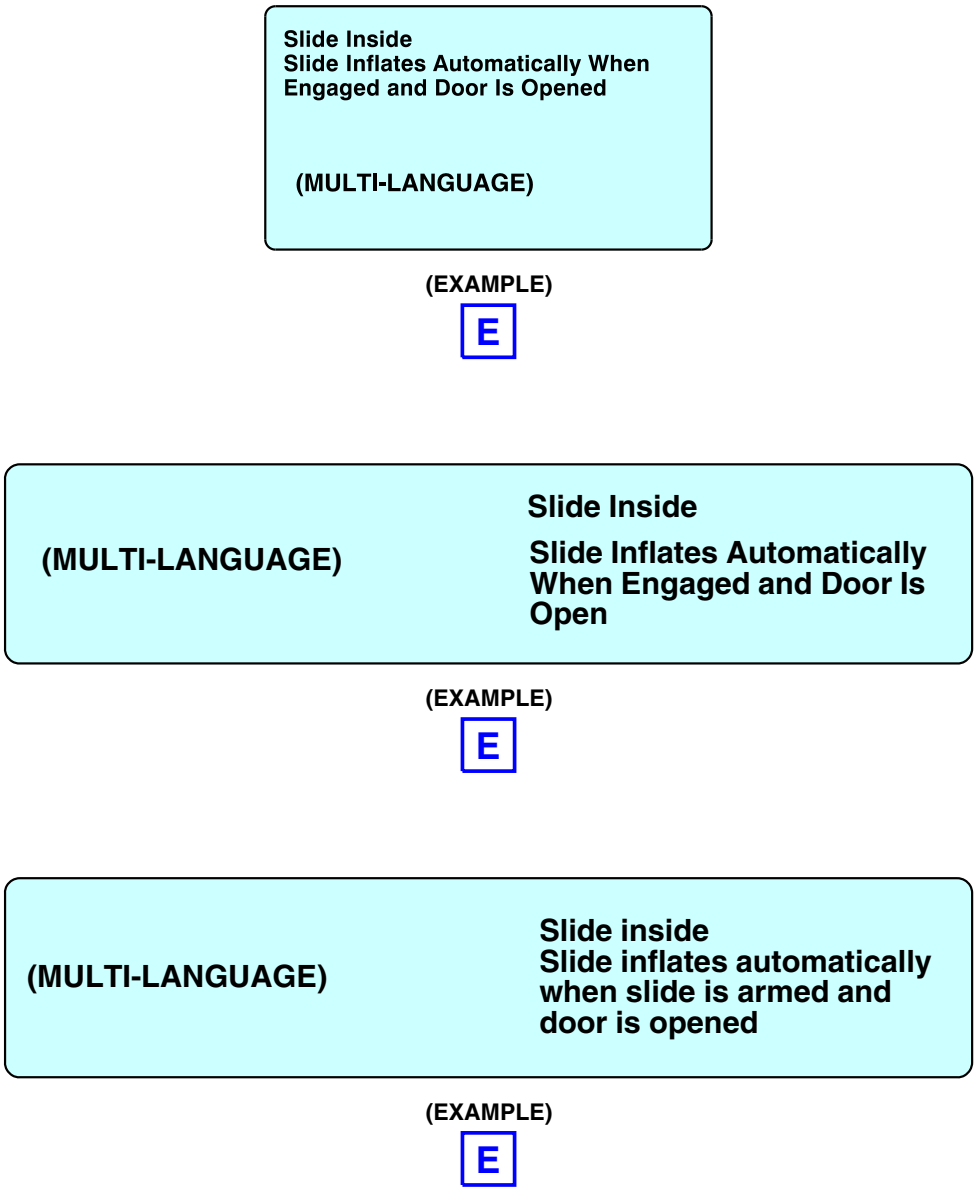



3136426 S0000863413_V1

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 6 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

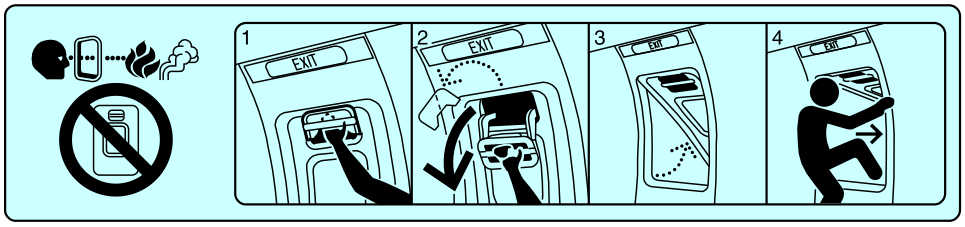


BAC29PPS35847

(EXAMPLE)

F 1

(MULTI-LANGUAGE)
Emergency use only

(EXAMPLE)

G 1

(MULTI-LANGUAGE)
Emergency use only
(MULTI-LANGUAGE)

(EXAMPLE)

G 1

Emergency
Use Only

(EXAMPLE)

G 1

↓ Pull ↓

(EXAMPLE)

H

↓ (MULTI-LANGUAGE) Pull (MULTI-LANGUAGE) ↓

(EXAMPLE)

H

↓ (MULTI-LANGUAGE) Pull ↓

(EXAMPLE)

H

1 IF INSTALLED

2483052 S0000583879_V7

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 7 of 14)**

I



ECCN 9E991 BOEING PROPRIETARY - See title page for details



(EXAMPLE)

I

By Federal Law,
Children Under
Age 15 May
Not Sit In
Emergency Exit
Rows

(EXAMPLE)

J

Caution
Escape Slide
No Seat

(EXAMPLE)

K 1

(MULTI-LANGUAGE)

In emergency use manual inflation
if slide does not inflate automatically

(EXAMPLE)

L 1

Slide Inside

Slide Inflates Automatically
When Door Is Opened

(EXAMPLE)

M

(MULTI-LANGUAGE)

Slide Inside
Slide Inflates Automatically
When Door is Opened

(EXAMPLE)

M

(MULTI-LANGUAGE)

Slide Inside

Slide Inflates Automatically
When Engaged and Door Is Opened

(EXAMPLE)

M 1


1 IF INSTALLED

3032026 S0000802717_V2

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 8 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

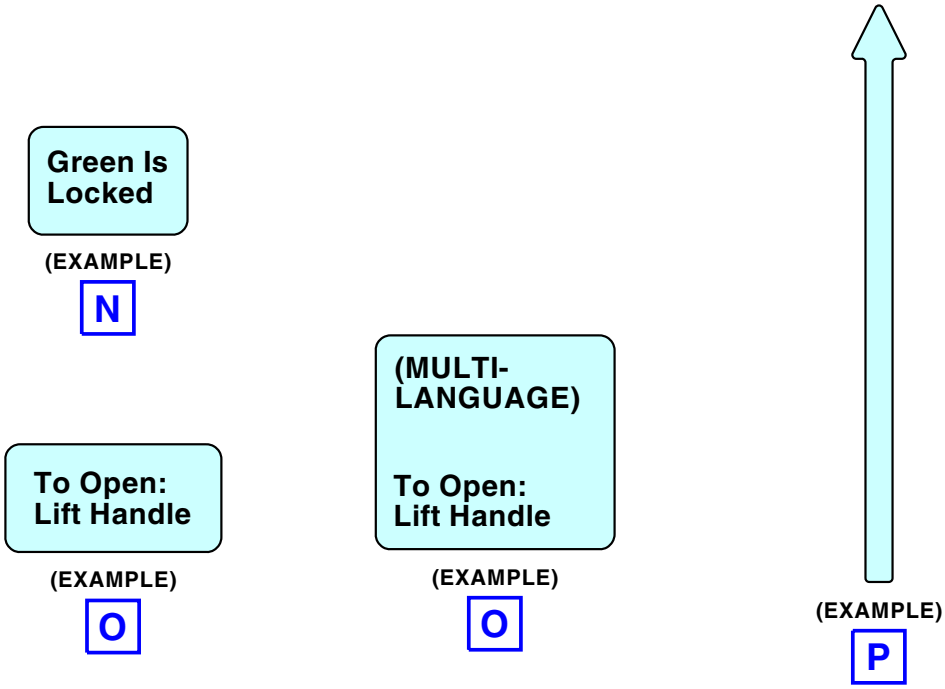






(EXAMPLE)

Q

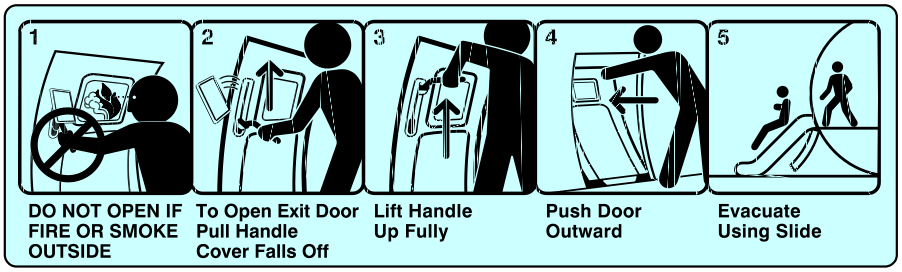


(EXAMPLE)


Q

2848319 S0000666292_V7

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 9 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

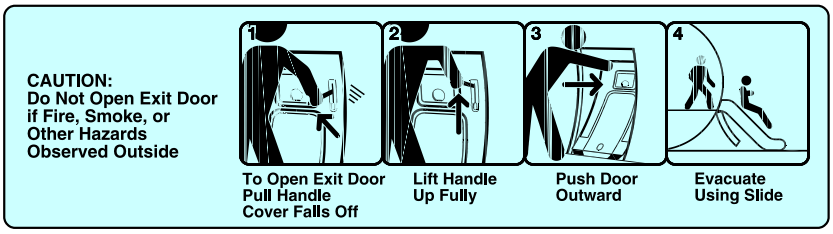



(EXAMPLE)

Q





(EXAMPLE)

Q

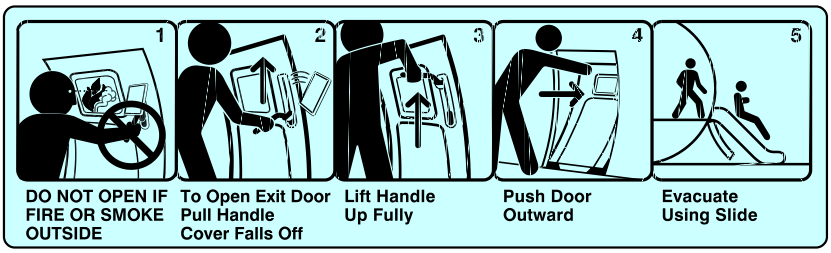


(EXAMPLE)

Q

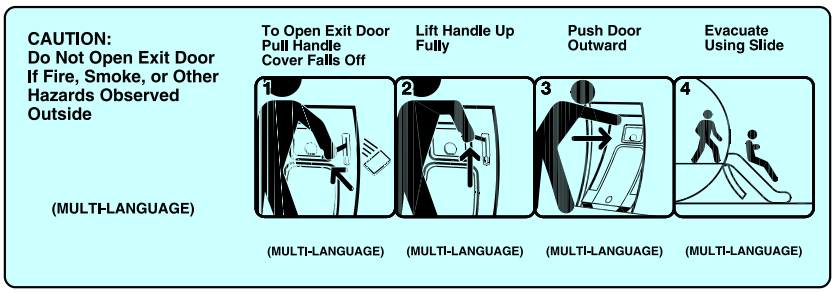


(EXAMPLE)


Q

2911955 S0000698260_V9

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 10 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

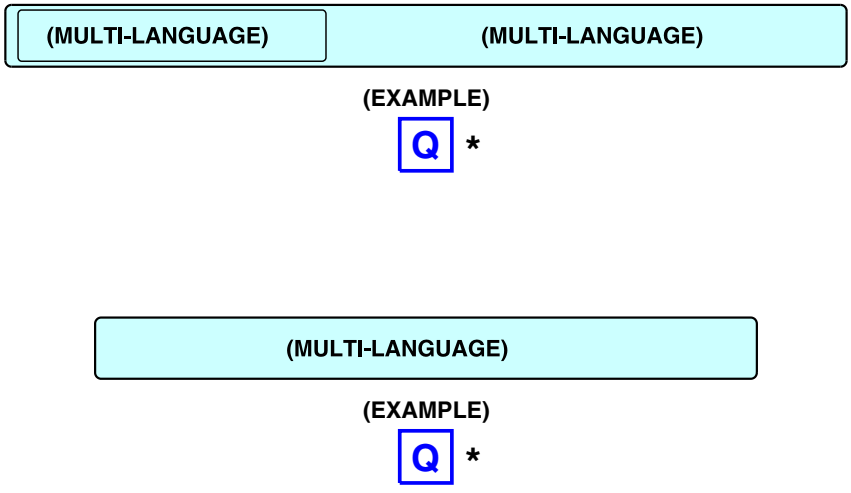


3135709 S0000863179_V1

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 11 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE) Emergency Use Only

(EXAMPLE)

R

(MULTI-LANGUAGE) EMERGENCY EXIT

(EXAMPLE)

R

(MULTI-LANGUAGE)

Escape strap

(EXAMPLE)

S

**CAUTION**

Before Removing Slide for Maintenance -
Install Safety Pin

---

After Installing New Slide -
Remove Safety Pin and
Place In Stowage Pocket

Ref 737 - MAX AMM 25-66-01

(EXAMPLE)

T

For First Row Passengers Only

(EXAMPLE)

U



(EXAMPLE)

V



(EXAMPLE)

W



(EXAMPLE)

X

Fasten Seat Belt While Seated
Life Vest Under Your Seat

(MULTI-LANGUAGE)

(EXAMPLE)

Y

3019176 S0000791008_V5

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 12 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details




(EXAMPLE)

Z




(EXAMPLE)

Z




(EXAMPLE)

Z




(EXAMPLE)


Z

3064846 S0000826185_V3

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 13 of 14)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

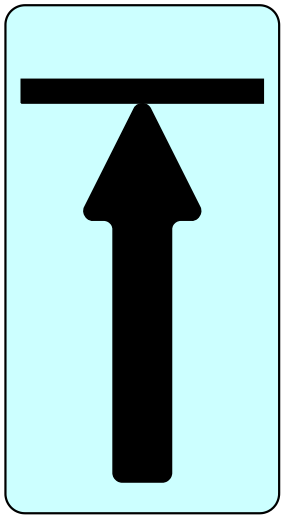

(EXAMPLE)

AA

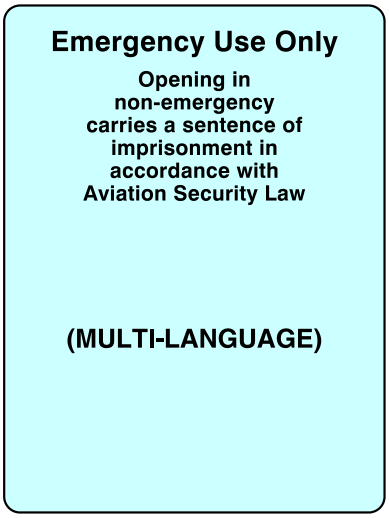


(EXAMPLE)

AB

3131093 S0000861310_V1

**Entry/Service Doors and Emergency Exits Placards and Markings**
**Figure 201/11-30-01-990-801 (Sheet 14 of 14)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## FLIGHT COMPARTMENT PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

1. General
   A. This task shows the placards and markings for the flight compartment.
   B. The location of the placards and markings is for an example only.


**TASK 11-30-02-890-801**

2. Flight Compartment Placards - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

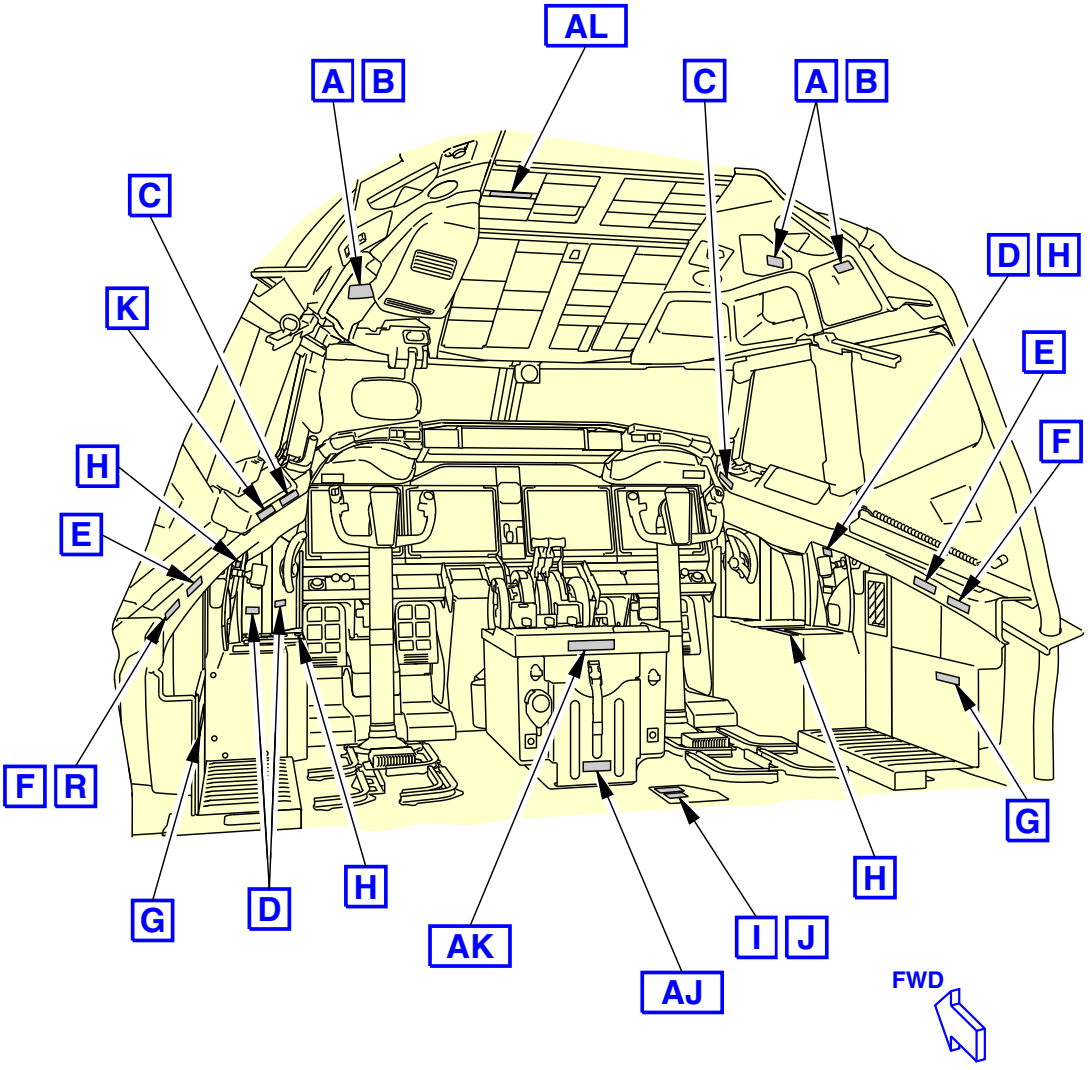


**FLIGHT COMPARTMENT MARKINGS** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410732 S00061526256_V9

**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 1 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

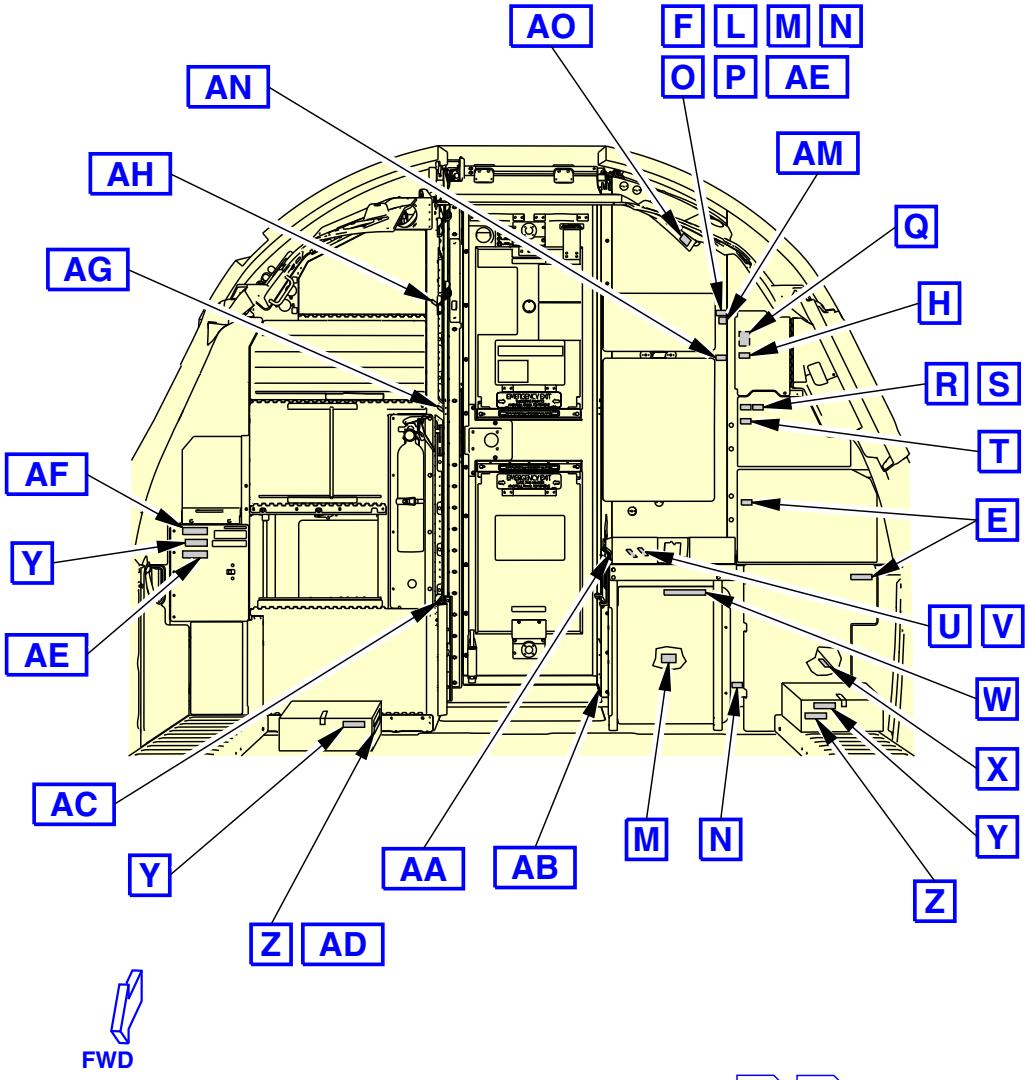


**FLIGHT COMPARTMENT MARKINGS** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410733 S00061526257_V10

**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 2 of 7)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

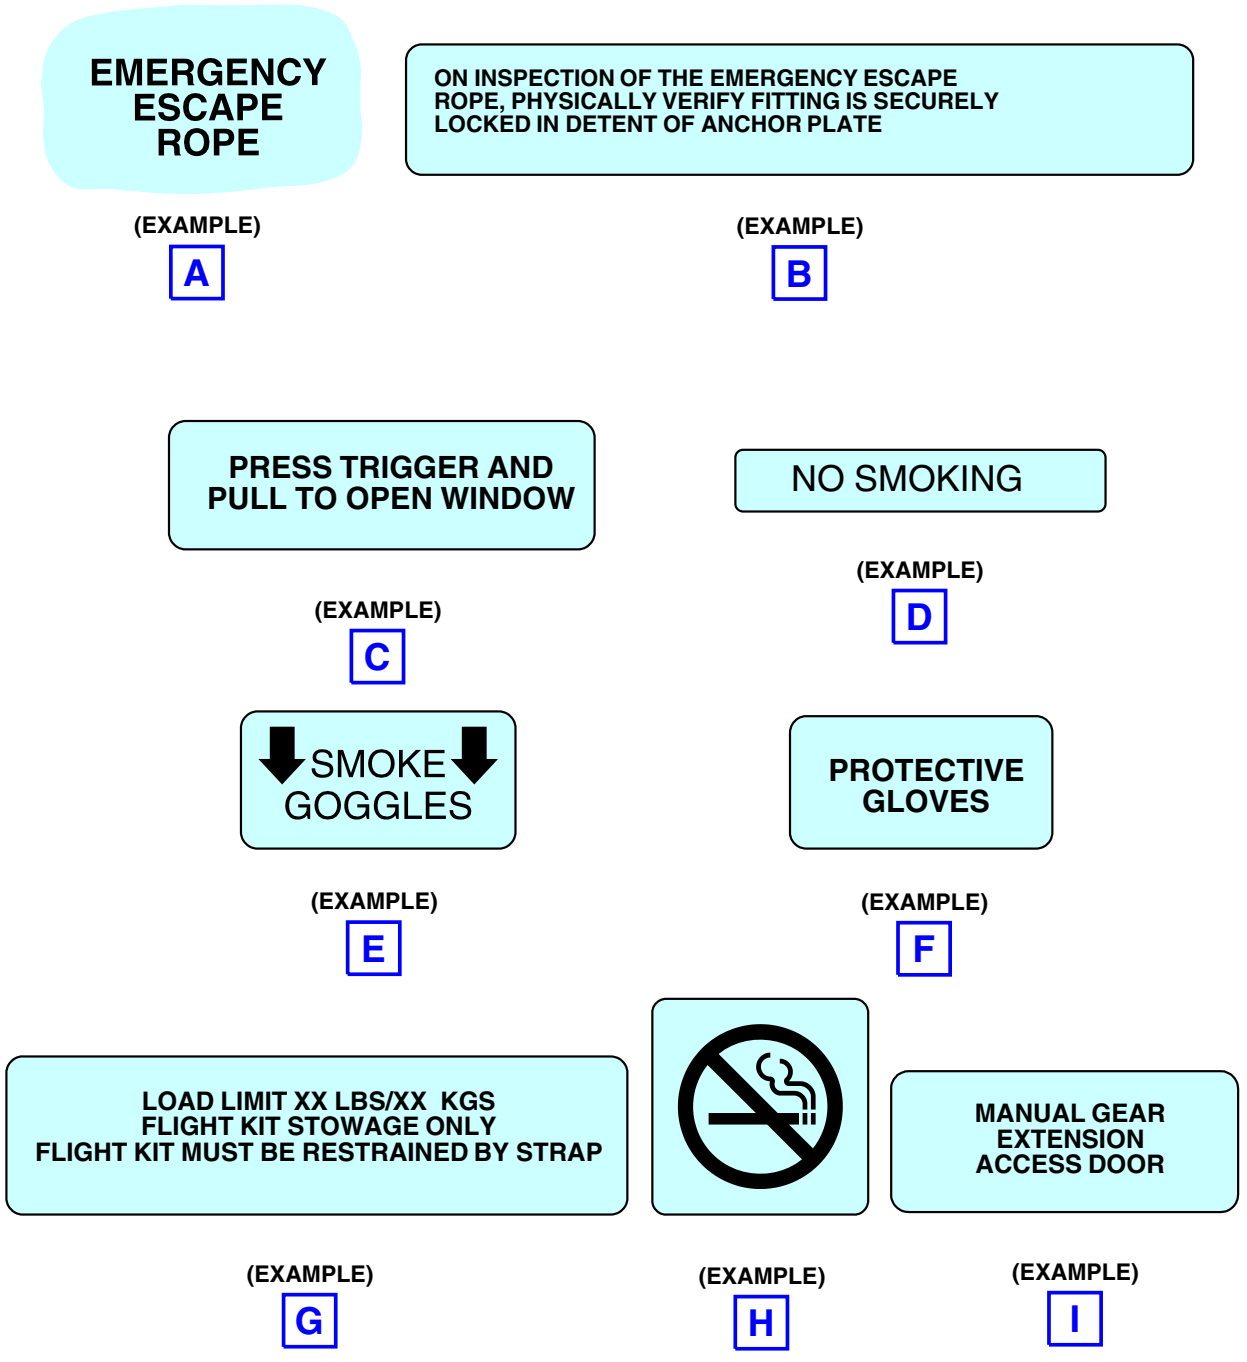


**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 3 of 7)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

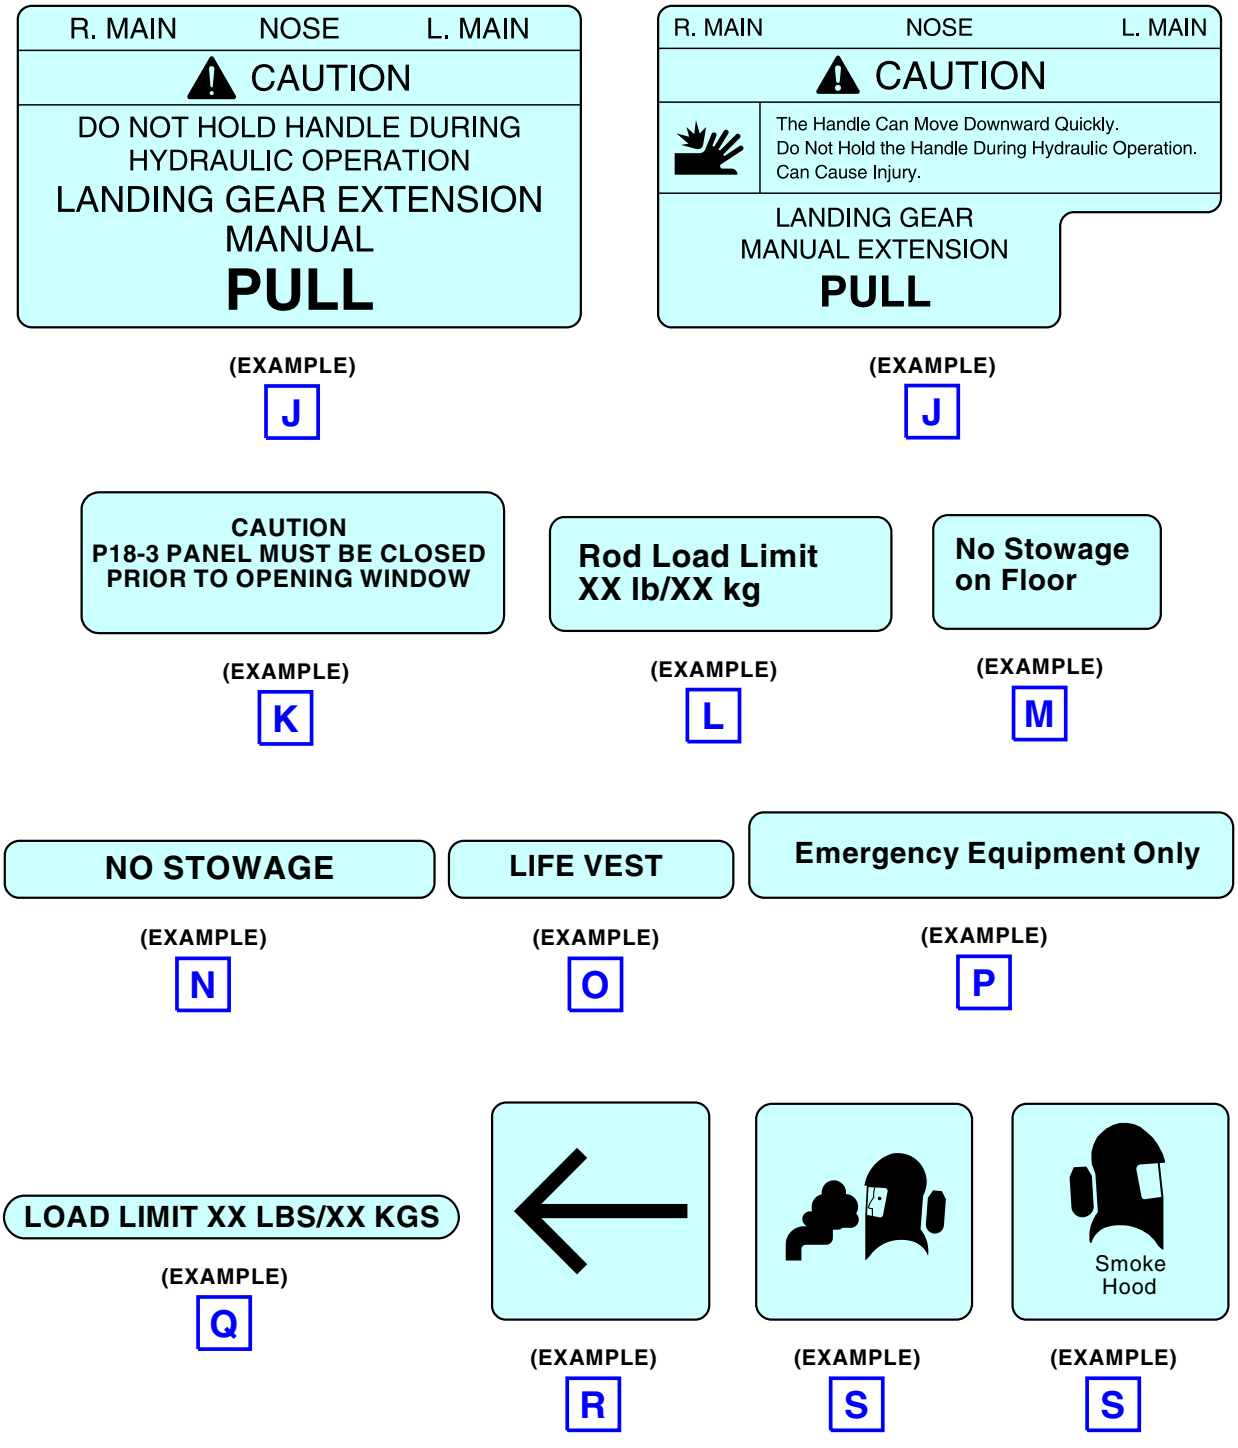


**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 4 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

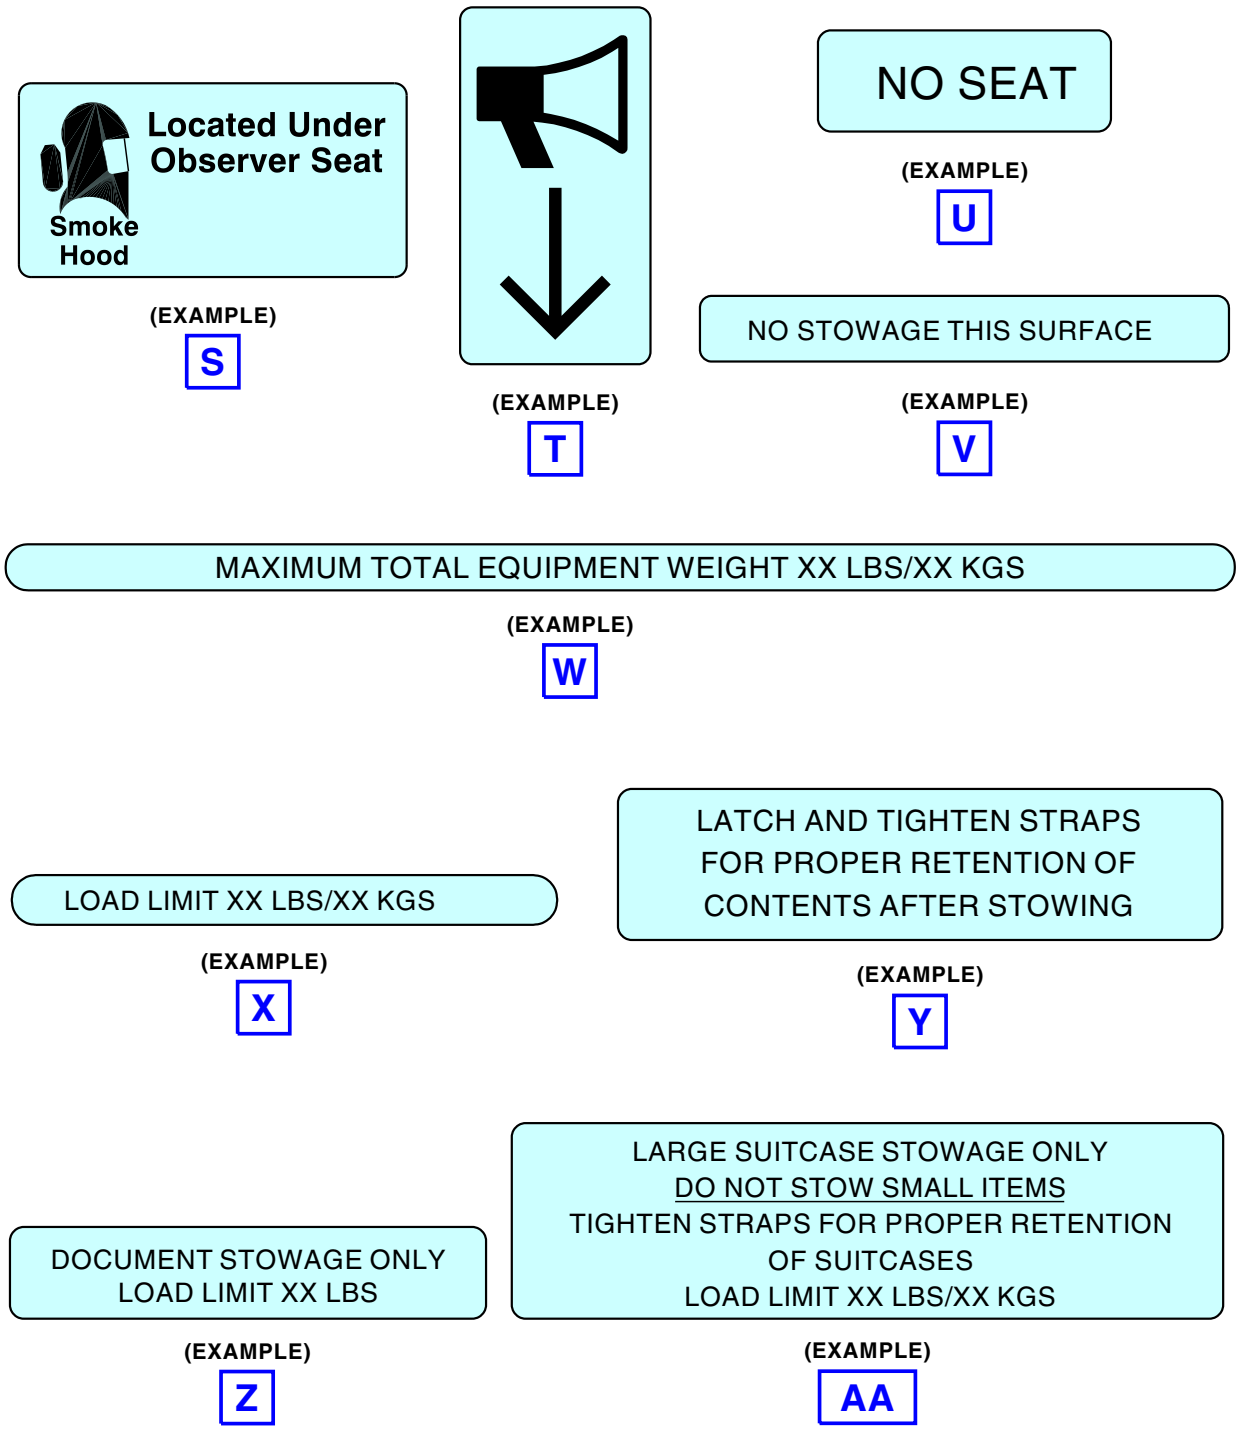



2410736 S00061526260_V5

**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 5 of 7)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

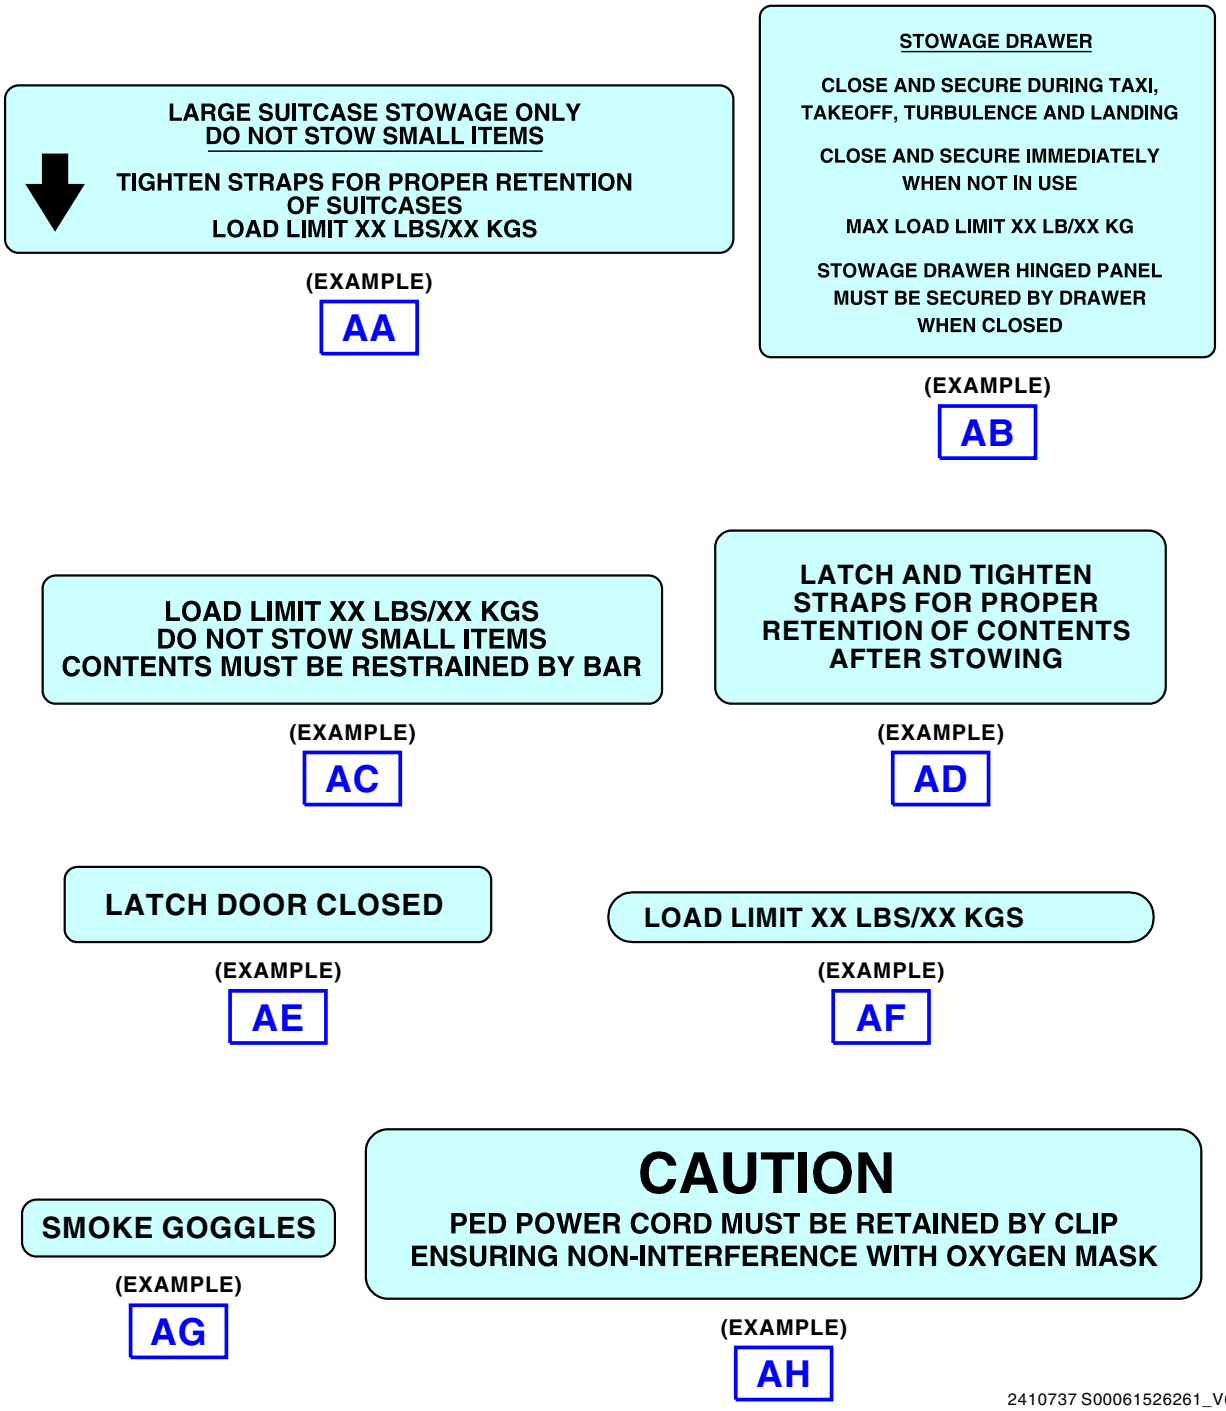


**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 6 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

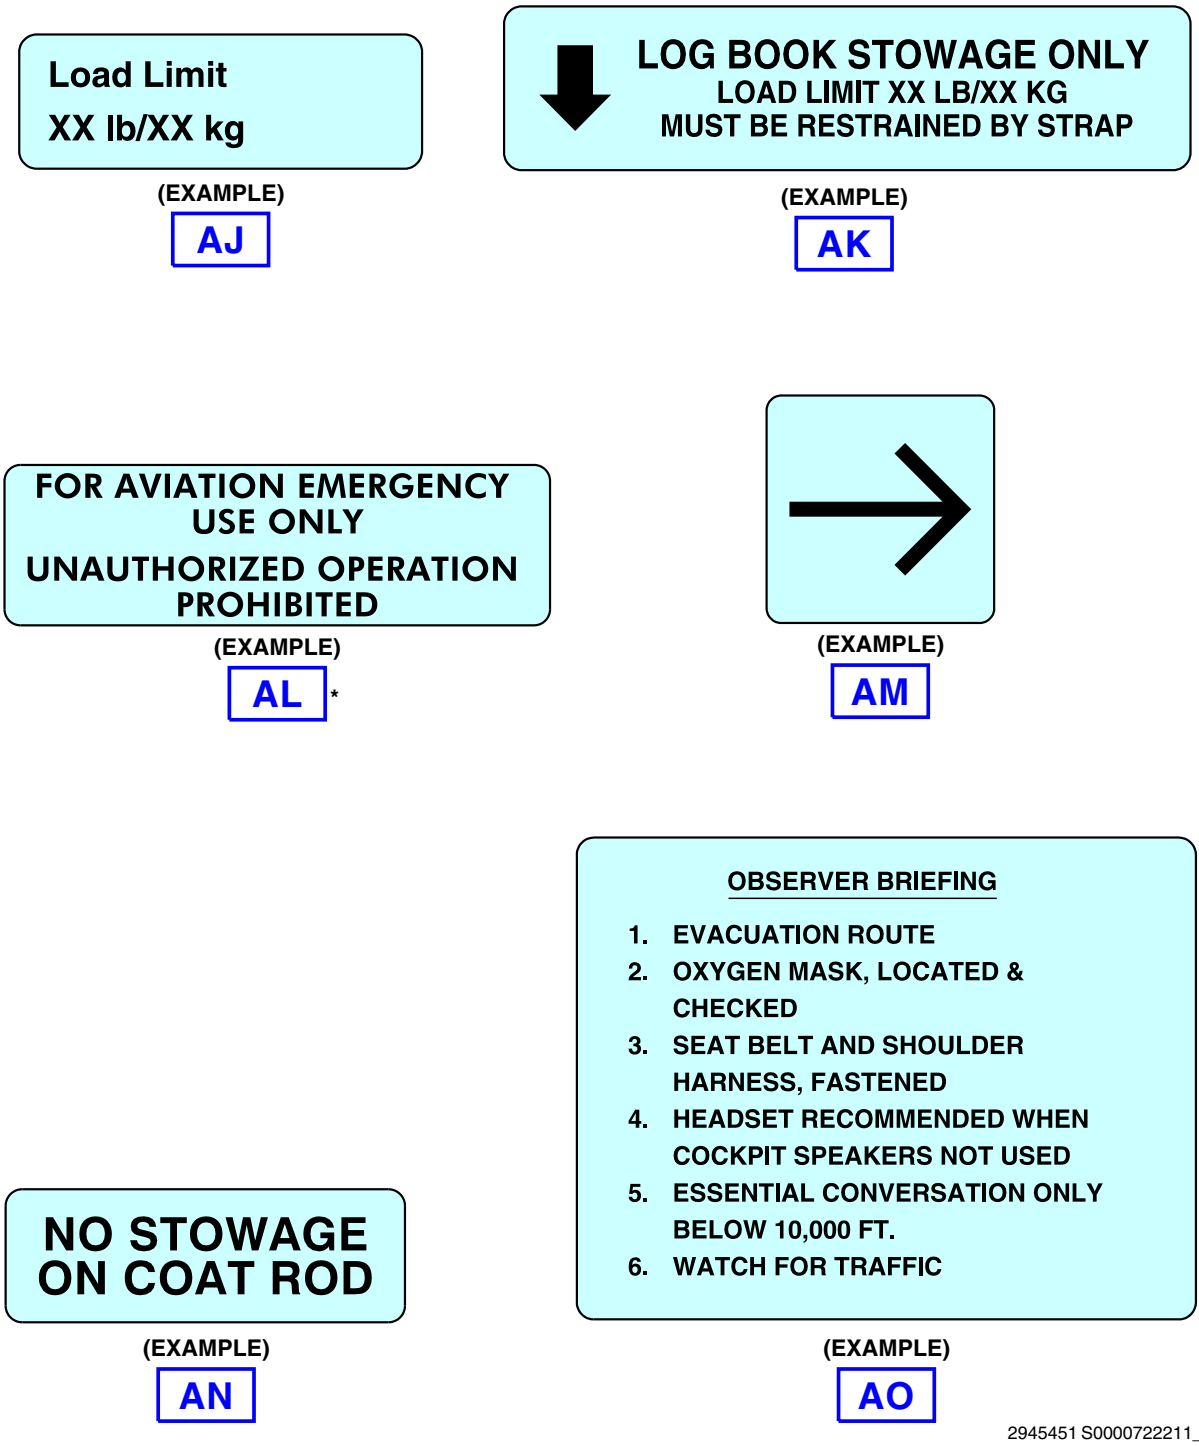


2945451 S0000722211_V6

**Flight Compartment Placards and Markings**
**Figure 201/11-30-02-990-801 (Sheet 7 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MAIN COMPARTMENT DIVIDER AND WALL PLACARDS - MAINTENANCE PRACTICES

1. General
   A. This task shows the placards and markings for the main compartment dividers and walls.
   B. The location of the placards and markings is for an example only.
   C. The location of the multi-langauage placards and markings is for an example only.


**TASK 11-30-03-890-801**

2. Main Compartment Placards - Maintenance Practices

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

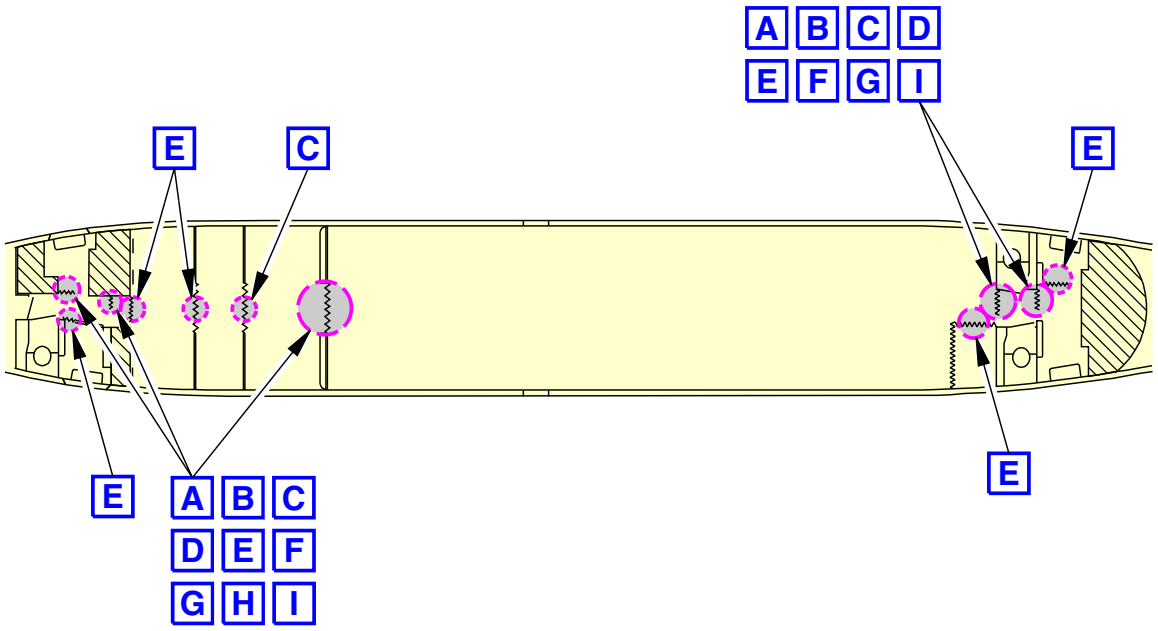


**INTERIOR CURTAINS** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410738 S00061526265_V7

**Main Compartment Curtain Placards**
**Figure 201/11-30-03-990-801 (Sheet 1 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

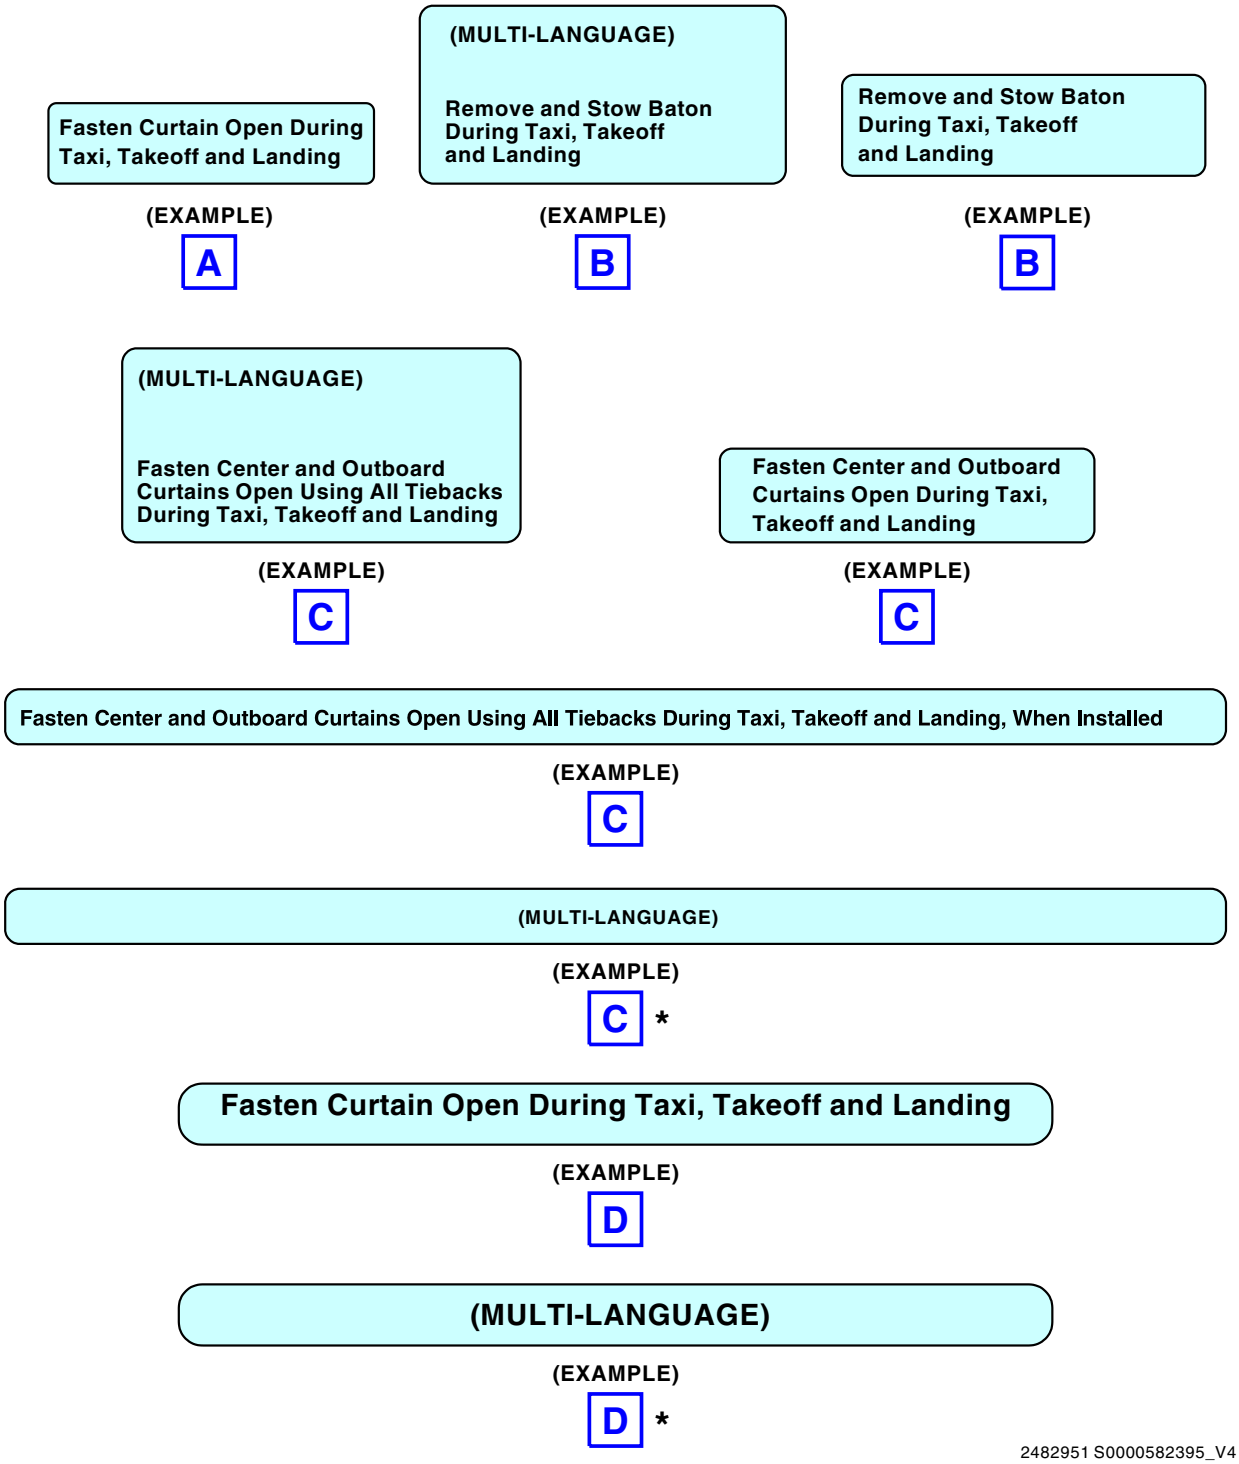



2482951 S0000582395_V4

**Main Compartment Curtain Placards**
**Figure 201/11-30-03-990-801 (Sheet 2 of 3)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

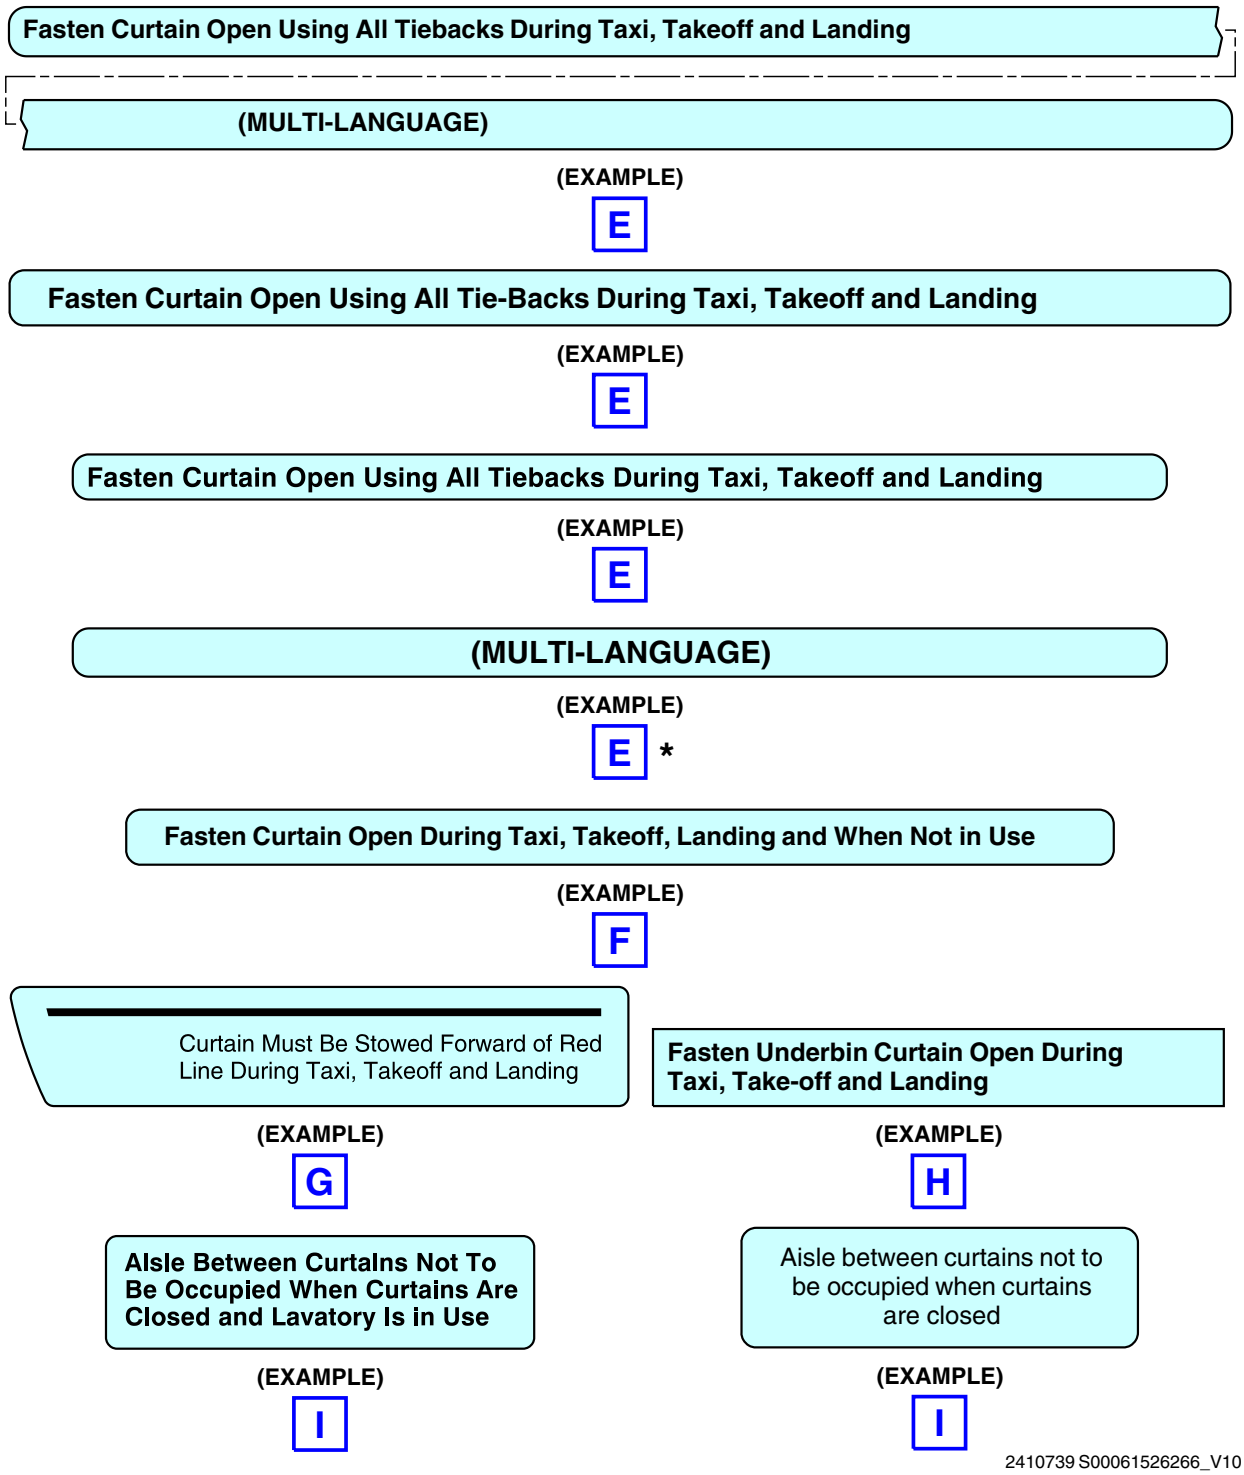


**Main Compartment Curtain Placards**
**Figure 201/11-30-03-990-801 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

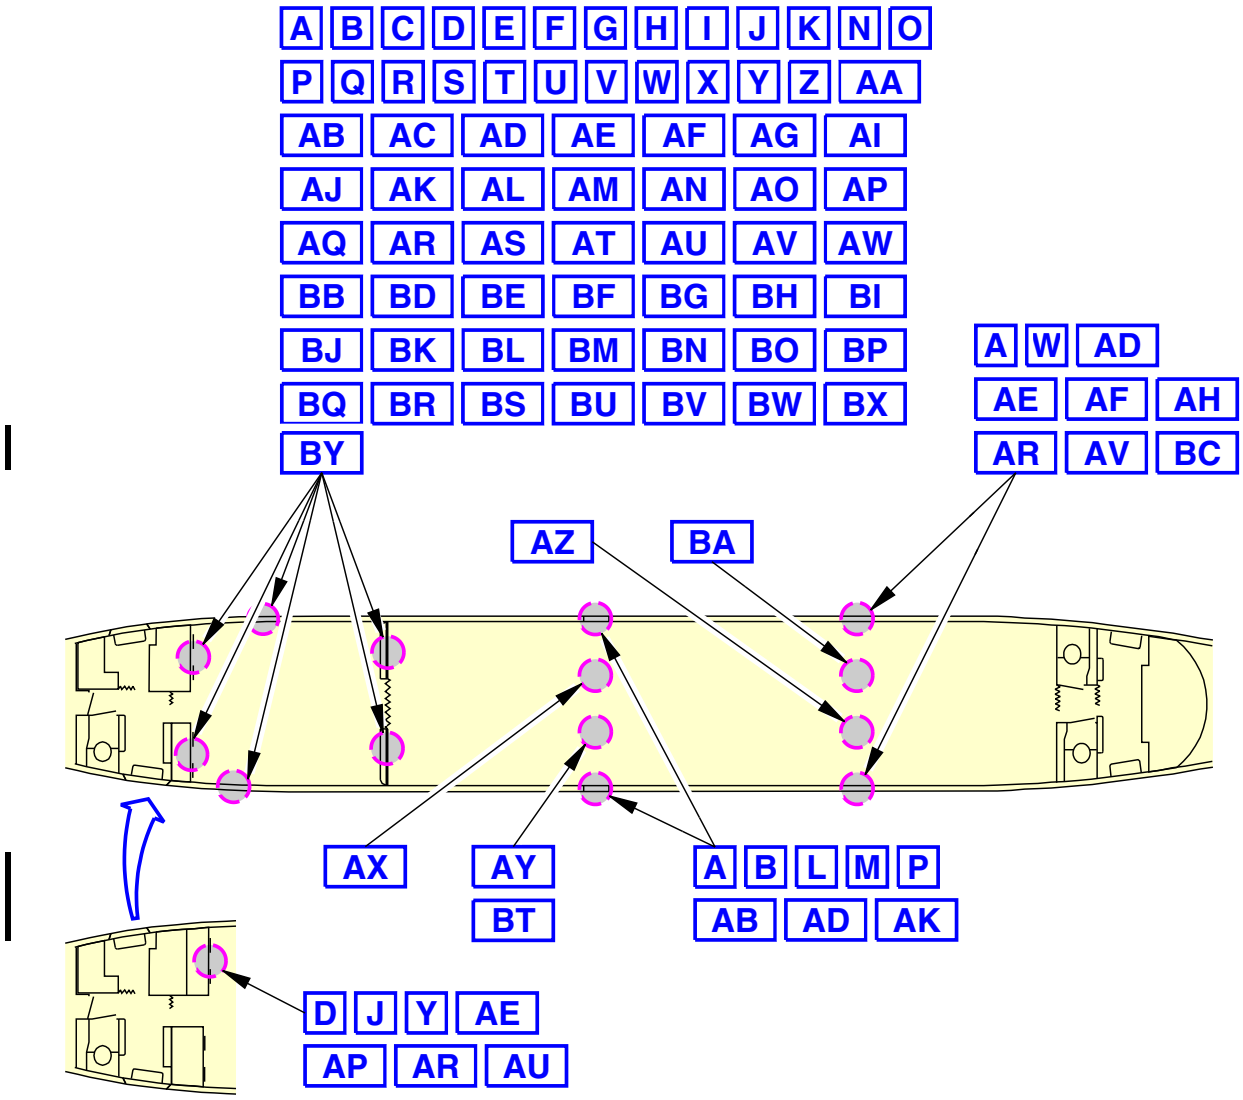


**BULKHEAD AND CLASS DIVIDERS** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410740 S00061526267_V40

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 1 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

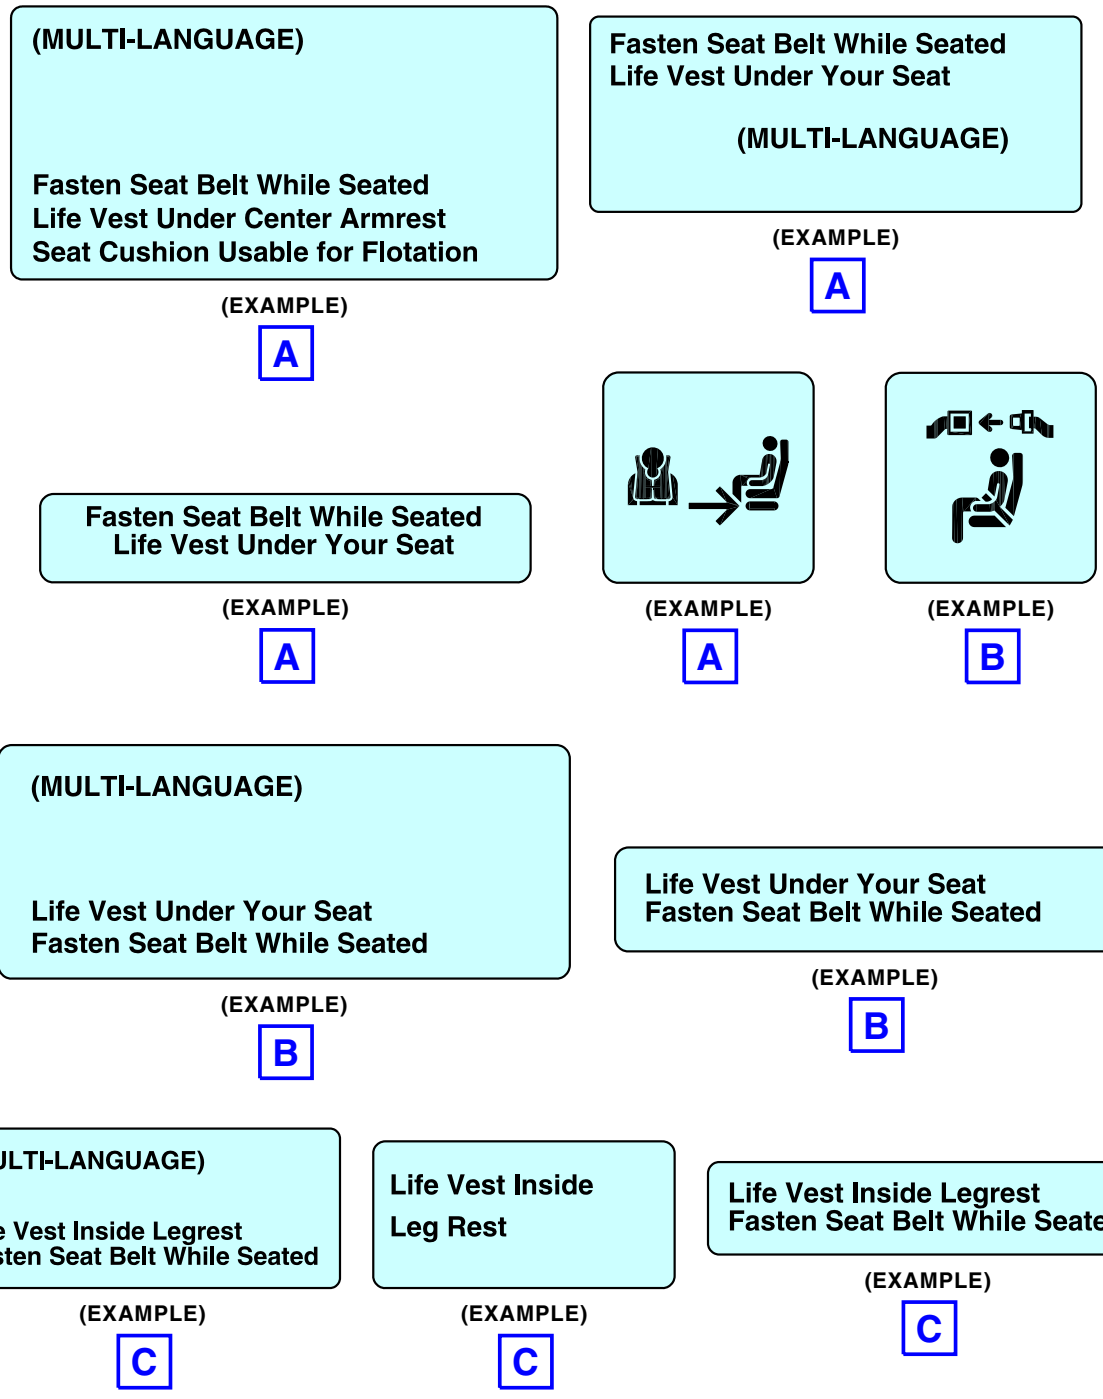



2410741 S00061526268_V4

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 2 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

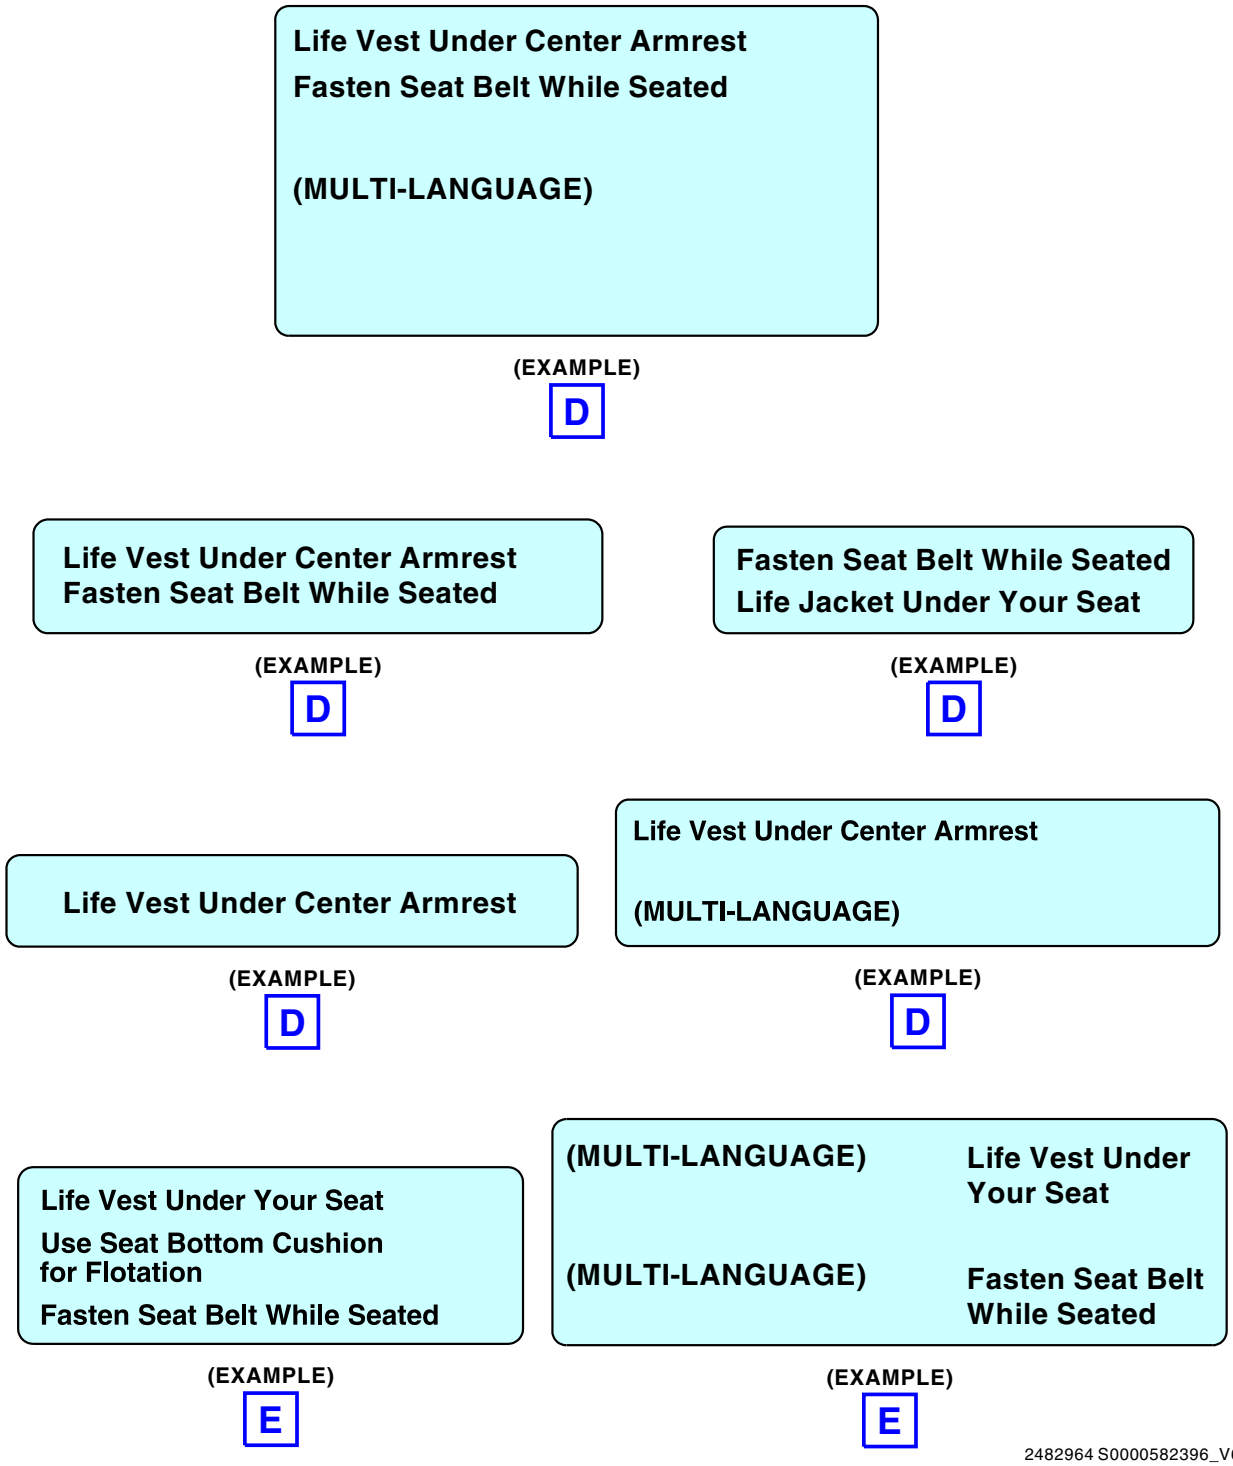


**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 3 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

Life Vest Under Your Seat
Fasten Seat Belt While Seated
Seat Cushion Useable for Floatation

**(EXAMPLE)**

**F**

Life vest under your seat
Fasten seat belt while seated
Seat cushion useable for floatation

**(EXAMPLE)**

**F**

Life Jacket Under Center Armrest
Stow Headrest During Taxi,
Takeoff and Landing

**(EXAMPLE)**

**G**

Stow Headrest During Taxi,
Takeoff and Landing

**(EXAMPLE)**

**H**

(MULTI-LANGUAGE)

For Flight Safety, Switch Off Your Mobile Phone

**(EXAMPLE)**

**I**



**For Flight Safety,**
**Please Switch Off Your Mobile Phones**

**(MULTI-LANGUAGE)**

**(EXAMPLE)**

**I**



**(EXAMPLE)**

**J**

No Smoking
Life Vest Under Your Seat
Fasten Seat Belt While Seated

Federal Regulations Prohibit Stowing Any Items
In This Area During Taxi, Takeoff and Landing

**(EXAMPLE)**


**K**

2482967 S0000582397_V5

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 4 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

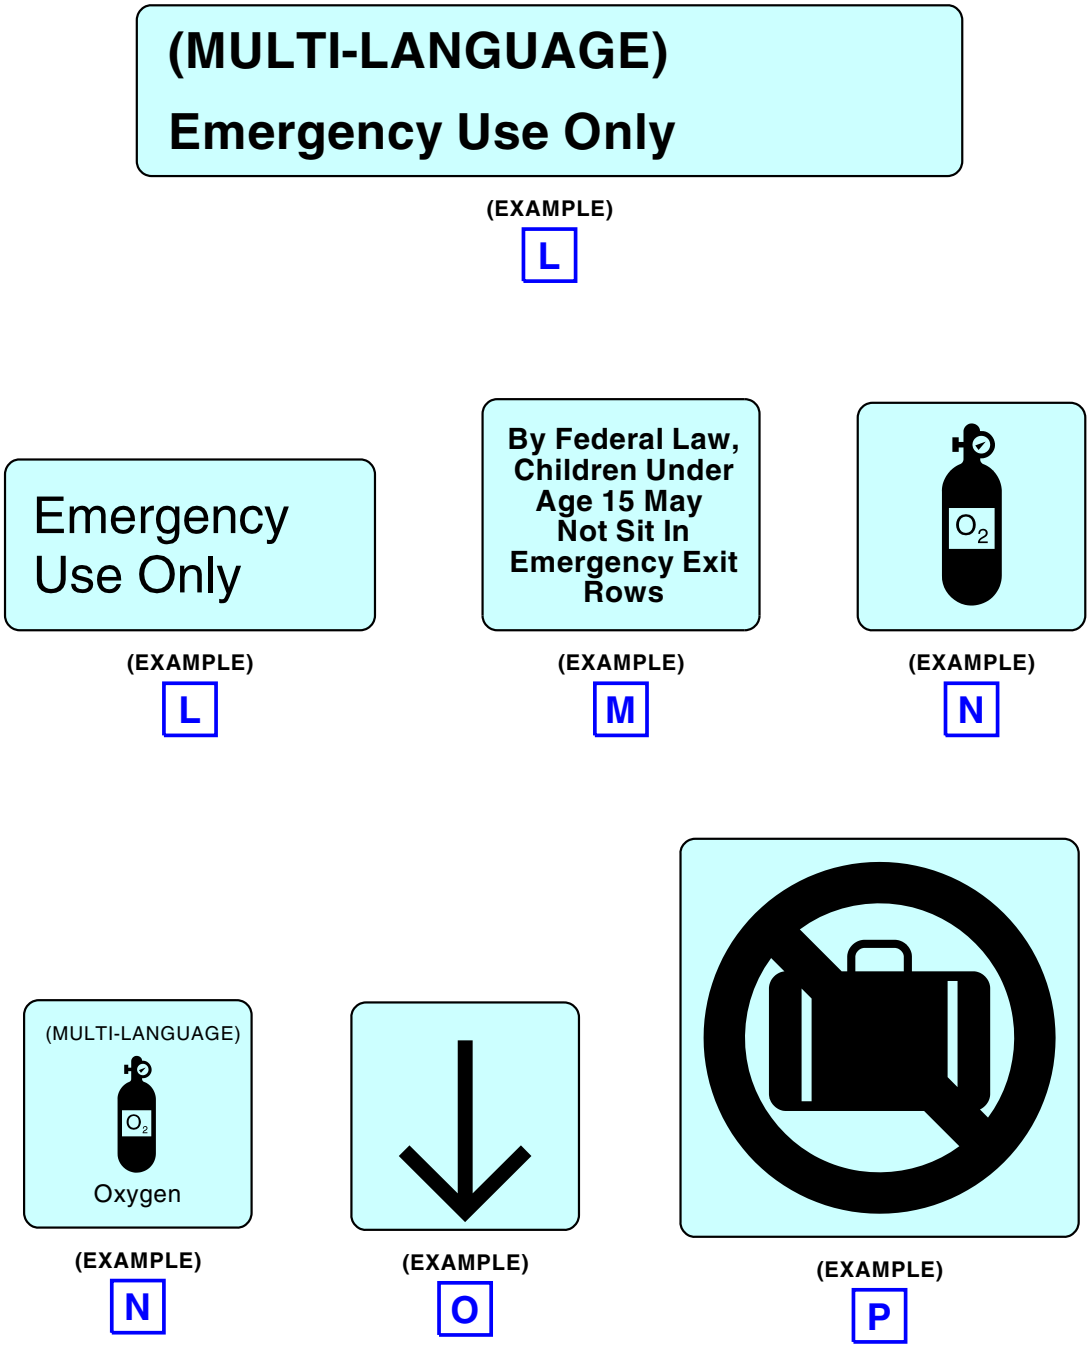


2583268 S0000623145_V5

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 5 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

Stow Device Holder For Taxi, Takeoff and Landing

(EXAMPLE)

Q

(MULTI-LANGUAGE)

Stow Device Holder During Taxi, Takeoff and Landing

(EXAMPLE)

Q

Stow Device Holder for Taxi, Takeoff, and Landing

(MULTI-LANGUAGE)

(EXAMPLE)


Q

3048562 S0000814559_V1

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 6 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

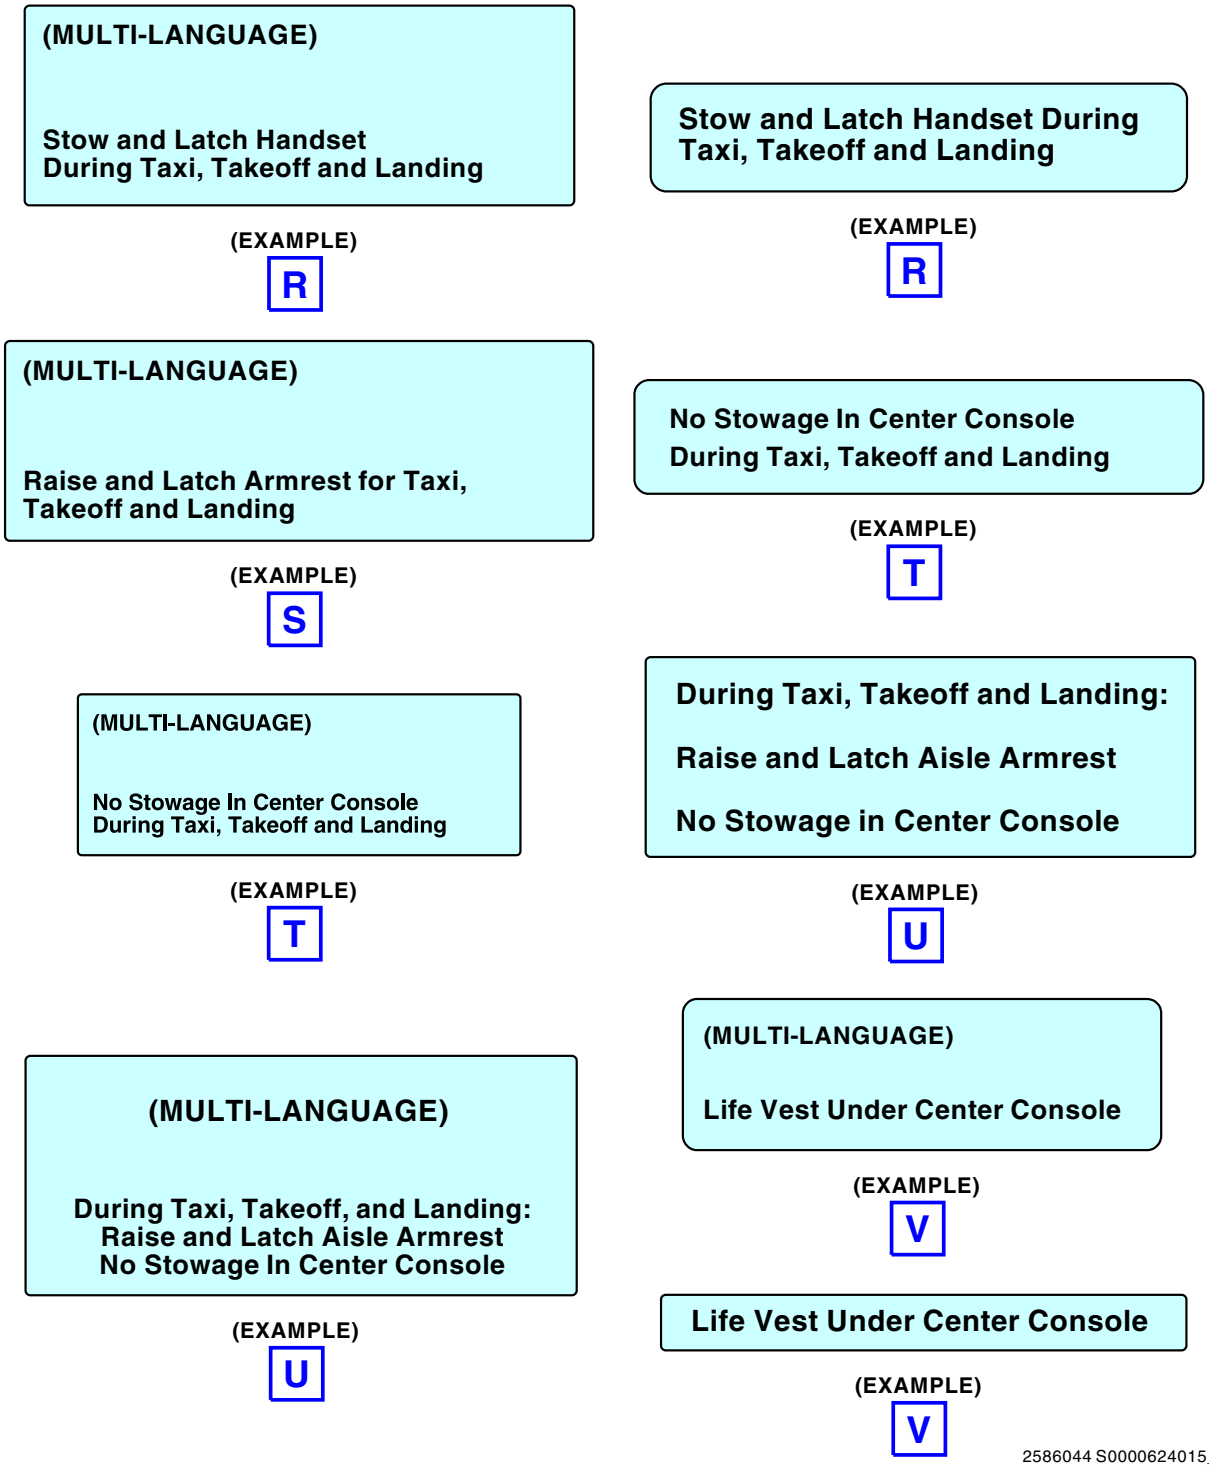


**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 7 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

Life vest in panel above your head
Fasten seat belt while seated

(MULTI-LANGUAGE)

(EXAMPLE)

W

Fasten Seat Belt While Seated
Life Vest In Panel Above Your Head

(MULTI-LANGUAGE)

(EXAMPLE)

W

Fasten Seat Belt While Seated
Life Vest In Panel Above Your Head

(EXAMPLE)

W



(EXAMPLE)

X

Raise and Latch Aisle Armrest
During Taxi, Takeoff and Landing

(EXAMPLE)

Y

(MULTI-LANGUAGE)

Raise and Latch Aisle Armrest During
Taxi, Takeoff and Landing

(EXAMPLE)

Y

2784712 S0000632108_V7

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 8 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

Stow Headrest for Taxi, Takeoff and Landing

(EXAMPLE)

Z

(MULTI-LANGUAGE)

During Taxi, Takeoff and Landing:
Stow and Latch Handset
No Stowage In Center Console

(EXAMPLE)

AA

No Hand Luggage on the Floor

(EXAMPLE)

AB

No Carry On Stowage
On Floor Forward of Seats

(EXAMPLE)

AB

3047707 S0000814062_V1

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 9 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

During Taxi, Takeoff and Landing:

Empty Console Stowages
Stow and Latch Handset
Raise and Latch Aisle Armrest

(EXAMPLE)

AC

Recline On This Seat is Restricted Due To Federal Safety Regulations

(EXAMPLE)

AD

Fasten Seat Belt While Seated

(EXAMPLE)

AE

Fasten Seat Belt While Seated

(MULTI-LANGUAGE)

(EXAMPLE)

AE

(MULTI-LANGUAGE)

Medical Use Only
(XXX VAC XX Hz, XXXX Watts Max)

(EXAMPLE)

AF

(MULTI-LANGUAGE)

Medical Use Only
(XXX VAC XX Hz)

(EXAMPLE)

AF

(MULTI-LANGUAGE)

Passenger Use Prohibited
Medical Use Only

(XXX VAC XX Hz, XXXX Watts Max)

(EXAMPLE)

AF

Medical Use Only
(XXX VAC XX Hz)

(EXAMPLE)

AF

(MULTI-LANGUAGE)

Use seat bottom cushion for flotation

(EXAMPLE)


AG

2819798 S0000651750_V5

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 10 of 18)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

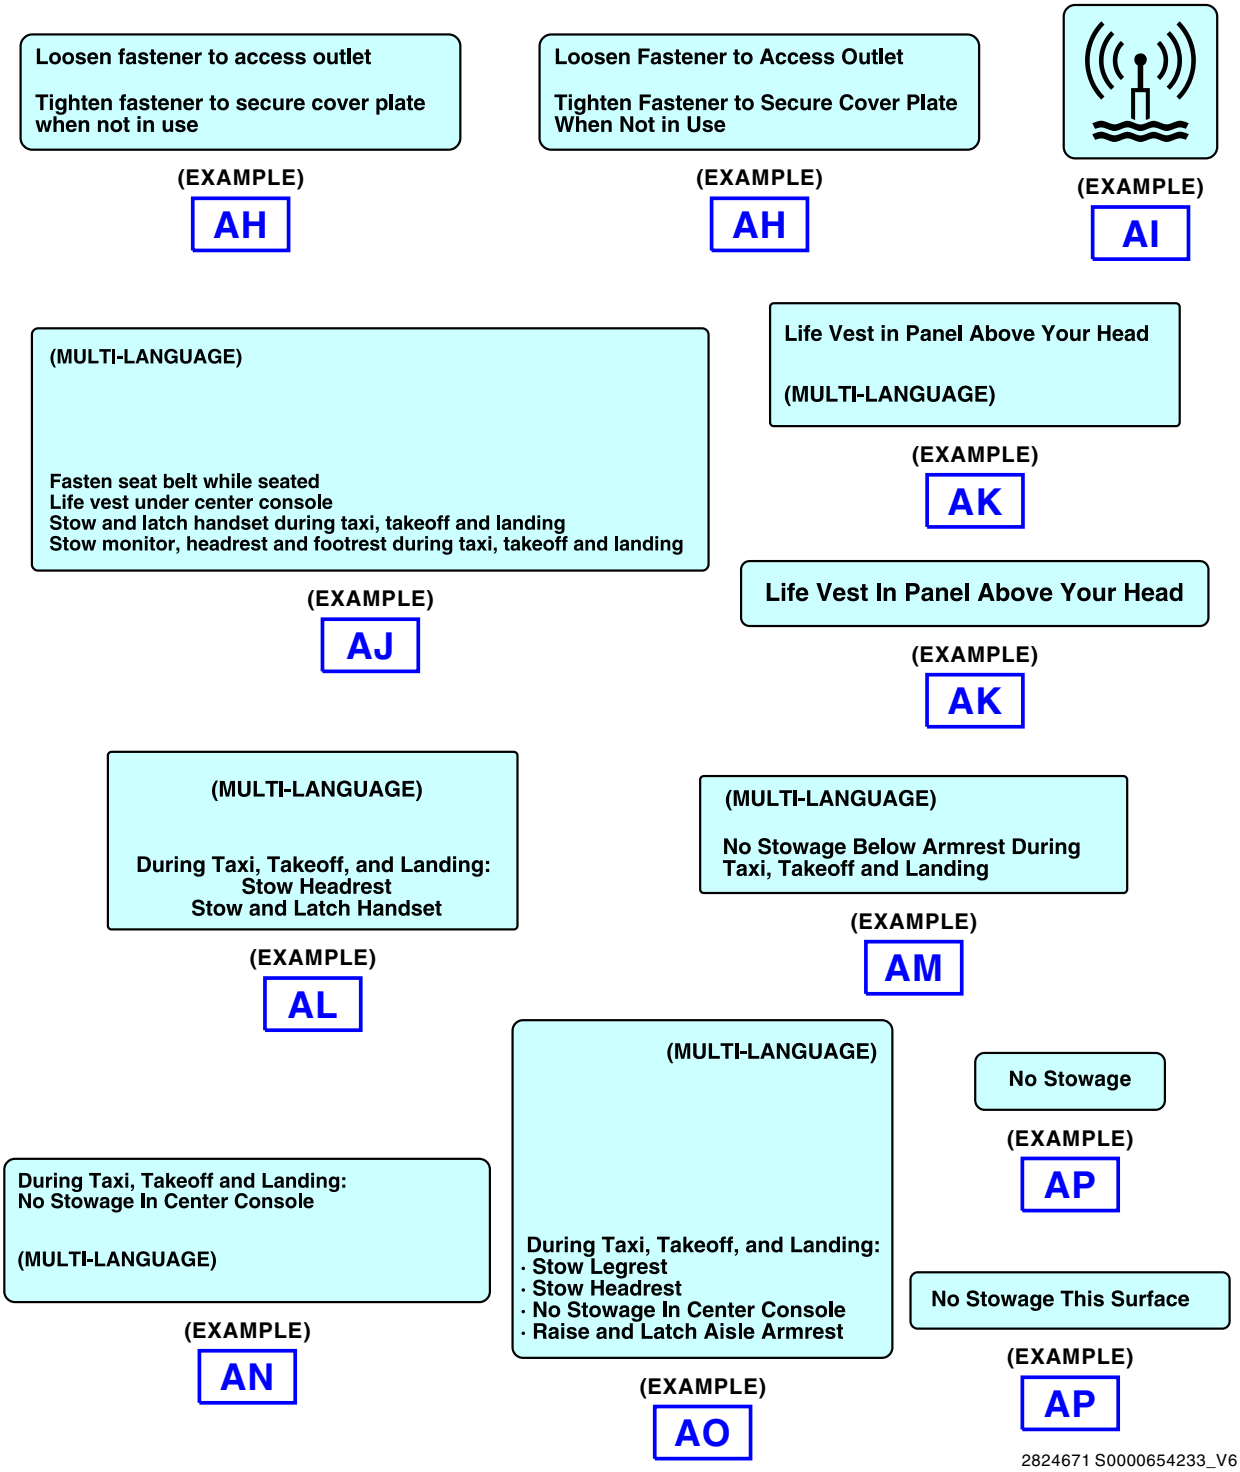


**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 11 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

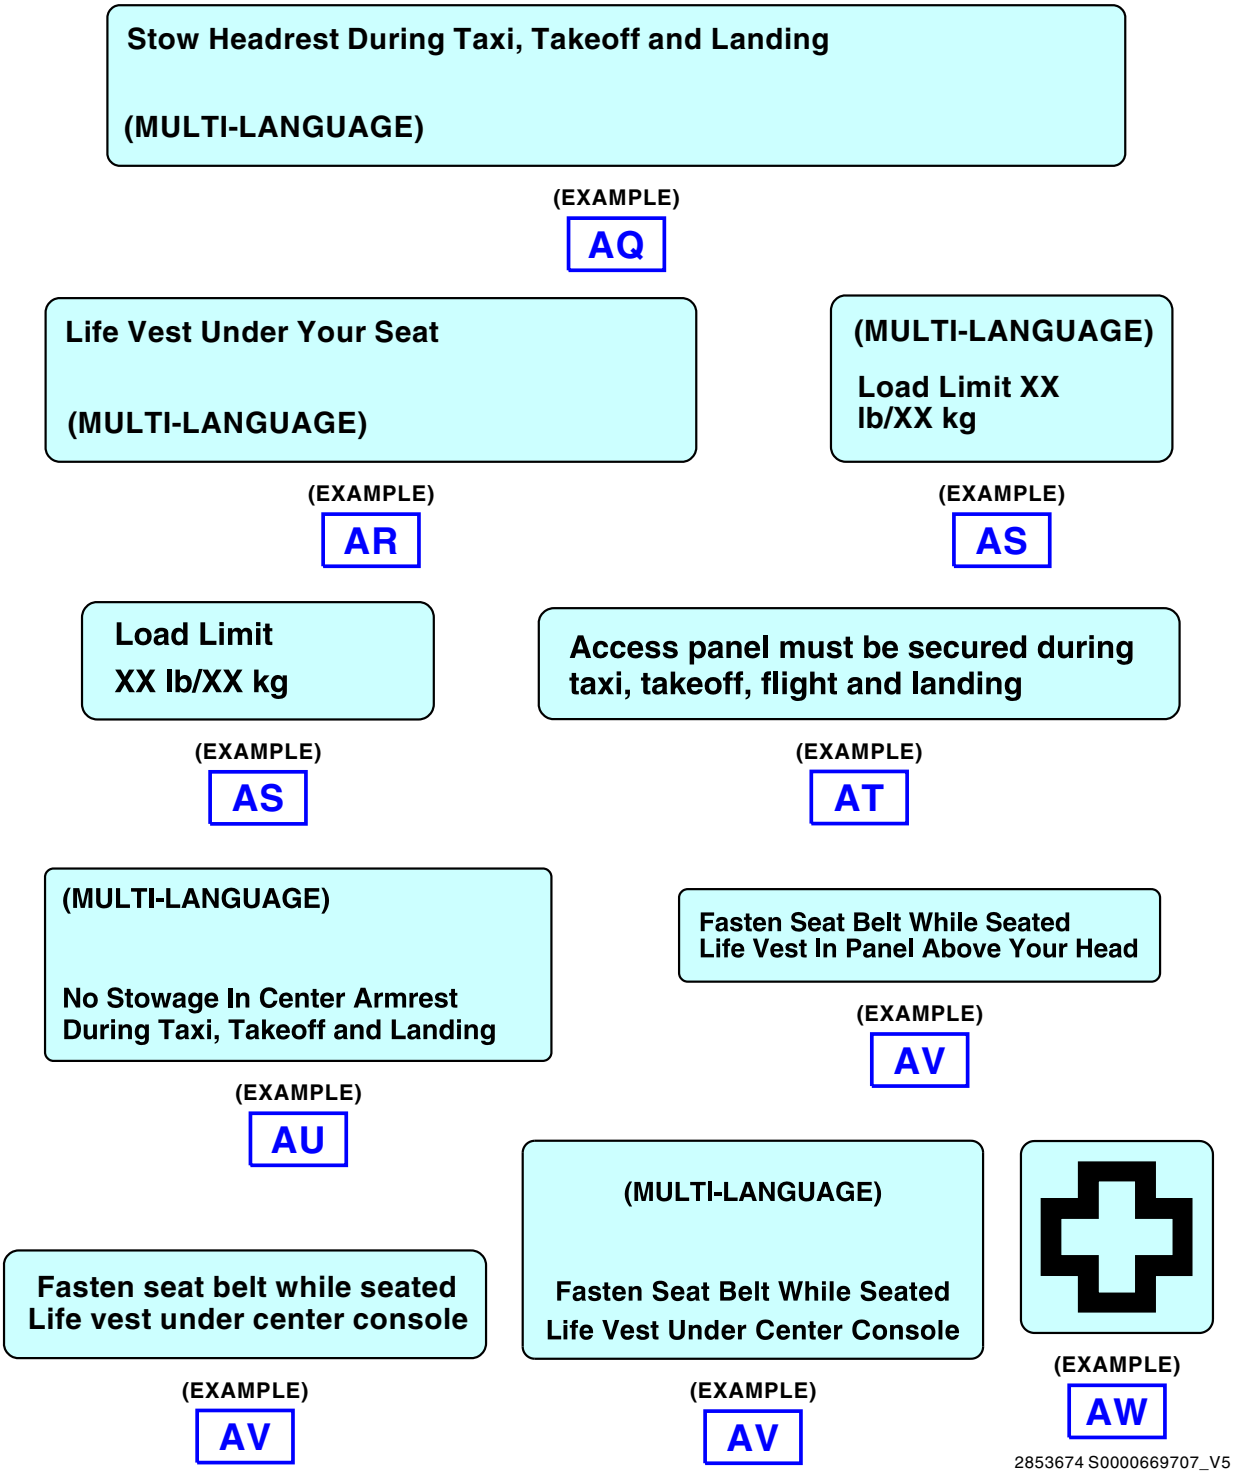


**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 12 of 18)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details




(EXAMPLE)

**AX**

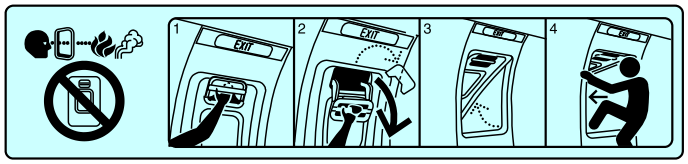


(EXAMPLE)

**AY**




(EXAMPLE)

**AZ**




(EXAMPLE)

**BA**

2900109 S0000692738_V5

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 13 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

During Taxi, Takeoff and Landing:
No Stowage In Center Console
Raise and Latch Aisle Armrest
Stow and Latch Handset

(MULTI-LANGUAGE)

(EXAMPLE)

BB

Stow Table For Taxi, Takeoff and Landing

(MULTI-LANGUAGE)

(EXAMPLE)

BC

Stow Table For Taxi, Takeoff and Landing

(EXAMPLE)

BC

(MULTI-LANGUAGE)

---

During taxi, take off and landing:
- No stowage in center console.
- Stow and latch handset.
- Raise and latch aisle armrest.

Fasten seat belt while seated.
Life vest located under center console.

(EXAMPLE)

BD

(MULTI-LANGUAGE)

Life vest in panel above your head

(EXAMPLE)

BE

For First Row Passengers Only

(EXAMPLE)

BF

2966778 S0000745930_V7

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 14 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

Fasten seat belt while seated
Life vest under center console
Stow and latch handset for taxi, takeoff and landing

(EXAMPLE)

BG

During Taxi, Takeoff & Landing,
No Stowage in Centre Console,
Raise & Latch Aisle Armrest

Life Jacket Under Centre Console

Fasten Seat Belt While Seated

No Smoking

(EXAMPLE)

BH

**Fasten Seat Belt While Seated**
**Life Vest Under Center Console**
**For Taxi, Takeoff, and Landing:**
**Raise and Latch Armrest**
**No Stowage in Center Console**

**(MULTI-LANGUAGE)**

(EXAMPLE)

BI

**Fasten Seat Belt While Seated**

**(MULTI-LANGUAGE)**

**Life Vest Under Your Seat**

**(MULTI-LANGUAGE)**

(EXAMPLE)

BJ

3044431 S0000811107_V4

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 15 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

Fasten Seat Belt While Seated
Life Vest Under Center Armrest
During Taxi, Takeoff, and Landing:
No Stowage in Center Armrest,
Raise and Latch Aisle Armrest

(MULTI-LANGUAGE)

(EXAMPLE)

BK

Fasten seat belt while seated
Life vest under center console

During taxi, takeoff and landing:
Stow and latch handset and all tables
No stowage in center console

(EXAMPLE)

BL

(MULTI-LANGUAGE)

During Taxi, Take-off and Landing:
No Stowage In Center Console
Raise and Latch Aisle Armrest
Fasten Seat Belt While Seated
Life Vest In Panel Above Your Head

(EXAMPLE)

BM

Baby Bassinet to be Removed and Stowed during Taxi, Take-off and Landing

(EXAMPLE)

BN *

Not For Use

(EXAMPLE)


BO *

3048565 S0000814560_V4

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 16 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

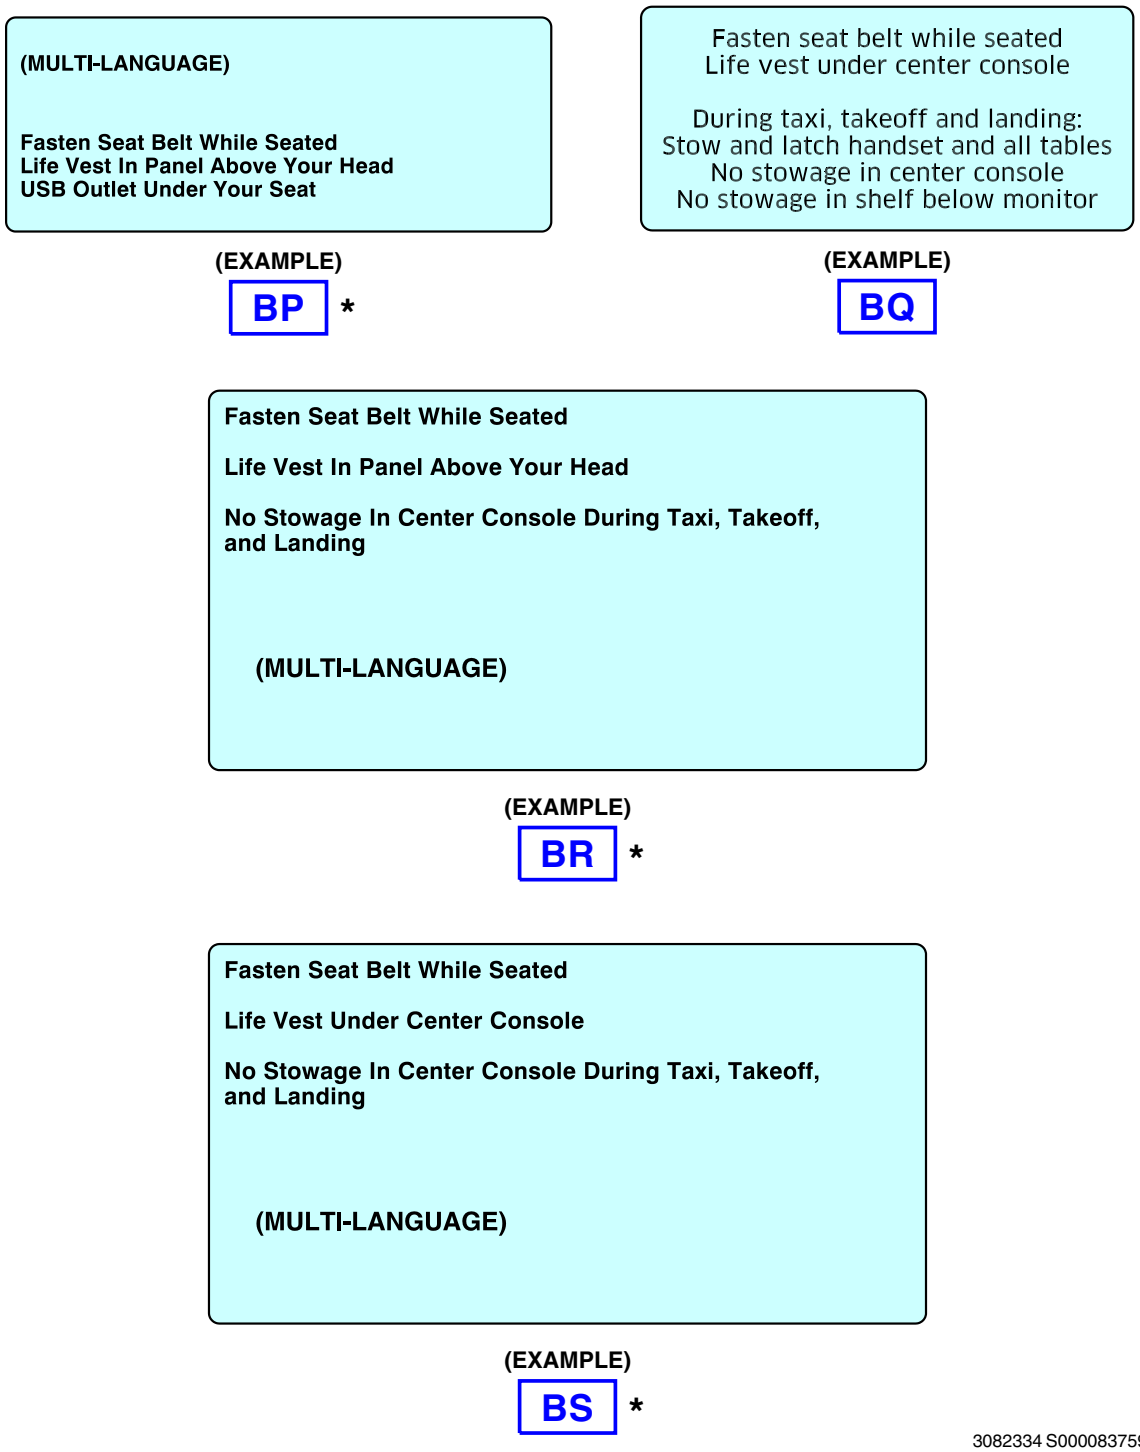


3082334 S0000837592_V3

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 17 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

No Additional Stowage

(EXAMPLE)

BT *

(MULTI-LANGUAGE)


Fasten Seat Belt While Seated
Life Vest Under Center Armrest

(EXAMPLE)

BU *

(MULTI-LANGUAGE)

Headphone Jack Is
Located On the Armrest

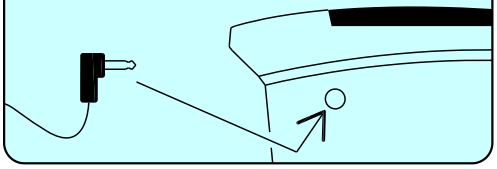

(EXAMPLE)

BV *

(MULTI-LANGUAGE)

During Taxi, Takeoff and Landing:
Stow and Latch Cocktail Table
Stow and Latch Handset
No Stowage In Center Armrest Pocket

(EXAMPLE)

BW

(MULTI-LANGUAGE)

Stow Legrest During Taxi,
Takeoff and Landing

(EXAMPLE)

BX

Fasten Seat Belt While Seated
Life Vest In Center Console

(MULTI-LANGUAGE)

(EXAMPLE)


BY

3113974 S0000851940_V3

**Main Compartment Bulkhead and Class Divider Placards**
**Figure 202/11-30-03-990-802 (Sheet 18 of 18)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

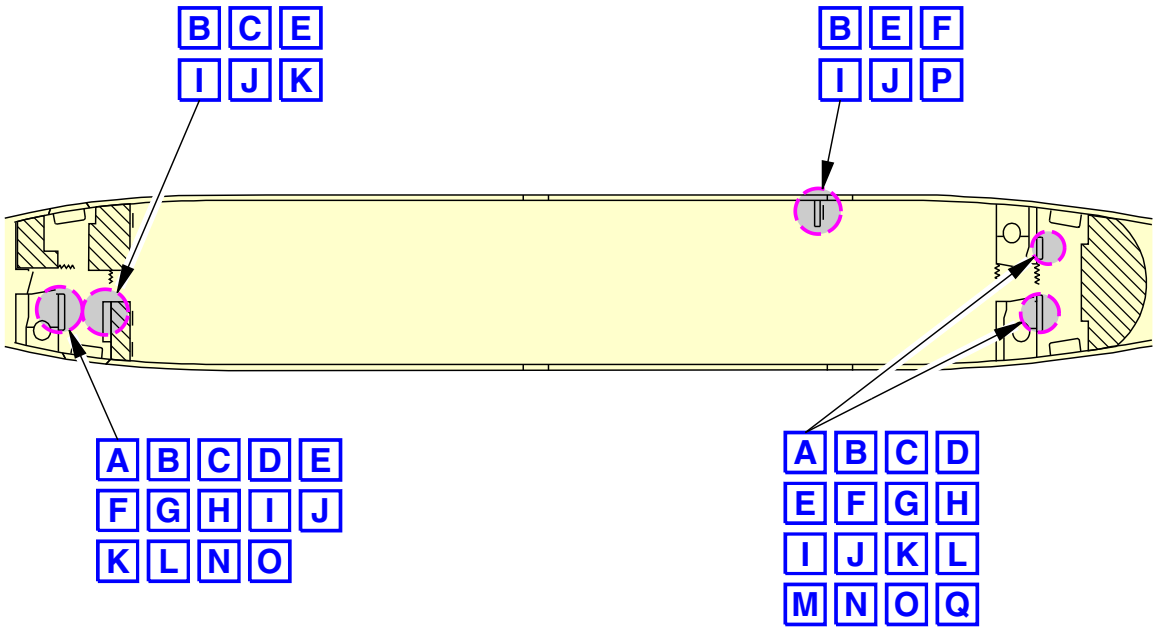


**ATTENDANT SEAT STOWAGE BOX** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410742 S00061526269_V13

**Main Compartment Attendant Seat Stowage Box Placards**
**Figure 203/11-30-03-990-803 (Sheet 1 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

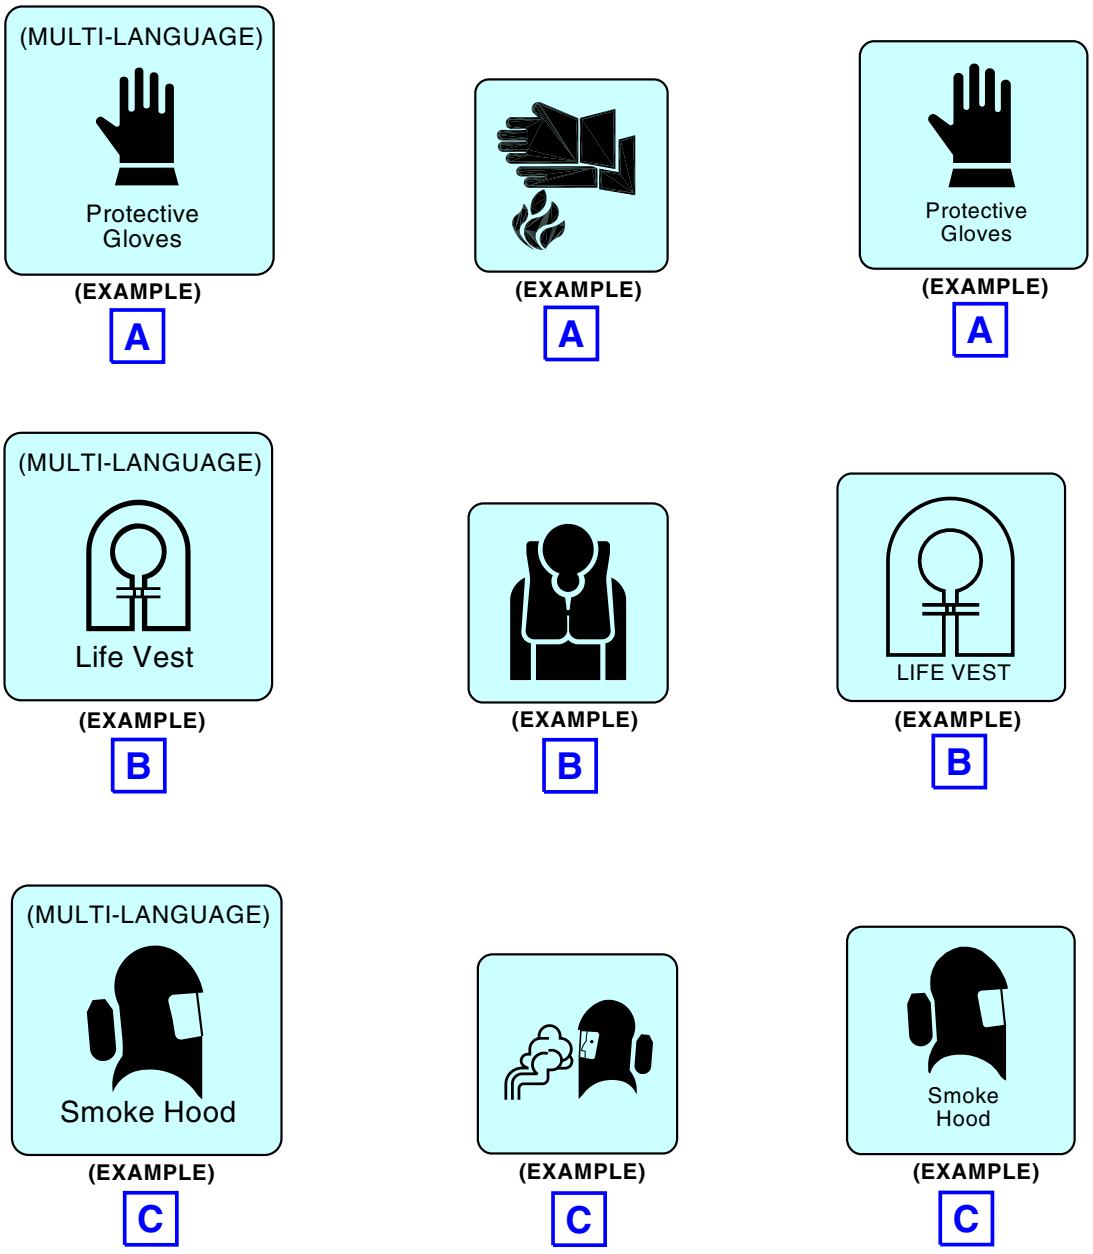



2410743 S00061526270_V3

**Main Compartment Attendant Seat Stowage Box Placards**
**Figure 203/11-30-03-990-803 (Sheet 2 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

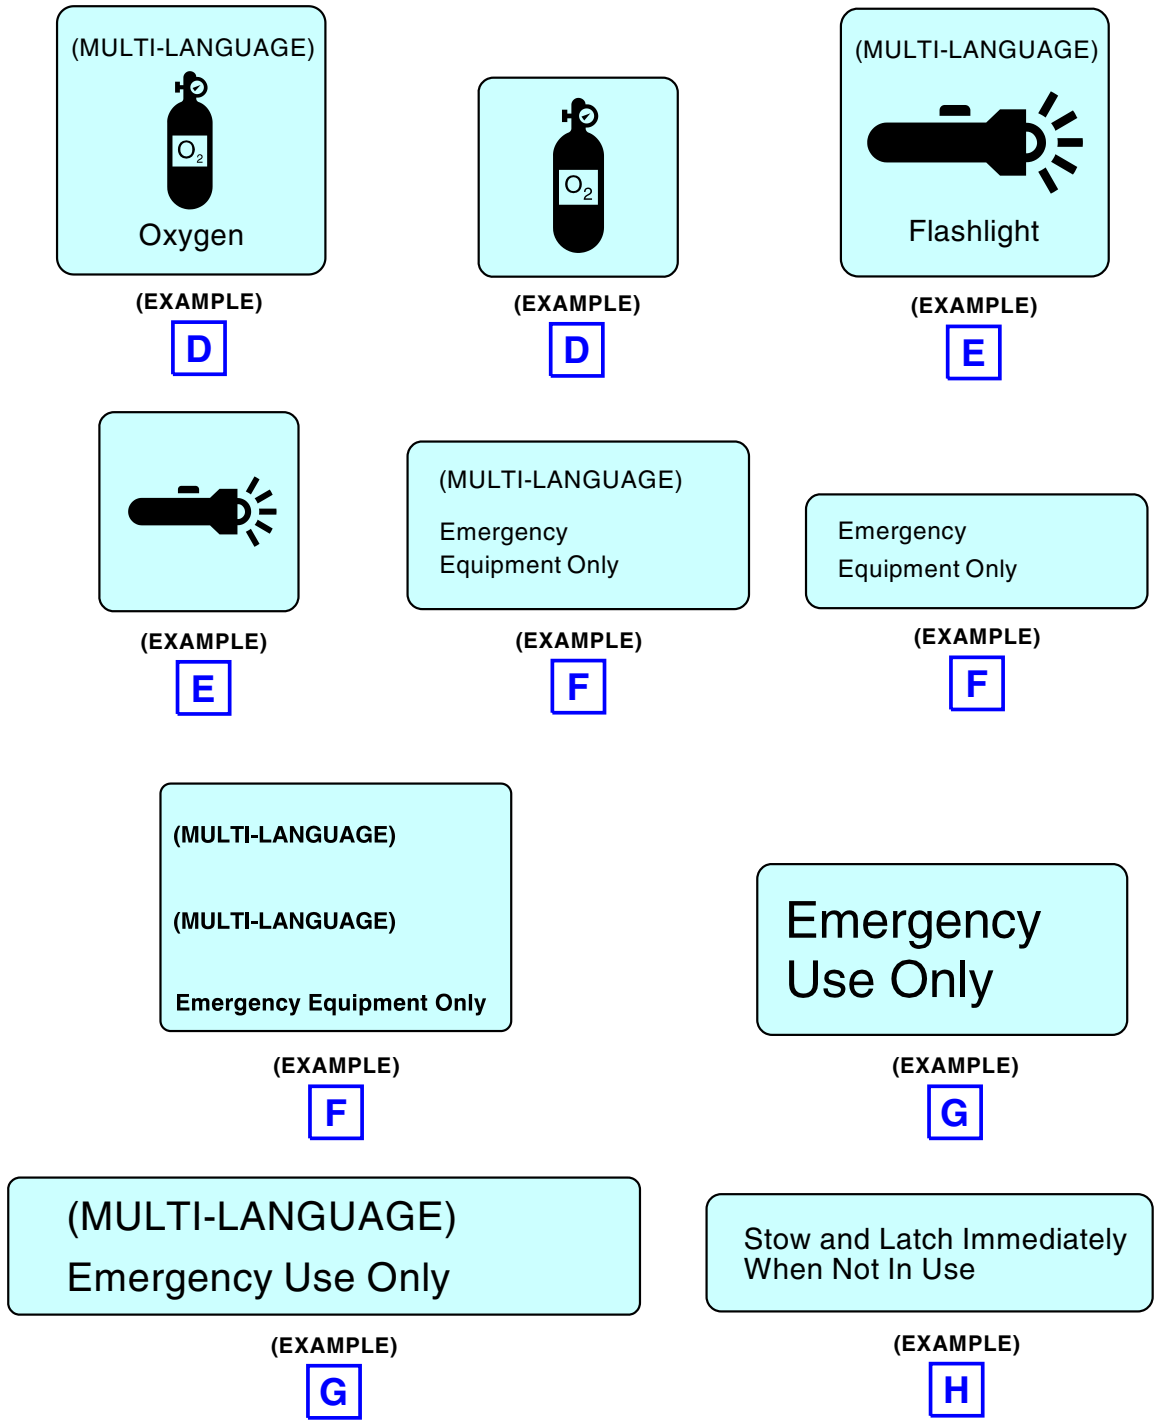



2410744 S00061526271_V7

**Main Compartment Attendant Seat Stowage Box Placards**
**Figure 203/11-30-03-990-803 (Sheet 3 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

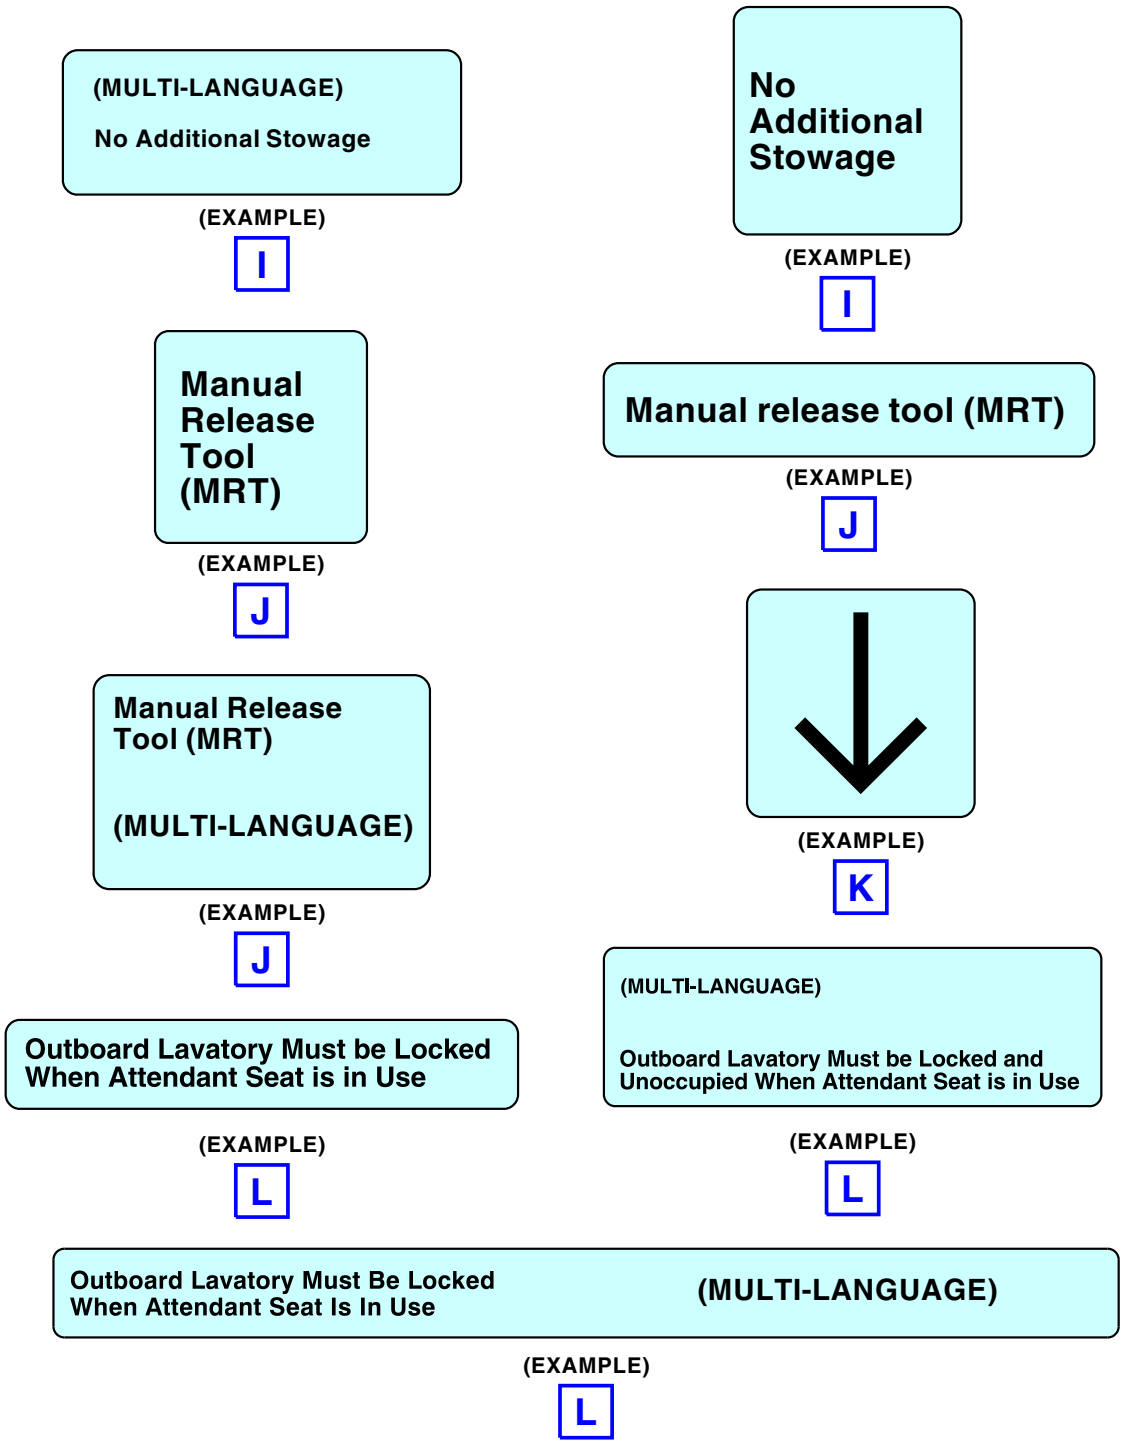


2586965 S0000624839_V5

**Main Compartment Attendant Seat Stowage Box Placards**
**Figure 203/11-30-03-990-803 (Sheet 4 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details



(EXAMPLE)

M

(EXAMPLE)

N

(MULTI-LANGUAGE)

For flight attendants only

(EXAMPLE)

O

This attendant seat must be occupied during taxi, takeoff and landing

(EXAMPLE)

P

Lavatory Must be Unoccupied and the Door Must be Closed and Secured With Quarter Turn When Attendant Seat Is In Use

(EXAMPLE)


Q

2839458 S0000662317_V4

**Main Compartment Attendant Seat Stowage Box Placards**
**Figure 203/11-30-03-990-803 (Sheet 5 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

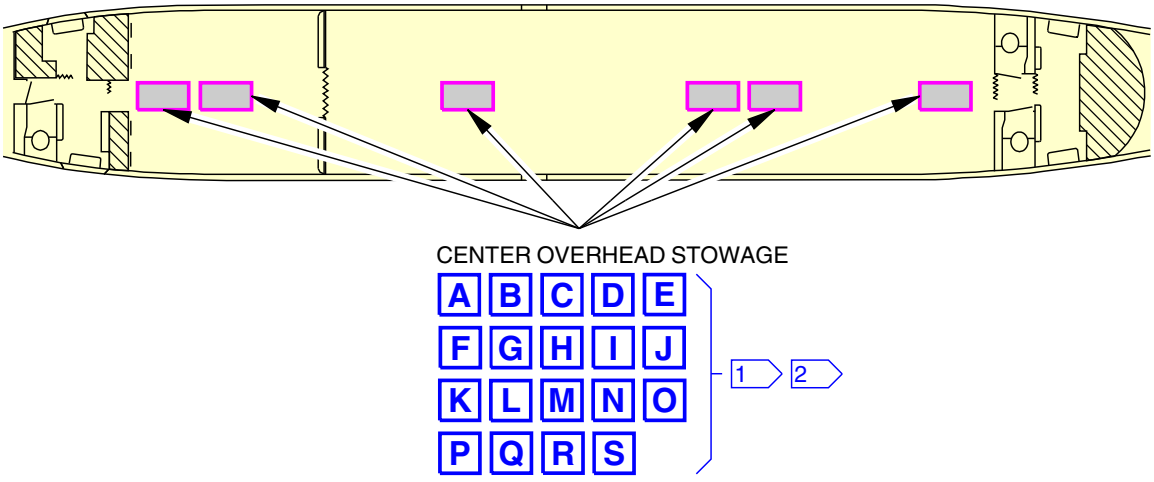


**CENTER OVERHEAD STOWAGE (COS)
(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410745 S00061526272_V8

**Main Compartment Center Overhead Stowage Placards
Figure 204/11-30-03-990-804 (Sheet 1 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

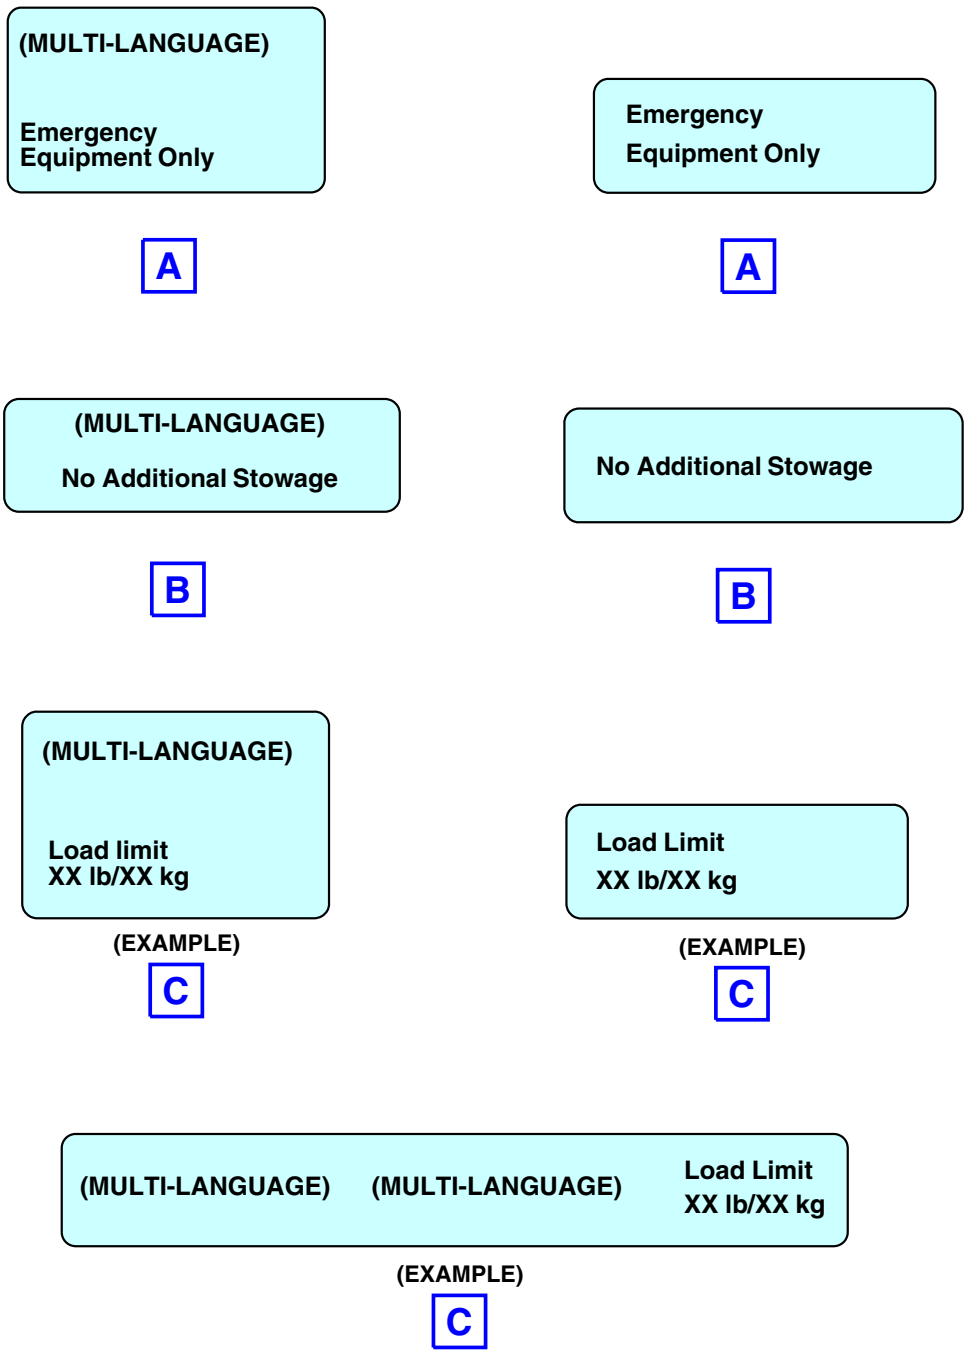



2483015 S0000583765_V3

**Main Compartment Center Overhead Stowage Placards**
**Figure 204/11-30-03-990-804 (Sheet 2 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

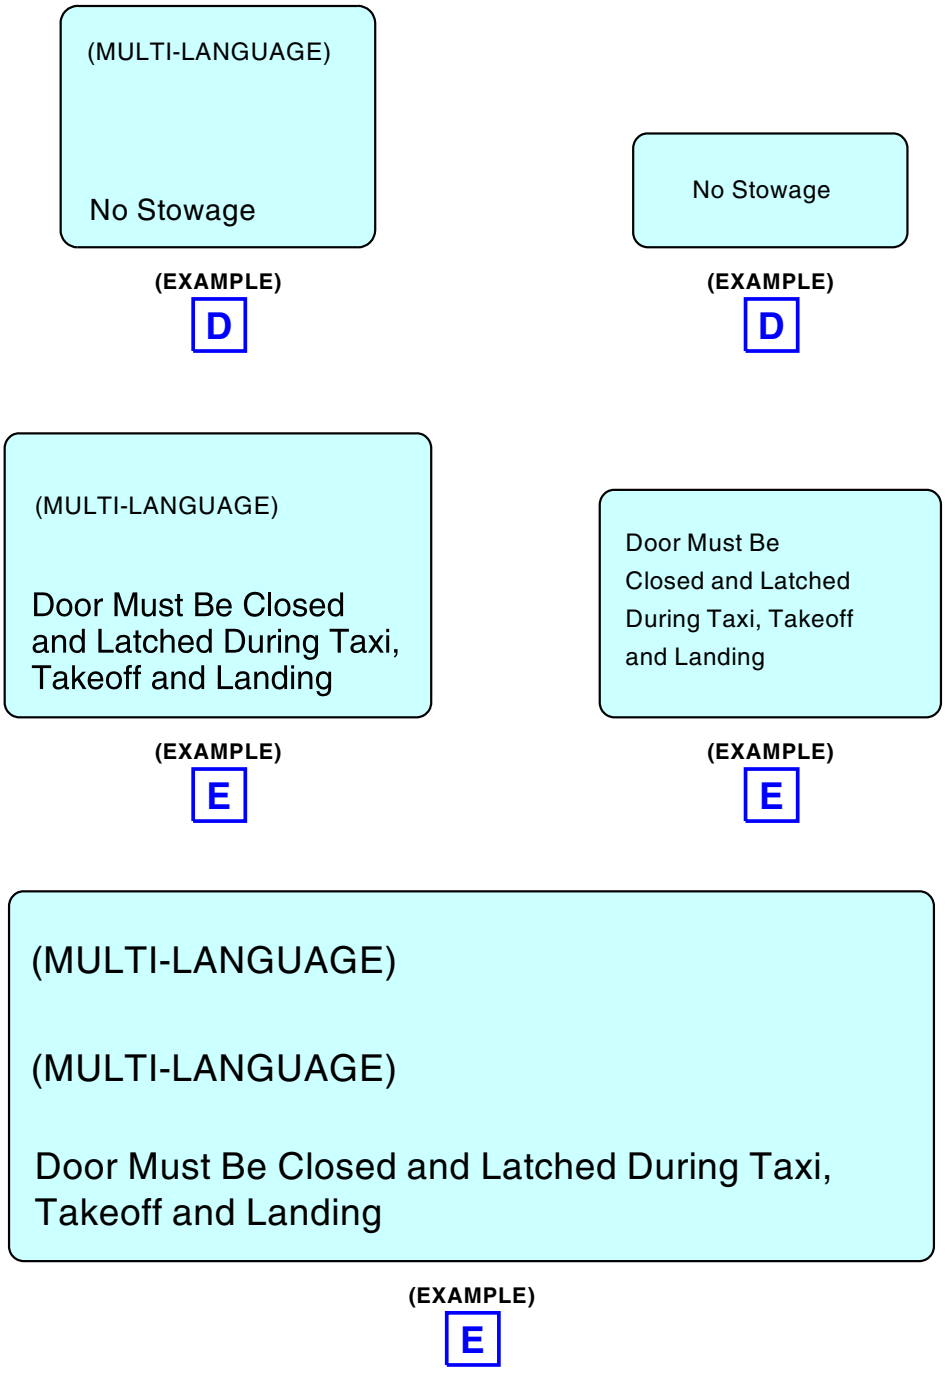



2410747 S00061526274_V4

**Main Compartment Center Overhead Stowage Placards**
**Figure 204/11-30-03-990-804 (Sheet 3 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

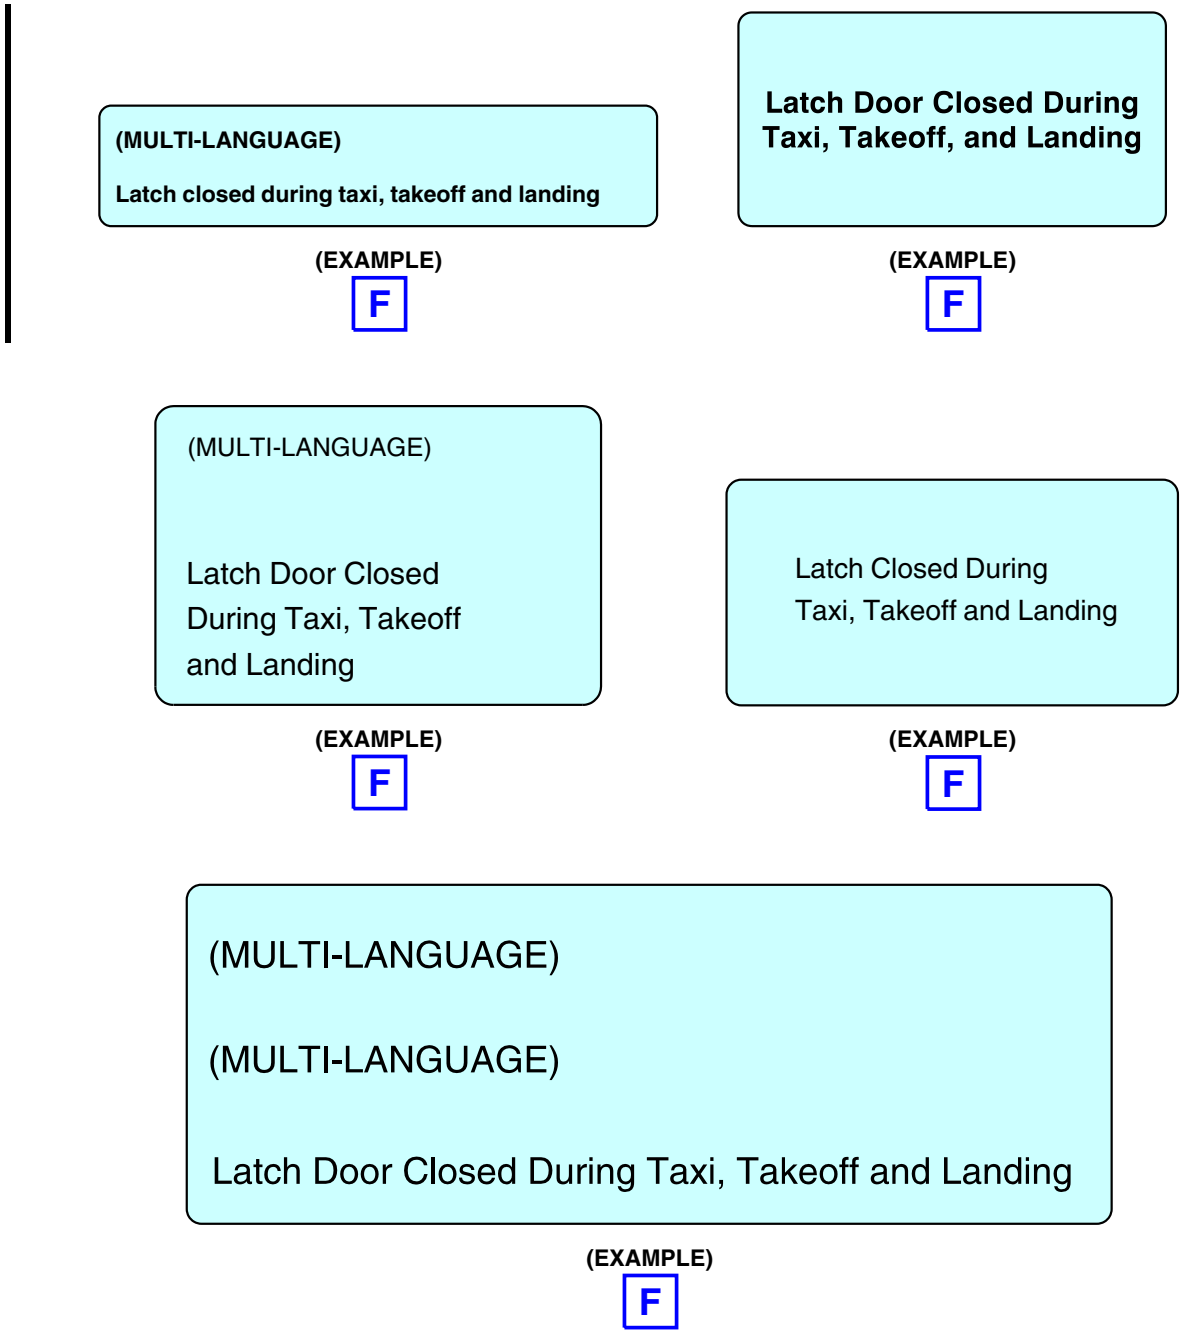



3064952 S0000827106_V2

**Main Compartment Center Overhead Stowage Placards**
**Figure 204/11-30-03-990-804 (Sheet 4 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

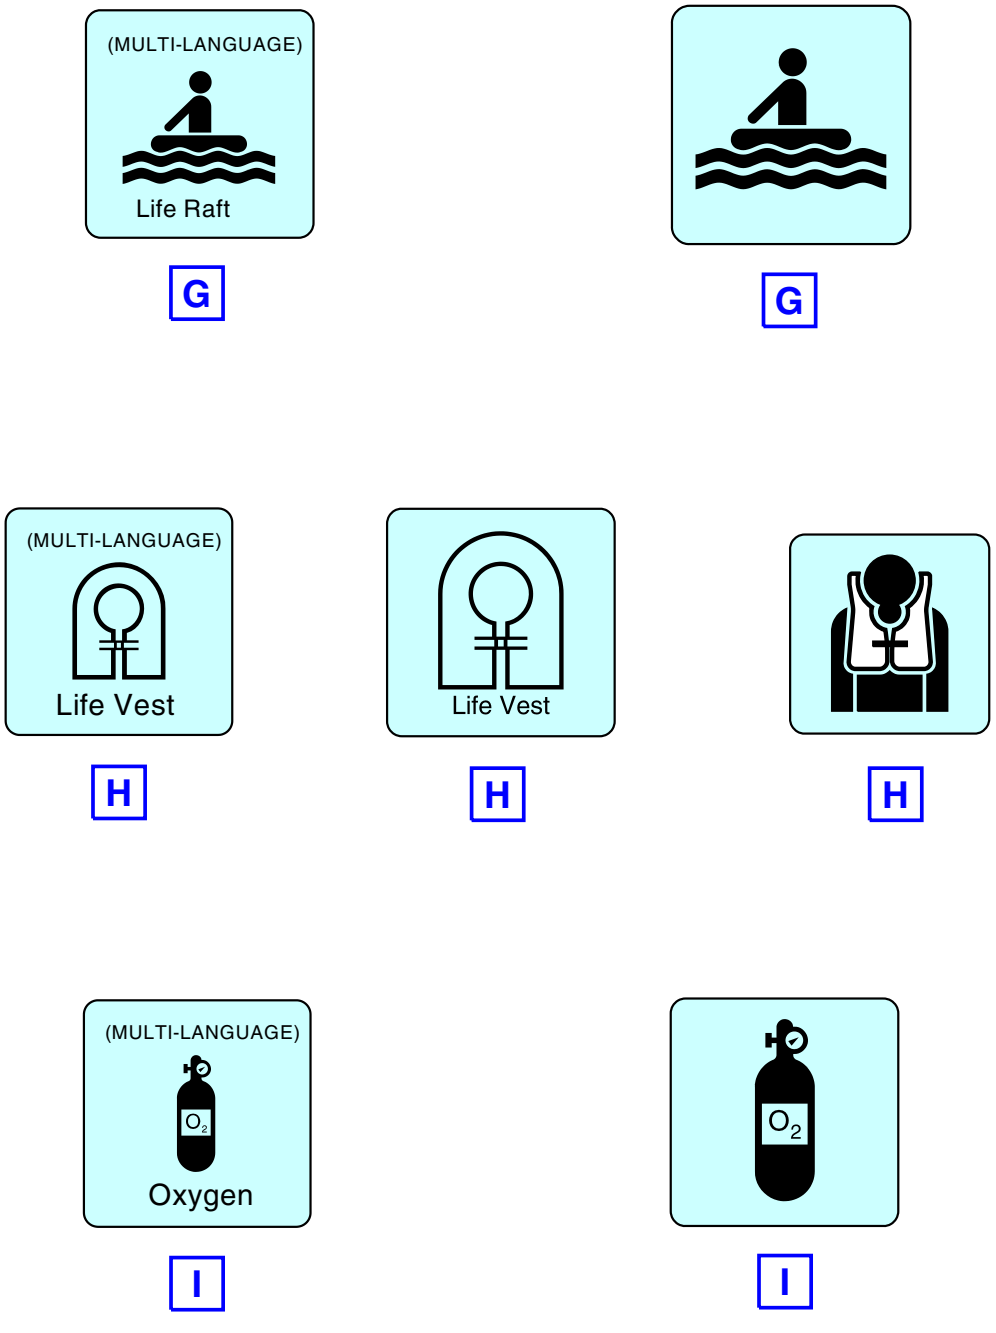



2483939 S0000584256_V2

**Main Compartment Center Overhead Stowage Placards**
**Figure 204/11-30-03-990-804 (Sheet 5 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

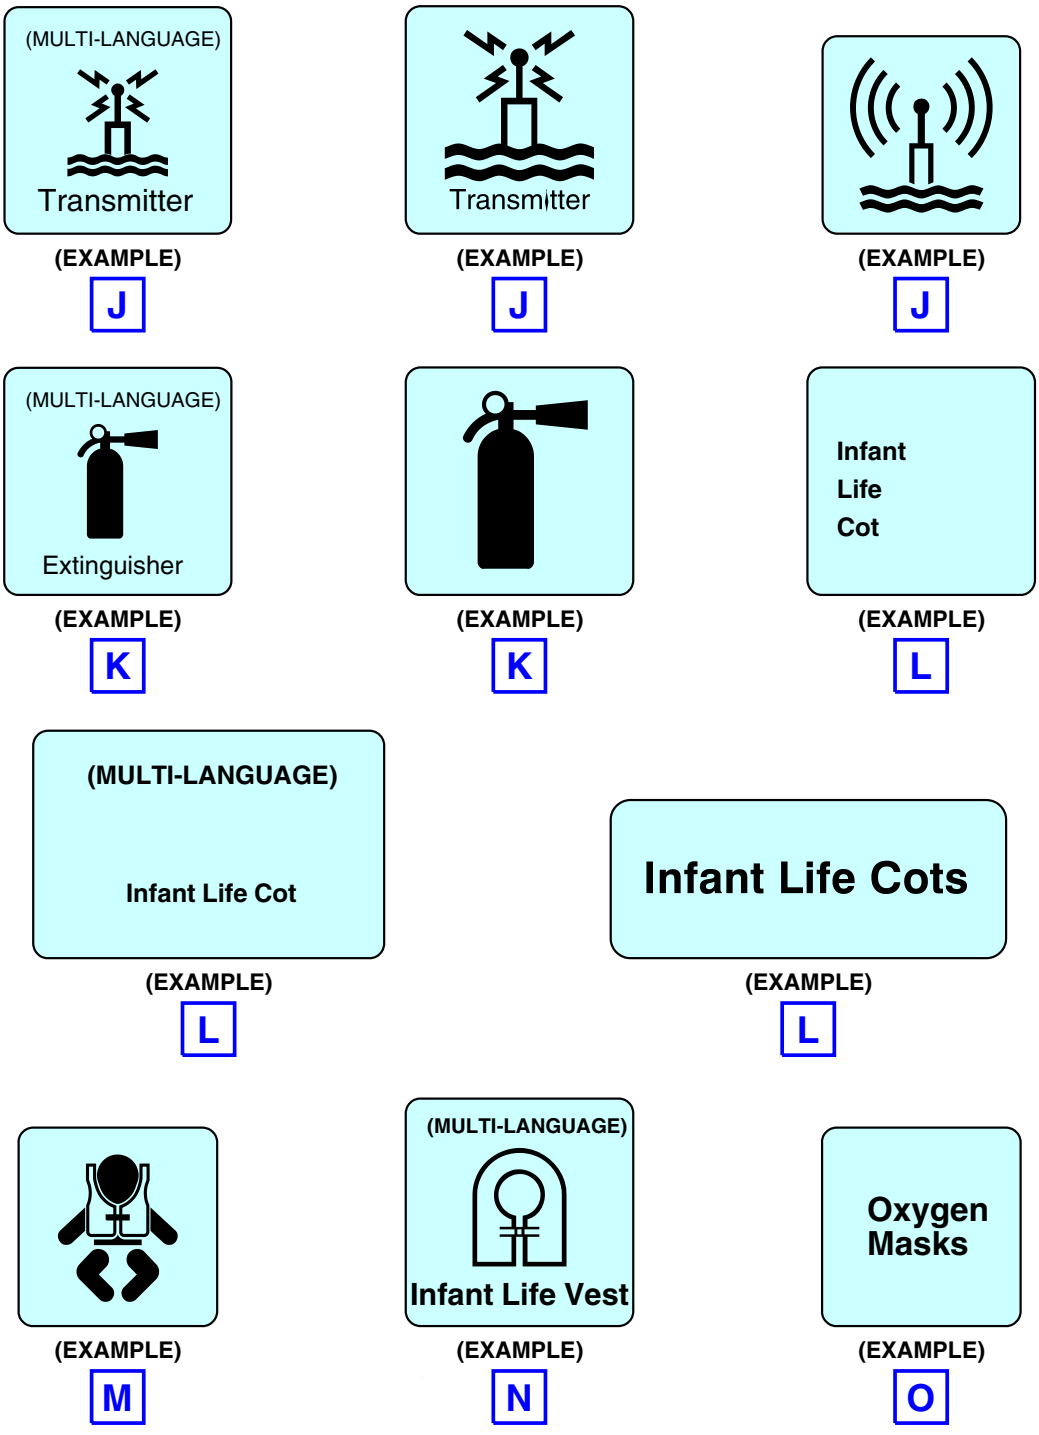


2410746 S00061526273_V8

**Main Compartment Center Overhead Stowage Placards**
**Figure 204/11-30-03-990-804 (Sheet 6 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

Door Must Be Closed and Latched
During Taxi, Takeoff and Landing

(MULTI-LANGUAGE)

Emergency Equipment Only



(MULTI-LANGUAGE)

Life Raft

(EXAMPLE)

P


Door Must Be Closed and Latched
During Taxi, Takeoff and Landing

Emergency Equipment Only



(EXAMPLE)

P

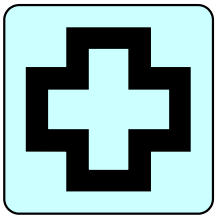

(EXAMPLE)

Q

Wheelchair

(EXAMPLE)

R

Pull Pin to
Remove Beacon

(EXAMPLE)


S

3032035 S0000802578_V3

**Main Compartment Center Overhead Stowage Placards**
**Figure 204/11-30-03-990-804 (Sheet 7 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

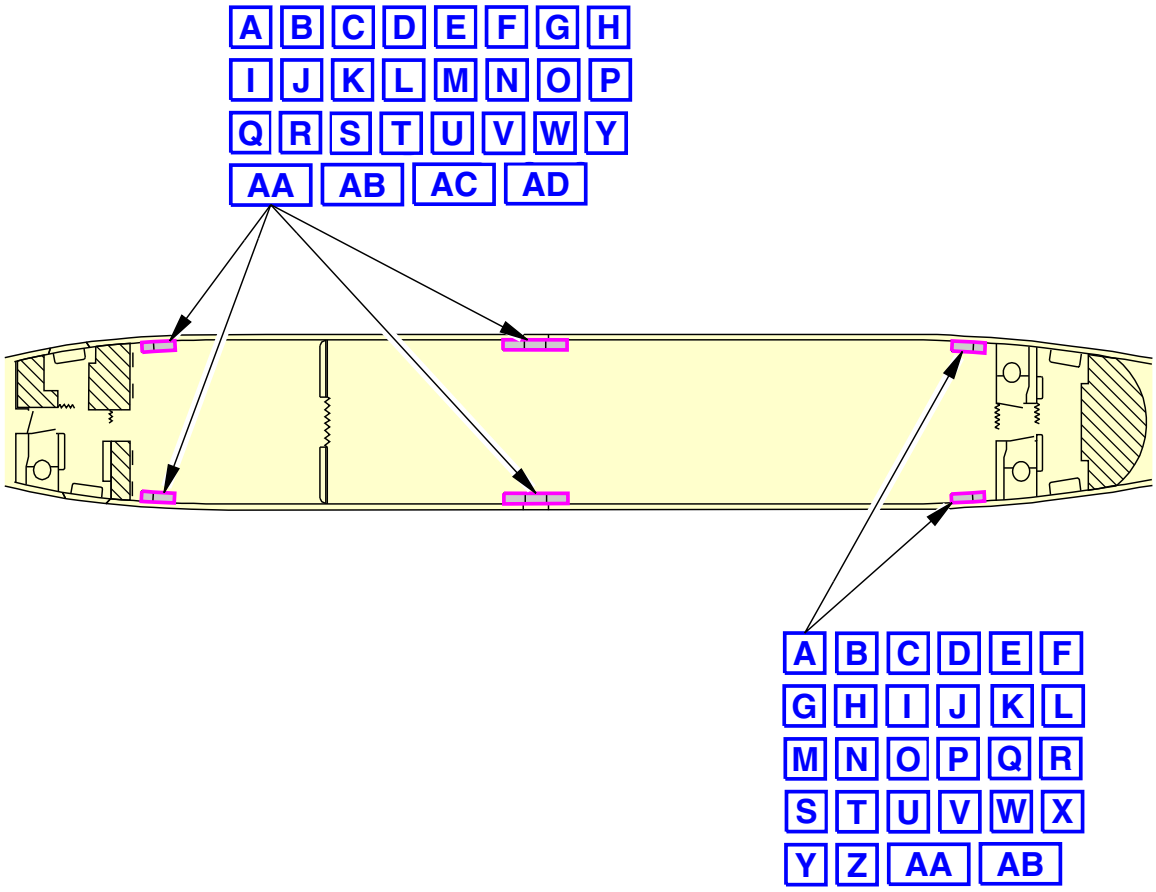


**OVERHEAD STOWAGE BINS** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410748 S00061526275_V14

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 1 of 9)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

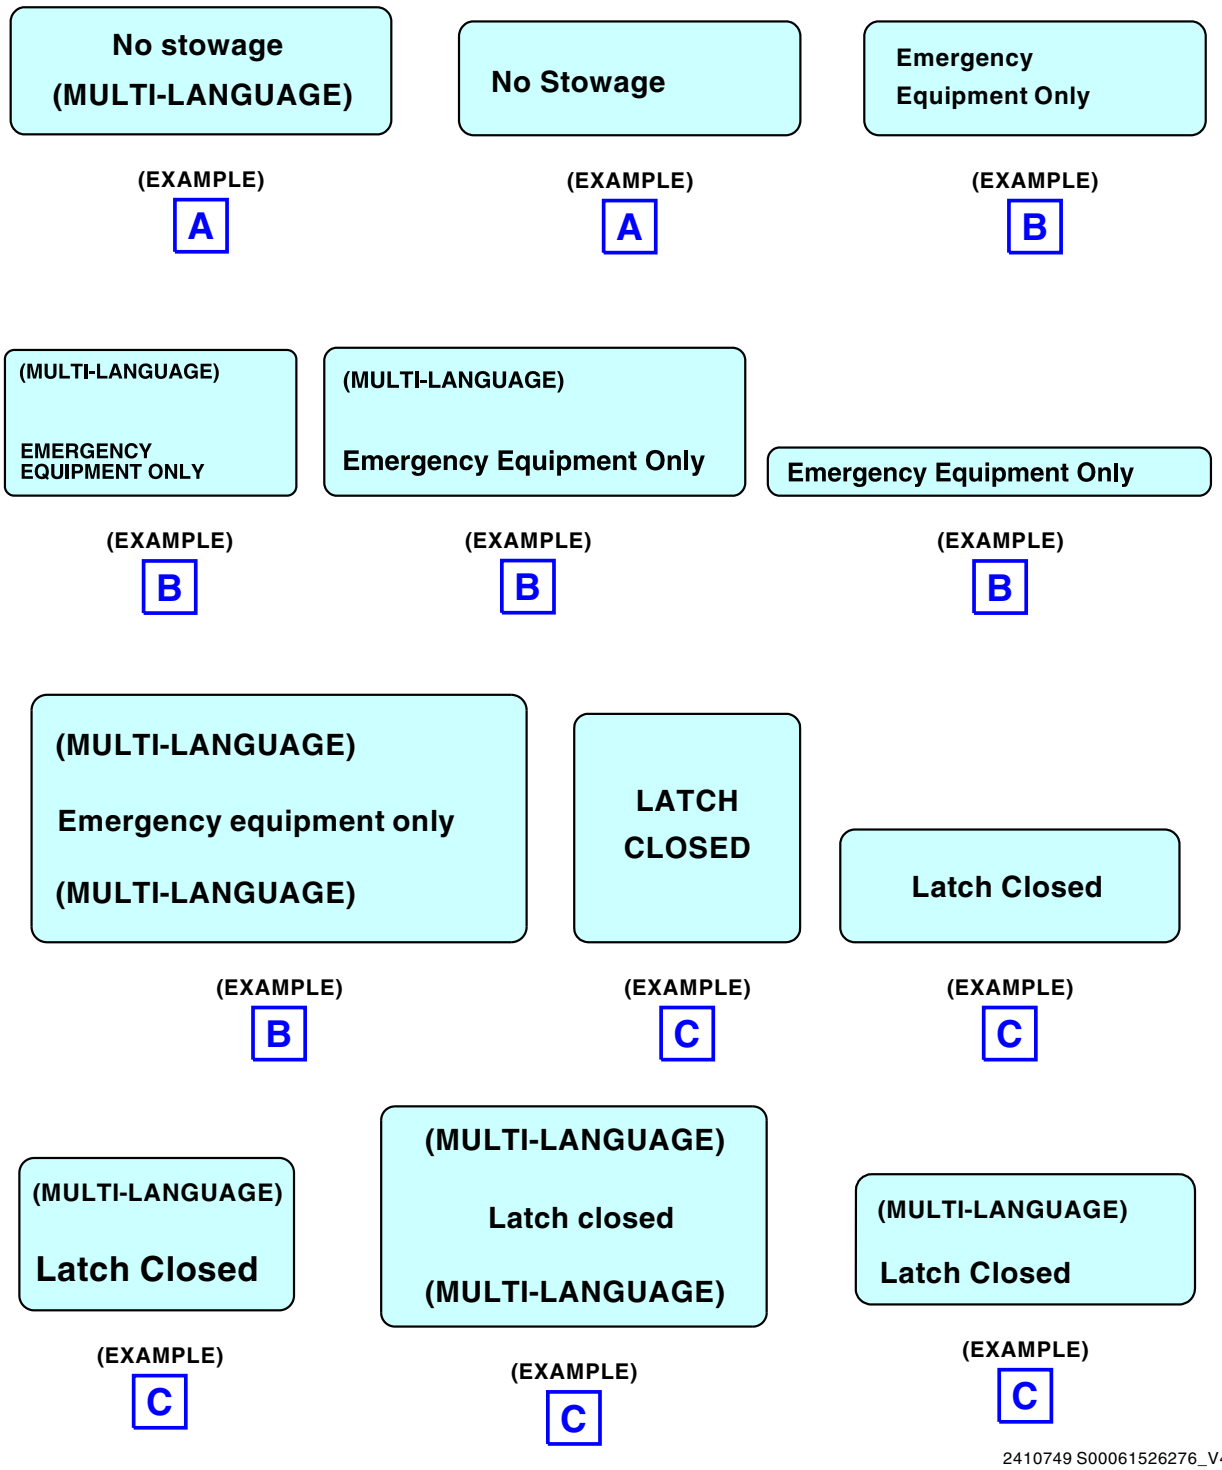



2410749 S00061526276_V4

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 2 of 9)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

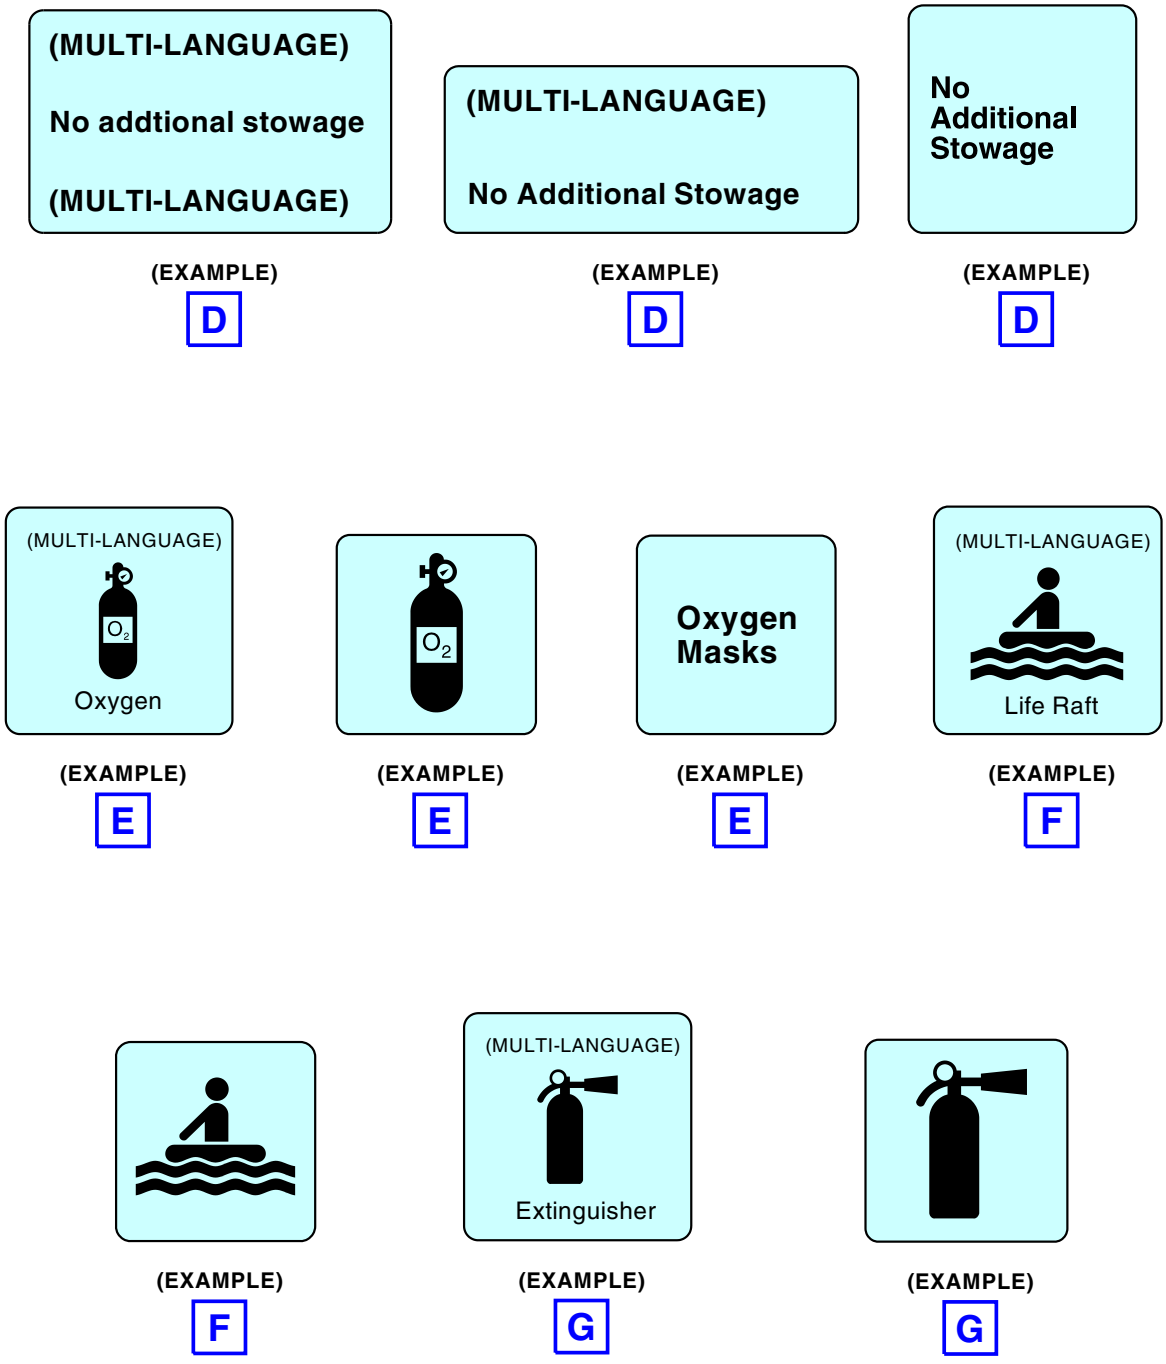



2410750 S00061526277_V5

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 3 of 9)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

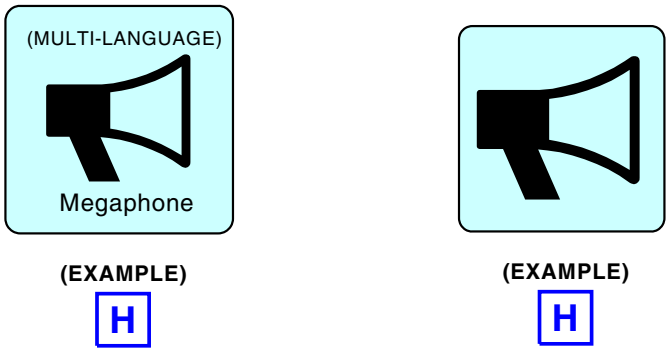



2410751 S00061526278_V3

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 4 of 9)**

I



ECCN 9E991 BOEING PROPRIETARY - See title page for details

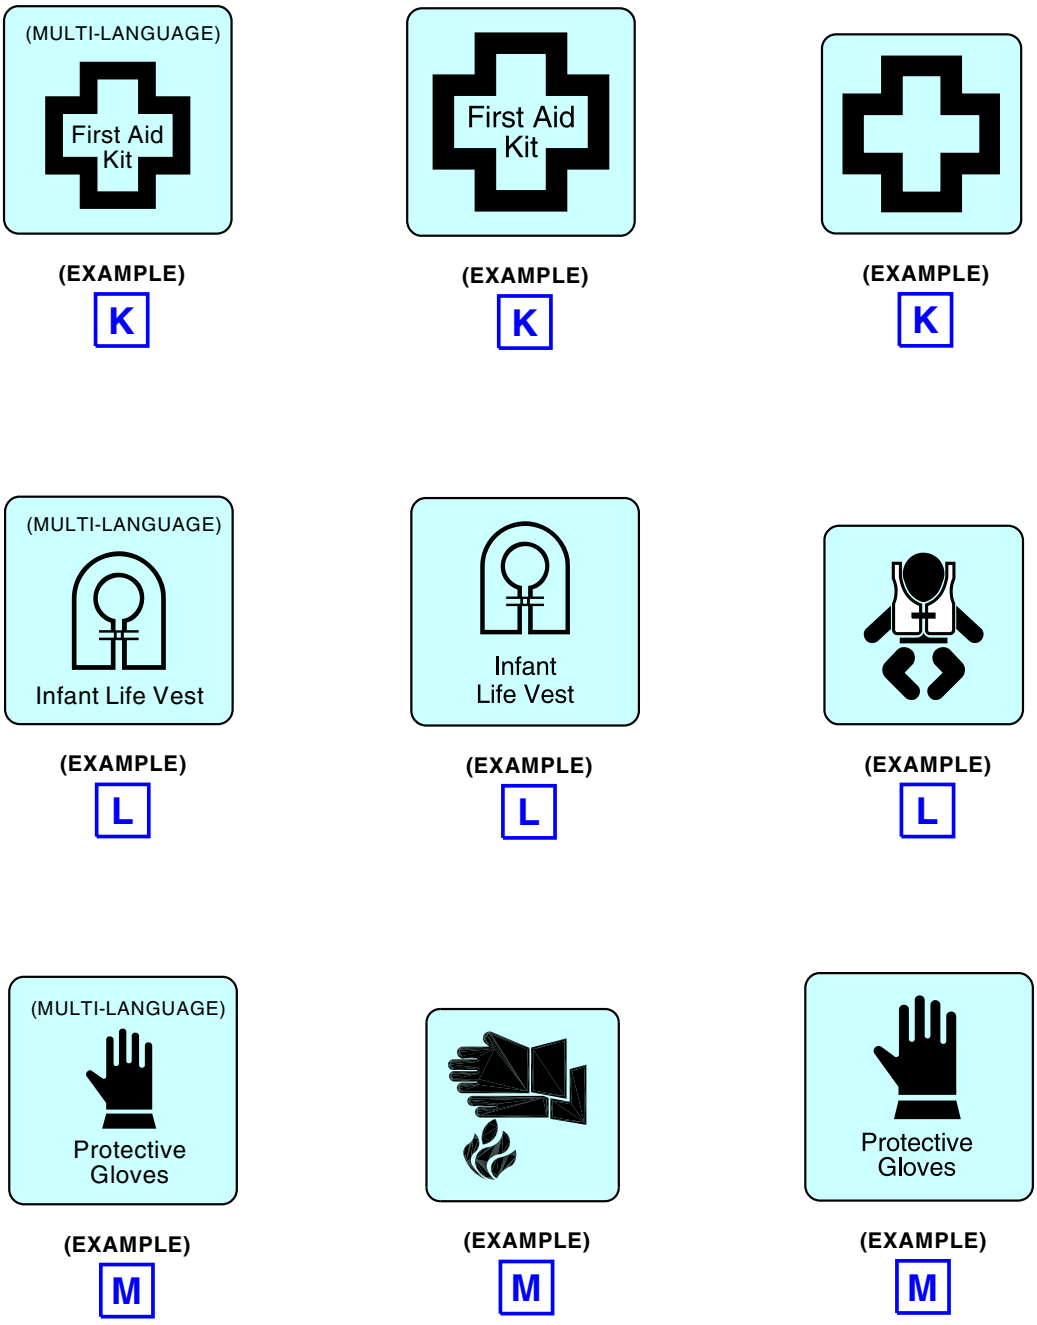



2483026 S0000582786_V3

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 5 of 9)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

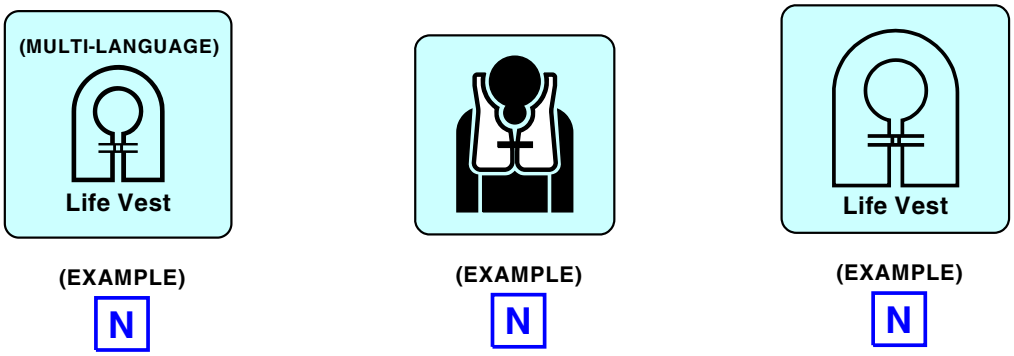


2483033 S0000582787_V4

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 6 of 9)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

PSU video monitors must not be deployed during taxi, takeoff and landing

(EXAMPLE)

Q

(MULTI-LANGUAGE)

PSU Video Monitors Must Not Be Deployed During Taxi, Takeoff and Landing

(EXAMPLE)

Q

(MULTI-LANGUAGE)

Crew use only

(EXAMPLE)

R

Medical Communications Panel

(EXAMPLE)

S

Load Limit XX lb/XX kg

(EXAMPLE)

T

(MULTI-LANGUAGE)

FLIGHT ATTENDANT ONLY

(EXAMPLE)

U



BABY COT

(MULTI-LANGUAGE)

(EXAMPLE)

V

2483044 S0000582790_V7

Main Compartment Overhead Stowage Bin Placards
Figure 205/11-30-03-990-805 (Sheet 7 of 9)



ECCN 9E991 BOEING PROPRIETARY - See title page for details




(EXAMPLE)

W





(EXAMPLE)

X

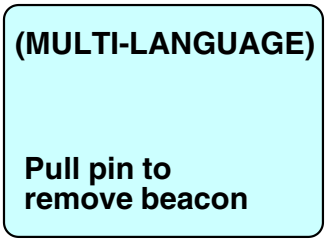



(EXAMPLE)

Y

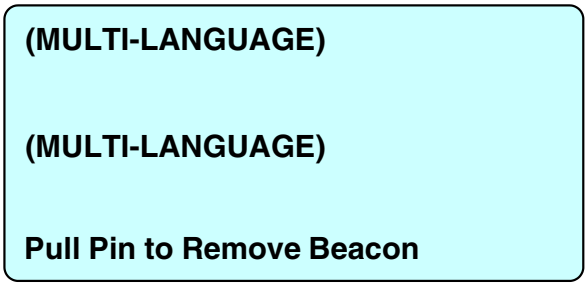


(EXAMPLE)

Y

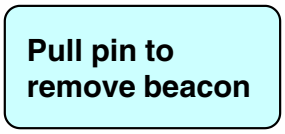


(EXAMPLE)

Y




(EXAMPLE)

Z

3087374 S0000840078_V7

**Main Compartment Overhead Stowage Bin Placards**
**Figure 205/11-30-03-990-805 (Sheet 8 of 9)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details



(EXAMPLE)

AA

To Remove Beacon:
1. Break Seal
2. Pull Pin
3. Open Lid

(EXAMPLE)

AB

(MULTI-LANGUAGE)

(EXAMPLE)

AB

Water

(EXAMPLE)

AC

Life Vest Under Your Seat
Fasten Seat Belt While Seated

(MULTI-LANGUAGE)

(EXAMPLE)


AD

3135898 S0000863268_V1

Main Compartment Overhead Stowage Bin Placards
Figure 205/11-30-03-990-805 (Sheet 9 of 9)



ECCN 9E991 BOEING PROPRIETARY - See title page for details

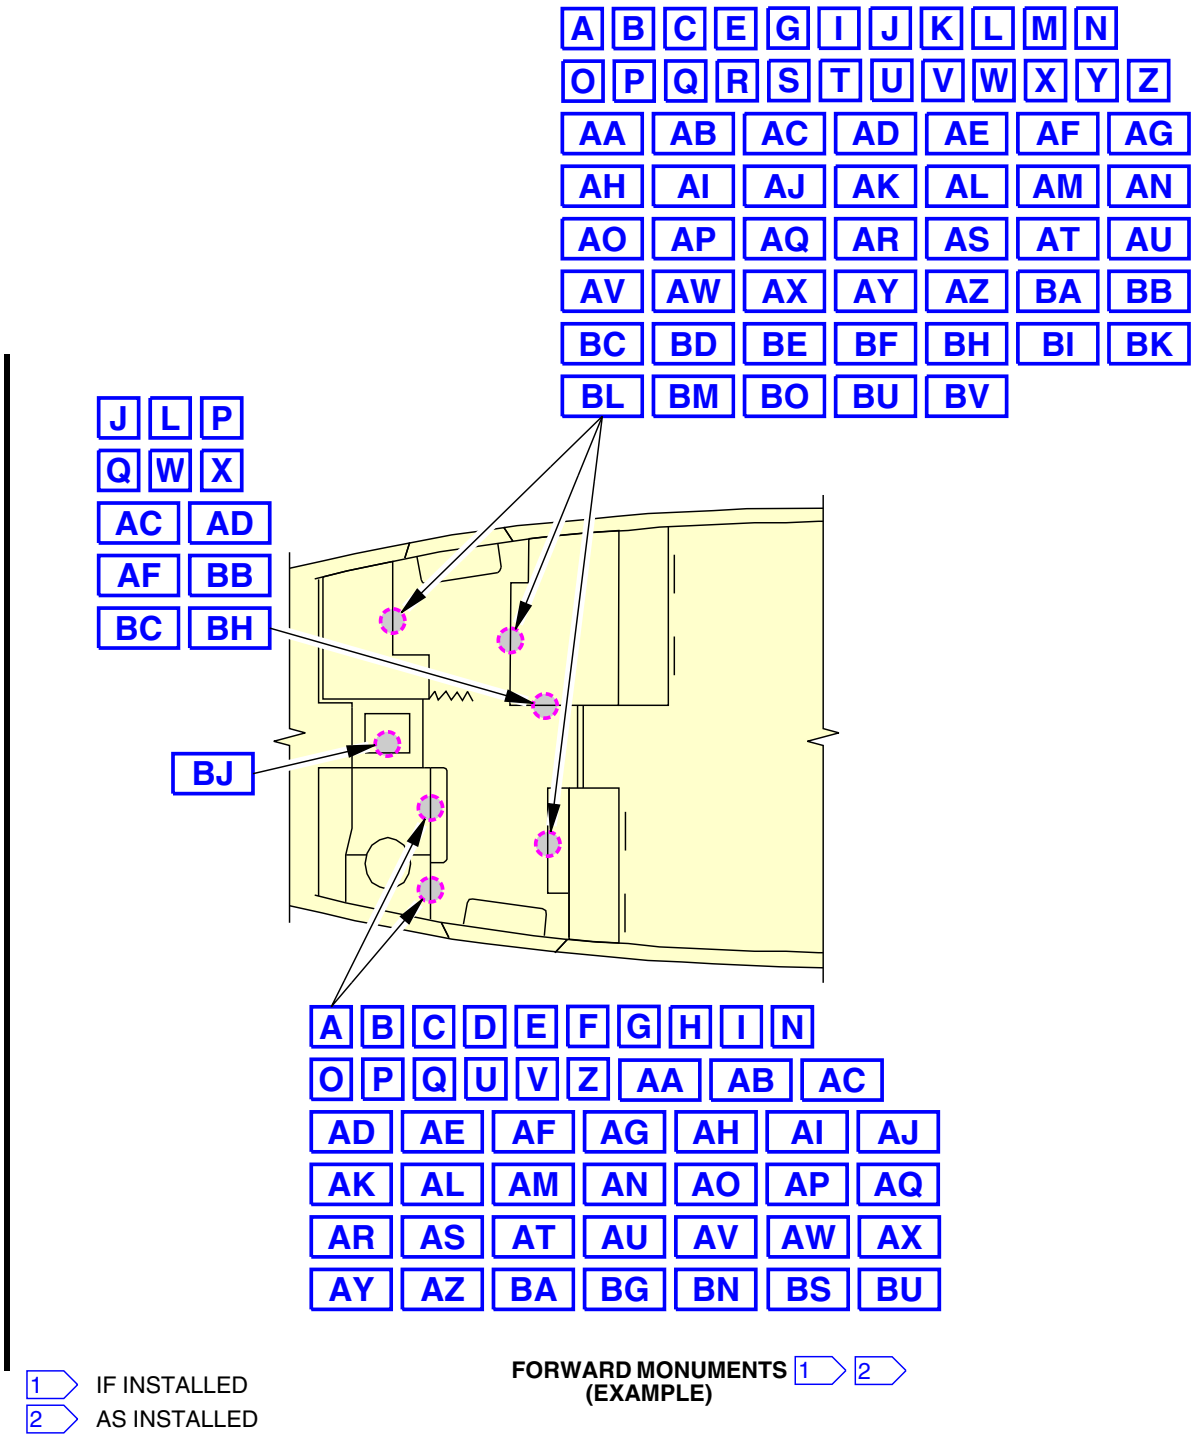



2410753 S00061526280_V35

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 1 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

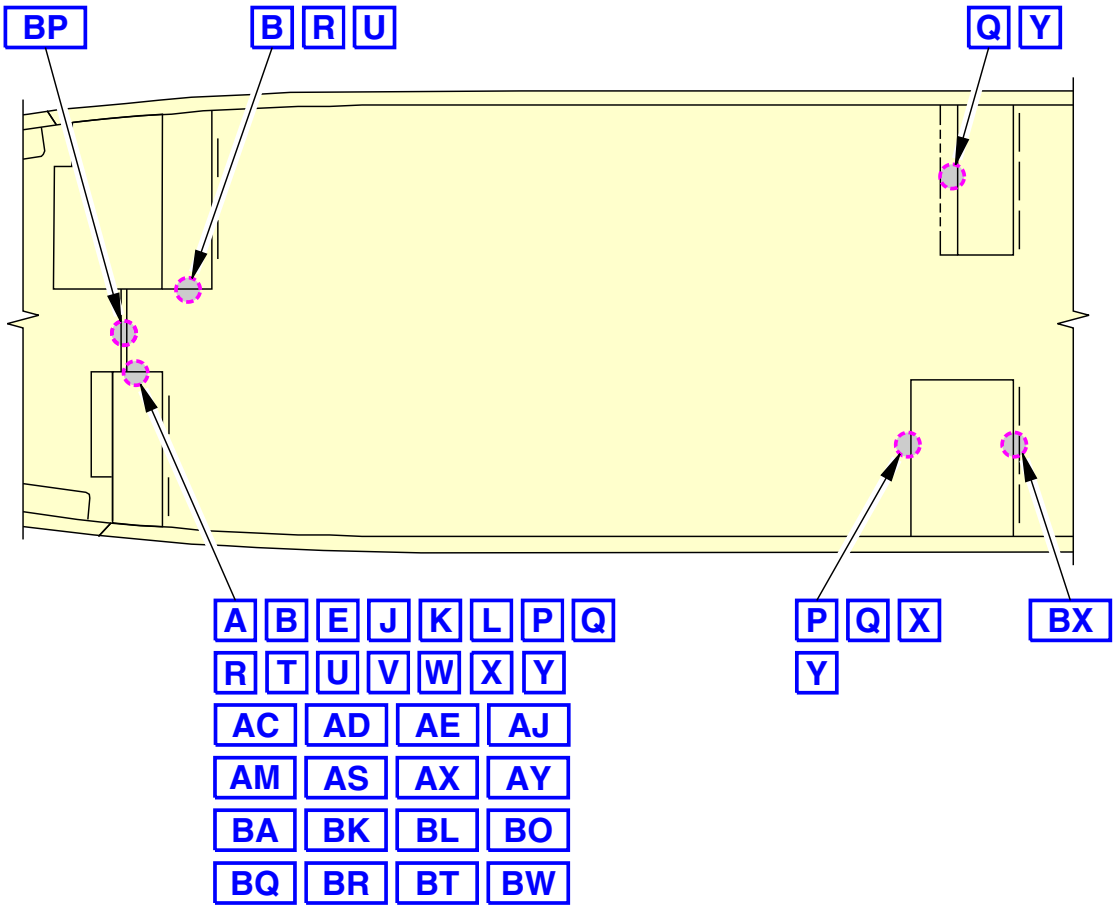


**FORWARD MONUMENTS** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

3133787 S0000862776_V1

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 2 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

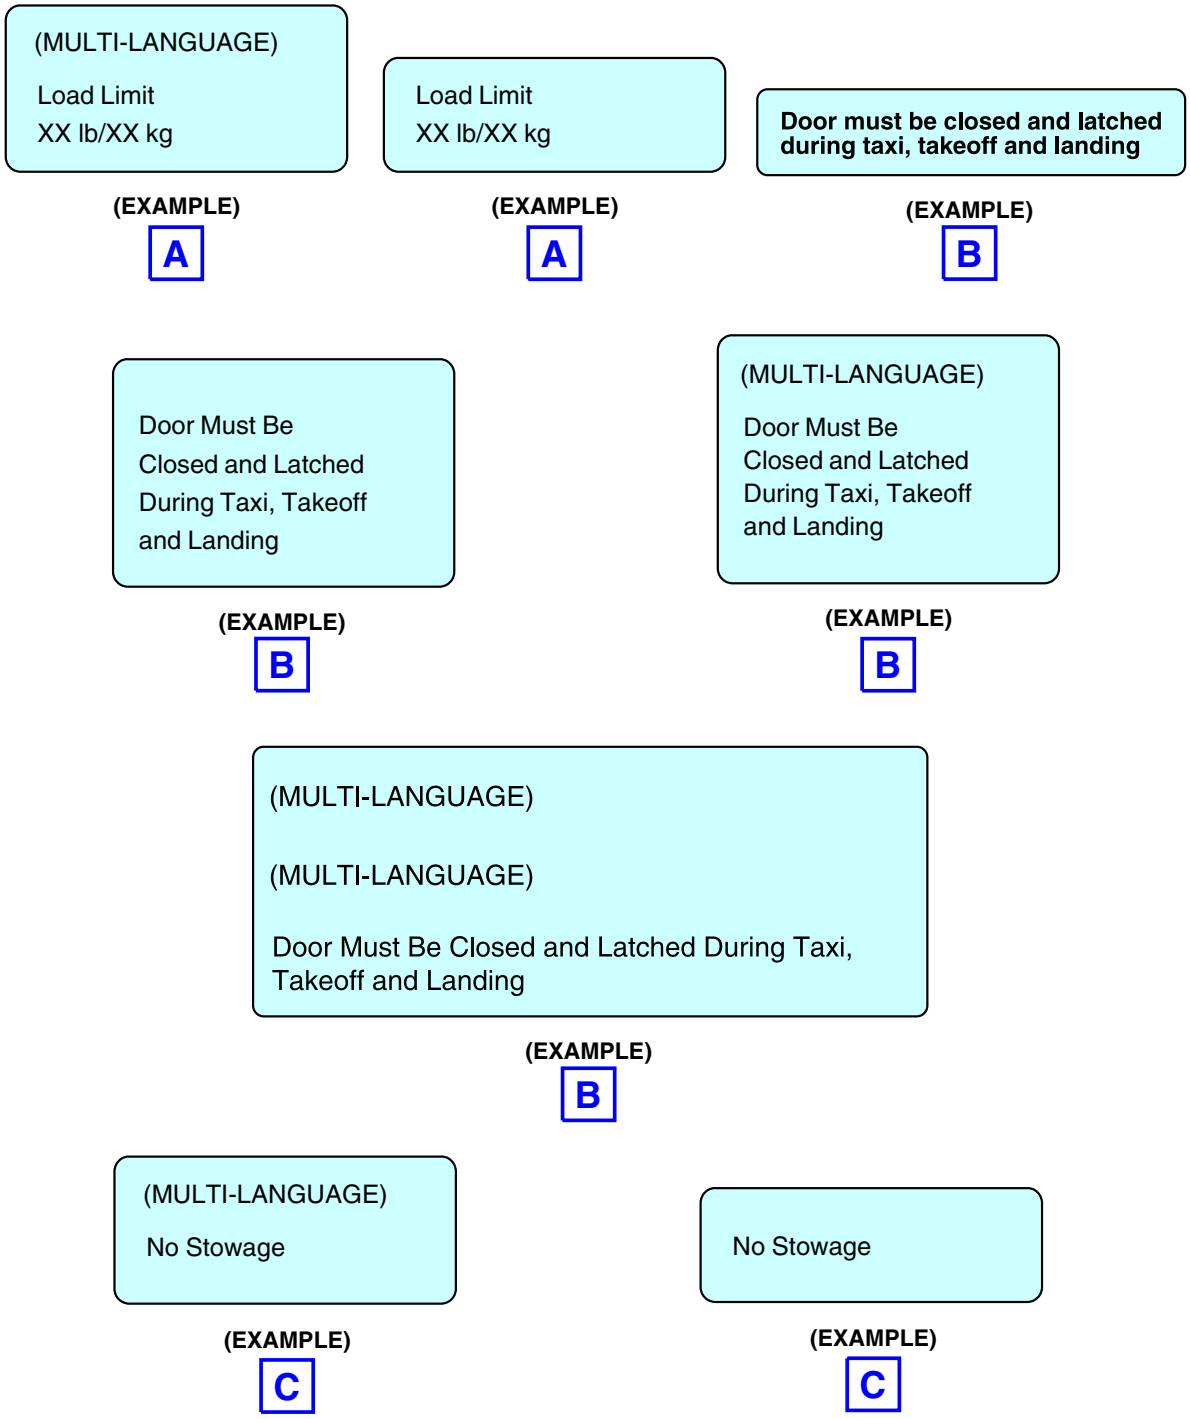


2483054 S0000582403_V7

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 3 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

PSU Video Monitors Must Not Be Deployed
During Taxi, Takeoff and Landing, Except
When Showing Safety Video Prior To Takeoff

**(EXAMPLE)**

**D**

**PSU Video Monitors Must Not Be Deployed During Taxi, Takeoff and Landing Except When Showing Passenger Safety Video Prior To Takeoff**

**(EXAMPLE)**

**D**

PSU Video Monitors Must Not Be Deployed
During Taxi, Takeoff and Landing, Except
When Showing Safety Video Prior To Takeoff

**(EXAMPLE)**


**D**

3064966 S0000827126_V1

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 4 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

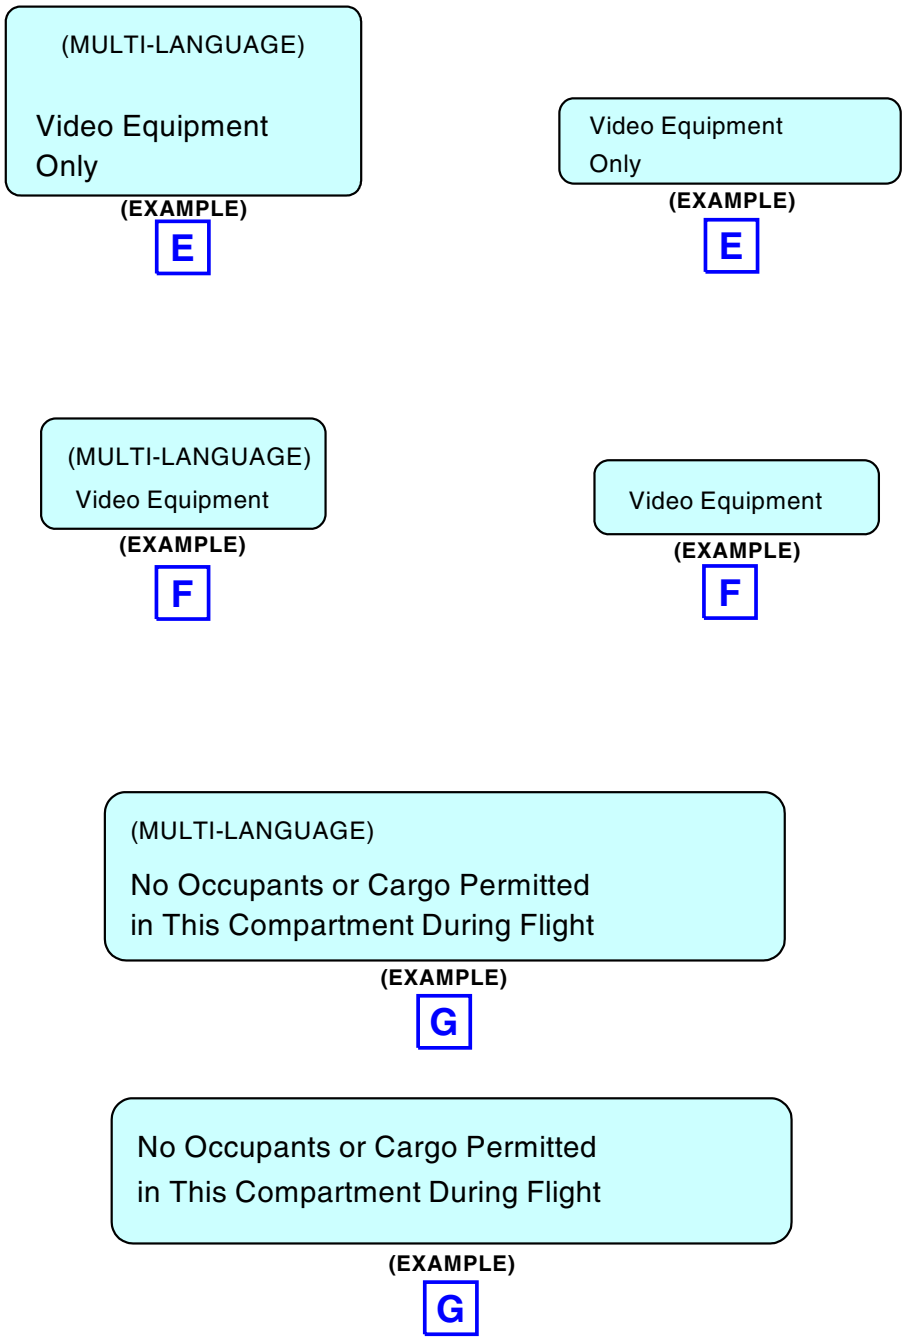



2483144 S0000582404_V3

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 5 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

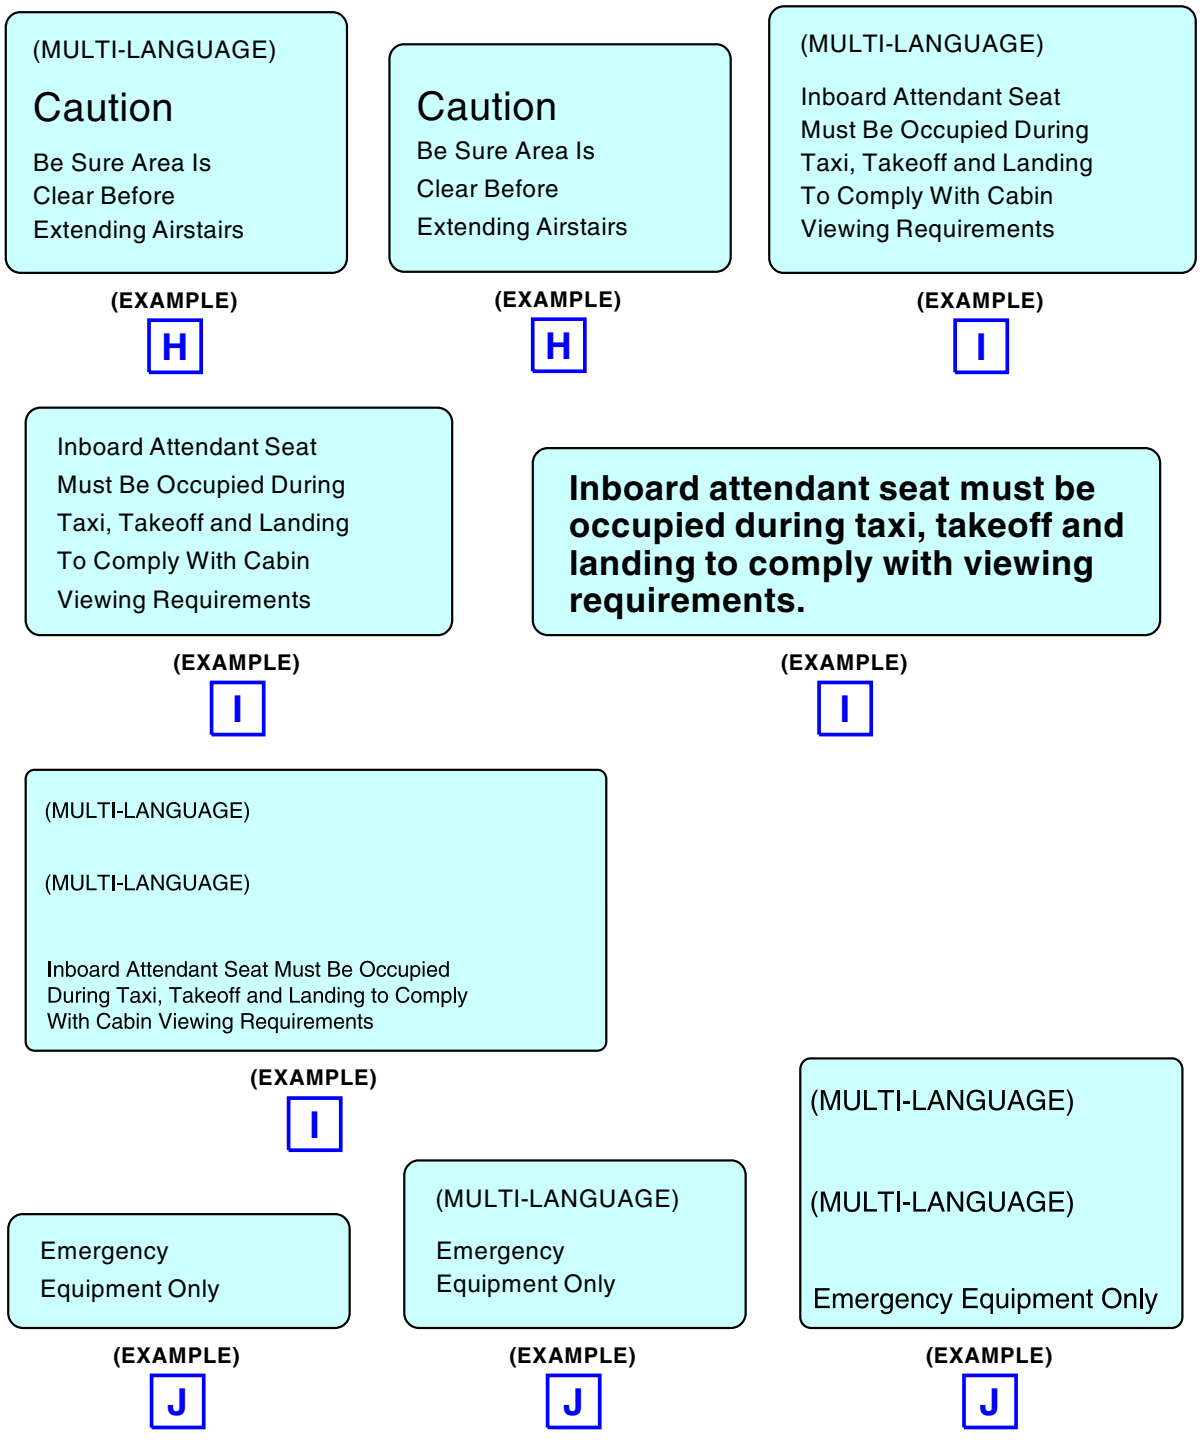



2483145 S0000582405_V5

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 6 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

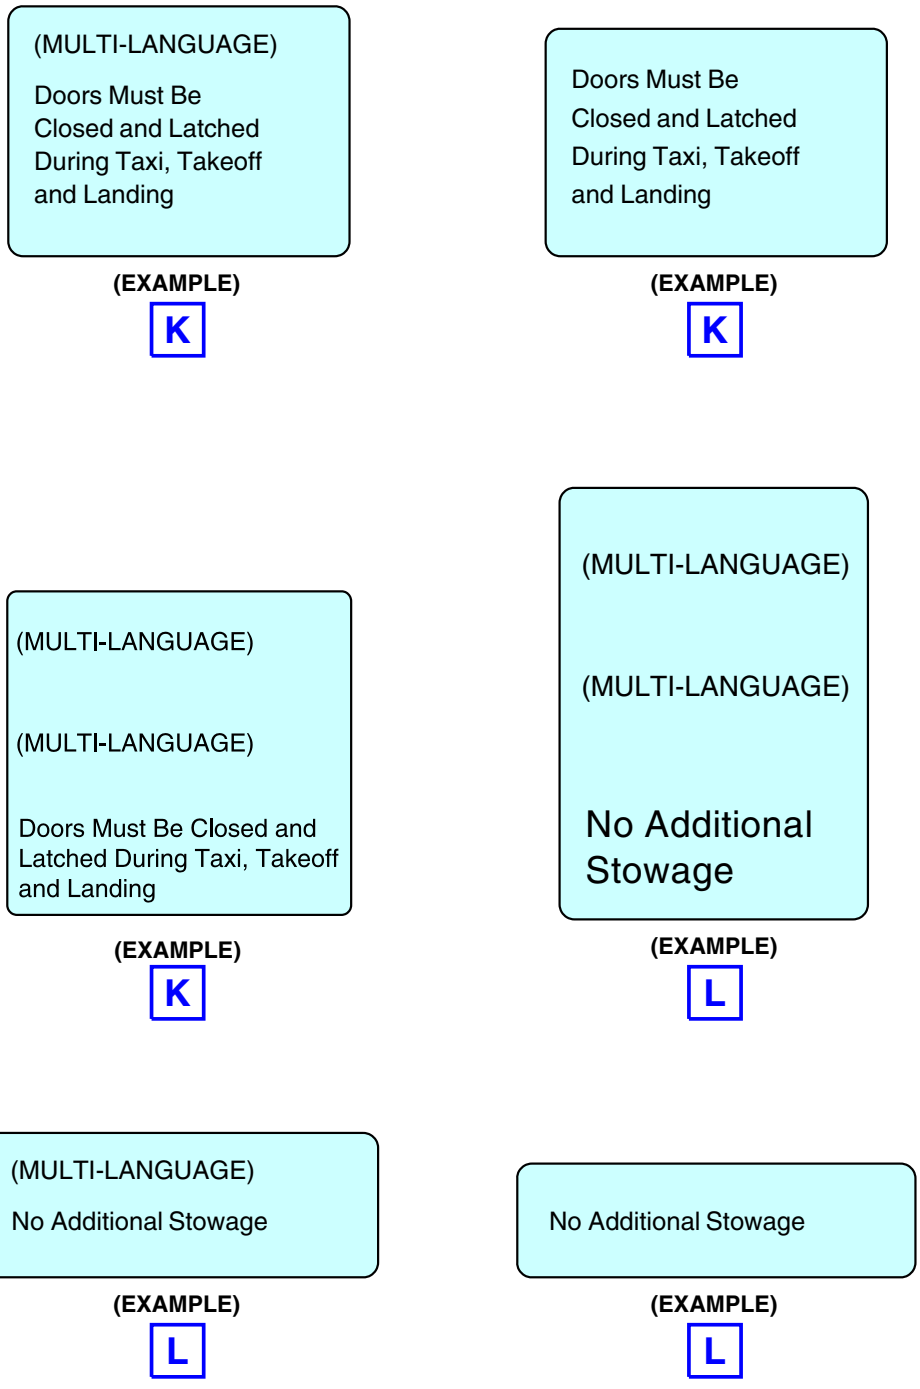



3064967 S0000827127_V2

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 7 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

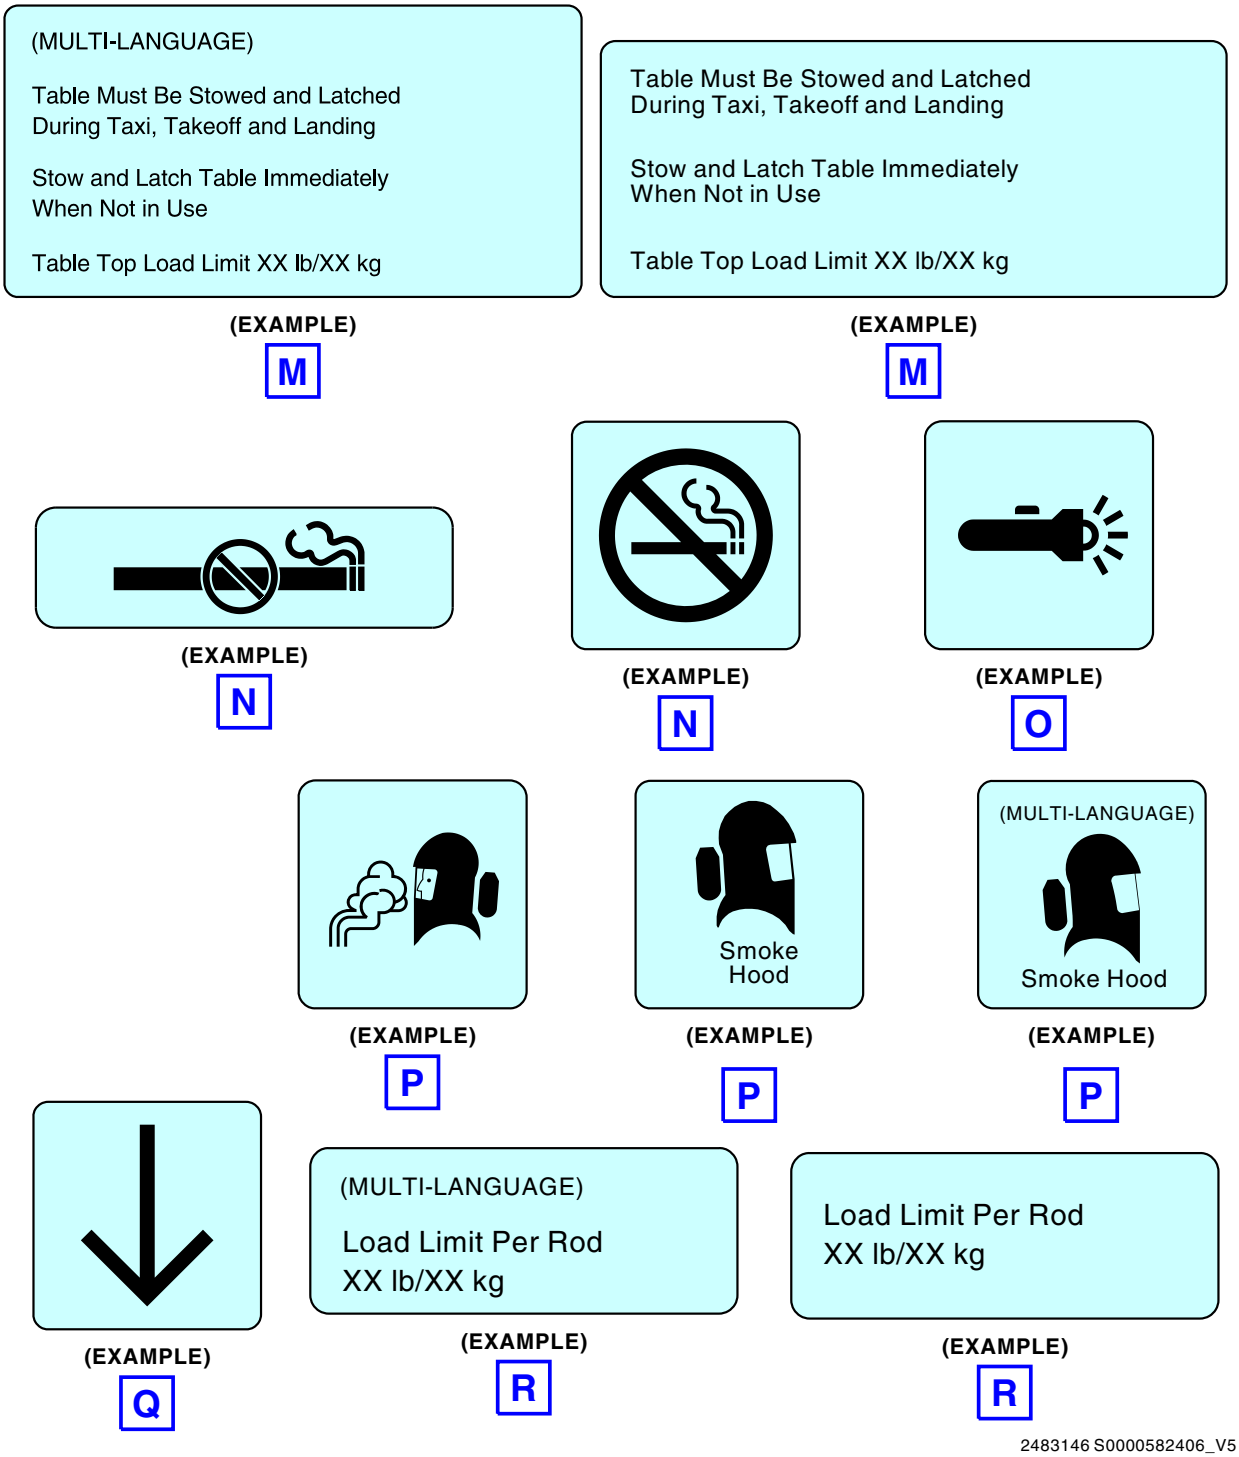



2483146 S0000582406_V5

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 8 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

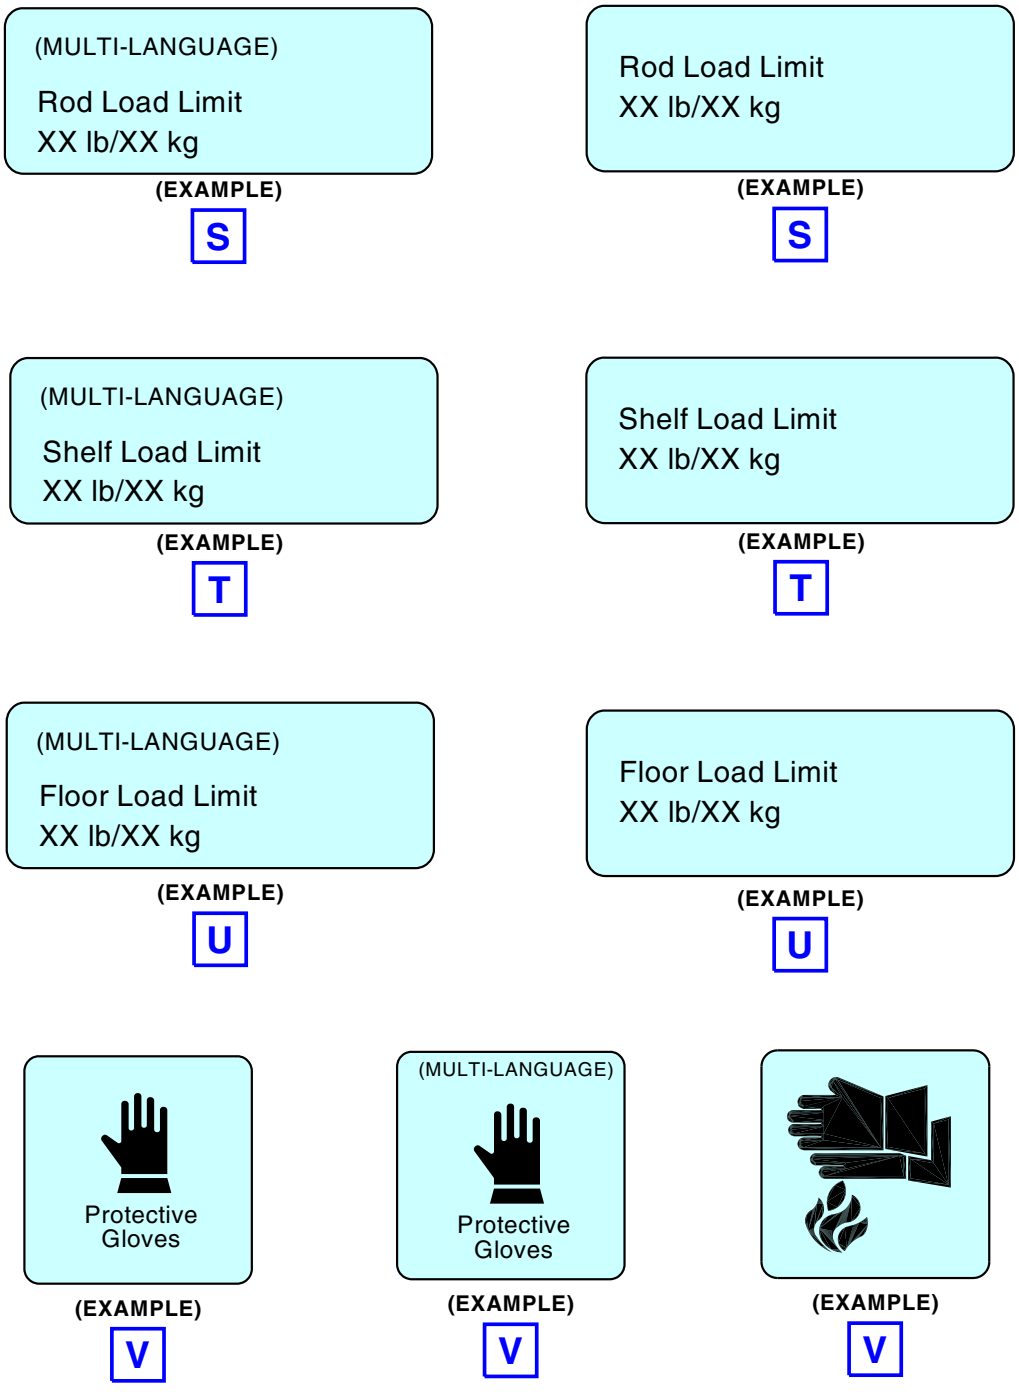



2483148 S0000582411_V3

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 9 of 19)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

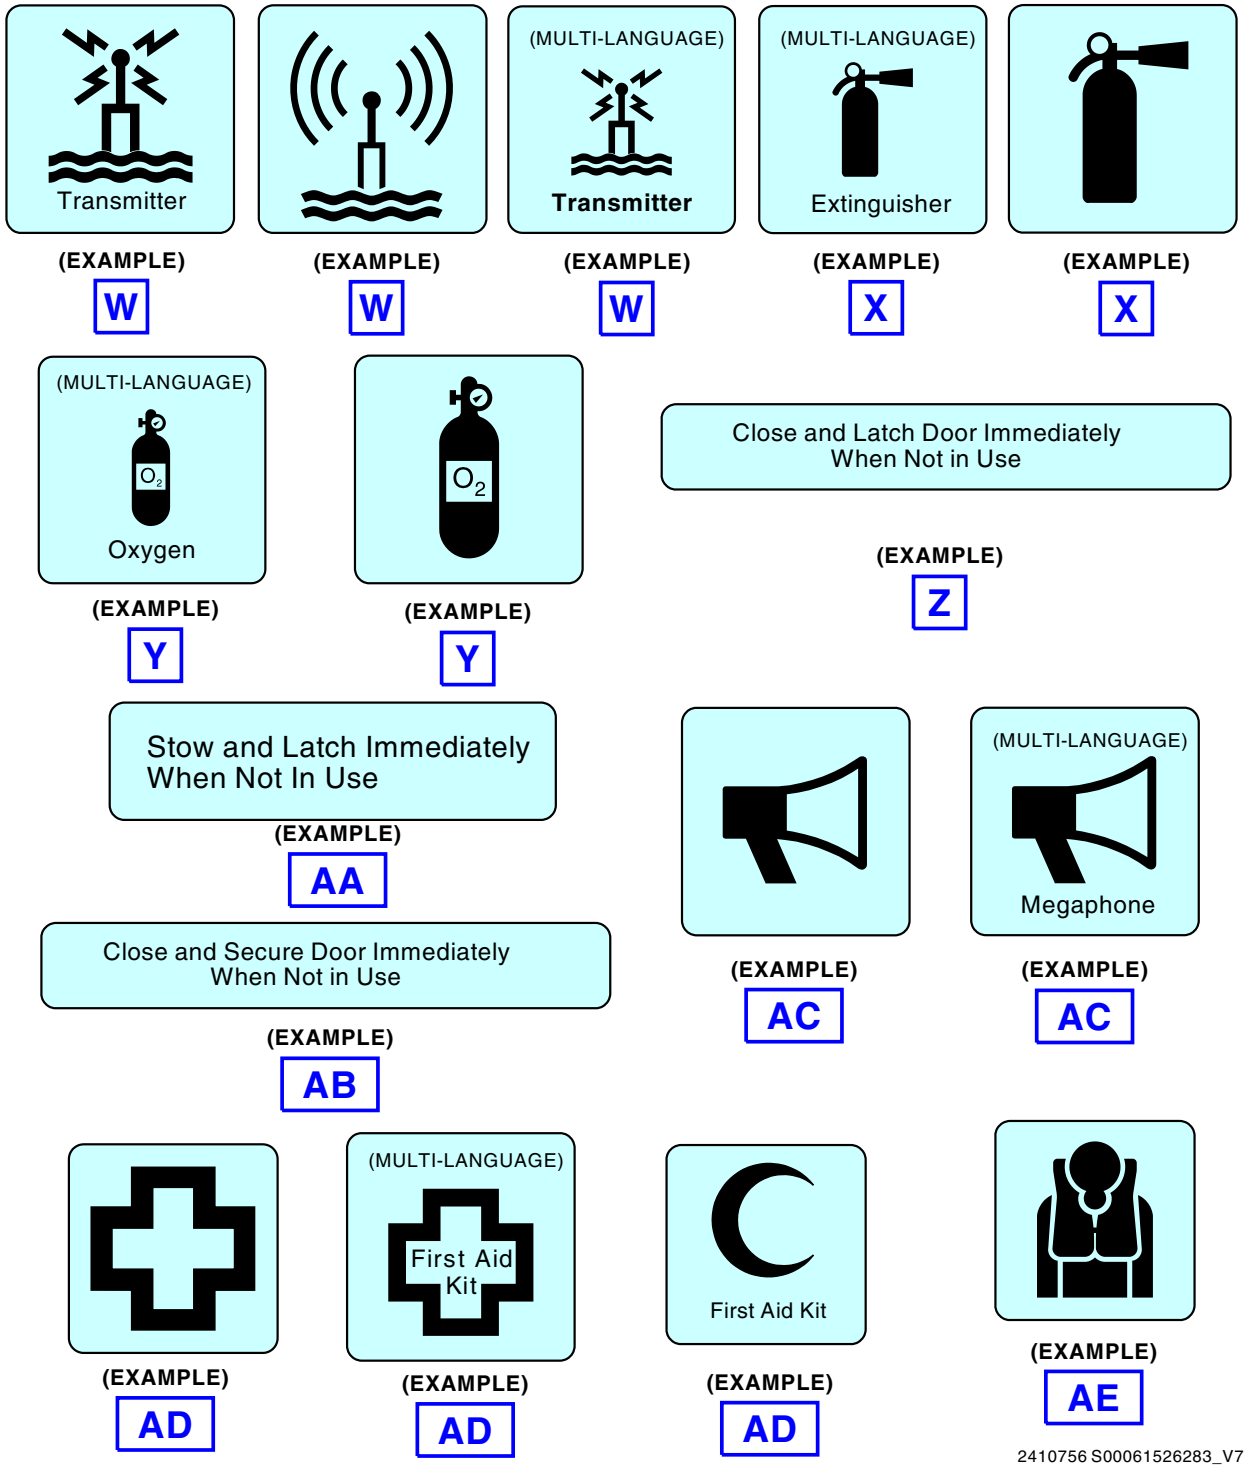


**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 10 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

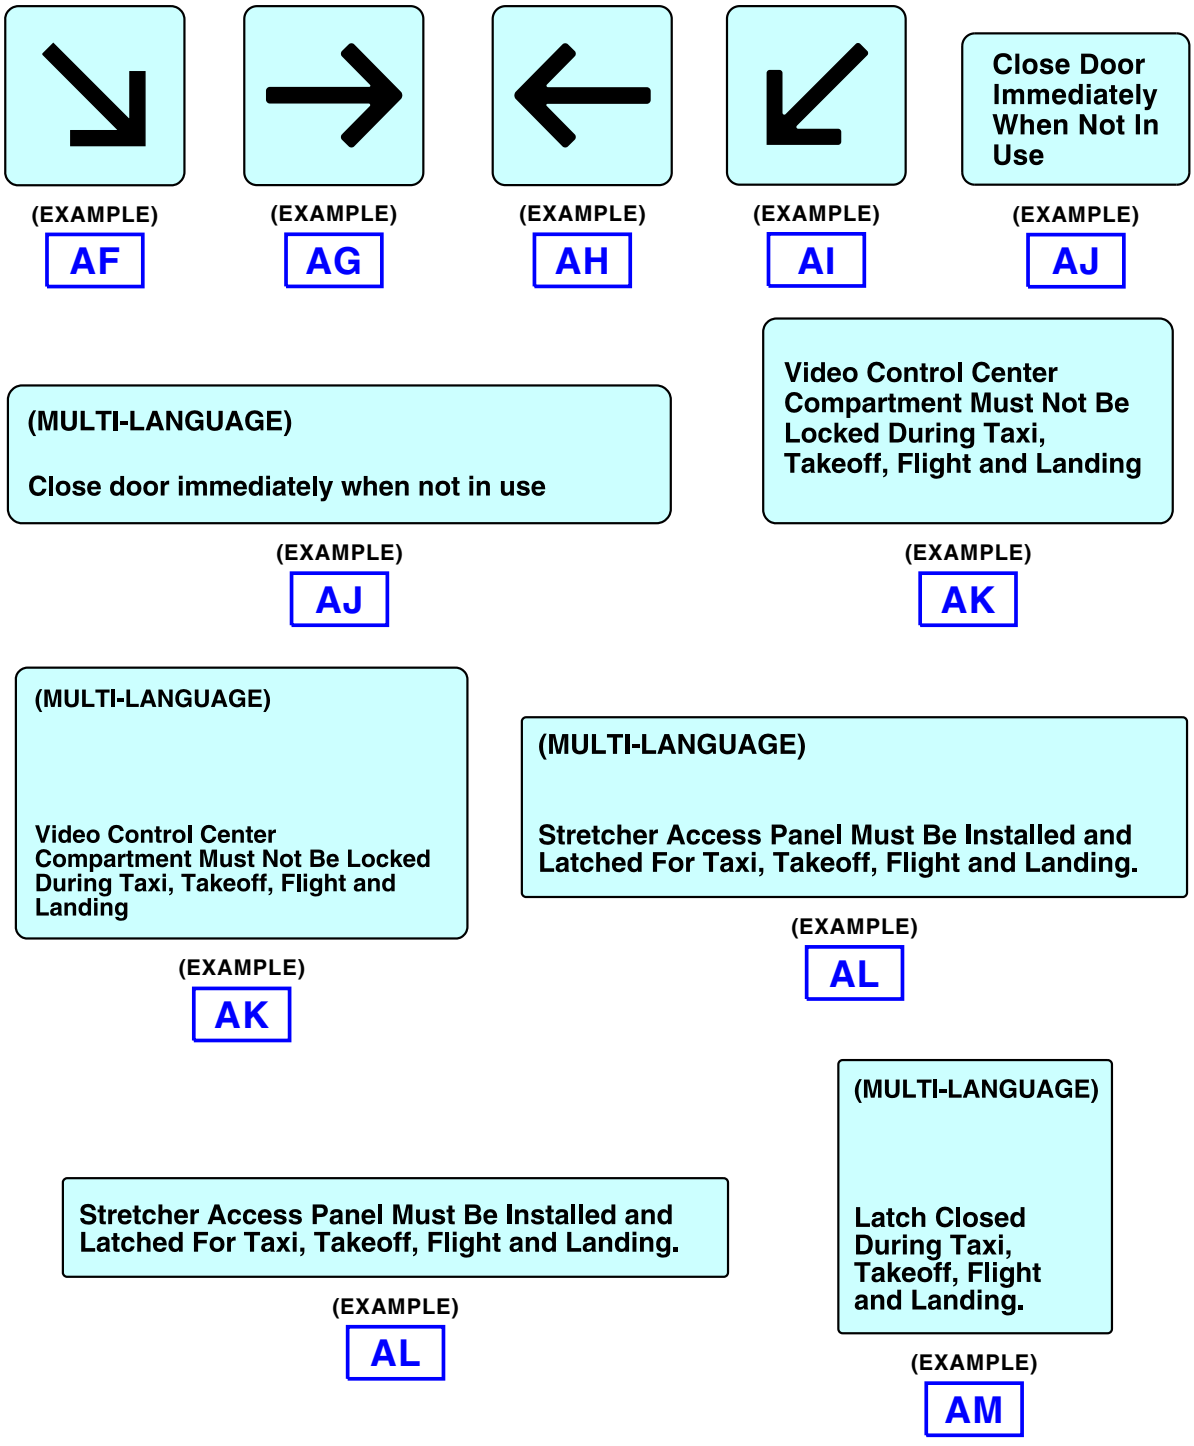


2586051 S0000624021_V5

Main Compartment Forward Monuments Placards
Figure 206/11-30-03-990-806 (Sheet 11 of 19)



ECCN 9E991 BOEING PROPRIETARY - See title page for details

Latch Closed During Taxi, Takeoff, Flight and Landing

(EXAMPLE)

AM

Close and Secure Immediately When Not in Use

(EXAMPLE)

AN

Table Must Be Stowed and Latched During Taxi, Takeoff, and Landing

Table Top Load Limit XX lb/XX kg

(EXAMPLE)

AO

Table Must Be Stowed and Latched During Taxi, Takeoff and Landing

Table Load Limit XX lb/XX kg

(EXAMPLE)

AO

(MULTI-LANGUAGE)

Table Must Be Stowed and Latched During Taxi, Takeoff and Landing

(EXAMPLE)

AP

(MULTI-LANGUAGE)

Table Load Limit XX lb/XX kg

(EXAMPLE)

AQ

Table Must Be Closed and Latched During Taxi, Takeoff and Landing
Table Load Limit XX lb

(MULTI-LANGUAGE)

(EXAMPLE)

AR

(MULTI-LANGUAGE)



Infant Life Vest

(EXAMPLE)

AS



(EXAMPLE)


AS

2588855 S0000625741_V6

Main Compartment Forward Monuments Placards
Figure 206/11-30-03-990-806 (Sheet 12 of 19)



ECCN 9E991 BOEING PROPRIETARY - See title page for details

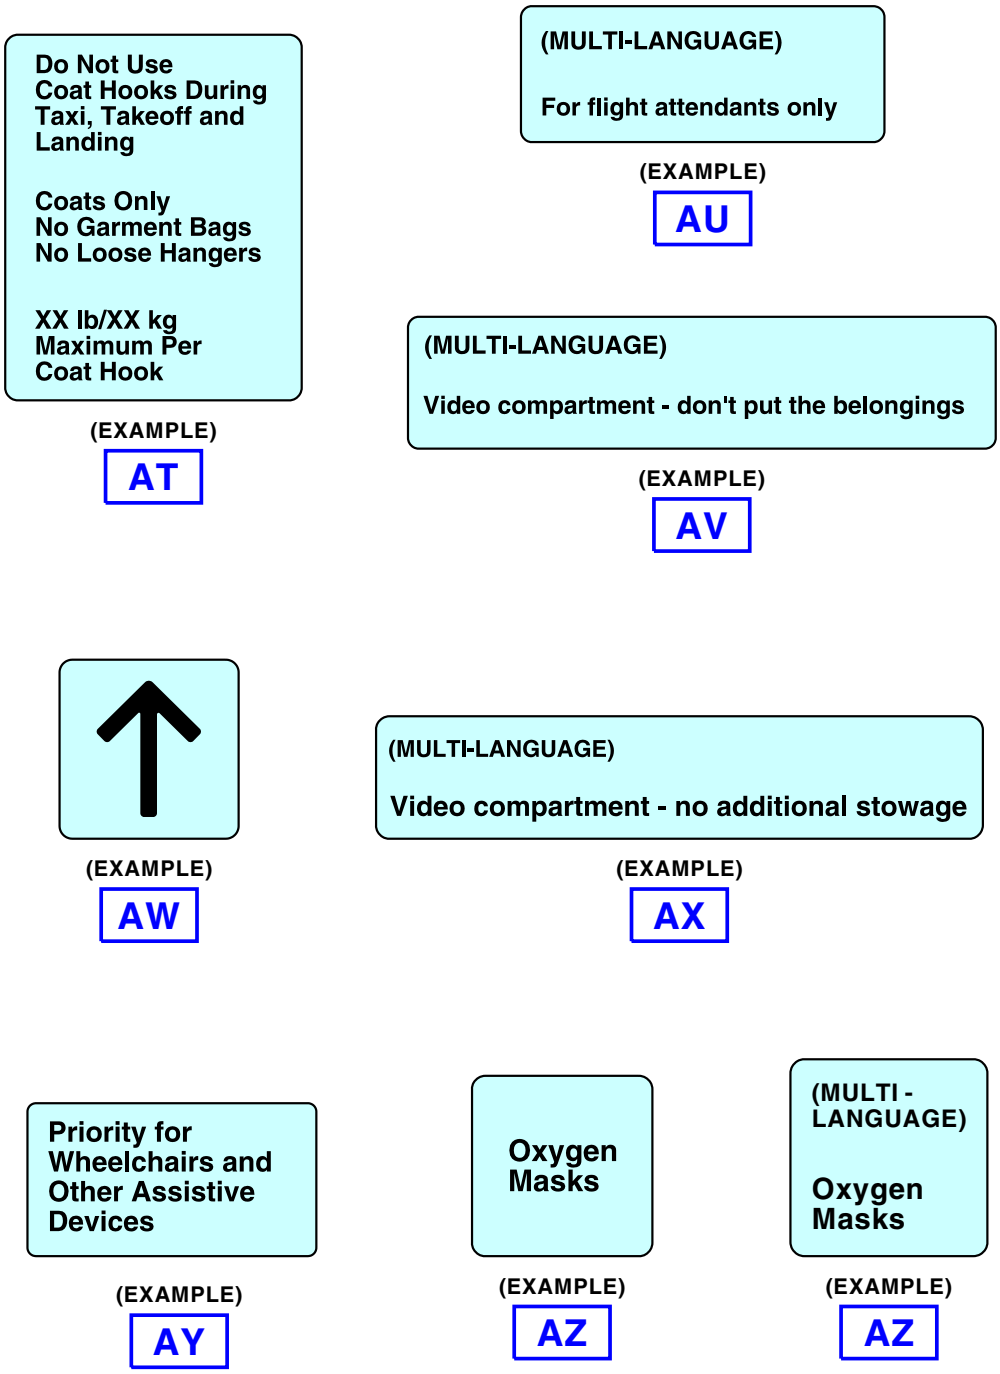



2828208 S0000656118_V7

Main Compartment Forward Monuments Placards
Figure 206/11-30-03-990-806 (Sheet 13 of 19)



ECCN 9E991 BOEING PROPRIETARY - See title page for details

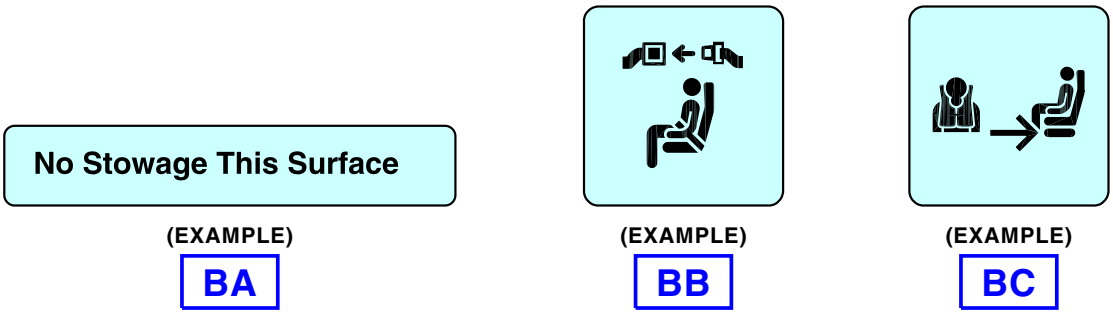


2899748 S0000692500_V5

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 14 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**Operation of Cellular & Wi-Fi Enabled Devices and/or Installed Pico Cell & Wi-Fi Systems On This Aircraft May Be Prohibited By the Local Government Communications Agency, and Violations Could Result In Sanctions.**

**It Is the Responsibility of the Airline to Adhere to the Applicable Government Regulations for Each Country of Intended Operation. Use of Cellular & Wi-Fi Enabled Devices While This Aircraft Is On the Ground May Also Be Subject to Local Aviation Regulations.**

**Refer to Boeing Drawing 222A4006 for the Aircraft Approved Equipment List and Guidance for Maintaining Pico Cell and Wi-Fi System Operator Allowance.**

**(EXAMPLE)**

**BG**

**For First Row Passengers Only**

**(EXAMPLE)**

**BH**

**CLOSE AND SECURE IMMEDIATELY WHEN NOT IN USE AND FOR TAXI, TAKE-OFF AND LANDING**

**(EXAMPLE)**

**BI**

3009312 S0000783067_V3

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 15 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**CAUTION**

KEEP DOOR CLOSED AT ALL TIMES.
DAMAGE TO CAMERA WILL OCCUR
WITH DOOR OPEN.

(EXAMPLE)

BJ

Halon

(EXAMPLE)

BK

Water

(EXAMPLE)

BL

Direct View must be displayed for taxi, takeoff and landing

(EXAMPLE)

BM

Fasten Seat Belt While Seated
Life Vest Under Your Seat

(MULTI-LANGUAGE)

(EXAMPLE)


BN

3047708 S0000814063_V7

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 16 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

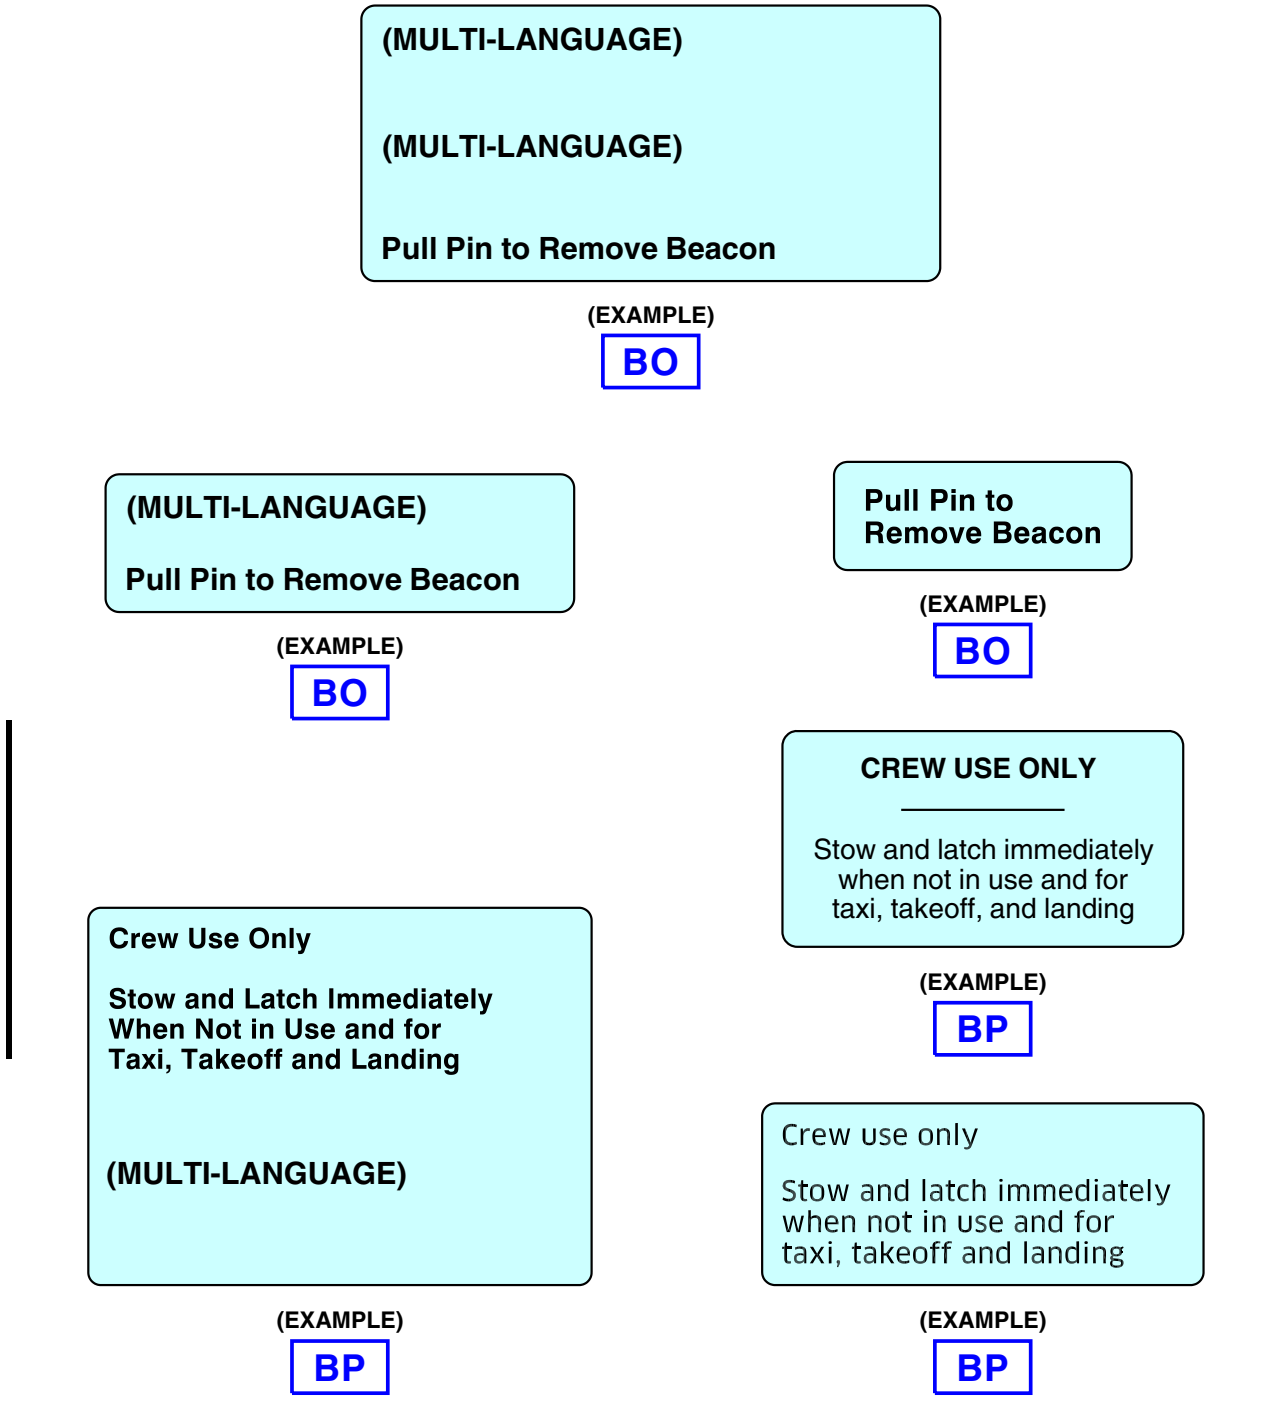


**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 17 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

Video Control Center Compartment Must Not Be Locked During Taxi, Takeoff and Landing

(EXAMPLE)

BQ

Folding Trolley Stowage Only

(EXAMPLE)

BR

No Occupants or Cargo Permitted in this Compartment During Flight

(EXAMPLE)

BS

Latch Closed During Taxi, Takeoff and Landing

(EXAMPLE)

BT

Latch Door Closed During Taxi, Takeoff and Landing

(MULTI-LANGUAGE)

(EXAMPLE)


BU

3112892 S0000851403_V3

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 18 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

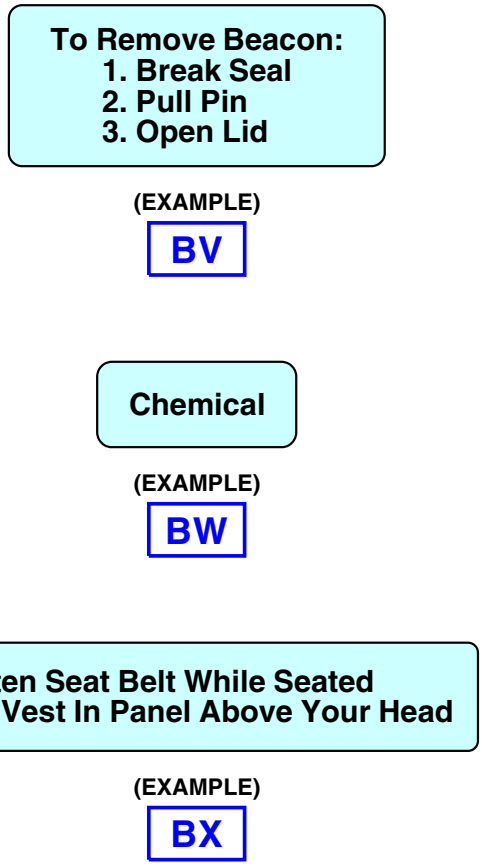



3135896 S0000863355_V1

**Main Compartment Forward Monuments Placards**
**Figure 206/11-30-03-990-806 (Sheet 19 of 19)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

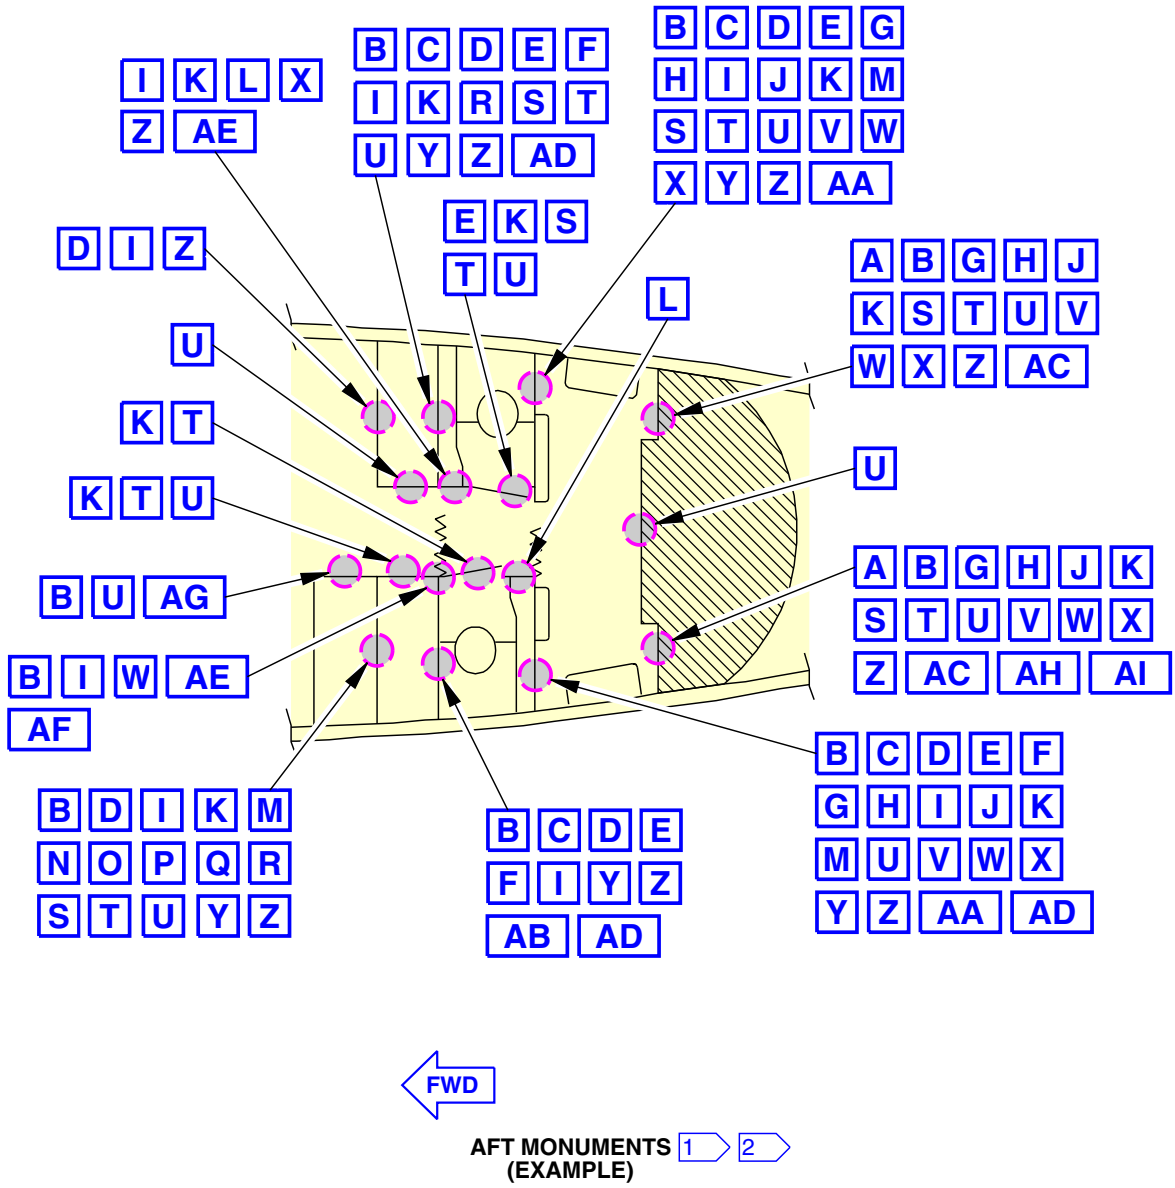



1 IF INSTALLED
2 AS INSTALLED

2410757 S00061526284_V28

**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 1 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

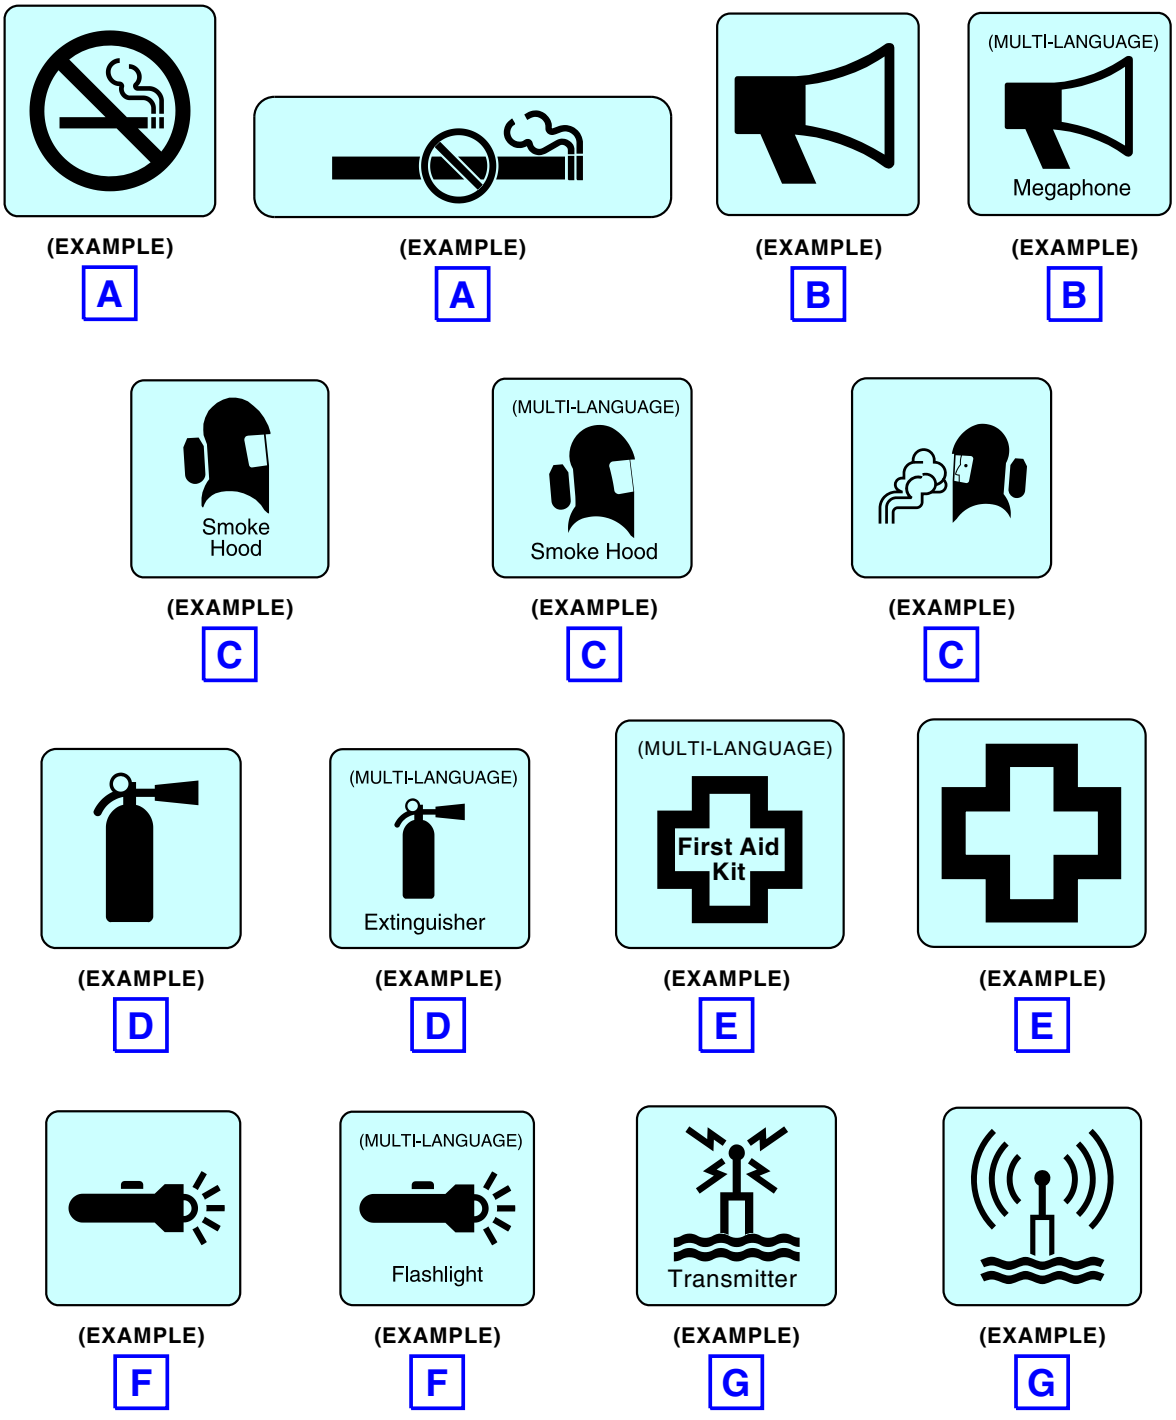



2483160 S0000582883_V4

**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 2 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

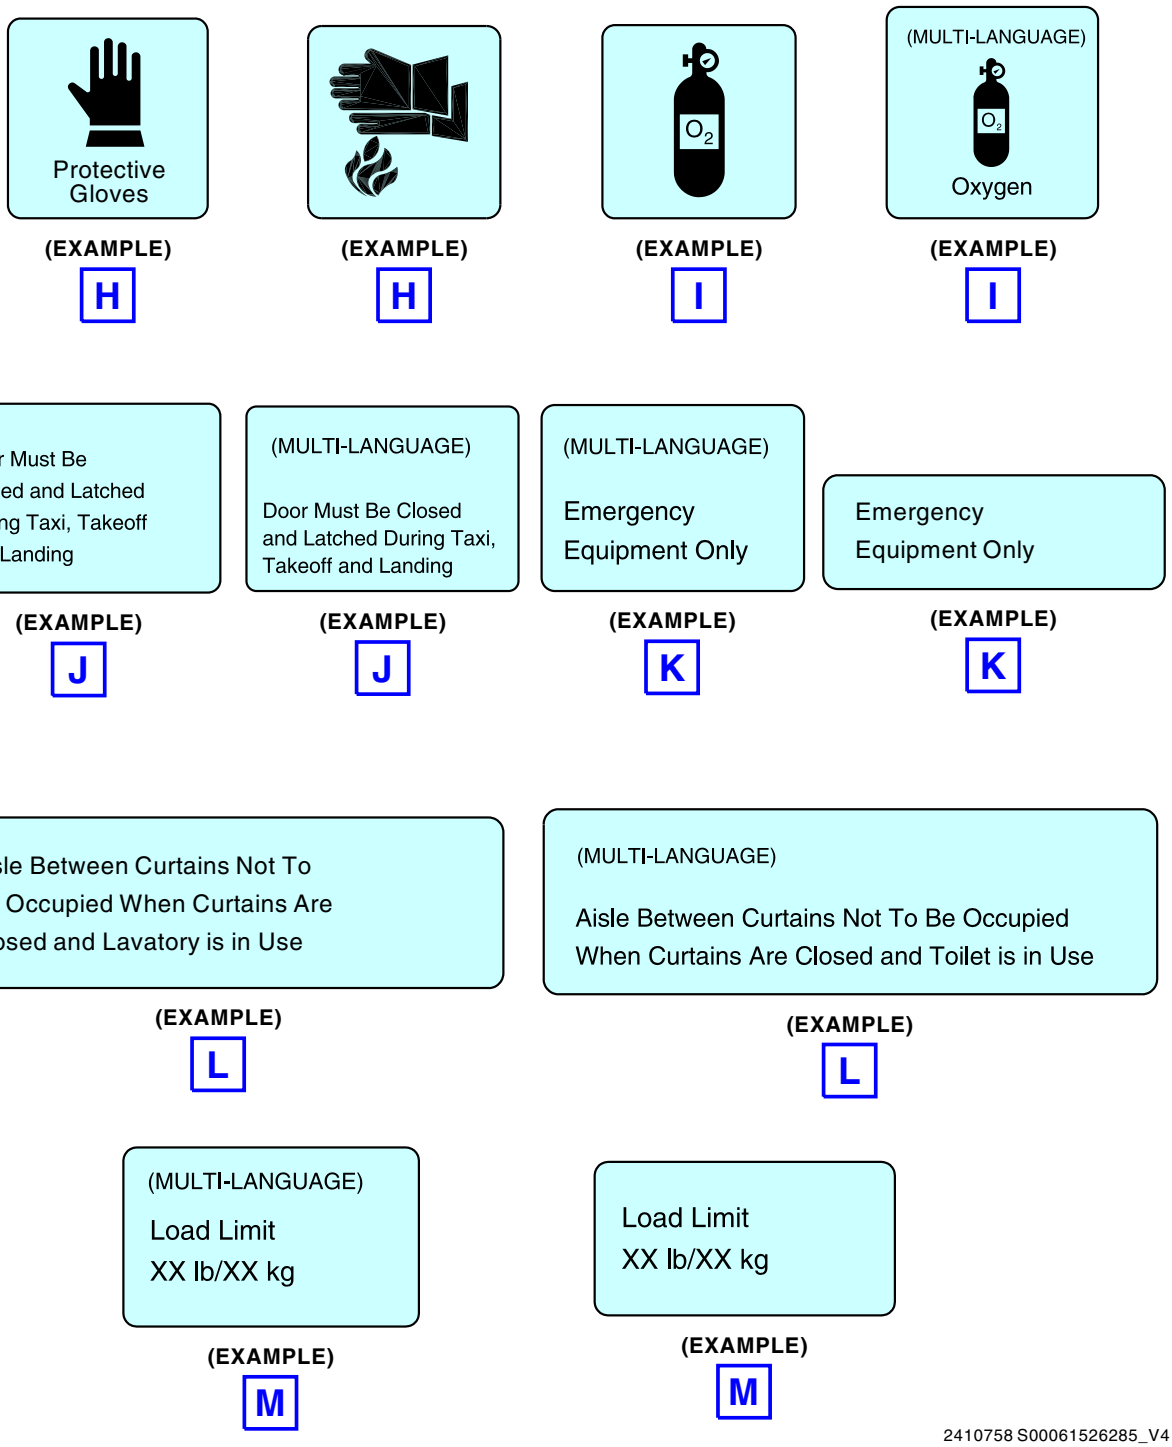


**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 3 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)
Load Limit Per Rod
XX lb/XX kg

**(EXAMPLE)**

**N**

Load Limit Per Rod
XX lb/XX kg

**(EXAMPLE)**

**N**

(MULTI-LANGUAGE)
Rod Load Limit
XX lb/XX kg

**(EXAMPLE)**

**O**

Rod Load Limit
XX lb/XX kg

**(EXAMPLE)**

**O**

(MULTI-LANGUAGE)
Shelf Load Limit
XX lb/XX kg

**(EXAMPLE)**

**P**

Shelf Load Limit
XX lb/XX kg

**(EXAMPLE)**

**P**

(MULTI-LANGUAGE)
Floor Load Limit
XX lb/XX kg

**(EXAMPLE)**

**Q**

Floor Load Limit
XX lb/XX kg

**(EXAMPLE)**


**Q**

2483162 S0000582890_V3

**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 4 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

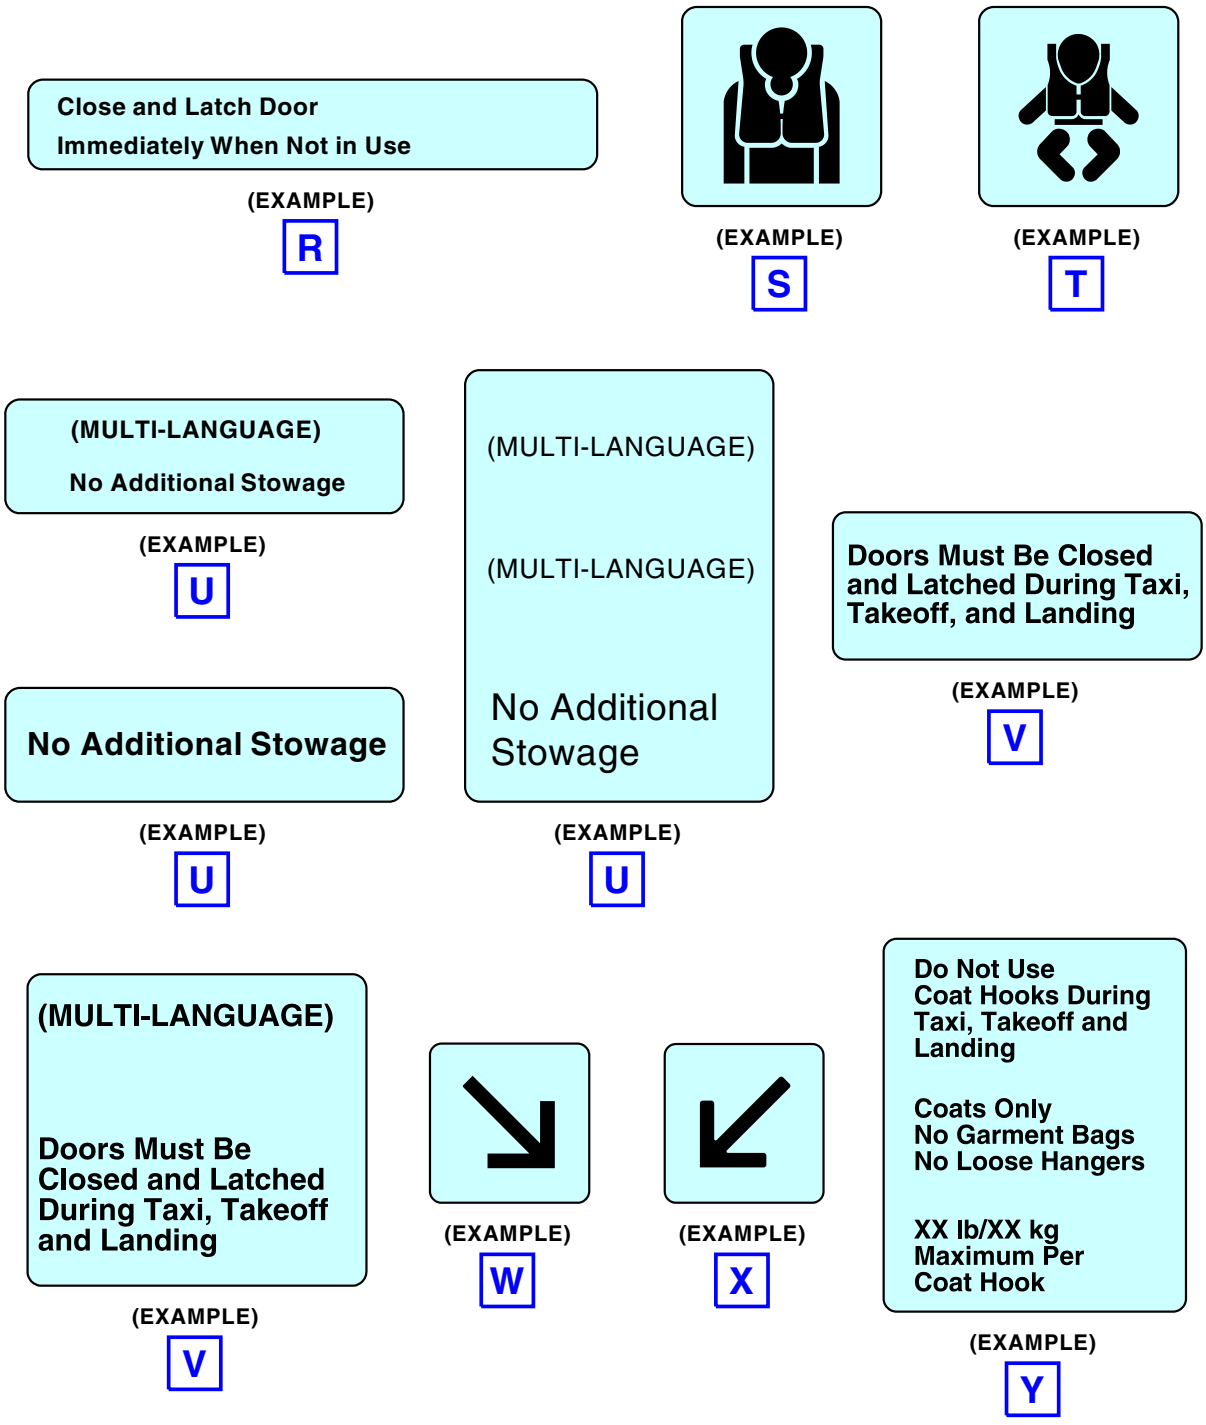



2583283 S0000623157_V11

**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 5 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

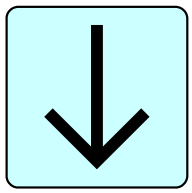

(EXAMPLE)

Z

(MULTI-LANGUAGE)

For flight attendants only

(EXAMPLE)

AA

Wheelchair Stowage Only

(EXAMPLE)

AB



(EXAMPLE)

AC

NO STEP

(EXAMPLE)

AD

Stow and Latch Immediately
When Not In Use

(EXAMPLE)

AE

(MULTI-LANGUAGE)

Stow and latch immediately
when not in use

(EXAMPLE)


AE

2978784 S0000757186_V5

**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 6 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

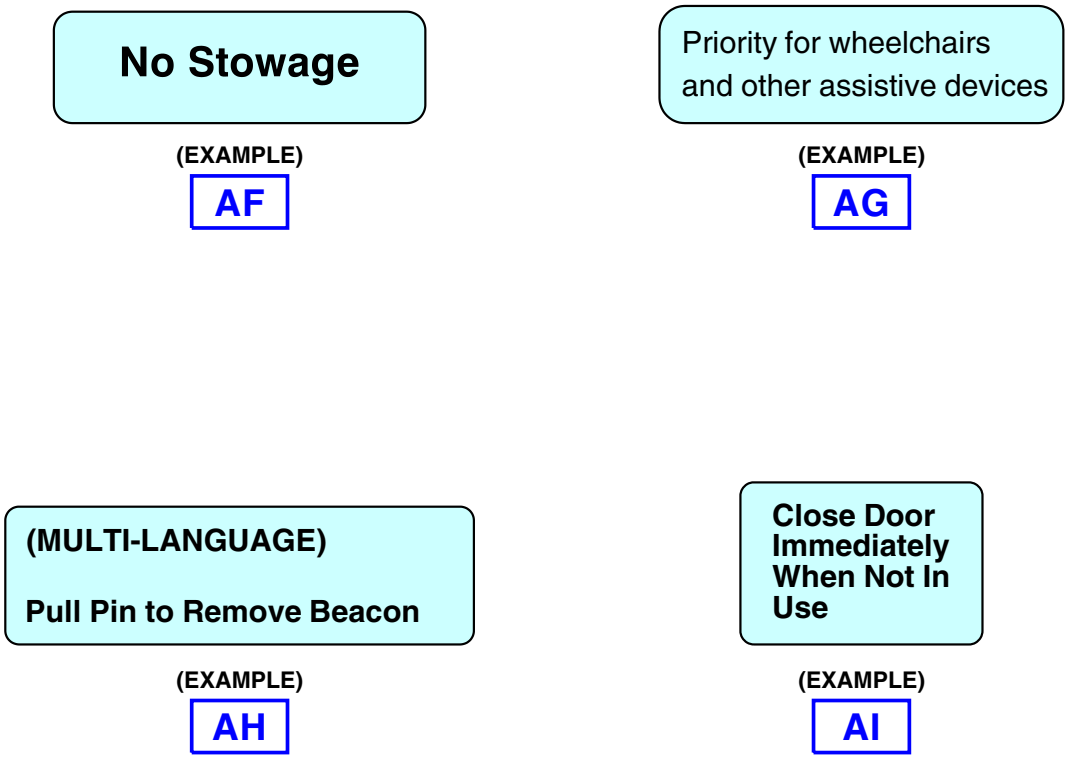



3114786 S0000852356_V1

**Main Compartment Aft Monuments Placards**
**Figure 207/11-30-03-990-807 (Sheet 7 of 7)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

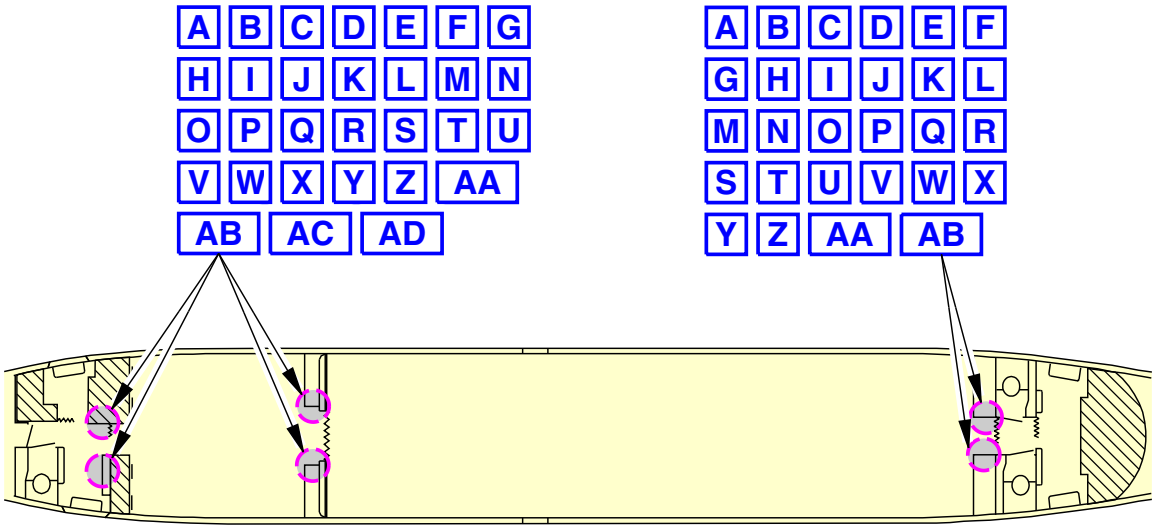


**FLOOR-MOUNTED STOWAGE** 1 2
**(EXAMPLE)**


1 IF INSTALLED
2 AS INSTALLED

2410761 S00061526288_V11

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 1 of 8)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

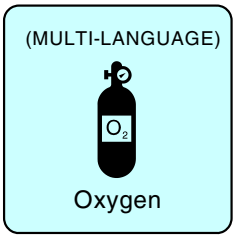



(EXAMPLE)

A

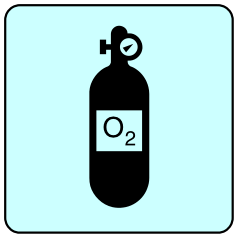


(EXAMPLE)

A

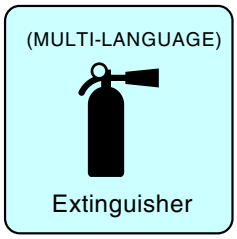


(EXAMPLE)

B



(EXAMPLE)

B




(EXAMPLE)

C



(EXAMPLE)

C




(EXAMPLE)


C

2410762 S00061526289_V3

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 2 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

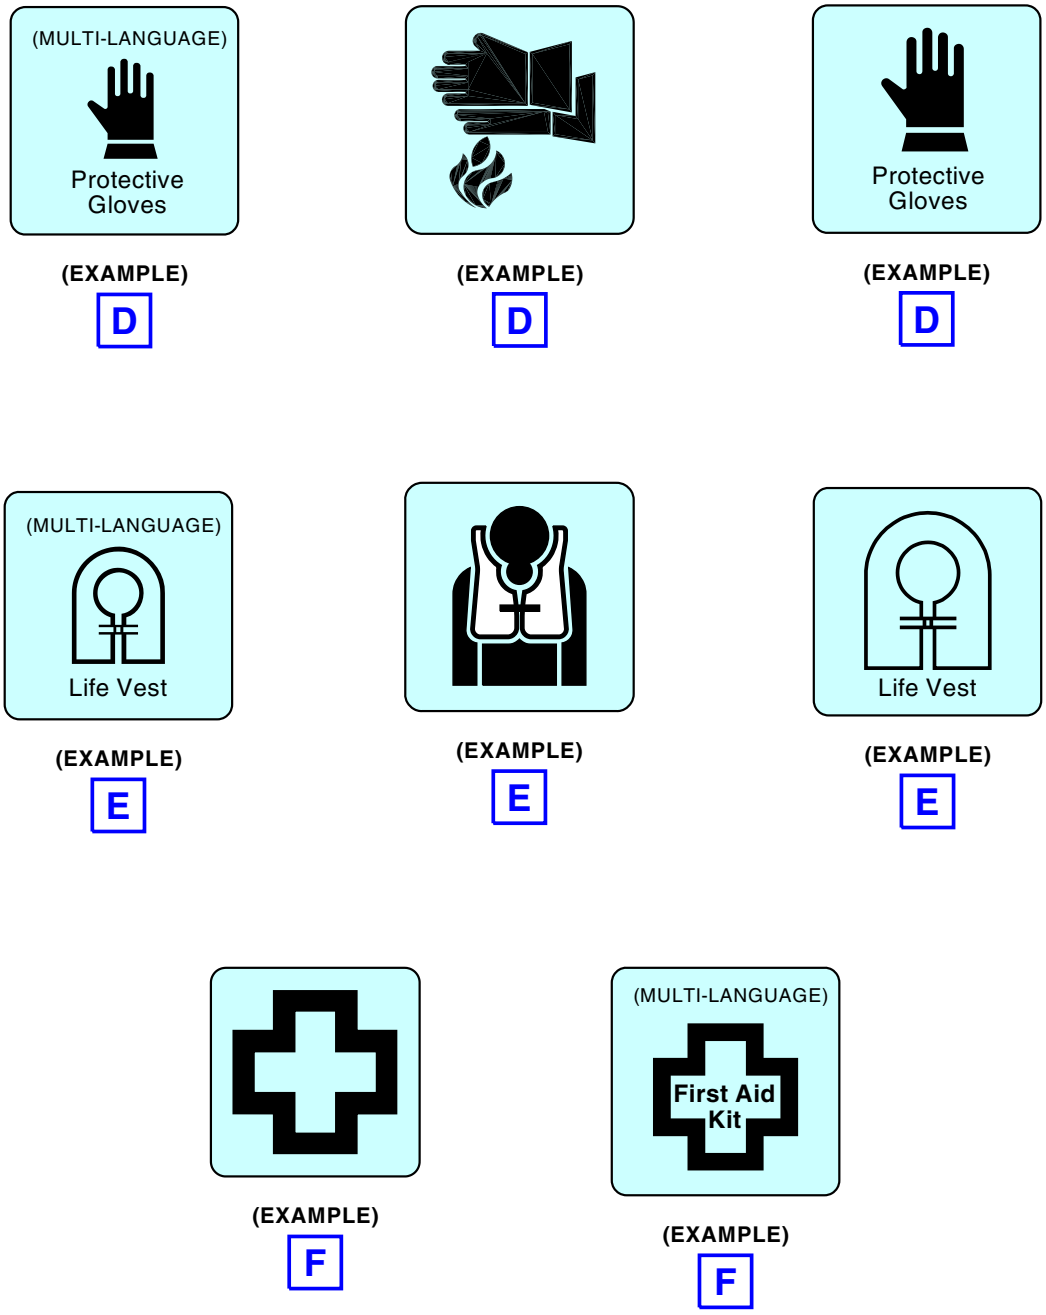


2483171 S0000582892_V3

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 3 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

EMERGENCY
EQUIPMENT ONLY

(EXAMPLE)

G

Emergency
Equipment Only

(EXAMPLE)

G

Door Must Be Closed
and Latched During Taxi,
Takeoff, and Landing

(EXAMPLE)

H

(MULTI-LANGUAGE)

Door Must Be
Closed and Latched
During Taxi, Takeoff
and Landing

(EXAMPLE)

H

Door must be closed and latched
during taxi, takeoff and landing

(EXAMPLE)

H

(MULTI-LANGUAGE)

Doors Must Be
Closed and Latched
During Taxi, Takeoff
and Landing

(EXAMPLE)

I

Doors Must Be
Closed and Latched
During Taxi, Takeoff
and Landing

(EXAMPLE)


I

2483175 S0000582413_V6

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 4 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

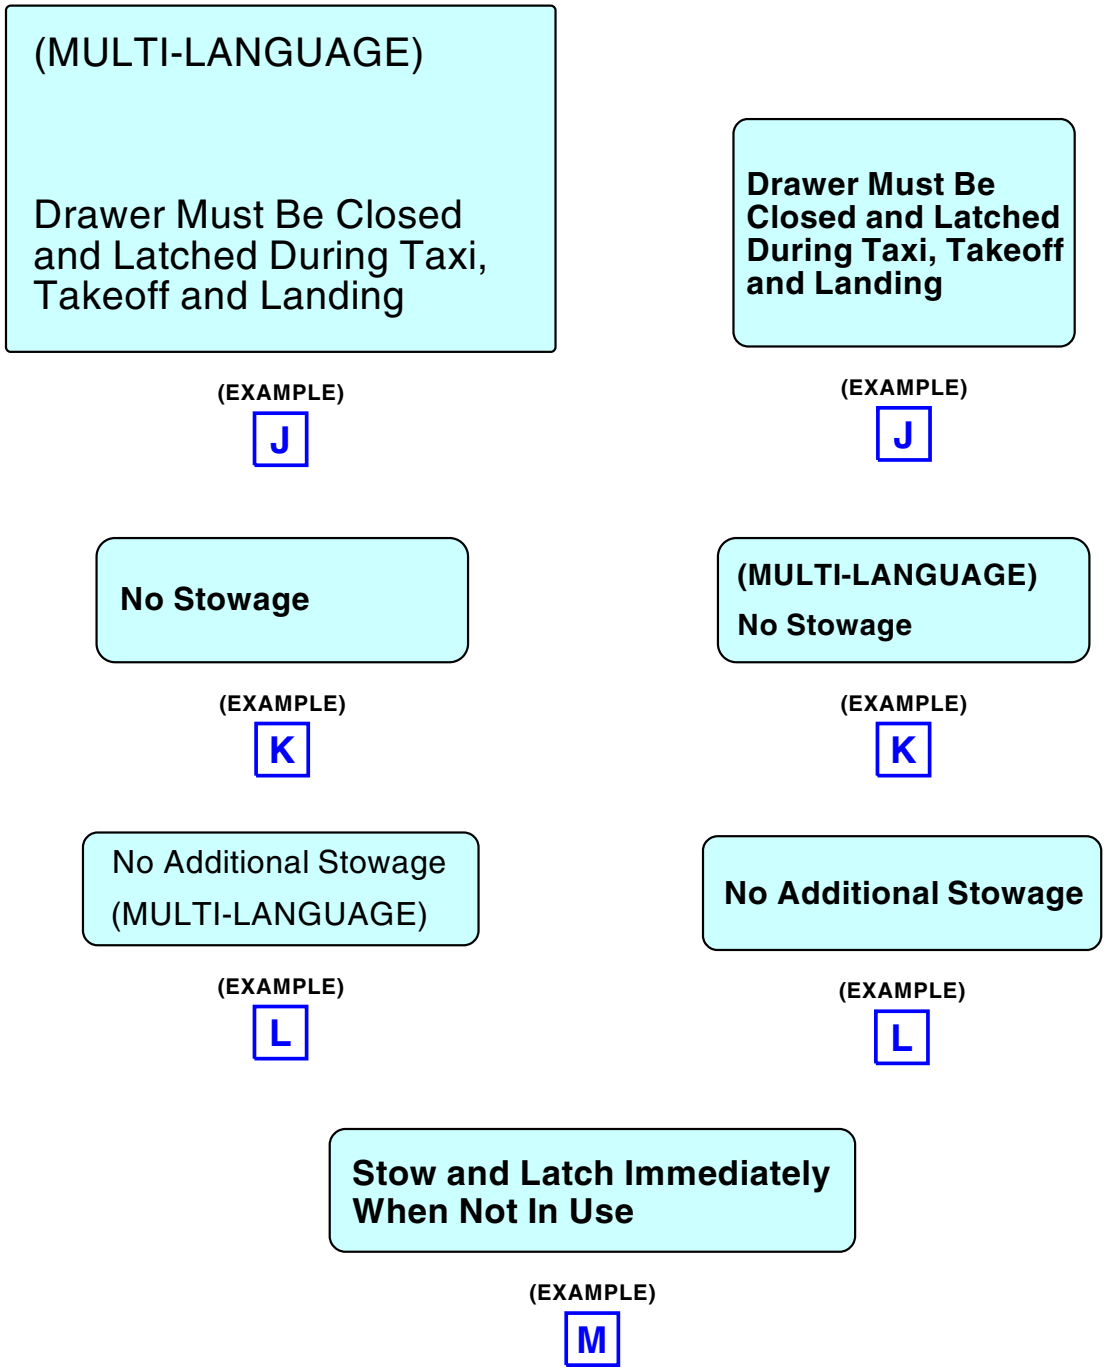



2588863 S0000625743_V2

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 5 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

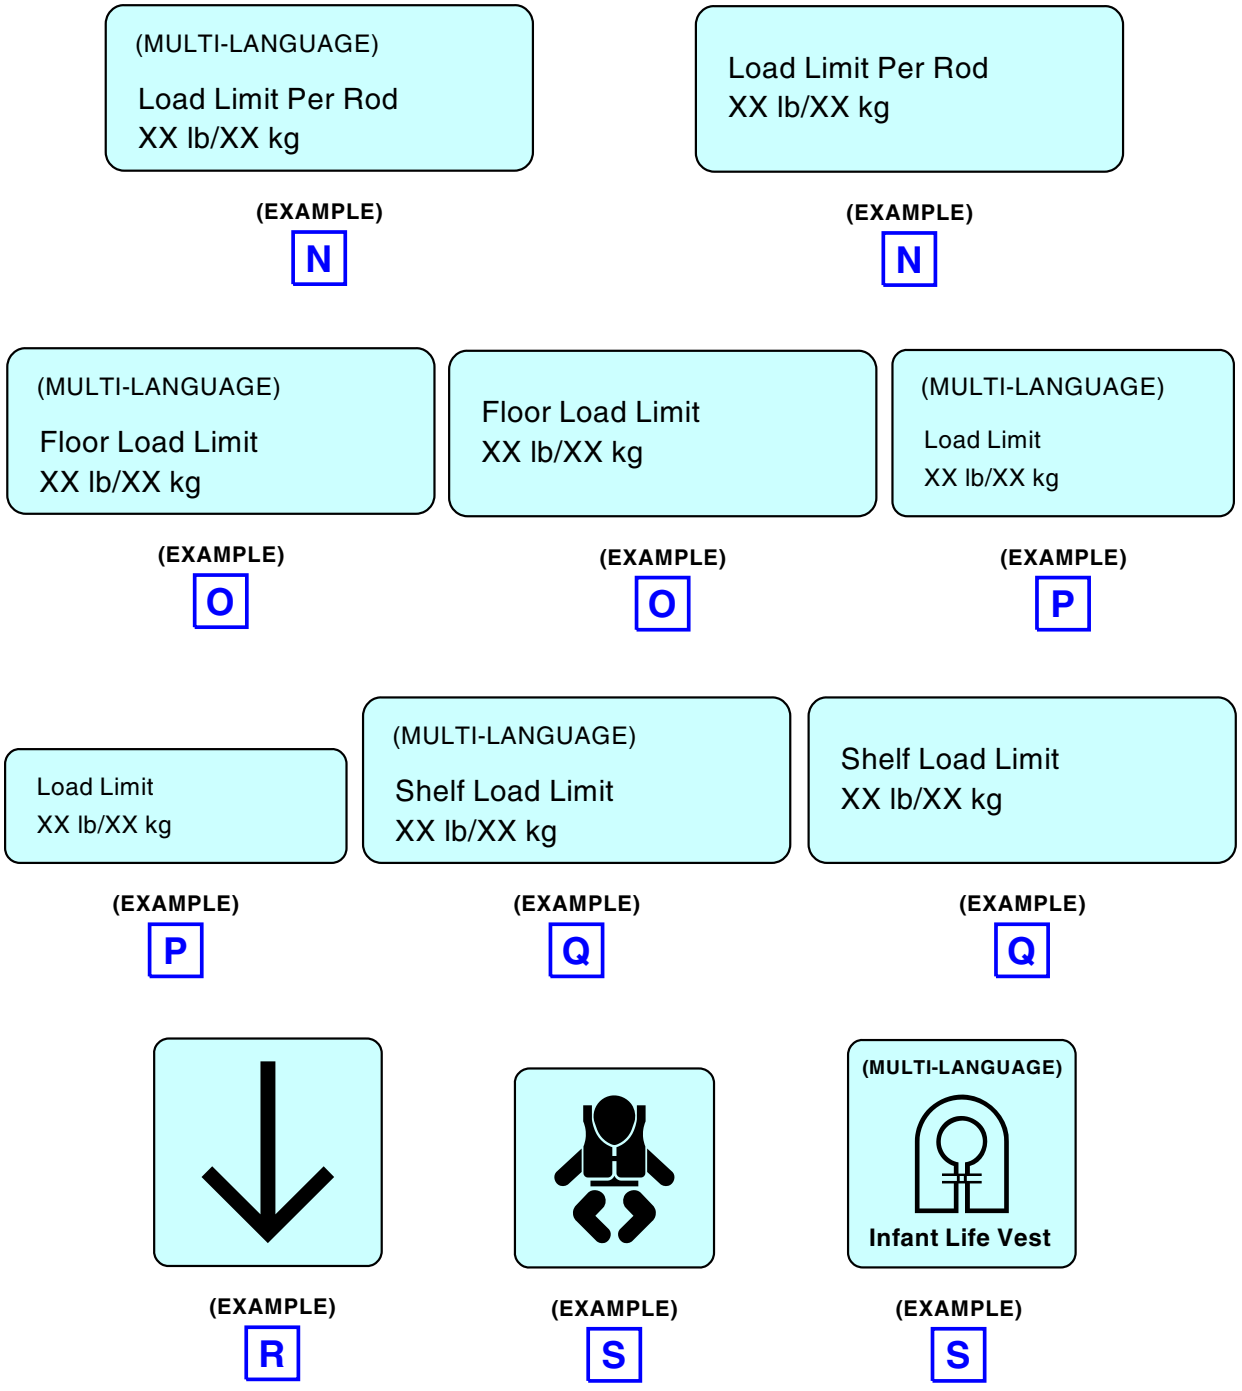


2791613 S0000635534_V2

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 6 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

Video Equipment Only

(EXAMPLE)

T

Video Equipment Only

(EXAMPLE)

T

Video Control Center Compartment Must Not Be Locked During Taxi, Takeoff and Landing

(EXAMPLE)

U

Video Control Center Compartment Must Not Be Locked During Taxi, Takeoff, Flight and Landing

(EXAMPLE)

U

(MULTI-LANGUAGE)

Video Control Center Compartment Must Not Be Locked During Taxi, Takeoff, Flight and Landing

(EXAMPLE)

U



(EXAMPLE)

V

(MULTI-LANGUAGE)

Latch Closed During Taxi, Takeoff, Flight and Landing.

(EXAMPLE)

W

Priority for Wheelchairs and Other Assistive Devices

(EXAMPLE)


X

2796313 S0000638417_V8

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 7 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

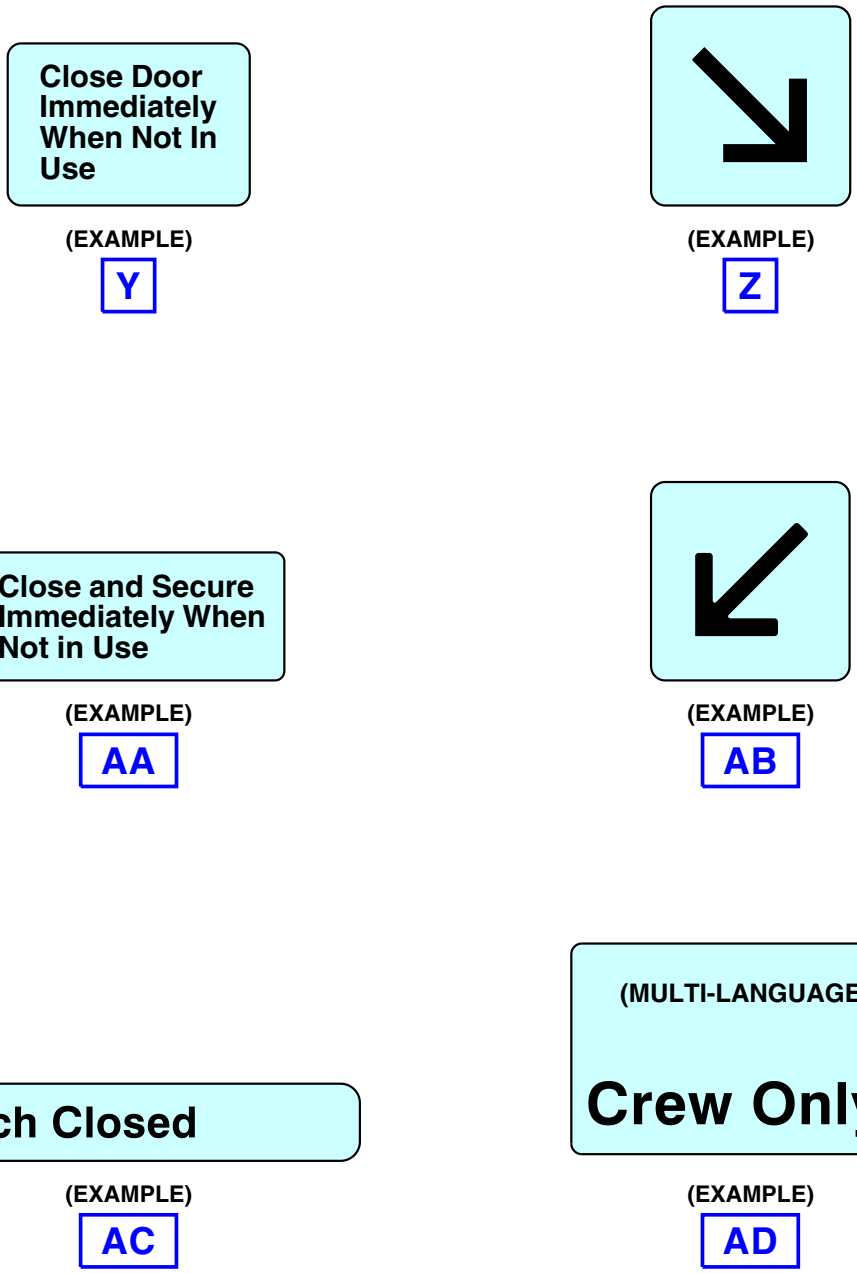


3107159 S0000848540_V1

**Main Compartment Floor-Mounted Stowage Placards**
**Figure 208/11-30-03-990-808 (Sheet 8 of 8)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## OVERHEAD STOWAGE BIN PLACARDS - MAINTENANCE PRACTICES

### 1. General

A. This task shows the placards and markings for the passenger compartment overhead stowage bins.

B. The location of the placards and markings is for an example only.

**TASK 11-30-04-890-801**

### 2. Overhead Stowage Bin - Maintenance Practices

#### A. General

(1) This section shows the load limit placards for the overhead stowage bins.

**Table 201/11-30-04-993-803 Overhead Stowage Bins - Load Limits (Standard Bin, Single Reduced Bins)**

| Bin Length (Inches) | Load Limit | |
|---|---|---|
| | Pounds | Kilograms |
| 1 | 1 | 0.5 |
| 2 | 3 | 1 |
| 3 | 5 | 2 |
| 4 | 6 | 3 |
| 5 | 8 | 3 |
| 6 | 10 | 4 |
| 7 | 12 | 5 |
| 8 | 13 | 6 |
| 9 | 15 | 7 |
| 10 | 17 | 7 |
| 11 | 19 | 8 |
| 12 | 20 | 9 |
| 13 | 22 | 10 |
| 14 | 24 | 11 |
| 15 | 26 | 11 |
| 16 | 27 | 12 |
| 17 | 29 | 13 |
| 18 | 31 | 14 |
| 19 | 33 | 14 |
| 20 | 34 | 15 |
| 21 | 36 | 16 |
| 22 | 38 | 17 |
| 23 | 40 | 18 |
| 24 | 41 | 18 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**Table 201/11-30-04-993-803 Overhead Stowage Bins - Load Limits (Standard Bin, Single Reduced Bins) (Continued)**

| Bin Length (Inches) | Load Limit | |
|---|---|---|
| | Pounds | Kilograms |
| 25 | 43 | 19 |
| 26 | 45 | 20 |
| 27 | 46 | 21 |
| 28 | 48 | 22 |
| 29 | 50 | 22 |
| 30 | 52 | 23 |
| 31 | 53 | 24 |
| 32 | 55 | 25 |
| 33 | 57 | 26 |
| 34 | 59 | 26 |
| 35 | 60 | 27 |
| 36 | 62 | 28 |
| 37 | 64 | 29 |
| 38 | 66 | 29 |
| 39 | 67 | 30 |
| 40 | 69 | 31 |
| 41 | 71 | 32 |
| 42 | 73 | 33 |
| 43 | 74 | 33 |
| 44 | 76 | 34 |
| 45 | 78 | 35 |
| 46 | 80 | 36 |
| 47 | 81 | 37 |
| 48 | 83 | 37 |
| 49 | 85 | 38 |
| 50 | 87 | 39 |
| 51 | 88 | 40 |
| 52 | 89 | 41 |
| 53 | 92 | 41 |
| 54 | 93 | 42 |
| 55 | 95 | 43 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**Table 201/11-30-04-993-803 Overhead Stowage Bins - Load Limits (Standard Bin, Single Reduced Bins) (Continued)**

| Bin Length (Inches) | Load Limit | |
|---|---|---|
| | Pounds | Kilograms |
| 56 | 97 | 44 |
| 57 | 99 | 44 |
| 58 | 100 | 45 |
| 59 | 102 | 46 |
| 60 | 104 | 47 |

**Table 202/11-30-04-993-804 Overhead Stowage Bins - Load Limits (Double Reduced Bins)**

| Bin Length (Inches) | Load Limit | |
|---|---|---|
| | Pounds | Kilograms |
| 1 | 1 | 0.5 |
| 2 | 2 | 1 |
| 3 | 3 | 1 |
| 4 | 4 | 2 |
| 5 | 5 | 2 |
| 6 | 6 | 3 |
| 7 | 7 | 3 |
| 8 | 8 | 4 |
| 9 | 10 | 4 |
| 10 | 11 | 5 |
| 11 | 12 | 5 |
| 12 | 13 | 6 |
| 13 | 14 | 6 |
| 14 | 15 | 7 |
| 15 | 16 | 7 |
| 16 | 17 | 8 |
| 17 | 19 | 8 |
| 18 | 20 | 9 |
| 19 | 21 | 9 |
| 20 | 22 | 10 |
| 21 | 23 | 10 |
| 22 | 24 | 11 |
| 23 | 25 | 11 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**Table 202/11-30-04-993-804 Overhead Stowage Bins - Load Limits (Double Reduced Bins) (Continued)**

| Bin Length (Inches) | Load Limit | |
|---|---|---|
| | Pounds | Kilograms |
| 24 | 26 | 12 |
| 25 | 28 | 12 |
| 26 | 29 | 13 |
| 27 | 30 | 13 |
| 28 | 31 | 14 |
| 29 | 32 | 14 |
| 30 | 33 | 15 |
| 31 | 34 | 15 |
| 32 | 35 | 16 |
| 33 | 36 | 16 |
| 34 | 38 | 17 |
| 35 | 39 | 17 |
| 36 | 40 | 18 |
| 37 | 41 | 18 |
| 38 | 42 | 19 |
| 39 | 43 | 19 |
| 40 | 44 | 20 |
| 41 | 45 | 20 |
| 42 | 47 | 21 |
| 43 | 48 | 21 |
| 44 | 49 | 22 |
| 45 | 50 | 22 |
| 46 | 51 | 23 |
| 47 | 52 | 23 |
| 48 | 53 | 24 |
| 49 | 54 | 24 |
| 50 | 56 | 25 |
| 51 | 57 | 25 |
| 52 | 58 | 26 |
| 53 | 59 | 26 |
| 54 | 60 | 27 |
| 55 | 61 | 27 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details


**Table 202/11-30-04-993-804 Overhead Stowage Bins - Load Limits (Double Reduced Bins) (Continued)**

| Bin Length (Inches) | Load Limit | |
|---|---|---|
| | Pounds | Kilograms |
| 56 | 62 | 28 |
| 57 | 63 | 28 |
| 58 | 64 | 29 |

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

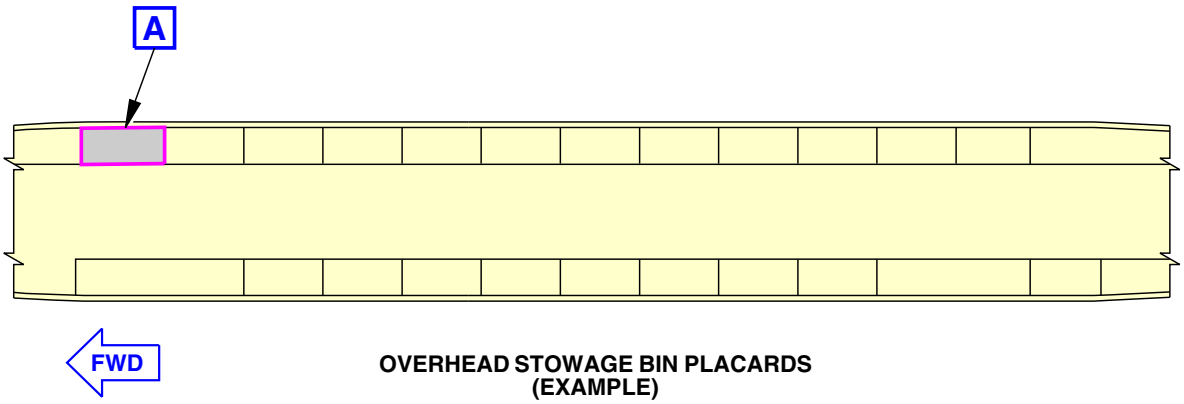


**OVERHEAD STOWAGE BIN PLACARDS (EXAMPLE)**

Latch Closed
Load Limit
XX lb/XX kg

**(EXAMPLE)**

A 1

(MULTI-LANGUAGE) Latch Closed
Load Limit
XX lb/XX kg

**(EXAMPLE)**

A 1

(MULTI-LANGUAGE) (MULTI-LANGUAGE) Latch Closed
Load Limit
XX lb/XX kg

**(EXAMPLE)**

A 1

**NOTE:**

1 SEE TABLE FOR BIN SIZES AND LOAD LIMITS

2483067 S0000582019_V4

**Overhead Stowage Bin Placards**
**Figure 201/11-30-04-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LAVATORIES (FORWARD AND AFT) PLACARDS - MAINTENANCE PRACTICES

### 1. General

A. This task shows the placards and markings for the forward and aft lavatories.

B. The location of the placards and markings is for an example only.

**TASK 11-30-05-890-801**

### 2. Lavatories (Forward and Aft) - Maintenance Practices


#### A. General

(1) This task shows the placards for the forward and aft lavatories, the lavatory front wall, and the forward and aft interior lavatory placards.


**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

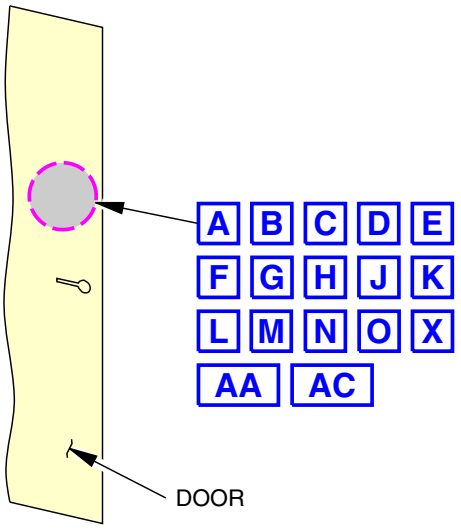


LAVATORY DOOR 1 2
(EXTERNAL VIEW)
(EXAMPLE)

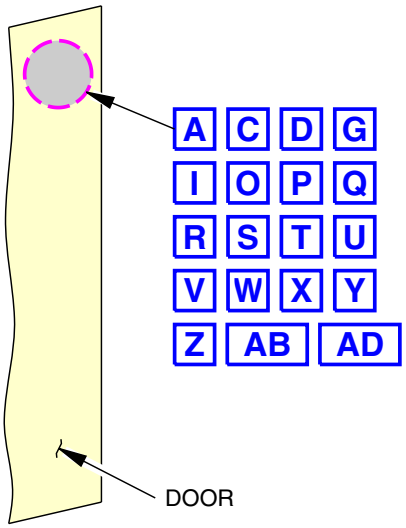


LAVATORY DOOR 1 2
(INTERNAL VIEW)
(EXAMPLE)

Federal Law Provides for a Penalty of Up To $XXXX for Tampering With the Smoke Detector Installed in This Lavatory

(EXAMPLE)

A

(MULTI-LANGUAGE)

Federal Law Provides for a Penalty of Up to $XXXX for Tampering With the Smoke Detector Installed in This Lavatory

(EXAMPLE)

A

Door Must Be Closed and Latched During Taxi, Takeoff and Landing

(EXAMPLE)

B

(MULTI-LANGUAGE)

Door Must Be Closed and Latched During Taxi, Takeoff and Landing

(EXAMPLE)

B

1 IF INSTALLED
2 AS INSTALLED

2485144 S0000582937_V24

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 1 of 10)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details




(EXAMPLE)

C

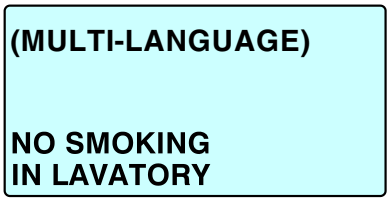


(EXAMPLE)

C

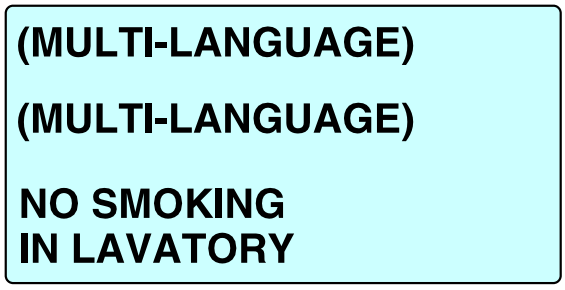


(EXAMPLE)

C





(EXAMPLE)

C




(EXAMPLE)

C

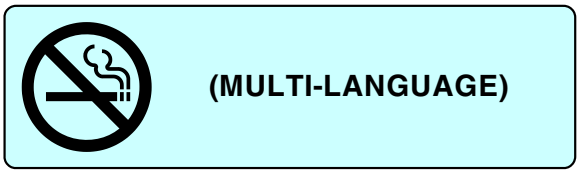


(EXAMPLE)

C

2485145 S0000582938_V8

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 2 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details





(EXAMPLE)

C





(EXAMPLE)

C

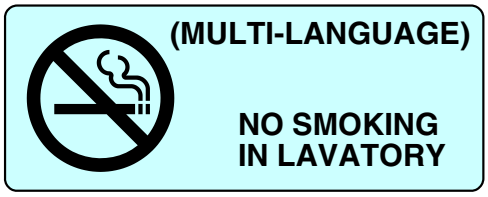


(EXAMPLE)

C

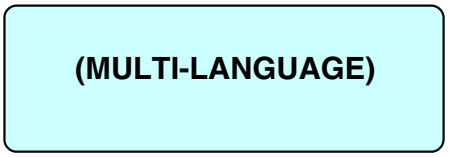


(EXAMPLE)

C *




(EXAMPLE)


C

3064974 S0000827128_V2

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 3 of 10)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

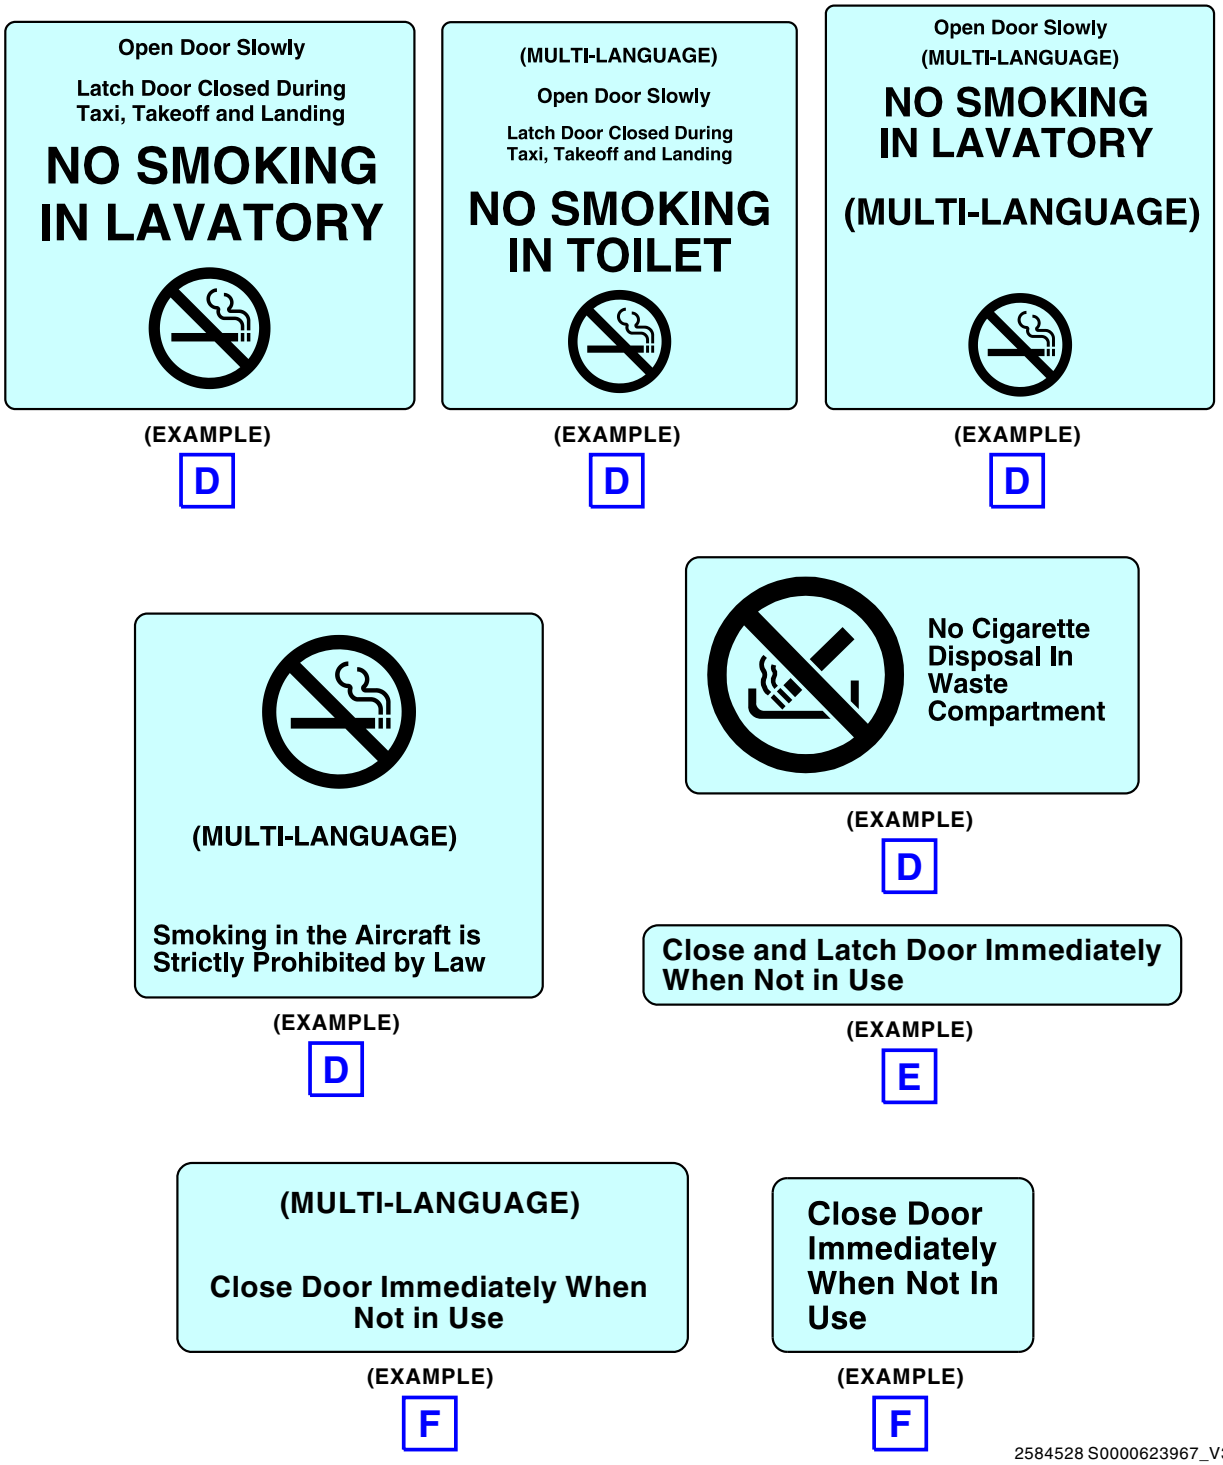


**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 4 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

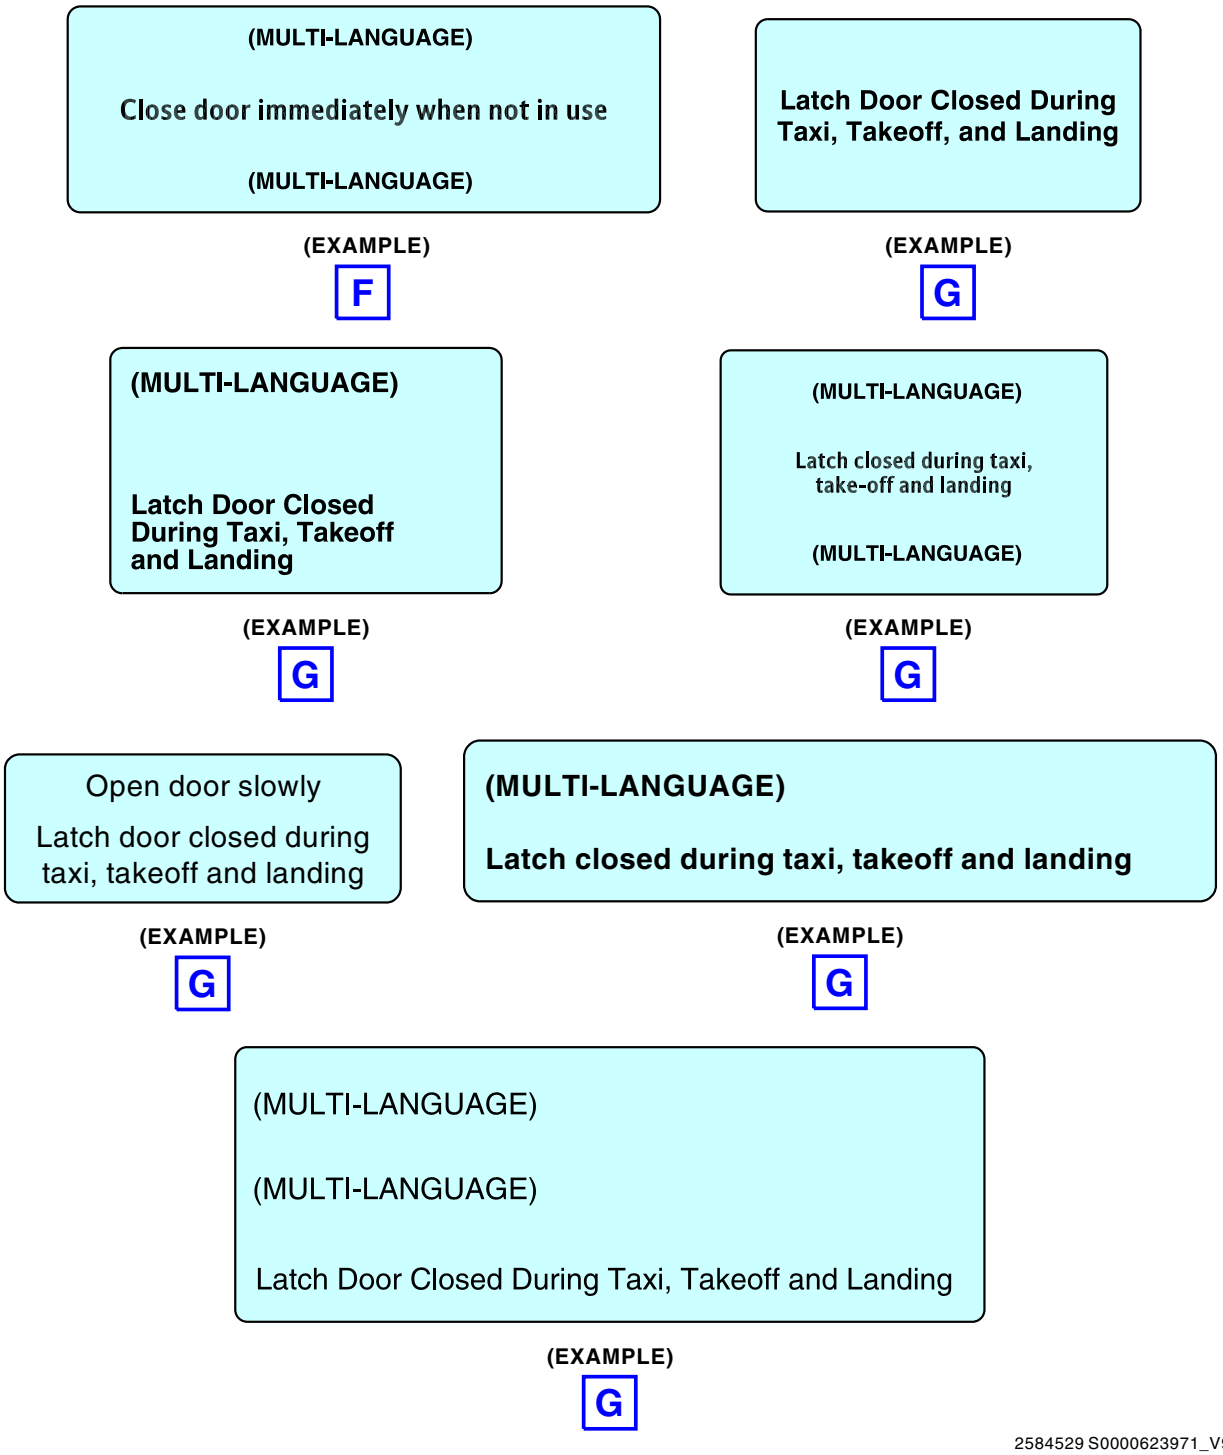



2584529 S0000623971_V9

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 5 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

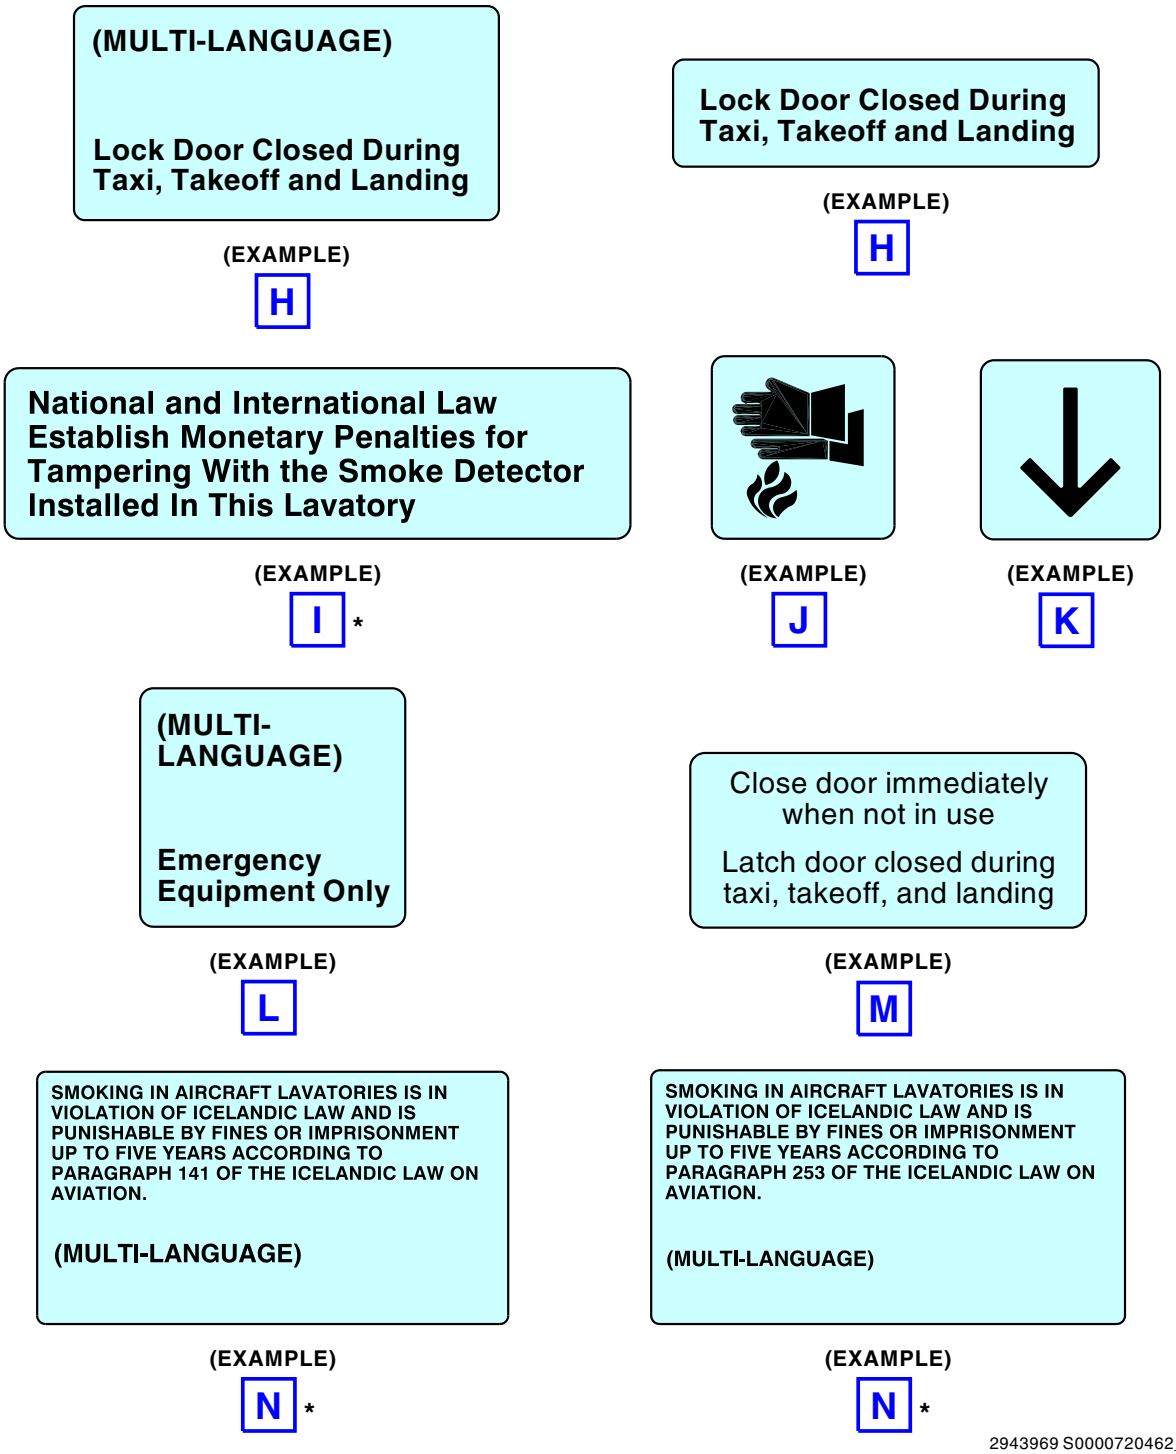



2943969 S0000720462_V7

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 6 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

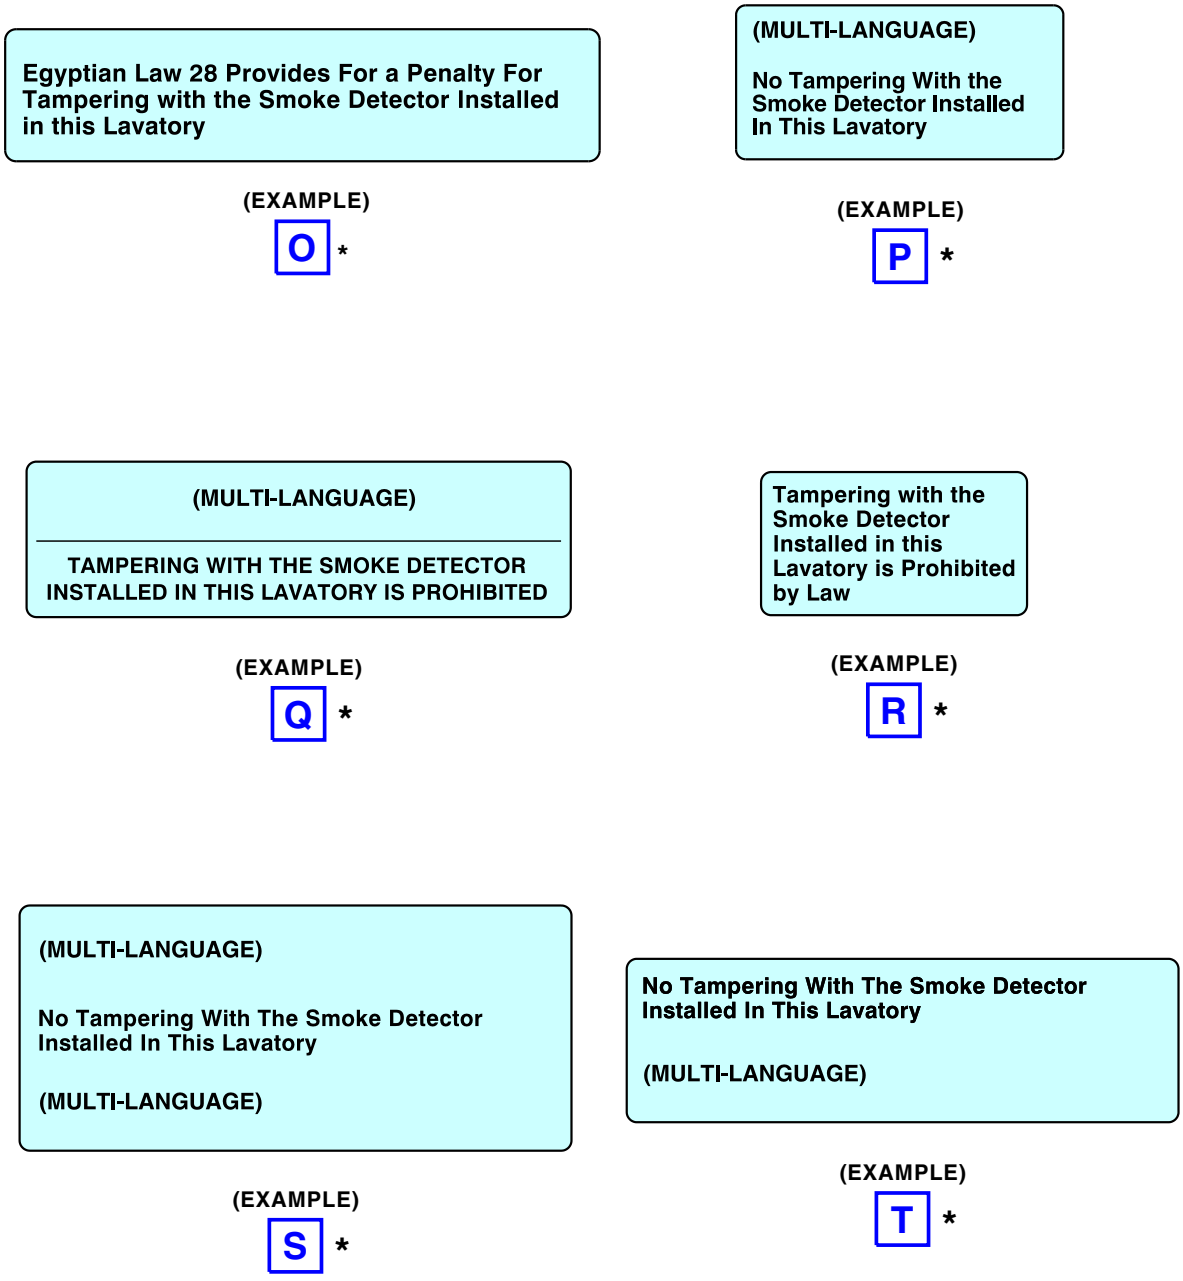


3009660 S0000783203_V4

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 7 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

(MULTI-LANGUAGE)

**Smoking on Board or Interfering With Smoke Detectors Is Illegal and Endangers the Safety Of the Aircraft. Offenders Will Be Prosecuted Under International Law and May Face Prison or a Large Fine.**

(EXAMPLE)

U

(MULTI-LANGUAGE)

**Dominican Regulations Prohibit Tampering With or Deactivating the Smoke Detector Installed in This Lavatory**

(EXAMPLE)

V *

Smoking on-board the aircraft and tampering with the smoke detector are criminal offences punishable by law

(EXAMPLE)


W

3037437 S0000806324_V6

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 8 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

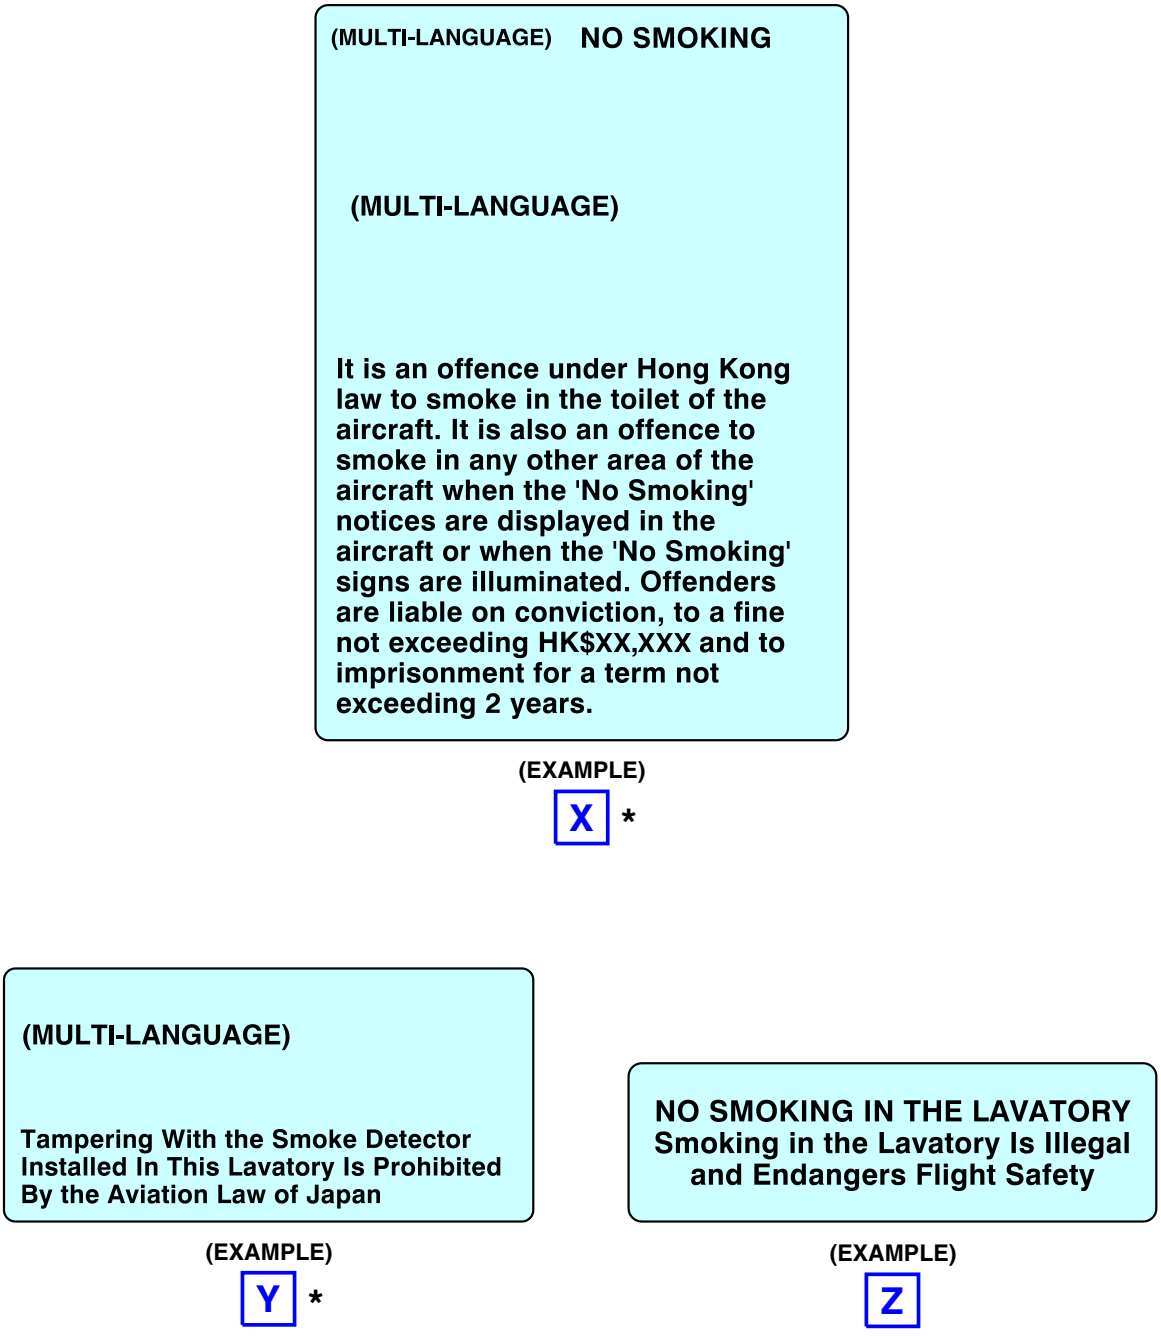


**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 9 of 10)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details





(EXAMPLE)

AA *

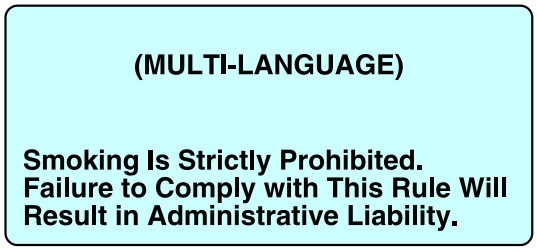



(EXAMPLE)

AB *

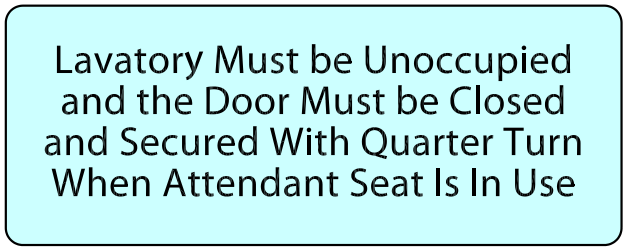


(EXAMPLE)

AC

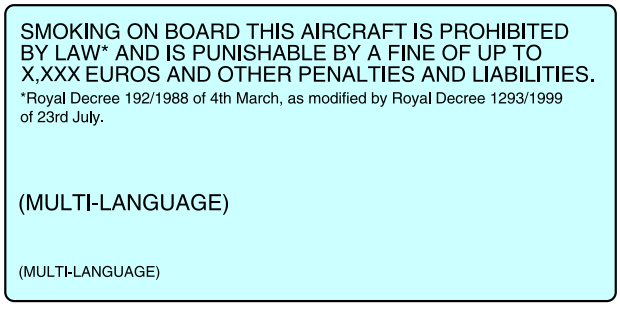


(EXAMPLE)


AD *

3124278 S0000858047_V2

**Lavatory Door (Forward and Aft) Placards**
**Figure 201/11-30-05-990-804 (Sheet 10 of 10)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

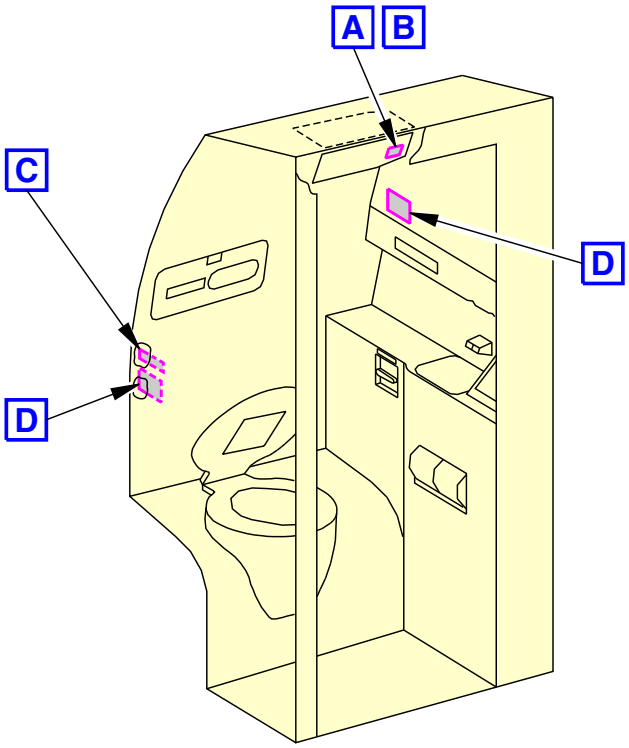


LAVATORY 1 2
(EXAMPLE)

Pull Mask
Down To
Turn On
Oxygen

(EXAMPLE)

A

(MULTI-LANGUAGE) Pull Mask
Down to
Turn on
Oxygen

(EXAMPLE)

A

**(MULTI-LANGUAGE)**

**It is prohibited to tamper or to attempt to tamper with the smoke detector in this lavatory**

**(EXAMPLE)**

B *

1 IF INSTALLED
2 AS INSTALLED

2485146 S0000582939_V6

**Lavatory Interior (Forward and Aft) Placards**
**Figure 202/11-30-05-990-805 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

PRM Wall Must be Stowed and Latched in the Forward Position When Not in Use

(EXAMPLE)

C

(MULTI-LANGUAGE)

PRM Wall Must be Stowed and Latched in the Forward Position When Not in Use

(EXAMPLE)

C

(MULTI-LANGUAGE)

(EXAMPLE)

C *



(MULTI-LANGUAGE)

WARNING

(MULTI-LANGUAGE)

Smoking in the Lavatory and Tampering With a Lavatory Smoke Detector Are Subject to a Fine Up To ¥ 500,000 by the Civil Aeronautics Law of Japan.

(MULTI-LANGUAGE)

(EXAMPLE)


D *

3051072 S0000815726_V2

**Lavatory Interior (Forward and Aft) Placards**
**Figure 202/11-30-05-990-805 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

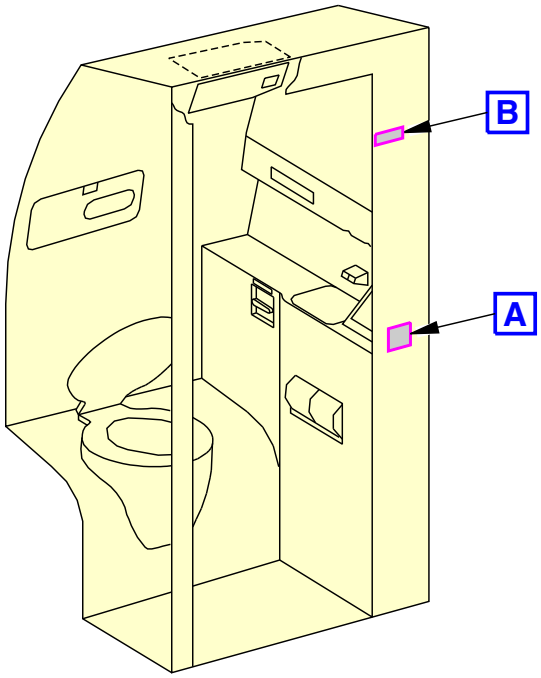


LAVATORY 1 2
(EXAMPLE)



(EXAMPLE)

A

Aisle Between Curtains Not To Be Occupied When Curtains Are Closed and Lavatory Is in Use

(EXAMPLE)

B

1 IF INSTALLED
2 AS INSTALLED

2410767 S00061526300_V3

**Lavatory Front Wall (Forward and Aft) Placards**
**Figure 203/11-30-05-990-806**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ENHANCED SECURITY FLIGHT COMPARTMENT DOOR PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

### 1. General

A. This task shows the placards and markings for the enhanced security flight compartment door.

B. The location of the placards and markings is for an example only.

**TASK 11-30-06-890-801**

### 2. Enhanced Security Flight Compartment Door - Maintenance Practices


#### A. General

(1) This task shows the placards and markings for the enhanced security flight compartment door and the forward left lavatory door.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

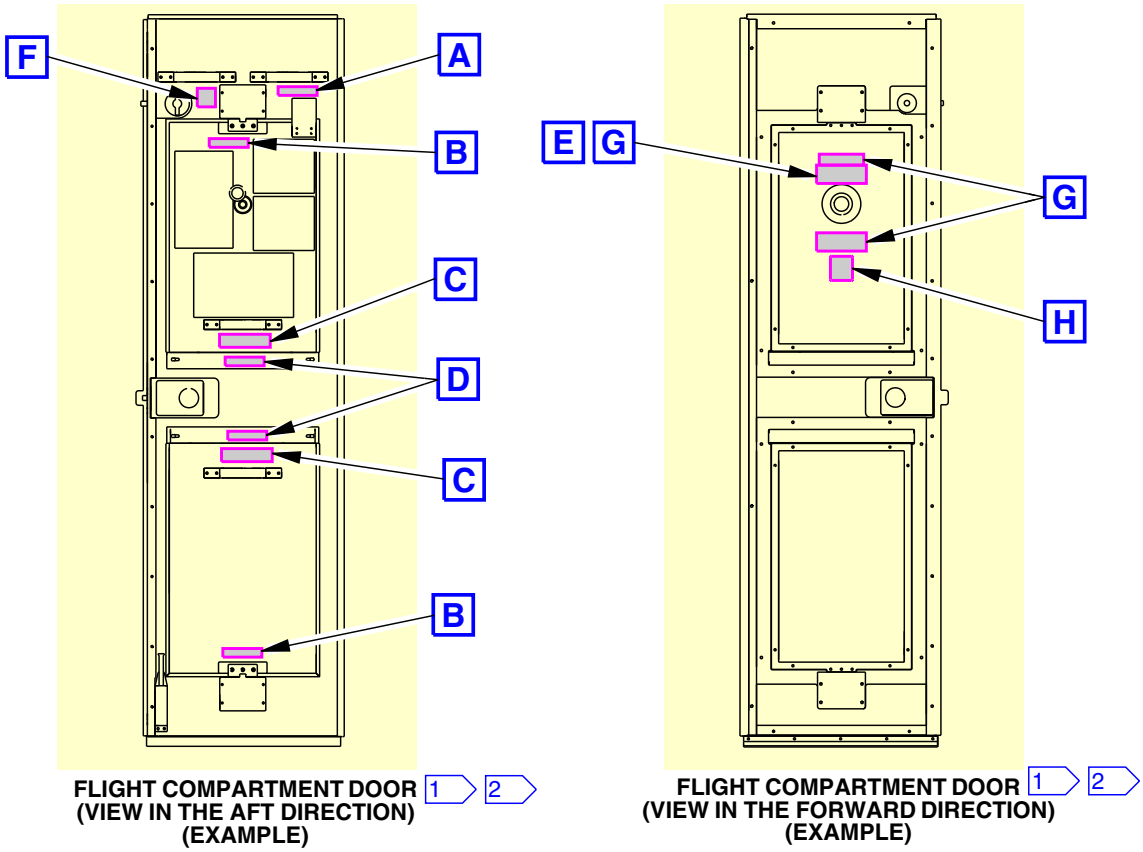


FLIGHT COMPARTMENT DOOR 1 2
(VIEW IN THE AFT DIRECTION)
(EXAMPLE)

FLIGHT COMPARTMENT DOOR 1 2
(VIEW IN THE FORWARD DIRECTION)
(EXAMPLE)

(EXAMPLE)
A

(EXAMPLE)
B

(EXAMPLE)
C


1 IF INSTALLED
2 AS INSTALLED

2561709 S0000611995_V4

**Enhanced Security Flight Compartment Door Placards and Markings**
**Figure 201/11-30-06-990-801 (Sheet 1 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details




(EXAMPLE)

D

Crew Only

(EXAMPLE)

E

Crew Only
(MULTI-LANGUAGE)


(EXAMPLE)

E

(MULTI-LANGUAGE)
Crew only
(MULTI-LANGUAGE)

(EXAMPLE)

E

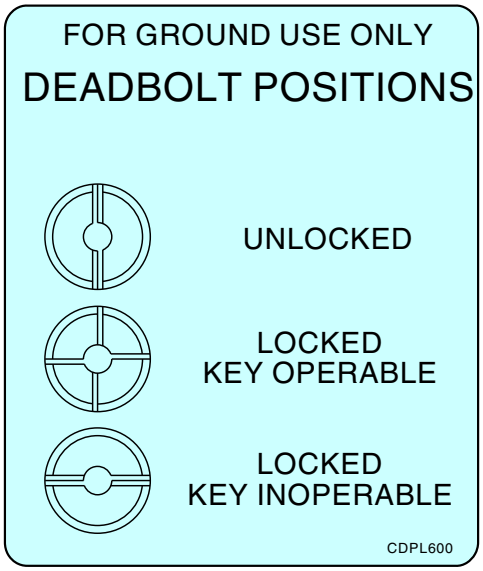


(EXAMPLE)

F

2561711 S0000611996_V5

**Enhanced Security Flight Compartment Door Placards and Markings**
**Figure 201/11-30-06-990-801 (Sheet 2 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(MULTI-LANGUAGE)

FLIGHT DECK DOOR
AUTHORIZED
PERSONNEL ONLY

(EXAMPLE)

G

Flight deck
Authorized personnel only

(EXAMPLE)

G

FLIGHT DECK DOOR

AUTHORIZED
PERSONNEL ONLY

(EXAMPLE)

G

FLIGHT DECK DOOR

AUTHORIZED
PERSONNEL
ONLY

(EXAMPLE)

G

Restricted Area
(MULTI-LANGUAGE)



No Standing
(MULTI-LANGUAGE)

(EXAMPLE)


H

3038491 S0000807006_V2

**Enhanced Security Flight Compartment Door Placards and Markings**
**Figure 201/11-30-06-990-801 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

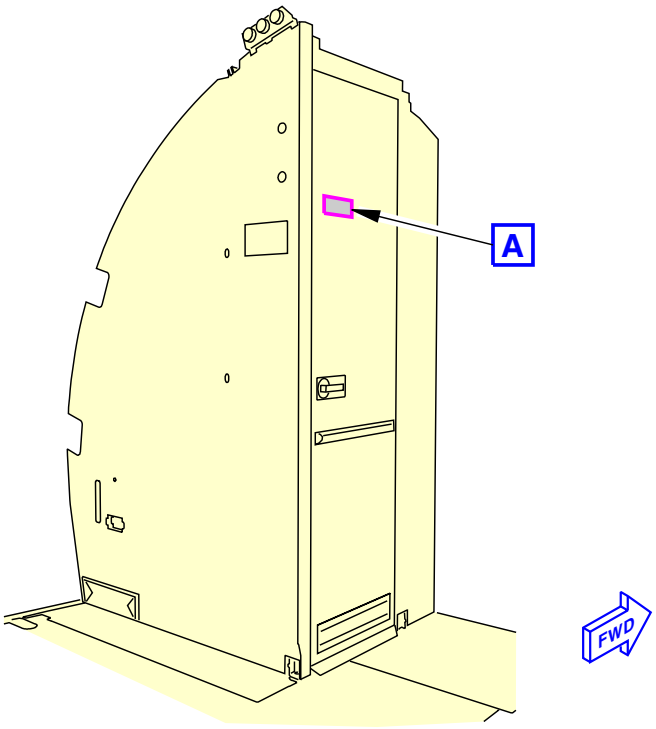


**(FORWARD LEFT)
LAVATORY A**

Close Door Immediately When Not in Use

**(EXAMPLE)**

A 1

(MULTI-LANGUAGE)

Close Door Immediately When Not in Use

**(EXAMPLE)**

A 1

1 PLACARD REQUIRED ON AIRPLANES WITH ENHANCED SECURITY FLIGHT COMPARTMENT DOOR WITH SINGLE PANEL DOOR ON FORWARD LEFT LAVATORY.

2479686 S0000582138_V3

**Lavatory Door Placard for Enhanced Security Flight Compartment Door
Figure 202/11-30-06-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CARGO COMPARTMENT PLACARDS AND MARKINGS - MAINTENANCE PRACTICES

1. General
   A. This task shows the placards and markings for the cargo compartment.
   B. The location of the placards and markings is for an example only.


**TASK 11-37-00-890-801**

2. Cargo Compartment Placards and Markings

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

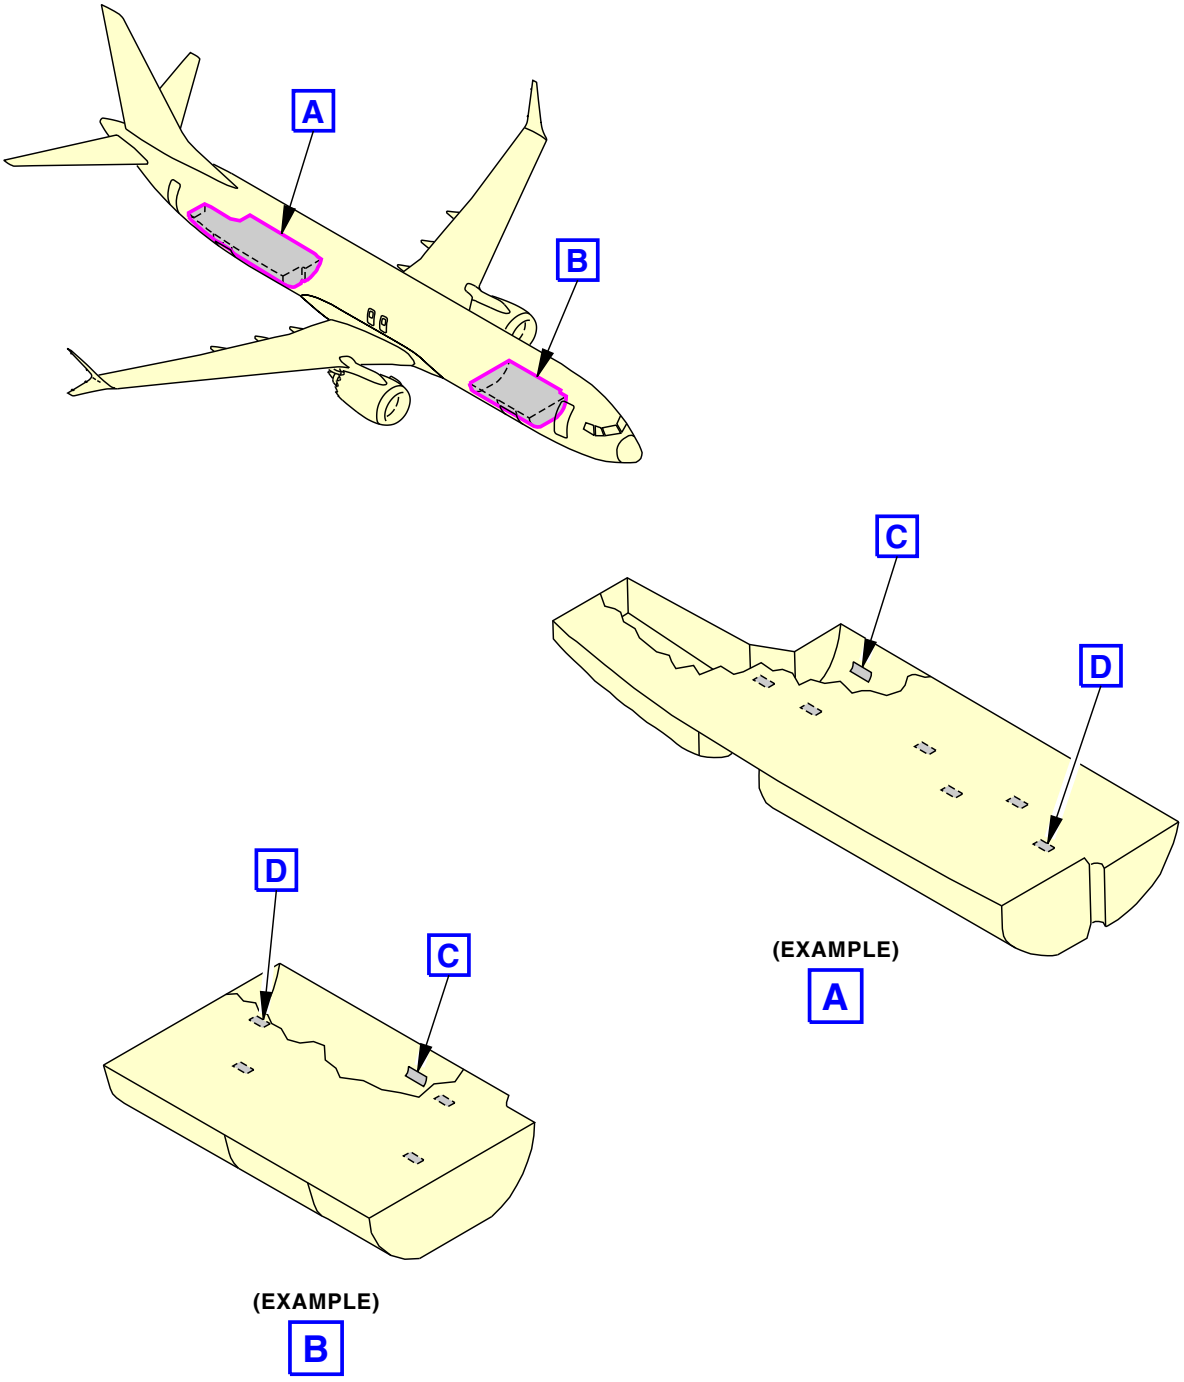



2410770 S00061526310_V1

**Cargo Compartment Placards and Markings**
**Figure 201/11-37-00-990-801 (Sheet 1 of 2)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

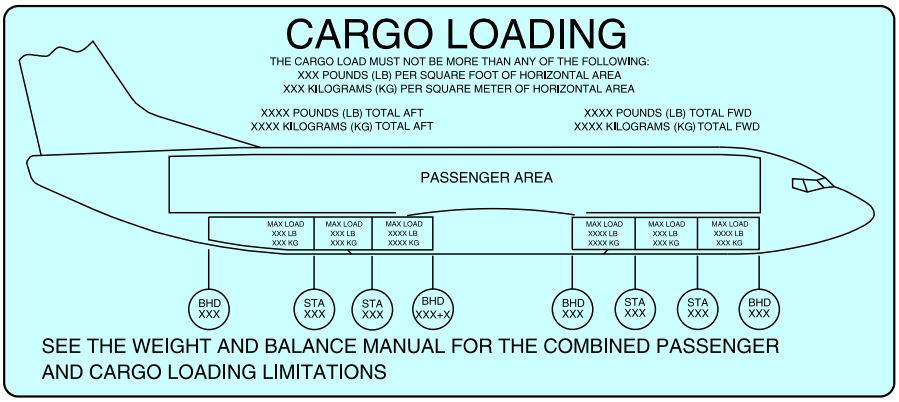


**(EXAMPLE)**

C

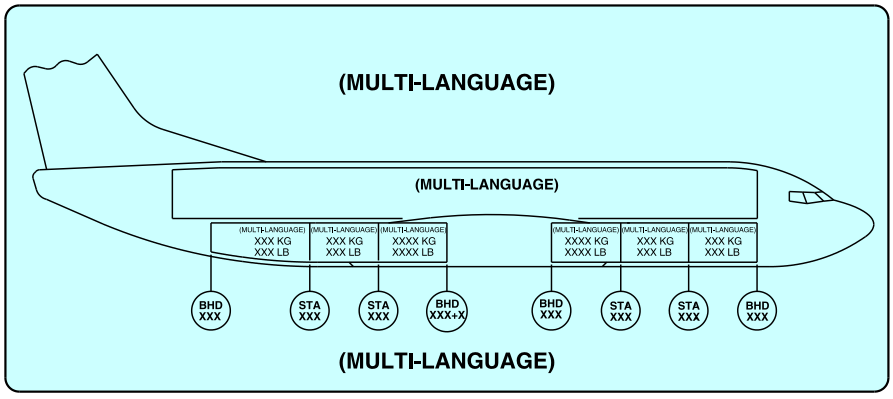


**(EXAMPLE)**

C *

**CAUTION**

Smoke detector-do not block.
Blockage will prevent fire detection.

**(EXAMPLE)**

D

**(MULTI-LANGUAGE)**

**(MULTI-LANGUAGE)**

**(EXAMPLE)**

D *

2410771 S00061526311_V4

**Cargo Compartment Placards and Markings**
**Figure 201/11-37-00-990-801 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details