Wing Tank Fuel Filter (Mod 6/1398) – Maintenance Practices

1. Servicing

   A. Service Fuel Filter

      Refer to Figure 1 for details.

      1) Ensure wing tank is empty; drain as necessary.

      2) Remove wing tip cover assembly.

      3) Unscrew unions and remove tube between pump and filter assembly.

      4) Break lockwire at filter housing and unscrew to remove outer part of housing complete with thread reducer.

      5) Remove filter element and examine for damage.

      6) Clean filter by back-flushing with clean solvent and drying with clean compressed air.

         Note Ultrasonic cleaning equipment may be used, if available, to clean filter element.

      7) Examine O-ring on housing for serviceability and renew as necessary with new O-ring P/N 50081151000 (Aircraft Appliances and Equipment Ltd.).

      8) Ensure that spring is positioned in inner part of housing and install clean filter element.


      9) Screw on outer part of housing, complete with reducer, and wirelock.

      10) Install tube between pump and filter assembly.

      11) Refuel wing tank and select wing tank fuel pumps to ENGINE.

      12) Check for leaks.

      13) Install wing tip.

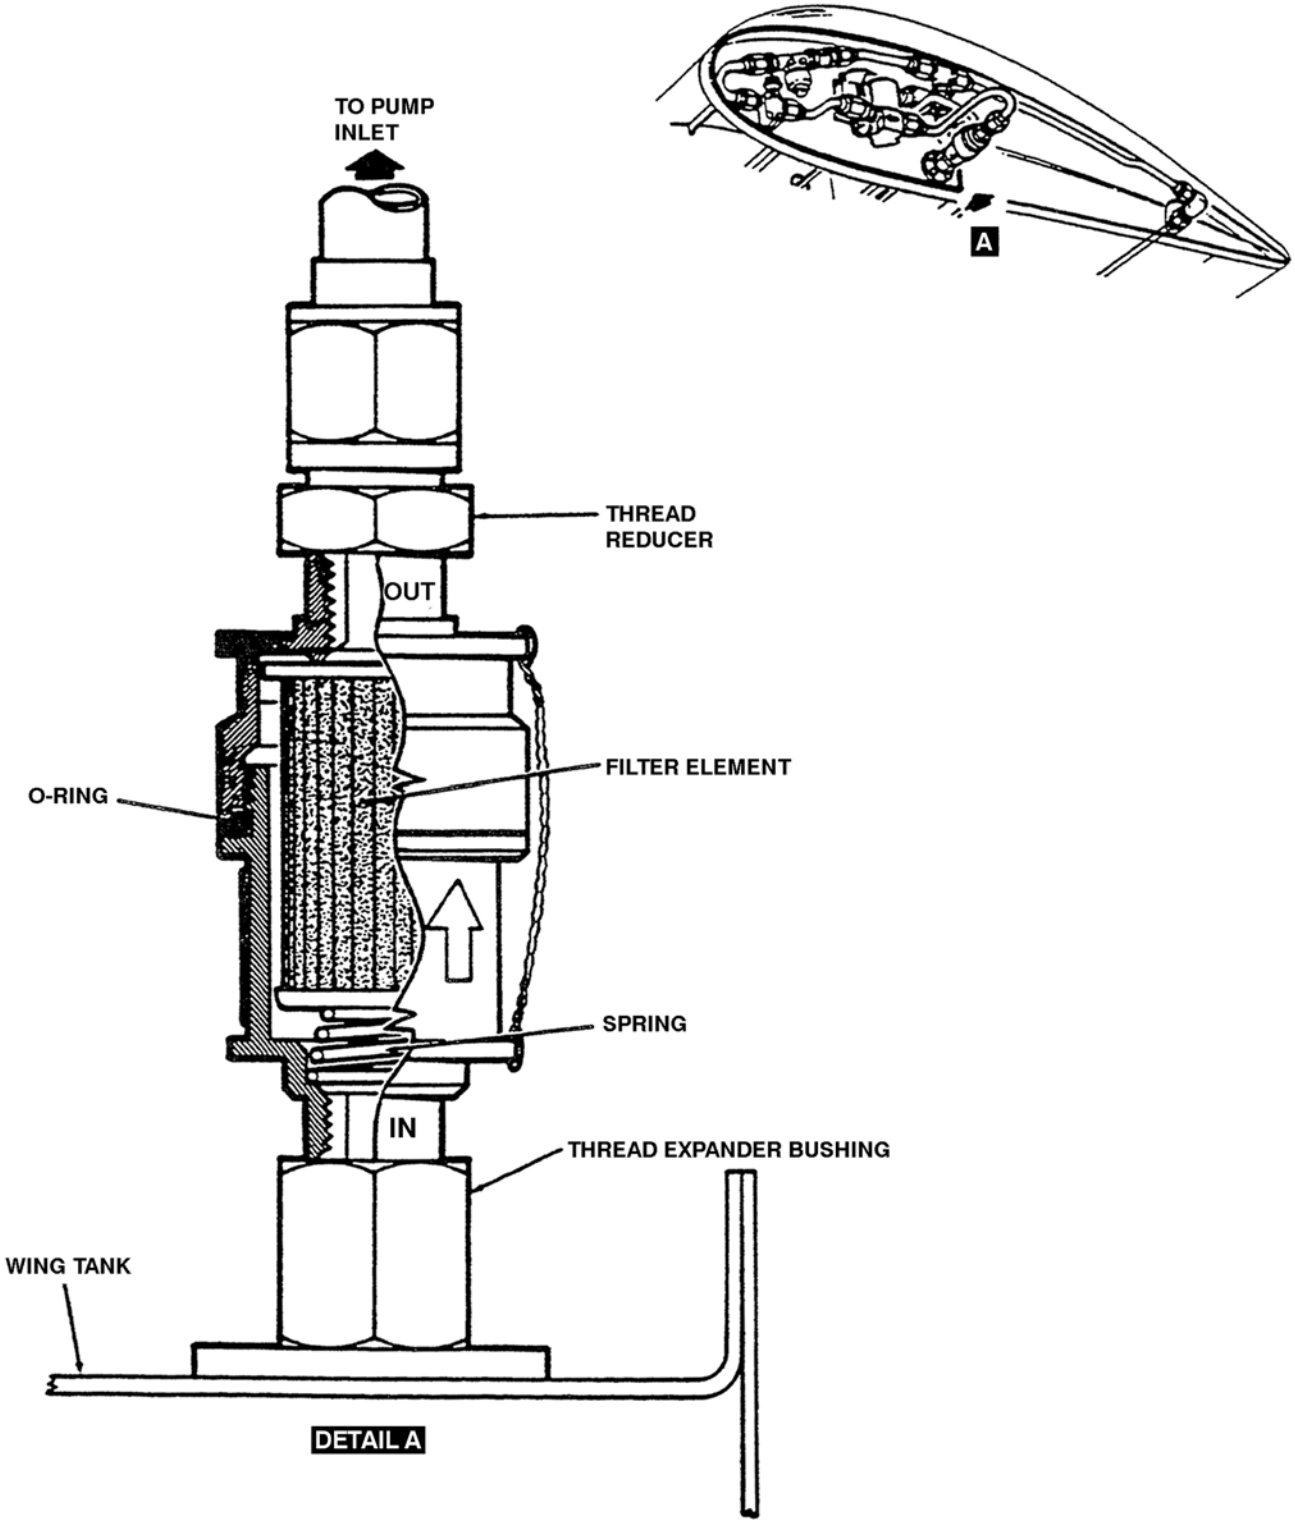

Wing Tank Fuel Filter
Figure 1