PSM1-63-2W

DHC-6 TWIN OTTER
(SERIES 300)

WIRING MANUAL

Copyright © 2006 by Viking Air Limited.
All rights reserved. No part of this work may be reproduced or copied in any form or by any means without written permission from Viking Air Limited.

VIKING

Revision 14 – Oct. 13, 2005

The information, technical data and designs disclosed in this document (the “Information”) are either the exclusive property of Viking Air Limited or are subject to proprietary rights of others. The Information is not to be used for design or manufacture or disclosed to others without the express prior written consent of Viking Air Limited. The holder of this document, by its retention and use, agrees to hold the information in confidence. These restrictions do not apply to persons having proprietary rights in the Information, to the extent of those rights.

January 31, 2006

Viking Air Limited
7757 8th St NE
Calgary, AB
Canada T2E 8A2

Telephone: (587) 430-0572
Fax: (403) 295-8888
USA & Canada Toll Free:
1-(800) 663-8444

Email: csps-tp@vikingair.com

October 7th, 2022

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TRs) W25, W26 and W27, dated October 6, 2022

1 Insert the attached Temporary Revisions (TRs) W25, W26 and W27 into PSM 1-63-2W, as directed in the placement instructions on the cover page of each TR.

Please Note: Temporary Revision W25 Supersedes Temporary Revision W23.
Temporary Revision W26 Supersedes Temporary Revision W15.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
7757 8th St NE
Calgary, AB
Canada T2E 8A2

Telephone: (587) 430-0572
Fax: (403) 295-8888
USA & Canada Toll Free:
1-(800) 663-8444

Email: csps-tp@vikingair.com

August 13th, 2021

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TRs) W23 and W24, dated August 13, 2021.

1 Insert the attached Temporary Revisions (TRs) W23 and W24 into PSM 1-63-2W, as directed in the placement instructions on the cover pages of each TR.

Please Note: Temporary Revision W23 Supersedes Temporary Revision W20.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
7757 8th St NE
Calgary, AB
Canada T2E 8A2

Telephone: (587) 430-0572
Fax: (403) 295-8888
USA & Canada Toll Free:
1-(800) 663-8444

Email: csps-tp@vikingair.com

February 1st, 2021

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revision (TR) W22, dated February 1, 2021.

1 Insert the attached Temporary Revision (TR) W22 into PSM 1-63-2W, as directed in the placement instructions on the TR cover page.

Please Note: Temporary Revision W22 Supersedes Temporary Revision W10.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: csps-tp@vikingair.com

May 12th, 2020

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TRs) W20 & W21, dated May 12, 2020.

1 Insert TRs W20 and W21 into PSM 1-63-2W, as directed in the placement instructions on the cover pages of each TR.

Please Note: Temporary Revision W20 Supersedes Temporary Revision W17.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

March 8th, 2019

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revision (TR) W19, dated March 8, 2019.

1 Insert TR W19 into PSM1-63-2W, as directed in the placement instructions on the cover page.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

July 12th, 2018

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revision (TR) W18, dated July 12, 2018.

1 Insert TR W18 into PSM1-63-2W, as directed in the placement instructions on the cover page.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

June 12th, 2017

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TR) W17, dated June 12, 2017.

1 Insert TR W17 into PSM1-63-2W, as directed in the placement instructions on the cover page.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

May 5th, 2017

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TRs) W15 & W16, dated May 5, 2017.

1 Insert TRs W15 & W16 into PSM1-63-2W, as directed in the placement instructions on the cover page of each TR.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

December 14th, 2016

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revisions (TRs) W11, W12, W13 & W14, dated December 14, 2016.

1 Insert the attached Temporary Revisions into PSM1-63-2W, as directed in the placement instructions on the cover page of each TR.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

Viking Air Limited
1959 de Havilland Way
Sidney, BC

Telephone: (250) 656-7227
Fax: (250) 656-0673
USA & Canada Toll Free:
1-(800) 663-8444

Email: technical.publications
@vikingair.com

March 4th, 2016

To: Distribution

Subject: PSM 1-63-2W, DHC-6 Series 300 – Wiring Diagrams Manual

Incorporate Temporary Revision (TR) W10, dated March 4, 2016.

1 Insert the attached Temporary Revision into PSM1-63-2W, as directed in the placement instructions on the cover page.

2 Update the Temporary Revision Index at the front of the manual.

Note: We recommend that this transmittal letter be kept for record purposes and inserted at the front of the manual.

PSM1-63-2W

DHC-6 WIRING DIAGRAM MANUAL (SERIES 300)

RECORD OF REVISIONS

Retain this record in the front of the manual. On receipt of revisions, insert revised pages in the manual and enter date inserted and initials against the appropriate Revision Number and Date.

Rev. No.	Revision Date	Insertion Date	By	Rev. No.	Revision Date	Insertion Date	By
12	OCT 31/02						
13	FEB 25/05						
14	OCT 13/05	12/16/2009	ATP/MT				

RECORD OF REVISIONS

RECORD OF REVISIONS (CON'T)

Rev. No.	Revision Date	Insertion Date	By	Rev. No.	Revision Date	Insertion Date	By

RECORD OF REVISIONS

PSM 1-63-2W

DHC-6 TWIN OTTER SERIES 300

TEMPORARY REVISIONS INDEX

Retain this index in the front of the manual. When Temporary Revisions are issued or cancelled, enter the relevant information in the columns below.

T.R. No.	Date	Date Removed	Subject Page No.	T.R. No.	Date Inserted	Date Removed	Subject Page No.
W1	Incorporated		30-10-00 Page 1	W16	MAY 11, 2017		21-56-00 after 21-55-00
W2	Incorporated		61-22-00 Page 2	W17	JUN 14, 2017	MAY 13, 2020	Equipment List after page 6
W3	Incorporated		61-24-00 Page 1	W18	JUL 13, 2018		61-22-03 before page 1
W4	Superseded by W5		74-00-00 Page 1	W19	MAR 11, 2019		Equipment List after page 2
W5	Incorporated		74-00-00 Page 1	W20	MAY 13, 2020	AUG 16, 2021	Equipment List after page 6
W6	Incorporated		61-24-01 Page2	W21	MAY 13, 2020		Equipment List after page 12
W7	Superseded by W8		74-00-00 Page 2	W22	FEB 3, 2021		28-20-00 before page 1
W8	Incorporated		74-00-00 Page 2	W23	AUG 16, 2021	OCT 13, 2022	Equipment List after page 6
W9	Incorporated		24-30-03 Page 2	W24	AUG 16, 2021		80-10-00 before page 1
W10	4-Mar-2016	FEB 3, 2021	28-20-00 page 1	W25	OCT 13, 2022		Equipment List after page 6
W11	DEC 14, 2016		Equipment List after page 4	W26	OCT 13, 2022		Equipment List before page 13
W12	DEC 14, 2016		33-40-00 before page 1	W27	OCT 13, 2022		33-20-00 before page 1
W13	DEC 14, 2016		33-40-00 after page 1				
W14	DEC 14, 2016		33-40-00 before page 2				
W15	MAY 11, 2017	OCT 13, 2022	Equipment List after page 12				

TEMPORARY REVISION INDEX

TEMPORARY REVISION INDEX

T.R. No.	Date	Date Removed	Subject Page No.	T.R. No.	Date Inserted	Date Removed	Subject Page No.

TEMPORARY REVISION INDEX

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF CHAPTERS

The following is a list of chapters contained in this manual:

Chapter Number	Chapter Title	Latest Effective Revision Date
21	Air Conditioning	May 7/82
22	Auto Flight	Oct 18/73
23	Communications	Mar 10/76
24	Electrical Power	Oct 31/02
25	Furnishings	May 7/82
26	Fire Protection	Oct 18/73
27	Flight Controls	Mar 10/76
28	Fuel	May 7/82
29	Hydraulic Power	Jun 16/80
30	Ice and Rain Protection	Apr 22/83
32	Landing Gear	Jul 15/69
33	Lights	Feb 28/05
34	Navigation	May 7/82
36	Pneumatic	Mar 1/69
52	Doors	Jun 8/71
61	Propellers	Feb 28/05
71	Power Plant	Jul 15/69
73	Engine Fuel and Control	Mar 10/76
74	Ignition	Feb 28/05
77	Engine Indicating	Oct 18/73
79	Oil	Jun 8/71
80	Starting	Jun 16/80

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

INTRODUCTION

1. General

The wiring diagram manual is in general conformance with ATA100, and consists of an electrical and electronic symbols chart, equipment lists and interconnecting wiring diagrams.

Wiring diagrams are provided for all electrical systems in the aircraft including customer option systems. Also, wiring diagrams of three electronic systems basic to the aircraft are provided as follows: Audio, Gyro Compass and Autopilot Systems.

A. Circuit and Wire Identification Code

Circuit wiring is identified by a letter-figure code stamped at intervals throughout the length of each wire, for example E251C20. The first letter E, identifies the circuit function (refer to list); the number 251, identifies all wires in one section of the circuit; the next letter C identifies the wire segment or branch (at every junction, which may be a terminal board or connector, the wire segment letter changes to the next letter in the alphabet); the number 20 denotes the AN (or MS) size of the wire. The suffix letter N is used with the wire identification code to denote wires which complete a ground circuit. The code is prefixed by a number to identify duplicated systems, e.g. left- and right-hand systems (in radio, identical systems, for example No. 1 ADF and No. 2 ADF). The circuit function code letters are as follows:

C - Flight control circuits
D - Voltmeter and ammeter circuits
E - Engine and fuel circuits
F - Flight instrument circuits
H - Heating system circuits
I - (Not used)
K - Propeller and deflector circuits
L - Lighting circuits
M - Windshield wiper and washer circuits
P - DC power supply, starting and ignition circuits
Q - Pressure circuits (fuel and oil)
V - AC power supply circuits
W - Emergency circuits
RN - VOR/GS
RM - MB
VAN - DME
F - COMP
C - AUTOPILOT
RZ - AUDIO
RC - VHF, HF
RD - ADF

B. Symbols Chart

The symbol chart gives all electrical and electronic symbols used in the manual.

2. Cable and Wire Specifications

Cables and Wires used in the aircraft are to the following specifications:

Wire, shielded (general use)	MIL-C-7078
Wire, unshielded (general use)	M22759/34
Cable, Coaxial (antenna leads)	MIL-C-17C
Cable, Coaxial (fuel quantity system)	SUPRENANT X12109
Cable, (fuel quantity system)	SUPRENANT SA-KF-728A
Wire, thermocouple (Copper/Contantan)	MIL-W-5908 Type I, Class A
Wire, thermocouple (Chromel/Alumel))	MIL-W-5846 Type II, Class A
Wire, high temperature (hook up)	MIL-W16878
Wire, aluminum (general use)	MIL-W-7072
Wire, fire resistant (engine fire detection)	MIL-W-25038
Wire, fluorocarbon insulated (engine use)	MIL-W-22759

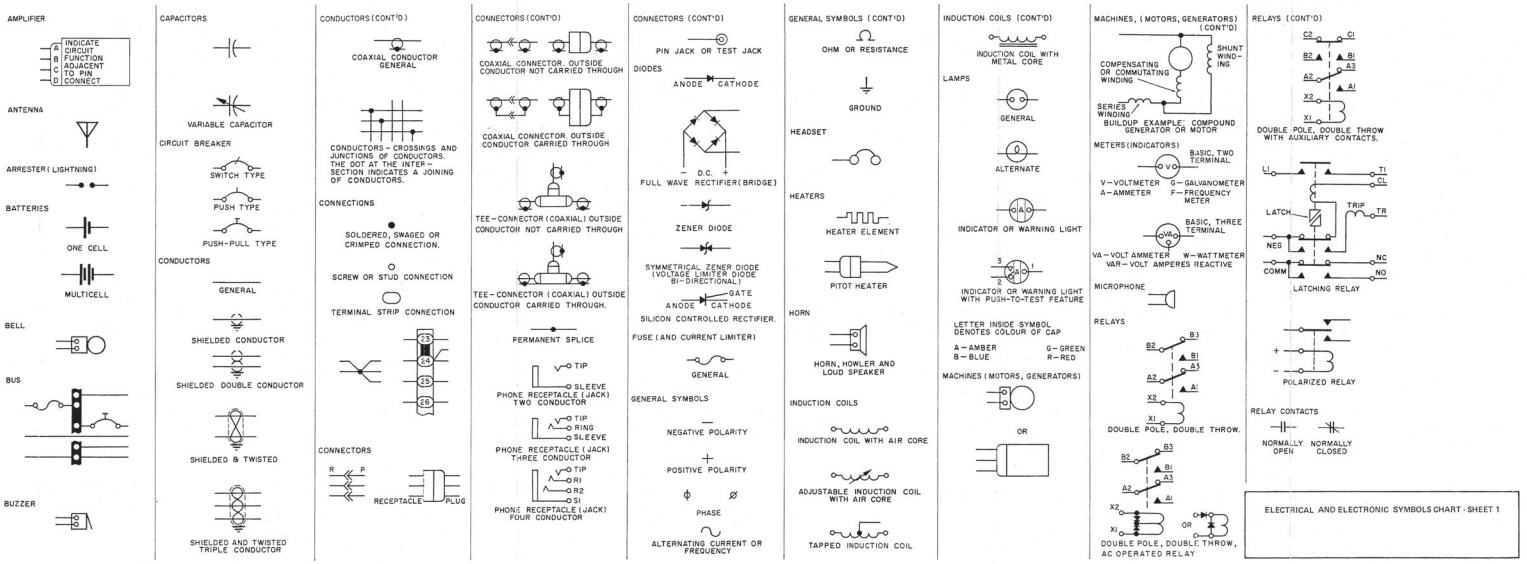

ELECTRICAL AND ELECTRONIC SYMBOLS CHART - SHEET 1

RESISTORS



SWITCHES

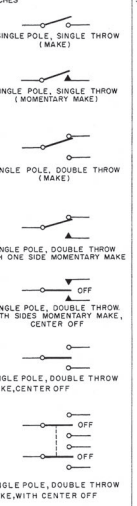

SWITCHES (CONT'D)

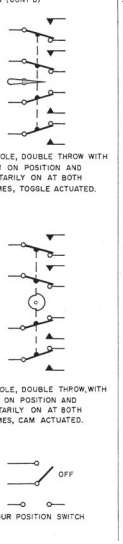

SWITCHES (CONT'D)

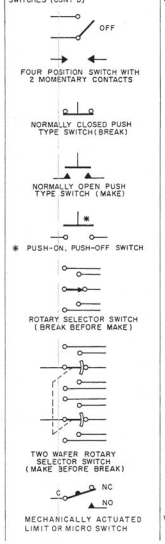

SWITCHES (CONT'D)

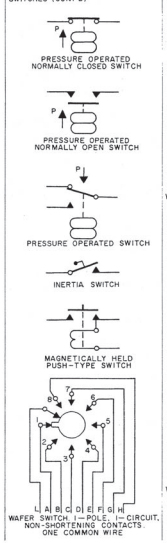

SWITCHES (CONT'D)

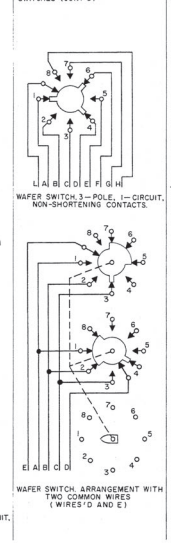

SYNCHRO

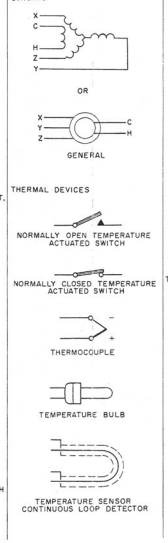

THERMAL DEVICES (CONT'D)

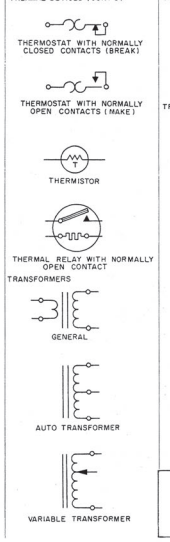

TRANSFORMERS (CONT'D)

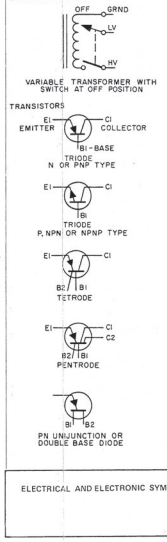

ELECTRICAL AND ELECTRONIC SYMBOLS CHART - SHEET 2

RESISTOR COLOR CODE

EIA COLOR CODE FOR FIXED COMPOSITION RESISTORS

MIL COLOR CODE FOR FIXED COMPOSITION RESISTORS

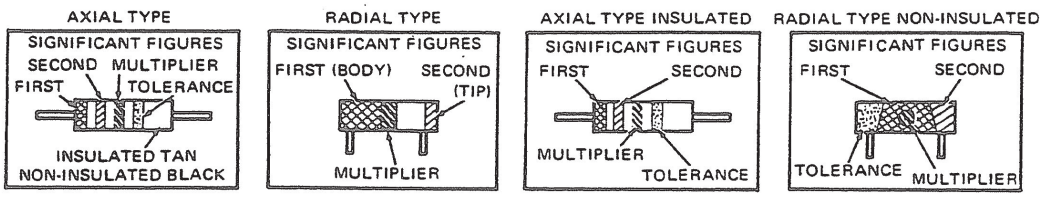

CAPACITOR COLOR CODE

EIA 3-DOT COLOR CODE FOR MICA-DIELECTRIC CAPACITORS

MIL 6-DOT COLOR CODE PAPER-DIELECTRIC CAPACITORS

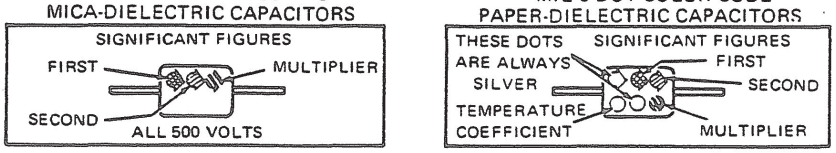

EIA 6-DOT COLOR CODE FOR MICA-DIELECTRIC CAPACITORS

MIL 6-DOT COLOR CODE FOR MICA-DIELECTRIC CAPACITORS

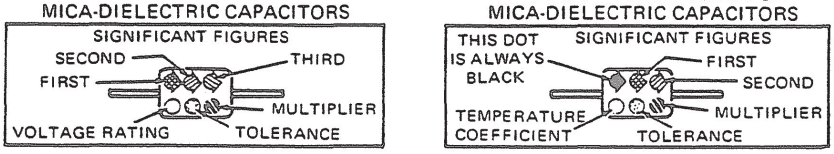

EIA COLOR CODE FOR TUBULAR CERAMIC-DIELECTRIC CAPACITORS

MIL COLOR CODE FOR FIXED CERAMIC-DIELECTRIC CAPACITORS

RADIAL TYPE NON-INSULATED

AXIAL TYPE INSULATED

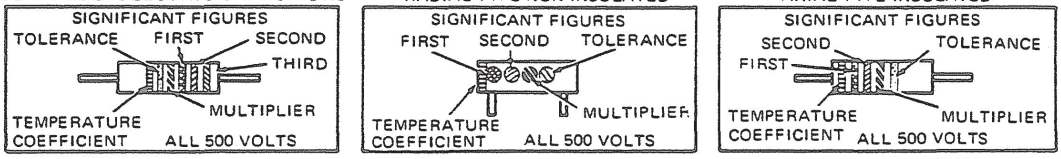

RESISTORS (OHMS)				CAPACITORS (MICROMICROFARADS)				
TOLERANCE	MULTIPLIER	SIGNIFICANT FIGURE	COLOR	MULTIPLIER			VOLTAGE RATING	TEMPERATURE COEFFICIENT
				EIA MICA AND CERAMIC-DIELECTRIC	MIL MICA AND PAPER-DIELECTRIC	MIL CERAMIC-DIELECTRIC		
	1	0	BLACK	1	1	1		A
	10	1	BROWN	10	10	10	100	B
	100	2	RED	100	100	100	200	C
	1,000	3	ORANGE	1,000	1,000	1,000	300	D
	10,000	4	YELLOW	10,000			400	E
	100,000	5	GREEN	100,000			500	F
	1,000,000	6	BLUE	1,000,000			600	G
	10,000,000	7	VIOLET	10,000,000			700	
	100,000,000	8	GRAY	100,000,000		0.01	800	
	1,000,000,000	9	WHITE	1,000,000,000		0.1	900	
5	0.1		GOLD	0.1	0.1		1,000	
10	0.01		SILVER	0.01	0.01		2,000	
20			NO COLOR				500	

EIA: ELECTRONICS INDUSTRIES ASSOCIATION MIL: MILITARY

Resistor and Capacitor Color Code

DHC–6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: EQUIPMENT LIST

On a revised page the portion of the text and illustration affected by the latest technical revision is indicated by a black vertical line. Pages with a black vertical line against the date at the bottom of the page are the result of text shift from page to page or nontechnical corrections.

Reference	Page	Date	Reference	Page	Date
List of Effective Pages	*1	Feb 28/05			
Contents	1	Mar 1/69			
Equipment List	1	Nov 24/77			
	2	Jun 16/80			
	3	Oct 31/02			
	*4	Feb 28/05			
	5	May 7/82			
	6	Apr 22/83			
	7	Nov 24/77			
	8	Nov 24/77			
	9	May 7/82			
	10	May 7/82			
	11	Nov 24/77			
	12	May 7/82			
	13	May 7/82			
	14	May 7/82			
	15	May 7/82			

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

EQUIPMENT LIST

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
GENERAL		
General		1
Equipment List		1

EQUIPMENT LIST

1. General

The list of all electrical and electronic equipment and basic parts shown on the wiring diagrams, lists the parts in alphabetical-numerical sequence, giving item number, description, part number and manufacturer. This list of parts is provided as an aid to trouble shooting and is not intended to be used as a parts catalog. Refer to Table 1 at end of equipment list for part numbers of civil connectors used in place of standard connectors in some installations.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
1	Actuator, Aileron Trim Tab	L10-20	Airborne Acc.
2	Actuator, Servo, Elevator	MG112B1	Honeywell (King)
3	Actuator, Servo, Rudder/Aileron	MG113A3 or MG113E3	Honeywell (King)
4	Amplifier, Audio	A100B/28/500	Tramm
5	Amplifier, Audio	A650	Tramm
6	Amplifier, Audio	IA160	Tramm
7	Amplifier, Servo, RMI	SA-30	A.I.M.
8	Annunciator	DHCSC70030-1	DHC
9	Annunciator	254-147	A.I.M.
10	Spare		
11	Audio Control Unit	DHC60206	DHC
12	Battery, Auxiliary (L/DUTY NICAD)		
	(Pre Mod 6/1454)	MA-300H	Sonotone/Marathon
	(Post Mod 6/1454)	C6NF1324-1	Sonotone/Marathon
13	Battery, Main (L/DUTY NICAD)		
	(Pre Mod 6/1315)	43B022RB27	G.E.
14	Battery, Main (H/DUTY NICAD)		
	(Post Mod 6/1315, Pre Mod 6/1479, Type CA5)	-	Sonotone/Marathon
	(Mod S.O.O. 6088, Type CA5)	-	Sonotone/Marathon
	(Post Mod 6/1479, Type BTCA5)	29094	Marathon
	(Mod S.O.O. 6167 or 6/1611)	29094-2	Marathon
15	Battery, Main (H/DUTY Lead Acid) (Mod S.O.O. 6091)	AN3150-2	
16	Bell	168-2	Edwards
17	Box, Beta Back-up Control	C6NF1117	DHC
18	Box, Pump Changeover Control Relay	C6NF1144	DHC
19	Box, Caution Lights Dimming Control		
	(Pre-Mod 6/1347)	C6NF1106	DHC
	(Post Mod 6/1347)	C6NF1297	DHC
20	Box, Temperature Control	CYLZ3230	Barber-Colman
21	Box, Windshield Heat Relay	C6NF1112	DHC
22	Box, Prop. Deicing Control	C6NF1015	DHC
23	Box, Power Distribution & Generator Control	C6NF1171	DHC
	(Post Mod 6/1591)	C6NF1362-1	DHC
24	Box, Main Distribution	C6NF1012	DHC
25	Box, Autofeather Relay		
	(Pre Retrofit Mod 6/1329)	C6NF1247-3	DHC
	(Post Mod 6/1329)	C6NF1247-5	DHC
	(Retrofit Mod 6/1329)	C6Z1649-15	DHC
	Retrofit Mods (6/1329 plus 6/1472 plus 6/1484)	C6Z1810-23	DHC
	Mod 6/1470	C6NF1329-1	DHC
26	Bulb, Outside Air Temp	AYLF2215-1	Scott
27	Bulb, Oil Temp	MS28034-1	

ITEM NO.	DESCRIPTION	PART NO.	MFR.
28	Capacitor	CL25BJ151TB3	
29	Circuit Breaker, Switch, 5 amp	MS24509-5	
30	Circuit Breaker, 5 amp	MS24510-5	
31	Circuit Breaker, 5 amp	MS25244-5	
32	Circuit Breaker, 7.5 amp	MS24510-7	
33	Circuit Breaker, 10 amp	MS24510-10	
34	Circuit Breaker, 15 amp	MS24510-15	
35	Circuit Breaker, 20 amp	MS24510-20	
36	Circuit Breaker, 25 amp	MS24510-25	
37	Circuit Breaker, 30 amp	MS24510-30	
38	Circuit Breaker, 35 amp	MS24510-35	
39	Circuit Breaker, 50 amp	105-250-101 or 700-001-50	Woods Mech Prod. Woods Mech Prod.
40	Spare		
41	Circuit Breaker, Reverse Current	12XRP12A1	G.E.
42	Circuit Breaker, Magnetic	3MC3-3-5	Texas Instr.
43	Converter, Windshield Wiper	14-91355-55	Curtiss-Wright
44	Computer (Pre Mod 6/1455) or (Post Mod 6/1455)	BG-374-D3 BG-374-E	Honeywell (King) Honeywell (King)
45	Connector, P36/P38	PT08P8-4P	Bendix
46	Connector	MS3106R20-15S	
47	Connector, J41/J42/CL2	MS3120E16-26S	
48	Connector, P41/P42	MS3126E16-26P	
49	Connector, J11	CE9303-3	Cannon
50	Connector, P11	CE9303-12	Cannon
51	Connector, J12	CE9303-4	Cannon
52	Connector, P12	CE9303-11	Cannon
53	Connector, J13	MS3120E16-26SW	
54	Connector, P13	MS3126E16-26PW	
55	Connector, J15/J18	MS3120E18-32S	
56	Connector, P15/P18	MS3126E18-32P	
57	Connector, J16	MS3120E14-19SW	
58	Connector, P16	MS3126E14-19PW	
59	Connector, J19	MS3120E24-61S	
60	Connector, P19	MS3126E24-61P	
61	Connector, J20	MS3120E20-39P	
62	Connector, P20/CL1	MS3126E20-39S	
63	Connector, J21	MS3100R32-7P	
64	Connector, P21	MS3106R32-7S	
65	Connector, J22/J64/J71	MS3120E12-10P	
66	Connector, P22/P64/P71	MS3126E12-10S	
67	Connector, J23	MS3120E16-26P	
68	Connector, P23	MS3126E16-26S	
69	Connector, J24/J25	CE9216-1003	Cannon
70	Connector, P24/P25	CE9212-42	Cannon
71	Connector, J28/P28/P1/P5	6817-1	Dage
72	Connector, J29/P29/P2/P6	6818-1	Dage
73	Connector, J30/J34/J1002	MS3120E14-12S	
74	Connector, P30/P34/P1002	MS3126E14-12P	
75	Connector, J31	MS3120E20-39S	
76	Connector, P31	MS3126E20-39P	
77	Connector, J32/J36/J38/J33/Skis	MS3110E8-4S	

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W19

Insert in Equipment List, after Page 2

EQUIPMENT LIST

REASON FOR ISSUE:
To update connector part number of Item 103.

ACTION:
In PSM 1–63–2W, Equipment List, ignore existing Page 3 and insert revised page, as shown on Page 2 of this Temporary Revision.

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
78	Connector, P32/P33	MS3116E8-4P	
79	Connector, J35	MS3120E20-16P	
80	Connector, P35	MS3126E20-16S	
81	Connector, J37/JB/CL2/Pump C/O Box	MS3120E14-19P	
82	Connector, P37/JB/CL2/Pump C/O Box	MS3126E14-19S	
83	Connector, J39/J40	MS3120E16-8S	
84	Connector, P39/P40	MS3126E16-8P	
85	Connector, J43/J44	MS3120E12-10S	
86	Connector, P43/P44	MS3126E12-10P	
87	Connector, J45	MS3120E14-5S	
88	Connector, P45	MS3126E14-5P	
89	Connector, J46	MS3120E14-5P	
90	Connector, P46	MS3126E14-5S	
91	Connector, J47/J48/J10A	MS3120E14-19S	
92	Connector, P47/P48/P10A	MS3126E14-19P	
93	Connector, J60	MS3100R18-1P	
94	Connector, P60	MS3100R18-1S	
95	Connector, J61	MS3102R20-29P	
96	Connector, P61	MS3106R20-29S	
97	Connector, P62/P63	CA06KE18-1S	Cannon
98	Connector, J62/J63	CA00KE18-1P	Cannon
99	Connector	MS3106R12S-3S	
100	Connector, Eng F/W	CA06KE14S-2P	Cannon
101	Connector, Eng F/W	CA00KE14S-2S	Cannon
102	Connector	MS3126E10-6S	
103	Connector	MS3106R10SL-3S	
104	Connector	MS3106R14S-5S	
105	Connector	MS3106R16S-1S	
106	Connector	5574-1	Dage
107	Connector	5575-1	Dage
108	Connector	MS3126E12-10S	
109	Connector	MS3106R14S-2S	
110	Connector	MS3106R10SL-4S	
111	Connector, Inv (Ac out)	MS3106R14S-7P	
112	Connector, Inv (Dc in)	MS3106R14S-9S	
113	Connector, Inv (250 VA)	MS3108R18-11S	
114	Connector, Eng F/W	CA00KE14S-6S	Cannon
115	Connector, Eng F/W	MS3106R14S-6P	
116	Connector	DM9700-7S	Deutsch
117	Connector	DM9700-3SW	Deutsch
118	Connector	DM9700-3S	Deutsch
119	Connector	DM9700-3SY	Deutsch
120	Connector	MS3106R16S-11S	
121	Connector	KPTM01-E-10-6P	Cannon
122	Connector	MS3126E10-6S	
123	Connector	MS3106R20-27S	
124	Connector	MS3106R12S-3S	
125	Connector (Shorting)	MS3120E10-6P	
126	Connector	MS3106R14S-7S	
127	Connector (Pitot Htr)	AN3115-1	
128	Connector	CE9311-5	Cannon
129	Connector	CE9216-1004	Cannon

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
78	Connector, P32/P33	MS3116E8-4P	
79	Connector, J35	MS3120E20-16P	
80	Connector, P35	MS3126E20-16S	
81	Connector, J37/JB/CL2/Pump C/O Box	MS3120E14-19P	
82	Connector, P37/JB/CL2/Pump C/O Box	MS3126E14-19S	
83	Connector, J39/J40	MS3120E16-8S	
84	Connector, P39/P40	MS3126E16-8P	
85	Connector, J43/J44	MS3120E12-10S	
86	Connector, P43/P44	MS3126E12-10P	
87	Connector, J45	MS3120E14-5S	
88	Connector, P45	MS3126E14-5P	
89	Connector, J46	MS3120E14-5P	
90	Connector, P46	MS3126E14-5S	
91	Connector, J47/J48/J10A	MS3120E14-19S	
92	Connector, P47/P48/P10A	MS3126E14-19P	
93	Connector, J60	MS3100R18-1P	
94	Connector, P60	MS3100R18-1S	
95	Connector, J61	MS3102R20-29P	
96	Connector, P61	MS3106R20-29S	
97	Connector, P62/P63	CA06KE18-1S	Cannon
98	Connector, J62/J63	CA00KE18-1P	Cannon
99	Connector	MS3106R12S-3S	
100	Connector, Eng F/W	CA06KE14S-2P	Cannon
101	Connector, Eng F/W	CA00KE14S-2S	Cannon
102	Connector	MS3126E10-6S	
103	Connector	MS3106R12S-3S	
104	Connector	MS3106R14S-5S	
105	Connector	MS3106R16S-1S	
106	Connector	5574-1	Dage
107	Connector	5575-1	Dage
108	Connector	MS3126E12-10S	
109	Connector	MS3106R14S-2S	
110	Connector	MS3106R10SL-4S	
111	Connector, Inv (Ac out)	MS3106R14S-7P	
112	Connector, Inv (Dc in)	MS3106R14S-9S	
113	Connector, Inv (250 VA)	MS3108R18-11S	
114	Connector, Eng F/W	CA00KE14S-6S	Cannon
115	Connector, Eng F/W	MS3106R14S-6P	
116	Connector	DM9700-7S	Deutsch
117	Connector	DM9700-3SW	Deutsch
118	Connector	DM9700-3S	Deutsch
119	Connector	DM9700-3SY	Deutsch
120	Connector	MS3106R16S-11S	
121	Connector	KPTM01-E-10-6P	Cannon
122	Connector	MS3126E10-6S	
123	Connector	MS3106R20-27S	
124	Connector	MS3106R12S-3S	
125	Connector (Shorting)	MS3120E10-6P	
126	Connector	MS3106R14S-7S	
127	Connector (Pitot Htr)	AN3115-1	
128	Connector	CE9311-5	Cannon
129	Connector	CE9216-1004	Cannon

ITEM NO.	DESCRIPTION	PART NO.	MFR.
130	Connector	CA3106R14S-1S	Cannon
131	Connector (Dummy)	MS3102A20-29P	
132	Connector	DPXAMA-57-33S	Cannon
133	Connector	DPXMA-57-33S	Cannon
134	Connector	57-30360	Amphenol
135	Connector	165-14X	Amphenol
136	Connector	MS3106R14S-5S	
137	Connector	MS3108R10SL-3S	
138	Connector	MS3106R10S-2S	
139	Connector	MS3126E18-32P	
140	Connector	MS3106R20-29S	
141	Connector	MS3120E18-32S	
142	Connector	165-14	Amphenol
143	Connector	MS3116E8-4S	
144	Connector	MS3110E8-4P	
145	Connector	126-233	Amphenol
146	Connector	126-215	Amphenol
147	Connector	126-216	Amphenol
148	Connector	126-1061	Amphenol
149	Connector	165-10	Amphenol
150	Connector	165-10X	Amphenol
151	Connector	MS3106E22-14S	
152	Connector	16743	A.R.C.
153	Connector	165-34	Amphenol
154	Connector,P3	MS3106R14S-6S	
155	Connector	57-30360	Amphenol
156	Connector, P10	MS3126E20-41P	
157	Connector, J10	MS3120E20-41S	
158	Connector, Battery (Mod S.O.O. 6091)	CA11751-1	
159	Connector, Battery (NICAD)	MS25182-2	
160	Controller, A/P	CG515D2	Honeywell (King)
161	Controller, W/S Temp	3S2060DM109A2	G.E.
	(Mod 6/1425)	SYLZ50157	Barber-Colman
162	Detector, Fire	17343-62-450°F	Fenwal
163	Detector, Fire (Duct overheat switch)	17343-62-300°F	Fenwal
164	Diode, 35 amp	IN1184	
	(Mod 6/1820)	DSC 255–1	
165	Diode	IN3325	
166	Diode	IN4004	
167	Extinguisher, Fire	601-004	American Std
168	Fan (Cabin Vent)	M5861AD-6B	Dynamic Air Eng.
169	Fan (Flight Compt)	F202	Casco Prod.
170	Filter (Assy - Wing Fuel)	C6G1232	DHC
171	Flux Detector	254-11	A.I.M.
172	Frame (Cabin PA)	DSC56-6	DHC
173	Fuse, 1/2 amp	313,500	Littelfuse
174	Fuse, 1 amp	313001	Littelfuse
175	Fuse, 1.5 amp	31301.5	Littelfuse
176	Generator, Prop. Gas Gen Tachometer	GEU7A	Globe
177	Horn, Stall Warning	MS25222-1	
178	Indicator, Light, Stall Warning(Lamp 327)	65-0121-55	Grimes
179	Indicator, Fuel Qty Fwd	393004-060	Simmonds
180	Indicator, Fuel Qty Aft	393004-061	Simmonds

VIKING – Temporary Revision

PSM NO.: 1-63-2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W11

Insert in Equipment List, after Page 4

EQUIPMENT LIST

REASON FOR ISSUE:
To add the equipment for the Mod 6/2421, Introduction of LED Wing Inspection Lights into Equipment List.

ACTION:
In the PSM 1-63-2W Wiring Manual on Page 5, add new items to the Equipment List as shown below:

ITEM NO.	DESCRIPTION	PART NO.	MFR.
227	Light, Inspection (Lamp 7079)		
	(Pre Mod 6/2421)	30-0239-1 LH	Grimes
	(Pre Mod 6/2421)	30-0239-2 RH	Grimes
227A	Light, Inspection (LED)		
	(Post Mod 6/2421)	01-0771580-10 LH	Whelen
	(Post Mod 6/2421)	01-0771580-20 RH	Whelen

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
181	Indicator, Intake Deflector	C6SC1063-3	DHC
182	Indicator, Prop. Tachometer	C6SC1037-5	DHC
183	Indicator Light, Autofeather (Lamp 327)	40000-504-001	Honeywell
184	Indicator, Fuel Flow	C6SC1036-1	DHC
185	Indicator, Oil Pressure	C6SC1089-1	DHC
186	Indicator, Gas Gen Tach	C6SC1029-3	DHC
187	Indicator, Oil Temp	C6SC1030-9	DHC
188	Indicator, Turbine Temp	C6SC1085-3	DHC
189	Indicator, Torque Pressure (Bendix)	C6SC1090-1	DHC
189A	Indicator, Torque Pressure (Edison)	C6SC1026-1	DHC
190	Indicator, Aileron Trim Tab	C6SC1038-1	DHC
191	Indicator, Turn & Slip	RCA35-1 (Mod)	R.C. Allen
192	Indicator, Turn & Slip	M5000-08	R.C. Allen
193	Indicator, Directional Gyro	254-1E	A.I.M.
194	Indicator, Directional Gyro/RMI	424-2ED	A.I.M.
195	Indicator, Directional Gyro	424-1	A.I.M.
196	Indicator, Directional Gyro	254-92	A.I.M.
197	Indicator, Directional Gyro (Mod 6/1750)	200ED-2	A.I.M.
	(Pre Mod 6/1750)	200ED	A.I.M.
198	Indicator, Xfeed Valve Position	C6SC1081	DHC
199	Indicator, RMI	2105D-B-6	R.C. Allen
200	Indicator, ADF (IN-13A Modified)	DHC60186-1	DHC
201	Indicator, Attitude	300 1E or 300 1EDK	A.I.M.
202	Indicator, Attitude	500ED	A.I.M.
203	Inverter (65 VA)	DH1030-24-65CS	Phoenix
204	Inverter (65 VA)	5590-F1-1	SPAR
205	Inverter (250 VA) (Pre Mod 6/1586)	PC-15A or PC-15B	Flitetronics
	(Mod 6/1586 and Pre Mod 6/1740)	PC-15BC	Flitetronics
	(Mod 6/1740)	PC-250	Flitetronics
206	Jack, Headset/Mike	U-61/U	
207	Jack, Headset/Mike	U-82/U	
208	Jack, Mike	C-12B	Switchcraft
209	Jack, Speaker	XLR-5-12C	Cannon
210	Lamp	1495	G.E.
211	Lamp, Dome Light	MS35478-307	
212	Lamp	MS25237-327	
213	Light, Eyebrow (Lamp 327)	B4850-1	Grimes
214	Lampholder	7-02	Dialco
215	Light Assembly, Caution (3) (Lamp 327)	65-0118-7	Grimes
216	Light Assembly, Caution (2) (Lamp 327)	65-0118-3	Grimes
217	Light Assembly, Caution (1) (Lamp 327)	65-0121-55	Grimes
218	Light, Fire Warning (Lamp 327)	E604	Avionic Products
219	Light, Beta Disarmed (Lamp 327)	134-3830-0373-201	Dialco
220	Light, Beta Range (Lamp 327)	134-3830-0374-201	Dialco
220A	Light, Ski Position (Lamp 327)	134-3830-0375-201	Dialco
221	Light, Post (Lamp 327)	5602-R-28 or 5602-C-28	Glarban
222	Light, Indicator, Blue (Lamp 327)	MS25041-10	
223	Light, Post (Lamp 327)	A89701R-5-327 or	Grimes
		A8970B-5-327	Grimes
224	Light, Post (Lamp 327)	A89701R-4-327 or	Grimes
		A8970B-4-327	Grimes
225	Light, Landing (Lamp 4553)	MS25241-4553	
226	Light Assembly, Cabin Sign (Lamp 313)	C6FF2244	DHC
227	Light, Inspection (Lamp 7079)	30-0239-1 LH	Grimes
		30-0239-2 RH	Grimes

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
228	Light, Utility (Lamp 313)	D7825-3 or -2	Grimes
229	Light, Tail (Lamp 1683)	20595-23-1683	Grimes
230	Light, Left (Lamp 7512)	A1285-R-7512	Grimes
231	Light, Right (Lamp 7512)	A1285-G-7512	Grimes
232	Light, Anti-collision Upper (Lamp 7079)	G8400A-36-24	Grimes
233	Light, Taxi (100W) (Lamp 4594)	B4150B-4594	Grimes
234	Light, Dome (Lamp 307)	B3555A	Grimes
235	Light, Toilet (or Baggage Compt)(Lamp 305)	B3550-305	Grimes
236	Light, Threshold (Lamp 307)	15-0043-1	Grimes
237	Light (Lamp 306)	B5440-306	Grimes
238	Light, Airstair (Lamp 307)	A5335-A-W-24-2532	Grimes
239	Light, Cabin Ceiling	B3550-307	Grimes
240	Light, Anti-collision Lower (Lamp A7079B-24)	41905-1	Grimes
241	Light Unit, Reading	2195-501-7194-1	Wemac
242	Light, Dome (Lamp 305)	34170-1-3051F	Grimes
243	Light, Flood (Lamp 307)	A5535-A-24-307	Grimes
244	Light & Cable Assembly	10-0031-1E	Grimes
245	Limiter, 30 amp	FIL30	Burndy
246	Limiter, 80 amp	FLLB	Burndy
247	Limiter, 500 amp	FLLM	Burndy
248	Limiter, Mounting Assy	FSH	Burndy
249	Loadmeter	DHCSC70021-1	DHC
250	Motor, W/S Wiper (Mod S.O.O. 6009)	14-97862-02	Curtiss-Wright
	(Mod S.O.O. 6157)	FW21160-2	Alco
251	Microphone	488T	Shure
252	Panel, Overhead Circuit Breaker	C6NF1173	DHC
253	Panel, Main Circuit Breaker	C6NF1076	DHC
254	Panel, Fuse	C6NF1074	DHC
255	Panel, Overvoltage Relay	C6NF1248	DHC
256	Panel, Trim	C6JF1164	DHC
257	Panel, Caution Lights	C6NF1085	DHC
258	Panel, Engine Instr Lighting	C6JF1032	DHC
259	Panel, Copilot's Instr	C6JF1204	DHC
260	Panel, Pilot's Instr	C6JF1202	DHC
261	Panel, Emergency	C6JF1033	DHC
262	Panel, Flap Ind	C6JF1036	DHC
263	Panel, Meter	C6JF1016	DHC
264	Panel, Overhead Console, Switch	C6NF1070	DHC
265	Panel, Overhead Console, Left	C6NF1098	DHC
266	Panel, Overhead Console, Right	C6NF1101	DHC
267	Panel, Radio - Nav Terminal	C6R1227	DHC
268	Panel, Fwd Radio Power	C6R1368	DHC
269	Panel, Audio Terminal	C6R1020	DHC
270	Panel, Speaker Assy	C6R1184-1	DHC
271	Pitot Head	DHCSC70024-3	DHC
272	Pump, Fuel Boost (Pre Mod 6/1424)	C6SC1005-1	DHC
	(Post Mod 6/1424 and 6/1621)	C6SC1005-3	DHC
	(Pre Mod 6/1795 and Mod S.O.O. 6164 or 6/1610	160-065	Crane (HydroAire)
	(Mod S.O.O. 6159)	72266-3	Adel
	(Mod 6/1757 and 6/1795)	1D2-17	Airborne
273	Pump, Hydraulic	100-689-3	Great Lakes Eng.
274	Deleted (Mod 6/1827)		
275	Receptacle, External Power	AN2552-3A	

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W26

Insert in Equipment List, before Page 13

EQUIPMENT LIST

THIS TEMPORARY REVISION SUPERSEDES TR NO. W15

REASON FOR ISSUE:
This Temporary Revision introduces equipment for Mod 6/2502, Upgraded Nose Baggage Compartment.

ACTION:
In PSM 1–63–2W, Equipment List, remove the existing Temporary Revision (TR W15) and replace with new Temporary Revision (TR W26).

— Continued overleaf —

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
519	Valve, Transfer	AV16B1762B	
520	Valve, Refuel	AV16B1864B	
521	Indicator, Attitude (S.O.O. 6176)	AIM510-10 ( )	AIM
522	Connector	MS3116E8-4S	
523	Connector	MS3193A20-20A	
524	Connector	MS3192A20-20A	
525	Resistor	RC20GF501J	
526	Diode Assy.	CSP325-1	DHC
527	Panel, Pilot's Instr.	C6JF1293	DHC
528	Light	10-0055-11	Grimes
529	Switch	MS24658-31M	
530	Circuit Breaker, 15 Amp (S.O.O. 6378 & S.O.O. 6379)	MS24510-A15	
531	Switch (S.O.O. 6378)	MS24523-23	
532	EMI Filter (S.O.O. 6378)	122253-10A	Lone Star
533	Fan Assembly (S.O.O. 6378)	C6NF2284-1	Viking
534	Switch (S.O.O. 6379)	MS24523-21	
535	Blower Assembly (S.O.O. 6379)	C6FF2988-13	Viking
536	Switch, Fwd Baggage Light (Post Mod 6/2502)	1500-11E671	Eaton

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
519	Valve, Transfer	AV16B1762B	
520	Valve, Refuel	AV16B1864B	
521	Indicator, Attitude (S.O.O. 6176)	AIM510-10 ( )	AIM
522	Connector	MS3116E8-4S	
523	Connector	MS3193A20-20A	
524	Connector	MS3192A20-20A	
525	Resistor	RC20GF501J	
526	Diode Assy.	CSP 325-1	DHC
527	Panel, Pilot's Instr.	C6JF1293	DHC
528	Light	10-0055-11	Grimes
529	Switch	MS24658-31M	

2. Connector Interchangeability

Connectors in the equipment list are identified by Military Standard (MS) part numbers only. However, ITT-Cannon (Civil) standard connectors may be used in some installations in place of MS types. The two connector types are fully interchangeable and Table 1 lists the Military Standard part numbers in numerical order, together with the equivalent ITT-Cannon part number. Civil connectors can be readily identified by first referring to the equipment list for the MS number of the connector and then cross-referring to Table 1 for the equivalent ITT-Cannon part number.

DESCRIPTION	MILITARY STANDARD NO.	ITT-CANNON PART NO.
Receptacle	MS3120E8-33S	KPTMOOE8-33S
Receptacle	MS3120E8-33P	KPTMOOE8-33P
Receptacle	MS3120E10-6S	KPTMOOE10-6S
Receptacle	MS3120E10-6P	KPTMOOE10-6P
Receptacle	MS3120E12-3S	KPTMOOE12-3S
Receptacle	MS3120E12-3P	KPTMOOE12-3P
Receptacle	MS3120E12-10S	KPTMOOE12-10S
Receptacle	MS3120E12-10P	KPTMOOE12-10P
Receptacle	MS3120E14-5S	KPTMOOE14-5S
Receptacle	MS3120E14-5P	KPTMOOE14-5P
Receptacle	MS3120E14-12S	KPTMOOE14-12S
Receptacle	MS3120E14-12P	KPTMOOE14-12P
Receptacle	MS3120E14-15S	KPTMOOE14-15S
Receptacle	MS3120E14-15P	KPTMOOE14-15P
Receptacle	MS3120E14-19S	KPTMOOE14-19S
Receptacle	MS3120E14-19P	KPTMOOE14-19P
Receptacle	MS3120E16-8S	KPTMOOE16-8S
Receptacle	MS3120E16-8P	KPTMOOE16-8P
Receptacle	MS3120E16-26S	KPTMOOE16-26S
Receptacle	MS3120E16-26P	KPTMOOE16-26P
Receptacle	MS3120E18-11S	KPTMOOE18-11S
Receptacle	MS3120E18-11P	KPTMOOE18-11P
Receptacle	MS3120E18-32S	KPTMOOE18-32S
Receptacle	MS3120E18-32P	KPTMOOE18-32P
Receptacle	MS3120E20-16S	KPTMOOE20-16S
Receptacle	MS3120E20-16P	KPTMOOE20-16P
Receptacle	MS3120E20-39S	KPTMOOE20-39S
Receptacle	MS3120E20-39P	KPTMOOE20-39P
Receptacle	MS3120E20-41S	KPTMOOE20-41S
Receptacle	MS3120E20-41P	KPTMOOE20-41P
Receptacle	MS3120E22-21S	KPTMOOE22-21S
Receptacle	MS3120E22-21P	KPTMOOE22-21P
Receptacle	MS3120E22-41S	KPTMOOE22-41S
Receptacle	MS3120E22-41P	KPTMOOE22-41P
Receptacle	MS3120E22-55S	KPTMOOE22-55S
Receptacle	MS3120E22-55P	KPTMOOE22-55P

Military/Civil Connector Equivalents

Table 1

DESCRIPTION	MILITARY STANDARD NO.	ITT-CANNON PART NO.
Receptacle	MS3120E22-61S	KPTMOOE22-61S
Receptacle	MS3120E22-61P	KPTMOOE22-61P
Plug	MS3126E8-33S	KPTMO6E8-33S
Plug	MS3126E8-33P	KPTMO6E8-33P
Plug	MS3126E10-6S	KPTMO6E10-6S
Plug	MS3126E10-6P	KPTMO6E10-6P
Plug	MS3126E12-3S	KPTMO6E12-3S
Plug	MS3126E12-3P	KPTMO6E12-3P
Plug	MS3126E12-10S	KPTMO6E12-10S
Plug	MS3126E12-10P	KPTMO6E12-10P
Plug	MS3126E14-5S	KPTMO6E14-5S
Plug	MS3126E14-5P	KPTMO6E14-5P
Plug	MS3126E14-12S	KPTMO6E14-12S
Plug	MS3126E14-12P	KPTMO6E14-12P
Plug	MS3126E14-15S	KPTMO6E14-15S
Plug	MS3126E14-15P	KPTMO6E14-15P
Plug	MS3126E14-19S	KPTMO6E14-19S
Plug	MS3126E14-19P	KPTMO6E14-19P
Plug	MS3126E16-8S	KPTMO6E16-8S
Plug	MS3126E16-8P	KPTMO6E16-8P
Plug	MS3126E16-26S	KPTMO6E16-26S
Plug	MS3126E16-26P	KPTMO6E16-26P
Plug	MS3126E18-11S	KPTMO6E18-11S
Plug	MS3126E18-11P	KPTMO6E18-11P
Plug	MS3126E18-32S	KPTMO6E18-32S
Plug	MS3126E18-32P	KPTMO6E18-32P
Plug	MS3126E20-16S	KPTMO6E20-16S
Plug	MS3126E20-16P	KPTMO6E20-16P
Plug	MS3126E20-39S	KPTMO6E20-39S
Plug	MS3126E20-39P	KPTMO6E20-39P
Plug	MS3126E20-41S	KPTMO6E20-41S
Plug	MS3126E20-41P	KPTMO6E20-41P
Plug	MS3126E22-21S	KPTMO6E22-21S
Plug	MS3126E22-21P	KPTMO6E22-21P
Plug	MS3126E22-41S	KPTMO6E22-41S
Plug	MS3126E22-41P	KPTMO6E22-41P
Plug	MS3126E22-55S	KPTMO6E22-55S
Plug	MS3126E22-55P	KPTMO6E22-55P
Plug	MS3126E22-61S	KPTMO6E22-61S
Plug	MS3126E22-61P	KPTMO6E22-61P

Military/Civil Connector Equivalents

Table 1 (Cont'd)

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR
276	Relay, Reverse Current	A700-AAP (Pre Mod 6/1585)	Hartman
		A701-D (Mod 6/1585)	Hartman
277	Relay	4B-1E-126	
278	Relay	DSC32-1	DHC
279	Relay	MS24171-D1	
280	Relay	MS24172-D1	
281	Relay	MS24149-D1	
282	Relay	MS24166-D1	
283	Relay	MS24178-D1	
284	Relay	MS25035-1	
285	Relay	MS25024-2	
286	Relay, Overvoltage	TD-805V-2	Hartman
	(Mod 6/1539)	E-311C	Hartman
287	Resistor, 10 ohm, 25W	0200B	Ohmite
288	Resistor, 20 ohm, 25W	0364B	Ohmite
289	Resistor 6540 (Tickler)	RW20G101	Ohmite
290	Resistor	RW59V401	I.R.C.
291	Resistor	RC42GF391K	
292	Resistor, 10 ohm, 10W	F105	Ohmite

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
293	Resistor, 5 ohm	F506	Ohmite
294	Resistor, Spool	AN5534-2	
295	Resistor, 15 ohm, 30W	F307	Ohmite
296	Resistor, 1.5 ohm, 30W	FRW22-1.5	I.R.C.
297	Rheostat, Dimming	AN3155-50-25	
298	Rheostat, Temp Selector	CTS-IKS9929	CTS
299	Regulator Unit, Current	3013242	Pratt & Whitney
300	Regulator Unit, Voltage	VR-1010-24-1A	Phoenix
	(Mod 6/1590 or 6/1636)	VR-1010-24-2A	Phoenix
301	Selector, Heading	CG136B1	Honeywell (King)
302	Sensing Element, Cabin	BYLF7469	Barber-Colman
303	Sensing Element, Duct	AYLF3001-1	Barber-Colman
304	Sensor, Gen Overheat	21544-1-10-4	Texas Instr
305	Sensor, Stall Warning	167	Safe Flight Co.
306	Shunt, 100 amp	MS91586-6	
307	Shunt, 200 amp	MS91587-2	
308	Solenoid, Autofeather	1310-115	Woodward
309	Solenoid, Fuel Bleed	U9500	United Aircraft Prod.
310	Solenoid, Beta Back-up	1310-511	Woodward
311	Solenoid, Eng Intake Deflector	R14S143	Marsland
311A	Solenoid, Eng Intake Deflector	RS342AE1	Ledex
312	Solenoid, Prop. O/S Governor	1310-105	Woodward
313	Solenoid, Engage Air Valve	AV1A1128	General Controls
314	Socket, Speaker	XLR-5-11C	Cannon
315	Spare		
316	Starter-Generator	23048-004	Lear-Siegler
317	Switch, Ind Select	13AT8	Honeywell
318	Switch, Generator	13AT10	Honeywell
319	Switch, DC Power	13AT2A	Honeywell
320	Switch, Heater Mode	13AT2	Honeywell
321	Switch, Limit	V3-419	Honeywell
322	Switch, Aileron Trim	2TP12-70	Honeywell
323	Switch, Landing Light	11TS-193-21	Honeywell
324	Switch, Limit	DT-2R-A7	Honeywell
325	Switch	MS25125-B4	
326	Switch, Microphone	DHC60155	DHC
327	Switch, Reading Light	55-0045-5	Grimes
328	Switch, Boarding Light	1TP12-3	
329	Switch, Dual Pressure	MDB-620-1	Custom Comp
330	Switch, Reading Light	55-0045-11	Grimes
331	Switch, Fire Pull	E601-FP-1	Avionics Prod.
332	Switch, Limit	W102-L5	Hetherington
333	Switch, Power Lever; Prop Beta Range	KX5-1-16	Texas Instr
334	Switch, Float	F8300-105	Revere
335	Switch, Pressure	DHCSC70019-15	DHC
336	Switch, Pressure	DHCSC70019-17	DHC
	(Mod 6/1150)	DHCSC70019-21	DHC
337	Switch, Pressure	DHCSC70036-1	DHC
338	Switch, Pressure	DHCSC70020-5	DHC
	(Mod 6/1417)	20627	Hobbs
339	Switch, Pressure	DHCSC70020-7	DHC
	(Mod 6/1423)	DHCSC70020-15	DHC
		DHCSC70020-17	DHC
	(Mod 6/1493)	8190024	Hathaway
340	Switch, Pressure (Hydraulic Oil)	6607P-9-6	Consolidated Cont
	(Mod 6/1570)	6607P-9-6A	Consolidated Cont
341	Switch, Selector	MS25002-5	
342	Switch, Sensitive (Limit)	MS25008-1	

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
343	Switch (MS35058-21)	DSC11-21	Cutler Hammer, Honeywell, Micro Switch
344	Switch (MS25068-21)	DSC13-21	Cutler Hammer
345	Switch (MS25068-23)	DSC13-23	Cutler Hammer
346	Switch (MS25068-26)	DSC13-26	Cutler Hammer
347	Switch, Sensitive (Limit)	MS25026-1	
348	Switch (MS25125-C3)	DSC18-4	Cutler Hammer
349	Switch (MS25125-J4)	DSC18-9	Cutler Hammer
350	Switch	CH8859K50	Cutler Hammer
351	Switch (MS25127-J4)	DSC20-9	Cutler Hammer
352	Switch, Limit	MS25253-4	
353	Switch (MS35058-22)	DSC11-22)	
354	Switch (MS35058-23)	DSC11-23)	
355	Switch (MS35058-24)	DSC11-24)	
356	Switch (MS35058-27)	DSC11-27)	
357	Switch (MS35058-28)	DSC11-28)	Cutler Hammer,
358	Switch (MS35059-21)	DSC12-21)	Honeywell, Micro
359	Switch (MS35059-22)	DSC12-22)	Switch
360	Switch (MS35059-23)	DSC12-23)	
361	Switch (MS35059-24)	DSC12-24)	
361A	Switch (MS35059-27)	DSC12-27)	
362	Switch (MS35059-28)	DSC12-28)	
363	Switch (MS35059-31)	DSC12-31)	
364	Switch, Limit	MS25253-4	
365	Switch, Gyro Compass	6AT2	Honeywell
366	Switch, A/P	TPB58	Honeywell
367	Tank Unit	391087-03081 or	Simmonds
	(Mod 6/1420)	391088-002	Simmonds
368	Tank Unit	391087-03082	Simmonds
	(Mod 6/1420)	391088-003	Simmonds
369	Tank Unit	391087-03083 or	Simmonds
	(Mod 6/1420)	391088-004	Simmonds
370	Tank Unit	391087-03084 or	Simmonds
	(Mod 6/1420)	391088-005	Simmonds
371	Tank Unit	391087-03085 or	Simmonds
	(Mod 6/1420)	391088-006	Simmonds
372	Thermocouple, Chromel-Alumel	3012075	U.A.C.
373	Timer, Deicing (Propeller)	3E1150-3	B.F. Goodrich
	(Post Mod 6/1629)	3E1150-10	B.F. Goodrich
374	Timer, Deicing (Airframe) (Pre Mod 6/1779)	42E13-3A	Bendix
	(Mod 6/1779)	42E13-3B	Bendix
375	Transformer	43642	Hammond
376	Transmitter, Fuel Flow	9133-25-B1	Bendix
377	Transmitter, Oil Pressure	C6SC1084-3	DHC
378	Transmitter, Gas Gen Tach	GEU7A	Globe
379A	Transmitter, Torque Pressure (Edison)	318-02020	Edison
380	Transmitter, Aileron Trim Tab	10820-17-1, 31-102	Bourns
381	Terminal Insert	DSC64-2	DHC
382	Terminal Insert	DSC64-3	DHC
383	Terminal Board	MS27212-1-5	
384	Terminal, Ground	A2532	Grimes
385	Valve, Bleed Air Shutoff (Pre Mod 6/1680)	26440051	Vapor Heating
	(Mod 6/1680)	320295-1	Whittaker

ITEM NO.	DESCRIPTION	PART NO.	MFR.
386	Valve, Hot Air Actuator	BLYB9304	Barber-Colman
387	Valve, Fuel Crossfeed & SOV	AV16B1762B	General Controls
388	Valve, Deicing Airframe	1532-3A	Bendix
	(Mod 6/1410)	1532-3C	
389	Voltmeter	DHCSC70022-1	DHC
390	Valve, Air	15328	Wright Components
391	Switch, Synch)	P/O 213433	Woodward
392	Box, Synch Control)		
393	Actuator Prop Synch	213100	Woodward
394	Pickup, Governor (Pre Mod 6/1767)	5430-904	Woodward
	(Mod 6/1767)	210952	Woodward
395	Connector, Governor Pickup	1609-201	Woodward
396	Connector, Prop Synch Control	233032	Woodward
397	Connector, Prop Synch Actuator	233062	Woodward
398	Connector, Skis	PTOP8-4S	Bendix
399	Resistor, Type 250	F208	Ohmite
400	Switch (MS25126-B1)	DSC19-2	Cutler Hammer
401	Switch, Pressure	SW333	Autolite
402	Light, Indicator	MS25041-8	
403	Pump, Aux Fuel	2B6-7 or 2B7-1	Airborne
404	Indicator, Aux Fuel Qty	6430694 or 6432690	AC Spark Plug
405	Transmitter, Aux Fuel Qty	C6G1129-1	DHC
		6427208	AC Spark Plug
	(Mod 6/1569)	C6G1129-7	DHC
406	Valve, Transfer & Refuel/SOV	AV1E1139	
407	Light, Ski Position (Lamp 327)	134-3830-0375-201	Dialco
408	Switch, Limit	BZ-2R55T	Honeywell
409	Panel, Ski Position Indicator	C6NF1103	DHC
410	Resistor	RC42GF271K	
411	Relay, 4-pole	4B3104	Hi-G
412	Air Conditioner, Type 1000	031100	J.B. Systems
413	Limiter, 150 amps	27-442	J.B. Systems
414	Switch	27-407	J.B. Systems
415	Box, Relay - Pressure Refuel	C6G1190-1	DHC
416	Deleted		
417	Panel, Pressure Refuel	C6G1153-1	DHC
418	Connector, J7	KPTMOOE-12-10P	Cannon
419	Connector, J1/J5	6046-1	Dage
420	Connector, J3	6048-1	Dage
421	Connector, J2/J6	6047-1	Dage
422	Connector, J4	6049-1	Dage
423	Connector, P3	6819-1	Dage
424	Connector, P4	6820-1	Dage
425	Relay, K3, K4	DSC35-1	DHC
426	Switch, Fuel Overload (MS25125-C3)	DSC18-4	Cutler Hammer
427	Switch, Master Refuel (MS25126-C3)	DSC19-4	Cutler Hammer
428	Switch, Overload Test (MS35058-27)	DSC11-27	Cutler Hammer, Honeywell, Micro Switch
429	Light, Indicating (Lamp 301)	95-1310-0932-301	Dialco
430	Panel, Circuit Breaker Overhead	C6NF1283	DHC
431	Panel, Circuit Breaker Main	C6NF1284	DHC

ITEM NO.	DESCRIPTION	PART NO.	MFR
432	Panel, Circuit Breaker Radio	C6NF1285	DHC
433	Box, Radio AC	C6NF1287	DHC
434	Solenoid, Eng Intake Deflector	R14S143	G.W. Lisk
435	Resistor 2K 1/2W	RC20GF202J	
436	Resistor 20 ohm 25W	0364B	Ohmite
437	Resistor 6.8K 1/2W	RC20GF682K	
438	Resistor 1K 2W	CLU1021	Ohmite
439	Lamp, Fwd Baggage Compt (Lamp 306)	B5540-306	Grimes
440	Panel, Emer Bus Control	C6NF1291-27	DHC
441	Relay, Undercurrent	R103	A.A.E.
442	Battery (Nicad 22 AH)	CA4	Sonotone
443	Diode	IN3571	
444	Circuit Breaker	MS25244-15	
445	Circuit Breaker	MS25244-25	
446	Switch, Emer Bus	MS25103-23	
447	Light Assy, A/P Disengage (Lamp 327)	40000	Honeywell
448	Relay, Inverter Control	AN3353-2	
449	Inverter, 400VA	DH1030-24-600-CS	Phoenix
450	Connector, Inverter Input	MS3106R22-1S	
451	Connector, Inverter Output	MS3106R22-10P	
452	Resistor, VM 30.1K	DCC30.1K	IRC
453	Transformer	88663	Hammond
454	Switch, Pressure	DHCSC70020-11	DHC
	(Mod 6/1422)	DHCSC70020-13	DHC
	(Mod 6/1470)	C6SC1125	DHC
	(Mod 6/1503	8190026	Hathaway
455	Connector, Torque Switch	MS3126E10-6S	
456	Diode	MR1124	
457	Fuse, 1/2-amp	312.500	Littelfuse
458	Capacitor	CP05A1KC474K3	Sprague
459	Fuse, 1-amp	312001.	Littelfuse
460	Relay, Crystal Can	DSC76-1	
461	Relay, Crystal Can	DSC76-2	
462	Resistor	RW59V901	
463	Switch, Pressure	M4008-15	Hobbs
464	Spare		
465	Indicator, Bleed Air Temp	C6SC1111	Lewis Engineering
466	Connector	KPTM06E10-6S	Cannon
467	Bulb, Temperature	56B17	Lewis Engineering
468	Light, Eyebrow (Lamp 327)	B4850-8 or B4850-1R	Grimes
469	Spare		
470	Switch, Limit	B22RT04	Honeywell
471	Lamp	A-7079B-24	Grimes
472	Voltmeter, ac	6625-21-844-8122	NATO
		or 8AW61LVA218	G.E.
473	Switch	8868K8	Cutler Hammer
474	Hot Cup Timer and Bracket Assy	3B-5502-2-SE	Lacy
475	Lamp	1820 or 1820R	
476	Connector, ac Voltmeter	MS3147E7-50S	
477	Panel Assy, Bleed Resistor	C6NF1330	DHC
478	Indicator, Torque Pressure (Edison)	C6SC1115	DHC

ITEM NO.	DESCRIPTION	PART NO.	MFR.
479	Transmitter, Torque Pressure (Edison)	C6SC1116	DHC
480	Connector, P1	126-196	Amphenol
481	Connector, P2	126-195	Amphenol
482	Resistor, Bleed, 60.4 ohm, 20W	RE70G60R4	Dale Elect
483	Indicator, Battery Temperature (Mod 6/1479)	29088-1	Marathon
484	Switch, Fuel Quantity Ind Test	2PB13	Honeywell
485	Light, Nosewheel Position Ind (Mod 6/1478)	5952-3LH-CW-28	Glarban
486	Panel, Engine and Fuel Instrument	C6JF1290	DHC
487	Flasher Unit	70-0075-1	Grimes
488	Power Supply	60-1755-5	Grimes
489	Left Strobe Light and Position Light	C6NW1049-1	DHC
490	Right Strobe Light and Position Light	C6NW1049-3	DHC
491	Panel Assy, Resistor	C6NF1339-3	DHC
492	Relay, Time Delay	1621-C-2001	Hi-G
493	Switch, Power Lever Test	C6NF1342-1	DHC
494	Light, Beacon	G8400A-24	Grimes
495	Relay, Generator Field Control	C6NF1361-3	DHC
496	Relay, Generator Field Control	C6NF1361-1	DHC
497	Panel, Generator Field Control	C6NF1360	DHC
498	Light, Post	A89708-5-327G MS25036-149	Grimes
499	Limiter, 150 amps.	ANL150	Bussman
500	Limiter, Mounting Assy.	4164	Bussman
501	Connector, J1001	MS3120E14-12SW	
502	Connector, P1001	MS3126E14-12PW	
503	Filter	Type 7718-1	Solar Electronics Co.
504	Resistor	RE65G1500	Dale Elect.
505	Light	134-3830-0373-201	Dialco
506	Connector	CA16371	Cannon
507	Connector	MS3102R16-11P	
508	Connector	MS3102R16-11S	
509	Switch	72820105-007	DHC
510	Resistor	RN60C1503F	Ohmite
511	Resistor	RW59V401	Ohmite
512	Light Assy.	C6SC1032-5	DHC
513	Relay	J-D4L-050	Leach
514	Relay, Time Delay	TDH8002-2002	Leach
515	Connector	MS3121E10-6P	
516	Connector	MS3121E12-10P	
517	Control Box, Caution Lights	C6Z2084-1	DHC
518	Relay Panel, Fuel Transfer	C6Z2040-3	DHC

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W21

Insert in Equipment List, after Page 12

EQUIPMENT LIST

REASON FOR ISSUE:
To introduce alternate Fuel Quantity Ind Test Switch, part number 2PB11.

ACTION:
In PSM 1–63–2W, Equipment List, revise item 484 on Page 12 as shown below:

ITEM NO.	DESCRIPTION	PART NO.	MFR.
484	Switch, Fuel Quantity Ind Test	2PB13 or 2PB11	Honeywell Honeywelll

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DHC–6 **SERIES:** 300

PUBLICATION: WIRING DIAGRAM MANUAL **TEMPORARY REVISION NO.:** W25

Insert in Equipment List, after Page 6

EQUIPMENT LIST

THIS TEMPORARY REVISION SUPERSEDES TR NO. W23

REASON FOR ISSUE:
This Temporary Revision introduces equipment for Mod 6/2502, Upgraded Nose Baggage Compartment.

ACTION:
In PSM 1–63–2W, Equipment List, remove the existing Temporary Revision (TR W23) and replace with new Temporary Revision (TR W25).

— Continued overleaf —

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
228	Light, Utility (Lamp 313)	D7825-3 or -2	Grimes
229	Light, Tail (Lamp 1683)	20595-23-1683	Grimes
230	Light, Left (Lamp 7512)	A1285-R-7512	Grimes
231	Light, Right (Lamp 7512)	A1285-G-7512	Grimes
232	Light, Anti-collision Upper (Lamp 7079)	G8400A-36-24	Grimes
233	Light, Taxi (100W) (Lamp 4594)	B4150B-4594	Grimes
234	Light, Dome (Lamp 307) (Pre Mod 6/2427)	B3555A	Grimes
	LED Light, Dome	01-0770813-16	Whelen
	(Post Mod 6/2427) (Post Mod 6/2502)		
235	Light, Toilet (or Baggage Compt) (Lamp 305) (Pre Mod 6/2289) (Pre Mod 6/2427)	B3550-305	Grimes
	LED Light, Rear Aft Baggage Compt (Post Mod 6/2289)	01-0770813-16	Whelen
	LED Light, Rear Fwd Baggage Compt (Post Mod 6/2427)	01-0770813-12	Whelen
236	Light, Threshold (Lamp 307)	15-0043-1	Grimes
237	Light, (Lamp 306)	B5440-306	Grimes
238	Light, Airstair (Lamp 307)	A5335-A-W24-2532	Grimes
239	Light, Cabin Ceiling (Pre Mod 6/2427)	B3550-307	Grimes
	LED Light, Cabin Ceiling (Post Mod 6/2427)	01-0770813-12	Whelen
240	Light, Anti-collision Lower (Lamp A7079B-24)	41905-1	Grimes
241	Light Unit, Reading	2195-501-7194-1	Wemac
242	Light, Dome (Lamp 305)	34170-1-3051F	Grimes
243	Light, Flood (Lamp 307)	A5535-A-24-307	Grimes
244	Light & Cable Assembly	10-0031-1E	Grimes
245	Limiter, 30 amp	FIL30	Burndy
246	Limiter, 80 amp	FLLB	Burndy
247	Limiter, 500 amp	FLLM	Burndy
248	Limiter, Mounting Assy	FSH	Burndy
249	Loadmeter	DHCSC70021-1	DHC
250	Motor, W/S Wiper (Mod S.O.O. 6009)	14-97862-02	Curtiss-Wright
	(Mod S.O.O. 6157)	FW21160-2	Alco
251	Microphone	488T	Shure
252	Panel, Overhead Circuit Breaker	C6NF1173	DHC
253	Panel, Main Circuit Breaker	C6NF1076	DHC
254	Panel, Fuse	C6NF1074	DHC
255	Panel, Overvoltage Relay	C6NF1248	DHC
256	Panel, Trim	C6JF1164	DHC
257	Panel, Caution Lights	C6NF1085	DHC
258	Panel, Engine Instr Lighting	C6JF1032	DHC
259	Panel, Copilot's Instr	C6JF1204	DHC
260	Panel, Pilot's Instr	C6JF1202	DHC
261	Panel, Emergency	C6JF1033	DHC
262	Panel, Flap Ind	C6JF1036	DHC
263	Panel, Meter	C6JF1016	DHC
264	Panel, Overhead Console, Switch	C6NF1070	DHC
265	Panel, Overhead Console, Left	C6NF1098	DHC
266	Panel, Overhead Console, Right	C6NF1101	DHC
267	Panel, Radio - Nav Terminal	C6R1227	DHC
268	Panel, Fwd Radio Power	C6R1368	DHC
269	Panel, Audio Terminal	C6R1020	DHC
270	Panel, Speaker Assy	C6R1184-1	DHC
271	Pitot Head	DHCSC70024-3	DHC