Aileron Geared Tab System – General Data

1. General

The aileron geared tab is hinged to the trailing edge of the inboard end of each aileron. A tab hinge arm, riveted to the inboard end of the tab, is connected to the flap hinge bracket by adjustable control rods which are linked to the outboard fore flap hinge arm by a lever link.

2. Adjustment/Test

A. Rig Aileron Geared Tab

Refer to Figure 1 for details.

Note Before attempting to rig the aileron geared tab, ensure that aileron and wing flap systems are correctly rigged (refer to 27-10-00, Aileron Control System – General Data and 27-50-00, Wing Flaps System – General Data).

1) Lower flaps to full down position.


2) With ailerons in neutral, check that lever link rear pivot is aligned with aileron hinge center and that tab is in neutral.

3) Adjust forward control rod, as necessary, to align the pivot, then adjust rear control rod to align tab.

4) Secure control rod nuts and locknuts where disturbed, and install cotter pins as necessary.

5) Check geared tab control surface clearances (refer to 27-00-00, Flight Controls – General Data).

6) Operate ailerons and check for full and free range of movement.

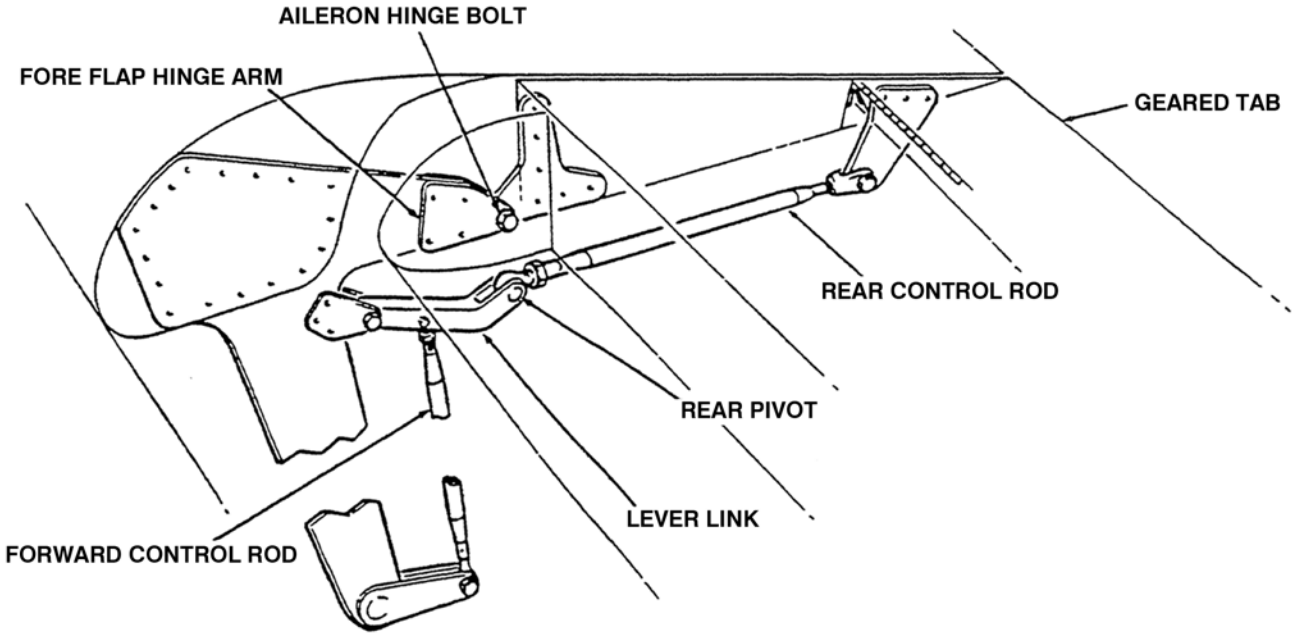

Aileron Geared Tab Control
Figure 1

3. Inspection/Check

A. Free Play Check – Aileron Geared Tab

1) Operate ailerons (and geared tab) to neutral position.

2) Move geared tab manually and check that free play (backlash), measured at trailing edge, does not exceed 0.10–inch.

Note Measurement to be taken adjacent to control rod attachment point.