# CHAPTER 33

# LIGHTS

## CHAPTER 33
## LIGHTS

| Subject/Page | Date | COC |
|---|---|---|
| 33-EFFECTIVE PAGES | | |
| 1 thru 7 | Sep 15/2026 | |
| 8 | BLANK | |
| 33-CONTENTS | | |
| 1 | May 15/2024 | |
| 2 | May 15/2024 | |
| 3 | May 15/2024 | |
| 4 | Jan 15/2026 | |
| 5 | Sep 15/2025 | |
| O 6 | Sep 15/2026 | |
| 7 | Sep 15/2025 | |
| 8 | Sep 15/2025 | |
| 9 | Sep 15/2025 | |
| 10 | Sep 15/2025 | |
| 11 | Sep 15/2025 | |
| 12 | Sep 15/2025 | |
| 13 | Sep 15/2025 | |
| O 14 | Sep 15/2026 | |
| 15 | Sep 15/2025 | |
| 16 | Sep 15/2025 | |
| 33-00-00 | | |
| 901 | May 15/2024 | |
| 902 | May 15/2024 | |
| 33-11-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 33-11-00 (cont) | | |
| 215 | May 15/2024 | |
| 216 | May 15/2024 | |
| 217 | May 15/2024 | |
| 218 | May 15/2024 | |
| 219 | May 15/2024 | |
| 220 | May 15/2024 | |
| 221 | May 15/2024 | |
| 222 | May 15/2024 | |
| 223 | May 15/2024 | |
| 224 | May 15/2024 | |
| 225 | May 15/2024 | |
| 226 | May 15/2024 | |
| 227 | May 15/2024 | |
| 228 | May 15/2024 | |
| 229 | May 15/2024 | |
| 230 | May 15/2024 | |
| 231 | May 15/2024 | |
| 232 | BLANK | |
| 33-14-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 215 | May 15/2024 | |
| 216 | May 15/2024 | |
| 217 | May 15/2024 | |
| 33-14-00 (cont) | | |
| 218 | May 15/2024 | |
| 219 | May 15/2024 | |
| 220 | May 15/2024 | |
| 221 | May 15/2024 | |
| 222 | May 15/2024 | |
| 223 | May 15/2024 | |
| 224 | May 15/2024 | |
| 225 | May 15/2024 | |
| 226 | May 15/2024 | |
| 227 | May 15/2024 | |
| 228 | May 15/2024 | |
| 229 | May 15/2024 | |
| 230 | May 15/2024 | |
| R 231 | Sep 15/2026 | |
| R 232 | Sep 15/2026 | |
| 233 | May 15/2024 | |
| 234 | May 15/2024 | |
| 235 | May 15/2024 | |
| 236 | May 15/2024 | |
| 237 | May 15/2024 | |
| 238 | May 15/2024 | |
| 239 | May 15/2024 | |
| 240 | BLANK | |
| 33-17-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2026 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2026 | |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

| Subject/Page | Date | COC |
|---|---|---|
| 33-17-00 (cont) | | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 33-18-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 215 | May 15/2024 | |
| 216 | May 15/2024 | |
| 217 | May 15/2024 | |
| 218 | May 15/2025 | |
| 219 | May 15/2024 | |
| 220 | May 15/2024 | |
| 221 | May 15/2024 | |
| 222 | May 15/2024 | |
| 223 | May 15/2024 | |
| 224 | May 15/2024 | |
| 225 | May 15/2024 | |
| 226 | Sep 15/2024 | |
| 227 | May 15/2024 | |
| 228 | BLANK | |
| 33-20-00 | | |
| 501 | Jan 15/2026 | |
| 502 | May 15/2025 | |
| 503 | May 15/2025 | |
| 504 | May 15/2025 | |
| 505 | May 15/2025 | |

| Subject/Page | Date | COC |
|---|---|---|
| 33-20-00 (cont) | | |
| 506 | May 15/2025 | |
| 507 | May 15/2025 | |
| 508 | Jan 15/2026 | |
| 509 | Jan 15/2026 | |
| 510 | Jan 15/2026 | |
| 511 | Jan 15/2026 | |
| 512 | Jan 15/2026 | |
| 513 | May 15/2025 | |
| 514 | May 15/2025 | |
| 515 | May 15/2025 | |
| 516 | May 15/2025 | |
| 33-21-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | Sep 15/2025 | |
| 208 | Sep 15/2025 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | Jan 15/2025 | |
| 213 | Sep 15/2025 | |
| 214 | May 15/2024 | |
| 33-22-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |

| Subject/Page | Date | COC |
|---|---|---|
| 33-22-00 (cont) | | |
| R 211 | Sep 15/2026 | |
| R 212 | Sep 15/2026 | |
| O 213 | Sep 15/2026 | |
| O 214 | Sep 15/2026 | |
| O 215 | Sep 15/2026 | |
| 216 | May 15/2024 | |
| 217 | May 15/2024 | |
| R 218 | Sep 15/2026 | |
| O 219 | Sep 15/2026 | |
| O 220 | Sep 15/2026 | |
| O 221 | Sep 15/2026 | |
| 222 | May 15/2024 | |
| 223 | May 15/2024 | |
| R 224 | Sep 15/2026 | |
| O 225 | Sep 15/2026 | |
| O 226 | Sep 15/2026 | |
| O 227 | Sep 15/2026 | |
| 228 | May 15/2024 | |
| 229 | May 15/2024 | |
| 230 | BLANK | |
| 33-22-00 | | |
| 601 | May 15/2024 | |
| R 602 | Sep 15/2026 | |
| 603 | May 15/2024 | |
| 604 | BLANK | |
| 33-23-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| Subject/Page | Date | COC |
|---|---|---|
| 33-23-00 (cont) | | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 215 | May 15/2024 | |
| 216 | May 15/2024 | |
| 33-25-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 33-26-01 | | |
| 201 | Sep 15/2025 | |
| 202 | Sep 15/2025 | |
| 203 | Sep 15/2025 | |
| 204 | Sep 15/2025 | |
| 205 | Sep 15/2025 | |
| 206 | Sep 15/2025 | |
| 207 | Sep 15/2025 | |
| 208 | Sep 15/2025 | |
| 209 | Sep 15/2025 | |
| 210 | Sep 15/2025 | |
| 211 | Sep 15/2025 | |
| 212 | Sep 15/2025 | |
| 213 | Sep 15/2025 | |
| 214 | BLANK | |
| 33-26-02 | | |
| 201 | Sep 15/2025 | |
| 202 | Sep 15/2025 | |
| 203 | Sep 15/2025 | |
| 204 | Sep 15/2025 | |
| 205 | Sep 15/2025 | |
| 206 | Sep 15/2025 | |
| 207 | Sep 15/2025 | |
| 208 | Sep 15/2025 | |
| 209 | Sep 15/2025 | |
| 210 | Sep 15/2025 | |
| 211 | Sep 15/2025 | |
| 212 | Sep 15/2025 | |
| 33-26-03 | | |
| R 201 | Sep 15/2026 | |
| R 202 | Sep 15/2026 | |
| O 203 | Sep 15/2026 | |
| R 204 | Sep 15/2026 | |
| R 205 | Sep 15/2026 | |
| R 206 | Sep 15/2026 | |
| R 207 | Sep 15/2026 | |
| R 208 | Sep 15/2026 | |
| R 209 | Sep 15/2026 | |
| O 210 | Sep 15/2026 | |
| R 211 | Sep 15/2026 | |
| R 212 | Sep 15/2026 | |
| R 213 | Sep 15/2026 | |
| O 214 | BLANK | |
| D 215 | Sep 15/2026 | |
| D 216 | BLANK | |
| 33-26-04 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | Sep 15/2025 | |
| 33-26-04 (cont) | | |
| 208 | Sep 15/2025 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 33-26-04 | | |
| R 501 | Sep 15/2026 | |
| R 502 | Sep 15/2026 | |
| R 503 | Sep 15/2026 | |
| 504 | BLANK | |
| 33-27-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 33-29-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | BLANK | |
| 33-32-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2026 | |
| 210 | May 15/2026 | |


A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

| Subject/Page | Date | COC |
|---|---|---|
| 33-32-00 (cont) | | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 215 | May 15/2026 | |
| 216 | BLANK | |
| 33-33-00 | | |
| 201 | Jan 15/2025 | |
| 202 | Jan 15/2025 | |
| 203 | Jan 15/2025 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | Jan 15/2025 | |
| 207 | Jan 15/2025 | |
| 208 | Jan 15/2025 | |
| 209 | Jan 15/2025 | |
| 210 | Jan 15/2025 | |
| 211 | Jan 15/2025 | |
| 212 | Jan 15/2025 | |
| 213 | Jan 15/2025 | |
| 214 | Jan 15/2025 | |
| 215 | Jan 15/2025 | |
| 216 | BLANK | |
| 33-34-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| R 203 | Sep 15/2026 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| R 209 | Sep 15/2026 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | BLANK | |
| 33-35-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | May 15/2024 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 215 | May 15/2024 | |
| 216 | BLANK | |
| 33-36-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | BLANK | |
| 33-41-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2026 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 33-41-00 (cont) | | |
| 208 | May 15/2026 | |
| 209 | May 15/2024 | |
| 210 | Sep 15/2025 | |
| 211 | Sep 15/2025 | |
| 212 | Sep 15/2025 | |
| 213 | Sep 15/2025 | |
| 214 | Sep 15/2025 | |
| 215 | Sep 15/2025 | |
| 216 | Sep 15/2025 | |
| 217 | Sep 15/2025 | |
| 218 | Sep 15/2025 | |
| 219 | Sep 15/2025 | |
| 220 | BLANK | |
| 33-42-21 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2025 | |
| 204 | May 15/2026 | |
| 205 | Jan 15/2025 | |
| 206 | Jan 15/2025 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 211 | May 15/2026 | |
| 212 | May 15/2026 | |
| 213 | May 15/2026 | |
| 214 | May 15/2026 | |
| 215 | May 15/2024 | |
| 216 | May 15/2024 | |
| 217 | May 15/2024 | |
| 218 | May 15/2024 | |
| 219 | May 15/2024 | |
| 220 | May 15/2024 | |
| 221 | May 15/2024 | |
| 222 | May 15/2024 | |

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

| Subject/Page | Date | COC |
|---|---|---|
| 33-42-21 (cont) | | |
| 223 | May 15/2024 | |
| 224 | May 15/2024 | |
| 225 | May 15/2024 | |
| 226 | May 15/2024 | |
| 227 | May 15/2024 | |
| 228 | May 15/2026 | |
| 229 | May 15/2026 | |
| 230 | May 15/2026 | |
| 231 | May 15/2026 | |
| 232 | May 15/2024 | |
| 233 | May 15/2025 | |
| 234 | May 15/2024 | |
| 235 | May 15/2024 | |
| 236 | May 15/2024 | |
| 33-42-21 | | |
| 501 | May 15/2024 | |
| 502 | May 15/2026 | |
| 503 | May 15/2026 | |
| 504 | May 15/2024 | |
| 33-43-10 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2026 | |
| 204 | May 15/2026 | |
| 205 | Sep 15/2025 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | Sep 15/2025 | |
| 209 | Sep 15/2025 | |
| 210 | May 15/2024 | |
| 211 | May 15/2026 | |
| 212 | May 15/2026 | |
| 213 | May 15/2024 | |
| 214 | May 15/2024 | |
| 215 | May 15/2026 | |
| 216 | May 15/2026 | |
| 33-43-11 | | |
| R 201 | Sep 15/2026 | |
| O 202 | Sep 15/2026 | |
| R 203 | Sep 15/2026 | |
| 204 | May 15/2024 | |
| 33-43-11 | | |
| 401 | May 15/2024 | |
| 402 | May 15/2024 | |
| 403 | May 15/2024 | |
| 404 | May 15/2026 | |
| 405 | Jan 15/2026 | |
| 406 | Jan 15/2025 | |
| 33-43-12 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 33-43-12 | | |
| 401 | May 15/2025 | |
| 402 | May 15/2025 | |
| 403 | Jan 15/2026 | |
| 404 | Sep 15/2025 | |
| 405 | May 15/2026 | |
| 406 | May 15/2026 | |
| 407 | May 15/2025 | |
| 408 | BLANK | |
| 33-43-13 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| R 203 | Sep 15/2026 | |
| O 204 | Sep 15/2026 | |
| 205 | May 15/2025 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| R 208 | Sep 15/2026 | |
| 209 | May 15/2024 | |
| 33-43-13 (cont) | | |
| 210 | May 15/2024 | |
| 211 | May 15/2024 | |
| 212 | Sep 15/2024 | |
| 213 | Sep 15/2024 | |
| 214 | Sep 15/2024 | |
| 215 | Sep 15/2024 | |
| 216 | Sep 15/2024 | |
| 217 | Sep 15/2024 | |
| 218 | Sep 15/2024 | |
| 219 | Sep 15/2024 | |
| 220 | BLANK | |
| 33-44-00 | | |
| 501 | May 15/2024 | |
| 502 | May 15/2024 | |
| 503 | May 15/2024 | |
| 504 | BLANK | |
| 33-44-01 | | |
| 201 | May 15/2024 | |
| 202 | Sep 15/2025 | |
| 203 | May 15/2026 | |
| 204 | May 15/2026 | |
| 205 | May 15/2026 | |
| 206 | Sep 15/2025 | |
| 207 | Sep 15/2025 | |
| 208 | May 15/2026 | |
| 209 | Sep 15/2025 | |
| 210 | Sep 15/2025 | |
| 211 | Sep 15/2025 | |
| 212 | Sep 15/2025 | |
| 213 | Sep 15/2025 | |
| 214 | Sep 15/2025 | |
| 215 | Sep 15/2025 | |
| R 216 | Sep 15/2026 | |
| R 217 | Sep 15/2026 | |
| 218 | Sep 15/2025 | |
| 219 | Sep 15/2025 | |
| 220 | Sep 15/2025 | |


A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES



ECCN 9E991 BOEING PROPRIETARY - See title page for details

| Subject/Page | Date | COC |
|---|---|---|
| 33-44-01 (cont) | | |
| R 221 | Sep 15/2026 | |
| 222 | Sep 15/2025 | |
| 223 | Sep 15/2025 | |
| 224 | Sep 15/2025 | |
| 225 | May 15/2026 | |
| 226 | Sep 15/2025 | |
| 33-44-02 | | |
| 201 | May 15/2024 | |
| 202 | Sep 15/2025 | |
| 203 | May 15/2026 | |
| 204 | Sep 15/2025 | |
| 205 | Sep 15/2025 | |
| 206 | Sep 15/2025 | |
| 207 | Sep 15/2025 | |
| 208 | Sep 15/2025 | |
| 209 | Sep 15/2025 | |
| 210 | Sep 15/2025 | |
| 211 | Sep 15/2025 | |
| 212 | Sep 15/2025 | |
| 213 | Sep 15/2025 | |
| 214 | Sep 15/2025 | |
| 215 | Sep 15/2025 | |
| 216 | May 15/2026 | |
| R 217 | Sep 15/2026 | |
| 218 | Jan 15/2026 | |
| 219 | Sep 15/2025 | |
| 220 | Sep 15/2025 | |
| 33-44-04 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| R 203 | Sep 15/2026 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2025 | |
| 208 | May 15/2025 | |
| 209 | May 15/2024 | |
| 33-44-04 (cont) | | |
| 210 | Sep 15/2024 | |
| 211 | May 15/2025 | |
| 212 | May 15/2025 | |
| 213 | May 15/2025 | |
| 214 | BLANK | |
| 33-44-13 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2026 | |
| 207 | May 15/2024 | |
| R 208 | Sep 15/2026 | |
| O 209 | Sep 15/2026 | |
| O 210 | Sep 15/2026 | |
| O 211 | Sep 15/2026 | |
| O 212 | Sep 15/2026 | |
| O 213 | Sep 15/2026 | |
| O 214 | Sep 15/2026 | |
| D 215 | Sep 15/2026 | |
| D 216 | BLANK | |
| 33-49-00 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 209 | May 15/2024 | |
| 210 | May 15/2024 | |
| 33-49-00 (cont) | | |
| 215 | May 15/2024 | |
| 216 | May 15/2024 | |
| 217 | May 15/2024 | |
| 218 | BLANK | |
| 33-51-00 | | |
| 501 | May 15/2026 | |
| 502 | May 15/2026 | |
| 503 | May 15/2024 | |
| 504 | May 15/2024 | |
| 505 | Jan 15/2026 | |
| 506 | May 15/2026 | |
| 507 | May 15/2026 | |
| 508 | May 15/2026 | |
| 509 | May 15/2026 | |
| 510 | May 15/2026 | |
| 33-51-01 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2026 | |
| 204 | May 15/2026 | |
| 205 | May 15/2026 | |
| 206 | May 15/2026 | |
| 207 | May 15/2026 | |
| 208 | May 15/2026 | |
| 209 | May 15/2026 | |
| 210 | May 15/2026 | |
| R 211 | Sep 15/2026 | |
| O 212 | Sep 15/2026 | |
| R 213 | Sep 15/2026 | |
| R 214 | Sep 15/2026 | |
| O 215 | Sep 15/2026 | |
| O 216 | Sep 15/2026 | |
| O 217 | Sep 15/2026 | |
| O 218 | Sep 15/2026 | |
| O 219 | Sep 15/2026 | |
| O 220 | Sep 15/2026 | |
| O 221 | Sep 15/2026 | |


A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS

| Subject/Page | Date | COC |
|---|---|---|
| 33-51-01 (cont) | | |
| O 222 | Sep 15/2026 | |
| O 223 | Sep 15/2026 | |
| O 224 | Sep 15/2026 | |
| 33-51-03 | | |
| 201 | Sep 15/2025 | |
| 202 | Sep 15/2025 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | Sep 15/2025 | |
| 206 | Sep 15/2025 | |
| 207 | May 15/2024 | |
| 208 | May 15/2024 | |
| 33-51-04 | | |
| 201 | Sep 15/2024 | |
| 202 | Sep 15/2024 | |
| 203 | Sep 15/2024 | |
| 204 | Sep 15/2024 | |
| 205 | Sep 15/2024 | |
| 206 | Sep 15/2024 | |
| 207 | Sep 15/2024 | |
| 208 | Sep 15/2024 | |
| 209 | Sep 15/2024 | |
| 210 | Sep 15/2024 | |
| 33-51-06 | | |
| 201 | Jan 15/2025 | |
| 202 | Sep 15/2025 | |
| 203 | Sep 15/2025 | |
| 204 | Sep 15/2025 | |
| 205 | Sep 15/2025 | |
| 206 | May 15/2025 | |
| 207 | May 15/2025 | |
| 208 | Sep 15/2025 | |
| 209 | Sep 15/2025 | |
| 210 | Sep 15/2025 | |
| 211 | Sep 15/2025 | |
| 212 | Sep 15/2025 | |
| 213 | Sep 15/2025 | |
| 33-51-06 (cont) | | |
| 214 | Sep 15/2025 | |
| 215 | Sep 15/2025 | |
| 216 | BLANK | |
| 33-51-14 | | |
| 201 | May 15/2024 | |
| 202 | May 15/2024 | |
| 203 | May 15/2024 | |
| 204 | May 15/2024 | |
| 205 | May 15/2024 | |
| 206 | May 15/2024 | |
| 33-51-15 | | |
| 201 | Sep 15/2025 | |
| 202 | May 15/2026 | |
| 203 | May 15/2026 | |
| 204 | May 15/2026 | |
| 205 | May 15/2026 | |
| 206 | May 15/2026 | |
| 207 | Sep 15/2025 | |
| 208 | Sep 15/2025 | |
| 209 | May 15/2026 | |
| 210 | May 15/2026 | |
| 211 | May 15/2026 | |
| 212 | May 15/2026 | |
| 33-51-15 | | |
| 501 | May 15/2024 | |
| 502 | Jan 15/2025 | |
| 503 | Jan 15/2025 | |
| 504 | May 15/2024 | |
| 505 | May 15/2024 | |
| 506 | May 15/2024 | |

| Subject/Page | Date | COC |
|---|---|---|

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 33-EFFECTIVE PAGES


ECCN 9E991 BOEING PROPRIETARY - See title page for details

# CHAPTER 33
# LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **LIGHTS - DDG MAINTENANCE PROCEDURES** | 33-00-00 | | 901 | PTF ALL |
| DDG 33-24-01 Passenger Lighted Information Signs and Notice System Inoperative - Preparation<br>TASK 33-00-00-040-802 | | | 901 | PTF ALL |
| DDG 33-24-01 Passenger Lighted Information Signs and Notice System Inoperative - Restoration<br>TASK 33-00-00-440-802 | | | 901 | PTF ALL |
| **INSTRUMENT AND PANEL LIGHTS - MAINTENANCE PRACTICES** | 33-11-00 | | 201 | PTF ALL |
| Instrument and Panel Lights - Deactivation<br>TASK 33-11-00-040-801 | | | 201 | PTF ALL |
| Instrument and Panel Lights - Activation<br>TASK 33-11-00-440-801 | | | 203 | PTF ALL |
| Captain Lighting Module - Module Replacement<br>TASK 33-11-00-960-801 | | | 204 | PTF ALL |
| First Officer Lighting Module - Module Replacement<br>TASK 33-11-00-960-802 | | | 207 | PTF ALL |
| Stabilizer Trim Warning Light Lamp Replacement<br>TASK 33-11-00-960-803 | | | 208 | PTF ALL |
| Stabilizer Trim Warning Light - Cap Assembly Replacement<br>TASK 33-11-00-960-804 | | | 212 | PTF ALL |
| Master Warning And Caution System Annunciator - Lamp Replacement<br>TASK 33-11-00-960-806 | | | 213 | PTF ALL |
| Master Warning And Caution System Annunciator - Light Assembly Replacement<br>TASK 33-11-00-960-807 | | | 220 | PTF ALL |
| Master Warning And Caution Light Switch - Switch Replacement<br>TASK 33-11-00-960-808 | | | 223 | PTF ALL |
| Master Warning And Caution Light Switch - Lamp Replacement<br>TASK 33-11-00-960-809 | | | 226 | PTF ALL |


# 33-CONTENTS


ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Control Stand Lighting Control Panel Replacement<br>TASK 33-11-00-960-810 | | | 229 | PTF ALL |
| **MISCELLANEOUS LIGHTS - MAINTENANCE PRACTICES** | 33-14-00 | | 201 | PTF ALL |
| Miscellaneous Lights - Deactivation<br>TASK 33-14-00-040-801 | | | 201 | PTF ALL |
| Miscellaneous Lights - Activation<br>TASK 33-14-00-440-801 | | | 209 | PTF ALL |
| Panel/Glareshield Floodlight - Light Assembly Replacement<br>TASK 33-14-00-960-801 | | | 209 | PTF ALL |
| Control Stand Floodlight - Lamp Replacement<br>TASK 33-14-00-960-802 | | | 214 | PTF ALL |
| Control Stand Floodlight - Light Assembly Replacement<br>TASK 33-14-00-960-803 | | | 217 | PTF ALL |
| Oxygen Mask Floodlight - Light Assembly Replacement<br>TASK 33-14-00-960-804 | | | 220 | PTF ALL |
| Dome Light - Lamp Replacement<br>TASK 33-14-00-960-805 | | | 223 | PTF ALL |
| Dome Light - Removal<br>TASK 33-14-00-000-801 | | | 227 | PTF ALL |
| Dome Light - Installation<br>TASK 33-14-00-400-801 | | | 230 | PTF ALL |
| Circuit Breaker Panel Light - Lamp Replacement<br>TASK 33-14-00-960-806 | | | 231 | PTF ALL |
| Dimmer Control Unit - Replacement<br>TASK 33-14-00-960-807 | | | 234 | PTF ALL |
| Panel Floodlights - Operational Test of the Standby Relay<br>TASK 33-14-00-710-801 | | | 239 | PTF ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **FLIGHT CREW LIGHTS - MAINTENANCE PRACTICES** | 33-17-00 | | 201 | PTF ALL |
| Flight Crew Lights - Deactivation TASK 33-17-00-040-801 | | | 201 | PTF ALL |
| Flight Crew Lights - Activation TASK 33-17-00-440-801 | | | 206 | PTF ALL |
| Map Light - Lamp Replacement TASK 33-17-00-960-801 | | | 206 | PTF ALL |
| Flight Kit/Reading Light - Lamp Replacement TASK 33-17-00-960-802 | | | 209 | PTF ALL |
| Chart Light - Lamp Replacement TASK 33-17-00-960-803 | | | 212 | PTF ALL |
| **MASTER DIM AND TEST (MD&T) LIGHTS - MAINTENANCE PRACTICES** | 33-18-00 | | 201 | PTF ALL |
| Master Dim and Test Lights - Deactivation TASK 33-18-00-040-801 | | | 201 | PTF ALL |
| Master Dim and Test Lights - Activation TASK 33-18-00-440-801 | | | 204 | PTF ALL |
| Indicator Light - Lamp Replacement TASK 33-18-00-960-801 | | | 205 | PTF ALL |
| Indicator Light - Light Assembly Replacement TASK 33-18-00-960-802 | | | 208 | PTF ALL |
| Lighted Pushbutton Switch - Lamp Replacement TASK 33-18-00-960-803 | | | 209 | PTF ALL |
| Lightplate - Replacement TASK 33-18-00-960-804 | | | 215 | PTF ALL |
| Annunciator And Dimming Module - Module Replacement TASK 33-18-00-960-805 | | | 217 | PTF ALL |
| Master Dim and Test System - Module Replacement TASK 33-18-00-960-806 | | | 222 | PTF ALL |
| Master Dim and Test - Operational Test TASK 33-18-00-710-801 | | | 225 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **PASSENGER COMPARTMENT LIGHTS - ADJUSTMENT/TEST** | 33-20-00 | | 501 | PTF ALL |
| Passenger Compartment Lights - Operational Test<br>TASK 33-20-00-710-801 | | | 501 | PTF ALL |
| Passenger Compartment Lights - BSI Generation 3.X OPS Loadable Software Airplane Part (LSAP) Loading<br>TASK 33-20-00-470-801 | | | 508 | PTF ALL |
| **WINDOW LIGHTS - MAINTENANCE PRACTICES** | 33-21-00 | | 201 | PTF ALL |
| BSI Window LED Lighting - Deactivation<br>TASK 33-21-00-040-801 | | | 201 | PTF ALL |
| BSI Window LED Lighting - Activation<br>TASK 33-21-00-440-801 | | | 204 | PTF ALL |
| Window Light - LED Light Assembly Replacement<br>TASK 33-21-00-960-801 | | | 205 | PTF ALL |
| Window Light - Overwing Exit Light Assembly Replacement<br>TASK 33-21-00-960-802 | | | 210 | PTF ALL |
| **CEILING LIGHTS - MAINTENANCE PRACTICES** | 33-22-00 | | 201 | PTF ALL |
| BSI Ceiling LED Lighting - Deactivation<br>TASK 33-22-00-040-801 | | | 201 | PTF ALL |
| BSI Ceiling LED Lighting - Activation<br>TASK 33-22-00-440-801 | | | 205 | PTF ALL |
| BSI Entry and Cove LED Lighting - Deactivation<br>TASK 33-22-00-040-802 | | | 206 | PTF ALL |
| BSI Entry and Cove LED Lighting - Activation<br>TASK 33-22-00-440-802 | | | 210 | PTF ALL |
| Ceiling Light, Bin/Wash - LED Light Assembly Replacement<br>TASK 33-22-00-960-801 | | | 211 | PTF ALL |
| Ceiling Light, Direct - LED Light Assembly Replacement<br>TASK 33-22-00-960-802 | | | 218 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Ceiling Light, Cove - LED Light Assembly Replacement<br>TASK 33-22-00-960-803 | | | 224 | PTF ALL |
| **CEILING LIGHTS - INSPECTION/CHECK** | 33-22-00 | | 601 | PTF ALL |
| BSI LED Light - Inspection/Check<br>TASK 33-22-00-200-801 | | | 601 | PTF ALL |
| **READING LIGHTS - MAINTENANCE PRACTICES** | 33-23-00 | | 201 | PTF ALL |
| Reading Lights - Deactivation<br>TASK 33-23-00-040-801 | | | 201 | PTF ALL |
| Reading Lights - Activation<br>TASK 33-23-00-440-801 | | | 204 | PTF ALL |
| Reading Light - Light Assembly Replacement<br>TASK 33-23-00-960-801 | | | 205 | PTF ALL |
| Reading Light - Adjustment and Test<br>TASK 33-23-00-820-801 | | | 211 | PTF ALL |
| **INFORMATION SIGNS - MAINTENANCE PRACTICES** | 33-25-00 | | 201 | PTF ALL |
| Information Signs - Deactivation<br>TASK 33-25-00-040-801 | | | 201 | PTF ALL |
| Information Signs - Activation<br>TASK 33-25-00-440-801 | | | 205 | PTF ALL |
| Information Sign - Light Assembly Replacement for a Passenger Service Unit (PSU) Sign<br>TASK 33-25-00-960-801 | | | 205 | PTF ALL |
| Information Sign - Lamp Replacement for a No-Smoking/Fasten-Seat-Belt Sign<br>TASK 33-25-00-960-803 | | | 210 | PTF ALL |
| Information Sign - Light Assembly Replacement for a Return-to-Seat Sign<br>TASK 33-25-00-960-802 | | | 213 | PTF ALL |
| **ATTENDANT WORK LIGHTS - MAINTENANCE PRACTICES** | 33-26-01 | | 201 | PTF ALL |
| Attendant Work Lights - Deactivation<br>TASK 33-26-01-040-801 | | | 201 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Attendant Work Lights - Activation<br>TASK 33-26-01-440-801 | | | 204 | PTF ALL |
| Attendant Work Light - Lamp Replacement<br>TASK 33-26-01-960-801 | | | 205 | PTF ALL |
| Attendant Work Light - Light Assembly Replacement<br>TASK 33-26-01-960-802 | | | 209 | PTF ALL |
| **GALLEY LIGHTS - MAINTENANCE PRACTICES** | 33-26-02 | | 201 | PTF ALL |
| FWD Galley Area Lights - Deactivation<br>TASK 33-26-02-040-801 | | | 201 | PTF ALL |
| FWD Galley Area Lights - Activation<br>TASK 33-26-02-440-801 | | | 202 | PTF ALL |
| Galley Light - Lamp Replacement<br>TASK 33-26-02-960-801 | | | 203 | PTF ALL |
| Galley Light - Ballast Replacement<br>TASK 33-26-02-960-802 | | | 207 | PTF ALL |
| **LAVATORY LIGHTS AND SIGNS - MAINTENANCE PRACTICES** | 33-26-03 | | 201 | PTF ALL |
| Lavatory Lights - Deactivation<br>TASK 33-26-03-040-801 | | | 201 | PTF ALL |
| Lavatory Lights - Activation<br>TASK 33-26-03-440-801 | | | 201 | PTF ALL |
| Lavatory Light - LED Light Replacement<br>TASK 33-26-03-960-803 | | | 202 | PTF ALL |
| Lavatory-Occupied Sign - Light Assembly Replacement<br>TASK 33-26-03-960-804 | | | 205 | PTF ALL |
| Lavatory Door Switch - Replacement<br>TASK 33-26-03-960-805 | | | 209 | PTF ALL |
| **CLOSET LIGHTS - MAINTENANCE PRACTICES** | 33-26-04 | | 201 | PTF ALL |
| Closet Lights - Deactivation<br>TASK 33-26-04-040-801 | | | 201 | PTF ALL |
| Closet Lights - Activation<br>TASK 33-26-04-440-801 | | | 203 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Closet Light Assembly Replacement<br>TASK 33-26-04-960-801 | | | 205 | PTF ALL |
| **CLOSET LIGHTS - ADJUSTMENT/TEST** | 33-26-04 | | 501 | PTF ALL |
| Closet Lights - Operational Test<br>TASK 33-26-04-710-801 | | | 501 | PTF ALL |
| **PASSENGER AND LAVATORY CALL LIGHTS - MAINTENANCE PRACTICES** | 33-27-00 | | 201 | PTF ALL |
| Passenger and Lavatory Call Lights - Deactivation<br>TASK 33-27-00-040-801 | | | 201 | PTF ALL |
| Passenger and Lavatory Call Lights - Activation<br>TASK 33-27-00-440-801 | | | 204 | PTF ALL |
| Passenger Call Light - PSU LED Call Light Replacement<br>TASK 33-27-00-960-801 | | | 204 | PTF ALL |
| Lavatory Call Light - Light/Switch Replacement<br>TASK 33-27-00-960-802 | | | 208 | PTF ALL |
| **ENTRY LIGHTS - MAINTENANCE PRACTICES** | 33-29-00 | | 201 | PTF ALL |
| Dim Entry Light Assembly Replacement<br>TASK 33-29-00-960-801 | | | 201 | PTF ALL |
| **WHEEL WELL LIGHTS - MAINTENANCE PRACTICES** | 33-32-00 | | 201 | PTF ALL |
| Wheel Well Lights - Deactivation<br>TASK 33-32-00-040-801 | | | 201 | PTF ALL |
| Wheel Well Lights - Activation<br>TASK 33-32-00-440-801 | | | 207 | PTF ALL |
| Wheel Well Light - Light Assembly Replacement<br>TASK 33-32-00-960-801 | | | 208 | PTF ALL |
| Wheel Well Lights - Operational Test<br>TASK 33-32-00-710-801 | | | 215 | PTF ALL |
| **AIR CONDITIONING COMPARTMENT LIGHTS - MAINTENANCE PRACTICES** | 33-33-00 | | 201 | PTF ALL |
| Air Conditioning Compartment Lights Deactivation<br>TASK 33-33-00-040-801 | | | 201 | PTF ALL |


# 33-CONTENTS


ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Air Conditioning Compartment Lights Activation<br>TASK 33-33-00-440-801 | | | 206 | PTF ALL |
| Air Conditioning Compartment LED Light Assembly Replacement<br>TASK 33-33-00-960-801 | | | 208 | PTF ALL |
| **ELECTRONIC EQUIPMENT COMPARTMENT LIGHTS - MAINTENANCE PRACTICES** | 33-34-00 | | 201 | PTF ALL |
| Electronic Equipment Compartment Lights Deactivation<br>TASK 33-34-00-040-801 | | | 201 | PTF ALL |
| Electronic Equipment Compartment Lights Activation<br>TASK 33-34-00-440-801 | | | 205 | PTF ALL |
| Electronic Equipment Compartment LED Light Assembly Replacement<br>TASK 33-34-00-960-801 | | | 206 | PTF ALL |
| **ACCESSORY COMPARTMENT LIGHTS - MAINTENANCE PRACTICES** | 33-35-00 | | 201 | PTF ALL |
| Accessory Compartment Lights - Deactivation<br>TASK 33-35-00-040-801 | | | 201 | PTF ALL |
| Accessory Compartment Lights - Activation<br>TASK 33-35-00-440-801 | | | 207 | PTF ALL |
| Accessory Compartment Light - Lamp Replacement<br>TASK 33-35-00-960-801 | | | 208 | PTF ALL |
| **CARGO COMPARTMENT LIGHTS - MAINTENANCE PRACTICES** | 33-36-00 | | 201 | PTF ALL |
| Cargo Compartment Lights Deactivation<br>TASK 33-36-00-040-801 | | | 201 | PTF ALL |
| Cargo Compartment Lights Activation<br>TASK 33-36-00-440-801 | | | 202 | PTF ALL |
| Cargo Compartment Ceiling Light Assembly Replacement<br>TASK 33-36-00-960-801 | | | 204 | PTF ALL |
| Cargo Compartment Door Sill Light Assembly Replacement<br>TASK 33-36-00-960-802 | | | 208 | PTF ALL |


# 33-CONTENTS


ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **WING ILLUMINATION LIGHTS - MAINTENANCE PRACTICES** | 33-41-00 | | 201 | PTF ALL |
| Wing Illumination Light - Deactivation TASK 33-41-00-040-801 | | | 201 | PTF ALL |
| Wing Illumination Light - Activation TASK 33-41-00-440-801 | | | 202 | PTF ALL |
| Wing Illumination Light - Lamp Replacement TASK 33-41-00-960-801 | | | 202 | PTF ALL; AIRPLANES WITH LAMP LIGHTS |
| Wing Illumination Light - LED Module Assembly Replacement TASK 33-41-00-960-804 | | | 207 | PTF ALL; AIRPLANES WITH LED MODULE ASSEMBLY LIGHTS |
| Wing Illumination Light - Transformer Replacement TASK 33-41-00-960-802 | | | 210 | PTF ALL; AIRPLANES WITH LAMP LIGHTS |
| Wing Illumination Light - Light Assembly Replacement TASK 33-41-00-960-803 | | | 215 | PTF ALL |
| Wing Illumination Light - Operational Test TASK 33-41-00-710-801 | | | 219 | PTF ALL |
| **LED LANDING, TAXI, AND RUNWAY TURNOFF LIGHTS (LTRTL) - MAINTENANCE PRACTICES** | 33-42-21 | | 201 | PTF ALL |
| Fixed Landing Light - Deactivation TASK 33-42-21-040-801 | | | 201 | PTF ALL |
| Fixed Landing Light - Activation TASK 33-42-21-440-801 | | | 203 | PTF ALL |
| Fixed Landing Light - Main Array Assembly Replacement TASK 33-42-21-960-801 | | | 203 | PTF ALL |
| Fixed Landing Light - Power Supply Replacement TASK 33-42-21-960-802 | | | 212 | PTF ALL |
| Fixed Landing Light - Lens Temporary Repair TASK 33-42-21-350-801 | | | 220 | PTF ALL |
| Runway Turnoff Lights - Deactivation TASK 33-42-21-040-802 | | | 225 | PTF ALL |
| Runway Turnoff Lights - Activation TASK 33-42-21-440-802 | | | 227 | PTF ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Runway Turnoff Light - Light Assembly Replacement<br>TASK 33-42-21-960-803 | | | 227 | PTF ALL |
| Taxi Light Relay - Replacement<br>TASK 33-42-21-960-804 | | | 234 | PTF ALL |
| **LED LANDING, TAXI, AND RUNWAY TURNOFF LIGHTS (LTRTL) - ADJUSTMENT/TEST** | 33-42-21 | | 501 | PTF ALL |
| LTRTL Main Array - Operational Test<br>TASK 33-42-21-710-801 | | | 501 | PTF ALL |
| Taxi Light Relay - Operational Test<br>TASK 33-42-21-710-802 | | | 502 | PTF ALL |
| **POSITION LIGHTS - MAINTENANCE PRACTICES** | 33-43-10 | | 201 | PTF ALL |
| Position Lights Deactivation<br>TASK 33-43-10-040-801 | | | 201 | PTF ALL |
| Position Lights Activation<br>TASK 33-43-10-440-801 | | | 202 | PTF ALL |
| Position Lights Transformer Replacement<br>TASK 33-43-10-960-801 | | | 203 | PTF ALL |
| Forward Position Lights Power Supply Unit Replacement<br>TASK 33-43-10-960-803 | | | 208 | PTF ALL |
| Position Lights Operational Test<br>TASK 33-43-10-710-801 | | | 211 | PTF ALL |
| Winglet (AFT) Marker and Winglet Anti-Collision Lights - Disconnect the Electrical Connectors<br>TASK 33-43-10-020-801 | | | 211 | PTF ALL |
| Winglet (AFT) Marker and Winglet Anti-Collision Lights - Connect the Electrical Connectors<br>TASK 33-43-10-420-801 | | | 215 | PTF ALL |
| **FORWARD POSITION LIGHTS - MAINTENANCE PRACTICE** | 33-43-11 | | 201 | PTF ALL |
| Forward Position Lights LED Module Replacement<br>TASK 33-43-11-960-801 | | | 201 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CHAPTER 33
## LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **FORWARD POSITION LIGHT - REMOVAL/INSTALLATION** | 33-43-11 | | 401 | PTF ALL |
| Forward Position Light Removal TASK 33-43-11-000-801 | | | 401 | PTF ALL |
| Forward Position Light Installation TASK 33-43-11-400-801 | | | 404 | PTF ALL |
| **WINGLET AFT MARKER LIGHTS - MAINTENANCE PRACTICES** | 33-43-12 | | 201 | PTF ALL |
| Aft Marker Light LED Optic Assembly Replacement TASK 33-43-12-960-801 | | | 201 | PTF ALL |
| **WINGLET AFT MARKER LIGHTS - REMOVAL/INSTALLATION** | 33-43-12 | | 401 | PTF ALL |
| Aft Marker Light Removal TASK 33-43-12-000-801 | | | 401 | PTF ALL |
| Aft Marker Light Installation TASK 33-43-12-400-801 | | | 405 | PTF ALL |
| **TAILCONE POSITION LIGHTS - MAINTENANCE PRACTICES** | 33-43-13 | | 201 | PTF ALL |
| Tailcone Position Lights Deactivation TASK 33-43-13-040-801 | | | 201 | PTF ALL |
| Tailcone Position Lights Activation TASK 33-43-13-440-801 | | | 202 | PTF ALL |
| Tailcone Position Lights Replacement TASK 33-43-13-960-801 | | | 202 | PTF ALL |
| Tailcone Position Lights Transformer Replacement TASK 33-43-13-960-802 | | | 208 | PTF ALL |
| Tailcone Position Lights LED Module Replacement TASK 33-43-13-960-803 | | | 212 | PTF ALL |
| Tailcone Position Lights Housing Assembly Replacement TASK 33-43-13-960-804 | | | 217 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| **ANTI-COLLISION LIGHTS - TEST** | 33-44-00 | | 501 | PTF ALL |
| Anti-Collision Lights - Operational Test<br>TASK 33-44-00-710-801 | | | 501 | PTF ALL |
| **UPPER ANTI-COLLISION LIGHT - MAINTENANCE PRACTICES** | 33-44-01 | | 201 | PTF ALL |
| Upper Anti-Collision Light Deactivation<br>TASK 33-44-01-040-801 | | | 201 | PTF ALL |
| Upper Anti-Collision Light Activation<br>TASK 33-44-01-440-801 | | | 201 | PTF ALL |
| Upper Anti-Collision Light Lamp Assembly Replacement<br>TASK 33-44-01-960-806 | | | 202 | PTF ALL |
| Upper Anti-Collision Light - Light Assembly Replacement<br>TASK 33-44-01-960-801 | | | 208 | PTF ALL |
| Upper Anti-Collision Light Lens Replacement<br>TASK 33-44-01-960-805 | | | 213 | PTF ALL |
| Upper Anti-Collision Light - Power Supply Replacement<br>TASK 33-44-01-960-802 | | | 216 | PTF ALL |
| Upper Anti-Collision Light - Adapter Plate Replacement<br>TASK 33-44-01-960-803 | | | 221 | PTF ALL |
| **LOWER ANTI-COLLISION LIGHT - MAINTENANCE PRACTICES** | 33-44-02 | | 201 | PTF ALL |
| Lower Anti-Collision Light Deactivation<br>TASK 33-44-02-040-801 | | | 201 | PTF ALL |
| Lower Anti-Collision Light Activation<br>TASK 33-44-02-440-801 | | | 201 | PTF ALL |
| Lower Anti-Collision Light - Light Assembly Replacement<br>TASK 33-44-02-960-802 | | | 202 | PTF ALL |
| Lower Anti-Collision Light Lamp Assembly Replacement<br>TASK 33-44-02-960-805 | | | 209 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Lower Anti-Collision Light Lens Replacement<br>TASK 33-44-02-960-806 | | | 213 | PTF ALL |
| Lower Anti-Collision Light - Power Supply Replacement<br>TASK 33-44-02-960-804 | | | 216 | PTF ALL |
| **TAILCONE ANTI-COLLISION LIGHT - MAINTENANCE PRACTICES** | 33-44-04 | | 201 | PTF ALL |
| Tailcone Anti-Collision Light Deactivation<br>TASK 33-44-04-040-801 | | | 201 | PTF ALL |
| Tailcone Anti-Collision Light Activation<br>TASK 33-44-04-440-801 | | | 202 | PTF ALL |
| Tailcone Anti-Collision Light Replacement<br>TASK 33-44-04-960-801 | | | 202 | PTF ALL |
| Tailcone Anti-Collision Light Transformer Replacement<br>TASK 33-44-04-960-802 | | | 203 | PTF ALL |
| Tailcone Anti-Collision Light LED Module Replacement<br>TASK 33-44-04-960-803 | | | 207 | PTF ALL |
| Tailcone Anti-Collision Light Housing Assembly Replacement<br>TASK 33-44-04-960-804 | | | 211 | PTF ALL |
| **WINGLET ANTI-COLLISION LIGHTS - MAINTENANCE PRACTICES** | 33-44-13 | | 201 | PTF ALL |
| Winglet Anti-Collision Light Deactivation<br>TASK 33-44-13-040-801 | | | 201 | PTF ALL |
| Winglet Anti-Collision Light Activation<br>TASK 33-44-13-440-801 | | | 202 | PTF ALL |
| Winglet Anti-Collision Light Removal<br>TASK 33-44-13-000-801 | | | 202 | PTF ALL |
| Winglet Anti-Collision Light Installation<br>TASK 33-44-13-400-801 | | | 206 | PTF ALL |
| Winglet Anti-Collision Light Transformer Replacement<br>TASK 33-44-13-960-801 | | | 208 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Winglet Anti-Collision Light LED Module and Power Supply Unit Replacement<br>TASK 33-44-13-960-802 | | | 212 | PTF ALL |
| **LOGO LIGHTS - MAINTENANCE PRACTICES** | 33-49-00 | | 201 | PTF ALL |
| Logo Light - Deactivation<br>TASK 33-49-00-040-801 | | | 201 | PTF ALL |
| Logo Light - Activation<br>TASK 33-49-00-440-801 | | | 202 | PTF ALL |
| Logo Light - Lamp Replacement<br>TASK 33-49-00-960-801 | | | 202 | PTF ALL; AIRPLANES WITH LAMP LIGHTS |
| Logo Light - LED Module Assembly Replacement<br>TASK 33-49-00-960-803 | | | 208 | PTF ALL; AIRPLANES WITH LED MODULE ASSEMBLY LIGHTS |
| Logo Light - Light Assembly Replacement<br>TASK 33-49-00-960-802 | | | 212 | PTF ALL |
| **EMERGENCY LIGHTS - ADJUSTMENT/TEST** | 33-51-00 | | 501 | PTF ALL |
| Emergency Lights Operational Check<br>TASK 33-51-00-710-801 | | | 501 | PTF ALL |
| Emergency Lights Operational Test<br>TASK 33-51-00-720-801 | | | 508 | PTF ALL |
| **EXIT SIGNS - MAINTENANCE PRACTICES** | 33-51-01 | | 201 | PTF ALL |
| Exit Sign - Lamp Replacement<br>TASK 33-51-01-960-801 | | | 201 | PTF ALL |
| Exit Sign - Light Assembly Replacement<br>TASK 33-51-01-960-802 | | | 211 | PTF ALL |
| **AREA LIGHTS - MAINTENANCE PRACTICES** | 33-51-03 | | 201 | PTF ALL |
| Emergency Aisle Light (EAL) - Lens Replacement<br>TASK 33-51-03-960-801 | | | 201 | PTF ALL |
| Emergency Aisle Light (EAL) – Assembly Replacement<br>TASK 33-51-03-960-802 | | | 205 | PTF ALL |
| **SLIDE/OVERWING LIGHTS - MAINTENANCE PRACTICES** | 33-51-04 | | 201 | PTF ALL |
| Slide/Overwing Light - Lamp Replacement<br>TASK 33-51-04-960-801 | | | 201 | PTF ALL |




ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Slide/Overwing Light - Light Assembly Replacement<br>TASK 33-51-04-960-802 | | | 206 | PTF ALL |
| **POWER SUPPLIES - MAINTENANCE PRACTICES** | 33-51-06 | | 201 | PTF ALL |
| Power Supply - Charge the Battery Packs<br>TASK 33-51-06-610-801 | | | 201 | PTF ALL |
| Power Supply - Fuse Replacement<br>TASK 33-51-06-960-801 | | | 202 | PTF ALL |
| Power Supply - Battery Pack Replacement<br>TASK 33-51-06-960-802 | | | 208 | PTF ALL |
| Power Supply - Power Supply Replacement<br>TASK 33-51-06-960-803 | | | 210 | PTF ALL |
| Power Supply - Battery Pack Capacity Check<br>TASK 33-51-06-200-801 | | | 212 | PTF ALL |
| Power Supply - Battery Pack Deep-Cycle Procedure<br>TASK 33-51-06-600-801 | | | 214 | PTF ALL |
| **FLOOR PROXIMITY LIGHTS ON GALLEYS, LAVATORIES, CLOSETS, AND WINDSCREENS - MAINTENANCE PRACTICES** | 33-51-14 | | 201 | PTF ALL |
| Floor Proximity Light - Lamp Replacement<br>TASK 33-51-14-960-801 | | | 201 | PTF ALL |
| Floor Proximity Light - Light Assembly Replacement<br>TASK 33-51-14-960-802 | | | 204 | PTF ALL |
| **FLOOR PROXIMITY LIGHTS, PHOTOLUMINESCENT - MAINTENANCE PRACTICES** | 33-51-15 | | 201 | PTF ALL |
| Floor Proximity Light - Charge the Photoluminescent Strips<br>TASK 33-51-15-860-801 | | | 201 | PTF ALL |
| Floor Proximity Light - Photoluminescent Strip Replacement<br>TASK 33-51-15-960-801 | | | 207 | PTF ALL |
| Floor Proximity Light - Photoluminescent Strip Cleaning<br>TASK 33-51-15-100-801 | | | 211 | PTF ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 33
LIGHTS


| SUBJECT | CHAPTER SECTION SUBJECT | CONF | PAGE | EFFECT |
|---|---|---|---|---|
| Floor Proximity Light - Photoluminescent Strip Inspection<br>TASK 33-51-15-210-801 | | | 211 | PTF ALL |
| **FLOOR PROXIMITY LIGHTS, CABIN LIGHT INTENSITY - ADJUSTMENT/TEST** | 33-51-15 | | 501 | PTF ALL |
| Cabin Lighting - Measure the Available Light Intensity<br>TASK 33-51-15-860-802 | | | 501 | PTF ALL |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LIGHTS - DDG MAINTENANCE PROCEDURES

### 1. General

A. This procedure has the maintenance tasks for the Master Minimum Equipment List (MMEL) maintenance requirements as shown in the Dispatch Deviations Guide (DDG). These tasks prepare the airplane for flight with systems/components that are inoperative.

B. This procedure also has the tasks that put the airplane back to its usual condition.

C. These are the tasks for the components in the lights system:

(1) DDG 33-24-01 Passenger Lighted Information Signs and Notice System Inoperative - Preparation

(2) DDG 33-24-01 Passenger Lighted Information Signs and Notice System Inoperative - Restoration

**TASK 33-00-00-040-802**

### 2. DDG 33-24-01 Passenger Lighted Information Signs and Notice System Inoperative - Preparation

#### A. General

(1) This task gives the maintenance steps which prepare the applicable passenger seat or lavatory for flight with the passenger lighted information signs and notice system inoperative.

NOTE: A passenger seat or lavatory is inoperative if the passenger lighted information sign is not easy to see.

#### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

#### C. Passenger Lighted Information Signs and Notice System Inoperative Preparation

**SUBTASK 33-00-00-040-001**

(1) Do these steps to block and placard each inoperative passenger seat or lavatory:

(a) If necessary, attach tapes or ropes across the seat or lavatory door to show that the area is not available.

1) Make sure that the tape or rope is a color that is easy to see against the color of the seat or lavatory door.

(b) Put DO NOT OCCUPY placards at applicable locations to show that the seat or lavatory is not available.

1) Make sure that the placards are easy to see.

(c) For a lavatory that is not available, close and lock the lavatory door.

**——— END OF TASK ———**

**TASK 33-00-00-440-802**

### 3. DDG 33-24-01 Passenger Lighted Information Signs and Notice System Inoperative - Restoration

#### A. General

(1) This task restores the airplane back to its usual condition after operation with the passenger lighted information signs and notice system inoperative.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**B. Location Zones**

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

**C. Passenger Lighted Information Signs and Notice System Restoration**

**SUBTASK 33-00-00-000-002**

(1) Remove the DO NOT OCCUPY placards, ropes, and tapes from the applicable passenger seat or lavatory.

(a) If necessary, unlock the lavatory door.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## INSTRUMENT AND PANEL LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Instrument and Panel Lights Deactivation.

(2) Instrument and Panel Lights Activation.

(3) Captain's Lighting Module - Module Replacement.

(4) First Officer's Lighting Module - Module Replacement.

(5) Stabilizer Trim Warning Light - Lamp Replacement.

(6) Stabilizer Trim Warning Light - Cap Assembly Replacement.

(7) Master Warning And Caution System Annunciator - Lamp Replacement.

NOTE: A spare lamp box is on the right sidewall that is forward of the first officers seat.

(8) Master Warning And Caution System Annunciator - Light Assembly Replacement.

(9) Master Warning And Caution Light Switch - Switch Replacement.

(10) Master Warning And Caution Light Switch - Lamp Replacement.

(11) Control Stand Lighting Control Panel Replacement.

**TASK 33-11-00-040-801**

### 2. Instrument and Panel Lights - Deactivation

#### A. General

(1) This procedure removes electrical power to the Instrument and Panel Lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

#### C. Procedure

**SUBTASK 33-11-00-860-001**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 6 | C00148 | ANTI-ICE & RAIN ENG 1 & WING CONT |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |
| B | 9 | C00440 | FLIGHT CONTROL AUTO SPEED BRAKE |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 5 | C00540 | FUEL SPAR VALVE IND |
| B | 7 | C00361 | FUEL CROSS FEED VALVE CONT |
| B | 9 | C00331 | PANEL & INSTR 28V PRI CAPT & CTR |
| B | 10 | C00335 | PANEL & INSTR 28V PRI F/O |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |
| C | 10 | C00284 | PANEL & INSTR ELEX PANEL |
| C | 13 | C01277 | MASTER CAUTION ANNUNCIATOR CONT 3 |
| D | 8 | C00701 | EMER PANEL LTG |
| D | 9 | C00323 | OVERHEAD 28V PRI |
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |
| E | 4 | C01396 | ENGINE FUEL ENGINE 2 HPSOV IND |
| E | 6 | C01395 | ENGINE FUEL ENGINE 1 HPSOV IND |
| E | 11 | C00313 | INDICATOR MASTER DIM SECT 1 |
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |
| E | 13 | C00315 | INDICATOR MASTER DIM SECT 3 |
| E | 14 | C00316 | INDICATOR MASTER DIM SECT 4 |
| F | 11 | C00317 | INDICATOR MASTER DIM SECT 5 |
| F | 12 | C00318 | INDICATOR MASTER DIM SECT 6 |
| F | 13 | C01179 | INDICATOR MASTER DIM SECT 7 |
| F | 14 | C01180 | INDICATOR MASTER DIM SECT 8 |

**D. Instrument and Panel Lights - Tryout**

NOTE: This tryout is to make sure the Instrument and Panel Lights are in a zero energy state.

**SUBTASK 33-11-00-700-001**

(1) On the captain's instrument panel, P1:

(a) Turn the PANEL control clockwise to the full BRIGHT position.

(b) Set the switch for the master dim and test lights to TEST.

(2) Make sure that these panel, column, and instrument lights do not come on:

(a) Captain's Instrument Panel, P1

(b) Center Instrument Panel, P2

(c) AFT and FWD Overhead Panel, P5

(d) Glareshield Panel, P7

(e) AFT and FWD Electronics Panels, P8 and P9

(f) Captain's Auxiliary Panel, P21

(g) Captain's Control Column

(3) Turn the PANEL control counter clockwise to the OFF position.

**SUBTASK 33-11-00-700-002**

(4) On the first officer's instrument panel P3, turn the PANEL control clockwise to the full BRIGHT position.

(5) Make sure that these panel, column, and instrument lights do not come on:

(a) First Officer's Instrument Panel, P3

(b) First Officer's Auxiliary Panel, P23



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) First Officer's Control Column

(6) Turn the PANEL control counter clockwise to the OFF position.

(7) On the captain's instrument panel P1, set the switch for the master dim and test lights to DIM.

——— END OF TASK ———

**TASK 33-11-00-440-801**

## 3. Instrument and Panel Lights - Activation

### A. General

(1) This procedure adds electrical power to the Instrument and Panel Lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Procedure

**SUBTASK 33-11-00-860-002**

(1) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 6 | C00148 | ANTI-ICE & RAIN ENG 1 & WING CONT |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |
| B | 9 | C00440 | FLIGHT CONTROL AUTO SPEED BRAKE |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 5 | C00540 | FUEL SPAR VALVE IND |
| B | 7 | C00361 | FUEL CROSS FEED VALVE CONT |
| B | 9 | C00331 | PANEL & INSTR 28V PRI CAPT & CTR |
| B | 10 | C00335 | PANEL & INSTR 28V PRI F/O |
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |
| C | 10 | C00284 | PANEL & INSTR ELEX PANEL |
| C | 13 | C01277 | MASTER CAUTION ANNUNCIATOR CONT 3 |
| D | 8 | C00701 | EMER PANEL LTG |
| D | 9 | C00323 | OVERHEAD 28V PRI |
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |
| E | 4 | C01396 | ENGINE FUEL ENGINE 2 HPSOV IND |
| E | 6 | C01395 | ENGINE FUEL ENGINE 1 HPSOV IND |
| E | 11 | C00313 | INDICATOR MASTER DIM SECT 1 |
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 13 | C00315 | INDICATOR MASTER DIM SECT 3 |
| E | 14 | C00316 | INDICATOR MASTER DIM SECT 4 |
| F | 11 | C00317 | INDICATOR MASTER DIM SECT 5 |
| F | 12 | C00318 | INDICATOR MASTER DIM SECT 6 |
| F | 13 | C01179 | INDICATOR MASTER DIM SECT 7 |
| F | 14 | C01180 | INDICATOR MASTER DIM SECT 8 |

**——— END OF TASK ———**

**TASK 33-11-00-960-801**

**4. Captain Lighting Module - Module Replacement**

(Figure 201)

**A. General**

(1) The captain's lighting module is located near the rudder pedal adjustment crank below the captain's instrument panel (P1).

**B. Tools/Equipment**

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

**C. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |

**D. Procedure**

**SUBTASK 33-11-00-860-003**

(1) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 9 | C00331 | PANEL & INSTR 28V PRI CAPT & CTR |

(2) Open the Captain's Lighting Module, P41

(a) 41C1 5.7V SEC MCP PANEL LIGHTING

(b) 41C2 28V PRIM CAPT PANEL LIGHTING

(c) 41C3 5V SEC CAPT PANEL LIGHTING

(d) 41C4 5V SEC CAPT PANEL LIGHTING

(e) 41C5 28V PRIM CENTER PANEL LIGHTING

(f) 41C6 5V SEC CENTER PANEL LIGHTING

(g) 41C7 5V SEC CENTER PANEL LIGHTING

**SUBTASK 33-11-00-960-001**

(3) Do these steps to replace lighting module [2]:

(a) Loosen the fasteners [3].

(b) Pull the lighting module [2] away from the rudder pedals enough to disconnect the electrical connectors [1].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Disconnect the electrical connectors [1].

(d) Tag the electrical connectors [1] for the installation.

(e) Remove the lighting module [2].

(f) Connect the electrical connectors [1] to the replacement lighting module [2].

(g) Install the replacement lighting module [2].

1) Align the pins on the back of the lighting module [2] with the holes in the bracket below the rudder pedal adjustment crank.

(h) Tighten the fasteners [3].

SUBTASK 33-11-00-860-005

(4) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 9 | C00331 | PANEL & INSTR 28V PRI CAPT & CTR |

(5) Close the Captain's Lighting Module, P41

(a) 41C1 5.7V SEC MCP PANEL LIGHTING

(b) 41C2 28V PRIM CAPT PANEL LIGHTING

(c) 41C3 5V SEC CAPT PANEL LIGHTING

(d) 41C4 5V SEC CAPT PANEL LIGHTING

(e) 41C5 28V PRIM CENTER PANEL LIGHTING

(f) 41C6 5V SEC CENTER PANEL LIGHTING

(g) 41C7 5V SEC CENTER PANEL LIGHTING

SUBTASK 33-11-00-940-001

(6) If it is necessary, put a windshield cover, STD-1176 on the windshield.

NOTE: During the day, the changes in light intensity are not easy to see.

SUBTASK 33-11-00-710-001

(7) Do these steps to test the replacement lighting module [2]:

(a) On the captain's instrument panel P1, turn the PANEL control clockwise to the full BRIGHT position.

(b) Make sure that these panels and column come on and are of the same intensity:

1) Captain's Instrument Panel, P1

2) Center Instrument Panel, P2

3) AFDS Mode Control Panel, P7

4) Captain's EFIS Panel, P7

5) Captain's Auxiliary Panel, P21

6) Captain's Control Column


SUBTASK 33-11-00-940-002

(8) If a windshield cover, STD-1176 was used on the windshield, remove it.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

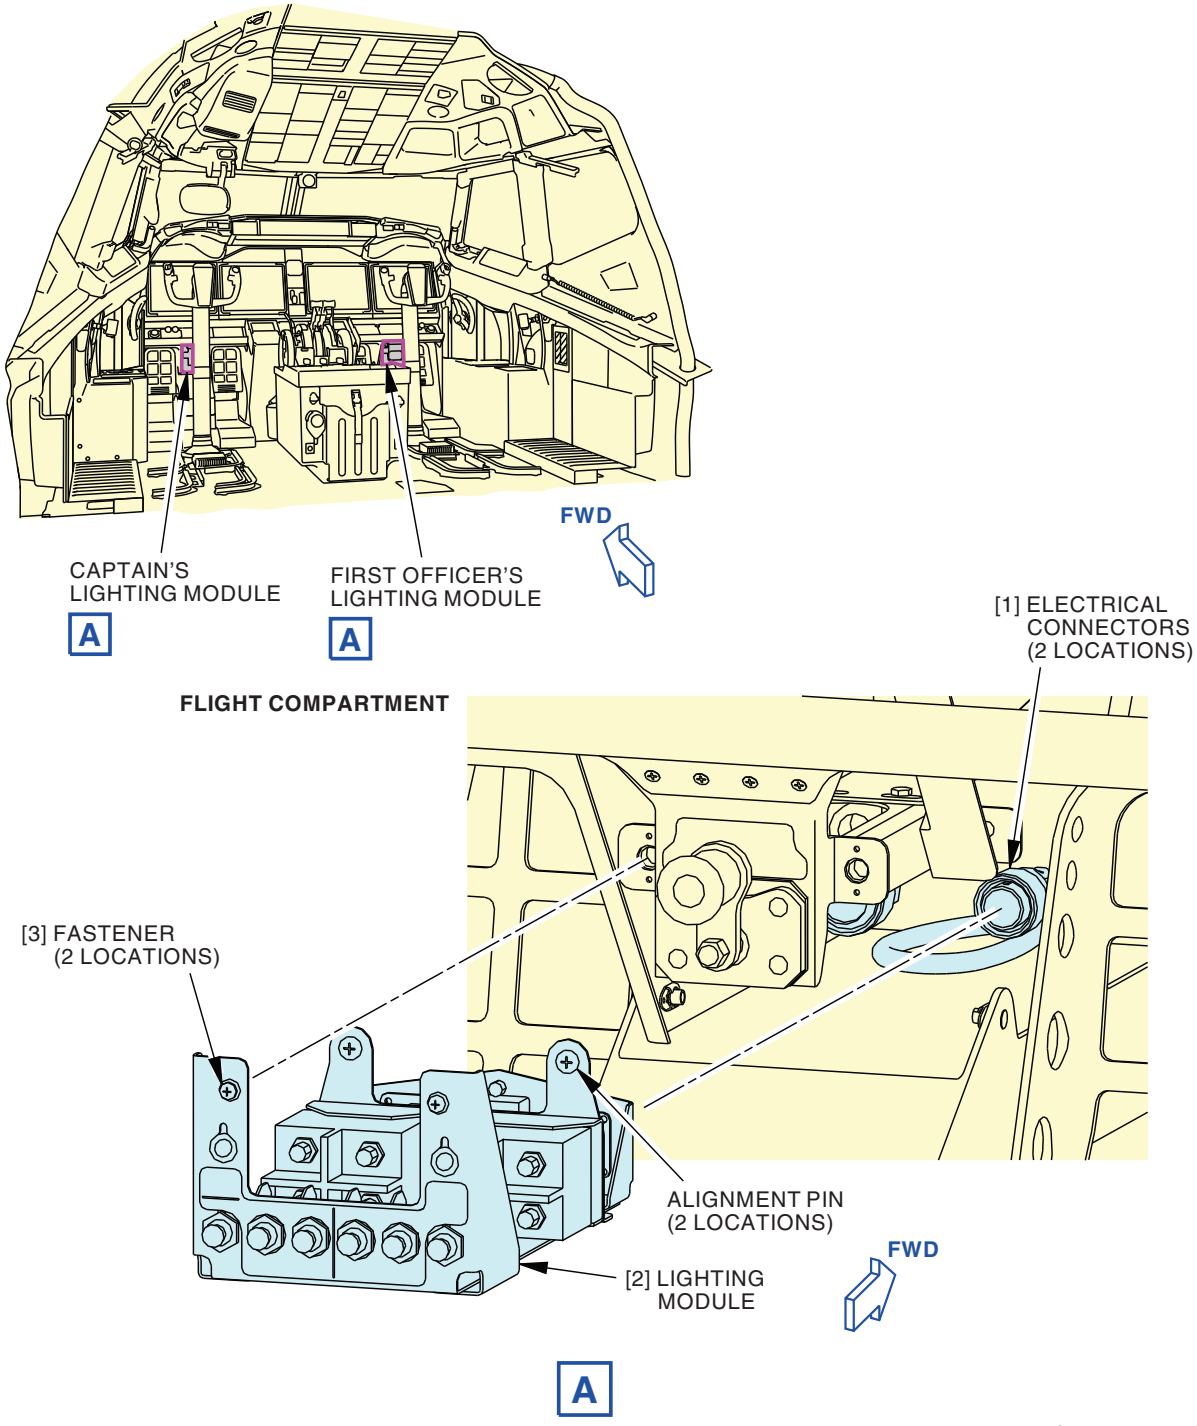


**Lighting Modules**
**Figure 201/33-11-00-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-11-00-960-802**

## 5. First Officer Lighting Module - Module Replacement

(Figure 201)

### A. General

(1) The first officer's lighting module is located near the rudder pedal adjustment crank below the first officer's instrument panel (P3).

### B. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### C. Location Zones

| Zone | Area |
|---|---|
| 212 | Flight Compartment - Right |

### D. Procedure

**SUBTASK 33-11-00-860-007**

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 10 | C00335 | PANEL & INSTR 28V PRI F/O |
| D | 8 | C00701 | EMER PANEL LTG |

(2) Open the First Officer's Lighting Module, P42

(a) 42C1 28V PRIM F/O PANEL LIGHTING

(b) 42C2 5V SEC F/O PANEL LIGHTING

(c) 42C3 5V SEC F/O PANEL LIGHTING

(d) 42C4 5V EMER & F/O PANEL LIGHTING

(e) 42C5 4V SEC F/O PANEL LIGHTING

(f) 42C6 4V EMER & F/O PANEL LIGHTING

**SUBTASK 33-11-00-960-002**

(3) Do these steps to replace the lighting module [2]:

(a) Loosen the fasteners [3].

(b) Pull the lighting module [2] away from the rudder pedals enough to disconnect the electrical connectors [1].

(c) Disconnect the electrical connectors [1].

(d) Tag the electrical connectors [1] for the installation.

(e) Remove the lighting module [2].

(f) Connect the electrical connectors [1] to the replacement lighting module [2].

(g) Install the replacement lighting module [2].

1) Align the pins on the back of the lighting module [2] with the holes in the bracket below the rudder pedal adjustment crank.

(h) Tighten the fasteners [3].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-11-00-860-009

(4) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 10 | C00335 | PANEL & INSTR 28V PRI F/O |
| D | 8 | C00701 | EMER PANEL LTG |

(5) Close the First Officer's Lighting Module, P42

(a) 42C1 28V PRIM F/O PANEL LIGHTING

(b) 42C2 5V SEC F/O PANEL LIGHTING

(c) 42C3 5V SEC F/O PANEL LIGHTING

(d) 42C4 5V EMER & F/O PANEL LIGHTING

(e) 42C5 4V SEC F/O PANEL LIGHTING

(f) 42C6 4V EMER & F/O PANEL LIGHTING

SUBTASK 33-11-00-940-003

(6) If it is necessary, put a windshield cover, STD-1176 on the windshield.

NOTE: During the day, the changes in light intensity are not easy to see.

SUBTASK 33-11-00-710-002

(7) Do these steps to test the replacement lighting module [2]:

(a) On the first officer's instrument panel P3, turn the PANEL control clockwise to the full BRIGHT position.

(b) Make sure that these panels and column come on and are of the same intensity:

1) First Officer's Instrument Panel, P3

2) First Officer's Auxiliary Panel, P23

3) First Officer's Control Column

SUBTASK 33-11-00-940-004

(8) If a windshield cover, STD-1176 was used on the windshield, remove it.

**——— END OF TASK ———**

**TASK 33-11-00-960-803**

## 6. Stabilizer Trim Warning Light Lamp Replacement

(Figure 202)

### A. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |

### B. Procedure

SUBTASK 33-11-00-860-012

(1) At the captain's main instrument panel, P1, set the switch for the master dim and test lights to TEST.

SUBTASK 33-11-00-210-001

(2) Identify the defective lamp.

SUBTASK 33-11-00-860-013

(3) Set the switch to the off position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-11-00-860-014

(4) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |

SUBTASK 33-11-00-960-003

(5) Do these steps to replace the lamp:

(a) Hold the cap assembly and pull directly out to retract the cap assembly locking pins.

(b) Continue to pull the cap assembly until it is free from the base assembly.

NOTE: The cap assembly will stay attached to the base assembly by two retaining elements.

(c) Remove the defective lamp.

(d) Put the new lamp into the lamp holder.

(e) Check that the cap assembly is in the extended position (Figure 202).

(f) If the cap assembly is in a collapsed position, then do these steps:

1) Hold the cap shell and the lamp holder.

2) Pull apart the cap shell from the lamp holder until the locking pins are retracted.

NOTE: In the collapsed position, locking pins are extended and cannot lock the cap assembly into the base assembly. Thus, the shaft will not operate the switches and the lamps will not touch the energized pins in the mounting base.

(g) Put the cap assembly into the mounting base.

(h) Push the cap assembly tightly back into the base assembly until the cap assembly touches the bottom of the base assembly.

NOTE: The cap assembly must collapse and the locking pins must engage the base assembly. Failure to put the cap assembly into the base assembly can cause the cap to release prematurely. This will cause the unit to not work correctly.

SUBTASK 33-11-00-860-015

(6) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |

SUBTASK 33-11-00-710-003

(7) Do a test of the new lamp:

(a) At the captain's main instrument panel, P1, set the switch for the master dim and test lights to TEST.


(b) Make sure that the replaced lamp is on.

(c) Set the switch to the off position.


**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

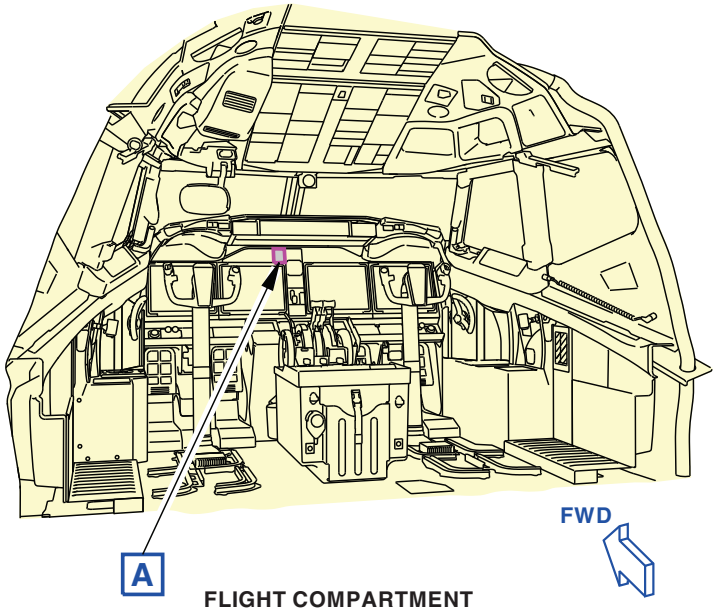


FLIGHT COMPARTMENT

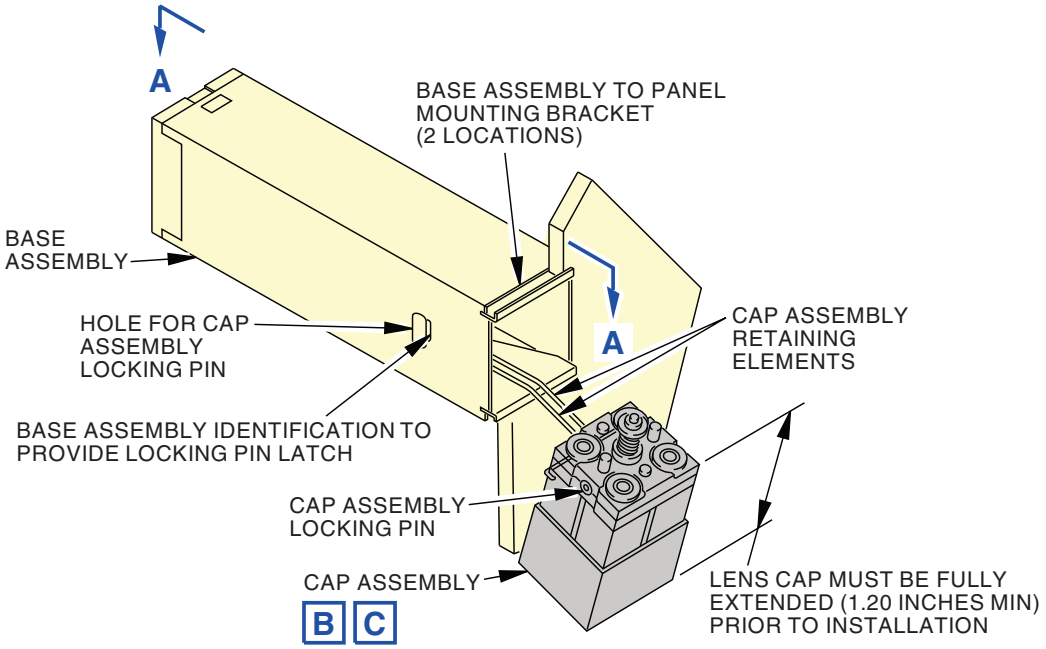


INDICATOR LIGHT IN RELAMPING POSITION


A

2537706 S0000602505_V1

**Stabilizer Trim Warning Light - Lamp Replacement**
**Figure 202/33-11-00-990-802 (Sheet 1 of 2)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

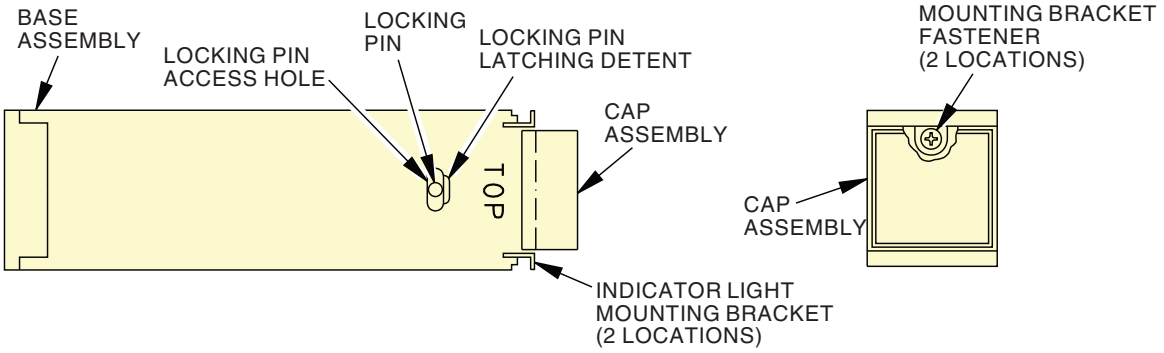



**REASSEMBLED INDICATOR LIGHT**

**A-A**

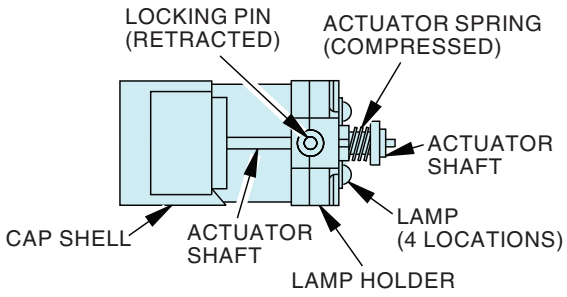


**CAP ASSEMBLY IN EXTENDED POSITION**

**B**

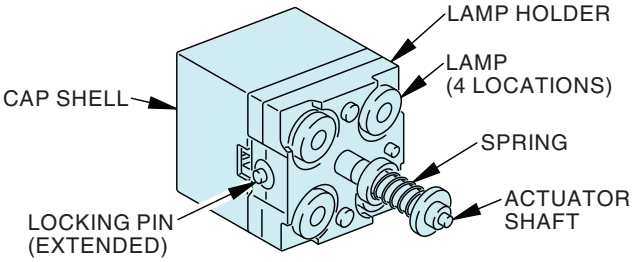


**CAP ASSEMBLY IN COLLAPSED POSITION**

**C**

2414563 S00061535466_V1

**Stabilizer Trim Warning Light - Lamp Replacement**
**Figure 202/33-11-00-990-802 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-11-00-960-804**

## 7. Stabilizer Trim Warning Light - Cap Assembly Replacement

(Figure 202)

### A. General

(1) This task includes the steps to replace the stabilizer trim warning light cap assembly.

### B. References

| Reference | Title |
|---|---|
| 22-11-00-740-801 | Digital Flight Control System (DFCS) - Operational Test (P/B 501) |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |

### D. Prepare for the Cap Assembly Replacement

**SUBTASK 33-11-00-860-017**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-1**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 3 | C01048 | AFCS SYS A ENGAGE INTLK |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 4 | C00716 | AFCS SYS B ENGAGE INTLK |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |

### E. Cap Assembly Replacement

**SUBTASK 33-11-00-960-004**

(1) Do these steps to replace the cap assembly:

(a) Hold the cap assembly and pull directly out to retract the cap assembly locking pins.

(b) Continue to pull the cap assembly until it is free from the base assembly.

NOTE: The cap assembly will stay attached to the base assembly by two retaining elements.

(c) Make sure that the cap assembly is in the extended position (Figure 202).

(d) If the cap assembly is in a collapsed position, do these steps:

1) Hold the cap shell and the lamp holder.

2) Pull apart the cap shell from the lamp holder until the locking pins are retracted.

NOTE: In the collapsed position, locking pins are extended and cannot lock the cap assembly into the base assembly. Thus, the shaft will not operate the switches and the lamps will not touch the energized pins in the mounting base.

(e) Remove the cap assembly retaining elements from the two small holes in the lampholder of the cap assembly.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure not to bend the cap assembly retaining elements.

(f) Install the cap assembly retaining elements into the two small holes in the lampholder of the new cap assembly.

1) Make sure not to bend the cap assembly retaining elements.

(g) Put the cap assembly into the mounting base.

(h) Push the cap assembly tightly back into the base assembly until the cap assembly touches the bottom of the base assembly.

NOTE: The cap assembly must collapse and the locking pins must engage the base assembly. Failure to put the cap assembly into the base assembly can cause the cap to release prematurely. This will cause the unit to not work correctly.

**F. Put the Airplane Back to Its Usual Condition**

**SUBTASK 33-11-00-860-018**

(1) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-1**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 3 | C01048 | AFCS SYS A ENGAGE INTLK |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 4 | C00716 | AFCS SYS B ENGAGE INTLK |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |

**G. Cap Assembly Replacement Test**

**SUBTASK 33-11-00-700-003**

(1) Do a test of the lamps.

(a) On the P1 captain's main instrument panel, set the switch for the master dim and test lights to TEST.

(b) Make sure that the lamps come on.

(c) Set the switch to the off position.

**SUBTASK 33-11-00-710-004**

(2) Do this task: Digital Flight Control System (DFCS) - Operational Test, TASK 22-11-00-740-801.

NOTE: Library Test 32 in the SPEED TRIM TEST will check the Stabilizer Trim Warning Light wiring.

**——— END OF TASK ———**

**TASK 33-11-00-960-806**

## 8. Master Warning And Caution System Annunciator - Lamp Replacement

(Figure 203)

**A. References**

| Reference | Title |
|---|---|
| 24-22-00-860-803 | Supply External Power (P/B 201) |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**B. Expendables/Parts**

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 23 | Lamp housing | Not Specified | |

**C. Location Zones**

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**D. Access Panels**

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**E. Master Warning And Caution System Annunciator Lamp Replacement**

SUBTASK 33-11-00-860-023

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

SUBTASK 33-11-00-960-006

(2) Do these steps to replace the lamp [21]:

**CAUTION** REMOVE THE LAMP HOUSING WITH YOUR FINGERS ONLY. IF YOU USE A TOOL TO HOLD THE LAMP HOUSING, THE TOOL CAN CAUSE DAMAGE TO THE HOUSING.

(a) Pull the lamp housing [23] from the annunciator assembly [22].

(b) Remove the defective lamp [21].

(c) Put the new lamp [21] into the lamp housing [23].

(d) Put the lamp housing [23] into the annunciator assembly [22].

(e) Make sure that the lamp housing [23] engages correctly in the annunciator assembly [22].

SUBTASK 33-11-00-860-025

(3) Remove the safety tag and close the applicable circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

SUBTASK 33-11-00-860-044

(4) Do this task: Supply External Power, TASK 24-22-00-860-803.

SUBTASK 33-11-00-710-006

(5) Do a test of the new lamp [21]:

(a) Set the switch for the master dim and test lights, on the P1 captain's main instrument panel, to the TEST position.

(b) Make sure that the replaced lamp [21] is on.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Set the switch to the OFF position.

SUBTASK 33-11-00-710-013

(6) If the lamp [21] is replaced, do a test of the six Captain's system annunciator lights, do these steps:

(a) Do a test of the FLT CONT annunciator:

1) Open this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 16 | C01356 | LANDING GEAR AIR/GND SYS 1 |

2) Wait for a minimum of 10 seconds until the FEEL DIFF PRESS light, on the P5 overhead panel, comes on.

3) Close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 16 | C01356 | LANDING GEAR AIR/GND SYS 1 |

4) Make sure that the FEEL DIFF PRESS light extinguishes.

5) Make sure that the FLT CONT annunciator illuminates along with the master caution light.

6) Push the Master Caution switch to reset the lights.

(b) Do a test of the IRS annunciator:

1) Set the IRS MSU left and right mode select switches to the ATT position.

2) Open this circuit breaker:

**CAPT Electrical System Panel, P18-1**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 7 | C01007 | ADIRU LEFT AC |

3) Make sure that the IRS annunciator illuminates along with the master caution light.

4) Close this circuit breaker:

**CAPT Electrical System Panel, P18-1**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 7 | C01007 | ADIRU LEFT AC |

5) Push the Master Caution switch to reset the lights.

(c) Do a test of the FUEL annunciator:

1) Turn on a single fuel pump and subsequently off again after a few seconds.

2) Make sure that the FUEL annunciator illuminates along with the master caution systems annunciator, on the P7 glare shield panel.

3) Push the Master Caution switch to reset the lights.

(d) Do a test of the ELEC annunciator:

1) To get access to the P92 panel, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WARNING** WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

2) Open this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 1 | C00809 | BAT CHGR |

3) Wait for a minimum of 60 seconds.

**WARNING** WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

4) Close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 1 | C00809 | BAT CHGR |

5) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

6) Make sure that the ELEC annunciator illuminates along with the master caution light.

7) Push the Master Caution switch to reset the lights.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(e) Do a test of the APU annunciator:

1) Open this circuit breaker:

**F/O Electrical System Panel, P6-5**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 12 | C04011 | APU INLET DOOR |

2) Make sure that the APU annunciator illuminates along with the master caution light.

3) Close this circuit breaker:

**F/O Electrical System Panel, P6-5**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 12 | C04011 | APU INLET DOOR |

4) Push the Master Caution switch to reset the lights.

(f) Do a test of the OVHT/DET annunciator:

1) Move and hold the TEST switch, on the P8-1 panel, to the OVHT/FIRE position.

2) Make sure that the OVHT/DET annunciator illuminates along with the master caution light.

3) Push the Master Caution switch to reset the lights.

**SUBTASK 33-11-00-710-014**

(7) If the lamp [21] is replaced, do a test of the six First Officer's system annunciator lights, do these steps:

(a) Do a test of the AIR COND annunciator:

1) Push the OVHT TEST button, on the P5 air conditioning panel.

2) Make sure that the AIR COND annunciator illuminates along with the master caution light.

3) Push the Master Caution switch to reset the lights.

(b) Do a test of the ANTI ICE annunciator:

**WARNING** DO NOT TOUCH THE HOT METAL OF THE HEATER PROBE WHEN THE PROBES ARE HOT. LET THEM BECOME COOL, OR ONLY TOUCH THE OTHER PARTS OF THE PROBE. THE PROBES CAN BURN YOU.

**CAUTION** MAKE SURE THAT YOU REMOVE ANY TYPE OF PROTECTIVE COVER OR MATERIAL BEFORE OPERATING ANY PROBE HEATER OR ANTI-ICE TYPE HEATED SURFACE. DAMAGE CAN OCCUR TO THE EQUIPMENT WHEN THE PROBES BECOME HOT.

**CAUTION** PROBE HEAT APPLICATION TIME SHOULD BE KEPT TO A MINIMUM. PROBES MAY OVERHEAT IF PROBE HEAT IS APPLIED TOO LONG.

1) Turn on the Pitot Probe Heat and subsequently off again after a few seconds.

2) Make sure that the ANTI-ICE annunciator illuminates along with the master caution light.

3) Push the Master Caution switch to reset the lights.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Do a test of the DOORS annunciator:

1) Close the cabin, passenger, or service door and open again.

NOTE: It is acceptable to fully push the door sensor for a few seconds before releasing instead.

2) Make sure that the DOORS annunciator illuminates along with the master caution light.

3) Push the Master Caution switch to reset the lights.

(d) Do a test of the ENG annunciator:

1) Set the GND TESTS switch, on the P61-4 panel, to the ENABLE position.

2) Select the SYS, on the multifunction display (MFD) panel.

3) Select the MAINT - MAINT CTRL PGS - MISC SYSTEM CTRLS (MSC) - EEC MAINT POWER - ENG 1 - TEST.

4) Push the Engine 1 EEC ALTN button, on the P5 aft overhead panel.

5) Make sure that the ENG annunciator illuminates along with the master caution light.

6) To stop the ALTN mode, push the Engine 1 EEC ALTN button, on the P5 overhead panel, again.

7) Set Eng 1 back to NORM on the MFD MSC page.

8) Push the Master Caution switch to reset the lights.

(e) Do a test of the HYD annunciator:

1) Start the operation of the electric hydraulic pump until the associated low pressure light extinguishes.

NOTE: Do not let electric hydraulic pump operate longer than 2 minutes.

2) Stop the operation of the electric hydraulic pump.

3) Make sure that the HYD annunciator illuminates along with the master caution light.

4) Push the Master Caution switch to reset the lights.

(f) Do a test of the OVERHEAD annunciator:

1) Start the operation of the equipment cooling exhaust.

2) Open this circuit breaker:

**F/O Electrical System Panel, P6-4**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 14 | C01435 | EQPT COOLING EXHAUST FAN CONT NORMAL |

3) Make sure that the OVERHEAD annunciator illuminates along with the master caution light within 30 seconds.

4) Close this circuit breaker:

**F/O Electrical System Panel, P6-4**


| Row | Col | Number | Name |
|---|---|---|---|
| C | 14 | C01435 | EQPT COOLING EXHAUST FAN CONT NORMAL |

5) Push the Master Caution switch to reset the lights.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

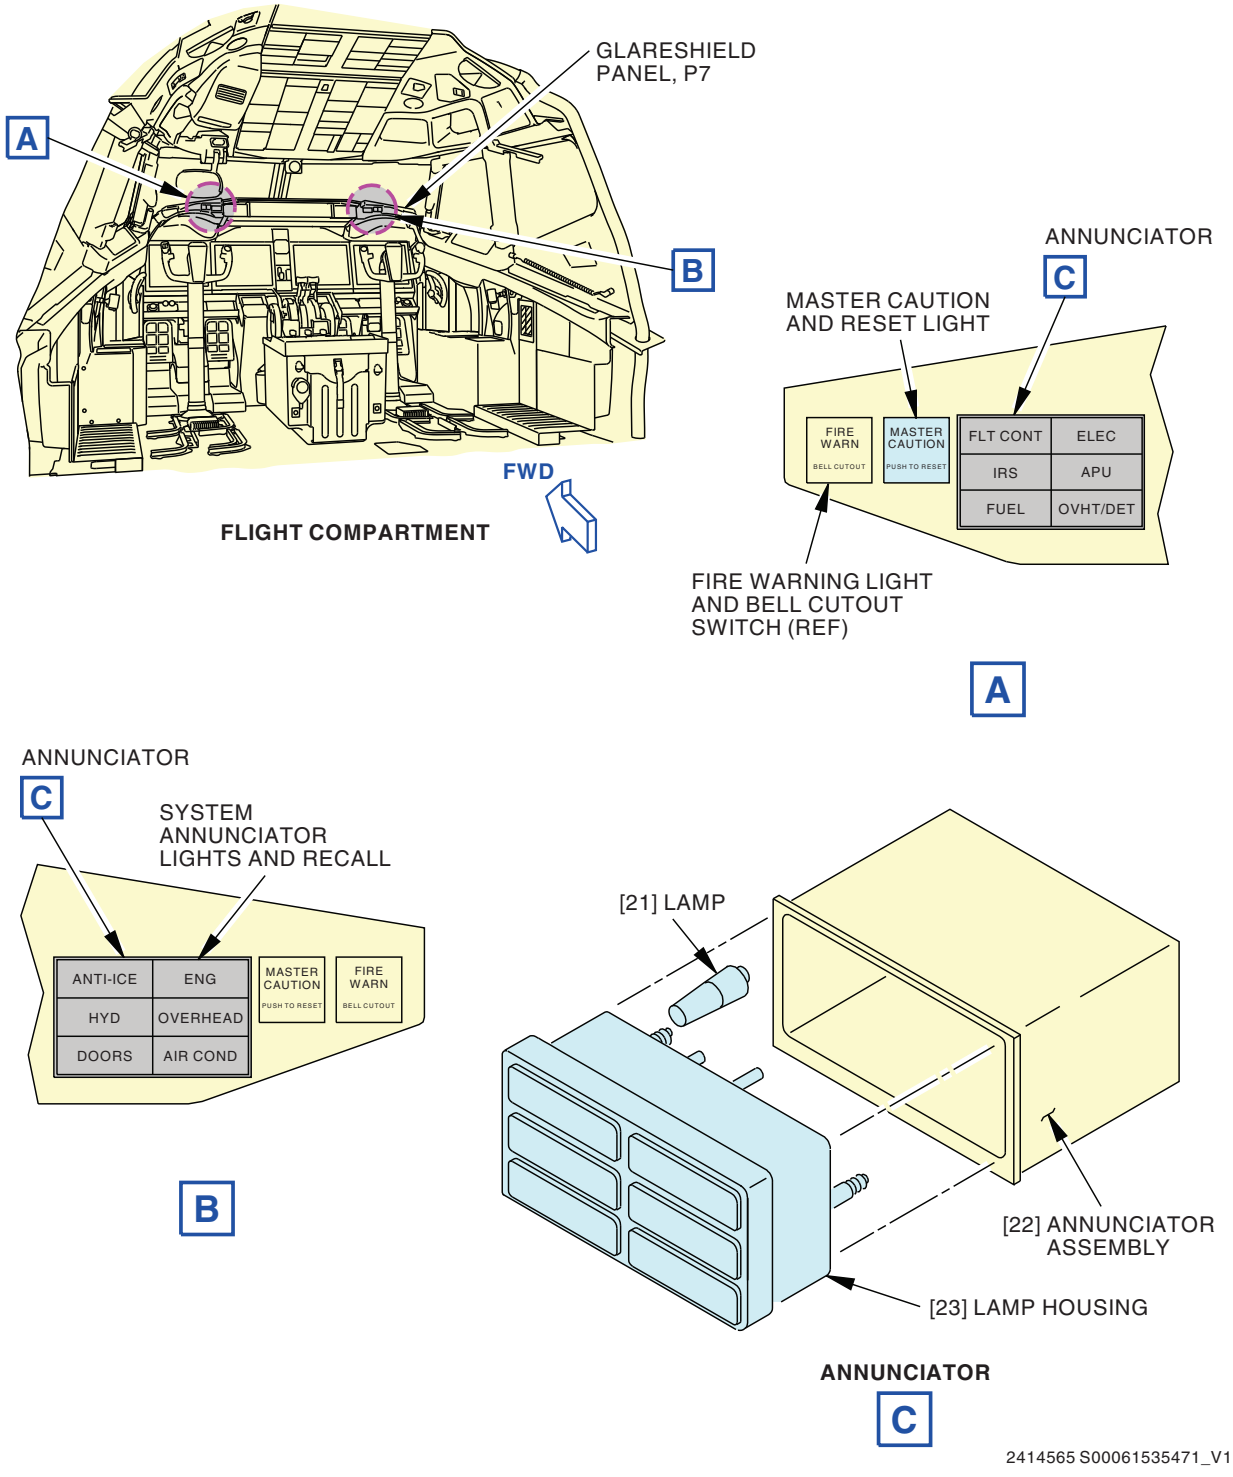


**Master Warning And Caution System Annunciator - Lamp Replacement**
**Figure 203/33-11-00-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 33-11-00-960-807

## 9. Master Warning And Caution System Annunciator - Light Assembly Replacement

(Figure 204)

### A. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 23 | Lamp housing | Not Specified | |

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Procedure

SUBTASK 33-11-00-860-027

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

SUBTASK 33-11-00-960-007

(2) Do these steps to replace the light assembly [24]:

**CAUTION** REMOVE THE LAMP HOUSING WITH YOUR FINGERS ONLY. IF YOU USE A TOOL TO HOLD THE LAMP HOUSING, THE TOOL CAN CAUSE DAMAGE TO THE HOUSING.

(a) Pull the lamp housing [23] from the annunciator assembly.

(b) Loosen the screws [26]. Then pull the light assembly [24].

(c) Loosen the screws [25] at the rear of the light assembly [24] to disconnect the electrical wires.

(d) Replace the light assembly [24].

(e) Connect the electrical wires to the new light assembly [24].

(f) Tighten the screws [25] at the rear of the new light assembly [24].

(g) Install the light assembly [24] to the annunciator assembly.

(h) Tighten the screws [26].

1) Make sure that you tighten the screws [26] equally.

(i) Put the lamp housing [23] into the annunciator assembly.

1) Make sure that the lamp housing [23] engages correctly in the annunciator assembly.

SUBTASK 33-11-00-860-028

(3) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

**SUBTASK 33-11-00-710-007**

(4) Do a test of the new light assembly [24]:

(a) At the captain's main instrument panel, P1, set the switch for the master dim and test lights to TEST.


(b) Make sure that the light is on.

(c) Set the switch to the off position.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

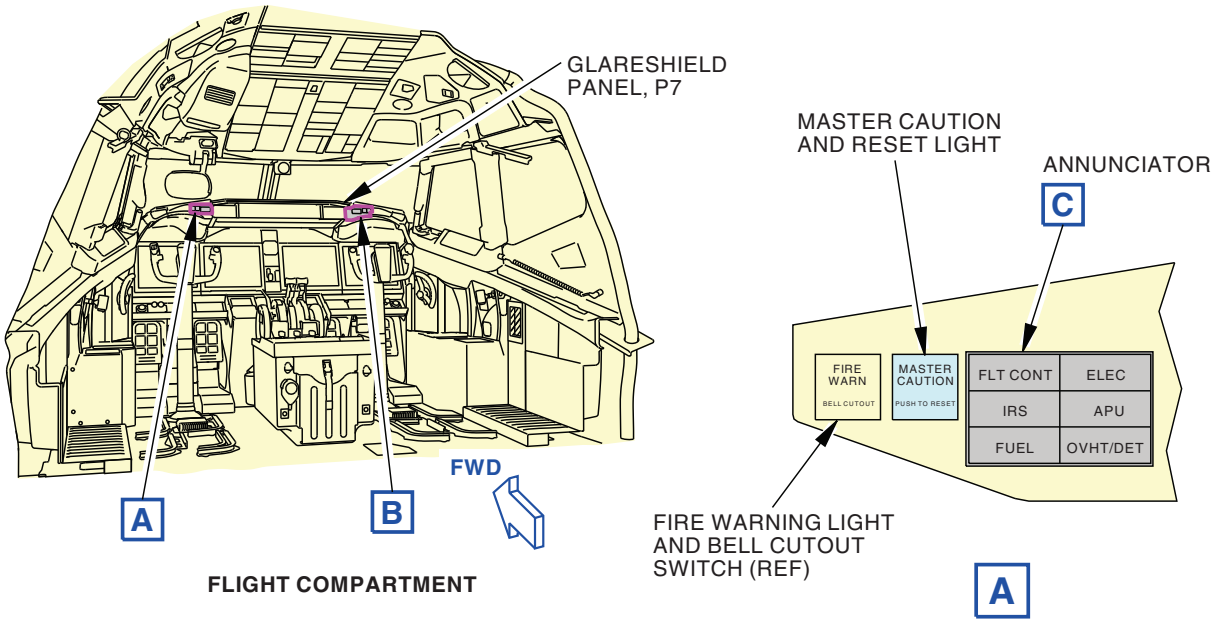


2414566 S00061535473_V1

**Master Warning And Caution System Annunciator - Light Assembly Replacement**
**Figure 204/33-11-00-990-805**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-11-00-960-808**

## 10. Master Warning And Caution Light Switch - Switch Replacement

(Figure 205)

### A. References

| Reference | Title |
|---|---|
| 26-16-00-710-801 | Cargo Bay Smoke Detection - Operational Test (P/B 501) |
| WDM 26-11-21 | Wiring Diagram Manual |
| WDM 31-52-11 | Wiring Diagram Manual |

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Prepare for the Replacement

**SUBTASK 33-11-00-860-031**

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

### D. Switch Replacement

**SUBTASK 33-11-00-020-001**

(1) Do these steps to remove the switch [27] (WDM 26-11-21, WDM 31-52-11):

(a) Remove the screws to the panel below the switch.

(b) Remove the panel.

(c) Remove the switch cap [28].

(d) Remove the nut [29] and lock washer [30].

(e) Disconnect the wires at the quick disconnect connector.

(f) Remove the switch [27].

**SUBTASK 33-11-00-420-001**

(2) Do these steps to install the new switch [27] (WDM 26-11-21, WDM 31-52-11):

(a) Remove the nut [29] and lock washer [30] from the switch [27].

NOTE: Do not remove the key washer.

(b) Connect the wires to the quick disconnect connector.

(c) Place the switch [27] in its position.

(d) Install the lock washer [30] and nut [29].

(e) Tighten the nut [29].

(f) Install the switch cap [28].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## E. Switch Installation Test

SUBTASK 33-11-00-860-045

(1) Remove the safety tag and close the applicable circuit breaker:

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

SUBTASK 33-11-00-710-008

(2) Do a test of the Master Caution and Reset Light switch.

(a) Set the switch for the Master Dim and Test Lights, on the P1 captain's main instrument panel, to the TEST position.

(b) Make sure that the lamp in the Master Caution and Reset switch is on.

(c) Release the TEST switch, on the P1 captain's main instrument panel.

SUBTASK 33-11-00-710-010

(3) Do a test of the Fire Warning Light switch.

(a) Set the TEST switch, on the P8 engine and Auxiliary Power Unit (APU) fire control panel, to the OVHT/FIRE position.

(b) Make sure that the lamp in the Fire Warning Light switch is on.

(c) Release the TEST switch, on the P8 engine and APU fire control panel.


SUBTASK 33-11-00-710-015

(4) Do a test of the bell cutoff function of the switches (TASK 26-16-00-710-801).

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

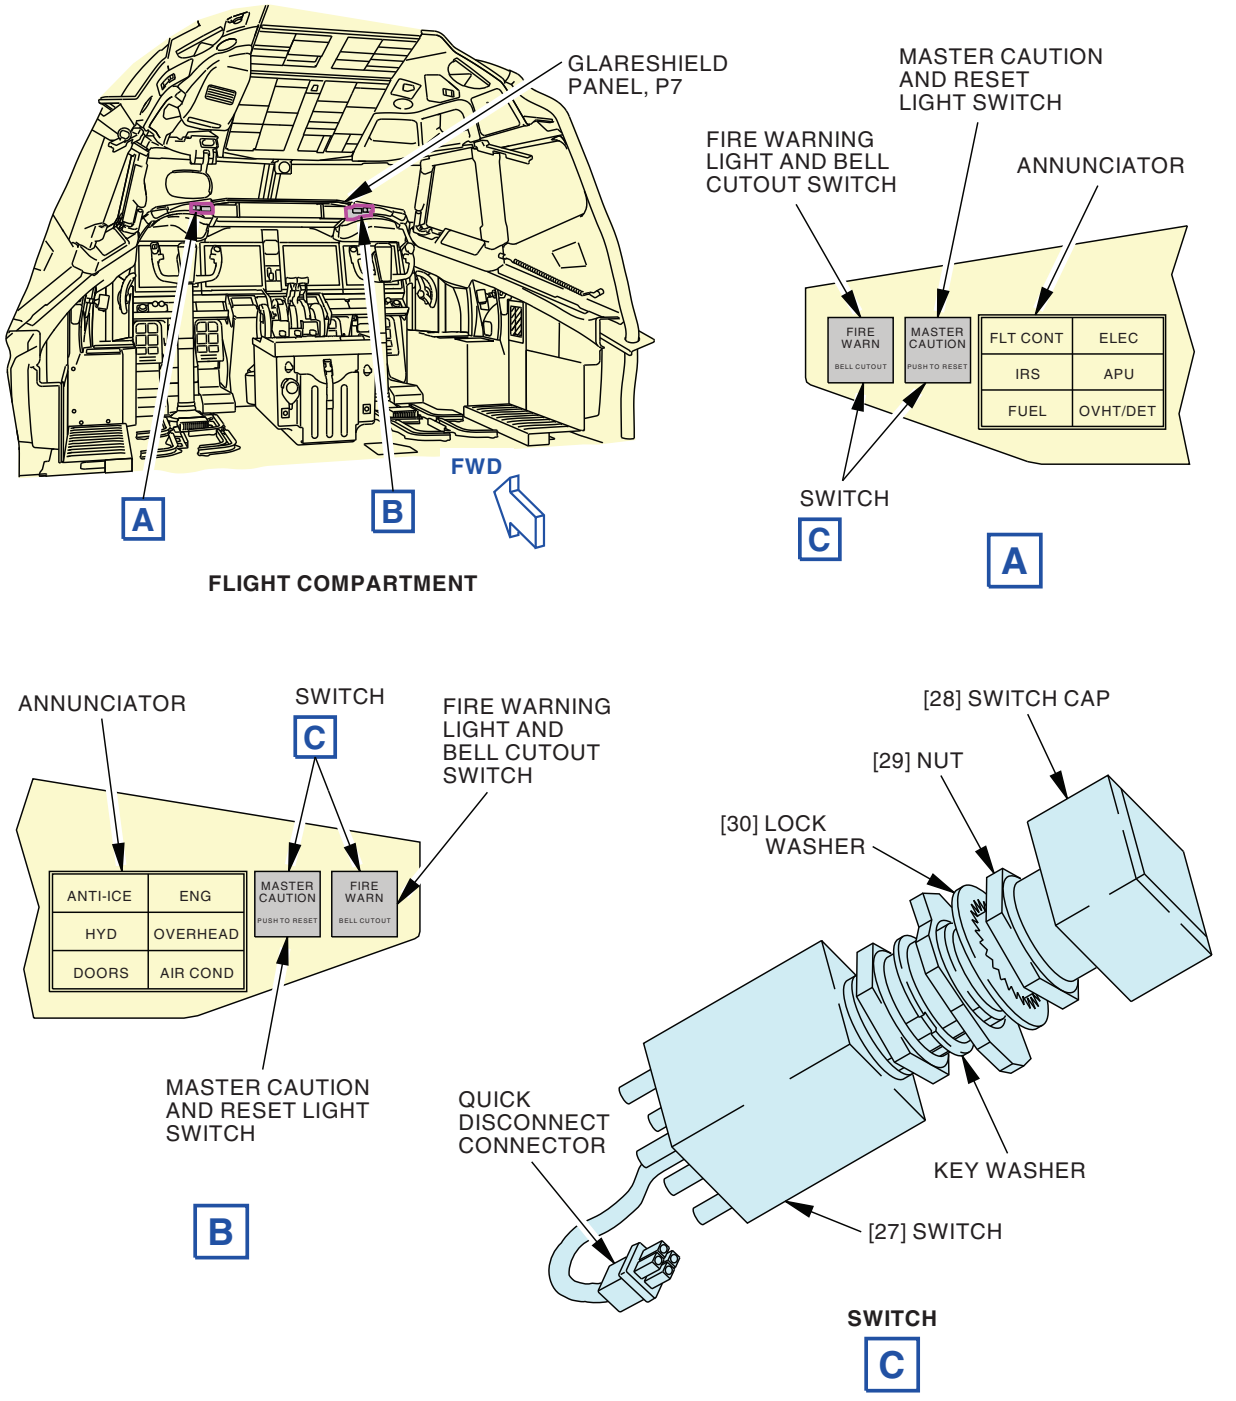


2414567 S00061535475_V2

**Master Warning And Caution Light Switch - Switch Replacement**
**Figure 205/33-11-00-990-806**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-11-00-960-809**

## 11. Master Warning And Caution Light Switch - Lamp Replacement

(Figure 206)

### A. References

| Reference | Title |
|---|---|
| WDM 26-11-21 | Wiring Diagram Manual |
| WDM 31-52-11 | Wiring Diagram Manual |

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Prepare for the switch replacement

**SUBTASK 33-11-00-860-035**

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

### D. Procedure

**SUBTASK 33-11-00-960-008**

(1) Do these steps to replace the lamp [31] (WDM 26-11-21, WDM 31-52-11):

(a) Remove the switch cap [28].

(b) Remove the lamp [31].

(c) Install the new lamp [31].

(d) Install the switch cap [28].

**SUBTASK 33-11-00-860-037**

(2) Remove the safety tag and close the applicable circuit breaker:

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |

**SUBTASK 33-11-00-710-009**

(3) Do a test of the Master Caution and Reset Light lamp.

(a) At the Captain's Main Instrument Panel, P1, set the switch for the Master Dim and Test Lights to the TEST position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Make sure that the lamp in the Master Caution and Reset switch is on.

(c) Release the TEST switch on the Captain's Main Instrument Panel.

**SUBTASK 33-11-00-710-011**

(4) Do a test of the Fire Warning Light lamp.

(a) At the Engine and Auxiliary Power Unit (APU) Fire Control Panel, P8, set the TEST switch to the OVHT/FIRE position.


(b) Make sure that the lamp in the Fire Warning Light switch is on.

(c) Release the TEST switch on the Engine and APU Fire Control Panel.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

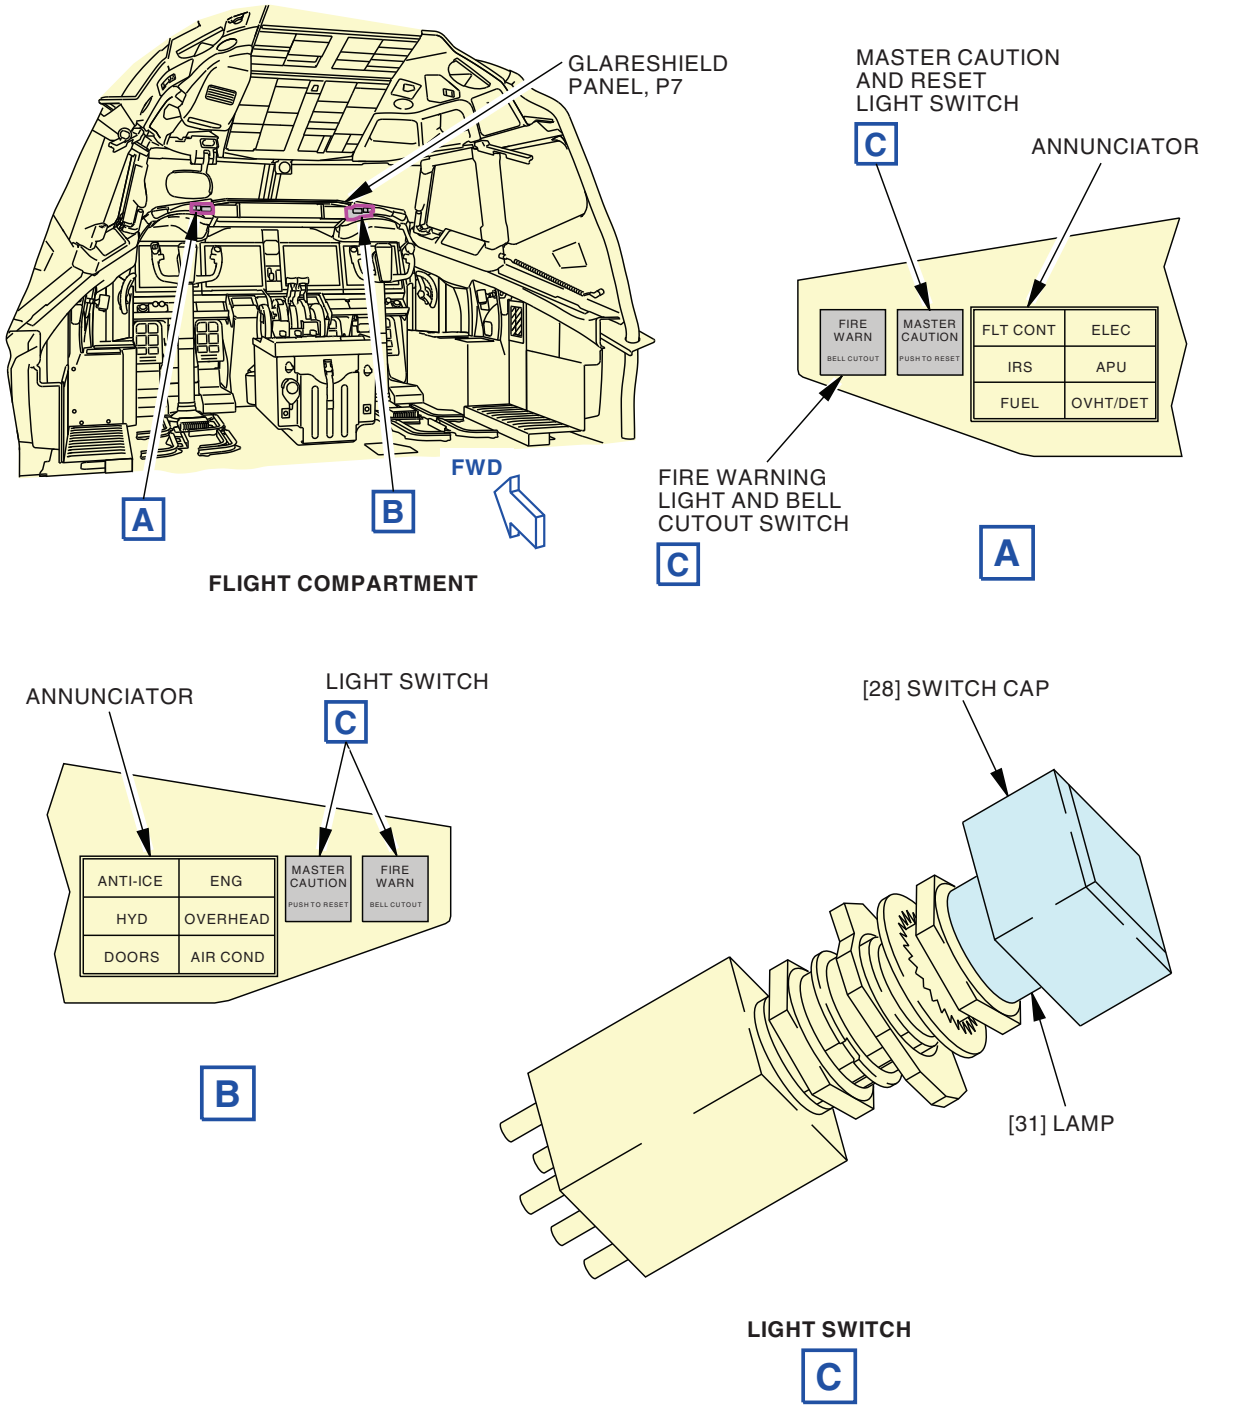


2414568 S00061535477_V1

**Master Warning And Caution Light Switch - Lamp Replacement**
**Figure 206/33-11-00-990-807**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-11-00-960-810**

## 12. Control Stand Lighting Control Panel Replacement

(Figure 207)

### A. General

(1) This task gives the instructions to replace the control stand lighting control panel.

### B. References

| Reference | Title |
|---|---|
| 20-40-12-000-802 | ESDS Handling for Metal Encased Unit Removal (P/B 201) |

### C. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### D. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### E. Control Stand Lighting Control Panel Replacement

**SUBTASK 33-11-00-860-039**

(1) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C00284 | PANEL & INSTR ELEX PANEL |

Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C00283 | CONTROL CABIN LIGHTING CONT STAND |

**SUBTASK 33-11-00-860-040**

(2) Rotate the PANEL BRIGHT control, on the P8 electronic panel, to the OFF position.

**SUBTASK 33-11-00-860-041**

(3) Rotate the FLOOD BRIGHT control, on the P8 electronic panel, to the OFF position.

**SUBTASK 33-11-00-910-001**

(4) Before you touch the control stand lighting control panel, do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

**SUBTASK 33-11-00-960-009**

(5) Do these steps to replace the control stand lighting control panel [87]:

(a) Loosen the quarter-turn fastener [88].

(b) Carefully lift the control stand lighting control panel from the P8 electronic panel, to get access to the electrical connector [89].

(c) Disconnect the electrical connector [89].

(d) Remove the control stand lighting control panel [87].

(e) Examine the electrical connector [89] for bent or broken pins, dirt, and damage.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Connect the electrical connector [89] to the replacement control stand lighting control panel.

(g) Put the replacement control stand lighting control panel [87] in its position.

(h) Tighten the quarter-turn fastener [88].

SUBTASK 33-11-00-860-042

(6) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C00284 | PANEL & INSTR ELEX PANEL |

Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C00283 | CONTROL CABIN LIGHTING CONT STAND |

## F. Installation Test

SUBTASK 33-11-00-940-005

(1) If it is necessary, put a windshield cover, STD-1176, on the windshield.

NOTE: During the day, the changes in light intensity are not easy to see.

SUBTASK 33-11-00-710-012

(2) Do these steps to test the new control stand lighting control panel:

(a) Test the FLOOD BRIGHT control on the P8-50 panel:

1) Turn the FLOOD BRIGHT control clockwise to the full BRIGHT position.

a) Make sure that the control stand floodlight comes on brightly.

2) Turn the FLOOD BRIGHT control counter-clockwise to the DIM position.

a) Make sure that the light becomes dim.

3) Turn the FLOOD BRIGHT control counter-clockwise to the OFF position.

a) Make sure that the light goes off.

4) Turn the FLOOD BRIGHT control to the usual position.

(b) Test the PANEL BRIGHT control on the P8-50 panel:

1) Turn the PANEL BRIGHT control clockwise to the full BRIGHT position.

a) Make sure that the panel lights come on brightly.

2) Turn the PANEL BRIGHT control counter-clockwise to the DIM position.

a) Make sure that the lights become dim.

3) Turn the PANEL BRIGHT control counter-clockwise to the OFF position.

a) Make sure that the lights go off.

4) Turn the PANEL BRIGHT control to the usual position.


SUBTASK 33-11-00-940-006

(3) If it is necessary, remove the windshield cover, STD-1176.

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

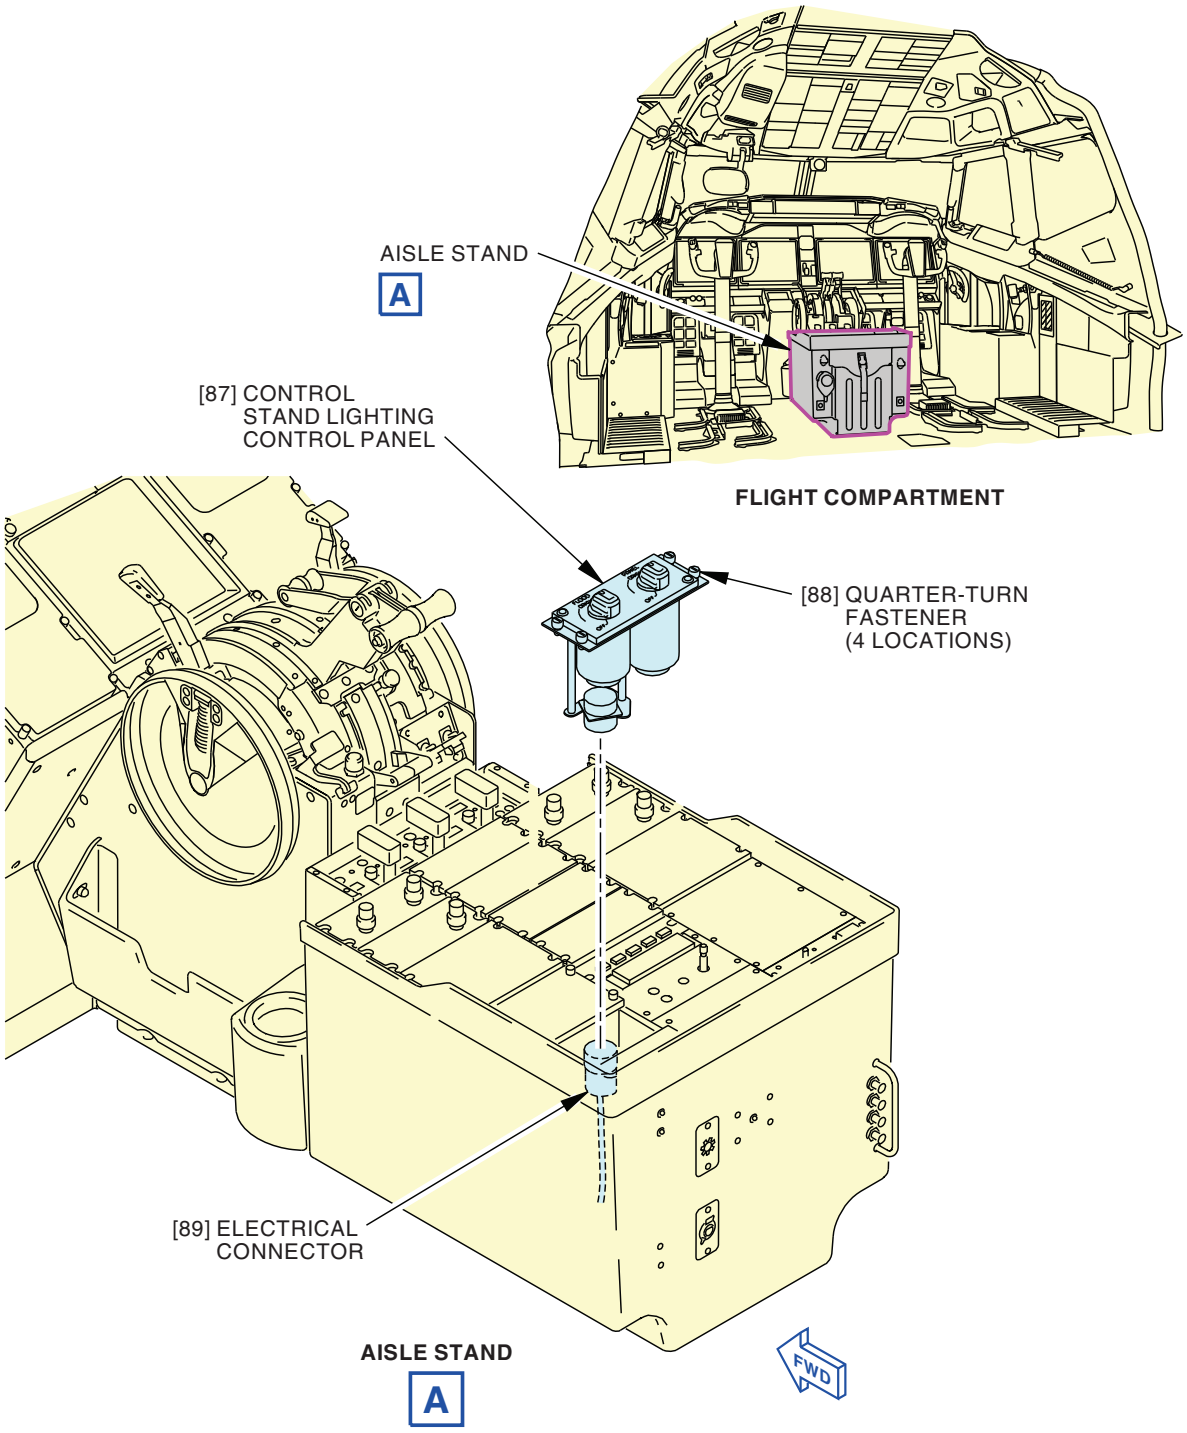


**Control Stand Lighting Control Panel Replacement**
**Figure 207/33-11-00-990-808**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MISCELLANEOUS LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Miscellaneous Lights Deactivation.

(2) Miscellaneous Lights Activation.

(3) Panel/Glareshield Floodlight - Light Assembly Replacement.

(4) Control Stand Floodlight - Lamp Replacement.

(5) Control Stand Floodlight - Light Assembly Replacement.

(6) Oxygen Mask Floodlight - Light Assembly Replacement.

(7) Dome Light - Lamp Replacement.

(8) Dome Lights - Removal.

(9) Dome Lights - Installation.

(10) Circuit Breaker Panel Light - Lamp Replacement.

(11) Dimmer Control Unit - Replacement.

(12) Panel Floodlights - Operational Test of the Standby Relay.

**TASK 33-14-00-040-801**

### 2. Miscellaneous Lights - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes electrical power to the Miscellaneous Lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

#### C. Procedure

**SUBTASK 33-14-00-860-001**

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C00283 | CONTROL CABIN LIGHTING CONT STAND |
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |
| A | 12 | C01425 | CONT CABIN LIGHTING PANEL FLOOD STBY |
| A | 14 | C00161 | CONTROL CABIN LIGHTING STBY COMPASS |
| A | 15 | C00282 | CONTROL CABIN LIGHTING DOME WHITE |
| C | 9 | C00219 | PANEL & INSTR CB PANEL |
| D | 8 | C00701 | EMER PANEL LTG |

#### D. Miscellaneous Lights - Tryout

NOTE: This tryout is to make sure the Miscellaneous Lights are in a zero energy state.

**SUBTASK 33-14-00-700-001**

(1) For the floodlights do these steps:



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) At the captain's instrument panel, P1-5, turn the AFDS FLOOD control switch clockwise to the full BRIGHT position.

(b) At the AFT electronics panel, P8, turn the FLOOD control switch clockwise to the full BRIGHT position.

NOTE: The floodlights for the P1, P2, P3, P7, P21 and P23 panels are above the panels. The floodlight for the P8, P9 and P10 panels are above the aisle stand on the P5 panel.

1) Make sure none of the following floodlights come on:

a) P1 captain instrument panel.

b) P2 center instrument panel.

c) P3 first officer instrument panel.

d) P7 glareshield panel.

e) P8 aft electronics panel.

f) P9 forward electronics panel.

g) P10 control stand.

h) P21 captain’s oxygen mask stowage panel.

i) P23 first officer’s oxygen mask stowage panel

(c) Turn the control switches on the P1-5 and P8 panels counter clockwise to the OFF position.

**SUBTASK 33-14-00-700-002**

(2) For the dome lights, do these steps:

(a) On the AFT overhead panel, P5, set the switch for the dome lights to the BRIGHT position.

1) Make sure none of the dome lights come on.

(b) Set the switch to the DIM position.

1) Make sure none of the dome lights come on.

(c) Set the switch to the OFF position.

**SUBTASK 33-14-00-700-003**

(3) For the circuit breaker lights, do these steps:

(a) On the FWD overhead panel, P5, turn the CIRCUIT BREAKER control switch clockwise to the full BRIGHT position.

1) Make sure none of the circuit breaker lights come on.

(b) Turn the CIRCUIT BREAKER control switch counter clockwise to the OFF position.

**SUBTASK 33-14-00-700-004**

(4) For the standby compass light, do these steps:

(a) Just forward of FWD overhead panel, P5, set the standby compass light switch to the BRIGHT position.

1) Make sure the standby compass light does not come on.

(b) Set the standby compass light switch to the DIM position.

1) Make sure the standby compass light does not come on.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Set the standby compass light switch to the OFF position.

——— END OF TASK ———




ECCN 9E991 BOEING PROPRIETARY - See title page for details

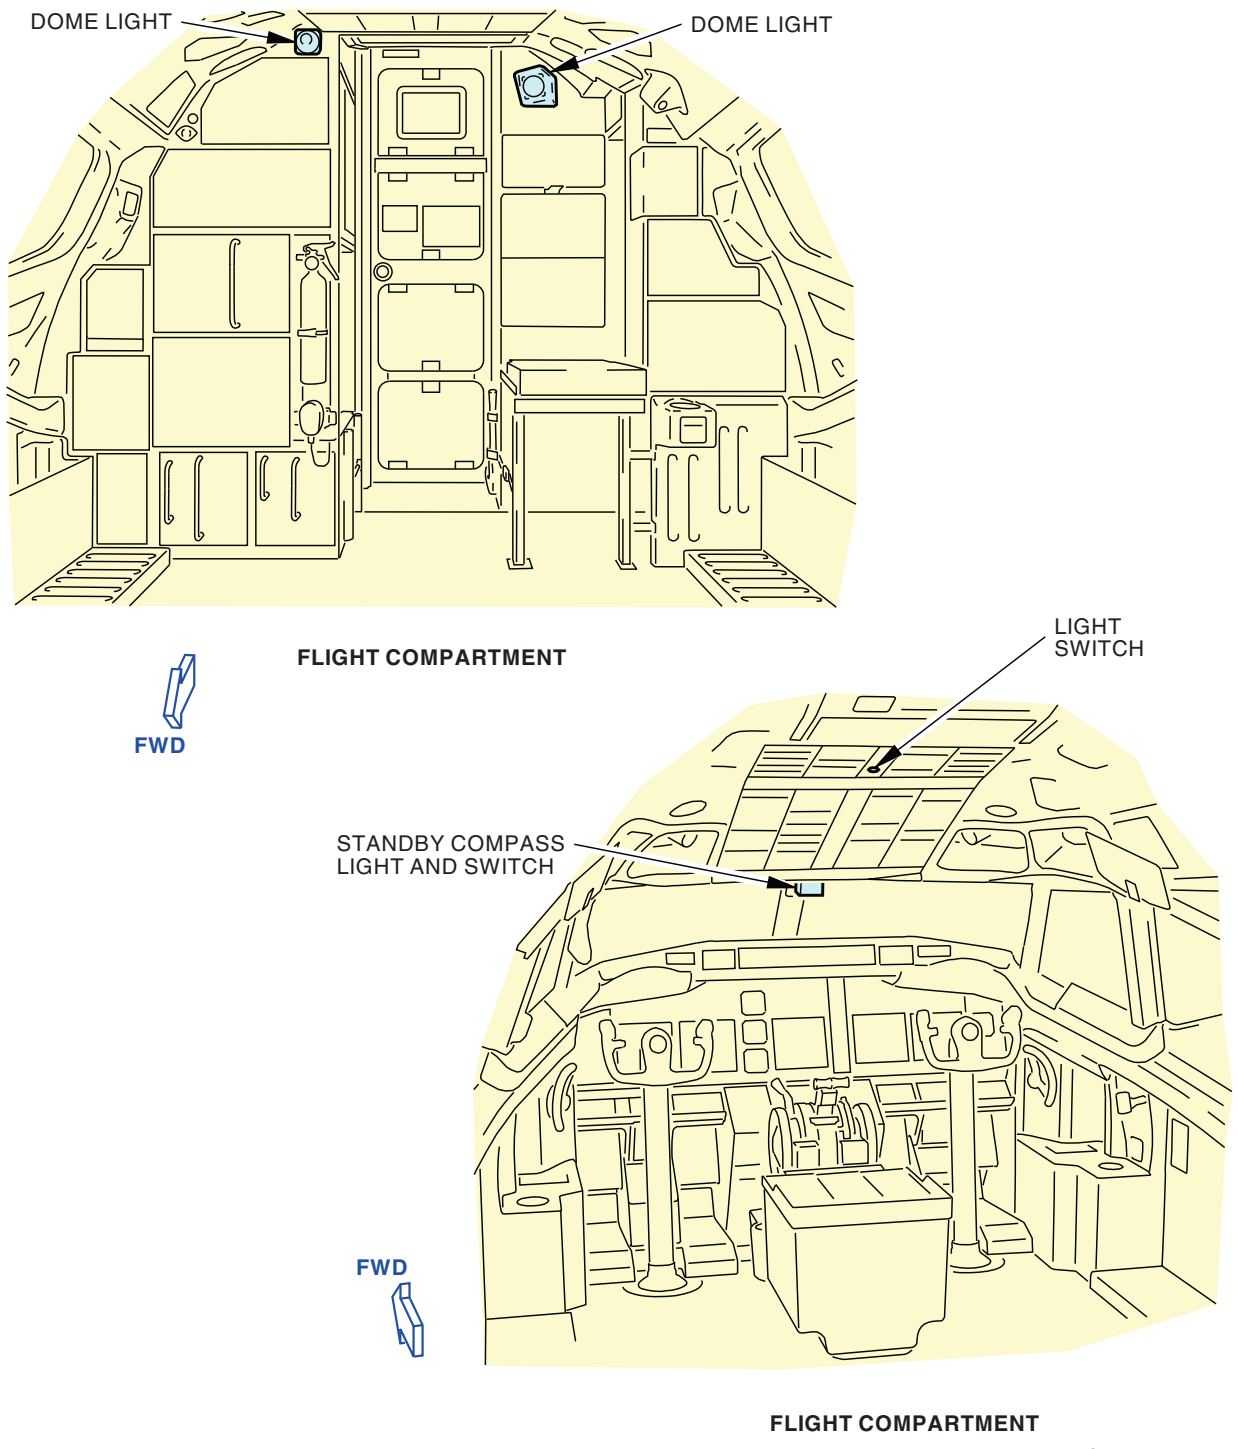


**Miscellaneous Lights**
**Figure 201/33-14-00-990-801 (Sheet 1 of 5)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

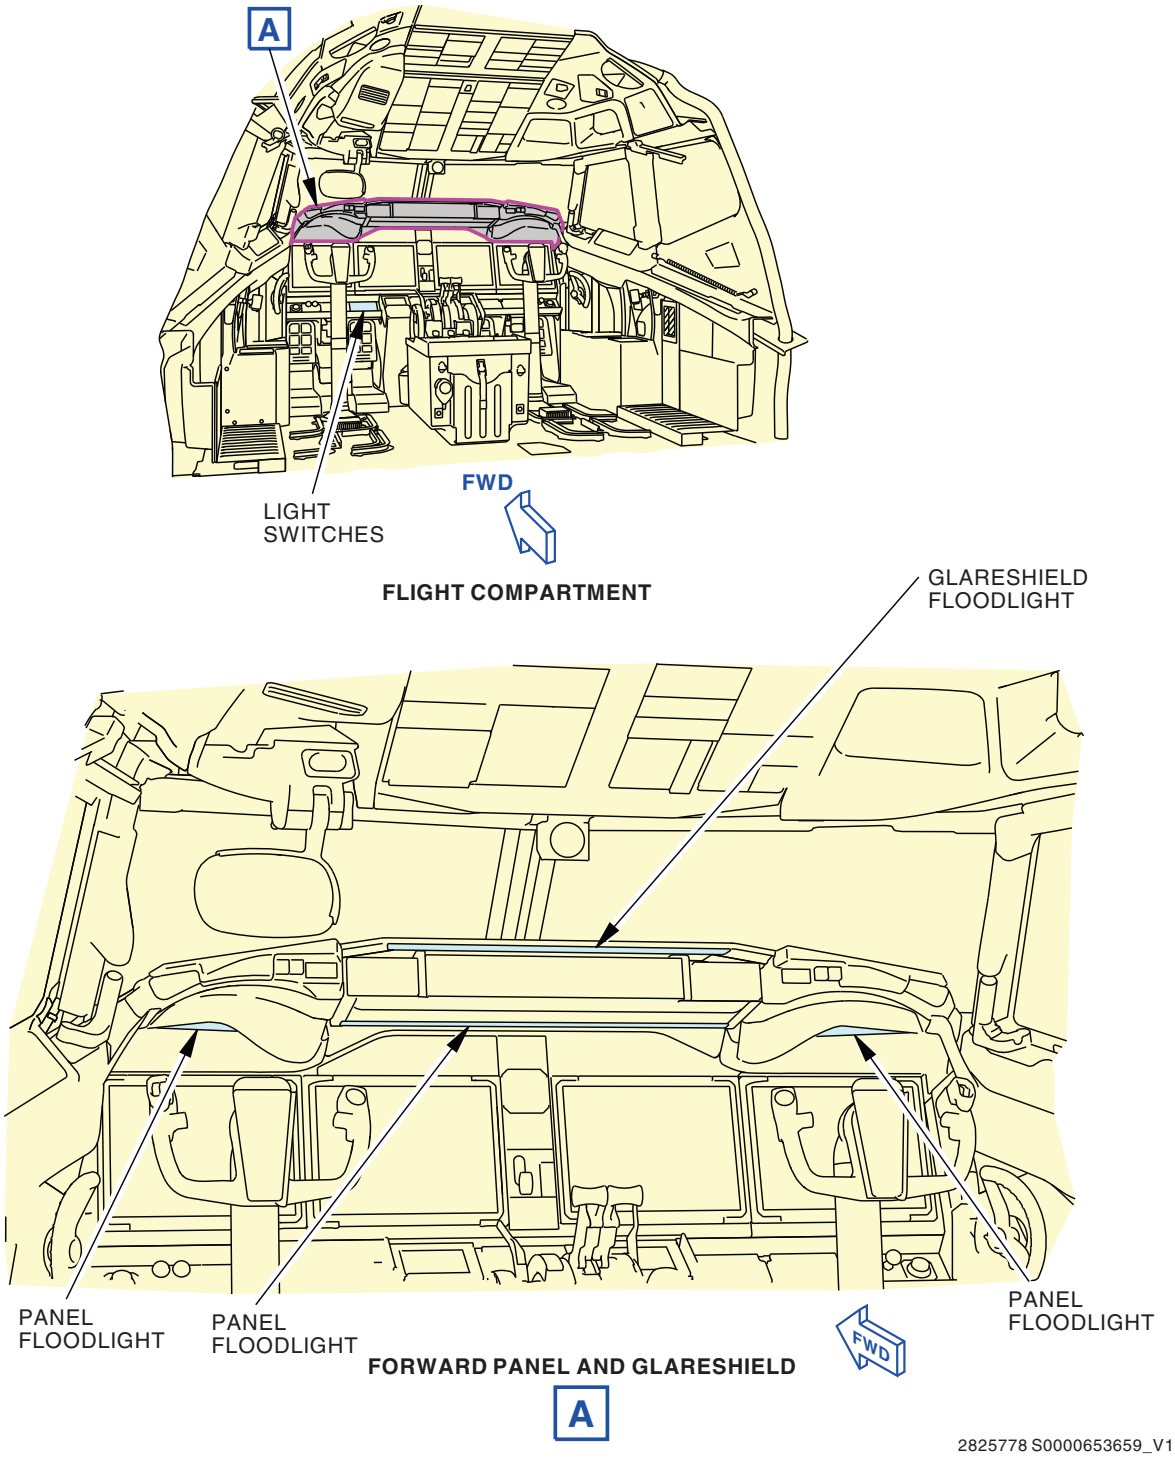



**Miscellaneous Lights**
**Figure 201/33-14-00-990-801 (Sheet 2 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

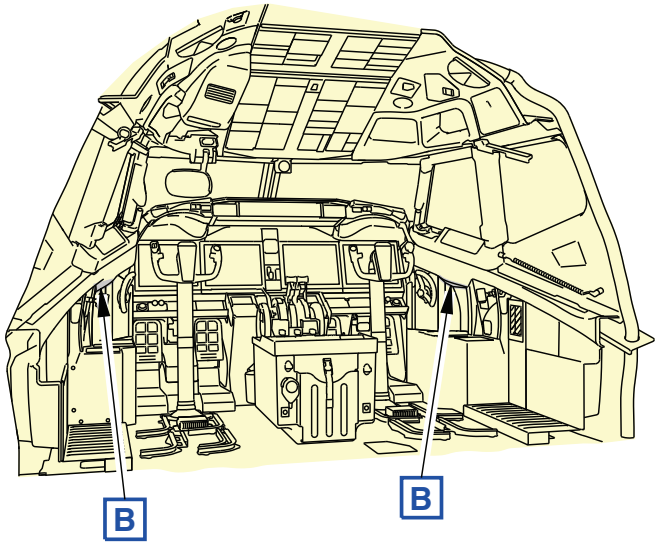


FLIGHT COMPARTMENT

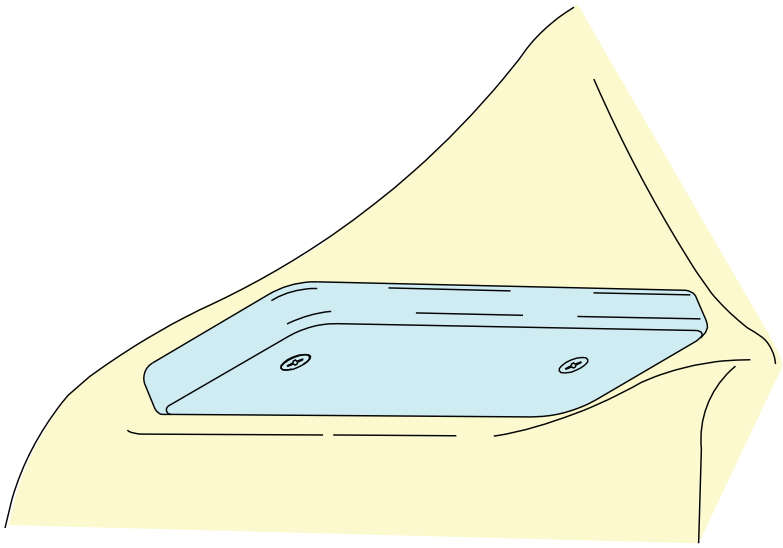

OXYGEN MASK FLOODLIGHT
(EXAMPLE)


B

2825780 S0000653660_V1


**Miscellaneous Lights**
**Figure 201/33-14-00-990-801 (Sheet 3 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

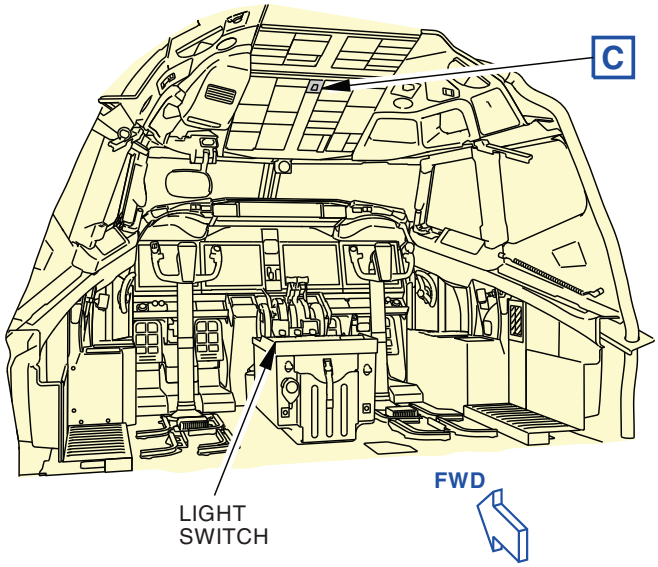


**FLIGHT COMPARTMENT**

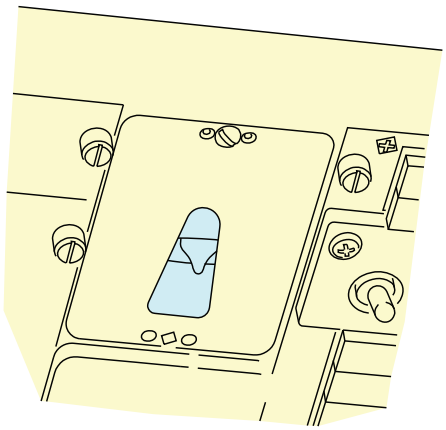

**CONTROL STAND FLOODLIGHT**


C

2825779 S0000653661_V1

**Miscellaneous Lights**
**Figure 201/33-14-00-990-801 (Sheet 4 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

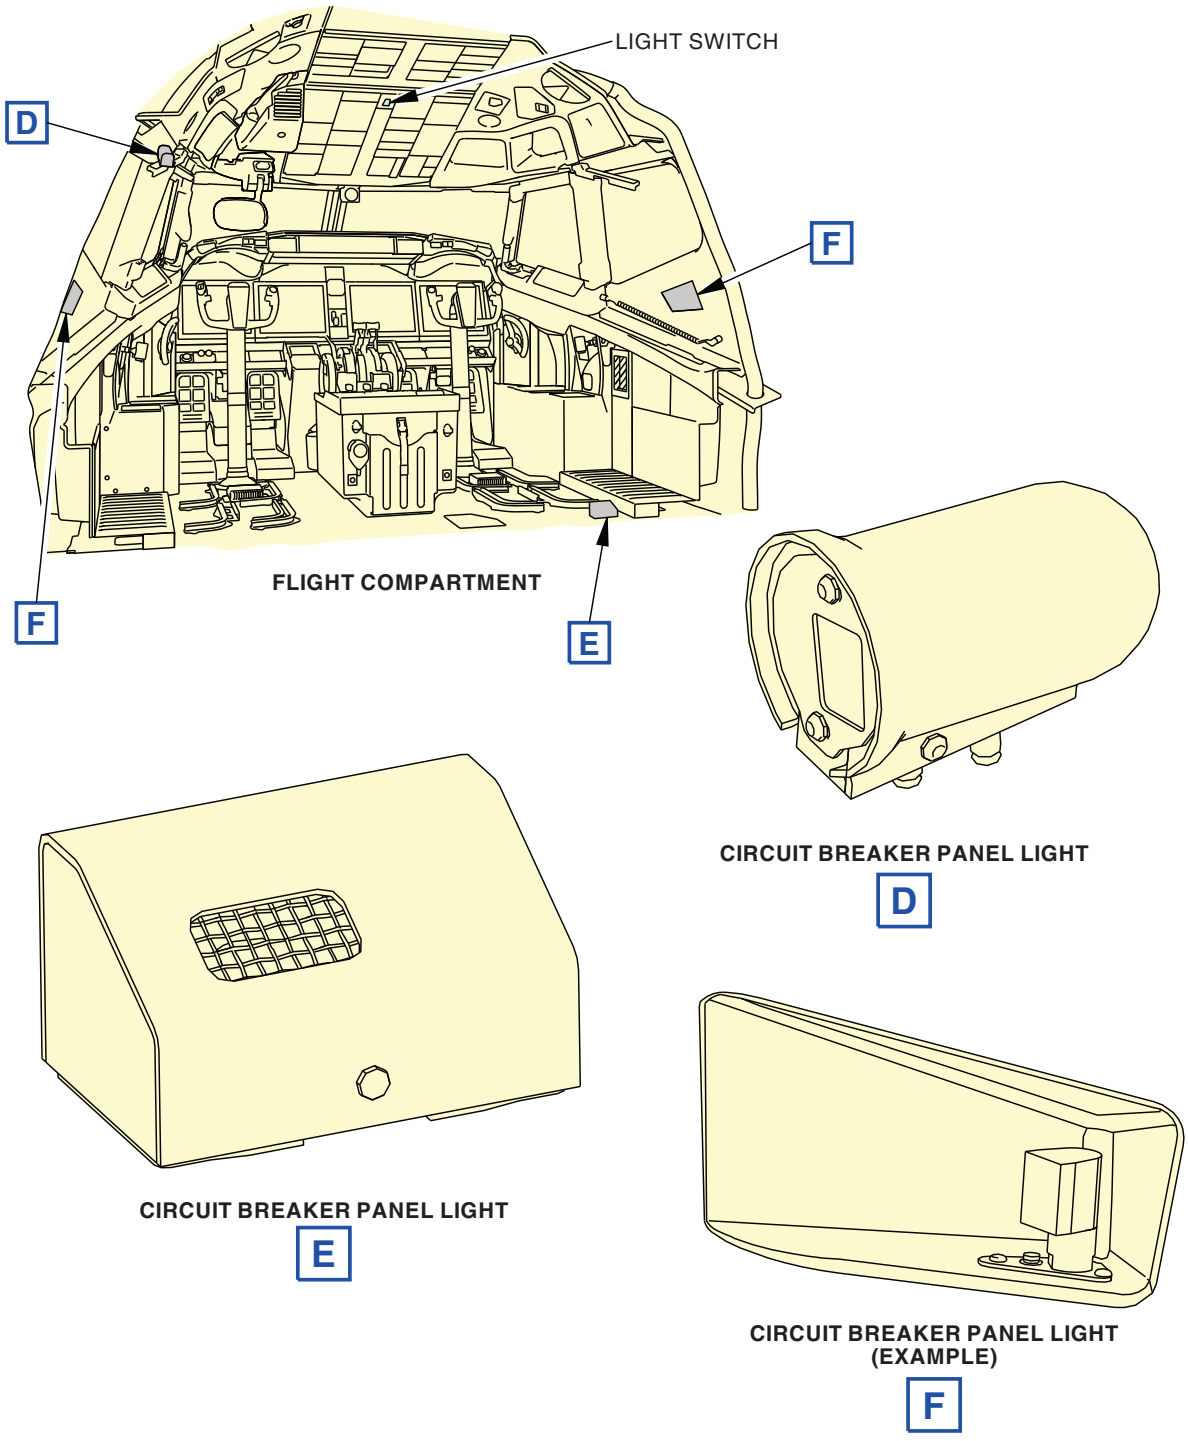


**Miscellaneous Lights**
**Figure 201/33-14-00-990-801 (Sheet 5 of 5)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-440-801**

**3. Miscellaneous Lights - Activation**

(Figure 201)

**A. General**

(1) This procedure adds electrical power to the Miscellaneous Lights.

**B. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**C. Procedure**

**SUBTASK 33-14-00-860-002**

(1) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C00283 | CONTROL CABIN LIGHTING CONT STAND |
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |
| A | 12 | C01425 | CONT CABIN LIGHTING PANEL FLOOD STBY |
| A | 14 | C00161 | CONTROL CABIN LIGHTING STBY COMPASS |
| A | 15 | C00282 | CONTROL CABIN LIGHTING DOME WHITE |
| C | 9 | C00219 | PANEL & INSTR CB PANEL |
| D | 8 | C00701 | EMER PANEL LTG |

**——— END OF TASK ———**

**TASK 33-14-00-960-801**

**4. Panel/Glareshield Floodlight - Light Assembly Replacement**

(Figure 202)

**A. General**

(1) When you replace the light assembly, do not discard it. It is possible to replace its lamps in a shop.

**B. Consumable Materials**

| Reference | Description | Specification |
|---|---|---|
| A50006 | Compound - Sealing, Thread-Locking, Anaerobic, Single-Component (100-200 In-Lbs) | MIL-S-46163 Type II Grade M |

**C. Expendables/Parts**

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 1 | Light assembly | 33-14-51-15-040 | PTF ALL |
| 5 | Light assembly | 33-14-51-15-020 | PTF ALL |
| | | 33-14-51-15-030 | PTF ALL |
| | | 33-14-51-15-050 | PTF ALL |

**D. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

| Zone | Area |
|---|---|
| 212 | Flight Compartment - Right |

**E. Procedure**

SUBTASK 33-14-00-860-003

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |
| A | 12 | C01425 | CONT CABIN LIGHTING PANEL FLOOD STBY |

SUBTASK 33-14-00-960-001

(2) Do these steps to replace the glareshield floodlight:

(a) Loosen the fasteners [2].

(b) Disconnect the electrical wire [3].

(c) Replace the light assembly [1].

(d) Connect the electrical wire [3].

(e) Apply compound, A50006 to the thread of fasteners [2].

1) Tighten the fasteners [2] to 8.00 in-lb (0.90 N·m).

SUBTASK 33-14-00-960-009

(3) Do these steps to replace the forward panel floodlights:

(a) Loosen the fasteners [4].

(b) Disconnect the electrical wire [3].

(c) Replace the light assembly [5].

(d) Connect the electrical wire [3].

(e) Apply compound, A50006 to the thread of fasteners [4].

1) Tighten the fasteners [4] to 8.00 in-lb (0.90 N·m).

SUBTASK 33-14-00-860-004

(4) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |
| A | 12 | C01425 | CONT CABIN LIGHTING PANEL FLOOD STBY |

SUBTASK 33-14-00-710-001

(5) Do a test of the new light assembly:

(a) At the forward panel on the floodlight control module, P1-5, set the applicable switch for the floodlight to the bright mode.

1) Make sure that the light comes on brightly.

(b) Set the switch to the dim mode.

1) Make sure that the light becomes dim.

(c) Set the switch to the off mode.

1) Make sure that the light goes off.




ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Set the switch to the usual mode.

——— END OF TASK ———




ECCN 9E991 BOEING PROPRIETARY - See title page for details

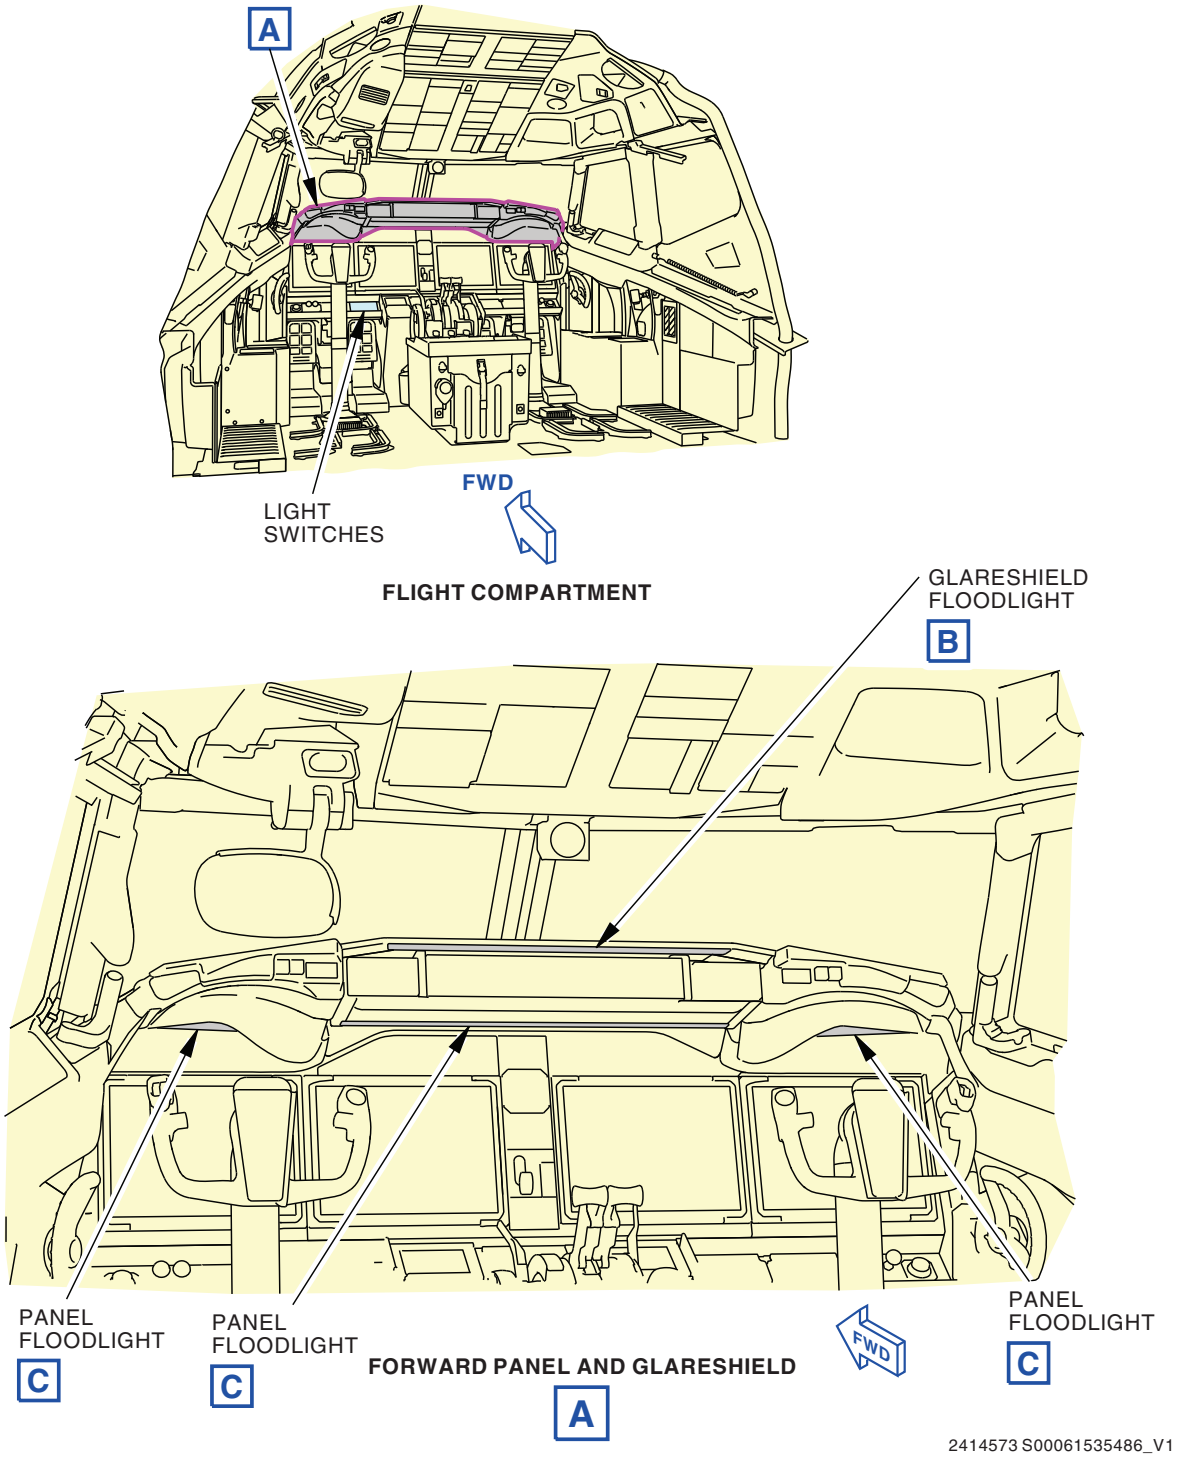


**Panel/Glareshield Floodlight - Light Assembly Replacement**
**Figure 202/33-14-00-990-802 (Sheet 1 of 2)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

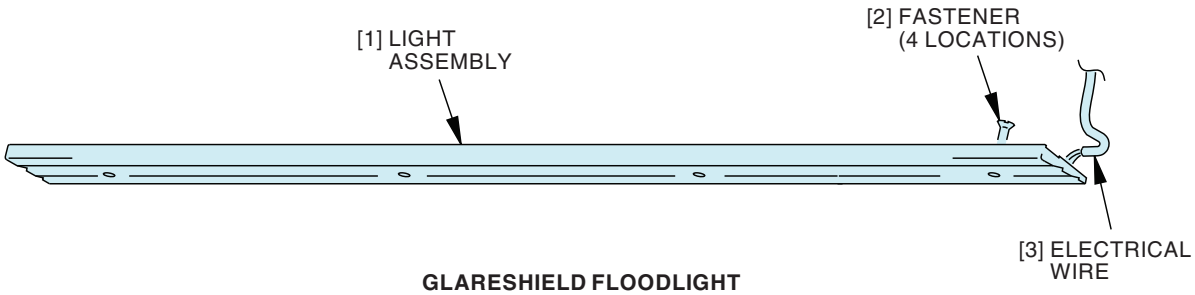


**GLARESHIELD FLOODLIGHT**

**B**

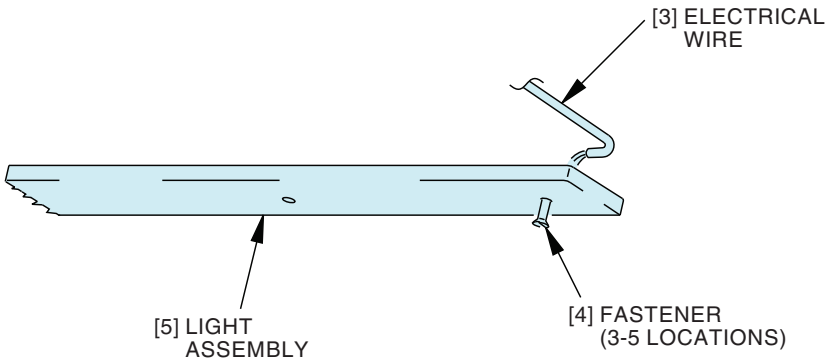


**PANEL FLOODLIGHT (EXAMPLE)**

**C**

2414574 S00061535489_V1

**Panel/Glareshield Floodlight - Light Assembly Replacement**
**Figure 202/33-14-00-990-802 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-960-802**

## 5. Control Stand Floodlight - Lamp Replacement

(Figure 203)

### A. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 23 | Lamp | 33-14-51-19-050 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Procedure

**SUBTASK 33-14-00-860-007**

(1) At the control stand on the lighting control module, P8-50, make sure the switch for the control stand floodlight is set to the OFF mode.

**SUBTASK 33-14-00-960-002**

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(2) Do these steps to replace the lamp:

(a) Loosen the fasteners [21].

(b) Remove the cover [22].

(c) Replace the lamp [23].

(d) Install the cover [22].

(e) Tighten the fasteners [21].

**SUBTASK 33-14-00-940-001**

(3) When the test is done during the day, put a windshield cover, STD-1176 on the windshield.

**SUBTASK 33-14-00-710-002**

(4) Do a test of the new lamp:

(a) At the P8-50 panel, set the switch for the control stand floodlight to the BRIGHT mode.

1) Make sure that the lamp comes on brightly.

(b) Set the switch to the DIM mode.

1) Make sure that the light becomes dim.

(c) Set the switch to the OFF mode.

1) Make sure that the light goes off.

(d) Set the switch to the usual mode.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 33-14-00-940-002

(5) If a windshield cover, STD-1176 was used on the windshield, remove it.

END OF TASK



ECCN 9E991 BOEING PROPRIETARY - See title page for details

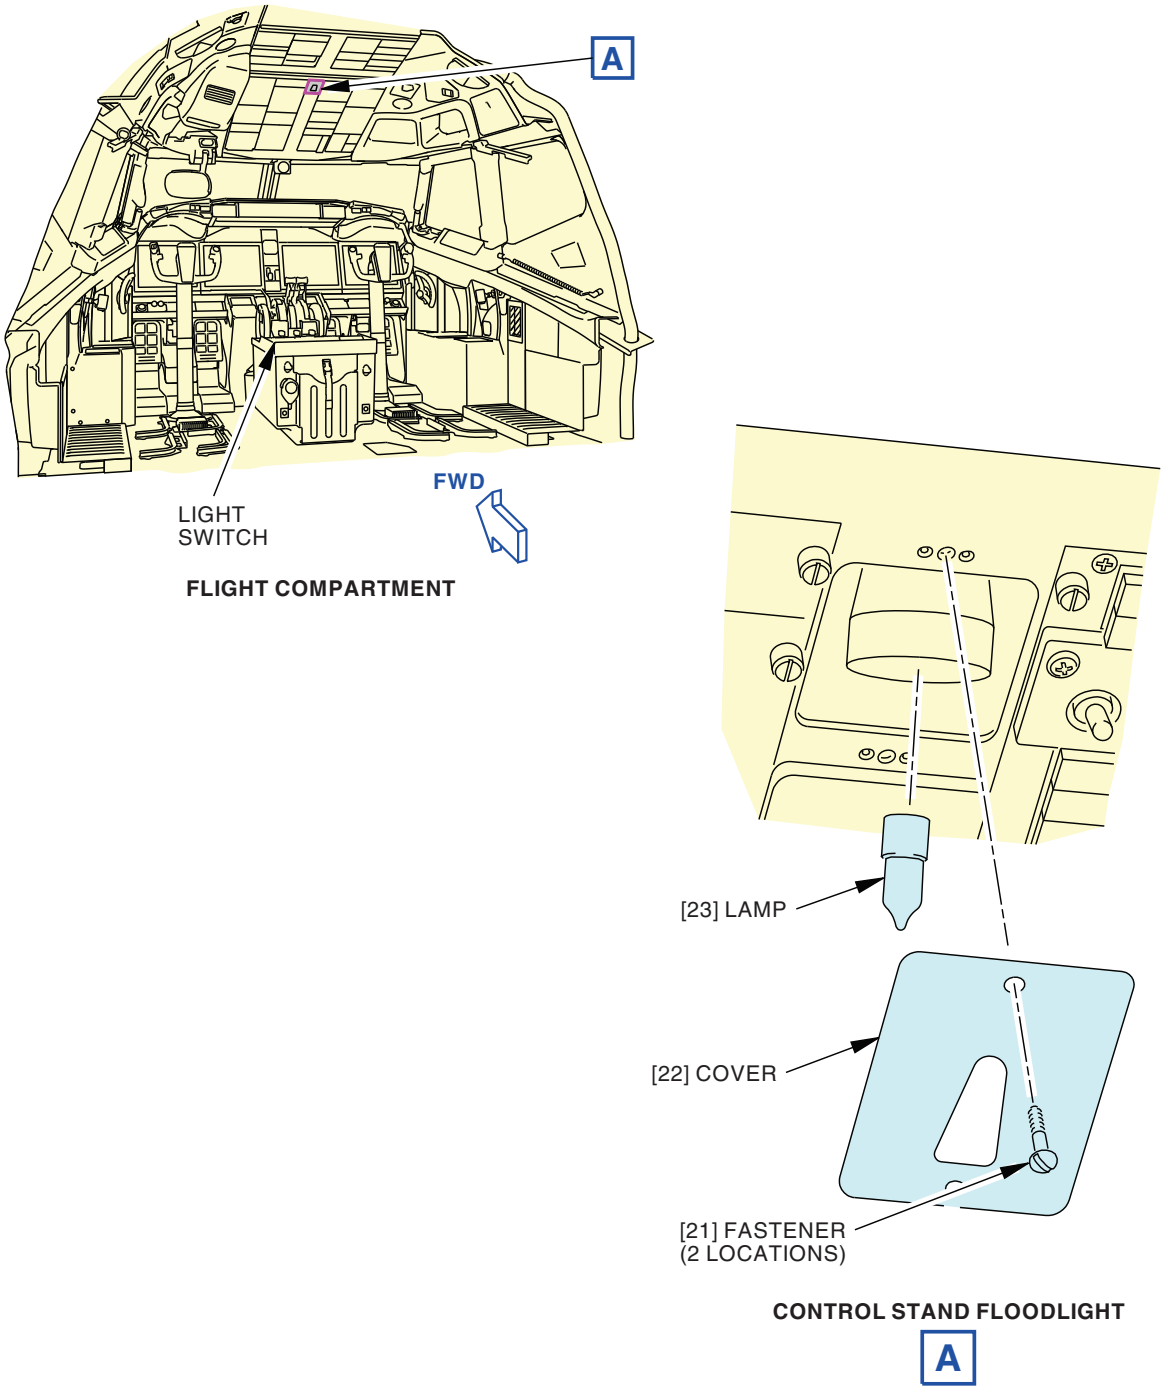


**Control Stand Floodlight - Lamp Replacement**
**Figure 203/33-14-00-990-803**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-960-803**

## 6. Control Stand Floodlight - Light Assembly Replacement

(Figure 204)

### A. General

(1) This task removes and installs the control stand floodlight light assembly, located on the P5 overhead panel.

(2) When you replace the light assembly, do not discard it. Refer to vendor instructions for possible repairs.

### B. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### C. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 28 | Light assembly | 33-14-51-19-055 | PTF ALL |

### D. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### E. Prepare for the Replacement

SUBTASK 33-14-00-860-010

(1) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C00283 | CONTROL CABIN LIGHTING CONT STAND |

SUBTASK 33-14-00-010-001

(2) Unlatch the P5 overhead panel and let the panel hinge down to the open position.

### F. Procedure

SUBTASK 33-14-00-020-001

(1) Disconnect the electrical wire [29].

SUBTASK 33-14-00-020-002

(2) Loosen the screw [24], washer [25], washer [26] and nut [27] from the back of the light assembly [28].

SUBTASK 33-14-00-960-003

(3) Replace the light assembly [28].

SUBTASK 33-14-00-420-001

(4) Tighten the screw [24], washer [25], washer [26] and nut [27] onto the back of the light assembly [28].

SUBTASK 33-14-00-420-002

(5) Connect the electrical wire [29].

### G. Put the Airplane Back to Its Usual Condition

SUBTASK 33-14-00-410-001

(1) Push the P5 overhead panel up to the closed position and latch it.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-14-00-860-011

(2) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C00283 | CONTROL CABIN LIGHTING CONT STAND |

## H. Control Stand Floodlight Replacement Test

SUBTASK 33-14-00-420-003

(1) If the test is done during the day, put a windshield cover, STD-1176 on the windshield.

SUBTASK 33-14-00-710-003

(2) Do these steps to test the new light assembly:

(a) At the P8-50 panel, set the switch for the control stand floodlight to the BRIGHT mode.

1) Make sure that the lamp comes on brightly.

(b) Set the switch to the DIM mode.

1) Make sure that the light becomes dim.

(c) Set the switch to the OFF mode.

1) Make sure that the light goes off.

(d) Set the switch to the usual mode.


SUBTASK 33-14-00-020-003

(3) If necessary, remove the windshield cover, STD-1176.

——— END OF TASK ———



ECCN 9E991 BOEING PROPRIETARY - See title page for details

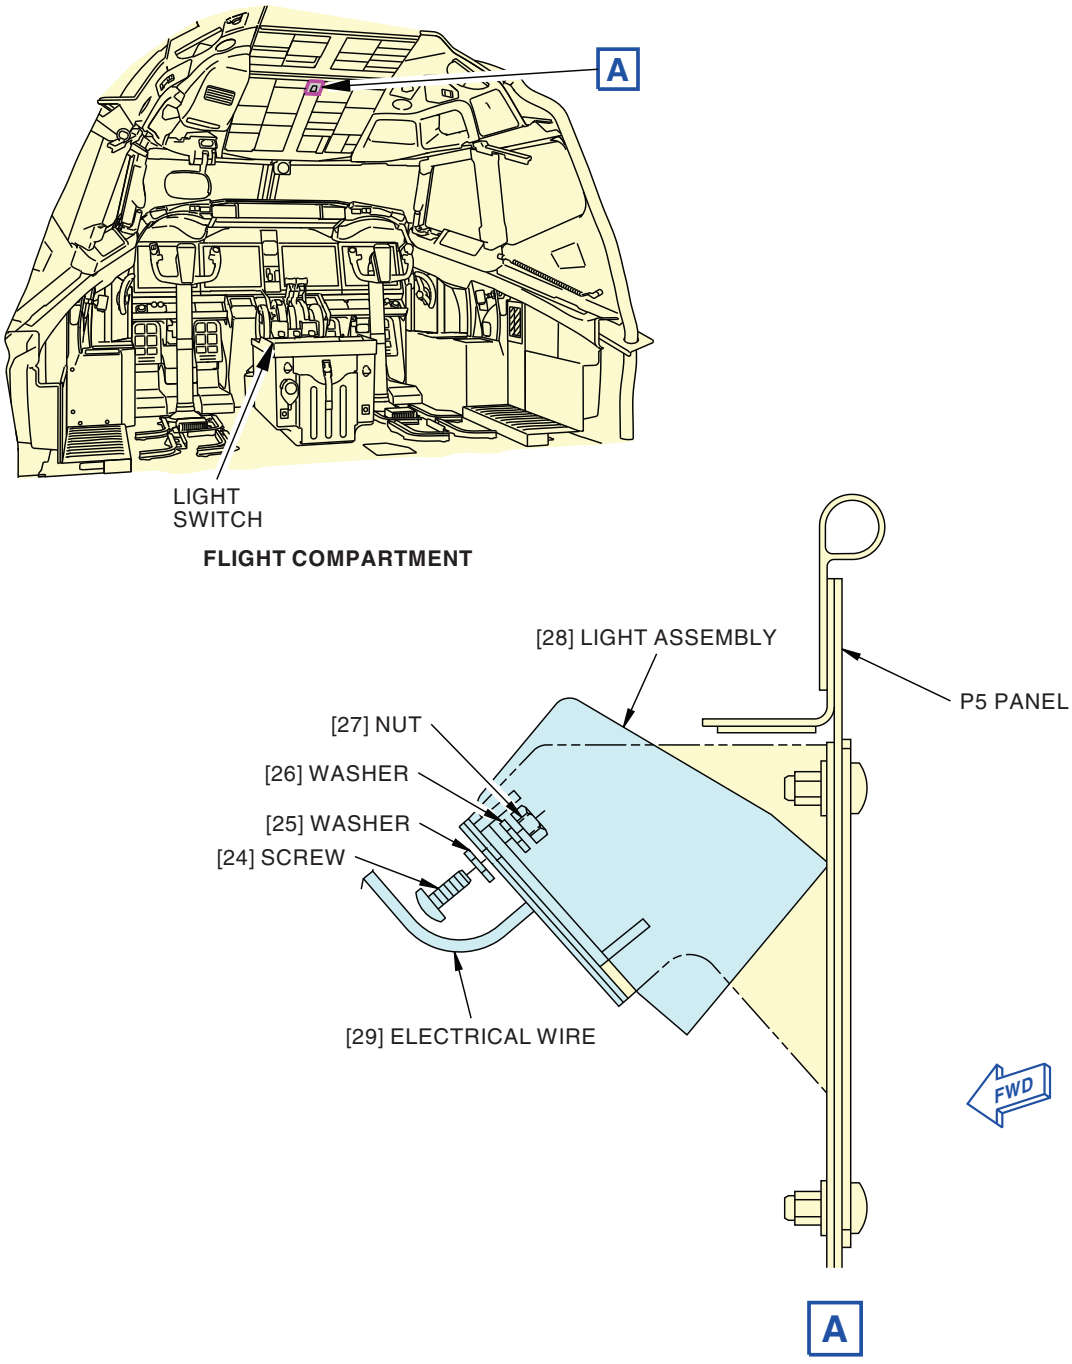


**Control Stand Floodlight - Light Assembly Replacement**
**Figure 204/33-14-00-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-960-804**

## 7. Oxygen Mask Floodlight - Light Assembly Replacement

(Figure 205)

### A. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 42 | Light assembly | 33-14-51-08-010 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Procedure

SUBTASK 33-14-00-860-012

(1) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 8 | C00701 | EMER PANEL LTG |

SUBTASK 33-14-00-960-004

(2) Do these steps to replace the light assembly:

(a) Loosen the fasteners [41].

(b) Disconnect the electrical wire [43].

(c) Replace the light assembly [42].

(d) Connect the electrical wire [43].

(e) Tighten the fasteners [41].

SUBTASK 33-14-00-940-003

(3) When the test is done during the day, put a windshield cover, STD-1176 on the windshield.

SUBTASK 33-14-00-710-004

(4) Do a test of the new light assembly:

(a) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 8 | C00701 | EMER PANEL LTG |

1) Make sure that the light comes on.

NOTE: The light will be very dim.

(b) Open this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 8 | C00701 | EMER PANEL LTG |

1) Make sure that the light goes off.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 8 | C00701 | EMER PANEL LTG |


**SUBTASK 33-14-00-940-004**

(5) If a windshield cover, STD-1176 was used on the windshield, remove it.


**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

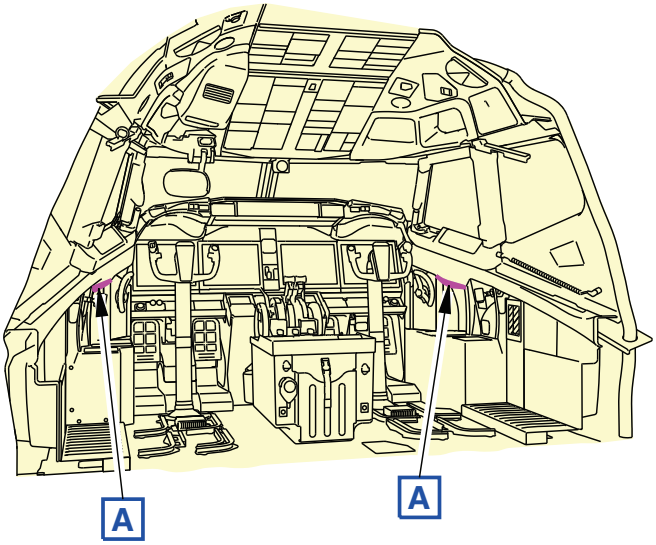


FLIGHT COMPARTMENT

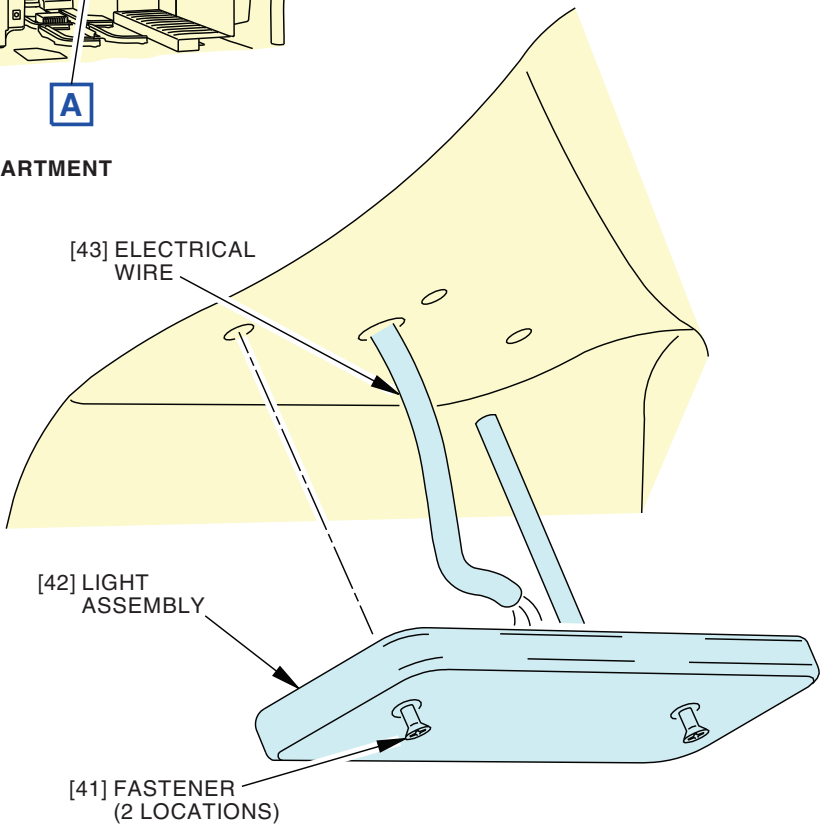


OXYGEN MASK FLOODLIGHT (EXAMPLE)

A

2414570 S00061535483_V1

**Oxygen Mask Floodlight - Light Assembly Replacement**
**Figure 205/33-14-00-990-805**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-960-805**

## 8. Dome Light - Lamp Replacement

(Figure 206)

### A. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 62 | Lamp | 33-14-51-01-030 | PTF ALL |
| 63 | Secondary lamp | 33-14-51-05-030 | PTF ALL |
| 64 | Lamp | 33-14-51-05-025 | PTF ALL |

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Procedure

SUBTASK 33-14-00-860-015

(1) On the overhead panel, P5, make sure that the DOME WHITE switch for the dome lights sets to the OFF mode.

SUBTASK 33-14-00-960-005

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(2) Do these steps to replace the lamp in the right dome light assembly [66]:

(a) Remove the lens [61].

(b) Remove the defective dome light lamp [62].

(c) Install the new dome light lamp [62].

(d) Install the lens [61].

SUBTASK 33-14-00-960-010

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(3) Do these steps to replace the lamp in the left dome light assembly [67]:

(a) Remove the lens [65].

(b) Remove the defective dome light lamp [64].

NOTE: The secondary lamp [63] installed in some light assemblies is connected to the emergency lighting system.

(c) Install the new dome light lamp [64].

(d) Install the lens [65].

SUBTASK 33-14-00-710-005

(4) Do a test of the new lamps:

(a) On the P5 panel, set the DOME WHITE switch for the dome lights to the BRIGHT mode.

1) Make sure that the lights come on bright.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Set the switch to the DIM mode.

1) Make sure that the lights become dim.

(c) Set the switch to the OFF mode.


1) Make sure that the lights go off.

(d) Set the switch to the usual mode.

——— END OF TASK ———




ECCN 9E991 BOEING PROPRIETARY - See title page for details

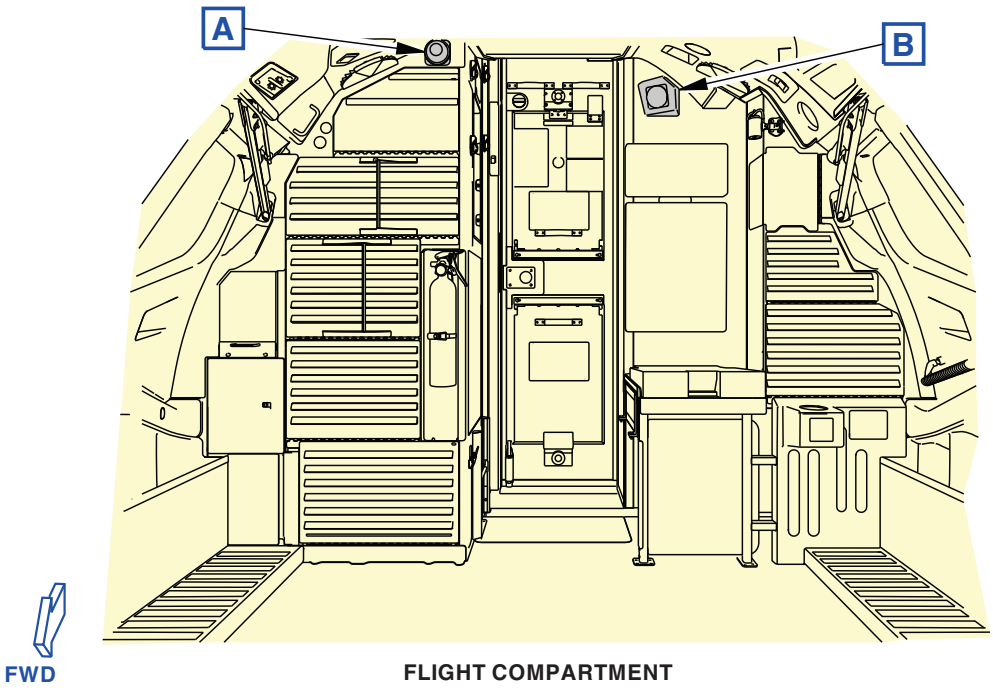


**Dome Light - Lamp Replacement**
**Figure 206/33-14-00-990-806 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

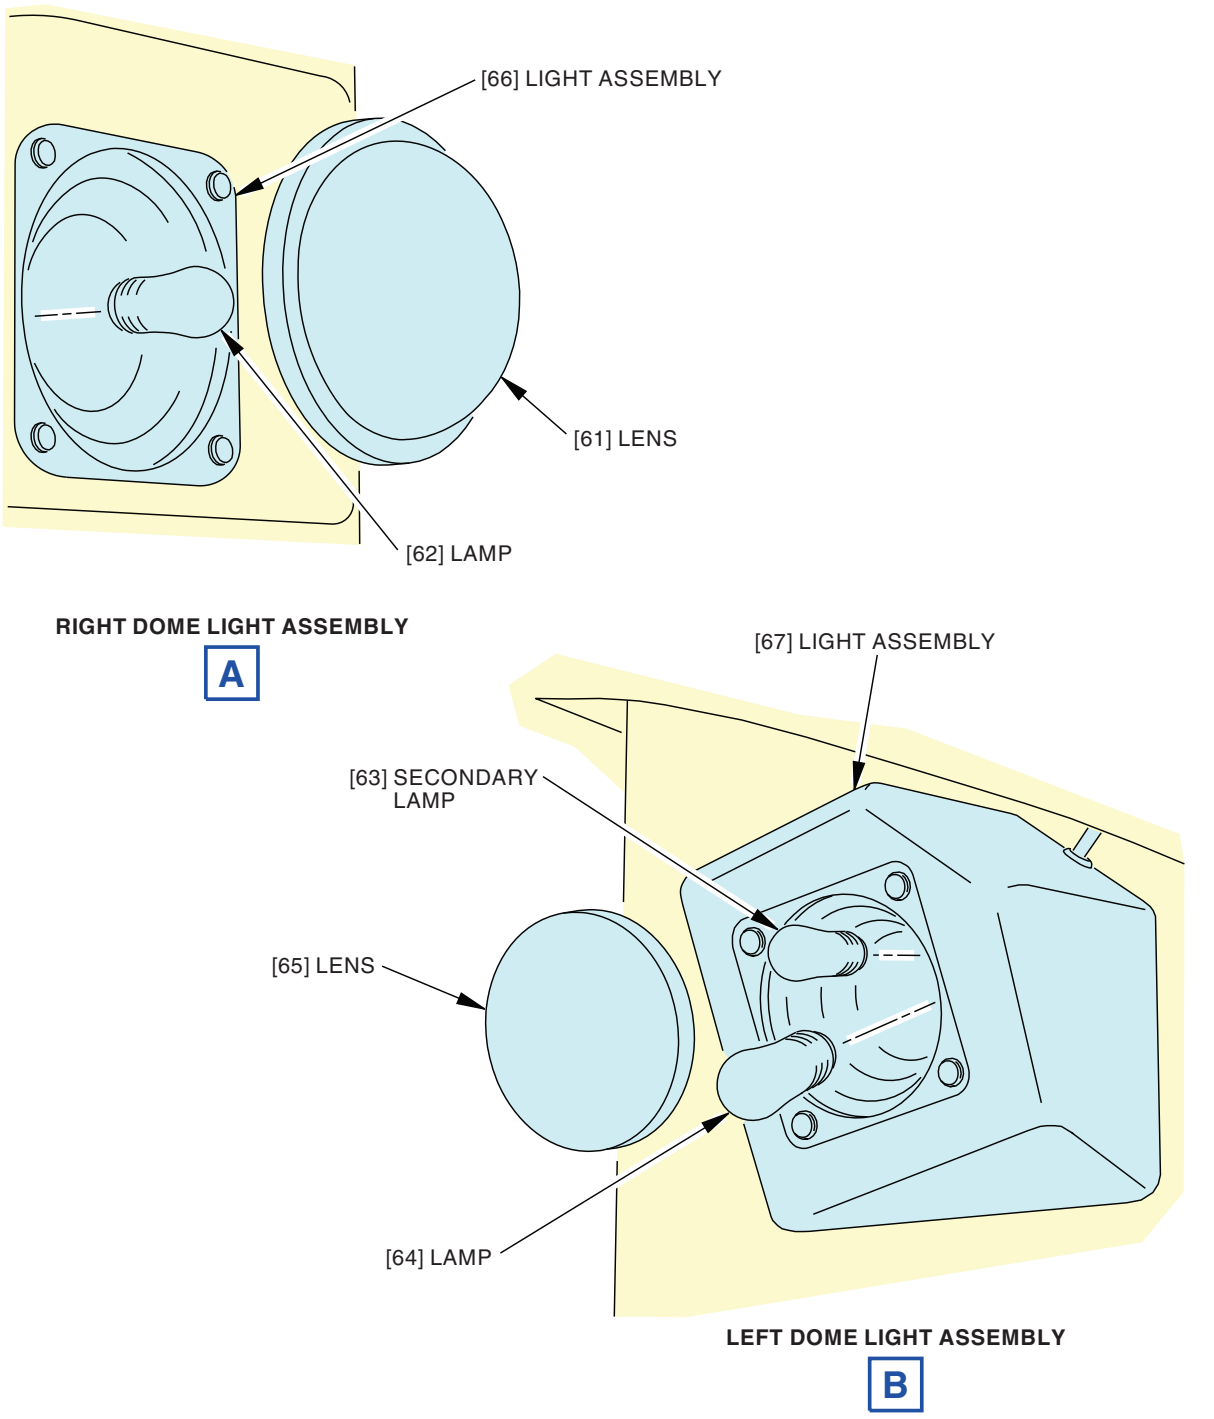


**Dome Light - Lamp Replacement**
**Figure 206/33-14-00-990-806 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-000-801**

**9. Dome Light - Removal**

(Figure 207)

**A. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**B. Procedure**

NOTE: The left dome light assembly includes two lamps. The 28 VDC battery bus supplies electrical power to the left and right dome lights.

**SUBTASK 33-14-00-860-018**

(1) On the overhead panel, P5, make sure that the DOME WHITE switch for the dome lights sets to the OFF mode.

**SUBTASK 33-14-00-860-019**

(2) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 15 | C00282 | CONTROL CABIN LIGHTING DOME WHITE |

**SUBTASK 33-14-00-020-004**

(3) Do these steps to remove the left light assembly [67]:

(a) Remove the screws [68] that hold the light assembly [67] to the shroud [70].

(b) Carefully pull out the light assembly [67].

(c) Disconnect the electrical connector [69] from the back of the light assembly [67].

1) Make a note of the wiring for aid during installation of the dome light.

(d) Carefully pull the electrical connector [69] from the shroud [70].

**SUBTASK 33-14-00-020-005**

(4) Do these steps to remove the right light assembly [66]:

(a) Remove the screws [73].


(b) Carefully pull out the light assembly [66].

(c) Disconnect the electrical connector [74] from the light assembly [66].

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

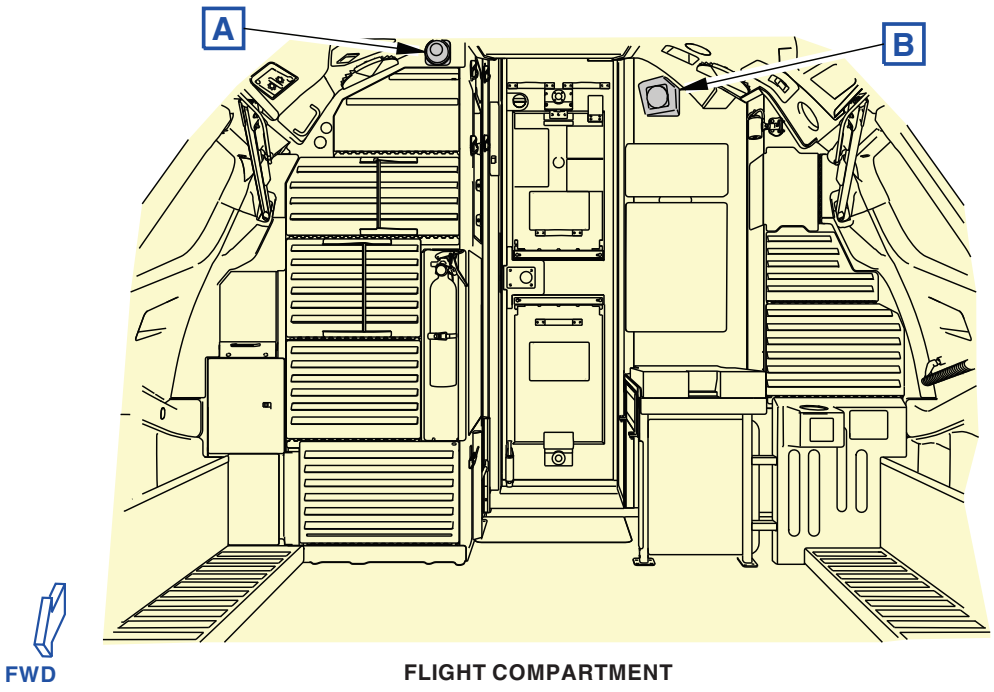



2414576 S00061535495_V1

**Dome Light - Installation**
**Figure 207/33-14-00-990-809 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

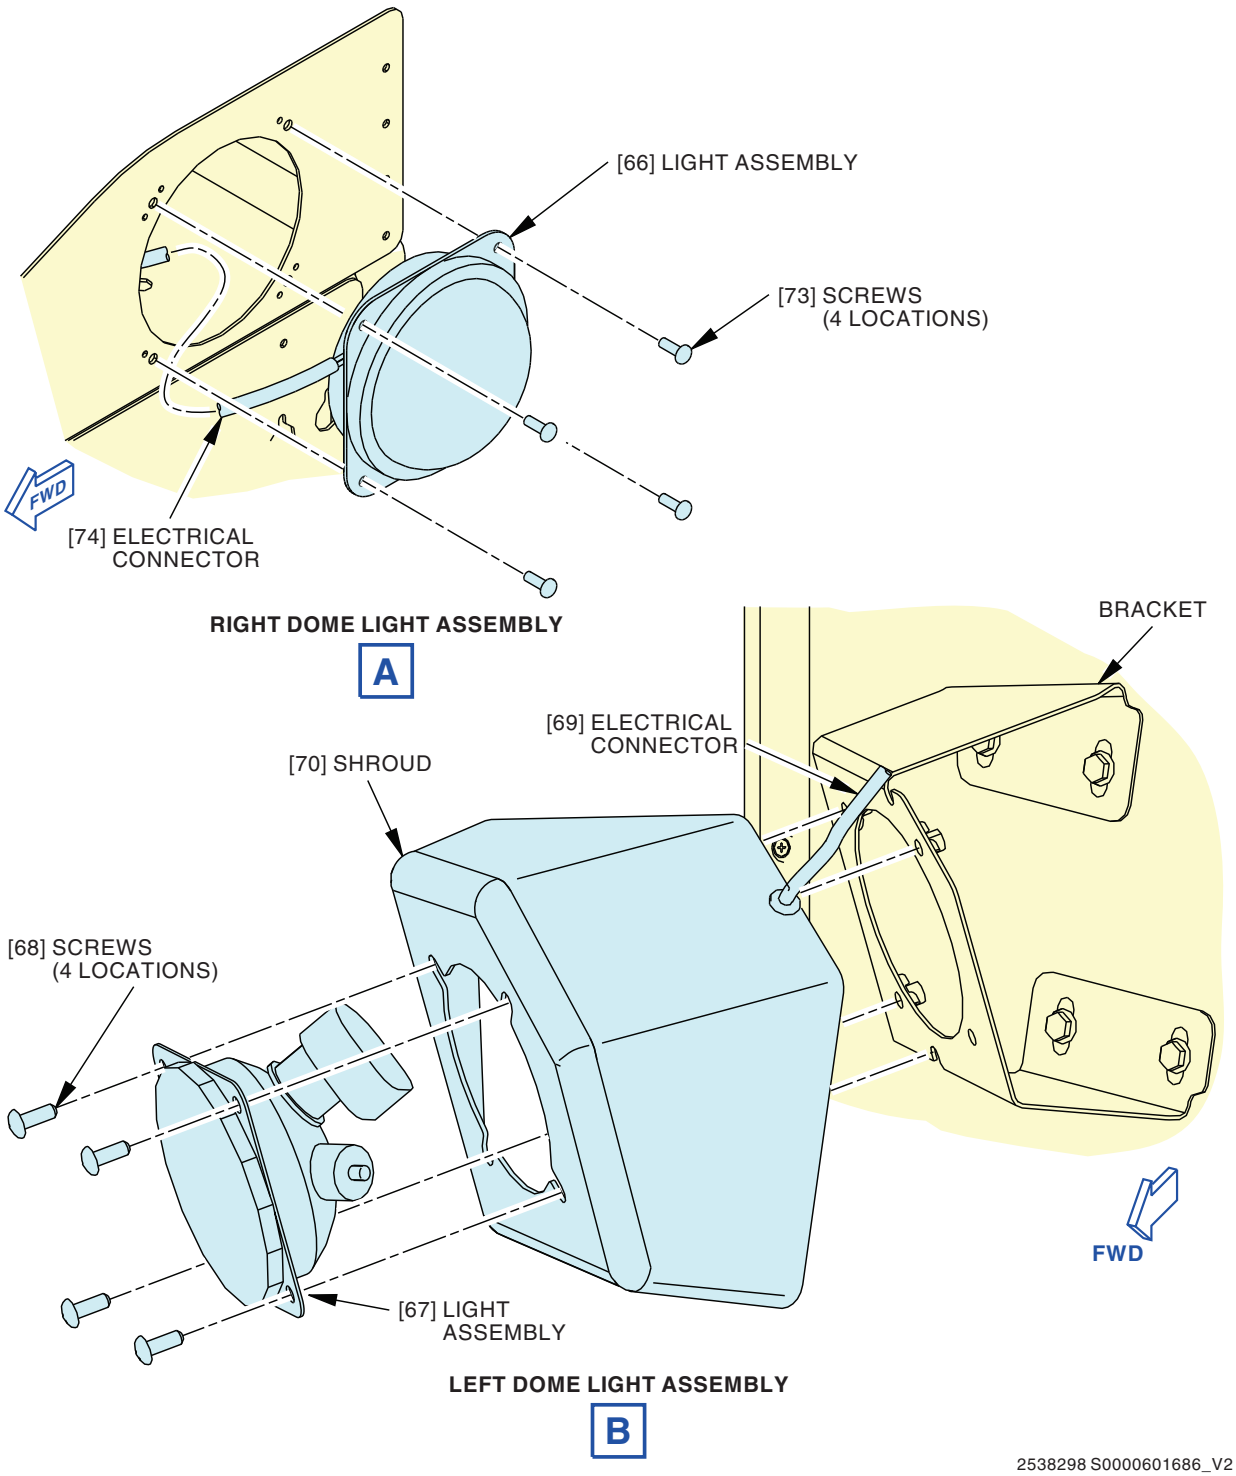


**Dome Light - Installation**
**Figure 207/33-14-00-990-809 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-400-801**

## 10. Dome Light - Installation

(Figure 207)

### A. References

| Reference | Title |
|---|---|
| WDM 33-14-12 | Wiring Diagram Manual |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 66 | Light assembly | 33-14-51-01-005 | PTF ALL |
| 67 | Light assembly | 33-14-51-05-015 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Procedure

SUBTASK 33-14-00-420-004

(1) Do these steps to install the left light assembly [67]:

(a) Put the electrical connector [69] through the hole in the shroud [70].

(b) Connect the electrical connector [69] to the back of the light assembly [67].

1) Make sure the electrical connector [69] wires are connected correctly (WDM 33-14-12 ).

(c) Put the light assembly [67] in the shroud [70] opening.

(d) Install the screws [68] that hold the light assembly [67] in its position.

SUBTASK 33-14-00-420-005

(2) Do these steps to install the right light assembly [66]:

(a) Connect the electrical connector [74] to the back of the light assembly [66].

1) Make sure the electrical connector [74] wires are connected correctly (WDM 33-14-12).

(b) Install the screws [73] that hold the light assembly [66] in its position.

SUBTASK 33-14-00-860-020

(3) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 15 | C00282 | CONTROL CABIN LIGHTING DOME WHITE |

SUBTASK 33-14-00-710-006

(4) Do a test of the left light assembly [67]:

(a) On the P5 panel, set the DOME WHITE switch for the dome lights to the BRIGHT mode.

NOTE: The dome lights are energized by the 28VDC battery. Use the lights for a minimum time to do this test.

1) Make sure that the dome lights come on brightly.

(b) Set the DOME WHITE switch to the DIM mode.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the intensity of the dome lights becomes dim.

(c) Set the DOME WHITE switch to the OFF mode.

1) Make sure that the dome lights go off.

SUBTASK 33-14-00-710-007

(5) Do a test of the right light assembly [67]:

(a) On the P5 panel, set the DOME WHITE switch for the dome light to the BRIGHT mode.

NOTE: The dome light is energized by the 28VDC battery. Use the light for a minimum time to do this test.

1) Make sure that the secondary dome light comes on brightly.

(b) Set the DOME WHITE switch to the DIM mode.

1) Make sure that the secondary dome light becomes dim.

(c) Set the DOME WHITE switch to the OFF mode.

1) Make sure that the secondary dome light goes off.

——— END OF TASK ———

TASK 33-14-00-960-806

## 11. Circuit Breaker Panel Light - Lamp Replacement

(Figure 208)

### A. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 83 | Lamp | 33-14-51-10-100 | PTF ALL |
| 86 | Lamp | 33-14-00-04-065 | PTF ALL |
| | | 33-14-00-04-070 | PTF ALL |
| 89 | Lamp | 33-14-00-05-195 | PTF ALL |

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Procedure

SUBTASK 33-14-00-860-023

(1) On the overhead panel, P5, adjacent to the control stand floodlight, make sure the switch for the circuit breaker panel lights is set to the OFF mode.

SUBTASK 33-14-00-960-007

(2) Do these steps to replace lamp [83] or lamp [89]:

(a) If the light has a cover, loosen the applicable screw [81] or screws [88] and lift away the cover [82] or cover [87].

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(b) Replace the applicable lamp [83] or lamp [89].

(c) If cover [82] was removed, install the cover [82], and install the screw [81].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Tighten the screw [81] until it stops, then tighten an additional 1/8 turn.

(d) If cover [87] was removed, install the cover [87], and install the screws [88].

1) Tighten the screws [88] until it stops, then tighten an additional 1/8 - 1/4 turn.

SUBTASK 33-14-00-960-012

(3) Do these steps to replace the lamp [86]:

(a) Remove the shield [85].

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(b) Replace the lamp [86].

(c) Install the shield [85].

SUBTASK 33-14-00-710-008

(4) Do a test of the new lamp:

(a) At the P5 panel, set the switch for the circuit breaker panel lights to the BRIGHT mode.

1) Make sure that the light comes on brightly.

(b) Set the switch to the DIM mode.

1) Make sure that the light becomes dim.

(c) Set the switch to the OFF mode.


1) Make sure that the light goes off.

(d) Set the switch to the usual mode.

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

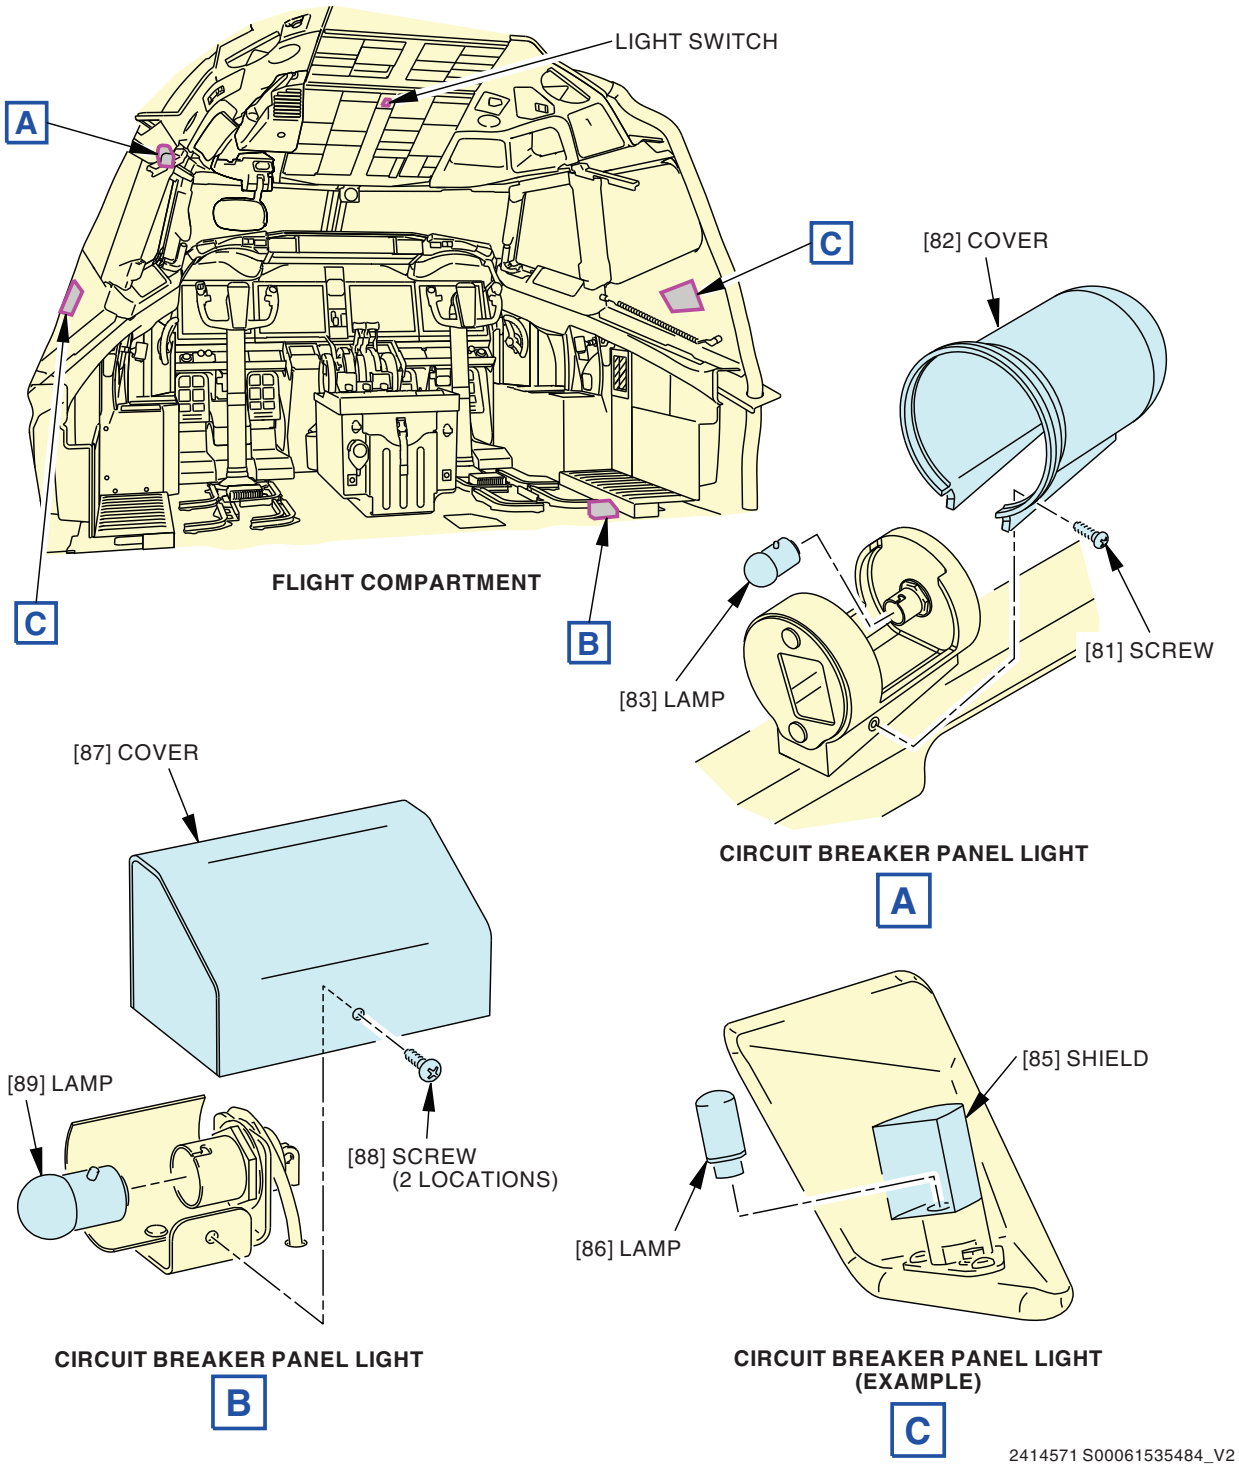


**Circuit Breaker Panel Light - Lamp Replacement**
**Figure 208/33-14-00-990-807**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-960-807**

## 12. Dimmer Control Unit - Replacement

(Figure 209)

### A. References

| Reference | Title |
|---|---|
| 25-11-01-000-801 | Captain and First Officer Seat Removal (P/B 401) |
| 25-11-01-400-801 | Captain and First Officer Seat Installation (P/B 401) |
| 27-21-00-800-802 | Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation (P/B 201) |
| 27-21-00-840-802 | Pressure to the Rudder Systems A, B, and Standby - Activation (P/B 201) |
| 34-61-01-000-802 | FMCS Control Display Unit (CDU) Removal (P/B 401) |
| 34-61-01-400-802 | FMCS Control Display Unit (CDU) Installation (P/B 401) |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 103 | Dimmer control unit | 33-11-00-37-005 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Prepare for the Procedure

**SUBTASK 33-14-00-010-002**

(1) Do this task: FMCS Control Display Unit (CDU) Removal, TASK 34-61-01-000-802.

**SUBTASK 33-14-00-010-003**

(2) Do this task: Captain and First Officer Seat Removal, TASK 25-11-01-000-801.

**SUBTASK 33-14-00-840-002**

(3) Do this task: Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation, TASK 27-21-00-800-802.

**SUBTASK 33-14-00-010-004**

**WARNING** MAKE SURE THAT PERSONS AND EQUIPMENT ARE CLEAR OF THE RUDDER. THE RUDDER CAN MOVE QUICKLY. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(4) Push the rudder pedal fully forward to get access to the lower side panel [106].

**SUBTASK 33-14-00-010-005**

(5) Remove the lower side panel [106] from the forward electronic panel.

(a) Remove the screws [107].

(b) Remove the lower side panel [106].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-14-00-860-026

(6) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |
| A | 12 | C01425 | CONT CABIN LIGHTING PANEL FLOOD STBY |

## E. Procedure

SUBTASK 33-14-00-960-008

(1) Do these steps to replace the dimmer control unit [103]:

(a) Disconnect the electrical connector [102].

(b) Remove four screws [104] that holds the dimmer control unit [103] to the mounting plate [105].

(c) Replace the dimmer control unit [103].

(d) Install the four screws [104].

(e) Connect the electrical connector [102].

SUBTASK 33-14-00-860-027

(2) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |
| A | 12 | C01425 | CONT CABIN LIGHTING PANEL FLOOD STBY |

SUBTASK 33-14-00-710-009

(3) Do a test of the new dimmer control unit:

(a) At the forward panel on the floodlight control module, P1-5, set the switch for the applicable floodlights to the bright mode.

1) Make sure that the light comes on brightly.

(b) Set the switch to the dim mode.

1) Make sure that the light becomes dim.

(c) Set the switch to the off mode.

1) Make sure that the light goes off.

(d) Set the switch to the usual mode.

## F. Put the Airplane Back to Its Usual Condition

SUBTASK 33-14-00-410-003

(1) Install the lower side panel [106].

(a) Put the lower side panel [106] in place on the forward electronic panel.

(b) Install the screws [107] on the lower side panel [106].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-14-00-860-028

**WARNING** MAKE SURE THAT PERSONS AND EQUIPMENT ARE CLEAR OF THE RUDDER. THE RUDDER CAN MOVE QUICKLY. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

(2) Put the rudder pedal back to the center position.

SUBTASK 33-14-00-840-001

**WARNING** KEEP PERSONS AND EQUIPMENT CLEAR OF THE FLIGHT CONTROL SURFACES, THE THRUST REVERSERS, AND THE LANDING GEAR. THESE COMPONENTS CAN MOVE SUDDENLY WHEN YOU SUPPLY HYDRAULIC POWER. THIS CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT.

(3) Do this task: Pressure to the Rudder Systems A, B, and Standby - Activation, TASK 27-21-00-840-802.

SUBTASK 33-14-00-410-004

(4) Do this task: Captain and First Officer Seat Installation, TASK 25-11-01-400-801.


SUBTASK 33-14-00-410-002

(5) Do this task: FMCS Control Display Unit (CDU) Installation, TASK 34-61-01-400-802.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

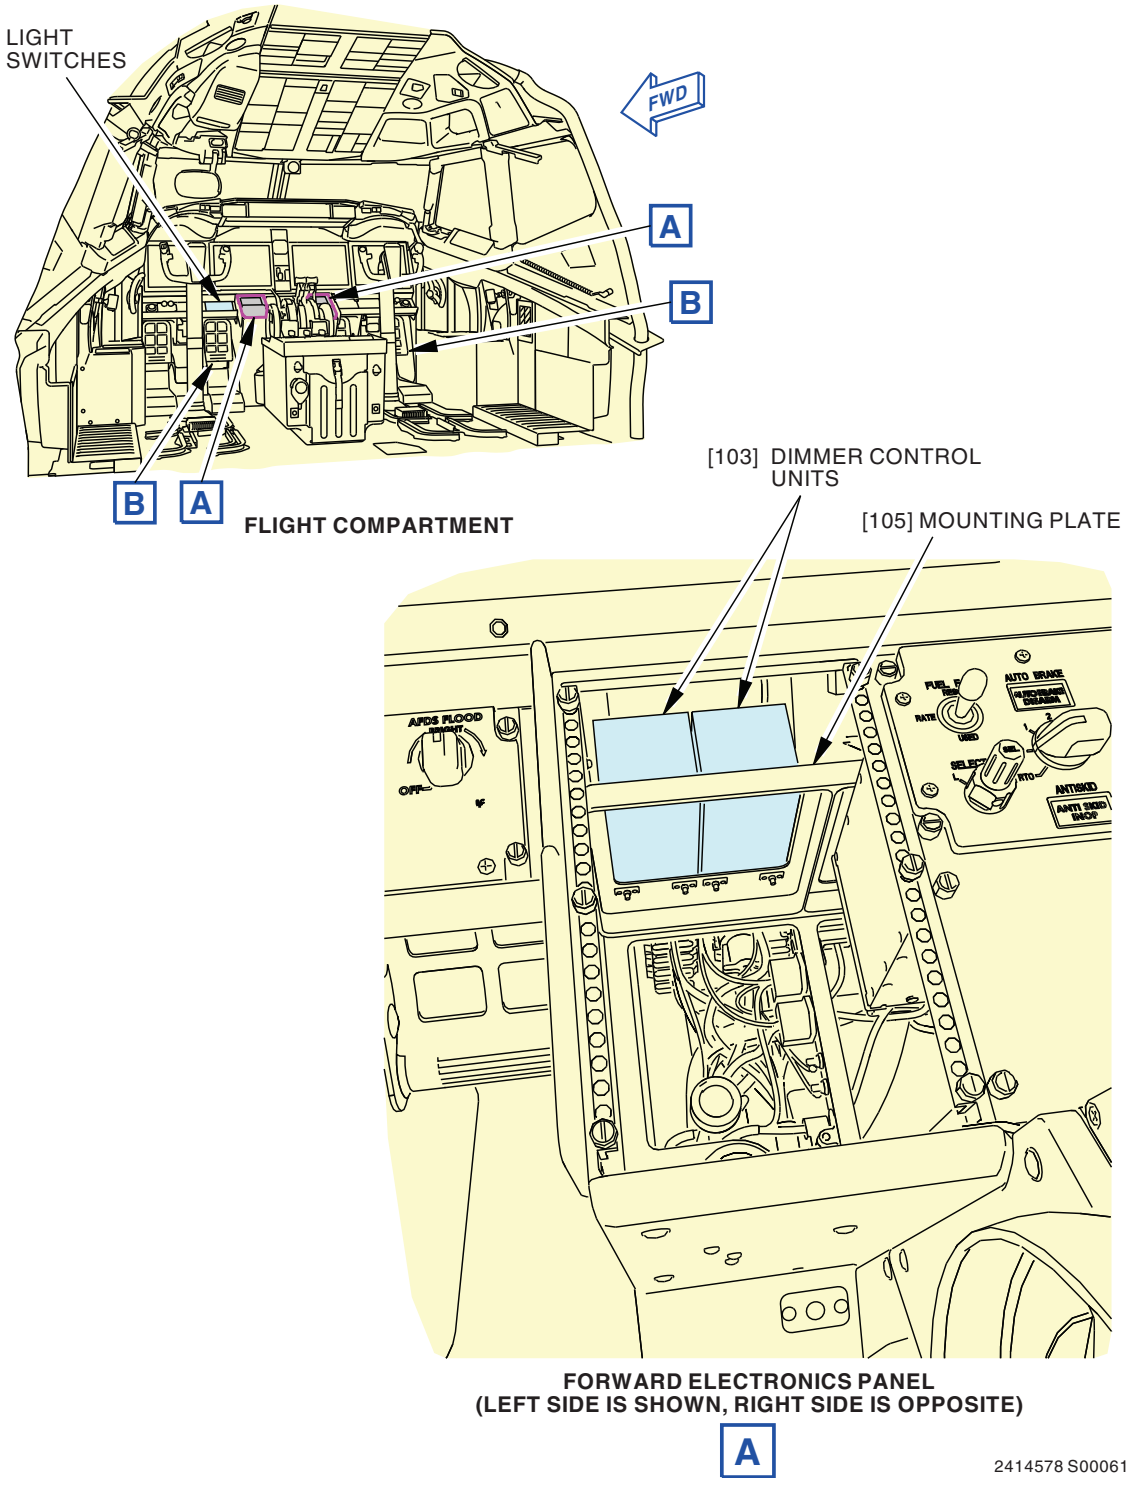


**Dimmer Control Unit - Replacement**
**Figure 209/33-14-00-990-808 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

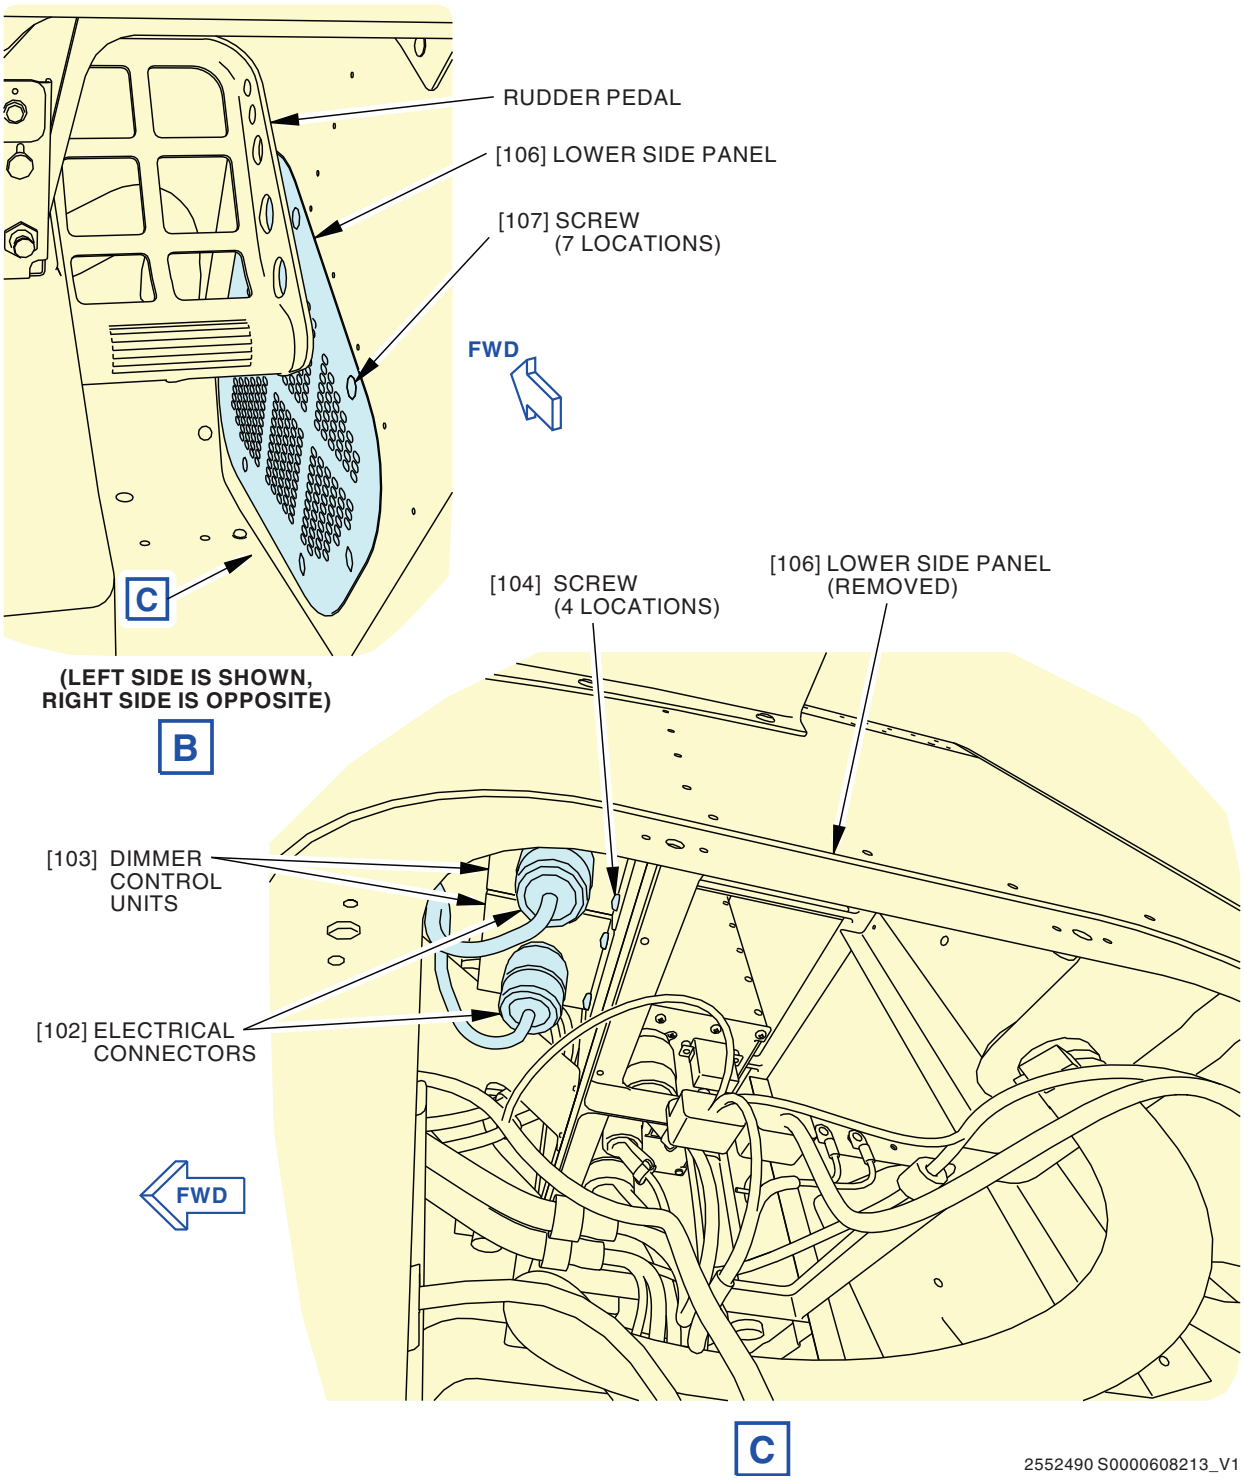


**Dimmer Control Unit - Replacement**
**Figure 209/33-14-00-990-808 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-14-00-710-801**

## 13. Panel Floodlights - Operational Test of the Standby Relay

### A. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### B. Procedure

**SUBTASK 33-14-00-710-010**

(1) Do this test of the standby relay for the panel floodlights:

NOTE: When you open the circuit breaker, you simulate the standby mode.

(a) At the forward panel on the floodlight control module, P1-5, set the switch for the main panel floodlights to the bright mode.

1) Make sure that the panel floodlights come on brightly.

(b) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |

1) Make sure that the panel floodlights become dim.

(c) Set the switch to the OFF or DIM mode.

1) Make sure the switch has no effect on the panel floodlights.

(d) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 11 | C00751 | CONT CABIN LIGHTING PANEL FLOOD CONT |

(e) Set the switch to the usual mode.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## FLIGHT CREW LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Flight Crew Lights Deactivation.

(2) Flight Crew Lights Activation.

(3) Map light - Lamp Replacement.

(4) Flight Kit/Reading Light - Lamp Replacement.

(5) Chart Light - Lamp Replacement.

**TASK 33-17-00-040-801**

### 2. Flight Crew Lights - Deactivation

(Figure 201 or Figure 202 or Figure 203)

**A. General**

(1) This procedure removes electrical power from the Flight Crew Lights.

**B. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**C. Procedure**

**SUBTASK 33-17-00-860-001**

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 9 | C00308 | CONTROL CABIN LIGHTING MAP & KIT |
| A | 10 | C00309 | CONTROL CABIN LIGHTING OBS READING |

**D. Flight Crew Lights - Tryout**

NOTE: This tryout is to make sure the Flight Crew Lights are in a zero energy state.

**SUBTASK 33-17-00-700-001**

(1) For the map, chart, and flight kit lights do these steps:

(a) At the P21 panel, turn the MAP and CHART light control switches clockwise to the full BRIGHT position.

1) Make sure that neither the map light, nor chart light comes on.

(b) Turn the control switches on the P21 panel counter clockwise to the OFF position.

(c) At the flight kit light, turn the light control knob to the full BRIGHT position and set the light switch to the ON mode.

1) Make sure the flight kit light does not come on.

(d) Set the light switch to the OFF mode.

(e) At the P23 panel, turn the MAP and CHART light control switches clockwise to the full BRIGHT position.

1) Make sure that neither the map light, nor chart light comes on.

(f) Turn the control switches on the P23 panel counter clockwise to the OFF position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(g) At the flight kit light, turn the light control knob to the full BRIGHT position and set the light switch to the ON mode.

1) Make sure the flight kit light does not come on.

(h) Set the light switch to the OFF mode.

(2) For the observer reading lights do these steps:

(a) Turn the light control knob to the full BRIGHT position and set the light switch to the ON mode.

1) Make sure the observer reading light does not come on.

(b) Set the light control switch to the OFF mode.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details


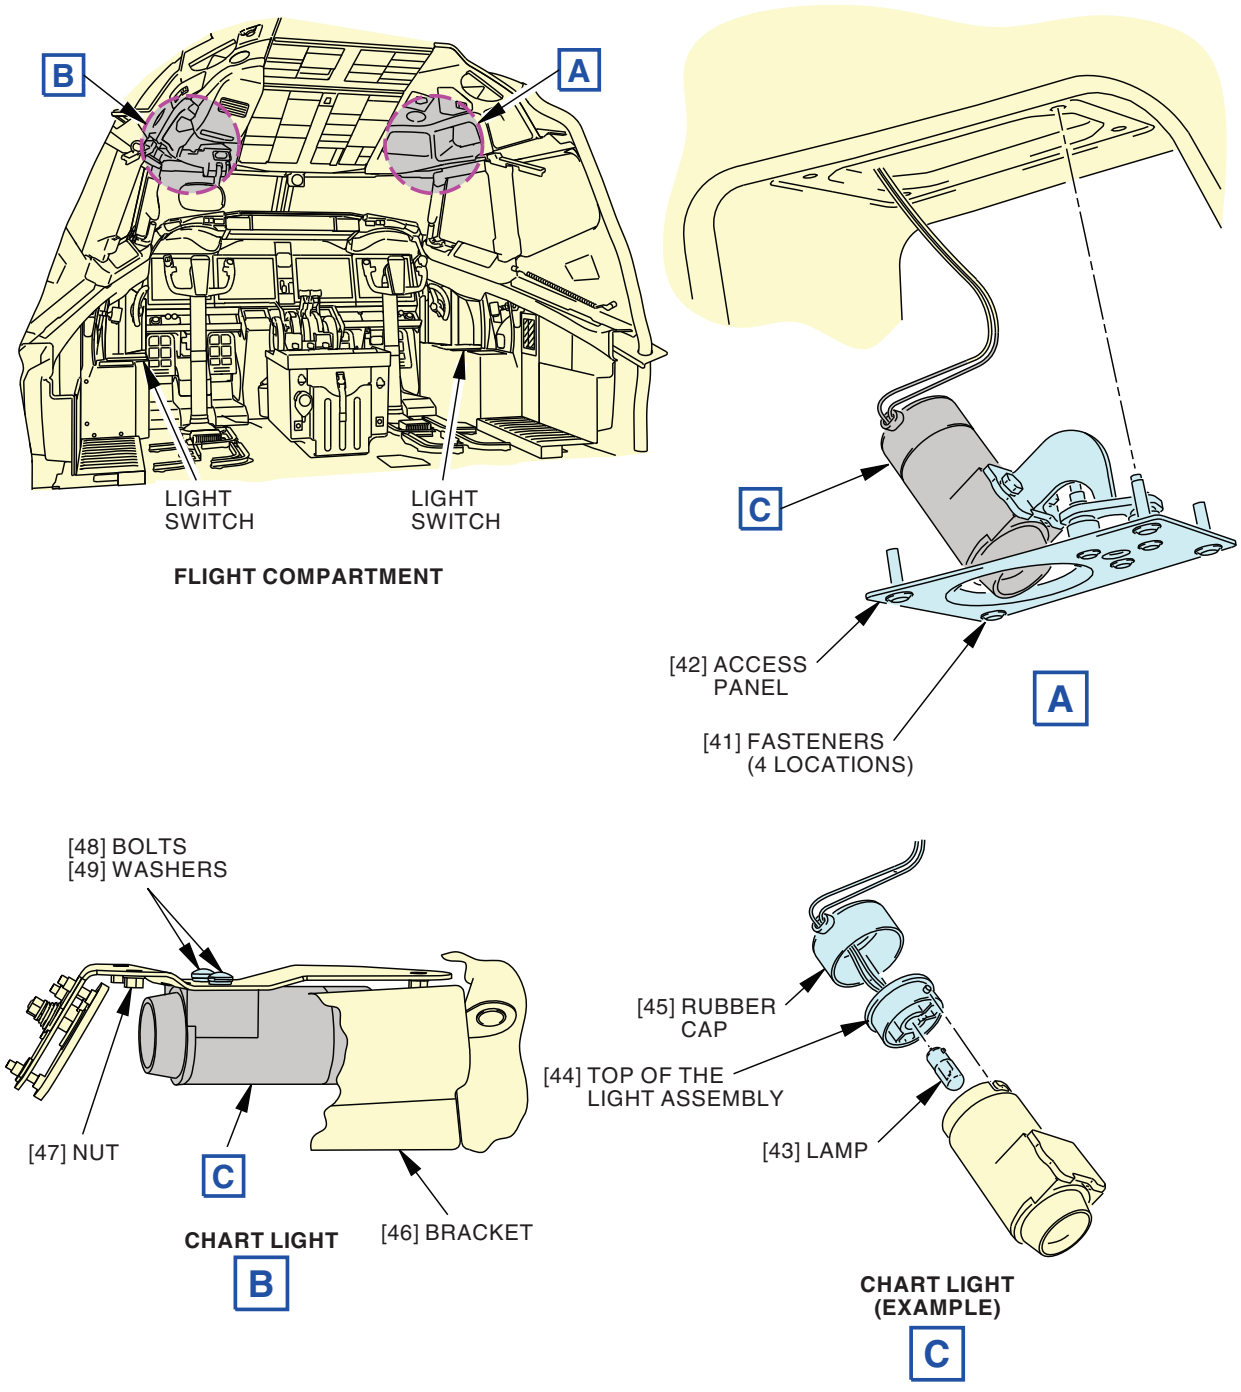



**Chart Light - Lamp Replacement**
**Figure 201/33-17-00-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

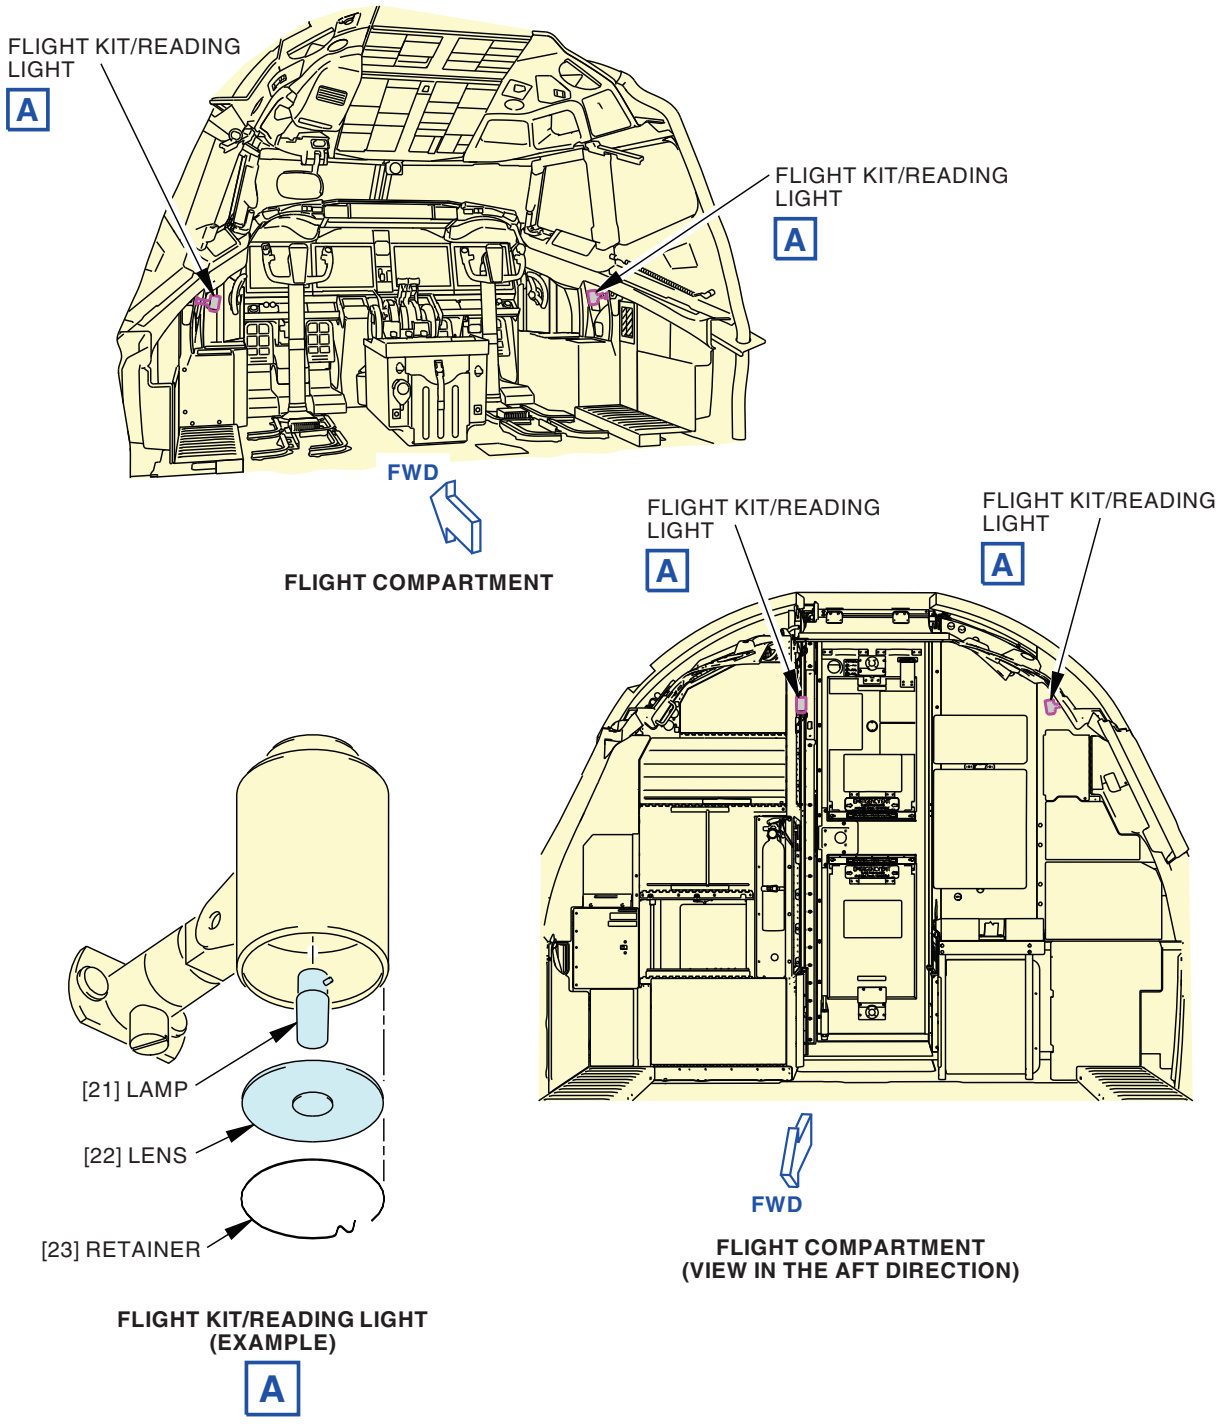



2414580 S00061535508_V1


**Flight Kit/Reading Light - Lamp Replacement**
**Figure 202/33-17-00-990-805**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

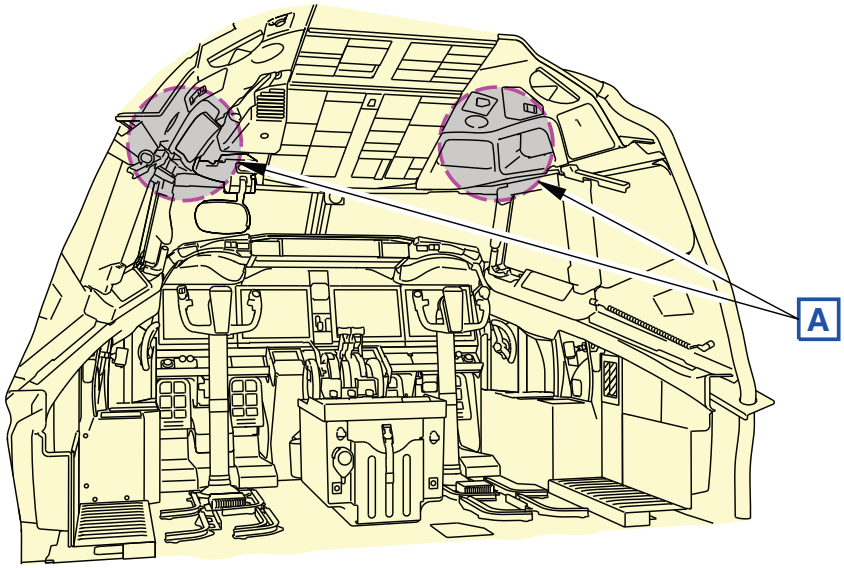


FLIGHT COMPARTMENT

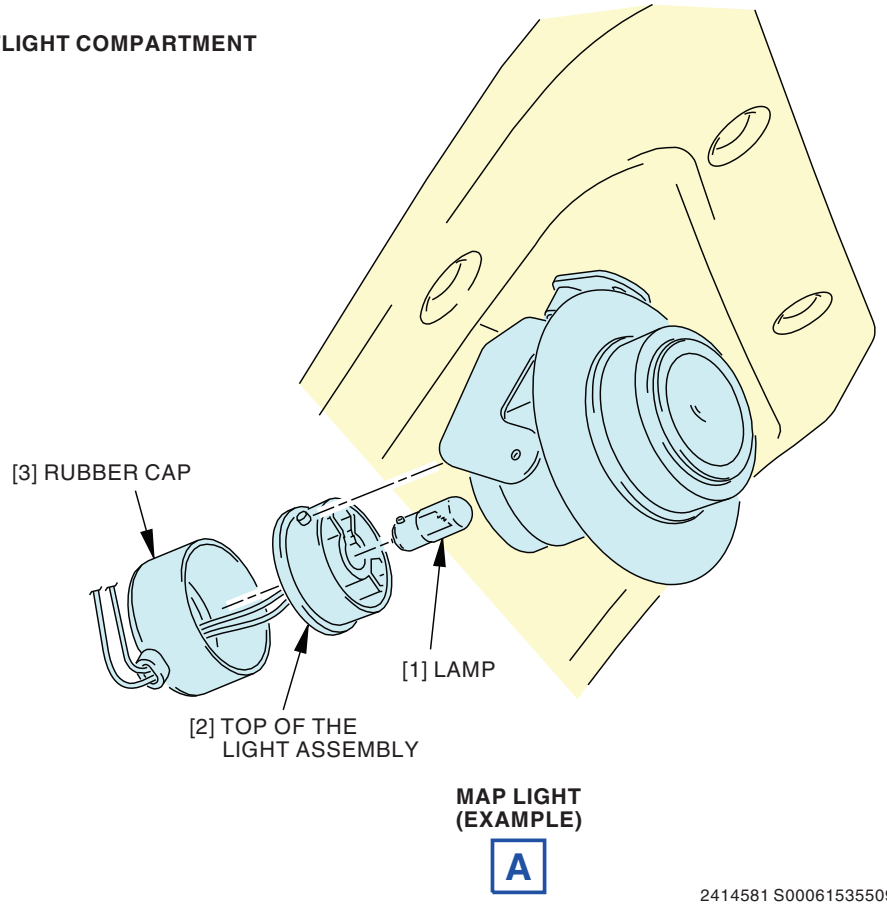


MAP LIGHT
(EXAMPLE)

A

2414581 S00061535509_V1

**Map Light - Lamp Replacement**
**Figure 203/33-17-00-990-806**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-17-00-440-801**

**3. Flight Crew Lights - Activation**

(Figure 201 or Figure 202 or Figure 203)

**A. General**

(1) This procedure adds electrical power to the Flight Crew Lights.

**B. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**C. Procedure**

**SUBTASK 33-17-00-860-002**

(1) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 9 | C00308 | CONTROL CABIN LIGHTING MAP & KIT |
| A | 10 | C00309 | CONTROL CABIN LIGHTING OBS READING |

**——— END OF TASK ———**

**TASK 33-17-00-960-801**

**4. Map Light - Lamp Replacement**

(Figure 204)

**A. References**

| Reference | Title |
|---|---|
| 24-22-00-860-801 | Supply Electrical Power (P/B 201) |
| 24-22-00-860-802 | Remove Electrical Power (P/B 201) |
| WDM 33-17-11 | Wiring Diagram Manual |

**B. Expendables/Parts**

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 1 | Lamp | 33-17-00-21-100 | PTF ALL |

**C. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**D. Procedure**

**SUBTASK 33-17-00-860-003**

(1) At the auxiliary panel, P21 or P23, set the switch for the applicable map light to the off mode.

**SUBTASK 33-17-00-960-001**

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(2) Do these steps to replace the lamp (WDM 33-17-11):



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Turn the light assembly for access to the back of it.

(b) Lift off the rubber cap [3].

(c) Remove the top of the light assembly [2].

(d) Replace the lamp [1].

(e) Install the top of the light assembly [2].

(f) Put on the rubber cap [3].

(g) Turn the light assembly back to its usual position.

**SUBTASK 33-17-00-860-004**

(3) Do this task: Supply Electrical Power, TASK 24-22-00-860-801.

**SUBTASK 33-17-00-710-001**

(4) Do a test of the new lamp:

(a) At the P21 or P23 panel, set the applicable switch for the map light to the dim mode and then to the bright mode.

1) Make sure the intensity of the light changes from dim to bright.

(b) Set the switch to the off mode.

1) Make sure the light goes off.


**SUBTASK 33-17-00-860-005**

(5) Do this task: Remove Electrical Power, TASK 24-22-00-860-802.


**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

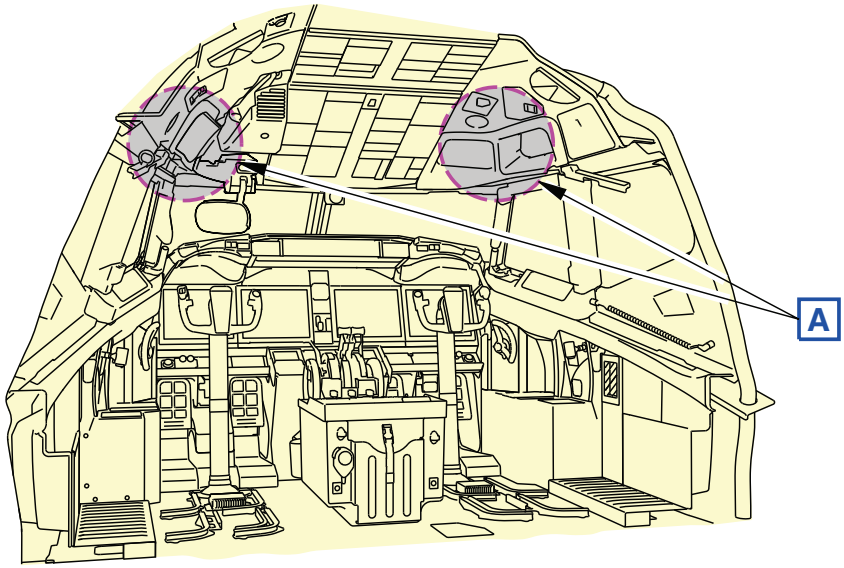


FLIGHT COMPARTMENT

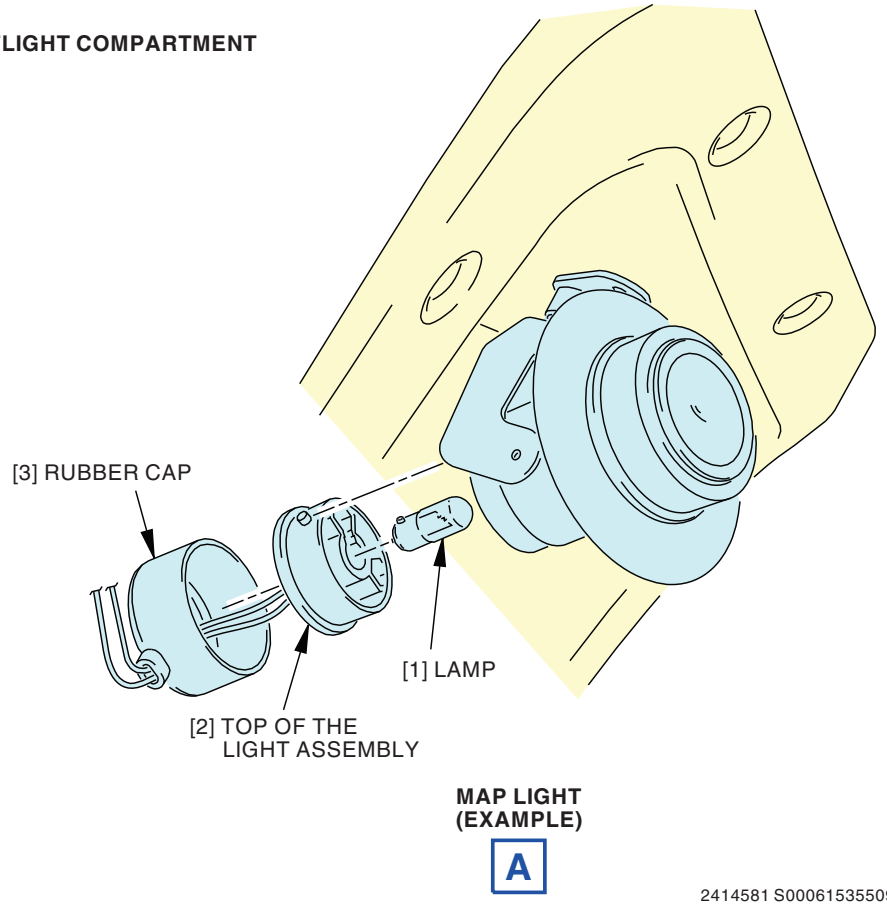


MAP LIGHT
(EXAMPLE)

A

2414581 S00061535509_V1

**Map Light - Lamp Replacement**
**Figure 204/33-17-00-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-17-00-960-802**

## 5. Flight Kit/Reading Light - Lamp Replacement

(Figure 205)

### A. References

| Reference | Title |
|---|---|
| 24-22-00-860-801 | Supply Electrical Power (P/B 201) |
| 24-22-00-860-802 | Remove Electrical Power (P/B 201) |
| WDM 33-17-11 | Wiring Diagram Manual |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 21 | Lamp | 33-17-00-07-035 | PTF ALL |
| | | 33-17-00-15-040 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Procedure

**SUBTASK 33-17-00-860-006**

(1) At the back of the light, set the switch to the off mode.

NOTE: Use the knob, not the push-button switch.

**SUBTASK 33-17-00-960-002**

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHT, ELECTRICAL SHOCK CAN OCCUR.

(2) Do these steps to replace the lamp (WDM 33-17-11):

(a) Remove the retainer [23].

(b) Remove the lens [22].

(c) Replace the lamp [21].

(d) Install the lens [22].

(e) Install the retainer [23].

**SUBTASK 33-17-00-860-007**

(3) Do this task: Supply Electrical Power, TASK 24-22-00-860-801.

**SUBTASK 33-17-00-710-002**

(4) Do a test of the new lamp:

(a) Set the switch for the light to the on mode.

1) Make sure the light comes on.

(b) Set the switch to the off mode.

1) Make sure the light goes off.



ECCN 9E991 BOEING PROPRIETARY - See title page for details


**SUBTASK 33-17-00-860-008**

(5) Do this task: Remove Electrical Power, TASK 24-22-00-860-802.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

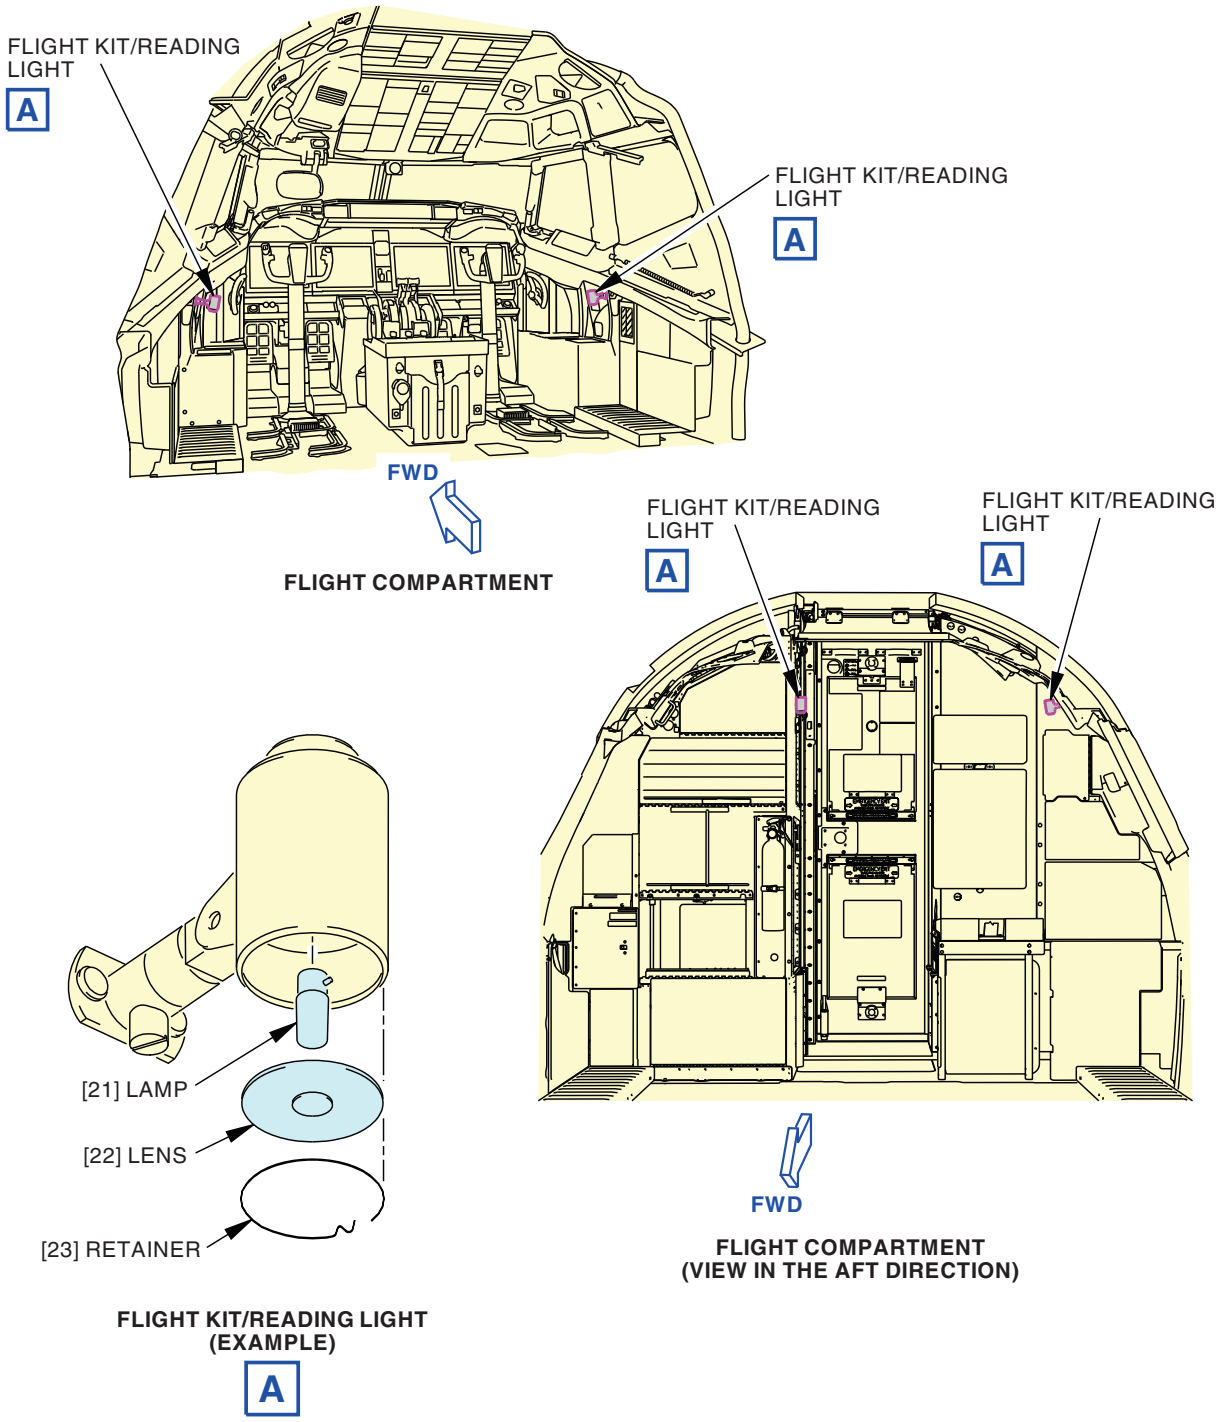


**Flight Kit/Reading Light - Lamp Replacement**
**Figure 205/33-17-00-990-803**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-17-00-960-803**

## 6. Chart Light - Lamp Replacement

(Figure 206)

### A. References

| Reference | Title |
|---|---|
| 24-22-00-860-801 | Supply Electrical Power (P/B 201) |
| 24-22-00-860-802 | Remove Electrical Power (P/B 201) |
| WDM 33-17-11 | Wiring Diagram Manual |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 43 | Lamp | 33-17-00-01-125 | PTF ALL |
| | | 33-17-00-01-635 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Procedure

SUBTASK 33-17-00-860-009

(1) At the auxiliary panel, P21 or P23, set the applicable switch for the chart light to the off mode.

SUBTASK 33-17-00-960-003

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(2) Do these steps to replace the lamp (WDM 33-17-11):

(a) For the captain's chart light, do these steps to get access to the light assembly:

1) Remove the bolts [48] and washers [49] that attach the bracket [46] to the chart light.

2) Remove the nuts [47] that attach the bracket [46] to the structure.

3) Remove the bracket [46].

(b) For the first officer's chart light, do this step to get access to the light assembly:

1) Loosen the fasteners [41] and lower the access panel [42].

(c) Lift off the rubber cap [45].

(d) Remove the top of the light assembly [44].

(e) Replace the lamp [43].

(f) Install the top of the light assembly [44].

(g) Put on the rubber cap [45].

(h) For the first officer's chart light, install the access panel [42] and tighten the fasteners [41].

(i) For the captain's chart light, do these steps:

1) Tighten the bolts [48] and washers [49] that attach the bracket [46] to the chart light.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

2) Put the bracket [46] in its position.

3) Install the nuts [47] that attach the bracket [46] to the structure.

NOTE: Do not tighten the nuts [47].

4) With power on, use driver to direct light assembly to chart holder area.

5) Hold aim with driver and rotate aperture on light assembly to align light pattern lengthwise and parallel to the number 2 window pane.

6) Hold aim of light and tighten the nuts [47] that attach the bracket [46] to the structure.

**SUBTASK 33-17-00-860-010**

(3) Do this task: Supply Electrical Power, TASK 24-22-00-860-801.

**SUBTASK 33-17-00-710-003**

(4) Do a test of the new lamp:

(a) At the P21 or P23 panel, set the applicable switch for the chart light to the dim mode and then to the bright mode.

1) Make sure the intensity of the light changes from dim to bright.

(b) Set the switch to the off mode.

1) Make sure the light goes off.

**SUBTASK 33-17-00-860-011**

(5) Do this task: Remove Electrical Power, TASK 24-22-00-860-802.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

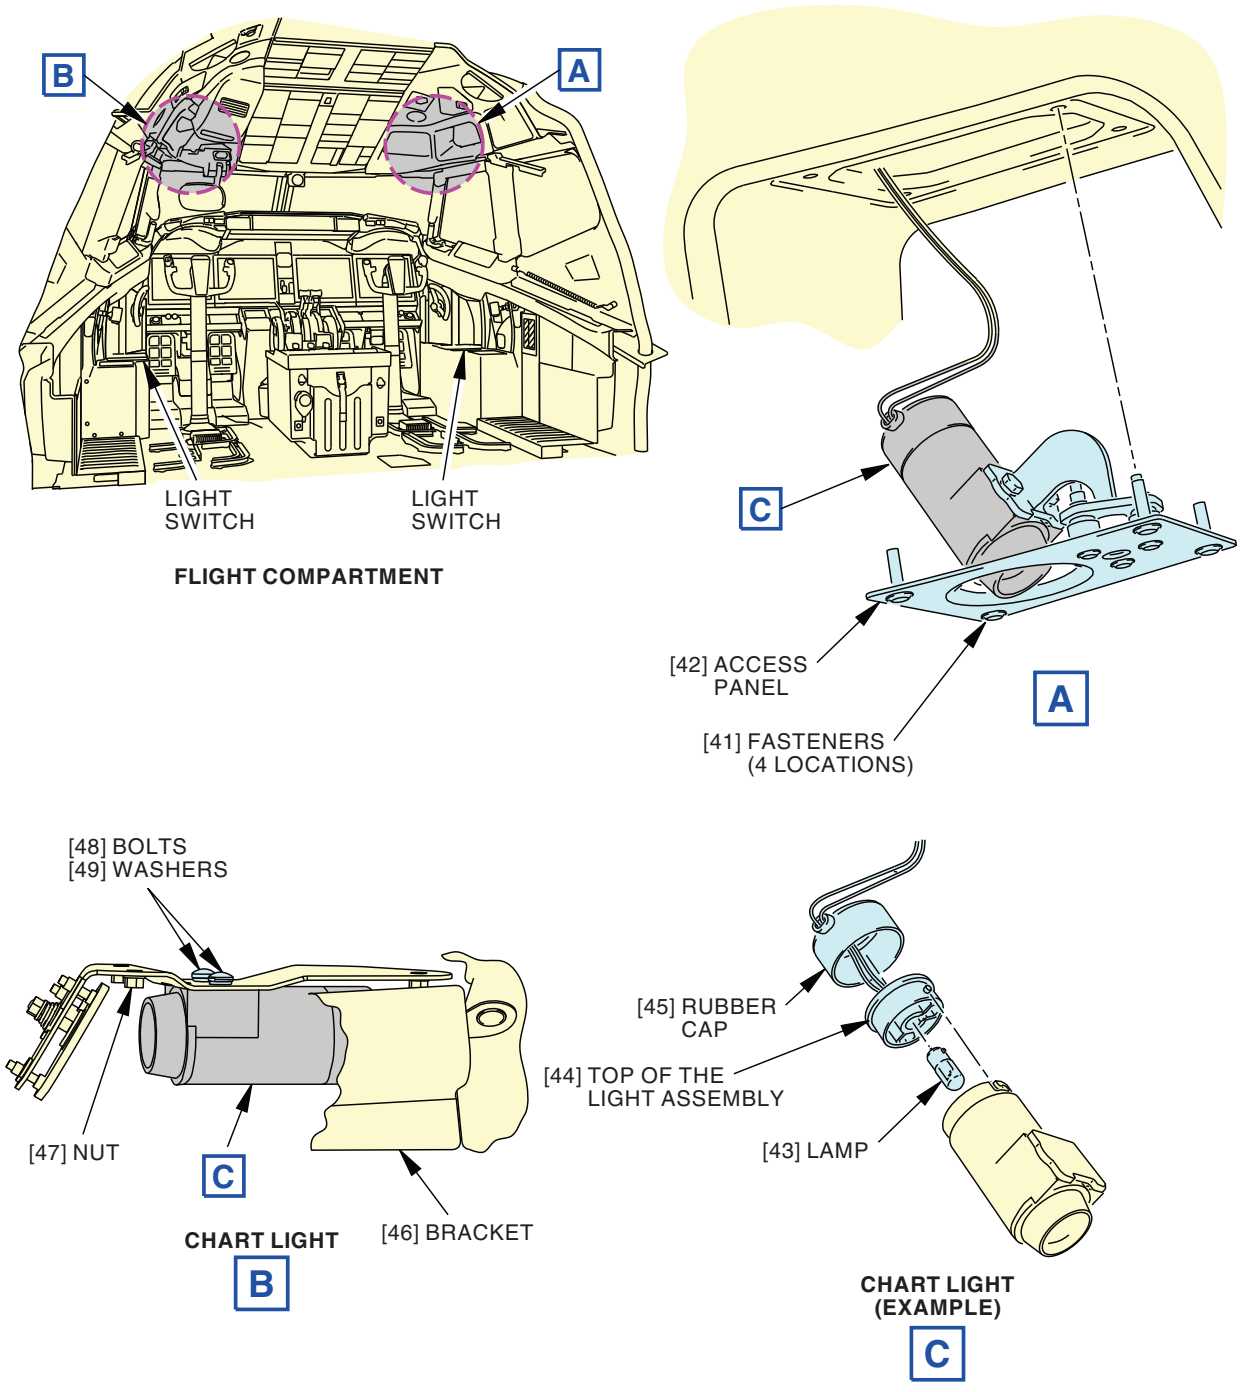



**Chart Light - Lamp Replacement**
**Figure 206/33-17-00-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## MASTER DIM AND TEST (MD&T) LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Master Dim and Test Lights Deactivation.

(2) Master Dim and Test Lights Activation.

(3) Indicator Light - Lamp Replacement.

(4) Indicator Light - Light Assembly Replacement.

(5) Lighted Pushbutton Switch - Lamp Replacement.

(6) Lightplate - Replacement.

(7) Annunciator And Dimming Module - Module Replacement.

(8) Master Dim and Test System - Module Replacement.

(9) Master Dim and Test - Operational Test.

**TASK 33-18-00-040-801**

### 2. Master Dim and Test Lights - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes electrical power to the Master Dim and Test Lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

#### C. Master Dim and Test Lights Deactivation

**SUBTASK 33-18-00-860-001**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 6 | C00148 | ANTI-ICE & RAIN ENG 1 & WING CONT |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |
| B | 9 | C00440 | FLIGHT CONTROL AUTO SPEED BRAKE |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 5 | C00540 | FUEL SPAR VALVE IND |
| B | 7 | C00361 | FUEL CROSS FEED VALVE CONT |
| C | 13 | C01277 | MASTER CAUTION ANNUNCIATOR CONT 3 |
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |
| E | 4 | C01396 | ENGINE FUEL ENGINE 2 HPSOV IND |
| E | 6 | C01395 | ENGINE FUEL ENGINE 1 HPSOV IND |
| E | 11 | C00313 | INDICATOR MASTER DIM SECT 1 |
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |
| E | 13 | C00315 | INDICATOR MASTER DIM SECT 3 |
| E | 14 | C00316 | INDICATOR MASTER DIM SECT 4 |
| F | 11 | C00317 | INDICATOR MASTER DIM SECT 5 |
| F | 12 | C00318 | INDICATOR MASTER DIM SECT 6 |
| F | 13 | C01179 | INDICATOR MASTER DIM SECT 7 |
| F | 14 | C01180 | INDICATOR MASTER DIM SECT 8 |

**D. Master Dim and Test Lights Tryout**

NOTE: This tryout is to make sure the Master Dim and Test Lights are in a zero energy state.

**SUBTASK 33-18-00-700-001**

(1) On the Captain's instrument panel, P1, set the switch for the master dim and test lights to TEST.

(2) Make sure that the indicator lights on these panels do not come on:

(a) Captain's instrument panel, P1

(b) Center instrument panel, P2

(c) First Officer's instrument panel, P3

(d) AFT and FWD overhead panel, P5

(e) Glareshield panel, P7


(f) AFT and FWD electronics panels, P8 and P9.

(3) Set the switch for the master dim and test lights to DIM.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

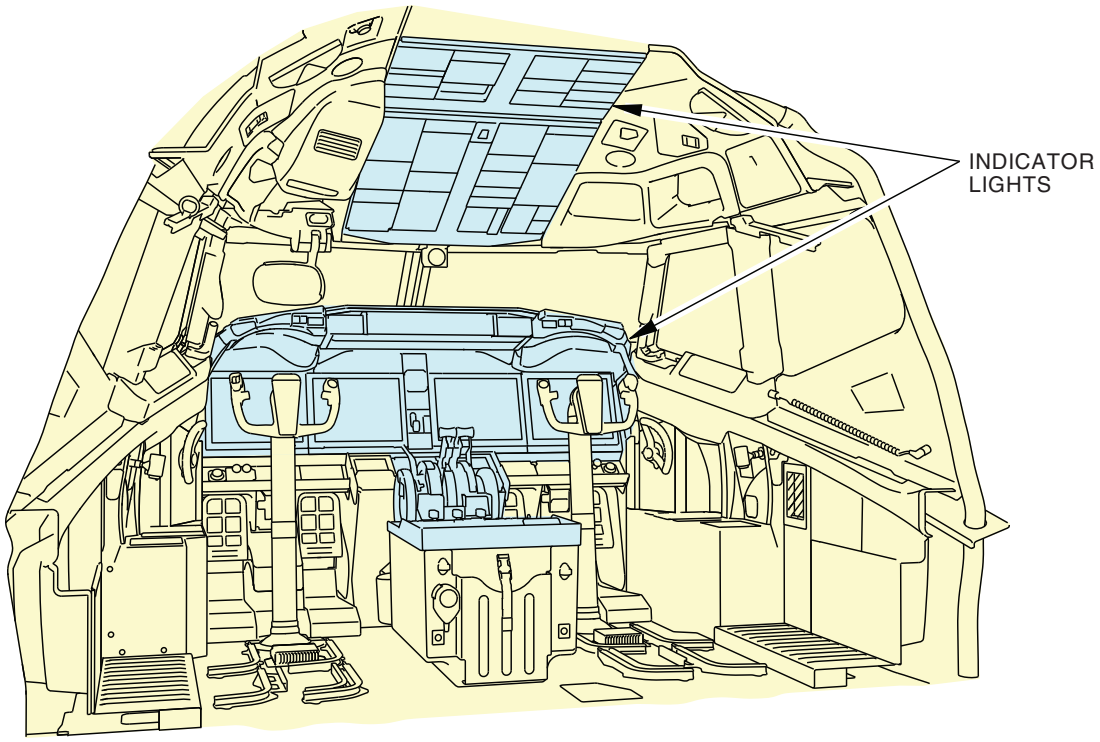


**FLIGHT COMPARTMENT**

2414582 S00061535518_V1

**Master Dim and Test Lights**
**Figure 201/33-18-00-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-440-801**

**3. Master Dim and Test Lights - Activation**

(Figure 201)

**A. General**

(1) This procedure adds electrical power to the Master Dim and Test Lights.

**B. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**C. Master Dim and Test Lights Activation**

**SUBTASK 33-18-00-860-002**

(1) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 6 | C00148 | ANTI-ICE & RAIN ENG 1 & WING CONT |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |
| B | 9 | C00440 | FLIGHT CONTROL AUTO SPEED BRAKE |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 5 | C00540 | FUEL SPAR VALVE IND |
| B | 7 | C00361 | FUEL CROSS FEED VALVE CONT |
| C | 13 | C01277 | MASTER CAUTION ANNUNCIATOR CONT 3 |
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |
| E | 4 | C01396 | ENGINE FUEL ENGINE 2 HPSOV IND |
| E | 6 | C01395 | ENGINE FUEL ENGINE 1 HPSOV IND |
| E | 11 | C00313 | INDICATOR MASTER DIM SECT 1 |
| E | 12 | C00314 | INDICATOR MASTER DIM SECT 2 |
| E | 13 | C00315 | INDICATOR MASTER DIM SECT 3 |
| E | 14 | C00316 | INDICATOR MASTER DIM SECT 4 |
| F | 11 | C00317 | INDICATOR MASTER DIM SECT 5 |
| F | 12 | C00318 | INDICATOR MASTER DIM SECT 6 |
| F | 13 | C01179 | INDICATOR MASTER DIM SECT 7 |
| F | 14 | C01180 | INDICATOR MASTER DIM SECT 8 |

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-960-801**

## 4. Indicator Light - Lamp Replacement

(Figure 202)

### A. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Indicator Light Lamp Replacement

**SUBTASK 33-18-00-010-001**

(1) Pull the cap assembly [4] away from the panel [6].

**SUBTASK 33-18-00-960-001**

(2) Replace the unserviceable lamps [5].

**SUBTASK 33-18-00-940-001**

(3) If it is necessary, put a windshield cover, STD-1176, on the windshield.

NOTE: During the day, the changes in light intensity are not easy to see.

**SUBTASK 33-18-00-710-001**

(4) Do these steps to test the lamps [5]:

(a) If the indicator light has a press-to-test actuator [3], then on the Captain's instrument panel, P1, set the DIM/BRT/TEST switch to the BRT position.

1) Push the front of the indicator light.

2) Make sure that the indicator light comes on.

(b) If the indicator light does not have a press-to-test actuator [3], then on the Captain's instrument panel, P1, set the DIM/BRT/TEST switch to the TEST position.

1) Make sure that the indicator light comes on.

2) Set the DIM/BRT/TEST switch to the DIM or BRT position.


**SUBTASK 33-18-00-940-002**

(5) If a windshield cover, STD-1176, was used on the windshield, remove it.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

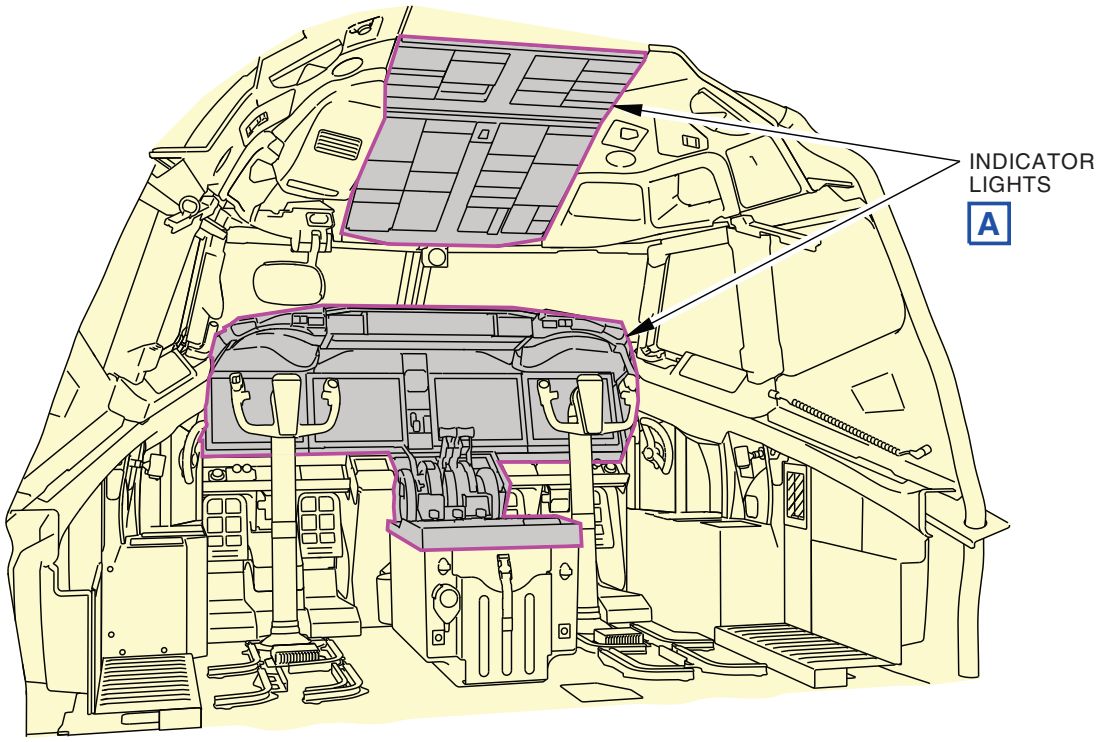



FLIGHT COMPARTMENT

2414583 S00061535521_V1

**Indicator Light - Lamp/Light Assembly Replacement**
**Figure 202/33-18-00-990-802 (Sheet 1 of 2)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

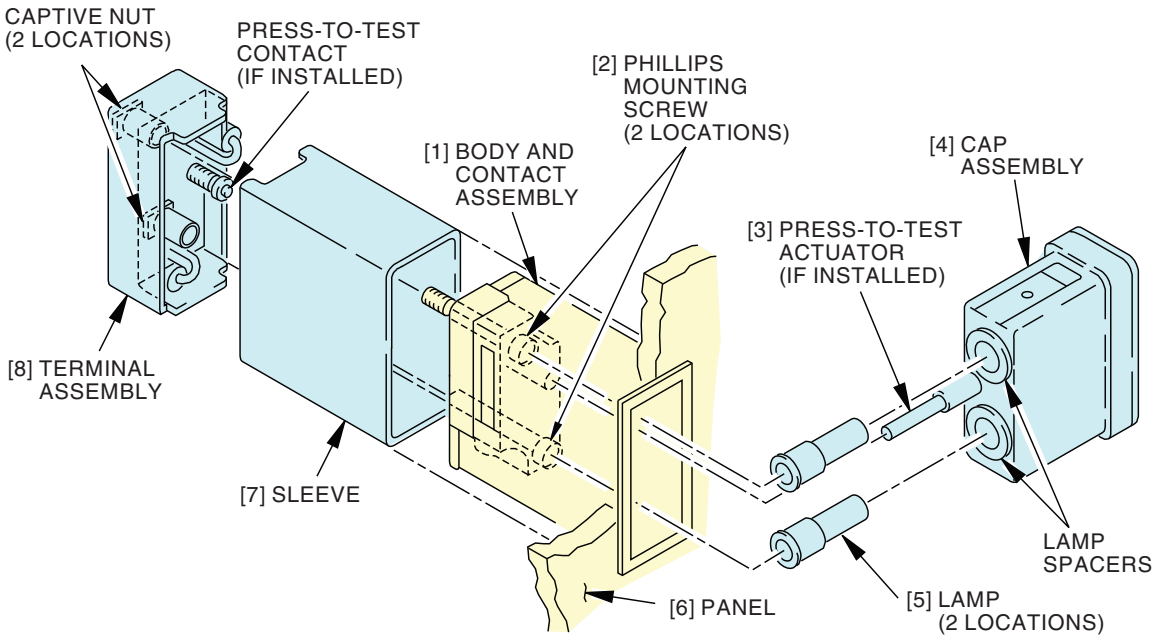


**INDICATOR LIGHT WITH PHILLIPS MOUNTING SCREWS (EXAMPLE)**

**A**

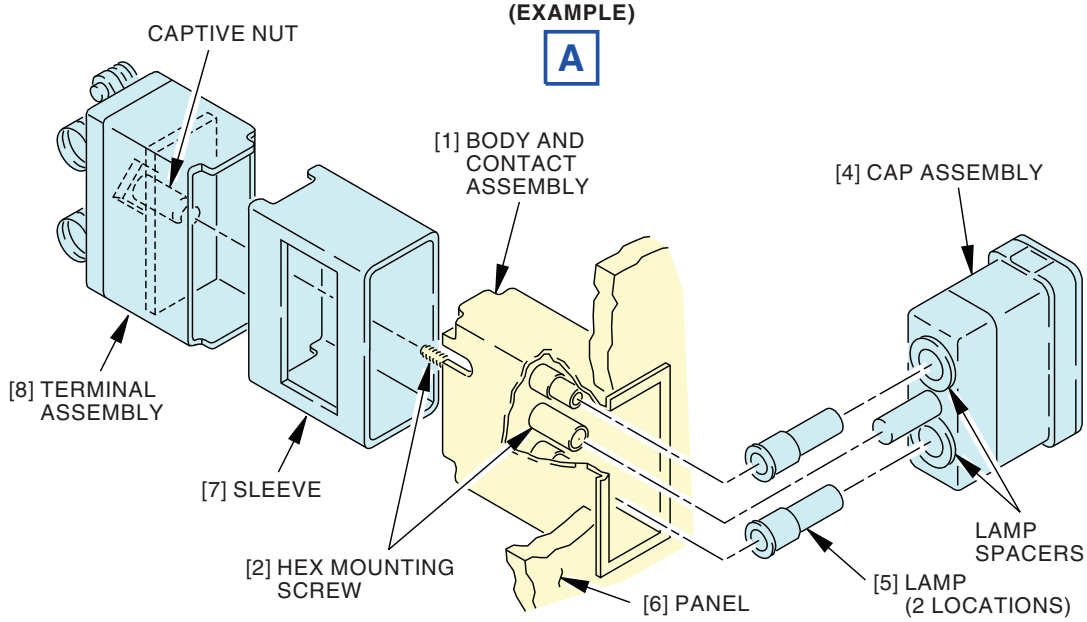


**INDICATOR LIGHT WITH A HEX MOUNTING SCREW (EXAMPLE)**

**A**

2414584 S00061535522_V1

**Indicator Light - Lamp/Light Assembly Replacement**
**Figure 202/33-18-00-990-802 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-960-802**

## 5. Indicator Light - Light Assembly Replacement

(Figure 202)

### A. References

| Reference | Title |
|---|---|
| WDM 33-18-11 thru 33-18-99 | Wiring Diagram Manual |

### B. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Indicator Light Light Assembly Replacement

**SUBTASK 33-18-00-860-005**

(1) Open the circuit breakers that supply the indicator light with power and attach DO-NOT-CLOSE tags.

NOTE: Many systems in the airplane have indicator lights installed in the flight compartment. Use the Wiring Diagram Manual to find the correct circuit breakers for the indicator light (WDM 33-18-11 thru 33-18-99).

**SUBTASK 33-18-00-960-002**

(2) Do these steps to replace the indicator light assembly:

(a) Get access to the rear of the indicator light.

(b) Disconnect and tag the electrical wires attached to the indicator light terminals.

(c) Pull the cap assembly [4] away from the panel [6].

(d) Loosen the screws [2]that hold the indicator light to the panel [6].

(e) From behind the panel [6], remove the terminal assembly [8] and sleeve [7] of the indicator light.

(f) From the front of the panel [6], remove the body and contact assembly [1].

(g) Put the replacement body and contact assembly [1] through the front of the panel [6].

(h) From the rear of the panel [6], put the sleeve [7] on the body and contact assembly [1].

1) Make sure that the sleeve [7] is installed in the correct orientation for use with the desired panel thickness.

a) For 1/16 in. (0.16 cm) to ⅛ in. (0.32 cm) thickness panel, rotate the sleeve [7] by 180°arc (3.14 rad).

(i) Hold the terminal assembly [8] in the correct position.

(j) Tighten the screws [2] to attach the indicator light to the panel [6].

(k) From the front of the panel [6], push the cap assembly [4] into position.

(l) Connect the electrical wires to the indicator light terminals.

**SUBTASK 33-18-00-850-001**

(3) Remove the DO-NOT-CLOSE tags and close the circuit breakers that were opened to replace the indicator light assembly.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-18-00-940-003

(4) If it is necessary, put a windshield cover, STD-1176, on the windshield.

NOTE: During the day, the changes in light intensity are not easy to see.

SUBTASK 33-18-00-710-002

(5) Do these steps to test the indicator light assembly:

(a) If the indicator light has a press-to-test actuator [3], then on the Captain's instrument panel, P1, set the DIM/BRT/TEST switch to the BRT position.

1) Push the front of the indicator light.

2) Make sure that the indicator light comes on.

(b) If the indicator light does not have a press-to-test actuator [3], then on the Captain's instrument panel, P1, set the DIM/BRT/TEST switch to the TEST position.

1) Make sure that the indicator light comes on.

2) Set the DIM/BRT/TEST switch to the DIM or BRT position.

SUBTASK 33-18-00-940-004

(6) If a windshield cover, STD-1176, was used on the windshield, remove it.

——— END OF TASK ———

TASK 33-18-00-960-803

## 6. Lighted Pushbutton Switch - Lamp Replacement

(Figure 203)

### A. General

(1) The lighted pushbutton switches are installed on the instrument panels in the flight compartment.

(2) Each switch has two light circuits that are electrically isolated.

(a) One circuit controls the caution indicator lights. The caution indicator lights show the condition of the airplane.

1) The Master Dim and Test module supplies 28 volts dc to each caution indicator light.

(b) The other circuit controls the position indicator lights. The position indicator lights show if the lighted pushbutton switch is on or off.

1) 5 volts ac from the dimmer controls, installed in the instrument panels, controls each position indicator light.

(3) Replacement procedures for lighted pushbutton switches are contained in the Standard Wiring Practices Manual, SWPM 20-84-13.

### B. References

| Reference | Title |
|---|---|
| SWPM 20-84-13 | Standard Wiring Practices Manual |

### C. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**D. Location Zones**

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

**E. Lighted Pushbutton Switch Lamp Replacement**

SUBTASK 33-18-00-960-003

(1) Do these steps to replace the unserviceable lamps [23]:

**CAUTION** REMOVE THE POWER FROM THE LAMPS BEFORE YOU DO MAINTENANCE. FAILURE TO OPEN THE CIRCUIT BREAKERS CAN CAUSE DAMAGE TO THE ELECTRICAL CIRCUIT CARDS WHEN YOU INSTALL THE LENS CAP.

(a) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |

**WARNING** OPEN THE APPLICABLE SYSTEM CIRCUIT BREAKERS FOR THE SYSTEM CONTROLLED BY THE SWITCH. THE INSTALLATION OF THE LENS CAP INTO THE HOUSING CAN OPERATE THE SWITCH AND CAUSE ITS SYSTEM TO OPERATE. THE ACCIDENTAL OPERATION OF A SYSTEM CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT

(b) Open the applicable system circuit breakers and attach DO-NOT-CLOSE tags.

(c) Make sure that the switch is in the OFF position (not pushed in).

**CAUTION** DO NOT HOLD THE LENS CAP WITH A TOOL. REMOVE THE LENS CAP WITH YOUR FINGERS ONLY. DO NOT USE TOO MUCH FORCE ON THE BAIL WIRES, DAMAGE TO THE BAIL WIRE CLIPS WILL OCCUR.

(d) Hold the lens cap [24] with your fingers and pull it away from the housing [22].

(e) Replace the unserviceable lamps [23].

NOTE: After you extend the lens cap [24], you can easily turn it to get to the lamps [23].

(f) Push the lens cap [24] back into the housing [22] in a continuous movement until the lens cap [24] engages.

(g) Make sure that the switch is in the OFF position (not pushed in), after you install the lens cap [24].

(h) Close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(i) Remove the DO-NOT-CLOSE tags and close the applicable circuit breakers for the system controlled by each switch.

SUBTASK 33-18-00-710-003

(2) Do these steps to test the lamps [23]:

(a) Do a test of the caution indicator lights.

1) On the Captain's instrument panel, P1, set the DIM/BRT/TEST switch to the TEST position.

2) Make sure that the lamps [23] that were replaced come on.

3) Set the DIM/BRT/TEST switch to the DIM or BRT position.

4) Make sure that the caution indicator lights go off.

(b) Do a test of the position indicator lights.

**WARNING** THE OPERATION OF A SWITCH WILL CAUSE ITS SYSTEM TO OPERATE. THE ACCIDENTAL OPERATION OF A SYSTEM CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

1) Push the switch to the ON position.

2) Make sure that the lamps [23] that were replaced come on.

3) Push the switch to the OFF position.


4) Make sure that the position indicator lights go off.

(c) If a windshield cover, STD-1176, was used on the windshield, remove it.

**END OF TASK**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

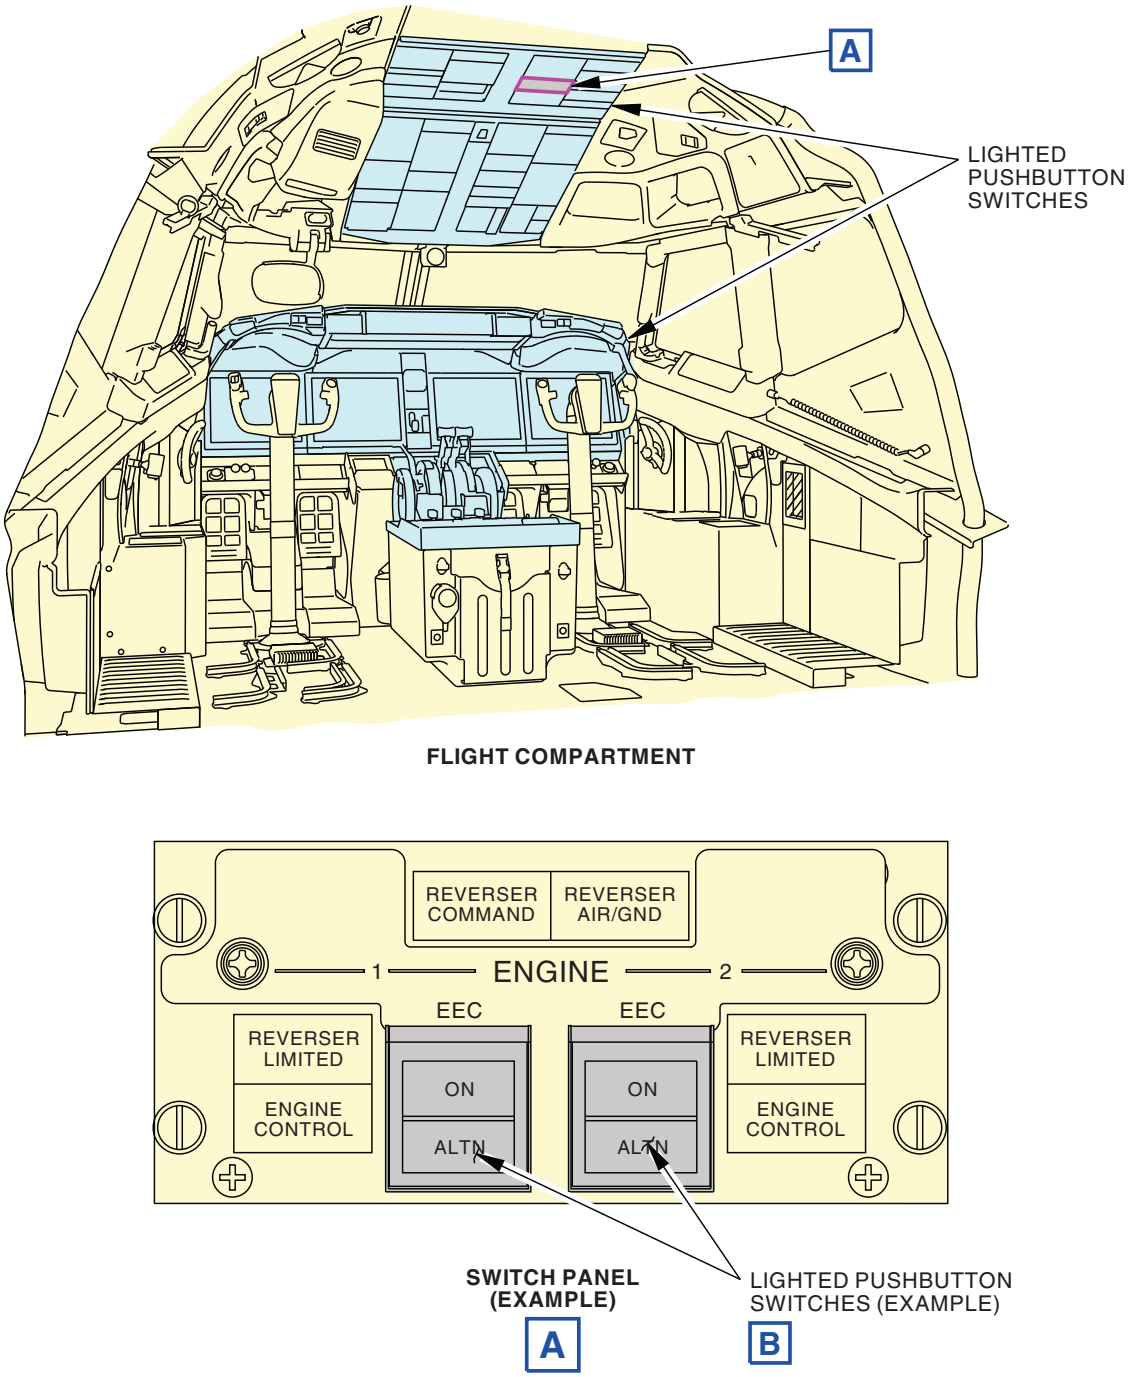


**Lighted Pushbutton Switch**
**Figure 203/33-18-00-990-803 (Sheet 1 of 3)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

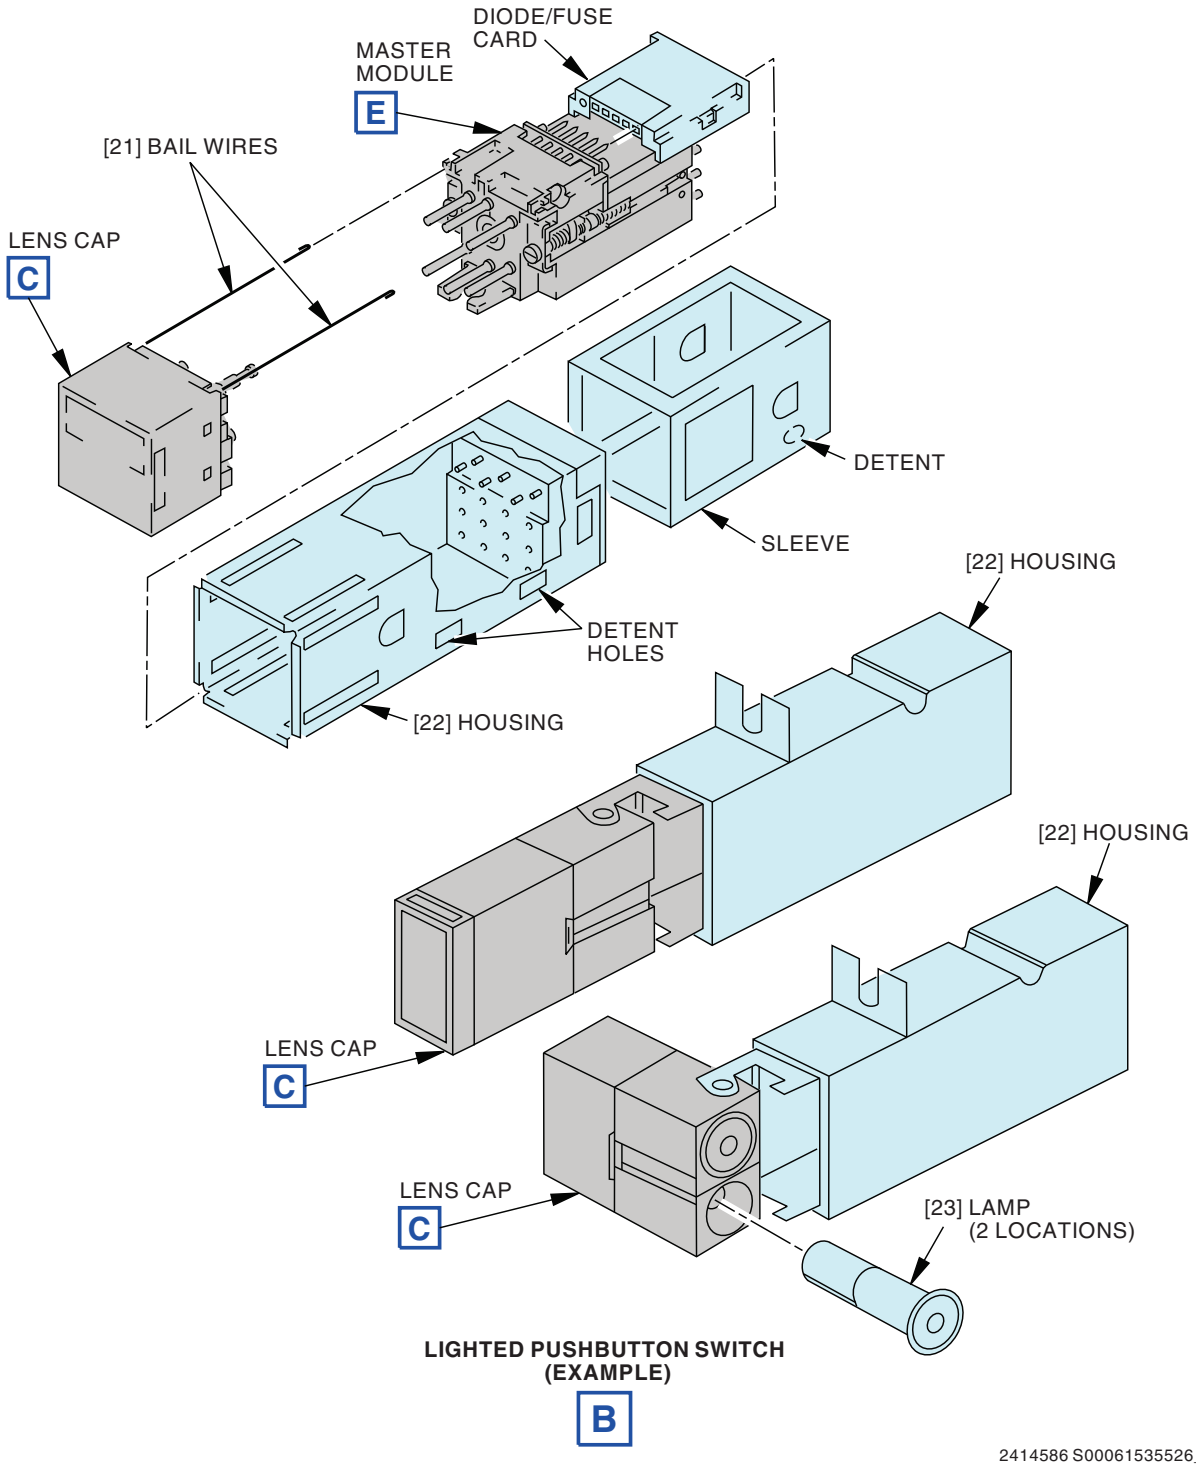


**Lighted Pushbutton Switch**
**Figure 203/33-18-00-990-803 (Sheet 2 of 3)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

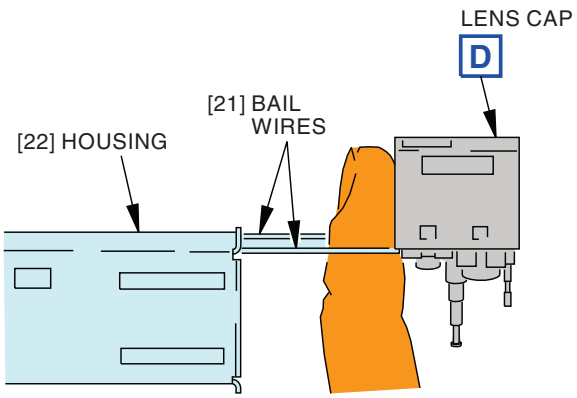



LENS CAP (EXAMPLE)

C

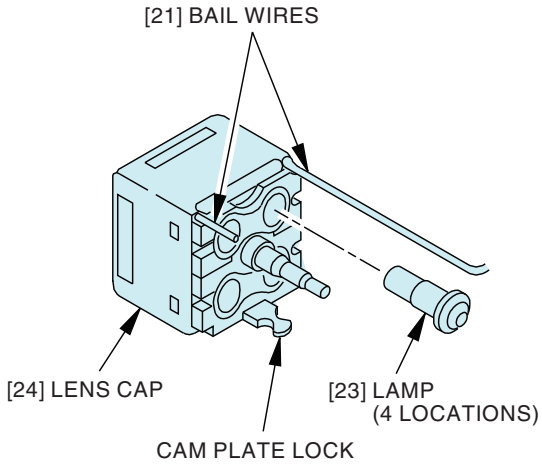


LENS CAP (EXAMPLE)

D

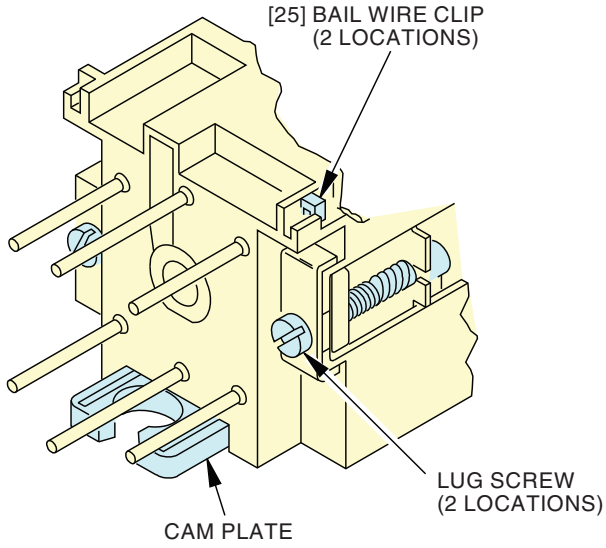


MASTER MODULE (EXAMPLE)

E

2414587 S00061535527_V1

**Lighted Pushbutton Switch**
**Figure 203/33-18-00-990-803 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-960-804**

## 7. Lightplate - Replacement

(Figure 204)

### A. General

(1) Lightplates give lighting to the components and words on the pilots panels.

(2) If a lightplate becomes too dim, you need to replace the lightplate.

(3) Onboard repair of lightplates is not recommended. Replacement of the complete lightplate assembly is the preferred maintenance practice. Instructions for lamp replacement can be found in the lightplate vendor's manual.

### B. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### C. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### D. Lightplate Replacement

**SUBTASK 33-18-00-960-004**

(1) Do these steps to replace the unserviceable lightplate [41]:

(a) If it is necessary, remove the knobs [44] that are in front of the lightplate [41].

(b) Loosen the fasteners [43] that hold the lightplate [41] in its position.

(c) Carefully pull the lightplate [41] from the module [42].

NOTE: Do not discard the lightplate [41]. Refer to the vendor manual for possible repairs in a shop.

(d) Attach the replacement lightplate [41] to the module [42].

(e) Tighten the fasteners [43] to hold the lightplate [41] in its position.

(f) If it is necessary, attach the knobs [44] in front of the lightplate [41].

**SUBTASK 33-18-00-710-004**

(2) Do these steps to test the replacement lightplate [41]:

(a) If it is necessary, put a cover on the windshield.

NOTE: During the day, the changes in light intensity are not easy to see.

(b) Turn the applicable PANEL control clockwise to the full BRIGHT position.

(c) Make sure that the lightplate [41] comes on brightly.

(d) Turn the applicable PANEL control counterclockwise to the OFF position.


**SUBTASK 33-18-00-940-005**

(3) If a windshield cover, STD-1176, was used on the windshield, remove it.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

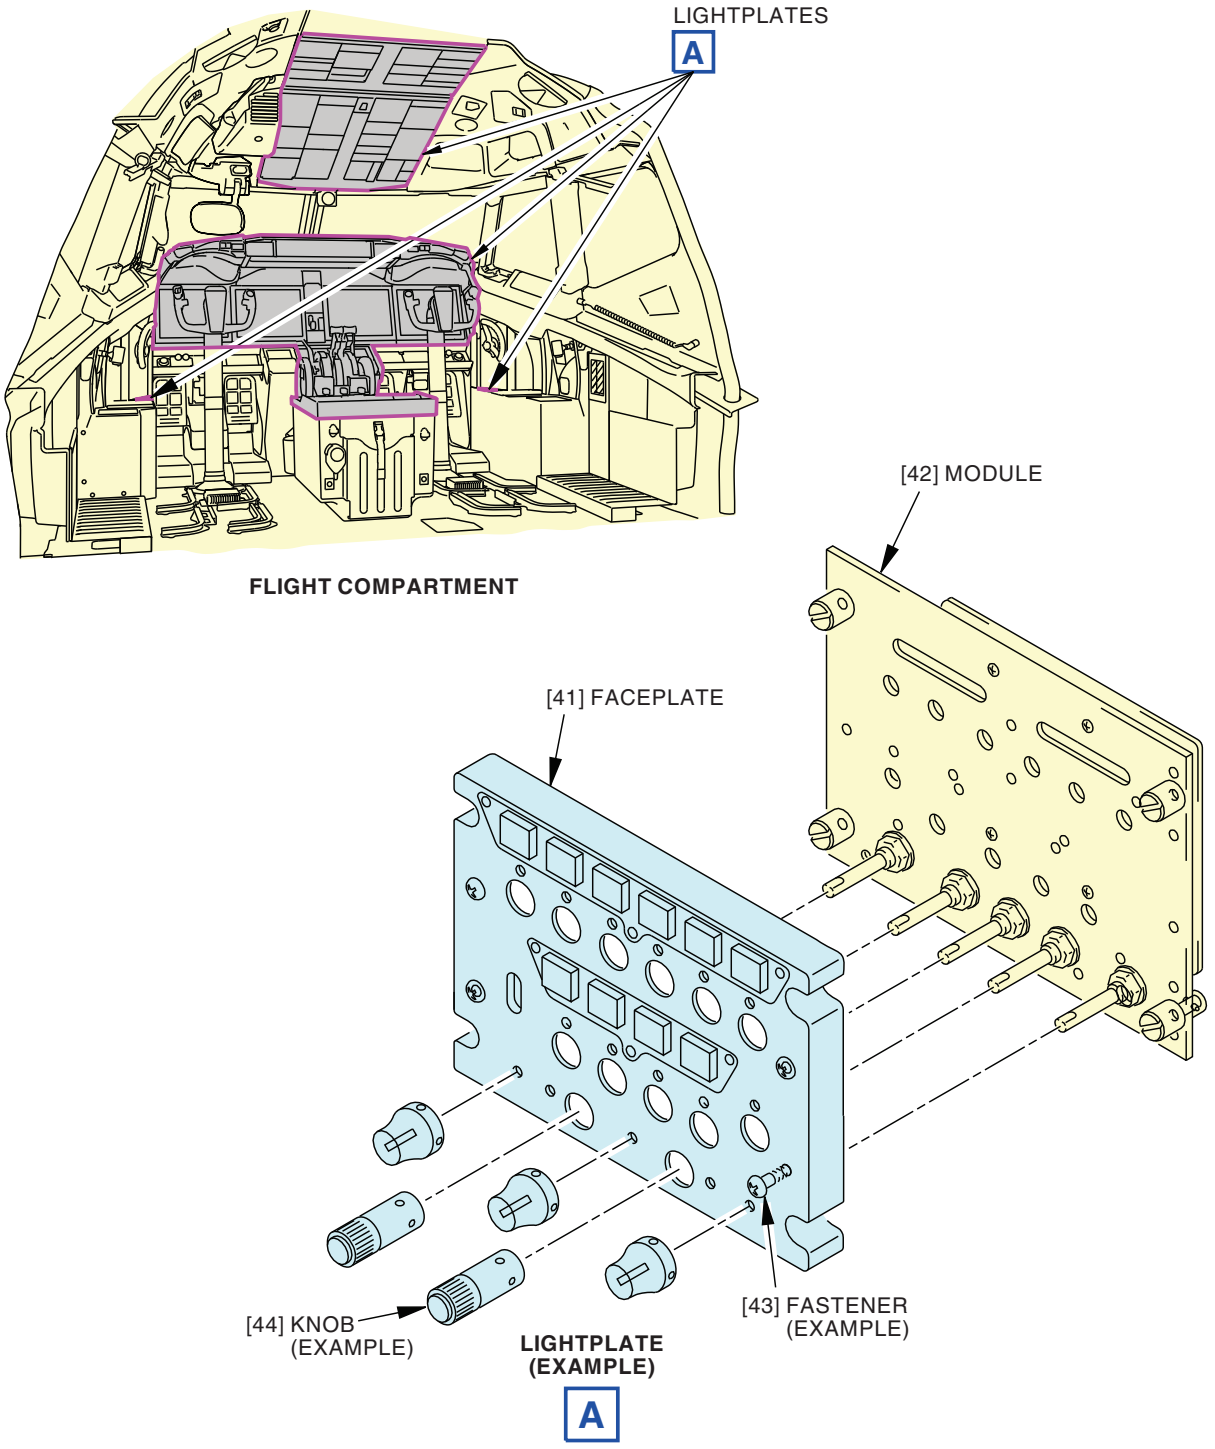


**Lightplate Replacement**
**Figure 204/33-18-00-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-960-805**

## 8. Annunciator And Dimming Module - Module Replacement

(Figure 205)

### A. General

(1) The annunciator and dimming module is located above access panels in the top of the nose landing gear wheel well and is mounted to the J19 panel which is fastened to the bottom of the flight compartment floor.

(2) This task provides instructions to replace the annunciator and dimming module.

### B. References

| Reference | Title |
|---|---|
| 53-14-01-020-801 | Nose Wheel Well Access Panels Removal (P/B 401) |
| 53-14-01-420-801 | Nose Wheel Well Access Panels Installation (P/B 401) |

### C. Location Zones

| Zone | Area |
|---|---|
| 110 | Subzone - Body Station 130 to Station 396 |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 113AC | Fwd Nose Wheel Well Upper Access Panel |
| 114AC | Fwd Nose Wheel Well Upper Access Panel |

### E. Annunciator And Dimming Module Replacement

**SUBTASK 33-18-00-010-002**

(1) Remove these access panels to get to the annunciator and dimming module [61] (TASK 53-14-01-020-801).

(a) Open these access panels:

| Number | Name/Location |
|---|---|
| 113AC | Fwd Nose Wheel Well Upper Access Panel |
| 114AC | Fwd Nose Wheel Well Upper Access Panel |

**SUBTASK 33-18-00-860-010**

(2) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-1**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 3 | C01048 | AFCS SYS A ENGAGE INTLK |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |
| B | 4 | C00716 | AFCS SYS B ENGAGE INTLK |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**F/O Electrical System Panel, P6-4**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 15 | C00134 | DC BUS INDICATION HOT BAT |

SUBTASK 33-18-00-960-005

(3) Do these steps to remove the annunciator and dimming module [61], M469:

(a) Disconnect the connectors [63] from the annunciator and dimming module [61] and move them to one side.

(b) When you hold the annunciator and dimming module [61] in place, remove the mounting bolts [62] that attach the annunciator and dimming module [61] to the J19 panel.

(c) Remove the annunciator and dimming module [61].

SUBTASK 33-18-00-960-006

(4) Do these steps to install the annunciator and dimming module [61], M469:

(a) Position the new annunciator and dimming module [61], on the J19 panel.

(b) Install the mounting bolts [62] that attach the new annunciator and dimming module [61] to the J19 panel.

(c) Reconnect the connectors [63] to the annunciator and dimming module [61].

SUBTASK 33-18-00-410-002

(5) Install these access panels (TASK 53-14-01-420-801).

(a) Install these access panels:

| Number | Name/Location |
|---|---|
| 113AC | Fwd Nose Wheel Well Upper Access Panel |
| 114AC | Fwd Nose Wheel Well Upper Access Panel |

SUBTASK 33-18-00-860-012

(6) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-1**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 3 | C01048 | AFCS SYS A ENGAGE INTLK |

**F/O Electrical System Panel, P6-2**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 21 | C00396 | FIRE PROT DETECTION MA WRN & CONT |
| B | 4 | C00716 | AFCS SYS B ENGAGE INTLK |

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 12 | C00132 | MASTER CAUTION ANNUNCIATOR BUS 1 |
| B | 13 | C00131 | MASTER CAUTION ANNUNCIATOR BAT |
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |

**F/O Electrical System Panel, P6-4**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 15 | C00134 | DC BUS INDICATION HOT BAT |



ECCN 9E991 BOEING PROPRIETARY - See title page for details


**SUBTASK 33-18-00-710-005**

(7) Test the new annunciator and dimming module [61], do this task: Master Dim and Test - Operational Test, TASK 33-18-00-710-801.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

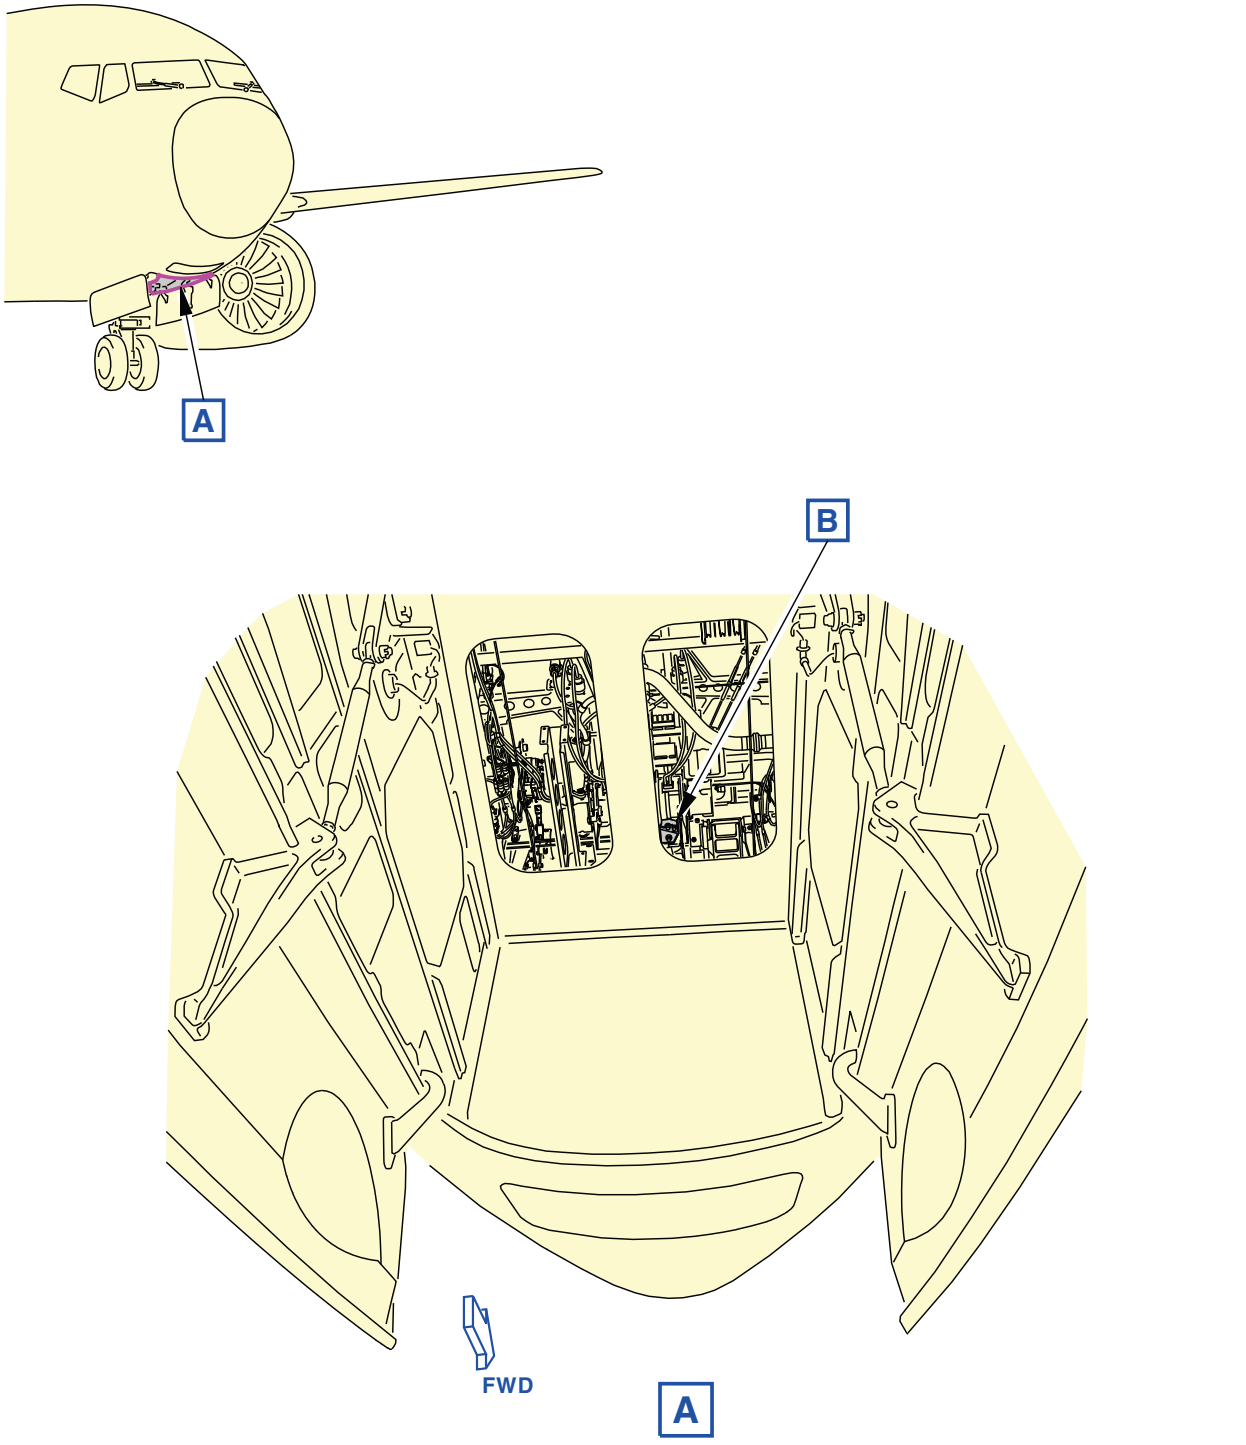


**Annunciation and Dimming Module, M469 - Removal and Installation**
**Figure 205/33-18-00-990-805 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

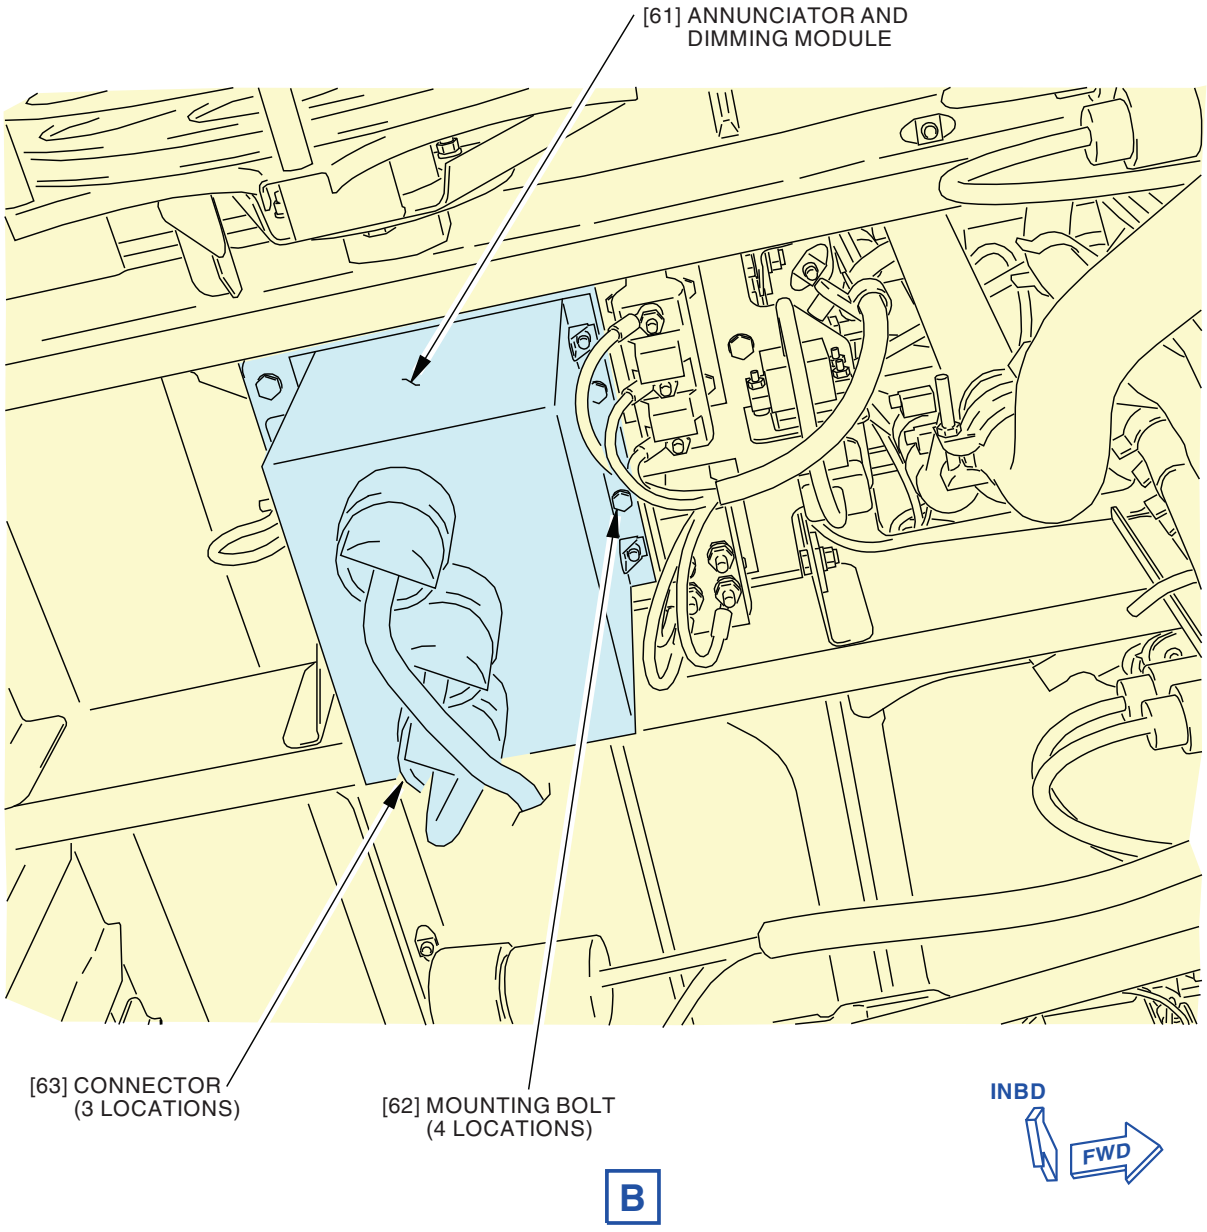


**Annunciation and Dimming Module, M469 - Removal and Installation**
**Figure 205/33-18-00-990-805 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-960-806**

## 9. Master Dim and Test System - Module Replacement

### A. General

(1) The Master Dim and Test System has two dim/test modules. The modules are M564 master dim/test module and M1456 aux dim/test module. The M564 master dim/test module is a circuit card assembly.

(2) The modules are installed in the circuit breaker panel, P6.

### B. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Prepare for the Replacement

**SUBTASK 33-18-00-860-013**

(1) Open these circuit breakers and install safety tags:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |

### D. Master Dim and Test System Module Replacement

**SUBTASK 33-18-00-960-007**

(1) Do these steps to replace the M564 master dim/test module [81]:

NOTE: The M564 master dim/test module is a circuit card assembly.

(a) Open the circuit breaker panel, P6-3.

(b) Turn the screws [83] to unlock the module retainer [82] from the circuit breaker panel, P6.

(c) Open the module retainer [82].

(d) Remove the master dim/test module [81] from circuit card slot in the circuit breaker panel, P6.

(e) Install the new master dim/test module [81] into the circuit card slot.

(f) Close the module retainer [82].

(g) Turn the screws [83] to lock the module retainer [82] to the circuit breaker panel, P6.

(h) Close the circuit breaker panel, P6-3.

**SUBTASK 33-18-00-960-008**

(2) Do these steps to replace the M1456 aux dim/test module [84]:

(a) Open the circuit breaker panel, P6-4.

(b) Remove the screws [85] that attach the aux dim/test module [84] to the circuit breaker panel, P6.

(c) Disconnect the connector [86] from the aux dim/test module [84].

(d) Remove the aux dim/test module [84].

(e) Connect the connector [86] to the new aux dim/test module [84].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Put the new aux dim/test module [84] in its position in the circuit breaker panel, P6.

(g) Install the screws [85] that attach the new aux dim/test module [84] to the circuit breaker panel, P6.

(h) Close the circuit breaker panel, P6-4.

**SUBTASK 33-18-00-860-014**

(3) Remove the safety tags and close these circuit breakers:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 11 | C00133 | INDICATOR MASTER DIM DIM/TST CONT |
| D | 12 | C00310 | INDICATOR MASTER DIM BAT |
| D | 13 | C00311 | INDICATOR MASTER DIM BUS 1 |
| D | 14 | C00312 | INDICATOR MASTER DIM BUS 2 |


**SUBTASK 33-18-00-710-006**


(4) Do this task: Master Dim and Test - Operational Test, TASK 33-18-00-710-801.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

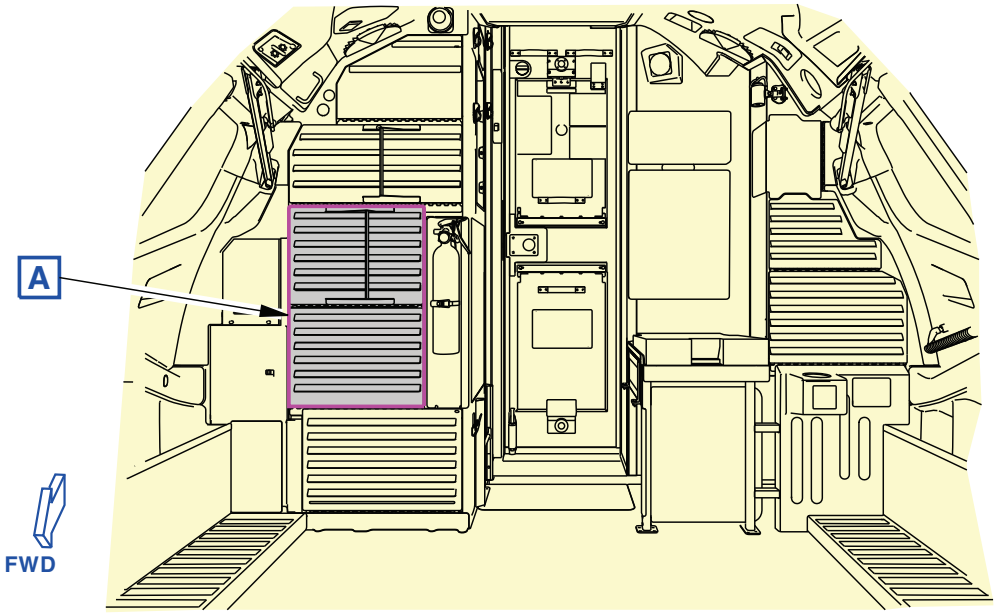

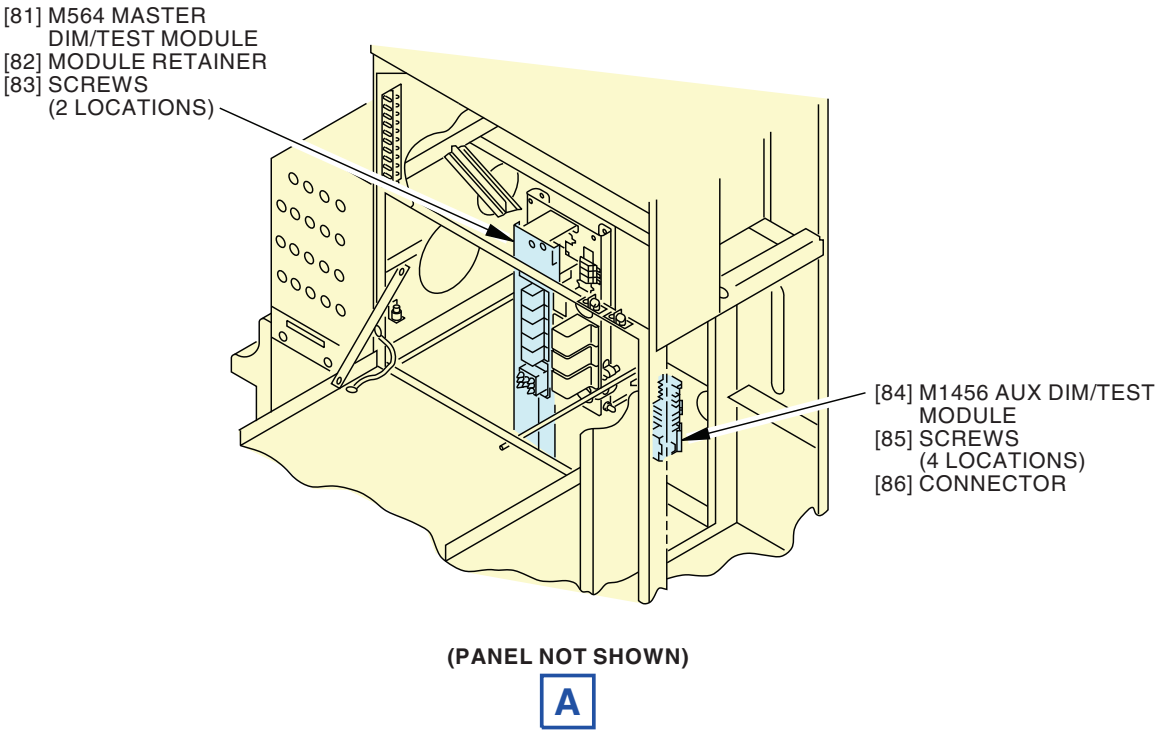
2414591 S00061535534_V1

**Master Dim and Test System - Module Replacement**
**Figure 206/33-18-00-990-806**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-18-00-710-801**

## 10. Master Dim and Test - Operational Test

(Figure 207)

### A. General

(1) This test makes sure the master dim and test system operates.

### B. References

| Reference | Title |
|---|---|
| WDM 33-18-11 thru 33-18-99 | Wiring Diagram Manual |

### C. Tools/Equipment

| Reference | Description |
|---|---|
| STD-1176 | Cover - Windshield Blackout Screen |

### D. Location Zones

| Zone | Area |
|---|---|
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### E. Master Dim and Test Operational Test

**SUBTASK 33-18-00-940-006**

(1) On a bright day, put a windshield cover, STD-1176, on the windshield to make it easier to do this test.

**SUBTASK 33-18-00-860-017**

(2) Prepare to do the test:

(a) At the overhead panel, P5, do these steps:

1) Set the emergency light switch to ARMED.
2) Set the air conditioning switches to AUTO.
3) Set the left and right mode select switches to ALIGN.
4) Set the yaw damper switch to ON.

(b) At the control stand, P10, release the parking brake.

(c) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 1 | C00137 | DOOR LOCK |

**SUBTASK 33-18-00-710-007**

(3) Do a test of the annunciators, pushbutton switches, and liquid crystal display (LCD) segments connected to the master dim and test system (WDM 33-18-11 thru 33-18-99):

(a) At the Captain's main instrument panel, P1, set the switch for the master dim and test lights to TEST.

NOTE: The CMD and CWS pushbuttons on Collins MCP (part number 822-1567-103/-104) will illuminate.

(b) On these panels, make sure the lamps in the annunciators come on brightly:

1) Captain's main instrument panel, P1
2) Center main instrument panel, P2



ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) F/O's main instrument panel, P3

4) Overhead panel, P5.

5) Glareshield panel, P7

6) Aft electronics panel, P8

NOTE: The Fire Warning Lights are not checked during this test.

a) To complete the test of the wheel well warning light, set the test switch to the OVHT/FIRE position, then back to its usual position.

7) Forward electronics panel, P9

**PTF ALL; AIRPLANES WITH MCDU**

NOTE: You will find five annunciators on each CDU; DSPY (or CALL), FAIL, MSG, OFST, and EXEC.

**PTF ALL**

8) Control stand, P10.

a) Make sure that the parking brake light is on.

(c) On the aft overhead panel, P5, make sure that the lamps in the pushbutton switches (engine module, P5-68) come on brightly.

(d) Make sure that the LCD segments on these panels come on for 2 seconds then go off for 1 second:

1) Overhead panel, P5

2) Glareshield panel, P7

3) Aft electronics panel, P8.

(e) At the Captain's instrument panel, P1, set the switch for the master dim and test lights to the usual mode.

## F. Put the Airplane Back to Its Usual Condition

**SUBTASK 33-18-00-860-020**

(1) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-3**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 1 | C00137 | DOOR LOCK |

(2) At the control stand, P10, set the parking brake.

(3) At the overhead panel, P5, do these steps:

(a) Set the emergency light switch to the usual mode.

(b) Set the air conditioning switches to the usual mode.

(c) Set the yaw damper switch to usual mode.

(d) Set the left and right mode select switches to the usual mode.


**SUBTASK 33-18-00-940-008**

(4) If a windshield cover, STD-1176, was used on the windshield, remove it.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

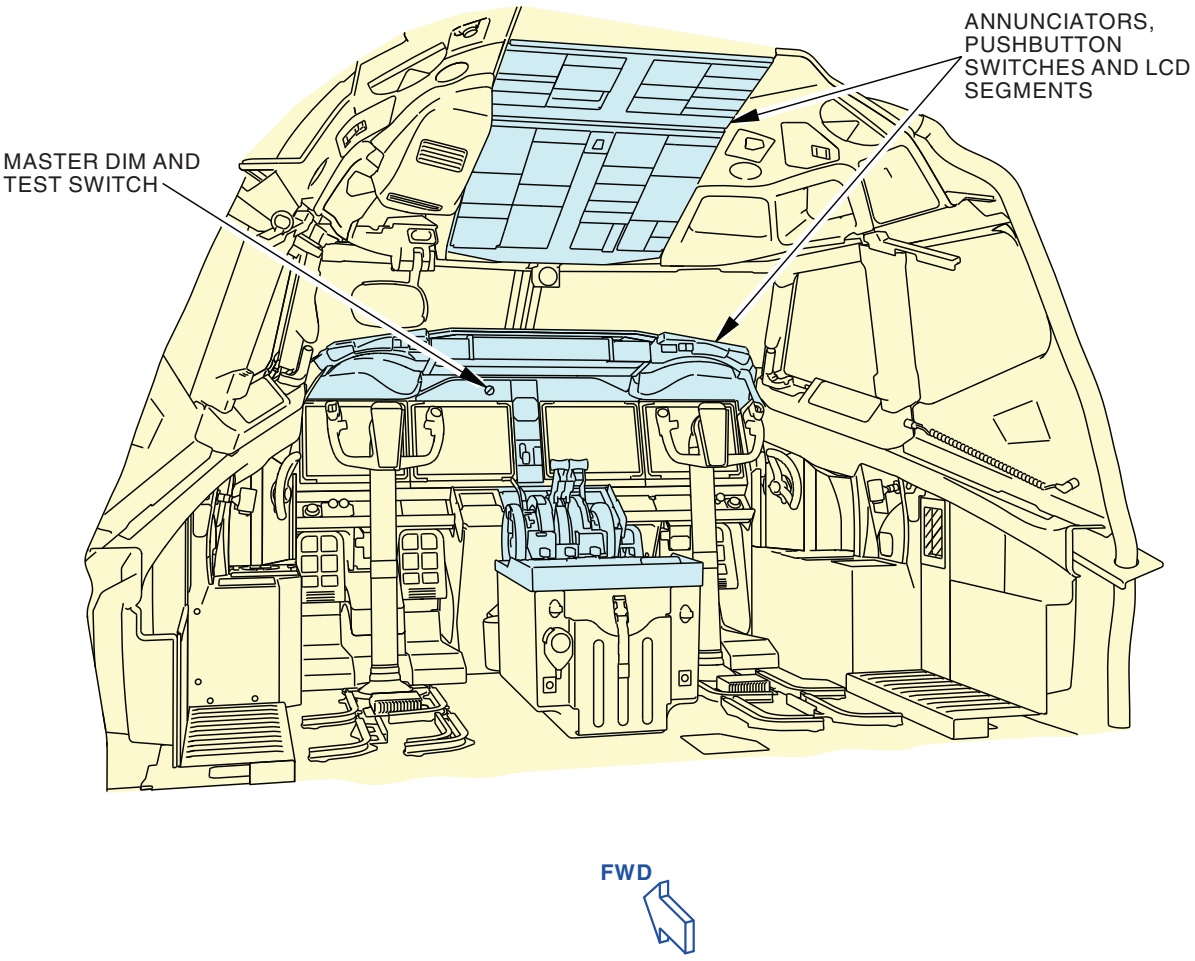


2414592 S00061535536_V2

**Master Dim and Test System Test**
**Figure 207/33-18-00-990-807**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## PASSENGER COMPARTMENT LIGHTS - ADJUSTMENT/TEST

### 1. General

A. This procedure has these tasks:

(1) Passenger Compartment Lights - Operational Tests

(2) Passenger Compartment Lights - BSI Generation 3.X OPS LSAP Loading

**TASK 33-20-00-710-801**

### 2. Passenger Compartment Lights - Operational Test

#### A. General

(1) Do the applicable operational test for the light section that you replaced.

(2) This task includes operational tests of these components:

(a) Passenger seating area:

1) Window and overwing exit lights

2) Bin/wash ceiling lights

3) Center overhead stowage lights

4) Direct lights

5) Cove lights.

(b) Forward/Aft entry area:

1) Direct entry lights

2) Attendant work lights.

(c) Information signs

(d) Lavatory mirror lights

(e) Lavatory-occupied signs

(f) Passenger call lights

(g) Lavatory call lights.

#### B. References

| Reference | Title |
|---|---|
| 29-11-00-860-801 | Hydraulic System A or B Pressurization (P/B 201) |
| 29-11-00-860-805 | Hydraulic System A or B Power Removal (P/B 201) |
| 32-00-01-480-801 | Landing Gear Downlock Pins Installation (P/B 201) |
| 32-09-00-860-801 | Put the Airplane in the Air Mode (P/B 201) |
| 32-09-00-860-802 | Return the Airplane to the Ground Mode (P/B 201) |

#### C. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

#### D. Prepare for the Operational Test

**SUBTASK 33-20-00-860-002**

(1) Make sure that the CAB/UTIL switch, at the P5-13 panel, is set to the ON position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## E. Operational Test

SUBTASK 33-20-00-710-011

(1) Do a LAMP TEST from the FWD Attendant Control Panel (ACP).

(a) If it is necessary, touch the opposite corners of the display sequentially within two seconds to activate the display.

(b) If it is necessary, input the password to get access to the attendant control panel.

(c) At the ACP, set the lights to the ON mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LIGHTNING CHECK, then touch LAMPS TESTS.

SUBTASK 33-20-00-710-001

(2) Do a manual test of lights in the passenger seating area.

NOTE: The passenger seating area lights include the cove lights, direct lights, window lights, and ceiling lights.

(a) Do a test of the lights in the passenger seating area from each applicable attendant control panel as follows:

NOTE: The lights can take at least 5 seconds to change.

NOTE: If the lights are already set to BRIGHT or MEDIUM, select a different mode, then select the indicated brightness level.

1) If it is necessary, touch the opposite corners of the display sequentially within two seconds to activate the display.

2) On the attendant control panel display, touch the Lighting tab.

3) Below the passenger seating area, touch the white BRIGHT button.

a) Make sure that the lights come on brightly.

4) Below the passenger seating area, touch the white MEDIUM button.

a) Make sure that the lights operate at medium brightness.

5) Below the passenger seating area, touch the night/sleep button.

a) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

NOTE: The lights can take at least 15 seconds to change.

6) Below the passenger seating area, touch the boarding/deplane button.

a) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

NOTE: The lights can take at least 15 seconds to change.

7) Below the passenger seating area, touch the take-off/landing button.

a) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

NOTE: The lights can take at least 15 seconds to change.

8) Below the passenger seating area, touch the cruise button.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

a) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

NOTE: The lights can take at least 15 seconds to change.

9) Below the passenger seating area, touch the meal/beverage button.

a) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

NOTE: The lights can take at least 15 seconds to change.

10) Below the passenger seating area, touch the OFF button.

a) Make sure that the lights go off.

**SUBTASK 33-20-00-710-002**

(3) Do a test of the lights in the forward and aft entry areas.

NOTE: If the lights are already set to BRIGHT or MEDIUM, select a different mode, then select the indicated brightness level.

(a) Do a test of the lights in the forward entry area from each applicable attendant control panel:

1) On the attendant control panel display, touch the lighting tab.

2) Below the forward entry area, entry section, touch the white BRIGHT button.

a) Make sure that the direct entry light comes on brightly.

3) Below the forward entry area, entry section, touch the white MEDIUM button.

a) Make sure that the direct entry light becomes medium.

4) Below the forward entry area, entry section, touch the OFF button.

a) Make sure that the direct entry light goes off.

5) Below the forward entry area, work section, touch the button to set it to the ON position.

a) Make sure that the attendant work light comes on.

NOTE: In the forward entry area, the incandescent work light is aft of the dim entry LED light. The dim entry LED light is on when the airplane is supplied with external electrical power.

6) Below the forward entry area, work section, touch the button to set it to the OFF position.

a) Make sure that the attendant work light goes off.

NOTE: In the forward entry area, the incandescent work light is aft of the dim entry LED light. The dim entry LED light is on when the airplane is supplied with external electrical power.

(b) Do a test of the lights in the aft entry area at each attendant control panel:

1) On the attendant control panel display, touch the lighting tab.

2) Below the aft entry area, entry section, touch the white BRIGHT button.

a) Make sure that the direct entry lights come on bright.

3) Below the aft entry area, entry section, touch the white MEDIUM button.

a) Make sure that the direct entry lights are at medium brightness.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

4) Below the aft entry area, entry section, touch the OFF button.
   a) Make sure that the direct entry lights go off.
5) Below the aft entry area, work section, touch the button to set it to the ON position.
   a) Make sure that the attendant work lights come on.
6) Below the aft entry area, work section, touch the button to set it to the OFF position.
   a) Make sure that the attendant work lights go off.

**SUBTASK 33-20-00-710-003**

(4) Do a test of the ceiling lights during rapid decompression.

NOTE: If the lights are already set to BRIGHT or MEDIUM, select a different mode, then select the indicated brightness level.

(a) At the applicable attendant control panel, do these steps:
   1) On the attendant control panel display, touch the Lighting tab.
   2) Below the passenger seating area, touch the cruise button.
      a) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

         NOTE: The lights can take at least 15 seconds to change.
   3) Touch the white MEDIUM button below the forward entry area, entry section and do these steps:
      a) Make sure that the direct entry light are at medium brightness.
      b) Make sure that the attendant work light stays off.

         NOTE: In the forward entry area, the incandescent work light is aft of the dim entry LED light. The dim entry LED light is on when the airplane is supplied with external electrical power.
   4) Touch the white MEDIUM button below the aft entry area, entry section and do these steps:
      a) Make sure that the direct entry lights are at medium brightness.
      b) Make sure that the attendant work lights stay off.

(b) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| F | 9 | C00784 | OXYGEN PASS RIGHT |
| F | 10 | C00783 | OXYGEN PASS LEFT |

(c) Put the airplane in the air mode (TASK 32-09-00-860-801).

(d) If installed, remove the safety wire from the oxygen switch, at the pilot P5 overhead panel.

(e) Set the PASS OXYGEN switch, at the pilots P5 aft overhead panel, to the ON momentarily, and then release the switch back to the NORMAL position.

NOTE: Information signs can come on and chimes can sound.

1) Make sure that the PASS OXY ON light on the panel comes on.
2) Make sure that all the window, ceiling (cross bin, wash, and COS), cove, direct, work, direct entry lights illuminate to white BRIGHT mode.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(f) Below the passenger seating area, touch the meal/beverage button and do this step:

1) Make sure that the lights in the passenger compartment are equivalent to the light type shown below the general lighting layout on the attendant control panel display.

NOTE: The lights can take at least 15 seconds to change.

(g) Do these steps in the forward entry areas:

1) Touch the white MEDIUM button below the forward entry area, entry section.

a) Make sure that the direct entry light becomes medium.

2) Below the forward entry area, work section, touch the button to set it to the OFF position.

a) Make sure that the attendant work light goes off.

NOTE: In the forward entry area, the incandescent work light is aft of the dim entry LED light. The dim entry LED light is on when the airplane is supplied with external electrical power.

(h) Do these steps in the aft entry areas:

1) Touch the white MEDIUM button below the aft entry area, entry section.

a) Make sure that the direct entry light becomes medium.

2) Below the aft entry area, work section, touch the button to set it to the OFF position.

a) Make sure that the attendant work light goes off.

(i) Put the airplane in the ground mode (TASK 32-09-00-860-802).

(j) Open and close this circuit breaker:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| F | 7 | C00156 | OXYGEN IND |

(k) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| F | 9 | C00784 | OXYGEN PASS RIGHT |
| F | 10 | C00783 | OXYGEN PASS LEFT |

(l) Make sure that the PASS OXY ON light on the panel goes off.

(m) If necessary, install the safety wire on to the PASS OXYGEN switch.

**SUBTASK 33-20-00-710-004**

(5) Do a test of the reading lights.

(a) At each passenger seat, set the switch for the reading light to the on mode.

1) Make sure that the reading light comes on.

(b) Set the switch to the off mode.

1) Make sure that the reading light goes off.

(c) Set the switch to the usual mode.

**SUBTASK 33-20-00-710-005**

(6) Do a test of the information signs:



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**PTF ALL; AIRPLANES WITHOUT PERMANENTLY ILLUMINATED NO SMOKING SIGNS**

NOTE: The NO-SMOKING sign is not lighted and the no-smoking switch on the P5 panel will not operate these signs. The switch will have a INOP or a CHIME ONLY placard.

**PTF ALL**

(a) Set the FASTEN BELTS switch, on the forward overhead panel, to the ON position.

1) Make sure that these information signs are on:

a) FASTEN SEAT BELT

b) RETURN TO SEAT

(b) Set the FASTEN BELTS switch to the OFF position.

1) Make sure that the information signs are off.

**WARNING** MAKE SURE THAT THE DOWNLOCK PINS ARE INSTALLED ON ALL THE LANDING GEAR. WITHOUT THE DOWNLOCK PINS, THE LANDING GEAR CAN RETRACT. THIS CAN CAUSE INJURIES TO PERSONS, AND DAMAGE TO EQUIPMENT.

(c) Make sure that the ground locks are installed on the nose and main landing gear.

1) If it is necessary, do this task: Landing Gear Downlock Pins Installation, TASK 32-00-01-480-801.

**WARNING** KEEP PERSONNEL AND EQUIPMENT AWAY FROM THE FLIGHT CONTROL SURFACES, THE THRUST REVERSERS, AND THE LANDING GEAR. THESE COMPONENTS CAN MOVE SUDDENLY WHEN YOU SUPPLY HYDRAULIC POWER. THIS CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(d) Supply hydraulic power to hydraulic systems A and B (TASK 29-11-00-860-801).

(e) Move the flap control lever to the UP position.

(f) Move the landing gear lever to the UP position.

(g) Set the FASTEN BELTS switch to the AUTO position.

1) Make sure that all information signs are off.

(h) Move the flap control lever to position 2.

1) Make sure that these information signs are on:

a) FASTEN SEAT BELT

b) RETURN TO SEAT

(i) Move the flap control lever to position 0.

1) Make sure that all information signs are off.

(j) Move the landing gear lever to the down position.

1) Make sure that all information signs are on.

(k) Move the landing gear lever to the up position.

1) Make sure that all information signs are off.

(l) Set the FASTEN BELTS switch to the OFF position.

1) Make sure that all information signs stay off.

(m) Move the landing gear lever to the down position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(n) Set the FASTEN BELTS switch to the AUTO position.

(o) Remove hydraulic power from hydraulic systems A and B (TASK 29-11-00-860-805).

**SUBTASK 33-20-00-710-006**

(7) Do a test of the galley light in the forward galley as follows:

NOTE: The galley light is located in the forward galley.

(a) Set the switch for the galley light to the bright mode.

1) Make sure that the lights come on bright.

(b) Set the switch to the dim mode.

1) Make sure that the light becomes dim.

(c) Set the switch to the off mode.

1) Make sure that the light goes off.

**SUBTASK 33-20-00-710-007**

(8) Do a test of the lavatory mirror lights as follows:

(a) At each lavatory, open the lavatory door.

1) Make sure that the auxiliary lights are on.

NOTE: The auxiliary lights come on when electrical power is supplied to the airplane.

2) Make sure that the lights are off.

(b) Go in the lavatory and lock the door.

1) Make sure that the lights come on bright.

(c) Unlock the door.

1) Make sure that the lights go to off.

2) Make sure that the auxiliary lights stay on.

**SUBTASK 33-20-00-710-008**

(9) Do a test of each lavatory-occupied sign as follows:

NOTE: You will need two people to do this part of the test.

(a) Make sure that the lights behind the occupied symbol are off.

(b) Go in the lavatory and lock the door.

NOTE: For airplane with multiple lavatories in the aft cabin, the lavatory-occupied sign comes on when all lavatories in the aft cabin are locked.

1) Make sure that the lights behind the occupied symbol come on.

(c) Leave the lavatory and close the lavatory door.

1) Make sure that the lights behind the occupied symbol go off.

**SUBTASK 33-20-00-710-009**

(10) Do a test of the passenger call lights.

(a) Set the call switch, at each Passenger Service Unit (PSU), to the ON mode.

1) Make sure that the call light on the PSU comes on.

2) Make sure that the blue call light in the exit sign near the door comes on.

NOTE: A call-select switch on the PSU lets you send the call signal to the forward or the aft exit sign.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Set the call switch to the OFF mode.

1) Make sure that the call light on the PSU goes off.

2) Make sure that the blue call light in the exit sign near the door goes off.

SUBTASK 33-20-00-710-010

(11) Do a test of the lavatory call light system.

(a) Set the call switch in the lavatory to the on mode.

1) Make sure that the light in the call switch comes on.

2) Make sure that the call light/reset switch outside the lavatory comes on.

3) Make sure that the amber call light in the exit sign near the lavatory comes on.

(b) Push the call light/reset switch outside the lavatory to the off mode.

1) Make sure that the call light/reset switch goes off.

2) Make sure that the light in the call switch in the lavatory goes off.

3) Make sure that the amber call light on the exit sign near the lavatory goes off.

**F. Put the Airplane Back to Its Usual Condition**

SUBTASK 33-20-00-860-004

(1) Set the CAB/UTIL switch, at the P5-13 panel, to the OFF position.

**——— END OF TASK ———**

**TASK 33-20-00-470-801**

**3. Passenger Compartment Lights - BSI Generation 3.X OPS Loadable Software Airplane Part (LSAP) Loading**

(Figure 501)

**A. General**

(1) Do the Loadable Software Airplane Part (LSAP) verification for light section.

(2) This procedure includes the steps to install the Operational Program Software (OPS) LSAP into BSI generation 3.X light columns:

(a) Direct

(b) Cove

(c) Ceiling

(d) Crossbin

(e) COS

(3) Light Emitting Diode (LED) light indication:

(a) Normal function - LEDs are displaying correct scene data from Attendant Control Panel (ACP).

(b) Bootloader Mode:

1) White (WWW) segments - Partial cool white segments with remaining segment cool and warm light.

2) RGBW (color) segments - Partial blue segment with remaining segment white light.

(c) Loss of Communication:

1) White (WWW) segments - White light at 30% intensity (amber and white lights).

2) RGBW (color) segments - White light at 30% intensity.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**B. References**

| Reference | Title |
|---|---|
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |
| 23-42-03-700-801 | Attendant Control Panel (ACP) - Configuration Check (P/B 201) |

**C. Tools/Equipment**

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

| Reference | Description |
|---|---|
| COM-15086 | Cable - USB to RS-485 Harness<br>Part #: TH-737-CABLE-02 Supplier: 59579 |
| COM-21223 | Data Loader - ARINC 615 (with ARINC 645-1 Compliant)<br>Part #: 403474 Supplier: CG603<br>Part #: 403562 Supplier: CG603<br>Part #: AE-615-MPDL Supplier: CD624<br>Part #: AE-DL-SMD Supplier: CD624<br>Part #: PDL-615-XT Supplier: 89Q20<br>Part #: PXS-LDS-12 Supplier: 98571 |

**D. Location Zones**

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

**E. Prepare for the LSAP Loading**

**SUBTASK 33-20-00-860-006**

(1) Make sure that the CAB/UTIL switch at the panel, P5-13, is set to the ON position.

**SUBTASK 33-20-00-720-001**

(2) Select the maintenance tab button on the forward attendant control panel.

**SUBTASK 33-20-00-720-002**

(3) Enter password if required.

NOTE: Default password is “1234” unless changed by the operator.

**SUBTASK 33-20-00-720-003**

(4) Select the CONFIG CHECK button.

**SUBTASK 33-20-00-720-004**

(5) Make sure that the OPS LSAP part number is displayed in the firmware field for these lighting types:

- Direct
- Cove
- Ceiling
- Crossbin
- COS

NOTE: It is not necessary to examine the Sidewall and Overwing Exit lights because they do not have loadable OPS. Sidewall and Exit lights are on lighting columns 1 and 4.

(a) On column 1 start with the first light and examine the OPS part number for all light types until the first sidewall light is shown.

(b) On column 2 and 3, examine the OPS part number for all lights.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) On column 4 start with the last light address and verify the OPS part number for all light types backward until the first sidewall light is displayed.

NOTE: During software verification if one part number is incorrect in the lighting column the rest of the lights in that column do not need to be examined.

SUBTASK 33-20-00-720-005

(6) Record the necessary columns.

## F. LSAP Loading

SUBTASK 33-20-00-470-001

(1) Copy the 33 CLS OPS media set part onto the ARINC 645-1 compliant portable data loader, COM-21223.

NOTE: B/E Aerospace will provide this load tool application.

SUBTASK 33-20-00-420-001

(2) Connect the USB to RS-485 harness cable, COM-15086, to the ARINC 645-1 compliant portable data loader, COM-21223.

SUBTASK 33-20-00-860-010

(3) Select the lighting menu on the ACP.

SUBTASK 33-20-00-860-009

(4) Select a lighting scene on the ACP where the crossbin is OFF or DIM.

SUBTASK 33-20-00-860-011

(5) Open this circuit breaker and install safety tag:

**F/O Electrical System Panel, P6-1**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 12 | C01936 | ATTENDANT PANELS |

SUBTASK 33-20-00-010-001

(6) To get access to the wire bundle for a column, use one of these:

(a) For column 1, open access panel to get to the wire bundle (Figure 501).

(b) For column 2, open access panel to get to the wire bundle (Figure 502).

NOTE: Use bin light that is not blocked by a center overhead storage.

(c) For column 3, open access panel to get to the wire bundle (Figure 503).

NOTE: Use bin light that is not blocked by a center overhead storage.

(d) For column 4, open access panel to get to the wire bundle (Figure 504).

SUBTASK 33-20-00-020-001

(7) Disconnect J2 from P2.

SUBTASK 33-20-00-420-002

(8) Connect the USB to RS-485 harness cable, COM-15086, between J2 and P2 on the column to load.

SUBTASK 33-20-00-470-003

(9) Install the LSAP as follows:

(a) Open the load tool application.

(b) Go to File >Select LSAP.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Select the LSAP HDR file contained in the media set, P/N DISK001, folder.

NOTE: An example of the file name for the LSAP part number: 3375–BEA-003–00 will be in the form of BEA00300.HDR.

(d) Use the drop down menu to select a COM port:

1) Select the first COM port on the list.
2) Select File>Debug> and press COM test.
3) If the lights blink, or go into lamp test (all LEDs illuminated) the correct COM port is selected.
4) If the lights do not blink or go into lamp test select the next COM port and repeat steps 2 and 3.

(e) Select Start Data Load.

NOTE: When data load is finished, the lights should go into the loss of communication mode.

(f) Make sure that the lights that were loaded are not in bootloader mode.

(g) All other lights in the column will continue to display the same as before the load or go into loss of communication mode.

**SUBTASK 33-20-00-020-002**

(10) Disconnect the USB to RS-485 harness cable, COM-15086, from J2 and P2.

**SUBTASK 33-20-00-420-003**

(11) Connect J2 to P2.

**SUBTASK 33-20-00-410-001**

(12) To close access to the wire bundle for a column, use one of these:

(a) For column 1, close access panel for the wire bundle (Figure 501).

(b) For column 2, close access panel for the wire bundle (Figure 502).

NOTE: Use bin light that is not blocked by a center overhead storage.

(c) For column 3, close access panel for the wire bundle (Figure 503).

NOTE: Use bin light that is not blocked by a center overhead storage.

(d) For column 4, close access panel for the wire bundle (Figure 504).

**SUBTASK 33-20-00-470-002**

(13) Remove the safety tag and close this circuit breaker:

**F/O Electrical System Panel, P6-1**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 12 | C01936 | ATTENDANT PANELS |

**SUBTASK 33-20-00-470-004**

(14) Do this: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

NOTE: Phase 2 data load is recommended.

**SUBTASK 33-20-00-700-002**

(15) Do this task: Attendant Control Panel (ACP) - Configuration Check, TASK 23-42-03-700-801.

(a) Make sure that the correct LSAP part number is displayed in the firmware field for these light types:

- Direct



ECCN 9E991 BOEING PROPRIETARY - See title page for details

- Cove
- Ceiling
- Crossbin
- COS

**G. Put the Airplane Back to ITS Usual Condition**


**SUBTASK 33-20-00-860-007**

(1) Set the CAB/UTIL switch at the panel, P5-13, to the OFF position.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

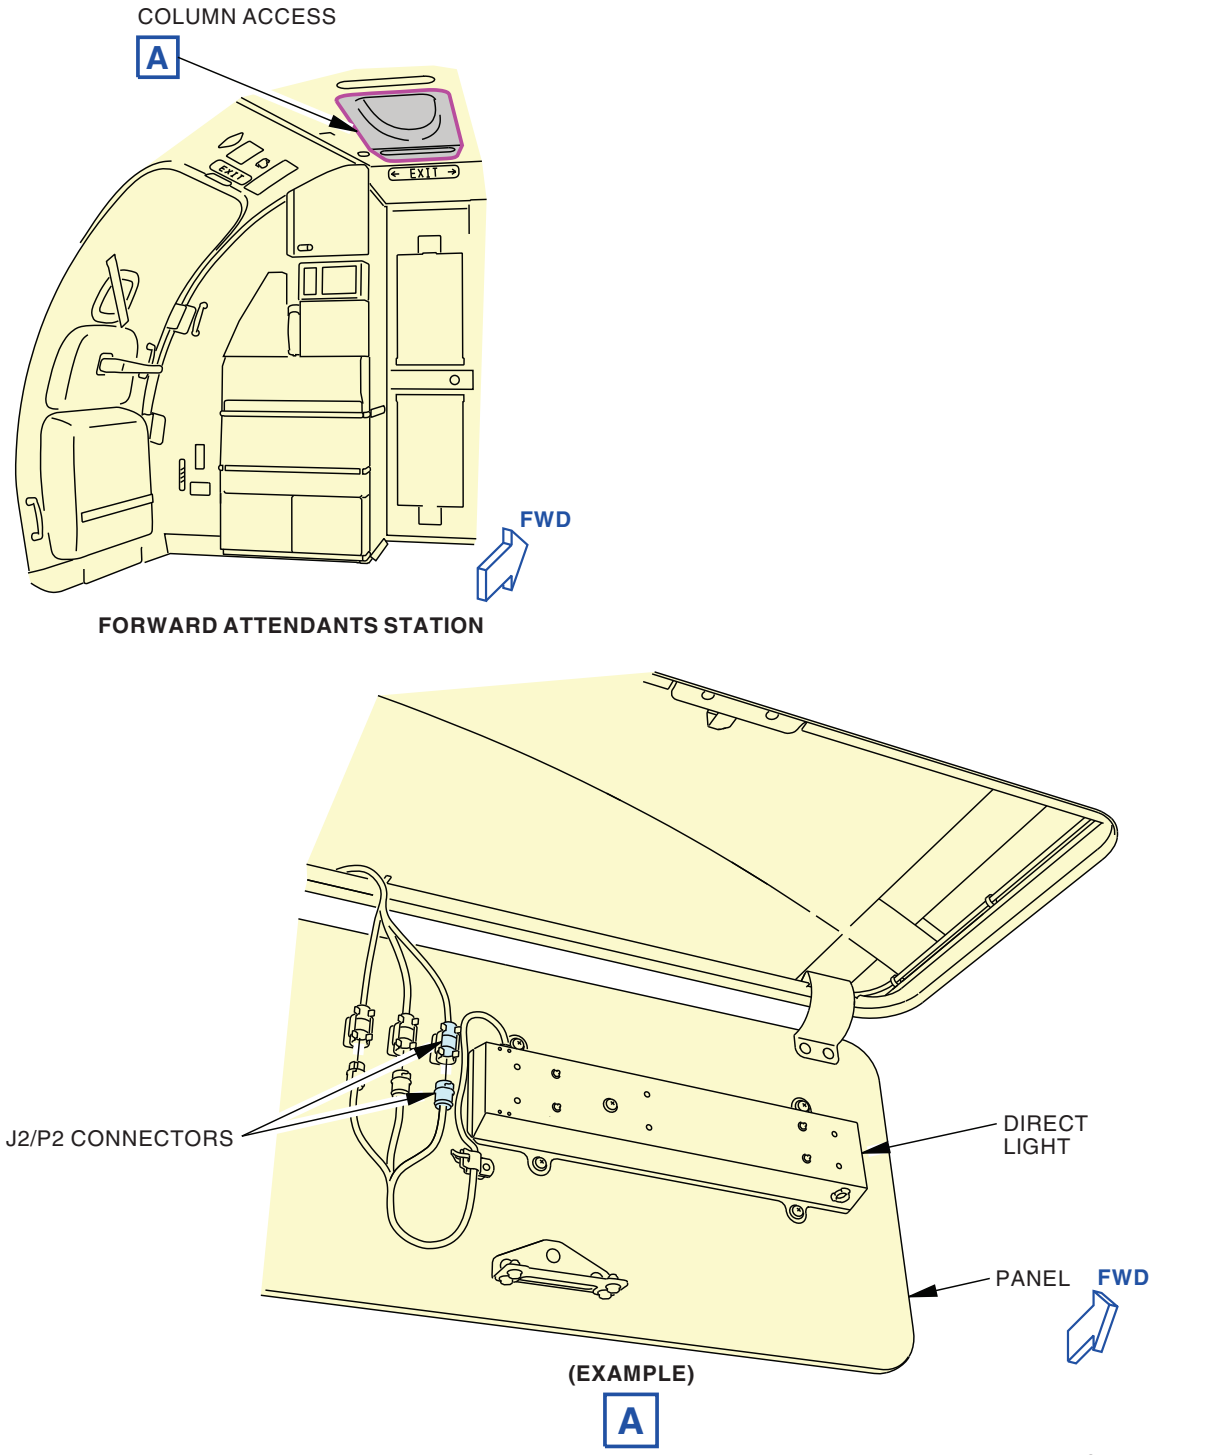


**BSI Lighting Column 1 Access**
**Figure 501/33-20-00-990-801**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

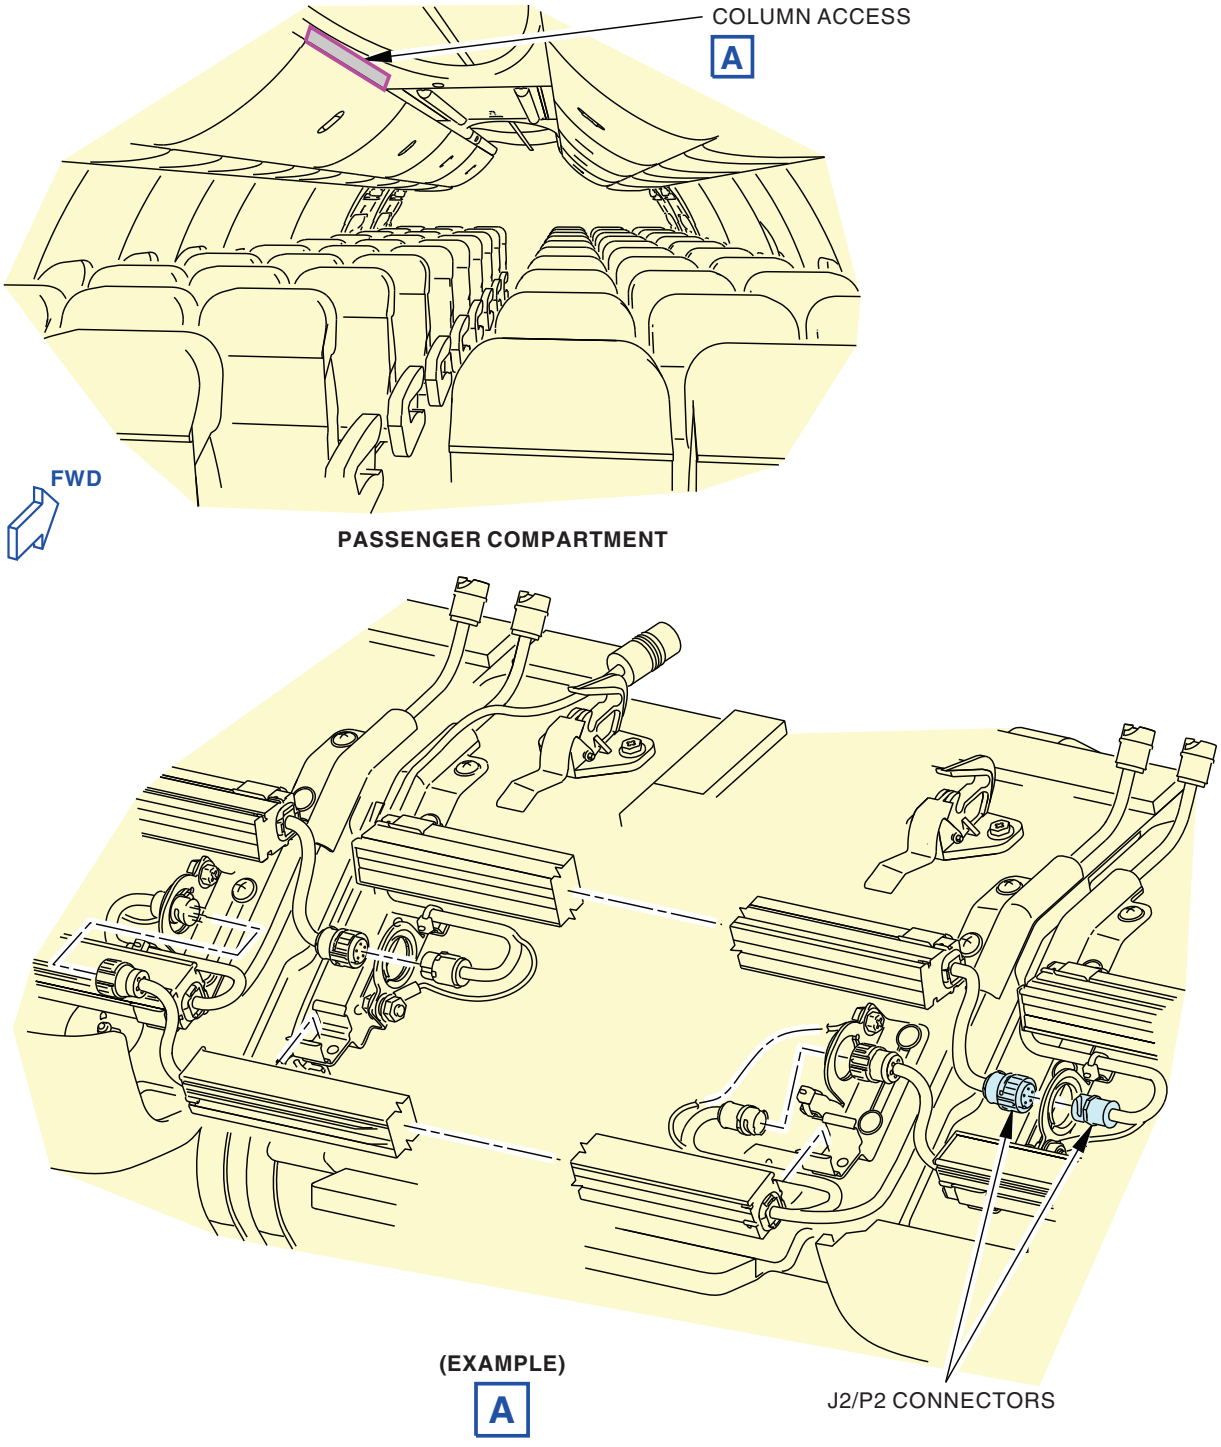


**BSI Lighting Column 2 Access**
**Figure 502/33-20-00-990-802**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

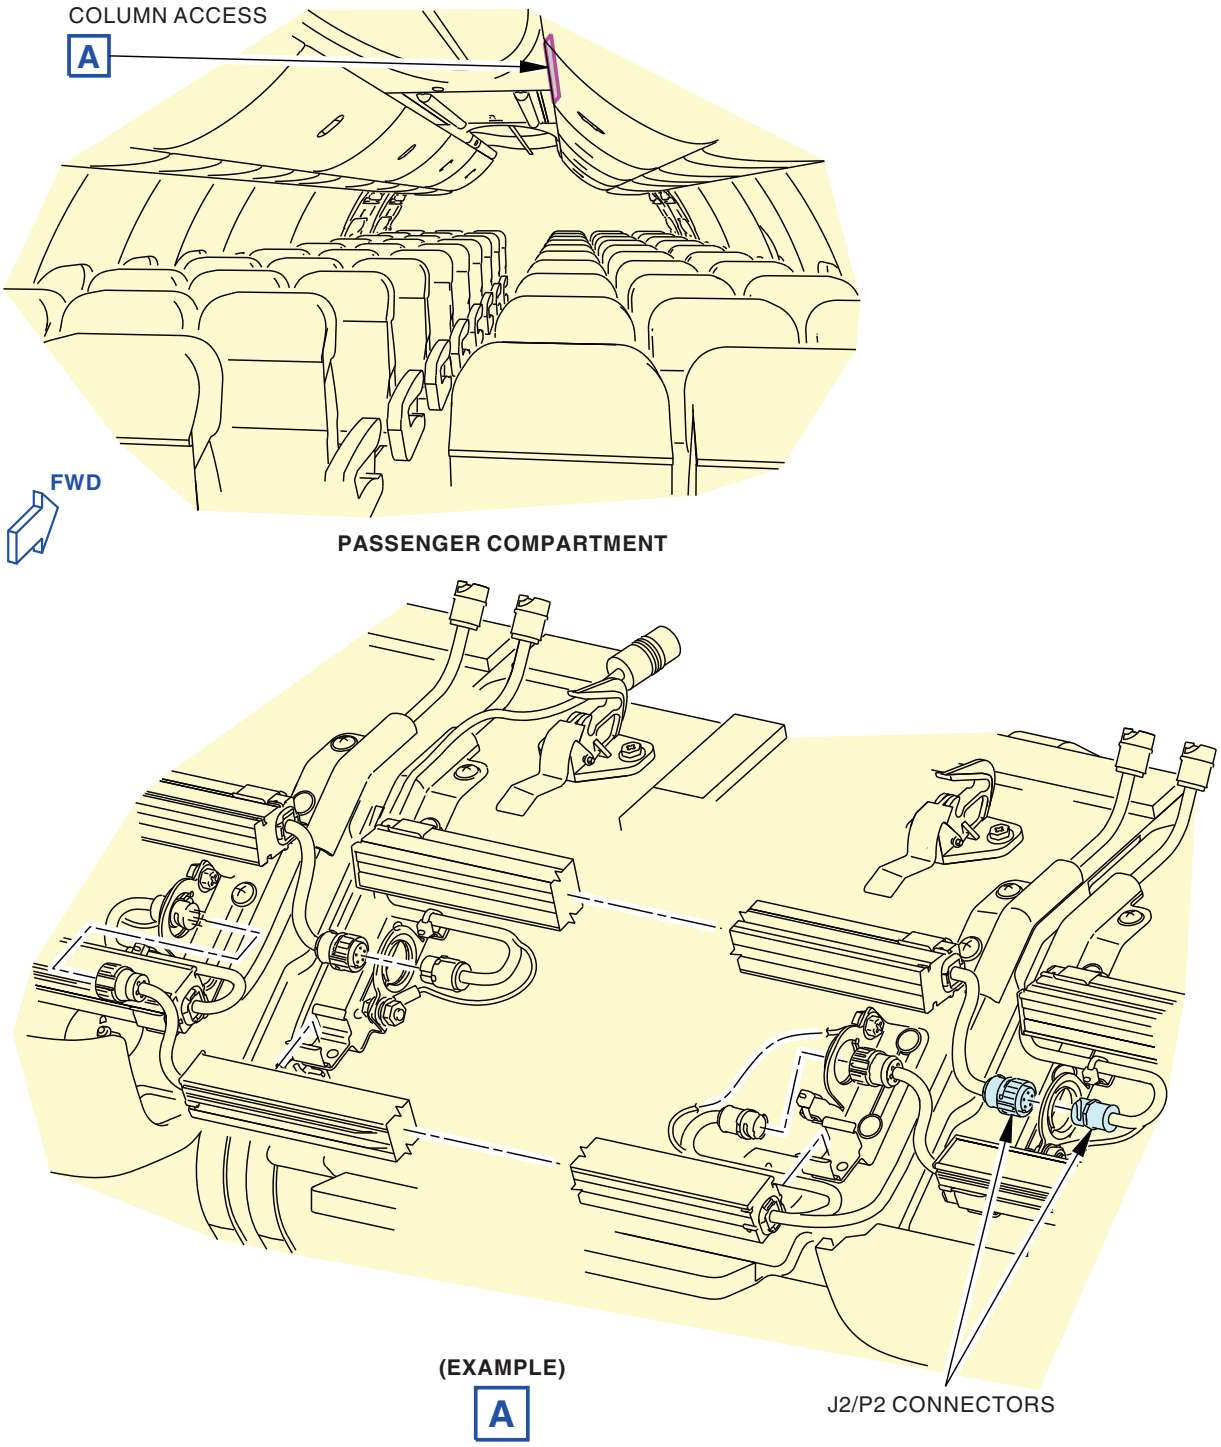


**BSI Lighting Column 3 Access**
**Figure 503/33-20-00-990-803**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

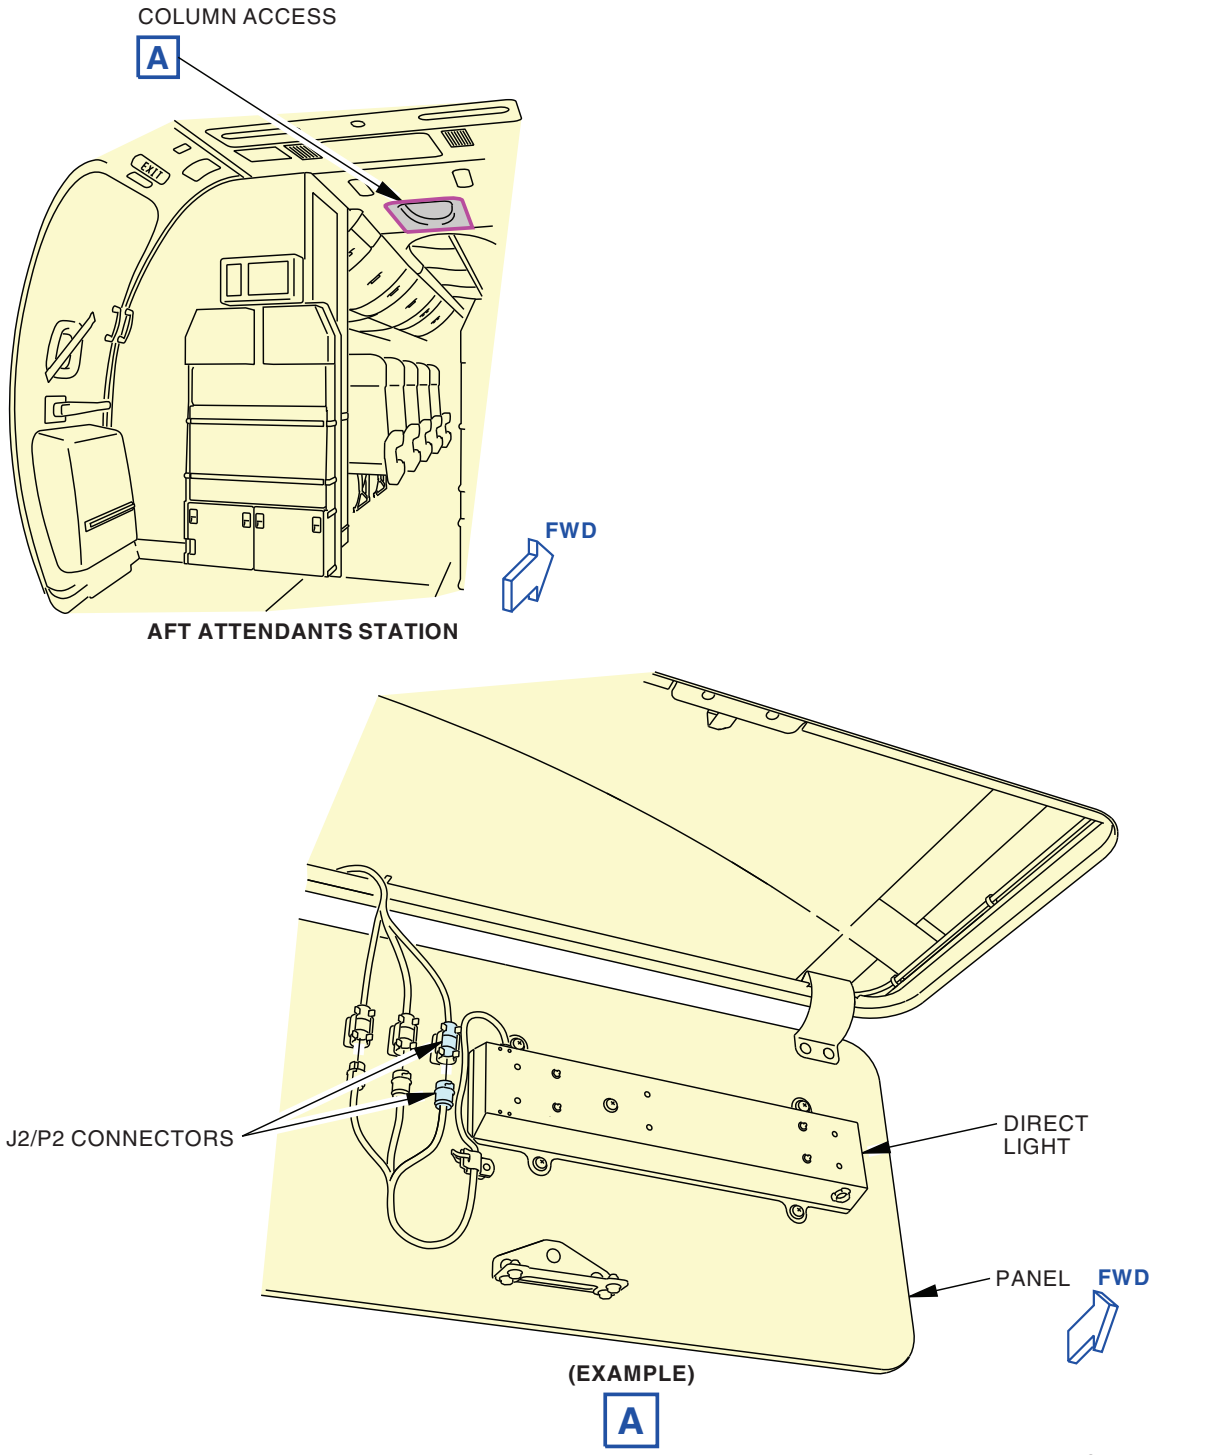


**BSI Lighting Column 4 Access**
**Figure 504/33-20-00-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## WINDOW LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) BSI Window LED Lighting Deactivation

(2) BSI Window LED Lighting Activation

(3) Window Light - LED Light Assembly Replacement

(4) Window Light - Overwing Exit Light Assembly Replacement

**TASK 33-21-00-040-801**

### 2. BSI Window LED Lighting - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes the electrical power to the window lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

#### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

#### D. BSI Window LED Lighting Deactivation

**SUBTASK 33-21-00-860-001**

(1) Make sure that the Utility switch(es) (ELEC METERS, BATTERY AND GALLEY PWR MODULE), on the P5 -13 panel, are in the ON position.

**SUBTASK 33-21-00-010-001**

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-21-00-860-003**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 11 | C00594 | WINDOW LIGHT RIGHT |
| E | 12 | C00776 | WINDOW LIGHT LEFT |

SUBTASK 33-21-00-410-004

(4) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**E. BSI Window LED Lighting - Tryout**

NOTE: This tryout is to make sure that the BSI Window LED Lighting is in a zero energy state.

SUBTASK 33-21-00-211-001

(1) Set the applicable switch for the window light to ON.


NOTE: Window lights are controlled by the Attendant Control Panel (ACP).

(a) Make sure that the window lights do not come on.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

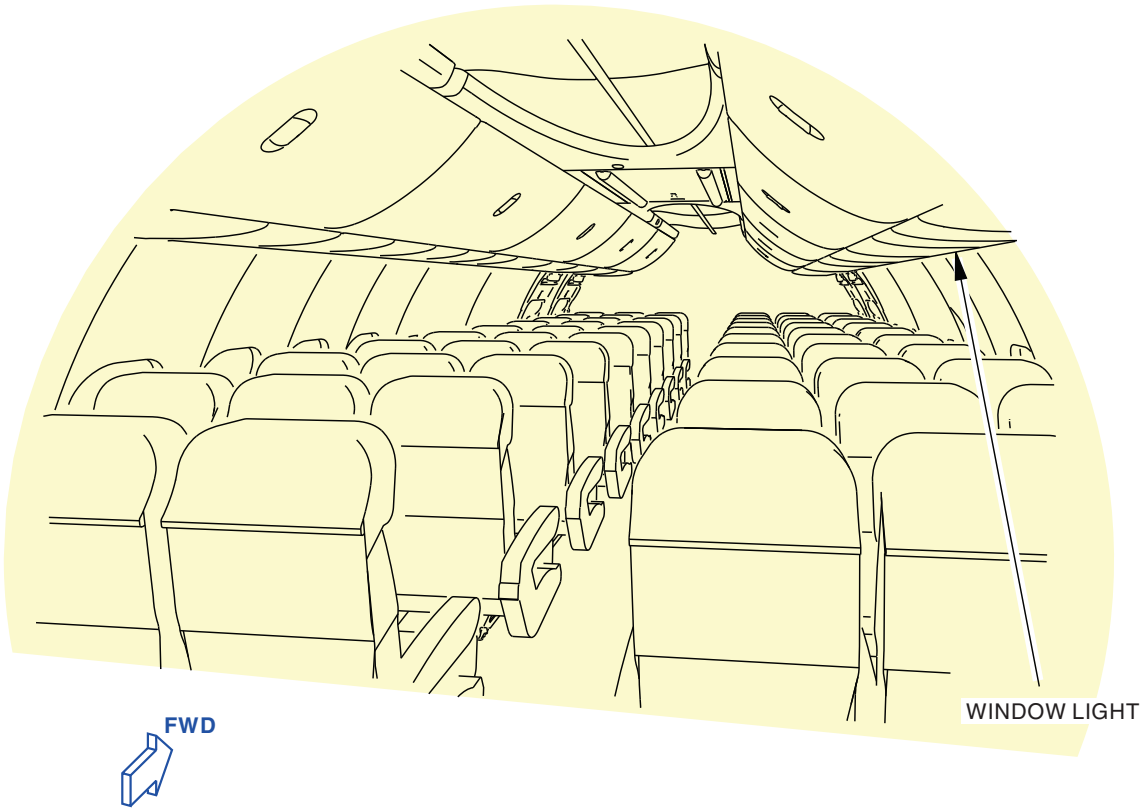


**PASSENGER COMPARTMENT**

2414593 S00061535545_V1

**Window Lights**
**Figure 201/33-21-00-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-21-00-440-801**

## 3. BSI Window LED Lighting - Activation

(Figure 201)

### A. General

(1) This procedure adds electrical the power to the window lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. BSI Window LED Lighting Activation

**SUBTASK 33-21-00-010-004**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-21-00-860-006**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 11 | C00594 | WINDOW LIGHT RIGHT |
| E | 12 | C00776 | WINDOW LIGHT LEFT |

**SUBTASK 33-21-00-410-001**

(3) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-21-00-960-801**

## 4. Window Light - LED Light Assembly Replacement

(Figure 202)

### A. References

| Reference | Title |
|---|---|
| 20-40-12-000-802 | ESDS Handling for Metal Encased Unit Removal (P/B 201) |
| 20-40-12-400-802 | ESDS Handling for Metal Encased Unit Installation (P/B 201) |
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 41 | Light assembly | 33-21-51-74-205 | PTF ALL |
| | | 33-21-51-74-210 | PTF ALL |
| | | 33-21-51-74-215 | PTF ALL |
| | | 33-21-51-74-220 | PTF ALL |
| | | 33-21-51-74-225 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### E. Windows LED Light Assembly Replacement

**SUBTASK 33-21-00-860-008**

(1) Do these steps at the applicable attendant control panel:

(a) Make sure that the attendant control panel display is activated.

(b) To activate it, touch the opposite corners of the display sequentially within two seconds.

(c) If it is necessary, input the password to get access to the attendant control panel.

(d) On the attendant control panel display, touch the Lighting tab.

(e) Below the passenger seating area, touch the OFF button.

**SUBTASK 33-21-00-010-002**

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-21-00-860-009**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 11 | C00594 | WINDOW LIGHT RIGHT |
| E | 12 | C00776 | WINDOW LIGHT LEFT |

**SUBTASK 33-21-00-040-001**

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(4) Before you touch the light assembly [41], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-000-802).

**SUBTASK 33-21-00-020-001**

(5) Do these steps to remove the light assembly [41]:

(a) Do these steps to remove the lens [45].

1) Remove the screw [44] and retainer [43] from each end of the lens [45].

2) Remove the lens [45].

(b) Disconnect the elector connector [42] from each end of the light assembly [41].

(c) Remove the light assembly [41].

1) If there is a center mounting bracket, use a flat tool to carefully remove the light assembly [41] from the center mounting bracket.

**SUBTASK 33-21-00-040-002**

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(6) Before you touch the light assembly [41], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-400-802).

**SUBTASK 33-21-00-420-001**

(7) Do these steps to install the light assembly [41]:

(a) Put the light assembly [41] in position.

1) If there is a center mounting bracket, carefully push the light assembly [41] until it latches onto the mounting bracket.

(b) Connect a elector connector [42] to each end of the light assembly [41].

(c) Do these steps to install the lens [45].

1) Put the lens [45] in position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

2) Install a retainer [43] and screw [44] to each end of the lens [45].

3) Tighten the screws [44] to 12.5 ±2.5 in-lb (1.4 ±0.3 N·m).

SUBTASK 33-21-00-860-010

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(8) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 11 | C00594 | WINDOW LIGHT RIGHT |
| E | 12 | C00776 | WINDOW LIGHT LEFT |

SUBTASK 33-21-00-410-002

(9) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-21-00-860-020

(10) Load the software to the new light assembly, do this task: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

SUBTASK 33-21-00-710-001

(11) Do a test of the new light assembly.

(a) Make sure that the Attendant Control Panel (ACP) display is activated.

1) To activate it, touch the opposite corners of the ACP display sequentially within two seconds.

(b) If it is necessary, input the password to get access to the ACP.

(c) Make sure that the CAB/UTIL switch, on the P5-13 panel, is set to the ON position.

(d) On the ACP display, touch the Lighting tab.

(e) Below the Passenger Seating Area, touch the White Bright button.

1) Make sure that the light comes on brightly.

(f) Touch the White Medium button.

1) Make sure that the light becomes medium.

(g) Touch the Boarding/Deplane button.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the light color in the passenger compartment is equivalent to the light type shown below the General Lighting Layout on the ACP display.

NOTE: The light can take at least 15 seconds to change.

(h) Touch the OFF button.


1) Make sure that the light goes off.

(i) If it is not necessary, set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

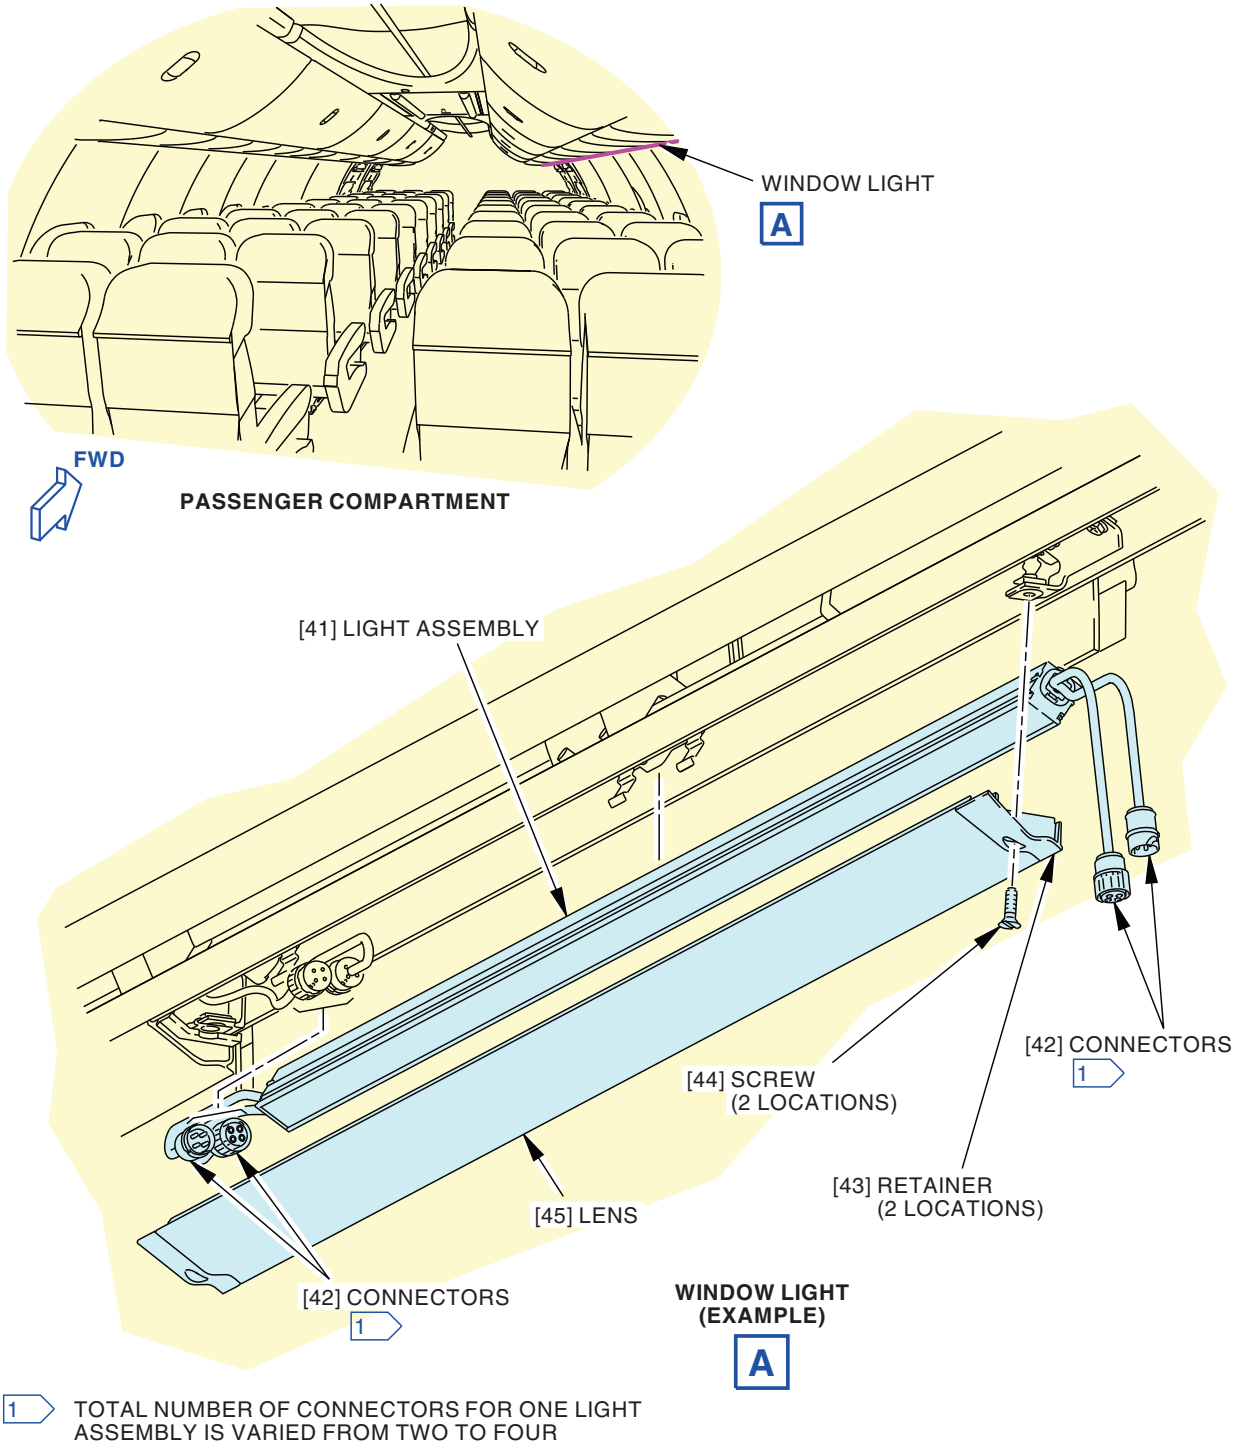


**Window Light - LED Light Assembly Replacement**
**Figure 202/33-21-00-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-21-00-960-802**

## 5. Window Light - Overwing Exit Light Assembly Replacement

(Figure 203)

### A. References

| Reference | Title |
|---|---|
| 20-40-12-000-802 | ESDS Handling for Metal Encased Unit Removal (P/B 201) |
| 20-40-12-400-802 | ESDS Handling for Metal Encased Unit Installation (P/B 201) |
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |
| 25-21-20-000-801 | Emergency Exit Doorway Lining Removal (P/B 401) |
| 25-21-20-400-801 | Emergency Exit Doorway Lining Installation (P/B 401) |
| 33-51-00-710-801 | Emergency Lights Operational Check (P/B 501) |
| 33-51-00-720-801 | Emergency Lights Operational Test (P/B 501) |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 61 | Light assembly | 33-21-51-74-380 | PTF ALL |
| | | 33-21-51-74-385 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### E. Windows Overwing Exit Light Assembly Replacement

**SUBTASK 33-21-00-860-014**

(1) Do these steps at the applicable attendant control panel:

(a) Make sure that the attendant control panel display is activated.

(b) To activate it, touch the opposite corners of the display sequentially within two seconds.

(c) If it is necessary, input the password to get access to the attendant control panel.

(d) On the attendant control panel display, touch the Lighting tab.

(e) Below the passenger seating area, touch the OFF button.

**SUBTASK 33-21-00-010-003**

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-21-00-860-015

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 11 | C00594 | WINDOW LIGHT RIGHT |
| E | 12 | C00776 | WINDOW LIGHT LEFT |

SUBTASK 33-21-00-860-021

(4) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 10 | C01357 | PASS CABIN LIGHTING EMER CHGR L AFT |
| B | 10 | C01358 | PASS CABIN LIGHTING EMER CHGR R AFT |

SUBTASK 33-21-00-040-003

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(5) Before you touch the light assembly [61], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-000-802).

SUBTASK 33-21-00-020-002

(6) Do these steps to remove the light assembly [61]:

(a) Remove the fasteners [63].

(b) Remove the lens [64].

(c) Remove the fasteners [65].

(d) Get access to the light assembly [61] installed on the back of the upper lining assembly, do this task: Emergency Exit Doorway Lining Removal, TASK 25-21-20-000-801.

NOTE: Do only the steps necessary for access to the light assembly installed on the back of the upper lining assembly.

(e) Remove the fasteners [62].

(f) Disconnect the electrical connecctors [66].

(g) Remove the light assembly [61].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-21-00-040-004

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(7) Before you touch the light assembly [61], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-400-802).

SUBTASK 33-21-00-420-002

(8) Do these steps to install the light assembly [61]:

(a) Put the light assembly [61] in position.

(b) Install the fasteners [62].

1) Tighten the fasteners [62].

(c) Connect the electrical connecctors [66].

(d) Do this task: Emergency Exit Doorway Lining Installation, TASK 25-21-20-400-801.

(e) Install the fasteners [65].

1) Tighten the fasteners [65].

(f) Put the lens [64] in position.

(g) Install the fasteners [63].

1) Tighten the fasteners [63].

SUBTASK 33-21-00-860-016

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(9) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 11 | C00594 | WINDOW LIGHT RIGHT |
| E | 12 | C00776 | WINDOW LIGHT LEFT |

SUBTASK 33-21-00-860-022

(10) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 10 | C01357 | PASS CABIN LIGHTING EMER CHGR L AFT |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 10 | C01358 | PASS CABIN LIGHTING EMER CHGR R AFT |

SUBTASK 33-21-00-410-003

(11) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-21-00-860-017

(12) Load the software to the new light assembly, do this task: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

SUBTASK 33-21-00-710-002

(13) Do a test of the new light assembly.

(a) Make sure that the Attendant Control Panel (ACP) display is activated.

1) To activate it, touch the opposite corners of the ACP display sequentially within two seconds.

(b) If it is necessary, input the password to get access to the ACP.

(c) Make sure that the CAB/UTIL switch, on the P5-13 panel, is set to the ON position.

(d) On the ACP display, touch the Lighting tab.

(e) Below the Passenger Seating Area, touch the White Bright button.

1) Make sure that the light comes on brightly.

(f) Touch the White Medium button.

1) Make sure that the light becomes medium.

(g) Touch the Boarding/Deplane button.

1) Make sure that the light color in the passenger compartment is equivalent to the light type shown below the General Lighting Layout on the ACP display.

NOTE: The light can take at least 15 seconds to change.

(h) Touch the OFF button.

1) Make sure that the light goes off.

(i) If it is not necessary, set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

SUBTASK 33-21-00-710-003

(14) Do this task: Emergency Lights Operational Check, TASK 33-51-00-710-801.


SUBTASK 33-21-00-710-004


(15) Do this task: Emergency Lights Operational Test, TASK 33-51-00-720-801.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

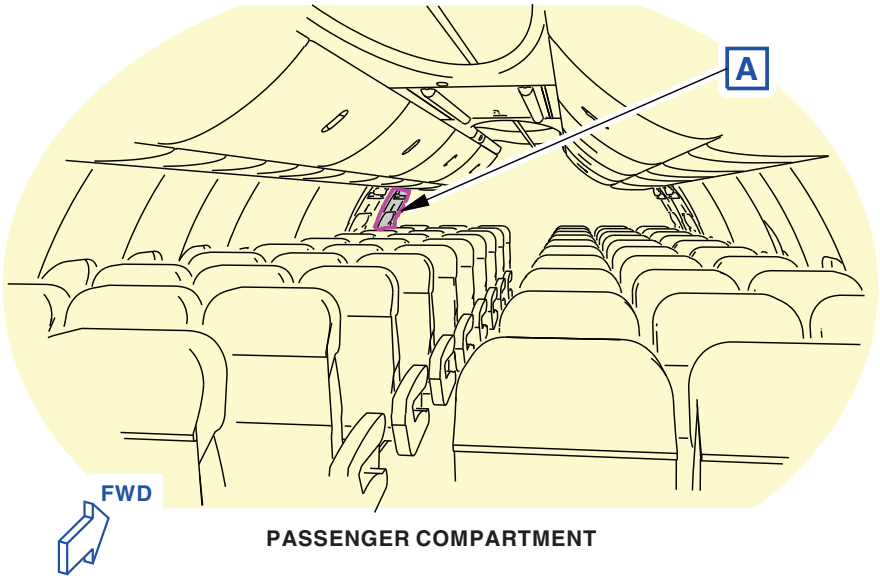

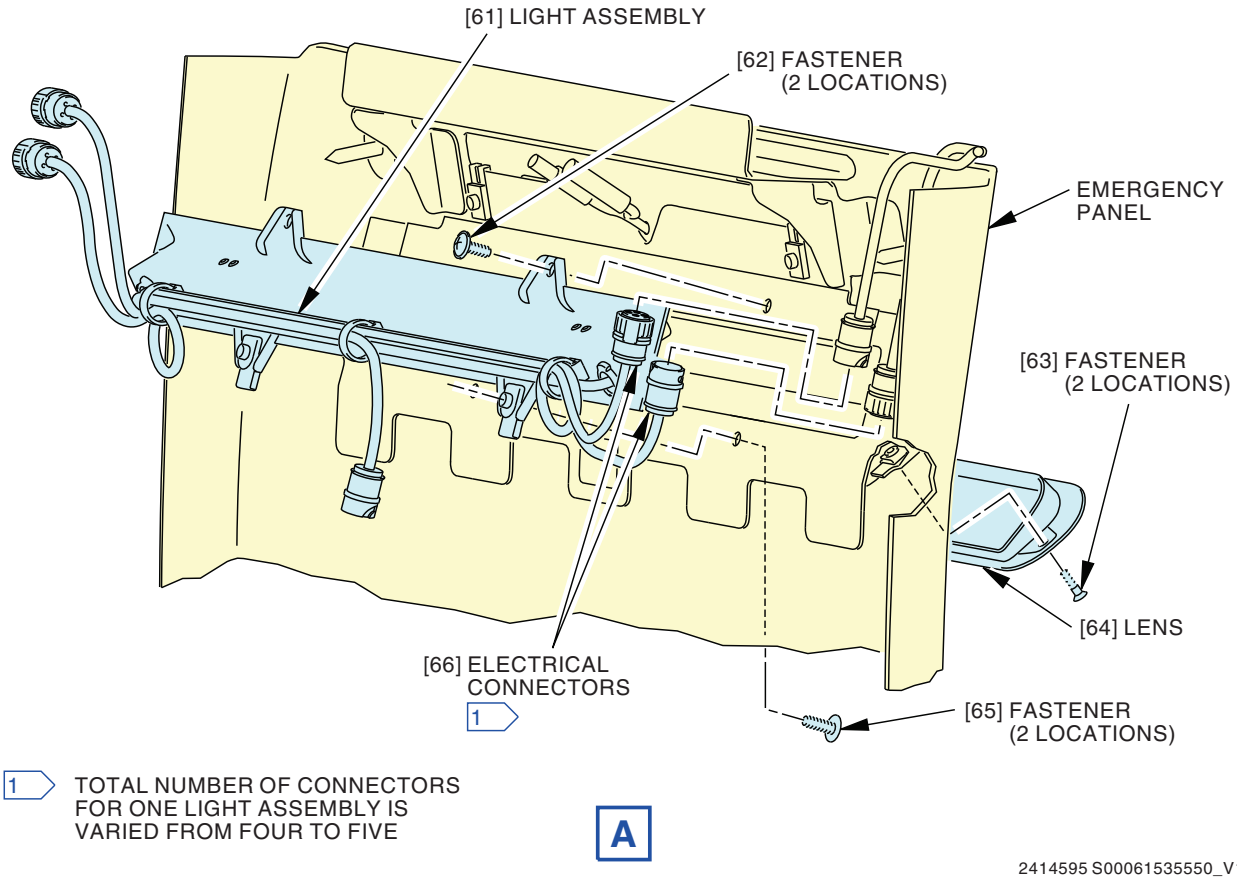
**Window Light - Overwing Exit Light Assembly Replacement**
**Figure 203/33-21-00-990-803**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CEILING LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) BSI Ceiling LED Lighting Deactivation

(2) BSI Ceiling LED Lighting Activation

(3) BSI Entry and Cove LED Lighting Deactivation

(4) BSI Entry and Cove LED Lighting Activation

(5) Ceiling Light, Bin/Wash - LED Light Assembly Replacement

(6) Ceiling Light, Direct - LED Light Assembly Replacement

(7) Ceiling Light, Cove - LED Light Assembly Replacement

**TASK 33-22-00-040-801**

### 2. BSI Ceiling LED Lighting - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes electrical power to the ceiling lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

#### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

#### D. BSI Ceiling LED Lighting Deactivation

**SUBTASK 33-22-00-860-001**

(1) Make sure that the Utility switch (ELEC METERS, BATTERY AND GALLEY PWR MODULE), on the P5 -13 panel, is in the ON position.

**SUBTASK 33-22-00-010-001**

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-22-00-860-002**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**SUBTASK 33-22-00-860-003**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Open these circuit breakers and install safety tags:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 7 | C01937 | CEILING LIGHT AFT-L |
| E | 8 | C01938 | CEILING LIGHT AFT-R |
| E | 9 | C00590 | CEILING LT-R |
| E | 10 | C00591 | CEILING LT-L |

## E. BSI Ceiling LED Lighting - Tryout

NOTE: This tryout is to make sure that the BSI Ceiling LED Lighting is in a zero energy state.

**SUBTASK 33-22-00-860-004**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**SUBTASK 33-22-00-410-011**

(2) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-22-00-211-001**


(3) Make sure that the ceilings light on both sides are off.

NOTE: The ceiling lights are controlled by the Attendant Control Panel (ACP).

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

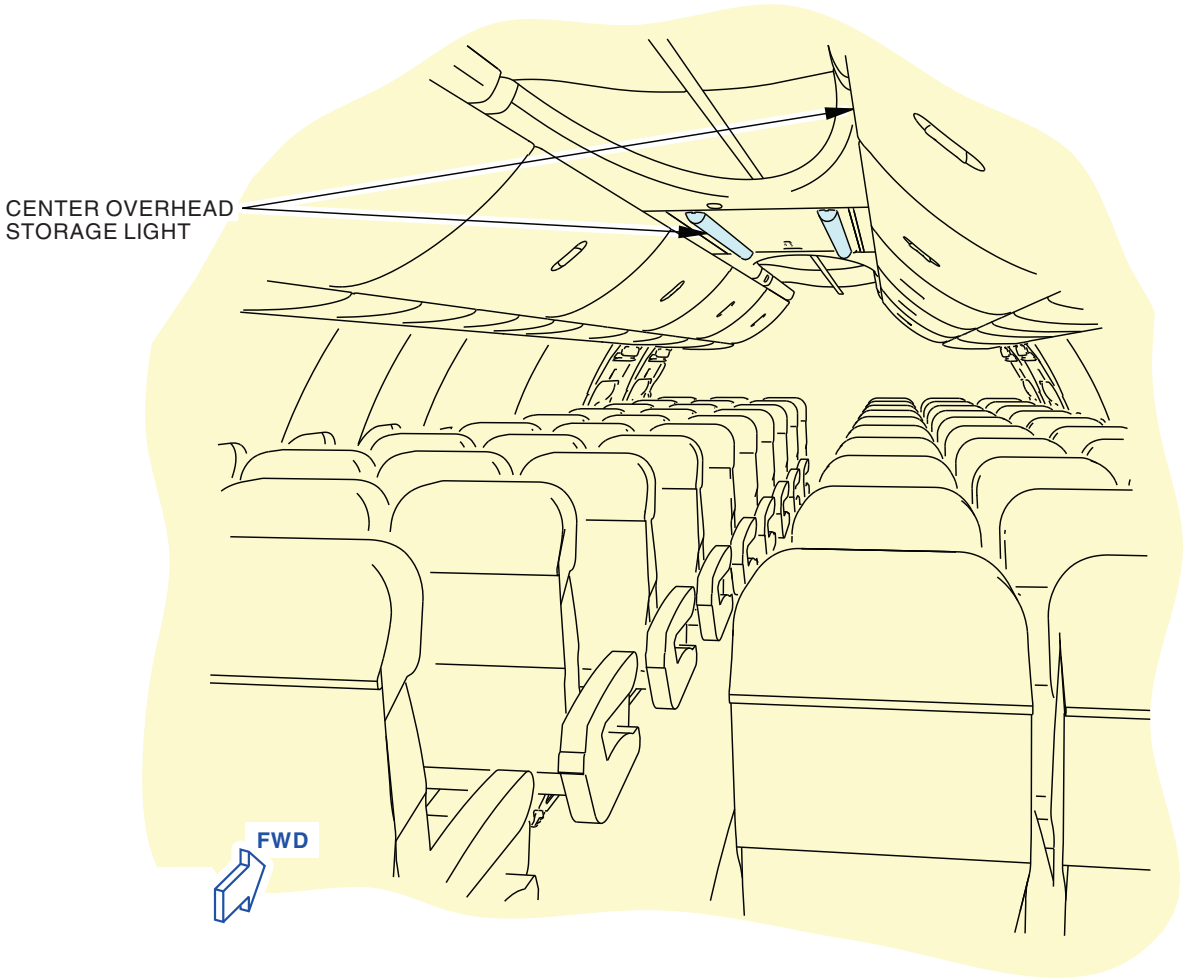


2414596 S00061535555_V1

**Ceiling Lights**
**Figure 201/33-22-00-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-22-00-440-801**

## 3. BSI Ceiling LED Lighting - Activation

(Figure 201)

### A. General

(1) This procedure adds electrical power to the ceiling lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 200 | Upper Half of Fuselage |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. BSI Ceiling LED Lighting Activation

**SUBTASK 33-22-00-010-011**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-22-00-860-005**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**SUBTASK 33-22-00-860-006**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 7 | C01937 | CEILING LIGHT AFT-L |
| E | 8 | C01938 | CEILING LIGHT AFT-R |
| E | 9 | C00590 | CEILING LT-R |
| E | 10 | C00591 | CEILING LT-L |

SUBTASK 33-22-00-410-001

(4) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**END OF TASK**

**TASK 33-22-00-040-802**

## 4. BSI Entry and Cove LED Lighting - Deactivation

(Figure 202)

### A. General

(1) This procedure removes electrical power to the entry and cove LED lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 211 | Flight Compartment - Left |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |
| 232 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right |
| 241 | Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left |
| 242 | Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. BSI Entry and Cove LED Lighting Deactivation

SUBTASK 33-22-00-860-007

(1) Make sure that the Utility switch (ELEC METERS, BATTERY AND GALLEY PWR MODULE), on the P5 -13 panel, is in the ON position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-010-002

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-22-00-860-008

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

SUBTASK 33-22-00-860-009

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

## E. BSI Entry and Cove LED Lighting - Tryout

NOTE: This tryout is to make sure that the BSI Entry and Cove LED Lighting is in a zero energy state.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-860-010

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

SUBTASK 33-22-00-410-012

(2) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-22-00-211-002


(3) Make sure that the FWD and AFT Entry and Cove LED Lights are off.

NOTE: The entry and cove lights are controlled by the Attendant Control Panel (ACP).


**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

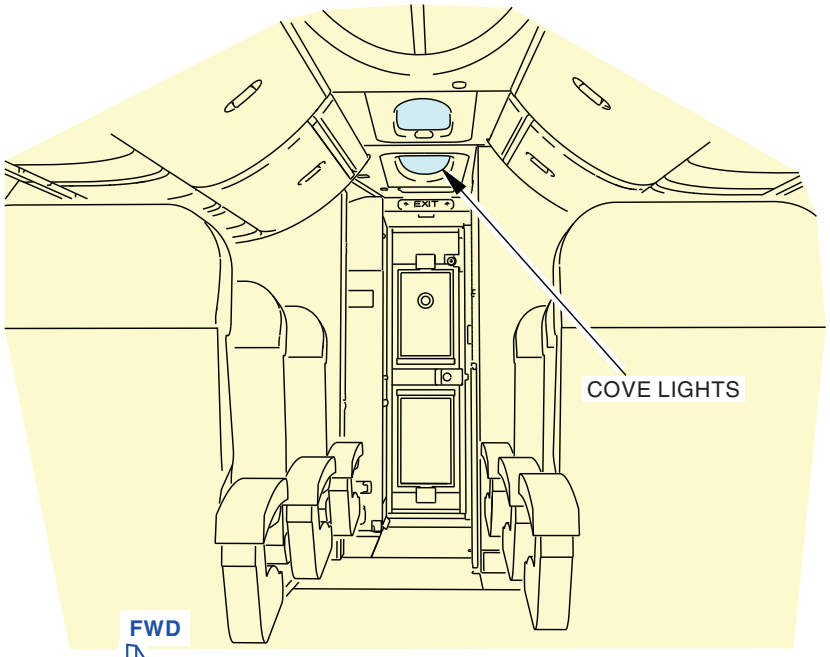


PASSENGER COMPARTMENT
(EXAMPLE)

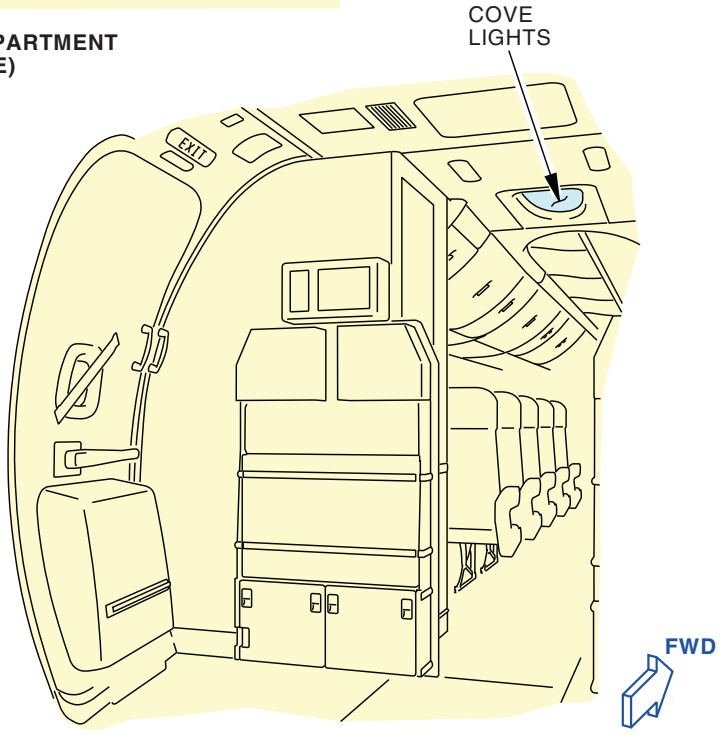


AFT ATTENDANTS STATION
(EXAMPLE)

2414597 S00061535558_V2

**Entry and Cove Lights**
**Figure 202/33-22-00-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-22-00-440-802**

## 5. BSI Entry and Cove LED Lighting - Activation

(Figure 202)

### A. General

(1) This procedure adds electrical power to the entry and cove LED Lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |
| 232 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right |
| 241 | Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left |
| 242 | Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. BSI Entry and Cove LED Lighting Activation

**SUBTASK 33-22-00-010-012**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-22-00-860-011**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-860-012

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-22-00-410-002

(4) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

——— END OF TASK ———

**TASK 33-22-00-960-801**

## 6. Ceiling Light, Bin/Wash - LED Light Assembly Replacement

(Figure 203)

### A. References

| Reference | Title |
|---|---|
| 20-40-12-000-802 | ESDS Handling for Metal Encased Unit Removal (P/B 201) |
| 20-40-12-400-802 | ESDS Handling for Metal Encased Unit Installation (P/B 201) |
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |
| 25-21-45 P/B 401 | CEILING PANEL - REMOVAL/INSTALLATION |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 101 | Light assembly | 33-22-51-13-075 | PTF ALL |
| | | 33-22-51-13-080 | PTF ALL |
| | | 33-22-51-13-085 | PTF ALL |
| | | 33-22-51-13-090 | PTF ALL |
| | | 33-22-51-13-095 | PTF ALL |
| | | 33-22-51-13-100 | PTF ALL |
| | | 33-22-51-13-105 | PTF ALL |
| | | 33-22-52-04-100 | PTF ALL |
| | | 33-22-52-04-105 | PTF ALL |


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 101 (cont.) | | 33-22-52-04-110 | PTF ALL |

**C. Location Zones**

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

**D. Access Panels**

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**E. Ceiling LED Light Assembly Replacement**

SUBTASK 33-22-00-860-014

(1) Do these steps at the applicable attendant control panel:

(a) Make sure that the attendant control panel display is activated.

(b) To activate it, touch the opposite corners of the display sequentially within two seconds.

(c) If it is necessary, input the password to get access to the attendant control panel.

(d) On the attendant control panel display, touch the Lighting tab.

(e) Below the passenger seating area, touch the OFF button.

SUBTASK 33-22-00-010-008

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-22-00-860-015

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open these circuit breakers and install safety tags:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 7 | C01937 | CEILING LIGHT AFT-L |
| E | 8 | C01938 | CEILING LIGHT AFT-R |
| E | 9 | C00590 | CEILING LT-R |


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 10 | C00591 | CEILING LT-L |

SUBTASK 33-22-00-010-003

(4) Do these steps to get access to the light assembly [101]:

(a) If it is necessary to remove the valance [107], do these steps:

1) Open the applicable stowage bin doors for access to the screws [108] below the light assembly [101].

2) Remove the screws [108].

3) Remove the valance [107].

NOTE: Some valances have the valance aisle light installed.

(b) If it is necessary, remove the applicable ceiling panel (PAGEBLOCK 25-21-45/401).

SUBTASK 33-22-00-040-001

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(5) Before you touch the light assembly [101], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-000-802).

SUBTASK 33-22-00-020-001

(6) Do these steps to remove the light assembly [101]:

NOTE: The light assembly consists of the bin-light and wash-light. It is necessary to remove the bin-light and wash-light together as an assembly only. It is not recommended to remove only the bin-light or only the wash-light. The bin-light and wash-light are the one assembly and is sold and certified as one part.

(a) Remove the screws [102] to the cable covers [103].

(b) Disconnect the electrical connectors [104].

(c) Disconnect the bin-light data connectors [105].

(d) Disconnect the wash-light data connectors [109].

(e) Remove the screws [106].

(f) Remove the light assembly [101].

SUBTASK 33-22-00-040-002

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(7) Before you touch the light assembly [101], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-400-802).

SUBTASK 33-22-00-420-001

(8) Do these steps to install the light assembly [101]:

(a) Place the light assembly [101] in position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Connect the electrical connectors [104].

(c) Install and tighten the screws [106].

(d) Install the cable covers [103] with the screws [102].

1) Tighten the screws [102].

(e) Connect the bin-light data connectors [105].

(f) Connect the wash-light data connectors [109].

SUBTASK 33-22-00-410-003

(9) If it is necessary, do these steps to install the valance [107]:

(a) Place the valance [107].

(b) Install and tighten the screws [108].

SUBTASK 33-22-00-410-004

(10) If it is necessary, install the applicable ceiling panel (PAGEBLOCK 25-21-45/401).

SUBTASK 33-22-00-860-016

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(11) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 7 | C01937 | CEILING LIGHT AFT-L |
| E | 8 | C01938 | CEILING LIGHT AFT-R |
| E | 9 | C00590 | CEILING LT-R |
| E | 10 | C00591 | CEILING LT-L |

SUBTASK 33-22-00-410-008

(12) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-22-00-860-039

(13) Load the software to the new light assembly, do this task: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

SUBTASK 33-22-00-710-001

(14) Do a test of the new light assembly.

(a) Make sure that the Attendant Control Panel (ACP) display is activated.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) To activate it, touch the opposite corners of the ACP display sequentially within two seconds.

(b) If it is necessary, input the password to get access to the ACP.

(c) Make sure that the CAB/UTIL switch, on the P5-13 panel, is set to the ON position.

(d) On the ACP display, touch the Lighting tab.

(e) Below the Passenger Seating Area, touch the White Bright button.

1) Make sure that the light comes on brightly.

(f) Touch the White Medium button.

1) Make sure that the light becomes medium.

(g) Touch the Boarding/Deplane button.

1) Make sure that the light color in the passenger compartment is equivalent to the light type shown below the General Lighting Layout on the ACP display.

NOTE: The light can take at least 15 seconds to change.

(h) Touch the OFF button.


1) Make sure that the light goes off.

(i) If it is not necessary, set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

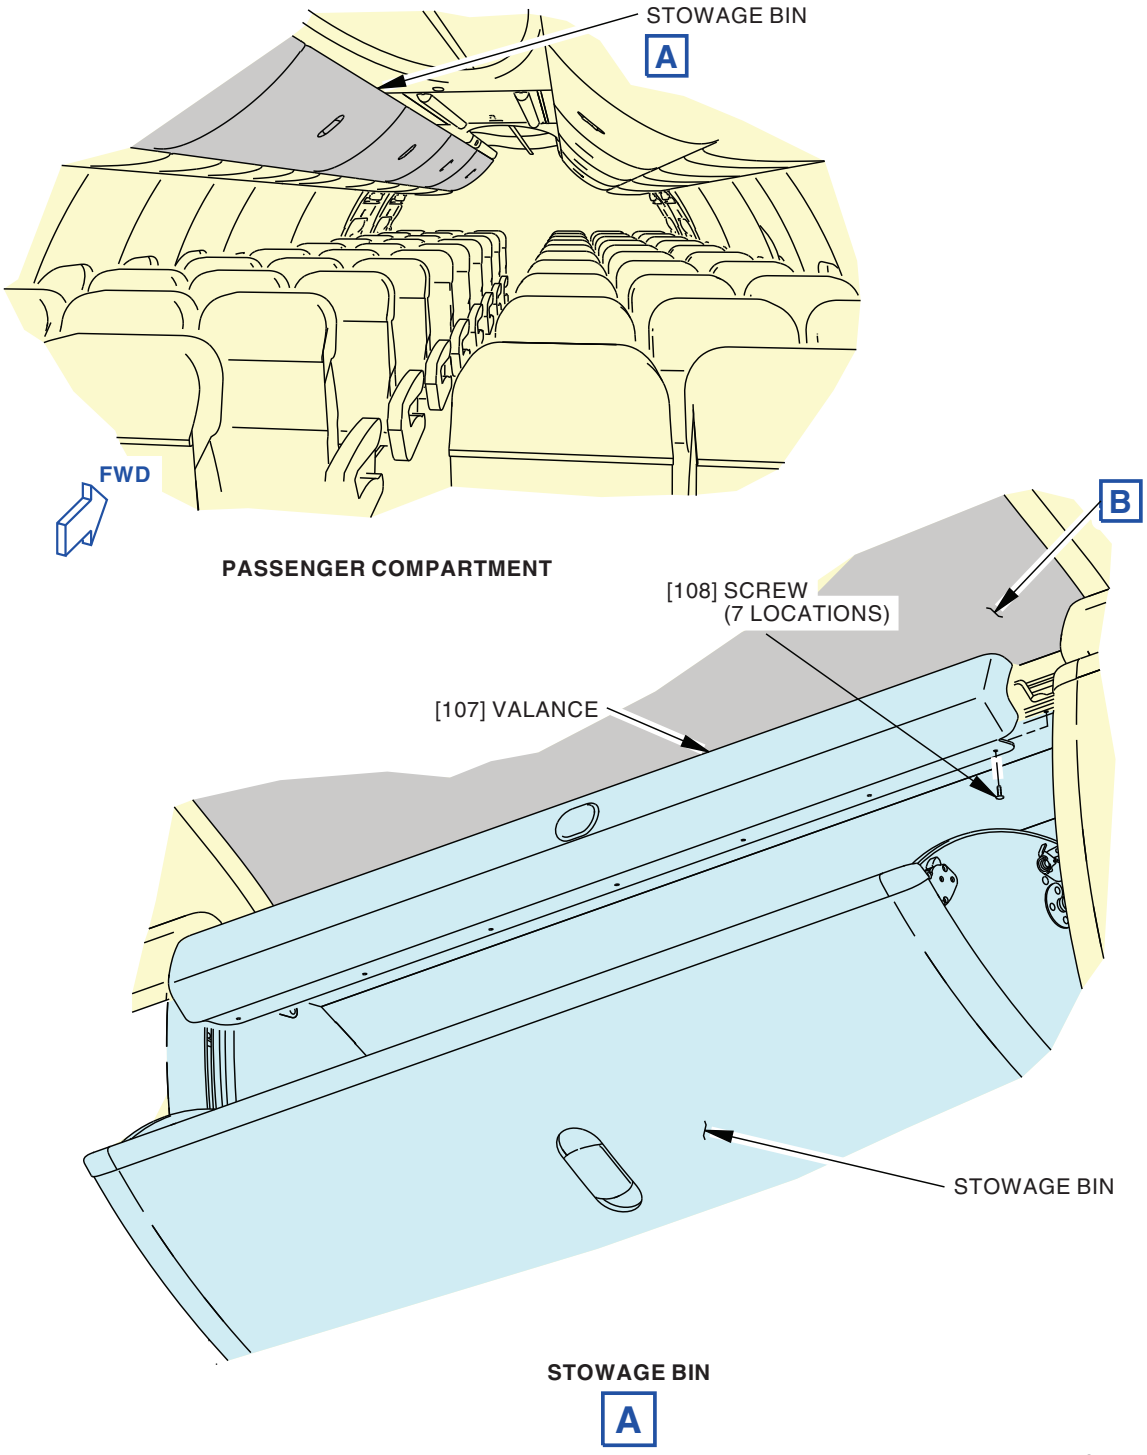


**Ceiling Light, Bin/Wash - LED Light Assembly Replacement**
**Figure 203/33-22-00-990-803 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

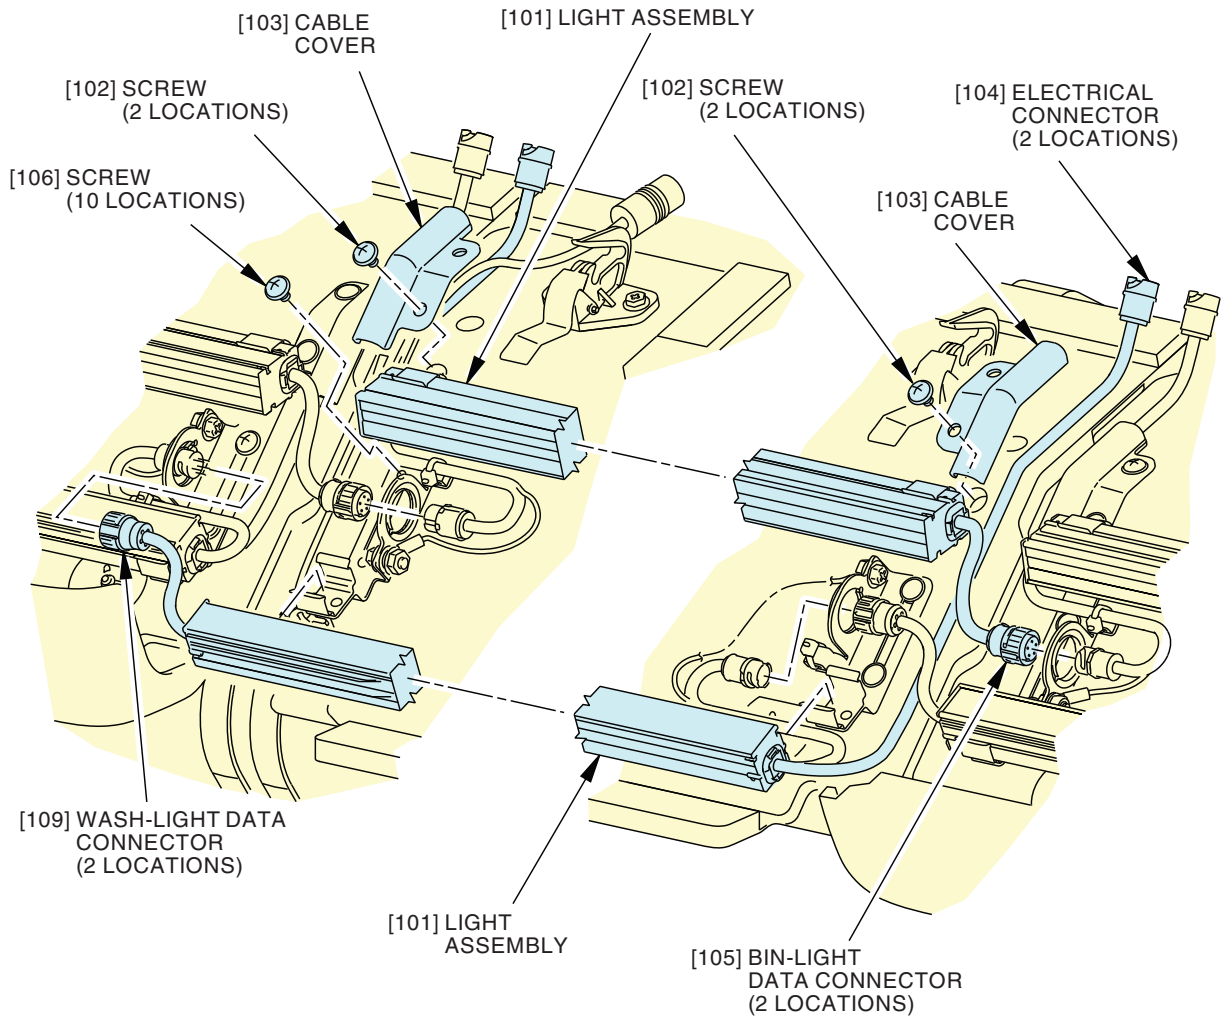


**(EXAMPLE)**

B

2414599 S00061535562_V1

**Ceiling Light, Bin/Wash - LED Light Assembly Replacement**
**Figure 203/33-22-00-990-803 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-22-00-960-802**

## 7. Ceiling Light, Direct - LED Light Assembly Replacement

(Figure 204)

### A. References

| Reference | Title |
|---|---|
| 20-40-12-000-802 | ESDS Handling for Metal Encased Unit Removal (P/B 201) |
| 20-40-12-400-802 | ESDS Handling for Metal Encased Unit Installation (P/B 201) |
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |
| SWPM 20-10-12 | WIRE HARNESS SUPPORTS |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 121 | Light assembly | 33-22-00-01-015 | PTF ALL |
| | | 33-22-00-01-050 | PTF ALL |
| | | 33-22-00-15-200 | PTF ALL |
| | | 33-22-00-15-235 | PTF ALL |
| | | 33-22-51-10-150 | PTF ALL |
| 126 | Strap | 25-21-71-10-067 | PTF ALL |
| | | 33-22-00-01-007 | PTF ALL |
| | | 33-22-00-15-300 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### E. Ceiling LED Light Assembly Replacement

**SUBTASK 33-22-00-860-021**

(1) Do these steps at the applicable attendant control panel:

(a) Make sure that the attendant control panel display is activated.

(b) To activate it, touch the opposite corners of the display sequentially within two seconds.

(c) If it is necessary, input the password to get access to the attendant control panel.

(d) On the attendant control panel display, touch the Lighting tab.

(e) Below the passenger seating area, touch the OFF button.

**SUBTASK 33-22-00-010-007**

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-860-022

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-22-00-010-004

(4) Open the applicable access panel to get to the direct ceiling light assembly [121].

SUBTASK 33-22-00-040-003

**CAUTION**

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(5) Before the light assembly [121] is touched, do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

SUBTASK 33-22-00-020-002

(6) Do these steps to remove the direct ceiling light assembly [121]:

(a) Remove the lens [123].

(b) Disconnect the electrical connectors [124].

(c) Remove the straps [126] to release the light assembly wires from the clamps [125] (SWPM 20-10-12).

1) Discard the straps [126].

(d) Remove the screws [122].

(e) Remove the direct ceiling light assembly [121].

SUBTASK 33-22-00-040-004

**CAUTION**

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(7) Before the light assembly [121] is touched, do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-420-002

(8) Do these steps to install the direct ceiling light assembly [121]:

(a) Detach the lens [123] from the direct ceiling light assembly [121].

(b) Put the direct ceiling light assembly [121] in position.

(c) Install the direct ceiling light assembly [121] with the screws [122].

1) Tighten the screw [122].

(d) Connect the electrical connectors [124].

(e) Attach the light assembly wires as follows (SWPM 20-10-12):

1) Put the light assembly wires in the clamps [125].

2) Install the new straps [126] to hold the clamps [125] ears together.

(f) Attach the lens [123] to the direct ceiling light assembly [121].

SUBTASK 33-22-00-410-005

(9) Close the applicable access panel.

SUBTASK 33-22-00-860-023

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(10) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-22-00-410-007

(11) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-22-00-860-024

(12) Load the software to the new light assembly, do this task: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

SUBTASK 33-22-00-860-040

(13) Do a test of the new light assembly.

(a) Make sure that the Attendant Control Panel (ACP) display is activated.

1) To activate it, touch the opposite corners of the ACP display sequentially within two seconds.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) If it is necessary, input the password to get access to the ACP.

(c) Make sure that the CAB/UTIL switch, on the P5-13 panel, is set to the ON position.

(d) On the ACP display, touch the Lighting tab.

(e) Below the Passenger Seating Area, touch the White Bright button.

1) Make sure that the light comes on brightly.

(f) Touch the White Medium button.

1) Make sure that the light becomes medium.

(g) Touch the Boarding/Deplane button.

1) Make sure that the light color in the passenger compartment is equivalent to the light type shown below the General Lighting Layout on the ACP display.

NOTE: The light can take at least 15 seconds to change.

(h) Touch the OFF button.


1) Make sure that the light goes off.

(i) If it is not necessary, set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

**END OF TASK**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

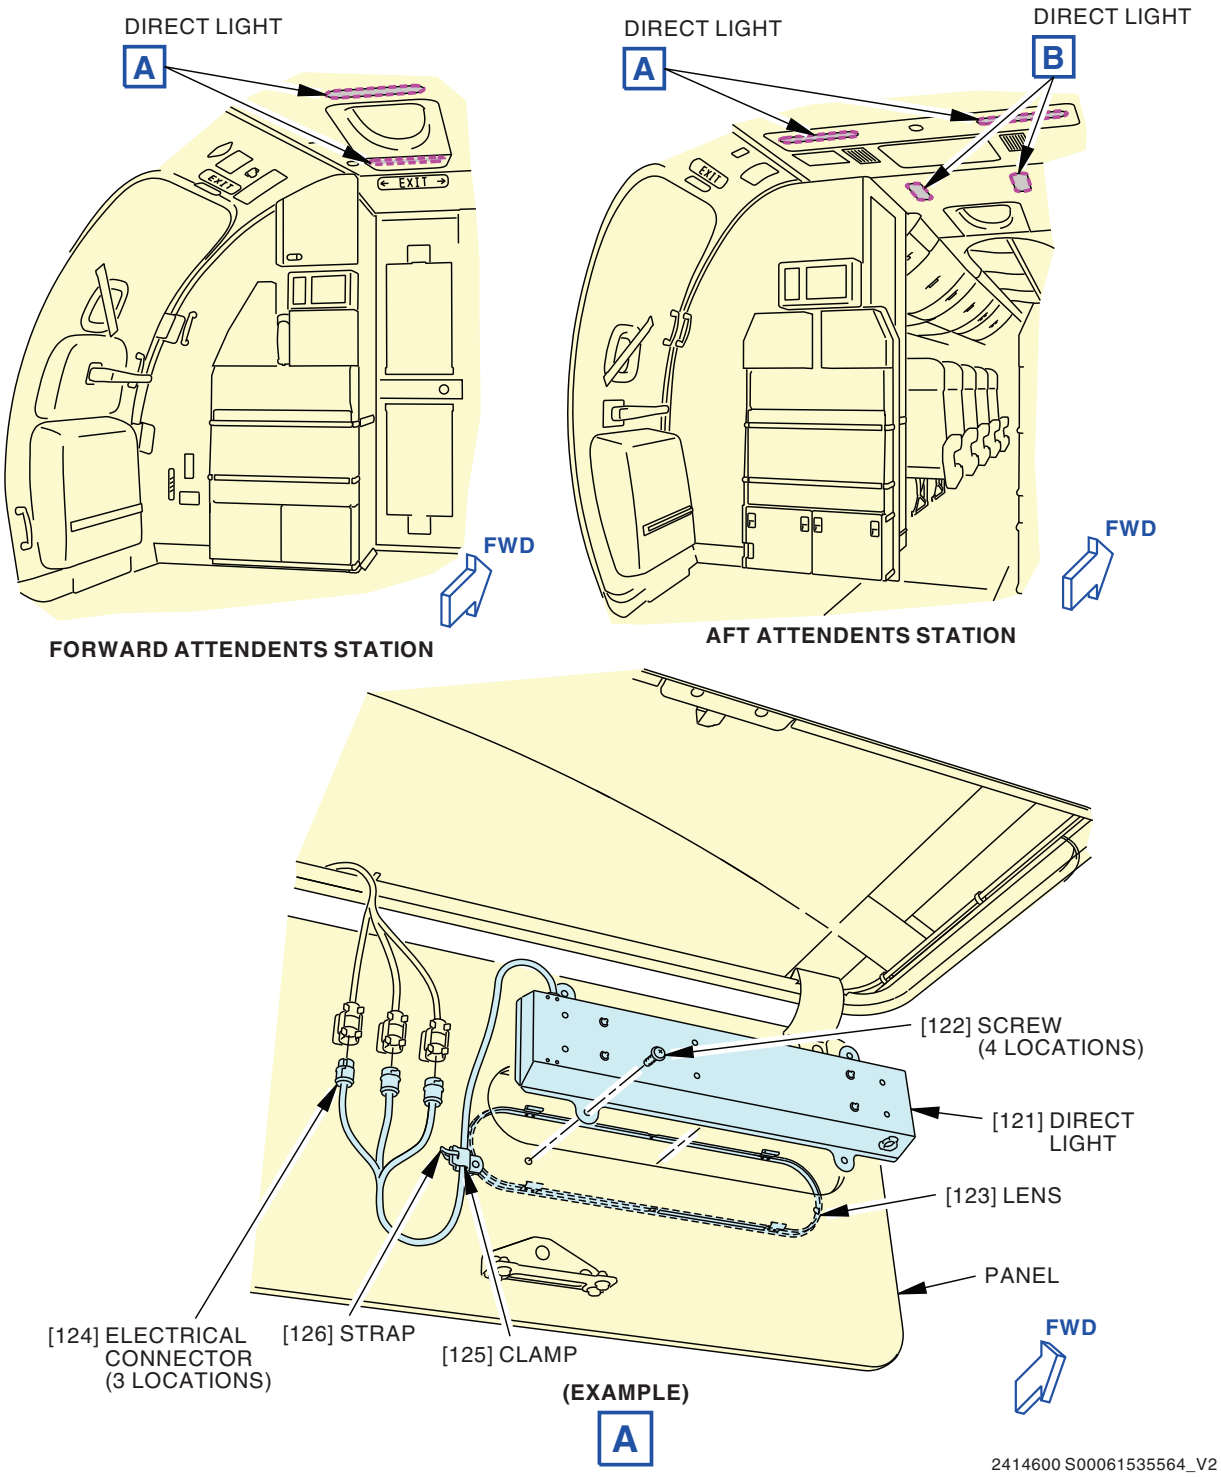


**Ceiling Light, Direct - LED Light Assembly Replacement**
**Figure 204/33-22-00-990-804 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

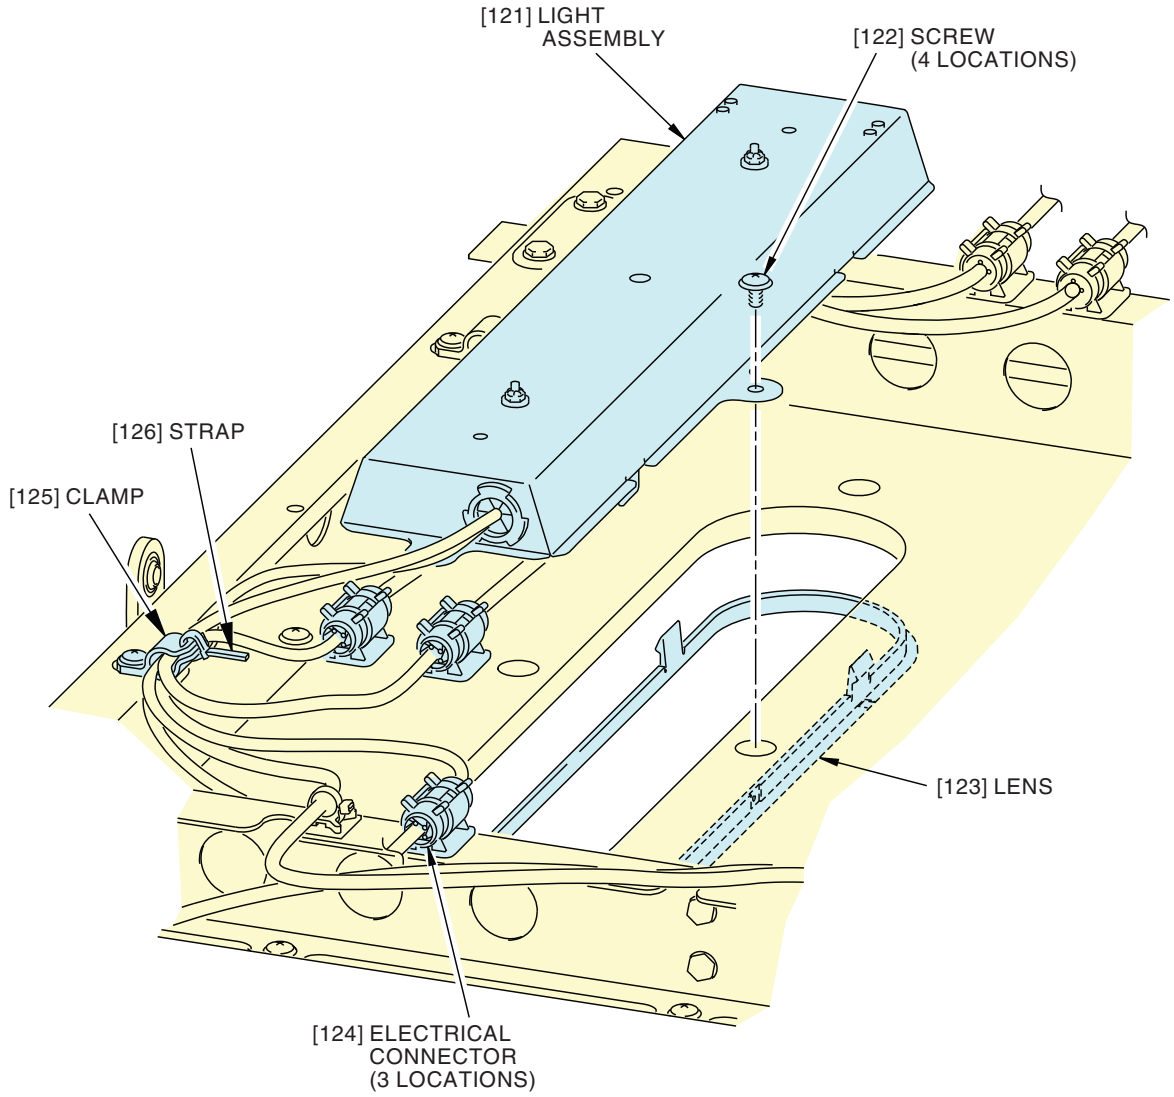


**DIRECT LIGHT ASSEMBLY (EXAMPLE)**

B

2414601 S00061535565_V2

**Ceiling Light, Direct - LED Light Assembly Replacement**
**Figure 204/33-22-00-990-804 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-22-00-960-803**

## 8. Ceiling Light, Cove - LED Light Assembly Replacement

(Figure 205)

### A. References

| Reference | Title |
|---|---|
| 20-40-12-000-802 | ESDS Handling for Metal Encased Unit Removal (P/B 201) |
| 20-40-12-400-802 | ESDS Handling for Metal Encased Unit Installation (P/B 201) |
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 143 | Light assembly | 33-22-00-03M-057 | PTF ALL |
| | | 33-22-00-03M-060 | PTF ALL |
| | | 33-22-00-03M-122 | PTF ALL |
| | | 33-22-00-03M-125 | PTF ALL |
| | | 33-22-00-15-025 | PTF ALL |
| | | 33-22-00-15-027 | PTF ALL |
| | | 33-22-00-15-090 | PTF ALL |
| | | 33-22-00-15-092 | PTF ALL |
| | | 33-22-51-10-030 | PTF ALL |
| | | 33-22-51-10-090 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### E. Ceiling LED Light Assembly Replacement

**SUBTASK 33-22-00-860-027**

(1) Do these steps at the applicable attendant control panel:

(a) Make sure that the attendant control panel display is activated.

(b) To activate it, touch the opposite corners of the display sequentially within two seconds.

(c) If it is necessary, input the password to get access to the attendant control panel.

(d) On the attendant control panel display, touch the Lighting tab.

(e) Below the passenger seating area, touch the OFF button.

**SUBTASK 33-22-00-010-009**

(2) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-860-028

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-22-00-010-005

(4) Do these steps to get access to the ceiling cove light assembly [143]:

(a) Open the applicable access panel to get to the cove light cover [141].

(b) Remove the screws [142].

(c) Remove the cove light cover [141].

SUBTASK 33-22-00-040-005

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(5) Before you touch the light assembly [143], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-000-802).

SUBTASK 33-22-00-020-003

(6) Do these steps to remove the ceiling cove light assembly [143]:

NOTE: There are two ceiling cove light assemblies under the cove light cover. Each ceiling cove light assembly contains two LED light strips. Both LED light strips need to be removed at the same time.

(a) Disconnect the electrical connecctors [144].

(b) Remove the screws [145].

(c) Remove the ceiling cove light assembly [143].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-22-00-040-006

**CAUTION**

DO NOT TOUCH THE UNIT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE UNIT.

(7) Before you touch the light assembly [143], do the procedure for devices that are sensitive to electrostatic discharge (TASK 20-40-12-400-802).

SUBTASK 33-22-00-420-003

(8) Do these steps to install the ceiling cove light assembly [143]:

(a) Place the ceiling cove light assembly [143] in its location on the panel.

(b) Install the screws [145].

(c) Tighten the screws [145].

(d) Connect the electrical connecctors [144].

(e) Install the cove light cover [141] with the screws [142].

1) Tighten the screws [142].

(f) Close the access panel.

SUBTASK 33-22-00-860-029

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(9) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-22-00-410-009

(10) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-22-00-860-030

(11) Load the software to the new light assembly, do this task: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

SUBTASK 33-22-00-710-003

(12) Do a test of the new light assembly.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the Attendant Control Panel (ACP) display is activated.

1) To activate it, touch the opposite corners of the ACP display sequentially within two seconds.

(b) If it is necessary, input the password to get access to the ACP.

(c) Make sure that the CAB/UTIL switch, on the P5-13 panel, is set to the ON position.

(d) On the ACP display, touch the Lighting tab.

(e) Below the Passenger Seating Area, touch the White Bright button.

1) Make sure that the light comes on brightly.

(f) Touch the White Medium button.

1) Make sure that the light becomes medium.

(g) Touch the Boarding/Deplane button.

1) Make sure that the light color in the passenger compartment is equivalent to the light type shown below the General Lighting Layout on the ACP display.

NOTE: The light can take at least 15 seconds to change.

(h) Touch the OFF button.


1) Make sure that the light goes off.

(i) If it is not necessary, set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

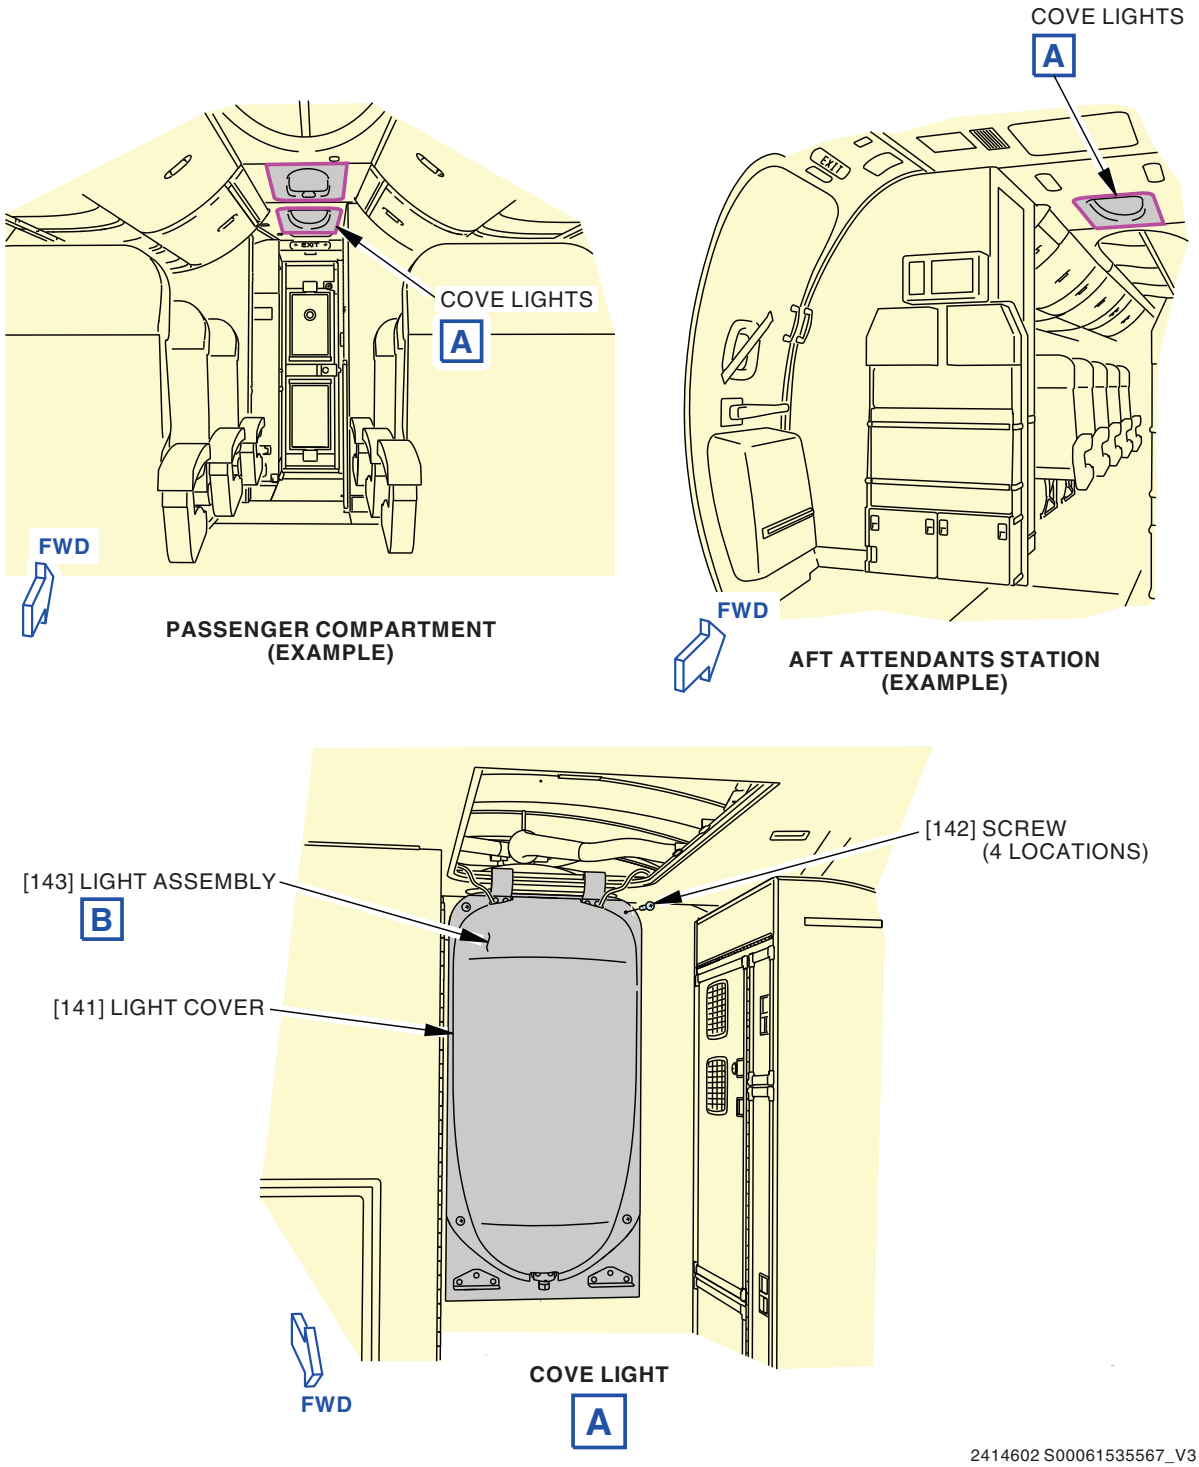


**Ceiling Light, Cove - LED Light Assembly Replacement**
**Figure 205/33-22-00-990-805 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

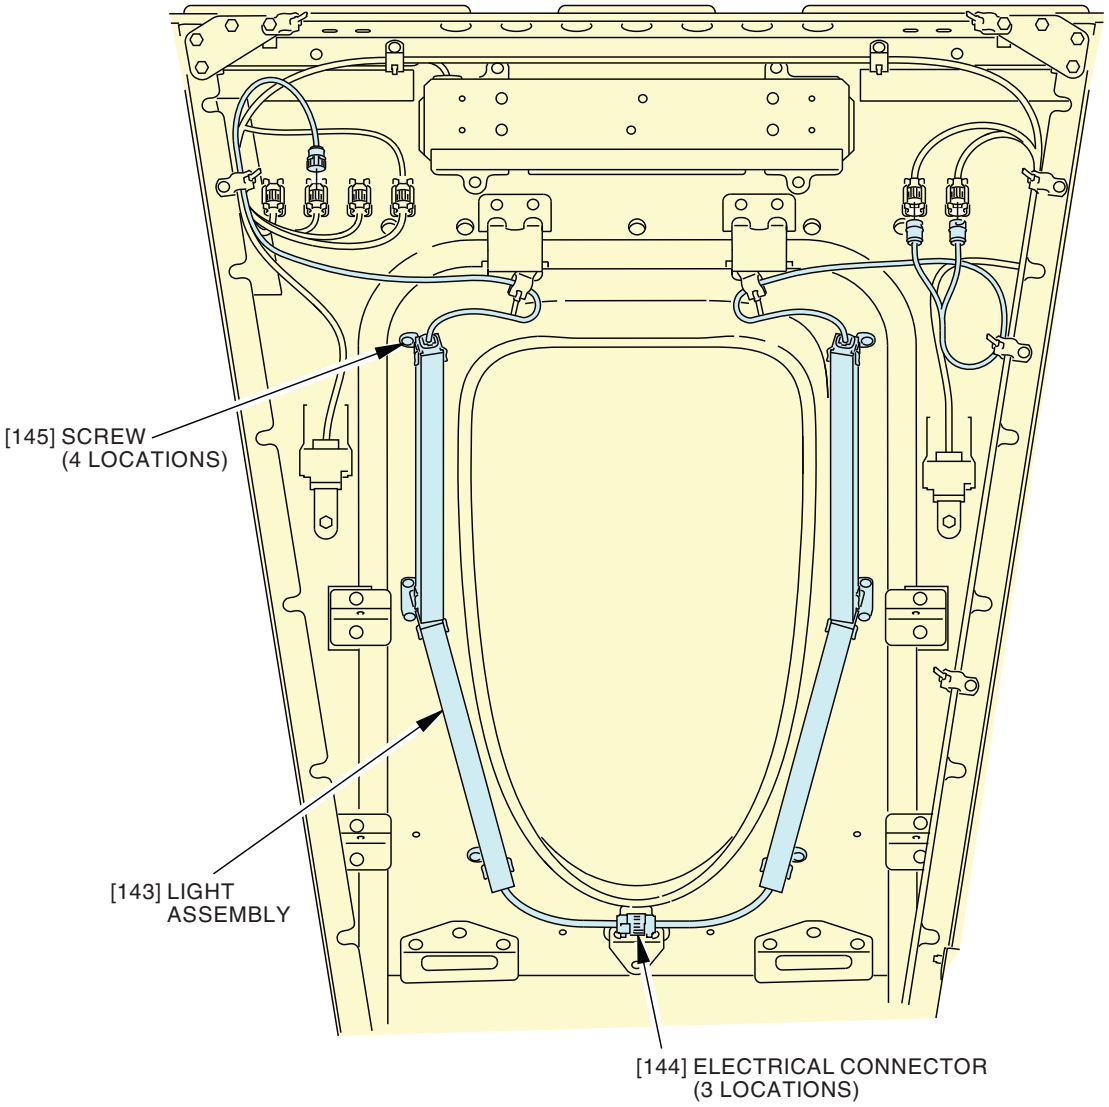


**LIGHT ASSEMBLY**
**(VIEW IN THE AFT DIRECTION)**

**B**

2414603 S00061535568_V1

**Ceiling Light, Cove - LED Light Assembly Replacement**
**Figure 205/33-22-00-990-805 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CEILING LIGHTS - INSPECTION/CHECK

### 1. General

A. This procedure has this task:

(1) BSI LED Light - Inspection/Check

**TASK 33-22-00-200-801**

### 2. BSI LED Light - Inspection/Check

(Figure 601)

#### A. General

(1) This procedure does a visual inspection of the ceiling Light Emitting Diode (LED) lights.

(2) A maximum of 20% of the ceiling LED lights can be not serviceable if the lights opposite and adjacent to them are serviceable.

(3) The LED direct lights and cove lights at the ends of the passenger cabin are not counted as ceiling lights. These lights are not critical for the charge of the photoluminescent strips.

#### B. References

| Reference | Title |
|---|---|
| 33-22-00-960-801 | Ceiling Light, Bin/Wash - LED Light Assembly Replacement (P/B 201) |

#### C. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

#### D. Prepare for the Inspection

**SUBTASK 33-22-00-440-001**

(1) Make sure that the CAB/UTIL switch at the P5–13 panel is set to the ON position.

#### E. BSI LED Lights - Inspection/Check

**SUBTASK 33-22-00-200-001**

(1) Do a visual examination of the ceiling lights.

(a) Make sure that the attendant control panel display is activated.

1) To activate it, touch the opposite corners of the display sequentially within two seconds.

(b) On the attendant control panel display, touch the Lighting tab.

(c) Below the Passenger Seating Area, touch the White Bright button.

(d) Make sure that the ceiling lights, bullnose ceiling lights, wash only ceiling lights, and the Center Overhead Stowage (COS) lights (if installed) are on.

NOTE: The LED direct lights and cove lights at the ends of the passenger cabin are not part of this inspection.

1) The long light assemblies in Table 601 are considered serviceable if:

a) Less than 16 inches of the assembly is not serviceable.

b) A cross-bin element assembly with one section set to off can have one more section not serviceable of less than 16 inches.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**Table 601/33-22-00-993-801 Ceiling Light Assemblies And Minimum Assembly Lengths**

| Light Assembly | Element Assembly | Minimum Assembly Length |
|---|---|---|
| COS Light Assembly | COS Element Assembly | 40 in. (1016 mm) |
| Wash-only Ceiling Light Assembly | Wash Element Assembly | 40 in. (1016 mm) |
| Ceiling Light Assembly | Wash Element Assembly | 40 in. (1016 mm) |
| | Cross-bin Element Assembly | 40 in. (1016 mm) |
| Bullnose Ceiling Light Assembly | Wash Element Assembly | 40 in. (1016 mm) |
| | Cross-bin Element Assembly | 55 in. (1397 mm) |

2) If necessary, replace the unserviceable light assembly. Do this task: Ceiling Light, Bin/Wash - LED Light Assembly Replacement, TASK 33-22-00-960-801.

### F. Put the Airplane Back to its Usual Condition


**SUBTASK 33-22-00-040-009**

(1) If the ceiling lighting is not necessary, set the CAB/UTIL switch at the P5–13 panel to the OFF position.

——— END OF TASK ———



ECCN 9E991 BOEING PROPRIETARY - See title page for details

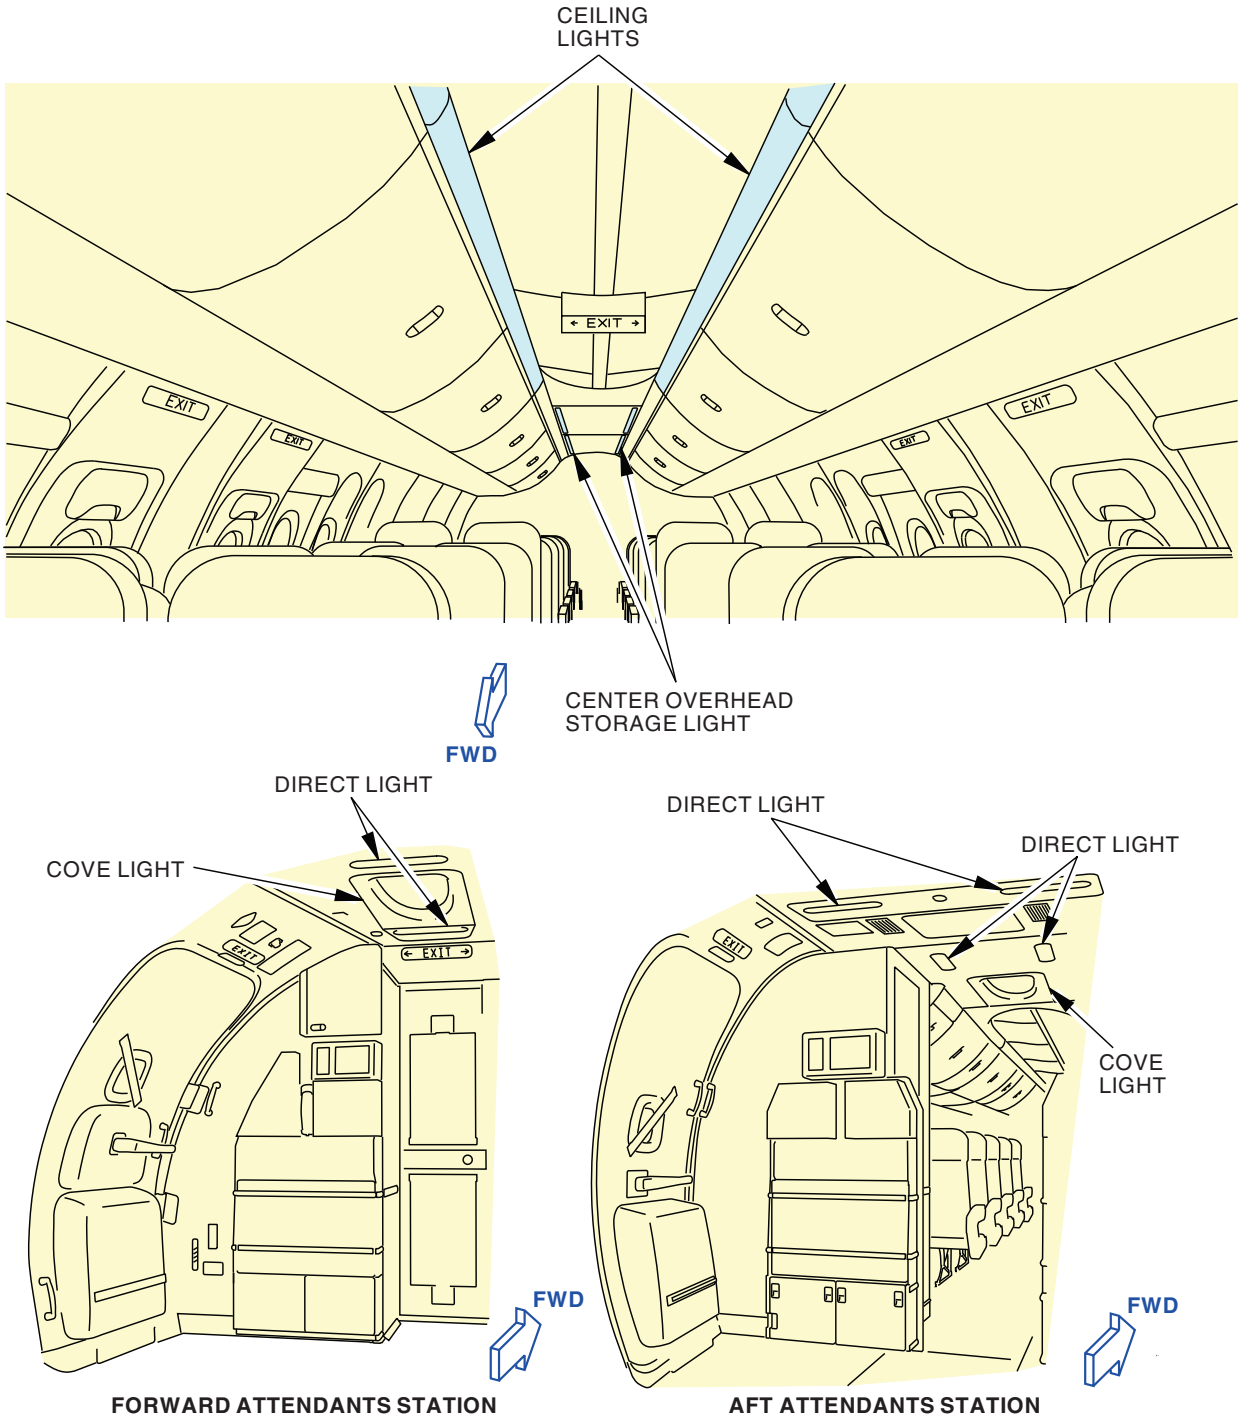


**BSI LED Lights - Ceiling Lights**
**Figure 601/33-22-00-990-808**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## READING LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Reading Lights Deactivation.

(2) Reading Lights Activation.

(3) Reading Light - Light Assembly Replacement.

(4) Reading Light - Adjustment.

**TASK 33-23-00-040-801**

### 2. Reading Lights - Deactivation

(Figure 201)

**A. General**

(1) This procedure removes electrical power to the reading lights.

**B. Location Zones**

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

**C. Access Panels**

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**D. Reading Lights Deactivation**

**SUBTASK 33-23-00-010-001**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-23-00-860-001**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open these circuit breakers and install safety tags:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00087 | PASS READING LIGHTS LEFT |
| B | 2 | C00088 | PASS READING LIGHTS-LEFT |
| B | 3 | C00089 | PASS READING LIGHTS-LEFT |
| B | 4 | C00090 | PASS READING LIGHTS-LEFT |
| B | 5 | C00091 | PASS READING LIGHTS-LEFT |
| B | 6 | C00092 | PASS READING LIGHTS-LEFT |
| B | 7 | C00773 | PASS READING LIGHTS-LEFT |
| B | 8 | C01152 | PASS READING LIGHTS-LEFT |
| B | 9 | C01153 | PASS READING LIGHTS-LEFT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00094 | PASS READING LIGHTS-RIGHT STA 340-464 |
| B | 2 | C00095 | PASS READING LIGHTS-RIGHT |
| B | 3 | C00096 | PASS READING LIGHTS-RIGHT |
| B | 4 | C00097 | PASS READING LIGHTS-RIGHT |
| B | 5 | C00098 | PASS READING LIGHTS-RIGHT |
| B | 6 | C00099 | PASS READING LIGHTS-RIGHT |
| B | 7 | C00774 | PASS READING LIGHTS-RIGHT |
| B | 8 | C01437 | PASS READING LIGHTS-RIGHT |
| B | 9 | C01438 | PASS READING LIGHTS-RIGHT |

**SUBTASK 33-23-00-410-003**

(3) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

## E. Reading Lights - Tryout

NOTE: This tryout is to make sure that the Reading Lights are in a zero energy state.

**SUBTASK 33-23-00-700-001**

(1) Do these steps at a Passenger Service Unit (PSU):

(a) Set the switch for the reading light to the on mode.


1) Make sure that the reading light does not come on.

(b) Set the switch to the off mode.


**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

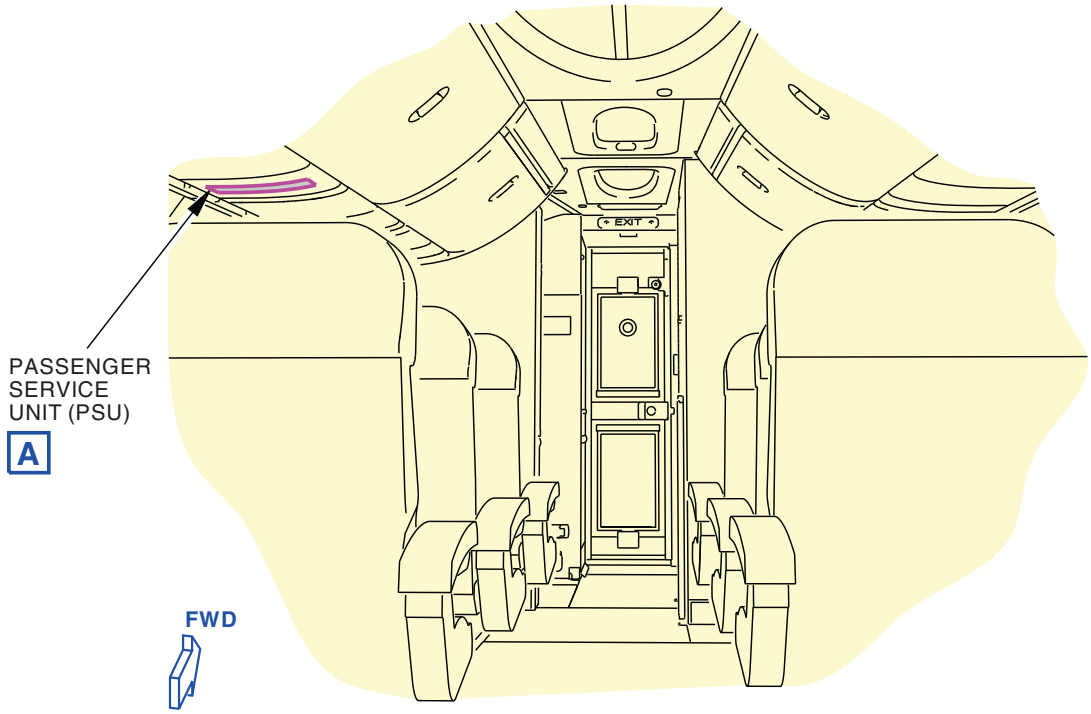


**PASSENGER COMPARTMENT**

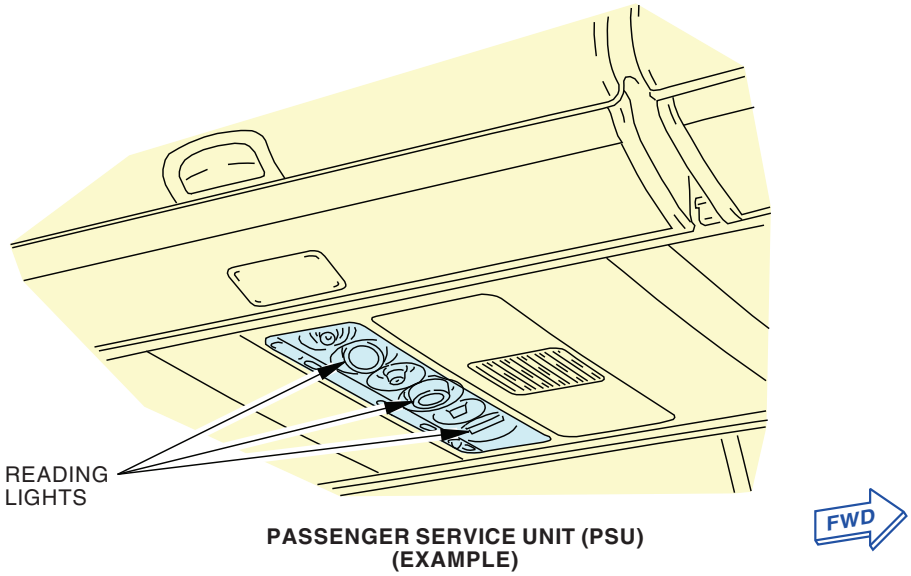


**PASSENGER SERVICE UNIT (PSU)
(EXAMPLE)**

**A**

2414605 S00061535575_V2

**Reading Lights
Figure 201/33-23-00-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-23-00-440-801**

## 3. Reading Lights - Activation

(Figure 201)

### A. General

(1) This procedure adds electrical power to the reading lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. Reading Lights Activation

**SUBTASK 33-23-00-010-003**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-23-00-860-002**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00087 | PASS READING LIGHTS LEFT |
| B | 2 | C00088 | PASS READING LIGHTS-LEFT |
| B | 3 | C00089 | PASS READING LIGHTS-LEFT |
| B | 4 | C00090 | PASS READING LIGHTS-LEFT |
| B | 5 | C00091 | PASS READING LIGHTS-LEFT |
| B | 6 | C00092 | PASS READING LIGHTS-LEFT |
| B | 7 | C00773 | PASS READING LIGHTS-LEFT |
| B | 8 | C01152 | PASS READING LIGHTS-LEFT |
| B | 9 | C01153 | PASS READING LIGHTS-LEFT |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00094 | PASS READING LIGHTS-RIGHT STA 340-464 |
| B | 2 | C00095 | PASS READING LIGHTS-RIGHT |
| B | 3 | C00096 | PASS READING LIGHTS-RIGHT |
| B | 4 | C00097 | PASS READING LIGHTS-RIGHT |
| B | 5 | C00098 | PASS READING LIGHTS-RIGHT |
| B | 6 | C00099 | PASS READING LIGHTS-RIGHT |
| B | 7 | C00774 | PASS READING LIGHTS-RIGHT |
| B | 8 | C01437 | PASS READING LIGHTS-RIGHT |
| B | 9 | C01438 | PASS READING LIGHTS-RIGHT |

SUBTASK 33-23-00-410-001

(3) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

——— END OF TASK ———

**TASK 33-23-00-960-801**

## 4. Reading Light - Light Assembly Replacement

(Figure 202)

### A. References

| Reference | Title |
|---|---|
| 25-23-61-000-801 | Passenger Service Unit - Removal (P/B 401) |
| 25-23-61-400-801 | Passenger Service Unit - Installation (P/B 401) |

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. Reading Light Assembly Replacement

SUBTASK 33-23-00-010-004

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |


ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-23-00-860-003

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open the applicable circuit breakers and install the safety tags:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00087 | PASS READING LIGHTS LEFT |
| B | 2 | C00088 | PASS READING LIGHTS-LEFT |
| B | 3 | C00089 | PASS READING LIGHTS-LEFT |
| B | 4 | C00090 | PASS READING LIGHTS-LEFT |
| B | 5 | C00091 | PASS READING LIGHTS-LEFT |
| B | 6 | C00092 | PASS READING LIGHTS-LEFT |
| B | 7 | C00773 | PASS READING LIGHTS-LEFT |
| B | 8 | C01152 | PASS READING LIGHTS-LEFT |
| B | 9 | C01153 | PASS READING LIGHTS-LEFT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00094 | PASS READING LIGHTS-RIGHT STA 340-464 |
| B | 2 | C00095 | PASS READING LIGHTS-RIGHT |
| B | 3 | C00096 | PASS READING LIGHTS-RIGHT |
| B | 4 | C00097 | PASS READING LIGHTS-RIGHT |
| B | 5 | C00098 | PASS READING LIGHTS-RIGHT |
| B | 6 | C00099 | PASS READING LIGHTS-RIGHT |
| B | 7 | C00774 | PASS READING LIGHTS-RIGHT |
| B | 8 | C01437 | PASS READING LIGHTS-RIGHT |
| B | 9 | C01438 | PASS READING LIGHTS-RIGHT |

SUBTASK 33-23-00-010-002

(3) For access to the top of the light assembly [23], lower the Passenger Service Unit (PSU) (TASK 25-23-61-000-801).

SUBTASK 33-23-00-960-001

(4) Do these steps to replace the light assembly [23].

(a) Disconnect the electrical connectors [21].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Remove the retaining ring [22].

NOTE: Push apart the ends of the retaining ring [22] to loosen it from the light assembly [23]. Prepare to catch the light assembly [23] when it falls from the panel.

(c) Replace the light assembly [23].

1) Put the light assembly [23] back in the panel.

2) Make sure that the notch on the light assembly [23] aligns with the notch on the panel.

NOTE: The notches can be seen from the top side of the panel.

(d) Install the retaining ring [22] around the light assembly [23].

NOTE: Use pliers to pull together the ends of the retaining ring [22]. The retaining ring [22] must be tight to hold the light assembly [23] in its position.

(e) Connect the electrical connectors [21].

**SUBTASK 33-23-00-410-002**

(5) Close the PSU (TASK 25-23-61-400-801).

**SUBTASK 33-23-00-860-005**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(6) Remove the safety tags and close the applicable circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00087 | PASS READING LIGHTS LEFT |
| B | 2 | C00088 | PASS READING LIGHTS-LEFT |
| B | 3 | C00089 | PASS READING LIGHTS-LEFT |
| B | 4 | C00090 | PASS READING LIGHTS-LEFT |
| B | 5 | C00091 | PASS READING LIGHTS-LEFT |
| B | 6 | C00092 | PASS READING LIGHTS-LEFT |
| B | 7 | C00773 | PASS READING LIGHTS-LEFT |
| B | 8 | C01152 | PASS READING LIGHTS-LEFT |
| B | 9 | C01153 | PASS READING LIGHTS-LEFT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00094 | PASS READING LIGHTS-RIGHT STA 340-464 |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 2 | C00095 | PASS READING LIGHTS-RIGHT |
| B | 3 | C00096 | PASS READING LIGHTS-RIGHT |
| B | 4 | C00097 | PASS READING LIGHTS-RIGHT |
| B | 5 | C00098 | PASS READING LIGHTS-RIGHT |
| B | 6 | C00099 | PASS READING LIGHTS-RIGHT |
| B | 7 | C00774 | PASS READING LIGHTS-RIGHT |
| B | 8 | C01437 | PASS READING LIGHTS-RIGHT |
| B | 9 | C01438 | PASS READING LIGHTS-RIGHT |

**SUBTASK 33-23-00-410-004**

(7) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-23-00-710-001**

(8) Do a test of the new light assembly [23].

(a) Set the switch for the reading light to the on mode.

1) Make sure that the light comes on.

2) Make sure that the reading light is adjusted to give the best lighting for a passenger to read a book.

NOTE: The best lighting for a passenger to read a book is at approximately the center of the forward edge of the seat.


(b) Set the switch to the off mode.

1) Make sure that the light goes off.


**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

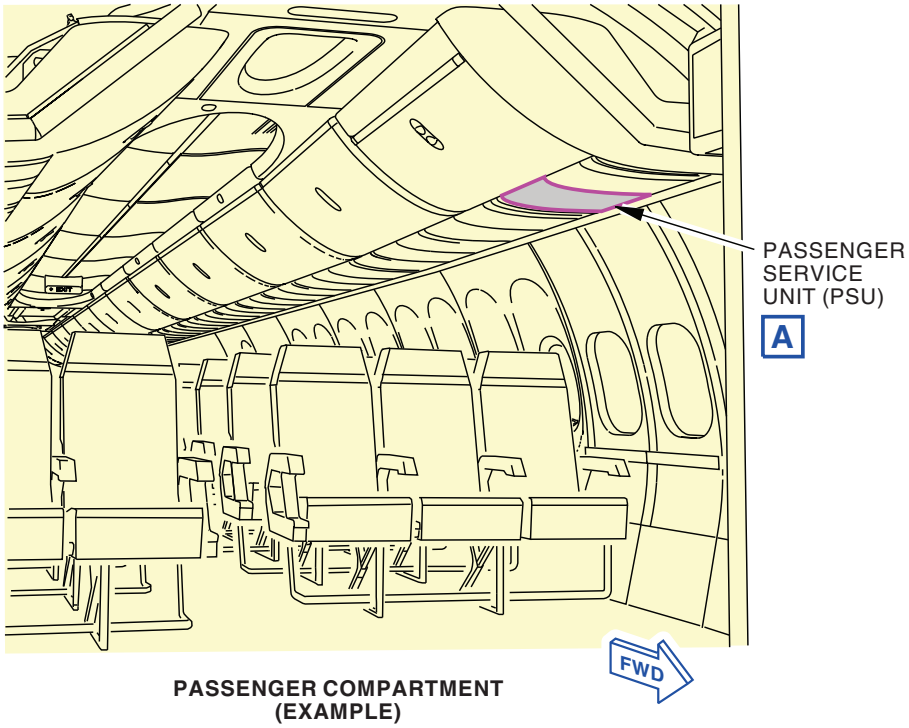


**PASSENGER COMPARTMENT
(EXAMPLE)**

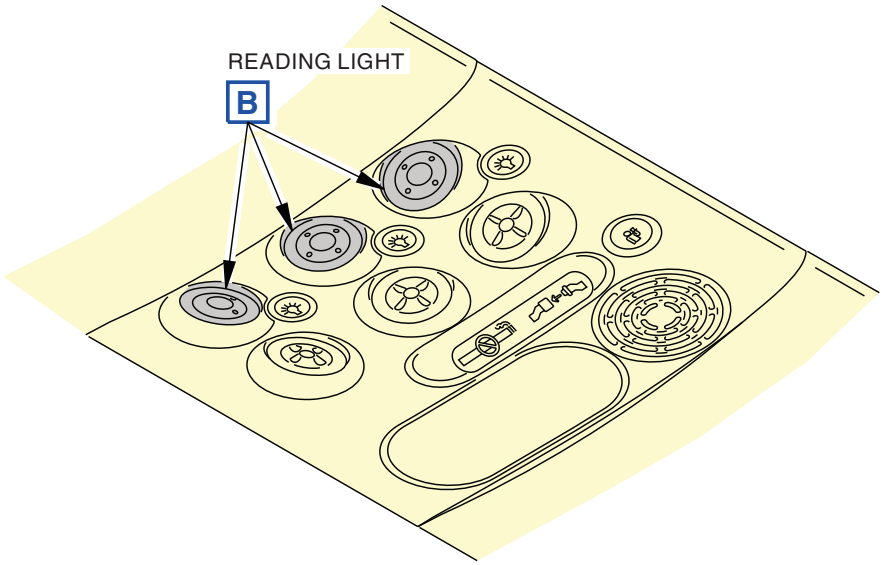


**PASSENGER SERVICE UNIT (PSU)
(EXAMPLE)**


**A**

2414606 S00061535578_V1

**Reading Light - Light Assembly Replacement
Figure 202/33-23-00-990-802 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

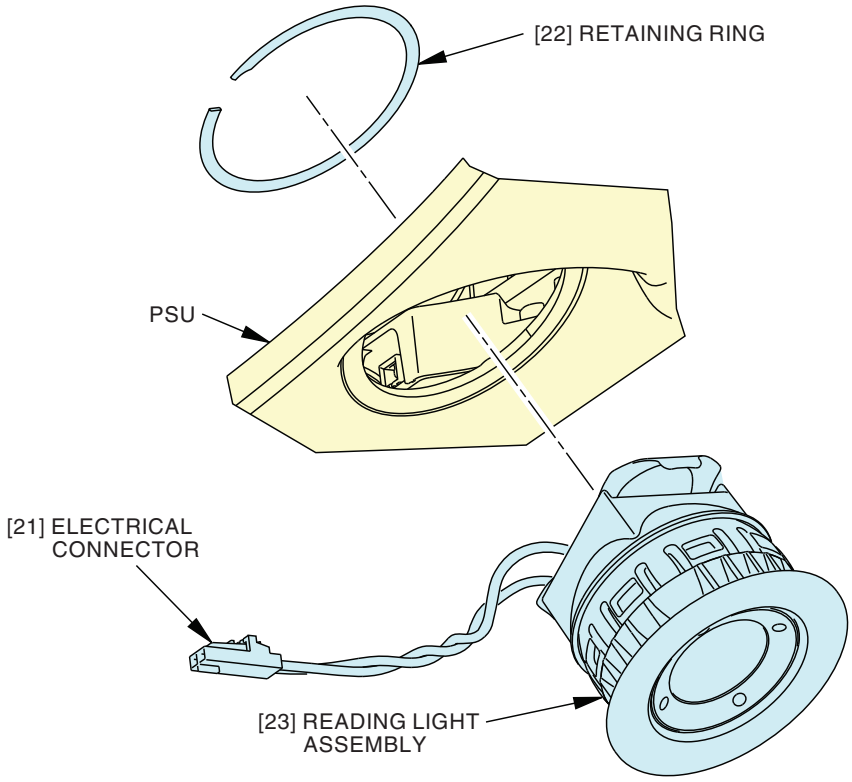


**READING LIGHT (EXAMPLE)**

**B**

2414607 S00061535579_V1

**Reading Light - Light Assembly Replacement**
**Figure 202/33-23-00-990-802 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-23-00-820-801**

## 5. Reading Light - Adjustment and Test

(Figure 203)

### A. General

(1) You can permit the passengers and attendants to adjust the direction of the light beam. You can also adjust and lock the reading light in its position. Passengers and attendants cannot change direction of the light beam while the reading light is locked.

### B. References

| Reference | Title |
|---|---|
| 25-23-61-000-801 | Passenger Service Unit - Removal (P/B 401) |
| 25-23-61-400-801 | Passenger Service Unit - Installation (P/B 401) |

### C. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### E. Reading Light Adjustment and Test

**SUBTASK 33-23-00-010-005**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-23-00-820-001**

(2) Adjusting the reading light.

(a) If the reading light is off, set its switch to the on position.

(b) Examine where the light beam is pointed.

NOTE: The correct adjustment of a reading light is in the direction that gives the best lighting for a person to read a book. This is at approximately the center of the forward edge of the seat.

(c) Remove electrical power from the light.

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

1) Open the applicable circuit breakers and install safety tags:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00087 | PASS READING LIGHTS LEFT |
| B | 2 | C00088 | PASS READING LIGHTS-LEFT |
| B | 3 | C00089 | PASS READING LIGHTS-LEFT |
| B | 4 | C00090 | PASS READING LIGHTS-LEFT |
| B | 5 | C00091 | PASS READING LIGHTS-LEFT |
| B | 6 | C00092 | PASS READING LIGHTS-LEFT |
| B | 7 | C00773 | PASS READING LIGHTS-LEFT |
| B | 8 | C01152 | PASS READING LIGHTS-LEFT |
| B | 9 | C01153 | PASS READING LIGHTS-LEFT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00094 | PASS READING LIGHTS-RIGHT STA 340-464 |
| B | 2 | C00095 | PASS READING LIGHTS-RIGHT |
| B | 3 | C00096 | PASS READING LIGHTS-RIGHT |
| B | 4 | C00097 | PASS READING LIGHTS-RIGHT |
| B | 5 | C00098 | PASS READING LIGHTS-RIGHT |
| B | 6 | C00099 | PASS READING LIGHTS-RIGHT |
| B | 7 | C00774 | PASS READING LIGHTS-RIGHT |
| B | 8 | C01437 | PASS READING LIGHTS-RIGHT |
| B | 9 | C01438 | PASS READING LIGHTS-RIGHT |

(d) Open the Passenger Service Unit (PSU) to get access to the rear of the reading light (TASK 25-23-61-000-801).

(e) Adjust the direction of the light beam:

1) Use the lever to release the reading light assembly.

2) Move the lens assembly until the reading light is in its correct position.

3) Use the lever to lock the reading light in its position.

(f) Close the PSU (TASK 25-23-61-400-801).

**SUBTASK 33-23-00-710-002**

(3) Do a test of the light beam adjustment.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(a) Remove the safety tags and close the applicable circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00087 | PASS READING LIGHTS LEFT |
| B | 2 | C00088 | PASS READING LIGHTS-LEFT |
| B | 3 | C00089 | PASS READING LIGHTS-LEFT |
| B | 4 | C00090 | PASS READING LIGHTS-LEFT |
| B | 5 | C00091 | PASS READING LIGHTS-LEFT |
| B | 6 | C00092 | PASS READING LIGHTS-LEFT |
| B | 7 | C00773 | PASS READING LIGHTS-LEFT |
| B | 8 | C01152 | PASS READING LIGHTS-LEFT |
| B | 9 | C01153 | PASS READING LIGHTS-LEFT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| B | 1 | C00094 | PASS READING LIGHTS-RIGHT STA 340-464 |
| B | 2 | C00095 | PASS READING LIGHTS-RIGHT |
| B | 3 | C00096 | PASS READING LIGHTS-RIGHT |
| B | 4 | C00097 | PASS READING LIGHTS-RIGHT |
| B | 5 | C00098 | PASS READING LIGHTS-RIGHT |
| B | 6 | C00099 | PASS READING LIGHTS-RIGHT |
| B | 7 | C00774 | PASS READING LIGHTS-RIGHT |
| B | 8 | C01437 | PASS READING LIGHTS-RIGHT |
| B | 9 | C01438 | PASS READING LIGHTS-RIGHT |

(b) Make sure that the reading light is adjusted to give the best lighting for a passenger to read a book.

NOTE: The best lighting for a passenger to read a book is at approximately the center of the forward edge of the seat.

(c) Set the switch to the usual position.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-23-00-410-005


(4) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

——— END OF TASK ———




ECCN 9E991 BOEING PROPRIETARY - See title page for details

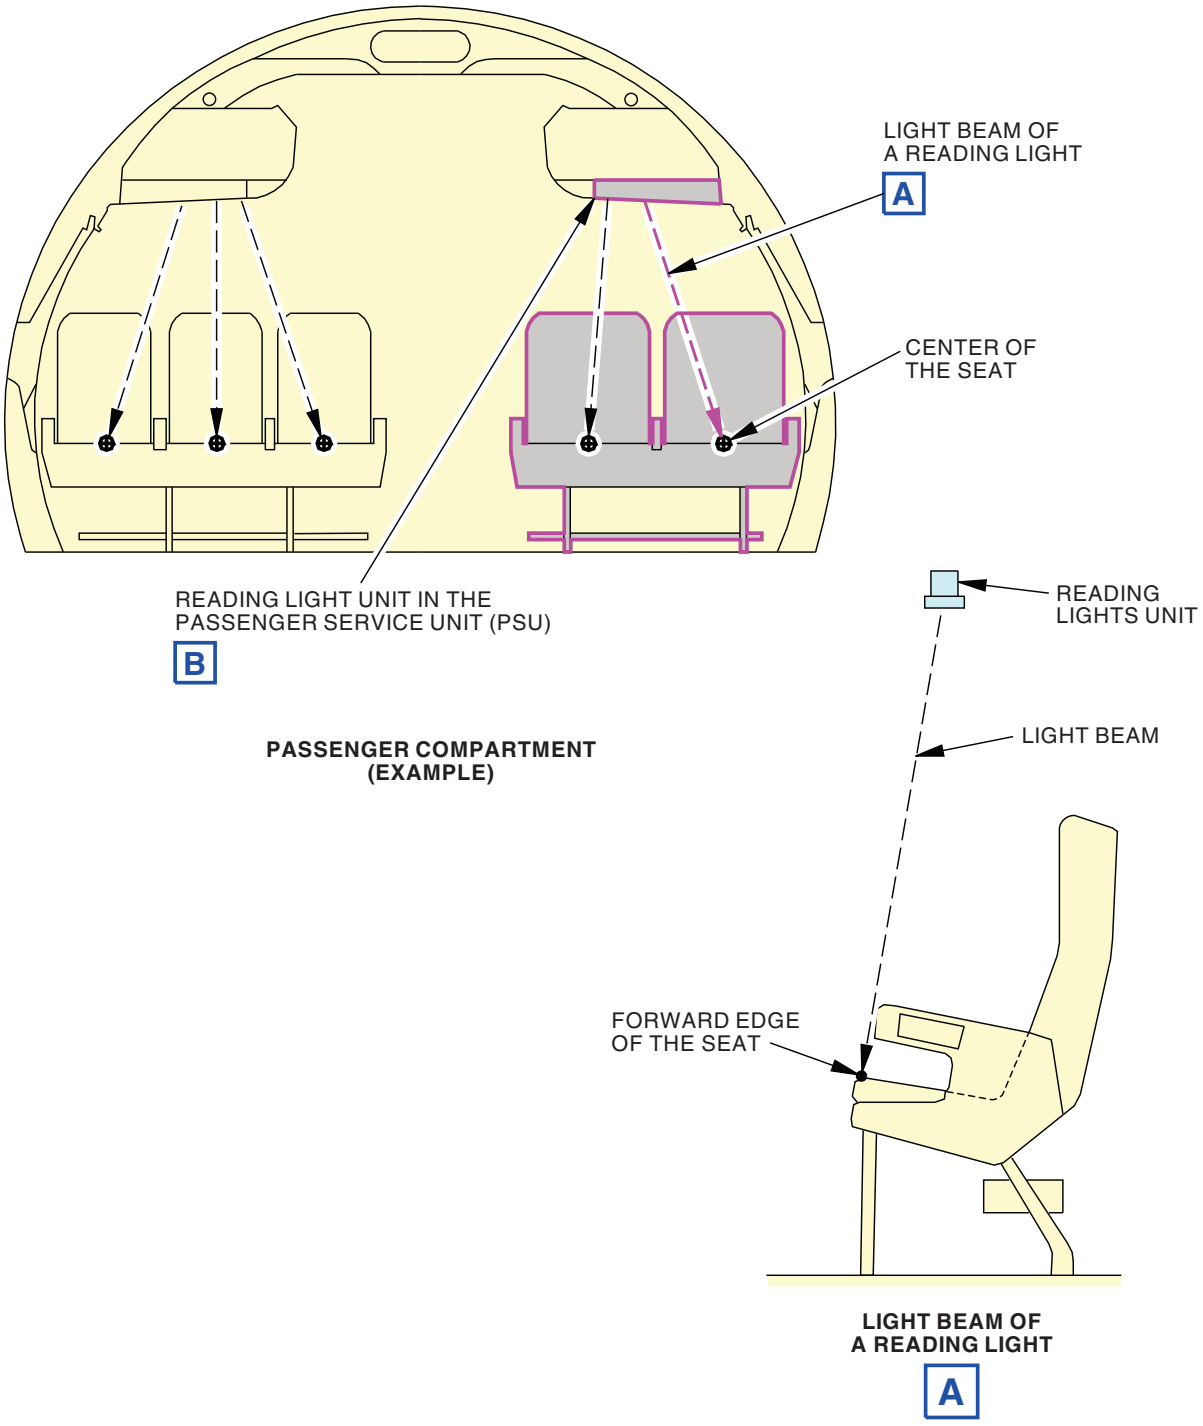


**Reading Lights - Light Beam Adjustment**
**Figure 203/33-23-00-990-803 (Sheet 1 of 2)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

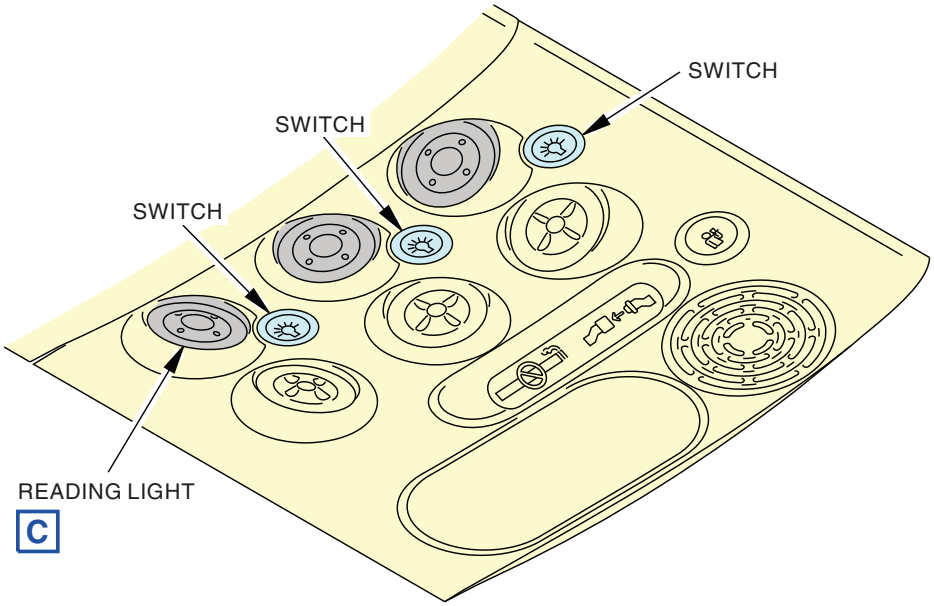


**READING LIGHTS UNIT (EXAMPLE)**

B

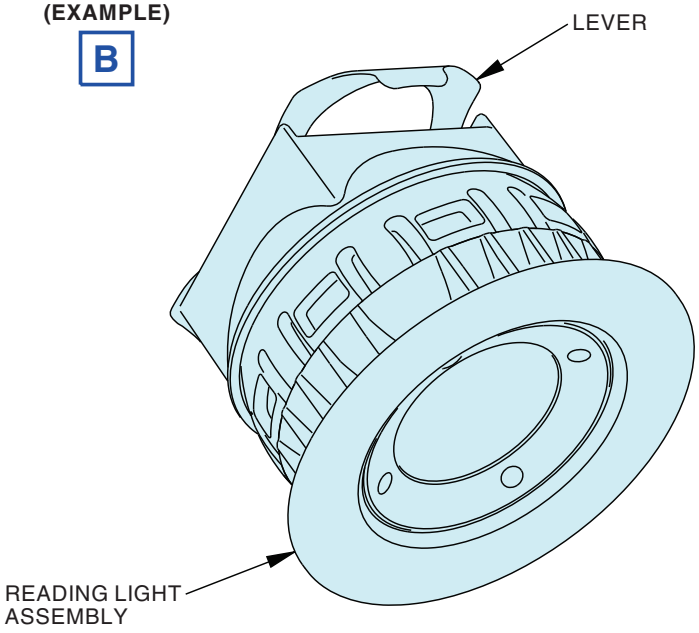


**READING LIGHT (EXAMPLE)**

C

2414609 S00061535582_V1

**Reading Lights - Light Beam Adjustment**
**Figure 203/33-23-00-990-803 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## INFORMATION SIGNS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Information Signs - Deactivation

(2) Information Signs - Activation

(3) Information Sign - Light Assembly Replacement for a Passenger Service Unit (PSU) Sign

(4) Information Sign - Lamp Replacement for a No-Smoking/Fasten-Seat-Belt Sing

(5) Information Sign - Light Assembly Replacement for a Return-to-Seat Sign.

B. This procedure includes the no-smoking, fasten-seat-belt, and return-to-seat signs.

NOTE: It does not include the lavatory-occupied signs (TASK 33-26-03-960-804).

**PTF ALL; AIRPLANES WITHOUT PERMANENTLY ILLUMINATED NO SMOKING SIGNS**

C. This procedure does not apply to the painted no-smoking signs. The no-smoking switch will not operate these signs. On some of these airplanes, the switch is connected to the service interphone system and will have a CHIME ONLY placard (TASK 23-41-00-710-801).

**PTF ALL**

**TASK 33-25-00-040-801**

### 2. Information Signs - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes electrical power from the Information Signs.

#### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

#### C. Procedure

**SUBTASK 33-25-00-860-001**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |
| D | 11 | C00442 | PASSENGER CABIN SIGNS PASS SIGN CONT |

These circuit breakers are inoperative and should remain open:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C01408 | PASS CABIN SIGNS NO SMOKING R (INOP) |
| C | 11 | C01407 | PASS CABIN SIGNS NO SMOKING L (INOP) |

#### D. Information Signs - Tryout

NOTE: This tryout is to make sure the Information Signs are in a zero energy state.

**SUBTASK 33-25-00-210-001**

(1) Do these steps to tryout the information signs:



ECCN 9E991 BOEING PROPRIETARY - See title page for details


(a) At the pilots overhead panel, P5, set the switch for the seat belts to the on mode.

1) Make sure that the fasten-seat-belt symbol is off.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

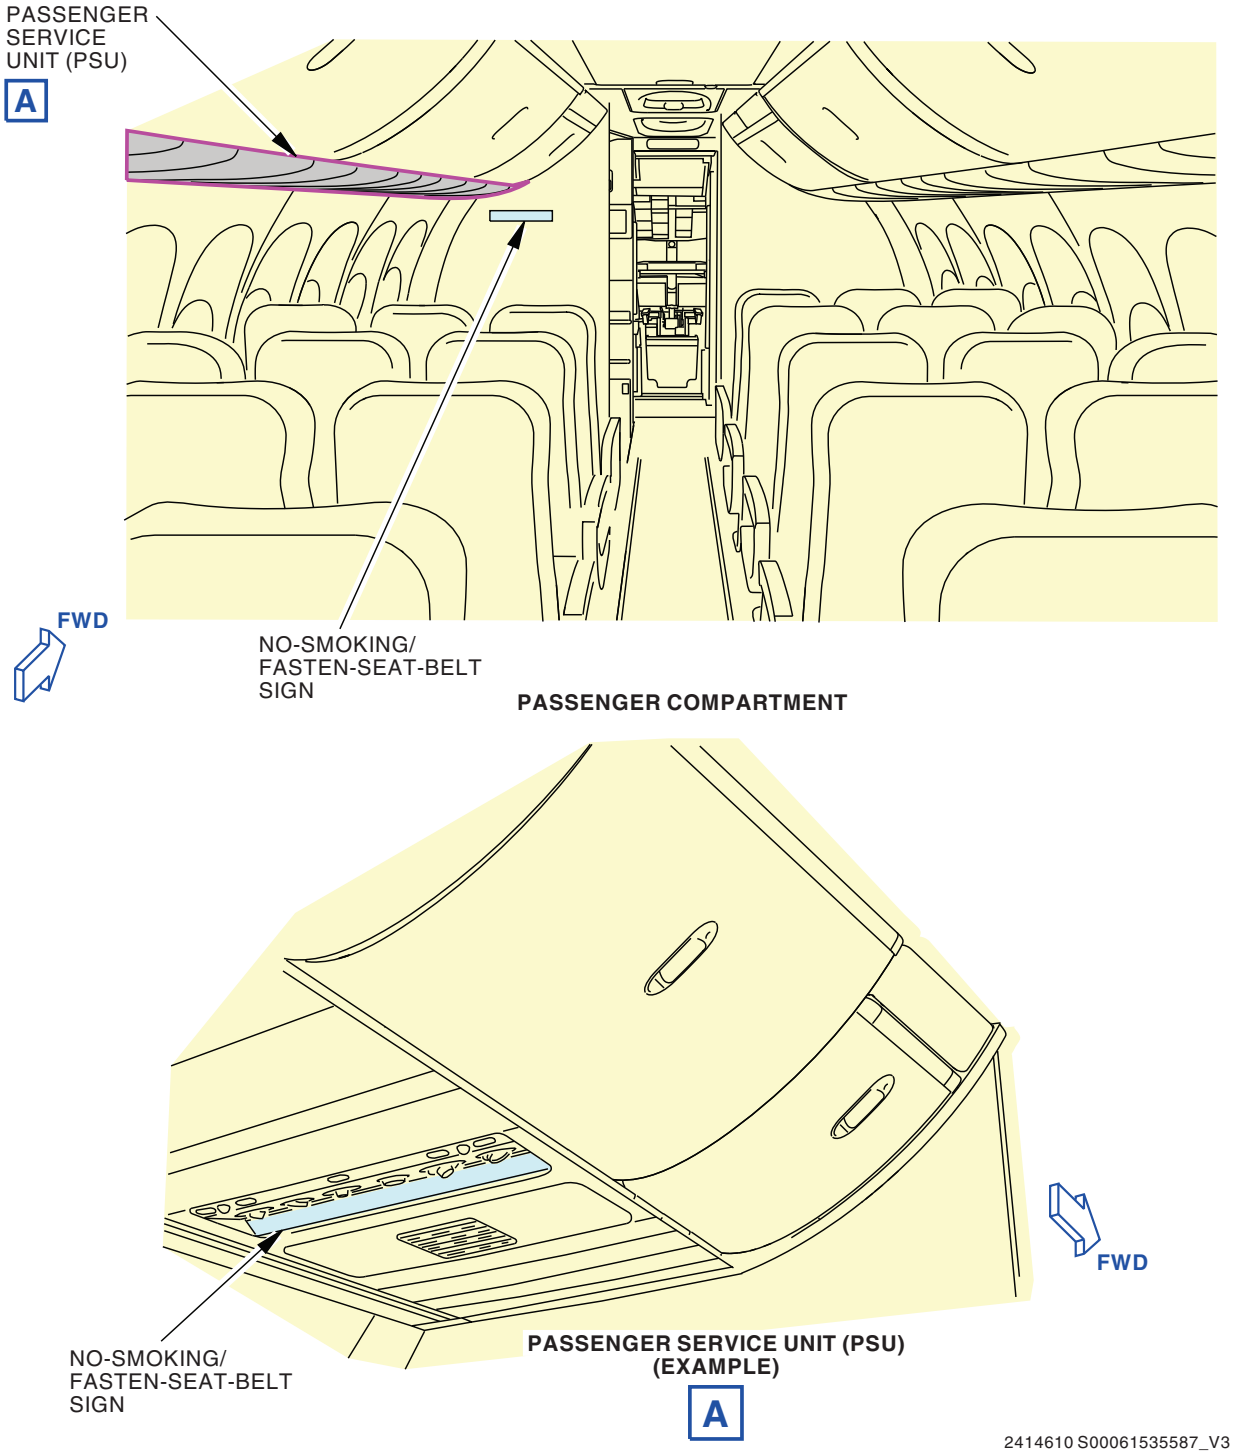


**Information Sign - Lamp Replacement**
**Figure 201/33-25-00-990-801 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

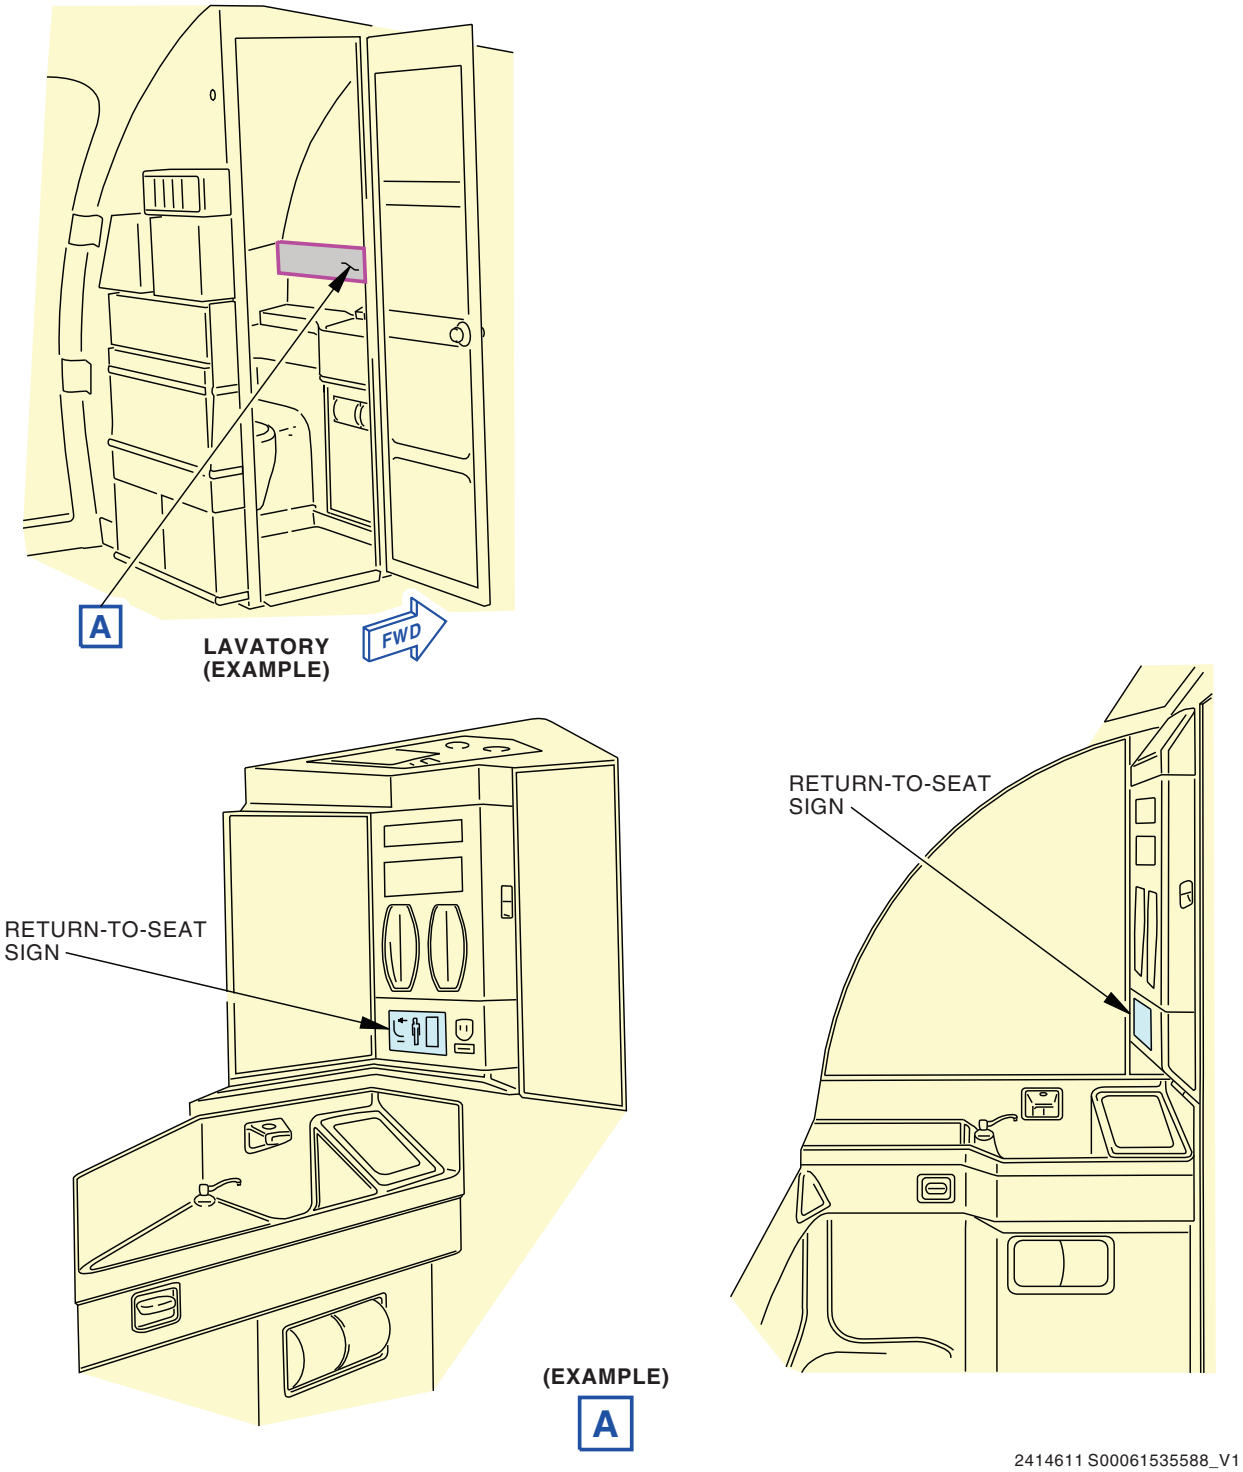


**Information Sign - Lamp Replacement**
**Figure 201/33-25-00-990-801 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-25-00-440-801**

**3. Information Signs - Activation**

(Figure 201)

**A. General**

(1) This procedure adds electrical power to the Information Signs.

**B. Location Zones**

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

**C. Procedure**

**SUBTASK 33-25-00-860-002**

(1) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |
| D | 11 | C00442 | PASSENGER CABIN SIGNS PASS SIGN CONT |

These circuit breakers are inoperative and should remain open:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C01408 | PASS CABIN SIGNS NO SMOKING R (INOP) |
| C | 11 | C01407 | PASS CABIN SIGNS NO SMOKING L (INOP) |

**——— END OF TASK ———**

**TASK 33-25-00-960-801**

**4. Information Sign - Light Assembly Replacement for a Passenger Service Unit (PSU) Sign**

(Figure 202)

**A. General**

(1) This procedure has steps to do a light assembly replacement for a Passenger Service Unit (PSU) sign.

**B. References**

| Reference | Title |
|---|---|
| 25-23-61-000-801 | Passenger Service Unit - Removal (P/B 401) |
| 25-23-61-400-801 | Passenger Service Unit - Installation (P/B 401) |

**C. Location Zones**

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

**D. Prepare for the Replacement**

**SUBTASK 33-25-00-860-003**

(1) Open the applicable circuit breakers and install the safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |
| D | 11 | C00442 | PASSENGER CABIN SIGNS PASS SIGN CONT |

Open the applicable circuit breakers and install the safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C01408 | PASS CABIN SIGNS NO SMOKING R (INOP) |
| C | 11 | C01407 | PASS CABIN SIGNS NO SMOKING L (INOP) |

## E. Procedure

**SUBTASK 33-25-00-960-001**

(1) Do these steps to replace the light assembly:

(a) Lower the Passenger Service Unit (PSU) (TASK 25-23-61-000-801).

(b) Disconnect the electrical connectors [42].

(c) Pull the light assembly [41] from the clips that attach it to the PSU.

(d) Put the new light assembly [41] in its position.

(e) Push the light assembly [41] until the clips latch it to the PSU.

(f) Connect the electrical connectors [42].

(g) Close the PSU (TASK 25-23-61-400-801).

**SUBTASK 33-25-00-960-002**

(2) Do these steps to replace the light assembly:

(a) Pull the sign away from the wall.

(b) Disconnect the electrical wires behind the light assembly.

(c) Replace the light assembly.

(d) Connect the electrical wires to the new light assembly.

(e) Push the sign back into the wall.

**SUBTASK 33-25-00-860-004**

(3) Remove the safety tags and close the applicable circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |
| D | 11 | C00442 | PASSENGER CABIN SIGNS PASS SIGN CONT |

Remove the safety tags and close the applicable circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C01408 | PASS CABIN SIGNS NO SMOKING R (INOP) |
| C | 11 | C01407 | PASS CABIN SIGNS NO SMOKING L (INOP) |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## F. Replacement Test

**SUBTASK 33-25-00-710-001**

(1) Do this test of the new light assembly:

(a) At the pilots overhead panel, P5, set the switch for the seat belts to the on mode.

1) Make sure that the fasten-seat-belt symbol comes on.


(b) Set the fasten-seat-belt switch to the off mode.

1) Make sure that the fasten-seat-belt symbol goes off.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

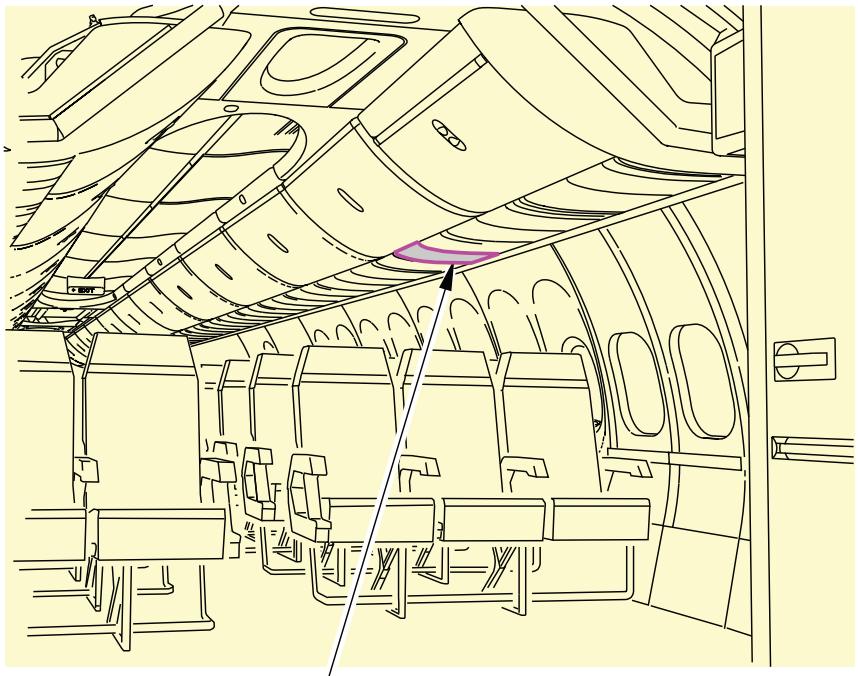

PASSENGER SERVICE UNIT (PSU)


A

PASSENGER COMPARTMENT

FWD

LIGHT ASSEMBLY SIGN

B

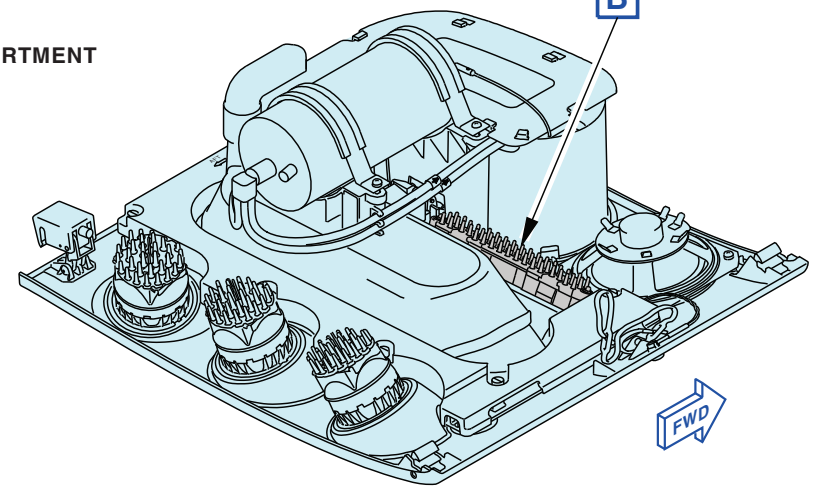


PASSENGER SERVICE UNIT (PSU) (EXAMPLE)


A

2414612 S00061535591_V3

**Information Sign - Passenger Service Unit (PSU) Sign - Light Assembly Replacement**
**Figure 202/33-25-00-990-802 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

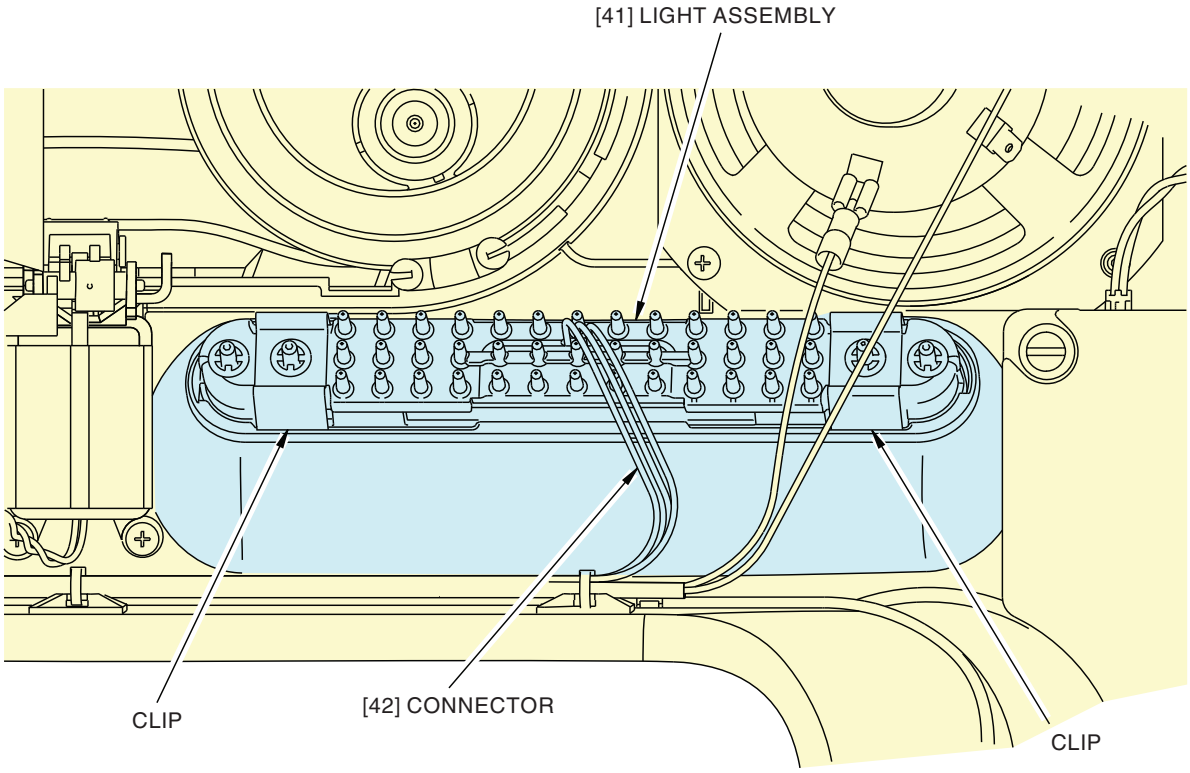


**LIGHT ASSEMBLY SIGN
(EXAMPLE)**

B

2414613 S00061535592_V3

**Information Sign - Passenger Service Unit (PSU) Sign - Light Assembly Replacement
Figure 202/33-25-00-990-802 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-25-00-960-803**

## 5. Information Sign - Lamp Replacement for a No-Smoking/Fasten-Seat-Belt Sign

(Figure 203)

### A. General

(1) This task provides instructions to remove the lamps on the No-Smoking/Fasten-Seat-Belt signs in the Boeing Sky Interior.

(a) To replace the No-Smoking/Fasten-Seat-Belt sign lights installed in the Passenger Service Unit (PSU), the light assembly must be replaced (Information Sign - Light Assembly Replacement for a Passenger Service Unit (PSU) Sign, TASK 33-25-00-960-801).

### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### C. Prepare for the Replacement

**SUBTASK 33-25-00-860-011**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |

These circuit breakers are inoperative and should remain open:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C01408 | PASS CABIN SIGNS NO SMOKING R (INOP) |
| C | 11 | C01407 | PASS CABIN SIGNS NO SMOKING L (INOP) |

### D. Procedure

**SUBTASK 33-25-00-960-004**

**WARNING** DO NOT TOUCH THE SOCKET OR THE METAL END OF THE LAMP. WHEN ELECTRICAL POWER IS SUPPLIED TO THE LAMP, ELECTRICAL SHOCK CAN OCCUR. THIS CAN CAUSE INJURIES TO PERSONNEL.

(1) Do these steps to replace the lamp:

(a) Pull the sign away from the wall.

(b) Disconnect the electrical wires behind the light assembly.

(c) Remove the two screws that attach the light assembly to the wall.

(d) Pull out the light assembly.

(e) Replace the lamps.

NOTE: The bulbs slide to the side when removed.

(f) Put the light assembly back into the wall.

(g) Tighten the two screws.

(h) Connect the electrical wires from the light assembly.

(i) Push the sign back into the wall.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-25-00-860-012

(2) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |

These circuit breakers are inoperative and should remain open:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 10 | C01408 | PASS CABIN SIGNS NO SMOKING R (INOP) |
| C | 11 | C01407 | PASS CABIN SIGNS NO SMOKING L (INOP) |

## E. Replacement Test

SUBTASK 33-25-00-860-013

(1) Do this test of the new light assembly:

(a) At the pilots overhead panel, P5, set the switch for the seat belts to the on mode.

1) Make sure that the fasten-seat-belt symbol comes on.


(b) Set the fasten-seat-belt switch to the off mode.

1) Make sure that the fasten-seat-belt symbol goes off.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

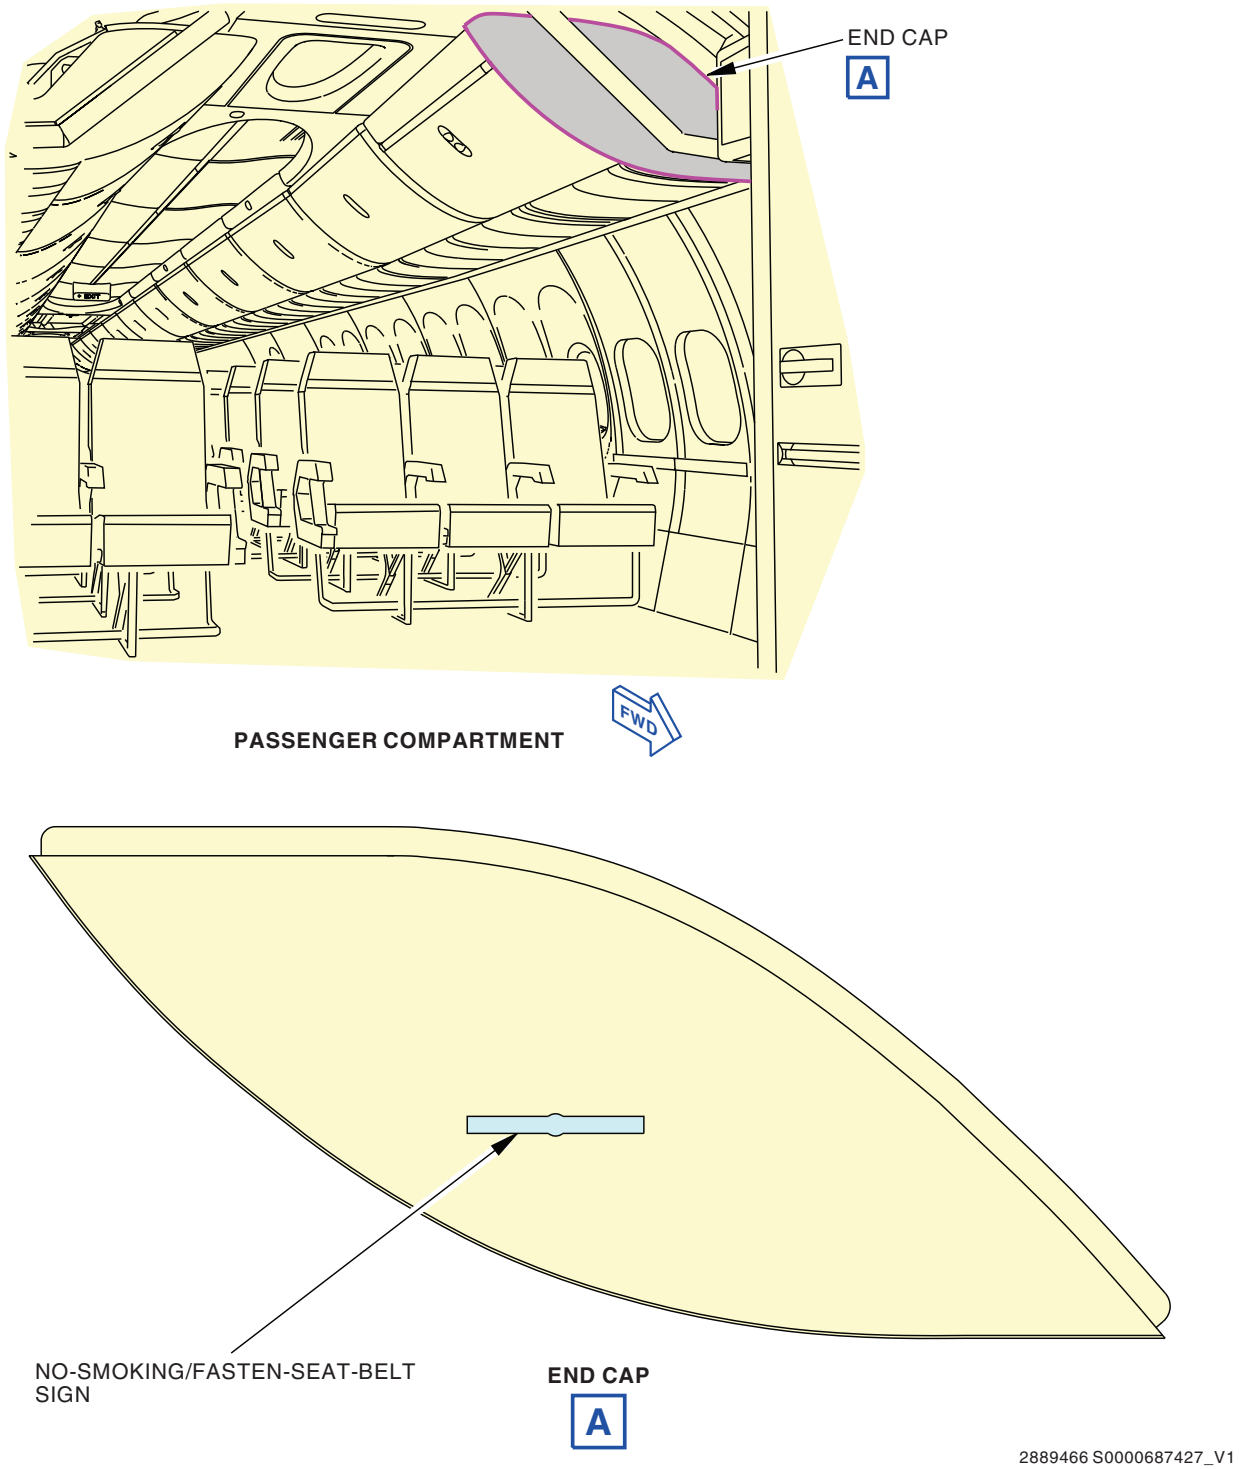


**Information Sign, No-Smoking/Fasten-Seat-Belt Sign - Light Assembly Replacement**
**Figure 203/33-25-00-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-25-00-960-802**

## 6. Information Sign - Light Assembly Replacement for a Return-to-Seat Sign

(Figure 204)

### A. General

(1) This procedure has steps to do a light assembly replacement for a Return-to-Seat sign.

### B. References

| Reference | Title |
|---|---|
| WDM 33-25-11 | Wiring Diagram Manual |

### C. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### D. Procedure

**SUBTASK 33-25-00-860-007**

(1) Open the applicable circuit breaker and install the safety tag:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |

**SUBTASK 33-25-00-960-003**

(2) Do these steps to replace the sign: (WDM 33-25-11)

(a) In the lavatory, open the utility door for access to the return-to-seat sign.

(b) Pull the sign away from the wall.

(c) Disconnect the electrical wires.

(d) Replace the light assembly.

(e) Connect the electrical wires from the light assembly.

(f) Push the sign back into the wall.

(g) Close the utility door.

**SUBTASK 33-25-00-860-008**

(3) Remove the safety tag and close the applicable circuit breaker:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 8 | C04072 | PASS CABIN SIGNS FASTEN SEAT BELT R |
| C | 9 | C04071 | PASS CABIN SIGNS FASTEN SEAT BELT L |

**SUBTASK 33-25-00-710-002**

(4) Do a test of the new light assembly.

(a) At the pilots overhead panel, P5, set the switch for the seat belts to the on mode.

1) Make sure that the return-to-seat sign comes on.


(b) Set the switch to the off mode.

1) Make sure that the sign goes off.

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

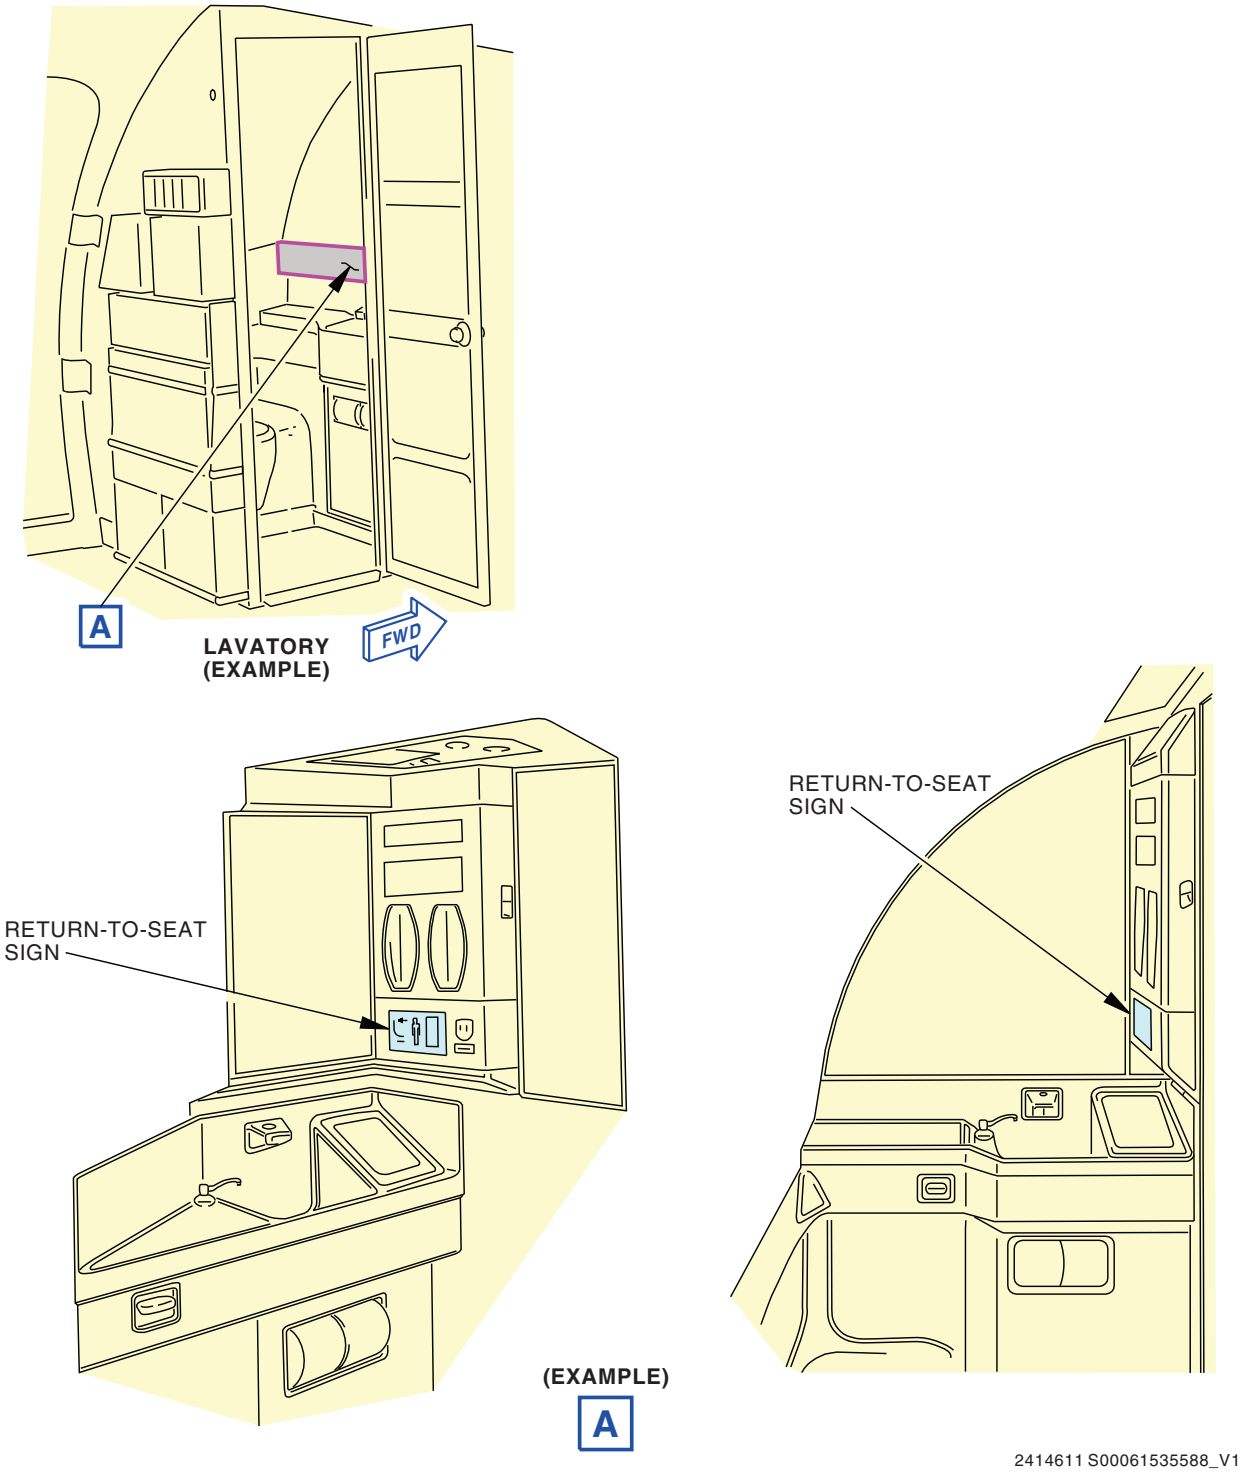


**Information Sign, Return-To-Seat Sign - Light Assembly Replacement**
**Figure 204/33-25-00-990-803**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## ATTENDANT WORK LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Attendant Work Lights - Deactivation

(2) Attendant Work Lights - Activation

(3) Attendant Work Light - Lamp Replacement

(4) Attendant Work Light - Light Assembly Replacement.

**TASK 33-26-01-040-801**

### 2. Attendant Work Lights - Deactivation

(Figure 201)

#### A. General

(1) This task removes electrical power from the attendant work lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

#### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

#### D. Attendant Work Lights Deactivation

**SUBTASK 33-26-01-010-001**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-26-01-860-001**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

> **WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 3 | C00140 | WORK AND THSHD LTS |

**E. Attendant Work Lights - Tryout**

NOTE: This tryout is to make sure that the attendant work lights are in a zero energy state.

**SUBTASK 33-26-01-860-002**

> **WARNING** WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

> **WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Make sure that this circuit breaker is open and has safety tag:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 3 | C00140 | WORK AND THSHD LTS |

**SUBTASK 33-26-01-700-001**

(2) Do the following steps for the attendant work lights:

(a) At the FWD attendant panel, press the work light switch to the ON mode.

1) Make sure that the attendant work light does not come on.


(b) At the AFT attendant panel, press the work light switch to the ON mode.


1) Make sure that the attendant work light does not come on.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

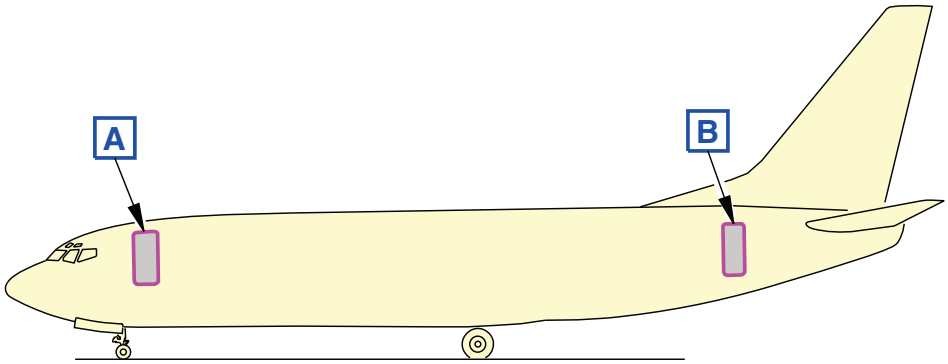

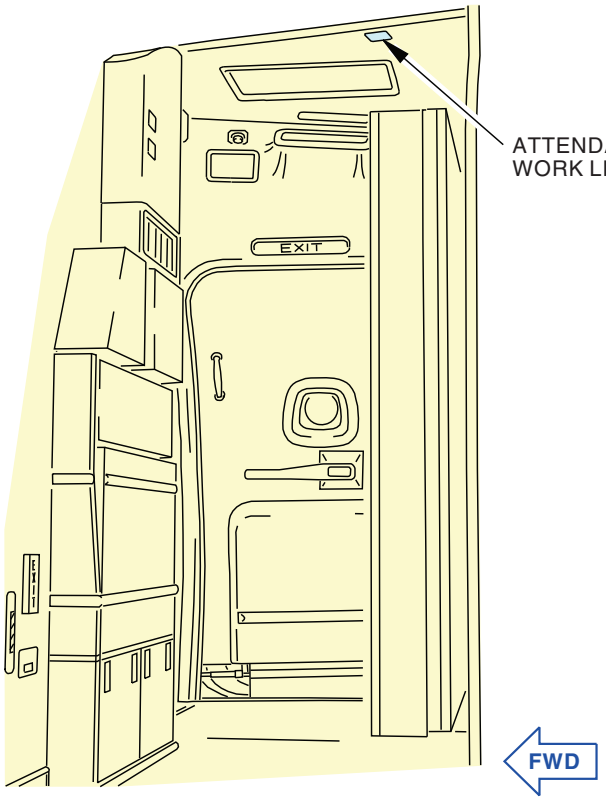
(VIEW THROUGH THE FORWARD PASSENGER DOOR)
(RIGHT SIDE IS SHOWN, LEFT SIDE IS OPPOSITE)

A

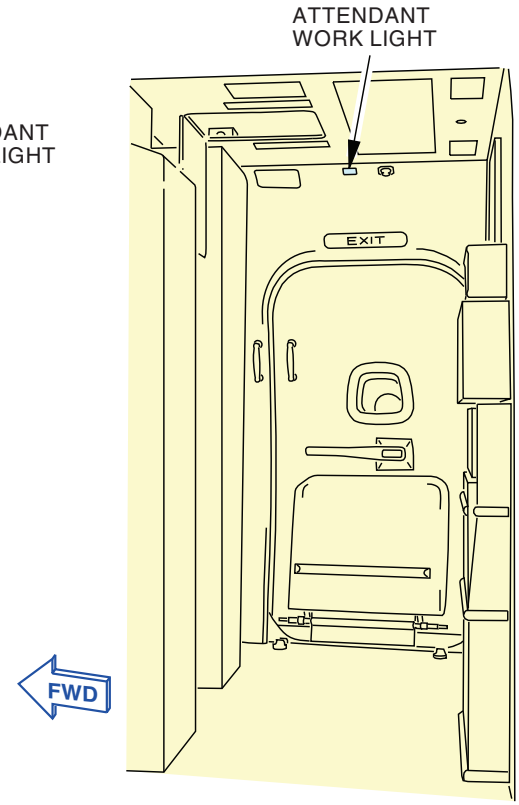


(VIEW THROUGH THE AFT PASSENGER DOOR)
(RIGHT SIDE IS SHOWN, LEFT SIDE IS OPPOSITE)

B

3044081 S0000811010_V1

**Attendant Work Lights**
**Figure 201/33-26-01-990-801**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-01-440-801**

## 3. Attendant Work Lights - Activation

(Figure 201)

### A. General

(1) This procedure adds electrical power to the attendant work lights.

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. Attendant Work Lights Activation

**SUBTASK 33-26-01-860-003**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 3 | C00140 | WORK AND THSHD LTS |

**SUBTASK 33-26-01-410-001**

(2) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-01-960-801**

## 4. Attendant Work Light - Lamp Replacement

(Figure 202)

### A. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 1 | Lamp | 33-26-01-09A-045 | PTF ALL |
| | | 33-26-01-31-045 | PTF ALL |

### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### C. Attendant Work Light Lamp Replacement

**SUBTASK 33-26-01-860-004**

(1) Do these steps at the adjacent attendant control panel:

(a) Make sure that the attendant control panel display is operational.

1) Touch the opposite corners of the display sequentially in two seconds to operate it.

(b) On the attendant control panel display, touch the Lighting tab.

(c) For the attendant work light in the forward entry area, make sure that the OFF button below the Forward Entry Area, Work section is a black color.

NOTE: The OFF button is a black color when the light is off and a blue color when the light is on.

1) If the OFF button is a blue color, touch the OFF button to remove electrical power to the attendant work light.

(d) For attendant work light in the aft entry area, make sure that the OFF button below the Aft Entry Area, Work section is a black color.

NOTE: The OFF button is a black color when the light is off and a blue color when the light is on.

1) If the OFF button is a blue color, touch the OFF button to remove electrical power to the attendant work light.

**SUBTASK 33-26-01-960-001**

**WARNING** DO NOT TOUCH THE SOCKETS OR THE METAL ENDS OF THE LAMP. SHOCK CAN OCCUR WHEN YOU SUPPLY ELECTRICAL POWER TO THE LIGHT.

(2) Do these steps to replace the lamp [1]:

(a) Remove the lens [2].

NOTE: Use a slim, flat tool to lift away the lens.

(b) Replace the lamp [1].

(c) Push the lens [2] back into its position.

**SUBTASK 33-26-01-710-001**

(3) Do a test of the new lamp [1]:

(a) Make sure that the adjacent attendant control panel display is operational.

1) Touch the opposite corners of the display sequentially in two seconds to operate it.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) On the attendant control panel display, touch the Lighting tab.

(c) For attendant work light in the forward entry area, do these steps:

NOTE: The OFF button is a black color when the light is off and a blue color when the light is on.

1) Below the Forward Entry Area, Work section, touch the OFF button.
   a) Make sure that the attendant work light comes on.
2) Below the Forward Entry Area, Work section, touch the OFF button.
   a) Make sure that the attendant work light goes off.

(d) For attendant work light in the aft entry area, do these steps:


NOTE: The OFF button is a black color when the light is off and a blue color when the light is on.


1) Below the Aft Entry Area, Work section, touch the OFF button.
   a) Make sure that the attendant work lights come on.
2) Below the Aft Entry Area, Work section, touch the OFF button.
   a) Make sure that the attendant work lights go off.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

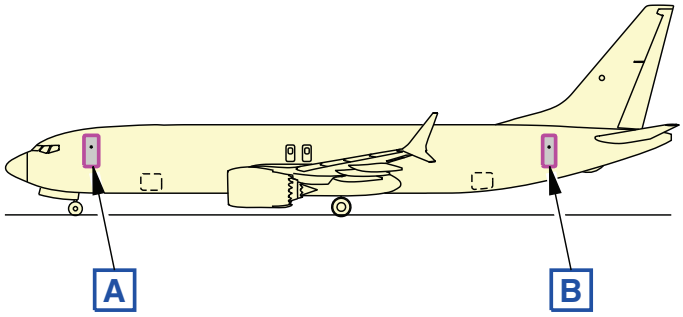

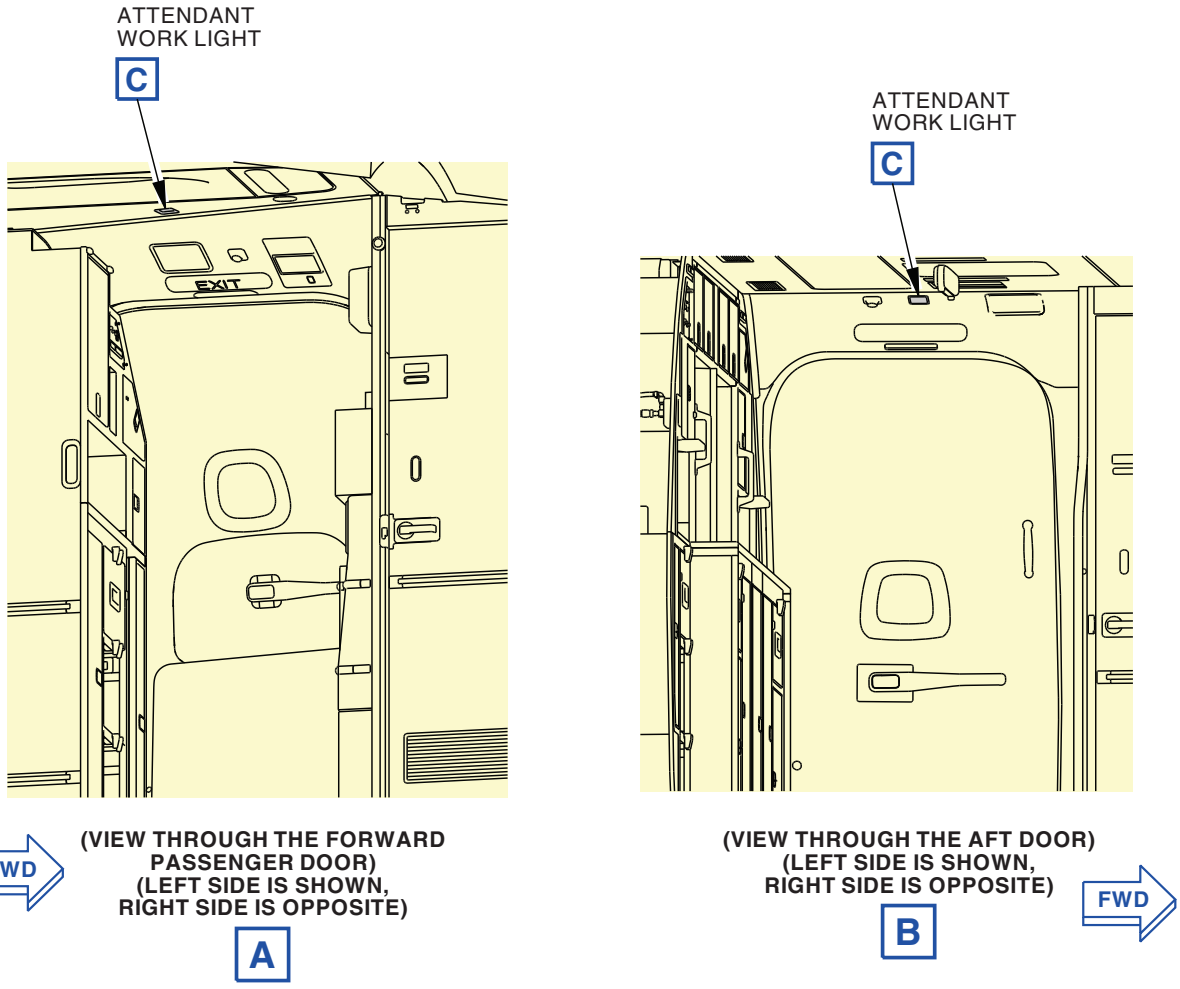




2414615 S00061535601_V2

**Attendant Work Light - Lamp Replacement**
**Figure 202/33-26-01-990-802 (Sheet 1 of 2)**

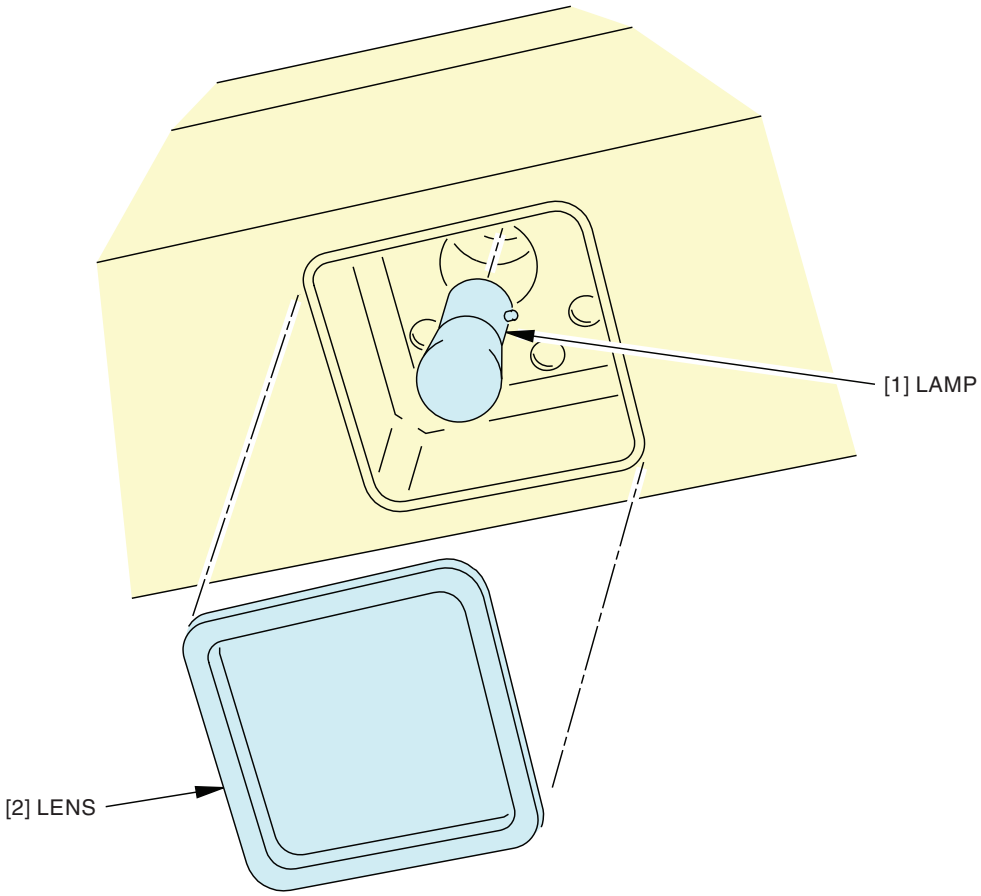

ECCN 9E991 BOEING PROPRIETARY - See title page for details




**ATTENDANT WORK LIGHT
(EXAMPLE)**

C

2414616 S00061535602_V1

**Attendant Work Light - Lamp Replacement
Figure 202/33-26-01-990-802 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-01-960-802**

## 5. Attendant Work Light - Light Assembly Replacement

(Figure 203)

### A. References

| Reference | Title |
|---|---|
| WDM 33-26-11 | Wiring Diagram Manual |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 22 | Light assembly | 33-26-01-09A-040 | PTF ALL |
| | | 33-26-01-31-030 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 200 | Upper Half of Fuselage |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |
| 831 | Forward Entry Door |
| 834 | Aft Entry Door |

### E. Light Assembly Replacement

SUBTASK 33-26-01-010-002

(1) To get access to the P91 panel, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-01-860-007

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 3 | C00140 | WORK AND THSHD LTS |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-26-01-860-008

(3) Get access to the back of the light assembly [22] (WDM 33-26-11).

(a) Open this access panel:

| Number | Name/Location |
|---|---|
| 831 | Forward Entry Door |

(b) Open this access panel:

| Number | Name/Location |
|---|---|
| 834 | Aft Entry Door |

SUBTASK 33-26-01-960-002

(4) Do these steps to replace the light assembly [22]:

(a) Lift away the cap [23].

(b) Disconnect the electrical wires [24].

(c) Loosen the fasteners [21] on the light assembly [22].

(d) Replace the light assembly [22].

(e) Tighten the fasteners [21].

(f) Connect the electrical wires [24] to the new light assembly [22].

(g) Cover the electrical wires [24] with the cap [23].

SUBTASK 33-26-01-410-004

(5) Close this access panel:

| Number | Name/Location |
|---|---|
| 831 | Forward Entry Door |

SUBTASK 33-26-01-410-005

(6) Close this access panel:

| Number | Name/Location |
|---|---|
| 834 | Aft Entry Door |

SUBTASK 33-26-01-860-009

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(7) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 3 | C00140 | WORK AND THSHD LTS |

SUBTASK 33-26-01-410-003

(8) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-01-710-002

(9) Do a test of the new light assembly [22]:

(a) Make sure that the adjacent attendant control panel display is operational.

1) To operate it, touch the opposite corners of the display sequentially in two seconds.

(b) On the attendant control panel display, touch the Lighting tab.

(c) For attendant work light in the forward entry area, do these steps:

NOTE: The OFF button is a black color when the light is off and a blue color when the light is on.

1) Below the Forward Entry Area, Work section, touch the OFF button.

a) Make sure that the attendant work light comes on.

2) Below the Forward Entry Area, Work section, touch the OFF button.

a) Make sure that the attendant work light goes off.

(d) For attendant work light in the aft entry area, do these steps:

NOTE: The OFF button is a black color when the light is off and a blue color when the light is on.

1) Below the Aft Entry Area, Work section, touch the OFF button.

a) Make sure that the attendant work lights come on.


2) Below the Aft Entry Area, Work section, touch the OFF button.


a) Make sure that the attendant work lights go off.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

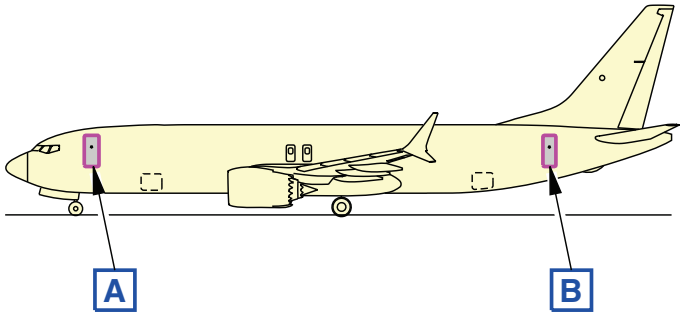

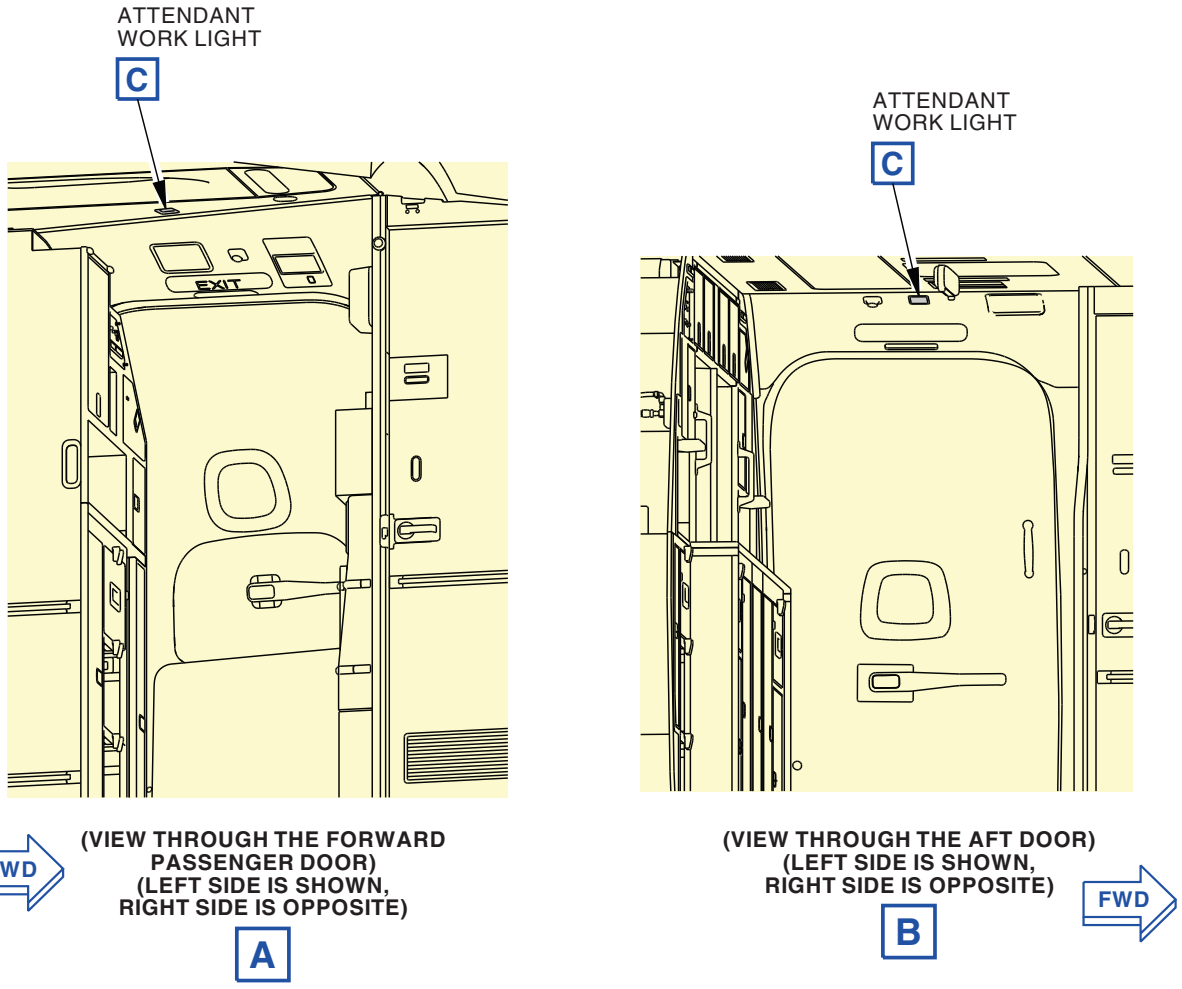




2414615 S00061535601_V2

**Attendant Work Light - Light Assembly Replacement**
**Figure 203/33-26-01-990-803 (Sheet 1 of 2)**

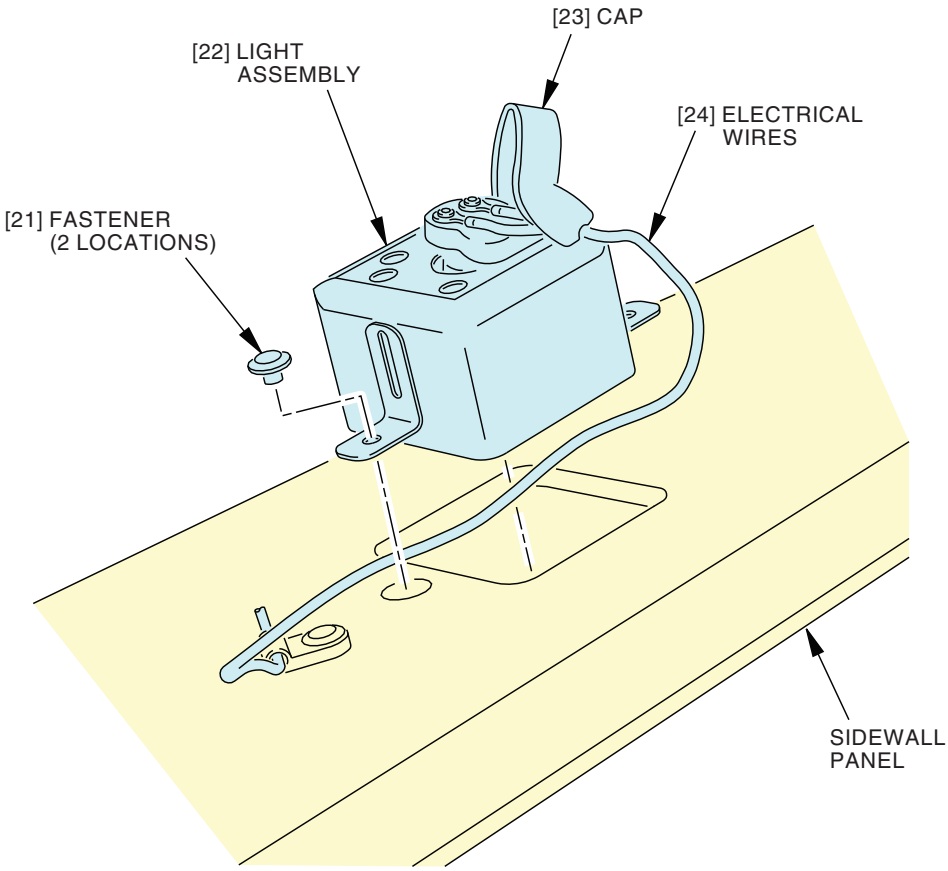

ECCN 9E991 BOEING PROPRIETARY - See title page for details




**ATTENDANT WORK LIGHT (EXAMPLE)**

C

2414618 S00061535605_V1

**Attendant Work Light - Light Assembly Replacement**
**Figure 203/33-26-01-990-803 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## GALLEY LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) FWD Galley Area Lights - Deactivation

(2) FWD Galley Area Lights - Activation

(3) Galley Light - Lamp Replacement

(4) Galley Light - Ballast Replacement.

**TASK 33-26-02-040-801**

### 2. FWD Galley Area Lights - Deactivation

#### A. General

(1) This procedure removes the electrical power to the FWD Right side Galley Area lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |
| 232 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right |

#### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

#### D. Procedure

**SUBTASK 33-26-02-010-001**

(1) Open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-26-02-860-001**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 10 | C00242 | GALLEY LTS |

**E. FWD Galley Area Lights - Tryout**

NOTE: This tryout is to make sure the FWD galley area lights is in a zero energy state.

**SUBTASK 33-26-02-211-001**

(1) Do the following steps to verify the galley area light is off:

(a) Turn the galley area light switch on galley G1 control panel to “DIM” and confirm the galley area light is off.

(b) Turn the galley area light switch on galley G1 control pane, to “BRIGHT” and confirm the galley area light is off.

**——— END OF TASK ———**

**TASK 33-26-02-440-801**

## 3. FWD Galley Area Lights - Activation

**A. General**

(1) This procedure adds electrical power to the FWD Right side Galley Area lights.

**B. Location Zones**

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |
| 232 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Right |

**C. Access Panels**

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**D. Procedure**

**SUBTASK 33-26-02-860-002**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 10 | C00242 | GALLEY LTS |

SUBTASK 33-26-02-410-001

(2) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

——— END OF TASK ———

**TASK 33-26-02-960-801**

## 4. Galley Light - Lamp Replacement

(Figure 201)

### A. References

| Reference | Title |
|---|---|
| WDM 33-26-21 | Wiring Diagram Manual |

### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### C. Procedure

SUBTASK 33-26-02-860-003

(1) In the galley, set the switch for the galley light to the off mode (WDM 33-26-21).

SUBTASK 33-26-02-960-001

**WARNING**

DO NOT TOUCH THE SOCKETS OR THE METAL ENDS OF THE LAMP. SHOCK CAN OCCUR WHEN YOU SUPPLY ELECTRICAL POWER TO THE LIGHT.

(2) Do these steps to replace the lamp [3]:

(a) Loosen the fasteners [1]. Then remove the lens assembly [2].

(b) Replace the lamp [3].

NOTE: Use the levers to eject the lamp.

(c) Install the lens assembly [2]. Then tighten fasteners [1].

SUBTASK 33-26-02-710-001

(3) Do a test of the new lamp [3]:

(a) Set the switch for the galley light to the bright mode.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the light comes on brightly.

(b) Set the switch to the dim mode.

1) Make sure that the light becomes dim.


(c) Set the switch to the off mode.

1) Make sure that the light goes off.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

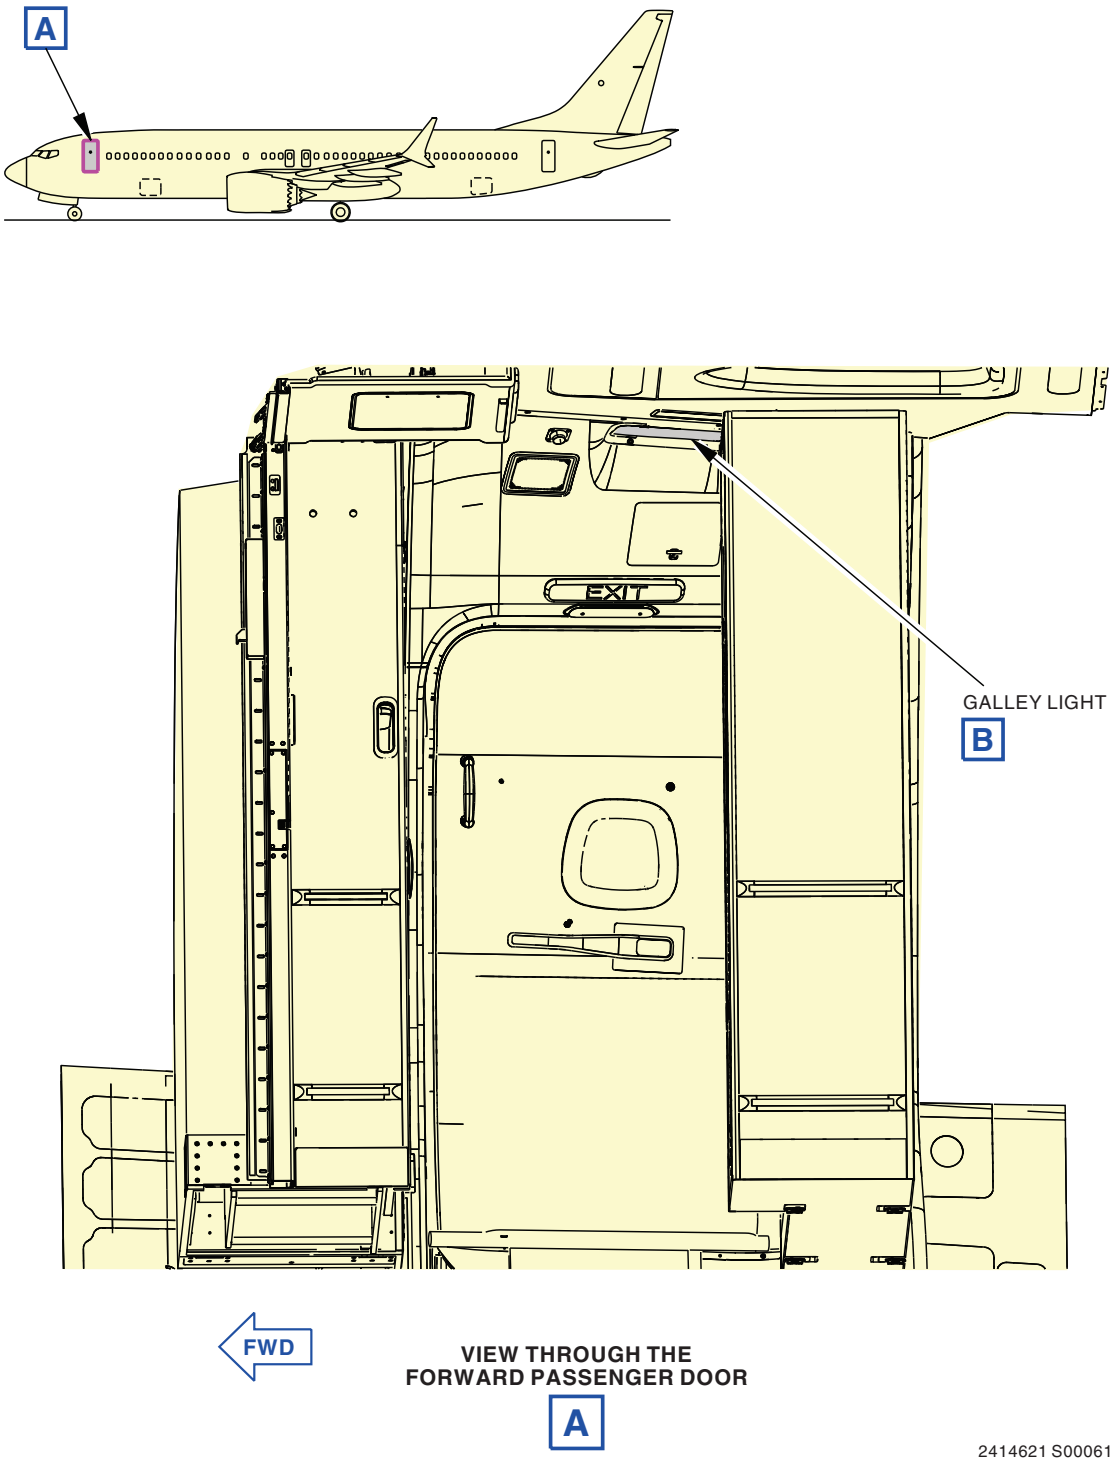


**Galley Light - Lamp Replacement**
**Figure 201/33-26-02-990-801 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

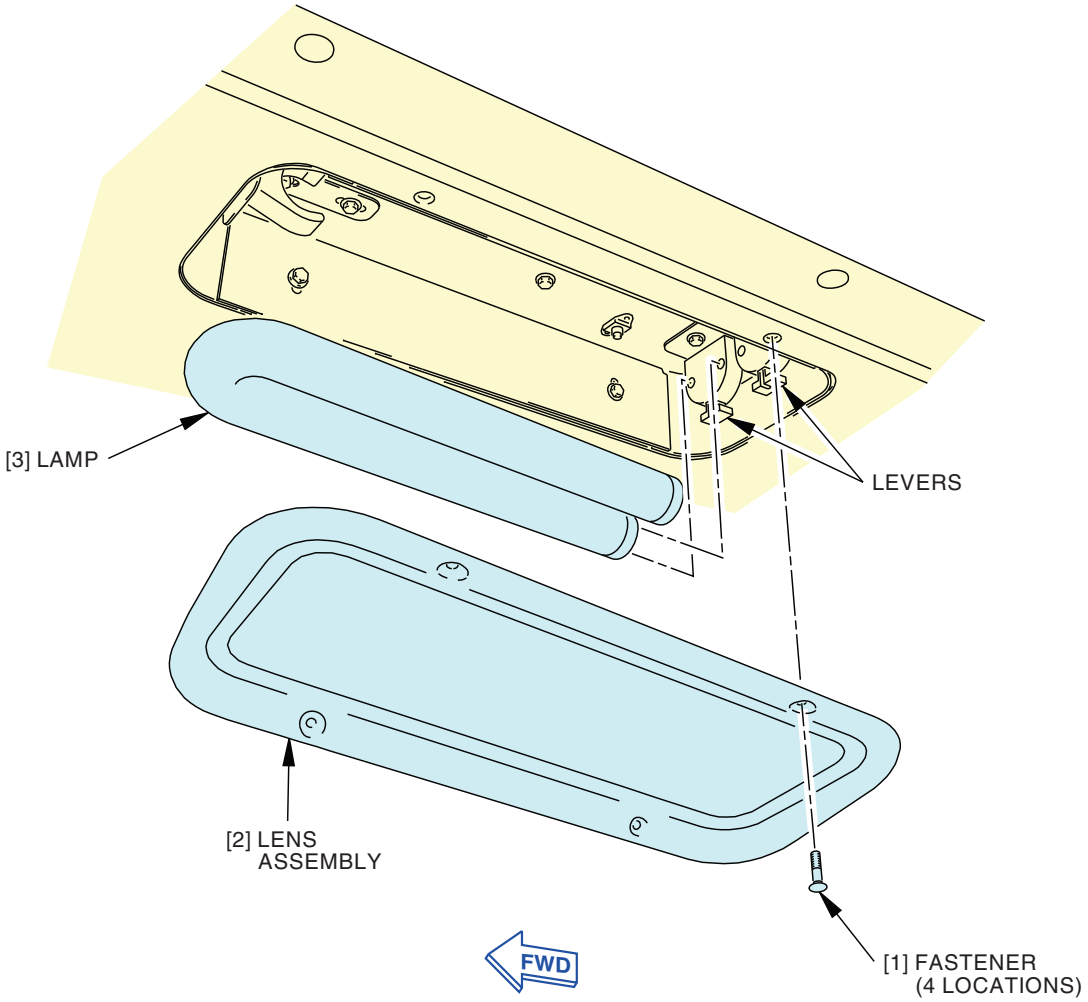


**GALLEY LIGHT**

**B**

2414620 S00061535612_V1

**Galley Light - Lamp Replacement**
**Figure 201/33-26-02-990-801 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-02-960-802**

## 5. Galley Light - Ballast Replacement

(Figure 202)

### A. References

| Reference | Title |
|---|---|
| WDM 33-26-21 | Wiring Diagram Manual |

### B. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 24 | Ballast | 33-26-02-95-120 | PTF ALL |

### C. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 200 | Upper Half of Fuselage |

### D. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### E. Galley Light Ballast Replacement

SUBTASK 33-26-02-010-003

(1) To get access to the P92 panel, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-02-860-006

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 10 | C00242 | GALLEY LTS |

SUBTASK 33-26-02-010-002

(3) Remove the galley light for access to the ballast [24] (WDM 33-26-21):

(a) Loosen the fasteners [1].

(b) Remove the lens assembly [2].



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Remove the lamp [3].

NOTE: Use the levers to eject the lamp.

(d) Remove the screws [23] and washers [22] in the housing [21].

(e) Lower the housing [21].

SUBTASK 33-26-02-960-002

(4) Do these steps to replace the ballast [24]:

(a) Disconnect the electrical connector [25] from the ballast [24].

(b) Remove the screws [27] and washers [26] from the ballast [24].

(c) Replace the ballast [24].

(d) Install the screws [27] and washers [26].

(e) Connect the electrical connector [25] to the new ballast [24].

SUBTASK 33-26-02-410-002

(5) Install the galley light:

(a) Put the housing [21] back in its position.

(b) Install the screws [23] and washers [22] in the housing.

(c) Install the lamp [3].

(d) Install the lens assembly [2].

(e) Then tighten the fasteners [1].

SUBTASK 33-26-02-860-007

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(6) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 10 | C00242 | GALLEY LTS |

SUBTASK 33-26-02-410-003

(7) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-02-710-002

(8) Do a test of the new ballast [24]:



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) In the galley, set the switch for the galley light to the bright mode.

1) Make sure that the light comes on brightly.

(b) Set the switch to the dim mode.

1) Make sure that the light becomes dim.


(c) Set the switch to the off mode.

1) Make sure that the light goes off.

**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

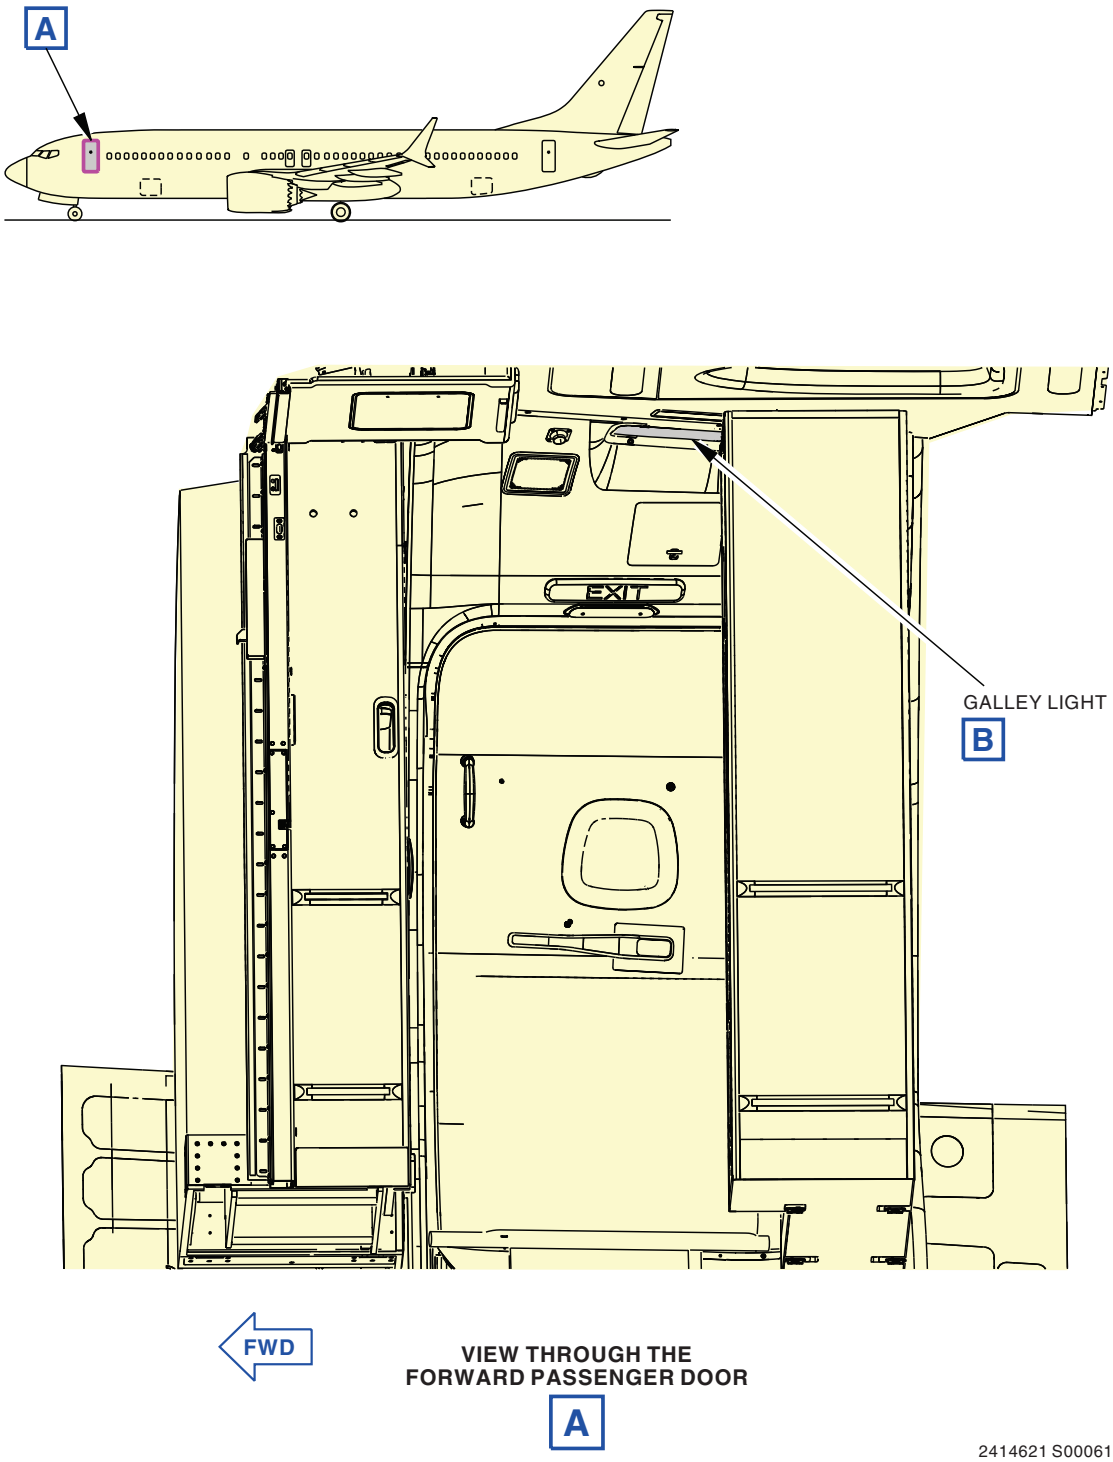


**Galley Light - Ballast Replacement**
**Figure 202/33-26-02-990-802 (Sheet 1 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

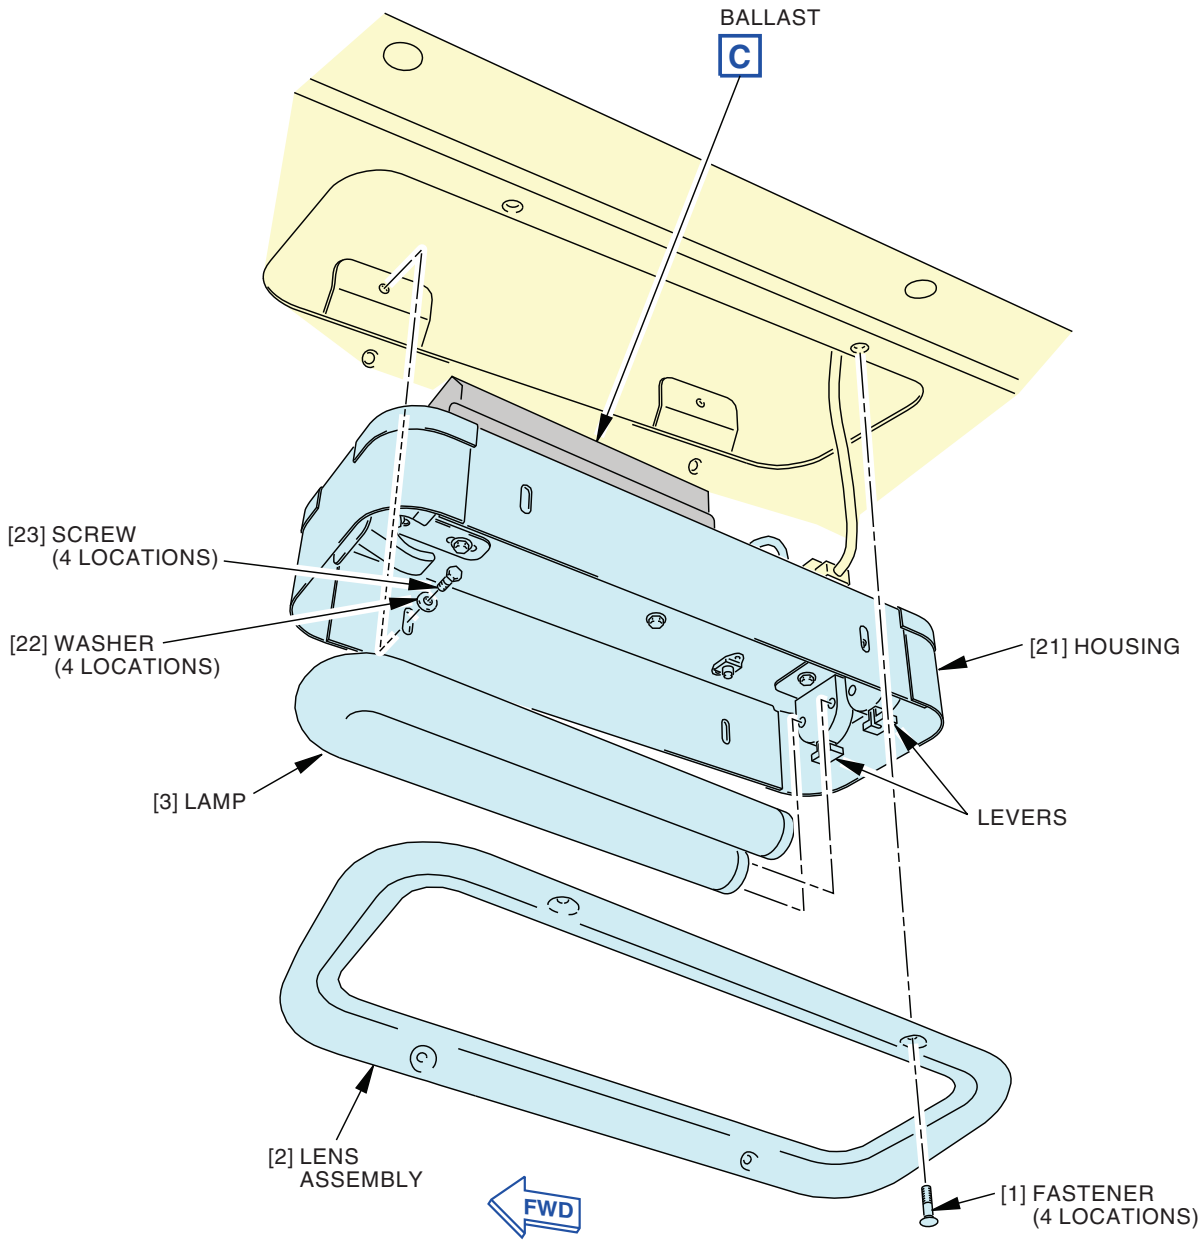



2414622 S00061535615_V1

**Galley Light - Ballast Replacement**
**Figure 202/33-26-02-990-802 (Sheet 2 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

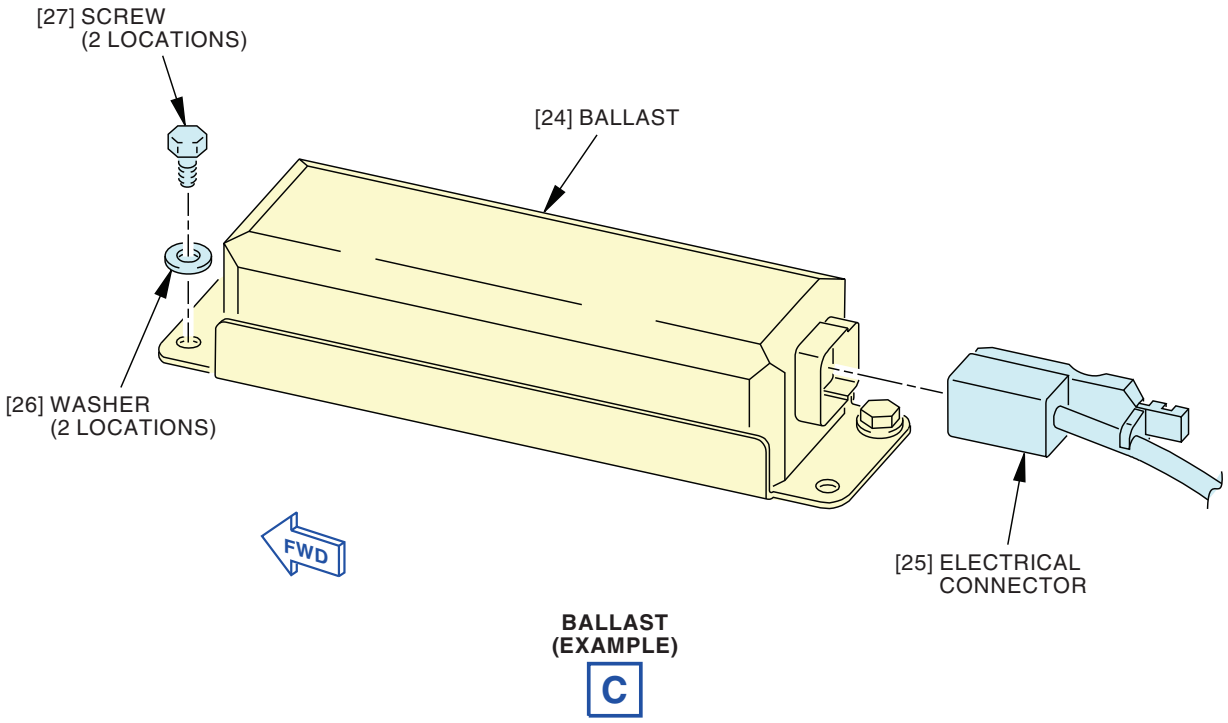


2414623 S00061535616_V1

**Galley Light - Ballast Replacement**
**Figure 202/33-26-02-990-802 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## LAVATORY LIGHTS AND SIGNS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Lavatory Lights Deactivation

(2) Lavatory Lights Activation

(3) Lavatory Light - LED Light Repacement

(4) Lavatory-Occupied Sign - Light Assembly Replacement

(5) Lavatory Door Switch - Replacement

**TASK 33-26-03-040-801**

### 2. Lavatory Lights - Deactivation

#### A. General

(1) This procedure removes electrical power from the lavatory lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

#### C. Procedure

SUBTASK 33-26-03-860-001

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |
| E | 14 | C01648 | LAVATORY MIRROR LIGHT |

#### D. Lavatory Lights - Tryout

SUBTASK 33-26-03-200-001

NOTE: This tryout is to make sure the Lavatory lights is in a zero energy state.

(1) At each lavatory, close the door and make sure that the lights are off.

**——— END OF TASK ———**

**TASK 33-26-03-440-801**

### 3. Lavatory Lights - Activation

#### A. General

(1) This procedure adds electrical power to the lavatory lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

### C. Procedure

SUBTASK 33-26-03-860-002

(1) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |
| E | 14 | C01648 | LAVATORY MIRROR LIGHT |

**END OF TASK**

**TASK 33-26-03-960-803**

## 4. Lavatory Light - LED Light Replacement

(Figure 201)

### A. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### B. Lavatory LED Light Replacement

SUBTASK 33-26-03-860-011

**WARNING**

REMOVE ELECTRICAL POWER FROM THE COMPONENT. IF YOU DO NOT REMOVE ELECTRICAL POWER, YOU CAN CAUSE INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT.

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |
| E | 14 | C01648 | LAVATORY MIRROR LIGHT |

SUBTASK 33-26-03-960-004

(2) Do these steps to replace the LED lights:

(a) Remove the applicable light cover or mirror door.

(b) Disconnect the connector of applicable LED light.

(c) Replace the LED light.

(d) Connect the connector of the new LED light.

(e) Install the applicable light cover or mirror door.

SUBTASK 33-26-03-860-012

(3) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |
| E | 14 | C01648 | LAVATORY MIRROR LIGHT |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-26-03-710-003

(4) Do the test of the new LED light:


NOTE: The lavatory LED lights are energized when electrical power is supplied to the airplane and the Lav door is closed.

(a) Make sure that the LED light comes on.


——— END OF TASK ———




ECCN 9E991 BOEING PROPRIETARY - See title page for details

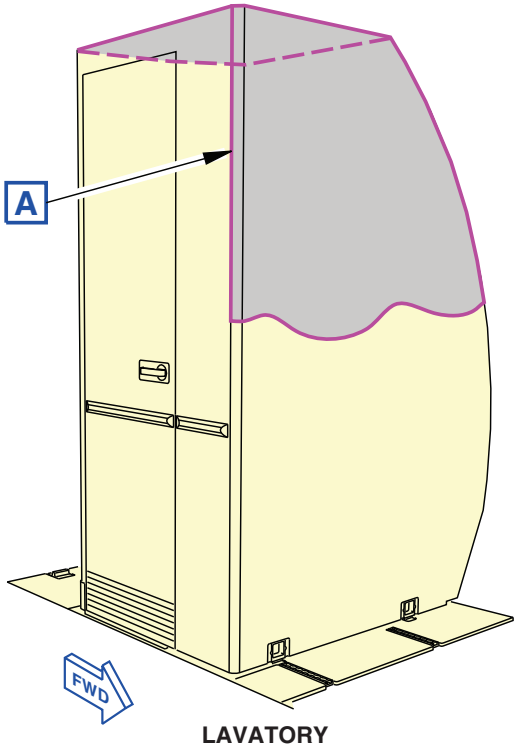


LAVATORY
(EXAMPLE)

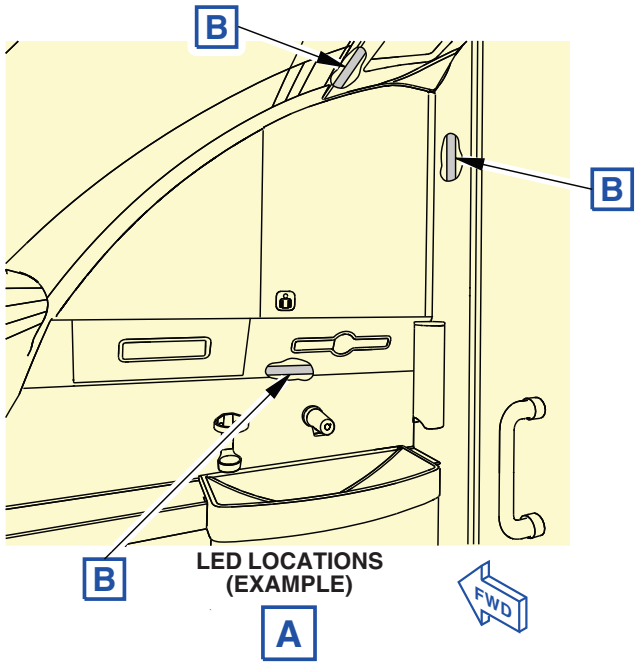


LED LOCATIONS
(EXAMPLE)

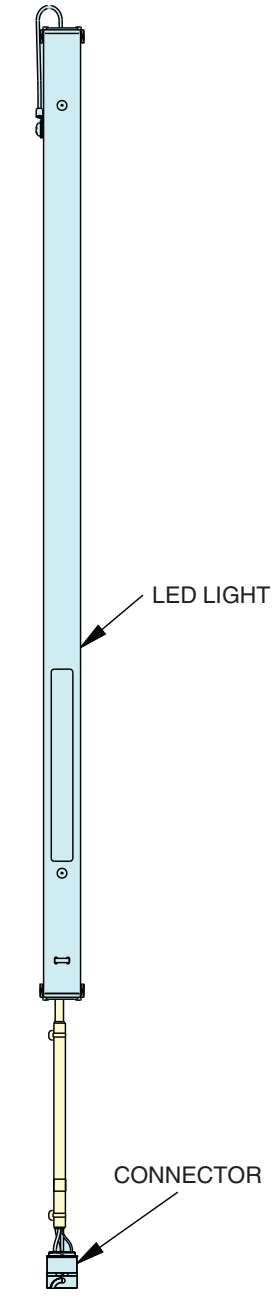


LED LIGHT
(EXAMPLE)

B

2414631 S00061535631_V3

**Lavatory Light - LED Light Replacement**
**Figure 201/33-26-03-990-804**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-03-960-804**

**5. Lavatory-Occupied Sign - Light Assembly Replacement**

(Figure 202)

**A. Tools/Equipment**

| Reference | Description |
|---|---|
| STD-13571 | Screwdriver - Flat Tip |

**B. Location Zones**

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

**C. Lavatory Occupied Sigh Light Assembly Replacement**

SUBTASK 33-26-03-860-015

(1) Open this circuit breaker and install safety tag:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |

SUBTASK 33-26-03-960-005

(2) Do these steps to replace the lavatory occupied sign [41]:

(a) Do these steps to remove the lavatory occupied sign [41]:

1) Use a thin Flat Tip Screwdriver, STD-13571, or an equivalent tool at the small opening to release the lavatory occupied sign [41] from the retainer at the rear.

NOTE: The retainer holds the lavatory occupied sign to the panel.

2) Disconnect the electrical connector [42].

3) Remove the lavatory occupied sign [41].

(b) Do these steps to install the new lavatory occupied sign [41]:

1) Connect the electrical connector [42] to the lavatory occupied sign [41].

2) Push the electrical connector [42] into the mounting hole.

3) Push the lavatory occupied sign [41] into the mounting hole.

a) Make sure that the retainer holds the lavatory occupied sign [41] in the panel correctly.

SUBTASK 33-26-03-860-016

(3) Remove the safety tag and close this circuit breaker:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |

SUBTASK 33-26-03-710-004

(4) Do a test of the new lavatory occupied sign [41]:

(a) Close and lock the lavatory door.

1) Make sure that the lavatory occupied sign [41] comes on.


(b) Unlock and open the lavatory door.

1) Make sure that the lavatory occupied sign [41] goes off.

**END OF TASK**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

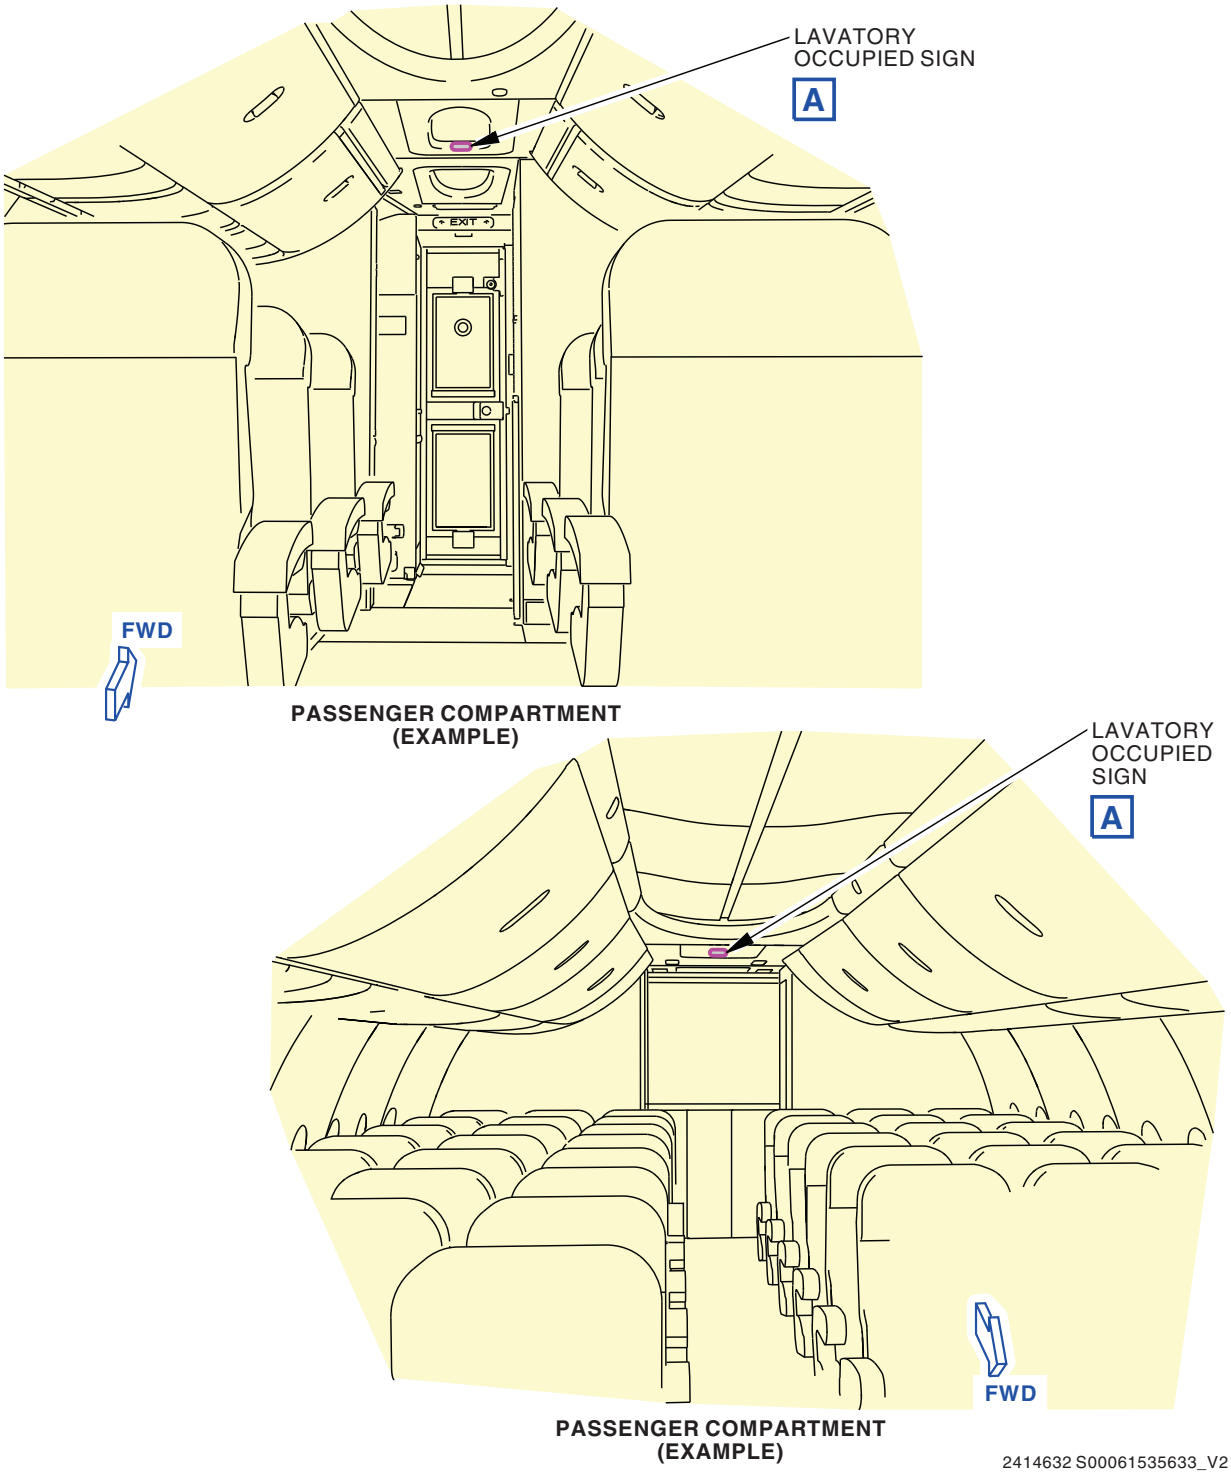


**Lavatory Occupied Sign - Light Assembly Replacement**
**Figure 202/33-26-03-990-805 (Sheet 1 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

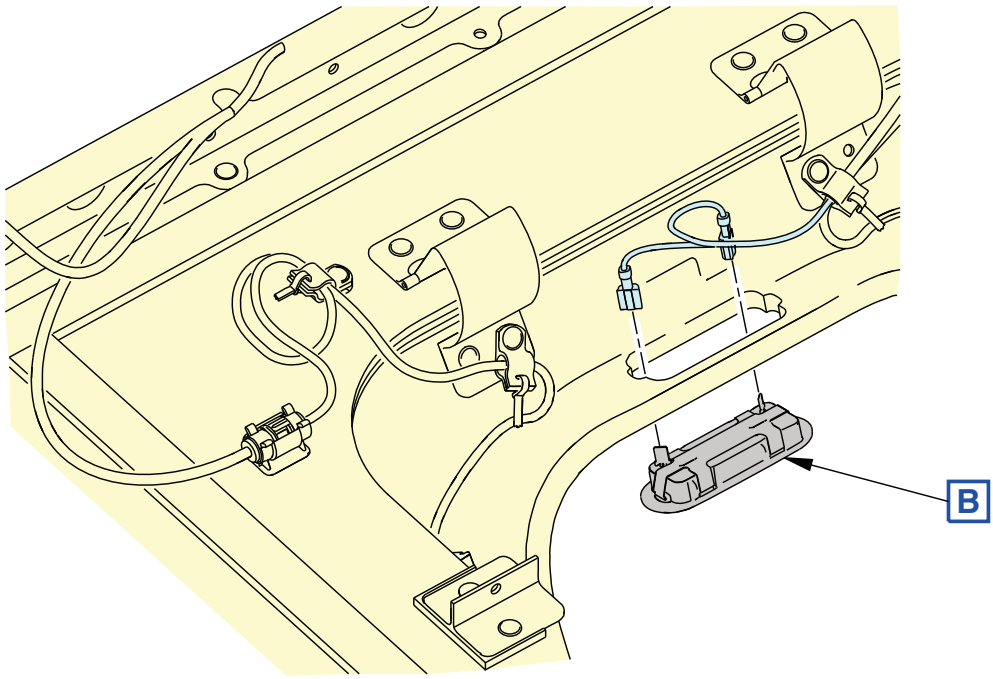


LAVATORY OCCUPIED SIGN
(EXAMPLE)


A

2414633 S00061535634_V2

**Lavatory Occupied Sign - Light Assembly Replacement**
**Figure 202/33-26-03-990-805 (Sheet 2 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

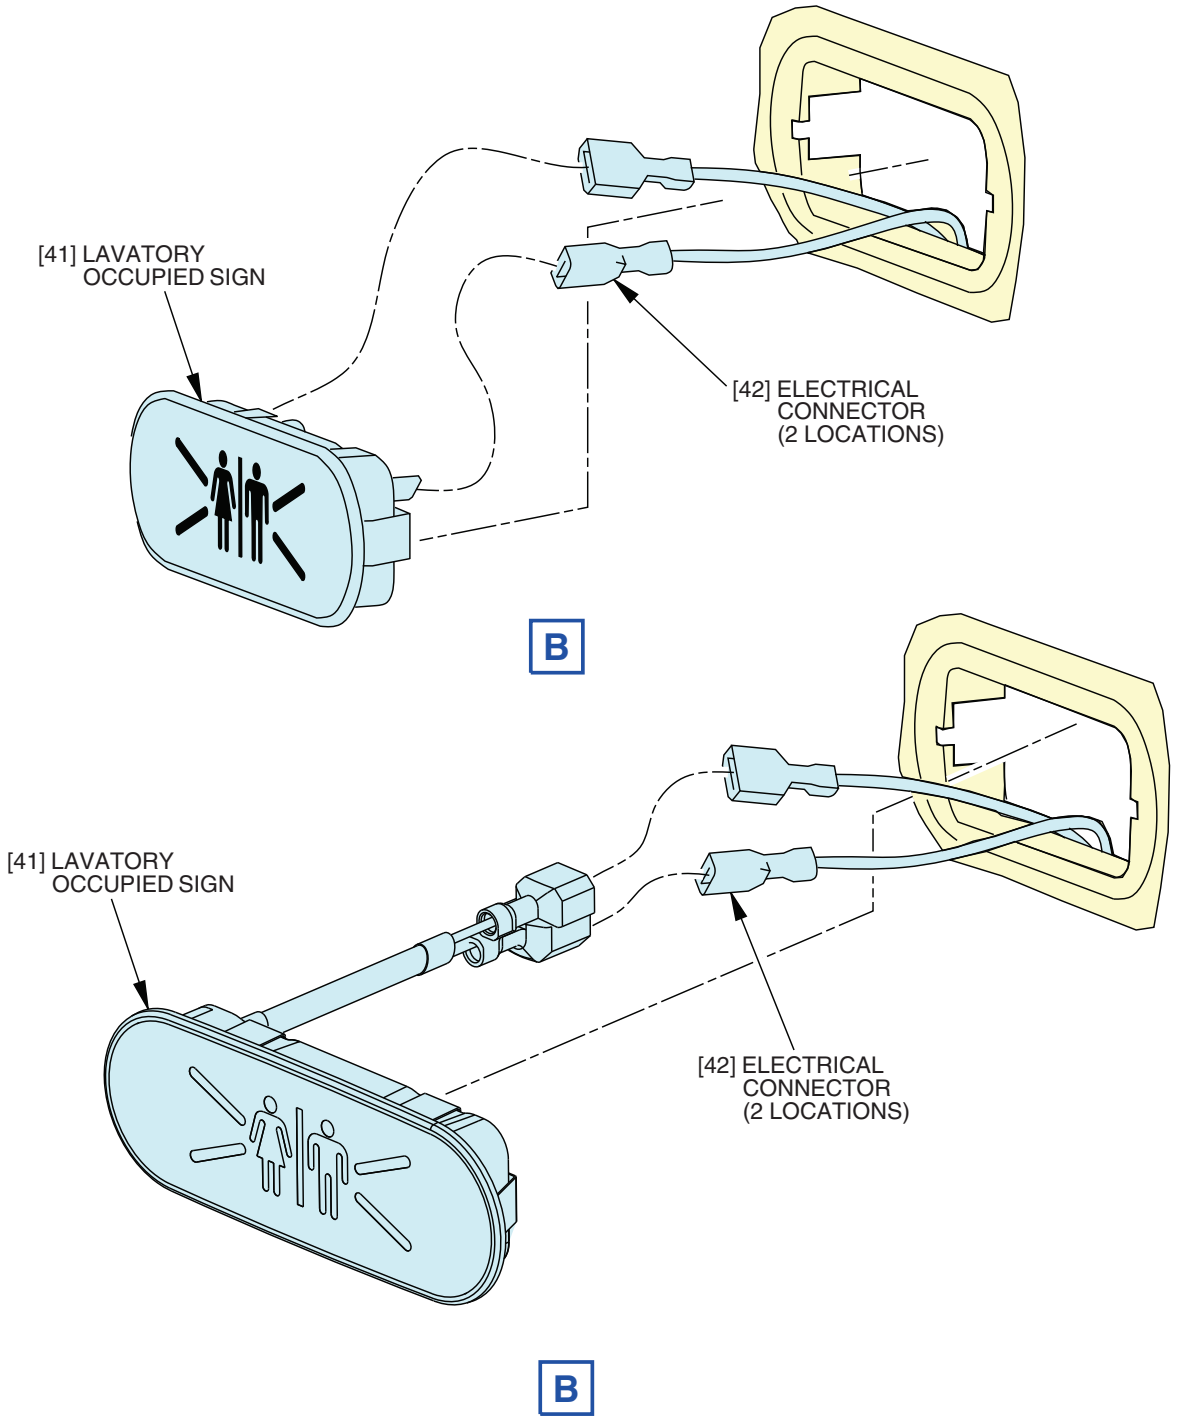


**Lavatory Occupied Sign - Light Assembly Replacement**
**Figure 202/33-26-03-990-805 (Sheet 3 of 3)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-03-960-805**

## 6. Lavatory Door Switch - Replacement

(Figure 203)

### A. General

(1) There are 3 lavatory options:

- Lavatory without bi-fold doors.
- Lavatory with bi-fold doors and 1 switch assembly.
- Lavatory with dual bi-fold doors and 2 switch assemblies.

### B. References

| Reference | Title |
|---|---|
| 33-20-00-710-801 | Passenger Compartment Lights - Operational Test (P/B 501) |
| WDM 33-26-31 | Wiring Diagram Manual |

### C. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### D. Prepare for the Replacement

**SUBTASK 33-26-03-860-019**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |

**SUBTASK 33-26-03-010-002**

(2) For lavatories without the bi-fold door, open the lavatory door.

**SUBTASK 33-26-03-010-003**

(3) For lavatories with the bi-fold door(s), remove the lavatory door(s).

### E. Lavatory Door Switch Replacement

**SUBTASK 33-26-03-960-006**

(1) For lavatory without bi-fold doors, replace the switch assembly [1] as follows:

(a) Remove the screws [2] that attach the switch assembly [1] to the door jamb.

(b) Carefully pull the switch assembly [1] out from the door jamb.

(c) Disconnect the lavatory wiring.

(d) Replace the switch assembly [1].

(e) Connect the lavatory wiring (WDM 33-26-31).

(f) Put the switch assembly [1] into the door jamb.

(g) Make sure that the wires are not pinched between the switch assembly [1] and door jamb.

(h) Attach the switch assembly [1] with the screws [2].

**SUBTASK 33-26-03-960-007**

(2) For lavatory bi-fold doors and 1 switch assembly, replace the switch assembly [3] as follows:



ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Remove the screws [7] that attach the slide rail [5], rail edge trim [6], spacer [4] (if installed), and switch assembly [3] to the header assembly.

(b) Disconnect the lavatory wiring.

1) If it is necessary, release the lavatory wiring from the switch assembly [3].

(c) Replace the switch assembly [3].

(d) Connect the lavatory wiring (WDM 33-26-31).

1) If released, attach the lavatory wiring to the switch assembly [3].

(e) Attach the slide rail [5], rail edge trim [6], spacer [4] (if removed), and switch assembly [3] to the header assembly with the screws [7].

1) Put the rail edge trim [6] above the slide rail [5].

2) Put the screws [7] up and through the slide rail [5] and rail edge trim [6].

NOTE: It can be easiest to tape the heads of the screws until they can be tightened.

3) If applicable, make sure that the carriage is in the slide rail [5] slot.

4) Put the slide rail [5] and rail edge trim [6] so the screws [7] align with the holes inside the header assembly.

5) Put the spacer [4] (if removed) above the slide rail [5] and rail edge trim [6].

6) Put the switch assembly [3] into the hole in the header assembly.

7) Make sure that the wires are not pinched between the switch assembly [3] and header assembly.

8) Make sure that the actuator on the switch assembly [3] lines up with the hole in the rail edge trim [6] and slide rail [5].

9) Tighten the screws [7].

**SUBTASK 33-26-03-960-008**

(3) For lavatory bi-fold doors and 2 switch assemblies, replace the switch assembly [8] as follows:

(a) Remove the screws [10] that attach the slide rail [12] and rail edge trim [9] to the header assembly.

(b) Disconnect the lavatory wiring.

(c) Remove the applicable screws [11] that attach the switch assembly [8] to the slide rail [12].

(d) Replace the applicable switch assembly [8].

(e) Connect the lavatory wiring (WDM 33-26-31).

(f) Put the rail edge trim [9] above the slide rail [12].

(g) Install the screws [11] to attach the switch assembly [8] to the slide rail [12].

(h) Align the slide rail [12] and rail edge trim [9] holes with holes inside the header assembly.

(i) Make sure that the wires are not pinched between the switch assembly [8] and header assembly.

(j) Install the screws [10].

## F. Lavatory Door Switch Installation Test

**SUBTASK 33-26-03-410-003**

(1) For lavatories with the bi-fold door(s), re-install the lavatory door(s).



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-26-03-860-021

(2) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| D | 10 | C01217 | PASS CAB SIGNS LAV OCC SIGN |


SUBTASK 33-26-03-710-006

(3) Do the test of the lavatory mirror lights (TASK 33-20-00-710-801).


**——— END OF TASK ———**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

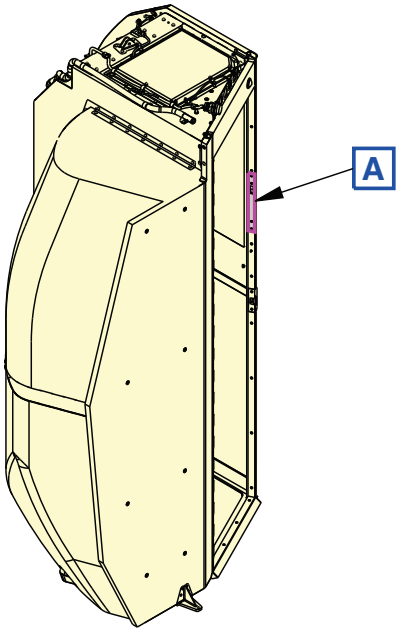



LAVATORY WITHOUT BI-FOLD DOOR
(DOOR IS NOT SHOWN)
(EXAMPLE)

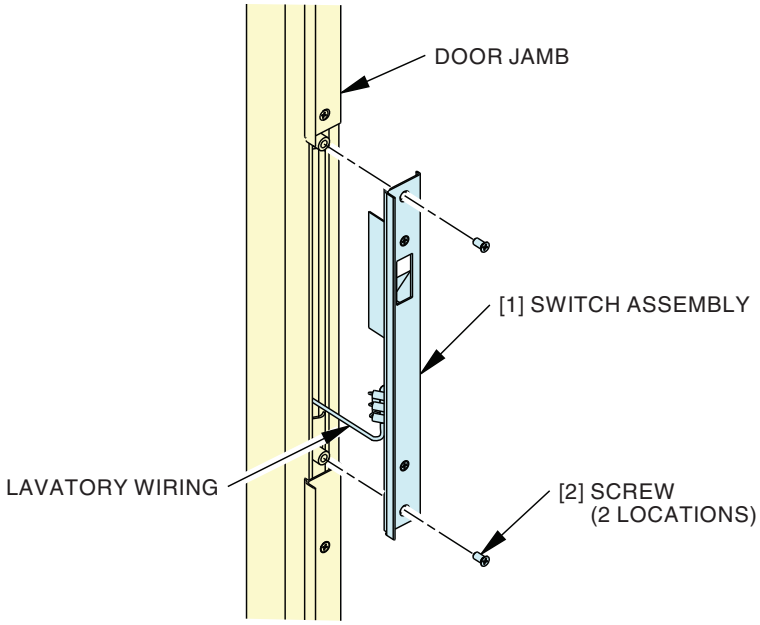


A

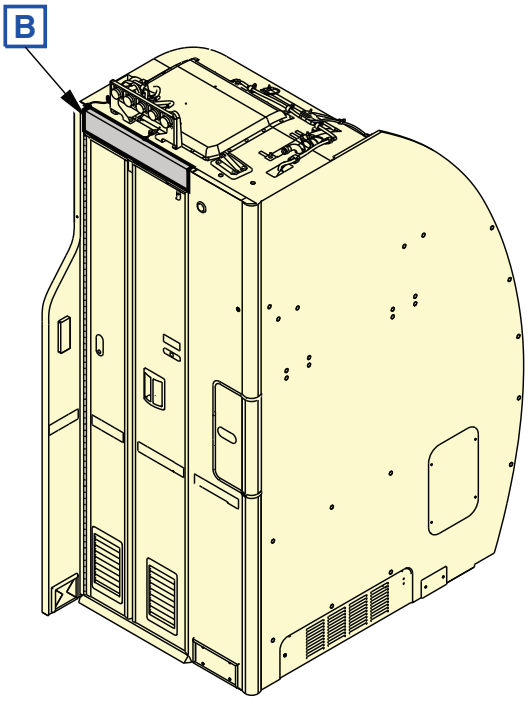


LAVATORY WITH BI-FOLD DOOR
(EXAMPLE)

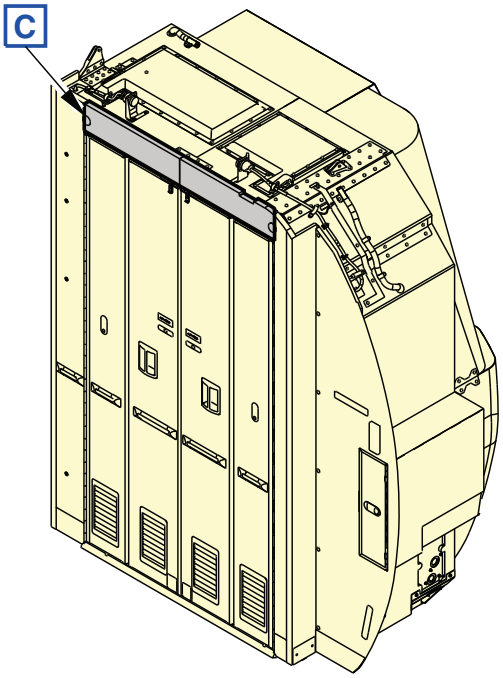



DUAL LAVATORY WITH BI-FOLD DOORS
(EXAMPLE)

2414634 S00061535636_V3

**Lavatory Door Switch - Replacement**
**Figure 203/33-26-03-990-806 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

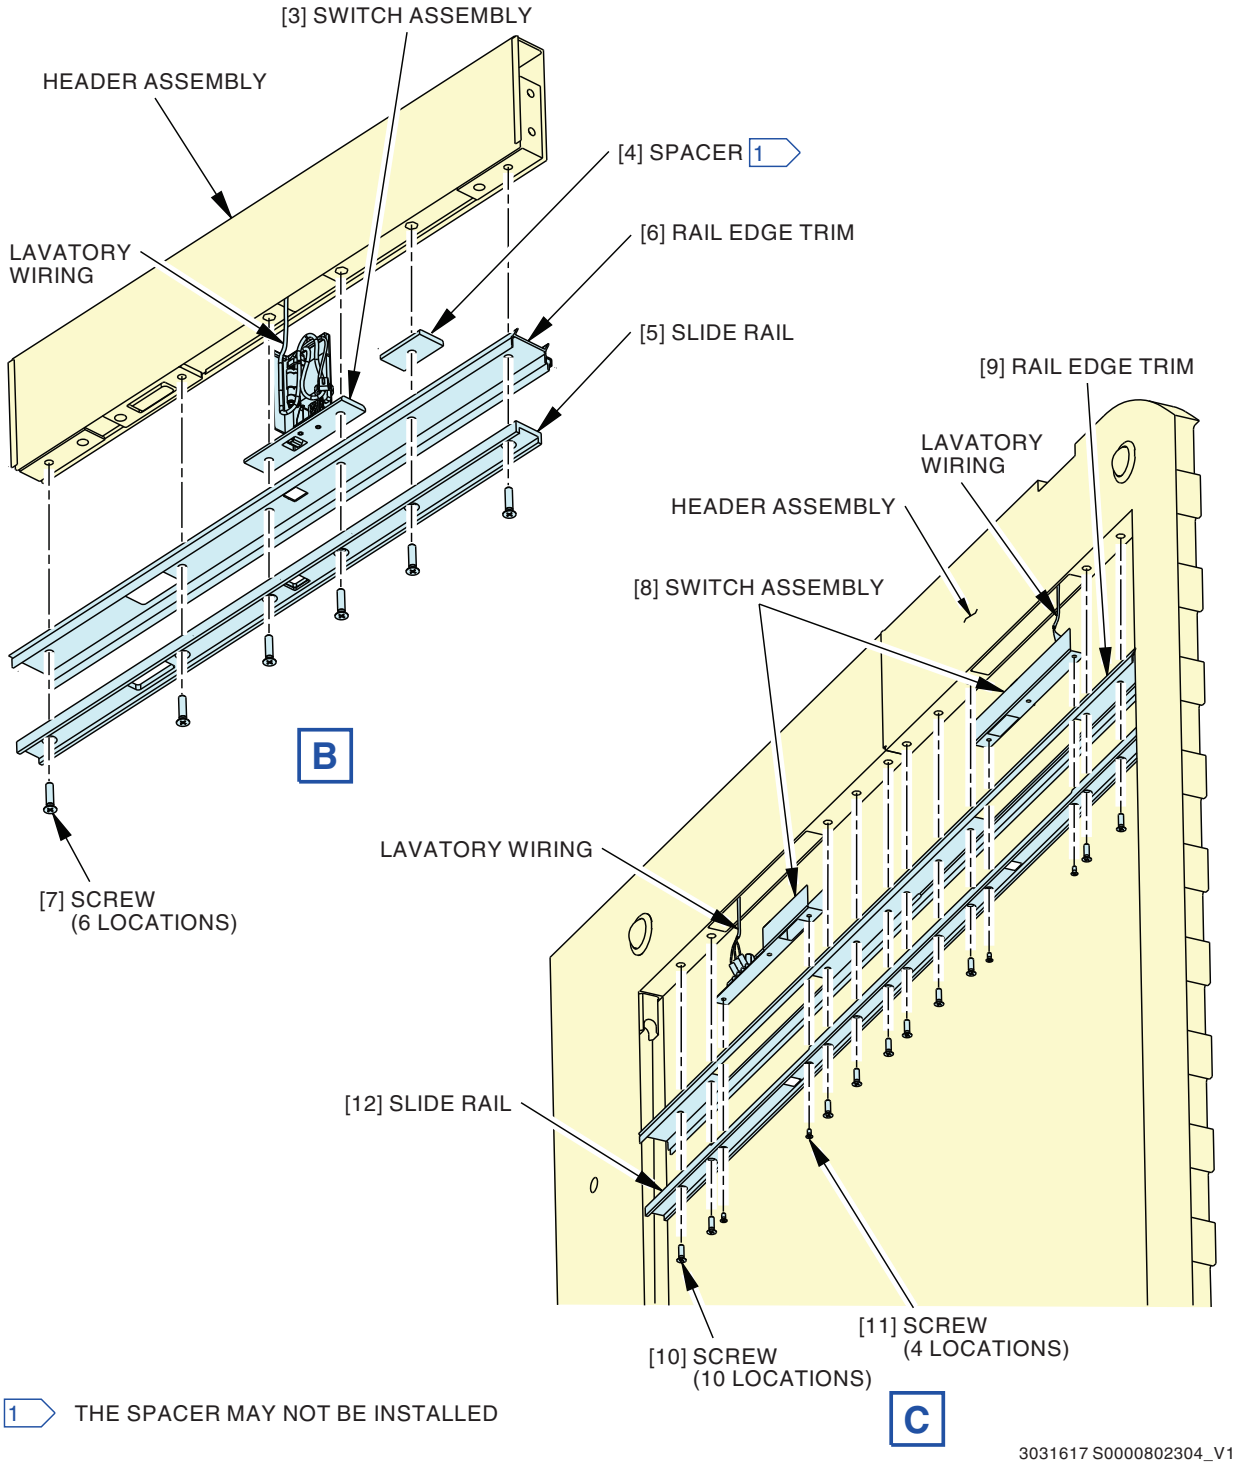


**Lavatory Door Switch - Replacement**
**Figure 203/33-26-03-990-806 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CLOSET LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) A deactivation of the closet lights

(2) An activation of the closet lights

(3) A replacement of the closet lights.

**TASK 33-26-04-040-801**

### 2. Closet Lights - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes electrical power to the closet LED lights (accent cove lights).

#### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 211 | Flight Compartment - Left |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |

#### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

#### D. Closet Lights Deactivation

**SUBTASK 33-26-04-860-001**

(1) Make sure that the Utility switch (ELEC METERS, BATTERY AND GALLEY PWR MODULE), on the P5-13 panel, is in the ON position.

**SUBTASK 33-26-04-010-002**

(2) To get access to the P91 and P92 panels, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-26-04-860-002**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**SUBTASK 33-26-04-860-003**

**WARNING** WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING** DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(4) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

## E. Closet LED Lighting - Tryout

NOTE: This tryout is to make sure that the Closet LED Lighting (accent cove lighting) is in a zero energy state.

**SUBTASK 33-26-04-860-004**

**WARNING** WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

SUBTASK 33-26-04-410-003

(2) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-04-211-001

(3) Make sure that the FWD Left Hand Closet LED lights (accent cove lights) are off.

NOTE: The closet LED lights (accent cove lights) are controlled by the Attendant Control Panel (ACP).

**——— END OF TASK ———**

**TASK 33-26-04-440-801**

## 3. Closet Lights - Activation

(Figure 201)

### A. General

(1) This procedure adds electrical power to the closet LED lights (accent cove lights).

### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |

### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### D. Closet Lights Activation

SUBTASK 33-26-04-010-003

(1) To get access to the P91 and P92, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-26-04-860-005

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(2) Make sure that this circuit breaker is closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

SUBTASK 33-26-04-860-006

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-26-04-410-002

(4) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-26-04-960-801**

## 4. Closet Light Assembly Replacement

(Figure 201)

### A. General

(1) This procedure replaces the closet LED lights (accent cove lights) in the forward left hand windscreen.

### B. References

| Reference | Title |
|---|---|
| 23-42-03-470-801 | Attendant Control Panel (ACP) - Software Loading (P/B 201) |
| SWPM 20-10-12 | WIRE HARNESS SUPPORTS |
| WDM 33-26-51 | Wiring Diagram Manual |

### C. Consumable Materials

| Reference | Description | Specification |
|---|---|---|
| G51367 | Strap - Plastic, Adjustable, Self-locking, 3.71 Inches (94.23 mm) Long | BACS38K4 |

### D. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 2 | Accent cove light assembly | 33-51-14-01-105 | PTF ALL |
| | | 33-51-14-01-130 | PTF ALL |
| | | 33-51-14-01-155 | PTF ALL |
| | | 33-51-14-01-180 | PTF ALL |
| | | 33-51-14-01-185 | PTF ALL |
| | | 33-51-14-01-190 | PTF ALL |

### E. Location Zones

| Zone | Area |
|---|---|
| 118 | Electrical and Electronics Compartment - Right |
| 211 | Flight Compartment - Left |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |

### F. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

### G. Closet Light Assembly Replacement

**SUBTASK 33-26-04-860-007**

(1) Do these steps at the applicable attendant control panel:

(a) Make sure that the attendant control panel display is activated.

(b) To activate it, touch the opposite corners of the display sequentially within two seconds.

(c) If it is necessary, input the password to get access to the attendant control panel.

(d) On the attendant control panel display, touch the Lighting tab.

(e) Below the passenger seating area, touch the OFF button.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-26-04-010-004

(2) To get access to the P92 panel, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-04-040-001

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Open this circuit breaker and install safety tag:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-26-04-010-001

(4) Remove the bustle panel assembly [1] to get access to the lights.

(a) Open the door panels.

(b) Remove the screws [7].

(c) Remove the screws [8].

SUBTASK 33-26-04-000-001

(5) Do these steps to replace the applicable accent cove light assembly [2] (WDM 33-26-51):

NOTE: Do not discard the light assembly. Refer to the vendor manual for possible repairs. Do the repairs in a shop.

(a) Disconnect the electrical connectors [5].

(b) Remove the straps [4] that tie the wire pigtails together.

(c) Remove the strap from the clamp [3].

(d) Remove the electrical wires from the clamp [3].

(e) Remove the bolts [6] that hold the accent cove light assembly [2] to the bracket.

(f) Replace the accent cove light assembly [2].

(g) Install the bolts [6] that hold the accent cove light assembly [2] to the bracket.

(h) Put the electrical wires into the clamp [3].

(i) Install adjustable plastic strap, G51367, to the clamp [3] (SWPM 20-10-12).

(j) Connect the electrical connectors [5].

(k) Install the straps [4] that tie the wire pigtails together.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 33-26-04-410-001

(6) Reinstall the bustle panel assembly [1].

(a) Install the screws [8].

(b) Install the screws [7].

(c) Close the door panels.

SUBTASK 33-26-04-440-001

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(7) Remove the safety tag and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-26-04-410-004

(8) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-04-860-008

(9) Load the software to the new light assembly, do this task: Attendant Control Panel (ACP) - Software Loading, TASK 23-42-03-470-801.

SUBTASK 33-26-04-710-001

(10) Do a test of the new light assembly.

(a) Make sure that the Attendant Control Panel (ACP) display is activated.

1) To activate it, touch the opposite corners of the ACP display sequentially within two seconds.

(b) If it is necessary, input the password to get access to the ACP.

(c) Make sure that the CAB/UTIL switch, on the P5-13 panel, is set to the ON position.

(d) On the ACP display, touch the Lighting tab.

(e) Below the Passenger Seating Area, touch the White Bright button.

1) Make sure that the light comes on brightly.

(f) Touch the White Medium button.

1) Make sure that the light becomes medium.

(g) Touch the Boarding/Deplane button.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the light color in the passenger compartment is equivalent to the light type shown below the General Lighting Layout on the ACP display.

NOTE: The light can take at least 15 seconds to change.

(h) Touch the OFF button.


1) Make sure that the light goes off.

(i) If it is not necessary, set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

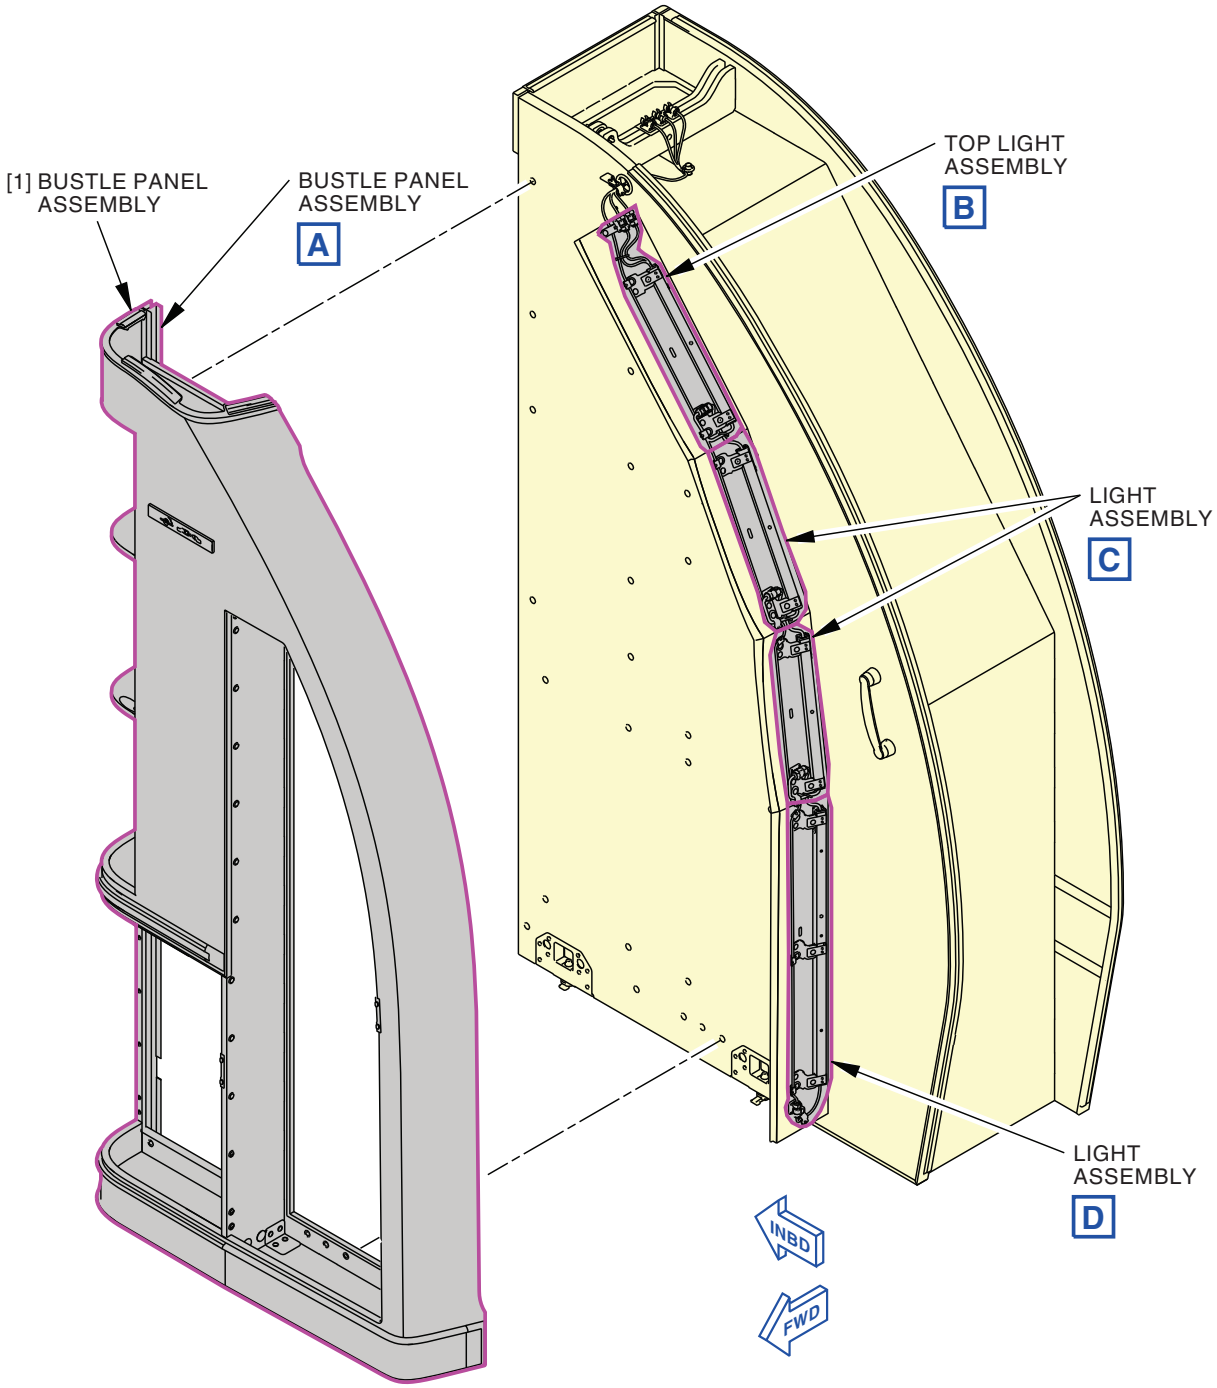



**FORWARD LEFT STOWAGE CLOSET LED LIGHT LOCATION (DOOR PANELS ARE NOT SHOWN) (EXAMPLE)**

2575926 S0000619487_V3

**Closet Light Assembly - Replacement**
**Figure 201/33-26-04-990-801 (Sheet 1 of 4)**




ECCN 9E991 BOEING PROPRIETARY - See title page for details

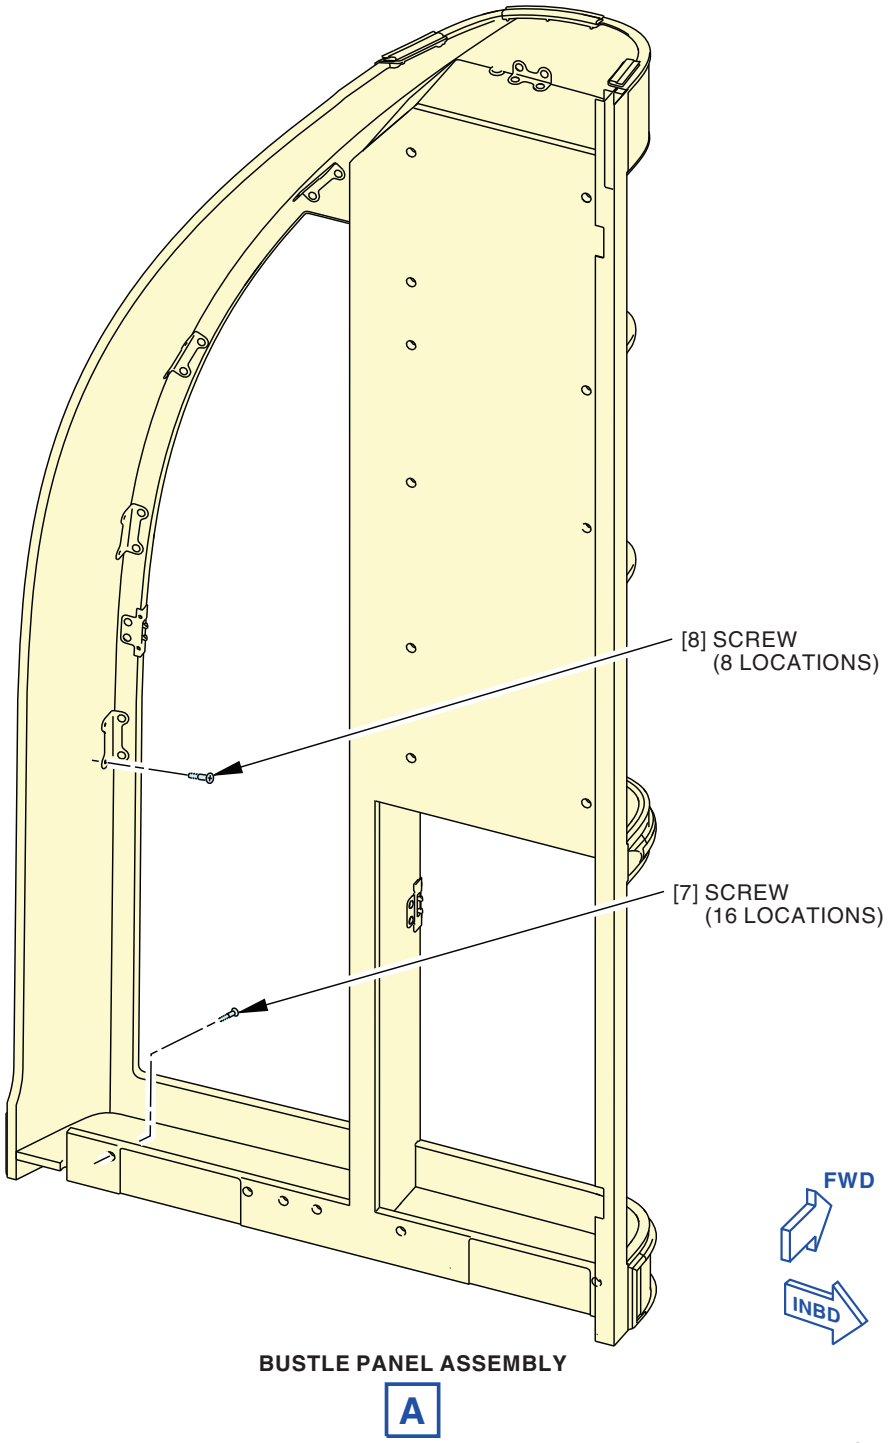


**Closet Light Assembly - Replacement**
**Figure 201/33-26-04-990-801 (Sheet 2 of 4)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

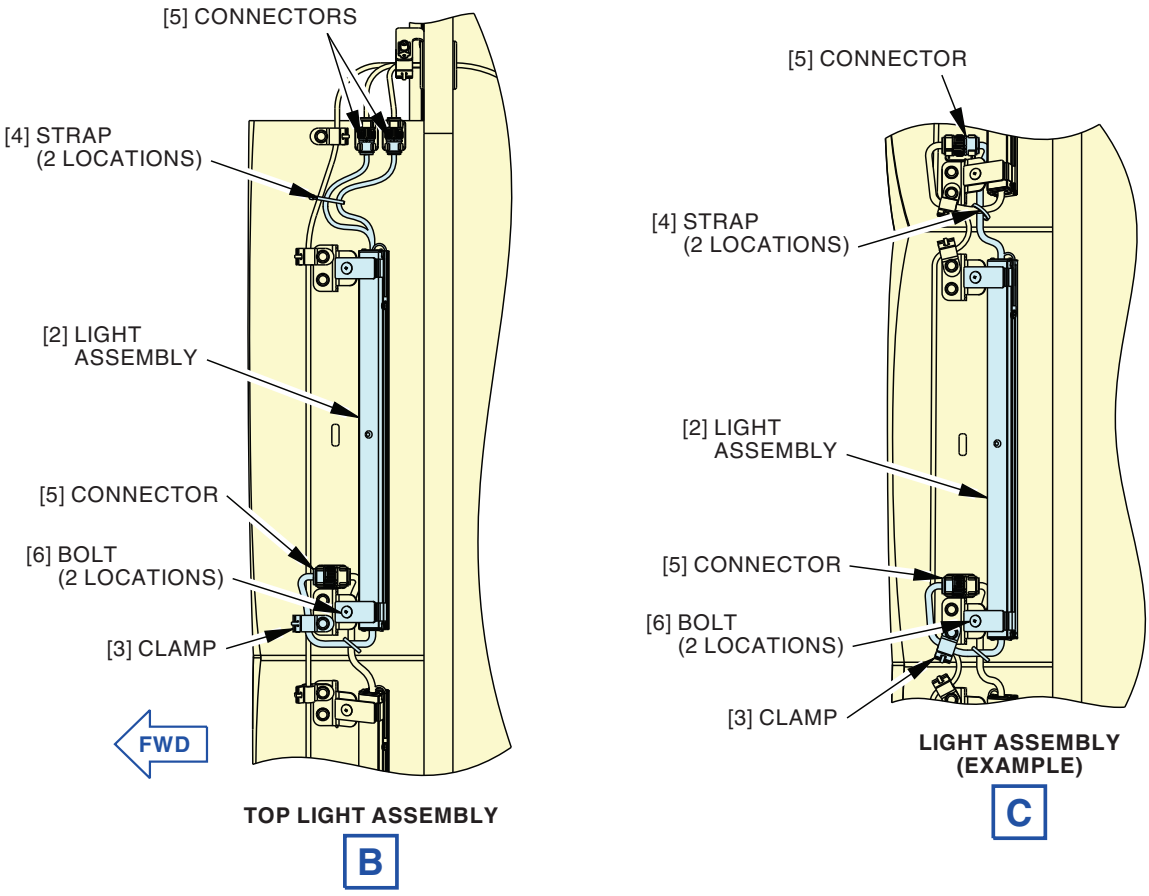



2575927 S0000619488_V3

**Closet Light Assembly - Replacement**
**Figure 201/33-26-04-990-801 (Sheet 3 of 4)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

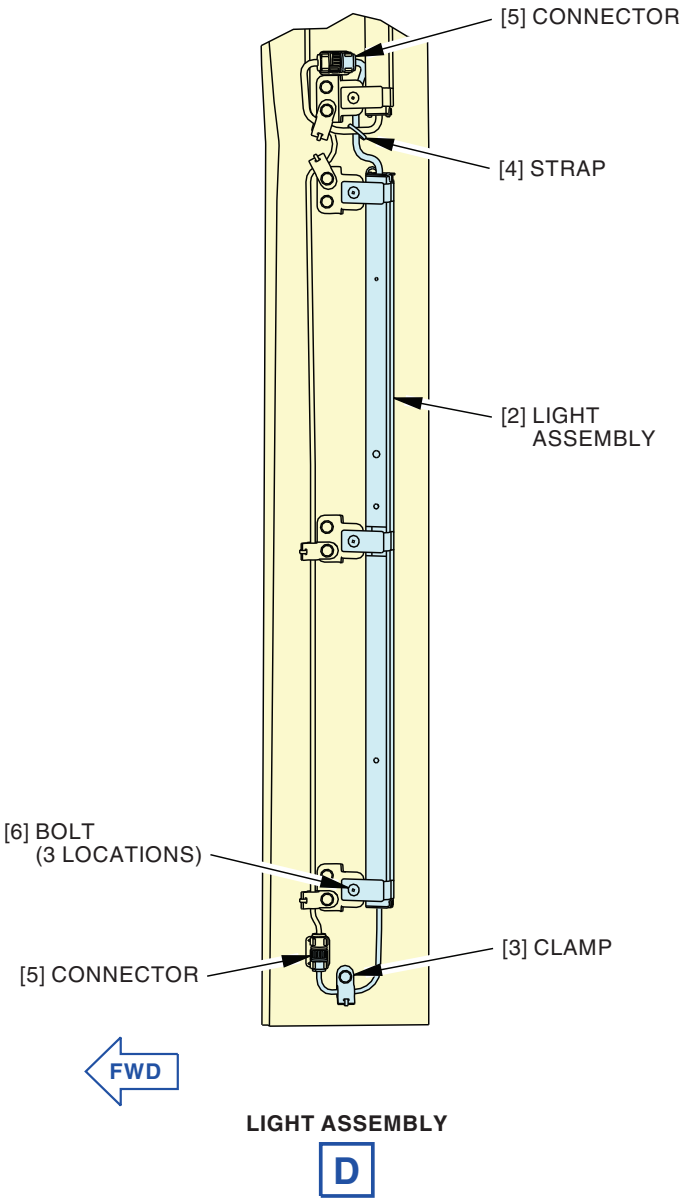


3049784 S0000815409_V1

**Closet Light Assembly - Replacement**
**Figure 201/33-26-04-990-801 (Sheet 4 of 4)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## CLOSET LIGHTS - ADJUSTMENT/TEST

### 1. General

A. This procedure has this task:

(1) An operational test of the closet lights.

**TASK 33-26-04-710-801**

### 2. Closet Lights - Operational Test

#### A. General

(1) The closet lights (accent cove lights) are mounted in the forward left BSI closet bustle or BSI windscreen and are powered from the cove light circuit breaker.

(2) The closet lights (accent cove lights) are controlled by the Attendant Control Panel (ACP).

#### B. Location Zones

| Zone | Area |
|---|---|
| 117 | Electrical and Electronics Compartment - Left |
| 118 | Electrical and Electronics Compartment - Right |
| 211 | Flight Compartment - Left |
| 231 | Forward Passenger Compartment - Forward Entry Door to STA 663.75 - Left |

#### C. Access Panels

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

#### D. Closet Light Operational Test

**SUBTASK 33-26-04-710-002**

(1) Set the CAB/UTIL switch, on the P5-13 panel, to the ON position.

**SUBTASK 33-26-04-010-005**

(2) To get access to the P91 and P92 panels, open this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

**SUBTASK 33-26-04-710-008**

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**(WARNING PRECEDES)**

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(3) Make sure that these circuit breakers are closed:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-26-04-710-004

(4) Make sure that all the closet lights (accent cove lights) come on.

SUBTASK 33-26-04-710-009

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(5) Open these circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-26-04-710-006

(6) Make sure that all the closet lights (accent cove lights) go off.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## E. Put the Airplane Back to Its Usual Condition

SUBTASK 33-26-04-710-010

**WARNING**

WHEN YOU OPEN THE P91 AND P92 PANELS, MAKE SURE THAT THE OUTER DOOR STAYS AS OPEN AS POSSIBLE. IF THE OUTER DOOR TURNS IN, THE ATTACHED DOOR COMPONENTS COULD TOUCH THE INNER DOOR COMPONENTS. THIS CAN CAUSE AN ARC CONDITION WHEN YOU SUPPLY POWER. IF YOU DO NOT OBEY, DAMAGE TO EQUIPMENT AND INJURY TO PERSONNEL CAN OCCUR.

**WARNING**

DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.

(1) Remove the safety tags and close these circuit breakers:

**Power Distribution Panel Number 1, P91**

| Row | Col | Number | Name |
|---|---|---|---|
| C | 4 | C00184 | GND SERV CLG NIGHT CONT |

**Power Distribution Panel Number 2, P92**

| Row | Col | Number | Name |
|---|---|---|---|
| E | 5 | C01939 | COVE LIGHT |

SUBTASK 33-26-04-410-005

(2) Close this access panel:

| Number | Name/Location |
|---|---|
| 117A | Electronic Equipment Access Door |

SUBTASK 33-26-04-710-007

(3) Set the CAB/UTIL switch, on the P5-13 panel, to the OFF position.

——— END OF TASK ———



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## PASSENGER AND LAVATORY CALL LIGHTS - MAINTENANCE PRACTICES

### 1. General

A. This procedure has these tasks:

(1) Passenger and Lavatory Call Lights Deactivation

(2) Passenger and Lavatory Call Lights Activation

(3) Passenger Call Light - PSU LED Call Light Replacement

(4) Lavatory Call Light - Light/Switch Replacement

**TASK 33-27-00-040-801**

### 2. Passenger and Lavatory Call Lights - Deactivation

(Figure 201)

#### A. General

(1) This procedure removes electrical power to the Passenger and Lavatory Call Lights.

#### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

#### C. Passenger and Lavatory Call Lights Deactivation

**SUBTASK 33-27-00-860-001**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| B | 8 | C01404 | PASSENGER CABIN PASS CALL RIGHT |

#### D. Passenger and Lavatory Call Lights - Tryout

NOTE: This tryout is to make sure the Passenger and Lavatory Call Lights are in a zero energy state.

**SUBTASK 33-27-00-700-001**

(1) At the Passenger Service Unit (PSU), press the passenger call switch.

(a) Make sure the passenger call light does not come on.

**SUBTASK 33-27-00-700-002**

(2) At the lavatory, press the lavatory call switch.


(a) Make sure the inside lavatory call light does not come on.

(b) Make sure the outside lavatory call light does not come on.

**END OF TASK**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

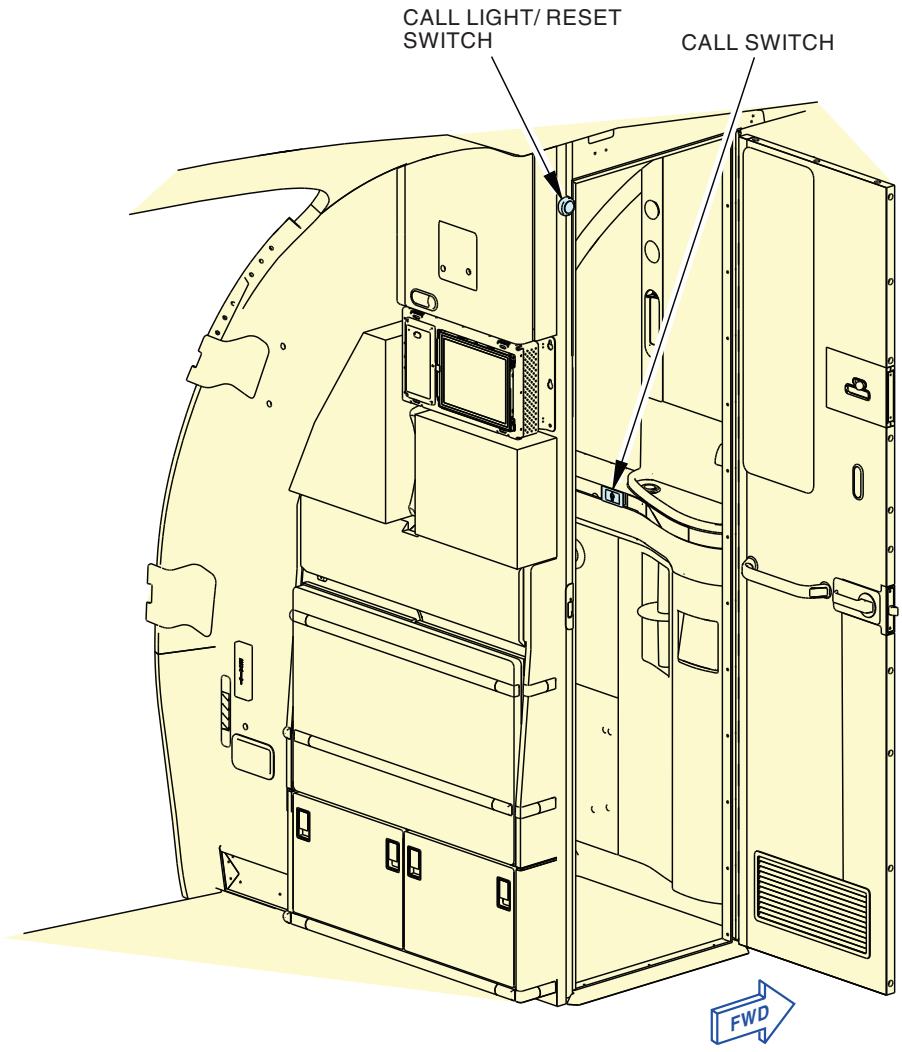



**LAVATORY (EXAMPLE)**

2414635 S00061535641_V1


**Passenger and Lavatory Call Lights**
**Figure 201/33-27-00-990-801 (Sheet 1 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

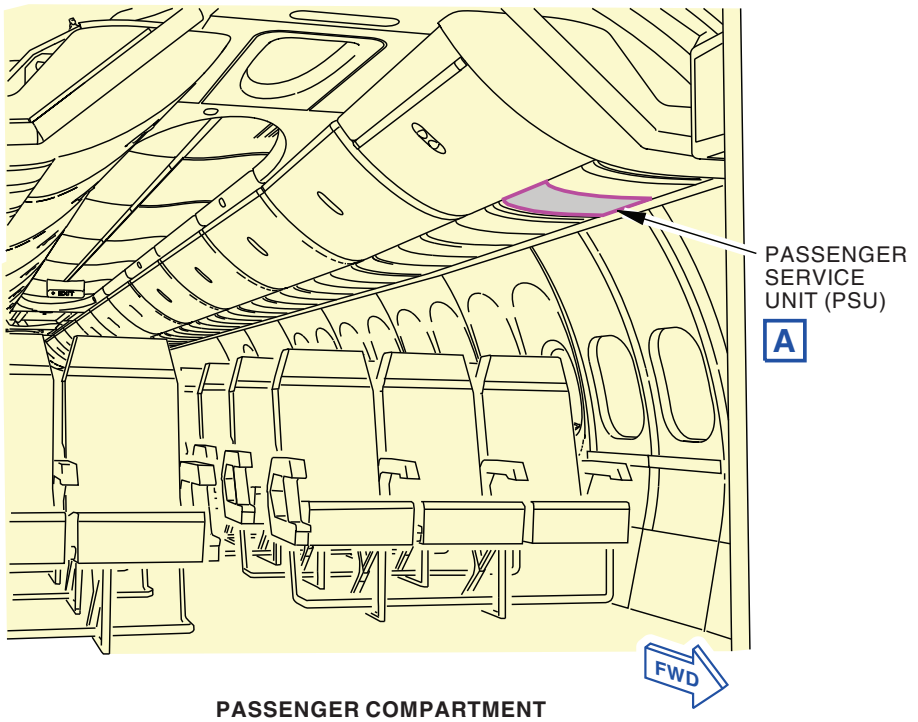


**PASSENGER COMPARTMENT
(EXAMPLE)**

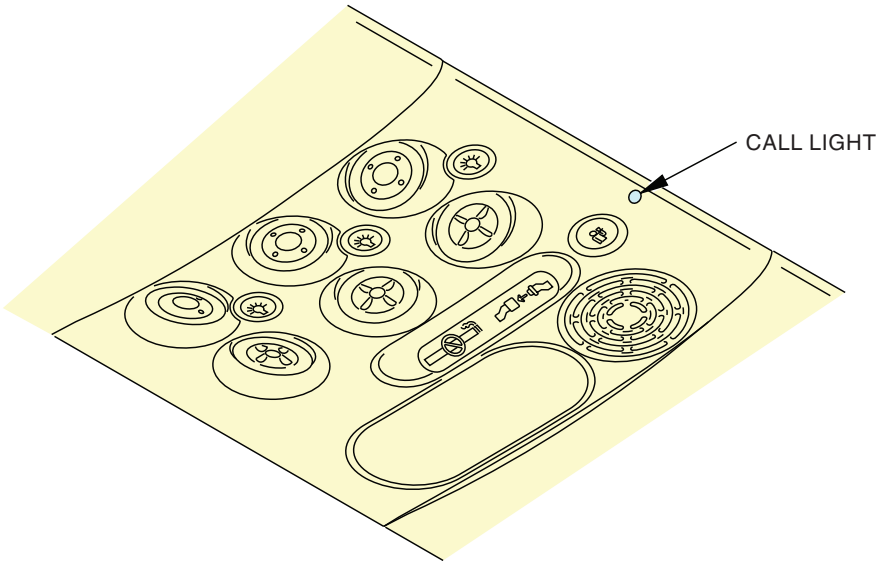


**PASSENGER SERVICE UNIT (PSU)
(EXAMPLE)**

**A**

2414636 S00061535642_V1

**Passenger and Lavatory Call Lights
Figure 201/33-27-00-990-801 (Sheet 2 of 2)**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-27-00-440-801**

## 3. Passenger and Lavatory Call Lights - Activation

(Figure 201)

### A. General

(1) This procedure adds electrical power to the passenger and lavatory call lights

### B. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |
| 211 | Flight Compartment - Left |
| 212 | Flight Compartment - Right |

### C. Procedure

**SUBTASK 33-27-00-860-002**

(1) Remove the safety tags and close these circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| B | 8 | C01404 | PASSENGER CABIN PASS CALL RIGHT |

**——— END OF TASK ———**

**TASK 33-27-00-960-801**

## 4. Passenger Call Light - PSU LED Call Light Replacement

### A. References

| Reference | Title |
|---|---|
| 24-22-00-860-802 | Remove Electrical Power (P/B 201) |
| 25-23-61-000-801 | Passenger Service Unit - Removal (P/B 401) |
| 25-23-61-400-801 | Passenger Service Unit - Installation (P/B 401) |

### B. Tools/Equipment

| Reference | Description |
|---|---|
| STD-8416 | Cutter - Wire, Diagonal or Side, 6 in. (150 mm) |

### C. Consumable Materials

| Reference | Description | Specification |
|---|---|---|
| A00028 | Adhesive - Modified Epoxy For Rigid PVC, Foam Cored Sandwiches | BAC5010 Type 70 (BMS5-92 Type 1) |

### D. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 1 | Call light | 33-27-52-02-070 | PTF ALL |

### E. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |



ECCN 9E991 BOEING PROPRIETARY - See title page for details

## F. Prepare for the Procedure

SUBTASK 33-27-00-860-003

(1) Open the applicable circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| B | 8 | C01404 | PASSENGER CABIN PASS CALL RIGHT |

SUBTASK 33-27-00-010-001

(2) For access to the top of the light assembly, lower the passenger service unit (PSU) (TASK 25-23-61-000-801).

## G. Procedure

SUBTASK 33-27-00-020-001

(1) Remove the call light [1].

(a) Use a diagonal or side wire cutter, STD-8416 if necessary to remove the adhesive that secures the call light [1] to the PSU.

(b) Disconnect the connector [2] from the PSU.

(c) Remove the call light [1].

(d) Remove the lens [3].

SUBTASK 33-27-00-420-001

(2) Install the new call light [1].

(a) Insert the lens [3] into the PSU from the cabin side.

(b) Insert the washer of the call light [1] onto the lens [3] from the component side of the PSU.

(c) Align the key on the lens holder of the call light [1] with the slot on the lens [3] and install the parts together.

(d) Apply two drops of adhesive, A00028 to secure the lens holder to the washer of the call light [1].

(e) If necessary, use a clean cloth to remove the adhesive from the PSU.

(f) Connect the connector [2] to the PSU.

SUBTASK 33-27-00-410-001

(3) Close the PSU (TASK 25-23-61-400-801).

## H. Test

SUBTASK 33-27-00-860-004

(1) Remove the safety tags and close the applicable circuit breakers:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| B | 8 | C01404 | PASSENGER CABIN PASS CALL RIGHT |

(2) Do a test of the new call light [1].

(a) At PSU, set the call switch to the on mode.

1) Make sure that the new call light [1] comes on.

(b) Set the call switch to the off mode.



ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the new call light [1] goes off.

## I. Put the Airplane Back to Its Usual Condition


**SUBTASK 33-27-00-860-005**

(1) If it is not necessary, remove electrical power. To remove it, do this task: Remove Electrical Power, TASK 24-22-00-860-802.


**——— END OF TASK ———**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

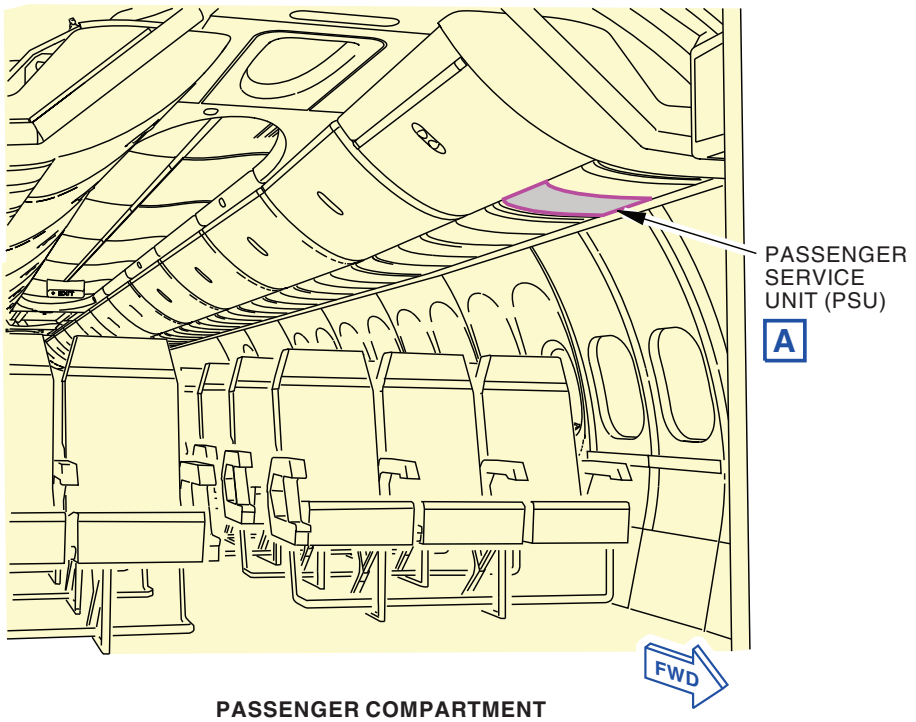


**PASSENGER COMPARTMENT
(EXAMPLE)**

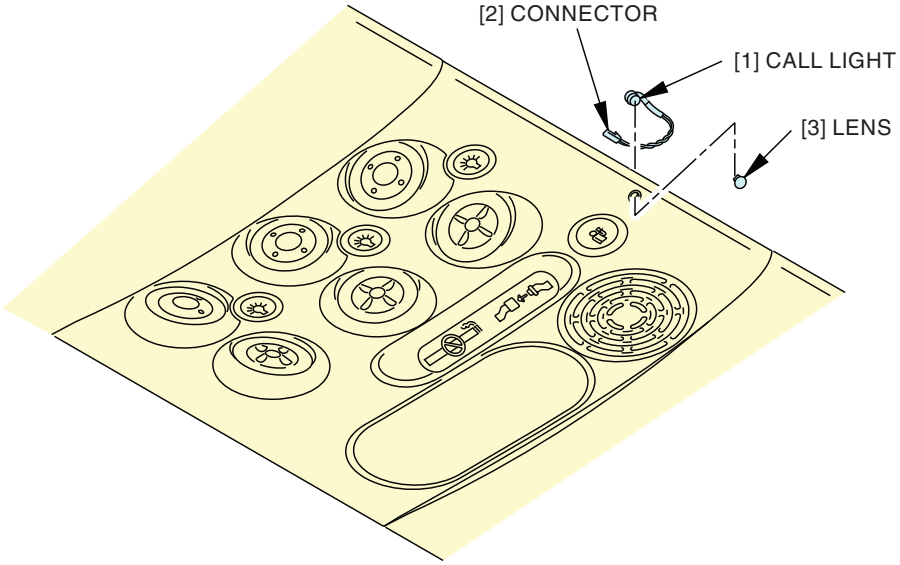


**PASSENGER SERVICE UNIT (PSU)
(EXAMPLE)**

**A**

2414637 S00061535645_V1

**Passenger Call Light - PSU LED Call Light Replacement
Figure 202/33-27-00-990-802**



ECCN 9E991 BOEING PROPRIETARY - See title page for details

**TASK 33-27-00-960-802**

## 5. Lavatory Call Light - Light/Switch Replacement

(Figure 203)

### A. General

(1) The lavatory call lights include these components: (WDM 33-27-11)

(a) A call light/reset switch installed outside each lavatory near the top of the door.

(b) A call switch installed in each lavatory.

### B. References

| Reference | Title |
|---|---|
| 24-22-00-860-802 | Remove Electrical Power (P/B 201) |
| WDM 33-27-11 | Wiring Diagram Manual |

### C. Expendables/Parts

| AMM Item | Description | AIPC Reference | AIPC Effectivity |
|---|---|---|---|
| 4 | Call light/reset switch assembly | 33-27-51-01F-050 | PTF ALL |
| | | 33-27-51-01G-055 | PTF ALL |
| | | 33-27-51-10D-050 | PTF ALL |
| 6 | Call switch assembly | 33-27-51-01F-055 | PTF ALL |
| | | 33-27-51-01G-050 | PTF ALL |
| | | 33-27-51-10D-060 | PTF ALL |

### D. Location Zones

| Zone | Area |
|---|---|
| 200 | Upper Half of Fuselage |

### E. Prepare for the Procedure

**SUBTASK 33-27-00-860-008**

(1) Open these circuit breakers and install safety tags:

**CAPT Electrical System Panel, P18-3**

| Row | Col | Number | Name |
|---|---|---|---|
| A | 8 | C01403 | PASSENGER CABIN PASS CALL LEFT |
| B | 8 | C01404 | PASSENGER CABIN PASS CALL RIGHT |

### F. Procedure

**SUBTASK 33-27-00-860-006**

(1) Do these steps to replace the call light/reset switch assembly [4] outside the lavatory:

(a) Remove the call light/reset switch assembly [4] and pull away from the lavatory wall.

(b) Disconnect the connector [5] from the in-line connection.

(c) Connect the connector [5] of the new call light/reset switch assembly [4] to the in-line connection.

(d) Install the new call light/reset switch assembly [4] into the lavatory wall.

**SUBTASK 33-27-00-860-007**

(2) Do these steps to replace the call switch assembly [6] in the lavatory:

(a) Remove the call switch assembly [6] and pull away from the lavatory wall.

(b) Disconnect the connector [7] from the in-line connection.



ECCN 9E991 BOEING PROPRIETARY - See title page for details