Trim Control Assembly – Maintenance Practices

1. Removal/Installation

A. Remove Trim Control Assembly

1) Place elevator and rudder trim tabs in neutral.

2) Remove pilot's seat (refer to 25-10-00, Flight Compartment – General Data).

3) Remove plexiglass panel from upper surface of trim control assembly.

4) Detach and support fuse and rheostat panel on upper forward face of flight compartment/cabin bulkhead.

5) Remove cabin ceiling panels and flight compartment trim cable cover, to gain access to trim cables.

6) Retain tension in rear trim cables (to prevent unwrapping at screw jack), and disconnect cables at turnbuckles located in rear fuselage.

CAUTION **OWING TO THE VERY SMALL DIAMETER OF THE INDIVIDUAL WIRES OF THE NYLON COVERED 1/16–INCH REAR TRIM CABLES, EXTREME CARE MUST BE TAKEN AT ALL TIMES WHEN HANDLING, AS DAMAGE CAN BE TRANSMITTED THROUGH THE NYLON COVER.**

7) Release forward trim cables from fairleads and pulleys on airframe structure along cable route.

8) Support trim control assembly and remove twelve screws securing assembly to trim console.

9) Withdraw trim control assembly sufficiently to gain access to interior of trim console, and release trim cables from exposed pulleys.

10) Remove trim control assembly from aircraft, withdrawing cables through aircraft structure.

B. Install Trim Control Assembly

1) Ensure elevator trim cables are arranged around cable drum of trim control assembly in approximately neutral position (refer to Figure 1, Detail A).

2) Ensure rudder trim cables are arranged around cable drum of trim control assembly in approximately neutral position (refer to Figure 2, Detail A).

3) Route trim control assembly cables through pulleys and fairleads on airframe structure. Secure pulleys, guard pins and fairleads, where disturbed.

4) Install trim control assembly in trim console. Secure with twelve screws.

5) Connect forward and rear trim cables at turnbuckles (refer to CAUTION in Para 1.A.5)). Release cable tensioning device used to prevent unwrapping at screw jack.

6) Install plexiglass panel on upper surface of trim control assembly.


7) Rig elevator trim tab system (refer to 27-33-00, Elevator Trim Tab System – General Data).

8) Rig rudder trim tab system (refer to 27-23-00, Rudder Trim Tab System – General Data).


9) Install fuse and rheostat panel on flight compartment/cabin bulkhead.

10) Install removed cabin ceiling panels and flight compartment/cabin bulkhead trim cable cover.

11) Install pilot's seat (refer to 25-10-00, Flight Compartment – General Data).

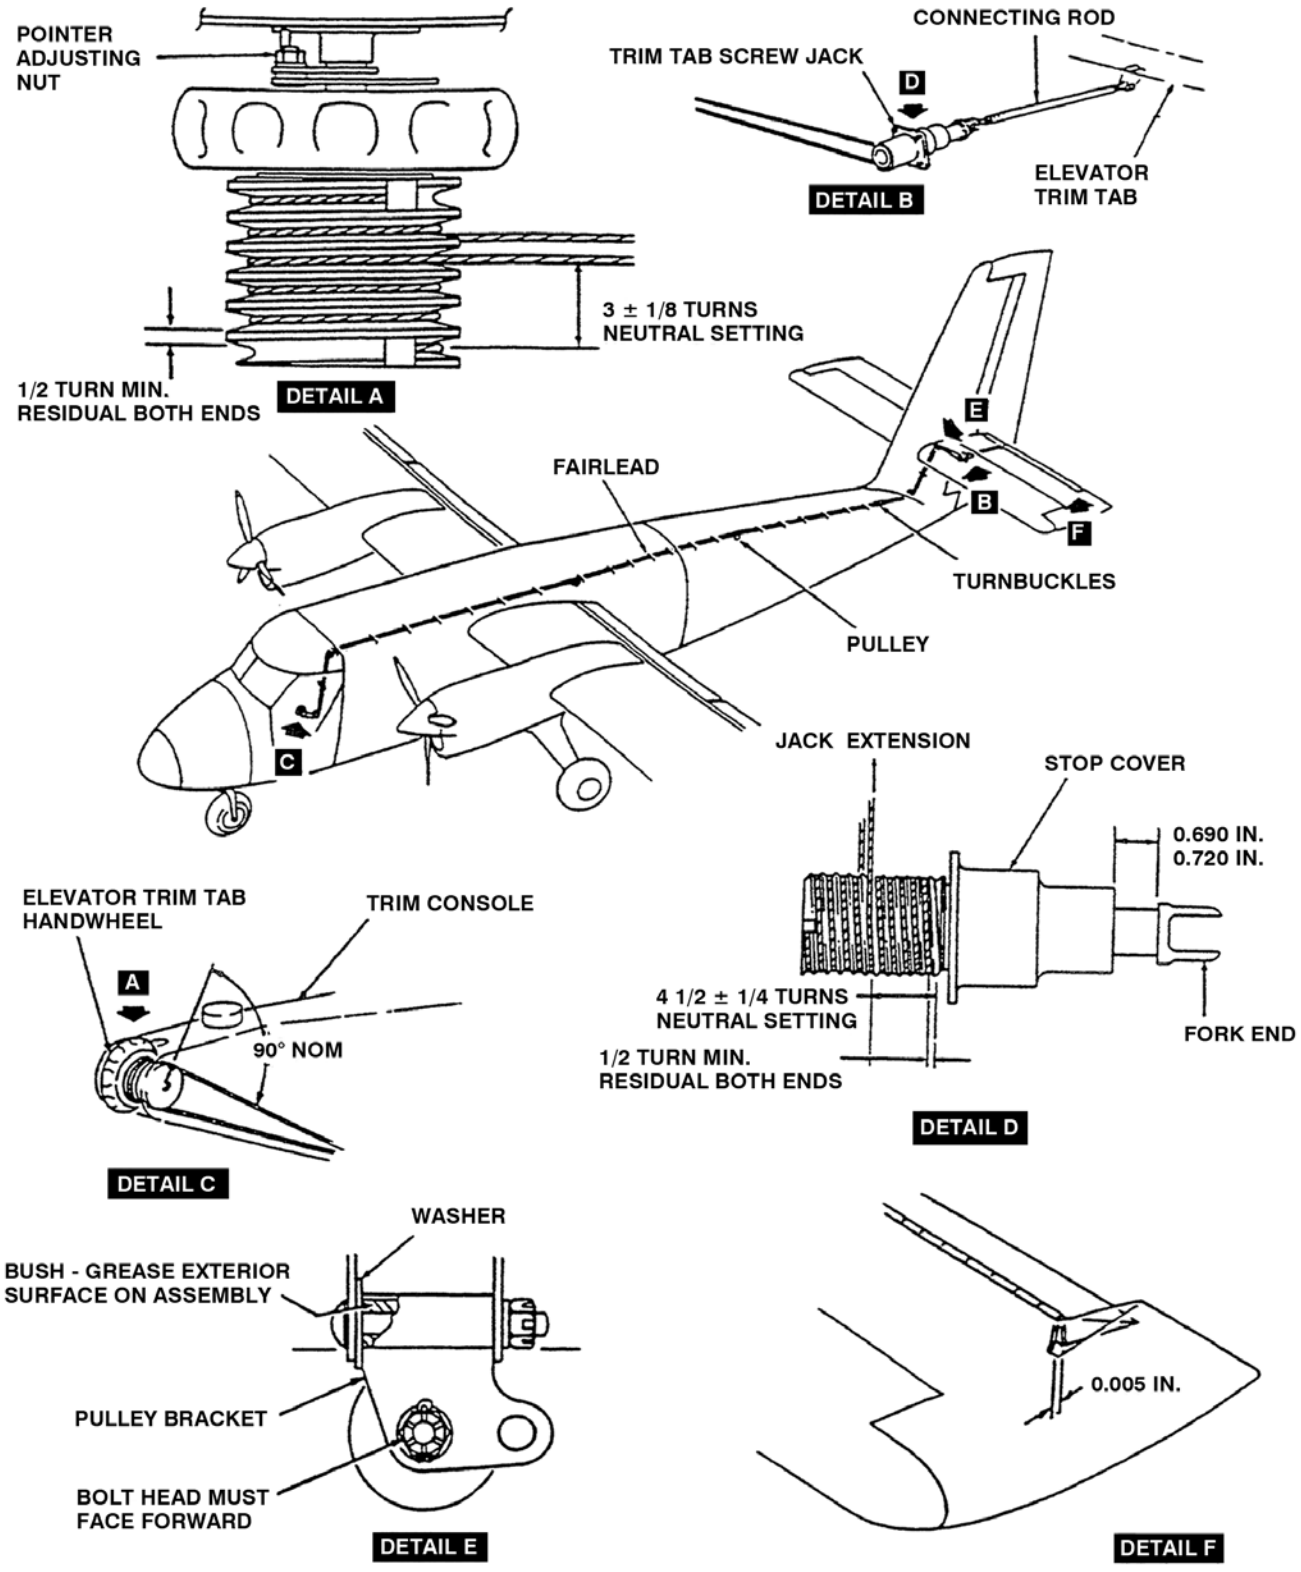

Elevator Trim Tab System – Rigging (Mod 6/1219)
Figure 1

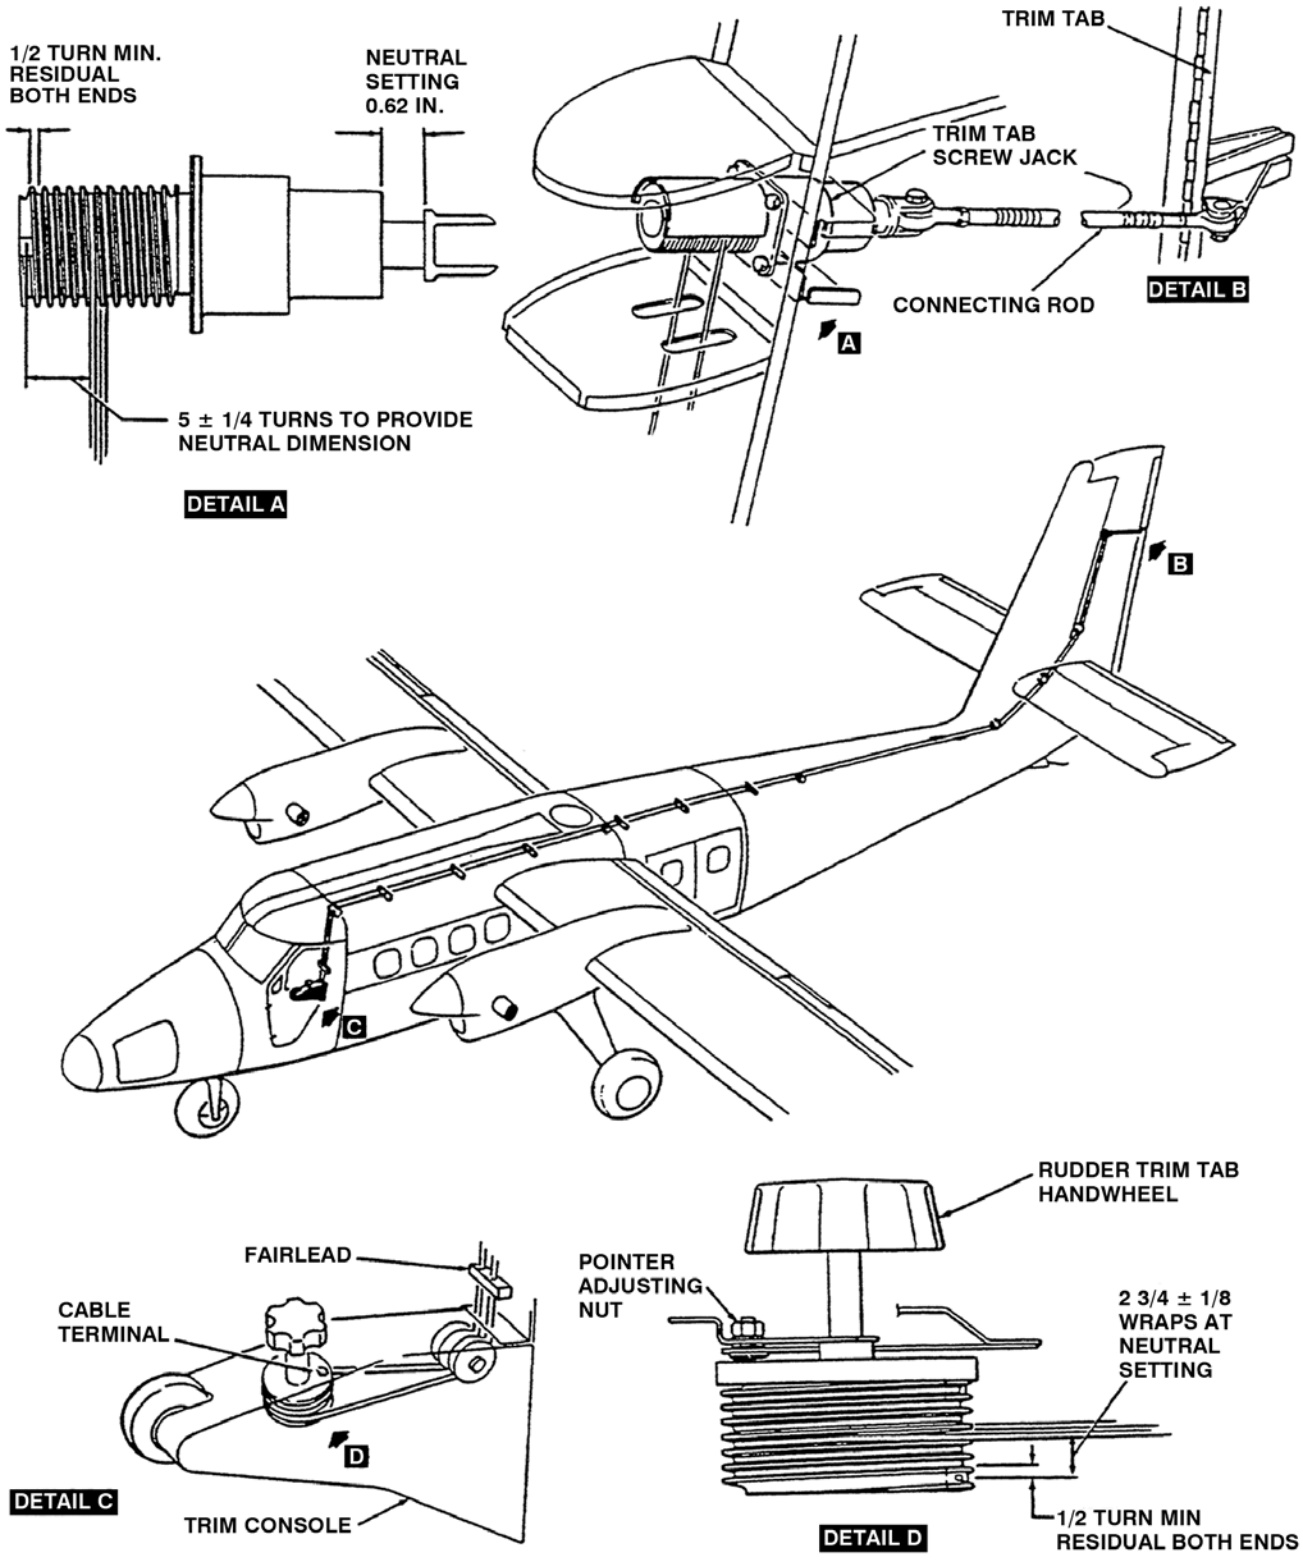

Rudder Trim Tab System (Mod 6/1219)
Figure 2