Crossfeed Valve – Maintenance Practices

1. Removal/Installation

Refer to Figure 1 for details.

A. Remove Crossfeed Valve

1) Ensure battery and/or DC power (refer to 12-00-00, Servicing – General Data, Para 2.) is disconnected, and wing fuel tank switches (if fitted) are OFF.

2) Drain fuselage fuel tanks (refer to 12-10-10, Fuel System – General Data).

3) Remove access panel from underside of fuselage (refer to 12-00-00, Servicing – General Data).

4) Disconnect electrical connector from crossfeed valve.

5) Remove four retaining bolts from rear of valve, disconnect fuel line at rear end, and remove fuel line assembly.

6) Remove valve front four retaining bolts.

7) Remove crossfeed valve from front pipe flange.

8) Cap all openings.

B. Install Crossfeed Valve

1) Position valve in sump plate recess, install front four retaining bolts and washers.


2) Install fuel line assembly, tighten line connection and valve four rear retaining bolts and washers.

3) Check for fuel leaks.

4) Connect electrical connector to valve.

5) Connect battery and/or DC power (refer to 12-00-00, Servicing – General Data, Para 2.), check operation of valve.

6) Install access panel (refer to 12-00-00, Servicing – General Data).

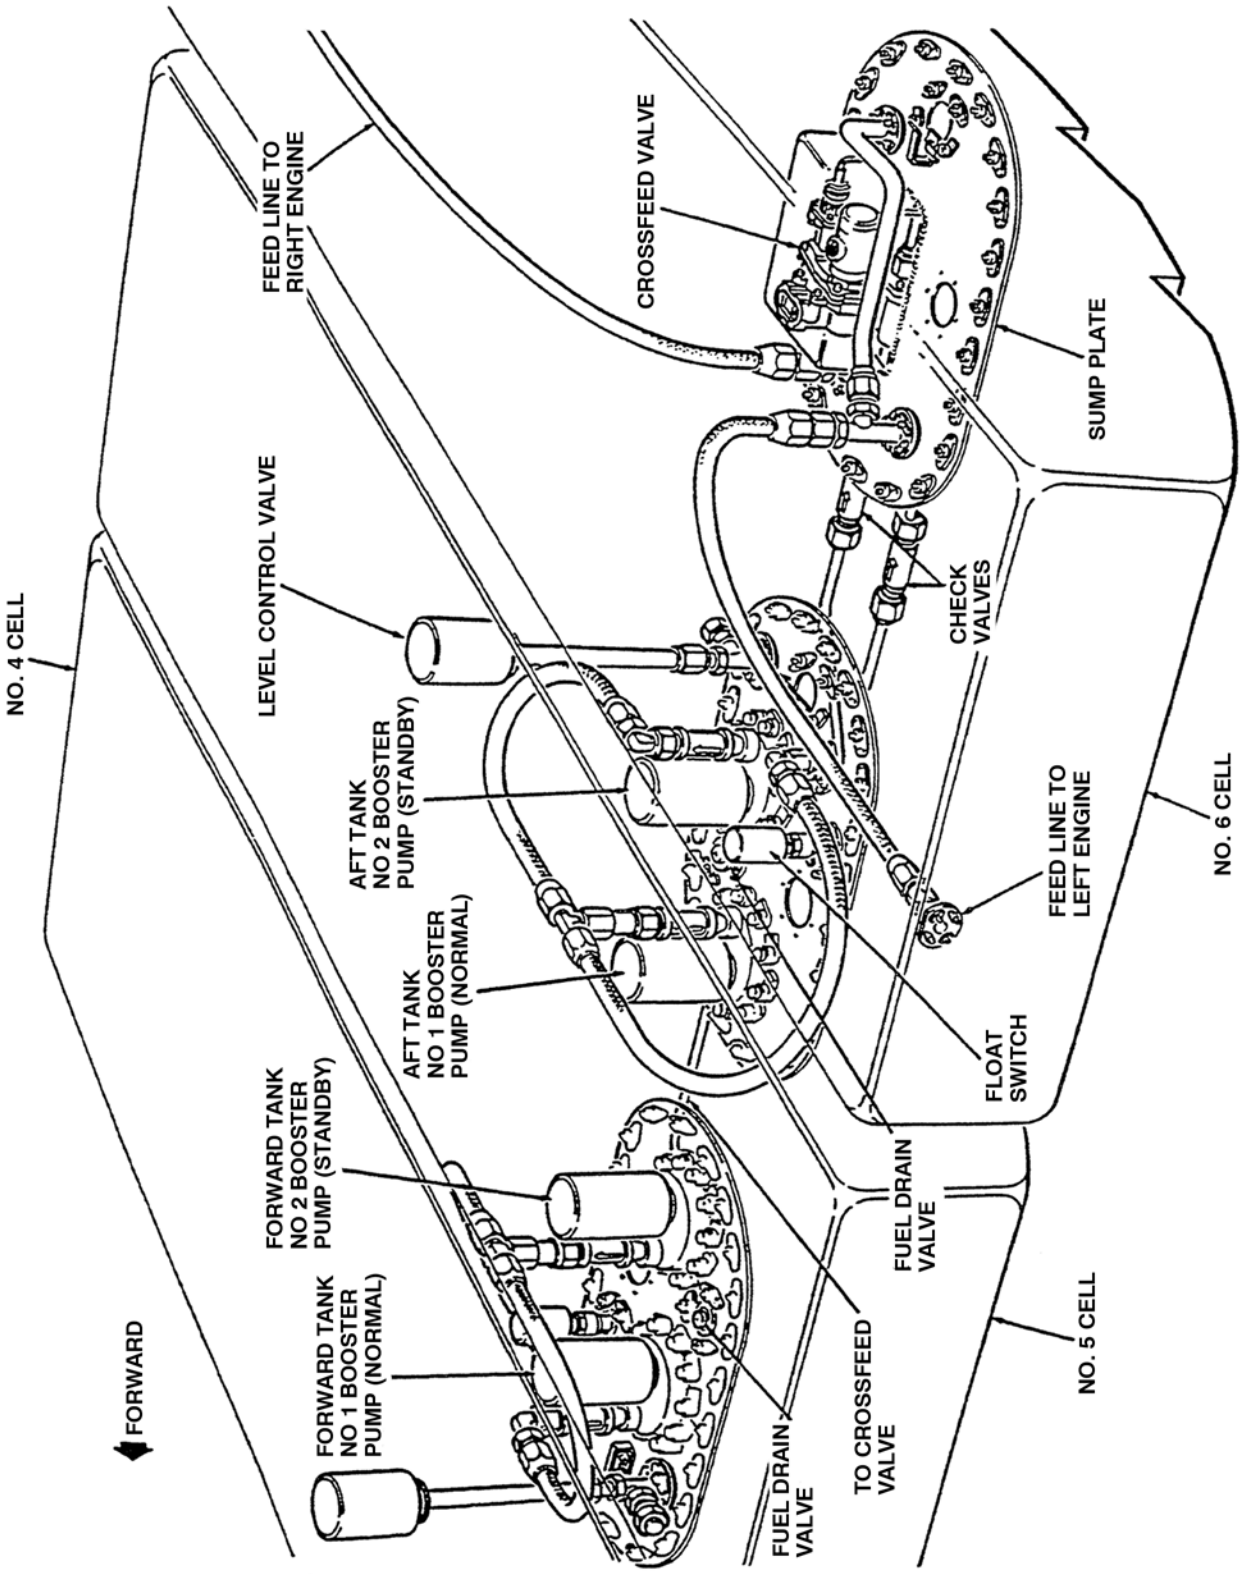

Booster Pump and Crossfeed Valve Installation
Figure 1

Print Date: 2025-09-15

2. Adjustment/Test

A. Operational Test

1) Remove access panel from underside of fuselage (refer to 12-00-00, Servicing – General Data).

2) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

3) Ensure FUEL CROSSFEED circuit breaker is in.

4) Position FUEL SELECTOR switch to BOTH ON (AFT or FWD).

5) Observe crossfeed valve open indication is presented as a green fuel pane text block “Crossfeed” on the fuel indication display pane.

6) Check red indicator arm on crossfeed valve has rotated to the open (down) position.

7) Position FUEL SELECTOR switch to NORMAL.

8) Check red indicator arm on crossfeed valve has rotated to the closed (up) position.

9) Observe crossfeed valve open indication text block “Crossfeed” on the fuel pane display is no longer displayed.

Note A “Fuel Crossfeed Fail” caution message will be displayed if the position of the crossfeed valve does not match the position of the FUEL SELECTOR switch. If the crossfeed valve caution message is active and the position of the FUEL SELECTOR switch is to BOTH ON (AFT or FWD), the text block “Crossfeed” will be displayed in amber text.

10) Disconnect DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

11) Install access panel to underside of fuselage (refer to 12-00-00, Servicing – General Data).

This Page Intentionally Left Blank