Fuel Low Pressure Switch (Post Mod 6/2327) (Post Mod 6/2464) – General Data

1. Removal/Installation

   A. Remove Fuselage Tank Fuel Low Pressure Switch

      1) Ensure battery and/or electrical power supply is disconnected and crossfeed valve closed.

      2) Drain applicable fuselage fuel tank (refer to 12-10-10, Fuel System – General Data).

      3) Remove access panel from underside of fuselage (refer to 12-00-00, Servicing – General Data).

      4) Disconnect electrical connection at switch.

      5) Remove switch from tee (Pre Mod 6/2422) or elbow (Post Mod 6/2422) on pump baseplate and cap opening.

   B. Install Fuselage Tank Fuel Low Pressure Switch

      1) Apply Titeseal #2 or #3 to first three threads of switch.

         CAUTION ENSURE THERE IS NO LUBRICANT IN SWITCH ORIFICE.

      2) Thread switch into tee (Pre Mod 6/2422) or elbow (Post Mod 6/2422) on pump baseplate.

      3) Check for fuel leaks.

      4) Install access panel. (Refer to 12-00-00, Servicing – General Data).

2. Adjustment/Test

   A. Bench Test

      Equipment required:

      - Manometer (0 to 10 psi)
      - Regulated air pressure supply (0 to 150 psi)
      - Pressure gauge (0 to 150 psi)
      - Megohmmeter
      - Continuity tester

      1) Test Insulation Resistance

         a) Set megohmmeter to 500 Volt DC output potential.

         b) Measure resistance between each wire of pressure switch and case. Minimum allowable is 20 megohms.

      2) Leak Test Pressure Switch

         a) Connect pressure switch to pressure air supply through the 0 to 150 psi gauge.

         b) Slowly apply increasing air pressure to switch up to 60 psi.

         c) Seal off air pressure source, hold for one minute, and check that no leakage is indicated by the pressure gauge.

         d) Slowly vent off air pressure.

3) Test Operation of Pressure Switch

Refer to Figure 1for details.

a) Connect pressure switch to pressure air supply through the manometer.

b) Connect continuity tester to switch wires. Ensure continuity across wires.

c) Slowly apply air pressure to pressure switch. Check continuity is lost at ≤ 4.5 psi.

d) Continue to raise pressure to 10 psi.

e) Seal off air pressure source.

f) Slowly vent off air pressure. Check that continuity returns as the pressure decreases to 3.5 ± 0.5 psi.

g) Complete venting of air pressure and disconnect pressure switch from bench rig connections.

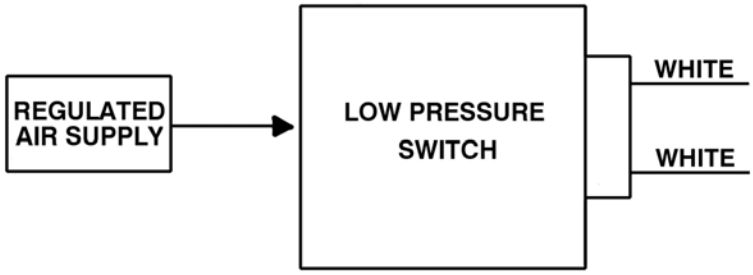

Low Pressure Switch Testing
Figure 1