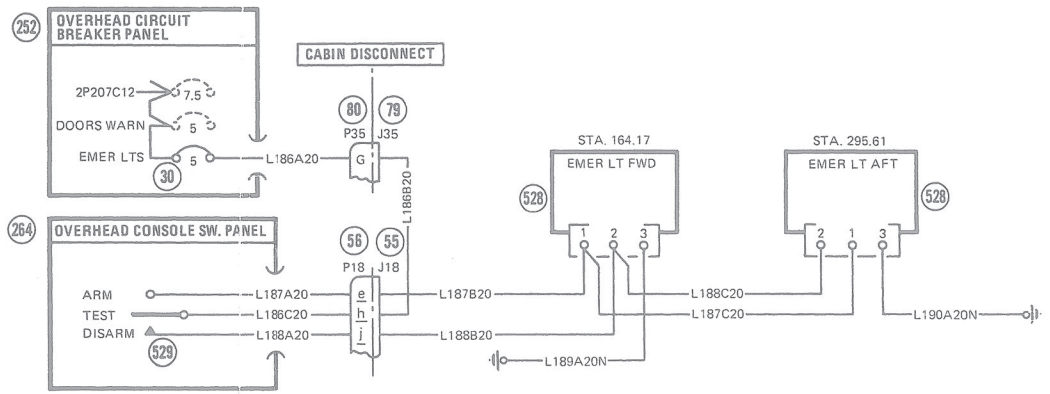

EMERGENCY LIGHTS
(S.O.O. 6179)

C6N1108/-/- ISSUE NO. 1

LIST OF EFFECTIVE PAGES: CHAPTER 34: NAVIGATION

Reference	Page	Date
Contents	*1	May 7 /82
34-21-00	1	Jun 16 /80
34-22-00	1	Mar 10 /76
34-22-02	*1	May 7 /82
34-23-00	*1	May 7 /82
34-24-00	1	Mar 10 /76
	2	Jun 8 /71
	3	Mar 1 /69

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 34 - NAVIGATION

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
ATTITUDE AND DIRECTION	34-20-00	
Turn and Slip Indicator	34-21-00	1
Attitude Indicator AIM500ED	34-22-00	1
Attitude Indicator AIM510-10-( ) (S.O.O. 6176)	34-22-02	1
Directional Gyro Indicator AIM200ED - ( )	34-23-00	1
Gyro Compass System - AIM400EL	34-24-00	1
Gyro Compass System - AIM800EEL		2
Gyro Compass System Signal Distribution		3

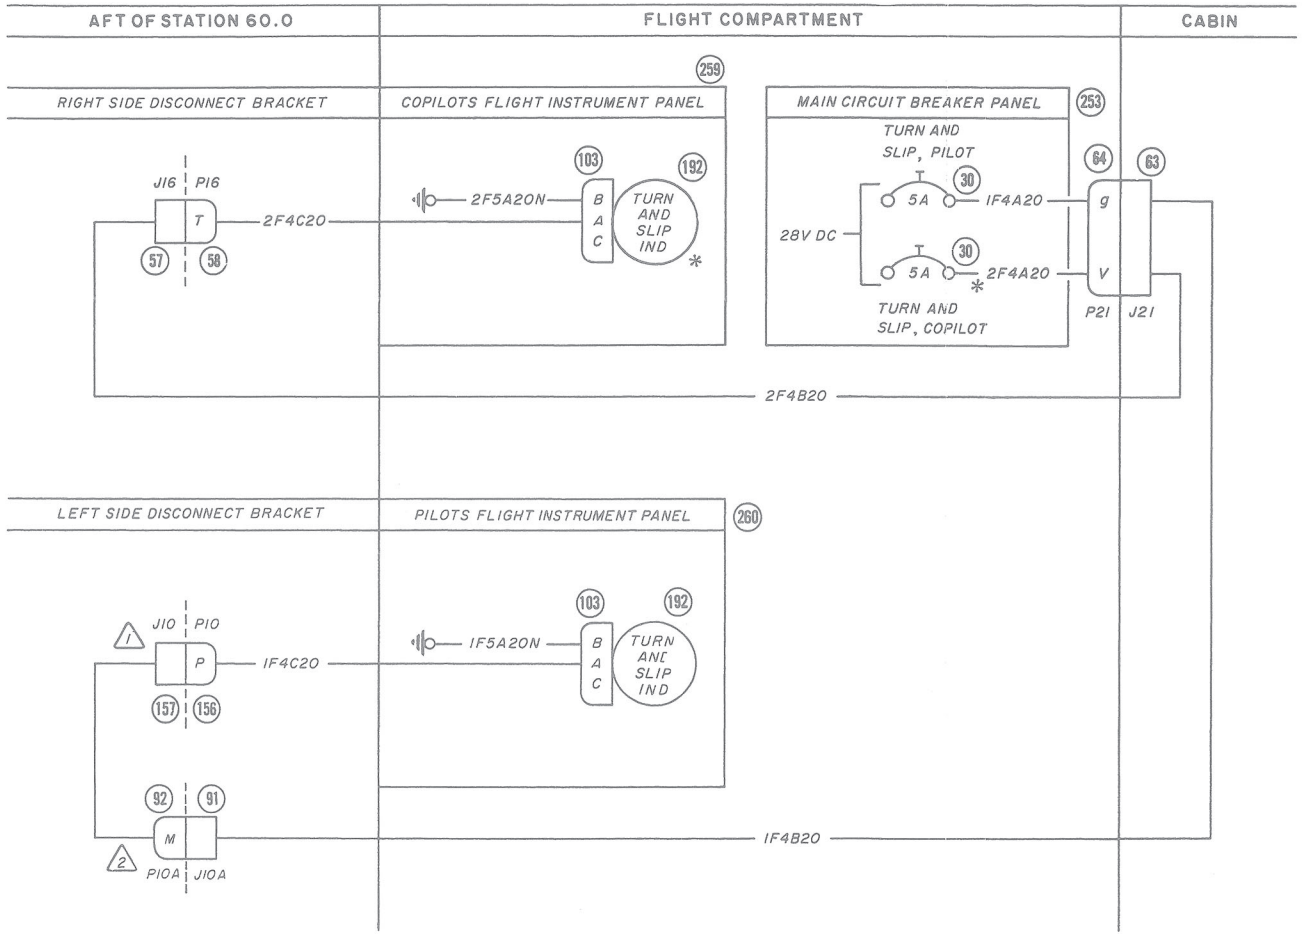

* CUSTOMER OPTION EQUIPMENT NOW MOD 6/1604.

1 PRE-MOD 6/1475

2 MOD 6/1475

TURN AND SLIP INDICATOR									
C6N1002/14/8	ISSUE NO.	1	2	3					

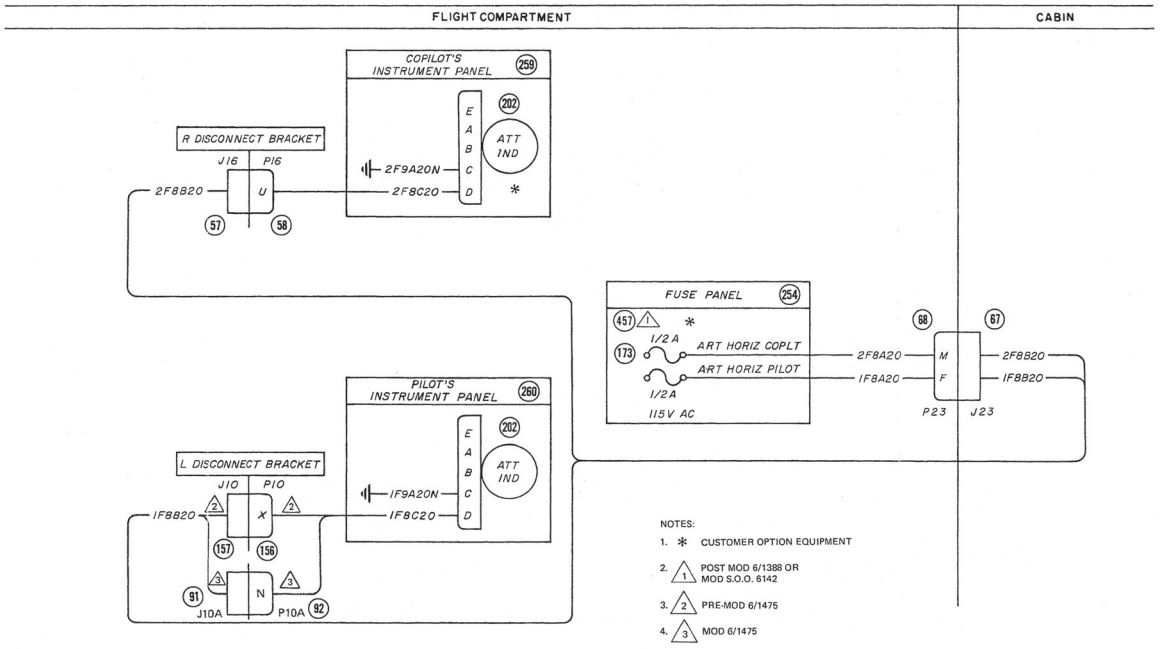

NOTES:

1. * CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1388 OR MOD S.O.O. 6142
3. △2 PRE-MOD 6/1475
4. △3 MOD 6/1475

ATTITUDE INDICATOR AIM 500ED

C6N 1002/24/B ISSUE NO. 1 2 3

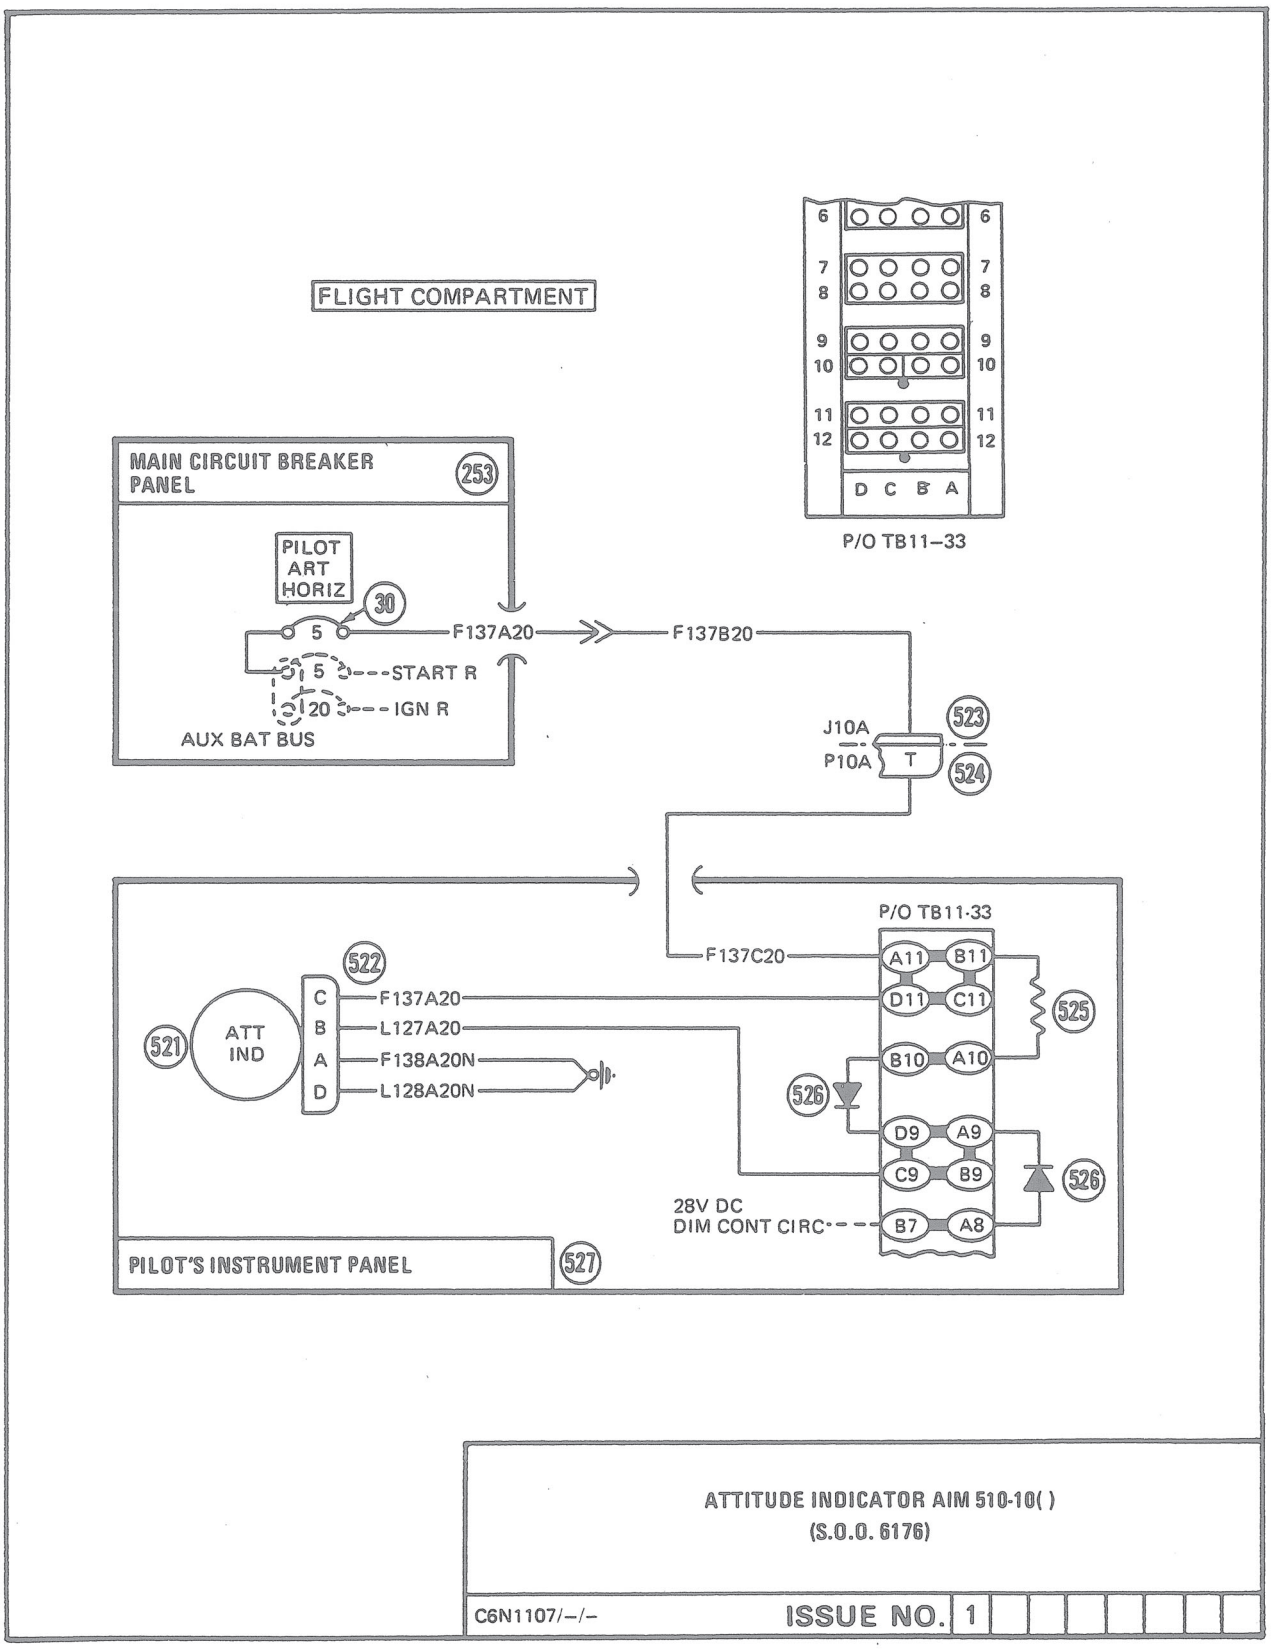

ATTITUDE INDICATOR AIM 510-10( )
(S.O.O. 6176)

C6N1107/–/– ISSUE NO. 1

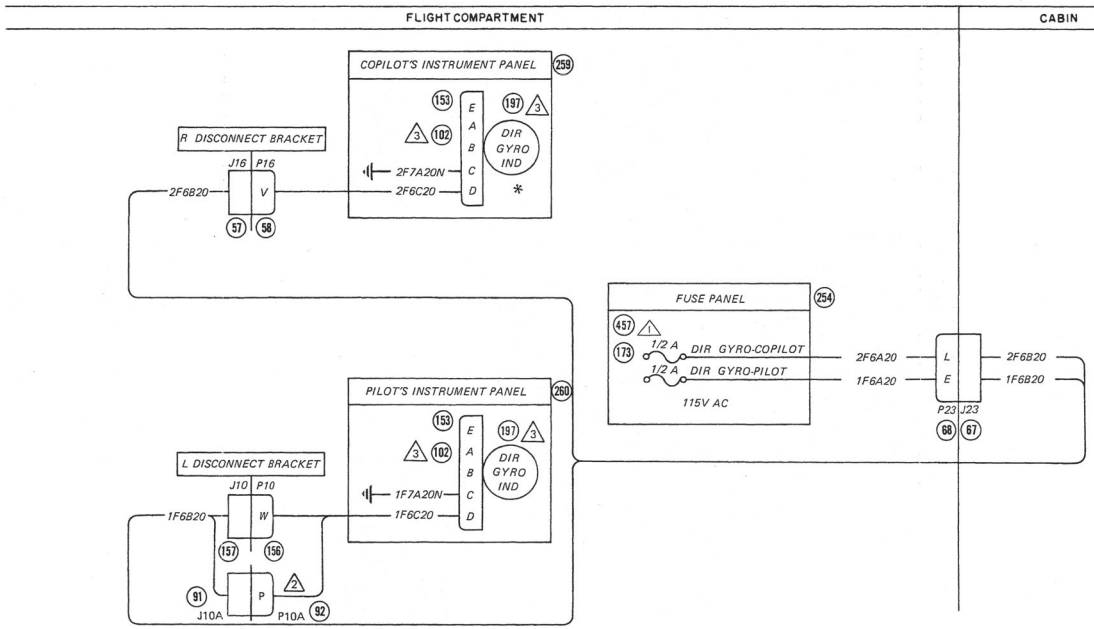

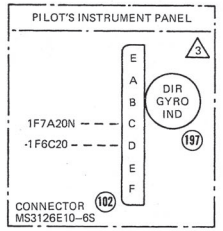

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. 1 POST MOD 6/1388 OR MOD S.O.O. 6142
3. 2 MOD 6/1475 AND PRE MOD 6/1750
4. 3 MOD 6/1750

DIRECTIONAL GYRO INDICATOR AIM 200E D-( )

C6N 1002/24/B ISSUE NO. 1 2 3 4 5

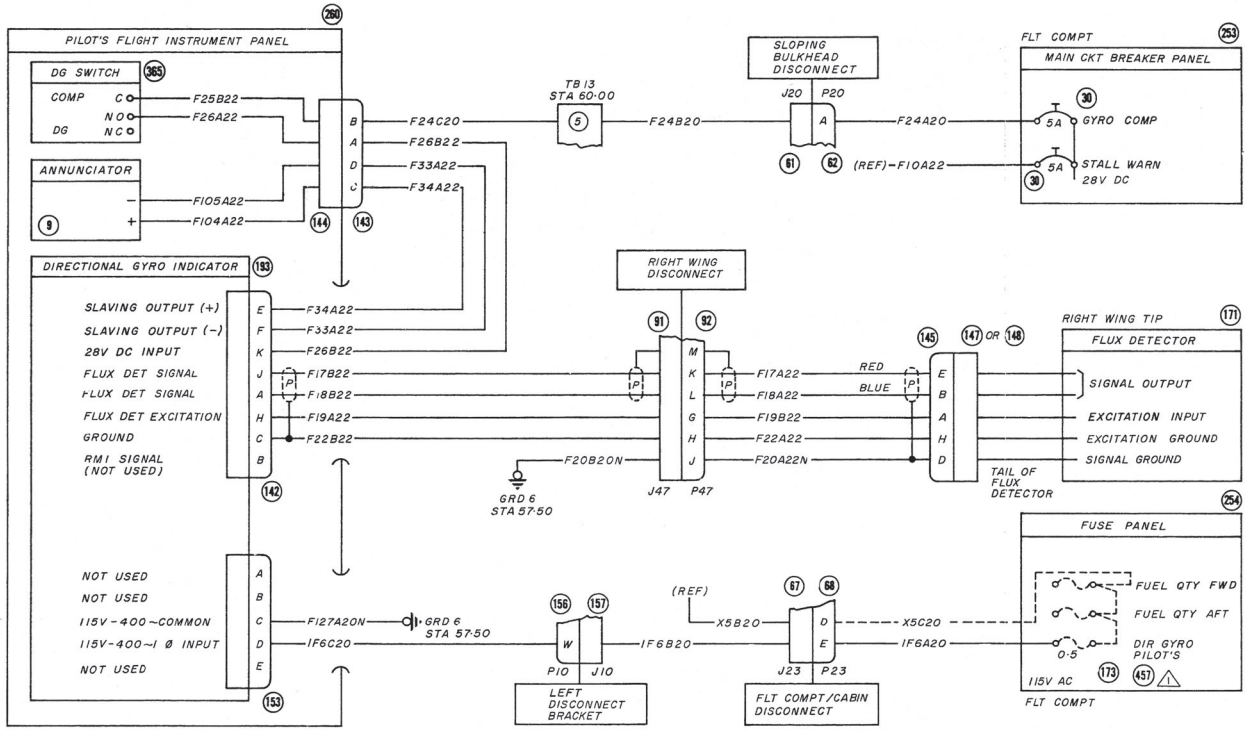

NOTES:

1. ⚠ POST MOD 6/1388 OR MOD S.O.O. 6142

GYRO COMPASS SYSTEM AIM 400EL

C6J1081/- ISSUE NO. 1 2 3

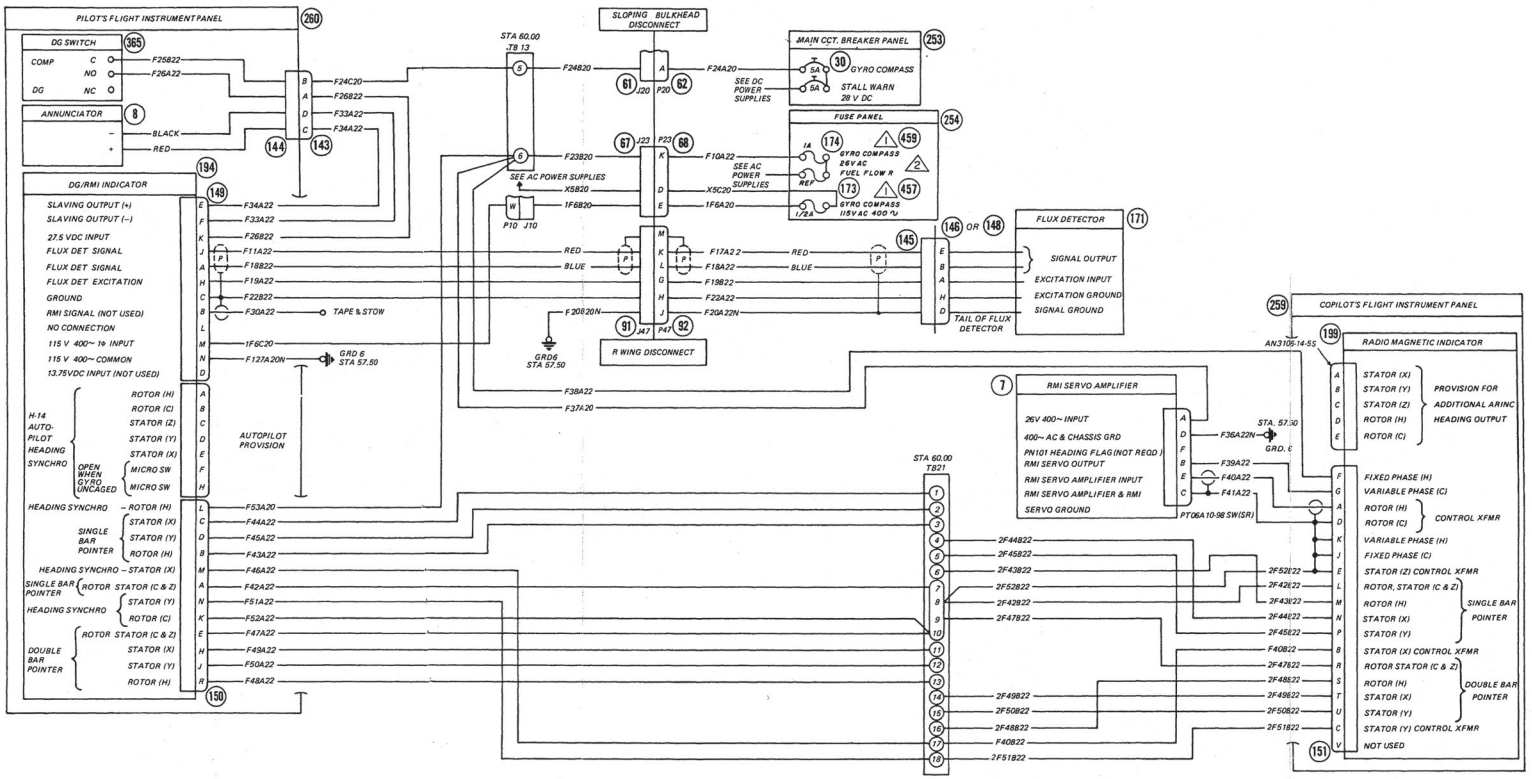

NOTES:

1. ⚠1 POST MOD 6/1388
2. ⚠2 POST MOD S.O.O. 6142 BOTH FUSES 1/2A (457)

GYRO COMPASS SYSTEM AIM 800EEL

C6J1068/A ISSUE NO. 1 2

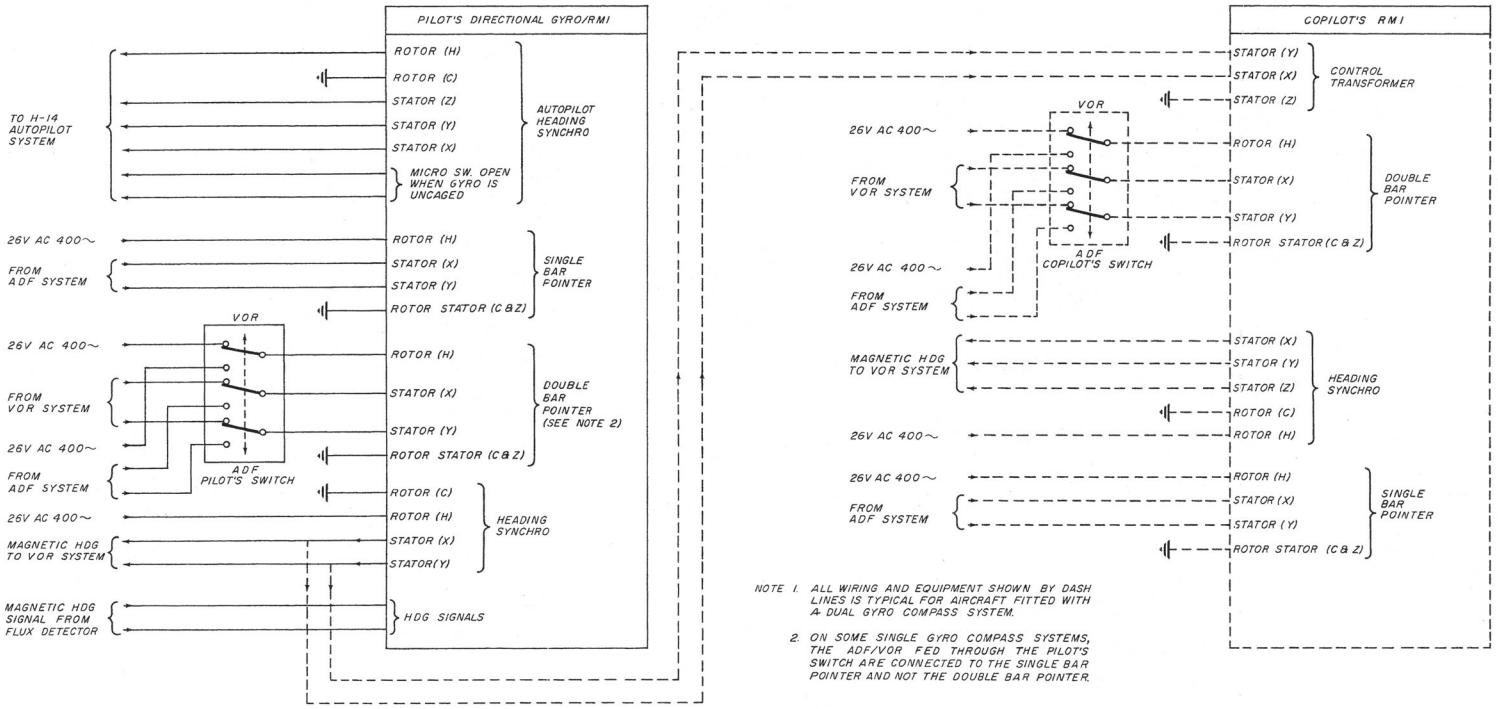

NOTE 1. ALL WIRING AND EQUIPMENT SHOWN BY DASH LINES IS TYPICAL FOR AIRCRAFT FITTED WITH A DUAL GYRO COMPASS SYSTEM.

2. ON SOME SINGLE GYRO COMPASS SYSTEMS, THE ADF/VOR FED THROUGH THE PILOT'S SWITCH ARE CONNECTED TO THE SINGLE BAR POINTER AND NOT THE DOUBLE BAR POINTER.

GYRO COMPASS SYSTEM SIGNAL DISTRIBUTION

N/A ISSUE NO. 1

LIST OF EFFECTIVE PAGES: CHAPTER 36: PNEUMATIC

Reference	Page	Date
Contents	1	Mar 1/69
36-10-00	1	Mar 1/69

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 36 - PNEUMATIC

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
DISTRIBUTION	36-10-00	
Pneumatic Low Pressure Warning System		1

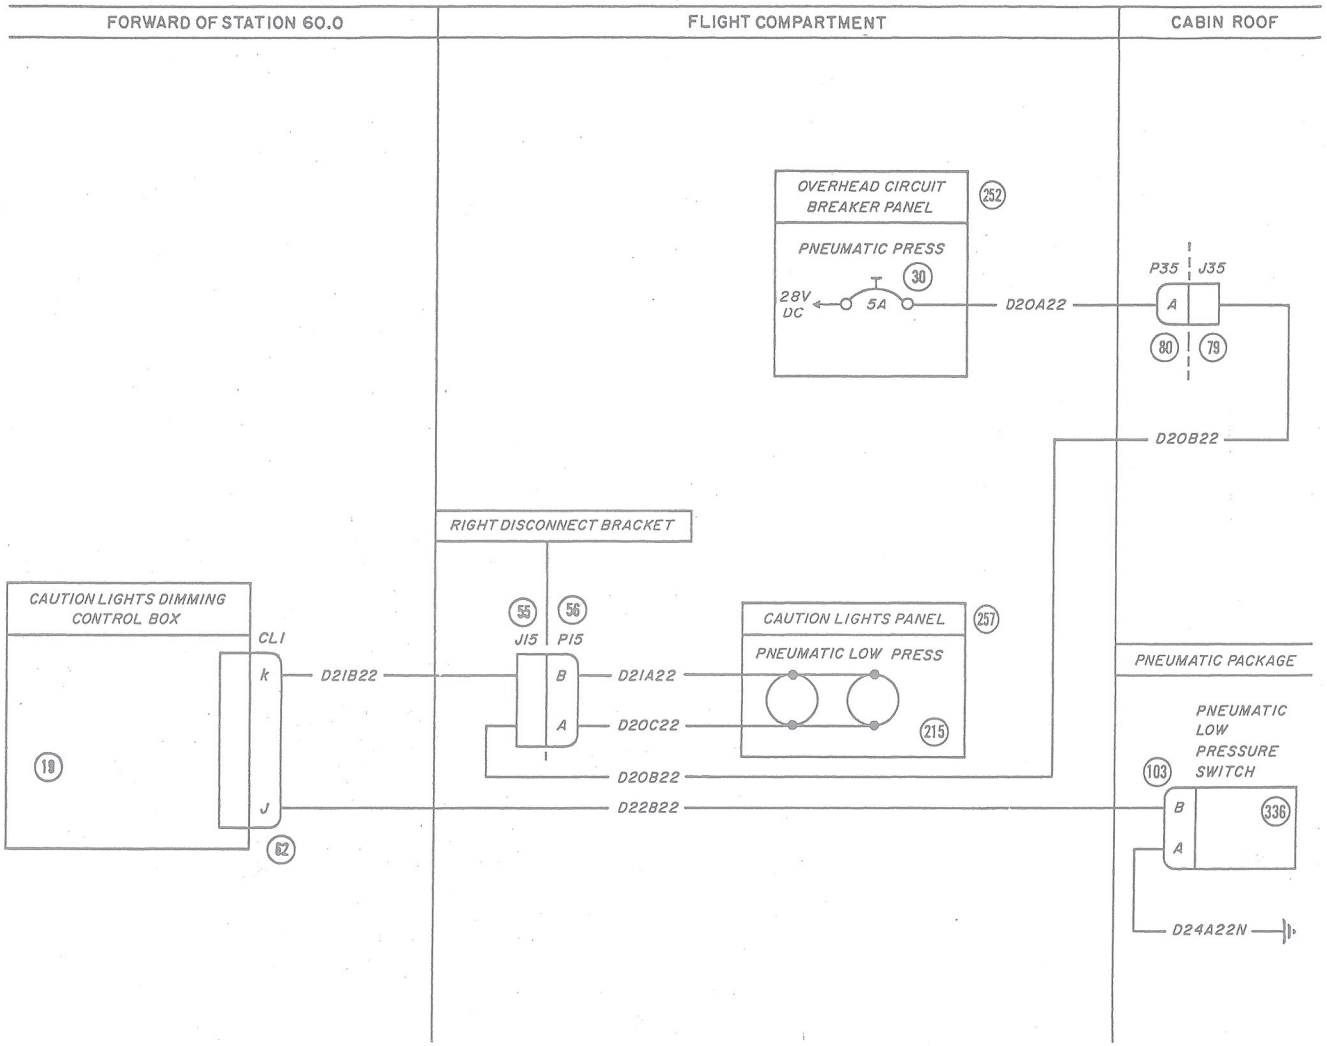

PNEUMATIC LOW PRESSURE WARNING SYSTEM

C6N1002/34/A ISSUE NO. 1

LIST OF EFFECTIVE PAGES: CHAPTER 52: DOORS

Reference	Page	Date
Contents	1	Mar 1/69
52-70-00	*1	Jun 8/71

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 52 - DOORS

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
DOOR WARNING	52-70-00	
Doors Unlocked Caution		1

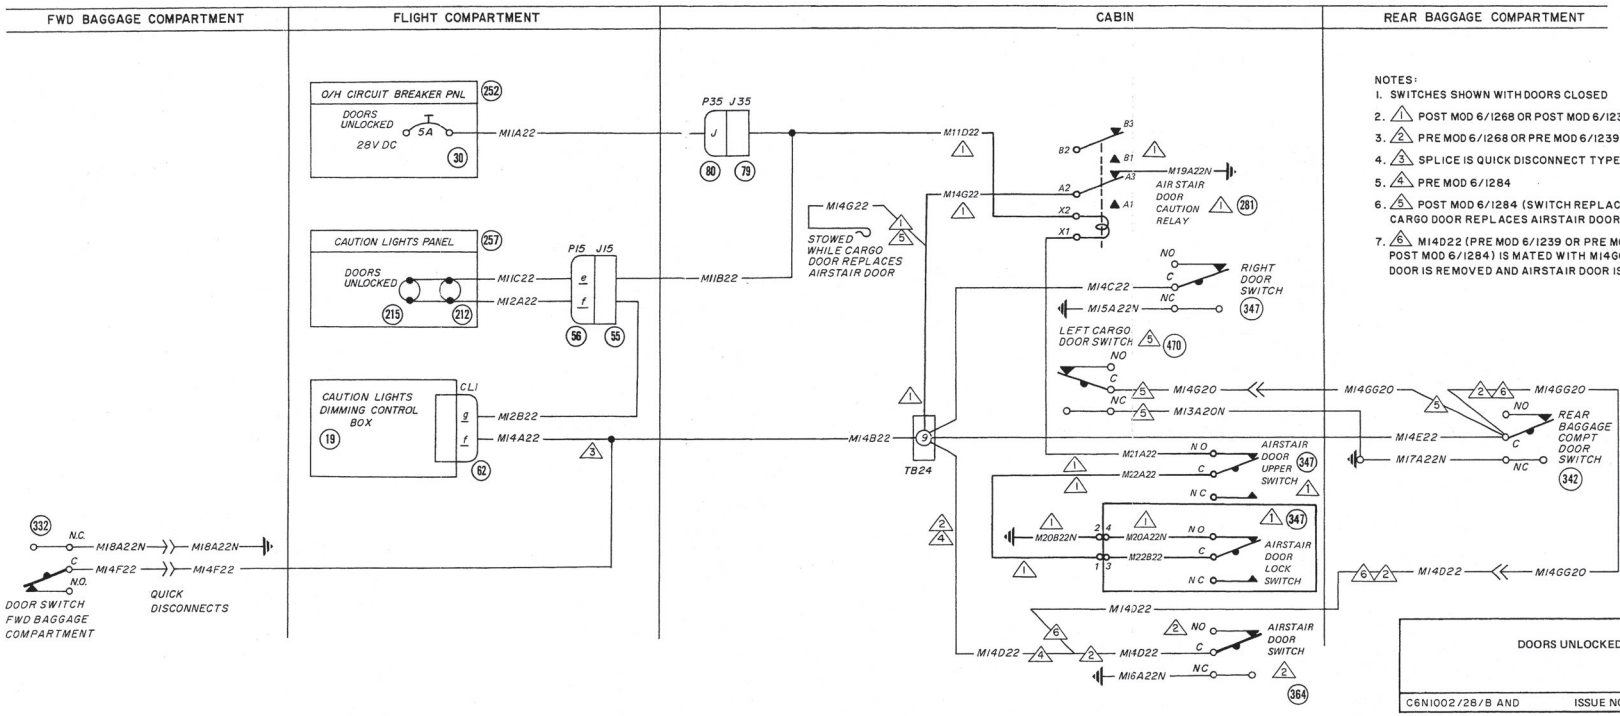

DOORS UNLOCKED CAUTION

C6N1002/28/B AND ISSUE NO. 1 2 3 4 5

C6Z1434/E

DHC–6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: CHAPTER 61: PROPELLERS

On a revised page the portion of the text and illustration affected by the latest technical revision is indicated by a black vertical line. Pages with a black vertical line against the date at the bottom of the page are the result of text shift from page to page or nontechnical corrections.

Reference	Page	Date	Reference	Page	Date
List of Effective Pages	*1	Feb 28/05			
Contents	1	Oct 31/02			
61-20-00	1	May 1/70			
	2	May 7/82			
61-22-00	1	Oct 18/73			
61-22-01	1	Nov 24/77			
61-22-02	1	Jun 16/80			
61-22-03	*1	Feb 28/05			
61-24-00	1	Mar 10/76			
	2	Mar 10/76			
61-24-01	1	Oct 31/02			
	2	Oct 31/02			
	3	Oct 31/02			
61-40-00	1	Mar 1/69			

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 61 - PROPELLERS

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
Controlling	61-20-00	
Propeller Overspeed Governor Test Circuit		1
Propeller Synchronization		2
Propeller Autofeather System (with Retrofit Mod 6/1329)	61-22-00	1
Propeller Autofeather System (Post Mod 6/1329 and 6/1504)	61-22-01	1
Propeller Autofeather System (with Retrofit Mods 6/1329, 6/1472 and 6/1484)	61-22-02	1
Propeller Autofeather System (Mod 6/1470)	61-22-03	1
Beta Range Back-up System - Sheet 1	61-24-00	1
Beta Range Back-up System - Sheet 2	61-24-00	2
Beta Range Back-up System - Sheet 1 (Mod 6/1831)	61-24-01	1
Beta Range Back-up System - Sheet 2 (Mod 6/1831)	61-24-01	2
Beta Range Back-up System - Sheet 3 (Mod 6/1831)	61-24-01	3
Indicating	61-40-00	
Propeller Tachometer		1

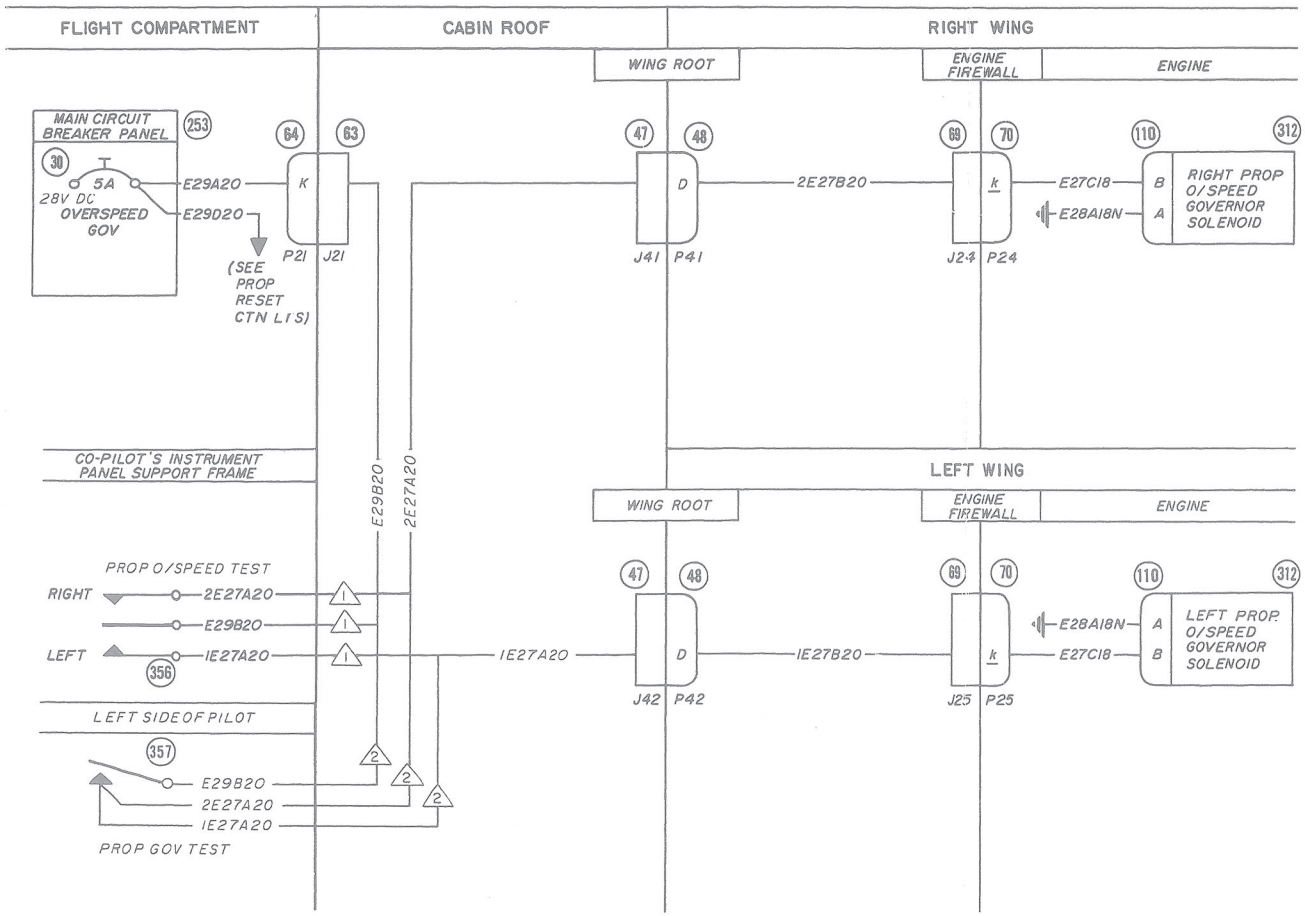

NOTES:
1. △1 PRE MOD 6/1323
2. △2 MOD 6/1323

PROPELLER OVERSPEED GOVERNOR TEST CIRCUIT

C6N1002/26/E AND C6N1002/47/A — ISSUE NO. 1 2

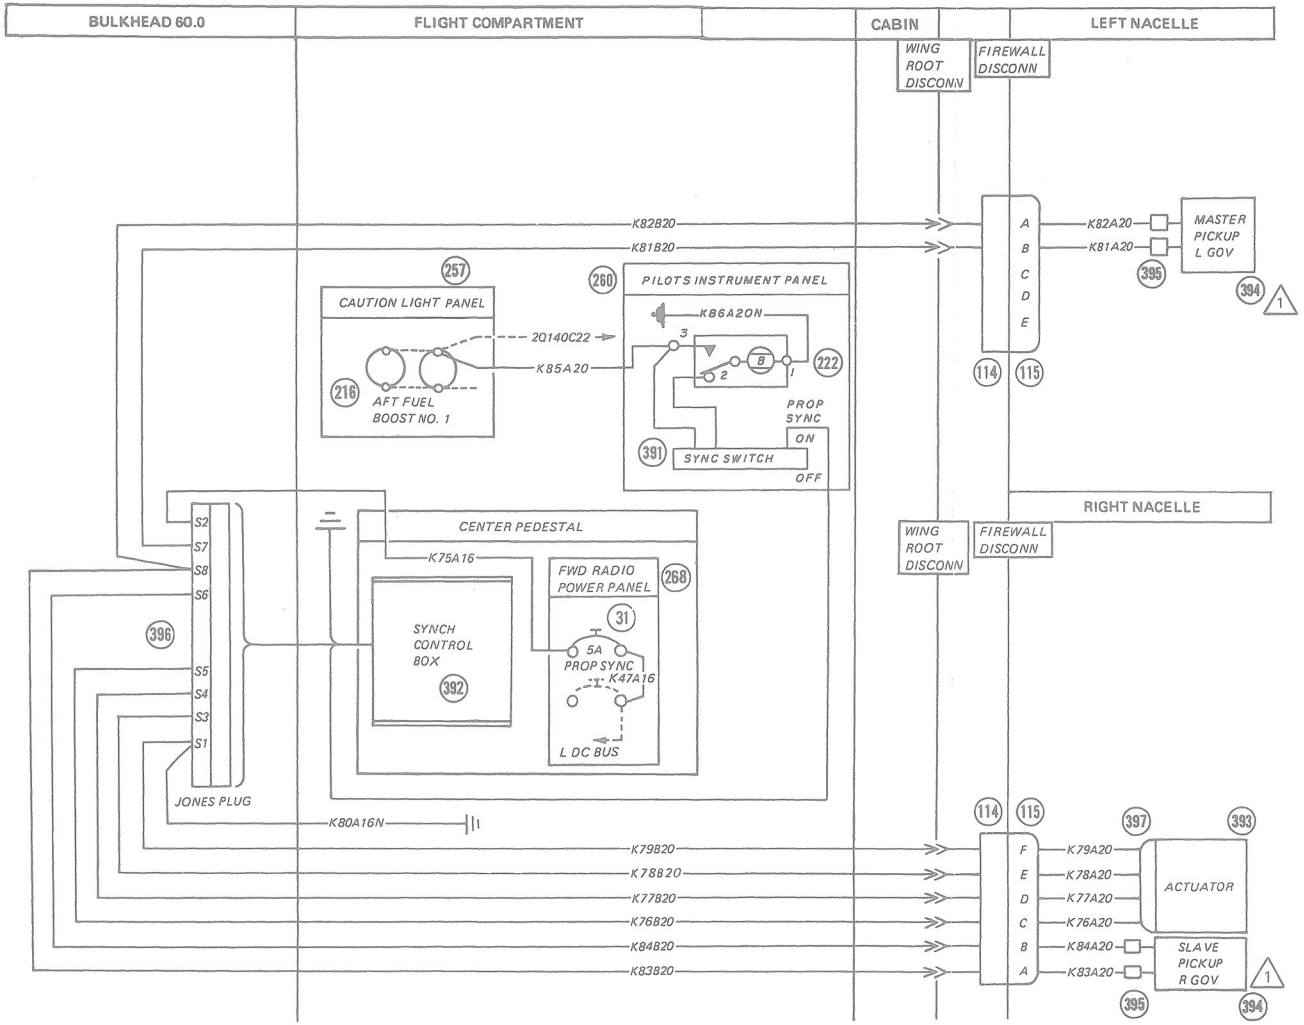

NOTE:

1. ⚠1 MOD 6/1767

PROPELLER SYNCHRONIZATION

(S.O.O. MOD 6099)

C6N1064/—/A ISSUE NO. 1 2 3

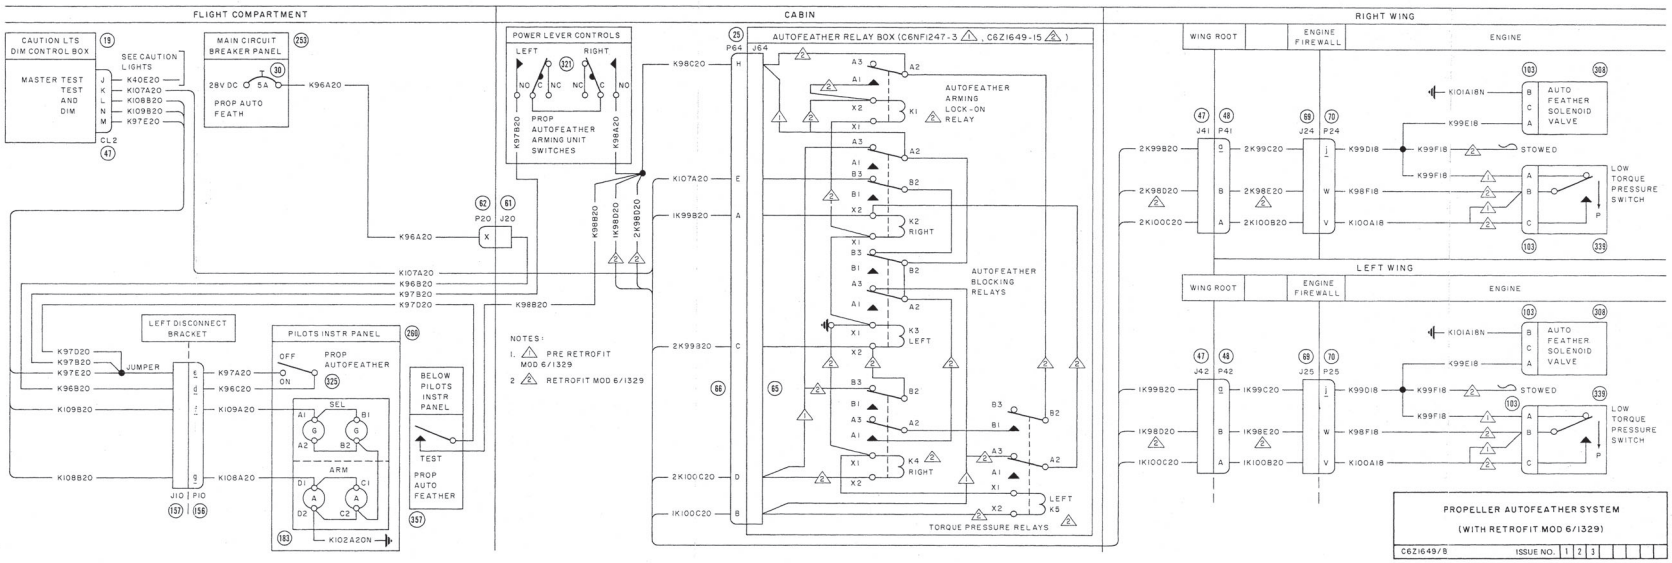

PROPELLER AUTOFEATHER SYSTEM
(WITH RETROFIT MOD 6/1329)

C6ZI649/8 ISSUE NO. 1 2 3

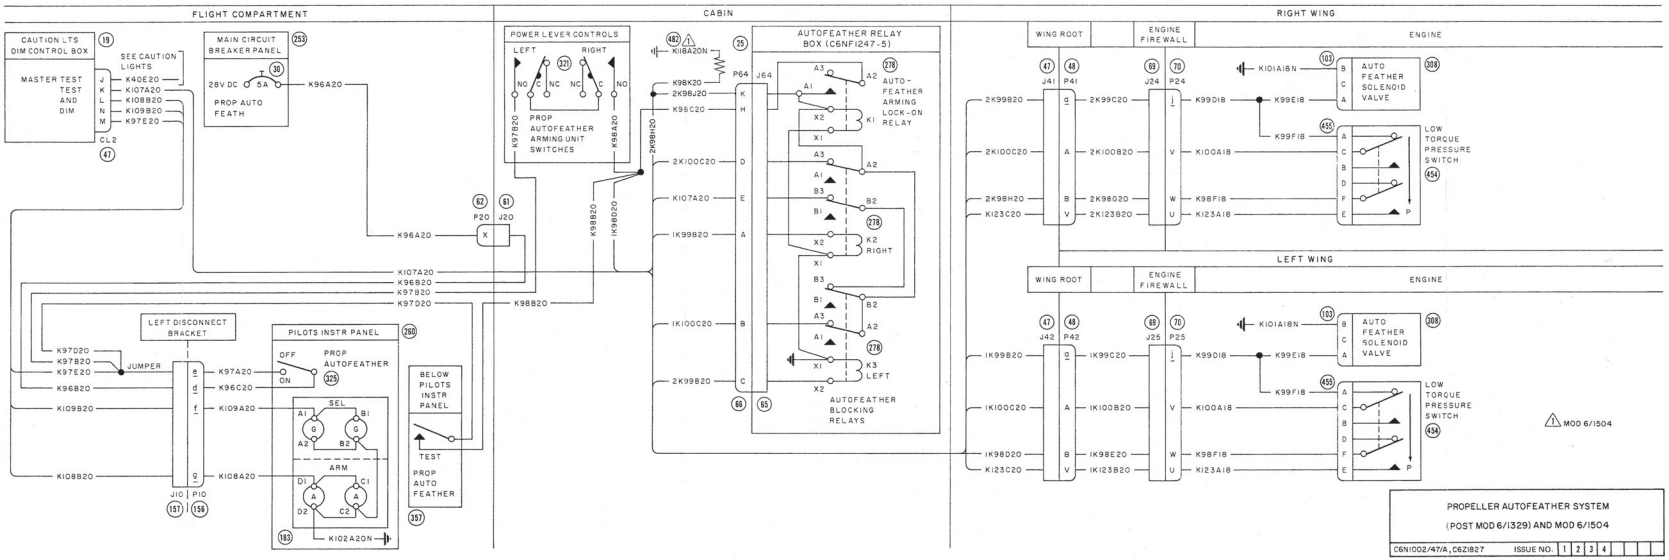

PROPELLER AUTOFEATHER SYSTEM
(POST MOD 6/1329) AND MOD 6/1504

C6N1002/47/A, C6Z1827 ISSUE NO. 1 2 3 4

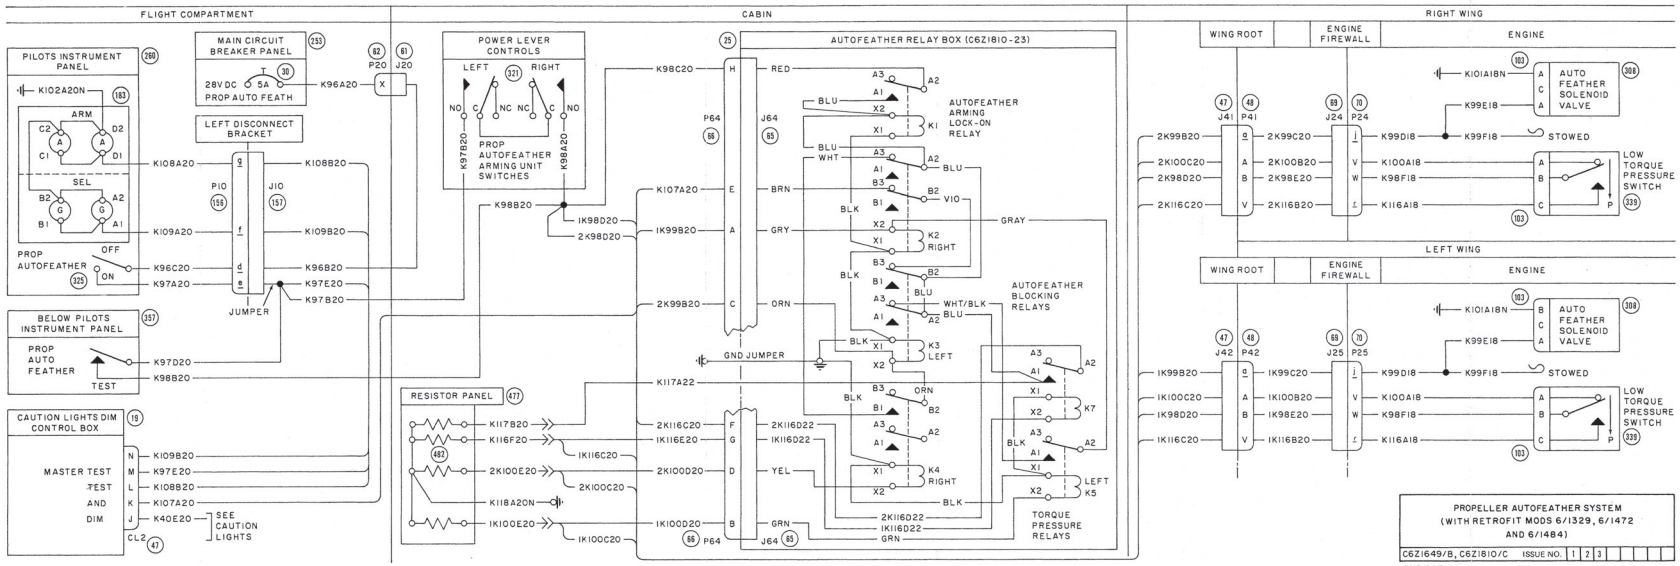

PROPELLER AUTOFEATHER SYSTEM
(WITH RETROFIT MODS 6/1329, 6/1472 AND 6/1484)

C6Z1649/B, C6Z1810/C ISSUE NO. 1 2 3
AND C6Z1817/-

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W18

Insert 61-22-03 before Page 1

PROPELLER AUTOFEATHER SYSTEM (MOD 6/1470)

REASON FOR ISSUE:
To correct wiring diagram to agree with drawing C6N1002, Rev G.

ACTION:
In Chapter 61, ignore existing Section 61-22-03 and insert revised section, as shown on Page 3 of this Temporary Revision.

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

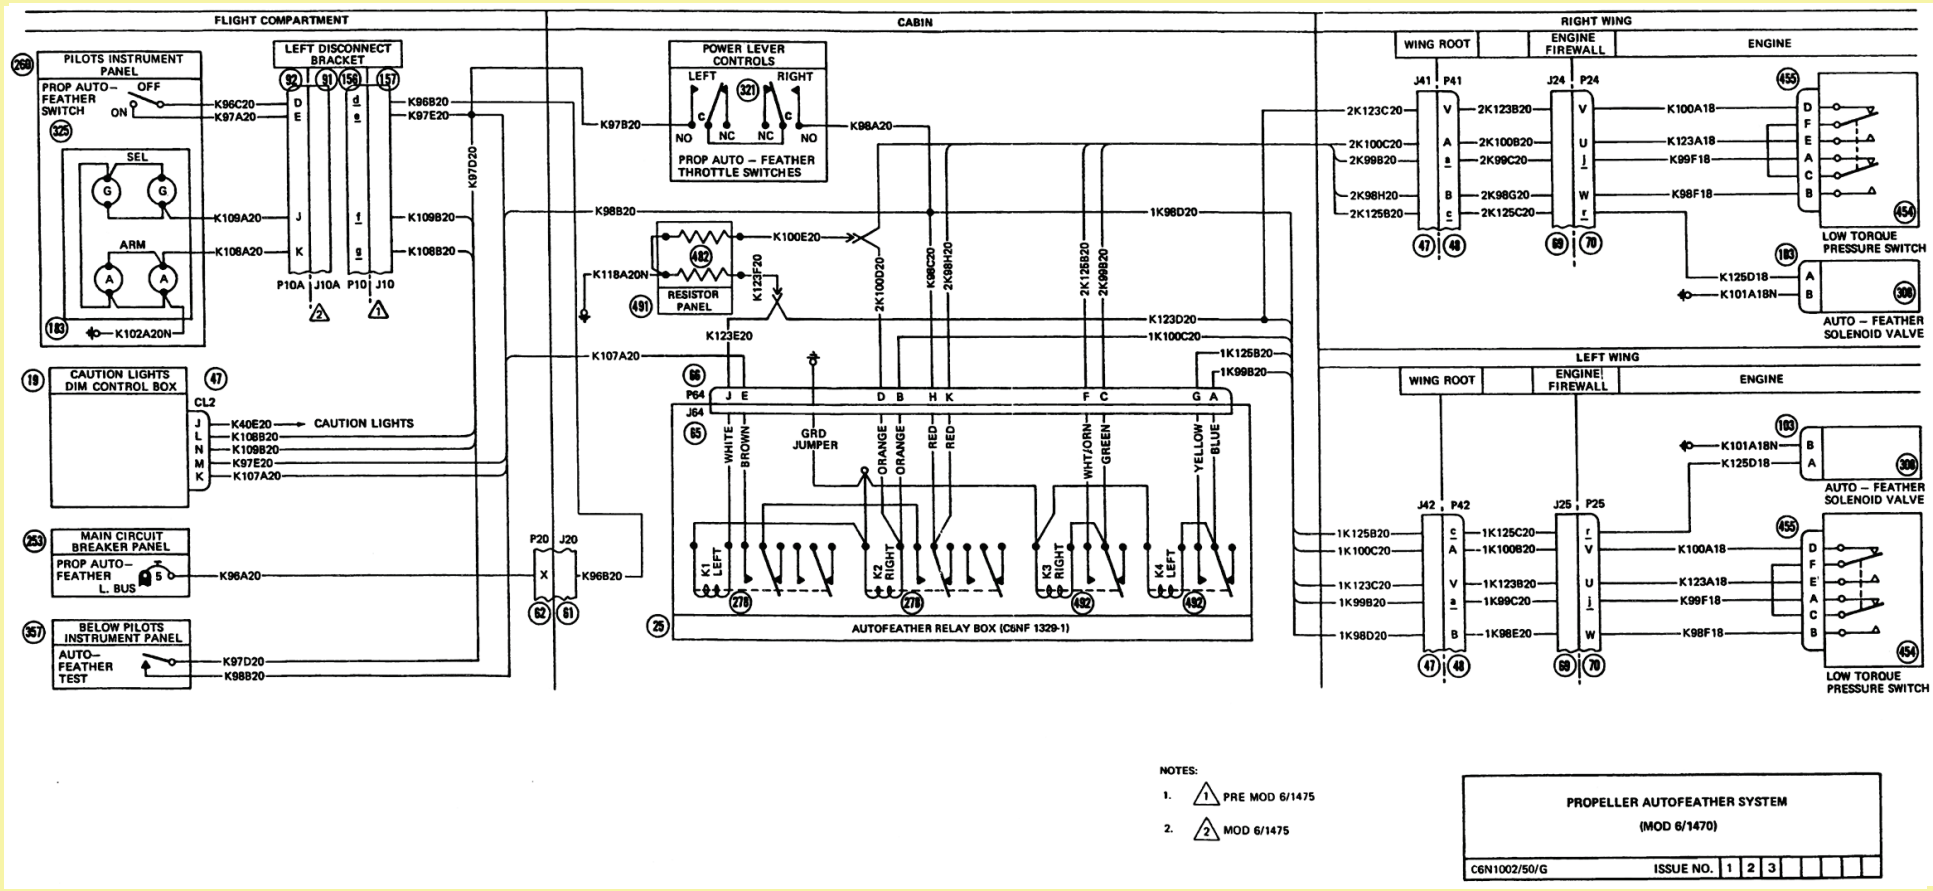

NOTES:

1. ⚠1 PRE MOD 6/1475
2. ⚠2 MOD 6/1475

PROPELLER AUTOFEATHER SYSTEM
(MOD 6/1470)

C6N1002/50/G ISSUE NO. 1 2 3

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

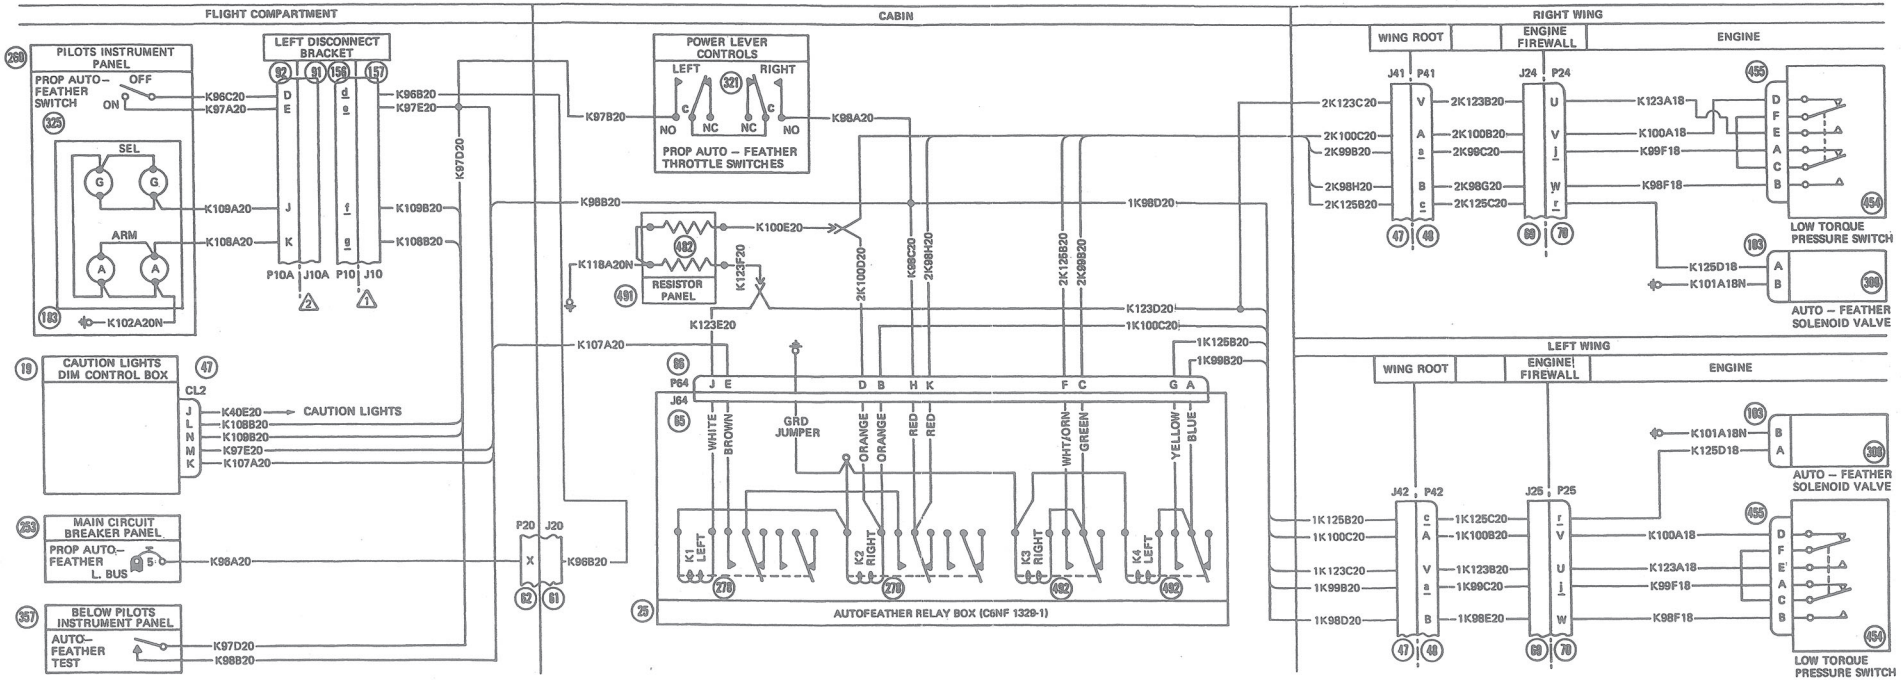

NOTES:
1. ⚠1 PRE MOD 6/1475
2. ⚠2 MOD 6/1475

PROPELLER AUTOFEATHER SYSTEM
(MOD 6/1470)
C6N1002/50/E ISSUE NO. 1 2

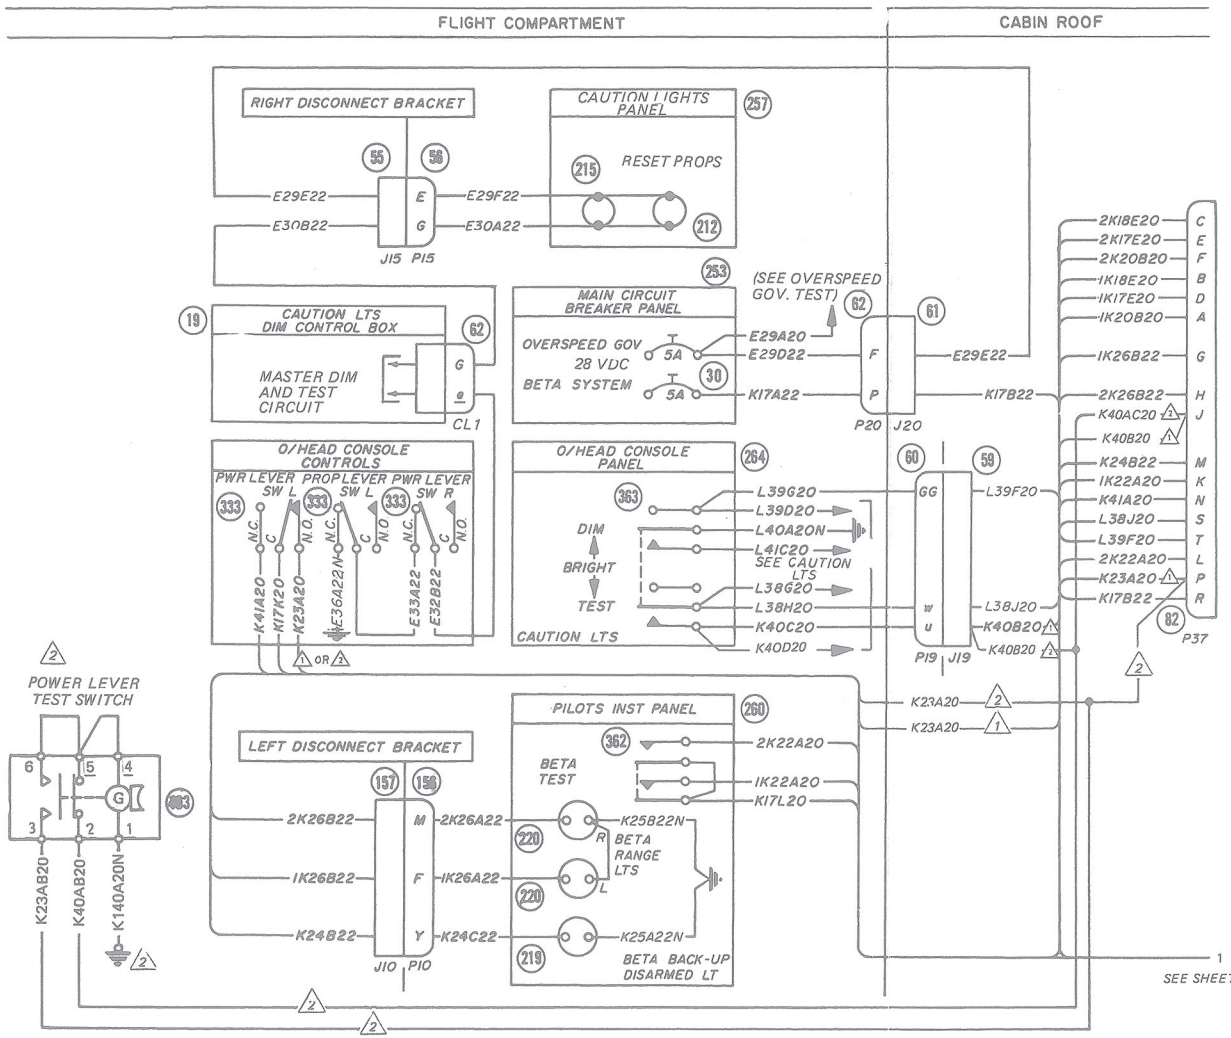

NOTES:

1. PRE-MOD 6/1492
2. MOD 6/1492

BETA RANGE BACK-UP SYSTEM

(SHEET 1)

C6N1002/26/E	C6N1002/50/E	ISSUE NO.	1	2	3	4				

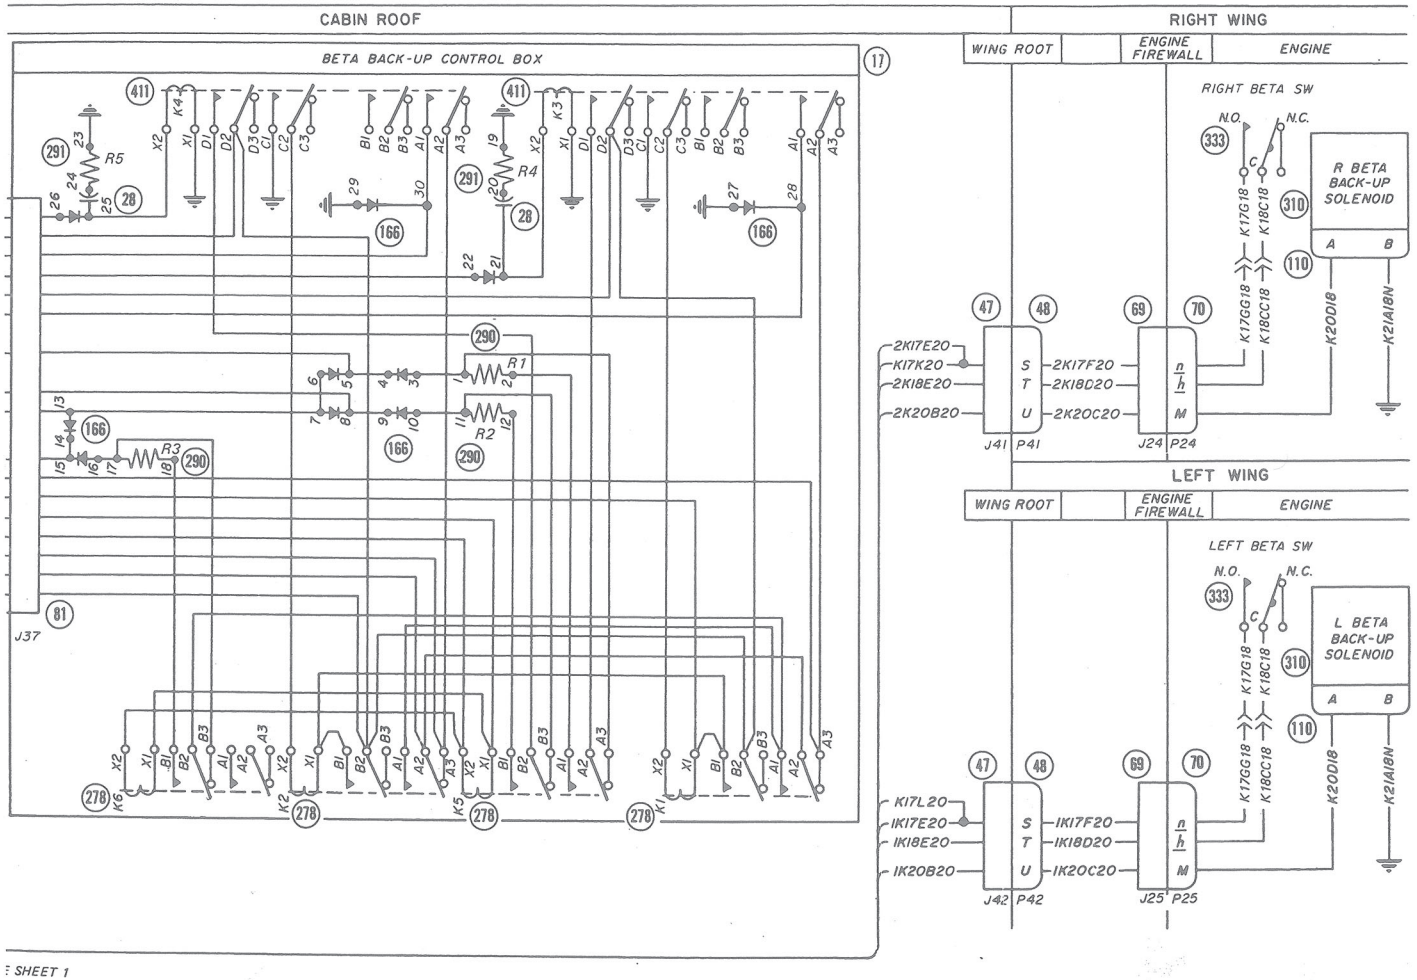

NOTES:

1. PRE-MOD 6/1492
2. MOD 6/1492

BETA RANGE BACK-UP SYSTEM

(SHEET 2)

C6N1002/26/E C6N1002/50/E ISSUE NO. 1 2 3 4

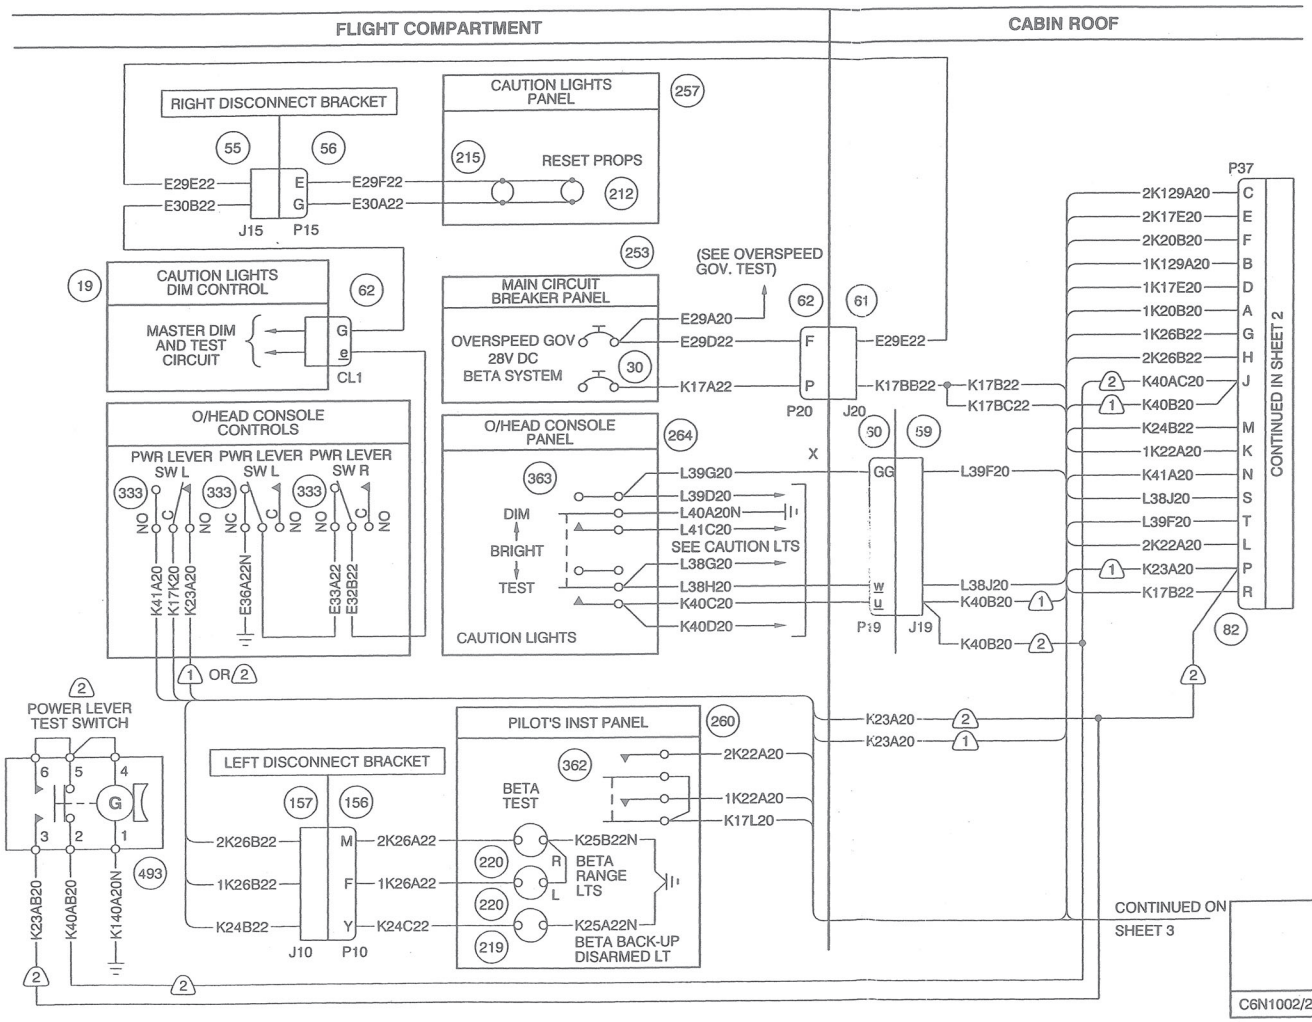
FLIGHT COMPARTMENT
CABIN ROOF
RIGHT DISCONNECT BRACKET
CAUTION LIGHTS PANEL
RESET PROPS
CAUTION LIGHTS DIM CONTROL
MASTER DIM AND TEST CIRCUIT
MAIN CIRCUIT BREAKER PANEL
OVERSPEED GOV
28V DC BETA SYSTEM
(SEE OVERSPEED GOV. TEST)
O/HEAD CONSOLE CONTROLS
PWR LEVER SW L
PWR LEVER SW L
PWR LEVER SW R
O/HEAD CONSOLE PANEL
DIM
BRIGHT
TEST
SEE CAUTION LTS
CAUTION LIGHTS
POWER LEVER TEST SWITCH
LEFT DISCONNECT BRACKET
PILOT'S INST PANEL
BETA TEST
BETA RANGE LTS
BETA BACK-UP DISARMED LT
P37
CONTINUED IN SHEET 2
NOTES: SHEET 3
CONTINUED ON SHEET 3
BETA RANGE BACK-UP SYSTEM
(MOD 6/1831)
(SHEET 1)
C6N1002/26/E C6N1002/50/E ISSUE NO. 1
DHC-6_WDM_61_0001

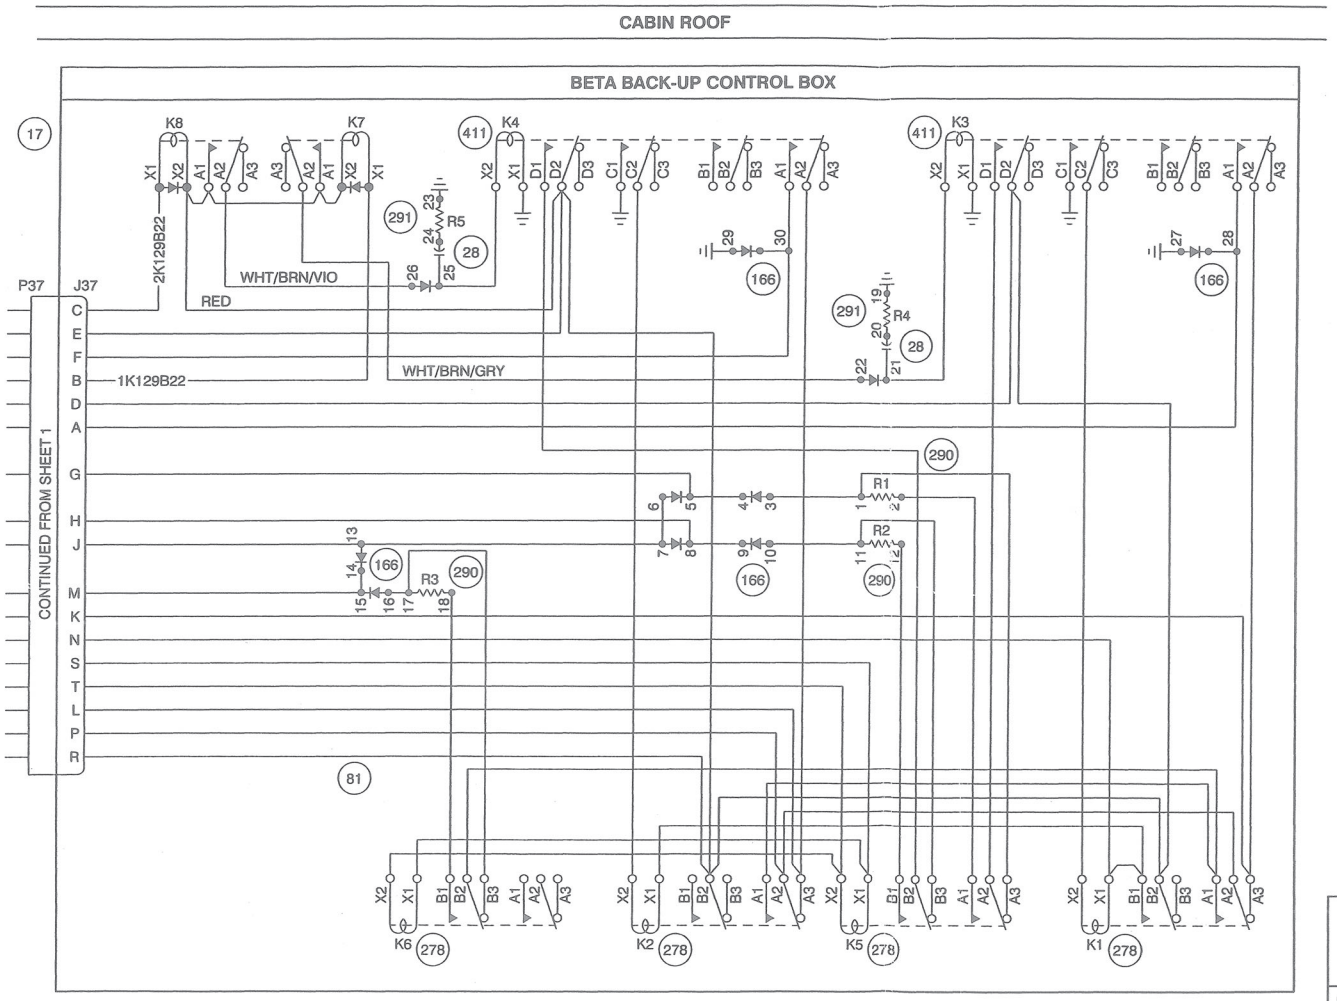

NOTES: SEE SHEET 3

BETA RANGE BACK-UP SYSTEM
(MOD 6/1831)
(SHEET 2)

C6N1002/26/E	C6N1002/50/E	ISSUE NO.	1

DHC-6_WDM_61_0002

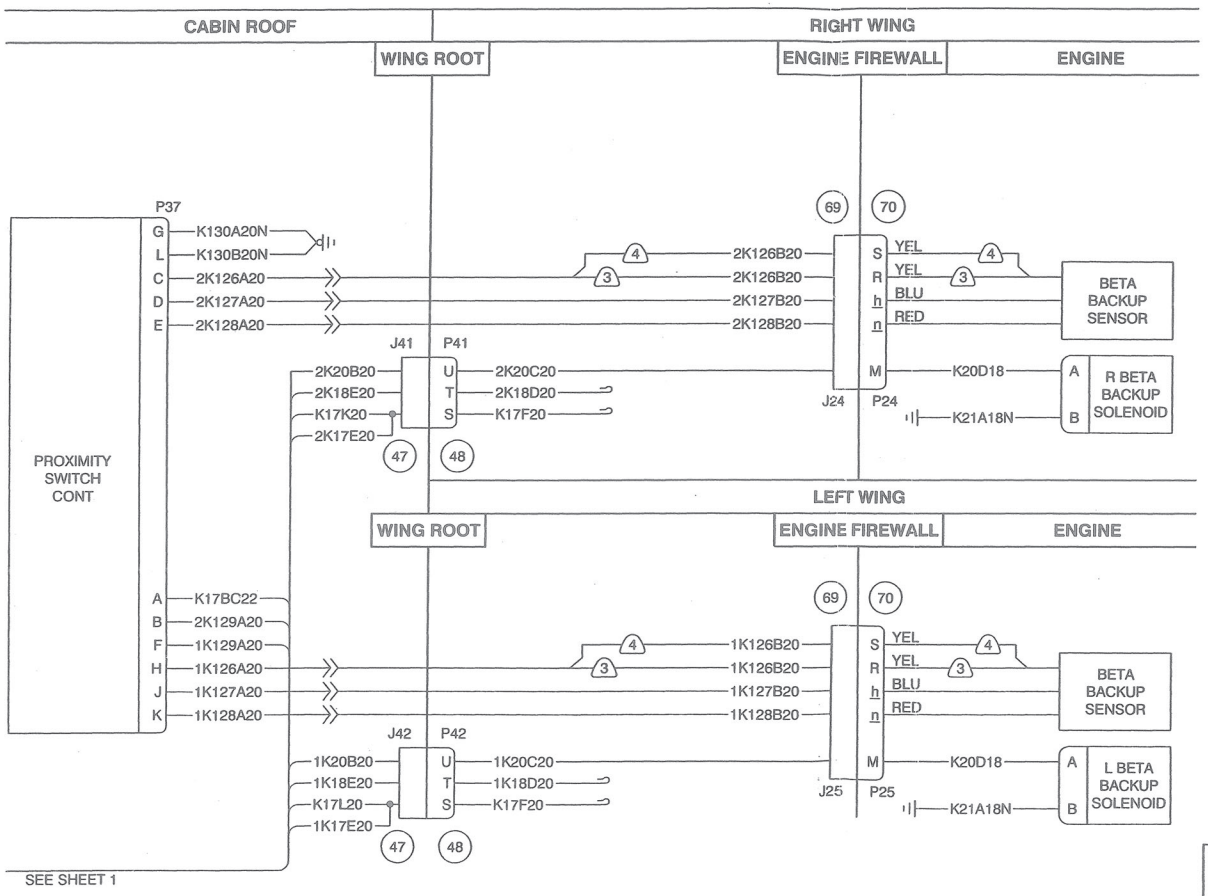

NOTES:

1. PRE-MOD 6/1492
2. MOD 6/1492
3. PRE-MOD 6/1470
4. MOD 6/1470

BETA RANGE BACK-UP SYSTEM
(MOD 6/1831)
(SHEET 3)

C6N1002/26/E	C6N1002/50/E	ISSUE NO.	1

DHC-6_WDM_61_0003

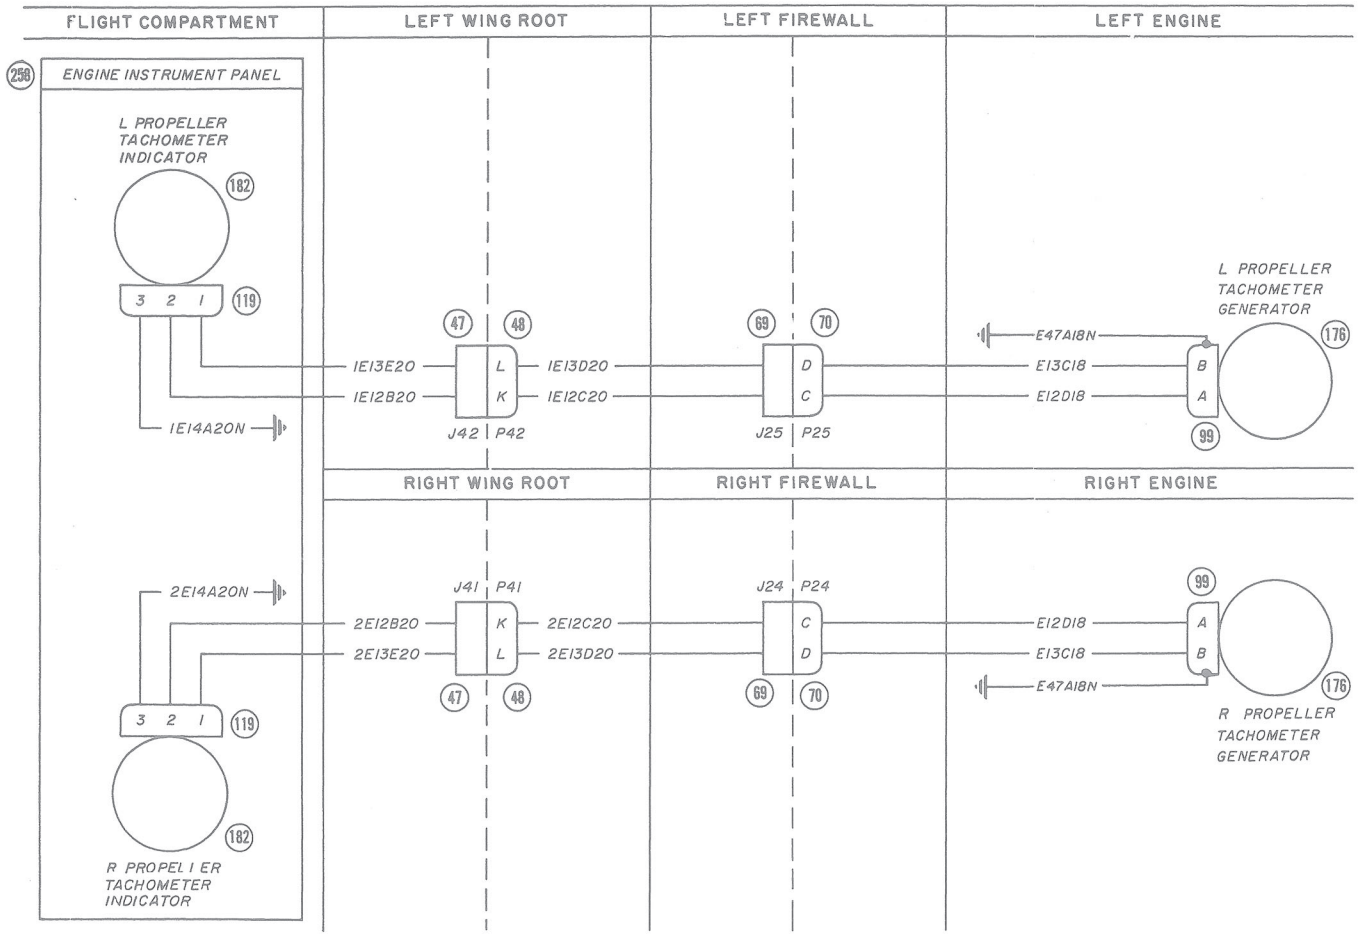

PROPELLER TACHOMETER

C6N1002/26/D ISSUE NO. 1

LIST OF EFFECTIVE PAGES: CHAPTER 71: POWER PLANT

Reference	Page	Date
Contents	1	Mar 1/69
71-60-00	*1	Jul 15/69

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 71 - POWER PLANT

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
VARIABLE ENGINE AIR INTAKES	71-60-00	
Engine Intake Deflectors		1

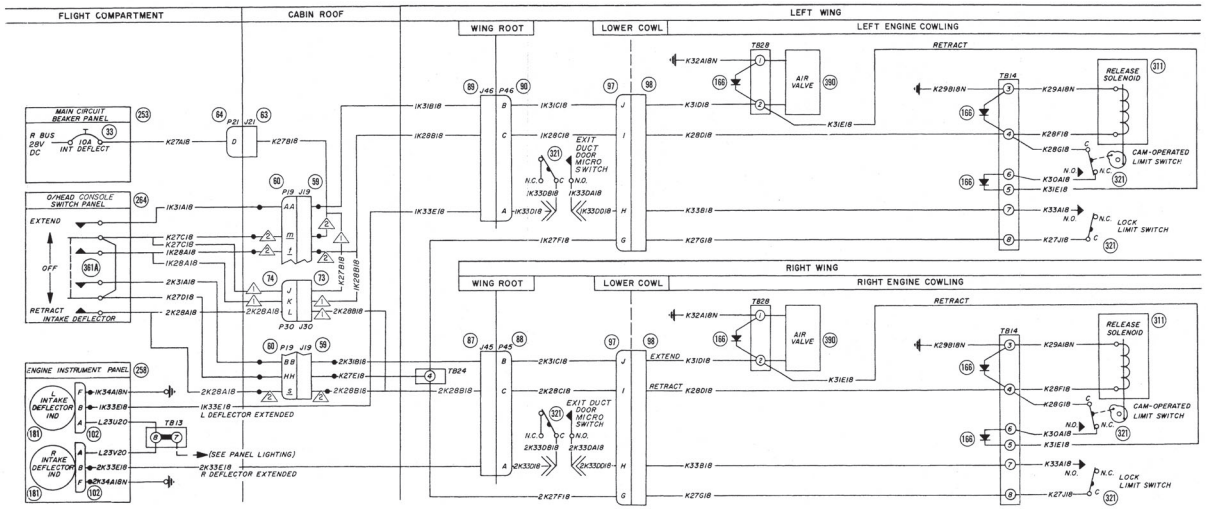

NOTE:
1. △1 PRE MOD 6/1274
2. △2 POST MOD 6/1274

ENGINE INTAKE DEFLECTORS

C6N1002/9/A ISSUE NO. 1 2

LIST OF EFFECTIVE PAGES: CHAPTER 73: ENGINE FUEL AND CONTROL

Reference	Page	Date
Contents	1	Mar 1/69
73-20-00	1	Mar 1/69
73-30-00	*1	Mar 10/76

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 73 - ENGINE FUEL AND CONTROL

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
CONTROLLING	73-20-00	
Temperature Compensator Sense Tube Heater		1
INDICATING	73-30-00	
Fuel Flow Indication		1

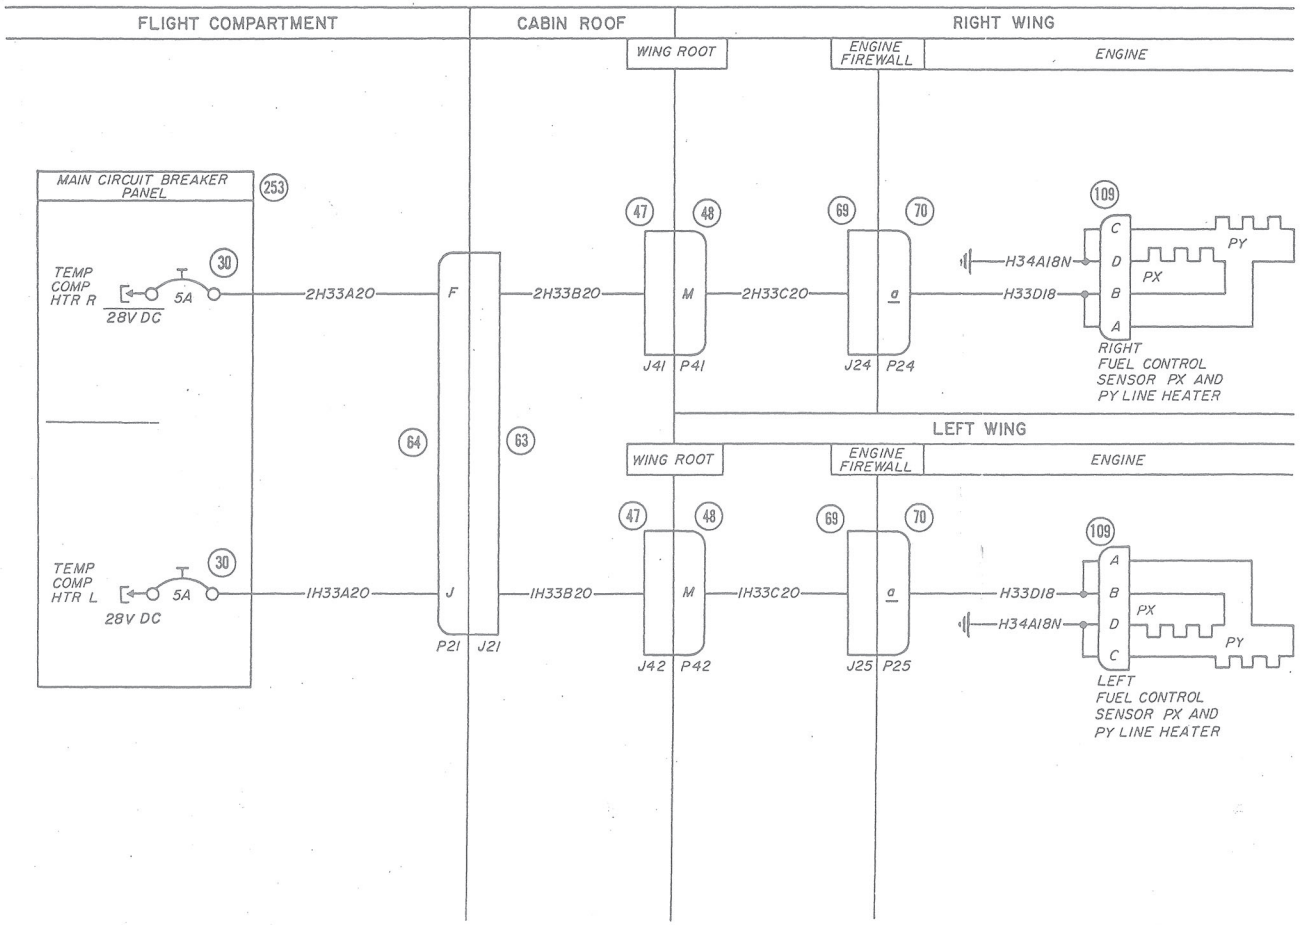

TEMPERATURE COMPENSATOR SENSE TUBE HEATER

C6N1002/15/A ISSUE NO. 1

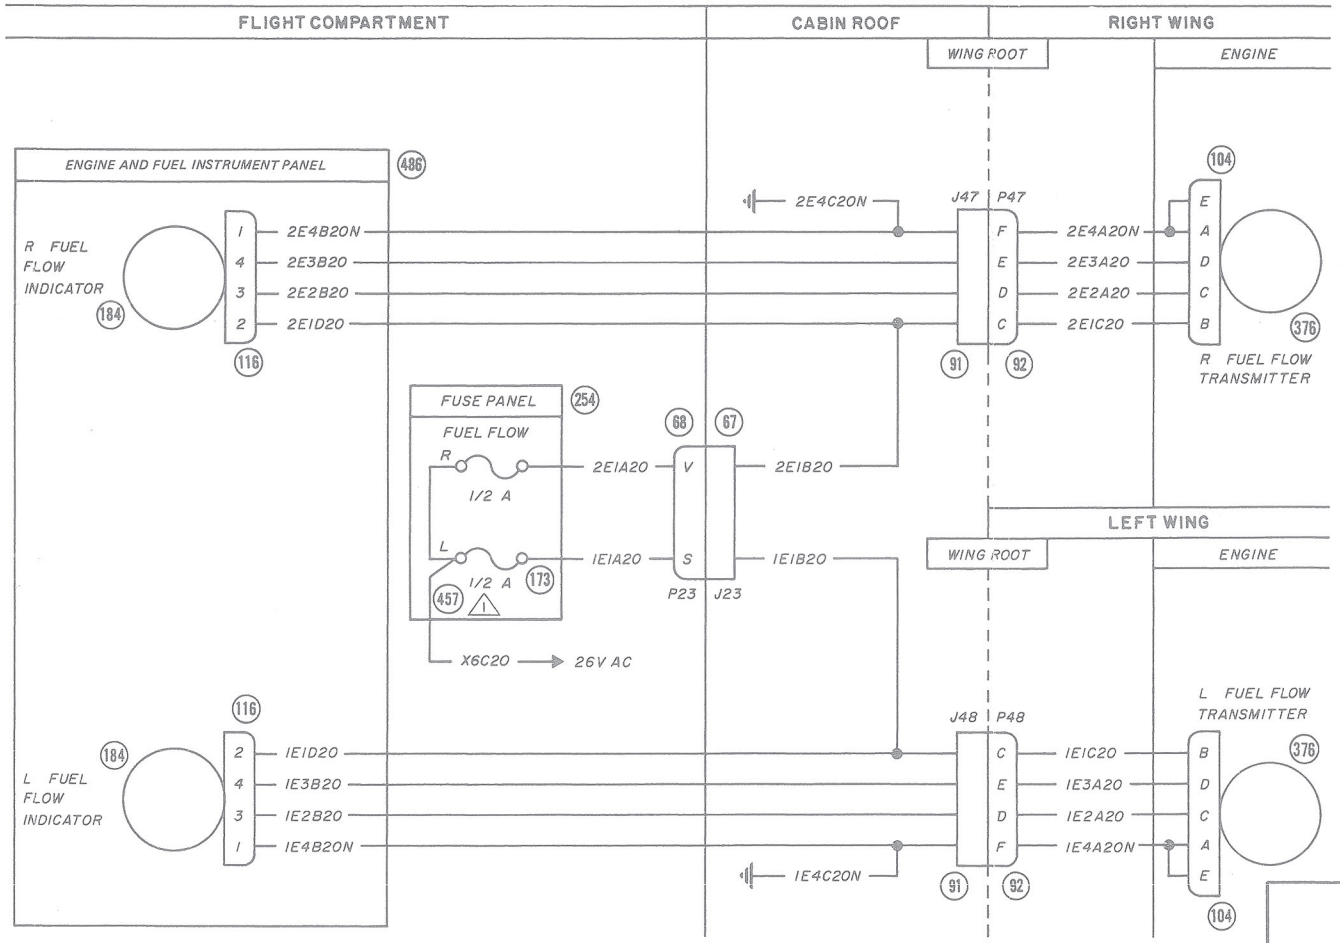

NOTES:

1. ⚠1 POST MOD 6/1388 OR MOD S.O.O. 6142

FUEL FLOW INDICATION

C6N1002/6/- AND C6N1002/25/A ISSUE NO. 1 2 3

DHC–6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: CHAPTER 74: IGNITION

On a revised page the portion of the text and illustration affected by the latest technical revision is indicated by a black vertical line. Pages with a black vertical line against the date at the bottom of the page are the result of text shift from page to page or nontechnical corrections.

Reference	Page	Date	Reference	Page	Date
List of Effective Pages	*1	Feb 28/05			
Contents	*1	Feb 28/05			
74-00-00	*1	Feb 28/05			
	*2	Feb 28/05			
74-00-01	1	Oct 31/02			

The asterisk (*) indicates pages revised, added or deleted by current revision.

BOMBARDIER

DHC–6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 74 – IGNITION

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
GENERAL	74-00-00	
Engine Ignition System		1
Engine Ignition System (S.O.O. 6180)		2
Engine Ignition System (Mod 6/1912)	74-00-01	1

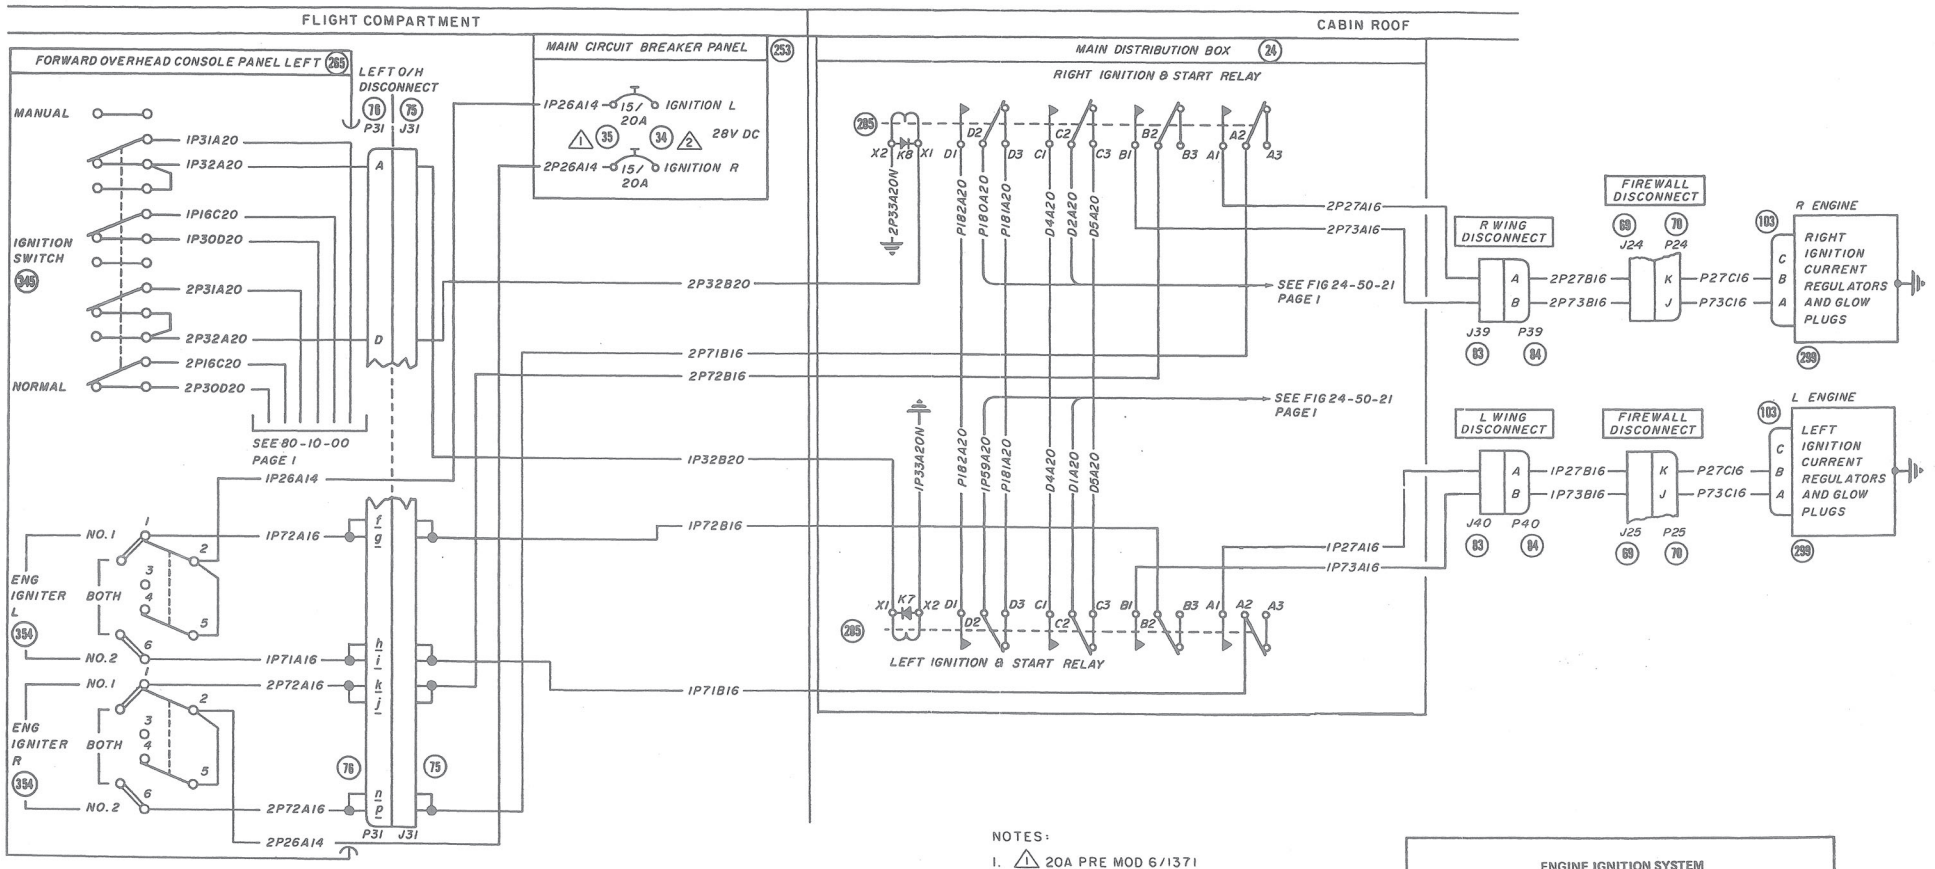

NOTES:

1. ⚠1 20A PRE MOD 6/1371
2. ⚠2 15A POST MOD 6/1371

ENGINE IGNITION SYSTEM

C6N1002/4/B ISSUE NO. 1 2 3 4 5

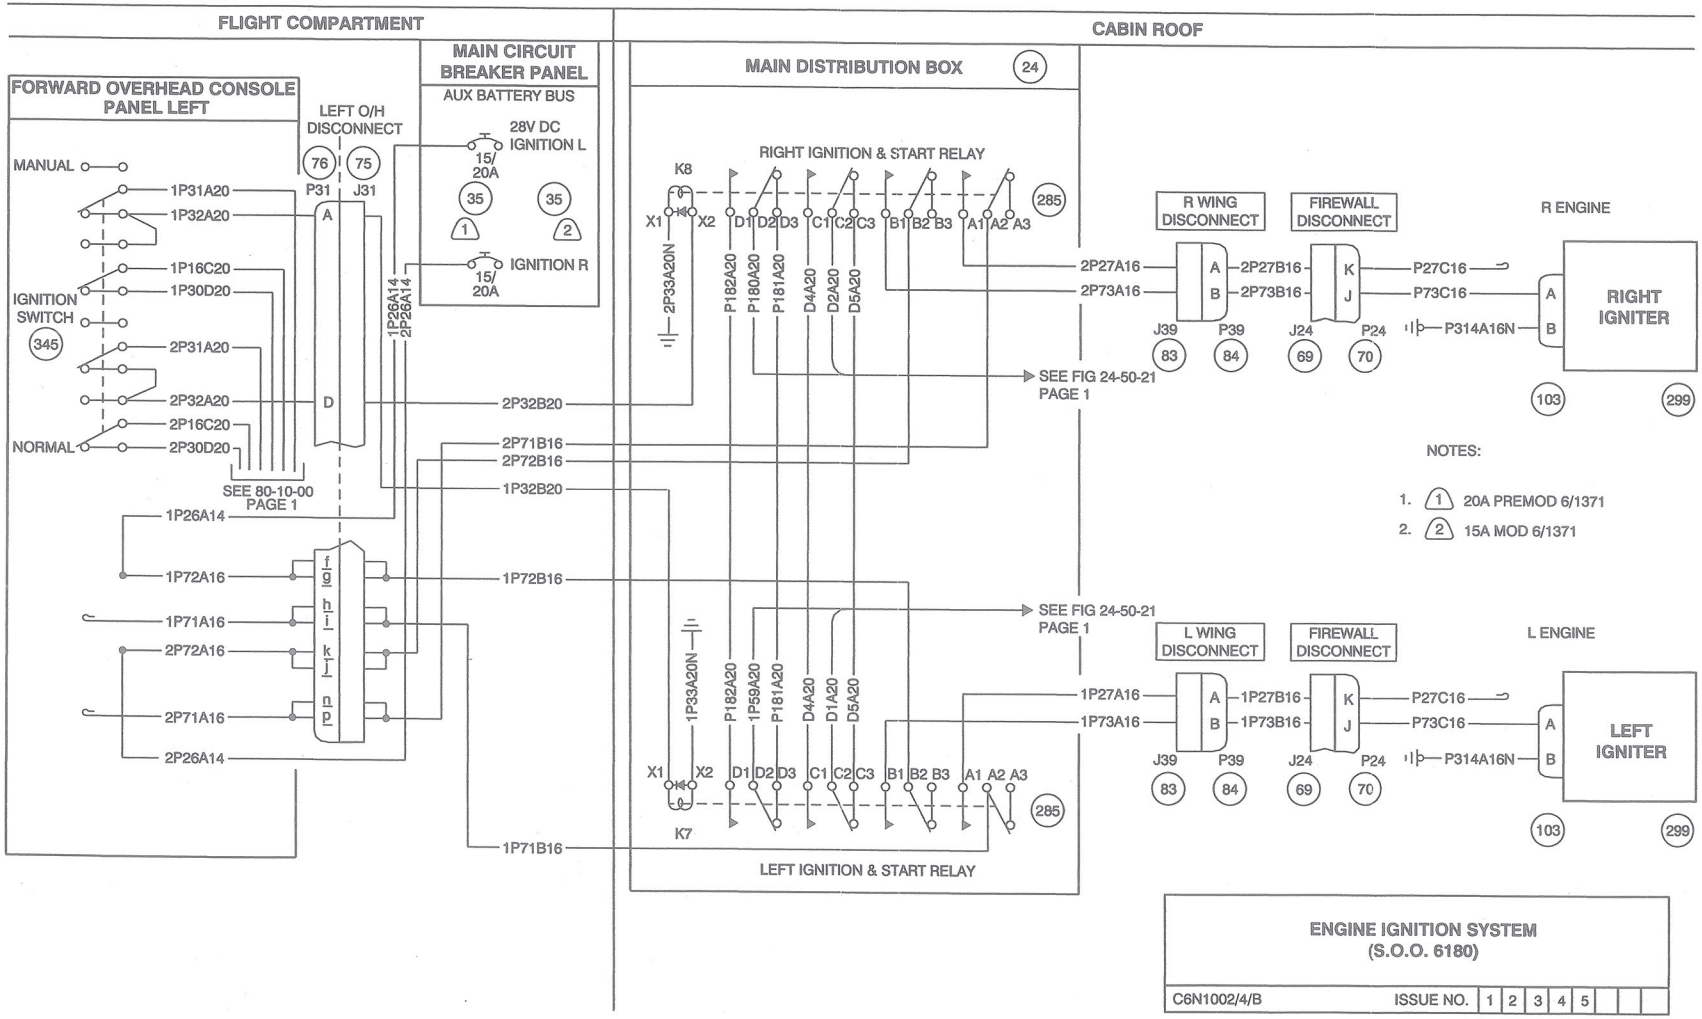
FLIGHT COMPARTMENT
CABIN ROOF
FORWARD OVERHEAD CONSOLE PANEL LEFT
MANUAL
1P31A20
1P32A20
1P16C20
1P30D20
IGNITION SWITCH
345
2P31A20
2P32A20
2P16C20
2P30D20
NORMAL
SEE 80-10-00 PAGE 1
LEFT O/H DISCONNECT
76
75
P31
J31
A
D
1P26A14
2P26A14
1P26A14
2P26A14
MAIN CIRCUIT BREAKER PANEL
AUX BATTERY BUS
28V DC IGNITION L
15/ 20A
35
35
1
2
IGNITION R
15/ 20A
MAIN DISTRIBUTION BOX
24
RIGHT IGNITION & START RELAY
K8
X1
X2
D1 D2 D3 C1 C2 C3 B1 B2 B3 A1 A2 A3
285
2P33A20N
P182A20
P180A20
P181A20
D4A20
D2A20
D5A20
2P32B20
2P71B16
2P72B16
1P32B20
1P72B16
1P71B16
SEE FIG 24-50-21 PAGE 1
R WING DISCONNECT
FIREWALL DISCONNECT
R ENGINE
2P27A16
2P73A16
A
B
2P27B16
2P73B16
K
J
P27C16
P73C16
P314A16N
J39
P39
J24
P24
83
84
69
70
RIGHT IGNITER
103
299
NOTES:
1. (1) 20A PREMOD 6/1371
2. (2) 15A MOD 6/1371
1P72A16
1P71A16
2P72A16
2P71A16
2P26A14
f g h i k l n p
1P33A20N
P182A20
P59A20
P181A20
D4A20
D1A20
D5A20
K7
LEFT IGNITION & START RELAY
SEE FIG 24-50-21 PAGE 1
L WING DISCONNECT
FIREWALL DISCONNECT
L ENGINE
1P27A16
1P73A16
1P27B16
1P73B16
LEFT IGNITER
ENGINE IGNITION SYSTEM (S.O.O. 6180)
C6N1002/4/B
ISSUE NO. 1 2 3 4 5

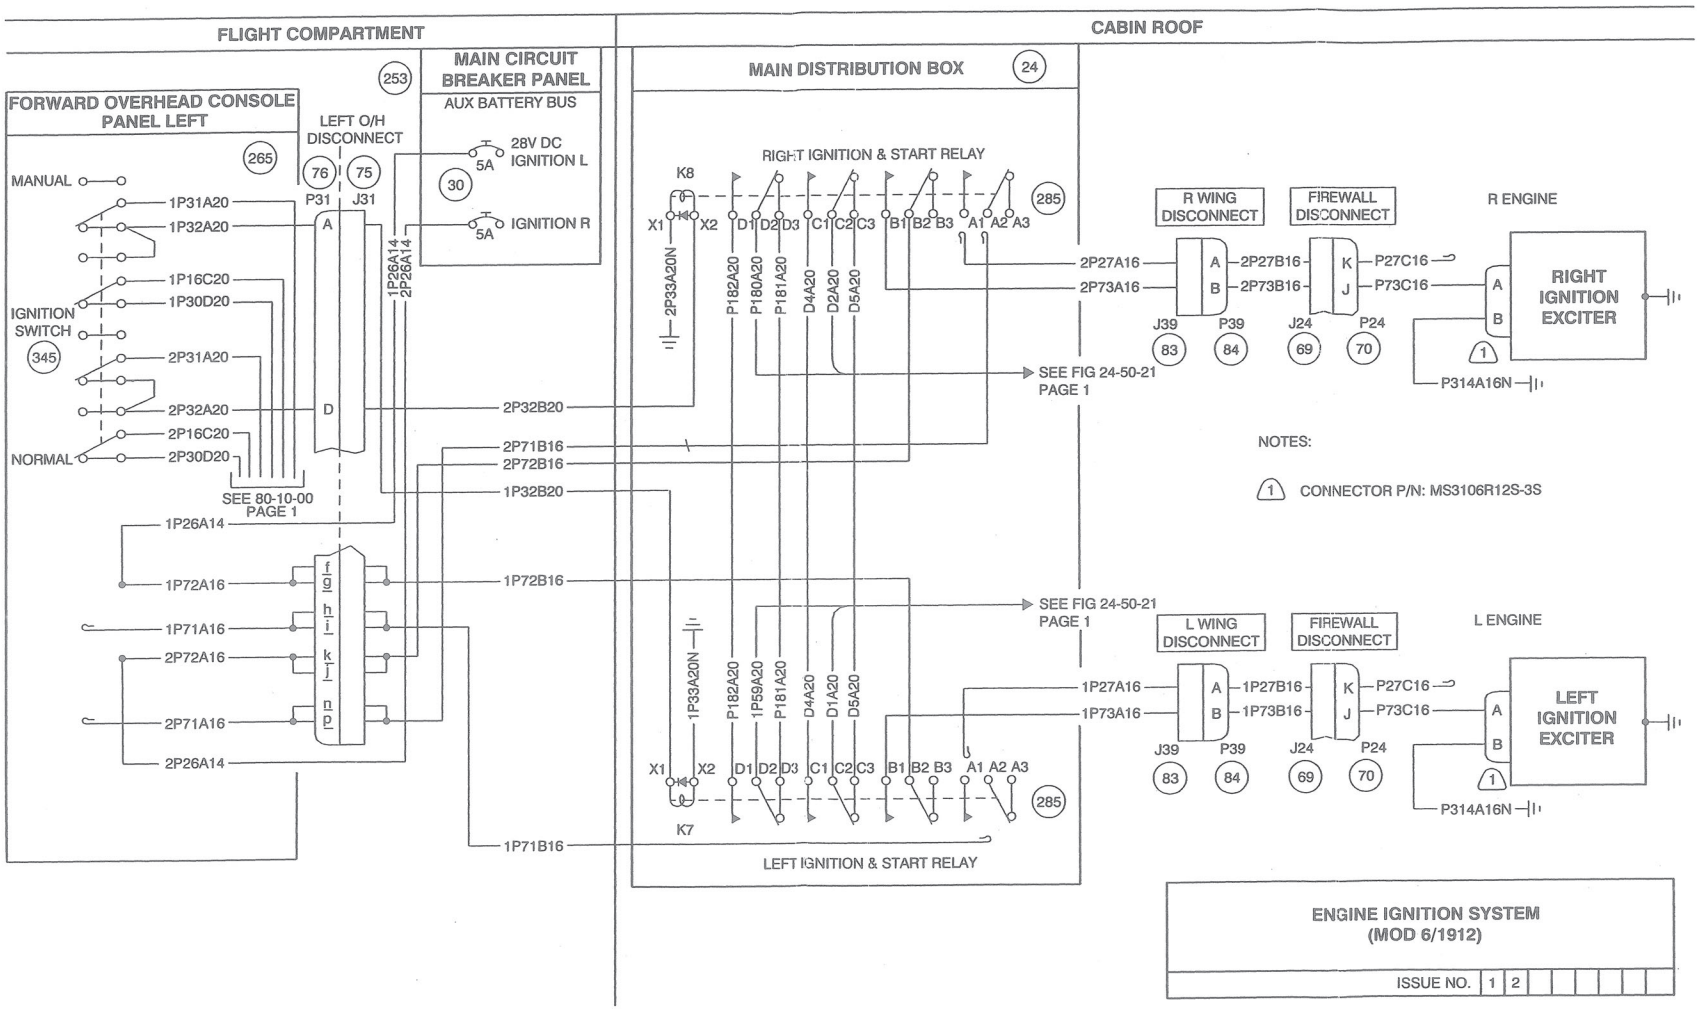
FLIGHT COMPARTMENT
CABIN ROOF
MAIN CIRCUIT BREAKER PANEL
AUX BATTERY BUS
28V DC IGNITION L
IGNITION R
5A
FORWARD OVERHEAD CONSOLE PANEL LEFT
LEFT O/H DISCONNECT
MANUAL
IGNITION SWITCH
NORMAL
1P31A20
1P32A20
1P16C20
1P30D20
2P31A20
2P32A20
2P16C20
2P30D20
SEE 80-10-00 PAGE 1
P31
J31
1P26A14
2P26A14
2P32B20
2P71B16
2P72B16
1P32B20
1P26A14
1P72A16
1P71A16
2P72A16
2P71A16
2P26A14
1P72B16
1P71B16
MAIN DISTRIBUTION BOX
RIGHT IGNITION & START RELAY
K8
X1
X2
2P33A20N
P182A20
P180A20
P181A20
D4A20
D2A20
D5A20
SEE FIG 24-50-21 PAGE 1
R WING DISCONNECT
FIREWALL DISCONNECT
R ENGINE
2P27A16
2P73A16
2P27B16
2P73B16
P27C16
P73C16
RIGHT IGNITION EXCITER
P314A16N
NOTES:
CONNECTOR P/N: MS3106R12S-3S
1P33A20N
1P59A20
1P27A16
1P73A16
1P27B16
1P73B16
LEFT IGNITION EXCITER
K7
LEFT IGNITION & START RELAY
L WING DISCONNECT
L ENGINE
ENGINE IGNITION SYSTEM (MOD 6/1912)
ISSUE NO. 1 2

LIST OF EFFECTIVE PAGES: CHAPTER 77: ENGINE INDICATING

Reference	Page	Date
Contents	*1	Oct 18/73
77-10-00	*1	Oct 18/73
	*2	Oct 18/73
	*3	Oct 18/73
77-12-00	1	Mar 1/69
77-20-00	1	Mar 1/69

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 77 - ENGINE INDICATING

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
POWER	77-10-00	
Torque Pressure Indication (Bendix)		1
Torque Pressure Indication (Edison Pre-Mod 6/1444)		2
Torque Pressure Indication (Edison Retrofit Mod 6/1444)		3
Gas Generator Tachometer Indication	77-12-00	1
TEMPERATURE	77-20-00	
Turbine Temperature Indication		1

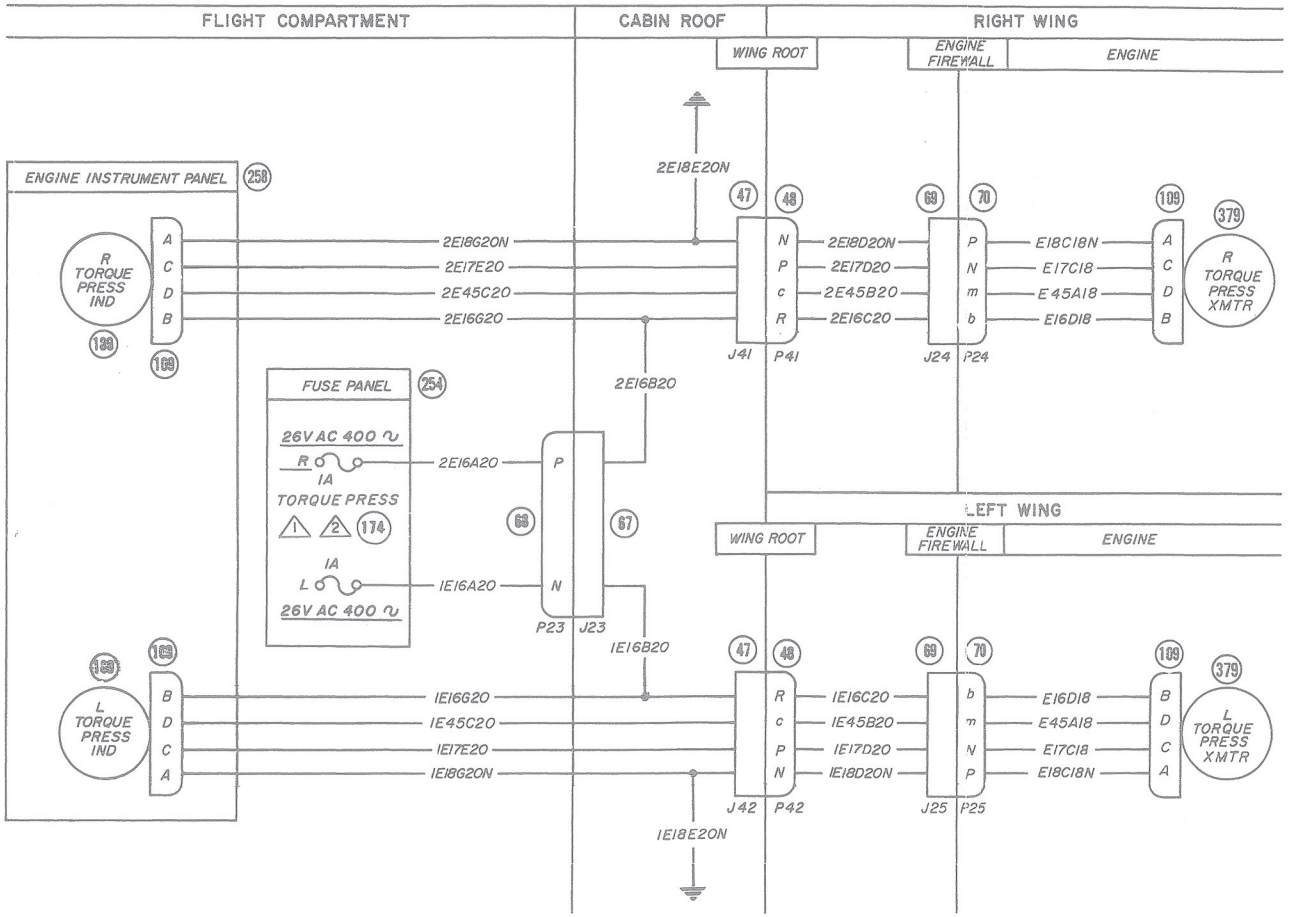

NOTES:
1. 1 POST MOD 6/1388 (459)
2. 2 POST MOD S.O.O. 6142 1/2A (457)

TORQUE PRESSURE INDICATION (BENDIX)									
C6N1002/27/B	ISSUE NO.	1	2	3	4	5			

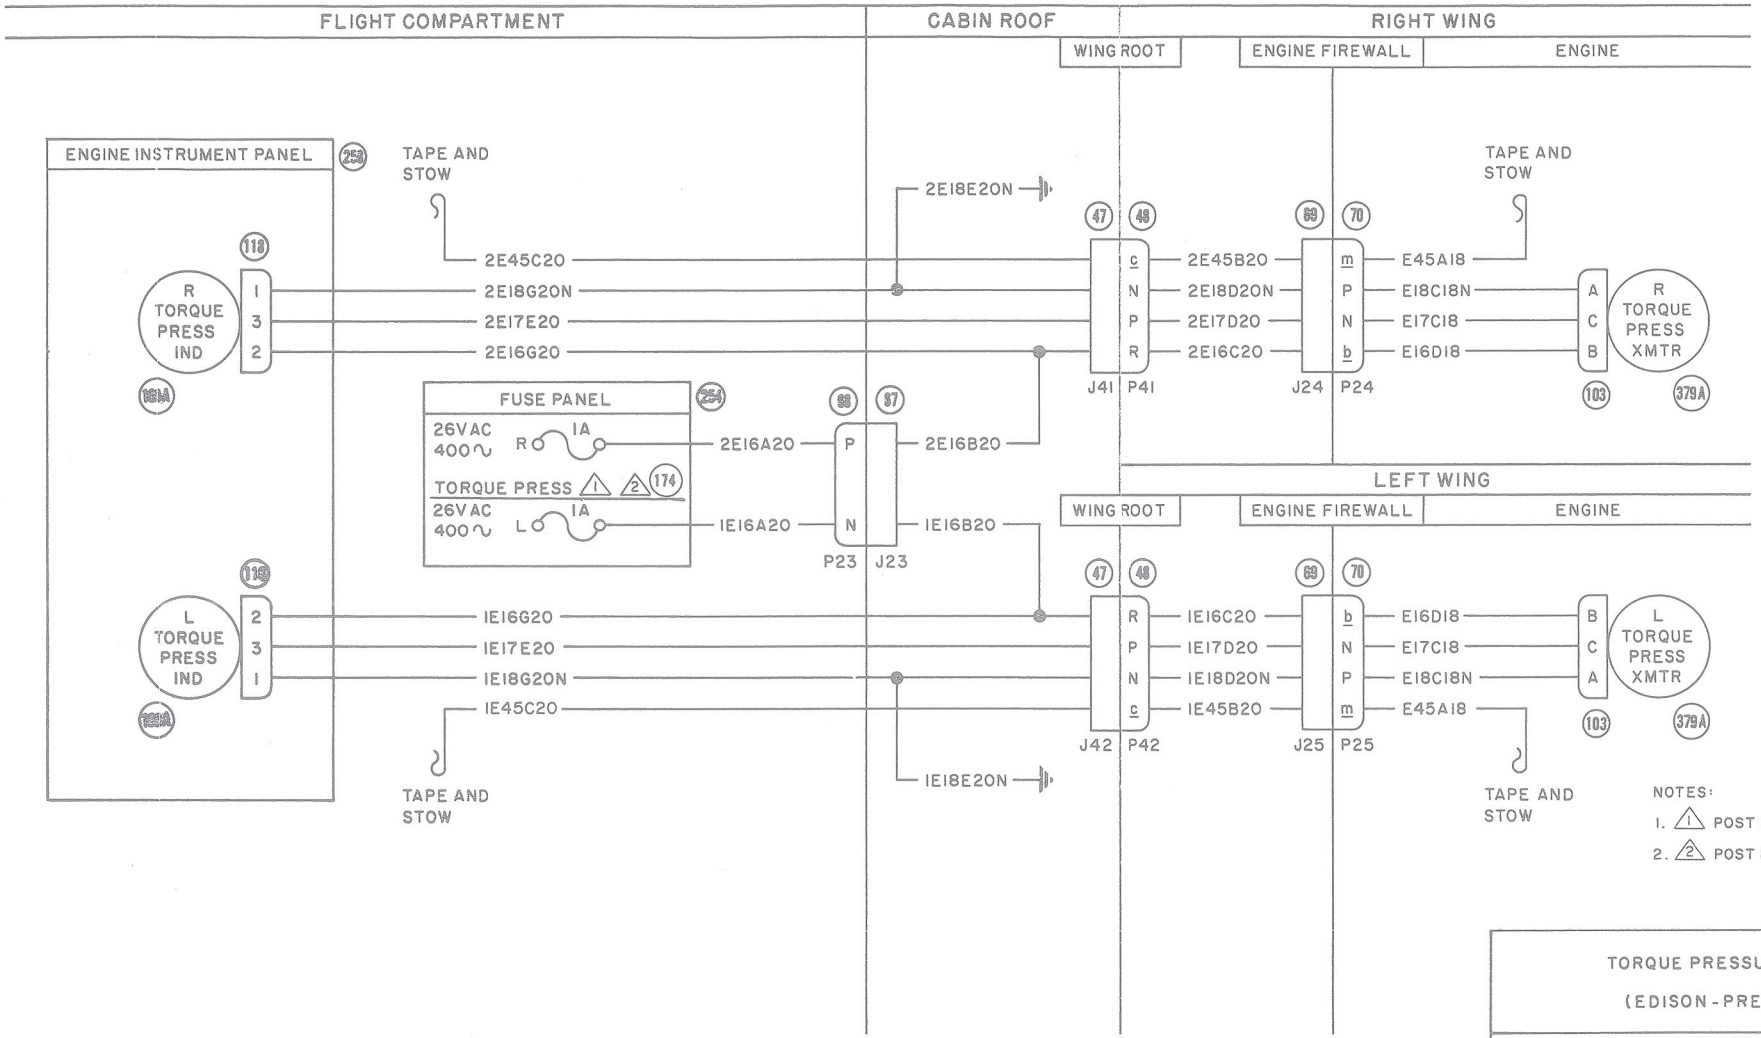

NOTES:
1. ⚠1 POST MOD 6/1388 (459)
2. ⚠2 POST MOD S.O.O. 6142 1/2A (457)

TORQUE PRESSURE INDICATION
(EDISON - PRE MOD 6/1444)

C6N1002/27/B ISSUE NO. 1 2 3 4

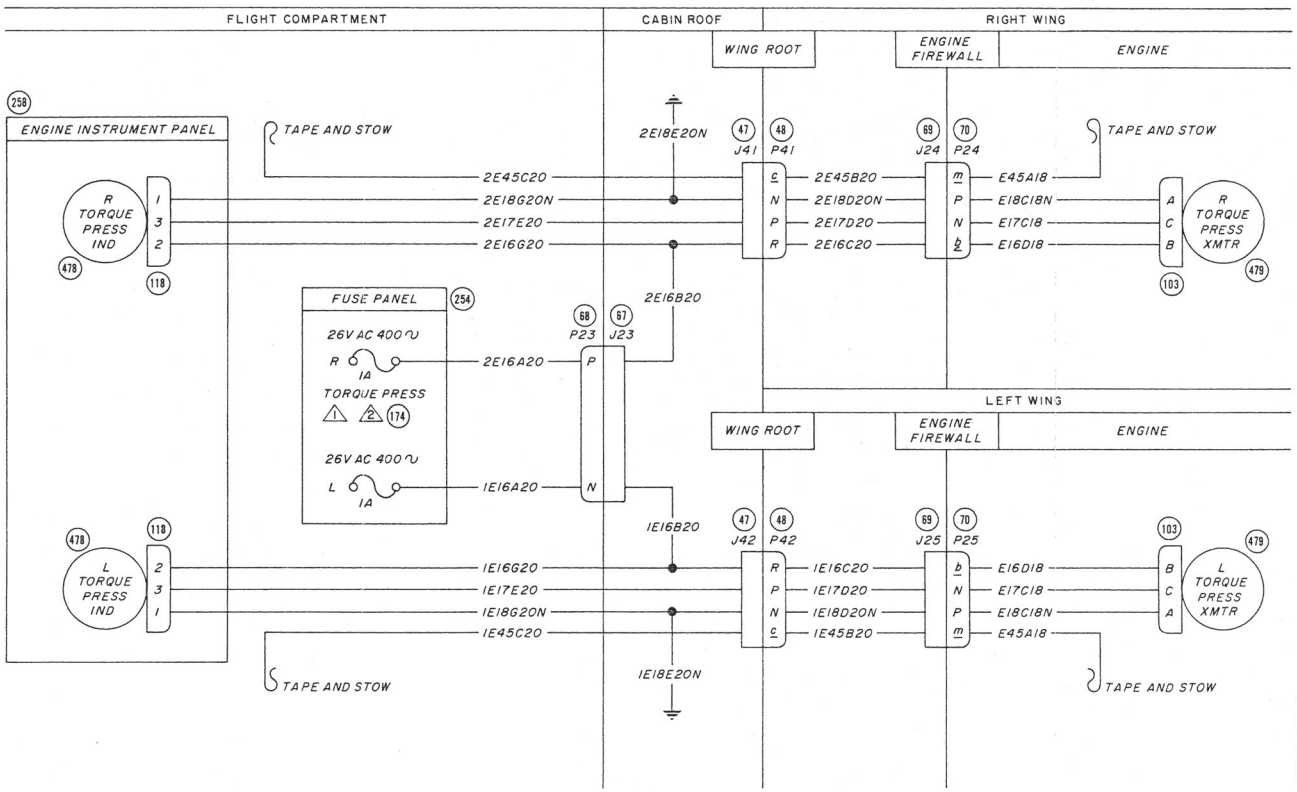

NOTES:
1. ⚠1 POST MOD 6/1388 (459)
2. ⚠2 POST MOD S.O.O. 6142, 1/2A (457)

TORQUE PRESSURE INDICATION
(EDISON - RETROFIT MOD 6/1444)
C6N1002/27/C, C6Z1766 ISSUE NO. 1

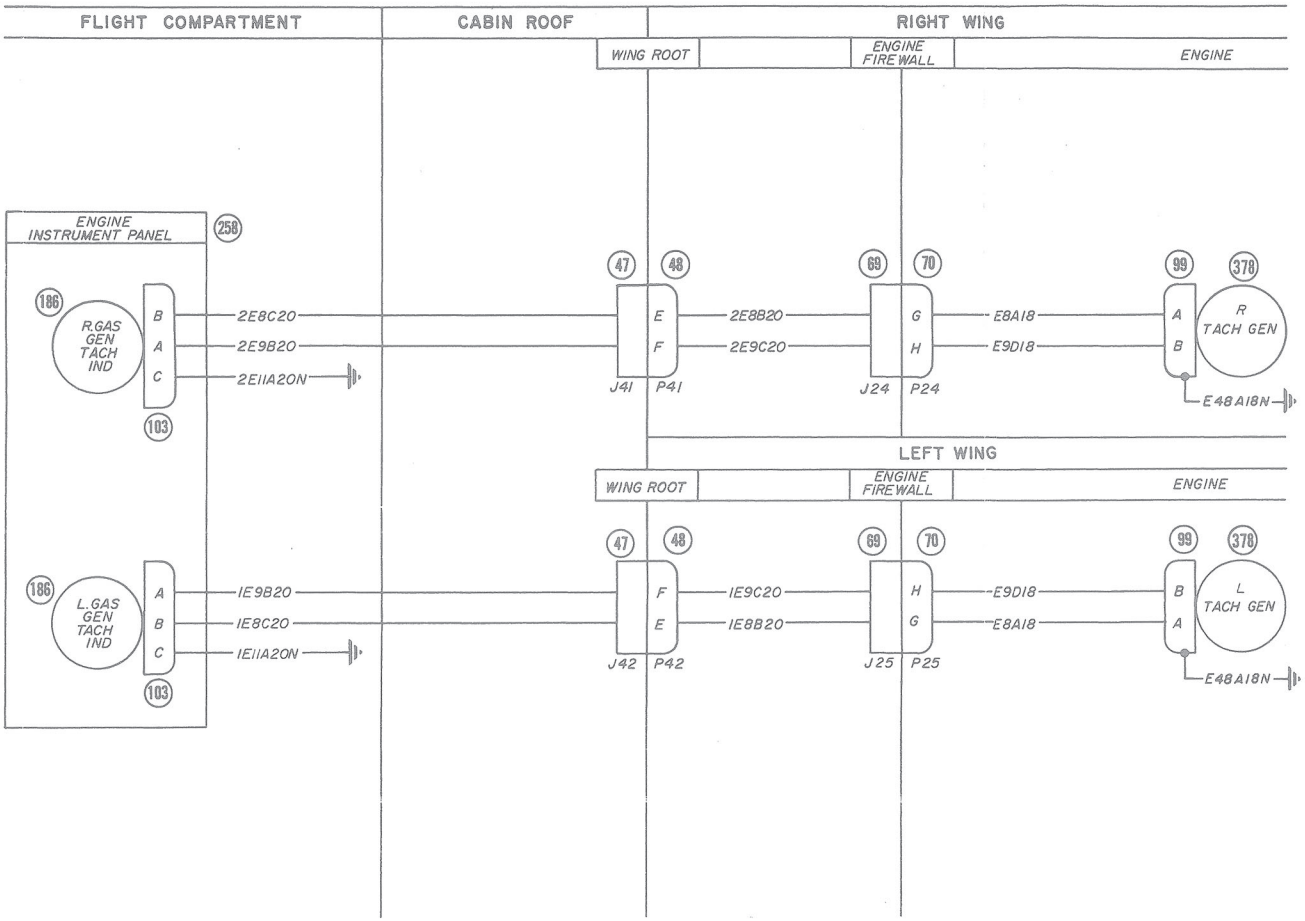

GAS GENERATOR TACHOMETER INDICATION

C6N1002/27/B ISSUE NO. 1

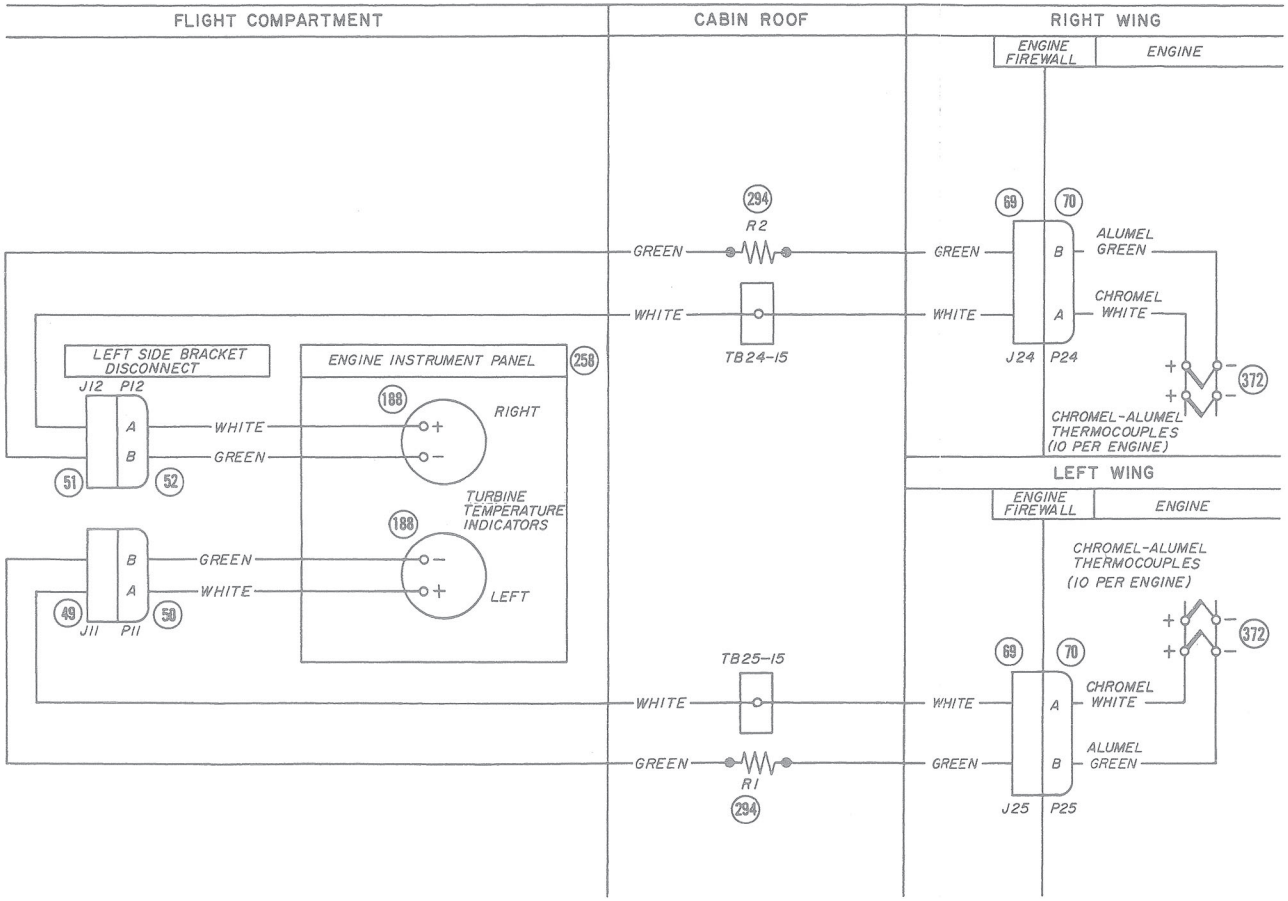

TURBINE TEMPERATURE INDICATION		
C6N1002/27/B	ISSUE NO.	1

LIST OF EFFECTIVE PAGES: CHAPTER 79: OIL

Reference	Page	Date
Contents	1	Mar 1/69
79-30-00	*1	Jun 8/71
	2	Mar 1/69

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 79 - OIL

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
INDICATING	79-30-00	
Oil Pressure Indication		1
Oil Temperature Indication		2

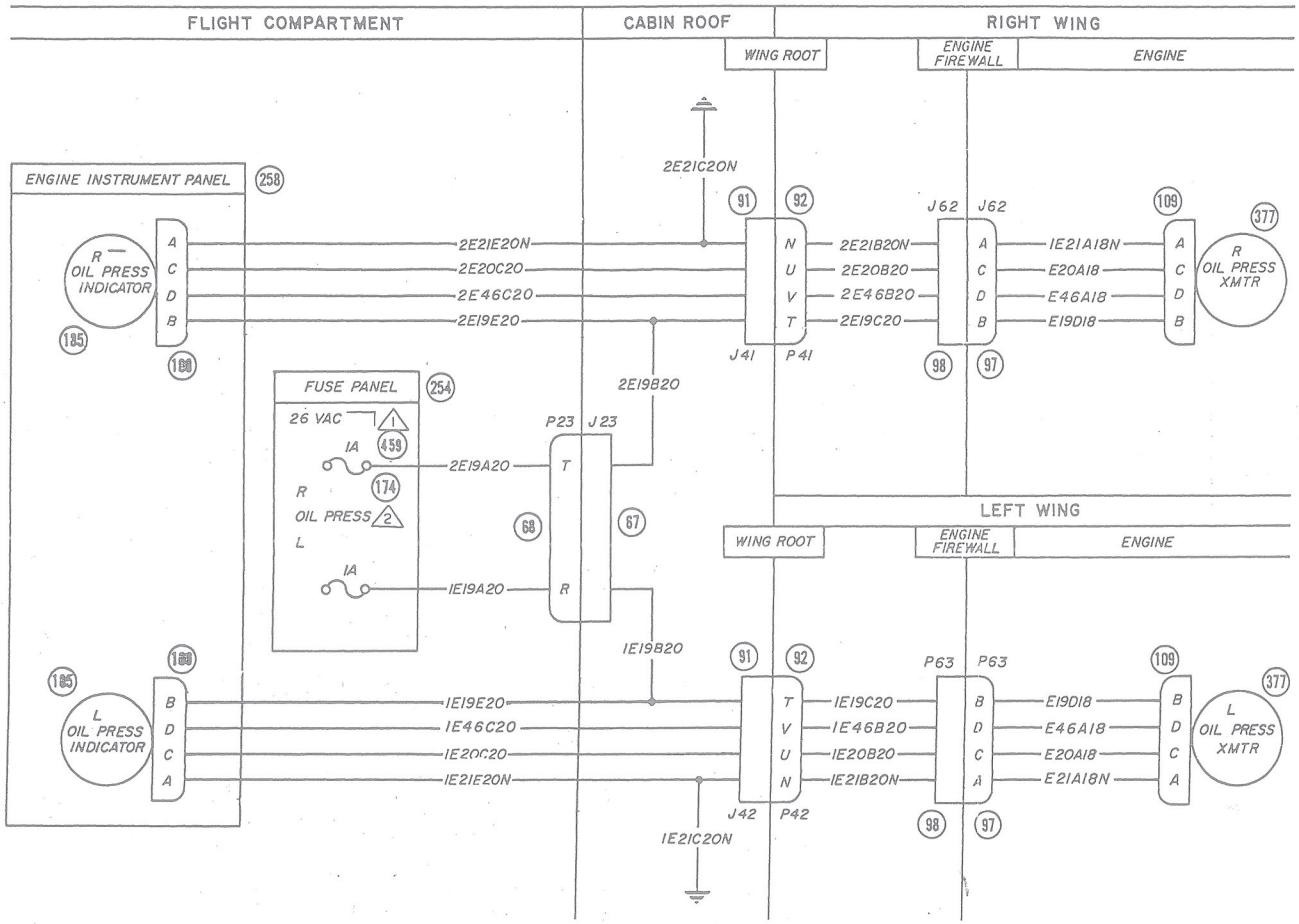

NOTES:

1. ⚠1 POST MOD 6/1388
2. ⚠2 POST MOD S.O.O.6142, 1/2A (457)
3. SEE FIGURE 30-60-00 FOR LOW OIL PRESSURE CAUTION CIRCUIT

OIL PRESSURE INDICATION									
C6N1002/27/B	ISSUE NO.	1	2	3					

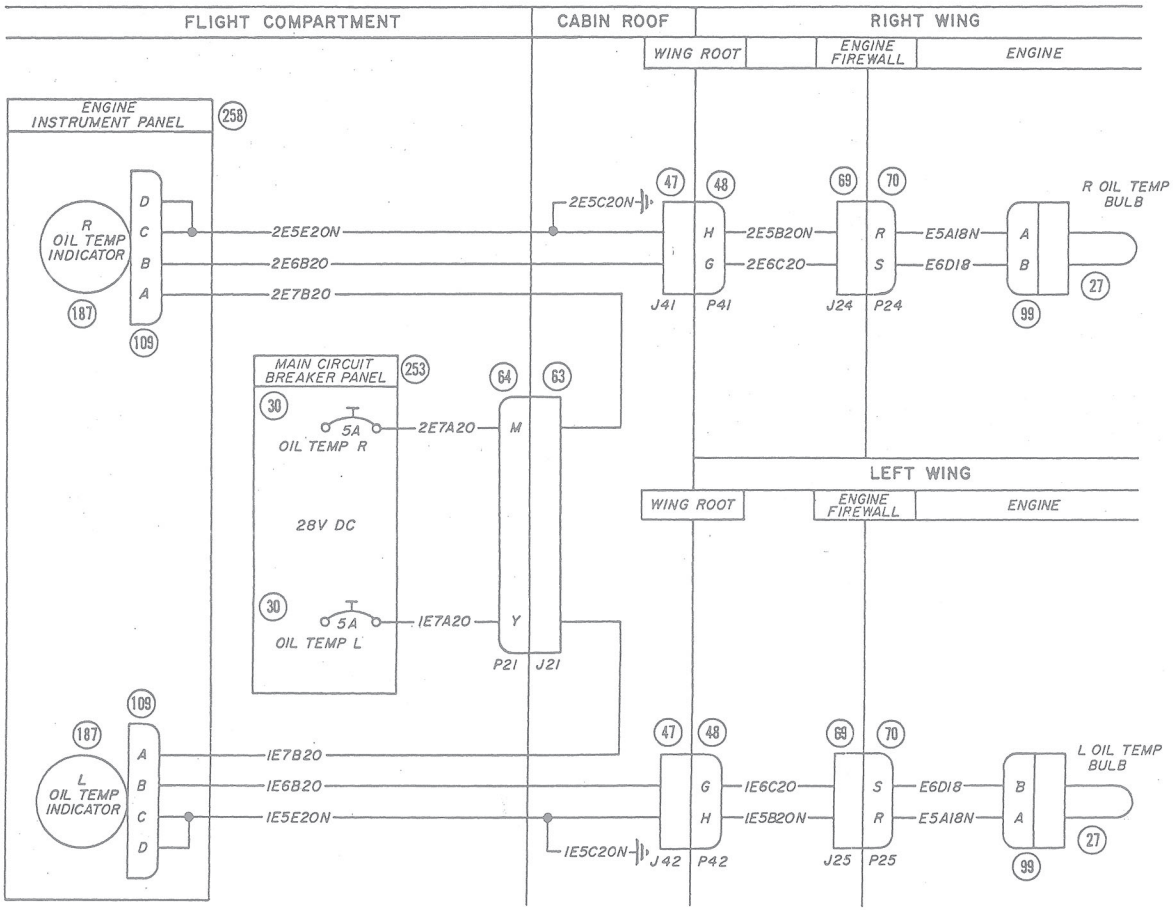

OIL TEMPERATURE INDICATION

C6N1002/27/B ISSUE NO. 1

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: CHAPTER 80: STARTING

Reference	Page	Date
Contents	*1	Jun 16/80
80-10-00	*1	Jun 16/80
	*2	Jun 16/80
	*3	Jun 16/80

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 80 - STARTING

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
CRANKING	80-10-00	
Engine Starting System - Sheet 1		1
Engine Starting System - (Pre Mod 6/1688) Sheet 2		2
Engine Starting System - (Mod 6/1688) Sheet 3		3

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DHC–6 **SERIES:** 300

PUBLICATION: WIRING DIAGRAM MANUAL **TEMPORARY REVISION NO.:** W24

Insert in 80-10-00, before Page 1

ENGINE STARTING SYSTEM

REASON FOR ISSUE:
To update the start switch wiring.

ACTION:
In PSM 1–63–2W, Section 80-10-00, ignore existing Page 1 and insert revised page, as shown on Page 3 of this Temporary Revision.

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

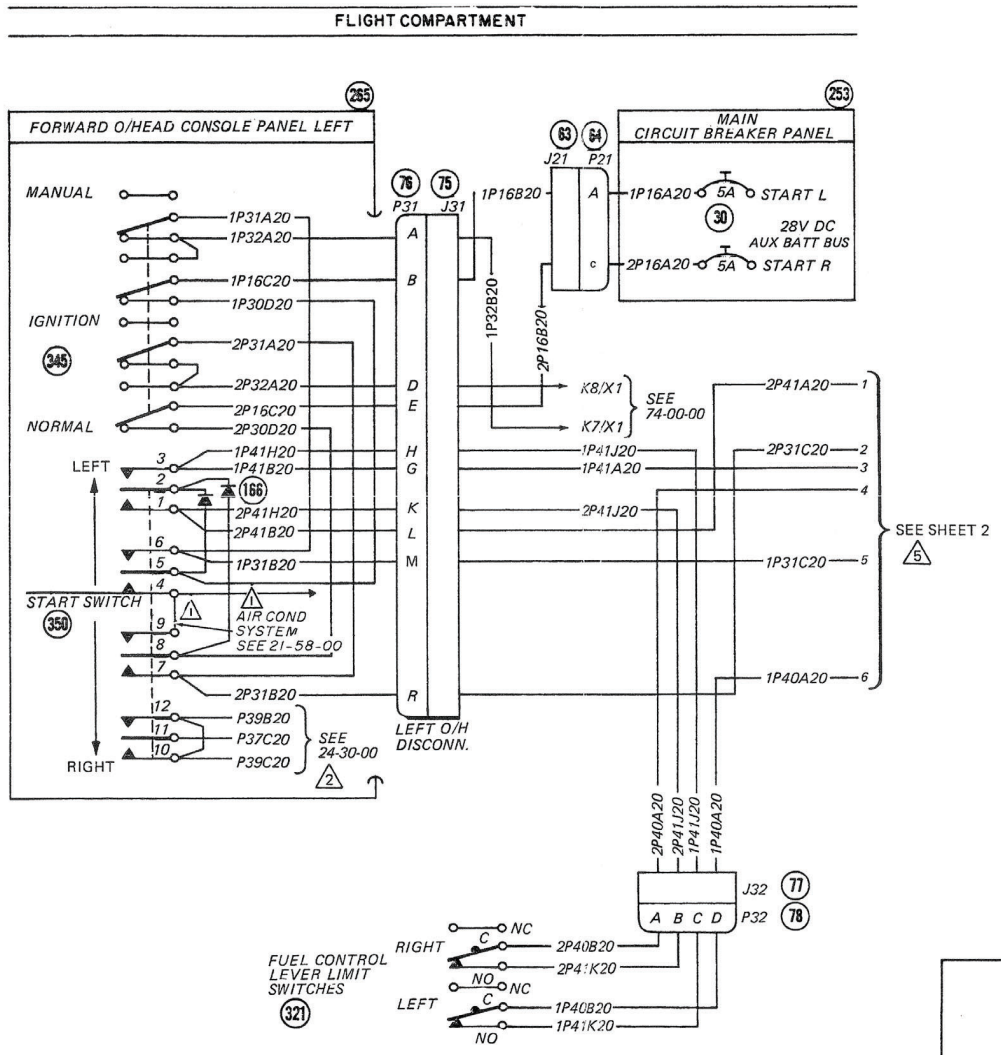

NOTES:

1. POST MOD 6/1305
2. FOR AIRCRAFT WITH MOD 6/1651 INCORPORATED SEE 24–30–03
3. CIRCUIT SHOWING PRE MOD 6/1591 CONNECTIONS
4. MOD 6/1591. FOR PRE MOD WIRING REFER TO WIRING AT RIGHT HAND OF SHEET 2
5. FOR AIRCRAFT WITH MOD 6/1688 INCORPORATED SEE SHEET 3

ENGINE STARTING SYSTEM

(SHEET 1)

C6N1002/4/C ISSUE NO. 1 2 3 4 5 6

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

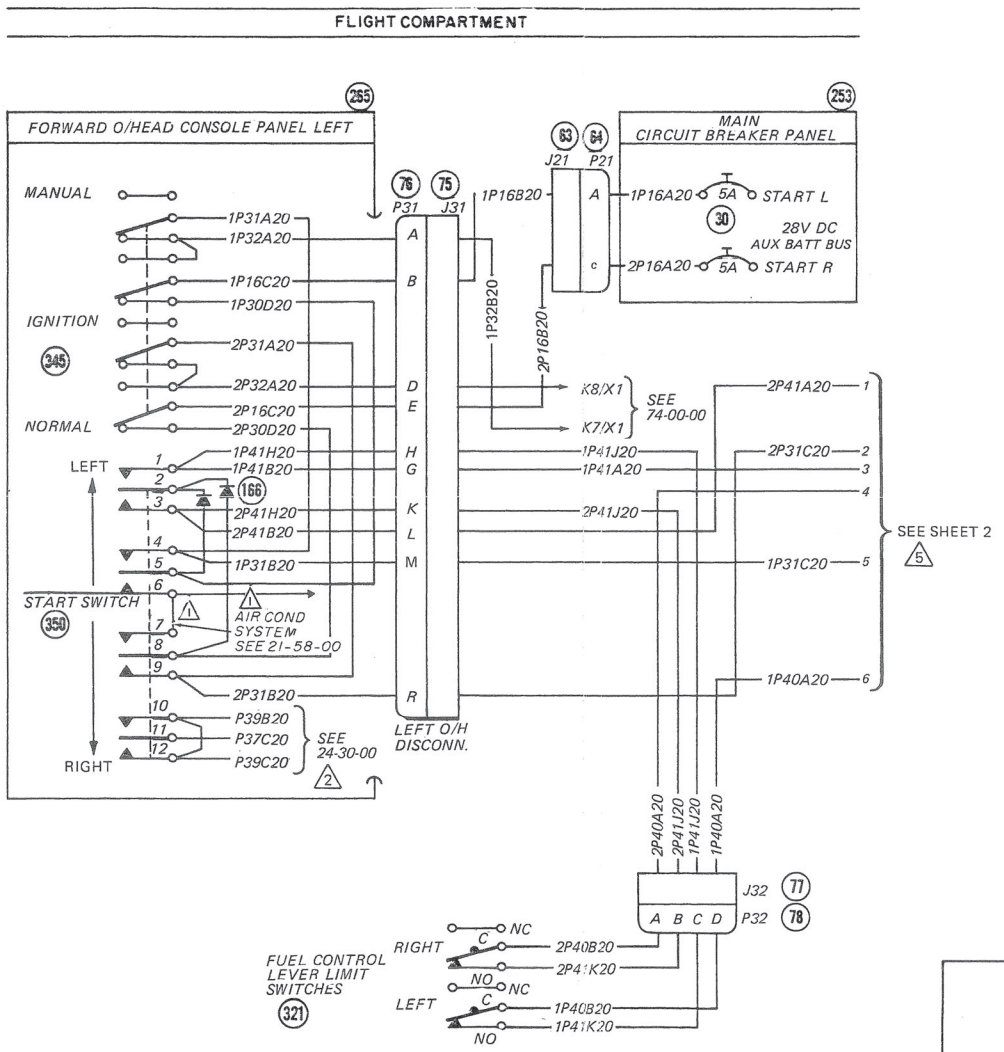

NOTES:

1. POST MOD 6/1305
2. FOR AIRCRAFT WITH MOD 6/1651 INCORPORATED SEE 24–30–03
3. CIRCUIT SHOWING PRE MOD 6/1591 CONNECTIONS
4. MOD 6/1591. FOR PRE MOD WIRING REFER TO WIRING AT RIGHT HAND OF SHEET 2
5. FOR AIRCRAFT WITH MOD 6/1688 INCORPORATED SEE SHEET 3

ENGINE STARTING SYSTEM

(SHEET 1)

C6N1002/4/C ISSUE NO. 1 2 3 4 5

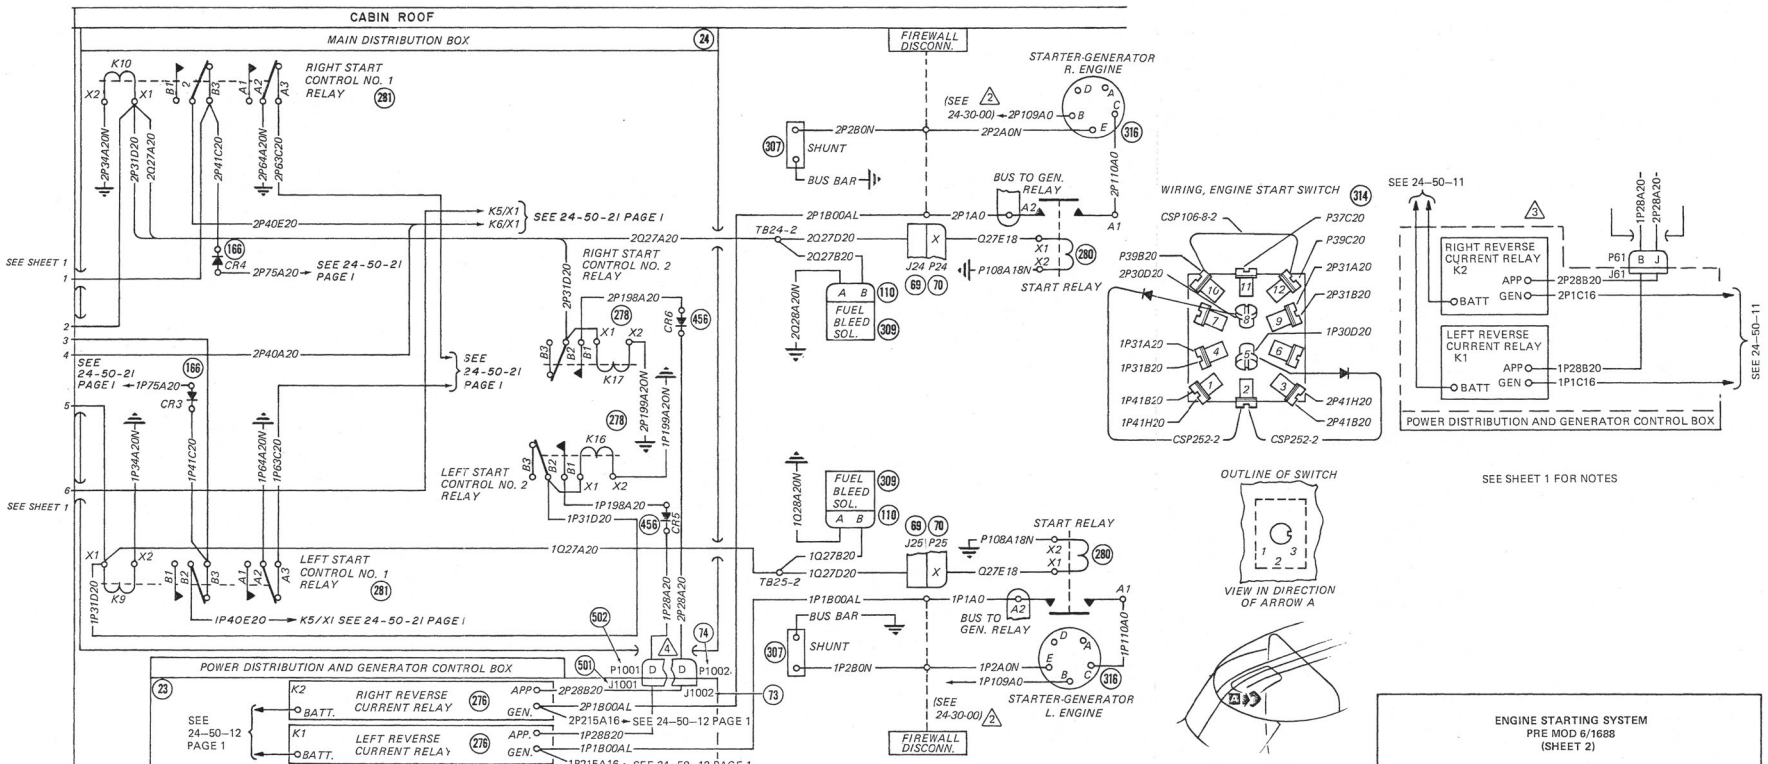

ENGINE STARTING SYSTEM PRE MOD 6/1688 (SHEET 2)								
C6N1002/4/C	ISSUE NO.	1	2	3	4	5		

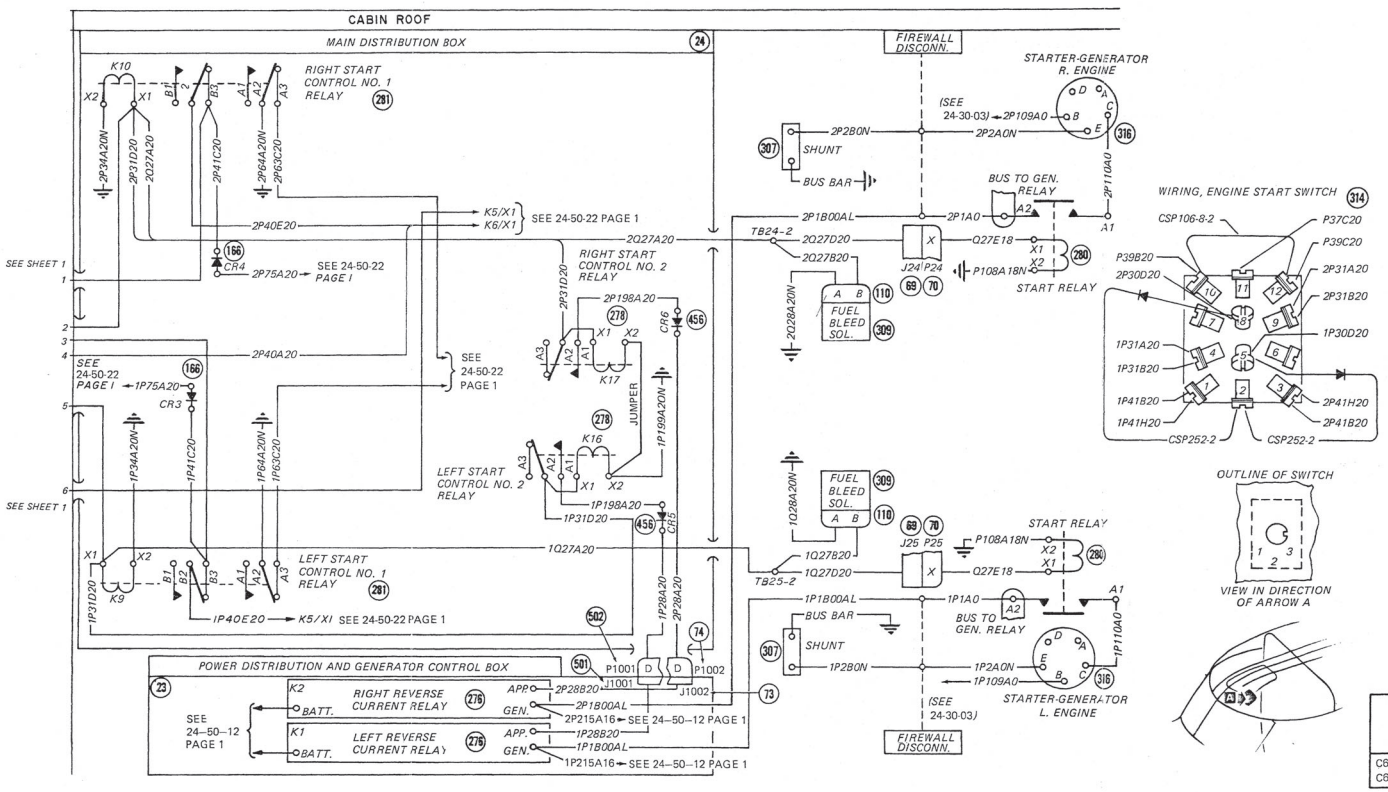

SEE SHEET 1 FOR NOTES

ENGINE STARTING SYSTEM
MOD 6/1688
(SHEET 3)

C6NF1377/1/– AND
C6N1002/4/C
ISSUE NO. 1