CHAPTER

44

CABIN SYSTEMS

CHAPTER 44
CABIN SYSTEMS

Subject/Page	Date	COC
44-EFFECTIVE PAGES		
1 thru 2	Sep 15/2026	
44-CONTENTS		
1	May 15/2024	
2	May 15/2024	
3	May 15/2024	
4	Jan 15/2025	
44-35-00		
201	Jan 15/2025	
202	Jan 15/2025	
203	May 15/2026	
204	Jan 15/2025	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	May 15/2024	
219	May 15/2024	
220	May 15/2024	
221	May 15/2024	
222	May 15/2024	
223	May 15/2024	
224	BLANK	
44-35-00		
501	May 15/2024	
502	Jan 15/2025	
503	May 15/2024	
504	May 15/2024	
505	May 15/2024	
44-35-00 (cont)		
506	May 15/2024	
507	Jan 15/2025	
508	May 15/2024	
509	May 15/2024	
510	May 15/2024	
44-35-01		
401	Jan 15/2025	
402	May 15/2024	
403	May 15/2024	
404	Jan 15/2025	
405	Jan 15/2025	
406	Jan 15/2025	
44-35-05		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	BLANK	
44-35-24		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
R 404	Sep 15/2026	
405	May 15/2024	
406	May 15/2024	
44-35-26		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
R 405	Sep 15/2026	
O 406	Sep 15/2026	
O 407	Sep 15/2026	
408	BLANK	
44-35-27		
201	May 15/2024	
202	May 15/2024	
44-35-27		
401	Jan 15/2026	
402	Jan 15/2026	
403	Jan 15/2026	
404	May 15/2024	
405	Jan 15/2026	
406	May 15/2026	
407	May 15/2026	
408	Jan 15/2026	
409	Jan 15/2026	
410	Jan 15/2026	
44-35-28		
201	Jan 15/2025	
202	May 15/2024	
203	May 15/2024	
204	Jan 15/2025	
205	May 15/2024	
206	May 15/2024	
44-35-28		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
R 407	Sep 15/2026	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
44-35-30		
401	Jan 15/2026	
402	Jan 15/2026	
403	Jan 15/2026	
404	May 15/2024	
405	May 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

44-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 44
CABIN SYSTEMS

Subject/Page	Date	COC
44-35-30 (cont)		
406	Jan 15/2026	
407	Jan 15/2026	
408	BLANK	
44-35-34		
401	Jan 15/2025	
402	Jan 15/2025	
403	May 15/2024	
404	Jan 15/2025	
405	Jan 15/2025	
406	Jan 15/2025	

Subject/Page	Date	COC

Subject/Page	Date	COC

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

44-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 44
CABIN SYSTEMS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
BROADBAND COMMUNICATION SYSTEM - MAINTENANCE PRACTICES	44-35-00		201	PTF ALL
Broadband Communication System Deactivation TASK 44-35-00-040-801			201	PTF ALL
Broadband Communication System Activation TASK 44-35-00-440-801			202	PTF ALL
Log into the Maintenance Portal TASK 44-35-00-860-807			205	PTF ALL POST SB 737-44-1020
System Interface Unit Keyline Status TASK 44-35-00-860-808			206	PTF ALL POST SB 737-44-1020
Cabin Wireless Access Point Status and Radio Control TASK 44-35-00-860-809			206	PTF ALL POST SB 737-44-1020
Upload Software to System Interface Unit TASK 44-35-00-470-805			207	PTF ALL POST SB 737-44-1020
Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point TASK 44-35-00-470-806			209	PTF ALL POST SB 737-44-1020
Upload a Configuration Database to System Interface Unit TASK 44-35-00-470-807			210	PTF ALL POST SB 737-44-1020
View a Configuration Database TASK 44-35-00-860-810			211	PTF ALL POST SB 737-44-1020
Download a Configuration Database to the Maintenance Computer TASK 44-35-00-470-808			212	PTF ALL POST SB 737-44-1020
Activate a Configuration Database TASK 44-35-00-440-802			213	PTF ALL POST SB 737-44-1020
View Line Replaceable Unit (LRU) Faults TASK 44-35-00-800-801			214	PTF ALL POST SB 737-44-1020
Data Offload Take Log Snapshot and Download Logs TASK 44-35-00-970-801			214	PTF ALL POST SB 737-44-1020
Reset Line Replaceable Unit (LRU) TASK 44-35-00-850-801			215	PTF ALL POST SB 737-44-1020

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 44
CABIN SYSTEMS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
View Flight Data TASK 44-35-00-860-811			216	PTF ALL POST SB 737-44-1020
Check SATCOM Information and Change the Data Load Discrete Status TASK 44-35-00-860-812			216	PTF ALL POST SB 737-44-1020
Cabin Wireless Access Point Software High Power and Unique Radio SSID Test TASK 44-35-00-710-806			217	PTF ALL POST SB 737-44-1020
Content Load TASK 44-35-00-470-809			219	PTF ALL POST SB 737-44-1020
Data Load SATCOM LRUs using the AIT Flight Simulyzer Software TASK 44-35-00-470-810			219	PTF ALL POST SB 737-44-1020
Jetwave MODMAN to KRFU Coax Cable Calibration TASK 44-35-00-820-801			221	PTF ALL POST SB 737-44-1020
Run Conformity and Download Report TASK 44-35-00-860-813			222	PTF ALL POST SB 737-44-1020
BROADBAND COMMUNICATION SYSTEM - ADJUSTMENT/TEST	44-35-00		501	PTF ALL POST SB 737-44-1020
Cabin Wireless Access Point Operational Test TASK 44-35-00-710-805			501	PTF ALL POST SB 737-44-1020
Cabin Connect System - Connectivity Test TASK 44-35-00-730-808			502	PTF ALL POST SB 737-44-1020
Broadband Communication System - System Test TASK 44-35-00-730-807			508	PTF ALL POST SB 737-44-1020
BROADBAND CONTROL PANEL - REMOVAL/INSTALLATION	44-35-01		401	PTF ALL POST SB 737-44-1020
Broadband Control Panel Removal TASK 44-35-01-000-801			401	PTF ALL POST SB 737-44-1020
Broadband Control Panel Installation TASK 44-35-01-400-801			405	PTF ALL POST SB 737-44-1020
SYSTEM INTERFACE UNIT - REMOVAL/INSTALLATION	44-35-05		401	PTF ALL POST SB 737-44-1020
System Interface Unit Removal TASK 44-35-05-000-801			401	PTF ALL POST SB 737-44-1020

44-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 44
CABIN SYSTEMS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
System Interface Unit Installation TASK 44-35-05-400-801			405	PTF ALL POST SB 737-44-1020
CABIN WIRELESS ACCESS POINT - REMOVAL/INSTALLATION	44-35-24		401	PTF ALL POST SB 737-44-1020
Cabin Wireless Access Point Removal TASK 44-35-24-000-801			401	PTF ALL POST SB 737-44-1020
Cabin Wireless Access Point Installation TASK 44-35-24-400-801			404	PTF ALL POST SB 737-44-1020
AIRPLANE PERSONALITY MODULE - REMOVAL/INSTALLATION	44-35-26		401	PTF ALL
Airplane Personality Module Removal TASK 44-35-26-000-801			401	PTF ALL
Airplane Personality Module Installation TASK 44-35-26-400-801			405	PTF ALL
KA/KU-BAND RADIO FREQUENCY UNIT - MAINTENANCE PRACTICES	44-35-27		201	PTF ALL
Replacement of the Thermal Pad TASK 44-35-27-960-801			201	PTF ALL
KA/KU-BAND RADIO FREQUENCY UNIT - REMOVAL/INSTALLATION	44-35-27		401	PTF ALL
Ka/Ku-band Radio Frequency Unit Removal TASK 44-35-27-000-801			401	PTF ALL
Ka/Ku-band Radio Frequency Unit Installation TASK 44-35-27-400-801			406	PTF ALL
FUSELAGE MOUNTED ANTENNA - MAINTENANCE PRACTICES	44-35-28		201	PTF ALL POST SB 737-44-1020
Jetwave Antenna Calibration TASK 44-35-28-820-801			201	PTF ALL POST SB 737-44-1020
Jetwave Manual Antenna Steering TASK 44-35-28-820-802			205	PTF ALL POST SB 737-44-1020
FUSELAGE MOUNTED ANTENNA - REMOVAL/INSTALLATION	44-35-28		401	PTF ALL
Fuselage Mounted Antenna Removal TASK 44-35-28-000-801			401	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 44
CABIN SYSTEMS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Fuselage Mounted Antenna Installation TASK 44-35-28-400-801			407	PTF ALL
KA/KU-BAND AIRCRAFT NETWORK UNIT - REMOVAL/INSTALLATION	44-35-30		401	PTF ALL
Ka/Ku-band Aircraft Network Unit Removal TASK 44-35-30-000-801			401	PTF ALL
Ka/Ku-band Aircraft Network Unit Installation TASK 44-35-30-400-801			405	PTF ALL
MODMAN CONTROL PROCESSOR UNIT - REMOVAL/INSTALLATION	44-35-34		401	PTF ALL
MODMAN Control Processor Unit Removal TASK 44-35-34-000-801			401	PTF ALL
MODMAN Control Processor Unit Installation TASK 44-35-34-400-801			405	PTF ALL

44-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

BROADBAND COMMUNICATION SYSTEM - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Broadband Communication System Deactivation

(2) Broadband Communication System Activation

PTF ALL POST SB 737-44-1020

(3) Log into the Maintenance Portal

(4) System Interface Unit Keyline Status

(5) Cabin Wireless Access Point Status and Radio Control

(6) Upload Software to System Interface Unit

(7) Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point

(8) Upload a Configuration Database to System Interface Unit

(9) View a Configuration Database

(10) Download a Configuration Database to the Maintenance Computer

(11) Delete a Configuration Database from the System Interface Unit

(12) Activate a Configuration Database

(13) View Line Replaceable Unit (LRU) Faults

(14) Data Offload Take Log Snapshot and Download Logs

(15) Reset Line Replaceable Unit (LRU)

(16) View Flight Data

(17) Check SATCOM Information and Change the Data Load Discrete Status

(18) Content Load

(19) Cabin Wireless Access Point Software High Power and Unique Radio SSID Test

(20) Data Load SATCOM LRUs using the AIT Flight Simulyzer Software

(21) Jetwave MODMAN to KRFU Coax Cable Calibration

(22) Run Conformity and Download Report

PTF ALL

TASK 44-35-00-040-801

2. Broadband Communication System Deactivation

A. General

(1) This task has instructions to deactivate the broadband communication system.

B. Broadband Communication System Deactivation

SUBTASK 44-35-00-040-001

(1) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL POST SB 737-44-1021

A	8	C04073	BROADBAND 1

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1021 (Continued)

(Continued)

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
A	9	C04074	BROADBAND 2

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
D	12	C04075	CWAP/SERVER
D	13	C04076	BROADBAND/WIFI CONTROL

PTF ALL

These circuit breakers are inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL PRE SB 737-44-1021

A	8	C04073	BROADBAND 1 (INOP)
A	9	C04074	BROADBAND 2 (INOP)

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
D	12	C04075	CWAP/SERVER (INOP)
D	13	C04076	BROADBAND/WIFI CONTROL (INOP)

PTF ALL

SUBTASK 44-35-00-480-001

(2) Make sure that the overhead panel P5-13, IFE/PASS SEAT switch is OFF.

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-00-480-002

(3) Make sure that the overhead panel P5-99, BROADBAND CONTROL PANEL switch is OFF.

PTF ALL

——— END OF TASK ———

TASK 44-35-00-440-801

3. Broadband Communication System Activation

A. General

(1) This task has instructions to activate the broadband communication system.

B. Broadband Communication System Activation

SUBTASK 44-35-00-440-001

(1) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL POST SB 737-44-1021

A	8	C04073	BROADBAND 1

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1021 (Continued)

(Continued)

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
A	9	C04074	BROADBAND 2

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
D	12	C04075	CWAP/SERVER
D	13	C04076	BROADBAND/WIFI CONTROL

PTF ALL

These circuit breakers are inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL PRE SB 737-44-1021

A	8	C04073	BROADBAND 1 (INOP)
A	9	C04074	BROADBAND 2 (INOP)

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
D	12	C04075	CWAP/SERVER (INOP)
D	13	C04076	BROADBAND/WIFI CONTROL (INOP)

PTF ALL

SUBTASK 44-35-00-080-001

PTF ALL POST SB 737-44-1020

WARNING MAKE SURE THAT PERSONNEL STAY A MINIMUM OF 40 FEET (12 METERS) FROM THE TOP-MOUNTED ANTENNA WHILE IT TRANSMITS. IF YOU DO NOT OBEY, THE RADIO FREQUENCY (RF) ENERGY CAN CAUSE INJURIES TO PERSONNEL.

PTF ALL

(2) Energize the broadband system as follows:

(a) Set the overhead panel P5-13, IFE/PASS SEAT switch to ON.


PTF ALL POST SB 737-44-1020

(b) Set the overhead panel P5-99, BROADBAND CONTROL PANEL switch to ON.

PTF ALL

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

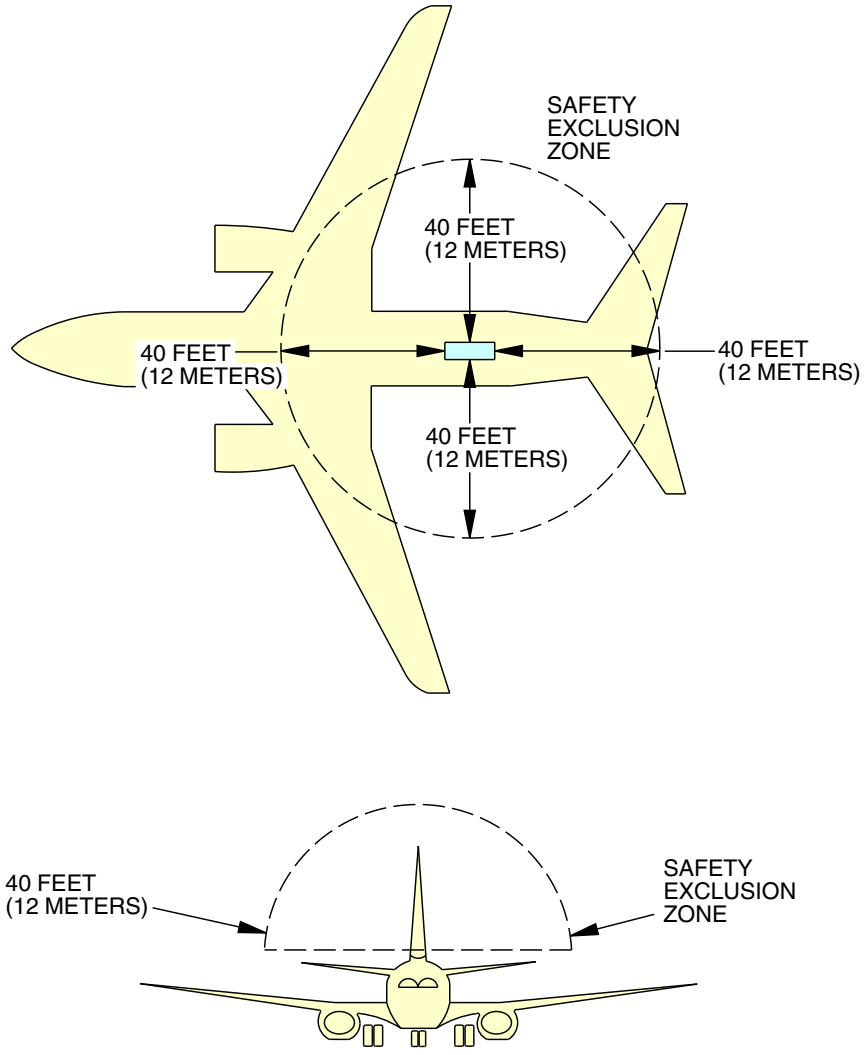

3082038 S0000837734_V1

RF Safety Exclusion Zone
Figure 201/44-35-00-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020

TASK 44-35-00-860-807

4. Log into the Maintenance Portal

A. General

(1) This task has instructions to Log into the Maintenance Portal with a maintenance laptop connected to the data port.

B. Tools/Equipment

Reference	Description
STD-13611	Laptop - Generic (Minimum requirements: Windows 7 SP1, 500MHz processor, 256MB RAM, 10/100 BaseT Ethernet port, CD-ROM/DVD media drive, 60GB hard drive, English language)

C. Location Zones

Zone	Area
221	Passenger Compartment - Aft of Control Compartment to Forward Entry Door - Left

D. Log into the Maintenance Portal

SUBTASK 44-35-00-480-005

(1) Connect the maintenance laptop, STD-13611 to the data port.

SUBTASK 44-35-00-860-105

(2) To log on to the maintenance portal, do the following steps:

(a) Select the applicable web browser on the maintenance laptop.

(b) Enter the address: “maint.cabinconnect.net” or “http://172.17.3.2/Maintenancehome” in the web browser.

(c) Make sure that the maintenance portal login screen is shown.

(d) At the Login screen, enter the applicable password.

(e) Select the Go button.

(f) Make sure that the maintenance portal home screen is shown.

SUBTASK 44-35-00-860-172

(3) To log on to the Jetwave maintenance screen, do the following steps:

(a) On the maintenance laptop, open the web browser.

(b) Enter the IP address: 172.29.55.1

1) Make sure that the Jetwave maintenance screen is shown.

(c) Enter the applicable username and password.

1) Make sure that the Jetwave Access Center screen is shown.

(d) On the Jetwave Access Center, make sure that the system Status is shown OK.

1) Make sure that the system is fully booted.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

TASK 44-35-00-860-808

5. System Interface Unit Keyline Status

A. General

(1) This task has instructions to check the System Interface Unit (SIU) keyline status from the maintenance portal page.

B. System Interface Unit Keyline Status

SUBTASK 44-35-00-860-106

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

SUBTASK 44-35-00-860-107

(2) On the Maintenance Portal screen, select the Keyline Status page.

(a) On the Keyline Status page, select the SIU IN tab.

NOTE: The Keyline Status Screen shows the SIU Input keyline states as follows:

- Green - Active
- Amber - Inactive
- White - No Data.

(b) On the Keyline Status page, select the SIU OUT tab.

NOTE: The Keyline Status Screen shows the SIU Output keyline states as follows:

- Green - Active
- Amber - Inactive.

(c) To change the Local Data Load Enable status, press the applicable Active/Inactive button.

(d) To change the Public Service Disable status, press the applicable Active/Inactive button.

(e) To change the Modman Reset status, press the applicable Active/Inactive button.

(f) To change the Factory/Bench status, press the applicable Active/Inactive button.

——— END OF TASK ———

TASK 44-35-00-860-809

6. Cabin Wireless Access Point Status and Radio Control

A. General

(1) This task has instructions to check the status and control the state of the radio for the Cabin Wireless Access Point (CWAP).

B. Cabin Wireless Access Point Status and Radio Control

SUBTASK 44-35-00-860-108

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

SUBTASK 44-35-00-860-109

(2) On the Maintenance Portal screen, select the Cabin WAP page.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) On the Cabin WAP page, select the CWAP Status tab.

NOTE: The CWAP Status tab allows viewing of radio information for each CWAP. Additional Information for each CWAP can also be viewed. The scroll bar on the right can be used to scroll down and access all CWAPs. The number of users connected is also displayed.

(b) On the Cabin WAP page, push the “Plus” button for additional information to a applicable CWAP.

NOTE: The general information tab is expanded by default. Radio 1 and Radio 2 information can also be expanded.

(c) On the Cabin WAP page, select the applicable Enable All or Disable All button for all CWAP radios.

NOTE: All Radio operational states will display the state that was selected and all radios will be at the selected state.

(d) On the Cabin WAP page, select the applicable Enable or Disable button for a CWAP radio.

NOTE: The Radio Opstate will toggle.

(e) On the Cabin WAP page, select the VSC Status tab to view SSID information and statuses.

NOTE: The VSC Status tab allows viewing of SSID information and statuses for each CWAP. The scroll bar on the right can be used to scroll down and access all CWAPs.

——— END OF TASK ———

TASK 44-35-00-470-805

7. Upload Software to System Interface Unit

A. General

(1) This task has instructions to upload software to the System Interface Unit (SIU) from a USB drive.

B. Tools/Equipment

Reference	Description
STD-13611	Laptop - Generic (Minimum requirements: Windows 7 SP1, 500MHz processor, 256MB RAM, 10/100 BaseT Ethernet port, CD-ROM/DVD media drive, 60GB hard drive, English language)

C. Upload Software to the System Interface Unit

SUBTASK 44-35-00-480-006

(1) Connect a USB drive to the maintenance laptop, STD-13611.

(a) Make sure that the applicable software is on the USB drive.

SUBTASK 44-35-00-860-110

(2) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

SUBTASK 44-35-00-860-111

(3) On the Maintenance Portal screen, make sure that the LRU Summary Status is on the Top Toolbar.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Make sure that the SIU, SATCOM, and CWAP buttons are green.

SUBTASK 44-35-00-860-112

(4) On the Maintenance Portal screen, select the Software Load button.

(a) Make sure that the Software Load screen is shown.

NOTE: Software Upload is accomplished by uploading files within two folders. The folder names always start with an M or an X. The rest of numbering changes with each load. The format of the numbering would be similar to this (MXXXX-XXXX-XXXX, XYYYY-YYYY-YYYY). Typical names for the folders would be MIP2B-9992-62A1 and XAR37-CCN3-0100. The folder that starts with an M loads faster than the folder that starts with an X.

SUBTASK 44-35-00-860-113

(5) On the Software Load screen, select the Folder button.

(a) Make sure that the Browse for Folder pop-up is shown.

NOTE: The Software Folder gets selected, not the software files.

SUBTASK 44-35-00-860-114

(6) Select the applicable software in the folder.

SUBTASK 44-35-00-860-115

(7) Select the Upload button on the pop-up.

(a) Make sure that the load transfer status is shown.

NOTE: The progress of the upload is displayed while the upload is under way. Do not refresh the browser or navigate away from this page until both folders have been uploaded. Make sure that the progress bar for the second folder displays 100% and the Validation Status pop-up displays. In order not to loose files that have already been uploaded do navigate away from this page until the Validation Status pop-up is dismissed. If you navigate from this page before both folders are completely uploaded and before the Validation Status pop-up is dismissed, any files that have been already uploaded will be lost.

SUBTASK 44-35-00-860-116

(8) Repeat the file transfer process for each applicable folder.

(a) Make sure that the Validation pop-up is shown.

NOTE: The SIU carries out the Validation Check of the software. If the check is successful, the software will be automatically moved to the active software memory in the SIU and a message will appear to say that the Validation was successful.

SUBTASK 44-35-00-860-117

(9) On the Validation status pop-up, select the Dismiss button.

(a) Make sure that the Software Load Transfer Status screen is shown.

SUBTASK 44-35-00-860-118

(10) On the Software Load Transfer Status screen, select the Back to Software Load button.

(a) Make sure that the Software Load screen is shown.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

TASK 44-35-00-470-806

8. Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point

A. General

(1) This task has instructions to load the uploaded software from the System Interface Unit (SIU) to the Cabin Wireless Access Point (CWAP) and the SIU Line Replaceable Unit (LRU)s.

NOTE: The current software must be uploaded to the SIU before this procedure can be performed. When installing both the SIU and CWAP software, the SIU software must be installed first and the correct configuration database must be loaded and activated before the CWAPs can be loaded.

B. Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point

SUBTASK 44-35-00-860-119

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the software is uploaded to the SIU.

SUBTASK 44-35-00-860-120

(2) On the Maintenance Portal screen, select the Software Load button.

(a) Make sure that the Software Load screen is shown.

SUBTASK 44-35-00-860-121

(3) On the Software Load screen, select the applicable LRUs to load from the menu drop down.

NOTE: There are two types of loads that can be selected from the Select Type drop down. They are Orchestrated and Forced. Orchestrated compares the software with the software that is already loaded and loads only the software that is to be updated. It will not load the software over the existing software if it is the same version. Forced loads all selected software no matter if the software has already been loaded or not.

SUBTASK 44-35-00-860-122

(4) On the Software Load screen, select the type of load from the select type drop down menu.

(a) Make sure that the orchestrated load type is selected.

SUBTASK 44-35-00-470-015

(5) On the Software Load screen, select the start button.

(a) Make sure that the pop-up is shown to start the load.

SUBTASK 44-35-00-470-016

(6) On the pop-up window, select the OK button.

NOTE: The pop-up will be removed and the LRUs loading will be shown under Software Load Status. The progress of the load will be shown for each LRU. Make sure that the software load status is 100%. Make sure that the status changes from blue "In-Progress" to green "Success". When the Load is complete, the SIU will reboot.

NOTE: If Software Loading of the SIU hangs and no progress is made for 15 minutes, a power cycle of the SIU will resume the load.

NOTE: The SIU is rebooting display will eventually change to SIU is Initializing. Upon completion of the initialization, the maintenance portal screen is shown.

SUBTASK 44-35-00-860-123

(7) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Make sure that the Software Load screen is shown.

SUBTASK 44-35-00-210-005

(8) On the Software Load screen, make sure that the LRUs was loaded.

(a) Make sure that the status is shown as success.

NOTE: The correct software build is displayed and the date and time of the latest load is shown.

SUBTASK 44-35-00-470-017

(9) If the LRUs software load failed, repeat this procedure for the applicable LRUs.

(a) Make sure that the Forced Load type is selected for the software load in the drop down menu.

SUBTASK 44-35-00-860-124

(10) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

——— END OF TASK ———

TASK 44-35-00-470-807

9. Upload a Configuration Database to System Interface Unit

A. General

(1) This task has instructions to upload a configuration database to System Interface Unit (SIU) from a USB drive.

B. Tools/Equipment

Reference	Description
STD-13611	Laptop - Generic (Minimum requirements: Windows 7 SP1, 500MHz processor, 256MB RAM, 10/100 BaseT Ethernet port, CD-ROM/DVD media drive, 60GB hard drive, English language)

C. Upload a Configuration Database to System Interface Unit

SUBTASK 44-35-00-480-007

(1) Connect a USB drive to the maintenance laptop, STD-13611.

(a) Make sure that the applicable software is on the USB drive.

SUBTASK 44-35-00-860-125

(2) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the Configuration Load screen is shown.

NOTE: Loading Configuration is done in two parts. The first part is called Configuration Upload. This involves copying the configuration database from the Maintenance Laptop to the SIU. Configuration Upload can only be done from a maintenance computer. After the configuration database is uploaded (copied from the Maintenance Laptop to the SIU), the configuration file can be viewed, activated, downloaded back to the maintenance computer or deleted.

SUBTASK 44-35-00-860-126

(3) On the Configuration Load screen, select the Configuration Load button.

(a) Make sure that the Configuration Load screen is shown.

SUBTASK 44-35-00-860-127

(4) On the Configuration Load screen, select the Select Folder button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Make sure that the Browse for Folder pop-up window is shown.

NOTE: The Configuration Folder is selected, not the configuration database files.

SUBTASK 44-35-00-860-128

(5) On the Browse for Folder pop-up window, select the applicable configuration database.

SUBTASK 44-35-00-470-018

(6) Push the Upload button on the pop-up window.

(a) Make sure that the load transfer status is shown.

NOTE: The progress of the upload is shown while the upload is under way. Do not navigate away from the page until the progress bar turns from blue in-progress to green and 100% is shown. The "Configuration files(s) can be activated from the Configuration page" message is displayed.

SUBTASK 44-35-00-860-129

(7) On the Configuration Load screen, select the Back-to-Configuration Load button.

(a) Make sure that the Configuration Load screen is shown.

NOTE: The File Transfer progress reaches 100% and the Configuration file(s) is activated from the Configuration page.

——— END OF TASK ———

TASK 44-35-00-860-810

10. View a Configuration Database

A. General

(1) This task has instructions to view a configuration database.

B. View a Configuration Database

SUBTASK 44-35-00-860-130

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the Configuration Load screen is shown.

NOTE: Loading Configuration is done in two parts. The first part is called Configuration Upload. This involves copying the configuration database from the Maintenance Laptop to the SIU. Configuration Upload can only be done from a maintenance computer. After the configuration database is uploaded (copied from the Maintenance Laptop to the SIU), the configuration file can be viewed, activated, downloaded back to the maintenance computer or deleted.

SUBTASK 44-35-00-210-006

(2) Make sure that the applicable configuration database file(s) is loaded to the System Interface Unit (SIU).

SUBTASK 44-35-00-860-131

(3) On the Configuration Load screen, select the configuration database to view from the Select Configuration drop down.

SUBTASK 44-35-00-860-132

(4) On the Configuration drop down menu, select View on the menu.

(a) Make sure that the Configuration Details pop-up screen is shown.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

SUBTASK 44-35-00-860-133

(5) On the Configuration Details pop-up screen, select Go.

NOTE: The scroll bar can be used to scroll down the configuration database file.

(a) On the Configuration Details pop-up screen, select Close button.

1) Make sure that the Configuration Load screen is shown.

——— END OF TASK ———

TASK 44-35-00-470-808

11. Download a Configuration Database to the Maintenance Computer

A. General

(1) This task has instructions to load a configuration database to the maintenance laptop.

B. Download a Configuration Database to the Maintenance Computer

SUBTASK 44-35-00-860-134

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the Configuration Load screen is shown.

NOTE: Loading Configuration is done in two parts. The first part is called Configuration Upload. This involves copying the configuration database from the Maintenance Laptop to the SIU. Configuration Upload can only be done from a maintenance computer. After the configuration database is uploaded (copied from the Maintenance Laptop to the SIU), the configuration file can be viewed, activated, downloaded back to the maintenance computer or deleted.

SUBTASK 44-35-00-860-135

(2) On the Configuration Load screen, select the Configuration Load button.

(a) Make sure that the Configuration Load screen is shown.

SUBTASK 44-35-00-860-136

(3) On the Configuration Load screen, select the configuration database to download from the Select Configuration drop down menu.

SUBTASK 44-35-00-860-137

(4) On the Select Configuration drop down menu, select Download.

SUBTASK 44-35-00-860-138

(5) On the Select Configuration drop down menu, select Go.

NOTE: The configuration database is downloaded to the Downloads folder on the maintenance computer as a .zip file.

SUBTASK 44-35-00-860-139

(6) On the Configuration Load screen, select the Close button.

(a) Make sure that the Configuration Load screen is shown.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

TASK 44-35-00-440-802

12. Activate a Configuration Database

A. General

(1) This task has instructions to activate a configuration database.

B. Activate a Configuration Database

SUBTASK 44-35-00-860-140

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the Configuration Load screen is shown.

NOTE: Loading Configuration is done in two parts. The first part is called Configuration Upload. This involves copying the configuration database from the Maintenance Laptop to the SIU. Configuration Upload can only be done from a maintenance computer. After the configuration database is uploaded (copied from the Maintenance Laptop to the SIU), the configuration file can be viewed, activated, downloaded back to the maintenance computer or deleted.

SUBTASK 44-35-00-210-007

(2) Make sure that the applicable configuration database is loaded to the System Interface Unit (SIU) (TASK 44-35-00-470-807).

SUBTASK 44-35-00-210-008

(3) On the Configuration Load screen, select the Configuration Load button.

(a) Make sure that the Configuration Load screen is shown.

SUBTASK 44-35-00-860-141

(4) On the Configuration Load screen, select the applicable configuration database to Activate from the Select Configuration drop down.

(a) On the Select Action drop down, select Activate menu.

SUBTASK 44-35-00-860-142

(5) On the confirmation pop-up display, select the Go button.

(a) To cancel the activation of the configuration database, select the Cancel button.

NOTE: The pop-up us removed and the configuration database is not activated.

(b) To activate the configuration database, select the OK button.

NOTE: The pop-up is removed and the configuration database activation is started. The "Configuration Load process" started is shown. The Configuration Load Status shows a blue In-Progress. Upon completion of activation, the Configuration Load Status shows a green "Success" momentarily and the SIU reboots. "SIU is reboot" then "SIU is Initialized" is shown. After the SIU reboots, the Login screen is shown.

SUBTASK 44-35-00-860-143

(6) Do this task: View a Configuration Database, TASK 44-35-00-860-810.

(a) Make sure that the top tool bar is gray is shown.

NOTE: The SIU, CWAP, and SATCOM buttons are green.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(b) On the Configuration Load history, make sure that the Status is shown as success.

NOTE: The current configuration title matches the filename that was loaded and the Configuration Load History is shown green.

——— END OF TASK ———

TASK 44-35-00-800-801

13. View Line Replaceable Unit (LRU) Faults

A. General

(1) This task has instructions to view Line Replaceable Unit (LRU) faults.

B. View Line Replaceable Unit (LRU) Faults

SUBTASK 44-35-00-800-001

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) On the Home screen, select the Fault Summary button.

1) Make sure that the Fault Summary screen is shown.

NOTE: The All faults tab is selected by default.

NOTE: A tab is displayed for All Faults, SIU Faults, CWAP Faults and SATCOM Faults. These tabs can be selected to filter the faults to display only the faults of the selected tab. The SIU Faults, CWAP Faults and SATCOM Faults tabs can be accessed directly from the title bar by selecting the applicable Summary button.

NOTE: On each of the fault tabs, the date and time of the last update is displayed. Information about the faults is displayed for each faulted LRU along with the fault status, fault count, date and time that the fault was detected, corrective actions to take, and the fault priority.

——— END OF TASK ———

TASK 44-35-00-970-801

14. Data Offload Take Log Snapshot and Download Logs

A. General

(1) This task has instructions to take a log file snapshot and download the log files.

NOTE: After the aircraft lands, the logs are closed and new logs are opened for the next flight. The logs for the next flight cannot be downloaded until after the next flight and the logs are archived.

Faults can occur on the ground before a flight. A snapshot takes a picture of the logs for the current flight so that they can be viewed anytime without having to wait to take off and landing. All downloads are sent to the downloads folder on the maintenance computer.

B. Data Offload Take Log Snapshot and Download Logs

SUBTASK 44-35-00-860-144

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) On the Home screen, select the Data Offload button.

1) Make sure that the Data Offload screen is shown.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

SUBTASK 44-35-00-860-145

(2) On the Data Offload screen, scroll to the bottom of the screen.

(a) Make sure that to select the Take Log snapshot button.

NOTE: The latest snapshot or offload will be displayed at the top of the Data Offload list. Each snapshot or log file is numbered sequentially and given a sequential ID number. The date and time of the snapshot or log file is shown.

SUBTASK 44-35-00-860-146

(3) On the Home screen, select the Data Offload button.

(a) Make sure that the Data Offload screen is shown.

SUBTASK 44-35-00-860-147

(4) To filter the logs or snapshots, enter the applicable information in the Search field.

NOTE: The list will be filtered to the logs/snapshots containing the entered information.

(a) On the Data Offload screen, select the Next button.

1) Make sure that the Next screen is shown.

SUBTASK 44-35-00-860-148

(5) To change the amount of logs/snapshots entries shown, select the applicable amount of entries from the Show entries drop down menu.

(a) Make sure to select the applicable check box for a desired log or snapshot.

NOTE: All log files and snapshots can be selected and offloaded by selecting Select All.

SUBTASK 44-35-00-970-002

(6) On the Data Offload screen, scroll to the bottom of the screen.

(a) Make sure to select Download Logs button.

NOTE: The log files are downloaded directly to the downloads folder on the maintenance computer.

——— END OF TASK ———

TASK 44-35-00-850-801

15. Reset Line Replaceable Unit (LRU)

A. General

(1) This task has instructions to reset the Line Replaceable Unit (LRU).

B. Reset Line Replaceable Unit (LRU)

SUBTASK 44-35-00-860-149

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) On the Home screen, select the Reset LRU button.

1) Make sure that the Reset LRU screen is shown.

SUBTASK 44-35-00-860-150

(2) On the Reset LRU screen, select the Reset button.

(a) Make sure that the confirmation pop-up is shown.

SUBTASK 44-35-00-860-151

(3) On the conformation pop-up, select the Ok button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Make sure that the reset status is shown.

NOTE: The LRU Reset in progress is shown for the selected LRUs.

——— END OF TASK ———

TASK 44-35-00-860-811

16. View Flight Data

A. General

(1) This task has instructions to view the flight data.

B. View Flight Data

SUBTASK 44-35-00-860-152

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) On the Home Screen, select the Flight Data button.

1) Make sure that the Flight Data tab is shown.

SUBTASK 44-35-00-850-058

(2) To filter the flight data, enter the applicable information in the Search field.

NOTE: The list will be filtered to the flight data containing the entered information.

(a) On the Raw Data screen, select the applicable Port button.

1) Make sure that the Next screen is shown.

——— END OF TASK ———

TASK 44-35-00-860-812

17. Check SATCOM Information and Change the Data Load Discrete Status

A. General

(1) This task has instructions to check SATCOM information and change the data load discrete status.

B. Check SATCOM Information and Change the Data Load Discrete Status

SUBTASK 44-35-00-860-153

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) On the Home screen, select the SATCOM button.

1) Make sure that the SATCOM screen is shown.

NOTE: The System Status tab is selected by default.

SUBTASK 44-35-00-850-059

(2) On the SATCOM screen, select the Discrete Status tab.

(a) Make sure that the SATCOM Discrete Status is shown.

NOTE: The Discrete Status tab allows changing of Data Load status from Inactive to Active for software loading. This is typically done to perform a data load to SATCOM LRUs.

SUBTASK 44-35-00-850-060

(3) On the SATCOM Discrete Status screen, select the Data Load Active button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Set the Data Load Enable state to Active.

NOTE: Wait approximately 30 seconds.

SUBTASK 44-35-00-850-061

(4) To set the Data Load Enable state to Inactive, select the Data Load Inactive button.

(a) Set the Data Load Enable state to Inactive.

NOTE: The system will reboot.

——— END OF TASK ———

TASK 44-35-00-710-806

18. Cabin Wireless Access Point Software High Power and Unique Radio SSID Test

A. General

(1) This task has instructions to test Software High Power and Unique Radio SSID Test.

B. Cabin Wireless Access Point Software High Power and Unique Radio SSID Test

SUBTASK 44-35-00-860-158

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) On the Home Screen, select the Interactive Test.

1) Make sure that the Interactive Test screen is shown.

SUBTASK 44-35-00-210-014

(2) On the Interactive Test screen, select the Software High Power radio button.

(a) Select the Start button.

NOTE: The "Starting Software High Power Test..." message is shown for approximately 15 seconds. The "Software High Power Test request sent successfully" banner is shown and fades out in approximately 10 seconds. Wait approximately one minute.

(b) Select the Home button.

1) Make sure that the Home screen is shown.

(c) Select the Cabin WAP button.

1) Make sure that the Cabin WAP Status screen is shown.

(d) Select Additional Info button.

1) Make sure that the Additional Info screen is shown.

(e) Select the Radio 1 Information Panel.

1) Make sure that the Power is set to 14 dBm.

(f) Select the Radio 2 Information Panel.

1) Make sure that the Power is set to 16 dBm.

SUBTASK 44-35-00-210-015

(3) On the Interactive Test screen, select the Configuration Default Power radio button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Select the Start button.

NOTE: The "Configuration Default Power Test..." message is shown for approximately 15 seconds. The "Configuration Default Power Test request sent successfully" banner is shown and fades out in approximately 10 seconds. Wait approximately one minute.

(b) Select the Home button.

1) Make sure that the Home screen is shown.

(c) Select the Cabin WAP button.

1) Make sure that the Cabin WAP screen is shown.

(d) Select Additional Info button.

1) Make sure that the Additional Info screen is shown.

(e) Select the Radio 1 Information Panel.

1) Make sure that the Power is set to 11 dBm.

(f) Select the Radio 2 Information Panel.

1) Make sure that the Power is set to 8 dBm.

SUBTASK 44-35-00-210-016

(4) On the Interactive Test screen, select the Unique Radio SSID radio button.

(a) Select the Start button.

NOTE: The "Starting Unique Radio SSIDs On Test..." message is shown for approximately 15 seconds. The "Unique Radio SSIDs On request sent successfully" banner is shown and fades out in approximately 10 seconds. Wait approximately 1 minute.

(b) Select the Home button.

1) Make sure that the Home screen is shown.

(c) Select the Cabin WAP button.

1) Make sure that the Cabin WAP screen is shown.

(d) Select the VSC Status Tab.

1) Make sure that the VSC Status screen is shown.

SUBTASK 44-35-00-210-017

(5) On the Unique Radio SSID Test screen, select the Unique Radio SSID Off Radio button.

(a) Select the Start button.

NOTE: The "Starting Unique Radio SSIDs Off Test..." message is shown for approximately 15 seconds. The "Unique Radio SSIDs Off request sent successfully" banner is shown and fades out in approximately 10 seconds. Wait approximately 1 minute.

(b) On the VSC Status screen, make sure that the CWAP Radio no longer has a Unique SSID.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

TASK 44-35-00-470-809

19. Content Load

A. General

(1) This task has instructions to load content from a maintenance laptop.

B. Content Load

SUBTASK 44-35-00-860-157

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the Content Load screen is shown.

SUBTASK 44-35-00-210-012

(2) To start the content load, select the start button.

(a) Make sure that the Validation Status pop-up is shown.

SUBTASK 44-35-00-210-013

(3) To dismiss the Validation Status pop-up, select the Dismiss button.

(a) Make sure that the Content Load screen is shown.

NOTE: If validation fails, disable PC fire wall.

SUBTASK 44-35-00-470-022

(4) To Load Content, select the Start button.

(a) Make sure that the Content Load is shown as Success.

——— END OF TASK ———

TASK 44-35-00-470-810

20. Data Load SATCOM LRUs using the AIT Flight Simulyzer Software

A. General

(1) This task has instructions to load data for the SATCOM LRUs using the AIT Flight Simulyzer Software installed on the maintenance laptop.

(a) The Airplane Personality Module (APM) software is loaded before the other SATCOM LRUs.

NOTE: The AIT Flight Simulyyzer Software is an ARINC 615A compliant data loading utility that is required to be installed on the maintenance laptop.

B. Dataload SATCOM LRUs using the AIT Simulyzer Software

SUBTASK 44-35-00-860-161

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the SATCOM summary indicator is green.

SUBTASK 44-35-00-860-162

(2) On the Home screen, select the SATCOM button.

(a) Make sure that the SATCOM screen is shown.

NOTE: The System Status tab is selected by default.

SUBTASK 44-35-00-860-163

(3) On the SATCOM screen, select the Discrete Status tab.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

(a) Make sure that the Discrete Status tab is shown.

SUBTASK 44-35-00-860-164

(4) On the Discrete Status tab, push the Data Load Active button.

(a) Make sure that the Data Load Enable state is Active.

NOTE: When in Data Load Mode, the SATCOM page will not get Status from Jetwave LRUs and Status is shown as unavailable (gray).

SUBTASK 44-35-00-470-023

(5) On the maintenance laptop, set the AIT Flight Simulyzer software as follows:

(a) Open the AIT Flight Simulyzer application on the maintenance laptop.

(b) On the left hand window, push the Settings button.

(c) Right click on the Lan Configuration, select the Import HostLan Configuration.

(d) Open the “LanConfig.hex” file on the maintenance laptop.

NOTE: The LanConfig.hex file must be loaded on the maintenance computer.

(e) On the left hand window, Expand Lan Configurations and TFTP buttons.

(f) On the TFTP button, select Client Configurations.

1) Make sure that the settings is shown.

(g) On the Server Configurations, select Server Configurations.

1) Make sure that the settings is shown.

SUBTASK 44-35-00-860-165

(6) On the maintenance laptop, open the web browser.

(a) Enter the IP address: 172.29.55.1

1) Make sure that the Jetwave maintenance screen is shown.

(b) Enter the applicable username and password.

1) Make sure that the Jetwave Access Center screen is shown.

(c) On the Jetwave Access Center, make sure that the system Status is shown OK.

1) Make sure that the system is fully booted.

SUBTASK 44-35-00-860-166

(7) On the maintenance laptop, select the AIT Flight Simulyzer application.

(a) Select the Simulation button.

NOTE: The LRU names will be visible in the left side windowpane under “A615A Data Loader”.

(b) Right click on the applicable LRU that is to be loaded.

1) Select 'Load Operations...'.

(c) Select the Refresh button.

1) Make sure that the Target Information is shown for the selected LRU.

NOTE: This will ensure communication between the 615A Data Loader and the LRU.

(d) Select Add LSP.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

1) Make sure that the .luh file is selected in the 665 data load package for the applicable LRU.

(e) Select the applicable .luh file and push the Open button.

1) Make sure that the package is shown in the File Transfer window.

(f) Select the Upload button.

1) Make sure that the Status heading in the File Transfer window is shown complete.

NOTE: Repeat for each applicable LRU.

(g) On the Discrete Status screen, select the Data Load Enable discrete button.

1) Set the Data Load Enable state to Inactive.

NOTE: The Jetwave system will reboot.

SUBTASK 44-35-00-860-167

(8) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the SATCOM summary indicator is green.

(b) On the Home screen, select the SATCOM buttom.

1) Make sure that the Status of all SATCOM LRUs is Normal.

SUBTASK 44-35-00-860-168

(9) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

(a) Make sure that the SATCOM LRUs LSAPs is shown shown.

(b) Make sure that the SATCOM LRUs is green (Success).

NOTE: The system must be fully booted.

END OF TASK

TASK 44-35-00-820-801

21. Jetwave MODMAN to KRFU Coax Cable Calibration

A. General

(1) This task has instructions to calibrate the Jetwave Modem Manager (MODMAN) to Ka-band Radio Frequency Unit (KRFU) coax cable.

(a) The MODMAN won't transmit data until it has the Transmit (Tx) path calibration data.

B. Coax Cable Calibration

SUBTASK 44-35-00-860-160

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the SATCOM summary indicator is green.

SUBTASK 44-35-00-210-019

(2) On the Home screen, select the SATCOM button.

(a) Make sure that the SATCOM screen is shown.

NOTE: The System Status tab is selected by default.

SUBTASK 44-35-00-210-020

(3) On the JetWave maintenance login screen, select the JetWave GUI button.

(a) Make sure that the JetWave GUI Login screen is shown.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

SUBTASK 44-35-00-850-062

(4) Enter the applicable Username and password, push the Login button.

(a) Make sure that the JetWave Access Center screen is shown.

NOTE: The system is booted fully when all the LRUs show a status of OK.

SUBTASK 44-35-00-210-021

(5) On the Commanded Test left-hand panel, select the Calibrate Transmit Cable button.

(a) Make sure that the Calibrate Transmit Cable screen is shown.

SUBTASK 44-35-00-850-063

(6) On the Calibrate Transmit Cable screen, select the Initiate button.

(a) Make sure that the Progress Bar is 100%.

NOTE: When calibration is completed successfully, the ACM proceeds to its configured mode of operation as if it had been restarted. When commissioning is not completed successfully, either due to an error condition or a user cancellation, the ACM enters an inactive state.

NOTE: In order for the system to return to normal operation mode, a system reset is required after calibration is complete.

SUBTASK 44-35-00-850-064

(7) On the Commanded Test left-hand panel, select the Reset AES button.

(a) Make sure that the Reset AES screen is shown.

SUBTASK 44-35-00-850-065

(8) On the Reset AES screen, select the Reset AES button.

(a) Make sure that the SATCOM is reset.

NOTE: The SATCOM system to initialize and indicate in Network in approximately 10 minutes.

——— END OF TASK ———

TASK 44-35-00-860-813

22. Run Conformity and Download Report

A. General

(1) This task has instructions to run a conformity and download the report.

B. Run Conformity and Download Report

SUBTASK 44-35-00-860-154

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the Line Replaceable Unit (LRU) Summary Status is green for all LRUs.

SUBTASK 44-35-00-210-009

(2) On the Home screen, select the Conformity button.

(a) Make sure that the Conformity screen is shown.

NOTE: The System summary tab is shown as default. The status of the LRUs are shown as Success, Not Responding, or Failure. The expected and reported part numbers are shown.

(b) To run conformity, select the Run Conformity button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

1) Make sure that the Current Conformity Status is shown In Progress.

NOTE: When complete Current Conformity Status shown In Progress is removed and the Conformity information is updated, the expected and reported part numbers should be the same and the Status of the LRUs is shown as Success.

SUBTASK 44-35-00-470-019

(3) If the System Interface Unit (SIU) or a Cabin Wireless Access Point (CWAP) fails conformity, do this task: Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point, TASK 44-35-00-470-806.

SUBTASK 44-35-00-860-155

(4) If the Configuration Database fails conformity, do this task: Activate a Configuration Database, TASK 44-35-00-440-802.

SUBTASK 44-35-00-470-020

(5) If any SATCOM LRUs fails conformity, do this task: Data Load SATCOM LRUs using the AIT Flight Simulyzer Software, TASK 44-35-00-470-810.

SUBTASK 44-35-00-860-156

(6) If conformity still fails, do this task: Reset Line Replaceable Unit (LRU), TASK 44-35-00-850-801.

SUBTASK 44-35-00-210-010

(7) To view specific LRU details, select the applicable LRU Details tab.

(a) Make sure the Selected Details tab is shown.

SUBTASK 44-35-00-210-011

(8) To view the master conformity list, select the View Master Conformity button.

(a) Make sure that the Master Conformity pop-up is shown.

SUBTASK 44-35-00-470-021

(9) To download a conformity report, select the Download report button.

(a) Make sure that the Conformity Report is downloaded to the maintenance laptop.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

BROADBAND COMMUNICATION SYSTEM - ADJUSTMENT/TEST

1. General

A. This procedure has these tasks:

(1) Cabin Wireless Access Point - Operational Test.

(2) Cabin Connect System - Connectivity Test

(3) Broadband Communication System - System Test.

TASK 44-35-00-710-805

2. Cabin Wireless Access Point Operational Test

A. General

(1) This task has instructions to do the operational test of a cabin wireless access point.

B. References

Reference	Title
44-35-00-860-807	Log into the Maintenance Portal (P/B 201)

C. Prepare for the Test

SUBTASK 44-35-00-850-051

(1) Energize the Wi-Fi system as follows:

(a) Set the overhead panel P5-13, IFE/PASS SEAT switch to ON.

NOTE: The CabinConnect system will fully boot in 8 minutes.

SUBTASK 44-35-00-850-075

(2) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that a wireless enabled Personal Electronic Device (PED) is available.

D. Cabin Wireless Access Point Operational Test

SUBTASK 44-35-00-710-048

(1) On the MAIN MENU, select the CabinConnect Maintenance Home page.

(a) On the CabinConnect Maintenance Home page, select the Cabin WAP button.

1) Make sure that the Cabin Wireless Access Point (CWAP) is shown.

2) Make sure that the Poll Status is green (success) for all CWAP installed.

3) Make sure that the BIT status is clear (green) for all CWAP installed.

4) Make sure that the two radio is shown for the CWAP installed.

5) Make sure that the Opstate is green (enabled) for the CWAP installed.

6) Make sure that the Radio status is green (up) for each radio on the CWAP installed.

SUBTASK 44-35-00-710-049

(2) On a wireless enabled PED, make sure that the applicable CWAP SSID is shown in the wireless network connection list.

(a) Connect the applicable PED to the applicable CWAP SSID.

NOTE: The x is the CWAP number and the y is the radio frequency for the SSID (CWAP - x RF1 yG or CWAP - x RF2 yG).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Wireless Connection List

CWAP No.	RADIO	SSID
CWAP-1	1	CWAP-1 RF1 5G
CWAP-1	2	CWAP-1 RF2 2.4G
CWAP-2	1	CWAP-2 RF1 5G
CWAP-2	2	CWAP-2 RF2 2.4G
CWAP-3	1	CWAP-3 RF1 5G
CWAP-3	2	CWAP-3 RF2 2.4G
CWAP-4	1	CWAP-4 RF1 5G
CWAP-4	2	CWAP-4 RF2 2.4G

SUBTASK 44-35-00-710-050

(3) On the wireless enabled PED, enter the web address: 'client.cabin.network' in the applicable web browser.

(a) Make sure that the web page is shown in the web browser.

E. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-00-850-053

(1) Set the overhead panel P5-13, IFE/PASS SEAT switch to OFF.

——— END OF TASK ———

TASK 44-35-00-730-808

3. Cabin Connect System - Connectivity Test

(Figure 501)

A. General

(1) This task has instructions to do the cabin connect connectivity test.

B. References

Reference	Title
44-35-00-860-807	Log into the Maintenance Portal (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)
46-13-02-710-801	Onboard Maintenance Function Ground Test (P/B 201)

C. Prepare for the Test

SUBTASK 44-35-00-850-066

(1) Energize the broadband system as follows:

(a) Set the overhead panel P5-13, IFE/PASS SEAT switch to ON.

WARNING MAKE SURE THAT PERSONNEL STAY A MINIMUM OF 40 FEET (12 METERS) FROM THE TOP-MOUNTED ANTENNA WHILE IT TRANSMITS. IF YOU DO NOT OBEY, THE RADIO FREQUENCY (RF) ENERGY CAN CAUSE INJURIES TO PERSONNEL.

(b) Set the overhead panel P5-99, BROADBAND CONTROL PANEL switch to ON.

NOTE: The CabinConnect system will fully boot in 8 minutes.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-00-850-069

(2) To setup the FMC and ADIRU, do these steps:

(a) Set the IRS MSU left and right mode switches to ALIGN.

(b) Enter the local latitude and longitude into the IRS MSU.

(c) Set the IRS MSU left and right mode switches to NAV.

(d) Set the destination on the FMC as follows:

1) Select RTE key on the FMC CDU.

2) Enter the field location.

3) Select 1L LSK on the FMC CDU.

4) Enter the destination field.

5) Select 1R LSK on the FMC CDU.

6) Enter the flight number.

7) Select 2R LSK on the FMC CDU.

8) Select DEP/ARR key on the FMC CDU.

9) Select 1L LSK on the FMC CDU.

10) Select 1R LSK on the FMC CDU.

11) Select DEP/ARR key on the FMC CDU.

12) Select 2R LSK on the FMC CDU.

13) Select 1R LSK on the FMC CDU.

14) Select 6R LSK on the FMC CDU.

15) Select 6R LSK on the FMC CDU.

16) Select EXEC key on the FMC CDU.

D. Cabin Connect Connectivity Test

SUBTASK 44-35-00-860-170

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that a wireless enabled Personal Electronic Device (PED) is available.

SUBTASK 44-35-00-860-171

(2) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

SUBTASK 44-35-00-710-043

(3) To do the ARINC 429 and DISCRETE TEST, do these steps:

(a) On the Home Page, select the Flight Data button.

(b) Adjust the BARO correction knob on the CAPT EFIS control panel.

1) Make sure that the Altitude status changes on the Flight Data screen.

NOTE: The Altitude does not always match as shown in flight deck screen, the intention is the system is receiving the data from the aircraft 429 bus and it changes accordingly.

2) Make sure that the 'Destination IATA Code' screen is shown.

3) Make sure that the 'Flight Number' screen is shown.

4) Make sure that the 'Current Latitude' and 'Current Longitude' screen is shown.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) On the Home page, select the Keyline Status button.

NOTE: The following steps will test the AIR/GND keyline.

1) Make sure that the Air/Gnd keyline is shown as ground (green).
2) Select SYS on the Multi-Function Display Panel (MFP) (TASK 46-13-02-710-801).
3) Select MAINT.
4) Select ONBD MAINT.
5) Select OTHER FUNCTIONS.
6) Select SPECIAL FUNCTIONS.
7) Select ATA SYSTEM 32; PSEU - Proximity Switch Electronic Unit (PSEU).
8) Select PSEU - AIR/GROUND OVERRIDE.
9) Select CONTINUE.
10) Select START FUNCTION.
11) Select SYS 1 only IN AIR.
12) Select CONTINUE.
13) Make sure that the MFP AIR/GND OVERRIDE is ACTIVE and SYS 1 IN AIR mode.
14) Make sure that the Air/Gnd keyline shows open (amber).
15) Select RESET OVERRIDE.
16) Select CONTINUE.
17) Select STOP FUNCTION.
18) Make sure that the Air/Gnd keyline shows ground (green).

(d) Set the parking brake.

1) Make sure that the Parking Brake keyline shows ground (green).

(e) Release the parking brake.

1) Make sure that the Parking Brake keyline shows open (amber).

(f) Close and lock the left forward entry door.

1) Make sure that the Door Locked keyline shows open (amber).

(g) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	1	C00458	ENGINE 1 IGNITION RIGHT
A	3	C00153	ENGINE 1 IGNITION LEFT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	4	C00459	ENGINE 2 IGNITION RIGHT
D	6	C00151	ENGINE 2 IGNITION LEFT

(h) Make sure that the ENG 1 and ENG 2 START LEVERS are at CUTOFF.

(i) Make sure that the ENG 1 and ENG 2 START switches are OFF.

(j) Make sure that the ENG 1 and ENG 2 FIRE HANDLES are not pulled.

(k) Make sure that the AIRPLANE is on GROUND mode.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(l) Make sure that the APU is OFF.

(m) Make sure that these circuit breakers are closed:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
B	1	C01316	ENGINE 1 START LEVER CHAN A
B	3	C01312	ENGINE 1 RUN/PWR

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
B	5	C01313	ENGINE 2 RUN/PWR
B	6	C01318	ENGINE 2 START LEVER CHAN A

(n) Make sure that the Engines OFF keyline shows ground (green).

(o) Move the ENG 1 and ENG 2 START LEVERS to IDLE position.

(p) Make sure that the Engines Off keyline shows open (amber).

(q) Return the ENG 1 and ENG 2 START LEVERS to CUTOFF.

(r) Make sure that the Engines Off keyline shows ground (green).

(s) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	1	C00458	ENGINE 1 IGNITION RIGHT
A	3	C00153	ENGINE 1 IGNITION LEFT

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	4	C00459	ENGINE 2 IGNITION RIGHT
D	6	C00151	ENGINE 2 IGNITION LEFT

(t) Set the FASTEN BELTS switch to ON.

1) Make sure that the Fasten Seat Belt keyline shows ground (green).

(u) Set the FASTEN BELTS switch to OFF.

1) Make sure that the Fasten Seat Belt keyline shows open (amber).

(v) Make sure that the No Smoking keyline shows open (amber).

(w) Make sure that the Decompression keyline shows open (amber).

(x) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

(y) Make sure that these circuit breakers are closed:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	7	C00156	OXYGEN IND
F	8	C00785	OXYGEN MAN CONT

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(z) Set the S1 MANUAL OXYGEN switch to ON.

1) Make sure that the Decompression keyline shows ground (green).

(aa) Set the S1 MANUAL OXYGEN switch to OFF.

1) Make sure that the Decompression keyline shows open (amber).

(ab) Make sure that the Crew Wi-Fi keyline shows open (amber).

(ac) Make sure that the System Available keyline shows ground (green).

(ad) Make sure that the PA ALL keyline shows open (amber).

(ae) Make a PA announcement from the Pilot's microphone or headset.

1) Make sure that the PA All keyline shows ground (green) during the announcement.

(af) Stop the PA announcement.

1) Make sure that the PA ALL keyline shows open (amber).

(ag) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-3

Row	Col	Number	Name
F	9	C00784	OXYGEN PASS RIGHT
F	10	C00783	OXYGEN PASS LEFT

E. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-00-850-070

(1) Set the overhead panel P5-99, BROADBAND CONTROL PANEL switch to OFF.

(a) On the Home page, select the SATCOM button.

(b) On the Home page, select the Jetwave GUI button.

1) Enter the applicable username and password


(c) Make sure that the Antenna Health shows “Unavailable”.

SUBTASK 44-35-00-850-072

(2) Set the overhead panel P5-13, IFE/PASS SEAT switch to OFF.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

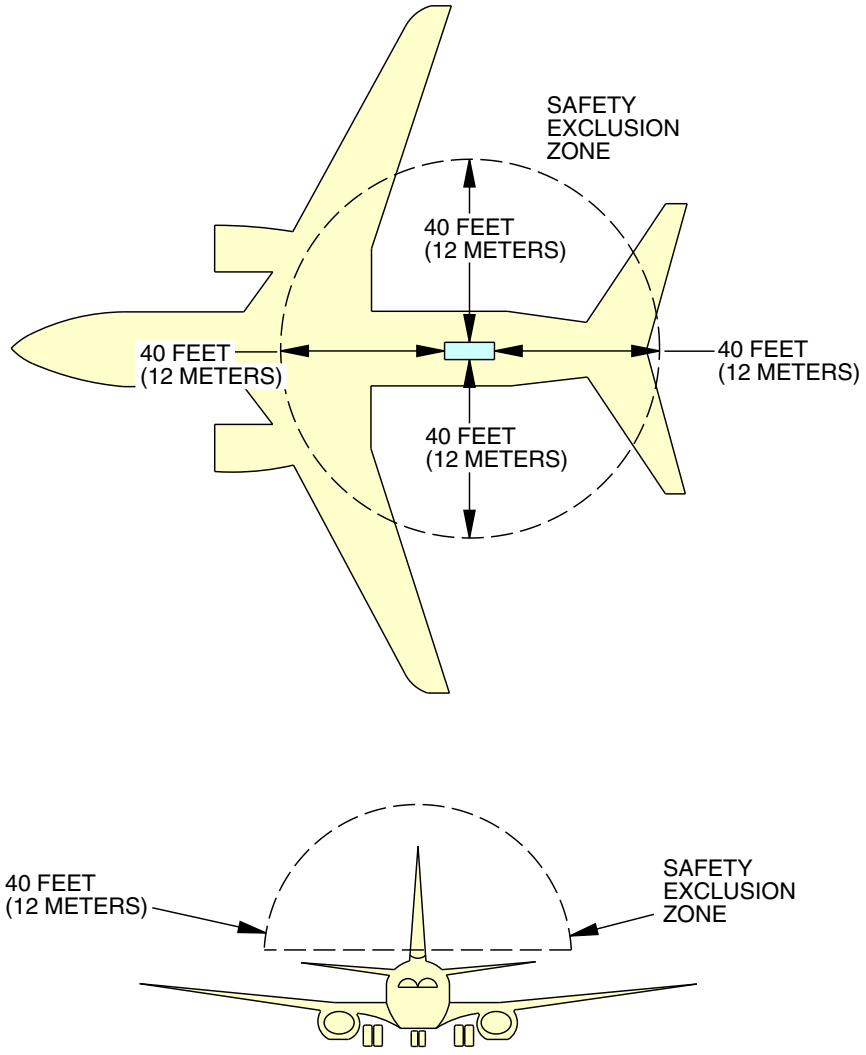

3082038 S0000837734_V1

RF Safety Exclusion Zone
Figure 501/44-35-00-990-813

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-00-730-807

4. Broadband Communication System - System Test

A. General

(1) This task has instructions to do a system test for a broadband communication system.

B. References

Reference	Title
44-35-00-860-807	Log into the Maintenance Portal (P/B 201)
44-35-00-860-809	Cabin Wireless Access Point Status and Radio Control (P/B 201)

C. Procedure

SUBTASK 44-35-00-860-159

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that a wireless enabled Personal Electronic Device (PED) is available.

SUBTASK 44-35-00-210-018

(2) On the Maintenance Portal Home Page, make sure that the Line Replaceable Unit (LRU) summary status is green.

SUBTASK 44-35-00-710-037

(3) To check the status of the Cabin Wireless Access Point (CWAP) status, do these steps:

(a) On the Maintenance Portal Home Page, select the Cabin WAP button.

1) Make sure that the Cabin WAP is shown.

(b) To view the Poll Status, make sure that the Poll Status is green.

(c) To view the BIT Status, make sure that the BIT status is green.

(d) To view the IP Address, make sure that the CWAP IP Address is shown.

(e) To view the Radio Interface, make sure that the 2 radios are shown for each CWAP.

(f) To view the Radio Opstate, make sure that the Opstate is green.

(g) To view the Radio Status, make sure that the Radio Status is green.

(h) To View the Radio Channels, make sure that the Radio Channel Number is shown.

SUBTASK 44-35-00-710-038

(4) To test the Passenger Entertainment network connection, do these steps:

(a) On the wireless enabled PED, select the applicable wireless SSID (RF1 5G and RF2 2.4G) for each applicable CWAP.

1) Do this task: Cabin Wireless Access Point Status and Radio Control, TASK 44-35-00-860-809.

(b) For each applicable CWAP, do these steps:

1) On the wireless enabled PED, select an applicable SSID.

2) On the wireless enabled PED, open the applicable web browser (e.g. Firefox, Safari, etc...).

3) Enter the web address: 'client.cabin.network'.

4) Make sure that the passenger GUI Menu Map is shown.

SUBTASK 44-35-00-710-039

(5) To test the Passenger Entertainment Movie Playback, do these steps:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) On the wireless enabled PED, select the applicable wireless SSID for each applicable CWAP.

(b) On the wireless enabled PED, select the Movie Title on the passenger GUI home page.

1) Make sure that the Movie Listing page is shown.

(c) On the wireless enabled PED, select the Movie Poster graphic.

1) Make sure that the Movie Synopsis page is shown.

(d) On the wireless enabled PED, select the Play button.

1) Make sure that the Movie begin to play with associated audio on the PED.

SUBTASK 44-35-00-710-040

(6) To test the Passenger Entertainment Music Playback, do these steps:

(a) On the wireless enabled PED, select the applicable wireless SSID for each applicable CWAP.

(b) On the wireless enabled PED, select the Music Title on the passenger GUI home page.

1) Make sure that the Music Album Listing page is shown.

(c) On the wireless enabled PED, select the Music Album Poster graphic.

1) Make sure that the Music Album Playbook page is shown.

(d) On the wireless enabled PED, select the track and Play Music button.

1) Make sure that the Music begin to play with associated audio on the PED.

SUBTASK 44-35-00-710-041

(7) To test the RF Enable/Disable Individual CWAP Radio Interface Test, do these steps:

(a) On the Cabin WAP/CWAP Status Page, select the Disable button for the applicable CWAP A Radio 1.

NOTE: The X in "CWAP X" represents the CWAP number that is currently being checked.

(b) Make sure that the “RF Radio set successfully” banner is shown each time when the radio is disabled.

(c) On the Cabin WAP page, select the Radio Opstate for CWAP X Radio 1.

1) Make sure that the Radio Opstate for CWAP X Radio 1 is shown “Disabled” in gray.

(d) On the Cabin WAP page, select the Radio State for CWAP X Radio 1 .

1) Make sure that the Radio State for CWAP X is shown Down.

(e) On the Cabin WAP page, select the number of users connected to CWAP X Radio 1.

1) Make sure that the number of users connected to CWAP X Radio 1 is 0.

(f) On the Cabin WAP page, select the VSC Status tab.

1) Make sure that the VSC Opstate for the associated SSID is shown “Disabled” gray.

2) Make sure that the VSC Status for the applicable SSIDs is shown Down.

(g) Select the CWAP Status tab.

1) Make sure that the CWAP Status page is shown.

(h) Make sure that the wireless enabled PED is connected to the applicable SSID.

SUBTASK 44-35-00-710-042

(8) To test the RF Force Enable/Disable All CWAP Radio Interface Test, do these steps:

(a) To do the RF Force Disable All test, do these steps:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) On the Cabin WAP page, select the RF Force: Disable All Button.
2) Make sure that the Disable All warning message is shown.

(b) On the Cabin WAP page, select the OK button.
1) Make sure that the Disable All Warning message is removed.
2) Make sure that “RF Enable/Disable All button” is sent.
3) Make sure that the radio state(s) is updated.

(c) On the Cabin WAP/CWAP Status Page, make sure that the Raio Opstate for all CWAP Radio Interfaces is “Disabled” gray for all Radio interfaces.

(d) On the CWAP Status page, make sure that the number of users connected for all CWAP interfaces is 0.

(e) On the VSC Status tab, make sure that the VSC Opstate for all the SSIDs is shown “Disabled' gray.
1) Make sure that the VSC Status for the SSDs is shown Down.

(f) On the CWAP Status tab, make sure that the CWAP Status page is shown.
1) Make sure that the WiFi Connectivity Status indicator is gray.
2) Make sure that the connectivity for the wireless enabled PED is disconnected.

(g) Make sure that the applicable SSIDs is not available.

(h) To do the RF Force Enable All test, do these steps:
1) On the Cabin WAP page, select the RF Force: Enable All Button.
2) Make sure that the “RF Enable/Disable request is successfully sent.”

(i) On the CWAP Status page, make sure that the Radio Opstate for all CWAP Radio Interfaced is enabled (green).

(j) On the CWAP Status page, make sure that the Radio state for all CWAP Radio Interfaced is Up (green).
1) On the VSC Status tab, make sure that the VSC Opstate is enabled (green) for all SSIDs.
2) Make sure that the VSC Status is shown Up for all SSIDs.

(k) On the CWAP Status tab, make sure that the CWAP Status page is shown.
1) Make sure that the WiFi Connectivity Status indicator is green.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

BROADBAND CONTROL PANEL - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Broadband Control Panel Removal

(2) Broadband Control Panel Installation.

TASK 44-35-01-000-801

2. Broadband Control Panel Removal

(Figure 401 or Figure 402)

A. General

(1) This task has instructions to remove the Broadband Control Panel in the P5 overhead panel.

B. References

Reference	Title
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Prepare for the Broadband Control Panel Removal

SUBTASK 44-35-01-860-001

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020			
D	13	C04076	BROADBAND/WIFI CONTROL

PTF ALL POST SB 737-44-1020

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021 AND POST SB 737-44-1020			
D	13	C04076	BROADBAND/WIFI CONTROL (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-01-910-001

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(2) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

E. Broadband Control Panel Removal

SUBTASK 44-35-01-020-001

(1) Loosen the four quarter-turn fasteners [2] that secure the broadband control panel [1] to the P5 overhead panel.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-01-020-002

(2) Pull the broadband control panel [1] from the P5 overhead panel.

SUBTASK 44-35-01-020-003


(3) Disconnect the electrical connector [3] from the broadband control panel [1].

SUBTASK 44-35-01-020-004

(4) Remove the broadband control panel [1] from the P5 overhead panel.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

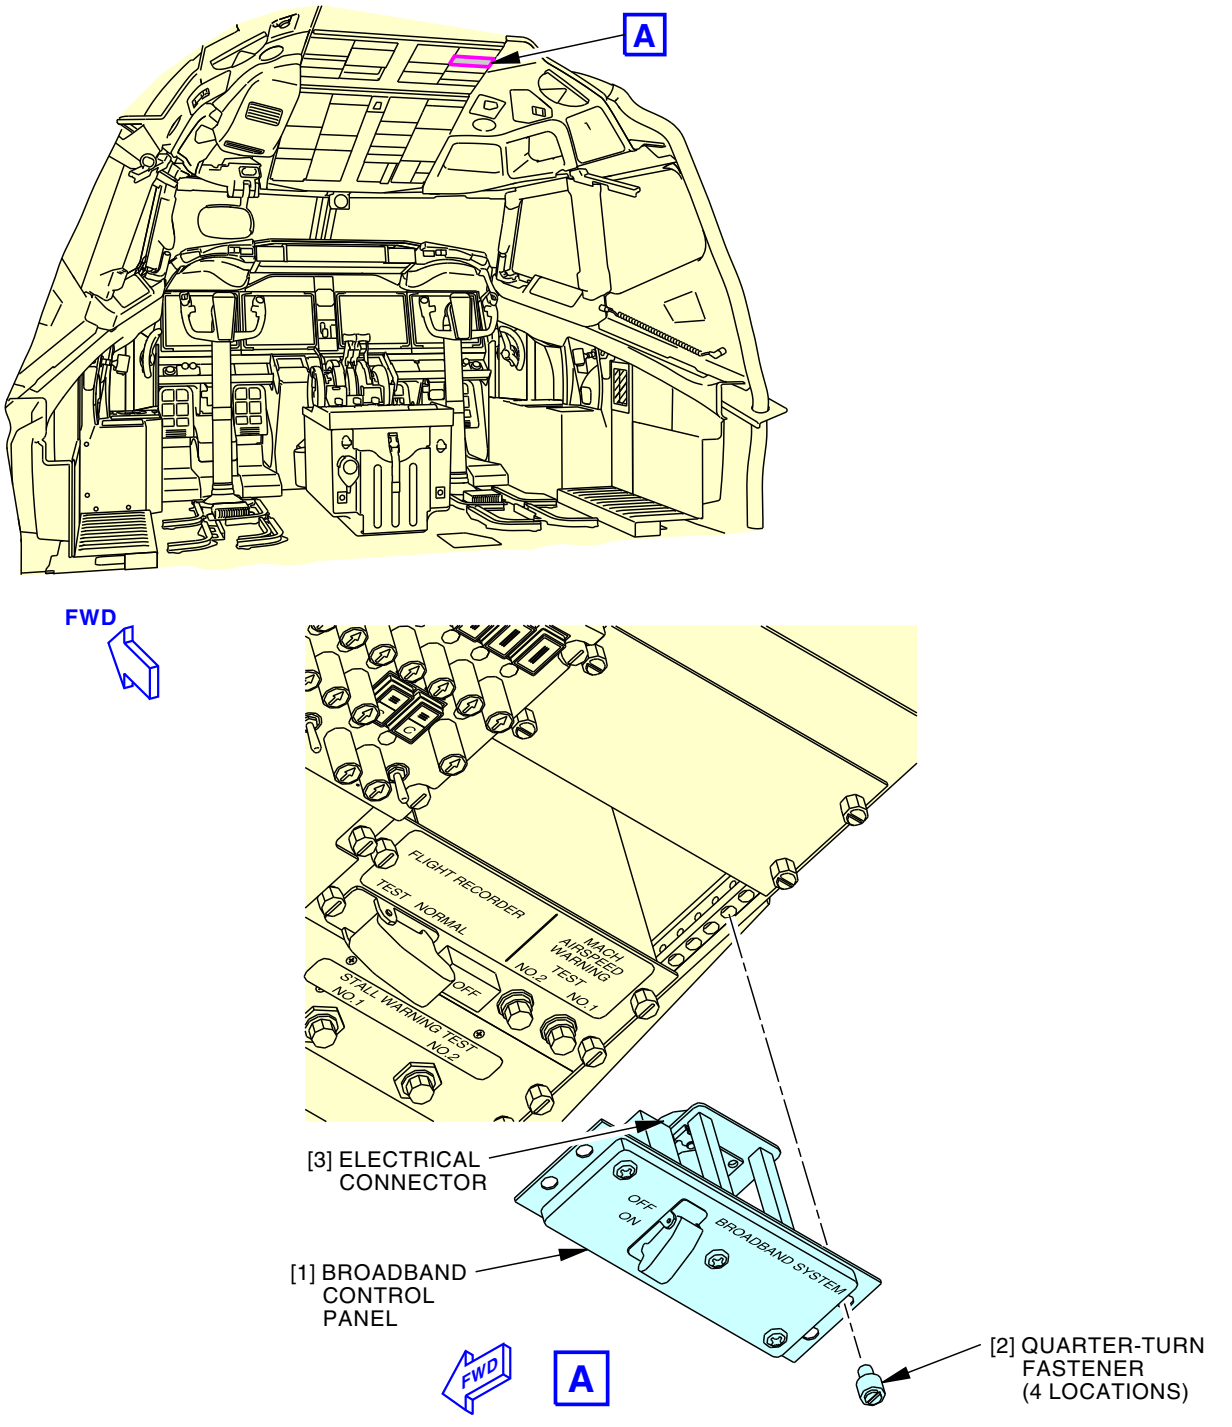

Broadband Control Panel Installation
Figure 401/44-35-01-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

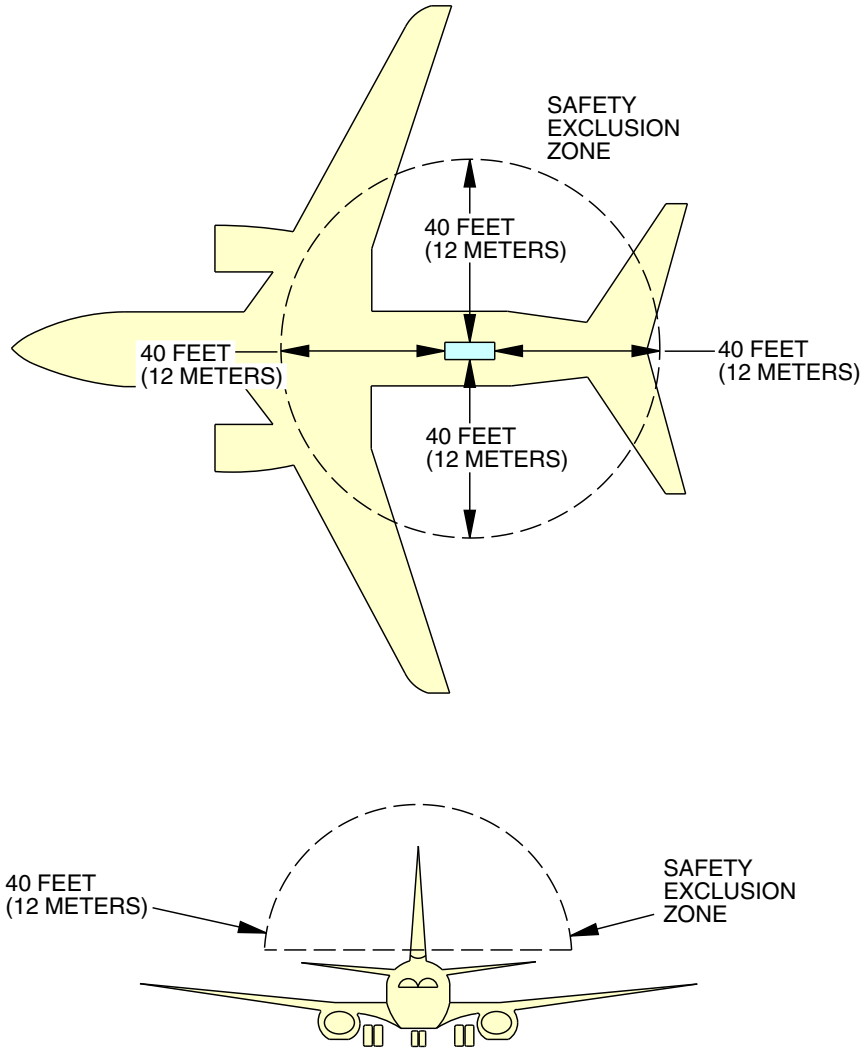

3082038 S0000837734_V1

RF Safety Exclusion Zone
Figure 402/44-35-01-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-01-400-801

3. Broadband Control Panel Installation

(Figure 401 or Figure 402)

A. General

(1) This task has instructions to install the Broadband Control Panel in the P5 overhead panel.

B. References

Reference	Title
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
44-35-00-730-808	Cabin Connect System - Connectivity Test (P/B 501)

C. Location Zones

Zone	Area
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Broadband Control Panel Installation

SUBTASK 44-35-01-910-002

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(1) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

SUBTASK 44-35-01-420-001

(2) Install the broadband control panel [1] in the P5 overhead panel.

(a) Connect the electrical connector [3] to the broadband control panel [1].

(b) Push the broadband control panel [1] in the P5 overhead panel.

(c) Turn the four quarter-turn fasteners [2] that secure the broadband control panel [1] to the P5 overhead panel.

E. Broadband Control Panel Installation Test

SUBTASK 44-35-01-860-002

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020			
D	13	C04076	BROADBAND/WIFI CONTROL

PTF ALL POST SB 737-44-1020

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021 AND POST SB 737-44-1020			
D	13	C04076	BROADBAND/WIFI CONTROL (INOP)

PTF ALL POST SB 737-44-1020

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-01-980-003

WARNING MAKE SURE THAT PERSONNEL STAY A MINIMUM OF 40 FEET (12 METERS) FROM THE TOP-MOUNTED ANTENNA WHILE IT TRANSMITS. IF YOU DO NOT OBEY, THE RADIO FREQUENCY (RF) ENERGY CAN CAUSE INJURIES TO PERSONNEL.

(2) Set the overhead panel P5-99, BROADBAND CONTROL PANEL, switch to ON.

(a) Make sure that the switch guard is closed.

SUBTASK 44-35-01-710-006

(3) Do this task: Cabin Connect System - Connectivity Test, TASK 44-35-00-730-808.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-01-980-001

(1) Make sure that the overhead panel P5-99, BROADBAND CONTROL PANEL switch is OFF.

SUBTASK 44-35-01-980-002

(2) Make sure that the overhead panel P5-13, IFE/PASS SEAT switch is OFF.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SYSTEM INTERFACE UNIT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) System Interface Unit Removal

(2) System Interface Unit Installation.

TASK 44-35-05-000-801

2. System Interface Unit Removal

(Figure 401)

A. General

(1) This task has instructions to remove the system interface unit.

B. References

Reference	Title
20-10-07-000-801	E/E Box Removal (P/B 401)
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)

C. Location Zones

Zone	Area
146	Aft Cargo Compartment Equipment Bay - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. Prepare for the Removal

SUBTASK 44-35-05-010-001

(1) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

SUBTASK 44-35-05-010-002

(2) Open the applicable access panel for the equipment rack.

SUBTASK 44-35-05-860-001

(3) Open these circuit breakers and install safety tags:

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
---	---	C04078	SIU

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020			
D	12	C04075	CWAP/SERVER

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020 (Continued)

(Continued)

F/O Electrical System Panel, P6-5

Row	Col	Number	Name

PTF ALL POST SB 737-44-1020

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name

PTF ALL PRE SB 737-44-1021 AND POST SB 737-44-1020

D	12	C04075	CWAP/SERVER (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-05-910-001

CAUTION DO NOT TOUCH THE CIRCUIT CARDS BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO STATIC ELECTRICITY. STATIC ELECTRICITY CAN CAUSE DAMAGE TO THE CIRCUIT CARDS.

(4) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

F. System Interface Unit Removal


SUBTASK 44-35-05-020-001


CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(1) Remove the system interface unit [1] (TASK 20-10-07-000-801).

——— **END OF TASK** ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

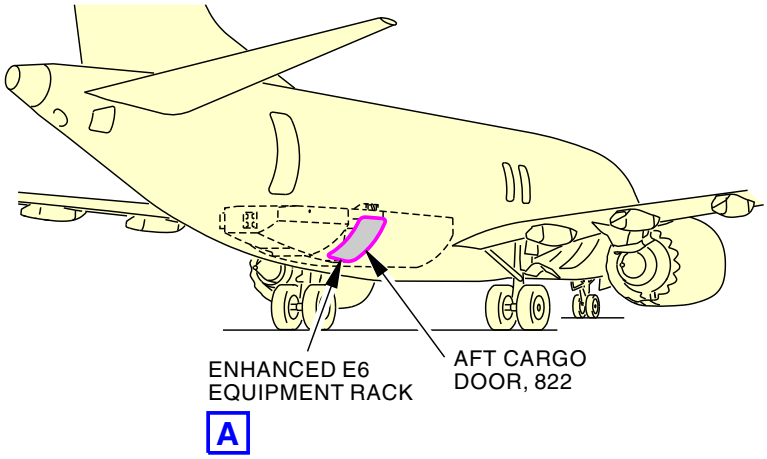

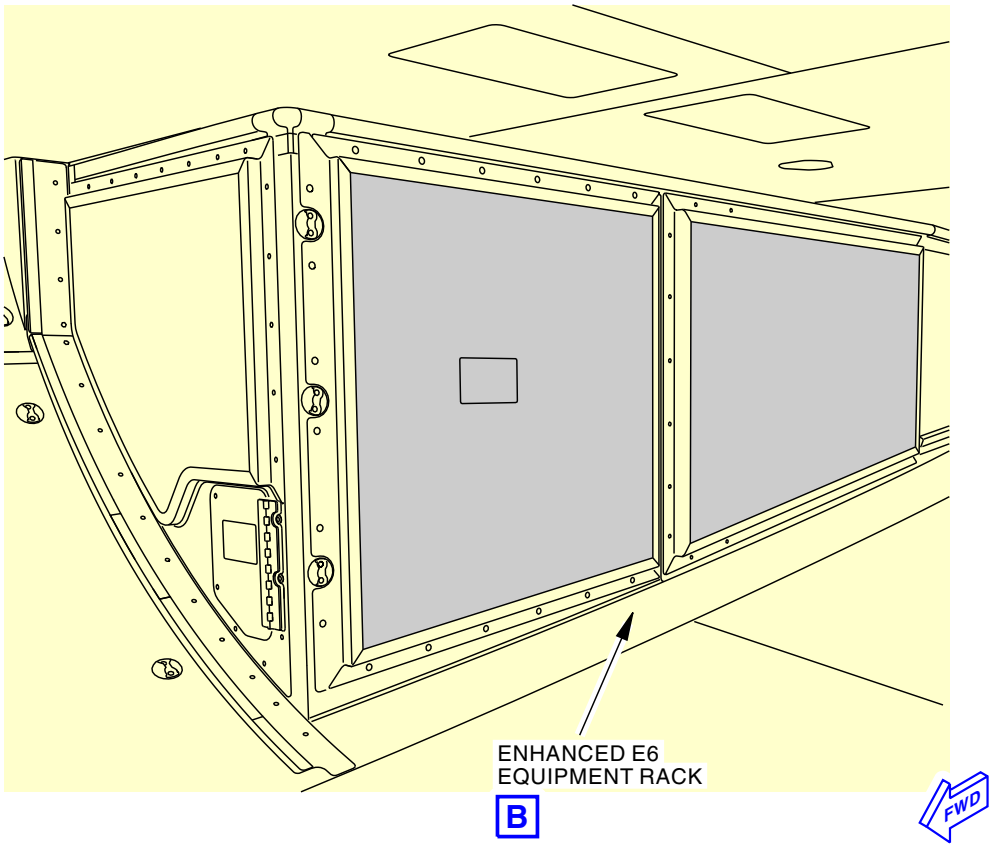


ENHANCED E6 EQUIPMENT RACK

A

2545819 S0000604955_V2

System Interface Unit Installation
Figure 401/44-35-05-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

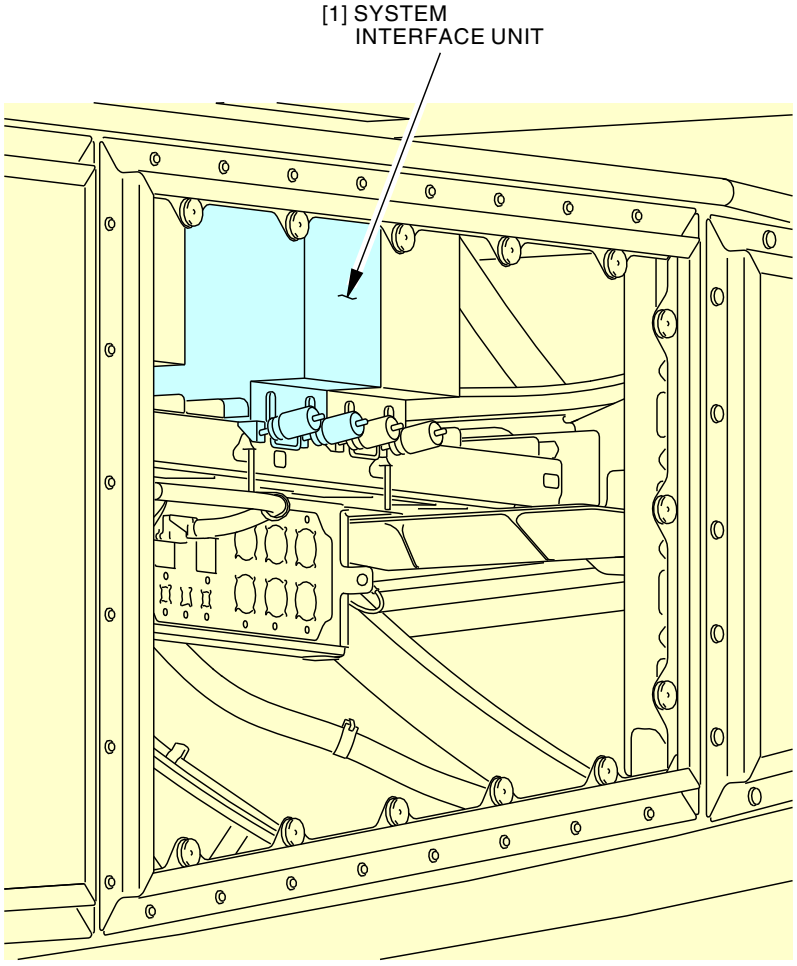

ENHANCED E6 EQUIPMENT RACK
(ACCESS DOOR REMOVED)

B

2851234 S0000666428_V1

System Interface Unit Installation
Figure 401/44-35-05-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-05-400-801

3. System Interface Unit Installation

(Figure 401)

A. General

(1) This task has instructions to install the system interface unit.

B. References

Reference	Title
20-10-07-400-801	E/E Box Installation (P/B 401)
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
44-35-00-440-802	Activate a Configuration Database (P/B 201)
44-35-00-470-805	Upload Software to System Interface Unit (P/B 201)
44-35-00-470-806	Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point (P/B 201)
44-35-00-470-807	Upload a Configuration Database to System Interface Unit (P/B 201)
44-35-00-470-809	Content Load (P/B 201)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)

C. Location Zones

Zone	Area
146	Aft Cargo Compartment Equipment Bay - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. System Interface Unit Installation

SUBTASK 44-35-05-910-002

CAUTION

DO NOT TOUCH THE CIRCUIT CARDS BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO STATIC ELECTRICITY. STATIC ELECTRICITY CAN CAUSE DAMAGE TO THE CIRCUIT CARDS.

(1) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802

SUBTASK 44-35-05-420-001

CAUTION

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(2) Install the system interface unit [1] (TASK 20-10-07-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. System Interface Unit Installation Test

SUBTASK 44-35-05-860-002

(1) Remove the safety tags and close these circuit breakers:

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
---	---	C04078	SIU

F/O Electrical System Panel, P6-5

Row	Col	Number	Name

PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020

D	12	C04075	CWAP/SERVER

PTF ALL POST SB 737-44-1020

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name

PTF ALL PRE SB 737-44-1021 AND POST SB 737-44-1020

D	12	C04075	CWAP/SERVER (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-05-210-001

(2) Make sure that the system interface unit LEDs are on (green).

SUBTASK 44-35-05-470-001

(3) Do this task: Upload Software to System Interface Unit, TASK 44-35-00-470-805.

SUBTASK 44-35-05-470-002

(4) Do this task: Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point, TASK 44-35-00-470-806.

SUBTASK 44-35-05-860-004

(5) Do this task: Upload a Configuration Database to System Interface Unit, TASK 44-35-00-470-807.

SUBTASK 44-35-05-860-005

(6) Do this task: Activate a Configuration Database, TASK 44-35-00-440-802.

SUBTASK 44-35-05-470-003

(7) Do this task: Content Load, TASK 44-35-00-470-809.

SUBTASK 44-35-05-860-006

(8) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

SUBTASK 44-35-05-810-001

(9) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there are no faults.

SUBTASK 44-35-05-730-001

(10) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-05-410-005

(1) Close the applicable access panel for the equipment rack.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-05-410-006

(2) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CABIN WIRELESS ACCESS POINT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Cabin Wireless Access Point Removal

(2) Cabin Wireless Access Point Installation.

TASK 44-35-24-000-801

2. Cabin Wireless Access Point Removal

(Figure 401)

A. General

(1) This task has instructions to remove the cabin wireless access point from the overhead crown area.

B. References

Reference	Title
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)
25-21-45-000-801	Main Ceiling Panel - Removal (P/B 401)

C. Location Zones

Zone	Area
200	Upper Half of Fuselage

D. Prepare for the Removal

SUBTASK 44-35-24-860-001

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020			
D	12	C04075	CWAP/SERVER

PTF ALL POST SB 737-44-1020

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021 AND POST SB 737-44-1020			
D	12	C04075	CWAP/SERVER (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-24-010-001

(2) To get access to the cabin wireless access point [1], remove the applicable ceiling panel (TASK 25-21-45-000-801).

SUBTASK 44-35-24-860-002

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(3) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Cabin Wireless Access Point Removal

SUBTASK 44-35-24-020-006

(1) Remove the cabin wireless access point [1]:


(a) Disconnect the J1 Connector [7], J2 Connector [8], and J3 Connector [9] from the cabin wireless access point [1].

(b) Disconnect the screw [4], washers [5], and bonding jumper [6] from the cabin wireless access point [1].

(c) Remove the screws [2] and washers [3] that attach the cabin wireless access point [1] to the mounting tray.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

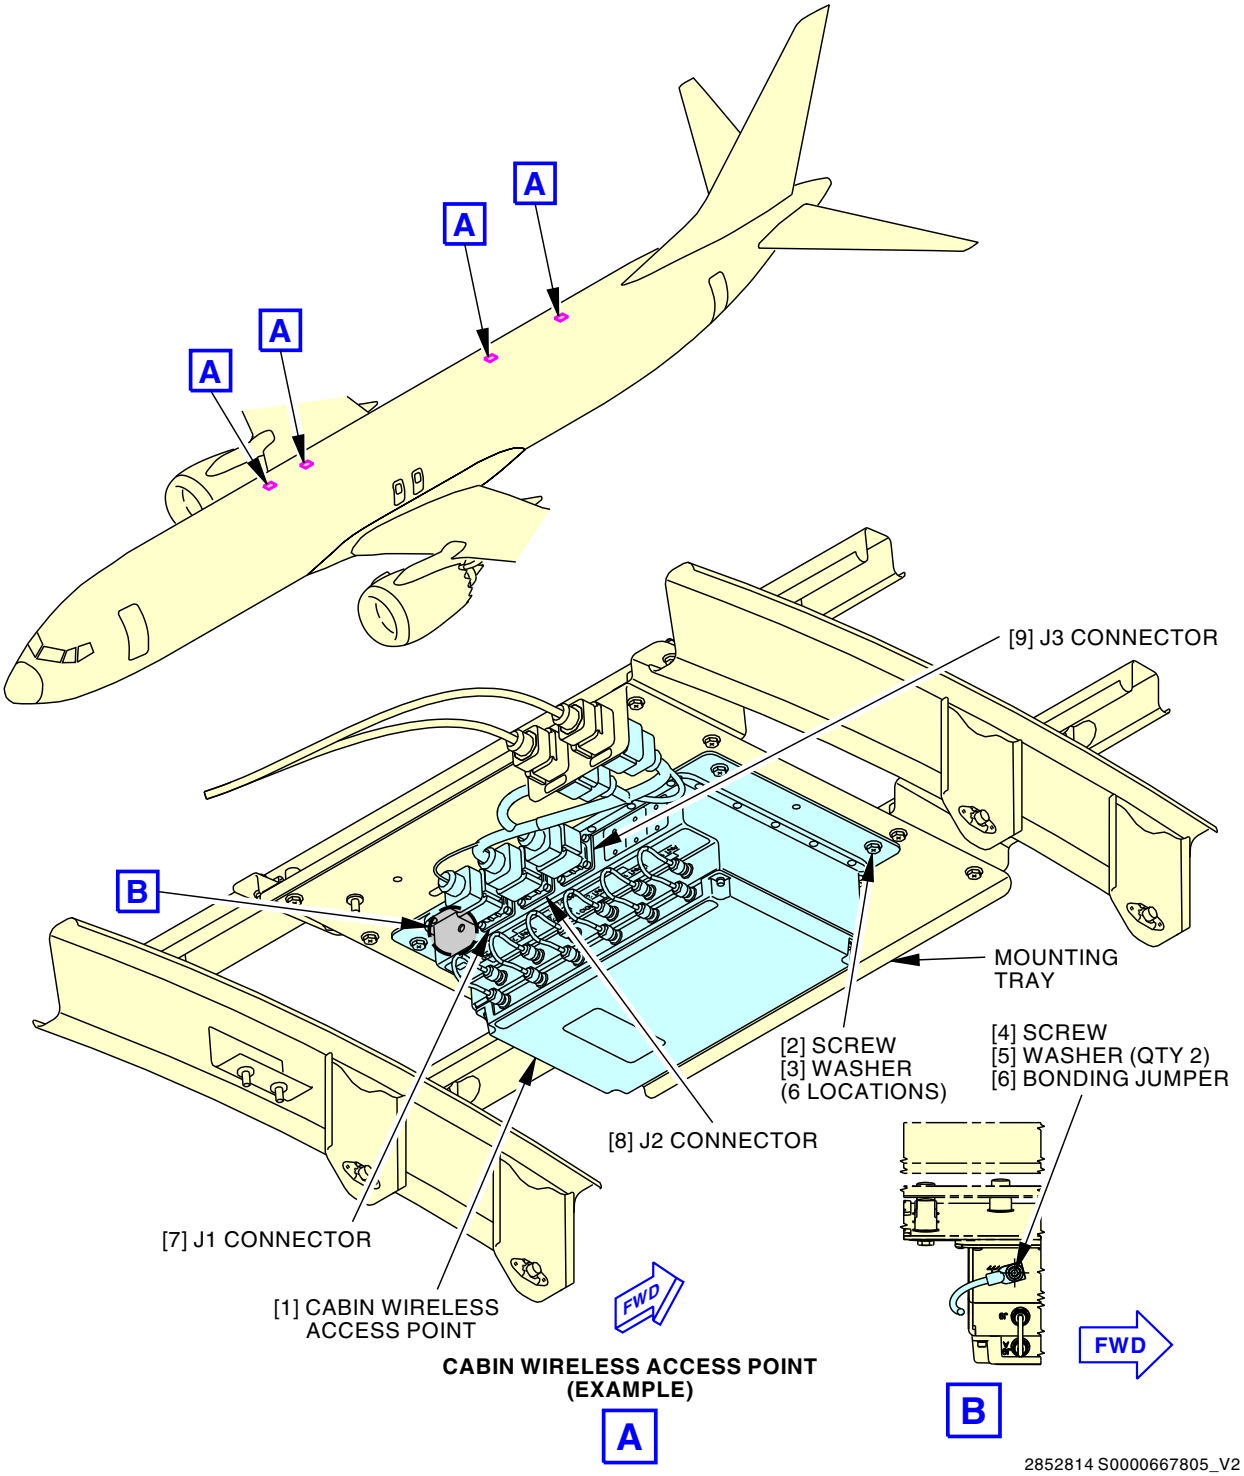

Cabin Wireless Access Point Installation
Figure 401/44-35-24-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-24-400-801

3. Cabin Wireless Access Point Installation

(Figure 401)

A. General

(1) This task has instructions to install the cabin wireless access point to the overhead crown area.

B. References

Reference	Title
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
25-21-45-400-801	Main Ceiling Panel - Installation (P/B 401)
44-35-00-440-802	Activate a Configuration Database (P/B 201)
44-35-00-470-806	Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point (P/B 201)
44-35-00-710-805	Cabin Wireless Access Point Operational Test (P/B 501)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-860-809	Cabin Wireless Access Point Status and Radio Control (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Location Zones

Zone	Area
200	Upper Half of Fuselage

E. Cabin Wireless Access Point Installation

SUBTASK 44-35-24-860-003

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(1) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

SUBTASK 44-35-24-420-006

(2) Install the cabin wireless access point [1]:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Install the screws [2] and washers [3] that attach the cabin wireless access point [1] to the mounting tray.

(b) Connect the bonding jumper [6], washers [5], and screw [4] to the cabin wireless access point [1].

(c) Measure the resistance between the bonding jumper [6] and the mounting tray with an intrinsically safe approved bonding meter, COM-1550 (SWPM 20-20-00, paragraph 21).

1) Make sure that the resistance is 1.0 milliohms or less.

(d) Connect the J1 Connector [7], J2 Connector [8], and J3 Connector [9] to the cabin wireless access point [1].

F. Cabin Wireless Access Point Installation Test

SUBTASK 44-35-24-860-004

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name

PTF ALL POST SB 737-44-1021 AND POST SB 737-44-1020

D	12	C04075	CWAP/SERVER

PTF ALL POST SB 737-44-1020

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-5

Row	Col	Number	Name

PTF ALL PRE SB 737-44-1021 AND POST SB 737-44-1020

D	12	C04075	CWAP/SERVER (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-24-710-002

(2) Do this task: Cabin Wireless Access Point Operational Test, TASK 44-35-00-710-805.

SUBTASK 44-35-24-210-001

(3) Make sure that the Cabin Wireless Access Point (CWAP) LEDs are on (green).

SUBTASK 44-35-24-860-008

(4) Do this task: Cabin Wireless Access Point Status and Radio Control, TASK 44-35-00-860-809.

SUBTASK 44-35-24-860-009

(5) Do this task: Activate a Configuration Database, TASK 44-35-00-440-802.

SUBTASK 44-35-24-860-010

(6) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

SUBTASK 44-35-24-470-001

(7) If the Cabin Wireless Access Point (CWAP) fails conformity, do this task: Load Uploaded Software to the System Interface Unit and Cabin Wireless Access Point, TASK 44-35-00-470-806.

SUBTASK 44-35-24-810-001

(8) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there are no faults.

SUBTASK 44-35-24-710-003

(9) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

G. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-24-410-001

(1) Install the applicable ceiling panel (TASK 25-21-45-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

AIRPLANE PERSONALITY MODULE - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Airplane Personality Module Removal

(2) Airplane Personality Module Installation.

TASK 44-35-26-000-801

2. Airplane Personality Module Removal

(Figure 401)

A. General

(1) This task has instructions to remove the Airplane Personality Module (APM) from the E6 equipment rack.

B. References

Reference	Title
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)

C. Location Zones

Zone	Area
146	Aft Cargo Compartment Equipment Bay - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. Prepare for the Removal

SUBTASK 44-35-26-860-010

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	9	C04074	BROADBAND 2

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	9	C04074	BROADBAND 2 (INOP)

PTF ALL

SUBTASK 44-35-26-860-012

(2) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	9	C04074	BROADBAND 2

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1021 (Continued)

(Continued)

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	9	C04074	BROADBAND 2 (INOP)

PTF ALL

SUBTASK 44-35-26-010-001

(3) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

SUBTASK 44-35-26-860-009

(4) Open these circuit breakers and install safety tags:

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1020			
---	---	C04084	BROADBAND MAINTENANCE 2
PTF ALL POST SB 737-44-1020			
---	---	C04084	MODMAN

PTF ALL

SUBTASK 44-35-26-910-001

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(5) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

F. Airplane Personality Module Removal

SUBTASK 44-35-26-020-001

(1) Remove the Airplane Personality Module (APM) [1]:

(a) Disconnect the J1 Connector [7] from the Airplane Personality Module (APM) [1].


(b) Disconnect the nut [4], washer [5], and bonding jumper [6] from the Airplane Personality Module (APM) [1].


(c) Remove the bolts [2] and washers [3] from the Airplane Personality Module (APM) [1].

(d) Carefully, pull the Airplane Personality Module (APM) [1] from the E6 equipment rack.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

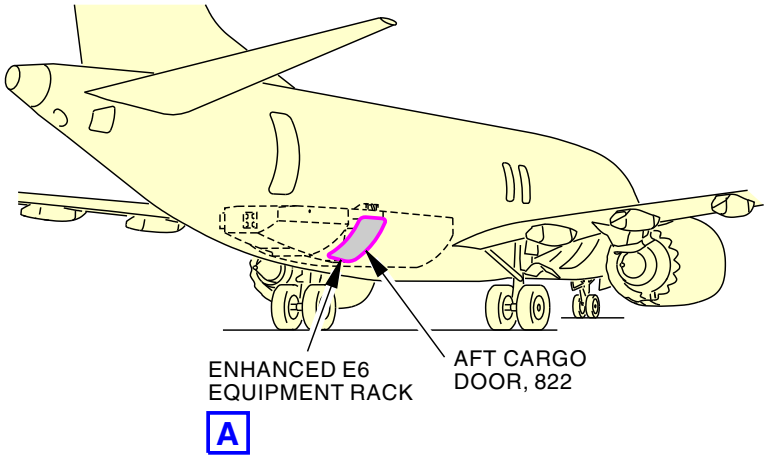

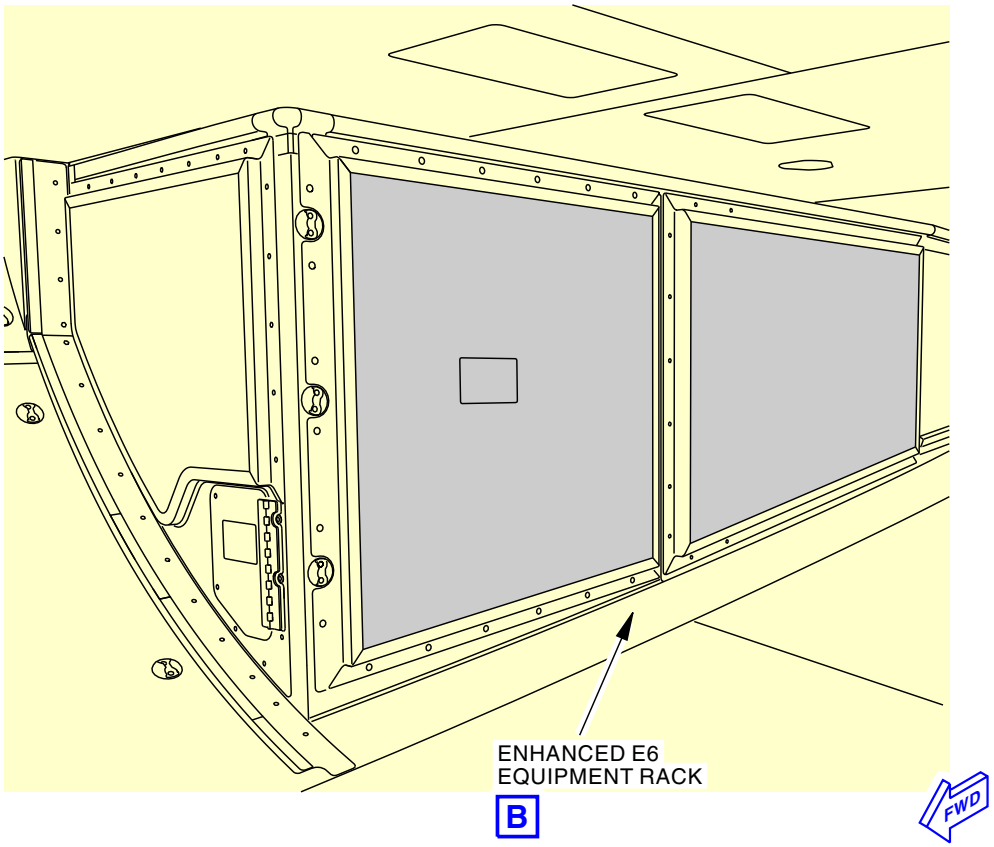


ENHANCED E6 EQUIPMENT RACK

A

2545819 S0000604955_V2

Airplane Personality Module Installation
Figure 401/44-35-26-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

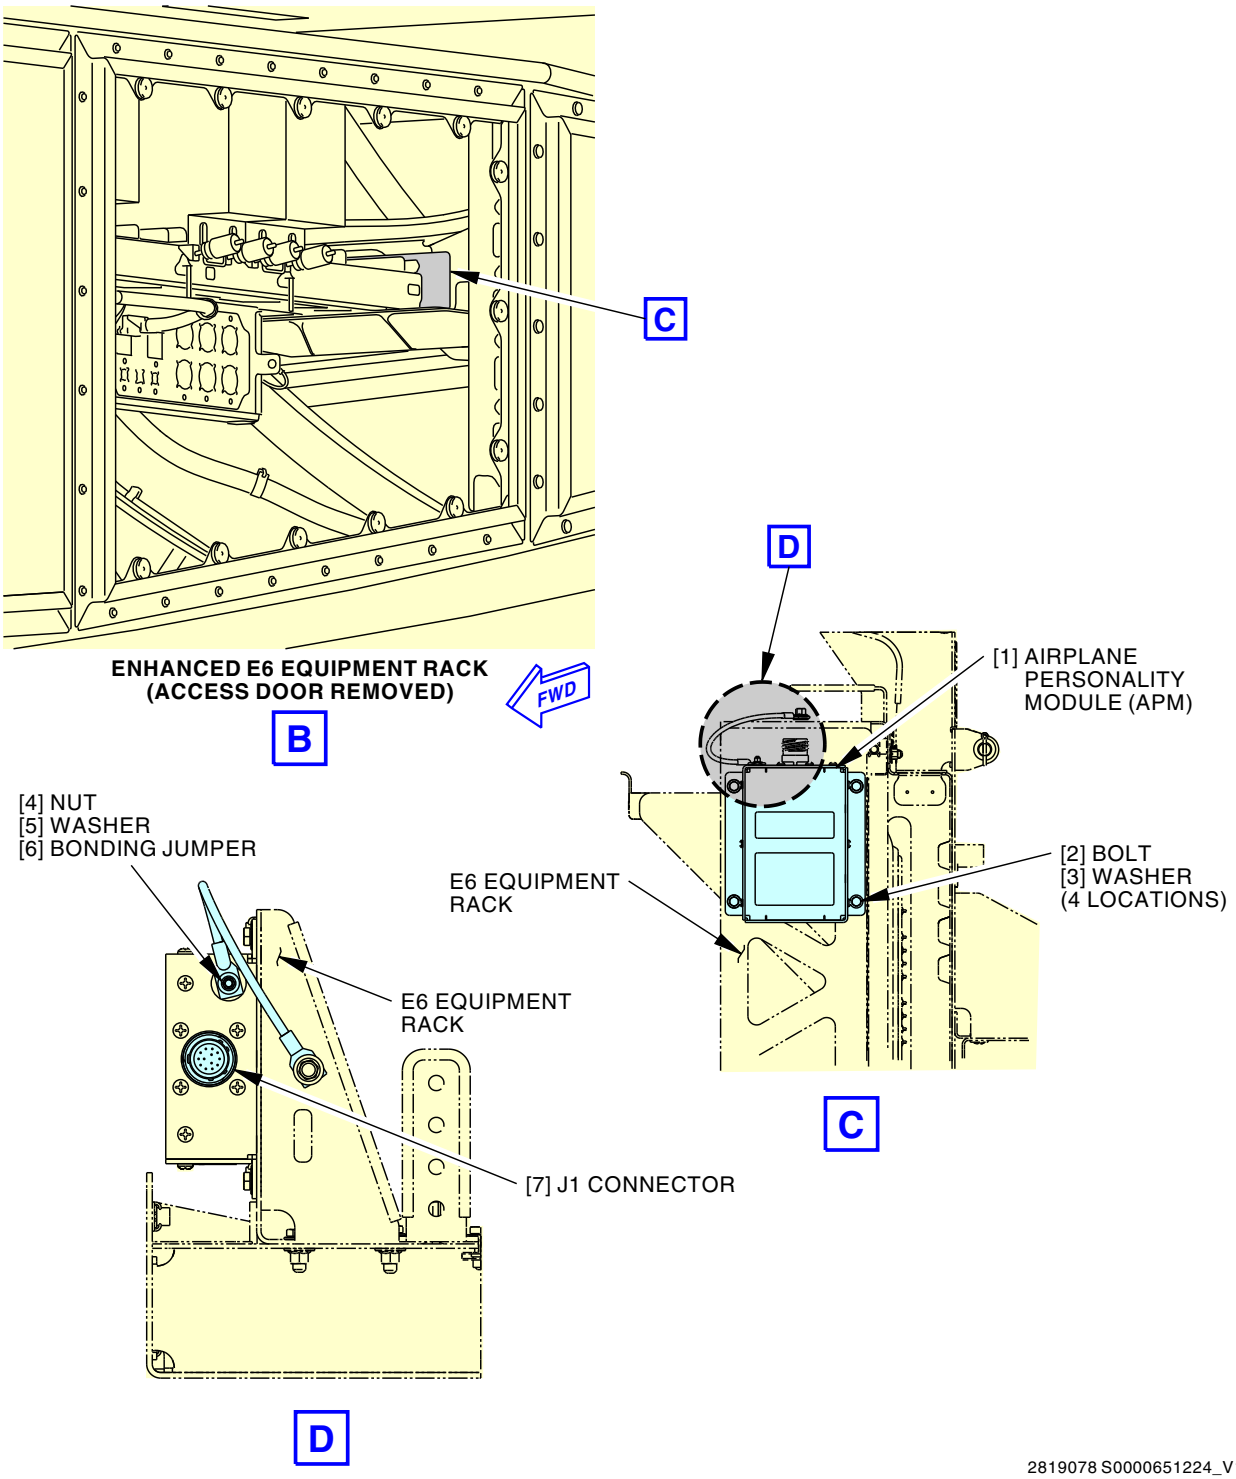

Airplane Personality Module Installation
Figure 401/44-35-26-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-26-400-801

3. Airplane Personality Module Installation

(Figure 401)

A. General

(1) This task has instructions to install the Airplane Personality Module (APM) to the E6 equipment rack.

B. References

Reference	Title
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
44-35-00-470-810	Data Load SATCOM LRUs using the AIT Flight Simulyzer Software (P/B 201)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-860-812	Check SATCOM Information and Change the Data Load Discrete Status (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Location Zones

Zone	Area
146	Aft Cargo Compartment Equipment Bay - Right

E. Access Panels

Number	Name/Location
822	Aft Cargo Door

F. Airplane Personality Module Installation

SUBTASK 44-35-26-910-002

CAUTION

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(1) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

SUBTASK 44-35-26-420-001

(2) Install the Airplane Personality Module (APM) [1]:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Carefully, put the Airplane Personality Module (APM) [1] to the E6 equipment rack.

(b) Install the bolts [2] and washers [3] to the Airplane Personality Module (APM) [1].

(c) Connect the bonding jumper [6], washer [5], and nut [4] to the Airplane Personality Module (APM) [1].

(d) Measure the resistance between the bonding jumper [6] and the E6 equipment rack with an intrinsically safe approved bonding meter, COM-1550 (SWPM 20-20-00, paragraph 21).

1) Make sure that the resistance is 1.0 milliohms or less.

(e) Connect the J1 Connector [7] to the Airplane Personality Module (APM) [1].

G. Airplane Personality Module Installation Test

SUBTASK 44-35-26-860-002

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	9	C04074	BROADBAND 2

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	9	C04074	BROADBAND 2 (INOP)

PTF ALL

SUBTASK 44-35-26-860-008

(2) Remove the safety tags and close these circuit breakers:

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1020			
---	---	C04084	BROADBAND MAINTENANCE 2
PTF ALL POST SB 737-44-1020			
---	---	C04084	MODMAN

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	9	C04074	BROADBAND 2

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	9	C04074	BROADBAND 2 (INOP)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-26-860-004

(3) Do this task: Check SATCOM Information and Change the Data Load Discrete Status, TASK 44-35-00-860-812.

SUBTASK 44-35-26-860-005

(4) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

SUBTASK 44-35-26-470-001

(5) If the Airplane Personality Module (APM) fails conformity, do this task: Data Load SATCOM LRUs using the AIT Flight Simulyzer Software, TASK 44-35-00-470-810.

SUBTASK 44-35-26-810-001

(6) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there are no faults.

SUBTASK 44-35-26-730-002

(7) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807.

PTF ALL

H. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-26-410-003

(1) Close the applicable access panel.

SUBTASK 44-35-26-410-004

(2) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

KA/KU-BAND RADIO FREQUENCY UNIT - MAINTENANCE PRACTICES

1. General

A. This procedure has this task:

(1) Replacement of the Thermal Pad.

TASK 44-35-27-960-801

2. Replacement of the Thermal Pad

(Figure 201)

A. General

(1) This task has instructions to replace the thermal pad on the bottom surface of the Ka-band Radio Frequency Unit (KRFU).

B. Replace the KRFU Thermal Pad

SUBTASK 44-35-27-960-003

(1) To replace the KRFU thermal pad, do these steps:

(a) Turn the KRFU to show the bottom surface.

1) Make sure that the bottom surface is clean.

(b) Put the two thermal pads on the KRFU.

1) Align the corner of the thermal pad on the bottom surface of the KRFU.

2) Make sure that approximately 0.10 in. (0.25 cm) can be shown around the edges.

3) Carefully remove the clear protective area.


(c) Apply a constant pressure on the thermal pad non-tacky side in one direction on the bottom of the KRFU.

1) Make sure that the air bubble is not more than 40% of the surface area of the thermal pad.

NOTE: The diameter of the air bubble must not be larger than 1.50 in. (3.81 cm).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

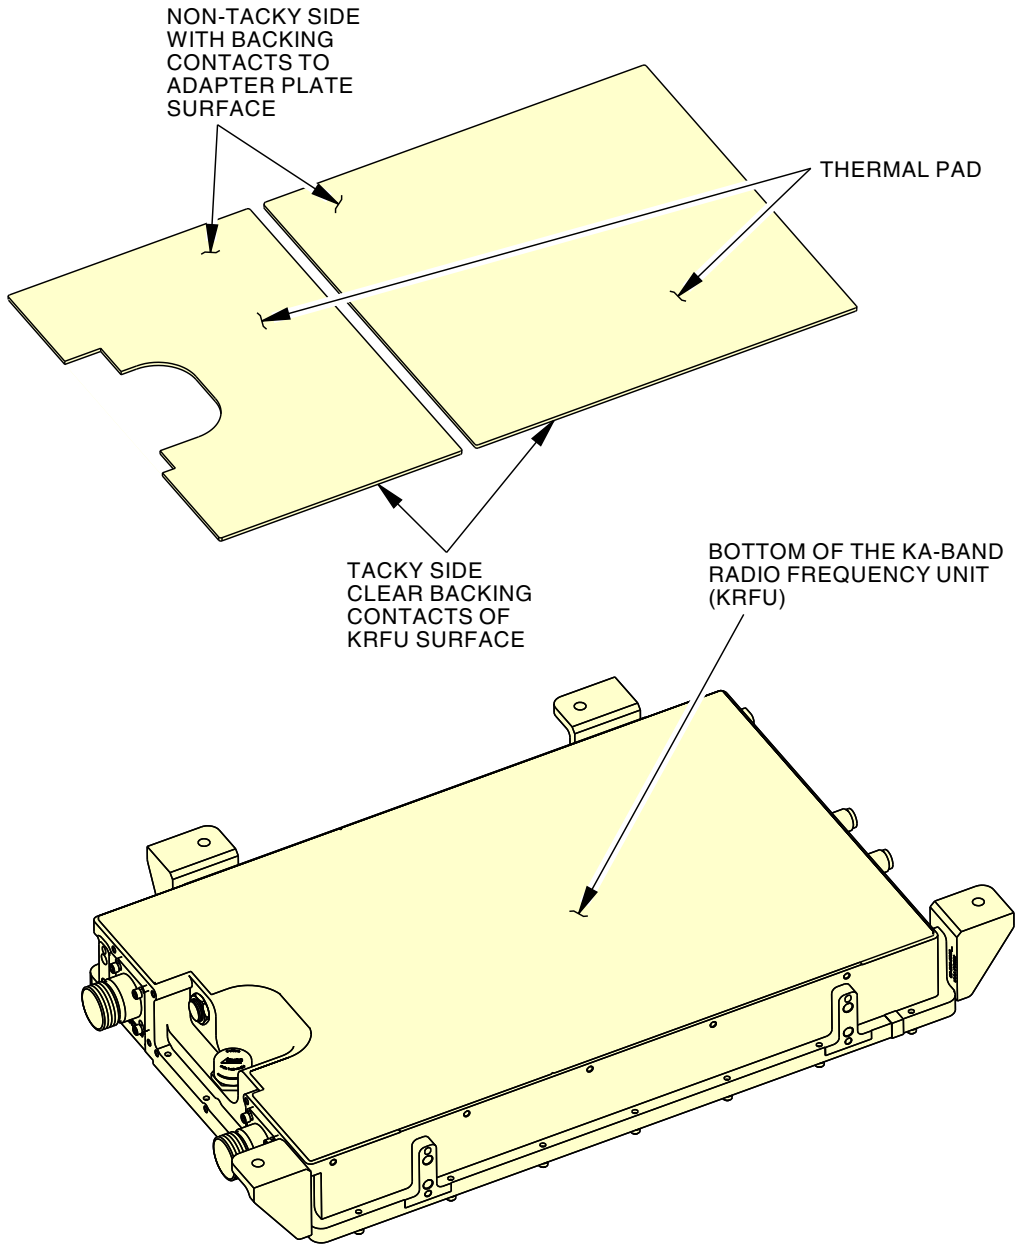

2820102 S0000651872_V1

Replacement of the Thermal Pad
Figure 201/44-35-27-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

KA/KU-BAND RADIO FREQUENCY UNIT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Ka/Ku-band Radio Frequency Unit Removal

(2) Ka/Ku-band Radio Frequency Unit Installation.

TASK 44-35-27-000-801

2. Ka/Ku-band Radio Frequency Unit Removal

(Figure 401)

A. General

(1) This task has instructions to remove the Ka/Ku-band Radio Frequency Unit (KRFU).

B. References

Reference	Title
20-10-44-000-801	Lockwire, Cotter Pins, and Lockrings - Removal (P/B 401)
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)
53-54-00-000-801	Broadband Radome Removal (P/B 401)

C. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

D. Prepare for the Removal

SUBTASK 44-35-27-860-001

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	8	C04073	BROADBAND 1

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	8	C04073	BROADBAND 1 (INOP)

PTF ALL

SUBTASK 44-35-27-020-001

(2) To get access to the Ka-band Radio Frequency Unit (KRFU) [1], remove the broadband radome (TASK 53-54-00-000-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-27-910-001

WARNING BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

CAUTION DO A VISUAL INSPECTION FOR CORROSION OR DAMAGE OF THE LIFTING LUG/ADAPTOR BEFORE YOU LIFT THE ANTENNA. IF THE LIFTING LUG/ADAPTOR HAS CORROSION OR IS DAMAGED, IT CAN FAIL AND CAUSE DAMAGE TO THE AIRPLANE OR EQUIPMENT.

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(3) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

E. Ka-band Radio Frequency Unit Removal

SUBTASK 44-35-27-020-002

(1) Disconnect the lockwire from TX Cable Connector [17] and RX Cable Connector [16] (TASK 20-10-44-000-801).

SUBTASK 44-35-27-020-003

(2) Disconnect the TX Cable Connector [17] and RX Cable Connector [16] from the airplane.

SUBTASK 44-35-27-020-004

CAUTION MAKE SURE BEFORE YOU REMOVE THE FUSELAGE INSTALLED ANTENNA, BEFORE YOU REMOVE THE WAVEGUIDE AND RIGID COAX CABLE. IF YOU DO NOT OBEY, DAMAGE TO THE EQUIPMENT CAN OCCUR.

(3) To disconnect the J1 Connector [10], J2 Connector [11], J3 Connector [12], J4 Connector [13], J5 Connector [14], and J6 Connector [15] from the Ka-band Radio Frequency Unit (KRFU) [1], do these steps:

(a) Disconnect the J1 Connector [10].

(b) To disconnect the J3 Connector [12], do these steps:

1) Remove the waveguide that connects to the J3 Connector [12].
2) Make sure that the waveguide adapter is installed.
3) Remove and keep the O-ring [18].
4) Install protective covers on the connectors.

(c) To disconnect the J4 Connector [13], do these steps:

1) Remove the rigid coax cable that connects to the J4 Connector [13].
2) Make sure that the coax connector is connected to the rigid coax cable.
3) Remove and keep the O-ring [19].
4) Install protective covers on the connectors.

(d) Disconnect the J2 Connector [11], J5 Connector [14], and J6 Connector [15].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-27-020-005

(4) Remove the Ka-band Radio Frequency Unit (KRFU) [1]:

NOTE: To remove the KRFU, use two persons.

(a) Disconnect the bolt [6], washers [7], and bonding jumper [8] from the Ka-band Radio Frequency Unit (KRFU) [1].


(b) Disconnect the bolt [3], washers [4], and bonding jumper [5] from the Ka-band Radio Frequency Unit (KRFU) [1].

(c) Remove the bolts [2] from the Ka-band Radio Frequency Unit (KRFU) [1].

(d) Carefully, pull the Ka-band Radio Frequency Unit (KRFU) [1] from the adapter plate assembly.

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

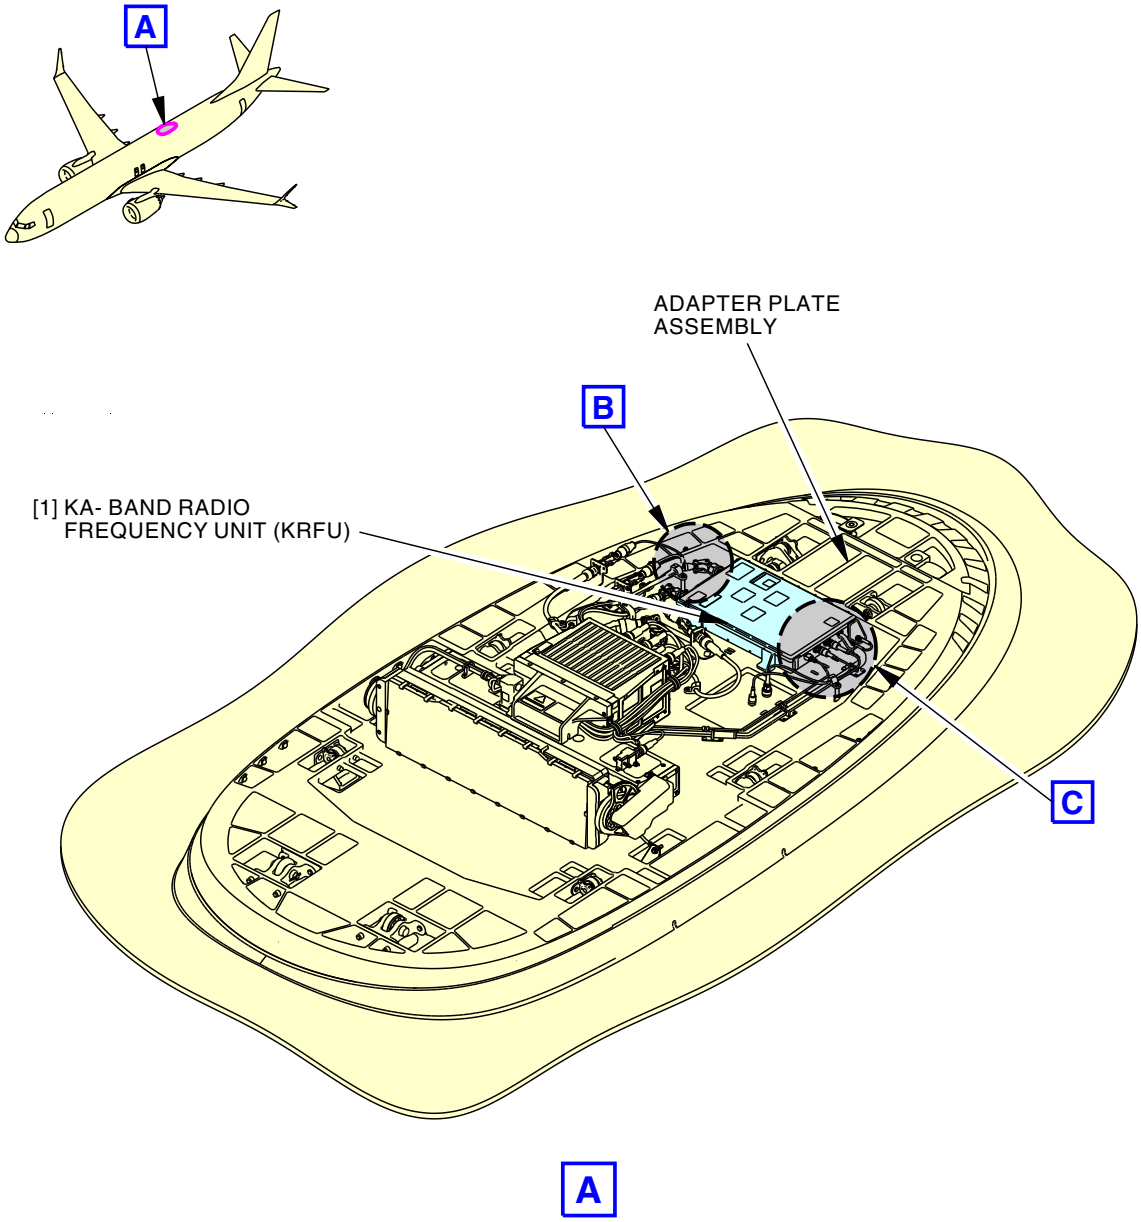

2819763 S0000651570_V1

Ka-band Radio Frequency Unit Installation
Figure 401/44-35-27-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

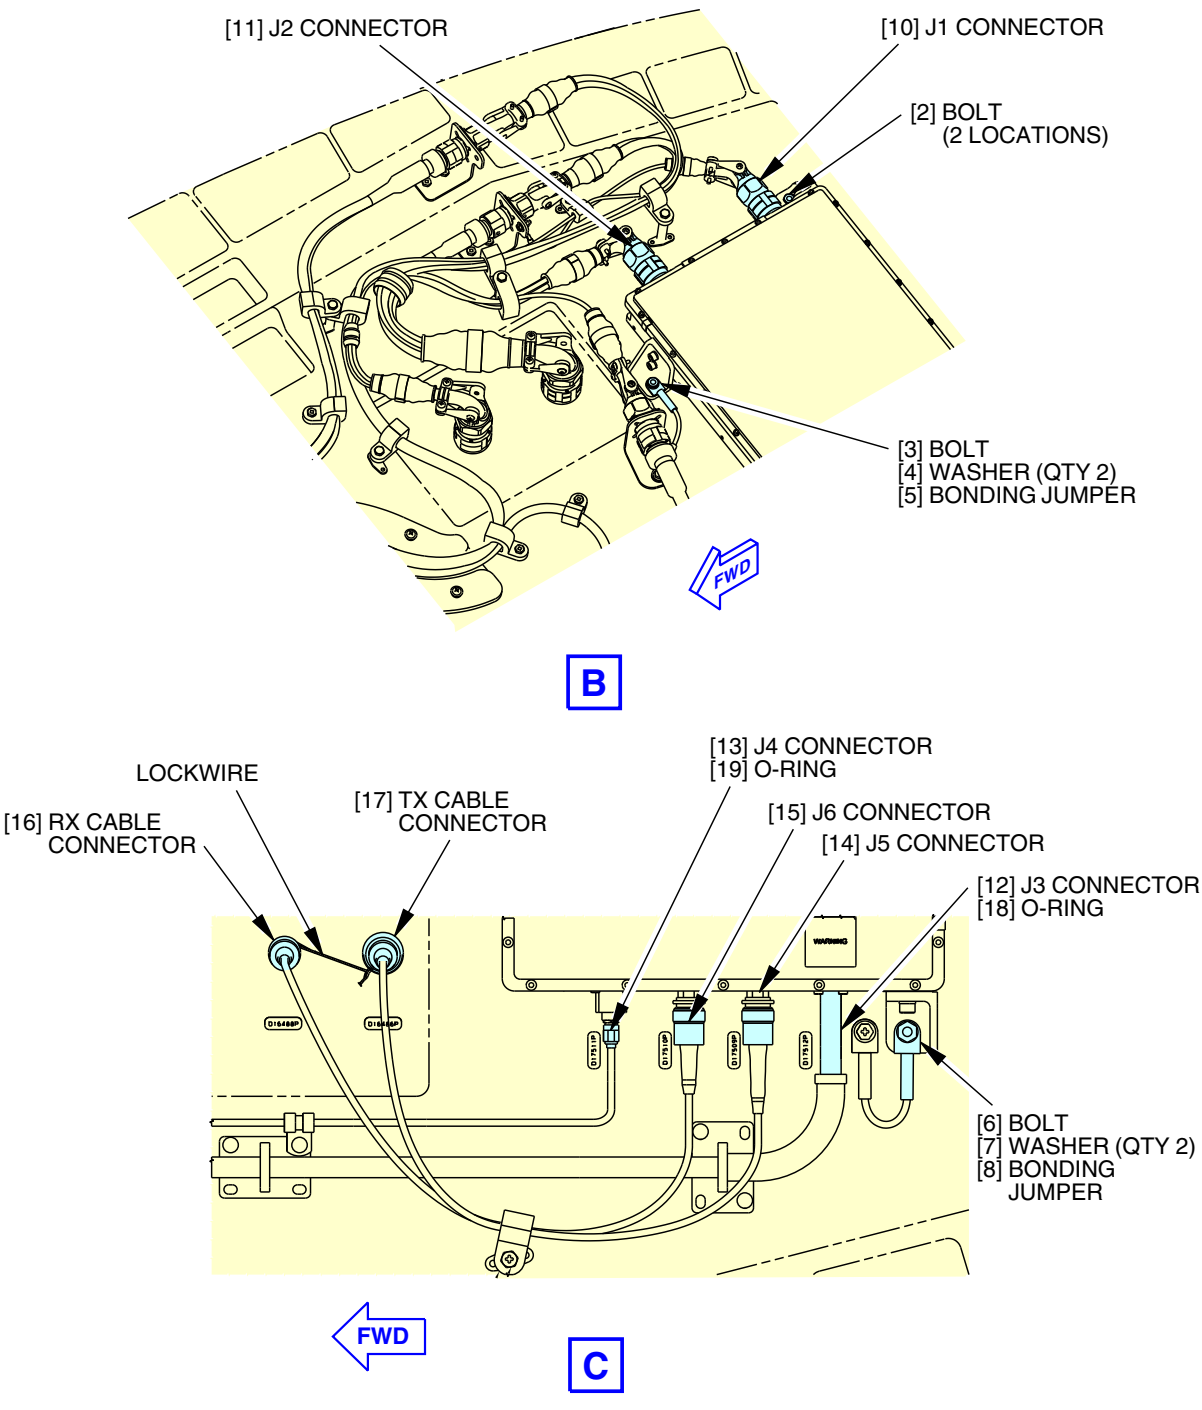

2819765 S0000651571_V3

Ka-band Radio Frequency Unit Installation
Figure 401/44-35-27-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-27-400-801

3. Ka/Ku-band Radio Frequency Unit Installation

(Figure 401)

A. General

(1) This task has instructions to install the Ka/Ku-band Radio Frequency Unit (KRFU).

B. References

Reference	Title
20-10-34-110-802	Clean Bare, Clad, or Plated Metal with Solvent (P/B 701)
20-10-34-120-801	Hand Clean Metal Surfaces with Abrasives (P/B 701)
20-10-44-400-801	Lockwire, Cotter Pins, and Lockrings - Installation (P/B 401)
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
44-35-00-470-810	Data Load SATCOM LRUs using the AIT Flight Simulyzer Software (P/B 201)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-820-801	Jetwave MODMAN to KRFU Coax Cable Calibration (P/B 201)
44-35-00-860-812	Check SATCOM Information and Change the Data Load Discrete Status (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)
44-35-27-960-801	Replacement of the Thermal Pad (P/B 201)
51-21-72-370-804	BMS10-11 Primer - Application (P/B 701)
53-54-00-400-801	Broadband Radome Installation (P/B 401)
53-54-00-400-802	Adapter Plate Assembly Installation (P/B 401)
SWPM 20-20-00 Paragraph 21	MAXIMUM PERMITTED RESISTANCE OF ELECTRICAL BONDS
SWPM 20-20-00, Paragraph 2	CLEANING OF FAY SURFACES
SWPM 20-20-10	Replacement of Ground Studs and Bonding Jumper Installation

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
A50110	Sealant - Fuel Tank	BMS5-45 Class B-2
A50155	Sealant - Fuel Tank	BMS5-45 Class C
A50231	Sealant - Pressure And Environmental - Chromate Type	BMS5-95 Class B
A50296	Sealant - Pressure And Environmental - Chromate Type	BMS5-95 Class C
C00064	Coating - Aluminum Chemical Conversion	BAC5719 Type II Class A (MIL-DTL-5541 Class 1A)
C00259	Coating - Chemical And Solvent Resistant Finish, Corrosion Inhibiting Primer	BMS10-11 Type I
G01048	Lockwire - MS20995C32, Corrosion Resistant Steel - 0.032 Inch (0.8128 mm) Diameter	NASM20995

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Ka-band Radio Frequency Unit (KRFU)	44-35-27-02-135	PTF ALL

F. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

G. Prepare for the Installation

SUBTASK 44-35-27-420-001

(1) If it is necessary, install the adapter plate assembly (TASK 53-54-00-400-802).

SUBTASK 44-35-27-960-001

(2) If it is necessary, replace the thermal pad (TASK 44-35-27-960-801).

SUBTASK 44-35-27-910-003

CAUTION

REMOVE THE THERMAL PAD PROTECTIVE BACK FROM THE TWO SIDES BEFORE THE INSTALLATION OF THE KA-BAND RADIO FREQUENCY UNIT (KRFU). THE KRFU CAN GET TOO HOT AND SHUTDOWN AND DAMAGE TO THE EQUIPMENT CAN OCCUR.

(3) Before the installation of the Ka-band Radio Frequency Unit (KRFU) [1], remove the white protective area on the thermal pads.

SUBTASK 44-35-27-910-002

WARNING

BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

CAUTION

DO A VISUAL INSPECTION FOR CORROSION OR DAMAGE OF THE LIFTING LUG/ADAPTOR BEFORE YOU LIFT THE ANTENNA. IF THE LIFTING LUG/ADAPTOR HAS CORROSION OR IS DAMAGED, IT CAN FAIL AND CAUSE DAMAGE TO THE AIRPLANE OR EQUIPMENT.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(CAUTION PRECEDES)

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(4) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

H. Ka-band Radio Frequency Unit Installation

SUBTASK 44-35-27-100-001

(1) Do these steps to prepare the bonding jumper [5], bonding jumper [8], and Ka-band Radio Frequency Unit (KRFU) [1] for installation:

(a) Use Cleaning Procedure 1 to prepare the attachment surface for the bonding jumper [5], bonding jumper [8], and Ka-band Radio Frequency Unit (KRFU) [1] (SWPM 20-20-00, Paragraph 2, TASK 20-10-34-120-801).

(b) Use Cleaning Procedure 5 to clean the mating surfaces on the Ka-band Radio Frequency Unit (KRFU) [1], bonding jumper [5], bonding jumper [8], washers [4], bolt [3], washers [7], and bolt [6] (SWPM 20-20-00, Paragraph 2, TASK 20-10-34-110-802):

(c) Manually apply coating, C00064, to the abraded surface on the Ka-band Radio Frequency Unit (KRFU) [1].

SUBTASK 44-35-27-420-002

(2) Install the Ka-band Radio Frequency Unit (KRFU) [1]:

NOTE: To install the KRFU, use two persons.

(a) Carefully, put the Ka-band Radio Frequency Unit (KRFU) [1] to the adapter plate assembly.

(b) Install the bolts [2] to the Ka-band Radio Frequency Unit (KRFU) [1].

(c) Connect the bonding jumper [5], washers [4], and bolt [3] to the Ka-band Radio Frequency Unit (KRFU) [1].

1) Apply sealant, A50110, sealant, A50155, sealant, A50296, or sealant, A50231 to the terminal on the bonding jumper [5], washers [4], and bolt [3] (SWPM 20-20-10, Paragraph 4).

(d) Measure the resistance between the bonding jumper [5] and the adapter plate assembly with an intrinsically safe approved bonding meter, COM-1550 (SWPM 20-20-00 Paragraph 21).

1) Make sure that the resistance is 1.0 milliohms or less.

(e) Connect the bonding jumper [8], washers [7], and bolt [6] to the Ka-band Radio Frequency Unit (KRFU) [1].

1) Apply sealant, A50110, sealant, A50155, sealant, A50296, or sealant, A50231 to the terminal on the bonding jumper [8], washers [7], and bolt [6] (SWPM 20-20-10, Paragraph 4).

(f) Measure the resistance between the bonding jumper [8] and the adapter plate assembly with an intrinsically safe approved bonding meter, COM-1550 (SWPM 20-20-00 Paragraph 21).

1) Make sure that the resistance is 1.0 milliohms or less.

(g) Refinish the abraded surfaces that you can see.

1) Apply one coat of primer, C00259 (TASK 51-21-72-370-804).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(h) Tighten the bolt [3] and bolt [6] to 32 in-lb (3.6 N·m) - 38 in-lb (4.3 N·m).

(i) Apply a fillet seal with sealant, A00247, over the bolt [3], bolt [6], and terminals on the bonding jumper [5] and bonding jumper [8] (SWPM 20-20-10).

(j) Apply a fillet seal with sealant, A00247, all around perimeter of the Ka-band Radio Frequency Unit (KRFU) [1].

SUBTASK 44-35-27-420-003

CAUTION MAKE SURE BEFORE YOU REMOVE THE FUSELAGE INSTALLED ANTENNA, BEFORE YOU REMOVE THE WAVEGUIDE AND RIGID COAX CABLE. IF YOU DO NOT OBEY, DAMAGE TO THE EQUIPMENT CAN OCCUR.

(3) To connect the J1 Connector [10], J2 Connector [11], J3 Connector [12], J4 Connector [13], J5 Connector [14], and J6 Connector [15] to the Ka-band Radio Frequency Unit (KRFU) [1], do these steps:

(a) To connect the J3 Connector [12], do these steps:

1) Remove protective covers on the connectors.
2) Examine the O-ring [18] for damage.
3) Install the O-ring [18].
4) Make sure that the waveguide adapter is installed.
5) Align the waveguide to the J3 Connector [12].
6) Tighten the waveguide screws to 5.4 in-lb (0.6 N·m) - 6.0 in-lb (0.7 N·m).

(b) To connect the J4 Connector [13], do these steps:

1) Remove protective covers on the connectors.
2) Examine the O-ring [19] for damage.
3) Install the O-ring [19].
4) Make sure that the coax connector is connected to the rigid coax cable.
5) Align the rigid coax cable to the J4 Connector [13].
6) Tighten the rigid coax screws to 5.4 in-lb (0.6 N·m) - 6.0 in-lb (0.7 N·m).
7) Tighten the J4 Connector [13] to 8 in-lb (0.9 N·m) - 10 in-lb (1.1 N·m).

(c) Tighten the J5 Connector [14] and J6 Connector [15] to 10 in-lb (1.1 N·m) - 12 in-lb (1.4 N·m).

(d) Connect the J1 Connector [10] and J2 Connector [11].

1) Make sure that the red band on the J1 Connector [10] and J2 Connector [11] is not shown.

SUBTASK 44-35-27-420-004

(4) Connect the RX Cable Connector [16] and TX Cable Connector [17] to the airplane.

(a) Tighten the RX Cable Connector [16] to 10 in-lb (1.1 N·m) - 12 in-lb (1.4 N·m).

(b) Tighten the TX Cable Connector [17] to 13 in-lb (1.5 N·m) - 15 in-lb (1.7 N·m).

SUBTASK 44-35-27-420-005

(5) Connect a MS20995C32 lockwire, G01048, through the RX Cable Connector [16] and TX Cable Connector [17] (TASK 20-10-44-400-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Ka/Ku-band Radio Frequency Unit Installation Test

SUBTASK 44-35-27-860-002

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL POST SB 737-44-1021

A	8	C04073	BROADBAND 1

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name

PTF ALL PRE SB 737-44-1021

A	8	C04073	BROADBAND 1 (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-27-860-004

(2) Do this task: Check SATCOM Information and Change the Data Load Discrete Status, TASK 44-35-00-860-812.

SUBTASK 44-35-27-860-005

(3) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

SUBTASK 44-35-27-470-001

(4) If the KRFU fails conformity, do this task: Data Load SATCOM LRUs using the AIT Flight Simulyzer Software, TASK 44-35-00-470-810.

SUBTASK 44-35-27-810-001

(5) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there are no faults.

SUBTASK 44-35-27-750-001

(6) Do this task: Jetwave MODMAN to KRFU Coax Cable Calibration, TASK 44-35-00-820-801.

SUBTASK 44-35-27-730-001

(7) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807.

PTF ALL

J. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-27-420-009

(1) Install the broadband radome (TASK 53-54-00-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FUSELAGE MOUNTED ANTENNA - MAINTENANCE PRACTICES

1. General

A. This procedure has these tasks:

(1) Jetwave Antenna Calibration

(2) Jetwave Manual Antenna Steering.

TASK 44-35-28-820-801

2. Jetwave Antenna Calibration

(Figure 201)

A. General

(1) This task has instructions to calibrate the antenna.

(a) To do a the automatic antenna alignment calibration, it is recommended put the aircraft in an open area away from buildings such that there is a clear visibility to open sky with the true heading (not magnetic heading) of the aircraft pointed in one of four recommended aircraft true heading values displayed on the antenna calibration page.

B. References

Reference	Title
44-35-00-820-801	Jetwave MODMAN to KRFU Coax Cable Calibration (P/B 201)
44-35-00-860-807	Log into the Maintenance Portal (P/B 201)

C. Jetwave Antenna Calibration

SUBTASK 44-35-28-820-001

(1) Do this task: Jetwave MODMAN to KRFU Coax Cable Calibration, TASK 44-35-00-820-801.

SUBTASK 44-35-28-850-006

WARNING MAKE SURE THAT PERSONNEL STAY A MINIMUM OF 40 FEET (12 METERS) FROM THE TOP-MOUNTED ANTENNA WHILE IT TRANSMITS. IF YOU DO NOT OBEY, THE RADIO FREQUENCY (RF) ENERGY CAN CAUSE INJURIES TO PERSONNEL.

(2) On the overhead panel P5-99, BROADBAND CONTROL PANEL, set the switch to ON.

SUBTASK 44-35-28-860-006

(3) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the SATCOM summary indicator is green.

SUBTASK 44-35-28-210-001

(4) On the Home screen, select the SATCOM button.

(a) Make sure that the SATCOM screen is shown.

NOTE: The System Status tab is selected by default.

SUBTASK 44-35-28-210-002

(5) On the JetWave maintenance login screen, select the JetWave GUI button.

(a) Make sure that the JetWave GUI Login screen is shown.

SUBTASK 44-35-28-850-001

(6) Enter the applicable Username and password, push the Login button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the JetWave Access Center screen is shown.

NOTE: The system is booted fully when all the LRUs show a status of OK.

(b) Enter the applicable username and password.

1) Make sure that the Jetwave Access Center screen is shown.

(c) On the Jetwave Access Center, make sure that the system Status is shown OK.

1) Make sure that the system is fully booted.

SUBTASK 44-35-28-820-002

(7) On the Commanded Test left-hand panel, select the Calibrate Antenna Alignment button.

(a) Make sure that the Calibrate Antenna Alignment screen is shown.

NOTE: The GUI page indicates the status of the aircraft. In order to proceed with the antenna calibration process, all LRUs of the Jetwave system need to be powered up with aircraft IRS system functioning and providing valid inputs. The GUI page indicates the IRS status.

1) On the Calibrate Antenna Alignment screen, make sure that the aircraft latitude and longitude is shown on the Aircraft status screen.

NOTE: Once the aircraft is aligned to within the tolerance range of any of the recommended aircraft heading, the grayed out on the “Initiate” button will be changed to blue, indicating the system readiness to commence the antenna alignment process.

(b) Make sure that the Prepare button is shown.

1) Make sure that the 'Current Calibrated Status: Not Started' is shown.

(c) On the Calibrate Antenna Alignment screen, select the Prepare button.

1) Make sure that the Ready to Initiate Calibration Procedure button is shown.

2) Under Aircraft Status, make sure that the Current Satellite 'xxx' (Recommended) is shown.

3) Under Aircraft Status, make sure that the 'Latitude and True Heading' is shown.

4) Under Aircraft Status, make sure that the IRS Status as OK is shown.

5) Make sure that a previous calibration is shown on Calibration status.

6) Make sure data was received into the Ka-band Aircraft Network Data Unit (KANDU) on Calibration status.

7) Make sure that the Initiate button is Blue.

(d) On the Calibrate Antenna Alignment screen, select the Initiate button.

1) Make sure that the Calibration in Progress bar is 100%.

SUBTASK 44-35-28-850-002

(8) On the Commanded Test left-hand panel, select the Reset AES button.

(a) Make sure that the Reset AES screen is shown.

SUBTASK 44-35-28-850-003

(9) On the Reset AES screen, select the Reset AES button.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the SATCOM is reset.

NOTE: The SATCOM system to initialize and indicate in Network in approximately 10 minutes.

NOTE: If for some reason the Calibration procedure fails, repeat this procedure. This may require several attempts to finalize and confirm the offsets.

SUBTASK 44-35-28-210-006

(10) On the Home page, push the SATCOM button.

(a) Make sure that the SATCOM page is shown.


NOTE: The Network Status shows “In Network”.

SUBTASK 44-35-28-850-007

(11) On the overhead panel P5-99, BROADBAND CONTROL PANEL, set the switch to OFF.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

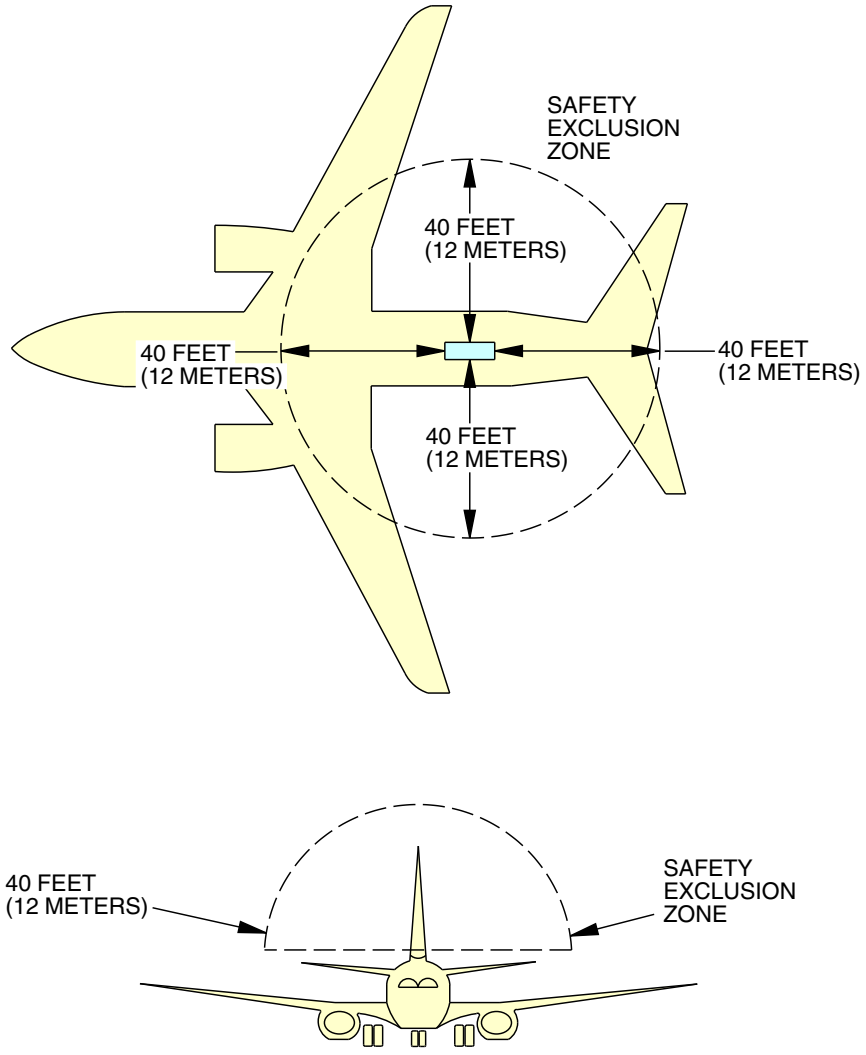

3082038 S0000837734_V1

RF Safety Exclusion Zone
Figure 201/44-35-28-990-804

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-28-820-802

3. Jetwave Manual Antenna Steering

A. General

(1) This task has instructions to manual steer the antenna.

B. References

Reference	Title
44-35-00-860-807	Log into the Maintenance Portal (P/B 201)

C. Jetwave Manual Antenna Steering

SUBTASK 44-35-28-860-007

(1) Do this task: Log into the Maintenance Portal, TASK 44-35-00-860-807.

(a) Make sure that the SATCOM summary indicator is green.

SUBTASK 44-35-28-210-003

(2) On the Home screen, select the SATCOM button.

(a) Make sure that the SATCOM screen is shown.

NOTE: The System Status tab is selected by default.

SUBTASK 44-35-28-210-004

(3) On the JetWave maintenance login screen, select the JetWave GUI button.

(a) Make sure that the JetWave GUI Login screen is shown.

SUBTASK 44-35-28-850-004

(4) Enter the applicable Username and password, push the Login button.

(a) Enter the applicable username and password.

1) Make sure that the Jetwave Access Center screen is shown.

SUBTASK 44-35-28-820-003

(5) On the Commanded Test left-hand panel, select the Manual Antenna Steering button.

(a) Make sure that the Manual Antenna Steering screen is shown.

NOTE: There are two ways to manually steer the antenna. One is by manually entering offset values and the other is to use the arrow keys to set the desired angle.

(b) To steer the antenna by manually entering offset values, do the steps:

1) Enter the azimuth angle.

2) Enter the elevation angle.

(c) To steer the antenna by using the arrow keys, do the steps:

1) Use the arrow keys to set the azimuth and elevation angles.

2) Push the Allow button.

NOTE: This will populate the Enter Azimuth Angle and Enter Elevation Angle fields.

(d) To send the commanded position to the antenna, push the Set to Manual Steering button.

(e) On the Left-hand panel, under Commanded Test, select Calibrate antenna alignment.

1) Make sure that the Calibrate Antenna Alignment screen is shown.

(f) Make sure that the Current Calibration Status antenna moved to the commanded position.

NOTE: In order for the Ka-band system to return to normal operation mode, a system reset is required after manually steering the antenna.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-28-210-005

(6) On the Commanded Test left-hand panel, select the Reset AES button.

(a) Make sure that the Reset AES screen is shown.

SUBTASK 44-35-28-850-005

(7) On the Reset AES screen, select the Reset AES button.

(a) Make sure that the SATCOM is reset.

NOTE: The SATCOM system to initialize and indicate in Network in approximately 10 minutes.

NOTE: If for some reason the Calibration procedure fails, repeat this procedure. This may require several attempts to finalize and confirm the offsets.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

FUSELAGE MOUNTED ANTENNA - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Fuselage Mounted Antenna Removal

(2) Fuselage Mounted Antenna Installation.

TASK 44-35-28-000-801

2. Fuselage Mounted Antenna Removal

(Figure 401)

A. General

(1) This task has instructions to remove the fuselage mounted antenna from the adapter plate assembly.

B. References

Reference	Title
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)
53-54-00-000-801	Broadband Radome Removal (P/B 401)

C. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

D. Prepare for the Removal

SUBTASK 44-35-28-860-001

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	8	C04073	BROADBAND 1

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	8	C04073	BROADBAND 1 (INOP)

PTF ALL

SUBTASK 44-35-28-020-001

(2) To get access to the fuselage mounted antenna [1], remove the broadband radome (TASK 53-54-00-000-801).

SUBTASK 44-35-28-910-001

WARNING BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

CAUTION DO A VISUAL INSPECTION FOR CORROSION OR DAMAGE OF THE LIFTING LUG/ADAPTOR BEFORE YOU LIFT THE ANTENNA. IF THE LIFTING LUG/ADAPTOR HAS CORROSION OR IS DAMAGED, IT CAN FAIL AND CAUSE DAMAGE TO THE AIRPLANE OR EQUIPMENT.

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(3) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

E. Fuselage Mounted Antenna Removal

SUBTASK 44-35-28-020-002

(1) Remove the non-metallic channel bracket [10]:

(a) Remove the bolts [11] and washers [12] from the non-metallic channel bracket [10].

(b) Carefully, pull the non-metallic channel bracket [10] from the adapter plate assembly.

SUBTASK 44-35-28-020-003

(2) Remove the screws [8] and clamps [9] from the adapter plate assembly.

SUBTASK 44-35-28-020-006

(3) Disconnect the P1 Connector [15], P2 Connector [16], and P3 Connector [17] from the hydra cable assembly.

SUBTASK 44-35-28-020-004

CAUTION MAKE SURE BEFORE YOU REMOVE THE FUSELAGE INSTALLED ANTENNA, BEFORE YOU REMOVE THE WAVEGUIDE AND RIGID COAX CABLE. IF YOU DO NOT OBEY, DAMAGE TO THE EQUIPMENT CAN OCCUR.

(4) To disconnect the waveguide [13] from the fuselage mounted antenna [1], do these steps:

(a) Remove the waveguide [13] from the fuselage mounted antenna [1].

(b) Remove the waveguide [13] from the Ka-band Radio Frequency Unit (KRFU) connector J5.

(c) Remove the O-ring.

(d) Remove the waveguide [13].

(e) Install protective covers on the connectors.

SUBTASK 44-35-28-020-005

CAUTION MAKE SURE BEFORE YOU REMOVE THE FUSELAGE INSTALLED ANTENNA, BEFORE YOU REMOVE THE WAVEGUIDE AND RIGID COAX CABLE. IF YOU DO NOT OBEY, DAMAGE TO THE EQUIPMENT CAN OCCUR.

(5) To disconnect the semi-rigid coax [14] from the fuselage mounted antenna [1], do these steps:

(a) Disconnect the semi-rigid coax [14] from the fuselage mounted antenna [1].

(b) Disconnect the semi-rigid coax [14] from the KRFU connector J4.

(c) Install protective covers to the connectors.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-28-020-007

CAUTION

DO NOT ROTATE ANTENNA APERTURE. DAMAGE TO THE ANTENNA CAN OCCUR.

(6) Remove the fuselage mounted antenna [1]:

NOTE: To remove the fuselage mounted antenna use two persons.


(a) Disconnect the screw [4], washer [5], jumper assembly [6], and washer [7] from the antenna base.

(b) Remove the bolts [2] and washers [3] from the fuselage mounted antenna [1].

(c) Carefully, pull the fuselage mounted antenna [1] from the adapter plate assembly.

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

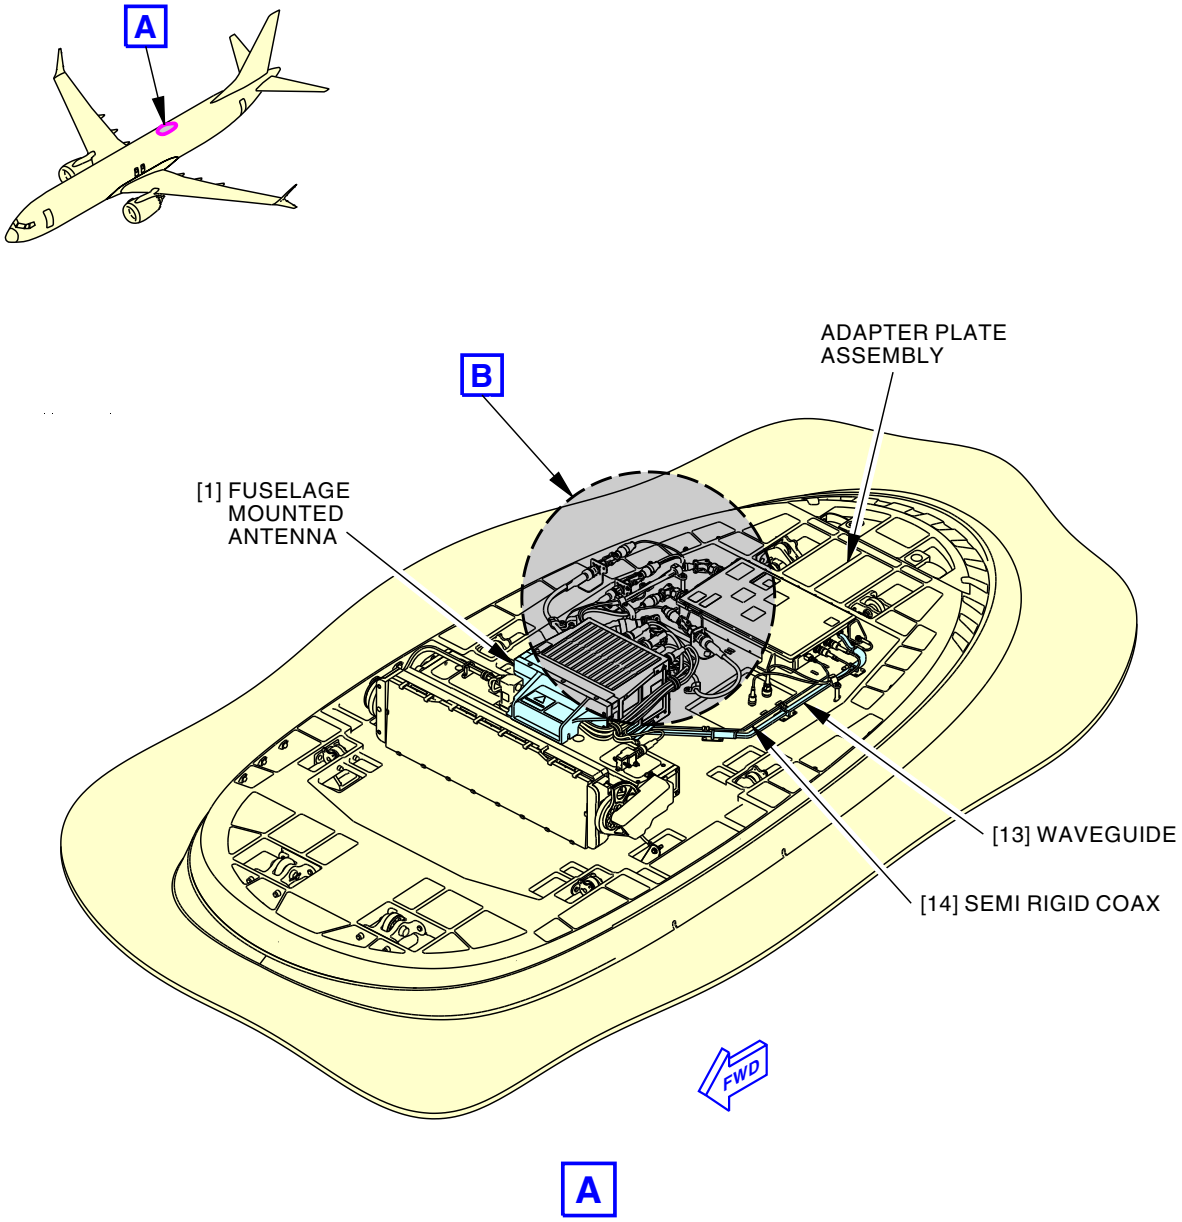

2820153 S0000651776_V1

Fuselage Mounted Antenna Installation
Figure 401/44-35-28-990-801 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

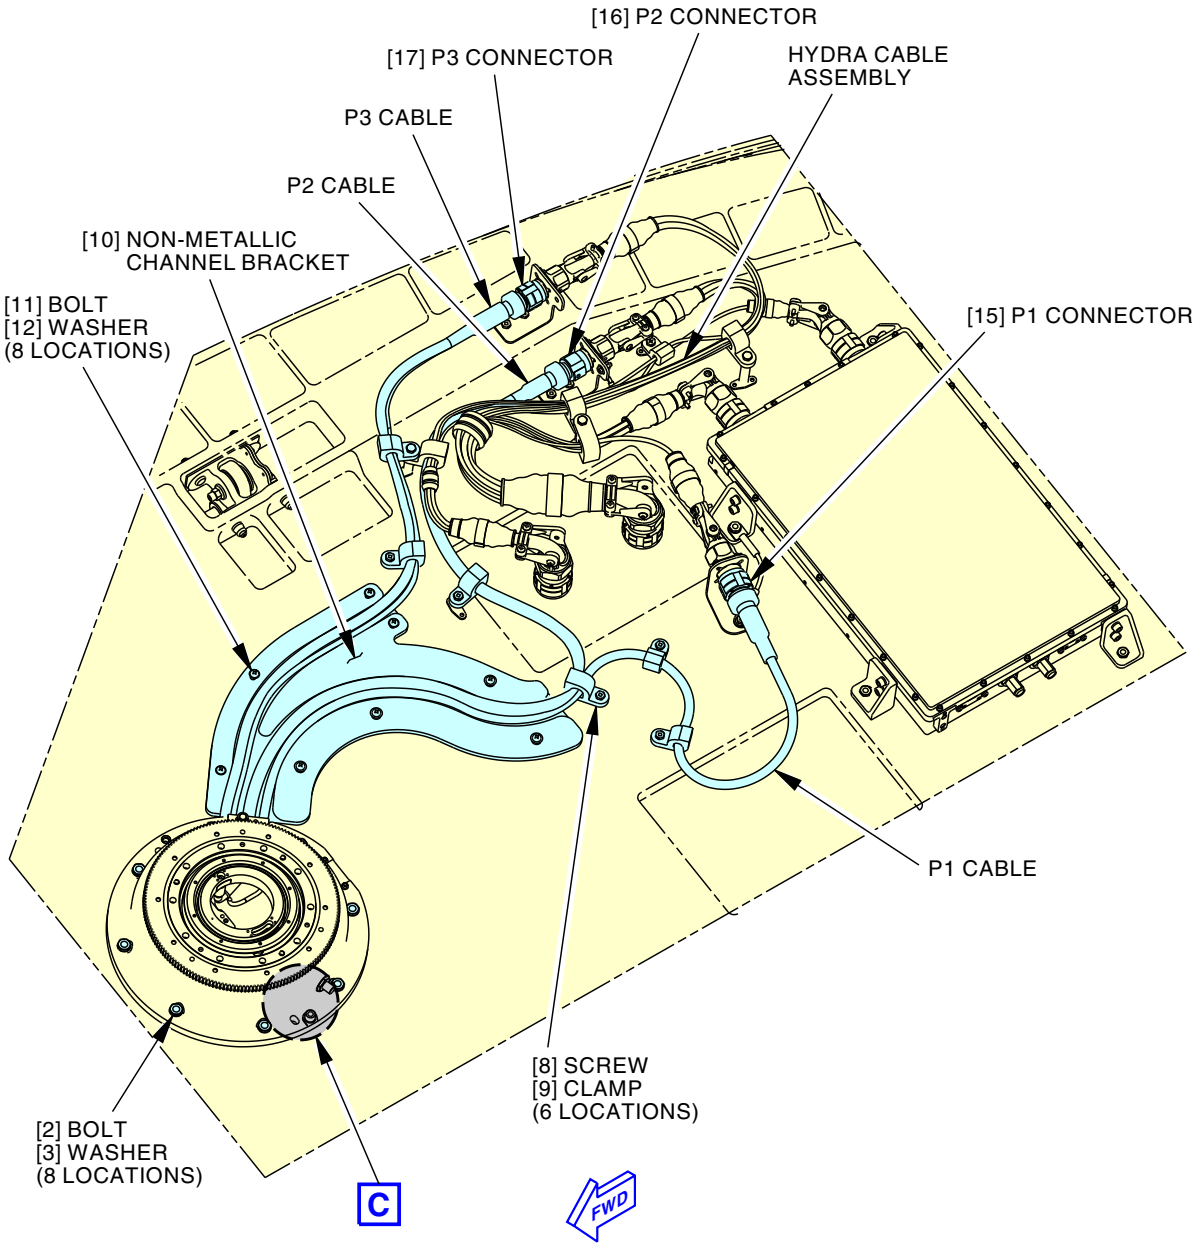


(FUSELAGE MOUNTED ANTENNA NOT SHOWN)

B

2820229 S0000651778_V1

Fuselage Mounted Antenna Installation
Figure 401/44-35-28-990-801 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

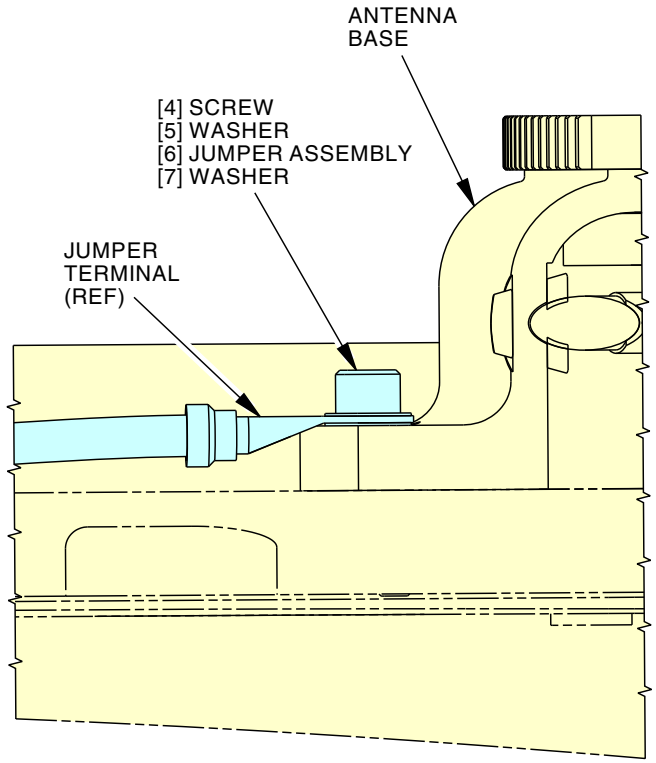

(VIEW IN THE FORWARD DIRECTION)

C 1

1 INSTALL JUMPER TERMINAL FACE DOWN TO AVOID ANTENNA SWEEP

2820405 S0000651779_V1

Fuselage Mounted Antenna Installation
Figure 401/44-35-28-990-801 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-28-400-801

3. Fuselage Mounted Antenna Installation

(Figure 401)

A. General

(1) This task has instructions to install the fuselage mounted antenna to the adapter plate assembly.

B. References

Reference	Title
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
44-35-00-470-810	Data Load SATCOM LRUs using the AIT Flight Simulyzer Software (P/B 201)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-820-801	Jetwave MODMAN to KRFU Coax Cable Calibration (P/B 201)
44-35-00-860-812	Check SATCOM Information and Change the Data Load Discrete Status (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)
44-35-28-820-801	Jetwave Antenna Calibration (P/B 201)
53-54-00-400-801	Broadband Radome Installation (P/B 401)
53-54-00-400-802	Adapter Plate Assembly Installation (P/B 401)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left
242	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Right

E. Prepare for the Installation

SUBTASK 44-35-28-420-001

(1) If it is necessary, install the adapter plate assembly (TASK 53-54-00-400-802).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-28-910-002

WARNING BE CAREFUL WHEN YOU MOVE THE COMPONENT. THE COMPONENT IS HEAVY. INJURIES TO PERSONS CAN OCCUR.

CAUTION DO A VISUAL INSPECTION FOR CORROSION OR DAMAGE OF THE LIFTING LUG/ADAPTOR BEFORE YOU LIFT THE ANTENNA. IF THE LIFTING LUG/ADAPTOR HAS CORROSION OR IS DAMAGED, IT CAN FAIL AND CAUSE DAMAGE TO THE AIRPLANE OR EQUIPMENT.

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(2) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

F. Fuselage Mounted Antenna Installation

SUBTASK 44-35-28-420-002

CAUTION DO NOT ROTATE ANTENNA APERTURE. DAMAGE TO THE ANTENNA CAN OCCUR.

(1) Install the fuselage mounted antenna [1]:

NOTE: To install the fuselage mounted antenna use two persons.

(a) Carefully, put the fuselage mounted antenna [1] to the adapter plate assembly.

(b) Install the bolts [2] and washers [3] to the fuselage mounted antenna [1].

(c) Connect the screw [4], washer [5], jumper assembly [6], and washer [7] to the antenna base.

1) Make sure that the jumper terminal is face down.

NOTE: The face down jumper terminal is to avoid antenna sweep.

(d) Measure the resistance between the jumper assembly [6] and the adapter plate assembly with an intrinsically safe approved bonding meter, COM-1550 (SWPM 20-20-00, paragraph 21).

1) Make sure that the resistance is 1.0 milliohms or less.

SUBTASK 44-35-28-420-003

(2) Connect the P1 Connector [15], P2 Connector [16], and P3 Connector [17] to the hydra cable assembly.

(a) Make sure that the red band on the connector is not shown.

SUBTASK 44-35-28-420-005

(3) To connect the waveguide [13] to the fuselage mounted antenna [1], do these steps:

NOTE: The minimum allowable bend radius to the center line for the flexible waveguide is 1.0 in. (25.4 mm) in the (bend along the long axis of the waveguide and 0.5 in. (12.7 mm) in the bend along the short axis of the waveguide. The minimum allowable bend radius for the coax cable is 0.25 in. (6.35 mm).

(a) Remove protective covers from the connectors.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Loosely connect the waveguide [13] to the fuselage mounted antenna [1] connector J5 waveguide flange.

(c) Examine the connectors.

(d) Examine the O-ring.

(e) Loosely connect the waveguide [13] to the Ka-band Radio Frequency Unit (KRFU) adapter connector J3.

(f) Make sure the O-ring is installed in the KRFU TX waveguide flange.

(g) Tighten the waveguide [13] fasteners 5.4 in-lb (0.6 N·m) to 6.0 in-lb (0.7 N·m).

SUBTASK 44-35-28-420-004

(4) To connect the semi-rigid coax [14] to the fuselage mounted antenna [1], do these steps:

(a) Remove protective covers from the connectors.

(b) Loosely connect the semi-rigid coax [14] cable to the fuselage mounted antenna [1].

(c) Remove the protective covers from the semi-rigid coax [14] cable and KRFU adapter.

(d) Examine the connectors.

(e) Loosely connect the semi-rigid coax [14] cable to the KRFU adapter.

(f) Tighten the semi-rigid coax [14] cable connectors.

SUBTASK 44-35-28-420-006

(5) Install the screws [8] and clamps [9] to the adapter plate assembly.

SUBTASK 44-35-28-420-007

(6) Install the non-metallic channel bracket [10]:

(a) Carefully, put the non-metallic channel bracket [10] to the adapter plate assembly.

(b) Install the bolts [11] and washers [12] to the non-metallic channel bracket [10].

G. Fuselage Mounted Antenna Installation Test

SUBTASK 44-35-28-860-002

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	8	C04073	BROADBAND 1

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	8	C04073	BROADBAND 1 (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-28-860-004

(2) Do this task: (Check SATCOM Information and Change the Data Load Discrete Status, TASK 44-35-00-860-812).

SUBTASK 44-35-28-860-005

(3) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

SUBTASK 44-35-28-470-001

(4) If the fuselage mounted antenna fails conformity, do this task: Data Load SATCOM LRUs using the AIT Flight Simulyzer Software, TASK 44-35-00-470-810.

SUBTASK 44-35-28-810-001

(5) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there is no faults.

SUBTASK 44-35-28-820-004

(6) Do this task: Jetwave MODMAN to KRFU Coax Cable Calibration, TASK 44-35-00-820-801.

SUBTASK 44-35-28-820-005

(7) Do this task: Jetwave Antenna Calibration, TASK 44-35-28-820-801.

SUBTASK 44-35-28-730-001

(8) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807

PTF ALL

H. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-28-420-010

(1) Install the broadband radome (TASK 53-54-00-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

KA/KU-BAND AIRCRAFT NETWORK UNIT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Ka/Ku-band Aircraft Network Unit Removal

(2) Ka/Ku-band Aircraft Network Unit Installation.

TASK 44-35-30-000-801

2. Ka/Ku-band Aircraft Network Unit Removal

(Figure 401)

A. General

(1) This task has instructions to remove the Ka/Ku-band aircraft network unit.

B. References

Reference	Title
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)
25-21-45-000-801	Main Ceiling Panel - Removal (P/B 401)

C. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left

D. Prepare for the Removal

SUBTASK 44-35-30-860-001

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	8	C04073	BROADBAND 1

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	8	C04073	BROADBAND 1 (INOP)

PTF ALL

SUBTASK 44-35-30-010-001

(2) To get access to the Ka/Ku-band aircraft network unit, remove the applicable ceiling panel (TASK 25-21-45-000-801).

SUBTASK 44-35-30-910-001

CAUTION

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(3) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Ka-band Aircraft Network Unit Removal

SUBTASK 44-35-30-020-001

(1) Remove the Ka-band aircraft network unit [1]:

(a) Disconnect the J1 Connector [8], J2 Connector [9], J3 Connector [10], and J4 Connector [11] from the Ka-band aircraft network unit [1].


(b) Disconnect the screw [4], washers [5], and bonding jumper [6] from the Ka-band aircraft network unit [1].

(c) Remove the screws [2] and washers [3] from the Ka-band aircraft network unit [1].

(d) Carefully, pull the Ka-band aircraft network unit [1] from the mounting tray.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

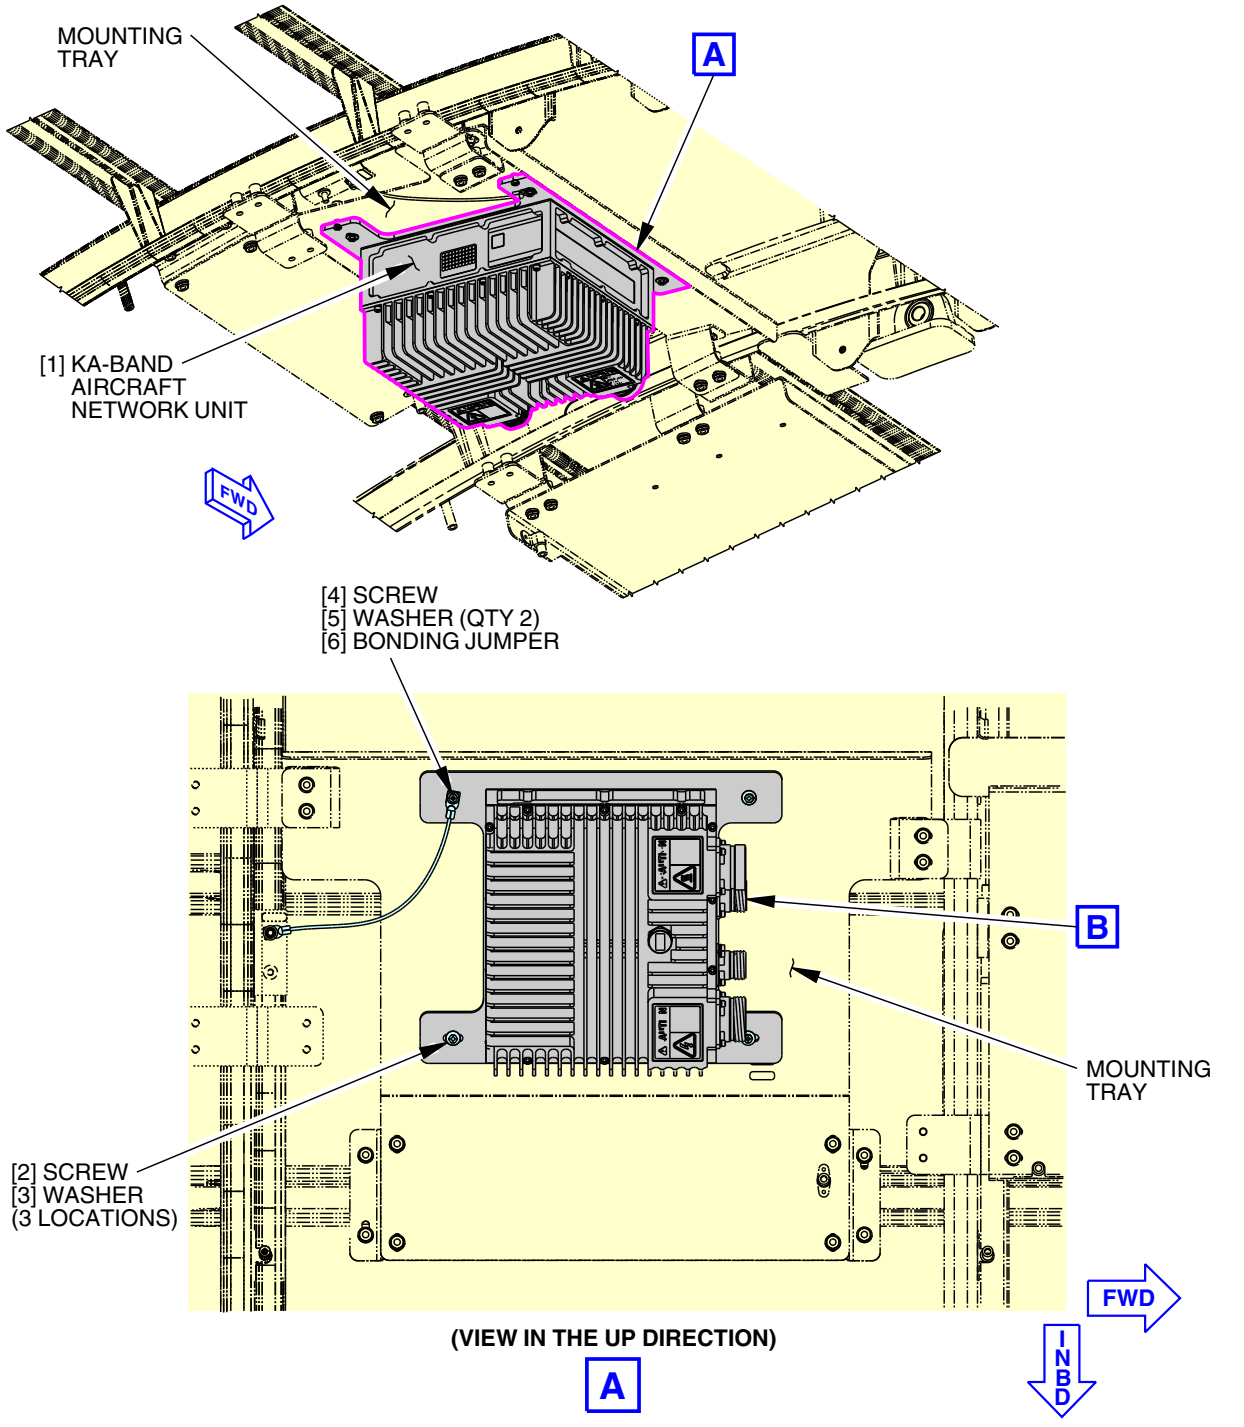

Ka-band Aircraft Network Unit Installation
Figure 401/44-35-30-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

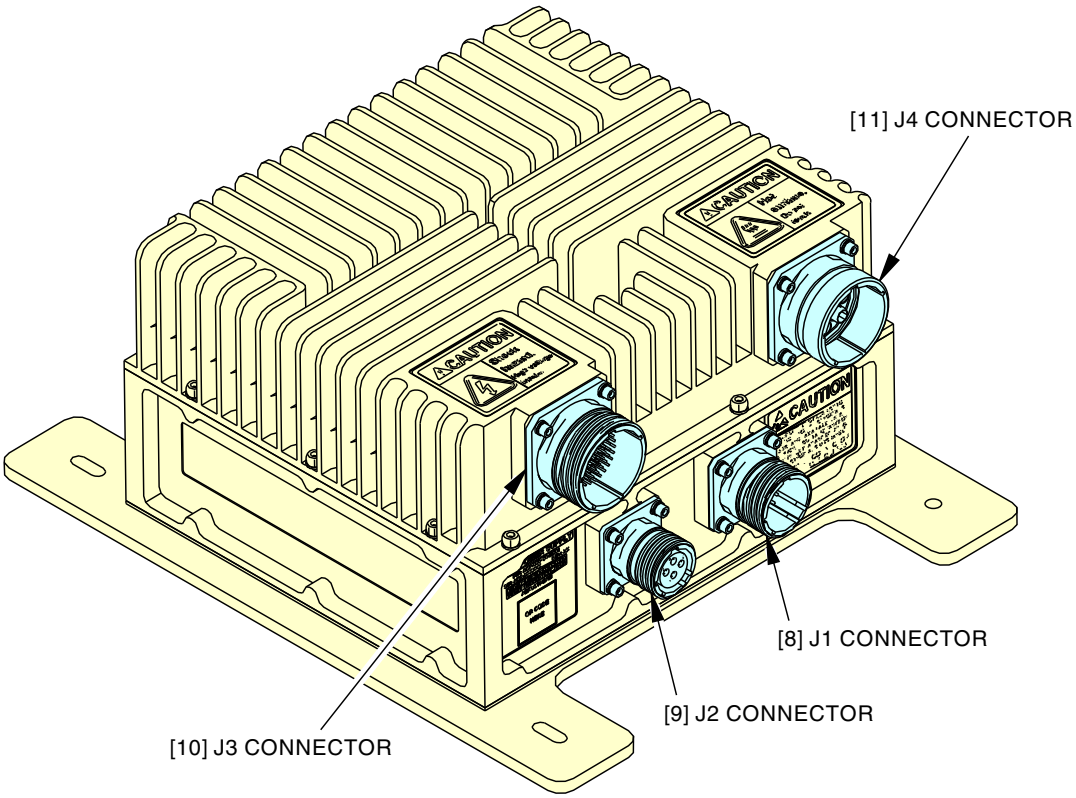

B

2873524 S0000679260_V1

Ka-band Aircraft Network Unit Installation
Figure 401/44-35-30-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-30-400-801

3. Ka/Ku-band Aircraft Network Unit Installation

(Figure 401)

A. General

(1) This task has instructions to install the Ka/Ku-band aircraft network unit.

B. References

Reference	Title
20-10-34-110-802	Clean Bare, Clad, or Plated Metal with Solvent (P/B 701)
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
25-21-45-400-801	Main Ceiling Panel - Installation (P/B 401)
44-35-00-470-810	Data Load SATCOM LRUs using the AIT Flight Simulyzer Software (P/B 201)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-860-812	Check SATCOM Information and Change the Data Load Discrete Status (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)
SWPM 20-20-00 Paragraph 21	MAXIMUM PERMITTED RESISTANCE OF ELECTRICAL BONDS
SWPM 20-20-00, Paragraph 2	CLEANING OF FAY SURFACES

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Ka-band aircraft network unit	44-35-30-01-045	PTF ALL

E. Location Zones

Zone	Area
241	Aft Passenger Compartment - Station 663.75 to Aft Pressure Bulkhead - Left

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Ka-band Aircraft Network Unit Installation

SUBTASK 44-35-30-910-002

CAUTION DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(1) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

SUBTASK 44-35-30-100-003

(2) Use Cleaning Procedure 5 to clean the mating surfaces on the Ka-band aircraft network unit [1], bonding jumper [6], washers [5], and screw [4] (SWPM 20-20-00, Paragraph 2, TASK 20-10-34-110-802):

SUBTASK 44-35-30-420-001

(3) Install the Ka-band aircraft network unit [1]:

(a) Carefully, put the Ka-band aircraft network unit [1] to the mounting tray.

(b) Install the screws [2] and washers [3] to the Ka-band aircraft network unit [1].

(c) Connect the screw [4], washers [5], and bonding jumper [6] to the Ka-band aircraft network unit [1].

(d) Measure the resistance between the bonding jumper [6] and the mounting tray with an intrinsically safe approved bonding meter, COM-1550 (SWPM 20-20-00 Paragraph 21).

1) Make sure that the resistance is 1.0 milliohms or less.

(e) Connect the J1 Connector [8], J2 Connector [9], J3 Connector [10], and J4 Connector [11] to the Ka-band aircraft network unit [1].

G. Ka/Ku-band AIrcraft Network Unit Installation Test

SUBTASK 44-35-30-860-002

(1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	8	C04073	BROADBAND 1

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	8	C04073	BROADBAND 1 (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-30-860-004

(2) Do this task: Check SATCOM Information and Change the Data Load Discrete Status, TASK 44-35-00-860-812.

SUBTASK 44-35-30-860-005

(3) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL POST SB 737-44-1020 (Continued)

SUBTASK 44-35-30-470-001

(4) If the Ka-band Aircraft Network Data Unit (KANDU) fails conformity, do this task: Data Load SATCOM LRUs using the AIT Flight Simulyzer Software, TASK 44-35-00-470-810.

SUBTASK 44-35-30-810-001

(5) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there are no faults.

SUBTASK 44-35-30-730-001

(6) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807.

PTF ALL

H. Put the Airplane Back to Its Usual Condition

SUBTASK 44-35-30-410-002

(1) Install the applicable access panel (TASK 25-21-45-400-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

MODMAN CONTROL PROCESSOR UNIT - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) MODMAN Control Processor Unit Removal

(2) MODMAN Control Processor Unit Intstallation

TASK 44-35-34-000-801

2. MODMAN Control Processor Unit Removal

(Figure 401)

A. General

(1) This task has instructions to remove the MODMAN control processor unit from the equipment rack.

B. References

Reference	Title
20-10-07-000-801	E/E Box Removal (P/B 401)
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)

C. Location Zones

Zone	Area
146	Aft Cargo Compartment Equipment Bay - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. Prepare for the Removal

SUBTASK 44-35-34-860-001

(1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	9	C04074	BROADBAND 2

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	9	C04074	BROADBAND 2 (INOP)

PTF ALL

SUBTASK 44-35-34-010-001

(2) Open this access panel:

Number	Name/Location
822	Aft Cargo Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 44-35-34-860-002

(3) Open these circuit breakers and install safety tags:

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1020			
---	---	C04084	BROADBAND MAINTENANCE 2
PTF ALL POST SB 737-44-1020			
---	---	C04084	MODMAN

PTF ALL

SUBTASK 44-35-34-910-001

CAUTION

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(4) Do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

SUBTASK 44-35-34-420-001


CAUTION


DO NOT TOUCH THE COMPONENT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENT.

(5) Remove the MODMAN control processor unit [1] (TASK 20-10-07-000-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

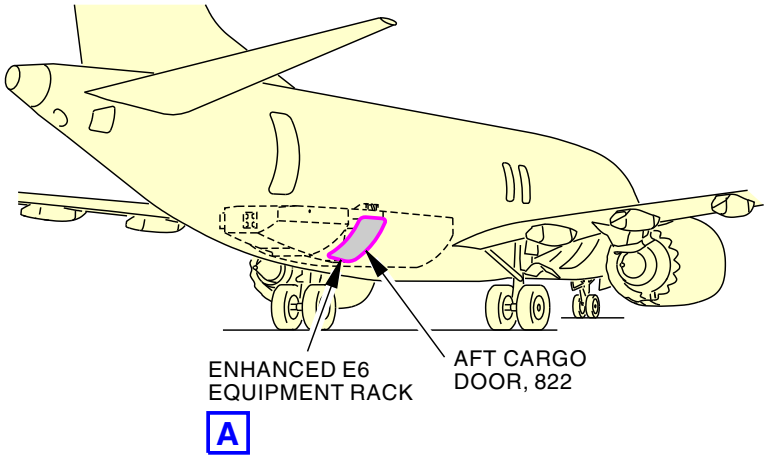

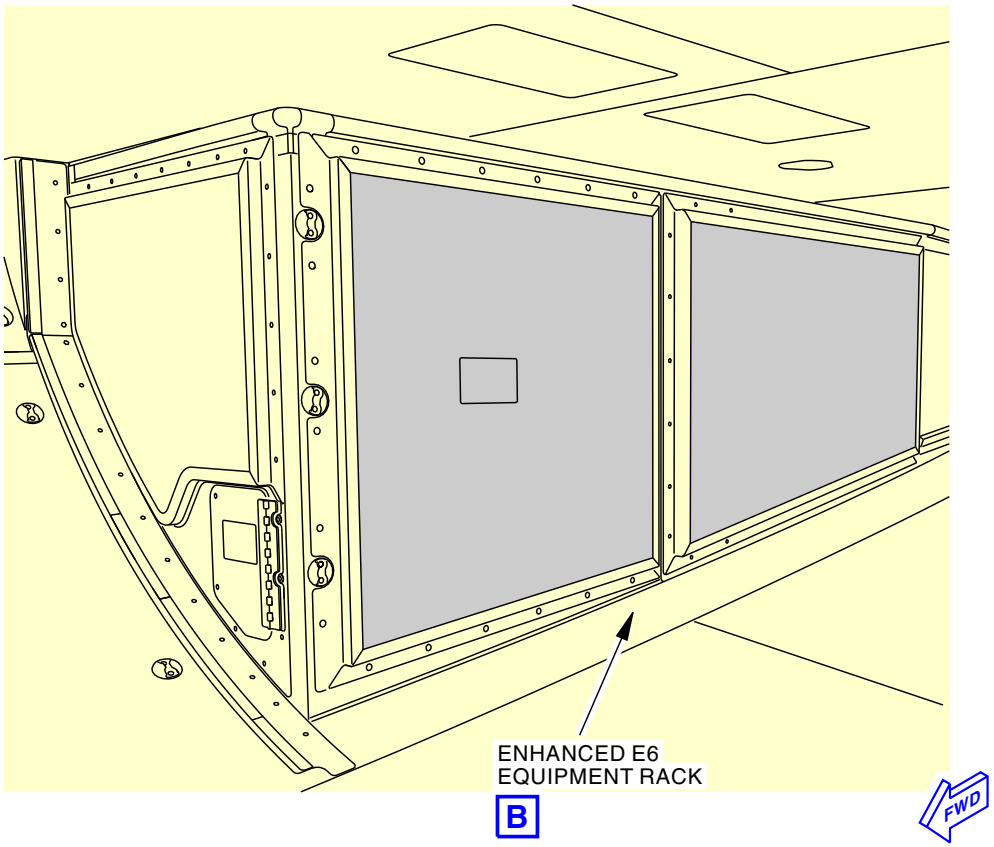


ENHANCED E6 EQUIPMENT RACK

A

2545819 S0000604955_V2

MODMAN Control Processor Unit Installation
Figure 401/44-35-34-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

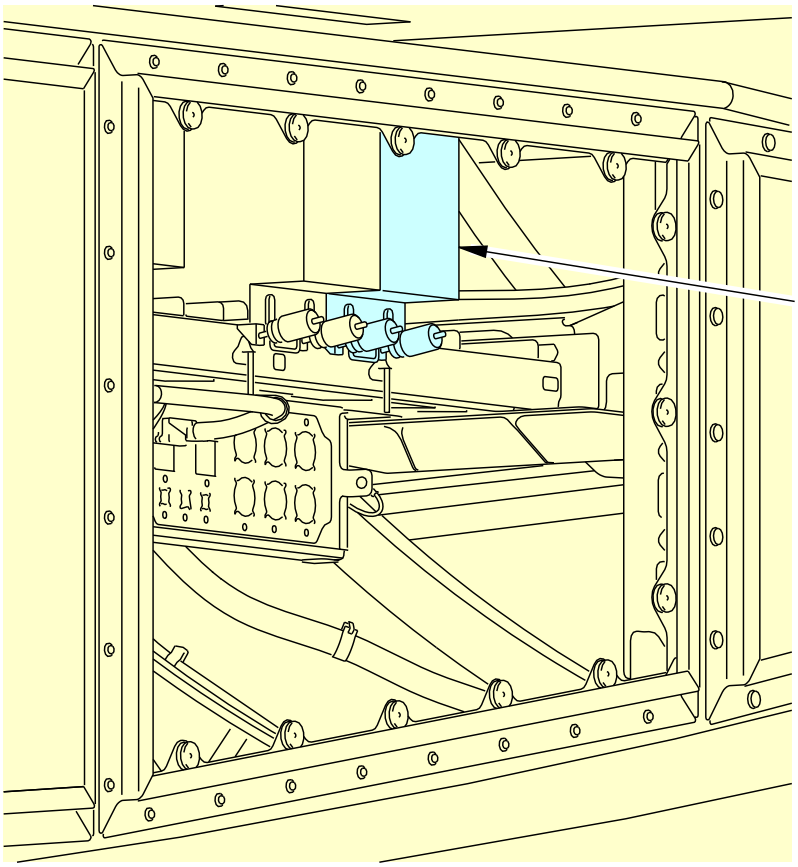

ENHANCED E6 EQUIPMENT RACK (ACCESS DOOR REMOVED)

B

2819103 S0000651206_V4

MODMAN Control Processor Unit Installation
Figure 401/44-35-34-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 44-35-34-400-801

3. MODMAN Control Processor Unit Installation

(Figure 401)

A. General

(1) This task has instructions to install the MODMAN control processor unit to the equipment rack.

B. References

Reference	Title
20-10-07-400-801	E/E Box Installation (P/B 401)
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
44-35-00-470-810	Data Load SATCOM LRUs using the AIT Flight Simulyzer Software (P/B 201)
44-35-00-730-807	Broadband Communication System - System Test (P/B 501)
44-35-00-800-801	View Line Replaceable Unit (LRU) Faults (P/B 201)
44-35-00-860-812	Check SATCOM Information and Change the Data Load Discrete Status (P/B 201)
44-35-00-860-813	Run Conformity and Download Report (P/B 201)

C. Location Zones

Zone	Area
146	Aft Cargo Compartment Equipment Bay - Right

D. Access Panels

Number	Name/Location
822	Aft Cargo Door

E. MODMAN Control Processor Unit Installation

SUBTASK 44-35-34-910-002

CAUTION

DO NOT TOUCH THE CONNECTOR PINS, OR OTHER CONDUCTORS. IF YOU TOUCH THESE CONDUCTORS, ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENTS.

(1) Do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

SUBTASK 44-35-34-420-002

CAUTION

DO NOT TOUCH THE COMPONENT BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE COMPONENT.

(2) Install the MODMAN control processor unit [1] (TASK 20-10-07-400-801).

F. MODMAN Control Processor Unit Installation Test

SUBTASK 44-35-34-860-003

(1) Remove the safety tags and close these circuit breakers:

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1020			
---	---	C04084	BROADBAND MAINTENANCE 2

ECCN 9E991 BOEING PROPRIETARY - See title page for details

PTF ALL PRE SB 737-44-1020 (Continued)

(Continued)

Aft Equip Center Misc Relay & Circuit Breaker Panel, J11

Row	Col	Number	Name
PTF ALL POST SB 737-44-1020			
---	---	C04084	MODMAN

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL POST SB 737-44-1021			
A	9	C04074	BROADBAND 2

PTF ALL

This circuit breaker is inoperative and should remain open:

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
PTF ALL PRE SB 737-44-1021			
A	9	C04074	BROADBAND 2 (INOP)

PTF ALL POST SB 737-44-1020

SUBTASK 44-35-34-860-005

(2) Do this task: Check SATCOM Information and Change the Data Load Discrete Status, TASK 44-35-00-860-812.

SUBTASK 44-35-34-860-006

(3) Do this task: Run Conformity and Download Report, TASK 44-35-00-860-813.

SUBTASK 44-35-34-470-001

(4) If the MODMAN control processor unit [1] fails conformity, do this task: Data Load SATCOM LRUs using the AIT Flight Simulyzer Software, TASK 44-35-00-470-810.

SUBTASK 44-35-34-810-001

(5) Do this task: View Line Replaceable Unit (LRU) Faults, TASK 44-35-00-800-801.

(a) Make sure that there are no faults.

SUBTASK 44-35-34-730-001

(6) Do this task: Broadband Communication System - System Test, TASK 44-35-00-730-807.

PTF ALL

G. Put the Airplane Back to its Usual Condition

SUBTASK 44-35-34-410-001

(1) Close this access panel:

Number	Name/Location
822	Aft Cargo Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details