CHAPTER

55

STABILIZERS

CHAPTER 55
STABILIZERS

Subject/Page	Date	COC
55-EFFECTIVE PAGES		
1 thru 3	Sep 15/2026	
4	BLANK	
55-CONTENTS		
1	May 15/2024	
2	May 15/2024	
3	May 15/2024	
4	May 15/2024	
5	May 15/2024	
O 6	Sep 15/2026	
O 7	Sep 15/2026	
O 8	Sep 15/2026	
O 9	Sep 15/2026	
O 10	Sep 15/2026	
11	Jan 15/2025	
12	May 15/2026	
13	May 15/2024	
14	May 15/2024	
15	May 15/2026	
16	BLANK	
55-00-01		
601	May 15/2024	
602	May 15/2024	
55-05-02		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
207	May 15/2024	
208	May 15/2024	
209	May 15/2024	
210	May 15/2024	
211	May 15/2024	
212	May 15/2024	
213	May 15/2024	
214	May 15/2024	
55-05-02 (cont)		
215	May 15/2024	
216	May 15/2024	
217	May 15/2024	
218	May 15/2024	
219	May 15/2024	
220	May 15/2024	
221	May 15/2024	
R 222	Sep 15/2026	
R 223	Sep 15/2026	
R 224	Sep 15/2026	
O 225	Sep 15/2026	
O 226	Sep 15/2026	
O 227	Sep 15/2026	
O 228	Sep 15/2026	
R 229	Sep 15/2026	
R 230	Sep 15/2026	
O 231	Sep 15/2026	
O 232	Sep 15/2026	
O 233	Sep 15/2026	
O 234	Sep 15/2026	
O 235	Sep 15/2026	
R 236	Sep 15/2026	
R 237	Sep 15/2026	
R 238	Sep 15/2026	
O 239	Sep 15/2026	
O 240	Sep 15/2026	
O 241	Sep 15/2026	
O 242	Sep 15/2026	
O 243	Sep 15/2026	
R 244	Sep 15/2026	
A 245	Sep 15/2026	
A 246	Sep 15/2026	
A 247	Sep 15/2026	
A 248	Sep 15/2026	
A 249	Sep 15/2026	
A 250	Sep 15/2026	
55-05-02 (cont)		
A 251	Sep 15/2026	
A 252	Sep 15/2026	
A 253	Sep 15/2026	
A 254	Sep 15/2026	
A 255	Sep 15/2026	
A 256	Sep 15/2026	
A 257	Sep 15/2026	
A 258	Sep 15/2026	
A 259	Sep 15/2026	
A 260	Sep 15/2026	
A 261	Sep 15/2026	
A 262	Sep 15/2026	
A 263	Sep 15/2026	
A 264	Sep 15/2026	
A 265	Sep 15/2026	
A 266	Sep 15/2026	
55-05-03		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
R 206	Sep 15/2026	
207	Jan 15/2025	
208	Jan 15/2025	
209	May 15/2024	
210	May 15/2024	
R 211	Sep 15/2026	
212	Jan 15/2025	
213	Jan 15/2025	
214	Jan 15/2025	
215	Jan 15/2025	
216	Jan 15/2026	
217	Jan 15/2025	
218	Jan 15/2026	
219	May 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

55-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

Subject/Page	Date	COC
55-05-03 (cont)		
220	May 15/2026	
221	Jan 15/2025	
222	Jan 15/2025	
223	May 15/2026	
224	May 15/2026	
225	Jan 15/2025	
226	Jan 15/2025	
227	Jan 15/2025	
228	Jan 15/2025	
229	Jan 15/2025	
230	Jan 15/2025	
R 231	Sep 15/2026	
232	May 15/2025	
233	May 15/2025	
234	Jan 15/2025	
235	Jan 15/2025	
R 236	Sep 15/2026	
237	May 15/2025	
238	May 15/2025	
239	Jan 15/2025	
240	Jan 15/2025	
241	May 15/2026	
242	May 15/2026	
243	May 15/2026	
244	Jan 15/2025	
245	Jan 15/2025	
246	Jan 15/2025	
247	Jan 15/2025	
248	Jan 15/2025	
249	Jan 15/2025	
250	Jan 15/2025	
251	May 15/2026	
252	May 15/2026	
253	May 15/2026	
254	Jan 15/2025	
255	Jan 15/2025	
55-05-03 (cont)		
256	Jan 15/2025	
257	Jan 15/2025	
258	Jan 15/2025	
259	Jan 15/2025	
260	Jan 15/2025	
261	Jan 15/2025	
262	Jan 15/2025	
263	Jan 15/2025	
264	Jan 15/2025	
265	Jan 15/2025	
266	Jan 15/2025	
267	Jan 15/2025	
268	Jan 15/2025	
269	Jan 15/2025	
270	Jan 15/2025	
R 271	Sep 15/2026	
272	Jan 15/2025	
273	Jan 15/2025	
R 274	Sep 15/2026	
275	Jan 15/2025	
276	Jan 15/2025	
277	Jan 15/2025	
278	Jan 15/2025	
279	Jan 15/2025	
280	Jan 15/2025	
R 281	Sep 15/2026	
R 282	Sep 15/2026	
O 283	Sep 15/2026	
R 284	Sep 15/2026	
285	May 15/2026	
286	May 15/2026	
287	May 15/2026	
288	May 15/2026	
289	May 15/2026	
R 290	Sep 15/2026	
O 291	Sep 15/2026	
55-05-03 (cont)		
292	May 15/2026	
293	May 15/2026	
294	May 15/2026	
295	May 15/2026	
296	May 15/2026	
297	May 15/2026	
R 298	Sep 15/2026	
O 298.1	Sep 15/2026	
298.2	May 15/2026	
298.3	May 15/2026	
298.4	May 15/2026	
298.5	May 15/2026	
298.6	May 15/2026	
298.7	May 15/2026	
298.8	May 15/2026	
298.9	May 15/2026	
298.10	May 15/2026	
298.11	May 15/2026	
298.12	BLANK	
55-10-00		
201	May 15/2024	
202	May 15/2024	
203	May 15/2024	
204	May 15/2024	
205	May 15/2024	
206	May 15/2024	
55-10-00		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2026	
405	May 15/2024	
406	BLANK	
55-10-01		
R 801	Sep 15/2026	
802	BLANK	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

55-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

Subject/Page	Date	COC
55-10-10		
401	Jan 15/2025	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	May 15/2024	
407	Jan 15/2025	
408	Jan 15/2025	
409	May 15/2024	
410	BLANK	
55-10-11		
401	May 15/2026	
402	May 15/2026	
403	May 15/2024	
R 404	Sep 15/2026	
O 405	Sep 15/2026	
O 406	Sep 15/2026	
O 407	Sep 15/2026	
408	BLANK	
55-30-00		
201	May 15/2024	
202	May 15/2024	
55-30-00		
R 401	Sep 15/2026	
402	May 15/2024	
403	Sep 15/2024	
404	Sep 15/2024	
405	May 15/2024	
406	May 15/2024	
407	May 15/2024	
408	May 15/2024	
409	May 15/2024	
410	May 15/2024	
411	May 15/2024	
R 412	Sep 15/2026	
413	Jan 15/2026	
414	Jan 15/2025	
55-30-00 (cont)		
415	Jan 15/2025	
416	Jan 15/2026	
417	Jan 15/2026	
418	BLANK	
55-30-00		
601	May 15/2024	
602	May 15/2024	
603	May 15/2024	
604	May 15/2024	
605	May 15/2024	
606	BLANK	
55-30-01		
R 601	Sep 15/2026	
O 602	Sep 15/2026	
603	May 15/2024	
604	May 15/2024	
55-32-11		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
R 406	Sep 15/2026	
407	May 15/2024	
408	BLANK	
55-33-11		
R 401	Sep 15/2026	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
R 406	Sep 15/2026	
R 407	Sep 15/2026	
O 408	Sep 15/2026	
R 409	Sep 15/2026	
O 410	Sep 15/2026	
55-33-21		
401	Jan 15/2026	
402	May 15/2024	
403	Jan 15/2025	
404	Jan 15/2026	
55-33-31		
401	May 15/2024	
402	May 15/2024	
403	May 15/2024	
404	May 15/2024	
405	May 15/2024	
406	BLANK	
55-35-01		
801	May 15/2026	
802	May 15/2026	
803	May 15/2026	
804	May 15/2026	
805	May 15/2026	
806	May 15/2026	
807	May 15/2026	
808	May 15/2026	
809	May 15/2026	
810	May 15/2026	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

55-EFFECTIVE PAGES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
RUDDER AND HORIZONTAL STABILIZERS - INSPECTION/CHECK	55-00-01		601	PTF ALL
Examine the Composite Flight Controls TASK 55-00-01-200-801			601	PTF ALL
STABILIZER - FATIGUE INSPECTIONS - MAINTENANCE PRACTICES	55-05-02		201	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD TASK 55-05-02-270-813			201	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD TASK 55-05-02-270-801			201	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD TASK 55-05-02-250-877			201	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD TASK 55-05-02-270-802			202	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PIVOT FITTING TASK 55-05-02-270-803			202	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PIVOT FITTING TASK 55-05-02-270-804			202	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST LINK FITTINGS TASK 55-05-02-270-805			203	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION JACKSCREW FITTINGS TASK 55-05-02-270-806			203	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-878			204	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-879			204	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-880			204	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-270-807			205	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-881			205	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-882			205	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-883			206	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-884			206	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TASK 55-05-02-250-885			207	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-886			207	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-270-808			207	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-270-809			208	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-887			208	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-888			209	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-889			209	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-891			209	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-892			210	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-893			210	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-901			211	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-270-812			211	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TASK 55-05-02-250-895			211	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD - WEB FLANGE TASK 55-05-02-250-896			212	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - REAR SPAR WEB TASK 55-05-02-250-897			212	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB TASK 55-05-02-250-898			213	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB TASK 55-05-02-250-899			213	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB TASK 55-05-02-250-900			213	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB TASK 55-05-02-270-811			214	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR SIDE-OF-BODY TASK 55-05-02-270-814			214	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TERMINAL FITTING TASK 55-05-02-270-815			215	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TERMINAL FITTING TASK 55-05-02-290-801			215	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR SIDE-OF-BODY TASK 55-05-02-230-803			216	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TERMINAL FITTING TASK 55-05-02-250-902			216	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TERMINAL FITTING TASK 55-05-02-250-903			217	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-904			217	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-905			218	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD, FORWARD FLANGE TASK 55-05-02-250-906			218	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD, FORWARD FLANGE TASK 55-05-02-250-907			219	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-908			219	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-909			219	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-910			220	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-911			220	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-912			221	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-913			221	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-250-914			221	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-211-814			222	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-250-915			225	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-250-916			225	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-250-917			225	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-250-918			226	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-250-919			226	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB TASK 55-05-02-250-920			226	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB TASK 55-05-02-250-921			227	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB TASK 55-05-02-250-922			227	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB TASK 55-05-02-250-923			228	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB TASK 55-05-02-250-924			228	PTF ALL
INTERNAL - DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD TASK 55-05-02-211-815			228	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR SIDE-OF-BODY TASK 55-05-02-230-804			231	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD TASK 55-05-02-250-925			231	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER -TRAILING EDGE TASK 55-05-02-250-926			231	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - TRAILING EDGE TASK 55-05-02-250-927			232	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER -TRAILING EDGE TASK 55-05-02-250-928			232	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - TRAILING EDGE TASK 55-05-02-250-929			233	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER TRAILING EDGE HINGE RIB TASK 55-05-02-250-930			233	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - TRAILING EDGE TASK 55-05-02-250-931			233	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER TRAILING EDGE TASK 55-05-02-250-932			234	PTF ALL
EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - UPPER INSPAR SKIN TASK 55-05-02-250-933			234	PTF ALL
EXTERNAL - DETAILED: HORIZONTAL STABILIZER - LOWER INSPAR SKIN TASK 55-05-02-211-816			235	PTF ALL
INTERNAL - DETAILED: HORIZONTAL STABILIZER CENTER SECTION FRONT SPAR UPPER CHORD TASK 55-05-02-211-817			237	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR LUGS TASK 55-05-02-270-816			239	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD TASK 55-05-02-270-817			239	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY AND THRUST BEAMS TASK 55-05-02-270-818			239	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY AND THRUST BEAMS TASK 55-05-02-250-934			240	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY AND THRUST BEAMS TASK 55-05-02-270-819			240	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS TASK 55-05-02-270-820			241	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS TASK 55-05-02-250-935			241	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS TASK 55-05-02-270-821			241	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAM INTERSECTION TASK 55-05-02-250-936			242	PTF ALL
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS TASK 55-05-02-270-822			242	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY BEAM CHORD TO WEB ATTACHMENT TASK 55-05-02-250-937			242	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR - HINGE FITTINGS TASK 55-05-02-250-938			243	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR - HINGE FITTING TASK 55-05-02-250-939			243	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR - HINGE FITTING TASK 55-05-02-250-940			243	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR - MAST FITTING ASSEMBLY TASK 55-05-02-250-941			244	PTF ALL
INTERNAL - GENERAL VISUAL: ELEVATOR - BALANCE HORN TASK 55-05-02-210-802			244	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR TAB - MAST ARM FITTING TASK 55-05-02-250-942			247	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR TAB - HINGE FITTINGS TASK 55-05-02-260-802			247	PTF ALL
INTERNAL - SPECIAL DETAILED: ELEVATOR - TAB CONTROL MECHANISM BRACKETS TASK 55-05-02-250-943			247	PTF ALL
INTERNAL - SPECIAL DETAILED: VERTICAL FIN - FRONT SPAR CHORD TASK 55-05-02-270-823			248	PTF ALL
EXTERNAL - SPECIAL DETAILED: VERTICAL FIN - REAR SPAR PRIMARY CHORD TASK 55-05-02-250-944			248	PTF ALL
EXTERNAL - SPECIAL DETAILED: VERTICAL FIN - REAR SPAR PRIMARY CHORD TASK 55-05-02-250-945			248	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - DETAILED: VERTICAL FIN REAR SPAR TERMINAL FITTING TASK 55-05-02-211-818			249	PTF ALL
INTERNAL - SPECIAL DETAILED: VERTICAL FIN REAR SPAR TERMINAL FITTING TASK 55-05-02-250-946			252	PTF ALL
INTERNAL - SPECIAL DETAILED: VERTICAL FIN - REAR SPAR SIDE-OF-BODY TASK 55-05-02-270-824			252	PTF ALL
INTERNAL - SPECIAL DETAILED: VERTICAL FIN - CLOSURE RIB TASK 55-05-02-270-825			252	PTF ALL
INTERNAL - SPECIAL DETAILED: VERTICAL FIN - CLOSURE RIB PRIMARY CHORD TASK 55-05-02-270-826			253	PTF ALL
INTERNAL - DETAILED: VERTICAL FIN - TRAILING EDGE TASK 55-05-02-211-819			253	PTF ALL
INTERNAL - DETAILED: VERTICAL FIN - TRAILING EDGE TASK 55-05-02-211-820			256	PTF ALL
INTERNAL - DETAILED: RUDDER HINGE FITTINGS TASK 55-05-02-211-821			259	PTF ALL
INTERNAL - SPECIAL DETAILED: RUDDER - ACTUATOR FITTINGS TASK 55-05-02-250-947			264	PTF ALL
INTERNAL - DETAILED: RUDDER - BALANCE ARM TASK 55-05-02-211-822			264	PTF ALL
STABILIZER - STRUCTURAL INSPECTIONS - MAINTENANCE PRACTICES	55-05-03		201	PTF ALL
INTERNAL - GENERAL VISUAL: HORIZONTAL STABILIZER CENTER SECTION TASK 55-05-03-210-801			201	PTF ALL
INTERNAL - GENERAL VISUAL: STABILIZER TORSION BOX COMPARTMENT TASK 55-05-03-210-802			203	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - GENERAL VISUAL: VERTICAL FIN LEADING EDGE TASK 55-05-03-210-803			206	PTF ALL
INTERNAL - GENERAL VISUAL: VERTICAL FIN TASK 55-05-03-210-804			211	PTF ALL
INTERNAL - GENERAL VISUAL: VERTICAL FIN TRAILING EDGE TASK 55-05-03-210-805			216	PTF ALL
INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER LEADING EDGE TASK 55-05-03-210-806			219	PTF ALL
INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER LEADING EDGE TASK 55-05-03-210-807			223	PTF ALL
INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER LEADING EDGE TASK 55-05-03-210-808			227	PTF ALL
INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER LEADING EDGE TASK 55-05-03-210-809			229	PTF ALL
INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER TASK 55-05-03-210-810			231	PTF ALL
INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER TASK 55-05-03-210-811			236	PTF ALL
INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER TRAILING EDGE AND ELEVATOR TAB LEADING EDGE TASK 55-05-03-210-812			241	PTF ALL
INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER TRAILING EDGE AND ELEVATOR TAB LEADING EDGE TASK 55-05-03-210-813			251	PTF ALL
INTERNAL - DETAILED: LEFT ELEVATOR TAB SUPT FTGS ON FRONT SPAR AND TAB SPAR AT LEADING EDGE TASK 55-05-03-211-801			261	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
INTERNAL - DETAILED: RIGHT ELEVATOR TAB SUPT FTGS ON FRONT SPAR AND TAB SPAR AT LEADING EDGE TASK 55-05-03-211-802			266	PTF ALL
INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER TRAILING EDGE TASK 55-05-03-210-814			271	PTF ALL
INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER TRAILING EDGE TASK 55-05-03-210-815			274	PTF ALL
INTERNAL - DETAILED: INTERNAL - LEFT ELEVATOR TAB HINGE FITTING TASK 55-05-03-211-803			277	PTF ALL
INTERNAL - DETAILED: INTERNAL - RIGHT ELEVATOR TAB HINGE FITTING TASK 55-05-03-211-804			279	PTF ALL
INTERNAL - GENERAL VISUAL: RUDDER, ELEVATOR AND ELEVATOR TAB ATTACH FITTINGS TASK 55-05-03-210-816			281	PTF ALL
INTERNAL - DETAILED: LEFT ELEVATOR HINGE, ACTUATOR, AND TAB MAST ARM FTGS AND BALANCE WT SUPPT STRUC TASK 55-05-03-211-805			290	PTF ALL
INTERNAL - DETAILED: RIGHT ELEVATOR HINGE, ACTUATOR, AND TAB MAST ARM FTGS AND BALANCE WT SUPPT STRUCT TASK 55-05-03-211-806			298	PTF ALL
INTERNAL - SPECIAL DETAILED: LEFT HORIZONTAL STABILIZER TRAILING EDGE TASK 55-05-03-290-801			298.8	PTF ALL
INTERNAL - SPECIAL DETAILED: RIGHT HORIZONTAL STABILIZER TRAILING EDGE TASK 55-05-03-290-802			298.10	PTF ALL
HORIZONTAL STABILIZER TIP - REMOVAL/INSTALLATION	55-10-00		401	PTF ALL
Horizontal Stabilizer Tip - Removal TASK 55-10-00-000-801			401	PTF ALL

55-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
Horizontal Stabilizer Tip - Installation TASK 55-10-00-400-801			404	PTF ALL
HORIZONTAL STABILIZER - MAINTENANCE PRACTICES	55-10-00		201	PTF ALL
Horizontal Stabilizer - Corrosion Prevention TASK 55-10-00-910-801			201	PTF ALL
Guidelines for Missing Fasteners in the Leading Edge Access Panels TASK 55-10-00-200-801			206	PTF ALL
HORIZONTAL STABILIZER CONDUCTIVE STRIP - REPAIRS	55-10-01		801	PTF ALL
Horizontal Stabilizer Conductive Strip Repair TASK 55-10-01-300-801			801	PTF ALL
THRUST BRACE LINKS - REMOVAL/INSTALLATION	55-10-10		401	PTF ALL
Thrust Brace Links Removal TASK 55-10-10-000-801			401	PTF ALL
Thrust Brace Link Installation TASK 55-10-10-400-801			407	PTF ALL
BALANCE BAY PANELS - REMOVAL/INSTALLATION	55-10-11		401	PTF ALL
Balance Bay Panels - Removal TASK 55-10-11-000-801			401	PTF ALL
Balance Bay Panels - Installation TASK 55-10-11-400-801			404	PTF ALL
VERTICAL STABILIZER (FIN) - CORROSION PREVENTION	55-30-00		201	PTF ALL
Vertical Stabilizer (Fin) - Corrosion Prevention TASK 55-30-00-910-801			201	PTF ALL
VERTICAL STABILIZER (FIN) - REMOVAL/INSTALLATION	55-30-00		401	PTF ALL
Vertical Stabilizer (Fin) Removal TASK 55-30-00-000-801			401	PTF ALL
Vertical Stabilizer (Fin) - Installation TASK 55-30-00-400-801			412	PTF ALL

55-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
VERTICAL STABILIZER (FIN) - INSPECTION/CHECK	55-30-00		601	PTF ALL
Vertical Stabilizer (Fin) Inspection TASK 55-30-00-200-801			601	PTF ALL
VERTICAL FIN LUG SEALING - INSPECTION/CHECK	55-30-01		601	PTF ALL
Vertical Fin Sealing Inspection TASK 55-30-01-200-801			601	PTF ALL
DORSAL FIN - REMOVAL/INSTALLATION	55-32-11		401	PTF ALL
Dorsal Fin Removal TASK 55-32-11-000-801			401	PTF ALL
Dorsal Fin Installation TASK 55-32-11-400-801			406	PTF ALL
VERTICAL STABILIZER (FIN) LEADING EDGE - REMOVAL/INSTALLATION	55-33-11		401	PTF ALL
Vertical Stabilizer (Fin) Leading Edge Removal TASK 55-33-11-000-801			401	PTF ALL
Vertical Stabilizer (Fin) Leading Edge Installation TASK 55-33-11-400-801			406	PTF ALL
VERTICAL STABILIZER (FIN) TIP - REMOVAL/INSTALLATION	55-33-21		401	PTF ALL
Vertical Stabilizer (Fin) Tip Removal TASK 55-33-21-000-801			401	PTF ALL
Vertical Stabilizer (Fin) Tip Installation TASK 55-33-21-400-801			403	PTF ALL
VERTICAL STABILIZER (FIN) TRAILING EDGE PANELS - REMOVAL/INSTALLATION	55-33-31		401	PTF ALL
Vertical Stabilizer (Fin) Trailing Edge Panels Removal TASK 55-33-31-000-801			401	PTF ALL
Vertical Stabilizer (Fin) Trailing Edge Panels Installation TASK 55-33-31-400-801			404	PTF ALL

55-CONTENTS

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 55
STABILIZERS

SUBJECT	CHAPTER SECTION SUBJECT	CONF	PAGE	EFFECT
VERTICAL STABILIZER HF ANTENNA LEADING EDGE PANEL - REPAIRS	55-35-01		801	PTF ALL
HF Antenna Fiberglass Panel Leading Edge Panel No. 4 - Inspection TASK 55-35-01-200-801			801	PTF ALL
Leading Edge Finish - Installation TASK 55-35-01-400-801			805	PTF ALL
Polyurethane Protective Tape (PPT) - Installation TASK 55-35-01-400-802			807	PTF ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

RUDDER AND HORIZONTAL STABILIZERS - INSPECTION/CHECK

1. General

A. This procedure has this task:

(1) Examine the composite flight controls.

TASK 55-00-01-200-801

2. Examine the Composite Flight Controls

A. General

(1) This task gives instructions to do a visual inspection of the internal area of the rudder and the horizontal stabilizers.

(2) Use the equipment listed below to examine the composite flight controls:

(a) Flexible Video Borescope with (4) four way articulation, .5 inch (12mm) diameter X 10 feet (3m) long insertion tube with forward and side viewing optical tip adapters.

(b) Flexible Fiber-optic Borescope with (4) four way articulation, .35 inch (8mm) diameter X 3 feet (1m) long insertion tube with forward and side viewing optical tip adapters.

(c) Flexible or rigid guide tube - Dekoron is a trade mark for a formable type metal cored tubing.

B. Location Zones

Zone	Area
320	Subzone - Vertical Fin and Rudder
330	Subzone - Left Horizontal Stabilizer and Elevator
340	Subzone - Right Horizontal Stabilizer and Elevator

C. Procedure

SUBTASK 55-00-01-010-001

(1) Remove the access panels that are necessary.

SUBTASK 55-00-01-290-001

(2) Put the borescope tube into an access hole that is 2 inches in diameter.

SUBTASK 55-00-01-290-002

(3) Move the borescope tube until you can see an area where an inspection is necessary.

NOTE: If you cannot move the optical tip into the correct areas, use a guide tube.

SUBTASK 55-00-01-290-003

(4) Examine the area for these unsatisfactory conditions:

NOTE: Do not move the borescope tube while you examine an area.

(a) Signs of deterioration.

(b) Bulges and cracks on the skins and the ribs.

(c) Corrosion on the fasteners.

(d) Other signs of the stress.

SUBTASK 55-00-01-970-001

(5) Make a record of all the unsatisfactory conditions before you move the borescope to a different area.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-00-01-410-001

(6) Install the access panels.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

STABILIZER - FATIGUE INSPECTIONS - MAINTENANCE PRACTICES

1. General

A. This procedure contains scheduled maintenance task data.

TASK 55-05-02-270-813

2. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-130-025

(1) Do an Ultrasonic inspection of the rear spar upper chord between the web splice and shear tie at BL 1.3.

See Doc. D626A010, DTR check form 55-10-01-01.

——— END OF TASK ———

TASK 55-05-02-270-801

3. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-001

(1) Do an Ultrasonic inspection of the rear spar upper chord around fasteners common to the web at BL 2.7 to BL 6.7.

See Doc. D626A010, DTR check form 55-10-01-02.

——— END OF TASK ———

TASK 55-05-02-250-877

4. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

NOTE: Remove fasteners from BL 8.1 to BL 19.7.

SUBTASK 55-05-02-250-077

(1) Do a High Frequency Eddy Current inspection of the rear spar upper chord from BL 8.1 to BL 19.7.

See Doc. D626A010, DTR check form 55-10-01-03A.

——— END OF TASK ———

TASK 55-05-02-270-802

5. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-002

(1) Do an Ultrasonic inspection of the rear spar forward flange at the eight fastener locations which attach the thrust beam fitting splice to the rear spar upper chord (thrust beam attachment points).

See Doc. D626A010, DTR check form 55-10-01-4.

——— END OF TASK ———

TASK 55-05-02-270-803

6. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PIVOT FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-003

(1) Do an Ultrasonic inspection of the hinge housing pivot lugs on the horizontal stabilizer center section hinge housing pivot fittings.

See Doc. D626A010, DTR check form 55-10-02-01.

——— END OF TASK ———

TASK 55-05-02-270-804

7. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PIVOT FITTING

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

NOTE: Remove the gap covers and sliding seals.

SUBTASK 55-05-02-270-004

(1) Do an Ultrasonic inspection of the pivot fitting plates at the horizontal stabilizer center section pivot fitting lower hinge housing lugs.

See Doc. D626A010, DTR check form 55-10-02-02.

——— END OF TASK ———

TASK 55-05-02-270-805

8. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST LINK FITTINGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-005

(1) Do an Ultrasonic inspection of the clevis lugs on the horizontal stabilizer center section thrust link fittings. There are 4 lugs per fitting.

See Doc. D626A010, DTR check form 55-10-02-03 for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-270-806

9. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION JACKSCREW FITTINGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
311	Area Aft of Pressure Bulkhead - Left
312	Area Aft of Pressure Bulkhead - Right

B. Inspection

SUBTASK 55-05-02-270-006

(1) Do an Ultrasonic inspection of the horizontal stabilizer center section jackscrew fitting lugs.

See Doc. D626A010, DTR check form 55-10-03-01.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-878

10. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-078

(1) Do a High Frequency Eddy Current inspection of the visible portion of the lower chord between stabilizer STA 129.5 and STA 212.3.

See Doc. D626A010, DTR check form 55-10-04-01 for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-250-879

11. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-079

(1) Do a Low Frequency Eddy Current inspection on both fastener rows in the forward flange at and between ribs at stabilizer STA 212.3 to STA 310.54.

See Doc. D626A010, DTR check form 55-10-04-02.

——— END OF TASK ———

TASK 55-05-02-250-880

12. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-080

(1) Do a High Frequency Eddy Current inspection of the rear spar lower chord at the trailing edge attach flange at and between ribs from stabilizer STA 212.3 to STA 310.54, except at bay 21 where there is a hinge attached to the aft flange.

See Doc. D626A010, DTR check form 55-10-04-03 for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-270-807

13. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-007

(1) Do an Ultrasonic inspection of the rear spar lower chord web flange under the trailing edge stiffener at rib locations at stabilizer STA 221, STA 239, STA 258, STA 276, STA 295 and STA 310.

See Doc. D626A010, DTR check form 55-10-04-04.

——— END OF TASK ———

TASK 55-05-02-250-881

14. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-008

(1) Do a High Frequency Eddy Current inspection of the rear spar lower chord web attach flange at trailing edge ribs from stabilizer STA 212.3 to STA 310.54.

See Doc. D626A010, DTR check form 55-10-04-05.

——— END OF TASK ———

TASK 55-05-02-250-882

15. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-081

(1) Do a Low Frequency Eddy Current inspection of both fastener rows on the rear spar lower chord forward flange at and between the ribs from stabilizer STA 310 to outboard tip.

See Doc. D626A010, DTR check form 55-10-04-06.

——— END OF TASK ———

TASK 55-05-02-250-883

16. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-082

(1) Do a Low Frequency Eddy Current inspection of the rear spar lower chord aft flange at and between the ribs from stabilizer STA 310 to outboard tip.

See Doc. D626A010, DTR check form 55-10-04-07.

——— END OF TASK ———

TASK 55-05-02-250-884

17. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-083

(1) Do a Low Frequency Eddy Current inspection of the rear spar lower chord web flange at and between the ribs from stabilizer STA 310 to outboard tip.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

See Doc. D626A010, DTR check form 55-10-04-08.

——— END OF TASK ———

TASK 55-05-02-250-885

18. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Access is provided via the access door or by removal of the trailing edge panel which is attached by nutplates.

SUBTASK 55-05-02-250-084

(1) Do a High Frequency Eddy Current inspection of the rear spar lower chord aft flange at the hinge from stabilizer STA 242 to STA 247 and elevator STA 197 to STA 203.

See Doc. D626A010, DTR check form 55-10-04-09 for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-250-886

19. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-085

(1) Do a High Frequency Eddy Current inspection of the rear spar upper chord at the terminal fitting attachments.

See Doc. D626A010, DTR check form 55-10-04-10A.

——— END OF TASK ———

TASK 55-05-02-270-808

20. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Sealant removal is required. The aft side is accessed from the trailing edge.

The forward side is accessed through the access panel in the lower inspar skin.

SUBTASK 55-05-02-270-009

(1) Do an Ultrasonic inspection of the forward and aft rear spar upper chord at the three outboard bolt locations.

See Doc. D626A010, DTR check form 55-10-04-10B.

——— END OF TASK ———

TASK 55-05-02-270-809

21. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-010

(1) Do an Ultrasonic inspection of the inboard bolt location between the terminal fork fitting common to the chord.

See Doc. D626A010, DTR check form 55-10-04-10C.

——— END OF TASK ———

TASK 55-05-02-250-887

22. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-086

(1) Do a Low Frequency Eddy Current inspection of the forward and aft rear spar upper chord flanges from stabilizer STA 67.78 to STA 203.10.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

See Doc. D626A010, DTR check form 55-10-04-11A.

——— END OF TASK ———

TASK 55-05-02-250-888

23. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-087

(1) Do a High Frequency Eddy Current inspection of the rear spar upper chord from stabilizer STA 67.78 to STA 203.10.

See Doc. D626A010, DTR check form 55-10-04-11A.

——— END OF TASK ———

TASK 55-05-02-250-889

24. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-088

(1) Do a Low Frequency Eddy Current inspection of the forward and aft rear spar upper chord flanges from stabilizer STA 203.10 to STA 258.28.

See Doc. D626A010, DTR check form 55-10-04-11B.

——— END OF TASK ———

TASK 55-05-02-250-891

25. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-011

(1) Do an Ultrasonic inspection of the rear spar upper chord web flange at the rib and stiffener locations from stabilizer STA 203.10 to STA 258.28.

See Doc. D626A010, DTR check form 55-10-04-11C.

——— END OF TASK ———

TASK 55-05-02-250-892

26. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Remove any sealant that exceeds .20 inches on either side of the fastener head or collar.

SUBTASK 55-05-02-250-089

(1) Do a High Frequency Eddy Current inspection of the rear spar upper chord web flange between ribs from stabilizer STA 203.10 to STA 258.28.

See Doc. D626A010, DTR check form 55-10-04-11D.

——— END OF TASK ———

TASK 55-05-02-250-893

27. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-090

(1) Do a Low Frequency Eddy Current inspection of the rear spar upper chord inspar skin attach flange from stabilizer STA 258.28 to tip.

See Doc. D626A010, DTR check form 55-10-04-12A.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-901

28. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-091

(1) Do a Low Frequency Eddy Current inspection of the rear spar upper chord trailing edge attach flange at stabilizer STA 258.28 to tip.

See Doc. D626A010, DTR check form 55-10-04-12B.

——— END OF TASK ———

TASK 55-05-02-270-812

29. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-012

(1) Do an Ultrasonic inspection of the rear spar upper chord web attach flange at the rib locations from stabilizer STA 258.28 to STA 310.54.

See Doc. D626A010, DTR check form 55-10-04-13A.

——— END OF TASK ———

TASK 55-05-02-250-895

30. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-092

(1) Do a High Frequency Eddy Current inspection of the rear spar upper chord spar web attach flange between rib locations from stabilizer STA 258.28 to STA 310.54.

See Doc. D626A010, DTR check form 55-10-04-13B.

——— END OF TASK ———

TASK 55-05-02-250-896

31. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD - WEB FLANGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-093

(1) Do a Low Frequency Eddy Current inspection of the rear spar upper chord web flange, at and between ribs at stabilizer STA 310.54 to the tip.

See Doc. D626A010, DTR check form 55-10-04-14.

——— END OF TASK ———

TASK 55-05-02-250-897

32. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - REAR SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Access is through the removable trailing edge lower skin panels.

Remove any fillet seals present.

SUBTASK 55-05-02-250-094

(1) Do a High Frequency Eddy Current inspection of the rear spar web at the lower edge of the fail-safe chord, at and between stiffeners, from stabilizer STA 83.5 to STA 184.7.

See Doc. D626A010, DTR check form 55-10-04-20.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-898

33. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Access is through the removable trailing edge lower skin panels.

Remove any fillet seals present.

SUBTASK 55-05-02-250-095

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer rear spar web at the lower edge of the upper chord, at and between the stiffeners from stabilizer STA 184.7 to STA 285.9.

See Doc. D626A010, DTR check form 55-10-04-21.

——— END OF TASK ———

TASK 55-05-02-250-899

34. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Access is through the removable trailing edge panel lower skin panels.

Remove any fillet seals present.

SUBTASK 55-05-02-250-096

(1) Do a High Frequency Eddy Current inspection of the rear spar web at the upper edge of the lower chord and the lower edge of the upper chord, at and between the stiffeners from stabilizer STA 285.9 to STA 310.5.

See Doc. D626A010, DTR check form 55-10-04-22.

——— END OF TASK ———

TASK 55-05-02-250-900

35. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Access is through the inspar lower skin access panels.

Remove any cap seals present.

SUBTASK 55-05-02-250-097

(1) Do a High Frequency Eddy Current inspection of the rear spar web at the upper and lower web to chord fastener locations between the stiffeners from stabilizer STA 310.5 to the outboard tip.

See Doc. D626A010, DTR check form 55-10-04-23.

——— END OF TASK ———

TASK 55-05-02-270-811

36. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Access is through the inspar lower skin access panels.

SUBTASK 55-05-02-270-013

(1) Do an Ultrasonic inspection of the rear spar web at the stiffeners common to both upper and lower chords from stabilizer STA 310.5 to outer tip.

See Doc. D626A010, DTR check form 55-10-04-24.

——— END OF TASK ———

TASK 55-05-02-270-814

37. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR SIDE-OF-BODY

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Remove gap covers.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-02-270-014

(1) Do an Ultrasonic inspection of the surface of the upper, lower, and fail-safe chord lugs for cracking in the bore.

See Doc. D626A010, DTR check form 55-10-05-01.

——— END OF TASK ———

TASK 55-05-02-270-815

38. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TERMINAL FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: The aft side is accessed from the trailing edge. The forward side is accessed through the access panel in the inspar lower skin. Any sealant must be removed.

SUBTASK 55-05-02-270-015

(1) Do an Ultrasonic inspection of the forward and aft sides of the terminal fitting around the three inboard fasteners common to the spar chord.

See Doc. D626A010, DTR check form 55-10-05-02A.

——— END OF TASK ———

TASK 55-05-02-290-801

39. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TERMINAL FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Access Panels

Number	Name/Location
332EB	Horizontal Stabilizer, Access Door
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
342EB	Horizontal Stabilizer, Access Door
343BB	Horizontal Stabilizer, Access Panel - T.E. Area

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Inspection

SUBTASK 55-05-02-010-127

(1) Open these access panels:

Number	Name/Location
332EB	Horizontal Stabilizer, Access Door
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
342EB	Horizontal Stabilizer, Access Door
343BB	Horizontal Stabilizer, Access Panel - T.E. Area

NOTE: The aft side is accessed from the trailing edge. The forward side is accessed through the access panel in the lower inspar skin. Any sealant must be removed.

SUBTASK 55-05-02-211-013

(2) Do a Special Detailed (borescope) inspection of the forward and aft side of the terminal fitting.

See Doc. D626A010, DTR check form 55-10-05-02B.

SUBTASK 55-05-02-410-105

(3) Close these access panels:

Number	Name/Location
332EB	Horizontal Stabilizer, Access Door
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
342EB	Horizontal Stabilizer, Access Door
343BB	Horizontal Stabilizer, Access Panel - T.E. Area

——— END OF TASK ———

TASK 55-05-02-230-803

40. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR SIDE-OF-BODY

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Pin removal is required.

SUBTASK 55-05-02-230-003

(1) Do a Penetrant inspection of the upper, lower, and fail-safe pins at the side of body.

See Doc. D626A010, DTR check form 55-10-05-03.

——— END OF TASK ———

TASK 55-05-02-250-902

41. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR UPPER CHORD TERMINAL FITTING

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Removal of the tension bolt is required.

SUBTASK 55-05-02-250-098

(1) Do a High Frequency Eddy Current inspection of the rear spar upper chord terminal fitting at the closure rib attach tension bolt hole.

See Doc. D626A010, DTR check form 55-10-05-04.

——— END OF TASK ———

TASK 55-05-02-250-903

42. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER REAR SPAR LOWER CHORD TERMINAL FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Removal of the bolt is required.

SUBTASK 55-05-02-250-099

(1) Do a High Frequency Eddy Current inspection of the rear spar lower chord at the closure rib attach tension bolt hole.

See Doc. D626A010, DTR check form 55-10-05-05.

——— END OF TASK ———

TASK 55-05-02-250-904

43. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-100

(1) Do a Low Frequency Eddy Current inspection of the front spar upper chord from the side of body to stabilizer STA 65.5.

See Doc. D626A010, DTR check form 55-10-06-01, for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-250-905

44. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

SUBTASK 55-05-02-250-101

(1) Do a Low Frequency Eddy Current inspection of the front spar upper chord at the inspar skin attach flange from stabilizer STA 66.5 to tip.

See Doc. D626A010, DTR check form 55-10-06-02.

——— END OF TASK ———

TASK 55-05-02-250-906

45. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD, FORWARD FLANGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-102

(1) Do a High Frequency Eddy Current inspection of the front spar upper chord at the leading edge attach flange from stabilizer STA 66.5 to tip.

See Doc. D626A010, DTR check form 55-10-06-03.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-907

46. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD, FORWARD FLANGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

SUBTASK 55-05-02-250-103

(1) Do a Low Frequency Eddy Current inspection of the front spar upper chord at the leading edge attach flange from stabilizer STA 66.5 to tip.

See Doc. D626A010, DTR check form 55-10-06-03.

——— END OF TASK ———

TASK 55-05-02-250-908

47. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-104

(1) Do a Low Frequency Eddy Current inspection of the front spar upper chord at each fastener at the spar web attach flange from stabilizer STA 66.5 to STA 75.0.

See Doc. D626A010, DTR check form 55-10-06-04A.

——— END OF TASK ———

TASK 55-05-02-250-909

48. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge and front spar web are required.

SUBTASK 55-05-02-250-105

(1) Do a High Frequency Eddy Current inspection of the front spar upper chord at hole of removed fastener of the spar web attach flange from stabilizer STA 175.5 to STA 285.28.

See Doc. D626A010, DTR check form 55-10-06-04B.

——— END OF TASK ———

TASK 55-05-02-250-910

49. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-106

(1) Do a Low Frequency Eddy Current inspection of the spar web attach flange from stabilizer STA 75.0 to STA 175.5.

See Doc. D626A010, DTR check form 55-10-06-04C.

——— END OF TASK ———

TASK 55-05-02-250-911

50. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required. Removal of the fillet seal may be required.

SUBTASK 55-05-02-250-107

(1) Do a High Frequency Eddy Current inspection of the spar web attach flange from stabilizer STA 75.0 to STA 175.5.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

See Doc. D626A010, DTR check form 55-10-06-04C.

——— END OF TASK ———

TASK 55-05-02-250-912

51. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-108

(1) Do a Low Frequency Eddy Current inspection of the spar web attach flange and web splice from stabilizer STA 110.24 to STA 111.96.

See Doc. D626A010, DTR check form 55-10-06-04D.

——— END OF TASK ———

TASK 55-05-02-250-913

52. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required. Removal of the fillet seal may be required.

SUBTASK 55-05-02-250-109

(1) Do a High Frequency Eddy Current inspection of the spar web attach flange and web splice from stabilizer STA 110.24 to STA 111.96.

See Doc. D626A010, DTR check form 55-10-06-04D.

——— END OF TASK ———

TASK 55-05-02-250-914

53. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-110

(1) Do a High Frequency Eddy Current inspection of the spar web attach flange from stabilizer STA 258.28 to tip.

See Doc. D626A010, DTR check form 55-10-06-04E, for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-211-814

54. INTERNAL - DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Access Panels

Number	Name/Location
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

C. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-010-145

(1) Open these access panels on the Left side:

Number	Name/Location
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

Open these access panels on the Right side:

Number	Name/Location
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

SUBTASK 55-05-02-211-014

(2) Do a Detailed inspection of the leading edge attach flange from stabilizer STA 66.50 to STA 175.50.

See Doc. D626A010, DTR check form 55-10-06-06A.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-02-410-115

(3) Close these access panels on the Left side:


Number	Name/Location
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

Close these access panels on the Right side:

Number	Name/Location
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

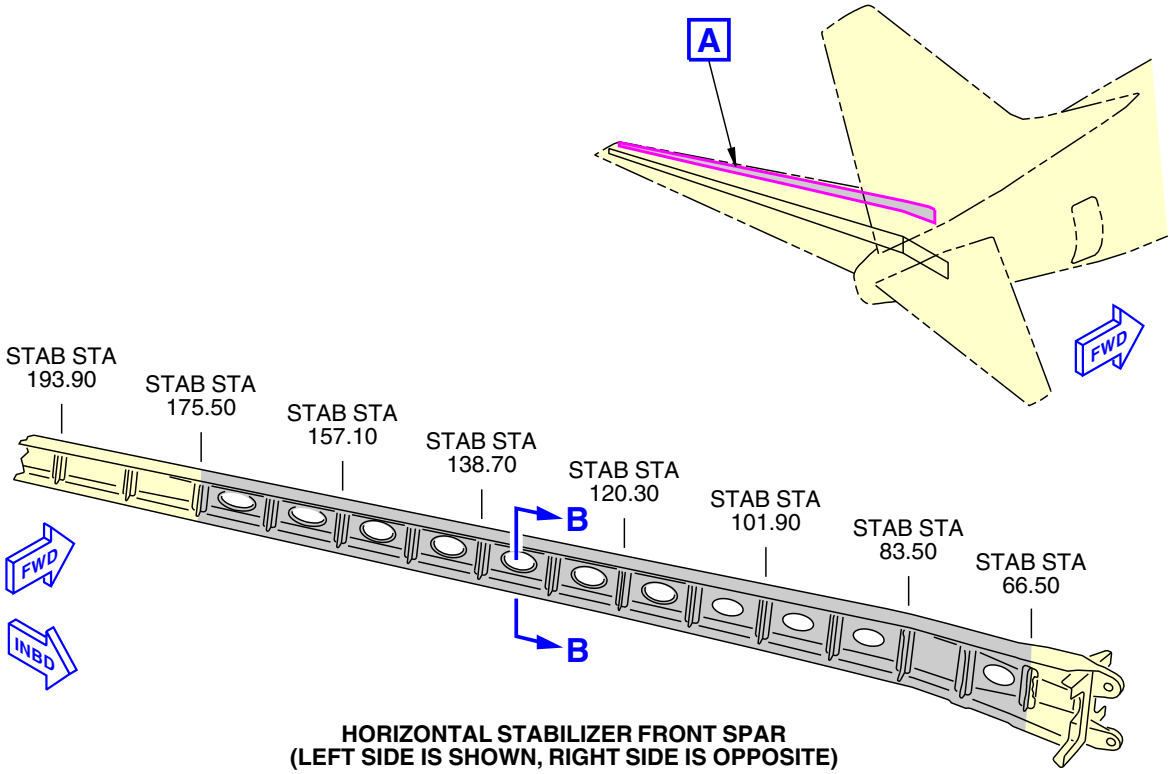

HORIZONTAL STABILIZER FRONT SPAR
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

A

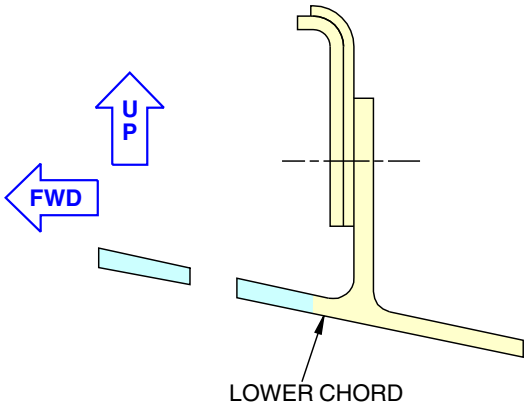

HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

B-B

3121255 S0000854987_V1

Horizontal Stabilizer Front Spar Lower Chord
Figure 201/55-05-02-990-806

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-915

55. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

SUBTASK 55-05-02-250-111

(1) Do a Low Frequency Eddy Current inspection of the inspar skin attach flange from stabilizer STA 66.50 to STA 175.5.

See Doc. D626A010, DTR check form 55-10-06-06B.

——— END OF TASK ———

TASK 55-05-02-250-916

56. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-112

(1) Do a High Frequency Eddy Current inspection of the leading edge attach flange from stabilizer STA 175.50 to STA 258.28.

See Doc. D626A010, DTR check form 55-10-06-07A.

——— END OF TASK ———

TASK 55-05-02-250-917

57. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-113

(1) Do a Low Frequency Eddy Current inspection of the inspar attach flange from stabilizer STA 175.50 to STA 258.28.

See Doc. D626A010, DTR check form 55-10-06-07B.

——— END OF TASK ———

TASK 55-05-02-250-918

58. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of leading edge is required.

SUBTASK 55-05-02-250-114

(1) Do a High Frequency Eddy Current inspection of the leading edge attach flange from stabilizer STA 258.28 to tip.

See Doc. D626A010, DTR check form 55-10-06-08A.

——— END OF TASK ———

TASK 55-05-02-250-919

59. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

SUBTASK 55-05-02-250-115

(1) Do a Low Frequency Eddy Current inspection of the inspar skin attach flange from stabilizer STA 258.28 to tip.

See Doc. D626A010, DTR check form 55-10-06-08B.

——— END OF TASK ———

TASK 55-05-02-250-920

60. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Remove fillet seal, if any. Removal of horizontal stabilizer leading edge is required.

SUBTASK 55-05-02-250-116

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer front spar web at both the upper and lower web edges from stabilizer STA 66.50 to STA 111.10.

See Doc. D626A010, DTR check form 55-10-06-21.

——— END OF TASK ———

TASK 55-05-02-250-921

61. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Remove fillet seal, if necessary. Removal of horizontal stabilizer leading edge is required.

SUBTASK 55-05-02-250-117

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer front spar web at both the upper and lower web edges from stabilizer STA 111.10 to STA 175.50.

See Doc. D626A010, DTR check form 55-10-06-22.

——— END OF TASK ———

TASK 55-05-02-250-922

62. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of horizontal stabilizer leading edge is required.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-02-250-118

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer front spar web at both the upper and lower web spar attachments from stabilizer STA 175.50 to STA 258.28.

See Doc. D626A010, DTR check form 55-10-06-23.

——— END OF TASK ———

TASK 55-05-02-250-923

63. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of horizontal stabilizer leading edge is required.

SUBTASK 55-05-02-250-119

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer front spar web at both the upper and lower web spar attachments from stabilizer STA 258.28 to tip.

See Doc. D626A010, DTR check form 55-10-06-24.

——— END OF TASK ———

TASK 55-05-02-250-924

64. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR WEB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Remove fillet sealant, if necessary.

SUBTASK 55-05-02-250-120

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer front web slice at stabilizer STA 111.10.

See Doc. D626A010, DTR check form 55-10-06-25.

——— END OF TASK ———

TASK 55-05-02-211-815

65. INTERNAL - DETAILED: HORIZONTAL STABILIZER FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Access Panels

Number	Name/Location
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
342AT	Gap Cover, Horizontal Stabilizer

C. Inspection

SUBTASK 55-05-02-010-146

(1) Open this access panel on the Left side:

Number	Name/Location
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

Open this access panel on the Right side:

Number	Name/Location
342AT	Gap Cover, Horizontal Stabilizer

SUBTASK 55-05-02-211-015

(2) Do a Detailed inspection of the horizontal stabilizer front spar upper chord at the closure rib attach tension bolt hole.

See Doc. D626A010, DTR check form 55-10-07-02.

SUBTASK 55-05-02-410-116

(3) Close this access panel on the Left side:


Number	Name/Location
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

Close this access panel on the Right side:

Number	Name/Location
342AT	Gap Cover, Horizontal Stabilizer

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

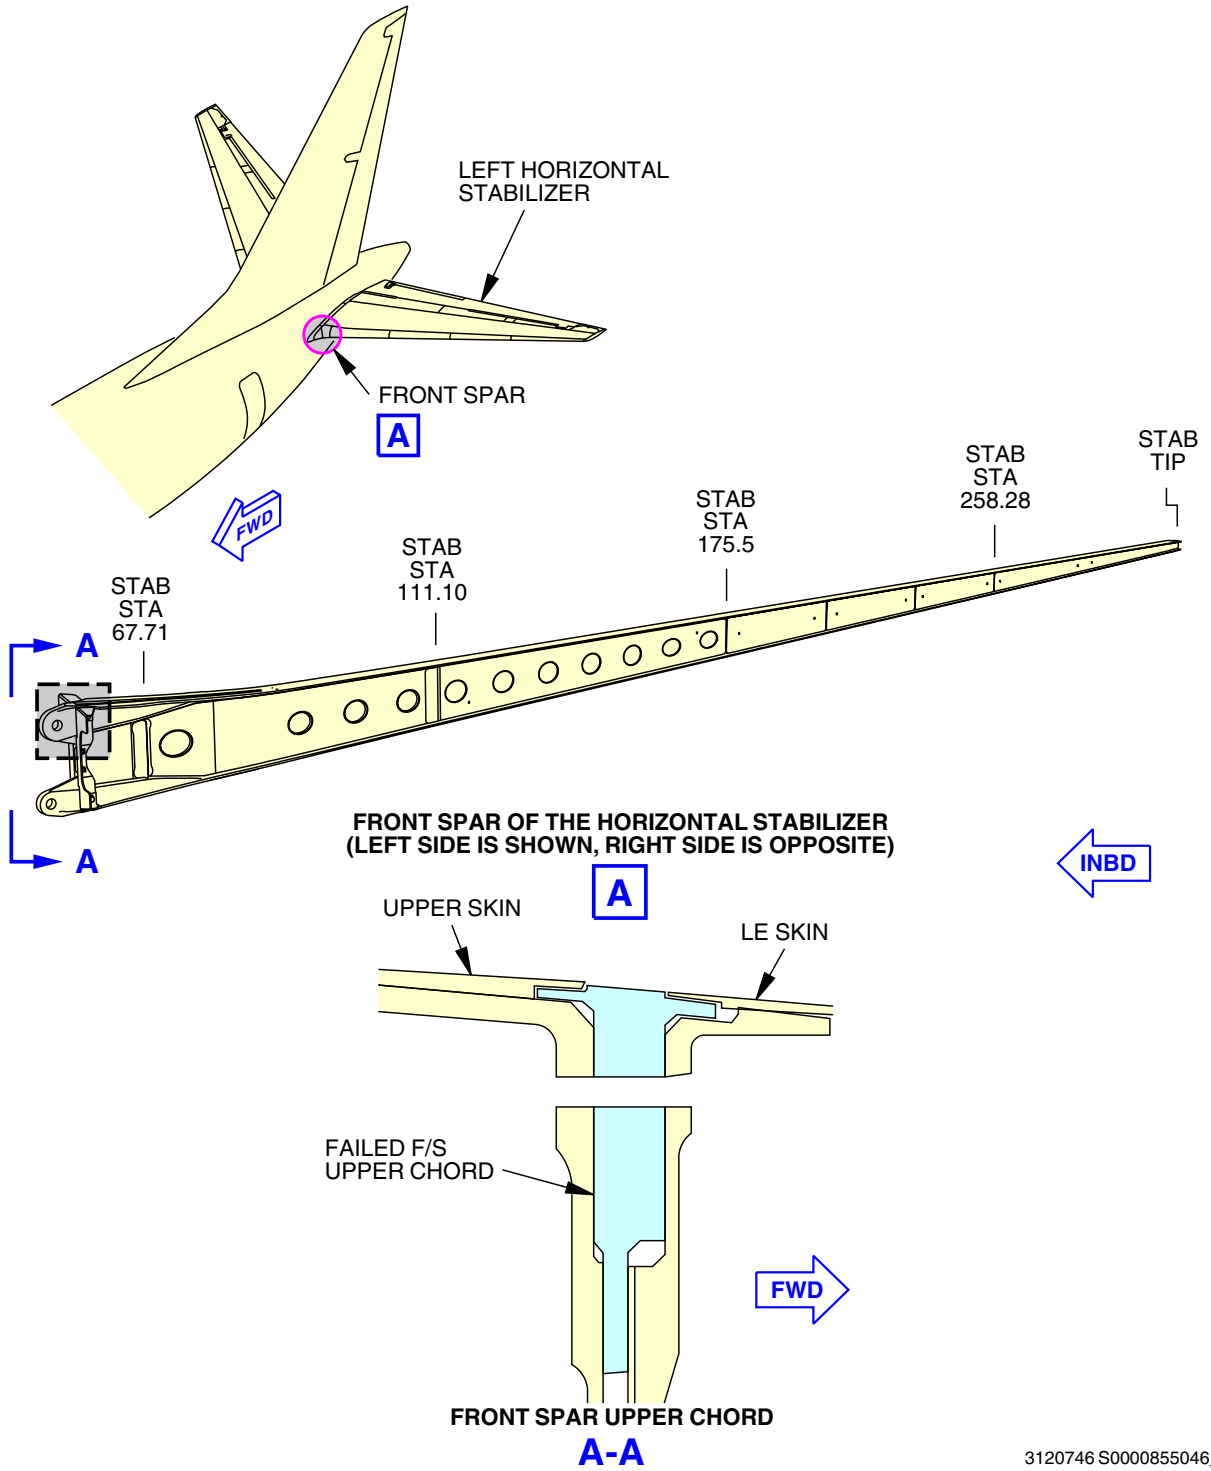

Horizontal Stabilizer Front Spar Upper Chord
Figure 202/55-05-02-990-807

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-230-804

66. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR SIDE-OF-BODY

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of bolt is required.

SUBTASK 55-05-02-230-004

(1) Do a Penetrant inspection of the upper and lower spar bolts.

See Doc. D626A010, DTR check form 55-10-07-03.

——— END OF TASK ———

TASK 55-05-02-250-925

67. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER FRONT SPAR LOWER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
341	Right Horizontal Stabilizer - Removable Leading Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection

NOTE: Removal of bolt is required.

SUBTASK 55-05-02-250-121

(1) Do a High Frequency Eddy Current inspection of the horizontal stabilizer front spar lower chord at the closure rib attach tension bolt hole.

See Doc. D626A010, DTR check form 55-10-07-04.

——— END OF TASK ———

TASK 55-05-02-250-926

68. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER -TRAILING EDGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

NOTE: Removal of hinge plate from assembly is required. The spherical bearing should not be removed.

SUBTASK 55-05-02-250-122

(1) Do a High Frequency Eddy Current inspection of all holes on the hinge plate around the bore at elevator STA 34.

See Doc. D626A010, DTR check form 55-10-08-01.

——— END OF TASK ———

TASK 55-05-02-250-927

69. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - TRAILING EDGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of hinge plate from assembly and bearing retainers is required. The spherical bearing should not be removed.

SUBTASK 55-05-02-250-123

(1) Do a High Frequency Eddy Current inspection of the aft hole of the hinge plate at elevator STA 39 and STA 66.

(2) Do a Open Hole Eddy Current inspection of the four (4) forward holes of the hinge plate at elevator STA 39 and STA 66.

See Doc. D626A010, DTR Check form 55-10-08-02, for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-250-928

70. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER -TRAILING EDGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of hinge plate from assembly is required. The spherical bearing should not be removed.

SUBTASK 55-05-02-250-124

(1) Do a High Frequency Eddy Current inspection of all holes on the hinge plate around the bore at elevator STA 121, STA 176, STA 213, STA 250, and STA 265.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

See Doc. D626A010, DTR check form 55-10-08-03, for alternative inspections.

——— END OF TASK ———

TASK 55-05-02-250-929

71. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - TRAILING EDGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of fillet seal is required.

SUBTASK 55-05-02-250-125

(1) Do a High Frequency Eddy Current inspection of the surface around the bushing edges on the upper and lower clevis lugs at elevator STA 34, STA 121, STA 176, STA 213, STA 250, and STA 265.

See Doc. D626A010, DTR check form 55-10-08-04.

——— END OF TASK ———

TASK 55-05-02-250-930

72. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER TRAILING EDGE HINGE RIB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of hinge plates and bolts is required.

SUBTASK 55-05-02-250-126

(1) Do a High Frequency Eddy Current inspection of all four (4) attachment holes of the trailing edge hinge rib at the elevator STA 39 and STA 66.

See Doc. D626A010, DTR check form 55-10-08–05.

——— END OF TASK ———

TASK 55-05-02-250-931

73. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - TRAILING EDGE

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of lower trailing edge panels is required.

SUBTASK 55-05-02-250-127

(1) Do a High Frequency Eddy Current inspection of the rib chord around the fasteners common to the stabilizer rear spar chord. Inspect both upper and lower chords at the rear spar attach of the elevator STA 34, STA 39, STA 66, STA 121, STA 176, STA 213, STA 250 and STA 265.

See Doc. D626A010, DTR check form 55-10-08–06.

——— END OF TASK ———

TASK 55-05-02-250-932

74. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER TRAILING EDGE

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
334	Left Horizontal Stabilizer - Elevator
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of lower trailing edge panels is required.

SUBTASK 55-05-02-250-128

(1) Do a High Frequency Eddy Current inspection of the lower chord upper surface around nutplates at the hinge rib chords of the elevator STA 34, STA 39, STA 66, STA 121, STA 176, STA 123, STA 250, and STA 265. This inspection also applies to the upper chord.

See Doc. D626A010, DTR check form 55-10-08-07.

——— END OF TASK ———

TASK 55-05-02-250-933

75. EXTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER - UPPER INSPAR SKIN

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-129

(1) Do a High Frequency Eddy Current inspection around all fastener locations in the upper inspar skin between the Side-of-Body rib and the rib at stabilizer STA 157.1.

See Doc. D626A010, DTR check form 55-10-09-01, for alternative inspection.

——— END OF TASK ———

TASK 55-05-02-211-816

76. EXTERNAL - DETAILED: HORIZONTAL STABILIZER - LOWER INSPAR SKIN

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

B. Inspection


SUBTASK 55-05-02-211-016

(1) Do a Detailed inspection around all fastener locations in the lower inspar skin at the Side-of-Body to tip.

See Doc. D626A010, DTR check form 55-10-10, for alternative inspection.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

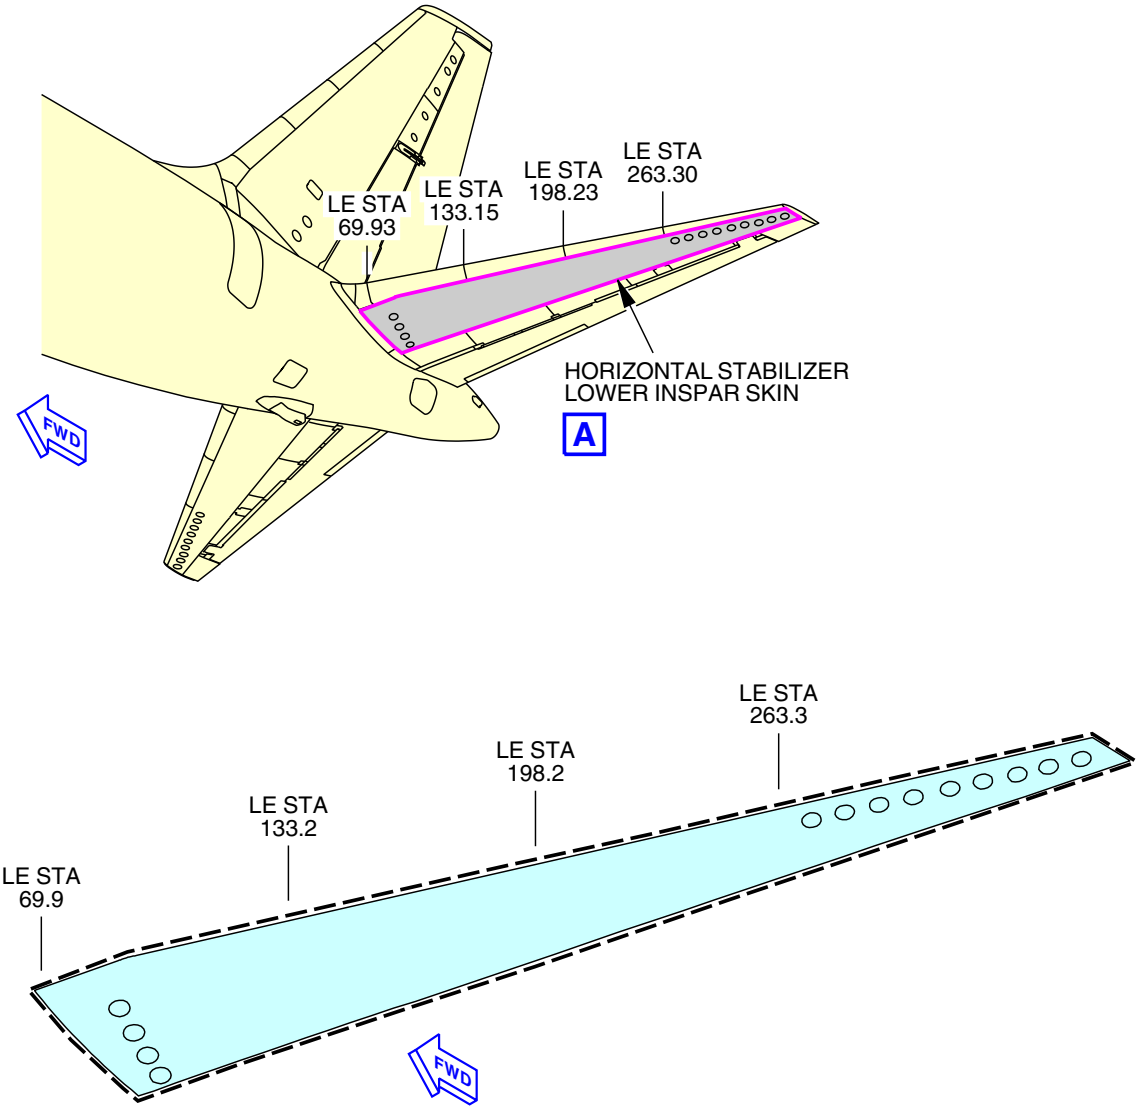

HORIZONTAL STABILIZER LOWER INSPAR SKIN
(LOWER SURFACE OF THE LOWER PANEL IS SHOWN)
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

A

3120744 S0000855105_V1

Horizontal Stabilizer Lower Inspar Skin
Figure 203/55-05-02-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-211-817

77. INTERNAL - DETAILED: HORIZONTAL STABILIZER CENTER SECTION FRONT SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Access Panels

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib

C. Inspection

SUBTASK 55-05-02-010-129

(1) Open these access panels on the Left side:

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib

Open these access panels on the Right side:

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib

NOTE: Removal of leading edge and gap seals is required.

SUBTASK 55-05-02-211-017

(2) Do a Detailed inspection of all four (4) front spar upper side of body clevis lugs.

See Doc. D626A010, DTR check form 55-10-11–01, for alternative inspection.

SUBTASK 55-05-02-410-120

(3) Close these access panels on the Left side:


Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib

Close these access panels on the Right side:

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

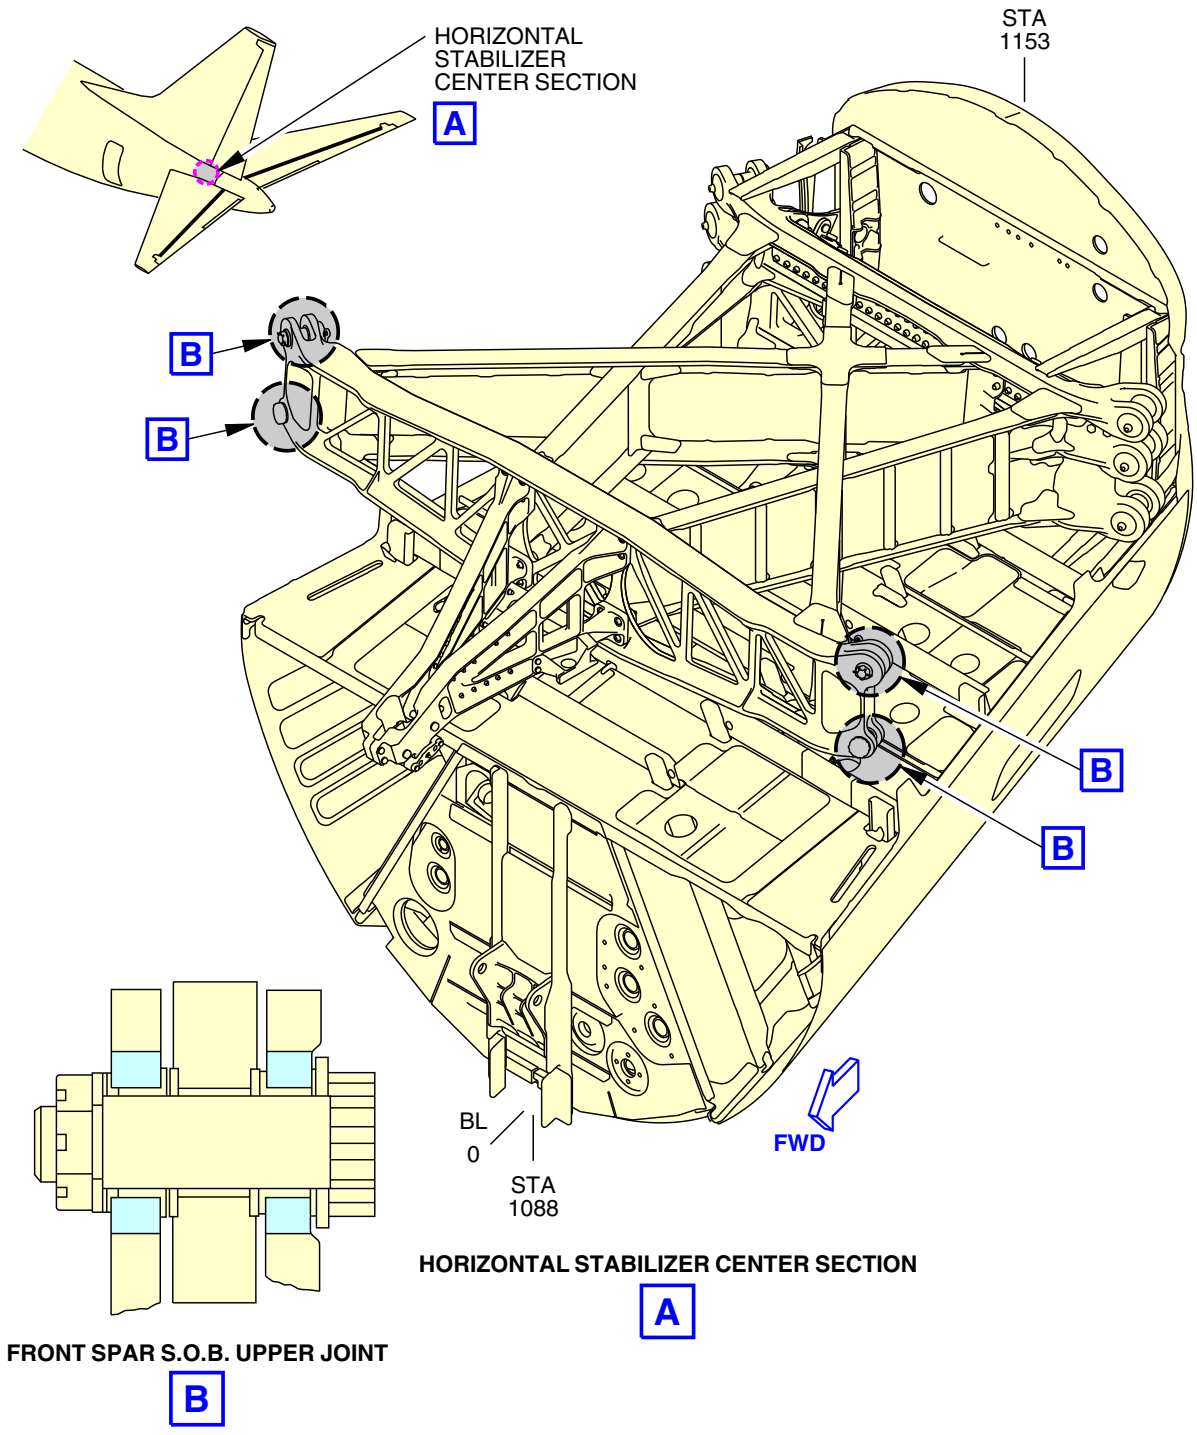

3120951 S0000855143_V1

Horizontal Stabilizer Center Section Front Spar Lugs
Figure 204/55-05-02-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-270-816

78. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR LUGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

NOTE: Removal of gap covers and sliding seals is required.

SUBTASK 55-05-02-270-016

(1) Do an Ultrasonic inspection of all four (4) clevis lugs at the lower pivot fitting lug bore.

See Doc. D626A010, DTR check form 55-10-12–01.

——— END OF TASK ———

TASK 55-05-02-270-817

79. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION REAR SPAR UPPER CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-017

(1) Do an Ultrasonic inspection of the upper clevis at the side of body lugs.

See Doc. D626A010, DTR check form 55-10-12–02.

——— END OF TASK ———

TASK 55-05-02-270-818

80. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY AND THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-018

(1) Do an Ultrasonic inspection of the upper and lower chords of the primary beam joints at both the front and rear spar joint.

See Doc. D626A010, DTR check form 55-10-14-01.

——— END OF TASK ———

TASK 55-05-02-250-934

81. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY AND THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-250-130

(1) Do an High Frequency Eddy Current inspection of all fasteners common to the splice plates, angles, and gussets on the forward and aft side of the primary beam.

See Doc. D626A010, DTR check form 55-10-14-02.

——— END OF TASK ———

TASK 55-05-02-270-819

82. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY AND THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-019

(1) Do an Ultrasonic inspection of the upper primary beam chord under the thrust beam chord around the fasteners (4) common to the two chords and splice angles.

See Doc. D626A010, DTR check form 55-10-14–03.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-270-820

83. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-020

(1) Do an Ultrasonic inspection of the thrust beam upper and lower chords around the first row of fasteners common to the splice members at both the front and rear spar joints.

See Doc. D626A010, DTR check form 55-10-14-04.

——— END OF TASK ———

TASK 55-05-02-250-935

84. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

NOTE: Removal of sealant from around the fastener heads and nuts is required.

SUBTASK 55-05-02-250-131

(1) Do an High Frequency Eddy Current inspection of the upper and lower thrust beam splice members around the fastener common the thrust beam and spar chords at both the front and rear spars.

See Doc. D626A010, DTR check form 55-10-14-05.

——— END OF TASK ———

TASK 55-05-02-270-821

85. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-021

(1) Do an Ultrasonic inspection of the upper and lower thrust beam chords both forward and aft of the thrust beam intersection joint.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

See Doc. D626A010, DTR check form 55-10-14-06.

——— END OF TASK ———

TASK 55-05-02-250-936

86. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAM INTERSECTION

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-250-132

(1) Do a High Frequency Eddy Current inspection around all fasteners common to the upper and lower splice plates in the upper and lower thrust beam-to-thrust beam joint, 48 locations total.

See Doc. D626A010, DTR check form 55-10-14-07.

——— END OF TASK ———

TASK 55-05-02-270-822

87. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION THRUST BEAMS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

B. Inspection

SUBTASK 55-05-02-270-022

(1) Do an Ultrasonic inspection of the upper and lower thrust beam chords for damage around the four (4) fasteners common to the upper and lower primary beam chords. Each thrust beam/primary beam joint has eight (8) fastener locations to examine.

See Doc. D626A010, DTR check form 55-10-14-08.

——— END OF TASK ———

TASK 55-05-02-250-937

88. INTERNAL - SPECIAL DETAILED: HORIZONTAL STABILIZER CENTER SECTION PRIMARY BEAM CHORD TO WEB ATTACHMENT

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-133

(1) Do a High Frequency Eddy Current inspection of the upper chord web flange around fasteners common to the web between the front and rear spars.

See Doc. D626A010, DTR check form 55-10-14-09.

——— END OF TASK ———

TASK 55-05-02-250-938

89. INTERNAL - SPECIAL DETAILED: ELEVATOR - HINGE FITTINGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Removal of carrier assembly and laminated shims is required.

SUBTASK 55-05-02-250-134

(1) Do a High Frequency Eddy Current inspection of the base fitting around periphery of the upper and lower lugs at the elevator STA 34 base fitting.

See Doc. D626A010, DTR check form 55-20-05-01.

——— END OF TASK ———

TASK 55-05-02-250-939

90. INTERNAL - SPECIAL DETAILED: ELEVATOR - HINGE FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Inspection

SUBTASK 55-05-02-250-135

(1) Do a High Frequency Eddy Current inspection of the hinge fitting lug face around circumference of bearing and around fastener at the upper and lower clevis of Hinge 1 at elevator STA 34.

See Doc. D626A010, DTR check form 55-20-05-02.

——— END OF TASK ———

TASK 55-05-02-250-940

91. INTERNAL - SPECIAL DETAILED: ELEVATOR - HINGE FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Zone	Area
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Remove fillet seal from circumference of bushing.

SUBTASK 55-05-02-250-136

(1) Do a High Frequency Eddy Current inspection on the hinge fitting clevis lug face around circumference of bushing at the elevator STA 39 (Hinge 2), STA 66 (Hinge 3), STA 121 (Hinge 4), STA 176 (Hinge 5), STA 213 (Hinge 6), STA 250 (Hinge 7), and STA 265 (Hinge 8).

See Doc. D626A010, DTR check form 55-20-05-03.

——— END OF TASK ———

TASK 55-05-02-250-941

92. INTERNAL - SPECIAL DETAILED: ELEVATOR - MAST FITTING ASSEMBLY

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Remove the actuator rod assembly as required.

SUBTASK 55-05-02-250-137

(1) Do a High Frequency Eddy Current inspection of each lug face of the elevator master arm.

See Doc. D626A010, DTR check form 55-20-06-01.

——— END OF TASK ———

TASK 55-05-02-210-802

93. INTERNAL - GENERAL VISUAL: ELEVATOR - BALANCE HORN

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Access Panels

Number	Name/Location
334CT	Horizontal Stabilizer Seal, Access to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334MB	Horizontal Stabilizer, Elevator Hinge Cover
334MT	Horizontal Stabilizer, Elevator Hinge Cover
344CT	Horizontal Stabilizer Seal, Access to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344MT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04

ECCN 9E991 BOEING PROPRIETARY - See title page for details

C. Inspection

SUBTASK 55-05-02-010-149

(1) Open these access panels on the Left side:

Number	Name/Location
334CT	Horizontal Stabilizer Seal, Access to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334MB	Horizontal Stabilizer, Elevator Hinge Cover
334MT	Horizontal Stabilizer, Elevator Hinge Cover

Open these access panels on the Right side:

Number	Name/Location
344CT	Horizontal Stabilizer Seal, Access to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344MT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04

NOTE: Removal of the elevator horn balance weight fairing is required.

SUBTASK 55-05-02-210-002

(2) Do a General Visual inspection of the ribs and attachment to the skin, spar and balance weight at the elevator support structure. The outboard rib is inspected through the hole in the inboard rib.

See Doc. D626A010, DTR check form 55-20-07.

SUBTASK 55-05-02-410-119

(3) Close these access panels on the Left side:


Number	Name/Location
334CT	Horizontal Stabilizer Seal, Access to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334MB	Horizontal Stabilizer, Elevator Hinge Cover
334MT	Horizontal Stabilizer, Elevator Hinge Cover

Close these access panels on the Right side:

Number	Name/Location
344CT	Horizontal Stabilizer Seal, Access to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344MT	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

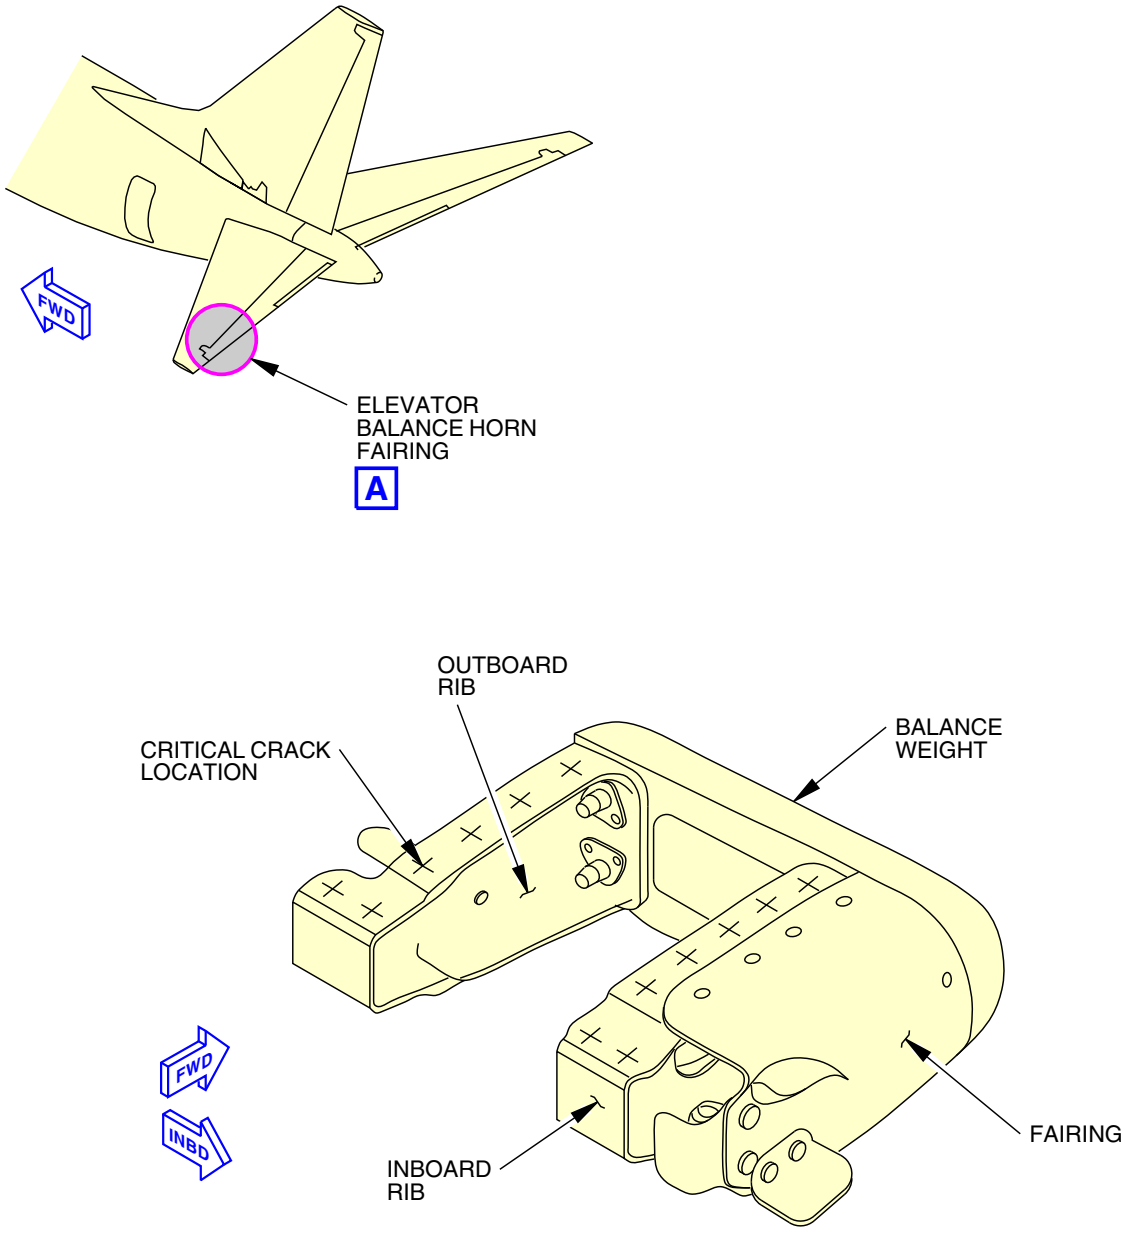

ELEVATOR HORN BALANCE WEIGHT SUPPORT
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

A

3123913 S0000857602_V1

Elevator Horn Balance Weight Support
Figure 205/55-05-02-990-810

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-942

94. INTERNAL - SPECIAL DETAILED: ELEVATOR TAB - MAST ARM FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Inspection

SUBTASK 55-05-02-250-138

(1) Do a High Frequency Eddy Current inspection around the circumference of the washer at the fastener hole 2 and 3 of the elevator tab mast arm fitting upper arm flange.

See Doc. D626A010, DTR check form 55-20-08

——— END OF TASK ———

TASK 55-05-02-260-802

95. INTERNAL - SPECIAL DETAILED: ELEVATOR TAB - HINGE FITTINGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Inspection

SUBTASK 55-05-02-260-002

(1) Do an X-ray inspection of the upper and lower flanges of hinges 3, 4, 5 and 6 of the elevator tab hinge fittings.

See Doc. D626A010, DTR check form 55-20-09.

——— END OF TASK ———

TASK 55-05-02-250-943

96. INTERNAL - SPECIAL DETAILED: ELEVATOR - TAB CONTROL MECHANISM BRACKETS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

B. Inspection

NOTE: Remove the elevator tab control mechanism as required.

Removal of the bushing is not required.

SUBTASK 55-05-02-250-139

(1) Do a High Frequency Eddy Current inspection of both bracket assemblies on the inboard and outboard of the elevator front spar web cutout of the elevator tab control mechanism brackets.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

See Doc. D626A010, DTR check form 55-20-12.

——— END OF TASK ———

TASK 55-05-02-270-823

97. INTERNAL - SPECIAL DETAILED: VERTICAL FIN - FRONT SPAR CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Inspection

NOTE: Removal of the leading edge panel is required.

Access is from the forward side. Probe placement is on the chord around the fitting.

SUBTASK 55-05-02-270-023

(1) Do an Ultrasonic inspection of the front spar chord around the terminal fitting from the forward side on both sides of the fin at the vertical fin terminal fitting attach.

See Doc. D626A010, DTR check form 55-30-01-01.

——— END OF TASK ———

TASK 55-05-02-250-944

98. EXTERNAL - SPECIAL DETAILED: VERTICAL FIN - REAR SPAR PRIMARY CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Inspection

SUBTASK 55-05-02-250-140

(1) Do a Low Frequency Eddy Current inspection of the vertical fin inspar skin attach flange of the primary chord through the skin from fin STA 78.0 to the fin tip.

See Doc. D626A010, DTR check form 55-30-03-02A.

——— END OF TASK ———

TASK 55-05-02-250-945

99. EXTERNAL - SPECIAL DETAILED: VERTICAL FIN - REAR SPAR PRIMARY CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

ECCN 9E991 BOEING PROPRIETARY - See title page for details

B. Inspection

SUBTASK 55-05-02-250-141

(1) Do a Low Frequency Eddy Current inspection of the vertical fin trailing edge attach flange of the primary chord through the trailing edge panel from fin STA 78.0 to the fin tip.

See Doc. D626A010, DTR check form 55-30-03-02B.

——— END OF TASK ———

TASK 55-05-02-211-818

100. INTERNAL - DETAILED: VERTICAL FIN REAR SPAR TERMINAL FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Access Panels

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access

C. Inspection

SUBTASK 55-05-02-010-144

(1) Open these access panels:

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access

SUBTASK 55-05-02-211-018

(2) Do a Detailed inspection of the primary terminal fittings at the rear spar attachment.

See Doc. D626A010, DTR check form 55-30-04-01A for alternative inspection.


SUBTASK 55-05-02-410-114

(3) Close these access panels:

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

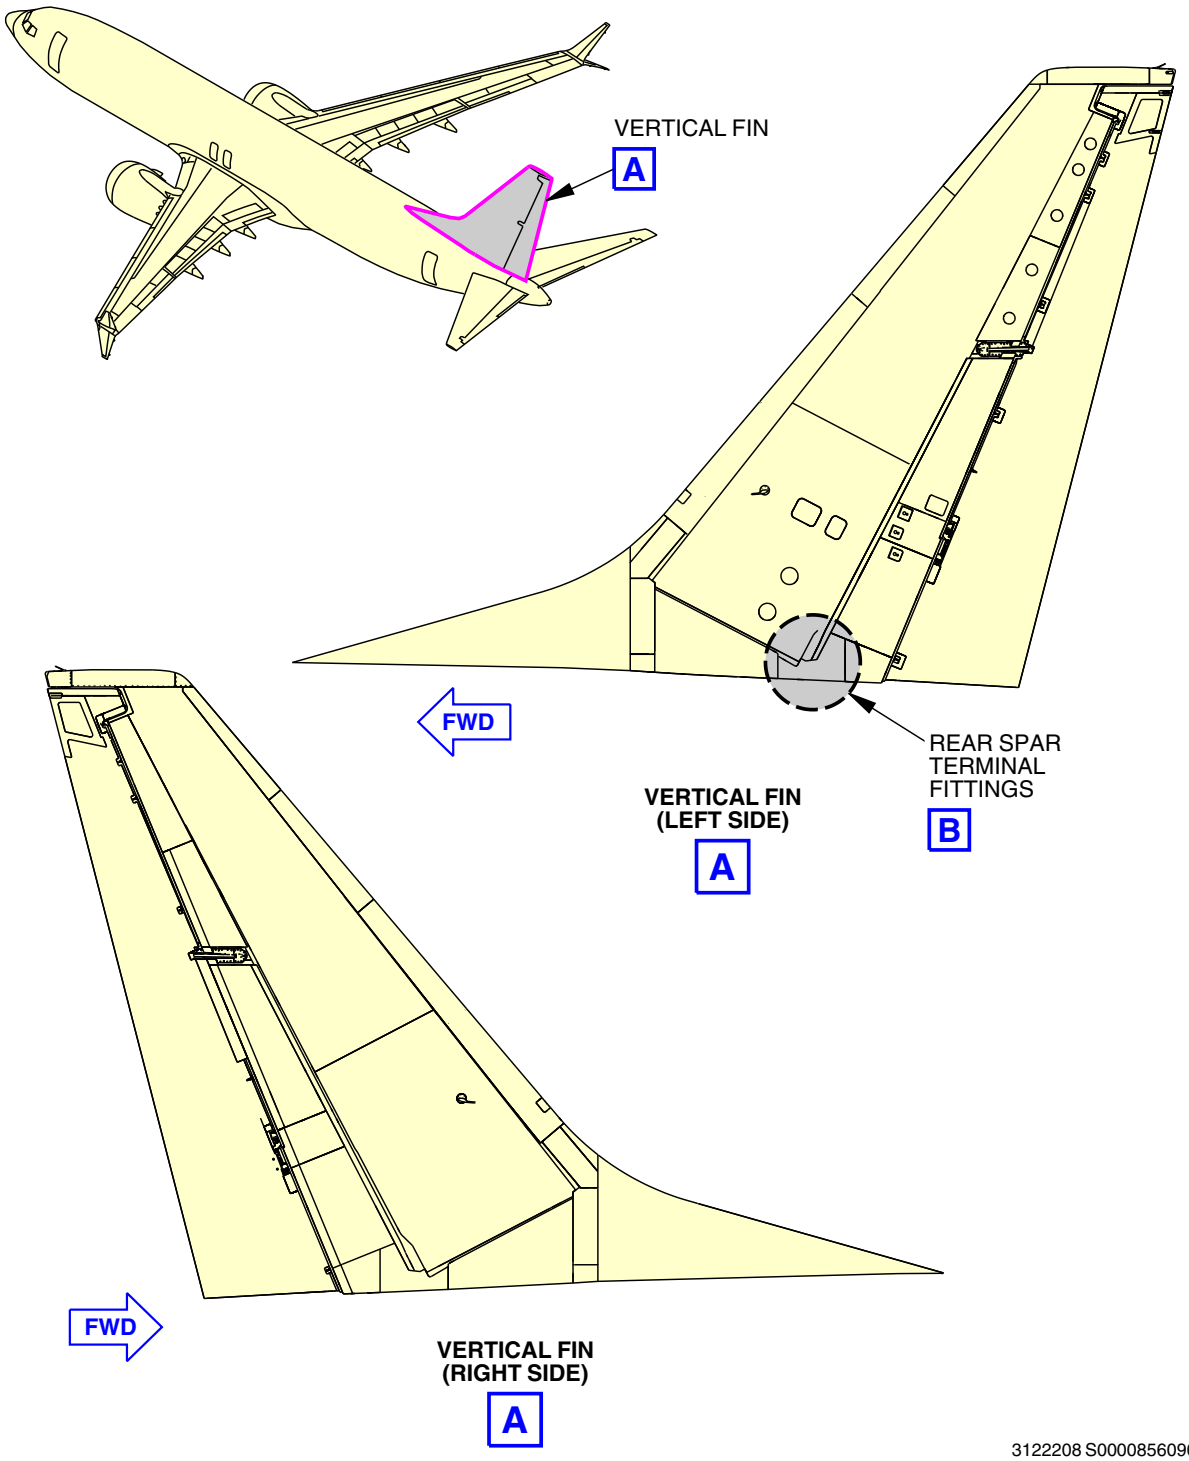


Vertical Fin Rear Spar Terminal Fitting
Figure 206/55-05-02-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

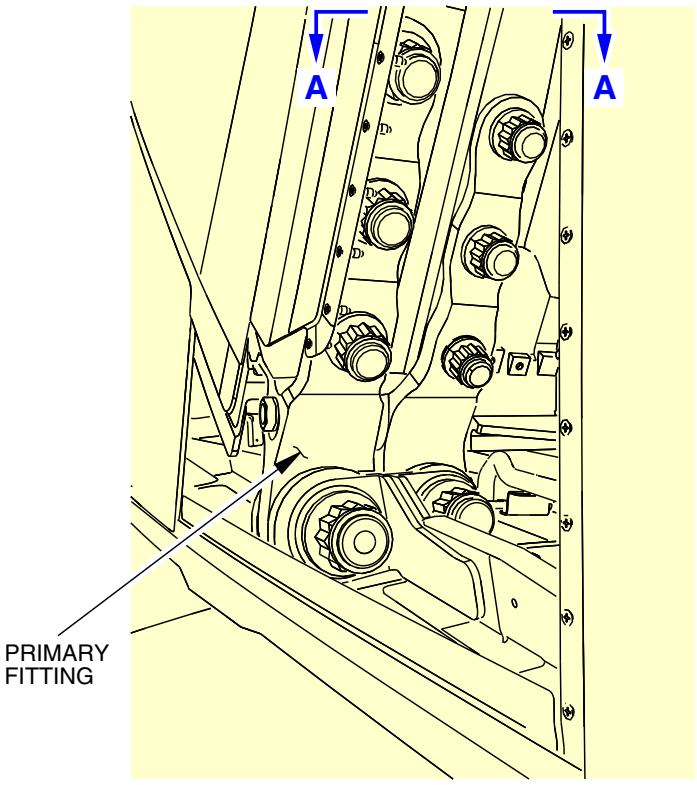

REAR SPAR TERMINAL FITTINGS
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

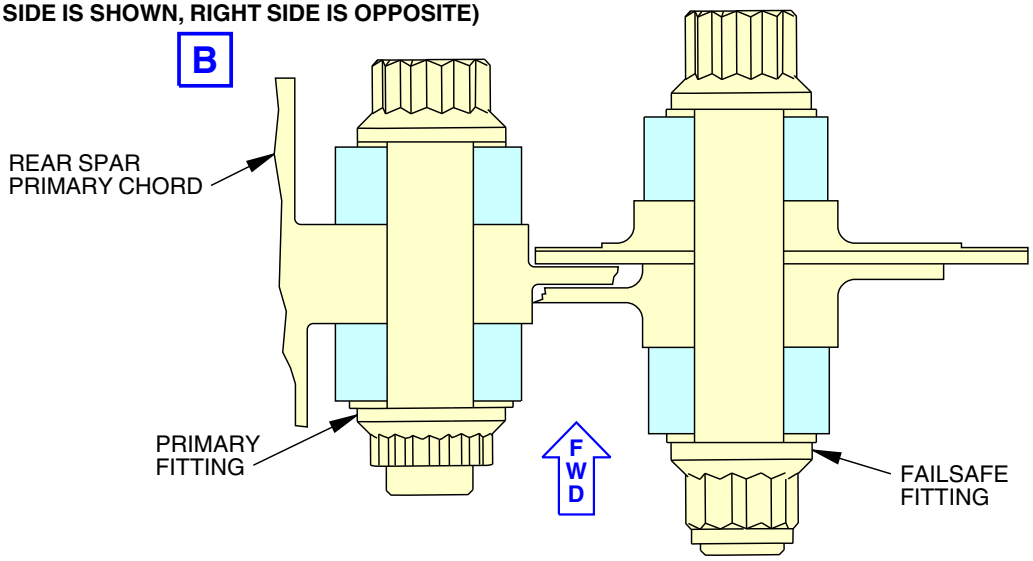

3122218 S0000856091_V1

Vertical Fin Rear Spar Terminal Fitting
Figure 206/55-05-02-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-946

101. INTERNAL - SPECIAL DETAILED: VERTICAL FIN REAR SPAR TERMINAL FITTING

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Inspection

NOTE: Access through the LHS skin access door.

SUBTASK 55-05-02-250-142

(1) Do a High Frequency Eddy Current inspection of the internal portion of the primary terminal fittings with a borescope to guide placement of the probe.

See Doc. D626A010, DTR check form 55-30-04-01B for alternative inspection.

——— END OF TASK ———

TASK 55-05-02-270-824

102. INTERNAL - SPECIAL DETAILED: VERTICAL FIN - REAR SPAR SIDE-OF-BODY

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-024

(1) Do an Ultrasonic inspection of both ends of the primary and fail-safe bolts.

See Doc. D626A010, DTR check form 55-30-04-03.

——— END OF TASK ———

TASK 55-05-02-270-825

103. INTERNAL - SPECIAL DETAILED: VERTICAL FIN - CLOSURE RIB

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-025

(1) Do an Ultrasonic inspection of the primary chord at the rear spar.

NOTE: See Doc. D626A010, DTR check form 55-30-05-01.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-270-826

104. INTERNAL - SPECIAL DETAILED: VERTICAL FIN - CLOSURE RIB PRIMARY CHORD

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar
324	Vertical Fin - Rear Spar To Trailing Edge

B. Inspection

SUBTASK 55-05-02-270-026

(1) Do an Ultrasonic inspection of the primary chord at the front spar attach.

See Doc. D626A010, DTR check form 55-30-05-02.

——— END OF TASK ———

TASK 55-05-02-211-819

105. INTERNAL - DETAILED: VERTICAL FIN - TRAILING EDGE

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge

B. Access Panels

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ER	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324FR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324GR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324HR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324JR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

C. Inspection

SUBTASK 55-05-02-010-147

(1) Open these access panels:

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ER	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324FR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324GR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
324HR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324JR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

SUBTASK 55-05-02-211-019

(2) Do a Detailed inspection of all 9 hinge plates at hinge rib attach.

See Doc. D626A010, DTR check form 55-30-06-01 for alternative inspection.


SUBTASK 55-05-02-410-117

(3) Close these access panels:

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ER	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324FR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324GR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324HR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324JR	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

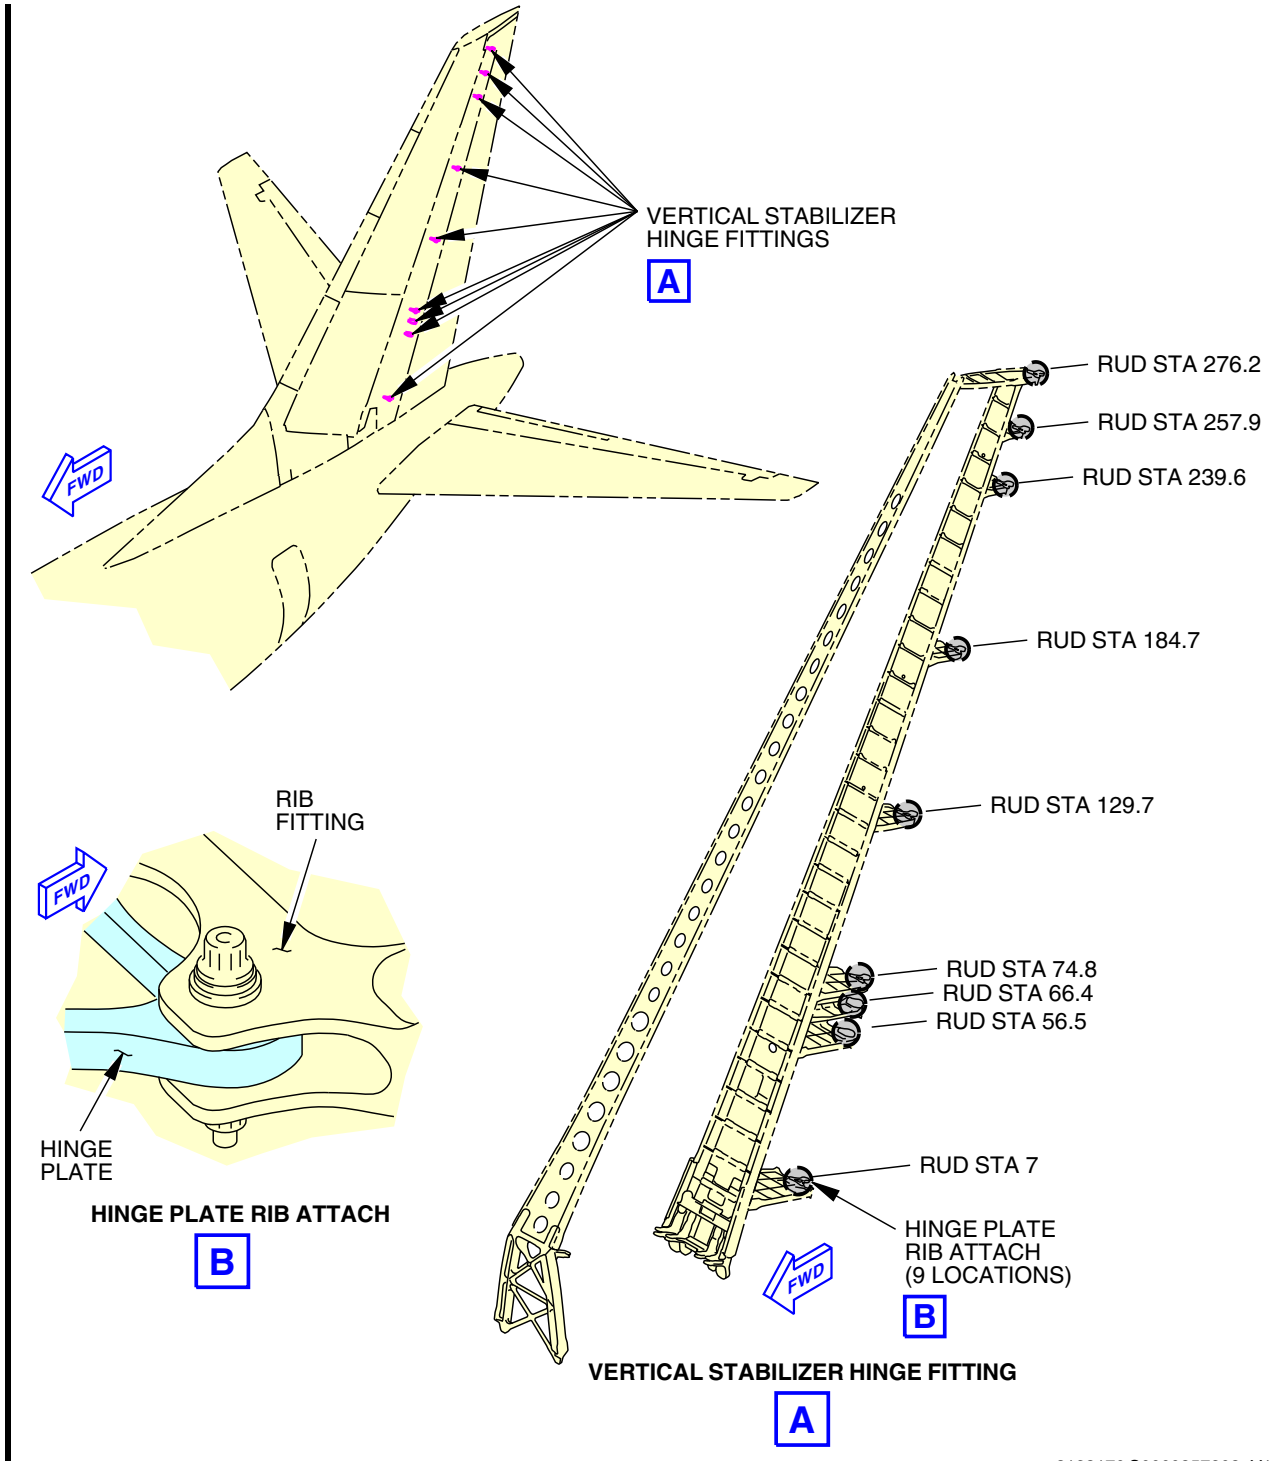

VERTICAL FIN - TRAILING EDGE
Figure 207/55-05-02-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-211-820

106. INTERNAL - DETAILED: VERTICAL FIN - TRAILING EDGE

(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge

B. Access Panels

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324JL	Vertical Fin, Access
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access

C. Inspection

NOTE: Removal of the skin panels aft of the fin rear spar is required.

SUBTASK 55-05-02-010-148

(1) Open these access panels:

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324JL	Vertical Fin, Access
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access

SUBTASK 55-05-02-211-020

(2) Do a Detailed inspection of all 9 hinge ribs at the attachment to both rear spar chords.

See Doc. D626A010, DTR check form 55-30-06-02 for alternative inspection.

SUBTASK 55-05-02-410-118

(3) Close these access panels:

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
324JL	Vertical Fin, Access
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

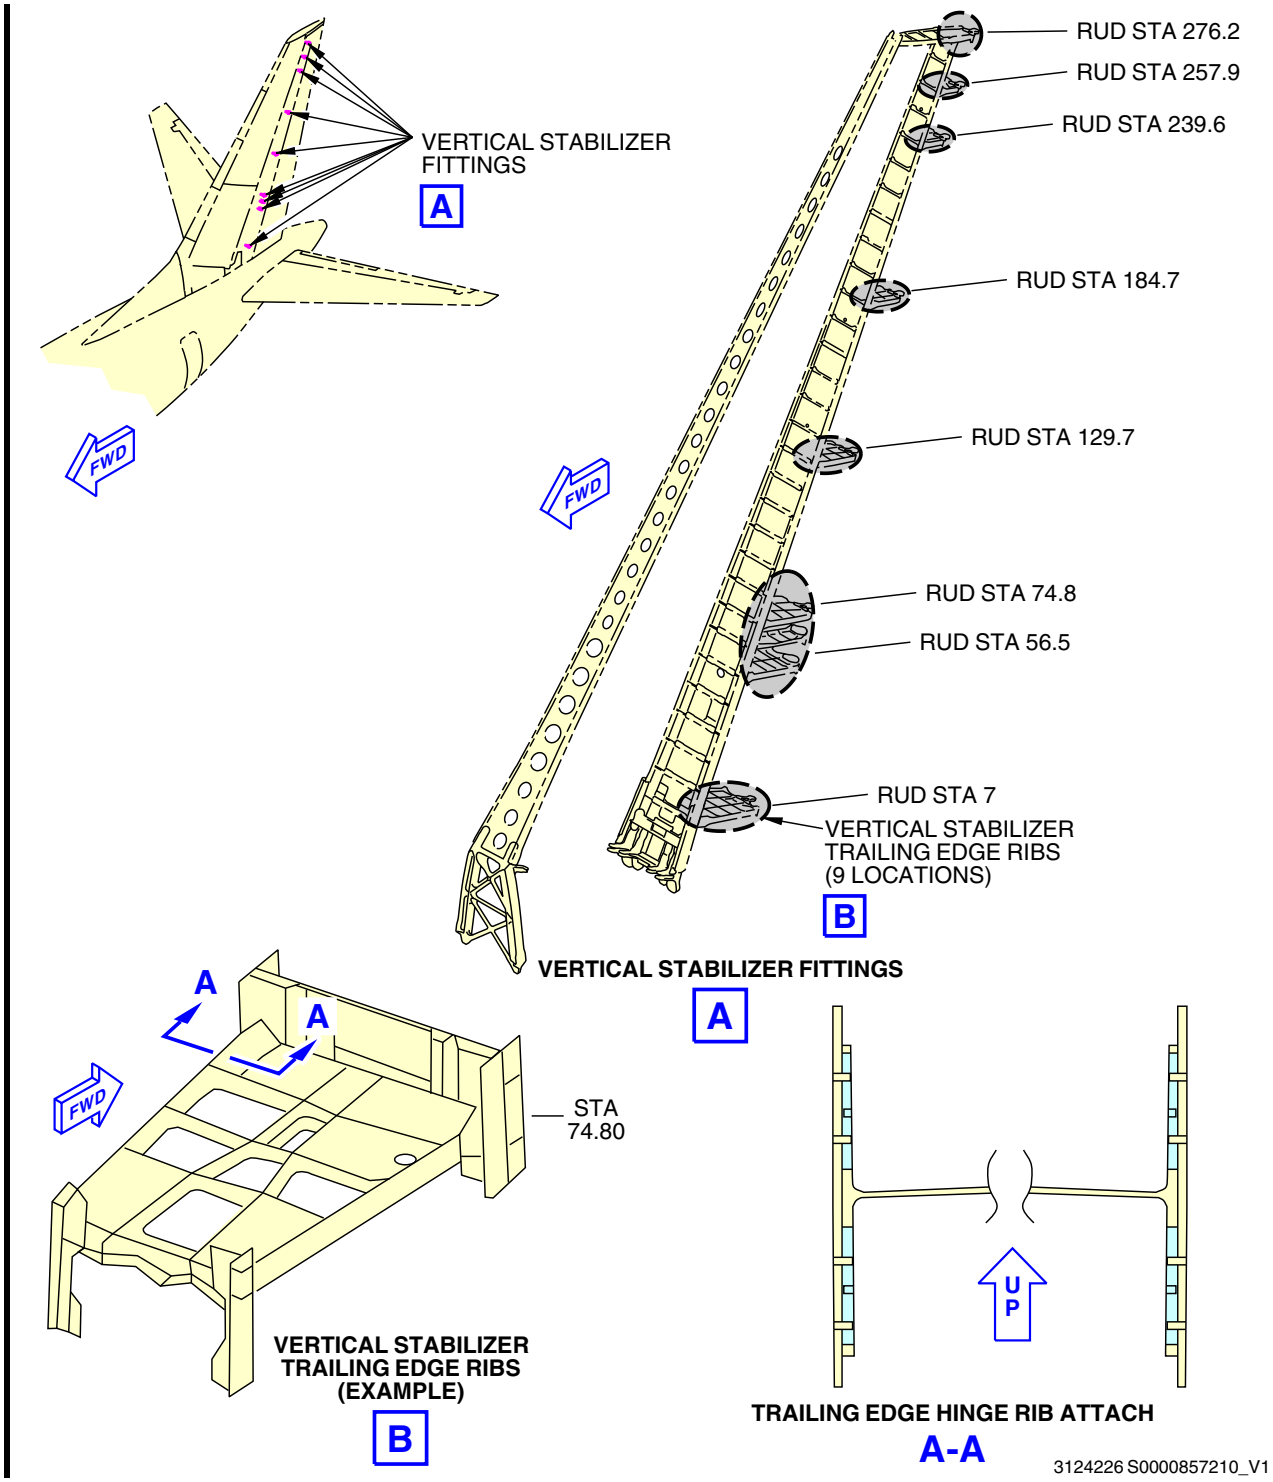

VERTICAL FIN - TRAILING EDGE
Figure 208/55-05-02-990-809

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-211-821

107. INTERNAL - DETAILED: RUDDER HINGE FITTINGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
325	Vertical Fin - Rudder

B. Access Panels

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ACL	Rudder Nose Cover/Rudder Hinge No. 9 At Rudder Station 276.24
324ADL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 257.93
324AEL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 184.67
324AHL	Rudder Nose Fairing/Rudder Hinge No. 5 At Rudder Station 129.74
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324FL	Vertical Fin, Access
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

C. Inspection:

SUBTASK 55-05-02-010-143

(1) Open these access panels:

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ACL	Rudder Nose Cover/Rudder Hinge No. 9 At Rudder Station 276.24
324ADL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 257.93
324AEL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 184.67
324AHL	Rudder Nose Fairing/Rudder Hinge No. 5 At Rudder Station 129.74
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324FL	Vertical Fin, Access
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

SUBTASK 55-05-02-211-021

(2) Do a Detailed inspection of all rudder hinge fitting clevis lugs and the hinge fitting attachments to the skin and the spar.

See Doc. D626A010, DTR check form 55-40-05.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 55-05-02-410-113

(3) Close these access panels:

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ACL	Rudder Nose Cover/Rudder Hinge No. 9 At Rudder Station 276.24
324ADL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 257.93
324AEL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 184.67
324AHL	Rudder Nose Fairing/Rudder Hinge No. 5 At Rudder Station 129.74
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324FL	Vertical Fin, Access
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

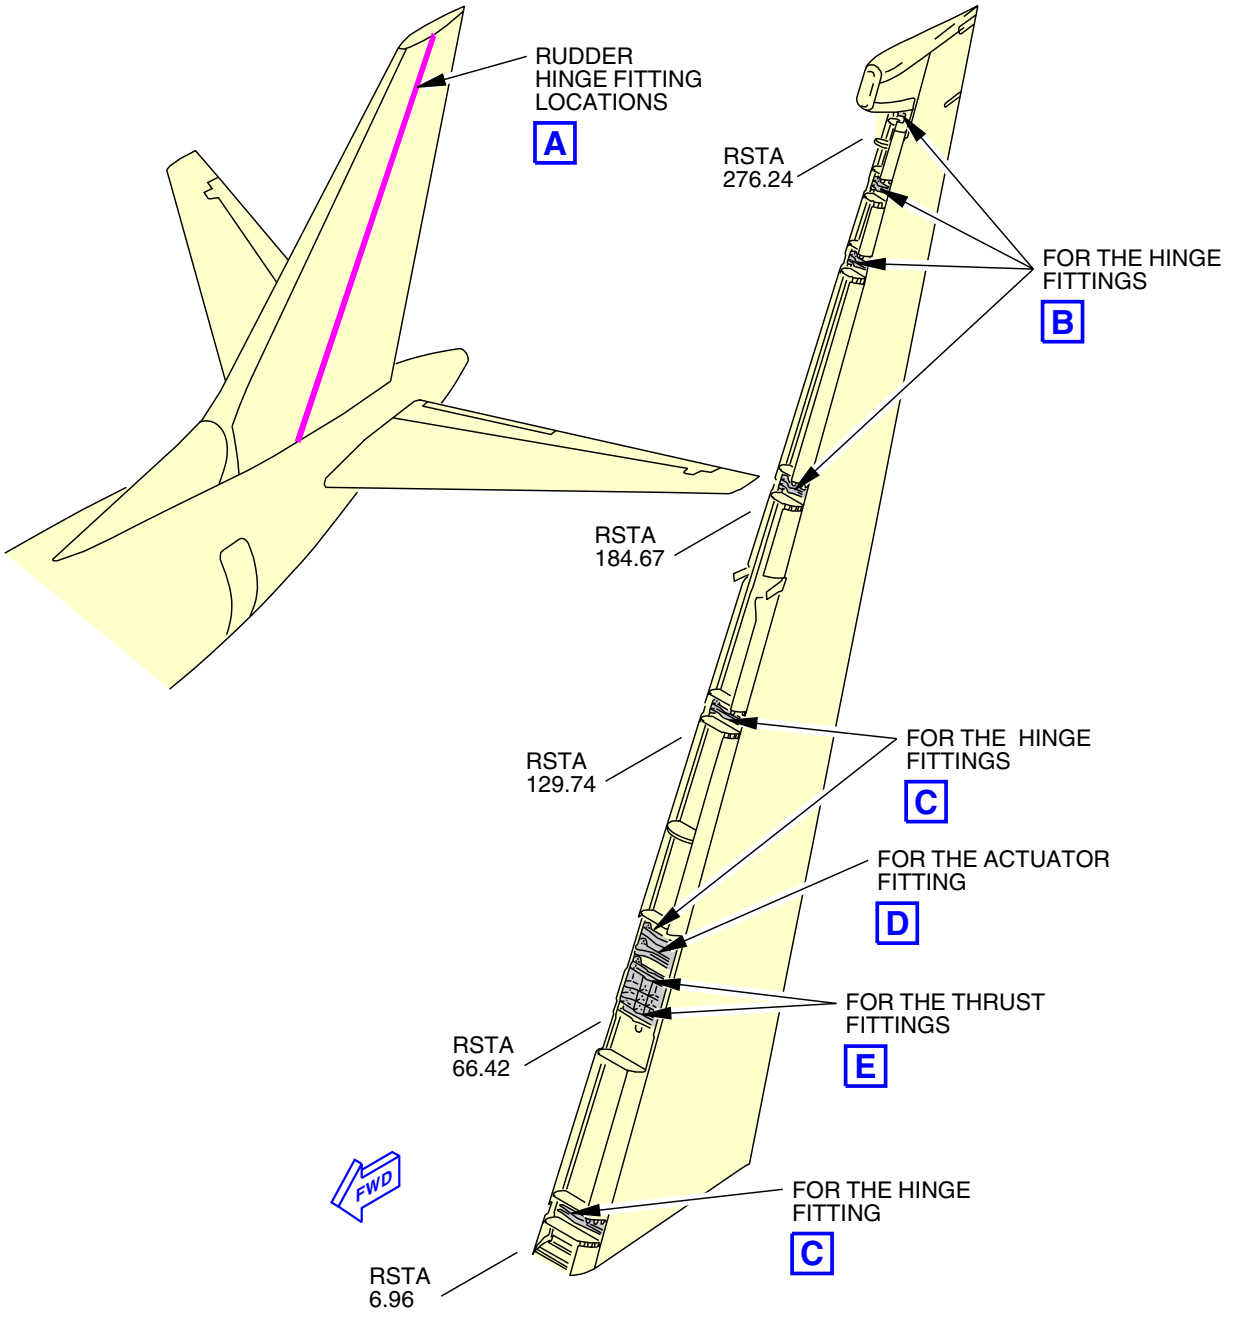


Rudder Hinge Fitting Locations
Figure 209/55-05-02-990-802 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

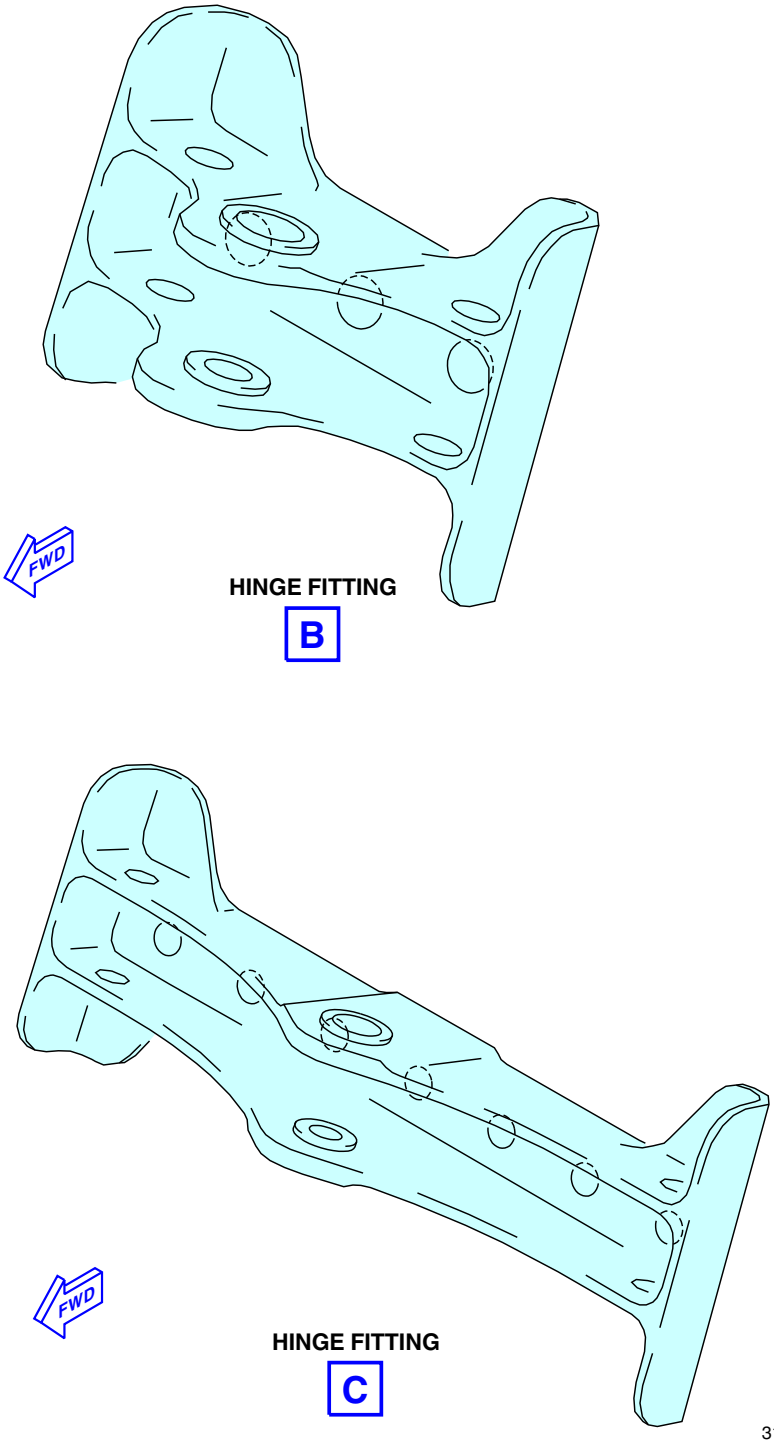


Rudder Hinge Fitting Locations
Figure 209/55-05-02-990-802 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

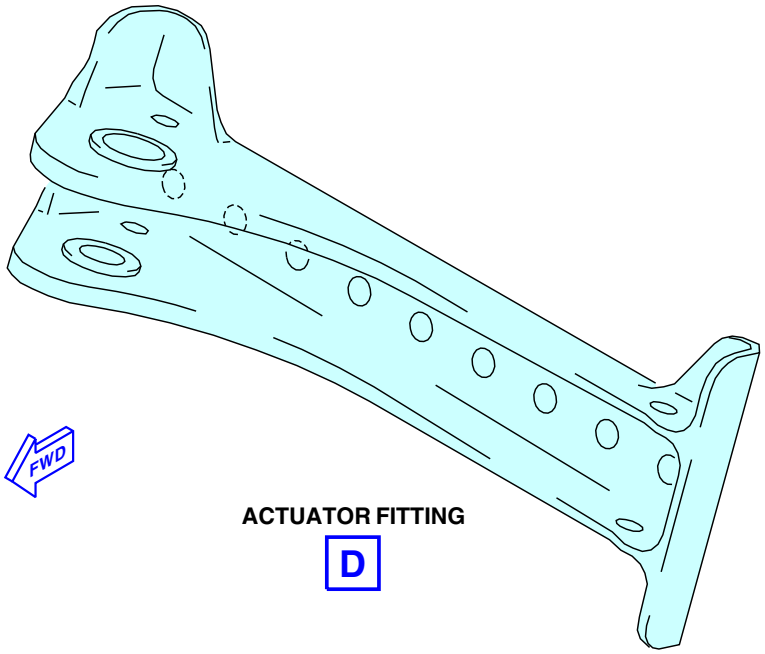

ACTUATOR FITTING

D

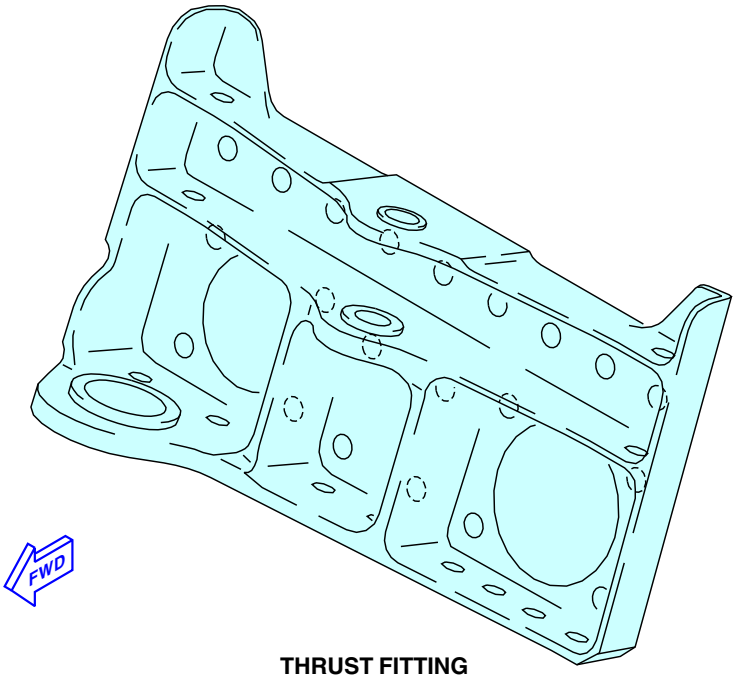

THRUST FITTING

E

3122704 S0000856337_V1

Rudder Hinge Fitting Locations
Figure 209/55-05-02-990-802 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-02-250-947

108. INTERNAL - SPECIAL DETAILED: RUDDER - ACTUATOR FITTINGS

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
325	Vertical Fin - Rudder

B. Inspection

NOTE: Removal of the actuator rod is required.

Access to one face of secondary actuator clevis lug is required.

SUBTASK 55-05-02-250-143

(1) Do a High Frequency Eddy Current inspection of all faces of primary actuator clevis lugs and visually inspect the hinge fitting attachments to the skin and the spar.

See Doc. D626A010, DTR check form 55-40-06.

——— END OF TASK ———

TASK 55-05-02-211-822

109. INTERNAL - DETAILED: RUDDER - BALANCE ARM

NOTE: This procedure is a scheduled maintenance task.

A. Location Zones

Zone	Area
325	Vertical Fin - Rudder

B. Access Panels

Number	Name/Location
324ACR	Upper Rudder Gap Cover At Rudder Station 164.90
324ADR	Lower Rudder Gap Cover
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

C. Inspection

SUBTASK 55-05-02-010-142

(1) Open these access panels:

Number	Name/Location
324ACR	Upper Rudder Gap Cover At Rudder Station 164.90
324ADR	Lower Rudder Gap Cover
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

SUBTASK 55-05-02-211-022

(2) Do a Detailed inspection of the balance arm in the area around the doubler, and the balance arm assembly attachment.

See Doc. D626A010, DTR check form 55-40-07.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 55-05-02-410-112

(3) Close these access panels:

Number	Name/Location
324ACR	Upper Rudder Gap Cover At Rudder Station 164.90
324ADR	Lower Rudder Gap Cover
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

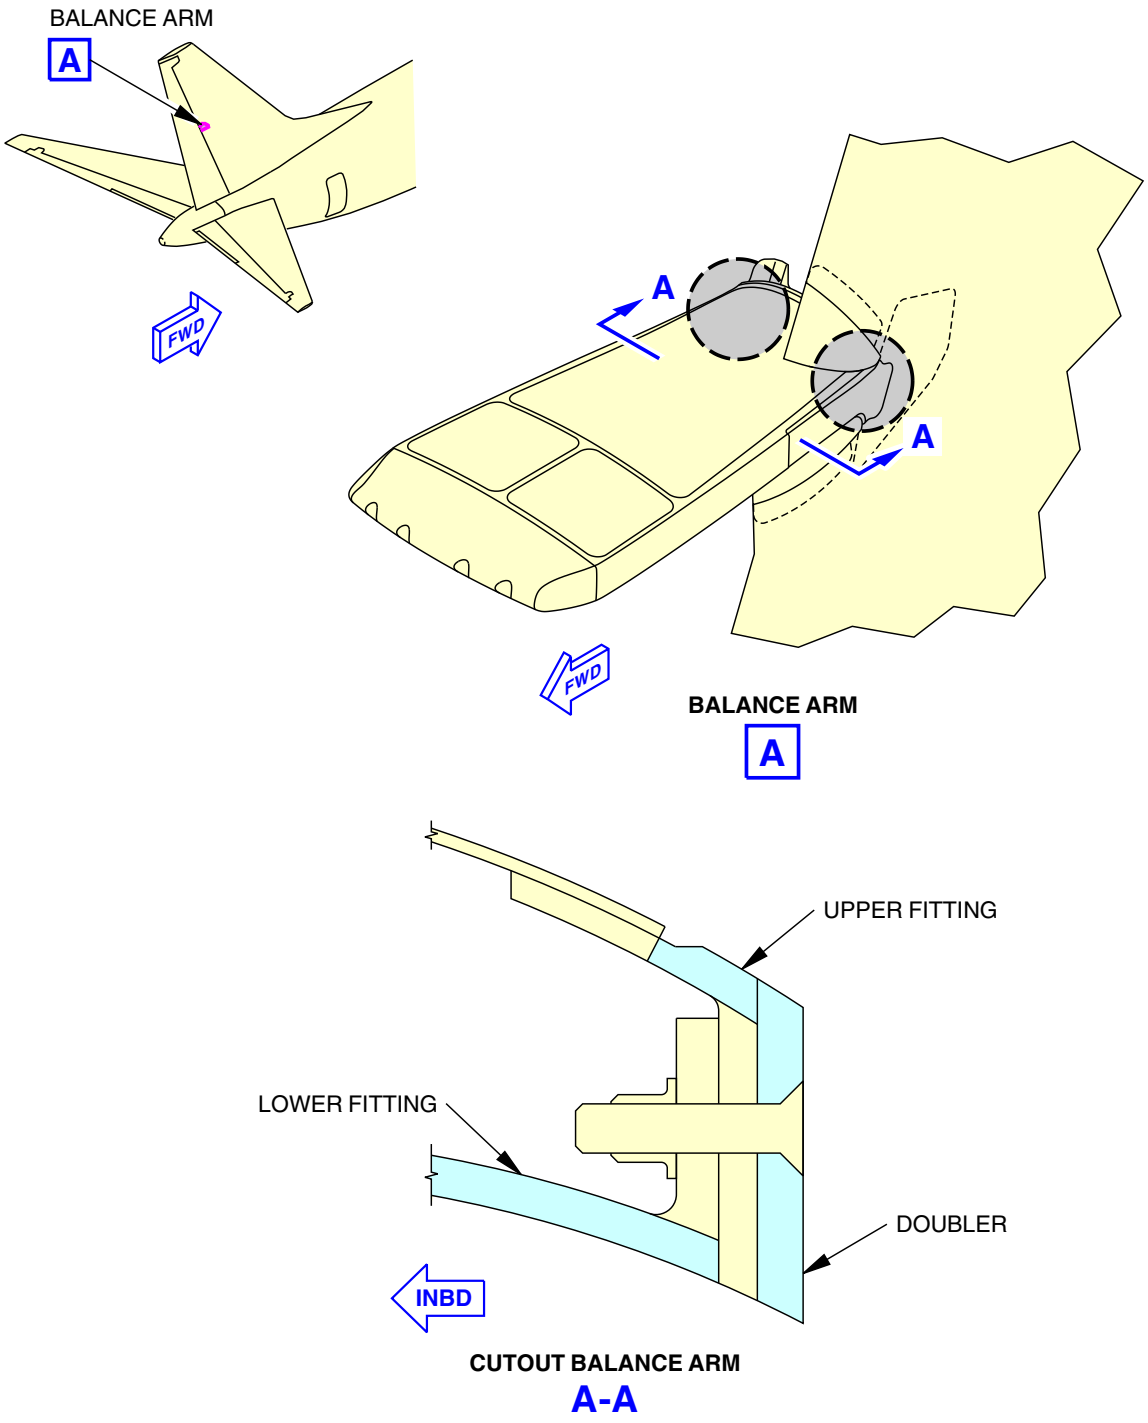

Rudder - Balance Arm
Figure 210/55-05-02-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-801

1. INTERNAL - GENERAL VISUAL: HORIZONTAL STABILIZER CENTER SECTION

(Figure 201)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-809	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
311	Area Aft of Pressure Bulkhead - Left
312	Area Aft of Pressure Bulkhead - Right

C. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door

D. Inspection

SUBTASK 55-05-03-010-001

(1) Open this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

SUBTASK 55-05-03-210-001

(2) Do a General Visual inspection of the horizontal stabilizer center section jackscrew fitting.

SUBTASK 55-05-03-910-001

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-809.


SUBTASK 55-05-03-410-001

(4) Close this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

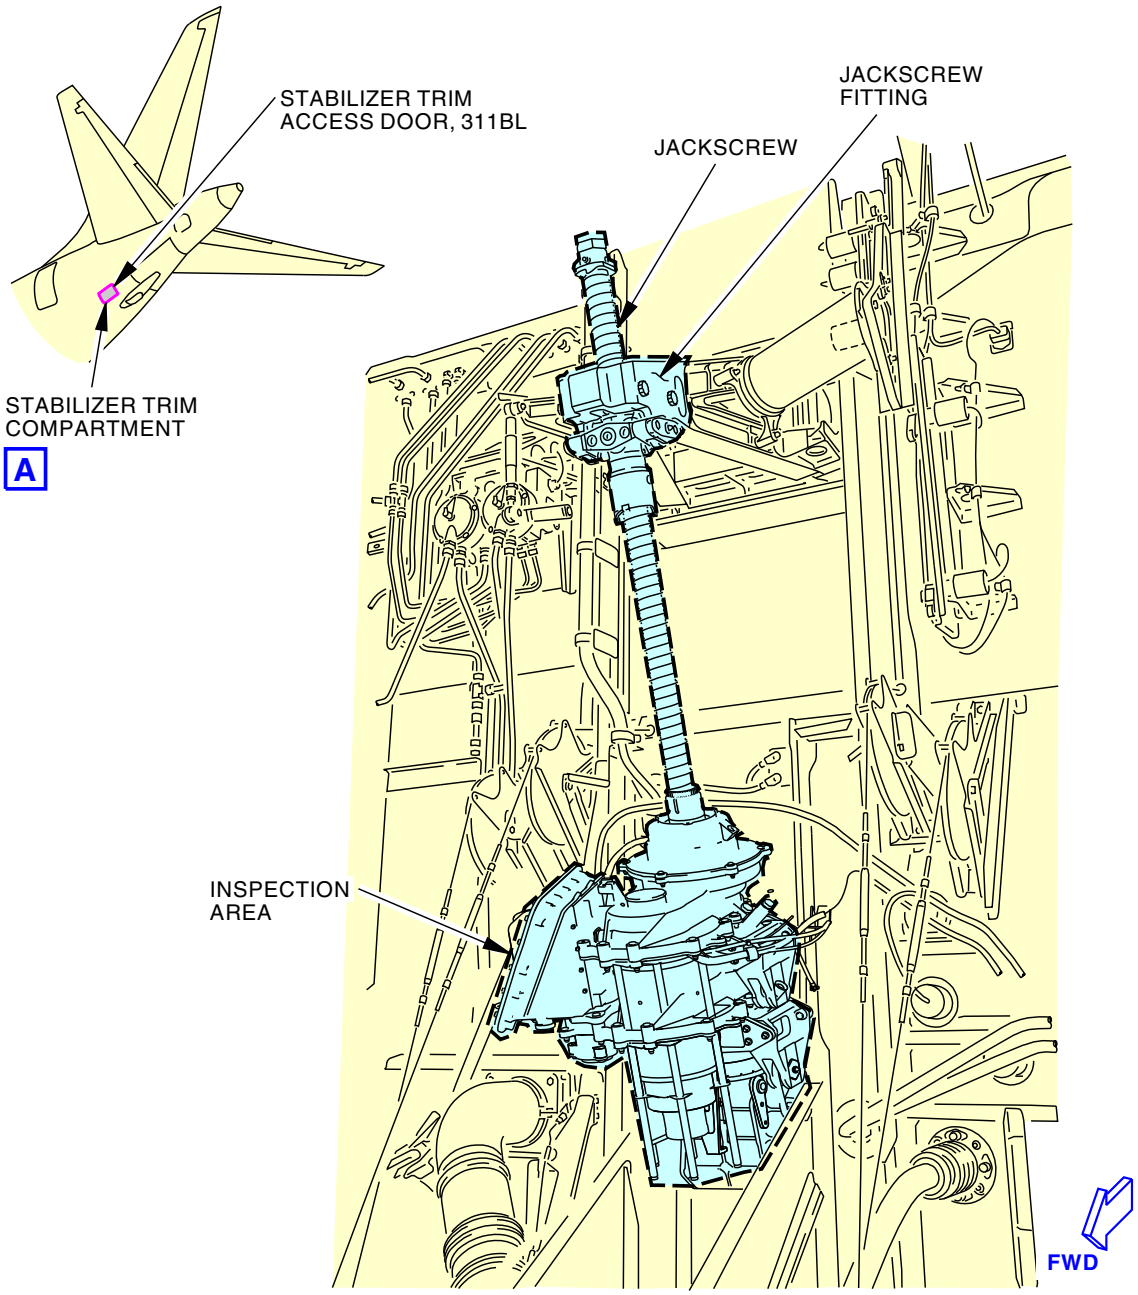

STABILIZER TRIM COMPARTMENT

A

2416319 S00061540436_V2

INTERNAL-GENERAL VISUAL: HORIZONTAL STABILIZER CENTER SECTION
Figure 201/55-05-03-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-802

2. INTERNAL - GENERAL VISUAL: STABILIZER TORSION BOX COMPARTMENT

(Figure 202)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
313	Stabilizer Torsion Box Compartment - Left
314	Stabilizer Torsion Box Compartment - Right

C. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door
S3102	Stabilizer Torsion Box Compartment Inspection

D. Inspection

SUBTASK 55-05-03-010-002

(1) Open this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

Special Access:

Number	Name/Location
S3102	Stabilizer Torsion Box Compartment Inspection

NOTE: Adjust stabilizer trim as required. Remove gap seal and rear spar sliding seal to inspect pivot fittings.

SUBTASK 55-05-03-210-002

(2) Do a General Visual inspection of the horizontal stabilizer center section front spar, rear spar, pivot fittings, and primary and secondary thrust beams.

SUBTASK 55-05-03-910-002

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.


SUBTASK 55-05-03-410-002

(4) Close this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

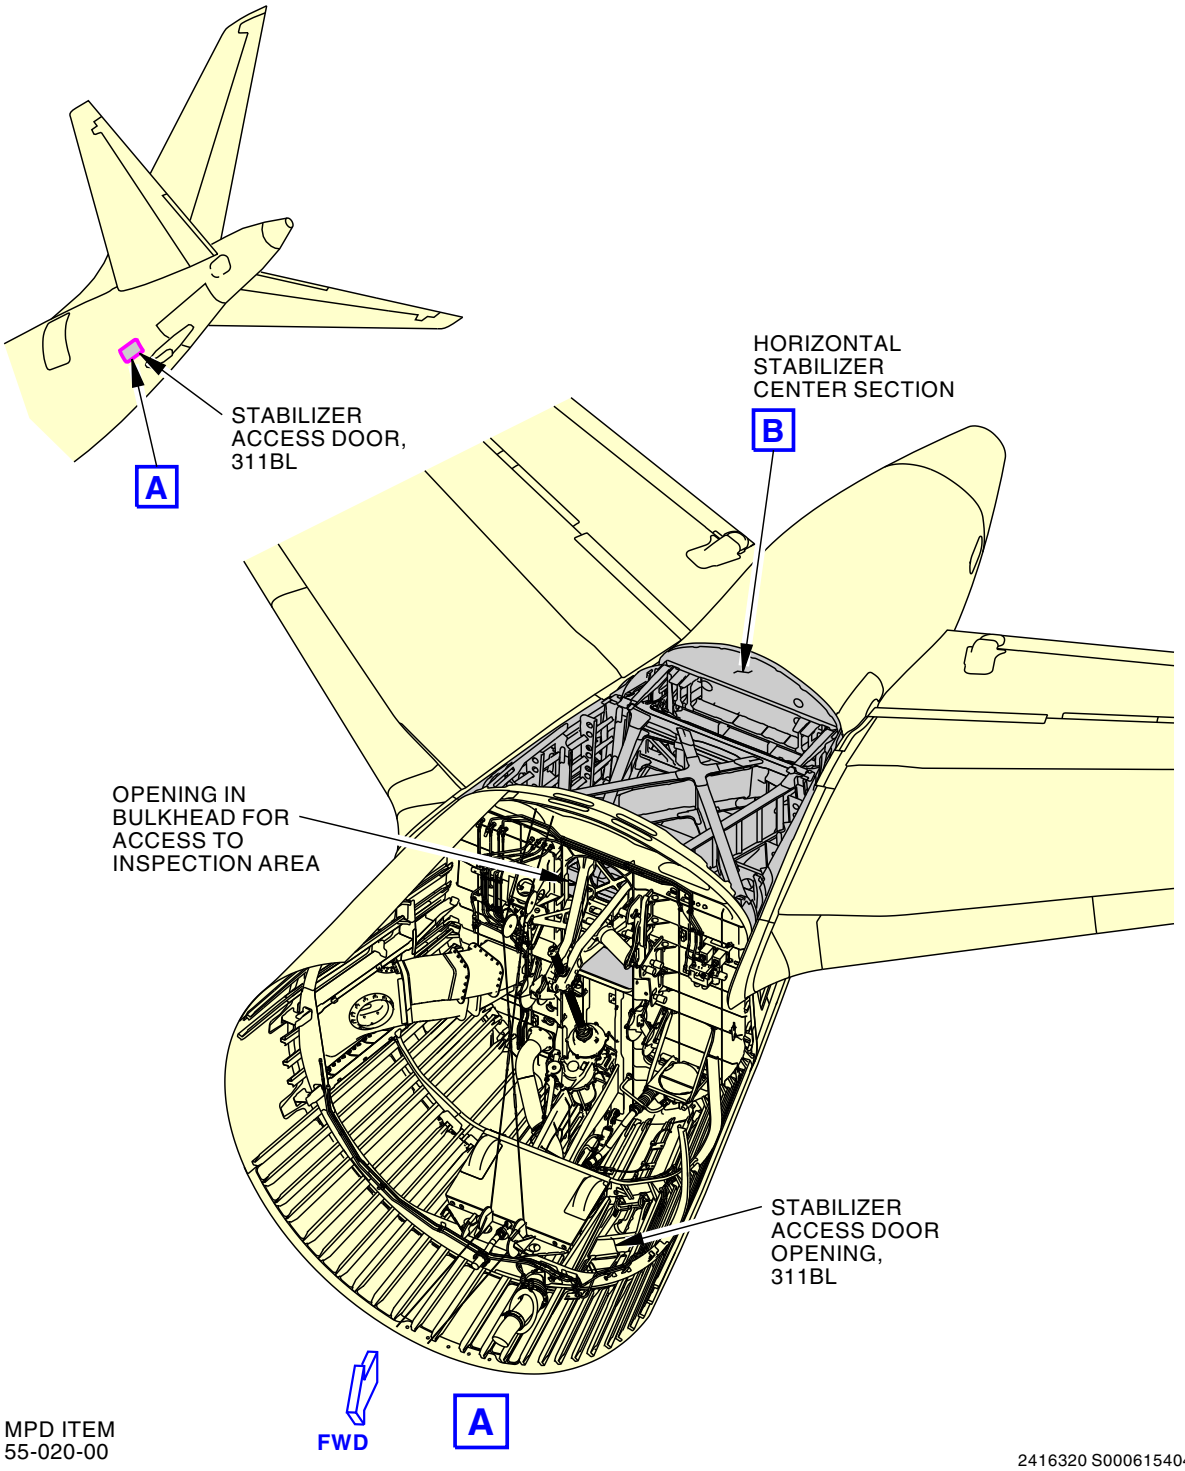

INTERNAL-GENERAL VISUAL: STABILIZER TORSION BOX COMPARTMENT
Figure 202/55-05-03-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

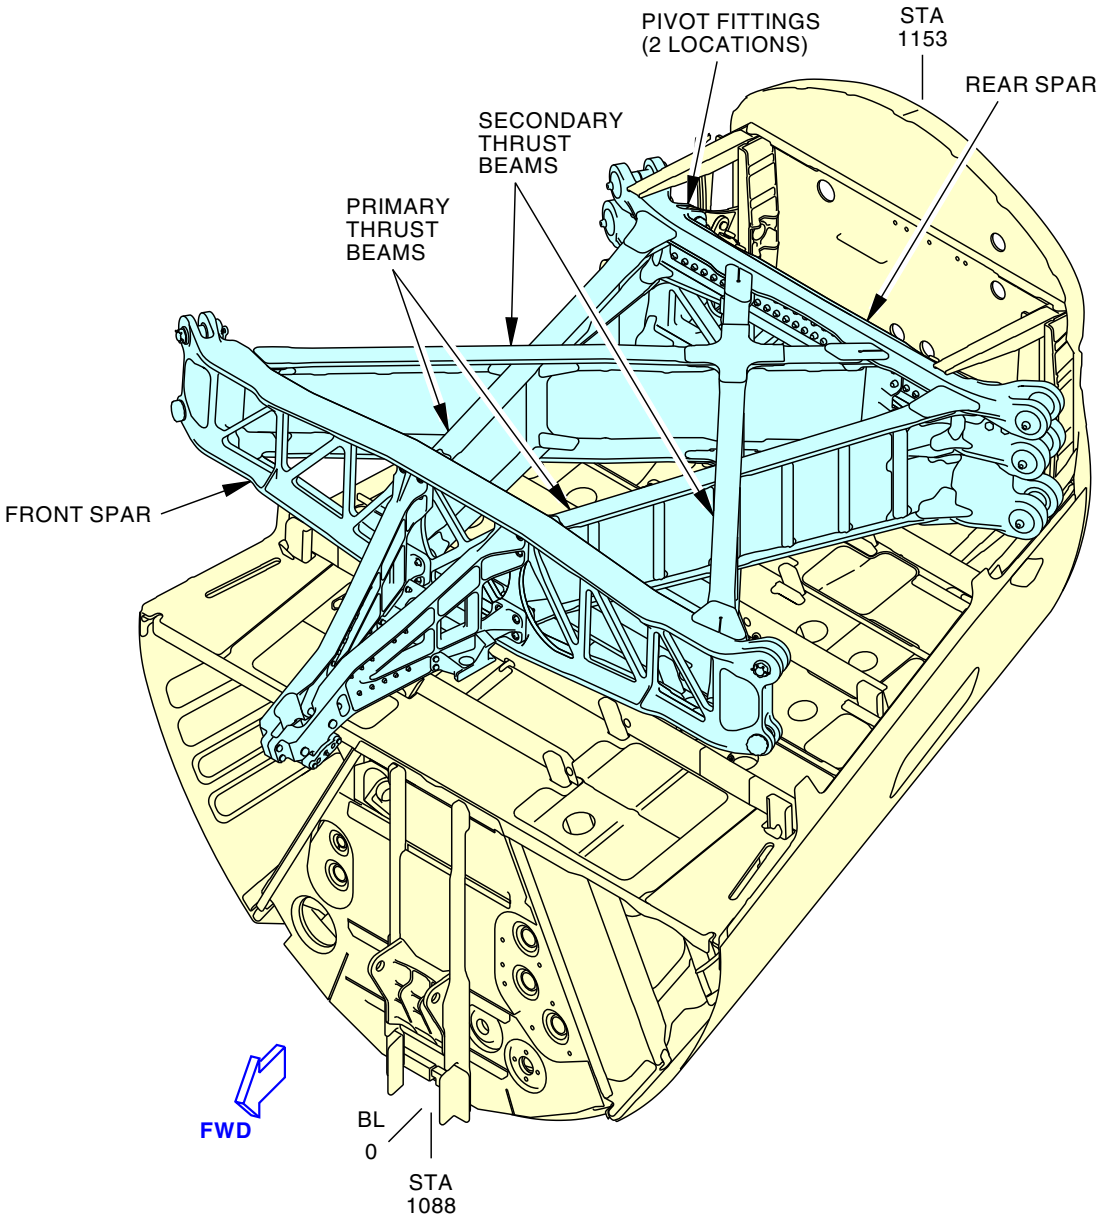

HORIZONTAL STABILIZER CENTER SECTION

B

MPD ITEM
55-020-00

2416321 S00061540439_V1

INTERNAL-GENERAL VISUAL: STABILIZER TORSION BOX COMPARTMENT
Figure 202/55-05-03-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-803

3. INTERNAL - GENERAL VISUAL: VERTICAL FIN LEADING EDGE

(Figure 203)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-806	737-7/8/8200/9 Basic Task Description (P/B 201)
55-33-11-000-801	Vertical Stabilizer (Fin) Leading Edge Removal (P/B 401)
55-33-11-400-801	Vertical Stabilizer (Fin) Leading Edge Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

D. Access Panels

Number	Name/Location
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door

E. Inspection

SUBTASK 55-05-03-010-003

(1) Open these access panels:

(TASK 55-33-11-000-801)

Number	Name/Location
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

SUBTASK 55-05-03-010-023

(2) Open these access panels:

Number	Name/Location
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-03-210-003

(3) Do a General Visual inspection of the forward side of the vertical fin front spar, including front spar chords, webs, and terminal fittings.

SUBTASK 55-05-03-910-003

(4) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-806.

SUBTASK 55-05-03-410-031

(5) Close these access panels:

Number	Name/Location
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door

SUBTASK 55-05-03-410-003

(6) Close these access panels:

(TASK 55-33-11-400-801)


Number	Name/Location
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

SUBTASK 55-05-03-390-002

(7) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

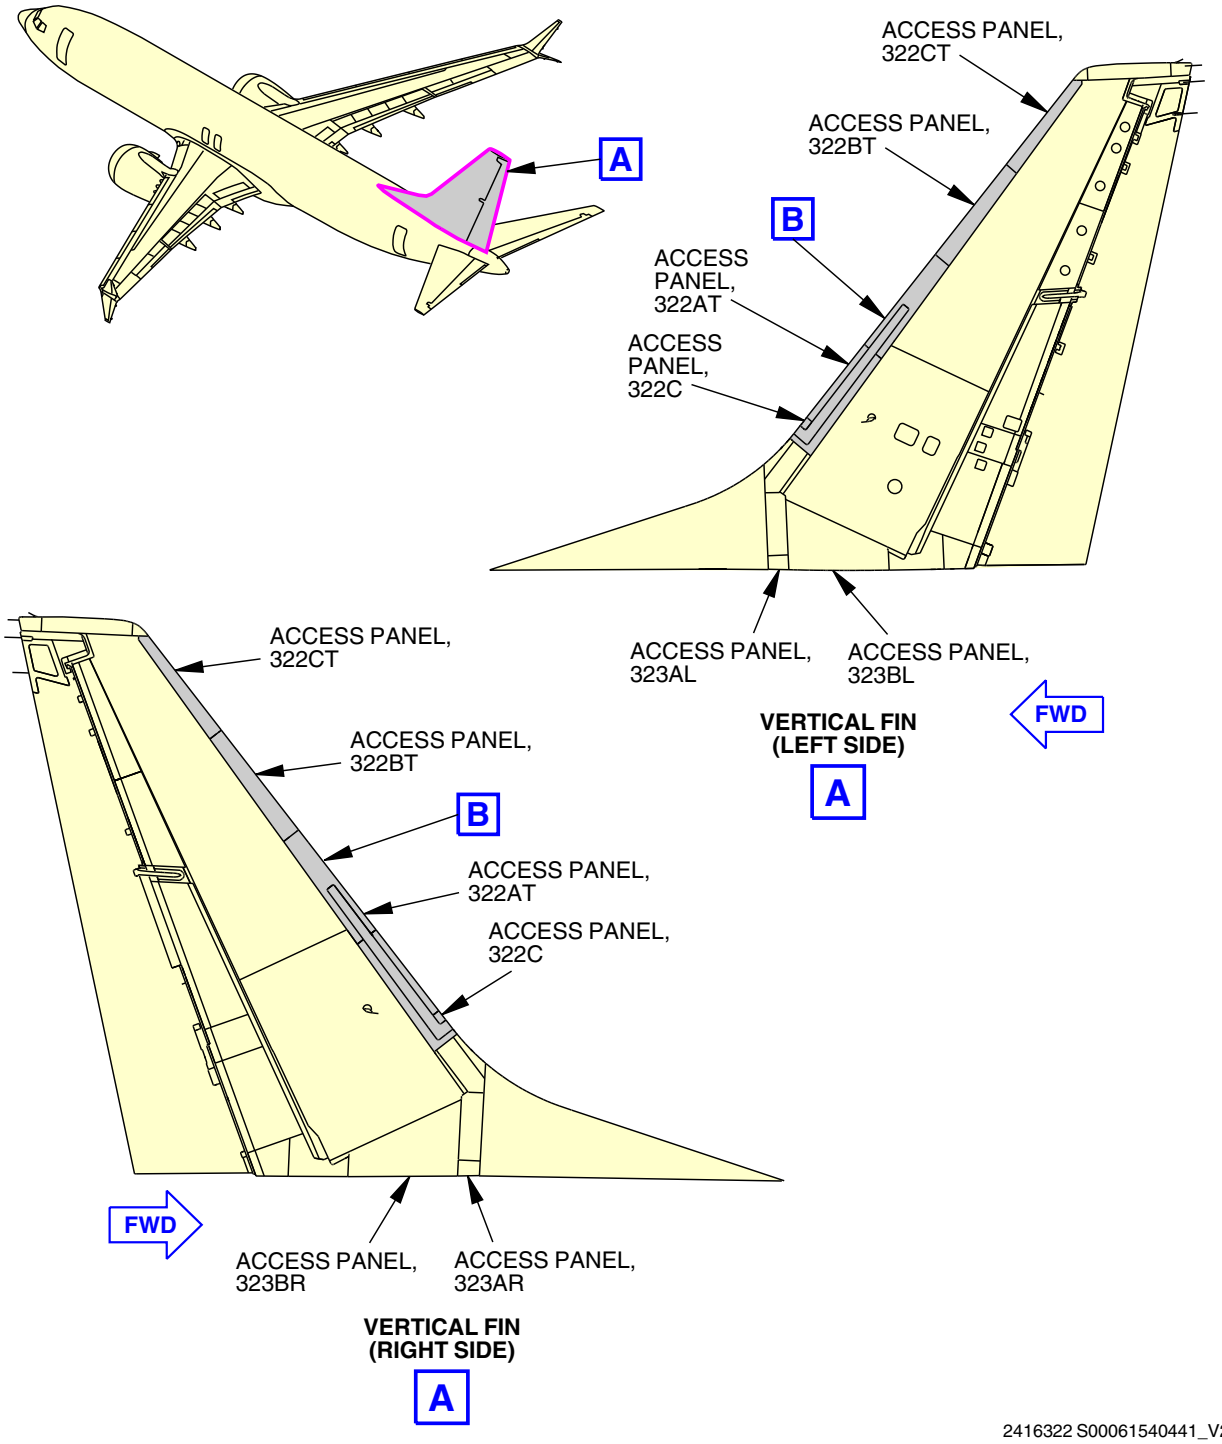

2416322 S00061540441_V2

INTERNAL-GENERAL VISUAL: VERTICAL FIN LEADING EDGE
Figure 203/55-05-03-990-803 (Sheet 1 of 3)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

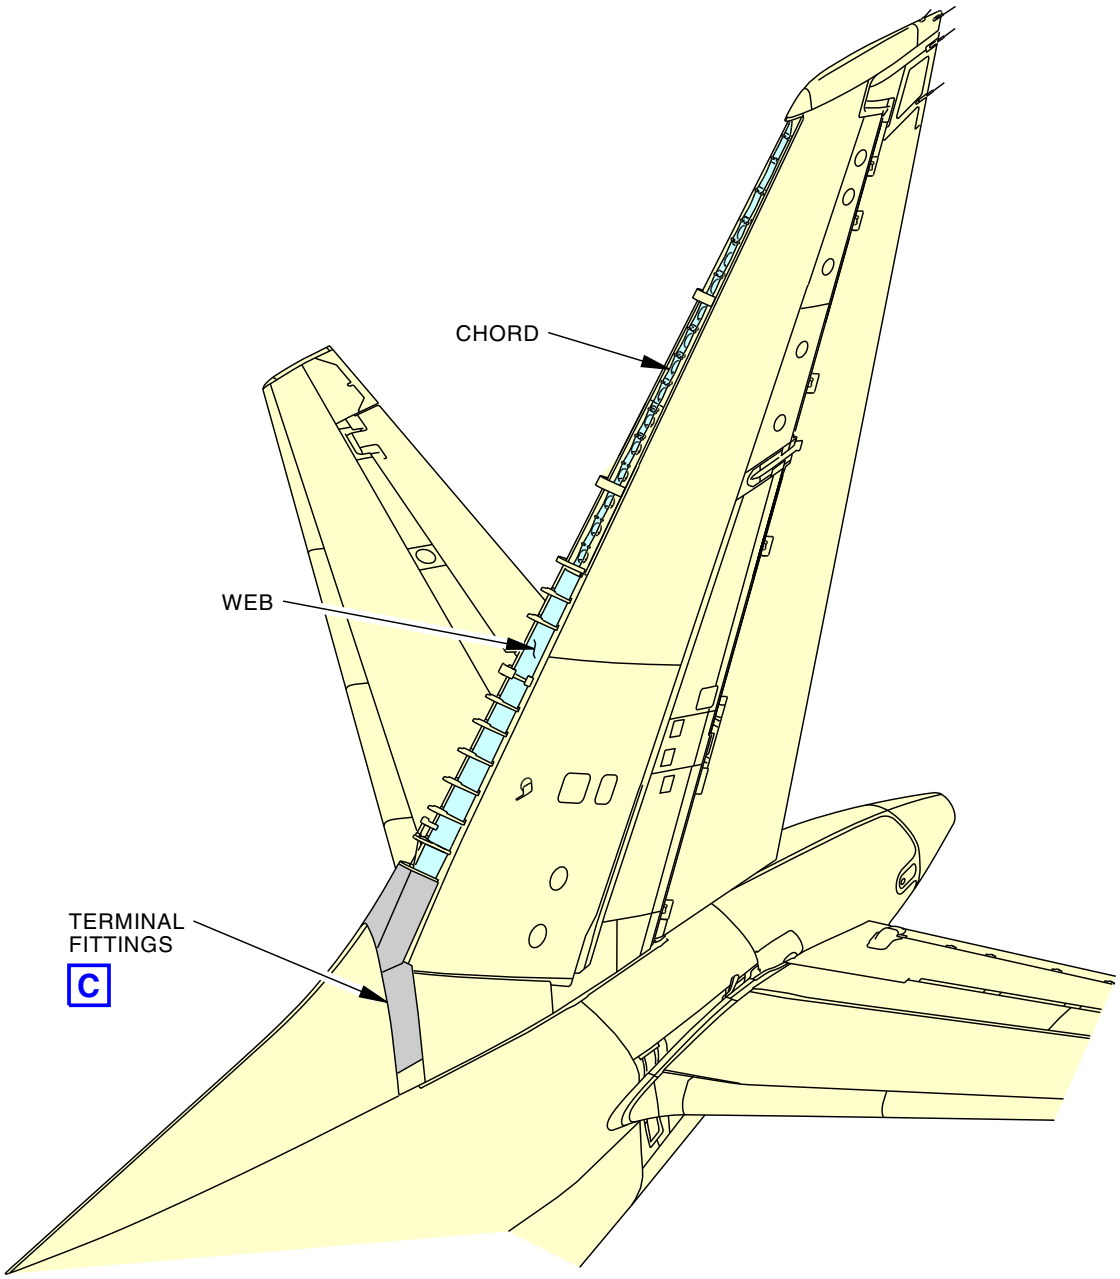

2416323 S00061540442_V1

INTERNAL-GENERAL VISUAL: VERTICAL FIN LEADING EDGE
Figure 203/55-05-03-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

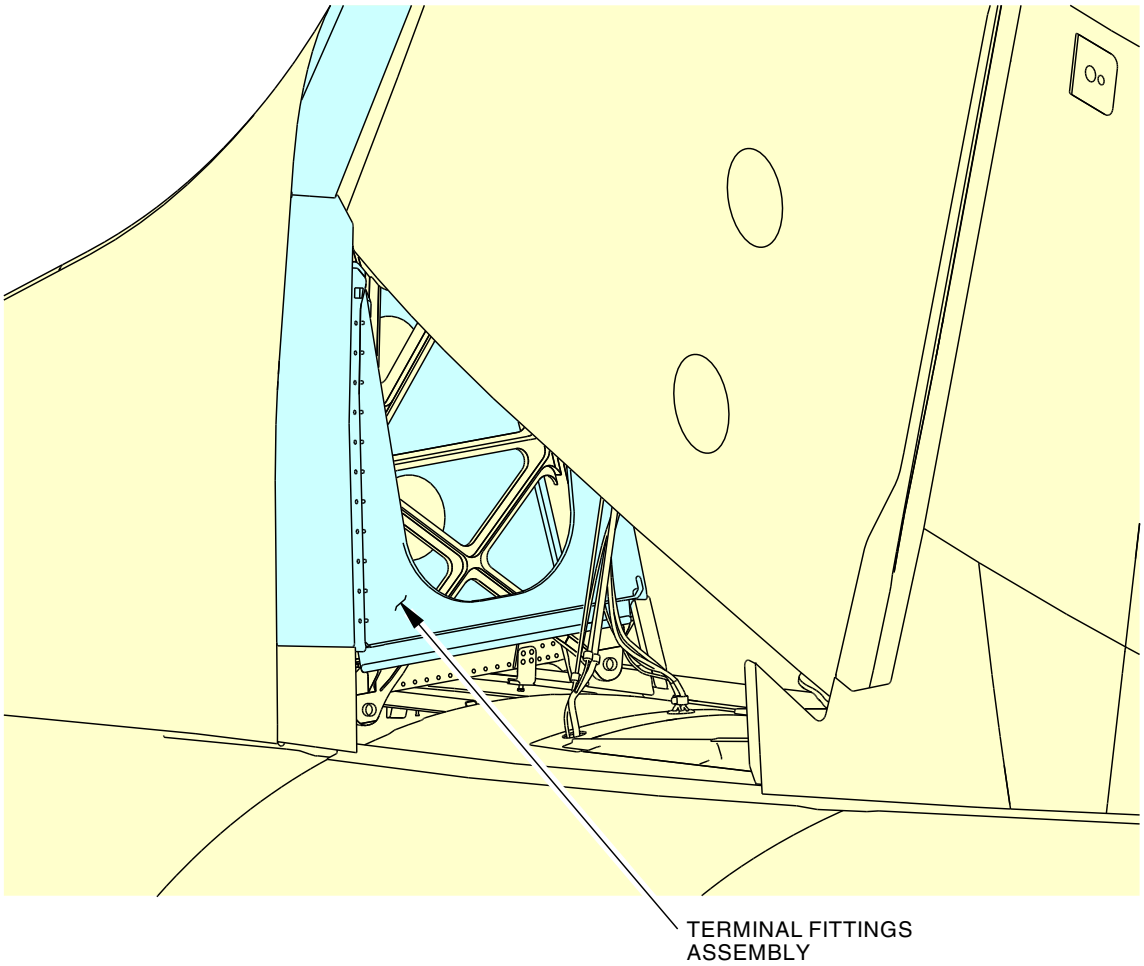

2416324 S00061540443_V1

INTERNAL-GENERAL VISUAL: VERTICAL FIN LEADING EDGE
Figure 203/55-05-03-990-803 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-804

4. INTERNAL - GENERAL VISUAL: VERTICAL FIN

(Figure 204)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)
55-33-11-000-801	Vertical Stabilizer (Fin) Leading Edge Removal (P/B 401)
55-33-11-400-801	Vertical Stabilizer (Fin) Leading Edge Installation (P/B 401)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
323	Vertical Fin - Front Spar To Rear Spar

D. Access Panels

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access
S3232	Vertical Fin Inspection

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Inspection

SUBTASK 55-05-03-040-001

WARNING REMOVE THE ELECTRICAL POWER FROM EACH HF COMMUNICATION SYSTEM BEFORE YOU REMOVE THE LEADING EDGE SECTIONS. HF SIGNALS CAN CAUSE ELECTRICAL SHOCKS AND INJURY TO PERSONS.

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

SUBTASK 55-05-03-010-004

(2) Open these access panels:

(TASK 55-33-11-000-801)

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access

Special Access:

Number	Name/Location
S3232	Vertical Fin Inspection

NOTE: Remove upper removable web. Pin removal is not required for terminal fitting inspection.

SUBTASK 55-05-03-210-004

(3) Do a General Visual inspection of the vertical fin from front spar to rear spar, including spar chords and webs, inspar skins, lower closure rib, and rear spar terminal fittings.

SUBTASK 55-05-03-910-004

(4) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-03-410-004

(5) Close these access panels:

(TASK 55-33-11-400-801)

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door
323DL	Vertical Fin, Access
323EL	Vertical Fin, Access
323FL	Vertical Fin, Access
323GL	Vertical Fin, Access

SUBTASK 55-05-03-390-003

(6) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

SUBTASK 55-05-03-860-001

(7) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2


Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

END OF TASK


ECCN 9E991 BOEING PROPRIETARY - See title page for details

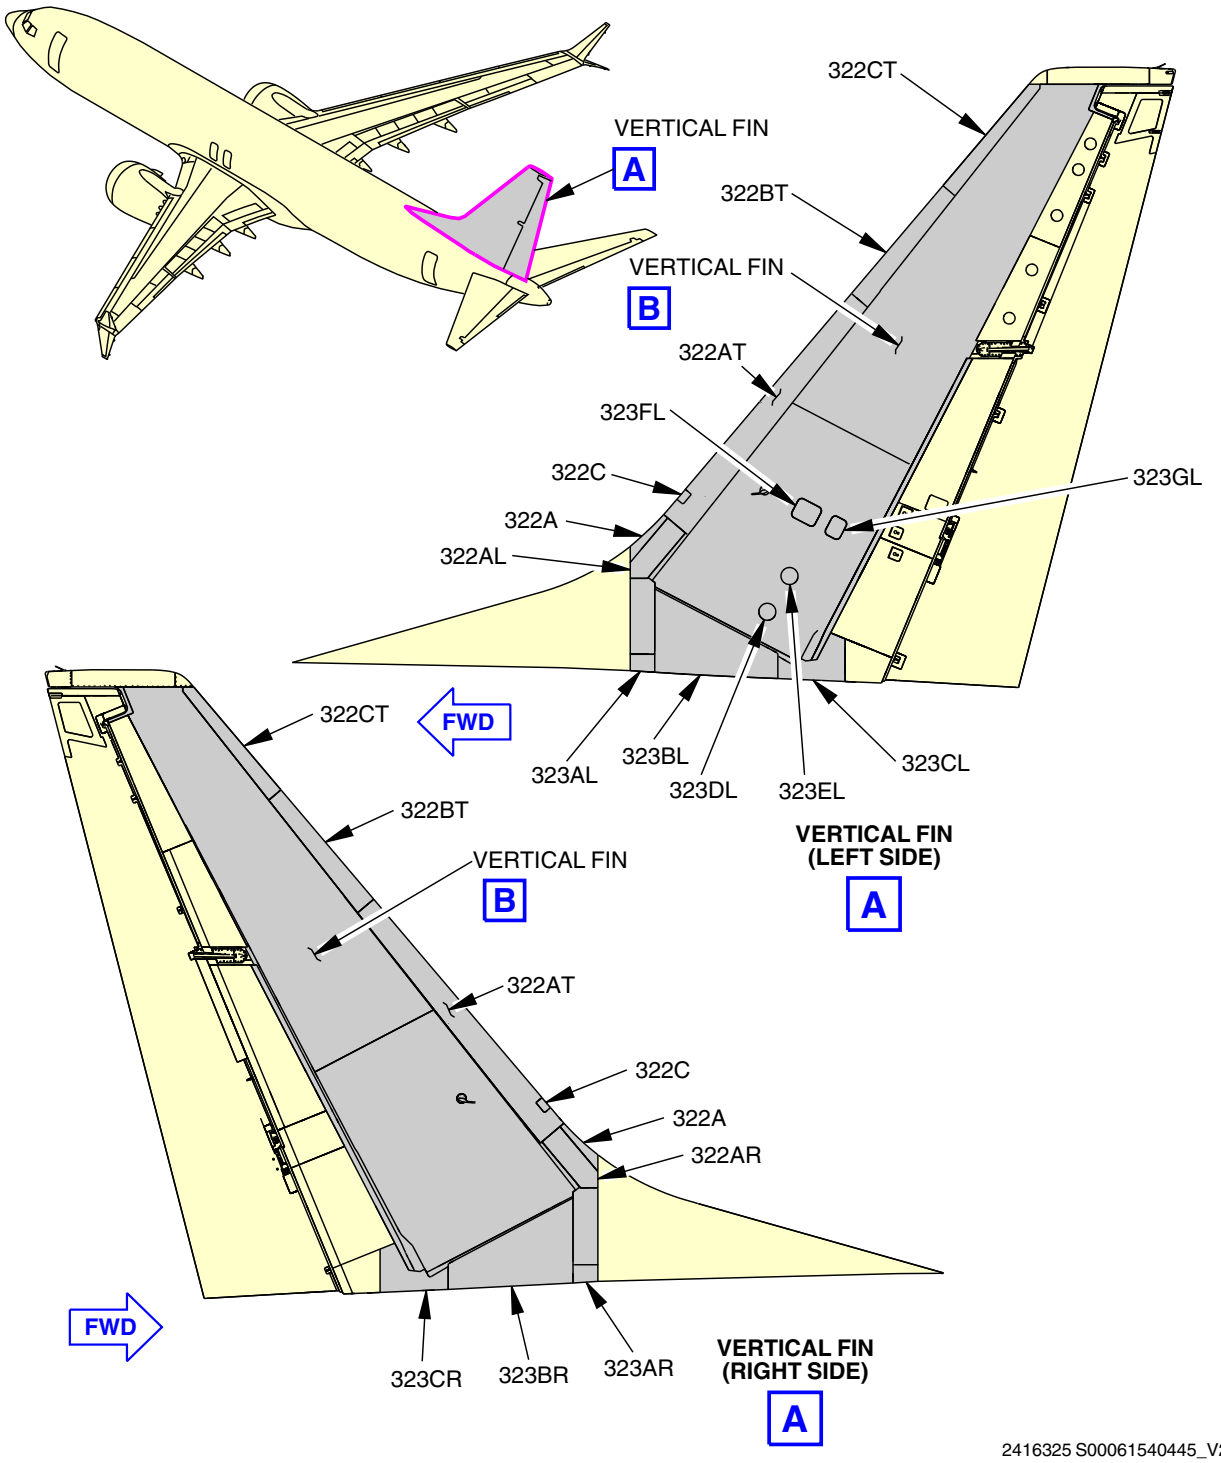

2416325 S00061540445_V2

INTERNAL-GENERAL VISUAL: VERTICAL FIN
Figure 204/55-05-03-990-804 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

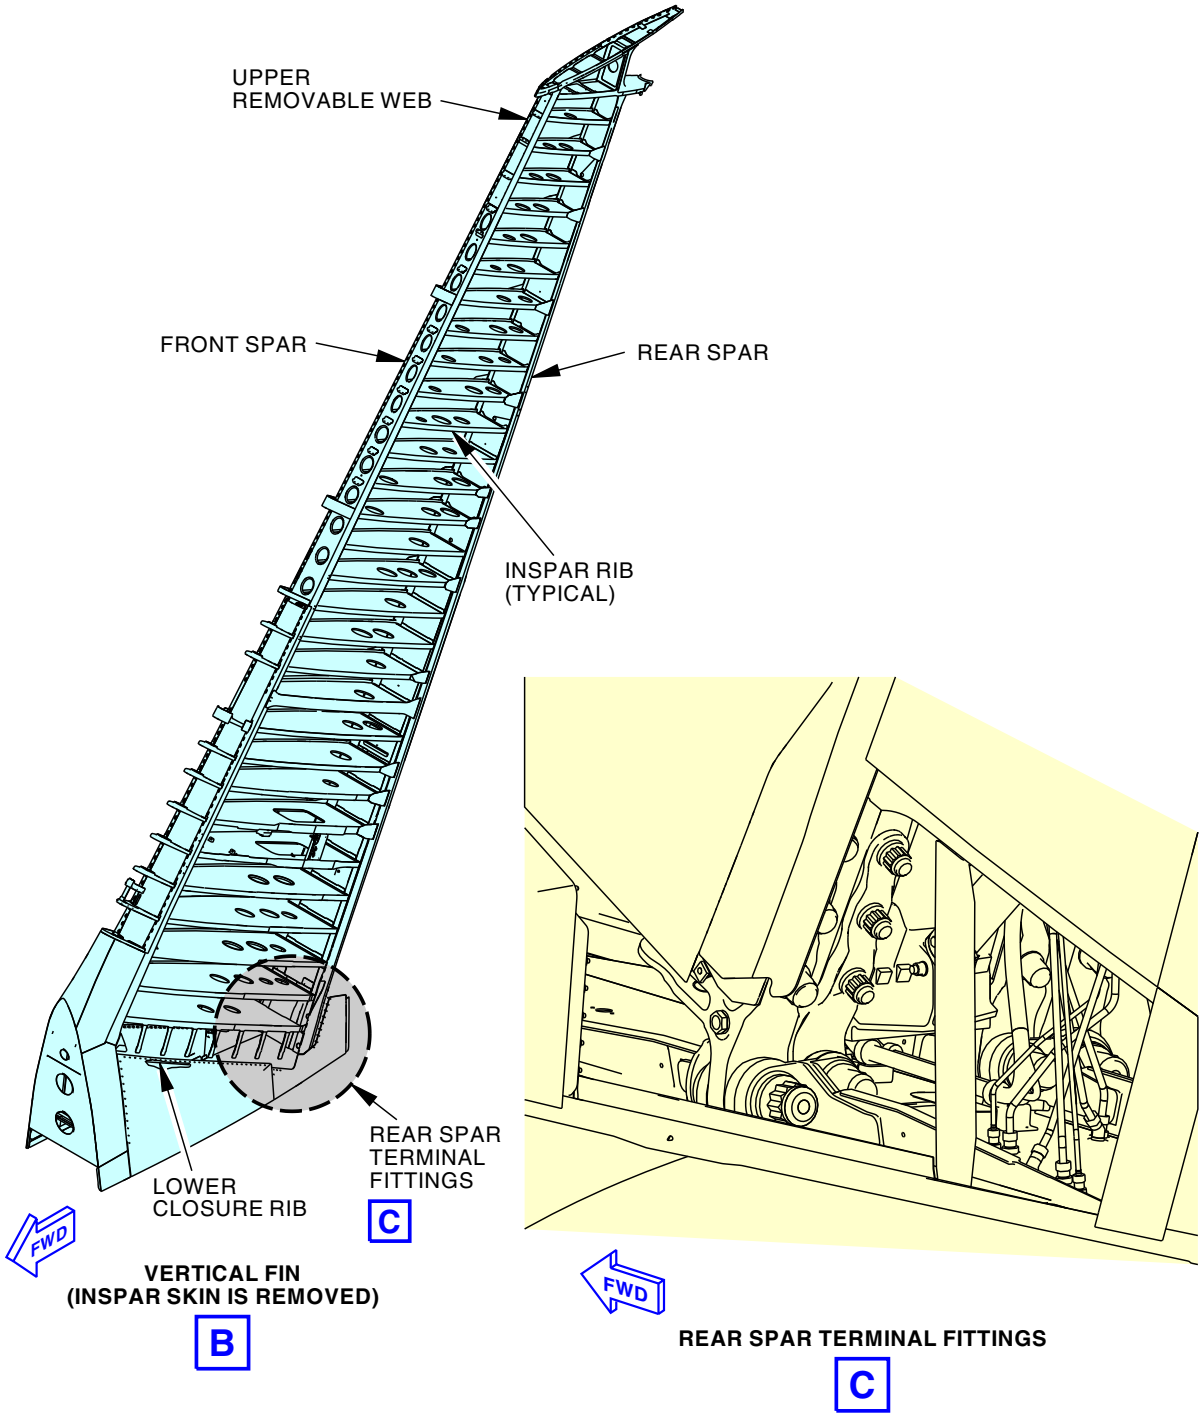

2416326 S00061540446_V1

INTERNAL-GENERAL VISUAL: VERTICAL FIN
Figure 204/55-05-03-990-804 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-805

5. INTERNAL - GENERAL VISUAL: VERTICAL FIN TRAILING EDGE

Figure 205

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-806	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge

C. Access Panels

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
324AL	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324JL	Vertical Fin, Access
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access

D. Inspection

SUBTASK 55-05-03-010-005

(1) Open these access panels:

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
324AL	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324JL	Vertical Fin, Access
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access

SUBTASK 55-05-03-210-005

(2) Do a General Visual inspection of the aft side of vertical fin rear spar, including rear spar chords and webs, and rudder hinge ribs and thrust brace.

SUBTASK 55-05-03-910-005

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-806.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


SUBTASK 55-05-03-410-005

(4) Close these access panels:

Number	Name/Location
323CL	Vertical Fin, Rear Spar Access Door
324AL	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324JL	Vertical Fin, Access
324KL	Vertical Fin, Access
324LL	Vertical Fin, Access
324ML	Vertical Fin, Access
324NL	Vertical Fin, Access
324PL	Vertical Fin, Access

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

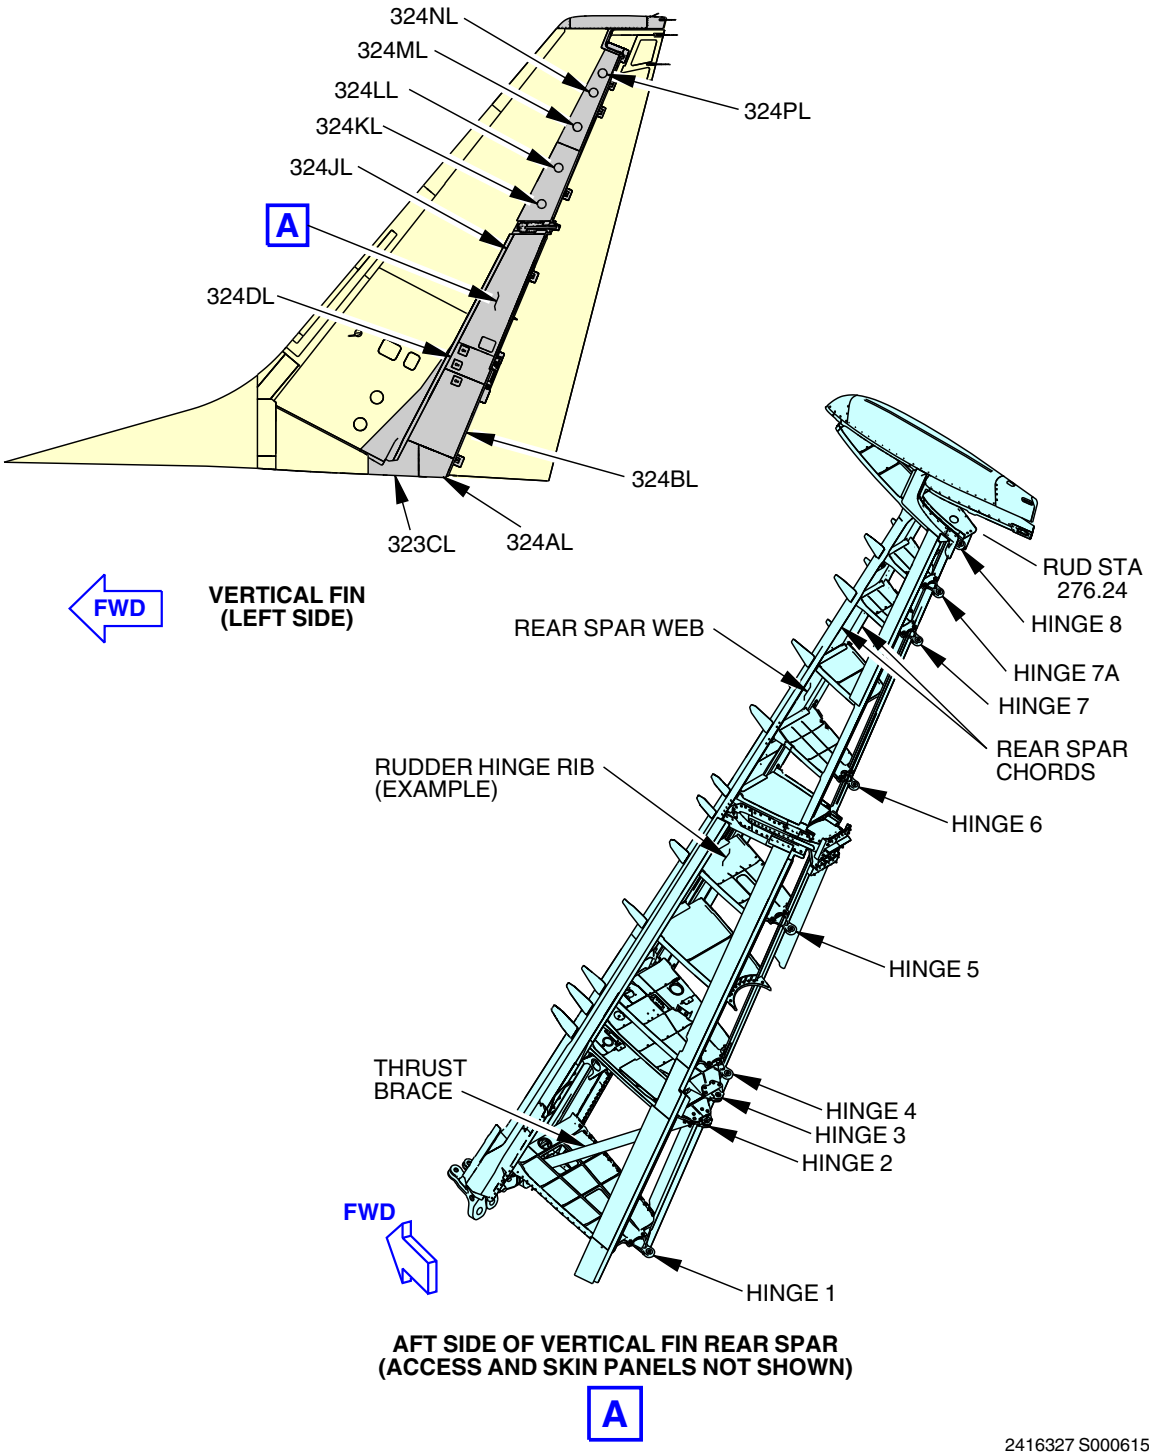

INTERNAL-GENERAL VISUAL: VERTICAL FIN TRAILING EDGE
Figure 205/55-05-03-990-805

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-806

6. INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER LEADING EDGE

(Figure 206)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
27-41-11-000-801	Horizontal Stabilizer Removal (P/B 401)
27-41-11-400-801	Horizontal Stabilizer Installation (P/B 401)
27-41-21-000-801	Horizontal Stabilizer Leading Edge Removal (P/B 401)
27-41-21-400-801	Horizontal Stabilizer Leading Edge Installation (P/B 401)
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge

C. Access Panels

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
S3311	Left Horizontal Stabilizer Leading Edge Inspection

D. Prepare for Inspection

SUBTASK 55-05-03-010-024

(1) To remove the applicable leading edge access panels for the horizontal stabilizer, refer to: Horizontal Stabilizer Leading Edge Removal, TASK 27-41-21-000-801

Open these access panels:

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

Special Access:

Number	Name/Location
S3311	Left Horizontal Stabilizer Leading Edge Inspection

SUBTASK 55-05-03-010-025

(2) To install the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

SUBTASK 55-05-03-010-033

(3) To remove the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Inspection

SUBTASK 55-05-03-210-006

(1) Do a General Visual inspection of the forward side of front spar, including front spar chords and webs, terminal fittings, and center section front spar lugs.

SUBTASK 55-05-03-910-006

(2) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 55-05-03-410-046

(1) To install the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

SUBTASK 55-05-03-410-034

(2) To remove the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

SUBTASK 55-05-03-410-033

(3) To install the applicable leading edge access panels for the horizontal stabilizer, refer to: Horizontal Stabilizer Leading Edge Installation, TASK 27-41-21-400-801

Restore Special Access:


Number	Name/Location
S3311	Left Horizontal Stabilizer Leading Edge Inspection

Close these access panels:

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
331AZ	Horizontal Stabilizer, Access Panel, Inboard L.E. Closure Rib
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

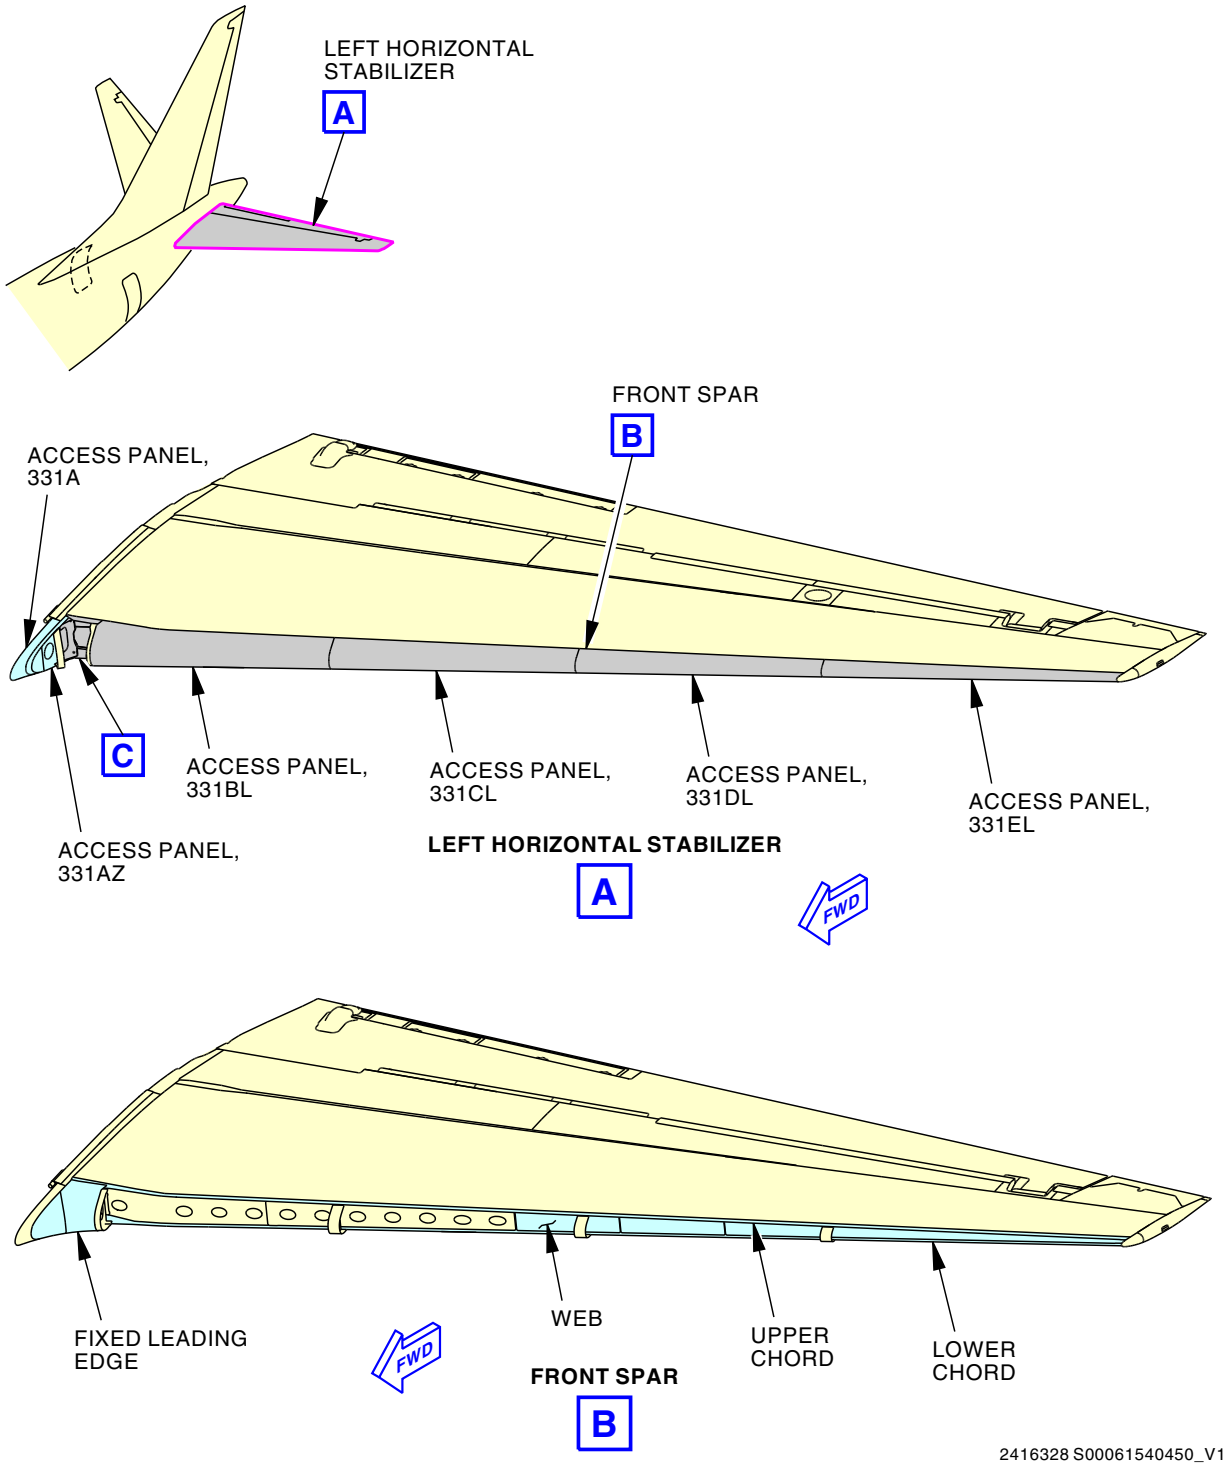

INTERNAL-GENERAL VISUAL: LEFT HORIZONTAL STABILIZER LEADING EDGE
Figure 206/55-05-03-990-806 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

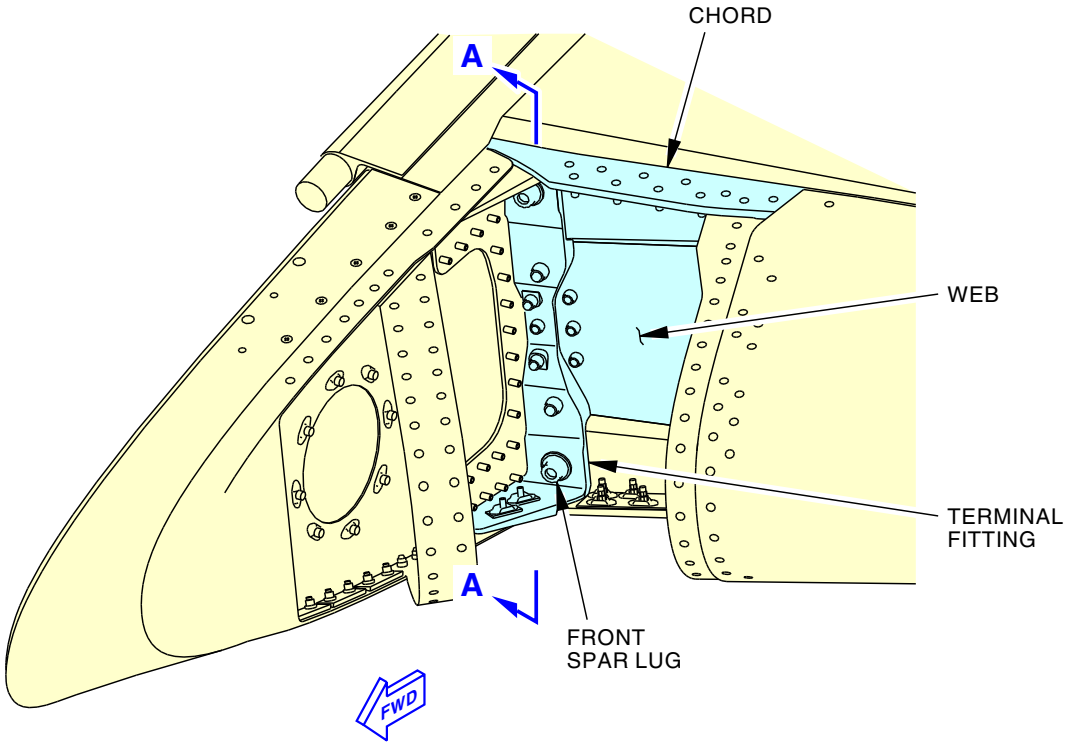

(FIXED LEADING EDGE IS REMOVED)

C

2416329 S00061540451_V2

INTERNAL-GENERAL VISUAL: LEFT HORIZONTAL STABILIZER LEADING EDGE
Figure 206/55-05-03-990-806 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-807

7. INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER LEADING EDGE

(Figure 207)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
27-41-11-000-801	Horizontal Stabilizer Removal (P/B 401)
27-41-11-400-801	Horizontal Stabilizer Installation (P/B 401)
27-41-21-000-801	Horizontal Stabilizer Leading Edge Removal (P/B 401)
27-41-21-400-801	Horizontal Stabilizer Leading Edge Installation (P/B 401)
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
341	Right Horizontal Stabilizer - Removable Leading Edge

C. Access Panels

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
S3411	Right Horizontal Stabilizer Leading Edge Inspection

D. Prepare for Inspection

SUBTASK 55-05-03-010-007

(1) To remove the applicable leading edge access panels for the horizontal stabilizer, refer to: Horizontal Stabilizer Leading Edge Removal, TASK 27-41-21-000-801

Open these access panels:

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

Special Access:

Number	Name/Location
S3411	Right Horizontal Stabilizer Leading Edge Inspection

SUBTASK 55-05-03-010-026

(2) To install the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

SUBTASK 55-05-03-010-034

(3) To remove the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Inspection

SUBTASK 55-05-03-210-017

(1) Do a General Visual inspection of the forward side of front spar, including front spar chords and webs, terminal fittings, and center section front spar lugs.

SUBTASK 55-05-03-910-023

(2) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804

F. Put the Airplane Back to Its Usual Condition

SUBTASK 55-05-03-410-047

(1) To install the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

SUBTASK 55-05-03-410-036

(2) To remove the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

SUBTASK 55-05-03-410-035

(3) To install the applicable leading edge access panels for the horizontal stabilizer, refer to: Horizontal Stabilizer Leading Edge Installation, TASK 27-41-21-400-801

Restore Special Access:


Number	Name/Location
S3411	Right Horizontal Stabilizer Leading Edge Inspection

Close these access panels:

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body
341AZ	Horizontal Stabilizer, Access Panel - Inbd L.E. Closure Rib
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

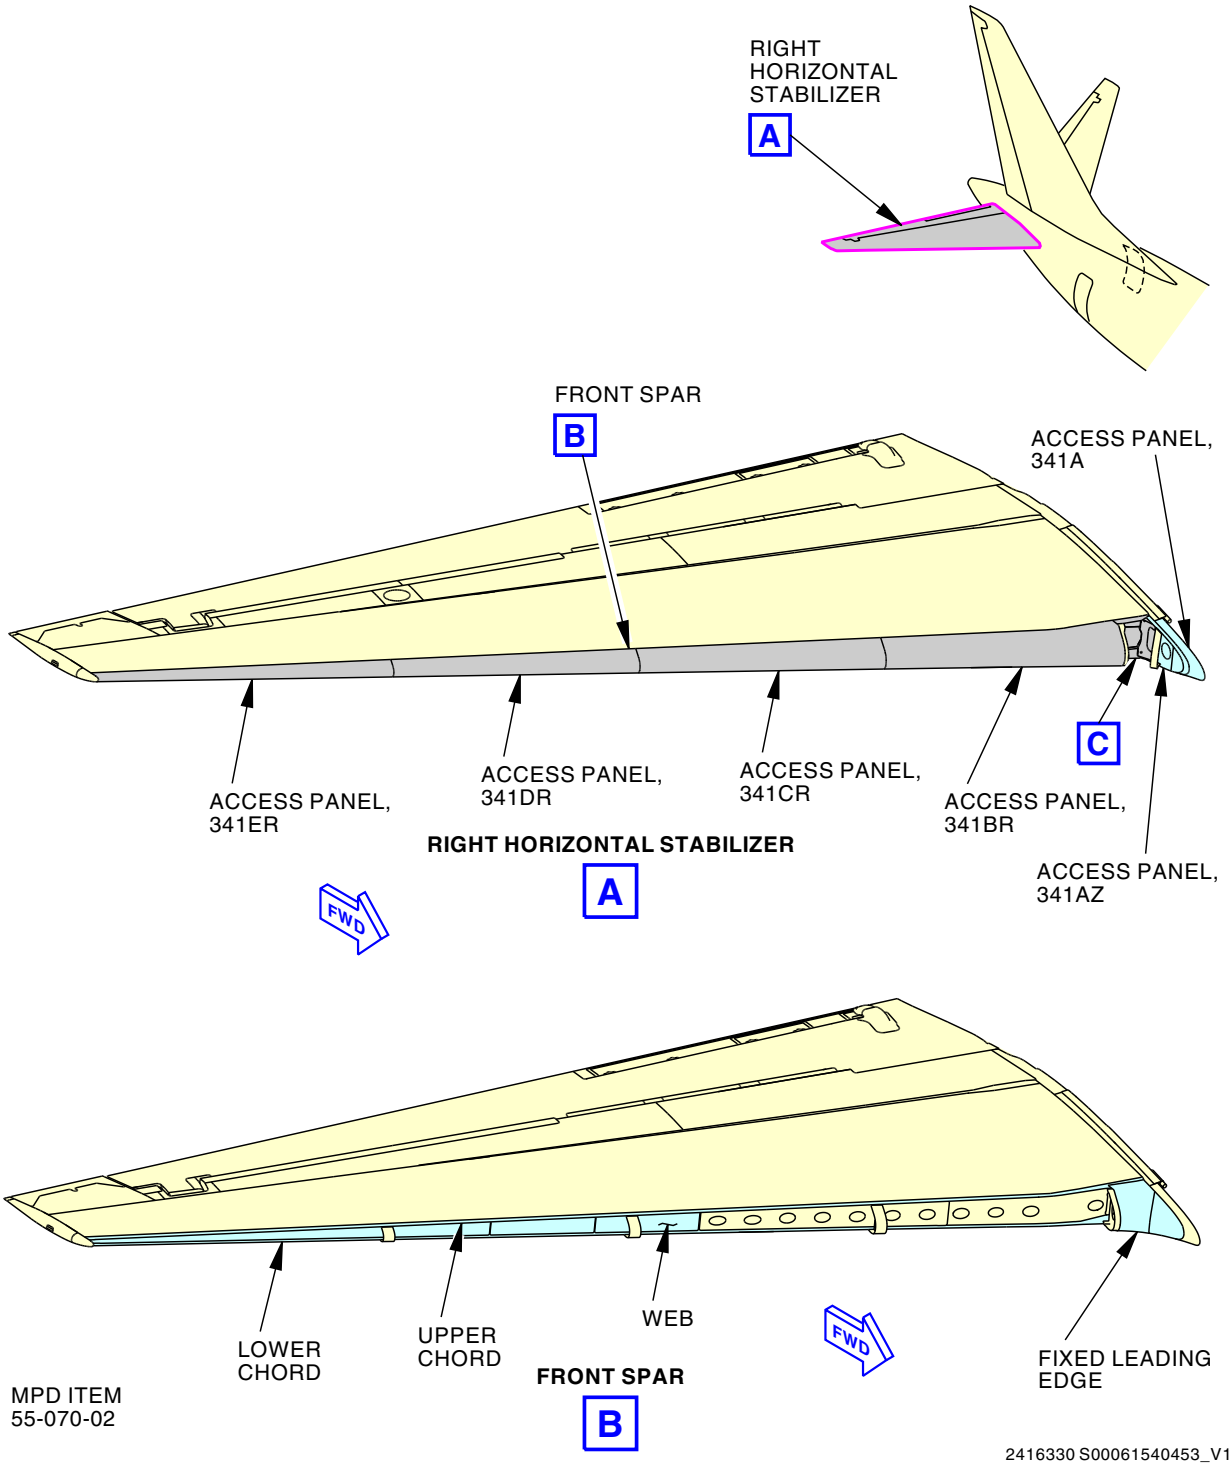

INTERNAL-GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER LEADING EDGE
Figure 207/55-05-03-990-807 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

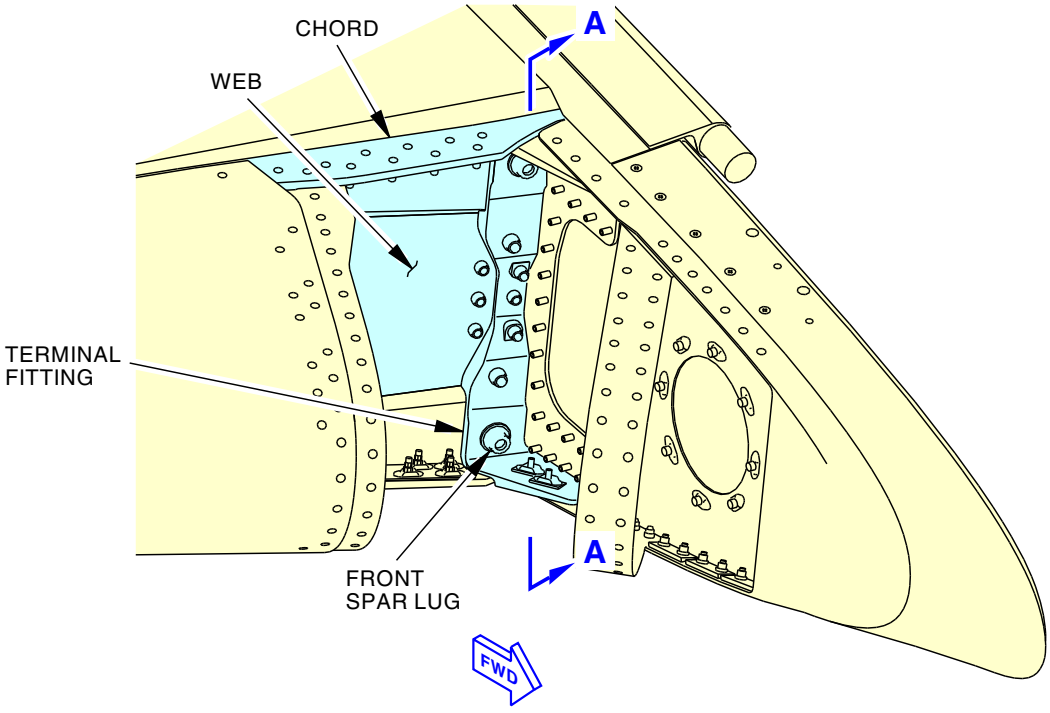

(FIXED LEADING EDGE IS REMOVED)

C

2416331 S00061540454_V2

INTERNAL-GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER LEADING EDGE
Figure 207/55-05-03-990-807 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-808

8. INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER LEADING EDGE

(Figure 208)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-801	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge

C. Access Panels

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body

D. Inspection

SUBTASK 55-05-03-010-008

(1) Open this access panel:

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body

NOTE: Bolt removal is not required.

SUBTASK 55-05-03-210-008

(2) Do a General Visual inspection of the left horizontal stabilizer front spar terminal fittings and center section front spar lugs.

SUBTASK 55-05-03-910-008

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-801.


SUBTASK 55-05-03-410-008


(4) Close this access panel:

Number	Name/Location
331A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

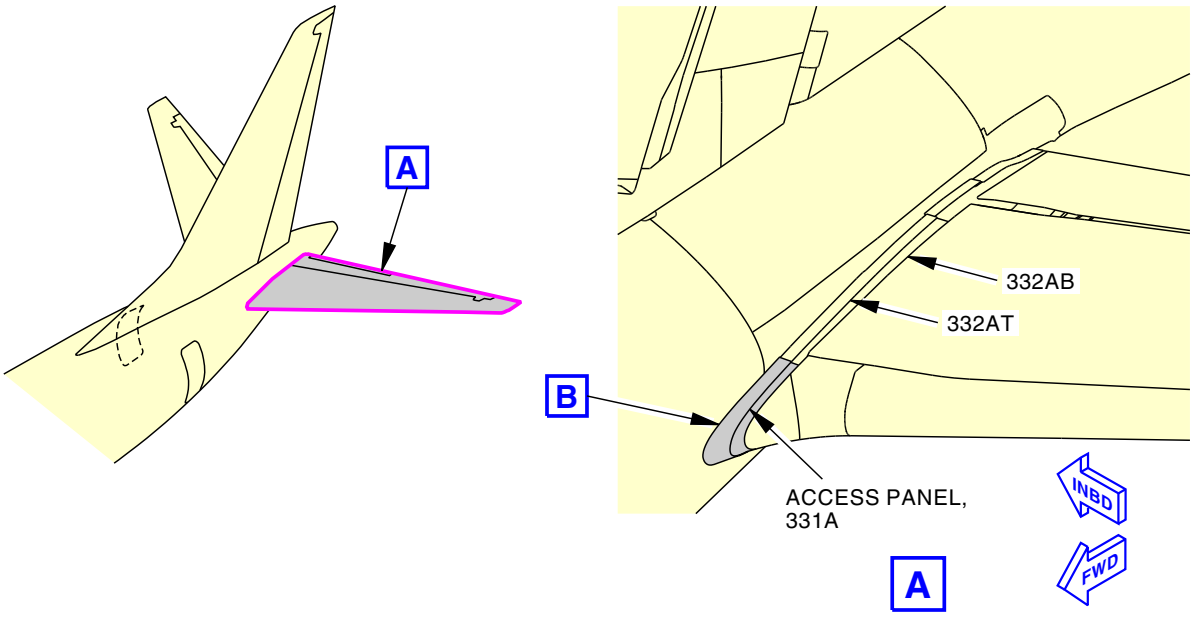

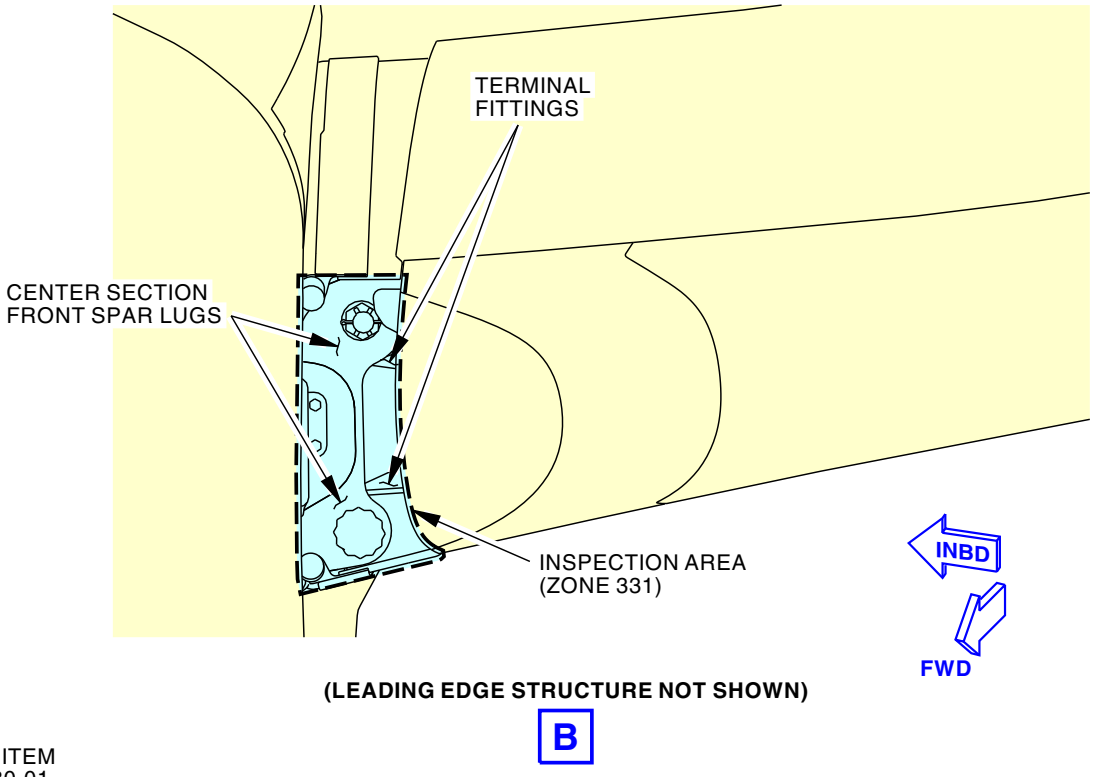

MPD ITEM
55-080-01

2416332 S00061540456_V1

Left Horizontal Stabilizer Leading Edge General Visual (Internal)
Figure 208/55-05-03-990-808

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-809

9. INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER LEADING EDGE

(Figure 209)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-801	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
341	Right Horizontal Stabilizer - Removable Leading Edge

C. Access Panels

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body

D. Inspection

SUBTASK 55-05-03-010-009

(1) Open this access panel:

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body

NOTE: Bolt removal is not required.

SUBTASK 55-05-03-210-009

(2) Do a General Visual inspection of the right horizontal stabilizer front spar terminal fittings and center section front spar lugs.

SUBTASK 55-05-03-910-009

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-801.


SUBTASK 55-05-03-410-009

(4) Close this access panel:

Number	Name/Location
341A	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer To Body

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

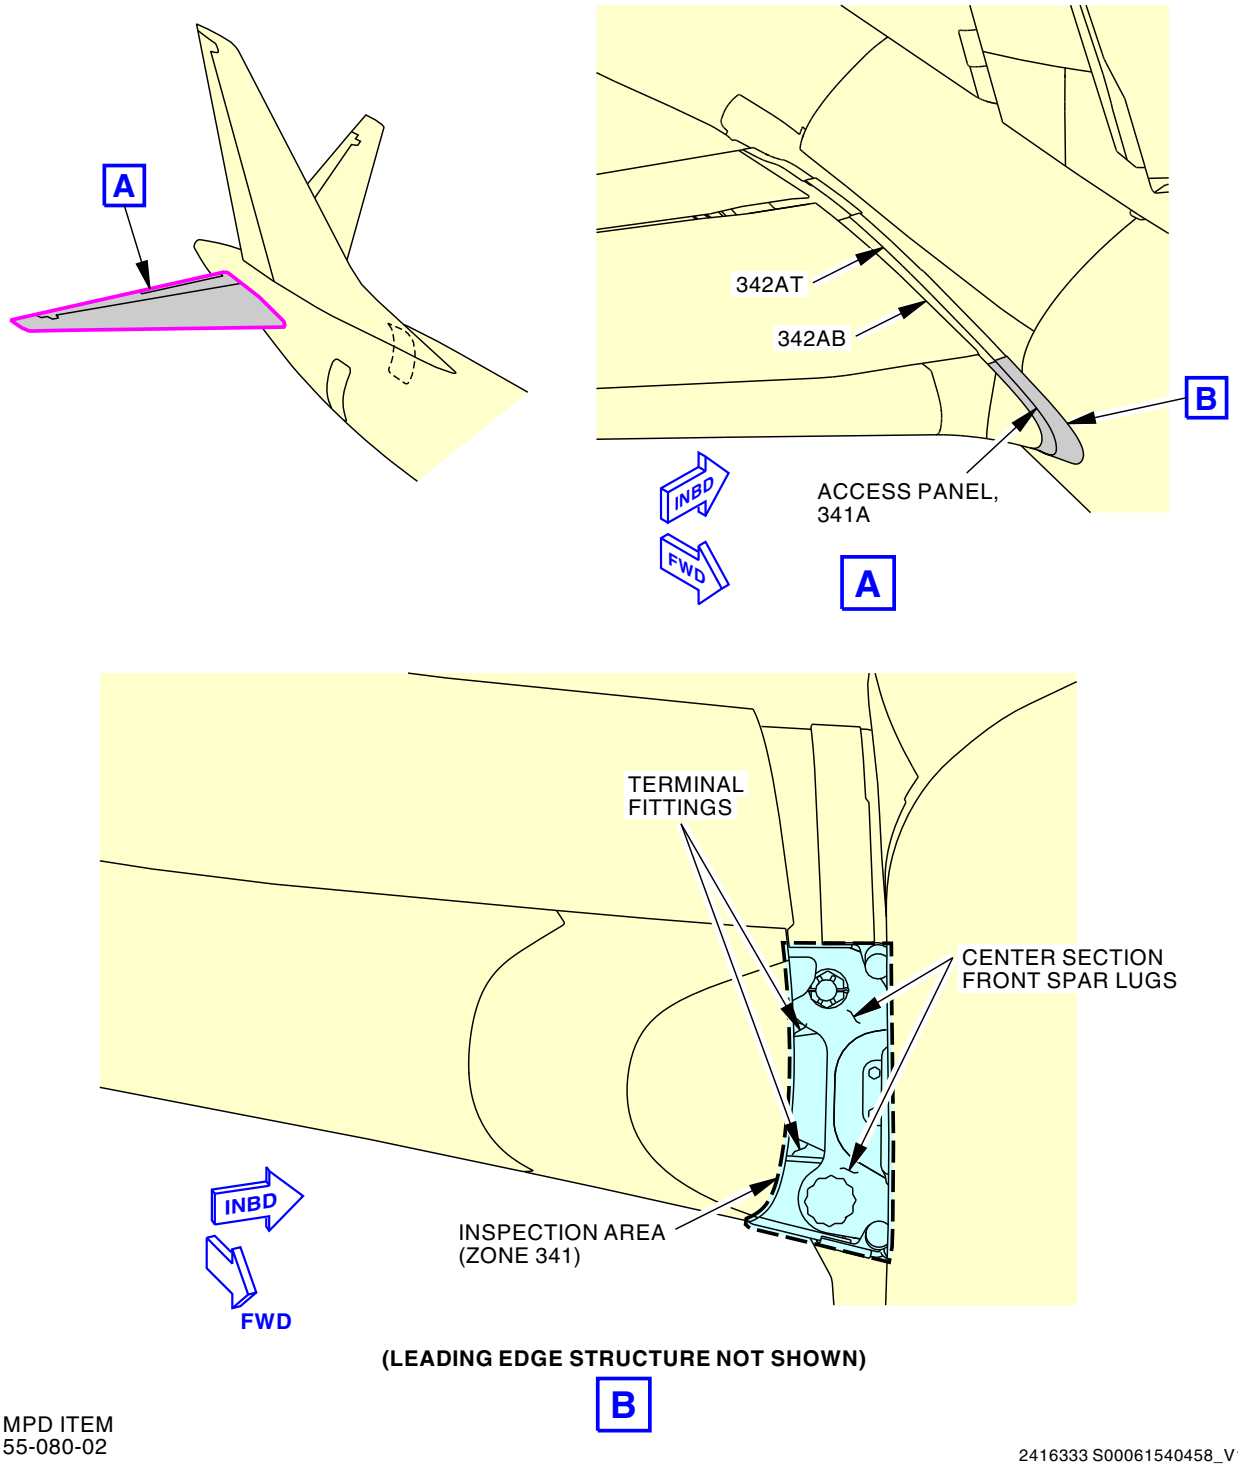

MPD ITEM
55-080-02

2416333 S00061540458_V1

Right Horizontal Stabilizer Leading Edge General Visual (Internal)
Figure 209/55-05-03-990-809

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-810

10. INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER

(Figure 210)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
27-41-21-000-801	Horizontal Stabilizer Leading Edge Removal (P/B 401)
27-41-21-400-801	Horizontal Stabilizer Leading Edge Installation (P/B 401)
51-05-01-210-806	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
332	Left Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

D. Access Panels

Number	Name/Location
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
332AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332BB	Horizontal Stabilizer, Access Door
332CB	Horizontal Stabilizer, Access Door
332DB	Horizontal Stabilizer, Access Door
332EB	Horizontal Stabilizer, Access Door
332FB	Horizontal Stabilizer, Access Door
332GB	Horizontal Stabilizer, Access Door
332HB	Horizontal Stabilizer, Access Door
332JB	Horizontal Stabilizer, Access Door
332KB	Horizontal Stabilizer, Access Door
332LB	Horizontal Stabilizer, Access Door
332MB	Horizontal Stabilizer, Access Door
332NB	Horizontal Stabilizer, Access Door
332PB	Horizontal Stabilizer, Access Door
335A	Horizontal Stabilizer, Removable Stabilizer Tip

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Inspection

SUBTASK 55-05-03-010-010

(1) Open these access panels:

(TASK 27-41-21-000-801)

Number	Name/Location
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

SUBTASK 55-05-03-010-021

(2) Open these access panels:

Number	Name/Location
331BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
332AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332BB	Horizontal Stabilizer, Access Door
332CB	Horizontal Stabilizer, Access Door
332DB	Horizontal Stabilizer, Access Door
332EB	Horizontal Stabilizer, Access Door
332FB	Horizontal Stabilizer, Access Door
332GB	Horizontal Stabilizer, Access Door
332HB	Horizontal Stabilizer, Access Door
332JB	Horizontal Stabilizer, Access Door
332KB	Horizontal Stabilizer, Access Door
332LB	Horizontal Stabilizer, Access Door
332MB	Horizontal Stabilizer, Access Door
332NB	Horizontal Stabilizer, Access Door
332PB	Horizontal Stabilizer, Access Door
335A	Horizontal Stabilizer, Removable Stabilizer Tip

SUBTASK 55-05-03-210-010

(3) Do a General Visual inspection of the left horizontal stabilizer from front spar to rear spar including spar chords, webs, terminal fittings, upper and lower inspar skins.

SUBTASK 55-05-03-910-010

(4) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-806.

SUBTASK 55-05-03-410-010

(5) Close these access panels:

Number	Name/Location
331BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
331DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
332AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
332BB	Horizontal Stabilizer, Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
332CB	Horizontal Stabilizer, Access Door
332DB	Horizontal Stabilizer, Access Door
332EB	Horizontal Stabilizer, Access Door
332FB	Horizontal Stabilizer, Access Door
332GB	Horizontal Stabilizer, Access Door
332HB	Horizontal Stabilizer, Access Door
332JB	Horizontal Stabilizer, Access Door
332KB	Horizontal Stabilizer, Access Door
332LB	Horizontal Stabilizer, Access Door
332MB	Horizontal Stabilizer, Access Door
332NB	Horizontal Stabilizer, Access Door
332PB	Horizontal Stabilizer, Access Door
335A	Horizontal Stabilizer, Removable Stabilizer Tip

SUBTASK 55-05-03-410-029

(6) Close these access panels:

(TASK 27-41-21-400-801)


Number	Name/Location
331BL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331CL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331DL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER
331EL	LEADING EDGE - REMOVEABLE HORIZONTAL STABILIZER

SUBTASK 55-05-03-390-006

(7) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

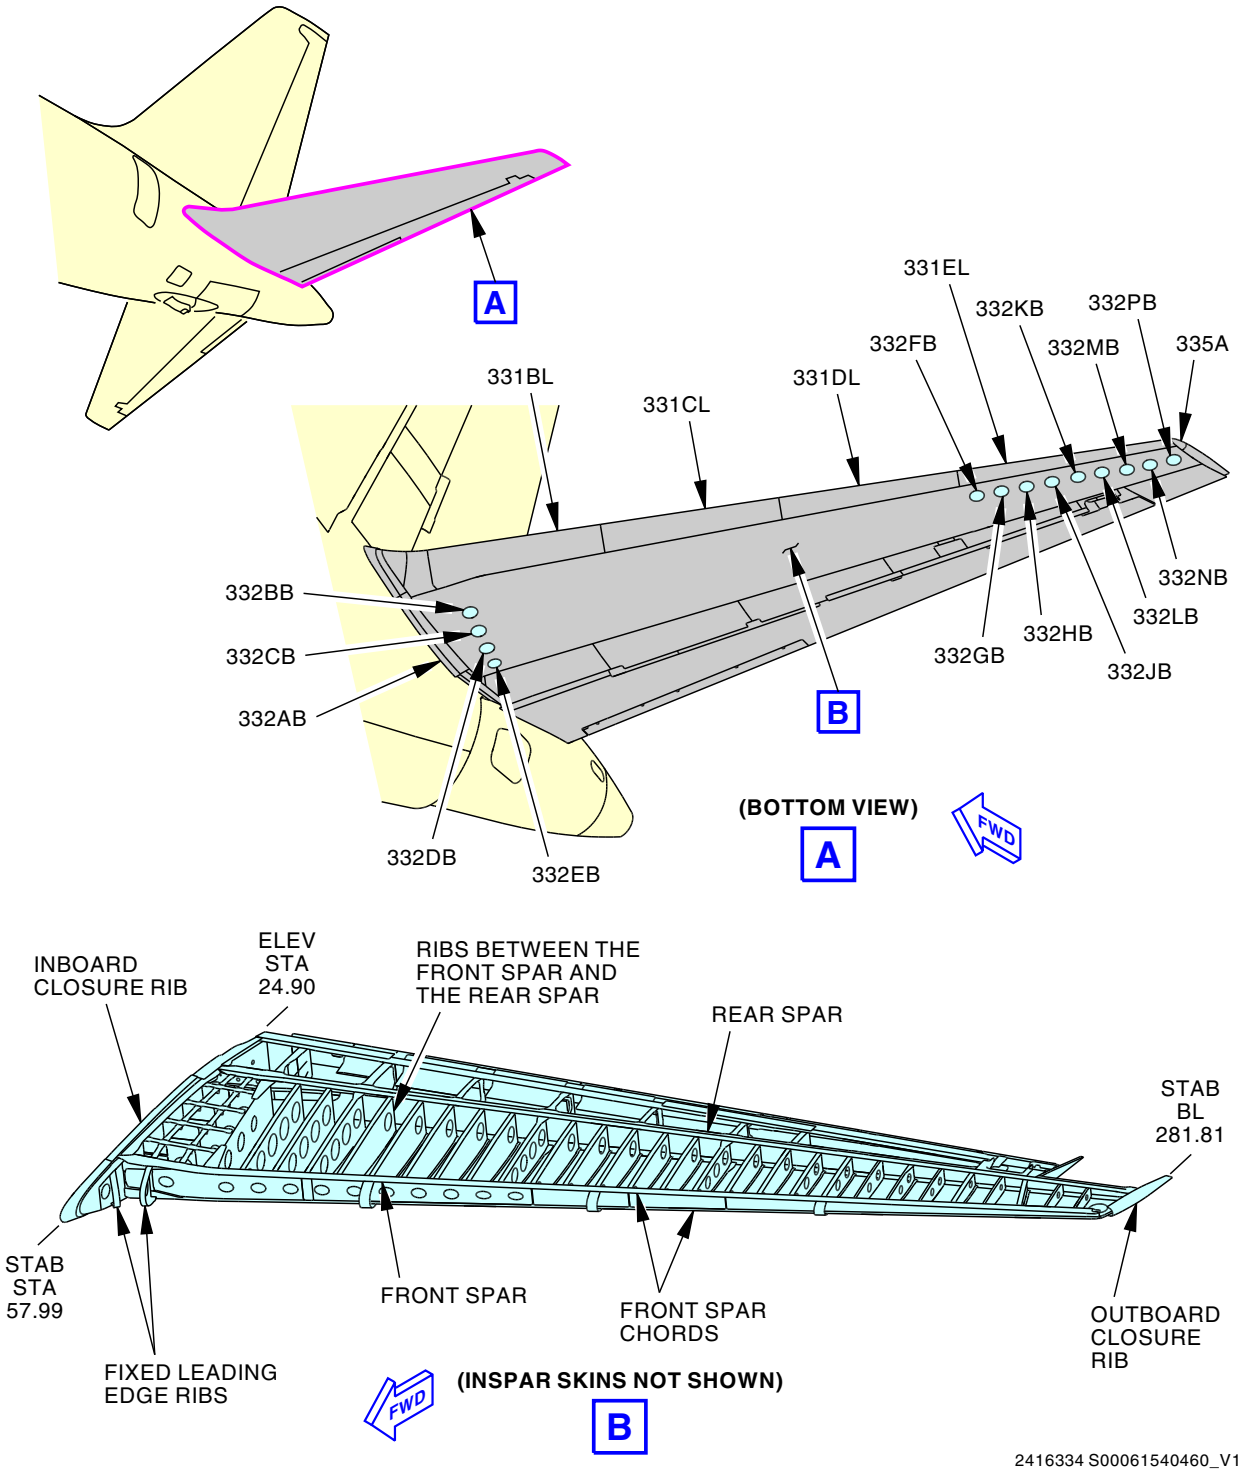

INTERNAL-GENERAL VISUAL: LEFT HORIZONTAL STABILIZER
Figure 210/55-05-03-990-810 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

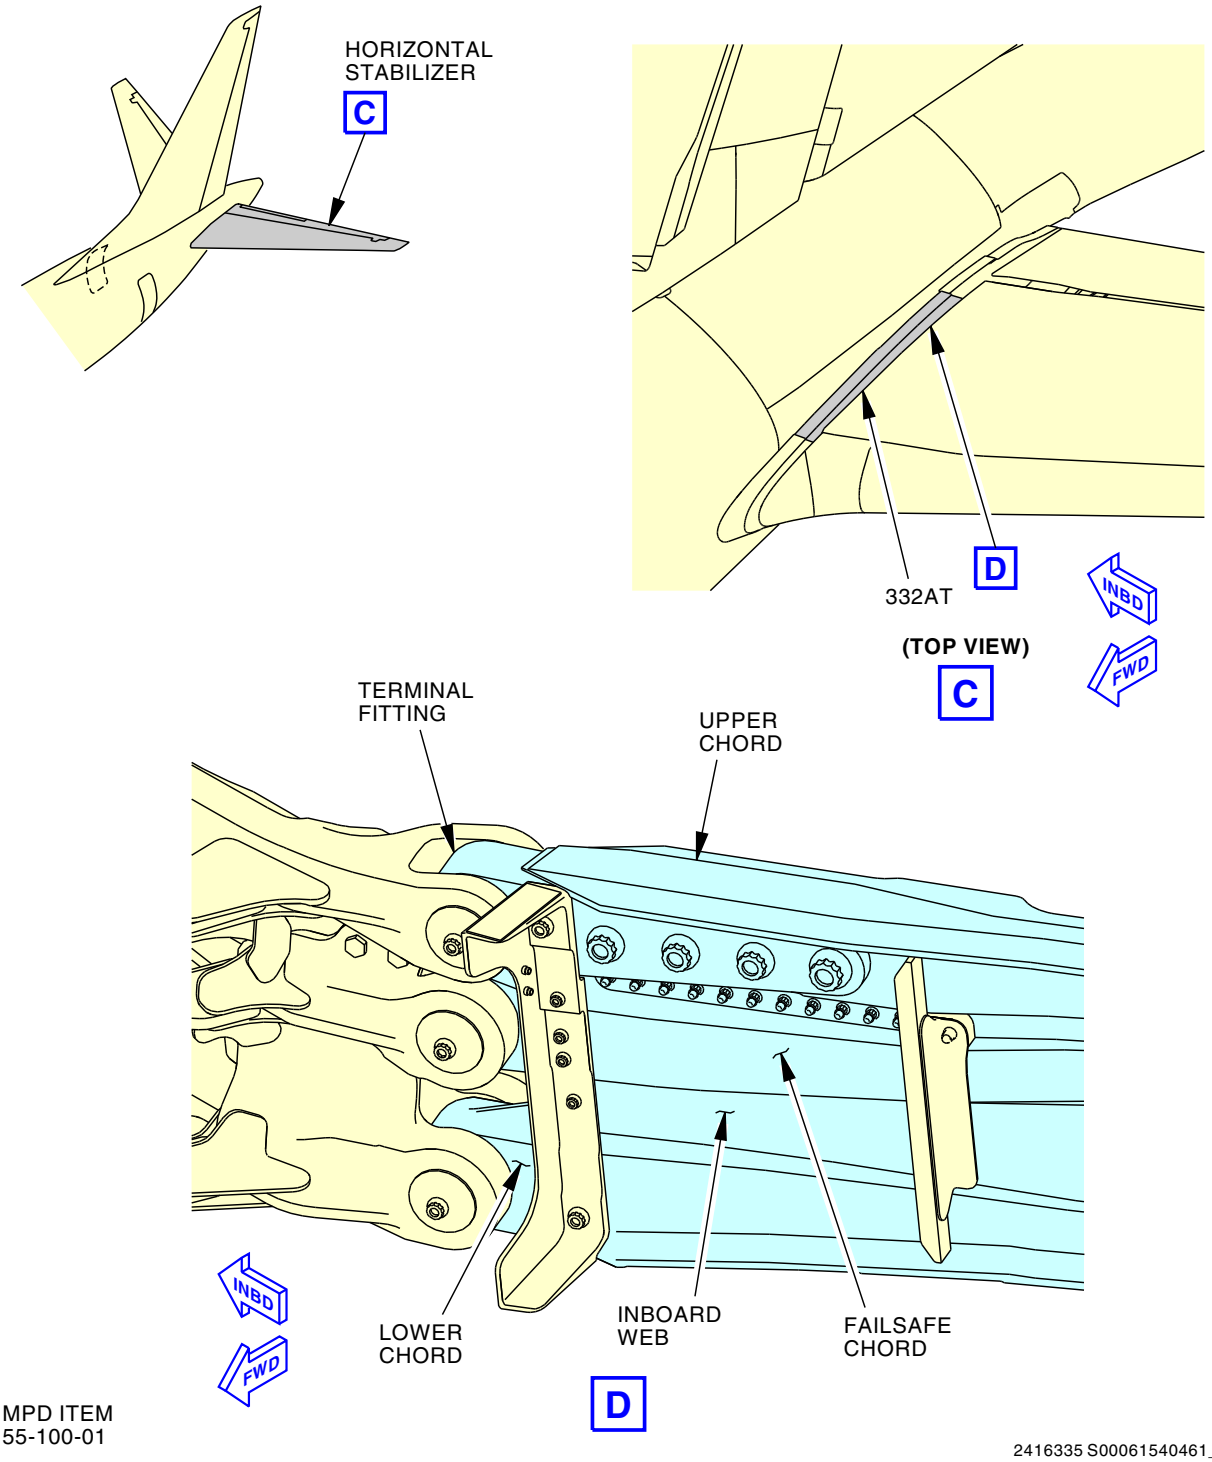

INTERNAL-GENERAL VISUAL: LEFT HORIZONTAL STABILIZER
Figure 210/55-05-03-990-810 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-811

11. INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER

(Figure 211)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
27-41-21-000-801	Horizontal Stabilizer Leading Edge Removal (P/B 401)
27-41-21-400-801	Horizontal Stabilizer Leading Edge Installation (P/B 401)
51-05-01-210-806	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
342	Right Horizontal Stab - Front Spar to Rear Spar, Stab Sta 57.93 to Stab BL 249.81

D. Access Panels

Number	Name/Location
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
342AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
342AT	Gap Cover, Horizontal Stabilizer
342BB	Horizontal Stabilizer, Access Door
342CB	Horizontal Stabilizer, Access Door
342DB	Horizontal Stabilizer, Access Door
342EB	Horizontal Stabilizer, Access Door
342FB	Horizontal Stabilizer, Access Door
342GB	Horizontal Stabilizer, Access Door
342HB	Horizontal Stabilizer, Access Door
342JB	Horizontal Stabilizer, Access Door
342KB	Horizontal Stabilizer, Access Door
342LB	Horizontal Stabilizer, Access Door
342MB	Horizontal Stabilizer, Access Door
342NB	Horizontal Stabilizer, Access Door
342PB	Horizontal Stabilizer, Access Door
345A	Horizontal Stabilizer, Removable Stabilizer Tip

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Inspection

SUBTASK 55-05-03-010-011

(1) Open these access panels:

(TASK 27-41-21-000-801)

Number	Name/Location
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

SUBTASK 55-05-03-010-022

(2) Open these access panels:

Number	Name/Location
341BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
342AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
342AT	Gap Cover, Horizontal Stabilizer
342BB	Horizontal Stabilizer, Access Door
342CB	Horizontal Stabilizer, Access Door
342DB	Horizontal Stabilizer, Access Door
342EB	Horizontal Stabilizer, Access Door
342FB	Horizontal Stabilizer, Access Door
342GB	Horizontal Stabilizer, Access Door
342HB	Horizontal Stabilizer, Access Door
342JB	Horizontal Stabilizer, Access Door
342KB	Horizontal Stabilizer, Access Door
342LB	Horizontal Stabilizer, Access Door
342MB	Horizontal Stabilizer, Access Door
342NB	Horizontal Stabilizer, Access Door
342PB	Horizontal Stabilizer, Access Door
345A	Horizontal Stabilizer, Removable Stabilizer Tip

SUBTASK 55-05-03-210-011

(3) Do a General Visual inspection of the right horizontal stabilizer from front spar to rear spar including spar chords, webs, terminal fittings, upper and lower inspar skins.

SUBTASK 55-05-03-910-011

(4) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-806.

SUBTASK 55-05-03-410-011

(5) Close these access panels:

Number	Name/Location
341BZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341CZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
341DZ	WEB ASSY - HORIZONTAL STABLIZER FRONT SPAR
342AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
342AT	Gap Cover, Horizontal Stabilizer
342BB	Horizontal Stabilizer, Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
342CB	Horizontal Stabilizer, Access Door
342DB	Horizontal Stabilizer, Access Door
342EB	Horizontal Stabilizer, Access Door
342FB	Horizontal Stabilizer, Access Door
342GB	Horizontal Stabilizer, Access Door
342HB	Horizontal Stabilizer, Access Door
342JB	Horizontal Stabilizer, Access Door
342KB	Horizontal Stabilizer, Access Door
342LB	Horizontal Stabilizer, Access Door
342MB	Horizontal Stabilizer, Access Door
342NB	Horizontal Stabilizer, Access Door
342PB	Horizontal Stabilizer, Access Door
345A	Horizontal Stabilizer, Removable Stabilizer Tip

SUBTASK 55-05-03-410-030

(6) Close these access panels:

(TASK 27-41-21-400-801)


Number	Name/Location
341BR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341CR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341DR	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER
341ER	LEADING EDGE - REMOVABLE HORIZONTAL STABILIZER

SUBTASK 55-05-03-390-007

(7) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

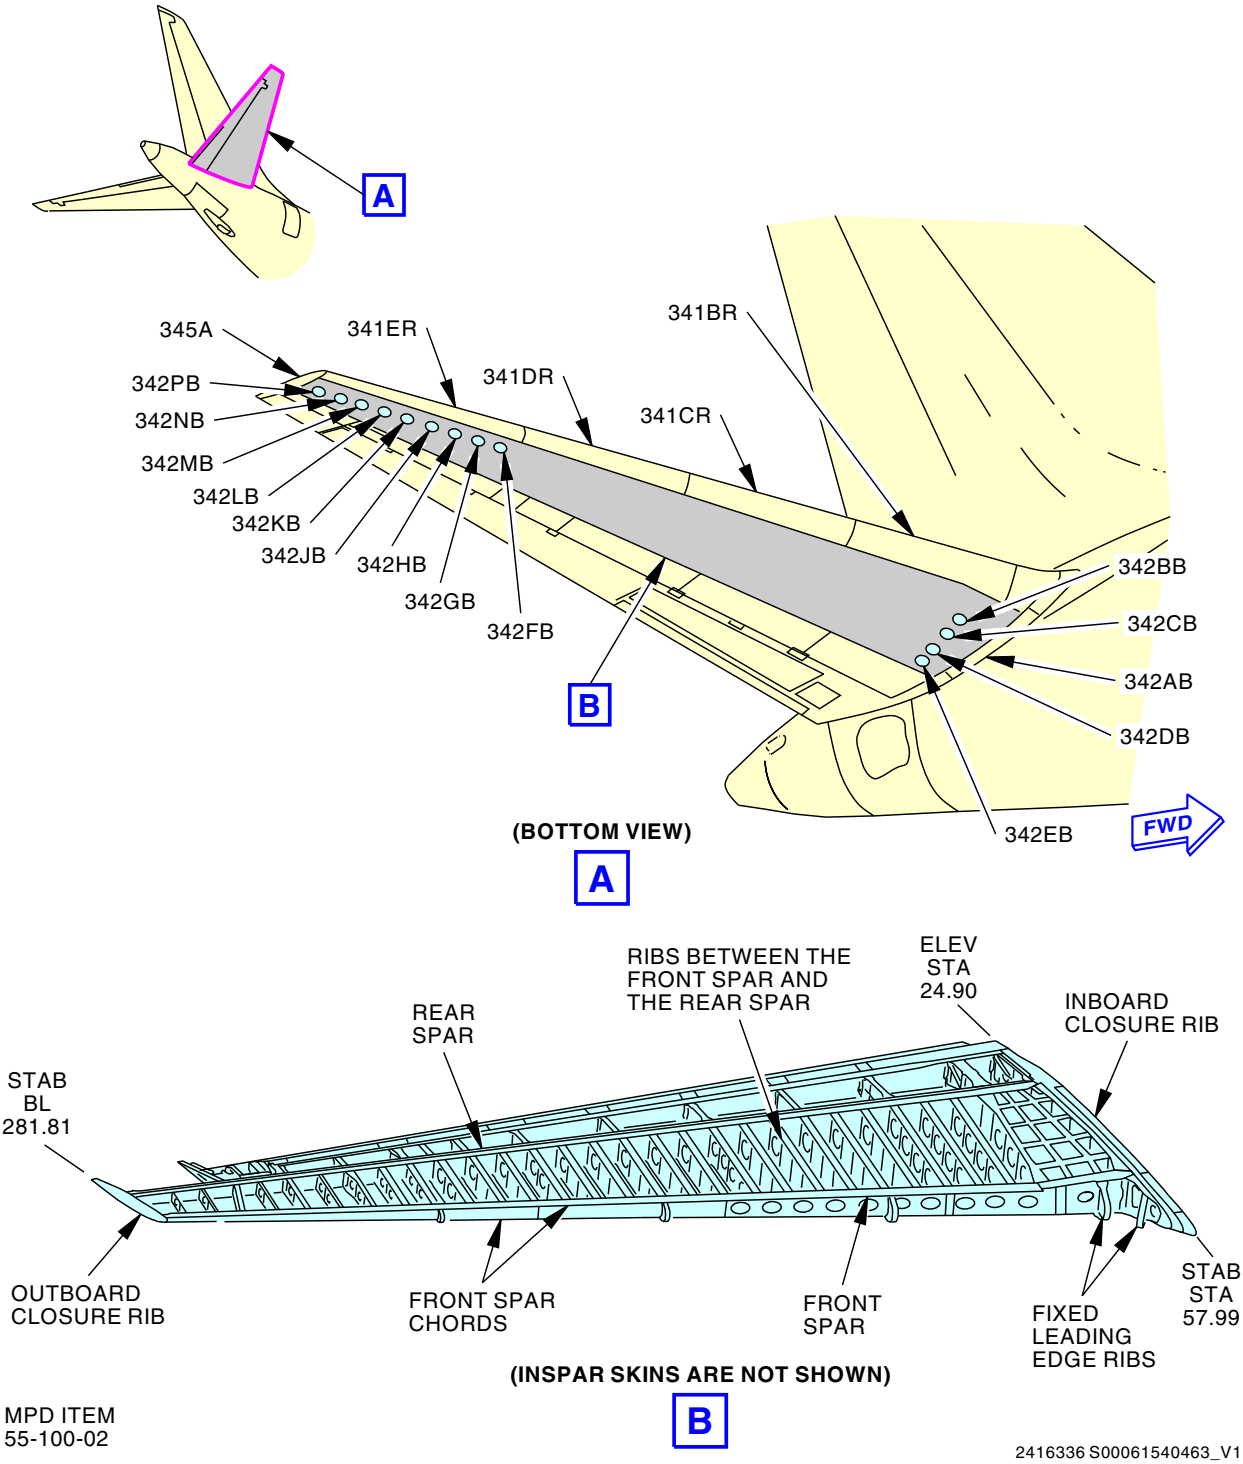

INTERNAL-GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER
Figure 211/55-05-03-990-811 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

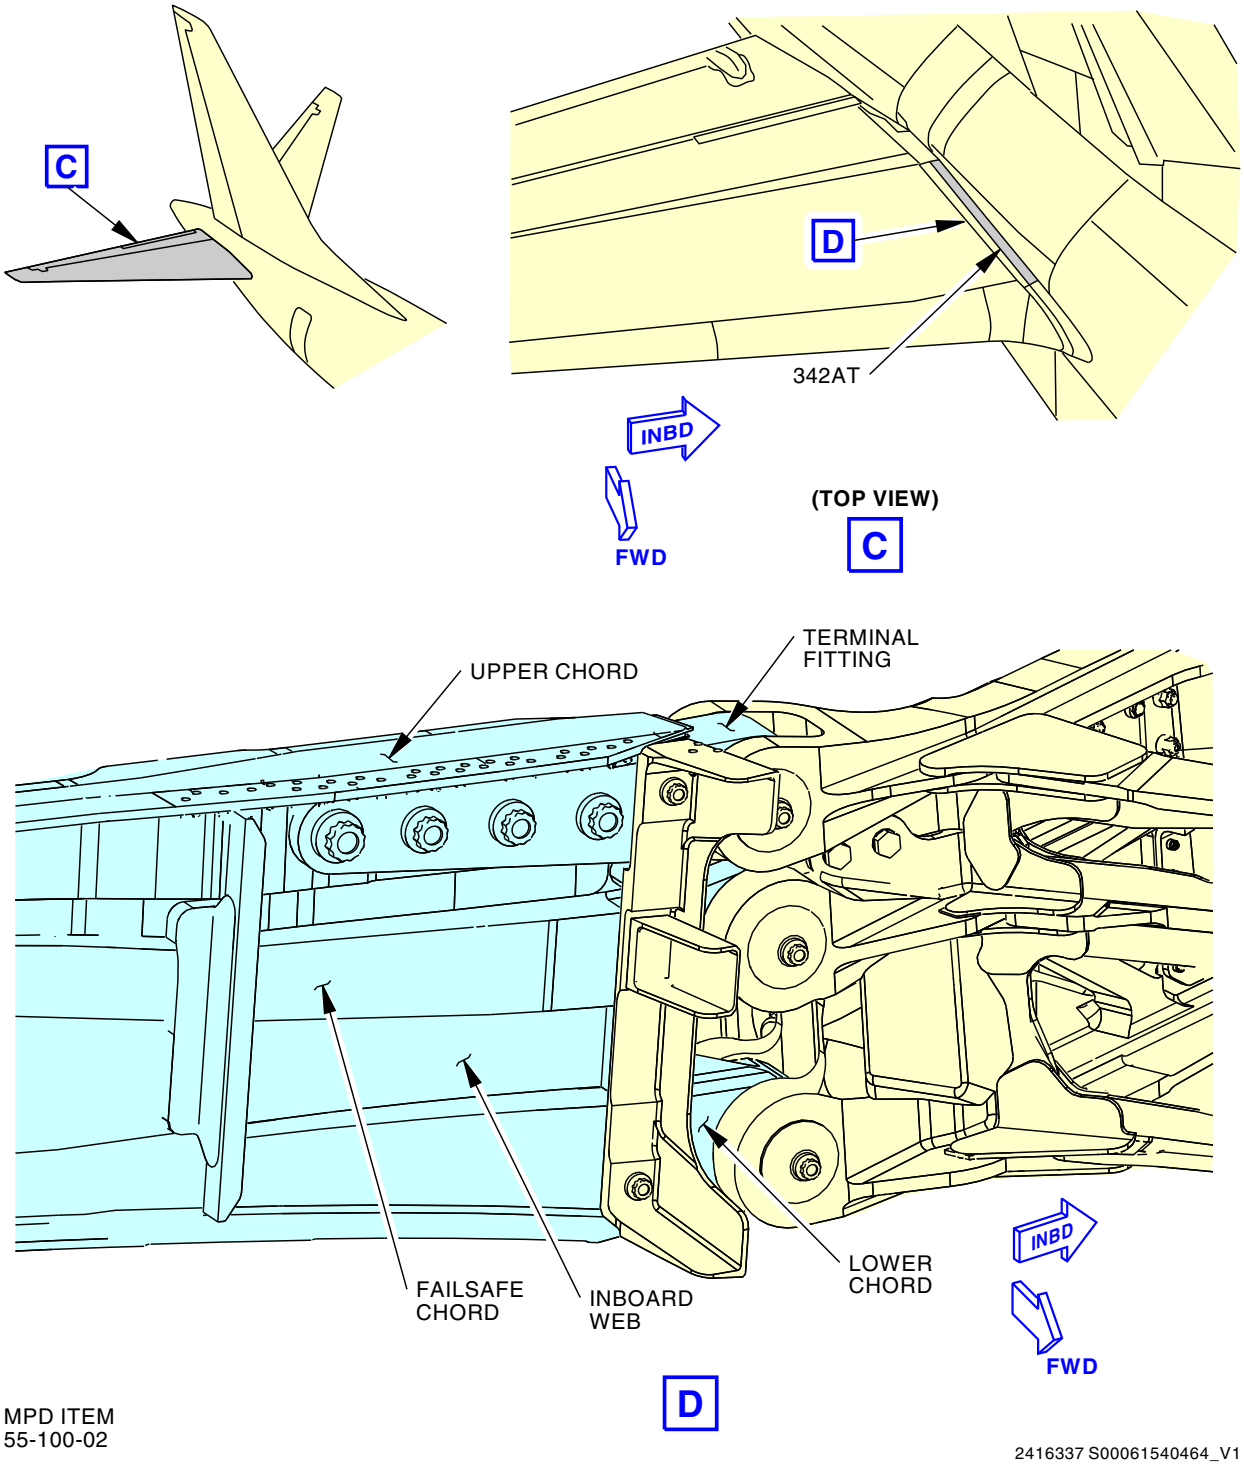

INTERNAL-GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER
Figure 211/55-05-03-990-811 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-812

12. INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER TRAILING EDGE AND ELEVATOR TAB LEADING EDGE

(Figure 212)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
27-31-41-000-801	Elevator Balance Panel - Removal (P/B 401)
27-31-41-400-801	Elevator Balance Panel - Installation (P/B 401)
27-41-11-000-801	Horizontal Stabilizer Removal (P/B 401)
27-41-11-400-801	Horizontal Stabilizer Installation (P/B 401)
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge

C. Access Panels

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
335A	Horizontal Stabilizer, Removable Stabilizer Tip
S3331	Left Horizontal Stabilizer Trailing Edge Inspection

D. Prepare for Inspection

SUBTASK 55-05-03-010-028

(1) Open these access panels:

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
334BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
335A	Horizontal Stabilizer, Removable Stabilizer Tip

Special Access:

Number	Name/Location
S3331	Left Horizontal Stabilizer Trailing Edge Inspection

SUBTASK 55-05-03-010-027

(2) To install the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

SUBTASK 55-05-03-010-035

(3) To remove the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

SUBTASK 55-05-03-020-010

(4) Disconnect the balance panels in the balance bay: Elevator Balance Panel - Removal, TASK 27-31-41-000-801

SUBTASK 55-05-03-010-029

(5) If installed, remove tab hinge covers to inspect elevator tab leading edge.

E. Inspection

SUBTASK 55-05-03-210-012

(1) Do a General Visual inspection of the aft side of left horizontal stabilizer rear spar, including spar chords and webs, terminal fittings, elevator tab actuator support fitting, center section rear spar lugs, elevator hinge ribs, and elevator tab leading edge.

SUBTASK 55-05-03-910-012

(2) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 55-05-03-410-037

(1) If previously removed, reinstall the tab hinge covers.

SUBTASK 55-05-03-420-013

(2) Reconnect the balance panels in the balance bay: Elevator Balance Panel - Installation, TASK 27-31-41-400-801

SUBTASK 55-05-03-410-048

(3) To install the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

SUBTASK 55-05-03-410-039

(4) To remove the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-03-410-038

(5) Restore Special Access:


Number	Name/Location
S3331	Left Horizontal Stabilizer Trailing Edge Inspection

Close these access panels:

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
335A	Horizontal Stabilizer, Removable Stabilizer Tip


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

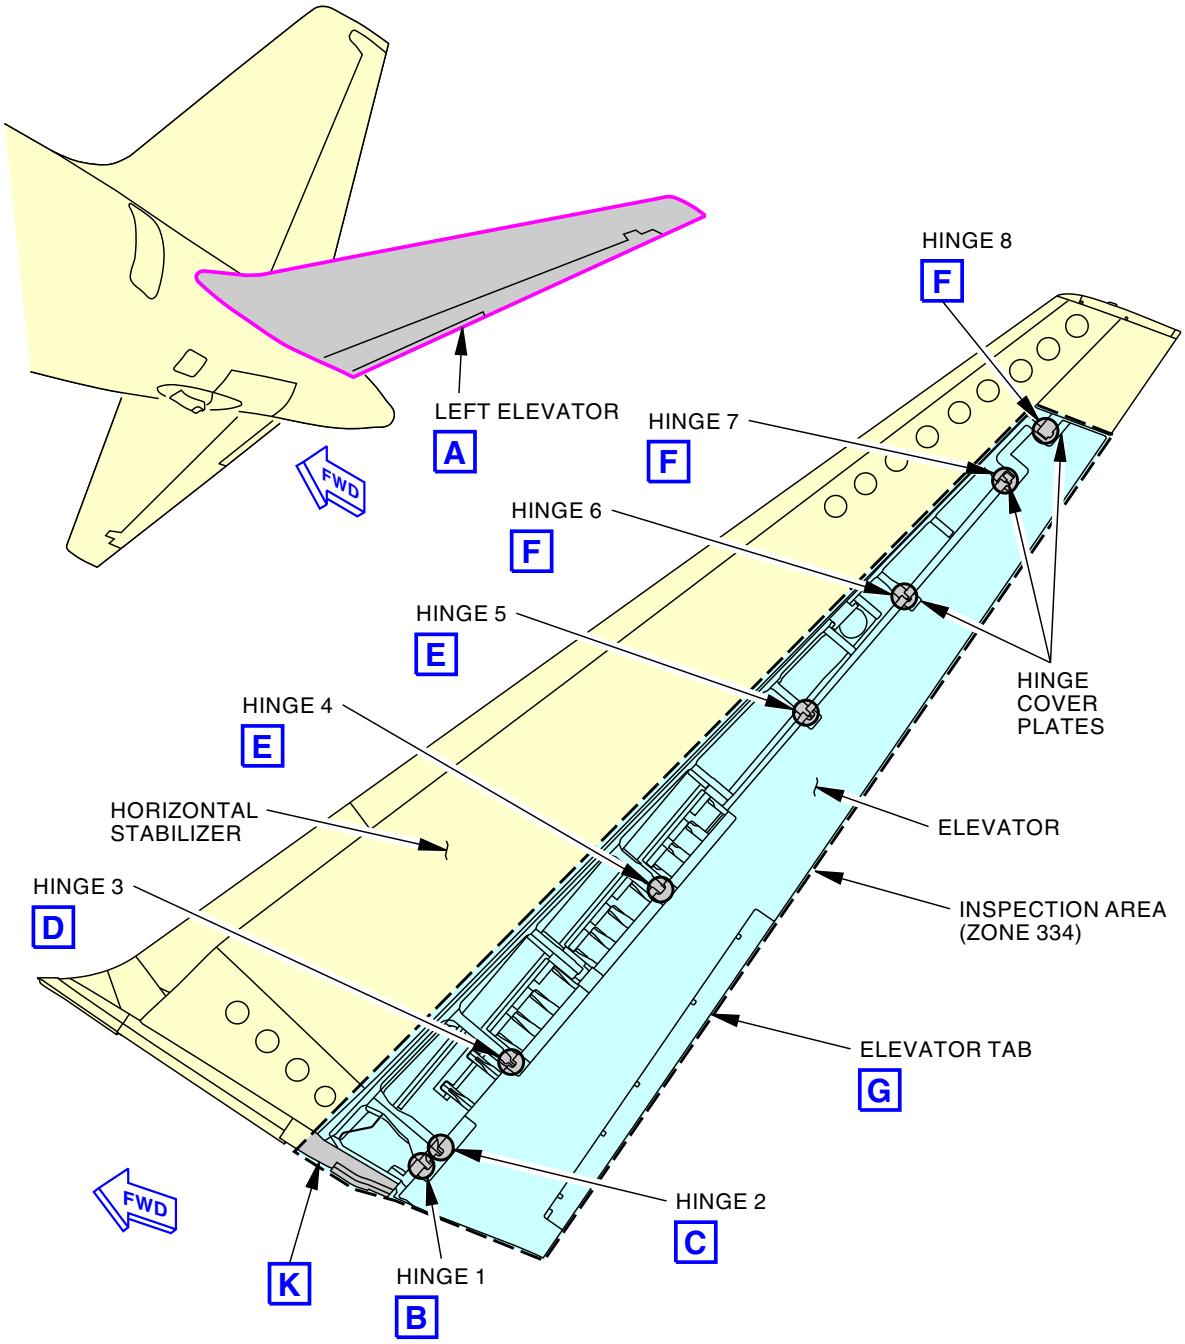


Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 1 of 7)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

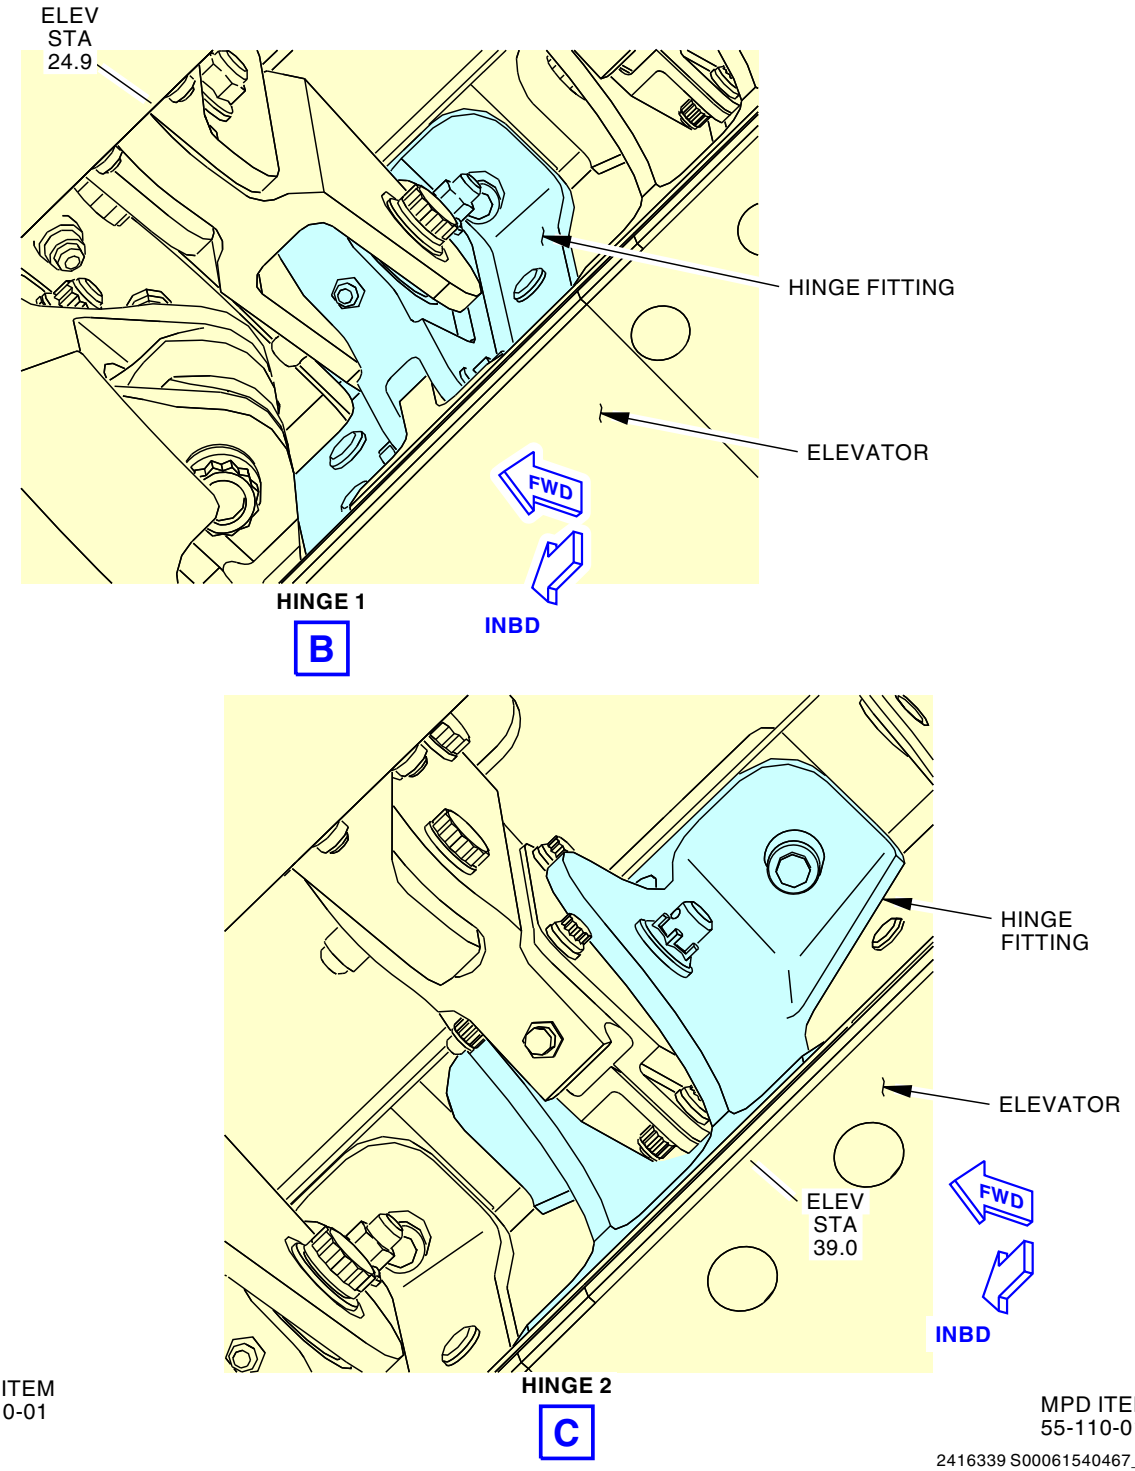

Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 2 of 7)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

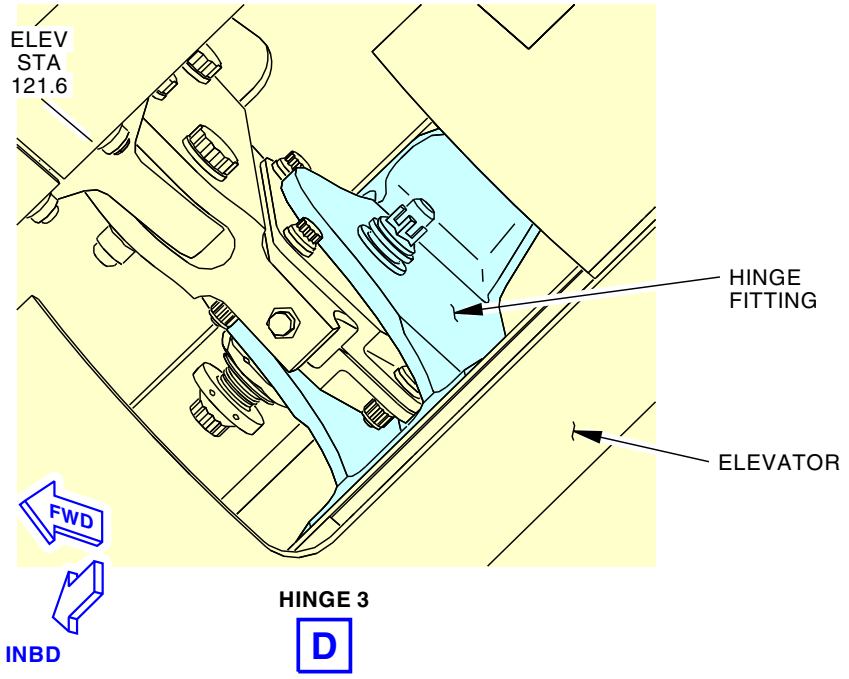

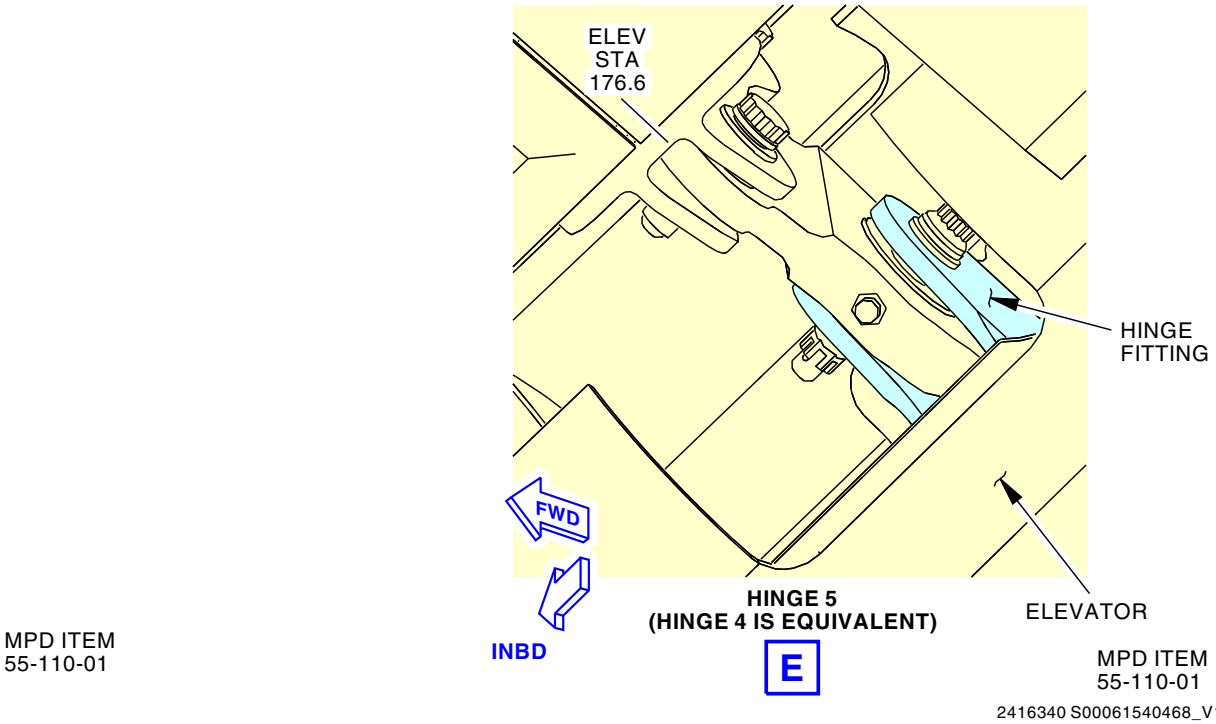


Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 3 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

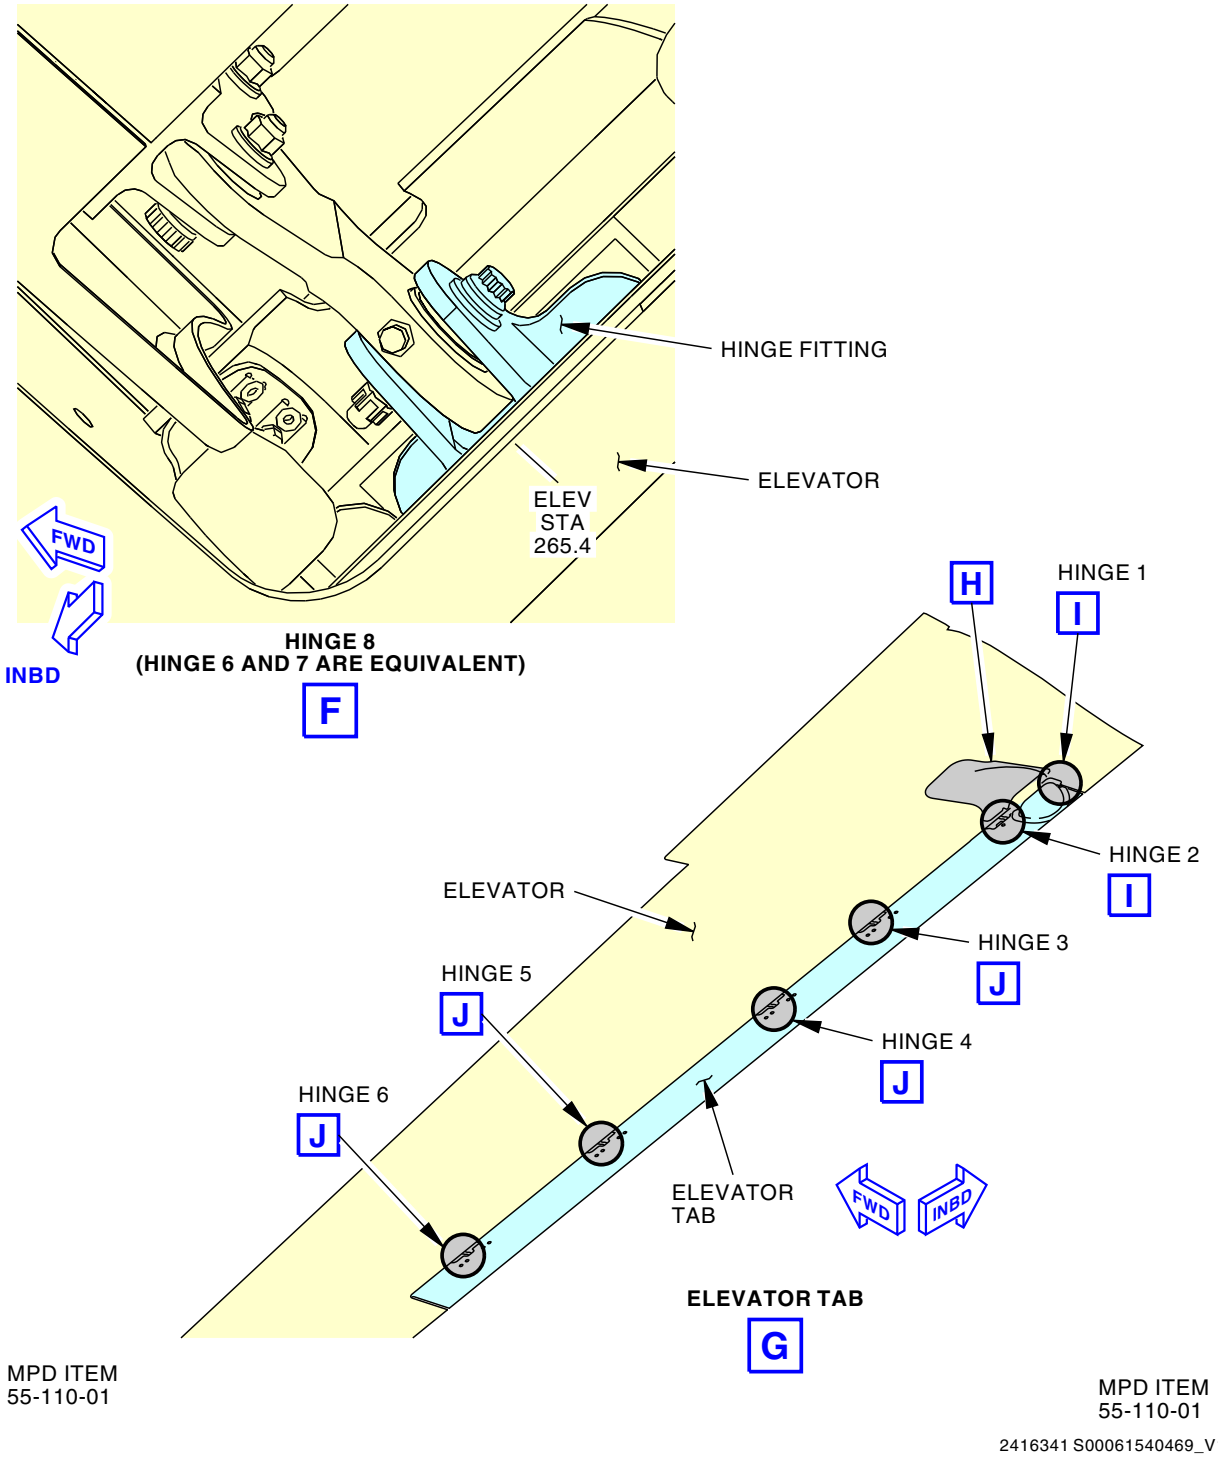

Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 4 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

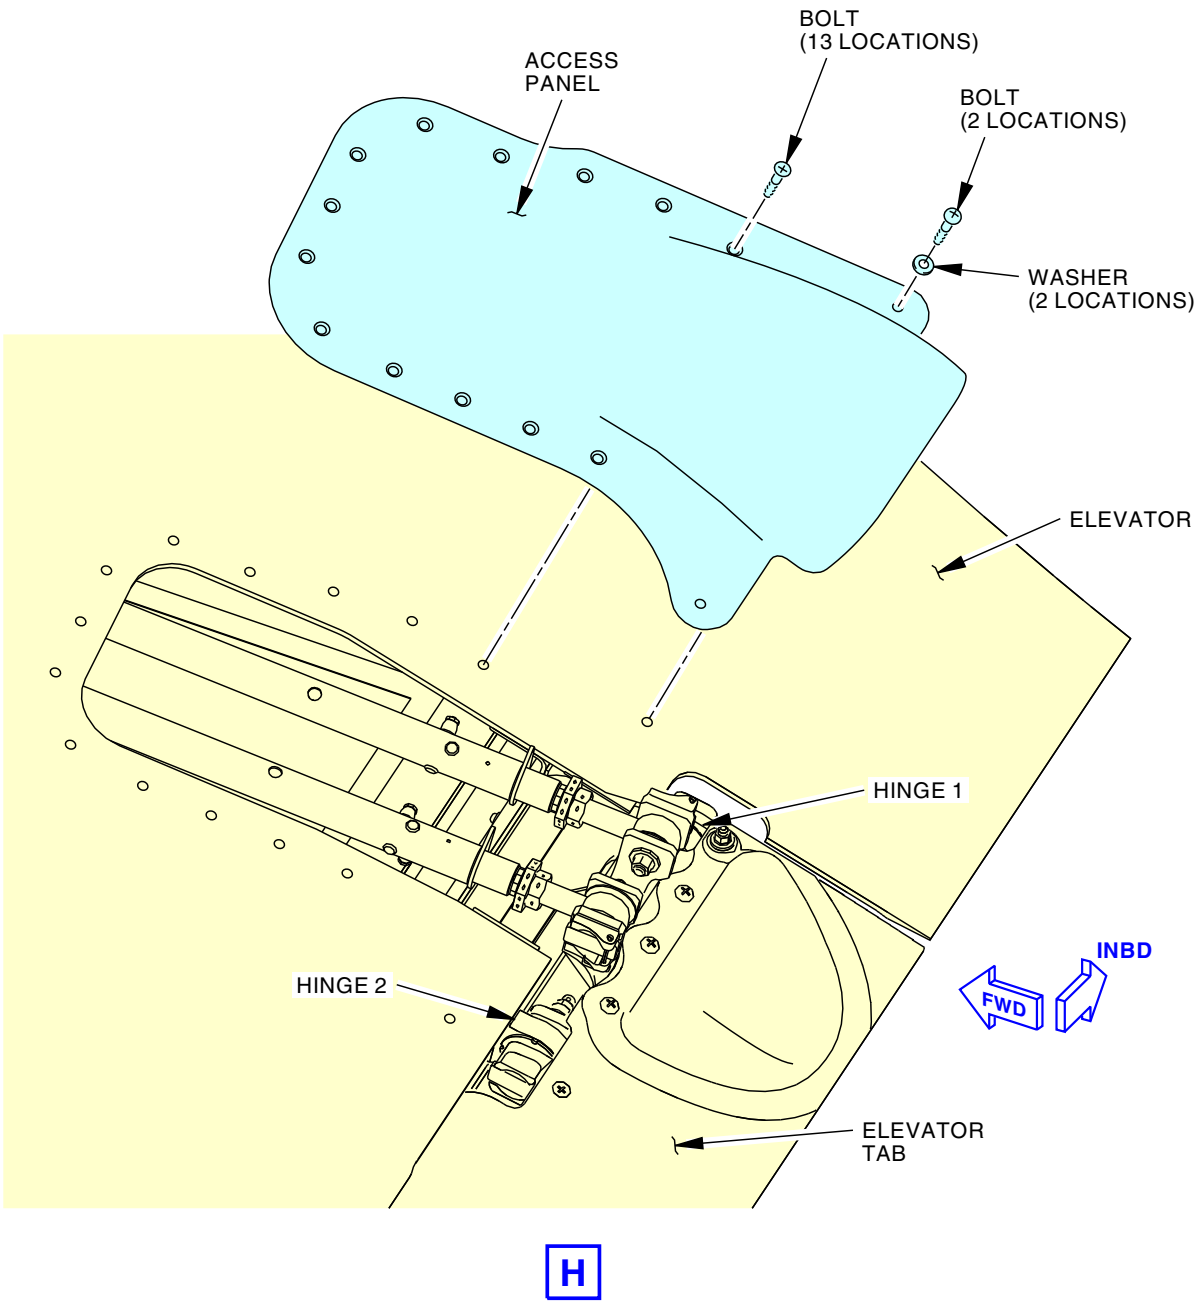


MPD ITEM
55-110-01

MPD ITEM
55-110-01

2416342 S00061540470_V1


Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 5 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

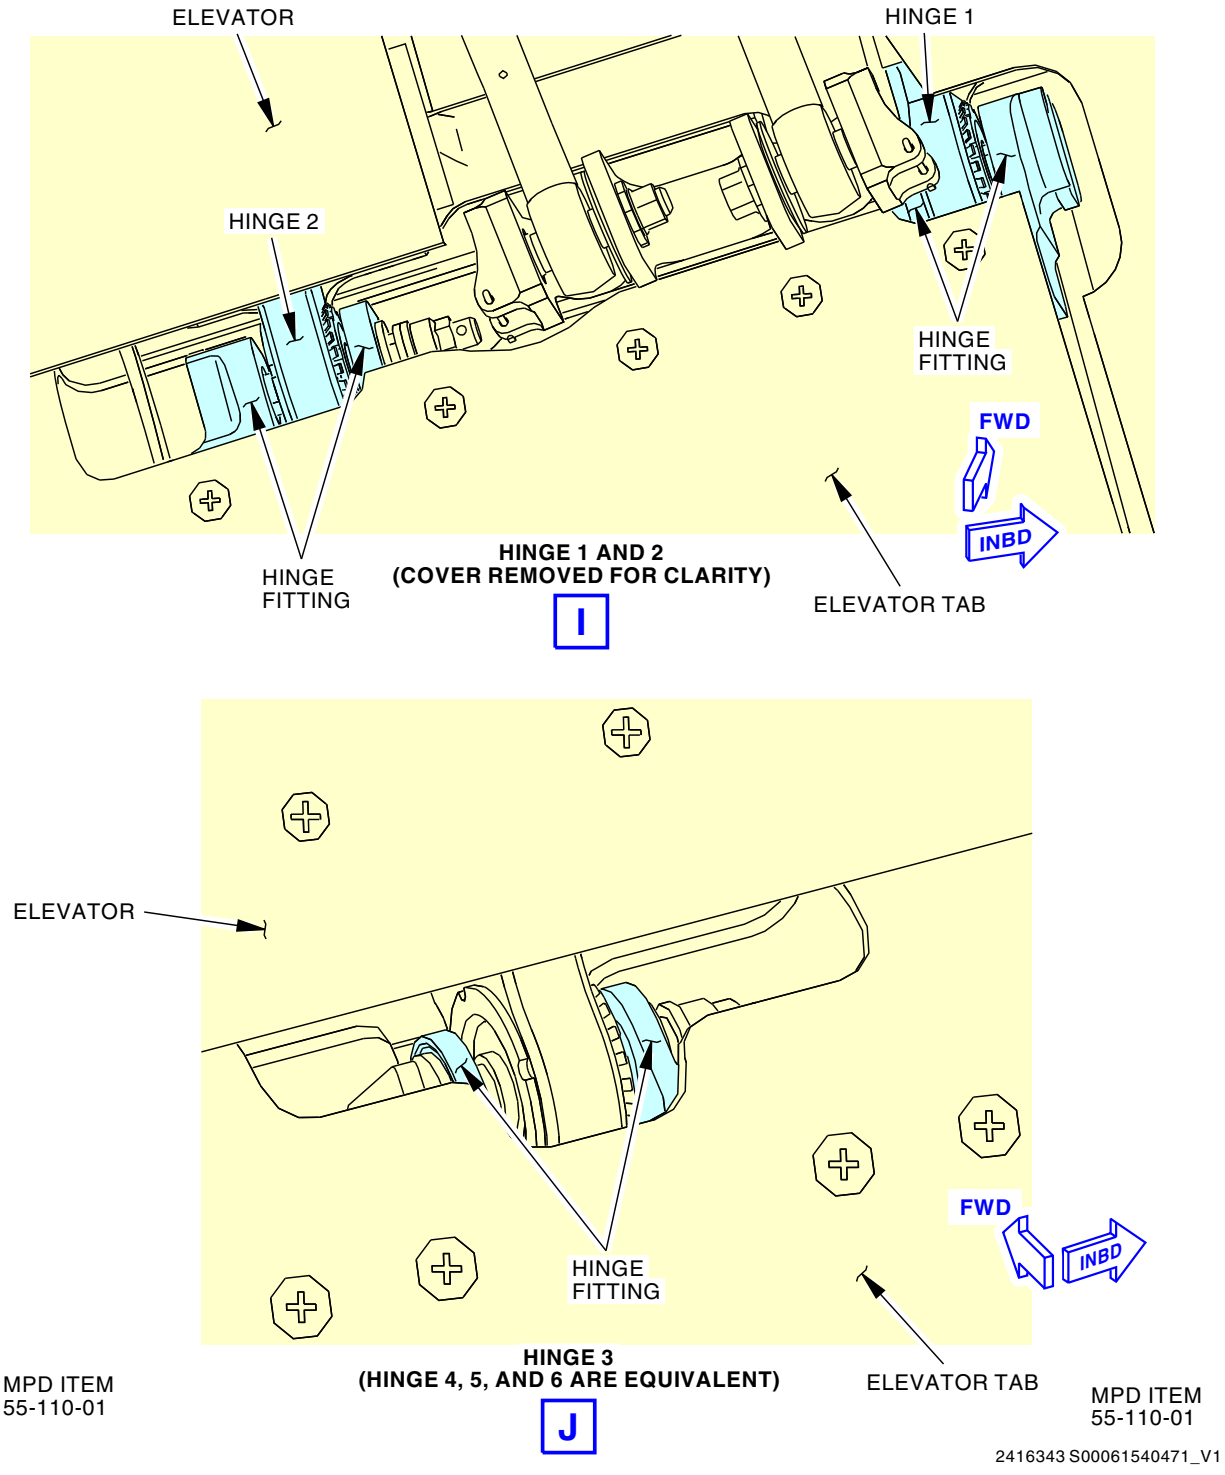

Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 6 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

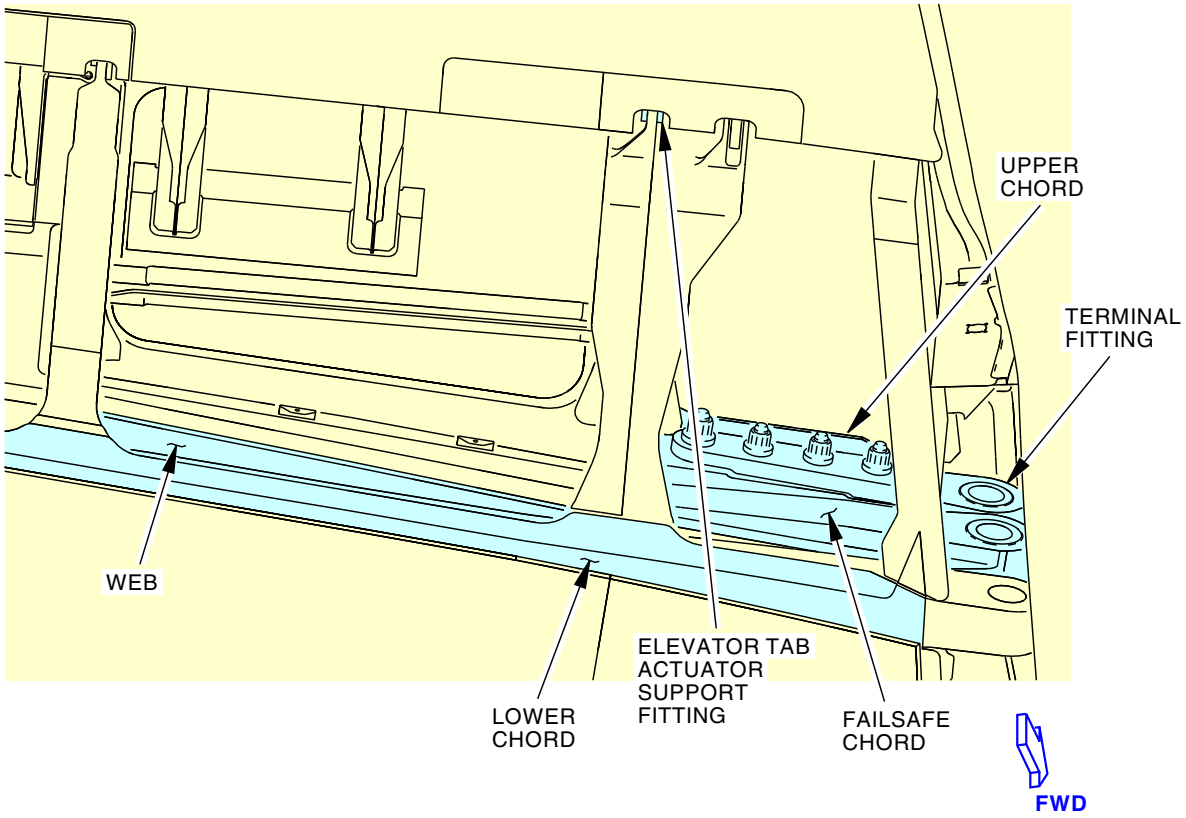

LEFT HORIZONTAL STABILIZER REAR SPAR CHORDS, WEB, TERMINAL FITTINGS AND TAB ACTUATOR FITTING (PANELS REMOVED FOR CLARITY)

K

MPD ITEM
55-110-01

MPD ITEM
55-110-01

2416344 S00061540472_V1

Left Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 212/55-05-03-990-812 (Sheet 7 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-813

13. INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER TRAILING EDGE AND ELEVATOR TAB LEADING EDGE

(Figure 213)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
27-31-41-000-801	Elevator Balance Panel - Removal (P/B 401)
27-31-41-400-801	Elevator Balance Panel - Installation (P/B 401)
27-41-11-000-801	Horizontal Stabilizer Removal (P/B 401)
27-41-11-400-801	Horizontal Stabilizer Installation (P/B 401)
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

C. Access Panels

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
345A	Horizontal Stabilizer, Removable Stabilizer Tip
S3431	Right Horizontal Stabilizer Trailing Edge

D. Prepare for Inspection

SUBTASK 55-05-03-010-031

(1) Open these access panels:

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
344BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
345A	Horizontal Stabilizer, Removable Stabilizer Tip

Special Access:

Number	Name/Location
S3431	Right Horizontal Stabilizer Trailing Edge

SUBTASK 55-05-03-010-030

(2) To install the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

SUBTASK 55-05-03-010-036

(3) To remove the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Removal, TASK 27-41-11-000-801

SUBTASK 55-05-03-020-011

(4) Disconnect the balance panels in the balance bay: Elevator Balance Panel - Removal, TASK 27-31-41-000-801

SUBTASK 55-05-03-010-032

(5) If installed, remove tab hinge covers to inspect elevator tab leading edge.

E. Inspection

SUBTASK 55-05-03-210-018

(1) Do a General Visual inspection of the aft side of right horizontal stabilizer rear spar, including spar chords and webs, terminal fittings, elevator tab actuator support fitting, center section rear spar lugs, elevator hinge ribs, and elevator tab leading edge.

SUBTASK 55-05-03-910-013

(2) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 55-05-03-410-040

(1) If previously removed, reinstall the tab hinge covers.

SUBTASK 55-05-03-420-014

(2) Reconnect the balance panels in the balance bay: Elevator Balance Panel - Installation, TASK 27-31-41-400-801

SUBTASK 55-05-03-410-049

(3) To install the bolt, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

SUBTASK 55-05-03-410-042

(4) To remove the sling, do the applicable steps at the horizontal stabilizer: Horizontal Stabilizer Installation, TASK 27-41-11-400-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-05-03-410-041

(5) Restore Special Access:

Number	Name/Location
S3431	Right Horizontal Stabilizer Trailing Edge


NOTE: Bolt installation is required.

Close these access panels:

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344BB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344CB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344DB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344EB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344FB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
345A	Horizontal Stabilizer, Removable Stabilizer Tip

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

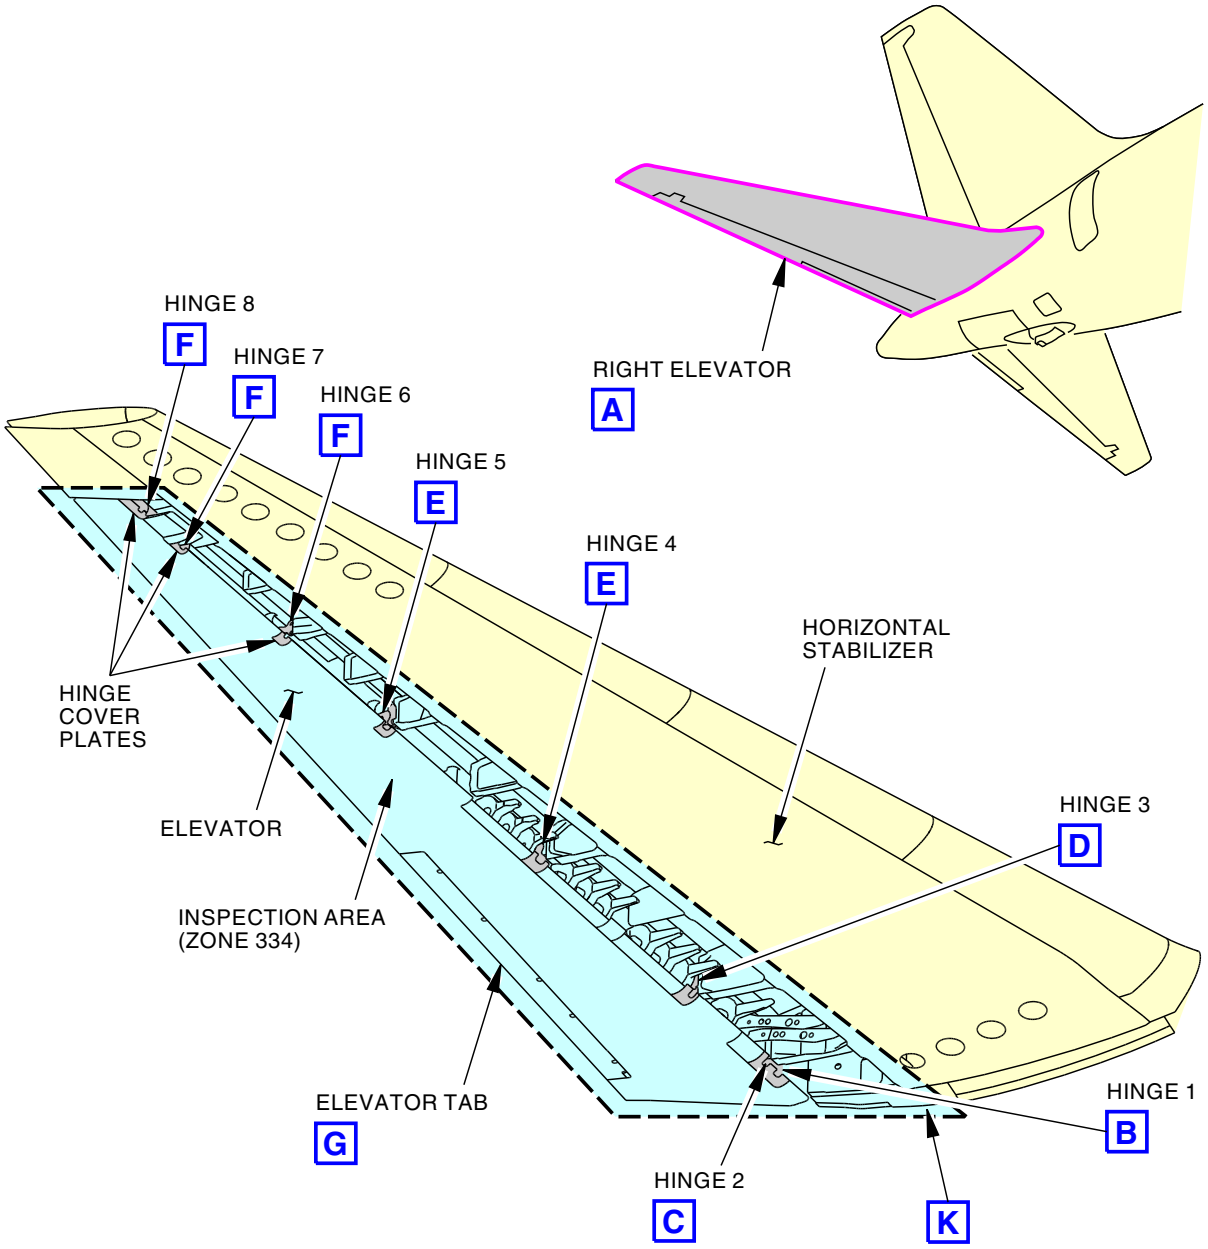


RIGHT ELEVATOR
(LOWER TRAILING EDGE PANELS REMOVED)
A

2416345 S00061540474_V1


Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 1 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

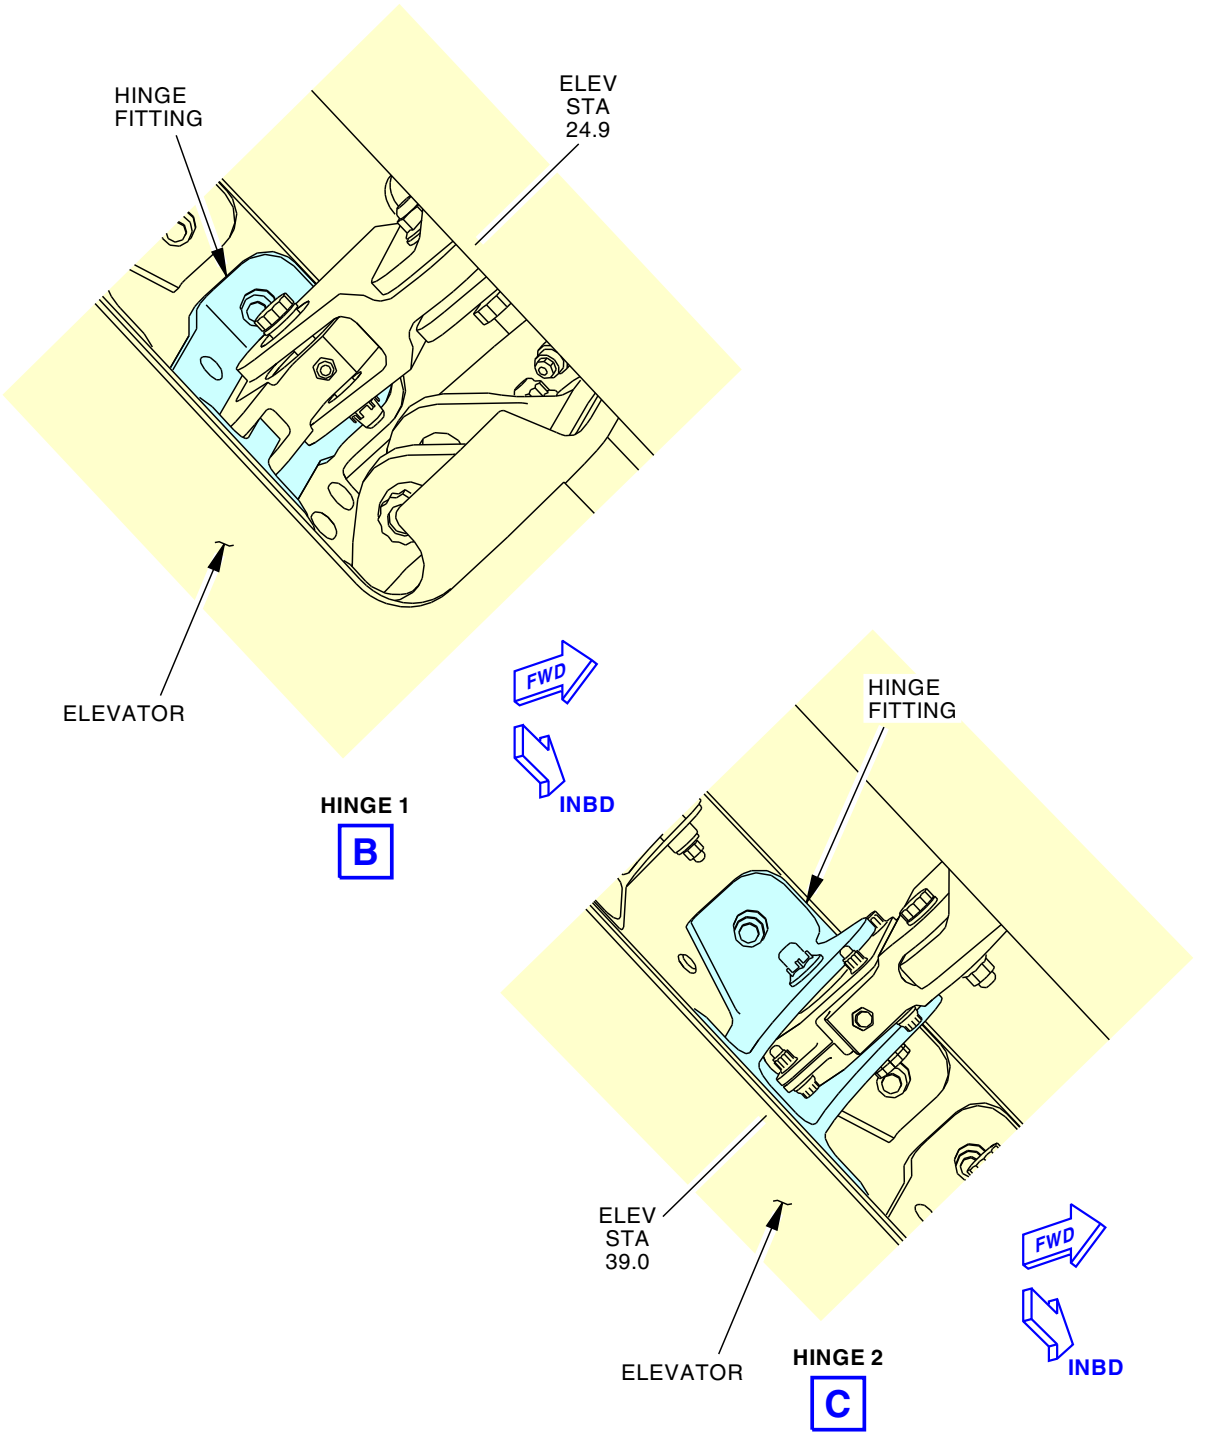


Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 2 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

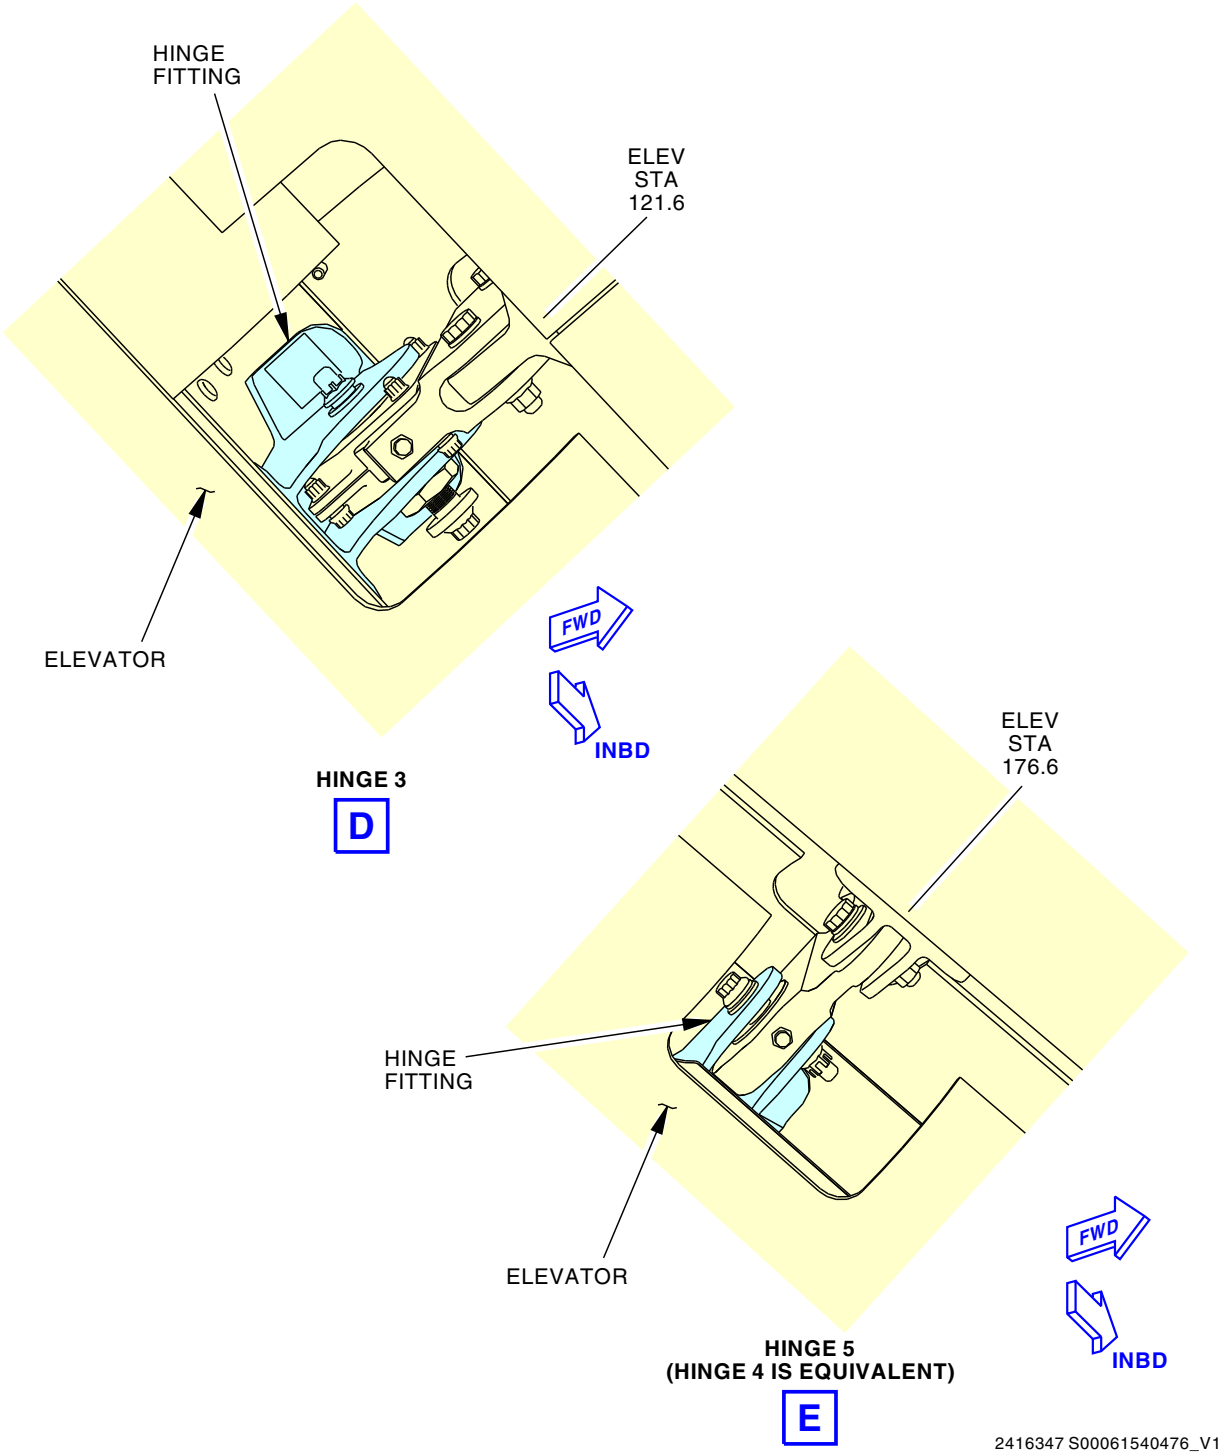


Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 3 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

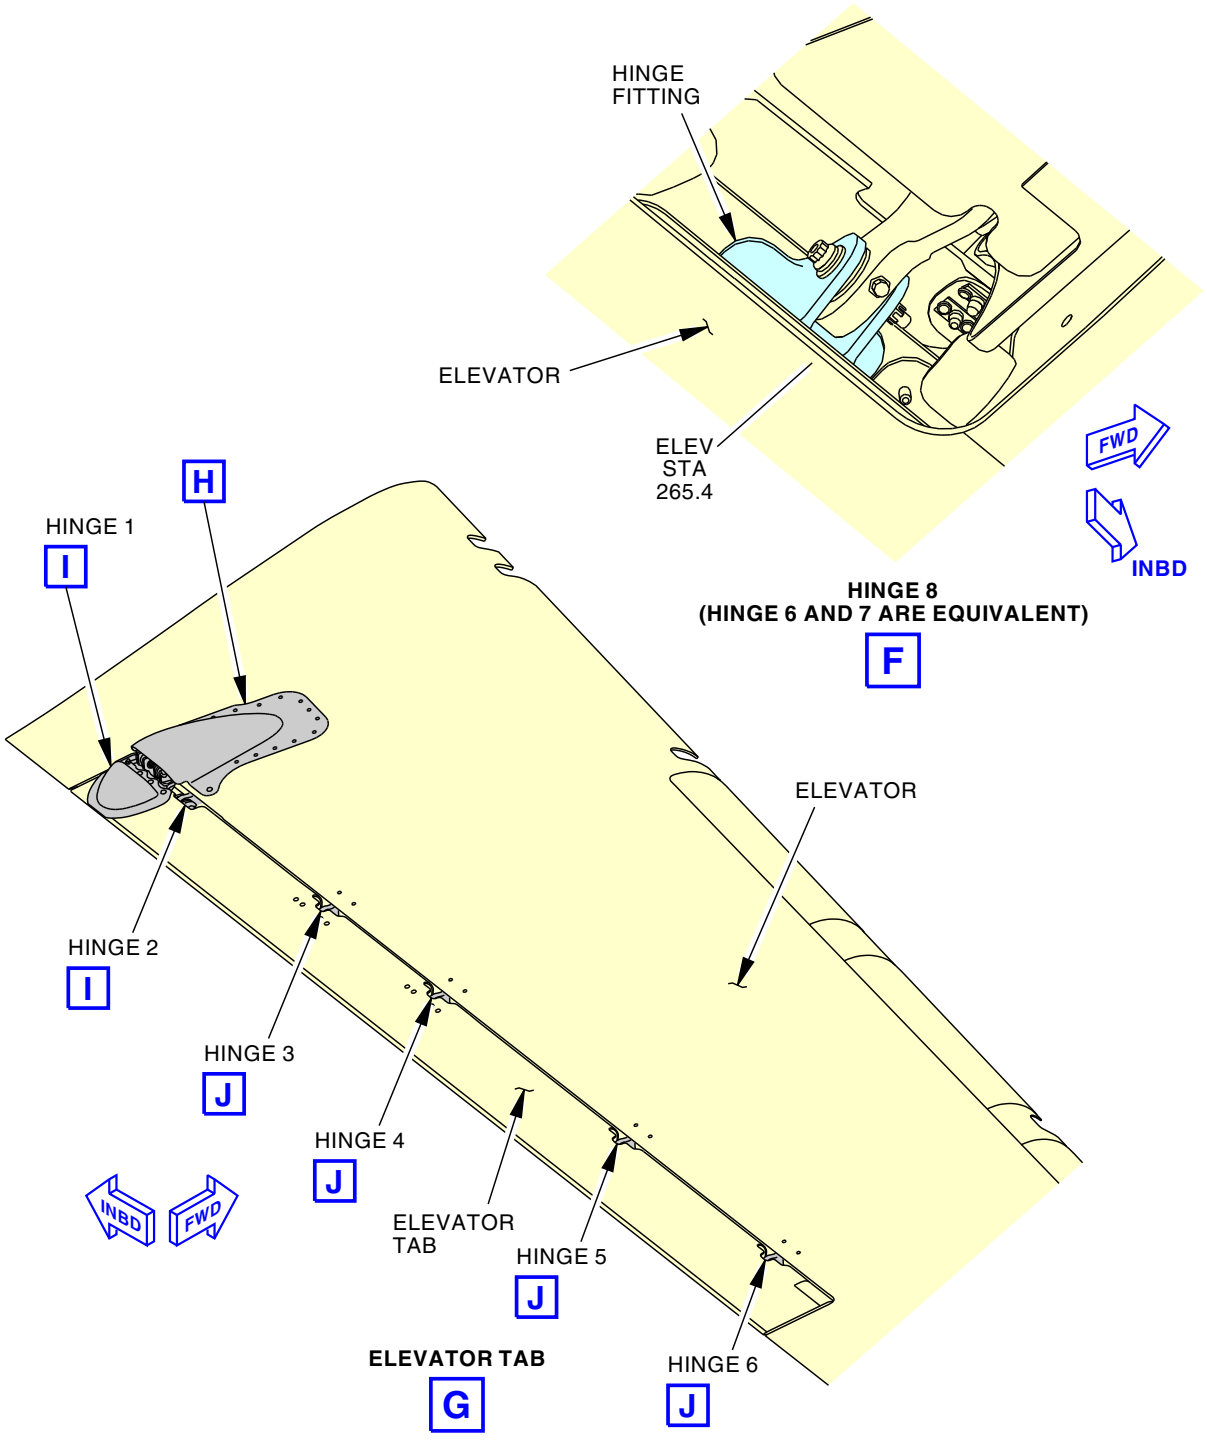


Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 4 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

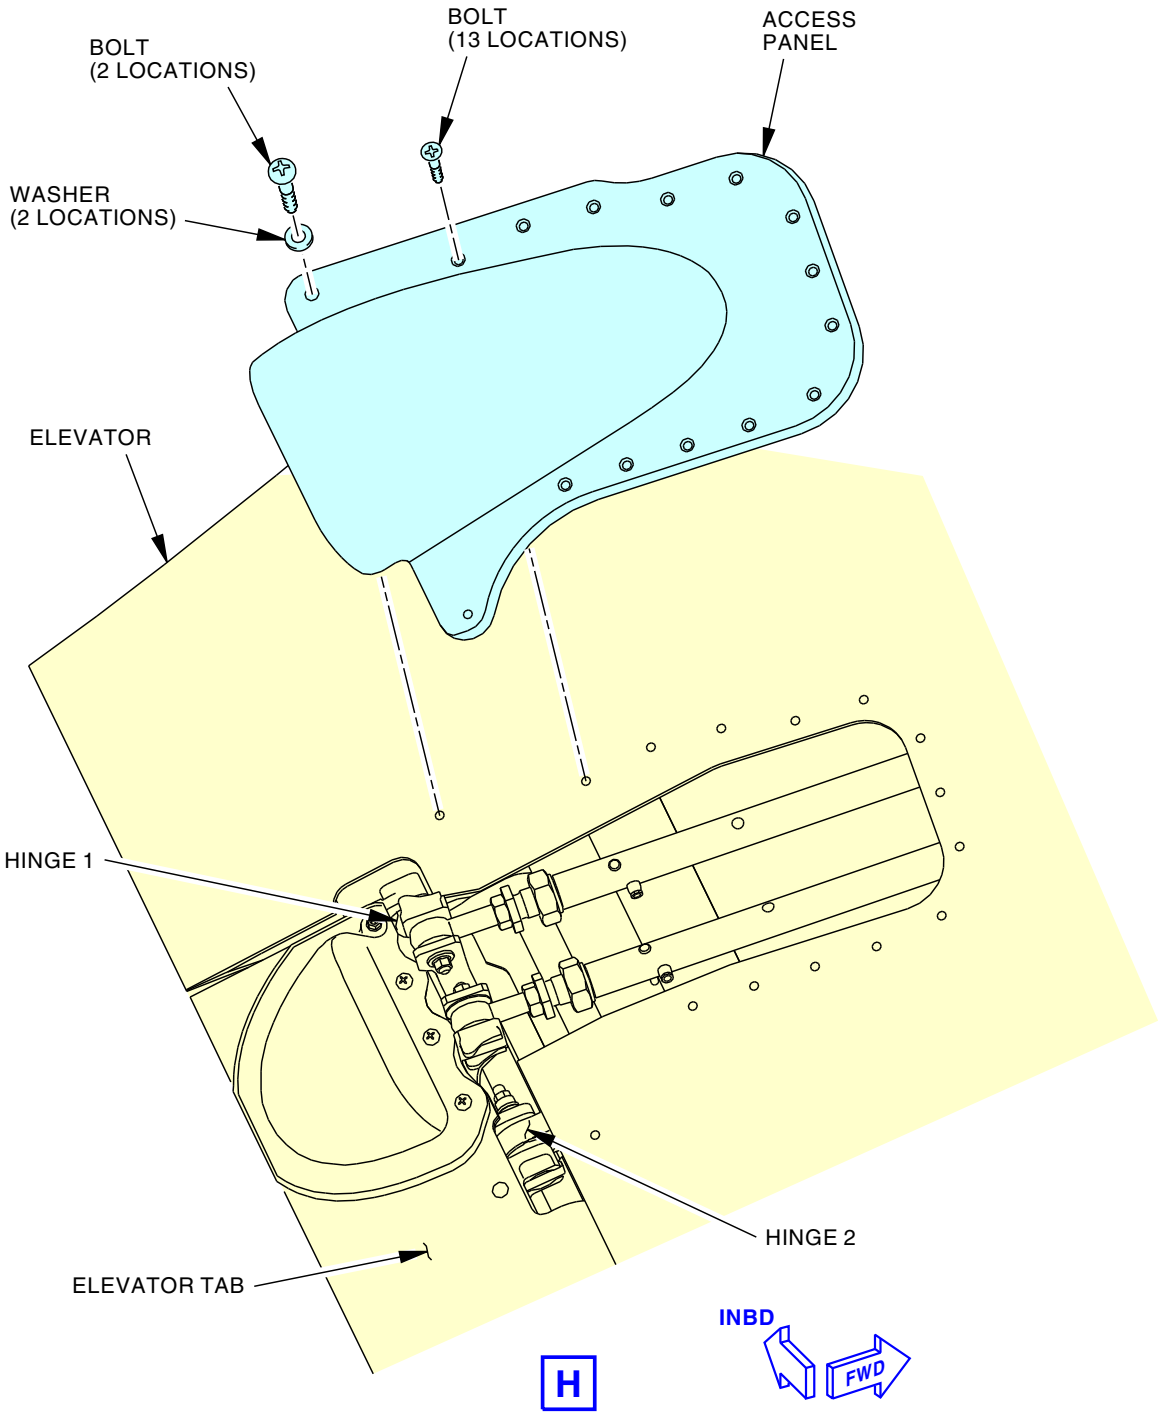


Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 5 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

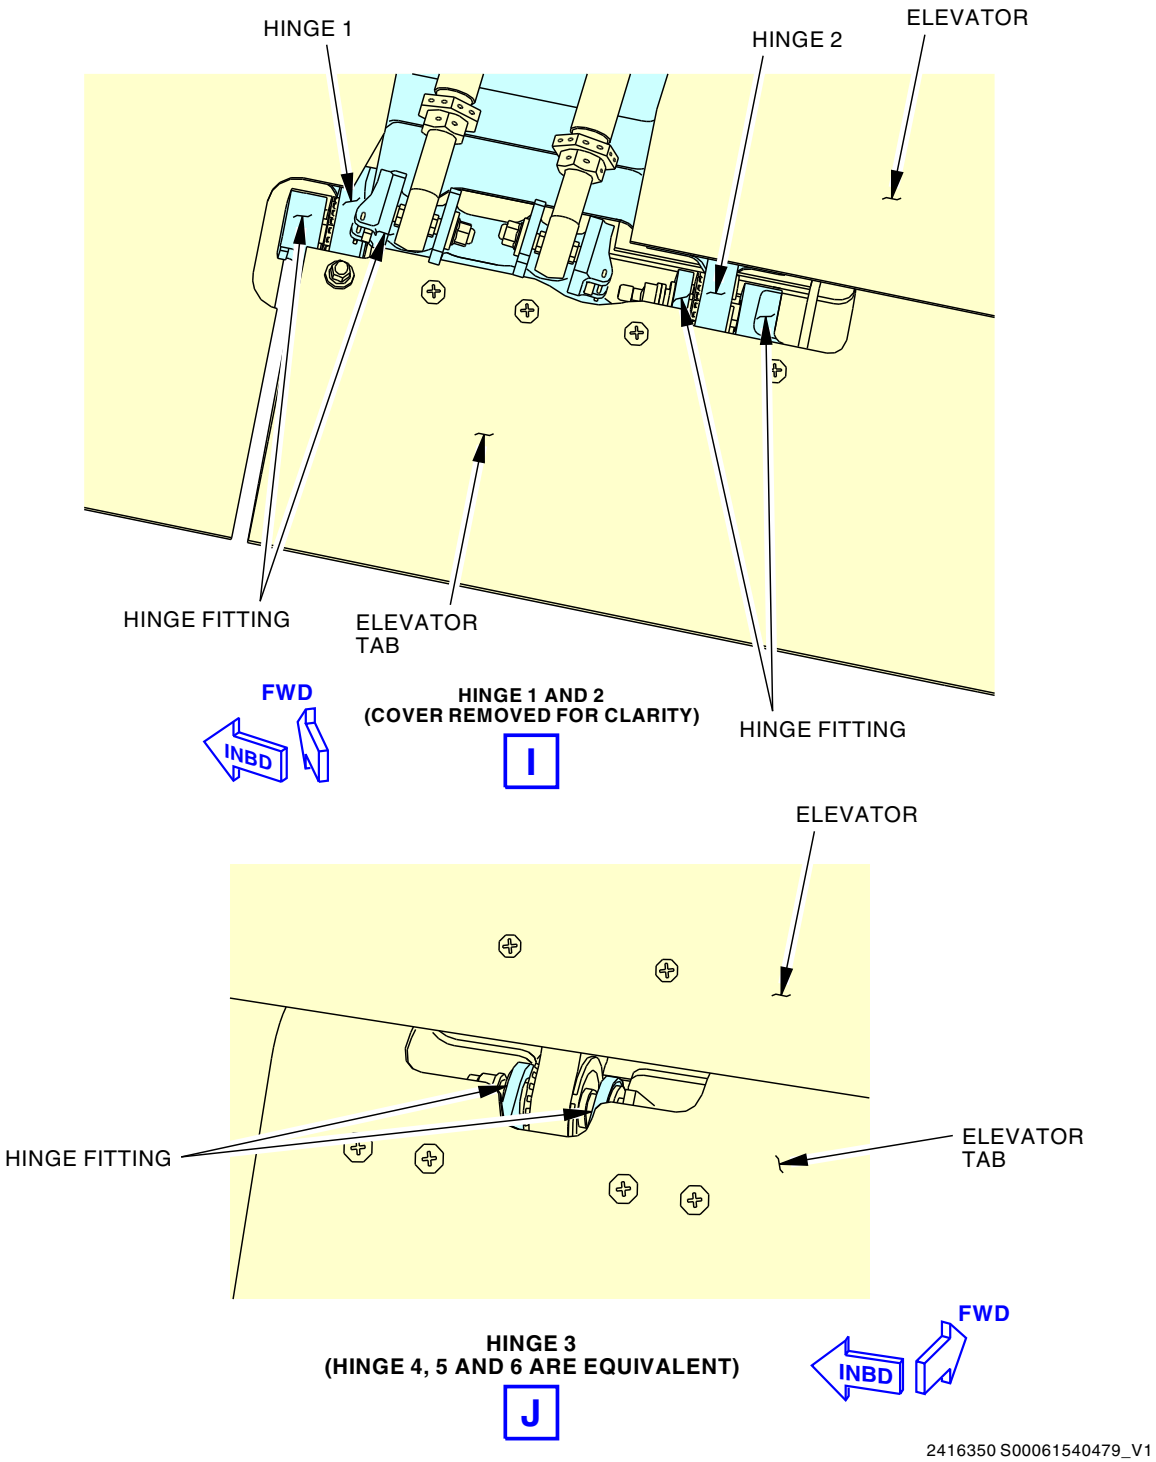

Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 6 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

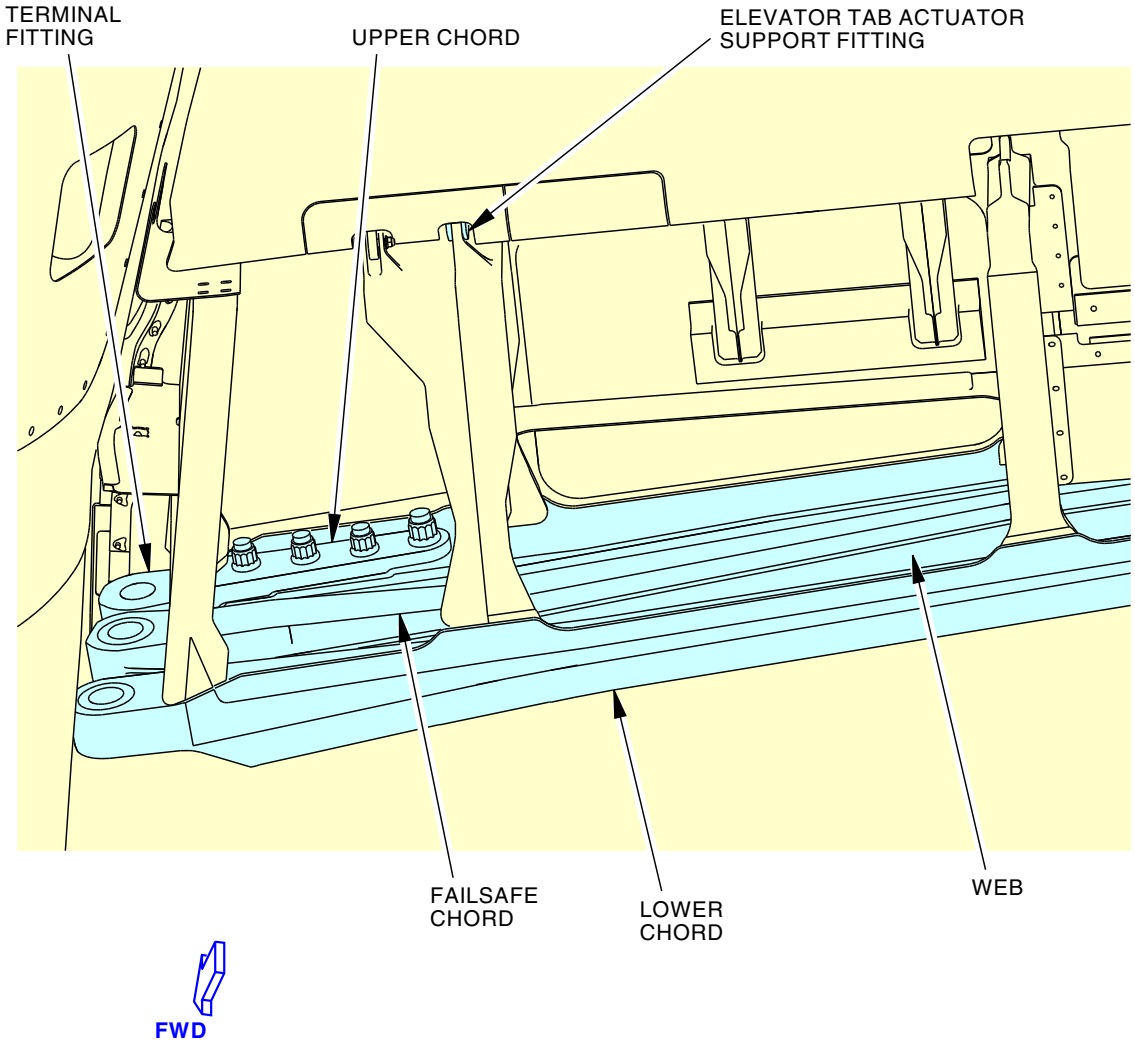

RIGHT HORIZONTAL STABILIZER REAR SPAR CHORDS, WEB, TERMINAL FITTINGS AND TAB ACTUATOR FITTING (PANELS REMOVED FOR CLARITY)

K

2416351 S00061540480_V1

Right Elevator Hinge, Actuator, and Tab Mast Arm Fittings and Weight Support Structure - General Visual (Internal)
Figure 213/55-05-03-990-813 (Sheet 7 of 7)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-211-801

14. INTERNAL - DETAILED: LEFT ELEVATOR TAB SUPT FTGS ON FRONT SPAR AND TAB SPAR AT LEADING EDGE

(Figure 214)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

C. Inspection

NOTE: Remove upper or lower horizontal stabilizer trailing edge seal and elevator inboard hinge cover panel to inspect support fittings. Remove tab hinge covers to locally inspect forward face of spar.

SUBTASK 55-05-03-211-001


(1) Do a Detailed inspection of the left elevator tab mechanism support fittings on elevator front spar and elevator tab spar at leading edge cutouts.

SUBTASK 55-05-03-910-014

(2) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

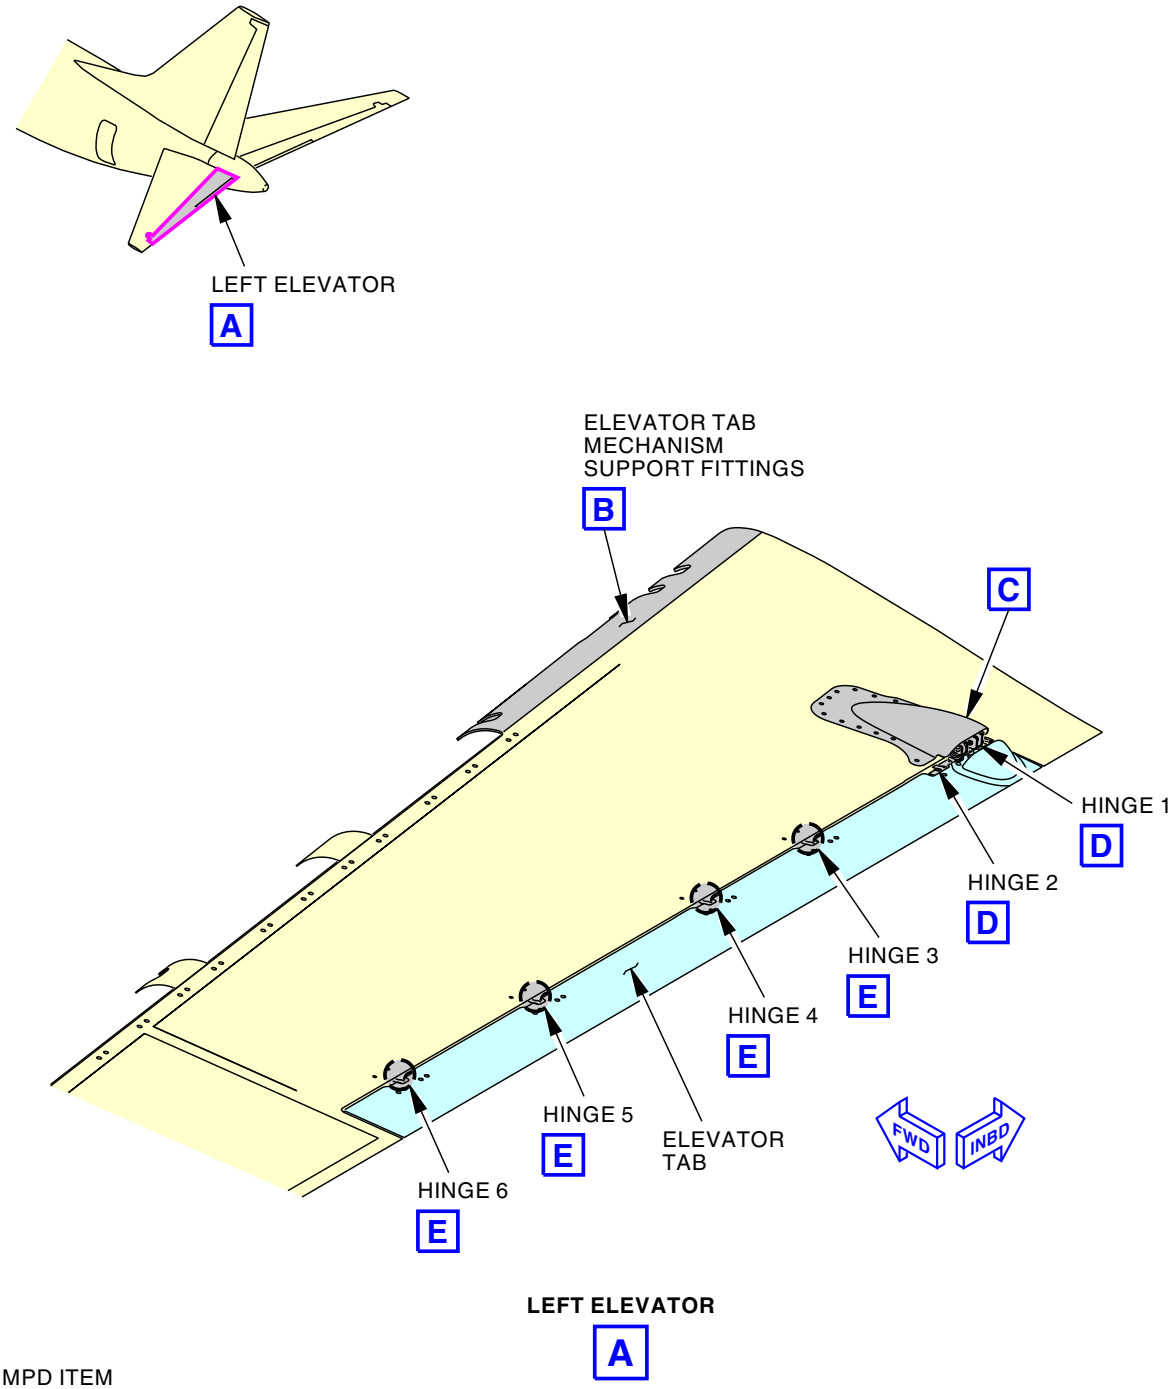


MPD ITEM
55-115-01

2416352 S00061540482_V1

INTERNAL-DETAILED: LEFT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 214/55-05-03-990-814 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

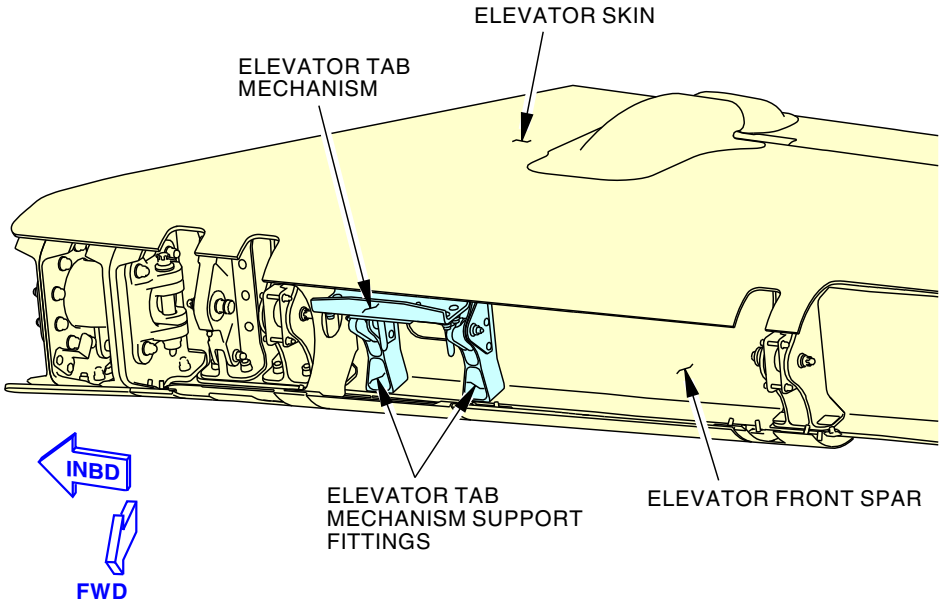

ELEVATOR TAB MECHANISM SUPPORT FITTINGS


B

MPD ITEM
55-115-01

2416353 S00061540483_V1

INTERNAL-DETAILED: LEFT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 214/55-05-03-990-814 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

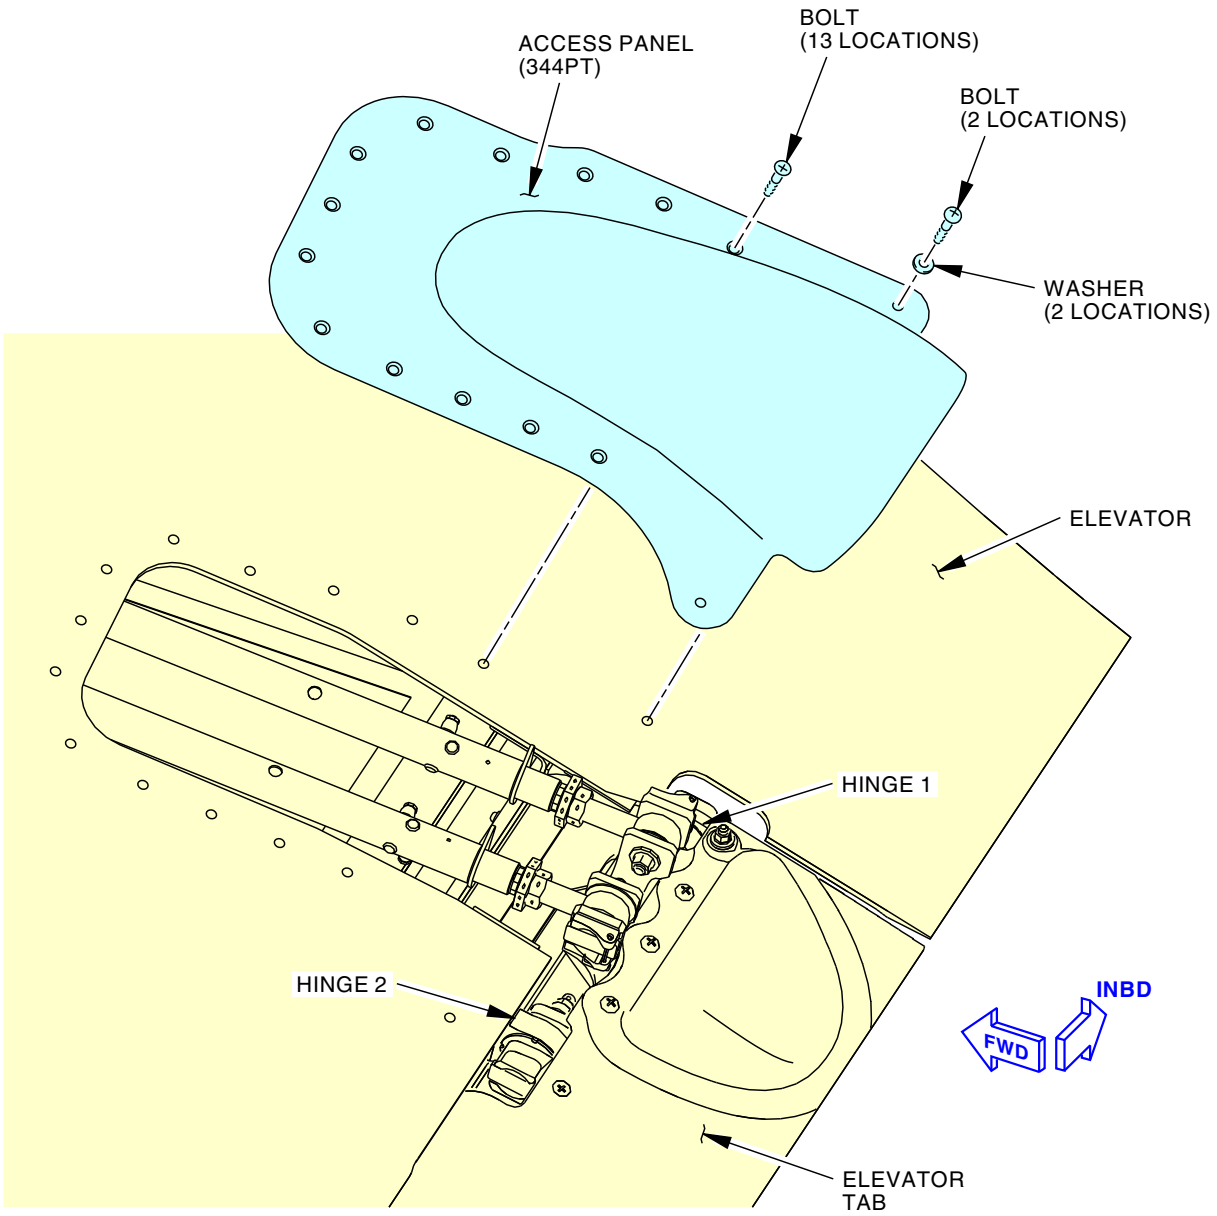


MPD ITEM
55-115-01

2416354 S00061540484_V2


INTERNAL-DETAILED: LEFT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 214/55-05-03-990-814 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

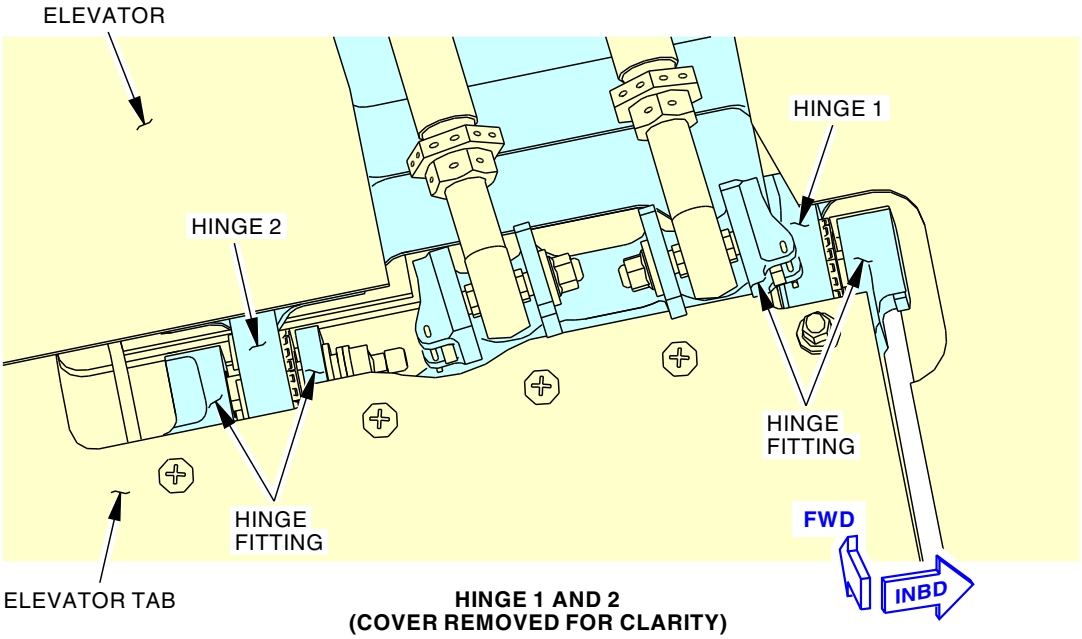

HINGE 1 AND 2
(COVER REMOVED FOR CLARITY)

D

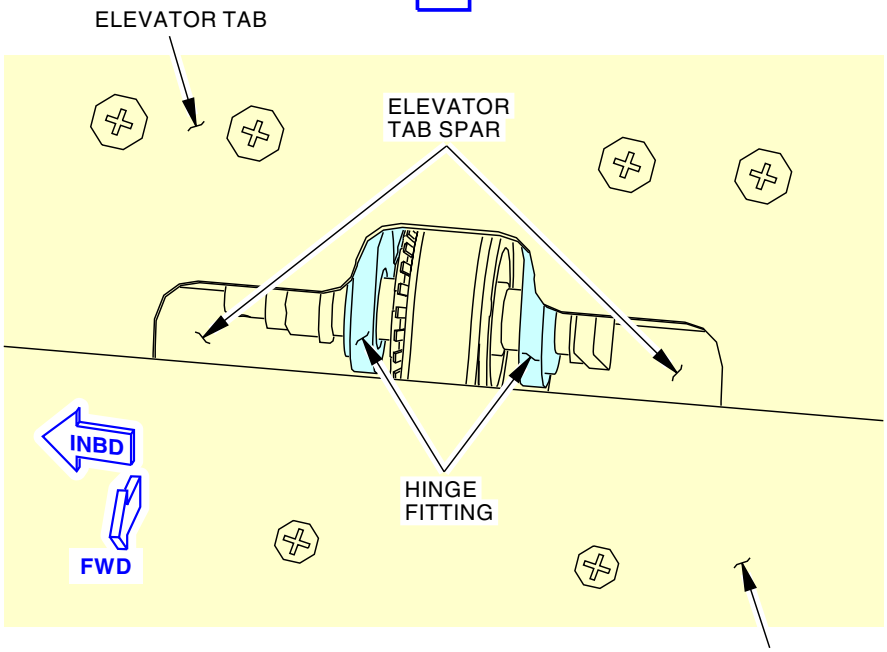

HINGE 3
(HINGE 4, 5 AND 6 ARE EQUIVALENT)

E

MPD ITEM
55-115-01

2416355 S00061540485_V1

INTERNAL-DETAILED: LEFT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 214/55-05-03-990-814 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-211-802

15. INTERNAL - DETAILED: RIGHT ELEVATOR TAB SUPT FTGS ON FRONT SPAR AND TAB SPAR AT LEADING EDGE

(Figure 215)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

C. Inspection

NOTE: Remove upper or lower horizontal stabilizer trailing edge seal and elevator inboard hinge cover panel to inspect support fittings. Remove tab hinge covers to locally inspect forward face of spar.

SUBTASK 55-05-03-211-002


(1) Do a Detailed inspection of the right elevator tab mechanism support fittings on elevator front spar and elevator tab spar at leading edge cutouts.

SUBTASK 55-05-03-910-015

(2) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

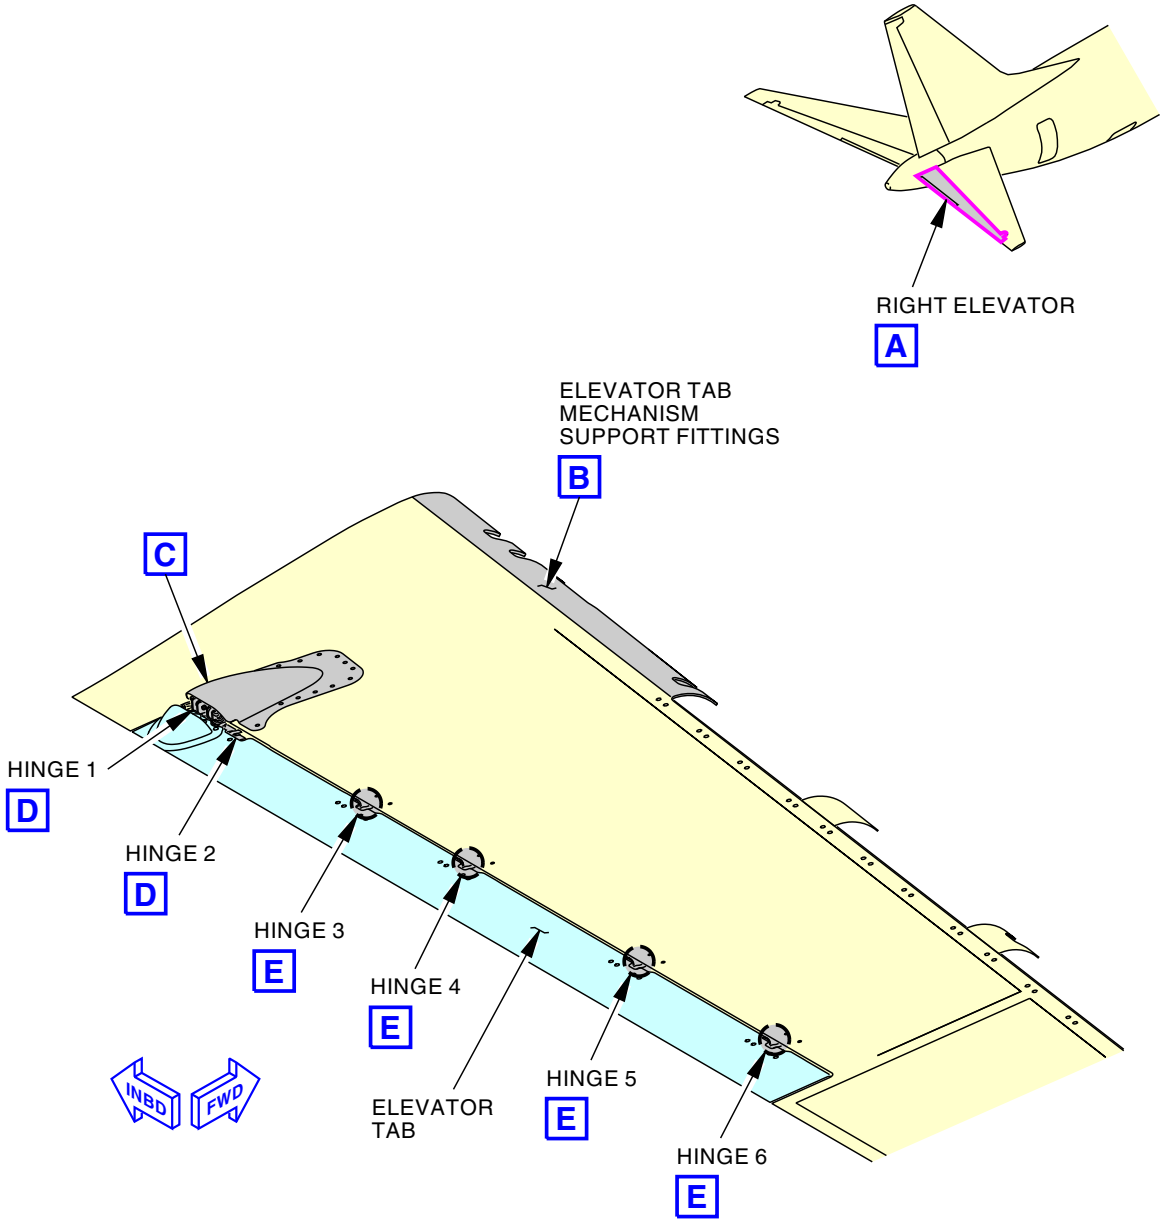

RIGHT ELEVATOR


A

MPD ITEM
55-115-02

2416356 S00061540487_V1

INTERNAL-DETAILED: RIGHT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 215/55-05-03-990-815 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

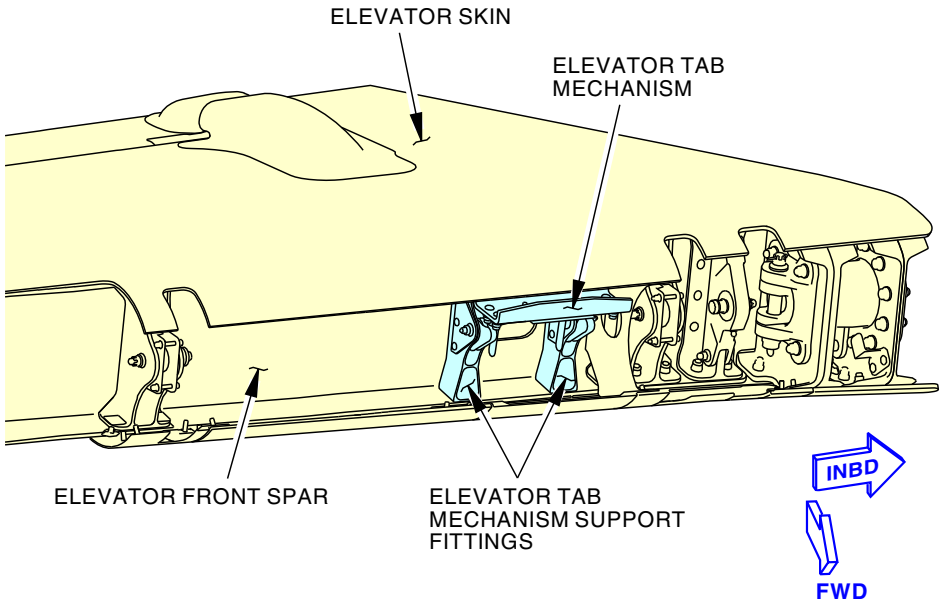

ELEVATOR TAB MECHANISM SUPPORT FITTINGS


B

MPD ITEM
55-115-02

2416357 S00061540488_V1

INTERNAL-DETAILED: RIGHT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 215/55-05-03-990-815 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

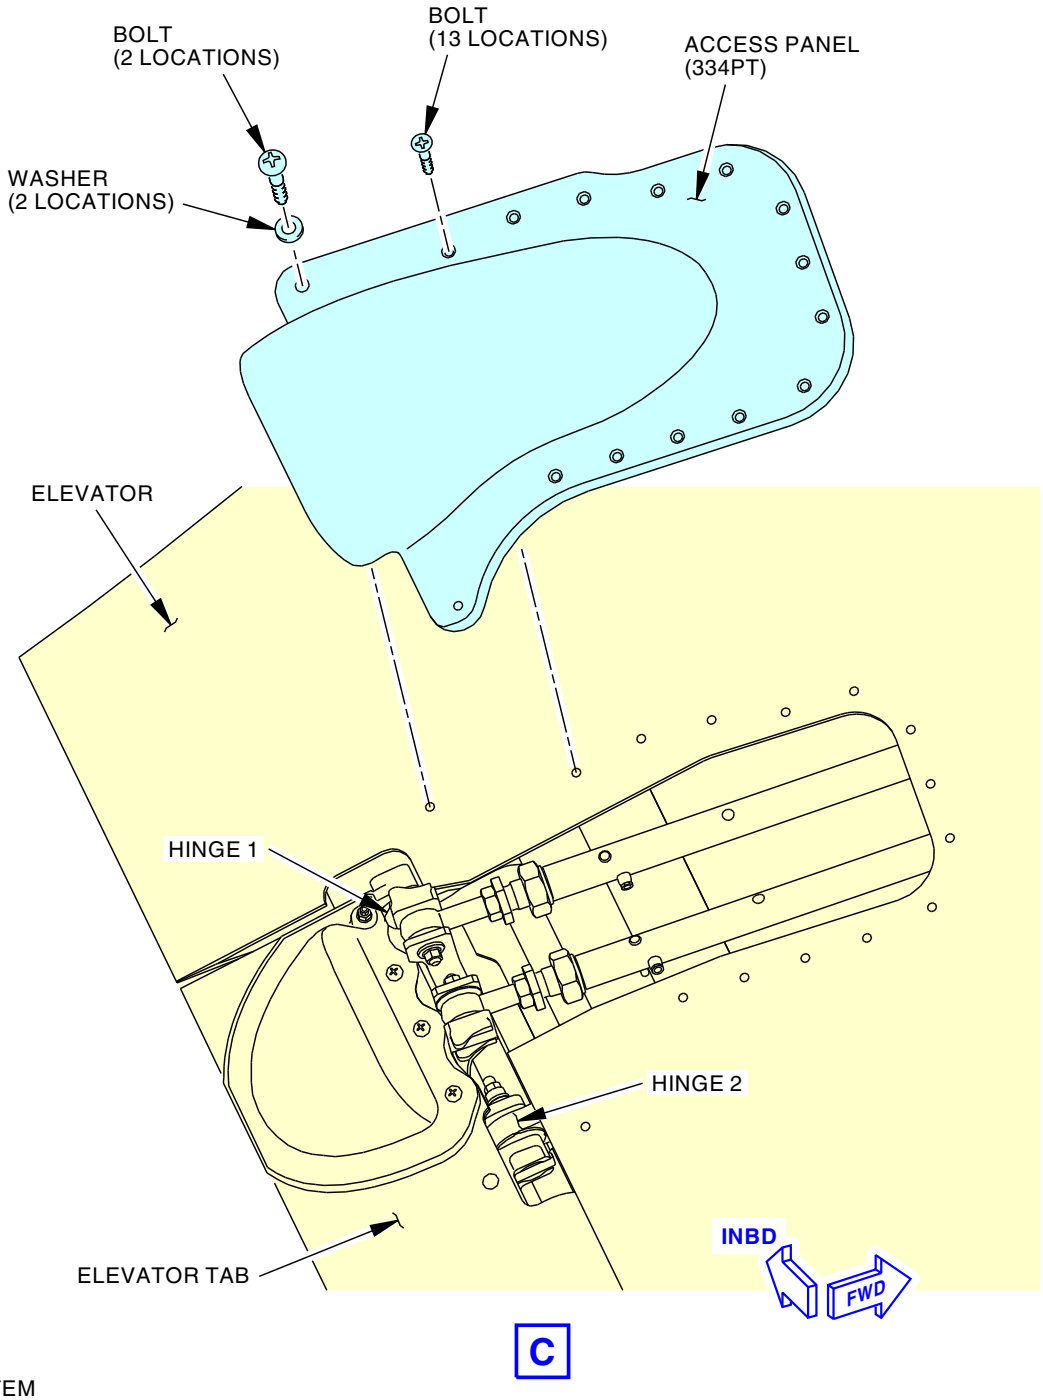


MPD ITEM
55-115-02

2416358 S00061540489_V1


INTERNAL-DETAILED: RIGHT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 215/55-05-03-990-815 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

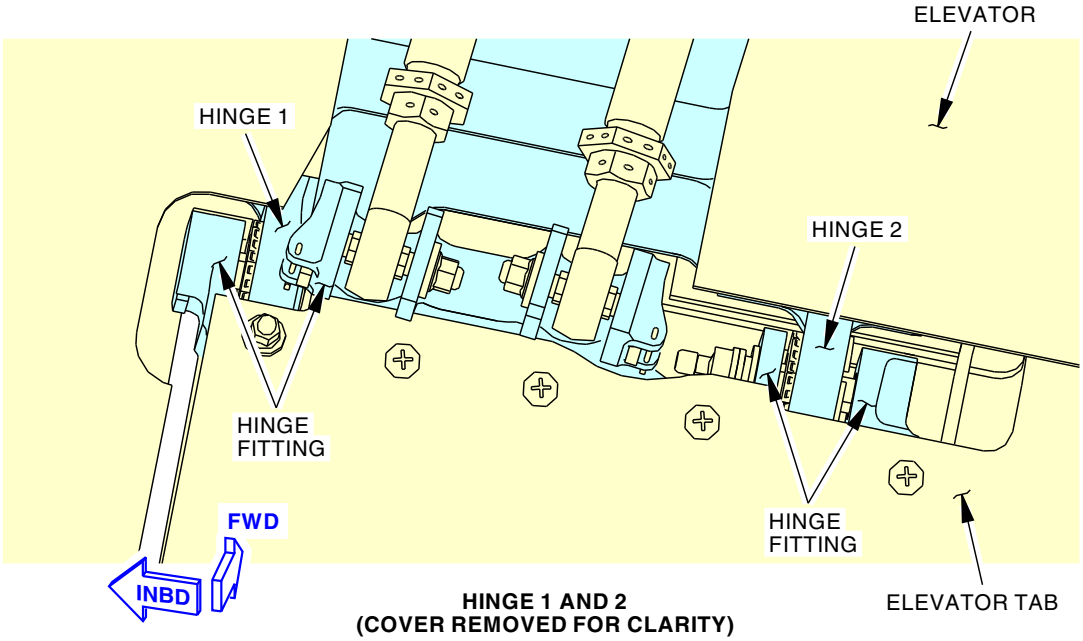

HINGE 1 AND 2
(COVER REMOVED FOR CLARITY)

D

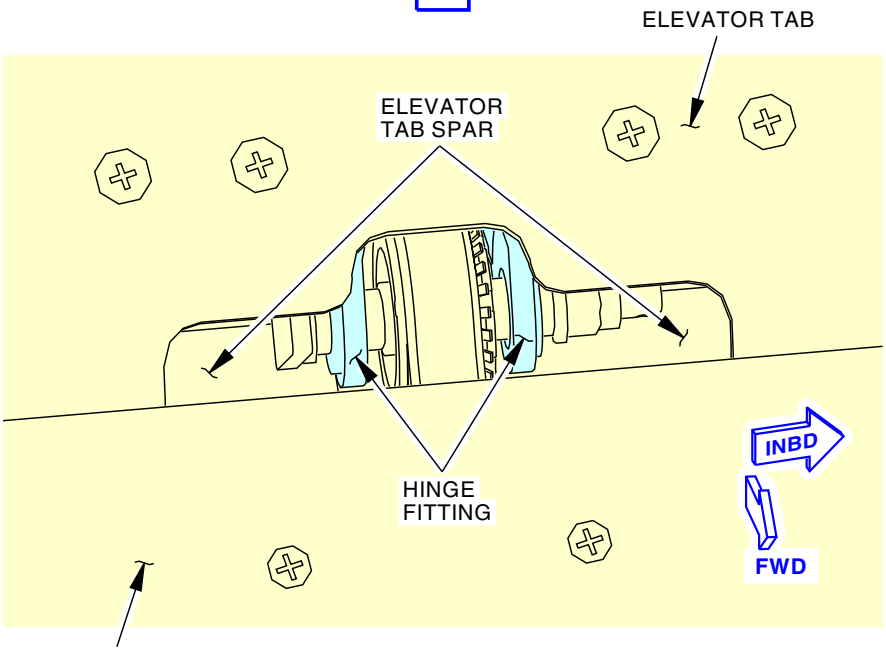

HINGE 3
(HINGE 4, 5 AND 6 ARE EQUIVALENT)

E

MPD ITEM
55-115-02

2416359 S00061540490_V1

INTERNAL-DETAILED: RIGHT ELEVATOR TAB SUPT FTGS ON FRONT SPAR & TAB SPAR AT LEADING EDGE CUTOUTS
Figure 215/55-05-03-990-815 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-814

16. INTERNAL - GENERAL VISUAL: LEFT HORIZONTAL STABILIZER TRAILING EDGE

(Figure 216)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-801	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge

D. Access Panels

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

E. Inspection

SUBTASK 55-05-03-010-014

(1) Open these access panels:

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

NOTE: Bolt removal is not necessary.

SUBTASK 55-05-03-210-014

(2) Do a General Visual inspection of the left horizontal stabilizer rear spar terminal fittings and the center section rear spar lugs.

SUBTASK 55-05-03-910-016

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-801.

SUBTASK 55-05-03-410-014

(4) Close these access panels:


Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333AT	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

SUBTASK 55-05-03-390-010

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

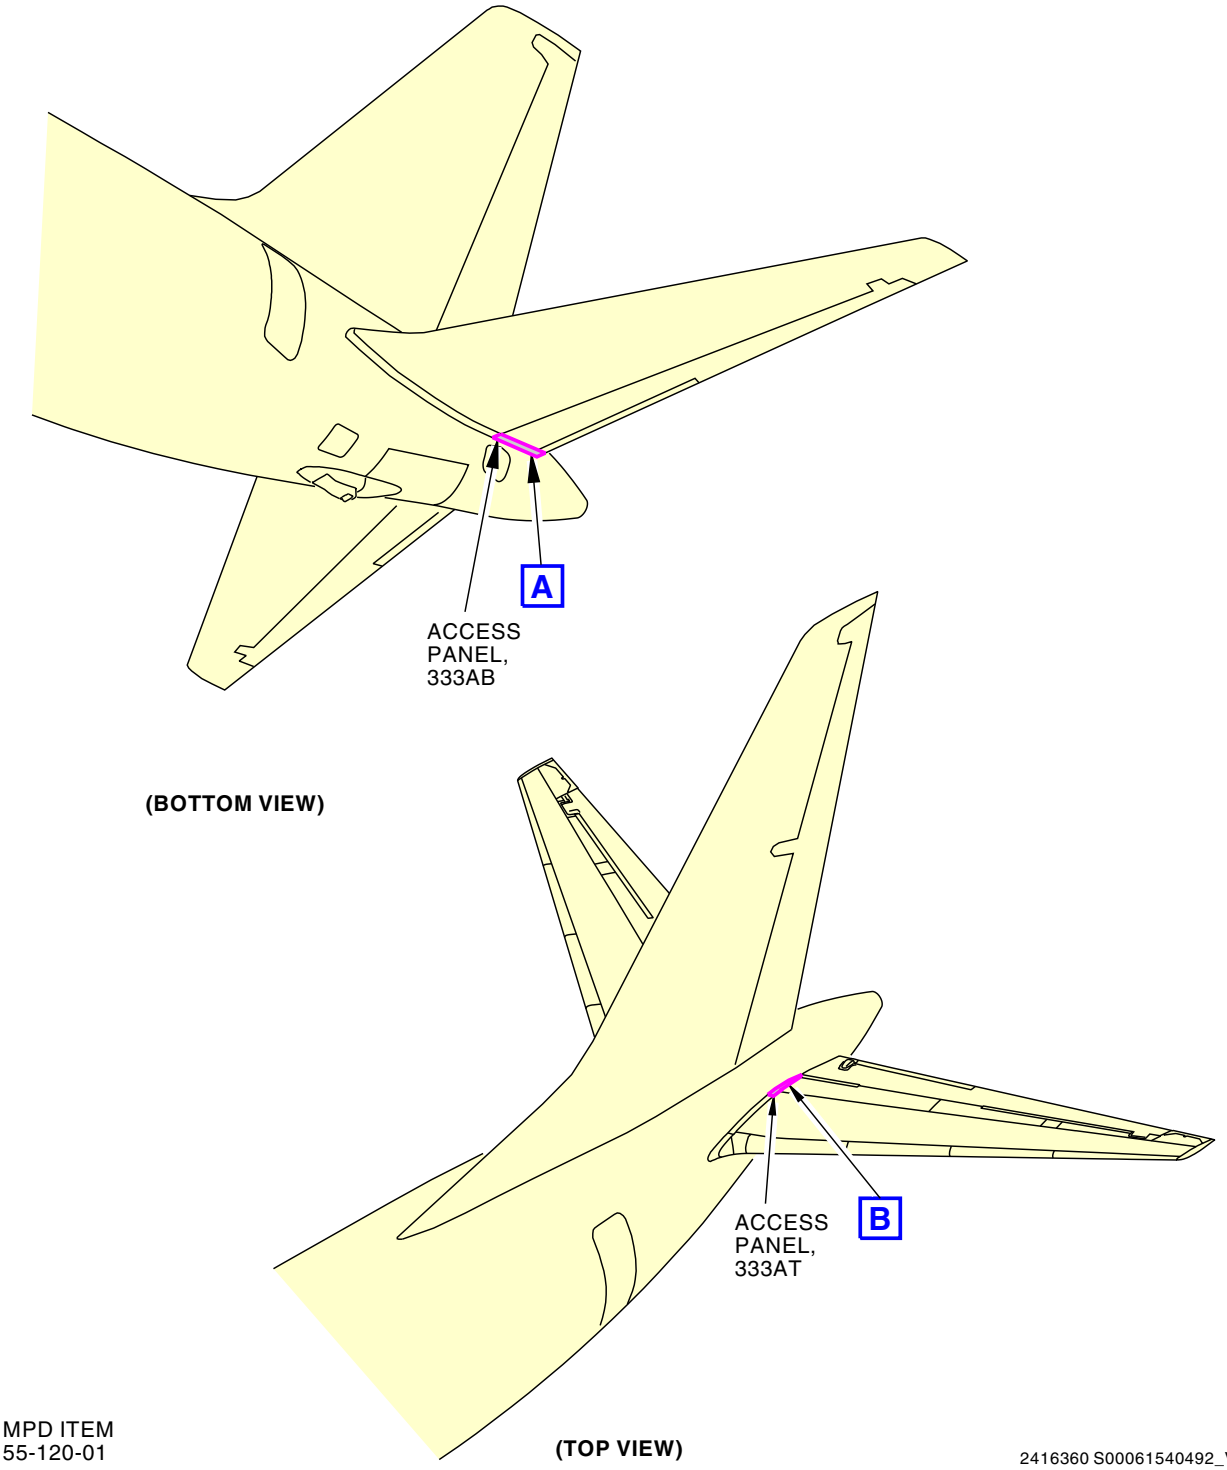

Left Horizontal Stabilizer Trailing Edge General Visual (Internal)
Figure 216/55-05-03-990-816 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

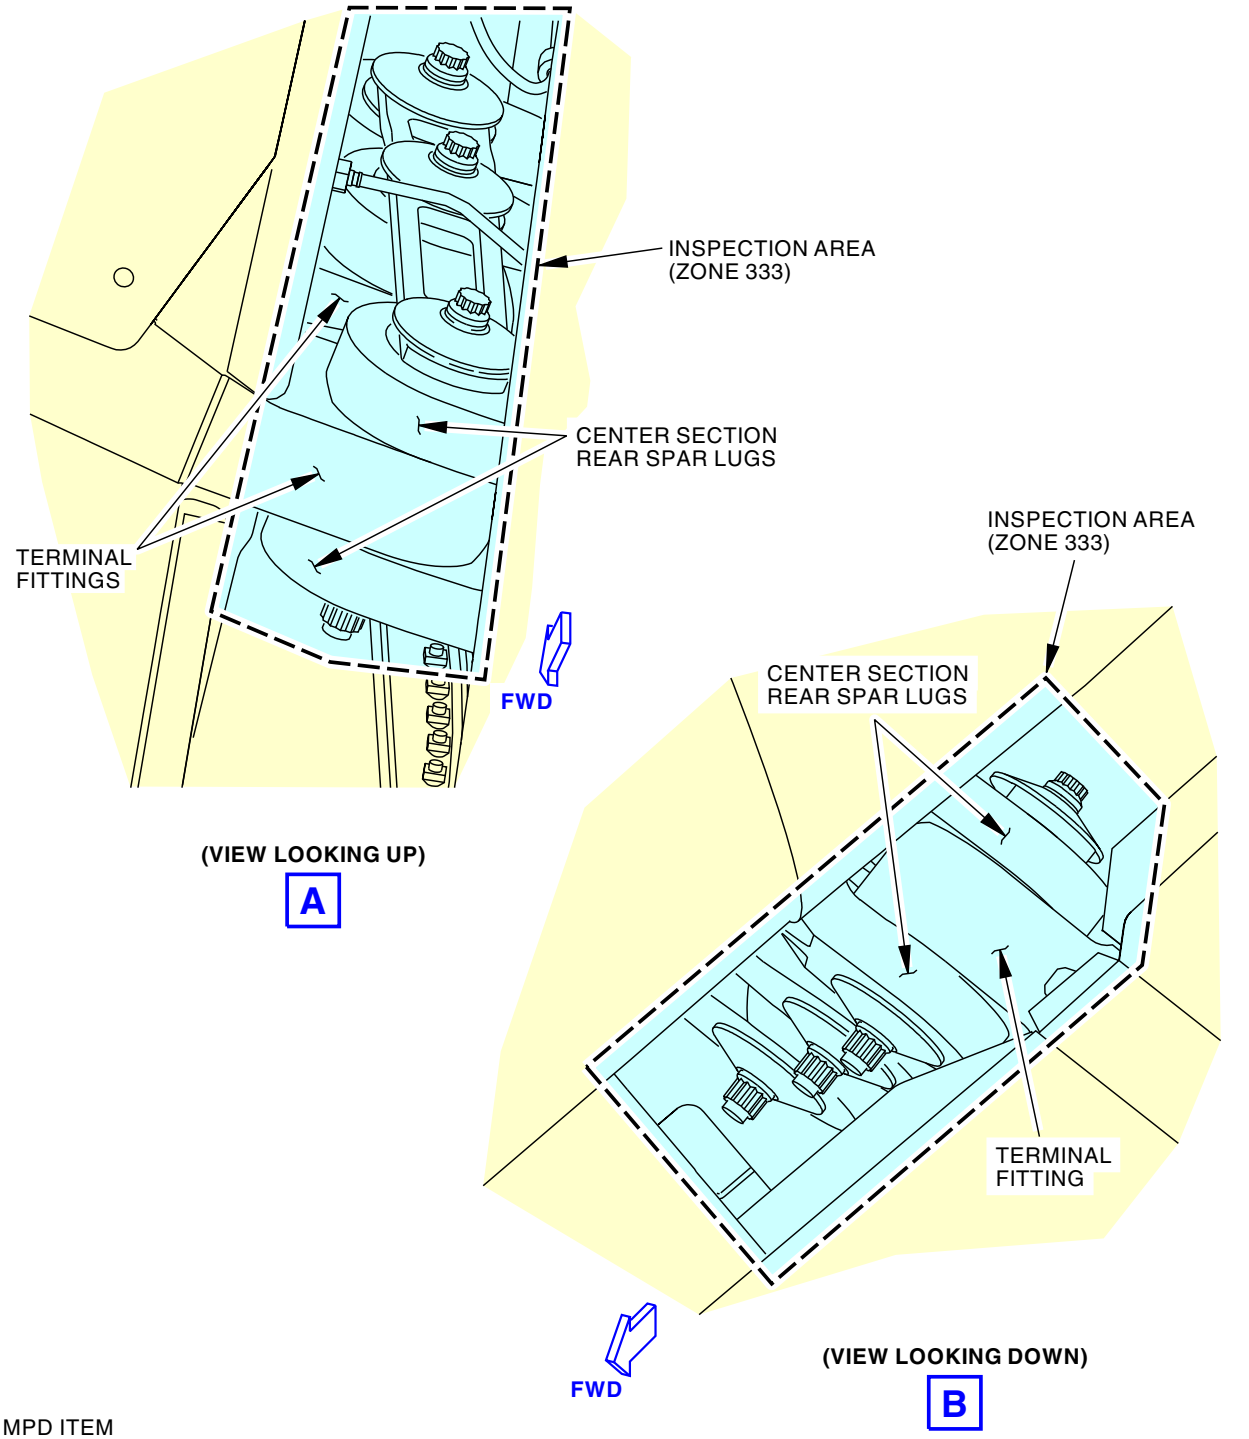

Left Horizontal Stabilizer Trailing Edge General Visual (Internal)
Figure 216/55-05-03-990-816 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-815

17. INTERNAL - GENERAL VISUAL: RIGHT HORIZONTAL STABILIZER TRAILING EDGE

(Figure 217)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-801	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

D. Access Panels

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body

E. Inspection

SUBTASK 55-05-03-010-015

(1) Open these access panels:

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body

NOTE: Bolt removal is not necessary.

SUBTASK 55-05-03-210-015

(2) Do a General Visual inspection of the right horizontal stabilizer rear spar terminal fittings and the center section rear spar lugs.

SUBTASK 55-05-03-910-017

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-801.

SUBTASK 55-05-03-410-015

(4) Close these access panels:


Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343AT	Horizontal Stabilizer, Gap Cover - H. Stab. to Body

SUBTASK 55-05-03-390-011

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

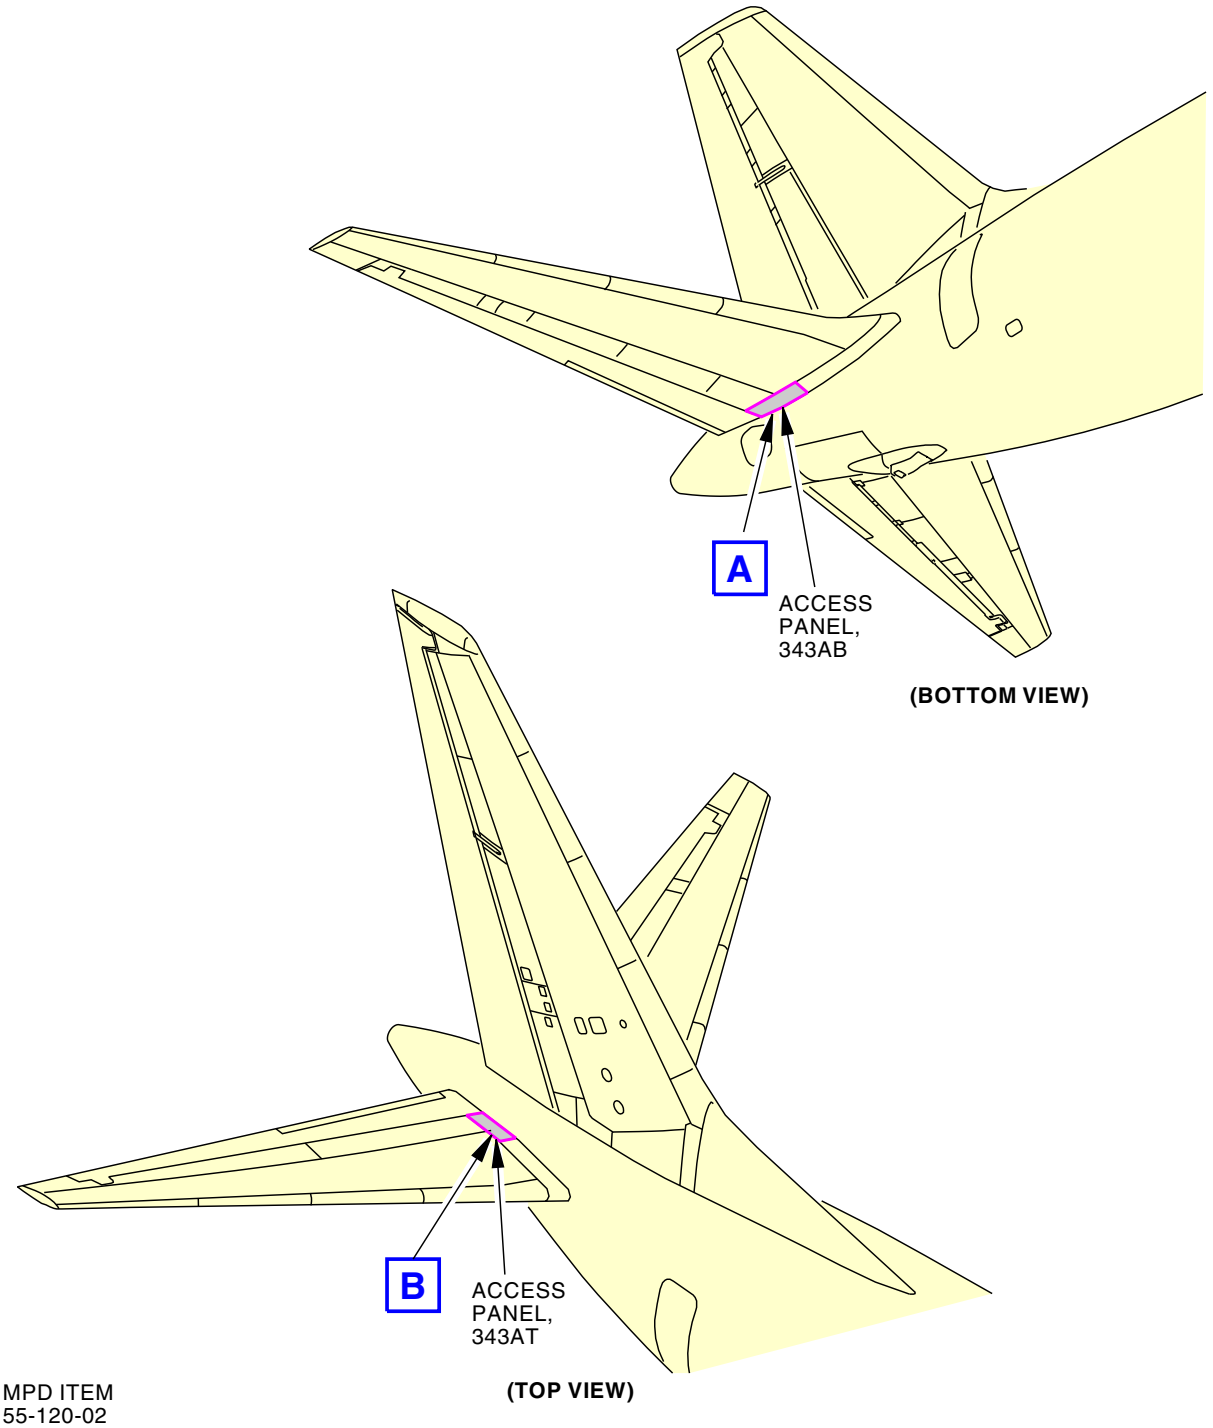

Right Horizontal Stabilizer Trailing Edge General Visual (Internal)
Figure 217/55-05-03-990-817 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

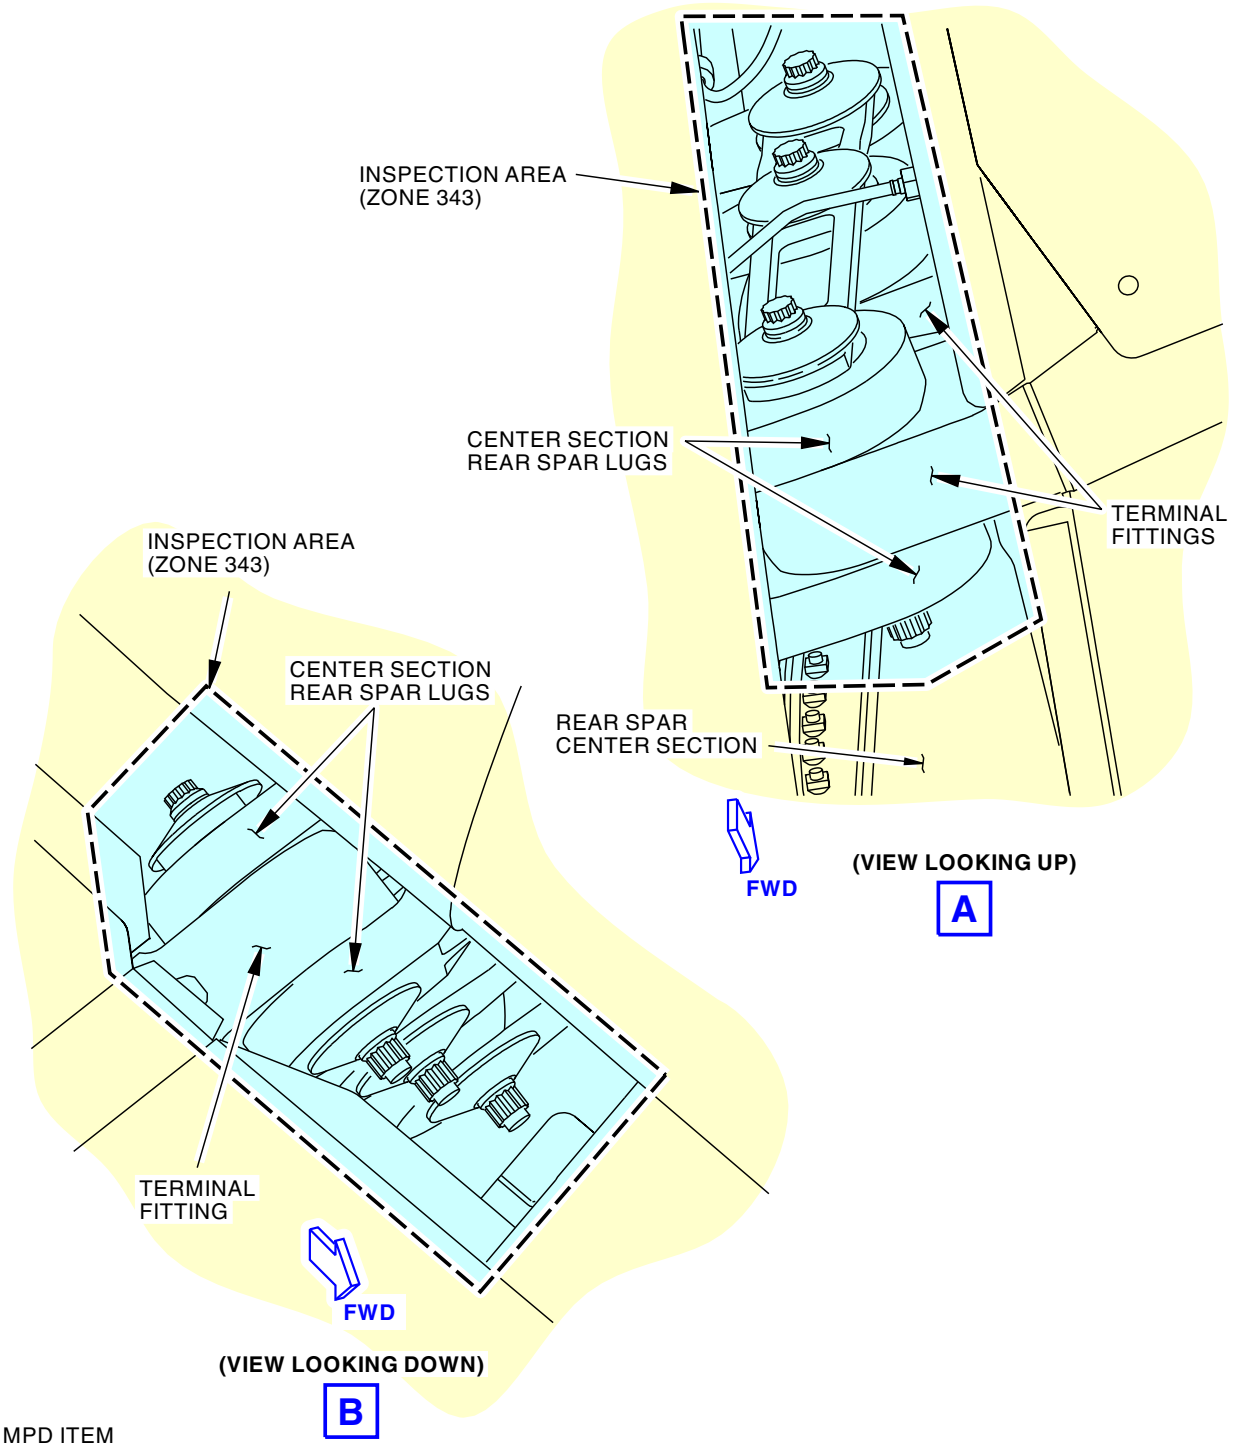

Right Horizontal Stabilizer Trailing Edge General Visual (Internal)
Figure 217/55-05-03-990-817 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-211-803

18. INTERNAL - DETAILED: INTERNAL - LEFT ELEVATOR TAB HINGE FITTING

(Figure 218)


A. Inspection

SUBTASK 55-05-03-211-003

(1) Do the inspection.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

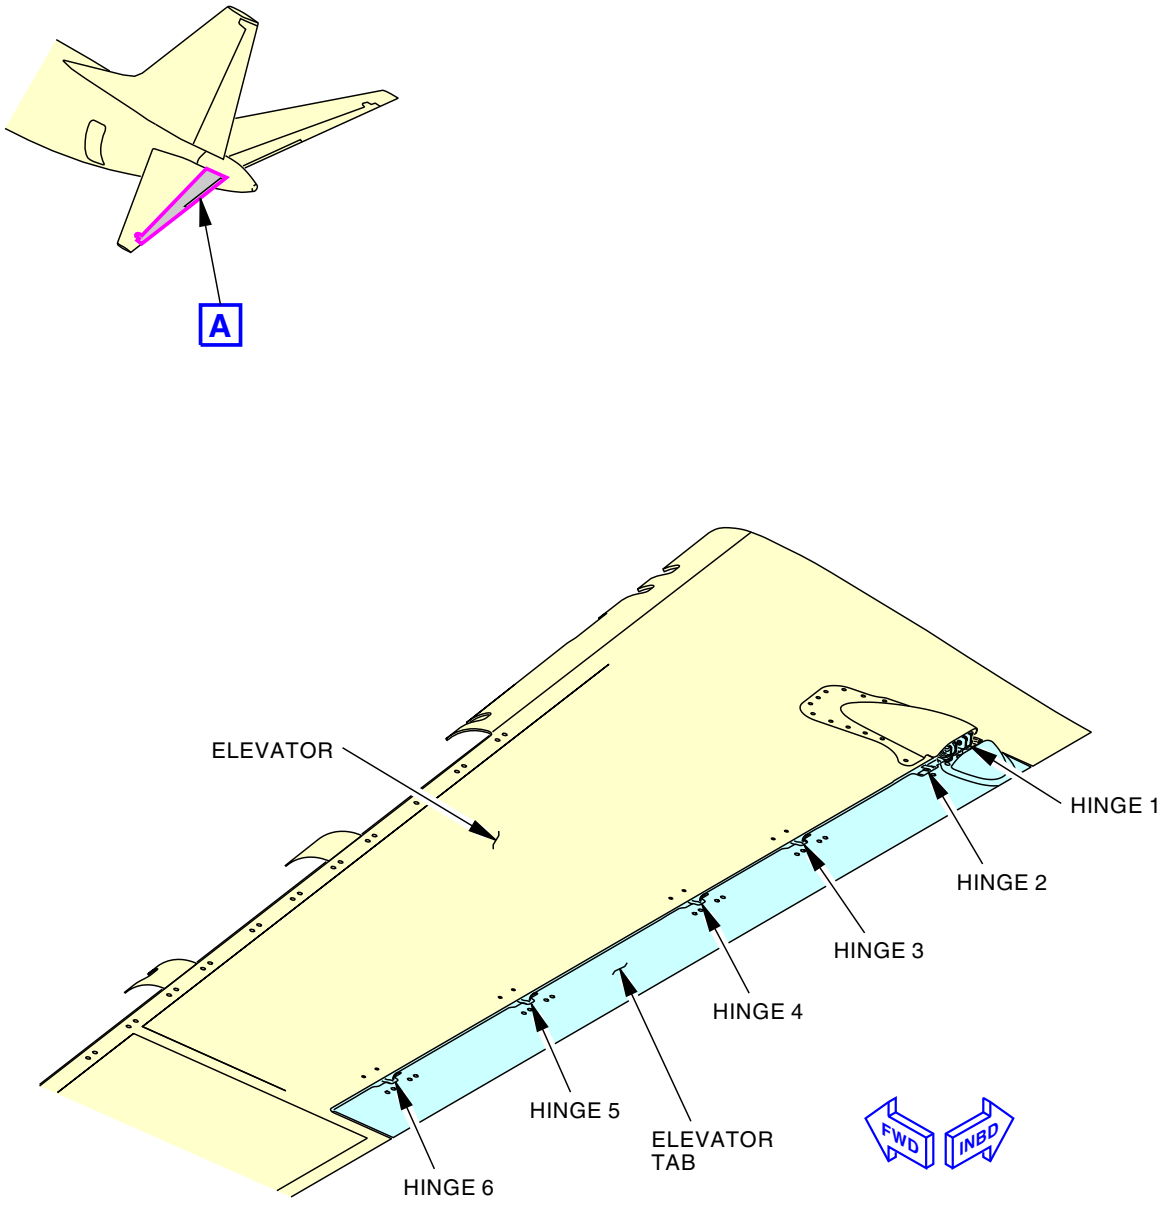

LEFT ELEVATOR

A

MPD ITEM
55-115-01

2416364 S00061540498_V1

Left Elevator Tab
Figure 218/55-05-03-990-818

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-211-804

19. INTERNAL - DETAILED: INTERNAL - RIGHT ELEVATOR TAB HINGE FITTING

(Figure 219)


A. Inspection


SUBTASK 55-05-03-211-004

(1) Do the inspection.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

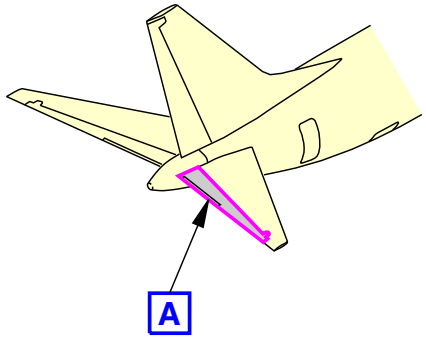

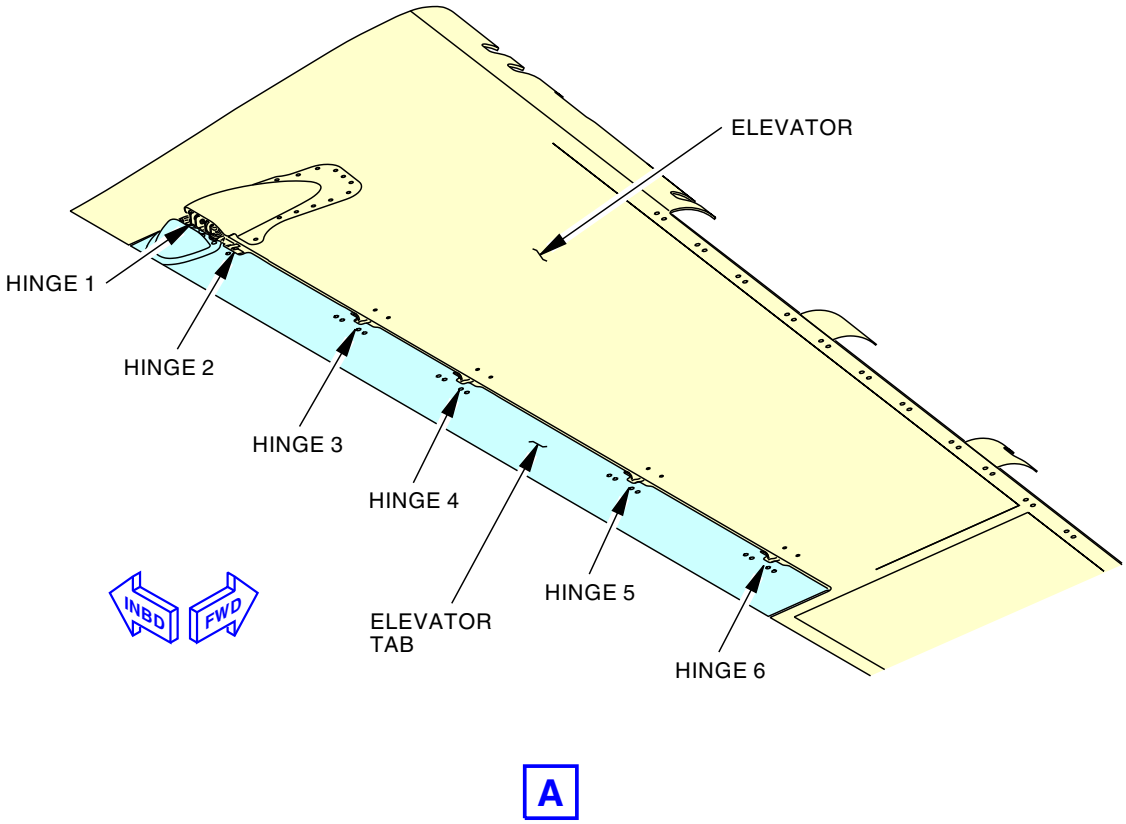

MPD ITEM
55-115-02

2416365 S00061540500_V1

Right Elevator Tab
Figure 219/55-05-03-990-819

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-210-816

20. INTERNAL - GENERAL VISUAL: RUDDER, ELEVATOR AND ELEVATOR TAB ATTACH FITTINGS

(Figure 220)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
20-10-11-000-801	Pressure-Sensitive Decal Removal (P/B 401)
20-10-11-400-801	Pressure-Sensitive Decal Installation (P/B 401)
20-10-14-000-801	Pressure Sensitive Placard Removal (P/B 401)
20-10-14-400-801	Pressure Sensitive Placard Installation (P/B 401)
51-05-01-210-806	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
325	Vertical Fin - Rudder
334	Left Horizontal Stabilizer - Elevator
344	Right Horizontal Stabilizer - Elevator

D. Access Panels

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ACL	Rudder Nose Cover/Rudder Hinge No. 9 At Rudder Station 276.24
324ADL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 257.93
324AEL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 184.67
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324AHL	Rudder Nose Fairing/Rudder Hinge No. 5 At Rudder Station 129.74
324AJL	Rudder Nose Fairing/Rudder Hinge No. 4 At Rudder Station 74.80
324AKL	Rudder Nose Fairing/Rudder Hinge No. 2 At Rudder Station 53.48
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324AXL	Lower Rudder Gap Cover
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324RL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324TL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324VL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324YL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334PT	Horizontal Stabilizer, Tab Control Rod Fairing
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344PT	Horizontal Stabilizer, Tab Control Rod Fairing, Elevator Sta 34.0
S3001	Rudder, Elevator, and Elevator Tab Attach Fittings

E. Inspection

SUBTASK 55-05-03-010-016

(1) Open these access panels:

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ACL	Rudder Nose Cover/Rudder Hinge No. 9 At Rudder Station 276.24
324ADL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 257.93
324AEL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 184.67
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324AHL	Rudder Nose Fairing/Rudder Hinge No. 5 At Rudder Station 129.74
324AJL	Rudder Nose Fairing/Rudder Hinge No. 4 At Rudder Station 74.80
324AKL	Rudder Nose Fairing/Rudder Hinge No. 2 At Rudder Station 53.48
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324AXL	Lower Rudder Gap Cover
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324RL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324TL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324VL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324YL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334PT	Horizontal Stabilizer, Tab Control Rod Fairing
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344PT	Horizontal Stabilizer, Tab Control Rod Fairing, Elevator Sta 34.0

Special Access:

Number	Name/Location
S3001	Rudder, Elevator, and Elevator Tab Attach Fittings

SUBTASK 55-05-03-020-009

(2) If any vinyl maintenance markers and/or placards with a surface area greater than 60 square inches are applied on the structure to be inspected, then remove the decal or placard prior to inspection.

(a) To remove decals, do this task: Pressure-Sensitive Decal Removal, TASK 20-10-11-000-801

(b) To remove placards, do this task: Pressure Sensitive Placard Removal, TASK 20-10-14-000-801

SUBTASK 55-05-03-210-016

(3) Do a General Visual inspection of the rudder, elevator and elevator tab skin panels, rudder and elevator spars, rudder and elevator inspar ribs, rudder and elevator leading edge skins, rudder and elevator leading edge ribs, and rudder and elevator leading edge spars.

SUBTASK 55-05-03-910-018

(4) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-806.

SUBTASK 55-05-03-410-027

(5) Close this access panel:

Number	Name/Location
333AB	Horizontal Stabilizer, Gap Cover, Horizontal Stabilizer to Body

(a) Make sure that the blade seal is installed correctly into the forward and aft track of the channels.

SUBTASK 55-05-03-410-028

(6) Close this access panel:

Number	Name/Location
343AB	Horizontal Stabilizer, Gap Cover - H. Stab. to Body

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the blade seal is installed correctly into the forward and aft track of the channels.

SUBTASK 55-05-03-410-016

(7) Close these access panels:

Number	Name/Location
324AAL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ABL	Panel Assy - Trailing Edge, Beam Seal, Vertical Fin
324ACL	Rudder Nose Cover/Rudder Hinge No. 9 At Rudder Station 276.24
324ADL	Rudder Nose Cover/Rudder Hinge No. 8 At Rudder Station 257.93
324AEL	Rudder Nose Cover/Rudder Hinge No. 7 At Rudder Station 239.61
324AFL	Rudder Nose Cover/Rudder Hinge No. 6 At Rudder Station 184.67
324AGL	Upper Rudder Gap Cover At Rudder Station 164.90
324AHL	Rudder Nose Fairing/Rudder Hinge No. 5 At Rudder Station 129.74
324AJL	Rudder Nose Fairing/Rudder Hinge No. 4 At Rudder Station 74.80
324AKL	Rudder Nose Fairing/Rudder Hinge No. 2 At Rudder Station 53.48
324ALL	Rudder Nose Cover/Rudder Hinge No. 1 At Rudder Station 6.96
324AXL	Lower Rudder Gap Cover
324QL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324RL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324SL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324TL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324UL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324VL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324WL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324XL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324YL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
324ZL	Panel Assy - Trailing Edge, Beam Seal, Vert Fin
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
334PT	Horizontal Stabilizer, Tab Control Rod Fairing
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344AB	Horizontal Stabilizer, Seal, Trailing Edge to Elevator
344PT	Horizontal Stabilizer, Tab Control Rod Fairing, Elevator Sta 34.0

SUBTASK 55-05-03-390-012

(8) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

SUBTASK 55-05-03-410-045

(9) If any vinyl maintenance markers and/or placards were removed, they may be replaced after inspection.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) To install decals, do this task:Pressure-Sensitive Decal Installation, TASK 20-10-11-400-801

(b) To install placards, do this task:Pressure Sensitive Placard Installation, TASK 20-10-14-400-801

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

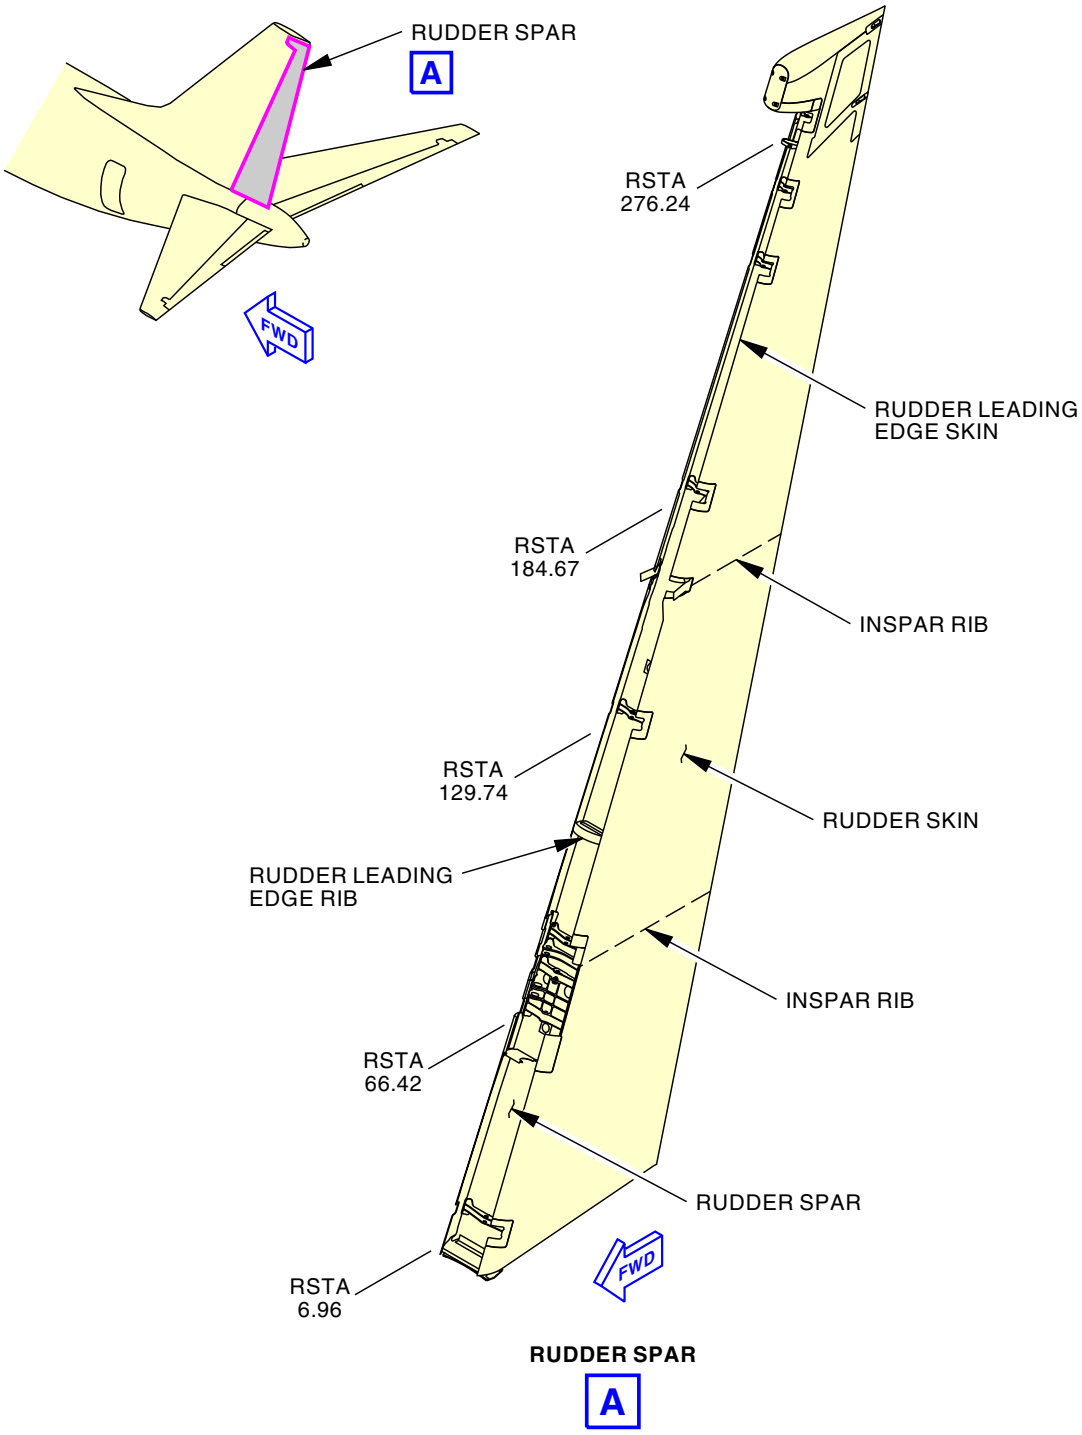

2416366 S00061540502_V1

INTERNAL-GENERAL VISUAL: RUDDER, ELEVATOR & ELEVATOR TAB ATTACH FITTINGS
Figure 220/55-05-03-990-820 (Sheet 1 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

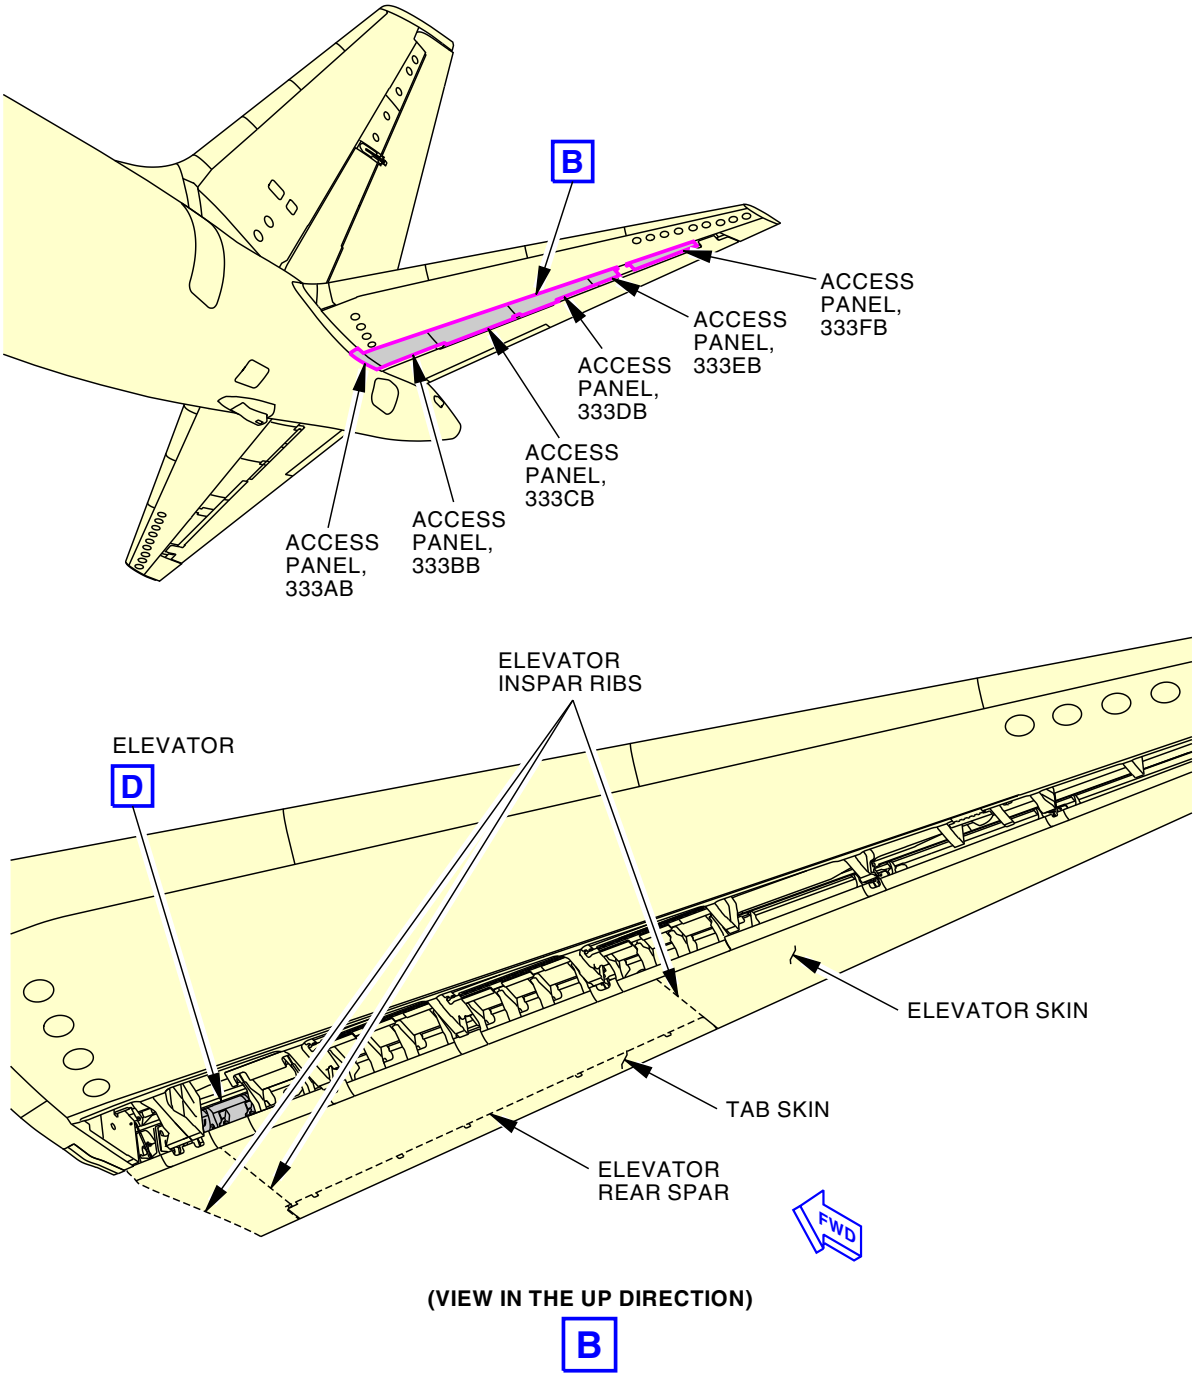

2416367 S00061540503_V1

INTERNAL-GENERAL VISUAL: RUDDER, ELEVATOR & ELEVATOR TAB ATTACH FITTINGS
Figure 220/55-05-03-990-820 (Sheet 2 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

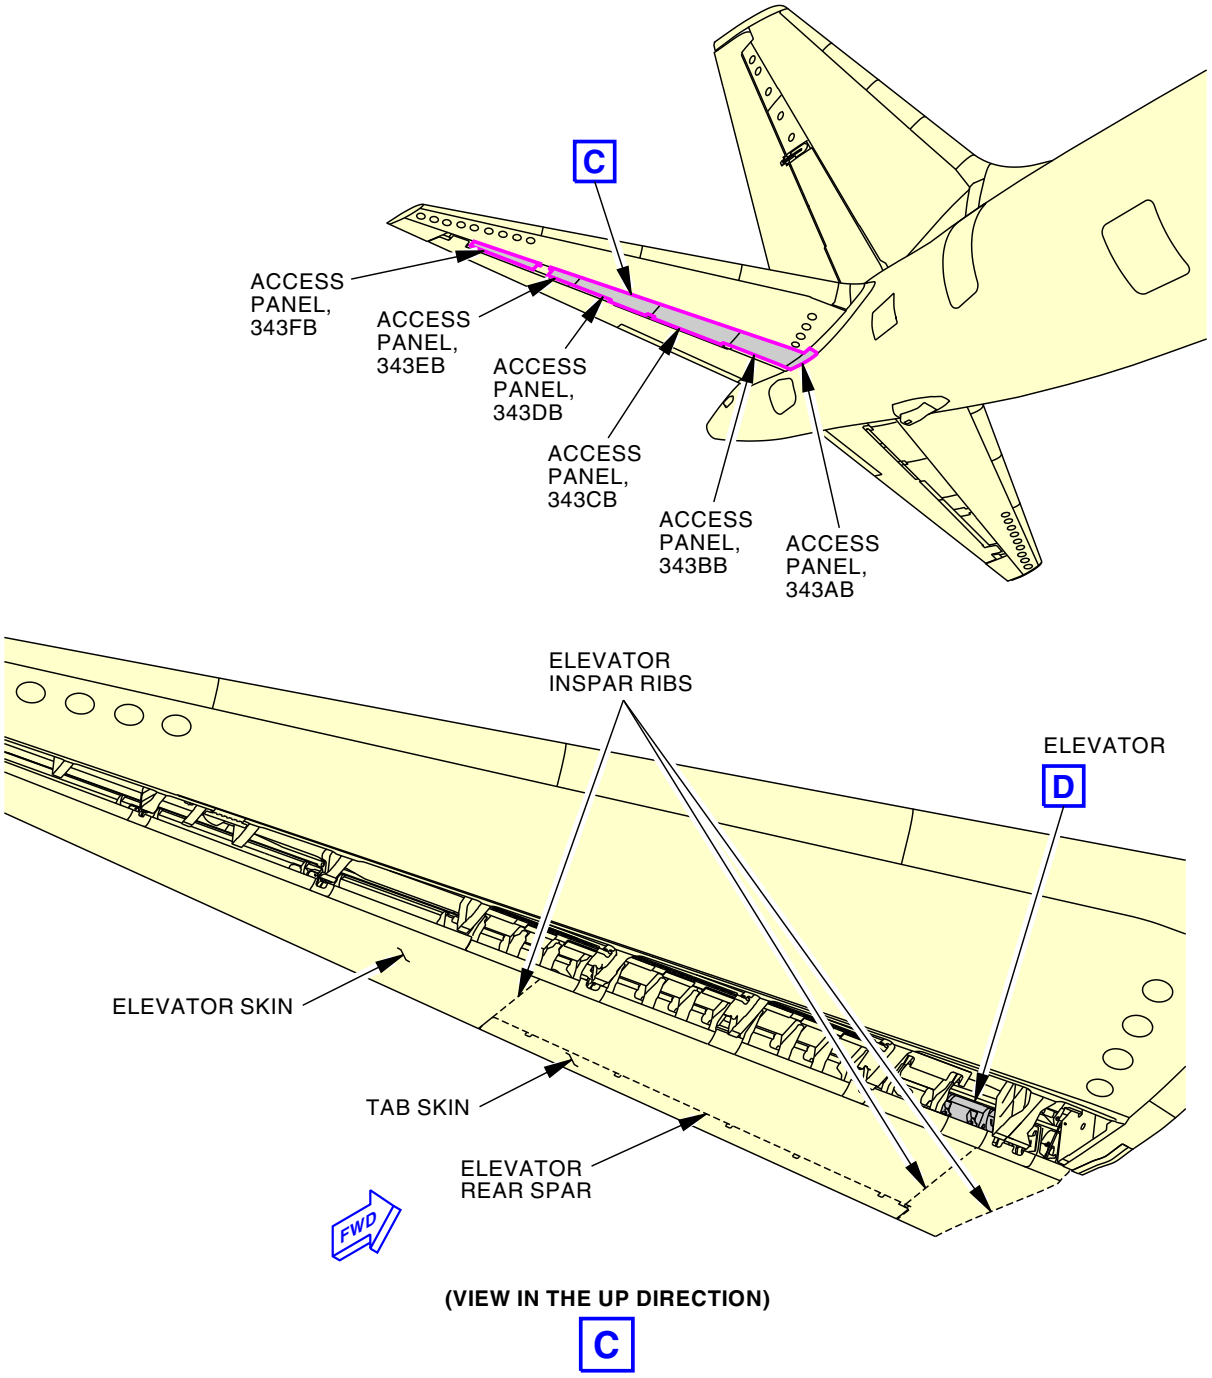

2416368 S00061540504_V1

INTERNAL-GENERAL VISUAL: RUDDER, ELEVATOR & ELEVATOR TAB ATTACH FITTINGS
Figure 220/55-05-03-990-820 (Sheet 3 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

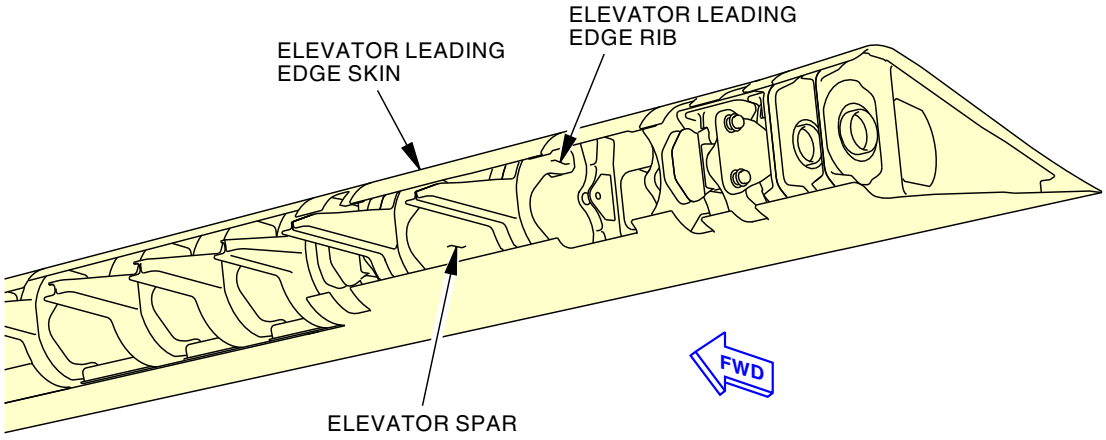

ELEVATOR
(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

D

2416369 S00061540505_V1

INTERNAL-GENERAL VISUAL: RUDDER, ELEVATOR & ELEVATOR TAB ATTACH FITTINGS
Figure 220/55-05-03-990-820 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-211-805

21. INTERNAL - DETAILED: LEFT ELEVATOR HINGE, ACTUATOR, AND TAB MAST ARM FTGS AND BALANCE WT SUPPT STRUC

(Figure 221)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-803	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
334	Left Horizontal Stabilizer - Elevator

D. Access Panels

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334GB	Horizontal Stabilizer, Elevator Hinge Cover
334HB	Horizontal Stabilizer, Elevator Hinge Cover
334JB	Horizontal Stabilizer, Elevator Hinge Cover
334KB	Horizontal Stabilizer, Elevator Hinge Cover
334LB	Horizontal Stabilizer, Elevator Hinge Cover
334MB	Horizontal Stabilizer, Elevator Hinge Cover
334NB	Horizontal Stabilizer, Elevator Hinge Cover

E. Inspection

SUBTASK 55-05-03-010-017

(1) Open these access panels:

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334GB	Horizontal Stabilizer, Elevator Hinge Cover
334HB	Horizontal Stabilizer, Elevator Hinge Cover
334JB	Horizontal Stabilizer, Elevator Hinge Cover
334KB	Horizontal Stabilizer, Elevator Hinge Cover
334LB	Horizontal Stabilizer, Elevator Hinge Cover
334MB	Horizontal Stabilizer, Elevator Hinge Cover

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
334NB	Horizontal Stabilizer, Elevator Hinge Cover

NOTE: Remove lower trailing edge panels and disconnect balance bay panels. Remove elevator hinge cover plates. Alternative - Remove elevator from horizontal stabilizer. For elevator tab mast arm fittings, remove fairing on upper surface of elevator to gain access.

SUBTASK 55-05-03-211-005

(2) Do a Detailed inspection of the left elevator hinge fittings, left elevator actuator fittings, left elevator balance weight support structure, left elevator tab mast arm fitting and left elevator tab hinge fittings.

SUBTASK 55-05-03-910-019

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-803.

SUBTASK 55-05-03-410-017

(4) Close these access panels:


Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
334GB	Horizontal Stabilizer, Elevator Hinge Cover
334HB	Horizontal Stabilizer, Elevator Hinge Cover
334JB	Horizontal Stabilizer, Elevator Hinge Cover
334KB	Horizontal Stabilizer, Elevator Hinge Cover
334LB	Horizontal Stabilizer, Elevator Hinge Cover
334MB	Horizontal Stabilizer, Elevator Hinge Cover
334NB	Horizontal Stabilizer, Elevator Hinge Cover

SUBTASK 55-05-03-390-013

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

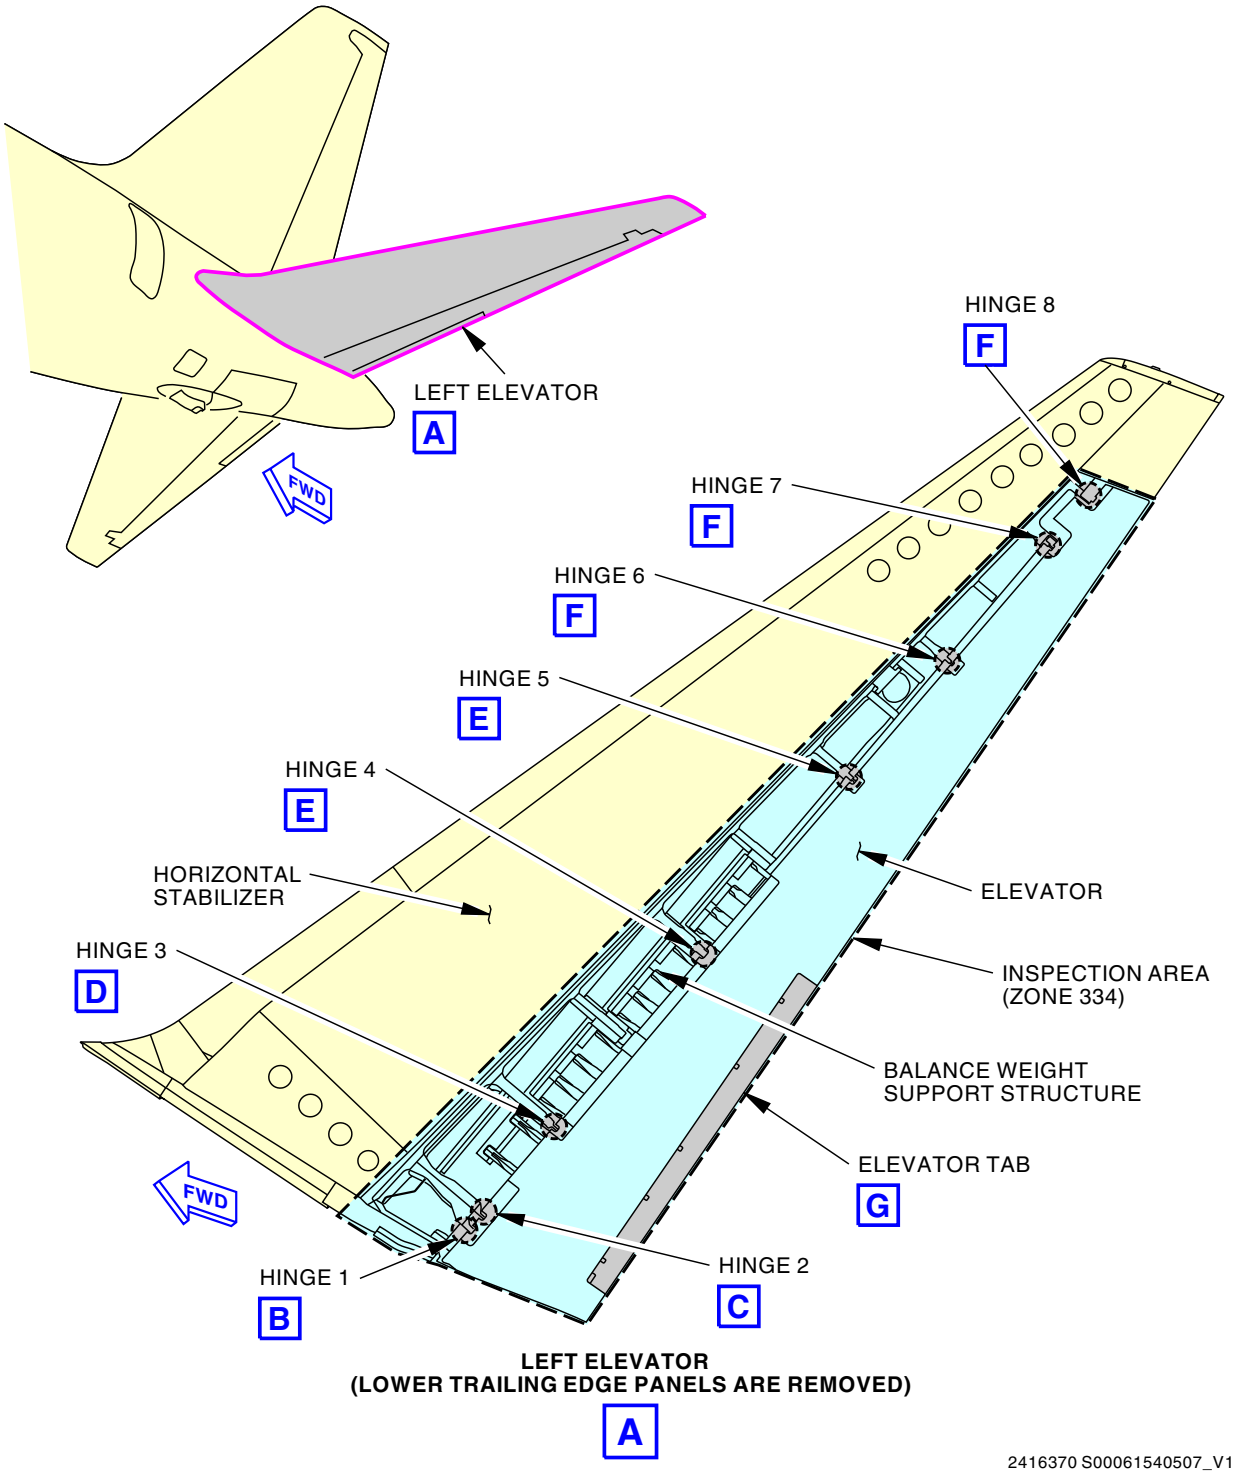


Lft Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 221/55-05-03-990-821 (Sheet 1 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

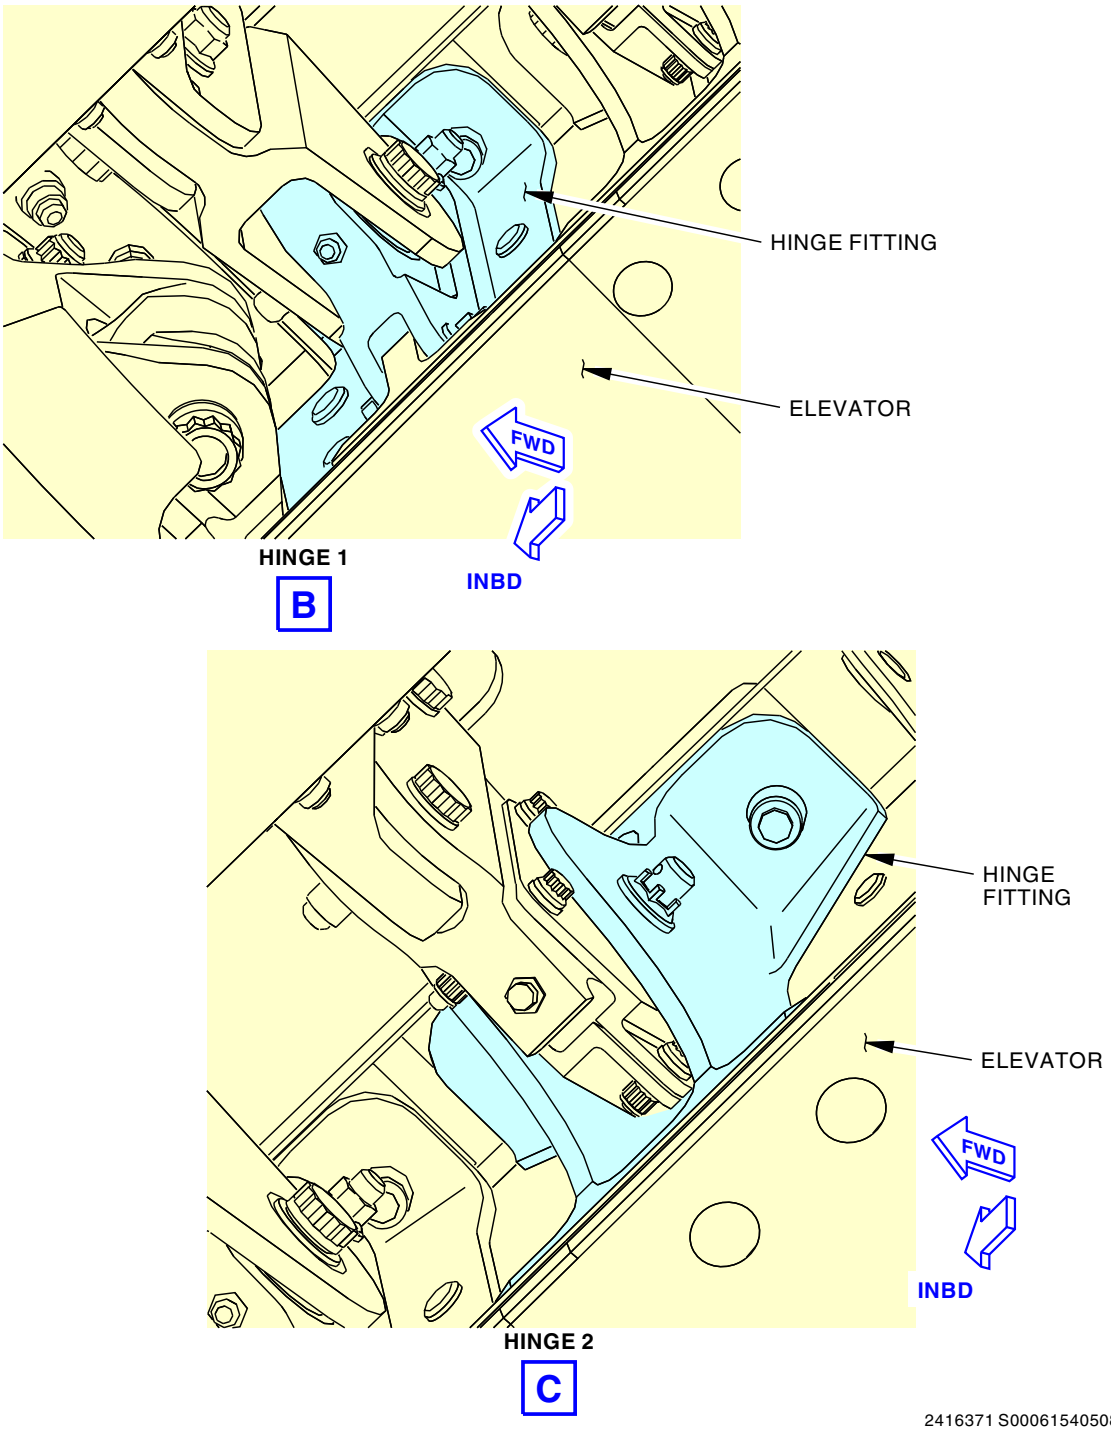


Lft Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 221/55-05-03-990-821 (Sheet 2 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

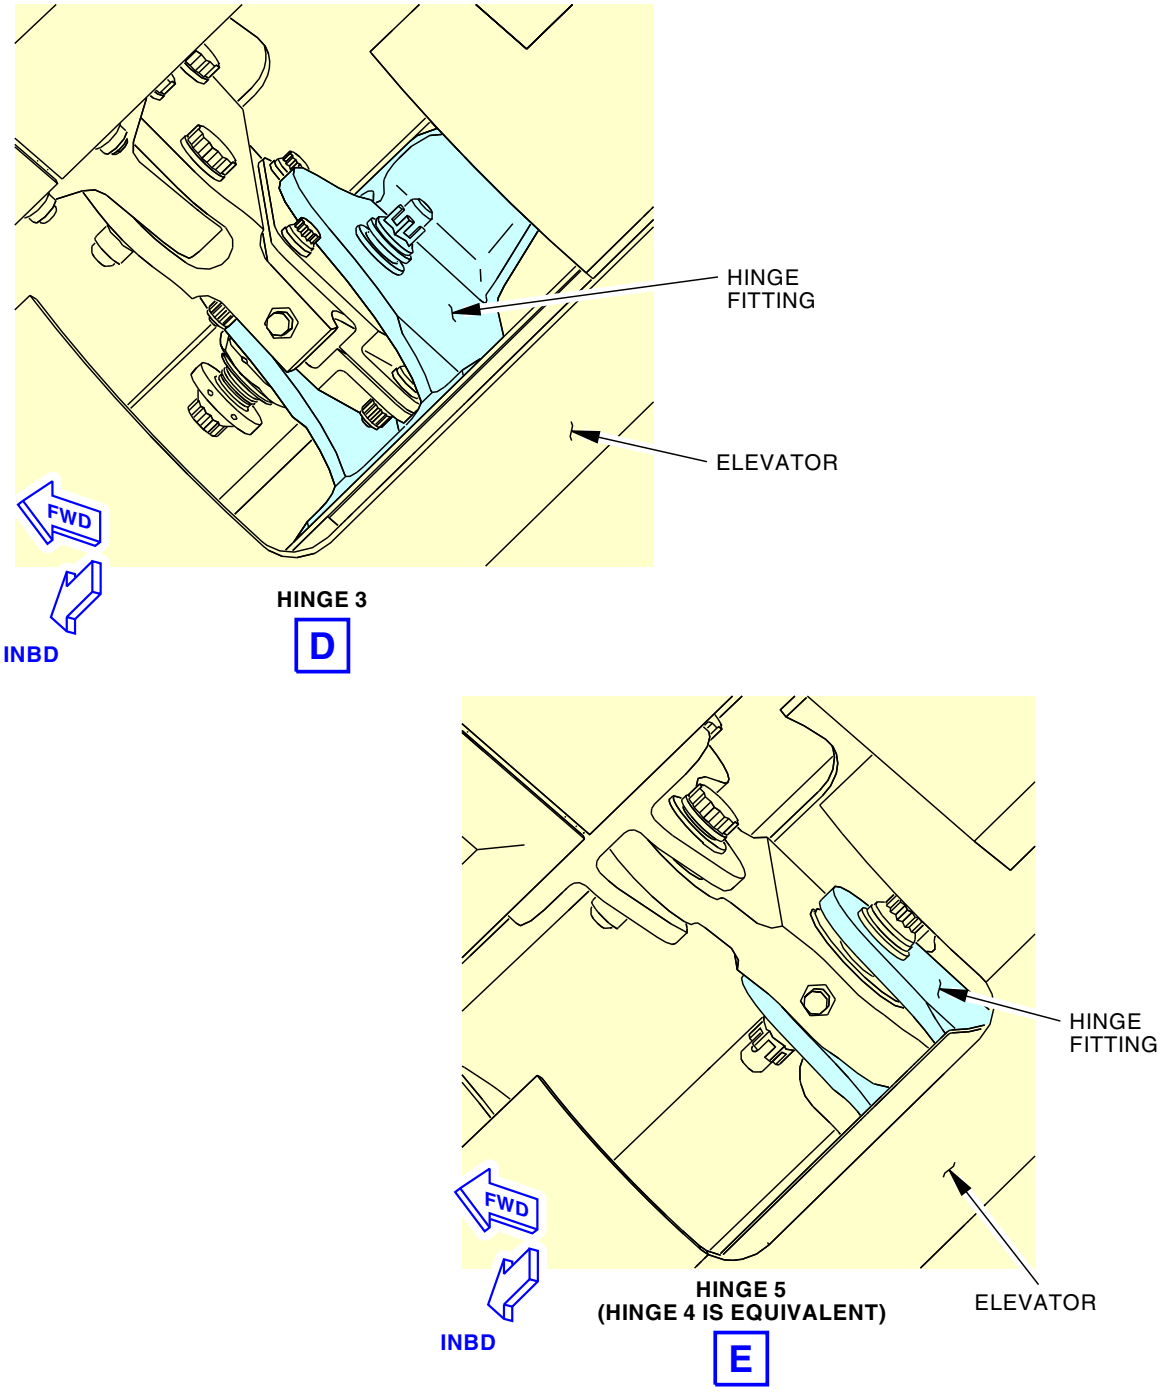


Lft Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 221/55-05-03-990-821 (Sheet 3 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

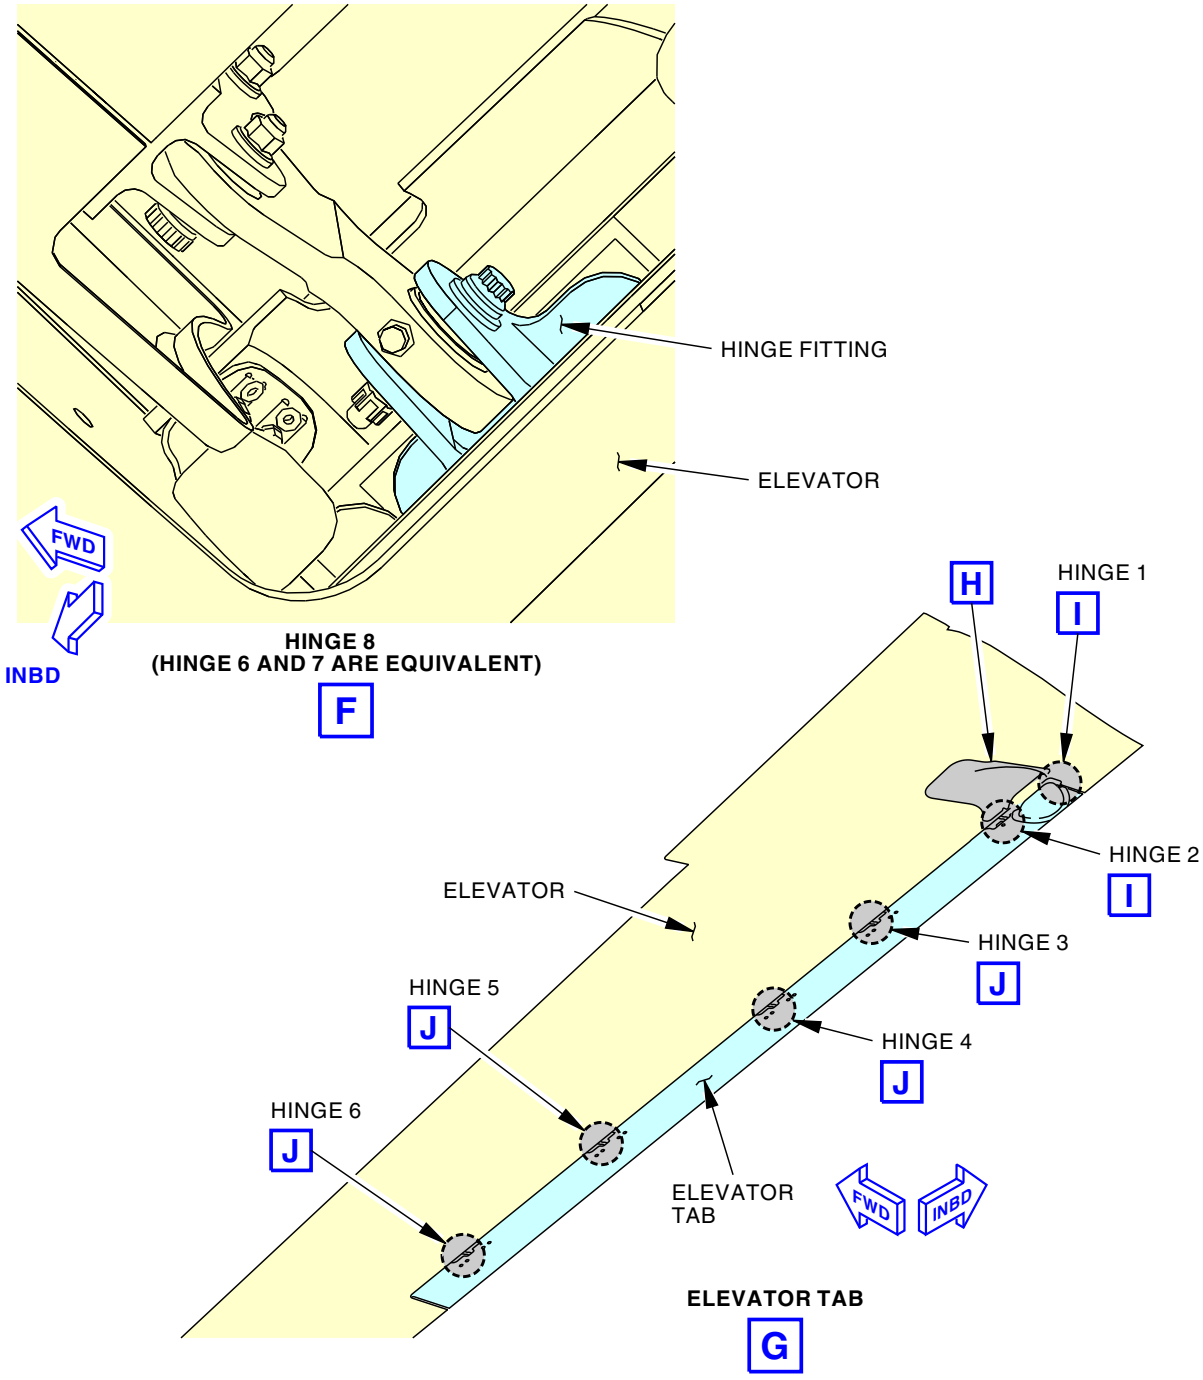


Lft Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 221/55-05-03-990-821 (Sheet 4 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

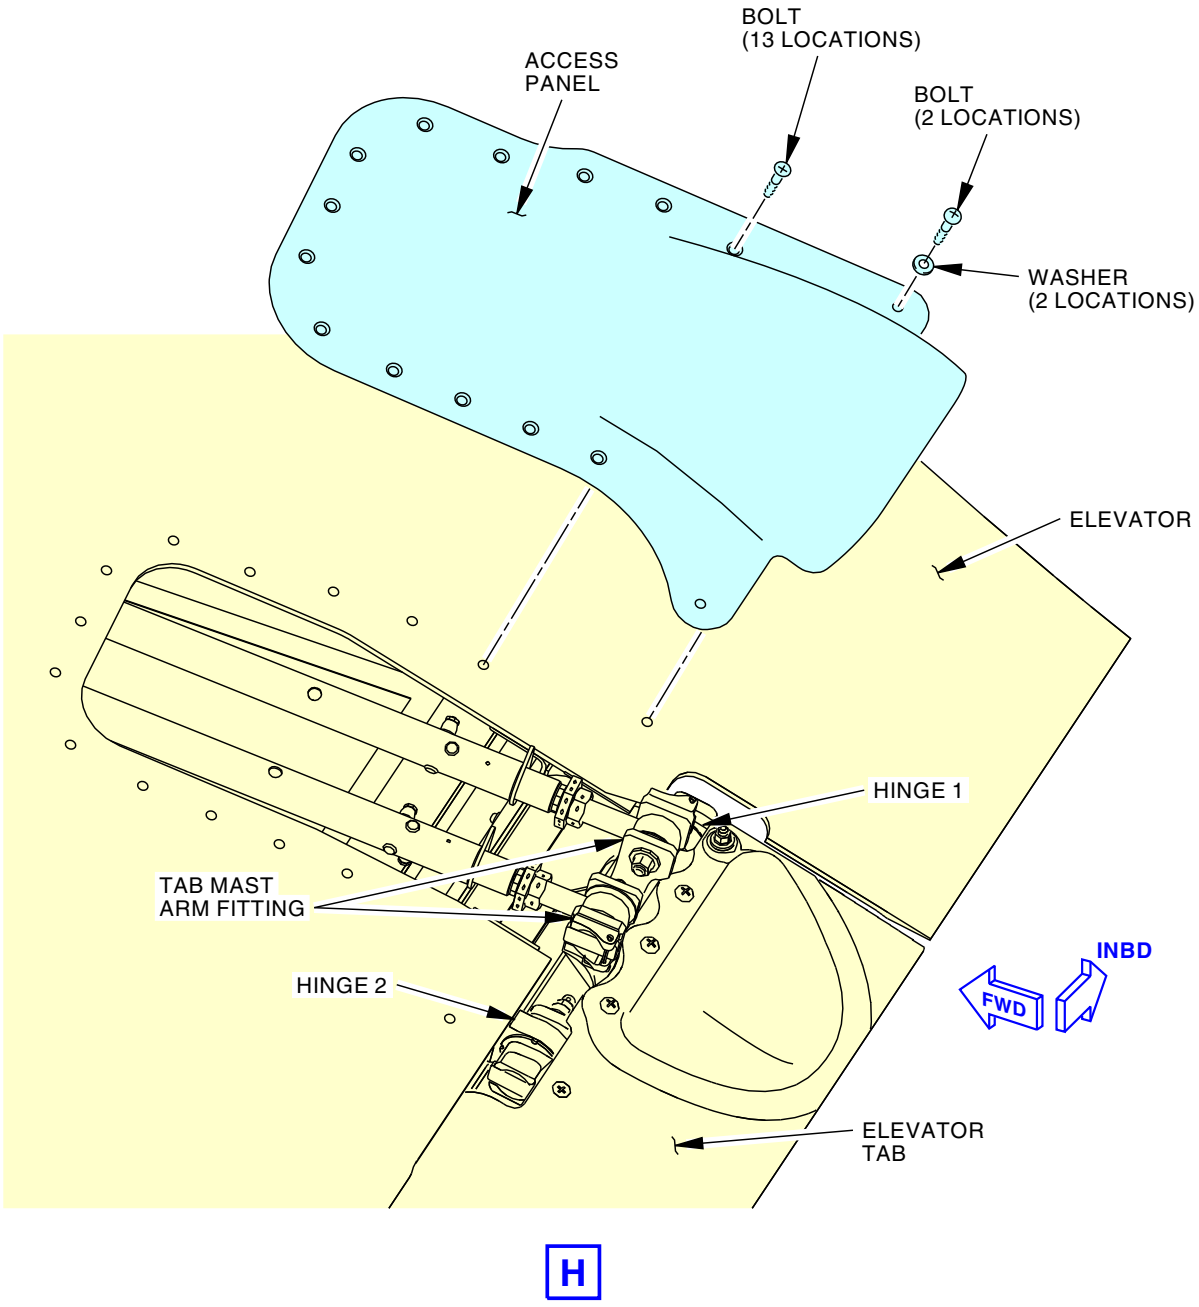

Lft Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 221/55-05-03-990-821 (Sheet 5 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

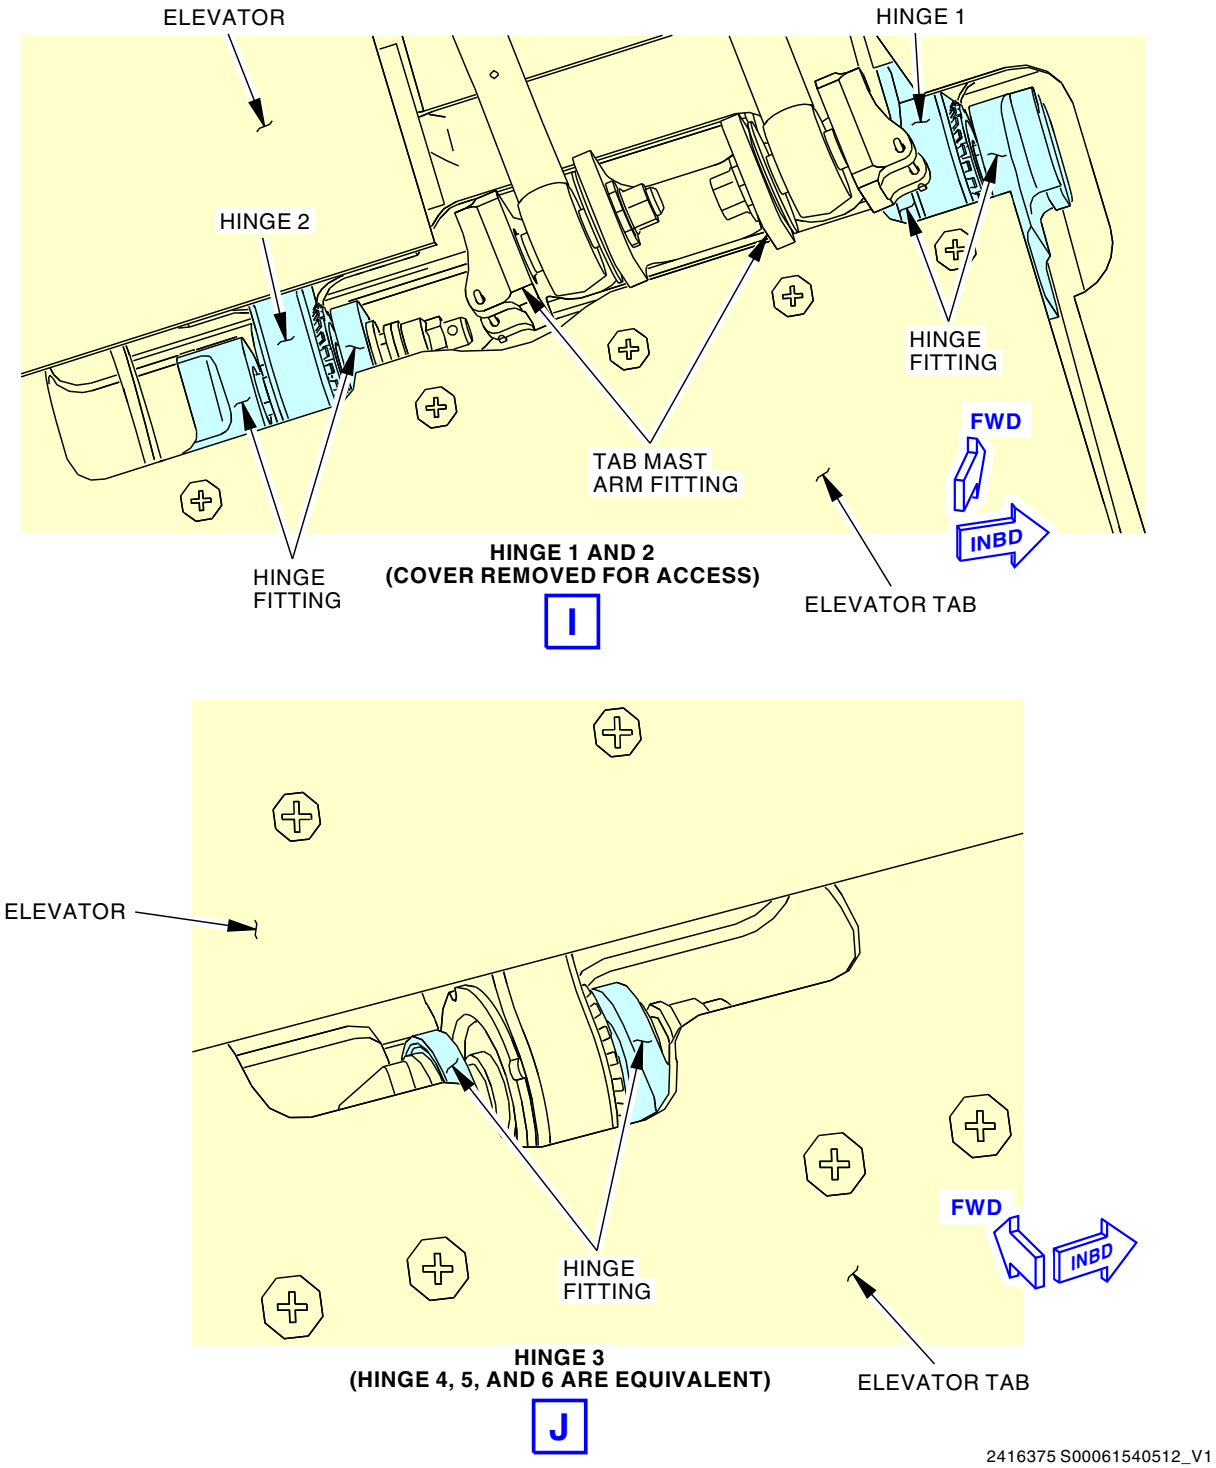

Lft Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 221/55-05-03-990-821 (Sheet 6 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-211-806

22. INTERNAL - DETAILED: RIGHT ELEVATOR HINGE, ACTUATOR, AND TAB MAST ARM FTGS AND BALANCE WT SUPPT STRUCT

(Figure 222)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-803	737-7/8/8200/9 Basic Task Description (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

C. Location Zones

Zone	Area
344	Right Horizontal Stabilizer - Elevator

D. Access Panels

Number	Name/Location
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344GB	Horizontal Stabilizer, Hinge Cover, Elevator Station 24.09
344HB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 66.54
344JB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 121.59
344KB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 176.64
344LB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 213.32
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344NB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 265.45

E. Inspection

SUBTASK 55-05-03-010-018

(1) Open these access panels:

Number	Name/Location
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344GB	Horizontal Stabilizer, Hinge Cover, Elevator Station 24.09
344HB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 66.54
344JB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 121.59
344KB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 176.64
344LB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 213.32
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Number	Name/Location
344NB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 265.45

NOTE: Remove lower trailing edge panels and disconnect balance bay panels. Remove elevator hinge cover plates. Alternative - Remove elevator from horizontal stabilizer. For elevator tab mast arm fittings, remove fairing on upper surface of elevator to gain access.

SUBTASK 55-05-03-211-006

(2) Do a Detailed inspection of the right elevator hinge fittings, right elevator actuator fittings, right elevator balance weight support structure, right elevator tab mast arm fitting and right elevator tab hinge fittings.

SUBTASK 55-05-03-910-020

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-803.

SUBTASK 55-05-03-410-018

(4) Close these access panels:


Number	Name/Location
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area
344GB	Horizontal Stabilizer, Hinge Cover, Elevator Station 24.09
344HB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 66.54
344JB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 121.59
344KB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 176.64
344LB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 213.32
344MB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 250.04
344NB	Horizontal Stabilizer, Elevator Hinge Cover, Elevator Sta 265.45

SUBTASK 55-05-03-390-014

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

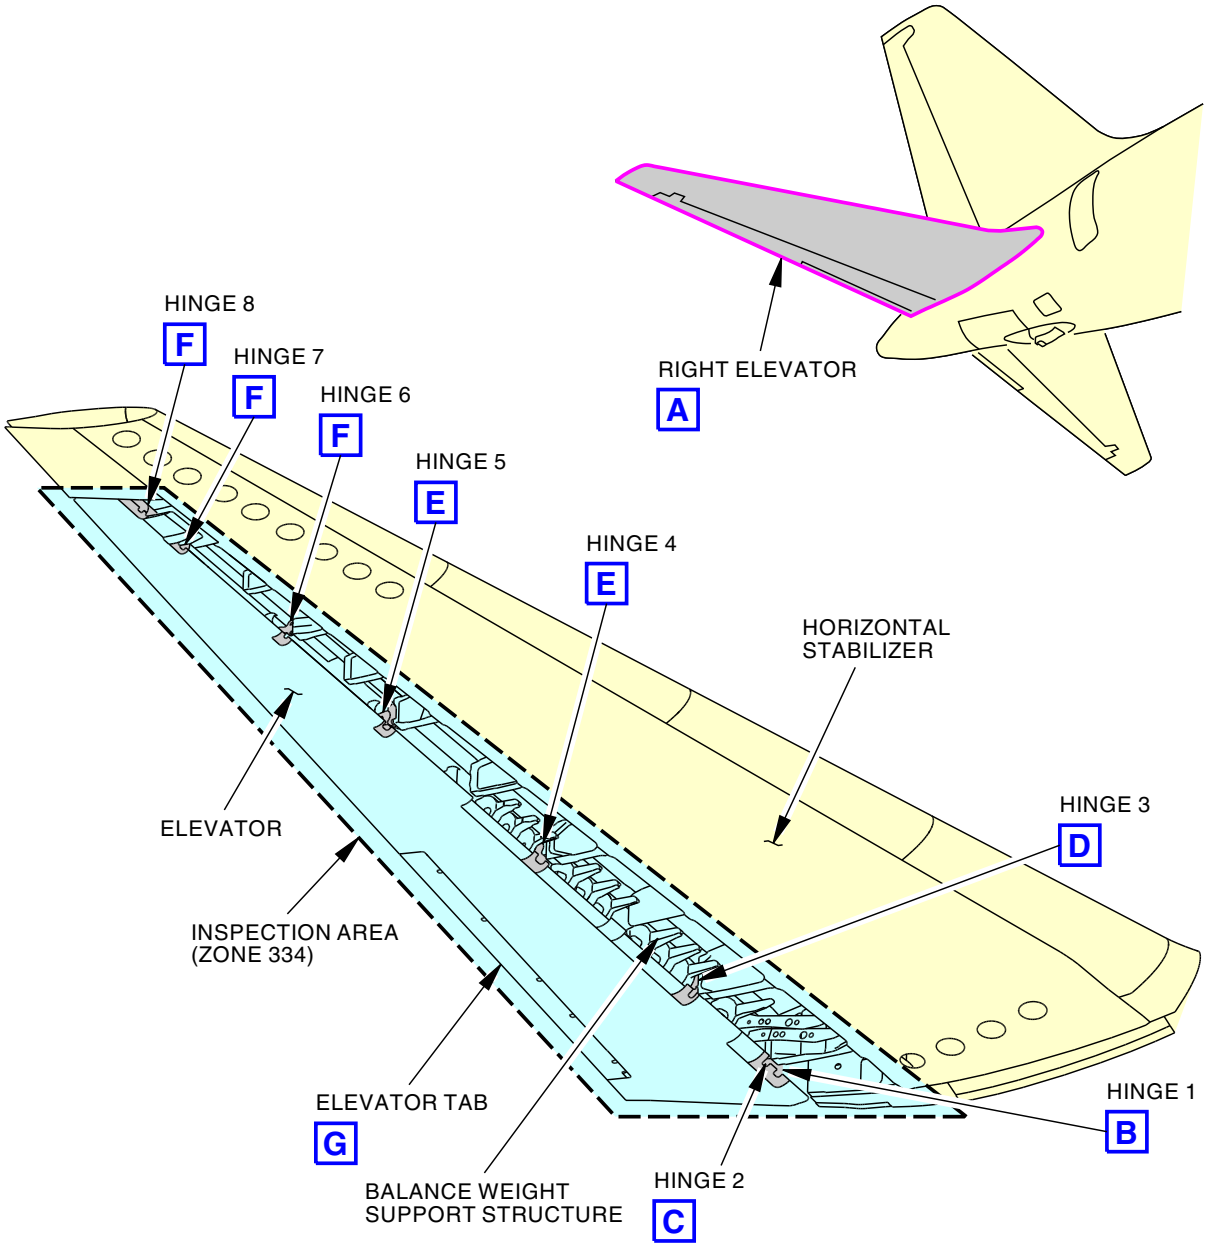


RIGHT ELEVATOR
(LOWER TRAILING EDGE PANELS REMOVED)
A

MPD ITEM
55-135-02

2416376 S00061540514_V1


Rt. Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 222/55-05-03-990-822 (Sheet 1 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

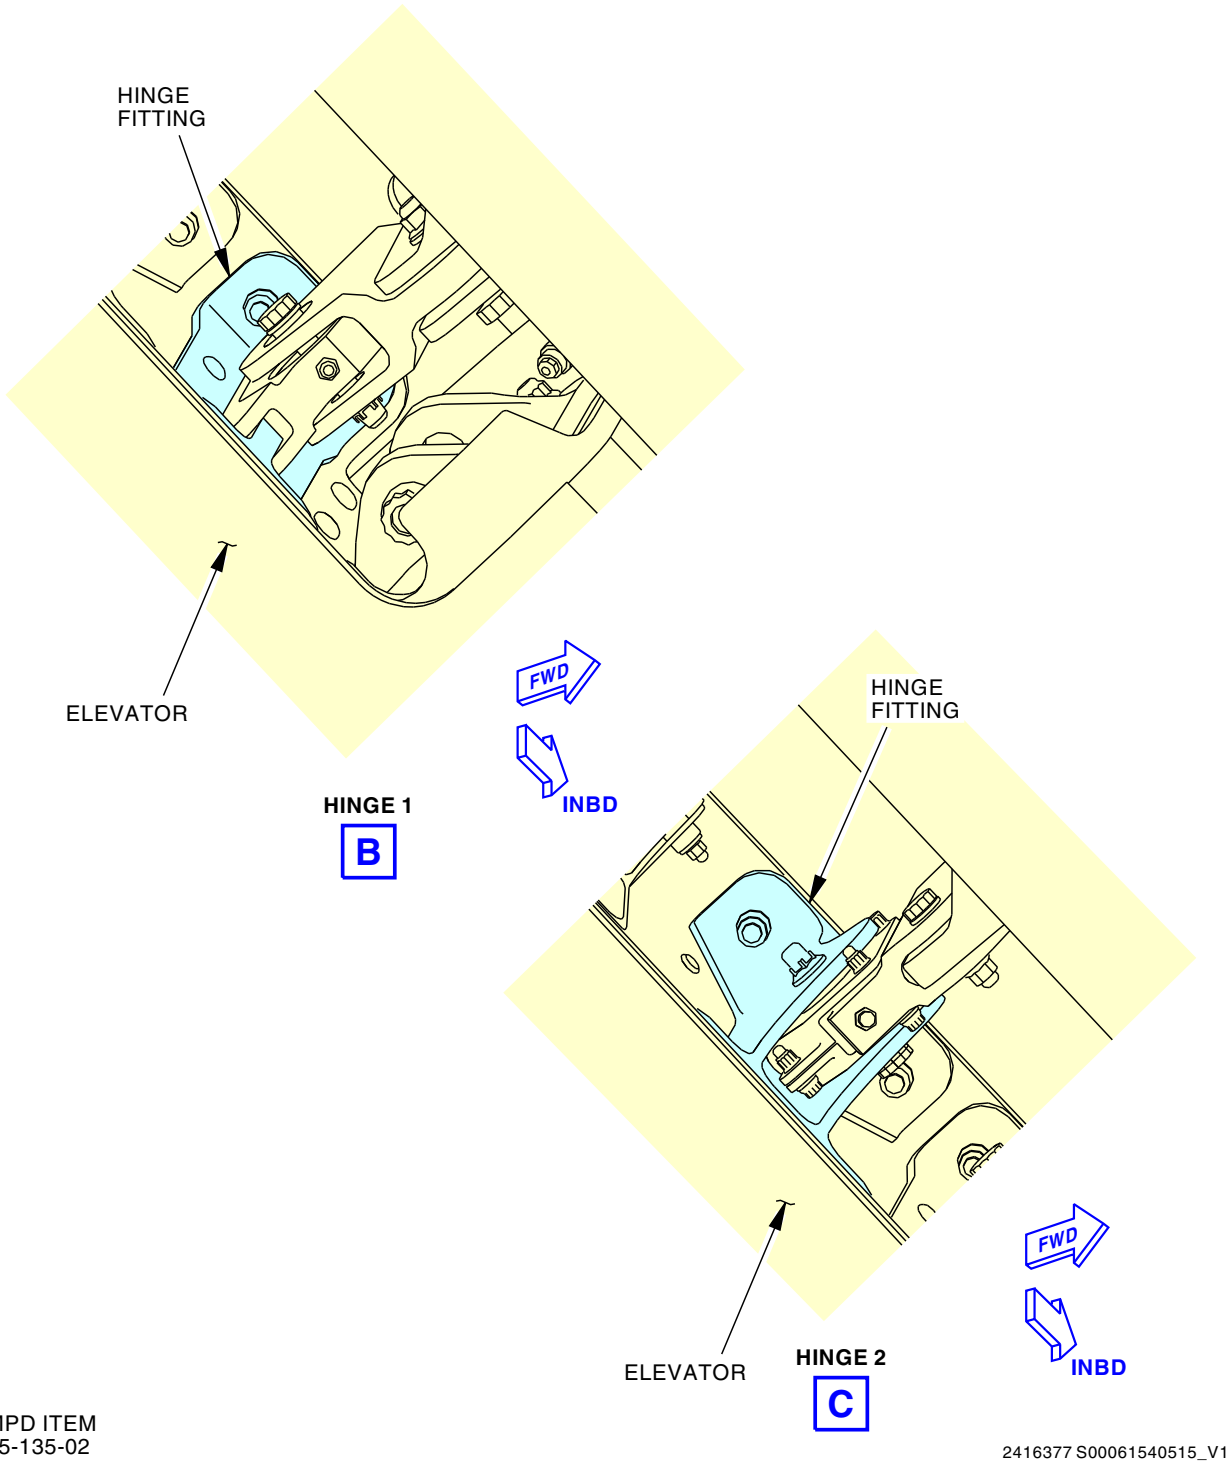


Rt. Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 222/55-05-03-990-822 (Sheet 2 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

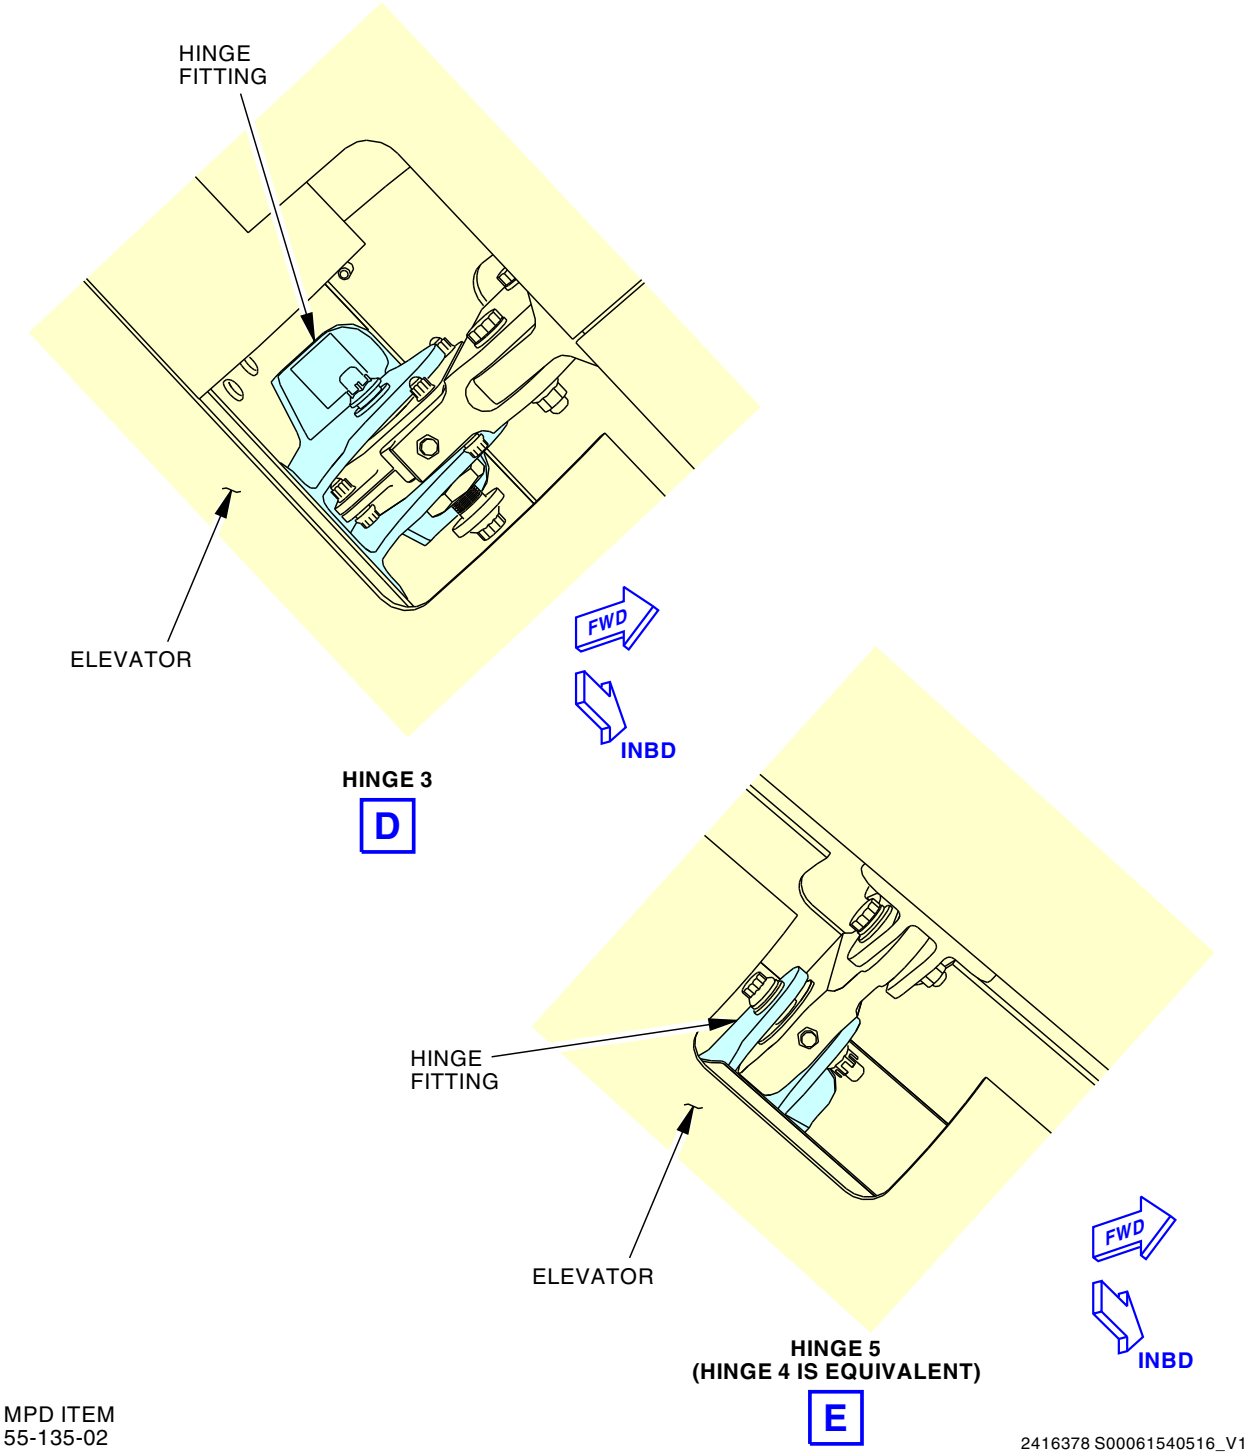


Rt. Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 222/55-05-03-990-822 (Sheet 3 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

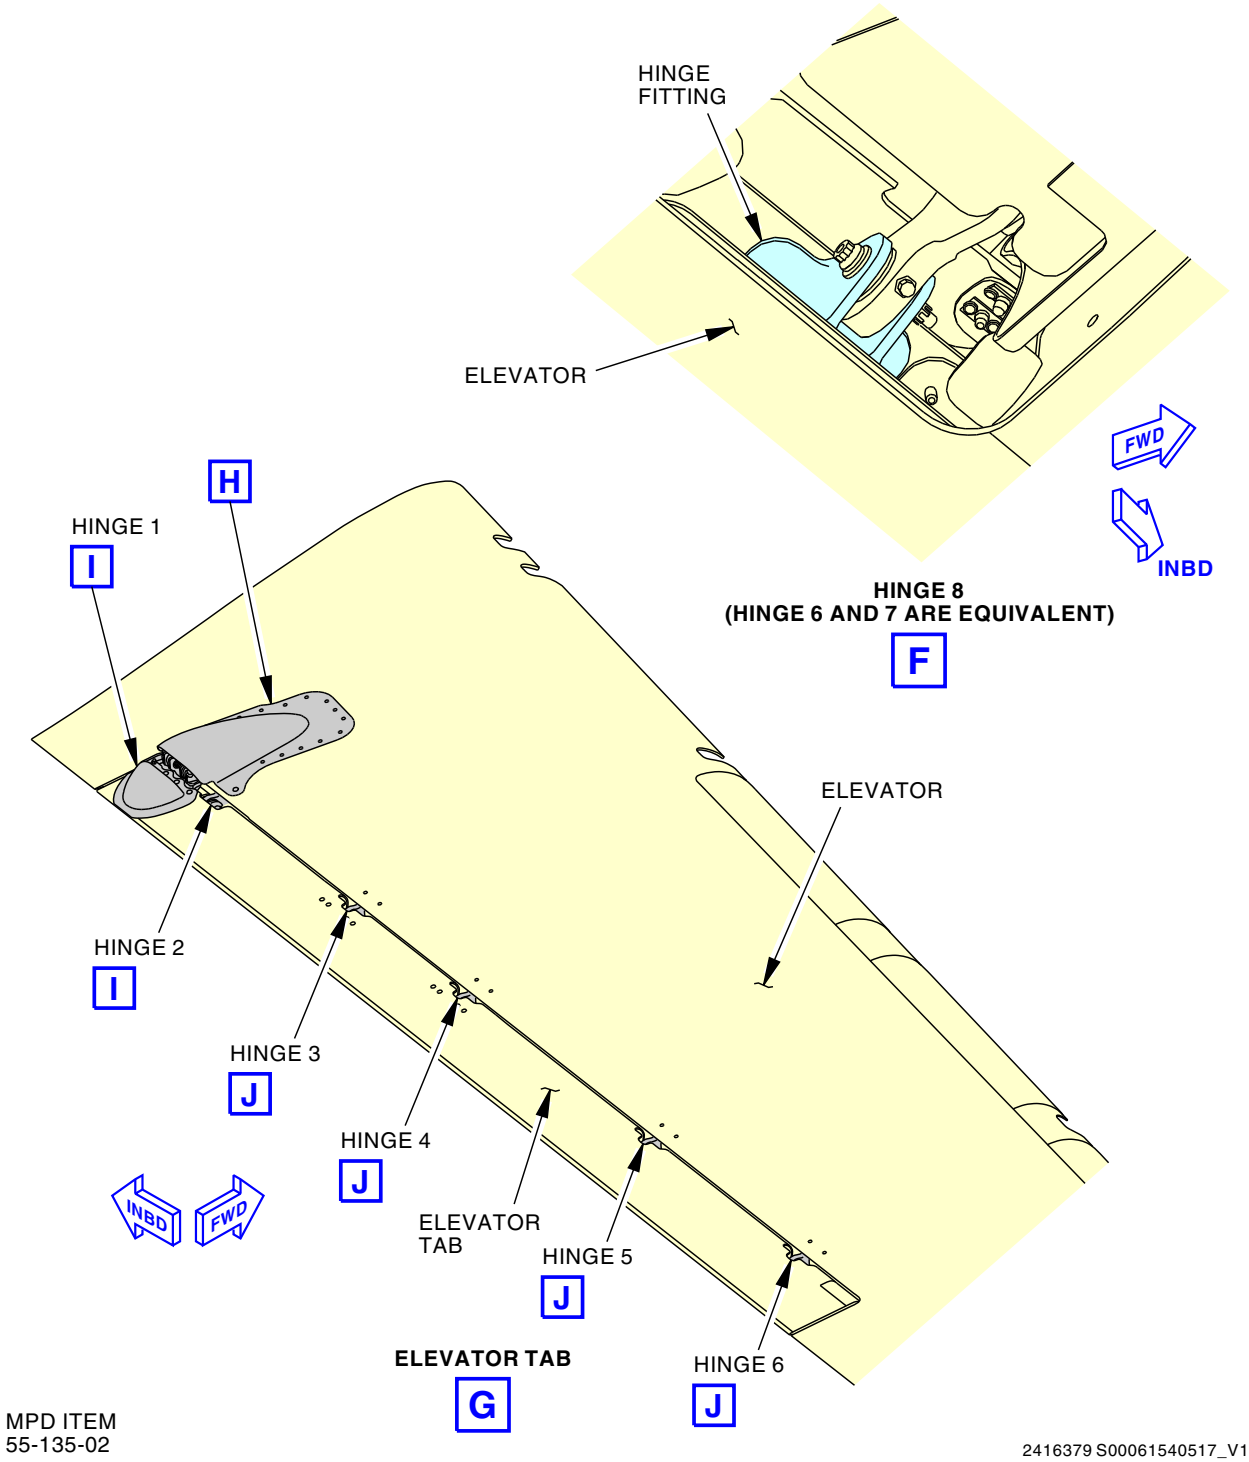


Rt. Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 222/55-05-03-990-822 (Sheet 4 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

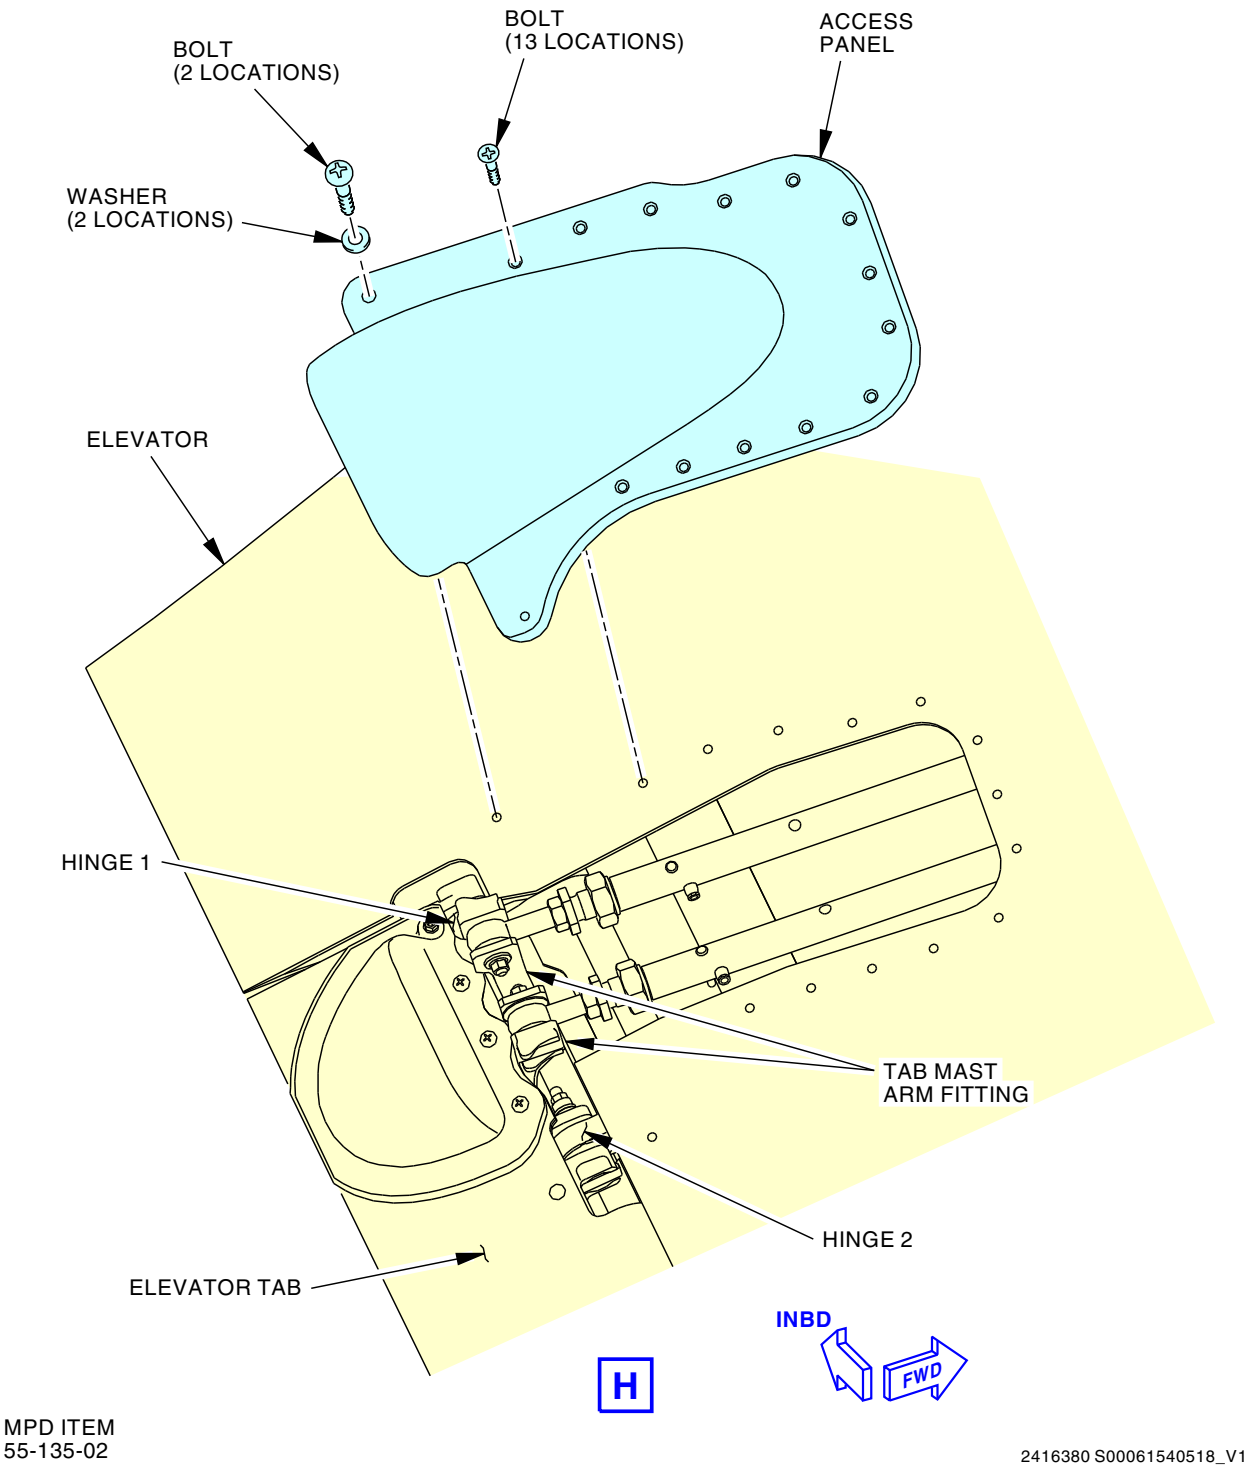

Rt. Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 222/55-05-03-990-822 (Sheet 5 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

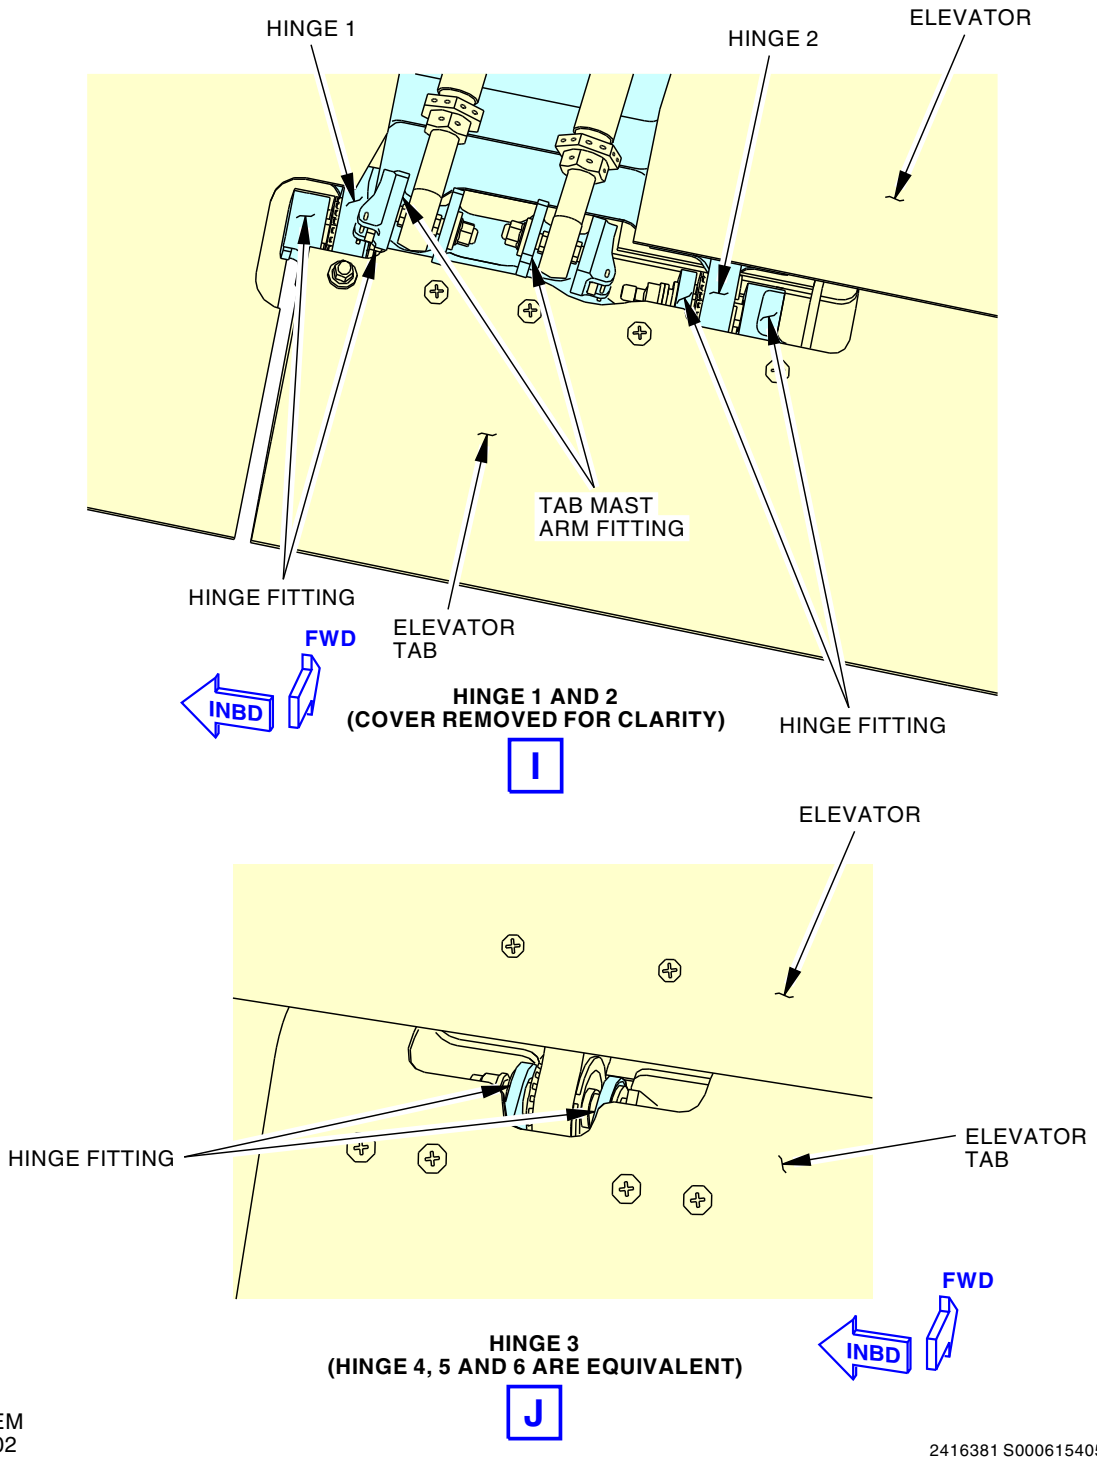

MPD ITEM
55-135-02

2416381 S00061540519_V1

Rt. Ele. Hinge, Actuator, and Tab Mast Arm Ftgs and Balance WT Suppt
Figure 222/55-05-03-990-822 (Sheet 6 of 6)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-290-801

23. INTERNAL - SPECIAL DETAILED: LEFT HORIZONTAL STABILIZER TRAILING EDGE

(Figure 223)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)
55-10-00-000-801	Horizontal Stabilizer Tip - Removal (P/B 401)
55-10-00-400-801	Horizontal Stabilizer Tip - Installation (P/B 401)

B. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge

C. Access Panels

Number	Name/Location
335A	Horizontal Stabilizer, Removable Stabilizer Tip

D. Inspection

SUBTASK 55-05-03-010-019

(1) Open this access panel:

Number	Name/Location
335A	Horizontal Stabilizer, Removable Stabilizer Tip

(a) Do this task: Horizontal Stabilizer Tip - Removal, TASK 55-10-00-000-801

SUBTASK 55-05-03-290-001

(2) Do a Special Detailed (borescope) inspection of the aft side of the left horizontal stabilizer rear spar from STAB BL 254.66 to STAB BL 281.81, including the spar chords and webs.

SUBTASK 55-05-03-910-021

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804

SUBTASK 55-05-03-410-023


(4) Close this access panel:

Number	Name/Location
335A	Horizontal Stabilizer, Removable Stabilizer Tip

(a) Do this task: Horizontal Stabilizer Tip - Installation, TASK 55-10-00-400-801

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

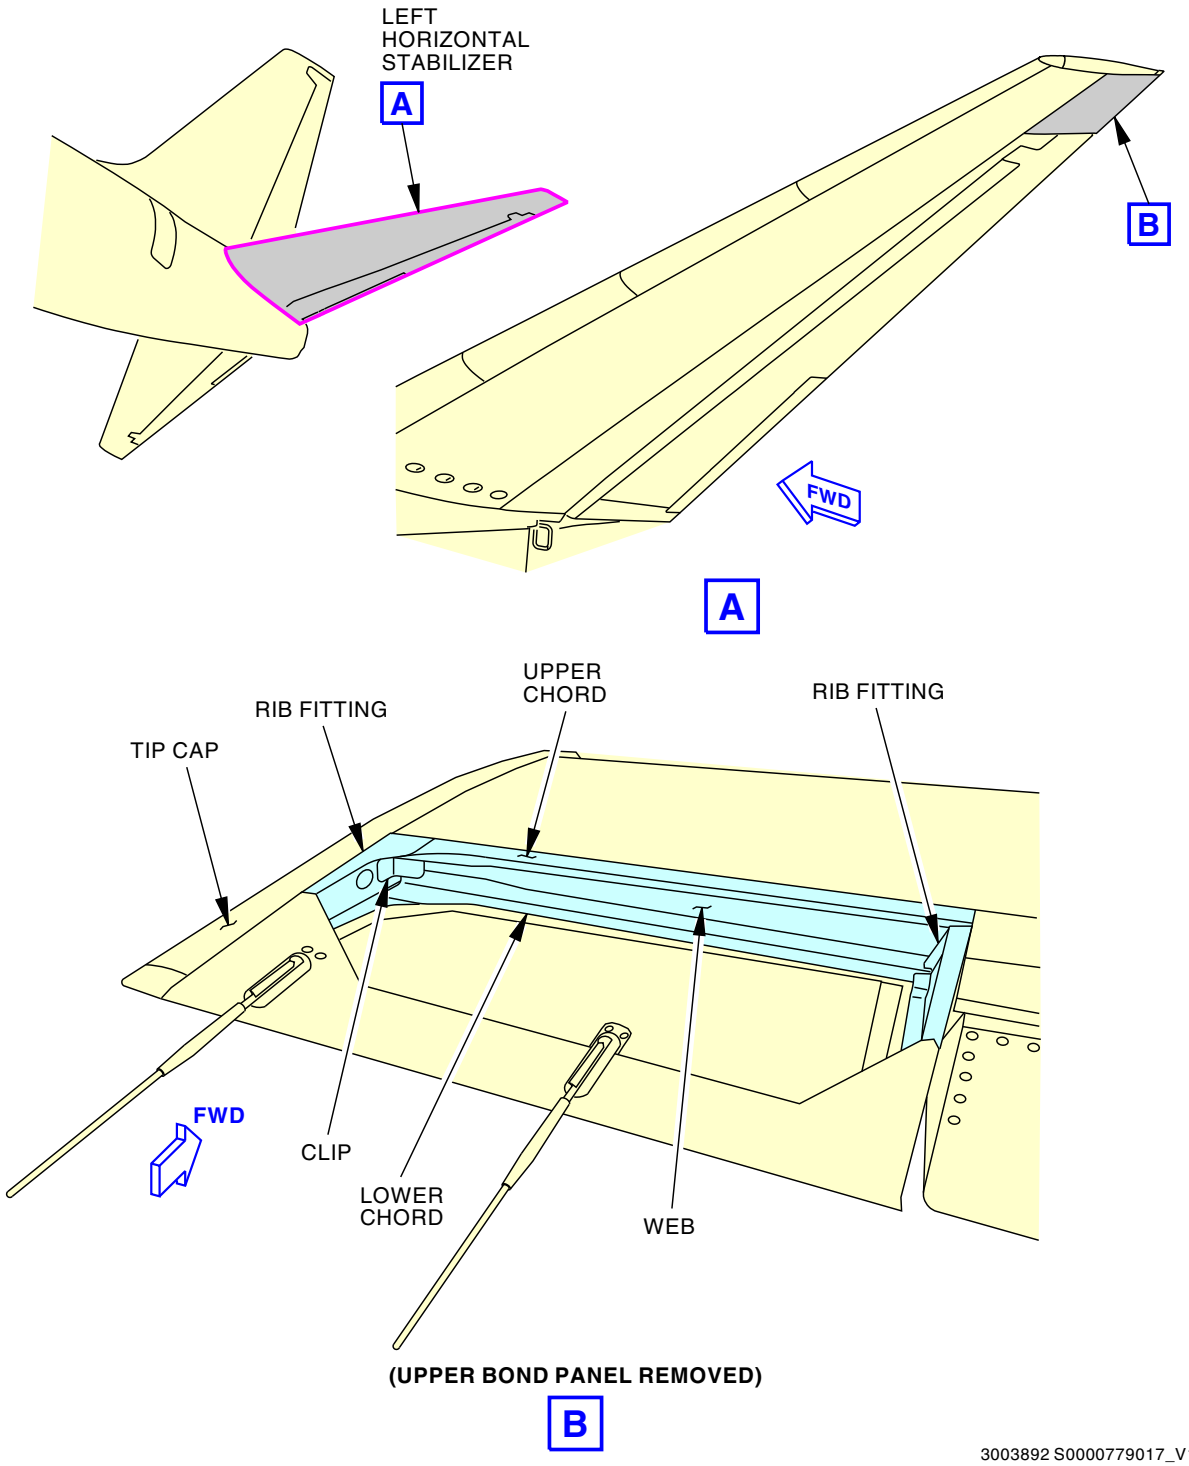

3003892 S0000779017_V1

Left Horizontal Stabilizer Trailing Edge STAB BL 254.66 to STAB BL 281.81 - Special Detailed (Internal)
Figure 223/55-05-03-990-823

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-05-03-290-802

24. INTERNAL - SPECIAL DETAILED: RIGHT HORIZONTAL STABILIZER TRAILING EDGE

(Figure 224)

NOTE: This procedure is a scheduled maintenance task.

A. References

Reference	Title
51-05-01-210-804	737-7/8/8200/9 Basic Task Description (P/B 201)
55-10-00-000-801	Horizontal Stabilizer Tip - Removal (P/B 401)
55-10-00-400-801	Horizontal Stabilizer Tip - Installation (P/B 401)

B. Location Zones

Zone	Area
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

C. Access Panels

Number	Name/Location
345A	Horizontal Stabilizer, Removable Stabilizer Tip

D. Inspection

SUBTASK 55-05-03-010-020

(1) Open this access panel:

Number	Name/Location
345A	Horizontal Stabilizer, Removable Stabilizer Tip

(a) Do this task: Horizontal Stabilizer Tip - Removal, TASK 55-10-00-000-801

SUBTASK 55-05-03-290-002

(2) Do a Special Detailed (borescope) inspection of the aft side of the right horizontal stabilizer rear spar from STAB BL 254.66 to STAB BL 281.81, including the spar chords and webs

SUBTASK 55-05-03-910-022

(3) Do this task: 737-7/8/8200/9 Basic Task Description, TASK 51-05-01-210-804

SUBTASK 55-05-03-410-024


(4) Close this access panel:


Number	Name/Location
345A	Horizontal Stabilizer, Removable Stabilizer Tip

(a) Do this task: Horizontal Stabilizer Tip - Installation, TASK 55-10-00-400-801

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

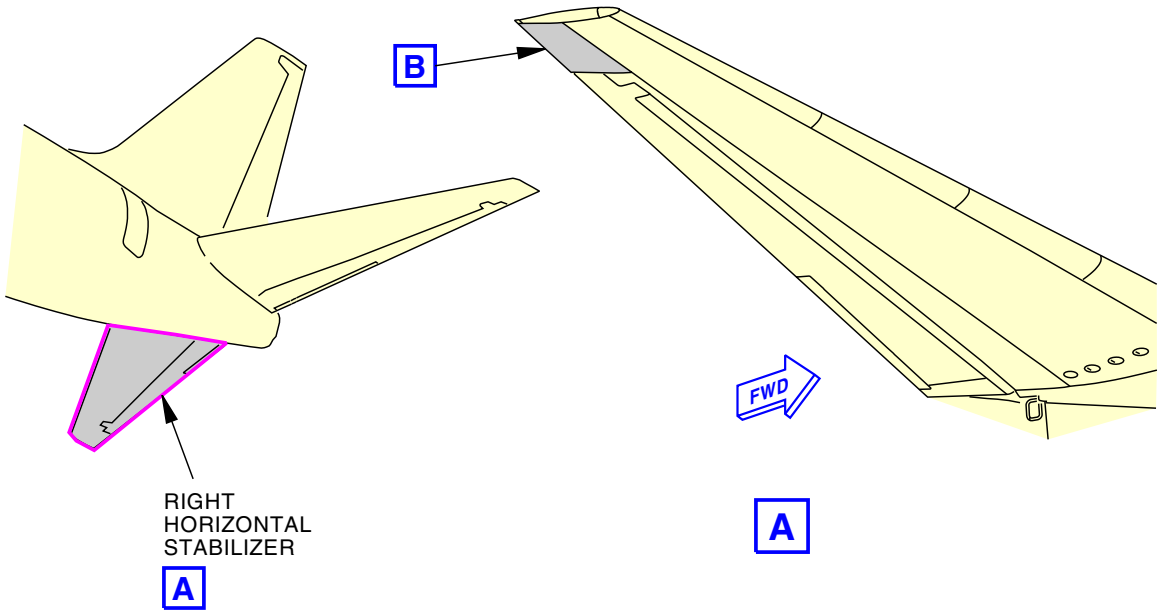

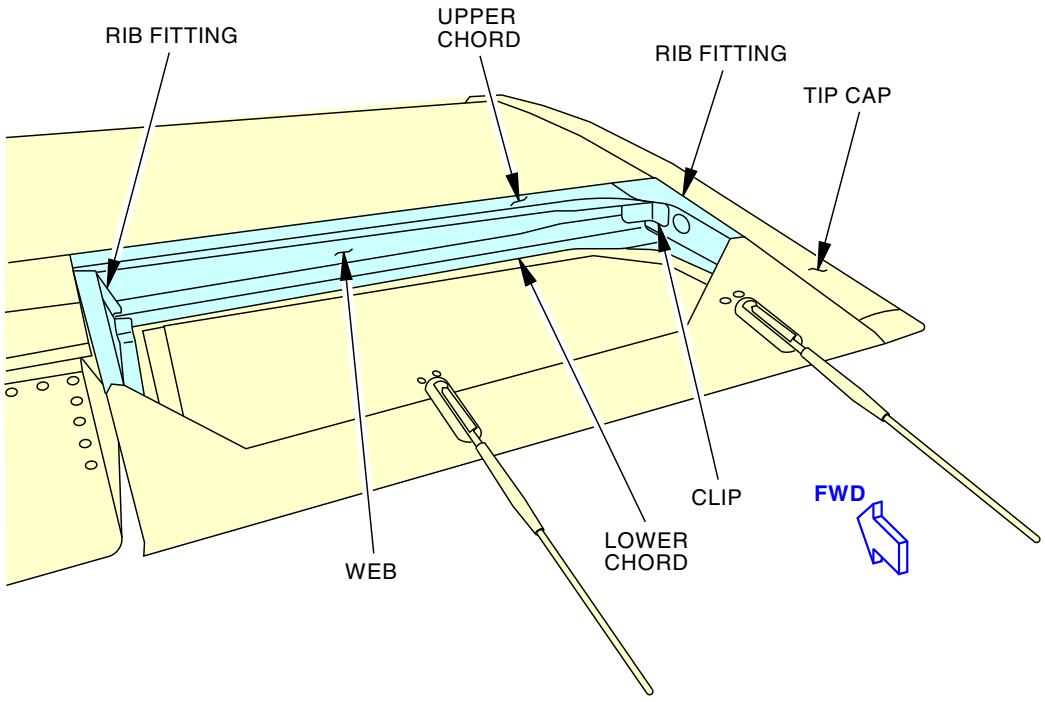

(UPPER BOND PANEL REMOVED)

B

3003893 S0000779018_V1

Right Horizontal Stabilizer Trailing Edge STAB BL 254.66 to STAB BL 281.81 - Special Detailed (Internal)
Figure 224/55-05-03-990-824

ECCN 9E991 BOEING PROPRIETARY - See title page for details

HORIZONTAL STABILIZER TIP - REMOVAL/INSTALLATION

1. General

A. This procedure contains the following tasks:

(1) A removal of the horizontal stabilizer tip.

(2) An installation of the horizontal stabilizer tip.

B. The procedure that follows refers to the horizontal stabilizer tip as the tip.

C. The tip includes a forward leading edge cap, a middle composite tip cap and an aft trailing edge tip.

D. The forward leading edge cap and aft trailing edge tip are an aluminum alloy sheet. They attach to the fiberglass composite tip cap with rivets. Thus, you remove the three fairings together as one unit.

TASK 55-10-00-000-801

2. Horizontal Stabilizer Tip - Removal

Figure 401

A. Location Zones

Zone	Area
335	Left Horizontal Stabilizer - Tip
345	Right Horizontal Stabilizer - Tip

B. Prepare for the Removal

SUBTASK 55-10-00-860-002

(1) Open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
B	10	C00207	FLIGHT CONTROL STAB TRIM CONT
D	10	C00840	FLIGHT CONTROL STAB TRIM ACTUATOR

C. Remove the Horizontal Stabilizer Tip

SUBTASK 55-10-00-020-001

(1) Remove the fasteners that attach the tip assembly [1] to the horizontal stabilizer.

(a) Remove the bolts [3], bolts [4] and washers [5].

SUBTASK 55-10-00-010-001


(2) Remove the tip assembly [1] from closure rib for the horizontal stabilizer.


SUBTASK 55-10-00-940-001

(3) Put a cover on the closure ribs if the tip will be off for a long time.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

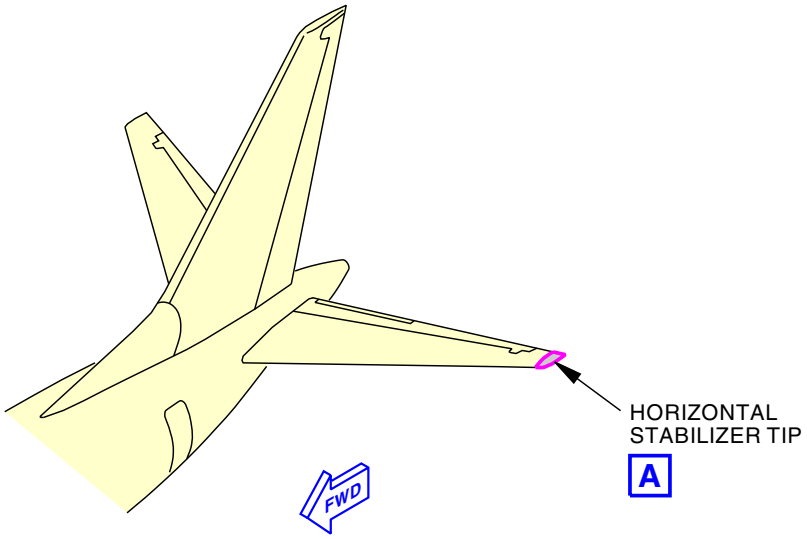

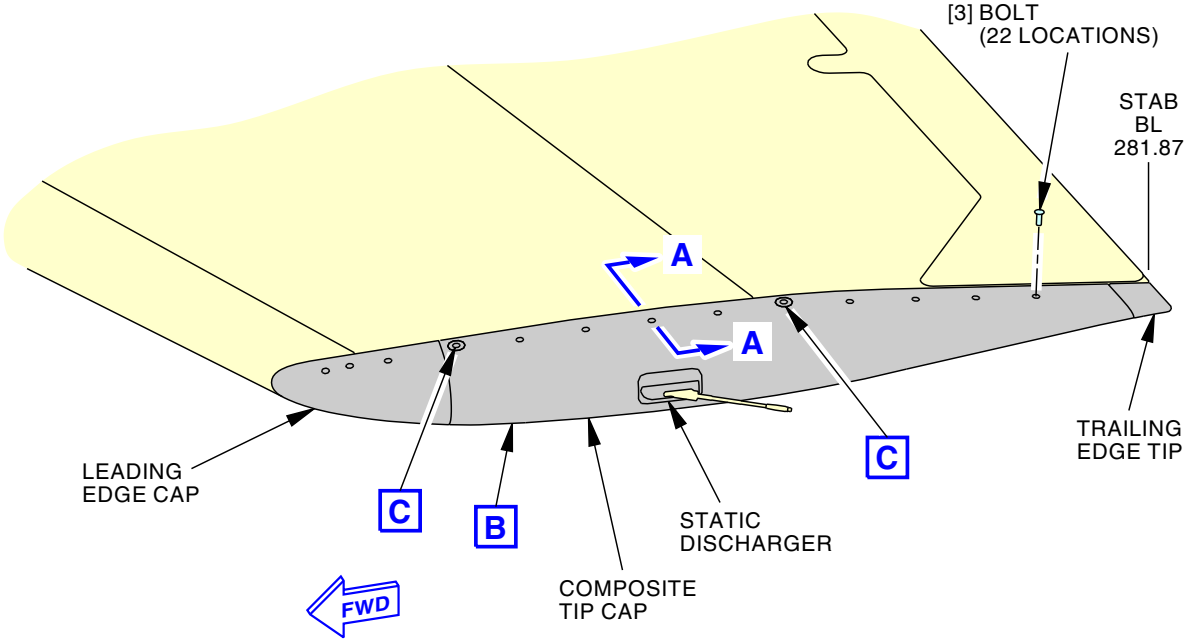


HORIZONTAL STABILIZER TIP

A

2927753 S0000707033_V1


Horizontal Stabilizer Tip Installation
Figure 401/55-10-00-990-802 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

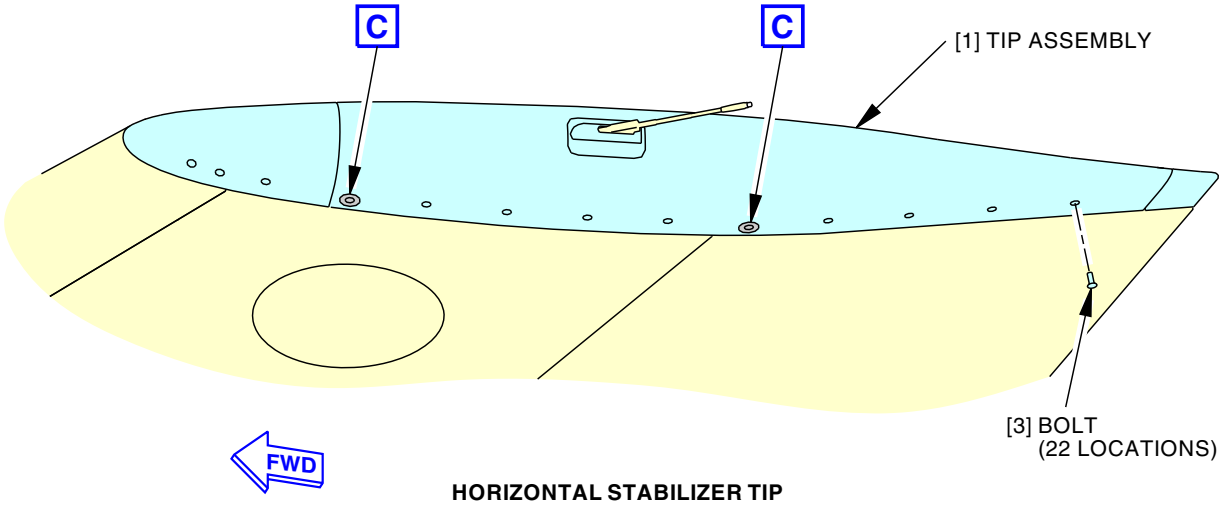


HORIZONTAL STABILIZER TIP

B

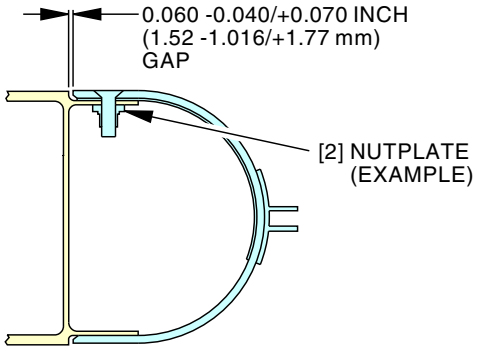

SKIN CLEARANCE

A-A

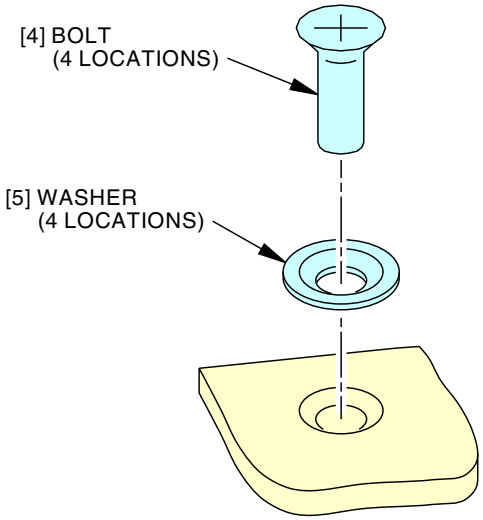

(EXAMPLE)

C

2927754 S0000707034_V1

Horizontal Stabilizer Tip Installation
Figure 401/55-10-00-990-802 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-10-00-400-801

3. Horizontal Stabilizer Tip - Installation

A. References

Reference	Title
SWPM 20-20-00	ELECTRICAL BONDING PROCESSES

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1550	Bonding Meter - Approved, Intrinsically Safe (Approved for use in Class I, Divisions I & II hazardous (classified) locations. Outside these hazardous locations, COM-614 can be used in lieu of COM-1550). Part #: 620LK Supplier: 1CRL2 Part #: 720A-BK-KIT Supplier: 49374 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659

C. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
C00528	Compound - Corrosion Preventive, Petroleum Hot Application (Soft Film)	MIL-C-11796 Class III

D. Location Zones

Zone	Area
335	Left Horizontal Stabilizer - Tip
345	Right Horizontal Stabilizer - Tip

E. Prepare for the Installation

SUBTASK 55-10-00-840-001

(1) Prepare the nutplates [2] as follows:

(a) Examine the nutplates [2] on the inner side of the tip assembly [1].

(b) Remove all damaged nutplates [2].

(c) Install new nutplates [2] in areas where there are no nutplates [2].

(2) Remove the cover from the closure ribs for the horizontal stabilizer.

F. Horizontal Stabilizer Tip Installation

SUBTASK 55-10-00-420-002

(1) Put the tip assembly [1] in the correct position on the horizontal stabilizer.

SUBTASK 55-10-00-400-001

(2) Install the bolts [3], bolts [4] and washers [5] as follows:

(a) Apply compound, C00528, to all areas of the hole with any countersink and counter bore.

(b) Immediately Install the bolts [3], bolts [4] and washers [5] loosely.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Tighten the bolts [3] and bolts [4] gradually, in a sequence which will not cause the skin to buckle.

(d) Make sure that you have the correct clearance between the tip skin and the horizontal stabilizer (View A-A, Figure 401).

(e) Do an electrical bonding test between the airplane structure and the bolts [4] and washers [5] with a, intrinsically safe approved bonding meter, COM-1550, (SWPM 20-20-00).

(f) Make sure the resistance is less than 0.001 ohms.

SUBTASK 55-10-00-390-001

(3) Fill the clearance between the tip and the horizontal stabilizer around periphery with sealant, A00247.

G. Put the Airplane Back to Its Usual Condition

SUBTASK 55-10-00-860-003

(1) Remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
B	10	C00207	FLIGHT CONTROL STAB TRIM CONT
D	10	C00840	FLIGHT CONTROL STAB TRIM ACTUATOR

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

HORIZONTAL STABILIZER - MAINTENANCE PRACTICES

1. General

A. This procedure contains the following tasks:

(1) Horizontal Stabilizer - Corrosion Prevention.

(2) Guidelines for missing fasteners in the leading edge access panels.

B. Corrosion can occur on the horizontal stabilizer rear spar, and filiform corrosion can occur on the inspar skin.

C. Corrosion can occur on the jackscrew support truss.

D. Corrosion can occur at the faying surfaces of the inspar skin and inspar rib chords.

E. Corrosion can occur on the rear spar attachment bolts which may result in chrome plating flaking.

F. Corrosion can occur on the stabilizer and stabilizer center section clevises and lugs.

G. Corrosion and plating deterioration can occur on hinge pins at the horizontal stabilizer center section.

H. Corrosion can occur between the horizontal stabilizer skin panel and the forward flange of upper and lower trailing edge beams. The corroded areas, two to ten inches long, can occur at several locations along the beam between elevator stations 23 and 213. Corrosion is caused by water trapped in the unsealed seam.

I. Corrosion can occur on the horizontal stabilizer pivot pins.

J. Corrosion can occur on the horizontal stabilizer attachment lugs.

K. Stress corrosion can cause broken lower attach bolt on the RH horizontal stabilizer. The attach bolts are made of a special alloy steel.

L. Corrosion can occur in the stabilizer center section attach fittings. The deepest corrosion can occur on the gap between the two flanged bushings in the lug holes. Corrosion spots can also occur on the lug faces.

M. Corrosion can occur on the surfaces of the horizontal stabilizer that touches the upper and lower trailing-edge skin and the trailing-edge beam. The corrosion is caused by moisture that can get into the joints between these parts.

N. Corrosion can occur on the elevator balance panels and similar structure to the elevator front spar.

O. Corrosion can occur between elevator nose skins and hinge fittings for elevator balance panels, and between hinge halves and adjacent faying structure.

P. Moisture can collect between the trailing edge skin panel mating surfaces.

TASK 55-10-00-910-801

2. Horizontal Stabilizer - Corrosion Prevention

(Figure 201)

A. General

(1) Do the regular inspection to prevent or find the start of corrosion. Missing fasteners, white powder, or other corrosion deposits are signs of corrosion. Do the corrosion prevention procedures to decrease the amount of corrosion.

(2) Clean the suspected areas (PAGEBLOCK 51-21-31/701). Do a full inspection to make sure that the protective finishes applied during manufacture are not damaged.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(3) If corrosion is found (noticeable bulges of the skin or white deposits of corrosion products at fastener heads or joint edges), refer to the Structural Repair Manual for details to remove corrosion.

(4) For minor corrosion, to minimize the downtime of the airplane, the corrosion products should be cleaned off, followed by the application of a corrosion inhibiting compound to the affected area to decrease the corrosion process (PAGEBLOCK 51-21-91/701). Repair the finish at the next maintenance opportunity.

(5) If there is hydraulic fluid contamination on the lugs or clevises, examine the components in the vertical fin for external leakage. This includes the main and standby rudder PCU, hydraulic hoses and tubing.

NOTE: An example of hydraulic fluid contamination is damaged or blistered paint.

(6) Examine the trailing edge skin panels for delamination and moisture. Moisture accumulation can cause corrosion on the aluminum sub-structure and skin panel delamination. Accumulations of water can be detected radio-graphically.

B. References

Reference	Title
51-21-31 P/B 701	CORROSION REMOVAL AND CONTROL - CLEANING/PAINTING
51-21-91 P/B 701	CORROSION INHIBITING COMPOUND - CLEANING/PAINTING
51-22-00-390-809	Aerodynamic Smoother Application (P/B 201)

C. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II
G00009	Compound - Organic Corrosion Inhibiting	BMS3-23

D. Location Zones

Zone	Area
330	Subzone - Left Horizontal Stabilizer and Elevator
340	Subzone - Right Horizontal Stabilizer and Elevator

E. Horizontal Stabilizer Corrosion Prevention

SUBTASK 55-10-00-370-001

(1) At the next maintenance opportunity, apply corrosion prevention treatment to the horizontal stabilizer.

SUBTASK 55-10-00-200-001

(2) Periodically examine the stabilizer for damaged finish and evidence of corrosion.

(a) On skin surfaces, apply water displacing corrosion inhibitor compound to rivet heads and panel edges where the paint has cracked or flaked.

(b) After 30 minutes, wipe off the excess compound with a clean, dry rag.

SUBTASK 55-10-00-200-002

(3) Restore any damaged finish at the next maintenance opportunity.

SUBTASK 55-10-00-370-002

(4) At one year intervals, apply water displacing corrosion inhibiting compound to the aft side of the rear spar cavity.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Make sure that the compound is applied to attachment points and faying surfaces.

SUBTASK 55-10-00-370-003

(5) At one year intervals, apply water displacing corrosion inhibiting compound to the fastener heads and skin joint on the upper and lower surfaces at the rear spar.

(a) After 30 minutes, wipe off the excess compound with a clean, dry rag.

SUBTASK 55-10-00-370-004

(6) At one year intervals, apply water displacing corrosion inhibiting compound to the jackscrew support truss.

(a) Make sure that the compound is applied to attachment points.

(b) Do not apply the compound on the jackscrew.

SUBTASK 55-10-00-370-005

(7) At two year intervals, remove the leading edge and spray water displacing corrosion inhibiting compound to the forward side of the rear spar with a proper extension tube.

(a) Make sure that the compound is applied to the upper and lower spar chords.

(b) Apply corrosion inhibitor at the intersection of skin and rib chords.

SUBTASK 55-10-00-370-006

(8) At one year intervals, apply water displacing corrosion inhibiting compound to exposed areas of the elevator spar.

(a) Make sure that the compound is applied to attachment points.

SUBTASK 55-10-00-370-007

CAUTION

DO NOT APPLY CORROSION-INHIBITING COMPOUND TO THE SEALS OF THE ELEVATOR BALANCE PANEL. DO NOT APPLY IT TO THE AREAS THAT THE SEALS WILL TOUCH. THE CORROSION-INHIBITING COMPOUND CAUSES DAMAGE, OR DETERIORATION OF THE SEALS.

(9) At one year intervals, apply water displacing corrosion inhibiting compound to the elevator balance panels.

SUBTASK 55-10-00-370-008

(10) Apply water displacing corrosion inhibiting compound to the horizontal stabilizer terminal fittings.

SUBTASK 55-10-00-370-009

(11) Apply a fillet seal with sealant, A02315, around the trailing edge panels (TASK 51-22-00-390-809).

SUBTASK 55-10-00-200-003

(12) Do inspections and apply compound as follows:


(a) Periodic inspection is required in areas identified as susceptible to corrosion and should be consistent to the schedules specified in the Maintenance Planning Document.

NOTE: Operators must be aware of reported problems and areas of occurrences.

(b) Periodic application of corrosion inhibiting compound, G00009, is necessary to areas identified and should be consistent to the schedule specified in the Maintenance Planning Document.


END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

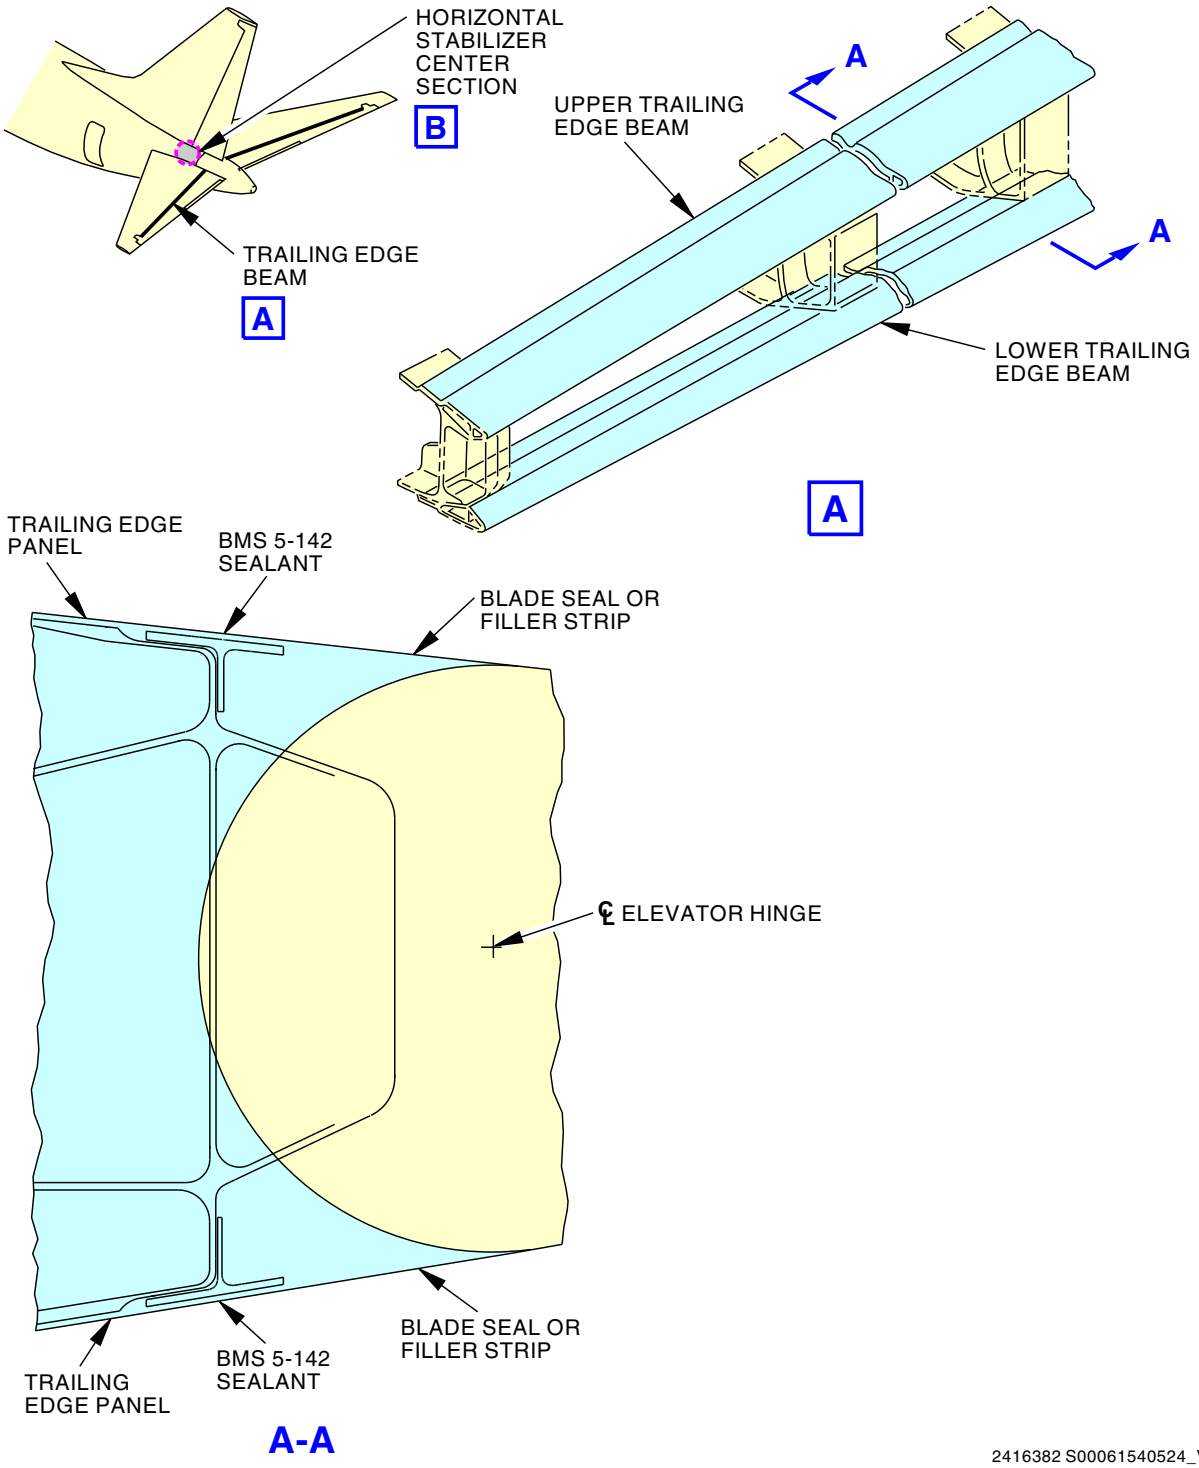

Horizontal Stabilizer - Corrosion Prevention
Figure 201/55-10-00-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

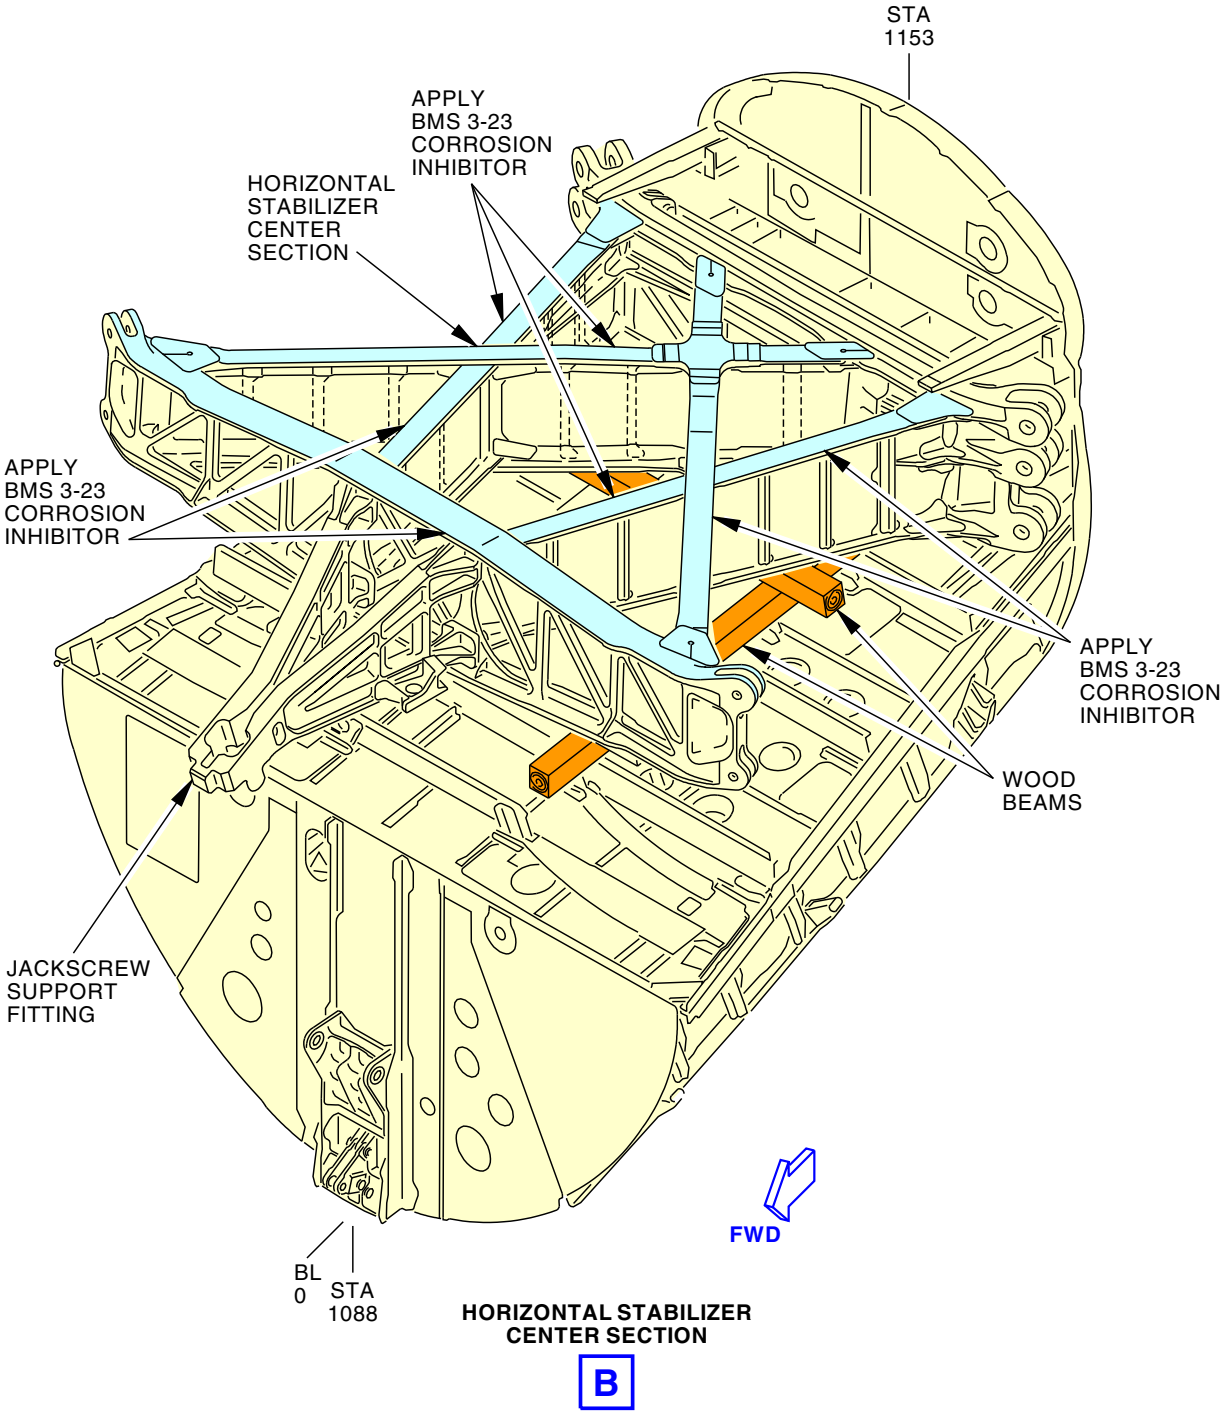

2416383 S00061540525_V3

Horizontal Stabilizer - Corrosion Prevention
Figure 201/55-10-00-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-10-00-200-801

3. Guidelines for Missing Fasteners in the Leading Edge Access Panels

A. General

(1) This procedure gives the task guidelines for missing fasteners from the leading edge panels on the horizontal stabilizer.

B. References

Reference	Title
06-42-00-800-801	Finding an Access Door or Panel in the Empennage (P/B 201)
20-50-11-910-801	Standard Torque Values (P/B 201)

C. Location Zones

Zone	Area
331	Left Horizontal Stabilizer - Removable Leading Edge
341	Right Horizontal Stabilizer - Removable Leading Edge

D. Guidelines for Missing Fasteners in the Leading Edge Access Panels

SUBTASK 55-10-00-860-001

(1) Find the applicable horizontal stabilizer leading edge panel (TASK 06-42-00-800-801).

SUBTASK 55-10-00-211-001

(2) Make sure that the horizontal stabilizer leading edge access panel meet these guidelines:

(a) One fastener can be missing from a panel if the panel has six to twelve fasteners to keep the panel on the airplane.

(b) Two fasteners can be missing from a panel if the panel has more than twelve fasteners to keep the panel on the airplane.

1) The two missing fasteners must not be adjacent to each other.

SUBTASK 55-10-00-211-002

WARNING DO NOT LET OBJECTS GET IN THE HOUSING ASSEMBLY OF THE SLAT TRACK. THIS WILL HELP PREVENT A PUNCTURE OF THE HOUSING ASSEMBLY THAT COULD CAUSE A FUEL LEAK. THE FUEL LEAK COULD CAUSE A FIRE AND POSSIBLE DEATH OR INJURY TO PERSONNEL.

(3) Make sure that the missing fasteners are not inside the leading edge housing.

SUBTASK 55-10-00-420-001

(4) Install the fastener with the applicable torques (TASK 20-50-11-910-801).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

HORIZONTAL STABILIZER CONDUCTIVE STRIP - REPAIRS

1. General

A. This section contains one task for the horizontal stabilizer conductive strip:

(1) Horizontal Stabilizer Conductive Strip Repair

TASK 55-10-01-300-801

2. Horizontal Stabilizer Conductive Strip Repair

A. Repair the Conductive Strip

SUBTASK 55-10-01-030-001

(1) For the repair of the horizontal stabilizer conductive strip, do this task: (SRM PROCEDURE 55-10-01-2R-10).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

THRUST BRACE LINKS - REMOVAL/INSTALLATION

1. General

A. This procedure has two tasks:

(1) A removal of the thrust brace links.

(2) An installation of the thrust brace links.

B. The thrust brace links are located at the rear spar of the horizontal stabilizer center section.

C. There are four thrust brace links (two on each side).

TASK 55-10-10-000-801

2. Thrust Brace Links Removal

(Figure 401, Figure 402, Figure 403)

A. References

Reference	Title
29-11-00-860-805	Hydraulic System A or B Power Removal (P/B 201)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1672	Lock Assembly - Stabilizer Trim Part #: F71336-501 Supplier: 81205

C. Location Zones

Zone	Area
300	Empennage

D. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door

E. Prepare for the Removal

SUBTASK 55-10-10-860-001

(1) Do this task: Hydraulic System A or B Power Removal, TASK 29-11-00-860-805.

SUBTASK 55-10-10-860-002

(2) Set the stabilizer trim cutout switches to the CUTOUT position.

NOTE: The stabilizer trim cutout switches are installed on the control stand.

SUBTASK 55-10-10-860-004

(3) Use the stabilizer trim wheel [12] on the control stand to set the horizontal stabilizer at zero degree (3 units of trim).

SUBTASK 55-10-10-480-001

(4) Install the lock assembly, SPL-1672 on the stabilizer trim wheel [12] at the control stand.

(a) Turn the stabilizer trim wheel [12] to put the handle at the top of the wheel.

(b) Adjust the height of the stabilizer trim lock [11] to put the stabilizer trim wheel [12] handle correctly on the yoke [9].

(c) Install the pin [10] through the yoke [9].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(d) Install the safety pin [13].

SUBTASK 55-10-10-010-001

(5) Open this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

SUBTASK 55-10-10-480-002

(6) Install applicable wood beams to hold the center section in a horizontal position (Figure 402).

F. Remove the Thrust Brace Links

SUBTASK 55-10-10-020-001

(1) Disconnect the inboard side of the upper thrust brace link [2].

(a) Remove the cotter pin [4] and nut [5].

(b) Remove the two washers [8], washer [3], and bolt [1].

(c) Discard the two washers [8].

(d) Disconnect the thrust brace link [2] from the center section fitting.

SUBTASK 55-10-10-020-002

(2) Disconnect the inboard side of the lower thrust brace link [7].

(a) Remove the cotter pin [4] and nut [5].

(b) Remove the two washers [8], washer [3], and bolt [6].

(c) Discard the two washers [8].

(d) Disconnect the thrust brace link [7] from the center section fitting.

SUBTASK 55-10-10-020-003

(3) Disconnect the outboard side of the upper thrust brace link [2].

(a) Remove the cotter pin [4] and nut [5].

(b) Remove the two washers [8], washer [3], and bolt [1].

(c) Discard the two washers [8].

(d) Remove thrust brace link [2] from the fitting.

SUBTASK 55-10-10-020-004

(4) Disconnect the outboard side of the lower thrust brace link [7].

(a) Remove the cotter pin [4] and nut [5].


(b) Remove the two washers [8], washer [3], and bolt [1].


(c) Discard the two washers [8].

(d) Remove the thrust brace link [7] from the fitting.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

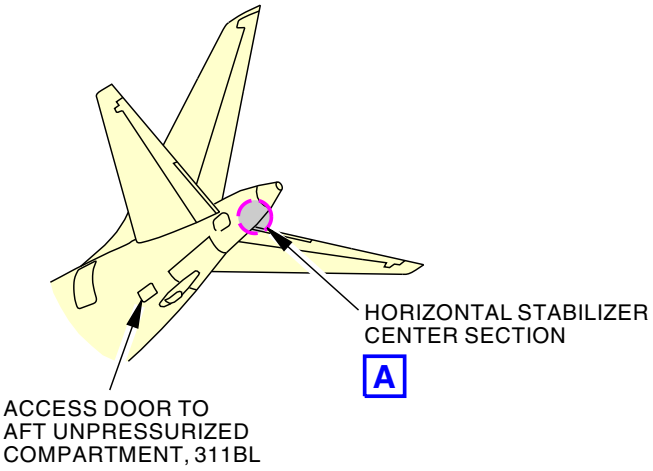

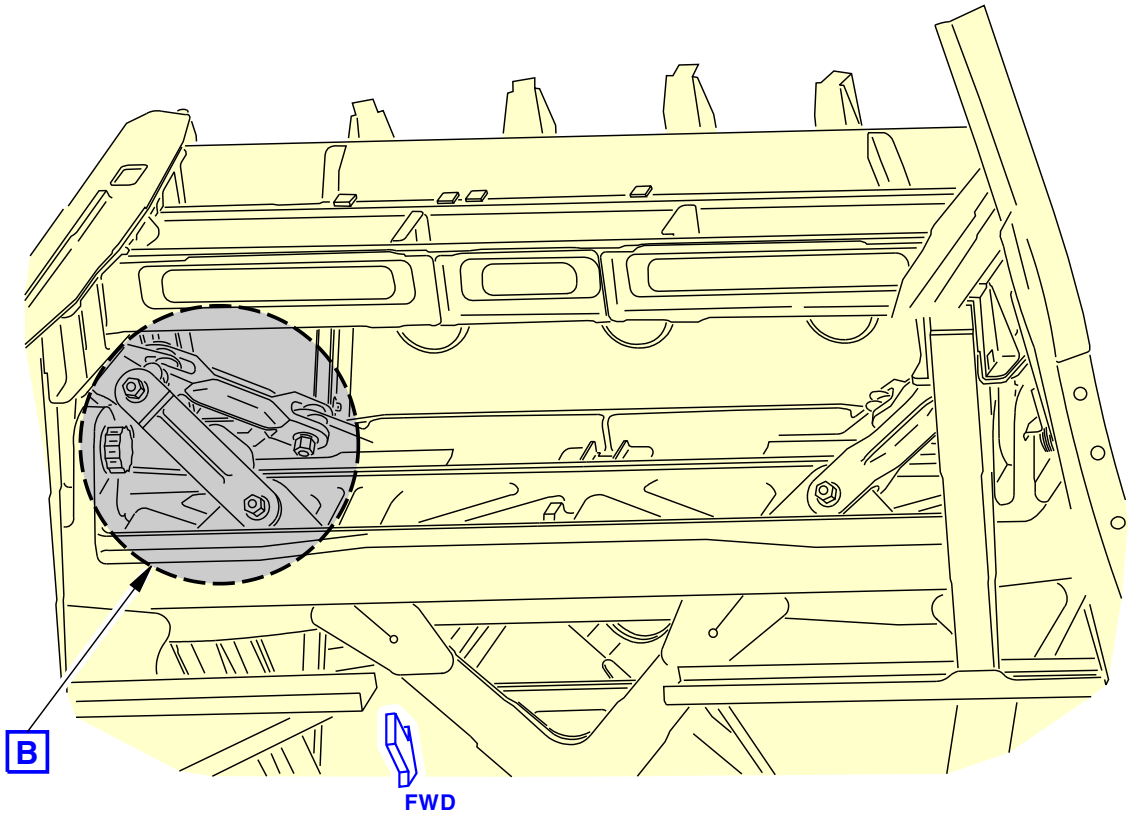


HORIZONTAL STABILIZER CENTER SECTION

A

2416385 S00061540534_V1

Thrust Brace Links Installation
Figure 401/55-10-10-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

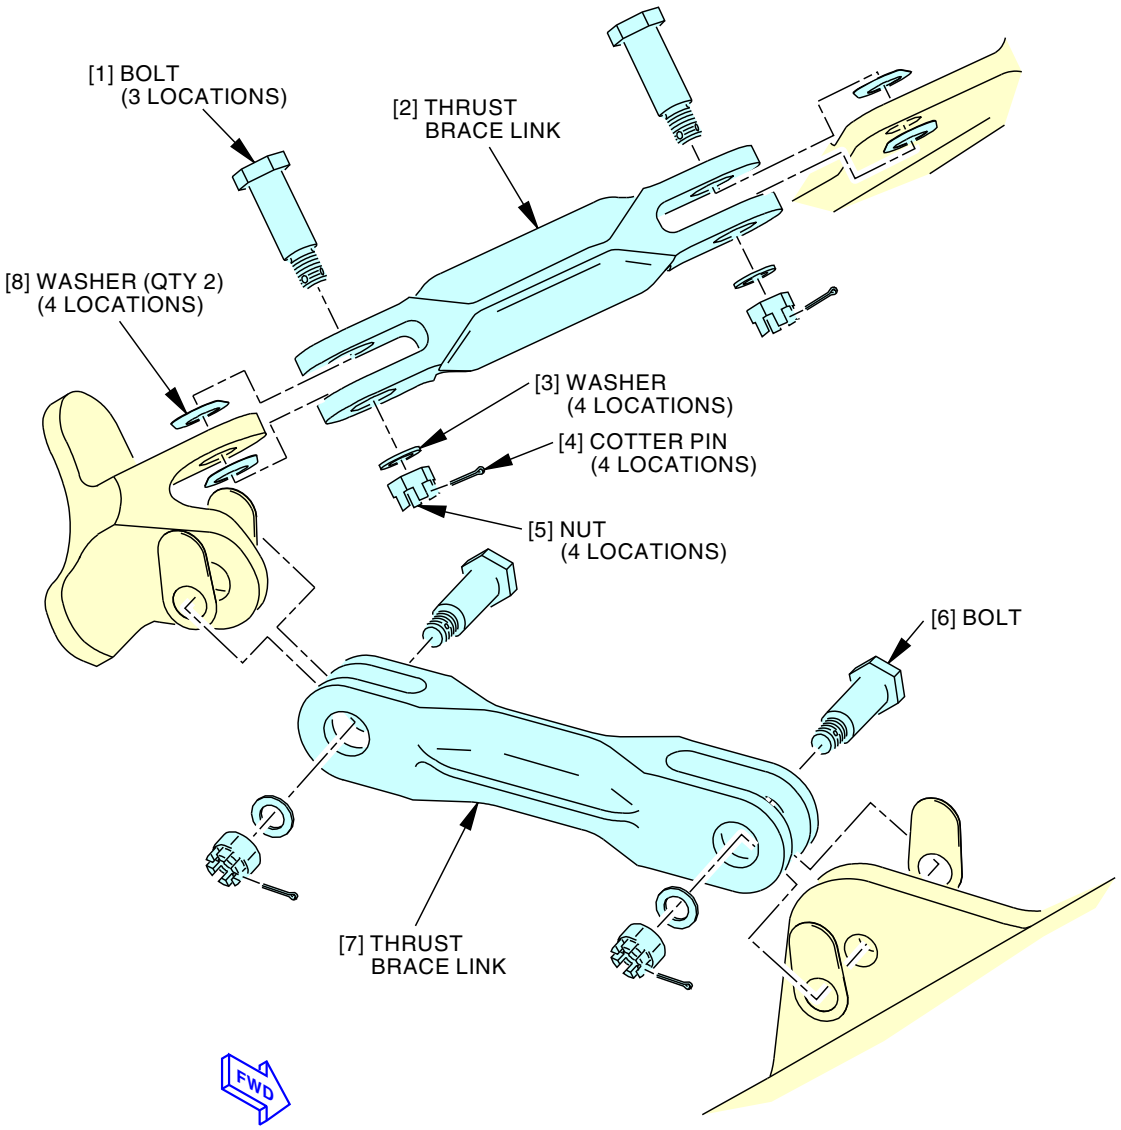


**(LEFT SIDE IS SHOWN,
RIGHT SIDE IS OPPOSITE)**

B

2416386 S00061540535_V1

**Thrust Brace Links Installation
Figure 401/55-10-10-990-801 (Sheet 2 of 2)**


ECCN 9E991 BOEING PROPRIETARY - See title page for details

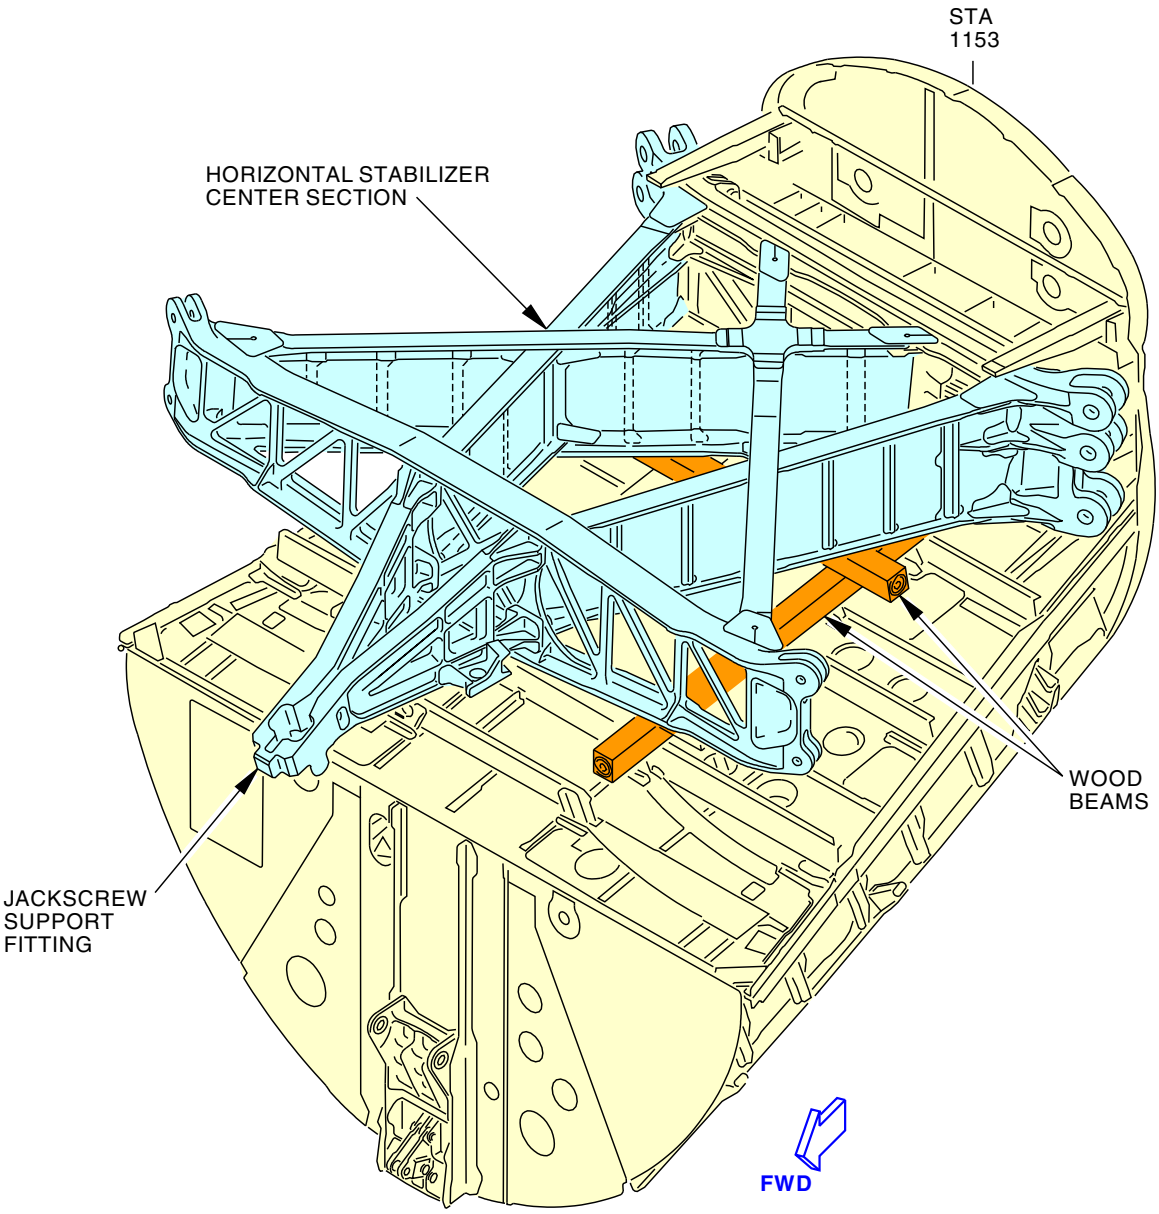

2416387 S00061540536_V1

Horizontal Stabilizer Center Section Installation
Figure 402/55-10-10-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details

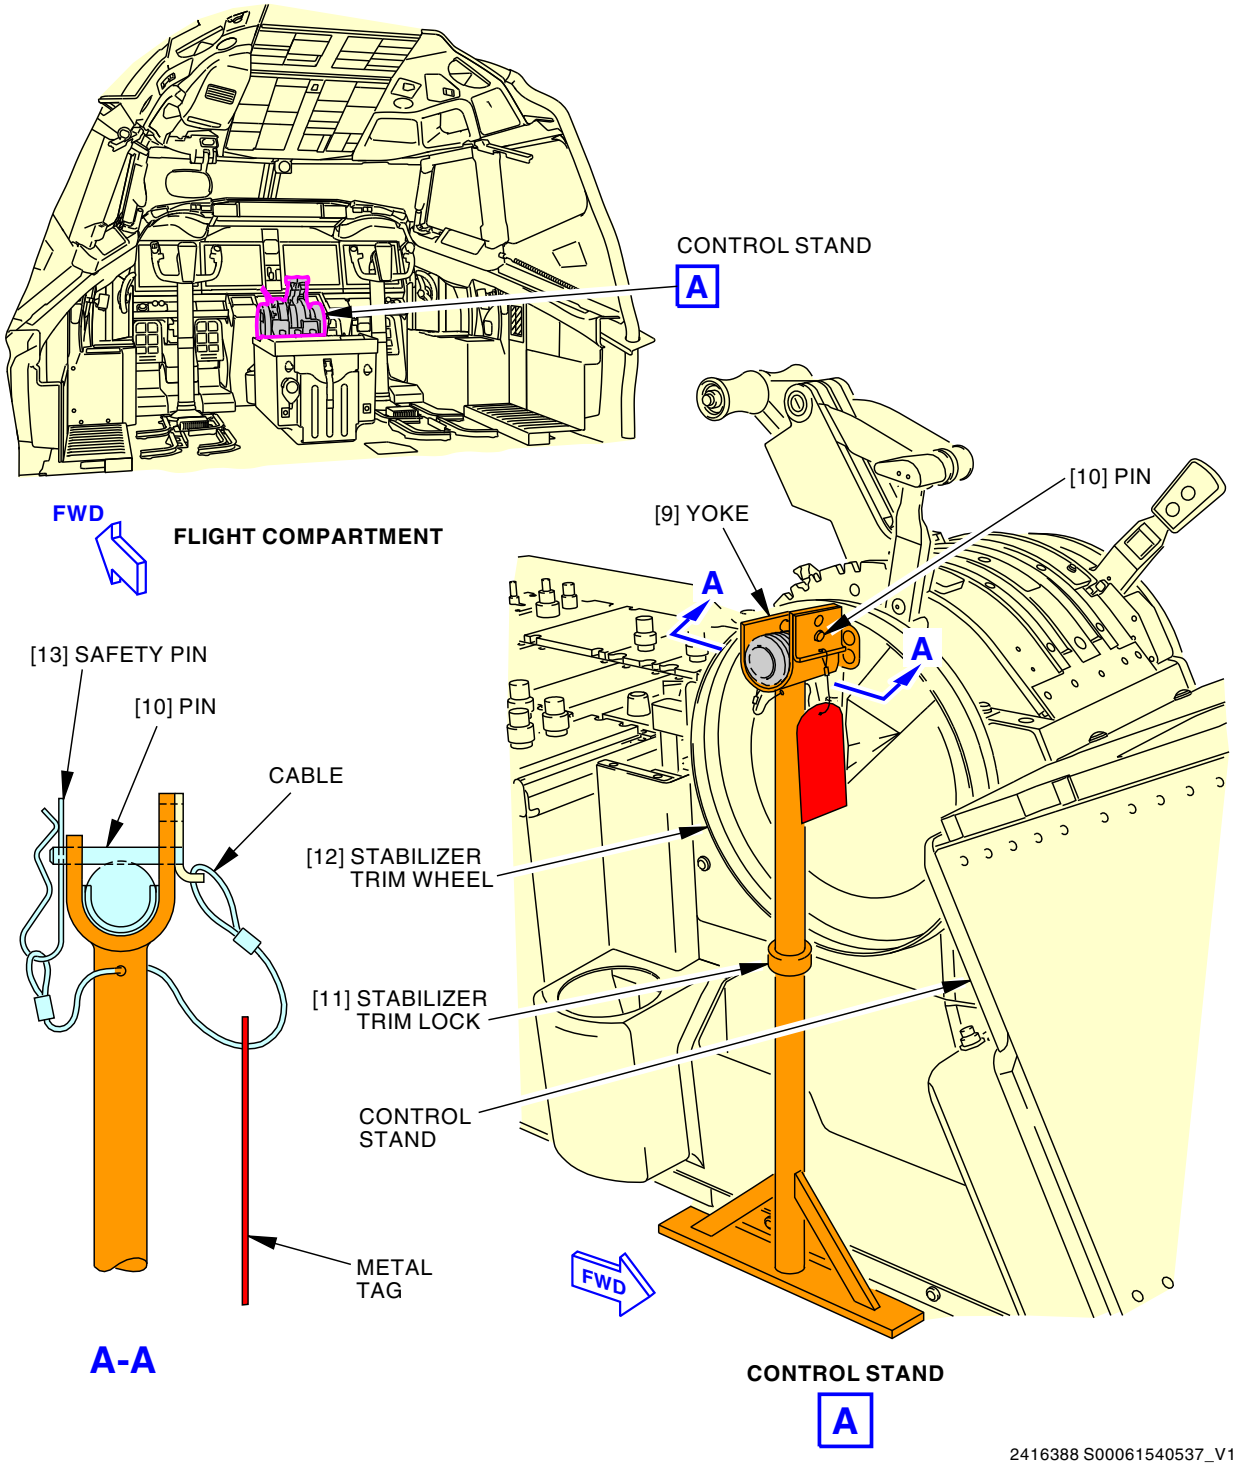

Stabilizer Trim Lock Installation
Figure 403/55-10-10-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-10-10-400-801

3. Thrust Brace Link Installation

(Figure 401, Figure 402, Figure 403)

A. References

Reference	Title
29-11-00-860-801	Hydraulic System A or B Pressurization (P/B 201)

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1672	Lock Assembly - Stabilizer Trim Part #: F71336-501 Supplier: 81205

C. Consumable Materials

Reference	Description	Specification
D00633	Grease - Aircraft General Purpose	BMS3-33

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Thrust brace link	55-10-52-01Q-085	PTF ALL
4	Cotter pin	55-10-52-01Q-045	PTF ALL
7	Thrust brace link	55-10-52-01Q-090	PTF ALL
8	Washer	55-10-52-01Q-065	PTF ALL

E. Location Zones

Zone	Area
300	Empennage

F. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door

G. Install the Thrust Brace Links

SUBTASK 55-10-10-420-005

(1) Connect the inboard side of the lower thrust brace link [7].

(a) Install the thrust brace link [7] to the center section fitting.

1) Apply grease, D00633 to the shank and thread of the bolt [6].

2) Install the two washers [8], the bolt [6] and the washer [3].

NOTE: The two washers [8] must be new.

3) Install the nut [5] and cotter pin [4].

a) Tighten the nut [5] to 440 in-lb (49.7 N·m) - 540 in-lb (61.0 N·m).

NOTE: If the cotter pin slot in the nut does not align with the cotter pin hole in the bolt within the specified torque range, tighten the nut to get cotter pin hole alignment, but do not exceed 650 in-lb (73.4 N·m).

SUBTASK 55-10-10-420-001

(2) Connect the inboard side of the upper thrust brace link [2].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Install the thrust brace link [2] to the center section fitting.

1) Apply grease, D00633 to the shank and thread of the bolt [1].

2) Install the two washers [8], bolt [1] and washer [3].

NOTE: The two washer [8] must be new.

3) Install the nut [5] and cotter pin [4].

a) Tighten the nut [5] to 440 in-lb (49.7 N·m) - 540 in-lb (61.0 N·m).

NOTE: If the cotter pin slot in the nut does not align with the cotter pin hole in the bolt within the specified torque range, tighten the nut to get cotter pin hole alignment, but do not exceed 650 in-lb (73.4 N·m).

SUBTASK 55-10-10-420-006

(3) Connect the outboard side of the lower thrust brace link [7].

(a) Install the thrust brace link [7] to the fitting.

1) Apply grease, D00633 to the shank and thread of bolt [1].

2) Install the two washers [8], bolt [1], and washer [3].

NOTE: The two washers [8] must be new.

3) Install the cotter pin [4] and nut [5].

a) Tighten the nut [5] to 440 in-lb (49.7 N·m) - 540 in-lb (61.0 N·m).

NOTE: If the cotter pin slot in the nut does not align with the cotter pin hole in the bolt within the specified torque range, tighten the nut to get cotter pin hole alignment, but do not exceed 650 in-lb (73.4 N·m).

SUBTASK 55-10-10-420-003

(4) Connect the outboard side of the upper thrust brace link [2].

(a) Install the thrust brace link [2] to the fitting.

1) Apply grease, D00633 to the shank and thread of the bolt [1].

2) Install the two washers [8], bolt [1], and washer [3].

NOTE: The two washers [8] must be new.

3) Install the cotter pin [4] and nut [5].

a) Tighten the nut [5] to 440 in-lb (49.7 N·m) - 540 in-lb (61.0 N·m).

NOTE: If the cotter pin slot in the nut does not align with the cotter pin hole in the bolt within the specified torque range, tighten the nut to get cotter pin hole alignment, but do not exceed 650 in-lb (73.4 N·m).

SUBTASK 55-10-10-080-001

(5) Remove the wood beams (Figure 402).

SUBTASK 55-10-10-080-002

(6) Remove the lock assembly, SPL-1672 from the stabilizer trim wheel [12] at the control stand.

SUBTASK 55-10-10-860-005

(7) Set the stabilizer trim cutout switches to the NORMAL position.

SUBTASK 55-10-10-410-001

(8) Close this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-10-10-860-007

(9) Do this task: Hydraulic System A or B Pressurization, TASK 29-11-00-860-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

BALANCE BAY PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Removal of the Balance Bay Panels.

(2) Installation of the Balance Bay Panels.

TASK 55-10-11-000-801

2. Balance Bay Panels - Removal

(Figure 401)

A. References

Reference	Title
27-31-00-000-801	Elevator and Tab Control System - Deactivation (P/B 201)
27-41-00-800-801	Horizontal Stabilizer Trim Control System - Deactivation (P/B 201)
51-22-00-160-801	Prepare For Sealing (P/B 201)

B. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

C. Access Panels

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

D. Balance Bay Panels Removal

SUBTASK 55-10-11-860-001

(1) Do this task: Horizontal Stabilizer Trim Control System - Deactivation, TASK 27-41-00-800-801.

SUBTASK 55-10-11-860-004

(2) Do this task: Elevator and Tab Control System - Deactivation, TASK 27-31-00-000-801.

SUBTASK 55-10-11-020-001

(3) Remove sealant from the edge of the applicable panel.

NOTE: You can remove a section of the fillet seal (TASK 51-22-00-160-801).

SUBTASK 55-10-11-020-002

(4) Do these steps to remove the applicable panels:

(a) Hold the panel until all the fasteners have been removed.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Left side panels:

1) Remove the fasteners for these panels:

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge

(c) Right side panels:


1) Remove the fasteners for these panels:

Number	Name/Location
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

(d) Remove the panel from the airplane.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

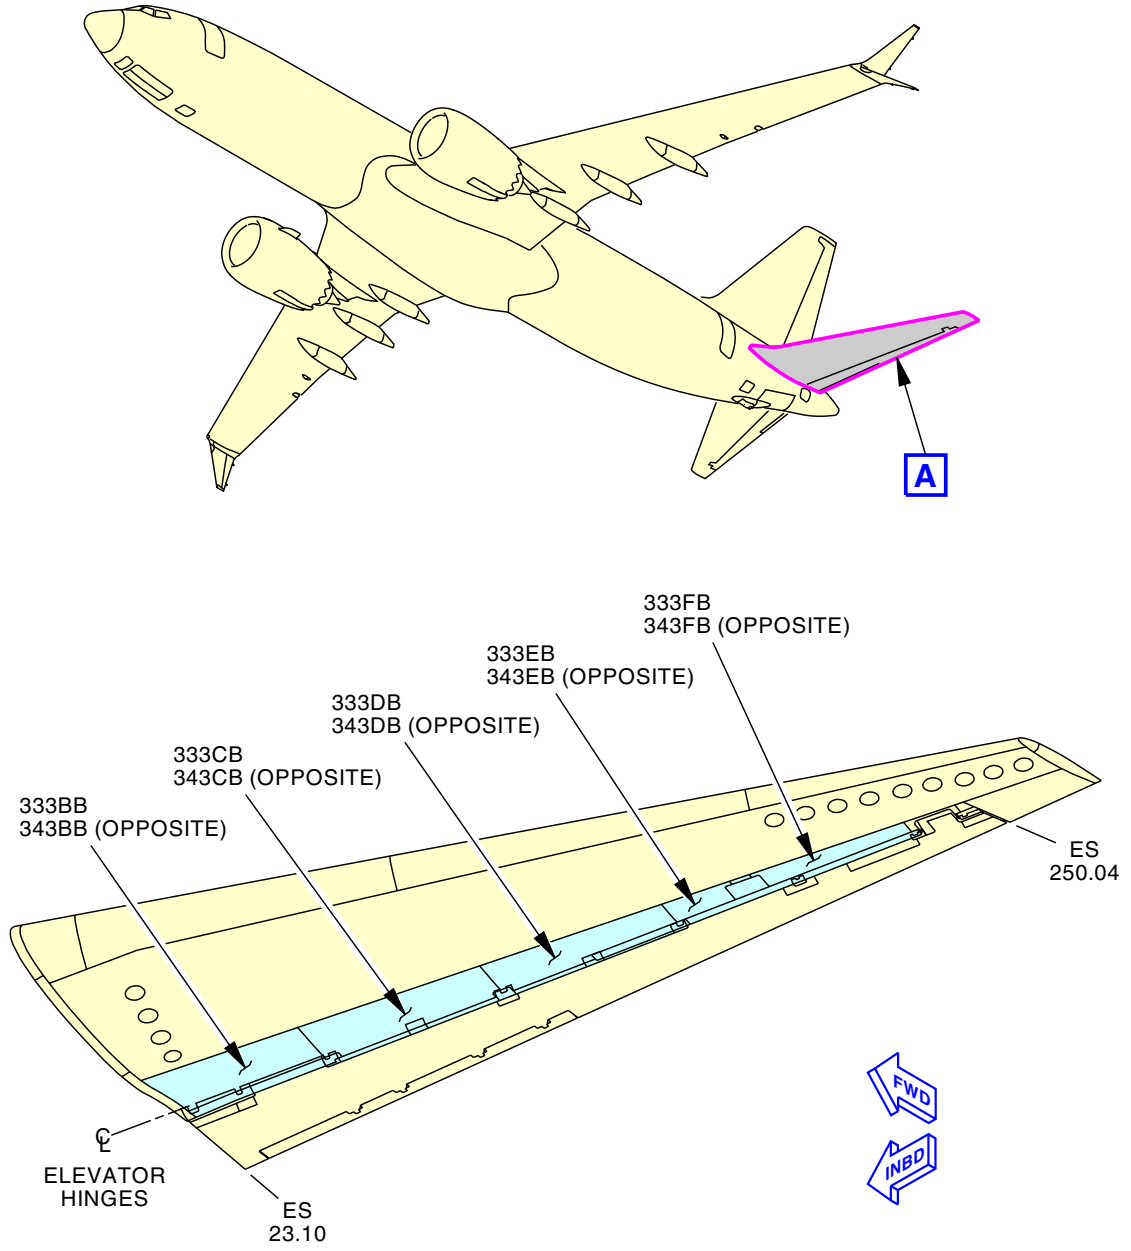

**(LEFT SIDE IS SHOWN,
RIGHT SIDE IS OPPOSITE)**

A

2416389 S00061540541_V1

**Balance Bay Panels - Installation
Figure 401/55-10-11-990-801**

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-10-11-400-801

3. Balance Bay Panels - Installation

(Figure 401)

A. References

Reference	Title
27-31-00-400-801	Elevator and Tab Control System - Activation (P/B 201)
27-41-00-800-802	Horizontal Stabilizer Trim Control System - Activation (P/B 201)
51-22-00-390-802	Removable Faying (Mated) Surface Seal Application (P/B 201)
51-22-00-390-809	Aerodynamic Smoother Application (P/B 201)

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II
D00633	Grease - Aircraft General Purpose	BMS3-33
D50039	Lubricant - PTFE Release Agent - Miller-Stephenson MS-122RB (use until stock depleted)	
D50119	Lubricant - Fluorocarbon PTFE Release Agent - Miller-Stephenson MS-122DF	
G00009	Compound - Organic Corrosion Inhibiting	BMS3-23
G02185	Agent - Peelable Parting (Valspar - 4A-183 Green Strippable Coating)Manufacturing discontinued, use stock until depleted	
G50313	Agent - Non-Peelable Parting (Henkel Loctite - Frekote 710-NC Mold Release)	BAC5000
G50335	Agent - Non-Peelable Parting (Henkel Loctite - Frekote 44-NC Mold Release).	BAC5000
G50365	Agent - Peelable Parting (AC Products - AC962-73C) Production discontinued, use stock until depleted.	BAC5000
G50366	Agent - Parting, Peelable, AZ 534-2B (0A3C8 - Aztec Chemical, Inc., El Monte, CA)	BAC5000, PSD 6-187
G50367	Agent - Peelable Parting (Aztec Chemical AZ 634-2)	MIL-PRF-6799, BAC5000
G50368	Agent - Peelable Parting (Rexco Chemical Company - Partall Coverall Film)	BAC5000
G50370	Tubing - Vinyl	AMS-I-7444
G50371	Reagent - Cyclohexanone	BAC5000
G50372	Pigment - Green, F-20629 Cobalt Chromite Blue-Green Spinel (11280 - Ferro Corporation)	BAC5000
G50636	Lubricant - PTFE Release Agent - Miller-Stephenson MS-122RA (use until stock depleted)	
G50711	Agent - Non-Peelable Parting (Henkel Loctite - Frekote 48-NC Mold Release).	BAC5000

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G50961	Coating - Corrosion Inhibiting Epoxy Primer - (BAC 377 Yellow Color)	BMS10-11 Type I
G51035	Release Agent - Miller-Stephenson MS-122AD	
G51368	Agent - Protective, Sprayable Strippable Coating - Spraylat SC-1071H-1 (Blue Color)	BAC5000
G51400	Lubricant - PTFE Release Agent - Miller-Stephenson MS-143N	
G51444	Release Agent - Miller-Stephenson MS-122SEL	BMS15-21

C. Location Zones

Zone	Area
333	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
343	Right Horizontal Stabilizer - Rear Spar to Trailing Edge

D. Access Panels

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

E. Balance Bay Panels Installation

SUBTASK 55-10-11-860-002

(1) Make sure that the rudder hydraulic systems A, B, and standby are deactivated.

SUBTASK 55-10-11-370-001

(2) Apply corrosion inhibiting compound, G00009, as necessary before panels are installed (Protective Treatment of Metallic and Composite Materials/SRM PROCEDURE 51-20-01-0G-0).

SUBTASK 55-10-11-370-002

(3) For the removable fasteners except at the grounding fastener locations, do these steps:

(a) Apply coating, G50961, to all areas of the hole.

(b) Apply grease, D00633, to the counter bore surface of the hole and fastener.

SUBTASK 55-10-11-410-001

(4) Do these steps to install the panels:

(a) Check the panel for damage to the sealant.

1) If no damage is present, then apply a parting agent to the panel and install it.

a) Use one of these parting agents:

<1> AC962-73C peelable parting agent, G50365.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

<2> peelable parting agent, G50366.

<3> AZ 634-2 peelable parting agent, G50367.

<4> Coating solution - 1 weight part vinyl tubing, G50370, dissolved in 4 weight parts reagent, G50371, with 1 weight percent pigment, G50372.

<5> Frekote 44-NC non-peelable parting agent, G50335.

<6> Frekote 48 NC non-peelable parting agent, G50711.

<7> Frekote 710-NC non-peelable parting agent, G50313.

<8> Valspar 4A-183 green strippable coating, G02185.

<9> Miller-Stephenson MS-122AD release agent, G51035.

<10> MS-122DF lubricant, D50119.

<11> MS-143N release agent, G51400.

<12> MS-122RA release agent, G50636, or MS-122SEL release agent, G51444.

<13> MS-122RB lubricant, D50039, or MS-122SEL release agent, G51444.

<14> Rexco Partall Coverall Film peelable parting agent, G50368.

<15> Spraylat SC-1071H-1 agent, G51368.

b) Do not apply parting agent to the edges of the panel.

2) If there is a damage to the sealant or sealant is omitted, do these steps:

a) Remove the sealant if there is a damaged sealant.

b) Install the panel and apply sealant, A00247 (TASK 51-22-00-390-802).

c) Make sure that each fastener is installed in the correct location.

d) Install all fasteners.

e) Do an electrical bonding check for each applicable fastener (SWPM 20-20-00).

3) If there is no sealant, do the steps above to install the panel and apply sealant.

4) As necessary, install these access panels:

Number	Name/Location
333BB	Horizontal Stabilizer, Access Panel, Trailing Edge
333CB	Horizontal Stabilizer, Access Panel, Trailing Edge
333DB	Horizontal Stabilizer, Access Panel, Trailing Edge
333EB	Horizontal Stabilizer, Access Panel, Trailing Edge
333FB	Horizontal Stabilizer, Access Panel, Trailing Edge

5) As necessary, install these access panels:

Number	Name/Location
343BB	Horizontal Stabilizer, Access Panel - T.E. Area
343CB	Horizontal Stabilizer, Access Panel - T.E. Area
343DB	Horizontal Stabilizer, Access Panel - T.E. Area
343EB	Horizontal Stabilizer, Access Panel - T.E. Area
343FB	Horizontal Stabilizer, Access Panel - T.E. Area

6) Apply sealant, A02315, after installation as necessary (TASK 51-22-00-390-809).

SUBTASK 55-10-11-860-003

(5) Do this task: Horizontal Stabilizer Trim Control System - Activation, TASK 27-41-00-800-802.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-10-11-860-005

(6) Do this task: Elevator and Tab Control System - Activation, TASK 27-31-00-400-801.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER (FIN) - CORROSION PREVENTION

1. General

A. Corrosion can occur on the vertical stabilizer skin, on the rear spar and at attach fittings.

B. Corrosion can occur on the rudder front spar and the attach fittings.

C. Moisture can collect between the trailing edge skin panel mating surfaces.

D. Corrosion and broken attach bolts have been found in the vertical stabilizer attach fitting. The attach bolts are made from H-11 or PH13-8M0 steel alloy, which can get cracks caused by stress corrosion.

TASK 55-30-00-910-801

2. Vertical Stabilizer (Fin) - Corrosion Prevention

A. References

Reference	Title
51-21-31 P/B 701	CORROSION REMOVAL AND CONTROL - CLEANING/PAINTING
51-21-91 P/B 701	CORROSION INHIBITING COMPOUND - CLEANING/PAINTING

B. Consumable Materials

Reference	Description	Specification
G00009	Compound - Organic Corrosion Inhibiting	BMS3-23

C. Location Zones

Zone	Area
320	Subzone - Vertical Fin and Rudder

D. Corrosion Prevention

SUBTASK 55-30-00-200-001

(1) Make the regular inspection to prevent or find the start of corrosion. Missing fasteners, white powdery, or other corrosion deposits are signs of corrosion. Initiate the corrosion prevention practices to decrease the occurrence of corrosion.

SUBTASK 55-30-00-200-002

(2) Following cleaning of suspected areas PAGEBLOCK 51-21-31/701, a full inspection is effective to ensure that protective finishes provided during manufacture remain intact.

SUBTASK 55-30-00-910-001

(3) Where corrosion exists (noticeable bulges of the skin or white deposits of corrosion products at fastener heads or joint edges), refer to Structural Repair Manual for details of corrosion removal.

SUBTASK 55-30-00-370-001

(4) For minor corrosion, to minimize the downtime of the airplane, the corrosion products should be cleaned off, followed by the application of a corrosion inhibiting compound into the affected area to decrease the corrosion process. Refer to PAGEBLOCK 51-21-91/701 for details on applying corrosion inhibiting compound. The finish system should be repaired at the next maintenance opportunity.

SUBTASK 55-30-00-370-002

(5) Frequency of Application

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Periodic inspection is required in areas identified as susceptible to corrosion and should be consistent to the schedules specified in the Maintenance Planning Document. Operators must be aware of reported problems and areas of occurrences.

(b) Periodic application of corrosion inhibiting compound, G00009 is necessary to areas identified and should be consistent to the schedule specified in the Maintenance Planning Document.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER (FIN) - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the vertical stabilizer (fin)

(2) An installation of the vertical stabilizer (fin).

TASK 55-30-00-000-801

2. Vertical Stabilizer (Fin) Removal

(Figure 401 and Figure 402)

A. General

(1) This task gives the instructions to remove the vertical stabilizer (fin).

B. References

Reference	Title
06-42-00-800-801	Finding an Access Door or Panel in the Empennage (P/B 201)
27-21-00-800-802	Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation (P/B 201)
27-21-91-000-801	Main Rudder Power Control Unit Removal (P/B 401)
27-31-37-000-801	Elevator Feel Computer Removal (P/B 401)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1727	Lock - Ground, Rudder, PCU Removed Part #: C27057-1 Supplier: 81205
SPL-2032	Sling Equipment - Vertical Fin Part #: C55010-33 Supplier: 81205 Opt Part #: C55010-1 Supplier: 81205
SPL-24233	Thread Protector - Attach Bolt, Vertical Stabilizer Part #: C55017-1 Supplier: 81205

D. Location Zones

Zone	Area
300	Empennage

E. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Prepare for the Removal

SUBTASK 55-30-00-860-002

WARNING RELEASE THE PRESSURE IN THE RUDDER HYDRAULIC SYSTEM. THE RUDDER CAN MOVE IF YOU PRESSURIZE THE SYSTEM. IF THE RUDDER MOVES, THE RUDDER CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

(1) Do this task: Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation, TASK 27-21-00-800-802.

SUBTASK 55-30-00-410-001

(2) Open these access panels:

(Finding an Access Door or Panel in the Empennage, TASK 06-42-00-800-801)

Number	Name/Location
311BL	Stabilizer Trim Access Door
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

SUBTASK 55-30-00-480-001

(3) Do this task: Main Rudder Power Control Unit Removal, TASK 27-21-91-000-801.

SUBTASK 55-30-00-410-005

(4) Install the lock, SPL-1727, with a warning streamer.

G. Vertical Stabilizer (Fin) Removal

WARNING DO NOT REMOVE OR INSTALL THE VERTICAL FIN IN WINDS MORE THAN 15 KNOTS. IF YOU DO NOT OBEY, INJURY TO PERSONNEL AND DAMAGE TO THE AIRPLANE CAN OCCUR.

SUBTASK 55-30-00-020-001

(1) Disconnect the hydraulic tubes from the bottom of the vertical fin [29] and install caps.

SUBTASK 55-30-00-020-002

(2) Disconnect the electrical wires.

(a) Disconnect the VOR and HF cables in the stabilizer jackscrew compartment, above and aft of the pressure bulkhead.

SUBTASK 55-30-00-030-001

(3) Disconnect the pitot lines from the elevator feel computer assembly.

(a) Install the tags on the lines and port fittings to clearly show the correct connection location.

1) Use these instructions on correct tubing removal (TASK 27-31-37-000-801).

SUBTASK 55-30-00-020-003

(4) Disconnect the rudder control cables from the power unit for the rudder control.

SUBTASK 55-30-00-020-004

(5) Disconnect the rudder control cables.

(a) Move the rudder trim indicator in the control cabin to NEUTRAL.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Install the rig pin in the rudder centering unit output crank.

(c) Disconnect the rudder control cables from the turnbuckles in the stabilizer jackscrew compartment.

1) Install the cable clamps on the control cables.

SUBTASK 55-30-00-480-002

(6) Install the sling equipment, SPL-2032, assembly:

(a) Install the three sling attach fittings to the applicable sides of the vertical fin [29] (Figure 401).

NOTE: Determine on which side you will put down the vertical fin. This will show which side of the vertical fin to install the sling attach fittings.

NOTE: No access doors need to be opened to install the attach fittings.

1) Remove the bolts on the vertical fin [29] skin at the three applicable lift fitting locations.

2) Install the lift fittings with the accompanying bolts.

a) Add the washers to lift fitting bolts, if bolts are too long.

b) Tighten the fasteners to 25 in-lb (2.8 N·m).

(b) Attach the sling equipment, SPL-2032, assembly to the crane.

(c) At lift fitting #1, connect 50 ft (15 m) length of ⅜ in. (9.5 mm) to ½ in. (12.7 mm) braided nylon rope on both sides of the vertical fin [29].

NOTE: This rope will be a tether line.

(d) Put the sling equipment, SPL-2032, assembly in its position.

(e) Connect the sling equipment, SPL-2032, to the lift fittings on the vertical fin [29].

(f) Tighten the sling equipment, SPL-2032, assembly to decrease the load on the vertical fin [29] attachment bolts.

SUBTASK 55-30-00-020-005

(7) Remove the vertical fin [29] (Figure 402).

(a) Remove the bolts and fasteners of the rear spar fittings on the left and right hand side of the airplane:

1) Remove the bolt [11], washer [12], retainer cap [13], lockwire [14], and antirotation lock [15] from the inboard rear spar fitting.

NOTE: If you remove the bolts for inspection, remove one bolt at a time to keep the vertical fin aligned.

2) Remove the cotter pin [22], self-locking nut [21], bolt [16], washer [20], washer [17], and two washers [18] from the inboard rear spar fitting.

NOTE: There may be one more washer [20] for grip length adjustment.

3) Remove the self-locking nut [27], bolt [23], washer [24], washers [25], washer [26], washer [19], and washers [28] from the outboard rear spar fitting.

NOTE: There may be one more washer [26] for grip length adjustment.

a) If you remove the bolts for inspection, remove one bolt at a time to keep the vertical fin [29] aligned.

(b) Remove the bolts and the fasteners of the front spar fittings:

1) Remove the cotter pins [5] from the front spar attach fittings.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

2) Remove the nuts [4], washers [2], washers [3], washers [6], and bolts [1] from the front spar attach fittings.

NOTE: If you remove the bolts for inspection, remove one bolt at a time to keep the vertical fin aligned.

a) If necessary, use a thread protector, SPL-24233, to remove bolts [1].

NOTE: The use of thread protectors, SPL-24233, are optional.

(c) Lift the vertical fin [29] from the airplane.

1) Make sure that there are no side loads on the sling lift fittings.

(d) Lower the crane hook #1 to lay the vertical fin [29] down in a horizontal position.

1) Use the tether lines to position the vertical fin [29] horizontally.

SUBTASK 55-30-00-950-001


(8) Install the protective cover on the open structure on the fuselage.


SUBTASK 55-30-00-210-001

(9) To examine the leading edge of the vertical fin [29] for aerodynamic smoothness (SRM SUBJECT 51-10-01).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

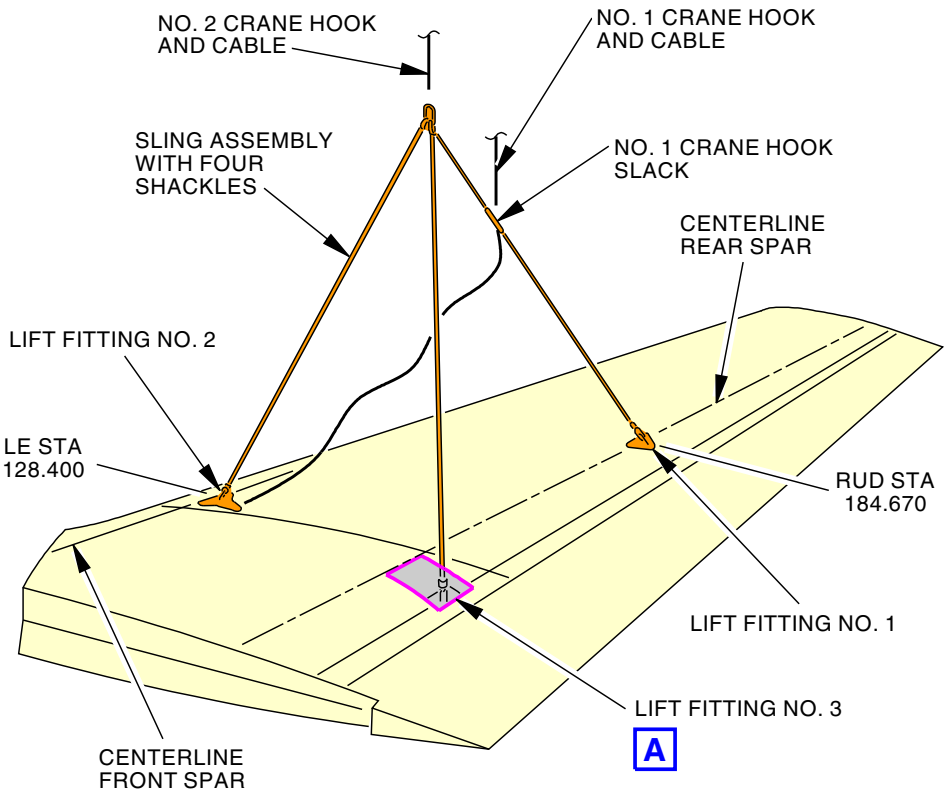


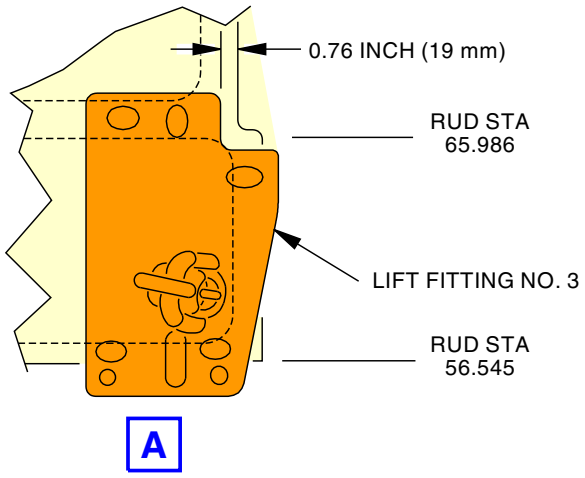

2416390 S00061540550_V3

Vertical Fin Sling Installation
Figure 401/55-30-00-990-801 (Sheet 1 of 2)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

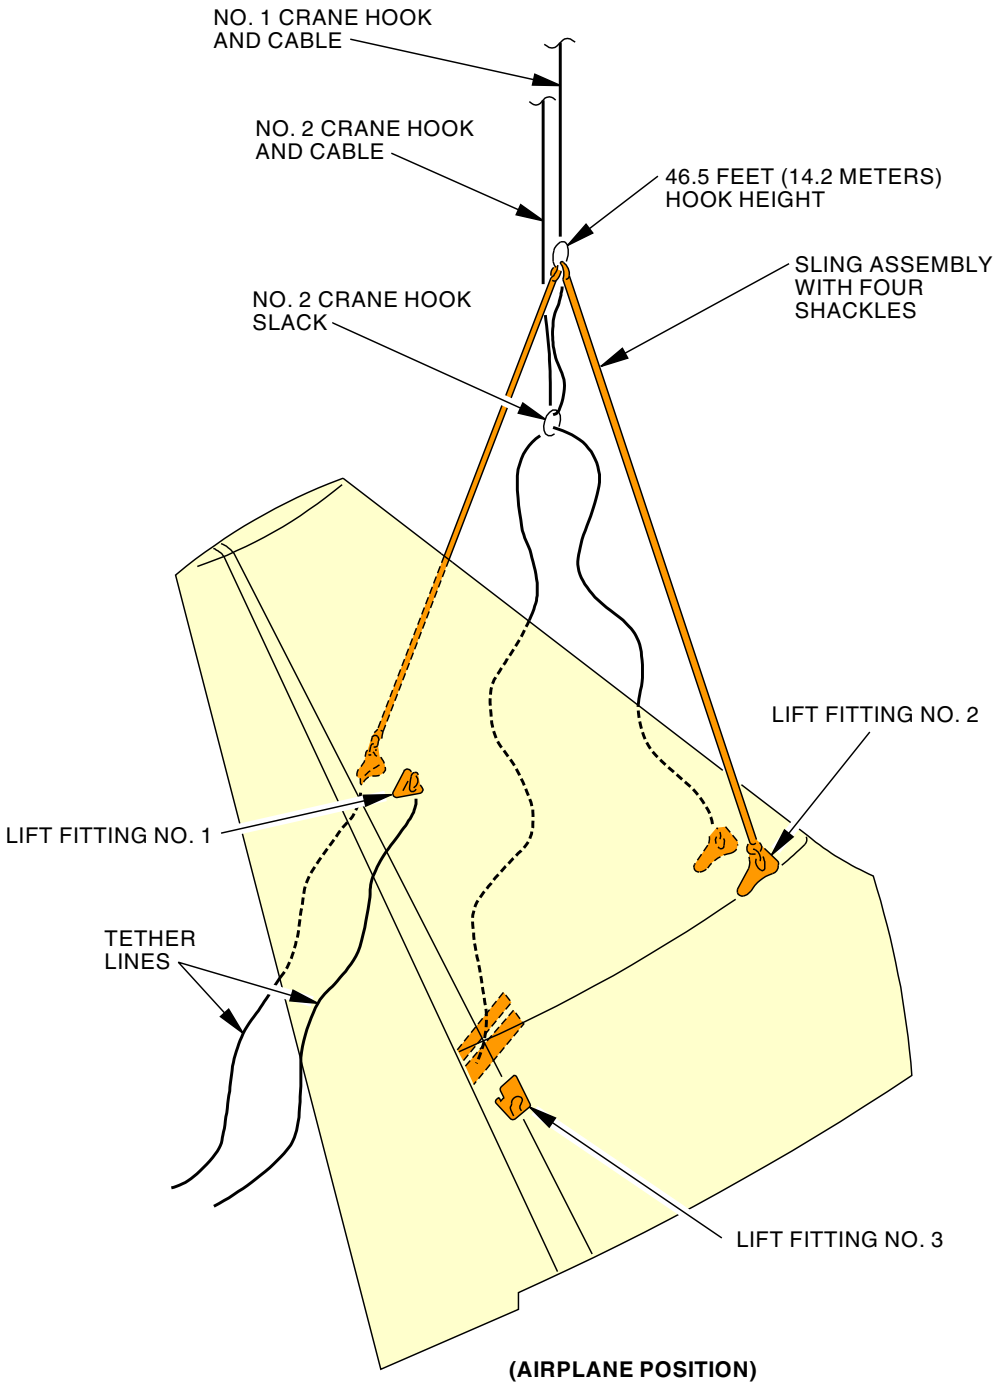


2416391 S00061540551_V1

Vertical Fin Sling Installation
Figure 401/55-30-00-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

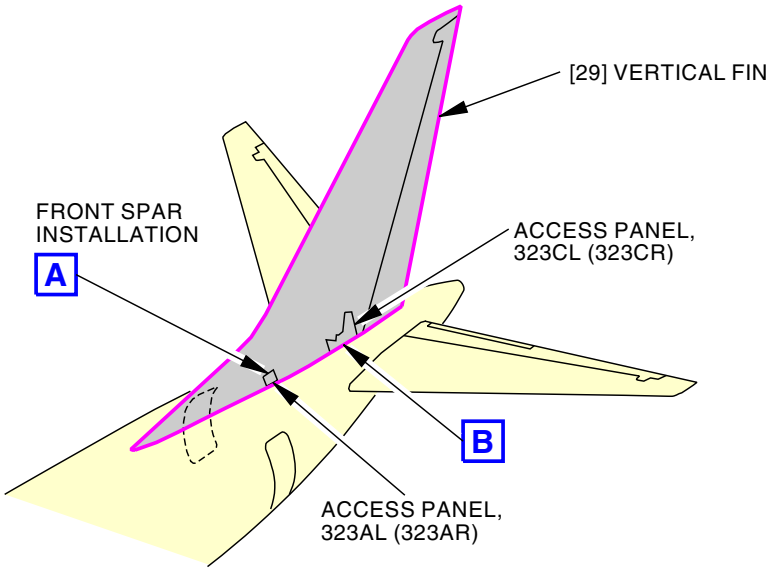

VERTICAL FIN
(LEFT SIDE IS SHOWN,
RIGHT SIDE IS EQUIVALENT)

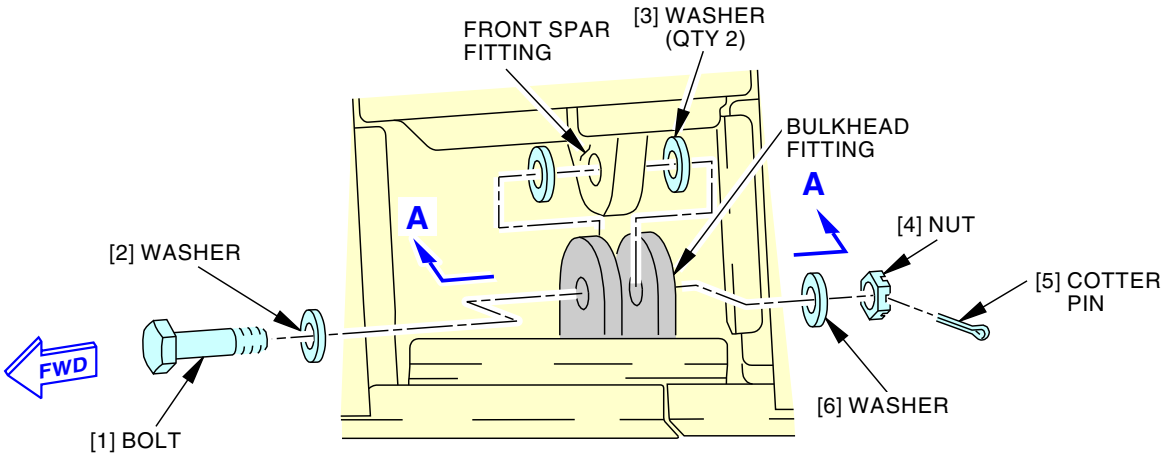


FRONT SPAR INSTALLATION
(ACCESS PANEL IS REMOVED)

A


2416392 S00061540552_V2

Vertical Stabilizer (Fin) Installation
Figure 402/55-30-00-990-802 (Sheet 1 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

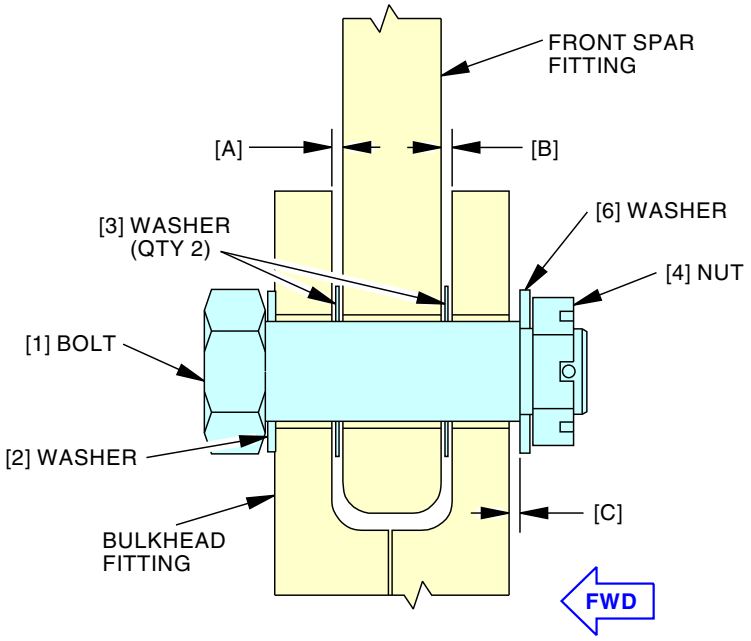

A-A

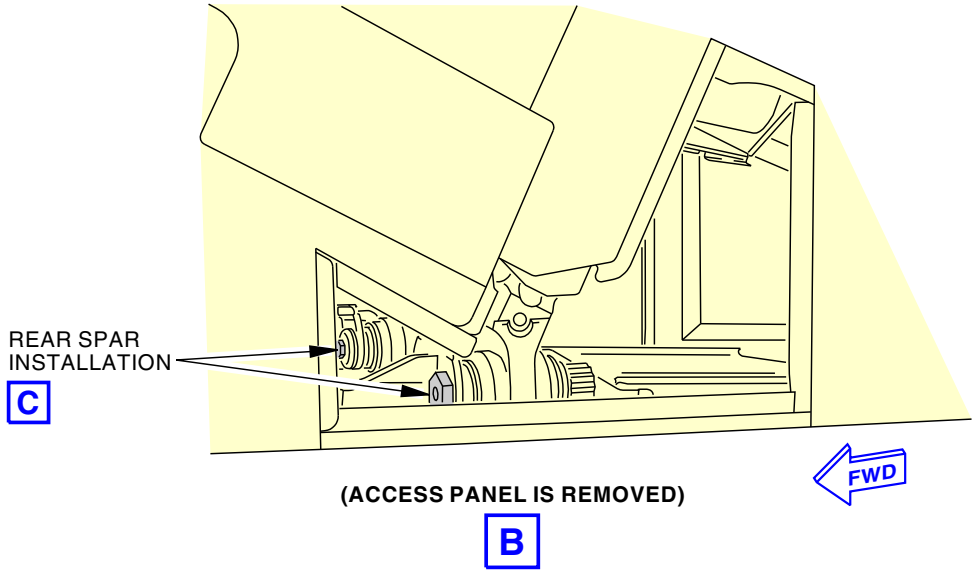


(ACCESS PANEL IS REMOVED)

B

2416393 S00061540553_V3


Vertical Stabilizer (Fin) Installation
Figure 402/55-30-00-990-802 (Sheet 2 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

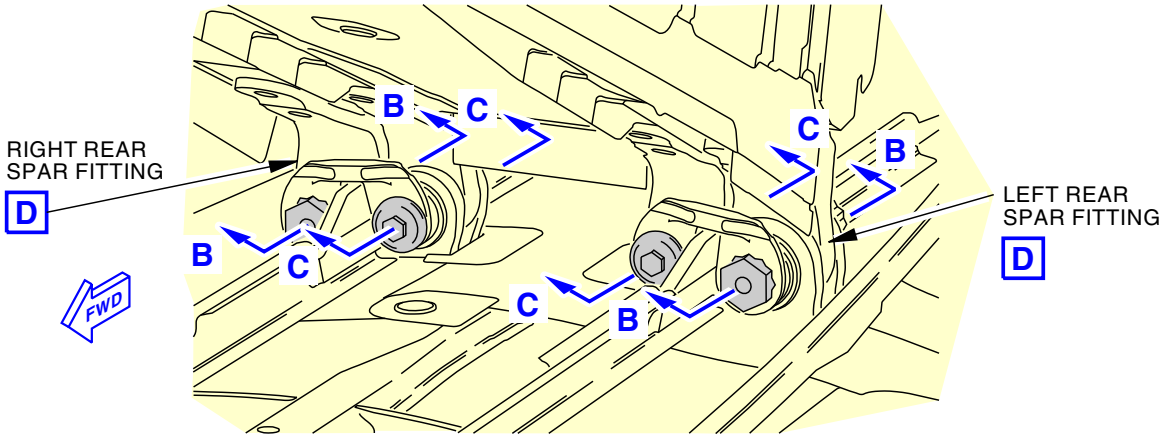

REAR SPAR INSTALLATION

C

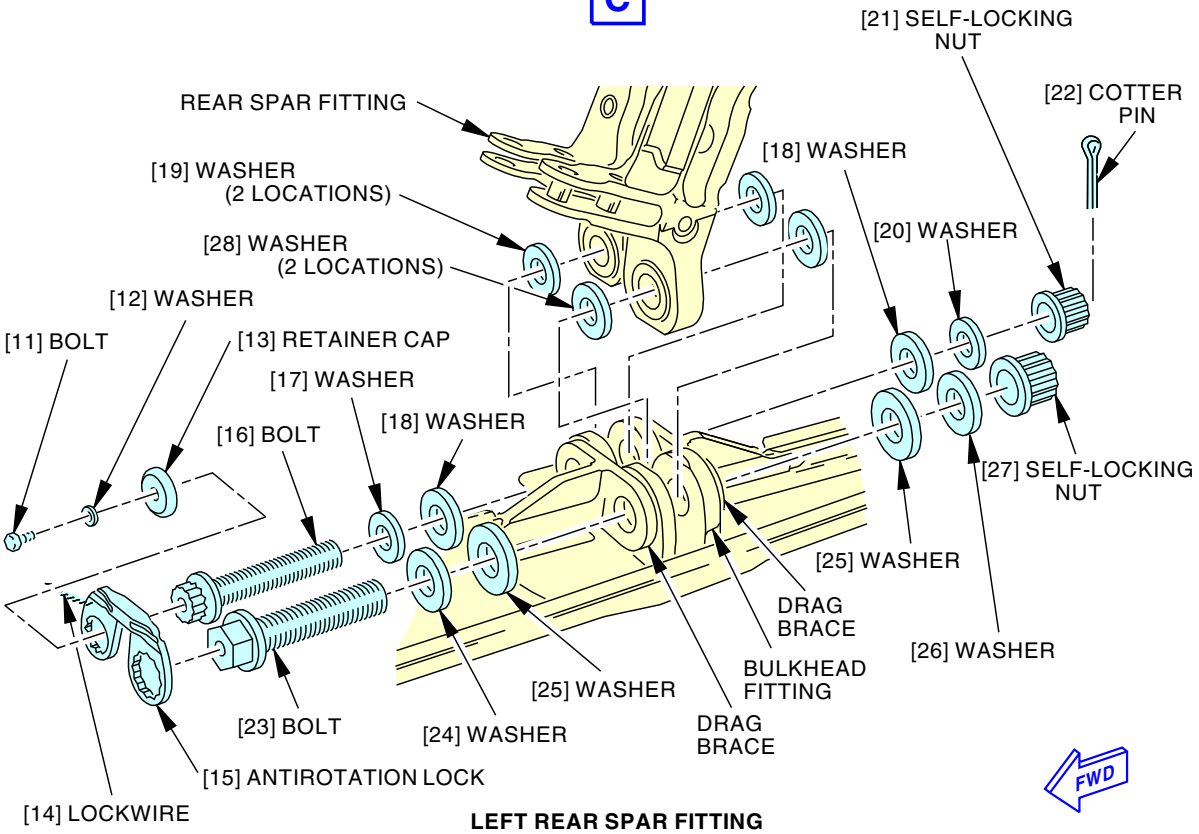


LEFT REAR SPAR FITTING
(RIGHT REAR SPAR FITTING IS OPPOSITE)

D


2416394 S00061540554_V1

Vertical Stabilizer (Fin) Installation
Figure 402/55-30-00-990-802 (Sheet 3 of 4)


ECCN 9E991 BOEING PROPRIETARY - See title page for details

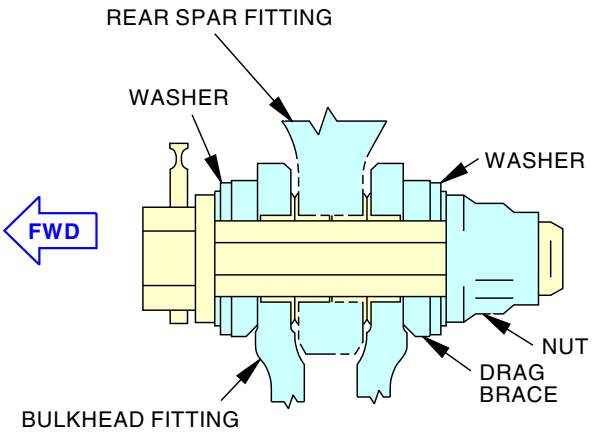


OUTBOARD REAR SPAR FITTING
B-B 1

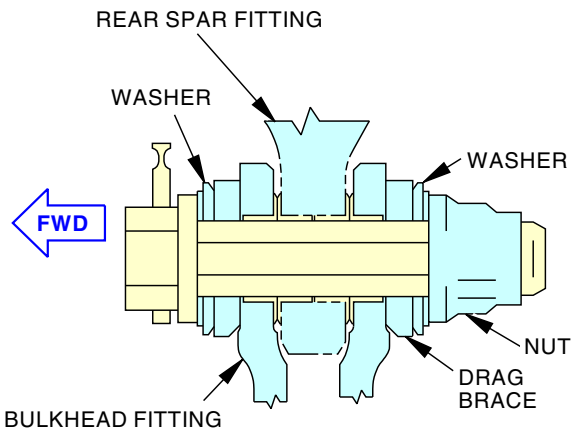

OUTBOARD REAR SPAR FITTING
B-B 3

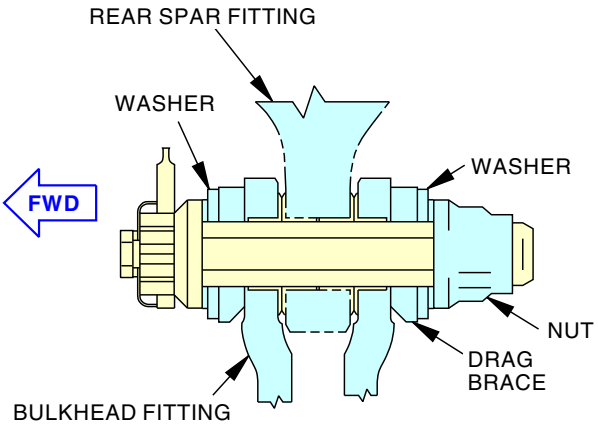

INBOARD REAR SPAR FITTING
C-C 2

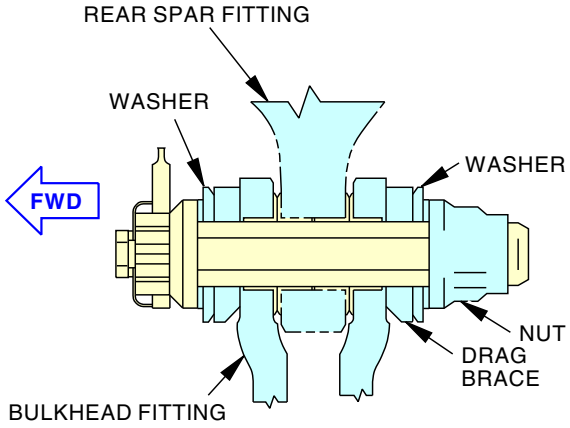

INBOARD REAR SPAR FITTING
C-C 4

1 FOR P/N 170A1614-1 D-SHAPED WASHERS
2 FOR P/N 170A1614-2 D-SHAPED WASHERS
3 FOR P/N 170A1614-9 CIRCULAR WASHERS
4 FOR P/N 170A1614-8 CIRCULAR WASHERS


NOTE:

IF THE P/N 170A1614-1/-2 WASHERS ARE USED, CAUTION MUST BE TAKEN TO ENSURE THE WASHER IS POSITIONED PROPERLY WITH THE FLAT SIDE OF THE WASHER FACING THE RADIUS OF THE DRAG BRACE FITTINGS AND THAT WASHERS DO NOT ROTATE WHEN APPLYING TORQUE.

2416395 S00061540555_V1

Vertical Stabilizer (Fin) Installation
Figure 402/55-30-00-990-802 (Sheet 4 of 4)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

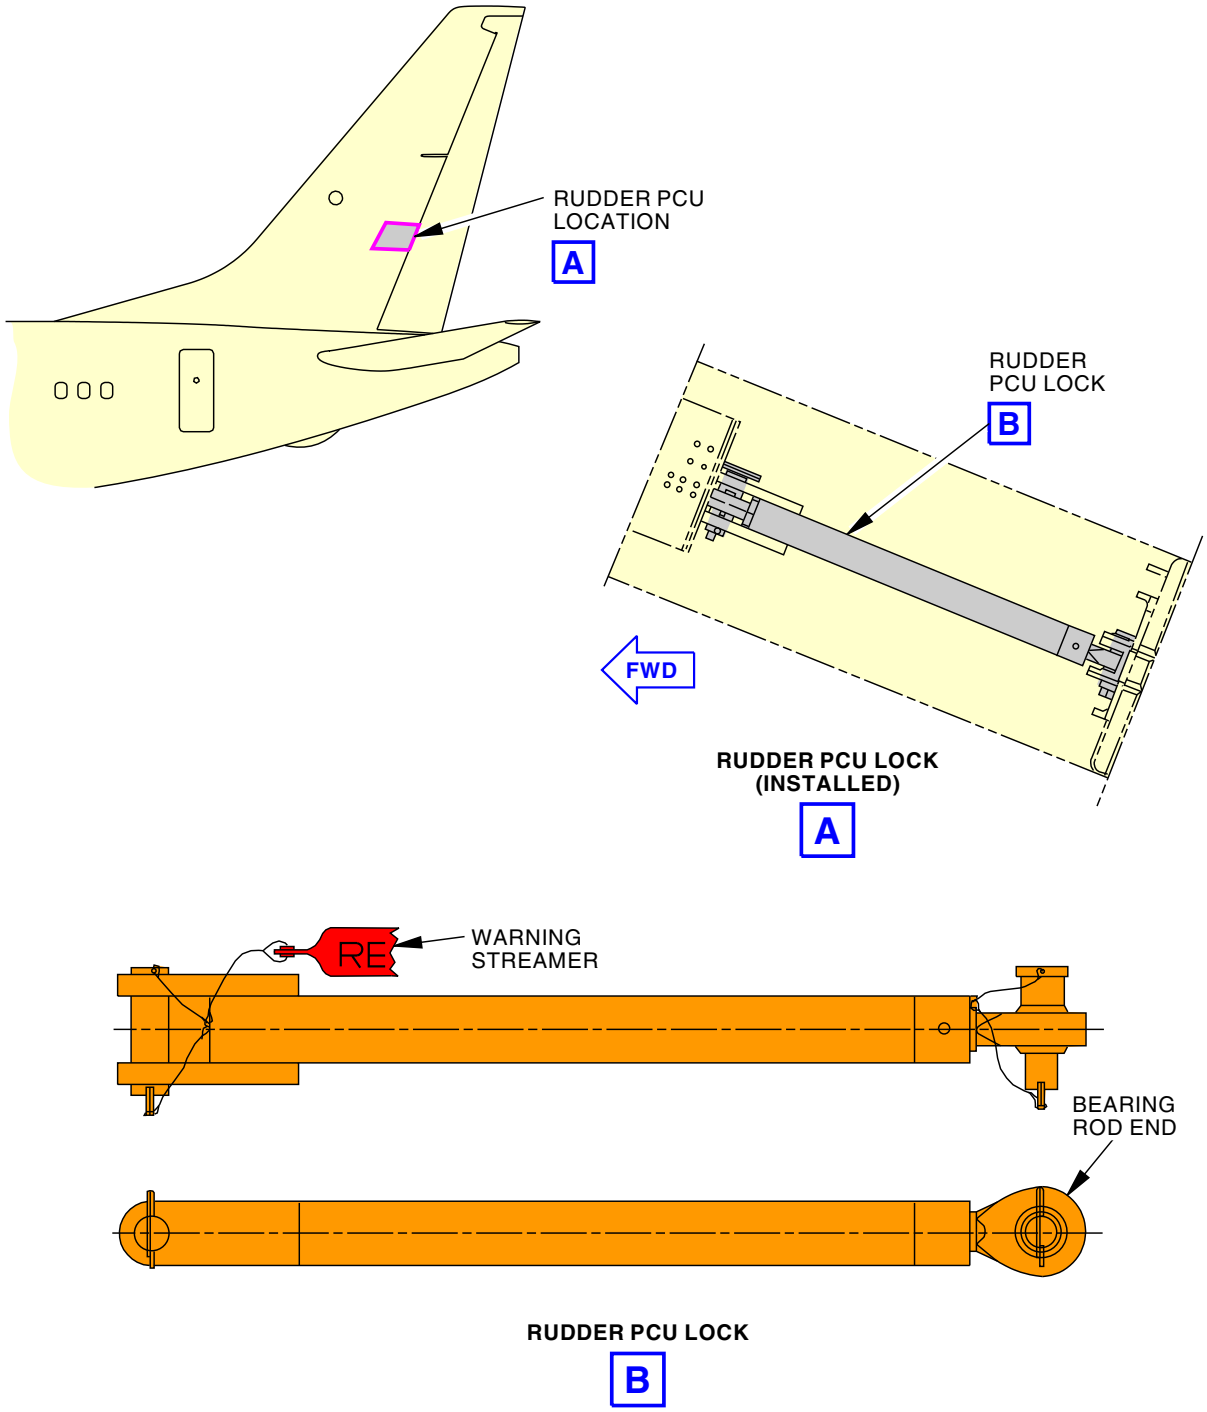

2416396 S00061540556_V2

LOCK-RUDDER PCU
Figure 403/55-30-00-990-803

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-30-00-400-801

3. Vertical Stabilizer (Fin) - Installation

(Figure 401, Figure 402, and Figure 403)

A. General

(1) This task gives the instructions to install the vertical stabilizer (fin).

B. References

Reference	Title
06-42-00-800-801	Finding an Access Door or Panel in the Empennage (P/B 201)
23-11-00-730-801	HF Communication System - System Test (P/B 501)
27-21-00-800-801	Rudder Hydraulic System A, B, or Standby Pressurization (P/B 201)
27-21-00-800-802	Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation (P/B 201)
27-21-00-820-803	Rudder Control Cables RA and RB Adjustment (P/B 501)
27-21-91-400-801	Main Rudder Power Control Unit Installation (P/B 401)
27-31-17-790-801	Elevator Pitot System Leak - Test (P/B 201)
27-31-37-400-801	Elevator Feel Computer Installation (P/B 401)
34-51-00-730-801	VOR System - System Test (P/B 501)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1727	Lock - Ground, Rudder, PCU Removed Part #: C27057-1 Supplier: 81205
SPL-2031	Alignment Tool - Vertical Fin Installation Part #: C55009-1 Supplier: 81205
SPL-2032	Sling Equipment - Vertical Fin Part #: C55010-33 Supplier: 81205 Opt Part #: C55010-1 Supplier: 81205
SPL-24233	Thread Protector - Attach Bolt, Vertical Stabilizer Part #: C55017-1 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II
B00083	Solvent - VM&P Naphthas	TT-N-95 Type II, ASTM D-3735 Type III
D00633	Grease - Aircraft General Purpose	BMS3-33
D50004	Compound - Antiseize	BMS3-28

ECCN 9E991 BOEING PROPRIETARY - See title page for details

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
29	Vertical fin	55-30-00-01-010	PTF ALL

F. Location Zones

Zone	Area
300	Empennage

G. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

H. Prepare for the Installation

SUBTASK 55-30-00-860-003

WARNING RELEASE THE PRESSURE IN THE RUDDER HYDRAULIC SYSTEM. THE RUDDER CAN MOVE IF YOU PRESSURIZE THE SYSTEM. IF THE RUDDER MOVES, THE RUDDER CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

(1) Do this task: Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation, TASK 27-21-00-800-802.

SUBTASK 55-30-00-010-001

(2) Open these access panels:

(Figure 402)

Number	Name/Location
311BL	Stabilizer Trim Access Door
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

SUBTASK 55-30-00-160-001

(3) Clean the bolts and bolt holes that attach the vertical fin [29] with solvent, B00083.

SUBTASK 55-30-00-480-003

(4) Make sure that the lock, SPL-1727, with the warning streamer is installed.

SUBTASK 55-30-00-020-006

(5) Remove the three lower screws on the panel forward of the rudder.

NOTE: This will make installation easier without interference with the structure.

(a) Pull the lower panel away from the vertical fin [29].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

I. Vertical Stabilizer (Fin) Installation

WARNING DO NOT REMOVE OR INSTALL THE VERTICAL FIN IN WINDS MORE THAN 15 KNOTS. IF YOU DO NOT OBEY, INJURY TO PERSONNEL AND DAMAGE TO THE AIRPLANE CAN OCCUR.

SUBTASK 55-30-00-420-001

NOTE: Do an inspection of the area in the vicinity of the vertical stabilizer identification plate for any stenciled note or placard which restricts the vertical stabilizer to an individual airplane due to a matched set approval.

(1) Install the vertical fin [29] (Figure 401).

(a) Lift the vertical fin [29] into its position with the sling equipment, SPL-2032.

NOTE: Use the tether lines to control the position of the vertical fin while moving it.

1) Turn the vertical fin [29] from a horizontal position to a vertical position by lifting the crane hook #1.

(b) Use the alignment pin alignment tool, SPL-2031, to align the holes in the attachment fittings.

(c) Install the fasteners that attach the left and right sides of the vertical fin [29] to the rear spar.

1) Apply anti-seize compound, D50004, to the threads of the bolt [16], bolt [23], self-locking nut [21], and self-locking nut [27].

2) Apply grease, D00633, on the shank of the bolt [16] and bolt [23].

3) Loosely install the bolt [16], bolt [23], washer [17], washer [18], washer [19], washer [24], washer [25], and washer [28].

NOTE: There may be one more washer [20] or washer [26] for grip length adjustment.

(d) Apply a layer of grease, D00633, on the shank of the bolts [1] that attach the vertical fin [29] at the front spar.

(e) Apply anti-seize compound, D50004, to the bolt threads and nut threads.

(f) Loosely install the two bolts [1], washers [2], and washers [3] that attach the vertical fin [29] to the fuselage at the front spar fittings.

1) If necessary, use a thread protector, SPL-24233, to align holes and install bolts [1].

NOTE: The use of thread protectors, SPL-24233, are optional.

(g) Measure the clearance between the rear spar fitting and drag brace:

1) If the clearance on one of the sides of the rear spar fitting is more than 0.007 in. (0.178 mm), do these steps:

a) Select the necessary washer [19] or washer [28] to make sure that the clearance is equal to or less than 0.007 in. (0.178 mm).

NOTE: Only one non-laminated washer is permitted on each side of the rear spar fitting.

b) Remove one bolt [16] or bolt [23] at a time to install the washers [19] or washers [28].

c) Apply anti-seize compound, D50004, to the washers [19] or washers [28].

2) Apply sealant, A00247, between the washers [18] and drag brace.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Apply sealant, A00247, between the washers [25] and drag brace.

SUBTASK 55-30-00-420-002

(2) Tighten the fasteners that attach the vertical fin [29].

(a) Install the washer [18], washer [19], washer [20], washer [25], washer [26], self-locking nut [21], and self-locking nut [27].

NOTE: There may be one more washer [20] or washer [26] for grip length adjustment.

(b) Install the antirotation lock [15] on the heads of the bolt [16] and bolt [23].

(c) Tighten the nuts on the rear spar fasteners:

1) On the inboard fitting, tighten the self-locking nut [21] to 6500 in-lb (734.4 N·m) - 7500 in-lb (847.4 N·m).

2) On the outboard fitting, tighten the self-locking nut [27] to 7500 in-lb (847.4 N·m) - 8500 in-lb (960.4 N·m).

(d) Install the cotter pin [22] in the bolt [16] attach fitting.

(e) Install the two washers [6] and nuts [4] that attach the vertical fin [29] to the fuselage at the front spar fittings.

1) Tighten the nuts [4] to 50 in-lb (5.6 N·m) - 1500 in-lb (169.5 N·m).

a) Make sure that the gaps are as shown on Table 401.

Table 401/55-30-00-993-801 Vertical Stabilizer (Fin) Installation Clearances

EDGE ZONE	SECTION	CLEARANCE
[A]	A-A	0.050 in. (1.27 mm) minimum
[B]	A-A	0.050 in. (1.27 mm) minimum
[C]	A-A	0.015 in. (0.38 mm) minimum

NOTE: Align the nut with the cotter pin in the bolt.

2) Install the cotter pins [5].

SUBTASK 55-30-00-420-003

(3) Install the retainer cap [13], washer [12], and bolt [11] that attach the antirotation lock [15] to the bolt [16]:

(a) Apply compound, D50004, to the threads of the bolt [11] and threads in the head of bolt [16].

(b) Tighten the bolt [11] to 660 in-lb (75 N·m) - 980 in-lb (111 N·m).

(c) Install the lockwire between the bolt [11] and antirotation lock [15].

SUBTASK 55-30-00-420-004

(4) Install the three screws on the lower panel forward of the rudder.

SUBTASK 55-30-00-080-001

(5) Remove the sling and lift fittings.

SUBTASK 55-30-00-420-009

(6) Install the bolts on the vertical fin [29] skin at the three applicable lift fitting locations.

SUBTASK 55-30-00-420-005

(7) Attach the rudder flight control cables.

(a) Connect the rudder control cables at the turnbuckles in the stabilizer jackscrew compartment.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Remove the rig pin from the centering unit output crank.

SUBTASK 55-30-00-410-002

(8) Connect the electrical cables.

(a) Connect the VOR and HF cables, when it is necessary, in the jackscrew compartment above and aft of the pressure bulkhead.

SUBTASK 55-30-00-420-006

(9) Connect the pitot lines to the elevator feel computer assembly (TASK 27-31-37-400-801).

SUBTASK 55-30-00-420-007

(10) Connect the rudder control cables at the rudder control power unit.

SUBTASK 55-30-00-420-008

(11) Connect the hydraulic lines.

SUBTASK 55-30-00-080-002

(12) Do this task: Main Rudder Power Control Unit Installation, TASK 27-21-91-400-801 (Figure 403).

SUBTASK 55-30-00-080-003

(13) Remove the lock, SPL-1727, and warning streamer.

SUBTASK 55-30-00-860-004

(14) Examine the rudder hydraulic system for leaks.

(a) Do this task: Rudder Hydraulic System A, B, or Standby Pressurization, TASK 27-21-00-800-801.

SUBTASK 55-30-00-860-005

(15) Do this task: Pressure from the Rudder Hydraulic Systems A, B, and Standby - Deactivation, TASK 27-21-00-800-802.

SUBTASK 55-30-00-820-001

(16) Do this task: Rudder Control Cables RA and RB Adjustment, TASK 27-21-00-820-803.

SUBTASK 55-30-00-730-001

(17) Do this task: VOR System - System Test, TASK 34-51-00-730-801.

SUBTASK 55-30-00-730-002

(18) Do this task: HF Communication System - System Test, TASK 23-11-00-730-801.

SUBTASK 55-30-00-730-003

(19) Do this task: Elevator Pitot System Leak - Test, TASK 27-31-17-790-801.

J. Put the Airplane Back to Its Usual Condition

SUBTASK 55-30-00-410-003

(1) Close these access panels:

(Finding an Access Door or Panel in the Empennage, TASK 06-42-00-800-801)

Number	Name/Location
311BL	Stabilizer Trim Access Door
323AL	Vertical Fin, Front Spar Access Door
323AR	Vertical Fin, Front Spar Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-30-00-390-002

(2) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER (FIN) - INSPECTION/CHECK

1. General

A. There is one task in this procedure:

(1) Inspection and Check of the Vertical Stabilizer (Fin).

TASK 55-30-00-200-801

2. Vertical Stabilizer (Fin) Inspection

(Figure 601)

A. References

Reference	Title
55-30-00-000-801	Vertical Stabilizer (Fin) Removal (P/B 401)
55-30-00-400-801	Vertical Stabilizer (Fin) - Installation (P/B 401)

B. Location Zones

Zone	Area
300	Empennage

C. Procedure

SUBTASK 55-30-00-010-002

(1) Do this task: Vertical Stabilizer (Fin) Removal, TASK 55-30-00-000-801.

NOTE: If you do an inspection on the airplane, remove one bolt at a time. The fin will then stay in its position.

SUBTASK 55-30-00-220-001

(2) Examine the bolts and the bushings which attach the fin to the fuselage for worn areas.

(a) Measure the diameters of the bolts and the bushings.

(b) Compare the measured dimensions with the permitted dimensions shown in the table below.

Wear Limits

INDEX NO.	PART NAME	DIM.	DESIGN LIMITS		WEAR LIMITS		REPLACE WORN PART	REPAIR WORN PART
			DIAMETER					
			MINIMUM INCHES / (mm)	MAXIMUM INCHES / (mm)	PERMITTED WEAR DIMENSION INCHES / (mm)	MAXIMUM DIAMETER CLEARANCE INCHES / (mm)		
1	BUSHING (FRONT SPAR)	ID	0.8780 (22.301)	0.8790 (22.327)	0.8835 (22.441)	0.0100 (0.254)	X	
	BOLT (FRONT SPAR)	OD	0.8730 (22.174)	0.8740 (22.200)	0.8685 (22.060)		X	X
2 *[1]	BUSHING (REAR SPAR)	ID	1.7530 (44.526)	1.7540 (44.552)	1.7600 (44.704)	0.0100 (0.254)	X	
	BOLT (REAR SPAR)	OD	1.7480 (44.399)	1.7490 (44.425)	1.7420 (44.247)		X	X

ECCN 9E991 BOEING PROPRIETARY - See title page for details

Wear Limits (Continued)

INDEX NO.	PART NAME	DIM.	DESIGN LIMITS		WEAR LIMITS		REPLACE WORN PART	REPAIR WORN PART
			DIAMETER		PERMITTED WEAR DIMENSION INCHES / (mm)	MAXIMUM DIAMETER CLEARANCE INCHES / (mm)		
			MINIMUM INCHES / (mm)	MAXIMUM INCHES / (mm)				
3 *[2]	BUSHING (REAR SPAR)	ID	1.5030 (38.176)	1.5040 (38.202)	1.5095 (38.341)	0.0100 (0.254)	X	
	BOLT (REAR SPAR)	OD	1.4980 (38.049)	1.4990 (38.075)	1.4925 (37.910)		X	X

*[1] THIS BUSHING/BOLT SET IS IN THE OUTBOARD REAR SPAR FITTINGS.

*[2] THIS BUSHING/BOLT SET IS IN THE INBOARD REAR SPAR FITTINGS.


(c) Repair or replace the parts which are not in the tolerance.

SUBTASK 55-30-00-410-004

(3) Do this task: Vertical Stabilizer (Fin) - Installation, TASK 55-30-00-400-801.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

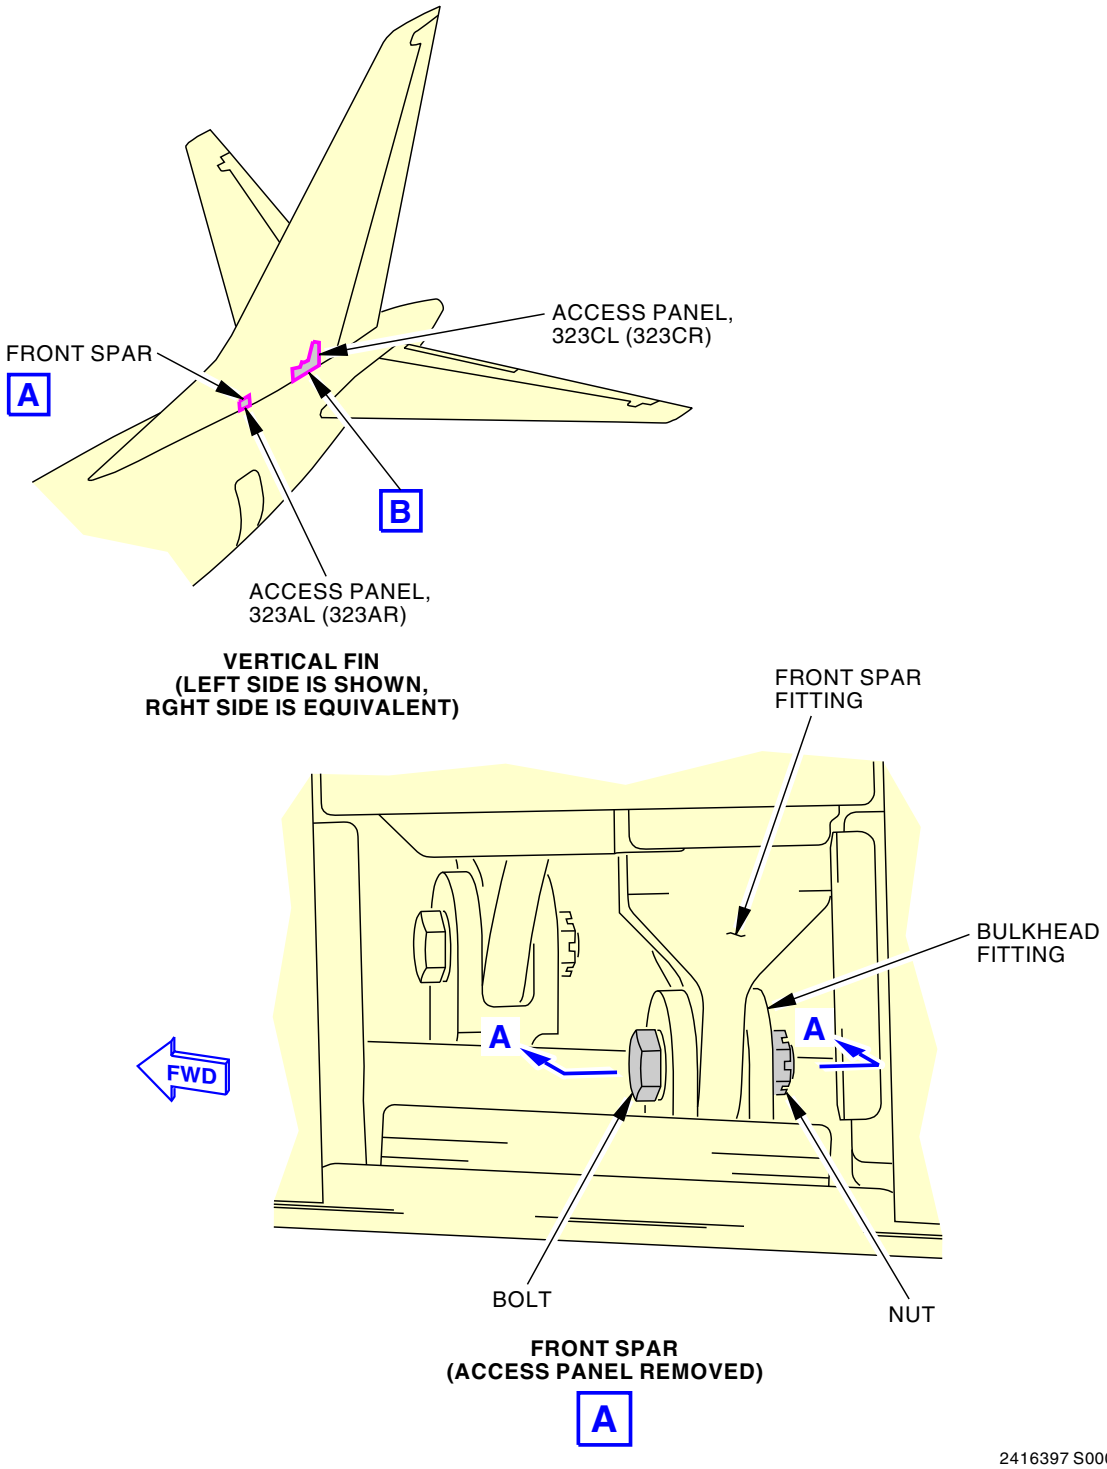


Vertical Stabilizer (Fin) Inspection
Figure 601/55-30-00-990-804 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

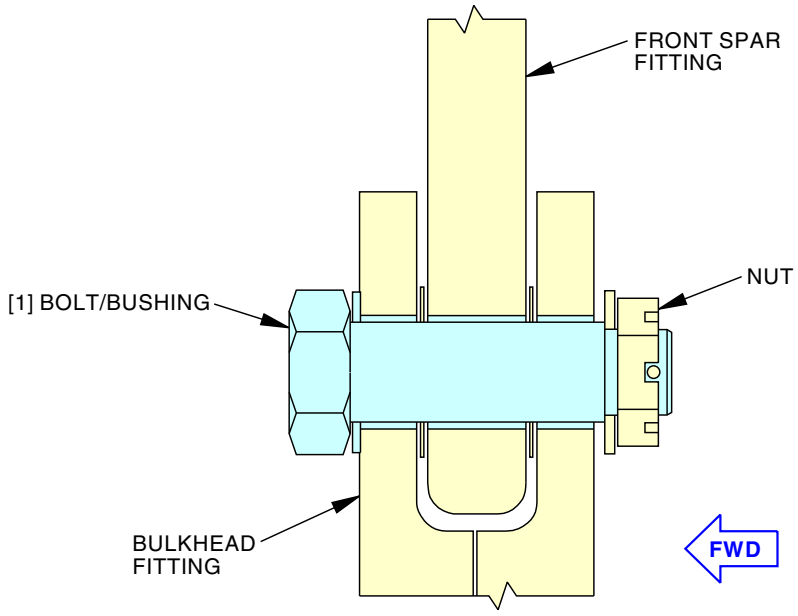

FRONT SPAR FITTING

A-A

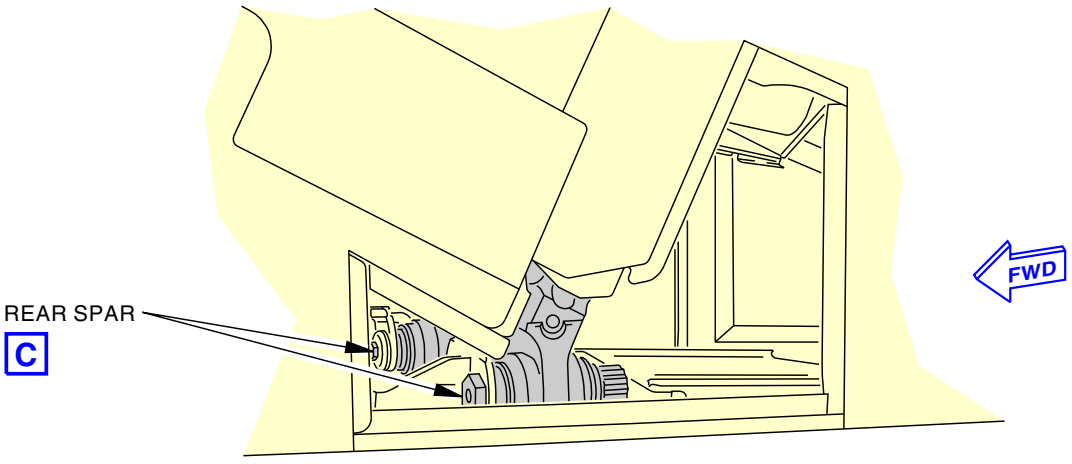


(ACCESS PANEL REMOVED)

B

2416398 S00061540560_V1


Vertical Stabilizer (Fin) Inspection
Figure 601/55-30-00-990-804 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

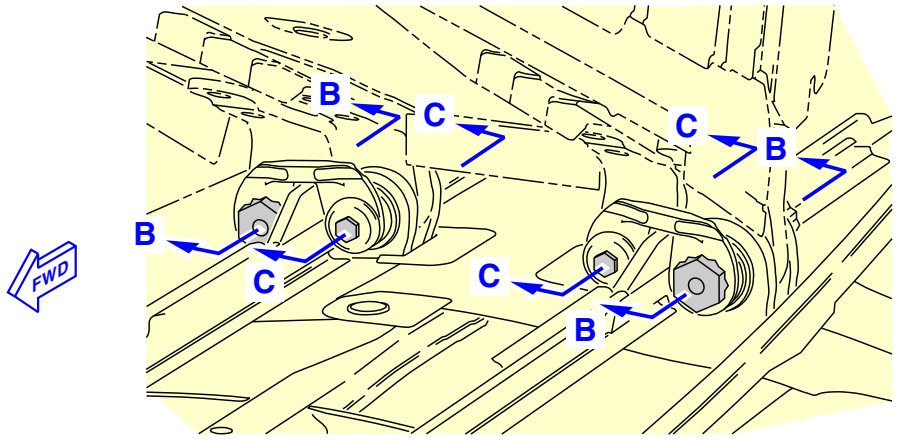


REAR SPAR

C

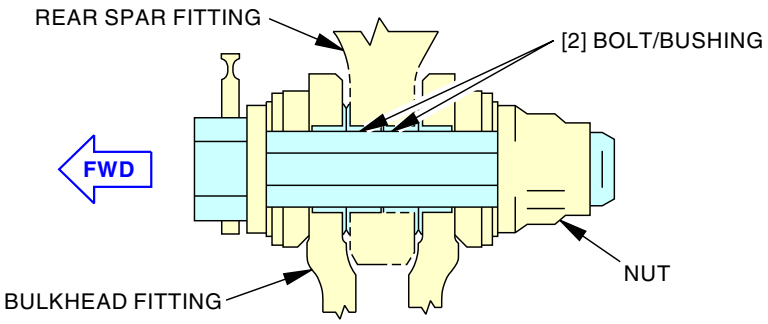

OUTBOARD REAR SPAR FITTING

B-B

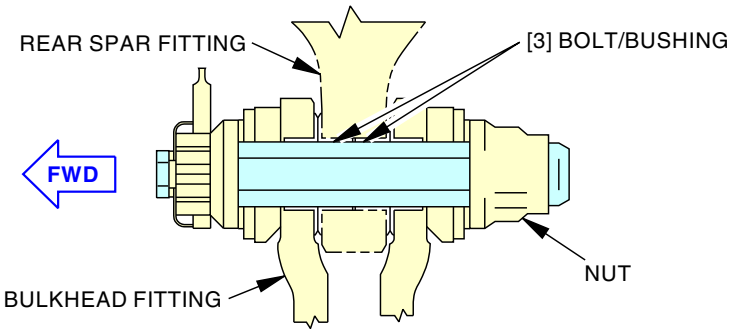

INBOARD REAR SPAR FITTING

C-C

2416399 S00061540561_V1

Vertical Stabilizer (Fin) Inspection
Figure 601/55-30-00-990-804 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL FIN LUG SEALING - INSPECTION/CHECK

1. General

A. There is one task in this procedure:

(1) An inspection of the vertical fin lug sealing

TASK 55-30-01-200-801

2. Vertical Fin Sealing Inspection

(Figure 601)

A. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

B. Location Zones

Zone	Area
300	Empennage

C. Access Panels

Number	Name/Location
311BL	Stabilizer Trim Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

D. Procedure

SUBTASK 55-30-01-010-001

(1) Get access to the vertical fin lugs.

(a) Open these access panels:

Number	Name/Location
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

(2) Examine all areas for water ingress, corrosion damage and missing, insufficient, or cracked sealant. (Figure 601)

NOTE: If there is no missing sealant, no more steps are necessary.

SUBTASK 55-30-01-010-002

(3) Get access to the stabilizer trim.

(a) Open this access panel:

Number	Name/Location
311BL	Stabilizer Trim Access Door

1) Examine the skin edges for gaps.

a) Make sure that the gaps have been filled with sealant.

2) Examine the flight control cables, fittings, and pulleys for corrosion.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

3) Examine the horizontal stabilizer jackscrew, ball nut, and gimbal pins for corrosion.

SUBTASK 55-30-01-410-001

(4) Close these access panels:


Number	Name/Location
311BL	Stabilizer Trim Access Door
323BL	Vertical Fin, Forward Fin Access Door
323BR	Vertical Fin, Forward Fin Access Door
323CL	Vertical Fin, Rear Spar Access Door
323CR	Vertical Fin, Rear Spar Access Door

SUBTASK 55-30-01-390-001

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

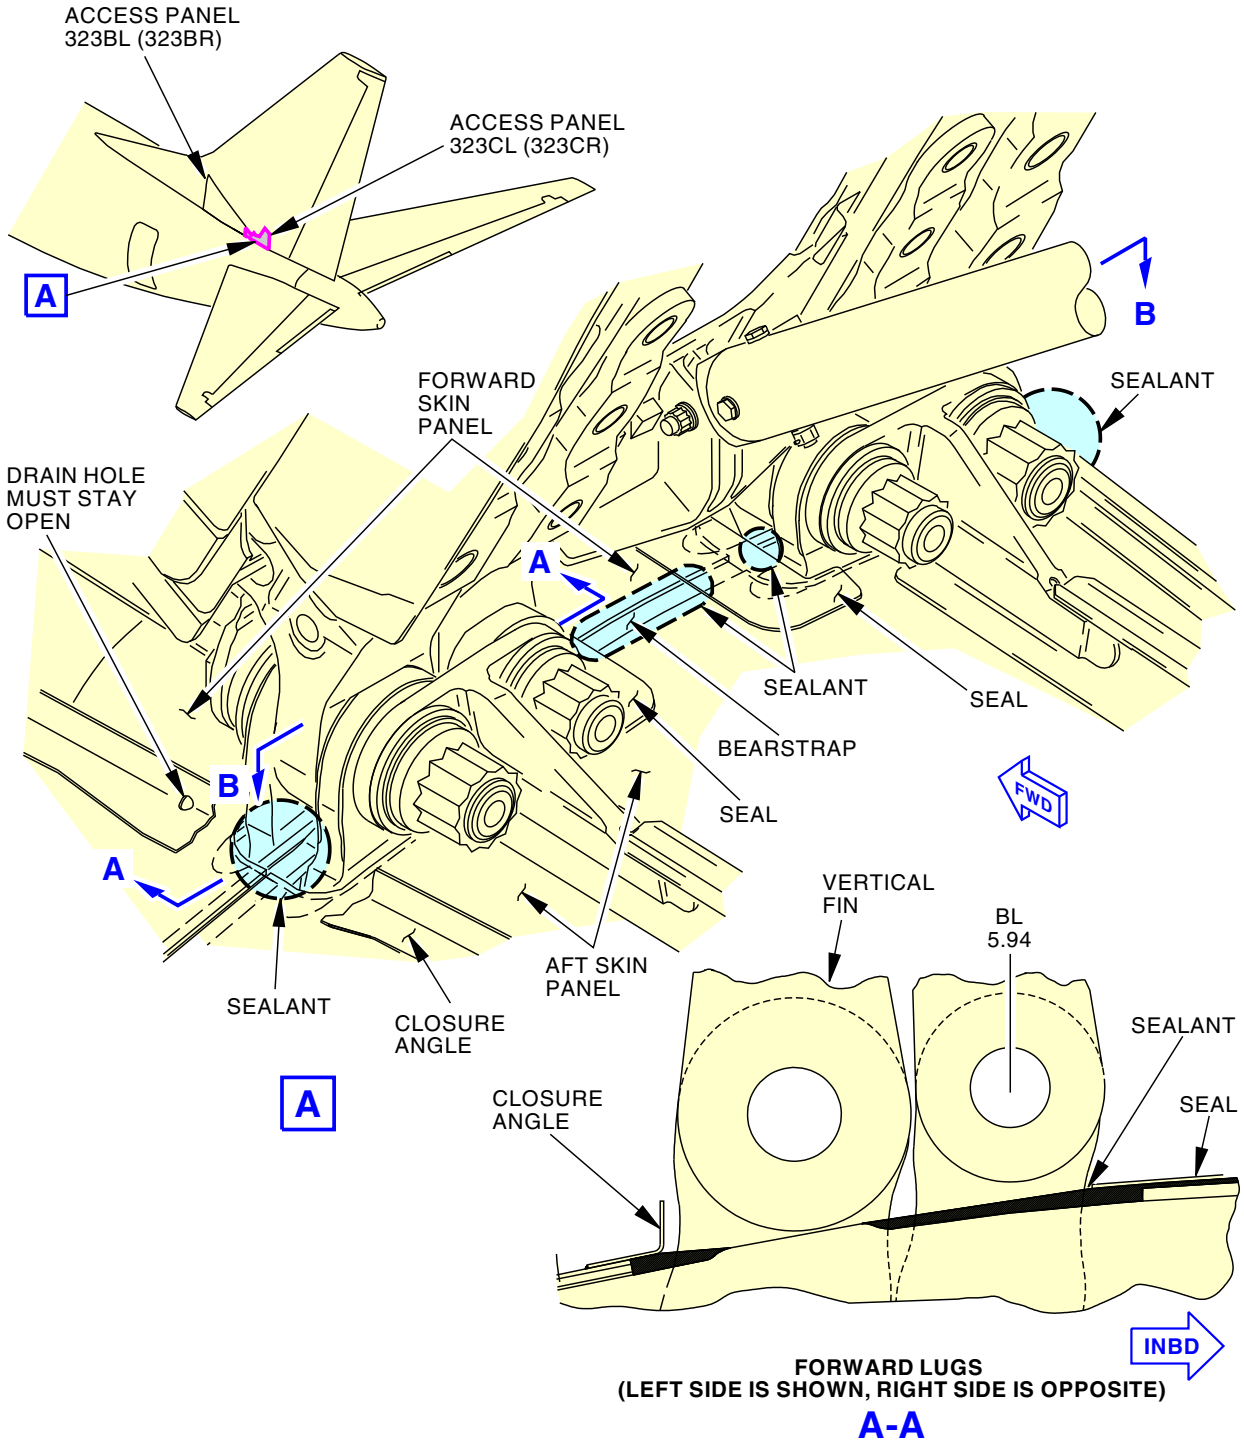

2416401 S00061540566_V1

Vertical Fin Lugs - Inspection/Check
Figure 601/55-30-01-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

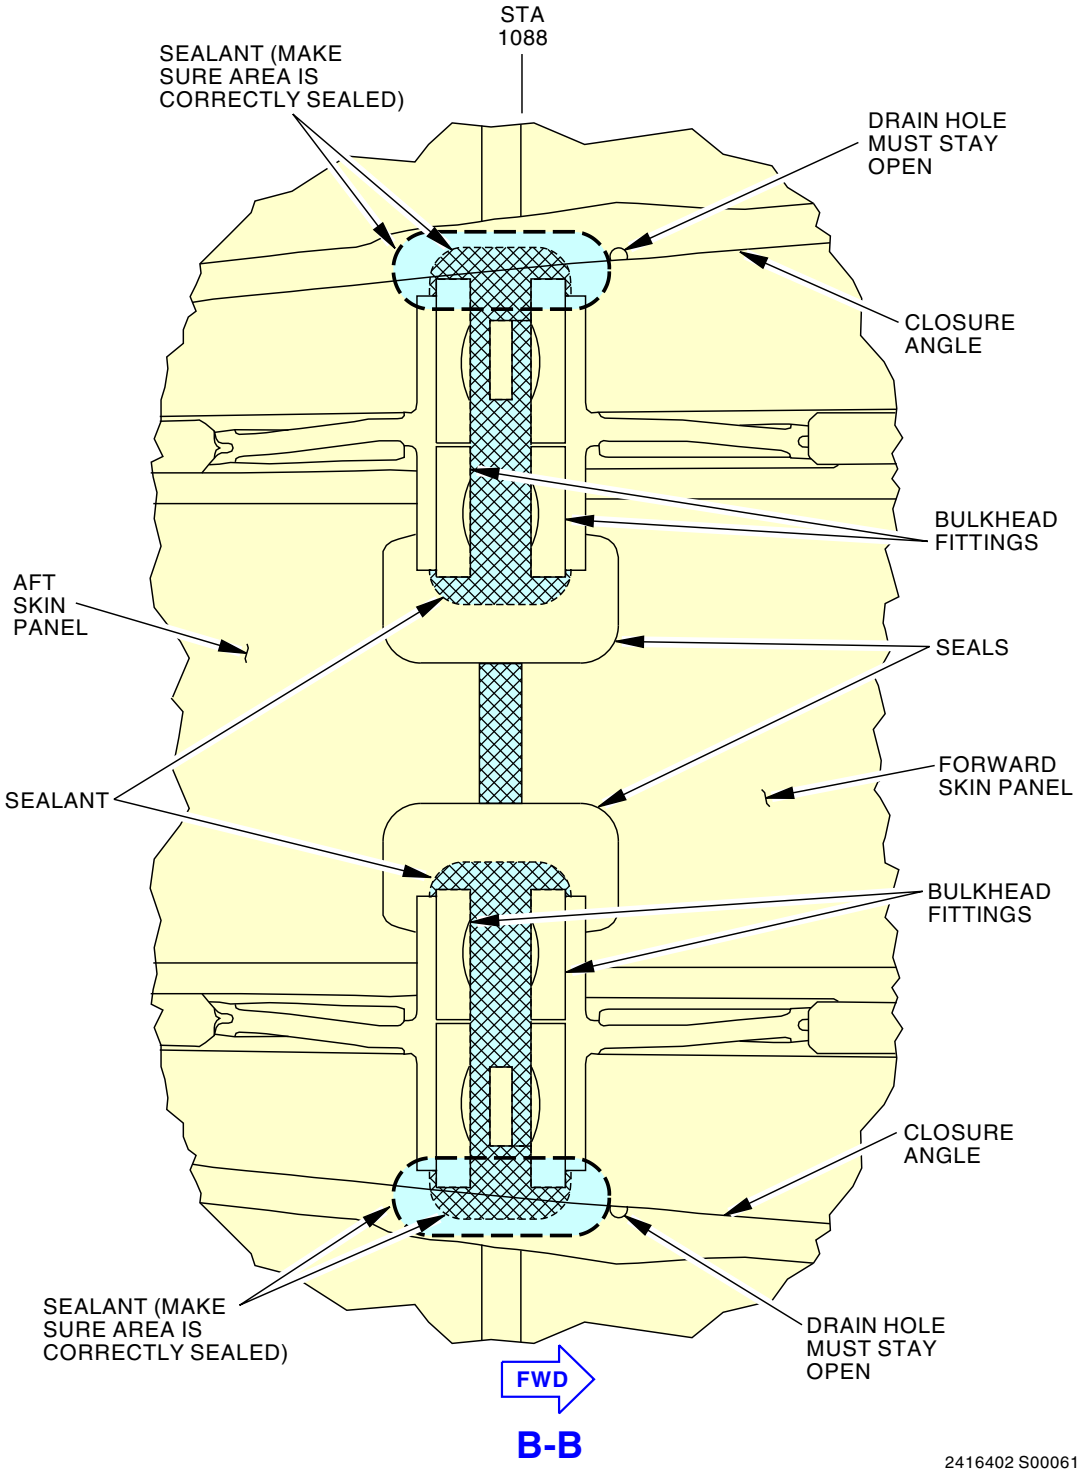

Vertical Fin Lugs - Inspection/Check
Figure 601/55-30-01-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

DORSAL FIN - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Dorsal fin removal

(2) Dorsal fin installation.

TASK 55-32-11-000-801

2. Dorsal Fin Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the dorsal fin.

B. References

Reference	Title
21-23-01-000-801	Overhead Distribution Duct Removal (P/B 201)
25-21-71-000-807	Aft Entry Ceiling Panel Removal (P/B 401)
25-80-00-000-801	Insulation Blanket Removal (P/B 401)

C. Location Zones

Zone	Area
321	Vertical Fin - Dorsal Fin

D. Dorsal Fin Removal

SUBTASK 55-32-11-010-001

(1) Do this task: Aft Entry Ceiling Panel Removal, TASK 25-21-71-000-807.

SUBTASK 55-32-11-010-002

(2) Remove the entry light lens on the center part of the aft lowered ceiling panel.

(a) Open the entry light lens.

(b) Remove the screws which attach the entry light fixture.

SUBTASK 55-32-11-010-003

(3) Do this task: Overhead Distribution Duct Removal, TASK 21-23-01-000-801.

SUBTASK 55-32-11-010-004

(4) Move the insulation blankets sufficiently to get access to the bolts [5], bolts [6], bolts [7], and bolts [8] of the dorsal fin [1].

(a) When necessary, remove the insulation blankets to get access to the bolts [5], bolts [6], bolts [7], and bolts [8] (TASK 25-80-00-000-801).

SUBTASK 55-32-11-020-001

(5) Remove the dorsal fin [1].

(a) Remove the sealant from the bolts [5], bolts [6], bolts [7], and bolts [8].

CAUTION

MAKE SURE THAT YOU MONITOR WHERE YOU REMOVE EACH FASTENER AT EACH LOCATION. THERE ARE DIFFERENT SIZES FOR THE FASTENERS. IF YOU INSTALL THE FASTENERS AT THE INCORRECT LOCATIONS, DAMAGE TO THE AIRPLANE CAN OCCUR.


(b) Remove the shims [2], washers [3], washers [4], bolts [5], bolts [6], bolts [7], and bolts [8] that attach the dorsal fin [1] to the body structure.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Lift the dorsal fin [1] from the fuselage.


——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

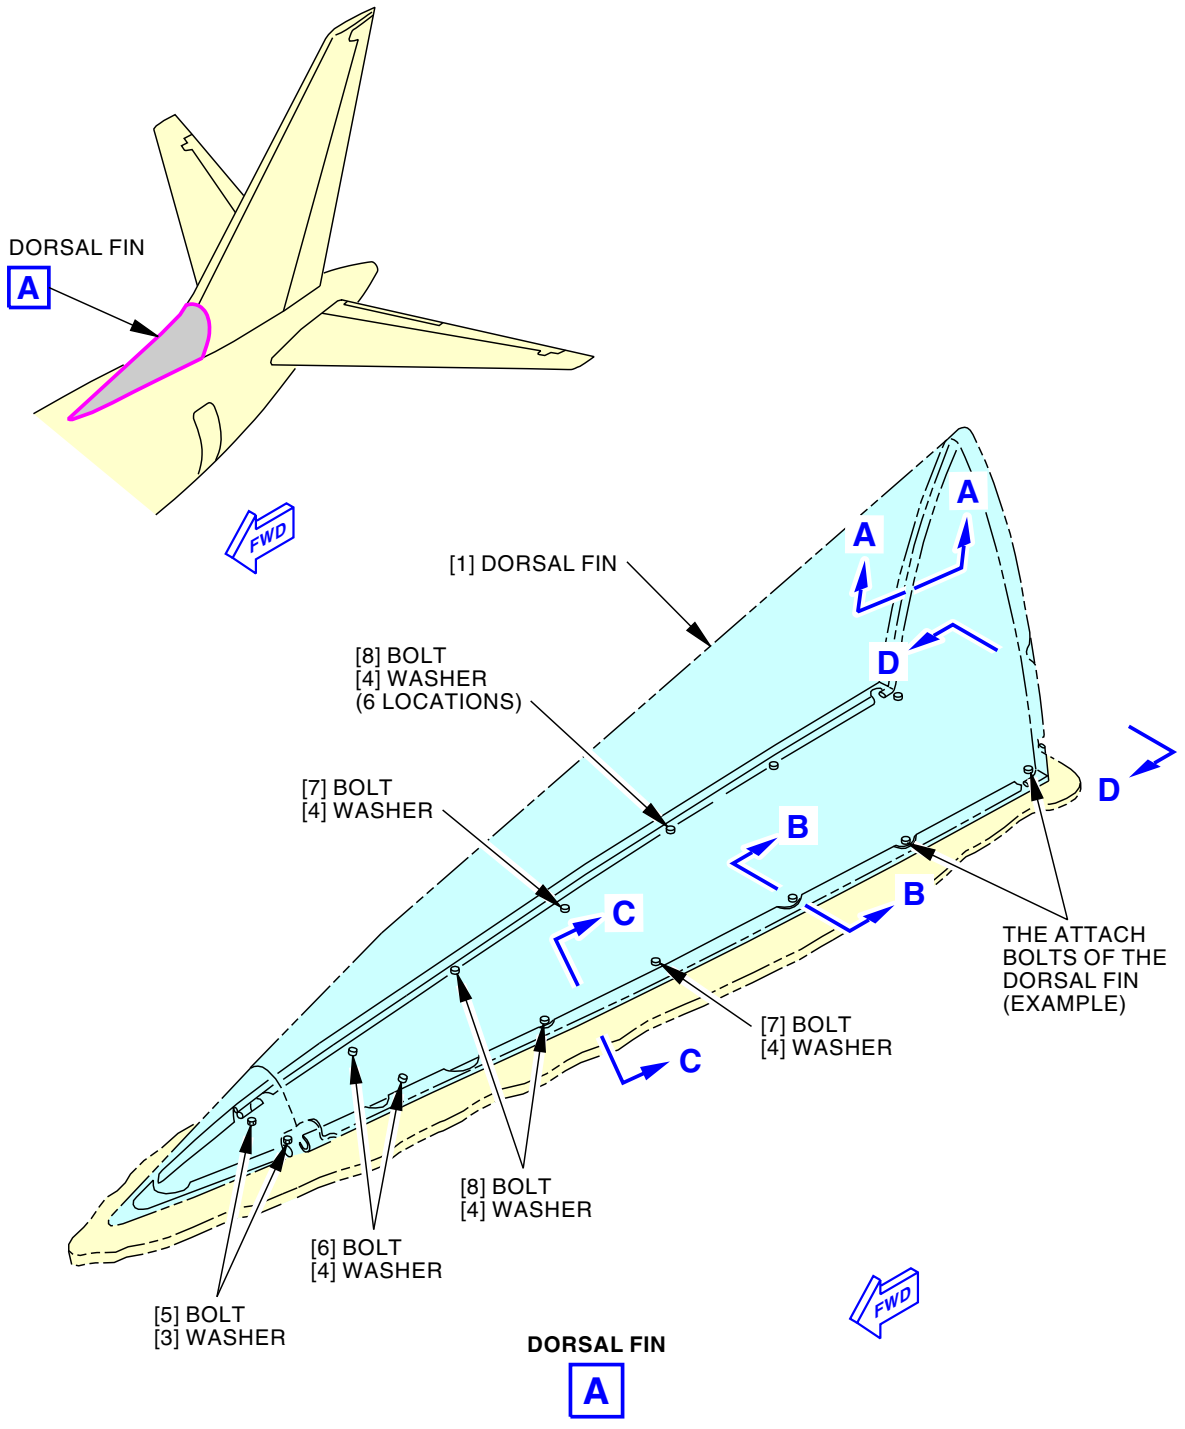


Dorsal Fin Installation
Figure 401/55-32-11-990-803 (Sheet 1 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

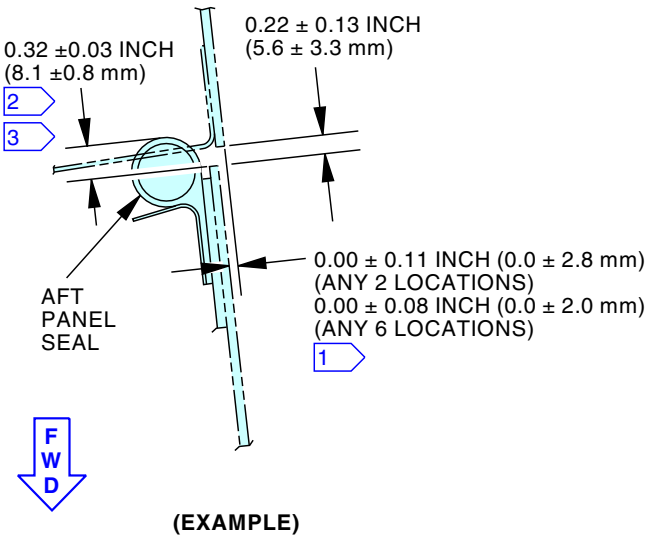


(EXAMPLE)

A-A

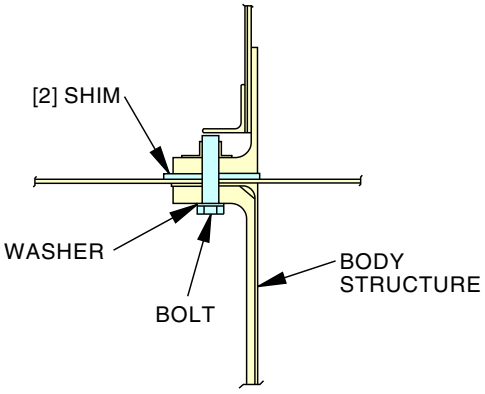

ATTACHMENT FITTING
(TYPICAL, 14 LOCATIONS)

B-B

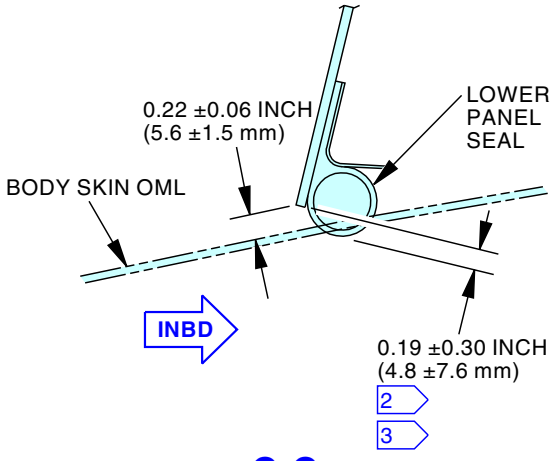

C-C

1 A POSITIVE TOLERANCE FOR THE FLUSHNESS SHOWS THE DORSAL FIN IS INBOARD OF THE VERTICAL FIN CONTOUR.


2 THIS DIMENSION IS FOR REFERENCE ONLY. NOT AN INSTALLATION REQUIREMENT.

3 APPROXIMATELY 1/3 OF THE SEAL DIAMETER SHOULD BE IN CONTACT.

2416404 S00061540574_V3

Dorsal Fin Installation
Figure 401/55-32-11-990-803 (Sheet 2 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

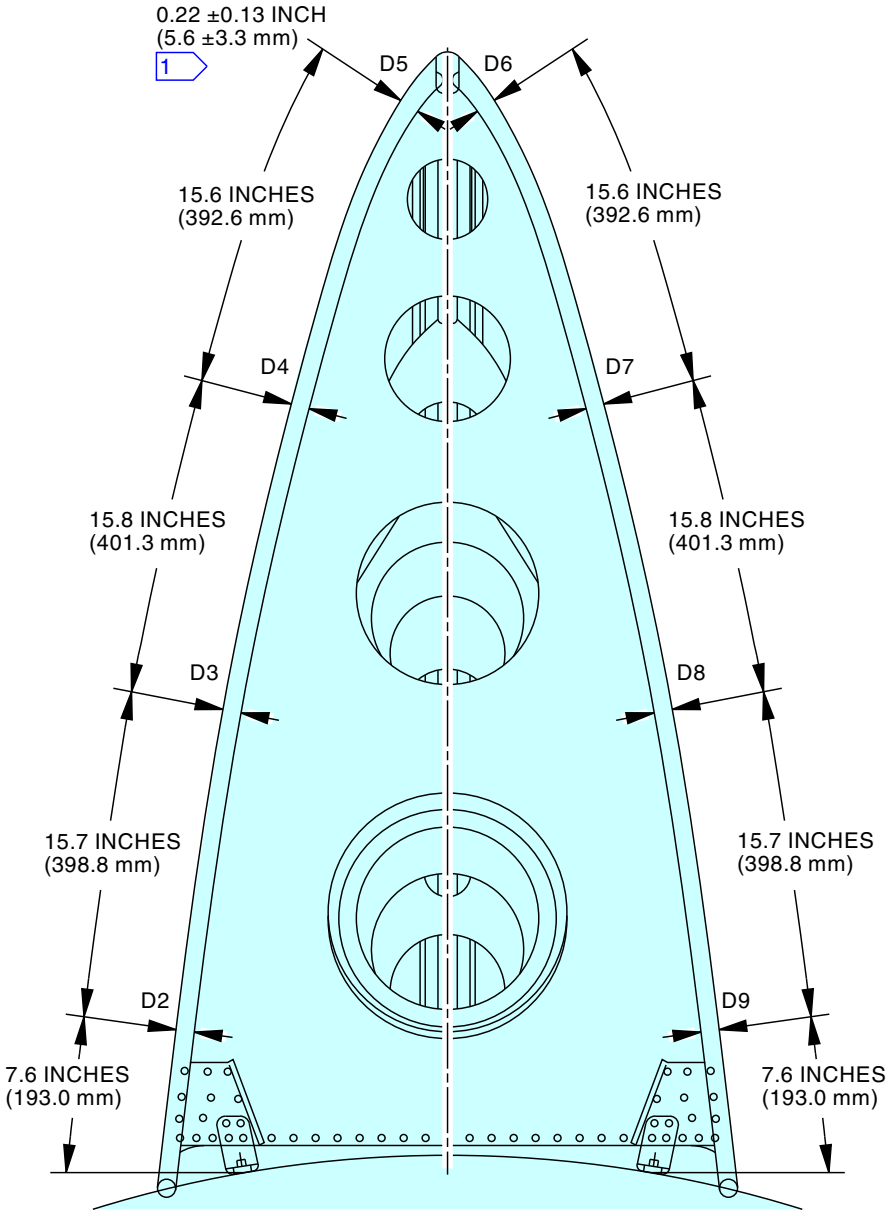

(VIEW IN THE FORWARD DIRECTION)

D-D

1 CLEARANCE VALUE IS COMMON FOR ALL D2-D9 LOCATIONS

2416405 S00061540575_V3

Dorsal Fin Installation
Figure 401/55-32-11-990-803 (Sheet 3 of 3)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-32-11-400-801

3. Dorsal Fin Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the dorsal fin.

B. References

Reference	Title
21-23-01-400-801	Overhead Distribution Duct Installation (P/B 201)
25-21-71-400-807	Aft Entry Ceiling Panel Installation (P/B 401)
25-80-00-400-801	Insulation Blanket Installation (P/B 401)
51-22-00-390-806	Fillet Seal Application (P/B 201)
SWPM 20-20-00, Section 21-A	Resistance of Faying Surface Bonds

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-614	Bonding Meters - Non-Intrinsically Safe (For use in outside Class I, Divisions I & II non-hazardous locations. For hazardous locations, use COM-1550). Part #: 247000 Supplier: 00426 Part #: 620LK Supplier: 1CRL2 Part #: BLR-0003-XX Supplier: KC432 Part #: BT51 Supplier: 00426 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659 Opt Part #: 247001 Supplier: 00426

D. Consumable Materials

Reference	Description	Specification
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Dorsal fin	55-32-11-01A-045	PTF ALL

F. Location Zones

Zone	Area
321	Vertical Fin - Dorsal Fin

G. Dorsal Fin Installation

SUBTASK 55-32-11-420-001

(1) Install the dorsal fin [1] (Figure 401).

(a) Put the dorsal fin [1] in its position on the airplane.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CAUTION MAKE SURE THAT YOU INSTALL EACH FASTENER AT THE CORRECT LOCATION. THERE ARE DIFFERENT DIMENSIONS FOR THE FASTENERS. IF YOU DO NOT INSTALL THE FASTENERS AT THE CORRECT LOCATIONS, DAMAGE TO THE AIRPLANE CAN OCCUR.

(b) Install the shims [2], washers [3], and bolts [5] that attach the dorsal fin [1] to the body structure.

1) Tighten the bolts [5] to 80 ±2 in-lb (9 ±0 N·m).

CAUTION MAKE SURE THAT YOU INSTALL EACH FASTENER AT THE CORRECT LOCATION. THERE ARE DIFFERENT DIMENSIONS FOR THE FASTENERS. IF YOU DO NOT INSTALL THE FASTENERS AT THE CORRECT LOCATIONS, DAMAGE TO THE AIRPLANE CAN OCCUR.

(c) Install the shims [2], washers [4], bolts [6], bolts [7], and bolts [8] that attach the dorsal fin [1] to the body structure.

1) Tighten the bolts [6], bolts [7], and bolts [8] to 150 +5 / -4 in-lb (17 +1 / -0 N·m).

SUBTASK 55-32-11-220-001

(2) Make sure that the clearances and flushness are in the tolerance shown in Figure 401.

(a) Make sure that the full length of the lower panel seal touches the body.

SUBTASK 55-32-11-220-004

(3) Make sure that the dorsal fin [1] is within aerodynamic smoothness limits (SRM PROCEDURE 51-10-01-0G-0).

SUBTASK 55-32-11-760-001

(4) With a non-intrinsically safe bonding meter, COM-614, make sure that the resistance between the body and the dorsal fin [1] is 0.005 ohm (5 milliohms) or less (SWPM 20-20-00, Section 21-A).

(a) Measure two locations on each side of the dorsal fin [1].

SUBTASK 55-32-11-390-001

(5) Apply sealant, A02315, to the bolts [5], bolts [6], bolts [7], and bolts [8], do this task: Fillet Seal Application, TASK 51-22-00-390-806.

SUBTASK 55-32-11-410-001

(6) If the insulation blankets were removed to get access to the bolts [5], bolts [6], bolts [7], and bolts [8], do this task: Insulation Blanket Installation, TASK 25-80-00-400-801.

SUBTASK 55-32-11-410-002

(7) Do this task: Overhead Distribution Duct Installation, TASK 21-23-01-400-801.

SUBTASK 55-32-11-410-003

(8) Install the entry light fixture.

SUBTASK 55-32-11-410-004

(9) Do this task: Aft Entry Ceiling Panel Installation, TASK 25-21-71-400-807.

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER (FIN) LEADING EDGE - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Vertical stabilizer (fin) leading edge removal

(2) Vertical stabilizer (fin) leading edge installation.

TASK 55-33-11-000-801

2. Vertical Stabilizer (Fin) Leading Edge Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the vertical stabilizer (fin) leading edge.

B. References

Reference	Title
55-33-21-000-801	Vertical Stabilizer (Fin) Tip Removal (P/B 401)

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1558	Adapter - Access Panel, Leverage Part #: 3008-550 Supplier: 55856 Part #: B20004-42 Supplier: 81205 Opt Part #: B20004-21 Supplier: 81205

D. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

E. Access Panels

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

ECCN 9E991 BOEING PROPRIETARY - See title page for details

F. Vertical Stabilizer (Fin) Leading Edge Removal

SUBTASK 55-33-11-010-001

CAUTION MAKE SURE THAT THE DRIVER BIT ALIGNS WITH THE INSTALLED FASTENERS. THIS WILL PREVENT DAMAGE TO THE FASTENER RECESSES AND THREADS.

(1) Use a leverage access panel adapter, SPL-1558, or a removal Anti Cam-out Ribbed (ACR) bit to remove the fasteners from the applicable vertical fin leading edge access panels.

NOTE: A combination removal/installation ACR bit is not recommended. The bit must have a hardness of 56-58 RC.

SUBTASK 55-33-11-640-001

CAUTION IF NECESSARY, APPLY FASTENER REMOVAL COMPOUND TO THE BIT. CLEAN THE BIT AFTER EACH USE. DO NOT APPLY FASTENER REMOVAL COMPOUND TO THE FASTENER RECESSES, HOLES, OR THREADS. THIS CAN CAUSE DAMAGE TO THE FASTENERS.

(2) Apply a fastener removal compound on the driver bit if a fastener is difficult to remove.

SUBTASK 55-33-11-010-007

WARNING KEEP PERSONS AWAY FROM THE AREA BELOW THE VERTICAL STABILIZER. INJURY TO PERSONS AND DAMAGE TO THE EQUIPMENT CAN OCCUR IF EQUIPMENT OR PARTS FALL.

CAUTION BE CAREFUL WHEN YOU REMOVE THE LEADING EDGE SECTIONS. IF YOU RUB THE SKIN OR STRUCTURE, DAMAGE TO THE PAINT CAN OCCUR.

(3) These access panels are required to be removed in this procedure (follow the steps in the procedure to remove the applicable access panels):

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

SUBTASK 55-33-11-030-001

(4) Disconnect the upper end of the feedline tube [9], as follows:

(a) Remove the removable leading edge panel, 322C [4].

(b) Remove the screw [12] and washer [13].

SUBTASK 55-33-11-020-002

(5) Remove the sleeve [10], as follows:

(a) Remove the fixed leading edge panel, 322AL [2].

(b) Remove the hose clamps [8] from the feedline tube assembly.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Slide the sleeve [10] back.

SUBTASK 55-33-11-010-002

(6) Disconnect the lower end of the feedline tube [9], as follows:

(a) Remove the fixed leading edge panel, 322A [3].

(b) Remove the coupler tray assembly cover [11].

(c) Remove the screw [14], washer [15], and nut [16].

(d) Remove the feedline tube [9].

SUBTASK 55-33-11-010-003

(7) Remove the fasteners from the removable leading edge panel, 322AT [5], removable leading edge panel, 322BT [6], and removable leading edge panel, 322CT [7].

SUBTASK 55-33-11-010-004

(8) Remove the fasteners from vertical stabilizer tip forward fairing (TASK 55-33-21-000-801).

SUBTASK 55-33-11-010-005

(9) Move the removable leading edge panel, 322AT [5], removable leading edge panel, 322BT [6], and removable leading edge panel, 322CT [7] slightly up and remove.

SUBTASK 55-33-11-210-001


(10) Examine the leading edge for aerodynamic smoothness (SRM SUBJECT 51-10-01).

SUBTASK 55-33-11-210-002

(11) Install the protective cover on the leading edge area.

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

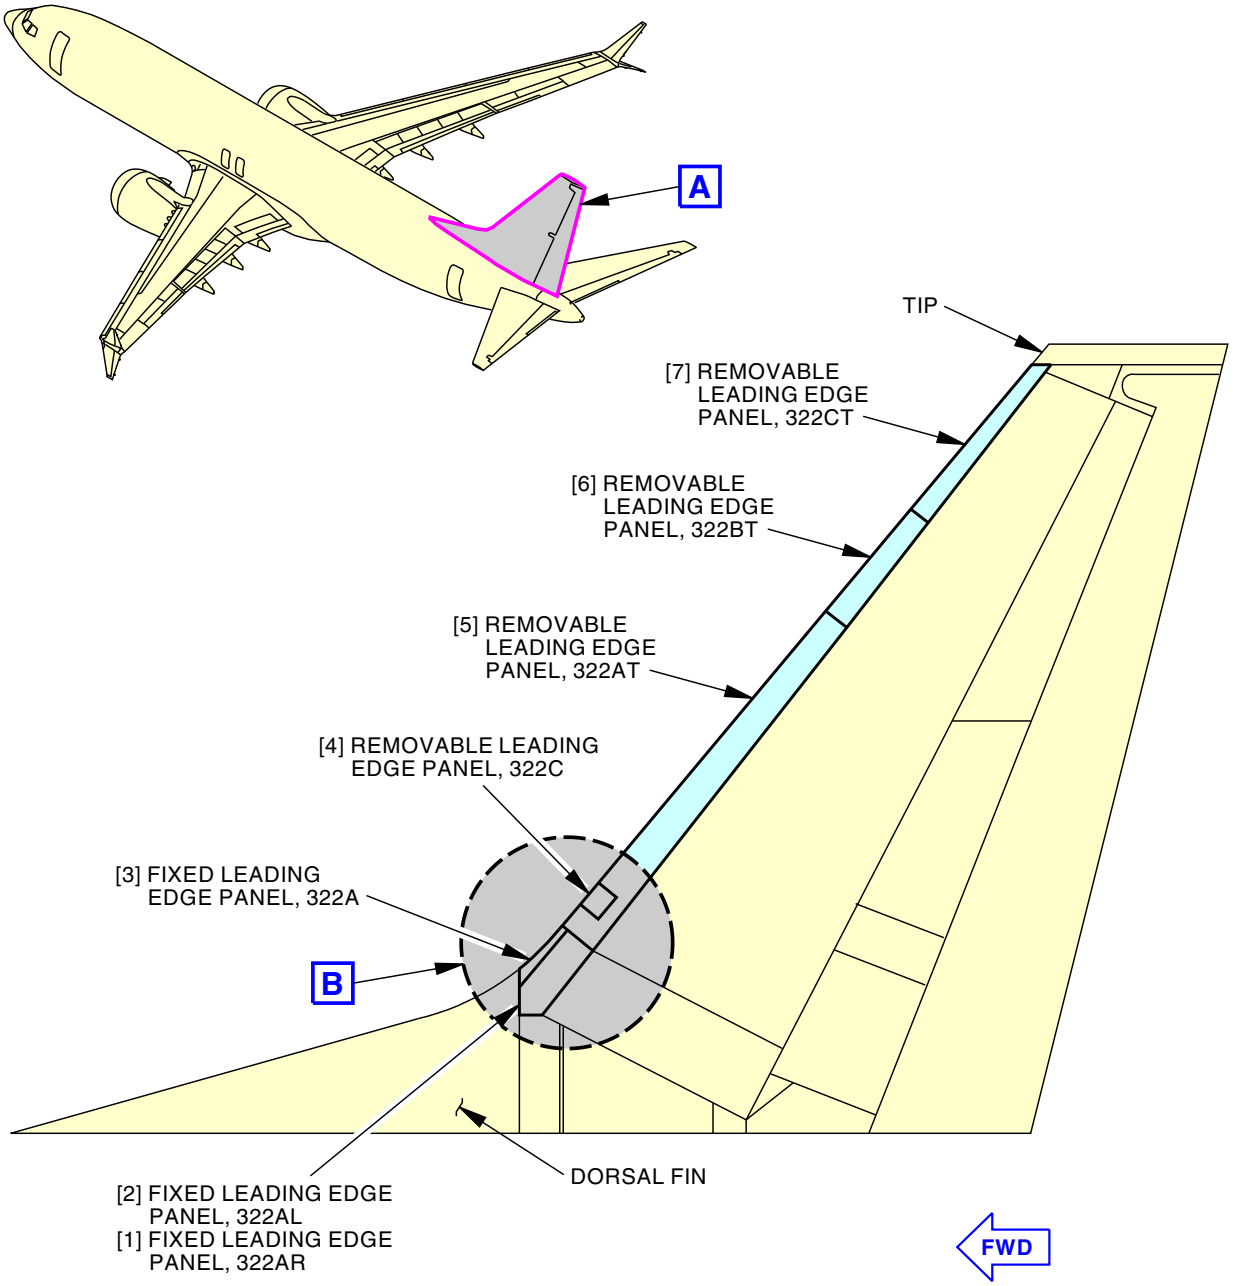

2416409 S00061540584_V1

Vertical Stabilizer (Fin) Leading Edge Panels Installation
Figure 401/55-33-11-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

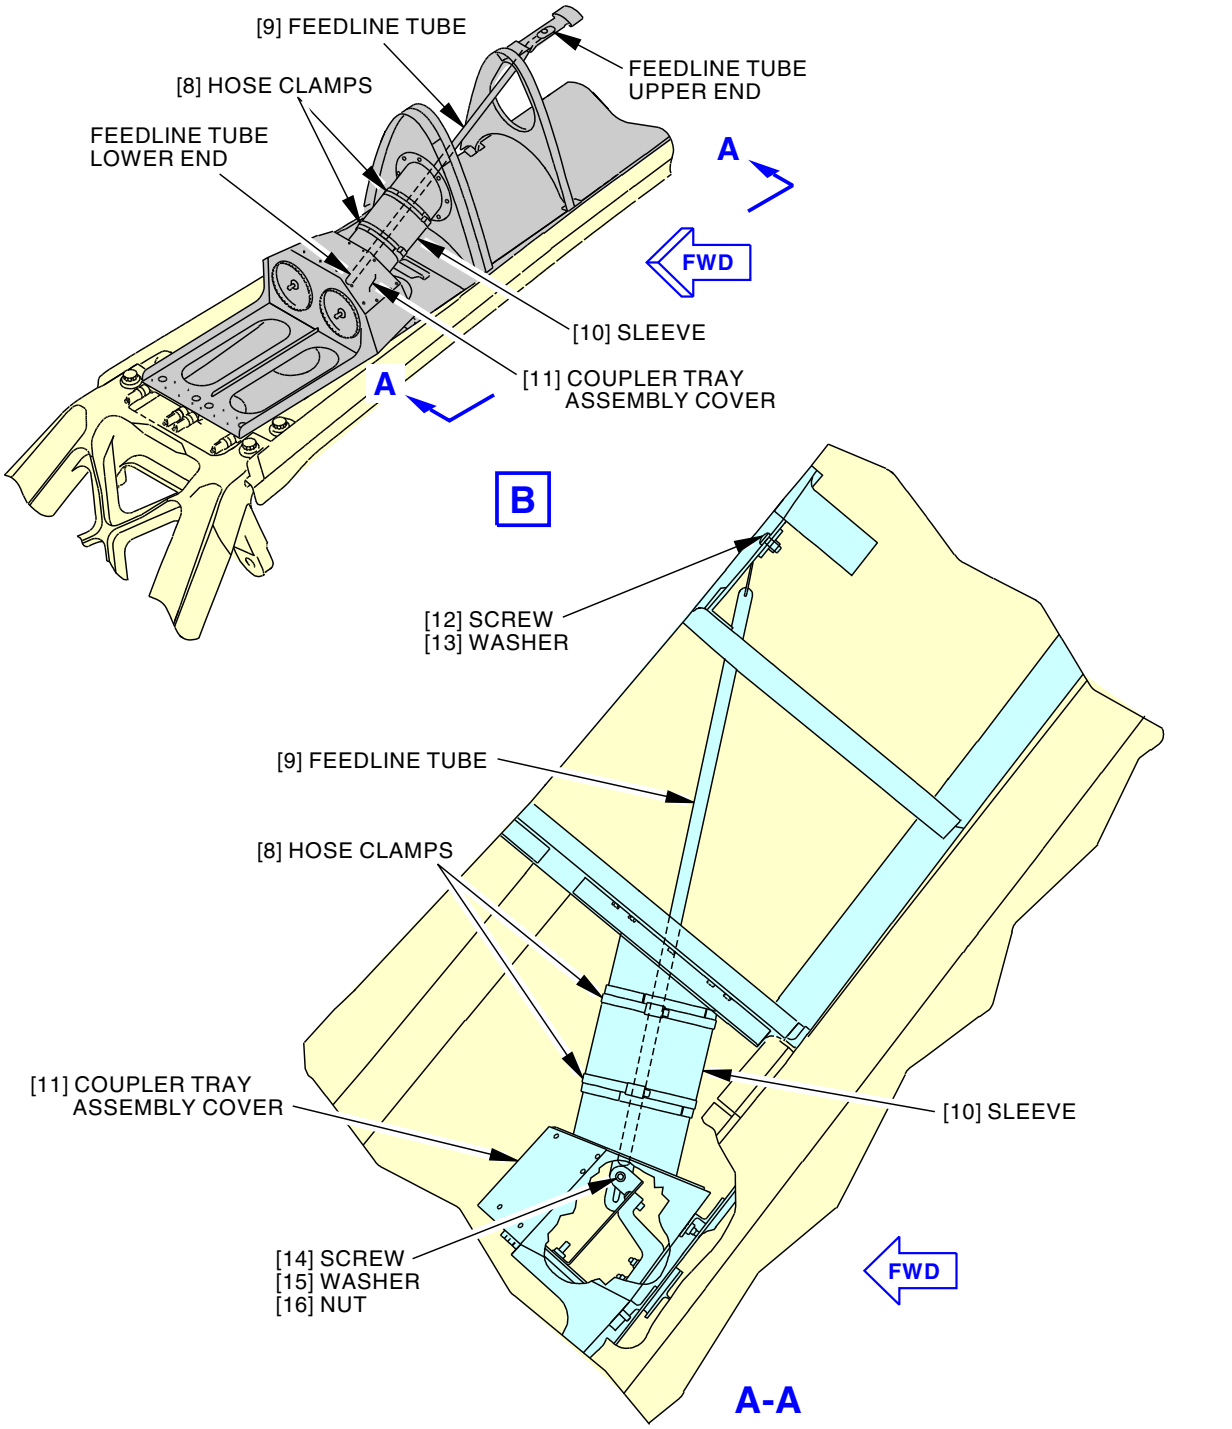

2416410 S00061540585_V2

Vertical Stabilizer (Fin) Leading Edge Panels Installation
Figure 401/55-33-11-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-33-11-400-801

3. Vertical Stabilizer (Fin) Leading Edge Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the vertical stabilizer (fin) leading edge.

B. References

Reference	Title
20-10-37 P/B 601	ELECTRICAL BONDING - INSPECTION/CHECK
20-50-11 P/B 201	STANDARD TORQUE VALUES - MAINTENANCE PRACTICES
23-11-00-730-801	HF Communication System - System Test (P/B 501)
51-21-41-370-801	Bonderite M-CR 1001 Application Process (P/B 701)
55-33-21-400-801	Vertical Stabilizer (Fin) Tip Installation (P/B 401)
SWPM 20-20-00	ELECTRICAL BONDING PROCESSES

C. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-614	Bonding Meters - Non-Intrinsically Safe (For use in outside Class I, Divisions I & II non-hazardous locations. For hazardous locations, use COM-1550). Part #: 247000 Supplier: 00426 Part #: 620LK Supplier: 1CRL2 Part #: BLR-0003-XX Supplier: KC432 Part #: BT51 Supplier: 00426 Part #: M1 Supplier: 3AD17 Part #: M1B Supplier: 3AD17 Part #: T477W (C15292) Supplier: 06659 Opt Part #: 247001 Supplier: 00426
SPL-1558	Adapter - Access Panel, Leverage Part #: 3008-550 Supplier: 55856 Part #: B20004-42 Supplier: 81205 Opt Part #: B20004-21 Supplier: 81205

D. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A02315	Sealant - Low Density, Synthetic Rubber. 2 Part	BMS5-142 Type II
A50231	Sealant - Pressure And Environmental - Chromate Type	BMS5-95 Class B
B00130	Alcohol - Isopropyl	TT-I-735
C00064	Coating - Aluminum Chemical Conversion	BAC5719 Type II Class A (MIL-DTL-5541 Class 1A)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G50237	Compound - Corrosion Inhibiting, Non-drying - Cor-Ban 27L	BMS3-38
G50381	Abrasive - Aluminum Oxide Paper, 180 Grit	
G50961	Coating - Corrosion Inhibiting Epoxy Primer - (BAC 377 Yellow Color)	BMS10-11 Type I

E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
4	Removable leading edge panel, 322C	55-33-11-01-065	PTF ALL
5	Removable leading edge panel, 322AT	55-33-11-01-065	PTF ALL
6	Removable leading edge panel, 322BT	55-33-11-01-065	PTF ALL
7	Removable leading edge panel, 322CT	55-33-11-01-065	PTF ALL

F. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

G. Access Panels

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

H. Vertical Stabilizer (Fin) Leading Edge Installation

SUBTASK 55-33-11-010-006

(1) Remove the protective cover from the leading edge area.

SUBTASK 55-33-11-410-001

(2) Attach the lower end of the feedline tube [9].

(a) Install the screw [14], washer [15], and nut [16].

(b) Tighten the screw [14] to 25 in-lb (2.8 N·m).

(c) Install the coupler tray assembly cover [11].

SUBTASK 55-33-11-410-002

(3) Install the sleeve [10] to the feedline tube assembly.

(a) Attach the hose clamps [8].

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(b) Tighten the hose clamps [8] to 16 in-lb (1.8 N·m) - 18 in-lb (2.0 N·m).

SUBTASK 55-33-11-420-001

WARNING KEEP PERSONS AWAY FROM THE AREA BELOW THE VERTICAL STABILIZER. INJURY TO PERSONS AND DAMAGE TO THE EQUIPMENT CAN OCCUR IF EQUIPMENT OR PARTS FALL.

CAUTION BE CAREFUL WHEN YOU INSTALL THE LEADING EDGE. YOU CAN EASILY CAUSE DAMAGE TO THE LEADING EDGE FINISH.

(4) Put the applicable leading edge panel in the correct position on the stabilizer.

CAUTION ALIGN THE LEADING EDGE ASSEMBLY ALONG THE FULL LENGTH OF THE EDGE BEFORE YOU INSTALL THE FASTENERS. IF YOU PUSH THE ASSEMBLY INTO ITS POSITION AND INSTALL THE FASTENERS, DAMAGE CAN OCCUR TO THE RIB CHORDS.

(a) Make sure that the leading edge assembly aligns the full length before you install the fasteners.

Install these access panels:

Number	Name/Location
322A	Vertical Fin, Fixed Leading Edge
322AL	Vertical Fin, Fixed Leading Edge
322AR	Vertical Fin, Fixed Leading Edge
322AT	Vertical Fin, Removable Leading Edge
322BT	Vertical Fin, Removable Leading Edge
322C	Vertical Fin, Removable Leading Edge
322CT	Vertical Fin, Removable Leading Edge

SUBTASK 55-33-11-390-001

(5) Apply an aerodynamic smoother sealant, A02315, for each applicable panel (SRM SUBJECT 51-10-01).

SUBTASK 55-33-11-420-002

(6) Put the applicable vertical stabilizer tip forward fairing in the correct position on the stabilizer (TASK 55-33-21-400-801).

SUBTASK 55-33-11-420-003

(7) Install the fasteners on the vertical fin leading edge and vertical tip forward fairing:

(a) Make sure that the fasteners have the correct grip length and do not have damaged threads or recesses.

NOTE: If fasteners need to be replaced, it is recommended that K-coated titanium bolts with cadmium plated Cres nut-plates be installed.

(b) Remove unwanted paint on the fastener recesses.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

WARNING DO NOT LUBRICATE FASTENERS OTHER THAN THE ACCESS PANELS. IF YOU LUBRICATE OTHER FASTENERS, IT CAN CAUSE DEFECTIVE EQUIPMENT AND INJURIES.

(c) Apply corrosion preventive Cor-Ban 27L Compound, G50237, to the hole and the countersink.

CAUTION MAKE SURE THAT THE DRIVER BIT ALIGNS WITH THE INSTALLED FASTENERS. THIS WILL PREVENT DAMAGE TO THE FASTENER RECESSES AND THREADS.

(d) Immediately install the fasteners with a leverage access panel adapter, SPL-1558, or an installation Anti Cam-out Ribbed (ACR) driver bit.

NOTE: Use decreased lubricated fastener torques (PAGEBLOCK 20-50-11/201).

NOTE: A combination removal/installation ACR bit is not recommended. The bit must have a hardness of 56-58 RC.

SUBTASK 55-33-11-400-001

(8) Install the leading edge that has the High Frequency (HF) antenna:

(a) Clean the mating surfaces between the attach plates and the antenna feedlines with 180 grit abrasive paper, G50381.

(b) Clean the surface with a clean cotton wiper, G00034, moist with alcohol, B00130.

1) Continue to clean until a cotton wiper, G00034, shows clean.

(c) Apply coating, C00064, to the cleaned surfaces (TASK 51-21-41-370-801).

(d) Put the part of the leading edge that contains the HF antenna in the correct position.

(e) Make sure that the attach plate is below the antenna feedline tube [9].

(f) Connect the antenna feedline tube [9] to the attach plates.

1) Install the screw [12] and washer [13].

(g) Measure the electrical bonding resistance between the feedline tube [9] and structure (PAGEBLOCK 20-10-37/601, SWPM 20-20-00).

1) Use a non-intrinsically safe bonding meter, COM-614.

2) Make sure that the bonding resistance is 0.001 ohms (1 milliohm) or less.

(h) If the resistance between the antenna feedline tube [9] and structure is more than 0.001 ohm (1 milliohm), clean the antenna feedline tube [9] again.

(i) Apply coating, G50961, to the mating surfaces of the installed parts.

(j) Tighten the screw [12] to 80 in-lb (9.0 N·m).

(k) Apply sealant, A50231, to make a fillet seal around the screw [12], washer [13] and the nutplate on the feedline tube [9].

SUBTASK 55-33-11-220-001

(9) Do a check of the leading edge panel as follows:

(a) Measure the clearance at the edges of the panels:

ECCN 9E991 BOEING PROPRIETARY - See title page for details

1) Make sure that the clearance for the fixed leading edge panel, 322AR [1], fixed leading edge panel, 322AL [2], fixed leading edge panel, 322A [3], removable leading edge panel, 322AT [5], removable leading edge panel, 322BT [6], and removable leading edge panel, 322CT [7] is 0.08 +0.06 / -0.04 in. (2.03 +1.53 / -1.02 mm).

2) Make sure that the clearance for the removable leading edge panel, 322C [4] is 0.08 +0.06 / -0.04 in. (2.03 +1.53 / -1.02 mm) on the top edge and 0.14 +0.06 / -0.04 in. (3.56 +1.53 / -1.02 mm) on the bottom edge.

(b) Make sure that the misfair is not more than 0.010 in. (0.254 mm).

(c) Make sure that the bolts are aligned within the tolerance of 0.002 in. (0.051 mm) below the surface to 0.004 in. (0.102 mm) above the surface.

SUBTASK 55-33-11-410-003

(10) Apply aerodynamic sealant, A00247, to the panel joints.

(a) Make sure that the cured sealant, A00247, is aligned within the tolerance of 0.000 in. (0.000 mm) at the surface to 0.010 in. (0.254 mm) below the surface.

(b) Do not cover the fasteners with aerodynamic sealant, A00247.

I. Installation Test

SUBTASK 55-33-11-730-001

(1) Do this task: HF Communication System - System Test, TASK 23-11-00-730-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER (FIN) TIP - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) A removal of the vertical stabilizer (fin) tip

(2) An installation of the vertical stabilizer (fin) tip.

TASK 55-33-21-000-801

2. Vertical Stabilizer (Fin) Tip Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the vertical stabilizer (fin) tip.

B. Location Zones

Zone	Area
326	Vertical Fin - Fin Tip

C. Vertical Stabilizer (Fin) Tip Removal

SUBTASK 55-33-21-040-001

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-1

Row	Col	Number	Name
A	1	C01374	RADIO NAVIGATION VOR/MKR BCN 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
A	12	C01375	RADIO NAVIGATION VOR 2

SUBTASK 55-33-21-020-001

WARNING MAKE SURE THAT PERSONNEL STAY A MINIMUM OF 10 FT (3 M) AWAY FROM THE VERTICAL STABILIZER WHEN THE HF SYSTEM TRANSMITS. RF ENERGY FROM THE HF ANTENNA CAN CAUSE INJURIES TO PERSONNEL.

(2) Remove the fairings on the (fin) tip.

(a) Remove the fasteners from the forward fairing [1].

(b) Remove the forward fairing [1].

(c) Disconnect the wires from the VOR antenna.

(d) Remove the fasteners from the middle fairing [2].


(e) Remove the middle fairing [2].

(f) Remove the fasteners from the aft fairing [4].

(g) Remove the aft fairing [4].

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

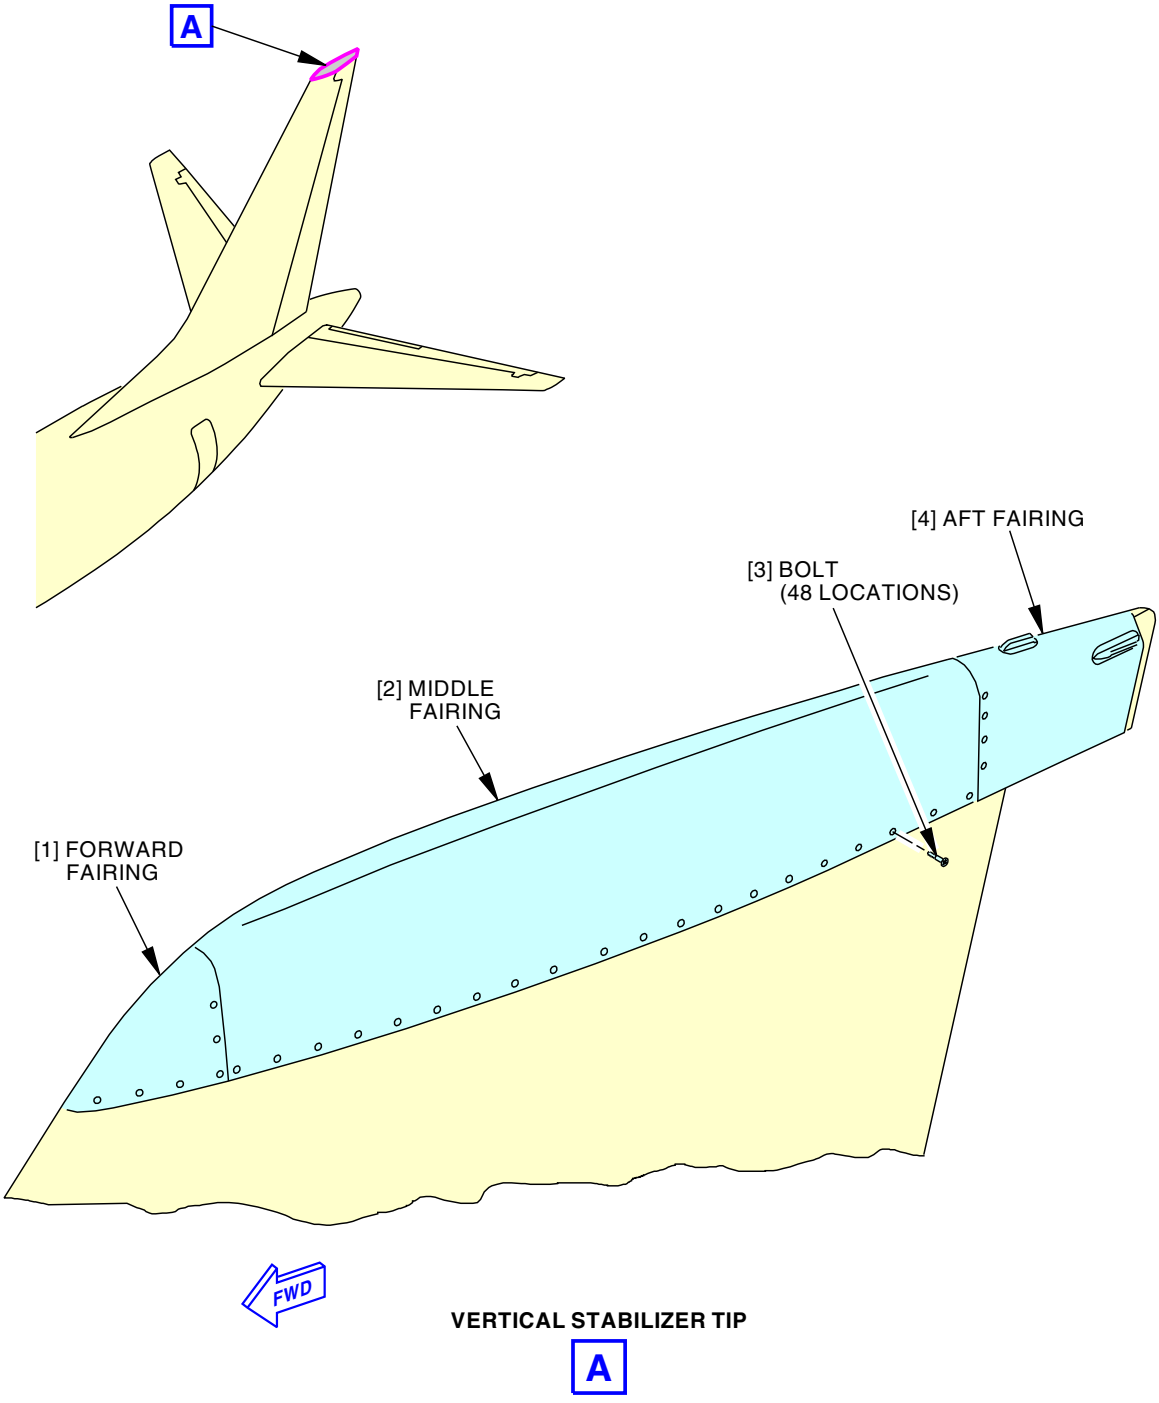

2416411 S00061540590_V1

Vertical Stabilizer Tip Installation
Figure 401/55-33-21-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-33-21-400-801

3. Vertical Stabilizer (Fin) Tip Installation

(Figure 401)

A. General

(1) This task gives the instructions to install the vertical stabilizer (fin) tip.

B. References

Reference	Title
34-31-00-710-801	Instrument Landing System - Operational Test (P/B 501)
34-51-00-710-801	VOR System - Operational Test (P/B 501)

C. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95
A50359	Sealant - Low Density, Non-Chromate Type	BMS5-142 Type II Class B

D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Forward fairing	34-51-02-01-015	PTF ALL
2	Middle fairing	34-51-02-01-015	PTF ALL
4	Aft fairing	34-51-02-01-020	PTF ALL

E. Location Zones

Zone	Area
326	Vertical Fin - Fin Tip

F. Vertical Stabilizer (Fin) Tip Installation

SUBTASK 55-33-21-420-001

WARNING MAKE SURE THAT PERSONNEL STAY A MINIMUM OF 10 FT (3 M) AWAY FROM THE VERTICAL STABILIZER WHEN THE HF SYSTEM TRANSMITS. RF ENERGY FROM THE HF ANTENNA CAN CAUSE INJURIES TO PERSONNEL.

(1) Install the fairings on the (fin) tip.

(a) Put the aft fairing [4] in its position on the fin.

(b) Install the fasteners in the aft fairing [4].

(c) Put the middle fairing [2] in its position.

(d) Install the fasteners on the middle fairing [2].

(e) Connect the VOR antenna wires.

(f) Put the forward fairing [1] in its position.

(g) Install the fasteners on the forward fairing [1].

NOTE: Make sure that all fasteners forward of the rear spar are installed between 0.010 in. (0.254 mm) below the surface and 0.002 in. (0.051 mm) above the surface. Do not shave the heads of the fasteners.

SUBTASK 55-33-21-210-001

(2) Make sure that the distance between the fairings and the fin is in tolerance.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(a) Measure the flushness between the fairings and the fin.

1) Make sure that the flushness of the leading edge is 0.0000 +0.0600 / -0.0300 in. (0.00 +1.52 / -0.76 mm).

2) Make sure that the flushness of the fairings is 0.0000 ±0.0300 in. (0.00 ±0.76 mm).

(b) Measure the clearance between the fairings and the fin.

1) Make sure that the clearance is 0.0000 +0.1500 / -0.0000 in. (0.00 +3.81 / -0.00 mm)

SUBTASK 55-33-21-390-002

(3) Apply sealant, A50359, or sealant, A00247, between the forward fairing [1] and middle fairing [2] to make an aerodynamic seal.

SUBTASK 55-33-21-390-003

(4) Apply sealant, A50359, or sealant, A00247, between the middle fairing [2] and aft fairing [4] to make an aerodynamic seal.

SUBTASK 55-33-21-390-001

(5) Apply sealant, A50359, to make an aerodynamic seal where the clearances are more than 0.02 in. (0.51 mm).

SUBTASK 55-33-21-860-001

(6) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-1

Row	Col	Number	Name
A	1	C01374	RADIO NAVIGATION VOR/MKR BCN 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
A	12	C01375	RADIO NAVIGATION VOR 2

SUBTASK 55-33-21-730-001

(7) Do this task: Instrument Landing System - Operational Test, TASK 34-31-00-710-801.

SUBTASK 55-33-21-730-002

(8) Do this task: VOR System - Operational Test, TASK 34-51-00-710-801.

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER (FIN) TRAILING EDGE PANELS - REMOVAL/INSTALLATION

1. General

A. This procedure has these tasks:

(1) Vertical stabilizer (fin) trailing edge panels removal

(2) Vertical stabilizer (fin) trailing edge panels installation.

TASK 55-33-31-000-801

2. Vertical Stabilizer (Fin) Trailing Edge Panels Removal

(Figure 401)

A. General

(1) This task gives the instructions to remove the stabilizer (fin) trailing edge panels.

B. Tools/Equipment

NOTE: When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-1558	Adapter - Access Panel, Leverage Part #: 3008-550 Supplier: 55856 Part #: B20004-42 Supplier: 81205 Opt Part #: B20004-21 Supplier: 81205

C. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge

D. Access Panels

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324AR	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324BR	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324DR	Vertical Fin, Trailing Edge Access
324JL	Vertical Fin, Access

E. Vertical Stabilizer (Fin) Trailing Edge Panels Removal

SUBTASK 55-33-31-010-001

WARNING PREVENT THE OPERATION OF THE RUDDER WHEN YOU DO WORK ON IT OR NEAR IT. THE RUDDER MOVES QUICKLY AND ITS FORCE IS VERY LARGE. IF THE RUDDER MOVES WHEN PERSONNEL ARE NEAR IT, IT CAN CAUSE INJURIES TO THEM.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(WARNING PRECEDES)

WARNING

KEEP PERSONNEL AWAY FROM THE AREA BELOW THE VERTICAL STABILIZER. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR IF EQUIPMENT OR PARTS FALL.

(1) Remove the fasteners from the applicable vertical fin trailing edge access panels.

NOTE: A leverage access panel adapter, SPL-1558 can help remove the fasteners.


SUBTASK 55-33-31-010-002

(2) Remove the applicable trailing edge panels:

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324AR	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324BR	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324DR	Vertical Fin, Trailing Edge Access
324JL	Vertical Fin, Access

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

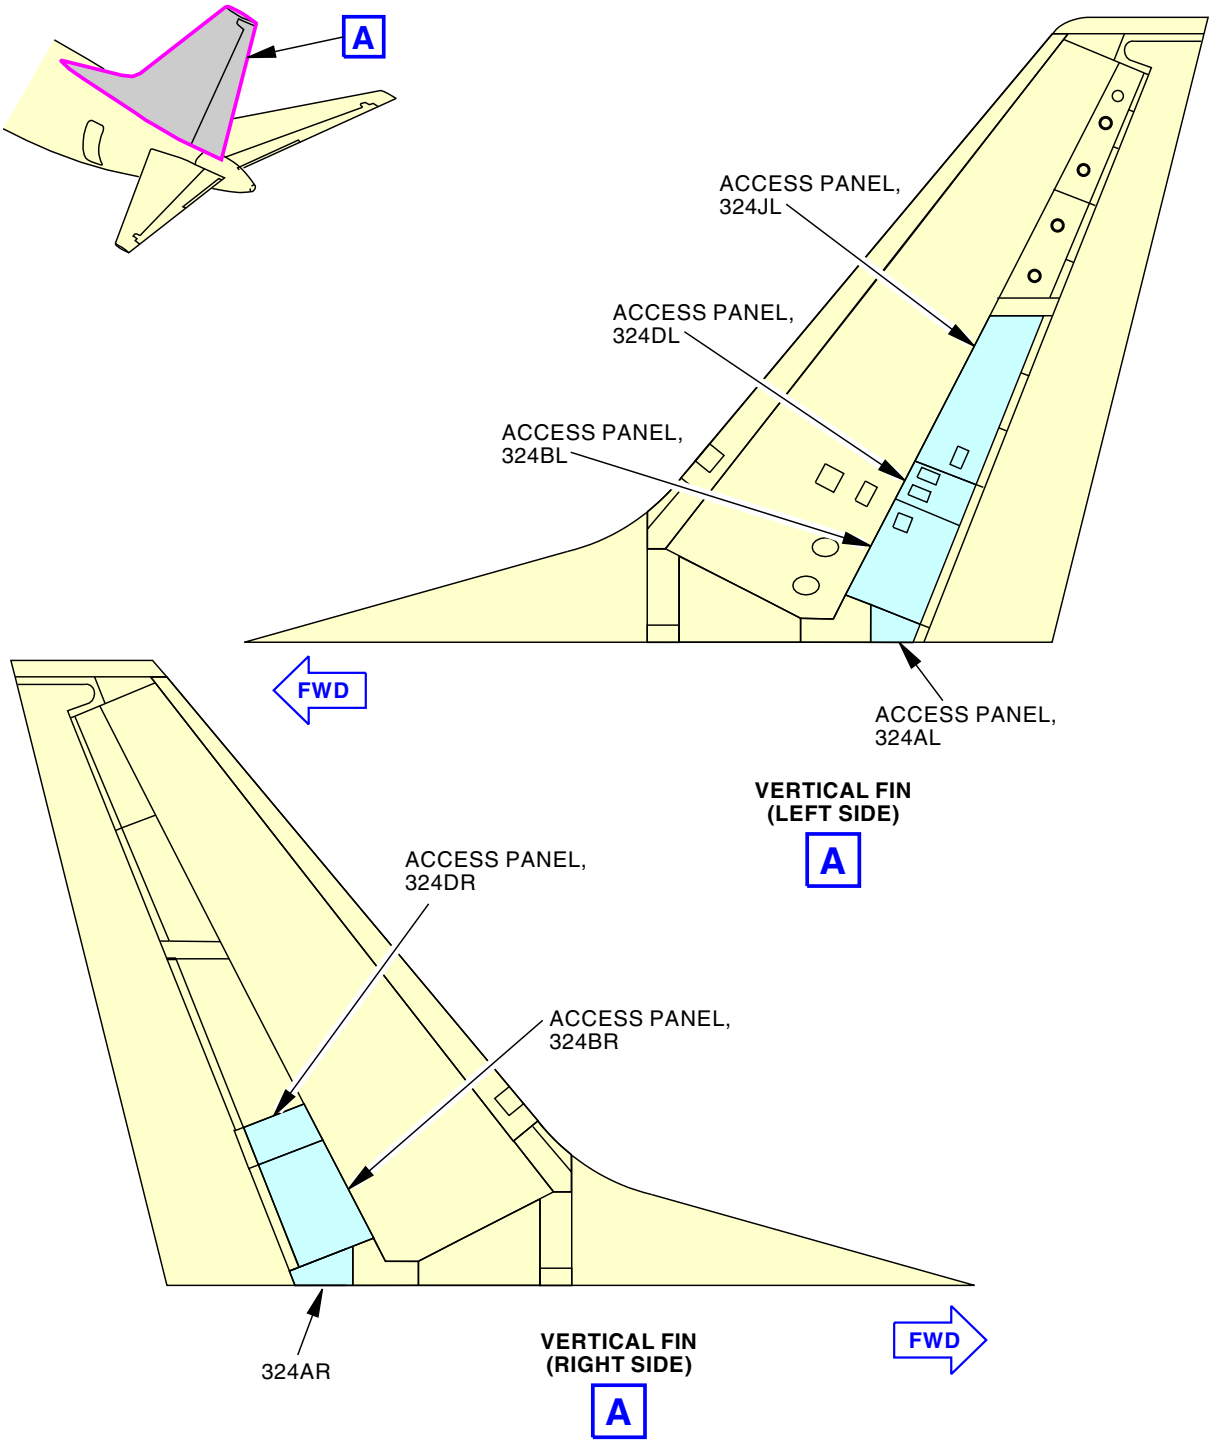

Vertical Stabilizer (Fin) Trailing Edge Panels Installation
Figure 401/55-33-31-990-801

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-33-31-400-801

3. Vertical Stabilizer (Fin) Trailing Edge Panels Installation

A. General

(1) This task gives the instructions to install the stabilizer (fin) trailing edge panels.

B. Consumable Materials

Reference	Description	Specification
A00247	Sealant - Pressure And Environmental - Chromate Type	BMS5-95

C. Location Zones

Zone	Area
324	Vertical Fin - Rear Spar To Trailing Edge

D. Access Panels

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324AR	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324BR	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324DR	Vertical Fin, Trailing Edge Access
324JL	Vertical Fin, Access

E. Vertical Stabilizer (Fin) Trailing Edge Panels Installation

SUBTASK 55-33-31-400-001

WARNING PREVENT THE OPERATION OF THE RUDDER WHEN YOU DO WORK ON IT OR NEAR IT. THE RUDDER MOVES QUICKLY AND ITS FORCE IS VERY LARGE. IF THE RUDDER MOVES WHEN PERSONNEL ARE NEAR IT, IT CAN CAUSE INJURIES TO THEM.

WARNING KEEP PERSONNEL AWAY FROM THE AREA BELOW THE VERTICAL STABILIZER. INJURIES TO PERSONNEL AND DAMAGE TO EQUIPMENT CAN OCCUR IF EQUIPMENT OR PARTS FALL.

(1) Install the applicable trailing edge panels:

Number	Name/Location
324AL	Vertical Fin, Aft Fin Access Door
324AR	Vertical Fin, Aft Fin Access Door
324BL	Vertical Fin, Trailing Edge Access
324BR	Vertical Fin, Trailing Edge Access
324DL	Trailing Edge Access
324DR	Vertical Fin, Trailing Edge Access
324JL	Vertical Fin, Access

SUBTASK 55-33-31-410-001

(2) Install the fasteners that attach the trailing edge panels.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-33-31-410-002

(3) Fill gaps 0.040 in. (0.102 cm) and larger with aerodynamic sealant, A00247 and smooth flush with outer contour.

NOTE: Largest gap must be less than 0.15 in. (3.81 mm).

——— END OF TASK ———

ECCN 9E991 BOEING PROPRIETARY - See title page for details

VERTICAL STABILIZER HF ANTENNA LEADING EDGE PANEL - REPAIRS

1. General

A. There are three tasks in this procedure:

(1) Inspection of the HF Antenna Fiberglass Panel Leading Edge Panel No. 4.

(2) Installation of the leading edge finish.

(3) Installation of the Polyurethane Protective Tape (PPT).

TASK 55-35-01-200-801

2. HF Antenna Fiberglass Panel Leading Edge Panel No. 4 - Inspection

(Figure 801)

A. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

B. Prepare for the Inspection

SUBTASK 55-35-01-860-003

WARNING REMOVE ELECTRICAL POWER FOR THE HF COMMUNICATION SYSTEM BEFORE YOU PERFORM VERTICAL-STABILIZER HF-ANTENNA LEADING-EDGE-PANEL REPAIRS. HF SIGNALS CAN CAUSE ELECTRICAL SHOCKS AND INJURIES TO PERSONS.

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

C. HF Antenna Fiberglass Panel Leading Edge Panel No. 4 Visual Inspection

SUBTASK 55-35-01-211-002

(1) Look for the conditions that follow.

NOTE: There must be no indication of exposed fiberglass.

(a) Damaged structure.

(b) Missing Caapcoat FP-200 erosion coating.

(c) Missing BMS 10-21 Type II or Type IV anti-static coating.

SUBTASK 55-35-01-211-003

(2) If there is no peeling of the erosion coating, do one of the steps that follow:

(a) No more steps are necessary.

(b) Install the Polyurethane Protective Tape (PPT) for added protection (TASK 55-35-01-400-802).

NOTE: Installing the PPT is not necessary but it can increase the durability and longevity of the HF antenna fiberglass panel leading edge panel installation.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-35-01-211-004

(3) If there is peeling of the erosion coating or anti-static coating but no damage to the fiberglass composite structure, do one of the steps that follow:

(a) Temporarily repair the area (TASK 55-35-01-400-802).

(b) Repair the original finish by re-applying the finish (TASK 55-35-01-400-801).

SUBTASK 55-35-01-211-006

(4) If you installed PPT as a temporary repair when the erosion coating is damaged, do this step:

(a) Do a visual inspection and tap test for damage each 500 flight cycles:

1) If any discrepancies are found, do a temporary or permanent repair.

2) If no discrepancies are found, do a permanent repair at the next major check.

D. Put the Airplane Back to Its Usual Condition

SUBTASK 55-35-01-860-004

(1) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2


Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

——— END OF TASK ———


ECCN 9E991 BOEING PROPRIETARY - See title page for details

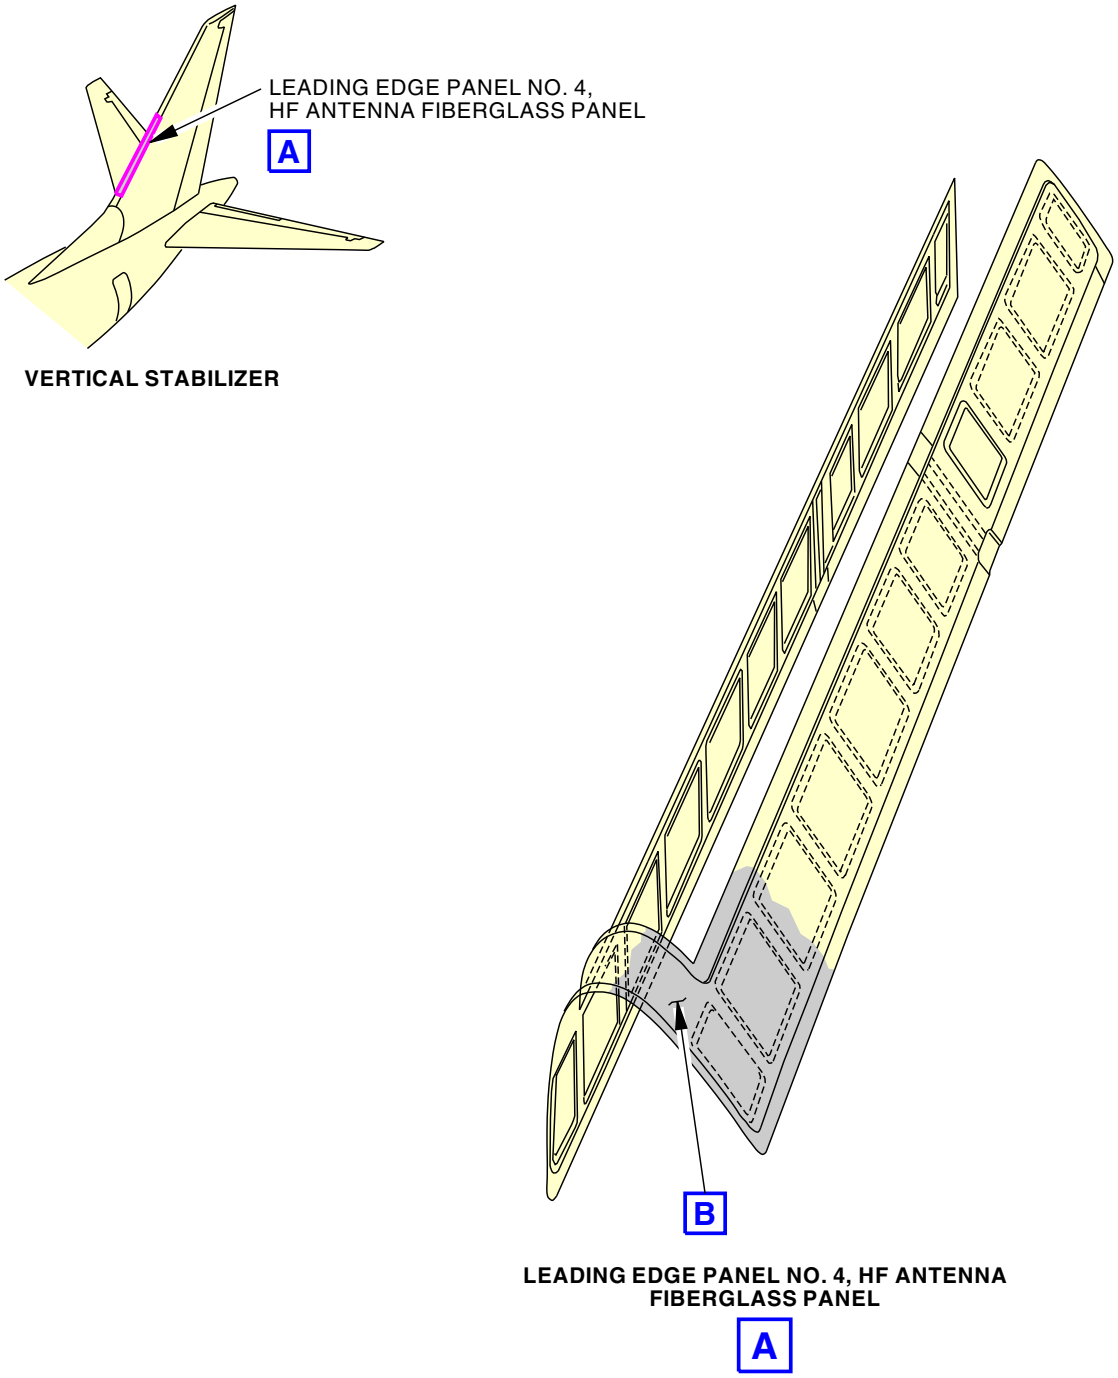

2416413 S00061540600_V1

HF Antenna Fiberglass Panel Leading Edge Panel No. 4
Figure 801/55-35-01-990-801 (Sheet 1 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

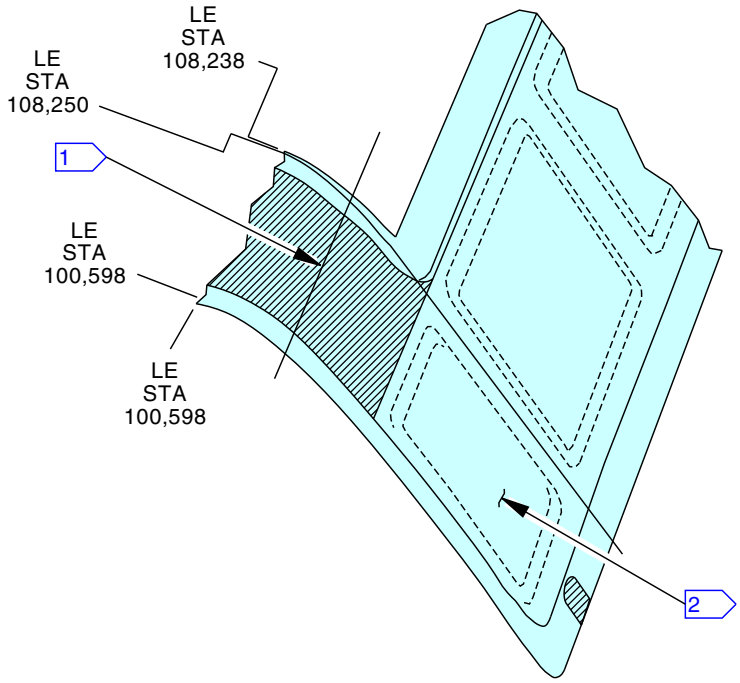

(LEFT SIDE IS SHOWN, RIGHT SIDE IS OPPOSITE)

B

1 APPLICATION SEQUENCE:
1. BMS 10-21 TYPE IV ANTI-STATIC COATING
2. BMS 10-103 TYPE I PRIMER
3. CAAPCOAT FP-200 RAIN EROSION COATING

2 APPLICATION SEQUENCE FOR REMAINDER OF FIBERGLASS PANEL:
1. BMS 10-21, TYPE IV ANTI-STATIC COATING
2. BMS 10-103, TYPE I PRIMER
3. BMS 10-60, TYPE II ENAMEL(SEE NOTE)
4. DECORATIVE PAINT-ONLY IF SPECIFIED ON LIVERY DRAWING (SEE NOTE)

NOTE:

WHEN REPAINTING, APPLY BMS 10-60, TYPE II ENAMEL AND EXTERIOR DECORATIVE PAINT TO COVER THE PRIMER. IT IS OPTIONAL TO OMIT THE BMS 10-60, TYPE II ENAMEL.

2416414 S00061540601_V2

HF Antenna Fiberglass Panel Leading Edge Panel No. 4
Figure 801/55-35-01-990-801 (Sheet 2 of 2)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

TASK 55-35-01-400-801

3. Leading Edge Finish - Installation

(Figure 801)

A. References

Reference	Title
51-21-11-150-801	Paint Stripping (P/B 701)
51-21-21-100-802	Cleaning and Preparation of Internal and External Plastic Surfaces (P/B 701)
51-21-71-370-803	Apply BMS 10-21 Type IV Conductive Coating To Specified External Surfaces (P/B 701)
51-21-99-300-801	Decorative Exterior Paint System Application (P/B 701)

B. Consumable Materials

Reference	Description	Specification
C00033	Coating - Protective Enamel, Flexibility Use	BMS10-60 Type II
C00766	Primer - Nonchromated Primer For Composites	BMS10-103 Type I
C50006	Coating - Gloss Polyurethane - Caapcoat FP-200	BAC5880 TYPE I CLASS 5
C50219	Coating - Anti-Static Coating	BMS10-21 Type IV
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	AMS3819 Class 1 Grade A or B Form 1 (Supersede BMS15-5 CL A)
G02428	Abrasive - Aluminum Oxide Paper, 150 grit	A-A-1048

C. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

D. Prepare for the Leading Edge Finish Installation

SUBTASK 55-35-01-860-005

WARNING REMOVE ELECTRICAL POWER FOR THE HF COMMUNICATION SYSTEM BEFORE YOU PERFORM VERTICAL-STABILIZER HF-ANTENNA LEADING-EDGE-PANEL REPAIRS. HF SIGNALS CAN CAUSE ELECTRICAL SHOCKS AND INJURIES TO PERSONS.

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

E. Prepare to Re-apply the Leading Edge Primer

SUBTASK 55-35-01-150-001

(1) Remove the remaining erosion coating, if necessary (TASK 51-21-11-150-801).

ECCN 9E991 BOEING PROPRIETARY - See title page for details

SUBTASK 55-35-01-160-001

(2) Prepare the surface for the finish (TASK 51-21-21-100-802).

SUBTASK 55-35-01-160-002

(3) Prepare the area for the primer.

(a) Clean the area.

(b) Abrade the side of the panel to be painted with 150 grit abrasive paper, G02428.

(c) Remove remaining material with a clean cotton wiper, G00034.

F. Re-apply the Leading Edge Primer

SUBTASK 55-35-01-300-001

(1) If the anti-static coating is worn, apply coating, C50219, to the specified external surfaces (TASK 51-21-71-370-803).

SUBTASK 55-35-01-300-002

(2) Apply primer, C00766.

(a) Spray the primer, C00766, in an equal coat to the tool side surface of the panel.

NOTE: The dry primer paint layer should be a continuous coat, free of runs, wrinkles and pinholes.

(b) Make sure that the dry paint layer thickness is between 0.3 mil (0.0076 mm) and 0.8 mil (0.0203 mm).

(c) Cure the panel for a minimum of 30 minutes at a minimum temperature of 65°F (18°C).

G. Prepare to Re-apply the Leading Edge Erosion Coating

SUBTASK 55-35-01-300-003

(1) Make sure that there is a coat of primer, C00766, on the surface before you apply the Caapcoat FP-200 coating, C50006.

SUBTASK 55-35-01-950-001

(2) Mask all areas adjacent to the area in which you will be working.

H. Re-apply the Leading Edge Erosion Coating

SUBTASK 55-35-01-800-001

(1) Prepare and mix the Caapcoat FP-200 coating, C50006.

NOTE: Use a thinner, if necessary, to get the Zahn viscosity requirement (Table 801).

SUBTASK 55-35-01-300-004

(2) Apply the Caapcoat FP-200 coating, C50006.

(a) Spray the Caapcoat FP-200 coating, C50006, in an even coat.

1) Make sure that the dry paint film thickness for the first coat is a maximum of 1.500 mils (0.038 mm).

2) Make sure that the dry paint film thickness for the second coat (and additional coats) is a maximum of 2.000 mils (0.051 mm).

3) Make sure that the total dry film thickness is less between 10.000 mils (0.254 mm) and 14.000 mils (0.356 mm).

(b) Between coats, make sure that there are no bubbles in the applied coating.

1) If there are bubbles, do one or both of the steps that follow.

a) Decrease the thickness of the coat.

b) Wait for a longer period of time between coat applications.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Cure the Caapcoat FP-200 coating, C50006 (Table 801).

Table 801/55-35-01-993-801

MATERIAL (MIN. RELATIVE HUMIDITY 30)	MIX RATION (PARTS BY VOLUME)	VISCOSITY, SECS ZAHN #2 *[2]	DRY FILM THICKNESS		CURE TIMES		
			PER COAT	TOTAL	TO RECOAT (Mins)	TO OVERCOAT (Hrs)	FINAL (Hrs)
FP-200 VEHICLE	64	22-28 AT 70°F (21°C) - 80°F (27°C)	MAXIMUM: 1ST: 1.500 mils (0.038 mm) 2ND AND ON: 2.000 mils (0.051 mm)	10 mils (0 mm) - 14 mils (0 mm)	MIN: 20 MAX: 120	2 - 8	TO HANDLE: 36 *[1]
CURING AGENT	3						
ACCELERATOR	4						

*[1] Cure can be made faster by 24 hours at room temperature followed by oven cure at 150°F (66°C) for 3 hours.

*[2] Recommended viscosity.

SUBTASK 55-35-01-370-001

(3) Re-apply the enamel coating, C00033, or decorative external paint as needed on the rest of the panel (TASK 51-21-99-300-801) (View B, Figure 801).

(a) Mask all areas adjacent to the area in which you will be working.

(b) Apply the enamel coating, C00033, or decorative exterior paint to cover the primer.

I. Put the Airplane Back to Its Usual Condition

SUBTASK 55-35-01-860-006

(1) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

END OF TASK

TASK 55-35-01-400-802

4. Polyurethane Protective Tape (PPT) - Installation

(Figure 802)

A. Tools/Equipment

Reference	Description
STD-821	Squeegee - Plastic

B. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
C50006	Coating - Gloss Polyurethane - Caapcoat FP-200	BAC5880 TYPE I CLASS 5

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(Continued)

Reference	Description	Specification
C50020	Kit - Edge Seal With Activator (Desothane) - CA8000/B900B with CA8000B	BAC5312
C50328	Sealer - Two-Part, Polyurethane, Edge Sealer, Erosion Resistant (ES2000)	
C50476	Coating - Corrosion Resistant Finish For Integral Fuel Tanks	BMS10-20 Type II Class A Grade A (454-4-1/CA-109 Only)
G50078	Abrasive - Aluminum Oxide Paper, 320 grit or finer	
G50632	Towel - Paper, Wypall X80 (Packaged in Brag-Box, 1\4 Fold, Pop-Up Box and Jumbo Rolls)	
G51114	Tape - 3M 8673 Polyurethane Protective Tape	

C. Location Zones

Zone	Area
322	Vertical Fin - Removable Fin Leading Edge

D. Prepare for the Installation

SUBTASK 55-35-01-860-001

WARNING REMOVE ELECTRICAL POWER FOR THE HF COMMUNICATION SYSTEM BEFORE YOU PERFORM VERTICAL-STABILIZER HF-ANTENNA LEADING-EDGE-PANEL REPAIRS. HF SIGNALS CAN CAUSE ELECTRICAL SHOCKS AND INJURIES TO PERSONS.

(1) Open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

SUBTASK 55-35-01-010-001

(2) If you are installing the 3M 8673 tape, G51114, or equivalent as a temporary repair, do the steps that follow:

(a) If the Caapcoat FP-200 coating, C50006, is damaged, remove as much of the Caapcoat FP-200 coating, C50006, as possible without damaging the fiberglass window of the HF antenna.

1) The preferred method for removal is to peel off the Caapcoat FP-200 coating, C50006.

2) If you cannot peel off the Caapcoat FP-200 coating, C50006, trim the loose material.

a) Make sure that you do not damage the fiberglass window.

(b) Carefully sand the surface of the HF antenna with 320 grit or finer abrasive paper, G50078, until it is smooth.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

(c) Clean the surface of the HF antenna with a Wypall X80 Paper Towel, G50632, or equivalent saturated with alcohol, B00130.

E. PPT Installation

SUBTASK 55-35-01-800-002

(1) Cut the 3M 8673 tape, G51114, or equivalent to a dimension that overlaps the surface adjacent to the not damaged surface.

(a) The overlap should be 2 in. (51 mm).

(b) If you are applying the 3M 8673 tape, G51114, or equivalent over the entire fiberglass HF leading edge, the overlap can extend to a maximum of 2 in. (51 mm) onto the metal leading edge.

SUBTASK 55-35-01-400-001

(2) Remove the plastic lining from the 3M 8673 tape, G51114, or equivalent.

SUBTASK 55-35-01-400-002

(3) Install the 3M 8673 tape, G51114, or equivalent to the area to cover.

(a) Install the 3M 8673 tape, G51114, or equivalent to dry.

(b) Put one end of the 3M 8673 tape, G51114, or equivalent onto the surface. Use a plastic squeegee, STD-821, to make sure that here is no air between the tape and the HF leading edge while you apply the tape.

SUBTASK 55-35-01-400-003

(4) Apply sealer, C50328 (preferred), or coating, C50476 (alternative), or CA8000/B900B with CA8000B kit, C50020 (alternative), to edge seal the edges of the 3M 8673 tape, G51114, or equivalent.

NOTE: This is to increase durability and longevity of the 3M 8673 tape, G51114, or equivalent. It is optional to edge seal the tape.

(a) Refer to manufacturers instructions for cure times and temperatures for the edge seal coatings.

SUBTASK 55-35-01-230-001

(5) Make sure that the edge seal cures.

(a) Rub your fingernail perpendicular to the edge seal.

SUBTASK 55-35-01-800-003

(6) If you do not edge seal the 3M 8673 tape, G51114, or equivalent, wait 2 hours at 70°F (21°C) for the patch to cure.

F. Put the Airplane Back to Its Usual Condition

SUBTASK 55-35-01-860-007

(1) Remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2


Row	Col	Number	Name
E	11	C00839	COMMUNICATIONS HF 1

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	2	C00857	COMMUNICATIONS HF 2

END OF TASK

ECCN 9E991 BOEING PROPRIETARY - See title page for details

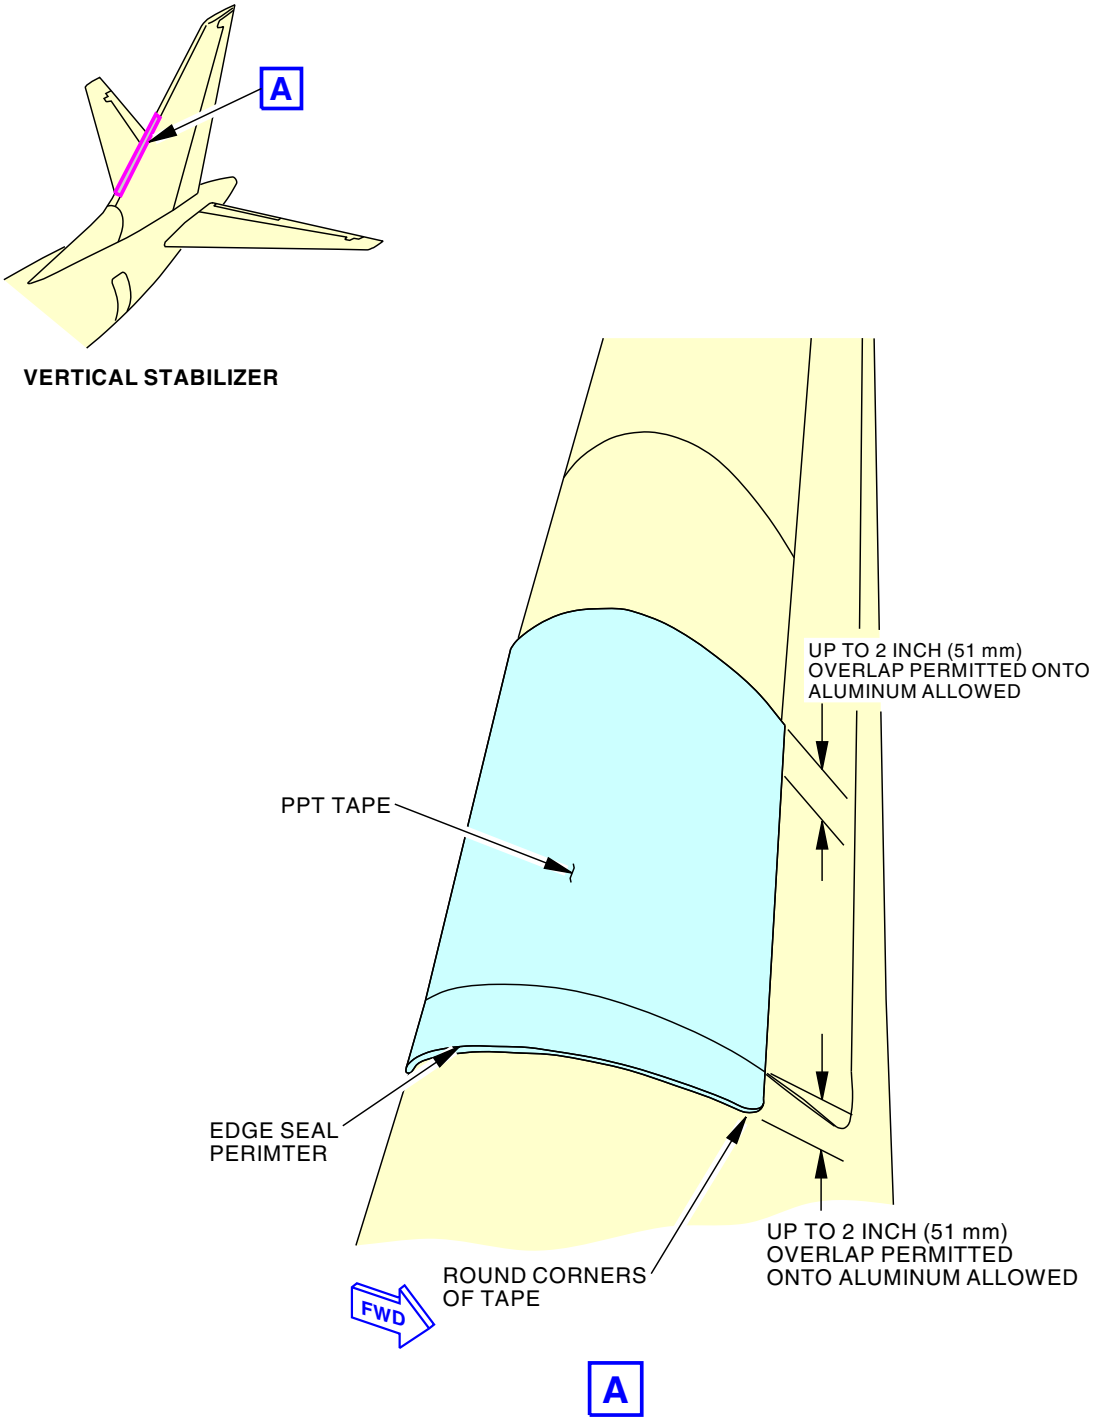

Polyurethane Protective Tape (PPT) - Installation
Figure 802/55-35-01-990-802

ECCN 9E991 BOEING PROPRIETARY - See title page for details