Landing Gear – General Data

1. General

   Replenishing the landing gear is confined to inflating the tires and servicing the nose gear shock strut. The main gear shock strut, because of its design, does not require servicing.

2. Servicing Nose Gear Shock Strut

   CAUTION **DO NOT FILL SHOCK STRUT WITH OIL UNDER PRESSURE AS THIS CAN RESULT IN ITS FAILURE TO TELESCOPE. OIL FILLING BY GRAVITY IS THE ONLY ACCEPTED PROCEDURE.**


   The nose gear shock strut must be serviced in accordance with instructions on the nose gear identification plate. (Refer to Figure 1).

   Note Dry compressed nitrogen is preferred to compressed air for charging the shock strut.

3. Tires

   Inflation pressures for normal operating conditions, using standard size tires, are 32 psi for nose wheel tire and 38 psi for main wheel tires. During operation at airports where the temperature is below –20°F (–29°C), inflation pressure for main wheel tires must be reduced to 34 psi to meet landing energy absorption requirements.

   Inflation pressures for soft field operating conditions, using large size tires (Mod S.O.O. 6048), are 24 psi for nose wheel tire and 35 psi for main wheel tires (Mod 6/1574).

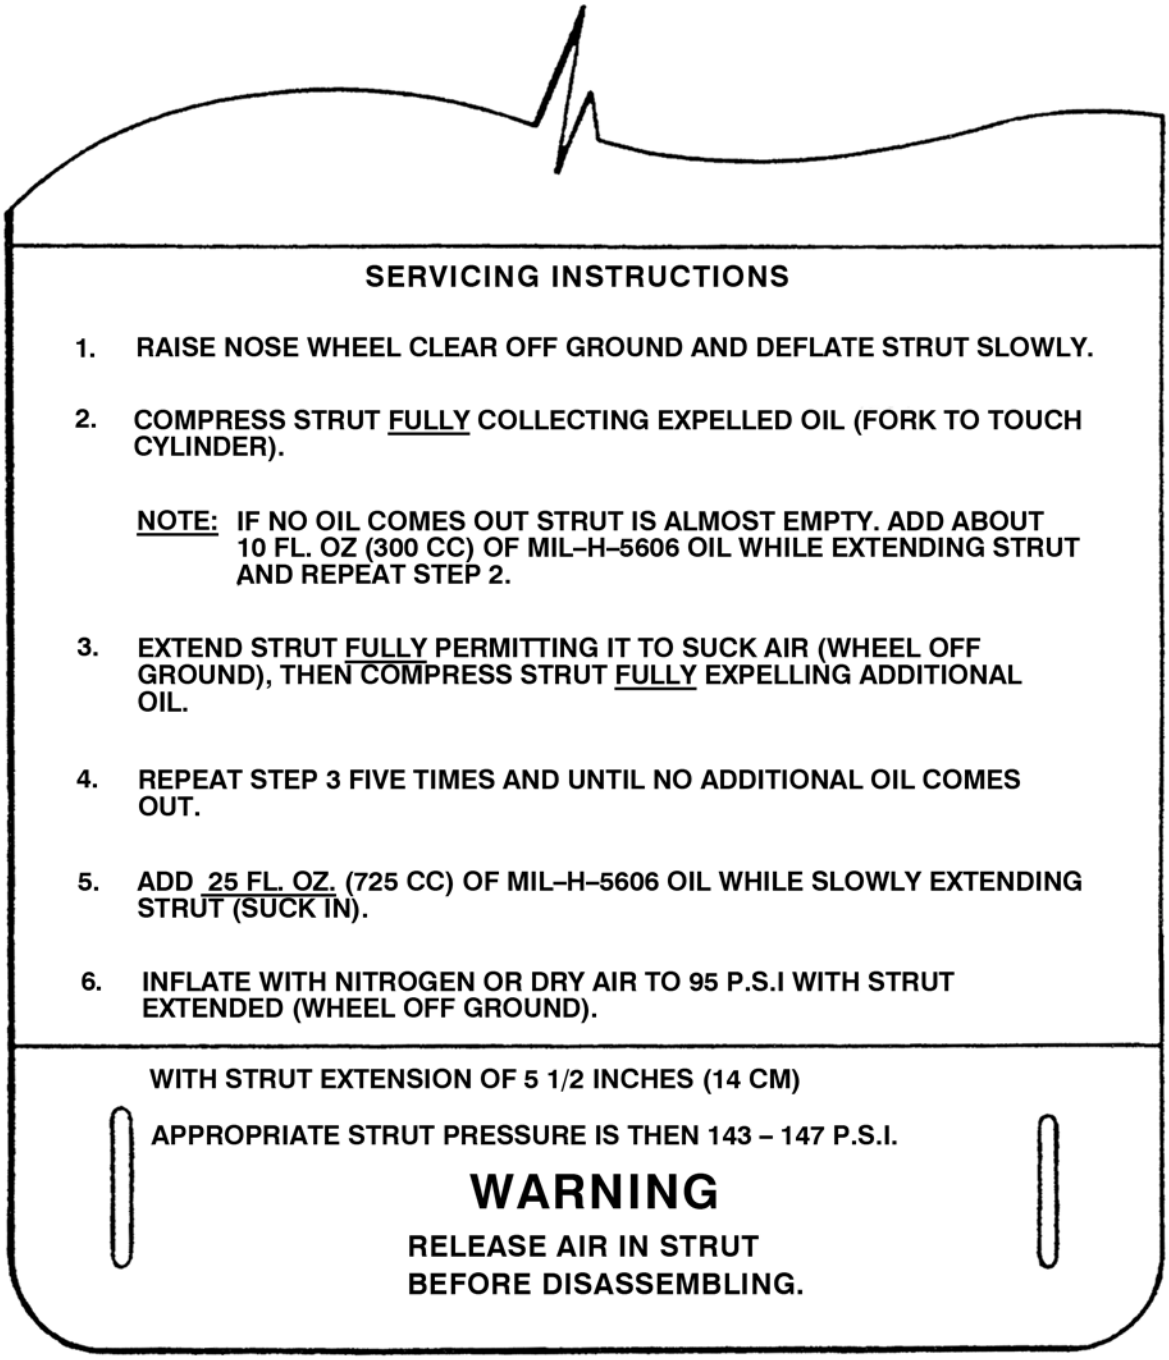

Nose Gear Identification Plate (71–101–11) – Servicing Instruction
Figure 1